
## ETSITS 125 402 V3.5.0 (2001-03)

Technical Specification

Universal Mobile Telecommunications System (UMTS); Synchronization in UTRAN Stage 2 (3GPP TS 25.402 version 3.5.0 Release 1999)

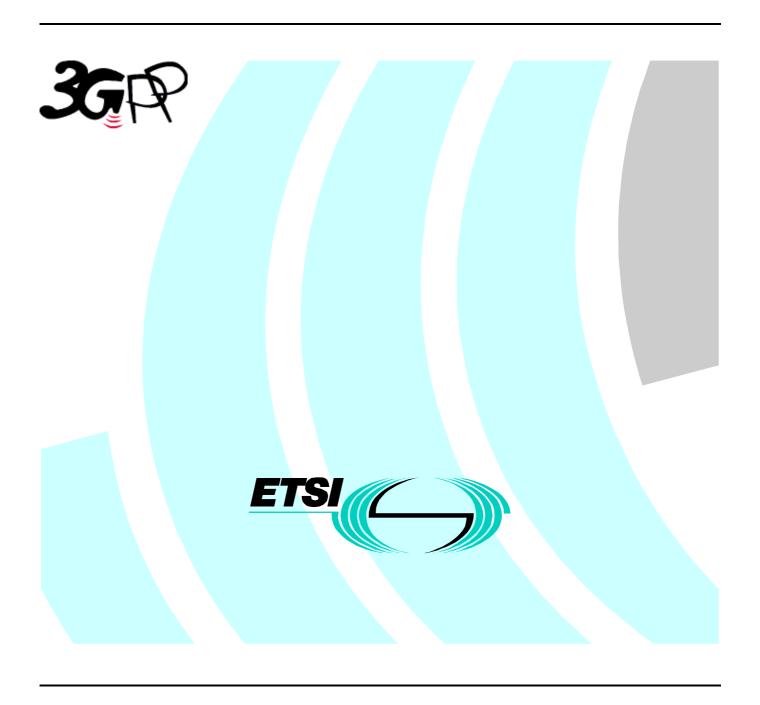

# Reference RTS/TSGR-0325402UR5 Keywords UMTS

#### **ETSI**

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at <a href="http://www.etsi.org/tb/status/">http://www.etsi.org/tb/status/</a>

If you find errors in the present document, send your comment to: editor@etsi.fr

#### Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2001.

All rights reserved.

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://www.etsi.org/ipr).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

#### **Foreword**

This Technical Specification (TS) has been produced by the ETSI 3<sup>rd</sup> Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under www.etsi.org/key.

## Contents

Forev	vord	5
1	Scope	6
2	References	6
3	Definitions, symbols and abbreviations	6
3.1	Definitions	
3.2	Symbols	
3.3	Abbreviations	7
4	Synchronisation Issues	
4.1	General	
4.2	Network Synchronisation	
4.3	Node Synchronisation	
4.4	Transport Channel Synchronisation	
4.5 4.6	Radio Interface Synchronisation	
_		
5	Synchronisation Counters and Parameters	
6	Node Synchronisation	
6.1	General	
6.1.1	RNC-Node B Node Synchronisation	
6.1.2	Inter Node B Node Synchronisation	
6.1.2.1 6.1.2.2		
0.1.2.2	•	
7	Transport Channel Synchronisation	
7.1	General	
7.2	Timing adjustment and Time of Arrival monitoring on Iub/Iur interfaces	18
8	Radio Interface Synchronisation	
8.1	General	
8.2	FDD Radio Interface Synchronisation	
8.2.1 8.2.2	General Neighbour cell list timing information	
8.3	TDD Radio Interface Synchronisation	
8.3.1	General	
8.3.2	Intercell Synchronisation	
8.3.3	Multi Frame Synchronisation	
8.3.4	Timing Advance	
8.3.4.1		
8.3.4.2	6	
8.3.4.2	<del>-</del>	
8.3.4.2	<u> </u>	
8.3.4.3		
8.3.4.3 8.3.4.3		
8.3.4.4		
8.3.4.4		
8.3.4.4		
8.3.4.4		
	TDD with unsynchronised cells	27
9	Usage of Synchronization Synchronisation Counters and Parameters to support Transport	
	Channel and Radio Interface Synchronisation	27
9.1	General	27
9.2	Calculations performed in the UTRAN	
9.2.1	UE in CELL FACH/PCH state	30

9.2.2	UE changes from CELL_FACH/PCH state to CELL_DCH state: 1 RL	30				
9.2.3	[FDD - UE changes from CELL_FACH/PCH state to CELL_DCH state: several RL's]	30				
9.2.4	UE in CELL_DCH state: addition of a new RL or handover to a new cell	30				
9.2.5	Handover from other RAN to UMTS					
9.3	Calculations performed in the UE	31				
9.3.A	UE in CELL FACH/PCH state					
9.3.1	UE changes from CELL_FACH/PCH state to CELL_DCH state: 1 RL	31				
9.3.1 <i>A</i>	A [FDD - UE changes from CELL_FACH/PCH to CELL_DCH state: several RL's]	31				
9.3.2	UE in CELL DCH state: addition of a new RL or handover to a new cell					
9.4	Synchronisation of L1 configuration changes	32				
9.5	Examples of synchronisation counters during state transitions					
10	Time Alignment Handling					
Anne	ex A (informative): Change history	37				

#### **Foreword**

This Technical Specification (TS) has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

#### where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

## 1 Scope

The present document constitutes the stage 2 specification of different synchronisation mechanisms in UTRAN and on Uu.

## 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TS 25.401: "UTRAN Overall Description". [2] 3GPP TS 25.423: "UTRAN I<sub>ur</sub> Interface RNSAP Signalling". [3] 3GPP TS 25.433: "UTRAN I<sub>ub</sub> Interface NBAP Signalling". 3GPP TS 25.435: "UTRAN Inh Interface User Plane Protocols for COMMON TRANSPORT [4] CHANNEL Data Streams". 3GPP TS 25.427: " $I_{ub}/I_{ur}$  Interface User Plane Protocol for DCH Data Streams". [5] EIA 422-A-78: "Electrical characteristics of balanced voltage digital interface circuits". [6] [7] 3GPP TS 25.411: "UTRAN Iu Interface Layer 1". [8] 3GPP TS 25.421: "UTRAN Iur Interface Layer 1". [9] 3GPP TS 25.431: "UTRAN Iub Interface Layer 1". [10] 3GPP TS 25.104: "UTRA (BS) FDD; Radio transmission and Reception". [11] 3GPP TS 25.211: "Physical channels and mapping of transport channels onto physical channels (FDD)". [12] 3GPP TS 25.223: "Spreading and modulation (TDD)". [13] 3GPP TS 25.215: "Physical layer - Measurements (FDD)". [14] 3GPP TS 25.225: "Physical layer - Measurements (TDD)". [15] 3GPP TS 25.123: "Requirements for Support of Radio Resource Management".

## 3 Definitions, symbols and abbreviations

#### 3.1 Definitions

No special definitions are defined in this document.

#### 3.2 Symbols

No special symbols are defined in this document.

#### 3.3 Abbreviations

For the purposes of the present document, the following abbreviations apply:

ACK (time alignment) acknowledgement BFN Node B Frame Number (counter) CFN Connection Frame Number (counter)

CH Channel
CN Core Network
CRNC Controlling RNC
DL Down Link
DCH Dedicated Channel

DOFF<sub>FDD</sub> FDD Default DPCH Offset value DOFF<sub>TDD</sub> TDD Default DPCH Offset value DPCH Dedicated Physical Channel

DPCCH Dedicated Physical Control Channel

DRNC Drift RNC

DSCH Downlink Shared Channel FACH Forward Access Channel FDD Frequency Division Duplex GPS Global Positioning System

HO Handover

LTOA Latest Time of Arrival

L1 Layer 1 L2 Layer 2

MAC Medium Access Control

NACK (time alignment) negative acknowledgement PCCPCH Primary Common Control Physical Channel

PCH Paging Channel PDU Packet Data Unit

PUSCH Physical Uplink Shared Channel

RAB Radio Access Bearer
RACH Random Access Channel
RAN Radio Access Network
RFN RNC Frame Number (counter)

RL Radio Link

RNC Radio Network Controller RNS Radio Network Subsystem RRC Radio Resource Control

SFN Cell System Frame Number (counter)

SRNC Serving RNC
SRNS Serving RNS
TBS Transport Block Set
TDD Time Division Duplex
TOA Time of Arrival

TOAWE Time of Arrival Window Endpoint
TOAWS Time of Arrival Window Startpoint
TTI Time Transmission Interval

UE User Equipment

UL Up Link

USCH Uplink Shared Channel

UTRAN UMTS Terrestrial Radio Access Network

## 4 Synchronisation Issues

#### 4.1 General

This clause identifies the different UTRAN synchronisation issues, i.e.:

- Network Synchronisation;
- Node Synchronization;
- Transport Channel Synchronisation;
- Radio Interface Synchronisation;
- Time Alignment Handling.

The Nodes involved by the above mentioned synchronisation issues (with the exception of Network and Node Synchronisation) are shown by the Synchronisation Issues Model of Figure 1.

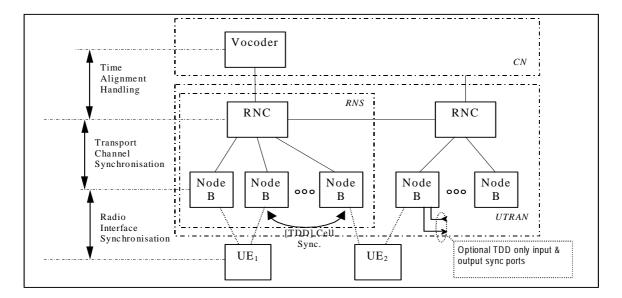


Figure 1: Synchronisation Issues Model

The UTRAN solutions for most of the identified items are described in clauses 6-10. Additional information on UTRAN synchronisation issues and the detailed specification of UTRAN solutions can be found in the following Technical Specifications:

- Summary of UTRAN Synchronisation Issues:

TS 25.401 "UTRAN Overall Description", clause 9.

- Network Synchronisation:

TS 25.411 "UTRAN Iu Interface Layer 1", subclause 4.2.

- RNC-Node B Node Synchronisation:

TS 25.427 "Iub/Iur Interface User Plane Protocol for DCH Data Streams", subclause 8.5;

TS 25.435 "UTRAN Iub Interface User Plane Protocols for COMMON TRANSPORT CHANNEL Data Streams", subclause 5.2.

- Transport Channel Synchronisation:

TS 25.427 "Iub/Iur Interface User Plane Protocol for DCH Data Streams", subclauses 8.2 – 8.3;

TS 25.435 "UTRAN Iub Interface User Plane Protocols for COMMON TRANSPORT CHANNEL Data Streams", subclauses 5.3 – 5.4.

- Time Alignment Handling:

TS 25.415 "UTRAN Iu Interface User Plane Protocols", subclauses 6.5.4.

## 4.2 Network Synchronisation

The Network Synchronisation relates to the stability of the clocks in the UTRAN. The standard specifies the performance requirements on UTRAN internal interfaces. Depending on the L1 adopted for each interface, the clock stability required shall be according to references [8] and [9].

## 4.3 Node Synchronisation

Node Synchronisation relates to the estimation and compensation of timing differences among UTRAN nodes. FDD and TDD modes have different requirements on the accuracy of the timing difference estimation and on the necessity to compensate for these differences.

Two types of Node Synchronisation can be identified, "RNC-Node B" and "Inter Node B" Node Synchronisation. Their usage differs and the requirements differ between the FDD and TDD modes.

"RNC-Node B" Node Synchronisation allows to get knowledge of the timing differences between RNC and its Node Bs.

"Inter Node B" Node Synchronisation may be used in the TDD mode to compensate the timing differences among Node Bs in order to achieve a common timing reference. The purpose of having a common timing reference is to allow Intercell Synchronisation, which is used, within neighbouring cells to minimise cross-interference.

Positioning / Localisation functions may also set requirements on Node Synchronisation (FFS).

## 4.4 Transport Channel Synchronisation

The Transport Channel Synchronisation mechanism defines synchronisation of the frame transport between RNC and Node B, considering radio interface timing.

DL TBS transmission is adjusted to fit receiver by adjusting the DL TBS timing in upper node. UL TBS transmission is adjusted by moving the UL reception window timing internally in upper node.

## 4.5 Radio Interface Synchronisation

The Radio Interface Synchronisation relates to the timing of the radio frame transmission (either in downlink [FDD] or in both directions [TDD]). FDD and TDD have different mechanisms to determine the exact timing of the radio frame transmission and also different requirements on the accuracy of this timing.

In FDD Radio Interface Synchronisation is necessary to assure that the UE receives radio frames synchronously from different cells, in order to minimise UE buffers.

In TDD Radio Interface Synchronisation refers to the following two aspects:

- Intercell Synchronisation that is used to synchronise radio frames within neighbouring cells in order to minimise cells cross-interference, to allow frame wise hopping mechanisms among cells (e.g. Cell Parameter Cycling according to Ref. [12]) and to make procedures involving more cells (e.g. handover) easier and more efficient;
- Timing advance that is used between UE and UTRAN in order to minimise UE-cell interference.

#### 4.6 Time Alignment Handling

The Time Alignment Handling procedure over Iu relates to the control of DL transmission timing in the CN nodes in order to minimise the buffer delay in SRNC. This procedure is controlled by SRNC.

## 5 Synchronisation Counters and Parameters

This clause defines counters and parameters used in the different UTRAN synchronisation procedures.

The parameters used only by FDD has been indicated with the notation [FDD – parameter].

**BFN** Node B Frame Number counter. This is the Node B common frame number counter.

[FDD -BFN is optionally frequency-locked to a Network sync reference].

Range: 0 to 4095 frames.

**RFN** RNC Frame Number counter. This is the RNC node common frame number counter. RFN

is optionally frequency-locked to a Network sync reference.

Range: 0 to 4095 frames.

SFN Cell System Frame Number counter. SFN is sent on BCH. SFN is used for paging groups

and system information scheduling etc. In FDD SFN = BFN adjusted with T\_cell.

In TDD, if Inter Node B synchronisation port is used, SFN is locked to the BFN (i.e. SFN

mod 256 = BFN mod 256). Range: 0 to 4095 frames.

**CFN** Connection Frame Number (counter). CFN is the frame counter used for the L2/transport

channel synchronisation between UE and UTRAN. A CFN value is associated to each TBS and it is passed together with it through the MAC-L1 SAP. CFN provides a common frame

reference (at L2) to be used e.g. for synchronised transport channel reconfiguration (see [2] [3]).

see [2] [3]).

The duration of the CFN cycle is longer than the maximum allowed transport delay between MAC and L1 (in UTRAN side, between SRNC and Node B, because the L1 functions that handle the transport channel synchronisation are in the Node B).

Range: 0 to 255 frames. When used for PCH the range is 0 to 4095 frames.

**Frame Offset** Frame Offset is a radio link specific L1 parameter used to map the CFN, used in the

transport channel, into the SFN that defines the specific radio frame for the transmission on

the air interface.

At the L1/L2 interaction, the mapping is performed as:

SFN mod  $256 = (CFN + Frame Offset) \mod 256 (from L2 to L1)$  (5.1)

 $CFN = (SFN - Frame Offset) \mod 256 \text{ (from L1 to L2)}$ (5.2)

The resolution of all three parameters is 1 frame. Frame Offset and CFN have the same range (0...255) and only the 8 least significant bits of the SFN are used. The operations

above are modulo 256.

In the UTRAN, the Frame Offset parameter is calculated by the SRNC and provided to the

node B.

**OFF** The parameter OFF is calculated by the UE and reported to the UTRAN only when the

UTRAN has requested the UE to send this parameter. In the neighbouring cell list, the UTRAN indicates for each cell if the Frame Offset is already known by the UTRAN or

shall be measured and reported by the UE.

OFF has a resolution of 1 frame and a range of 0 to 255.

Five different cases are discerned related to the determination of the OFF value by the UE:

- The UE changes from common channel state to dedicated channel state: 1 RL In this case OFF is zero.
- 2. [FDD -The UE changes from common channel state to dedicated channel state: several RL's

OFF is in this case defined as being the difference between SFN of the candidate cells and the SFN of the camping cell. Again the UE sets OFF to zero for the cell to which the UE sends an UL RRC message (cell #1). For cells #2 to n, the UE sets OFF to the difference between the SFN of cell#2,n and the SFN of cell#1.

This could be seen as if a virtual dedicated physical channel (DPCH) already is aligned with cell #1].

- 3. The UE adds another RL or moves to another cell in dedicated channel state.

  OFF is in this case defined as being the time difference between the CFN and the SFN of the cell in which the RL is to be added. In case this difference cannot be measured, a value as in [FDD 13] [TDD 14] shall be reported instead.
- 4. The UE is coming from another RAN and goes to dedicated channel state: 1 RL This case is identical to case 1).
- 5. [FDD The UE is coming from another RAN or another frequency in the same RAN and goes to dedicated channel state: several RL's.

  This case is identical to case 2), with one exception: OFF will not be zero for the cell to which the UE sends an UL RRC message (the measurement information will be received via the CN in this case) but for a reference cell selected by the UE. All other reported OFF values will be relative to the SFN of this selected reference cell].

#### $[FDD - DOFF_{FDD}]$

The DOFF<sub>FDD</sub> (FDD Default DPCH Offset value) is used to define Frame Offset and Chip Offset at first RL setup. The resolution should be good enough to spread out load over Iub and load in Node B (based on certain load distributing algorithms). In addition it is used to spread out the location of Pilot Symbol in order to reduce the peak DL power since Pilot symbol is always transmitting at the fixed location within a slot (the largest number of chips for one symbol is 512 chips).

The SRNC sends a DOFF<sub>FDD</sub> parameter to the UE when the new RL will make the UE change its state (from Cell\_FACH state or other when coming from another RAN) to Cell\_DCH state.

Resolution: 512 chips; Range:0 to 599 (<80ms).

#### $[TDD - DOFF_{TDD}]$

The  ${\rm DOFF_{TDD}}$  (TDD Default DPCH Offset value) is used to define Frame Offset at first RL setup, in order to spread out load over /Iur and load in Node B (based on certain load distributing algorithms).

The SRNC sends a  $\text{DOFF}_{\text{TDD}}$  parameter to the UE when the new RL will make the UE change its state (from Cell\_FACH state or other when coming from another RAN) to the Cell\_DCH state.

Resolution: 1 frame; Range: 0 to 7 frames.

#### [FDD - Chip Offset]

The Chip Offset is used as offset for the DL DPCH relative to the PCCPCH timing. The Chip Offset parameter has a resolution of 1 chip and a range of 0 to 38399 (< 10ms).

The Chip Offset parameter is calculated by the SRNC and provided to the Node B.

Frame Offset + Chip Offset (sent via NBAP) are in Node B rounded together to closest 256 chip boundary. The 256 chip boundary is used regardless of the used spreading factor, also when the spreading factor is 512. The rounded value (which is calculated in Node B) controls the DL DPCH air-interface timing.

The "Frame Offset + Chip Offset" 256 chip boundary rounding rules for Node B to consider for each DL DPCH are:

- 1. IF (Frame Offset x  $38\,400$  + Chip Offset ) modulo 256 [chips] =  $\{1..127\}$  THEN round (Frame Offset x  $38\,400$  + Chip Offset) modulo 256 frames down to closest 256 chip boundary.
- 2. IF (Frame Offset x 38 400 + Chip Offset ) modulo 256 [chips] = {128..255} THEN round (Frame Offset x 38 400 + Chip Offset) modulo 256 frames up to closest 256 chip boundary.
- 3. IF (Frame Offset x 38 400 + Chip Offset ) modulo 256 [chips] = 0 THEN "Frame Offset x 38 400 + Chip Offset" is already on a 256 chip boundary.

#### [FDD -Tm]

The reported Tm parameter has a resolution of 1 chip and a range of 0 to 38399. The Tm shall always be sent by the UE.

Five different cases are discerned related to the determination of the Tm value by the UE:

- 1. The UE changes from common channel state to dedicated channel state: 1 RL In this case the Tm will be zero.
- 2. The UE changes from common channel state to dedicated channel state: several RL's Tm is in this case defined as being the time difference between the received PCCPCH path of the source cell and the received PCCPCH paths of the other target cells. Again the UE sets Tm to zero for the cell to which the UE sends an UL RRC message (cell #1). For cells #2 to n, the UE sets Tm to the time difference of the PCCPCH reception timing of cell#2,n from the PCCPCH reception timing of cell#1.
- 3. The UE adds another RL in dedicated channel state (macro-diversity) Tm is in this case defined as being the time difference between " $T_{UETX} T_o$ " and the earliest received PCCPCH path of the target cell.  $T_{UETX}$  is the time when the UE transmits an uplink DPCCH frame, hence " $T_{UETX} T_o$ " is the nominal arrival time for the first path of a received DPCH.
- 4. The UE is coming from another RAN and goes to dedicated channel state: 1 RL This case is identical to case 1.
- 5. The UE is coming from another RAN or another frequency in the same RAN and goes to dedicated channel state: several RL's This case is identical to case 2, with one exception: Tm will not be zero for the cell to which the UE sends an UL RRC message (the measurement information will be received via the CN in this case) but for a reference cell selected by the UE. All other reported Tm values will be relative to the timing of the PCCPCH in this cell.

#### [FDD – T\_cell]

T\_cell represents the Timing delay used for defining the start of SCH, CPICH and the DL Scrambling Code(s) in a cell relative BFN. The main purpose is to avoid having overlapping SCHs in different cells belonging to the same Node B. A SCH burst is 256 chips long. SFN in a cell is delayed T\_cell relative BFN.

Resolution: 256 chips. Range: 0 .. 9 x 256 chips.

t1

RNC specific frame number (RFN) that indicates the time when RNC sends the DL Node Synchronisation control frame through the SAP to the transport layer.

Resolution: 0.125 ms; Range: 0-40959.875 ms.

t2

Node B specific frame number (BFN) that indicates the time when Node B receives the correspondent DL Node Synchronisation control frame through the SAP from the transport layer.

Resolution: 0.125 ms; Range: 0-40959.875 ms.

t3

Node B specific frame number (BFN) that indicates the time when Node B sends the UL Node Synchronisation control frame through the SAP to the transport layer.

Resolution: 0.125 ms; Range: 0-40959.875 ms.

t4 RNC specific frame number (RFN) that indicates the time when RNC receives the UL

Node Synchronisation control frame. Used in RNC locally. Not standardised over Iub.

TOAWS (Time of Arrival Window Startpoint) is the window startpoint. DL data frames

are expected to be received after this window startpoint. TOAWS is defined with a positive value relative Time of Arrival Window Endpoint (TOAWE) (see Figure 14). A data frame

arriving before TOAWS gives a Timing Adjustment Control frame response.

The resolution is 1 ms, the range is:  $\{0 ... CFN length/2 -1 ms\}$ .

**TOAWE** (Time of Arrival Window Endpoint) is the window endpoint. DL data frames are

expected to be received before this window endpoint (see Figure 14). TOAWE is defined with a positive value relative Latest Time of Arrival (LTOA). A data frame arriving after

TOAWE gives a Timing Adjustment Control frame response. The resolution is 1 ms, the range is: {0 .. CFN length -1 ms}.

LTOA (Latest Time of Arrival) is the latest time instant a Node B can receive a data frame

and still be able to process it. Data frames received after LTOA can not be processed (discarded). LTOA is defined internally in Node B to be a processing time before the data frame is sent in air-interface. The processing time (Tproc) could be vendor and service

dependent.

LTOA is the reference for TOAWE (see Figure 14).

TOA (Time of Arrival) is the time difference between the TOAWE and when a data frame

is received. A positive TOA means that data frames are received before TOAWE, a negative TOA means that data frames are received after TOAWE. Data frames that are

received after TOAWE but before LTOA are processed by Node B.

TOA has a resolution of 125  $\mu s.$  TOA is positive when data frames are received before

TOAWE (see Figure 12).

The range is:  $\{0 ... + CFN \text{ length/} 2 - 125 \mu s\}$ .

TOA is negative when data frames are received after TOAWE.

The range is:  $\{-125 \mu s ... - CFN \ length/2\}$ .

## 6 Node Synchronisation

#### 6.1 General

By Node Synchronisation it's generally meant the achievement of a common timing reference among different nodes. In UTRAN although a common timing reference among all the nodes could be useful, it is not required. In fact different nodes' counters (RFN and BFN), even if frequency-locked to the same network synchronisation reference, may be not phased aligned (see Figure 2).

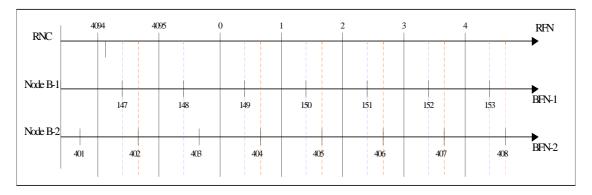


Figure 2: Timing of UTRAN counters

However in order to minimise the transmission delay and the buffering time for the DL transmission on the air interface, it can be useful to estimate the timing differences between RNC and Node Bs, without the need to compensate for the phase differences between RNC's and Node B's counters.

On the other hand the achievement of a common timing reference among Node B's may be used in TDD to support Cell Synchronisation.

For these reasons in UTRAN node synchronisation refers to the following two aspects:

- RNC-Node B Node Synchronisation;
- Inter Node B Node Synchronisation.

#### 6.1.1 RNC-Node B Node Synchronisation

The Node Synchronisation between RNC and Node B can be used to find out the timing reference differences between the UTRAN nodes (RFN in RNC and BFN in Node B). The use is mainly for determining good DL and UL offset values for transport channel synchronisation between RNC and their Node B's. Knowledge of timing relationships between these nodes is based on a measurement procedure called RNC-Node B Node Synchronisation Procedure. The procedure is defined in the user plane protocols for Iub (DCH, DSCH, and FACH/PCH) and Iur (DCH).

When the procedure is used from SRNC over the DCH user plane, it allows finding out the actual round-trip-delay a certain service has (as the Node Sync Control Frames are transferred the same way as the DCH frames).

The procedure may also be carried out over a high priority transport bearer (beneficial when used between CRNC and Node Bs for the RNC-Node B Synchronisation purpose). Measurements of node offsets can be made at start or restart as well as during normal operation to supervise the stability of the nodes.

If a good Network synchronisation reference is used, the drift between nodes will be low, but could occur. If a Network synchronisation reference isn't available or is poor, the local node reference oscillator must be relied upon. Then the RNC-Node B Node Synchronisation procedure can be used as a background process to find out the frequency drift between nodes. Therefore, a system can be deployed without Network synchronisation references (to e.g. the Node B's).

In the RNC-Node B Node Synchronisation procedure, the RNC sends a DL Node Synchronisation control frame to Node B containing the parameter t1. Upon reception of a DL Synchronisation control frame, the Node B shall respond with UL Synchronisation Control Frame, indicating t2 and t3, as well as t1 which was indicated in the initiating DL Node Synchronisation control frame (see Figure 3).

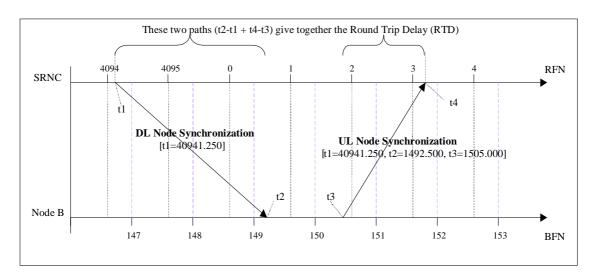


Figure 3: RNC-Node B Node Synchronisation

In case of macrodiversity with recombining in the DRNC, the DL Node Synchronisation control frame is duplicated in the DRNC on the different links, while the UL Node Synchronisation control frames received from all the Node B's are forwarded transparently to the SRNC (see Figure 4).

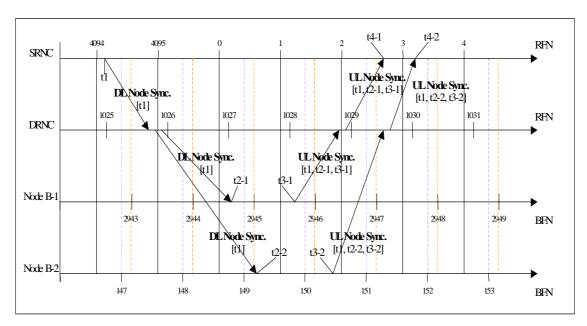


Figure 4: [FDD - RNC-Node B Node Synchronisation during soft handover with selection/recombining in the DRNC]

#### 6.1.2 Inter Node B Node Synchronisation

In the FDD mode Inter Node B Node Synchronisation could be reached via the RNC-Node B Node Synchronisation in order to determine inter Node B timing reference relations.

This could be used to determine Inter-cell relationships (considering T\_cell) which can be used in the neighbour cell lists in order to speed up and simplify cell search done by UE at handover.

In TDD Inter Node B Node Synchronisation is used to achieve a common timing reference among Node B's (see Figure 5), that allows to support Intercell Synchronisation.

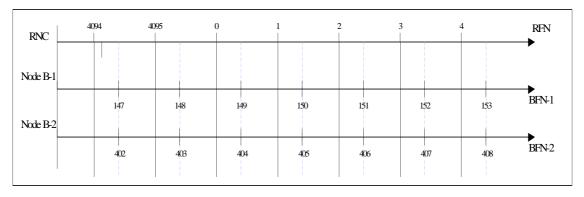


Figure 5: Synchronisation of BFNs through TDD Inter Node B Synchronisation

In TDD Inter Node B Node Synchronisation may be achieved via a standardised synchronisation port (see subclause 6.1.2.1) that allows to synchronise the Node B to an external reference.

#### 6.1.2.1 TDD Node B Synchronisation Ports

This subclause defines the Node B input and an output synchronisation ports that can be used for Inter Node B Node Synchronisation. These synchronisation ports are optional.

The input synchronisation port (SYNC IN) allows the Node B to be synchronised to an external reference (e.g. GPS), while the output synchronisation port (SYNC OUT) allows the Node B to synchronise directly another Node B (see Figure 6).

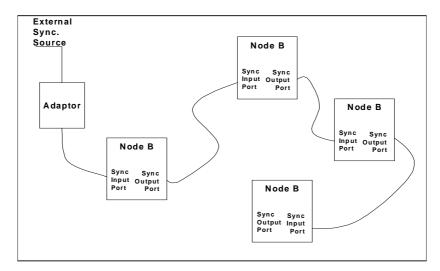


Figure 6: Usage of Synchronisation Ports

This allows connecting Node B's in a daisy chain configuration, so that a single external reference is enough and all remaining nodes B can be synchronised (e.g. in case of indoor operation).

The Node B starts the synchronisation to the external reference when a valid input synchronisation signal is detected at the input synchronisation port.

If a valid synchronisation signal is detected, the Node B regenerates that signal at its output synchronisation port.

The electrical characteristics of the synchronisation ports shall conform to RS422 [6] (output synchronisation port: subclause 4.1; input synchronisation port: subclause 4.2).

The synchronisation signal (illustrated in Figure 7) is a 100 Hz signal having positive pulses of width between 5  $\mu$ s and 1 ms, except when SFN mod 256 = 0 (every 256th pulse), which has a pulse width between 2 ms and 5 ms. This signal establishes the 10 ms frame interval and the 2.56 s multiframe interval. The start of all frames in the cell of the node B is defined by the falling edge of the pulse. The required accuracy for the phase difference between the start of the 10ms frame interval and the falling edge of the synchronisation pulses is defined in [15].

The start of the 256 frame period is defined by the falling edge of the pulse corresponding to the frames where SFN mod 256 = 0 (i.e. of width between 2 ms and 5 ms).

The synchronisation signal at the input port shall have frequency accuracy better than the one of the Node B.

The relative phase difference of the synchronisation signals at the input port of any Node B in the synchronised area shall not exceed  $2.5 \,\mu s$ .

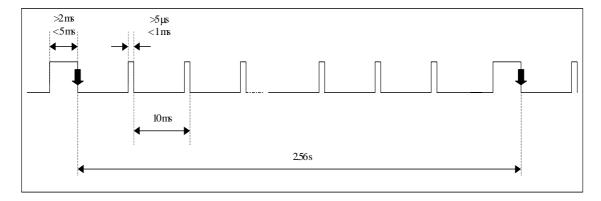


Figure 7: Synchronisation signal

#### Synchronisation by a GPS receiver

The signal transmitted by a Global Positioning System (GPS) satellite indicates the GPS time that provides an absolute time reference. This makes the GPS receiver suitable for Inter Node B Node Synchronisation.

Inter Node B Node Synchronisation is achieved by relating the synchronisation signal (at the input synchronisation port to the GPS signal. Since the period of this signal is 2.56 s, this implies that every 6400 frames the start of a 256 frame period coincides with an integer GPS second, i.e. a multiframe shall start when GPS time mod 64 = 0.

#### 6.1.2.2 TDD Inter Node B Node Synchronisation procedure

Void.

## 7 Transport Channel Synchronisation

#### 7.1 General

The Transport Channel (or L2) synchronisation provides a L2 common frame numbering between UTRAN and UE (frame synchronisation between the L2 entities). This frame number is the Connection Frame Number (CFN) and it is associated at L2 to every TBS and passed to L1: the same CFN is received on the peer side associated with the same TBS.

The CFN is not transmitted in the air interface for each TBS, but is mapped by L1 to the SFN of the first radio frame used for the transmission of the TBS (the SFN is broadcast at L1 in the BCH). The mapping is performed via the Frame Offset parameters (see Figure 8).

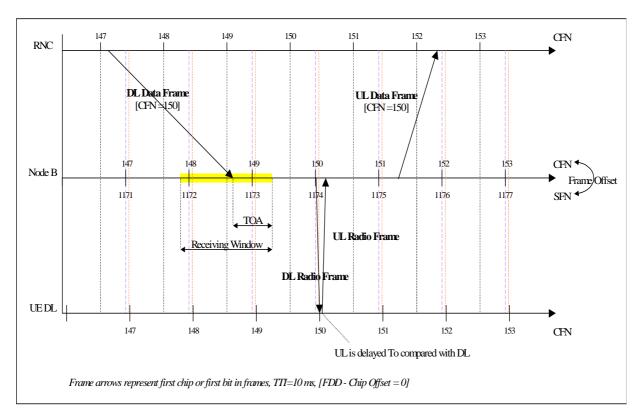


Figure 8: Transport Channel Synchronization

This transport channel synchronisation mechanism is valid for all downlink transport channels.

In case of soft handover (i.e. only for DCHs), the Frame Offsets of the different radio links are selected in order to have a timed transmission of the diversity branches on the air interface (see Figure 9).

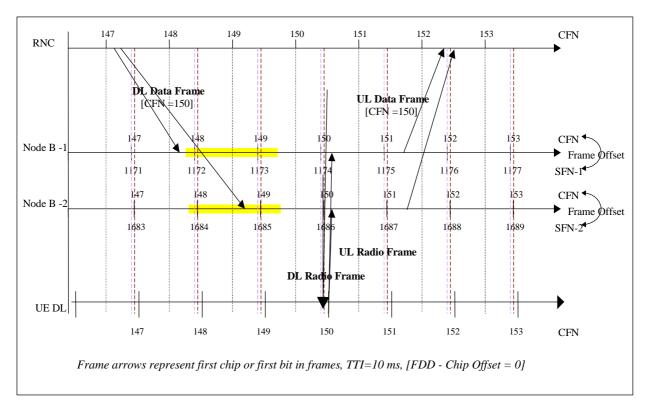


Figure 9: [FDD - Transport Channel Synchronisation during soft handover]

## 7.2 Timing adjustment and Time of Arrival monitoring on lub/lur interfaces

A receiving window is configured in Node B at Transport bearer Setup and Reconfiguration for DL frames (TOAWS and TOAWE). The purpose is to make it possible to supervise whether data frames are received in the window or not. When a frame is received outside that window, a response is sent to RNC by means of a Timing Adjustment Control frame containing the Time of Arrival information (TOA)(see Figure 10 and Figure 11). This allow the L1 to indicate to L2 (through the L1-MAC primitive carried by the Timing Adjustment Control frame) the necessity to adjust the timing of the DL transmission, in order to control and minimise the transmission delay and the buffering time for the transmission on the air interface (i.e. to ensure that the TBS does not arrive too much in advance respect to the transmission time).

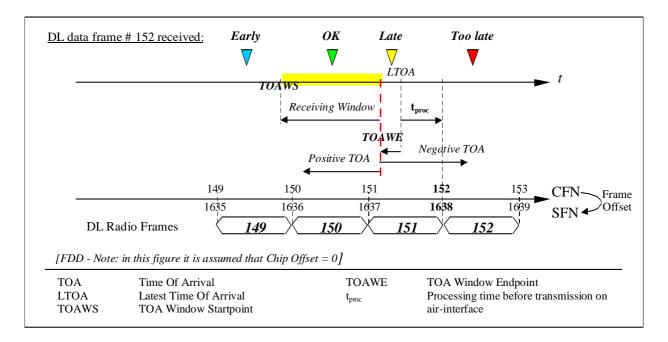


Figure 10: Illustration of TOAWS, TOAWE, LTOA and TOA

The window could be defined to have a margin before LTOA (TOAWE >0). This is to indicate to RNC that data frames are a bit late but they are still processed by Node B. In this case, data frames are received after TOAWE but before LTOA.

Using this window definition and supervising method, it is possible to determine the correct timing for sending data frames from the RNC over Iur/ Iub.

The window size and position is chosen with respect to expected data frame delay variation and different macro-diversity leg delays.

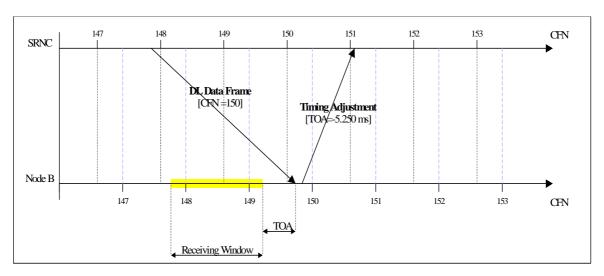


Figure 11: Timing Adjustment Procedure

In order to monitor the TOA when no DL data frames are sent, a synchronisation procedure is defined in the Iub/Iur frame protocols ([4],[5]). This procedure makes use of UL and DL Sync Control frames (see Figure 12 and Figure 13). The SRNC sends DL Sync Control frame containing the CFN in which the control frame should be received by the Node B. When the Node B receives the DL Sync Control frame, it always replies with an UL Sync Control frame containing the TOA, even if the DL Sync Control frame is received within the receiving window as in Figure 12.

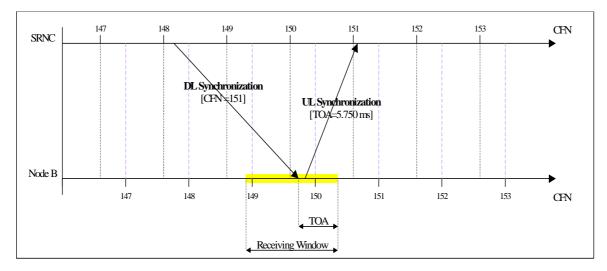


Figure 12: TOA monitoring through Frame Protocol Synchronisation Procedure (TOA >0)

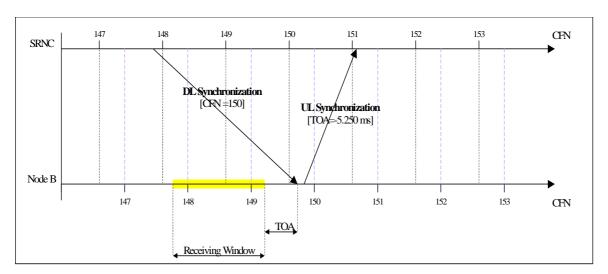


Figure 13: TOA monitoring through Frame Protocol Synchronisation Procedure (TOA <0)

In case of macrodiversity with recombining in the DRNC, the DL Synchronisation control frame is duplicated in the DRNC on the different links, while the UL Synchronisation control frames received from all the Node B's are forwarded transparently to the SRNC (see Figure 14).

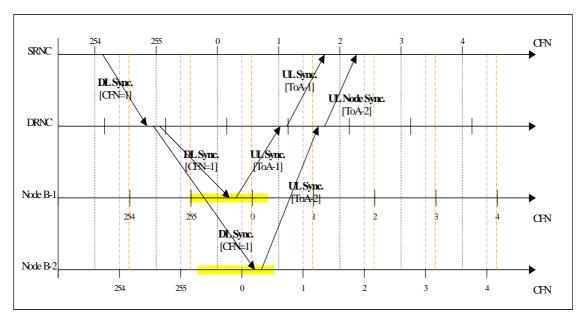


Figure 14: [FDD - TOA monitoring through FP Synchronisation Procedure during soft handover with selection/recombining in the DRNC]

Once the SRNC receives the two UL Synchronisation control frames containing TOA1 and TOA2, it may consider either TOA1 or TOA2 to advance or delay DL transmission (see Table 1).

Relation between TOA1 and TOA2TAO considered and action performed by the SRNCTOA1 < TOA2 < 0TOA1 may be considered to advance DL transmissionTOA2 < TOA1 < 0TOA2 may be considered to advance DL transmissionTOA1 < 0, TOA2 > 0TOA1 may be considered to advance DL transmissionTOA2 < 0, TOA1 > 0TOA2 may be considered to advance DL transmissionTOA1 > TOA2 > 0TOA2 may be considered to delay DL transmissionTOA2 > TOA1 > 0TOA1 may be considered to delay DL transmission

Table 1

## 8 Radio Interface Synchronisation

#### 8.1 General

This subclause describes the Radio Interface Synchronisation for FDD and TDD.

## 8.2 FDD Radio Interface Synchronisation

#### 8.2.1 General

FDD Radio Interface Synchronisation assures that UE gets the correct frames when received from several cells. The UE measures the Timing difference between its DPCH and SFN in the target cell when doing handover and reports it to SRNC. SRNC sends this Time difference value in two parameters Frame Offset and Chip Offset over Iub to Node B. Node B rounds this value to the closest 256 chip boundary in order to get DL orthogonality (regardless of used spreading factor). The rounded value is used in Node B for the DL DPCH.

 $\mathrm{DOFF}_{\mathrm{FDD}}$  is selected by the SRNC considering the interleaving period (e.g. 10, 20, 40 or 80ms) when entering in dedicated state from common channel state.

Services are scheduled by using  $DOFF_{FDD}$  in order to average out the Iub traffic load and the Node B processing load.  $DOFF_{FDD}$  (FDD Default DPCH Offset value) is only used when setting up the first RL in order to initialise Frame Offset and Chip Offset and to tell UE when frames are expected.

UE uses the UL DPCH as it is a more defined time instant compared with DL DPCH.

The handover reference is the time instant T<sub>UETx</sub> -To, which is called DL DPCH<sub>nom</sub> in the timing diagram.

 $T_{cell}$  is used to skew cells in the same Node B in order to not get colliding SCH bursts, one SCH burst is 1/10 of a slot time.

The timing diagram in Figure 15 shows an example with two cells connected to one UE where handover is done from source cell (Cell 1) to target cell (Cell 2).

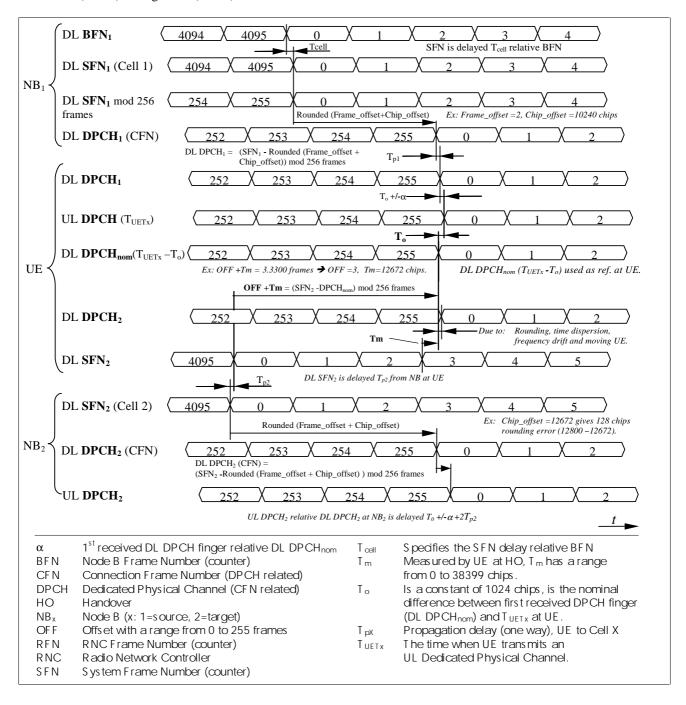


Figure 15: FDD Radio Interface Synchronisation timing diagram

SFN<sub>1</sub> is found in Cell 1 at Node  $B_1$  and SFN<sub>2</sub> at Cell 2 and Node  $B_2$ . SFN<sub>1</sub> is sent  $T_cell_1$  after the Node  $B_1$  reference BFN<sub>1</sub>. CFN is the frame numbering that is related to each DL and UL Dedicated Physical Channel (DPCH). UL DPCH is sent from UE to both Cells (both Node B's in this example). UL DPCH at Node  $B_2$  is shown to indicate the difference to the DL DPCH<sub>2</sub> at Node  $B_2$ .

The new RL (DL DPCH<sub>2</sub>) which is setup at the HO will face some deviation from nominal position due to the rounding of Frame Offset and Chip Offset to 256 chip boundary in Node B. Also Time dispersion, Node B-UE frequency drift and UE movement affects this phase deviation.

The nominal DL DPCH timing at UE is T<sub>o</sub> before the T<sub>UETX</sub> time instant, which could be expressed:

$$DL DPCH_{nom} = T_{UETX} - T_o$$
 (8.1)

In UE dedicated state, OFF and Tm are measured at UE according to the following equation:

$$OFF + Tm = (SFN_{target} - DL DPCH_{nom}) \mod 256 \text{ frames [chips]}$$
(8.2)

NOTE: OFF has the unit Frames and Tm the unit Chips.

Example: assume that OFF +  $T_m$  equals "3.3300" frames (as given as an example in Figure 19). Then OFF = 3 and  $T_m$  = "0.33" which corresponds to  $T_m$  = 12672 chips.

In other words (referring to the timing diagram in Figure 19):

- How to determine T<sub>m</sub> at UE: Select a time instant 1) where frame N starts at DL SFN<sub>2</sub> e.g. frame number 3, the time from that time instant to the next frame border of DL DPCH<sub>nom</sub> 2) equals T<sub>m</sub> (if these are in phase with each other, T<sub>m</sub> is zero).
- How to determine OFF: The difference between the frame number selected for time instant 1) and the frame number starting at instant 2) mod 256 frames equals OFF.
   Example: (3 –0) mod 256 = 3, another example is (1 –254) mod 256 = 3.

### 8.2.2 Neighbour cell list timing information

A cell can optionally broadcast a neighbouring cell list that indicates timing information for neighbouring cells. The list contains the inter cell timing difference to neighbour cells with associated estimated uncertainty. The inter cell timing uncertainty depends on what timing difference estimating means that are used in the system (No means at all, Node sync measurements, UE inter-cell measurements, Cells belonging to the same Node B or even GPS). The purpose with the neighbouring cell list timing information is to enable shorter cell search time for UE, to save UE battery and to potentially lower BCH Tx power for cells in a synchronised cluster.

## 8.3 TDD Radio Interface Synchronisation

#### 8.3.1 General

The TDD Radio Interface Synchronisation relates to the following two aspects:

- Intercell Synchronisation;
- Timing Advance.

In TDD mode Intercell Synchronisation may be achieved by means of:

Inter Node B Node Synchronisation that allows to achieve a common timing reference among Node B's.

The Radio Interface Synchronisation between UE and UTRAN is achieved by means of the Timing Advance mechanism.

#### 8.3.2 Intercell Synchronisation

Intercell Synchronisation ensures that the frame boundaries are positioned at the same time instant in adjacent cells (see Figure 16).

This requirement is necessary to minimise the interference between UEs in neighbouring cell.

In addition it automatically ensures that the slots of different cells are synchronised, i.e. they do not overlap at the UE.

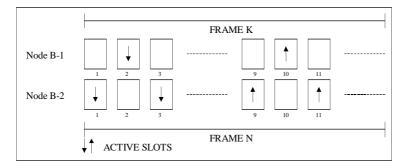


Figure 16: Intercell Synchronisation

Furthermore, Intercell Synchronisation assures the synchronisation of the last 8 bits of the SFN, that is required if frame wise hopping mechanisms among cells are used. It also can be used to keep more efficient and faster all procedures involving a switch from one cell to another, such as searching for new cells, locking to new cells or handover.

#### 8.3.3 Multi Frame Synchronisation

Void.

#### 8.3.4 Timing Advance

Timing Advance is used in uplink to align the uplink radio signals from the UE to the UTRAN both in case of uplink Dedicated Physical Channels (DPCH) and of Physical Uplink Shared Channels (PUSCH).

The handling of timing advance can be divided in four main categories: measurement, initial assignment, updates during operation, and setting on handover. For each category, a number of different cases can be distinguished.

- 1. Measurement of the timing deviation on the physical channels:
  - On PRACH transmissions;
  - On DPCH transmissions;
  - On PUSCH transmissions.
- 2. Assignment of correct timing advance value when establishing new channels:
  - At transition to CELL\_DCH state;
  - When establishing an USCH in CELL\_FACH state.
- 3. Update of timing advance value for channels in operation:
  - UE in CELL\_DCH state;
  - UE with USCH in CELL\_FACH state.
- 4. Setting of timing advance value for target cell at handover:
  - Handover from TDD to TDD with synchronised cells;
  - Handover from TDD to TDD with unsynchronised cells;
  - Handover from FDD to TDD;
  - Handover from other systems to TDD.

#### 8.3.4.1 Measurement of the timing deviation on the physical channels

Timing deviation measurements are always performed in the physical layer in Node B. These measurements have to be reported to the higher layers, where timing advance values are calculated and signalled to the UE. For this reporting, a number of different ways are foreseen, depending on the used physical channels.

**PRACH:** The Node B physical layer measures the timing deviation of the received PRACH signal (RX

Timing Deviation) and passes this together with the transport block to the CRNC (by means of the Iub RACH Frame Protocol). In case the RACH carries a DDCH or DTCH, the measured timing deviation may be passed from DRNC to the SRNC over Iur interface (by means of the Iur RACH Frame Protocol). Note: PRACH transmissions themselves are transmitted with a large guard

period so they do not require timing advance.

**PUSCH:** The Node B physical layer measures the timing deviation of the received PUSCH signal (RX

Timing Deviation) and passes this together with the transport block to the CRNC (by means of the

Iub USCH Frame Protocol).

**DPCH:** The Node B physical layer measures the timing deviation of the received DPCH signal (RX

Timing Deviation) and passes this value, if the conditions for reporting the measurement are met,

to the SRNC (by means of the Iub & Iur DCH Frame Protocols).

#### 8.3.4.2 Assignment of correct timing advance value when establishing new channels

#### 8.3.4.2.1 Transition to CELL DCH State

The transition to CELL\_DCH state from CELL\_FACH state or Idle Mode operates in the following manner:

- The SRNC checks whether an up to date timing deviation measurement is available. Such a measurement can be available from a recent RACH access (e.g. from initial access) or from a recent USCH transmission. If no up to date timing deviation measurement is available, e.g. because of lack of uplink transmissions, or during USCH over Iur, the SRNC is not informed about RX Timing Deviations, and has to trigger an uplink transmission from the UE before it can assign a DCH (for example, a RRC procedure requiring a response from the UE). The SRNC calculates the required timing advance value and saves it in the UE context in the SRNC for later use in dedicated or shared channel activation.
- The SRNC attaches the timing advance value to the channel allocation message that it signals to the UE via FACH (RRC CONNECTION SETUP or RADIO BEARER SETUP).
- When the UE receives the channel allocation message it configures its physical layer with the given absolute timing advance value. When a timing advance command is signalled to the UE, the CFN that the new timing advance is to be applied is always signalled.

#### 8.3.4.2.2 When establishing an USCH in CELL\_FACH state

For uplink traffic using the USCH, short time allocations are sent to the UE regularly. Therefore establishing an USCH in CELL\_FACH state is very similar to handling of timing advance updates during USCH operation. The UTRAN shall use a recent timing deviation measurement. Such a measurement shall be available from a recent USCH burst or a recent RACH access (e.g. from a PUSCH\_CAPACITY\_REQUEST).

#### 8.3.4.3 Update of timing advance value for channels in operation

#### 8.3.4.3.1 UE in CELL DCH state

An UE that is operating a dedicated channel (CELL\_DCH state), has to update the timing advance from time to time to keep the received signal at the Node B within the required time window. Under reasonable assumptions the worst case update frequency is in the order of 8 seconds.

The timing advance update procedure operates in the following manner:

- 1. The SRNC determines whether a new timing advance value has to be transmitted to the UE taking into account the timing deviation measurements. The new timing advance value is calculated taking into account the UE's current timing advance value.
- 2. The new timing advance value and the CFN in which it is to take effect are signalled to the UE via RRC signalling on FACH or DCH (PHYSICAL CHANNEL RECONFIGURATION, TRANSPORT CHANNEL RECONFIGURATION, RADIO BEARER RECONFIGURATION or UPLINK PHYSICAL CHANNEL CONTROL are examples of possible messages on the DCCH).
- 3. The SRNC shall also send the updated timing advance value and the CFN in which it is to take effect to the Node B, using a user plan control message. The Node B may adjust its physical layer to take the change in uplink transmission into account.
- 4. When the UE receives a new timing advance value, it shall configure its physical layer so that the updated timing advance value takes effect on the given CFN specified within the RRC message. The timing advance value shall be applied to all DPCHs and, if present, to all PUSCHs.

There is no need for the UE to acknowledge the timing advance update: the Node B continually measures and reports the UE timing deviation and the UE reports the received timing advance value as part of its measurement reporting. The SRNC is thus able to detect if a timing advance update has not been received and needs to be resent.

#### 8.3.4.3.2 UE with USCH Traffic in CELL\_FACH state

If the UE uses an USCH in CELL\_FACH state (no DCH), the timing advance update procedure operates in the following manner:

- 1. The CRNC determines whether a new timing advance value has to be transmitted to the UE taking into account when the last timing advance update was signalled. Two cases are possible:
  - If the data transfer is uplink after a longer idle period then the UE has to transmit a capacity request on the RACH. The CRNC is therefore informed of any timing deviation on this RACH.
  - If a new allocation follows an USCH transmission, the timing deviation is already known to the CRNC from measurements of the last uplink transmission.
- 2. If a Timing Advance update is needed, the CRNC includes a new timing advance value and the CFN in which it will take effect in the next USCH allocation message to the UE (PHYSICAL SHARED CHANNEL ALLOCATION).
- 3. The CRNC shall also send a user plane control message indicating the CFN and the updated timing advance value to the Node B so the Node B can adjust its physical layer averaging to take the change in uplink transmission into account.
- 4. When the UE receives a new timing advance value, the UE shall configure its physical layer, so that the updated timing advance value takes effect on the given CFN specified within the PHYSICAL SHARED CHANNEL ALLOCATION message. The timing advance value shall be applied to all present PUSCHs.

#### 8.3.4.4 Setting of timing advance value for target cell at handover

#### 8.3.4.4.1 General

Since the uplink radio signals need to be adjusted only because of large enough distances between the UE and the cell transmission, certain cells will have a small enough radius that timing advance needs to not be used. In those cells the timing advance value in the UE is set to zero and UE autonomous adjustment of timing advance upon handover is disabled in the handover messages to the UE.

In these cells, where TA is not applied, the "RX Timing Deviation" measurement can be omitted if no other procedure (e.g. LCS) requires it.

#### 8.3.4.4.2 Handover from TDD to TDD with synchronised cells

When two TDD cells are involved in handover and the two cells are sufficiently synchronised, a UE is able to measure the time offset between P-CCPCH reception of the two cells and, consequently, is able to autonomously correct its

timing on handover without UTRAN assistance. However to improve the accuracy for the UE calculated timing advance, the SRNC can include an updated timing advance based on the timing deviation measured by the old cell in the messages triggering the handover in the UE. Note that this update shall apply in the old cell at the specified CFN if handover is performed on a later CFN or if the handover fails and falls back to the old cell. The UE shall use this new value as the basis for the UE autonomous update.

After a successful handover, a response message is transmitted in the new cell. In this message, if the UE automonomously updated its timing advance it shall report the calculated timing advance value, which it is using for access to the new cell. By this way, the SRNC is informed as fast as possible about the absolute timing advance value in the UE, and it can correct the timing advance immediately or in the future based on this value, if necessary.

## 8.3.4.4.3 Handover from FDD to TDD, Handover from other systems to TDD, or Handover from TDD to TDD with unsynchronised cells

In these cases, since synchronisation between the handover cells is not possible, the new TDD cell must use a burst type with a large enough transmission window to allow the immediate transmission of data without the need of timing advance adjustment in the new cell, since timing adjustment can only be performed in these cells after the first uplink transmission.

## 9 Usage of Synchronization Synchronisation Counters and Parameters to support Transport Channel and Radio Interface Synchronisation

#### 9.1 General

This subclause describes how the different synchronisation parameters and counters are computed and used in order to obtain Transport Channel (L2) and Radio Interface (L1) Synchronisation.

The parameters that need to be determined by the UE are CFN, OFF [FDD – and Tm].

The parameter that need to be determined by the UTRAN are  $[FDD - DOFF_{FDD}]$ ,  $[TDD - DOFF_{TDD}]$ , Frame Offset and [FDD - Chip Offset].

Figure 17 summarises how these parameters are computed. A detailed description of the actions in each state is given in the sections 9.2 - 9.4, while some examples of corrections applied to synchronisation counters during UE state transitions are shown in section 9.5.

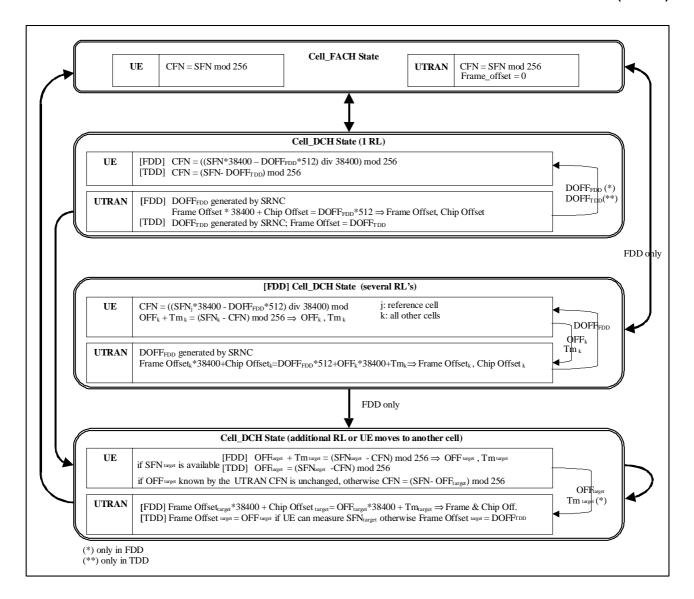


Figure 17: Calculations performed by UE and UTRAN

Figure 18 describes what offset parameters are signalled and used in the different nodes at Initial RL setup and at Handover (HO) in FDD. The rounding to closest 256 chip boundary is done in Node B. The rounded Frame Offset and Chip Offset control the DL DPCH air-interface timing. The 256 chip boundary is to maintain DL orthogonality in the cell (the rounding to the closest 256 chip boundary is done in Node B to facilitate the initial UL chip synchronisation process in Node B).

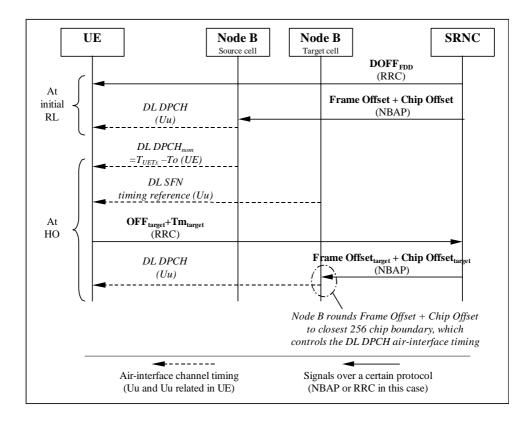


Figure 18: [FDD - Usage of Offset values at initial RL and at HO]

Figure 19 describes what offset parameters are signalled and used in the different nodes at Initial RL setup and at Handover (HO) in TDD.

Note that in some cases the parameter  $OFF_{target}$  cannot be measured by the UE before handover (e.g. in case of inter frequency handover or inter-mode handover). In these cases a value as defined in [FDD - 13] [TDD - 14] shall be reported by the UE.

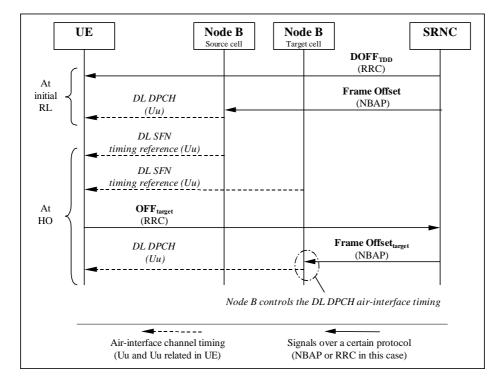


Figure 19: [TDD- Usage of Offset values at initial RL and at HO]

#### 9.2 Calculations performed in the UTRAN

#### 9.2.1 UE in CELL\_FACH/PCH state

In CELL\_FACH/PCH state the Frame Offset is set to 0 (for all common and shared channels).

#### 9.2.2 UE changes from CELL\_FACH/PCH state to CELL\_DCH state: 1 RL

[FDD- Based on the received parameters from the UE and the DOFF<sub>FDD</sub> value generated in the SRNC, the SRNC calculates the Frame Offset and the Chip Offset from formula (9.1).

Frame Offset\*
$$38400$$
 +Chip Offset = DOFF<sub>FDD</sub>\* $512$  (9.1)

Frame Offset and Chip Offset are then signalled to the Node B controlling the serving cell.]

[TDD - Based on the DOFF<sub>TDD</sub> value generated in the SRNC, the SRNC calculates the Frame Offset = DOFF<sub>TDD</sub>.

Frame Offset is then signalled to the Node B controlling the serving cell.]

[TDD - Note that for all common and shared channels Frame Offset is set to 0 even during CELL\_DCH state.]

## 9.2.3 [FDD - UE changes from CELL\_FACH/PCH state to CELL\_DCH state: several RL's]

Based on the received parameters from the UE for each  $cell_k$  (OFF<sub>k</sub> and Tm<sub>k</sub>) and the DOFF<sub>FDD</sub> value generated in the SRNC, the SRNC calculates the Frame Offset<sub>k</sub> and the Chip Offset<sub>k</sub>. The Frame Offset<sub>k</sub> and the Chip Offset<sub>k</sub> are calculated from formula (9.2).

NOTE: formula (9.2) is covering formula (9.1) since in the case described in section 9.2.2,  $OFF_k$  and  $Tm_k$  are both equal to zero.

Each Frame Offset<sub>k</sub> and Chip Offset<sub>k</sub> are then signalled to the Node B controlling the cell<sub>k</sub>.

## 9.2.4 UE in CELL\_DCH state: addition of a new RL or handover to a new cell

[FDD-Based on the received parameters from the UE or already known by the UTRAN (OFF<sub>target</sub>,  $Tm_{target}$ ), the SRNC calculates the Frame Offset<sub>target</sub> and the Chip Offset<sub>target</sub> with formula (9.3).

Frame Offset<sub>target</sub>\*38400 + Chip Offset<sub>target</sub>= OFF<sub>target</sub>\*38400 + 
$$Tm_{target}$$
 (9.3)

During hard handover in case the parameter  $OFF_{target}$  cannot be measured by the UE and it is not already known by the UTRAN, than the SRNC calculates the Frame  $Offset_{target}$  and the Chip  $Offset_{target}$  with formula (9.1).

Frame Offset<sub>target</sub> and Chip Offset<sub>target</sub> are then signalled to the Node B controlling the target cell.]

[TDD - Based on the parameter  $OFF_{target}$  received from the UE or already known by the UTRAN, the SRNC calculates the Frame  $Offset_{target} = OFF_{target}$ .

In case the parameter  $OFF_{target}$  cannot be measured by the UE and it is not already known by the UTRAN, than the SRNC calculates the Frame  $Offset_{target} = DOFF_{TDD}$ .

It is signalled to the Node B controlling the target cell.]

#### 9.2.5 Handover from other RAN to UMTS

[FDD- Based on the definitions for OFF and Tm formula (9.1) can also be used when the UE enters the UTRAN from another CN and establishes one dedicated RL. The same is true for formula (9.2) when establishing one or more dedicated RL's.]

[TDD - When the UE enters the UTRAN from another CN and establishes one dedicated RL, OFF is 0.]

#### 9.3 Calculations performed in the UE

#### 9.3.A UE in CELL\_FACH/PCH state

In CELL\_FACH/PCH state the CFN is initialised with the values CFN = SFN for PCH and CFN = SFN mod 256 for all other common and shared channels. The CFN for all common and shared channels in the CRNC is increased (mod 256) by 1 every frame, except PCH, which CFN has the same range of the SFN.

#### 9.3.1 UE changes from CELL\_FACH/PCH state to CELL\_DCH state: 1 RL

[FDD- Based on the received DOFF<sub>FDD</sub> and the SFN of the cell in which the UE is source, the UE can initialise the CFN with the value given by formula (9.4)

$$CFN = ((SFN*38400 - DOFF_{EDD}*512) \text{ div } 38400) \text{ mod } 256$$
(9.4)]

[TDD - Based on the received DOFF<sub>TDD</sub>, the UE can initialised the CFN with the value given by formula (9.5).

$$CFN = (SFN-DOFF_{TDD}) \mod 256 \tag{9.5}$$

After the initialisation, the CFN in the UE is increased (mod 256) by 1 every frame.

[TDD - Note that for all common and shared channels CFN = SFN mod 256 even during CELL\_DCH state.]

## 9.3.1A [FDD - UE changes from CELL\_FACH/PCH to CELL\_DCH state: several RL's]

The UE reports to the SRNC the parameters  $OFF_k$  and  $Tm_k$  for each  $cell_k$  measured respect to the reference  $cell_j$  determined by means of formula (9.6)

$$OFF_k + Tm_k = (SFN_k - CFN) \mod 256$$
(9.6)

After having performed  $OFF_k$  and  $Tm_k$  measurements for all target cells, the UE initialises the CFN with the value given by formula (9.7), based on the received  $DOFF_{FDD}$  and the  $SFN_j$  of the reference cell.

$$CFN = ((SFN_i *38400 - DOFF_{FDD} *512) \text{ div } 38400) \text{ mod } 256$$
(9.7)

After the initialisation, the CFN in the UE is increased (mod 256) by 1 every frame.

## 9.3.2 UE in CELL\_DCH state: addition of a new RL or handover to a new cell

The UE in CELL\_DCH state may be requested by the UTRAN to report OFF<sub>target</sub> by means of System Info broadcast in the source cell.

[FDD -

In case the SFN<sub>target</sub> can be measured, the target cell OFF<sub>target</sub> is calculated using formula (9.8):

$$OFF_{target} + Tm_{target} = (SFN_{target} - CFN) \mod 256$$
 (9.8)

otherwise a value as defined in [13] is reported. Tm<sub>target</sub> is always reported, except for the case of FDD-TDD handover.]

[TDD - In case the SFN<sub>target</sub> can be measured, the target cell OFF<sub>target</sub> is calculated using formula (9.9):

$$OFF_{target} = (SFN_{target} - CFN) \mod 256$$
 (9.9)

otherwise a value as defined in [14] is reported.]

Note that, regarding the CFN, two cases may occur:

- a) the value of OFF<sub>target</sub> is known by the UTRAN before handover execution:
  - a1) either because the  $SFN_{target}$  has been measured by the UE and reported to the UTRAN by means of the  $OFF_{target}$  before handover;
  - a2) or because the UTRAN already knows the difference between serving cell SFN<sub>source</sub> and target cell SFN<sub>target</sub> and derives OFF<sub>target</sub> from OFF<sub>source</sub> by applying the difference between SFN<sub>target</sub> and SFN<sub>source</sub> (this difference between SFNs may be known in the UTRAN from previous UE's measurement reports);
  - a3) [TDD or because cells involved in the handover are synchronised and hence  $OFF_{target}$  equals  $OFF_{source}$ ].
- b) the value of OFF<sub>target</sub> is not known by the UTRAN before handover execution because the SFN<sub>target</sub> cannot be measured by the UE before handover and the UTRAN does not know the difference between serving cell SFN and target cell SFN.

In case a) the UTRAN shall not signal to the UE any value of [FDD- DOFF<sub>FDD</sub>] [TDD- DOFF<sub>TDD</sub>] before handover in the RRC message PHYSICAL CHANNEL RECONFIGURATION, and the UE shall maintain the old CFN, i.e. no correction to CFN is needed during handover.

In case b) the UTRAN shall signal to the UE the new value of [FDD- DOFF<sub>FDD</sub>] [TDD- DOFF<sub>TDD</sub>] before handover by means of the RRC message PHYSICAL CHANNEL RECONFIGURATION. The CFN shall be re-initialised after handover (as soon as the UE reads the SFN<sub>target</sub>) according to formula [FDD- (9.4)] [TDD- (9.5)].

Note that in cases a2) and a3) the UTRAN may not request the UE to report OFF<sub>target</sub>, while in case b) the value of OFF<sub>target</sub> reported by the UE is the one defined in [FDD - 13], [TDD - 14] for this case.

### 9.4 Synchronisation of L1 configuration changes

When a synchronised L1 configuration change shall be made, the SRNC commands the related Node B's to prepare for the change. When preparations are completed and SRNC informed, serving RNC decides appropriate change time. SRNC tells the CFN for the change by a suitable RRC message. The Node B's are informed the CFN by RNSAP and NBAP Synchronised Radio Link Reconfiguration procedures.

At indicated switch time UE and Node B's change the L1 configuration.

## 9.5 Examples of synchronisation counters during state transitions

The example of Figure 20 shows the corrections applied to UTRAN synchronisation counters during multiple transitions from CELL\_FACH/PCH state to CELL\_DCH state before and after handover, without SRNS relocation. In this example two handover cases described in 9.3.2 are considered.

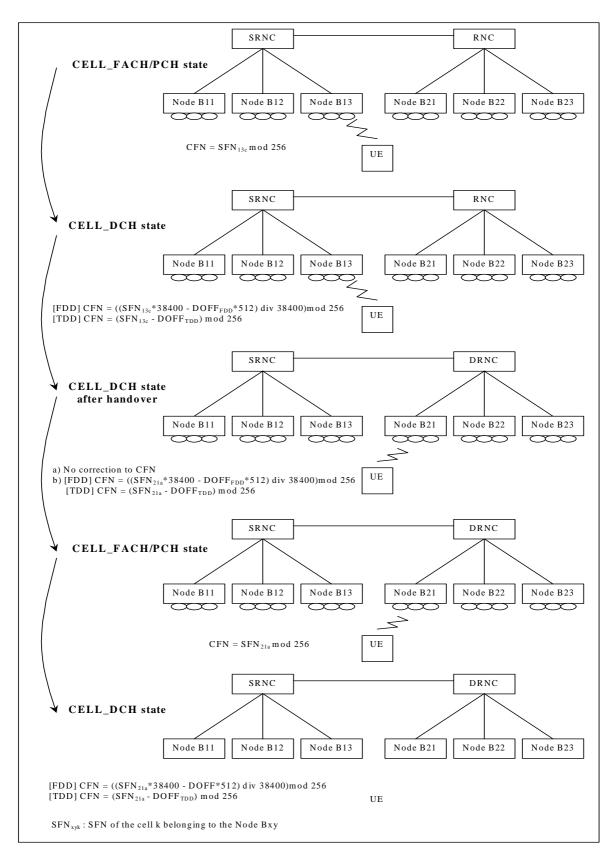


Figure 20: Example 1

The example of Figure 21 shows the corrections applied to UTRAN synchronisation during multiple transitions from CELL\_FACH/PCH state to CELL\_DCH state after cell reselection, without SRNC relocation.

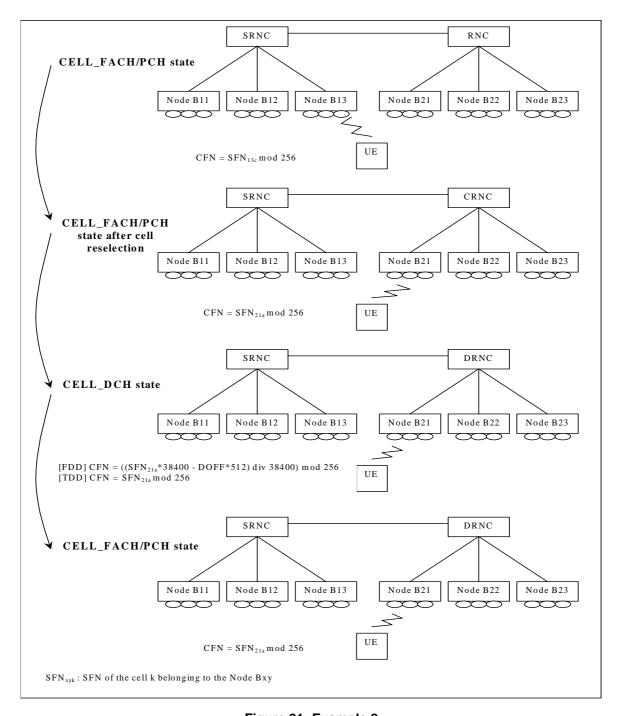


Figure 21: Example 2

The example of Figure 22 shows the corrections applied to UTRAN synchronisation counters during multiple transitions from CELL\_FACH/PCH state to CELL\_DCH state before and after handover and SRNS relocation (without UE involvement). In this example two handover cases described in 9.3.2 are considered.

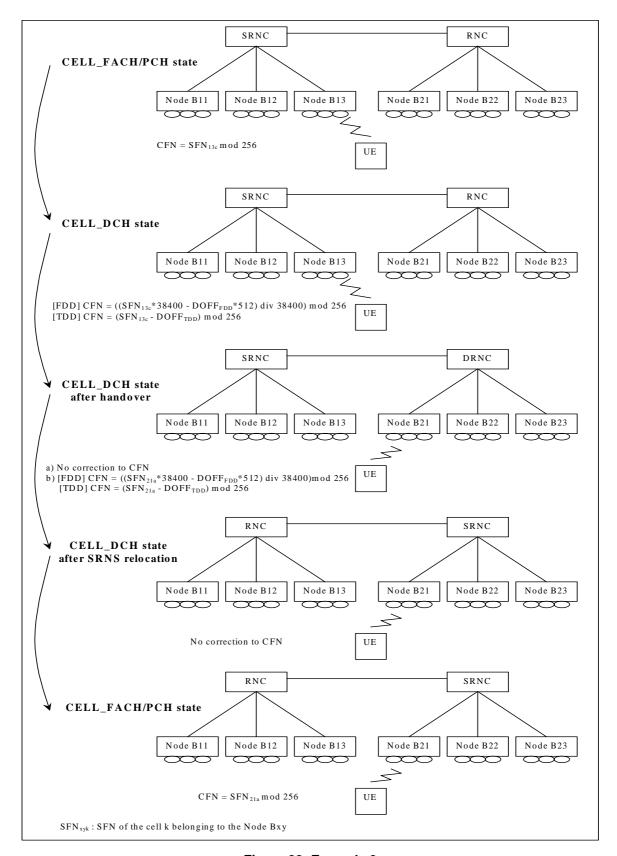


Figure 22: Example 3

## 10 Time Alignment Handling

The purpose of the time alignment procedure over Iu is to minimise the buffering delay in SRNC by controlling the DL transmission timing in the CN node. The time alignment procedure is controlled by SRNC and is invoked whenever the SRNC detects the reception of Iu User Plane PDU at an inappropriate timing that leads to an unnecessary buffering delay. The SRNC indicates to the CN node by means of a Time Alignment control frame. The necessary amount of the delay or advance adjustment is indicated by expressing a number of (+/-) 500 µs steps (see Figure 23).

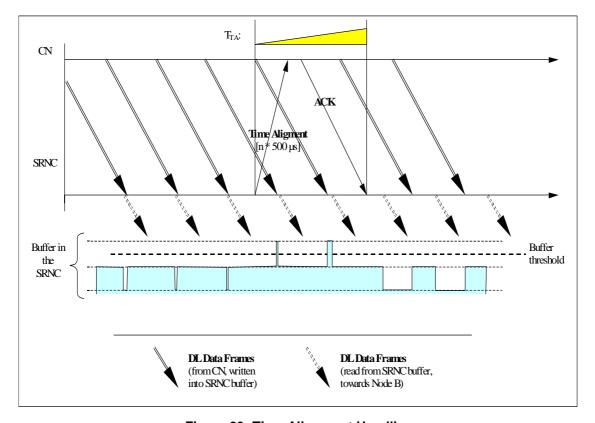


Figure 23: Time Alignment Handling

A supervision timer  $T_{TA}$  is started after sending the Time Alignment control frame in order to supervise the reception of the Time Alignment Acknowledgement control frame.

The requested CN node adjusts the transmission timing by the amount as indicated by SRNC and sends a time alignment acknowledgement frame (ACK). Upon reception of a time alignment acknowledgement frame, the SRNC stops the supervision timer  $T_{TA}$ .

The procedure can be signalled at any time when transfer of user data is not suspended by another control procedure.

If the Time Alignment control frame could not be handled by the requested CN node, a time alignment negative acknowledgement control frame (NACK) is sent with a corresponding cause. When the SRNC receives a NACK with cause "Time Alignment not supported", then the SRNC shall not send additional Time Alignment frames for that RAB (unless the Iu User Plane conditions change for that RAB). The cause value "Requested Time Alignment not possible" is used to indicate that the requested time alignment was not possible at that moment. At a later moment the SRNC may initiate a new Time Alignment command when needed.

If the SRNC detects that the time alignment command has not been correctly interpreted or received, i.e. NACK received or timer expires, and the time alignment need still persists, the SRNC should re-trigger a time alignment procedure. If after "k" repetitions, the error situation persists, the SRNC take appropriate local actions.

Upon reception of a NACK, the SRNC stops the supervision timer  $T_{TA}$ .

In order to avoid oscillation in the time alignment handling over Iu, it is beneficial to avoid initiating a new Time Alignment procedure too early after successful completion of a Time Alignment procedure.

# Annex A (informative): Change history

Change history							
TSG RAN#	Version	CR	Tdoc RAN	New Version	Subject/Comment		
RAN_06	-	-	RP-99739	3.0.0	Approved at TSG RAN #6 and placed under Change Control		
RAN_07	3.0.0	-	-	3.1.0	Approved at TSG RAN #7		
RAN_08	3.1.0	-	RP-000232	3.2.0	Approved at TSG RAN #8		
RAN_09	3.2.0	007 008 009	RP-000371	3.3.0	Approved at TSG RAN #9		
RAN_10	3.3.0	010 011 012	RP-000608	3.4.0	Approved at TSG RAN #10		
RAN 11	3.4.0	013	RP-010108	3.5.0	Approved at TSG RAN #11		

## History

Document history						
V3.0.0	January 2000	Publication				
V3.1.0	March 2000	Publication				
V3.2.0	June 2000	Publication				
V3.3.0	September 2000	Publication				
V3.4.0	December 2000	Publication				
V3.5.0	March 2001	Publication				