ETSI TS 132 522 V10.3.0 (2012-01)



Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE; Telecommunication management; Self-Organizing Networks (SON) Policy Network Resource Model (NRM) Integration Reference Point (IRP); Information Service (IS) (3GPP TS 32.522 version 10.3.0 Release 10)



Reference RTS/TSGS-0532522va30

> Keywords GSM,LTE,UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services: http://portal.etsi.org/chaircor/ETSI_support.asp

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

> © European Telecommunications Standards Institute 2012. All rights reserved.

DECTTM, PLUGTESTSTM, UMTSTM and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members. **3GPP**[™] and **LTE**[™] are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://ipr.etsi.org).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <u>http://webapp.etsi.org/key/queryform.asp</u>.

Contents

Intelle	ectual Property Rights	2
Forew	ord	2
Forew	ord	5
Introd	uction	5
1	Scope	6
2	References	6
3	Definitions and abbreviations	
3.1	Definitions	
3.2	Abbreviations	
4	SON Policy and Optimization Function Definitions	8
4.1	Monitoring and Management Operations for Self-Optimization	
4.1.1	Monitoring and Management Function	
4.1.1.1	0	
4.2	Load Balancing Optimization Function	
4.2.1	Objective and Targets	
4.2.2 4.2.3	Parameters To Be Optimized Optimization Method	
4.2.3.1		
4.2.3.1		
4.2.4	Architecture	
4.2.4.1		
4.2.4.2		
4.2.5	PM	
4.3	Handover (HO) Parameter Optimization Function	
4.3.1	Objective and Targets	
4.3.2	Parameters To Be Optimized	11
4.3.3	Optimization Method	
4.3.3.1		
4.3.3.2		
4.3.4	Architecture	
4.3.4.1		
4.3.4.2		
4.3.5 4.4	PM Interference Control Function	
4.4 4.5	Capacity and Coverage Optimization Function	
4.5.4	Architecture	
4.5.4.1		
4.5.4.2		
4.6	RACH Optimization Function	
4.6.1	Objective and Targets	
4.6.2	Parameters to be optimized	17
4.6.3	Optimization Method	17
4.6.3.1		
4.6.3.2		
4.6.4	PM	
4.7	Optimization coordination	
4.7.1	Introduction	
4.7.2 4.7.3	Coordination between SON functions below Itf-N and CM operations over itf-N Coordination between different SON functions	
4.7.3.1		
4.7.3.1		
4.7.3.1	1	
4.7.3.1		
		-

5	Information Object Classes (IOCs)	
5.1	Information entities imported and local labels	
5.2	Class diagram	
5.2.1	Attributes and relationships	
5.2.2	Inheritance	
5.3	Information Object Class (IOC) definitions	
5.3.1	SONT argets	
5.3.1.1	1 Definition	
5.3.1.2	2 Attributes	
5.3.1.3	3 Attribute constraints	
5.3.1.4	4 Notifications	
5.3.2	SONControl	
5.3.2.1	1 Definition	
5.3.2.2	2 Attributes	
5.3.2.3	3 Attribute constraints	
5.3.2.4	4 Notifications	
5.3.3	ESPolicies	
5.3.3.1	1 Definition	
5.3.3.2	2 Attributes	
5.3.3.3	3 Attribute constraints	
5.3.3.4	4 Notifications	
5.3.4	EUtranCellSON	23
5.3.4.1	1 Definition	
5.3.4.2	2 Attributes	
5.3.4.3	3 Attribute constraints	
5.3.4.4	4 Notifications	
5.3.5	Void	
5.4	Information relationship definitions	
5.5	Information attribute definitions	
5.5.1	Definition and legal values	
5.5.2	Constraints	
5.6	Common Notifications	
5.6.1	Configuration notifications	
Anne	ex A (informative): Target Achievement Evaluation	
Anne	ex B (informative): Change history	
Histor	Dry	

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

Introduction

The present document is part of a TS-family covering the 3rd Generation Partnership Project Technical Specification Group Services and System Aspects, Telecommunication management; as identified below:

- 32.521: Self-Organizing Networks (SON) Policy Network Resource Model (NRM) Integration Reference Point (IRP): Requirements
- 32.522: Self-Organizing Networks (SON) Policy Network Resource Model (NRM) Integration Reference Point (IRP): Information Service (IS)
- 32.526: Self-Organizing Networks (SON) Policy Network Resource Model (NRM) Integration Reference Point (IRP): Solution Set (SS) definitions

1 Scope

The present document is part of an Integration Reference Point (IRP) named Self Organizing Networks (SON) Policy Network Resource Model (NRM) IRP, through which an IRPAgent can communicate management information to one or several IRPManagers concerning SON policies. The SON policy NRM IRP comprises a set of specifications defining Requirements, a protocol neutral Information Service and one or more Solution Set(s).

The present document specifies the protocol neutral SON policy NRM IRP: Information Service (IS).

In order to access the information defined by this NRM, an Interface IRP such as the "Basic CM IRP" is needed (3GPP TS 32.602 [11]). However, which Interface IRP is applicable is outside the scope of the present document.

The present document also contains stage 2 descriptions for those functionalities for the Self-Optimization OAM.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TS 32.101: "Telecommunication management; Principles and high level requirements".
- [2] 3GPP TS 32.102: "Telecommunication management; Architecture".
- [3] 3GPP TS 32.150: "Telecommunication management; Integration Reference Point (IRP) Concept and definitions".
- [4] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [5] 3GPP TS 32.521: "Telecommunication management; Self-Organizing Networks (SON) Policy Network Resource Model (NRM) Integration Reference Point (IRP): Requirements".
- [6] 3GPP TS 36.331: "Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Resource Control (RRC); Protocol specification".
- [7] 3GPP TS 36.423: "Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 Application Protocol (X2AP)".
- [8] 3GPP TS 32.425: "Technical Specification Group Services and System Aspects; Telecommunication management; Performance Management (PM); Performance measurements; Evolved Universal Terrestrial Radio Access Network (E-UTRAN)"
- [9] 3GPP TS 32.622: "Telecommunication management; Configuration Management (CM); Generic network resources Integration Reference Point (IRP): Network Resource Model (NRM)"
- [10] 3GPP TS 32.762: "Telecommunication management; Configuration Management (CM); Evolved Universal Terrestrial Radio Access Network (E-UTRAN) network resources Integration Reference Point (IRP): Network Resource Model (NRM)"
- [11] 3GPP TS 32.602: "Telecommunication management; Configuration Management (CM); Basic CM Integration Reference Point (IRP) Information Service (IS)".
- [12] 3GPP TS 36.413: "Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)".

- [13] 3GPP TS 36.314: "Evolved Universal Terrestrial Radio Access (E-UTRA); Layer 2 Measurements".
 - [14] 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2 ".
 - [15] 3GPP TS 37.320: "Universal Terrestrial Radio Access (UTRA) and Evolved Universal Terrestrial Radio Access (E-UTRA); Radio measurement collection for Minimization of Drive Tests (MDT); Overall description; Stage 2".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TS 32.101 [1], TS 32.102 [2], TS 32.150 [3] and TR 21.905 [4] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TS 32.521 [5], TS 32.101 [1], TS 32.102 [2] and TR 21.905 [4], in that order.

Target: See 3GPP TS 32.521 [5].

Trigger condition: See 3GPP TS 32.521 [5].

Hand-Over parameter Optimisation: See clause 4.3 of this document and Mobility Robustness Optimisation (MRO) are synonyms (see TS 36.300 [14]).

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [4], TS 32.521 [5] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [4] and TS 32.521 [5].

CAC	Composite Available Capacity
CDF	Cumulative Distribution Function
EM	Element Manager
eNodeB, eNB	evolved NodeB
E-UTRAN	Evolved Universal Terrestrial Radio Access Network
HO	Handover
HOO	HandOver parameter Optimization
ICIC	Inter Cell Interference Coordination
IOC	Information Object Class
LB	Load Balancing
LBO	Load Balancing Optimization
MRO	Mobility Robustness Optimisation
NM	Network Manager
NRM	Network Resource Model
OAM	Operation Administration Maintenance
RO	RACH Optimization
SON	Self Organizing Networks
UE	User Equipment

4 SON Policy and Optimization Function Definitions

4.1 Monitoring and Management Operations for Self-Optimization

4.1.1 Monitoring and Management Function

4.1.1.1 Usage of Itf-N

For specifically defined Itf-N NRM Interface see clause 5.

4.2 Load Balancing Optimization Function

4.2.1 Objective and Targets

The objective of LB Optimization is to cope with undesired traffic load distribution and to minimize the number of handovers and redirections needed to achieve the load balancing. One of the following targets or the combination of the following targets shall be used. The specific target value or values shall be configured by operators. Operators should assign weights for targets being used.

Torgata drawn	from the follor	wing table con	be configured for	
Targets thawn	mom me ionov	while table call	be configured for	DILDU.

Target Name	Definition	Legal Values
RRC connection establishments failure rate related to load	The number of Failed RRC connection establishments related to load/ The total number of Attempted RRC connection establishments.	Integer [0100] in unit percentage
	The target is met if the actual rate is smaller than the target value.	
E-RAB setup failure rate related to load	The number of E-RAB setup failure related to load/ The total number of attempted E-RAB setup	Integer [0100] in unit percentage
	For E-RAB setup failure related to load, the causes 'Reduce load in serving cell' and 'Radio resources not available' defined in TS 36.413 [12] could be used.	
	The target is met if the actual rate is smaller than the target value.	
RRC Connection Abnormal Release Rate Related to Load	The number of abnormal RRC connection release related to load/ The total number of RRC connection release.	Integer [0100] in unit percentage
	The target is met if the actual rate is smaller than the target value.	
E-RAB Abnormal Release Rate Related to Load	The number of E-RAB abnormal release related to load/ The total number of E-RAB release	Integer [0100] in unit percentage
	For E-RAB setup failure related to load, the causes 'Reduce load in serving cell' and 'Radio resources not available' defined in TS 36.413 [12] could be used.	
	The target is met if the actual rate is smaller than the target value.	
Rate of failures related to handover	(the number of failure events related to handover) / (the total number of handover events)	Integer [0100] in unit percentage
	The target is met if the actual rate is smaller than the target value.	

For the following targets out of the above table, the target values depend on the composite available capacity range in the cell and are defined separately for uplink and downlink. For these tuples can be configured, indicating the capacity ranges together with the target value valid in that range.

RRC connection establishments failure rate related to load,

E-RAB setup failure rate related to load,

RRC Connection Abnormal Release Rate Related to Load,

E-RAB Abnormal Release Rate Related to Load

For the following targets shall be identical with the corresponding targets defined in Handover Optimization.

Rate of failures related to handover

4.2.2 Parameters To Be Optimized

To reach load optimization target, LBO may optimize some mobility settings (HO and/or idle mobility configuration) defined in TS 36.331 [6].

4.2.3 Optimization Method

4.2.3.1 Problem Detection

The problem detection is out of scope of this specification.

4.2.3.2 Problem Solution

The problem solution is out of scope of this specification.


4.2.4 Architecture

4.2.4.1 Definition of Logical Functions

LB Monitor Function: This function is used for monitoring the load balance optimization (e.g. Monitoring related performance counters or alarms).

LB Policy control function: This function is used for configuring the load balance optimization policies.

4.2.4.2 Location of Logical Functions

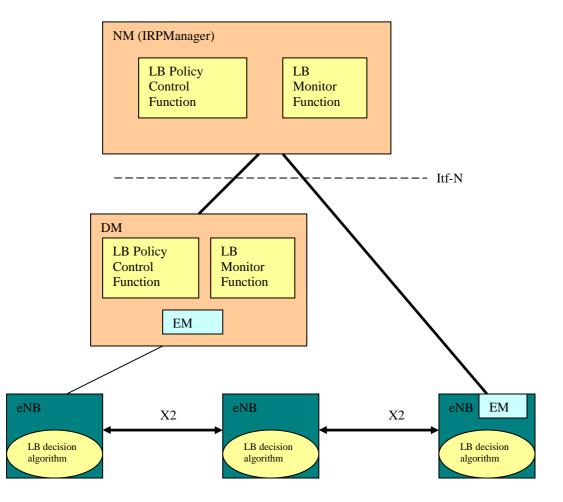

For Load Balancing, the SON LB decision algorithm is located in eNB. The detailed SON functionalities in eNB are out of scope of this specification.

4.2.5 PM

IRPManager may collect Load balancing related performance measurements. Performance Measurements related with Load balancing are captured in the table below:

Performance measurement name	Description	Related targets
The number of Failed RRC connection establishments related to load	Refer to 3GPP TS 32.425 [8] Failed RRC connection establishments	RRC connection establishments failure rate related to load
The total number of Attempted RRC connection establishments	Refer to 3GPP TS 32.425 [8] Attempted RRC connection establishments	RRC connection establishments failure rate related to load
The number of E-RAB setup failure related to load	Refer to 3GPP TS 32.425 [8] Number of initial SAE Bearers failed to setup	E-RAB setup failure rate related to load
The total number of attempted E- RAB setup	Refer to 3GPP TS 32.425 [8] Number of initial SAE Bearers attempted to setup	E-RAB setup failure rate related to load
The number of abnormal RRC connection release related to load	Number of UE CONTEXT Release Request initiated by eNodeB	RRC Connection Abnormal Release Rate Related to Load
The total number of RRC connection release	Number of Successful UE Context Release	RRC Connection Abnormal Release Rate Related to Load
The number of E-RAB abnormal release related to load	Refer to 3GPP TS 32.425 [8] Number of SAE Bearers requested to release initiated by eNodeB per cause	E-RAB Abnormal Release Rate Related to Load
The total number of E-RAB release	Refer to 3GPP TS 32.425 [8] Number of SAE Bearers successfully released	E-RAB Abnormal Release Rate Related to Load
the number of failure events related to handover	Refer to 4.3.5	Rate of failures related to handover
the total number of handover events	Refer to 4.3.5	Rate of failures related to handover

NOTE: The monitoring of performance measurements will make use of existing PM IRP.

4.3 Handover (HO) Parameter Optimization Function

4.3.1 Objective and Targets

For intra-LTE, one of the following targets or the combination of the following targets shall be used. The specific target value shall be configured by operators. Operators should assign weights for targets being used.

Target Name	Definition	Legal Values
Rate of failures related to handover	(the number of failure events related to handover) / (the total number of handover events)	Integer [0100] in unit percentage
	The target is met if the actual rate is smaller than the target value.	poroonlago

The objective of minimizing the number of unnecessary handovers shall always be pursued in case the other target/s configured by the operator is/are achieved. This objective may not need configuration of a target value.

4.3.2 Parameters To Be Optimized

The tables below summarise the handover parameters in TS 36.331 [6].

Table 4.3.2-1. Handover parameters that may be optimized for intra-frequency and inter-frequencyhandovers

Event	Summary	Tunable parameters	
A3	Neighbour becomes offset better than serving	Ofn, Ofs, Ocn, Ocs, Hys, Off, timeToTrigger	
A4	Neighbour becomes better than threshold	Ofn, Ocn, Hys, Thresh, Off, timeToTrigger	
A5	Serving becomes worse than threshold1 and	Ofn, Ocn, Hys, Thresh1, Thresh2, Off,	
	neighbour becomes better than threshold2	timeToTrigger	

Table 4.3.2-2. Handover parameters that may be optimised for inter RAT handover

Event	Summary	Tunable parameters
B1	Inter RAT Neighbour becomes better than threshold	Ofn, Hys, Thresh, timeToTrigger
B2	Serving becomes worse than threshold1 and inter RAT neighbour becomes better than threshold2	Ofn, Hys, Thresh1, Thresh2, timeToTrigger

4.3.3 Optimization Method

4.3.3.1 Problem Detection

HO Parameter Optimization Function shall focus on detecting the problem scenarios described in TS 32.521 [5]; namely: too early handovers, too late handovers and inefficient use of NW resources due to HOs. For more information about these scenarios see TS 32.521 [5] section 6.1.3.

The following inputs may be used for the identification of the problem scenarios:

- Event capture and analysis
- UE measurements
- Performance measurements

In event capture and analysis, the eNodeB exploits event information associated with a UE context, such as evidence of previous handovers (UE History, see TS 36.423 [7]) and HO failure details (such as in which cell the handover failed and where the UE re-established the connection).

UE measurements are sent within UE measurement reports and they may indicate whether HOs are too early or too late.

HO-related performance measurements (PMs) collected at the source and / or target eNB can be useful in detecting HOrelated issues on the cell level. Since the impact of incorrect HO parameter setting will also be on the cell-level, PMs can provide useful information that can be used to detect and resolve HO-related issues due to incorrect parameter settings.

4.3.3.2 Problem Solution

HO Parameter Optimization Function will aim at optimizing the HO parameters listed in Section 4.3.2 in such way to mitigate the problem scenarios discussed in Section 4.3.3.1. The optimization algorithms will not be specified. The exact set of HO parameters that may be adjusted by the algorithms is dictated by the choice of triggered HO measurements made by the RRM entity in an eNodeB.

4.3.4 Architecture

4.3.4.1 Definition of Logical Functions

HO Parameter Optimization Monitor Function: This function is used for monitoring the handover parameter optimization (e.g. monitoring related performance counters or alarms).


HO Parameter Optimization Policy Control Function: This function is used for configuring the handover parameter optimization policies.

4.3.4.2 Location of Logical Functions

For HandOver (HO) parameter optimization there are several options for the location of the SON algorithm:

- 1. The SON algorithm is located in the eNB(s).
- 2. The SON algorithm is located in the EM, the parameter changes are executed in the eNBs.

An example for the first option is shown in figure 4.3.4.2:

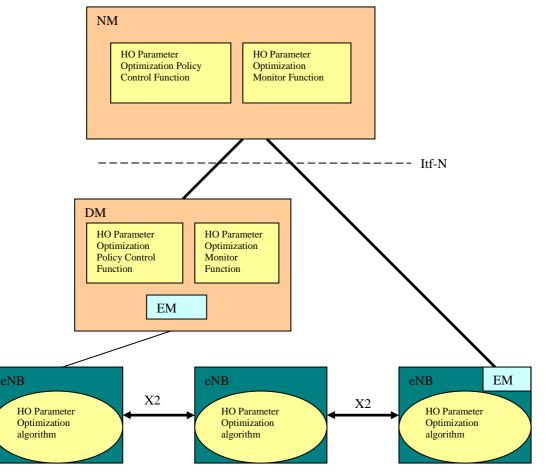



The detailed SON functionalities in eNB are out of scope of this specification.

4.3.5 PM

IRPManager shall collect HO-related performance measurements from the source and / or target eNB which can be useful in detecting HO-related issues on the cell level. The following input can be used for the identification of the problem scenarios specified:

The number of RLF event happened within an interval after handover success.

Performance Measurements related to handover failure are captured in the table below.

The Performance Measurements are for outgoing handovers. Further, they should be available on a cell relation basis.

Performance measurement name	Description	Related targets
Number of handover events	Includes successful handovers plus all identified failures	Rate of failures related to handover
Number of HO failures	All failure cases	Rate of failures related to handover
Number of too early HO failures	Too early HO failure cases	Rate of failures related to handover
Number of too late HO failures	Too late HO failure cases	Rate of failures related to handover
Number of HO failures to wrong cell	HO failures to wrong cell	Rate of failures related to handover

NOTE: The monitoring of performance measurements will make use of existing PM IRP.

4.4 Interference Control Function

4.5 Capacity and Coverage Optimization Function

4.5.1 Objective and Targets

The objective of capacity and coverage optimization is to provide optimal coverage and capacity for the radio network. A tradeoff between capacity and coverage needs to be considered.

The detailed target(s) FFS.

4.5.2 Parameters to be optimized

To reach capacity and coverage optimization targets, the following parameters may be optimized:

- Downlink transmit power
- Antenna tilt
- Antenna azimuth

4.5.3 Optimization Method

4.5.3.1 Problem Detection

The main symptoms of capacity and coverage optimization problems (see TS 37.320 [15]) are:

Coverage hole: A coverage hole is an area where the pilot signal strength is below a threshold which is required by a UE to access the network, or the SINRs of both serving and neighbor cells is below a level needed to maintain the basic service. Coverage holes are usually caused by physical obstructions such as new buildings, hills, or by unsuitable antenna parameters, or just inadequate RF planning. UE in coverage hole will suffer from call drop and radio link failure. Typical phenomenon of coverage hole is either HO failure happens frequently and cannot be optimized by HO parameter optimization or call drop happens frequently and cannot be rescued by RRC re-establishment.

Weak coverage: Weak coverage occurs when the pilot signal strength or the SNR (or SINR) of serving cell is below the level needed to maintain a planned performance requirement (e.g. cell edge bit-rate).

Pilot pollution: In areas where coverage of different cells overlap a lot, interference levels are high, power levels are high, energy consumption is high and cell performance may be low. Typically in this situation UEs may experience high SNR to more than one cell and high interference levels.

Overshoot coverage: Overshoot occurs when coverage of a cell reaches far beyond what is planned. It can occur as an 'island' of coverage in the interior of another cell, which may not be a direct neighbor. Reasons for overshoot may be reflections in buildings or across open water, lakes etc. UEs in this area may suffer call drops or high interference.

DL and **UL** channel coverage mismatch: DL channel coverage is larger than UL channel coverage is one typical scenario of DL and UL channel coverage mismatch. The UE will suffer UL problems when it moves into the mismatch area.

In a realistic network, these symptoms may be tolerated to a certain level. These symptoms may indicate a real problem when combined with other factors such as frequency of symptoms, duration of symptoms, or affected population.

The following inputs may be used for the identification of the problem scenarios:

- UE measurements
- Performance measurements
- Alarms, other monitoring information e.g. trace data

UE measurements are sent within UE measurement reports and they may indicate the capacity and coverage problem.

Capacity and coverage related performance measurements collected at the source and / or target eNB can be useful in detecting capacity and coverage related issues on the cell level. Minimizing Driver Test (MDT) or HO-related performance measurements may be used also in detecting capacity and coverage related issues on the cell level.

Alarms, other monitoring information e.g. trace data can be correlated to get an unambiguous indication of capacity and coverage problem.

4.5.3.2 Problem Solution

Capacity and coverage optimization function will aim at optimizing the parameters listed in Section 4.5.2 in such way to mitigate the problem scenarios discussed in Section 4.5.3.1.

4.5.4 Architecture

4.5.4.1 Definition of Logical Functions

CCO Monitor Function: This function is used for monitoring the capacity and coverage optimization (e.g. monitoring related performance counters, UE measurements or alarms).

CCO Policy Control Function: This function is used for configuring the capacity and coverage optimization policies.

4.5.4.2 Location of Logical Functions

For capacity and coverage optimization (CCO), there are several options for the location of the centralized CCO SON algorithm:

- 1. The CCO SON algorithm is located in the DM. The capacity and coverage optimization decision is made by the DM centralized CCO algorithm.
- 2. The CCO SON algorithm is located in the NM. The capacity and coverage optimization decision is made by the NM centralized CCO algorithm.

An example for the first option is shown in figure 4.5.4.2:

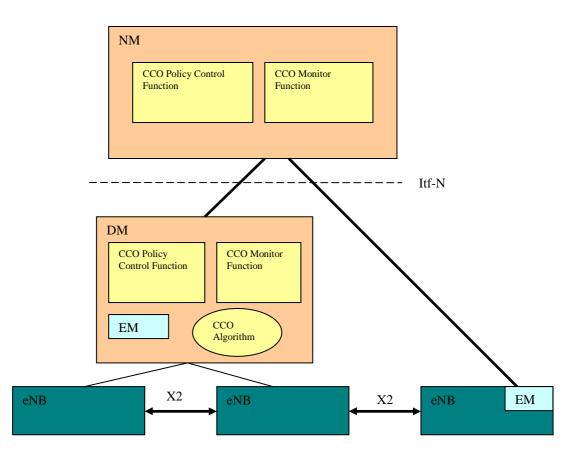


Figure 4.5.4.2: Example when the CCO SON algorithm is located in DM

The detailed CCO SON algorithm in OAM (NM centralized or EM centralized) is out of scope of this specification.

4.5.5 PM

The IRPAgent shall support a capability allowing the IRPManager to collect CCO related performance measurements to know the situation of coverage or interference which may then trigger corresponding optimization procedures. Performance measurements related with CCO are captured in the table below:

Performance measurement name	Description	Comment
Maximum carrier transmit power	Refer to 3GPP TS 32.425 [8] Maximum value of the total carrier power transmitted in a cell.	
Mean carrier transmit power	Refer to 3GPP TS 32.425 [8] Mean value of the total carrier power transmitted in a cell.	

4.6 RACH Optimization Function

4.6.1 Objective and Targets

The objective of RACH Optimization is to automatically set several parameters related to the performance of RACH. One of the following targets shall be used. The specific target value shall be configured by operators.

Target Name	Definition	Legal Values
Access Probability, <i>AP</i>	The probability that the UE has access after a certain random access attempt number.	CDF of access attempts. See section 5.5.1
	The target is met if the actual access probability is higher than the target probability value.	
Access Delay Probability, <i>ADP</i>	The probability distribution of Access Delay expected to be experienced by UEs accessing the RACH Channel.	CDF of delays. See section 5.5.1
	The target is met if the actual access probability is higher than the target probability value.	

4.6.2 Parameters to be optimized

To achieve RACH optimization target, RACH optimization function may optimize several parameters defined in TS 36.300 [14] section 22.4.3.

4.6.3 Optimization Method

4.6.3.1 Problem Detection

The problem detection is out of scope of this specification since the RACH optimization entity resides in the eNB.

4.6.3.2 Problem Solution

The problem solution is out of scope of this specification since the RACH optimization entity resides in the eNB.

4.6.4 PM

The IRPAgent shall support a capability allowing the IRPManager to collect RACH optimization related performance measurements. Performance measurements related with RACH optimization are captured in the table below:

Performance measurement name	Description	Related targets
Distribution of RACH preambles sent	Refer to 3GPP TS 32.425 [8] Cumulative Distribution of RACH preambles sent by UE	Access Probability, AP
Distribution of RACH access delay	Refer to 3GPP TS 32.425 [8] Cumulative Distribution of RACH Access Delay	Access Delay Probability, ADP

4.7 Optimization coordination

4.7.1 Introduction

For coordination of SON Functions whose outputs are not standardized, the context of optimization coordination is:

1. IRPManager uses standardized capabilities to set the SON Function(s) targets, and where needed their weights.

Operators should assign weights for targets being used. The weights are used also for the evaluation of the targets. For details see Annex A.

For coordination of SON Functions whose outputs are standardized, the context of optimization coordination is FFS.

4.7.2 Coordination between SON functions below Itf-N and CM operations over itf-N

FFS

4.7.3 Coordination between different SON functions

Note: The coordination between different SON functions should be decided case by case.

4.7.3.1 Coordination between Cell Outage Compensation and Energy Saving Management

4.7.3.1.1 Description

A conflict could arise between energy saving and cell outage compensation in the following scenario.

One or more candidate cells are configured to possibly take coverage of the original cell. The original cell is in energySaving state or is about to enter energySaving state. One or more candidate cells go into outage with the consequence that coverage of the original cell can not be provided any more.

4.7.3.1.2 Prevention

Prevention is hardly possible, except making the cells as outage proof as possible. But cell outages can happen even to the most stable cell in a network.

4.7.3.1.3 Resolution

If the original cell is in energySaving state, it shall leave energySaving state.

If the original cell is about to enter energySaving state, it shall not go into energySaving state until candidate cell outage is recovered and candidate cell is able to provide the coverage.

The original cell may go into the energySaving state after the candidate cell outage is recovered and coverage of the original cell can be taken over by candidate cell again.


5 Information Object Classes (IOCs)

5.1 Information entities imported and local labels

Label reference	Local label
ЗGPP TS 32.622 [9], IOC, тор	Тор
3GPP TS 32.622 [9], IOC, SubNetwork	SubNetwork
3GPP TS 32.762 [10], IOC, ENBFunction	ENBFunction
3GPP TS 32.762 [10], IOC, EUtranRelation	EUtranRelation
3GPP TS 32.762 [10], IOC, EUtranGenericCell	EUtranGenericCell

5.2 Class diagram

5.2.1 Attributes and relationships

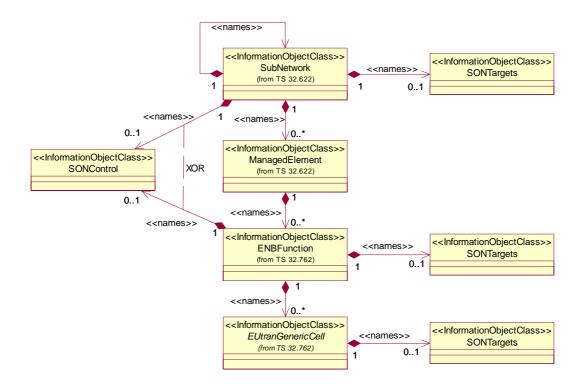

NOTE 1: IOC SONControl shall be instantiated whenever one or more IOC SONTargets are instantiated.

Figure 5.2.1-1: Cell view of SON Policy NRM

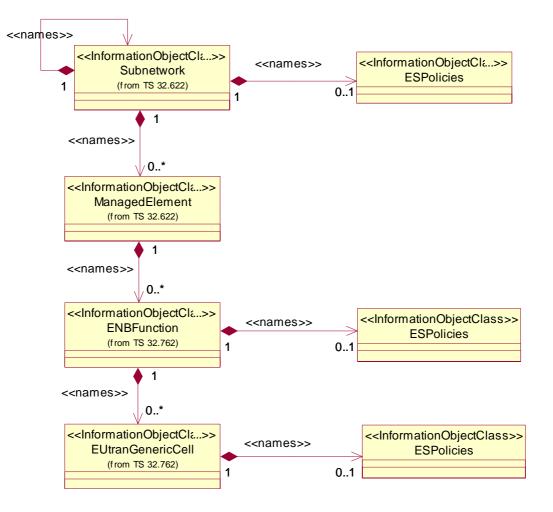


Figure 5.2.1-2: ES Policies NRM IOCs (Containment Relationship)

NOTE 2: Also IOC SONControl is used for ES purposes – see clause 5.3.2.2 – but is not shown in Figure 5.2.1-2 to avoid the impression that there would an additional instance of this IOC be needed for ES.

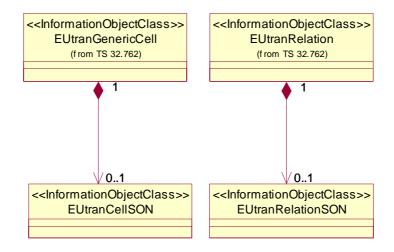
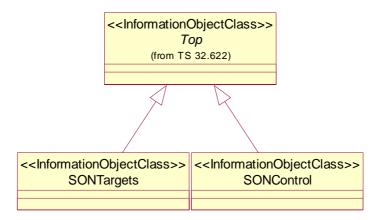


Figure 5.2.1-3: IOCs to control SON on cell or E-UTRAN relation level (Containment Relationship)

5.2.2 Inheritance





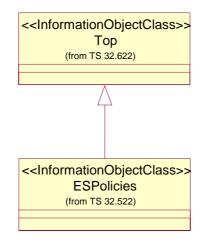


Figure 5.2.2-2: ES Polices NRM IOCs (Inheritance Relationship)

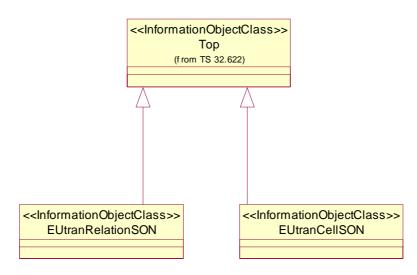


Figure 5.2.2-3: Inheritance for IOC to control SON on cell or E-UTRAN relation level

5.3 Information Object Class (IOC) definitions

5.3.1 SONTargets

5.3.1.1 Definition

This IOC represents targets for SON functions and their relative weights.

Target hierarchy rule:

An NRM IOC instance X may name-contain an IOC SONTargets instance T. The rule states that:

- If X name-contains a SONTargets instance T, then T is applicable to X.
- If X and all its superior instances do not name-contain any SONTargets instance, then no SONTargets instance is applicable to X.
- If X does not name-contain any SONTargets instance, but one or more of X"s superior instances name-contain a SONTargets instance, then the SONTargets instance of the superior instance closest to X, in X"s naming tree, is applicable to X.

5.3.1.2 Attributes

Attribute name	Support Qualifier	Read Qualifier	Write Qualifier
hoFailureRate	O *)	М	М
rrcConnectionEstablishmentFailureRateCharacteristic	O *)	М	М
rrcConnectionAbnormalReleaseRateCharacteristic	O *)	М	М
eRabSetupFailureRateCharacteristic	O *)	М	М
eRabAbnormalReleaseRateCharacteristic	O *)	М	М
rachOptAccessProbability	CM **)	М	М
rachOptAccessDelayProbability	CM **)	М	М

*) Note 1: At least one of the attributes shall be supported.

**) Note 2: Only one of these attributes shall be present.

5.3.1.3 Attribute constraints

Name	Definition
rachOptAccessProbability CM	RACH Optimization is supported and Access Probability is
Support Qualifier	supported as target.
rachOptAccessDelayProbability	RACH Optimization is supported and Access Delay
CM Support Qualifier	Probability is supported as target.

5.3.1.4 Notifications

The common notifications defined in subclause 5.6.1 are valid for this IOC, without exceptions or additions.

5.3.2 SONControl

5.3.2.1 Definition

This IOC represents the possibility to switch on or off SON functions. This is provided for Handover optimization, Load Balancing optimization, Energy Saving and Cell Outage Compensation. For other SON functions like Coverage and Capacity optimization, RACH optimization etc. this is FFS.

5.3.2.2 Attributes

Attribute name	Support Qualifier	Read Qualifier	Write Qualifier
hooSwitch	CM	М	М
lboSwitch	СМ	М	М
esSwitch	СМ	М	М
roSwitch	СМ	М	М
cocSwitch	СМ	M	М

5.3.2.3 Attribute constraints

Name	Definition
hooSwitch CM Support Qualifier	Handover (HO) parameter Optimization function is supported.
lboSwitch CM Support Qualifier	Load Balancing Optimization function is supported.
esSwitch Support Qualifier	The condition is 'Distributed ESM architecture is supported'.
roSwitch CM Support Qualifier	RACH Optimization is supported.
cocSwitch Support Qualifier	The condition is 'CoC is supported'. Only allowed to be present, if SONControl is contained in subnetwork IOC instance.

5.3.2.4 Notifications

The common notifications defined in subclause 5.6.1 are valid for this IOC, without exceptions or additions.

5.3.3 ESPolicies

5.3.3.1 Definition

This IOC represents the energy saving policies information. This object class is valid in a distributed ES architecture or in an EM-centralized ES architecture.

5.3.3.2 Attributes

Attribute name	Support Qualifier	Read Qualifier	Write Qualifier
esActivationOriginalCellLoadParameters	0	М	М
esActivationCandidateCellsLoadParameters	0	М	М
esDeactivationCandidateCellsLoadParameters	0	М	М

5.3.3.3 Attribute constraints

None.

5.3.3.4 Notifications

The common notifications defined in subclause 5.6.1 are valid for this IOC, without exceptions or additions

5.3.4 EUtranCellSON

5.3.4.1 Definition

This IOC represents the parameters for control of SON functions on E-UTRAN cell level.

5.3.4.2 Attributes

Attribute name	Support Qualifier	Read Qualifier	Write Qualifier
maximumDeviationHoTrigger	CM	М	М
minimumTimeBetweenHoTriggerChange	CM	М	М

5.3.4.3 Attribute constraints

Name	Definition
<pre>maximumDeviationHoTrigger Support Qualifier</pre>	The condition is "HOO function is supported".
minimumTimeBetweenHoTriggerChange Support Qualifier	The condition is "HOO function is supported".

5.3.4.4 Notifications

The common notifications defined in subclause 5.6.1 are valid for this IOC, without exceptions or additions.

5.3.5 Void

5.4 Information relationship definitions

None.

5.5 Information attribute definitions

5.5.1 Definition and legal values

Table 5.5.1.1 defines the attributes that are present in the Information Object Classes (IOCs) of the present document.

Table 5.5.1.1: Attributes definitions and legal values

Attribute Name	Definition	Legal Values
cocSwitch	This attribute allows the operator to enable/disable the COC functionality.	Enumerated {on, off}
	This attribute allows the operator to enable/disable	
	36.423 [7] has cell capacity class value as optional parameter in case of intra-LTE load balancing. If cell capacity class value is not present, than 36.423 assumes that bandwidth should be used instead to assess the capacity.	
	This target is suitable for LBO.	

eRabSetupFailu		
	The target is on the number of E-RAB setup failures	lowerEndOfCacRange and
reRateCharacte	related to load divided by the total number of	upperEndOfCacRange and
ristic	attempted E-RAB setups.	targetWeight:
	For E-RAB setup failure related to load the causes	See
	'Reduce load in serving cell' and 'Radio resources	eRabAbnormalReleaseRateCharacterist
	not available' defined in TS 36.413 are used.	ic
	This attribute allows to define for a value the	
	composite available capacity (CAC) range in which	eRabSetUpFailureRateTarget:
	the target is valid. For this, it contains one	Integer 0100 (representing a
	characteristic dependent on Uplink CAC, one for	percentage)
	Downlink CAC:	percentage,
	eRabSetupFailureRateCharacteristicDown	
	link and	
	eRabSetupFailureRateCharacteristicUpli	
	nk.	
	At least one of these charateristics must be present.	
	Together with the characteristic its targetWeight as	
	a SON target is defined as part of this attribute.	
	The characteristics have the following structure:	
	eRabSetupFailureRateCharacteristicDown	
	link:	
	List of one or more entries, each consisting of:	
	LowerEndOfCacRange,	
	UpperEndOfCacRange,	
	eRabSetUpFailureRateTarget	
	eRabSetupFailureRateCharacteristicUpli	
	nk:	
	List of one or more entries, each consisting of:	
	LowerEndOfCacRange,	
	UpperEndOfCacRange,	
	eRabSetUpFailureRateTarget	
	For CAC see	
	eRabAbnormalReleaseRateCharacteristic	
	This target is suitable for LBO.	
esActivationOr	This attribute indicates the traffic load threshold and	Threshold: Integer 0100 (Percentage
iginalCellLoad	the time duration, which are used by distributed ES	of PRB usage, see 3GPP TS 36.314
lginalCellLoad Parameters	algorithms to allow a cell to enter the energySaving	of PRB usage, see 3GPP TS 36.314 [13])
3	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
3	algorithms to allow a cell to enter the energySaving	of PRB usage, see 3GPP TS 36.314 [13])
5	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold.	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds)
5	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold.	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds)
Parameters	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage
Parameters esActivationCa ndidateCellsLo	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13])
Parameters esActivationCa ndidateCellsLo	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13])
Parameters esActivationCa ndidateCellsLo	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo adParameters	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold.	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds)
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13])
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13])
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have been above the threshold.	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds)
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells LoadParameters	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells LoadParameters	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have been above the threshold. This attribute determines whether the energy saving	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds)
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells LoadParameters esSwitch	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have been above the threshold. This attribute determines whether the energy saving function is enabled or disabled. This indicates the assigned HOO target of the	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) On, off A set of two numbers:
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells LoadParameters esSwitch	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have been above the threshold. This attribute determines whether the energy saving function is enabled or disabled. This indicates the assigned HOO target of the number of failure events related to handover divided	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) On, off A set of two numbers: the first indicates a percentage, the
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells LoadParameters esSwitch	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have been above the threshold. This attribute determines whether the energy saving function is enabled or disabled. This indicates the assigned HOO target of the number of failure events related to handover divided by the total number of handover events, together	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) On, off A set of two numbers: the first indicates a percentage, the second a targetWeight (see
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells LoadParameters esSwitch	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have been above the threshold. This attribute determines whether the energy saving function is enabled or disabled. This indicates the assigned HOO target of the number of failure events related to handover divided	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) On, off A set of two numbers: the first indicates a percentage, the second a targetWeight (see eRabAbnormalReleaseRateCharacterist
Parameters esActivationCa ndidateCellsLo adParameters esDeactivation CandidateCells LoadParameters esSwitch	algorithms to allow a cell to enter the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration, which are used by distributed ES algorithms level to allow a cell to enter the energySaving state. Threshold and duration are applied to the candidate cell(s) which will provides coverage backup of an original cell when it is in the energySaving state. The time duration indicates how long the load needs to have been below the threshold. This attribute indicates the traffic load threshold and the time duration which is used by distributed ES algorithms to allow a cell to leave the energySaving state. Threshold and time duration are applied to the cell(s) which provide coverage backup for the cell in energySaving state. The time duration indicates how long the load needs to have been above the threshold. This attribute determines whether the energy saving function is enabled or disabled. This indicates the assigned HOO target of the number of failure events related to handover divided by the total number of handover events, together	of PRB usage, see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) Threshold: Integer 0100 (Percentage of PRB usage (see 3GPP TS 36.314 [13]) TimeDuration: Integer (in unit of seconds) On, off A set of two numbers: the first indicates a percentage, the second a targetWeight (see

hooSwitch	This attribute determines whether the Handover parameter Optimization Function is activated or deactivated.	On, off
lboSwitch	This attribute determines whether the Load Balancing Optimization Function is activated or deactivated.	On, off
maximumDeviati onHoTrigger	This parameter allows the IRPManager to define the maximum allowed absolute deviation of the cell pair specific part of Handover Trigger (as defined in [14] (§22.4.1.4), from the default point of operation.	Integer (+1+96) Unit: 0.5 dB
minimumTimeBet weenHoTriggerC hange	This parameter defines the minimum allowed time interval between two changes of the Handover Trigger performed by MRO.	Integer (01440) Unit: Minutes

rachOptAccessD elayProbabilit Y	This is a list of target Access Delay probability (AD_P) for the RACH optimization function. Each instance AD_P of the list is the target time before the UE gets access on the random access channel, for the <i>P</i> percent of the successful RACH Access attempts with lowest access delay, over an unspecified sampling period. This target is suitable for RO.	Each element of the list, AD_{Pn} , is a pair (<i>a</i> , <i>b</i>) where <i>a</i> is the targetProbability (in %) and <i>b</i> is the access delay (in milliseconds). The legal values for <i>a</i> are 25, 50, 75, 90. The legal values for <i>b</i> are 10 to 560. If AD_{Px} ''s <i>a</i> is larger than that of AD_{Py} , then AD_{Px} ''s <i>b</i> must be larger than that of AD_{Py} .
		The number of elements specified is 4. The number of elements supported is vendor specific. The choice of supported values for <i>a</i> and <i>b</i> is vendor- specific.
rachOptAccessP robability	This is a list of target Access Probability (AP_n) for the RACH optimization function. Each instance AP_n of the list is the probability that the UE gets access on the random access channel within <i>n</i> number of attempts, over an unspecified sampling period. This target is suitable for RO.	Each element of the list, AP_n , is a pair (<i>a</i> , <i>n</i>) where <i>a</i> is the targetProbability (in %) and <i>n</i> is the access attempt number. The legal values for <i>a</i> are 25, 50, 75, 90. The legal values for <i>n</i> are 1 to 200. If AP_x ''s <i>a</i> is larger than that of AP_y , then AP_x ''s <i>n</i> must be larger than that of AP_y . The number of elements specified is 4. The number of elements supported is vendor specific. The choice of supported values for <i>a</i> and <i>n</i> is vendor- specific.
roSwitch	This attribute determines whether the RACH Optimization function is activated or deactivated.	On, off

~		
rrcConnectionA bnormalRelease	The target is on the number of abnormal RRC	lowerEndOfCacRange and
RateCharacteri	connection releases related to load divided by the total number of RRC connection releases.	upperEndOfCacRange and
stic	total number of RRC connection releases.	targetWeight:
SUIC	This attribute allows to define for a value the	See eRabAbnormalReleaseRateCharacterist
	composite available capacity (CAC) range in which	ic
	the target is valid. For this, it contains one	rrcConnectionAbnormalReleaseRateTar
	characteristic dependent on Uplink CAC, one for	
	Downlink CAC: rrcConnectionAbnormalReleaseRateCharac	get: Integer 0100 (representing a
	teristicDownlink and	v
	rrcConnectionAbnormalReleaseRateCharac	percentage)
	teristicUplink.	
	At least one of these charateristics must be present.	
	Together with the characteristic its targetWeight as	
	a SON target is defined as part of this attribute.	
	The characteristics have the following structure:	
	rrcConnectionAbnormalReleaseRateCharac	
	teristicDownlink:	
	List of one or more entries, each consisting of:	
	lowerEndOfCacRange,	
	upperEndOfCacRange,	
	rrcConnectionAbnormalReleaseRateTarget	
	rrcConnectionAbnormalReleaseCharacteri	
	sticUplink:	
	List of one or more entries, each consisting of:	
	lowerEndOfCacRange,	
	upperEndOfCacRange,	
	rrcConnectionAbnormalReleaseRateTarget	
	For CAC see	
	eRabAbnormalReleaseRateCharacteristic	
	This target is suitable for LBO.	
rrcConnectionE	The target is on the number of RRC connection	lowerEndOfCacRange and
stablishmentFa	establishment failures related to load divided by the	upperEndOfCacRange and
ilureRateChara	total number of attempted RRC connection	targetWeigth:
cteristic	establishments.	See
		eRabAbnormalReleaseRateCharacterist
	This attribute allows to define for a value the	ic
	composite available capacity (CAC) range in which	
	the target is valid. For this, it contains one	rrcConnectionEstablishmentFailureRate
	characteristic dependent on Uplink CAC, one for	Target:
	Downlink CAC:	Integer 0100 (representing a
	rrcConnectionEstablishmentFailureRateC	percentage)
	haracteristicDownlink and	
	rrcConnectionEstablishmentFailureRateC	
	haracteristicUplink.	
	At least one of these characteristics must be present.	
	Together with the characteristic its targetWeigth as	
	a SON target is defined as part of this attribute.	
	The characteristics have the following structure: rrcConnectionEstablishmentFailureRateC	
	haracteristicDownlink:	
	List of one or more entries, each consisting of:	
	lowerEndOfCacRange,	
	upperEndOfCacRange,	
	rrcConnectionEstablishmentFailureRateTarget	
	rrcConnectionEstablishmentFailureRateC	
	haracteristicUplink:	
	List of one or more entries, each consisting of:	
	lowerEndOfCacRange,	
	upperEndOfCacRange,	
	rrcConnectionEstablishmentFailureRateTarget	
	For CAC see	
	eRabAbnormalReleaseRateCharacteristic	

5.5.2 Constraints

None.

5.6 Common Notifications

5.6.1 Configuration notifications

Name	Qualifier	Notes
notifyAttributeValueChange	0	
notifyObjectCreation	0	
notifyObjectDeletion	0	

Annex A (informative): Target Achievement Evaluation

To evaluate the result of the optimization the target achievement needs to be evaluated. This can be done by calculating the Total Target Achievement as follows.

The Total Target Achievement is the sum of the products of the individual target achievement (difference between target and performance) and the individual targetWeights:

Total Target Achievement = $Sum_{i=1..n} [(minTarget_i - performance_i) x weight_i]$ $+ Sum_{j=1..n} [performance_j - maxTarget_j) x weight_j]$

where minTarget is a target to be minimized and maxTarget is a target to be maximized.

For targets with a substructure (like *Characteristic, see §5.5.1) the above formula is applied to each individual substructure target.

The higher the Total Target Achievement, the better is the result of the optimization.

Annex B (informative): Change history

	Change history						
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
2010-03	SA#47	SP-100053			Presentation to SA for Information and Approval		1.0.0
2010-03					Publication of SA approved version	1.0.0	9.0.0
2010-09	SA#49	SP-100491	001		Remove targets based on not supported by measurements	9.0.0	9.1.0
2010-12	SA#50	SP-100858	003	1	Correcting the support qualifiers of SONControl attributes	9.1.0	9.2.0
2010-12	SA#50	SP-100749	005	-	Disambiguate and correct the description of SON Targets hierarchy	9.1.0	9.2.0
2010-12	SA#50	SP-100833	002	3	Allow EM centralized architecture for Hand-over parameter optimization - Align with 32.500	9.2.0	10.0.0
2010-12	SA#50	SP-100866	004	3	Adding NRM for Energy Saving Management policies and ESM switch	9.2.0	10.0.0
2011-01				-	Correction of misimplementation of CR in clause 5.3.2.3 and CR history correction.	10.0.0	10.0.1
2011-03	SA#51	SP-110098	10	2	Introducing RACH optimization management	10.0.1	10.1.0
2011-03	SA#51	SP-110098	11	-	Rapporteur clean-up for editorial errors	10.0.1	10.1.0
2011-03	SA#51	SP-110100	13	3	Use ESPolicies also for EM centralized architecture	10.0.1	10.1.0
2011-03	SA#51	SP-110100	14	-	Correct cardinality of ESPolicies	10.0.1	10.1.0
2011-03	SA#51	SP-110097	16	-	Add a new attribute into SONControl object class to switch on/off Cell Outage Compensation - Align with 32.541	10.0.1	10.1.0
2011-06	SA#52	SP-110284	18	1	Finalization of Rel-10 SON functionalities	10.1.0	10.2.0
2011-06	SA#52	SP-110284	66	2	Add parameters to control Mobility Robustness Optimization	10.1.0	10.2.0
2011-12	SA#54	SP-110721	70	1	Correction MRO management of HO Trigger	10.2.0	10.3.0

History

	Document history				
V10.1.0	May 2011	Publication			
V10.2.0	June 2011	Publication			
V10.3.0	January 2012	Publication			