

ETSI TS 138 331 V18.7.0 (2025-10)



**5G;
NR;
Radio Resource Control (RRC);
Protocol specification
(3GPP TS 38.331 version 18.7.0 Release 18)**



Reference

RTS/TSGR-0238331vi70

Keywords

5G

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - APE 7112B
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° w061004871

Important notice

The present document can be downloaded from the
[ETSI Search & Browse Standards application](#).

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format on [ETSI deliver repository](#).

Users should be aware that the present document may be revised or have its status changed,
this information is available in the [Milestones listing](#).

If you find errors in the present document, please send your comments to
the relevant service listed under [Committee Support Staff](#).

If you find a security vulnerability in the present document, please report it through our
[Coordinated Vulnerability Disclosure \(CVD\)](#) program.

Notice of disclaimer & limitation of liability

The information provided in the present deliverable is directed solely to professionals who have the appropriate degree of experience to understand and interpret its content in accordance with generally accepted engineering or other professional standard and applicable regulations.

No recommendation as to products and services or vendors is made or should be implied.

No representation or warranty is made that this deliverable is technically accurate or sufficient or conforms to any law and/or governmental rule and/or regulation and further, no representation or warranty is made of merchantability or fitness for any particular purpose or against infringement of intellectual property rights.

In no event shall ETSI be held liable for loss of profits or any other incidental or consequential damages.

Any software contained in this deliverable is provided "AS IS" with no warranties, express or implied, including but not limited to, the warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights and ETSI shall not be held liable in any event for any damages whatsoever (including, without limitation, damages for loss of profits, business interruption, loss of information, or any other pecuniary loss) arising out of or related to the use of or inability to use the software.

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2025.
All rights reserved.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The declarations pertaining to these essential IPRs, if any, are publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the [ETSI IPR online database](#).

Pursuant to the ETSI Directives including the ETSI IPR Policy, no investigation regarding the essentiality of IPRs, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™**, **LTE™** and **5G™** logo are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **oneM2M™** logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners. **GSM®** and the GSM logo are trademarks registered and owned by the GSM Association.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found at [3GPP to ETSI numbering cross-referencing](#).

Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

Contents

Intellectual Property Rights	2
Legal Notice	2
Modal verbs terminology.....	2
Foreword.....	27
1 Scope	28
2 References	28
3 Definitions, symbols and abbreviations	31
3.1 Definitions	31
3.2 Abbreviations	34
4 General	37
4.1 Introduction	37
4.2 Architecture	38
4.2.1 UE states and state transitions including inter RAT	38
4.2.2 Signalling radio bearers	41
4.3 Services	42
4.3.1 Services provided to upper layers.....	42
4.3.2 Services expected from lower layers	42
4.4 Functions	42
5 Procedures	43
5.1 General	43
5.1.1 Introduction.....	43
5.1.2 General requirements.....	43
5.1.3 Requirements for UE in MR-DC	44
5.2 System information	44
5.2.1 Introduction.....	44
5.2.2 System information acquisition	46
5.2.2.1 General UE requirements.....	46
5.2.2.2 SIB validity and need to (re)-acquire SIB	46
5.2.2.2.1 SIB validity.....	46
5.2.2.2.2 SI change indication and PWS notification	48
5.2.2.3 Acquisition of System Information	49
5.2.2.3.1 Acquisition of <i>MIB</i> and <i>SIB1</i>	49
5.2.2.3.2 Acquisition of an SI message	50
5.2.2.3.3 Request for on demand system information	52
5.2.2.3.3a Request for on demand positioning system information	54
5.2.2.3.4 Actions related to transmission of <i>RRCSystemInfoRequest</i> message	56
5.2.2.3.5 Acquisition of SIB(s) or posSIB(s) in <i>RRC_CONNECTED</i>	56
5.2.2.3.6 Actions related to transmission of <i>DedicatedSIBRequest</i> message	57
5.2.2.4 Actions upon receipt of System Information	57
5.2.2.4.1 Actions upon reception of the <i>MIB</i>	57
5.2.2.4.2 Actions upon reception of the <i>SIB1</i>	58
5.2.2.4.3 Actions upon reception of <i>SIB2</i>	65
5.2.2.4.4 Actions upon reception of <i>SIB3</i>	66
5.2.2.4.5 Actions upon reception of <i>SIB4</i>	66
5.2.2.4.6 Actions upon reception of <i>SIB5</i>	67
5.2.2.4.7 Actions upon reception of <i>SIB6</i>	67
5.2.2.4.8 Actions upon reception of <i>SIB7</i>	67
5.2.2.4.9 Actions upon reception of <i>SIB8</i>	68
5.2.2.4.10 Actions upon reception of <i>SIB9</i>	69
5.2.2.4.11 Actions upon reception of <i>SIB10</i>	69
5.2.2.4.12 Actions upon reception of <i>SIB11</i>	69
5.2.2.4.13 Actions upon reception of <i>SIB12</i>	70
5.2.2.4.14 Actions upon reception of <i>SIB13</i>	71

5.2.2.4.15	Actions upon reception of <i>SIB14</i>	71
5.2.2.4.16	Actions upon reception of <i>SIBpos</i>	71
5.2.2.4.17	Actions upon reception of <i>SIB15</i>	72
5.2.2.4.18	Actions upon reception of <i>SIB16</i>	72
5.2.2.4.19	Actions upon reception of <i>SIB17</i>	72
5.2.2.4.19a	Actions upon reception of <i>SIB17bis</i>	72
5.2.2.4.20	Actions upon reception of <i>SIB18</i>	72
5.2.2.4.21	Actions upon reception of <i>SIB19</i>	72
5.2.2.4.22	Actions upon reception of <i>SIB20</i>	73
5.2.2.4.23	Actions upon reception of <i>SIB21</i>	73
5.2.2.4.24	Actions upon reception of <i>SIB22</i>	73
5.2.2.4.26	Actions upon reception of <i>SIB24</i>	73
5.2.2.4.27	Actions upon reception of <i>SIB25</i>	73
5.2.2.5	Essential system information missing	74
5.2.2.6	T430 expiry	74
5.3	Connection control	74
5.3.1	Introduction	74
5.3.1.1	RRC connection control	74
5.3.1.2	AS Security	75
5.3.2	Paging	76
5.3.2.1	General	76
5.3.2.2	Initiation	76
5.3.2.3	Reception of the <i>Paging message</i> by the UE or <i>PagingRecord</i> by the L2 U2N Remote UE	77
5.3.3	RRC connection establishment	79
5.3.3.1	General	79
5.3.3.1a	Conditions for establishing RRC Connection for NR sidelink communication/discovery/V2X sidelink communication/MP operation	80
5.3.3.1b	Void	81
5.3.3.2	Initiation	81
5.3.3.3	Actions related to transmission of <i>RRCSetupRequest</i> message	81
5.3.3.4	Reception of the <i>RRCSetup</i> by the UE	82
5.3.3.5	Reception of the <i>RRCReject</i> by the UE	87
5.3.3.6	Cell re-selection or cell selection or relay (re)selection while T390, T300 or T302 is running (UE in RRC_IDLE)	87
5.3.3.7	T300 expiry	88
5.3.3.8	Abortion of RRC connection establishment	90
5.3.4	Initial AS security activation	90
5.3.4.1	General	90
5.3.4.2	Initiation	90
5.3.4.3	Reception of the <i>SecurityModeCommand</i> by the UE	91
5.3.5	RRC reconfiguration	91
5.3.5.1	General	91
5.3.5.2	Initiation	93
5.3.5.3	Reception of an <i>RRCReconfiguration</i> by the UE	93
5.3.5.4	Secondary cell group release	110
5.3.5.5	Cell Group configuration	111
5.3.5.5.1	General	111
5.3.5.5.2	Reconfiguration with sync	112
5.3.5.5.3	RLC bearer release	115
5.3.5.5.4	RLC bearer addition/modification	115
5.3.5.5.5	MAC entity configuration	116
5.3.5.5.6	RLF Timers & Constants configuration	117
5.3.5.5.7	SpCell Configuration	117
5.3.5.5.8	SCell Release	118
5.3.5.5.9	SCell Addition/Modification	118
5.3.5.5.10	BH RLC channel release	119
5.3.5.5.11	BH RLC channel addition/modification	119
5.3.5.5.12	Uu Relay RLC channel release	120
5.3.5.5.13	Uu Relay RLC channel addition/modification	120
5.3.5.5.14	NCR-Fwd configuration	120
5.3.5.6	Radio Bearer configuration	121
5.3.5.6.1	General	121

5.3.5.6.2	SRB release	121
5.3.5.6.3	SRB addition/modification	121
5.3.5.6.4	DRB release	123
5.3.5.6.5	DRB addition/modification	124
5.3.5.6.6	Multicast MRB release	127
5.3.5.6.7	Multicast MRB addition/modification	127
5.3.5.7	AS Security key update	128
5.3.5.8	Reconfiguration failure	129
5.3.5.8.1	Void	129
5.3.5.8.2	Inability to comply with <i>RRCReconfiguration</i>	129
5.3.5.8.3	T304 expiry (Reconfiguration with sync Failure) or T420 expiry (Path switch failure)	131
5.3.5.9	Other configuration	133
5.3.5.9a	MUSIM gap configuration	138
5.3.5.10	MR-DC release	139
5.3.5.11	Full configuration	139
5.3.5.12	BAP configuration	142
5.3.5.12a	IAB Other Configuration	142
5.3.5.12a.1	IP address management	142
5.3.5.12a.1.1	IP Address Release	142
5.3.5.12a.1.2	IP Address Addition/Modification	142
5.3.5.13	Conditional Reconfiguration	144
5.3.5.13.1	General	144
5.3.5.13.2	Conditional reconfiguration removal	145
5.3.5.13.3	Conditional reconfiguration addition/modification	145
5.3.5.13.4	Conditional reconfiguration evaluation	146
5.3.5.13.4a	Conditional reconfiguration evaluation of SN initiated inter-SN CPC for EN-DC	149
5.3.5.13.5	Conditional reconfiguration execution	149
5.3.5.13.6	Subsequent CPAC reference configuration addition/removal	150
5.3.5.13.7	sk-Counter configuration addition/modification/removal	150
5.3.5.13.8	Subsequent CPAC execution	150
5.3.5.13a	SCG activation	153
5.3.5.13b	SCG deactivation	154
5.3.5.13b1	SCG activation without SN message	154
5.3.5.13c	FR2 UL gap configuration	155
5.3.5.13d	Application layer measurement configuration	155
5.3.5.14	Sidelink dedicated configuration	157
5.3.5.15	L2 U2N or U2U Relay UE configuration	159
5.3.5.15.1	General	159
5.3.5.15.2	L2 U2N or U2U Remote UE Release	160
5.3.5.15.3	L2 U2N or U2U Remote UE Addition/Modification	160
5.3.5.16	L2 U2N or U2U Remote UE configuration	161
5.3.5.16.1	L2 U2U Relay UE Release	162
5.3.5.16.2	L2 U2U Relay UE Addition/Modification	162
5.3.5.17	MP configuration	163
5.3.5.17.1	Introduction	163
5.3.5.17.2	Configuration of SL indirect path	163
5.3.5.17.2.1	General	163
5.3.5.17.2.2	SL indirect path specific configuration	163
5.3.5.17.2.3	T421 expiry (Indirect path addition/change failure)	163
5.3.5.17.3	Configuration of N3C indirect path	164
5.3.5.17.3.1	General	164
5.3.5.17.3.2	N3C remote UE configuration	164
5.3.5.17.3.2a	N3C Indirect path addition/change failure	164
5.3.5.17.3.3	N3C relay UE configuration	165
5.3.5.17.3.4	Bearer mapping management on N3C indirect path	165
5.3.5.17.3.4.1	Bearer mapping release	165
5.3.5.17.3.4.2	Bearer mapping addition and modification	165
5.3.5.18	LTM configuration and execution	165
5.3.5.18.1	LTM configuration	165
5.3.5.18.2	LTM candidate configuration release	166
5.3.5.18.3	LTM candidate configuration addition/modification	166
5.3.5.18.4	Void	167

5.3.5.18.5	Void	167
5.3.5.18.6	LTM cell switch execution	167
5.3.5.18.7	LTM configuration release	170
5.3.5.19	T348 expiry	170
5.3.6	Counter check	170
5.3.6.1	General	170
5.3.6.2	Initiation	171
5.3.6.3	Reception of the <i>CounterCheck</i> message by the UE	171
5.3.7	RRC connection re-establishment	171
5.3.7.1	General	171
5.3.7.2	Initiation	172
5.3.7.3	Actions following cell selection while T311 is running	176
5.3.7.3a	Actions following relay selection while T311 is running	179
5.3.7.4	Actions related to transmission of <i>RRCReestablishmentRequest</i> message	179
5.3.7.5	Reception of the <i>RRCReestablishment</i> by the UE	180
5.3.7.6	T311 expiry	183
5.3.7.7	T301 expiry or selected cell/L2 U2N Relay UE no longer suitable	183
5.3.7.8	Reception of the <i>RRCSetup</i> by the UE	183
5.3.8	RRC connection release	184
5.3.8.1	General	184
5.3.8.2	Initiation	184
5.3.8.3	Reception of the <i>RRCRelease</i> by the UE	184
5.3.8.4	T320 expiry	190
5.3.8.5	UE actions upon the expiry of <i>DataInactivityTimer</i>	190
5.3.8.6	T346g expiry	190
5.3.9	RRC connection release requested by upper layers	190
5.3.9.1	General	190
5.3.9.2	Initiation	190
5.3.10	Radio link failure related actions	190
5.3.10.1	Detection of physical layer problems in RRC_CONNECTED	190
5.3.10.2	Recovery of physical layer problems	191
5.3.10.3	Detection of radio link failure	191
5.3.10.4	RLF cause determination	194
5.3.10.5	RLF report content determination	194
5.3.11	UE actions upon going to RRC_IDLE	199
5.3.12	UE actions upon PUCCH/SRS release request	201
5.3.13	RRC connection resume	201
5.3.13.1	General	201
5.3.13.1a	Conditions for resuming RRC Connection for NR sidelink communication/positioning/discovery/V2X sidelink communication	202
5.3.13.1b	Conditions for initiating SDT	203
5.3.13.1c	Void	204
5.3.13.1d	Conditions for resuming RRC connection for multicast reception	204
5.3.13.2	Initiation	204
5.3.13.3	Actions related to transmission of <i>RRCResumeRequest</i> or <i>RRCResumeRequest1</i> message	209
5.3.13.4	Reception of the <i>RRCResume</i> by the UE	210
5.3.13.5	Handling of failure to resume RRC Connection	218
5.3.13.6	Cell re-selection or cell selection or L2 U2N relay (re)selection while T390, T319 or T302 is running or SDT procedure is ongoing (UE in RRC_INACTIVE) or SRS transmission in RRC_INACTIVE is configured	220
5.3.13.7	Reception of the <i>RRCSetup</i> by the UE	221
5.3.13.8	RNA update	221
5.3.13.9	Reception of the <i>RRCRelease</i> by the UE	221
5.3.13.10	Reception of the <i>RRCReject</i> by the UE	221
5.3.13.11	Inability to comply with <i>RRCResume</i>	222
5.3.13.12	Inter RAT cell reselection	222
5.3.14	Unified Access Control	222
5.3.14.1	General	222
5.3.14.2	Initiation	222
5.3.14.3	Void	224
5.3.14.4	T302, T390 expiry or stop (Barring alleviation)	224
5.3.14.5	Access barring check	225

5.3.15	RRC connection reject	226
5.3.15.1	Initiation	226
5.3.15.2	Reception of the <i>RRCReject</i> by the UE	226
5.4	Inter-RAT mobility	227
5.4.1	Introduction	227
5.4.2	Handover to NR	227
5.4.2.1	General	227
5.4.2.2	Initiation	227
5.4.2.3	Reception of the <i>RRCReconfiguration</i> by the UE	227
5.4.3	Mobility from NR	228
5.4.3.1	General	228
5.4.3.2	Initiation	228
5.4.3.3	Reception of the <i>MobilityFromNRCommand</i> by the UE	228
5.4.3.4	Successful completion of the mobility from NR	229
5.4.3.5	Mobility from NR failure	230
5.5	Measurements	230
5.5.1	Introduction	230
5.5.2	Measurement configuration	233
5.5.2.1	General	233
5.5.2.2	Measurement identity removal	235
5.5.2.3	Measurement identity addition/modification	235
5.5.2.4	Measurement object removal	236
5.5.2.5	Measurement object addition/modification	237
5.5.2.6	Reporting configuration removal	239
5.5.2.7	Reporting configuration addition/modification	239
5.5.2.8	Quantity configuration	240
5.5.2.9	Measurement gap configuration	240
5.5.2.10	Reference signal measurement timing configuration	242
5.5.2.10a	RSSI measurement timing configuration	243
5.5.2.11	Measurement gap sharing configuration	243
5.5.2.12	Effective measurement window configuration	244
5.5.3	Performing measurements	244
5.5.3.1	General	244
5.5.3.2	Layer 3 filtering	250
5.5.3.3	Derivation of cell measurement results	251
5.5.3.3a	Derivation of layer 3 beam filtered measurement	252
5.5.3.4	Derivation of L2 U2N Relay UE measurement results	252
5.5.4	Measurement report triggering	252
5.5.4.1	General	252
5.5.4.2	Event A1 (Serving becomes better than threshold)	260
5.5.4.3	Event A2 (Serving becomes worse than threshold)	261
5.5.4.4	Event A3 (Neighbour becomes offset better than SpCell)	261
5.5.4.5	Event A4 (Neighbour becomes better than threshold)	262
5.5.4.6	Event A5 (SpCell becomes worse than threshold1 and neighbour becomes better than threshold2)	263
5.5.4.7	Event A6 (Neighbour becomes offset better than SCell)	264
5.5.4.8	Event B1 (Inter RAT neighbour becomes better than threshold)	264
5.5.4.9	Event B2 (PCell becomes worse than threshold1 and inter RAT neighbour becomes better than threshold2)	265
5.5.4.10	Event I1 (Interference becomes higher than threshold)	266
5.5.4.11	Event C1 (The NR sidelink channel busy ratio is above a threshold)	266
5.5.4.12	Event C2 (The NR sidelink channel busy ratio is below a threshold)	267
5.5.4.13	Void	267
5.5.4.14	Void	267
5.5.4.15	Event D1 (Distance between UE and referenceLocation1 is above threshold1 and distance between UE and referenceLocation2 is below threshold2)	267
5.5.4.15a	Event D2 (Distance between UE and the serving cell moving reference location is above threshold1 and distance between UE and a moving reference location is below threshold2)	268
5.5.4.16	CondEvent T1 (Time measured at UE is within a duration from threshold)	269
5.5.4.17	Event X1 (Serving L2 U2N Relay UE becomes worse than threshold1 and NR Cell becomes better than threshold2)	270
5.5.4.18	Event X2 (Serving L2 U2N Relay UE becomes worse than threshold)	270

5.5.4.19	Event Y1 (PCell becomes worse than threshold1 and candidate L2 U2N Relay UE becomes better than threshold2).....	271
5.5.4.20	Event Y2 (Candidate L2 U2N Relay UE becomes better than threshold)	272
5.5.4.20b	Event Z1 (Serving L2 U2N Relay UE becomes worse than threshold1 and Candidate L2 U2N Relay UE becomes better than threshold2)	272
5.5.4.21	Event H1 (The Aerial UE altitude becomes higher than a threshold)	273
5.5.4.22	Event H2 (The Aerial UE altitude becomes lower than a threshold)	273
5.5.4.23	Event A3H1 (Neighbour becomes offset better than SpCell and the Aerial UE altitude becomes higher than a threshold).....	274
5.5.4.24	Event A3H2 (Neighbour becomes offset better than SpCell and the Aerial UE altitude becomes lower than a threshold).....	275
5.5.4.25	Event A4H1 (Neighbour becomes better than threshold1 and the Aerial UE altitude becomes higher than a threshold2).....	276
5.5.4.26	Event A4H2 (Neighbour becomes better than threshold1 and the Aerial UE altitude becomes lower than a threshold2).....	276
5.5.4.27	Event A5H1 (SpCell becomes worse than threshold1 and neighbour becomes better than threshold2 and the Aerial UE altitude becomes higher than a threshold3)	277
5.5.4.28	Event A5H2 (SpCell becomes worse than threshold1 and neighbour becomes better than threshold2 and the Aerial UE altitude becomes lower than a threshold3).....	279
5.5.5	Measurement reporting	280
5.5.5.1	General	280
5.5.5.2	Reporting of beam measurement information	289
5.5.5.3	Sorting of cell measurement results	290
5.5.6	Location measurement indication	291
5.5.6.1	General	291
5.5.6.2	Initiation.....	291
5.5.6.3	Actions related to transmission of <i>LocationMeasurementIndication</i> message	292
5.5a	Logged Measurements	292
5.5a.1	Logged Measurement Configuration	292
5.5a.1.1	General	292
5.5a.1.2	Initiation.....	293
5.5a.1.3	Reception of the <i>LoggedMeasurementConfiguration</i> by the UE	293
5.5a.1.4	T330 expiry	294
5.5a.2	Release of Logged Measurement Configuration.....	294
5.5a.2.1	General	294
5.5a.2.2	Initiation.....	294
5.5a.3	Measurements logging.....	294
5.5a.3.1	General	294
5.5a.3.2	Initiation.....	294
5.5b	Application Layer Measurements in RRC_IDLE/RRC_INACTIVE.....	297
5.5b.1	Handling of Application Layer Measurements in RRC_IDLE/RRC_INACTIVE	297
5.5b.1.1	General	297
5.5b.1.2	Initiation.....	297
5.6	UE capabilities	298
5.6.1	UE capability transfer	298
5.6.1.1	General	298
5.6.1.2	Initiation.....	299
5.6.1.3	Reception of the <i>UECapabilityEnquiry</i> by the UE	299
5.6.1.4	Setting band combinations, feature set combinations and feature sets supported by the UE	300
5.6.1.5	Void.....	303
5.7	Other.....	303
5.7.1	DL information transfer	303
5.7.1.1	General	303
5.7.1.2	Initiation.....	303
5.7.1.3	Reception of the <i>DLInformationTransfer</i> by the UE	303
5.7.1a	DL information transfer for MR-DC	304
5.7.1a.1	General	304
5.7.1a.2	Initiation.....	304
5.7.1a.3	Actions related to reception of <i>DLInformationTransferMRDC</i> message	305
5.7.2	UL information transfer	305
5.7.2.1	General	305
5.7.2.2	Initiation.....	305

5.7.2.3	Actions related to transmission of <i>ULInformationTransfer</i> message	305
5.7.2.4	Failure to deliver <i>ULInformationTransfer</i> message	306
5.7.2a	UL information transfer for MR-DC	306
5.7.2a.1	General	306
5.7.2a.2	Initiation	306
5.7.2a.3	Actions related to transmission of <i>ULInformationTransferMRDC</i> message	306
5.7.2b	UL transfer of IRAT information	307
5.7.2b.1	General	307
5.7.2b.2	Initiation	307
5.7.2b.3	Actions related to transmission of <i>ULInformationTransferIRAT</i> message	307
5.7.3	SCG failure information	308
5.7.3.1	General	308
5.7.3.2	Initiation	308
5.7.3.3	Failure type determination for (NG)EN-DC	308
5.7.3.4	Setting the contents of <i>MeasResultSCG-Failure</i>	309
5.7.3.5	Actions related to transmission of <i>SCGFailureInformation</i> message	310
5.7.3a	EUTRA SCG failure information	313
5.7.3a.1	General	313
5.7.3a.2	Initiation	313
5.7.3a.3	Actions related to transmission of <i>SCGFailureInformationEUTRA</i> message	313
5.7.3b	MCG failure information	314
5.7.3b.1	General	314
5.7.3b.2	Initiation	314
5.7.3b.3	Failure type determination	315
5.7.3b.4	Actions related to transmission of <i>MCGFailureInformation</i> message	315
5.7.3b.5	T316 expiry	317
5.7.3c	Indirect path failure information	317
5.7.3c.1	General	317
5.7.3c.2	Initiation	317
5.7.3c.3	Failure type determination	318
5.7.3c.4	Actions related to transmission of <i>IndirectPathFailureInformation</i> message	318
5.7.4	UE Assistance Information	319
5.7.4.1	General	319
5.7.4.2	Initiation	320
5.7.4.3	Actions related to transmission of <i>UEAssistanceInformation</i> message	329
5.7.4.3a	Setting the contents of <i>OverheatingAssistance</i> IE	341
5.7.4.4	Relaxed measurement criterion for a stationary (e)RedCap UE	342
5.7.4a	Void	342
5.7.5	Failure information	342
5.7.5.1	General	342
5.7.5.2	Initiation	342
5.7.5.3	Actions related to transmission of <i>FailureInformation</i> message	343
5.7.6	DL message segment transfer	343
5.7.6.1	General	343
5.7.6.2	Initiation	344
5.7.6.3	Reception of <i>DLDedicatedMessageSegment</i> by the UE	344
5.7.7	UL message segment transfer	344
5.7.7.1	General	344
5.7.7.2	Initiation	344
5.7.7.3	Actions related to transmission of <i>ULDedicatedMessageSegment</i> message	344
5.7.8	Idle/inactive Measurements	345
5.7.8.1	General	345
5.7.8.1a	Measurement configuration	345
5.7.8.1b	Measurement configuration (reselection measurements)	346
5.7.8.2	Void	347
5.7.8.2a	Performing measurements	347
5.7.8.3	T331 expiry or stop	350
5.7.8.4	Cell re-selection or cell selection while T331 is running	350
5.7.9	Mobility history information	350
5.7.9.1	General	350
5.7.9.2	Initiation	350
5.7.9.3	Release of Mobility History Information	354

5.7.10	UE Information	354
5.7.10.1	General	354
5.7.10.2	Initiation	354
5.7.10.3	Reception of the <i>UEInformationRequest</i> message	354
5.7.10.4	Actions for the Random Access report determination	359
5.7.10.5	RA information determination	361
5.7.10.6	Actions for the successful handover report determination	365
5.7.10.7	Actions for the successful PSCell change or addition report determination	369
5.7.11	Void	372
5.7.12	IAB Other Information	372
5.7.12.1	General	372
5.7.12.2	Initiation	372
5.7.12.3	Actions related to transmission of <i>IABOtherInformation</i> message	372
5.7.13	RLM/BFD relaxation	374
5.7.13.0	General	374
5.7.13.1	Relaxed measurement criterion for low mobility	374
5.7.13.2	Relaxed measurement criterion for good serving cell quality	374
5.7.14	UE Positioning Assistance Information	375
5.7.14.1	General	375
5.7.14.2	Initiation	375
5.7.14.3	Actions related to transmission of <i>UEPositioningAssistanceInfo</i> message	375
5.7.15	Void	376
5.7.17	Derivation of pathloss reference for TA validation of SRS for Positioning transmission and CG-SDT in RRC_INACTIVE	378
5.7.18	Void	379
5.7.19	Satellite switch with resynchronization	379
5.7.20	Actions related to Transmission of SRS for Positioning in a validity area in RRC_INACTIVE	379
5.8	Sidelink	380
5.8.1	General	380
5.8.2	Conditions for NR sidelink communication/discovery/positioning operation	380
5.8.3	Sidelink UE information for NR sidelink communication/discovery/positioning	381
5.8.3.1	General	381
5.8.3.2	Initiation	382
5.8.3.3	Actions related to transmission of <i>SidelinkUEInformationNR</i> message	388
5.8.4	Void	395
5.8.5	Sidelink synchronisation information transmission for NR sidelink communication/discovery/positioning	395
5.8.5.1	General	395
5.8.5.2	Initiation	396
5.8.5.3	Transmission of SLSS	397
5.8.5a	Sidelink synchronisation information transmission for V2X sidelink communication	398
5.8.5a.1	General	398
5.8.5a.2	Initiation	398
5.8.6	Sidelink synchronisation reference	399
5.8.6.1	General	399
5.8.6.2	Selection and reselection of synchronisation reference	399
5.8.6.2a	Sidelink synchronization reference priority group order	400
5.8.6.2b	Sidelink synchronization reference search	401
5.8.6.3	Sidelink communication transmission reference cell selection	402
5.8.7	Sidelink communication reception	403
5.8.8	Sidelink communication transmission	403
5.8.9	Sidelink RRC procedure	406
5.8.9.1	Sidelink RRC reconfiguration	406
5.8.9.1.1	General	406
5.8.9.1.2	Actions related to transmission of <i>RRCReconfigurationSidelink</i> message	407
5.8.9.1.3	Reception of an <i>RRCReconfigurationSidelink</i> by the UE	410
5.8.9.1.4	Void	413
5.8.9.1.5	Void	413
5.8.9.1.6	Void	413
5.8.9.1.7	Void	413
5.8.9.1.8	Reception of an <i>RRCReconfigurationFailureSidelink</i> by the UE	413
5.8.9.1.9	Reception of an <i>RRCReconfigurationCompleteSidelink</i> by the UE	413

5.8.9.1a	Sidelink radio bearer management.....	414
5.8.9.1a.1	Sidelink DRB release	414
5.8.9.1a.2	Sidelink DRB addition/modification	415
5.8.9.1a.3	Sidelink SRB release	417
5.8.9.1a.4	Sidelink SRB addition	417
5.8.9.1a.5	Additional Sidelink RLC Bearer release	418
5.8.9.1a.5.1	Additional Sidelink RLC Bearer release conditions	418
5.8.9.1a.5.2	Additional Sidelink RLC Bearer release operation.....	418
5.8.9.1a.6	Additional Sidelink RLC Bearer addition/modification.....	419
5.8.9.1a.6.1	Additional Sidelink RLC Bearer addition/modification conditions.....	419
5.8.9.1a.6.2	Additional Sidelink RLC Bearer addition/modification operation	419
5.8.9.1b	Sidelink Carrier Configuration.....	421
5.8.9.1b.1	Sidelink Carrier Release	421
5.8.9.1b.1.1	Sidelink Carrier Release Condition.....	421
5.8.9.1b.2	Sidelink Carrier Addition	422
5.8.9.1b.2.1	Sidelink Carrier Addition Condition.....	422
5.8.9.2	Sidelink UE capability transfer	422
5.8.9.2.1	General	422
5.8.9.2.2	Initiation	423
5.8.9.2.3	Actions related to transmission of the <i>UECapabilityEnquirySidelink</i> by the UE	423
5.8.9.2.4	Actions related to reception of the <i>UECapabilityEnquirySidelink</i> by the UE	423
5.8.9.3	Sidelink radio link failure related actions.....	423
5.8.9.3a	End-to-end PC5 connection failure related actions performed by L2 U2U Remote UE	425
5.8.9.3b	End-to-end PC5 connection failure/release related actions performed by L2 U2U Relay UE	425
5.8.9.4	Sidelink common control information	426
5.8.9.4.1	General	426
5.8.9.4.2	Actions related to reception of <i>MasterInformationBlockSidelink</i> message	426
5.8.9.4.3	Transmission of <i>MasterInformationBlockSidelink</i> message.....	426
5.8.9.5	Actions related to PC5-RRC connection release requested by upper layers	427
5.8.9.5a	Actions related to end-to-end PC5-RRC connection release performed by L2 U2U Remote UE	428
5.8.9.6	Sidelink UE assistance information	428
5.8.9.6.1	General	428
5.8.9.6.2	Initiation	429
5.8.9.6.3	Actions related to reception of <i>UEAssistanceInformationSidelink</i> message	429
5.8.9.7	PC5 Relay RLC channel management for L2 U2N or U2U relay	429
5.8.9.7.0	Derivation of PC5 Relay RLC channel configuration	429
5.8.9.7.1	PC5 Relay RLC channel release.....	429
5.8.9.7.2	PC5 Relay RLC channel addition/modification	430
5.8.9.8	Remote UE information	431
5.8.9.8.1	General	431
5.8.9.8.2	Actions related to transmission of <i>RemoteUEInformationSidelink</i> message.....	431
5.8.9.8.3	Reception of <i>RemoteUEInformationSidelink</i> message by the L2 U2N/U2U Relay UE	432
5.8.9.9	Uu message transfer in sidelink	434
5.8.9.9.1	General	434
5.8.9.9.2	Actions related to transmission of <i>UuMessageTransferSidelink</i> message.....	434
5.8.9.9.3	Reception of the <i>UuMessageTransferSidelink</i>	434
5.8.9.10	Notification Message	435
5.8.9.10.1	General	435
5.8.9.10.2	Initiation	435
5.8.9.10.3	Actions related to transmission of <i>NotificationMessageSidelink</i> message	435
5.8.9.10.4	Actions related to reception of <i>NotificationMessageSidelink</i> message.....	436
5.8.9.11	UE information transfer on sidelink.....	437
5.8.9.11.1	General	437
5.8.9.11.2	Actions related to transmission of the <i>UEInformationRequestSidelink</i> by the UE.....	437
5.8.9.11.3	Actions related to reception of the <i>UEInformationRequestSidelink</i> by the UE	437
5.8.9.11.4	Actions related to reception of the <i>UEInformationResponseSidelink</i> by the UE.....	438
5.8.10	Sidelink measurement.....	438
5.8.10.1	Introduction.....	438
5.8.10.2	Sidelink measurement configuration.....	439
5.8.10.2.1	General	439
5.8.10.2.2	Sidelink measurement identity removal	440
5.8.10.2.3	Sidelink measurement identity addition/modification.....	440

5.8.10.2.4	Sidelink measurement object removal.....	440
5.8.10.2.5	Sidelink measurement object addition/modification	440
5.8.10.2.6	Sidelink reporting configuration removal.....	441
5.8.10.2.7	Sidelink reporting configuration addition/modification	441
5.8.10.2.8	Sidelink quantity configuration	442
5.8.10.3	Performing NR sidelink measurements.....	442
5.8.10.3.1	General	442
5.8.10.3.2	Derivation of NR sidelink measurement results	442
5.8.10.4	Sidelink measurement report triggering.....	442
5.8.10.4.1	General	442
5.8.10.4.2	Event S1 (Serving becomes better than threshold)	443
5.8.10.4.3	Event S2 (Serving becomes worse than threshold)	444
5.8.10.5	Sidelink measurement reporting.....	445
5.8.10.5.1	General	445
5.8.11	Zone identity calculation	445
5.8.12	DFN derivation from GNSS	446
5.8.13	NR sidelink discovery.....	446
5.8.13.1	General	446
5.8.13.2	NR sidelink discovery monitoring	446
5.8.13.3	NR sidelink discovery transmission.....	447
5.8.14	NR sidelink U2N Relay UE operation.....	451
5.8.14.1	General	451
5.8.15	NR sidelink U2N Remote UE operation.....	451
5.8.15.1	General	451
5.8.15.2	NR Sidelink U2N Remote UE threshold conditions	451
5.8.15.3	Selection and reselection of NR sidelink U2N Relay UE	452
5.8.16	NR sidelink U2U Relay UE operation.....	453
5.8.16.1	General	453
5.8.16.2	NR sidelink U2U Relay UE threshold conditions	453
5.8.16.3	Neighbor UE(s) in proximity conditions.....	453
5.8.17	NR sidelink U2U Remote UE operation.....	454
5.8.17.1	General	454
5.8.17.2	NR Sidelink U2U Remote UE threshold conditions	454
5.8.17.3	Conditions for selection and reselection of NR sidelink U2U Relay UE	455
5.8.17.4	Actions related to selection and reselection of NR sidelink U2U Relay UE.....	455
5.8.18	NR sidelink positioning	456
5.8.18.1	General	456
5.8.18.2	NR sidelink positioning measurement	456
5.8.18.3	NR sidelink positioning transmission.....	456
5.9	MBS Broadcast	459
5.9.1	Introduction.....	459
5.9.1.1	General	459
5.9.1.2	MCCH scheduling.....	459
5.9.1.3	MCCH information validity and notification of changes	459
5.9.2	MCCH information acquisition	460
5.9.2.1	General	460
5.9.2.2	Initiation.....	460
5.9.2.3	MCCH information acquisition by the UE.....	460
5.9.2.4	Actions upon reception of the <i>MBSBroadcastConfiguration</i> message	460
5.9.3	Broadcast MRB configuration	461
5.9.3.1	General	461
5.9.3.2	Initiation.....	461
5.9.3.3	Broadcast MRB establishment	461
5.9.3.4	Broadcast MRB release.....	461
5.9.4	MBS Interest Indication.....	462
5.9.4.1	General	462
5.9.4.2	Initiation.....	462
5.9.4.3	MBS frequencies of interest determination.....	463
5.9.4.4	MBS services of interest determination	463
5.9.4.5	Setting of the contents of MBS Interest Indication	464
5.10	MBS multicast reception in RRC_INACTIVE	464
5.10.1	Introduction.....	464

5.10.1.1	General	464
5.10.1.2	Multicast MCCH scheduling	465
5.10.1.3	Multicast MCCH information validity and notification of changes	465
5.10.2	Multicast MCCH information acquisition	466
5.10.2.1	General	466
5.10.2.2	Initiation	466
5.10.2.3	Multicast MCCH information acquisition by the UE	466
5.10.2.4	Actions upon reception of the <i>MBSMulticastConfiguration</i> message	467
5.10.3	MRB configuration	467
5.10.3.1	General	467
5.10.3.2	Multicast MRB establishment	467
5.10.3.3	Multicast MRB release	467
6	Protocol data units, formats and parameters (ASN.1)	468
6.1	General	468
6.1.1	Introduction	468
6.1.2	Need codes and conditions for optional fields	468
6.1.3	General rules	471
6.2	RRC messages	471
6.2.1	General message structure	471
–	<i>NR-RRC-Definitions</i>	471
–	<i>BCCH-BCH-Message</i>	471
–	<i>BCCH-DL-SCH-Message</i>	472
–	<i>DL-CCCH-Message</i>	472
–	<i>DL-DCCH-Message</i>	473
–	<i>MCCH-Message</i>	473
–	<i>MulticastMCCH-Message</i>	474
–	<i>PCCH-Message</i>	474
–	<i>UL-CCCH-Message</i>	475
–	<i>UL-CCCH1-Message</i>	475
–	<i>UL-DCCH-Message</i>	476
6.2.2	Message definitions	478
–	<i>CounterCheck</i>	478
–	<i>CounterCheckResponse</i>	479
–	<i>DedicatedSIBRequest</i>	480
–	<i>DLDedicatedMessageSegment</i>	481
–	<i>DLInformationTransfer</i>	482
–	<i>DLInformationTransferMRDC</i>	484
–	<i>FailureInformation</i>	485
–	<i>IABOtherInformation</i>	486
–	<i>IndirectPathFailureInformation</i>	489
–	<i>LocationMeasurementIndication</i>	490
–	<i>LoggedMeasurementConfiguration</i>	491
–	<i>MBSBroadcastConfiguration</i>	493
–	<i>MBSInterestIndication</i>	495
–	<i>MBSMulticastConfiguration</i>	496
–	<i>MCGFailureInformation</i>	497
–	<i>MeasurementReport</i>	499
–	<i>MeasurementReportAppLayer</i>	499
–	<i>MIB</i>	501
–	<i>MobilityFromNRCommand</i>	503
–	<i>Paging</i>	505
–	<i>RRCReestablishment</i>	507
–	<i>RRCReestablishmentComplete</i>	508
–	<i>RRCReestablishmentRequest</i>	509
–	<i>RRCReconfiguration</i>	510
–	<i>RRCReconfigurationComplete</i>	518
–	<i>RRCReject</i>	520
–	<i>RRCRelease</i>	521
–	<i>RRCResume</i>	534
–	<i>RRCResumeComplete</i>	537
–	<i>RRCResumeRequest</i>	539

–	<i>RRCResumeRequest1</i>	540
–	<i>RRCSetup</i>	541
–	<i>RRCSetupComplete</i>	542
–	<i>RRCSetupRequest</i>	545
–	<i>RRCSystemInfoRequest</i>	546
–	<i>SCGFailureInformation</i>	548
–	<i>SCGFailureInformationEUTRA</i>	550
–	<i>SecurityModeCommand</i>	551
–	<i>SecurityModeComplete</i>	552
–	<i>SecurityModeFailure</i>	553
–	<i>SIB1</i>	553
–	<i>SidelinkUEInformationNR</i>	560
–	<i>SystemInformation</i>	569
–	<i>UEAssistanceInformation</i>	571
–	<i>UECapabilityEnquiry</i>	585
–	<i>UECapabilityInformation</i>	586
–	<i>UEInformationRequest</i>	586
–	<i>UEInformationResponse</i>	588
–	<i>UEPositioningAssistanceInfo</i>	608
–	<i>ULDedicatedMessageSegment</i>	610
–	<i>ULInformationTransfer</i>	611
–	<i>ULInformationTransferIRAT</i>	612
–	<i>ULInformationTransferMRDC</i>	613
6.3	RRC information elements	614
6.3.0	Parameterized types	614
–	<i>SetupRelease</i>	614
6.3.1	System information blocks	614
–	<i>SIB2</i>	614
–	<i>SIB3</i>	619
–	<i>SIB4</i>	621
–	<i>SIB5</i>	627
–	<i>SIB6</i>	631
–	<i>SIB7</i>	631
–	<i>SIB8</i>	632
–	<i>SIB9</i>	633
–	<i>SIB10</i>	634
–	<i>SIB11</i>	635
–	<i>SIB12</i>	636
–	<i>SIB13</i>	639
–	<i>SIB14</i>	640
–	<i>SIB15</i>	640
–	<i>SIB16</i>	641
–	<i>SIB17</i>	642
–	<i>SIB17bis</i>	644
–	<i>SIB18</i>	647
–	<i>SIB19</i>	647
–	<i>SIB20</i>	650
–	<i>SIB21</i>	651
–	<i>SIB22</i>	652
–	<i>SIB23</i>	653
–	<i>SIB24</i>	654
–	<i>SIB25</i>	655
6.3.1a	Positioning System information blocks	656
–	<i>PosSystemInformation-r16-IEs</i>	656
–	<i>PosSI-SchedulingInfo</i>	657
–	<i>SIBpos</i>	660
6.3.2	Radio resource control information elements	660
–	<i>AdditionalPCIIndex</i>	660
–	<i>AdditionalSpectrumEmission</i>	661
–	<i>AdvancedReceiver-MU-MIMO</i>	661
–	<i>Aerial-Config</i>	662
–	<i>Alpha</i>	663

–	Altitude	663
–	AMF-Identifier	663
–	ARFCN-ValueEUTRA	664
–	ARFCN-ValueNR	664
–	ARFCN-ValueUTRA-FDD	664
–	ATG-Config	665
–	AvailabilityCombinationsPerCell	665
–	AvailabilityIndicator	667
–	BAP-RoutingID	668
–	BeamFailureRecoveryConfig	668
–	BeamFailureRecoveryRSConfig	671
–	BetaOffsets	672
–	BetaOffsetsCrossPri	673
–	BH-LogicalChannelIdentity	673
–	BH-LogicalChannelIdentity-Ext	674
–	BH-RLC-ChannelConfig	674
–	BH-RLC-ChannelID	675
–	BSR-Config	675
–	BWP	676
–	BWP-Downlink	677
–	BWP-DownlinkCommon	678
–	BWP-DownlinkDedicated	678
–	BWP-Id	681
–	BWP-Uplink	682
–	BWP-UplinkCommon	682
–	BWP-UplinkDedicated	685
–	CandidateBeamRS	688
–	CandidateTCI-State	689
–	CandidateTCI-UL-State	690
–	CellAccessRelatedInfo	691
–	CellAccessRelatedInfo-EUTRA-5GC	693
–	CellAccessRelatedInfo-EUTRA-EPC	694
–	CellDTX-DRX-Config	695
–	CellGroupConfig	696
–	CellGroupId	709
–	CellIdentity	709
–	CellReselectionPriority	709
–	CellReselectionSubPriority	710
–	CFR-ConfigMulticast	710
–	CGI-InfoEUTRA	711
–	CGI-InfoEUTRALogging	711
–	CGI-InfoNR	712
–	CGI-Info-Logging	713
–	CLI-RSSI-Range	714
–	ClockQualityMetrics	714
–	CodebookConfig	714
–	CommonLocationInfo	722
–	CondReconfigId	723
–	CondReconfigToAddModList	723
–	ConditionalReconfiguration	726
–	ConfiguredGrantConfig	727
–	ConfiguredGrantConfigIndex	739
–	ConfiguredGrantConfigIndexMAC	739
–	ConnEstFailureControl	739
–	ControlResourceSet	740
–	ControlResourceSetId	743
–	ControlResourceSetZero	743
–	CrossCarrierSchedulingConfig	744
–	CSI-AperiodicTriggerStateList	745
–	CSI-FrequencyOccupation	749
–	CSI-IM-Resource	750
–	CSI-IM-ResourceId	751

–	CSI-IM-ResourceSet.....	751
–	CSI-IM-ResourceSetId	751
–	CSI-MeasConfig.....	752
–	CSI-ReportConfig.....	753
–	CSI-ReportConfigId	762
–	CSI-ReportPeriodicityAndOffset.....	762
–	CSI-ReportSubConfigId	762
–	CSI-ReportSubConfigTriggerList.....	763
–	CSI-ResourceConfig.....	763
–	CSI-ResourceConfigId	764
–	CSI-ResourcePeriodicityAndOffset.....	765
–	CSI-RS-ResourceConfigMobility	765
–	CSI-RS-ResourceMapping	768
–	CSI-SemiPersistentOnPUSCH-TriggerStateList.....	769
–	CSI-SSB-ResourceSet.....	770
–	CSI-SSB-ResourceSetId.....	771
–	DedicatedNAS-Message.....	771
–	DL-PPW-PreConfig	772
–	DMRS-BundlingPUCCH-Config	774
–	DMRS-BundlingPUSCH-Config	775
–	DMRS-DownlinkConfig	776
–	DMRS-UplinkConfig.....	777
–	DownlinkConfigCommon.....	779
–	DownlinkConfigCommonSIB	780
–	DownlinkPreemption.....	784
–	DRB-Identity	785
–	DRX-Config.....	785
–	DRX-ConfigSecondaryGroup.....	788
–	DRX-ConfigSL	789
–	EarlyUL-SyncConfig	790
–	EphemerisInfo	791
–	EpochTime	793
–	EUTRA-C-RNTI	793
–	FeatureCombination	794
–	FeatureCombinationPreambles	795
–	FilterCoefficient	797
–	FreqBandIndicatorNR.....	798
–	FreqPriorityListDedicatedSlicing	798
–	FreqPriorityListSlicing	799
–	FrequencyInfoDL	800
–	FrequencyInfoDL-SIB.....	801
–	FrequencyInfoUL	802
–	FrequencyInfoUL-SIB.....	803
–	GapPriority	805
–	HighSpeedConfig	805
–	Hysteresis	807
–	HysteresisAltitude	807
–	HysteresisLocation.....	807
–	InvalidSymbolPattern.....	808
–	I-RNTI-Value.....	809
–	LBT-FailureRecoveryConfig	809
–	LocationInfo	810
–	LocationMeasurementInfo	810
–	LogicalChannelConfig	812
–	LogicalChannelIdentity.....	814
–	LTE-NeighCellsCRS-AssistInfoList.....	814
–	LTM-CandidateId.....	816
–	LTM-Candidate	816
–	LTM-Config.....	818
–	LTM-CSI-ReportConfig.....	818
–	LTM-CSI-ReportConfigId	820
–	LTM-CSI-ResourceConfig.....	820

–	<i>LTM-CSI-ResourceConfigId</i>	821
–	<i>LTM-TCI-Info</i>	821
–	<i>MAC-CellGroupConfig</i>	822
–	<i>MeasConfig</i>	826
–	<i>MeasGapConfig</i>	827
–	<i>MeasGapId</i>	831
–	<i>MeasGapSharingConfig</i>	832
–	<i>MeasId</i>	833
–	<i>MeasIdleConfig</i>	833
–	<i>MeasIdToAddModList</i>	837
–	<i>MeasObjectCLI</i>	838
–	<i>MeasObjectEUTRA</i>	840
–	<i>MeasObjectId</i>	842
–	<i>MeasObjectNR</i>	843
–	<i>MeasObjectNR-SL</i>	851
–	<i>MeasObjectRxTxDiff</i>	852
–	<i>MeasObjectToAddModList</i>	852
–	<i>MeasObjectUTRA-FDD</i>	853
–	<i>MeasResultCellListSFTD-NR</i>	854
–	<i>MeasResultCellListSFTD-EUTRA</i>	854
–	<i>MeasResults</i>	855
–	<i>MeasResult2EUTRA</i>	863
–	<i>MeasResult2NR</i>	863
–	<i>MeasResultIdleEUTRA</i>	864
–	<i>MeasResultIdleNR</i>	865
–	<i>MeasResultRxTxTimeDiff</i>	866
–	<i>MeasResultSCG-Failure</i>	867
–	<i>MeasResultsSL</i>	867
–	<i>MeasSequence</i>	868
–	<i>MeasTriggerQuantityEUTRA</i>	869
–	<i>MeasurementValidityDuration</i>	869
–	<i>MeasWindowConfig</i>	870
–	<i>MobilityStateParameters</i>	870
–	<i>MRB-Identity</i>	871
–	<i>MsgA-ConfigCommon</i>	871
–	<i>MsgA-PUSCH-Config</i>	872
–	<i>MultiFrequencyBandListNR</i>	875
–	<i>MultiFrequencyBandListNR-SIB</i>	876
–	<i>MUSIM-GapConfig</i>	877
–	<i>MUSIM-GapId</i>	878
–	<i>MUSIM-GapInfo</i>	879
–	<i>N3C-IndirectPathConfigRelay</i>	880
–	<i>N3C-IndirectPathAddChange</i>	880
–	<i>N3C-RelayUE-Info</i>	881
–	<i>NCR-AperiodicFwdConfig</i>	881
–	<i>NCR-FwdConfig</i>	882
–	<i>NCR-PeriodicityAndOffset</i>	883
–	<i>NCR-PeriodicFwdResourceSet</i>	885
–	<i>NCR-PeriodicFwdResourceSetId</i>	886
–	<i>NCR-SemiPersistentFwdResourceSetId</i>	887
–	<i>NeedForGapsConfigNR</i>	888
–	<i>NeedForGapNCSG-ConfigEUTRA</i>	890
–	<i>NeedForGapNCSG-ConfigNR</i>	890
–	<i>NeedForGapNCSG-InfoEUTRA</i>	891
–	<i>NeedForGapNCSG-InfoNR</i>	891
–	<i>NeedForInterruptionInfoNR</i>	893
–	<i>NextHopChainingCount</i>	894
–	<i>NG-5G-S-TMSI</i>	894
–	<i>NonCellDefiningSSB</i>	894
–	<i>NPN-Identity</i>	895
–	<i>NPN-IdentityInfoList</i>	896
–	<i>NR-DL-PRS-PDC-Info</i>	897

–	NR-NS-PmaxList	901
–	NSAG-ID	901
–	NSAG-IdentityInfo	902
–	NTN-Config	902
–	NZP-CSI-RS-Resource	905
–	NZP-CSI-RS-ResourceId	906
–	NZP-CSI-RS-ResourceSet	907
–	NZP-CSI-RS-ResourceSetId	909
–	P-Max	909
–	PathlossReferenceRS	909
–	PathlossReferenceRS-Id	910
–	PCI-ARFCN-EUTRA	910
–	PCI-ARFCN-NR	911
–	PCI-List	911
–	PCI-Range	912
–	PCI-RangeElement	912
–	PCI-RangeIndex	913
–	PCI-RangeIndexList	913
–	PDCCH-Config	913
–	PDCCH-ConfigCommon	916
–	PDCCH-ConfigSIB1	920
–	PDCCH-ServingCellConfig	920
–	PDCCP-Config	921
–	PDSCH-Config	928
–	PDSCH-ConfigCommon	935
–	PDSCH-ServingCellConfig	936
–	PDSCH-TimeDomainResourceAllocationList	938
–	PDU-SessionID	939
–	PHR-Config	939
–	PhysCellId	941
–	PhysicalCellGroupConfig	942
–	PLMN-Identity	951
–	PLMN-IdentityInfoList	952
–	PLMN-IdentityList2	953
–	PRB-Id	953
–	PTRS-DownlinkConfig	954
–	PTRS-UplinkConfig	955
–	PUCCH-Config	956
–	PUCCH-ConfigCommon	965
–	PUCCH-ConfigurationList	966
–	PUCCH-CSI-Resource	967
–	PUCCH-PathlossReferenceRS-Id	967
–	PUCCH-PowerControl	968
–	PUCCH-SpatialRelationInfo	970
–	PUCCH-SpatialRelationInfo-Id	971
–	PUCCH-TPC-CommandConfig	971
–	PUSCH-Config	972
–	PUSCH-ConfigCommon	982
–	PUSCH-PowerControl	983
–	PUSCH-ServingCellConfig	987
–	PUSCH-TimeDomainResourceAllocationList	989
–	PUSCH-TPC-CommandConfig	991
–	QFI	992
–	Q-OffsetRange	992
–	Q-QualMin	993
–	Q-RxLevMin	993
–	QuantityConfig	993
–	RACH-ConfigCommon	995
–	RACH-ConfigCommonTwoStepRA	998
–	RACH-ConfigDedicated	1002
–	RACH-ConfigGeneric	1006
–	RACH-ConfigGenericTwoStepRA	1007

–	RACH-ConfigTwoTA.....	1010
–	RA-Prioritization.....	1011
–	RA-PrioritizationForSlicing.....	1012
–	RadioBearerConfig.....	1012
–	RadioLinkMonitoringConfig.....	1017
–	RadioLinkMonitoringRS-Id.....	1019
–	RAN-AreaCode.....	1020
–	RateMatchPattern.....	1020
–	RateMatchPatternId.....	1022
–	RateMatchPatternLTE-CRS.....	1022
–	ReferenceConfiguration.....	1023
–	ReferenceLocation.....	1023
–	ReferenceTimeInfo.....	1024
–	RejectWaitTime.....	1025
–	RepetitionSchemeConfig.....	1026
–	ReportConfigId.....	1027
–	ReportConfigInterRAT.....	1027
–	ReportConfigNR.....	1033
–	ReportConfigNR-SL.....	1047
–	ReportConfigToAddModList.....	1049
–	ReportInterval.....	1050
–	ReselectionThreshold.....	1050
–	ReselectionThresholdQ.....	1050
–	ResumeCause.....	1051
–	RLC-BearerConfig.....	1051
–	RLC-Config.....	1053
–	RLF-TimersAndConstants.....	1056
–	RNTI-Value.....	1057
–	RSRP-Range.....	1057
–	RSRQ-Range.....	1057
–	RSSI-Range.....	1058
–	RxTxTimeDiff.....	1058
–	SCellActivationRS-Config.....	1059
–	SCellActivationRS-ConfigId.....	1059
–	SCellIndex.....	1060
–	SchedulingRequestConfig.....	1060
–	SchedulingRequestId.....	1061
–	SchedulingRequestResourceConfig.....	1061
–	SchedulingRequestResourceId.....	1063
–	ScramblingId.....	1063
–	SCS-SpecificCarrier.....	1064
–	SDAP-Config.....	1065
–	SearchSpace.....	1066
–	SearchSpaceId.....	1074
–	SearchSpaceZero.....	1074
–	SecurityAlgorithmConfig.....	1075
–	SelectedPSCellForCHO-WithSCG.....	1076
–	SemiStaticChannelAccessConfig.....	1076
–	SemiStaticChannelAccessConfigUE.....	1076
–	Sensor-LocationInfo.....	1077
–	ServingCellAndBWP-Id.....	1078
–	ServCellIndex.....	1078
–	ServingCellConfig.....	1079
–	ServingCellConfigCommon.....	1097
–	ServingCellConfigCommonSIB.....	1100
–	ShortI-RNTI-Value.....	1103
–	ShortMAC-I.....	1103
–	SINR-Range.....	1103
–	SI-RequestConfig.....	1104
–	SI-RequestConfigRepetition.....	1105
–	SI-SchedulingInfo.....	1107
–	SK-Counter.....	1110

–	<i>SlotFormatCombinationsPerCell</i>	1111
–	<i>SlotFormatIndicator</i>	1112
–	<i>S-NSSAI</i>	1115
–	<i>SpeedStateScaleFactors</i>	1116
–	<i>SPS-Config</i>	1116
–	<i>SPS-ConfigIndex</i>	1119
–	<i>SPS-PUCCH-AN</i>	1119
–	<i>SPS-PUCCH-AN-List</i>	1119
–	<i>SRB-Identity</i>	1120
–	<i>SRS-CarrierSwitching</i>	1120
–	<i>SRS-Config</i>	1122
–	<i>SRS-PosTx-Hopping</i>	1137
–	<i>SRS-PosResourceSetLinkedForAggBW</i>	1138
–	<i>SRS-RSRP-Range</i>	1139
–	<i>SRS-TPC-CommandConfig</i>	1140
–	<i>SSB-Index</i>	1140
–	<i>SSB-MTC</i>	1141
–	<i>SSB-PositionQCL-Relation</i>	1143
–	<i>SSB-ToMeasure</i>	1143
–	<i>SS-RSSI-Measurement</i>	1144
–	<i>SubcarrierSpacing</i>	1145
–	<i>TAG-Config</i>	1145
–	<i>TAR-Config</i>	1146
–	<i>TCI-ActivatedConfig</i>	1147
–	<i>TCI-State</i>	1147
–	<i>TCI-StateId</i>	1149
–	<i>TCI-UL-State</i>	1150
–	<i>TCI-UL-StateId</i>	1151
–	<i>TDD-UL-DL-ConfigCommon</i>	1152
–	<i>TDD-UL-DL-ConfigDedicated</i>	1153
–	<i>TrackingAreaCode</i>	1155
–	<i>T-Reselection</i>	1155
–	<i>TimeAlignmentTimer</i>	1156
–	<i>TimeToTrigger</i>	1156
–	<i>TN-AreaId</i>	1156
–	<i>UAC-BarringInfoSetIndex</i>	1157
–	<i>UAC-BarringInfoSetList</i>	1157
–	<i>UAC-BarringPerCatList</i>	1158
–	<i>UAC-BarringPerPLMN-List</i>	1159
–	<i>UE-TimersAndConstants</i>	1159
–	<i>UE-TimersAndConstantsRemoteUE</i>	1160
–	<i>UL-DelayValueConfig</i>	1160
–	<i>UL-ExcessDelayConfig</i>	1161
–	<i>UL-GapFR2-Config</i>	1161
–	<i>UplinkCancellation</i>	1162
–	<i>UplinkConfigCommon</i>	1164
–	<i>UplinkConfigCommonSIB</i>	1165
–	<i>Uplink-PowerControl</i>	1166
–	<i>Uu-RelayRLC-ChannelConfig</i>	1167
–	<i>Uu-RelayRLC-ChannelID</i>	1167
–	<i>UplinkTxDirectCurrentList</i>	1168
–	<i>UplinkTxDirectCurrentMoreCarrierList</i>	1169
–	<i>UplinkTxDirectCurrentTwoCarrierList</i>	1170
–	<i>ZP-CSI-RS-Resource</i>	1172
–	<i>ZP-CSI-RS-ResourceSet</i>	1173
–	<i>ZP-CSI-RS-ResourceSetId</i>	1173
6.3.3	UE capability information elements	1174
–	<i>AccessStratumRelease</i>	1174
–	<i>AerialParameters</i>	1174
–	<i>AppLayerMeasParameters</i>	1175
–	<i>BandCombinationList</i>	1175
–	<i>BandCombinationListSidelinkEUTRA-NR</i>	1187

–	<i>BandCombinationListSL-Discovery</i>	1189
–	<i>CA-BandwidthClassEUTRA</i>	1189
–	<i>CA-BandwidthClassNR</i>	1190
–	<i>CA-ParametersEUTRA</i>	1190
–	<i>CA-ParametersNR</i>	1191
–	<i>CA-ParametersNRDC</i>	1205
–	<i>CarrierAggregationVariant</i>	1208
–	<i>CodebookParameters</i>	1208
–	<i>DL-PRS-MeasurementWithRxFH-RRC-Connected</i>	1219
–	<i>ERedCapParameters</i>	1220
–	<i>FeatureSetCombination</i>	1220
–	<i>FeatureSetCombinationId</i>	1221
–	<i>FeatureSetDownlink</i>	1222
–	<i>FeatureSetDownlinkId</i>	1230
–	<i>FeatureSetDownlinkPerCC</i>	1230
–	<i>FeatureSetDownlinkPerCC-Id</i>	1232
–	<i>FeatureSetEUTRA-DownlinkId</i>	1232
–	<i>FeatureSetEUTRA-UplinkId</i>	1233
–	<i>FeatureSets</i>	1233
–	<i>FeatureSetUplink</i>	1235
–	<i>FeatureSetUplinkId</i>	1243
–	<i>FeatureSetUplinkPerCC</i>	1244
–	<i>FeatureSetUplinkPerCC-Id</i>	1247
–	<i>FreqBandIndicatorEUTRA</i>	1247
–	<i>FreqBandList</i>	1247
–	<i>FreqSeparationClass</i>	1248
–	<i>FreqSeparationClassDL-Only</i>	1248
–	<i>FR2-2-AccessParamsPerBand</i>	1249
–	<i>HighSpeedParameters</i>	1250
–	<i>IMS-Parameters</i>	1251
–	<i>InterRAT-Parameters</i>	1252
–	<i>MAC-Parameters</i>	1253
–	<i>MeasAndMobParameters</i>	1256
–	<i>MeasAndMobParametersMRDC</i>	1261
–	<i>MIMO-Layers</i>	1262
–	<i>MIMO-ParametersPerBand</i>	1263
–	<i>ModulationOrder</i>	1277
–	<i>MRDC-Parameters</i>	1277
–	<i>NCR-Parameters</i>	1279
–	<i>NRDC-Parameters</i>	1280
–	<i>NTN-Parameters</i>	1281
–	<i>OLPC-SRS-Pos</i>	1282
–	<i>PDCCP-Parameters</i>	1282
–	<i>PDCCP-ParametersMRDC</i>	1283
–	<i>Phy-Parameters</i>	1284
–	<i>Phy-ParametersMRDC</i>	1292
–	<i>Phy-ParametersSharedSpectrumChAccess</i>	1293
–	<i>PosSRS-BWA-RRC-Inactive</i>	1294
–	<i>PosSRS-RRC-Inactive-OutsideInitialUL-BWP</i>	1295
–	<i>PosSRS-TxFrequencyHoppingRRC-Connected</i>	1296
–	<i>PosSRS-TxFrequencyHoppingRRC-Inactive</i>	1296
–	<i>PowSav-Parameters</i>	1297
–	<i>ProcessingParameters</i>	1298
–	<i>PRS-ProcessingCapabilityOutsideMGinPPWperType</i>	1298
–	<i>RAT-Type</i>	1299
–	<i>RedCapParameters</i>	1299
–	<i>RF-Parameters</i>	1300
–	<i>RF-ParametersMRDC</i>	1317
–	<i>RLC-Parameters</i>	1320
–	<i>SDAP-Parameters</i>	1321
–	<i>SharedSpectrumChAccessParamsPerBand</i>	1321
–	<i>SharedSpectrumChAccessParamsSidelinkPerBand</i>	1324

–	<i>SidelinkParameters</i>	1325
–	<i>SimultaneousRxTxPerBandPair</i>	1331
–	<i>SON-Parameters</i>	1331
–	<i>SpatialRelationsSRS-Pos</i>	1332
–	<i>SRS-AllPosResourcesRRC-Inactive</i>	1332
–	<i>SRS-SwitchingTimeNR</i>	1333
–	<i>SRS-SwitchingTimeEUTRA</i>	1333
–	<i>SupportedAggBandwidth</i>	1334
–	<i>SupportedBandwidth</i>	1334
–	<i>UE-BasedPerfMeas-Parameters</i>	1335
–	<i>UE-CapabilityRAT-ContainerList</i>	1335
–	<i>UE-CapabilityRAT-RequestList</i>	1336
–	<i>UE-CapabilityRequestFilterCommon</i>	1337
–	<i>UE-CapabilityRequestFilterNR</i>	1340
–	<i>UE-MRDC-Capability</i>	1340
–	<i>UE-NR-Capability</i>	1342
–	<i>UE-RadioPagingInfo</i>	1348
6.3.4	Other information elements	1349
–	<i>AbsoluteTimeInfo</i>	1349
–	<i>AppLayerIdleInactiveConfig</i>	1349
–	<i>AppLayerMeasConfig</i>	1350
–	<i>AreaConfiguration</i>	1353
–	<i>BT-NameList</i>	1355
–	<i>DedicatedInfoF1c</i>	1355
–	<i>EUTRA-AllowedMeasBandwidth</i>	1356
–	<i>EUTRA-MBSFN-SubframeConfigList</i>	1356
–	<i>EUTRA-MultiBandInfoList</i>	1357
–	<i>EUTRA-MultiBandInfoListAerial</i>	1357
–	<i>EUTRA-NS-PmaxList</i>	1358
–	<i>EUTRA-PhysCellId</i>	1358
–	<i>EUTRA-PhysCellIdRange</i>	1359
–	<i>EUTRA-PresenceAntennaPort1</i>	1359
–	<i>EUTRA-Q-OffsetRange</i>	1359
–	<i>IAB-IP-Address</i>	1360
–	<i>IAB-IP-AddressIndex</i>	1360
–	<i>IAB-IP-Usage</i>	1361
–	<i>LoggingDuration</i>	1361
–	<i>LoggingInterval</i>	1361
–	<i>LogMeasResultListBT</i>	1362
–	<i>LogMeasResultListWLAN</i>	1362
–	<i>MeasConfigAppLayerId</i>	1364
–	<i>OtherConfig</i>	1364
–	<i>PhysCellIdUTRA-FDD</i>	1372
–	<i>RRC-TransactionIdentifier</i>	1373
–	<i>Sensor-NameList</i>	1373
–	<i>TraceReference</i>	1374
–	<i>UE-MeasurementsAvailable</i>	1374
–	<i>UTRA-FDD-Q-OffsetRange</i>	1375
–	<i>VisitedCellInfoList</i>	1375
–	<i>WLAN-NameList</i>	1376
6.3.5	Sidelink information elements	1377
–	<i>SL-BWP-Config</i>	1377
–	<i>SL-BWP-ConfigCommon</i>	1379
–	<i>SL-BWP-DiscPoolConfig</i>	1380
–	<i>SL-BWP-DiscPoolConfigCommon</i>	1381
–	<i>SL-BWP-PoolConfig</i>	1381
–	<i>SL-BWP-PoolConfigCommon</i>	1382
–	<i>SL-BWP-PRS-PoolConfig</i>	1383
–	<i>SL-BWP-PRS-PoolConfigCommon</i>	1384
–	<i>SL-CBR-PriorityTxConfigList</i>	1384
–	<i>SL-CBR-CommonTxConfigList</i>	1385
–	<i>SL-CBR-CommonTxDedicatedSL-PRS-RP-List</i>	1386

–	SL-ConfigDedicatedNR.....	1387
–	SL-ConfiguredGrantConfig.....	1392
–	SL-ConfiguredGrantConfigDedicatedSL-PRS-RP	1395
–	SL-DestinationIdentity	1396
–	SL-DRX-Config	1396
–	SL-DRX-ConfigGC-BC	1397
–	SL-DRX-ConfigUC.....	1398
–	SL-DRX-ConfigUC-SemiStatic.....	1400
–	SL-FreqConfig	1401
–	SL-FreqConfigCommon	1404
–	SL-FreqSelectionConfig	1407
–	SL-IndirectPathAddChange	1407
–	SL-InterUE-CoordinationConfig	1408
–	SL-LBT-FailureRecoveryConfig	1412
–	SL-LogicalChannelConfig.....	1412
–	SL-L2RelayUE-Config	1415
–	SL-L2RemoteUE-Config	1416
–	SL-MeasConfigCommon	1417
–	SL-MeasConfigInfo	1418
–	SL-MeasIdList	1419
–	SL-MeasObjectList.....	1419
–	SL-PagingIdentityRemoteUE	1420
–	SL-PBPS-CPS-Config	1421
–	SL-PDCP-Config	1423
–	SL-PosBWP-ConfigCommon	1423
–	SL-PRS-ResourcePool.....	1424
–	SL-PSSCH-TxConfigList	1429
–	SL-QoS-FlowIdentity.....	1430
–	SL-QoS-Profile	1430
–	SL-QuantityConfig	1432
–	SL-RadioBearerConfig.....	1432
–	SL-RBSetConfig	1433
–	SL-RelayIndicationMP	1434
–	SL-RelayUE-ConfigU2U.....	1435
–	SL-RemoteUE-Config.....	1436
–	SL-RemoteUE-ConfigU2U	1437
–	SL-ReportConfigList	1438
–	SL-ResourcePool.....	1440
–	SL-RLC-BearerConfig.....	1452
–	SL-RLC-BearerConfigIndex.....	1453
–	SL-RLC-ChannelConfig	1453
–	SL-RLC-ChannelID.....	1454
–	SL-RLC-Config.....	1454
–	SL-ScheduledConfig	1455
–	SL-SDAP-Config	1457
–	SL-ServingCellInfo.....	1458
–	SL-SourceIdentity.....	1459
–	SL-SRAP-Config.....	1459
–	SL-SRAP-ConfigU2U	1460
–	SL-SyncConfig.....	1461
–	SL-Thres-RSRP-List	1463
–	SL-TxPower	1463
–	SL-TypeTxSync	1463
–	SL-UE-SelectedConfig	1464
–	SL-ZoneConfig	1465
–	SLRB-Uu-ConfigIndex	1466
6.3.6	MBS information elements	1466
–	CarrierFreqListMBS	1466
–	CFR-ConfigMCCH-MTCH	1466
–	DRX-ConfigPTM.....	1467
–	MBS-NeighbourCellList	1469
–	MBS-NonServingInfoList	1470

–	<i>MBS-ServiceList</i>	1471
–	<i>MBS-SessionInfoList</i>	1471
–	<i>MBS-SessionInfoListMulticast</i>	1474
–	<i>MTCH-SSB-MappingWindowList</i>	1477
–	<i>PDSCH-ConfigBroadcast</i>	1478
–	<i>TMGI</i>	1479
6.4	RRC multiplicity and type constraint values	1480
–	Multiplicity and type constraint definitions	1480
–	End of NR-RRC-Definitions	1489
6.5	Short Message	1489
6.6	PC5 RRC messages	1490
6.6.1	General message structure	1490
–	<i>PC5-RRC-Definitions</i>	1490
–	<i>SBCCH-SL-BCH-Message</i>	1491
–	<i>SCCH-Message</i>	1492
–	<i>MasterInformationBlockSidelink</i>	1492
–	<i>MeasurementReportSidelink</i>	1493
–	<i>NotificationMessageSidelink</i>	1495
–	<i>RemoteUEInformationSidelink</i>	1496
–	<i>RRCReconfigurationSidelink</i>	1498
–	<i>RRCReconfigurationCompleteSidelink</i>	1503
–	<i>RRCReconfigurationFailureSidelink</i>	1504
–	<i>UEAssistanceInformationSidelink</i>	1505
–	<i>UECapabilityEnquirySidelink</i>	1506
–	<i>UECapabilityInformationSidelink</i>	1506
–	<i>UEInformationRequestSidelink</i>	1509
–	<i>UEInformationResponseSidelink</i>	1511
–	<i>UuMessageTransferSidelink</i>	1512
–	End of PC5-RRC-Definitions	1513
7	Variables and constants	1514
7.1	Timers	1514
7.1.1	Timers (Informative)	1514
7.1.2	Timer handling	1524
7.2	Counters	1525
7.3	Constants	1525
7.4	UE variables	1525
–	<i>NR-UE-Variables</i>	1525
–	<i>VarAppLayerIdleConfig</i>	1527
–	<i>VarAppLayerPLMN-ListConfig</i>	1528
–	<i>VarConditionalReconfig</i>	1528
–	<i>VarConnEstFailReport</i>	1529
–	<i>VarConnEstFailReportList</i>	1529
–	<i>VarLogMeasConfig</i>	1530
–	<i>VarLogMeasReport</i>	1530
–	<i>VarLTM-ServingCellNoResetID</i>	1531
–	<i>VarLTM-ServingCellUE-MeasuredTA-ID</i>	1531
–	<i>VarMeasConfig</i>	1531
–	<i>VarMeasConfigSL</i>	1532
–	<i>VarMeasIdleConfig</i>	1533
–	<i>VarMeasIdleReport</i>	1533
–	<i>VarMeasReportList</i>	1533
–	<i>VarMeasReportListSL</i>	1534
–	<i>VarMeasReselectionConfig</i>	1535
–	<i>VarMobilityHistoryReport</i>	1535
–	<i>VarPendingRNA-Update</i>	1536
–	<i>VarRA-Report</i>	1536
–	<i>VarResumeMAC-Input</i>	1536
–	<i>VarRLF-Report</i>	1537
–	<i>VarServingSecurityCellSetID</i>	1537
–	<i>VarShortMAC-Input</i>	1538
–	<i>VarSuccessHO-Report</i>	1538

–	<i>VarSuccessPSCell-Report</i>	1539
–	<i>VarTSS-Info</i>	1539
–	<i>End of NR-UE-Variables</i>	1540
8	Protocol data unit abstract syntax	1541
8.1	General	1541
8.2	Structure of encoded RRC messages	1541
8.3	Basic production	1541
8.4	Extension	1541
8.5	Padding	1542
9	Specified and default radio configurations	1542
9.1	Specified configurations	1542
9.1.1	Logical channel configurations	1542
9.1.1.1	BCCH configuration	1542
9.1.1.2	CCCH configuration	1543
9.1.1.3	PCCH configuration	1543
9.1.1.4	SCCH configuration	1543
9.1.1.5	STCH configuration	1550
9.1.1.6	MCCH configuration	1551
9.1.1.7	MTCH configuration for MBS broadcast	1551
9.1.2	Void	1552
9.2	Default radio configurations	1552
9.2.1	Default SRB configurations	1552
9.2.2	Default MAC Cell Group configuration	1552
9.2.3	Default values timers and constants	1552
9.2.4	Default PC5 Relay RLC Channel	1553
9.2.5	Default SRAP configurations	1553
9.3	Sidelink pre-configured parameters	1554
–	<i>NR-Sidelink-Preconf</i>	1554
–	<i>SL-PreconfigurationNR</i>	1554
–	<i>End of NR-Sidelink-Preconf</i>	1558
–	<i>SL-AccessInfo-L2U2N</i>	1558
9.5	Void	1559
10	Generic error handling	1559
10.1	General	1559
10.2	ASN.1 violation or encoding error	1559
10.3	Field set to a not comprehended value	1559
10.4	Mandatory field missing	1559
10.5	Not comprehended field	1561
11	Radio information related interactions between network nodes	1562
11.1	General	1562
11.2	Inter-node RRC messages	1562
11.2.1	General	1562
11.2.2	Message definitions	1564
–	<i>CG-CandidateList</i>	1564
–	<i>HandoverCommand</i>	1565
–	<i>HandoverPreparationInformation</i>	1566
–	<i>CG-Config</i>	1571
–	<i>CG-ConfigInfo</i>	1580
–	<i>MeasurementTimingConfiguration</i>	1594
–	<i>UERadioPagingInformation</i>	1596
–	<i>UERadioAccessCapabilityInformation</i>	1598
11.2.3	Mandatory information in inter-node RRC messages	1599
11.3	Inter-node RRC information element definitions	1601
–	<i>L1-MeasConfigNRDC</i>	1601
–	<i>LTM-ResourceConfigNRDC</i>	1602
–	<i>ResourceConfigNRDC</i>	1603
11.4	Inter-node RRC multiplicity and type constraint values	1605
–	Multiplicity and type constraints definitions	1605
–	<i>End of NR-InterNodeDefinitions</i>	1606

12	Processing delay requirements for RRC procedures	1607
Annex A (informative):	Guidelines mainly on use of ASN.1	1612
A.1	Introduction	1612
A.2	Procedural specification	1612
A.2.1	General principles.....	1612
A.2.2	More detailed aspects	1612
A.3	PDU specification	1613
A.3.1	General principles.....	1613
A.3.1.1	ASN.1 clauses.....	1613
A.3.1.2	ASN.1 identifier naming conventions.....	1614
A.3.1.3	Text references using ASN.1 identifiers	1615
A.3.2	High-level message structure	1616
A.3.3	Message definition	1617
A.3.4	Information elements.....	1619
A.3.5	Fields with optional presence	1620
A.3.6	Fields with conditional presence	1621
A.3.7	Guidelines on use of lists with elements of SEQUENCE type.....	1621
A.3.8	Guidelines on use of parameterised SetupRelease type.....	1622
A.3.9	Guidelines on use of ToAddModList and ToReleaseList	1623
A.3.10	Guidelines on use of lists (without ToAddModList and ToReleaseList)	1624
A.4	Extension of the PDU specifications.....	1625
A.4.1	General principles to ensure compatibility	1625
A.4.2	Critical extension of messages and fields.....	1626
A.4.3	Non-critical extension of messages	1628
A.4.3.1	General principles	1628
A.4.3.2	Further guidelines	1629
A.4.3.3	Typical example of evolution of IE with local extensions.....	1630
A.4.3.4	Typical examples of non critical extension at the end of a message.....	1631
A.4.3.5	Examples of non-critical extensions not placed at the default extension location	1632
–	<i>ParentIE-WithEM</i>	1632
–	<i>ChildIE1-WithoutEM</i>	1633
–	<i>ChildIE2-WithoutEM</i>	1634
A.5	Guidelines regarding inclusion of transaction identifiers in RRC messages.....	1638
A.6	Guidelines regarding use of need codes	1638
A.7	Guidelines regarding use of conditions	1638
A.8	Miscellaneous.....	1639
Annex B (informative):	RRC Information.....	1640
B.1	Protection of RRC messages	1640
B.2	Description of BWP configuration options	1642
Annex C (normative):	List of CRs Containing Early Implementable Features and Corrections	1644
Annex D (normative):	UE requirements on ASN.1 comprehension.....	1648
Annex E (informative):	Change history	1650
History		1677

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the Radio Resource Control protocol for the radio interface between UE and NG-RAN.

The scope of the present document also includes:

- the radio related information transported in a transparent container between source gNB and target gNB upon inter gNB handover;
- the radio related information transported in a transparent container between a source or target gNB and another system upon inter RAT handover.
- the radio related information transported in a transparent container between a source eNB and target gNB during E-UTRA-NR Dual Connectivity.

The RRC protocol is also used to configure the radio interface between an IAB-node and its parent node [2], and the radio interface between an NCR-node and gNB [2].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 38.300: "NR; Overall description; Stage 2".
- [3] 3GPP TS 38.321: "NR; Medium Access Control (MAC); Protocol specification".
- [4] 3GPP TS 38.322: "NR; Radio Link Control (RLC) protocol specification".
- [5] 3GPP TS 38.323: "NR; Packet Data Convergence Protocol (PDCP) protocol specification".
- [6] ITU-T Recommendation X.680 (08/2015) "Information Technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation" (Same as the ISO/IEC International Standard 8824-1).
- [7] ITU-T Recommendation X.681 (08/2015) "Information Technology – Abstract Syntax Notation One (ASN.1): Information object specification" (Same as the ISO/IEC International Standard 8824-2).
- [8] ITU-T Recommendation X.691 (08/2015) "Information technology – ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)" (Same as the ISO/IEC International Standard 8825-2).
- [9] 3GPP TS 38.215: "NR; Physical layer measurements".
- [10] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA) Radio Resource Control (RRC); Protocol Specification".
- [11] 3GPP TS 33.501: "Security Architecture and Procedures for 5G System".

- [12] 3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception".
- [13] 3GPP TS 38.213: "NR; Physical layer procedures for control".
- [14] 3GPP TS 38.133: "NR; Requirements for support of radio resource management".
- [15] 3GPP TS 38.101-1: "NR; User Equipment (UE) radio transmission and reception; Part 1: Range 1 Standalone".
- [16] 3GPP TS 38.211: "NR; Physical channels and modulation".
- [17] 3GPP TS 38.212: "NR; Multiplexing and channel coding".
- [18] ITU-T Recommendation X.683 (08/2015) "Information Technology – Abstract Syntax Notation One (ASN.1): Parameterization of ASN.1 specifications" (Same as the ISO/IEC International Standard 8824-4).
- [19] 3GPP TS 38.214: "NR; Physical layer procedures for data".
- [20] 3GPP TS 38.304: "NR; User Equipment (UE) procedures in Idle mode and RRC Inactive state".
- [21] 3GPP TS 23.003: "Numbering, addressing and identification".
- [22] 3GPP TS 36.101: "E-UTRA; User Equipment (UE) radio transmission and reception".
- [23] 3GPP TS 24.501: "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3".
- [24] 3GPP TS 37.324: "Service Data Adaptation Protocol (SDAP) specification".
- [25] 3GPP TS 22.261: "Service requirements for the 5G System".
- [26] 3GPP TS 38.306: "User Equipment (UE) radio access capabilities".
- [27] 3GPP TS 36.304: "E-UTRA; User Equipment (UE) procedures in idle mode".
- [28] ATIS 0700041: "WEA 3.0: Device-Based Geo-Fencing".
- [29] 3GPP TS 23.041: "Technical realization of Cell Broadcast Service (CBS)".
- [30] 3GPP TS 33.401: "3GPP System Architecture Evolution (SAE); Security architecture".
- [31] 3GPP TS 36.211: "E-UTRA; Physical channels and modulation".
- [32] 3GPP TS 23.501: "System Architecture for the 5G System; Stage 2".
- [33] 3GPP TS 36.104: "E-UTRA; Base Station (BS) radio transmission and reception".
- [34] 3GPP TS 38.101-3 "NR; User Equipment (UE) radio transmission and reception; Part 3: Range 1 and Range 2 Interworking operation with other radios".
- [35] 3GPP TS 38.423: "NG-RAN, Xn application protocol (XnAP)".
- [36] 3GPP TS 38.473: "NG-RAN; F1 application protocol (F1AP)".
- [37] 3GPP TS 36.423: "E-UTRA; X2 application protocol (X2AP)".
- [38] 3GPP TS 24.008: "Mobile radio interface layer 3 specification; Core network protocols; Stage 3".
- [39] 3GPP TS 38.101-2 "NR; User Equipment (UE) radio transmission and reception; Part 2: Range 2 Standalone".
- [40] 3GPP TS 36.133: "E-UTRA; Requirements for support of radio resource management".
- [41] 3GPP TS 37.340: "E-UTRA and NR; Multi-connectivity; Stage 2".
- [42] 3GPP TS 38.413: "NG-RAN, NG Application Protocol (NGAP)".
- [43] 3GPP TS 23.502: "Procedures for the 5G System; Stage 2".

- [44] 3GPP TR 36.816: "Evolved Universal Terrestrial Radio Access (E-UTRA); Study on signalling and procedure for interference avoidance for in-device coexistence".
- [45] 3GPP TS 25.331: "Universal Terrestrial Radio Access (UTRA); Radio Resource Control (RRC); Protocol specification".
- [46] 3GPP TS 25.133: "Requirements for Support of Radio Resource Management (FDD)".
- [47] 3GPP TS 38.340: "Backhaul Adaptation Protocol (BAP) specification"
- [48] 3GPP TS 37.213: "Physical layer procedures for shared spectrum channel access".
- [49] 3GPP TS 37.355: "LTE Positioning Protocol (LPP)".
- [50] IEEE 802.11-2012, Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) specifications, IEEE Std.
- [51] Bluetooth Special Interest Group: "Bluetooth Core Specification v5.0", December 2016.
- [52] 3GPP TS 32.422: "Telecommunication management; Subscriber and equipment trace; Trace control and configuration management".
- [53] 3GPP TS 38.314: "NR; layer 2 measurements".
- [54] Void.
- [55] 3GPP TS 23.287: "Architecture enhancements for 5G System (5GS) to support Vehicle-to-Everything (V2X) services".
- [56] 3GPP TS 23.285: "Technical Specification Group Services and System Aspects; Architecture enhancements for V2X services".
- [57] 3GPP TS 24.587: " Technical Specification Group Core Network and Terminals; Vehicle-to-Everything (V2X) services in 5G System (5GS)".
- [58] Military Standard WGS84 Metric MIL-STD-2401 (11 January 1994): "Military Standard Department of Defence World Geodetic System (WGS)".
- [59] 3GPP TS 38.101-4 "NR; User Equipment (UE) radio transmission and reception; Part 4: Performance Requirements".
- [60] 3GPP TS 33.536: "Technical Specification Group Services and System Aspects; Security aspects of 3GPP support for advanced Vehicle-to-Everything (V2X) services".
- [61] 3GPP TS 37.320: "Radio measurement collection for Minimization of Drive Tests (MDT); Overall description; Stage 2".
- [62] 3GPP TS 36.306: "User Equipment (UE) radio access capabilities".
- [63] 3GPP TS 38.174: "NR; Integrated Access and Backhaul (IAB) radio transmission and reception".
- [64] 3GPP TS 38.472: "NG-RAN; F1 signalling transport".
- [65] 3GPP TS 23.304: "Proximity based Services (ProSe) in the 5G System (5GS)".
- [66] 3GPP TS 38.351: "NR; Sidelink Relay Adaptation Protocol (SRAP) Specification".
- [67] 3GPP TS 23.247: "Architectural enhancements for 5G multicast-broadcast services; Stage 2"
- [68] 3GPP TS 26.247: "Transparent end-to-end Packet-switched Streaming Service (PSS); Progressive Download and Dynamic Adaptive Streaming over HTTP (3GP-DASH)".
- [69] 3GPP TS 26.114: "IP Multimedia Subsystem (IMS); Multimedia Telephony; Media handling and interaction".
- [70] 3GPP TS 26.118: "Virtual Reality (VR) profiles for streaming applications".

- [71] NIMA TR 8350.2, Third Edition, Amendment 1, 3 January 2000: "DEPARTMENT OF DEFENSE WORLD GEODETIC SYSTEM 1984".
- [72] 3GPP TS 24.554: "Technical Specification Group Core Network and Terminals; Proximity-services (ProSe) in 5G System (5GS) protocol".
- [73] 3GPP TS 38.305: "NG Radio Access Network (NG-RAN); Stage 2 functional specification of User Equipment (UE) positioning in NG-RAN".
- [74] 3GPP TS 23.122: "Non-Access-Stratum (NAS) functions related to Mobile Station (MS) in idle mode".
- [75] 3GPP TS 38.101-5: "User Equipment (UE) radio transmission and reception; Part 5: Satellite access Radio Frequency (RF) and performance requirements".
- [76] 3GPP TS 23.256: "Support of Uncrewed Aerial Systems (UAS) connectivity, identification and tracking; Stage 2".
- [77] 3GPP TS 38.355: "NR; Sidelink Positioning Protocol (SLPP); Protocol Specification".
- [78] 3GPP TS 24.588: "Technical Specification Group Core Network and Terminals; Vehicle-to-Everything (V2X) services in 5G System (5GS); User Equipment (UE) policies; Stage 3".
- [79] 3GPP TS 38.106: "NR; NR Repeater Radio Transmission and Reception".
- [80] 3GPP TS 28.405: "Technical Specification Group Services and System Aspects; Telecommunication management; Quality of Experience (QoE) measurement collection; Control and configuration".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

2Rx XR UE: Two antenna port XR UE as specified in TS 38.101-1 [15].

A2X communication: A communication to support A2X services leveraging PC5 reference points, as defined in TS 23.256 [76]. A2X services are realized by various types of A2X applications, e.g., BRID or DAA.

Additional sidelink RLC bearer: If the sidelink PDCP entity is associated with two sidelink RLC entities, the additional sidelink RLC bearer is the RLC bearer configured by *sl-RLC-BearerToAddModListSizeExt* in *sl-ConfigDedicatedNR*, or *sl-RLC-BearerConfigListSizeExt* in *SIB12* or in *SidelinkPreconfigNR*.

Aerial UE: UE performing Aerial UE communication, as defined in TS 38.300 [2], clause 16.18 and TS 23.256 [76].

AM MRB: An MRB associated with at least an AM RLC bearer for PTP transmission.

BH RLC channel: An RLC channel between two nodes, which is used to transport backhaul packets.

Broadcast MRB: A radio bearer configured for MBS broadcast delivery.

CEIL: Mathematical function used to 'round up' i.e. to the nearest integer having a higher or equal value.

DAPS bearer: a bearer whose radio protocols are located in both the source gNB and the target gNB during DAPS handover to use both source gNB and target gNB resources.

Data Burst: A set of multiple PDUs generated and sent by the application in a short period of time, as defined in TS 23.501 [32].

Dedicated signalling: Signalling sent on DCCH logical channel between the network and a single UE.

Dormant BWP: The dormant BWP is one of downlink BWPs configured by the network via dedicated RRC signalling. In the dormant BWP, the UE stops monitoring PDCCH on/for the SCell, but continues performing CSI measurements, Automatic Gain Control (AGC) and beam management, if configured. For each serving cell other than the SpCell or PUCCH SCell, the network may configure one BWP as a dormant BWP.

Earth-fixed cell: An NTN cell fixed with respect to a certain geographic area on Earth. It can be provisioned by beam(s) continuously covering the same geographical area (e.g., the case of GSO satellites).

Earth-moving cell: An NTN cell moving on the ground. It can be provisioned by beam(s) whose coverage area slides over the Earth's surface (e.g., the case of NGSO satellites generating fixed or non-steerable beams).

eRedCap UE: A UE with enhanced reduced capabilities as specified in clause 4.2.22.1 in TS 38.306 [26].

Field: The individual contents of an information element are referred to as fields.

FLOOR: Mathematical function used to 'round down' i.e. to the nearest integer having a lower or equal value.

Frequency Selection Area ID: An identity used for broadcast MBS session to guide the frequency selection of the UE as defined in TS 23.247 [67].

Global cell identity: An identity to uniquely identifying an NR cell. It is consisted of *cellIdentity* and *plmn-Identity* of the first *PLMN-Identity* in *plmn-IdentityList* in SIB1.

Information element: A structural element containing single or multiple fields is referred as information element.

Candidate configuration: A configuration part of an *RRCReconfiguration* message associated with a candidate cell, e.g., for LTM or subsequent CPAC. A candidate configuration can be a complete candidate configuration or a delta configuration relatively to a reference configuration.

Reference configuration: A configuration provided by the network to the UE that is common, within the same cell group, to a group of configured non-complete candidate configurations.

MBS Radio Bearer: A radio bearer that is configured for MBS delivery.

Mobile IAB-MT: mobile IAB-node function that terminates the Uu interface to the parent node using the procedures and behaviours specified for UEs unless stated otherwise. The mobile IAB-MT uses the same procedures and behaviours specified for the IAB-MT, unless explicitly stated otherwise.

Mobile IAB-node: RAN node that supports NR access links to UEs and an NR backhaul link to a parent node, and that can conduct physical mobility across the RAN area. The mobile IAB-node function used in 38-series of 3GPP Specifications corresponds to the MBSR function defined in TS 23.501 [32]. The mobile IAB-node uses the same procedures and behaviours specified for the IAB-node, unless explicitly stated otherwise.

Multicast/Broadcast Service: A point-to-multipoint service as defined in TS 23.247 [67].

Multicast MRB: A radio bearer configured for MBS multicast delivery.

MUSIM gap: Period that the UE may use to perform MUSIM operations.

Multi-path: Mode of operation of a UE in *RRC_CONNECTED* configured with one direct path on which the UE connects to gNB using NR Uu, and one indirect path on which the UE connects to the same gNB via another UE using PC5 unicast link or Non-3GPP Connection.

MP remote UE: A UE configured with Multi-path. When the connectivity of indirect path is PC5 unicast link, the MP remote UE is acting as a L2 U2N Remote UE. When the connectivity of indirect path is Non-3GPP Connection, the MP remote UE is acting as a N3C remote UE.

MP relay UE: A UE that provides connectivity of indirect path to a MP remote UE. When the connectivity is PC5 unicast link, the MP relay UE is acting as a L2 U2N Relay UE. When the connectivity is Non-3GPP Connection, the MP relay UE is acting as a N3C relay UE.

NCSG: Network controlled small gap as defined in TS 38.133 [14].

NPN-only Cell: A cell that is only available for normal service for NPNs' subscriber. An NPN-capable UE determines that a cell is NPN-only Cell by detecting that the *cellReservedForOtherUse* IE is set to true while the *nprn-IdentityInfoList* IE is present in *CellAccessRelatedInfo*.

N3C indirect path: In Multi-path, the indirect path using Non-3GPP Connection between remote UE and relay UE.

NR sidelink communication: AS functionality enabling at least V2X Communication as defined in TS 23.287 [55] and/or A2X Communication as defined in TS 23.256 [76] and/or ProSe Communication (including ProSe UE-to-Network Relay, non-Relay communication, and ProSe UE-to-UE Relay Communication including UE-to-UE Relay communication with integrated discovery) as defined in TS 23.304 [65] between two or more nearby UEs, using NR technology but not traversing any network node.

NR sidelink discovery: AS functionality enabling ProSe non-Relay Discovery, ProSe UE-to-Network Relay discovery and ProSe UE-to-UE Relay discovery for Proximity based Services as defined in TS 23.304 [65] between two or more nearby UEs, using NR technology but not traversing any network node.

NR sidelink positioning: AS functionality which determines geographical or relative location and possibly velocity of a target UE or ranging via PC5 interface using SL-PRS transmission and reception as defined in TS 38.305 [73] and TS 38.355 [77].

PNI-NPN identity: an identifier of a PNI-NPN comprising of a PLMN ID and a CAG-ID combination.

Primary Cell: The MCG cell, operating on the primary frequency, in which the UE either performs the initial connection establishment procedure or initiates the connection re-establishment procedure.

PC5 Relay RLC channel: An RLC channel between L2 U2N Remote UE and L2 U2N Relay UE, or between L2 U2U Remote UE and L2 U2U Relay UE, which is used to transport packets over PC5 for L2 UE-to-Network relay or L2 UE-to-UE relay.

PDU Set: one or more PDUs carrying the payload of one unit of information generated at the application level (e.g. frame(s) or video slice(s) for XR Services), as defined in TS 23.501 [32].

Primary SCG Cell: For dual connectivity operation, the SCG cell in which the UE performs random access when performing the Reconfiguration with Sync procedure.

Primary Timing Advance Group: Timing Advance Group containing the SpCell.

PUCCH SCell: An SCell configured with PUCCH by *PUCCH-Config*.

PUSCH-Less SCell: An SCell configured without PUSCH.

Quasi-Earth-fixed cell: An NTN cell fixed with respect to a certain geographic area on Earth during a certain time duration. It can be provisioned by beam(s) covering one geographic area for a limited period and a different geographic area during another period (e.g., the case of NGSO satellites generating steerable beams).

RedCap UE: A UE with reduced capabilities as specified in clause 4.2.21.1 in TS 38.306 [26].

RLC bearer configuration: The lower layer part of the radio bearer configuration comprising the RLC and logical channel configurations.

Secondary Cell: For a UE configured with CA, a cell providing additional radio resources on top of Special Cell.

Secondary Cell Group: For a UE configured with dual connectivity, the subset of serving cells comprising of the PSCell and zero or more secondary cells.

Serving Cell: For a UE in RRC_CONNECTED not configured with CA/DC there is only one serving cell comprising of the primary cell. For a UE in RRC_CONNECTED configured with CA/ DC the term 'serving cells' is used to denote the set of cells comprising of the Special Cell(s) and all secondary cells.

Small Data Transmission: A procedure used for transmission of data and/or signalling over allowed radio bearers in RRC_INACTIVE state (i.e. without the UE transitioning to RRC_CONNECTED state). The SDT procedure is considered to be ongoing once the conditions for initiating SDT as specified in clause 5.3.13.1b are fulfilled until the SDT procedure is completed either successfully or unsuccessfully as specified in clause 18.0 in TS 38.300 [2].

SNPN identity: an identifier of an SNPN comprising of a PLMN ID and an NID combination.

SL indirect path: In Multi-path, the indirect path using PC5 unicast link between remote UE and relay UE.

Special Cell: For Dual Connectivity operation the term Special Cell refers to the PCell of the MCG or the PSCell of the SCG, otherwise the term Special Cell refers to the PCell.

Split DRB: In MR-DC, a DRB that supports transmission via MCG and SCG, as well as duplication of PDCP PDUs as defined in TS 37.340 [41]; or in MP, a DRB that supports transmission via direct path and indirect path, as well as duplication of PDCP PDUs.

Split SRB: In MR-DC, an SRB that supports transmission via MCG and SCG as well as duplication of RRC PDUs as defined in TS 37.340 [41]; or in MP, a SRB that supports transmission via direct path and indirect path, as well as duplication of PDCP PDUs.

SSB Frequency: Frequency referring to the position of resource element RE=#0 (subcarrier #0) of resource block RB#10 of the SS block.

U2N Relay UE: A UE that provides functionality to support connectivity to the network for U2N Remote UE(s).

U2N Remote UE: A UE that communicates with the network via a U2N Relay UE.

U2U Relay UE: A UE that provides functionality to support connectivity between two U2U Remote UEs.

U2U Remote UE: A UE that communicates with other UEs via a U2U Relay UE.

Uu Relay RLC channel: An RLC channel between L2 U2N Relay UE and gNB, which is used to transport packets over Uu for L2 UE-to-Network relay or for indirect path in case of MP.

UE Inactive AS Context: UE Inactive AS Context is stored when the connection is suspended and restored when the connection is resumed. It includes information as defined in clause 5.3.8.3.

V2X sidelink communication: AS functionality enabling V2X Communication as defined in TS 23.285 [56], between nearby UEs, using E-UTRA technology but not traversing any network node.

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

5GC	5G Core Network
A2X	Aircraft-to-Everything
ACK	Acknowledgement
AM	Acknowledged Mode
ARQ	Automatic Repeat Request
AS	Access Stratum
ASN.1	Abstract Syntax Notation One
ATG	Air to Ground
BAP	Backhaul Adaptation Protocol
BCD	Binary Coded Decimal
BFD	Beam Failure Detection
BH	Backhaul
BLER	Block Error Rate
BRID	Broadcast Remote Identification
BSR	Buffer Status Report
BWP	Bandwidth Part
CA	Carrier Aggregation
CAG	Closed Access Group
CAG-ID	Closed Access Group Identifier
CAPC	Channel Access Priority Class
CBR	Channel Busy Ratio
CCCH	Common Control Channel
CFR	Common Frequency Resources
CG	Cell Group
CHO	Conditional Handover
CLI	Cross Link Interference
CMAS	Commercial Mobile Alert Service
CP	Control Plane
CPA	Conditional PSCell Addition

CPAC	Conditional PSCell Addition or Change
CPC	Conditional PSCell Change
C-RNTI	Cell RNTI
CSI	Channel State Information
DAA	Detect And Avoid
DAPS	Dual Active Protocol Stack
DC	Dual Connectivity
DCCH	Dedicated Control Channel
DCI	Downlink Control Information
DCP	DCI with CRC scrambled by PS-RNTI
DFN	Direct Frame Number
DL	Downlink
DL-PRS	Downlink Positioning Reference Signal
DL-SCH	Downlink Shared Channel
DM-RS	Demodulation Reference Signal
DRB	(user) Data Radio Bearer
DRX	Discontinuous Reception
DSR	Delay Status Report
DTCH	Dedicated Traffic Channel
DTX	Discontinuous Transmission
ECEF	Earth-Centered, Earth-Fixed
ECI	Earth-Centered Inertial
EN-DC	E-UTRA NR Dual Connectivity with E-UTRA connected to EPC
EPC	Evolved Packet Core
EPS	Evolved Packet System
ETWS	Earthquake and Tsunami Warning System
E-UTRA	Evolved Universal Terrestrial Radio Access
E-UTRA/5GC	E-UTRA connected to 5GC
E-UTRA/EPC	E-UTRA connected to EPC
E-UTRAN	Evolved Universal Terrestrial Radio Access Network
FDD	Frequency Division Duplex
FFS	For Further Study
G-CS-RNTI	Group Configured Scheduling RNTI
GERAN	GSM/EDGE Radio Access Network
GIN	Group ID for Network selection
GNSS	Global Navigation Satellite System
G-RNTI	Group RNTI
GSM	Global System for Mobile Communications
GSO	Geosynchronous Orbit
HARQ	Hybrid Automatic Repeat Request
HRNN	Human Readable Network Name
HSDN	High Speed Dedicated Network
H-SFN	Hyper SFN
HST	High Speed Train
IAB	Integrated Access and Backhaul
IAB-DU	IAB-node DU
IAB-MT	IAB Mobile Termination
IDC	In-Device Coexistence
IE	Information element
IMSI	International Mobile Subscriber Identity
kB	Kilobyte (1000 bytes)
L1	Layer 1
L2	Layer 2
L3	Layer 3
LBT	Listen Before Talk
LEO	Low Earth Orbit
LTM	L1/L2 Triggered Mobility
MAC	Medium Access Control
MBS	Multicast/Broadcast Service
MBS FSAI	MBS Frequency Selection Area Identity
MCCCH	MBS Control Channel
MCG	Master Cell Group

MDT	Minimization of Drive Tests
MIB	Master Information Block
MO-SDT	Mobile Originated SDT
MPE	Maximum Permissible Exposure
MP	Multi-path
MRB	MBS Radio Bearer
MR-DC	Multi-Radio Dual Connectivity
MTCH	MBS Traffic Channel
MT-SDT	Mobile Terminated SDT
MTSI	Multimedia Telephony Service for IMS
MUSIM	Multi-Universal Subscriber Identity Module
N3C	Non-3GPP Connection
N/A	Not Applicable
NCR	Network-Controlled Repeater
NCR-Fwd	NCR Forwarding
NCR-MT	NCR Mobile Termination
NE-DC	NR E-UTRA Dual Connectivity
NES	Network Energy Savings
(NG)EN-DC	E-UTRA NR Dual Connectivity (covering E-UTRA connected to EPC or 5GC)
NGEN-DC	E-UTRA NR Dual Connectivity with E-UTRA connected to 5GC
NID	Network Identifier
NPN	Non-Public Network
NR-DC	NR-NR Dual Connectivity
NR/5GC	NR connected to 5GC
NSAG	Network Slice AS Group
NTN	Non-Terrestrial Network
PCell	Primary Cell
PDCP	Packet Data Convergence Protocol
PDU	Protocol Data Unit
PEI	Paging Early Indication
PEI-O	Paging Early Indication-Occasion
PLMN	Public Land Mobile Network
PNI-NPN	Public Network Integrated Non-Public Network
posSIB	Positioning SIB
PPW	PRS Processing Window
PRS	Positioning Reference Signal
PSCell	Primary SCG Cell
PSI	PDU Set Importance
PTM	Point to Multipoint
PTP	Point to Point
PWS	Public Warning System
QoE	Quality of Experience
QoS	Quality of Service
RAN	Radio Access Network
RAT	Radio Access Technology
RLC	Radio Link Control
RLM	Radio Link Monitoring
RMTC	RSSI Measurement Timing Configuration
RNA	RAN-based Notification Area
RNTI	Radio Network Temporary Identifier
ROHC	Robust Header Compression
RPLMN	Registered Public Land Mobile Network
RRC	Radio Resource Control
RS	Reference Signal
SBAS	Satellite Based Augmentation System
SCell	Secondary Cell
SCG	Secondary Cell Group
SCS	Subcarrier Spacing
SD-RSRP	Sidelink Discovery RSRP
SDT	Small Data Transmission
SFN	Single Frequency Network
SFN	System Frame Number

SFTD	SFN and Frame Timing Difference
SI	System Information
SIB	System Information Block
SL	Sidelink
SL-PRS	Sidelink Positioning Reference Signal
SLSS	Sidelink Synchronisation Signal
SNPN	Stand-alone Non-Public Network
SpCell	Special Cell
SRAP	Sidelink Relay Adaptation Protocol
SRB	Signalling Radio Bearer
SRS	Sounding Reference Signal
SSB	Synchronization Signal Block
TAG	Timing Advance Group
TDCP	Time Domain Channel Property
TDD	Time Division Duplex
TEG	Timing Error Group
TM	Transparent Mode
TMGI	Temporary Mobile Group Identity
TN	Terrestrial Network
TSS	Timing Synchronization Status.
U2N	UE-to-Network
U2U	UE-to-UE
UDC	Uplink Data Compression
UE	User Equipment
UL	Uplink
UM	Unacknowledged Mode
UP	User Plane
VR	Virtual Reality
VSAT	Very Small Aperture Terminal
XR	eXtended Reality

In the ASN.1, lower case may be used for some (parts) of the above abbreviations e.g. c-RNTI.

4 General

4.1 Introduction

This specification is organised as follows:

- clause 4.2 describes the RRC protocol model;
- clause 4.3 specifies the services provided to upper layers as well as the services expected from lower layers;
- clause 4.4 lists the RRC functions;
- clause 5 specifies RRC procedures, including UE state transitions;
- clause 6 specifies the RRC messages in ASN.1 and description;
- clause 7 specifies the variables (including protocol timers and constants) and counters to be used by the UE;
- clause 8 specifies the encoding of the RRC messages;
- clause 9 specifies the specified and default radio configurations;
- clause 10 specifies generic error handling;
- clause 11 specifies the RRC messages transferred across network nodes;
- clause 12 specifies the UE capability related constraints and performance requirements.

4.2 Architecture

4.2.1 UE states and state transitions including inter RAT

A UE is either in RRC_CONNECTED state or in RRC_INACTIVE state when an RRC connection has been established. If this is not the case, i.e. no RRC connection is established, the UE is in RRC_IDLE state. The RRC states can further be characterised as follows:

- **RRC_IDLE:**
 - A UE specific DRX may be configured by upper layers;
 - At lower layers, the UE may be configured with a DRX for PTM transmission of MBS broadcast;
 - UE controlled mobility based on network configuration;
 - The UE:
 - Monitors Short Messages transmitted with P-RNTI over DCI (see clause 6.5);
 - Monitors a Paging channel for CN paging using 5G-S-TMSI, except if the UE is acting as a L2 U2N Remote UE;
 - If configured by upper layers for MBS multicast reception, monitors a Paging channel for CN paging using TMGI;
 - Performs neighbouring cell measurements and cell (re-)selection;
 - Performs measurements on L2 U2N Relay UEs and relay (re-)selection;
 - Acquires system information and can send SI request (if configured);
 - Performs logging of available measurements together with location and time for logged measurement configured UEs;
 - Performs idle/inactive measurements for idle/inactive measurement configured UEs;
 - If configured by upper layers for MBS broadcast reception, acquires MCCH change notification and MBS broadcast control information and data.
- **RRC_INACTIVE:**
 - A UE specific DRX may be configured by upper layers or by RRC layer;
 - At lower layers, the UE may be configured with a DRX for PTM transmission of MBS broadcast and/or a DRX for PTM transmission of MBS multicast;
 - UE controlled mobility based on network configuration;
 - The UE stores the UE Inactive AS context;
 - A RAN-based notification area is configured by RRC layer;
 - Transfer of unicast data and/or signalling to/from UE over radio bearers configured for SDT.
 - The UE:
 - Monitors Short Messages transmitted with P-RNTI over DCI (see clause 6.5);
 - While T319a is running, monitors control channels associated with the shared data channel to determine if data is scheduled for it;
 - While SDT procedure is ongoing and T319a is not running, if CG-SDT is selected and if extended CG-SDT periodicity is configured (i.e. *cg-SDT-PeriodicityExt* is configured), monitors a Paging channel for CN paging using 5G-S-TMSI and RAN paging using fullI-RNTI except if the UE is acting as a L2 U2N Remote UE;

- While SDT procedure is not ongoing, monitors a Paging channel for CN paging using 5G-S-TMSI and RAN paging using fullI-RNTI, except if the UE is acting as a L2 U2N Remote UE;
 - If configured by upper layers for MBS multicast reception, while SDT procedure is not ongoing, monitors a Paging channel for paging using TMGI;
 - Performs neighbouring cell measurements and cell (re-)selection;
 - Performs measurements on L2 U2N Relay UEs and relay (re-)selection;
 - Performs RAN-based notification area updates periodically and when moving outside the configured RAN-based notification area;
 - Acquires system information and, while SDT procedure is not ongoing, can send SI request (if configured);
 - While SDT procedure is not ongoing, performs logging of available measurements together with location and time for logged measurement configured UEs;
 - While SDT procedure is not ongoing, performs idle/inactive measurements for idle/inactive measurement configured UEs;
 - If configured by upper layers for MBS broadcast reception, acquires MCCH change notification and MBS broadcast control information and data;
 - If configured for MBS multicast reception in RRC_INACTIVE, acquires multicast MCCH change notification and MBS multicast control information and data;
 - Transmits SRS for Positioning.
- **RRC_CONNECTED:**
- The UE stores the AS context;
 - Transfer of unicast data to/from UE;
 - Transfer of MBS multicast data to UE;
 - At lower layers, the UE may be configured with a UE specific DRX;
 - At lower layers, the UE may be configured with a DRX for PTM transmission of MBS broadcast and/or a DRX for MBS multicast;
 - At lower layers, the UE may be configured with a cell specific cell DTX/DRX;
 - For UEs supporting CA, use of one or more SCells, aggregated with the SpCell, for increased bandwidth;
 - For UEs supporting DC, use of one SCG, aggregated with the MCG, for increased bandwidth;
 - Network controlled mobility within NR, to/from E-UTRA, and to UTRA-FDD;
 - Network controlled mobility (path switch) between a serving cell and a L2 U2N Relay UE, or vice versa, or between a source L2 U2N Relay UE and a target L2 U2N Relay UE;
 - Network controlled MP operation.
 - The UE:
 - Monitors Short Messages transmitted with P-RNTI over DCI (see clause 6.5), if configured;
 - Monitors control channels associated with the shared data channel to determine if data is scheduled for it;
 - Provides channel quality and feedback information;
 - Performs neighbouring cell and/or L2 U2N relay measurements and measurement reporting;
 - Acquires system information;

- Performs immediate MDT measurement together with available location reporting;
- If configured by upper layers for MBS broadcast reception, acquires MCCH change notification and MBS broadcast control information and data.

Figure 4.2.1-1 illustrates an overview of UE RRC state machine and state transitions in NR. A UE has only one RRC state in NR at one time.

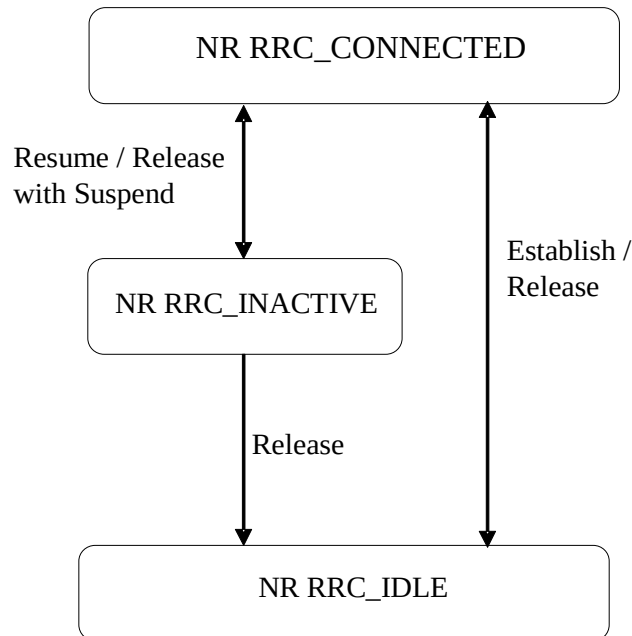 


Figure 4.2.1-1: UE state machine and state transitions in NR

Figure 4.2.1-2 illustrates an overview of UE state machine and state transitions in NR as well as the mobility procedures supported between NR/5GC, E-UTRA/EPC and E-UTRA/5GC.

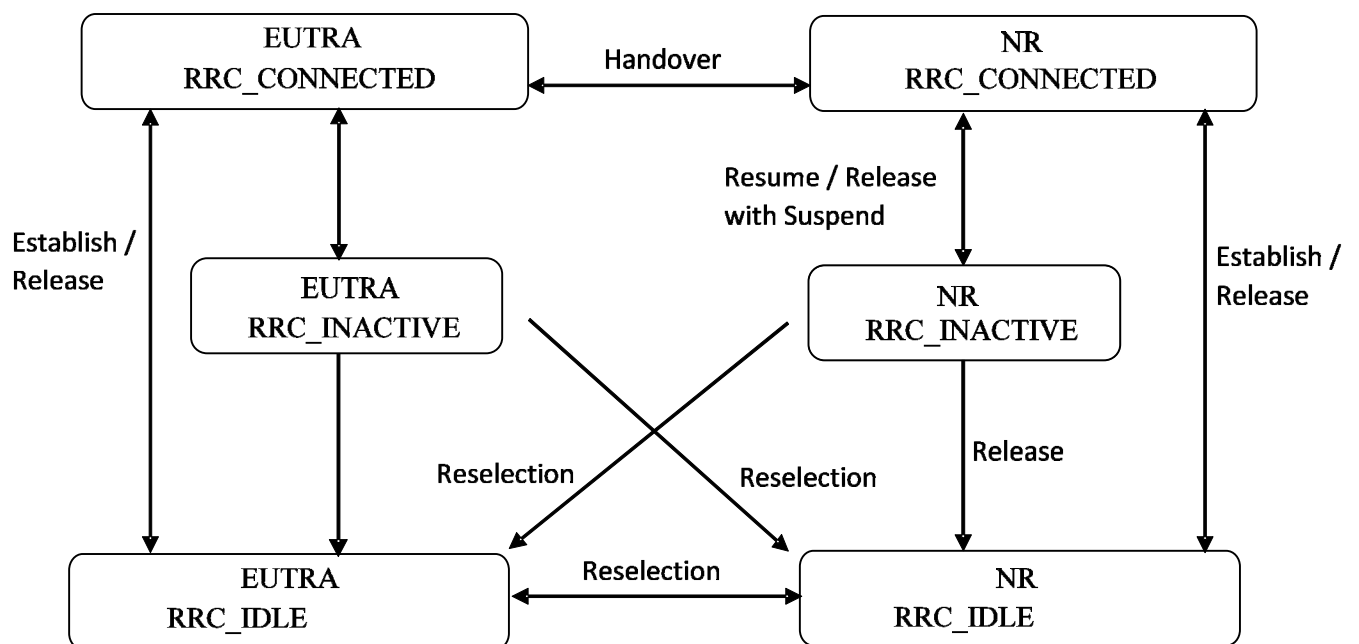 


Figure 4.2.1-2: UE state machine and state transitions between NR/5GC, E-UTRA/EPC and E-UTRA/5GC

Figure 4.2.1-3 illustrates the mobility procedure supported between NR/5GC and UTRA-FDD.

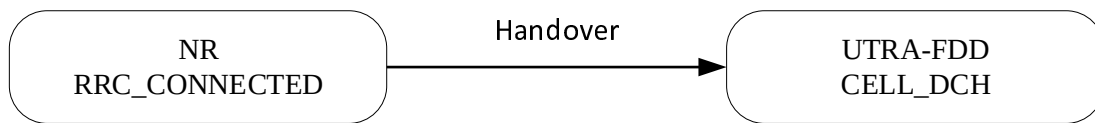 


Figure 4.2.1-3: Mobility procedure supported between NR/5GC and UTRA-FDD

4.2.2 Signalling radio bearers

"Signalling Radio Bearers" (SRBs) are defined as Radio Bearers (RBs) that are used only for the transmission of RRC and NAS messages. More specifically, the following SRBs are defined:

- SRB0 is for RRC messages using the CCCH logical channel (except SRB0 of L2 U2N Remote UE);
- SRB1 is for RRC messages (which may include a piggybacked NAS message) as well as for NAS messages prior to the establishment of SRB2, all using DCCH logical channel (except SRB1 of L2 U2N Remote UE);
- SRB2 is for NAS messages and for RRC messages which include logged measurement information, all using DCCH logical channel (except SRB2 of L2 U2N Remote UE). SRB2 has a lower priority than SRB1 and may be configured by the network after AS security activation;
- SRB3 is for specific RRC messages when UE is in (NG)EN-DC or NR-DC, all using DCCH logical channel;
- SRB4 is for RRC messages which include application layer measurement report information, all using DCCH logical channel. SRB4 has a lower priority than SRB1 and can only be configured by the network after AS security activation.
- SRB5 is for RRC messages which include application layer measurement report information, all using DCCH logical channel. SRB5 has a lower priority than SRB1 and SRB3 and can only be configured by the SN serving the SCG when the UE is in NR-DC, after AS security activation.

In downlink, piggybacking of NAS messages is used only for one dependant (i.e. with joint success/failure) procedure: bearer establishment/modification/release. In uplink piggybacking of NAS message is used only for transferring the initial NAS message during connection setup and connection resume.

NOTE 1: The NAS messages transferred via SRB2 are also contained in RRC messages, which however do not include any RRC protocol control information.

Once AS security is activated, all RRC messages on SRB1, SRB2, SRB3, SRB4 and SRB5, including those containing NAS messages, are integrity protected and ciphered by PDCP. NAS independently applies integrity protection and ciphering to the NAS messages, see TS 24.501 [23].

Split SRB is supported for all the MR-DC options as well as MP in both SRB1 and SRB2 (split SRB is not supported for SRB0, SRB3, SRB4 and SRB5).

For operation with shared spectrum channel access in FR1, SRB0, SRB1 and SRB3 are assigned with the highest priority Channel Access Priority Class (CAPC), (i.e. CAPC = 1) while CAPC for SRB2 is configurable.

For the NR sidelink L2 U2N relay operations not involved in MP, SRB0, SRB1, SRB2 of a L2 U2N Remote UE are not using Uu CCCH/DCCH logical channels. The SRB0, SRB1, SRB2 of a L2 U2N Remote UE are transmitted via the PC5 Relay RLC channels over PC5 and Uu Relay RLC channels over Uu.

4.3 Services

4.3.1 Services provided to upper layers

The RRC protocol offers the following services to upper layers:

- Broadcast of common control information;
- Notification of UEs in RRC_IDLE, e.g. about a mobile terminating call;
- Notification of UEs about ETWS and/or CMAS;
- Transfer of dedicated signalling;
- Broadcast of positioning assistance data;
- Transfer of application layer measurement configuration and reporting.

4.3.2 Services expected from lower layers

In brief, the following are the main services that RRC expects from lower layers:

- Integrity protection, ciphering and loss-less in-sequence delivery of information without duplication;

4.4 Functions

The RRC protocol includes the following main functions:

- Broadcast of system information:
 - Including NAS common information;
 - Information applicable for UEs in RRC_IDLE and RRC_INACTIVE (e.g. cell (re-)selection parameters, neighbouring cell information) and information (also) applicable for UEs in RRC_CONNECTED (e.g. common channel configuration information);
 - Including ETWS notification, CMAS notification;
 - Including positioning assistance data.
- RRC connection control:
 - Paging;
 - Establishment/modification/suspension/resumption/release of RRC connection, including e.g. assignment/modification of UE identity (C-RNTI, fullI-RNTI, etc.), establishment/modification/suspension/resumption/release of SRBs (except for SRB0);
 - Access barring;
 - Initial AS security activation, i.e. initial configuration of AS integrity protection (SRBs, DRBs) and AS ciphering (SRBs, DRBs);
 - RRC connection mobility including e.g. intra-frequency and inter-frequency handover, path switch from a PCell to a target L2 U2N Relay UE or from a L2 U2N Relay UE to a target PCell or from a source L2 U2N Relay UE to a target L2 U2N Relay UE, associated AS security handling, i.e. key/algorithm change, specification of RRC context information transferred between network nodes;
 - Establishment/modification/suspension/resumption/release of RBs carrying user data (DRBs/MRBs);
 - Radio configuration control including e.g. assignment/modification of ARQ configuration, HARQ configuration, DRX configuration;

- In case of DC, cell management including e.g. change of PSCell, addition/modification/release of SCG cell(s);
- In case of CA, cell management including e.g. addition/modification/release of SCell(s);
- In case of MP, path management including e.g. addition/modification/release of indirect path;
- QoS control including assignment/ modification of semi-persistent scheduling (SPS) configuration and configured grant configuration for DL and UL respectively, assignment/ modification of parameters for UL rate control in the UE, i.e. allocation of a priority and a prioritised bit rate (PBR) for each RB of UE and logical channel of IAB-MT.
- Recovery from radio link failure.
- Inter-RAT mobility including e.g. AS security activation, transfer of RRC context information;
- Measurement configuration and reporting:
 - Establishment/modification/release of measurement configuration (e.g. intra-frequency, inter-frequency and inter- RAT measurements);
 - Setup and release of measurement gaps;
 - Measurement reporting.
- Configuration of BAP entity and BH RLC channels for the support of IAB-node.
- Configuration of SRAP entity and Uu/PC5 Relay RLC channels for the support of L2 U2N relay.
- Configuration of SRAP entity and PC5 Relay RLC channels for the support of L2 U2U relay operation.
- Other functions including e.g. generic protocol error handling, transfer of dedicated NAS information, transfer of UE radio access capability information.
- Support of self-configuration and self-optimisation.
- Support of measurement logging and reporting for network performance optimisation, as specified in TS 37.320 [61];
- Support of transfer of application layer measurement configuration and reporting.
- Configuration of side control information for NCR-node.

5 Procedures

5.1 General

5.1.1 Introduction

This clause covers the general requirements.

5.1.2 General requirements

The UE shall:

- 1> process the received messages in order of reception by RRC, i.e. the processing of a message shall be completed before starting the processing of a subsequent message;

NOTE: Network may initiate a subsequent procedure prior to receiving the UE's response of a previously initiated procedure.

- 1> within a clause execute the steps according to the order specified in the procedural description;

- 1> consider the term 'radio bearer' (RB) to cover SRBs, DRBs and MRBs unless explicitly stated otherwise;
- 1> set the *rrc-TransactionIdentifier* in the response message, if included, to the same value as included in the message received from the network that triggered the response message;
- 1> upon receiving a choice value set to *setup*:
 - 2> apply the corresponding received configuration and start using the associated resources, unless explicitly specified otherwise;
- 1> upon receiving a choice value set to *release*:
 - 2> clear the corresponding configuration and stop using the associated resources;
- 1> in case the size of a list is extended, upon receiving an extension field comprising the entries in addition to the ones carried by the original field (regardless of whether the network signals more entries in total); apply the following generic behaviour unless explicitly stated otherwise:
 - 2> create a combined list by concatenating the additional entries included in the extension field to the original field while maintaining the order among both the original and the additional entries;
 - 2> for the combined list, created according to the previous, apply the same behaviour as defined for the original field.

5.1.3 Requirements for UE in MR-DC

In this specification, the UE considers itself to be in:

- EN-DC, if and only if it is configured with *nr-SecondaryCellGroupConfig* according to TS 36.331[10], and it is connected to EPC,
- NGEN-DC, if and only if it is configured with *nr-SecondaryCellGroupConfig* according to TS 36.331[10], and it is connected to 5GC,
- NE-DC, if and only if it is configured with *mrdc-SecondaryCellGroup* set to *eutra-SCG*,
- NR-DC, if and only if it is configured with *mrdc-SecondaryCellGroup* set to *nr-SCG*,
- MR-DC, if and only if it is in (NG)EN-DC, NE-DC or NR-DC.

NOTE: This use of these terms deviates from the definition in TS 37.340 [41] and other specifications. In TS 37.340, these terms include also the case where the UE is configured with E-UTRA or NR MCG only (i.e. no NR or E-UTRA SCG) but with one or more bearers terminated in a secondary node (i.e. using NR PDCP).

The UE in (NG)EN-DC only executes a subclause of clause 5 in this specification when the subclause:

- is referred to from a subclause under execution, either in this specification or in TS 36.331 [10]; or
- applies to a message received on SRB3 (if SRB3 is established); or
- applies to field(s), IE(s), UE variable(s) or timer(s) in this specification that the UE is configured with.

When executing a subclause of clause 5 in this specification, the UE follows the requirements in clause 5.1.2 and in all subclauses of this specification applicable to the messages (including processing time requirements), fields, IEs, timers and UE variables indicated in the subclause under execution.

5.2 System information

5.2.1 Introduction

System Information (SI) is divided into the *MIB* and a number of SIBs and posSIBs where:

- the *MIB* is always transmitted on the BCH with a periodicity of 80 ms and repetitions made within 80 ms (TS 38.212 [17], clause 7.1) and it includes parameters that are needed to acquire *SIB1* from the cell. The first transmission of the *MIB* is scheduled in subframes as defined in TS 38.213 [13], clause 4.1 and repetitions are scheduled according to the period of SSB;

NOTE 1: If the period of SSB is larger than 80 ms, the *MIB* is transmitted with the same periodicity as that of SSB.

- the *SIB1* is transmitted on the DL-SCH with a periodicity of 160 ms and variable transmission repetition periodicity within 160 ms as specified in TS 38.213 [13], clause 13. The default transmission repetition periodicity of *SIB1* is 20 ms but the actual transmission repetition periodicity is up to network implementation. For SSB and CORESET multiplexing pattern 1, *SIB1* repetition transmission period is 20 ms. For SSB and CORESET multiplexing pattern 2/3, *SIB1* transmission repetition period is the same as the SSB period (TS 38.213 [13], clause 13). *SIB1* includes information regarding the availability and scheduling (e.g. mapping of SIBs to SI message, periodicity, SI-window size) of other SIBs with an indication whether one or more SIBs are only provided on-demand and, in that case, the configuration needed by the UE to perform the SI request. *SIB1* is cell-specific SIB;
- SIBs other than *SIB1* and posSIBs are carried in *SystemInformation* (SI) messages, which are transmitted on the DL-SCH. Only SIBs or posSIBs having the same periodicity can be mapped to the same SI message. SIBs and posSIBs are mapped to different SI messages, i.e. an SI message contains either only SIBs or only posSIBs. Each SI message is transmitted within periodically occurring time domain windows (referred to as SI-windows with same length for all SI messages). Each SI message is associated with an SI-window and the SI-windows of different SI messages do not overlap. That is, within one SI-window only the corresponding SI message is transmitted. An SI message may be repeated with the same content a number of times within the SI-window. Any SIB or posSIB except *SIB1* can be configured to be cell specific or area specific, using an indication in *SIB1*. The cell specific SIB is applicable only within a cell that provides the SIB while the area specific SIB is applicable within an area referred to as SI area, which consists of one or several cells and is identified by *systemInformationAreaID*;
- The mapping of SIBs to SI messages is configured in *schedulingInfoList* and *schedulingInfoList2*, while the mapping of posSIBs to SI messages is configured in *posSchedulingInfoList* and *schedulingInfoList2*. Each SIB and each posSIB is mapped to a single SI message. posSIBs of the same *posSibType* carrying GNSS Generic Assistance Data for different GNSS/SBAS (identified by *gnss-id/sbas-id*, see TS 37.355 [49]) are mapped to different SI messages. Each SIB and posSIB is contained at most once in an SI message. For SIBs and posSIBs with segments, the segments contained in SI messages are transmitted according to the SI message periodicity, with one segment of a particular *sibType/posSibType* in each SI message;
- For a UE in RRC_CONNECTED, the network can provide system information through dedicated signalling using the *RRCReconfiguration* message, e.g. if the UE has an active BWP with no common search space configured to monitor system information, paging, or upon request from the UE;
- For a UE in RRC_CONNECTED, the network may provide multiple segments of a posSIB of the same posSIB type through dedicated signalling using the *RRCReconfiguration* message;
- For PSCell and SCells, the network provides the required SI by dedicated signalling, i.e. within an *RRCReconfiguration* message. Nevertheless, the UE shall acquire *MIB* of the PSCell to get SFN timing of the SCG (which may be different from MCG). Upon change of relevant SI for SCell, the network releases and adds the concerned SCell. For PSCell, the required SI can only be changed with Reconfiguration with Sync.

NOTE 2: The physical layer imposes a limit to the maximum size a SIB can take. The maximum *SIB1* or SI message size is 2976 bits.

5.2.2 System information acquisition

5.2.2.1 General UE requirements

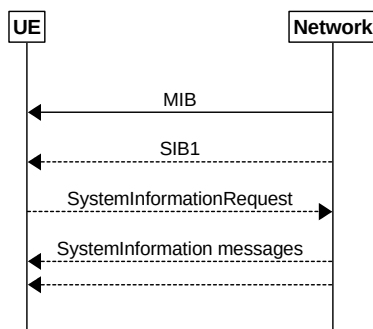 


Figure 5.2.2.1-1: System information acquisition

The UE applies the SI acquisition procedure to acquire the AS, NAS- and positioning assistance data information. The procedure applies to UEs in RRC_IDLE, in RRC_INACTIVE and in RRC_CONNECTED.

The UE in RRC_IDLE and RRC_INACTIVE shall ensure having a valid version of (at least) the *MIB*, *SIB1* through *SIB4*, *SIB5* (if the UE supports E-UTRA), *SIB11* (if the UE is configured for idle/inactive measurements), *SIB12* (if UE is capable of NR sidelink communication/discovery and is configured by upper layers to receive or transmit NR sidelink communication/discovery), and *SIB13*, *SIB14* (if UE is capable of V2X sidelink communication and is configured by upper layers to receive or transmit V2X sidelink communication), *SIB15* (if UE is configured by upper layers to report disaster roaming related information), *SIB16* (if the UE is capable of slice-based cell reselection and the UE receives NSAG information for cell reselection from upper layer), *SIB17* or *SIB17bis* (if the UE is using TRS resources for power saving in RRC_IDLE and RRC_INACTIVE), *SIB19* (if UE is accessing NR via NTN access), *SIB22* (for ATG access), and *SIB23* (if UE is capable of NR sidelink positioning and is configured by upper layers to receive or transmit SL-PRS).

The UE capable of MBS broadcast which is receiving or interested to receive MBS broadcast service(s) via a broadcast MRB shall ensure having a valid version of *SIB20*, regardless of the RRC state the UE is in.

The UE shall ensure having a valid version of the posSIB requested by upper layers.

5.2.2.2 SIB validity and need to (re)-acquire SIB

5.2.2.2.1 SIB validity

The UE shall apply the SI acquisition procedure as defined in clause 5.2.2.3 upon cell selection (e.g. upon power on), cell-reselection, return from out of coverage, after reconfiguration with sync completion, after entering the network from another RAT, upon receiving an indication that the system information has changed, upon receiving a PWS notification, upon receiving request (e.g., a positioning request) from upper layers; and whenever the UE does not have a valid version of a stored SIB or posSIB or a valid version of a requested SIB.

When the UE acquires a *MIB* or a *SIB1* or an SI message in a serving cell as described in clause 5.2.2.3, and if the UE stores the acquired SIB, then the UE shall store the associated *areaScope*, if present, the first *PLMN-Identity* in the *PLMN-IdentityInfoList* for non-NPN-only cells or the first NPN identity (SNPN identity in case of SNPN, or PNI-NPN identity in case of PNI-NPN) in the *NPN-IdentityInfoList* for NPN-only cells, the *cellIdentity*, the *systemInformationAreaID*, if present, and the *valueTag*, if present, as indicated in the *si-SchedulingInfo* for the SIB. If the UE stores the acquired posSIB, then the UE shall store the associated *areaScope*, if present, the *cellIdentity*, the *systemInformationAreaID*, if present, the *valueTag*, if provided in *assistanceDataSIB-Element*, and the *expirationTime* if provided in *assistanceDataSIB-Element*. The UE may use a valid stored version of the SI except *MIB*, *SIB1*, *SIB6*, *SIB7* or *SIB8* e.g. after cell re-selection, upon return from out of coverage or after the reception of SI change indication. The *valueTag* and *expirationTime* for posSIB is optionally provided in *assistanceDataSIB-Element*, as specified in TS 37.355 [49].

A L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE can inform the interested SIB(s) to the connected L2 U2N Relay UE as defined in clause 5.8.9.8.2 and receive the SIB(s) from the L2 U2N Relay UE as defined in clause 5.8.9.9.3. A L2 U2N Remote UE in RRC_CONNECTED receives SIB1 and other SIB(s) in *RRCReconfiguration*

message and performs on-demand SI request if required, as defined in clause 5.2.2.3.5 and 5.2.2.3.6. The L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE or RRC_CONNECTED (when MP is not configured) is not required to obtain SI over Uu interface, but it may decide to perform the SI acquisition procedure over Uu interface as defined in clause 5.2.2.3 by UE implementation.

NOTE: The storage and management of the stored SIBs in addition to the SIBs valid for the current serving cell is left to UE implementation.

The UE shall:

- 1> delete any stored version of a SIB after 3 hours from the moment it was successfully confirmed as valid;
 - 1> for each stored version of a SIB:
 - 2> if the *areaScope* is associated and its value for the stored version of the SIB is the same as the value received in the *si-SchedulingInfo* for that SIB from the serving cell:
 - 3> if the UE is NPN capable and the cell is an NPN-only cell:
 - 4> if the first NPN identity included in the *NPN-IdentityInfoList*, the *systemInformationAreaID* and the *valueTag* that are included in the *si-SchedulingInfo* for the SIB received from the serving cell are identical to the NPN identity, the *systemInformationAreaID* and the *valueTag* associated with the stored version of that SIB:
 - 5> consider the stored SIB as valid for the cell;
 - 3> else if the first *PLMN-Identity* included in the *PLMN-IdentityInfoList*, the *systemInformationAreaID* and the *valueTag* that are included in the *si-SchedulingInfo* for the SIB received from the serving cell are identical to the *PLMN-Identity*, the *systemInformationAreaID* and the *valueTag* associated with the stored version of that SIB:
 - 4> consider the stored SIB as valid for the cell;
 - 2> if the *areaScope* is not present for the stored version of the SIB and the *areaScope* value is not included in the *si-SchedulingInfo* for that SIB from the serving cell:
 - 3> if the UE is NPN capable and the cell is an NPN-only cell:
 - 4> if the first NPN identity in the *NPN-IdentityInfoList*, the *cellIdentity* and *valueTag* that are included in the *si-SchedulingInfo* for the SIB received from the serving cell are identical to the NPN identity, the *cellIdentity* and the *valueTag* associated with the stored version of that SIB:
 - 5> consider the stored SIB as valid for the cell;
 - 3> else if the first *PLMN-Identity* in the *PLMN-IdentityInfoList*, the *cellIdentity* and *valueTag* that are included in the *si-SchedulingInfo* for the SIB received from the serving cell are identical to the *PLMN-Identity*, the *cellIdentity* and the *valueTag* associated with the stored version of that SIB:
 - 4> consider the stored SIB as valid for the cell;
- 1> for each stored version of a posSIB:
 - 2> if the *areaScope* is associated and its value for the stored version of the posSIB is the same as the value received in the *posSIB-MappingInfo* for that posSIB from the serving cell and the *systemInformationAreaID* included in the *si-SchedulingInfo* is identical to the *systemInformationAreaID* associated with the stored version of that posSIB:
 - 3> if the *valueTag* (see TS 37.355 [49]) for the posSIB received from the serving cell is identical to the *valueTag* associated with the stored version of that posSIB; or if the *expirationTime* (see TS 37.355 [49]) associated with the stored posSIB has not been expired:
 - 4> consider the stored posSIB as valid for the cell;
- 2> if the *areaScope* is not present for the stored version of the posSIB and the *areaScope* value is not included in the *posSIB-MappingInfo* for that posSIB from the serving cell and the *cellIdentity* for the posSIB received from the serving cell is identical to the *cellIdentity* associated with the stored version of that posSIB:

3> if the *valueTag* (see TS 37.355 [49]) for the posSIB received from the serving cell is identical to the *valueTag* associated with the stored version of that posSIB; or if the *expirationTime* (see TS 37.355 [49]) associated with the stored posSIB has not been expired:

4> consider the stored posSIB as valid for the cell;

5.2.2.2.2 SI change indication and PWS notification

A modification period is used, i.e. updated SI message (other than SI message for ETWS, CMAS, positioning assistance data, and some NTN-specific information as specified in the field descriptions) is broadcasted in the modification period following the one where SI change indication is transmitted. The modification period boundaries are defined by SFN values for which $\text{SFN mod } m = 0$, where m is the number of radio frames comprising the modification period. The modification period is configured by system information. If H-SFN is provided in *SIB1*, and UE is configured with eDRX, modification period boundaries are defined by SFN values for which $(\text{H-SFN} * 1024 + \text{SFN}) \bmod m = 0$.

For UEs in RRC_IDLE or RRC_INACTIVE configured to use an IDLE eDRX cycle longer than the modification period, an eDRX acquisition period is defined. The boundaries of the eDRX acquisition period are determined by H-SFN values for which $\text{H-SFN mod } 1024 = 0$.

The UE receives indications about SI modifications and/or PWS notifications using Short Message transmitted with P-RNTI over DCI (see clause 6.5). Repetitions of SI change indication may occur within preceding modification period or within preceding eDRX acquisition period. SI change indication is not applicable for SI messages containing posSIBs.

UEs in RRC_IDLE or in RRC_INACTIVE while SDT procedure is not ongoing shall monitor for SI change indication in its own paging occasion(s) that the UE monitors as specified in TS 38.304 [20]. UEs in RRC_CONNECTED shall monitor for SI change indication in any paging occasion at least once per modification period if the UE is provided with common search space, including *pagingSearchSpace*, *searchSpaceSIB1* and *searchSpaceOtherSystemInformation*, on the active BWP to monitor paging, as specified in TS 38.213 [13], clause 13.

For UEs in RRC_INACTIVE while SDT procedure is ongoing:

- if T319a is not running and if CG-SDT is selected and if extended CG-SDT periodicity is configured (i.e. *cg-SDT-PeriodicityExt* is configured), the UE shall monitor for SI change indication in its own paging occasion(s) that the UE monitors as specified in TS 38.304 [20];
- in other cases, the UE shall monitor for SI change indication in any paging occasion at least once per modification period, if the initial downlink BWP on which the SDT procedure is ongoing is associated with a CD-SSB.

During a modification period where ETWS or CMAS transmission is started or stopped, the SI messages carrying the posSIBs scheduled in *posSchedulingInfoList* may change, so the UE might not be able to successfully receive those posSIBs in the remainder of the current modification period and next modification period according to the scheduling information received prior to the change.

ETWS or CMAS capable UEs in RRC_IDLE or in RRC_INACTIVE while SDT procedure is not ongoing shall monitor for indications about PWS notification in its own paging occasion(s) that the UE monitors as specified in TS 38.304 [20]. ETWS or CMAS capable UEs in RRC_CONNECTED shall monitor for indication about PWS notification in any paging occasion at least once every *defaultPagingCycle* if the UE is provided with common search space, including *pagingSearchSpace*, *searchSpaceSIB1* and *searchSpaceOtherSystemInformation*, on the active BWP to monitor paging.

For ETWS or CMAS capable UEs in RRC_INACTIVE while SDT procedure is ongoing :

- if T319a is not running and if CG-SDT is selected and if extended CG-SDT periodicity is configured (i.e. *cg-SDT-PeriodicityExt* is configured), the UE shall monitor for indications about PWS notification in its own paging occasion(s) that the UE monitors as specified in TS 38.304 [20];
- in other cases, the UE shall monitor for indication about PWS notification in any paging occasion at least once every *defaultPagingCycle*, if the initial downlink BWP on which the SDT procedure is ongoing is associated with a CD-SSB.

For Short Message reception in a paging occasion, the UE monitors the PDCCH monitoring occasion(s) for paging as specified in TS 38.304 [20] and TS 38.213 [13].

A L2 U2N Remote UE is not required to monitor paging occasion for SI modifications and/or PWS notifications. It obtains the updated system information and SIB6/7/8 from the connected L2 U2N Relay UE as defined in clause 5.8.9.9.3.

If the UE receives a Short Message, the UE shall:

- 1> if the UE is ETWS capable or CMAS capable, the *etwsAndCmasIndication* bit of Short Message is set, and the UE is provided with *searchSpaceSIB1* and *searchSpaceOtherSystemInformation* on the active BWP or the initial BWP:
 - 2> immediately re-acquire the *SIB1*;
- 2> if the UE is ETWS capable and *si-SchedulingInfo* includes scheduling information for *SIB6*:
 - 3> acquire *SIB6*, as specified in clause 5.2.2.3.2, immediately;
- 2> if the UE is ETWS capable and *si-SchedulingInfo* includes scheduling information for *SIB7*:
 - 3> acquire *SIB7*, as specified in clause 5.2.2.3.2, immediately;
- 2> if the UE is CMAS capable and *si-SchedulingInfo* includes scheduling information for *SIB8*:
 - 3> acquire *SIB8*, as specified in clause 5.2.2.3.2, immediately;

NOTE: In case *SIB1*, *SIB6*, *SIB7*, or *SIB8* overlap with a measurement gap it is left to UE implementation how to immediately acquire *SIB1*, *SIB6*, *SIB7*, or *SIB8*.

- 1> if the UE does not operate an IDLE eDRX cycle longer than the modification period and the *systemInfoModification* bit of Short Message is set:
 - 2> apply the SI acquisition procedure as defined in clause 5.2.2.3 from the start of the next modification period;
- 1> if the UE operates an IDLE eDRX cycle longer than the modification period and the *systemInfoModification-eDRX* bit of Short Message is set:
 - 2> apply the SI acquisition procedure as defined in clause 5.2.2.3 from the start of the next eDRX acquisition period boundary.

5.2.2.3 Acquisition of System Information

5.2.2.3.1 Acquisition of *MIB* and *SIB1*

The UE shall:

- 1> apply the specified BCCH configuration defined in 9.1.1.1;
- 1> if the UE is in RRC_IDLE or in RRC_INACTIVE; or
- 1> if the UE is in RRC_CONNECTED while T311 is running:
 - 2> acquire the *MIB*, which is scheduled as specified in TS 38.213 [13];
 - 2> if the UE is unable to acquire the *MIB*:
 - 3> perform the actions as specified in clause 5.2.2.5;
 - 2> else:
 - 3> perform the actions specified in clause 5.2.2.4.1.
- 1> if the UE is in RRC_CONNECTED with an active BWP with common search space configured by *searchSpaceSIB1* and *pagingSearchSpace* and has received an indication about change of system information; or

- 1> if the UE is in RRC_CONNECTED with an active BWP with common search space configured by *searchSpaceSIB1* and the UE has not stored a valid version of a SIB or posSIB, in accordance with clause 5.2.2.2.1, of one or several required SIB(s) or posSIB(s) in accordance with clause 5.2.2.1, and, UE has not acquired SIB1 in current modification period; or
- 1> if the UE is in RRC_CONNECTED with an active BWP with common search space configured by *searchSpaceSIB1*, and, the UE has not stored a valid version of a SIB or posSIB, in accordance with clause 5.2.2.2.1, of one or several required SIB(s) or posSIB(s) in accordance with clause 5.2.2.1, and, *si-BroadcastStatus* for the required SIB(s) or *posSI-BroadcastStatus* for the required posSIB(s) is set to *notBroadcasting* in acquired *SIB1* in current modification period; or
- 1> if the UE is in RRC_IDLE or in RRC_INACTIVE; or
- 1> if the UE is in RRC_CONNECTED while T311 is running:
 - 2> if *ssb-SubcarrierOffset* indicates *SIB1* is transmitted in the cell (TS 38.213 [13]) and if *SIB1* acquisition is required for the UE:
 - 3> acquire the *SIB1*, which is scheduled as specified in TS 38.213 [13];
 - 3> if the UE is unable to acquire the *SIB1*:
 - 4> perform the actions as specified in clause 5.2.2.5;
 - 3> else:
 - 4> upon acquiring *SIB1*, perform the actions specified in clause 5.2.2.4.2.
 - 2> else if *SIB1* acquisition is required for the UE and *ssb-SubcarrierOffset* indicates that *SIB1* is not scheduled in the cell:
 - 3> perform the actions as specified in clause 5.2.2.5.

NOTE 1: The UE in RRC_CONNECTED is only required to acquire broadcasted *SIB1* if the UE can acquire it without disrupting unicast or MBS multicast data reception, i.e., the broadcast and unicast/MBS multicast beams are quasi co-located. The UE in RRC_INACTIVE state while T319a is running, is only required to acquire broadcasted *SIB1* and *MIB* if the UE can acquire them without disrupting unicast data reception, i.e. the broadcast and unicast beams are quasi co-located.

NOTE 2: UE in RRC_INACTIVE that does not support *inactiveStateNTN-r17* enters RRC_IDLE upon cell reselection between TN cell and NTN cell, and initiates the NAS signalling connection recovery (see TS 24.501 [23]).

5.2.2.3.2 Acquisition of an SI message

For SI message acquisition PDCCH monitoring occasion(s) are determined according to *searchSpaceOtherSystemInformation*. If *searchSpaceOtherSystemInformation* is set to zero, PDCCH monitoring occasions for SI message reception in SI-window are same as PDCCH monitoring occasions for *SIB1* where the mapping between PDCCH monitoring occasions and SSBs is specified in TS 38.213[13]. If *searchSpaceOtherSystemInformation* is not set to zero, PDCCH monitoring occasions for SI message are determined based on search space indicated by *searchSpaceOtherSystemInformation*. PDCCH monitoring occasions for SI message which are not overlapping with UL symbols (determined according to *tdd-UL-DL-ConfigurationCommon*) are sequentially numbered from one in the SI window. The $[x \times N + K]^{\text{th}}$ PDCCH monitoring occasion (s) for SI message in SI-window corresponds to the K^{th} transmitted SSB, where $x = 0, 1, \dots, X-1$, $K = 1, 2, \dots, N$, N is the number of actual transmitted SSBs determined according to *ssb-PositionsInBurst* in *SIB1* and X is equal to $\text{CEIL}(\text{number of PDCCH monitoring occasions in SI-window}/N)$. The actual transmitted SSBs are sequentially numbered from one in ascending order of their SSB indexes. The UE assumes that, in the SI window, PDCCH for an SI message is transmitted in at least one PDCCH monitoring occasion corresponding to each transmitted SSB and thus the selection of SSB for the reception SI messages is up to UE implementation.

When acquiring an SI message, the UE shall:

- 1> determine the start of the SI-window for the concerned SI message as follows:
 - 2> if the concerned SI message is configured in the *schedulingInfoList*:

- 3> for the concerned SI message, determine the number n which corresponds to the order of entry in the list of SI messages configured by *schedulingInfoList* in *si-SchedulingInfo* in *SIB1*;
- 3> determine the integer value $x = (n - 1) \times w$, where w is the *si-WindowLength*;
- 3> the SI-window starts at the slot $\#a$, where $a = x \bmod N$, in the radio frame for which $\text{SFN} \bmod T = \text{FLOOR}(x/N)$, where T is the *si-Periodicity* of the concerned SI message and N is the number of slots in a radio frame as specified in TS 38.211 [16];
- 2> else if the concerned SI message is configured in the *schedulingInfoList2*;
- 3> determine the integer value $x = (\text{si-WindowPosition} - 1) \times w$, where w is the *si-WindowLength*;
- 3> the SI-window starts at the slot $\#a$, where $a = x \bmod N$, in the radio frame for which $\text{SFN} \bmod T = \text{FLOOR}(x/N)$, where T is the *si-Periodicity* of the concerned SI message and N is the number of slots in a radio frame as specified in TS 38.211 [16];
- 2> else if the concerned SI message is configured in the *posSchedulingInfoList* and *offsetToSI-Used* is not configured:
 - 3> create a concatenated list of SI messages by appending the *posSchedulingInfoList* in *posSI-SchedulingInfo* in *SIB1* to *schedulingInfoList* in *si-SchedulingInfo* in *SIB1*;
 - 3> for the concerned SI message, determine the number n which corresponds to the order of entry in the concatenated list;
 - 3> determine the integer value $x = (n - 1) \times w$, where w is the *si-WindowLength*;
 - 3> the SI-window starts at the slot $\#a$, where $a = x \bmod N$, in the radio frame for which $\text{SFN} \bmod T = \text{FLOOR}(x/N)$, where T is the *posSI-Periodicity* of the concerned SI message and N is the number of slots in a radio frame as specified in TS 38.211 [16];
- 2> else if the concerned SI message is configured by the *posSchedulingInfoList* and *offsetToSI-Used* is configured:
 - 3> determine the number m which corresponds to the number of SI messages with an associated *si-Periodicity* of 8 radio frames (80 ms), configured by *schedulingInfoList* in *SIB1*;
 - 3> for the concerned SI message, determine the number n which corresponds to the order of entry in the list of SI messages configured by *posSchedulingInfoList* in *SIB1*;
 - 3> determine the integer value $x = m \times w + (n - 1) \times w$, where w is the *si-WindowLength*;
 - 3> the SI-window starts at the slot $\#a$, where $a = x \bmod N$, in the radio frame for which $\text{SFN} \bmod T = \text{FLOOR}(x/N) + 8$, where T is the *posSI-Periodicity* of the concerned SI message and N is the number of slots in a radio frame as specified in TS 38.211 [16];
- 1> receive the PDCCH containing the scheduling RNTI, i.e. SI-RNTI in the PDCCH monitoring occasion(s) for SI message acquisition, from the start of the SI-window and continue until the end of the SI-window whose absolute length in time is given by *si-WindowLength*, or until the SI message was received;
- 1> if the SI message was not received by the end of the SI-window, repeat reception at the next SI-window occasion for the concerned SI message in the current modification period;
- 1> if all the SIB(s) and/or posSIB(s) requested in *DedicatedSIBRequest* message have been acquired:
 - 2> stop timer T350, if running;

NOTE 1: The UE is only required to acquire broadcasted SI message if the UE can acquire it without disrupting unicast or MBS multicast data reception, i.e. the broadcast and unicast/MBS multicast beams are quasi co-located.

NOTE 2: The UE is not required to monitor PDCCH monitoring occasion(s) corresponding to each transmitted SSB in SI-window.

NOTE 3: If the concerned SI message was not received in the current modification period, handling of SI message acquisition is left to UE implementation.

NOTE 4: A UE in RRC_CONNECTED may stop the PDCCH monitoring during the SI window for the concerned SI message when the requested SIB(s) are acquired.

NOTE 5: A UE capable of NR sidelink communication/discovery and configured by upper layers to perform NR sidelink communication/discovery on a frequency, may acquire *SIB12* or *SystemInformationBlockType28* from a cell other than current serving cell (for RRC_INACTIVE or RRC_IDLE) or current PCell (for RRC_CONNECTED), if *SIB12* of current serving cell (for RRC_INACTIVE or RRC_IDLE) or current PCell (for RRC_CONNECTED) does not provide configuration for NR sidelink communication/discovery for the frequency, and if the other cell providing configuration for NR sidelink communication/discovery for the frequency meets the S-criteria as defined in TS 38.304 [20] or TS 36.304 [27].

1> perform the actions for the acquired SI message as specified in clause 5.2.2.4.

5.2.2.3.3 Request for on demand system information

The UE shall, while SDT procedure is not ongoing:

- 1> if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfigSUL-MSG1-Repetition* and criteria to select supplementary uplink as defined in TS 38.321[3], clause 5.1.1 and criteria to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *si-RequestConfigSUL-MSG1-Repetition* are met:
 - 2> trigger the lower layer to initiate the Random Access procedure on supplementary uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) associated with the applicable MSG1 repetition number in *si-RequestConfigSUL-MSG1-Repetition* corresponding to the SI message(s) that the UE requires to operate within the cell, and for which *si-BroadcastStatus* is set to *notBroadcasting*;
 - 2> if acknowledgement for SI request is received from lower layers:
 - 3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 1> else if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is configured in *UplinkConfigCommonSIB* and if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfigRedCap-MSG1-Repetition* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 and criteria to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *si-RequestConfigRedCap-MSG1-Repetition* are met:
 - 2> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) associated with the applicable MSG1 repetition number in *si-RequestConfigRedCap-MSG1-Repetition* corresponding to the SI message(s) that the UE requires to operate within the cell, and for which *si-BroadcastStatus* is set to *notBroadcasting*;
 - 2> if acknowledgement for SI request is received from lower layers:
 - 3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 1> else if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfigSUL* and criteria to select supplementary uplink as defined in TS 38.321[3], clause 5.1.1 is met:
 - 2> trigger the lower layer to initiate the Random Access procedure on supplementary uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) in *si-RequestConfigSUL* corresponding to the SI message(s) that the UE requires to operate within the cell, and for which *si-BroadcastStatus* is set to *notBroadcasting*;
 - 2> if acknowledgement for SI request is received from lower layers:
 - 3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 1> else if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is configured in *UplinkConfigCommonSIB* and if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfigRedCap* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 is met:

- 2> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) in *si-RequestConfigRedcap* corresponding to the SI message(s) that the UE requires to operate within the cell, and for which *si-BroadcastStatus* is set to *notBroadcasting*;
- 2> if acknowledgement for SI request is received from lower layers:
 - 3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 1> else:
 - 2> if the UE is neither a RedCap nor an eRedCap UE and if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfigMSG1-Repetition* and criteria to select normal uplink as defined in TS 38.321 [3], clause 5.1.1 and to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *si-RequestConfigMSG1-Repetition* are met; or
 - 2> if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is not configured in *UplinkConfigCommonSIB* and if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfigMSG1-Repetition* and criteria to select normal uplink as defined in TS 38.321 [3], clause 5.1.1 and to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *si-RequestConfigMSG1-Repetition* are met:
 - 3> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) associated with the applicable MSG1 repetition number in *si-RequestConfigMSG1-Repetition* corresponding to the SI message(s) that the UE requires to operate within the cell, and for which *si-BroadcastStatus* is set to *notBroadcasting*;
 - 3> if acknowledgement for SI request is received from lower layers:
 - 4> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
 - 2> else if the UE is neither a RedCap nor an eRedCap UE and if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfig* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 is met; or
 - 2> if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is not configured in *UplinkConfigCommonSIB* and if *SIB1* includes *si-SchedulingInfo* containing *si-RequestConfig* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 is met:
 - 3> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) in *si-RequestConfig* corresponding to the SI message(s) that the UE requires to operate within the cell, and for which *si-BroadcastStatus* is set to *notBroadcasting*;
 - 3> if acknowledgement for SI request is received from lower layers:
 - 4> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 2> else:
 - 3> apply the default L1 parameter values as specified in corresponding physical layer specifications except for the parameters for which values are provided in *SIB1*;
 - 3> apply the default MAC Cell Group configuration as specified in 9.2.2;
 - 3> apply the *timeAlignmentTimerCommon* included in *SIB1*;
 - 3> apply the CCCH configuration as specified in 9.1.1.2;
 - 3> initiate transmission of the *RRCSystemInfoRequest* message with *rrcSystemInfoRequest* in accordance with 5.2.2.3.4;
 - 3> if acknowledgement for *RRCSystemInfoRequest* message with *rrcSystemInfoRequest* is received from lower layers:
 - 4> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;

- 1> if cell reselection occurs while waiting for the acknowledgment for SI request from lower layers:
- 2> reset MAC;
- 2> if SI request is based on *RRCSystemInfoRequest* message with *rrcSystemInfoRequest*:
- 3> release RLC entity for SRB0.

NOTE: After RACH failure for SI request it is up to UE implementation when to retry the SI request.

5.2.2.3.3a Request for on demand positioning system information

The UE shall, while SDT procedure is not ongoing:

- 1> if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfigSUL-MSG1-Repetition* and criteria to select supplementary uplink as defined in TS 38.321[3], clause 5.1.1 and criteria to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *posSI-RequestConfigSUL-MSG1-Repetition* are met:
 - 2> trigger the lower layer to initiate the Random Access procedure on supplementary uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) associated with the applicable MSG1 repetition number in *posSI-RequestConfigSUL-MSG1-Repetition* corresponding to the SI message(s) that the UE upper layers require for positioning operations, and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*;
 - 2> if acknowledgement for SI request is received from lower layers:
 - 3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 1> else if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is configured in *UplinkConfigCommonSIB* and if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfigRedCap-MSG1-Repetition* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 and criteria to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *posSI-RequestConfigRedCap-MSG1-Repetition* are met:
 - 2> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) associated with the applicable MSG1 repetition number in *posSI-RequestConfigRedCap-MSG1-Repetition* corresponding to the SI message(s) that the UE upper layers require for positioning operations, and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*;
 - 2> if acknowledgement for SI request is received from lower layers:
 - 3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 1> else if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfigSUL* and criteria to select supplementary uplink as defined in TS 38.321[3], clause 5.1.1 is met:
 - 2> trigger the lower layer to initiate the Random Access procedure on supplementary uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) in *posSI-RequestConfigSUL* corresponding to the SI message(s) that the UE upper layers require for positioning operations, and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*;
 - 2> if acknowledgement for SI request is received from lower layers:
 - 3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;
- 1> else if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is configured in *UplinkConfigCommonSIB* and if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfigRedCap* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 is met:
 - 2> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) in *posSI-RequestConfigRedCap* corresponding to the SI message(s) that the UE upper layers require for positioning operations, and for which

posSI-BroadcastStatus in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*;

2> if acknowledgement for SI request is received from lower layers:

3> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;

1> else:

2> if the UE is neither a RedCap nor an eRedCap UE and if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfigMSG1-Repetition* and criteria to select normal uplink as defined in TS 38.321 [3], clause 5.1.1 and to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *posSI-RequestConfigMSG1-Repetition* are met; or

2> if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is not configured in *UplinkConfigCommonSIB* and if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfigMSG1-Repetition* and criteria to select normal uplink as defined in TS 38.321 [3], clause 5.1.1, and to apply MSG1 repetition as defined in TS 38.321[3], clause 5.1.1e for the concerned *posSI-RequestConfigMSG1-Repetition* are met:

3> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) associated with the applicable MSG1 repetition number in *posSI-RequestConfigMSG1-Repetition* corresponding to the SI message(s) that the UE upper layers require for positioning operations, and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*;

3> if acknowledgement for SI request is received from lower layers:

4> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;

2> else if the UE is neither a RedCap nor an eRedCap UE and if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfig* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 is met; or

2> if the UE is an (e)RedCap UE and if *initialUplinkBWP-RedCap* is not configured in *UplinkConfigCommonSIB* and if *SIB1* includes *posSI-SchedulingInfo* containing *posSI-RequestConfig* and criteria to select normal uplink as defined in TS 38.321[3], clause 5.1.1 is met:

3> trigger the lower layer to initiate the Random Access procedure on normal uplink in accordance with TS 38.321 [3] using the PRACH preamble(s) and PRACH resource(s) in *posSI-RequestConfig* corresponding to the SI message(s) that the UE upper layers require for positioning operations, and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*;

3> if acknowledgement for SI request is received from lower layers:

4> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;

2> else:

3> apply the default L1 parameter values as specified in corresponding physical layer specifications except for the parameters for which values are provided in *SIB1*;

3> apply the default MAC Cell Group configuration as specified in 9.2.2;

3> apply the *timeAlignmentTimerCommon* included in *SIB1*;

3> apply the CCCH configuration as specified in 9.1.1.2;

3> initiate transmission of the *RRCSysInfoRequest* message with *rrcPosSysInfoRequest* in accordance with 5.2.2.3.4;

3> if acknowledgement for *RRCSysInfoRequest* message with *rrcPosSysInfoRequest* is received from lower layers:

4> acquire the requested SI message(s) as defined in clause 5.2.2.3.2, immediately;

- 1> if cell reselection occurs while waiting for the acknowledgment for SI request from lower layers:
 - 2> reset MAC;
- 2> if SI request is based on *RRCSystemInfoRequest* message with *rrcPosSystemInfoRequest*:
 - 3> release RLC entity for SRB0.

NOTE: After RACH failure for SI request it is up to UE implementation when to retry the SI request.

5.2.2.3.4 Actions related to transmission of *RRCSystemInfoRequest* message

The UE shall set the contents of *RRCSystemInfoRequest* message as follows:

- 1> if the procedure is triggered to request the required SI message(s) other than positioning:
 - 2> set the *requested-SI-List* to indicate the SI message(s) that the UE requires to operate within the cell, and for which *si-BroadcastStatus* is set to *notBroadcasting*;
- 1> else if the procedure is triggered to request the required SI message(s) for positioning:
 - 2> set the *requestedPosSI-List* to indicate the SI message(s) that the UE upper layers require for positioning operations, and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*.

The UE shall submit the *RRCSystemInfoRequest* message to lower layers for transmission.

5.2.2.3.5 Acquisition of SIB(s) or posSIB(s) in RRC_CONNECTED

The UE shall:

- 1> if the UE is in RRC_CONNECTED with an active BWP not configured with common search space with the field *searchSpaceOtherSystemInformation* and the UE has not stored a valid version of a SIB or posSIB, in accordance with clause 5.2.2.2.1, of one or several required SIB(s) or posSIB(s) in accordance with clause 5.2.2.1, or
- 1> if the UE is in RRC_CONNECTED and acting as a L2 U2N Remote UE and the UE has not stored a valid version of a SIB, in accordance with clause 5.2.2.2.1, of one or several required SIB(s) in accordance with clause 5.2.2.1:
 - 2> for the SI message(s) that, according to the *si-SchedulingInfo* or *posSI-SchedulingInfo* in the stored SIB1, contain at least one required SIB or requested posSIB:
 - 3> if *onDemandSIB-Request* is configured and timer T350 is not running:
 - 4> initiate transmission of the *DedicatedSIBRequest* message in accordance with 5.2.2.3.6;
 - 4> start timer T350 with the timer value set to the *onDemandSIB-RequestProhibitTimer*;
 - 1> else if the UE is in RRC_CONNECTED with an active BWP configured with common search space with the field *searchSpaceOtherSystemInformation* and the UE has not stored a valid version of a SIB or posSIB, in accordance with clause 5.2.2.2.1, of one or several required SIB(s) or posSIB(s) in accordance with clause 5.2.2.1:
 - 2> for the SI message(s) that, according to the *si-SchedulingInfo* in the stored SIB1, contain at least one required SIB and for which *si-BroadcastStatus* is set to *broadcasting*:
 - 3> acquire the SI message(s) as defined in clause 5.2.2.3.2;
 - 2> for the SI message(s) that, according to the *si-SchedulingInfo* in the stored SIB1, contain at least one required SIB and for which *si-BroadcastStatus* is set to *notBroadcasting*:
 - 3> if *onDemandSIB-Request* is configured and timer T350 is not running:
 - 4> initiate transmission of the *DedicatedSIBRequest* message in accordance with 5.2.2.3.6;

- 4> start timer T350 with the timer value set to the *onDemandSIB-RequestProhibitTimer*;
- 4> acquire the requested SI message(s) corresponding to the requested SIB(s) as defined in clause 5.2.2.3.2.
- 2> for the SI message(s) that, according to the *posSI-SchedulingInfo* or *si-SchedulingInfo-v1700*, if present, in the stored SIB1, contain at least one requested posSIB and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *broadcasting*:
- 3> acquire the SI message(s) as defined in clause 5.2.2.3.2;
- 2> for the SI message(s) that, according to the *posSI-SchedulingInfo* or *si-SchedulingInfo-v1700*, if present, in the stored SIB1, contain at least one requested posSIB and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*:
- 3> if *onDemandSIB-Request* is configured and timer T350 is not running:
 - 4> initiate transmission of the *DedicatedSIBRequest* message in accordance with 5.2.2.3.6;
 - 4> start timer T350 with the timer value set to the *onDemandSIB-RequestProhibitTimer*;
 - 4> acquire the requested SI message(s) corresponding to the requested posSIB(s) as defined in clause 5.2.2.3.2.

NOTE: UE may include on demand request for SIB and/or posSIB(s) in the same *DedicatedSIBRequest* message.

5.2.2.3.6 Actions related to transmission of *DedicatedSIBRequest* message

The UE shall set the contents of *DedicatedSIBRequest* message as follows:

- 1> if the procedure is triggered to request the required SIB(s):
 - 2> include *requestedSIB-List* in the *onDemandSIB-RequestList* to indicate the requested SIB(s);
- 1> if the procedure is triggered to request the required posSIB(s):
 - 2> include *requestedPosSIB-List* in the *onDemandSIB-RequestList* to indicate the requested posSIB(s).

The UE shall submit the *DedicatedSIBRequest* message to lower layers for transmission.

5.2.2.4 Actions upon receipt of System Information

5.2.2.4.1 Actions upon reception of the *MIB*

Upon receiving the *MIB* the UE shall:

- 1> store the acquired *MIB*;
- 1> if the UE is in RRC_IDLE or in RRC_INACTIVE, or if the UE is in RRC_CONNECTED while *T311* is running:
 - 2> if the access is not for NTN or the UE is not capable of NTN; and
 - 2> if the UE does not support *nes-CellIDTX-DRX*; and
 - 2> if the access is not for ATG or the UE is not capable of ATG; and
 - 2> if the UE is not IAB-MT; and
 - 2> if the UE is not NCR-MT; and
 - 2> if the *cellBarred* in the acquired *MIB* is set to *barred*:

- 3> if the UE is an (e)RedCap UE or a 2Rx XR UE and if *ssb-SubcarrierOffset* indicates *SIB1* is transmitted in the cell (TS 38.213 [13]):
 - 4> acquire the *SIB1*, which is scheduled as specified in TS 38.213 [13];
- 3> consider the cell as barred in accordance with TS 38.304 [20];
- 3> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20];
- 2> else:
 - 3> apply the received *systemFrameNumber*, *pdccch-ConfigSIB1*, *subCarrierSpacingCommon*, *ssb-SubcarrierOffset* and *dmrs-TypeA-Position*.

NOTE 1: A UE capable of NTN access should acquire *SIB1* to determine whether the cell is an NTN cell.

NOTE 2: A UE capable of ATG access should acquire *SIB1* to determine whether the cell is an ATG cell.

NOTE 3: A UE indicating any of the values in *nes-CellDTX-DRX* should acquire *SIB1* to determine the cell barring status when the *cellBarred* in MIB is set to *barred*.

5.2.2.4.2 Actions upon reception of the *SIB1*

Upon receiving the *SIB1* the UE shall:

- 1> store the acquired *SIB1*;
- 1> if the access is for NTN:
 - 2> if the UE is in *RRC_IDLE* or in *RRC_INACTIVE*, or if the UE is in *RRC_CONNECTED* while *T311* is running;
 - 3> if the *cellBarredNTN* in the acquired *SIB1* is set to *barred* or the *cellBarredNTN* is not included in the acquired *SIB1*:
 - 4> consider the cell as barred in accordance with TS 38.304 [20];
 - 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
 - 3> if the UE is a fixed VSAT UE and the *cellBarredFixedVSAT* in the acquired *SIB1* is set to *barred* or the *cellBarredFixedVSAT* is not included in the acquired *SIB1*, or
 - 3> if the UE is a mobile VSAT UE and the *cellBarredMobileVSAT* in the acquired *SIB1* is set to *barred* or the *cellBarredMobileVSAT* is not included in the acquired *SIB1*:
 - 4> consider the cell as barred in accordance with TS 38.304 [20];
 - 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 1> if the access is for ATG:
 - 2> if the UE is in *RRC_IDLE* or in *RRC_INACTIVE*, or if the UE is in *RRC_CONNECTED* while *T311* is running; and
 - 2> if the *cellBarredATG* in the acquired *SIB1* is set to *barred* or the *cellBarredATG* is not included in the acquired *SIB1*:
 - 3> consider the cell as barred in accordance with TS 38.304 [20];
 - 3> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 1> if the UE is a RedCap UE and it is in *RRC_IDLE* or in *RRC_INACTIVE*, or if the RedCap UE is in *RRC_CONNECTED* while *T311* is running;

- 2> if *intraFreqReselectionRedCap* is not present in *SIB1*; or
- 2> if the *halfDuplexRedCapAllowed* is not present in the acquired *SIB1* and the UE supports only half-duplex FDD operation:
 - 3> consider the cell as barred in accordance with TS 38.304 [20];
 - 3> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 2> else:
 - 3> if the *cellBarredRedCap1Rx* is present in the acquired *SIB1* and is set to *barred* and the UE supports 1 Rx branch; or
 - 3> if the *cellBarredRedCap2Rx* is present in the acquired *SIB1* and is set to *barred* and the UE supports 2 Rx branches:
 - 4> evaluate the cell barring criteria in accordance with TS 38.304 [20];
 - 4> if the cell is considered as barred;
 - 5> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 1> if the UE is a 2Rx XR UE and is in RRC_IDLE or in RRC_INACTIVE, or if the 2Rx XR UE is in RRC_CONNECTED while *T311* is running:
 - 2> if the *cellBarred2RxXR* is present in the acquired *SIB1*:
 - 3> evaluate the cell barring criteria in accordance with TS 38.304 [20];
 - 3> if the cell is considered as barred;
 - 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20] upon which the procedure ends;
- 1> if the UE supports *nes-CellDTX-DRX* and it is in RRC_IDLE or in RRC_INACTIVE, or if the UE supporting *nes-CellDTX-DRX* is in RRC_CONNECTED while *T311* is running:
 - 2> if *cellBarred* in the acquired *MIB* is set to *barred*:
 - 3> if *cellBarredNES* is absent in the acquired *SIB1*:
 - 4> consider the cell as barred in accordance with TS 38.304 [20];
 - 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 1> if the UE is an eRedCap UE and it is in RRC_IDLE or in RRC_INACTIVE, or if the eRedCap UE is in RRC_CONNECTED while *T311* is running:
 - 2> if *intraFreqReselection-eRedCap* is not present in *SIB1*; or
 - 2> if the *halfDuplexRedCapAllowed* is not present in the acquired *SIB1* and the UE supports only half-duplex FDD operation:
 - 3> consider the cell as barred in accordance with TS 38.304 [20];
 - 3> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
 - 2> else:
 - 3> if the *cellBarred-eRedCap1Rx* is present in the acquired *SIB1* and is set to *barred* and the UE supports 1 Rx branch; or

- 3> if the *cellBarred-eRedCap2Rx* is present in the acquired *SIB1* and is set to *barred* and the UE supports 2 Rx branches:
 - 4> evaluate the cell barring criteria in accordance with TS 38.304 [20];
 - 4> if the cell is considered as barred;
 - 5> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20] upon which the procedure ends;
- 1> if the *cellAccessRelatedInfo* contains an entry of a selected SNPN or PLMN and in case of PLMN the UE is either allowed or instructed to access the PLMN via a cell for which at least one CAG ID is broadcast:
 - 2> in the remainder of the procedures use *nnp-IdentityList*, *trackingAreaCode*, and *cellIdentity* for the cell as received in the corresponding entry of *nnp-IdentityInfoList* containing the selected PLMN or SNPN;
- 1> else if the *cellAccessRelatedInfo* contains an entry with the *PLMN-Identity* of the selected PLMN:
 - 2> in the remainder of the procedures use *plmn-IdentityList*, *trackingAreaCode*, *trackingAreaList*, and *cellIdentity* for the cell as received in the corresponding *PLMN-IdentityInfo* containing the selected PLMN;
- 1> if the UE in RRC_INACTIVE is configured for feature(s) that it does not support in current serving cell:
 - 2> not use the corresponding configuration in current serving cell;

NOTE 0: The requirement above applies only to UE that indicates different support of UE capabilities for TN and NTN.

- 1> if in RRC_CONNECTED while T311 is not running:
 - 2> disregard the *frequencyBandList*, if received, while in RRC_CONNECTED;
 - 2> forward the *cellIdentity* to upper layers;
 - 2> forward the *trackingAreaCode* to upper layers, if included;
 - 2> forward the *trackingAreaList* to upper layers, if included;
 - 2> forward the received *posSIB-MappingInfo* to upper layers, if included;
 - 2> apply the configuration included in the *servingCellConfigCommon*;
 - 2> if the UE has a stored valid version of a SIB or posSIB, in accordance with clause 5.2.2.2.1, that the UE requires to operate within the cell in accordance with clause 5.2.2.1:
 - 3> use the stored version of the required SIB or posSIB;
 - 2> else:
 - 3> acquire the required SIB or posSIB requested by upper layer as defined in clause 5.2.2.3.5;

NOTE 1: Void.

- 1> else:
 - 2> if the UE supports one or more of the frequency bands indicated in the *frequencyBandList* or *frequencyBandListAerial* for downlink for TDD, or one or more of the frequency bands indicated in the *frequencyBandList* or *frequencyBandListAerial* for uplink for FDD, and they are not downlink only bands, and
 - 2> if the UE is IAB-MT or wide area NCR-MT (see TS 38.106 [79]) or supports at least one *additionalSpectrumEmission* in the *nr-NS-PmaxList* or *nr-NS-PmaxListAerial* for a supported band in the downlink for TDD, or a supported band in uplink for FDD, and
 - 2> if the UE supports an uplink channel bandwidth with a maximum transmission bandwidth configuration (see TS 38.101-1 [15], TS 38.101-2 [39], and TS 38.101-5 [75]) which

- is smaller than or equal to the *carrierBandwidth* (indicated in *uplinkConfigCommon* for the SCS of the initial uplink BWP or, for (e)RedCap UE, of the RedCap-specific initial uplink BWP if configured), and which
 - is wider than or equal to the bandwidth of the initial uplink BWP or, for (e)RedCap UE, of the RedCap-specific initial uplink BWP if configured, and
- 2> if the UE supports a downlink channel bandwidth with a maximum transmission bandwidth configuration (see TS 38.101-1 [15], TS 38.101-2 [39], and TS 38.101-5 [75]) which
- is smaller than or equal to the *carrierBandwidth* (indicated in *downlinkConfigCommon* for the SCS of the initial downlink BWP or, for (e)RedCap UE, of the RedCap-specific initial downlink BWP if configured), and which
 - is wider than or equal to the bandwidth of the initial downlink BWP or, for (e)RedCap UE, of the RedCap-specific initial downlink BWP if configured, and
- 2> if *frequencyShift7p5khz* is present and the UE supports corresponding 7.5kHz frequency shift on this band; or *frequencyShift7p5khz* is not present, and
- 2> if the UE is neither a RedCap nor an eRedCap UE, or for TDD if the UE is an (e)RedCap UE, or for FDD if the UE is an (e)RedCap UE and *halfDuplexRedCapAllowed* is present, or if the UE is an (e)RedCap UE and the (e)RedCap UE supports full-duplex FDD operation on this band:
- 3> if neither *trackingAreaCode* nor *trackingAreaList* is provided for the selected PLMN nor the registered PLMN nor PLMN of the equivalent PLMN list:
- 4> consider the cell as barred in accordance with TS 38.304 [20];
- 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 3> else if UE is IAB-MT but not a mobile IAB-MT and if *iab-Support* is not provided for the selected PLMN nor the registered PLMN nor PLMN of the equivalent PLMN list nor the selected SNPN nor the registered SNPN nor SNPN of the equivalent SNPN list:
- 4> consider the cell as barred in accordance with TS 38.304 [20];
- 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 3> else if UE is NCR-MT and if *ncr-Support* is not provided:
- 4> consider the cell as barred in accordance with TS 38.304 [20];
- 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 3> else if UE is a mobile IAB-MT and if *mobileIAB-Support* is not provided for the selected PLMN nor the registered PLMN nor PLMN of the equivalent PLMN list nor the selected SNPN nor the registered SNPN nor SNPN of the equivalent SNPN list:
- 4> consider the cell as barred in accordance with TS 38.304 [20];
- 4> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20], upon which the procedure ends;
- 3> else:
- 4> apply a supported uplink channel bandwidth with a maximum transmission bandwidth which
- is contained within the *carrierBandwidth* indicated in *uplinkConfigCommon* for the SCS of the initial uplink BWP or, for (e)RedCap UEs, RedCap-specific initial uplink BWP, if configured, and which
 - is wider than or equal to the bandwidth of the initial BWP for the uplink or, for a (e)RedCap UE, of the RedCap-specific initial uplink BWP if configured;

- 4> apply a supported downlink channel bandwidth with a maximum transmission bandwidth which
 - is contained within the *carrierBandwidth* indicated in *downlinkConfigCommon* for the SCS of the initial downlink BWP or, for (e)RedCap UEs, RedCap-specific initial downlink BWP, if configured, and which
 - is wider than or equal to the bandwidth of the initial BWP for the downlink or, for a (e)RedCap UE, of the RedCap-specific initial downlink BWP if configured;
- 4> if the UE is aerial UE and it supports at least one frequency band in the *frequencyBandListAerial*, for FDD from *frequencyBandListAerial* for uplink, or for TDD from *frequencyBandListAerial* for downlink, for which SIB1 includes *nr-NS-PmaxListAerial* and the UE supports at least one of the *additionalSpectrumEmission* values in the *nr-NS-PmaxListAerial*:
 - 5> select the first frequency band in the *frequencyBandListAerial*, for FDD from *frequencyBandListAerial* for uplink, or for TDD from *frequencyBandListAerial* for downlink, which the UE supports and for which SIB1 includes *nr-NS-PmaxListAerial* and the UE supports at least one of the *additionalSpectrumEmission* values in the *nr-NS-PmaxListAerial*;
- 4> else if the UE is aerial UE and it supports at least one frequency band in the *frequencyBandListAerial*, for FDD from *frequencyBandListAerial* for uplink, or for TDD from *frequencyBandListAerial* for downlink, for which SIB1 does not include *nr-NS-PmaxListAerial* and the UE supports at least one of the *additionalSpectrumEmission* values in the *nr-NS-PmaxList* within *frequencyBandList* for the same NR frequency band number:
 - 5> select the first frequency band in the *frequencyBandListAerial*, for FDD from *frequencyBandListAerial* for uplink, or for TDD from *frequencyBandListAerial* for downlink, which the UE supports and for which SIB1 does not include *nr-NS-PmaxListAerial* and the UE supports at least one of the *additionalSpectrumEmission* values in the *nr-NS-PmaxList* within *frequencyBandList* for the same NR frequency band number;
- 4> else if the UE is aerial UE and SIB1 includes *frequencyBandListAerial*:
 - 5> consider the cell as barred in accordance with TS 38.304 [20];
 - 5> perform cell re-selection to other cells on the same frequency as the barred cell as if *intraFreqReselection*, or *intraFreqReselectionRedCap* for RedCap UEs, or *intraFreqReselection-eRedCap* for eRedCap UEs is set to *notAllowed* as specified in TS 38.304 [20], upon which the procedure ends;
- 4> else:
 - 5> select the first frequency band in the *frequencyBandList*, for FDD from *frequencyBandList* for uplink, or for TDD from *frequencyBandList* for downlink, which the UE supports and for which the UE supports at least one of the *additionalSpectrumEmission* values in *nr-NS-PmaxList*, if present, and for (e)RedCap UEs in FDD, if the *halfDuplexRedCapAllowed* is not present, for which the UE supports full-duplex FDD operation;
- 4> forward the *cellIdentity* to upper layers;
- 4> forward the *trackingAreaCode* to upper layers;
- 4> forward the *trackingAreaList* to upper layers, if included;
- 4> forward the received *posSIB-MappingInfo* to upper layers, if included;
- 4> forward the PLMN identity or SNPN identity or PNI-NPN identity to upper layers;
- 4> if in RRC_INACTIVE and the forwarded information does not trigger message transmission by upper layers:
 - 5> if the serving cell does not belong to the configured *ran-NotificationAreaInfo*:
 - 6> initiate an RNA update as specified in 5.3.13.8;
 - 5> if configured to receive MBS multicast in RRC_INACTIVE:

- 6> if SIB24 is not scheduled in SIB1 in the new cell after cell selection (i.e., different from the cell where the UE was configured to receive multicast in RRC_CONNECTED) or in the cell after cell reselection; or
- 6> if the PTM configuration is not available on the multicast MCCH in the new cell after cell selection (i.e., different from the cell where the UE was configured to receive multicast in RRC_CONNECTED) or in the cell after cell reselection for at least one multicast session that the UE has joined and for which the UE was indicated to stop monitoring G-RNTI;
- 7> initiate RRC connection resume procedure for multicast reception as specified in 5.3.13.1d;
- 4> forward the *ims-EmergencySupport* to upper layers, if present;
- 4> forward the *eCallOverIMS-Support* to upper layers, if present;
- 4> forward the *UAC-AccessCategory1-SelectionAssistanceInfo* or *UAC-AC1-SelectAssistInfo* for the selected PLMN/SNPN to upper layers, if present and set to *a*, *b* or *c*;
- 4> if the UE is in SNPN access mode:
 - 5> forward the *imsEmergencySupportForSNPN* indicators with the corresponding SNPN identities to upper layers, if present;
- 4> apply the configuration included in the *servingCellConfigCommon*;
- 4> apply the specified PCCH configuration defined in 9.1.1.3;
- 4> if the UE has a stored valid version of a SIB, in accordance with clause 5.2.2.2.1, that the UE requires to operate within the cell in accordance with clause 5.2.2.1:
 - 5> use the stored version of the required SIB;
- 4> if the UE has not stored a valid version of a SIB, in accordance with clause 5.2.2.2.1, of one or several required SIB(s), in accordance with clause 5.2.2.1:
 - 5> for the SI message(s) that, according to the *si-SchedulingInfo*, contain at least one required SIB and for which *si-BroadcastStatus* is set to *broadcasting*:
 - 6> acquire the SI message(s) as defined in clause 5.2.2.3.2;
 - 5> for the SI message(s) that, according to the *si-SchedulingInfo*, contain at least one required SIB and for which *si-BroadcastStatus* is set to *notBroadcasting*:
 - 6> trigger a request to acquire the SI message(s) as defined in clause 5.2.2.3.3;
- 4> if the UE has a stored valid version of a posSIB, in accordance with clause 5.2.2.2.1, of one or several required posSIB(s), in accordance with clause 5.2.2.1:
 - 5> use the stored version of the required posSIB;
- 4> if the UE has not stored a valid version of a posSIB, in accordance with clause 5.2.2.2.1, of one or several posSIB(s) in accordance with clause 5.2.2.1:
 - 5> for the SI message(s) that, according to the *posSI-SchedulingInfo* or *si-SchedulingInfo-v1700*, if present, contain at least one requested posSIB and for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *broadcasting*:
 - 6> acquire the SI message(s) as defined in clause 5.2.2.3.2;
 - 5> for the SI message(s) that, according to the *posSI-SchedulingInfo* or *si-SchedulingInfo-v1700*, if present, contain at least one requested posSIB for which *posSI-BroadcastStatus* in *posSchedulingInfoList* in *posSI-SchedulingInfo* or *si-BroadcastStatus* of the type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700*, if present, is set to *notBroadcasting*:
 - 6> trigger a request to acquire the SI message(s) as defined in clause 5.2.2.3.3a;

- 4> if the UE is aerial UE and, for the selected frequency band, it supports at least one *additionalSpectrumEmission* value indicated by *nr-NS-PmaxListAerial* within *frequencyBandListAerial* in *uplinkConfigCommon* for FDD or in *downlinkConfigCommon* for TDD:
 - 5> apply the first listed *additionalSpectrumEmission* which it supports among the values indicated by *nr-NS-PmaxListAerial* for the selected frequency band within *frequencyBandListAerial* in *uplinkConfigCommon* for FDD or in *downlinkConfigCommon* for TDD;
- 4> else:
 - 5> apply the first listed *additionalSpectrumEmission* which it supports among the values included in *nr-NS-PmaxList* within *frequencyBandList* in *uplinkConfigCommon* for FDD or in *downlinkConfigCommon* for TDD;
- 4> if the *additionalPmax* is present in the same entry of the selected *additionalSpectrumEmission* within *nr-NS-PmaxList* or *nr-NS-PmaxListAerial*:
 - 5> apply the *additionalPmax* for UL;
- 4> else:
 - 5> apply the *p-Max* in *uplinkConfigCommon* for UL;
- 4> if *supplementaryUplink* is present in *servingCellConfigCommon*; and
- 4> if the UE supports one or more of the frequency bands indicated in the *frequencyBandList* for the *supplementaryUplink*; and
- 4> if the UE supports at least one *additionalSpectrumEmission* in the *nr-NS-PmaxList* for a supported supplementary uplink band; and
- 4> if the UE is neither a RedCap nor an eRedCap UE, or for TDD if the UE is an (e)RedCap UE, or for FDD if the UE is an (e)RedCap UE and *halfDuplexRedCapAllowed* is present, or if the UE is an (e)RedCap UE and the (e)RedCap UE supports full-duplex FDD operation on the frequency bands indicated in the *frequencyBandList* for the *supplementaryUplink*; and
- 4> if the UE supports an uplink channel bandwidth with a maximum transmission bandwidth configuration (see TS 38.101-1 [15] and TS 38.101-2 [39]) which
 - is smaller than or equal to the *carrierBandwidth* (indicated in *supplementaryUplink* for the SCS of the initial uplink BWP), and which
 - is wider than or equal to the bandwidth of the initial uplink BWP of the SUL;
- 5> consider supplementary uplink as configured in the serving cell;
- 5> select the first frequency band in the *frequencyBandList* for the *supplementaryUplink* which the UE supports and for which the UE supports at least one of the *additionalSpectrumEmission* values in *nr-NS-PmaxList*, if present, and for (e)RedCap UEs in FDD, if the *halfDuplexRedCapAllowed* is not present, for which the UE supports full-duplex FDD operation;
- 5> apply a supported supplementary uplink channel bandwidth with a maximum transmission bandwidth which
 - is contained within the *carrierBandwidth* (indicated in *supplementaryUplink* for the SCS of the initial uplink BWP), and which
 - is wider than or equal to the bandwidth of the initial BWP of the SUL;
- 5> apply the first listed *additionalSpectrumEmission* which it supports among the values included in *nr-NS-PmaxList* within *frequencyBandList* for the *supplementaryUplink*;
- 5> if the *additionalPmax* is present in the same entry of the selected *additionalSpectrumEmission* within *nr-NS-PmaxList* for the *supplementaryUplink*:
 - 6> apply the *additionalPmax* in *supplementaryUplink* for SUL;

5> else:

6> apply the *p-Max* in *supplementaryUplink* for SUL;

NOTE 2: For an out of coverage L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE receiving SIB1 from its connected L2 U2N Relay UE, it is up to Remote UE implementation whether to consider and apply the following parameters: *frequencyBandList*, *carrierBandwidth*, *frequencyShift7p5khz*, frequency band, channel bandwidth, the configuration included in the *servingCellConfigCommon*, the specified PCCH configuration, *additionalSpectrumEmission*, *additionalPmax*, and *p-Max*.

2> else:

3> consider the cell as barred in accordance with TS 38.304 [20]; and

3> perform cell re-selection to other cells on the same frequency as the barred cell as if *intraFreqReselection*, or *intraFreqReselectionRedCap* for RedCap UEs, or *intraFreqReselection-eRedCap* for eRedCap UEs, or *intraFreqReselection2RxXR* for 2Rx XR UEs is set to *notAllowed* as specified in TS 38.304 [20];

5.2.2.4.3 Actions upon reception of *SIB2*

Upon receiving *SIB2*, the UE shall:

1> if in RRC_IDLE or in RRC_INACTIVE or in RRC_CONNECTED while T311 is running:

2> if, for the entry in *frequencyBandList* with the same index as the frequency band selected in clause 5.2.2.4.2, the UE supports at least one *additionalSpectrumEmission* in the *nr-NS-PmaxList* within the *frequencyBandList*; or

2> if, for the entry in *frequencyBandListAerial* with the same index as the frequency band selected in clause 5.2.2.4.2, the UE supports at least one *additionalSpectrumEmission* value indicated by the *nr-NS-PmaxListAerial* within the *frequencyBandListAerial*:

3> if the UE is aerial UE and it supports at least one *additionalSpectrumEmission* value indicated by *nr-NS-PmaxListAerial*:

4> apply the first listed *additionalSpectrumEmission* which it supports among the values indicated by *nr-NS-PmaxListAerial*;

3> else:

4> apply the first listed *additionalSpectrumEmission* which it supports among the values included in *nr-NS-PmaxList* within *frequencyBandList*;

3> if the *additionalPmax* is present in the same entry of the selected *additionalSpectrumEmission* within *nr-NS-PmaxList* or *nr-NS-PmaxListAerial*:

4> apply the *additionalPmax*;

3> else:

4> apply the *p-Max*;

3> if the UE selects a frequency band (from the procedure in clause 5.2.2.4.2) for the supplementary uplink:

4> if, for the entry in *frequencyBandListSUL* with the same index as the frequency band selected in clause 5.2.2.4.2, the UE supports at least one *additionalSpectrumEmission* in the *nr-NS-PmaxList* within the *frequencyBandListSUL*:

5> apply the first listed *additionalSpectrumEmission* which it supports among the values included in *nr-NS-PmaxList* within *frequencyBandListSUL*;

5> if the *additionalPmax* is present in the same entry of the selected *additionalSpectrumEmission* within *nr-NS-PmaxList*:

6> apply the *additionalPmax*;

- 5> else:
 - 6> apply the p -Max;
- 4> else:
 - 5> apply the p -Max.
- 2> else:
 - 3> apply the p -Max;

5.2.2.4.4 Actions upon reception of *SIB3*

No UE requirements related to the contents of this *SIB3* apply other than those specified elsewhere e.g. within procedures using the concerned system information, and/ or within the corresponding field descriptions.

5.2.2.4.5 Actions upon reception of *SIB4*

Upon receiving *SIB4* the UE shall:

- 1> if in RRC_IDLE, or in RRC_INACTIVE or in RRC_CONNECTED while T311 is running;
- 2> for each entry in the *interFreqCarrierFreqList*:
 - 3> if the UE is neither a RedCap nor an eRedCap UE nor 2Rx XR UE; or
 - 3> if the UE is a RedCap UE and the *interFreqCarrierFreqList-v1700* is absent; or
 - 3> if the UE is an eRedCap UE and the *interFreqCarrierFreqList-v1800* is absent; or
 - 3> if the UE is a 2Rx XR UE and the *interFreqCarrierFreqList-v1800* is absent; or
 - 3> if the UE is a RedCap UE and *redCapAccessAllowed* is present in *interFreqCarrierFreqList-v1700*; or
 - 3> if the UE is an eRedCap UE and *eRedCapAccessAllowed* is present in *interFreqCarrierFreqList-v1800*; or
 - 3> if the UE is a 2Rx XR UE and *accessAllowed2RxXR* is present in *interFreqCarrierFreqList-v1800*:
 - 4> select the first frequency band in the *frequencyBandList* (or for aerial UE *frequencyBandListAerial*), and *frequencyBandListSUL*, if present, which the UE supports and for which the UE supports at least one of the *additionalSpectrumEmission* values in *nr-NS-PmaxList* (or for aerial UE as indicated by *nr-NS-PmaxListAerial*), if present;
 - 4> if, the frequency band selected by the UE in *frequencyBandList* or *frequencyBandListAerial* to represent a non-serving NR carrier frequency is not a downlink only band:
 - 5> if, for the selected frequency band, the UE supports at least one *additionalSpectrumEmission* in the *nr-NS-PmaxList* within the *frequencyBandList*; or
 - 5> if, for the selected frequency band, the UE supports at least one *additionalSpectrumEmission* value indicated by the *nr-NS-PmaxListAerial* within the *frequencyBandListAerial*:
 - 6> if the UE is aerial UE and it supports at least one *additionalSpectrumEmission* value indicated by *nr-NS-PmaxListAerial*:
 - 7> apply the first listed *additionalSpectrumEmission* which it supports among the values indicated by *nr-NS-PmaxListAerial*;
 - 6> else:
 - 7> apply the first listed *additionalSpectrumEmission* which it supports among the values included in *nr-NS-PmaxList* within *frequencyBandList*;

6> if the *additionalPmax* is present in the same entry of the selected *additionalSpectrumEmission* within *nr-NS-PmaxList* or *nr-NS-PmaxListAerial*:

7> apply the *additionalPmax*;

6> else:

7> apply the *p-Max*;

6> if *frequencyBandListSUL* is present in SIB4 and, for the frequency band selected in *frequencyBandListSUL*, the UE supports at least one *additionalSpectrumEmission* in the *nr-NS-PmaxList* within *FrequencyBandListSUL*:

7> apply the first listed *additionalSpectrumEmission* which it supports among the values included in *nr-NS-PmaxList* within *frequencyBandListSUL*;

7> if the *additionalPmax* is present in the same entry of the selected *additionalSpectrumEmission* within *nr-NS-PmaxList*:

8> apply the *additionalPmax*;

7> else:

8> apply the *p-Max*;

6> else:

7> apply the *p-Max*;

5> else:

6> apply the *p-Max*;

1> if in RRC_IDLE or RRC_INACTIVE, and T331 is running:

2> perform the actions as specified in 5.7.8.1a;

5.2.2.4.6 Actions upon reception of SIB5

No UE requirements related to the contents of this SIB5 apply other than those specified elsewhere e.g. within procedures using the concerned system information, and/ or within the corresponding field descriptions.

5.2.2.4.7 Actions upon reception of SIB6

Upon receiving the SIB6 the UE shall:

1> forward the received *warningType*, *messageIdentifier* and *serialNumber* to upper layers;

5.2.2.4.8 Actions upon reception of SIB7

Upon receiving the SIB7 the UE shall:

1> if there is no current value for *messageIdentifier* and *serialNumber* for SIB7; or

1> if either the received value of *messageIdentifier* or of *serialNumber*, or of both *messageIdentifier* and *serialNumber* are different from the current values of *messageIdentifier* and *serialNumber* for SIB7:

2> use the received values of *messageIdentifier* and *serialNumber* for SIB7 as the current values of *messageIdentifier* and *serialNumber* for SIB7;

2> discard any previously buffered *warningMessageSegment*;

2> if all segments of a warning message have been received:

3> assemble the warning message from the received *warningMessageSegment(s)*;

- 3> forward the received warning message, *messageIdentifier*, *serialNumber* and *dataCodingScheme* to upper layers;
- 3> stop reception of *SIB7*;
- 3> discard the current values of *messageIdentifier* and *serialNumber* for *SIB7*;
- 2> else:
 - 3> store the received *warningMessageSegment*;
 - 3> continue reception of *SIB7*;
- 1> else if all segments of a warning message have been received:
 - 2> assemble the warning message from the received *warningMessageSegment(s)*;
 - 2> forward the received complete warning message, *messageIdentifier*, *serialNumber* and *dataCodingScheme* to upper layers;
 - 2> stop reception of *SIB7*;
 - 2> discard the current values of *messageIdentifier* and *serialNumber* for *SIB7*;
- 1> else:
 - 2> store the received *warningMessageSegment*;
 - 2> continue reception of *SIB7*;

The UE should discard any stored *warningMessageSegment* and the current value of *messageIdentifier* and *serialNumber* for *SIB7* if the complete warning message has not been assembled within a period of 3 hours.

5.2.2.4.9 Actions upon reception of *SIB8*

Upon receiving the *SIB8* the UE shall:

- 1> if the *SIB8* contains a complete warning message and the complete geographical area coordinates (if any):
 - 2> forward the received warning message, *messageIdentifier*, *serialNumber*, *dataCodingScheme* and the geographical area coordinates (if any) to upper layers;
 - 2> continue reception of *SIB8*;
- 1> else:
 - 2> if the received values of *messageIdentifier* and *serialNumber* are the same (each value is the same) as a pair for which a warning message and the geographical area coordinates (if any) are currently being assembled:
 - 3> store the received *warningMessageSegment*;
 - 3> store the received *warningAreaCoordinatesSegment* (if any);
 - 3> if all segments of a warning message and geographical area coordinates (if any) have been received:
 - 4> assemble the warning message from the received *warningMessageSegment*;
 - 4> assemble the geographical area coordinates from the received *warningAreaCoordinatesSegment* (if any);
 - 4> forward the received warning message, *messageIdentifier*, *serialNumber*, *dataCodingScheme* and geographical area coordinates (if any) to upper layers;
 - 4> stop assembling a warning message and geographical area coordinates (if any) for this *messageIdentifier* and *serialNumber* and delete all stored information held for it;
 - 3> continue reception of *SIB8*;

- 2> else if the received values of *messageIdentifier* and/or *serialNumber* are not the same as any of the pairs for which a warning message is currently being assembled:
- 3> start assembling a warning message for this *messageIdentifier* and *serialNumber* pair;
- 3> start assembling the geographical area coordinates (if any) for this *messageIdentifier* and *serialNumber* pair;
- 3> store the received *warningMessageSegment*;
- 3> store the received *warningAreaCoordinatesSegment* (if any);
- 3> continue reception of *SIB8*;

The UE should discard *warningMessageSegment* and *warningAreaCoordinatesSegment* (if any) and the associated values of *messageIdentifier* and *serialNumber* for *SIB8* if the complete warning message and the geographical area coordinates (if any) have not been assembled within a period of 3 hours.

NOTE: The number of warning messages that a UE can re-assemble simultaneously is a function of UE implementation.

5.2.2.4.10 Actions upon reception of *SIB9*

Upon receiving *SIB9* with *referenceTimeInfo*, the UE may perform the related actions in clause 5.7.1.3 except for ignoring all further *referenceTimeInfo* received in *SIB9*.

Upon receiving *SIB9* with *eventID-TSS*, the UE shall perform the actions below if requested by upper layers:

- 1> if the UE is NPN capable and the cell is an NPN-only cell:
 - 2> derive a gNB identity from *gNB-ID-Length* and *cellIdentity* of the first *NPN-IdentityInfo* list entry of *NPN-IdentityInfoList* in *SIB1*, and derive the *plmn-Identity* of the first *NPN-Identity* list entry of *NPN-IdentityList* in *SIB1* included in the first *NPN-IdentityInfo* list entry of *NPN-IdentityInfoList* in *SIB1*, as defined in TS 38.413 [42];
- 1> else:
 - 2> derive a gNB identity from *gNB-ID-Length* and *cellIdentity* of the first *PLMN-IdentityInfo* list entry of *PLMN-IdentityInfoList* in *SIB1*, and derive the *plmn-Identity* of the first *PLMN-IdentityInfo* list entry of *PLMN-IdentityInfoList* in *SIB1*, as defined in TS 38.413 [42];
- 1> if *VarTSS-Info* does not have a *storedEventID*; or
- 1> if the *storedEventID* within *VarTSS-Info* is different from the *eventID-TSS* received within *SIB9*; or
- 1> if the *storedGlobalGnbID* within the *VarTSS-Info* is different from the global gNB identity derived from *SIB1*:
 - 2> notify upper layers that *clockQualityDetailsLevel* may have changed;
 - 2> store the *eventID-TSS* received within *SIB9* as the *storedEventID* within *VarTSS-Info*;
 - 2> store the global gNB identity derived from *SIB1* as the *storedGlobalGnbID* within *VarTSS-Info*.

5.2.2.4.11 Actions upon reception of *SIB10*

Upon receiving *SIB10*, the UE shall:

- 1> Forward the *HRNN-list* entries with the corresponding PNI-NPN and SNPN identities to upper layers;

5.2.2.4.12 Actions upon reception of *SIB11*

Upon receiving *SIB11*, the UE shall:

- 1> if in RRC_IDLE or RRC_INACTIVE, and T331 is running:
 - 2> perform the actions as specified in 5.7.8.1a;

5.2.2.4.13 Actions upon reception of *SIB12*

Upon receiving *SIB12*, the UE shall:

- 1> if the UE has stored at least one segment of *SIB12* and the value tag of *SIB12* has changed since a previous segment was stored:
 - 2> discard all stored segments;
- 1> store the segment;
- 1> if all segments have been received:
 - 2> assemble *SIB12-IEs* from the received segments;
 - 2> if *sl-FreqInfoList/sl-FreqInfoListSizeExt* is included in *SIB12-IEs*:
 - 3> if configured to receive NR sidelink communication:
 - 4> use the resource pool(s) indicated by *sl-RxPool* for NR sidelink communication reception, as specified in 5.8.7;
 - 3> if configured to transmit NR sidelink communication:
 - 4> use the resource pool(s) indicated by *sl-TxPoolSelectedNormal*, or *sl-TxPoolExceptional* for NR sidelink communication transmission, as specified in 5.8.8;
 - 4> perform CBR measurement on the transmission resource pool(s) indicated by *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* for NR sidelink communication transmission, as specified in 5.5.3.1;
 - 4> use the synchronization configuration parameters for NR sidelink communication on frequencies included in *sl-FreqInfoList/sl-FreqInfoListSizeExt*, as specified in 5.8.5;
 - 3> if configured to perform SL-PRS measurement:
 - 4> use the resource pool(s) indicated by *sl-RxPool* for SL-PRS measurement, as specified in 5.8.18.2;
 - 3> if configured to transmit SL-PRS:
 - 4> use the resource pool(s) indicated by *sl-TxPoolSelectedNormal*, or *sl-TxPoolExceptional* for SL-PRS transmission, as specified in 5.8.18.3;
 - 4> perform CBR measurement on the transmission resource pool(s) indicated by *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* for SL-PRS, as specified in 5.5.3.1;
 - 4> use the synchronization configuration parameters for NR sidelink positioning on frequencies included in *sl-FreqInfoList/sl-FreqInfoListSizeExt*, as specified in 5.8.5;
 - 3> if configured to receive NR sidelink discovery:
 - 4> use the resource pool(s) indicated by *sl-DiscRxPool* or *sl-RxPool* for NR sidelink discovery reception, as specified in 5.8.13.2;
 - 3> if configured to transmit NR sidelink discovery:
 - 4> if the UE is configured by upper layers to transmit NR sidelink L2 U2N relay discovery messages and *sl-L2U2N-Relay* is included in *SIB12*; or
 - 4> if the UE is configured by upper layers to transmit NR sidelink L3 U2N relay discovery messages and *sl-L3U2N-RelayDiscovery* is included in *SIB12*; or
 - 4> if the UE is configured by upper layers to transmit NR sidelink non-relay discovery messages and *sl-NonRelayDiscovery* is included in *SIB12*; or
 - 4> if the UE is configured by upper layers to transmit NR sidelink L2 U2U relay discovery messages and *sl-L2-U2U-Relay* is included in *SIB12*; or

- 4> if the UE is configured by upper layers to transmit NR sidelink L3 U2U relay discovery messages and *sl-L3-U2U-RelayDiscovery* is included in *SIB12*:
 - 5> use the resource pool(s) indicated by *sl-DiscTxPoolSelected*, *sl-TxPoolExceptional* or *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission, as specified in 5.8.13.3;
 - 5> perform CBR measurement on the transmission resource pool(s) indicated by *sl-TxPoolSelectedNormal*, *sl-DiscTxPoolSelected* or *sl-TxPoolExceptional* for NR sidelink discovery transmission, as specified in 5.5.3.1;
 - 5> use the synchronization configuration parameters for NR sidelink discovery on frequencies included in *sl-FreqInfoList*, as specified in 5.8.5;
- 2> if *sl-RadioBearerConfigList* or *sl-RLC-BearerConfigList* is included in *sl-ConfigCommonNR*:
 - 3> perform sidelink DRB addition/modification/release as specified in 5.8.9.1a.1/5.8.9.1a.2;
 - 3> if *sl-RLC-BearerConfigListSizeExt* is included in *SIB12-IEs*:
 - 4> perform additional sidelink RLC bearer addition/modification/release as specified in 5.8.9.1a.5/5.8.9.1a.6;
- 2> if *sl-MeasConfigCommon* is included in *sl-ConfigCommonNR*:
 - 3> store the NR sidelink measurement configuration;
- 2> if *sl-DRX-ConfigCommonGC-BC* is included in *SIB12-IEs*:
 - 3> store the NR sidelink DRX configuration and configure lower layers to perform sidelink DRX operation for groupcast and broadcast as specified in TS 38.321 [3];
- 1> if the UE is acting as L2 U2N Remote UE:
 - 2> if the *sl-TimersAndConstantsRemoteUE* is included in *SIB12*:
 - 3> use values for timers T300, T301 and T319 as included in the *sl-TimersAndConstantsRemoteUE* received in *SIB12*;
 - 2> else:
 - 3> use values for timers T300, T301 and T319 as included in the *ue-TimersAndConstants* received in *SIB1*;

The UE should discard any stored segments for *SIB12* if the complete *SIB12* has not been assembled within a period of 3 hours. The UE shall discard any stored segments for *SIB12* upon cell (re-)selection.

NOTE: The L2 U2U UE is allowed to use previous configuration based on *SIB12* before receiving dedicated configuration during and immediately after state transition from idle/inactive to connected.

5.2.2.4.14 Actions upon reception of *SIB13*

Upon receiving *SIB13*, the UE shall perform the actions upon reception of *SystemInformationBlockType21* as specified in 5.2.2.28 in TS 36.331 [10].

5.2.2.4.15 Actions upon reception of *SIB14*

Upon receiving *SIB14*, the UE shall perform the actions upon reception of *SystemInformationBlockType26* as specified in 5.2.2.33 in TS 36.331 [10].

5.2.2.4.16 Actions upon reception of *SIBpos*

No UE requirements related to the contents of the *SIBpos* apply other than those specified elsewhere e.g. within TS 37.355 [49], and/or within the corresponding field descriptions.

5.2.2.4.17 Actions upon reception of *SIB15*

Upon receiving *SIB15*, the UE shall:

- 1> forward the applicable disaster roaming information for each PLMN sharing the cell to upper layers.

5.2.2.4.18 Actions upon reception of *SIB16*

Upon receiving *SIB16* with cell reselection priorities for slicing, the UE shall perform the actions as specified in TS 38.304 [20].

5.2.2.4.19 Actions upon reception of *SIB17*

Upon receiving *SIB17*, the UE shall:

- 1> if the UE has stored at least one segment of *SIB17* and the value tag of *SIB17* has changed since a previous segment was stored:
 - 2> discard all stored segments;
- 1> store the segment;
- 1> if all segments have been received:
 - 2> assemble *SIB17-IEs* from the received segments.

The UE should discard any stored segments for *SIB17* if the complete *SIB17* has not been assembled within a period of 3 hours. The UE shall discard any stored segments for *SIB17* upon cell (re-) selection.

5.2.2.4.19a Actions upon reception of *SIB17bis*

Upon receiving *SIB17bis*, the UE shall:

- 1> if the UE has stored at least one segment of *SIB17bis* and the value tag of *SIB17bis* has changed since a previous segment was stored:
 - 2> discard all stored segments;
- 1> store the segment;
- 1> if all segments have been received:
 - 2> assemble *SIB17bis-IEs* from the received segments.

The UE should discard any stored segments for *SIB17bis* if the complete *SIB17bis* has not been assembled within a period of 3 hours. The UE shall discard any stored segments for *SIB17bis* upon cell (re-) selection.

5.2.2.4.20 Actions upon reception of *SIB18*

Upon receiving *SIB18*, the UE shall:

- 1> forward the Group IDs for Network selection (GINs) in *SIB18* with the corresponding SNPN identities to upper layers;

5.2.2.4.21 Actions upon reception of *SIB19*

Upon receiving *SIB19* in an NTN cell, the UE in RRC_CONNECTED shall:

- 1> start or restart T430 for serving cell with the timer value set to *ntn-UISyncValidityDuration* for the serving cell from the subframe indicated by *epochTime* for the serving cell.

NOTE: UE should attempt to re-acquire *SIB19* before the end of the duration indicated by *ntn-UISyncValidityDuration* and *epochTime* by UE implementation.

5.2.2.4.22 Actions upon reception of *SIB20*

No UE requirements related to the contents of *SIB20* apply other than those specified elsewhere e.g. within procedures using the concerned system information, and/or within the corresponding field descriptions.

5.2.2.4.23 Actions upon reception of *SIB21*

No UE requirements related to the contents of *SIB21* apply other than those specified elsewhere e.g. within procedures using the concerned system information, and/or within the corresponding field descriptions.

5.2.2.4.24 Actions upon reception of *SIB22*

No UE requirements related to the contents of *SIB22* apply other than those specified elsewhere e.g. within procedures using the concerned system information, and/or within the corresponding field descriptions.

5.2.2.4.25 Actions upon reception of *SIB23*

Upon receiving *SIB23*, the UE shall:

- 1> if the UE has stored at least one segment of *SIB23* and the value tag of *SIB23* has changed since a previous segment was stored:
 - 2> discard all stored segments;
- 1> store the segment;
- 1> if all segments have been received:
 - 2> assemble *SIB23-IEs* from the received segments;
 - 2> if *sl-PosFreqInfoList* is included in *sl-PosConfigCommonNR*:
 - 3> if configured to perform SL-PRS measurement:
 - 4> use the resource pool(s) indicated by *sl-PRS-RxPool* for SL-PRS measurement, as specified in 5.8.18.2;
 - 3> if configured to transmit SL-PRS:
 - 4> use the resource pool(s) indicated by *sl-PRS-TxPoolSelectedNormal* or *sl-PRS-TxPoolExceptional* for SL-PRS transmission, as specified in 5.8.18.3;
 - 4> perform CBR measurement on the transmission resource pool(s) indicated by *sl-PRS-TxPoolSelectedNormal* or *sl-PRS-TxPoolExceptional* for SL-PRS transmission, as specified in 5.5.3.1;
 - 4> use the synchronization configuration parameters for NR sidelink positioning on frequencies included in *sl-PosFreqInfoList*, as specified in 5.8.5;

The UE should discard any stored segments for *SIB23* if the complete *SIB23* has not been assembled within a period of 3 hours. The UE shall discard any stored segments for *SIB23* upon cell (re-)selection.

5.2.2.4.26 Actions upon reception of *SIB24*

No UE requirements related to the contents of *SIB24* apply other than those specified elsewhere e.g., within procedures using the concerned system information, and/or within the corresponding field descriptions.

5.2.2.4.27 Actions upon reception of *SIB25*

No UE requirements related to the contents of *SIB25* apply other than those specified elsewhere e.g. within procedures using the concerned system information, and/or within the corresponding field descriptions.

5.2.2.5 Essential system information missing

The UE shall:

- 1> if in RRC_IDLE or in RRC_INACTIVE or in RRC_CONNECTED while T311 is running;
- 2> if the UE is unable to acquire the *MIB* or *SIB1*:
- 3> consider the cell as barred in accordance with TS 38.304 [20];
- 3> perform cell re-selection to other cells on the same frequency as the barred cell as specified in TS 38.304 [20].

NOTE 1: The *SIB19* is essential for NTN access. If UE is unable to acquire the *SIB19* for NTN access, the action is up to UE implementation (e.g., cell re-selection to other cells).

NOTE 2: The *SIB22* is essential for ATG access. If UE is unable to acquire the *SIB22* for ATG access, the action is up to UE implementation (e.g., cell re-selection to other cells).

5.2.2.6 T430 expiry

The UE shall:

- 1> if T430 for serving cell expires and if in RRC_CONNECTED:
- 2> inform lower layers that UL synchronisation is lost;
- 2> acquire *SIB19* as defined in clause 5.2.2.3.2;
- 2> upon successful acquisition of *SIB19*:
- 3> inform lower layers when UL synchronisation is obtained;

NOTE: The exact time when UL synchronisation is obtained (after *SIB19* is acquired) is left to UE implementation, which can be from the subframe indicated by *epochTime* and optionally before the subframe indicated by *epochTime*.

5.3 Connection control

5.3.1 Introduction

5.3.1.1 RRC connection control

RRC connection establishment involves the establishment of SRB1. The network completes RRC connection establishment prior to completing the establishment of the NG connection, i.e. prior to receiving the UE context information from the 5GC. Consequently, AS security is not activated during the initial phase of the RRC connection. During this initial phase of the RRC connection, the network may configure the UE to perform measurement reporting, but the UE only sends the corresponding measurement reports after successful AS security activation. However, the UE only accepts a re-configuration with sync message when AS security has been activated.

Upon receiving the UE context from the 5GC, the RAN activates AS security (both ciphering and integrity protection) using the initial AS security activation procedure. The RRC messages to activate AS security (command and successful response) are integrity protected, while ciphering is started only after completion of the procedure. That is, the response to the message used to activate AS security is not ciphered, while the subsequent messages (e.g. used to establish SRB2, DRBs and multicast MRBs) are both integrity protected and ciphered. After having initiated the initial AS security activation procedure, the network may initiate the establishment of SRB2 and DRBs and/or multicast MRBs, i.e. the network may do this prior to receiving the confirmation of the initial AS security activation from the UE. In any case, the network will apply both ciphering and integrity protection for the RRC reconfiguration messages used to establish SRB2, DRBs and/or multicast MRBs. The network should release the RRC connection if the initial AS security activation and/or the radio bearer establishment fails. A configuration with SRB2 without DRB or multicast MRB, or with DRB or multicast MRB without SRB2 is not supported (i.e., SRB2 and at least one DRB or multicast MRB must be configured in the same RRC Reconfiguration message, and it is not allowed to release all the DRBs and multicast

MRBs without releasing the RRC Connection). For IAB-MT and NCR-MT, a configuration with SRB2 without any DRB/MRB is supported.

The release of the RRC connection normally is initiated by the network. The procedure may be used to re-direct the UE to an NR frequency or an E-UTRA carrier frequency.

The suspension of the RRC connection is initiated by the network. When the RRC connection is suspended, the UE stores the UE Inactive AS context and any configuration received from the network, and transits to RRC_INACTIVE state. The RRC message to suspend the RRC connection is integrity protected and ciphered.

The resumption of a suspended RRC connection is initiated by upper layers when the UE needs to transit from RRC_INACTIVE state to RRC_CONNECTED state or by RRC layer to perform a RNA update or by RAN paging from NG-RAN or for SDT or for multicast reception. When the RRC connection is resumed, network configures the UE according to the RRC connection resume procedure based on the stored UE Inactive AS context and any RRC configuration received from the network. The RRC connection resume procedure re-activates AS security and re-establishes SRB(s) and DRB(s) and/or multicast MRB(s), if configured.

Upon initiating the resume procedure for SDT, AS security (both ciphering and integrity protection) is re-activated for SRB2 (if configured for SDT) and for SRB1. In addition, AS security is also re-activated (if security is configured) for all the DRBs configured for SDT. Further, the PDCP entities of SRB1 and PDCP entities of the radio bearers configured for SDT are re-established and resumed whilst the UE remains in RRC_INACTIVE state. Transmission and reception of data and/or signalling messages over radio bearers configured for SDT can happen whilst the UE is in RRC_INACTIVE state and SDT procedure is ongoing.

In response to a request to resume the RRC connection or in response to a resume procedure initiated for SDT, the network may resume the suspended RRC connection and send UE to RRC_CONNECTED, or reject the request to resume and send UE to RRC_INACTIVE (with a wait timer), or directly re-suspend the RRC connection and send UE to RRC_INACTIVE, or directly release the RRC connection and send UE to RRC_IDLE, or instruct the UE to initiate NAS level recovery (in this case the network sends an RRC setup message).

NOTE: In case the UE receives the configurations for NR sidelink communication via the E-UTRA, the configurations for NR sidelink communication in *SIB12* and *sl-ConfigDedicatedNR* within *RRCReconfiguration* used in clause 5.3 are provided by the configurations in *SystemInformationBlockType28* and *sl-ConfigDedicatedForNR* within *RRCConnectionReconfiguration* as specified in TS 36.331[10], respectively.

5.3.1.2 AS Security

AS security comprises of the integrity protection and ciphering of RRC signalling (SRBs) and user data (DRBs).

RRC handles the configuration of the AS security parameters which are part of the AS configuration: the integrity protection algorithm, the ciphering algorithm, if integrity protection and/or ciphering is enabled for a DRB and two parameters, namely the *keySetChangeIndicator* and the *nextHopChainingCount*, which are used by the UE to determine the AS security keys upon reconfiguration with sync (with key change), connection re-establishment and/or connection resume.

The integrity protection algorithm is common for SRB1, SRB2, SRB3 (if configured), SRB4 (if configured), SRB5 (if configured) and DRBs configured with integrity protection, with the same *keyToUse* value. The ciphering algorithm is common for SRB1, SRB2, SRB3 (if configured), SRB4 (if configured), SRB5 (if configured) and DRBs configured with the same *keyToUse* value. Neither integrity protection nor ciphering applies for SRB0.

NOTE 0: All DRBs related to the same PDU session have the same enable/disable setting for ciphering and the same enable/disable setting for integrity protection, as specified in TS 33.501 [11].

RRC integrity protection and ciphering are always activated together, i.e. in one message/procedure. RRC integrity protection and ciphering for SRBs are never de-activated. However, it is possible to switch to a 'NULL' ciphering algorithm (*nea0*).

The 'NULL' integrity protection algorithm (*nia0*) is used only for SRBs and for the UE in limited service mode, see TS 33.501 [11] and when used for SRBs, integrity protection is disabled for DRBs. In case the 'NULL' integrity protection algorithm is used, 'NULL' ciphering algorithm is also used.

NOTE 1: Lower layers discard RRC messages for which the integrity protection check has failed and indicate the integrity protection verification check failure to RRC.

The AS applies four different security keys: one for the integrity protection of RRC signalling (K_{RRCint}), one for the ciphering of RRC signalling (K_{RRCenc}), one for integrity protection of user data (K_{UPint}) and one for the ciphering of user data (K_{UPenc}). All four AS keys are derived from the K_{gNB} key. The K_{gNB} key is based on the K_{AMF} key (as specified in TS 33.501 [11]), which is handled by upper layers.

The integrity protection and ciphering algorithms can only be changed with reconfiguration with sync. The AS keys (K_{gNB} , K_{RRCint} , K_{RRCenc} , K_{UPint} and K_{UPenc}) change upon reconfiguration with sync (if *masterKeyUpdate* is included), and upon connection re-establishment and connection resume.

For each radio bearer an independent counter (*COUNT*, as specified in TS 38.323 [5]) is maintained for each direction. For each radio bearer, the *COUNT* is used as input for ciphering and integrity protection.

It is not allowed to use the same *COUNT* value more than once for a given security key. As specified in TS 33.501 clause 6.9.4.1 [11], the network is responsible for avoiding reuse of the *COUNT* with the same RB identity and with the same key, e.g. due to the transfer of large volumes of data, release and establishment of new RBs, and multiple termination point changes for RLC-UM bearers and multiple termination point changes for RLC-AM bearer with SN terminated PDCP re-establishment (*COUNT* reset) due to SN only full configuration whilst the key stream inputs (i.e. bearer ID, security key) at MN have not been updated. In order to avoid such re-use, the network may e.g. use different RB identities for RB establishments, change the AS security key, or an *RRC_CONNECTED* to *RRC_IDLE*/*RRC_INACTIVE* and then to *RRC_CONNECTED* transition.

In order to limit the signalling overhead, individual messages/ packets include a short sequence number (PDCP SN, as specified in TS 38.323 [5]). In addition, an overflow counter mechanism is used: the hyper frame number (*HFN*, as specified in TS 38.323 [5]). The *HFN* needs to be synchronized between the UE and the network.

For each SRB, the value provided by RRC to lower layers to derive the 5-bit *BEARER* parameter used as input for ciphering and for integrity protection is the value of the corresponding *srb-Identity* with the MSBs padded with zeroes.

For a UE provided with an *sk-counter*, *keyToUse* indicates whether the UE uses the master key (K_{gNB}) or the secondary key ($S\text{-}K_{\text{eNB}}$ or $S\text{-}K_{\text{gNB}}$) for a particular DRB. The secondary key is derived from the master key and *sk-Counter*, as defined in TS 33.501[11]. Whenever there is a need to refresh the secondary key, e.g. upon change of MN with K_{gNB} change or to avoid *COUNT* reuse, the security key update is used (see 5.3.5.7). When the UE is in NR-DC, the network may provide a UE configured with an SCG with an *sk-Counter* even when no DRB is setup using the secondary key ($S\text{-}K_{\text{gNB}}$) in order to allow the configuration of SRB3. The network can also provide the UE with an *sk-Counter*, even if no SCG is configured, when using SN terminated MCG bearers.

5.3.2 Paging

5.3.2.1 General

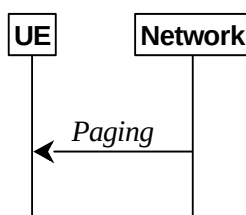 


Figure 5.3.2.1-1: Paging

The purpose of this procedure is:

- to transmit paging information to a UE in *RRC_IDLE* or *RRC_INACTIVE*.
- to transmit paging information for a L2 U2N Remote UE in *RRC_IDLE* or *RRC_INACTIVE* to its serving L2 U2N Relay UE in any RRC state.

5.3.2.2 Initiation

The network initiates the paging procedure by transmitting the *Paging* message at the UE's paging occasion as specified in TS 38.304 [20]. The network may address multiple UEs within a *Paging* message by including one *PagingRecord* for

each UE. The network may also include one or multiple TMGI(s) in the *Paging* message to page UEs for specific MBS multicast session(s).

5.3.2.3 Reception of the *Paging* message by the UE or *PagingRecord* by the L2 U2N Remote UE

Upon receiving the *Paging* message by the UE or receiving *PagingRecord* from its connected L2 U2N Relay UE by a L2 U2N Remote UE, the UE shall:

- 1> if in RRC_IDLE, for each of the *PagingRecord*, if any, included in the *Paging* message, or
- 1> if in RRC_IDLE, for the *PagingRecord*, if any, included in the *UuMessageTransferSidelink* message received from the connected L2 U2N Relay UE:
 - 2> if the *ue-Identity* included in the *PagingRecord* matches the UE identity allocated by upper layers:
 - 3> if upper layers indicate the support of paging cause:
 - 4> forward the *ue-Identity*, *accessType* (if present) and paging cause (if determined) to the upper layers;
 - 3> else:
 - 4> forward the *ue-Identity* and *accessType* (if present) to the upper layers;

NOTE 1: If the L2 U2N Relay UE supports the MUSIM feature, it can forward the paging cause to the connected L2 U2N Remote UE.

- 1> if in RRC_INACTIVE, for each of the *PagingRecord*, if any, included in the *Paging* message, or
- 1> if in RRC_INACTIVE, for the *PagingRecord*, if any, included in the *UuMessageTransferSidelink* message received from the connected L2 U2N Relay UE:
 - 2> if the *ue-Identity* included in the *PagingRecord* matches the UE's stored *fullI-RNTI*:
 - 3> if the UE is configured by upper layers with Access Identity 1:
 - 4> initiate the RRC connection resumption procedure according to 5.3.13 with *resumeCause* set to *mps-PriorityAccess*;
 - 3> else if the UE is configured by upper layers with Access Identity 2:
 - 4> initiate the RRC connection resumption procedure according to 5.3.13 with *resumeCause* set to *mcs-PriorityAccess*;
 - 3> else if the UE is configured by upper layers with one or more Access Identities equal to 11-15:
 - 4> initiate the RRC connection resumption procedure according to 5.3.13 with *resumeCause* set to *highPriorityAccess*;
 - 3> else if *mt-SDT* indication was included in the *Paging* message and if the conditions for initiating SDT for a resume procedure initiated in response to RAN paging according to 5.3.13.1b are fulfilled:
 - 4> if *pagingGroupList* was not included in the *Paging* message; or
 - 4> if *pagingGroupList* was included in the *Paging* message but the UE has not joined any MBS session(s) indicated by the *TMGI(s)* included in the *pagingGroupList*; or
 - 4> if *pagingGroupList* was included in the *Paging* message, all the MBS session(s) indicated by the *TMGI(s)* included in the *pagingGroupList* that the UE has joined are configured to be received in RRC_INACTIVE, and *inactiveReceptionAllowed* was included for all these MBS session(s):
 - 5> initiate the RRC connection resumption procedure according to 5.3.13 with *resumeCause* set to *mt-SDT*;

NOTE 1a: If a UE receives a *Paging* message including *mt-SDT* indication and *inactiveReceptionAllowed* indications for all the multicast session(s) the UE has joined and the UE initiates RRC connection resume, the UE starts monitoring the corresponding G-RNTI(s), if configured, and if multicast MCCH is present, the UE starts monitoring the Multicast MCCH-RNTI and acquires the *MBSMulticastConfiguration* message on multicast MCCH.

4> else:

5> initiate the RRC connection resumption procedure according to 5.3.13 with *resumeCause* set to *mt-Access*;

3> else:

4> initiate the RRC connection resumption procedure according to 5.3.13 with *resumeCause* set to *mt-Access*;

NOTE 2: If both conditions for initiating MT-SDT and MO-SDT according to 5.3.13.1b are fulfilled, UE may initiate RRC connection resumption procedure for MT-SDT or MO-SDT based on implementation.

NOTE 3: A MUSIM UE may not initiate the RRC connection resumption procedure, e.g. when it decides not to respond to the *Paging* message due to UE implementation constraints as specified in TS 24.501 [23].

2> else if the *ue-Identity* included in the *PagingRecord* matches the UE identity allocated by upper layers:

3> if upper layers indicate the support of paging cause:

4> forward the *ue-Identity*, *accessType* (if present) and paging cause (if determined) to the upper layers;

3> else:

4> forward the *ue-Identity* and *accessType* (if present) to the upper layers;

3> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'other';

1> if in RRC_IDLE, for each *TMGI* included in *pagingGroupList*, if any, included in the *Paging* message:

2> if the UE has joined an MBS session indicated by the *TMGI* included in the *pagingGroupList*:

3> forward the *TMGI* to the upper layers;

1> if in RRC_INACTIVE and the UE has joined one or more MBS session(s) indicated by the *TMGI(s)* included in the *pagingGroupList*:

2> if *PagingRecordList* is not included in the *Paging* message; or

2> if none of the *ue-Identity* included in any of the *PagingRecord* matches the UE identity allocated by upper layers or the UE's stored *fullI-RNTI*:

3> if the UE is not configured to receive multicast in RRC_INACTIVE for at least one of the MBS sessions indicated by the *TMGI(s)* included in *pagingGroupList* that the UE has joined; or

3> if *inactiveReceptionAllowed* is not included for at least one of the MBS sessions indicated by the *TMGI(s)* included in *pagingGroupList* that the UE has joined:

4> initiate the RRC connection resumption procedure according to 5.3.13.1d;

3> else:

4> start monitoring the G-RNTI(s), if configured, corresponding to the *TMGI(s)*;

4> if the UE was notified to stop monitoring the G-RNTI(s) for all the joined multicast sessions that are configured for reception in RRC_INACTIVE:

5> apply the multicast PTM configuration provided in *RRCRelease*;

5> if multicast MCCH is present:

- 6> start monitoring the Multicast MCCH-RNTI;
- 6> acquire the *MBSMulticastConfiguration* message on multicast MCCH;
- 4> else if the UE was notified to stop monitoring the G-RNTI for at least one of the multicast sessions indicated by the *TMGI(s)* included in *pagingGroupList* for which the PTM configuration was not included in *RRCRelease* message:
- 5> apply the multicast PTM configuration provided in *RRCRelease*;
- 5> acquire the *MBSMulticastConfiguration* message on multicast MCCH;
- 2> else if the *ue-Identity* included in any of the *PagingRecord* matches the UE identity allocated by upper layers:
 - 3> forward the *TMGI(s)* to the upper layers;
- 1> if the UE is acting as a L2 U2N Relay UE, for each of the *PagingRecord*, if any, included in the *Paging* message:
 - 2> if the *ue-Identity* included in the *PagingRecord* in the *Paging* message matches the UE identity in *sl-PagingIdentityRemoteUE* included in *sl-PagingInfo-RemoteUE* received in *RemoteUEInformationSidelink* message from a L2 U2N Remote UE:
 - 3> initiate the Uu Message transfer in sidelink to that UE as specified in 5.8.9.9;

5.3.3 RRC connection establishment

5.3.3.1 General

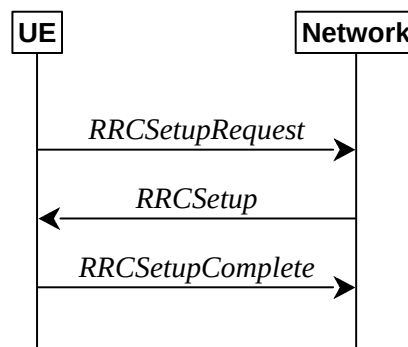 


Figure 5.3.3.1-1: RRC connection establishment, successful

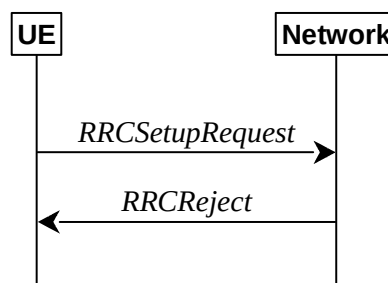 


Figure 5.3.3.1-2: RRC connection establishment, network reject

The purpose of this procedure is to establish an RRC connection. RRC connection establishment involves SRB1 establishment. The procedure is also used to transfer the initial NAS dedicated information/ message from the UE to the network.

The network applies the procedure e.g.as follows:

- When establishing an RRC connection;

- When UE is resuming or re-establishing an RRC connection, and the network is not able to retrieve or verify the UE context. In this case, UE receives *RRCSetup* and responds with *RRCSetupComplete*.

5.3.3.1a Conditions for establishing RRC Connection for NR sidelink communication/discovery/V2X sidelink communication/MP operation

For NR sidelink communication/discovery, an RRC connection establishment is initiated only in the following cases:

- 1> if configured by upper layers to transmit NR sidelink communication and related data is available for transmission:
 - 2> if the frequency on which the UE is configured to transmit NR sidelink communication is included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* within *SIB12* provided by the cell on which the UE camps; and if the valid version of *SIB12* does not include *sl-TxPoolSelectedNormal* for the concerned frequency;
- 1> if configured by upper layers to transmit NR sidelink discovery and related data is available for transmission:
 - 2> if the UE is configured by upper layers to transmit NR sidelink L2 U2U relay discovery messages and *sl-L2-U2U-Relay-r18* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink L3 U2U relay discovery messages and *sl-L3-U2U-RelayDiscovery* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink L2 U2N relay discovery messages and *sl-L2U2N-Relay* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink L3 U2N relay discovery messages and *sl-L3U2N-RelayDiscovery* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink non-relay discovery messages and *sl-NonRelayDiscovery* is included in *SIB12*:
 - 3> if the frequency on which the UE is configured to transmit NR sidelink discovery is included in *sl-FreqInfoList* within *SIB12* provided by the cell on which the UE camps; and if the valid version of *SIB12* includes neither *sl-DiscTxPoolSelected* nor *sl-TxPoolSelectedNormal* for the concerned frequency;

For L2 U2N Relay UE in RRC_IDLE, an RRC connection establishment is initiated in the following cases:

- 1> if any message is received from a L2 U2N Remote UE via SL-RLC0 as specified in 9.1.1.4 or SL-RLC1 as specified in 9.2.4; or
- 1> if *RemoteUEInformationSidelink* containing the *connectionForMP* is received from a L2 U2N Remote UE as specified in 5.8.9.8.3;

For V2X sidelink communication, an RRC connection is initiated only when the conditions specified for V2X sidelink communication in clause 5.3.3.1a of TS 36.331 [10] are met.

NOTE 1: Upper layers initiate an RRC connection (except if the RRC connection is initiated at the L2 U2N Relay UE upon reception of a message from a L2 U2N Remote UE via SL-RLC0 or SL-RLC1, or upon reception of *RemoteUEInformationSidelink* message containing the *connectionForMP*). The interaction with NAS is left to UE implementation.

For N3C relay UE in RRC_IDLE, an RRC connection establishment is initiated when a N3C remote UE indicates it to enter RRC_CONNECTED state.

NOTE 2: How/when the N3C remote UE to indicate N3C relay UE to enter RRC_CONNECTED state is left to UE implementation, e.g. before reporting relay UE information with non-3GPP connection(s).

5.3.3.1b Void

5.3.3.2 Initiation

The UE initiates the procedure when upper layers request establishment of an RRC connection while the UE is in RRC_IDLE and it has acquired essential system information, or for sidelink communication as specified in clause 5.3.3.1a.

The UE shall ensure having valid and up to date essential system information as specified in clause 5.2.2.2 before initiating this procedure.

Upon initiation of the procedure, the UE shall:

- 1> if the upper layers provide an Access Category and one or more Access Identities upon requesting establishment of an RRC connection:
 - 2> perform the unified access control procedure as specified in 5.3.14 using the Access Category and Access Identities provided by upper layers;
 - 3> if the access attempt is barred, the procedure ends;
- 1> if the upper layers provide NSAG information and one or more S-NSSAI(s) triggering the access attempt (TS 23.501 [32] and TS 24.501 [23]):
 - 2> apply the NSAG with highest NSAG priority among the NSAGs that are included in *SIB1* (i.e., in *FeatureCombination* and/or in *RA-PrioritizationSliceInfo*), and that are associated with the S-NSSAI(s) triggering the access attempt, in the Random Access procedure (TS 38.321 [3], clause 5.1);

NOTE: If there are multiple NSAGs with the same highest NAS-provided NSAG priority identified for access attempt as above, it is left to UE implementation to select the NSAG to be applied in the Random Access procedure.

- 1> if the UE is acting as L2 U2N Remote UE:
 - 2> establish a SRAP entity as specified in TS 38.351 [66], if no SRAP entity has been established;
 - 2> apply the specified configuration of SL-RLC0 as specified in 9.1.1.4;
 - 2> apply the SDAP configuration and PDCP configuration as specified in 9.1.1.2 for SRB0;
- 1> else:
 - 2> apply the default L1 parameter values as specified in corresponding physical layer specifications except for the parameters for which values are provided in *SIB1*;
 - 2> apply the default MAC Cell Group configuration as specified in 9.2.2;
 - 2> apply the CCCH configuration as specified in 9.1.1.2;
 - 2> apply the *timeAlignmentTimerCommon* included in *SIB1*;
- 1> start timer T300;
- 1> initiate transmission of the *RRCSetupRequest* message in accordance with 5.3.3.3;

5.3.3.3 Actions related to transmission of *RRCSetupRequest* message

The UE shall set the contents of *RRCSetupRequest* message as follows:

- 1> set the *ue-Identity* as follows:
 - 2> if upper layers provide a 5G-S-TMSI:
 - 3> set the *ue-Identity* to *ng-5G-S-TMSI-Part1*;
 - 2> else:

3> draw a 39-bit random value in the range $0..2^{39}-1$ and set the *ue-Identity* to this value;

NOTE 1: Upper layers provide the *5G-S-TMSI* if the UE is registered in the TA of the current cell.

1> if the establishment of the RRC connection is the result of release with redirect with *mpsPriorityIndication* (either in NR or E-UTRAN):

2> set the *establishmentCause* to *mps-PriorityAccess*;

1> else:

2> set the *establishmentCause* in accordance with the information received from upper layers;

NOTE 2: In case the L2 U2N Relay UE initiates RRC connection establishment triggered either by reception of message from a L2 U2N Remote UE via SL-RLC0 or SL-RLC1, or by reception of message *RemoteUEInformationSidelink* containing the *connectionForMP*, as specified in 5.3.3.1a, the L2 U2N Relay UE sets the *establishmentCause* by implementation, but: (1) for SL-RLC0, it can only set the *emergency*, *mps-PriorityAccess*, or *mcs-PriorityAccess* as *establishmentCause* if the same cause value is in the message received from the L2 U2N Remote UE via SL-RLC0; and (2) for SL-RLC1, it sets the *establishmentCause* to *emergency* if the message received from the L2 U2N Remote UE via SL-RLC1 is over PC5 link established for emergency service as indicated by upper layer [72].

1> if *ta-Report* or *ta-ReportATG* is configured with value *enabled* and the UE supports TA reporting:

2> indicate TA report initiation to lower layers;

The UE shall submit the *RRCSetupRequest* message to lower layers for transmission.

If the UE is an (e)RedCap UE and the RedCap-specific initial downlink BWP is not associated with CD-SSB, the UE may continue cell re-selection related measurements as well as cell re-selection evaluation, otherwise the UE shall continue cell re-selection related measurements as well as cell re-selection evaluation. If the conditions for cell re-selection are fulfilled, the UE shall perform cell re-selection as specified in 5.3.3.6.

NOTE 3: For L2 U2N Remote UE in RRC_IDLE, the cell (re)selection procedure as specified in TS 38.304 [20] and relay (re)selection procedure as specified in 5.8.15.3 are performed independently and up to UE implementation to select either a cell or a L2 U2N Relay UE.

5.3.3.4 Reception of the *RRCSetup* by the UE

The UE shall perform the following actions upon reception of the *RRCSetup*:

1> if the *RRCSetup* is received in response to an *RRCReestablishmentRequest*; or

1> if the *RRCSetup* is received in response to an *RRCResumeRequest* or *RRCResumeRequest1*:

2> if the UE is NCR-MT:

3> indicate to NCR-Fwd to cease forwarding;

2> if *sdt-MAC-PHY-CG-Config* is configured:

3> instruct the MAC entity to stop the *cg-SDT-TimeAlignmentTimer*, if it is running;

3> instruct the MAC entity to start the *timeAlignmentTimer* associated with the PTAG indicated by *tag-Id*, if it is not running;

2> if *srs-PosRRC-Inactive* is configured:

3> instruct the MAC entity to stop the *inactivePosSRS-TimeAlignmentTimer*, if it is running;

2> if *srs-PosRRC-InactiveValidityAreaPreConfigList* or *srs-PosRRC-InactiveValidityAreaNonPreConfig* is configured:

3> instruct the MAC entity to stop the *inactivePosSRS-ValidityAreaTAT*, if it is running;

2> if the UE is configured to receive MBS multicast in RRC_INACTIVE:

- 3> reset MAC;
- 2> discard any stored UE Inactive AS context and *suspendConfig*;
- 2> discard any current AS security context including the $K_{RRCCenc}$ key, the K_{RRCint} key, the K_{UPint} key and the K_{UPenc} key;
- 2> release radio resources for all established RBs except SRB0 and broadcast MRBs, including release of the RLC entities, of the associated PDCP entities and of SDAP;
- 2> release the RRC configuration except for the default L1 parameter values, default MAC Cell Group configuration, CCCH configuration and broadcast MRBs;
- 2> indicate to upper layers fallback of the RRC connection;
- 2> for each application layer measurement configuration with *appLayerIdleInactiveConfig* absent:
 - 3> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 3> release the application layer measurement configuration;
 - 3> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 3> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
- 2> stop timer T380, if running;
- 1> perform the cell group configuration procedure in accordance with the received *masterCellGroup* and as specified in 5.3.5.5;
- 1> perform the radio bearer configuration procedure in accordance with the received *radioBearerConfig* and as specified in 5.3.5.6;
- 1> if stored, discard the cell reselection priority information provided by the *cellReselectionPriorities* or inherited from another RAT;
- 1> stop timer T300, T301, T319;
- 1> if T319a is running:
 - 2> stop T319a;
 - 2> consider SDT procedure is not ongoing;
- 1> if T390 is running:
 - 2> stop timer T390 for all access categories;
 - 2> perform the actions as specified in 5.3.14.4;
- 1> if T302 is running:
 - 2> stop timer T302;
 - 2> perform the actions as specified in 5.3.14.4;
- 1> stop timer T320, if running;
- 1> if the *RRCSetup* is received in response to an *RRCResumeRequest*, *RRCResumeRequest1* or *RRCSetupRequest*:
 - 2> if T331 is running:
 - 3> stop timer T331;
 - 3> perform the actions as specified in 5.7.8.3;

- 2> enter RRC_CONNECTED;
- 2> stop the cell re-selection procedure;
- 2> stop relay (re)selection procedure if any for L2 U2N Remote UE;
- 1> consider the current cell to be the PCell;
- 1> perform the L2 U2N Remote UE configuration procedure in accordance with the received *sl-L2RemoteUE-Config* as specified in 5.3.5.16;
- 1> perform the sidelink dedicated configuration procedure in accordance with the received *sl-ConfigDedicatedNR* as specified in 5.3.5.14;
- 1> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report*; or
- 1> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in *VarRLF-Report*:
 - 2> if *reconnectCellId* in *VarRLF-Report* is not set after failing to perform reestablishment and if this is the first *RRCSetup* received by the UE after declaring the failure:
 - 3> if the UE supports RLF-Report for conditional handover and if *choCellId* in *VarRLF-Report* is set:
 - 4> set *timeUntilReconnection* in *VarRLF-Report* to the time that elapsed since the radio link failure or handover failure experienced in the *failedPCellId* stored in *VarRLF-Report*;
 - 3> else:
 - 4> set *timeUntilReconnection* in *VarRLF-Report* to the time that elapsed since the last radio link failure or handover failure;
 - 3> set *nrReconnectCellId* in *reconnectCellId* in *VarRLF-Report* to the global cell identity and the tracking area code of the PCell;
 - 1> if the UE supports RLF report for inter-RAT MRO NR as defined in TS 36.306 [62], and if the UE has radio link failure or handover failure information available in *VarRLF-Report* of TS 36.331 [10] and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report* of TS 36.331 [10]:
 - 2> if *reconnectCellId* in *VarRLF-Report* of TS 36.331[10] is not set after failing to perform reestablishment and if this is the first *RRCSetup* received by the UE after declaring the failure:
 - 3> set *timeUntilReconnection* in *VarRLF-Report* of TS 36.331[10] to the time that elapsed since the last radio link failure or handover failure in LTE;
 - 3> set *nrReconnectCellId* in *reconnectCellId* in *VarRLF-Report* of TS 36.331[10] to the global cell identity and the tracking area code of the PCell;
 - 1> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 2> if the RPLMN is not included in *plmn-IdentityList* in *VarAppLayerPLMN-ListConfig*:
 - 3> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 3> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*;
 - 3> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 3> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
 - 1> set the content of *RRCSetupComplete* message as follows:

- 2> if upper layers provide a 5G-S-TMSI:
 - 3> if the *RRCSetup* is received in response to an *RRCSetupRequest*:
 - 4> set the *ng-5G-S-TMSI-Value* to *ng-5G-S-TMSI-Part2*;
 - 3> else:
 - 4> set the *ng-5G-S-TMSI-Value* to *ng-5G-S-TMSI*;
- 2> if upper layers selected an SNPN or a PLMN and in case of PLMN UE is either allowed or instructed to access the PLMN via a cell for which at least one CAG ID is broadcast:
 - 3> set the *selectedPLMN-Identity* from the *npn-IdentityInfoList*;
- 2> else:
 - 3> set the *selectedPLMN-Identity* to the PLMN selected by upper layers from the *plmn-IdentityInfoList*;
- 2> if upper layers provide the 'Registered AMF':
 - 3> include and set the *registeredAMF* as follows:
 - 4> if the PLMN identity of the 'Registered AMF' is different from the PLMN selected by the upper layers:
 - 5> include the *plmnIdentity* in the *registeredAMF* and set it to the value of the PLMN identity in the 'Registered AMF' received from upper layers;
 - 4> set the *amf-Identifier* to the value received from upper layers;
 - 3> include and set the *guami-Type* to the value provided by the upper layers;
- 2> if upper layers provide one or more S-NSSAI (see TS 23.003 [21]):
 - 3> include the *s-NSSAI-List* and set the content to the values provided by the upper layers;
- 2> if upper layers provide onboarding request indication:
 - 3> include the *onboardingRequest*;
- 2> set the *dedicatedNAS-Message* to include the information received from upper layers;
- 2> if connecting as an IAB-node but not as a mobile IAB-node:
 - 3> include the *iab-NodeIndication*;
- 2> else if connecting as a mobile IAB-node:
 - 3> include the *mobileIAB-NodeIndication*;
- 2> if connecting as an NCR-node:
 - 3> include the *ncr-NodeIndication*;
- 2> if the SIB1 contains *idleModeMeasurementsNR* and the UE has NR idle/inactive measurement information concerning cells other than the PCell available in *VarMeasIdleReport*; or
- 2> if the SIB1 contains *idleModeMeasurementsEUTRA* and the UE has E-UTRA idle/inactive measurement information available in *VarMeasIdleReport*:
 - 3> include the *idleMeasAvailable*;
- 2> if the SIB1 contains *reselectionMeasurementsNR*:
 - 3> if *measReselectionCarrierListNR* is present in *VarMeasReselectionConfig* and the UE has NR reselection measurements available for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig*; or

- 3> if *measReselectionCarrierListNR* is not present in *VarMeasReselectionConfig* and if the UE has NR reselection measurements available:
 - 4> include the *reselectionMeasAvailable*;
- 2> if the UE has logged measurements available for NR and if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*; or
- 2> if the UE has logged measurements available for NR and if the current registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*:
 - 3> include the *logMeasAvailable* in the *RRCSetupComplete* message;
 - 3> if Bluetooth measurement results are included in the logged measurements the UE has available for NR:
 - 4> include the *logMeasAvailableBT* in the *RRCSetupComplete* message;
 - 3> if WLAN measurement results are included in the logged measurements the UE has available for NR:
 - 4> include the *logMeasAvailableWLAN* in the *RRCSetupComplete* message;
- 2> if the *sigLoggedMeasType* in *VarLogMeasReport* is included; or
- 2> if the UE supports the override protection of the signalling based logged MDT for inter-RAT (i.e. LTE to NR), and if the *sigLoggedMeasType* in *VarLogMeasReport* of TS 36.331 [10] is included:
 - 3> if T330 timer is running (associated to the logged measurement configuration for NR or for LTE):
 - 4> set *sigLogMeasConfigAvailable* to *true* in the *RRCSetupComplete* message;
 - 3> else:
 - 4> if the UE has logged measurements in *VarLogMeasReport* or in *VarLogMeasReport* of TS 36.331 [10]:
 - 5> set *sigLogMeasConfigAvailable* to *false* in the *RRCSetupComplete* message;
- 2> if the UE has connection establishment failure or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the RPLMN is equal to *plmn-Identity* stored in *VarConnEstFailReport* or in at least one of the entries of *VarConnEstFailReportList*; or
- 2> if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the current registered SNPN identity is equal to *snpn-Identity* stored in *VarConnEstFailReport* or any entry of *VarConnEstFailReportList*:
 - 3> include *connEstFailInfoAvailable* in the *RRCSetupComplete* message;
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report*, or
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* of TS 36.331 [10], and if the UE is capable of cross-RAT RLF reporting and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report* of TS 36.331 [10]; or
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarRLF-Report*:
 - 3> include *rlf-InfoAvailable* in the *RRCSetupComplete* message;
- 2> if the UE has successful handover information available in *VarSuccessHO-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessHO-Report*; or
- 2> if the UE has successful handover information available in *VarSuccessHO-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessHO-Report*:
 - 3> include *successHO-InfoAvailable* in the *RRCSetupComplete* message;

- 2> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessPSCell-Report*; or
 - 2> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessPSCell-Report*:
 - 3> include *successPSCell-InfoAvailable* in the *RRCSetupComplete* message;
 - 2> if the UE supports storage of mobility history information and the UE has mobility history information available in *VarMobilityHistoryReport*:
 - 3> include the *mobilityHistoryAvail* in the *RRCSetupComplete* message;
 - 2> if the UE has at least one stored application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 3> include *measConfigReportAppLayerAvailable* in the *RRCSetupComplete* message;
 - 2> if the UE supports uplink RRC message segmentation of *UECapabilityInformation* according to the network indication *rrc-SegAllowed*:
 - 3> may include the *ul-RRC-Segmentation* in the *RRCSetupComplete* message;
 - 2> if the UE supports uplink RRC message segmentation of *UECapabilityInformation* according to the network indication *rrc-MaxCapaSegAllowed*:
 - 3> include the *ul-RRC-MaxCapaSegments* in the *RRCSetupComplete* message;
 - 2> if the *RRCSetup* is received in response to an *RRCResumeRequest*, *RRCResumeRequest1* or *RRCSetupRequest*:
 - 3> if *speedStateReselectionPars* is configured in the *SIB2*:
 - 4> include the *mobilityState* in the *RRCSetupComplete* message and set it to the mobility state (as specified in TS 38.304 [20]) of the UE just prior to entering *RRC_CONNECTED* state;
 - 2> if *SIB1* contains *musim-CapRestrictionAllowed*:
 - 3> if supported, include the *musim-CapRestrictionInd* in the *RRCSetupComplete* message upon determining it has temporary capability restriction;
 - 2> if the UE has flight path information available:
 - 3> include *flightPathInfoAvailable*;
 - 1> submit the *RRCSetupComplete* message to lower layers for transmission, upon which the procedure ends.
- NOTE: Upon reception of *musim-CapRestrictionInd* in *RRCSetupComplete*, it is up to network implementation to configure the UE with a limited configuration that is used until network sends *RRCReconfiguration* based on the actual restricted UE capabilities included in *UEAssistanceInformation*.

5.3.3.5 Reception of the *RRCReject* by the UE

The UE shall:

- 1> perform the actions as specified in 5.3.15;

5.3.3.6 Cell re-selection or cell selection or relay (re)selection while T390, T300 or T302 is running (UE in *RRC_IDLE*)

The UE shall:

- 1> if cell reselection occurs while T300 or T302 is running; or
- 1> if relay (re)selection or cell selection by a L2 U2N Remote UE occurs while T300 is running; or

- 1> if cell changes due to relay (re)selection or cell selection by a L2 U2N Remote UE while T302 is running:
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'RRC connection failure';
- 1> else:
 - 2> if cell selection or reselection occurs while T390 is running; or
 - 2> cell change due to relay selection or reselection occurs while T390 is running:
 - 3> stop T390 for all access categories;
 - 3> perform the actions as specified in 5.3.14.4.

5.3.3.7 T300 expiry

The UE shall:

- 1> if timer T300 expires:
 - 2> reset MAC, release the MAC configuration and re-establish RLC for all RBs that are established (except broadcast MRBs);
 - 2> if the UE supports RRC Connection Establishment failure with temporary offset and the T300 has expired a consecutive *connEstFailCount* times on the same cell for which *connEstFailureControl* is included in *SIB1*:
 - 3> for a period as indicated by *connEstFailOffsetValidity*:
 - 4> use *connEstFailOffset* for the parameter *Qoffsettemp* for the concerned cell when performing cell selection and reselection according to TS 38.304 [20] and TS 36.304 [27];

NOTE 1: When performing cell selection, if no suitable or acceptable cell can be found, it is up to UE implementation whether to stop using *connEstFailOffset* for the parameter *Qoffsettemp* during *connEstFailOffsetValidity* for the concerned cell.

- 2> if the UE supports multiple CEF report:
 - 3> if the UE is not in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the RPLMN is equal to *plmn-identity* in *networkIdentity* stored in *VarConnEstFailReport*; or
 - 3> if the UE is in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the registered SNPN identity is equal to *snpn-Identity* in *networkIdentity* stored in *VarConnEstFailReport*:
 - 4> if the cell identity of current cell is not equal to the cell identity stored in *measResultFailedCell* in *VarConnEstFailReport* and if the *maxCEFReport-r17* has not been reached:
 - 5> append the *VarConnEstFailReport* as a new entry in the *VarConnEstFailReportList*;
 - 2> if the UE is not in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the RPLMN is not equal to *plmn-identity* in *networkIdentity* stored in *VarConnEstFailReport*; or
 - 2> if the UE is in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the registered SNPN identity is not equal to *snpn-Identity* in *networkIdentity* stored in *VarConnEstFailReport*; or
 - 2> if the cell identity of current cell is not equal to the cell identity stored in *measResultFailedCell* in *VarConnEstFailReport*:
 - 3> reset the *numberOfConnFail* to 0;

- 2> if the UE supports multiple CEF report and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReportList* and if the RPLMN is not equal to *plmn-identity* in *networkIdentity* stored in any entry of *VarConnEstFailReportList*; or
- 2> if the UE supports multiple CEF report and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReportList* and if the registered SNPN identity is not equal to *snpn-Identity* in *networkIdentity* stored in any entry of *VarConnEstFailReportList*:
 - 3> clear the content included in *VarConnEstFailReportList*;
- 2> clear the content included in *VarConnEstFailReport* except for the *numberOfConnFail*, if any;
- 2> store the following connection establishment failure information in the *VarConnEstFailReport* by setting its fields as follows:
 - 3> if the UE is not in SNPN access mode:
 - 4> set the *plmn-Identity* in *networkIdentity* to the PLMN selected by upper layers (see TS 24.501 [23]) from the PLMN(s) included in the *plmn-IdentityInfoList* in *SIB1*;
 - 3> else if the UE is in SNPN access mode:
 - 4> set the *snpn-Identity* in *networkIdentity* to include the SNPN identity selected by upper layers (see TS 24.501 [23]) from the list of SNPN(s) included in the *snpn-IdentityInfoList* in *SIB1*;
 - 3> set the *measResultFailedCell* to include the global cell identity, tracking area code, the cell level and SS/PBCH block level RSRP, and RSRQ, and SS/PBCH block indexes, of the failed cell based on the available SSB measurements collected up to the moment the UE detected connection establishment failure;
 - 3> if available, set the *measResultNeighCells*, in order of decreasing ranking-criterion as used for cell reselection, to include neighbouring cell measurements for at most the following number of neighbouring cells: 6 intra-frequency and 3 inter-frequency neighbours per frequency as well as 3 inter-RAT neighbours, per frequency/ set of frequencies per RAT and according to the following:
 - 4> for each neighbour cell included, include the optional fields that are available;

NOTE 2: The UE includes the latest results of the available measurements as used for cell reselection evaluation, which are performed in accordance with the performance requirements as specified in TS 38.133 [14].

- 3> if available, set the *locationInfo* as follows:
 - 4> if available, set the *commonLocationInfo* to include the detailed location information;
 - 4> if available, set the *bt-LocationInfo* to include the Bluetooth measurement results, in order of decreasing RSSI for Bluetooth beacons;
 - 4> if available, set the *wlan-LocationInfo* to include the WLAN measurement results, in order of decreasing RSSI for WLAN APs;
 - 4> if available, set the *sensor-LocationInfo* to include the sensor measurement results as follows:
 - 5> if available, include the *sensor-MeasurementInformation*;
 - 5> if available, include the *sensor-MotionInformation*;

NOTE 3: Which location information related configuration is used by the UE to make the *locationInfo* available for inclusion in the *VarConnEstFailReport* is left to UE implementation.

- 3> set *perRAInfoList* to indicate the performed random access procedure related information as specified in 5.7.10.5;
- 3> if the *numberOfConnFail* is smaller than 8:
 - 4> increment the *numberOfConnFail* by 1;

2> inform upper layers about the failure to establish the RRC connection, upon which the procedure ends;

The UE may discard the connection establishment failure or connection resume failure information, i.e. release the UE variable *VarConnEstFailReport* and the UE variable *VarConnEstFailReportList*, 48 hours after the last connection establishment failure is detected.

The L2 U2N Relay UE either indicates to upper layers (to trigger PC5 unicast link release) or sends *NotificationMessageSidelink* message to the connected L2 U2N Remote UE(s) in accordance with 5.8.9.10.

5.3.3.8 Abortion of RRC connection establishment

If upper layers abort the RRC connection establishment procedure, due to a NAS procedure being aborted as specified in TS 24.501 [23], while the UE has not yet entered RRC_CONNECTED, the UE shall:

- 1> stop timer T300, if running;
- 1> reset MAC, release the MAC configuration and re-establish RLC for all RBs that are established (except broadcast MRBs).

The L2 U2N Relay UE either indicates to upper layers (to trigger PC5 unicast link release) or sends *NotificationMessageSidelink* message to the connected L2 U2N Remote UE(s) in accordance with 5.8.9.10.

The L2 U2N Remote UE indicates to upper layers to trigger PC5 unicast link release with its connected L2 U2N Relay UE.

5.3.4 Initial AS security activation

5.3.4.1 General

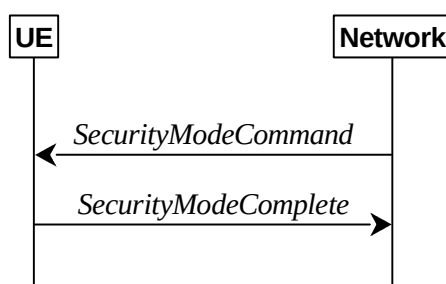 


Figure 5.3.4.1-1: Security mode command, successful

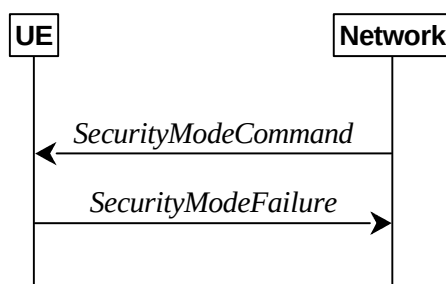 


Figure 5.3.4.1-2: Security mode command, failure

The purpose of this procedure is to activate AS security upon RRC connection establishment.

5.3.4.2 Initiation

The network initiates the security mode command procedure to a UE in RRC_CONNECTED. Moreover, the network applies the procedure as follows:

- when only SRB1 is established, i.e. prior to establishment of SRB2, multicast MRBs and/ or DRBs.

5.3.4.3 Reception of the *SecurityModeCommand* by the UE

The UE shall:

- 1> derive the K_{gNB} key, as specified in TS 33.501 [11];
- 1> derive the K_{RRCint} key associated with the *integrityProtAlgorithm* indicated in the *SecurityModeCommand* message, as specified in TS 33.501 [11];
- 1> request lower layers to verify the integrity protection of the *SecurityModeCommand* message, using the algorithm indicated by the *integrityProtAlgorithm* as included in the *SecurityModeCommand* message and the K_{RRCint} key;
- 1> if the *SecurityModeCommand* message passes the integrity protection check:
 - 2> derive the K_{RRCenc} key and the K_{UPenc} key associated with the *cipheringAlgorithm* indicated in the *SecurityModeCommand* message, as specified in TS 33.501 [11];
 - 2> derive the K_{UPint} key associated with the *integrityProtAlgorithm* indicated in the *SecurityModeCommand* message, as specified in TS 33.501 [11];
 - 2> configure lower layers to apply SRB integrity protection using the indicated algorithm and the K_{RRCint} key immediately, i.e. integrity protection shall be applied to all subsequent messages received and sent by the UE, including the *SecurityModeComplete* message;
 - 2> configure lower layers to apply SRB ciphering using the indicated algorithm, the K_{RRCenc} key after completing the procedure, i.e. ciphering shall be applied to all subsequent messages received and sent by the UE, except for the *SecurityModeComplete* message which is sent unciphered;
 - 2> consider AS security to be activated;
 - 2> submit the *SecurityModeComplete* message to lower layers for transmission, upon which the procedure ends;
- 1> else:
 - 2> continue using the configuration used prior to the reception of the *SecurityModeCommand* message, i.e. neither apply integrity protection nor ciphering.
 - 2> submit the *SecurityModeFailure* message to lower layers for transmission, upon which the procedure ends.

5.3.5 RRC reconfiguration

5.3.5.1 General

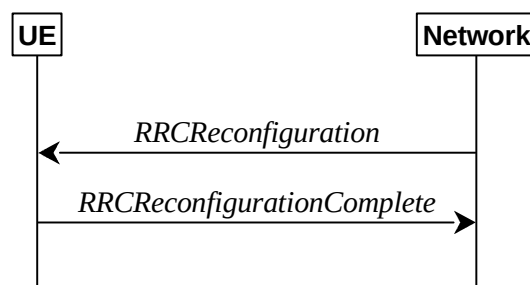 


Figure 5.3.5.1-1: RRC reconfiguration, successful

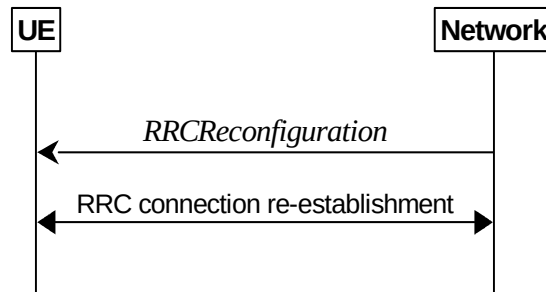 


Figure 5.3.5.1-2: RRC reconfiguration, failure

The purpose of this procedure is to modify an RRC connection, e.g. to establish/modify/release RBs/BH RLC channels/Uu Relay RLC channels/PC5 Relay RLC channels, to perform reconfiguration with sync, to setup/modify/release measurements, to add/modify/release SCells and cell groups, to add/modify/release conditional reconfiguration configuration, to add/modify/release LTM configuration, and to add/modify/release MP configuration. As part of the procedure, NAS dedicated information may be transferred from the Network to the UE.

RRC reconfiguration to perform reconfiguration with sync includes, but is not limited to, the following cases:

- reconfiguration with sync and security key refresh, involving RA to the PCell/PSCell, MAC reset, refresh of security and re-establishment of RLC and PDCP triggered by explicit indicators;
- reconfiguration with sync but without security key refresh, involving RA to the PCell/PSCell, MAC reset and RLC re-establishment and PDCP data recovery (for AM DRB or AM MRB) triggered by explicit indicators;
- reconfiguration with sync for DAPS and security key refresh, involving RA to the target PCell, establishment of target MAC, and
 - for non-DAPS bearer: refresh of security and re-establishment of RLC and PDCP triggered by explicit indicators;
 - for DAPS bearer: establishment of RLC for the target PCell, refresh of security and reconfiguration of PDCP to add the ciphering function, the integrity protection function and ROHC function of the target PCell;
 - for SRB: refresh of security and establishment of RLC and PDCP for the target PCell;
- reconfiguration with sync for DAPS but without security key refresh, involving RA to the target PCell, establishment of target MAC, and
 - for non-DAPS bearer: RLC re-establishment and PDCP data recovery (for AM DRB or AM MRB) triggered by explicit indicators.
 - for DAPS bearer: establishment of RLC for target PCell, reconfiguration of PDCP to add the ciphering function, the integrity protection function and ROHC function of the target PCell;
 - for SRB: establishment of RLC and PDCP for the target PCell.
- reconfiguration with sync for direct-to-indirect path switch or indirect-to-indirect path switch, not involving RA at target side, involving re-establishment of PDCP /PDCP data recovery (for AM DRB) triggered by explicit indicators;
- reconfiguration with sync for LTM cell switch (without security key refresh), and
 - involving or not involving RA to the target LTM candidate SpCell according to a network indication;
 - MAC reset;
 - depending on a network indication, involving or not involving re-establishment of RLC and PDCP data recovery (for AM DRB).

In (NG)EN-DC and NR-DC, SRB3 can be used for measurement configuration and reporting, for UE assistance (re-)configuration and reporting for power savings, for IP address (re-)configuration and reporting for IAB-nodes, to (re-)configure MAC, RLC, BAP, physical layer and RLF timers and constants of the SCG configuration, to reconfigure PDCP for DRBs associated with the S-K_{gNB} or SRB3, to reconfigure SDAP for DRBs associated with S-K_{gNB} in

NGEN-DC and NR-DC, to add/modify/release conditional PSCell change configuration or subsequent CPAC configuration, and to add/modify/release the LTM configuration associated with the SCG (only in NR-DC), provided that the (re-)configuration does not require any MN involvement, and to transmit RRC messages between the MN and the UE during fast MCG link recovery. In (NG)EN-DC and NR-DC, only *measConfig*, *radioBearerConfig*, *conditionalReconfiguration*, *ltm-Config* (only in NR-DC), *bap-Config*, *iab-IP-AddressConfigurationList*, *otherConfig*, *appLayerMeasConfig* and/or *secondaryCellGroup* are included in *RRCReconfiguration* received via SRB3, except when *RRCReconfiguration* is received within *DLInformationTransferMRDC*.

When a clause of 5.3.5 is executed due to an LTM cell switch execution (i.e., as specified in 5.3.5.18.6) or due to a conditional reconfiguration execution for subsequent CPAC (i.e., as specified in 5.3.5.13.8), every appearance of "the received" before *RRCReconfiguration* message, before a field name, or before an IE name, refers to the *RRCReconfiguration* message that the UE applies, as specified in 5.3.5.18.6, 5.3.5.13.8, or the field or IE in that *RRCReconfiguration* message.

5.3.5.2 Initiation

The Network may initiate the RRC reconfiguration procedure to a UE in RRC_CONNECTED. The Network applies the procedure as follows:

- the establishment of RBs (other than SRB1, that is established during RRC connection establishment) is performed only when AS security has been activated;
- the establishment of BH RLC Channels for IAB is performed only when AS security has been activated;
- the configuration of NCR-Fwd is performed only when AS security has been activated;
- the establishment of Uu Relay RLC channels and PC5 Relay RLC channels (other than SL-RLC0 and SL-RLC1) for L2 U2N Relay UE is performed only when AS security has been activated, and the establishment of PC5 Relay RLC channels for L2 U2N Remote UE (other than SL-RLC0 and SL-RLC1) is performed only when AS security has been activated;
- the establishment of PC5 Relay RLC channels for L2 U2U Relay UE and L2 U2U Remote UE is performed only when AS security has been activated;
- the addition of Secondary Cell Group and SCells is performed only when AS security has been activated;
- the *reconfigurationWithSync* is included in *secondaryCellGroup* only when at least one RLC bearer or BH RLC channel is setup in SCG;
- the *reconfigurationWithSync* is included in *masterCellGroup* only when AS security has been activated, and SRB2 with at least one DRB or multicast MRB or, for IAB and NCR, SRB2, have been setup and not suspended;
- the *conditionalReconfiguration* for CPC is included only when at least one RLC bearer is setup in SCG;
- the *conditionalReconfiguration* for CHO, CPA, or subsequent CPAC is included only when AS security has been activated, and SRB2 with at least one DRB or multicast MRB or, for IAB, SRB2, are setup and not suspended;
- the addition of indirect path for MP is performed only when AS security has been activated;
- the *ltm-Config* for LTM on the MCG is included only when AS security has been activated, and SRB2 with at least one DRB are setup and not suspended;
- the *ltm-Config* for LTM on the SCG is included only when at least one RLC bearer is setup in SCG.

5.3.5.3 Reception of an *RRCReconfiguration* by the UE

The UE shall perform the following actions upon reception of the *RRCReconfiguration*, upon execution of the conditional reconfiguration (CHO, CPA, CPC, or subsequent CPAC), or upon execution of an LTM cell switch:

- 1> if the *RRCReconfiguration* is applied due to a conditional reconfiguration execution upon cell selection performed while timer T311 was running, as defined in 5.3.7.3:

- 2> remove all the entries in the *condReconfigList* within the MCG and the SCG *VarConditionalReconfig* except for the entries in which *subsequentCondReconfig* is present, if any;
- 1> if the *RRCReconfiguration* includes the *daps-SourceRelease*:
 - 2> reset the source MAC and release the source MAC configuration;
 - 2> for each DAPS bearer:
 - 3> release the RLC entity or entities as specified in TS 38.322 [4], clause 5.1.3, and the associated logical channel for the source SpCell;
 - 3> reconfigure the PDCP entity to release DAPS as specified in TS 38.323 [5];
 - 2> for each SRB:
 - 3> release the PDCP entity for the source SpCell;
 - 3> release the RLC entity as specified in TS 38.322 [4], clause 5.1.3, and the associated logical channel for the source SpCell;
 - 2> release the physical channel configuration for the source SpCell;
 - 2> discard the keys used in the source SpCell (the K_{gNB} key, the K_{RRCenc} key, the K_{RRCint} key, the K_{UPint} key and the K_{UPenc} key), if any;
- 1> if the *RRCReconfiguration* is received while the timer T348 is running:
 - 2> if the configuration does not exceed UE temporary capability restriction indicated via *musim-CapRestriction* included in the last transmission of *UEAssistanceInformation*:
 - 3> stop the timer T348;
- 1> if the *RRCReconfiguration* is received via other RAT (i.e., inter-RAT handover to NR):
 - 2> if the *RRCReconfiguration* does not include the *fullConfig* and the UE is connected to 5GC (i.e., delta signalling during intra 5GC handover):
 - 3> re-use the source RAT SDAP and PDCP configurations if available (i.e., current SDAP/PDCP configurations for all RBs from source E-UTRA RAT prior to the reception of the inter-RAT HO *RRCReconfiguration* message);
- 1> else:
 - 2> if the *RRCReconfiguration* includes the *fullConfig*:
 - 3> perform the full configuration procedure as specified in 5.3.5.11;
- 1> if the *RRCReconfiguration* includes the *masterCellGroup*:
 - 2> perform the cell group configuration for the received *masterCellGroup* according to 5.3.5.5;
- 1> if the *RRCReconfiguration* includes the *masterKeyUpdate*:
 - 2> perform AS security key update procedure as specified in 5.3.5.7;
- 1> if the *RRCReconfiguration* includes the *sk-Counter*:
 - 2> perform security key update procedure as specified in 5.3.5.7;
- 1> if the *RRCReconfiguration* includes the *secondaryCellGroup*:
 - 2> perform the cell group configuration for the SCG according to 5.3.5.5;
- 1> if the *RRCReconfiguration* includes the *mrhc-SecondaryCellGroupConfig*:
 - 2> if the *mrhc-SecondaryCellGroupConfig* is set to *setup*:

3> if the *mrdc-SecondaryCellGroupConfig* includes *mrdc-ReleaseAndAdd*:

4> perform MR-DC release as specified in clause 5.3.5.10;

3> if the received *mrdc-SecondaryCellGroup* is set to *nr-SCG*:

4> perform the RRC reconfiguration according to 5.3.5.3 for the *RRCReconfiguration* message included in *nr-SCG*;

3> if the received *mrdc-SecondaryCellGroup* is set to *eutra-SCG*:

4> perform the RRC connection reconfiguration as specified in TS 36.331 [10], clause 5.3.5.3 for the *RRCConnectionReconfiguration* message included in *eutra-SCG*;

2> else (*mrdc-SecondaryCellGroupConfig* is set to *release*):

3> perform MR-DC release as specified in clause 5.3.5.10;

NOTE 00: If the UE receives, within an LTM candidate configuration, an *mrdc-SecondaryCellGroupConfig* set to *release* even if no SCG is currently configured at the UE, the UE does not consider this as an invalid configuration.

1> if the *RRCReconfiguration* message includes the *radioBearerConfig*:

2> perform the radio bearer configuration according to 5.3.5.6;

1> if the *RRCReconfiguration* message includes the *radioBearerConfig2*:

2> perform the radio bearer configuration according to 5.3.5.6;

1> if the *RRCReconfiguration* message includes the *measConfig*:

2> perform the measurement configuration procedure as specified in 5.5.2;

1> if the *RRCReconfiguration* message includes the *dedicatedNAS-MessageList*:

2> forward each element of the *dedicatedNAS-MessageList* to upper layers in the same order as listed;

1> if the *RRCReconfiguration* message includes the *dedicatedSIB1-Delivery*:

2> perform the action upon reception of *SIB1* as specified in 5.2.2.4.2;

NOTE 0: If this *RRCReconfiguration* is associated to the MCG and includes *reconfigurationWithSync* in *spCellConfig* and *dedicatedSIB1-Delivery*, the UE initiates (if needed) the request to acquire required SIBs, according to clause 5.2.2.3.5, only after the random access procedure or the LTM cell switch execution towards the target SpCell is completed.

1> if the *RRCReconfiguration* message includes the *dedicatedSystemInformationDelivery*:

2> perform the action upon reception of System Information as specified in 5.2.2.4;

2> if all the SIB(s) and/or posSIB(s) requested in *DedicatedSIBRequest* message have been acquired:

3> stop timer T350, if running;

1> if the *RRCReconfiguration* message includes the *dedicatedPosSysInfoDelivery*:

2> perform the action upon reception of the contained posSIB(s), as specified in clause 5.2.2.4.16;

2> if all the SIB(s) and/or posSIB(s) requested in *DedicatedSIBRequest* message have been acquired:

3> stop timer T350, if running;

1> if the *RRCReconfiguration* message includes the *otherConfig*:

2> perform the other configuration procedure as specified in 5.3.5.9;

1> if the *RRCReconfiguration* message includes the *bap-Config*:

- 2> perform the BAP configuration procedure as specified in 5.3.5.12;
- 1> if the *RRCReconfiguration* message includes the *iab-IP-AddressConfigurationList*:
 - 2> if *iab-IP-AddressToReleaseList* is included:
 - 3> perform release of IP address as specified in 5.3.5.12a.1.1;
 - 2> if *iab-IP-AddressToAddModList* is included:
 - 3> perform IAB IP address addition/update as specified in 5.3.5.12a.1.2;
- 1> if the *RRCReconfiguration* message includes the *conditionalReconfiguration*:
 - 2> perform conditional reconfiguration as specified in 5.3.5.13;
- 1> if the *RRCReconfiguration* message includes the *needForGapsConfigNR*:
 - 2> if *needForGapsConfigNR* is set to *setup*:
 - 3> consider itself to be configured to provide the measurement gap requirement information of NR target bands;
 - 2> else:
 - 3> consider itself not to be configured to provide the measurement gap requirement information of NR target bands;
- 1> if the *RRCReconfiguration* message includes the *needForGapNCSG-ConfigNR*:
 - 2> if *needForGapNCSG-ConfigNR* is set to *setup*:
 - 3> consider itself to be configured to provide the measurement gap and NCSG requirement information of NR target bands;
 - 2> else:
 - 3> consider itself not to be configured to provide the measurement gap and NCSG requirement information of NR target bands;
- 1> if the *RRCReconfiguration* message includes the *needForGapNCSG-ConfigEUTRA*:
 - 2> if *needForGapNCSG-ConfigEUTRA* is set to *setup*:
 - 3> consider itself to be configured to provide the measurement gap and NCSG requirement information of E-UTRA target bands;
 - 2> else:
 - 3> consider itself not to be configured to provide the measurement gap and NCSG requirement information of E-UTRA target bands;
- 1> if the *RRCReconfiguration* message includes the *onDemandSIB-Request*:
 - 2> if *onDemandSIB-Request* is set to *setup*:
 - 3> consider itself to be configured to request SIB(s) or posSIB(s) in RRC_CONNECTED in accordance with clause 5.2.2.3.5;
 - 2> else:
 - 3> consider itself not to be configured to request SIB(s) or posSIB(s) in RRC_CONNECTED in accordance with clause 5.2.2.3.5;
 - 3> stop timer T350, if running;
- 1> if the *RRCReconfiguration* message includes the *sl-ConfigDedicatedNR*:

- 2> perform the sidelink dedicated configuration procedure as specified in 5.3.5.14;

NOTE 0a: If the *sl-ConfigDedicatedNR* was received embedded within an E-UTRA *RRCConnectionReconfiguration* message, the UE does not build an NR *RRCReconfigurationComplete* message for the received *sl-ConfigDedicatedNR*.

- 1> if the *RRCReconfiguration* message includes the *sl-L2RelayUE-Config*:

- 2> perform the L2 U2N or U2U Relay UE configuration procedure as specified in 5.3.5.15;

- 1> if the *RRCReconfiguration* message includes the *sl-L2RemoteUE-Config*:

- 2> perform the L2 U2N or U2U Remote UE configuration procedure as specified in 5.3.5.16;

- 1> if the *RRCReconfiguration* message includes the *dedicatedPagingDelivery*:

- 2> perform the *Paging* message reception procedure as specified in 5.3.2.3;

- 1> if the *RRCReconfiguration* message includes the *sl-ConfigDedicatedEUTRA-Info*:

- 2> perform related procedures for V2X sidelink communication in accordance with TS 36.331 [10], clause 5.3.10 and clause 5.5.2;

- 1> if the *RRCReconfiguration* message includes the *ul-GapFR2-Config*:

- 2> perform the FR2 UL gap configuration procedure as specified in 5.3.5.13c;

- 1> if the *RRCReconfiguration* message includes the *musim-GapConfig*:

- 2> perform the MUSIM gap configuration procedure as specified in 5.3.5.9a;

- 1> if the *RRCReconfiguration* message includes the *appLayerMeasConfig*:

- 2> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:

- 3> if the RPLMN is not included in *plmn-IdentityList* in *VarAppLayerPLMN-ListConfig*:

- 4> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 4> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*;
 - 4> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 4> consider itself not to be configured to send application layer measurement report for the *measConfigAppLayerId*;

- 2> if *idleInactiveReportAllowed* is included in the *RRCReconfiguration* message:

- 3> if the UE is configured with at least one application layer measurement configuration with *appLayerIdleInactiveConfig* configured:

- 4> initiate the procedure in 5.7.16.2 after the *RRCReconfigurationComplete* has been transmitted;

- 2> else:

- 3> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:

- 4> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 4> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*;
 - 4> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;

- 4> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
- 2> perform the application layer measurement configuration procedure as specified in 5.3.5.13d;
- 1> if the *RRCReconfiguration* message includes the *ue-TxTEG-RequestUL-TDOA-Config*:
 - 2> if *ue-TxTEG-RequestUL-TDOA-Config* is set to *setup*:
 - 3> perform the UE positioning assistance information procedure as specified in 5.7.14;
 - 2> else:
 - 3> release the configuration of UE positioning assistance information;
- 1> if the *RRCReconfiguration* message includes the *aerial-Config*:
 - 2> (re)configure the aerial parameters in accordance with the included *aerial-Config*;
- 1> if the *RRCReconfiguration* message includes the *sl-IndirectPathAddChange*:
 - 2> perform the SL indirect path specific configuration procedure as specified in 5.3.5.17.2.2;
- 1> if the *RRCReconfiguration* message includes the *n3c-IndirectPathAddChange*:
 - 2> perform configuration procedure for the remote UE part of N3C indirect path as specified in 5.3.5.17.3.2;
- 1> if the *RRCReconfiguration* message includes the *n3c-IndirectPathConfigRelay*:
 - 2> perform the configuration procedure for the relay UE part of N3C indirect path as specified in 5.3.5.17.3.3;
- 1> if the *RRCReconfiguration* message includes the *ltm-Config*:
 - 2> if the *ltm-Config* is set to *setup*:
 - 3> perform the LTM configuration procedure as specified in 5.3.5.18.1;
 - 2> else:
 - 3> perform the LTM configuration release procedure as specified in clause 5.3.5.18.7;
- 1> if the *RRCReconfiguration* message includes the *srs-PosResourceSetAggBW-CombinationList*:
 - 2> if *srs-PosResourceSetAggBW-CombinationList* is set to *setup*:
 - 3> perform the SRS for positioning transmission using bandwidth aggregation provided in configuration *SRS-PosResourceSetLinkedForAggBW* as specified in TS 38.211 [16];
 - 2> else:
 - 3> release all the configuration of *SRS-PosResourceSetLinkedForAggBW*;
- 1> set the content of the *RRCReconfigurationComplete* message as follows:
 - 2> if the *RRCReconfiguration* includes the *masterCellGroup* containing the *reportUplinkTxDirectCurrent*:
 - 3> include the *uplinkTxDirectCurrentList* for each MCG serving cell with UL;
 - 3> include *uplinkDirectCurrentBWP-SUL* for each MCG serving cell configured with SUL carrier, if any, within the *uplinkTxDirectCurrentList*;
 - 2> if the *RRCReconfiguration* includes the *masterCellGroup* containing the *reportUplinkTxDirectCurrentTwoCarrier*:
 - 3> include in the *uplinkTxDirectCurrentTwoCarrierList* the list of uplink Tx DC locations for the configured intra-band uplink carrier aggregation in the MCG;

- 2> if the *RRCReconfiguration* includes the *masterCellGroup* containing the *reportUplinkTxDirectCurrentMoreCarrier*:
 - 3> include in the *uplinkTxDirectCurrentMoreCarrierList* the list of uplink Tx DC locations for the configured intra-band uplink carrier aggregation in the MCG;
- 2> if the *RRCReconfiguration* includes the *secondaryCellGroup* containing the *reportUplinkTxDirectCurrent*:
 - 3> include the *uplinkTxDirectCurrentList* for each SCG serving cell with UL;
 - 3> include *uplinkDirectCurrentBWP-SUL* for each SCG serving cell configured with SUL carrier, if any, within the *uplinkTxDirectCurrentList*;
- 2> if the *RRCReconfiguration* includes the *secondaryCellGroup* containing the *reportUplinkTxDirectCurrentTwoCarrier*:
 - 3> include in the *uplinkTxDirectCurrentTwoCarrierList* the list of uplink Tx DC locations for the configured intra-band uplink carrier aggregation in the SCG;
- 2> if the *RRCReconfiguration* includes the *secondaryCellGroup* containing the *reportUplinkTxDirectCurrentMoreCarrier*:
 - 3> include in the *uplinkTxDirectCurrentMoreCarrierList* the list of uplink Tx DC locations for the configured intra-band uplink carrier aggregation in the SCG;

NOTE 0b: The UE does not expect that the *reportUplinkTxDirectCurrentTwoCarrier* or *reportUplinkTxDirectCurrentMoreCarrier* is received in both *masterCellGroup* and in *secondaryCellGroup*. Network only configures at most one of *reportUplinkTxDirectCurrent*, *reportUplinkTxDirectCurrentTwoCarrier* or *reportUplinkTxDirectCurrentMoreCarrier* in one RRC message.

- 2> if the *RRCReconfiguration* message includes the *mrdc-SecondaryCellGroupConfig* with *mrdc-SecondaryCellGroup* set to *eutra-SCG*:
 - 3> include in the *eutra-SCG-Response* the E-UTRA *RRCCConnectionReconfigurationComplete* message in accordance with TS 36.331 [10] clause 5.3.5.3;
- 2> if the *RRCReconfiguration* message includes the *mrdc-SecondaryCellGroupConfig* with *mrdc-SecondaryCellGroup* set to *nr-SCG*:
 - 3> include in the *nr-SCG-Response* the SCG *RRCCReconfigurationComplete* message;
 - 3> if the *RRCReconfiguration* message is applied due to conditional reconfiguration execution and the *RRCCReconfiguration* message does not include the *reconfigurationWithSync* in the *masterCellGroup*:
 - 4> include in the *selectedCondRRCCReconfig* the *condReconfigId* for the selected cell of conditional reconfiguration execution;
 - 4> if a new *sk-Counter* value has been selected due to the conditional reconfiguration execution for subsequent CPAC:
 - 5> include *selectedSK-Counter* and set its value to the selected *sk-Counter* value;
 - 3> if the *RRCReconfiguration* message is applied due to conditional reconfiguration execution and *condExecutionCondPSCell* is configured for the selected PSCell:
 - 4> include in the *selectedPSCellForCHO-WithSCG* and set it to the information of the selected PSCell;
- 2> if the *RRCReconfiguration* includes the *reconfigurationWithSync* in *spCellConfig* of an MCG:
 - 3> if the UE has logged measurements available for NR and if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*; or
 - 3> if the UE has logged measurements available for NR and if the current registered SNPN identity is included in *snpn-ConfigID-List* stored in the *VarLogMeasReport*:
 - 4> include the *logMeasAvailable* in the *RRCCReconfigurationComplete* message;

- 4> if Bluetooth measurement results are included in the logged measurements the UE has available for NR:
 - 5> include the *logMeasAvailableBT* in the *RRCReconfigurationComplete* message;
- 4> if WLAN measurement results are included in the logged measurements the UE has available for NR:
 - 5> include the *logMeasAvailableWLAN* in the *RRCReconfigurationComplete* message;
- 3> if the *sigLoggedMeasType* in *VarLogMeasReport* is included; or
- 3> if the UE supports the override protection of the signalling based logged MDT for inter-RAT (i.e. LTE to NR), and if the *sigLoggedMeasType* in *VarLogMeasReport* of TS 36.331 [10] is included:
 - 4> if T330 timer is running (associated to the logged measurement configuration for NR or for LTE):
 - 5> set *sigLogMeasConfigAvailable* to *true* in the *RRCReconfigurationComplete* message;
 - 4> else:
 - 5> if the UE has logged measurements in *VarLogMeasReport* or in *VarLogMeasReport* of TS 36.331 [10]:
 - 6> set *sigLogMeasConfigAvailable* to *false* in the *RRCReconfigurationComplete* message;
- 3> if the UE has connection establishment failure or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the RPLMN is equal to *plmn-Identity* stored in *VarConnEstFailReport* or in at least one of the entries of *VarConnEstFailReportList*; or
- 3> if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the registered SNPN identity is equal to *snpn-Identity* in *networkIdentity* stored in *VarConnEstFailReport* or any entry of *VarConnEstFailReportList*:
 - 4> include *connEstFailInfoAvailable* in the *RRCReconfigurationComplete* message;
- 3> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report*; or
- 3> if the UE has radio link failure or handover failure information available in *VarRLF-Report* of TS 36.331 [10] and if the UE is capable of cross-RAT RLF reporting and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report* of TS 36.331 [10]; or
- 3> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in *VarRLF-Report*:
 - 4> include *rlf-InfoAvailable* in the *RRCReconfigurationComplete* message;
- 3> if the UE was configured with *successHO-Config* when connected to the source PCell:
 - 4> if the applied *RRCReconfiguration* is not due to a conditional reconfiguration execution upon cell selection performed while timer T311 was running, as defined in 5.3.7.3; or
 - 4> if the applied *RRCReconfiguration* is not received when T316 was running:
 - 5> perform the actions for the successful handover report determination as specified in clause 5.7.10.6, upon successfully completing the Random Access procedure triggered for the *reconfigurationWithSync* in *spCellConfig* of the MCG;
 - 4> if applied *RRCReconfiguration* is received when T316 was running:
 - 5> release *successHO-Config* configured by the source PCell and *thresholdPercentageT304* if configured by the target PCell;
- 3> if the UE has successful handover information available in *VarSuccessHO-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessHO-Report*; or

- 3> if the UE has successful handover information available in *VarSuccessHO-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessHO-Report*:
 - 4> include *successHO-InfoAvailable* in the *RRCReconfigurationComplete* message;
- 3> release *successPSCell-Config* configured by the source PCell, if available;
- 3> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessPSCell-Report*; or
- 3> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessPSCell-Report*:
 - 4> include *successPSCell-InfoAvailable* in the *RRCReconfigurationComplete* message;
- 2> if the *RRCReconfiguration* message was received via SRB1, but not within *mrdc-SecondaryCellGroup* or E-UTRA *RRCCConnectionReconfiguration* or E-UTRA *RRCCConnectionResume*:
- 3> if the UE is configured to provide the measurement gap requirement information of NR target bands:
 - 4> if the *RRCReconfiguration* message includes the *needForGapsConfigNR*; or
 - 4> if the *NeedForGapsInfoNR* information is changed compared to last time the UE reported this information; or
 - 4> if the *RRCReconfiguration* message includes the *needForInterruptionConfigNR* and set it to *enabled*; or
 - 4> if the *needForInterruptionConfigNR* is enabled and the *NeedForInterruptionInfoNR* information is changed compared to last time the UE reported this information:
 - 5> include the *NeedForGapsInfoNR* and set the contents as follows:
 - 6> include *intraFreq-needForGap* and set the gap requirement information of intra-frequency measurement for each NR serving cell;
 - 6> if *requestedTargetBandFilterNR* is configured:
 - 7> for each supported NR band that is also included in *requestedTargetBandFilterNR*, include an entry in *interFreq-needForGap* and set the gap requirement information for that band;
 - 6> else:
 - 7> include an entry in *interFreq-needForGap* and set the corresponding gap requirement information for each supported NR band;
 - 5> if the *needForInterruptionConfigNR* is enabled:
 - 6> include the *needForInterruptionInfoNR* and set the contents as follows:
 - 7> include *intraFreq-needForInterruption* with the same number of entries, and listed in the same order, as in *intraFreq-needForGap*;
 - 7> for each entry in *intraFreq-needForInterruption*:
 - 8> include *interruptionIndication* and set the interruption requirement information if the corresponding entry in *intraFreq-needForGap* is set to *no-gap*;
 - 7> include *interFreq-needForInterruption* with the same number of entries, and listed in the same order, as in *interFreq-needForGap*;
 - 7> for each entry in *interFreq-needForInterruption*:
 - 8> include *interruptionIndication* and set the interruption requirement information if the corresponding entry in *interFreq-needForGap* is set to *no-gap*;

- 3> if the UE is configured to provide the measurement gap and NCSG requirement information of NR target bands:
 - 4> if the *RRCReconfiguration* message includes the *needForGapNCSG-ConfigNR*; or
 - 4> if the *needForGapNCSG-InfoNR* information is changed compared to last time the UE reported this information:
 - 5> include the *NeedForGapNCSG-InfoNR* and set the contents as follows:
 - 6> include *intraFreq-needForNCSG* and set the gap and NCSG requirement information of intra-frequency measurement for each NR serving cell;
 - 6> if *requestedTargetBandFilterNCSG-NR* is configured:
 - 7> for each supported NR band included in *requestedTargetBandFilterNCSG-NR*, include an entry in *interFreq-needForNCSG* and set the NCSG requirement information for that band;
 - 6> else:
 - 7> include an entry for each supported NR band in *interFreq-needForNCSG* and set the corresponding NCSG requirement information;
 - 3> if the UE is configured to provide the measurement gap and NCSG requirement information of E-UTRA target bands:
 - 4> if the *RRCReconfiguration* message includes the *needForGapNCSG-ConfigEUTRA*; or
 - 4> if the *needForGapNCSG-InfoEUTRA* information is changed compared to last time the UE reported this information:
 - 5> include the *NeedForGapNCSG-InfoEUTRA* and set the contents as follows:
 - 6> if *requestedTargetBandFilterNCSG-EUTRA* is configured, for each supported E-UTRA band included in *requestedTargetBandFilterNCSG-EUTRA*, include an entry in *needForNCSG-EUTRA* and set the NCSG requirement information for that band; otherwise, include an entry for each supported E-UTRA band in *needForNCSG-EUTRA* and set the corresponding NCSG requirement information;
 - 2> if the UE has (updated) flight path information available:
 - 3> if the UE had not provided a flight path information since last entering RRC_CONNECTED state; or
 - 3> if at least one waypoint or a timestamp corresponding to a waypoint location that was not previously provided since last entering RRC_CONNECTED state is available; or
 - 3> if at least one upcoming waypoint or a timestamp corresponding to a waypoint location that was previously provided since last entering RRC_CONNECTED state is to be removed; or
 - 3> if *flightPathUpdateDistanceThr* is configured and, for at least one waypoint, the 3D distance between the previously provided location and the new location is more than the distance threshold configured by *flightPathUpdateDistanceThr*; or
 - 3> if *flightPathUpdateTimeThr* is configured and, for at least one waypoint, the time difference between the previously provided timestamp and the new timestamp, if available, is more than the time threshold configured by *flightPathUpdateTimeThr*;
 - 4> include *flightPathInfoAvailable*;
- NOTE 0c: If neither *flightPathUpdateDistanceThr* nor *flightPathUpdateTimeThr* is configured, it is up to UE implementation whether to include *flightPathInfoAvailable* when updated flight path information is available.
- 2> if the UE has at least one stored application layer measurement configuration with *appLayerIdleInactiveConfig* configured which has not been successfully transmitted since entering RRC_CONNECTED state:

- 3> include *measConfigReportAppLayerAvailable*;
- 2> if this *RRCReconfiguration* message is applied due to an LTM cell switch execution procedure according to clause 5.3.5.18.6:
 - 3> include in the *appliedLTM-CandidateId* the *LTM-CandidateId* of the applied LTM candidate configuration;
- 1> if the UE is configured with E-UTRA *nr-SecondaryCellGroupConfig* (UE in (NG)EN-DC):
 - 2> if the *RRCReconfiguration* message was received via E-UTRA SRB1 as specified in TS 36.331 [10]; or
 - 2> if the *RRCReconfiguration* message was received via E-UTRA RRC message *RRCCConnectionReconfiguration* within *MobilityFromNRCommand* (handover from NR standalone to (NG)EN-DC);
 - 3> if the *RRCReconfiguration* is applied due to a conditional reconfiguration execution for CPC which is configured via *conditionalReconfiguration* contained in *nr-SecondaryCellGroupConfig* specified in TS 36.331 [10]:
 - 4> submit the *RRCReconfigurationComplete* message via the E-UTRA MCG embedded in E-UTRA RRC message *ULInformationTransferMRDC* as specified in TS 36.331 [10], clause 5.6.2a.
 - 3> else if the *RRCReconfiguration* message was included in E-UTRA *RRCCConnectionResume* message:
 - 4> submit the *RRCReconfigurationComplete* message via E-UTRA embedded in E-UTRA RRC message *RRCCConnectionResumeComplete* as specified in TS 36.331 [10], clause 5.3.3.4a;
 - 3> else:
 - 4> submit the *RRCReconfigurationComplete* via E-UTRA embedded in E-UTRA RRC message *RRCCConnectionReconfigurationComplete* as specified in TS 36.331 [10], clause 5.3.5.3/5.3.5.4/5.4.2.3;
 - 3> if the *scg-State* is not included in the E-UTRA message (*RRCCConnectionReconfiguration* or *RRCCConnectionResume*) containing the *RRCReconfiguration* message:
 - 4> perform SCG activation as specified in 5.3.5.13a;
 - 4> if *reconfigurationWithSync* was included in *spCellConfig* of an SCG:
 - 5> initiate the Random Access procedure on the PSCell, as specified in TS 38.321 [3];
 - 4> else if the SCG was deactivated before the reception of the E-UTRA RRC message containing the *RRCReconfiguration* message:
 - 5> if *bfd-and-RLM* was not configured to *true* before the reception of the E-UTRA *RRCCConnectionReconfiguration* or *RRCCConnectionResume* message containing the *RRCReconfiguration* message or if lower layers indicate that a Random Access procedure is needed for SCG activation:
 - 6> initiate the Random Access procedure on the SpCell, as specified in TS 38.321 [3];
 - 5> else the procedure ends;
 - 4> else the procedure ends;
 - 3> else:
 - 4> perform SCG deactivation as specified in 5.3.5.13b;
 - 4> the procedure ends;
 - 2> if the *RRCReconfiguration* message was received within *nr-SecondaryCellGroupConfig* in *RRCCConnectionReconfiguration* message received via SRB3 within *DLInformationTransferMRDC*:

3> submit the *RRCReconfigurationComplete* via E-UTRA embedded in E-UTRA RRC message *RRCConnectionReconfigurationComplete* as specified in TS 36.331 [10], clause 5.3.5.3/5.3.5.4;

3> if the *scg-State* is not included in the *RRCConnectionReconfiguration*:

4> if *reconfigurationWithSync* was included in *spCellConfig* of an SCG:

5> initiate the Random Access procedure on the SpCell, as specified in TS 38.321 [3];

4> else the procedure ends;

3> else:

4> perform SCG deactivation as specified in 5.3.5.13b;

4> the procedure ends;

NOTE 1: The order the UE sends the *RRCConnectionReconfigurationComplete* message and performs the Random Access procedure towards the SCG is left to UE implementation.

2> else (*RRCReconfiguration* was received via SRB3) but not within *DLInformationTransferMRDC*:

3> submit the *RRCReconfigurationComplete* message via SRB3 to lower layers for transmission using the new configuration;

NOTE 2: In (NG)EN-DC and NR-DC, in the case *RRCReconfiguration* is received via SRB1 or within *DLInformationTransferMRDC* via SRB3, the random access is triggered by RRC layer itself as there is not necessarily other UL transmission. In the case *RRCReconfiguration* is received via SRB3 but not within *DLInformationTransferMRDC*, the random access is triggered by the MAC layer due to arrival of *RRCReconfigurationComplete*.

1> else if the *RRCReconfiguration* message was received via SRB1 within the *nr-SCG* within *mrdc-SecondaryCellGroup* (UE in NR-DC, *mrdc-SecondaryCellGroup* was received in *RRCReconfiguration* or *RRCResume* via SRB1):

2> if the *RRCReconfiguration* is applied due to a conditional reconfiguration execution for CPC or subsequent CPAC which is configured via *conditionalReconfiguration* contained in *nr-SCG* within *mrdc-SecondaryCellGroup*; or

2> if the *RRCReconfiguration* is applied due to an LTM cell switch execution:

3> submit the *RRCReconfigurationComplete* message via SRB1 embedded in NR RRC message *ULInformationTransferMRDC* as specified in clause 5.7.2a.3.

2> if the *scg-State* is not included in the *RRCReconfiguration* or *RRCResume* message containing the *RRCReconfiguration* message:

3> perform SCG activation as specified in 5.3.5.13a;

3> if *reconfigurationWithSync* was included in *spCellConfig* in *nr-SCG*:

4> if the *RRCReconfiguration* message is not applied due to an LTM cell switch execution for which lower layer indicate to skip the Random Access procedure:

5> initiate the Random Access procedure on the PSCell, as specified in TS 38.321 [3];

4> if the UE was configured with *successPSCell-Config* when connected to the source PSCell (for PSCell change) or to the PCell (for PSCell addition or change):

5> perform the actions for the successful PSCell change or addition report determination as specified in clause 5.7.10.7, upon successfully completing the Random Access procedure triggered for the *reconfigurationWithSync* in *spCellConfig* of the SCG;

3> else if the SCG was deactivated before the reception of the NR RRC message containing the *RRCReconfiguration* message:

- 4> if *bfd-and-RLM* was not configured to *true* before the reception of the *RRCReconfiguration* or *RRCResume* message containing the *RRCReconfiguration* message; or
- 4> if lower layers indicate that a Random Access procedure is needed for SCG activation:
 - 5> initiate the Random Access procedure on the PSCell, as specified in TS 38.321 [3];
- 4> else the procedure ends;
- 3> else the procedure ends;
- 2> else
 - 3> perform SCG deactivation as specified in 5.3.5.13b;
 - 3> the procedure ends;

NOTE 2a: The order in which the UE sends the *RRCReconfigurationComplete* message and performs the Random Access procedure towards the SCG is left to UE implementation.

- 1> else if the *RRCReconfiguration* message was received via SRB3 (UE in NR-DC):
 - 2> if the *RRCReconfiguration* message was received within *DLInformationTransferMRDC*:
 - 3> if the *RRCReconfiguration* message was received within the *nr-SCG* within *mrdc-SecondaryCellGroup* (NR SCG RRC Reconfiguration):
 - 4> if the *scg-State* is not included in the *RRCReconfiguration* message containing the *RRCReconfiguration* message:
 - 5> if *reconfigurationWithSync* was included in *spCellConfig* in *nr-SCG*:
 - 6> initiate the Random Access procedure on the PSCell, as specified in TS 38.321 [3];
 - 6> if the UE was configured with *successPSCell-Config* when connected to the source PSCell (for PSCell change) or to the PCell (for PSCell addition or change):
 - 7> perform the actions for the successful PSCell change report determination as specified in clause 5.7.10.7, upon successfully completing the Random Access procedure triggered for the *reconfigurationWithSync* in *spCellConfig* of the SCG;
 - 5> else:
 - 6> the procedure ends;
 - 4> else:
 - 5> perform SCG deactivation as specified in 5.3.5.13b;
 - 5> the procedure ends;
 - 3> else:
 - 4> if the *RRCReconfiguration* does not include the *mrdc-SecondaryCellGroupConfig*:
 - 5> if the *RRCReconfiguration* includes the *scg-State*:
 - 6> perform SCG deactivation as specified in 5.3.5.13b;
 - 4> submit the *RRCReconfigurationComplete* message via SRB1 to lower layers for transmission using the new configuration;
 - 2> else:
 - 3> if the *RRCReconfiguration* includes the *reconfigurationWithSync* in *spCellConfig* for the SCG; and
 - 3> if the UE was configured with *successPSCell-Config* when connected to the source PSCell (for PSCell change):

- 4> perform the actions for the successful PSCell change report determination as specified in clause 5.7.10.7, upon successfully completing the Random Access procedure triggered for the *reconfigurationWithSync* in *spCellConfig* of the SCG;
- 3> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessPSCell-Report*; or
- 3> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessPSCell-Report*:
- 4> include *successPSCell-InfoAvailable* in the *RRCReconfigurationComplete* message;
- 3> submit the *RRCReconfigurationComplete* message via SRB3 to lower layers for transmission using the new configuration;
- 1> else (*RRCReconfiguration* was received via SRB1):
 - 2> if the UE is in NR-DC and;
 - 2> if the *RRCReconfiguration* does not include the *mrdc-SecondaryCellGroupConfig*:
 - 3> if the *RRCReconfiguration* includes the *scg-State*:
 - 4> perform SCG deactivation as specified in 5.3.5.13b;
 - 3> else:
 - 4> perform SCG activation without SN message as specified in 5.3.5.13b1;
 - 2> if the *reconfigurationWithSync* was included in *spCellConfig* of an MCG:
 - 3> if *ta-Report* or *ta-ReportATG* is configured with value *enabled* and the UE supports TA reporting:
 - 4> indicate TA report initiation to lower layers;
 - 2> submit the *RRCReconfigurationComplete* message via SRB1 to lower layers for transmission using the new configuration;
 - 2> if this is the first *RRCReconfiguration* message after successful completion of the RRC re-establishment procedure:
 - 3> resume SRB2, SRB4, DRBs, multicast MRB, and BH RLC channels for IAB-MT, and Uu Relay RLC channels for L2 U2N Relay UE, that are suspended;
- 1> if *sl-IndirectPathAddChange* was included in *RRCReconfiguration* message:
 - 2> if SRB1 is configured as split SRB and *pdcp-Duplication* is configured:
 - 3> when successfully sending *RRCReconfigurationComplete* message via SL indirect path (i.e., PC5 RLC acknowledgement is received from target L2 U2N Relay UE):
 - 4> stop timer T421;
 - 2> else (i.e. split SRB1 with duplication is not configured):
 - 3> when receiving *RRCReconfigurationCompleteSidelink* message from target L2 U2N Relay UE:
 - 4> stop timer T421;
- 1> if *reconfigurationWithSync* was included in *spCellConfig* of an MCG or SCG and when MAC of an NR cell group successfully completes a Random Access procedure triggered above; or,
- 1> if *sl-PathSwitchConfig* was included in *reconfigurationWithSync* included in *spCellConfig* of an MCG, and when successfully sending *RRCReconfigurationComplete* message (i.e., PC5 RLC acknowledgement is received from target L2 U2N Relay UE); or,

- 1> if *rach-LessHO* was included in *reconfigurationWithSync* included in *spCellConfig* of an MCG, and upon indication from lower layers that the RACH-less handover has been successfully completed; or,
- 1> if *reconfigurationWithSync* was included in *spCellConfig* of an MCG or SCG and the *RRCReconfiguration* message is applied due to an LTM cell switch execution and upon an indication from lower layer that the LTM cell switch execution has been successfully completed:
 - 2> stop timer T304 for that cell group if running;
 - 2> if *rach-LessHO* was included in *reconfigurationWithSync* included in *spCellConfig* of an MCG, and upon indication from lower layers that the RACH-less handover has been successfully completed; or,
 - 2> if *reconfigurationWithSync* was included in *spCellConfig* of an MCG or SCG and the *RRCReconfiguration* message is applied due to an LTM cell switch execution and upon an indication from lower layer that the LTM cell switch execution has been successfully completed:
 - 3> release dedicated preambles provided in *rach-ConfigDedicated* within *reconfigurationWithSync*, if configured;
 - 3> release dedicated msgA PUSCH resources provided in *rach-ConfigDedicated* within *reconfigurationWithSync*, if configured;
- 2> if *sl-PathSwitchConfig* was included in *reconfigurationWithSync*:
 - 3> if the *sl-IndirectPathMaintain* is not included in *reconfigurationWithSync*:
 - 4> stop timer T420;
 - 4> release all radio resources, including release of the RLC entities and the MAC configuration at the source side;
 - 4> reset MAC used in the source cell;
 - 3> else (*sl-IndirectPathMaintain* is included):
 - 4> release radio resources on the direct path, including release of the RLC entities and the MAC configuration;
 - 4> reset MAC used in the source cell;
- 2> if *rach-LessHO* was included in *reconfigurationWithSync* and *cg-RRC-Configuration* was configured:
 - 3> release the uplink grant configured for RACH-less handover;

NOTE 2b: PDCP and SDAP configured by the source prior to the path switch that are reconfigured and re-used by target when delta signalling is used, are not released as part of this procedure.

- 2> stop timer T310 for source SpCell if running;
- 2> apply the parts of the CSI reporting configuration, the scheduling request configuration and the sounding RS configuration that do not require the UE to know the SFN of the respective target SpCell, if any;
- 2> apply the parts of the measurement and the radio resource configuration that require the UE to know the SFN of the respective target SpCell (e.g. measurement gaps, periodic CQI reporting, scheduling request configuration, sounding RS configuration), if any, upon acquiring the SFN of that target SpCell;
- 2> for each DRB configured as DAPS bearer, request uplink data switching to the PDCP entity, as specified in TS 38.323 [5];
- 2> if the *reconfigurationWithSync* was included in *spCellConfig* of an MCG:
 - 3> if T390 is running:
 - 4> stop timer T390 for all access categories;
 - 4> perform the actions as specified in 5.3.14.4.

- 3> if T350 is running:
 - 4> stop timer T350;
- 3> if *RRCReconfiguration* does not include *dedicatedSIB1-Delivery* and
- 3> if the active downlink BWP, which is indicated by the *firstActiveDownlinkBWP-Id* for the target SpCell of the MCG, has a common search space configured by *searchSpaceSIB1*:
 - 4> acquire the *SIB1*, which is scheduled as specified in TS 38.213 [13], of the target SpCell of the MCG;
 - 4> upon acquiring *SIB1*, perform the actions specified in clause 5.2.2.4.2;
- 2> if the *RRCReconfiguration* message is applied due to a conditional reconfiguration execution and the *RRCReconfiguration* message is contained in an entry in MCG *VarConditionalReconfig* that includes the *subsequentCondReconfig*:
 - 3> for each entry in the *condReconfigList* within the MCG *VarConditionalReconfig*:
 - 4> if there is an entry in *condExecutionCondToAddModList* within the *subsequentCondReconfig* that has *subsequentCondReconfigId* matching the *condReconfigId* in the entry of the *condReconfigList*:
 - 5> if *subsequentCondExecutionCondSCG* is included in the entry of the *condExecutionCondToAddModList*:
 - 6> store in the *condExecutionCondSCG* in the entry of the *condReconfigList* the value of *subsequentCondExecutionCondSCG* in the entry of the *condExecutionCondToAddModList*;
- 2> if the *RRCReconfiguration* message is applied due to a conditional reconfiguration execution and the *RRCReconfiguration* message is contained in an entry in SCG *VarConditionalReconfig* that includes the *subsequentCondReconfig*:
 - 3> for each entry in the *condReconfigList* within the SCG *VarConditionalReconfig*:
 - 4> if there is an entry in *condExecutionCondToAddModList* within the *subsequentCondReconfig* that has *subsequentCondReconfigId* matching the *condReconfigId* in the entry of the *condReconfigList*:
 - 5> if *subsequentCondExecutionCond* is included in the entry of the *condExecutionCondToAddModList*:
 - 6> store in the *condExecutionCond* in the entry of the *condReconfigList* the value of *subsequentCondExecutionCond* in the entry of the *condExecutionCondToAddModList*;
- 2> if the *reconfigurationWithSync* was included in *spCellConfig* of an MCG; or
- 2> if the *reconfigurationWithSync* was included in *spCellConfig* of an SCG and the CPA, CPC, or subsequent CPAC was configured:
 - 3> remove all the entries in the *condReconfigList* within the MCG and the SCG *VarConditionalReconfig* except for the entries in which *subsequentCondReconfig* is present, if any;
 - 3> remove all the entries within *VarConditionalReconfiguration* as specified in TS 36.331 [10], clause 5.3.5.9.6, if any;
 - 3> for each *measId* of the MCG *measConfig*, if configured, and for each *measId* of the SCG *measConfig*, if configured, if the associated *reportConfig* has a *reportType* set to *condTriggerConfig*:
 - 4> if the *reportConfigId* is not associated with any *measId* indicated by the *condExecutionCond* or the *condExecutionCondSCG* in an entry of *condReconfigList* in *VarConditionalReconfig* in which *subsequentCondReconfig* is included:
 - 5> remove the entry with the matching *reportConfigId* from the *reportConfigList* within the *VarMeasConfig*;
 - 4> if the associated *measObjectId* is only associated to a *reportConfig* with *reportType* set to *condTriggerConfig*; and

- 4> if the *measObjectId* is not associated with any *measId* indicated by the *condExecutionCond* or the *condExecutionCondSCG* in an entry of *condReconfigList* in *VarConditionalReconfig* in which *subsequentCondReconfig* is included:
 - 5> remove the entry with the matching *measObjectId* from the *measObjectList* within the *VarMeasConfig*;
 - 4> remove the entry with the matching *measId* from the *measIdList* within the *VarMeasConfig*;
- 2> if *reconfigurationWithSync* was included in *masterCellGroup* or *secondaryCellGroup*:
 - 3> if the UE initiated transmission of a *UEAssistanceInformation* message for the corresponding cell group during the last 1 second, and the UE is still configured to provide the concerned UE assistance information for the corresponding cell group; or
 - 3> if the *RRCReconfiguration* message is applied due to a conditional reconfiguration execution or an LTM cell switch procedure, and the UE is configured to provide UE assistance information for the corresponding cell group, and the UE has initiated transmission of a *UEAssistanceInformation* message for the corresponding cell group since it was configured to do so in accordance with 5.7.4.2:
 - 4> initiate transmission of a *UEAssistanceInformation* message for the corresponding cell group in accordance with clause 5.7.4.3 to provide the concerned UE assistance information;
 - 4> start or restart the prohibit timer (if exists) associated with the concerned UE assistance information with the timer value set to the value in corresponding configuration;
 - 4> start or restart the leave without response timer (if exists) with the timer value set to the value in the *musim-LeaveAssistanceConfig* or the wait timer (if exists) with the timer value set to the value in *musim-CapabilityRestrictionConfig*;
 - 3> if *SIB12* is provided by the target PCell, and the UE initiated transmission of a *SidelinkUEInformationNR* message indicating a change of NR sidelink communication/discovery related parameters relevant in target PCell during the last 1 second preceding reception of the *RRCReconfiguration* message including *reconfigurationWithSync* in *spCellConfig* of an MCG; or
 - 3> if the *RRCReconfiguration* message is applied due to a conditional reconfiguration execution and the UE is capable of NR sidelink communication/discovery and *SIB12* is provided by the target PCell, and the UE has initiated transmission of a *SidelinkUEInformationNR* message since it was configured to do so in accordance with 5.8.3.2:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message in accordance with 5.8.3.3;
 - 3> if any application layer measurement report container has been received from upper layers for which the successful transmission of the *MeasurementReportAppLayer* message or at least one segment of the message via SRB4 (if *reconfigurationWithSync* was included in *masterCellGroup*) or SRB5 (if *reconfigurationWithSync* was included in *secondaryCellGroup*) has not been confirmed by lower layers:
 - 4> if RRC segmentation was used for the *MeasurementReportAppLayer* message:
 - 5> if RRC segmentation is enabled based on the field *rrc-SegAllowedSRB4* or *rrc-SegAllowedSRB5* for the *reportingSRB* (or SRB4 if *reportingSRB* is not configured):
 - 6> re-submit all segments of the *MeasurementReportAppLayer* message to lower layers for transmission via the *reportingSRB* (or SRB4 if *reportingSRB* is not configured);
 - 5> else:
 - 6> discard all segments of the *MeasurementReportAppLayer* message;
 - 4> else:
 - 5> re-submit the *MeasurementReportAppLayer* message to lower layers for transmission via the *reportingSRB* (or SRB4 if *reportingSRB* is not configured);
- 2> if *reconfigurationWithSync* was included in *masterCellGroup* and SRB4 is configured in the target cell:

- 3> for each application layer measurement configuration in the UE:
 - 4> if the *RRCReconfiguration* message is applied due to a conditional reconfiguration execution, if *transmissionOfSessionStartStop* is set to *true* for the application layer measurement configuration and if the session status has changed since the UE was configured with the conditional reconfiguration:
 - 5> initiate transmission of a *MeasurementReportAppLayer* message including *appLayerSessionStatus*, via SRB4 for the application layer measurement in accordance with 5.7.16.2;
- 2> if *reconfigurationWithSync* was included in *masterCellGroup* and the target cell provides *SIB21* or provides *SIB1* including *nonServingCellMIB*:
- 3> if the UE initiated transmission of an *MBSInterestIndication* message during the last 1 second preceding reception of this *RRCReconfiguration* message; or
- 3> if the *RRCReconfiguration* message is applied due to a conditional reconfiguration execution, and the UE has initiated transmission of an *MBSInterestIndication* message after having received this *RRCReconfiguration* message:
 - 4> initiate transmission of an *MBSInterestIndication* message in accordance with clause 5.9.4;
- 2> the procedure ends.

NOTE 3: The UE is only required to acquire broadcasted *SIB1* if the UE can acquire it without disrupting unicast or MBS multicast data reception, i.e. the broadcast and unicast/MBS multicast beams are quasi co-located.

NOTE 4: The UE sets the content of *UEAssistanceInformation* according to latest configuration (i.e. the configuration after applying the *RRCReconfiguration* message) and latest UE preference. The UE may include more than the concerned UE assistance information within the *UEAssistanceInformation* according to 5.7.4.2. Therefore, the content of *UEAssistanceInformation* message might not be the same as the content of the previous *UEAssistanceInformation* message.

5.3.5.4 Secondary cell group release

The UE shall:

- 1> as a result of SCG release triggered by E-UTRA (i.e. (NG)EN-DC case) or NR (i.e. NR-DC case):
 - 2> reset SCG MAC, if configured;
 - 2> for each RLC bearer that is part of the SCG configuration:
 - 3> perform RLC bearer release procedure as specified in 5.3.5.5.3;
 - 2> for each BH RLC channel that is part of the SCG configuration:
 - 3> perform BH RLC channel release procedure as specified in 5.3.5.5.10;
 - 2> release the SCG configuration;
 - 2> for each application layer measurement configuration that is part of the SCG configuration:
 - 3> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 3> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*, if stored;
 - 3> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 3> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
 - 2> discard any application layer measurement reports which were configured to be reported via SRB5 and which were not yet fully submitted to lower layers for transmission;

- 2> remove all the entries within the SCG *VarConditionalReconfig*, if any;
- 2> if SCG release was triggered by NR (i.e. NR-DC case):
 - 3> remove all the entries in the *condReconfigList* within the MCG *VarConditionalReconfig* for which *subsequentCondReconfig* is not present and the *RRCReconfiguration* within *condRRCReconfig* does not include the *masterCellGroup* with *reconfigurationWithSync*, if any;
 - 3> remove the *servingSecurityCellSetId* within the *VarServingSecurityCellSetID*, if any;
 - 3> for each entry in the *condReconfigList* within the MCG *VarConditionalReconfig* for which *subsequentCondReconfig* is present:
 - 4> remove the *condExecutionCondSCG*, if stored;
- 2> else (i.e. EN-DC case):
 - 3> perform *VarConditionalReconfiguration* CPC removal as specified in TS 36.331 [10] clause 5.3.5.9.7;
- 2> stop timer T310 for the corresponding SpCell, if running;
- 2> stop timer T312 for the corresponding SpCell, if running;
- 2> stop timer T304 for the corresponding SpCell, if running.

NOTE: Release of cell group means only release of the lower layer configuration of the cell group but the *RadioBearerConfig* may not be released.

5.3.5.5 Cell Group configuration

5.3.5.5.1 General

The network configures the UE with Master Cell Group (MCG), and zero or one Secondary Cell Group (SCG). In (NG)EN-DC, the MCG is configured as specified in TS 36.331 [10], and for NE-DC, the SCG is configured as specified in TS 36.331 [10]. The network provides the configuration parameters for a cell group in the *CellGroupConfig* IE.

The UE performs the following actions based on a received *CellGroupConfig* IE:

- 1> if the *CellGroupConfig* contains the *spCellConfig* with *reconfigurationWithSync*:
 - 2> perform Reconfiguration with sync according to 5.3.5.5.2;
 - 2> resume all suspended radio bearers except the SRBs for the source cell group, and resume SCG transmission for all radio bearers, and resume BH RLC channels and resume SCG transmission for BH RLC channels for IAB-MT, if suspended;

NOTE 1: If the SCG is deactivated, resuming SCG transmission for all radio bearers does not imply that PDCP PDUs can be transmitted or received on SCG RLC bearers.

- 1> if the *CellGroupConfig* contains the *rlc-BearerToReleaseList* or *rlc-BearerToReleaseListExt*:
 - 2> perform RLC bearer release as specified in 5.3.5.5.3;
- 1> if the *CellGroupConfig* contains the *rlc-BearerToAddModList*:
 - 2> perform the RLC bearer addition/modification as specified in 5.3.5.5.4;
- 1> if the *CellGroupConfig* contains the *mac-CellGroupConfig*:
 - 2> configure the MAC entity of this cell group as specified in 5.3.5.5.5;
- 1> if the *CellGroupConfig* contains the *sCellToReleaseList*:
 - 2> perform SCell release as specified in 5.3.5.5.8;

- 1> if the *CellGroupConfig* contains the *spCellConfig*:
 - 2> configure the SpCell as specified in 5.3.5.5.7;
 - 1> if the *CellGroupConfig* contains the *sCellToAddModList*:
 - 2> perform SCell addition/modification as specified in 5.3.5.5.9;
 - 1> if the *CellGroupConfig* contains the *bh-RLC-ChannelToReleaseList*:
 - 2> perform BH RLC channel release as specified in 5.3.5.5.10;
 - 1> if the *CellGroupConfig* contains the *bh-RLC-ChannelToAddModList*:
 - 2> perform the BH RLC channel addition/modification as specified in 5.3.5.5.11;
 - 1> if the *CellGroupConfig* contains the *uu-RelayRLC-ChannelToReleaseList*:
 - 2> perform Uu Relay RLC channel release as specified in 5.3.5.5.12;
 - 1> if the *CellGroupConfig* contains the *uu-RelayRLC-ChannelToAddModList*:
 - 2> perform the Uu Relay RLC channel addition/modification as specified in 5.3.5.5.13;
 - 1> if the *CellGroupConfig* contains the *ncr-FwdConfig*:
 - 2> perform the NCR-Fwd configuration as specified in 5.3.5.5.14;
 - 1> if the *CellGroupConfig* contains the *autonomousDenialParameters*:
 - 2> consider itself to be allowed to deny any transmission in a particular UL slot if during the number of slots indicated by *autonomousDenialValidity*, preceding and including this particular slot, it autonomously denied fewer UL slots than indicated by *autonomousDenialSlots* within the same cell group;
- NOTE 2: When counting the number of denied UL slots, the UE sums up the denied UL slots across all serving cells within the same cell group. When counting the number of slots indicated by *autonomousDenialValidity*, the UE sums up the UL slots across all serving cells within the same cell group.
- NOTE 3: When multiple denied UL slots across all serving cells partially or fully overlap in the time domain, the number of denied UL slots across all serving cells is counted as one denied UL slot, based on the longest slot.

5.3.5.5.2 Reconfiguration with sync

The UE shall perform the following actions to execute a reconfiguration with sync.

- 1> if the AS security is not activated, perform the actions upon going to RRC_IDLE as specified in 5.3.11 with the release cause 'other' upon which the procedure ends;
- 1> stop timer T430 if running;
- 1> if no DAPS bearer is configured:
 - 2> stop timer T310 for the corresponding SpCell, if running;
- 1> if this procedure is executed for the MCG:
 - 2> if timer T316 is running;
 - 3> stop timer T316;
 - 3> if the UE supports RLF-Report for fast MCG recovery procedure as specified in TS 38.306 [26]:
 - 4> set the *elapsedTimeT316* in the *VarRLF-Report* to the value of the elapsed time of the timer T316;

- 4> set the *pSCellId* in the *VarRLF-Report* to the global cell identity of the PSCell, if available, otherwise to the physical cell identity and carrier frequency of the PSCell;
- 3> else:
 - 4> clear the information included in *VarRLF-Report*, if any;
- 2> resume MCG transmission, if suspended.
- 1> stop timer T312 for the corresponding SpCell, if running;
- 1> if *sl-PathSwitchConfig* is included:
 - 2> apply the value of the *newUE-Identity* as the C-RNTI;
 - 2> if *sl-IndirectPathMaintain* is not included in *reconfigurationWithSync*:
 - 3> if the UE is L2 U2N remote UE at source side:
 - 4> indicate to upper layer to trigger PC5 unicast link release with the source L2 U2N Relay UE;
 - 3> consider the target L2 U2N Relay UE to be the one indicated by the *targetRelayUE-Identity* in the *sl-PathSwitchConfig*;
 - 3> start timer T420 for the corresponding target L2 U2N Relay UE with the timer value set to *t420*, as included in the *sl-PathSwitchConfig*;
 - 3> indicate to upper layer (to trigger the PC5 unicast link establishment) with the target L2 U2N Relay UE indicated by the *targetRelayUE-Identity*;
 - 3> apply the default configuration of SL-RLC1 as defined in 9.2.4 for SRB1;
 - 2> else:
 - 3> consider the connected L2 U2N Relay UE on the indirect path as the target L2 U2N relay UE, and maintain the PC5 connection with the L2 U2N Relay UE;
- 1> else (*sl-PathSwitchConfig* is not included):
 - 2> if this procedure is executed for the MCG or if this procedure is executed for an SCG not indicated as deactivated in the E-UTRA or NR RRC message in which the *RRCReconfiguration* message is embedded:
 - 3> start timer T304 for the corresponding SpCell with the timer value set to *t304*, as included in the *reconfigurationWithSync*;
 - 2> if the *frequencyInfoDL* is included:
 - 3> consider the target SpCell to be one on the SSB frequency indicated by the *frequencyInfoDL* with a physical cell identity indicated by the *physCellId*;
 - 2> else:
 - 3> consider the target SpCell to be one on the SSB frequency of the source SpCell with a physical cell identity indicated by the *physCellId*;
 - 2> if this procedure is performed due to an LTM cell switch execution:
 - 3> start synchronising to the DL of the indicated LTM candidate cell, if no DL synchronization for the indicated LTM candidate cell has been already acquired;
 - 2> else:
 - 3> start synchronising to the DL of the target SpCell;
 - 2> apply the specified BCCH configuration defined in 9.1.1.1 for the target SpCell;
 - 2> acquire the *MIB* of the target SpCell, which is scheduled as specified in TS 38.213 [13];

2> if *NTN-Config* is configured for the target cell:

3> start timer T430 with the timer value set to *ntn-UISyncValidityDuration* from the subframe indicated by *epochTime*, according to the target cell *NTN-Config*;

NOTE 1: The UE should perform the reconfiguration with sync as soon as possible following the reception of the RRC message triggering the reconfiguration with sync, which could be before confirming successful reception (HARQ and ARQ) of this message.

NOTE 2: The UE may omit reading the *MIB* if the UE already has the required timing information, or the timing information is not needed for random access, or if not needed for RACH-less initial UL transmission.

NOTE 2a: A UE with DAPS bearer does not monitor for system information updates in the source PCell.

2> If any DAPS bearer is configured:

3> create a MAC entity for the target cell group with the same configuration as the MAC entity for the source cell group;

3> for each DAPS bearer:

4> establish an RLC entity or entities for the target cell group, with the same configurations as for the source cell group;

4> establish the logical channel for the target cell group, with the same configurations as for the source cell group;

NOTE 2b: In order to understand if a DAPS bearer is configured, the UE needs to check the presence of the field *daps-Config* within the *RadioBearerConfig* IE received in *radioBearerConfig* or *radioBearerConfig2*.

3> for each SRB:

4> establish an RLC entity for the target cell group, with the same configurations as for the source cell group;

4> establish the logical channel for the target cell group, with the same configurations as for the source cell group;

3> suspend SRBs for the source cell group;

NOTE 3: Void

3> apply the value of the *newUE-Identity* as the C-RNTI in the target cell group;

3> configure lower layers for the target SpCell in accordance with the received *spCellConfigCommon*;

3> configure lower layers for the target SpCell in accordance with any additional fields, not covered in the previous, if included in the received *reconfigurationWithSync*.

2> else:

3> reset the MAC entity of this cell group;

3> consider the SCell(s) of this cell group, if configured, that are not included in the *SCellToAddModList* in the *RRCReconfiguration* message, to be in deactivated state;

3> apply the value of the *newUE-Identity* as the C-RNTI for this cell group;

3> configure lower layers in accordance with the received *spCellConfigCommon*;

3> if *rach-LessHO* is included:

4> configure lower layers in accordance with *rach-LessHO* for the target SpCell;

3> configure lower layers in accordance with any additional fields, not covered in the previous, if included in the received *reconfigurationWithSync*.

- 2> if the UE is acting as L2 U2N Remote UE at the source side:
- 3> if the *sl-IndirectPathMaintain* is not included in *reconfigurationWithSync*:
- 4> indicate upper layer to trigger PC5 unicast link release.

Upon L2 U2N Relay UE receiving *reconfigurationWithSync*, it either indicates to upper layers (to trigger PC5 unicast link release) or sends *NotificationMessageSidelink* message to the connected L2 U2N Remote UE(s) in accordance with 5.8.9.10.

NOTE 4: The MP direct path release is realized by direct-to-indirect path switch procedure (i.e. *sl-PathSwitchConfig* and *sl-indirectPathMaintain* included in *RRCReconfiguration* message), where MP is configured in source side.

5.3.5.5.3 RLC bearer release

The UE shall:

- 1> for each *logicalChannelIdentity/LogicalChannelIdentityExt* value included in the *rlc-BearerToReleaseList/rlc-BearerToReleaseListExt* that is part of the current UE configuration within the same cell group (LCH release); or
- 1> for each *logicalChannelIdentity* value that is to be released as the result of an SCG release according to 5.3.5.4:
- 2> release the RLC entity or entities as specified in TS 38.322 [4], clause 5.1.3;
- 2> release the corresponding logical channel.

5.3.5.5.4 RLC bearer addition/modification

For each *RLC-BearerConfig* received in the *rlc-BearerToAddModList* IE the UE shall:

- 1> if the UE's current configuration contains an RLC bearer with the received *logicalChannelIdentity/LogicalChannelIdentityExt* within the same cell group:
- 2> if the RLC bearer is associated with an DAPS bearer, or
- 2> if any DAPS bearer is configured and the RLC bearer is associated with an SRB:
- 3> reconfigure the RLC entity or entities for the target cell group in accordance with the received *rlc-Config*;
- 3> reconfigure the logical channel for the target cell group in accordance with the received *mac-LogicalChannelConfig*;
- 2> else:
- 3> if *reestablishRLC* is received:
- 4> re-establish the RLC entity as specified in TS 38.322 [4];
- 3> reconfigure the RLC entity or entities in accordance with the received *rlc-Config*;
- 3> reconfigure the logical channel in accordance with the received *mac-LogicalChannelConfig*;
- 3> if *servedMBS-RadioBearer* is received:
- 4> associate this logical channel with the PDCP entity identified by *servedMBS-RadioBearer*;

NOTE 1: For DRB and SRB, the network does not re-associate an already configured logical channel with another radio bearer. Hence, *servedRadioBearer* is not present in this case. For MRB, the network does not re-associate an already configured logical channel with DRB or SRB or another MRB (i.e. MRB with another PDCP entity). Hence *multicastRLC-BearerConfig* is not present in this case. If a radio bearer is released and another is added with the same radio bearer identity, it is considered as a new (different) radio bearer. Hence, the network also releases the RLC bearer(s) associated with the released radio bearer.

NOTE 2: In DAPS handover, the UE may perform RLC entity re-establishment (if *reestablishRLC* is set) for an RLC bearer associated with a non-DAPS bearer when indication of successful completion of random access towards target cell is received from lower layers as specified in TS 38.321 [3].

- 1> else (a logical channel with the given *logicalChannelIdentity/LogicalChannelIdentityExt* is not configured within the same cell group, including the case when full configuration option is used):
 - 2> if the *servedRadioBearer* associates the logical channel with an SRB and *rlc-Config* is not included:
 - 3> establish an RLC entity in accordance with the default configuration defined in 9.2 for the corresponding SRB;
 - 2> else:
 - 3> establish an RLC entity in accordance with the received *rlc-Config*;
 - 2> if the *servedRadioBearer* associates the logical channel with an SRB and if *mac-LogicalChannelConfig* is not included:
 - 3> configure this MAC entity with a logical channel in accordance to the default configuration defined in 9.2 for the corresponding SRB;
 - 2> else:
 - 3> configure this MAC entity with a logical channel in accordance to the received *mac-LogicalChannelConfig*;
 - 2> associate this logical channel with the PDCP entity identified by *servedRadioBearer* or *servedMBS-RadioBearer*.

5.3.5.5.5 MAC entity configuration

The UE shall:

- 1> if SCG MAC is not part of the current UE configuration (i.e. SCG establishment):
 - 2> create an SCG MAC entity;
- 1> if any DAPS bearer is configured:
 - 2> reconfigure the MAC main configuration for the target cell group in accordance with the received *mac-CellGroupConfig* excluding *tag-ToReleaseList* and *tag-ToAddModList*;
- 1> else:
 - 2> reconfigure the MAC main configuration of the cell group in accordance with the received *mac-CellGroupConfig* excluding *tag-ToReleaseList* and *tag-ToAddModList*;
- 1> if the received *mac-CellGroupConfig* includes the *tag-ToReleaseList*:
 - 2> for each *TAG-Id* value included in the *tag-ToReleaseList* that is part of the current UE configuration:
 - 3> release the TAG indicated by *TAG-Id*;
- 1> if the received *mac-CellGroupConfig* includes the *tag-ToAddModList*:
 - 2> for each *tag-Id* value included in *tag-ToAddModList* that is not part of the current UE configuration (TAG addition):
 - 3> add the TAG, corresponding to the *tag-Id*, in accordance with the received *timeAlignmentTimer*;
 - 2> for each *tag-Id* value included in *tag-ToAddModList* that is part of the current UE configuration (TAG modification):
 - 3> reconfigure the TAG, corresponding to the *tag-Id*, in accordance with the received *timeAlignmentTimer*.

5.3.5.5.6 RLF Timers & Constants configuration

The UE shall:

- 1> if the received *rlf-TimersAndConstants* is set to *release*:
 - 2> if any DAPS bearer is configured:
 - 3> use values for timers T301, T310, T311 and constants N310, N311 for the target cell group, as included in *ue-TimersAndConstants* received in *SIB1*;
 - 2> else:
 - 3> use values for timers T301, T310, T311 and constants N310, N311, as included in *ue-TimersAndConstants* received in *SIB1*;
- 1> else:
 - 2> if any DAPS bearer is configured:
 - 3> configure the value of timers and constants for the target cell group in accordance with received *rlf-TimersAndConstants*;
 - 2> else:
 - 3> (re-)configure the value of timers and constants in accordance with received *rlf-TimersAndConstants*;
 - 3> stop timer T310 for this cell group, if running;
 - 3> stop timer T312 for this cell group, if running;
 - 3> reset the counters N310 and N311.

5.3.5.5.7 SpCell Configuration

The UE shall:

- 1> if the UE is acting as L2 U2N Remote UE and is not configured with MP:
 - 2> if the *SpCellConfig* contains the *rlf-TimersAndConstants* which is set to *setup*:
 - 3> use value for timers T311 as received in *rlf-TimersAndConstants*;
 - 2> else if *rlf-TimersAndConstants* is not configured for this cell group or *SpCellConfig* contains the *rlf-TimersAndConstants* which is set to *release*:
 - 3> use value for timers T311, as included in *ue-TimersAndConstants* received in *SIB1*;
- 1> else
 - 2> if the *SpCellConfig* contains the *rlf-TimersAndConstants*:
 - 3> configure the RLF timers and constants for this cell group as specified in 5.3.5.5.6;
 - 2> else if *rlf-TimersAndConstants* is not configured for this cell group:
 - 3> if any DAPS bearer is configured:
 - 4> use values for timers T301, T310, T311 and constants N310, N311 for the target cell group, as included in *ue-TimersAndConstants* received in *SIB1*;
 - 3> else
 - 4> use values for timers T301, T310, T311 and constants N310, N311, as included in *ue-TimersAndConstants* received in *SIB1*;
 - 2> if the *SpCellConfig* contains *spCellConfigDedicated*:

- 3> configure the SpCell in accordance with the *spCellConfigDedicated*;
- 3> consider the bandwidth part indicated in *firstActiveUplinkBWP-Id*, if included in the *spCellConfigDedicated*, to be the active uplink bandwidth part;
- 3> if the *firstActiveDownlinkBWP-Id* is included in the *spCellConfigDedicated*:
 - 4> if the *SpCellConfig* is included in an *RRCReconfiguration* message contained in an NR or E-UTRA RRC message indicating that the SCG is deactivated:
 - 5> consider the bandwidth part indicated in *firstActiveDownlinkBWP-Id* to be the bandwidth part for Radio Link Monitoring, Beam Failure Detection and measurements;
 - 4> else:
 - 5> consider the bandwidth part indicated in *firstActiveDownlinkBWP-Id* to be the active downlink bandwidth part;
- 3> if any of the reference signal(s) that are used for radio link monitoring are reconfigured by the received *spCellConfigDedicated*:
 - 4> stop timer T310 for the corresponding SpCell, if running;
 - 4> stop timer T312 for the corresponding SpCell, if running;
 - 4> reset the counters N310 and N311.
- 1> if the *SpCellConfig* contains the *lowMobilityEvaluationConnected*:
 - 2> the UE may perform the evaluation of the low mobility criterion for this cell group as specified in 5.7.13.1;
- 1> if the *SpCellConfig* contains the *goodServingCellEvaluationRLM*:
 - 2> the UE may perform the evaluation of the good serving cell quality criterion for this SpCell as specified in 5.7.13.2;
- 1> if the *SpCellConfig* contains the *goodServingCellEvaluationBFD*:
 - 2> the UE may perform the evaluation of the good serving cell quality criterion for this serving cell as specified in 5.7.13.2;

5.3.5.5.8 SCell Release

The UE shall:

- 1> if the release is triggered by reception of the *sCellToReleaseList*:
 - 2> for each *sCellIndex* value included in the *sCellToReleaseList*:
 - 3> if the current UE configuration includes an SCell with value *sCellIndex*:
 - 4> release the SCell.

5.3.5.5.9 SCell Addition/Modification

The UE shall:

- 1> for each *sCellIndex* value included in the *sCellToAddModList* that is not part of the current UE configuration (SCell addition):
 - 2> add the SCell, corresponding to the *sCellIndex*, in accordance with the *sCellConfigCommon* and *sCellConfigDedicated*;
- 2> if the *sCellState* is included:
 - 3> configure lower layers to consider the SCell to be in activated state;

- 2> else:
 - 3> configure lower layers to consider the SCell to be in deactivated state;
- 2> for each *measId* included in the *measIdList* within *VarMeasConfig*:
 - 3> if SCells are not applicable for the associated measurement; and
 - 3> if the concerned SCell is included in *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId*:
 - 4> remove the concerned SCell from *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
- 2> if the *SCellConfig* contains the *goodServingCellEvaluationBFD*:
 - 3> the UE may perform the evaluation of the good serving cell quality criterion for this serving cell as specified in 5.7.13.2.
- 1> for each *sCellIndex* value included in the *sCellToAddModList* that is part of the current UE configuration (SCell modification):
 - 2> modify the SCell configuration in accordance with the *sCellConfigDedicated*;
 - 2> if the *sCellToAddModList* was received in an *RRCReconfiguration* message including *reconfigurationWithSync*, or received in an *RRCResume* message, or received in an *RRCReconfiguration* message including *reconfigurationWithSync* embedded in an *RRCResume* message or embedded in an *RRCReconfiguration* message or embedded in an E-UTRA *RRCCConnectionReconfiguration* message or embedded in an E-UTRA *RRCCConnectionResume* message, or received in an *RRCReconfiguration* message embedded in an *RRCReconfiguration* message or embedded in an E-UTRA *RRCCConnectionReconfiguration* message activating deactivated SCG:
 - 3> if the *sCellState* is included:
 - 4> configure lower layers to consider the SCell to be in activated state;
 - 3> else:
 - 4> configure lower layers to consider the SCell to be in deactivated state.
 - 2> if the *SCellConfig* contains the *goodServingCellEvaluationBFD*:
 - 3> the UE may perform the evaluation of the good serving cell quality criterion for this serving cell as specified in 5.7.13.2.

5.3.5.5.10 BH RLC channel release

The IAB-node shall:

- 1> for each *BH-RLC-ChannelID* value included in the *bh-RLC-ChannelToReleaseList* that is part of the current IAB-node configuration within the same cell group (LCH release); or
- 1> for each *BH-RLC-ChannelID* value that is to be released as the result of an SCG release according to 5.3.5.4:
 - 2> release the RLC entity or entities as specified in TS 38.322 [4], clause 5.1.3;
 - 2> release the corresponding logical channel.

5.3.5.5.11 BH RLC channel addition/modification

For each *BH-RLC-ChannelConfig* received in the *bh-RLC-ChannelToAddModList* IE the IAB-node shall:

- 1> if the current configuration contains a BH RLC Channel with the received *bh-RLC-ChannelID* within the same cell group:
 - 2> if *reestablishRLC* is received:

- 3> re-establish the RLC entity as specified in TS 38.322 [4];
- 2> reconfigure the RLC entity or entities in accordance with the received *rlc-Config*;
- 2> reconfigure the logical channel in accordance with the received *mac-LogicalChannelConfig*;
- 1> else (a backhaul logical channel with the given *BH-RLC-ChannelID* was not configured before within the same cell group):
 - 2> establish an RLC entity in accordance with the received *rlc-Config*;
 - 2> configure this MAC entity with a logical channel in accordance to the received *mac-LogicalChannelConfig*.

5.3.5.5.12 Uu Relay RLC channel release

The L2 U2N Relay UE or N3C relay UE shall:

- 1> for each *Uu-RelayRLC-ChannelID* value included in the *uu-RelayRLC-ChannelToReleaseList* that is part of the current configuration within the same cell group (LCH release):
 - 2> release the RLC entity as specified in TS 38.322 [4], clause 5.1.3;
 - 2> release the corresponding logical channel.

5.3.5.5.13 Uu Relay RLC channel addition/modification

For each *Uu-RelayRLC-ChannelConfig* received in the *uu-RelayRLC-ChannelToAddModList* the L2 U2N Relay UE or N3C relay UE shall:

- 1> if the current configuration contains a Uu Relay RLC channel with the same *uu-RelayRLC-ChannelID* within the same cell group:
 - 2> if *reestablishRLC* is received:
 - 3> re-establish the RLC entity as specified in TS 38.322 [4];
 - 2> reconfigure the RLC entity in accordance with the received *rlc-Config*;
 - 2> reconfigure the logical channel in accordance with the received *mac-LogicalChannelConfig*;
- 1> else (a logical channel with the given *uu-RelayRLC-ChannelID* was not configured before within the same cell group):
 - 2> establish an RLC entity in accordance with the received *rlc-Config*;
 - 2> configure this MAC entity with a logical channel in accordance to the received *mac-LogicalChannelConfig*.

5.3.5.5.14 NCR-Fwd configuration

The NCR-MT shall:

- 1> if *ncr-FwdConfig* is set to *setup*:
 - 2> if *ncr-FwdConfig* includes periodic forwarding resource configuration:
 - 3> indicate to NCR-Fwd to forward in accordance with the configured periodic forwarding resource set(s);
- 1> else (*ncr-FwdConfig* is set to *release*):
 - 2> release *ncr-FwdConfig*;
 - 2> indicate to NCR-Fwd to cease forwarding.

5.3.5.6 Radio Bearer configuration

5.3.5.6.1 General

The UE shall perform the following actions based on a received *RadioBearerConfig* IE:

- 1> if the *RadioBearerConfig* includes the *srb3-ToRelease*, *srb4-ToRelease* or *srb5-ToRelease*:
 - 2> perform the SRB release as specified in 5.3.5.6.2;
- 1> if the *RadioBearerConfig* includes the *srb-ToAddModList*, *srb4-ToAddMod* or *srb5-ToAddMod* or if any DAPS bearer is configured:
 - 2> perform the SRB addition or reconfiguration as specified in 5.3.5.6.3;
- 1> if the *RadioBearerConfig* includes the *drb-ToReleaseList*:
 - 2> perform DRB release as specified in 5.3.5.6.4;
- 1> if the *RadioBearerConfig* includes the *drb-ToAddModList*:
 - 2> perform DRB addition or reconfiguration as specified in 5.3.5.6.5;
- 1> if the *RadioBearerConfig* includes the *mrb-ToReleaseList*:
 - 2> perform multicast MRB release as specified in 5.3.5.6.6;
- 1> if the *RadioBearerConfig* includes the *mrb-ToAddModList*:
 - 2> perform multicast MRB addition or reconfiguration as specified in 5.3.5.6.7;
- 1> release all SDAP entities established for the PDU sessions, if any, that have no associated DRB as specified in TS 37.324 [24] clause 5.1.2, and indicate the release of the user plane resources for PDU Sessions associated with the released SDAP entities to upper layers;
- 1> release all SDAP entities established for the MBS multicast sessions, if any, that have no associated multicast MRB as specified in TS 37.324 [24] clause 5.1.2, and indicate the release of user plane resources for these MBS multicast sessions to upper layers.

5.3.5.6.2 SRB release

The UE shall:

- 1> if *srb3-ToRelease* is included:
 - 2> release the PDCP entity and the *srb-Identity* of the SRB3;
- 1> if *srb4-ToRelease* is included:
 - 2> release the PDCP entity and the *srb-Identity* of the SRB4;
- 1> if *srb5-ToRelease* is included:
 - 2> release the PDCP entity and the *srb-Identity* of the SRB5.

5.3.5.6.3 SRB addition/modification

The UE shall:

- 1> If any DAPS bearer is configured, for each SRB:
 - 2> establish a PDCP entity for the target cell group as specified in TS 38.323 [5], with the same configuration as the PDCP entity for the source cell group;
 - 2> if the *masterKeyUpdate* is received:

- 3> configure the PDCP entity with the security algorithms according to *securityConfig* and apply the keys (K_{RRCEnc} and K_{RRCInt}) associated with the master key (K_{gNB});
- 2> else:
 - 3> configure the PDCP entity for the target cell group with state variables continuation as specified in TS 38.323 [5], and with the same security configuration as the PDCP entity for the source cell group;
- 1> for each *srb-Identity* value included in the *srb-ToAddModList*, *srb4-ToAddMod* or *srb5-ToAddMod* that is not part of the current UE configuration (SRB establishment or reconfiguration from E-UTRA PDCP to NR PDCP):
 - 2> establish a PDCP entity;
 - 2> if AS security has been activated:
 - 3> if target RAT of handover is E-UTRA/5GC; or
 - 3> if the UE is connected to E-UTRA/5GC:
 - 4> if the UE is capable of E-UTRA/5GC, but not capable of NGEN-DC:
 - 5> configure the PDCP entity with the security algorithms and keys (K_{RRCEnc} and K_{RRCInt}) configured/derived as specified in TS 36.331 [10];
 - 4> else (i.e., UE capable of NGEN-DC):
 - 5> configure the PDCP entity with the security algorithms according to *securityConfig* and apply the keys (K_{RRCEnc} and K_{RRCInt}) associated with the master key (K_{eNB}) or secondary key ($S-K_{gNB}$) as indicated in *keyToUse*, if applicable;
 - 3> else (i.e., UE connected to NR or UE connected to E-UTRA/EPC):
 - 4> configure the PDCP entity with the security algorithms according to *securityConfig* and apply the keys (K_{RRCEnc} and K_{RRCInt}) associated with the master key (K_{eNB} / K_{gNB}) or secondary key ($S-K_{gNB}$) as indicated in *keyToUse*, if applicable;
 - 2> if the current UE configuration as configured by E-UTRA in TS 36.331 [10] includes an SRB identified with the same *srb-Identity* value:
 - 3> associate the E-UTRA RLC entity and DCCH of this SRB with the NR PDCP entity;
 - 3> release the E-UTRA PDCP entity of this SRB;
 - 2> if the *pdcp-Config* is included:
 - 3> configure the PDCP entity in accordance with the received *pdcp-Config*;
 - 2> else:
 - 3> configure the PDCP entity in accordance with the default configuration defined in 9.2.1 for the corresponding SRB;
- 1> if any DAPS bearer is configured, for each *srb-Identity* value included in the *srb-ToAddModList* that is part of the current UE configuration:
 - 2> if the *pdcp-Config* is included:
 - 3> reconfigure the PDCP entity for the target cell group in accordance with the received *pdcp-Config*;
 - 1> else, for each *srb-Identity* value included in the *srb-ToAddModList*, *srb4-ToAddMod* or *srb5-ToAddMod* that is part of the current UE configuration:
 - 2> if the *reestablishPDCP* is set:
 - 3> if target RAT of handover is E-UTRA/5GC; or
 - 3> if the UE is connected to E-UTRA/5GC:

- 4> if the UE is capable of E-UTRA/5GC, but not capable of NGEN-DC:
 - 5> configure the PDCP entity to apply the integrity protection algorithm and K_{RRInt} key configured/derived as specified in TS 36.331 [10], i.e. the integrity protection configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
 - 5> configure the PDCP entity to apply the ciphering algorithm and K_{RREnc} key configured/derived as specified in TS 36.331 [10], i.e. the ciphering configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
- 4> else (i.e., a UE capable of NGEN-DC):
 - 5> configure the PDCP entity to apply the integrity protection algorithm and K_{RRInt} key associated with the master key (K_{eNB}) or secondary key ($S-K_{gNB}$), as indicated in *keyToUse*, i.e. the integrity protection configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
 - 5> configure the PDCP entity to apply the ciphering algorithm and K_{RREnc} key associated with the master key (K_{eNB}) or secondary key ($S-K_{gNB}$) as indicated in *keyToUse*, i.e. the ciphering configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
- 3> else (i.e., UE connected to NR or UE in EN-DC):
 - 4> configure the PDCP entity to apply the integrity protection algorithm and K_{RRInt} key associated with the master key (K_{eNB}/K_{gNB}) or secondary key ($S-K_{gNB}$), as indicated in *keyToUse*, i.e. the integrity protection configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
 - 4> configure the PDCP entity to apply the ciphering algorithm and K_{RREnc} key associated with the master key (K_{eNB}/K_{gNB}) or secondary key ($S-K_{gNB}$) as indicated in *keyToUse*, i.e. the ciphering configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
- 3> re-establish the PDCP entity of this SRB as specified in TS 38.323 [5];
- 2> else, if the *discardOnPDCP* is set:
 - 3> trigger the PDCP entity to perform SDU discard as specified in TS 38.323 [5];
- 2> if the *pdcp-Config* is included:
 - 3> reconfigure the PDCP entity in accordance with the received *pdcp-Config*.

5.3.5.6.4 DRB release

The UE shall:

- 1> for each *drb-Identity* value included in the *drb-ToReleaseList* that is part of the current UE configuration; or
- 1> for each *drb-Identity* value that is to be released as the result of full configuration according to 5.3.5.11:
 - 2> release the PDCP entity and the *drb-Identity*;
 - 2> if SDAP entity associated with this DRB is configured:
 - 3> indicate the release of the DRB to SDAP entity associated with this DRB (TS 37.324 [24], clause 5.3.3);
 - 2> if the DRB is associated with an *eps-BearerIdentity*:
 - 3> if a new bearer is not added either with NR or E-UTRA with same *eps-BearerIdentity*:
 - 4> indicate the release of the DRB and the *eps-BearerIdentity* of the released DRB to upper layers.

NOTE 1: The UE does not consider the message as erroneous if the *drb-ToReleaseList* includes any *drb-Identity* value that is not part of the current UE configuration.

NOTE 2: Whether or not the RLC and MAC entities associated with this PDCP entity are reset or released is determined by the *CellGroupConfig*.

5.3.5.6.5 DRB addition/modification

The UE shall:

- 1> for each *drb-Identity* value included in the *drb-ToAddModList* that is not part of the current UE configuration (DRB establishment including the case when full configuration option is used):
 - 2> establish a PDCP entity and configure it in accordance with the received *pdcp-Config*;
 - 2> if the PDCP entity of this DRB is not configured with *cipheringDisabled*:
 - 3> if target RAT of handover is E-UTRA/5GC; or
 - 3> if the UE is connected to E-UTRA/5GC:
 - 4> if the UE is capable of E-UTRA/5GC but not capable of NGEN-DC:
 - 5> configure the PDCP entity with the ciphering algorithm and K_{UPenc} key configured/derived as specified in TS 36.331 [10];
 - 4> else (i.e., a UE capable of NGEN-DC):
 - 5> configure the PDCP entity with the ciphering algorithms according to *securityConfig* and apply the key (K_{UPenc}) associated with the master key (K_{eNB}) or secondary key ($S-K_{gNB}$) as indicated in *keyToUse*, if applicable;
 - 3> else (i.e., UE connected to NR or UE connected to E-UTRA/EPC):
 - 4> configure the PDCP entity with the ciphering algorithms according to *securityConfig* and apply the K_{UPenc} key associated with the master key (K_{eNB}/K_{gNB}) or the secondary key ($S-K_{gNB}/S-K_{eNB}$) as indicated in *keyToUse*;
 - 2> if the PDCP entity of this DRB is configured with *integrityProtection*:
 - 3> configure the PDCP entity with the integrity protection algorithms according to *securityConfig* and apply the K_{UPint} key associated with the master (K_{eNB}/K_{gNB}) or the secondary key ($S-K_{gNB}$) as indicated in *keyToUse*;
 - 2> if an *sdap-Config* is included:
 - 3> if an SDAP entity with the received *pdu-Session* does not exist:
 - 4> establish an SDAP entity as specified in TS 37.324 [24] clause 5.1.1;
 - 4> if an SDAP entity with the received *pdu-Session* did not exist prior to receiving this reconfiguration:
 - 5> indicate the establishment of the user plane resources for the *pdu-Session* to upper layers;
 - 3> configure the SDAP entity in accordance with the received *sdap-Config* as specified in TS 37.324 [24] and associate the DRB with the SDAP entity;
 - 3> for each QFI value added in *mappedQoS-FlowsToAdd*, if the QFI value is previously configured, the QFI value is released from the old DRB;
 - 2> if the DRB is associated with an *eps-BearerIdentity*:
 - 3> if the DRB was configured with the same *eps-BearerIdentity* either by NR or E-UTRA prior to receiving this reconfiguration:
 - 4> associate the established DRB with the corresponding *eps-BearerIdentity*;

- 3> else:
 - 4> indicate the establishment of the DRB(s) and the *eps-BearerIdentity* of the established DRB(s) to upper layers;
- 2> if the *n3c-BearerAssociated* is included for a DRB:
 - 3> consider this radio bearer to be associated with the N3C indirect path;
- 1> for each *drb-Identity* value included in the *drb-ToAddModList* that is part of the current UE configuration and configured as DAPS bearer:
 - 2> reconfigure the PDCP entity to configure DAPS with the ciphering function, integrity protection function and ROHC function of the target cell group as specified in TS 38.323 [5] and configure it in accordance with the received *pdcp-Config*;
 - 2> if the *masterKeyUpdate* is received:
 - 3> if the ciphering function of the target cell group PDCP entity is not configured with *cipheringDisabled*:
 - 4> configure the ciphering function of the target cell group PDCP entity with the ciphering algorithm according to *securityConfig* and apply the K_{UPenc} key associated with the master key (K_{gNB}), as indicated in *keyToUse*, i.e. the ciphering configuration shall be applied to all subsequent PDCP PDUs received from the target cell group and sent to the target cell group by the UE;
 - 3> if the integrity protection function of the target cell group PDCP entity is configured with *integrityProtection*:
 - 4> configure the integrity protection function of the target cell group PDCP entity with the integrity protection algorithms according to *securityConfig* and apply the K_{UPint} key associated with the master key (K_{gNB}) as indicated in *keyToUse*;
 - 2> else:
 - 3> configure the ciphering function and the integrity protection function of the target cell group PDCP entity with the same security configuration as the PDCP entity for the source cell group;
 - 2> if the *sdap-Config* is included and when indication of successful completion of random access towards target cell is received from lower layers as specified in [3]:
 - 3> reconfigure the SDAP entity in accordance with the received *sdap-Config* as specified in TS 37.324 [24];
 - 3> for each QFI value added in *mappedQoS-FlowsToAdd*, if the QFI value is previously configured, the QFI value is released from the old DRB;
 - 1> for each *drb-Identity* value included in the *drb-ToAddModList* that is part of the current UE configuration and not configured as DAPS bearer:
 - 2> if the *reestablishPDCP* is set:
 - 3> if target RAT of handover is E-UTRA/5GC; or
 - 3> if the UE is connected to E-UTRA/5GC:
 - 4> if the UE is capable of E-UTRA/5GC but not capable of NGEN-DC:
 - 5> if the PDCP entity of this DRB is not configured with *cipheringDisabled*:
 - 6> configure the PDCP entity with the ciphering algorithm and K_{UPenc} key configured/derived as specified in TS 36.331 [10], clause 5.4.2.3, i.e. the ciphering configuration shall be applied to all subsequent PDCP PDUs received and sent by the UE;
 - 4> else (i.e., a UE capable of NGEN-DC):
 - 5> if the PDCP entity of this DRB is not configured with *cipheringDisabled*:

- 6> configure the PDCP entity with the ciphering algorithm and K_{UPenc} key associated with the master key (K_{eNB}) or the secondary key ($S-K_{gNB}$), as indicated in *keyToUse*, i.e. the ciphering configuration shall be applied to all subsequent PDCP PDUs received and sent by the UE;
- 3> else (i.e., UE connected to NR or UE connected to E-UTRA/EPC (in EN-DC or capable of EN-DC)):
 - 4> if the PDCP entity of this DRB is not configured with *cipheringDisabled*:
 - 5> configure the PDCP entity with the ciphering algorithm and K_{UPenc} key associated with the master key (K_{eNB}/K_{gNB}) or the secondary key ($S-K_{gNB}/S-K_{eNB}$), as indicated in *keyToUse*, i.e. the ciphering configuration shall be applied to all subsequent PDCP PDUs received and sent by the UE;
 - 4> if the PDCP entity of this DRB is configured with *integrityProtection*:
 - 5> configure the PDCP entity with the integrity protection algorithms according to *securityConfig* and apply the K_{UPint} key associated with the master key (K_{eNB}/K_{gNB}) or the secondary key ($S-K_{gNB}$) as indicated in *keyToUse*;
- 3> if *drb-ContinueROHC* is included in *pdcp-Config*:
 - 4> indicate to lower layer that *drb-ContinueROHC* is configured;
- 3> if *drb-ContinueEHC-DL* is included in *pdcp-Config*:
 - 4> indicate to lower layer that *drb-ContinueEHC-DL* is configured;
- 3> if *drb-ContinueEHC-UL* is included in *pdcp-Config*:
 - 4> indicate to lower layer that *drb-ContinueEHC-UL* is configured;
- 3> if *drb-ContinueUDC* is included in *pdcp-Config*:
 - 4> indicate to lower layer that *drb-ContinueUDC* is configured;
- 3> re-establish the PDCP entity of this DRB as specified in TS 38.323 [5], clause 5.1.2;
- 2> else, if the *recoverPDCP* is set:
 - 3> trigger the PDCP entity of this DRB to perform data recovery as specified in TS 38.323 [5];
- 2> if the *pdcp-Config* is included:
 - 3> reconfigure the PDCP entity in accordance with the received *pdcp-Config*.
- 2> if the *sdap-Config* is included:
 - 3> reconfigure the SDAP entity in accordance with the received *sdap-Config* as specified in TS37.324 [24];
 - 3> for each QFI value added in *mappedQoS-FlowsToAdd*, if the QFI value is previously configured, the QFI value is released from the old DRB;
- 2> if the *n3c-BearerAssociated* is included for a DRB:
 - 3> consider this radio bearer to be associated with the N3C indirect path;

NOTE 1: Void.

NOTE 2: When determining whether a *drb-Identity* value is part of the current UE configuration, the UE does not distinguish which *RadioBearerConfig* and *DRB-ToAddModList* that DRB was originally configured in. To re-associate a DRB with a different key (K_{eNB} to $S-K_{gNB}$, K_{gNB} to $S-K_{eNB}$, K_{gNB} to $S-K_{gNB}$, or vice versa), the network provides the *drb-Identity* value in the (target) *drb-ToAddModList* and sets the *reestablishPDCP* flag. The network does not list the *drb-Identity* in the (source) *drb-ToReleaseList*.

NOTE 3: When setting the *reestablishPDCP* flag for a radio bearer, the network ensures that the RLC receiver entities do not deliver old PDCP PDUs to the re-established PDCP entity. It does that e.g. by triggering a reconfiguration with sync of the cell group hosting the old RLC entity or by releasing the old RLC entity.

NOTE 4: In this specification, UE configuration refers to the parameters configured by NR RRC unless otherwise stated.

NOTE 5: Ciphering and integrity protection can be enabled or disabled for a DRB. The enabling/disabling of ciphering or integrity protection can be changed only by releasing and adding the DRB.

NOTE 6: In DAPS handover, the UE may perform PDCP entity re-establishment (if *reestablishPDCP* is set) or the PDCP data recovery (if *recoverPDCP* is set) for a non-DAPS bearer when indication of successful completion of random access towards target cell is received from lower layers as specified in TS 38.321 [3]. In this case, the UE suspends data transmission and reception for all non-DAPS bearers in the source MCG for duration of the DAPS handover.

5.3.5.6.6 Multicast MRB release

The UE shall:

- 1> for each *mrbs-Identity* value included in the *mrbs-ToReleaseList* that is part of the current UE configuration; or
- 1> for each *mrbs-Identity* value that is to be released as the result of full configuration according to 5.3.5.11:
 - 2> release the PDCP entity and the *mrbs-Identity*;

NOTE 1: The UE does not consider the message as erroneous if the *mrbs-ToReleaseList* includes any *mrbs-Identity* value that is not part of the current UE configuration.

NOTE 2: Whether or not the RLC and MAC entities associated with this PDCP entity are reset or released is determined by the *CellGroupConfig*.

5.3.5.6.7 Multicast MRB addition/modification

The UE shall for each element in the order of entry in the list *mrbs-ToAddModList*:

- 1> if *mrbs-Identity* value included in the *mrbs-ToAddModList* is part of the UE configuration:
 - 2> if *mrbs-Identity* value included in the *mrbs-ToAddModList* for which *mrbs-IdentityNew* is included (i.e., multicast MRB ID change):
 - 3> update the *mrbs-Identity* to the value *mrbs-IdentityNew*;
 - 2> if the *reestablishPDCP* is set:
 - 3> if *drb-ContinueROHC* is included in *pdcp-Config*:
 - 4> indicate to lower layer that *drb-ContinueROHC* is configured;
 - 3> if *drb-ContinueEHC-DL* is included in *pdcp-Config*:
 - 4> indicate to lower layer that *drb-ContinueEHC-DL* is configured;
 - 3> re-establish the PDCP entity of this multicast MRB as specified in TS 38.323 [5], clause 5.1.2;
 - 2> else, if the *recoverPDCP* is set:
 - 3> trigger the PDCP entity of this MRB to perform data recovery as specified in TS 38.323 [5];
 - 2> if the *pdcp-Config* is included:
 - 3> reconfigure the PDCP entity in accordance with the received *pdcp-Config*;
- 1> else if *mrbs-Identity* value included in the *mrbs-ToAddModList* is not part of the UE configuration (i.e., multicast MRB establishment including the case when full configuration option is used):
 - 2> establish a PDCP entity and configure it in accordance with the received *pdcp-Config*;
 - 2> associate the established multicast MRB with the corresponding *mbs-SessionId*;

- 2> if an SDAP entity with the received *mbs-SessionId* does not exist:
 - 3> establish an SDAP entity as specified in TS 37.324 [24] clause 5.1.1;
 - 3> if an SDAP entity with the received *mbs-SessionId* did not exist prior to receiving this reconfiguration:
 - 4> indicate the establishment of the user plane resources for the *mbs-SessionId* to upper layers.

NOTE 1: When setting the *reestablishPDCP* flag for a radio bearer, the network ensures that the RLC receiver entities do not deliver old PDCP PDUs to the re-established PDCP entity. The network does that e.g. by triggering a reconfiguration with sync of the cell group hosting the old RLC entity or by releasing the old RLC entity.

NOTE 2: In this specification, UE configuration refers to the parameters configured by NR RRC unless otherwise stated.

NOTE 3: When updating the *mrb-Identity*, the network ensures new MRBs are listed at the end of the *mrb-ToAddModList* if they have the same MRB ID as in the existing UE configuration.

5.3.5.7 AS Security key update

The UE shall:

- 1> if UE is connected to E-UTRA/EPC or E-UTRA/5GC:
 - 2> upon reception of *sk-Counter* as specified in TS 36.331 [10]:
 - 3> update the $S\text{-}K_{gNB}$ key based on the K_{eNB} key and using the received *sk-Counter* value, as specified in TS 33.401 [30] for EN-DC, or TS 33.501 [11] for NGEN-DC;
 - 3> derive the K_{RRCEnc} and K_{UPenc} keys as specified in TS 33.401 [30] for EN-DC, or TS 33.501 [11] for NGEN-DC;
 - 3> derive the K_{RRCint} and K_{UPint} keys as specified in TS 33.401 [30] for EN-DC or TS 33.501 [11] for NGEN-DC.
- 1> else if this procedure was initiated due to reception of the *masterKeyUpdate*:
 - 2> if the *nas-Container* is included in the received *masterKeyUpdate*:
 - 3> forward the *nas-Container* to the upper layers;
 - 2> if the *keySetChangeIndicator* is set to *true*:
 - 3> derive or update the K_{gNB} key based on the K_{AMF} key, as specified in TS 33.501 [11];
 - 2> else:
 - 3> derive or update the K_{gNB} key based on the current K_{gNB} key or the NH, using the *nextHopChainingCount* value indicated in the received *masterKeyUpdate*, as specified in TS 33.501 [11];
 - 2> store the *nextHopChainingCount* value;
 - 2> derive the keys associated with the K_{gNB} key as follows:
 - 3> if the *securityAlgorithmConfig* is included in *SecurityConfig*:
 - 4> derive the K_{RRCEnc} and K_{UPenc} keys associated with the *cipheringAlgorithm* indicated in the *securityAlgorithmConfig*, as specified in TS 33.501 [11];
 - 4> derive the K_{RRCint} and K_{UPint} keys associated with the *integrityProtAlgorithm* indicated in the *securityAlgorithmConfig*, as specified in TS 33.501 [11];
 - 3> else:
 - 4> derive the K_{RRCEnc} and K_{UPenc} keys associated with the current *cipheringAlgorithm*, as specified in TS 33.501 [11];

- 4> derive the K_{RRInt} and K_{UPint} keys associated with the current *integrityProtAlgorithm*, as specified in TS 33.501 [11].

NOTE 1: Ciphering and integrity protection are optional to configure for the DRBs.

- 1> else if this procedure was initiated due to reception of the *sk-Counter* (UE is in NE-DC, or NR-DC, or is configured with SN terminated bearer(s)) or if the procedure was initiated due to selection of an *sk-Counter* for conditional reconfiguration execution for subsequent CPAC (UE is in NR-DC):
- 2> derive or update the secondary key ($S-K_{gNB}$ or $S-KeNB$) based on the K_{gNB} key and using the received or selected *sk-Counter* value, as specified in TS 33.501 [11];
- 2> derive the K_{RRenc} key and the K_{UPenc} key as specified in TS 33.501 [11] using the ciphering algorithms indicated in the *RadioBearerConfig* associated with the secondary key ($S-K_{gNB}$ or $S-KeNB$) as indicated by *keyToUse*;
- 2> derive the K_{RRInt} key and the K_{UPint} key as specified in TS 33.501 [11] using the integrity protection algorithms indicated in the *RadioBearerConfig* associated with the secondary key ($S-K_{gNB}$ or $S-KeNB$) as indicated by *keyToUse*;

NOTE 2: If the UE has no radio bearer configured with *keyToUse* set to *secondary* and receives the *sk-Counter* or an *sk-Counter* is selected for subsequent CPAC without any *RadioBearerConfig* with *keyToUse* set to *secondary*, the UE does not consider it as an invalid reconfiguration.

5.3.5.8 Reconfiguration failure

5.3.5.8.1 Void

5.3.5.8.2 Inability to comply with *RRCReconfiguration*

NOTE 00: The UE behaviour specified in this clause does not apply to the following, and the UE ignores, i.e. does not take an action on and does not store, the fields that it does not support or does not comprehend:

- The fields in *ServingCellConfigCommon* that are defined in Rel-16 and later.
- The fields of *searchSpaceMCCCH* and *searchSpaceMTCH* in *PDCCH-ConfigCommon* that are defined in Rel-17 and later.

The UE shall:

- 1> if the UE is in (NG)EN-DC:
- 2> if the UE is unable to comply with (part of) the configuration included in the *RRCReconfiguration* message received over SRB3;
- 3> if the *RRCReconfiguration* message was received as part of *ConditionalReconfiguration*:
- 4> continue using the configuration used prior to when the inability to comply with the *RRCReconfiguration* message was detected;
- 3> else:
- 4> continue using the configuration used prior to the reception of *RRCReconfiguration* message;
- 3> if MCG transmission is not suspended:
- 4> initiate the SCG failure information procedure as specified in clause 5.7.3 to report SCG reconfiguration error, upon which the connection reconfiguration procedure ends;
- 3> else:
- 4> initiate the connection re-establishment procedure as specified in TS 36.331 [10], clause 5.3.7, upon which the connection reconfiguration procedure ends;

2> else, if the UE is unable to comply with (part of) the configuration included in the *RRCReconfiguration* message received over SRB1;

3> if the *RRCReconfiguration* message was received as part of *ConditionalReconfiguration*:

4> continue using the configuration used prior to when the inability to comply with the *RRCReconfiguration* message was detected;

3> else:

4> continue using the configuration used prior to the reception of *RRCReconfiguration* message;

3> initiate the connection re-establishment procedure as specified in TS 36.331 [10], clause 5.3.7, upon which the connection reconfiguration procedure ends.

1> else if *RRCReconfiguration* is received via NR (i.e., NR standalone, NE-DC, or NR-DC):

2> if the UE is unable to comply with (part of) the configuration included in the *RRCReconfiguration* message received over SRB3;

NOTE 0: This case does not apply in NE-DC.

3> if the *RRCReconfiguration* message was received as part of *ConditionalReconfiguration*; or,

3> if the *RRCReconfiguration* message was received as part of *ltm-Config*:

4> continue using the configuration used prior to when the inability to comply with the *RRCReconfiguration* message was detected;

3> else:

4> continue using the configuration used prior to the reception of *RRCReconfiguration* message;

3> if MCG transmission is not suspended:

4> initiate the SCG failure information procedure as specified in clause 5.7.3 to report SCG reconfiguration error, upon which the connection reconfiguration procedure ends;

3> else:

4> initiate the connection re-establishment procedure as specified in clause 5.3.7, upon which the connection reconfiguration procedure ends;

2> else if the UE is unable to comply with (part of) the configuration included in the *RRCReconfiguration* message received over the SRB1 or if the upper layers indicate that the *nas-Container* is invalid:

NOTE 0a: The compliance also covers the SCG configuration carried within octet strings e.g. field *mrdc-SecondaryCellGroupConfig*. I.e. the failure behaviour defined also applies in case the UE cannot comply with the embedded SCG configuration or with the combination of (parts of) the MCG and SCG configurations.

NOTE 0b: The compliance also covers the V2X sidelink configuration carried within an octet string, e.g. field *sl-ConfigDedicatedEUTRA*. I.e. the failure behaviour defined also applies in case the UE cannot comply with the embedded V2X sidelink configuration.

3> if the *RRCReconfiguration* message was received as part of *ConditionalReconfiguration*; or,

3> if the *RRCReconfiguration* message was received as part of *ltm-Config*:

4> continue using the configuration used prior to when the inability to comply with the *RRCReconfiguration* message was detected;

3> else:

4> continue using the configuration used prior to the reception of *RRCReconfiguration* message;

3> if AS security has not been activated:

- 4> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'other'
- 3> else if AS security has been activated but SRB2 and at least one DRB or multicast MRB or, for IAB and NCR, SRB2, have not been setup:
 - 4> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure';
- 3> else:
 - 4> initiate the connection re-establishment procedure as specified in 5.3.7, upon which the reconfiguration procedure ends;
- 1> else if *RRCReconfiguration* is received via other RAT (Handover to NR failure):
 - 2> if the UE is unable to comply with any part of the configuration included in the *RRCReconfiguration* message or if the upper layers indicate that the *nas-Container* is invalid:
 - 3> perform the actions defined for this failure case as defined in the specifications applicable for the other RAT.

NOTE 1: The UE may apply above failure handling also in case the *RRCReconfiguration* message causes a protocol error for which the generic error handling as defined in clause 10 specifies that the UE shall ignore the message.

NOTE 2: If the UE is unable to comply with part of the configuration, it does not apply any part of the configuration, i.e. there is no partial success/failure, except for the MUSIM case (i.e. the UE is configured to provide MUSIM assistance information for temporary capability restriction and is unable to apply (part of) the configuration resulting from *RRCReconfiguration* message due to UE temporary capability restriction for MUSIM operation). For the MUSIM case, the UE does not apply above failure handling, and it is up to UE implementation how to apply *RRCReconfiguration* message. If UE does not perform RRC reconfiguration failure in this case, UE will provide MUSIM assistance information for temporary capability restriction as specified in 5.7.4 and still considers the configuration resulting from *RRCReconfiguration* message as the current configuration and baseline for delta configuration for future reconfigurations.

NOTE 3: It is up to UE implementation whether the compliance check for an *RRCReconfiguration* received as part of *ConditionalReconfiguration* is performed upon the reception of the message or upon CHO, CPA, CPC, and subsequent CPAC execution (when the message is required to be applied).

NOTE 4: It is up to UE implementation whether the compliance check for an *RRCReconfiguration* message received as part of an *LTM-Config* IE is performed upon the reception of the message or during an LTM cell switch procedure (when the message is required to be applied).

5.3.5.8.3 T304 expiry (Reconfiguration with sync Failure) or T420 expiry (Path switch failure)

The UE shall:

- 1> if T304 of the MCG expires; or
- 1> if T420 expires; or,
- 1> if the target L2 U2N Relay UE (i.e., the UE indicated by *targetRelayUE-Identity* in the received *RRCReconfiguration* message containing *reconfigurationWithSync* indicating path switch as specified in 5.3.5.5.2) changes its serving PCell before path switch:
 - 2> release dedicated preambles provided in *rach-ConfigDedicated* if configured;
 - 2> release dedicated msgA PUSCH resources provided in *rach-ConfigDedicated* if configured;
- 2> if any DAPS bearer is configured, and radio link failure is not detected in the source PCell, according to clause 5.3.10.3:
- 3> reset MAC for the target PCell and release the MAC configuration for the target PCell;

- 3> for each DAPS bearer:
 - 4> release the RLC entity or entities as specified in TS 38.322 [4], clause 5.1.3, and the associated logical channel for the target PCell;
 - 4> reconfigure the PDCP entity to release DAPS as specified in TS 38.323 [5];
 - 3> for each SRB:
 - 4> if the *masterKeyUpdate* was not received:
 - 5> configure the PDCP entity for the source PCell with state variables continuation as specified in TS 38.323 [5];
 - 4> release the PDCP entity for the target PCell;
 - 4> release the RLC entity as specified in TS 38.322 [4], clause 5.1.3, and the associated logical channel for the target PCell;
 - 4> trigger the PDCP entity for the source PCell to perform SDU discard as specified in TS 38.323 [5];
 - 4> re-establish the RLC entity for the source PCell;
 - 3> release the physical channel configuration for the target PCell;
 - 3> discard the keys used in target PCell (the K_{gNB} key, the $K_{RRCCenc}$ key, the K_{RRCint} key, the K_{UPint} key and the K_{UPenc} key), if any;
 - 3> resume suspended SRBs in the source PCell;
 - 3> for each non-DAPS bearer:
 - 4> revert back to the UE configuration used for the DRB or multicast MRB in the source PCell, includes PDCP, RLC states variables, the security configuration and the data stored in transmission and reception buffers in PDCP and RLC entities ;
 - 3> revert back to the UE measurement configuration used in the source PCell;
 - 3> store the handover failure information in *VarRLF-Report* as described in the clause 5.3.10.5;
 - 3> initiate the failure information procedure as specified in clause 5.7.5 to report DAPS handover failure.
- 2> else:
- 3> if *attemptLTM-Switch* is configured and the T304 of the MCG expiry is caused by an LTM cell switch execution triggered by an indication from lower layers as described in 5.3.5.18.6:
 - 4> revert back to the UE configuration used in the source PCell except for the PDCP state variables for SRB(s) associated to the MCG;
 - 3> else:
 - 4> revert back to the UE configuration used in the source PCell;
 - 3> if the associated T304 was not initiated upon cell selection performed while timer T311 was running, as defined in clause 5.3.7.3:
 - 4> store the handover failure information in *VarRLF-Report* as described in the clause 5.3.10.5;
 - 3> initiate the connection re-establishment procedure as specified in clause 5.3.7.
- NOTE 1: In the context above, "the UE configuration" includes state variables and parameters of each radio bearer.
- 1> else if T304 of a secondary cell group expires:
- 2> if MCG transmission is not suspended:
 - 3> release dedicated preambles provided in *rach-ConfigDedicated*, if configured;

- 3> release dedicated msgA PUSCH resources provided in *rach-ConfigDedicated*, if configured;
 - 3> initiate the SCG failure information procedure as specified in clause 5.7.3 to report SCG reconfiguration with sync failure, upon which the RRC reconfiguration procedure ends;
 - 2> else:
 - 3> if the UE is in NR-DC:
 - 4> initiate the connection re-establishment procedure as specified in clause 5.3.7;
 - 3> else (the UE is in (NG) EN-DC):
 - 4> initiate the connection re-establishment procedure as specified in TS 36.331 [10], clause 5.3.7;
 - 1> else if T304 expires when *RRCReconfiguration* is received via other RAT (HO to NR failure):
 - 2> reset MAC;
 - 2> perform the actions defined for this failure case as defined in the specifications applicable for the other RAT.
- NOTE 2: In this clause, the term 'handover failure' has been used to refer to 'reconfiguration with sync failure'.

5.3.5.9 Other configuration

The UE shall:

- 1> if the received *otherConfig* includes the *delayBudgetReportingConfig*:
 - 2> if *delayBudgetReportingConfig* is set to *setup*:
 - 3> consider itself to be configured to send delay budget reports in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to send delay budget reports and stop timer T342, if running.
- 1> if the received *otherConfig* includes the *overheatingAssistanceConfig*:
 - 2> if *overheatingAssistanceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide overheating assistance information in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide overheating assistance information and stop timer T345, if running;
- 1> if the received *otherConfig* includes the *idc-AssistanceConfig*:
 - 2> if *idc-AssistanceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide IDC assistance information in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide IDC assistance information;
- 1> if the received *otherConfig* includes the *drx-PreferenceConfig*:
 - 2> if *drx-PreferenceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide its preference on DRX parameters for power saving for the cell group in accordance with 5.7.4;
 - 2> else:

- 3> consider itself not to be configured to provide its preference on DRX parameters for power saving for the cell group and stop timer T346a associated with the cell group, if running;
- 1> if the received *otherConfig* includes the *maxBW-PreferenceConfig*:
 - 2> if *maxBW-PreferenceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide its preference on the maximum aggregated bandwidth for power saving for the cell group in accordance with 5.7.4;
 - 3> if *otherConfig* includes *maxBW-PreferenceConfigFR2-2*:
 - 4> consider itself to be configured to provide its preference on the maximum aggregated bandwidth for FR2-2 for power saving for the cell group in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide its preference on the maximum aggregated bandwidth for power saving for the cell group and stop timer T346b associated with the cell group, if running;
- 1> if the received *otherConfig* includes the *maxCC-PreferenceConfig*:
 - 2> if *maxCC-PreferenceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide its preference on the maximum number of secondary component carriers for power saving for the cell group in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide its preference on the maximum number of secondary component carriers for power saving for the cell group and stop timer T346c associated with the cell group, if running;
- 1> if the received *otherConfig* includes the *maxMIMO-LayerPreferenceConfig*:
 - 2> if *maxMIMO-LayerPreferenceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide its preference on the maximum number of MIMO layers for power saving for the cell group in accordance with 5.7.4;
 - 3> if *otherConfig* includes *maxMIMO-LayerPreferenceConfigFR2-2*:
 - 4> consider itself to be configured to provide its preference on the maximum number of MIMO layers for FR2-2 for power saving for the cell group in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide its preference on the maximum number of MIMO layers for power saving for the cell group and stop timer T346d associated with the cell group, if running;
- 1> if the received *otherConfig* includes the *minSchedulingOffsetPreferenceConfig*:
 - 2> if *minSchedulingOffsetPreferenceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide its preference on the minimum scheduling offset for cross-slot scheduling for power saving for the cell group in accordance with 5.7.4;
 - 3> if *otherConfig* includes *minSchedulingOffsetPreferenceConfigExt*:
 - 4> consider itself to be configured to provide its preference on the minimum scheduling offset for 480 kHz SCS and/or 960 kHz SCS for cross-slot scheduling for power saving for the cell group in accordance with 5.7.4;
 - 2> else:

3> consider itself not to be configured to provide its preference on the minimum scheduling offset for cross-slot scheduling for power saving for the cell group and stop timer T346e associated with the cell group, if running;

1> if the received *otherConfig* includes the *releasePreferenceConfig*:

2> if *releasePreferenceConfig* is set to *setup*:

3> consider itself to be configured to provide assistance information to transition out of RRC_CONNECTED in accordance with 5.7.4;

2> else:

3> consider itself not to be configured to provide assistance information to transition out of RRC_CONNECTED and stop timer T346f, if running.

1> if the received *otherConfig* includes the *obtainCommonLocation*:

2> include available detailed location information for any subsequent measurement report or any subsequent RLF report, *SCGFailureInformation*, successful handover report, and successful PSCell change or addition report (if received for the associated cell group);

NOTE 1: The UE is requested to attempt to have valid detailed location information available whenever sending a measurement report for which it is configured to include available detailed location information. The UE may not succeed e.g. because the user manually disabled the GPS hardware, due to no/poor satellite coverage. Further details, e.g. regarding when to activate GNSS, are up to UE implementation.

1> if the received *otherConfig* includes the *btNameList*:

2> if *btNameList* is set to *setup*, include available Bluetooth measurement results for any subsequent measurement report or any subsequent RLF report and *SCGFailureInformation*;

1> if the received *otherConfig* includes the *wlanNameList*:

2> if *wlanNameList* is set to *setup*, include available WLAN measurement results for any subsequent measurement report or any subsequent RLF report and *SCGFailureInformation*;

1> if the received *otherConfig* includes the *sensorNameList*:

2> if *sensorNameList* is set to *setup*, include available Sensor measurement results for any subsequent measurement report or any subsequent RLF report and *SCGFailureInformation*;

NOTE 2: The UE is requested to attempt to have valid Bluetooth measurements, WLAN measurements and Sensor measurements whenever sending a measurement report for which it is configured to include these measurements. The UE may not succeed e.g. because the user manually disabled the WLAN or Bluetooth or Sensor hardware. Further details, e.g. regarding when to activate WLAN or Bluetooth or Sensor, are up to UE implementation.

1> if the received *otherConfig* includes the *sl-AssistanceConfigNR*:

2> consider itself to be configured to provide configured grant assistance information for NR sidelink communication in accordance with 5.7.4;

1> if the received *otherConfig* includes the *referenceTimePreferenceReporting*:

2> consider itself to be configured to provide UE reference time assistance information in accordance with 5.7.4;

1> else:

2> consider itself not to be configured to provide UE reference time assistance information;

1> if *successHO-Config* is set to *setup*:

2> consider itself to be configured to provide the successful handover information in accordance with 5.7.10.6;

1> else:

- 2> consider itself not to be configured to provide the successful handover information.
- 1> if *sn-initiatedPSCellChange* is not included in the received *otherConfig* and if the *successPSCell-Config* in the received *otherConfig* is set to *setup*:
 - 2> consider itself to be configured by the corresponding cell group to provide the successful PSCell change or addition information in accordance with 5.7.10.7;
- 1> if *sn-initiatedPSCellChange* is included in the received *otherConfig* and if the received *otherConfig* includes *successPSCell-Config* set to *setup* and *thresholdPercentageT304-SCG* is not included; or
- 1> if *sn-initiatedPSCellChange* is included in received *otherConfig* and *successPSCell-Config* is already configured for the SCG:
 - 2> consider itself to be configured by the source PSCell to provide the successful PSCell change or addition information in accordance with 5.7.10.7;
- 1> if *successPSCell-Config* in the received *otherConfig* is set to *setup* and *thresholdPercentageT304-SCG* is included:
 - 2> consider itself to be configured by the target PSCell to provide the successful PSCell change or addition information in accordance with 5.7.10.7
- 1> if the *successPSCell-Config* received in *otherConfig* is set to *release*:
 - 2> consider itself not to be configured by the corresponding cell group to provide the successful PSCell change or addition information.
- 1> if the received *otherConfig* includes the *ul-GapFR2-PreferenceConfig*:
 - 2> consider itself to be configured to provide its preference on FR2 UL gap in accordance with 5.7.4;
- 1> else:
 - 2> consider itself not to be configured to provide its preference on FR2 UL gap;
- 1> if the received *otherConfig* includes the *musim-GapAssistanceConfig*:
 - 2> if *musim-GapAssistanceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide MUSIM assistance information for gap preference in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide MUSIM assistance information for gap preference and stop timer T346h, if running;
- 1> if the received *otherConfig* includes the *musim-LeaveAssistanceConfig*:
 - 2> if *musim-LeaveAssistanceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide MUSIM assistance information for leaving RRC_CONNECTED in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide MUSIM assistance information for leaving RRC_CONNECTED and stop timer T346g, if running.
- 1> if the received *otherConfig* includes the *musim-GapPriorityAssistanceConfig*:
 - 2> consider itself to be configured to provide MUSIM assistance information for gap(s) priority in accordance with 5.7.4;
- 1> else:

- 2> consider itself not to be configured to provide MUSIM assistance information for gap(s) priority;
- 1> if the received *otherConfig* includes the *musim-CapabilityRestrictionConfig*:
 - 2> if *musim-CapabilityRestrictionConfig* is set to *setup*:
 - 3> consider itself to be configured to provide MUSIM assistance information for capability restriction in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide MUSIM assistance information for capability restriction and stop timer T348 and T346n, if running;
- 1> if the received *otherConfig* includes the *rlm-RelaxationReportingConfig*:
 - 2> if *rlm-RelaxationReportingConfig* is set to *setup*:
 - 3> consider itself to be configured to report the relaxation state of RLM measurements in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to report the relaxation state of RLM measurements and stop timer T346j associated with the cell group, if running;
- 1> if the received *otherConfig* includes the *bfd-RelaxationReportingConfig*:
 - 2> if *bfd-RelaxationReportingConfig* is set to *setup*:
 - 3> consider itself to be configured to report the relaxation state of BFD measurements in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to report the relaxation state of BFD measurements and stop timer T346k associated with the cell group, if running;
- 1> if the received *otherConfig* includes the *scg-DeactivationPreferenceConfig*:
 - 2> if the *scg-DeactivationPreferenceConfig* is set to *setup*:
 - 3> consider itself to be configured to provide its SCG deactivation preference in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide its SCG deactivation preference and stop timer T346i, if running.
- 1> if the received *otherConfig* includes the *propDelayDiffReportConfig*:
 - 2> if the *propDelayDiffReportConfig* is set to *setup*:
 - 3> consider itself to be configured to provide service link propagation delay difference between serving cell and neighbour cell(s) in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide service link propagation delay difference between serving cell and neighbour cell(s).
- 1> if the received *otherConfig* includes the *rrm-MeasRelaxationReportingConfig*:
 - 2> if the *rrm-MeasRelaxationReportingConfig* is set to *setup*:
 - 3> consider itself to be configured to report the fulfilment of the criterion for relaxing RRM measurements in accordance with 5.7.4;

- 2> else:
 - 3> consider itself not to be configured to report the fulfilment of the criterion for relaxing RRM measurements.
- 1> if the received *otherConfig* includes the *multiRx-PreferenceReportingConfigFR2*:
 - 2> if the *multiRx-PreferenceReportingConfigFR2* is set to *setup*:
 - 3> consider itself to be configured to provide its preference on multi-Rx operation for FR2 in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide its preference on multi-Rx operation for FR2 and stop timer T346m, if running.
- 1> if the received *otherConfig* includes the *aerial-FlightPathAvailabilityConfig*:
 - 2> consider itself to be configured to indicate the availability of flight path information in accordance with 5.7.4;
- 1> if the received *otherConfig* includes the *ul-TrafficInfoReportingConfig*:
 - 2> if *ul-TrafficInfoReportingConfig* is set to *setup*:
 - 3> consider itself to be configured to provide UL traffic information in accordance with 5.7.4;
 - 2> else:
 - 3> consider itself not to be configured to provide UL traffic information and stop all instances of timer T346l, if running;
- 1> if the received *otherConfig* includes *n3c-RelayUE-InfoReportConfig*:
 - 2> consider itself to be configured to report relay UE information with non-3GPP connection(s).

5.3.5.9a MUSIM gap configuration

The UE shall:

- 1> if *musim-GapConfig* is set to *setup*:
 - 2> for each *musim-GapId* included in the received *musim-GapToReleaseList*:
 - 3> release the periodic MUSIM gap configuration associated with the *musim-GapId*;
 - 2> for each *MUSIM-Gap* included in the received *musim-GapToAddModList*:
 - 3> setup periodic MUSIM gap configuration indicated by the *MUSIM-Gap* in accordance with the received *musim-GapRepetitionAndOffset* (providing *musim-GapRepetition* and *Offset* value for the following condition) i.e. the first subframe of each periodic MUSIM gap occurs at an SFN and subframe of the NR PCell meeting the following condition:

$$\text{SFN mod } T = \text{FLOOR}(\text{Offset}/10);$$

$$\text{subframe} = \text{Offset mod } 10;$$
 with $T = \text{musim-GapRepetition}/10;$
 - 3> set the MUSIM gap priority configuration indicated by *musim-GapToAddModListExt*, if configured, for each periodic MUSIM gap;

NOTE: If network does not configure the relative priorities among MUSIM gaps as indicated by the UE, UE behaviour is not specified.

- 2> if *musim-AperiodicGap* is included:

- 3> setup aperiodic MUSIM gap configuration indicated by the *musim-AperiodicGap* in accordance with the received *musim-Starting-SFN-AndSubframe*, i.e. the first subframe of aperiodic MUSIM gap occurs at an SFN and subframe of the NR PCell meeting the following condition:

SFN = *starting-SFN*;

subframe = *startingSubframe*;

- 2> keep all colliding MUSIM gaps as specified in TS 38.133 [14], if *musim-GapKeep* is configured;
- 1> else if *musim-GapConfig* is set to *release*:
- 2> release the MUSIM gap configuration.

5.3.5.10 MR-DC release

The UE shall:

- 1> as a result of MR-DC release triggered by E-UTRA or NR:
- 2> release SRB3, if established, as specified in 5.3.5.6.2;
- 2> release SRB5, if established, as specified in 5.3.5.6.2;
- 2> release *measConfig* associated with SCG;
- 2> if the UE is configured with NR SCG:
- 3> release the SCG configuration as specified in clause 5.3.5.4;
- 3> if this procedure is initiated due to the reception of *mrdc-ReleaseAndAdd*:
- 4> release *otherConfig* associated with the SCG except the *successPSCell-Config* configured by the source PSCell, if configured;
- 3> else:
- 4> release *otherConfig* associated with the SCG, if configured;
- 4> release *successPSCell-Config* configured by the PCell in the *otherConfig*, if configured;
- 3> stop timers T346a, T346b, T346c, T346d, T346e, T346j and T346k associated with the SCG, if running;
- 3> release *bap-Config* associated with the SCG, if configured;
- 3> release the BAP entity as specified in TS 38.340 [47], if there is no configured *bap-Config*;
- 3> release *iab-IP-AddressConfigurationList* associated with the SCG, if configured;
- 3> perform the LTM configuration release procedure for the SCG as specified in clause 5.3.5.18.7;
- 2> else if the UE is configured with E-UTRA SCG:
- 3> release the SCG configuration as specified in TS 36.331 [10], clause 5.3.10.19 to release the E-UTRA SCG;

5.3.5.11 Full configuration

The UE shall:

- 1> release/ clear all current dedicated radio configurations except for the following:
- the MCG C-RNTI;
 - the AS security configurations associated with the master key;

- the SRB1/SRB2 configurations and DRB/multicast MRB configurations as configured by *radioBearerConfig* or *radioBearerConfig2*.

NOTE 1: Radio configuration is not just the resource configuration but includes other configurations like *MeasConfig*. Radio configuration also includes the RLC bearer configurations as configured by *RLC-BearerConfig*, PC5 Relay RLC channel as configured by *SL-RLC-ChannelConfig*, and Uu Relay RLC channel as configured by *Uu-RelayRLC-ChannelConfig*. In case NR-DC or NE-DC is configured, this also includes the entire NR or E-UTRA SCG configuration which are released according to the MR-DC release procedure as specified in 5.3.5.10.

NOTE 1a: For NR sidelink communication/discovery, the radio configuration includes the sidelink RRC configuration received from the network, but does not include the sidelink RRC reconfiguration and sidelink UE capability received from other UEs via PC5-RRC. In addition, the UE considers the new NR sidelink configurations as full configuration, in case of state transition and change of system information used for NR sidelink communication/discovery.

NOTE 1b: To establish the RLC bearer of SRB(s) after release due to *fullConfig*, the network can include the *srb-Identity* within *srb-ToAddModList* (i.e. the UE applies RLC default configuration) and/or provide *rlc-BearerToAddModList* of concerned SRB(s) explicitly.

- the logged measurement configuration;
- the *successHO-Config*;
- the *successPSCell-Config*.

1> if the *spCellConfig* in the *masterCellGroup* includes the *reconfigurationWithSync*:

2> release/ clear all current common radio configurations;

2> if *sl-PathSwitchConfig* was included in *reconfigurationWithSync*:

3> use the default values specified in 9.2.3 for timer T311;

2> else:

3> use the default values specified in 9.2.3 for timers T310, T311 and constants N310, N311;

1> else (full configuration after re-establishment or during RRC resume):

2> if the UE is acting as L2 U2N Remote UE:

3> use value for timer T311, as included in *ue-TimersAndConstants* received in *SIB1*

2> else:

3> use values for timers T301, T310, T311 and constants N310, N311, as included in *ue-TimersAndConstants* received in *SIB1*;

1> if no *measConfigAppLayerId* is included:

2> inform upper layers about the release of all application layer measurement configurations;

2> release all application layer measurement configurations including their fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*, if stored;

2> discard any received application layer measurement reports from upper layers;

2> consider itself not to be configured to send application layer measurement reports;

1> if the UE is acting as L2 U2N Remote UE at the target side during reconfiguration with sync, or after re-establishment, or during RRC resume:

2> apply the default configuration of SL-RLC1 as specified in clause 9.2.4 and associate it with the SRB1;

1> else:

2> apply the default L1 parameter values as specified in corresponding physical layer specifications except for the following:

- parameters for which values are provided in *SIB1*;

2> apply the default MAC Cell Group configuration as specified in 9.2.2;

2> for each *srb-Identity* value included in the *srb-ToAddModList* (SRB reconfiguration):

3> establish an RLC entity for the corresponding SRB;

3> apply the default SRB configuration defined in 9.2.1 for the corresponding SRB;

NOTE 2: This is to get the SRBs (SRB1 and SRB2 for reconfiguration with sync and SRB2 for resume and reconfiguration after re-establishment) to a known state from which the reconfiguration message can do further configuration.

1> for each *pdu-Session* that is part of the current UE configuration:

2> release the SDAP entity (clause 5.1.2 in TS 37.324 [24]);

2> release each DRB associated to the *pdu-Session* as specified in 5.3.5.6.4;

NOTE 3: This will retain the *pdu-Session* but remove the DRBs including *drb-identity* of these bearers from the current UE configuration. Setup of the DRBs within the AS is described in clause 5.3.5.6.5 using the new configuration. The *pdu-Session* acts as the anchor for associating the released and re-setup DRB. In the AS the DRB re-setup is equivalent with a new DRB setup (including new PDCP and logical channel configurations).

1> for each *mbs-SessionId* that is part of the current UE configuration and associated to a multicast MRB:

2> release the SDAP entity (clause 5.1.2 in TS 37.324 [24]);

2> release each multicast MRB associated to the *mbs-SessionId* as specified in 5.3.5.6.6;

NOTE 4: This will retain the *mbs-SessionId* but remove the multicast MRBs including *mrbs-identity* of these bearers from the current UE configuration. Setup of the multicast MRBs within the AS is described in clause 5.3.5.6.7 using the new configuration. The *mbs-SessionId* acts as the anchor for associating the released and re-setup multicast MRB. In the AS the multicast MRB re-setup is equivalent with a new multicast MRB setup (including new PDCP and logical channel configurations).

1> for each *pdu-Session* that is part of the current UE configuration but not added with same *pdu-Session* in the *drb-ToAddModList*:

2> if the procedure was triggered due to reconfiguration with sync:

3> indicate the release of the user plane resources for the *pdu-Session* to upper layers after successful reconfiguration with sync;

2> else:

3> indicate the release of the user plane resources for the *pdu-Session* to upper layers immediately;

1> for each *mbs-SessionId* that is part of the current UE configuration but not added with the same *mbs-SessionId* in the *mrbs-ToAddModList*:

2> if the procedure was triggered due to reconfiguration with sync:

3> indicate the release of the user plane resources for the *mbs-SessionId* to upper layers after successful reconfiguration with sync;

2> else:

3> indicate the release of the user plane resources for the *mbs-SessionId* to upper layers immediately.

5.3.5.12 BAP configuration

The IAB-MT shall:

- 1> if the *bap-Config* is set to *setup*:
 - 2> if no BAP entity is established:
 - 3> establish a BAP entity as specified in TS 38.340 [47];
 - 2> if *bap-Address* is included:
 - 3> configure the BAP entity to use the *bap-Address* as this node's BAP address;
 - 2> if *defaultUL-BAP-RoutingID* is included:
 - 3> configure the BAP entity to apply the default UL BAP routing ID according to the configuration;
 - 2> if *defaultUL-BH-RLC-Channel* is included:
 - 3> configure the BAP entity to apply the default UL BH RLC channel according to the configuration;
 - 2> if *flowControlFeedbackType* is included:
 - 3> configure the BAP entity to apply the flow control feedback according to the configuration;
- 1> if the *bap-Config* is set to *release*:
 - 2> release the concerned *bap-Config*;
 - 2> if there is no other configured *bap-Config* for the MCG or for the SCG:
 - 3> release the BAP entity as specified in TS 38.340 [47].

5.3.5.12a IAB Other Configuration

5.3.5.12a.1 IP address management

5.3.5.12a.1.1 IP Address Release

The IAB-MT shall:

- 1> if the release is triggered by reception of the *iab-IP-AddressToReleaseList*:
 - 2> for each *iab-IP-AddressIndex* value included in *iab-IP-AddressToReleaseList*:
 - 3> release the corresponding *IAB-IP-AddressConfiguration*.

5.3.5.12a.1.2 IP Address Addition/Modification

The IAB-MT shall:

- 1> for each *iab-IP-AddressIndex* value included in the *iab-IP-AddressToAddModList* that is not part of the current IAB-MT configuration:
 - 2> add the IP address indicated in *iab-IP-Address*, corresponding to the *iab-IP-AddressIndex*.
- 2> if added IP address is *IPv4-Address*:
 - 3> if *iab-IP-Usage* is set to *f1-C*:
 - 4> store the received IPv4 address for F1-C traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
 - 3> else if *iab-IP-Usage* is set to *f1-U*:

- 4> store the received IPv4 address for F1-U traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
- 3> else if *iab-IP-Usage* is set to *non-F1*:
 - 4> store the received IPv4 address for non-F1 traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
- 3> else:
 - 4> store the received IPv4 address for all traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
- 2> else if *iIPv6-Address* is included:
 - 3> if *iab-IP-Usage* is set to *f1-C*:
 - 4> store the received IPv6 address for F1-C traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
 - 3> else if *iab-IP-Usage* is set to *f1-U*:
 - 4> store the received IPv6 address for F1-U traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
 - 3> else if *iab-IP-Usage* is set to *non-F1*:
 - 4> store the received IPv6 address for non-F1 traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
 - 3> else:
 - 4> store the received IPv6 address for all traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
- 2> else if *iIPv6-Prefix* is included in *iab-IP-AddressToAddModList*:
 - 3> if *iab-IP-Usage* is set to *f1-C*:
 - 4> store the received IPv6 address prefix for F1-C traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
 - 3> else if *iab-IP-Usage* is set to *f1-U*:
 - 4> store the received IPv6 address prefix for F1-U traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
 - 3> else if *iab-IP-Usage* is set to *non-F1*:
 - 4> store the received IPv6 address prefix for non-F1 traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
 - 3> else:
 - 4> store the received IPv6 address prefix for all traffic together with the IAB-donor-DU BAP address corresponding to the *iab-IP-AddressIndex*.
- 1> for each *iab-IP-AddressIndex* value included in the *iab-IP-AddressToAddModList* that is part of the current IAB-MT configuration:
 - 2> modify the IP address configuration(s) in accordance with the *IAB-IP-AddressConfiguration* corresponding to the *iab-IP-AddressIndex*.

5.3.5.13 Conditional Reconfiguration

5.3.5.13.1 General

The network configures the UE with one or more candidate target SpCells in the conditional reconfiguration. The UE evaluates the condition of each configured candidate target SpCell. The UE applies the conditional reconfiguration associated with one of the target SpCells which fulfils associated execution condition.

The network can also configure the UE with one or more candidate target PCells associated with one or more candidate target PSCells. The UE evaluates the conditions for the candidate target PCells and the associated candidate target PSCells in parallel and applies a target configuration that include PCell and PSCell for which the associated execution conditions are fulfilled. If there are multiple candidate PSCells associated with one candidate target PCell, the network provides multiple conditional configurations for the same candidate target PCell, i.e., each configuration contains one MCG configuration (for the same candidate target PCell) and one SCG configuration (for one of the multiple associated candidate PSCells). For this case, the network may also provide a complementary CHO only configuration, i.e., there is execution condition only for candidate PCell.

The network provides the configuration parameters for the target SpCell(s) in the *condRRCReconfig*.

In NR-DC, the UE may receive two independent *conditionalReconfiguration*:

- a *conditionalReconfiguration* associated with MCG, that is included in the *RRCReconfiguration* message received via SRB1; and
- a *conditionalReconfiguration*, associated with SCG, that is included in the *RRCReconfiguration* message received via SRB3, or, alternatively, included within a *RRCReconfiguration* message embedded in a *RRCReconfiguration* message received via SRB1.

In this case:

- the UE maintains two independent *VarConditionalReconfig*, one associated with each *conditionalReconfiguration*;
- the UE independently performs all the procedures in clause 5.3.5.13 for each *conditionalReconfiguration* and the associated *VarConditionalReconfig*, unless explicitly stated otherwise;
- the UE performs the procedures in clause 5.5 for the *VarConditionalReconfig* associated with the same cell group like the *measConfig*.

In EN-DC, the *VarConditionalReconfig* is associated with the SCG.

In NE-DC and when no SCG is configured, the *VarConditionalReconfig* is associated with the MCG.

The UE performs the following actions based on a received *ConditionalReconfiguration* IE:

- 1> if the *ConditionalReconfiguration* contains the *condReconfigToRemoveList*:
 - 2> perform conditional reconfiguration removal procedure as specified in 5.3.5.13.2;
- 1> if the *ConditionalReconfiguration* contains the *condReconfigToAddModList*:
 - 2> perform conditional reconfiguration addition/modification as specified in 5.3.5.13.3;
- 1> if the *ConditionalReconfiguration* contains the *scpac-ReferenceConfiguration*:
 - 2> perform subsequent CPAC reference configuration addition/removal as specified in 5.3.5.13.6;
- 1> if the *ConditionalReconfiguration* contains the *sk-CounterConfiguration*:
 - 2> perform *sk-CounterList* addition/modification/removal as specified in 5.3.5.13.7;
- 1> if the *ConditionalReconfiguration* contains the *servingSecurityCellSetId*:
 - 2> if the current *VarServingSecurityCellSetID* includes *servingSecurityCellSetId*:

3> replace the *servingSecurityCellSetId* value within *VarServingSecurityCellSetID* with the received *servingSecurityCellSetID*;

2> else:

3> store the received *servingSecurityCellSetId* within *VarServingSecurityCellSetID*.

5.3.5.13.2 Conditional reconfiguration removal

The UE shall:

1> for each *condReconfigId* value included in the *condReconfigToRemoveList* that is part of the current UE conditional reconfiguration in *VarConditionalReconfig*:

2> remove the entry with the matching *condReconfigId* from the *VarConditionalReconfig*;

NOTE 1: The UE does not consider the message as erroneous if the *condReconfigToRemoveList* includes any *condReconfigId* value that is not part of the current UE configuration.

NOTE 2: Void.

5.3.5.13.3 Conditional reconfiguration addition/modification

For each *condReconfigId* received in the *condReconfigToAddModList* IE the UE shall:

1> if an entry with the matching *condReconfigId* exists in the *condReconfigToAddModList* within the *VarConditionalReconfig*:

2> if the entry in *condReconfigToAddModList* includes an *condExecutionCond*, *condExecutionCondSCG*, or *condExecutionCondPSCell*;

3> replace *condExecutionCond*, *condExecutionCondSCG*, or *condExecutionCondPSCell* within the *VarConditionalReconfig* with the value received for this *condReconfigId*;

2> if the entry in *condReconfigToAddModList* includes *subsequentCondReconfig* containing *condExecutionCondToAddModList*:

3> for each *condReconfigId* received in *condExecutionCondToAddModList*:

4> if an entry with the matching *condReconfigId* exists in the *condExecutionCondToAddModList* within *VarConditionalReconfig*;

5> replace the entry in *condExecutionCondToAddModList* within *VarConditionalReconfig* with the value received for this *condReconfigId*;

4> else:

5> add a new entry in *condExecutionCondToAddModList* within *VarConditionalReconfig* with the value received for this *condReconfigId*;

2> if the entry in *condReconfigToAddModList* includes *subsequentCondReconfig* containing *condExecutionCondToReleaseList*:

3> for each *condReconfigId* received in *condExecutionCondToReleaseList* that is part of current stored *condExecutionCondToAddModList* within *VarConditionalReconfig*:

4> remove the entry in *condExecutionCondToAddModList* within *VarConditionalReconfig* with the value received for this *condReconfigId*;

NOTE 1: The UE does not consider the message as erroneous if the *condExecutionCondToReleaseList* includes any *condReconfigId* value that is not part of the current UE configuration.

2> if the entry in *condReconfigToAddModList* includes a *securityCellSetId*;

3> replace *securityCellSetId* within the *VarConditionalReconfig* with the value received for this *condReconfigId*;

NOTE 2: The UE should release the entry within *VarServingSecurityCellSetID* in case all the subsequent CPAC configurations are released.

- 2> if the entry in *condReconfigToAddModList* includes a *condRRCREconfig*;
 - 3> replace *condRRCREconfig* within the *VarConditionalReconfig* with the value received for this *condReconfigId*;
- 1> else:
 - 2> add a new entry for this *condReconfigId* within the *VarConditionalReconfig*;
- 1> perform conditional reconfiguration evaluation as specified in 5.3.5.13.4;

5.3.5.13.4 Conditional reconfiguration evaluation

The UE shall:

- 1> for each *condReconfigId* within the *VarConditionalReconfig*:
 - 2> if the *RRCREconfiguration* within *condRRCREconfig* includes the *masterCellGroup* including the *reconfigurationWithSync*:
 - 3> if the associated *condExecutionCondPSCell* is configured:
 - 4> consider the cell which has a physical cell identity matching the value indicated in the *ServingCellConfigCommon* included in the *reconfigurationWithSync* within the *masterCellGroup* in the received *condRRCREconfig* to be applicable cell; and
 - 4> consider the cell which has a physical cell identity matching the value indicated in the *ServingCellConfigCommon* included in the *reconfigurationWithSync* within the *secondaryCellGroup* within the *nr-SCG* within the received *condRRCREconfig* to be applicable cell;
 - 3> else:
 - 4> consider the cell which has a physical cell identity matching the value indicated in the *ServingCellConfigCommon* included in the *reconfigurationWithSync* within the *masterCellGroup* in the received *condRRCREconfig* to be applicable cell;
 - 2> else if the *RRCREconfiguration* within *condRRCREconfig* includes the *secondaryCellGroup* including the *reconfigurationWithSync*:
 - 3> if the cell which has a physical cell identity matching the value indicated in the *ServingCellConfigCommon* included in the *reconfigurationWithSync* within the *secondaryCellGroup* within the received *condRRCREconfig* is not the PSCell:
 - 4> if *subsequentCondReconfig* is not included for the *condReconfigId*; or
 - 4> if *subsequentCondReconfig* is not included for the PSCell; or
 - 4> if *subsequentCondReconfig* is included for the *condReconfigId* and there is a *subsequentCondReconfig* for the PSCell with a matching *condReconfigId* value in *condExecutionCondToAddModList*:
 - 5> consider the cell to be applicable cell;

NOTE 0: For CHO configured with only *condEventD1*, *condEventD2* or *condEventT1* (without any RRM measurement event), it is up to UE implementation whether and how to detect the applicable cell.

- 2> if *condExecutionCondSCG* is configured:
 - 3> in the remainder of the procedure, consider each *measId* indicated in the *condExecutionCondSCG* as a *measId* in the *VarMeasConfig* associated with the SCG *measConfig*;
- 2> if the *condExecutionCondPSCell* is configured:

- 3> in the remainder of the procedure, consider each *measId* indicated in the *condExecutionCondPSCell* as a *measId* in the *VarMeasConfig* associated with the MCG *measConfig*;
- 2> if *condExecutionCond* is configured:
 - 3> if it is configured via SRB3 or configured within *nr-SCG* or within *nr-SecondaryCellGroupConfig* (specified in TS 36.331[10]) via SRB1:
 - 4> in the remainder of the procedure, consider each *measId* indicated in the *condExecutionCond* as a *measId* in the *VarMeasConfig* associated with the SCG *measConfig*;
 - 3> else:
 - 4> in the remainder of the procedure, consider each *measId* indicated in the *condExecutionCond* as a *measId* in the *VarMeasConfig* associated with the MCG *measConfig*;
- 2> for each *measId* included in the *measIdList* within *VarMeasConfig* indicated in the *condExecutionCond*, *condExecutionCondSCG*, or *condExecutionCondPSCell* of the *condReconfigId*:
 - 3> if *condExecutionCond*, *condExecutionCondSCG*, and *subsequentCondReconfig* are included for the *condReconfigId*:
 - 4> ignore the *measId(s)* in the *condExecutionCond* of the *condReconfigId*;
 - 3> if the *condTriggerConfig* is not configured with *nesEvent*:
 - 4> if the *condEventId* is associated with *condEventT1*, and if the entry condition applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cell; or
 - 4> if the *condEventId* is associated with *condEventD1* or *condEventD2*, and if the entry conditions applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cell during the corresponding *timeToTrigger* defined for this event within the *VarConditionalReconfig*; or
 - 4> if the *condEventId* is associated with *condEventA3*, *condEventA4* or *condEventA5*, and if the entry condition(s) applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cells for all measurements after layer 3 filtering taken during the corresponding *timeToTrigger* defined for this event within the *VarConditionalReconfig*:
 - 5> consider the event associated to that *measId* to be fulfilled;
 - 4> if the *measId* for this event associated with the *condReconfigId* has been modified; or
 - 4> if the *condEventId* is associated with *condEventT1*, and if the leaving condition applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cell; or
 - 4> if the *condEventId* is associated with *condEventD1* or *condEventD2*, and if the leaving condition(s) applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cell during the corresponding *timeToTrigger* defined for this event within the *VarConditionalReconfig*; or
 - 4> if the *condEventId* is associated with *condEventA3*, *condEventA4* or *condEventA5*, and if the leaving condition(s) applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cells for all measurements after layer 3 filtering taken during the corresponding *timeToTrigger* defined for this event within the *VarConditionalReconfig*:
 - 5> consider the event associated to that *measId* to be not fulfilled;

3> else:

- 4> if NES mode indication is received from lower layers, indicating that the NES-specific CHO execution condition of the PCell is enabled; and
- 4> if the entry condition(s) applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cells for all measurements after layer 3 filtering taken during the corresponding *timeToTrigger* defined for this event within the *VarConditionalReconfig*:
- 5> consider the event associated to that *measId* to be fulfilled;
- 4> if the *measId* for this event associated with the *condReconfigId* has been modified; or
- 4> if NES mode indication is received from lower layers, indicating that the NES-specific CHO execution condition of the PCell is disabled; or
- 4> if the leaving condition(s) applicable for this event associated with the *condReconfigId*, i.e. the event corresponding with the *condEventId(s)* of the corresponding *condTriggerConfig* within *VarConditionalReconfig*, is fulfilled for the applicable cells for all measurements after layer 3 filtering taken during the corresponding *timeToTrigger* defined for this event within the *VarConditionalReconfig*:
- 5> consider the event associated to that *measId* to be not fulfilled;

2> if *condExecutionCondPSCell* is not configured:

- 3> if event(s) associated to all *measId(s)* within *condTriggerConfig* for the applicable cell are fulfilled:
- 4> consider the applicable cell, associated to that *condReconfigId*, as a triggered cell;
- 4> initiate the conditional reconfiguration execution, as specified in 5.3.5.13.5;

2> else:

- 3> if event(s) associated to all *measId(s)*, as indicated in the *condExecutionCond* and *condExecutionCondPSCell*, within *condTriggerConfig* for a target candidate cell within the stored *condRRCREconfig* are fulfilled:
- 4> consider the target candidate PCell within the stored *condRRCREconfig*, associated to that *condReconfigId*, as a triggered PCell;
- 4> consider the target candidate PSCell within the stored *condRRCREconfig*, associated to that *condReconfigId*, as a triggered PSCell;
- 4> initiate the conditional reconfiguration execution, as specified in 5.3.5.13.5.
- 2> if one of the events associated to the *measIds* within *condTriggerConfig* for the applicable cell within the stored *condRRCREconfig* is not configured with *nesEvent*, and the other event associated to the *measIds* within *condTriggerConfig* for the applicable cell within the stored *condRRCREconfig* is configured with *nesEvent*, and at least one of them is fulfilled:
- 3> consider the applicable cell within the stored *condRRCREconfig*, associated to that *condReconfigId*, as a triggered cell;
- 3> initiate the conditional reconfiguration execution, as specified in 5.3.5.13.5;

NOTE 1: Up to 2 *MeasId* can be configured for each *condReconfigId*, if *condExecutionCondPSCell* is not configured. The conditional reconfiguration event of the 2 *MeasId* may have the same or different event conditions, triggering quantity, time to trigger, and triggering threshold.

NOTE 2: Void.

NOTE 3: For CHO with candidate SCG(s), up to 2 *MeasId* can be configured for *condExecutionCond* and up to 2 *MeasId* can be configured for *condExecutionCondPSCell* for each *condReconfigId*.

5.3.5.13.4a Conditional reconfiguration evaluation of SN initiated inter-SN CPC for EN-DC

The UE shall:

- 1> for each *condReconfigurationId* within the *VarConditionalReconfiguration* specified in TS 36.331[10]:
 - 2> for each *measId* included in the *measIdList* within *VarMeasConfig* indicated in the *CondReconfigExecCondSCG* contained in the *triggerConditionSN* associated to the *condReconfigurationId* as specified in TS 36.331[10]:
 - 3> if the entry condition(s) applicable for the event associated with that *measId*, is fulfilled for the applicable cells for all measurements after layer 3 filtering taken during the corresponding *timeToTrigger* defined for this event associated with that *measId*:
 - 4> consider this event to be fulfilled;
 - 3> if the *measId* for this event has been modified; or
 - 3> if the leaving condition(s) applicable for this event associated with that *measId*, is fulfilled for the applicable cells for all measurements after layer 3 filtering taken during the corresponding *timeToTrigger* defined for this event associated with that *measId*:
 - 4> consider this event associated to that *measId* to be not fulfilled;
 - 2> if trigger conditions for all events associated with the *measId(s)* indicated in the *CondReconfigExecCondSCG* contained in the *triggerConditionSN* as specified in TS 36.331[10]), are fulfilled:
 - 3> consider the target cell candidate within the *RRCReconfiguration* message contained in *nr-SecondaryCellGroupConfig* in the *RRCConnectionReconfiguration* message, as specified in TS 36.331[10], contained in the stored *condReconfigurationToApply*, associated to that *condReconfigurationId* as specified in TS 36.331[10]), clause 5.3.5.9.4, as a triggered cell;
 - 3> initiate the conditional reconfiguration execution, as specified in TS 36.331[10]), clause 5.3.5.9.5;

NOTE: Void.

5.3.5.13.5 Conditional reconfiguration execution

The UE shall:

- 1> if more than one pair of triggered PCell and associated triggered PSCell exist:
 - 2> select one of the triggered PCell(s) and the associated triggered PSCell(s) as the selected cells for conditional reconfiguration execution;
- 1> else if only one pair of triggered PCell and associated triggered PSCell exists:
 - 2> consider the triggered PCell and the associated triggered PSCell as the selected cells for conditional reconfiguration execution;
- 1> else if more than one triggered cell exists:
 - 2> select one of the triggered cells as the selected cell for conditional reconfiguration execution;
- 1> else:
 - 2> consider the triggered cell as the selected cell for conditional reconfiguration execution;
- 1> for the selected cell(s) of conditional reconfiguration execution:
 - 2> if the *subsequentCondReconfig* is included in the entry in *VarConditionalReconfig* containing the *RRCReconfiguration* message for the selected cell:
 - 3> perform the actions as specified in 5.3.5.13.8;
 - 2> else:

- 3> apply the stored *condRRCReconfig* of the selected cell and perform the actions as specified in 5.3.5.3;

NOTE: If multiple NR cells are triggered in conditional reconfiguration execution, it is up to UE implementation which one to select, e.g. the UE considers beams and beam quality to select one of the triggered cells for execution.

5.3.5.13.6 Subsequent CPAC reference configuration addition/removal

The UE shall:

- 1> if the *scpac-ReferenceConfiguration* is set to *setup*:
 - 2> if *scpac-ReferenceConfiguration* exists within the *VarConditionalReconfig*:
 - 3> replace the *scpac-ReferenceConfiguration* within the *VarConditionalReconfig*;
 - 2> else:
 - 3> store the *scpac-ReferenceConfiguration* within the *VarConditionalReconfig*;
- 1> else (if *scpac-ReferenceConfiguration* is set to *release*):
 - 2> remove the *scpac-ReferenceConfiguration* within the *VarConditionalReconfig*;

5.3.5.13.7 sk-Counter configuration addition/modification/removal

The UE shall:

- 1> for each *securityCellSetId* received in the *sk-CounterConfigToAddModList* IE:
 - 2> if an entry with the matching *securityCellSetId* exists in the *sk-CounterConfigToAddModList* within the *VarConditionalReconfig*:
 - 3> replace the *sk-CounterList* within the *VarConditionalReconfig* with the *sk-CounterList* according to the received *securityCellSetId*;
 - 2> else:
 - 3> add a new entry for this *securityCellSetId* within the *VarConditionalReconfig*;
- 1> for each *securityCellSetId* value included in the *sk-CounterConfigToRemoveList* that is part of the current *sk-CounterConfigToAddModList* in *VarConditionalReconfig*:
 - 2> remove the entry with the matching *securityCellSetId* from the *sk-CounterConfigToAddModList*;

5.3.5.13.8 Subsequent CPAC execution

Upon the conditional reconfiguration execution for subsequent CPAC, the UE shall:

- 1> if the selected subsequent CPAC candidate configuration is stored in MCG *VarConditionalReconfig*:
 - 2> for each SRB/DRB in current UE configuration:
 - keep the associated RLC, PDCP and SDAP entities, their state variables, buffers and timers;
 - release all fields related to the SRB/DRB configuration except for *srb-Identity*, *drb-Identity*, and *securityConfig*;
 - 2> release/clear all current dedicated radio configuration except for the following:
 - the MCG C-RNTI;
 - the AS security configurations associated with the master key and the secondary key;
 - the *logicalChannelIdentity* and *logicalChannelIdentityExt* of RLC bearers configured in RLC-BearerConfig and the associated RLC entities, their state variables, buffers, and timers;

- the *bh-LogicalChannelIdentity* of BH RLC channels configured in *BH-RLC-ChannelConfig* and the associated RLC entities, their state variables, buffers, and timers;
 - the UE variables *VarConditionalReconfig* and *VarServingSecurityCellSetID*;
 - the logged measurement configuration.
- 2> release/clear all current common radio configuration, except for the *ServingCellConfigCommon* of the PCell;
- 2> apply the default MAC Cell Group configuration for MCG MAC and SCG MAC as specified in 9.2.2;
- 2> use the default values specified in 9.2.3 for timers T310, T311 and constants N310, N311, where T310, N310, and N311 are for both MCG and SCG, and T311 is only for the MCG;
- 2> apply the default L1 parameter values as specified in corresponding physical layer specifications for the MCG and SCG;
- 1> else:
- 2> for each SRB/DRB in current UE configuration:
- keep the associated PDCP and SDAP entities, their state variables, buffers and timers;
 - release all fields related to the SRB/DRB configuration except for *srb-Identity*, *drb-Identity*, and *securityConfig*;
- 2> release/clear all current dedicated radio configuration associated with the SCG except for the following:
- the AS security configurations associated with the secondary key;
 - the UE variables *VarConditionalReconfig*.
- 2> release/clear all current common radio configuration associated with the SCG;
- 2> apply the default MAC Cell Group configuration for the SCG MAC as specified in 9.2.2;
- 2> use the default values specified in 9.2.3 for timer T310 and constants N310 and N311 for the SCG ;
- 2> apply the default L1 parameter values as specified in corresponding physical layer specifications for the SCG;
- 1> if the *securityCellSetId* is included in the entry in *VarConditionalReconfig* containing the *RRCReconfiguration* message:
- 2> if *servingSecurityCellSetId* is not included within *VarServingSecurityCellSetID*; or
- 2> if the value of the *securityCellSetId* is not equal to the value of *servingSecurityCellSetId* within *VarServingSecurityCellSetID*:
- 3> consider the first *sk-Counter* value in the *sk-CounterList* associated with the *securityCellSetId* within the *VarConditionalReconfig* as the selected *sk-Counter* value, and perform security key update procedure as specified in 5.3.5.7;
- 3> remove the selected *sk-Counter* value from the *sk-CounterList* associated with the *securityCellSetId* within the *VarConditionalReconfig*;
- 3> if the current *VarServingSecurityCellSetID* includes *servingSecurityCellSetId*:
- 4> replace the value of *servingSecurityCellSetId* within *VarServingSecurityCellSetID* with the value of *securityCellSetId* associated with the selected cell;
- 3> else:
- 4> store the *servingSecurityCellSetId* within *VarServingSecurityCellSetID* with the value of *securityCellSetId* associated with the selected cell;
- 1> if the selected subsequent CPAC candidate configuration is stored in the SCG *VarConditionalReconfig*:

- 2> for each *drb-Identity* value included in each *RadioBearerConfig* in the selected subsequent CPAC candidate configuration that is part of the current UE configuration, the UE shall perform the following actions after the end of this procedure:
 - 3> if the bearer is an AM DRB:
 - 4> trigger the PDCP entity of the bearer to perform PDCP data recovery as specified in TS 38.323 [5];
 - 3> re-establish the corresponding RLC entity as specified in TS 38.322 [4];
- 1> else:
 - 2> for each *drb-Identity* value included in each *RadioBearerConfig* in the selected subsequent CPAC candidate configuration that is part of the current UE configuration, the UE shall perform the following actions after the end of this procedure:
 - 3> if the *keyToUse* in the *RadioBearerConfig* is different from the *keyToUse* in the current UE configuration;
or
 - 3> if the bearer is associated with the secondary key (S-K_{gNB}) as indicated by *keyToUse* in the current UE configuration and a new *sk-Counter* value has been selected due to the conditional reconfiguration execution for subsequent CPAC:
 - 4> if the PDCP entity of this DRB is not configured with *cipheringDisabled*:
 - 5> configure the PDCP entity with the ciphering algorithm and KUPenc key associated with the master key (K_{gNB}) or the secondary key (S-K_{gNB}), as indicated in *keyToUse*, i.e., the ciphering configuration shall be applied to all subsequent PDCP PDUs received and sent by the UE;
 - 4> if the PDCP entity of this DRB is configured with *integrityProtection*:
 - 5> configure the PDCP entity with the integrity protection algorithms according to *securityConfig* and apply the KUPint key associated with the master key (K_{gNB}) or the secondary key (S-K_{gNB}) as indicated in *keyToUse*;
 - 4> if *drb-ContinueROHC* is included in *pdcp-Config*:
 - 5> indicate to lower layer that *drb-ContinueROHC* is configured;
 - 4> if *drb-ContinueEHC-DL* is included in *pdcp-Config*:
 - 5> indicate to lower layer that *drb-ContinueEHC-DL* is configured;
 - 4> if *drb-ContinueEHC-UL* is included in *pdcp-Config*:
 - 5> indicate to lower layer that *drb-ContinueEHC-UL* is configured;
 - 4> if *drb-ContinueUDC* is included in *pdcp-Config*:
 - 5> indicate to lower layer that *drb-ContinueUDC* is configured;
 - 4> re-establish the corresponding RLC entity as specified in TS 38.322 [4];
 - 4> trigger the PDCP entity of the bearer to perform PDCP re-establishment as specified in TS 38.323 [5];
 - 3> else:
 - 4> if there is an associated SCG RLC bearer in the selected subsequent CPAC candidate configuration that is part of the current UE configuration:
 - 5> re-establish the SCG RLC entity as specified in TS 38.322 [4];
 - 4> if the RLC entity of the associated RLC bearer(s) is re-established; or
 - 4> if an associated RLC bearer is released in the selected subsequent CPAC candidate configuration:
 - 5> if the bearer is an AM DRB:

- 6> trigger the PDCP entity of the bearer to perform PDCP data recovery as specified in TS 38.323 [5];
 - 2> for each *srb-Identity* included in *RadioBearerConfig* that is part of the current UE configuration and if the radio bearer is SRB3 or SRB5, the UE shall perform the following actions after the end of this procedure:
 - 3> if a new *sk-Counter* value has been selected due to the conditional reconfiguration execution for subsequent CPAC:
 - 4> configure the PDCP entity to apply the integrity protection algorithm and K_{RRClnt} key associated with the secondary key ($S\text{-}K_{\text{gNB}}$) as indicated in *keyToUse*, i.e. the integrity protection configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
 - 4> configure the PDCP entity to apply the ciphering algorithm and K_{RRCenc} key associated with the secondary key ($S\text{-}K_{\text{gNB}}$) as indicated in *keyToUse*, i.e. the ciphering configuration shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
 - 4> trigger the PDCP entity of SRB to perform PDCP re-establishment as specified in TS 38.323 [5];
 - 3> else:
 - 4> trigger the PDCP entity of SRB to perform SDU discard as specified in TS 38.323 [5];
 - 3> re-establish the corresponding RLC entity as specified in TS 38.322 [4];
 - 1> if *scpac-ConfigComplete* is not included within the *VarConditionalReconfig* for the selected cell:
 - 2> if the subsequent CPAC candidate cell configuration is stored in MCG *VarConditionalReconfig*:
 - 3> consider *scpac-ReferenceConfiguration* in MCG *VarConditionalReconfig* to be the current UE configuration;
 - 2> else:
 - 3> consider *scpac-ReferenceConfiguration* in SCG *VarConditionalReconfig* to be the current SCG configuration;
- NOTE 1: When the UE considers the reference configuration to be the current UE configuration, the UE should store fields and configurations that are part of the reference configuration but should not execute any actions or procedures triggered by the reception of an *RRCReconfiguration* message which are described in clause 5.3.5.3.
- 1> apply the stored *condRRCReconfig* of the selected cell(s) and perform the actions as specified in 5.3.5.3;
 - 1> release the radio bearer(s) and the associated logical channel(s) that are part of the current UE configuration but not part of the subsequent CPAC candidate configuration for the selected cell, or the subsequent CPAC reference configuration (in case the subsequent CPAC candidate configuration does not include *scpac-ConfigComplete*).

NOTE 2: When *scpac-ConfigComplete* is not included for the selected cell, before a subsequent CPAC execution, a UE implementation may generate and store an RRC reconfiguration message by applying the received subsequent CPAC candidate configuration on top of the subsequent CPAC reference configuration, and the stored RRC reconfiguration message is applied for subsequent CPAC execution. The UE needs to ensure that the RRC reconfiguration applied at the time of subsequent CPAC execution is in accordance with the latest received *scpac-ReferenceConfiguration* and *condRRCReconfig* for the subsequent CPAC configuration.

5.3.5.13a SCG activation

Upon initiating the procedure, the UE shall:

- 1> if the UE is configured with an SCG after receiving the message for which this procedure is initiated:

- 2> if the UE was configured with a deactivated SCG before receiving the message for which this procedure is initiated:
 - 3> consider the SCG to be activated;
 - 3> resume performing radio link monitoring on the SCG, if previously stopped;
 - 3> indicate to lower layers to resume beam failure detection on the PSCell, if previously stopped;
 - 3> indicate to lower layers that the SCG is activated.

5.3.5.13b SCG deactivation

Upon initiating the procedure, the UE shall:

- 1> consider the SCG to be deactivated;
- 1> indicate to lower layers that the SCG is deactivated;
- 1> if *bfd-and-RLM* is configured to *true*:
 - 2> perform radio link monitoring on the SCG;
 - 2> indicate to lower layers to perform beam failure detection on the PSCell;
- 1> else:
 - 2> stop radio link monitoring on the SCG;
 - 2> indicate to lower layers to stop beam failure detection on the PSCell;
 - 2> stop timer T310 for this cell group, if running;
 - 2> stop timer T312 for this cell group, if running;
 - 2> reset the counters N310 and N311;
- 1> if the UE was in RRC_CONNECTED and the SCG was activated before receiving the message for which this procedure is initiated:
 - 2> if SRB3 was configured before the reception of the *RRCReconfiguration* or of the *RRCConnectionReconfiguration* and SRB3 is not to be released according to any *RadioBearerConfig* included in the *RRCReconfiguration* or in the *RRCConnectionReconfiguration* as specified in TS 36.331[10]:
 - 3> trigger the PDCP entity of SRB3 to perform SDU discard as specified in TS 38.323 [5];
 - 3> re-establish the RLC entity of SRB3 as specified in TS 38.322 [4].

5.3.5.13b1 SCG activation without SN message

Upon initiating the procedure, the UE shall:

- 1> if the SCG was deactivated before the reception of the *RRCReconfiguration* message or the E-UTRA *RRCConnectionReconfiguration* message for which the procedure invoking this clause is executed:
 - 2> consider the SCG to be activated;
 - 2> indicate to lower layers that the SCG is activated;
 - 2> resume performing radio link monitoring on the SCG, if previously stopped;
 - 2> indicate to lower layers to resume beam failure detection on the PSCell, if previously stopped;
- 2> if *bfd-and-RLM* was not configured to true before the reception of the *RRCReconfiguration* message or the E-UTRA *RRCConnectionReconfiguration* message for which the procedure invoking this clause is executed; or
- 2> if lower layers indicate that a Random Access procedure is needed for SCG activation:

3> initiate the Random Access procedure on the PSCell, as specified in TS 38.321 [3].

5.3.5.13c FR2 UL gap configuration

The UE shall:

- 1> if *ul-GapFR2-Config* is set to setup:
 - 2> if an FR2 UL gap configuration is already setup, release the FR2 UL gap configuration;
 - 2> setup the FR2 UL gap configuration indicated by the *ul-GapFR2-Config* in accordance with the received *gapOffset*, i.e., the first subframe of each gap occurs at an SFN and subframe meeting the following condition:

$$\text{SFN mod } T = \text{FLOOR}(\text{gapOffset}/10);$$
 if the UGRP is larger than 5ms:

$$\text{subframe} = \text{gapOffset mod } 10;$$
 else:

$$\text{subframe} = \text{gapOffset or } (\text{gapOffset} + 5);$$
 with $T = \text{CEIL}(\text{UGRP}/10)$.
- 1> else if *ul-GapFR2-Config* is set to release:
 - 2> release the FR2 UL gap configuration.

NOTE 1: For *ul-GapFR2-Config* configuration with synchronous CA, the SFN and subframe of a serving cell on FR2 frequency is used in the gap calculation. For *ul-GapFR2-Config* configuration with asynchronous CA, the SFN and subframe of a serving cell on FR2 frequency indicated by the *refFR2-ServCellAsyncCA* in *ul-GapFR2-Config* is used in the gap calculation.

5.3.5.13d Application layer measurement configuration

The UE shall:

- 1> if *measConfigAppLayerToReleaseList* is included in *appLayerMeasConfig* within *RRCReconfiguration* or *RRCResume*:
 - 2> for each *measConfigAppLayerId* value included in the *measConfigAppLayerToReleaseList*:
 - 3> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration including any RAN visible application layer measurement configuration;
 - 3> discard any application layer measurement reports received from upper layers;
 - 3> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*, if stored;
 - 3> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*.
- 1> if *measConfigAppLayerToAddModList* is included in *appLayerMeasConfig* within *RRCReconfiguration* or *RRCResume*:
 - 2> for each *measConfigAppLayerId* value included in the *measConfigAppLayerToAddModList*:
 - 3> if *measConfigAppLayerContainer* is included for the corresponding *MeasConfigAppLayer* configuration:
 - 4> forward the *measConfigAppLayerContainer*, the *measConfigAppLayerId* and the *serviceType* to upper layers considering the *serviceType*;

- 3> consider itself to be configured to send application layer measurement report for the *measConfigAppLayerId* in accordance with 5.7.16;
- 3> forward the *transmissionOfSessionStartStop*, if configured, and *measConfigAppLayerId* to upper layers considering the *serviceType*;
- 3> if *ran-VisibleParameters* is set to *setup*:
 - 4> forward the *measConfigAppLayerId*, the *ran-VisiblePeriodicity*, if configured, the *numberOfBufferLevelEntries*, if configured, and the *reportPlayoutDelayForMediaStartup*, if configured, to upper layers considering the *serviceType*;
- 3> else if *ran-VisibleParameters* is set to *release*:
 - 4> forward the *measConfigAppLayerId* and inform upper layers about the release of the RAN visible application layer measurement configuration;
 - 4> discard any RAN visible application layer measurement reports received from upper layers;
- 3> if *pauseReporting* is set to *true*:
 - 4> if at least one segment, but not all segments, of a segmented *MeasurementReportAppLayer* message containing an application layer measurement report associated with the *measConfigAppLayerId* has been submitted to lower layers for transmission:
 - 5> submit the remaining segments of the *MeasurementReportAppLayer* message to lower layers for transmission;
 - 4> suspend submitting application layer measurement report containers to lower layers for the application layer measurement configuration associated with the *measConfigAppLayerId*;
 - 4> store any previously or subsequently received application layer measurement report containers associated with the *measConfigAppLayerId* for which the successful transmission of the message or at least one segment of the message has not been confirmed by lower layers;
 - 4> if the memory reserved for storing application layer measurement report containers becomes full while the reporting is paused:
 - 5> if the reports are associated with a configuration including *appLayerMeasPriority*:
 - 6> discard reports in priority order where reports with the lowest priority are discarded first, and among reports with equal associated priority, discard reports in the order they were received, where older reports are discarded first;
 - 5> else:
 - 6> discard reports in the order they were received, where older reports are discarded first;
- 3> else if *pauseReporting* is set to *false* and if transmission of application layer measurement report containers has previously been suspended for the application layer measurement configuration associated with the *measConfigAppLayerId*:
 - 4> submit stored application layer measurement report containers to lower layers, if any, for the application layer measurements configuration associated with the *measConfigAppLayerId*;
 - 4> resume submitting application layer measurement report containers to lower layers for the application layer measurement configuration associated with the *measConfigAppLayerId*;
- 3> if *appLayerIdleInactiveConfig* is set to *setup*:
 - 4> store the received *qoe-Reference*, *measConfigAppLayerId*, *serviceType*, *qoe-MeasurementType*, *qoe-AreaScope*, *mce-Id*, *availableRAN-VisibleMetrics* and *appLayerMeasPriority* (if included) in *VarAppLayerIdleConfig*;
 - 4> if the *qoe-AreaScope* includes *plmn-IdentityList*:

- 5> set *plmn-IdentityList* in *VarAppLayerPLMN-ListConfig* to include the RPLMN as well as the PLMNs included in *plmn-IdentityList*;
- 4> else:
 - 5> set *plmn-IdentityList* in *VarAppLayerPLMN-ListConfig* to include the RPLMN;
- 3> else if *appLayerIdleInactiveConfig* is set to *release*:
 - 4> release *appLayerIdleInactiveConfig*.

NOTE 1: The UE may discard reports when the memory reserved for storing application layer measurement report containers becomes full. If no or equal *appLayerMeasPriority* is configured, older reports are discarded first.

NOTE 2: The transmission of RAN visible application layer measurement reports and *appLayerSessionStatus* is not paused when *pauseReporting* is set to *true*.

NOTE 3: The UE may discard an application layer measurement configuration and associated unsent reports after 48 hours in RRC_IDLE. The time duration stops incrementing and is reset to zero if the UE is transferred to RRC_CONNECTED.

NOTE 4: Release of a previously configured value in *ran-VisibleParameters* is needed (independently of its RRC Need code) before a new value is forwarded to upper layers.

5.3.5.14 Sidelink dedicated configuration

Upon initiating the procedure, the UE shall:

- 1> if *sl-FreqInfoToReleaseList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> for each entry included in the received *sl-FreqInfoToReleaseList* that is part of the current UE configuration:
 - 3> release the related configurations from the stored NR sidelink communication/discovery configurations;
- 1> if *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> if configured to receive NR sidelink communication:
 - 3> use the resource pool(s) indicated by *sl-RxPool* for NR sidelink communication reception, as specified in 5.8.7;
 - 2> if configured to transmit NR sidelink communication:
 - 3> use the resource pool(s) indicated by *sl-TxPoolSelectedNormal*, *sl-TxPoolScheduling* or *sl-TxPoolExceptional* for NR sidelink communication transmission, as specified in 5.8.8;
 - 2> if configured to receive NR sidelink discovery:
 - 3> use the resource pool(s) indicated by *sl-DiscRxPool* or *sl-RxPool* for NR sidelink discovery reception, as specified in 5.8.13.2;
 - 2> if configured to transmit NR sidelink discovery:
 - 3> use the resource pool(s) indicated by *sl-DiscTxPoolSelected*, *sl-DiscTxPoolScheduling*, *sl-TxPoolSelectedNormal*, *sl-TxPoolScheduling* or *sl-TxPoolExceptional* for NR sidelink discovery transmission, as specified in 5.8.13.3;
 - 2> if configured to perform SL-PRS measurement:
 - 3> use the resource pool(s) indicated by *sl-RxPool* and/or *sl-PRS-RxPool* for SL-PRS reception, as specified in 5.8.18.2;
 - 2> if configured to transmit SL-PRS:

- 3> use the resource pool(s) indicated by *sl-TxPoolSelectedNormal*, *sl-TxPoolScheduling*, *sl-TxPoolExceptional*, *sl-PRS-TxPoolSelectedNormal*, *sl-PRS-TxPoolScheduling* or *sl-PRS-TxPoolExceptional* for SL-PRS transmission, as specified in 5.8.18.3;
- 2> perform CBR measurement on the transmission resource pool(s) indicated by *sl-TxPoolSelectedNormal*, *sl-TxPoolScheduling*, *sl-PRS-TxPoolSelectedNormal*, *sl-PRS-TxPoolScheduling*, *sl-DiscTxPoolSelected*, *sl-DiscTxPoolScheduling*, *sl-TxPoolExceptional* or *sl-PRS-TxPoolExceptional* for NR sidelink communication/discovery/positioning transmission, as specified in 5.5.3;
- 2> use the synchronization configuration parameters for NR sidelink communication/discovery/positioning on frequencies included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt*, as specified in 5.8.5;
- 1> if *sl-RadioBearerToReleaseList* or *sl-RLC-BearerToReleaseList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> perform sidelink DRB release as specified in 5.8.9.1a.1;
- 1> if *sl-RLC-BearerToReleaseListSizeExt* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> perform additional sidelink RLC bearer release as specified in 5.8.9.1a.5;
- 1> if *sl-RadioBearerToAddModList* or *sl-RLC-BearerToAddModList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> perform sidelink DRB addition/modification as specified in 5.8.9.1a.2;
- 1> if *sl-RLC-BearerToAddModListSizeExt* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> perform additional sidelink RLC bearer addition/modification as specified in 5.8.9.1a.6;
- 1> if *sl-ScheduledConfig* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> configure the MAC entity parameters, which are to be used for NR sidelink communication/discovery, in accordance with the received *sl-ScheduledConfig*;
- 1> if *sl-UE-SelectedConfig* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> configure the parameters, which are to be used for NR sidelink communication/discovery, in accordance with the received *sl-UE-SelectedConfig*;
- 1> if *sl-MeasConfigInfoToReleaseList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> for each *SL-DestinationIndex* included in the received *sl-MeasConfigInfoToReleaseList* that is part of the current UE configuration:
 - 3> remove the entry with the matching *SL-DestinationIndex* from the stored NR sidelink measurement configuration information;
- 1> if *sl-MeasConfigInfoToAddModList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> for each *sl-DestinationIndex* included in the received *sl-MeasConfigInfoToAddModList* that is part of the current stored NR sidelink measurement configuration:
 - 3> reconfigure the entry according to the value received for this *sl-DestinationIndex* from the stored NR sidelink measurement configuration information;
 - 2> for each *sl-DestinationIndex* included in the received *sl-MeasConfigInfoToAddModList* that is not part of the current stored NR sidelink measurement configuration:
 - 3> add a new entry for this *sl-DestinationIndex* to the stored NR sidelink measurement configuration.

NOTE 1: The UE is expected to update the mapping between the Destination Layer-2 ID and the destination index for the stored NR sidelink measurement configuration after the UE updates the destination list and reports to the gNB.

- 1> if *sl-DRX-ConfigGC-BC* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:

- 2> store the NR sidelink DRX configuration and configure lower layers to perform sidelink DRX operation for groupcast and broadcast as specified in TS 38.321 [3];
- 1> if *sl-DRX-ConfigUC-ToReleaseList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> for each *SL-DestinationIndex* included in the received *sl-DRX-ConfigUC-ToReleaseList* that is part of the current UE configuration:
 - 3> remove the entry with the matching *SL-DestinationIndex* from the stored NR sidelink DRX configuration information;
- 1> if *sl-DRX-ConfigUC-ToAddModList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> for each *sl-DestinationIndex* included in the received *sl-DRX-ConfigUC-ToAddModList* that is part of the current stored NR sidelink DRX configuration:
 - 3> reconfigure the entry according to the value received for this *sl-DestinationIndex* from the stored NR sidelink DRX configuration information;
 - 2> for each *sl-DestinationIndex* included in the received *sl-DRX-ConfigUC-ToAddModList* that is not part of the current stored NR sidelink DRX configuration:
 - 3> add a new entry for this *sl-DestinationIndex* to the stored NR sidelink DRX configuration.

NOTE 2: The UE is expected to update the mapping between the Destination Layer-2 ID and the destination index for the stored NR sidelink DRX configuration after the UE updates the destination list and reports to the gNB.

- 1> if *sl-RLC-ChannelToReleaseList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 2> perform PC5 Relay RLC channel release as specified in 5.8.9.7.1;
- 1> if *sl-RLC-ChannelToAddModList* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* or *RRCSetup*:
 - 2> perform PC5 Relay RLC channel addition/modification as specified in 5.8.9.7.2;

5.3.5.15 L2 U2N or U2U Relay UE configuration

5.3.5.15.1 General

The network configures the L2 U2N or U2U Relay UE with relay operation related configurations. For each connected L2 U2N or U2U Remote UE indicated in *sl-L2IdentityRemote*, the network provides the configuration parameters used for relaying.

The L2 U2N Relay UE shall:

- 1> if *sl-L2RelayUE-Config* is set to *setup*:
 - 2> if the *sl-L2RelayUE-Config* contains the *sl-RemoteUE-ToReleaseList*:
 - 3> perform the L2 U2N Remote UE release as specified in 5.3.5.15.2;
 - 2> if the *sl-L2RelayUE-Config* contains the *sl-RemoteUE-ToAddModList*:
 - 3> perform the L2 U2N Remote UE addition/modification as specified in 5.3.5.15.3;
- 1> else if *sl-L2RelayUE-Config* is set to *release*:
 - 2> release the L2 U2N relay operation related configurations.

The L2 U2U Relay UE shall:

- 1> if *sl-L2RelayUE-Config* is set to *setup*:
 - 2> if the *sl-L2RelayUE-Config* contains the *sl-U2U-RemoteUE-ToReleaseList*:

- 3> perform the L2 U2U Remote UE release as specified in 5.3.5.15.2;
- 2> if the *sl-L2RelayUE-Config* contains the *sl-U2U-RemoteUE-ToAddModList*:
 - 3> perform the L2 U2U Remote UE addition/modification as specified in 5.3.5.15.3;
- 1> else if *sl-L2RelayUE-Config* is set to *release*:
 - 2> release the L2 U2U relay operation related configurations.

5.3.5.15.2 L2 U2N or U2U Remote UE Release

The L2 U2N Relay UE shall:

- 1> if the release is triggered by reception of the *sl-RemoteUE-ToReleaseList*:
 - 2> for each *SL-DestinationIdentity* value included in the *sl-RemoteUE-ToReleaseList*:
 - 3> if the current UE has a PC5 RRC connection to a L2 U2N Remote UE with *SL-DestinationIdentity*:
 - 4> indicate upper layers to trigger PC5 unicast link release.

The L2 U2U Relay UE shall:

- 1> if the release is triggered by reception of the *sl-U2U-RemoteUE-ToReleaseList*:
 - 2> for each *SL-DestinationIdentity* value included in the *sl-U2U-RemoteUE-ToReleaseList*:
 - 3> if the current UE has a PC5-RRC connection to a L2 U2U Remote UE with this *SL-DestinationIdentity*:
 - 4> release the configuration associated with the L2 U2U Remote UE.

5.3.5.15.3 L2 U2N or U2U Remote UE Addition/Modification

The L2 U2N Relay UE shall:

- 1> if no SRAP entity has been established:
 - 2> establish a SRAP entity as specified in TS 38.351 [66];
- 1> for each *sl-L2IdentityRemote* value included in the *sl-RemoteUE-ToAddModList* that is not part of the current UE configuration (L2 U2N Remote UE Addition):
 - 2> configure the parameters to SRAP entity in accordance with the *sl-SRAP-ConfigRelay*;
 - 2> if SRB1 is included in *sl-MappingToAddModList*, and *sl-EgressRLC-ChannelPC5* is configured:
 - 3> release SL-RLC1, if established;
 - 3> associate the PC5 Relay RLC channel as indicated by *sl-EgressRLC-ChannelPC5* with SRB1;
 - 2> else: (i.e. SRB1 is not included in *sl-MappingToAddModList*, or SRB1 is included in *sl-MappingToAddModList*, but *sl-EgressRLC-ChannelPC5* is not configured)
 - 3> if SL-RLC1 is not established:
 - 4> apply the default configuration of SL-RLC1 as specified in clause 9.2.4 and associate it with the SRB1;
- 1> for each *sl-L2IdentityRemote* value included in the *sl-RemoteUE-ToAddModList* that is part of the current UE configuration (L2 U2N Remote UE modification):
 - 2> modify the configuration in accordance with the *sl-SRAP-ConfigRelay*;

The L2 U2U Relay UE shall:

- 1> if no SRAP entity has been established:

- 2> establish a SRAP entity as specified in TS 38.351 [66];
- 1> for each target L2 U2U Remote UE indicated in *sl-L2IdentityRemoteUE* value included in the *sl-U2U-RemoteUE-ToAddModList* that is not part of the current UE configuration (target L2 U2U Remote UE Addition):
 - 2> for each source L2 U2U Remote UE indicated in *sl-SourceUE-Identity* in accordance with one entry of the *sl-SourceRemoteUE-ToAddModList*:
 - 3> configure the parameters to SRAP entity in accordance with the *sl-SRAP-ConfigU2U*;
- 1> for each target L2 U2U Remote UE indicated in *sl-L2IdentityRemote* value included in the *sl-U2U-RemoteUE-ToAddModList* that is part of the current UE configuration (target L2 U2U Remote UE modification):
 - 2> for each source L2 U2U Remote UE indicated in *sl-SourceUE-Identity* included in the *sl-SourceRemoteUE-ToReleaseList* (source L2 U2U Remote UE Release):
 - 3> release the configuration associated with the source L2 U2U Remote UE;
 - 2> for the source L2 U2U Remote UE indicated in *sl-SourceUE-Identity* included in the *sl-SourceRemoteUE-ToAddModList* that is not part of the current UE configuration (source L2 U2U Remote UE Addition):
 - 3> configure the parameters to SRAP entity in accordance with the *sl-SRAP-ConfigU2U*;
 - 2> for the source L2 U2U Remote UE indicated in *sl-SourceUE-Identity* included in the *sl-SourceRemoteUE-ToAddModList* that is part of the current UE configuration (source L2 U2U Remote UE modification):
 - 3> modify the configuration in accordance with the *sl-SRAP-ConfigU2U*;

5.3.5.16 L2 U2N or U2U Remote UE configuration

The network configures the L2 U2N or U2U Remote UE with relay operation related configurations, e.g. SRAP configuration.

The L2 U2N Remote UE shall:

- 1> if *sl-L2RemoteUE-Config* is set to *setup* or received from *RRCSetup* message:
 - 2> if the *sl-L2RemoteUE-Config* contains the *sl-SRAP-ConfigRemote*:
 - 3> if no SRAP entity has been established:
 - 4> establish a SRAP entity as specified in TS 38.351 [66];
 - 3> configure the parameters to SRAP entity in accordance with the *sl-SRAP-ConfigRemote*;
 - 3> if SRB1 is included in *sl-MappingToAddModList*, and *sl-EgressRLC-ChannelPC5* is configured:
 - 4> release SL-RLC1, if established;
 - 4> associate the PC5 Relay RLC channel as indicated by *sl-EgressRLC-ChannelPC5* with SRB1;
 - 3> else: (i.e. SRB1 is not included in *sl-MappingToAddModList*, or SRB1 is included in *sl-MappingToAddModList*, but *sl-EgressRLC-ChannelPC5* is not configured)
 - 4> if SL-RLC1 is not established:
 - 5> apply the default configuration of SL-RLC1 as specified in clause 9.2.4 and associate it with the SRB1;
 - 2> if the *sl-L2RemoteUE-Config* contains the *sl-UEIdentityRemote*:
 - 3> use the value of the *sl-UEIdentityRemote* as the C-RNTI in the PCell.
- 1> else if *sl-L2RemoteUE-Config* is set to *release*:
 - 2> release the L2 U2N relay operation related configurations.

The L2 U2U Remote UE shall:

- 1> if *sl-L2RemoteUE-Config* is set to setup:
 - 2> if the *sl-L2RemoteUE-Config* contains the *sl-U2U-RelayUE-ToReleaseList*:
 - 3> perform the L2 U2U Relay UE release as specified in 5.3.5.16.1;
 - 2> if the *sl-L2RemoteUE-Config* contains the *sl-U2U-RelayUE-ToAddModList*:
 - 3> perform the L2 U2U Relay UE addition/modification as specified in 5.3.5.16.2;
- 1> else if *sl-L2RemoteUE-Config* is set to release:
 - 2> release the L2 U2U relay operation related configurations.

5.3.5.16.1 L2 U2U Relay UE Release

The L2 U2U Remote UE shall:

- 1> if the release is triggered by reception of the *sl-U2U-RelayUE-ToReleaseList*:
 - 2> for each *SL-DestinationIdentity* value included in the *sl-U2U-RelayUE-ToReleaseList*:
 - 3> release the configuration associated with the L2 U2U Relay UE.

5.3.5.16.2 L2 U2U Relay UE Addition/Modification

The L2 U2U Remote UE shall:

- 1> if no SRAP entity has been established:
 - 2> establish a SRAP entity as specified in TS 38.351 [66];
- 1> for each L2 U2U Relay UE indicated in *sl-L2IdentityRelay* value included in the *sl-U2U-RelayUE-ToAddModList* that is not part of the current UE configuration (L2 U2U Relay UE Addition):
 - 2> for target L2 U2U Remote UE indicated in *sl-TargetUE-Identity* in accordance with one entry of the *SL-PeerRemoteUE-ToAddModList*:
 - 3> configure the parameters to SRAP entity in accordance with the *sl-SRAP-ConfigU2U*;
- 1> for each L2 U2U Relay UE indicated in *sl-L2IdentityRelay* value included in the *sl-U2U-RelayUE-ToAddModList* that is part of the current UE configuration (L2 U2U Relay UE modification):
 - 2> for each *SL-DestinationIdentity* value included in the *sl-TargetRemoteUE-ToReleaseList* (target L2 U2U Remote UE Release):
 - 3> release the configuration associated with the peer target L2 U2U Remote UE;
 - 2> for the target L2 U2U Remote UE indicated in *sl-TargetUE-Identity* included in the *sl-TargetRemoteUE-ToAddModList* that is not part of the current UE configuration (target L2 U2U Remote UE Addition):
 - 3> configure the parameters to SRAP entity in accordance with the *sl-SRAP-ConfigU2U*;
 - 2> for the target L2 U2U Remote UE indicated in *sl-TargetUE-Identity* included in the *sl-TargetRemoteUE-ToAddModList* that is part of the current UE configuration (target L2 U2U Remote UE modification):
 - 3> modify the configuration in accordance with the *sl-SRAP-ConfigU2U*;

5.3.5.17 MP configuration

5.3.5.17.1 Introduction

In case of MP, a MP remote UE is configured with one direct path (i.e. MCG) and one indirect path. The MP remote UE connects to network on the direct path using NR Uu, and connects to network on the indirect path via a MP relay UE.

On indirect path, for the hop between the MP remote UE and the MP relay UE, when the MP remote UE connects to a L2 U2N Relay UE, i.e. the MP remote UE is acting as a L2 U2N Remote UE, the network provides the configuration of SL indirect path to the MP remote UE and the L2 U2N Relay UE as specified in 5.3.5.17.2; when the MP remote UE connects to a N3C relay UE using non-3GPP connection, the network provides the configuration of N3C indirect path to the MP remote UE and the N3C relay UE as specified in 5.3.5.17.3.

5.3.5.17.2 Configuration of SL indirect path

5.3.5.17.2.1 General

For SL indirect path:

- the L2 U2N Remote UE is provided with sidelink dedicated configuration as specified in 5.3.5.14, L2 U2N Remote UE configuration as specified in 5.3.5.16, and SL indirect path specific configuration as specified in 5.3.5.17.2.2;
- the L2 U2N Relay UE is provided with sidelink dedicated configuration as specified in 5.3.5.14, L2 U2N Relay UE configuration as specified in 5.3.5.15, as well as Uu Relay RLC channel configuration as specified in 5.3.5.5.12 and 5.3.5.5.13.

5.3.5.17.2.2 SL indirect path specific configuration

The L2 U2N Remote UE shall:

- 1> if *sl-IndirectPathAddChange* is set to *setup*:
 - 2> if the *sl-IndirectPathMaintain* is included in *reconfigurationWithSync*:
 - 3> consider the source L2 U2N Relay UE to be the L2 U2N Relay UE on indirect path in MP operation;
 - 2> else:
 - 3> consider the UE indicated by the *sl-IndirectPathRelayUE-Identity* to be the (target) L2 U2N Relay UE and indicate to upper layer to trigger the PC5 unicast link establishment with the L2 U2N Relay UE;
 - 3> start timer T421 for the corresponding L2 U2N Relay UE with the timer value set to *T421*;
 - 3> if *reconfigurationWithSync* is not included in the same *RRCReconfiguration* message:
 - 4> indicate to upper layer (to trigger the PC5 unicast link release) with the source L2 U2N Relay UE in case of SL indirect path change (i.e. a new L2 U2N Relay UE is indicated via *sl-IndirectPathRelayUE-Identity*);
 - 1> else if *sl-IndirectPathAddChange* is set to *release*:
 - 2> consider the SL indirect path is released and release the corresponding configurations;
 - 2> indicate to upper layer (to trigger the PC5 unicast link release) with the L2 U2N Relay UE.

NOTE: The MP direct path addition is realized by indirect-to-direct path switch procedure (i.e. *ReconfigurationWithSync* included in *RRCReconfiguration* message), where *sl-IndirectPathAddChange* is set to *setup* in *RRCReconfiguration* message.

5.3.5.17.2.3 T421 expiry (Indirect path addition/change failure)

The L2 U2N Remote UE shall:

1> if T421 expires; or

1> if the (target) L2 U2N Relay UE (i.e., the UE indicated by *sl-IndirectPathRelayUE-Identity* in the received *sl-IndirectPathAddChange*) changes its serving cell to a different cell from the target cell (i.e. the cell indicated by *sl-IndirectPathCellIdentity* in the received *sl-IndirectPathAddChange*) during path addition or change:

2> if MCG transmission is not suspended:

3> initiate the indirect path failure information procedure as specified in clause 5.7.3c to report SL indirect path addition/change failure;

2> else:

3> initiate the connection re-establishment procedure as specified in clause 5.3.7;

5.3.5.17.3 Configuration of N3C indirect path

5.3.5.17.3.1 General

For N3C indirect path,

- the N3C remote UE is provided with N3C indirect path configuration including relay UE identification as specified in 5.3.5.17.3.2;
- the N3C relay UE is provided with N3C indirect path configuration including bearer mapping configurations as specified in 5.3.5.17.3.4, as well as Uu Relay RLC channel configuration as specified in 5.3.5.5.12 and 5.3.5.5.13.

NOTE: The data transmission/reception between the N3C remote UE and the N3C relay UE via the non-3GPP connection is outside the scope of 3GPP.

5.3.5.17.3.2 N3C remote UE configuration

The N3C remote UE shall:

1> if *n3c-IndirectPathAddChange* is set to setup:

2> consider the non-3GPP connection with the relay UE indicated by the *n3c-RelayIdentification* to be used for the N3C indirect path;

2> consider the source non-3GPP connection is not to be used in case of N3C indirect path change (i.e. a new relay UE is indicated by the *n3c-RelayIdentification*);

1> else if *n3c-IndirectPathAddChange* is set to release:

2> consider the indirect path is not to be used and release the corresponding configuration.

5.3.5.17.3.2a N3C Indirect path addition/change failure

The N3C remote UE shall:

1> if N3C Indirect path addition/change failure is detected:

2> if MCG transmission is not suspended:

3> initiate the indirect path failure information procedure as specified in clause 5.7.3c to report N3C indirect path addition/change failure;

2> else:

3> initiate the connection re-establishment procedure as specified in clause 5.3.7;

NOTE: How to detect N3C Indirect path addition/change failure is up to UE implementation.

5.3.5.17.3.3 N3C relay UE configuration

The N3C relay UE shall:

- 1> if *n3c-IndirectPathConfigRelay* is set to *setup*:
 - 2> if *n3c-MappingToReleaseList* is included:
 - 3> perform N3C bearer mapping release as specified in 5.3.5.17.3.4.1;
 - 2> if *n3c-MappingToAddModList* is included:
 - 3> perform N3C bearer mapping addition/modification as specified in 5.3.5.17.3.4.2;
- 1> else if *n3c-IndirectPathConfigRelay* is set to *release*:
 - 2> consider the indirect path with the remote UE is released and release the corresponding configuration.

5.3.5.17.3.4 Bearer mapping management on N3C indirect path

5.3.5.17.3.4.1 Bearer mapping release

The UE shall:

- 1> if the release is triggered by reception of *n3c-IndirectPathConfigRelay* set to *release*:
 - 2> for all configured *SL-RemoteUE-RB-Identity* value:
 - 3> release *n3c-RLC-ChannelUu* and *n3c-RemoteUE-RB-Identity*;
- 1> else if the release is triggered by reception of the *n3c-MappingToReleaseList*:
 - 2> for each *SL-RemoteUE-RB-Identity* value included in *n3c-MappingToReleaseList*:
 - 3> release the corresponding *n3c-RLC-ChannelUu* and *n3c-RemoteUE-RB-Identity*;

5.3.5.17.3.4.2 Bearer mapping addition and modification

The UE shall:

- 1> for each *n3c-RemoteUE-RB-Identity* value included in the *n3c-MappingToAddModList* that is not part of the current UE configuration:
 - 2> associate the remote UE's RB indicated in *n3c-RemoteUE-RB-Identity* to the Uu Relay RLC channel indicated in *n3c-RLC-ChannelUu*;
- 1> for the *n3c-RemoteUE-RB-Identity* value included in the *n3c-MappingToAddModList* that is part of the current UE configuration:
 - 2> update the associated Uu Relay RLC channel to the one indicated in *n3c-RLC-ChannelUu*.

5.3.5.18 LTM configuration and execution

5.3.5.18.1 LTM configuration

The network configures the UE with one or more LTM candidate configurations within the *LTM-Config* IE.

In NR-DC, the UE may receive two independent *ltm-Config*:

- an *ltm-Config* associated with the MCG that is included within an *RRCReconfiguration* message received via SRB1; and
- an *ltm-Config* associated with the SCG that is included within an *RRCReconfiguration* message either received via SRB3, or, alternatively, embedded in an *RRCReconfiguration* message received via SRB1.

In case the UE receives two independent *ltm-Config*:

- the UE maintains two independent *ltm-Config*;
- the UE maintains two independent *VarLTM-ServingCellNoResetID*, one associated with each *ltm-Config*;
- the UE maintains two independent *VarLTM-ServingCellUE-MeasuredTA-ID*, one associated with each *ltm-Config*;
- the UE independently performs all the procedures in clause 5.3.5.18 for each *ltm-Config* and the associated *VarLTM-ServingCellNoResetID* and *VarLTM-ServingCellUE-MeasuredTA-ID* unless explicitly stated otherwise.

The UE shall perform the following actions based on the received *LTM-Config* IE:

- 1> if the received *LTM-Config* includes *ltm-ServingCellNoResetID*:
 - 2> if the current *VarLTM-ServingCellNoResetID* includes an *ltm-ServingCellNoResetID*:
 - 3> replace the *ltm-ServingCellNoResetID* value within *VarLTM-ServingCellNoResetID* with the received *ltm-ServingCellNoResetID*;
 - 2> else:
 - 3> store the received *ltm-ServingCellNoResetID* in *VarLTM-ServingCellNoResetID*;
- 1> if the received *LTM-Config* includes *ltm-ServingCellUE-MeasuredTA-ID*:
 - 2> if the current *VarLTM-ServingCellUE-MeasuredTA-ID* includes an *ltm-ServingCellUE-MeasuredTA-ID*:
 - 3> replace the *ltm-ServingCellUE-MeasuredTA-ID* value within *VarLTM-ServingCellUE-MeasuredTA-ID* with the received *ltm-ServingCellUE-MeasuredTA-ID*;
 - 2> else:
 - 3> store the received *ltm-ServingCellUE-MeasuredTA-ID* in *VarLTM-ServingCellUE-MeasuredTA-ID*;
- 1> if the received *LTM-Config* includes the *ltm-CandidateToReleaseList*:
 - 2> perform the LTM candidate configuration release as specified in 5.3.5.18.2;
- 1> if the received *LTM-Config* includes the *ltm-CandidateToAddModList*:
 - 2> perform the LTM candidate configuration addition or modification as specified in 5.3.5.18.3;
- 1> reconfigure the UE according to all other fields of the received *LTM-Config* IE.

5.3.5.18.2 LTM candidate configuration release

The UE shall:

- 1> for each *ltm-CandidateId* value included in the *ltm-CandidateToReleaseList* that is part of the current UE configuration:
- 2> remove the corresponding *LTM-Candidate*.

5.3.5.18.3 LTM candidate configuration addition/modification

The UE shall:

- 1> for each *ltm-CandidateId* value included in the *ltm-CandidateToAddModList*:
 - 2> if the current UE configuration contains an *LTM-Candidate* with the *ltm-CandidateId* value:
 - 3> reconfigure the corresponding *LTM-Candidate* in accordance with the received *LTM-Candidate*;
 - 2> else:

- 3> add the received *LTM-Candidate*;
- 2> if the *LTM-Candidate* with the received *ltm-CandidateId* value includes *ltm-UE-MeasuredTA-ID*:
 - 3> if the value of *ltm-UE-MeasuredTA-ID* is equal to the value of *ltm-ServingCellUE-MeasuredTA-ID* within *VarLTM-ServingCellUE-MeasuredTA-ID*:
 - 4> inform lower layers that the UE is configured with UE-based TA measurements for this *LTM-Candidate*;
 - 3> else:
 - 4> inform lower layers that the UE is not configured with UE-based TA measurements for this *LTM-Candidate*;
- 2> else:
 - 3> inform lower layers that the UE is not configured with UE-based TA measurements for this *LTM-Candidate*.

5.3.5.18.4 Void

5.3.5.18.5 Void

5.3.5.18.6 LTM cell switch execution

Upon the indication by lower layers that an LTM cell switch procedure is triggered, or upon performing LTM cell switch following cell selection performed while timer T311 was running, as specified in 5.3.7.3, the UE shall:

- 1> if the LTM cell switch is triggered on the MCG:
 - 2> release/clear all current dedicated and common radio configurations which have neither been received via SRB1 within *mrdc-SecondaryCellGroup*, nor via SRB3 except for the following:
 - the radio bearer configuration (configured via *RadioBearerConfig*)
 - the *logicalChannelIdentity* and *logicalChannelIdentityExt* of RLC bearers configured in *RLC-BearerConfig* and the associated RLC entities, their state variables, buffers, and timers, except for triggering the associated RLC entities to reset the variable RETX_COUNT its initial value, as specified in TS 38.322 [4];
 - the *bh-LogicalChannelIdentity* of BH RLC channels configured in *BH-RLC-ChannelConfig* and the associated RLC entities, their state variables, buffers, and timers, except for triggering the associated RLC entities to reset the variable RETX_COUNT its initial value, as specified in TS 38.322 [4];
 - the UE variables *VarLTM-ServingCellNoResetID* and *VarLTM-ServingCellUE-MeasuredTA-ID*;
 - the *ltm-Config*;
 - the MCG C-RNTI;
 - the AS security configurations associated with the master key;
 - the logged measurement configuration;
- 1> else, if the LTM cell switch is triggered on the SCG:
 - 2> release/clear all current dedicated and common radio configurations which have been received either via SRB1 within *mrdc-SecondaryCellGroup*, or via SRB3 except for the following:
 - the radio bearer configuration (configured via *RadioBearerConfig* IE)
 - the *logicalChannelIdentity* and *logicalChannelIdentityExt* of RLC bearers configured in *RLC-BearerConfig* and the associated RLC entities, their state variables, buffers, and timers, except for

triggering the associated RLC entities to reset the variable RETX_COUNT its initial value, as specified in TS 38.322 [4];

- the *bh-LogicalChannelIdentity* of BH RLC channels configured in *BH-RLC-ChannelConfig* and the associated RLC entities, their state variables, buffers, and timers, except for triggering the associated RLC entities to reset the variable RETX_COUNT its initial value, as specified in TS 38.322 [4];
- the UE variables *VarLTM-ServingCellNoResetID* and *VarLTM-ServingCellUE-MeasuredTA-ID*;
- the *ltm-Config*;
- the AS security configurations associated with the secondary key;

1> for each SRB/DRB in the current UE configuration:

- 2> if the LTM cell switch is triggered on the MCG and the SRB/DRB using the master key; or
- 2> if the LTM cell switch is triggered on the SCG and the SRB/DRB using the secondary key:
 - 3> keep the associated PDCP and SDAP entities, their state variables, buffers and timers;
 - 3> release all fields related to the SRB/DRB configuration except for *srb-Identity* and *drb-Identity*;
 - 3> apply the default SRB configuration defined in 9.2.1 for the corresponding SRB;

NOTE 00: For all radio bearers and RLC bearers included in the LTM candidate configuration to be applied at an LTM cell switch execution (i.e., as derived from the LTM reference configuration and the LTM candidate configuration), even if those radio bearers and RLC bearers were configured before the LTM cell switch execution, the network includes fields as specified for the initial setup of radio bearers and RLC bearers and sets the values previously stored by the UE for the fields that cannot be modified according to presence conditions or field descriptions.

- 1> apply the default L1 parameter values as specified in corresponding physical layer specifications except for the parameters for which values are provided in SIB1;
- 1> use the default values specified in 9.2.3 for timers T310, T311 and constants N310, N311 associated with the cell group for which the LTM cell switch procedure is triggered, where T310, N310, and N311 are for both MCG and SCG, and T311 is only for the MCG;
- 1> apply the default MAC Cell Group configuration as specified in 9.2.2 for the cell group for which the LTM cell switch procedure is triggered;
- 1> if the *LTM-Candidate* IE in *ltm-Config* indicated by lower layers or for the selected cell in accordance with 5.3.7.3 does not contain the field *ltm-NoResetID* and if the UE does not have any value stored of *ltm-ServingCellNoResetID* within *VarLTM-ServingCellNoResetID*; or
- 1> if the value of field *ltm-NoResetID* contained within the *LTM-Candidate* IE in *ltm-Config* indicated by lower layers or for the selected cell in accordance with 5.3.7.3 is not equal to the value of *ltm-ServingCellNoResetID* within *VarLTM-ServingCellNoResetID*:
 - 2> for each *logicalChannelIdentity* and *logicalChannelIdentityExt* that is part of the current UE configuration for the cell group for which the LTM cell switch procedure is triggered:
 - 3> if *servedRadioBearer* is set to *drb-Identity*:
 - 4> after the end of this procedure, re-establish the corresponding RLC entity as specified in TS 38.322 [4], after applying the LTM configuration in *ltm-CandidateConfig* within the *LTM-Candidate* IE in *ltm-Config*;
 - 2> for each *bh-LogicalChannelIdentity* that is part of the current UE configuration for the cell group for which the LTM cell switch procedure is triggered:
 - 3> after the end of this procedure, re-establish the corresponding RLC entity as specified in TS 38.322 [4], after applying the LTM configuration in *ltm-CandidateConfig* within the *LTM-Candidate* IE in *ltm-Config*;

- 2> for each *drb-Identity* value that is part of the current UE configuration:
 - 3> if this DRB is an AM DRB:
 - 4> after the end of this procedure, trigger the PDCP entity of this DRB to perform data recovery as specified in TS 38.323 [5], after applying the LTM configuration in *ltm-CandidateConfig* within *LTM-Candidate* IE in *ltm-Config*;
 - 2> if the value of field *ltm-NoResetID* contained within the *LTM-Candidate* IE in *ltm-Config* indicated by lower layers or for the selected cell in accordance with 5.3.7.3 is not equal to the value of *ltm-ServingCellNoResetID* within *VarLTM-ServingCellNoResetID*:
 - 3> replace the value of *ltm-ServingCellNoResetID* in *VarLTM-ServingCellNoResetID* with the value of *ltm-NoResetID* in the *LTM-Candidate* in *ltm-Config* indicated by lower layers or for the selected cell in accordance with 5.3.7.3;
- 1> if the *LTM-Candidate* IE in *ltm-Config* indicated by lower layers or for the selected cell in accordance with 5.3.7.3 contains the field *ltm-UE-MeasuredTA-ID*:
 - 2> if the value of *ltm-UE-MeasuredTA-ID* is not equal to the value of *ltm-ServingCellUE-MeasuredTA-ID* within *VarLTM-ServingCellUE-MeasuredTA-ID*:
 - 3> replace the value of *ltm-ServingCellUE-MeasuredTA-ID* in *VarLTM-ServingCellUE-MeasuredTA-ID* with the value received within *ltm-UE-MeasuredTA-ID*;
 - 3> for each *LTM-Candidate* IE in *ltm-Config*:
 - 4> if the value of *ltm-UE-MeasuredTA-ID* within *LTM-Candidate* IE is equal to the value of *ltm-ServingCellUE-MeasuredTA-ID* within *VarLTM-ServingCellUE-MeasuredTA-ID*:
 - 5> inform lower layers that the UE is configured with UE-based TA measurements for the *LTM-Candidate*;
 - 4> else:
 - 5> inform lower layers that the UE is not configured with UE-based TA measurements for the *LTM-Candidate*;

NOTE 0: The UE is not expected to perform UE-based TA measurements for an SpCell.

- 1> if *ltm-ConfigComplete* is not included within the *LTM-Candidate* IE in *ltm-Config* indicated by lower layers or for the selected cell in accordance with 5.3.7.3:
 - 2> consider *ltm-ReferenceConfiguration* in *ltm-Config*, associated with the cell group for which the LTM cell switch procedure is triggered, to be the current UE configuration for the fields and configurations to be released by the actions above in this procedure;
- 2> if *measConfig* is included within *ltm-ReferenceConfiguration* in *ltm-Config*:
 - 3> perform the measurement configuration procedure as specified in clause 5.5.2 by considering the *measConfig* within *ltm-ReferenceConfiguration* in *ltm-Config* as the received *measConfig*;

NOTE 1: When the UE considers the reference configuration to be the current UE configuration, the UE should store fields and configurations that are part of the reference configuration but should not execute any actions or procedures triggered by the reception of an *RRCReconfiguration* message which are described in clause 5.3.5.3, unless specified otherwise in this clause.

- 1> if the LTM cell switch is triggered by an indication from lower layers:
 - 2> apply the *RRCReconfiguration* message in *ltm-CandidateConfig* within *LTM-Candidate* IE in *ltm-Config* identified by the LTM candidate configuration identity received from lower layers according to clause 5.3.5.3;
- 1> else (LTM cell switch triggered upon cell selection performed while timer T311 was running):

- 2> apply the *RRCReconfiguration* message in *ltm-CandidateConfig* within *LTM-Candidate* IE in *ltm-Config* related to the LTM candidate configuration identity for the selected cell (i.e., in accordance with 5.3.7.3) according to clause 5.3.5.3;

1> if the LTM cell switch is triggered on the MCG:

- 2> release the radio bearer(s) using the master key and the MCG logical channel(s) that were part of the UE configuration before this LTM cell switch procedure but not part of the LTM candidate configuration either indicated by lower layers or for the selected cell in accordance with 5.3.7.3, or the LTM reference configuration (in case the LTM candidate configuration does not include *ltm-ConfigComplete*);

1> else, if the LTM cell switch is triggered on the SCG:

- 2> release the radio bearer(s) using the secondary key and the SCG logical channel(s) that were part of the UE configuration before this LTM cell switch procedure but not part of the LTM candidate configuration either indicated by lower layers or for the selected cell in accordance with 5.3.7.3, or the LTM reference configuration (in case the LTM candidate configuration does not include *ltm-ConfigComplete*);

NOTE 2: When *ltm-ConfigComplete* is not included for an LTM candidate configuration, before an LTM cell switch is triggered a UE implementation may generate and store an *RRCReconfiguration* message by applying the received LTM candidate configuration on top of the LTM reference configuration, and the stored *RRCReconfiguration* message is applied when the LTM cell switch is triggered. It is up to the UE to ensure that the RRC reconfiguration applied at the time of LTM cell switch is in accordance with the latest LTM reference configuration and LTM candidate configuration.

5.3.5.18.7 LTM configuration release

For the cell group for which the LTM configuration release procedure is triggered, the UE shall:

- 1> remove the entry within *VarLTM-ServingCellNoResetID*;
- 1> remove the entry within *VarLTM-ServingCellUE-MeasuredTA-ID*;
- 1> release *ltm-Config*.

5.3.5.19 T348 expiry

The UE can apply the temporary UE capability restriction in accordance with the one indicated in the last transmission of the *UEAssistanceInformation* message including *musim-CapRestriction*, as specified in 5.7.4.3.

5.3.6 Counter check

5.3.6.1 General

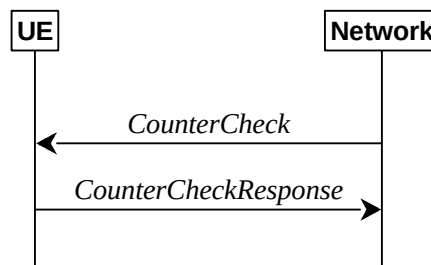 


Figure 5.3.6.1-1: Counter check procedure

The counter check procedure is used by the network to request the UE to verify the amount of data sent/ received on each DRB. More specifically, the UE is requested to check if, for each DRB, the most significant bits of the COUNT match with the values indicated by the network.

NOTE: The procedure enables the network to detect packet insertion by an intruder (a 'man in the middle').

5.3.6.2 Initiation

The network initiates the procedure by sending a *CounterCheck* message.

NOTE: The network may initiate the procedure when any of the COUNT values reaches a specific value.

5.3.6.3 Reception of the *CounterCheck* message by the UE

Upon receiving the *CounterCheck* message, the UE shall:

- 1> for each DRB that is established:
 - 2> if no COUNT exists for a given direction (uplink or downlink) because it is a uni-directional bearer configured only for the other direction:
 - 3> assume the COUNT value to be 0 for the unused direction;
 - 2> if the *drb-Identity* is not included in the *drb-CountMSB-InfoList*:
 - 3> include the DRB in the *drb-CountInfoList* in the *CounterCheckResponse* message by including the *drb-Identity*, the *count-Uplink* and the *count-Downlink* set to the value of TX_NEXT – 1 and RX_NEXT – 1 (specified in TS 38.323 [5]), respectively;
 - 2> else if, for at least one direction, the most significant bits of the COUNT are different from the value indicated in the *drb-CountMSB-InfoList*:
 - 3> include the DRB in the *drb-CountInfoList* in the *CounterCheckResponse* message by including the *drb-Identity*, the *count-Uplink* and the *count-Downlink* set to the value of TX_NEXT – 1 and RX_NEXT – 1 (specified in TS 38.323 [5]), respectively;
- 1> for each DRB that is included in the *drb-CountMSB-InfoList* in the *CounterCheck* message that is not established:
 - 2> include the DRB in the *drb-CountInfoList* in the *CounterCheckResponse* message by including the *drb-Identity*, the *count-Uplink* and the *count-Downlink* with the most significant bits set identical to the corresponding values in the *drb-CountMSB-InfoList* and the least significant bits set to zero;
- 1> submit the *CounterCheckResponse* message to lower layers for transmission upon which the procedure ends.

5.3.7 RRC connection re-establishment

5.3.7.1 General

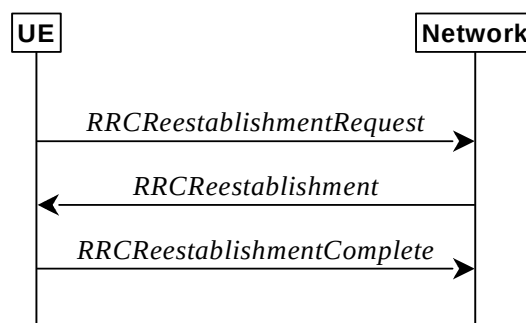 


Figure 5.3.7.1-1: RRC connection re-establishment, successful

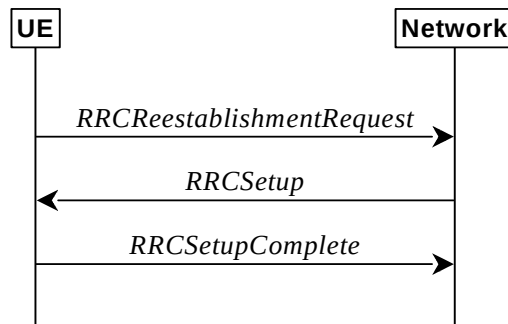 


Figure 5.3.7.1-2: RRC re-establishment, fallback to RRC establishment, successful

The purpose of this procedure is to re-establish the RRC connection. A UE in RRC_CONNECTED, for which AS security has been activated with SRB2 and at least one DRB/multicast MRB setup or, for IAB and NCR, SRB2, may initiate the procedure in order to continue the RRC connection. The connection re-establishment succeeds if the network is able to find and verify a valid UE context or, if the UE context cannot be retrieved, and the network responds with an *RRCSetup* according to clause 5.3.3.4.

The network applies the procedure e.g as follows:

- When AS security has been activated and the network retrieves or verifies the UE context:
 - to re-activate AS security without changing algorithms;
 - to re-establish and resume the SRB1;
- When UE is re-establishing an RRC connection, and the network is not able to retrieve or verify the UE context:
 - to discard the stored AS Context and release all RBs and BH RLC channels and Uu Relay RLC channels;
 - to fallback to establish a new RRC connection.

If AS security has not been activated, the UE shall not initiate the procedure but instead moves to RRC_IDLE directly, with release cause 'other'. If AS security has been activated, but SRB2 and at least one DRB or multicast MRB or, for IAB and NCR, SRB2, are not setup, the UE does not initiate the procedure but instead moves to RRC_IDLE directly, with release cause 'RRC connection failure'.

5.3.7.2 Initiation

The UE initiates the procedure when one of the following conditions is met:

- 1> upon detecting radio link failure of the MCG and t_{316} is not configured, in accordance with 5.3.10; or
- 1> upon detecting radio link failure of the MCG while SCG transmission is suspended, in accordance with 5.3.10; or
- 1> upon detecting radio link failure of the MCG while PSCell change or PSCell addition is ongoing, in accordance with 5.3.10; or
- 1> upon detecting radio link failure of the MCG while the SCG is deactivated, in accordance with 5.3.10; or
- 1> upon re-configuration with sync failure of the MCG, in accordance with clause 5.3.5.8.3; or
- 1> upon mobility from NR failure, in accordance with clause 5.4.3.5; or
- 1> upon integrity check failure indication from lower layers concerning SRB1 or SRB2, except if the integrity check failure is detected on the *RRCReestablishment* message; or
- 1> upon an RRC connection reconfiguration failure, in accordance with clause 5.3.5.8.2; or
- 1> upon detecting radio link failure for the SCG while MCG transmission is suspended, in accordance with clause 5.3.10.3 in NR-DC or in accordance with TS 36.331 [10] clause 5.3.11.3 in NE-DC; or

- 1> upon reconfiguration with sync failure of the SCG while MCG transmission is suspended in accordance with clause 5.3.5.8.3; or
- 1> upon SCG change failure while MCG transmission is suspended in accordance with TS 36.331 [10] clause 5.3.5.7a; or
- 1> upon SCG configuration failure while MCG transmission is suspended in accordance with clause 5.3.5.8.2 in NR-DC or in accordance with TS 36.331 [10] clause 5.3.5.5 in NE-DC; or
- 1> upon integrity check failure indication from SCG lower layers concerning SRB3 while MCG is suspended; or
- 1> upon T316 expiry, in accordance with clause 5.7.3b.5; or
- 1> upon detecting sidelink radio link failure by L2 U2N Remote UE in RRC_CONNECTED which is not configured with MP, in accordance with clause 5.8.9.3; or
- 1> upon reception of *NotificationMessageSidelink* including *indicationType* by L2 U2N Remote UE in RRC_CONNECTED which is not configured with MP, in accordance with clause 5.8.9.10; or
- 1> upon PC5 unicast link release for the serving L2 U2N Relay UE indicated by upper layer at L2 U2N Remote UE in RRC_CONNECTED which is not configured with MP while T301 is not running; or
- 1> if MP is configured, upon detecting radio link failure of the MCG (i.e. direct path) in accordance with clause 5.3.10 while the transmission of indirect path is suspended as specified in 5.3.5.17; or
- 1> if MP is configured, upon detecting radio link failure of the MCG (i.e. direct path) in accordance with 5.3.10 while MP indirect path addition or change is ongoing; or
- 1> if MP is configured, upon detecting sidelink radio link failure of SL indirect path by L2 U2N Remote UE, in accordance with clause 5.8.9.3, while MCG transmission (i.e. direct path) is suspended as specified in clause 5.7.3b; or
- 1> if MP is configured, upon reception of *NotificationMessageSidelink* including *indicationType* in accordance with clause 5.8.9.10, while MCG transmission (i.e. direct path) is suspended as specified in clause 5.7.3b; or
- 1> if MP is configured, upon PC5 unicast link release indicated by upper layer at L2 U2N Remote UE, while MCG transmission (i.e. direct path) is suspended as specified in clause 5.7.3b; or
- 1> if MP is configured, upon detecting the failure of N3C indirect path by N3C remote UE in accordance with clause 5.7.3c, while MCG transmission (i.e. direct path) is suspended.

NOTE 0: It is up to UE implementation whether to initiate the procedure while T346g is running.

Upon initiation of the procedure, the UE shall:

- 1> stop timer T310, if running;
- 1> stop timer T312, if running;
- 1> stop timer T304, if running;
- 1> start timer T311;
- 1> stop timer T316, if running;
- 1> stop timer T421, if running;
- 1> if UE is not configured with *attemptCondReconfig*; and
- 1> if UE is not configured with *attemptLTM-Switch*:
 - 2> reset MAC;
 - 2> release *spCellConfig*, if configured;
 - 2> suspend all RBs, and BH RLC channels for IAB-MT, and Uu Relay RLC channels for L2 U2N Relay UE, except SRB0 and broadcast MRBs;

- 2> release the MCG SCell(s), if configured;
- 2> if MR-DC is configured:
 - 3> perform MR-DC release, as specified in clause 5.3.5.10;
- 2> perform the LTM configuration release procedure for the MCG and the SCG as specified in clause 5.3.5.18.7;
- 2> release *delayBudgetReportingConfig*, if configured and stop timer T342, if running;
- 2> release *overheatingAssistanceConfig*, if configured and stop timer T345, if running;
- 2> release *idc-AssistanceConfig*, if configured;
- 2> release *btNameList*, if configured;
- 2> release *wlanNameList*, if configured;
- 2> release *sensorNameList*, if configured;
- 2> release *drx-PreferenceConfig* for the MCG, if configured and stop timer T346a associated with the MCG, if running;
- 2> release *maxBW-PreferenceConfig* for the MCG, if configured and stop timer T346b associated with the MCG, if running;
- 2> release *maxCC-PreferenceConfig* for the MCG, if configured and stop timer T346c associated with the MCG, if running;
- 2> release *maxMIMO-LayerPreferenceConfig* for the MCG, if configured and stop timer T346d associated with the MCG, if running;
- 2> release *minSchedulingOffsetPreferenceConfig* for the MCG, if configured stop timer T346e associated with the MCG, if running;
- 2> release *rlm-RelaxationReportingConfig* for the MCG, if configured and stop timer T346j associated with the MCG, if running;
- 2> release *bfd-RelaxationReportingConfig* for the MCG, if configured and stop timer T346k associated with the MCG, if running;
- 2> release *releasePreferenceConfig*, if configured stop timer T346f, if running;
- 2> release *onDemandSIB-Request* if configured, and stop timer T350, if running;
- 2> release *referenceTimePreferenceReporting*, if configured;
- 2> release *sl-AssistanceConfigNR*, if configured;
- 2> release *obtainCommonLocation*, if configured;
- 2> release *musim-GapAssistanceConfig*, if configured and stop timer T346h, if running;
- 2> release *musim-GapPriorityAssistanceConfig*, if configured;
- 2> release *musim-LeaveAssistanceConfig*, if configured;
- 2> release *musim-CapabilityRestrictionConfig*, if configured and stop timer T346n, if running;
- 2> release *ul-GapFR2-PreferenceConfig*, if configured;
- 2> release *scg-DeactivationPreferenceConfig*, if configured, and stop timer T346i, if running;
- 2> release *propDelayDiffReportConfig*, if configured;
- 2> release *rrm-MeasRelaxationReportingConfig*, if configured;

- 2> release *maxBW-PreferenceConfigFR2-2*, if configured;
- 2> release *maxMIMO-LayerPreferenceConfigFR2-2*, if configured;
- 2> release *minSchedulingOffsetPreferenceConfigExt*, if configured;
- 2> release *multiRx-PreferenceReportingConfigFR2*, if configured, and stop timer T346m, if running;
- 2> release *aerial-FlightPathAvailabilityConfig*, if configured;
- 2> release *ul-TrafficInfoReportingConfig*, if configured, and stop all instances of timer T346l, if running;
- 1> release *successHO-Config*, if configured;
- 1> release *successPSCell-Config* configured by the PCell, if configured;
- 1> if any DAPS bearer is configured:
 - 2> reset the source MAC and release the source MAC configuration;
 - 2> for each DAPS bearer:
 - 3> release the RLC entity or entities as specified in TS 38.322 [4], clause 5.1.3, and the associated logical channel for the source SpCell;
 - 3> reconfigure the PDCP entity to release DAPS as specified in TS 38.323 [5];
 - 2> for each SRB:
 - 3> release the PDCP entity for the source SpCell;
 - 3> release the RLC entity as specified in TS 38.322 [4], clause 5.1.3, and the associated logical channel for the source SpCell;
 - 2> release the physical channel configuration for the source SpCell;
 - 2> discard the keys used in the source SpCell (the K_{gNB} key, the K_{RRCenc} key, the K_{RRCint} key, the K_{UPint} key and the K_{UPenc} key), if any;
- 1> release *sl-L2RelayUE-Config* for L2 U2N relay operation, if configured;
- 1> release *sl-L2RemoteUE-Config* for L2 U2N relay operation, if configured;
- 1> release the SRAP entity for L2 U2N relay operation, if configured;
- 1> release *ncr-FwdConfig*, if configured;
- 1> if the UE is NCR-MT:
 - 2> indicate to NCR-Fwd to cease forwarding;
- 1> if SL indirect path is configured:
 - 2> release cell identity and relay UE ID configured in *sl-IndirectPathAddChange*;
 - 2> indicate upper layers to trigger PC5 unicast link release of the SL indirect path;
- 1> if N3C indirect path is configured:
 - 2> release *n3c-IndirectPathAddChange*;
 - 2> consider the non-3GPP connection is not used;
- 1> if the UE is acting as a N3C relay UE:
 - 2> release *n3c-IndirectPathConfigRelay*;
 - 2> consider the non-3GPP connection is not used;

- 1> if the UE is acting as L2 U2N Remote UE and MP via L2 U2N Relay UE is not configured:
 - 2> if the PC5-RRC connection with the U2N Relay UE is determined to be released:
 - 3> indicate upper layers to trigger PC5 unicast link release;
 - 3> perform either cell selection in accordance with the cell selection process as specified in TS 38.304 [20], or relay selection as specified in clause 5.8.15.3, or both;
 - 2> else (i.e., maintain the PC5 RRC connection):
 - 3> consider the connected L2 U2N Relay UE as suitable and perform actions as specified in clause 5.3.7.3a;

NOTE 1: It is up to Remote UE implementation whether to release or keep the current PC5 unicast link.

1> else:

- 2> if the UE is capable of L2 U2N Remote UE:
 - 3> perform either cell selection as specified in TS 38.304 [20], or relay selection as specified in clause 5.8.15.3, or both;
- 2> else:
 - 3> perform cell selection in accordance with the cell selection process as specified in TS 38.304 [20].

NOTE 2: For L2 U2N Remote UE, if both a suitable cell and a suitable relay are available, the UE can select either one based on its implementation.

5.3.7.3 Actions following cell selection while T311 is running

Upon selecting a suitable NR cell, the UE shall:

- 1> ensure having valid and up to date essential system information as specified in clause 5.2.2.2;
- 1> stop timer T311;
- 1> if T390 is running:
 - 2> stop timer T390 for all access categories;
 - 2> perform the actions as specified in 5.3.14.4;
- 1> stop the relay (re)selection procedure, if ongoing;
- 1> if the cell selection is triggered by detecting radio link failure of the MCG or re-configuration with sync failure of the MCG, except for an LTM cell switch procedure following cell selection performed while timer T311 was running, as specified in 5.3.7.3, or mobility from NR failure, and
 - 1> if *attemptCondReconfig* is configured; and
 - 1> if the selected cell is not configured with *CondEventT1*, or the selected cell is configured with *CondEventT1* and leaving condition has not been fulfilled; and
 - 1> if the selected cell is one of the candidate cells for which the *reconfigurationWithSync* is included in the *masterCellGroup* in the MCG *VarConditionalReconfig* and the *condExecutionCondPSCell* is not configured for the corresponding *condReconfigId* in the MCG *VarConditionalReconfig*:
 - 2> if the UE supports RLF-Report for conditional handover, set the *choCellId* in the *VarRLF-Report* to the global cell identity, if available, otherwise to the physical cell identity and carrier frequency of the selected cell;
 - 2> apply the stored *condRRCReconfig* associated to the selected cell and perform actions as specified in 5.3.5.3;

NOTE 1: It is left to network implementation to how to avoid keystream reuse in case of CHO based recovery after a failed handover without key change.

- 1> if the cell selection is triggered by detecting radio link failure of the MCG or re-configuration with sync failure of the MCG for an LTM cell switch procedure triggered upon the indication by lower layers as specified in clause 5.3.5.18.6; and
- 1> if *attemptLTM-Switch* is configured; and
- 1> if the selected cell is one of the LTM candidate cells in the *LTM-Candidate* IE within *lrm-Config* associated with the MCG:
 - 2> perform the LTM cell switch procedure for the selected LTM candidate cell according to the actions specified in 5.3.5.18.6;

NOTE 2: In case both *attemptCondReconfig* and *attemptLTM-Switch* are configured, it is left to the UE implementation which procedure to execute.

1> else:

- 2> if UE is configured with *attemptCondReconfig*; or
- 2> if UE is configured with *attemptLTM-Switch*:
 - 3> reset MAC;
 - 3> release *spCellConfig*, if configured;
 - 3> release the MCG SCell(s), if configured;
 - 3> release *delayBudgetReportingConfig*, if configured and stop timer T342, if running;
 - 3> release *overheatingAssistanceConfig*, if configured and stop timer T345, if running;
 - 3> if MR-DC is configured:
 - 4> perform MR-DC release, as specified in clause 5.3.5.10;
 - 3> release *idc-AssistanceConfig*, if configured;
 - 3> release *btNameList*, if configured;
 - 3> release *wlanNameList*, if configured;
 - 3> release *sensorNameList*, if configured;
 - 3> release *drx-PreferenceConfig* for the MCG, if configured and stop timer T346a associated with the MCG, if running;
 - 3> release *maxBW-PreferenceConfig* for the MCG, if configured and stop timer T346b associated with the MCG, if running;
 - 3> release *maxCC-PreferenceConfig* for the MCG, if configured and stop timer T346c associated with the MCG, if running;
 - 3> release *maxMIMO-LayerPreferenceConfig* for the MCG, if configured and stop timer T346d associated with the MCG, if running;
 - 3> release *minSchedulingOffsetPreferenceConfig* for the MCG, if configured and stop timer T346e associated with the MCG, if running;
 - 3> release *rlm-RelaxationReportingConfig* for the MCG, if configured and stop timer T346j associated with the MCG, if running;
 - 3> release *bfd-RelaxationReportingConfig* for the MCG, if configured and stop timer T346k associated with the MCG, if running;
 - 3> release *releasePreferenceConfig*, if configured and stop timer T346f, if running;
 - 3> release *onDemandSIB-Request* if configured, and stop timer T350, if running;

- 3> release *referenceTimePreferenceReporting*, if configured;
- 3> release *sl-AssistanceConfigNR*, if configured;
- 3> release *obtainCommonLocation*, if configured;
- 3> release *scg-DeactivationPreferenceConfig*, if configured, and stop timer T346i, if running;
- 3> release *musim-GapAssistanceConfig*, if configured and stop timer T346h, if running;
- 3> release *musim-GapPriorityAssistanceConfig*, if configured;
- 3> release *musim-LeaveAssistanceConfig*, if configured;
- 3> release *musim-CapabilityRestrictionConfig*, if configured and stop timer T346n, if running;
- 3> release *propDelayDiffReportConfig*, if configured;
- 3> release *ul-GapFR2-PreferenceConfig*, if configured;
- 3> release *rrm-MeasRelaxationReportingConfig*, if configured;
- 3> release *maxBW-PreferenceConfigFR2-2*, if configured;
- 3> release *maxMIMO-LayerPreferenceConfigFR2-2*, if configured;
- 3> release *minSchedulingOffsetPreferenceConfigExt*, if configured;
- 3> release *multiRx-PreferenceReportingConfigFR2*, if configured, and stop timer T346m, if running;
- 3> release *aerial-FlightPathAvailabilityConfig*, if configured;
- 3> release *ul-TrafficInfoReportingConfig*, if configured, and stop all instances of timer T346l, if running;
- 3> suspend all RBs, and BH RLC channels for the IAB-MT, except SRB0 and broadcast MRBs;
- 2> remove all the entries within the MCG *VarConditionalReconfig*, if any;
- 2> perform the LTM configuration release procedure for the MCG and the SCG as specified in clause 5.3.5.18.7;
- 2> for each *measId*, if the associated *reportConfig* has a *reportType* set to *condTriggerConfig*:
 - 3> for the associated *reportConfigId*:
 - 4> remove the entry with the matching *reportConfigId* from the *reportConfigList* within the *VarMeasConfig*;
 - 3> if the associated *measObjectId* is only associated to a *reportConfig* with *reportType* set to *condTriggerConfig*:
 - 4> remove the entry with the matching *measObjectId* from the *measObjectList* within the *VarMeasConfig*;
 - 3> remove the entry with the matching *measId* from the *measIdList* within the *VarMeasConfig*;
- 2> remove the *servingSecurityCellSetId* within the *VarServingSecurityCellSetID*, if any;
- 2> release the PC5 RLC entity for SL-RLC0, if any;
- 2> start timer T301;
- 2> apply the default L1 parameter values as specified in corresponding physical layer specifications except for the parameters for which values are provided in *SIB1*;
- 2> apply the default MAC Cell Group configuration as specified in 9.2.2;
- 2> apply the CCCH configuration as specified in 9.1.1.2;

2> apply the *timeAlignmentTimerCommon* included in *SIB1*;

2> initiate transmission of the *RRCReestablishmentRequest* message in accordance with 5.3.7.4;

NOTE 2a: This procedure applies also if the UE returns to the source PCell.

NOTE 3: A L2 U2N Relay UE may re-establish (e.g. via release and establish) the SL-RLC0 and SL-RLC1 of the connected L2 U2N Remote UE(s).

Upon selecting an inter-RAT cell, the UE shall:

1> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure'.

5.3.7.3a Actions following relay selection while T311 is running

Upon selecting a suitable L2 U2N Relay UE, the L2 U2N Remote UE shall:

1> indicate to upper layer to trigger the PC5 unicast link establishment with the selected L2 U2N Relay UE, if a new L2 U2N Relay UE is selected;

1> ensure having valid and up to date essential system information as specified in clause 5.2.2.2;

1> stop timer T311;

1> if T390 is running:

2> stop timer T390 for all access categories;

2> perform the actions as specified in 5.3.14.4;

1> stop the cell selection procedure, if ongoing;

1> start timer T301;

1> release the RLC entity for SRB0, if any;

1> establish a SRAP entity as specified in TS 38.351 [66], if no SRAP entity has been established;

1> apply the specified configuration of SL-RLC0 as specified in 9.1.1.4;

1> apply the SDAP configuration and PDCP configuration as specified in 9.1.1.2 for SRB0;

1> initiate transmission of the *RRCReestablishmentRequest* message in accordance with 5.3.7.4.

5.3.7.4 Actions related to transmission of *RRCReestablishmentRequest* message

The UE shall set the contents of *RRCReestablishmentRequest* message as follows:

1> if the procedure was initiated due to radio link failure as specified in 5.3.10.3 or reconfiguration with sync failure as specified in 5.3.5.8.3; or

1> if the procedure was initiated due to mobility from NR failure as specified in 5.4.3.5 and if *voiceFallbackIndication* is included in the *MobilityFromNRCommand* message:

2> set the *reestablishmentCellId* in the *VarRLF-Report* to the global cell identity of the selected cell;

1> set the *ue-Identity* as follows:

2> set the *c-RNTI* to the C-RNTI used in the source PCell (reconfiguration with sync or mobility from NR failure) or used in the PCell in which the trigger for the re-establishment occurred (other cases);

2> set the *physCellId* to the physical cell identity of the source PCell (reconfiguration with sync or mobility from NR failure) or of the PCell in which the trigger for the re-establishment occurred (other cases);

2> set the *shortMAC-I* to the 16 least significant bits of the MAC-I calculated:

- 3> over the ASN.1 encoded as per clause 8 (i.e., a multiple of 8 bits) *VarShortMAC-Input*;
 - 3> with the $K_{RR\text{Cint}}$ key and integrity protection algorithm that was used in the source PCell (reconfiguration with sync or mobility from NR failure) or of the PCell in which the trigger for the re-establishment occurred (other cases); and
 - 3> with all input bits for COUNT, BEARER and DIRECTION set to binary ones;
- 1> set the *reestablishmentCause* as follows:
- 2> if the re-establishment procedure was initiated due to reconfiguration failure as specified in 5.3.5.8.2:
 - 3> set the *reestablishmentCause* to the value *reconfigurationFailure*;
 - 2> else if the re-establishment procedure was initiated due to reconfiguration with sync failure as specified in 5.3.5.8.3 (intra-NR handover failure) or 5.4.3.5 (inter-RAT mobility from NR failure):
 - 3> set the *reestablishmentCause* to the value *handoverFailure*;
 - 2> else:
 - 3> set the *reestablishmentCause* to the value *otherFailure*;
- 1> re-establish PDCP for SRB1;
- 1> if the UE is acting as L2 U2N Remote UE:
- 2> establish or re-establish (e.g. via release and add) SL RLC entity for SRB1;
 - 2> apply the default configuration of SL-RLC1 as defined in 9.2.4 for SRB1;
 - 2> apply the default configuration of PDCP as defined in 9.2.1 for SRB1;
 - 2> apply the default configuration of SRAP as defined in 9.2.5 for SRB1;
- 1> else:
- 2> re-establish RLC for SRB1;
 - 2> apply the default configuration defined in 9.2.1 for SRB1;
- 1> configure lower layers to suspend integrity protection and ciphering for SRB1;
- NOTE: Ciphering is not applied for the subsequent *RRCReestablishment* message used to resume the connection. An integrity check is performed by lower layers, but merely upon request from RRC.
- 1> resume SRB1;
- 1> if *ta-Report* or *ta-ReportATG* is configured with value *enabled* and the UE supports TA reporting:
- 2> indicate TA report initiation to lower layers;
- 1> submit the *RRCReestablishmentRequest* message to lower layers for transmission.

5.3.7.5 Reception of the *RRCReestablishment* by the UE

The UE shall:

- 1> stop timer T301;
- 1> consider the current cell to be the PCell;
- 1> update the K_{gNB} key based on the current K_{gNB} key or the NH, using the received *nextHopChainingCount* value, as specified in TS 33.501 [11];
- 1> store the *nextHopChainingCount* value indicated in the *RRCReestablishment* message;

- 1> derive the $K_{RR\text{Cenc}}$ and $K_{UP\text{enc}}$ keys associated with the previously configured *cipheringAlgorithm*, as specified in TS 33.501 [11];
- 1> derive the $K_{RR\text{Cint}}$ and $K_{UP\text{int}}$ keys associated with the previously configured *integrityProtAlgorithm*, as specified in TS 33.501 [11].
- 1> request lower layers to verify the integrity protection of the *RRCReestablishment* message, using the previously configured algorithm and the $K_{RR\text{Cint}}$ key;
- 1> if the integrity protection check of the *RRCReestablishment* message fails:
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure', upon which the procedure ends;
- 1> configure lower layers to resume integrity protection for SRB1 using the previously configured algorithm and the $K_{RR\text{Cint}}$ key immediately, i.e., integrity protection shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
- 1> configure lower layers to resume ciphering for SRB1 using the previously configured algorithm and, the $K_{RR\text{Cenc}}$ key immediately, i.e., ciphering shall be applied to all subsequent messages received and sent by the UE, including the message used to indicate the successful completion of the procedure;
- 1> release the measurement gap configuration indicated by the *measGapConfig*, if configured;
- 1> release the MUSIM gap configuration indicated by the *musim-GapConfig*, if configured;
- 1> release the FR2 UL gap configuration indicated by the *ul-GapFR2-Config*, if configured;
- 1> perform the L2 U2N Remote UE configuration procedure in accordance with the received *sl-L2RemoteUE-Config* as specified in 5.3.5.16;
- 1> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 2> if the RPLMN is not included in *plmn-IdentityList* in *VarAppLayerPLMN-ListConfig*:
 - 3> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 3> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*;
 - 3> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 3> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
- 1> set the content of *RRCReestablishmentComplete* message as follows:
 - 2> if the UE has logged measurements available for NR and if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*; or
 - 2> if the UE has logged measurements available for NR and if the current registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*:
 - 3> include the *logMeasAvailable* in the *RRCReestablishmentComplete* message;
 - 3> if Bluetooth measurement results are included in the logged measurements the UE has available for NR:
 - 4> include the *logMeasAvailableBT* in the *RRCReestablishmentComplete* message;
 - 3> if WLAN measurement results are included in the logged measurements the UE has available for NR:
 - 4> include the *logMeasAvailableWLAN* in the *RRCReestablishmentComplete* message;
 - 2> if the *sigLoggedMeasType* in *VarLogMeasReport* is included; or

- 2> if the UE supports the override protection of the signalling based logged MDT for inter-RAT (i.e. LTE to NR), and if the *sigLoggedMeasType* in *VarLogMeasReport* of TS 36.331 [10] is included:
 - 3> if T330 timer is running (associated to the logged measurement configuration for NR or for LTE):
 - 4> set *sigLogMeasConfigAvailable* to *true* in the *RRCReestablishmentComplete* message;
 - 3> else:
 - 4> if the UE has logged measurements in *VarLogMeasReport* or in *VarLogMeasReport* of TS 36.331 [10]:
 - 5> set *sigLogMeasConfigAvailable* to *false* in the *RRCReestablishmentComplete* message;
- 2> if the UE has connection establishment failure or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the RPLMN is equal to *plmn-Identity* stored in *VarConnEstFailReport* or in at least one of the entries of *VarConnEstFailReportList*; or
- 2> if the UE supports multiple CEF report and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the registered SNPN identity is equal to *snpn-Identity* in *networkIdentity* stored in *VarConnEstFailReport* or any entry of *VarConnEstFailReportList*:
 - 3> include *connEstFailInfoAvailable* in the *RRCReestablishmentComplete* message;
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report*; or
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* of TS 36.331 [10] and if the UE is capable of cross-RAT RLF reporting and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report* of TS 36.331 [10]; or
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in *VarRLF-Report*:
 - 3> include *rlf-InfoAvailable* in the *RRCReestablishmentComplete* message;
- 2> if the UE has successful handover information available in *VarSuccessHO-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessHO-Report*; or
- 2> if the UE has successful handover information available in *VarSuccessHO-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessHO-Report*:
 - 3> include *successHO-InfoAvailable* in the *RRCReestablishmentComplete* message;
- 2> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessPSCell-Report*; or
- 2> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessPSCell-Report*:
 - 3> include *successPSCell-InfoAvailable* in the *RRCReestablishmentComplete* message;
- 2> if the UE has flight path information available:
 - 3> include *flightPathInfoAvailable*;
- 2> if the UE has at least one stored application layer measurement configuration with *appLayerIdleInactiveConfig* configured which has not been successfully transmitted since entering *RRC_CONNECTED* state:
 - 3> include *measConfigReportAppLayerAvailable* in the *RRCReestablishmentComplete* message;
- 2> if *SIB1* contains *musim-CapRestrictionAllowed*:
 - 3> if supported, include the *musim-CapRestrictionInd* in the *RRCReestablishmentComplete* message upon determining it has temporary capability restriction;

NOTE: Upon reception of *musim-CapRestrictionInd* in *RRCReestablishmentComplete*, it is up to network implementation to configure the UE with a limited configuration that is used until network sends *RRCReconfiguration* based on the actual restricted UE capabilities included in *UEAssistanceInformation*.

- 1> submit the *RRCReestablishmentComplete* message to lower layers for transmission;
- 1> if *SIB21* is provided by the PCell; or
- 1> if *nonServingCellMII* is provided in *SIB1* by the PCell:
 - 2> if the UE initiated transmission of an *MBSInterestIndication* message during the last 1 second preceding detection of radio link failure:
 - 3> initiate transmission of an *MBSInterestIndication* message in accordance with 5.9.4;
- 1> the procedure ends.

5.3.7.6 T311 expiry

Upon T311 expiry, the UE shall:

- 1> if the procedure was initiated due to radio link failure or handover failure:
 - 2> set the *noSuitableCellFound* in the *VarRLF-Report* to *true*;
- 1> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure'.

5.3.7.7 T301 expiry or selected cell/L2 U2N Relay UE no longer suitable

The UE shall:

- 1> if timer T301 expires; or
- 1> if the selected cell becomes no longer suitable according to the cell selection criteria as specified in TS 38.304 [20]; or
- 1> if the (re)selected L2 U2N Relay UE becomes unsuitable; or
- 1> upon reception of *NotificationMessageSidelink* indicating *relayUE-HO* or *relayUE-CellReselection*; or
- 1> upon PC5 unicast link release indicated by upper layer at L2 U2N Remote UE:
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure'.

5.3.7.8 Reception of the *RRCSetup* by the UE

The UE shall:

- 1> perform the RRC connection establishment procedure as specified in 5.3.3.4.

5.3.8 RRC connection release

5.3.8.1 General

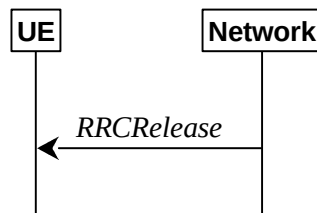 


Figure 5.3.8.1-1: RRC connection release, successful

The purpose of this procedure is:

- to release the RRC connection, which includes the release of the established radio bearers (except for broadcast MRBs), BH RLC channels, Uu Relay RLC channels, PC5 Relay RLC channels as well as all radio resources; or
- to suspend the RRC connection only if SRB2 and at least one DRB or multicast MRB or, for IAB and NCR, SRB2, are setup, which includes the suspension of the established radio bearers (except for broadcast MRBs).

5.3.8.2 Initiation

The network initiates the RRC connection release procedure to transit a UE in RRC_CONNECTED to RRC_IDLE; or to transit a UE in RRC_CONNECTED to RRC_INACTIVE only if SRB2 and at least one DRB or multicast MRB or, for IAB and NCR, SRB2, is setup in RRC_CONNECTED; or to transit a UE in RRC_INACTIVE back to RRC_INACTIVE when the UE tries to resume (for resuming a suspended RRC connection, for RNA Update or for initiating SDT); or to transit a UE in RRC_INACTIVE to RRC_IDLE when the UE tries to resume (for resuming of a suspended RRC connection, for RNA Update or for initiating SDT). The procedure can also be used to release and redirect a UE to another frequency.

5.3.8.3 Reception of the *RRCRelease* by the UE

The UE shall:

- 1> delay the following actions defined in this clause 60 ms from the moment the *RRCRelease* message was received or optionally when lower layers indicate that the receipt of the *RRCRelease* message has been successfully acknowledged, whichever is earlier;

NOTE 0: When the *RRCRelease* message is received on a HARQ process with disabled HARQ feedback, and when STATUS reporting, as defined in TS 38.322 [4], has not been triggered for a logical channel associated with the SRB1, the lower layers can be considered to have indicated that the receipt of the *RRCRelease* message has been successfully acknowledged.

- 1> stop timer T380, if running;

- 1> stop timer T320, if running;

- 1> if timer T316 is running;

- 2> stop timer T316;

- 2> if the UE supports RLF-Report for fast MCG recovery procedure as specified in 38.306 [26]:

- 3> set the *elapsedTimeT316* in the *VarRLF-Report* to the value of the elapsed time of the timer T316;

- 3> set the *pSCellId* in the *VarRLF-Report* to the global cell identity of the PSCell, if available, otherwise to the physical cell identity and carrier frequency of the PSCell;

- 2> else:

- 3> clear the information included in *VarRLF-Report*, if any;

- 1> stop timer T350, if running;
- 1> stop timer T346g, if running;
- 1> stop timer T348, if running;
- 1> if the AS security is not activated:
 - 2> ignore any field included in *RRCRelease* message except *waitTime*;
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with the release cause 'other' upon which the procedure ends;
- 1> if the *RRCRelease* message includes *redirectedCarrierInfo* indicating redirection to *eutra*:
 - 2> if *cnType* is included:

- 3> after the cell selection, indicate the available CN Type(s) and the received *cnType* to upper layers;

NOTE 1: Handling the case if the E-UTRA cell selected after the redirection does not support the core network type specified by the *cnType*, is up to UE implementation.

- 2> if *voiceFallbackIndication* is included:
 - 3> consider the RRC connection release was for EPS fallback for IMS voice (see TS 23.502 [43]);
- 1> if the *RRCRelease* message includes the *cellReselectionPriorities*:
 - 2> store the cell reselection priority information provided by the *cellReselectionPriorities*;
 - 2> if the *t320* is included:
 - 3> start timer T320, with the timer value set according to the value of *t320*;
- 1> else:
 - 2> apply the cell reselection priority information broadcast in the system information;
- 1> if *deprioritisationReq* is included and the UE supports RRC connection release with deprioritisation:
 - 2> start or restart timer T325 with the timer value set to the *deprioritisationTimer* signalled;
 - 2> store the *deprioritisationReq* until T325 expiry/stop;

NOTE 1a: The UE stores the deprioritisation request irrespective of any cell reselection absolute priority assignments (by dedicated or common signalling) and regardless of RRC connections in NR or other RATs unless specified otherwise.

- 1> if the *RRCRelease* includes the *measIdleConfig*:
 - 2> if T331 is running:
 - 3> stop timer T331;
 - 3> perform the actions as specified in 5.7.8.3;
 - 2> if the *measIdleConfig* is set to *setup*:
 - 3> store the received *measIdleDuration* in *VarMeasIdleConfig*;
 - 3> start timer T331 with the value set to *measIdleDuration*;
 - 3> if the *measIdleConfig* contains *measIdleCarrierListNR*:
 - 4> store the received *measIdleCarrierListNR* in *VarMeasIdleConfig*;
 - 3> if the *measIdleConfig* contains *measIdleCarrierListEUTRA*:
 - 4> store the received *measIdleCarrierListEUTRA* in *VarMeasIdleConfig*;

- 3> if the *measIdleConfig* contains *validityAreaList*:
 - 4> store the received *validityAreaList* in *VarMeasIdleConfig*;
- 3> if the *measIdleConfig* contains *measReselectionCarrierListNR*:
 - 4> store the received *measReselectionCarrierListNR* in *VarMeasReselectionConfig*;
- 3> if the *measIdleConfig* contains *measReselectionValidityDuration*:
 - 4> store the received *measReselectionValidityDuration* in *VarMeasReselectionConfig*;
- 3> if the *measIdleConfig* contains *measIdleValidityDuration*:
 - 4> store the received *measIdleValidityDuration* in *VarEnhMeasIdleConfig*;
- 1> if the *RRCRelease* includes *suspendConfig*:
 - 2> reset MAC and release the default MAC Cell Group configuration, if any;
 - 2> apply the received *suspendConfig* except the received *nextHopChainingCount*;
 - 2> if the *sdt-Config* is configured:
 - 3> for each of the DRB in the *sdt-DRB-List*:
 - 4> consider the DRB to be configured for SDT;
 - 3> if *sdt-SRB2-Indication* is configured:
 - 4> consider the SRB2 to be configured for SDT;
 - 3> for each RLC bearer (except those associated with broadcast MRBs and multicast MRBs) that is not suspended:
 - 4> re-establish the RLC entity as specified in TS 38.322 [4];
 - 3> for SRB2 (if it is resumed) and for SRB1:
 - 4> trigger the PDCP entity to perform SDU discard as specified in TS 38.323 [5];
 - 3> if *sdt-MAC-PHY-CG-Config* is configured:
 - 4> configure the PCell with the configured grant resources for SDT and instruct the MAC entity to start the *cg-SDT-TimeAlignmentTimer*;
 - 2> if *srs-PosRRC-Inactive* is configured:
 - 3> apply the SRS for positioning configuration in *RRC_INACTIVE* and instruct MAC to start the *inactivePosSRS-TimeAlignmentTimer*;
 - 2> if *srs-PosRRC-InactiveValidityAreaNonPreConfig* is set to *setup*:
 - 3> apply the SRS for positioning configuration in *RRC_INACTIVE* and instruct MAC to start the *inactivePosSRS-ValidityAreaTAT*;
 - 2> else if *srs-PosRRC-InactiveValidityAreaNonPreConfig* is set to *release*:
 - 3> release *srs-PosRRC-InactiveValidityAreaNonPreConfig*, if available;
 - 2> if *srs-PosRRC-InactiveValidityAreaPreConfigList* is set to *setup*:
 - 3> store *srs-PosRRC-InactiveValidityAreaPreConfigList* and perform actions as specified in clause 5.7.20;
 - 2> else if *srs-PosRRC-InactiveValidityAreaPreConfigList* is set to *release*:
 - 3> remove all *srs-PosRRC-InactiveValidityAreaPreConfigList*, if available;

NOTE 1b: The Network should provide full configuration to UE for SRS for Positioning in *RRC_INACTIVE*.

- 2> perform the LTM configuration release procedure for the MCG and the SCG as specified in clause 5.3.5.18.7;
- 2> remove all the entries within the MCG and the SCG *VarConditionalReconfig*, if any;
- 2> remove the *servingSecurityCellSetId* within the *VarServingSecurityCellSetID*, if any;
- 2> for each *measId* of the MCG *measConfig* and for each *measId* of the SCG *measConfig*, if configured, if the associated *reportConfig* has a *reportType* set to *condTriggerConfig*:
 - 3> for the associated *reportConfigId*:
 - 4> remove the entry with the matching *reportConfigId* from the *reportConfigList* within the *VarMeasConfig*;
 - 3> if the associated *measObjectId* is only associated to a *reportConfig* with *reportType* set to *condTriggerConfig*:
 - 4> remove the entry with the matching *measObjectId* from the *measObjectList* within the *VarMeasConfig*;
 - 3> remove the entry with the matching *measId* from the *measIdList* within the *VarMeasConfig*;
- 2> if the UE is NCR-MT and if *ncr-FwdConfig* is configured:
 - 3> if the *ncr-FwdConfig* includes periodic forwarding resource configuration:
 - 4> indicate to NCR-Fwd to continue forwarding only in accordance with the configured periodic forwarding resource set(s);
 - 3> else:
 - 4> indicate to NCR-Fwd to cease forwarding;
- 2> if the UE is acting as L2 U2N Remote UE and is not configured with MP:
 - 3> if the PC5-RRC connection with the U2N Relay UE is determined to be released:
 - 4> indicate upper layers to trigger PC5 unicast link release;
 - 3> else (i.e., maintain the PC5 RRC connection):
 - 4> establish or re-establish (e.g. via release and add) SL RLC entity for SRB1;
- 2> else:
 - 3> re-establish RLC entities for SRB1;
- 2> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 3> forward the *measConfigAppLayerId* and inform upper layers about the release of the RAN visible application layer measurement configuration;
 - 3> discard any RAN visible application layer measurement reports received from upper layers;
 - 3> initiate the procedure in 5.5b.1.2;
- 2> if the *RRCRelease* message with *suspendConfig* was received in response to an *RRCResumeRequest* or an *RRCResumeRequest1*:
 - 3> stop the timer T319 if running;
 - 3> in the stored UE Inactive AS context:
 - 4> replace the K_{gNB} and K_{RRCCint} keys with the current K_{gNB} and K_{RRCCint} keys;
 - 4> replace the *nextHopChainingCount* with the value of *nextHopChainingCount* received in the *RRCRelease* message;

- 4> replace the *cellIdentity* with the *cellIdentity* of the cell the UE has received the *RRCRelease* message;
- 4> if the *suspendConfig* contains the *sl-UEIdentityRemote* (i.e. the UE is a L2 U2N Remote UE):
 - 5> replace the C-RNTI with the value of the *sl-UEIdentityRemote*;
 - 5> replace the physical cell identity with the value of the *sl-PhysCellId* in *sl-ServingCellInfo* contained in the discovery message received from the connected L2 U2N Relay UE;
- 4> else:
 - 5> replace the C-RNTI with the C-RNTI used in the cell (see TS 38.321 [3]) the UE has received the *RRCRelease* message;
 - 5> replace the physical cell identity with the physical cell identity of the cell the UE has received the *RRCRelease* message;
- 3> replace the *nextHopChainingCount* with the value associated with the current K_{gNB} ;
- 3> stop the timer T319a if running and consider SDT procedure is not ongoing;
- 2> else:
 - 3> store in the UE Inactive AS Context the *nextHopChainingCount* received in the *RRCRelease* message, the current K_{gNB} and K_{RRCint} keys, the ROHC state, the EHC context(s), the UDC state, the stored QoS flow to DRB mapping rules, the application layer measurement configuration, the C-RNTI used in the source PCell, the *cellIdentity* and the physical cell identity of the source PCell, the *ncr-FwdConfig* (if configured), the *spCellConfigCommon* within *ReconfigurationWithSync* of the NR PSCell (if configured) and all other parameters configured except for:
 - parameters within *ReconfigurationWithSync* of the PCell;
 - parameters within *ReconfigurationWithSync* of the NR PSCell, if configured;
 - parameters within *MobilityControlInfoSCG* of the E-UTRA PSCell, if configured;
 - *servingCellConfigCommonSIB*;
 - *sl-L2RelayUE-Config*, if configured;
 - *sl-L2RemoteUE-Config*, if configured;
 - *aerial-Config*, if configured;
 - *cellDTX-DRX-Config*, if configured;

NOTE 1c: *suspendConfig* is not stored as part of UE Inactive AS Context, except for the fields explicitly specified.

- 3> store any previously or subsequently received application layer measurement report containers for which the successful transmission of the message or at least one segment of the message has not been confirmed by lower layers;

NOTE 2: NR sidelink communication/discovery/positioning related configurations and logged measurement configuration are not stored as UE Inactive AS Context, when UE enters RRC_INACTIVE.

- 2> suspend all SRB(s) and DRB(s), except SRB0 and broadcast MRBs;
- 2> suspend all multicast MRB(s) associated with multicast session(s) not configured for reception in RRC_INACTIVE;
- 2> indicate PDCP suspend to lower layers of all DRBs and multicast MRBs associated with multicast session(s) not configured for reception in RRC_INACTIVE;
- 2> release Uu Relay RLC channel(s), if configured;
- 2> release PC5 Relay RLC channel(s), if configured;

2> release the SRAP entity, if configured;

NOTE 2a: A L2 U2N Relay UE may re-establish the SL-RLC0, SL-RLC1 and SRAP entity after release.

2> if SL indirect path is configured:

3> release cell identity and relay UE ID configured in *sl-IndirectPathAddChange*;

3> indicate upper layers to trigger PC5 unicast link release of the SL indirect path;

2> if N3C indirect path is configured:

3> release *n3c-IndirectPathAddChange*;

3> consider the non-3GPP connection is not used;

2> if the UE is acting as a N3C relay UE:

3> release *n3c-IndirectPathConfigRelay*;

3> consider the non-3GPP connection is not used;

2> if the *t380* is included:

3> start timer T380, with the timer value set to *t380*;

2> if the *RRCRelease* message is including the *waitTime*:

3> start timer T302 with the value set to the *waitTime*;

3> inform upper layers that access barring is applicable for all access categories except categories '0' and '2';

2> if T390 is running:

3> stop timer T390 for all access categories;

3> perform the actions as specified in 5.3.14.4;

2> indicate the suspension of the RRC connection to upper layers;

2> if the UE is capable of L2 U2N Remote UE:

3> enter RRC_INACTIVE, and perform either cell selection as specified in TS 38.304 [20], or relay selection as specified in clause 5.8.15.3, or both;

2> else:

3> enter RRC_INACTIVE and perform cell selection as specified in TS 38.304 [20];

2> if the *suspendConfig* includes *resumeIndication*:

3> perform the actions as if the UE received *Paging* message with the *ue-Identity* included in the *PagingRecord* matching the UE's stored *fullI-RNTI*, as specified in clause 5.3.2.3;

2> if the *multicastConfigInactive* is set to *setup*:

3> if the multicast PTM configuration is provided for at least one multicast session for which the UE is not indicated to stop monitoring the G-RNTI and the UE selects the same cell as the one on which the multicast session was configured in RRC_CONNECTED:

4> apply the multicast PTM configuration as specified in 5.10.3;

4> if multicast MCCH is present:

5> monitor the Multicast MCCH-RNTI as specified in 5.10.1.2;

1> else:

2> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with the release cause 'other'.

NOTE 3: Whether to release the PC5 unicast link is left to L2 U2N Remote UE's implementation.

NOTE 4: It is left to UE implementation whether to stop T430, if running, when going to RRC_INACTIVE.

5.3.8.4 T320 expiry

The UE shall:

- 1> if T320 expires:
 - 2> if stored, discard the cell reselection priority information provided by the *cellReselectionPriorities* or inherited from another RAT;
 - 2> apply the cell reselection priority information broadcast in the system information.

5.3.8.5 UE actions upon the expiry of *DataInactivityTimer*

Upon receiving the expiry of *DataInactivityTimer* from lower layers while in RRC_CONNECTED, the UE shall:

- 1> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure'.

5.3.8.6 T346g expiry

The UE shall:

- 1> if T346g expires:
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'other'.

5.3.9 RRC connection release requested by upper layers

5.3.9.1 General

The purpose of this procedure is to release the RRC connection. Access to the current PCell may be barred as a result of this procedure.

5.3.9.2 Initiation

The UE initiates the procedure when upper layers request the release of the RRC connection as specified in TS 24.501 [23]. The UE shall not initiate the procedure for power saving purposes.

The UE shall:

- 1> if the upper layers indicate barring of the PCell:
 - 2> treat the PCell used prior to entering RRC_IDLE as barred according to TS 38.304 [20];
- 1> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'other'.

5.3.10 Radio link failure related actions

5.3.10.1 Detection of physical layer problems in RRC_CONNECTED

The UE shall:

- 1> if any DAPS bearer is configured, upon receiving N310 consecutive "out-of-sync" indications for the source SpCell from lower layers and T304 is running:
 - 2> start timer T310 for the source SpCell.

- 1> upon receiving N310 consecutive "out-of-sync" indications for the SpCell from lower layers while neither T300, T301, T304, T311, T316 nor T319 are running;
- 2> start timer T310 for the corresponding SpCell.

5.3.10.2 Recovery of physical layer problems

Upon receiving N311 consecutive "in-sync" indications for the SpCell from lower layers while T310 is running, the UE shall:

- 1> stop timer T310 for the corresponding SpCell.
- 1> stop timer T312 for the corresponding SpCell, if running.

NOTE 1: In this case, the UE maintains the RRC connection without explicit signalling, i.e. the UE maintains the entire radio resource configuration.

NOTE 2: Periods in time where neither "in-sync" nor "out-of-sync" is reported by L1 do not affect the evaluation of the number of consecutive "in-sync" or "out-of-sync" indications.

5.3.10.3 Detection of radio link failure

The UE shall:

- 1> if any DAPS bearer is configured and T304 is running:
 - 2> upon T310 expiry in source SpCell; or
 - 2> upon random access problem indication from source MCG MAC; or
 - 2> upon indication from source MCG RLC that the maximum number of retransmissions has been reached; or
 - 2> upon consistent uplink LBT failure indication from source MCG MAC:
 - 3> consider radio link failure to be detected for the source MCG i.e. source RLF;
 - 3> suspend the transmission and reception of all DRBs and multicast MRBs in the source MCG;
 - 3> reset MAC for the source MCG;
 - 3> release the source connection.
- 1> else:
 - 2> during a DAPS handover: the following only applies for the target PCell;
 - 2> upon T310 expiry in PCell; or
 - 2> upon T312 expiry in PCell; or
 - 2> upon random access problem indication from MCG MAC while neither T300, T301, T304, T311 nor T319 are running and SDT procedure is not ongoing; or
 - 2> upon indication from MCG RLC that the maximum number of retransmissions has been reached while SDT procedure is not ongoing; or
 - 2> if connected as an IAB-node, upon BH RLF indication received on BAP entity from the MCG; or
 - 2> upon consistent uplink LBT failure indication from MCG MAC while T304 is not running:
 - 3> if the indication is from MCG RLC and CA duplication is configured and activated for MCG, and for the corresponding logical channel *allowedServingCells* only includes SCell(s):
 - 4> initiate the failure information procedure as specified in 5.7.5 to report RLC failure.
 - 3> else:

- 4> consider radio link failure to be detected for the MCG, i.e. MCG RLF;
- 4> discard any segments of segmented RRC messages stored according to 5.7.6.3;

NOTE 1: Void.

- 4> if AS security has not been activated:
 - 5> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'other';-
- 4> else if AS security has been activated but SRB2 and at least one DRB or multicast MRB or, for IAB and NCR, SRB2, have not been setup:
 - 5> store the radio link failure information in the *VarRLF-Report* as described in clause 5.3.10.5;
 - 5> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure';
- 4> else:
 - 5> store the radio link failure information in the *VarRLF-Report* as described in clause 5.3.10.5;
 - 5> if MP is configured:
 - 6> if T316 is configured, and MP indirect path transmission is not suspended; and
 - 6> if neither MP indirect path change nor MP indirect path addition is ongoing:
 - 7> initiate the MCG failure information procedure as specified in 5.7.3b to report MCG radio link failure.
 - 6> else:
 - 7> initiate the connection re-establishment procedure as specified in 5.3.7.
 - 5> else:
 - 6> if the UE supports RLF-Report for fast MCG recovery procedure and if T316 is configured:
 - 7> if the SCG is deactivated at the moment of detecting RLF in the MCG:
 - 8> set the *mcg-RecoveryFailureCause* in the *VarRLF-Report* to *scg-Deactivated*;
 - 8> set the *pSCellId* in the *VarRLF-Report* to the global cell identity of the PSCell, if available, otherwise to the physical cell identity and carrier frequency of the PSCell;
 - 7> else if SCG transmission is suspended at the moment of detecting RLF in the MCG:
 - 8> set the *pSCellId* in the *VarRLF-Report* to the global cell identity of the PSCell, if available, otherwise to the physical cell identity and carrier frequency of the PSCell;
 - 8> set the *scg-FailureCause* value in the *VarRLF-Report* according to 5.7.3.5;
 - 8> set the *elapsedTimeSCG-Failure* in the *VarRLF-Report* to the time elapsed between SCG failure and the MCG failure;
 - 6> if T316 is configured; and
 - 6> if SCG transmission is not suspended; and
 - 6> if the SCG is not deactivated; and
 - 6> if neither PSCell change nor PSCell addition is ongoing (i.e. timer T304 for the NR PSCell is not running in case of NR-DC or timer T307 of the E-UTRA PSCell is not running as specified in TS 36.331 [10], clause 5.3.10.10, in NE-DC):
 - 7> initiate the MCG failure information procedure as specified in 5.7.3b to report MCG radio link failure.

6> else:

7> initiate the connection re-establishment procedure as specified in 5.3.7.

A L2/L3 U2N Relay UE shall:

1> upon detecting radio link failure:

2> either indicate to upper layers (to trigger PC5 unicast link release) or send *NotificationMessageSidelink* to the connected L2/L3 U2N Remote UE(s) in accordance with 5.8.9.10.

A N3C Relay UE shall:

1> upon detecting radio link failure:

2> indicates to the associated N3C remote UE via the Non-3GPP Connection.

NOTE 2: How the N3C Relay UE indicates Uu RLF on the Non-3GPP Connection is left to implementation.

The UE shall:

1> upon T310 expiry in PSCell; or

1> upon T312 expiry in PSCell; or

1> upon random access problem indication from SCG MAC; or

1> upon indication from SCG RLC that the maximum number of retransmissions has been reached; or

1> if connected as an IAB-node, upon BH RLF indication received on BAP entity from the SCG; or

1> upon consistent uplink LBT failure indication from SCG MAC:

2> if the indication is from SCG RLC and CA duplication is configured and activated for SCG, and for the corresponding logical channel *allowedServingCells* only includes SCell(s):

3> initiate the failure information procedure as specified in 5.7.5 to report RLC failure.

2> else:

3> consider radio link failure to be detected for the SCG, i.e. SCG RLF;

3> if the SCG is deactivated:

4> stop radio link monitoring on the SCG;

4> indicate to lower layers to stop beam failure detection on the PSCell;

3> if MCG transmission is not suspended:

4> initiate the SCG failure information procedure as specified in 5.7.3 to report SCG radio link failure.

3> else:

4> if the UE is in NR-DC:

5> if the UE supports RLF-Report for fast MCG recovery procedure and if the UE detected SCG failure while the timer T316 was running:

6> set the *pSCellId* in the *VarRLF-Report* to the global cell identity of the PSCell, if available, otherwise to the physical cell identity and carrier frequency of the PSCell;

6> set the *scg-FailureCause* in the *VarRLF-Report* value according to 5.7.3.5;

6> set the *elapsedTimeSCG-Failure* in the *VarRLF-Report* to the time elapsed between MCG failure and the SCG failure;

6> include *scg-FailedAfterMCG*;

- 5> initiate the connection re-establishment procedure as specified in 5.3.7;
- 4> else (the UE is in (NG)EN-DC):
 - 5> initiate the connection re-establishment procedure as specified in TS 36.331 [10], clause 5.3.7;

5.3.10.4 RLF cause determination

The UE shall set the *rlf-Cause* in the *VarRLF-Report* as follows:

- 1> if the UE declares radio link failure due to T310 expiry:
 - 2> set the *rlf-Cause* as *t310-Expiry*;
- 1> else if the UE declares radio link failure due to the random access problem indication from MCG MAC:
 - 2> if the random access procedure was initiated for beam failure recovery:
 - 3> set the *rlf-Cause* as *beamFailureRecoveryFailure*;
 - 2> else:
 - 3> set the *rlf-Cause* as *randomAccessProblem*;
- 1> else if the UE declares radio link failure due to the reaching of maximum number of retransmissions from the MCG RLC:
 - 2> set the *rlf-Cause* as *rlc-MaxNumRetx*;
- 1> else if the UE declares radio link failure due to consistent uplink LBT failures:
 - 2> set the *rlf-Cause* as *lbtFailure*;
- 1> else if the IAB-MT declares radio link failure due to the reception of a BH RLF indication on BAP entity:
 - 2> set the *rlf-Cause* as *bh-rlfRecoveryFailure*.
- 1> else if the UE declares radio link failure due to T312 expiry:
 - 2> set the *rlf-Cause* as *t312-Expiry*;

5.3.10.5 RLF report content determination

The UE shall determine the content in the *VarRLF-Report* as follows:

- 1> clear the information included in *VarRLF-Report*, if any;
- 1> if the UE is not in SNPN access mode, set the *plmn-IdentityList* to include the list of EPLMNs stored by the UE (i.e. including the RPLMN);
- 1> else if the UE is in SNPN access mode, set the *snpn-IdentityList* to include the list of equivalent SNPNs stored by the UE (i.e., including the registered SNPN identity);
- 1> set the *measResultLastServCell* to include the cell level RSRP, RSRQ and the available SINR, of the source PCell (in case HO failure) or PCell (in case RLF) based on the available SSB and CSI-RS measurements collected up to the moment the UE detected failure;
- 1> if *measRSSI-ReportConfig* is configured for the *measObject* indicated as the *servingCellMO* of the source PCell (in case HO failure) or PCell (in case of RLF), set the *measResultLastServCellRSSI* to the linear average of the available RSSI sample value(s) provided by lower layers for the frequency of the source PCell (in case HO failure) or PCell (in case of RLF) up to the moment the UE detected the failure;
- 1> if the SS/PBCH block-based measurement quantities are available:
 - 2> set the *rsIndexResults* in *measResultLastServCell* to include all the available measurement quantities of the source PCell (in case HO failure) or PCell (in case RLF), ordered such that the highest SS/PBCH block RSRP is listed first if SS/PBCH block RSRP measurement results are available, otherwise the highest

SS/PBCH block RSRQ is listed first if SS/PBCH block RSRQ measurement results are available, otherwise the highest SS/PBCH block SINR is listed first, based on the available SS/PBCH block based measurements collected up to the moment the UE detected failure;

1> if the CSI-RS based measurement quantities are available:

2> set the *rsIndexResults* in *measResultLastServCell* to include all the available measurement quantities of the source PCell (in case HO failure) or PCell (in case RLF), ordered such that the highest CSI-RS RSRP is listed first if CSI-RS RSRP measurement results are available, otherwise the highest CSI-RS RSRQ is listed first if CSI-RS RSRQ measurement results are available, otherwise the highest CSI-RS SINR is listed first, based on the available CSI-RS based measurements collected up to the moment the UE detected failure;

1> for each of the configured *measObjectNR* in which measurements are available:

2> if the SS/PBCH block-based measurement quantities are available:

3> set the *measResultListNR* in *measResultNeighCells* to include all the available measurement quantities of the best measured cells, other than the source PCell (in case HO failure) or PCell (in case RLF), ordered such that the cell with highest SS/PBCH block RSRP is listed first if SS/PBCH block RSRP measurement results are available, otherwise the cell with highest SS/PBCH block RSRQ is listed first if SS/PBCH block RSRQ measurement results are available, otherwise the cell with highest SS/PBCH block SINR is listed first, based on the available SS/PBCH block based measurements collected up to the moment the UE detected failure;

3> for each neighbour cell included, include the optional fields that are available;

NOTE 0a: For the neighboring cells included in *measResultListNR* in *measResultNeighCells* ordered based on the SS/PBCH block measurement quantities, UE also includes the CSI-RS based measurement quantities, if available.

2> if the CSI-RS based measurement quantities are available:

3> set the *measResultListNR* in *measResultNeighCells* to include all the available measurement quantities of the best measured cells, other than the source PCell (in case HO failure) or PCell (in case RLF), ordered such that the cell with highest CSI-RS RSRP is listed first if CSI-RS RSRP measurement results are available, otherwise the cell with highest CSI-RS RSRQ is listed first if CSI-RS RSRQ measurement results are available, otherwise the cell with highest CSI-RS SINR is listed first, based on the available CSI-RS based measurements collected up to the moment the UE detected radio link failure;

3> for each neighbour cell included, include the optional fields that are available;

NOTE 0b: For ordering the neighboring cells based on the CSI-RS measurement quantities, UE includes measurements only for the cells not yet included in *measResultListNR* in *measResultNeighCells* to avoid overriding SS/PBCH block-based ordered measurements.

2> for each neighbour cell, if any, included in *measResultListNR* in *measResultNeighCells*:

3> if the UE supports RLF-Report for conditional handover and if the neighbour cell is one of the candidate cells for which the *reconfigurationWithSync* is included in the *masterCellGroup* in the MCG *VarConditionalReconfig* at the moment of the detected failure:

4> set *choConfig* in *MeasResult2NR* to the execution condition for each *measId* within *condTriggerConfig* associated to the neighbour cell within the MCG *VarConditionalReconfig*;

4> if the first entry of *choConfig* corresponds to a fulfilled execution condition at the moment of handover failure, or radio link failure; or

4> if the second entry of *choConfig*, if available, corresponds to a fulfilled execution condition at the moment of handover failure, or radio link failure:

5> set *firstTriggeredEvent* to the execution condition *condFirstEvent* corresponding to the first entry of *choConfig* or to the execution condition *condSecondEvent* corresponding to the second entry of *choConfig*, whichever execution condition was fulfilled first in time;

5> set *timeBetweenEvents* to the elapsed time between the point in time of fulfilling the condition in *choConfig* that was fulfilled first in time, and the point in time of fulfilling the condition in

choConfig that was fulfilled second in time, if both the first execution condition corresponding to the first entry and the second execution condition corresponding to the second entry in the *choConfig* were fulfilled;

- 1> for each of the configured *measObjectNR* associated with neighboring cells if the associated *reportConfigNR* includes *measRSSI-ReportConfig*:
 - 2> set the *measResultNeighFreqRSSI* in the *measResultNeighFreqListRSSI* to the linear average of the available RSSI sample value(s) provided by lower layers for the frequencies other than the frequency of the source PCell (in case HO failure) or of the PCell (in case RLF), up to the moment the UE detected failure;
 - 3> for each neighbour frequency included, include the optional fields that are available;
- 1> for each of the configured EUTRA frequencies in which measurements are available;
 - 2> set the *measResultListEUTRA* in *measResultNeighCells* to include the best measured cells ordered such that the cell with highest RSRP is listed first if RSRP measurement results are available, otherwise the cell with highest RSRQ is listed first, and based on measurements collected up to the moment the UE detected failure;
 - 3> for each neighbour cell included, include the optional fields that are available;

NOTE 1: The measured quantities are filtered by the L3 filter as configured in the mobility measurement configuration. The measurements are based on the time domain measurement resource restriction, if configured. Exclude-listed cells are not required to be reported.

- 1> set the *c-RNTI* to the C-RNTI used in the source PCell (in case HO failure) or PCell (in case RLF);
- 1> if the failure is detected due to reconfiguration with sync failure as described in 5.3.5.8.3, set the fields in *VarRLF-report* as follows:
 - 2> set the *connectionFailureType* to *hof*;
 - 2> if the UE supports RLF-Report for DAPS handover and if any DAPS bearer was configured while T304 was running:
 - 3> set *lastHO-Type* to *daps*;
 - 3> if radio link failure was detected in the source PCell, according to clause 5.3.10.3:
 - 4> set *timeConnSourceDAPS-Failure* to the time between the initiation of the DAPS handover execution and the radio link failure detected in the source PCell while T304 was running;
 - 4> set the *rlf-Cause* to the trigger for detecting the source radio link failure in accordance with clause 5.3.10.4;
 - 2> if the UE supports RLF-Report for conditional handover and if configuration of the conditional handover is available in the MCG *VarConditionalReconfig* at the moment of the handover failure:
 - 3> if the UE executed a conditional handover toward target PCell according to the *condRRCReconfig* of the target PCell:
 - 4> set *timeSinceCHO-Reconfig* to the time elapsed between the execution of the last *RRCReconfiguration* message including *reconfigurationWithSync* for the target PCell of the failed conditional handover, and the reception in the source PCell of the last *conditionalReconfiguration* including the *condRRCReconfig* of the target PCell of the failed conditional handover;
 - 3> else:
 - 4> set *timeSinceCHO-Reconfig* to the time elapsed between the execution of the last *RRCReconfiguration* message including *reconfigurationWithSync* for the target PCell of the failed handover, and the reception in the source PCell of the last *conditionalReconfiguration* including the *condRRCReconfig*;
 - 3> set *choCandidateCellList* to include the global cell identity, if available, and otherwise to the physical cell identity and carrier frequency of each of the candidate target cells for conditional handover included in *condRRCReconfig* within the MCG *VarConditionalReconfig* at the time of the failed handover, excluding the candidate target cells included in *measResultNeighCells*;

- 2> if the UE supports RLF-Report for conditional handover and if the last executed *RRCReconfiguration* message including *reconfigurationWithSync* was concerning a conditional handover:
 - 3> set *lastHO-Type* to *cho*;
 - 2> set the *nrFailedPCellId* in *failedPCellId* to the global cell identity and tracking area code, if available, and otherwise to the physical cell identity and carrier frequency of the target PCell of the failed handover;
 - 2> include *nrPreviousCell* in *previousPCellId* and set it to the global cell identity and tracking area code of the PCell where the last *RRCReconfiguration* message including *reconfigurationWithSync* was received;
 - 2> set the *timeConnFailure* to the elapsed time since the execution of the last *RRCReconfiguration* message including the *reconfigurationWithSync*;
- 1> else if the failure is detected due to Mobility from NR failure as described in 5.4.3.5, set the fields in *VarRLF-report* as follows:
- 2> set the *connectionFailureType* to *hof*;
 - 2> if last *MobilityFromNRCommand* concerned a failed inter-RAT handover from NR to E-UTRA and if the UE supports Radio Link Failure Report for Inter-RAT MRO EUTRA (NR to EUTRA):
 - 3> set the *eutraFailedPCellId* in *failedPCellId* to the global cell identity and tracking area code, if available, and otherwise to the physical cell identity and carrier frequency of the target PCell of the failed handover;
 - 2> include *nrPreviousCell* in *previousPCellId* and set it to the global cell identity and tracking area code of the PCell where the last *MobilityFromNRCommand* message was received;
 - 2> set the *timeConnFailure* to the elapsed time since the initialization of the handover associated to the last *MobilityFromNRCommand* message;
 - 2> if the UE supports RLF report for inter-system handover for voice fallback and if *voiceFallbackIndication* is included in the last *MobilityFromNRCommand*:
 - 3> include the *voiceFallbackHO*;
- 1> else if the failure is detected due to radio link failure as described in 5.3.10.3, set the fields in *VarRLF-report* as follows:
- 2> set the *connectionFailureType* to *rlf*;
 - 2> set the *rlf-Cause* to the trigger for detecting radio link failure in accordance with clause 5.3.10.4;
 - 2> set the *nrFailedPCellId* in *failedPCellId* to the global cell identity and the tracking area code, if available, and otherwise to the physical cell identity and carrier frequency of the PCell where radio link failure is detected;
 - 2> if an *RRCReconfiguration* message including the *reconfigurationWithSync* was received before the connection failure:
 - 3> if the last successfully executed *RRCReconfiguration* message including the *reconfigurationWithSync* concerned an intra NR handover and it was received while connected to the previous PCell to which the UE was connected before connecting to the PCell where radio link failure is detected; and
 - 3> if T316 was not running before entering the PCell in which the radio link failure was detected; and
 - 3> if T311 was not running before entering the PCell in which the radio link failure was detected:
 - 4> include the *nrPreviousCell* in *previousPCellId* and set it to the global cell identity and the tracking area code of the PCell where the last executed *RRCReconfiguration* message including *reconfigurationWithSync* was received;
 - 4> if the UE supports RLF-Report for DAPS handover and if the last executed *RRCReconfiguration* message including *reconfigurationWithSync* was concerning a DAPS handover:
 - 5> set *lastHO-Type* to *daps*;

- 4> else if the UE supports RLF-Report for conditional handover and if the last executed *RRCReconfiguration* message including *reconfigurationWithSync* was concerning a conditional handover:
 - 5> set *lastHO-Type* to *cho*;
- 4> set the *timeConnFailure* to the elapsed time since the execution of the last *RRCReconfiguration* message including the *reconfigurationWithSync*;
- 3> else if the last *RRCReconfiguration* message including the *reconfigurationWithSync* concerned a handover to NR from E-UTRA and if the UE supports Radio Link Failure Report for Inter-RAT MRO EUTRA:
 - 4> include the *eutraPreviousCell* in *previousPCellId* and set it to the global cell identity and the tracking area code of the E-UTRA PCell where the last *RRCReconfiguration* message including *reconfigurationWithSync* was received embedded in E-UTRA RRC message *MobilityFromEUTRACommand* message as specified in TS 36.331 [10] clause 5.4.3.3;
 - 4> set the *timeConnFailure* to the elapsed time since reception of the last *RRCReconfiguration* message including the *reconfigurationWithSync* embedded in E-UTRA RRC message *MobilityFromEUTRACommand* message as specified in TS 36.331 [10] clause 5.4.3.3;
- 2> if configuration of the conditional handover is available in the MCG *VarConditionalReconfig* at the moment of declaring the radio link failure:
 - 3> set *timeSinceCHO-Reconfig* to the time elapsed between the detection of the radio link failure, and the reception, in the source PCell, of the last *conditionalReconfiguration* including the *condRRCReconfig* message;
 - 3> set *choCandidateCellList* to include the global cell identity if available, and otherwise to the physical cell identity and carrier frequency of each of all the candidate target cells for conditional handover included in *condRRCReconfig* within the MCG *VarConditionalReconfig* at the time of radio link failure, excluding the candidate target cells included in *measResultNeighCells*;
- 1> if *connectionFailureType* is *rlf* and the *rlf-Cause* is set to *randomAccessProblem* or *beamFailureRecoveryFailure*; or
- 1> if *connectionFailureType* is *rlf* and the *rlf-Cause* is set to *lbtFailure* and the radio link failure is detected during the random access procedure; or
- 1> if *connectionFailureType* is *hof* and if the failed handover is an intra-RAT handover and if a random-access procedure was triggered for the failed handover:
 - 2> set the *ra-InformationCommon* to include the random-access related information as described in clause 5.7.10.5;
- 1> if *connectionFailureType* is *rlf* and the *rlf-Cause* is set to *lbtFailure*, and the radio link failure is not detected during the random access procedure:
 - 2> set the *locationAndBandwidth* and *subcarrierSpacing* in *bwp-Info* associated to the UL BWP in which the consistent uplink LBT failure was detected;
- 1> if the *rlf-Cause* is set to *t310-Expiry* or *t312-Expiry*:
 - 2> set the *ssbRLMConfigBitmap* and/or *csi-rsRLMConfigBitmap* in *measResultLastServCell* to include the radio link monitoring configuration of the last serving cell, if available;
- 1> if available, set the *locationInfo* as in 5.3.3.7.

The UE may discard the radio link failure information or handover failure information, i.e. release the UE variable *VarRLF-Report*, 48 hours after the radio link failure/handover failure is detected.

NOTE 2: In this clause, the term 'handover failure' has been used to refer to 'reconfiguration with sync failure'.

5.3.11 UE actions upon going to RRC_IDLE

The UE shall:

- 1> reset MAC;
- 1> if the UE is NCR-MT:
 - 2> indicate to NCR-Fwd to cease forwarding;
- 1> set the variable *pendingRNA-Update* to *false*, if that is set to *true*;
- 1> if going to RRC_IDLE was triggered by reception of the *RRCRelease* message including a *waitTime*:
 - 2> if T302 is running:
 - 3> stop timer T302;
 - 2> start timer T302 with the value set to the *waitTime*;
 - 2> inform upper layers that access barring is applicable for all access categories except categories '0' and '2'.
- 1> else:
 - 2> if T302 is running:
 - 3> stop timer T302;
 - 3> perform the actions as specified in 5.3.14.4;
- 1> if T390 is running:
 - 2> stop timer T390 for all access categories;
 - 2> perform the actions as specified in 5.3.14.4;
- 1> if the UE is leaving RRC_INACTIVE:
 - 2> if going to RRC_IDLE was not triggered by reception of the *RRCRelease* message:
 - 3> if stored, discard the cell reselection priority information provided by the *cellReselectionPriorities*;
 - 3> stop the timer T320, if running;
 - 2> if SDT procedure is ongoing:
 - 3> stop timer T319a, if running;
 - 3> consider SDT procedure is not ongoing;
- 1> stop all timers that are running except T302, T320, T325, T330, T331, T400 and T430;
- 1> discard the UE Inactive AS context, if any;
- 1> release the *suspendConfig*, if configured;
- 1> release the *aerial-Config*, if configured;
- 1> perform LTM configuration release procedure for the MCG and SCG as specified in clause 5.3.5.18.7;
- 1> remove all the entries within the MCG and the SCG *VarConditionalReconfig*, if any;
- 1> remove the *servingSecurityCellSetId* within the *VarServingSecurityCellSetID*, if any;
- 1> for each *measId*, if the associated *reportConfig* has a *reportType* set to *condTriggerConfig*:
 - 2> for the associated *reportConfigId*:
 - 3> remove the entry with the matching *reportConfigId* from the *reportConfigList* within the *VarMeasConfig*;

- 2> if the associated *measObjectId* is only associated to a *reportConfig* with *reportType* set to *condTriggerConfig*;
 - 3> remove the entry with the matching *measObjectId* from the *measObjectList* within the *VarMeasConfig*;
 - 2> remove the entry with the matching *measId* from the *measIdList* within the *VarMeasConfig*;
 - 1> discard the K_{gNB} key, the $S-K_{gNB}$ key, the $S-K_{eNB}$ key, the $K_{RRCCenc}$ key, the $K_{RRCCint}$ key, the K_{UPint} key and the K_{UPenc} key, if any;
 - 1> if SL indirect path is configured:
 - 2> release cell identity and relay UE ID configured in *sl-IndirectPathAddChange*;
 - 2> indicate upper layers to trigger PC5 unicast link release of the SL indirect path;
 - 1> if N3C indirect path is configured:
 - 2> release *n3c-IndirectPathAddChange*;
 - 2> consider the non-3GPP connection is not used;
 - 1> if the UE is acting as a N3C relay UE:
 - 2> release *n3c-IndirectPathConfigRelay*;
 - 2> consider the non-3GPP connection is not used;
 - 1> release all radio resources, including release of the RLC entity, the BAP entity, the MAC configuration and the associated PDCP entity and SDAP for all established RBs (except for broadcast MRBs), BH RLC channels, Uu Relay RLC channels, PC5 Relay RLC channels and SRAP entity;
- NOTE 0: A L2 U2N Relay UE may re-establish the SL-RLC0, SL-RLC1 and SRAP entity after release.
- 1> indicate the release of the RRC connection to upper layers together with the release cause;
 - 1> for each application layer measurement configuration without *appLayerIdleInactiveConfig* configured:
 - 2> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 2> release the application layer measurement configuration;
 - 2> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 2> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
 - 1> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 2> forward the *measConfigAppLayerId* and inform upper layers about the release of the RAN visible application layer measurement configuration;
 - 2> discard any RAN visible application layer measurement reports received from upper layers;
 - 2> initiate the procedure in 5.5b.1.2;
 - 1> discard any segments of segmented RRC messages stored according to 5.7.6.3;
 - 1> except if going to RRC_IDLE was triggered by inter-RAT cell reselection while the UE is in RRC_INACTIVE or RRC_IDLE or when selecting an inter-RAT cell while T311 was running or when selecting an E-UTRA cell for EPS fallback for IMS voice as specified in 5.4.3.5:
 - 2> if the UE is capable of L2 U2N Remote UE:
 - 3> enter RRC_IDLE, and perform either cell selection as specified in TS 38.304 [20], or relay selection as specified in clause 5.8.15.3, or both;

2> else:

3> enter RRC_IDLE and perform cell selection as specified in TS 38.304 [20];

NOTE 1: Whether to release the PC5 unicast link is left to L2 U2N Remote UE's implementation.

NOTE 2: It is left to UE implementation whether to stop T430, if running, when going to RRC_IDLE.

5.3.12 UE actions upon PUCCH/SRS release request

Upon receiving a PUCCH release request from lower layers, for all bandwidth parts of an indicated serving cell the UE shall:

1> release PUCCH-CSI-Resources configured in *CSI-ReportConfig*;

1> release PUCCH-CSI-Resources configured in *LTM-CSI-ReportConfig*;

1> release *SchedulingRequestResourceConfig* instances configured in *PUCCH-Config*.

Upon receiving an SRS release request from lower layers, for all bandwidth parts of an indicated serving cell the UE shall:

1> release *SRS-Resource* instances configured in *SRS-Config*;

1> release *SRS-PosResourceSetLinkedForAggBW*, if configured;

1> release *ue-TxTEG-RequestUL-TDOA-Config*, if configured.

Upon receiving a positioning SRS configuration for RRC_INACTIVE release request from lower layers, the UE shall:

1> release the configured *srs-PosRRC-Inactive*;

1> release *SRS-PosResourceSetLinkedForAggBW*, if configured.

5.3.13 RRC connection resume

5.3.13.1 General

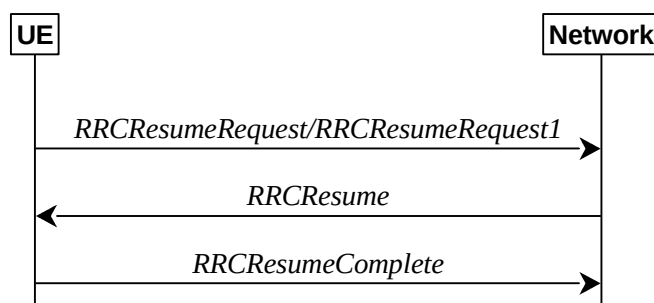 


Figure 5.3.13.1-1: RRC connection resume, successful

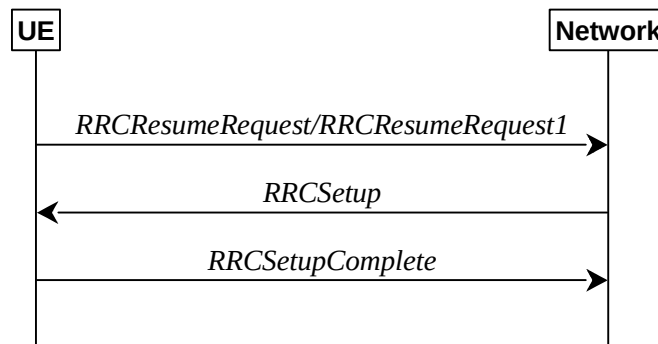 


Figure 5.3.13.1-2: RRC connection resume fallback to RRC connection establishment, successful

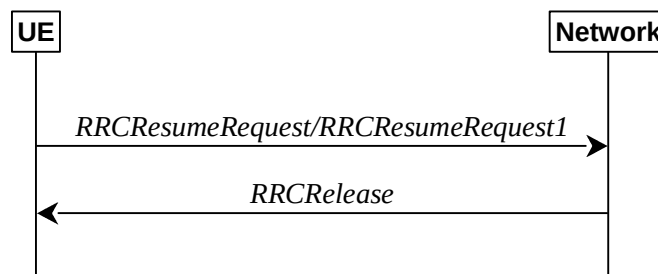 


Figure 5.3.13.1-3: RRC connection resume followed by network release, successful

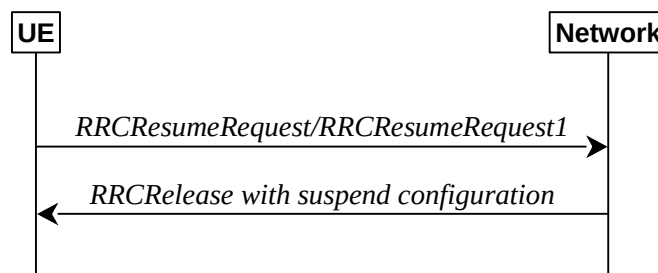 


Figure 5.3.13.1-4: RRC connection resume followed by network suspend, successful

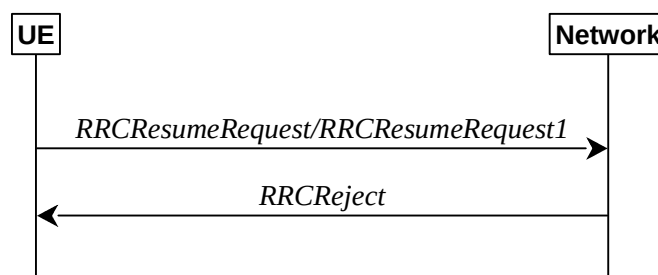 


Figure 5.3.13.1-5: RRC connection resume, network reject

The purpose of this procedure is to resume a suspended RRC connection, including resuming SRB(s), DRB(s) and multicast MRB(s) or perform an RNA update. This procedure is also used to initiate SDT in RRC_INACTIVE.

5.3.13.1a Conditions for resuming RRC Connection for NR sidelink communication/positioning/discovery/V2X sidelink communication

For NR sidelink communication/positioning/discovery an RRC connection is resumed only in the following cases:

- 1> if configured by upper layers to transmit NR sidelink communication and related data is available for transmission;

- 2> if the frequency on which the UE is configured to transmit NR sidelink communication is included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* within *SIB12* provided by the cell on which the UE camps; and if the valid version of *SIB12* does not include *sl-TxPoolSelectedNormal* for the concerned frequency;
- 1> if configured by upper layers to transmit NR sidelink discovery and related data is available for transmission:
 - 2> if the UE is configured by upper layers to transmit NR sidelink L2 U2U relay discovery messages and *sl-L2-U2U-Relay-r18* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink L3 U2U relay discovery messages and *sl-L3-U2U-RelayDiscovery* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink L2 U2N relay discovery messages and *sl-L2U2N-Relay* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink L3 U2N relay discovery messages and *sl-L3U2N-RelayDiscovery* is included in *SIB12*; or
 - 2> if the UE is configured by upper layers to transmit NR sidelink non-relay discovery messages and *sl-NonRelayDiscovery* is included in *SIB12*;
 - 3> if the frequency on which the UE is configured to transmit NR sidelink discovery is included in *sl-FreqInfoList* within *SIB12* provided by the cell on which the UE camps; and if the valid version of *SIB12* does not include *sl-DiscTxPoolSelected* or *sl-TxPoolSelectedNormal* for the concerned frequency;
- 1> if configured by upper layers to perform NR sidelink positioning and indicated by upper layers to transmit SL-PRS:
 - 2> if the frequency on which the UE is configured to transmit SL-PRS is included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* within *SIB12* provided by the cell on which the UE camps; and if the valid version of *SIB12* does not include *sl-PRS-ResourcesSharedSL-PRS-RP-r18* in *sl-TxPoolSelectedNormal* for the concerned frequency; or
 - 2> if the frequency on which the UE is configured to transmit SL-PRS is included in *sl-PosFreqInfoList* within *SIB23* provided by the cell on which the UE camps; and if the valid version of *SIB23* does not include *sl-PRS-TxPoolSelectedNormal* for the concerned frequency;

For L2 U2N Relay UE in RRC_INACTIVE, an RRC connection establishment is resumed in the following cases:

- 1> if any message is received from the L2 U2N Remote UE via SL-RLC0 as specified in 9.1.1.4 or SL-RLC1 as specified in 9.2.4; or
- 1> if *RemoteUEInformationSidelink* containing the *connectionForMP* is received from a L2 U2N Remote UE as specified in 5.8.9.8.3;

For V2X sidelink communication an RRC connection resume is initiated only when the conditions specified for V2X sidelink communication in clause 5.3.3.1a of TS 36.331 [10] are met.

NOTE: Upper layers initiate an RRC connection resume (except if the RRC connection resume is initiated at the L2 U2N Relay UE upon reception of a message from a L2 U2N Remote UE via SL-RLC0 or SL-RLC1, or upon reception of *RemoteUEInformationSidelink* message containing the *connectionForMP*). The interaction with NAS is left to UE implementation.

5.3.13.1b Conditions for initiating SDT

When requesting lower layers to check the conditions for initiating SDT, RRC indicates to lower layers whether the resume procedure is initiated for mobile originated or mobile terminated case.

A UE in RRC_INACTIVE initiates the resume procedure for SDT when all of the following conditions are fulfilled:

- 1> for the resume procedure initiated by the upper layers (i.e. mobile originated case):
 - 2> *SIB1* includes *sdt-ConfigCommon*; and
 - 2> *sdt-Config* is configured; and

- 2> all the pending data in UL is mapped to the radio bearers configured for SDT; and
- 2> for an (e)RedCap UE when RedCap-specific initial downlink BWP includes no CD-SSB, *ncd-SSB-RedCapInitialBWP-SDT* is configured; and
- 2> lower layers indicate that conditions for initiating MO-SDT as specified in TS 38.321 [3] are fulfilled.
- 1> for the resume procedure initiated in response to RAN paging (i.e. mobile terminated case):
 - 2> lower layers indicate that conditions for initiating MT-SDT as specified in TS 38.321 [3] are fulfilled.

NOTE: How the UE determines that all pending data in UL is mapped to radio bearers configured for SDT is left to UE implementation.

5.3.13.1c Void

5.3.13.1d Conditions for resuming RRC connection for multicast reception

In RRC_INACTIVE state, if configured with MBS multicast reception in RRC_INACTIVE, the UE shall:

- 1> if the RRC connection resume procedure is triggered for multicast reception at reception of *SIB1*, as specified in 5.2.2.4.2; or
- 1> if the RRC connection resume procedure is triggered for multicast reception at reception of *Paging* message, as specified in 5.3.2.3; or
- 1> if the PTM configuration is not available on the multicast MCCH in the new cell after cell selection (i.e., different from the cell where the UE was configured to receive multicast in RRC_CONNECTED) or in the cell after cell reselection for at least one multicast session that the UE has joined and for which the UE is not indicated to stop monitoring the G-RNTI; or
- 1> if *mbs-NeighbourCellList* included in *MBSMulticastConfiguration* acquired in the previous cell indicates that at least one multicast session that the UE has joined and for which the UE is not indicated to stop monitoring the G-RNTI, is not provided for RRC_INACTIVE in the current serving cell; or
- 1> if either the measured RSRP or RSRQ for serving cell as specified in TS 38.304 [20] is below the corresponding threshold indicated by *thresholdIndex* for a multicast session that the UE has joined and for which the UE is not indicated to stop monitoring the G-RNTI:
 - 2> initiate RRC connection resume procedure as specified in 5.3.13.2 with *resumeCause* set as below:
 - 3> if the UE is configured by upper layers with Access Identity 1:
 - 4> set *resumeCause* to *mps-PriorityAccess*;
 - 3> else if the UE is configured by upper layers with Access Identity 2:
 - 4> set *resumeCause* to *mcs-PriorityAccess*;
 - 3> else if the UE is configured by upper layers with one or more Access Identities equal to 11-15:
 - 4> set *resumeCause* to *highPriorityAccess*;
 - 3> else:
 - 4> set *resumeCause* to *mt-Access*.

5.3.13.2 Initiation

The UE initiates the procedure when upper layers or AS (when responding to RAN paging, upon triggering RNA updates while the UE is in RRC_INACTIVE, upon requesting multicast reception as specified in clause 5.3.13.1d, for NR sidelink communication/discovery/V2X sidelink communication as specified in clause 5.3.13.1a, for requesting configuration for SRS for positioning, for activation of preconfigured Positioning SRS in RRC_INACTIVE, for activation of non-preconfigured Positioning SRS with type semi-persistent in RRC_INACTIVE, upon receiving

RRCRelease message including *resumeIndication*) requests the resume of a suspended RRC connection or requests the resume for initiating SDT as specified in clause 5.3.13.1b.

The UE shall ensure having valid and up to date essential system information as specified in clause 5.2.2.2 before initiating this procedure.

Upon initiation of the procedure, the UE shall:

- 1> if the resumption of the RRC connection is triggered by response to NG-RAN paging; or
- 1> if the resumption of the RRC connection is triggered by receiving *RRCRelease* message including *resumeIndication*; or
- 1> if the resumption of the RRC connection is triggered for multicast reception as specified in clause 5.3.13.1d:
 - 2> select '0' as the Access Category;
 - 2> perform the unified access control procedure as specified in 5.3.14 using the selected Access Category and one or more Access Identities provided by upper layers;
 - 3> if the access attempt is barred, the procedure ends;
- 1> else if the resumption of the RRC connection is triggered by upper layers:
 - 2> if the upper layers provide an Access Category and one or more Access Identities:
 - 3> perform the unified access control procedure as specified in 5.3.14 using the Access Category and Access Identities provided by upper layers;
 - 4> if the access attempt is barred, the procedure ends;
 - 2> if the upper layers provide NSAG information and one or more S-NSSAI(s) triggering the access attempt (TS 23.501 [32] and TS 24.501 [23]):
 - 3> apply the NSAG with highest NSAG priority among the NSAGs that are included in *SIB1* (i.e., in *FeatureCombination* and/or in *RA-PrioritizationSliceInfo*), and that are associated with the S-NSSAI(s) triggering the access attempt, in the Random Access procedure (TS 38.321 [3], clause 5.1);

NOTE 0: If there are multiple NSAGs with the same highest NAS-provided NSAG priority identified for access attempt as above, it is left to UE implementation to select the NSAG to be applied in the Random Access procedure.

- 2> if the resumption occurs after release with redirect with *mpsPriorityIndication*:
 - 3> set the *resumeCause* to *mps-PriorityAccess*;
- 2> else if the resumption of the RRC connection is triggered for activation of preconfigured SRS for positioning available in *srs-PosRRC-InactiveValidityAreaPreConfigList* and if the UE is camped in one of the cells indicated in one of *srs-PosConfigValidityArea*; or
- 2> if the resumption of the RRC connection is triggered due to the need for SRS for positioning configuration and no stored *srs-PosRRC-InactiveValidityAreaPreConfigList* for the camped cell exists; or
- 2> if the resumption of the RRC connection is triggered due to activation of non-preconfigured SRS for positioning with type semi-persistent available in *srs-PosRRC-InactiveValidityAreaNonPreConfig* and if the UE is camped in the cells indicated in *srs-PosConfigValidityArea*:
 - 3> if an emergency service is ongoing:
 - 4> select '2' as the Access Category;
 - 4> set the *resumeCause* to *emergency*;
 - 3> else:
 - 4> set the *resumeCause* to *srs-PosConfigOrActivationReq*;

2> else:

3> set the *resumeCause* in accordance with the information received from upper layers;

1> else if the resumption of the RRC connection is triggered due to an RNA update as specified in 5.3.13.8:

2> if an emergency service is ongoing:

NOTE 1: How the RRC layer in the UE is aware of an ongoing emergency service is up to UE implementation.

3> select '2' as the Access Category;

3> set the *resumeCause* to *emergency*;

2> else:

3> select '8' as the Access Category;

2> perform the unified access control procedure as specified in 5.3.14 using the selected Access Category and one or more Access Identities to be applied as specified in TS 24.501 [23];

3> if the access attempt is barred:

4> set the variable *pendingRNA-Update* to *true*;

4> the procedure ends;

1> else if *srs-PosRRC-InactiveValidityAreaPreConfigList* or *srs-PosRRC-InactiveValidityAreaNonPreConfig* is configured:

2> if the resumption of the RRC connection is triggered due to cell reselection as specified in clause 5.3.13.6:

3> if an emergency service is ongoing:

4> select '2' as the Access Category;

4> set the *resumeCause* to *emergency*;

3> else:

4> select '8' as the Access Category;

4> set the *resumeCause* to *srs-PosConfigOrActivationReq*;

NOTE 2: In case the L2 U2N Relay UE initiates RRC connection resume triggered either by reception of message from a L2 U2N Remote UE via SL-RLC0 or SL-RLC1 as specified in 5.3.13.1a, or by reception of the *RemoteUEInformationSidelink* message containing the *connectionForMP* as specified in 5.3.13.1a, the L2 U2N Relay UE sets the *resumeCause* by implementation, but it can only set the *emergency*, *mps-PriorityAccess*, or *mcs-PriorityAccess* as *resumeCause*, if the same cause value in the message received from the L2 U2N Remote UE via SL-RLC0.

1> if the UE is in NE-DC or NR-DC:

2> if the UE does not support maintaining SCG configuration upon connection resumption:

3> release the MR-DC related configurations (i.e., as specified in 5.3.5.10) from the UE Inactive AS context, if stored;

1> if the UE does not support maintaining the MCG SCell configurations upon connection resumption:

2> release the MCG SCell(s) from the UE Inactive AS context, if stored;

1> if the UE is acting as L2 U2N Remote UE:

2> establish a SRAP entity as specified in TS 38.351 [66], if no SRAP entity has been established;

2> apply the default configuration of SL-RLC1 as defined in 9.2.4 for SRB1;

- 2> apply the default PDCP configuration as defined in 9.2.1 for SRB1;
- 2> apply the default configuration of SRAP as defined in 9.2.5 for SRB1;
- 1> else:
 - 2> apply the default L1 parameter values as specified in corresponding physical layer specifications, except for the parameters for which values are provided in *SIB1*;
 - 2> apply the default SRB1 configuration as specified in 9.2.1;
 - 2> apply the default MAC Cell Group configuration as specified in 9.2.2;
- 1> release *delayBudgetReportingConfig* from the UE Inactive AS context, if stored;
- 1> stop timer T342, if running;
- 1> release *overheatingAssistanceConfig* from the UE Inactive AS context, if stored;
- 1> stop timer T345, if running;
- 1> release *idc-AssistanceConfig* from the UE Inactive AS context, if stored;
- 1> release *drx-PreferenceConfig* for all configured cell groups from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346a, if running;
- 1> release *maxBW-PreferenceConfig* and *maxBW-PreferenceConfigFR2-2* for all configured cell groups from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346b, if running;
- 1> release *maxCC-PreferenceConfig* for all configured cell groups from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346c, if running;
- 1> release *maxMIMO-LayerPreferenceConfig* and *maxMIMO-LayerPreferenceConfigFR2-2* for all configured cell groups from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346d, if running;
- 1> release *minSchedulingOffsetPreferenceConfig* and *minSchedulingOffsetPreferenceConfigExt* for all configured cell groups from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346e, if running;
- 1> release *rlm-RelaxationReportingConfig* for all configured cell groups from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346j, if running;
- 1> release *bfd-RelaxationReportingConfig* for all configured cell groups from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346k, if running;
- 1> release *releasePreferenceConfig* from the UE Inactive AS context, if stored;
- 1> release *wlanNameList* from the UE Inactive AS context, if stored;
- 1> release *btNameList* from the UE Inactive AS context, if stored;
- 1> release *sensorNameList* from the UE Inactive AS context, if stored;
- 1> release *obtainCommonLocation* from the UE Inactive AS context, if stored;
- 1> stop timer T346f, if running;
- 1> stop timer T346i, if running;
- 1> release *referenceTimePreferenceReporting* from the UE Inactive AS context, if stored;

- 1> release *sl-AssistanceConfigNR* from the UE Inactive AS context, if stored;
- 1> release *musim-GapAssistanceConfig* from the UE Inactive AS context, if stored and stop timer T346h, if running;
- 1> release *musim-GapConfig* from the UE Inactive AS context, if stored;
- 1> release *musim-GapPriorityAssistanceConfig* from the UE Inactive AS context, if stored;
- 1> release *musim-LeaveAssistanceConfig* from the UE Inactive AS context, if stored;
- 1> release *musim-CapabilityRestrictionConfig* from the UE Inactive AS context, if stored and stop timer T346n, if running;
- 1> release *propDelayDiffReportConfig* from the UE Inactive AS context, if stored;
- 1> release *ul-GapFR2-PreferenceConfig*, if configured;
- 1> release *rrm-MeasRelaxationReportingConfig* from the UE Inactive AS context, if stored;
- 1> release *multiRx-PreferenceReportingConfigFR2* if configured, and stop timer T346m, if running;
- 1> release *aerial-FlightPathAvailabilityConfig* from the UE Inactive AS context, if stored;
- 1> release *ul-TrafficInfoReportingConfig* from the UE Inactive AS context, if stored;
- 1> stop all instances of timer T346l, if running;
- 1> if the UE is acting as L2 U2N Remote UE:
 - 2> apply the specified configuration of SL-RLC0 used for the delivery of RRC message over SRB0 as specified in 9.1.1.4;
 - 2> apply the SDAP configuration and PDCP configuration as specified in 9.1.1.2 for SRB0;
- 1> else:
 - 2> apply the CCCH configuration as specified in 9.1.1.2;
 - 2> apply the *timeAlignmentTimerCommon* included in *SIB1*;
- 1> if *sdt-MAC-PHY-CG-Config* is configured:
 - 2> if the resume procedure is initiated in a cell that is different to the PCell in which the UE received the stored *sdt-MAC-PHY-CG-Config*:
 - 3> release the stored *sdt-MAC-PHY-CG-Config*;
 - 3> instruct the MAC entity to stop the *cg-SDT-TimeAlignmentTimer*, if it is running;
- 1> if *ncd-SSB-RedCapInitialBWP-SDT* is configured:
 - 2> if the resume procedure is initiated in a cell that is different to the PCell in which the UE received the stored *ncd-SSB-RedCapInitialBWP-SDT*:
 - 3> release the stored *ncd-SSB-RedCapInitialBWP-SDT*;
- 1> if conditions for initiating SDT in accordance with 5.3.13.1b are fulfilled:
 - 2> consider the resume procedure is initiated for SDT;
 - 2> start timer T319a when the lower layers first transmit the CCCH message;
 - 2> consider SDT procedure is ongoing;
- 1> else:
 - 2> start timer T319;

- 2> instruct the MAC entity to stop the *cg-SDT-TimeAlignmentTimer*, if it is running;
- 1> if *ta-Report* or *ta-ReportATG* is configured with value *enabled* and the UE supports TA reporting:
 - 2> indicate TA report initiation to lower layers;
- 1> set the variable *pendingRNA-Update* to *false*;
- 1> release *successHO-Config* from the UE Inactive AS context, if stored;
- 1> release *successPSCell-Config* configured by the PCell from the UE Inactive AS context, if stored;
- 1> release *successPSCell-Config* configured by the PSCell from the UE Inactive AS context, if stored;
- 1> initiate transmission of the *RRCResumeRequest* message or *RRCResumeRequest1* in accordance with 5.3.13.3.

5.3.13.3 Actions related to transmission of *RRCResumeRequest* or *RRCResumeRequest1* message

The UE shall set the contents of *RRCResumeRequest* or *RRCResumeRequest1* message as follows:

- 1> if *useFullResumeID* is signalled in *SIB1*:
 - 2> select *RRCResumeRequest1* as the message to use;
 - 2> set the *resumeIdentity* to the stored *fullI-RNTI* value;
- 1> else:
 - 2> select *RRCResumeRequest* as the message to use;
 - 2> set the *resumeIdentity* to the stored *shortI-RNTI* value;
- 1> restore the RRC configuration, RoHC state, the EHC context(s), the UDC state, the stored QoS flow to DRB mapping rules and the K_{gNB} and K_{RRInt} keys from the stored UE Inactive AS context except for the following:
 - *masterCellGroup*;
 - *mrdc-SecondaryCellGroup*, if stored; and
 - *pdcp-Config*;
- 1> set the *resumeMAC-I* to the 16 least significant bits of the MAC-I calculated:
 - 2> over the ASN.1 encoded as per clause 8 (i.e., a multiple of 8 bits) *VarResumeMAC-Input*;
 - 2> with the K_{RRInt} key in the UE Inactive AS Context and the previously configured integrity protection algorithm; and
 - 2> with all input bits for COUNT, BEARER and DIRECTION set to binary ones;
- 1> derive the K_{gNB} key based on the current K_{gNB} key or the NH, using the *nextHopChainingCount* value received in the previous *RRCRelease* message and stored in the UE Inactive AS Context, as specified in TS 33.501 [11];
- 1> derive the K_{RREnc} key, the K_{RRInt} key, the K_{UPInt} key and the K_{UPenc} key;
- 1> configure lower layers to apply integrity protection for all radio bearers except SRB0 and MRBs using the configured algorithm and the K_{RRInt} key and K_{UPInt} key derived in this clause immediately, i.e., integrity protection shall be applied to all subsequent messages received and sent by the UE;

NOTE 1: Only DRBs with previously configured UP integrity protection shall resume integrity protection.

- 1> configure lower layers to apply ciphering for all radio bearers except SRB0 and MRBs and to apply the configured ciphering algorithm, the K_{RREnc} key and the K_{UPenc} key derived in this clause, i.e. the ciphering configuration shall be applied to all subsequent messages received and sent by the UE;
- 1> re-establish PDCP entities for SRB1;

- 1> resume SRB1;
- 1> if the resume procedure is initiated for SDT:
 - 2> for each radio bearer that is configured for SDT and for SRB1:
 - 3> restore the *RLC-BearerConfig* associated with the RLC bearers of *masterCellGroup* and *pdcp-Config* from the UE Inactive AS context;
 - 3> if the radio bearer is a DRB configured with Ethernet Header Compression:
 - 4> indicate to lower layer that *ethernetHeaderCompression* is not configured;
 - 3> if the radio bearer is a DRB configured with UDC:
 - 4> indicate to lower layer that *uplinkDataCompression* is not configured;
 - 3> if the radio bearer is a DRB configured with ROHC function:
 - 4> if *sdt-DRB-ContinueROHC* is set to *cell* and the resume procedure is initiated in a cell that is the same as the PCell in which the UE received the previous *RRCRelease* message; or
 - 4> if *sdt-DRB-ContinueROHC* is set to *rna* and the resume procedure is initiated in a cell belonging to the same RNA as the PCell in which the UE received the previous *RRCRelease* message:
 - 5> indicate to lower layer that *drb-continueROHC* is configured;
 - 4> else:
 - 5> indicate to lower layer that *drb-continueROHC* is not configured;
 - 3> re-establish PDCP entity for the radio bearer that is configured for SDT without triggering PDCP status report;
 - 2> resume all the radio bearers that are configured for SDT;
 - 1> submit the selected message *RRCResumeRequest* or *RRCResumeRequest1* for transmission to lower layers.

NOTE 2: Only DRBs with previously configured UP ciphering shall resume ciphering.

NOTE 2a: Before the lower layers first transmit the *RRCResumeRequest* or *RRCResumeRequest1*, the UE may initiate a new resume procedure if other conditions for initiation of the resume procedure as specified in 5.3.13.2 are satisfied.

If lower layers indicate an integrity check failure while T319 is running or SDT procedure is ongoing, perform actions specified in 5.3.13.5.

If the UE is an (e)RedCap UE and the RedCap-specific initial downlink BWP is not associated with CD-SSB, the UE may continue cell re-selection related measurements as well as cell re-selection evaluation, otherwise the UE shall continue cell re-selection related measurements as well as cell re-selection evaluation. If the conditions for cell re-selection are fulfilled, the UE shall perform cell re-selection as specified in 5.3.13.6.

NOTE 3: For L2 U2N Remote UE in RRC_INACTIVE, the cell (re)selection procedure as specified in TS 38.304 [20] and relay (re)selection procedure as specified in 5.8.15.3 are performed independently and it is up to UE implementation to select either a cell or a L2 U2N Relay UE.

5.3.13.4 Reception of the *RRCResume* by the UE

The UE shall:

- 1> stop timer T319, if running;
- 1> stop timer T319a, if running and consider SDT procedure is not ongoing;
- 1> stop timer T380, if running;
- 1> if T331 is running:

- 2> stop timer T331;
- 2> perform the actions as specified in 5.7.8.3;
- 1> if the *RRCResume* includes the *fullConfig*:
 - 2> perform the full configuration procedure as specified in 5.3.5.11;
- 1> else:
 - 2> if the *RRCResume* does not include the *restoreMCG-SCells*:
 - 3> release the MCG SCell(s) from the UE Inactive AS context, if stored;
 - 2> if the *RRCResume* does not include the *restoreSCG*:
 - 3> release the MR-DC related configurations (i.e., as specified in 5.3.5.10) from the UE Inactive AS context, if stored;
 - 2> restore the *masterCellGroup*, *mrdc-SecondaryCellGroup*, if stored, and *pdcp-Config* from the UE Inactive AS context;
 - 2> configure lower layers to consider the restored MCG and SCG SCell(s) (if any) to be in deactivated state;
- 1> discard the UE Inactive AS context;
- 1> store the used *nextHopChainingCount* value associated to the current K_{gNB} ;
- 1> if the UE is configured to receive MBS multicast in *RRC_INACTIVE*:
 - 2> reset MAC;
- 1> if *sdt-MAC-PHY-CG-Config* is configured:
 - 2> instruct the MAC entity to stop the *cg-SDT-TimeAlignmentTimer*, if it is running;
 - 2> instruct the MAC entity to start the *timeAlignmentTimer* associated with the PTAG indicated by *tag-Id*, if it is not running;
- 1> if *srs-PosRRC-Inactive* is configured:
 - 2> instruct the MAC entity to stop *inactivePosSRS-TimeAlignmentTimer*, if it is running;
- 1> if *srs-PosRRC-InactiveValidityAreaNonPreConfig* is configured; or
- 1> if *srs-PosRRC-InactiveValidityAreaPreConfigList* is configured and if the cell is not listed in *srs-PosConfigValidityArea*:
 - 2> instruct the MAC entity to stop *inactivePosSRS-ValidityAreaTAT*, if it is running;
- 1> release the *suspendConfig* except the *ran-NotificationAreaInfo*;
- 1> if the *RRCResume* includes the *masterCellGroup*:
 - 2> perform the cell group configuration for the received *masterCellGroup* according to 5.3.5.5;
- 1> if the *RRCResume* includes the *mrdc-SecondaryCellGroup*:
 - 2> if the received *mrdc-SecondaryCellGroup* is set to *nr-SCG*:
 - 3> perform the RRC reconfiguration according to 5.3.5.3 for the *RRCReconfiguration* message included in *nr-SCG*;
 - 2> if the received *mrdc-SecondaryCellGroup* is set to *eutra-SCG*:
 - 3> perform the RRC connection reconfiguration as specified in TS 36.331 [10], clause 5.3.5.3 for the *RRCConnectionReconfiguration* message included in *eutra-SCG*;

- 1> if the *RRCResume* includes the *radioBearerConfig*:
 - 2> perform the radio bearer configuration according to 5.3.5.6;
- 1> if the *RRCResume* message includes the *sk-Counter*:
 - 2> perform security key update procedure as specified in 5.3.5.7;
- 1> if the *RRCResume* message includes the *radioBearerConfig2*:
 - 2> perform the radio bearer configuration according to 5.3.5.6;
- 1> if the *RRCResume* message includes the *needForGapsConfigNR*:
 - 2> if *needForGapsConfigNR* is set to *setup*:
 - 3> consider itself to be configured to provide the measurement gap requirement information of NR target bands;
 - 2> else:
 - 3> consider itself not to be configured to provide the measurement gap requirement information of NR target bands;
- 1> if the *RRCResume* message includes the *needForGapNCSG-ConfigNR*:
 - 2> if *needForGapNCSG-ConfigNR* is set to *setup*:
 - 3> consider itself to be configured to provide the measurement gap and NCSG requirement information of NR target bands;
 - 2> else:
 - 3> consider itself not to be configured to provide the measurement gap and NCSG requirement information of NR target bands;
- 1> if the *RRCResume* message includes the *needForGapNCSG-ConfigEUTRA*:
 - 2> if *needForGapNCSG-ConfigEUTRA* is set to *setup*:
 - 3> consider itself to be configured to provide the measurement gap and NCSG requirement information of E-UTRA target bands;
 - 2> else:
 - 3> consider itself not to be configured to provide the measurement gap and NCSG requirement information of E-UTRA target bands;
- 1> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 2> if the RPLMN is not included in *plmn-IdentityList* in *VarAppLayerPLMN-ListConfig*:
 - 3> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 3> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*;
 - 3> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 3> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
- 1> if the *RRCResume* message includes the *appLayerMeasConfig*:
 - 2> if *idleInactiveReportAllowed* is included in the *RRCResume* message:

- 3> if the UE is configured with at least one application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 4> initiate the procedure in 5.7.16.2 after the *RRCResumeComplete* has been transmitted;
 - 2> else:
 - 3> for each application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
 - 4> forward the *measConfigAppLayerId* and inform upper layers about the release of the application layer measurement configuration;
 - 4> release the application layer measurement configuration including its fields in the UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*, if stored;
 - 4> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 4> consider itself not to be configured to send application layer measurement reports for the *measConfigAppLayerId*;
 - 2> perform the application layer measurement configuration procedure as specified in 5.3.5.13d;
 - 1> if the *RRCResume* message includes the *sl-L2RemoteUE-Config* (i.e. the UE is a L2 U2N Remote UE):
 - 2> perform the L2 U2N Remote UE configuration procedure as specified in 5.3.5.16;
 - 1> if the *RRCResume* message includes the *sl-ConfigDedicatedNR*:
 - 2> perform the sidelink dedicated configuration procedure as specified in 5.3.5.14;
 - 1> resume SRB2 (if suspended), SRB3 (if configured), SRB4 (if configured), SRB5 (if configured), all DRBs (that are suspended) and multicast MRBs (that are suspended);
- NOTE 1: If the SCG is deactivated, resuming SRB3 and all DRBs does not imply that PDCP or RRC PDUs can be transmitted or received on SCG RLC bearers.
- 1> if stored, discard the cell reselection priority information provided by the *cellReselectionPriorities* or inherited from another RAT;
 - 1> stop timer T320, if running;
 - 1> if the *RRCResume* message includes the *measConfig*:
 - 2> perform the measurement configuration procedure as specified in 5.5.2;
 - 1> resume measurements if suspended;
 - 1> if T390 is running:
 - 2> stop timer T390 for all access categories;
 - 2> perform the actions as specified in 5.3.14.4;
 - 1> if T302 is running:
 - 2> stop timer T302;
 - 2> perform the actions as specified in 5.3.14.4;
 - 1> enter RRC_CONNECTED;
 - 1> indicate to upper layers that the suspended RRC connection has been resumed;
 - 1> stop the cell re-selection procedure;
 - 1> stop relay reselection procedure if any for L2 U2N Remote UE;

- 1> consider the current cell to be the PCell;
- 1> set the content of the of *RRCResumeComplete* message as follows:
 - 2> if the upper layer provides NAS PDU, set the *dedicatedNAS-Message* to include the information received from upper layers;
 - 2> if upper layers provides a PLMN:
 - 3> if the UE is either allowed or instructed to access the PLMN via a cell for which at least one CAG ID is broadcast:
 - 4> set the *selectedPLMN-Identity* from the *nnp-IdentityInfoList*;
 - 3> else:
 - 4> set the *selectedPLMN-Identity* to the PLMN selected by upper layers from the *plmn-IdentityInfoList*;
 - 2> if the *masterCellGroup* contains the *reportUplinkTxDirectCurrent*:
 - 3> include the *uplinkTxDirectCurrentList* for each MCG serving cell with UL;
 - 3> include *uplinkDirectCurrentBWP-SUL* for each MCG serving cell configured with SUL carrier, if any, within the *uplinkTxDirectCurrentList*;
 - 2> if the *masterCellGroup* contains the *reportUplinkTxDirectCurrentTwoCarrier*:
 - 3> include in the *uplinkTxDirectCurrentTwoCarrierList* the list of uplink Tx DC locations for the configured uplink carrier aggregation in the MCG;
 - 2> if the *masterCellGroup* contains the *reportUplinkTxDirectCurrentMoreCarrier*:
 - 3> include in the *uplinkTxDirectCurrentMoreCarrierList* the list of uplink Tx DC locations for the configured uplink carrier aggregation in the MCG;
 - 2> if the UE has idle/inactive measurement information concerning cells other than the PCell available in *VarMeasIdleReport*:
 - 3> if the *idleModeMeasurementReq* is included in the *RRCResume* message:
 - 4> if *validatedMeasurementsReq* is included in the *RRCResume* and *measIdleValidityDuration* is included in *VarEnhMeasIdleConfig*:
 - 5> set the *measResultIdleEUTRA* in the *RRCResumeComplete* message to the value of *measReportIdleEUTRA* in the *VarMeasIdleReport* for any valid measurement results, if available, and set *validityStatus* to the value of *measIdleValidityDuration* in *VarEnhMeasIdleConfig*;
 - 5> set the *measResultIdleNR* in the *RRCResumeComplete* message to the value of *measReportIdleNR* in the *VarMeasIdleReport* for any valid measurement results, if available, and set *validityStatus* to the value of *measIdleValidityDuration* in *VarEnhMeasIdleConfig*;
 - 5> discard the *VarMeasIdleReport* upon successful delivery of the *RRCResumeComplete* message is confirmed by lower layers;
 - 5> remove the *measIdleValidityDuration* in *VarEnhMeasIdleConfig*;
 - 4> else:
 - 5> set the *measResultIdleEUTRA* in the *RRCResumeComplete* message to the value of *measReportIdleEUTRA* in the *VarMeasIdleReport*, if available;
 - 5> set the *measResultIdleNR* in the *RRCResumeComplete* message to the value of *measReportIdleNR* in the *VarMeasIdleReport*, if available;
 - 5> discard the *VarMeasIdleReport* upon successful delivery of the *RRCResumeComplete* message is confirmed by lower layers;

- 5> remove the *measIdleValidityDuration* in *VarEnhMeasIdleConfig*, if stored;
- 3> else:
 - 4> if the SIB1 contains *idleModeMeasurementsNR* and the UE has NR idle/inactive measurement information concerning cells other than the PCell available in *VarMeasIdleReport*; or
 - 4> if the SIB1 contains *idleModeMeasurementsEUTRA* and the UE has E-UTRA idle/inactive measurement information available in *VarMeasIdleReport*:
 - 5> include the *idleMeasAvailable*;
- 2> if the *reselectionMeasurementReq* is included in the *RRCResume* message:
 - 3> if *validatedMeasurementsReq* is included in the *RRCResume* and *measReselectionValidityDuration* is included in *VarMeasReselectionConfig*:
 - 4> if *measReselectionCarrierListNR* is present in *VarMeasReselectionConfig*:
 - 5> if the UE has valid cell reselection measurements results for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig*:
 - 6> set the *measResultReselectionNR* in the *RRCResumeComplete* message to the valid NR measurement results, if available for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig* and set *validityStatus* to the value of *measReselectionValidityDuration* in *VarMeasReselectionConfig*;
 - 4> else:
 - 5> if the UE has valid NR cell reselection measurements results:
 - 6> set the *measResultReselectionNR* in the *RRCResumeComplete* message to any available valid NR measurement results, if available, and set *validityStatus* to the value of *measReselectionValidityDuration* in *VarMeasReselectionConfig*;
 - 3> else:
 - 4> if *measReselectionCarrierListNR* is present in *VarMeasReselectionConfig*:
 - 5> if the UE has cell reselection measurements results for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig*:
 - 6> set the *measResultReselectionNR* in the *RRCResumeComplete* message to the NR measurement results, if available for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig*;
 - 4> else:
 - 5> if the UE has NR cell reselection measurements results:
 - 6> set the *measResultReselectionNR* in the *RRCResumeComplete* message to any available NR measurement results, if available;
 - 2> else:
 - 3> if the SIB1 contains *reselectionMeasurementsNR*:
 - 4> if *measReselectionCarrierListNR* is present in *VarMeasReselectionConfig* and the UE has NR reselection measurements available for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig*; or
 - 4> if *measReselectionCarrierListNR* is not present in *VarMeasReselectionConfig* and if the UE has NR reselection measurements available:
 - 5> include the *reselectionMeasAvailable*;
 - 2> if the *RRCResume* message includes *mrdc-SecondaryCellGroup* set to *eutra-SCG*:

- 3> include in the *eutra-SCG-Response* the E-UTRA *RRCConnectionReconfigurationComplete* message in accordance with TS 36.331 [10] clause 5.3.5.3;
- 2> if the *RRCResume* message includes *mrdc-SecondaryCellGroup* set to *nr-SCG*:
 - 3> include in the *nr-SCG-Response* the SCG *RRCReconfigurationComplete* message;
- 2> if the UE has logged measurements available for NR and if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*; or
- 2> if the UE has logged measurements available for NR and if the current registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*:
 - 3> include the *logMeasAvailable* in the *RRCResumeComplete* message;
 - 3> if Bluetooth measurement results are included in the logged measurements the UE has available for NR:
 - 4> include the *logMeasAvailableBT* in the *RRCResumeComplete* message;
 - 3> if WLAN measurement results are included in the logged measurements the UE has available for NR:
 - 4> include the *logMeasAvailableWLAN* in the *RRCResumeComplete* message;
- 2> if the *sigLoggedMeasType* in *VarLogMeasReport* is included; or
- 2> if the UE supports the override protection of the signalling based logged MDT for inter-RAT (i.e. LTE to NR), and if the *sigLoggedMeasType* in *VarLogMeasReport* of TS 36.331 [10] is included:
- 3> if T330 timer is running (associated to the logged measurement configuration for NR or for LTE):
 - 4> set *sigLogMeasConfigAvailable* to *true* in the *RRCResumeComplete* message;
- 3> else:
 - 4> if the UE has logged measurements in *VarLogMeasReport* or in *VarLogMeasReport* of TS 36.331 [10]:
 - 5> set *sigLogMeasConfigAvailable* to *false* in the *RRCResumeComplete* message;
- 2> if the UE has connection establishment failure or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the RPLMN is equal to *plmn-Identity* stored in *VarConnEstFailReport* or in at least one of the entries of *VarConnEstFailReportList*; or
- 2> if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the registered SNPN identity is equal to *snpn-Identity* in *networkIdentity* stored in *VarConnEstFailReport* or any entry of *VarConnEstFailReportList*:
 - 3> include *connEstFailInfoAvailable* in the *RRCResumeComplete* message;
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report*; or
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* of TS 36.331 [10] and if the UE is capable of cross-RAT RLF reporting and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report* of TS 36.331 [10]; or
- 2> if the UE has radio link failure or handover failure information available in *VarRLF-Report* and if the current registered SNPN identity are included in *snpn-IdentityList* stored in *VarRLF-Report*; or
 - 3> include *rlf-InfoAvailable* in the *RRCResumeComplete* message;
- 2> if the UE has successful PSCell change or addition related information available in *VarSuccessPSCell-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessPSCell-Report*; or
- 2> if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessPSCell-Report*:

- 3> include *successPSCell-InfoAvailable* in the *RRCResumeComplete* message;
- 2> if the UE has successful handover information available in *VarSuccessHO-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessHO-Report*; or
- 2> if the UE has successful handover information available in *VarSuccessHO-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in the *VarSuccessHO-Report*:
- 3> include *successHO-InfoAvailable* in the *RRCResumeComplete* message;
- 2> if the UE supports storage of mobility history information and the UE has mobility history information available in *VarMobilityHistoryReport*:
- 3> include the *mobilityHistoryAvail* in the *RRCResumeComplete* message;
- 2> if *speedStateReselectionPars* is configured in the *SIB2*:
- 3> include the *mobilityState* in the *RRCResumeComplete* message and set it to the mobility state (as specified in TS 38.304 [20]) of the UE just prior to entering *RRC_CONNECTED* state;
- 2> if the UE has at least one stored application layer measurement configuration with *appLayerIdleInactiveConfig* configured:
- 3> include *measConfigReportAppLayerAvailable* in the *RRCResumeComplete* message;
- 2> if the UE is configured to provide the measurement gap requirement information of NR target bands:
- 3> include the *NeedForGapsInfoNR* and set the contents as follows:
 - 4> include *intraFreq-needForGap* and set the gap requirement information of intra-frequency measurement for each NR serving cell;
 - 4> if *requestedTargetBandFilterNR* is configured, for each supported NR band that is also included in *requestedTargetBandFilterNR*, include an entry in *interFreq-needForGap* and set the gap requirement information for that band; otherwise, include an entry in *interFreq-needForGap* and set the corresponding gap requirement information for each supported NR band;
- 3> if the *needForInterruptionConfigNR* is enabled:
 - 4> include the *needForInterruptionInfoNR* and set the contents as follows:
 - 5> include *intraFreq-needForInterruption* with the same number of entries, and listed in the same order, as in *intraFreq-needForGap*;
 - 5> for each entry in *intraFreq-needForInterruption*:
 - 6> include *interruptionIndication* and set the interruption requirement information if the corresponding entry in *intraFreq-needForGap* is set to *no-gap*;
 - 5> include *interFreq-needForInterruption* with the same number of entries, and listed in the same order, as in *interFreq-needForGap*;
 - 5> for each entry in *interFreq-needForInterruption*:
 - 6> include *interruptionIndication* and set the interruption requirement information if the corresponding entry in *interFreq-needForGap* is set to *no-gap*;
- 2> if the UE is configured to provide the measurement gap and NCSG requirement information of NR target bands:
- 3> include the *NeedForGapNCSG-InfoNR* and set the contents as follows:
 - 4> include *intraFreq-needForNCSG* and set the gap and NCSG requirement information of intra-frequency measurement for each NR serving cell;
 - 4> if *requestedTargetBandFilterNCSG-NR* is configured:

- 5> for each supported NR band included in *requestedTargetBandFilterNCSG-NR*, include an entry in *interFreq-needForNCSG* and set the NCSG requirement information for that band;
- 4> else:
 - 5> include an entry for each supported NR band in *interFreq-needForNCSG* and set the corresponding NCSG requirement information;
- 2> if the UE is configured to provide the measurement gap and NCSG requirement information of E-UTRA target bands:
 - 3> include the *NeedForGapNCSG-InfoEUTRA* and set the contents as follows:
 - 4> if *requestedTargetBandFilterNCSG-EUTRA* is configured:
 - 5> for each supported E-UTRA band included in *requestedTargetBandFilterNCSG-EUTRA*, include an entry in *needForNCSG-EUTRA* and set the NCSG requirement information for that band;
 - 4> else:
 - 5> include an entry for each supported E-UTRA band in *needForNCSG-EUTRA* and set the corresponding NCSG requirement information;
 - 2> if *SIB1* contains *musim-CapRestrictionAllowed*:
 - 3> if supported, include the *musim-CapRestrictionInd* in the *RRCResumeComplete* message upon determining it has temporary capability restriction;
 - 2> if the UE has flight path information available:
 - 3> include *flightPathInfoAvailable*;
- 1> submit the *RRCResumeComplete* message to lower layers for transmission;
- 1> the procedure ends.

NOTE 2: Network only configures at most one of *reportUplinkTxDirectCurrent*, *reportUplinkTxDirectCurrentTwoCarrier* or *reportUplinkTxDirectCurrentMoreCarrier* in one RRC message.

NOTE 3: Upon reception of *musim-CapRestrictionInd* in *RRCResumeComplete*, it is up to network implementation to configure the UE with a limited configuration that is used until network sends *RRCReconfiguration* based on the actual restricted UE capabilities included in *UEAssistanceInformation*.

5.3.13.5 Handling of failure to resume RRC Connection

The UE shall:

- 1> if timer T319 expires:
 - 2> if the UE supports multiple CEF report:
 - 3> if UE is not in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the RPLMN is equal to *plmn-identity* in *networkIdentity* stored in *VarConnEstFailReport*; or
 - 3> if the UE is in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the registered SNPN identity is equal to *snpn-identity* in *networkIdentity* stored in *VarConnEstFailReport*:
 - 4> if the cell identity of current cell is not equal to the cell identity stored in *measResultFailedCell* in *VarConnEstFailReport* and if the *maxCEFReport-r17* has not been reached:
 - 5> append the *VarConnEstFailReport* as a new entry in the *VarConnEstFailReportList*;

- 2> if the UE is not in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the RPLMN is not equal to *plmn-identity* stored in *VarConnEstFailReport*; or
 - 2> if the UE is in SNPN access mode and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* and if the registered SNPN identity is not equal to *snpn-identity* in *networkIdentity* stored in *VarConnEstFailReport*; or
 - 2> if the cell identity of current cell is not equal to the cell identity stored in *measResultFailedCell* in *VarConnEstFailReport*:
 - 3> reset the *numberOfConnFail* to 0;
 - 2> if the UE supports multiple CEF report and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReportList* and if the RPLMN is not equal to *plmn-identity* in *networkIdentity* stored in any entry of *VarConnEstFailReportList*:
 - 2> if the UE supports multiple CEF report and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReportList* and if the registered SNPN identity is not equal to *snpn-identity* in *networkIdentity* stored in any entry of *VarConnEstFailReportList*:
 - 3> clear the content included in *VarConnEstFailReportList*;
 - 2> clear the content included in *VarConnEstFailReport* except for the *numberOfConnFail*, if any;
 - 2> store the following connection resume failure information in the *VarConnEstFailReport* by setting its fields as follows:
 - 3> if the UE is not in SNPN access mode:
 - 4> set the *plmn-Identity* to the PLMN selected by upper layers (see TS 24.501 [23]) from the PLMN(s) included in the *plmn-IdentityInfoList* in *SIB1*;
 - 3> else if the UE is in SNPN access mode:
 - 4> set the *snpn-Identity* in *networkIdentity* to include the SNPN identity selected by upper layers (see TS 24.501 [23]) from the list of SNPN(s) included in the *npn-IdentityInfoList* in *SIB1*;
 - 3> set the *measResultFailedCell* to include the global cell identity, tracking area code, the cell level and SS/PBCH block level RSRP, and RSRQ, and SS/PBCH block indexes, of the failed cell based on the available SSB measurements collected up to the moment the UE detected connection resume failure;
 - 3> if available, set the *measResultNeighCells*, in order of decreasing ranking-criterion as used for cell reselection, to include neighbouring cell measurements for at most the following number of neighbouring cells: 6 intra-frequency and 3 inter-frequency neighbours per frequency as well as 3 inter-RAT neighbours, per frequency/ set of frequencies per RAT and according to the following:
 - 4> for each neighbour cell included, include the optional fields that are available;
- NOTE: The UE includes the latest results of the available measurements as used for cell reselection evaluation, which are performed in accordance with the performance requirements as specified in TS 38.133 [14].
- 3> if available, set the *locationInfo* as in 5.3.3.7;
 - 3> set *perRAInfoList* to indicate the performed random access procedure related information as specified in 5.7.10.5;
 - 3> if *numberOfConnFail* is smaller than 8:
 - 4> increment the *numberOfConnFail* by 1;
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'RRC Resume failure'.
- 1> else if upon receiving integrity check failure indication from lower layers while T319 is running:

- 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'RRC Resume failure'.
- 1> else if indication from the MCG RLC that the maximum number of retransmissions has been reached is received while SDT procedure is ongoing; or
- 1> if random access problem indication is received from MCG MAC while SDT procedure is ongoing; or
- 1> if the lower layers indicate that *cg-SDT-TimeAlignmentTimer* or the *configuredGrantTimer* expired before receiving network response for the UL CG-SDT transmission with CCCH message while SDT procedure is ongoing; or
- 1> if integrity check failure indication is received from lower layers while SDT procedure is ongoing; or
- 1> if T319a expires:
 - 2> consider SDT procedure is not ongoing;
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'RRC Resume failure'.

The UE may discard the connection resume failure or connection establishment failure information, i.e. release the UE variable *VarConnEstFailReport* and the UE variable *VarConnEstFailReportList*, 48 hours after the last connection resume failure is detected.

The L2 U2N Relay UE either indicates to upper layers (to trigger PC5 unicast link release) or sends *NotificationMessageSidelink* message to the connected L2 U2N Remote UE(s) in accordance with 5.8.9.10.

5.3.13.6 Cell re-selection or cell selection or L2 U2N relay (re)selection while T390, T319 or T302 is running or SDT procedure is ongoing (UE in RRC_INACTIVE) or SRS transmission in RRC_INACTIVE is configured

The UE shall:

- 1> if cell reselection occurs while T319 or T302 is running or while SDT procedure is ongoing; or
- 1> if relay (re)selection or cell selection by a L2 U2N Remote UE occurs while T319 is running; or
- 1> if cell changes due to relay reselection or cell selection by a L2 U2N Remote UE while T302 is running:
 - 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'RRC Resume failure';
- 1> else if cell selection or reselection occurs while T390 is running, or cell change due to relay selection or reselection occurs while T390 is running:
 - 2> stop T390 for all access categories;
 - 2> perform the actions as specified in 5.3.14.4.
- 1> else if cell reselection occurs when *srs-PosRRC-Inactive* is configured:
 - 2> indicate to the lower layer to stop *inactivePosSRS-TimeAlignmentTimer*;
 - 2> release the *srs-PosRRC-Inactive*.
- 1> else if cell reselection occurs when *srs-PosRRC-InactiveValidityAreaPreConfigList* or *srs-PosRRC-InactiveValidityAreaNonPreConfig* is configured and if there is an on-going SRS for positioning transmission procedure in RRC_INACTIVE:
 - 2> if the selected cell is not included in the *srs-PosConfigValidityArea*:
 - 3> indicate to the lower layer to stop *inactivePosSRS-ValidityAreaTAT*;
 - 3> initiate RRC connection resume procedure in 5.3.13.2;

- 2> else if the cell is included in the *srs-PosConfigValidityArea*:
- 3> if the selected cell and the previously camped cell are in the same *srs-PosConfigValidityArea*:
 - 4> if *autonomousTA-AdjustmentEnabled* is configured and if the Timing Advance validation requirements specified in clause 5.6.6.3 of TS 38.133 [14] is met:
 - 5> indicate to the lower layer to update Timing Advance and stored RSRP;
 - 4> instruct lower layers to continue transmitting SRS if Timing Advance validation condition as specified in TS 38.321 [3] are satisfied;
- 3> if the selected cell and previously camped cell are in the different *srs-PosConfigValidityArea*:
 - 4> initiate RRC connection resume procedure in 5.3.13.2;
 - 4> indicate to the lower layer to stop *inactivePosSRS-ValidityAreaTAT*.

5.3.13.7 Reception of the *RRCSetup* by the UE

The UE shall:

- 1> perform the RRC connection setup procedure as specified in 5.3.3.4.

5.3.13.8 RNA update

In RRC_INACTIVE state, the UE shall:

- 1> if T380 expires; or
- 1> if RNA Update is triggered at reception of SIB1, as specified in 5.2.2.4.2:
 - 2> if T319 is not running and SDT procedure is not ongoing:
 - 3> initiate RRC connection resume procedure in 5.3.13.2 with *resumeCause* set to *rna-Update*;
- 1> if barring is alleviated for Access Category '8' or Access Category '2', as specified in 5.3.14.4:
 - 2> if upper layers do not request RRC the resumption of an RRC connection, and
 - 2> if the variable *pendingRNA-Update* is set to *true*:
 - 3> initiate RRC connection resume procedure in 5.3.13.2 with *resumeCause* value set to *rna-Update*.

If the UE in RRC_INACTIVE state fails to find a suitable cell and camps on the acceptable cell to obtain limited service as defined in TS 38.304 [20], the UE shall:

- 1> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'other'.

NOTE: It is left to UE implementation how to behave when T380 expires while the UE is camped neither on a suitable nor on an acceptable cell.

5.3.13.9 Reception of the *RRCRelease* by the UE

The UE shall:

- 1> perform the actions as specified in 5.3.8.

5.3.13.10 Reception of the *RRCReject* by the UE

The UE shall:

- 1> perform the actions as specified in 5.3.15.

5.3.13.11 Inability to comply with *RRCResume*

The UE shall:

- 1> if the UE is unable to comply with (part of) the configuration included in the *RRCResume* message;
- 2> perform the actions upon going to RRC_IDLE as specified in 5.3.11 with release cause 'RRC Resume failure'.

NOTE 1: The UE may apply above failure handling also in case the *RRCResume* message causes a protocol error for which the generic error handling as defined in 10 specifies that the UE shall ignore the message.

NOTE 2: If the UE is configured (i.e., via SIB1) to send MUSIM temporary capability restriction indication, and if the UE supports MUSIM temporary capability restriction, the UE does not apply above failure handling in case the UE is unable to apply (part of) the configuration resulting from *RRCResume* message due to UE temporary capability restriction for MUSIM operation. If UE does not go to RRC_IDLE in this case, UE still considers the configuration resulting from the *RRCResume* message as the current configuration as the baseline for delta configuration for future reconfigurations. It is up to UE implementation how to apply *RRCResume* message. For other cases, if the UE is unable to comply with part of the configuration, it does not apply any (part of) the configuration, i.e. there is no partial success/failure.

5.3.13.12 Inter RAT cell reselection

Upon reselecting to an inter-RAT cell, the UE shall:

- 1> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'other'.

5.3.14 Unified Access Control

5.3.14.1 General

The purpose of this procedure is to perform access barring check for an access attempt associated with a given Access Category and one or more Access Identities upon request from upper layers according to TS 24.501 [23] or the RRC layer. This procedure does not apply to IAB-MT and NCR-MT. This procedure does not apply to L2 U2N Relay UE initiating RRC connection establishment or RRC connection resume upon reception of any message from a L2 U2N remote UE via SL-RLC0 or SL-RLC1 in accordance to 5.3.3.1a or 5.3.13.1a.

After a PCell change in RRC_CONNECTED the UE shall defer access barring checks until it has obtained *SIB1* (as specified in 5.2.2.2) from the target cell.

5.3.14.2 Initiation

Upon initiation of the procedure, the UE shall:

- 1> if timer T390 is running for the Access Category:
 - 2> consider the access attempt as barred;
- 1> else if timer T302 is running:
 - 2> if the Access Category is neither '2' nor '0'; or
 - 2> if the Access Category is '0' for RRC resumption triggered by multicast reception as specified in 5.3.13.2:
 - 3> consider the access attempt as barred;
- 1> else:
 - 2> if the Access Category is '0':
 - 3> consider the access attempt as allowed;
 - 2> else:

- 3> if *SIB1* includes *uac-BarringPerPLMN-List* that contains a *UAC-BarringPerPLMN* for the selected PLMN or SNPN:
 - 4> if the procedure in 5.2.2.4.2 for a selected PLMN resulted in use of information in *npn-IdentityInfoList* and *UAC-BarringPerPLMN* has an entry with the *plmn-IdentityIndex* corresponding to used information in this list:
 - 5> select the *UAC-BarringPerPLMN* entry with the *plmn-IdentityIndex* corresponding to used information in the *npn-IdentityInfoList*;
 - 4> else:
 - 5> select the *UAC-BarringPerPLMN* entry with the *plmn-IdentityIndex* corresponding to the selected PLMN and the *PLMN-IdentityInfo*, if any, or the selected SNPN and the *npn-IdentityInfoList*;
- 3> if any *UAC-BarringPerPLMN* entry is selected:
 - 4> in the remainder of this procedure, use the selected *UAC-BarringPerPLMN* entry (i.e. presence or absence of access barring parameters in this entry) irrespective of the *uac-BarringForCommon* included in *SIB1*;
- 3> else if *SIB1* includes *uac-BarringForCommon*:
 - 4> in the remainder of this procedure use the *uac-BarringForCommon* (i.e. presence or absence of these parameters) included in *SIB1*;
- 3> else:
 - 4> consider the access attempt as allowed;
- 3> if *uac-BarringForCommon* is applicable or the *uac-ACBarringListType* indicates that *uac-ExplicitACBarringList* is used:
 - 4> if the corresponding *UAC-BarringPerCatList* contains a *UAC-BarringPerCat* entry corresponding to the Access Category:
 - 5> select the *UAC-BarringPerCat* entry;
 - 5> if the *uac-BarringInfoSetList* contains a *UAC-BarringInfoSet* entry corresponding to the selected *uac-barringInfoSetIndex* in the *UAC-BarringPerCat*:
 - 6> select the *UAC-BarringInfoSet* entry;
 - 6> perform access barring check for the Access Category as specified in 5.3.14.5, using the selected *UAC-BarringInfoSet* as "UAC barring parameter";
 - 5> else:
 - 6> consider the access attempt as allowed;
 - 4> else:
 - 5> consider the access attempt as allowed;
- 3> else if the *uac-ACBarringListType* indicates that *uac-ImplicitACBarringList* is used:
 - 4> select the *uac-BarringInfoSetIndex* corresponding to the Access Category in the *uac-ImplicitACBarringList*;
 - 4> if the *uac-BarringInfoSetList* contains the *UAC-BarringInfoSet* entry corresponding to the selected *uac-BarringInfoSetIndex*:
 - 5> select the *UAC-BarringInfoSet* entry;
 - 5> perform access barring check for the Access Category as specified in 5.3.14.5, using the selected *UAC-BarringInfoSet* as "UAC barring parameter";

- 4> else:
 - 5> consider the access attempt as allowed;
- 3> else:
 - 4> consider the access attempt as allowed;
- 1> if the access barring check was requested by upper layers:
 - 2> if the access attempt is considered as barred:
 - 3> if timer T302 is running:
 - 4> if timer T390 is running for Access Category '2':
 - 5> inform the upper layer that access barring is applicable for all access categories except categories '0', upon which the procedure ends;
 - 4> else
 - 5> inform the upper layer that access barring is applicable for all access categories except categories '0' and '2', upon which the procedure ends;
 - 3> else:
 - 4> inform upper layers that the access attempt for the Access Category is barred, upon which the procedure ends;
 - 2> else:
 - 3> inform upper layers that the access attempt for the Access Category is allowed, upon which the procedure ends;
- 1> else:
 - 2> the procedure ends.

5.3.14.3 Void

5.3.14.4 T302, T390 expiry or stop (Barring alleviation)

The UE shall:

- 1> if timer T302 expires or is stopped:
 - 2> for each Access Category for which T390 is not running:
 - 3> consider the barring for this Access Category to be alleviated;
- 1> else if timer T390 corresponding to an Access Category other than '2' expires or is stopped, and if timer T302 is not running:
 - 2> consider the barring for this Access Category to be alleviated;
- 1> else if timer T390 corresponding to the Access Category '2' expires or is stopped:
 - 2> consider the barring for this Access Category to be alleviated;
- 1> when barring for an Access Category is considered being alleviated:
 - 2> if the Access Category was informed to upper layers as barred:
 - 3> inform upper layers about barring alleviation for the Access Category.
 - 2> else if the Access Category is Access Category '0' for RRC resumption triggered by multicast reception as specified in 5.3.13.2:

- 3> perform actions specified in 5.3.13.1d;
- 2> if barring is alleviated for Access Category '8'; or
- 2> if barring is alleviated for Access Category '2':
- 3> perform actions specified in 5.3.13.8;

5.3.14.5 Access barring check

The UE shall:

- 1> if one or more Access Identities equal to 1, 2, 11, 12, 13, 14, or 15 are indicated according to TS 24.501 [23], and
- 1> if for at least one of these Access Identities the corresponding bit in the *uac-BarringForAccessIdentity* contained in "UAC barring parameter" is set to *zero*:
 - 2> consider the access attempt as allowed;
- 1> else:
 - 2> if the establishment of the RRC connection is the result of release with redirect with *mpsPriorityIndication* (either in NR or E-UTRAN); and
 - 2> if the bit corresponding to Access Identity 1 in the *uac-BarringForAccessIdentity* contained in the "UAC barring parameter" is set to *zero*:
 - 3> consider the access attempt as allowed;
 - 2> else if Access Identity 3 is indicated:
 - 3> draw a random number '*rand*' uniformly distributed in the range: $0 \leq rand < 1$;
 - 3> if '*rand*' is lower than the value indicated by *uac-BarringFactorForAI3* included in "UAC barring parameter":
 - 4> consider the access attempt as allowed;
 - 3> else:
 - 4> consider the access attempt as barred;
 - 2> else:
 - 3> draw a random number '*rand*' uniformly distributed in the range: $0 \leq rand < 1$;
 - 3> if '*rand*' is lower than the value indicated by *uac-BarringFactor* included in "UAC barring parameter":
 - 4> consider the access attempt as allowed;
 - 3> else:
 - 4> consider the access attempt as barred;
- 1> if the access attempt is considered as barred:
 - 2> draw a random number '*rand*' that is uniformly distributed in the range $0 \leq rand < 1$;
 - 2> start timer T390 for the Access Category with the timer value calculated as follows, using the *uac-BarringTime* included in "UAC barring parameter":
$$T390 = (0.7 + 0.6 * rand) * uac-BarringTime.$$

5.3.15 RRC connection reject

5.3.15.1 Initiation

The UE initiates the procedure upon the reception of *RRCReject* when the UE tries to establish or resume an RRC connection.

5.3.15.2 Reception of the *RRCReject* by the UE

The UE shall:

- 1> stop timer T300, if running;
- 1> stop timer T319, if running;
- 1> stop timer T319a, if running and consider SDT procedure is not ongoing;
- 1> stop timer T302, if running;
- 1> reset MAC and release the default MAC Cell Group configuration (except if the *RRCReject* is received in response to resuming RRC connection for multicast reception);
- 1> if *waitTime* is configured in the *RRCReject*:
 - 2> start timer T302, with the timer value set to the *waitTime*;
- 1> if *RRCReject* is received in response to a request from upper layers:
 - 2> inform the upper layer that access barring is applicable for all access categories except categories '0' and '2';
- 1> if *RRCReject* is received in response to an *RRCSetupRequest*:
 - 2> inform upper layers about the failure to setup the RRC connection, upon which the procedure ends;
- 1> else if *RRCReject* is received in response to an *RRCResumeRequest* or an *RRCResumeRequest1*:
 - 2> if resume is triggered by upper layers:
 - 3> inform upper layers about the failure to resume the RRC connection;
 - 2> if resume is triggered due to an RNA update; or
 - 2> if resume is triggered for SDT and T380 has expired:
 - 3> set the variable *pendingRNA-Update* to *true*;
 - 2> discard the current K_{gNB} key, the K_{RRCEnc} key, the K_{RRCint} key, the K_{UPint} key and the K_{UPenc} key derived in accordance with 5.3.13.3;
 - 2> if resume is triggered for SDT:
 - 3> for SRB2, if it is resumed and for SRB1:
 - 4> trigger the PDCP entity to perform SDU discard as specified in TS 38.323 [5];
 - 4> re-establish the RLC entity as specified in TS 38.322 [4];
 - 3> for each DRB that is not suspended:
 - 4> indicate PDCP suspend to lower layers;
 - 4> re-establish the RLC entity as specified in TS 38.322 [4];
 - 2> suspend SRB1 and the radio bearers configured for SDT, if any;
 - 2> the procedure ends.

Upon L2 U2N Relay UE receives *RRCReject*, it either indicates to upper layers (to trigger PC5 unicast link release) or sends *NotificationMessageSidelink* message to the connected L2 U2N Remote UE(s) in accordance with 5.8.9.10.

The RRC_INACTIVE UE shall continue to monitor paging while the timer T302 is running.

NOTE: If timer T331 is running, the UE continues to perform idle/inactive measurements according to 5.7.8.

5.4 Inter-RAT mobility

5.4.1 Introduction

Network controlled inter-RAT mobility between NR and E-UTRA, where E-UTRA can be connected to either EPC or 5GC, and from NR to UTRA-FDD is supported.

5.4.2 Handover to NR

5.4.2.1 General

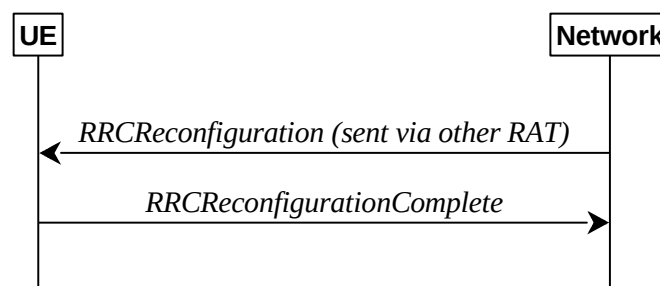 


Figure 5.4.2.1-1: Handover to NR, successful

The purpose of this procedure is to, under the control of the network, transfer a connection between the UE and another Radio Access Network (e.g. E-UTRAN) to NR.

The handover to NR procedure applies when SRBs, possibly in combination with DRBs, are established in another RAT. Handover from E-UTRA to NR applies only after integrity has been activated in E-UTRA.

5.4.2.2 Initiation

The RAN using another RAT initiates the handover to NR procedure, in accordance with the specifications applicable for the other RAT, by sending the *RRCReconfiguration* message via the radio access technology from which the inter-RAT handover is performed.

The network applies the procedure as follows:

- to activate ciphering, possibly using NULL algorithm, if not yet activated in the other RAT;
- to re-establish SRBs and one or more DRBs;

5.4.2.3 Reception of the *RRCReconfiguration* by the UE

The UE shall:

- 1> apply the default L1 parameter values as specified in corresponding physical layer specifications except for the parameters for which values are provided in *SIB1*;
- 1> apply the default MAC Cell Group configuration as specified in 9.2.2;
- 1> perform RRC reconfiguration procedure as specified in 5.3.5;

NOTE: If the UE is connected to 5GC of the source E-UTRA cell, the delta configuration for PDCP and SDAP can be used for intra-system inter-RAT handover. For other cases, source RAT configuration is not considered when the UE applies the reconfiguration message of target RAT.

5.4.3 Mobility from NR

5.4.3.1 General

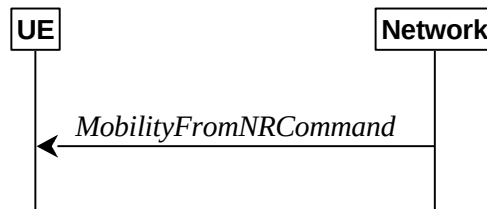 


Figure 5.4.3.1-1: Mobility from NR, successful

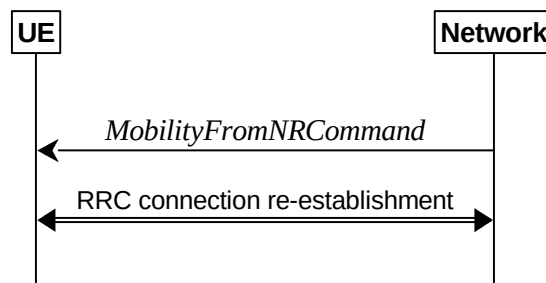 


Figure 5.4.3.1-2: Mobility from NR, failure

The purpose of this procedure is to move a UE in RRC_CONNECTED to a cell using other RAT, e.g. E-UTRA, UTRA-FDD. The mobility from NR procedure covers the following type of mobility:

- handover, i.e. the *MobilityFromNRCommand* message includes radio resources that have been allocated for the UE in the target cell;

5.4.3.2 Initiation

The network initiates the mobility from NR procedure to a UE in RRC_CONNECTED, possibly in response to a *MeasurementReport* or an *MCGFailureInformation* message, by sending a *MobilityFromNRCommand* message. The network applies the procedure as follows:

- the procedure is initiated only when AS security has been activated, and SRB2 with at least one DRB or multicast MRB have been setup and not suspended;
- the procedure is not initiated if any DAPS bearer is configured;

5.4.3.3 Reception of the *MobilityFromNRCommand* by the UE

The UE shall:

- 1> stop timer T310, if running;
- 1> stop timer T312, if running;
- 1> if T316 is running:
 - 2> stop timer T316;
 - 2> if the UE supports RLF-Report for fast MCG recovery procedure as specified in 38.306 [26]:
 - 3> set the *elapsedTimeT316* in the *VarRLF-Report* to the value of the elapsed time of the timer T316;

- 3> set the *pSCellId* in the *VarRLF-Report* to the global cell identity of the PSCell, if available, otherwise to the physical cell identity and carrier frequency of the PSCell;
- 2> else:
 - 3> clear the information included in *VarRLF-Report*, if any;
- 1> if T390 is running:
 - 2> stop timer T390 for all access categories;
 - 2> perform the actions as specified in 5.3.14.4;
- 1> if the *targetRAT-Type* is set to *eutra*:
 - 2> consider inter-RAT mobility as initiated towards E-UTRA;
 - 2> forward the *nas-SecurityParamFromNR* to the upper layers, if included;
- 1> else if the *targetRAT-Type* is set to *utra-fdd*:
 - 2> consider inter-RAT mobility as initiated towards UTRA-FDD;
 - 2> forward the *nas-SecurityParamFromNR* to the upper layers, if included;
- 1> access the target cell indicated in the inter-RAT message in accordance with the specifications of the target RAT.

5.4.3.4 Successful completion of the mobility from NR

Upon successfully completing the handover, at the source side the UE shall:

- 1> if T316 was not running at the time of receiving *MobilityFromNRCommand* and if the UE was configured with *successHO-Config* when connected to the source PCell and the *targetRAT-Type* is set to *eutra*:
 - 2> perform the actions for the successful handover report determination for inter-RAT handover as specified in clause 5.7.10.6.
 - 1> reset MAC;
 - 1> stop all timers that are running except T325, T330 and T400;
 - 1> release *ran-NotificationAreaInfo*, if stored;
 - 1> release the AS security context including the $K_{RRCCenc}$ key, the K_{RRCint} key, the K_{UPint} key and the K_{UPenc} key, if stored;
 - 1> release all radio resources, including release of the RLC entity and the MAC configuration;
 - 1> release the associated PDCP entity and SDAP entity for all established RBs;
- NOTE : PDCP and SDAP configured by the source RAT prior to the handover that are reconfigured and re-used by target RAT when delta signalling (i.e., during inter-RAT intra-system handover when *fullConfig* is not present) is used, are not released as part of this procedure.
- 1> if the UE is configured with any application layer measurement configuration:
 - 2> inform upper layers about the release of all application layer measurement configurations;
 - 2> release all application layer measurement configurations including their fields in UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*;
 - 2> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 2> consider itself not to be configured to send application layer measurement reports;
 - 1> if the *targetRAT-Type* is set to *eutra* and the *nas-SecurityParamFromNR* is included: or

- 1> if the *targetRAT-Type* is set to *utra-fdd*:
- 2> indicate the release of the RRC connection to upper layers together with the release cause 'other'.

5.4.3.5 Mobility from NR failure

The UE shall:

- 1> if the UE does not succeed in establishing the connection to the target radio access technology:
 - 2> if the *targetRAT-Type* in the received *MobilityFromNRCommand* is set to *eutra* and the UE supports Radio Link Failure Report for Inter-RAT MRO EUTRA:
 - 3> store handover failure information in *VarRLF-Report* according to 5.3.10.5;
 - 2> if *voiceFallbackIndication* is included in the *MobilityFromNRCommand* message; or
 - 2> if the mobility from NR procedure is for emergency services fallback as specified in TS 23.502 [43]:
 - 3> attempt to select an E-UTRA cell:
 - 4> if a suitable E-UTRA cell is selected; or
 - 4> if no suitable E-UTRA cell is available and an acceptable E-UTRA cell supporting emergency call is selected when the UE has an ongoing emergency call:
 - 5> perform the actions upon going to RRC_IDLE as specified in 5.3.11, with release cause 'RRC connection failure';
 - 4> else:
 - 5> revert back to the configuration used in the source PCell;
 - 5> initiate the connection re-establishment procedure as specified in clause 5.3.7;

NOTE: It is left to UE implementation to determine whether the mobility from NR procedure is for emergency services fallback as specified in TS 23.502 [43].

- 2> else:
 - 3> revert back to the configuration used in the source PCell;
 - 3> initiate the connection re-establishment procedure as specified in clause 5.3.7;
- 1> else if the UE is unable to comply with any part of the configuration included in the *MobilityFromNRCommand* message; or
- 1> if there is a protocol error in the inter RAT information included in the *MobilityFromNRCommand* message, causing the UE to fail the procedure according to the specifications applicable for the target RAT:
 - 2> if the *targetRAT-Type* in the received *MobilityFromNRCommand* is set to *eutra* and the UE supports Radio Link Failure Report for Inter-RAT MRO EUTRA:
 - 3> store handover failure information in *VarRLF-Report* according to 5.3.10.5;
 - 2> revert back to the configuration used in the source PCell;
 - 2> initiate the connection re-establishment procedure as specified in clause 5.3.7.

5.5 Measurements

5.5.1 Introduction

The network may configure an RRC_CONNECTED UE to perform measurements. The network may configure the UE to report them in accordance with the measurement configuration or perform conditional reconfiguration evaluation in

accordance with the conditional reconfiguration. The measurement configuration is provided by means of dedicated signalling i.e. using the *RRCReconfiguration* or *RRCResume*.

The network may configure the UE to perform the following types of measurements:

- NR measurements;
- Inter-RAT measurements of E-UTRA frequencies;
- Inter-RAT measurements of UTRA-FDD frequencies;
- NR sidelink measurements of L2 U2N Relay UEs.

The network may configure the UE to report the following measurement information based on SS/PBCH block(s):

- Measurement results per SS/PBCH block;
- Measurement results per cell based on SS/PBCH block(s);
- SS/PBCH block(s) indexes.

The network may configure the UE to report the following measurement information based on CSI-RS resources:

- Measurement results per CSI-RS resource;
- Measurement results per cell based on CSI-RS resource(s);
- CSI-RS resource measurement identifiers.

The network may configure the UE to perform the following types of measurements for NR sidelink and V2X sidelink:

- CBR measurements.

The network may configure the UE to report the following CLI measurement information based on SRS resources:

- Measurement results per SRS resource;
- SRS resource(s) indexes.

The network may configure the UE to report the following CLI measurement information based on CLI-RSSI resources:

- Measurement results per CLI-RSSI resource;
- CLI-RSSI resource(s) indexes.

The network may configure the UE to report the following Rx-Tx time difference measurement information based on CSI-RS for tracking or PRS:

- UE Rx-Tx time difference measurement result.

The measurement configuration includes the following parameters:

1. Measurement objects: A list of objects on which the UE shall perform the measurements.

- For intra-frequency and inter-frequency measurements a measurement object indicates the frequency/time location and subcarrier spacing of reference signals to be measured. Associated with this measurement object, the network may configure a list of cell specific offsets, a list of 'exclude-listed' cells and a list of 'allow-listed' cells. Exclude-listed cells are not applicable in event evaluation or measurement reporting. Allow-listed cells are the only ones applicable in event evaluation or measurement reporting.
- The *measObjectId* of the MO which corresponds to each serving cell is indicated by *servingCellMO* within the serving cell configuration.
- For inter-RAT E-UTRA measurements a measurement object is a single E-UTRA carrier frequency. Associated with this E-UTRA carrier frequency, the network can configure a list of cell specific offsets and a list of 'exclude-listed' cells. Exclude-listed cells are not applicable in event evaluation or measurement reporting.

- For inter-RAT UTRA-FDD measurements a measurement object is a set of cells on a single UTRA-FDD carrier frequency.
- For NR sidelink measurements of L2 U2N Relay UEs, a measurement object is a single NR sidelink frequency to be measured.
- For CBR measurement of NR sidelink communication, a measurement object is a set of transmission resource pool(s) on a single carrier frequency for NR sidelink communication.
- For CBR measurement of NR sidelink discovery, a measurement object is a set of discovery dedicated resource pool(s) or transmission resource pool(s) also used for NR sidelink discovery on a single carrier frequency for NR sidelink discovery.
- For CBR measurement of NR sidelink positioning, a measurement object is a set of positioning dedicated resource pool(s) or transmission resource pool(s) also used for NR sidelink positioning on a single carrier frequency for NR sidelink positioning.
- For CLI measurements a measurement object indicates the frequency/time location of SRS resources and/or CLI-RSSI resources, and subcarrier spacing of SRS resources to be measured.

2. Reporting configurations: A list of reporting configurations where there can be one or multiple reporting configurations per measurement object. Each measurement reporting configuration consists of the following:

- Reporting criterion: The criterion that triggers the UE to send a measurement report. This can either be periodical or a single event description.
- RS type: The RS that the UE uses for beam and cell measurement results (SS/PBCH block or CSI-RS).
- Reporting format: The quantities per cell and per beam that the UE includes in the measurement report (e.g. RSRP) and other associated information such as the maximum number of cells and the maximum number beams per cell to report.

In case of conditional reconfiguration, each configuration consists of the following:

- Execution criteria: The criteria the UE uses for conditional reconfiguration execution.
- RS type: The RS that the UE uses for obtaining beam and cell measurement results (SS/PBCH block-based or CSI-RS-based), used for evaluating conditional reconfiguration execution condition.

3. Measurement identities: For measurement reporting, a list of measurement identities where each measurement identity links one measurement object with one reporting configuration. By configuring multiple measurement identities, it is possible to link more than one measurement object to the same reporting configuration, as well as to link more than one reporting configuration to the same measurement object. The measurement identity is also included in the measurement report that triggered the reporting, serving as a reference to the network. For conditional reconfiguration triggering, one measurement identity links to exactly one conditional reconfiguration trigger configuration. And up to 2 measurement identities can be linked to one conditional reconfiguration execution condition.

4. Quantity configurations: The quantity configuration defines the measurement filtering configuration used for all event evaluation and related reporting, and for periodical reporting of that measurement. For NR measurements, the network may configure up to 2 quantity configurations with a reference in the NR measurement object to the configuration that is to be used. In each configuration, different filter coefficients can be configured for different measurement quantities, for different RS types, and for measurements per cell and per beam.

5. Measurement gaps: Periods that the UE may use to perform measurements.

6. Effective measurement window: Periods that the UE may use to perform inter RAT measurements.

A UE in RRC_CONNECTED maintains a measurement object list, a reporting configuration list, and a measurement identities list according to signalling and procedures in this specification. The measurement object list possibly includes NR measurement object(s), CLI measurement object(s), inter-RAT objects, and L2 U2N Relay objects. Similarly, the reporting configuration list includes NR, inter-RAT, and L2 U2N Relay reporting configurations. Any measurement object can be linked to any reporting configuration of the same RAT type. Some reporting configurations may not be linked to a measurement object. Likewise, some measurement objects may not be linked to a reporting configuration.

The measurement procedures distinguish the following types of cells:

1. The NR serving cell(s) – these are the SpCell and one or more SCells.
2. Listed cells – these are cells listed within the measurement object(s).
3. Detected cells – these are cells that are not listed within the measurement object(s) but are detected by the UE on the SSB frequency(ies) and subcarrier spacing(s) indicated by the measurement object(s).

For NR measurement object(s), the UE measures and reports on the serving cell(s)/serving Relay UE (for L2 U2N Remote UE), listed cells and/or detected cells. For inter-RAT measurements object(s) of E-UTRA, the UE measures and reports on listed cells and detected cells and, for RSSI and channel occupancy measurements, the UE measures and reports on the configured resources on the indicated frequency. For inter-RAT measurements object(s) of UTRA-FDD, the UE measures and reports on listed cells. For CLI measurement object(s), the UE measures and reports on configured measurement resources (i.e. SRS resources and/or CLI-RSSI resources). For L2 U2N Relay object(s), the UE measures and reports on the serving NR cell(s), as well as the discovered L2 U2N Relay UEs.

Whenever the procedural specification, other than contained in clause 5.5.2, refers to a field it concerns a field included in the *VarMeasConfig* unless explicitly stated otherwise i.e. only the measurement configuration procedure covers the direct UE action related to the received *measConfig*.

In NR-DC, the UE may receive two independent *measConfig*:

- a *measConfig*, associated with MCG, that is included in the *RRCReconfiguration* message received via SRB1; and
- a *measConfig*, associated with SCG, that is included in the *RRCReconfiguration* message received via SRB3, or, alternatively, included within a *RRCReconfiguration* message embedded in a *RRCReconfiguration* message received via SRB1.

In this case, the UE maintains two independent *VarMeasConfig* and *VarMeasReportList*, one associated with each *measConfig*, and independently performs all the procedures in clause 5.5 for each *measConfig* and the associated *VarMeasConfig* and *VarMeasReportList*, unless explicitly stated otherwise.

The configurations related to CBR measurements are only included in the *measConfig* associated with MCG.

The configurations related to Rx-Tx time difference measurement are only included in the *measConfig* associated with MCG.

5.5.2 Measurement configuration

5.5.2.1 General

The network applies the procedure as follows:

- to ensure that, whenever the UE has a *measConfig* associated with a CG, it includes a *measObject* for the SpCell and for each NR SCell of the CG to be measured;
- to configure at most one measurement identity across all CGs using a reporting configuration with the *reportType* set to *reportCGI*;
- to configure at most one measurement identity per the node hosting PDCP entity using a reporting configuration with the *ul-DelayValueConfig*;
- to configure at most one measurement identity per the node hosting PDCP entity using a reporting configuration with the *ul-ExcessDelayConfig*;
- to ensure that, in the *measConfig* associated with a CG:
 - for all SSB based measurements there is at most one measurement object with the same *ssbFrequency*;
 - an *smtc1* included in any measurement object with the same *ssbFrequency* has the same value and that an *smtc2* included in any measurement object with the same *ssbFrequency* has the same value and that an *smtc3list* included in any measurement object with the same *ssbFrequency* has the same value and that an *smtc4list* included in any measurement object with the same *ssbFrequency* has the same value;

- to ensure that all measurement objects configured in this specification and in TS 36.331 [10] with the same *ssbFrequency* have the same *ssbSubcarrierSpacing*;
- to ensure that, if a measurement object associated with the MCG has the same *ssbFrequency* as a measurement object associated with the SCG:
 - for that *ssbFrequency*, the measurement window according to the *smtc1* configured by the MCG includes the measurement window according to the *smtc1* configured by the SCG, or vice-versa, with an accuracy of the maximum receive timing difference specified in TS 38.133 [14].
 - if both measurement objects are used for RSSI measurements, bits in *measurementSlots* in both objects corresponding to the same slot are set to the same value. Also, the *endSymbol* is the same in both objects.
- to ensure that, if a measurement object has the same *ssbFrequency* as a measurement object configured in TS 36.331 [10]:
 - for that *ssbFrequency*, the measurement window according to the *smtc* configured in TS 36.331 [10] includes the measurement window according to the *smtc1* configured in TS 38.331, or vice-versa, with an accuracy of the maximum receive timing difference specified in TS 38.133 [14].
 - if both measurement objects are used for RSSI measurements, bits in *measurementSlots* in both objects corresponding to the same slot are set to the same value. Also, the *endSymbol* is the same in both objects.
- when the UE is in NE-DC, NR-DC, or NR standalone, to configure at most one measurement identity across all CGs using a reporting configuration with the *reportType* set to *reportSFTD*;

For CSI-RS resources, the network applies the procedure as follows:

- to ensure that all CSI-RS resources configured in each measurement object have the same center frequency, ($startPRB + \text{floor}(nrofPRBs/2)$)
- to ensure that the total number of CSI-RS resources configured in each measurement object does not exceed the maximum number specified in TS 38.214 [19].

The UE shall:

- 1> if the received *measConfig* includes the *measObjectToRemoveList*:
 - 2> perform the measurement object removal procedure as specified in 5.5.2.4;
- 1> if the received *measConfig* includes the *measObjectToAddModList*:
 - 2> perform the measurement object addition/modification procedure as specified in 5.5.2.5;
- 1> if the received *measConfig* includes the *reportConfigToRemoveList*:
 - 2> perform the reporting configuration removal procedure as specified in 5.5.2.6;
- 1> if the received *measConfig* includes the *reportConfigToAddModList*:
 - 2> perform the reporting configuration addition/modification procedure as specified in 5.5.2.7;
- 1> if the received *measConfig* includes the *quantityConfig*:
 - 2> perform the quantity configuration procedure as specified in 5.5.2.8;
- 1> if the received *measConfig* includes the *measIdToRemoveList*:
 - 2> perform the measurement identity removal procedure as specified in 5.5.2.2;
- 1> if the received *measConfig* includes the *measIdToAddModList*:
 - 2> perform the measurement identity addition/modification procedure as specified in 5.5.2.3;
- 1> if the received *measConfig* includes the *measGapConfig*:
 - 2> perform the measurement gap configuration procedure as specified in 5.5.2.9;

- 1> if the received *measConfig* includes the *measGapSharingConfig*:
 - 2> perform the measurement gap sharing configuration procedure as specified in 5.5.2.11;
- 1> if the received *measConfig* includes the *s-MeasureConfig*:
 - 2> if *s-MeasureConfig* is set to *ssb-RSRP*, set parameter *ssb-RSRP* of *s-MeasureConfig* within *VarMeasConfig* to the threshold value of the RSRP indicated by the received value of *s-MeasureConfig* which is derived as specified in 6.3.2;
 - 2> else, set parameter *csi-RSRP* of *s-MeasureConfig* within *VarMeasConfig* to the threshold value of the RSRP indicated by the received value of *s-MeasureConfig* which is derived as specified in 6.3.2.
- 1> if the received *measConfig* includes the *effectiveMeasWindowConfig*:
 - 2> perform the effective measurement window configuration as specified in 5.5.2.12;

5.5.2.2 Measurement identity removal

The UE shall:

- 1> for each *measId* included in the received *measIdToRemoveList* that is part of the current UE configuration in *VarMeasConfig*:
 - 2> remove the entry with the matching *measId* from the *measIdList* within the *VarMeasConfig*;
 - 2> remove the measurement reporting entry for this *measId* from the *VarMeasReportList*, if included;
 - 2> stop the periodical reporting timer or timer T321 or timer T322, whichever one is running, and reset the associated information (e.g. *timeToTrigger*) for this *measId*.
- 2> if the *reportType* is set to *reportOnScellActivation* in the *reportConfig* associated with this *measId*:
 - 3> indicate to lower layer to disable the measurement reporting for fast unknown SCell activation.

NOTE: The UE does not consider the message as erroneous if the *measIdToRemoveList* includes any *measId* value that is not part of the current UE configuration.

5.5.2.3 Measurement identity addition/modification

The network applies the procedure as follows:

- configure a *measId* only if the corresponding measurement object, the corresponding reporting configuration and the corresponding quantity configuration, are configured.

The UE shall:

- 1> for each *measId* included in the received *measIdToAddModList*:
 - 2> if an entry with the matching *measId* exists in the *measIdList* within the *VarMeasConfig*:
 - 3> replace the entry with the value received for this *measId*;
 - 2> else:
 - 3> add a new entry for this *measId* to the *measIdList* within the *VarMeasConfig*;
 - 2> remove the measurement reporting entry for this *measId* from the *VarMeasReportList*, if included;
 - 2> stop the periodical reporting timer or timer T321 or timer T322, whichever one is running, and reset the associated information (e.g. *timeToTrigger*) for this *measId*;

NOTE 1: If the *measId* associated with *reportConfig* for conditional reconfiguration is modified, the conditions are considered to be not fulfilled as specified in 5.3.5.13.4.

- 2> if the *reportType* is set to *reportCGI* in the *reportConfig* associated with this *measId*:

- 3> if the *measObject* associated with this *measId* concerns E-UTRA:
 - 4> if the *useAutonomousGaps* is included in the *reportConfig* associated with this *measId*:
 - 5> start timer T321 with the timer value set to 200 ms for this *measId*;
 - 4> else:
 - 5> start timer T321 with the timer value set to 1 second for this *measId*;
- 3> if the *measObject* associated with this *measId* concerns NR:
 - 4> if the *measObject* associated with this *measId* concerns FR1:
 - 5> if the *useAutonomousGaps* is included in the *reportConfig* associated with this *measId*:
 - 6> if the UE is an (e)RedCap UE with 1 Rx branch
 - 7> start timer T321 with the timer value set to 3 seconds for this *measId*;
 - 6> else
 - 7> start timer T321 with the timer value set to 2 seconds for this *measId*;
 - 5> else:
 - 6> start timer T321 with the timer value set to 2 seconds for this *measId*;
 - 4> if the *measObject* associated with this *measId* concerns FR2:
 - 5> if the *useAutonomousGaps* is included in the *reportConfig* associated with this *measId*:
 - 6> if the UE is a RedCap UE with 1 Rx branch
 - 7> start timer T321 with the timer value set to 6 seconds for this *measId*;
 - 6> else
 - 7> start timer T321 with the timer value set to 5 seconds for this *measId*;
 - 5> else:
 - 6> start timer T321 with the timer value set to 16 seconds for this *measId*.
- 2> if the *reportType* is set to *reportSFTD* in the *reportConfigNR* associated with this *measId* and the *drx-SFTD-NeighMeas* is included:
 - 3> if the *measObject* associated with this *measId* concerns FR1:
 - 4> start timer T322 with the timer value set to 3 seconds for this *measId*;
 - 3> if the *measObject* associated with this *measId* concerns FR2:
 - 4> start timer T322 with the timer value set to 24 seconds for this *measId*.
- 2> if the *reportType* is set to *reportOnScellActivation* in the *reportConfig* associated with this *measId*:
 - 3> indicate to lower layer to enable the measurement reporting for fast unknown SCell activation.

5.5.2.4 Measurement object removal

The UE shall:

- 1> for each *measObjectId* included in the received *measObjectToRemoveList* that is part of *measObjectList* in *VarMeasConfig*:
- 2> remove the entry with the matching *measObjectId* from the *measObjectList* within the *VarMeasConfig*;

- 2> remove all *measId* associated with this *measObjectId* from the *measIdList* within the *VarMeasConfig*, if any;
- 2> if a *measId* is removed from the *measIdList*:
 - 3> remove the measurement reporting entry for this *measId* from the *VarMeasReportList*, if included;
 - 3> stop the periodical reporting timer or timer T321 or timer T322, whichever is running, and reset the associated information (e.g. *timeToTrigger*) for this *measId*.

NOTE: The UE does not consider the message as erroneous if the *measObjectToRemoveList* includes any *measObjectId* value that is not part of the current UE configuration.

5.5.2.5 Measurement object addition/modification

The UE shall:

- 1> for each *measObjectId* included in the received *measObjectToAddModList*:
 - 2> if an entry with the matching *measObjectId* exists in the *measObjectList* within the *VarMeasConfig*, for this entry:
 - 3> reconfigure the entry with the value received for this *measObject*, except for the fields *cellsToAddModList*, *excludedCellsToAddModList*, *allowedCellsToAddModList*, *cellsToRemoveList*, *excludedCellsToRemoveList*, *allowedCellsToRemoveList*, *tx-PoolMeasToRemoveList*, *tx-PoolMeasToAddModList*, *ssb-PositionQCL-CellsToRemoveList*, *ssb-PositionQCL-CellsToAddModList*, *cca-CellsToRemoveList*, and *cca-CellsToAddModList*;
 - 3> if the received *measObject* includes the *cellsToRemoveList*:
 - 4> for each *physCellId* included in the *cellsToRemoveList*:
 - 5> remove the entry with the matching *physCellId* from the *cellsToAddModList*;
 - 3> if the received *measObject* includes the *cellsToAddModList*:
 - 4> for each *physCellId* value included in the *cellsToAddModList*:
 - 5> if an entry with the matching *physCellId* exists in the *cellsToAddModList*:
 - 6> replace the entry with the value received for this *physCellId*;
 - 5> else:
 - 6> add a new entry for the received *physCellId* to the *cellsToAddModList*;
 - 3> if the received *measObject* includes the *excludedCellsToRemoveList*:
 - 4> for each *pci-RangeIndex* included in the *excludedCellsToRemoveList*:
 - 5> remove the entry with the matching *pci-RangeIndex* from the *excludedCellsToAddModList*;

NOTE 1: For each *pci-RangeIndex* included in the *excludedCellsToRemoveList* that concerns overlapping ranges of cells, a cell is removed from the exclude-list of cells only if all PCI ranges containing it are removed.

- 3> if the received *measObject* includes the *excludedCellsToAddModList*:
 - 4> for each *pci-RangeIndex* included in the *excludedCellsToAddModList*:
 - 5> if an entry with the matching *pci-RangeIndex* is included in the *excludedCellsToAddModList*:
 - 6> replace the entry with the value received for this *pci-RangeIndex*;
 - 5> else:
 - 6> add a new entry for the received *pci-RangeIndex* to the *excludedCellsToAddModList*;
- 3> if the received *measObject* includes the *allowedCellsToRemoveList*:

4> for each *pci-RangeIndex* included in the *allowedCellsToRemoveList*:

5> remove the entry with the matching *pci-RangeIndex* from the *allowedCellsToAddModList*;

NOTE2: For each *pci-RangeIndex* included in the *allowedCellsToRemoveList* that concerns overlapping ranges of cells, a cell is removed from the allow-list of cells only if all PCI ranges containing it are removed.

3> if the received *measObject* includes the *allowedCellsToAddModList*:

4> for each *pci-RangeIndex* included in the *allowedCellsToAddModList*:

5> if an entry with the matching *pci-RangeIndex* is included in the *allowedCellsToAddModList*:

6> replace the entry with the value received for this *pci-RangeIndex*;

5> else:

6> add a new entry for the received *pci-RangeIndex* to the *allowedCellsToAddModList*

3> for each *measId* associated with this *measObjectId* in the *measIdList* within the *VarMeasConfig*, if any:

4> if the UE does not support Uplink PDCP delay measurements upon MO update; or

4> if the UE supports Uplink PDCP delay measurements upon MO update and if *ul-DelayValueConfig* or *ul-ExcessDelayConfig* is not configured for the associated *reportConfig*:

5> remove the measurement reporting entry for this *measId* from the *VarMeasReportList*, if included;

5> stop the periodical reporting timer or timer T321 or timer T322, whichever one is running, and reset the associated information (e.g. *timeToTrigger*) for this *measId*;

3> if the received *measObject* includes the *tx-PoolMeasToRemoveList*:

4> for each transmission resource pool indicated in *tx-PoolMeasToRemoveList*:

5> remove the entry with the matching identity of the transmission resource pool from the *tx-PoolMeasToAddModList*;

3> if the received *measObject* includes the *tx-PoolMeasToAddModList*:

4> for each transmission resource pool indicated in *tx-PoolMeasToAddModList*:

5> if an entry with the matching identity of the transmission resource pool exists in the *tx-PoolMeasToAddModList*:

6> replace the entry with the value received for this transmission resource pool;

5> else:

6> add a new entry for the received identity of the transmission resource pool to the *tx-PoolMeasToAddModList*;

3> if the received *measObject* includes the *ssb-PositionQCL-CellsToRemoveList*:

4> for each *physCellId* included in the *ssb-PositionQCL-CellsToRemoveList*:

5> remove the entry with the matching *physCellId* from the *ssb-PositionQCL-CellsToAddModList*;

3> if the received *measObject* includes the *ssb-PositionQCL-CellsToAddModList*:

4> for each *physCellId* included in the *ssb-PositionQCL-CellsToAddModList*:

5> if an entry with the matching *physCellId* exists in the *ssb-PositionQCL-CellsToAddModList*:

6> replace the entry with the value received for this *physCellId*;

5> else:

- 6> add a new entry for the received *physCellId* to the *ssb-PositionQCL-CellsToAddModList*;
- 3> if the received *measObject* includes the *cca-CellsToRemoveList*:
 - 4> for each *physCellId* included in the *cca-CellsToRemoveList*:
 - 5> remove the entry with the matching *physCellId* from the *cca-CellsToAddModList*;
- 3> if the received *measObject* includes the *cca-CellsToAddModList*:
 - 4> for each *physCellId* included in the *cca-CellsToAddModList*:
 - 5> if an entry with the matching *physCellId* exists in the *cca-CellsToAddModList*:
 - 6> replace the entry with the value received for this *physCellId*;
 - 5> else:
 - 6> add a new entry for the received *physCellId* to the *cca-CellsToAddModList*;
- 2> else:
 - 3> add a new entry for the received *measObject* to the *measObjectList* within *VarMeasConfig*.

5.5.2.6 Reporting configuration removal

The UE shall:

- 1> for each *reportConfigId* included in the received *reportConfigToRemoveList* that is part of the current UE configuration in *VarMeasConfig*:
 - 2> remove the entry with the matching *reportConfigId* from the *reportConfigList* within the *VarMeasConfig*;
 - 2> remove all *measId* associated with the *reportConfigId* from the *measIdList* within the *VarMeasConfig*, if any;
 - 2> if a *measId* is removed from the *measIdList*:
 - 3> remove the measurement reporting entry for this *measId* from the *VarMeasReportList*, if included;
 - 3> stop the periodical reporting timer or timer T321 or timer T322, whichever one is running, and reset the associated information (e.g. *timeToTrigger*) for this *measId*.

NOTE: The UE does not consider the message as erroneous if the *reportConfigToRemoveList* includes any *reportConfigId* value that is not part of the current UE configuration.

5.5.2.7 Reporting configuration addition/modification

The UE shall:

- 1> for each *reportConfigId* included in the received *reportConfigToAddModList*:
 - 2> if an entry with the matching *reportConfigId* exists in the *reportConfigList* within the *VarMeasConfig*, for this entry:
 - 3> reconfigure the entry with the value received for this *reportConfig*;
 - 3> for each *measId* associated with this *reportConfigId* included in the *measIdList* within the *VarMeasConfig*, if any:
 - 4> remove the measurement reporting entry for this *measId* from the *VarMeasReportList*, if included;
 - 4> stop the periodical reporting timer or timer T321 or timer T322, whichever one is running, and reset the associated information (e.g. *timeToTrigger*) for this *measId*;
 - 2> else:
 - 3> add a new entry for the received *reportConfig* to the *reportConfigList* within the *VarMeasConfig*.

5.5.2.8 Quantity configuration

The UE shall:

- 1> for each RAT for which the received *quantityConfig* includes parameter(s):
 - 2> set the corresponding parameter(s) in *quantityConfig* within *VarMeasConfig* to the value of the received *quantityConfig* parameter(s);
- 1> for each *measId* included in the *measIdList* within *VarMeasConfig*:
 - 2> remove the measurement reporting entry for this *measId* from the *VarMeasReportList*, if included;
 - 2> stop the periodical reporting timer or timer T321 or timer T322, whichever one is running, and reset the associated information (e.g. *timeToTrigger*) for this *measId*.

5.5.2.9 Measurement gap configuration

The UE shall:

- 1> if *gapFR1* is set to *setup*:
 - 2> if an FR1 measurement gap configuration configured by *gapFR1* is already setup, release the FR1 measurement gap configuration;
 - 2> setup the FR1 measurement gap configuration indicated by the *gapFR1* in accordance with the received *gapOffset*, i.e., the first subframe of each gap occurs at an SFN and subframe meeting the following condition:
$$\text{SFN mod } T = \text{FLOOR}(\text{gapOffset}/10);$$
$$\text{subframe} = \text{gapOffset mod } 10;$$
with $T = \text{MGRP}/10$ as defined in TS 38.133 [14];
 - 2> apply the specified timing advance *mgta* to the gap occurrences calculated above (i.e. the UE starts the measurement *mgta* ms before the gap subframe occurrences);
- 1> else if *gapFR1* is set to *release*:
 - 2> release the FR1 measurement gap configuration configured by *gapFR1*;
- 1> if *gapFR2* is set to *setup*:
 - 2> if an FR2 measurement gap configuration configured by *gapFR2* is already setup, release the FR2 measurement gap configuration;
 - 2> setup the FR2 measurement gap configuration indicated by the *gapFR2* in accordance with the received *gapOffset*, i.e., the first subframe of each gap occurs at an SFN and subframe meeting the following condition:
$$\text{SFN mod } T = \text{FLOOR}(\text{gapOffset}/10);$$
$$\text{subframe} = \text{gapOffset mod } 10;$$
with $T = \text{MGRP}/10$ as defined in TS 38.133 [14];
 - 2> apply the specified timing advance *mgta* to the gap occurrences calculated above (i.e. the UE starts the measurement *mgta* ms before the gap subframe occurrences);
- 1> else if *gapFR2* is set to *release*:
 - 2> release the FR2 measurement gap configuration configured by *gapFR2*;
- 1> if *gapUE* is set to *setup*:

- 2> if a per UE measurement gap configuration configured by *gapUE* is already setup, release the per UE measurement gap configuration;
- 2> setup the per UE measurement gap configuration indicated by the *gapUE* in accordance with the received *gapOffset*, i.e., the first subframe of each gap occurs at an SFN and subframe meeting the following condition:
 - SFN mod $T = \text{FLOOR}(\text{gapOffset}/10)$;
 - subframe = $\text{gapOffset} \bmod 10$;
 - with $T = \text{MGRP}/10$ as defined in TS 38.133 [14];
- 2> apply the specified timing advance *mgta* to the gap occurrences calculated above (i.e. the UE starts the measurement *mgta* ms before the gap subframe occurrences);
- 1> else if *gapUE* is set to *release*:
 - 2> release the per UE measurement gap configuration configured by *gapUE*.
- 1> for each *measGapId* included in the received *gapToReleaseList*:
 - 2> release the measurement gap configuration associated with the *measGapId*;
- 1> for each *measPosPreConfigGapId* included in the received *posMeasGapPreConfigToReleaseList*:
 - 2> release the measurement gap configuration associated with the *measPosPreConfigGapId*;
- 1> for each *GapConfig* received in *gapToAddModList*:
 - 2> setup measurement gap configuration indicated by the *GapConfig* in accordance with the received *gapOffset*, i.e., the first subframe of each gap occurs at an SFN and subframe meeting the following condition:
 - SFN mod $T = \text{FLOOR}(\text{gapOffset}/10)$;
 - subframe = $\text{gapOffset} \bmod 10$;
 - with $T = \text{MGRP}/10$ as defined in TS 38.133 [14];
 - 2> apply the specified timing advance *mgta* to the gap occurrences calculated above (i.e. the UE starts the measurement *mgta* ms before the gap subframe occurrences);
 - 2> apply the measurement gap as per UE measurement gap, FR1 measurement gap, or FR2 measurement gap according to the *gapType* indicated by the *GapConfig*;
 - 2> associate the measurement gap with the *measGapId* indicated by the *GapConfig*;
 - 2> if *gapSharing* in the *GapConfig* is present:
 - 3> setup the gap sharing configuration for the measurement gap in accordance with the received *gapSharing* as defined in TS 38.133 [14];
 - 2> else:
 - 3> release the gap sharing configuration (if configured) for the measurement gap;
- 1> for each *PosGapConfig* received in *PosMeasGapPreConfigToAddModList*:
 - 2> if a measurement gap configuration associated with the *measPosPreConfigGapId* indicated by the *PosGapConfig* is already setup:
 - 3> release the measurement gap configuration;
 - 2> setup measurement gap configuration indicated by the *PosGapConfig* in accordance with the received *gapOffset*, i.e., the first subframe of each gap occurs at an SFN and subframe meeting the following condition:
 - SFN mod $T = \text{FLOOR}(\text{gapOffset}/10)$;

subframe = $\text{gapOffset} \bmod 10$;

with $T = \text{MGRP}/10$ as defined in TS 38.133 [14];

2> apply the specified timing advance mgta to the gap occurrences calculated above (i.e. the UE starts the measurement mgta ms before the gap subframe occurrences);

2> configure the measurement gap as indicated by gapType ;

1> for each FR1, FR2, and per UE measurement gap that is setup:

2> if the measurement gap is configured by GapConfig and preConfigInd-r17 in the corresponding GapConfig is present:

3> determine whether the measurement gap is activated or not according to TS 38.133 [14];

2> else if the measurement gap is configured by PosGapConfig :

3> consider the measurement gap to be deactivated;

2> else:

3> consider the measurement gap to be activated.

NOTE 1: For FR2 gap configuration with synchronous CA, for the UE in NE-DC or NR-DC, the SFN and subframe of the serving cell indicated by the $\text{refServCellIndicator}$ is used in the gap calculation. Otherwise, the SFN and subframe of a serving cell on FR2 frequency is used in the gap calculation

NOTE 2: For FR1 gap or per UE gap configuration, for the UE in NE-DC or NR-DC, the SFN and subframe of the serving cell indicated by the $\text{refServCellIndicator}$ is used in the gap calculation. Otherwise, the SFN and subframe of the PCell is used in the gap calculation.

NOTE 3: For FR2 gap configuration with asynchronous CA, for the UE in NE-DC or NR-DC, the SFN and subframe of the serving cell indicated by the $\text{refServCellIndicator}$ and $\text{refFR2ServCellAsyncCA}$ is used in the gap calculation. Otherwise, the SFN and subframe of a serving cell on FR2 frequency indicated by the $\text{refFR2ServCellAsyncCA}$ is used in the gap calculation

5.5.2.10 Reference signal measurement timing configuration

The UE shall setup the first SS/PBCH block measurement timing configuration (SMTC) in accordance with the received $\text{periodicityAndOffset}$ parameter (providing Periodicity and Offset value for the following condition) in the SSB-MTC configuration. The first subframe of each SMTC occasion occurs at an SFN and subframe of the NR SpCell meeting the following condition:

$\text{SFN} \bmod T = (\text{FLOOR}(\text{Offset}/10))$;

if the Periodicity is larger than sf5 :

subframe = $\text{Offset} \bmod 10$;

else:

subframe = Offset or $(\text{Offset} + 5)$;

with $T = \text{CEIL}(\text{Periodicity}/10)$.

If smtc2 is present, for cells indicated in the pci-List parameter in smtc2 in the same MeasObjectNR , the UE shall setup an additional SS/PBCH block measurement timing configuration (SMTC) in accordance with the received periodicity parameter in the smtc2 configuration and use the Offset (derived from parameter $\text{periodicityAndOffset}$) and duration parameter from the smtc1 configuration. The first subframe of each SMTC occasion occurs at an SFN and subframe of the NR SpCell meeting the above condition.

If smtc2-LP is present, for cells indicated in the pci-List parameter in smtc2-LP in the same frequency (for intra frequency cell reselection) or different frequency (for inter frequency cell reselection), the UE shall setup an additional SS/PBCH block measurement timing configuration (SMTC) in accordance with the received periodicity parameter in the smtc2-LP configuration and use the Offset (derived from parameter $\text{periodicityAndOffset}$) and duration parameter

from the *smtc* configuration for that frequency. The first subframe of each SMTC occasion occurs at an SFN and subframe of the NR SpCell or serving cell (for cell reselection) meeting the above condition.

If *smtc3list* is present, for cells indicated in the *pci-List* parameter in each *SSB-MTC3* element of the list in the same *MeasObjectNR*, the IAB-MT shall setup an additional SS block measurement timing configuration in accordance with the received *periodicityAndOffset* parameter (using same condition as *smtc1* to identify the SFN and the subframe for SMTC occasion) in each SSB-MTC3 configuration and use the duration and *ssb-ToMeasure* parameters from each SSB-MTC3 configuration.

If *smtc4list* is present, for cells indicated in the *pci-List* parameter in each *SSB-MTC4* element of the list in the same *MeasObjectNR*, the UE shall setup an additional SS/PBCH block measurement timing configuration (SMTC) in accordance with the received *offset* parameter in each *SSB-MTC4* configuration and use the *duration* parameter and *periodicity* (derived from parameter *periodicityAndOffset*) from the *smtc1* configuration. The first subframe of each SMTC occasion occurs at an SFN and subframe of the NR serving cell meeting the above condition.

On the indicated *ssbFrequency*, the UE shall not consider SS/PBCH block transmission in subframes outside the SMTC occasion for RRM measurements based on SS/PBCH blocks and for RRM measurements based on CSI-RS except for SFTD measurement (see TS 38.133 [14], clause 9.3.8).

5.5.2.10a RSSI measurement timing configuration

The UE shall setup the RSSI measurement timing configuration (RMTC) in accordance with the received *rmtc-Periodicity* and, if configured, with *rmtc-SubframeOffset* i.e. the first symbol of each RMTC occasion occurs at first symbol of an SFN and subframe of the NR SpCell meeting the following condition:

SFN mod T = FLOOR(*rmtc-SubframeOffset*/10);

subframe = *rmtc-SubframeOffset* mod 10;

with T = *rmtc-Periodicity*/10;

On the frequency configured by *rmtc-Frequency*, the UE shall not consider RSSI measurements outside the configured RMTC occasion which lasts for *measDurationSymbols* for RSSI and channel occupancy measurements.

The UE derives the RSSI measurement duration from a combination of *measDurationSymbols* and *ref-SCS-CP*. At least for RSSI measurement confined within the active DL BWP, the UE performs RSSI measurement using the numerology of the active DL BWP during the derived measurement duration. Otherwise, the numerology used by the UE for measurements is up to UE implementation. If configured, the UE performs RSSI measurements on a bandwidth in accordance with the received *rmtc-Bandwidth*. If configured, the UE performs RSSI measurements according to the TCI state configured by *tcid-StateId* in the reference BWP configured by *ref-BWPId* of the reference serving cell configured by *ref-ServCellId* (see TS 38.133 [14], clause 9.2A.7 and clause 9.3A.8). If the UE has no serving cell in FR2-2 and configured with inter-frequency RSSI measurement in FR2-2, it is up to the UE implementation how to determine the spatial domain filter for the inter-frequency RSSI measurement in FR2-2.

5.5.2.11 Measurement gap sharing configuration

The UE shall:

- 1> if *gapSharingFR1* is set to *setup*:
 - 2> if an FR1 measurement gap sharing configuration configured by *gapSharingFR1* is already setup:
 - 3> release the FR1 measurement gap sharing configuration configured by *gapSharingFR1*;
 - 2> setup the FR1 measurement gap sharing configuration indicated by the *measGapSharingConfig* in accordance with the received *gapSharingFR1* as defined in TS 38.133 [14];
- 1> else if *gapSharingFR1* is set to *release*:
 - 2> release the FR1 measurement gap sharing configuration configured by *gapSharingFR1*;
- 1> if *gapSharingFR2* is set to *setup*:
 - 2> if an FR2 measurement gap sharing configuration configured by *gapSharingFR2* is already setup:

- 3> release the FR2 measurement gap sharing configuration configured by *gapSharingFR2*;
- 2> setup the FR2 measurement gap sharing configuration indicated by the *measGapSharingConfig* in accordance with the received *gapSharingFR2* as defined in TS 38.133 [14];
- 1> else if *gapSharingFR2* is set to *release*:
 - 2> release the FR2 measurement gap sharing configuration configured by *gapSharingFR2*.
- 1> if *gapSharingUE* is set to *setup*:
 - 2> if a per UE measurement gap sharing configuration configured by *gapSharingUE* is already setup:
 - 3> release the per UE measurement gap sharing configuration configured by *gapSharingUE*;
 - 2> setup the per UE measurement gap sharing configuration indicated by the *measGapSharingConfig* in accordance with the received *gapSharingUE* as defined in TS 38.133 [14];
- 1> else if *gapSharingUE* is set to *release*:
 - 2> release the per UE measurement gap sharing configuration configured by *gapSharingUE*.

5.5.2.12 Effective measurement window configuration

The UE shall:

- 1> if *effectiveMeasWindowConfig* is set to *setup*:
 - 2> if an effective measurement window configuration is already setup:
 - 3> release the effective measurement window configuration;
 - 2> setup an effective measurement window configuration indicated by the *effectiveMeasWindowConfig* in accordance with the received *windowOffsetPeriodicity* (providing *periodicity* and *offset* for the following condition), i.e., the first subframe of each window occurs at an SFN and subframe meeting the following condition:

$$\text{SFN mod } T = \text{FLOOR}(\text{offset}/10);$$

$$\text{subframe} = \text{offset mod } 10;$$
 with $T = \text{periodicity}/10$;
- 1> else if *effectiveMeasWindowConfig* is set to *release*:
 - 2> release the effective measurement window configuration;

NOTE: The SFN and subframe of the PCell is used in the effective measurement window calculation.

5.5.3 Performing measurements

5.5.3.1 General

An RRC_CONNECTED UE shall derive cell measurement results by measuring one or multiple beams associated per cell as configured by the network, as described in 5.5.3.3. For all cell measurement results, except for RSSI, and CLI measurement results in RRC_CONNECTED, the UE applies the layer 3 filtering as specified in 5.5.3.2, before using the measured results for evaluation of reporting criteria, measurement reporting or the criteria to trigger conditional reconfiguration execution. For cell measurements, the network can configure RSRP, RSRQ, SINR, RSCP or EcN0 as trigger quantity. For CLI measurements, the network can configure SRS-RSRP or CLI-RSSI as trigger quantity. For cell and beam measurements, reporting quantities can be any combination of quantities (i.e. only RSRP; only RSRQ; only SINR; RSRP and RSRQ; RSRP and SINR; RSRQ and SINR; RSRP, RSRQ and SINR; only RSCP; only EcN0; RSCP and EcN0), irrespective of the trigger quantity, and for CLI measurements, reporting quantities can be either SRS-RSRP or CLI-RSSI. For conditional reconfiguration execution, the network can configure up to 2 quantities, both using same RS type. The UE does not apply the layer 3 filtering as specified in 5.5.3.2 to derive the CBR measurements. The UE

does not apply the layer 3 filtering as specified in 5.5.3.2 to derive the Rx-Tx time difference measurements. The UE does not apply the layer 3 filtering as specified in 5.5.3.2 to derive the altitude measurements.

The network may also configure the UE to report measurement information per beam (which can either be measurement results per beam with respective beam identifier(s) or only beam identifier(s)), derived as described in 5.5.3.3a. If beam measurement information is configured to be included in measurement reports, the UE applies the layer 3 beam filtering as specified in 5.5.3.2. On the other hand, the exact L1 filtering of beam measurements used to derive cell measurement results is implementation dependent.

The UE shall:

- 1> whenever the UE has a *measConfig*, perform RSRP and RSRQ measurements for each serving cell for which *servingCellMO* is configured as follows:
 - 2> if the *reportConfig* associated with at least one *measId* included in the *measIdList* within *VarMeasConfig* contains an *rsType* set to *ssb* and *ssb-ConfigMobility* is configured in the *measObject* indicated by the *servingCellMO*, and *absoluteFrequencySSB* is configured in *ServingCellConfigCommon*:
 - 3> if the *reportConfig* contains a *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:
 - 4> derive layer 3 filtered RSRP and RSRQ per beam for the serving cell based on SS/PBCH block, as described in 5.5.3.3a;
 - 3> derive serving cell measurement results based on SS/PBCH block, as described in 5.5.3.3;
 - 2> if the *reportConfig* associated with at least one *measId* included in the *measIdList* within *VarMeasConfig* contains an *rsType* set to *csi-rs* and *CSI-RS-ResourceConfigMobility* is configured in the *measObject* indicated by the *servingCellMO*:
 - 3> if the *reportConfig* contains a *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:
 - 4> derive layer 3 filtered RSRP and RSRQ per beam for the serving cell based on CSI-RS, as described in 5.5.3.3a;
 - 3> derive serving cell measurement results based on CSI-RS, as described in 5.5.3.3;
- 1> for each serving cell for which *servingCellMO* is configured, if the *reportConfig* associated with at least one *measId* included in the *measIdList* within *VarMeasConfig* contains SINR as trigger quantity and/or reporting quantity:
 - 2> if the *reportConfig* contains *rsType* set to *ssb* and *ssb-ConfigMobility* is configured in the *servingCellMO*, and *absoluteFrequencySSB* is configured in *ServingCellConfigCommon*:
 - 3> if the *reportConfig* contains a *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:
 - 4> derive layer 3 filtered SINR per beam for the serving cell based on SS/PBCH block, as described in 5.5.3.3a;
 - 3> derive serving cell SINR based on SS/PBCH block, as described in 5.5.3.3;
 - 2> if the *reportConfig* contains *rsType* set to *csi-rs* and *CSI-RS-ResourceConfigMobility* is configured in the *servingCellMO*:
 - 3> if the *reportConfig* contains a *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:
 - 4> derive layer 3 filtered SINR per beam for the serving cell based on CSI-RS, as described in 5.5.3.3a;
 - 3> derive serving cell SINR based on CSI-RS, as described in 5.5.3.3;
- 1> for each *measId* included in the *measIdList* within *VarMeasConfig*:
 - 2> if the *reportType* for the associated *reportConfig* is set to *reportCGI* and timer T321 is running:
 - 3> if *useAutonomousGaps* is configured for the associated *reportConfig*:
 - 4> perform the corresponding measurements on the frequency and RAT indicated in the associated *measObject* using autonomous gaps as necessary;

- 3> else:
 - 4> perform the corresponding measurements on the frequency and RAT indicated in the associated *measObject* using available idle periods;
- 3> if the cell indicated by *reportCGI* field for the associated *measObject* is an NR cell and that indicated cell is broadcasting *SIB1* (see TS 38.213 [13], clause 13):
 - 4> try to acquire *SIB1* in the concerned cell;
- 3> if the cell indicated by *reportCGI* field is an E-UTRA cell:
 - 4> try to acquire *SystemInformationBlockType1* in the concerned cell;
- 2> if the *ul-DelayValueConfig* is configured for the associated *reportConfig*:
 - 3> ignore the *measObject*;
 - 3> for each of the configured DRBs, configure the PDCP layer to perform corresponding average UL PDCP packet delay measurement per DRB;
- 2> if the *ul-ExcessDelayConfig* is configured for the associated *reportConfig*:
 - 3> ignore the *measObject*;
 - 3> for each of the configured DRBs, configure the PDCP layer to perform corresponding UL PDCP Excess Packet Delay delay measurement according to the configured threshold per DRB;
- 2> if the *reportType* for the associated *reportConfig* is *periodical*; or
- 2> if the *reportType* for the associated *reportConfig* is *eventTriggered*, and the *eventId* is not set to *eventD1* or *eventD2*; or
- 2> if the *reportType* for the associated *reportConfig* is *condTriggerConfig*, the *measId* is within the MCG *VarMeasConfig* and is indicated in the *condExecutionCond* or in the *condExecutionCondPSCell* associated to a *condReconfigId* in the MCG *VarConditionalReconfig* (for CHO, CPA, MN-initiated inter-SN CPC, or subsequent CPAC in NR-DC), and the *condEventId* is not set to *condEventD1*, *condEventD2* or *condEventT1*; or
- 2> if the *reportType* for the associated *reportConfig* is *condTriggerConfig*, the *measId* is within the SCG *VarMeasConfig* and is indicated in the *condExecutionCond* associated to a *condReconfigId* in the SCG *VarConditionalReconfig* (for intra-SN CPC or subsequent CPAC); or
- 2> if the *reportType* for the associated *reportConfig* is *condTriggerConfig*, the *measId* is within the SCG *VarMeasConfig* and is indicated in the *condExecutionCondSCG* associated to a *condReconfigId* in the MCG *VarConditionalReconfig* (for SN-initiated inter-SN CPC or subsequent CPAC in NR-DC); or
- 2> if the *reportType* for the associated *reportConfig* is *condTriggerConfig*, the *measId* is within the SCG *VarMeasConfig* and is indicated in the *triggerConditionSN* associated to a *condReconfigurationId* in *VarConditionalReconfiguration* as specified in TS 36.331 [10] (for SN-initiated inter-SN CPC in EN-DC):
 - 3> if a measurement gap configuration is setup, or
 - 3> if the UE does not require measurement gaps to perform the concerned measurements:
 - 4> if *s-MeasureConfig* is not configured, or
 - 4> if *s-MeasureConfig* is set to *ssb-RSRP* and the NR SpCell RSRP based on SS/PBCH block, after layer 3 filtering, is lower than *ssb-RSRP*, or
 - 4> if *s-MeasureConfig* is set to *csi-RSRP* and the NR SpCell RSRP based on CSI-RS, after layer 3 filtering, is lower than *csi-RSRP*:
 - 5> if the *measObject* is associated to NR and the *rsType* is set to *csi-rs*:
 - 6> if *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport* for the associated *reportConfig* are configured:

- 7> derive layer 3 filtered beam measurements only based on CSI-RS for each measurement quantity indicated in *reportQuantityRS-Indexes*, as described in 5.5.3.3a;
 - 6> derive cell measurement results based on CSI-RS for the trigger quantity and each measurement quantity indicated in *reportQuantityCell* using parameters from the associated *measObject*, as described in 5.5.3.3;
 - 5> if the *measObject* is associated to NR and the *rsType* is set to *ssb*:
 - 6> if *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport* for the associated *reportConfig* are configured:
 - 7> derive layer 3 beam measurements only based on SS/PBCH block for each measurement quantity indicated in *reportQuantityRS-Indexes*, as described in 5.5.3.3a;
 - 6> derive cell measurement results based on SS/PBCH block for the trigger quantity and each measurement quantity indicated in *reportQuantityCell* using parameters from the associated *measObject*, as described in 5.5.3.3;
 - 5> if the *measObject* is associated to E-UTRA:
 - 6> perform the corresponding measurements associated to neighbouring cells on the frequencies indicated in the concerned *measObject*, as described in 5.5.3.2;
 - 5> if the *measObject* is associated to UTRA-FDD:
 - 6> perform the corresponding measurements associated to neighbouring cells on the frequencies indicated in the concerned *measObject*, as described in 5.5.3.2;
 - 5> if the *measObject* is associated to L2 U2N Relay UE:
 - 6> perform the corresponding measurements associated to candidate Relay UEs on the frequencies indicated in the concerned *measObject*, as described in 5.5.3.4;
 - 4> if the *measRSSI-ReportConfig* is configured in the associated *reportConfig*:
 - 5> perform the RSSI and channel occupancy measurements on the frequency configured by *rmtc-Frequency* in the associated *measObject*;
- NOTE 0: The network avoids configuring UEs supporting only CHO and/or Rel-16 CPC with measurements not referred to by any execution condition.
- 2> if the *reportType* for the associated *reportConfig* is set to *reportSFTD* and the *numberOfReportsSent* as defined within the *VarMeasReportList* for this *measId* is less than one:
 - 3> if the *reportSFTD-Meas* is set to *true*:
 - 4> if the *measObject* is associated to E-UTRA:
 - 5> perform SFTD measurements between the PCell and the E-UTRA PSCell;
 - 5> if the *reportRSRP* is set to *true*;
 - 6> perform RSRP measurements for the E-UTRA PSCell;
 - 4> else if the *measObject* is associated to NR:
 - 5> perform SFTD measurements between the PCell and the NR PSCell;
 - 5> if the *reportRSRP* is set to *true*;
 - 6> perform RSRP measurements for the NR PSCell based on SSB;
 - 3> else if the *reportSFTD-NeighMeas* is included:
 - 4> if the *measObject* is associated to NR:

- 5> if the *drx-SFTD-NeighMeas* is included:
 - 6> perform SFTD measurements between the PCell and the NR neighbouring cell(s) detected based on parameters in the associated *measObject* using available idle periods;
- 5> else:
 - 6> perform SFTD measurements between the PCell and the NR neighbouring cell(s) detected based on parameters in the associated *measObject*;
- 5> if the *reportRSRP* is set to *true*:
 - 6> perform RSRP measurements based on SSB for the NR neighbouring cell(s) detected based on parameters in the associated *measObject*;
- 2> if the *reportType* for the associated *reportConfig* is *cli-Periodical* or *cli-EventTriggered*:
 - 3> perform the corresponding measurements associated to CLI measurement resources indicated in the concerned *measObjectCLI*;
- 2> perform the evaluation of reporting criteria as specified in 5.5.4, except if *reportConfig* is *condTriggerConfig*.

NOTE 1: The evaluation of conditional reconfiguration execution criteria is specified in 5.3.5.13.

The UE acting as a L2 U2N Remote UE whenever configured with *measConfig* shall:

- 1> perform the corresponding measurements associated to the serving L2 U2N Relay UE, as described in 5.5.3.4;

The UE capable of Rx-Tx time difference measurement when configured with *measObjectRxTxDiff* shall:

- 1> perform the corresponding Rx-Tx time difference measurements associated with downlink reference signals indicated in the concerned *measObjectRxTxDiff*.

The UE capable of CBR measurement when configured to transmit NR sidelink communication/discovery/positioning shall:

- 1> If the frequency used for NR sidelink communication/discovery/positioning is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12* or included in *sl-PosConfigCommonNR* within *SIB23*:
 - 2> if the UE is in *RRC_IDLE* or in *RRC_INACTIVE*:
 - 3> if configured with NR sidelink communication and the cell chosen for NR sidelink communication provides *SIB12* which includes *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* for the concerned frequency; or
 - 3> if configured with NR sidelink discovery and the cell chosen for NR sidelink discovery provides *SIB12* which includes *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* but does not include *sl-DiscTxPoolSelected* for the concerned frequency:
 - 4> perform CBR measurement on pool(s) in *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* for the concerned frequency in *SIB12*;
 - 3> if configured with NR sidelink discovery and the cell chosen for NR sidelink discovery provides *SIB12* which includes *sl-DiscTxPoolSelected* for the concerned frequency:
 - 4> perform CBR measurement on pools in *sl-DiscTxPoolSelected* and *sl-TxPoolExceptional* for the concerned frequency in *SIB12*;
 - 3> if configured with NR sidelink positioning and the cell chosen for NR sidelink positioning provides *SIB23* which includes *sl-PRS-TxPoolSelectedNormal* or *sl-PRS-TxPoolExceptional* for the concerned frequency, or provides *SIB12* which includes *sl-TxPoolSelectedNormal*, *sl-TxPoolExceptional*:
 - 4> perform CBR measurement on pool(s) in *sl-PRS-TxPoolSelectedNormal*, *sl-PRS-TxPoolExceptional*, *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* for the concerned frequency;

- 2> if the UE is in RRC_CONNECTED:
 - 3> if *tx-PoolMeasToAddModList* is included in *VarMeasConfig*:
 - 4> perform CBR measurements on each transmission resource pool indicated in the *tx-PoolMeasToAddModList*;
 - 3> if *sl-DiscTxPoolSelected*, *sl-TxPoolSelectedNormal*, *sl-TxPoolScheduling*, *sl-TxPoolExceptional*, *sl-PRS-TxPoolSelectedNormal*, *sl-PRS-TxPoolScheduling* or *sl-PRS-TxPoolExceptional* is included in *sl-ConfigDedicatedNR* for the concerned frequency within *RRCReconfiguration*:
 - 4> perform CBR measurement on pool(s) in *sl-DiscTxPoolSelected*, *sl-TxPoolSelectedNormal*, *sl-TxPoolScheduling*, *sl-TxPoolExceptional*, *sl-PRS-TxPoolSelectedNormal*, *sl-PRS-TxPoolScheduling* and *sl-PRS-TxPoolExceptional* if included in *sl-ConfigDedicatedNR* for the concerned frequency within *RRCReconfiguration*;
 - 3> else:
 - 4> if configured with NR sidelink communication and the cell chosen for NR sidelink communication provides *SIB12* which includes *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* for the concerned frequency; or
 - 4> if configured with NR sidelink discovery and the cell chosen for NR sidelink discovery provides *SIB12* which includes *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* but does not provide *sl-DiscTxPoolSelected* for the concerned frequency:
 - 5> perform CBR measurement on pool(s) in *sl-TxPoolSelectedNormal* or *sl-TxPoolExceptional* for the concerned frequency in *SIB12*;
 - 4> if configured with NR sidelink discovery and the cell chosen for NR sidelink discovery provides *SIB12* which includes *sl-DiscTxPoolSelected* for the concerned frequency:
 - 5> perform CBR measurement on pools in *sl-DiscTxPoolSelected* and *sl-TxPoolExceptional* for the concerned frequency in *SIB12*;
 - 4> if configured with NR sidelink positioning and the cell chosen for NR sidelink positioning provides *SIB23* which includes *sl-PRS-TxPoolSelectedNormal* or *sl-PRS-TxPoolExceptional*, or provides *SIB12* which includes *sl-TxPoolSelectedNormal*, *sl-TxPoolExceptional* for the concerned frequency:
 - 5> perform CBR measurement on pool(s) in *sl-TxPoolSelectedNormal*, *sl-TxPoolExceptional*, *sl-PRS-TxPoolSelectedNormal* or *sl-PRS-TxPoolExceptional* for the concerned frequency;
 - 1> else:
 - 2> if configured with NR sidelink communication and *sl-TxPoolSelectedNormal* is included in *SidelinkPreconfigNR* for the concerned frequency; or
 - 2> if configured with NR sidelink discovery and *sl-TxPoolSelectedNormal* is included in *SidelinkPreconfigNR* but *sl-DiscTxPoolSelected* is not included in *SidelinkPreconfigNR* for the concerned frequency:
 - 3> perform CBR measurement on pool(s) in *sl-TxPoolSelectedNormal* in *SidelinkPreconfigNR* for the concerned frequency.
 - 2> if configured with NR sidelink discovery and *sl-DiscTxPoolSelected* is included in *SidelinkPreconfigNR* for the concerned frequency:
 - 3> perform CBR measurement on pools in *sl-DiscTxPoolSelected* if included in *SidelinkPreconfigNR*.
 - 2> if configured with NR sidelink positioning and *sl-TxPoolSelectedNormal* or *sl-PRS-TxPoolSelectedNormal* is included in *SL-PreconfigurationNR* for the concerned frequency:
 - 3> perform CBR measurement on pool(s) in *sl-TxPoolSelectedNormal* or *sl-PRS-TxPoolSelectedNormal* in *SidelinkPreconfigNR* for the concerned frequency.

NOTE 2: In case the configurations for NR sidelink communication and CBR measurement are acquired via the E-UTRA, configurations for NR sidelink communication in *SIB12*, *sl-ConfigDedicatedNR* within *RRCReconfiguration* used in this clause are provided by the configurations in *SystemInformationBlockType28*, *sl-ConfigDedicatedForNR* within *RRCConnectionReconfiguration* as specified in TS 36.331[10], respectively.

NOTE 3: If a UE that is configured by upper layers to transmit V2X sidelink communication is configured by NR with transmission resource pool(s) and the measurement objects concerning V2X sidelink communication (i.e. by *sl-ConfigDedicatedEUTRA-Info*), it shall perform CBR measurement as specified in clause 5.5.3 of TS 36.331 [10], based on the transmission resource pool(s) and the measurement object(s) concerning V2X sidelink communication configured by NR.

NOTE 4: For V2X sidelink communication, each of the CBR measurement results is associated with a resource pool, as indicated by the *poolReportId* (see TS 36.331 [10]), that refers to a pool as included in *sl-ConfigDedicatedEUTRA-Info* or *SIB13*.

5.5.3.2 Layer 3 filtering

The UE shall:

1> for each cell measurement quantity, each beam measurement quantity, each sidelink measurement quantity as needed in clause 5.8.10, for each CLI measurement quantity that the UE performs measurements according to 5.5.3.1, for each L2 U2N Relay UE measurement quantity according to 5.5.3.4, for evaluating the selected or detected NR sidelink U2N Relay UEs according to 5.8.15.3, for evaluating the SyncRef UE according to 5.8.5 and 5.8.6, for evaluating the NR sidelink U2U Relay/Remote UE threshold conditions according to 5.8.16.2 and 5.8.17.2, for evaluating the conditions for selection and reselection of NR sidelink U2U Relay UE according to 5.8.17.3, and for evaluating the detected NR sidelink U2U Relay UEs according to 5.8.17.4:

2> filter the measured result, before using for evaluation of reporting criteria, for measurement reporting, for U2N/U2U Relay (re)selection evaluation or for evaluating the SyncRef UE, by the following formula:

$$F_n = (1 - a) * F_{n-1} + a * M_n$$

where

M_n is the latest received measurement result from the physical layer;

F_n is the updated filtered measurement result, that is used for evaluation of reporting criteria, for measurement reporting, for U2N/U2U Relay (re)selection evaluation or for evaluating the SyncRef UE;

F_{n-1} is the old filtered measurement result, where F_0 is set to M_1 when the first measurement result from the physical layer is received; and for *MeasObjectNR*, $a = 1/2^{(k_i/4)}$, where k_i is the *filterCoefficient* for the corresponding measurement quantity of the i :th *QuantityConfigNR* in *quantityConfigNR-List*, and i is indicated by *quantityConfigIndex* in *MeasObjectNR*; for other measurements, $a = 1/2^{(k/4)}$, where k is the *filterCoefficient* for the corresponding measurement quantity received by the *quantityConfig*; for UTRA-FDD, $a = 1/2^{(k/4)}$, where k is the *filterCoefficient* for the corresponding measurement quantity received by *quantityConfigUTRA-FDD* in the *QuantityConfig*;

2> adapt the filter such that the time characteristics of the filter are preserved at different input rates, observing that the *filterCoefficient* k assumes a sample rate equal to X ms; The value of X is equivalent to one intra-frequency L1 measurement period as defined in TS 38.133 [14] assuming non-DRX operation, and depends on frequency range.

NOTE 1: If k is set to 0, no layer 3 filtering is applicable.

NOTE 2: The filtering is performed in the same domain as used for evaluation of reporting criteria, for measurement reporting, for U2N/U2U Relay (re)selection evaluation or for evaluating the SyncRef UE, i.e., logarithmic filtering for logarithmic measurements.

NOTE 3: The filter input rate is implementation dependent, to fulfil the performance requirements set in TS 38.133 [14]. For further details about the physical layer measurements, see TS 38.133 [14].

NOTE 4: For CLI-RSSI measurement, it is up to UE implementation whether to reset filtering upon BWP switch.

NOTE 5: For SSB measurements when multiple altitude range-based *ssb-ToMeasure* are configured, it is up to UE implementation whether to reset filtering upon entering a different altitude range.

NOTE 6: Upon satellite switch with resynchronization, it is up to UE implementation to reset filtering for the serving cell.

5.5.3.3 Derivation of cell measurement results

The network may configure the UE in RRC_CONNECTED to derive RSRP, RSRQ and SINR measurement results per cell associated to NR measurement objects based on parameters configured in the *measObject* (e.g. maximum number of beams to be averaged and beam consolidation thresholds) and in the *reportConfig* (*rsType* to be measured, SS/PBCH block or CSI-RS).

The network may configure the UE in RRC_IDLE or in RRC_INACTIVE to derive RSRP and RSRQ measurement results per cell associated to NR carriers based on parameters configured in *measIdleCarrierListNR* within *VarMeasIdleConfig* for measurements performed according to 5.7.8.2a.

The UE shall:

- 1> for each cell measurement quantity to be derived based on SS/PBCH block:
 - 2> if *nrofSS-BlocksToAverage* is not configured in the associated *measObject* in RRC_CONNECTED or in the associated entry in *measIdleCarrierListNR* within *VarMeasIdleConfig* in RRC_IDLE/RRC_INACTIVE; or
 - 2> if *absThreshSS-BlocksConsolidation* is not configured in the associated *measObject* in RRC_CONNECTED or in the associated entry in *measIdleCarrierListNR* within *VarMeasIdleConfig* in RRC_IDLE/RRC_INACTIVE; or
 - 2> if the highest beam measurement quantity value is below or equal to *absThreshSS-BlocksConsolidation*:
 - 3> derive each cell measurement quantity based on SS/PBCH block as the highest beam measurement quantity value, where each beam measurement quantity is described in TS 38.215 [9];
 - 2> else:
 - 3> derive each cell measurement quantity based on SS/PBCH block as the linear power scale average of the highest beam measurement quantity values above *absThreshSS-BlocksConsolidation* where the total number of averaged beams shall not exceed *nrofSS-BlocksToAverage*, and where each beam measurement quantity is described in TS 38.215 [9];
 - 2> if in RRC_CONNECTED, apply layer 3 cell filtering as described in 5.5.3.2;
- 1> for each cell measurement quantity to be derived based on CSI-RS:
 - 2> consider a CSI-RS resource to be applicable for deriving cell measurements when the concerned CSI-RS resource is included in the *csi-rs-CellMobility* including the *physCellId* of the cell in the *CSI-RS-ResourceConfigMobility* in the associated *measObject*;
 - 2> if *nrofCSI-RS-ResourcesToAverage* in the associated *measObject* is not configured; or
 - 2> if *absThreshCSI-RS-Consolidation* in the associated *measObject* is not configured; or
 - 2> if the highest beam measurement quantity value is below or equal to *absThreshCSI-RS-Consolidation*:
 - 3> derive each cell measurement quantity based on applicable CSI-RS resources for the cell as the highest beam measurement quantity value, where each beam measurement quantity is described in TS 38.215 [9];
 - 2> else:
 - 3> derive each cell measurement quantity based on CSI-RS as the linear power scale average of the highest beam measurement quantity values above *absThreshCSI-RS-Consolidation* where the total number of averaged beams shall not exceed *nrofCSI-RS-ResourcesToAverage*;
 - 2> apply layer 3 cell filtering as described in 5.5.3.2.

5.5.3.3a Derivation of layer 3 beam filtered measurement

The UE shall:

- 1> for each layer 3 beam filtered measurement quantity to be derived based on SS/PBCH block;
 - 2> derive each configured beam measurement quantity based on SS/PBCH block as described in TS 38.215[9], and apply layer 3 beam filtering as described in 5.5.3.2;
- 1> for each layer 3 beam filtered measurement quantity to be derived based on CSI-RS;
 - 2> derive each configured beam measurement quantity based on CSI-RS as described in TS 38.215 [9], and apply layer 3 beam filtering as described in 5.5.3.2.

5.5.3.4 Derivation of L2 U2N Relay UE measurement results

A UE may be configured by network to derive NR sidelink measurement results of serving L2 U2N Relay UE or candidate L2 U2N Relay UEs associated to the measurement objects configured in the *measObjectRelay*.

The UE shall:

- 1> for each L2 U2N Relay UE measurement quantity to be derived:
 - 2> derive the corresponding measurement quantity based on PSSCH/PSCCH DMRS as described in TS 38.215 [9];
 - 2> apply layer 3 filtering as described in 5.5.3.2;

5.5.4 Measurement report triggering

5.5.4.1 General

If AS security has been activated successfully, the UE shall:

- 1> for each *measId* included in the *measIdList* within *VarMeasConfig*:
 - 2> if the corresponding *reportConfig* includes a *reportType* set to *eventTriggered* or *periodical*:
 - 3> if the corresponding *measObject* concerns NR:
 - 4> if the corresponding *reportConfig* includes *measRSSI-ReportConfig*:
 - 5> consider the resource indicated by the *rmtc-Config* on the associated frequency to be applicable;
 - 4> if the *eventA1* or *eventA2* is configured in the corresponding *reportConfig*:
 - 5> consider only the serving cell to be applicable;
 - 4> if the *eventA3* or *eventA5* or *eventA3H1* or *eventA3H2* or *eventA5H1* or *eventA5H2* is configured in the corresponding *reportConfig*:
 - 5> if a serving cell is associated with a *measObjectNR* and neighbours are associated with another *measObjectNR*, consider any serving cell associated with the other *measObjectNR* to be a neighbouring cell as well;
 - 4> if the *eventX2* is configured in the corresponding *reportConfig*:
 - 5> consider only the serving L2 U2N Relay UE to be applicable;
 - 4> if corresponding *reportConfig* includes *reportType* set to *periodical*; or
 - 4> for measurement events other than *eventA1*, *eventA2*, *eventD1*, *eventD2*, *eventX2*, *eventH1* or *eventH2*:
 - 5> if *useAllowedCellList* is set to *true*:

- 6> consider any neighbouring cell detected based on parameters in the associated *measObjectNR* to be applicable when the concerned cell is included in the *allowedCellsToAddModList* defined within the *VarMeasConfig* for this *measId*;
- 5> else:
 - 6> consider any neighbouring cell detected based on parameters in the associated *measObjectNR* to be applicable when the concerned cell is not included in the *excludedCellsToAddModList* defined within the *VarMeasConfig* for this *measId*;
- 3> else if the corresponding *measObject* concerns E-UTRA:
 - 4> if *eventB1* or *eventB2* is configured in the corresponding *reportConfig*:
 - 5> consider a serving cell, if any, on the associated E-UTRA frequency as neighbour cell;
 - 4> consider any neighbouring cell detected on the associated frequency to be applicable when the concerned cell is not included in the *excludedCellsToAddModListEUTRAN* defined within the *VarMeasConfig* for this *measId*;
- 3> else if the corresponding *measObject* concerns UTRA-FDD:
 - 4> if *eventB1-UTRA-FDD* or *eventB2-UTRA-FDD* is configured in the corresponding *reportConfig*; or
 - 4> if corresponding *reportConfig* includes *reportType* set to *periodical*:
 - 5> consider a neighbouring cell on the associated frequency to be applicable when the concerned cell is included in the *cellsToAddModList* defined within the *VarMeasConfig* for this *measId*;
- 3> else if the corresponding *measObject* concerns L2 U2N Relay UE:
 - 4> if *eventY1-Relay* or *eventY2-Relay* or *eventZ1-Relay* is configured in the corresponding *reportConfig*; or
 - 4> if corresponding *reportConfig* includes *reportType* set to *periodical*:
 - 5> consider any L2 U2N Relay UE fulfilling upper layer criteria detected on the associated frequency to be applicable for this *measId*;
- 2> else if the corresponding *reportConfig* includes a *reportType* set to *reportCGI*:
 - 3> consider the cell detected on the associated *measObject* which has a physical cell identity matching the value of the *cellForWhichToReportCGI* included in the corresponding *reportConfig* within the *VarMeasConfig* to be applicable;
- 2> else if the corresponding *reportConfig* includes a *reportType* set to *reportSFTD*:
 - 3> if the corresponding *measObject* concerns NR:
 - 4> if the *reportSFTD-Meas* is set to *true*:
 - 5> consider the NR PSCell to be applicable;
 - 4> else if the *reportSFTD-NeighMeas* is included:
 - 5> if *cellsForWhichToReportSFTD* is configured in the corresponding *reportConfig*:
 - 6> consider any NR neighbouring cell detected on the associated *measObjectNR* which has a physical cell identity that is included in the *cellsForWhichToReportSFTD* to be applicable;
 - 5> else:
 - 6> consider up to 3 strongest NR neighbouring cells detected based on parameters in the associated *measObjectNR* to be applicable when the concerned cells are not included in the *excludedCellsToAddModList* defined within the *VarMeasConfig* for this *measId*;
 - 3> else if the corresponding *measObject* concerns E-UTRA:

- 4> if the *reportSFTD-Meas* is set to *true*:
 - 5> consider the E-UTRA PSCell to be applicable;
- 2> else if the corresponding *reportConfig* includes a *reportType* set to *cli-Periodical* or *cli-EventTriggered*:
 - 3> consider all CLI measurement resources included in the corresponding *measObject* to be applicable;
- 2> else if the corresponding *reportConfig* includes a *reportType* set to *rxTxPeriodical*:
 - 3> consider all Rx-Tx time difference measurement resources included in the corresponding *measObject* to be applicable;
- 2> if the corresponding *reportConfig* concerns the reporting for NR sidelink communication/discovery (i.e. *reportConfigNR-SL*):
 - 3> consider the transmission resource pools indicated by the *tx-PoolMeasToAddModList* defined within the *VarMeasConfig* for this *measId* to be applicable;
- 2> if the *reportType* is set to *eventTriggered*, and if the corresponding *reportConfig* does not include *numberOfTriggeringCells*, and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable cells for all measurements after layer 3 filtering taken during *timeToTrigger* defined for this event within the *VarMeasConfig*, while the *VarMeasReportList* does not include a measurement reporting entry for this *measId* (a first cell triggers the event):
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> include the concerned cell(s) in the *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
- 3> if *useT312* is set to *true* in *reportConfig* for this event:
 - 4> if T310 for the corresponding SpCell is running; and
 - 4> if T312 is not running for corresponding SpCell:
 - 5> start timer T312 for the corresponding SpCell with the value of T312 configured in the corresponding *measObjectNR*;
- 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> else if the *reportType* is set to *eventTriggered*, and if the corresponding *reportConfig* does not include *numberOfTriggeringCells*, and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable cells not included in the *cellsTriggeredList* for all measurements after layer 3 filtering taken during *timeToTrigger* defined for this event within the *VarMeasConfig* (a subsequent cell triggers the event):
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> include the concerned cell(s) in the *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
- 3> if *useT312* is set to *true* in *reportConfig* for this event:
 - 4> if T310 for the corresponding SpCell is running; and
 - 4> if T312 is not running for corresponding SpCell:
 - 5> start timer T312 for the corresponding SpCell with the value of T312 configured in the corresponding *measObjectNR*;
- 3> initiate the measurement reporting procedure, as specified in 5.5.5;

- 2> if the *reportType* is set to *eventTriggered*, and if the corresponding *reportConfig* includes *numberOfTriggeringCells*, and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable cells for all measurements after layer 3 filtering taken during *timeToTrigger* defined for this event within the *VarMeasConfig*:
 - 3> if the *VarMeasReportList* does not include a measurement reporting entry for this *measId* (a first cell triggers the event):
 - 4> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> if the number of cell(s) in the *cellsTriggeredList* is larger than or equal to *numberOfTriggeringCells*:
 - 4> include the concerned cell(s) in the *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> else:
 - 4> include the concerned cell(s) in the *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 4> if the number of cell(s) in the *cellsTriggeredList* is larger than or equal to *numberOfTriggeringCells*:
 - 5> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 5> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> if the *reportType* is set to *eventTriggered* and if the leaving condition applicable for this event is fulfilled for one or more of the cells included in the *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId* for all measurements after layer 3 filtering taken during *timeToTrigger* defined within the *VarMeasConfig* for this event:
 - 3> if *enteringLeavingReport* is configured for the corresponding reporting configuration:
 - 4> store the concerned cell(s) in the *cellsMetLeavingCond* defined within the *VarMeasReportList* for this *measId*;
 - 3> remove the concerned cell(s) in the *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> if *reportOnLeave* is set to *true* for the corresponding reporting configuration:
 - 4> if the corresponding *reportConfig* does not include *numberOfTriggeringCells*; or
 - 4> if the corresponding *reportConfig* includes *numberOfTriggeringCells* and a measurement report was previously sent to the network for at least one of the concerned cell(s):
 - 5> initiate the measurement reporting procedure, as specified in 5.5.5;
 - 3> remove all the concerned cell(s) from *cellsMetLeavingCond* defined within the *VarMeasReportList* for this *measId*, if any;
 - 3> if the *cellsTriggeredList* defined within the *VarMeasReportList* for this *measId* is empty:
 - 4> remove the measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 4> stop the periodical reporting timer for this *measId*, if running;
- 2> if the *reportType* is set to *eventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable L2 U2N Relay UEs for all measurements after layer 3 filtering taken during *timeToTrigger* defined for this event within the *VarMeasConfig*, while the *VarMeasReportList* does not include a measurement reporting entry for this *measId* (a first L2 U2N Relay UE triggers the event):
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;

- 3> include the concerned L2 U2N Relay UE(s) in the *relaysTriggeredList* defined within the *VarMeasReportList* for this *measId*;
- 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> else if the *reportType* is set to *eventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable L2 U2N Relay UEs not included in the *relaysTriggeredList* for all measurements after layer 3 filtering taken during *timeToTrigger* defined for this event within the *VarMeasConfig* (a subsequent L2 U2N Relay UE triggers the event):
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> include the concerned L2 U2N Relay UE(s) in the *relaysTriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> else if the *reportType* is set to *eventTriggered* and if the leaving condition applicable for this event is fulfilled for one or more of the L2 U2N Relay UEs included in the *relaysTriggeredList* defined within the *VarMeasReportList* for this *measId* for all measurements after layer 3 filtering taken during *timeToTrigger* defined within the *VarMeasConfig* for this event:
 - 3> remove the concerned L2 U2N Relay UE(s) in the *relaysTriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> if *reportOnLeave* is set to *true* for the corresponding reporting configuration:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5;
 - 3> if the *relaysTriggeredList* defined within the *VarMeasReportList* for this *measId* is empty:
 - 4> remove the measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 4> stop the periodical reporting timer for this *measId*, if running;
- 2> else if the *reportType* is set to *eventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable transmission resource pools for all measurements taken during *timeToTrigger* defined for this event within the *VarMeasConfig*, while the *VarMeasReportList* does not include an measurement reporting entry for this *measId* (a first transmission resource pool triggers the event):
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> include the concerned transmission resource pool(s) in the *poolsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> else if the *reportType* is set to *eventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable transmission resource pools not included in the *poolsTriggeredList* for all measurements taken during *timeToTrigger* defined for this event within the *VarMeasConfig* (a subsequent transmission resource pool triggers the event):
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> include the concerned transmission resource pool(s) in the *poolsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> if the *reportType* is set to *eventTriggered* and if the leaving condition applicable for this event is fulfilled for one or more applicable transmission resource pools included in the *poolsTriggeredList* defined within the

VarMeasReportList for this *measId* for all measurements taken during *timeToTrigger* defined within the *VarMeasConfig* for this event:

- 3> remove the concerned transmission resource pool(s) in the *poolsTriggeredList* defined within the *VarMeasReportList* for this *measId*;
- 3> if the *poolsTriggeredList* defined within the *VarMeasReportList* for this *measId* is empty:
 - 4> remove the measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 4> stop the periodical reporting timer for this *measId*, if running
- 2> else if the *reportType* is set to *eventTriggered* and if the *eventId* is set to *eventD1* or *eventD2* or *eventH1* or *eventH2* and if the entering condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled during *timeToTrigger* defined for this event within the *VarMeasConfig*, while the *VarMeasReportList* does not include a measurement reporting entry for this *measId*:
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> else if the *reportType* is set to *eventTriggered* and if the *eventId* is set to *eventD1* or *eventD2* or *eventH1* or *eventH2* and if the leaving condition applicable for this event is fulfilled for the associated *VarMeasReport* within the *VarMeasReportList* for this *measId* during *timeToTrigger* defined within the *VarMeasConfig* for this event:
 - 3> if *reportOnLeave* is set to *true* for the corresponding reporting configuration:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5;
 - 3> remove the measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> stop the periodical reporting timer for this *measId*, if running;

NOTE 1: Void.

- 2> if *reportType* is set to *periodical* and if a (first) measurement result is available:
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> if the corresponding *reportConfig* includes *measRSSI-ReportConfig*:
 - 4> initiate the measurement reporting procedure as specified in 5.5.5 immediately when RSSI sample values are reported by the physical layer after the first L1 measurement duration;
 - 3> else if the corresponding *reportConfig* includes the *ul-DelayValueConfig*:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after a first measurement result is provided from lower layers of the associated DRB identity;
 - 3> else if the corresponding *reportConfig* includes the *ul-ExcessDelayConfig*:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after a first measurement result is provided from lower layers of the associated DRB identity(ies) according to the configured threshold per DRB identity(ies);
- 3> else if the *reportAmount* exceeds 1:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after the quantity to be reported becomes available for the NR SpCell or for the serving L2 U2N Relay UE (if the UE is a L2 U2N Remote UE);

- 3> else (i.e. the *reportAmount* is equal to 1):
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after the quantity to be reported becomes available for the NR SpCell and for the strongest cell among the applicable cells, or for the NR SpCell and for the strongest L2 U2N Relay UEs among the applicable L2 U2N Relay UEs; or initiate the measurement reporting procedure, as specified in 5.5.5, immediately after the quantity to be reported becomes available for the serving L2 U2N Relay UE and for the strongest cell among the applicable cells, or for the serving L2 U2N Relay UE and for the strongest L2 U2N Relay UEs among the applicable L2 U2N Relay UEs (if the UE is a L2 U2N Remote UE);
- 2> if, in case the corresponding *reportConfig* concerns the reporting for NR sidelink communication/discovery, *reportType* is set to *periodical* and if a (first) measurement result is available:
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after the quantity to be reported becomes available for the NR SpCell and CBR measurement results become available;
- 2> if the *reportType* is set to *cli-EventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more applicable CLI measurement resources for all measurements after layer 3 filtering taken during *timeToTrigger* defined for this event within the *VarMeasConfig*, while the *VarMeasReportList* does not include a measurement reporting entry for this *measId* (a first CLI measurement resource triggers the event):
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> include the concerned CLI measurement resource(s) in the *cli-TriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> else if the *reportType* is set to *cli-EventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *eventId* of the corresponding *reportConfig* within *VarMeasConfig*, is fulfilled for one or more CLI measurement resources not included in the *cli-TriggeredList* for all measurements after layer 3 filtering taken during *timeToTrigger* defined for this event within the *VarMeasConfig* (a subsequent CLI measurement resource triggers the event):
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> include the concerned CLI measurement resource(s) in the *cli-TriggeredList* defined within the *VarMeasReportList* for this *measId*;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> if the *reportType* is set to *cli-EventTriggered* and if the leaving condition applicable for this event is fulfilled for one or more of the CLI measurement resources included in the *cli-TriggeredList* defined within the *VarMeasReportList* for this *measId* for all measurements after layer 3 filtering taken during *timeToTrigger* defined within the *VarMeasConfig* for this event:
 - 3> remove the concerned CLI measurement resource(s) in the *cli-TriggeredList* defined within the *VarMeasReportList* for this *measId*;
- 3> if *reportOnLeave* is set to *true* for the corresponding reporting configuration:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5;
- 3> if the *cli-TriggeredList* defined within the *VarMeasReportList* for this *measId* is empty:
 - 4> remove the measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 4> stop the periodical reporting timer for this *measId*, if running;

- 2> if *reportType* is set to *cli-Periodical* and if a (first) measurement result is available:
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after the quantity to be reported becomes available for at least one CLI measurement resource;
- 2> if *reportType* is set to *rxTxPeriodical* and if a (first) measurement result is available:
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5;
- 2> upon expiry of the periodical reporting timer for this *measId*:
 - 3> if *reportType* is set to *eventTriggered* and *reportOnBestCellChange* is configured for this *measId*
 - 4> if *reportOnBestCellChange* is set to *n1*, and the first measured neighbouring cell among cells within *cellsTriggeredList* according to the sorting quantity is the same as the first cell in *reportedBestNeighbourCell* defined within the *VarMeasReportList* for this *measId*, or
 - 4> if *reportOnBestCellChange* is set to *n2* and there is only one cell included in the *cellsTriggeredList* for this *measId*, and the best measured neighbouring cell according to the sorting quantity in the *cellsTriggeredList* is the same as the first cell in *reportedBestNeighbourCell* defined within the *VarMeasReportList* for this *measId*, or
 - 4> if *reportOnBestCellChange* is set to *n2* and there is more than one cell included in the *cellsTriggeredList* for this *measId*, and the best measured neighbouring cell among cells within *cellsTriggeredList* according to the sorting quantity is the same as the first cell in *reportedBestNeighbourCell* defined within the *VarMeasReportList* for this *measId*, and the second best measured neighbouring cell among cells within *cellsTriggeredList* according to the sorting quantity is the same as the second cell in *reportedBestNeighbourCell* defined within the *VarMeasReportList* for this *measId*:
 - 5> increment the *numberOfReportsSent* as defined within the *VarMeasReportList* for this *measId* by 1;
 - 5> if the *numberOfReportsSent* as defined within the *VarMeasReportList* for this *measId* is less than the *reportAmount* as defined within the corresponding *reportConfig* for this *measId*:
 - 6> restart the periodical reporting timer with the value of *reportInterval* as defined within the corresponding *reportConfig* for this *measId*;
 - 4> else:
- 5> initiate the measurement reporting procedure, as specified in 5.5.5;3> else:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5.
- 2> if the corresponding *reportConfig* includes a *reportType* is set to *reportSFTD*:
 - 3> if the corresponding *measObject* concerns NR:
 - 4> if the *drx-SFTD-NeighMeas* is included:
 - 5> if the quantity to be reported becomes available for each requested pair of PCell and NR cell:
 - 6> stop timer T322;
 - 6> initiate the measurement reporting procedure, as specified in 5.5.5;
 - 4> else

- 5> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after the quantity to be reported becomes available for each requested pair of PCell and NR cell or the maximal measurement reporting delay as specified in TS 38.133 [14];
- 3> else if the corresponding *measObject* concerns E-UTRA:
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5, immediately after the quantity to be reported becomes available for the pair of PCell and E-UTRA PSCell or the maximal measurement reporting delay as specified in TS 38.133 [14];
- 2> if *reportType* is set to *reportCGI*:
 - 3> if the UE acquired the *SIB1* or *SystemInformationBlockType1* for the requested cell; or
 - 3> if the UE detects that the requested NR cell is not transmitting *SIB1* (see TS 38.213 [13], clause 13):
 - 4> stop timer T321;
 - 4> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 4> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5;
 - 2> upon the expiry of T321 for this *measId*:
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5.
 - 2> upon the expiry of T322 for this *measId*:
 - 3> initiate the measurement reporting procedure, as specified in 5.5.5.

If AS security has been activated successfully and if SCell activation(s) indication is received from lower layer, the UE shall:

- 1> if *reportType* is set to *reportOnScellActivation* for any *measId* included in the *measIdList* within *VarMeasConfig*:
- 2> if the activated SCell(s) fulfills the measurement requirement as specified in TS 38.133 [14]:
 - 3> include a measurement reporting entry within the *VarMeasReportList* for this *measId*;
 - 3> set the *numberOfReportsSent* defined within the *VarMeasReportList* for this *measId* to 0;
 - 4> initiate the measurement reporting procedure, as specified in 5.5.5.

5.5.4.2 Event A1 (Serving becomes better than threshold)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition A1-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition A1-2, as specified below, is fulfilled;
- 1> for this measurement, consider the NR serving cell corresponding to the associated *measObjectNR* associated with this event.

Inequality A1-1 (Entering condition)

$M_s - H_{ys} > Thresh$

Inequality A1-2 (Leaving condition)

$$Ms + Hys < Thresh$$

The variables in the formula are defined as follows:

Ms is the measurement result of the serving cell, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *a1-Threshold* as defined within *reportConfigNR* for this event).

Ms is expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Hys is expressed in dB.

Thresh is expressed in the same unit as **Ms**.

5.5.4.3 Event A2 (Serving becomes worse than threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition A2-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A2-2, as specified below, is fulfilled;

1> for this measurement, consider the serving cell indicated by the *measObjectNR* associated to this event.

NOTE: If the SCell indicated by the *measObjectNR* associated to this event is not detectable, then the UE should consider for the value of *Ms* the lowest value of the value range of the measurement quantity as the SCell measurement.

Inequality A2-1 (Entering condition)

$$Ms + Hys < Thresh$$

Inequality A2-2 (Leaving condition)

$$Ms - Hys > Thresh$$

The variables in the formula are defined as follows:

Ms is the measurement result of the serving cell, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *a2-Threshold* as defined within *reportConfigNR* for this event).

Ms is expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Hys is expressed in dB.

Thresh is expressed in the same unit as **Ms**.

5.5.4.4 Event A3 (Neighbour becomes offset better than SpCell)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition A3-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A3-2, as specified below, is fulfilled;

1> use the SpCell for *Mp*, *Ofp* and *Ocp*.

NOTE 1: The cell(s) that triggers the event has reference signals indicated in the *measObjectNR* associated to this event which may be different from the NR SpCell *measObjectNR*.

Inequality A3-1 (Entering condition)

$$Mn + Ofn + Ocn - Hys > Mp + Ofp + Ocp + Off$$

Inequality A3-2 (Leaving condition)

$$Mn + Ofn + Ocn + Hys < Mp + Ofp + Ocp + Off$$

The variables in the formula are defined as follows:

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the reference signal of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Mp is the measurement result of the SpCell, not taking into account any offsets.

Ofp is the measurement object specific offset of the SpCell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the SpCell).

Ocp is the cell specific offset of the SpCell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the SpCell), and is set to zero if not configured for the SpCell.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR* for this event).

Off is the offset parameter for this event (i.e. *a3-Offset* as defined within *reportConfigNR* for this event).

Mn, Mp are expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, Ocn, Ofp, Ocp, Hys, Off are expressed in dB.

NOTE 2: The definition of Event A3 also applies to CondEvent A3.

5.5.4.5 Event A4 (Neighbour becomes better than threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition A4-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A4-2, as specified below, is fulfilled.

Inequality A4-1 (Entering condition)

$$Mn + Ofn + Ocn - Hys > Thresh$$

Inequality A4-2 (Leaving condition)

$$Mn + Ofn + Ocn + Hys < Thresh$$

The variables in the formula are defined as follows:

Mn is the measurement result of the neighbouring cell or the measurement result of serving PSCell (i.e., in case it is configured as candidate PSCell for CondEvent A4 evaluation) for CHO with candidate SCG(s) case, not taking into account any offsets.

Ofn is the measurement object specific offset of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *a4-Threshold* as defined within *reportConfigNR* for this event).

Mn is expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, Ocn, Hys are expressed in dB.

Thresh is expressed in the same unit as **Mn**.

NOTE: The definition of Event A4 also applies to CondEvent A4.

5.5.4.6 Event A5 (SpCell becomes worse than threshold1 and neighbour becomes better than threshold2)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition A5-1 and condition A5-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A5-3 or condition A5-4, i.e. at least one of the two, as specified below, is fulfilled;

1> use the SpCell for **Mp**.

NOTE 1: The parameters of the reference signal(s) of the cell(s) that triggers the event are indicated in the *measObjectNR* associated to the event which may be different from the *measObjectNR* of the NR SpCell.

Inequality A5-1 (Entering condition 1)

$$M_p + H_{ys} < Thresh1$$

Inequality A5-2 (Entering condition 2)

$$M_n + Of_n + Ocn - H_{ys} > Thresh2$$

Inequality A5-3 (Leaving condition 1)

$$M_p - H_{ys} > Thresh1$$

Inequality A5-4 (Leaving condition 2)

$$M_n + Of_n + Ocn + H_{ys} < Thresh2$$

The variables in the formula are defined as follows:

Mp is the measurement result of the NR SpCell, not taking into account any offsets.

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR* for this event).

Thresh1 is the threshold parameter for this event (i.e. *a5-Threshold1* as defined within *reportConfigNR* for this event).

Thresh2 is the threshold parameter for this event (i.e. *a5-Threshold2* as defined within *reportConfigNR* for this event).

Mn, Mp are expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, Ocn, Hys are expressed in dB.

Thresh1 is expressed in the same unit as **Mp**.

Thresh2 is expressed in the same unit as **Mn**.

NOTE 2: The definition of Event A5 also applies to CondEvent A5.

5.5.4.7 Event A6 (Neighbour becomes offset better than SCell)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition A6-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition A6-2, as specified below, is fulfilled;
- 1> for this measurement, consider the (secondary) cell corresponding to the *measObjectNR* associated to this event to be the serving cell.

NOTE: The reference signal(s) of the neighbour(s) and the reference signal(s) of the SCell are both indicated in the associated *measObjectNR*.

Inequality A6-1 (Entering condition)

$$Mn + Ocn - Hys > Ms + Ocs + Off$$

Inequality A6-2 (Leaving condition)

$$Mn + Ocn + Hys < Ms + Ocs + Off$$

The variables in the formula are defined as follows:

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within the associated *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Ms is the measurement result of the serving cell, not taking into account any offsets.

Ocs is the cell specific offset of the serving cell (i.e. *cellIndividualOffset* as defined within the associated *measObjectNR*), and is set to zero if not configured for the serving cell.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR* for this event).

Off is the offset parameter for this event (i.e. *a6-Offset* as defined within *reportConfigNR* for this event).

Mn, **Ms** are expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ocn, **Ocs**, **Hys**, **Off** are expressed in dB.

5.5.4.8 Event B1 (Inter RAT neighbour becomes better than threshold)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition B1-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition B1-2, as specified below, is fulfilled.

Inequality B1-1 (Entering condition)

$$Mn + Ofn + Ocn - Hys > Thresh$$

Inequality B1-2 (Leaving condition)

$$Mn + Ofn + Ocn + Hys < Thresh$$

The variables in the formula are defined as follows:

Mn is the measurement result of the inter-RAT neighbour cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the frequency of the inter-RAT neighbour cell (i.e. *eutra-Q-OffsetRange* as defined within the *measObjectEUTRA* corresponding to the frequency of the neighbour inter-RAT cell, *utra-FDD-Q-OffsetRange* as defined within the *measObjectUTRA-FDD* corresponding to the frequency of the neighbour inter-RAT cell).

Ocn is the cell specific offset of the inter-RAT neighbour cell (i.e. *cellIndividualOffset* as defined within the *measObjectEUTRA* corresponding to the frequency of the neighbour inter-RAT cell, or *cellIndividualOffset* as defined within *reportConfigInterRAT*), and set to zero if not configured for the neighbour cell.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigInterRAT* for this event).

Thresh is the threshold parameter for this event (i.e. *b1-ThresholdEUTRA* as defined within *reportConfigInterRAT* for this event, *b1-ThresholdUTRA-FDD* as defined for UTRA-FDD within *reportConfigInterRAT* for this event).

Mn is expressed in dBm or in dB, depending on the measurement quantity of the inter-RAT neighbour cell.

Ofn, **Ocn**, **Hys** are expressed in dB.

Thresh is expressed in the same unit as **Mn**.

5.5.4.9 Event B2 (PCell becomes worse than threshold1 and inter RAT neighbour becomes better than threshold2)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition B2-1 and condition B2-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition B2-3 or condition B2-4, i.e. at least one of the two, as specified below, is fulfilled;

Inequality B2-1 (Entering condition 1)

$$Mp + Hys < Thresh1$$

Inequality B2-2 (Entering condition 2)

$$Mn + Ofn + Ocn - Hys > Thresh2$$

Inequality B2-3 (Leaving condition 1)

$$Mp - Hys > Thresh1$$

Inequality B2-4 (Leaving condition 2)

$$Mn + Ofn + Ocn + Hys < Thresh2$$

The variables in the formula are defined as follows:

Mp is the measurement result of the PCell, not taking into account any offsets.

Mn is the measurement result of the inter-RAT neighbour cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the frequency of the inter-RAT neighbour cell (i.e. *eutra-Q-OffsetRange* as defined within the *measObjectEUTRA* corresponding to the frequency of the inter-RAT neighbour cell, *utra-FDD-Q-OffsetRange* as defined within the *measObjectUTRA-FDD* corresponding to the frequency of the neighbour inter-RAT cell).

Ocn is the cell specific offset of the inter-RAT neighbour cell (i.e. *cellIndividualOffset* as defined within the *measObjectEUTRA* corresponding to the frequency of the neighbour inter-RAT cell, or *cellIndividualOffset* as defined within *reportConfigInterRAT*), and set to zero if not configured for the neighbour cell.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigInterRAT* for this event).

Thresh1 is the threshold parameter for this event (i.e. *b2-Threshold1* as defined within *reportConfigInterRAT* for this event).

Thresh2 is the threshold parameter for this event (i.e. *b2-Threshold2EUTRA* as defined within *reportConfigInterRAT* for this event, *b2-Threshold2UTRA-FDD* as defined for UTRA-FDD within *reportConfigInterRAT* for this event).

Mp is expressed in dBm in case of RSRP, or in dB in case of RSRQ and SINR.

Mn is expressed in dBm or dB, depending on the measurement quantity of the inter-RAT neighbour cell.

Ofn, Ocn, Hys are expressed in dB.

Thresh1 is expressed in the same unit as **Mp**.

Thresh2 is expressed in the same unit as **Mn**.

5.5.4.10 Event I1 (Interference becomes higher than threshold)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition I1-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition I1-2, as specified below, is fulfilled.

Inequality I1-1 (Entering condition)

$$M_i - H_{ys} > Thresh$$

Inequality I1-2 (Leaving condition)

$$M_i + H_{ys} < Thresh$$

The variables in the formula are defined as follows:

Mi is the measurement result of the interference, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *i1-Threshold* as defined within *reportConfigNR* for this event).

Mi, Thresh are expressed in dBm.

Hys is expressed in dB.

5.5.4.11 Event C1 (The NR sidelink channel busy ratio is above a threshold)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition C1-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition C1-2, as specified below, is fulfilled;

Inequality C1-1 (Entering condition)

$$M_s - H_{ys} > Thresh$$

Inequality C1-2 (Leaving condition)

$$M_s + H_{ys} < Thresh$$

The variables in the formula are defined as follows:

Ms is the measurement result of channel busy ratio of the transmission resource pool, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR-SL* for this event).

Thresh is the threshold parameter for this event (i.e. *c1-Threshold* as defined within *reportConfigNR-SL* for this event).

Ms is expressed in decimal from 0 to 1 in steps of 0.01.

Hys is expressed is in the same unit as ***Ms***.

Thresh is expressed in the same unit as ***Ms***.

5.5.4.12 Event C2 (The NR sidelink channel busy ratio is below a threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition C2-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition C2-2, as specified below, is fulfilled;

Inequality C2-1 (Entering condition)

$$Ms + Hys < Thresh$$

Inequality C2-2 (Leaving condition)

$$Ms - Hys > Thresh$$

The variables in the formula are defined as follows:

Ms is the measurement result of channel busy ratio of the transmission resource pool, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigNR-SL* for this event).

Thresh is the threshold parameter for this event (i.e. *c2-Threshold* as defined within *reportConfigNR-SL* for this event).

Ms is expressed in decimal from 0 to 1 in steps of 0.01.

Hys is expressed is in the same unit as ***Ms***.

Thresh is expressed in the same unit as ***Ms***.

5.5.4.13 Void

5.5.4.14 Void

5.5.4.15 Event D1 (Distance between UE and referenceLocation1 is above threshold1 and distance between UE and referenceLocation2 is below threshold2)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition D1-1 and condition D1-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition D1-3 or condition D1-4, i.e. at least one of the two, as specified below, are fulfilled;

Inequality D1-1 (Entering condition 1)

$$Ml1 - Hys > Thresh1$$

Inequality D1-2 (Entering condition 2)

$$Ml2 + Hys < Thresh2$$

Inequality D1-3 (Leaving condition 1)

$$Ml1 + Hys < Thresh1$$

Inequality D1-4 (Leaving condition 2)

$$Ml2 - Hys > Thresh2$$

The variables in the formula are defined as follows:

Ml1 is the distance between UE and a reference location for this event (i.e. *referenceLocation1* as defined within *reportConfigNR* for this event), not taking into account any offsets.

Ml2 is the distance between UE and a reference location for this event (i.e. *referenceLocation2* as defined within *reportConfigNR* for this event), not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresisLocation* as defined within *reportConfigNR* for this event).

Thresh1 is the threshold for this event defined as a distance, configured with parameter *distanceThreshFromReference1*, from a reference location configured with parameter *referenceLocation1* within *reportConfigNR* for this event.

Thresh2 is the threshold for this event defined as a distance, configured with parameter *distanceThreshFromReference2*, from a reference location configured with parameter *referenceLocation2* within *reportConfigNR* for this event.

Ml1 is expressed in meters.

Ml2 is expressed in the same unit as ***Ml1***.

Hys is expressed in the same unit as ***Ml1***.

Thresh1 is expressed in the same unit as ***Ml1***.

Thresh2 is expressed in the same unit as ***Ml1***.

NOTE: The definition of Event D1 also applies to CondEvent D1.

5.5.4.15a Event D2 (Distance between UE and the serving cell moving reference location is above threshold1 and distance between UE and a moving reference location is below threshold2)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition D2-1 and condition D2-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition D2-3 or condition D2-4, i.e. at least one of the two, as specified below, are fulfilled;

Inequality D2-1 (Entering condition 1)

$$Ml1 - Hys > Thresh1$$

Inequality D2-2 (Entering condition 2)

$$Ml2 + Hys < Thresh2$$

Inequality D2-3 (Leaving condition 1)

$$Ml1 + Hys < Thresh1$$

Inequality D2-4 (Leaving condition 2)

$$Ml2 - Hys > Thresh2$$

The variables in the formula are defined as follows:

MI1 is the distance between UE and a moving reference location for this event, not taking into account any offsets. The moving reference location is determined based on *movingReferenceLocation* and the corresponding epoch time and satellite ephemeris for the serving cell broadcast in *SIB19*.

MI2 is the distance between UE and a moving reference location for this event, not taking into account any offsets. The moving reference location is determined based on the parameter *referenceLocation* and the corresponding epoch time and satellite ephemeris configured within the *MeasObjectNR* associated to this event.

Hys is the hysteresis parameter for this event (i.e. *hysteresisLocation* as defined within *reportConfigNR* for this event).

Thresh1 is the threshold for this event defined as a distance, configured with parameter *distanceThreshFromReference1* in *reportConfigNR* for this event, from a moving reference location determined based on the parameter *movingReferenceLocation* and the corresponding epoch time and satellite ephemeris for the serving cell broadcast in *SIB19*.

Thresh2 is the threshold for this event defined as a distance, configured with parameter *distanceThreshFromReference2* in *reportConfigNR* for this event, from a moving reference location determined based on the parameter *referenceLocation* and the corresponding epoch time and satellite ephemeris configured within the *MeasObjectNR* associated to this event.

MI1 is expressed in meters.

MI2 is expressed in the same unit as ***MI1***.

Hys is expressed in the same unit as ***MI1***.

Thresh1 is expressed in the same unit as ***MI1***.

Thresh2 is expressed in the same unit as ***MI1***.

NOTE: The definition of Event D2 also applies to CondEvent D2.

5.5.4.16 CondEvent T1 (Time measured at UE is within a duration from threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition T1-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition T1-2, as specified below, is fulfilled;

Inequality T1-1 (Entering condition)

$Mt > Thresh1$

Inequality T1-2 (Leaving condition)

$Mt > Thresh1 + Duration$

The variables in the formula are defined as follows:

Mt is the time measured at UE.

Thresh1 is the threshold parameter for this event (i.e. *t1-Threshold* as defined within *reportConfigNR* for this event).

Duration is the duration parameter for this event (i.e. *duration* as defined within *reportConfigNR* for this event).

Mt is expressed in *ms*.

Thresh1 is expressed in the same unit as ***Mt***.

Duration is expressed in the same unit as ***Mt***.

5.5.4.17 Event X1 (Serving L2 U2N Relay UE becomes worse than threshold1 and NR Cell becomes better than threshold2)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when both condition X1-1 and condition X1-2, as specified below, are fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition X1-3 or condition X1-4, i.e. at least one of the two, as specified below, is fulfilled;

Inequality X1-1 (Entering condition 1)

$$Mr + Hys < Thresh1$$

Inequality X1-2 (Entering condition 2)

$$Mn + Ofn + Ocn - Hys > Thresh2$$

Inequality X1-3 (Leaving condition 1)

$$Mr - Hys > Thresh1$$

Inequality X1-4 (Leaving condition 2)

$$Mn + Ofn + Ocn + Hys < Thresh2$$

The variables in the formula are defined as follows:

Mr is the measurement result of the serving L2 U2N Relay UE, not taking into account any offsets.

Mn is the measurement result of the NR cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the reference signal of the NR cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the NR cell).

Ocn is the cell specific offset of the NR cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the NR cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the cell.

Hys is the hysteresis parameter for this event.

Thresh1 is the threshold parameter for this event (i.e. *x1-Threshold1-Relay/eventX1-SD-Threshold1* as defined within *reportConfigNR* for this event).

Thresh2 is the threshold parameter for this event (i.e. *x1-Threshold2* as defined within *reportConfigNR* for this event).

Mr is expressed in dBm.

Mn is expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, **Ocn**, **Hys** are expressed in dB.

Thresh1 is expressed in the same unit as **Mr**.

Thresh2 is expressed in the same unit as **Mn**.

5.5.4.18 Event X2 (Serving L2 U2N Relay UE becomes worse than threshold)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition X2-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition X2-2, as specified below, is fulfilled;

Inequality X2-1 (Entering condition)

$$Mr + Hys < Thresh$$

Inequality X2-2 (Leaving condition)

$$Mr - Hys > Thresh$$

The variables in the formula are defined as follows:

Mr is the measurement result of the serving L2 U2N Relay UE, not taking into account any offsets.

Hys is the hysteresis parameter for this event.

Thresh is the threshold parameter for this event (i.e. *x2-Threshold-Relay/eventX2-SD-Threshold* as defined within *reportConfigNR* for this event).

Mr is expressed in dBm.

Hys are expressed in dB.

Thresh is expressed in the same unit as **Mr**.

5.5.4.19 Event Y1 (PCell becomes worse than threshold1 and candidate L2 U2N Relay UE becomes better than threshold2)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when both condition Y1-1 and condition Y1-2, as specified below, are fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition Y1-3 or condition Y1-4, i.e. at least one of the two, as specified below, is fulfilled;

Inequality Y1-1 (Entering condition 1)

$$Mp + Hys < Thresh1$$

Inequality Y1-2 (Entering condition 2)

$$Mr - Hys > Thresh2$$

Inequality Y1-3 (Leaving condition 1)

$$Mp - Hys > Thresh1$$

Inequality Y1-4 (Leaving condition 2)

$$Mr + Hys < Thresh2$$

The variables in the formula are defined as follows:

Mp is the measurement result of the PCell, not taking into account any offsets.

Mr is the measurement result of the candidate L2 U2N Relay UE, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigInterRAT* for this event).

Thresh1 is the threshold parameter for this event (i.e. *y1-Threshold1* as defined within *reportConfigInterRAT* for this event).

Thresh2 is the threshold parameter for this event (i.e. *y1-Threshold2-Relay* as defined within *reportConfigInterRAT* for this event).

Mp is expressed in dBm in case of RSRP, or in dB in case of RSRQ and SINR.

Mr is expressed in dBm or dB, depending on the measurement quantity of candidate L2 U2N Relay UE.

Hys are expressed in dB.

Thresh1 is expressed in the same unit as **Mr**.

Thresh2 is expressed in the same unit as **Mr**.

5.5.4.20 Event Y2 (Candidate L2 U2N Relay UE becomes better than threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition Y2-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition Y2-2, as specified below, is fulfilled;

Inequality Y2-1 (Entering condition)

$$Mr - Hys > Thresh$$

Inequality Y2-2 (Leaving condition)

$$Mr + Hys < Thresh$$

The variables in the formula are defined as follows:

Mr is the measurement result of the candidate L2 U2N Relay UE, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigInterRAT* for this event).

Thresh is the threshold parameter for this event (i.e. *y2-Threshold-Relay* as defined within *reportConfigInterRAT* for this event).

Mr is expressed in dBm or dB, depending on the measurement quantity of candidate L2 U2N Relay UE.

Hys are expressed in dB.

Thresh is expressed in the same unit as **Mr**.

5.5.4.20b Event Z1 (Serving L2 U2N Relay UE becomes worse than threshold1 and Candidate L2 U2N Relay UE becomes better than threshold2)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition Z1-1 and condition Z1-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition Z1-3 or condition Z1-4, i.e. at least one of the two, as specified below, is fulfilled;

Inequality Z1-1 (Entering condition 1)

$$Mr + Hys < Thresh1$$

Inequality Z1-2 (Entering condition 2)

$$Mn - Hys > Thresh2$$

Inequality Z1-3 (Leaving condition 1)

$$Mr - Hys > Thresh1$$

Inequality Z1-4 (Leaving condition 2)

$$Mn + Hys < Thresh2$$

The variables in the formula are defined as follows:

Mr is the measurement result of the serving L2 U2N Relay UE, not taking into account any offsets.

Mn is the measurement result of the candidate L2 U2N Relay UE, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *hysteresis* as defined within *reportConfigInterRAT* for this event).

Thresh1 is the threshold parameter for this event (i.e. *sl-rsrp* in *z1-Threshold1-Relay* as defined within *reportConfigInterRAT* if the UE measures SL-RSRP, or *sd-rsrp* in *z1-Threshold1-Relay* as defined within *reportConfigInterRAT* if the UE measures SD-RSRP for this event).

Thresh2 is the threshold parameter for this event (i.e. *z1-Threshold2-Relay* as defined within *reportConfigInterRAT* for this event).

Mr is expressed in dBm or dB, depending on the measurement quantity of serving L2 U2N Relay UE.

Mn is expressed in dBm or dB, depending on the measurement quantity of candidate L2 U2N Relay UE.

Hys are expressed in dB.

Thresh1 is expressed in the same unit as **Mr**.

Thresh2 is expressed in the same unit as **Mn**.

5.5.4.21 Event H1 (The Aerial UE altitude becomes higher than a threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition H1-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition H1-2, as specified below, is fulfilled;

Inequality H1-1 (Entering condition)

$$Ms - Hys > Thresh$$

Inequality H1-2 (Leaving condition)

$$Ms + Hys < Thresh$$

The variables in the formula are defined as follows:

Ms is the Aerial UE altitude relative to the sea level.

Hys is the hysteresis parameter for this event (i.e. *h1-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *h1-Threshold* as defined within *reportConfigNR* for this event).

Ms, **Hys**, **Thresh** are expressed in meters.

5.5.4.22 Event H2 (The Aerial UE altitude becomes lower than a threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when condition H2-1, as specified below, is fulfilled;

1> consider the leaving condition for this event to be satisfied when condition H2-2, as specified below, is fulfilled;

Inequality H2-1 (Entering condition)

$$Ms + Hys < Thresh$$

Inequality H2-2 (Leaving condition)

$$Ms - Hys > Thresh$$

The variables in the formula are defined as follows:

Ms is the Aerial UE altitude relative to the sea level.

Hys is the hysteresis parameter for this event (i.e. *h2-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *h2-Threshold* as defined within *reportConfigNR* for this event).

Ms, **Hys**, **Thresh** are expressed in meters.

5.5.4.23 Event A3H1 (Neighbour becomes offset better than SpCell and the Aerial UE altitude becomes higher than a threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition A3H1-1 and condition A3H1-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A3H1-3 or condition A3H1-4, i.e. at least one of the two, as specified below, is fulfilled;

1> use the SpCell for *Mp*, *Ofp* and *Ocp*.

NOTE 1: The cell(s) that triggers the event has reference signals indicated in the *measObjectNR* associated to this event which may be different from the NR SpCell *measObjectNR*.

Inequality A3H1-1 (Entering condition 1)

$$Mn + Ofn + Ocn - Hys1 > Mp + Ofp + Ocp + Off$$

Inequality A3H1-2 (Entering condition 2)

$$Ms - Hys2 > Thresh$$

Inequality A3H1-3 (Leaving condition 1)

$$Mn + Ofn + Ocn + Hys1 < Mp + Ofp + Ocp + Off$$

Inequality A3H1-4 (Leaving condition 2)

$$Ms + Hys2 < Thresh$$

The variables in the formula are defined as follows:

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the reference signal of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Mp is the measurement result of the SpCell, not taking into account any offsets.

Ofp is the measurement object specific offset of the SpCell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the SpCell).

Ocp is the cell specific offset of the SpCell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the SpCell), and is set to zero if not configured for the SpCell.

Hys1 is the hysteresis parameter for this event (i.e. *a3-Hysteresis* as defined within *reportConfigNR* for this event).

Off is the offset parameter for this event (i.e. *a3-Offset* as defined within *reportConfigNR* for this event).

Ms is the Aerial UE altitude relative to the sea level.

Hys2 is the hysteresis parameter for this event (i.e. *h1-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *h1-Threshold* as defined within *reportConfigNR* for this event).

Mn, **Mp** are expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, *Ocn*, *Hys1*, *Ofp*, *Ocp*, *Off* are expressed in dB.

Ms, *Hys2*, *Thresh* are expressed in meters.

5.5.4.24 Event A3H2 (Neighbour becomes offset better than SpCell and the Aerial UE altitude becomes lower than a threshold)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition A3H2-1 and condition A3H2-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A3H2-3 or condition A3H2-4, i.e. at least one of the two, as specified below, is fulfilled;

1> use the SpCell for *Mp*, *Ofp* and *Ocp*.

NOTE: The cell(s) that triggers the event has reference signals indicated in the *measObjectNR* associated to this event which may be different from the NR SpCell *measObjectNR*.

Inequality A3H2-1 (Entering condition 1)

$$Mn + Ofn + Ocn - Hys1 > Mp + Ofp + Ocp + Off$$

Inequality A3H2-2 (Entering condition 2)

$$Ms + Hys2 < Thresh$$

Inequality A3H2-3 (Leaving condition 1)

$$Mn + Ofn + Ocn + Hys1 < Mp + Ofp + Ocp + Off$$

Inequality A3H1-4 (Leaving condition 2)

$$Ms - Hys2 > Thresh$$

The variables in the formula are defined as follows:

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the reference signal of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Mp is the measurement result of the SpCell, not taking into account any offsets.

Ofp is the measurement object specific offset of the SpCell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the SpCell).

Ocp is the cell specific offset of the SpCell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the SpCell), and is set to zero if not configured for the SpCell.

Hys1 is the hysteresis parameter for this event (i.e. *a3-Hysteresis* as defined within *reportConfigNR* for this event).

Off is the offset parameter for this event (i.e. *a3-Offset* as defined within *reportConfigNR* for this event).

Ms is the Aerial UE altitude relative to the sea level.

Hys2 is the hysteresis parameter for this event (i.e. *h2-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh is the threshold parameter for this event (i.e. *h2-Threshold* as defined within *reportConfigNR* for this event).

Mn, ***Mp*** are expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, *Ocn*, *Hys1*, *Ofp*, *Ocp*, *Off* are expressed in dB.

Ms, *Hys2*, *Thresh* are expressed in meters.

5.5.4.25 Event A4H1 (Neighbour becomes better than threshold1 and the Aerial UE altitude becomes higher than a threshold2)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition A4H1-1 and condition A4H1-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A4H1-3 or condition A4H1-4, i.e. at least one of the two, as specified below, is fulfilled.

Inequality A4H1-1 (Entering condition 1)

$$Mn + Ofn + Ocn - Hys1 > Thresh1$$

Inequality A4H1-2 (Entering condition 2)

$$Ms - Hys2 > Thresh2$$

Inequality A4H1-3 (Leaving condition 1)

$$Mn + Ofn + Ocn + Hys1 < Thresh1$$

Inequality A4H1-4 (Leaving condition 2)

$$Ms + Hys2 < Thresh2$$

The variables in the formula are defined as follows:

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Hys1 is the hysteresis parameter for this event (i.e. *a4-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh1 is the threshold parameter for this event (i.e. *a4-Threshold* as defined within *reportConfigNR* for this event).

Ms is the Aerial UE altitude relative to the sea level.

Hys2 is the hysteresis parameter for this event (i.e. *h1-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh2 is the threshold parameter for this event (i.e. *h1-Threshold* as defined within *reportConfigNR* for this event).

Mn is expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, ***Ocn***, ***Hys1*** are expressed in dB.

Thresh1 is expressed in the same unit as ***Mn***.

Ms, ***Hys2***, ***Thresh2*** are expressed in meters.

5.5.4.26 Event A4H2 (Neighbour becomes better than threshold1 and the Aerial UE altitude becomes lower than a threshold2)

The UE shall:

1> consider the entering condition for this event to be satisfied when both condition A4H2-1 and condition A4H2-2, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A4H2-3 or condition A4H2-4, i.e. at least one of the two, as specified below, is fulfilled.

Inequality A4H2-1 (Entering condition 1)

$$Mn + Ofn + Ocn - Hys1 > Thresh1$$

Inequality A4H2-2 (Entering condition 2)

$$Ms + Hys2 < Thresh2$$

Inequality A4H2-3 (Leaving condition 1)

$$Mn + Ofn + Ocn + Hys1 < Thresh1$$

Inequality A4H2-4 (Leaving condition 2)

$$Ms - Hys2 > Thresh2$$

The variables in the formula are defined as follows:

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Hys1 is the hysteresis parameter for this event (i.e. *a4-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh1 is the threshold parameter for this event (i.e. *a4-Threshold* as defined within *reportConfigNR* for this event).

Ms is the Aerial UE altitude relative to the sea level.

Hys2 is the hysteresis parameter for this event (i.e. *h2-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh2 is the threshold parameter for this event (i.e. *h2-Threshold* as defined within *reportConfigNR* for this event).

Mn is expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, **Ocn**, **Hys1** are expressed in dB.

Thresh1 is expressed in the same unit as **Mn**.

Ms, **Hys2**, **Thresh2** are expressed in meters.

5.5.4.27 Event A5H1 (SpCell becomes worse than threshold1 and neighbour becomes better than threshold2 and the Aerial UE altitude becomes higher than a threshold3)

The UE shall:

1> consider the entering condition for this event to be satisfied when all of condition A5H1-1 and condition A5H1-2 and condition A5H1-3, as specified below, are fulfilled;

1> consider the leaving condition for this event to be satisfied when condition A5H1-4 or condition A5H1-5 or condition A5H1-6, i.e. at least one of the three, as specified below, is fulfilled;

1> use the SpCell for *Mp*.

NOTE: The parameters of the reference signal(s) of the cell(s) that triggers the event are indicated in the *measObjectNR* associated to the event which may be different from the *measObjectNR* of the NR SpCell.

Inequality A5H1-1 (Entering condition 1)

$$Mp + Hys1 < Thresh1$$

Inequality A5H1-2 (Entering condition 2)

$$Mn + Ofn + Ocn - Hys1 > Thresh2$$

Inequality A5H1-3 (Entering condition 3)

$$Ms - Hys2 > Thresh3$$

Inequality A5H1-4 (Leaving condition 1)

$$Mp - Hys1 > Thresh1$$

Inequality A5H1-5 (Leaving condition 2)

$$Mn + Ofn + Ocn + Hys1 < Thresh2$$

Inequality A5H1-6 (Leaving condition 3)

$$Ms + Hys2 < Thresh3$$

The variables in the formula are defined as follows:

Mp is the measurement result of the NR SpCell, not taking into account any offsets.

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Hys1 is the hysteresis parameter for this event (i.e. *a5-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh1 is the threshold parameter for this event (i.e. *a5-Threshold1* as defined within *reportConfigNR* for this event).

Thresh2 is the threshold parameter for this event (i.e. *a5-Threshold2* as defined within *reportConfigNR* for this event).

Ms is the Aerial UE altitude relative to the sea level.

Hys2 is the hysteresis parameter for this event (i.e. *h1-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh3 is the threshold parameter for this event (i.e. *h1-Threshold* as defined within *reportConfigNR* for this event).

Mn, ***Mp*** are expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, ***Ocn***, ***Hys1*** are expressed in dB.

Thresh1 is expressed in the same unit as ***Mp***.

Thresh2 is expressed in the same unit as ***Mn***.

Ms, ***Hys2***, ***Thresh3*** are expressed in meters.

5.5.4.28 Event A5H2 (SpCell becomes worse than threshold1 and neighbour becomes better than threshold2 and the Aerial UE altitude becomes lower than a threshold3)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when all of condition A5H2-1 and condition A5H2-2 and condition A5H2-3, as specified below, are fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition A5H2-4 or condition A5H2-5 or condition A5H2-6, i.e. at least one of the three, as specified below, is fulfilled;
- 1> use the SpCell for *Mp*.

NOTE: The parameters of the reference signal(s) of the cell(s) that triggers the event are indicated in the *measObjectNR* associated to the event which may be different from the *measObjectNR* of the NR SpCell.

Inequality A5H2-1 (Entering condition 1)

$$Mp + Hys1 < Thresh1$$

Inequality A5H2-2 (Entering condition 2)

$$Mn + Ofn + Ocn - Hys1 > Thresh2$$

Inequality A5H2-3 (Entering condition 3)

$$Ms + Hys2 < Thresh3$$

Inequality A5H2-4 (Leaving condition 1)

$$Mp - Hys1 > Thresh1$$

Inequality A5H2-5 (Leaving condition 2)

$$Mn + Ofn + Ocn + Hys1 < Thresh2$$

Inequality A5H2-6 (Leaving condition 3)

$$Ms - Hys2 > Thresh3$$

The variables in the formula are defined as follows:

Mp is the measurement result of the NR SpCell, not taking into account any offsets.

Mn is the measurement result of the neighbouring cell, not taking into account any offsets.

Ofn is the measurement object specific offset of the frequency of the neighbour cell (i.e. *offsetMO* as defined within *measObjectNR* corresponding to the neighbour cell).

Ocn is the cell specific offset of the neighbour cell (i.e. *cellIndividualOffset* as defined within *measObjectNR* corresponding to the frequency of the neighbour cell, or *cellIndividualOffset* as defined within *reportConfigNR*), and set to zero if not configured for the neighbour cell.

Hys1 is the hysteresis parameter for this event (i.e. *a5-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh1 is the threshold parameter for this event (i.e. *a5-Threshold1* as defined within *reportConfigNR* for this event).

Thresh2 is the threshold parameter for this event (i.e. *a5-Threshold2* as defined within *reportConfigNR* for this event).

Ms is the Aerial UE altitude relative to the sea level.

Hys2 is the hysteresis parameter for this event (i.e. *h2-Hysteresis* as defined within *reportConfigNR* for this event).

Thresh3 is the threshold parameter for this event (i.e. *h2-Threshold* as defined within *reportConfigNR* for this event).

Mn, Mp are expressed in dBm in case of RSRP, or in dB in case of RSRQ and RS-SINR.

Ofn, Ocn, Hys1 are expressed in dB.

Thresh1 is expressed in the same unit as **Mp**.

Thresh2 is expressed in the same unit as **Mn**.

Ms, Hys2, Thresh3 are expressed in meters.

5.5.5 Measurement reporting

5.5.5.1 General



Figure 5.5.5.1-1: Measurement reporting

The purpose of this procedure is to transfer measurement results from the UE to the network. The UE shall initiate this procedure only after successful AS security activation.

The UE shall, for each entry in the *VarMeasReportList*:

- 1> if the *eventH1* or *eventH2* is configured in the corresponding *reportConfig* associated with the *measId* that triggered the measurement reporting:
 - 2> for all the entries in the *VarMeasReportList* for which the measurement reporting procedure was triggered and the corresponding *reportConfig* is configured with the same *eventID* and *simulMultiTriggerSingleMeasReport* set to *true*:
 - 3> except for the entry corresponding to the event for which the difference between the configured altitude threshold and the altitude of the UE is the smallest, remove all other measurement reporting entries from the *VarMeasReportList*, if any, and stop the associated periodical reporting timer(s), if running;
- 1> else if the *eventA3H1* or *eventA3H2* or *eventA4H1* or *eventA4H2* or *eventA5H1* or *eventA5H2* is configured in the corresponding *reportConfig* associated with the *measId* that triggered the measurement reporting:
 - 2> for all the entries in the *VarMeasReportList* associated with the same *measObjectNR* for which the measurement reporting procedure was triggered and the corresponding *reportConfig* is configured with the same *eventID* and *simulMultiTriggerSingleMeasReport* set to *true*:
 - 3> except for the entry corresponding to the event for which the difference between the configured altitude threshold and the altitude of the UE is the smallest, remove all other measurement reporting entries from the *VarMeasReportList*, if any, and stop the associated periodical reporting timer(s), if running;

For the *measId* for which the measurement reporting procedure was triggered, the UE shall set the *measResults* within the *MeasurementReport* message as follows:

- 1> set the *measId* to the measurement identity that triggered the measurement reporting;
- 1> for each serving cell configured with *servingCellMO*:
 - 2> if the *reportConfig* associated with the *measId* that triggered the measurement reporting includes *rsType*:

- 3> if the serving cell measurements based on the *rsType* included in the *reportConfig* that triggered the measurement report are available:
 - 4> set the *measResultServingCell* within *measResultServingMOList* to include RSRP, RSRQ and the available SINR of the serving cell, derived based on the *rsType* included in the *reportConfig* that triggered the measurement report;
- 2> else:
 - 3> if SSB based serving cell measurements are available:
 - 4> set the *measResultServingCell* within *measResultServingMOList* to include RSRP, RSRQ and the available SINR of the serving cell, derived based on SSB;
 - 3> else if CSI-RS based serving cell measurements are available:
 - 4> set the *measResultServingCell* within *measResultServingMOList* to include RSRP, RSRQ and the available SINR of the serving cell, derived based on CSI-RS;
- 1> set the *servCellId* within *measResultServingMOList* to include each NR serving cell that is configured with *servingCellMO*, if any;
- 1> if the *reportConfig* associated with the *measId* that triggered the measurement reporting includes *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:
 - 2> for each serving cell configured with *servingCellMO*, include beam measurement information according to the associated *reportConfig* as described in 5.5.5.2;
- 1> if the *reportConfig* associated with the *measId* that triggered the measurement reporting includes *reportAddNeighMeas*:
 - 2> for each *measObjectId* referenced in the *measIdList* which is also referenced with *servingCellMO*, other than the *measObjectId* corresponding with the *measId* that triggered the measurement reporting:
 - 3> if the *measObjectNR* indicated by the *servingCellMO* includes the RS resource configuration corresponding to the *rsType* indicated in the *reportConfig*:
 - 4> set the *measResultBestNeighCell* within *measResultServingMOList* to include the *physCellId* and the available measurement quantities based on the *reportQuantityCell* and *rsType* indicated in *reportConfig* of the non-serving cell corresponding to the concerned *measObjectNR* with the highest measured RSRP if RSRP measurement results are available for cells corresponding to this *measObjectNR*, otherwise with the highest measured RSRQ if RSRQ measurement results are available for cells corresponding to this *measObjectNR*, otherwise with the highest measured SINR;
 - 4> if the *reportConfig* associated with the *measId* that triggered the measurement reporting includes *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:
 - 5> for each best non-serving cell included in the measurement report:
 - 6> include beam measurement information according to the associated *reportConfig* as described in 5.5.5.2;
 - 1> if the *reportConfig* associated with the *measId* that triggered the measurement reporting is set to *eventTriggered* and *eventId* is set to *eventA3*, or *eventA4*, or *eventA5*, or *eventB1*, or *eventB2*, or *eventA3H1*, or *eventA3H2*, or *eventA4H1*, or *eventA4H2*, or *eventA5H1*, or *eventA5H2*:
 - 2> if the UE is in NE-DC and the measurement configuration that triggered this measurement report is associated with the MCG:
 - 3> set the *measResultServFreqListEUTRA-SCG* to include an entry for each E-UTRA SCG serving frequency with the following:
 - 4> include *carrierFreq* of the E-UTRA serving frequency;
 - 4> set the *measResultServingCell* to include the available measurement quantities that the UE is configured to measure by the measurement configuration associated with the SCG;

- 4> if *reportConfig* associated with the *measId* that triggered the measurement reporting includes *reportAddNeighMeas*:
 - 5> set the *measResultServFreqListEUTRA-SCG* to include within *measResultBestNeighCell* the quantities of the best non-serving cell, based on RSRP, on the concerned serving frequency;
- 1> if *reportConfig* associated with the *measId* that triggered the measurement reporting is set to *eventTriggered* and *eventID* is set to *eventA3*, or *eventA4*, or *eventA5*, or *eventA3H1*, or *eventA3H2*, or *eventA4H1*, or *eventA4H2*, or *eventA5H1*, or *eventA5H2*:
- 2> if the UE is in NR-DC and the measurement configuration that triggered this measurement report is associated with the MCG:
- 3> set the *measResultServFreqListNR-SCG* to include for each NR SCG serving cell that is configured with *servingCellMO*, if any, the following:
 - 4> if the *reportConfig* associated with the *measId* that triggered the measurement reporting includes *rsType*:
 - 5> if the serving cell measurements based on the *rsType* included in the *reportConfig* that triggered the measurement report are available according to the measurement configuration associated with the SCG:
 - 6> set the *measResultServingCell* within *measResultServFreqListNR-SCG* to include RSRP, RSRQ and the available SINR of the serving cell, derived based on the *rsType* included in the *reportConfig* that triggered the measurement report;
 - 4> else:
 - 5> if SSB based serving cell measurements are available according to the measurement configuration associated with the SCG:
 - 6> set the *measResultServingCell* within *measResultServFreqListNR-SCG* to include RSRP, RSRQ and the available SINR of the serving cell, derived based on SSB;
 - 5> else if CSI-RS based serving cell measurements are available according to the measurement configuration associated with the SCG:
 - 6> set the *measResultServingCell* within *measResultServFreqListNR-SCG* to include RSRP, RSRQ and the available SINR of the serving cell, derived based on CSI-RS;
- 4> if results for the serving cell derived based on SSB are included:
 - 5> include the *ssbFrequency* to the value indicated by *ssbFrequency* as included in the *MeasObjectNR* of the serving cell;
- 4> if results for the serving cell derived based on CSI-RS are included:
 - 5> include the *refFreqCSI-RS* to the value indicated by *refFreqCSI-RS* as included in the *MeasObjectNR* of the serving cell;
- 4> if the *reportConfig* associated with the *measId* that triggered the measurement reporting includes *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:
 - 5> for each serving cell configured with *servingCellMO*, include beam measurement information according to the associated *reportConfig* as described in 5.5.5.2, where availability is considered according to the measurement configuration associated with the SCG;
- 4> if *reportConfig* associated with the *measId* that triggered the measurement reporting includes *reportAddNeighMeas*:
 - 5> if the *measObjectNR* indicated by the *servingCellMO* includes the RS resource configuration corresponding to the *rsType* indicated in the *reportConfig*:
 - 6> set the *measResultNeighCellListNR* within *measResultServFreqListNR-SCG* to include one entry with the *physCellId* and the available measurement quantities based on the

reportQuantityCell and *rsType* indicated in *reportConfig* of the non-serving cell corresponding to the concerned *measObjectNR* with the highest measured RSRP if RSRP measurement results are available for cells corresponding to this *measObjectNR*, otherwise with the highest measured RSRQ if RSRQ measurement results are available for cells corresponding to this *measObjectNR*, otherwise with the highest measured SINR, where availability is considered according to the measurement configuration associated with the SCG;

7> if the *reportConfig* associated with the *measId* that triggered the measurement reporting includes *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport*:

8> for each best non-serving cell included in the measurement report:

9> include beam measurement information according to the associated *reportConfig* as described in 5.5.5.2, where availability is considered according to the measurement configuration associated with the SCG;

1> if the *measRSSI-ReportConfig* is configured within the corresponding *reportConfig* for this *measId*:

2> set the *rsSI-Result* to the linear average of sample value(s) provided by lower layers in the *reportInterval*;

2> set the *channelOccupancy* to the rounded percentage of sample values which are beyond the *channelOccupancyThreshold* within all the sample values in the *reportInterval*;

1> if the UE is acting as L2 U2N Remote UE:

2> set the *sl-MeasResultServingRelay* in accordance with the following:

3> set the *cellIdentity* to include the *cellAccessRelatedInfo* contained in the discovery message received from the serving L2 U2N Relay UE;

3> set the *sl-RelayUE-Identity* to include the Source L2 ID of the serving L2 U2N Relay;

3> if the measurement of serving L2 U2N Relay UE is based on SL-RSRP:

4> set the *sl-MeasResult* to include the SL-RSRP of the serving L2 U2N Relay UE;

4> set the *sl-MeasQuantity* to *sl-rsrp*, if supported by the UE;

3> else:

4> set the *sl-MeasResult* to include the SD-RSRP of the serving L2 U2N Relay UE;

4> set the *sl-MeasQuantity* to *sd-rsrp*, if supported by the UE;

NOTE 1: In case of no data transmission from L2 U2N Relay UE to L2 U2N Remote UE, it is left to UE implementation whether to use SL-RSRP or SD-RSRP when setting the *sl-MeasResultServingRelay* of the serving L2 U2N Relay UE.

1> if there is at least one applicable neighbouring cell or candidate L2 U2N Relay UE to report:

2> if the *reportType* is set to *eventTriggered* or *periodical*:

3> if the measurement report concerns the candidate L2 U2N Relay UE:

4> set the *sl-MeasResultsCandRelay* in *measResultNeighCells* to include the best candidate L2 U2N Relay UEs up to *maxNrofRelayMeas* in accordance with the following:

5> if the *reportType* is set to *eventTriggered*:

6> include the L2 U2N Relay UEs included in the *relaysTriggeredList* as defined within the *VarMeasReportList* for this *measId*;

5> else:

6> include the applicable L2 U2N Relay UEs for which the new measurement results became available since the last periodical reporting or since the measurement was initiated or reset;

- 5> for each L2 U2N Relay UE that is included in the *sl-MeasResultsCandRelay*:
 - 6> set the *cellIdentity* to include the *cellAccessRelatedInfo* contained in the discovery message received from the concerned L2 U2N Relay UE;
 - 6> set the *sl-RelayUE-Identity* to include the Source L2 ID of the concerned L2 U2N Relay UE;
 - 6> set the *sl-MeasResult* to include the SD-RSRP of the concerned L2 U2N Relay UE;
- 5> for each included L2 U2N Relay UE, include the layer 3 filtered measured results in accordance with the *reportConfig* for this *measId*, ordered as follows:
 - 6> set the *sl-MeasResult* to include the quantity(ies) indicated in the *reportQuantityRelay* within the concerned *reportConfigRelay* in decreasing order of the sorting quantity, determined as specified in 5.5.5.3, i.e. the best L2 U2N Relay UE is included first;
 - 6> if the UE supports *multipathRemoteUE-PC5L2* and idle/inactive relay UE reporting, and if the *sl-RelayIndication* is contained in the discovery message received from the concerned L2 U2N Relay UE:
 - 7> set the *sl-RelayIndicationMP* in the *sl-MeasResultsCandRelay*;
- 3> else:
 - 4> set the *measResultNeighCells* to include the best neighbouring cells up to *maxReportCells* in accordance with the following:
 - 5> if the *reportType* is set to *eventTriggered* and *eventId* is not set to *eventD1* or *eventD2* or *eventH1* or *eventH2*:
 - 6> include the cells included in the *cellsTriggeredList* as defined within the *VarMeasReportList* for this *measId*;
 - 5> else:
 - 6> include the applicable cells for which the new measurement results became available since the last periodical reporting or since the measurement was initiated or reset;
 - 5> for each cell that is included in the *measResultNeighCells*, include the *physCellId*;
 - 5> if the *reportType* is set to *eventTriggered* or *periodical*:
 - 6> for each included cell, include the layer 3 filtered measured results in accordance with the *reportConfig* for this *measId*, ordered as follows:
 - 7> if the *measObject* associated with this *measId* concerns NR:
 - 8> if *rsType* in the associated *reportConfig* is set to *ssb*:
 - 9> set *resultsSSB-Cell* within the *measResult* to include the SS/PBCH block based quantity(ies) indicated in the *reportQuantityCell* within the concerned *reportConfig*, in decreasing order of the sorting quantity, determined as specified in 5.5.5.3, i.e. the best cell is included first;
 - 9> if *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport* are configured, include beam measurement information as described in 5.5.5.2;
 - 8> else if *rsType* in the associated *reportConfig* is set to *csi-rs*:
 - 9> set *resultsCSI-RS-Cell* within the *measResult* to include the CSI-RS based quantity(ies) indicated in the *reportQuantityCell* within the concerned *reportConfig*, in decreasing order of the sorting quantity, determined as specified in 5.5.5.3, i.e. the best cell is included first;
 - 9> if *reportQuantityRS-Indexes* and *maxNrofRS-IndexesToReport* are configured, include beam measurement information as described in 5.5.5.2;

- 7> if the *measObject* associated with this *measId* concerns E-UTRA:
 - 8> set the *measResult* to include the quantity(ies) indicated in the *reportQuantity* within the concerned *reportConfigInterRAT* in decreasing order of the sorting quantity, determined as specified in 5.5.5.3, i.e. the best cell is included first;
- 7> if the *measObject* associated with this *measId* concerns UTRA-FDD and if *ReportConfigInterRAT* includes the *reportQuantityUTRA-FDD*:
 - 8> set the *measResult* to include the quantity(ies) indicated in the *reportQuantityUTRA-FDD* within the concerned *reportConfigInterRAT* in decreasing order of the sorting quantity, determined as specified in 5.5.5.3, i.e. the best cell is included first;
- 6> if *reportType* is set to *eventTriggered* and *reportOnBestCellChange* is configured:
 - 7> if *reportOnBestCellChange* is set to *n1*:
 - 8> set the *reportedBestNeighbourCell* defined within the *VarMeasReportList* for this *measId* to the first cell listed in the *measResultNeighCells*;
 - 7> if *reportOnBestCellChange* is set to *n2*:
 - 8> set the first cell in *reportedBestNeighbourCell* defined within the *VarMeasReportList* for this *measId* to the first cell listed in the *measResultNeighCells* and the second cell in *reportedBestNeighbourCell* defined within the *VarMeasReportList* for this *measId* to the second cell listed in the *measResultNeighCells*, if available;
- 2> else:
 - 3> if the cell indicated by *cellForWhichToReportCGI* is an NR cell:
 - 4> if *plmn-IdentityInfoList* of the *cgi-Info* for the concerned cell has been obtained:
 - 5> include the *plmn-IdentityInfoList* including *plmn-IdentityList*, *trackingAreaCode* (if available), *trackingAreaList* (if available), *ranac* (if available), *cellIdentity* and *cellReservedForOperatorUse* for each entry of the *plmn-IdentityInfoList*;
 - 5> include *frequencyBandList* if available;
 - 5> for each *PLMN-IdentityInfo* in *plmn-IdentityInfoList*:
 - 6> if the *gNB-ID-Length* is broadcast:
 - 7> include *gNB-ID-Length*;
 - 4> if *nr-CGI-Reporting-NPN* is supported by the UE and *nnp-IdentityInfoList* of the *cgi-Info* for the concerned cell has been obtained:
 - 5> include the *nnp-IdentityInfoList* including *nnp-IdentityList*, *trackingAreaCode*, *ranac* (if available), *cellIdentity* and *cellReservedForOperatorUse* for each entry of the *nnp-IdentityInfoList*;
 - 5> for each *NPN-IdentityInfo* in *NPN-IdentityInfoList*:
 - 6> if the *gNB-ID-Length* is broadcast:
 - 7> include *gNB-ID-Length*;
 - 5> include *cellReservedForOtherUse* if available;
 - 4> else if *MIB* indicates the *SIB1* is not broadcast:
 - 5> include the *noSIB1* including the *ssb-SubcarrierOffset* and *pdccch-ConfigSIB1* obtained from *MIB* of the concerned cell;
 - 3> if the cell indicated by *cellForWhichToReportCGI* is an E-UTRA cell:
 - 4> if all mandatory fields of the *cgi-Info-EPC* for the concerned cell have been obtained:

- 5> include in the *cgi-Info-EPC* the fields broadcasted in E-UTRA *SystemInformationBlockType1* associated to EPC;
- 4> if the UE is E-UTRA/5GC capable and all mandatory fields of the *cgi-Info-5GC* for the concerned cell have been obtained:
 - 5> include in the *cgi-Info-5GC* the fields broadcasted in E-UTRA *SystemInformationBlockType1* associated to 5GC;
 - 4> if the mandatory present fields of the *cgi-Info* for the cell indicated by the *cellForWhichToReportCGI* in the associated *measObject* have been obtained:
 - 5> include the *freqBandIndicator*;
 - 5> if the cell broadcasts the *multiBandInfoList*, include the *multiBandInfoList*;
 - 5> if the cell broadcasts the *freqBandIndicatorPriority*, include the *freqBandIndicatorPriority*;
- 1> if *reportConfig* associated with the *measId* that triggered the measurement reporting is set to *eventTriggered* and if *enteringLeavingReport* is configured:
 - 2> for each cell that is included in *measResultNeighCells*:
 - 3> if the *measObject* associated with this *measId* concerns NR:
 - 4> if event entry condition for the event that triggered this measurement report has been fulfilled for the cell and the cell has just been included to *cellsTriggeredList*:
 - 5> set *entering* to *true* for the concerned NR cell;
 - 2> if the field *cellsMetLeavingCond* within the *VarMeasReportList* for this *measId* is not empty:
 - 3> set *cellsMetReportOnLeaveList* to include the cell(s) in *cellsMetLeavingCond*;
 - 1> if the corresponding *measObject* concerns NR:
 - 2> if the *reportSFTD-Meas* is set to *true* within the corresponding *reportConfigNR* for this *measId*:
 - 3> set the *measResultSFTD-NR* in accordance with the following:
 - 4> set *sfn-OffsetResult* and *frameBoundaryOffsetResult* to the measurement results provided by lower layers;
 - 4> if the *reportRSRP* is set to *true*:
 - 5> set *rsrp-Result* to the RSRP of the NR PSCell derived based on SSB;
 - 2> else if the *reportSFTD-NeighMeas* is included within the corresponding *reportConfigNR* for this *measId*:
 - 3> for each applicable cell which measurement results are available, include an entry in the *measResultCellListSFTD-NR* and set the contents as follows:
 - 4> set *physCellId* to the physical cell identity of the concerned NR neighbour cell.
 - 4> set *sfn-OffsetResult* and *frameBoundaryOffsetResult* to the measurement results provided by lower layers;
 - 4> if the *reportRSRP* is set to *true*:
 - 5> set *rsrp-Result* to the RSRP of the concerned cell derived based on SSB;
 - 1> else if the corresponding *measObject* concerns E-UTRA:
 - 2> if the *reportSFTD-Meas* is set to *true* within the corresponding *reportConfigInterRAT* for this *measId*:
 - 3> set the *measResultSFTD-EUTRA* in accordance with the following:

- 4> set *sfn-OffsetResult* and *frameBoundaryOffsetResult* to the measurement results provided by lower layers;
- 4> if the *reportRSRP* is set to *true*;
 - 5> set *rsrpResult-EUTRA* to the RSRP of the EUTRA PSCell;
- 1> if average uplink PDCP delay values are available:
 - 2> set the *ul-PDCP-DelayValueResultList* to include the corresponding average uplink PDCP delay values;
- 1> if PDCP excess delay measurements are available:
 - 2> set the *ul-PDCP-ExcessDelayResultList* to include the corresponding PDCP excess delay measurements;
- 1> if the *includeCommonLocationInfo* is configured in the corresponding *reportConfig* for this *measId* and detailed location information that has not been reported is available, set the content of *commonLocationInfo* of the *locationInfo* as follows:
 - 2> include the *locationTimestamp*;
 - 2> include the *locationCoordinate*, if available;
 - 2> include the *velocityEstimate*, if available;
 - 2> include the *locationError*, if available;
 - 2> include the *locationSource*, if available;
 - 2> if available, include the *gnss-TOD-msec*;
- 1> if the *coarseLocationRequest* is set to *true* in the corresponding *reportConfig* for this *measId*:
 - 2> include *coarseLocationInfo*, if available;
- 1> if the *includeWLAN-Meas* is configured in the corresponding *reportConfig* for this *measId*, set the *wlan-LocationInfo* of the *locationInfo* in the *measResults* as follows:
 - 2> if available, include the *LogMeasResultWLAN*, in order of decreasing RSSI for WLAN APs;
- 1> if the *includeBT-Meas* is configured in the corresponding *reportConfig* for this *measId*, set the *BT-LocationInfo* of the *locationInfo* in the *measResults* as follows:
 - 2> if available, include the *LogMeasResultBT*, in order of decreasing RSSI for Bluetooth beacons;
- 1> if the *includeSensor-Meas* is configured in the corresponding *reportConfig* for this *measId*, set the *sensor-LocationInfo* of the *locationInfo* in the *measResults* as follows:
 - 2> if available, include the *sensor-MeasurementInformation*;
 - 2> if available, include the *sensor-MotionInformation*;
- 1> if the *includeAltitudeUE* is set to *true* in the corresponding *reportConfig* for this *measId*:
 - 2> set the *altitudeUE* to include the altitude of the UE;
- 1> if there is at least one applicable transmission resource pool for NR sidelink communication/discovery (for *measResultsSL*):
 - 2> set the *measResultsListSL* to include the CBR measurement results in accordance with the following:
 - 3> if the *reportType* is set to *eventTriggered*:
 - 4> include the transmission resource pools included in the *poolsTriggeredList* as defined within the *VarMeasReportList* for this *measId*;
 - 3> else:

- 4> include the applicable transmission resource pools for which the new measurement results became available since the last periodical reporting or since the measurement was initiated or reset;
- 3> if the corresponding *measObject* concerns NR sidelink communication/discovery, then for each transmission resource pool to be reported:
 - 4> set the *sl-poolReportIdentity* to the identity of this transmission resource pool;
 - 4> set the *sl-CBR-ResultsNR* to the CBR measurement results on PSSCH and PSCCH of this transmission resource pool provided by lower layers, if available;

NOTE 1: Void.

- 1> if there is at least one applicable CLI measurement resource to report:
 - 2> if the *reportType* is set to *cli-EventTriggered* or *cli-Periodical*:
 - 3> set the *measResultCLI* to include the most interfering SRS resources or most interfering CLI-RSSI resources up to *maxReportCLI* in accordance with the following:
 - 4> if the *reportType* is set to *cli-EventTriggered*:
 - 5> if trigger quantity is set to *srs-RSRP* i.e. *i1-Threshold* is set to *srs-RSRP*:
 - 6> include the SRS resource included in the *cli-TriggeredList* as defined within the *VarMeasReportList* for this *measId*;
 - 5> if trigger quantity is set to *cli-RSSI* i.e. *i1-Threshold* is set to *cli-RSSI*:
 - 6> include the CLI-RSSI resource included in the *cli-TriggeredList* as defined within the *VarMeasReportList* for this *measId*;
 - 4> else:
 - 5> if *reportQuantityCLI* is set to *srs-rsrp*:
 - 6> include the applicable SRS resources for which the new measurement results became available since the last periodical reporting or since the measurement was initiated or reset;
 - 5> else:
 - 6> include the applicable CLI-RSSI resources for which the new measurement results became available since the last periodical reporting or since the measurement was initiated or reset;
 - 4> for each SRS resource that is included in the *measResultCLI*:
 - 5> include the *srs-ResourceId*;
 - 5> set *srs-RSRP-Result* to include the layer 3 filtered measured results in decreasing order, i.e. the most interfering SRS resource is included first;
 - 4> for each CLI-RSSI resource that is included in the *measResultCLI*:
 - 5> include the *rsss-ResourceId*;
 - 5> set *cli-RSSI-Result* to include the layer 3 filtered measured results in decreasing order, i.e. the most interfering CLI-RSSI resource is included first;
- 1> if there is at least one applicable UE Rx-Tx time difference measurement to report:
 - 2> set *measResultRxTxTimeDiff* to the latest measurement result;
- 1> increment the *numberOfReportsSent* as defined within the *VarMeasReportList* for this *measId* by 1;
- 1> stop the periodical reporting timer, if running;
- 1> if the *numberOfReportsSent* as defined within the *VarMeasReportList* for this *measId* is less than the *reportAmount* as defined within the corresponding *reportConfig* for this *measId*:

- 2> start the periodical reporting timer with the value of *reportInterval* as defined within the corresponding *reportConfig* for this *measId*;
- 1> else:
 - 2> if the *reportType* is set to *periodical* or *cli-Periodical* or *rxTxPeriodical*:
 - 3> remove the entry within the *VarMeasReportList* for this *measId*;
 - 3> remove this *measId* from the *measIdList* within *VarMeasConfig*;
 - 1> if the measurement reporting was configured by a *sl-ConfigDedicatedNR* received within the *RRCConnectionReconfiguration*:
 - 2> submit the *MeasurementReport* message to lower layers for transmission via SRB1, embedded in E-UTRA RRC message *ULInformationTransferIRAT* as specified TS 36.331 [10], clause 5.6.28;
 - 1> else if the UE is in (NG)EN-DC:
 - 2> if SRB3 is configured and the SCG is not deactivated:
 - 3> submit the *MeasurementReport* message via SRB3 to lower layers for transmission, upon which the procedure ends;
 - 2> else:
 - 3> submit the *MeasurementReport* message via E-UTRA embedded in E-UTRA RRC message *ULInformationTransferMRDC* as specified in TS 36.331 [10].
 - 1> else if the UE is in NR-DC:
 - 2> if the measurement configuration that triggered this measurement report is associated with the SCG:
 - 3> if SRB3 is configured and the SCG is not deactivated:
 - 4> submit the *MeasurementReport* message via SRB3 to lower layers for transmission, upon which the procedure ends;
 - 3> else:
 - 4> submit the *MeasurementReport* message via SRB1 embedded in NR RRC message *ULInformationTransferMRDC* as specified in 5.7.2a.3;
 - 2> else:
 - 3> submit the *MeasurementReport* message via SRB1 to lower layers for transmission, upon which the procedure ends;
 - 1> else:
 - 2> submit the *MeasurementReport* message to lower layers for transmission, upon which the procedure ends.

5.5.5.2 Reporting of beam measurement information

For beam measurement information to be included in a measurement report the UE shall:

- 1> if *reportType* is set to *eventTriggered* or *reportOnScellActivation*:
 - 2> consider the trigger quantity as the sorting quantity if available, otherwise RSRP as sorting quantity if available, otherwise RSRQ as sorting quantity if available, otherwise SINR as sorting quantity;
- 1> if *reportType* is set to *periodical*:
 - 2> if a single reporting quantity is set to *true* in *reportQuantityRS-Indexes*;
 - 3> consider the configured single quantity as the sorting quantity;

- 2> else:
 - 3> if *rsrp* is set to *true*;
 - 4> consider RSRP as the sorting quantity;
 - 3> else:
 - 4> consider RSRQ as the sorting quantity;
- 1> set *rsIndexResults* to include up to *maxNrofRS-IndexesToReport* SS/PBCH block indexes or CSI-RS indexes in order of decreasing sorting quantity as follows:
 - 2> if the measurement information to be included is based on SS/PBCH block:
 - 3> include within *resultsSSB-Indexes* the index associated to the best beam for that SS/PBCH block sorting quantity and if *absThreshSS-BlocksConsolidation* is included in the *VarMeasConfig* for the *measObject* associated to the cell for which beams are to be reported, the remaining beams whose sorting quantity is above *absThreshSS-BlocksConsolidation*;
 - 3> if *includeBeamMeasurements* is set to *true*, include the SS/PBCH based measurement results for the quantities in *reportQuantityRS-Indexes* for each SS/PBCH block index;
 - 2> else if the beam measurement information to be included is based on CSI-RS:
 - 3> include within *resultsCSI-RS-Indexes* the index associated to the best beam for that CSI-RS sorting quantity and, if *absThreshCSI-RS-Consolidation* is included in the *VarMeasConfig* for the *measObject* associated to the cell for which beams are to be reported, the remaining beams whose sorting quantity is above *absThreshCSI-RS-Consolidation*;
 - 3> if *includeBeamMeasurements* is set to *true*, include the CSI-RS based measurement results for the quantities in *reportQuantityRS-Indexes* for each CSI-RS index.

5.5.5.3 Sorting of cell measurement results

The UE shall determine the sorting quantity according to parameters of the *reportConfig* associated with the *measId* that triggered the reporting:

- 1> if the *reportType* is set to *eventTriggered*:
 - 2> for an NR cell, consider the quantity used in the *aN-Threshold* (for *eventA1*, *eventA2*, *eventA4*, *eventA4H1* and *eventA4H2*) or in the *a5-Threshold2* (for *eventA5*, *eventA5H1* and *eventA5H2*) or in the *aN-Offset* (for *eventA3*, *eventA3H1*, *eventA3H2* and *eventA6*) or in the *x1-Threshold2* (for *eventX1*) as the sorting quantity;
 - 2> for an E-UTRA cell, consider the quantity used in the *bN-ThresholdEUTRA* as the sorting quantity;
 - 2> for an UTRA-FDD cell, consider the quantity used in the *bN-ThresholdUTRA-FDD* as the sorting quantity;
 - 2> for a candidate L2 U2N Relay UE, consider the *y1-Threshold2-Relay* (for *eventY1-Relay*) or *y2-Threshold-Relay* (for *eventY2-Relay*) or *z1-Threshold2-Relay* (for *eventZ1*) as the sorting quantity;
- 1> if the *reportType* is set to *periodical*:
 - 2> determine the sorting quantity according to *reportQuantityCell* for an NR cell, and according to *reportQuantity* for an E-UTRA cell, as below:
 - 3> if a single quantity is set to *true*:
 - 4> consider this quantity as the sorting quantity;
 - 3> else:
 - 4> if *rsrp* is set to *true*;
 - 5> consider RSRP as the sorting quantity;
 - 4> else:

- 5> consider RSRQ as the sorting quantity;
- 2> determine the sorting quantity according to *reportQuantityUTRA-FDD* for UTRA-FDD cell, as below:
 - 3> if a single quantity is set to *true*:
 - 4> consider this quantity as the sorting quantity;
 - 3> else:
 - 4> consider RSCP as the sorting quantity.
- 2> for a candidate L2 U2N Relay UE, consider the *reportQuantityRelay* as the sorting quantity;

5.5.6 Location measurement indication

5.5.6.1 General

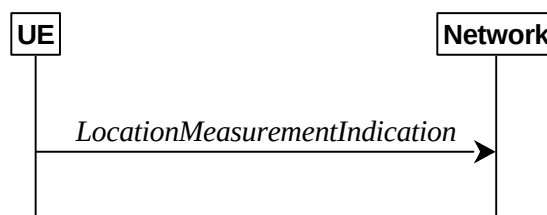 


Figure 5.5.6.1-1: Location measurement indication

The purpose of this procedure is to indicate to the network that the UE is going to start/stop location related measurements towards E-UTRA or NR which require measurement gaps or start/stop detection of subframe and slot timing towards E-UTRA (*eutra-FineTimingDetection*) which requires measurement gaps. UE shall initiate this procedure only after successful AS security activation.

NOTE: It is a network decision to configure the measurement gap.

5.5.6.2 Initiation

The UE shall:

- 1> if and only if upper layers indicate to start performing location measurements towards E-UTRA or NR or start subframe and slot timing detection towards E-UTRA, and the UE requires measurement gaps for these operations while measurement gaps are either not configured or not sufficient:
- 2> if preconfigured measurement gaps for positioning and *posMG-Request* are configured and the UE considers that at least one of the preconfigured measurement gaps for positioning is sufficient for the location measurement when activated:
 - 3> trigger the lower layers to initiate the measurement gap activation request using UL MAC CE as specified in TS 38.321 [3];
- 2> else:
 - 3> initiate the procedure to indicate start as specified in clause 5.5.6.3;

NOTE 1: The UE verifies the measurement gap situation only upon receiving the indication from upper layers. If at this point in time sufficient gaps are available, the UE does not initiate the procedure. Unless it receives a new indication from upper layers, the UE is only allowed to further repeat the procedure in the same PCell once per frequency of the target RAT if the provided measurement gaps are insufficient.

NOTE 1a: When indication is received from upper layers for performing location measurement and there is pre-configured measurement gap configured (not preconfigured measurement gap for positioning), the UE considers this preconfigured measurement gap to be not sufficient if the measurement gap is not considered to be always activated according to clause 9.1.7.2 of TS 38.133 [14].

- 1> if and only if upper layers indicate to stop performing location measurements towards E-UTRA or NR or stop subframe and slot timing detection towards E-UTRA:
- 2> if there is no activated preconfigured measurement gap for positioning:
 - 3> if there is previously triggered UL MAC CE transmission for the measurement gap activation for positioning:
 - 4> indicate to the lower layers to cancel the triggered UL MAC CE transmission for the measurement gap activation as specified in TS 38.321 [3];
- 2> else if there is activated preconfigured measurement gap for positioning:
 - 3> trigger the lower layers to deactivate all the activated measurement gap(s) for positioning as specified in TS 38.321 [3].
- 2> if there is configured measurement gap used for positioning and the measurement gap is not the activated preconfigured measurement gap for positioning:
 - 3> initiate the procedure to indicate stop as specified in 5.5.6.3.

NOTE 2: The UE may initiate the procedure to indicate stop even if it did not previously initiate the procedure to indicate start.

5.5.6.3 Actions related to transmission of *LocationMeasurementIndication* message

The UE shall set the contents of *LocationMeasurementIndication* message as follows:

- 1> if the procedure is initiated to indicate start of location related measurements:
 - 2> if the procedure is initiated for RSTD measurements towards E-UTRA:
 - 3> set the *measurementIndication* to the *eutra-RSTD* according to the information received from upper layers;
 - 2> else if the procedure is initiated for positioning measurement towards NR:
 - 3> set the *measurementIndication* to the *nr-PRS-Measurement* according to the information received from upper layers;
- 1> else if the procedure is initiated to indicate stop of location related measurements:
 - 2> set the *measurementIndication* to the value *release*;
- 1> if the procedure is initiated to indicate start of subframe and slot timing detection towards E-UTRA:
 - 2> set the *measurementIndication* to the value *eutra-FineTimingDetection*;
- 1> else if the procedure is initiated to indicate stop of subframe and slot timing detection towards E-UTRA:
 - 2> set the *measurementIndication* to the value *release*;
- 1> submit the *LocationMeasurementIndication* message to lower layers for transmission, upon which the procedure ends.

5.5a Logged Measurements

5.5a.1 Logged Measurement Configuration

5.5a.1.1 General

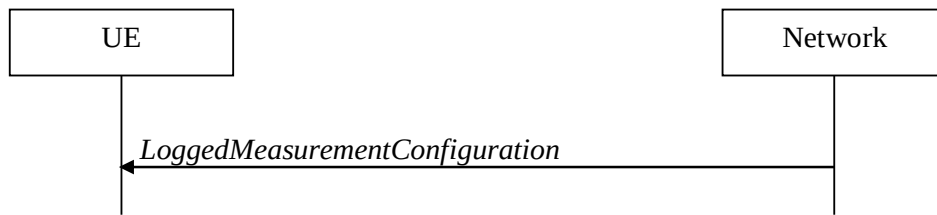 


Figure 5.5a.1.1-1: Logged measurement configuration

The purpose of this procedure is to configure the UE to perform logging of measurement results while in RRC_IDLE and RRC_INACTIVE. The procedure applies to logged measurements capable UEs that are in RRC_CONNECTED.

NOTE: NG-RAN may retrieve stored logged measurement information by means of the UE information procedure.

5.5a.1.2 Initiation

NG-RAN initiates the logged measurement configuration procedure to UE in RRC_CONNECTED by sending the *LoggedMeasurementConfiguration* message.

5.5a.1.3 Reception of the *LoggedMeasurementConfiguration* by the UE

Upon receiving the *LoggedMeasurementConfiguration* message the UE shall:

- 1> discard the logged measurement configuration as well as the logged measurement information as specified in 5.5a.2;
- 1> store the received *loggingDuration*, *reportType* and *areaConfiguration*, if included, in *VarLogMeasConfig*;
- 1> If the UE is in SNPN access mode:
 - 2> if the *LoggedMeasurementConfiguration* message includes *snpn-ConfigList*:
 - 3> set the *snpn-ConfigID-List* in *VarLogMeasReport* to include the current registered SNPN identity as well as SNPN identities in *snpn-Config-List*;
 - 2> else:
 - 3> set the *snpn-ConfigID-List* in *VarLogMeasReport* to include the current registered SNPN identity;
- 1> else if the *LoggedMeasurementConfiguration* message includes *plmn-IdentityList*:
 - 2> set *plmn-IdentityList* in *VarLogMeasReport* to include the RPLMN as well as the PLMNs included in *plmn-IdentityList*;
- 1> else:
 - 2> set *plmn-IdentityList* in *VarLogMeasReport* to include the RPLMN;
- 1> store the received *absoluteTimeInfo*, *traceReference*, *traceRecordingSessionRef*, and *tce-Id* in *VarLogMeasReport*;
- 1> store the received *bt-NameList*, if included, in *VarLogMeasConfig*;
- 1> store the received *wlan-NameList*, if included, in *VarLogMeasConfig*;
- 1> store the received *sensor-NameList*, if included, in *VarLogMeasConfig*;
- 1> start timer T330 with the timer value set to the *loggingDuration*;

- 1> store the received *sigLoggedMeasType*, if included, in *VarLogMeasReport*;
- 1> store the received *earlyMeasIndication*, if included, in *VarLogMeasConfig*;

5.5a.1.4 T330 expiry

Upon expiry of T330 the UE shall:

- 1> release *VarLogMeasConfig*;

The UE is allowed to discard stored logged measurements, i.e. to release *VarLogMeasReport*, 48 hours after T330 expiry.

5.5a.2 Release of Logged Measurement Configuration

5.5a.2.1 General

The purpose of this procedure is to release the logged measurement configuration as well as the logged measurement information.

5.5a.2.2 Initiation

The UE shall initiate the procedure upon receiving a logged measurement configuration in same or another RAT. The UE shall also initiate the procedure upon power off or upon deregistration.

The UE shall:

- 1> stop timer T330, if running;
- 1> if stored, discard the logged measurement configuration as well as the logged measurement information, i.e. release the UE variables *VarLogMeasConfig* and *VarLogMeasReport*.

5.5a.3 Measurements logging

5.5a.3.1 General

This procedure specifies the logging of available measurements by a UE in RRC_IDLE and RRC_INACTIVE that has a logged measurement configuration. The actual process of logging within the UE, takes place in RRC_IDLE state could continue in RRC_INACTIVE state or vice versa.

5.5a.3.2 Initiation

While T330 is running and SDT procedure is not ongoing, the UE shall:

- 1> if measurement logging is suspended:
 - 2> if during the last logging interval the IDC problems detected by the UE is resolved, resume measurement logging;
- 1> if not suspended, perform the logging in accordance with the following:
 - 2> if the *reportType* is set to *periodical* in the *VarLogMeasConfig*:
 - 3> if the UE is in any cell selection state (as specified in TS 38.304 [20]):
 - 4> perform the logging at regular time intervals, as defined by the *loggingInterval* in the *VarLogMeasConfig*;
 - 3> if the UE is in camped normally state on an NR cell and if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*; or

- 3> if the UE is in camped normally state on an NR cell and if the registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*:
 - 4> if *areaConfiguration* is not included in *VarLogMeasConfig*; or
 - 4> if the serving cell is part of the area indicated by *areaConfig* in *areaConfiguration* in *VarLogMeasConfig*; or
 - 4> if the serving cell is part of the area indicated by *cag-ConfigList* in *areaConfiguration* in *VarLogMeasConfig*; or
 - 4> if the serving cell is part of the area indicated by *snpn-ConfigList* in *areaConfiguration* in *VarLogMeasConfig*:
 - 5> perform the logging at regular time intervals, as defined by the *loggingInterval* in the *VarLogMeasConfig*;
- 2> else if the *reportType* is set to *eventTriggered*, and *eventType* is set to *outOfCoverage*:
 - 3> perform the logging at regular time intervals as defined by the *loggingInterval* in *VarLogMeasConfig* only when the UE is in any cell selection state;
 - 3> upon transition from any cell selection state to camped normally state in NR:
 - 4> if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*, or if the registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*; and
 - 4> if *areaConfiguration* is not included in *VarLogMeasConfig* or if the current camping cell is part of the area indicated by *areaConfig* of *areaConfiguration* in *VarLogMeasConfig*, or if the current camping cell is part of the area indicated by *cag-ConfigList* of *areaConfiguration* in *VarLogMeasConfig*, or if the current camping cell is part of the area indicated by *snpn-ConfigList* of *areaConfiguration* in *VarLogMeasConfig*:
 - 5> perform the logging;
- 2> else if the *reportType* is set to *eventTriggered* and *eventType* is set to *eventL1*:
 - 3> if the UE is in camped normally state on an NR cell and if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*; or
 - 3> if the UE is in camped normally state on an NR cell and if the registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*:
 - 4> if *areaConfiguration* is not included in *VarLogMeasConfig*; or
 - 4> if the serving cell is part of the area indicated by *areaConfig* in *areaConfiguration* in *VarLogMeasConfig*; or
 - 4> if the current serving cell is part of the area indicated by *cag-ConfigList* of *areaConfiguration* in *VarLogMeasConfig*, or if the current camping cell is part of the area indicated by *snpn-ConfigList* of *areaConfiguration* in *VarLogMeasConfig*:
 - 5> perform the logging at regular time intervals as defined by the *loggingInterval* in *VarLogMeasConfig* only when the conditions indicated by the *eventL1* are met;
- 2> when performing the logging:
 - 3> if *InterFreqTargetInfo* is configured and if the UE detected IDC problems on at least one of the frequencies included in *InterFreqTargetInfo* or any inter-RAT frequency during the last logging interval, or
 - 3> if *InterFreqTargetInfo* is not configured and if the UE detected IDC problems during the last logging interval:
 - 4> if *measResultServingCell* in the *VarLogMeasReport* is not empty:
 - 5> include *inDeviceCoexDetected*;

- 5> suspend measurement logging from the next logging interval;
 - 4> else:
 - 5> suspend measurement logging;
- NOTE 0: If the UE detected and resolved IDC problem during the last logging interval, the UE does not suspend measurement logging from the next logging interval and does not suspend measurement logging for the last logging interval.
- 3> set the *relativeTimeStamp* to indicate the elapsed time since the moment at which the logged measurement configuration was received;
 - 3> if location information became available during the last logging interval, set the content of the *locationInfo* as in 5.3.3.7;
 - 3> if the UE is in any cell selection state (as specified in TS 38.304 [20]):
 - 4> set *anyCellSelectionDetected* to indicate the detection of no suitable or no acceptable cell found;
 - 4> if the *reportType* is set to *eventTriggered* in the *VarLogMeasConfig*; and
 - 4> if the RPLMN at the time of entering the any cell selection state is included in *plmn-IdentityList* stored in *VarLogMeasReport* or if the registered SNPN identity at the time of entering the any cell selection state is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*; and
 - 4> if *areaConfiguration* is not included in *VarLogMeasConfig* or if the last suitable cell that the UE was camping on is part of the area indicated by *areaConfig* of *areaConfiguration* in *VarLogMeasConfig*, or if last suitable cell that the UE was camping on is part of the area indicated by *cag-ConfigList* of *areaConfiguration* in *VarLogMeasConfig*, or if last suitable cell that the UE was camping on is part of the area indicated by *snpn-ConfigList* of *areaConfiguration* in *VarLogMeasConfig*:
 - 5> set the *servCellIdentity* to indicate global cell identity of the last suitable cell that the UE was camping on;
 - 5> set the *measResultServingCell* to include the quantities of the last suitable cell the UE was camping on;
 - 4> else if the *reportType* is set to *periodical* in the *VarLogMeasConfig*:
 - 5> set the *servCellIdentity* to indicate global cell identity of the last logged cell that the UE was camping on;
 - 5> set the *measResultServingCell* to include the quantities of the last logged cell the UE was camping on;
 - 3> else:
 - 4> set the *servCellIdentity* to indicate global cell identity of the cell the UE is camping on;
 - 4> set the *measResultServingCell* to include the quantities of the cell the UE is camping on;
 - 3> if available, set the *measResultNeighCells*, in order of decreasing ranking-criterion as used for cell re-selection, to include measurements of neighbouring cell that became available during the last logging interval and according to the following:
 - 4> include measurement results for at most 6 neighbouring cells on the NR serving frequency and for at most 3 cells per NR neighbouring frequency and for the NR neighbouring frequencies in accordance with the following:
 - 5> if *interFreqTargetInfo* is included in *VarLogMeasConfig*:
 - 6> if *earlyMeasIndication* is included in *VarLogMeasConfig*:
 - 7> include measurement results for NR neighbouring frequencies that are included in both *interFreqTargetInfo* and either in *measIdleCarrierListNR* (within the *VarMeasIdleConfig*) or *SIB4*;

- 6> else:
 - 7> include measurement results for NR neighbouring frequencies that are included in both *interFreqTargetInfo* and *SIB4*;
 - 5> else:
 - 6> if *earlyMeasIndication* is included in *VarLogMeasConfig*;
 - 7> include measurement results for NR neighbouring frequencies that are included in either *measIdleCarrierListNR* (within the *VarMeasIdleConfig*) or *SIB4*;
 - 6> else:
 - 7> include measurement results for NR neighbouring frequencies that are included in *SIB4*;
 - 4> include measurement results for at most 3 neighbours per inter-RAT frequency in accordance with the following:
 - 5> if *earlyMeasIndication* is included in *VarLogMeasConfig*:
 - 6> include measurement results for inter-RAT neighbouring frequencies that are included in either *measIdleCarrierListEUTRA* (within the *VarMeasIdleConfig*) or *SIB5*;
 - 5> else:
 - 6> include measurement results for inter-RAT frequencies that are included in *SIB5*;
 - 4> for each neighbour cell included, include the optional fields that are available;
- NOTE 1: The UE includes the latest results of the available measurements as used for cell reselection evaluation in RRC_IDLE or RRC_INACTIVE, which are performed in accordance with the performance requirements as specified in TS 38.133 [14].
- NOTE 2: For logging the measurements on frequencies (indicated in *measIdleCarrierListNR*/*measIdleCarrierListEUTRA*) in the logged measurement, the *qualityThreshold* in *measIdleConfig* should not be applied, and how the UE logs the measurements on the frequencies is left to the UE implementation.
- 2> when the memory reserved for the logged measurement information becomes full, stop timer T330 and perform the same actions as performed upon expiry of T330, as specified in 5.5a.1.4.

5.5b Application Layer Measurements in RRC_IDLE/RRC_INACTIVE

5.5b.1 Handling of Application Layer Measurements in RRC_IDLE/RRC_INACTIVE

5.5b.1.1 General

This procedure specifies the UE actions for a UE in RRC_IDLE and RRC_INACTIVE that has an application layer measurement configuration with *appLayerIdleInactiveConfig* configured. The procedure includes area handling, storing of application layer measurement report containers and cell re-selection to LTE.

5.5b.1.2 Initiation

While in RRC_INACTIVE and RRC_IDLE state, the UE shall:

- 1> store any previously or subsequently received application layer measurement report containers associated with the *measConfigAppLayerId* for which the successful transmission of the message or at least one segment of the message has not been confirmed by lower layers;

NOTE: The UE continues storing application layer measurement report containers for MBS broadcast service in RRC_CONNECTED as long as stored application layer measurement configurations/reports have not been retrieved.

- 1> if the memory reserved for storing application layer measurement report containers becomes full:
 - 2> if the reports are associated with a configuration including *appLayerMeasPriority*:
 - 3> discard reports in priority order where reports with the lowest priority are discarded first, and among reports with equal associated priority, discard reports in the order they were received, where older reports are discarded first;
 - 2> else:
 - 3> discard reports in the order they were received, where older reports are discarded first;
- 1> if *qoe-AreaScope* is configured:
 - 2> if the cell which the UE selects when the UE transits from RRC_CONNECTED state to RRC_INACTIVE or RRC_IDLE state is part of the area indicated by *qoe-AreaScope*:
 - 3> inform upper layers of being inside the area;
 - 2> if the cell which the UE selects when the UE transits from RRC_CONNECTED state to RRC_INACTIVE or RRC_IDLE state is not part of the area indicated by *qoe-AreaScope*:
 - 3> inform upper layers of being outside the area.
 - 2> if the UE re-selects to a new cell which is part of the area indicated by *qoe-AreaScope* and the previous cell was not part of the area indicated by *qoe-AreaScope*:
 - 3> inform upper layers of being inside the area;
 - 2> if the UE re-selects to a new cell which is not part of the area indicated by *qoe-AreaScope* and the previous cell was part of the area indicated by *qoe-AreaScope*:
 - 3> inform upper layers of being outside the area.
- 1> if the UE re-selects to an E-UTRA cell:
 - 2> inform upper layers about the release of all application layer measurement configurations;
 - 2> release all application layer measurement configurations including their fields in UE variables *VarAppLayerIdleConfig* and *VarAppLayerPLMN-ListConfig*;
 - 2> discard any application layer measurement reports which were not yet fully submitted to lower layers for transmission;
 - 2> consider itself not to be configured to send application layer measurement reports.

5.6 UE capabilities

5.6.1 UE capability transfer

5.6.1.1 General

This clause describes how the UE compiles and transfers its UE capability information upon receiving a UE Capability Enquiry from the network.

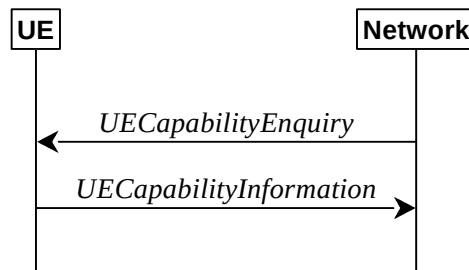 


Figure 5.6.1.1-1: UE capability transfer

5.6.1.2 Initiation

The network initiates the procedure to a UE in RRC_CONNECTED when it needs (additional) UE radio access capability information. The network should retrieve UE capabilities only after AS security activation. Network does not forward UE capabilities that were retrieved before AS security activation to the CN.

5.6.1.3 Reception of the *UECapabilityEnquiry* by the UE

The UE shall set the contents of *UECapabilityInformation* message as follows:

- 1> if the *ue-CapabilityRAT-RequestList* contains a *UE-CapabilityRAT-Request* with *rat-Type* set to *nr*:
 - 2> include in the *ue-CapabilityRAT-ContainerList* a *UE-CapabilityRAT-Container* of the type *UE-NR-Capability* and with the *rat-Type* set to *nr*;
 - 2> include the *supportedBandCombinationList*, *featureSets* and *featureSetCombinations* as specified in clause 5.6.1.4;
- 1> if the *ue-CapabilityRAT-RequestList* contains a *UE-CapabilityRAT-Request* with *rat-Type* set to *eutra-nr*:
 - 2> if the UE supports (NG)EN-DC or NE-DC:
 - 3> include in the *ue-CapabilityRAT-ContainerList* a *UE-CapabilityRAT-Container* of the type *UE-MRDC-Capability* and with the *rat-Type* set to *eutra-nr*;
 - 3> include the *supportedBandCombinationList* and *featureSetCombinations* as specified in clause 5.6.1.4;
- 1> if the *ue-CapabilityRAT-RequestList* contains a *UE-CapabilityRAT-Request* with *rat-Type* set to *eutra*:
 - 2> if the UE supports E-UTRA:
 - 3> include in the *ue-CapabilityRAT-ContainerList* a *ue-CapabilityRAT-Container* of the type *UE-EUTRA-Capability* associated with the terrestrial network and with the *rat-Type* set to *eutra* as specified in TS 36.331 [10], clause 5.6.3.3, according to the *capabilityRequestFilter*, if received;
- 1> if the *ue-CapabilityRAT-RequestList* contains a *UE-CapabilityRAT-Request* with *rat-Type* set to *utra-fdd*:
 - 2> if the UE supports UTRA-FDD:
 - 3> include the UE radio access capabilities for UTRA-FDD within a *ue-CapabilityRAT-Container* and with the *rat-Type* set to *utra-fdd*;
- 1> if the RRC message segmentation is enabled based on the field *rrc-SegAllowed* received, and the encoded RRC message is larger than the maximum supported size of a PDCP SDU specified in TS 38.323 [5]:
 - 2> consider the maximum number of UL segments the UE is allowed to use when segmenting the *UECapabilityInformation* message is 16;
 - 2> initiate the UL message segment transfer procedure as specified in clause 5.7.7;
- 1> else if the RRC message segmentation is enabled based on the field *rrc-MaxCapaSegAllowed* received, and the encoded RRC message is larger than the maximum supported size of a PDCP SDU specified in TS 38.323 [5]:

- 2> consider the maximum number of UL segments the UE is allowed to use when segmenting the *UECapabilityInformation* message to be the value indicated by *rrc-MaxCapaSegAllowed*;
- 2> initiate the UL message segment transfer procedure as specified in clause 5.7.7;
- 1> else:
 - 2> submit the *UECapabilityInformation* message to lower layers for transmission, upon which the procedure ends.

5.6.1.4 Setting band combinations, feature set combinations and feature sets supported by the UE

The UE invokes the procedures in this clause if the NR or E-UTRA network requests UE capabilities for *nr*, *eutra-nr* or *eutra*. This procedure is invoked once per requested *rat-Type* (see clause 5.6.1.3 for capability enquiry by the NR network; see TS 36.331 [10], clause 5.6.3.3 for capability enquiry by the E-UTRA network). The UE shall ensure that the feature set IDs are consistent across feature sets, feature set combinations and band combinations in all three UE capability containers that the network queries with the same fields with the same values, i.e. *UE-CapabilityRequestFilterNR*, *UE-CapabilityRequestFilterCommon*, *rrc-SegAllowed* and fields in *UECapabilityEnquiry* message (i.e. *requestedFreqBandsNR-MRDC*, *requestedCapabilityNR*, *eutra-nr-only* flag, *requestedCapabilityCommon*, and *rrc-SegAllowed*) as defined in TS 36.331 [10], where applicable.

NOTE 1: Capability enquiry without *frequencyBandListFilter* is not supported.

NOTE 2: In (NG)EN-DC, the gNB needs the capabilities for RAT types *nr* and *eutra-nr* and it uses the *featureSets* in the *UE-NR-Capability* together with the *featureSetCombinations* in the *UE-MRDC-Capability* to determine the NR UE capabilities for the supported MRDC band combinations. Similarly, the eNB needs the capabilities for RAT types *eutra* and *eutra-nr* and it uses the *featureSetsEUTRA* in the *UE-EUTRA-Capability* together with the *featureSetCombinations* in the *UE-MRDC-Capability* to determine the E-UTRA UE capabilities for the supported MRDC band combinations. Hence, the IDs used in the *featureSets* must match the IDs referred to in *featureSetCombinations* across all three containers. The requirement on consistency implies that there are no undefined feature sets and feature set combinations.

NOTE 3: If the UE cannot include all feature sets and feature set combinations due to message size or list size constraints, it is up to UE implementation which feature sets and feature set combinations it prioritizes.

NOTE 3a: For the usage of *rrc-MaxCapaSegAllowed*, if the NR or E-UTRA network does not request UE capabilities for *nr*, *eutra-nr* and *eutra* in a single enquiry, the feature set IDs might not be consistent across feature sets, feature set combinations and band combinations in all three UE capability containers.

The UE shall:

- 1> if the UE is an eRedCap UE and the UE supports *eRedCapIgnoreCapabilityFiltering*:
 - 2> ignore the value received in *frequencyBandListFilter*;
 - 2> in the remainder of this procedure assume *frequencyBandListFilter* indicates all the supported bands of the UE;
- 1> compile a list of "candidate band combinations" according to the filter criteria in *capabilityRequestFilterCommon* (if included), only consisting of bands included in *frequencyBandListFilter*, and prioritized in the order of *frequencyBandListFilter* (i.e. first include band combinations containing the first-listed band, then include remaining band combinations containing the second-listed band, and so on), where for each band in the band combination, the parameters of the band do not exceed *maxBandwidthRequestedDL*, *maxBandwidthRequestedUL*, *maxCarriersRequestedDL*, *maxCarriersRequestedUL*, *ca-BandwidthClassDL-EUTRA* or *ca-BandwidthClassUL-EUTRA*, whichever are received;
- 1> for each band combination included in the list of "candidate band combinations":
 - 2> if the network (E-UTRA) included the *eutra-nr-only* field, or
 - 2> if the requested *rat-Type* is *eutra*:
 - 3> remove the NR-only band combination from the list of "candidate band combinations";

NOTE 4: The (E-UTRA) network may request capabilities for *nr* but indicate with the *eutra-nr-only* flag that the UE shall not include any NR band combinations in the *UE-NR-Capability*. In this case the procedural text above removes all NR-only band combinations from the candidate list and thereby also avoids inclusion of corresponding feature set combinations and feature sets below.

- 2> if it is regarded as a fallback band combination with the same capabilities of another band combination included in the list of "candidate band combinations", and
- 2> if this fallback band combination is generated by releasing at least one SCell or uplink configuration of SCell or SUL according to TS 38.306 [26]:
- 3> remove the band combination from the list of "candidate band combinations";

NOTE 5: Even if the network requests (only) capabilities for *nr*, it may include E-UTRA band numbers in the *frequencyBandListFilter* to ensure that the UE includes all necessary feature sets needed for subsequently requested *eutra-nr* capabilities. At this point of the procedure the list of "candidate band combinations" contains all NR- and/or E-UTRA-NR band combinations that match the filter (*frequencyBandListFilter*) provided by the NW and that match the *eutra-nr-only* flag (if RAT-Type *nr* is requested by E-UTRA). In the following, this candidate list is used to derive the band combinations, feature set combinations and feature sets to be reported in the requested capability container.

- 1> if the requested *rat-Type* is *nr*:
 - 2> include into *supportedBandCombinationList* as many NR-only band combinations as possible from the list of "candidate band combinations", starting from the first entry;
 - 3> if *srs-SwitchingTimeRequest* is received:
 - 4> if SRS carrier switching is supported;
 - 5> include *srs-SwitchingTimesListNR* and *srs-SwitchingAffectedBandsListNR* for each band combination;
 - 4> set *srs-SwitchingTimeRequested* to *true*;
 - 2> include, into *featureSetCombinations*, the feature set combinations referenced from the supported band combinations as included in *supportedBandCombinationList* according to the previous;
 - 2> compile a list of "candidate feature set combinations" referenced from the list of "candidate band combinations" excluding entries (rows in feature set combinations) with same or lower capabilities;
- 2> if *uplinkTxSwitchRequest* is received:
 - 3> include into *supportedBandCombinationList-UplinkTxSwitch* as many NR-only band combinations that supported UL TX switching as possible from the list of "candidate band combinations", starting from the first entry;
 - 4> if *srs-SwitchingTimeRequest* is received:
 - 5> if SRS carrier switching is supported;
 - 6> include *srs-SwitchingTimesListNR* and *srs-SwitchingAffectedBandsListNR* for each band combination;
 - 5> set *srs-SwitchingTimeRequested* to *true*;
 - 3> include, into *featureSetCombinations*, the feature set combinations referenced from the supported band combinations as included in *supportedBandCombinationList-UplinkTxSwitch* according to the previous;

NOTE 6: This list of "candidate feature set combinations" contains the feature set combinations used for NR-only as well as E-UTRA-NR band combinations. It is used to derive a list of NR feature sets referred to from the feature set combinations in the *UE-NR-Capability* and from the feature set combinations in a *UE-MRDC-Capability* container.

- 2> if *sidelinkRequest* is received:

- 3> for a sidelink band combination the UE included in *supportedBandCombinationListSidelinkEUTRA-NR*, *supportedBandCombinationListSL-RelayDiscovery*, *supportedBandCombinationListSL-U2U-RelayDiscovery* or *supportedBandCombinationListSL-NonRelayDiscovery*:
- 4> if the UE supports partial sensing for a band of the sidelink band combination, include the partial sensing capabilities for the band using the *sl-TransmissionMode2-PartialSensing-r17*;
- 3> set *sidelinkRequested* to *true*;
- 2> include into *featureSets* the feature sets referenced from the "candidate feature set combinations" and may exclude the feature sets with the parameters that exceed any of *maxBandwidthRequestedDL*, *maxBandwidthRequestedUL*, *maxCarriersRequestedDL* or *maxCarriersRequestedUL*, whichever are received;
- 1> else, if the requested *rat-Type* is *eutra-nr*:
 - 2> include into *supportedBandCombinationList* and/or *supportedBandCombinationListNEDC-Only* as many E-UTRA-NR band combinations as possible from the list of "candidate band combinations", starting from the first entry;
 - 3> if *srs-SwitchingTimeRequest* is received:
 - 4> if SRS carrier switching is supported;
 - 5> include *srs-SwitchingTimesListNR*, *srs-SwitchingTimesListEUTRA* and *srs-SwitchingAffectedBandsListNR* for each band combination;
 - 4> set *srs-SwitchingTimeRequested* to *true*;
 - 2> include, into *featureSetCombinations*, the feature set combinations referenced from the supported band combinations as included in *supportedBandCombinationList* according to the previous;
 - 2> if *uplinkTxSwitchRequest* is received:
 - 3> include into *supportedBandCombinationList-UplinkTxSwitch* as many E-UTRA-NR band combinations that supported UL TX switching as possible from the list of "candidate band combinations", starting from the first entry;
 - 4> if *srs-SwitchingTimeRequest* is received:
 - 5> if SRS carrier switching is supported;
 - 6> include *srs-SwitchingTimesListNR*, *srs-SwitchingTimesListEUTRA* and *srs-SwitchingAffectedBandsListNR* for each band combination;
 - 5> set *srs-SwitchingTimeRequested* to *true*;
 - 3> include, into *featureSetCombinations*, the feature set combinations referenced from the supported band combinations as included in *supportedBandCombinationList-UplinkTxSwitch* according to the previous;
 - 1> else (if the requested *rat-Type* is *eutra*):
 - 2> compile a list of "candidate feature set combinations" referenced from the list of "candidate band combinations" excluding entries (rows in feature set combinations) with same or lower capabilities;

NOTE 7: This list of "candidate feature set combinations" contains the feature set combinations used for E-UTRA-NR band combinations. It is used to derive a list of E-UTRA feature sets referred to from the feature set combinations in a *UE-MRDC-Capability* container.

 - 2> include into *featureSetsEUTRA* (in the *UE-EUTRA-Capability*) the feature sets referenced from the "candidate feature set combinations" and may exclude the feature sets with the parameters that exceed *ca-BandwidthClassDL-EUTRA* or *ca-BandwidthClassUL-EUTRA*, whichever are received;
 - 1> if the UE is an eRedCap UE and the UE supports *eRedCapIgnoreCapabilityFiltering*, i.e., it assumes *frequencyBandListFilter* to be the filter containing all the supported bands of the UE:

2> include all the supported bands of the UE in the field *appliedFreqBandListFilter*, except if the requested *rat-Type* is *nr* and the network included the *eutra-nr-only* field;

1> else:

2> include the received *frequencyBandListFilter* in the field *appliedFreqBandListFilter* of the requested UE capability, except if the requested *rat-Type* is *nr* and the network included the *eutra-nr-only* field;

1> if the network included *ue-CapabilityEnquiryExt*:

2> include the received *ue-CapabilityEnquiryExt* in the field *receivedFilters*;

5.6.1.5 Void

5.7 Other

5.7.1 DL information transfer

5.7.1.1 General

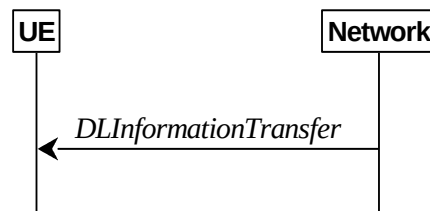 


Figure 5.7.1.1-1: DL information transfer

The purpose of this procedure is to transfer NAS dedicated information from NG-RAN to a UE in *RRC_CONNECTED* or to a UE in *RRC_INACTIVE* during SDT, or to transfer F1-C related information from IAB Donor-CU to IAB-DU via the collocated IAB-MT in *RRC_CONNECTED*.

5.7.1.2 Initiation

The network initiates the DL information transfer procedure whenever there is a need to transfer NAS dedicated information, or F1-C related information to an IAB-node. The network initiates the DL information transfer procedure by sending the *DLInformationTransfer* message.

5.7.1.3 Reception of the *DLInformationTransfer* by the UE

Upon receiving *DLInformationTransfer* message, the UE shall:

1> if *dedicatedNAS-Message* is included:

2> forward *dedicatedNAS-Message* to upper layers.

1> if *referenceTimeInfo* is included:

2> calculate the reference time based on the *time*, *referenceSFN* and *timeInfoType* if it is included;

2> calculate the uncertainty of the reference time based on the *uncertainty*, if *uncertainty* is included;

2> inform upper layers of the reference time and, if *uncertainty* is included, of the uncertainty;

2> ignore all further *referenceTimeInfo* received in *SIB9*, if any.

1> if *sib9Fallback* is included:

2> apply *referenceTimeInfo* in *SIB9*.

- 1> if *rxTxTimeDiff-gNB* is included:
 - 2> calculate the propagation delay based on the UE Rx-Tx time difference measurement and the received Rx-Tx time difference measurement at the gNB;
 - 2> inform upper layers of the propagation delay.
- 1> if *ta-PDC* is set to *activate*:
 - 2> inform upper layers of the propagation delay determined by the accumulated Timing Advance commands.
- 1> if *clockQualityDetailsLevel* is included:
 - 2> store the *eventID-TSS* as the *storedEventID* within *VarTSS-Info*;
 - 2> if the UE is NPN capable and the cell is an NPN-only cell:
 - 3> derive a gNB identity from *gNB-ID-Length* and *cellIdentity* of the first *NPN-IdentityInfo* list entry of *NPN-IdentityInfoList* in *SIB1*, and derive the *plmn-Identity* of the first *NPN-Identity* list entry of *NPN-IdentityList* in *SIB1* included in the first *NPN-IdentityInfo* list entry of *NPN-IdentityInfoList* in *SIB1*, as defined in TS 38.413 [42];
 - 2> else:
 - 3> derive a gNB identity from *gNB-ID-Length* and *cellIdentity* of the first *PLMN-IdentityInfo* list entry of *PLMN-IdentityInfoList* in *SIB1*, and derive the *plmn-Identity* of the first *PLMN-IdentityInfo* list entry of *PLMN-IdentityInfoList* in *SIB1*, as defined in TS 38.413 [42];
 - 2> store the global gNB identity derived from *SIB1* as the *storedGlobalGnbID* within *VarTSS-Info*;
 - 2> forward *clockQualityDetailsLevel* to upper layers.

Upon receiving *DLInformationTransfer* message, the IAB-MT shall:

- 1> if *dedicatedInfoF1c* is included:
 - 2> forward *dedicatedInfoF1c* to the collocated IAB-DU.

5.7.1a DL information transfer for MR-DC

5.7.1a.1 General



Figure 5.7.1a.1-1: DL information transfer MR-DC

The purpose of this procedure is to transfer RRC messages from the network to the UE over SRB3 (e.g. an NR RRC reconfiguration message including *reconfigurationWithSync*, an E-UTRA RRC connection reconfiguration message including *mobilityControlInfo*, an RRC connection release message, a *MobilityFromNRCommand* message, or a *MobilityFromEUTRACommand* message) during fast MCG link recovery.

5.7.1a.2 Initiation

The network initiates this procedure whenever there is a need to transfer an RRC message during fast MCG link recovery.

5.7.1a.3 Actions related to reception of *DLInformationTransferMRDC* message

Upon receiving the *DLInformationTransferMRDC*, the UE shall:

- 1> if the *RRCReconfiguration* message is included in *dl-DCCH-MessageNR*:
 - 2> perform the RRC reconfiguration procedure according to 5.3.5.3;
- 1> else if the *RRCRelease* message is included in *dl-DCCH-MessageNR*:
 - 2> perform the RRC release procedure according to 5.3.8;
- 1> else if the *MobilityFromNRCommand* message is included in the *dl-DCCH-MessageNR*:
 - 2> perform the mobility from NR procedure according to 5.4.3.3;
- 1> else if the E-UTRA *RRCConnectionReconfiguration* message is included in *dl-DCCH-MessageEUTRA*:
 - 2> perform the RRC connection reconfiguration procedure as specified in TS 36.331 [10], clause 5.3.5.4;
- 1> else if the E-UTRA *RRCConnectionRelease* message is included in *dl-DCCH-MessageEUTRA*:
 - 2> perform the RRC connection release as specified in TS 36.331 [10], clause 5.3.8;
- 1> else if the *MobilityFromEUTRACommand* message is included in the *dl-DCCH-MessageEUTRA*:
 - 2> perform the mobility from E-UTRA procedure as specified in TS 36.331 [10], clause 5.4.3.3;

5.7.2 UL information transfer

5.7.2.1 General

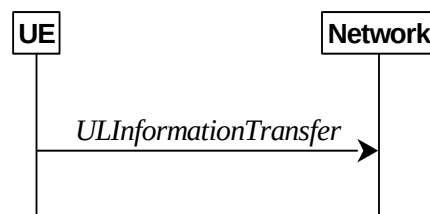 


Figure 5.7.2.1-1: UL information transfer

The purpose of this procedure is to transfer NAS dedicated information from the UE to the network in RRC_CONNECTED or in RRC_INACTIVE during SDT, or to transfer F1-C related information from IAB-DU to IAB Donor-CU via the collocated IAB-MT in RRC_CONNECTED.

5.7.2.2 Initiation

A UE in RRC_CONNECTED or a UE in RRC_INACTIVE during SDT initiates the UL information transfer procedure whenever there is a need to transfer NAS dedicated information. The UE initiates the UL information transfer procedure by sending the *ULInformationTransfer* message. In addition, an IAB-MT in RRC_CONNECTED initiates the UL information transfer procedure whenever there is a need to transfer F1-C related information. When F1-C related information has to be transferred, the IAB-MT shall initiate the procedure only if SRB2 or split SRB2 is established.

5.7.2.3 Actions related to transmission of *ULInformationTransfer* message

The UE shall set the contents of the *ULInformationTransfer* message as follows:

- 1> if the upper layer provides NAS PDU:
 - 2> set the *dedicatedNAS-Message* to include the information received from upper layers;

- 1> for the IAB-MT, if there is a need to transfer F1-C related information:
- 2> include the *dedicatedInfoF1c*;
- 1> submit the *ULInformationTransfer* message to lower layers for transmission, upon which the procedure ends.

5.7.2.4 Failure to deliver *ULInformationTransfer* message

The UE shall:

- 1> if AS security is not started and radio link failure occurs before the successful delivery of *ULInformationTransfer* messages has been confirmed by lower layers; or
- 1> if PDCP re-establishment or release/addition (e.g due to key refresh upon PCell or PSCell change, or RRC connection re-establishment, or failure of resume procedure initiated for SDT) occurs on an SRB on which *ULInformationTransfer* messages were submitted for transmission but successful delivery of these messages was not confirmed by lower layers:
- 2> inform upper layers about the possible failure to deliver the information contained in the concerned *ULInformationTransfer* messages, unless the messages only include *dedicatedInfoF1c*.

5.7.2a UL information transfer for MR-DC

5.7.2a.1 General

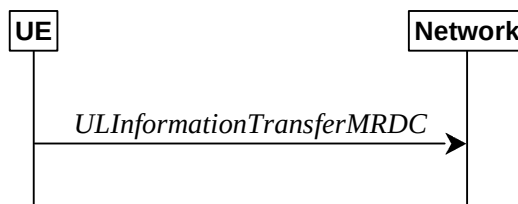 


Figure 5.7.2a.1-1: UL information transfer MR-DC

The purpose of this procedure is to transfer MR-DC dedicated information from the UE to the network e.g. the NR or E-UTRA RRC *MeasurementReport*, *FailureInformation*, *UEAssistanceInformation*, *RRCReconfigurationComplete*, *MCGFailureInformation*, or *IABOtherInformation* message.

5.7.2a.2 Initiation

A UE in RRC_CONNECTED initiates the UL information transfer for MR-DC procedure whenever there is a need to transfer MR-DC dedicated information. I.e. the procedure is not used during an RRC connection reconfiguration involving NR or E-UTRA connection reconfiguration, in which case the MR DC information is piggybacked to the *RRCReconfigurationComplete* message, except in the case the UE executes an intra-SN CPC.

5.7.2a.3 Actions related to transmission of *ULInformationTransferMRDC* message

The UE shall set the contents of the *ULInformationTransferMRDC* message as follows:

- 1> if there is a need to transfer MR-DC dedicated information related to NR:
 - 2> set the *ul-DCCH-MessageNR* to include the NR MR-DC dedicated information to be transferred (e.g., NR RRC *MeasurementReport*, *UEAssistanceInformation*, *FailureInformation*, *RRCReconfigurationComplete*, *MCGFailureInformation*, or *IABOtherInformation* message);
- 1> else if there is a need to transfer MR-DC dedicated information related to E-UTRA:
 - 2> set the *ul-DCCH-MessageEUTRA* to include the E-UTRA MR-DC dedicated information to be transferred (e.g., E-UTRA RRC *MeasurementReport*, or *MCGFailureInformation* message);

- 1> submit the *ULInformationTransferMRDC* message to lower layers for transmission, upon which the procedure ends.

5.7.2b UL transfer of IRAT information

5.7.2b.1 General

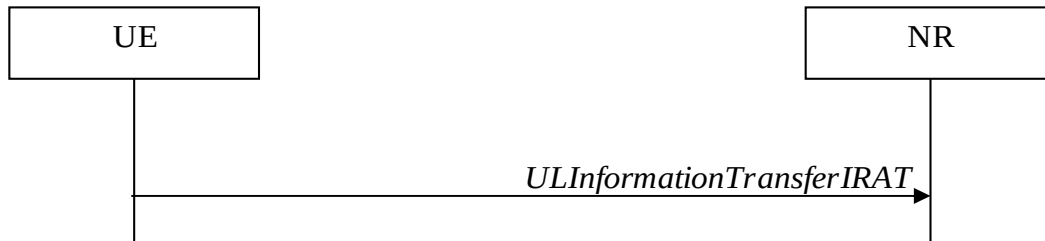 


Figure 5.7.2b.1-1: UL transfer of IRAT information

The purpose of this procedure is to transfer from the UE to NR MCG dedicated information terminated at the NR MCG but specified by another RAT e.g. the E-UTRA *MeasurementReport* message, the E-UTRA *SidelinkUEInformation* message or the E-UTRA *UEAssistanceInformation* message. The specific information transferred in this message is set in accordance with:

- the procedure specified in 5.6.10 of TS 36.331 [10] for E-UTRA *UEAssistanceInformation* message;
- the procedure specified in 5.10.2 of TS 36.331 [10] for E-UTRA *SidelinkUEInformation* message;
- the procedure specified in 5.5.5 of TS 36.331 [10] for E-UTRA *MeasurementReport* Message.

5.7.2b.2 Initiation

A UE in RRC_CONNECTED initiates the UL information transfer procedure whenever there is a need to transfer dedicated inter-RAT information as specified in TS 36.331 [10].

5.7.2b.3 Actions related to transmission of *ULInformationTransferIRAT* message

The UE shall set the contents of the *ULInformationTransferIRAT* message as follows:

- 1> if there is a need to transfer dedicated LTE information related to V2X sidelink communications:
 - 2> set the *ul-DCCH-MessageEUTRA* to include the V2X sidelink communication information to be transferred (e.g. the E-UTRA RRC *MeasurementReport* message, the E-UTRA RRC *SidelinkUEInformation* message, or the E-UTRA RRC *UEAssistanceInformation* message);
- 1> submit the *ULInformationTransferIRAT* message to lower layers for transmission, upon which the procedure ends;

5.7.3 SCG failure information

5.7.3.1 General

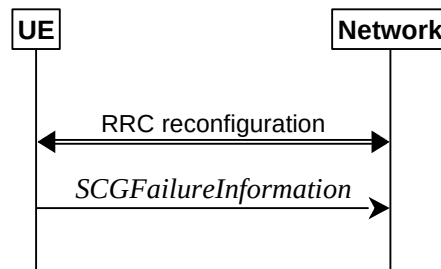 


Figure 5.7.3.1-1: SCG failure information

The purpose of this procedure is to inform E-UTRAN or NR MN about an SCG failure the UE has experienced i.e. SCG radio link failure, beam failure of the PSCell while the SCG is deactivated, failure of SCG reconfiguration with sync, SCG configuration failure for RRC message on SRB3, SCG integrity check failure, and consistent uplink LBT failures on PSCell for operation with shared spectrum channel access.

5.7.3.2 Initiation

A UE initiates the procedure to report SCG failures when neither MCG nor SCG transmission is suspended and when one of the following conditions is met:

- 1> upon detecting radio link failure for the SCG, in accordance with clause 5.3.10.3;
- 1> upon detecting beam failure of the PSCell while the SCG is deactivated, in accordance with TS 38.321[3];
- 1> upon reconfiguration with sync failure of the SCG, in accordance with clause 5.3.5.8.3;
- 1> upon SCG configuration failure, in accordance with clause 5.3.5.8.2;
- 1> upon integrity check failure indication from SCG lower layers concerning SRB3.

Upon initiating the procedure, the UE shall:

- 1> if the procedure was not initiated due to beam failure of the PSCell while the SCG is deactivated:
 - 2> suspend SCG transmission for all SRBs, DRBs and, if any, BH RLC channels;
 - 2> reset SCG MAC;
- 1> stop T304 for the SCG, if running;
- 1> stop conditional reconfiguration evaluation for CPC, CPA, or subsequent CPAC, if configured;
- 1> stop conditional reconfiguration evaluation for each CHO configuration that includes *condExecutionCondPSCell*, if configured;
- 1> if the UE is in (NG)EN-DC:
 - 2> initiate transmission of the *SCGFailureInformationNR* message as specified in TS 36.331 [10], clause 5.6.13a.
- 1> else:
 - 2> initiate transmission of the *SCGFailureInformation* message in accordance with 5.7.3.5.

5.7.3.3 Failure type determination for (NG)EN-DC

The UE shall set the SCG failure type as follows:

- 1> if the UE initiates transmission of the *SCGFailureInformationNR* message due to T310 expiry:
 - 2> set the *failureType* as *t310-Expiry*;
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message due to T312 expiry:
 - 2> set the *failureType* as any value and set the *failureType-v1610* as *t312-Expiry*;
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message to provide reconfiguration with sync failure information for an SCG:
 - 2> set the *failureType* as *synchReconfigFailureSCG*;
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message to provide random access problem indication from SCG MAC:
 - 2> if the random access procedure was initiated for beam failure recovery:
 - 3> set the *failureType* as *randomAccessProblem* and set the *failureType-v1610* as *beamFailureRecoveryFailure*;
 - 2> else:
 - 3> set the *failureType* as *randomAccessProblem*;
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message to provide indication from SCG RLC that the maximum number of retransmissions has been reached:
 - 2> set the *failureType* as *rlc-MaxNumRetx*;
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message due to SRB3 integrity check failure:
 - 2> set the *failureType* as *srb3-IntegrityFailure*;
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message due to Reconfiguration failure of NR RRC reconfiguration message:
 - 2> set the *failureType* as *scg-reconfigFailure*;
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message due to consistent uplink LBT failures:
 - 2> set the *failureType* as any value and set the *failureType-v1610* as *scg-lbtFailure*;
- 1> else if connected as an IAB-node and the *SCGFailureInformationNR* is initiated due to the reception of a BH RLF indication on BAP entity from the SCG:
 - 2> set the *failureType* as any value and set *failureType-v1610* as *bh-RLF*.
- 1> else if the UE initiates transmission of the *SCGFailureInformationNR* message due to beam failure of the PSCell while the SCG is deactivated:
 - 2> set the *failureType* as any value and set *failureType-v1610* as *beamFailure*.

5.7.3.4 Setting the contents of *MeasResultSCG-Failure*

The UE shall set the contents of the *MeasResultSCG-Failure* as follows:

- 1> for each *MeasObjectNR* configured on NR SCG for which a *measId* is configured and measurement results are available:
 - 2> include an entry in *measResultPerMOList*;
 - 2> if there is a *measId* configured with the *MeasObjectNR* and a *reportConfig* which has *rsType* set to *ssb*:
 - 3> set *ssbFrequency* to the value indicated by *ssbFrequency* as included in the *MeasObjectNR*;

- 2> if there is a *measId* configured with the *MeasObjectNR* and a *reportConfig* which has *rsType* set to *csi-rs*:
 - 3> set *refFreqCSI-RS* to the value indicated by *refFreqCSI-RS* as included in the associated measurement object;
- 2> if a serving cell is associated with the *MeasObjectNR*:
 - 3> set *measResultServingCell* to include the available quantities of the concerned cell and in accordance with the performance requirements in TS 38.133 [14];
- 2> set the *measResultNeighCellList* to include the best measured cells, ordered such that the best cell is listed first, and based on measurements collected up to the moment the UE detected the failure, and set its fields as follows:
 - 3> ordering the cells with sorting as follows:
 - 4> based on SS/PBCH block if SS/PBCH block measurement results are available and otherwise based on CSI-RS;
 - 4> using RSRP if RSRP measurement results are available, otherwise using RSRQ if RSRQ measurement results are available, otherwise using SINR;
 - 3> for each neighbour cell included:
 - 4> include the optional fields that are available.
- 3> if the UE supports SCG failure information for mobility robustness optimization for conditional PSCell change, for each neighbour cell, if any, included in *measResultSCG-Failure*:
 - 4> if the neighbour cell is one of the candidate cells for which the *reconfigurationWithSync* is included in the *secondaryCellGroup* in the MCG *VarConditionalReconfig* (for inter-SN CPC in NR-DC) or SCG *VarConditionalReconfig* (for intra-SN CPC) at the moment of the detected SCG failure (radio link failure at PSCell or PSCell change failure):
 - 5> if the first entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell corresponds to a fulfilled execution condition at the moment of SCG failure; or
 - 5> if the second entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell, if available, corresponds to a fulfilled execution condition at the moment of SCG failure:
 - 6> set *firstTriggeredEvent* to the execution condition *condFirstEvent* corresponding to the first entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell or to the execution condition *condSecondEvent* corresponding to the second entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell, whichever execution condition was fulfilled first in time;
 - 6> set *timeBetweenEvents* to the elapsed time between the point in time of fulfilling the condition in *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell that was fulfilled first in time, and the point in time of fulfilling the condition in *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell that was fulfilled second in time, if both the first execution condition corresponding to the first entry and the second execution condition corresponding to the second entry in the *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell were fulfilled;

NOTE: The measured quantities are filtered by the L3 filter as configured in the mobility measurement configuration. The measurements are based on the time domain measurement resource restriction, if configured. Exclude-listed cells are not required to be reported.

- 1> if available, set the *locationInfo* as in 5.3.3.7 according to the *otherConfig* associated with the NR SCG.

5.7.3.5 Actions related to transmission of *SCGFailureInformation* message

The UE shall set the contents of the *SCGFailureInformation* message as follows:

- 1> if the UE initiates transmission of the *SCGFailureInformation* message due to T310 expiry:

- 2> set the *failureType* as *t310-Expiry*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message due to T312 expiry:
 - 2> set the *failureType* as *other* and set the *failureType-v1610* as *t312-Expiry*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message to provide reconfiguration with sync failure information for an SCG:
 - 2> set the *failureType* as *synchReconfigFailureSCG*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message to provide random access problem indication from SCG MAC:
 - 2> if the random access procedure was initiated for beam failure recovery:
 - 3> set the *failureType* as *other* and set the *failureType-v1610* as *beamFailureRecoveryFailure*;
 - 2> else:
 - 3> set the *failureType* as *randomAccessProblem*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message to provide indication from SCG RLC that the maximum number of retransmissions has been reached:
 - 2> set the *failureType* as *rlc-MaxNumRetx*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message due to SRB3 IP check failure:
 - 2> set the *failureType* as *srb3-IntegrityFailure*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message due to Reconfiguration failure of NR RRC reconfiguration message:
 - 2> set the *failureType* as *scg-reconfigFailure*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message due to consistent uplink LBT failures:
 - 2> set the *failureType* as *other* and set the *failureType-v1610* as *scg-lbtFailure*;
- 1> else if connected as an IAB-node and the *SCGFailureInformation* is initiated due to the reception of a BH RLF indication on BAP entity from the SCG:
 - 2> set the *failureType* as *other* and set *failureType-v1610* as *bh-RLF*;
- 1> else if the UE initiates transmission of the *SCGFailureInformation* message due to beam failure of the PSCell while the SCG is deactivated:
 - 2> set the *failureType* as *other* and set *failureType-v1610* as *beamFailure*;
- 1> include and set *MeasResultSCG-Failure* in accordance with 5.7.3.4;
- 1> for each *MeasObjectNR* configured by a *MeasConfig* associated with the MCG, and for which measurement results are available:
 - 2> include an entry in *measResultFreqList*;
 - 2> if there is a *measId* configured with the *MeasObjectNR* and a *reportConfig* which has *rsType* set to *ssb*:
 - 3> set *ssbFrequency* in *measResultFreqList* to the value indicated by *ssbFrequency* as included in the *MeasObjectNR*;
 - 2> if there is a *measId* configured with the *MeasObjectNR* and a *reportConfig* which has *rsType* set to *csi-rs*:
 - 3> set *refFreqCSI-RS* in *measResultFreqList* to the value indicated by *refFreqCSI-RS* as included in the associated measurement object;

- 2> if a serving cell is associated with the *MeasObjectNR*:
 - 3> set *measResultServingCell* in *measResultFreqList* to include the available quantities of the concerned cell and in accordance with the performance requirements in TS 38.133 [14];
- 2> set the *measResultNeighCellList* in *measResultFreqList* to include the best measured cells, ordered such that the best cell is listed first, and based on measurements collected up to the moment the UE detected the failure, and set its fields as follows;
 - 3> ordering the cells with sorting as follows:
 - 4> based on SS/PBCH block if SS/PBCH block measurement results are available and otherwise based on CSI-RS;
 - 4> using RSRP if RSRP measurement results are available, otherwise using RSRQ if RSRQ measurement results are available, otherwise using SINR;
 - 3> if the UE supports SCG failure information for mobility robustness optimization for conditional PSCell change or addition, for each neighbour cell, if any, included in *measResultListNR* in *measResultFreqList*:
 - 4> if the neighbour cell is one of the candidate cells for which the *reconfigurationWithSync* is included in the *secondaryCellGroup* in the *MCG VarConditionalReconfig* (for CPA or inter-SN CPC in NR-DC) or *SCG VarConditionalReconfig* (for intra-SN CPC) at the moment of the detected SCG failure (radio link failure at PSCell or PSCell change or addition failure);
 - 5> if the first entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell corresponds to a fulfilled execution condition at the moment of SCG failure; or
 - 5> if the second entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell, if available, corresponds to a fulfilled execution condition at the moment of SCG failure;
 - 6> set *firstTriggeredEvent* to the execution condition *condFirstEvent* corresponding to the first entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell or to the execution condition *condSecondEvent* corresponding to the second entry of *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell, whichever execution condition was fulfilled first in time;
 - 6> set *timeBetweenEvents* to the elapsed time between the point in time of fulfilling the condition in *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell that was fulfilled first in time, and the point in time of fulfilling the condition in *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell that was fulfilled second in time, if both the first execution condition corresponding to the first entry and the second execution condition corresponding to the second entry in the *condExecutionCond* or *condExecutionCondSCG* associated to the neighbour cell were fulfilled;
 - 3> for each neighbour cell included:
 - 4> include the optional fields that are available.

NOTE 1: The measured quantities are filtered by the L3 filter as configured in the mobility measurement configuration. The measurements are based on the time domain measurement resource restriction, if configured. Exclude-listed cells are not required to be reported.

NOTE 2: Field *measResultSCG-Failure* is used to report available results for NR frequencies the UE is configured to measure by SCG RRC signalling.

1> if available, set the *locationInfo* as in 5.3.3.7 according to the *otherConfig* associated with the NR MCG.

1> if the UE supports SCG failure for mobility robustness optimization:

- 2> if the *failureType* is set to *synchReconfigFailureSCG*; or
- 2> if the *failureType* is set to *randomAccessProblem* and the SCG failure was declared while T304 was running:
 - 3> set *perRAInfoList* to indicate the performed random access procedure related information as specified in 5.7.10.5.

- 3> set the *failedPSCellId* to the physical cell identity and carrier frequency of the target PSCell of the failed PSCell change or failed PSCell addition;
 - 3> set the *previousPSCellId* to the physical cell identity and carrier frequency of the source PSCell associated to the last received *RRCReconfiguration* message including *reconfigurationWithSync* for the SCG, if available;
 - 3> set the *timeSCGFailure* to the elapsed time since the last execution of *RRCReconfiguration* message including the *reconfigurationWithSync* for the SCG until declaring the SCG failure;
- 2> else:
- 3> set the *failedPSCellId* to the physical cell identity and carrier frequency of the PSCell in which the SCG failure was declared;
 - 3> if the last *RRCReconfiguration* message including the *reconfigurationWithSync* for the SCG was received to enter the PSCell in which the SCG failure was declared:
 - 4> set the *timeSCGFailure* to the elapsed time since the last execution of *RRCReconfiguration* message including the *reconfigurationWithSync* for the SCG until declaring the SCG failure;
 - 4> set the *previousPSCellId* to the physical cell identity and carrier frequency of the source PSCell associated to the last received *RRCReconfiguration* message including *reconfigurationWithSync* for the SCG;
 - 1> release *successPSCell-Config* configured by the source PSCell, if available.

The UE shall submit the *SCGFailureInformation* message to lower layers for transmission.

5.7.3a EUTRA SCG failure information

5.7.3a.1 General

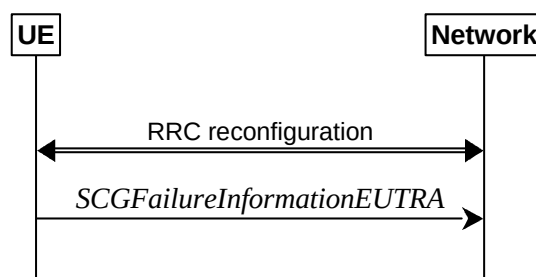 


Figure 5.7.3a.1-1: EUTRA SCG failure information

The purpose of this procedure is to inform NR MN about an SCG failure on E-UTRA SN the UE has experienced (e.g. SCG radio link failure, SCG change failure), as specified in TS 36.331 [10] clause 5.6.13.2.

5.7.3a.2 Initiation

A UE initiates the procedure to report EUTRA SCG failures when neither NR MCG nor EUTRA SCG transmission is suspended and in accordance with TS 36.331 [10] clause 5.6.13.2. Actions the UE shall perform upon initiating the procedure, other than related to the transmission of the *SCGFailureInformationEUTRA* message are specified in TS 36.331 [10] clause 5.6.13.2.

5.7.3a.3 Actions related to transmission of *SCGFailureInformationEUTRA* message

The UE shall set the contents of the *SCGFailureInformationEUTRA* message as follows:

- 1> include *failureType* within *failureReportSCG-EUTRA* and set it to indicate the SCG failure in accordance with TS 36.331 [10] clause 5.6.13.4;

1> include and set *measResultSCG-FailureMRDC* in accordance with TS 36.331 [10] clause 5.6.13.5;

1> for each EUTRA frequency the UE is configured to measure by *measConfig* for which measurement results are available:

2> set the *measResultFreqListMRDC* to include the best measured cells, ordered such that the best cell is listed first using RSRP to order if RSRP measurement results are available for cells on this frequency, otherwise using RSRQ to order if RSRQ measurement results are available for cells on this frequency, otherwise using SINR to order, and based on measurements collected up to the moment the UE detected the failure, and for each cell that is included, include the optional fields that are available;

NOTE: Field *measResultSCG-FailureMRDC* is used to report available results for E-UTRAN frequencies the UE is configured to measure by E-UTRA RRC signalling.

1> if available, set the *locationInfo* as in 5.3.3.7.:

The UE shall submit the *SCGFailureInformationEUTRA* message to lower layers for transmission.

5.7.3b MCG failure information

5.7.3b.1 General

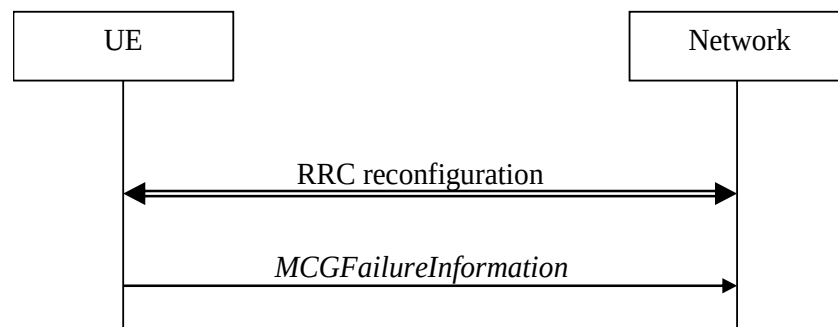 


Figure 5.7.3b.1-1: MCG failure information

The purpose of this procedure is to inform the network about an MCG failure the UE has experienced i.e. MCG radio link failure. A UE in RRC_CONNECTED, for which AS security has been activated with SRB2 and at least one DRB or multicast MRB setup or, for IAB, SRB2, may initiate the fast MCG link recovery procedure in order to continue the RRC connection without re-establishment.

5.7.3b.2 Initiation

In case of MR-DC, a UE configured with split SRB1 or SRB3 initiates the procedure to report MCG failures when neither MCG nor SCG transmission is suspended, the SCG is not deactivated, *t316* is configured, and when the following condition is met; or

In case of MP, a MP remote UE configured with split SRB1 initiates the procedure to report direct path failures when neither MCG (i.e. direct path) nor indirect path transmission is suspended, *t316* is configured, and when the following condition is met:

1> upon detecting radio link failure of the MCG, in accordance with 5.3.10.3, while T316 is not running.

Upon initiating the procedure, the UE shall:

1> stop timer T310 for the PCell, if running;

1> stop timer T312 for the PCell, if running;

1> suspend MCG transmission for all SRBs, DRBs, multicast MRBs, except SRB0, and, if any, BH RLC channels;

1> reset MCG MAC;

1> stop conditional reconfiguration evaluation for CHO or CHO with candidate SCG(s), if configured;

1> stop conditional reconfiguration evaluation for CPC or subsequent CPAC, if configured;

1> initiate transmission of the *MCGFailureInformation* message in accordance with 5.7.3b.4.

NOTE: The handling of any outstanding UL RRC messages during the initiation of the fast MCG link recovery is left to UE implementation.

5.7.3b.3 Failure type determination

The UE shall set the MCG failure type as follows:

1> if the UE initiates transmission of the *MCGFailureInformation* message due to T310 expiry:

2> set the *failureType* as *t310-Expiry*;

1> else if the UE initiates transmission of the *MCGFailureInformation* message due to T312 expiry:

2> set the *failureType* as *t312-Expiry*;

1> else if the UE initiates transmission of the *MCGFailureInformation* message to provide random access problem indication from MCG MAC:

2> if the random access procedure was initiated for beam failure recovery:

3> set the *failureType* as *beamFailureRecoveryFailure*;

2> else:

3> set the *failureType* as *randomAccessProblem*;

1> else if the UE initiates transmission of the *MCGFailureInformation* message to provide indication from MCG RLC that the maximum number of retransmissions has been reached:

2> set the *failureType* as *rlc-MaxNumRetx*;

1> else if the UE initiates transmission of the *MCGFailureInformation* message due to consistent uplink LBT failures on the MCG:

2> set the *failureType* as *lbt-Failure*;

1> else if connected as an IAB-node and the *MCGFailureInformation* message is initiated due to the reception of a BH RLF indication on BAP entity from the MCG:

2> set the *failureType* as *bh-RLF*.

5.7.3b.4 Actions related to transmission of *MCGFailureInformation* message

The UE shall set the contents of the *MCGFailureInformation* message as follows:

1> include and set *failureType* in accordance with 5.7.3b.3;

1> for each *MeasObjectNR* configured by a *measConfig* associated with the MCG, and for which measurement results are available:

2> include an entry in *measResultFreqList*;

2> if there is a *measId* configured with the *MeasObjectNR* and a *reportConfig* which has *rsType* set to *ssb*:

3> set *ssbFrequency* in *measResultFreqList* to the value indicated by *ssbFrequency* as included in the *MeasObjectNR*;

2> if there is a *measId* configured with the *MeasObjectNR* and a *reportConfig* which has *rsType* set to *csi-rs*:

3> set *refFreqCSI-RS* in *measResultFreqList* to the value indicated by *refFreqCSI-RS* as included in the associated measurement object;

2> if a serving cell is associated with the *MeasObjectNR*:

- 3> set *measResultServingCell* in *measResultFreqList* to include the available quantities of the concerned cell and in accordance with the performance requirements in TS 38.133 [14];
 - 2> set the *measResultNeighCellList* in *measResultFreqList* to include the best measured cells, ordered such that the best cell is listed first, and based on measurements collected up to the moment the UE detected the failure, and set its fields as follows;
 - 3> ordering the cells with sorting as follows:
 - 4> based on SS/PBCH block if SS/PBCH block measurement results are available and otherwise based on CSI-RS;
 - 4> using RSRP if RSRP measurement results are available, otherwise using RSRQ if RSRQ measurement results are available, otherwise using SINR;
 - 3> for each neighbour cell included:
 - 4> include the optional fields that are available.
 - 1> for each EUTRA frequency the UE is configured to measure by *measConfig* for which measurement results are available:
 - 2> set the *measResultFreqListEUTRA* to include the best measured cells, ordered such that the best cell is listed first using RSRP to order the cells if RSRP measurement results are available for cells on this frequency, otherwise using RSRQ to order the cells if RSRQ measurement results are available for cells on this frequency, otherwise using SINR to order the cells, based on measurements collected up to the moment the UE detected the failure, and for each cell that is included, include the optional fields that are available;
 - 1> for each UTRA-FDD frequency the UE is configured to measure by *measConfig* for which measurement results are available:
 - 2> set the *measResultFreqListUTRA-FDD* to include the best measured cells, ordered such that the best cell is listed first using RSCP to order the cells if RSCP measurement results are available for cells on this frequency, otherwise using EcN0 to order the cells, based on measurements collected up to the moment the UE detected the failure, and for each cell that is included, include the optional fields that are available;
 - 1> if the UE is in NR-DC:
 - 2> include and set *measResultSCG* in accordance with 5.7.3.4;
 - 1> if the UE is in NE-DC:
 - 2> include and set *measResultSCG-EUTRA* in accordance with TS 36.331 [10] clause 5.6.13.5;
- NOTE 1: The measured quantities are filtered by the L3 filter as configured in the mobility measurement configuration. The measurements are based on the time domain measurement resource restriction, if configured. Exclude-listed cells are not required to be reported.
- NOTE 2: Field *measResultSCG-Failure* is used to report available results for NR frequencies the UE is configured to measure by SCG RRC signalling.
- NOTE 3: Field *measResultSCG-EUTRA* is used to report available results for E-UTRAN frequencies the UE is configured to measure by E-UTRA RRC signalling.
- 1> if SRB1 is configured as split SRB and *pdcp-Duplication* is not configured:
 - 2> if the *primaryPath* for the PDCP entity of SRB1 refers to the direct path when MP is configured:
 - 3> set the *primaryPath* to refer to the indirect path;
 - 2> else if the *primaryPath* for the PDCP entity of SRB1 refers to the MCG:
 - 3> set the *primaryPath* to refer to the SCG.

The UE shall:

- 1> start timer T316;
- 1> if SRB1 is configured as split SRB:
 - 2> submit the *MCGFailureInformation* message to lower layers for transmission via SRB1, upon which the procedure ends;
- 1> else (i.e. SRB3 configured):
 - 2> submit the *MCGFailureInformation* message to lower layers for transmission embedded in NR RRC message *ULInformationTransferMRDC* via SRB3 as specified in 5.7.2a.3.

5.7.3b.5 T316 expiry

The UE shall:

- 1> if T316 expires:
 - 2> if the UE supports RLF-Report for fast MCG recovery procedure:
 - 3> set the *pSCellId* in the *VarRLF-Report* to the global cell identity of the PSCell, if available, otherwise to the physical cell identity and carrier frequency of the PSCell;
 - 3> set the *mcg-RecoveryFailureCause* in *VarRLF-Report* to *t316-Expiry*;
 - 2> initiate the connection re-establishment procedure as specified in 5.3.7.

5.7.3c Indirect path failure information

5.7.3c.1 General

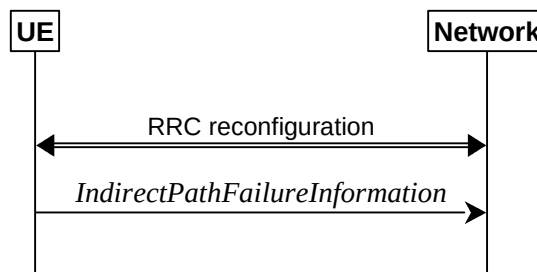 


Figure 5.7.3c.1-1: Indirect path failure information

The purpose of this procedure is to inform the network about an indirect path failure the MP remote UE has experienced.

5.7.3c.2 Initiation

In case of MP, a MP remote UE initiates the procedure to report indirect path failures when neither MCG transmission nor indirect path transmission is suspended and when one of the following conditions is met:

- 1> upon detecting a SL indirect path failure resulting from sidelink radio link failure on the PC5 unicast link or reception of *NotificationMessageSidelink* from the L2 U2N Relay UE (except indicating *relayUE-HO*), or SL indirect path addition/change failure in accordance with 5.3.5.17.2.3, or PC5-RRC connection release requested by upper layers in accordance with clause 5.8.9.5; or
- 1> upon detecting a N3C indirect path failure, including N3C connection failure or Uu failure of the N3C relay UE with N3C indirect path, or N3C indirect path addition/change failure in accordance with 5.3.5.17.3.2a;

Upon initiating the procedure, the UE shall:

- 1> if the procedure was initiated to report SL indirect path failure:

- 2> reset the sidelink specific MAC of the L2 U2N relay UE;
- 2> stop T421 if running;
- 1> suspend indirect path transmission for all SRBs and DRBs;
- 1> initiate transmission of the *IndirectPathFailureInformation* message in accordance with 5.7.3c.4;

5.7.3c.3 Failure type determination

The L2 U2N Remote UE configured with SL indirect path shall set the indirect path failure type as follows:

- 1> if the UE initiates transmission of the *IndirectPathFailureInformation* message due to T421 expiry in accordance with clause 5.3.5.16.1.3:
 - 2> set the *failureTypeIndirectPath* as *t421-Expiry*;
- 1> else if the UE initiates transmission of the *IndirectPathFailureInformation* message due to reception of the *NotificationMessageSidelink* including *indicationType*, in accordance with clause 5.8.9.10.4:
 - 2> set the *failureTypeIndirectPath* as the value in *indicationType* received from *NotificationMessageSidelink* (except *relayUE-CellReselection*);
- 1> else if the UE initiates transmission of the *IndirectPathFailureInformation* message due to sidelink radio link failure in accordance with clause 5.8.9.3:
 - 2> set the *failureTypeIndirectPath* as *sl-Failure*;
- 1> else if the UE initiates transmission of the *IndirectPathFailureInformation* message due to PC5-RRC connection release requested by upper layers in accordance with clause 5.8.9.5:
 - 2> set the *failureTypeIndirectPath* as *sl-PC5-Release*;
- 1> else if the UE initiates transmission of the *IndirectPathFailureInformation* message due to that the (target) L2 U2N Relay UE (i.e., the UE indicated by *sl-IndirectPathRelayUE-Identity* in the received *sl-IndirectPathAddChange*) changes its serving cell to a different cell from the target cell (i.e. the cell indicated by *sl-IndirectPathCellIdentity* in the received *sl-IndirectPathAddChange*) during path addition or change:
 - 2> set the *failureTypeIndirectPath* as *indirectPathAddChangeFailure*;

The N3C remote UE shall set the indirect path failure type as follows:

- 1> if the UE initiates transmission of the *IndirectPathFailureInformation* message due to N3C connection failure:
 - 2> set the *failureTypeIndirectPath* as *n3c-Failure*;
- 1> else if the UE initiates transmission of the *IndirectPathFailureInformation* message due to Uu radio link failure on N3C indirect path in accordance with clause 5.3.10.3:
 - 2> set the *failureTypeIndirectPath* as *relayUE-Uu-RLF*;
- 1> if the UE initiates transmission of the *IndirectPathFailureInformation* message due to N3C Indirect path addition/change failure in accordance with clause 5.3.5.17.3.2a:
 - 2> set the *failureTypeIndirectPath* as *indirectPathAddChangeFailure*.

NOTE: It is out of 3GPP scope how the remote UE detects N3C connection failure, or how the relay UE indicates Uu RLF to the remote UE on the N3C connection.

5.7.3c.4 Actions related to transmission of *IndirectPathFailureInformation* message

The UE shall set the contents of the *IndirectPathFailureInformation* message as follows:

- 1> set the *failureTypeIndirectPath* in accordance with 5.7.3c.3;
- 1> if the procedure was initiated to report SL indirect path failure:

- 2> set the *sl-MeasResultServingRelay* to include the measurement result for serving L2 U2N Relay UE if available;
- 2> for each *measObjectRelay* included in *MeasConfig*, and for which measurement results are available:
 - 3> include an entry in *sl-MeasResultsCandRelay*;
- 1> else if the procedure was initiated to report N3C indirect path failure;
 - 2> include *n3c-relayUE-InfoList* to report relay UE information with non-3GPP connection(s) if available;
- 1> submit the *IndirectPathFailureInformation* message to lower layers for transmission.

5.7.4 UE Assistance Information

5.7.4.1 General

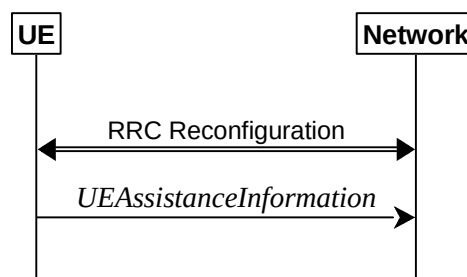 


Figure 5.7.4.1-1: UE Assistance Information

The purpose of this procedure is for the UE to inform the network of:

- its delay budget report carrying desired increment/decrement in the connected mode DRX cycle length; or
- its overheating assistance information; or
- its IDC assistance information; or
- its preference on DRX parameters for power saving; or
- its preference on the maximum aggregated bandwidth for power saving; or
- its preference on the maximum number of secondary component carriers for power saving; or
- its preference on the maximum number of MIMO layers for power saving; or
- its preference on the minimum scheduling offset for cross-slot scheduling for power saving; or
- its preference on the RRC state; or
- configured grant assistance information for NR sidelink communication; or
- its preference in being provisioned with reference time information; or
- its preference for FR2 UL gap; or
- its preference to transition out of RRC_CONNECTED state for MUSIM operation; or
- its preference on the MUSIM gaps; or
- its preference on the MUSIM gap priority; or
- its preference on keeping the colliding MUSIM gaps; or
- its preference on the MUSIM temporary capability restriction; or

- its relaxation state for RLM measurements; or
- its relaxation state for BFD measurements; or
- availability of data and/or signalling mapped to radio bearers which are not configured for SDT; or
- its preference for the SCG to be deactivated; or
- availability of uplink data to transmit for a DRB for which there is no MCG RLC bearer while the SCG is deactivated; or
- change of its fulfilment status for RRM measurement relaxation criterion; or
- service link (specified in TS 38.300 [2]) propagation delay difference between serving cell and neighbour cell(s); or
- its preference on multi-Rx operation for FR2; or
- availability of flight path information for Aerial UE operation; or
- UL traffic information; or
- the information of the relay UE(s) with which it connects via a non-3GPP connection for MP; or
- configured grant assistance information for NR sidelink positioning.

5.7.4.2 Initiation

A UE capable of providing delay budget report in RRC_CONNECTED may initiate the procedure in several cases, including upon being configured to provide delay budget report and upon change of delay budget preference.

A UE capable of providing overheating assistance information in RRC_CONNECTED may initiate the procedure if it was configured to do so, upon detecting internal overheating, or upon detecting that it is no longer experiencing an overheating condition.

A UE capable of providing IDC assistance information in RRC_CONNECTED may initiate the procedure if it was configured to do so, upon detecting IDC problem if the UE did not transmit an IDC assistance information since it was configured to provide IDC indications, or upon change of IDC problem information.

A UE capable of providing its preference on DRX parameters of a cell group for power saving in RRC_CONNECTED may initiate the procedure in several cases, if it was configured to do so, including upon having a preference on DRX parameters and upon change of its preference on DRX parameters.

A UE capable of providing its preference on the maximum aggregated bandwidth of a cell group for power saving in RRC_CONNECTED may initiate the procedure in several cases, if it was configured to do so, including upon having a maximum aggregated bandwidth preference and upon change of its maximum aggregated bandwidth preference.

A UE capable of providing its preference on the maximum number of secondary component carriers of a cell group for power saving in RRC_CONNECTED may initiate the procedure in several cases, if it was configured to do so, including upon having a maximum number of secondary component carriers preference and upon change of its maximum number of secondary component carriers preference.

A UE capable of providing its preference on the maximum number of MIMO layers of a cell group for power saving in RRC_CONNECTED may initiate the procedure in several cases, if it was configured to do so, including upon having a maximum number of MIMO layers preference and upon change of its maximum number of MIMO layers preference.

A UE capable of providing its preference on the minimum scheduling offset for cross-slot scheduling of a cell group for power saving in RRC_CONNECTED may initiate the procedure in several cases, if it was configured to do so, including upon having a minimum scheduling offset preference and upon change of its minimum scheduling offset preference.

A UE capable of providing assistance information to transition out of RRC_CONNECTED state may initiate the procedure if it was configured to do so, upon determining that it prefers to transition out of RRC_CONNECTED state, or upon change of its preferred RRC state.

A UE capable of providing configured grant assistance information for NR sidelink communication in RRC_CONNECTED may initiate the procedure in several cases, including upon being configured to provide traffic pattern information and upon change of traffic patterns.

A UE capable of providing an indication of its preference in being provisioned with reference time information may initiate the procedure upon being configured to provide this indication, or if it was configured to provide this indication and upon change of its preference.

A UE capable of providing an indication of its preference in FR2 UL gap may initiate the procedure if it was configured to do so, upon detecting the need of FR2 UL gap activation/deactivation.

A UE capable of providing MUSIM assistance information for gap preference may initiate the procedure if it was configured to do so, upon determining it needs the gaps, or upon change of the gap preference information.

A UE capable of providing MUSIM assistance information for gap priority preference and/or preference to keep the colliding MUSIM gaps may initiate the procedure if it was configured to do so, upon determining it has gap priority preference information and/or it has preference to keep the colliding MUSIM gaps.

A UE capable of providing MUSIM assistance information for leave indication may initiate the procedure if it was configured to do so upon determining that it needs to leave RRC_CONNECTED state.

A UE capable of providing MUSIM assistance information for temporary capability restriction may initiate the procedure if it was configured to do so, upon determining it has temporary capability restriction or upon determining the removal of the capability restriction.

A UE capable of relaxing its RLM measurements of a cell group in RRC_CONNECTED state shall initiate the procedure for providing an indication of its relaxation state for RLM measurements upon being configured to do so, and upon change of its relaxation state for RLM measurements in RRC_CONNECTED state.

A UE capable of relaxing its BFD measurements in serving cells of a cell group in RRC_CONNECTED shall initiate the procedure for providing an indication of its relaxation state for BFD measurements upon being configured to do so, and upon change of its relaxation state for BFD measurements in RRC_CONNECTED state.

A UE capable of SDT initiates this procedure when data and/or signalling mapped to radio bearers that are not configured for SDT becomes available during SDT (i.e. while SDT procedure is ongoing).

A UE capable of providing its preference for SCG deactivation may initiate the procedure if it was configured to do so, upon determining that it prefers or does no more prefer the SCG to be deactivated.

A UE that has uplink data to transmit for a DRB for which there is no MCG RLC bearer while the SCG is deactivated shall initiate the procedure.

A UE capable of providing an indication of fulfilment of the RRM measurement relaxation criterion in connected mode may initiate the procedure if it was configured to do so, upon change of its fulfilment status for RRM measurement relaxation criterion for connected mode.

A UE capable of providing service link propagation delay difference between serving cell and neighbour cell(s) shall initiate the procedure upon being configured to do so, and upon determining that service link propagation delay difference between serving cell and a neighbour cell has changed more than *threshPropDelayDiff* compared with the last reported value.

A UE capable of providing an indication of its preference on multi-Rx operation for FR2 may initiate the procedure if it was configured to do so, upon detecting having a preference on multi-Rx operation for FR2 and upon change of its preference on multi-Rx operation for FR2.

A UE capable of indicating the availability of flight path information may initiate the procedure, if it was configured to do so, upon determining that an initial or updated flight path information is available.

A UE capable of providing UL traffic information shall initiate the procedure when this information is available upon being configured to do so, and upon change of UL traffic information.

A UE capable of N3C remote UE operation initiates the procedure upon being configured to report relay UE information on the available non-3GPP connection(s), and upon change of its available non-3GPP connection(s).

A UE capable of providing configured grant assistance information including SL-PRS transmission periodicity, priority, bandwidth and delay budget for NR sidelink positioning in RRC_CONNECTED may initiate the procedure.

Upon initiating the procedure, the UE shall:

- 1> if configured to provide delay budget report:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *delayBudgetReport* since it was configured to provide delay budget report; or
 - 2> if the current delay budget is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *delayBudgetReport* and timer T342 is not running:
 - 3> start or restart timer T342 with the timer value set to the *delayBudgetReportingProhibitTimer*;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide a delay budget report;
- 1> if configured to provide overheating assistance information:
 - 2> if the overheating condition has been detected and T345 is not running; or
 - 2> if the current overheating assistance information is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *overheatingAssistance* and timer T345 is not running:
 - 3> start timer T345 with the timer value set to the *overheatingIndicationProhibitTimer*;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide overheating assistance information;
- 1> if configured to provide IDC assistance information based on *candidateServingFreqListNR* included in *idc-AssistanceConfig* of a cell group:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *idc-Assistance* since it was configured to provide IDC assistance information:
 - 3> if on one or more frequencies included in *candidateServingFreqListNR*, the UE is experiencing IDC problems that it cannot solve by itself; or
 - 3> if on one or more supported UL CA or NR-DC combination comprising of carrier frequencies included in *candidateServingFreqListNR*, the UE is experiencing IDC problems that it cannot solve by itself:
 - 4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide FDM IDC assistance information including a list of affected frequencies and/or frequency combinations;
 - 2> else if the current *idc-Assistance* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide IDC FDM assistance information including a list of affected frequencies and/or frequency combinations;
- 1> if configured to provide IDC assistance information based on *idc-FDM-AssistanceConfig* included in *idc-AssistanceConfig* of a cell group:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *idc-FDM-Assistance* since it was configured to provide IDC assistance information:
 - 3> if on one or more frequency ranges included in *candidateServingFreqRangeListNR*, the UE is experiencing IDC problems that it cannot solve by itself; or
 - 3> if on one or more supported UL CA or NR-DC combination comprising of frequency ranges included in *candidateServingFreqRangeListNR*, the UE is experiencing IDC problems that it cannot solve by itself:
 - 4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide IDC enhanced FDM assistance information including a list of affected frequency ranges and/or frequency range combinations;
 - 2> else if the current *idc-FDM-Assistance* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message:

- 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide IDC enhanced FDM assistance information including a list of affected frequency ranges and/or frequency range combinations;
- 1> if configured to provide IDC assistance information based on *idc-TDM-AssistanceConfig* included in *idc-AssistanceConfig* of a cell group:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *idc-TDM-Assistance* since it was configured to provide IDC assistance information:
 - 3> if on one or more frequencies included in *candidateServingFreqListNR* or frequency ranges included in *candidateServingFreqRangeListNR*, the UE is experiencing IDC problems that it cannot solve by itself; or
 - 3> if on one or more supported UL CA or NR-DC combination comprising of carrier frequencies included in *candidateServingFreqListNR* or frequency ranges included in *candidateServingFreqRangeListNR*, the UE is experiencing IDC problems that it cannot solve by itself;
 - 4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide IDC TDM assistance information;
 - 2> else if the current *idc-TDM-Assistance* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide IDC TDM assistance information;

NOTE 1: The term "IDC problems" refers to interference issues applicable across several subframes/slots where not necessarily all the subframes/slots are affected.

NOTE 2: For the frequencies or frequency range(s) on which a serving cell or serving cells is configured that is activated, IDC problems consist of interference issues that the UE cannot solve by itself, during either active data exchange or upcoming data activity which is expected in up to a few hundred milliseconds. For frequencies or frequency range(s) on which a SCell or SCells is configured that is deactivated, reporting IDC problems indicates an anticipation that the activation of the SCell or SCells would result in interference issues that the UE would not be able to solve by itself. For a non-serving frequency or frequency range(s), reporting IDC problems indicates an anticipation that if the non-serving frequency or frequencies or frequency range(s) became a serving frequency or serving frequencies or frequency range(s) then this would result in interference issues that the UE would not be able to solve by itself.

- 1> if configured to provide its preference on DRX parameters of a cell group for power saving:
 - 2> if the UE has a preference on DRX parameters of the cell group and the UE did not transmit a *UEAssistanceInformation* message with *drx-Preference* for the cell group since it was configured to provide its preference on DRX parameters of the cell group for power saving; or
 - 2> if the current *drx-Preference* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *drx-Preference* for the cell group and timer T346a associated with the cell group is not running:
 - 3> start the timer T346a with the timer value set to the *drx-PreferenceProhibitTimer* of the cell group;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *drx-Preference*;
- 1> if configured to provide its preference on the maximum aggregated bandwidth of a cell group for power saving:
 - 2> if the UE has a preference on the maximum aggregated bandwidth of the cell group and the UE did not transmit a *UEAssistanceInformation* message with *maxBW-Preference* and/or *maxBW-PreferenceFR2-2* for the cell group since it was configured to provide its preference on the maximum aggregated bandwidth of the cell group for power saving; or

- 2> if the current *maxBW-Preference* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *maxBW-Preference* and/or *maxBW-PreferenceFR2-2* for the cell group and timer T346b associated with the cell group is not running:
 - 3> start the timer T346b with the timer value set to the *maxBW-PreferenceProhibitTimer* of the cell group;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *maxBW-Preference* and/or *maxBW-PreferenceFR2-2*;
- 1> if configured to provide its preference on the maximum number of secondary component carriers of a cell group for power saving:
 - 2> if the UE has a preference on the maximum number of secondary component carriers of the cell group and the UE did not transmit a *UEAssistanceInformation* message with *maxCC-Preference* for the cell group since it was configured to provide its preference on the maximum number of secondary component carriers of the cell group for power saving; or
 - 2> if the current *maxCC-Preference* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *maxCC-Preference* for the cell group and timer T346c associated with the cell group is not running:
 - 3> start the timer T346c with the timer value set to the *maxCC-PreferenceProhibitTimer* of the cell group;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *maxCC-Preference*;
- 1> if configured to provide its preference on the maximum number of MIMO layers of a cell group for power saving:
 - 2> if the UE has a preference on the maximum number of MIMO layers of the cell group and the UE did not transmit a *UEAssistanceInformation* message with *maxMIMO-LayerPreference* and/or *maxMIMO-LayerPreferenceFR2-2* for the cell group since it was configured to provide its preference on the maximum number of MIMO layers of the cell group for power saving; or
 - 2> if the current *maxMIMO-LayerPreference* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *maxMIMO-LayerPreference* and/or *maxMIMO-LayerPreferenceFR2-2* for the cell group and timer T346d associated with the cell group is not running:
 - 3> start the timer T346d with the timer value set to the *maxMIMO-LayerPreferenceProhibitTimer* of the cell group;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *maxMIMO-LayerPreference* and/or *maxMIMO-LayerPreferenceFR2-2*;
- 1> if configured to provide its preference on the minimum scheduling offset for cross-slot scheduling of a cell group for power saving:
 - 2> if the UE has a preference on the minimum scheduling offset for cross-slot scheduling of the cell group and the UE did not transmit a *UEAssistanceInformation* message with *minSchedulingOffsetPreference* and/or *minSchedulingOffsetPreferenceExt* for the cell group since it was configured to provide its preference on the minimum scheduling offset for cross-slot scheduling of the cell group for power saving; or
 - 2> if the current *minSchedulingOffsetPreference* and/or *minSchedulingOffsetPreferenceExt* information for the cell group is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *minSchedulingOffsetPreference* and/or *minSchedulingOffsetPreferenceExt* for the cell group and timer T346e associated with the cell group is not running:
 - 3> start the timer T346e with the timer value set to the *minSchedulingOffsetPreferenceProhibitTimer* of the cell group;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *minSchedulingOffsetPreference* and/or *minSchedulingOffsetPreferenceExt*;
- 1> if configured to provide its release preference and timer T346f is not running:

- 2> if the UE determines that it would prefer to transition out of RRC_CONNECTED state; or
- 2> if the UE is configured with *connectedReporting* and the UE determines that it would prefer to revert an earlier indication to transition out of RRC_CONNECTED state:
 - 3> start timer T346f with the timer value set to the *releasePreferenceProhibitTimer*;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the release preference;
- 1> if configured to provide configured grant assistance information for NR sidelink communication:
 - 2> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide configured grant assistance information for NR sidelink communication;
- 1> if configured to provide preference in being provisioned with reference time information:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *referenceTimeInfoPreference* since it was configured to provide preference; or
 - 2> if the UE's preference changed from the last time UE initiated transmission of the *UEAssistanceInformation* message including *referenceTimeInfoPreference*:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide preference in being provisioned with reference time information.
- 1> if configured to provide its preference on FR2 UL gap:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *ul-GapFR2-Preference* since it was configured to provide its preference on FR2 UL gap information:
 - 3> if the UE has a preference on FR2 UL gap activation/deactivation:
 - 4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide FR2 UL gap preference;
 - 2> else if the current FR2 UL gap preference is different from the one indicated in the last transmission of the *UEAssistanceInformation* message:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide FR2 UL gap preference.
- 1> if configured to provide MUSIM assistance information for leaving RRC_CONNECTED:
 - 2> if the UE needs to leave RRC_CONNECTED state and the timer T346g is not running:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide MUSIM assistance information for leaving RRC_CONNECTED;
 - 3> start the timer T346g with the timer value set to the *musim-LeaveWithoutResponseTimer*;
- 1> if configured to provide MUSIM assistance information for gap preference:
 - 2> if configured to provide MUSIM assistance information for gap priority preference:
 - 3> if the UE has a preference on the MUSIM gap(s) and the UE did not transmit a *UEAssistanceInformation* message with *musim-GapPreferenceList* and/or *musim-GapPriorityPreferenceList* and/or *musim-GapKeepPreference* since it was configured to provide MUSIM assistance information for gap preference and gap priority preference and the timer T346h is not running; or
 - 3> if the current *musim-GapPreferenceList* and/or *musim-GapPriorityPreferenceList* and/or *musim-GapKeepPreference* is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *musim-GapPreferenceList* and/or *musim-GapPriorityPreferenceList* and/or *musim-GapKeepPreference* and the timer T346h is not running;

4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *musim-GapPreferenceList* and/or *musim-GapPriorityPreferenceList* and/or *musim-GapKeepPreference*;

4> start the timer T346h with the timer value set to the *musim-GapProhibitTimer*.

2> else:

3> if the UE has a preference on the MUSIM gap(s) and the UE did not transmit a *UEAssistanceInformation* message with *musim-GapPreferenceList* since it was configured to provide MUSIM assistance information for gap preference; or

3> if the current *musim-GapPreferenceList* is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *musim-GapPreferenceList* and the timer T346h is not running;

4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *musim-GapPreferenceList*;

4> start the timer T346h with the timer value set to the *musim-GapProhibitTimer*.

NOTE 3: The UE does not need to initiate transmission of the *UEAssistanceInformation* message if the difference between the current *musim-GapPreferenceList* and the last transmission of the *UEAssistanceInformation* message including *musim-GapPreferenceList* is only due to removal of an ended aperiodic gap.

1> if configured to provide MUSIM assistance information for temporary capability restriction:

2> if the UE has temporary capability restriction on the current configuration and timer T348 is not running:

3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *musim-Cell-SCG-ToRelease* and/or *musim-CellToAffectList*;

3> start the timer T348 with the timer value set to the *musim-WaitTimer*.

2> if the UE has temporary capability restriction on the combination(s) of bands comprising of band(s) included in *musim-CandidateBandList* or if the UE has temporary capability restriction on the maximum CC number, and the UE did not transmit a *UEAssistanceInformation* message with *musim-AffectedBandsList* and/or *musim-AvoidedBandsList* and/or *musim-MaxCC* since it was configured to provide MUSIM assistance information for temporary capability restriction and timer T346n is not running; or

2> if the current *musim-AffectedBandsList* and/or *musim-AvoidedBandsList* and/or *musim-MaxCC* is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *musim-CapRestriction* and timer T346n is not running;

3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *musim-AffectedBandsList* and/or *musim-AvoidedBandsList* and/or *musim-MaxCC*;

3> start the timer T346n with the timer value set to the *musim-ProhibitTimer*.

2> if the UE is configured to provide the measurement gap requirement information of NR target bands and if the current measurement gap requirement information is different from the one indicated in the last transmission of the *UEAssistanceInformation* message including *musim-NeedForGapsInfoNR* or *RRCReconfigurationComplete* message or *RRCResumeComplete* message including *needForGapsInfoNR*:

3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the current *musim-NeedForGapsInfoNR*;

2> if the UE has included *musim-CapRestrictionInd* in the *RRCSetupComplete* message or *RRCResumeComplete* or *RRCReestablishmentComplete* message and the temporary capability restriction is not applicable when the UE is configured to provide MUSIM assistance information for temporary capability restriction:

3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to indicate that there is no temporary capability restriction;

- 1> if configured to provide the relaxation state of RLM measurements of a cell group and RLM measurement of the cell group is not stopped:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *rlm-MeasRelaxationState* since it was configured to provide the relaxation state of RLM measurements for the cell group; or
 - 2> if the relaxation state of RLM measurements for the cell group is currently different from the relaxation state reported in the last transmission of the *UEAssistanceInformation* message including *rlm-MeasRelaxationState* of the cell group and timer T346j associated with the cell group is not running:
 - 3> start timer T346j with the timer value set to the *rlm-RelaxtionReportingProhibitTimer*;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the relaxation state of RLM measurements of the cell group;
- 1> if configured to provide the relaxation state of BFD measurements of serving cells of a cell group and BFD measurement of the cell group is not stopped:
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *bfd-MeasRelaxationState* since it was configured to provide the relaxation state of BFD measurements for the cell group; or
 - 2> if the relaxation state of BFD measurements in any serving cell of the cell group is currently different from the relaxation state reported in the last transmission of the *UEAssistanceInformation* message including *bfd-MeasRelaxationState* of the cell group and timer T346k associated with the cell group is not running:
 - 3> start timer T346k with the timer value set to the *bfd-RelaxtionReportingProhibitTimer*;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the relaxation state of BFD measurements of serving cells of the cell group.
- 1> if data and/or signalling mapped to radio bearers not configured for SDT becomes available during SDT (i.e. while SDT procedure is ongoing):
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *nonSDT-DataIndication* since the initiation of the current resume procedure for SDT:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide *nonSDT-DataIndication*.
- 1> if configured to provide its preference for SCG deactivation and timer T346i is not running;
 - 2> if the UE prefers the SCG to be deactivated and did not transmit a *UEAssistanceInformation* message with *scg-DeactivationPreference* since it was configured to provide its SCG deactivation preference; or
 - 2> if the UE preference for SCG deactivation is different from the last indicated *scg-DeactivationPreference*:
 - 3> start timer T346i with the timer value set to the *scg-DeactivationPreferenceProhibitTimer*;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the UE preference for SCG deactivation;
- 1> if the SCG is deactivated, and,
 - 1> the UE has uplink data to send for an SCG RLC entity while the UE previously did not have any uplink data to send for any SCG RLC entity:
 - 2> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to indicate that the UE has uplink data to send for a DRB whose *DRB-Identity* is not included in any *RLC-BearerConfig* in the *CellGroupConfig* associated with the MCG.
- 1> if configured to send indications of RRM measurement relaxation criterion fulfilment:
 - 2> if the criterion in 5.7.4.4 is met for a period of $T_{\text{SearchDeltaP-StationaryConnected}}$:
 - 3> if the UE did not transmit a *UEAssistanceInformation* message with *rrm-MeasRelaxationFulfilment* as *true* since it was configured to provide indications of RRM measurement relaxation criterion fulfilment; or

- 3> the last *UEAssistanceInformation* message indicated the criterion in 5.7.4.4 is not fulfilled with *rrm-MeasRelaxationFulfilment* as *false*:
 - 4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to indicate that the criterion for RRM measurement relaxation for connected mode is fulfilled;
- 2> else:
 - 3> if the last *UEAssistanceInformation* message indicated fulfilment of the criterion in 5.7.4.4 with *rrm-MeasRelaxationFulfilment* as *true*:
 - 4> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to indicate that the criterion for RRM measurement relaxation for connected mode is not fulfilled.
- 1> if configured to provide service link propagation delay difference between serving cell and neighbour cell(s);
 - 2> if the UE did not transmit a *UEAssistanceInformation* message with *propagationDelayDifference* since it was configured to provide service link propagation delay difference between serving cell and neighbour cell(s); or
 - 2> for any neighbour cell in *neighCellInfoList*, if the service link propagation delay difference between serving cell and the neighbour cell has changed more than *threshPropDelayDiff* since the last transmission of the *UEAssistanceInformation* message including *propagationDelayDifference*:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide service link propagation delay difference between serving cell and each neighbour cell included in the *neighCellInfoList*;
- 1> if configured to provide its preference for multi-Rx operation and timer T346m is not running;
 - 2> if the UE has a preference on multi-Rx operation for FR2 and did not transmit a *UEAssistanceInformation* message with *multiRx-PreferenceFR2* since it was configured to provide its preference on multi-Rx operation; or
 - 2> if the UE has a different preference on multi-Rx operation for FR2 from the last indicated *multiRx-PreferenceFR2*:
 - 3> start timer T346m with the timer value set to the *multiRx-PreferenceReportingConfigFR2ProhibitTimer*;
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide the UE preference for multi-Rx operation for FR2.
- 1> if configured to indicate the availability of flight path information and the UE has (updated) flight path information available;
 - 2> if the UE had neither provided a flight path information nor indicated the availability of flight path information since last entering RRC_CONNECTED state; or
 - 2> if at least one waypoint or a timestamp corresponding to a waypoint location that was not previously provided since last entering RRC_CONNECTED state is available; or
 - 2> if at least one upcoming waypoint or a timestamp corresponding to a waypoint location that was previously provided since last entering RRC_CONNECTED state is to be removed; or
 - 2> if *flightPathUpdateDistanceThr* is configured and, for at least one waypoint, the 3D distance between the previously provided location and the new location is more than the distance threshold configured by *flightPathUpdateDistanceThr*; or
 - 2> if *flightPathUpdateTimeThr* is configured and, for at least one waypoint, the time difference between the previously provided timestamp and the new timestamp, if available, is more than the time threshold configured by *flightPathUpdateTimeThr*:
 - 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to indicate the availability of flight path information;

NOTE 4: If neither *flightPathUpdateDistanceThr* nor *flightPathUpdateTimeThr* is configured, it is up to UE implementation whether to initiate transmission of the *UEAssistanceInformation* message when updated flight path information is available.

1> if configured to provide UL traffic information:

- 2> if the UE did not transmit a *UEAssistanceInformation* message with *ul-TrafficInfo* since it was configured to provide UL traffic information; or
- 2> if UL traffic information included in the previous *UEAssistanceInformation* has changed since the last transmission of the *UEAssistanceInformation* message containing *ul-TrafficInfo* for at least one QoS flow for which timer T3461 is not running;
- 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide UL traffic information.

NOTE 5: The UE only considers *burstArrivalTime* to have changed when it changes relative to the periodicity of the Data Burst arrival.

1> if configured to report relay UE information with non-3GPP connection(s):

- 2> if the UE did not transmit a *UEAssistanceInformation* message with *n3c-relayUE-InfoList* since it was configured to report available relay UE information with non-3GPP connection(s); or
- 2> if the UE has new available non-3GPP connection(s); or
- 2> if the non-3GPP connection(s) with the reported relay UE(s) is not available;
- 3> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to report relay UE information with non-3GPP connection(s) included in the *n3c-relayUE-InfoList*;

1> if configured to provide configured grant assistance information for NR sidelink positioning:

- 2> initiate transmission of the *UEAssistanceInformation* message in accordance with 5.7.4.3 to provide configured grant assistance information for NR sidelink positioning;

5.7.4.3 Actions related to transmission of *UEAssistanceInformation* message

The UE shall set the contents of the *UEAssistanceInformation* message as follows:

- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide a delay budget report according to 5.7.4.2 or 5.3.5.3;
 - 2> set *delayBudgetReport* to *type1* according to a desired value;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide overheating assistance information according to 5.7.4.2 or 5.3.5.3;
 - 2> if the UE experiences internal overheating:
 - 3> if the UE prefers to temporarily reduce the number of maximum secondary component carriers:
 - 4> include *reducedMaxCCs* in the *OverheatingAssistance* IE;
 - 4> set *reducedCCsDL* to the number of maximum SCells the UE prefers to be temporarily configured in downlink;
 - 4> set *reducedCCsUL* to the number of maximum SCells the UE prefers to be temporarily configured in uplink;
 - 3> if the UE prefers to temporarily reduce maximum aggregated bandwidth of FR1:
 - 4> include *reducedMaxBW-FR1* in the *OverheatingAssistance* IE;
 - 4> set *reducedBW-DL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all downlink carriers of FR1;

- 4> set *reducedBW-UL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all uplink carriers of FR1;
- 3> if the UE prefers to temporarily reduce maximum aggregated bandwidth of FR2-1:
 - 4> include *reducedMaxBW-FR2* in the *OverheatingAssistance* IE;
 - 4> set *reducedBW-DL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all downlink carriers of FR2-1;
 - 4> set *reducedBW-UL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all uplink carriers of FR2-1;
- 3> if the UE prefers to temporarily reduce maximum aggregated bandwidth of FR2-2:
 - 4> include *reducedMaxBW-FR2-2* in the *OverheatingAssistance* IE;
 - 4> set *reducedBW-FR2-2-DL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all downlink carriers of FR2-2;
 - 4> set *reducedBW-FR2-2-UL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all uplink carriers of FR2-2;
- 3> if the UE prefers to temporarily reduce the number of maximum MIMO layers of each serving cell operating on FR1:
 - 4> include *reducedMaxMIMO-LayersFR1* in the *OverheatingAssistance* IE;
 - 4> set *reducedMIMO-LayersFR1-DL* to the number of maximum MIMO layers of each serving cell operating on FR1 the UE prefers to be temporarily configured in downlink;
 - 4> set *reducedMIMO-LayersFR1-UL* to the number of maximum MIMO layers of each serving cell operating on FR1 the UE prefers to be temporarily configured in uplink;
- 3> if the UE prefers to temporarily reduce the number of maximum MIMO layers of each serving cell operating on FR2-1:
 - 4> include *reducedMaxMIMO-LayersFR2* in the *OverheatingAssistance* IE;
 - 4> set *reducedMIMO-LayersFR2-DL* to the number of maximum MIMO layers of each serving cell operating on FR2-1 the UE prefers to be temporarily configured in downlink;
 - 4> set *reducedMIMO-LayersFR2-UL* to the number of maximum MIMO layers of each serving cell operating on FR2-1 the UE prefers to be temporarily configured in uplink;
- 3> if the UE prefers to temporarily reduce the number of maximum MIMO layers of each serving cell operating on FR2-2:
 - 4> include *reducedMaxMIMO-LayersFR2-2* in the *OverheatingAssistance* IE;
 - 4> set *reducedMIMO-LayersFR2-2-DL* to the number of maximum MIMO layers of each serving cell operating on FR2 the UE prefers to be temporarily configured in downlink;
 - 4> set *reducedMIMO-LayersFR2-2-UL* to the number of maximum MIMO layers of each serving cell operating on FR2 the UE prefers to be temporarily configured in uplink;
- 2> else (if the UE no longer experiences an overheating condition):
 - 3> do not include *reducedMaxCCs*, *reducedMaxBW-FR1*, *reducedMaxBW-FR2*, *reducedMaxBW-FR2-2*, *reducedMaxMIMO-LayersFR1*, *reducedMaxMIMO-LayersFR2* or *reducedMaxMIMO-LayersFR2-2* in *OverheatingAssistance* IE;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide IDC FDM assistance information according to 5.7.4.2 or 5.3.5.3:
 - 2> if there is at least one carrier frequency included in *candidateServingFreqListNR*, the UE is experiencing IDC problems that it cannot solve by itself:

- 3> include the field *affectedCarrierFreqList* with an entry for each affected carrier frequency included in *candidateServingFreqListNR*;
- 3> for each carrier frequency included in the field *affectedCarrierFreqList*, include *interferenceDirection* and set it accordingly;
- 2> if there is at least one supported UL CA or NR-DC combination comprising of carrier frequencies included in *candidateServingFreqListNR*, the UE is experiencing IDC problems that it cannot solve by itself:
 - 3> include *victimSystemType* for each UL CA or NR-DC combination included in *affectedCarrierFreqCombList*;
 - 3> if the UE sets *victimSystemType* to *wlan* or *bluetooth*:
 - 4> include *affectedCarrierFreqCombList* with an entry for each supported UL CA combination comprising of carrier frequencies included in *candidateServingFreqListNR*, that is affected by IDC problems;
 - 3> else:
 - 4> optionally include *affectedCarrierFreqCombList* with an entry for each supported UL CA or NR-DC combination comprising of carrier frequencies included in *candidateServingFreqListNR*, that is affected by IDC problems;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide IDC enhanced FDM assistance information according to 5.7.4.2 or 5.3.5.3:
 - 2> if there is at least one affected frequency range overlapping with one candidate frequency range included in *candidateServingFreqRangeListNR*, and the center frequency of the affected frequency range is within the candidate frequency range included in *candidateServingFreqRangeListNR*, the UE is experiencing IDC problems that it cannot solve by itself:
 - 3> include the field *affectedCarrierFreqRangeList* with an entry for each affected frequency range;
 - 3> for each affected frequency range included in the field *affectedCarrierFreqRangeList*, include *centerFreq* and *affectedBandwidth*;
 - 3> for each affected frequency range included in the field *affectedCarrierFreqRangeList*, include *interferenceDirection* and optionally *victimSystemType*, and set it accordingly;
 - 2> if there is at least one supported UL CA or NR-DC combinations comprising of candidate frequency ranges included in *candidateServingFreqRangeListNR*, and each affected frequency range in the UL CA or NR-DC combination overlapping with one candidate frequency range included in *candidateServingFreqRangeListNR*, and the center frequency of the affected frequency range is within the candidate frequency range included in *candidateServingFreqRangeListNR*, the UE is experiencing IDC problems that it cannot solve by itself:
 - 3> include the field *affectedCarrierFreqRangeCombList* with an entry for each supported UL CA or NR-DC combination comprising of frequency ranges that is affected by IDC problems;
 - 3> for each affected frequency range included in the field *affectedCarrierFreqRangeCombList*, include *centerFreq* and *affectedBandwidth*;
 - 3> for each UL CA or NR-DC combination included in the field *affectedCarrierFreqRangeCombList*, include *interferenceDirection* and optionally *victimSystemType*, and set it accordingly;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide IDC TDM assistance information according to 5.7.4.2 or 5.3.5.3:
 - 2> if there is at least one candidate carrier frequency included in *candidateServingFreqListNR* or candidate frequency range included in *candidateServingFreqRangeListNR* or one supported UL CA or NR-DC combination comprising of candidate carrier frequencies included in *candidateServingFreqListNR* or candidate frequency ranges included in *candidateServingFreqRangeListNR*, the UE is experiencing IDC problems that it cannot solve by itself, and *affectedCarrierFreqList* or *affectedCarrierFreqCombList* or *affectedCarrierFreqRangeList* or *affectedCarrierFreqRangeCombList* is included, and *idc-TDM-AssistanceConfig* is set to *setup*:

- 3> include Time Domain Multiplexing (TDM) based assistance information as indicated by *idc-TDM-Assistance* that could be used to resolve the IDC problems;

NOTE 1: When sending an *UEAssistanceInformation* message to inform the IDC problems, the UE includes all IDC assistance information in the *idc-Assistance* (IDC FDM assistance information) or *idc-FDM-Assistance* (IDC enhanced FDM assistance information) or *idc-TDM-Assistance* (IDC TDM assistance information) fields respectively (rather than providing e.g. the changed part(s) of the IDC assistance information in respective fields).

NOTE 2: Upon not anymore experiencing a particular IDC problem that the UE previously reported, the UE provides an IDC indication with the modified contents of the *UEAssistanceInformation* message (e.g. by not including the IDC assistance information in the *idc-Assistance* or *idc-FDM-Assistance* or *idc-TDM-Assistance* fields).

- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *drx-Preference* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:

- 2> include *drx-Preference* in the *UEAssistanceInformation* message;

- 2> if the UE has a preference on DRX parameters for the cell group:

- 3> if the UE has a preference for the long DRX cycle:

- 4> include *preferredDRX-LongCycle* in the *DRX-Preference* IE and set it to the preferred value;

- 3> if the UE has a preference for the DRX inactivity timer:

- 4> include *preferredDRX-InactivityTimer* in the *DRX-Preference* IE and set it to the preferred value;

- 3> if the UE has a preference for the short DRX cycle:

- 4> include *preferredDRX-ShortCycle* in the *DRX-Preference* IE and set it to the preferred value;

- 3> if the UE has a preference for the short DRX timer:

- 4> include *preferredDRX-ShortCycleTimer* in the *DRX-Preference* IE and set it to the preferred value;

- 2> else (if the UE has no preference on DRX parameters for the cell group):

- 3> do not include *preferredDRX-LongCycle*, *preferredDRX-InactivityTimer*, *preferredDRX-ShortCycle* and *preferredDRX-ShortCycleTimer* in the *DRX-Preference* IE;

- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *maxBW-Preference* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:

- 2> include *maxBW-Preference* in the *UEAssistanceInformation* message;

- 2> if the UE has a preference on the maximum aggregated bandwidth for the cell group:

- 3> if the UE prefers to reduce the maximum aggregated bandwidth of FR1:

- 4> include *reducedMaxBW-FR1* in the *MaxBW-Preference* IE;

- 4> set *reducedBW-DL* to the maximum aggregated bandwidth the UE desires to have configured across all downlink carriers of FR1 in the cell group;

- 4> set *reducedBW-UL* to the maximum aggregated bandwidth the UE desires to have configured across all uplink carriers of FR1 in the cell group;

- 3> if the UE prefers to reduce the maximum aggregated bandwidth of FR2-1:

- 4> include *reducedMaxBW-FR2* in the *MaxBW-Preference* IE;

- 4> set *reducedBW-DL* to the maximum aggregated bandwidth the UE desires to have configured across all downlink carriers of FR2-1 in the cell group;

- 4> set *reducedBW-UL* to the maximum aggregated bandwidth the UE desires to have configured across all uplink carriers of FR2-1 in the cell group;
- 2> else (if the UE has no preference on the maximum aggregated bandwidth for the cell group):
 - 3> do not include *reducedMaxBW-FR1* and *reducedMaxBW-FR2* in the *MaxBW-Preference* IE;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *maxBW-PreferenceFR2-2* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:
 - 2> include *maxBW-PreferenceFR2-2* in the *UEAssistanceInformation* message;
 - 3> if the UE prefers to reduce the maximum aggregated bandwidth of FR2-2:
 - 4> include *reducedMaxBW-FR2-2* in the *MaxBW-PreferenceFR2-2* IE;
 - 4> set *reducedBW-FR2-2-DL* to the maximum aggregated bandwidth the UE desires to have configured across all downlink carriers of FR2-2 in the cell group;
 - 4> set *reducedBW-FR2-2-UL* to the maximum aggregated bandwidth the UE desires to have configured across all uplink carriers of FR2-2 in the cell group;
 - 2> else (if the UE has no preference on the maximum aggregated bandwidth for the cell group):
 - 3> do not include *reducedMaxBW-FR2-2* in the *MaxBW-PreferenceFR2-2* IE;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *maxCC-Preference* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:
 - 2> include *maxCC-Preference* in the *UEAssistanceInformation* message;
 - 2> if the UE has a preference on the maximum number of secondary component carriers for the cell group:
 - 3> include *reducedMaxCCs* in the *MaxCC-Preference* IE;
 - 3> set *reducedCCsDL* to the number of maximum SCells the UE desires to have configured in downlink in the cell group;
 - 3> set *reducedCCsUL* to the number of maximum SCells the UE desires to have configured in uplink in the cell group;
 - 2> else (if the UE has no preference on the maximum number of secondary component carriers for the cell group):
 - 3> do not include *reducedMaxCCs* in the *MaxCC-Preference* IE;

NOTE 3: The UE can implicitly indicate a preference for NR SCG release by reporting the maximum aggregated bandwidth preference for power saving of the cell group, if configured, as zero for both FR1 and FR2, and by reporting the maximum number of secondary component carriers for power saving of the cell group, if configured, as zero for both uplink and downlink.

- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *maxMIMO-LayerPreference* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:
 - 2> include *maxMIMO-LayerPreference* in the *UEAssistanceInformation* message;
 - 2> if the UE has a preference on the maximum number of MIMO layers for the cell group:
 - 3> if the UE prefers to reduce the number of maximum MIMO layers of each serving cell operating on FR1:
 - 4> include *reducedMaxMIMO-LayersFR1* in the *MaxMIMO-LayerPreference* IE;
 - 4> set *reducedMIMO-LayersFR1-DL* to the preferred maximum number of downlink MIMO layers of each BWP of each FR1 serving cell that the UE operates on in the cell group;
 - 4> set *reducedMIMO-LayersFR1-UL* to the preferred maximum number of uplink MIMO layers of each FR1 serving cell that the UE operates on in the cell group;

- 3> if the UE prefers to reduce the number of maximum MIMO layers of each serving cell operating on FR2-1:
 - 4> include *reducedMaxMIMO-LayersFR2* in the *MaxMIMO-LayerPreference* IE;
 - 4> set *reducedMIMO-LayersFR2-DL* to the preferred maximum number of downlink MIMO layers of each BWP of each FR2-1 serving cell that the UE operates on in the cell group;
 - 4> set *reducedMIMO-LayersFR2-UL* to the preferred maximum number of uplink MIMO layers of each FR2-1 serving cell that the UE operates on in the cell group;
- 2> else (if the UE has no preference on the maximum number of MIMO layers for the cell group):
 - 3> do not include *reducedMaxMIMO-LayersFR1* and *reducedMaxMIMO-LayersFR2* in the *MaxMIMO-LayerPreference* IE;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *maxMIMO LayerPreferenceFR2 2* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:
 - 2> include *maxMIMO-LayerPreferenceFR2-2* in the *UEAssistanceInformation* message;
 - 2> if the UE has a preference on the maximum number of MIMO layers for the cell group for FR2-2:
 - 3> if the UE prefers to reduce the number of maximum MIMO layers of each serving cell operating on FR2 2:
 - 4> include *reducedMaxMIMO-LayersFR2-2* in the *MaxMIMO-LayerPreferenceFR2 2* IE;
 - 4> set *reducedMIMO-LayersFR2-2-DL* to the preferred maximum number of downlink MIMO layers of each BWP of each FR2-2 serving cell that the UE operates on in the cell group;
 - 4> set *reducedMIMO-LayersFR2-2-UL* to the preferred maximum number of uplink MIMO layers of each FR2-2 serving cell that the UE operates on in the cell group;
 - 2> else (if the UE has no preference on the maximum number of MIMO layers for the cell group):
 - 3> do not include *reducedMaxMIMO-LayersFR2-2* in the *MaxMIMO-LayerPreferenceFR2-2* IE;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *minSchedulingOffsetPreference* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:
 - 2> include *minSchedulingOffsetPreference* in the *UEAssistanceInformation* message;
 - 2> if the UE has a preference on the minimum scheduling offset for cross-slot scheduling for the cell group:
 - 3> if the UE has a preference for the value of K_0 (TS 38.214 [19], clause 5.1.2.1) for cross-slot scheduling with 15 kHz SCS:
 - 4> include *preferredK0-SCS-15kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_0 ;
 - 3> if the UE has a preference for the value of K_0 for cross-slot scheduling with 30 kHz SCS:
 - 4> include *preferredK0-SCS-30kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_0 ;
 - 3> if the UE has a preference for the value of K_0 for cross-slot scheduling with 60 kHz SCS:
 - 4> include *preferredK0-SCS-60kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_0 ;
 - 3> if the UE has a preference for the value of K_0 for cross-slot scheduling with 120 kHz SCS:
 - 4> include *preferredK0-SCS-120kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_0 ;

- 3> if the UE has a preference for the value of K_2 (TS 38.214 [19], clause 6.1.2.1) for cross-slot scheduling with 15 kHz SCS:
 - 4> include *preferredK2-SCS-15kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_2 ;
- 3> if the UE has a preference for the value of K_2 for cross-slot scheduling with 30 kHz SCS:
 - 4> include *preferredK2-SCS-30kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_2 ;
- 3> if the UE has a preference for the value of K_2 for cross-slot scheduling with 60 kHz SCS:
 - 4> include *preferredK2-SCS-60kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_2 ;
- 3> if the UE has a preference for the value of K_2 for cross-slot scheduling with 120 kHz SCS:
 - 4> include *preferredK2-SCS-120kHz* in the *MinSchedulingOffsetPreference* IE and set it to the desired value of K_2 ;
- 2> else (if the UE has no preference on the minimum scheduling offset for cross-slot scheduling for the cell group):
 - 3> do not include *preferredK0* and *preferredK2* in the *MinSchedulingOffsetPreference* IE;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *minSchedulingOffsetPreferenceExt* of a cell group for power saving according to 5.7.4.2 or 5.3.5.3:
 - 2> include *minSchedulingOffsetPreferenceExt* in the *UEAssistanceInformation* message;
 - 2> if the UE has a preference on the minimum scheduling offset for cross-slot scheduling for the cell group for FR2-2:
 - 3> include *minSchedulingOffsetPreferenceExt* in the *UEAssistanceInformation* message;
 - 4> if the UE has a preference for the value of K_0 (TS 38.214 [19], clause 5.1.2.1) for cross-slot scheduling with 480 kHz SCS:
 - 5> include *preferredK0-SCS-480kHz* in the *minSchedulingOffsetPreferenceExt* IE and set it to the desired value of K_0 ;
 - 4> if the UE has a preference for the value of K_0 for cross-slot scheduling with 960 kHz SCS:
 - 5> include *preferredK0-SCS-960kHz* in the *minSchedulingOffsetPreferenceExt* IE and set it to the desired value of K_0 ;
 - 4> if the UE has a preference for the value of K_2 for cross-slot scheduling with 480 kHz SCS:
 - 5> include *preferredK2-SCS-480kHz* in the *minSchedulingOffsetPreferenceExt* IE and set it to the desired value of K_2 ;
 - 4> if the UE has a preference for the value of K_2 for cross-slot scheduling with 960 kHz SCS:
 - 5> include *preferredK2-SCS-960kHz* in the *minSchedulingOffsetPreferenceExt* IE and set it to the desired value of K_2 ;
 - 3> else (if the UE has no preference on the minimum scheduling offset for cross-slot scheduling for the cell group):
 - 4> do not include *preferredK0* and *preferredK2* in the *minSchedulingOffsetPreferenceExt* IE;
 - 1> if transmission of the *UEAssistanceInformation* message is initiated to provide a release preference according to 5.7.4.2 or 5.3.5.3:
 - 2> include *releasePreference* in the *UEAssistanceInformation* message;

- 2> set *preferredRRC-State* to the desired RRC state on transmission of the *UEAssistanceInformation* message;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide an indication of preference in being provisioned with reference time information according to 5.7.4.2 or 5.3.5.3:
 - 2> if the UE has a preference in being provisioned with reference time information:
 - 3> set *referenceTimeInfoPreference* to *true*;
 - 2> else:
 - 3> set *referenceTimeInfoPreference* to *false*.
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide preference on FR2 UL gap according to 5.7.4.2 or 5.3.5.3:
 - 2> if the UE has a preference for FR2 UL gap configuration:
 - 3> set *ul-GapFR2-PatternPreference* to the preferred FR2 UL gap pattern;
 - 2> else (if the UE has no preference for the FR2 UL gap configuration):
 - 3> do not include *ul-GapFR2-PatternPreference* in the *UL-GapFR2-Preference* IE.
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *musim-GapPreferenceList* and/or *musim-GapPriorityPreferenceList* and/or *musim-GapKeepPreference*, or provide MUSIM assistance information for leaving RRC_CONNECTED according to 5.7.4.2 or 5.3.5.3:
 - 2> if the UE has a preference for MUSIM periodic gap(s):
 - 3> include *musim-GapPreferenceList* with an entry for each periodic gap the UE prefers to be configured;
 - 4> set *musim-GapLength* and *musim-GapRepetitionAndOffset* in the *musim-GapInfo* IE to the values of the length and the repetition/offset of the gap(s), respectively, the UE prefers to be configured with;
 - 4> if UE has a preference for MUSIM gap priority;
 - 5> include the *musim-GapPriorityPreferenceList* the UE prefers to be configured;
 - 2> if the UE has a preference for MUSIM aperiodic gap:
 - 3> include the field *musim-GapPreferenceList*, with one entry for the aperiodic gap the UE prefers to be configured;
 - 4> include *musim-GapLength* in the *musim-GapInfo* IE and set it to the values of the length of the gap the UE prefers to be configured with;
 - 4> optionally include *musim-Starting-SFN-AndSubframe* in the *musim-GapInfo* IE and set it to the starting SFN/subframe of the gap the UE prefers to be configured with;
 - 2> if the UE has a preference to keep all colliding MUSIM gaps:
 - 3> include the *musim-GapKeepPreference*;
 - 2> if the UE has no longer preference for the periodic/aperiodic gaps:
 - 3> do not include *musim-GapPreferenceList*, *musim-GapPriorityPreferenceList* and *musim-GapKeepPreference* in the *musim-Assistance* IE;
 - 2> if UE has a preference to leave RRC_CONNECTED state:
 - 3> set *musim-PreferredRRC-State* to the preferred RRC state.
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *musim-CapRestriction* according to 5.7.4.2 or 5.3.5.3:
 - 2> if UE has a preference for temporary capability restriction:

- 3> if UE has a preference for serving cell(s), except PCell, and/or SCG to be released:
 - 4> include the *musim-Cell-SCG-ToRelease*;
 - 5> set *musim-CellToRelease* to include the serving cell(s) the UE prefers to be released;
 - 5> set *scg-ReleasePreference* to *scgReleasePreferred* if the UE prefers the SCG to be released;
- 3> if UE has a preference to indicate the serving cells with restricted capabilities:
 - 4> include the *musim-CellToAffectList* the UE prefers to be configured;
 - 5> include the *musim-ServCellIndex* and the *musim-MIMO-Layers-DL/ musim-MIMO-Layers-UL/ musim-SupportedBandwidth-DL/ musim-SupportedBandwidth-UL* for the corresponding serving cell;
- 3> if UE has a preference to indicate the maximum number of CCs:
 - 4> include the *musim-CapRestriction* for the *musim-MaxCC* the UE prefers to be configured;
 - 5> include the *musim-MaxCC-TotalDL/ musim-MaxCC-TotalUL/ musim-MaxCC-FR1-DL/ musim-MaxCC-FR1-UL/ musim-MaxCC-FR2-1-DL/ musim-MaxCC-FR2-2-UL/ musim-MaxCC-FR2-2-DL/ musim-MaxCC-FR2-2-UL* for the corresponding maximum number of CCs;
- 3> if UE has a preference to indicate band(s) and/or combination(s) of bands with capabilities restricted which comprise of the band(s) that is/are indicated in *musim-CandidateBandList*:
 - 4> include the *musim-AffectededBandsList* the UE prefer to be configured with capabilities restricted;
 - 5> include the *musim-bandEntryIndex* for each band or each band of the combination(s) for which capabilities are restricted;
 - 5> include the *musim-CapabilityRestricted* for the corresponding band;
- 3> if UE has a preference to indicate band(s) and/or combination(s) of bands to be avoided which comprise of band(s) that is indicated in *musim-CandidateBandList*:
 - 4> include the *musim-AvoidedBandsList* the UE prefers not to be configured;
 - 5> include the *musim-bandEntryIndex* for each band or each band of the combination(s) to be avoided;
- 2> if UE has no longer preference for temporary capability restriction indicated by *musim-Cell-SCG-ToRelease*, *musim-CellToAffectList*, *musim-MaxCC*, *musim-AffectededBandsList* and/or *musim-AvoidedBandsList*:
 - 3> do not include the corresponding temporary capability restriction preference in the *musim-CapRestriction*;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide *musim-NeedForGapsInfoNR* according to 5.7.4.2 or 5.3.5.3:
 - 2> include *intraFreq-needForGap* and set the gap requirement information of intra-frequency measurement for each supported NR serving cell;
 - 2> if the *requestedTargetBandFilterNR-r16* of *NeedForGapsConfigNR* is configured:
 - 3> for each supported NR band included in *requestedTargetBandFilterNR-r16*, include an entry in *interFreq-needForGap* and set the measurement gap requirement information for that band;
 - 2> else:
 - 3> include an entry in *interFreq-needForGap* and set the measurement gap requirement information for each supported NR band;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide the relaxation state of RLM measurements of a cell group according to 5.7.4.2:
 - 2> if the UE performs RLM measurement relaxation on the cell group according to TS 38.133 [14]:

- 3> set the *rlm-MeasRelaxationState* to *true*;
- 2> else:
 - 3> set the *rlm-MeasRelaxationState* to *false*;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide the relaxation state of BFD measurements of a cell group:
 - 2> for each serving cell of the cell group:
 - 3> if the UE performs BFD measurement relaxation on this serving cell according to TS 38.133 [14]:
 - 4> set the n-th bit of *bfd-MeasRelaxationState* to '1', where n is equal to the *servCellIndex* value + 1 of the serving cell;
 - 3> else:
 - 4> set the n-th bit of *bfd-MeasRelaxationState* to '0', where n is equal to the *servCellIndex* value + 1 of the serving cell.
- 1> if transmission of the *UEAssistanceInformation* message is initiated to indicate availability of data mapped to radio bearers not configured for SDT according to 5.7.4.2:
 - 2> include the *nonSDT-DataIndication* in the *UEAssistanceInformation* message;
 - 2> include and set the *resumeCause* according to the information received from the upper layers, if provided.
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide an indication of preference for SCG deactivation according to 5.7.4.2:
 - 2> include *scg-DeactivationPreference* in the *UEAssistanceInformation* message;
 - 2> set the *scg-DeactivationPreference* to *scg-DeactivationPreferred* if the UE prefers the SCG to be deactivated, otherwise set it to *noPreference*;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide an indication that the UE has uplink data related to a deactivated SCG according to 5.7.4.2:
 - 2> include *uplinkData* in the *UEAssistanceInformation* message.
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide an indication about whether the criterion for RRM relaxation for connected mode is fulfilled or not fulfilled:
 - 2> if the criterion for RRM measurement relaxation for connected mode is fulfilled:
 - 3> set the *rrm-MeasRelaxationFulfilment* to *true*;
 - 2> else:
 - 3> set the *rrm-MeasRelaxationFulfilment* to *false*.
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide the service link propagation delay difference between serving cell and neighbour cell(s) according to 5.7.4.2:
 - 2> include the *propagationDelayDifference* for each neighbour cell in the *neighCellInfoList*;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide preference on multi-Rx operation for FR2 according to 5.7.4.2:
 - 2> if the UE has a preference for not operating on multi-Rx (i.e. not supporting simultaneous reception with different QCL-typeD) for FR2:
 - 3> set *multiRx-PreferenceFR2* to *single*;
 - 2> else (if the UE has the preference for operating on multi-Rx for FR2):
 - 3> set *multiRx-PreferenceFR2* to *multiple*.

- 1> if transmission of the *UEAssistanceInformation* message is initiated to indicate the availability of flight path information according to 5.7.4.2 or 5.3.5.3;
 - 2> include the *flightPathInfoAvailable*;
- 1> if transmission of the *UEAssistanceInformation* message is initiated to provide UL traffic information according to 5.7.4.2 or 5.3.5.3:
 - 2> for each PDU session for which the UE intends to provide UL traffic information in this *UEAssistanceInformation* message:
 - 3> set *pdu-SessionID* to the value of the concerned PDU session ID;
 - 3> if transmission of the *UEAssistanceInformation* message is initiated to provide UL traffic information according to 5.3.5.3:
 - 4> stop timer T346l for each QoS flow of this PDU session for which the UE intends to provide UL traffic information in this *UEAssistanceInformation* message;
 - 3> for each QoS flow of this PDU session for which timer T346l is not running and for which the UE intends to provide UL traffic information in this *UEAssistanceInformation* message:
 - 4> start timer T346l associated to this QoS flow with the timer value set to the value of *ul-TrafficInfoProhibitTimer*;
 - 4> set *qfi* to the value of the concerned QFI;
 - 4> if the jitter range measurement is available; and
 - 4> if the UE did not provide jitter range since it was configured to provide UL traffic information, or if the measured jitter range has changed since the last transmission of the *UEAssistanceInformation* message containing *jitterRange*:
 - 5> set *jitterRange* to the latest measured value of the jitter range;
 - 4> if the burst arrival time measurement is available; and
 - 4> if the UE did not provide burst arrival time since it was configured to provide UL traffic information, or if the measured burst arrival time has changed since the last transmission of the *UEAssistanceInformation* message containing *burstArrivalTime*:
 - 5> set *burstArrivalTime* to the latest measured value of the burst arrival time;
 - 4> if the traffic periodicity measurement is available; and
 - 4> if the UE did not provide traffic periodicity since it was configured to provide UL traffic information, or if the measured traffic periodicity has changed since the last transmission of the *UEAssistanceInformation* message containing *trafficPeriodicity*:
 - 5> set *trafficPeriodicity* to the latest measured value of the traffic periodicity;
 - 4> if the UE did not provide *pdu-SetIdentification* since it was configured to provide UL traffic information, or if the information previously provided in *pdu-SetIdentification* has changed since the last transmission of the *UEAssistanceInformation* message containing *pdu-SetIdentification*:
 - 5> if the UE is able to identify PDU Set(s) for the QoS flow:
 - 6> set *pdu-SetIdentification* to *true*;
 - 5> else:
 - 6> set *pdu-SetIdentification* to *false*.
 - 4> if the UE did not provide *psi-Identification* since it was configured to provide UL traffic information, or if the information previously provided in *psi-Identification* has changed since the last transmission of the *UEAssistanceInformation* message containing *psi-Identification*:

5> if the UE is able to identify PSI(s) for the QoS flow:

6> set *psi-Identification* to true;

5> else:

6> set *psi-Identification* to false.

1> if transmission of the *UEAssistanceInformation* message is initiated to report relay UE information with non-3GPP connection(s) according to 5.7.4.2:

2> include *n3c-relayUE-InfoList* in the *UEAssistanceInformation* message;

The UE shall set the contents of the *UEAssistanceInformation* message for configured grant assistance information for NR sidelink communication or NR sidelink positioning:

1> if configured to provide configured grant assistance information for NR sidelink:

2> include the *sl-UE-AssistanceInformationNR*;

1> if configured to provide configured grant assistance information for NR sidelink positioning:

2> include the *sl-PRS-UE-AssistanceInformationNR*;

NOTE 4: It is up to UE implementation when and how to trigger configured grant assistance information for NR sidelink communication or NR sidelink positioning.

The UE shall:

1> if the procedure was triggered to provide configured grant assistance information for NR sidelink communication by an NR *RRCReconfiguration* message that was embedded within an E-UTRA *RRCConnectionReconfiguration*:

2> submit the *UEAssistanceInformation* to lower layers via SRB1, embedded in E-UTRA RRC message *ULInformationTransferIRAT* as specified in TS 36.331 [10], clause 5.6.28;

1> else if the procedure was triggered to provide UE preference for SCG deactivation or to indicate that the UE with a deactivate SCG has uplink data to send on a DRB for which there is no MCG RLC bearer:

2> submit the *UEAssistanceInformation* via SRB1 to lower layers for transmission;

1> else if the UE is in (NG)EN-DC:

2> if SRB3 is configured and the SCG is not deactivated:

3> submit the *UEAssistanceInformation* message via SRB3 to lower layers for transmission;

2> else:

3> submit the *UEAssistanceInformation* message via the E-UTRA MCG embedded in E-UTRA RRC message *ULInformationTransferMRDC* as specified in TS 36.331 [10].

1> else if the UE is in NR-DC:

2> if the UE assistance configuration that triggered this UE assistance information is associated with the SCG:

3> if SRB3 is configured and the SCG is not deactivated:

4> submit the *UEAssistanceInformation* message via SRB3 to lower layers for transmission;

3> else:

4> submit the *UEAssistanceInformation* message via the NR MCG embedded in NR RRC message *ULInformationTransferMRDC* as specified in 5.7.2a.3;

2> else:

3> submit the *UEAssistanceInformation* message via SRB1 to lower layers for transmission;

1> else:

2> submit the *UEAssistanceInformation* message to lower layers for transmission.

5.7.4.3a Setting the contents of *OverheatingAssistance* IE

The UE shall set the contents of *OverheatingAssistance* IE if initiated to provide overheating assistance indication for SCG in (NG)EN-DC according to clause 5.6.10.3 as specified in TS 36.331 [10]:

1> if the UE prefers to temporarily reduce the number of maximum secondary component carriers for SCG:

2> include *reducedMaxCCs* in the *OverheatingAssistance* IE;

2> set *reducedCCsDL* to the number of maximum PSCell and SCells of the SCG the UE prefers to be temporarily configured in downlink;

2> set *reducedCCsUL* to the number of maximum PSCell and SCells of the SCG the UE prefers to be temporarily configured in uplink;

1> if the UE prefers to temporarily reduce maximum aggregated bandwidth of FR1 for SCG:

2> include *reducedMaxBW-FR1* in the *OverheatingAssistance* IE;

2> set *reducedBW-FR1-DL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all downlink carriers of FR1 of the SCG;

2> set *reducedBW-FR1-UL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all uplink carriers of FR1 of the SCG;

1> if the UE prefers to temporarily reduce maximum aggregated bandwidth of FR2-1 for SCG:

2> include *reducedMaxBW-FR2* in the *OverheatingAssistance* IE;

2> set *reducedBW-FR2-DL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all downlink carriers of FR2-1 of the SCG;

2> set *reducedBW-FR2-UL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all uplink carriers of FR2-1 of the SCG;

1> if the UE prefers to temporarily reduce maximum aggregated bandwidth of FR2-2 for SCG:

2> include *reducedMaxBW-FR2-2* in the *OverheatingAssistance* IE;

2> set *reducedBW-FR2-2-DL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all downlink carriers of FR2-2 of the SCG;

2> set *reducedBW-FR2-2-UL* to the maximum aggregated bandwidth the UE prefers to be temporarily configured across all uplink carriers of FR2-2 of the SCG;

1> if the UE prefers to temporarily reduce the number of maximum MIMO layers of each serving cell operating on FR1 for SCG:

2> include *reducedMaxMIMO-LayersFR1* in the *OverheatingAssistance* IE;

2> set *reducedMIMO-LayersFR1-DL* to the number of maximum MIMO layers of each serving cell operating on FR1 of the SCG the UE prefers to be temporarily configured in downlink;

2> set *reducedMIMO-LayersFR1-UL* to the number of maximum MIMO layers of each serving cell operating on FR1 of the SCG the UE prefers to be temporarily configured in uplink;

1> if the UE prefers to temporarily reduce the number of maximum MIMO layers of each serving cell operating on FR2-1 for SCG:

2> include *reducedMaxMIMO-LayersFR2* in the *OverheatingAssistance* IE;

2> set *reducedMIMO-LayersFR2-DL* to the number of maximum MIMO layers of each serving cell operating on FR2-1 of the SCG the UE prefers to be temporarily configured in downlink;

- 2> set *reducedMIMO-LayersFR2-UL* to the number of maximum MIMO layers of each serving cell operating on FR2-1 of the SCG the UE prefers to be temporarily configured in uplink;
- 1> if the UE prefers to temporarily reduce the number of maximum MIMO layers of each serving cell operating on FR2-2 for SCG:
 - 2> include *reducedMaxMIMO-LayersFR2-2* in the *OverheatingAssistance* IE;
 - 2> set *reducedMIMO-LayersFR2-2-DL* to the number of maximum MIMO layers of each serving cell operating on FR2-2 of the SCG the UE prefers to be temporarily configured in downlink;
 - 2> set *reducedMIMO-LayersFR2-2-UL* to the number of maximum MIMO layers of each serving cell operating on FR2-2 of the SCG the UE prefers to be temporarily configured in uplink;

5.7.4.4 Relaxed measurement criterion for a stationary (e)RedCap UE

The relaxed measurement criterion for a stationary UE is met when:

- $(SS\text{-}RSRP_{\text{RefStationaryConnected}} - SS\text{-}RSRP) < S_{\text{SearchDeltaP-StationaryConnected}}$,

Where:

- SS-RSRP = current L3 RSRP measurement of the PCell based on SSB (dB).
- $SS\text{-}RSRP_{\text{RefStationaryConnected}}$ = reference SS-RSRP value of the PCell (dB), set as follows:
 - at the end of RRC reconfiguration procedure as specified in 5.3.5.3, when *rrm-MeasRelaxationReportingConfig* is included in the *RRCReconfiguration* message; or
 - after MAC successfully completes a Random Access procedure after applying a *reconfigurationWithSync* in *spCellConfig* while stationary criterion is configured; or
 - upon an indication from lower layers that a RACH-less handover or an LTM cell switch is successfully completed for the CG while stationary criterion is configured, or
 - if $(SS\text{-}RSRP - SS\text{-}RSRP_{\text{RefStationaryConnected}}) > 0$; or
 - if the relaxed measurement criterion has not been met for $T_{\text{SearchDeltaP-StationaryConnected}}$;
- UE shall set the value of $SS\text{-}RSRP_{\text{RefStationaryConnected}}$ to the current SS-RSRP value of the serving cell.

5.7.4a Void

5.7.5 Failure information

5.7.5.1 General

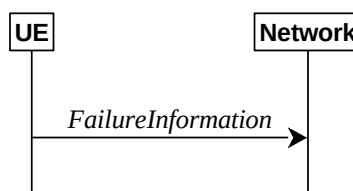 


Figure 5.7.5.1-1: Failure information

The purpose of this procedure is to inform the network about a failure detected by the UE.

5.7.5.2 Initiation

A UE initiates the procedure when there is a need inform the network about a failure detected by the UE. In particular, the UE initiates the procedure when the following condition is met:

1> upon detecting failure for an RLC bearer, in accordance with 5.3.10.3;

1> upon detecting DAPS handover failure, in accordance with 5.3.5.8.3;

Upon initiating the procedure, the UE shall:

1> initiate transmission of the *FailureInformation* message as specified in 5.7.5.3;

5.7.5.3 Actions related to transmission of *FailureInformation* message

The UE shall:

1> if initiated to provide RLC failure information, set *FailureInfoRLC-Bearer* as follows:

2> set *logicalChannelIdentity* to the logical channel identity of the failing RLC bearer;

2> set *cellGroupId* to the cell group identity of the failing RLC bearer;

2> set the *failureType* as *rlc-failure*;

1> if initiated to provide DAPS failure information, set *FailureInfoDAPS* as follows:

2> set the *failureType* as *daps-failure*;

1> if used to inform the network about a failure for an MCG RLC bearer or DAPS failure information:

2> submit the *FailureInformation* message to lower layers for transmission via SRB1;

1> else if used to inform the network about a failure for an SCG RLC bearer:

2> if SRB3 is configured;

3> submit the *FailureInformation* message to lower layers for transmission via SRB3;

2> else;

3> if the UE is in (NG)EN-DC:

4> submit the *FailureInformation* message via E-UTRA SRB1 embedded in E-UTRA RRC message *ULInformationTransferMRDC* as specified in TS 36.331 [10].

3> else if the UE is in NR-DC:

4> submit the *FailureInformation* message via SRB1 embedded in NR RRC message *ULInformationTransferMRDC* as specified in clause 5.7.2a.3.

5.7.6 DL message segment transfer

5.7.6.1 General



Figure 5.7.6.1-1: DL message segment transfer

The purpose of this procedure is to transfer segments of DL DCCCH messages from the network to the UE.

NOTE: The segmentation of DL DCCCH message is only applicable to *RRCReconfiguration* and *RRCResume* messages in this release.

5.7.6.2 Initiation

The network initiates the DL Dedicated Message Segment transfer procedure whenever the encoded RRC message PDU exceeds the maximum PDCP SDU size. The network initiates the DL Dedicated Message Segment transfer procedure by sending the *DL Dedicated Message Segment* message.

5.7.6.3 Reception of *DL Dedicated Message Segment* by the UE

Upon receiving *DL Dedicated Message Segment* message, the UE shall:

- 1> store the segment included in *rrc-MessageSegmentContainer*;
- 1> if all segments of the message have been received:
 - 2> assemble the message from the received segments and process the message according to 5.3.5.3 for the *RRCReconfiguration* message or 5.3.13.4 for the *RRCResume* message;
 - 2> discard all segments.

5.7.7 UL message segment transfer

5.7.7.1 General



Figure 5.7.7.1-1: UL message segment transfer

The purpose of this procedure is to transfer segments of UL DCCH messages from UE to a NG-RAN in RRC_CONNECTED.

NOTE: The segmentation of UL DCCH message is only applicable to *UECapabilityInformation* and *MeasurementReportAppLayer* in this release.

5.7.7.2 Initiation

A UE capable of UL RRC message segmentation in RRC_CONNECTED will initiate the procedure when the following conditions are met:

- 1> if the RRC message segmentation is enabled based on the field *rrc-SegAllowed*, *rrc-MaxCapaSegAllowed*, *rrc-SegAllowedSRB4* or *rrc-SegAllowedSRB5* received, and
- 1> if the encoded RRC message is larger than the maximum supported size of a PDCP SDU specified in TS 38.323 [5];

Upon initiating the procedure, the UE shall:

- 1> initiate transmission of the *ULDedicatedMessageSegment* message as specified in 5.7.7.3;

5.7.7.3 Actions related to transmission of *ULDedicatedMessageSegment* message

The UE shall segment the encoded RRC PDU based on the maximum supported size of a PDCP SDU specified in TS 38.323 [5] and the maximum number of UL segments according to *rrc-SegAllowed* or *rrc-MaxCapaSegAllowed* (for segmentation of *UECapabilityInformation*) and *rrc-SegAllowedSRB4* or *rrc-SegAllowedSRB5* (for segmentation of *MeasurementReportAppLayer*), if received. UE shall minimize the number of segments and set the contents of the *ULDedicatedMessageSegment* messages as follows:

- 1> For each new UL DCCH message, set the *segmentNumber* to 0 for the first message segment and increment the *segmentNumber* for each subsequent RRC message segment;
- 1> set *rrc-MessageSegmentContainer* to include the segment of the UL DCCH message corresponding to the *segmentNumber*;
- 1> if the segment included in the *rrc-MessageSegmentContainer* is the last segment of the UL DCCH message:
 - 2> set the *rrc-MessageSegmentType* to *lastSegment*;
- 1> else:
 - 2> set the *rrc-MessageSegmentType* to *notLastSegment*;
- 1> submit all the *ULDedicatedMessageSegment* messages generated for the segmented RRC message to lower layers for transmission in ascending order based on the *segmentNumber*, upon which the procedure ends.

5.7.8 Idle/inactive Measurements

5.7.8.1 General

This procedure specifies the measurements to be performed and stored by a UE in RRC_IDLE and RRC_INACTIVE when it has an idle/inactive measurement configuration.

5.7.8.1a Measurement configuration

The purpose of this procedure is to update the idle/inactive measurement configuration.

The UE initiates this procedure while T331 is running and SDT procedure is not ongoing and one of the following conditions is met:

- 1> upon selecting a cell when entering RRC_IDLE or RRC-INACTIVE from RRC_CONNECTED or RRC_INACTIVE; or
- 1> upon update of system information (*SIB4*, or *SIB11*), e.g. due to intra-RAT cell (re)selection;

While in RRC_IDLE or RRC_INACTIVE, and T331 is running, the UE shall:

- 1> if *VarMeasIdleConfig* includes neither a *measIdleCarrierListEUTRA* nor a *measIdleCarrierListNR* received from the *RRCRelease* message:
 - 2> if the UE supports *idleInactiveEUTRA-MeasReport*:
 - 3> if the *SIB11* includes the *measIdleConfigSIB* and contains *measIdleCarrierListEUTRA*:
 - 4> store or replace the *measIdleCarrierListEUTRA* of *measIdleConfigSIB* of *SIB11* within *VarMeasIdleConfig*;
 - 3> else:
 - 4> remove the *measIdleCarrierListEUTRA* in *VarMeasIdleConfig*, if stored;
 - 2> if the UE supports *idleInactiveNR-MeasReport*:
 - 3> if *SIB11* includes the *measIdleConfigSIB* and contains *measIdleCarrierListNR*:
 - 4> store or replace the *measIdleCarrierListNR* of *measIdleConfigSIB* of *SIB11* within *VarMeasIdleConfig*;
 - 3> else:
 - 4> remove the *measIdleCarrierListNR* in *VarMeasIdleConfig*, if stored;
 - 1> if *VarEnhMeasIdleConfig* does not include *measIdleValidityDuration* received from the *RRCRelease* message:

- 2> if the UE supports *measValidationReportEMR*:
 - 3> if *SIB11* includes the *measIdleConfigSIB* and contains *measIdleValidityDuration*:
 - 4> store or replace the *measIdleValidityDuration* of *measIdleConfigSIB* of *SIB11* within *VarEnhMeasIdleConfig*;
 - 3> else:
 - 4> remove the *measIdleValidityDuration* in *VarEnhMeasIdleConfig*, if stored;
- 1> for each entry in the *measIdleCarrierListNR* within *VarMeasIdleConfig* that does not contain an *ssb-MeasConfig* received from the *RRCRelease* message:
 - 2> if there is an entry in *measIdleCarrierListNR* in *measIdleConfigSIB* of *SIB11* that has the same carrier frequency and subcarrier spacing as the entry in the *measIdleCarrierListNR* within *VarMeasIdleConfig* and that contains *ssb-MeasConfig*:
 - 3> delete the *ssb-MeasConfig* of the corresponding entry in the *measIdleCarrierListNR* within *VarMeasIdleConfig*;
 - 3> store the SSB measurement configuration from *SIB11* into *nrofSS-BlocksToAverage*, *absThreshSS-BlocksConsolidation*, *smtc*, *ssb-ToMeasure*, *deriveSSB-IndexFromCell*, and *ss-RSSI-Measurement* within *ssb-MeasConfig* of the corresponding entry in the *measIdleCarrierListNR* within *VarMeasIdleConfig*;
 - 2> else if there is an entry in *interFreqCarrierFreqList* of *SIB4* with the same carrier frequency and subcarrier spacing as the entry in *measIdleCarrierListNR* within *VarMeasIdleConfig*:
 - 3> delete the *ssb-MeasConfig* of the corresponding entry in the *measIdleCarrierListNR* within *VarMeasIdleConfig*;
 - 3> store the SSB measurement configuration from *SIB4* into *nrofSS-BlocksToAverage*, *absThreshSS-BlocksConsolidation*, *smtc*, *ssb-ToMeasure*, *deriveSSB-IndexFromCell*, and *ss-RSSI-Measurement* within *ssb-MeasConfig* of the corresponding entry in the *measIdleCarrierListNR* within *VarMeasIdleConfig*;
 - 2> else:
 - 3> remove the *ssb-MeasConfig* of the corresponding entry in the *measIdleCarrierListNR* within *VarMeasIdleConfig*, if stored;
- 1> perform measurements according to 5.7.8.2a.

5.7.8.1b Measurement configuration (reselection measurements)

The purpose of this procedure is to update the reselection measurement configuration.

The UE initiates this procedure while SDT procedure is not ongoing and one of the following conditions is met:

- 1> upon selecting a cell when entering *RRC_IDLE* or *RRC_INACTIVE* from *RRC_CONNECTED* or *RRC_INACTIVE*; or
- 1> upon update of system information (*SIB11*), e.g., due to intra-RAT cell (re)selection;

While in *RRC_IDLE* or *RRC_INACTIVE*, the UE shall:

- 1> if *VarMeasReselectionConfig* does not include *measReselectionCarrierListNR* received from the *RRCRelease* message:
- 2> if the UE supports reselection measurement reporting:
 - 3> if *SIB11* includes the *measIdleConfigSIB* and contains *measReselectionCarrierListNR*:
 - 4> store or replace the *measReselectionCarrierListNR* of *measIdleConfigSIB* of *SIB11* within *VarMeasReselectionConfig*;
 - 3> else:

- 4> remove the *measReselectionCarrierListNR* in *VarMeasReselectionConfig*, if stored;
- 1> if *VarMeasReselectionConfig* does not include *measReselectionValidityDuration* received from the *RRCRelease* message:
 - 2> if the UE supports reselection measurement reporting:
 - 3> if *SIB11* includes the *measIdleConfigSIB* and contains *measReselectionValidityDuration*:
 - 4> store or replace the *measReselectionValidityDuration* of *measIdleConfigSIB* of *SIB11* within *VarMeasReselectionConfig*;
 - 3> else:
 - 4> remove the *measReselectionValidityDuration* in *VarMeasReselectionConfig*, if stored.

5.7.8.2 Void

5.7.8.2a Performing measurements

When performing measurements on NR carriers according to this clause, the UE shall derive the cell quality as specified in 5.5.3.3 and consider the beam quality to be the value of the measurement results of the concerned beam, where each result is averaged as described in TS 38.215 [9].

While in RRC_IDLE or RRC_INACTIVE, and T331 is running and SDT procedure is not ongoing, the UE shall:

- 1> perform the measurements in accordance with the following:
 - 2> if the *VarMeasIdleConfig* includes the *measIdleCarrierListEUTRA* and the *SIB1* contains *idleModeMeasurementsEUTRA*:
 - 3> for each entry in *measIdleCarrierListEUTRA* within *VarMeasIdleConfig*:
 - 4> if UE supports NE-DC between the serving carrier and the carrier frequency indicated by *carrierFreqEUTRA* within the corresponding entry:
 - 5> perform measurements in the carrier frequency and bandwidth indicated by *carrierFreqEUTRA* and *allowedMeasBandwidth* within the corresponding entry;
 - 5> if the *reportQuantitiesEUTRA* is set to *rsrq*:
 - 6> consider RSRQ as the sorting quantity;
 - 5> else:
 - 6> consider RSRP as the sorting quantity;
 - 5> if the *measCellListEUTRA* is included:
 - 6> consider cells identified by each entry within the *measCellListEUTRA* to be applicable for idle/inactive mode measurement reporting;
 - 5> else:
 - 6> consider up to *maxCellMeasIdle* strongest identified cells, according to the sorting quantity, to be applicable for idle/inactive measurement reporting;
 - 5> for all cells applicable for idle/inactive measurement reporting, derive measurement results for the measurement quantities indicated by *reportQuantitiesEUTRA*;
 - 5> store the derived measurement results as indicated by *reportQuantitiesEUTRA* within the *measReportIdleEUTRA* in *VarMeasIdleReport* in decreasing order of the sorting quantity, i.e. the best cell is included first, as follows:
 - 6> if *qualityThresholdEUTRA* is configured:

- 7> include the measurement results from the cells applicable for idle/inactive measurement reporting whose RSRP/RSRQ measurement results are above the value(s) provided in *qualityThresholdEUTRA*;
- 6> else:
 - 7> include the measurement results from all cells applicable for idle/inactive measurement reporting;
- 2> if the *VarMeasIdleConfig* includes the *measIdleCarrierListNR* and the SIB1 contains *idleModeMeasurementsNR*:
 - 3> for each entry in *measIdleCarrierListNR* within *VarMeasIdleConfig* that contains *ssb-MeasConfig*:
 - 4> if UE supports carrier aggregation or NR-DC between serving carrier and the carrier frequency and subcarrier spacing indicated by *carrierFreq* and *ssbSubCarrierSpacing* within the corresponding entry:
 - 5> perform measurements in the carrier frequency and subcarrier spacing indicated by *carrierFreq* and *ssbSubCarrierSpacing* within the corresponding entry;
 - 5> if the *reportQuantities* is set to *rsrq*:
 - 6> consider RSRQ as the cell sorting quantity;
 - 5> else:
 - 6> consider RSRP as the cell sorting quantity;
 - 5> if the *measCellListNR* is included:
 - 6> consider cells identified by each entry within the *measCellListNR* to be applicable for idle/inactive measurement reporting;
 - 5> else:
 - 6> consider up to *maxCellMeasIdle* strongest identified cells, according to the sorting quantity, to be applicable for idle/inactive measurement reporting;
 - 5> for all cells applicable for idle/inactive measurement reporting, derive cell measurement results for the measurement quantities indicated by *reportQuantities*;
 - 5> store the derived cell measurement results as indicated by *reportQuantities* for cells applicable for idle/inactive measurement reporting within *measResultsPerCarrierListIdleNR* in the *measReportIdleNR* in *VarMeasIdleReport* in decreasing order of the cell sorting quantity, i.e. the best cell is included first, as follows:
 - 6> if *qualityThreshold* is configured:
 - 7> include the measurement results from the cells applicable for idle/inactive measurement reporting whose RSRP/RSRQ measurement results are above the value(s) provided in *qualityThreshold*;
 - 6> else:
 - 7> include the measurement results from all cells applicable for idle/inactive measurement reporting;
 - 5> if *beamMeasConfigIdle* is included in the associated entry in *measIdleCarrierListNR* and if UE supports *idleInactiveNR-MeasBeamReport* for the FR of the carrier frequency indicated by *carrierFreq* within the associated entry, for each cell in the measurement results:
 - 6> derive beam measurements based on SS/PBCH block for each measurement quantity indicated in *reportQuantityRS-Indexes*, as described in TS 38.215 [9];
 - 6> if the *reportQuantityRS-Indexes* is set to *rsrq*:

- 7> consider RSRQ as the beam sorting quantity;
- 6> else:
 - 7> consider RSRP as the beam sorting quantity;
- 6> set *resultsSSB-Indexes* to include up to *maxNrofRS-IndexesToReport* SS/PBCH block indexes in order of decreasing beam sorting quantity as follows:
 - 7> include the index associated to the best beam for the sorting quantity and if *absThreshSS-BlocksConsolidation* is included, the remaining beams whose sorting quantity is above *absThreshSS-BlocksConsolidation*;
- 6> if the *includeBeamMeasurements* is set to *true*:
 - 7> include the beam measurement results as indicated by *reportQuantityRS-Indexes*;
- 2> if, as a result of the procedure in this clause, the UE performs measurements in one or more carrier frequency indicated by *measIdleCarrierListNR* or *measIdleCarrierListEUTRA*:
 - 3> store the cell measurement results for RSRP and RSRQ for the serving cell within *measResultServingCell* in the *measReportIdleNR* in *VarMeasIdleReport*.
 - 3> if the *VarMeasIdleConfig* includes the *measIdleCarrierListNR* and it contains an entry with *carrierFreq* set to the value of the serving frequency:
 - 4> if *beamMeasConfigIdle* is included in that entry, and if the UE supports *idleInactiveNR-MeasBeamReport* for the FR of the serving cell:
 - 5> derive beam measurements based on SS/PBCH block for each measurement quantity indicated in *reportQuantityRS-Indexes*, as described in TS 38.215 [9];
 - 5> if the *reportQuantityRS-Indexes* is set to *rsrq*:
 - 6> consider RSRQ as the beam sorting quantity;
 - 5> else:
 - 6> consider RSRP as the beam sorting quantity;
 - 5> set *resultsSSB-Indexes* to include up to *maxNrofRS-IndexesToReport* SS/PBCH block indexes in order of decreasing beam sorting quantity as follows:
 - 6> include the index associated to the best beam for the sorting quantity and if *absThreshSS-BlocksConsolidation* is included in *SIB2* of serving cell, the remaining beams whose sorting quantity is above *absThreshSS-BlocksConsolidation*;
 - 5> if the *includeBeamMeasurements* is set to *true*:
 - 6> include the beam measurement results as indicated by *reportQuantityRS-Indexes*;

NOTE 1: How the UE performs idle/inactive measurements is up to UE implementation as long as the requirements in TS 38.133 [14] are met for measurement reporting.

NOTE 2: The UE is not required to perform idle/inactive measurements on a given carrier if the SSB configuration of that carrier provided via dedicated signaling is different from the SSB configuration broadcasted in the serving cell, if any.

NOTE 3: How the UE prioritizes which frequencies to measure or report (in case it is configured with more frequencies than it can measure or report) is left to UE implementation.

NOTE 4: When *idleModeMeasVoiceFallback* is included in *SIB5*, UE may decide to measure and report idle/inactive measurements for EUTRA carrier frequencies included in *SIB5* even if it does not support NE-DC between the serving carrier and the EUTRA carrier frequencies.

5.7.8.3 T331 expiry or stop

The UE shall:

- 1> if T331 expires or is stopped:
- 2> release the *VarMeasIdleConfig*.

NOTE: It is up to UE implementation whether to continue idle/inactive measurements according to SIB11 and SIB4 configurations or according to E-UTRA SIB5 and E-UTRA SIB24 configurations as specified in TS 36.331 [10] upon inter-RAT cell reselection to E-UTRA, after T331 has expired or stopped.

5.7.8.4 Cell re-selection or cell selection while T331 is running

The UE shall:

- 1> if intra-RAT cell selection or reselection occurs while T331 is running:
 - 2> if *validityAreaList* is configured in *VarMeasIdleConfig*:
 - 3> if the serving frequency does not match with the *carrierFreq* of an entry in the *validityAreaList*; or
 - 3> if the serving frequency matches with the *carrierFreq* of an entry in the *validityAreaList*, the *validityCellList* is included in that entry, and the physical cell identity of the serving cell does not match with any entry in *validityCellList*:
 - 4> stop timer T331;
 - 4> perform the actions as specified in 5.7.8.3, upon which the procedure ends.
 - 1> else if inter-RAT cell selection or reselection occurs while T331 is running:
 - 2> stop timer T331;
 - 2> perform the actions as specified in 5.7.8.3;

5.7.9 Mobility history information

5.7.9.1 General

This procedure specifies how the mobility history information is stored by the UE, covering RRC_IDLE, RRC_INACTIVE and RRC_CONNECTED and released by the UE upon deregistration as specified in TS 23.502 [43].

5.7.9.2 Initiation

If the UE supports storage of mobility history information, the UE shall:

- 1> If the UE supports PSCell mobility history information and upon addition of a PSCell:
 - 2> include an entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport* possibly after performing the following, if necessary:
 - 3> if *visitedPSCellInfoListReport* is available in the *visitedCellInfoList* in variable *VarMobilityHistoryReport*:
 - 4> for the oldest PCell entry in *visitedCellInfoList* including *visitedPSCellInfoListReport*;
 - 5> remove the oldest entry in the *visitedPSCellInfoListReport*;
 - 3> else:
 - 4> remove the oldest entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport*;
 - 2> for the included entry:

- 3> set the field *timeSpent* of the entry according to following:
 - 4> if this is the first PSCell entry for the current PCell since entering the current PCell in RRC_CONNECTED:
 - 5> include the entry as the time spent with no PSCell since entering the current PCell in RRC_CONNECTED;
 - 4> else:
 - 5> include the time spent with no PSCell since last PSCell release since entering the current PCell in RRC_CONNECTED;
- 1> If the UE supports PSCell mobility history information and upon change, or release of a PSCell while being connected to the current PCell, or upon release of a PSCell while entering 'camped normally' state or 'any cell selection' state or 'camped on any cell' state:
- 2> include an entry in *visitedPSCellInfoList* of the variable *VarMobilityHistoryReport* possibly after performing the following, if necessary:
 - 3> if *visitedPSCellInfoListReport* is available in the *visitedCellInfoList* in variable *VarMobilityHistoryReport*:
 - 4> for the oldest PCell entry in *visitedCellInfoList* including *visitedPSCellInfoListReport*;
 - 5> remove the oldest entry in the *visitedPSCellInfoListReport*;
 - 3> else:
 - 4> remove the oldest entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport*;
- 2> for the included entry:
 - 3> if the global cell identity of the previous PSCell is available:
 - 4> include the global cell identity of that cell in the field *visitedCellId* of the entry;
 - 3> else:
 - 4> include the physical cell identity and carrier frequency of that cell in the field *visitedCellId* of the entry;
 - 3> if the PSCell is changed or released while being connected to the current PCell, or if the PSCell is released while entering 'camped normally' state in the same serving cell which was previously the PCell:
 - 4> set the field *timeSpent* of the entry as the time spent in the previous PSCell while being connected to the current PCell/serving cell;
 - 3> if the PSCell is released while entering 'any cell selection' state or 'camped on any cell' state from a suitable cell in RRC_CONNECTED state in NR or LTE, or if the PSCell is released while entering 'camped normally' state while previously in RRC_CONNECTED state in a PCell different from the current serving cell:
 - 4> set the field *timeSpent* of the entry as the time spent in the previous PSCell while being connected to the previous PCell;
- 1> Upon change of suitable cell, consisting of PCell in RRC_CONNECTED (for NR or E-UTRA cell) or serving cell in RRC_INACTIVE (for NR cell) or in RRC_IDLE (for NR or E-UTRA cell), to another NR or E-UTRA cell, or when entering 'any cell selection' state from 'camped normally' state in NR or LTE or when entering 'any cell selection' state or 'camped on any cell' state from a suitable cell in RRC_CONNECTED state in NR or LTE:

NOTE: Change of suitable cell encompasses also simultaneous change of serving cell and RRC state change.

- 2> include an entry in *visitedCellInfoList* of the variable *VarMobilityHistoryReport* possibly after removing the oldest entry, if necessary, according to following:
- 3> if the global cell identity of the previous PCell/serving cell is available:

- 4> include the global cell identity of that cell in the field *visitedCellId* of the entry;
- 3> else:
 - 4> include the physical cell identity and carrier frequency of that cell in the field *visitedCellId* of the entry;
- 3> set the field *timeSpent* of the entry as the time spent in the previous PCell/serving cell;
- 3> if the UE supports PSCell mobility history information and if the UE continues to be connected to the same PSCell during the change of the PCell in RRC_CONNECTED; or
- 3> if the UE supports PSCell mobility history information and if the UE changes PSCell at the same time as the change of the PCell in RRC_CONNECTED; or
- 3> if the UE supports PSCell mobility history information and if the PSCell is released at the same time as the change of the PCell in RRC_CONNECTED:
 - 4> include an entry in *visitedPSCellInfoList* of the variable *VarMobilityHistoryReport* possibly after performing the following, if necessary:
 - 5> if *visitedPSCellInfoListReport* is available in the *visitedCellInfoList* in variable *VarMobilityHistoryReport*:
 - 6> for the oldest PCell entry in *visitedCellInfoList* including *visitedPSCellInfoListReport*;
 - 7> remove the oldest entry in the *visitedPSCellInfoListReport*;
 - 5> else:
 - 6> remove the oldest entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport*;
 - 4> for the included entry:
 - 5> if the global cell identity of the PSCell (in case the UE continues to be connected to the same PSCell) or the previous PSCell (in case the UE changes PSCell, or in case PSCell is released) is available:
 - 6> include the global cell identity of that cell in the field *visitedCellId* of the entry;
 - 5> else:
 - 6> include the physical cell identity and carrier frequency of that cell in the field *visitedCellId* of the entry;
 - 5> set the field *timeSpent* of the entry as the time spent in the PSCell, while being connected to previous PCell;
 - 3> if the UE supports PSCell mobility history information and if the UE was not configured with a PSCell at the time of change of PCell in RRC_CONNECTED; or
 - 3> if the UE supports PSCell mobility history information and if the UE was not configured with a PSCell at the time of entering 'camped normally' state while previously in RRC_CONNECTED state in a PCell different from the current serving cell; or
 - 3> if the UE supports PSCell mobility history information and if the UE was not configured with a PSCell at the time of entering 'any cell selection' state or 'camped on any cell' state from a suitable cell in RRC_CONNECTED state in NR or LTE:
 - 4> include an entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport* after performing the following, if necessary:
 - 5> if *visitedPSCellInfoListReport* is available in the *visitedCellInfoList* in variable *VarMobilityHistoryReport*:
 - 6> for the oldest PCell entry in *visitedCellInfoList* including *visitedPSCellInfoListReport*;

- 7> remove the oldest entry in the *visitedPSCellInfoListReport*;
- 5> else:
 - 6> remove the oldest entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport*;
- 4> for the included entry:
 - 5> set the field *timeSpent* of the entry as the time without PSCell according to the following:
 - 6> if the UE experienced a PSCell release since entering the previous PCell in RRC_CONNECTED:
 - 7> include the time spent with no PSCell since last PSCell release since entering the previous PCell in RRC_CONNECTED;
 - 6> else:
 - 7> include the time spent with no PSCell since entering the previous PCell in RRC_CONNECTED;
- 3> if the UE supports PSCell mobility history information and if *visitedPSCellInfoList* exists in *VarMobilityHistoryReport*:
 - 4> include *visitedPSCellInfoList* in *VarMobilityHistoryReport* in the *visitedPSCellInfoListReport* within the entry of the *visitedCellInfoList* associated to the latest PCell entry;
 - 4> remove *visitedPSCellInfoList* from the variable *VarMobilityHistoryReport*;
- 1> if the UE supports PSCell mobility history information and upon entering 'camped normally' state in NR (in RRC_IDLE or RRC_INACTIVE) or E-UTRA (in RRC_IDLE) while previously in RRC_CONNECTED state NR or LTE in the same serving cell which was previously the PCell while not connected to a PSCell:
 - 2> include an entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport* after performing the following, if necessary;
 - 3> if *visitedPSCellInfoListReport* is available in the *visitedCellInfoList* in variable *VarMobilityHistoryReport*:
 - 4> for the oldest PCell entry in *visitedCellInfoList* including *visitedPSCellInfoListReport*;
 - 5> remove the oldest entry in the *visitedPSCellInfoListReport*;
 - 3> else:
 - 4> remove the oldest entry in *visitedPSCellInfoList* in variable *VarMobilityHistoryReport*;
 - 2> for the included entry:
 - 3> set the field *timeSpent* of the entry as the time without PSCell according to the following:
 - 4> if the UE experienced a PSCell release since entering the current serving cell in RRC_CONNECTED:
 - 5> include the time spent with no PSCell since last PSCell release after entering the current serving cell in RRC_CONNECTED;
 - 4> else:
 - 5> include the time spent with no PSCell since entering the current serving cell in RRC_CONNECTED;
 - 1> upon entering 'camped normally' state in NR (in RRC_IDLE or RRC_INACTIVE) or E-UTRA (in RRC_IDLE) while previously in 'any cell selection' state or 'camped on any cell' state in NR or LTE:
 - 2> include an entry in *visitedCellInfoList* in variable *VarMobilityHistoryReport* possibly after removing the oldest entry, if necessary, according to following;

- 3> set the field *timeSpent* of the entry as the time spent in 'any cell selection' state and/or 'camped on any cell' state in NR or LTE.

5.7.9.3 Release of Mobility History Information

If the UE supports storage of mobility history information, the UE shall:

- 1> if stored, discard the mobility history information, i.e. release the UE variable *VarMobilityHistoryReport* upon deregistration from the network as specified in TS 23.502 [43].

5.7.10 UE Information

5.7.10.1 General

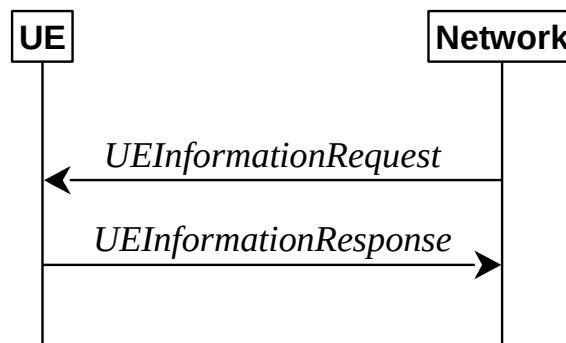 


Figure 5.7.10.1-1: UE information procedure

The UE information procedure is used by the network to request the UE to report information.

5.7.10.2 Initiation

The network initiates the procedure by sending the *UEInformationRequest* message. The network should initiate this procedure only after successful security activation.

5.7.10.3 Reception of the *UEInformationRequest* message

Upon receiving the *UEInformationRequest* message, the UE shall, only after successful security activation:

- 1> if the *idleModeMeasurementReq* is included in the *UEInformationRequest* and the UE has stored *VarMeasIdleReport* that contains measurement information concerning cells other than the PCell;
- 2> if *validatedMeasurementsReq* is included in the *UEInformationRequest* and *measIdleValidityDuration* is included in *VarEnhMeasIdleConfig*;
 - 3> set the *measResultIdleEUTRA* in the *UEInformationResponse* message to the value of *measReportIdleEUTRA* in the *VarMeasIdleReport* for any valid measurement results, if available, and set *validityStatus* to the value of *measIdleValidityDuration* in *VarEnhMeasIdleConfig* for each reported measurement;
 - 3> set the *measResultIdleNR* in the *UEInformationResponse* message to the value of *measReportIdleNR* in the *VarMeasIdleReport* for any valid measurement results, if available, and set *validityStatus* to the value of *measIdleValidityDuration* in *VarEnhMeasIdleConfig* for each reported measurement;
 - 3> discard the *VarMeasIdleReport* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
 - 3> remove the *measIdleValidityDuration* in *VarEnhMeasIdleConfig*;
- 2> else:

- 3> set the *measResultIdleEUTRA* in the *UEInformationResponse* message to the value of *measReportIdleEUTRA* in the *VarMeasIdleReport*, if available;
 - 3> set the *measResultIdleNR* in the *UEInformationResponse* message to the value of *measReportIdleNR* in the *VarMeasIdleReport*, if available;
 - 3> discard the *VarMeasIdleReport* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
 - 3> remove the *measIdleValidityDuration* in *VarEnhMeasIdleConfig*, if stored;
- 1> if the *reselectionMeasurementReq* is included in the *UEInformationRequest*:
- 2> if *validatedMeasurementsReq* is included in the *UEInformationRequest* and *measReselectionValidityDuration* is included in *VarMeasReselectionConfig*;
 - 3> if *measReselectionCarrierListNR* is present in *VarMeasReselectionConfig*:
 - 4> set the *measResultReselectionNR* in the *UEInformationResponse* message the valid NR measurement results, if available for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig* and set *validityStatus* to the value of *measIdleValidityDuration* in *VarMeasReselectionConfig* for each reported measurement;
 - 3> else:
 - 4> set the *measResultReselectionNR* in the *UEInformationResponse* message to any valid NR measurement results, if available, and set *validityStatus* to the value of *measIdleValidityDuration* in *VarMeasReselectionConfig*;
- 2> else:
- 3> if *measReselectionCarrierListNR* is present in *VarMeasReselectionConfig*:
 - 4> set the *measResultReselectionNR* in the *UEInformationResponse* message the NR measurement results, if available for any frequency listed in *measReselectionCarrierListNR* in *VarMeasReselectionConfig*;
 - 3> else:
 - 4> set the *measResultReselectionNR* in the *UEInformationResponse* message to any NR measurement results, if available;
- 1> if the *logMeasReportReq* is present and if the RPLMN is included in *plmn-IdentityList* stored in *VarLogMeasReport*, or if the current registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*:
- 2> if *VarLogMeasReport* includes one or more logged measurement entries, set the contents of the *logMeasReport* in the *UEInformationResponse* message as follows:
 - 3> include the *absoluteTimeStamp* and set it to the value of *absoluteTimeInfo* in the *VarLogMeasReport*;
 - 3> include the *traceReference* and set it to the value of *traceReference* in the *VarLogMeasReport*;
 - 3> include the *traceRecordingSessionRef* and set it to the value of *traceRecordingSessionRef* in the *VarLogMeasReport*;
 - 3> include the *tce-Id* and set it to the value of *tce-Id* in the *VarLogMeasReport*;
 - 3> include the *logMeasInfoList* and set it to include one or more entries from the *VarLogMeasReport* starting from the entries logged first, and for each entry of the *logMeasInfoList* that is included, include all information stored in the corresponding *logMeasInfoList* entry in *VarLogMeasReport*;
 - 3> if the *VarLogMeasReport* includes one or more additional logged measurement entries that are not included in the *logMeasInfoList* within the *UEInformationResponse* message:
 - 4> include the *logMeasAvailable*;

- 4> if *bt-LocationInfo* is included in *locationInfo* of one or more of the additional logged measurement entries in *VarLogMeasReport* that are not included in the *logMeasInfoList* within the *UEInformationResponse* message:
 - 5> include the *logMeasAvailableBT*;
- 4> if *wlan-LocationInfo* is included in *locationInfo* of one or more of the additional logged measurement entries in *VarLogMeasReport* that are not included in the *logMeasInfoList* within the *UEInformationResponse* message:
 - 5> include the *logMeasAvailableWLAN*;
- 1> if *ra-ReportReq* is set to *true* and the UE has random access related information available in *VarRA-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarRA-Report*; or
- 1> if *ra-ReportReq* is set to *true* and the UE has random access related information available in *VarRA-Report* and if the registered SNPN identity is included in *snpn-IdentityList* stored in *VarRA-Report*:
 - 2> set the *ra-ReportList* in the *UEInformationResponse* message to the value of *ra-ReportList* in *VarRA-Report*;
 - 2> discard the *ra-ReportList* from *VarRA-Report* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
- 1> if *rlf-ReportReq* is set to *true*:
 - 2> if the UE has radio link failure information or handover failure information available in *VarRLF-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report*; or
 - 2> if the UE has radio link failure information or handover failure information available in *VarRLF-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* stored in *VarRLF-Report*:
 - 3> set *timeSinceFailure* in *VarRLF-Report* to the time that elapsed since the last radio link failure or handover failure in NR;
 - 3> set the *rlf-Report* in the *UEInformationResponse* message to the value of *rlf-Report* in *VarRLF-Report*;
 - 3> discard the *rlf-Report* from *VarRLF-Report* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
 - 2> else if the UE is capable of cross-RAT RLF reporting as defined in TS 38.306 [26] and has radio link failure information or handover failure information available in *VarRLF-Report* of TS 36.331 [10] and if the RPLMN is included in *plmn-IdentityList* stored in *VarRLF-Report* of TS 36.331 [10]:
 - 3> set *timeSinceFailure* in *VarRLF-Report* of TS 36.331 [10] to the time that elapsed since the last radio link failure or handover failure in EUTRA;
 - 3> set *failedPCellId-EUTRA* in the *rlf-Report* in the *UEInformationResponse* message to indicate the PCell in which RLF was detected or the source PCell of the failed handover in the *VarRLF-Report* of TS 36.331 [10];
 - 3> set the *measResult-RLF-Report-EUTRA* in the *rlf-Report* in the *UEInformationResponse* message to the value of *rlf-Report* in *VarRLF-Report* of TS 36.331 [10];
 - 3> discard the *rlf-Report* from *VarRLF-Report* of TS 36.331 [10] upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
- 1> if *connEstFailReportReq* is set to *true* and the UE has connection establishment failure or connection resume failure information in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the RPLMN is equal to *plmn-Identity* stored in *VarConnEstFailReport* or in at least one of the entries of *VarConnEstFailReportList*;
- 1> if *connEstFailReportReq* is set to *true* and if the UE has connection establishment failure information or connection resume failure information available in *VarConnEstFailReport* or *VarConnEstFailReportList* and if the registered SNPN identity is equal to *snpn-Identity* in *networkIdentity* stored in *VarConnEstFailReport* or any entry of *VarConnEstFailReportList*;

- 2> set *timeSinceFailure* in *VarConnEstFailReport* to the time that elapsed since the last connection establishment failure or connection resume failure in NR;
- 2> set the *connEstFailReport* in the *UEInformationResponse* message to the value of *connEstFailReport* in *VarConnEstFailReport*;
- 2> if the UE supports multiple CEF report:
 - 3> for each *connEstFailReport* in the *connEstFailReportList* in *VarConnEstFailReportList*:
 - 4> set *timeSinceFailure* to the time that elapsed since the associated connection establishment failure or connection resume failure in NR;
 - 2> for each *connEstFailReport* in the *connEstFailReportList* in the *UEInformationResponse* message, set the value to the value of *connEstFailReport* in *VarConnEstFailReport* in *VarConnEstFailReportList*;
 - 2> discard the *connEstFailReport* from *VarConnEstFailReport* and *VarConnEstFailReportList* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
- 1> if the *mobilityHistoryReportReq* is set to *true*:
 - 2> include the *mobilityHistoryReport* and set it to include *visitedCellInfoList* from *VarMobilityHistoryReport*;
 - 2> include in the *mobilityHistoryReport* an entry for the current PCell, possibly after removing the oldest entry if required, and set its fields as follows:
 - 3> set *visitedCellId* to the global cell identity or the physical cell identity and carrier frequency of the current PCell;
 - 3> set field *timeSpent* to the time spent in the current PCell;
 - 3> if the UE supports PSCell mobility history information and if *visitedPSCellInfoList* is present in *VarMobilityHistoryReport*:
 - 4> for the newest entry of the PCell in the *mobilityHistoryReport*, include *visitedPSCellInfoList* from *VarMobilityHistoryReport*;
 - 4> if the UE is configured with a PSCell:
 - 5> for the newest entry of the PCell in the *mobilityHistoryReport*, include the current PSCell information in the *visitedPSCellInfoListReport*, possibly after removing the oldest PSCell entry of a PCell in the *mobilityHistoryReport*, if required, and set its fields as follows:
 - 6> set *visitedCellId* to the global cell identity or the physical cell identity and carrier frequency of the current PSCell;
 - 6> set field *timeSpent* to the time spent in the current PSCell while being connected to the current PCell;
 - 4> else:
 - 5> for the newest entry of the PCell in the *mobilityHistoryReport*, include a new entry in the *visitedPSCellInfoListReport*, possibly after removing the oldest PSCell entry of a PCell in the *mobilityHistoryReport*, if required, and set its fields as follows:
 - 6> set field *timeSpent* to the time spent without PSCell in the current PCell since last PSCell release since connected to the current PCell in RRC_CONNECTED;
 - 3> else if the UE supports PSCell mobility history information:
 - 4> if the UE is configured with a PSCell:
 - 5> for the newest entry of the PCell in the *mobilityHistoryReport*, include the current PSCell information in the *visitedPSCellInfoListReport*, possibly after removing the oldest PSCell entry of a PCell in the *mobilityHistoryReport*, if required, and set its fields as follows:

- 6> set *visitedCellId* to the global cell identity or the physical cell identity and carrier frequency of the current PCell;
- 6> set field *timeSpent* to the time spent in the current PCell while being connected to the current PCell;
- 4> else:
 - 5> for the newest entry of the PCell in the *mobilityHistoryReport*, include a new entry in the *visitedPSCellInfoListReport*, possibly after removing the oldest PCell entry of a PCell in the *mobilityHistoryReport*, if required, and set its fields as follows:
 - 6> set field *timeSpent* to the time spent without PCell in the current PCell since connected to the current PCell in RRC_CONNECTED;
- 1> if the *successHO-ReportReq* is set to *true* and if the UE has successful handover related information available in *VarSuccessHO-Report* and if the RPLMN is included in the *plmn-IdentityList* stored in *VarSuccessHO-Report*; or
- 1> if the *successHO-ReportReq* is set to *true* and if the UE has successful handover related information available in *VarSuccessHO-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* if stored in the *VarSuccessHO-Report*:
 - 2> if the *successHO-Report* in the *VarSuccessHO-Report* concerns a DAPS handover and if a PDCP PDU has been received from the source cell of the concerned HO and a non-duplicated PDCP PDU has been received from the target cell of the concerned HO:
 - 3> set *upInterruptionTimeAtHO* in *VarSuccessHO-Report* to include the time elapsed between the time of arrival of the last PDCP PDU received from the source cell of the concerned handover and the time of arrival of the first non-duplicate PDCP PDU received from the target cell of the concerned handover, as measured at the time of arrival of the first non-duplicate PDCP PDU received from the target cell;
 - 2> if the *successHO-Report* in the *VarSuccessHO-Report* concerns a *mobilityFromNRCommand*:
 - 3> set *timeSinceSHR* in *VarSuccessHO-Report* to the time that elapsed since the execution of the *MobilityFromNRCommand* associated to the successful handover report in the *VarSuccessHO-Report*;
 - 2> set the *successHO-Report* in the *UEInformationResponse* message to the value of *successHO-Report* in the *VarSuccessHO-Report*, if available;
 - 2> discard the *VarSuccessHO-Report* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
- 1> if the *successPSCell-ReportReq* is set to *true* and if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the RPLMN is included in *plmn-IdentityList* stored in *VarSuccessPSCell-Report*; or
- 1> if the *successPSCell-ReportReq* is set to *true* and if the UE has successful PSCell change or addition information available in *VarSuccessPSCell-Report* and if the current registered SNPN identity is included in *snpn-IdentityList* if stored in the *VarSuccessPSCell-Report*:
 - 2> set the *successPSCell-Report* in the *UEInformationResponse* message to the value of *successPSCell-Report* in the *VarSuccessPSCell-Report*;
 - 2> discard the *VarSuccessPSCell-Report* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
- 1> if the *coarseLocationRequest* is set to *true*:
 - 2> include *coarseLocationInfo*, if available;
- 1> if the *flightPathInfoReq* is included in the *UEInformationRequest* and the UE has (updated) flight path information available, set the *flightPathInfoReport* in the *UEInformationResponse* message as follows:
 - 2> include the list of up to *maxWayPointNumber* waypoints, if any, along the flight path;

- 2> if the *includeTimeStamp* is set to *true*, for each included waypoint:
 - 3> if available, set the field *timestamp* to the time when UE intends to arrive at the waypoint;
- 1> if the *logMeasReport* is included in the *UEInformationResponse*:
 - 2> submit the *UEInformationResponse* message to lower layers for transmission via SRB2;
 - 2> discard the logged measurement entries included in the *logMeasInfoList* from *VarLogMeasReport* upon successful delivery of the *UEInformationResponse* message confirmed by lower layers;
- 1> else:
 - 2> submit the *UEInformationResponse* message to lower layers for transmission via SRB1.

5.7.10.4 Actions for the Random Access report determination

Upon successfully performing random-access procedure initialized with 4-step or 2-step RA type, or upon failed or successfully completed on-demand system information acquisition procedure in RRC_IDLE or RRC_INACTIVE state, or upon failed or successfully completed RA-SDT operation as specified in clause 5.3.13.5, the UE shall:

- 1> if the RPLMN or the PLMN selected by upper layers (see TS24.501 [23]) from the PLMN(s) included in the *plmn-IdentityList* in *SIB1* is not included in *plmn-IdentityList* stored in a non-empty *VarRA-Report*; or
- 1> if the registered SNPN identity or the SNPN identity selected by upper layers (see TS24.501 [23]) from the list of SNPN(s) included in the *NPN-IdentityInfoList* in *SIB1* is not included in *snpn-IdentityList* stored in a non-empty *VarRA-Report*:
 - 2> clear the information included in *VarRA-Report*;
- 1> if the UE is not in SNPN access mode and if the number of *RA-Report* entries stored in the *ra-ReportList* in *VarRA-Report* is less than *maxRARReport*:
 - 2> if the number of PLMN entries in *plmn-IdentityList* in *identityList* stored in *VarRA-Report* is less than *maxPLMN*; or
 - 2> if the number of PLMN entries in *plmn-IdentityList* in *identityList* stored in *VarRA-Report* is equal to *maxPLMN* and the list of EPLMNs is subset of or equal to the *plmn-IdentityList* stored in *VarRA-Report*:
 - 3> append the following contents associated to the random-access procedure as a new entry in the *VarRA-Report*:
 - 4> if the list of EPLMNs has been stored by the UE:
 - 5> set the *plmn-IdentityList* to include the list of EPLMNs stored by the UE (i.e. includes the RPLMN) without exceeding the limit of *maxPLMN*;
 - 4> else:
 - 5> set the *plmn-Identity*, in *plmn-IdentityList*, to the PLMN selected by upper layers (see TS 24.501 [23]) from the PLMN(s) included in the *plmn-IdentityInfoList* in *SIB1*;
 - 4> set the *cellId* to the global cell identity and the tracking area code, if available, otherwise to the physical cell identity and carrier frequency of the cell in which the corresponding random-access preamble was transmitted;
 - 4> if the UE supports spCell ID indication:
 - 5> if the corresponding random-access procedure was performed on an SCell of MCG:
 - 6> set the *spCellId* to the global cell identity of the PCell;
 - 5> if the corresponding random-access procedure was performed on an SCell of SCG:
 - 6> set the *spCellId* to the global cell identity of the PSCell, if available, otherwise, set the *spCellId* to the global cell identity of the PCell;

- 5> if the corresponding random-access procedure was performed on PSCell:
 - 6> if the *cellId* is not set to the global cell identity of the PSCell, set the *spCellId* to the global cell identity of the PCell;
 - 4> if the random-access procedure is initiated for SDT and the SDT transmission was failed as defined in TS 38.300 [2]:
 - 5> include the *sdt-Failed*;
 - 4> set the *raPurpose* to include the purpose of triggering the random-access procedure;
 - 4> set the *ra-InformationCommon* as specified in clause 5.7.10.5.
- 1> if the UE is in SNPN access mode and if the number of *RA-Report* entries stored in the *ra-ReportList* in *VarRA-Report* is less than *maxRARReport*:
- 2> if the number of SNPN identity entries in *snpn-IdentityList* in *identityList* stored in *VarRA-Report* is less than *maxNPN*; or
 - 2> if the number of SNPN identity entries in *snpn-IdentityList* in *identityList* stored in *VarRA-Report* is equal to *maxNPN* and the list of equivalent SNPN(s) is subset of or equal to the *snpn-IdentityList* stored in *VarRA-Report*:
 - 3> append the following contents associated to the random-access procedure as a new entry in the *VarRA-Report*:
 - 4> if the list of equivalent SNPN(s) has been stored by the UE:
 - 5> set the *snpn-IdentityList* to include the list of equivalent SNPN(s) stored by the UE (i.e. includes the registered SNPN identity) without exceeding the limit of *maxNPN*;
 - 4> else:
 - 5> set the *snpn-Identity*, in *snpn-IdentityList*, to the SNPN identity selected by upper layers (see TS 24.501 [23]) from the SNPN identities included in the *NPN-IdentityInfoList* in SIB1;
 - 4> set the *cellId* to the global cell identity and the tracking area code, if available, otherwise to the physical cell identity and carrier frequency of the cell in which the corresponding random-access preamble was transmitted;
 - 4> if the UE supports spCell ID indication:
 - 5> if the corresponding random-access procedure was performed on an SCell of MCG:
 - 6> set the *spCellId* to the global cell identity of the PCell;
 - 5> if the corresponding random-access procedure was performed on an SCell of SCG:
 - 6> set the *spCellId* to the global cell identity of the PSCell, if available, otherwise, set the *spCellId* to the global cell identity of the PCell;
 - 5> if the corresponding random-access procedure was performed on PSCell:
 - 6> if the *cellId* is not set to the global cell identity of the PSCell, set the *spCellId* to the global cell identity of the PCell;
 - 4> if the random-access procedure is initiated for SDT and the SDT transmission was failed as defined in TS 38.300 [2]:
 - 5> include the *sdt-Failed*;
 - 4> set the *raPurpose* to include the purpose of triggering the random-access procedure;
 - 4> set the *ra-InformationCommon* as specified in clause 5.7.10.5.

The UE may discard the random access report information, i.e. release the UE variable *VarRA-Report*, 48 hours after the last successful random access procedure or the failed or successfully completed on-demand system information acquisition procedure or the failed or successfully completed RA-SDT procedure related information is added to the *VarRA-Report*.

NOTE 1: Void.

5.7.10.5 RA information determination

The UE shall, for the last successfully completed or last failed random-access procedure, set the content in *ra-InformationCommon* as follows:

- 1> set the *absoluteFrequencyPointA* to indicate the absolute frequency of the reference resource block associated to the random-access resources used in the random-access procedure;
- 1> set the *locationAndBandwidth* and *subcarrierSpacing* associated to the UL BWP of the random-access resources used in the random-access procedure;
- 1> if contention based random-access resources are used in the random-access procedure:
 - 2> set the *msgA-RO-FrequencyStart* and *msgA-RO-FDM* and *msgA-SubcarrierSpacing* associated to the 2 step random-access resources if used in the random-access procedure;
 - 2> if *msgA-SubcarrierSpacing* associated to the 2 step random-access resources used in the random-access procedure is available:
 - 3> set the *msgA-SubcarrierSpacing* associated to the 2 step random-access resources used in the random-access procedure;
 - 2> else if only 2 step random-access resources are available in the UL BWP used in the random-access procedure:
 - 3> set the *msgA-SCS-From-prach-ConfigurationIndex* to the subcarrier spacing as derived from the *msgA-PRACH-ConfigurationIndex* used in the 2-step random-access procedure;
 - 2> else:
 - 3> set the *msg1-SubcarrierSpacing* associated to the 4 step random-access resources used in the random-access procedure;
 - 2> set the *msg1-FrequencyStart* associated to the 4 step random-access resources if used in the random-access procedure, and if its value is different from the value of *msgA-RO-FrequencyStart* if it is included in the *ra-InformationCommon*;
 - 2> set the *msg1-FDM* associated to the 4 step random-access resources if used in the random-access procedure, and if its value is different from the value of *msgA-RO-FDM* if it is included in the *ra-InformationCommon*;
 - 2> if *msg1-SubcarrierSpacing* associated to the 4 step random-access resources used in the random-access procedure is available, and if its value is different from the value of *msgA-SubcarrierSpacing* if it is included in the *ra-InformationCommon*:
 - 3> set the *msg1-SubcarrierSpacing* associated to the 4 step random-access resources used in the random-access procedure;
 - 2> else:
 - 3> set the *msg1-SCS-From-prach-ConfigurationIndex* to the subcarrier spacing as derived from the *prach-ConfigurationIndex* used in the 4-step random-access procedure, and if its value is different from the value of *msgA-SCS-From-prach-ConfigurationIndex* if it is included in the *ra-InformationCommon*;
- 1> if contention free random-access resources are used in the random-access procedure:
 - 2> set the *msg1-FrequencyStartCFRA* and *msg1-FDMCFRA* associated to the 4 step random-access resources if used in the random-access procedure;

- 2> if *msg1-SubcarrierSpacing* associated to the 4 step random-access resources used in the random-access procedure is available:
 - 3> set the *msg1-SubcarrierSpacingCFRA* associated to the 4 step random-access resources used in the random-access procedure;
- 2> else:
 - 3> set the *msg1-SCS-From-prach-ConfigurationIndexCFRA* to the subcarrier spacing as derived from the *prach-ConfigurationIndex* used in the 4 step random-access procedure;
- 2> set the *msgA-RO-FrequencyStartCFRA* and *msgA-RO-FDMCFRA* associated to the 2 step contention free random access resources if used in the random-access procedure;
- 2> set the *msgA-MCS*, the *nrofPRBs-PerMsgA-PO*, the *msgA-PUSCH-TimeDomainAllocation*, the *frequencyStartMsgA-PUSCH*, the *nrofMsgA-PO-FDM* associated to the 2 step random-access resources if used in the random-access procedure;
- 2> if *msgA-SubcarrierSpacing* associated to the 2 step random-access resources used in the random-access procedure is available:
 - 3> set the *msgA-SubcarrierSpacing* associated to the 2 step random-access resources used in the random-access procedure;
- 2> else if only 2 step random-access resources are available in the UL BWP used in the random-access procedure:
 - 3> set the *msgA-SCS-From-prach-ConfigurationIndex* to the subcarrier spacing as derived from the *msgA-PRACH-ConfigurationIndex* used in the 2-step random-access procedure;
- 2> else:
 - 3> set the *msg1-SubcarrierSpacing* associated to the 4 step random-access resources used in the random-access procedure;
- 1> if the random access procedure is initialized with *RA_TYPE* set to *2-stepRA* as described in TS 38.321 [3]:
 - 2> set the *dlPathlossRSRP* to the measured RSRP of the DL pathloss reference obtained at the time of *RA_Type* selection stage of the initialization of the RA procedure as captured in TS 38.321 [3];
 - 2> if the configuration for the random access *msgA-TransMax* was configured in *RACH-ConfigDedicated* for this random access procedure, and *raPurpose* is set to *reconfigurationWithSync*:
 - 3> set *msgA-TransMax* to the value of *msgA-TransMax* in *RACH-ConfigDedicated*;
 - 2> else if *msgA-TransMax* was configured in *RACH-ConfigCommonTwoStepRA*:
 - 3> set *msgA-TransMax* to the value of *msgA-TransMax* in *RACH-ConfigCommonTwoStepRA*;
 - 2> set the *msgA-PUSCH-PayloadSize* to the size of the overall payload available in the UE buffer at the time of initiating the 2 step RA procedure;
- 1> if the purpose of the random access procedure is to request on-demand system information (i.e., if the *raPurpose* is set to *requestForOtherSI* or *msg3RequestForOtherSI*):
 - 2> set the *intendedSIBs* to indicate the SIB(s) the UE wanted to receive as a result of the SI request;
 - 2> set the *ssbsForSI-Acquisition* to indicate the SSB(s) used to receive the SI message;
 - 2> if the on-demand system information acquisition was successful:
 - 3> set the *onDemandSISuccess* to *true*;
- 1> if one or more of the features including RedCap and/or Slicing and/or SDT and/or MSG3 repetitions and/or MSG1 repetitions and/or eRedCap are applicable for this random-access procedure as specified in clause 5.1.1b of TS 38.321[3]:

- 2> set the *triggeredFeatureCombination* to indicate all the features triggering this random-access procedure as below:
 - 3> if this random-access procedure is triggered by RedCap, include *redCap*;
 - 3> if this random-access procedure is triggered by SDT, include *smallData*;
 - 3> if this random-access procedure is triggered by Msg3 repetitions, include *msg3-Repetitions*;
 - 3> if this random-access procedure is triggered by Msg1 repetitions, include *msg1-Repetitions*;
 - 3> if this random-access procedure is triggered by eRedCap, include *eRedCap*;
 - 3> if this random-access procedure is triggered by slicing, set *nsag* to the NSAG-ID(s) applied in the random-access procedure and set the *triggered-S-NSSAI-List* to include all the S-NSSAI(s) associated to the slices triggering the access attempt in the random-access procedure;
- 2> if the value of used feature or combination of features is different from the *triggeredFeatureCombination*:
 - 3> set the *usedFeatureCombination* to indicate one or more features of *FeatureCombination* associated to the random-access resource used in the random-access procedure as below:
 - 4> if RedCap is part of the used *FeatureCombination*, include *redCap*;
 - 4> if SDT is part of the used *FeatureCombination*, include *smallData*;
 - 4> if Msg3 repetitions is part of the used *FeatureCombination*, include *msg3-Repetitions*;
 - 4> if Msg1 repetitions is part of the used *FeatureCombination*, include *msg1-Repetitions*;
 - 4> if *eRedCap* is part of the used *FeatureCombination*, include *eRedCap*;
 - 4> if NSAG(s) is part of the used *FeatureCombination*, set *nsag* to include the NSAG-ID(s) configured for the used *FeatureCombination*;
- 2> set the *startPreambleForThisPartition* to the value of *startPreambleForThisPartition* in the last used *FeatureCombinationPreambles* associated to the used *FeatureCombination*;
- 2> set the *numberOfPreamblesPerSSB-ForThisPartition* to the value of *numberOfPreamblesPerSSB-ForThisPartition* in the last used *FeatureCombinationPreambles* associated to the used *FeatureCombination*;
- 1> set the parameters associated to the successive random-access attempts associated to the selected beam in the *perRAInfoList* as follows:
 - 2> if the random-access resource used is associated to a SS/PBCH block, set the associated random-access parameters for the successive random-access attempts associated to the same SS/PBCH block for one or more random-access attempts as follows:
 - 3> set the *ssb-Index* to include the SS/PBCH block index associated to the used random-access resource;
 - 3> set the *numberOfPreamblesSentOnSSB* to indicate the number of successive random-access attempts associated to the SS/PBCH block;
 - 3> if all preamble transmissions for the successive random-access attempts associated to this SS/PBCH block were blocked by LBT:
 - 4> include *allPreamblesBlocked*;
 - 3> else:
 - 4> if LBT failure indication was received from lower layers for the last random-access preamble transmission attempt in the SS/PBCH block associated to the *ssb-Index*, before changing the SS/PBCH block for random access preamble transmission:
 - 5> include *lbt-Detected*;

- 3> for each random-access attempt performed on the random-access resource, except the random-access attempts for which LBT failure indication was received from lower layers, include the following parameters in the chronological order of the random-access attempt:
 - 4> if the random-access attempt is performed on the contention based random-access resource and if *raPurpose* is not equal to '*requestForOtherSI*', include *contentionDetected* as follows:
 - 5> if contention resolution was not successful as specified in TS 38.321 [6] for the transmitted preamble:
 - 6> set the *contentionDetected* to *true*;
 - 5> else:
 - 6> set the *contentionDetected* to *false*;
 - 4> if the random access attempt is a 2-step random access attempt:
 - 5> if fallback from 2-step random access to 4-step random access occurred during the random access attempt:
 - 6> set *fallbackToFourStepRA* to *true*;
 - 4> if the random-access attempt is performed on the contention based random-access resource; or
 - 4> if the random-access attempt is performed on the contention free random-access resource and if the random-access procedure was initiated due to the PDCCH ordering:
 - 5> if the random access attempt is a 4-step random access attempt and the SS/PBCH block RSRP of the SS/PBCH block corresponding to the random-access resource used in the random-access attempt is above *rsrp-ThresholdSSB*; or
 - 5> if the random access attempt is a 2-step random access attempt and the SS/PBCH block RSRP of the SS/PBCH block corresponding to the random-access resource used in the random-access attempt is above *msgA-RSRP-ThresholdSSB*:
 - 6> set the *dlRSRPAboveThreshold* to *true*;
 - 5> else:
 - 6> set the *dlRSRPAboveThreshold* to *false*;
- 2> else if the random-access resource used is associated to a CSI-RS, set the associated random-access parameters for the successive random-access attempts associated to the same CSI-RS for one or more random-access attempts as follows:
 - 3> set the *csi-RS-Index* to include the CSI-RS index associated to the used random-access resource;
 - 3> set the *numberOfPreamblesSentOnCSI-RS* to indicate the number of successive random-access attempts associated to the CSI-RS;
 - 3> if all preamble transmissions for the successive random-access attempts associated to this CSI-RS were blocked by LBT:
 - 4> include *allPreamblesBlocked*;
 - 3> else:
 - 4> if LBT failure indication was received from lower layers for the last random-access preamble transmission attempt in the CSI-RS associated to the *csi-RS-Index*, before changing the CSI-RS for random access preamble transmission:
 - 5> include *lbt-Detected*;
- 1> if at least one LBT failure indication has been received from lower layers during the random-access procedure:

- 2> set the *numberOfLBT-Failures* to indicate the total number of random-access attempts for which LBT failure indications have been received from lower layers in the random-access procedure.

The UE shall, for all the BWPs in which consistent LBT failures are triggered and not cancelled (according to TS 38.321 [3]) prior to successful RA completion or prior to RLF/HOF, set the below parameters in *attemptedBWP-InfoList* in the chronological order of BWP selection:

- 1> set the *locationAndBandwidth* and *subcarrierSpacing* associated to the UL BWP.

NOTE 1: Void.

NOTE 2: If *allPreamblesBlocked* is included, it is left to UE implementation how to set the *numberOfPreamblesSentOnSSB-r16*, *numberOfPreamblesSentOnCSI-RS-r16* and the *perRAAttemptInfoList-r16*.

5.7.10.6 Actions for the successful handover report determination

The UE shall for the PCell:

- 1> if the procedure is triggered due to successful completion of reconfiguration with sync, and if the ratio between the value of the elapsed time of the timer T304 and the configured value of the timer T304, included in the last applied *RRCReconfiguration* message including the *reconfigurationWithSync*, is greater than *thresholdPercentageT304* if included in the *successHO-Config* received before executing the last reconfiguration with sync; or
- 1> if the procedure is triggered due to successful completion of reconfiguration with sync, and if the ratio between the value of the elapsed time of the timer T310 and the configured value of the timer T310, configured while the UE was connected to the source PCell before executing the last reconfiguration with sync, is greater than *thresholdPercentageT310* included in the *successHO-Config* if configured by the source PCell before executing the last reconfiguration with sync; or
- 1> if the procedure is triggered due to successful completion of reconfiguration with sync, and if the T312 associated to the measurement identity of the target cell was running at the time of initiating the execution of the reconfiguration with sync procedure and if the ratio between the value of the elapsed time of the timer T312 and the configured value of the timer T312, configured while the UE was connected to the source PCell before executing the last reconfiguration with sync, is greater than *thresholdPercentageT312* included in the *successHO-Config* if configured by the source PCell before executing the last reconfiguration with sync; or
- 1> if the procedure is triggered due to successful completion of reconfiguration with sync, and if *sourceDAPS-FailureReporting* is included in the *successHO-Config* before executing the last reconfiguration with sync and is set to *true* and if the last executed handover was a DAPS handover and if an RLF occurred at the source PCell during the DAPS handover while T304 was running; or:
- 1> if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA, and if the ratio between the value of the elapsed time of the timer T310 and the configured value of the timer T310, configured while the UE was connected to the source PCell before executing the last Mobility from NR to E-UTRA, is greater than *thresholdPercentageT310* included in the *successHO-Config* if configured by the source PCell before executing the last Mobility from NR to E-UTRA; or
- 1> if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA, and if the T312 associated to the measurement identity of the target cell was running at the time of initiating the execution of the Mobility from NR to E-UTRA and if the ratio between the value of the elapsed time of the timer T312 and the configured value of the timer T312, configured while the UE was connected to the source PCell before executing the last Mobility from NR to E-UTRA, is greater than *thresholdPercentageT312* included in the *successHO-Config* if configured by the source PCell before executing the last Mobility from NR to E-UTRA:
- 2> store the successful handover information in *VarSuccessHO-Report* and determine the content in *VarSuccessHO-Report* as follows:
- 3> clear the information included in *VarSuccessHO-Report*, if any;
- 3> if the UE is not in SNPN access mode, set the *plmn-IdentityList* to include the list of EPLMNs stored by the UE (i.e., includes the RPLMN);

- 3> else if the UE is in SNPN access mode, set the *snpn-IdentityList* to include the list of equivalent SNPNs stored by the UE (i.e., including the registered SNPN identity), if available;
- 3> for intra-NR handover, set the *c-RNTI* to the C-RNTI assigned by the target PCell of the handover;
- 3> if the procedure is triggered due to successful completion of reconfiguration with sync, for the source PCell in which the last *RRCReconfiguration* message including *reconfigurationWithSync* was applied; or
- 3> if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA, for the source PCell in which the last *MobilityFromNRCommand* concerning an inter-RAT handover from NR to E-UTRA was applied:
 - 4> set the *sourcePCellID* in *sourceCellInfo* to the global cell identity and tracking area code, if available, of the source PCell;
 - 4> set the *sourceCellMeas* in *sourceCellInfo* to include the cell level RSRP, RSRQ and the available SINR, of the source PCell based on the available SSB and CSI-RS measurements collected up to the moment the UE sends *RRCReconfigurationComplete* message if the procedure is triggered due to successful completion of reconfiguration with sync, or up to the moment the UE sends the EUTRA *RRCConnectionReconfigurationComplete* message if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA;
 - 4> set the *rsIndexResults* in *sourceCellMeas* to include all the available SSB and CSI-RS measurement quantities of the source PCell collected up to the moment the UE sends *RRCReconfigurationComplete* message if the procedure is triggered due to successful completion of reconfiguration with sync, or up to the moment the UE sends the EUTRA *RRCConnectionReconfigurationComplete* message if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA;
 - 4> if the last executed handover was a DAPS handover and if an RLF occurred at the source PCell during the DAPS handover while T304 was running:
 - 5> set the *rlf-InSourceDAPS* in *sourceCellInfo* to *true*;
- 3> if the procedure is triggered due to successful completion of reconfiguration with sync, for the target PCell indicated in the last applied *RRCReconfiguration* message including *reconfigurationWithSync*:
 - 4> set the *targetPCellID* in *targetCellInfo* to the global cell identity and tracking area code, if available, of the target PCell; otherwise, set the *targetCell-PCI-ARFCN* to the physical cell identity and carrier frequency of the target PCell;

NOTE 00: If *targetCell-PCI-ARFCN* is included, it is left to UE implementation how to set the *targetPCellID*.

- 4> set the *targetCellMeas* in *targetCellInfo* to include the cell level RSRP, RSRQ and the available SINR, of the target PCell based on the available SSB and CSI-RS measurements collected up to the moment the UE sends *RRCReconfigurationComplete* message;
- 4> set the *rsIndexResults* in *targetCellMeas* to include all the available SSB and CSI-RS measurement quantities of the target PCell collected up to the moment the UE sends *RRCReconfigurationComplete* message;
- 4> if the last applied *RRCReconfiguration* message including *reconfigurationWithSync* was included in the stored *condRRCReconfig*:
 - 5> set the *timeSinceCHO-Reconfig* to the time elapsed between the initiation of the execution of conditional reconfiguration for the target PCell and the reception of the last *conditionalReconfiguration* including the *condRRCReconfig* of the target PCell in the source PCell;
- 3> if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA, for the target PCell indicated in the last applied *MobilityFromNRCommand* concerning an inter-RAT handover from NR to E-UTRA:
 - 4> set the *targetPCellId* in *eutra-TargetCellInfo* to the global cell identity and tracking area code, if available, and otherwise to the physical cell identity and carrier frequency of the target PCell;

- 4> set the *targetCellMeas* in *eutra-TargetCellInfo* to include the cell level RSRP, RSRQ and the available SINR, of the target PCell based on the available measurements collected up to the moment the UE sends *RRCConnectionReconfigurationComplete* message;

NOTE 0: If *eutra-TargetCellInfo* is included, it is left to UE implementation how to set the *targetCellInfo*.

- 3> if the procedure is triggered due to successful completion of reconfiguration with sync and if the ratio between the value of the elapsed time of the timer T304 and the configured value of the T304 timer, included in the last applied *RRCReconfiguration* message including the *reconfigurationWithSync*, is greater than *thresholdPercentageT304* if included in the *successHO-Config* received before executing the last reconfiguration with sync:
 - 4> set *t304-cause* in *shr-Cause* to *true*;
 - 4> set the *ra-InformationCommon* to include the random-access related information associated to the random access procedure in the target PCell, as specified in clause 5.7.10.5;
- 3> if the ratio between the value of the elapsed time of the timer T310 and the configured value of the T310 timer, configured while the UE was connected to the source PCell before executing the last reconfiguration with sync or the last Mobility from NR to E-UTRA, is greater than *thresholdPercentageT310* included in the *successHO-Config* if configured by the source PCell before executing the last reconfiguration with sync or Mobility from NR to E-UTRA:
 - 4> set *t310-cause* in *shr-Cause* to *true*;
- 3> if the T312 associated to the measurement identity of the target cell was running at the time of initiating the execution of the reconfiguration with sync procedure or Mobility from NR to E-UTRA, and if the ratio between the value of the elapsed time of the timer T312 and the configured value of the T312 timer, configured while the UE was connected to the source PCell before executing the last reconfiguration with sync or Mobility from NR to E-UTRA, is greater than *thresholdPercentageT312* included in the *successHO-Config* if configured by the source PCell before executing the last reconfiguration with sync, or Mobility from NR to E-UTRA:
 - 4> set *t312-cause* in *shr-Cause* to *true*;
- 3> if the procedure is triggered due to successful completion of reconfiguration with sync and if *sourceDAPS-FailureReporting* included in the *successHO-Config* if configured by the source PCell before executing the last reconfiguration with sync is set to *true*, and if the last executed handover was a DAPS handover and if an RLF occurred at the source PCell during the DAPS handover while T304 was running:
 - 4> set *sourceDAPS-Failure* in *shr-Cause* to *true*;
- 3> if the procedure is triggered due to successful completion of reconfiguration with sync, for each of the *measObjectNR*, configured by the source PCell, in which the last *RRCReconfiguration* message including *reconfigurationWithSync* was applied; or:
- 3> if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA, for each of the *measObjectNR*, configured by the source PCell, in which the last *MobilityFromNRCommand* concerning an inter-RAT handover from NR to E-UTRA was applied:
 - 4> if *measRSSI-ReportConfig* is configured for the frequency of the source PCell:
 - 5> if the procedure is triggered due to successful completion of reconfiguration with sync:
 - 6> set the *measResultServCellRSSI* to the linear average of the available RSSI sample value(s) provided by lower layers for the frequency of the source PCell up to the moment the UE sends the *RRCReconfigurationComplete* message;
 - 5> else if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA:
 - 6> set the *measResultServCellRSSI* to the linear average of the available RSSI sample value(s) provided by lower layers for the frequency of the source PCell up to the moment the UE sends the EUTRA *RRCConnectionReconfigurationComplete* message;

- 4> for each of the configured *measObjectNR* if *measRSSI-ReportConfig* is configured for the configured frequency:
 - 5> if the procedure is triggered due to successful completion of reconfiguration with sync:
 - 6> set the *measResultNeighFreqRSSI* in the *measResultNeighFreqListRSSI* to the linear average of the available RSSI sample value(s) provided by lower layers for the associated neighbouring frequency up to the moment the UE sends the *RRCReconfigurationComplete* message;
 - 7> for each neighbour frequency included, include the optional fields that are available;
 - 5> else if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA:
 - 6> set the *measResultNeighFreqRSSI* in the *measResultNeighFreqListRSSI* to the linear average of the available RSSI sample value(s) provided by lower layers for the associated neighbouring frequency up to the moment the UE sends the EUTRA *RRCConnectionReconfigurationComplete* message;
 - 7> for each neighbour frequency included, include the optional fields that are available;
- 4> if measurements are available for the *measObjectNR*:
 - 5> if the SS/PBCH block-based measurement quantities are available:
 - 6> set the *measResultListNR* in *measResultNeighCells* to include all the available measurement quantities of the best measured cells, other than the source PCell or target PCell, ordered such that the cell with highest SS/PBCH block RSRP is listed first if SS/PBCH block RSRP measurement results are available, otherwise the cell with highest SS/PBCH block RSRQ is listed first if SS/PBCH block RSRQ measurement results are available, otherwise the cell with highest SS/PBCH block SINR is listed first, based on the available SS/PBCH block based measurements collected up to the moment the UE sends the *RRCReconfigurationComplete* message if the procedure is triggered due to successful completion of reconfiguration with sync, or up to the moment the UE sends the EUTRA *RRCConnectionReconfigurationComplete* message if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA;
 - 6> for each neighbour cell included, include the optional fields that are available;

NOTE 1: For the neighboring cells set included in *measResultListNR* in *measResultNeighCells* ordered based on the SS/PBCH block measurement quantities, the UE includes also the CSI-RS based measurement quantities, if available.

- 5> if the CSI-RS measurement quantities are available:
 - 6> set the *measResultListNR* in *measResultNeighCells* to include all the available measurement quantities of the best measured cells, other than the source PCell and target PCell, ordered such that the cell with highest CSI-RS RSRP is listed first if CSI-RS RSRP measurement results are available, otherwise the cell with highest CSI-RS RSRQ is listed first if CSI-RS RSRQ measurement results are available, otherwise the cell with highest CSI-RS SINR is listed first, based on the available CSI-RS based measurements collected up to the moment the UE sends the *RRCReconfigurationComplete* message if the procedure is triggered due to successful completion of reconfiguration with sync, or up to the moment the UE sends the EUTRA *RRCConnectionReconfigurationComplete* message if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA;
 - 6> for each neighbour cell included, include the optional fields that are available;

NOTE 2: For the neighboring cells set ordered based on the CSI-RS measurement quantities, the UE includes measurements only for the cells not yet included in *measResultListNR* in *measResultNeighCells* to avoid overriding SS/PBCH block-based ordered measurements.

- 3> if the procedure is triggered due to successful completion of reconfiguration with sync, for each of the *measObjectEUTRA*, configured by the source PCell in which the last *RRCReconfiguration* message including *reconfigurationWithSync* was applied; or:

- 3> if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA, for each of the *measObjectEUTRA*, configured by the source PCell in which the last *MobilityFromNRCommand* concerning an inter-RAT handover from NR to E-UTRA was applied:
 - 4> if measurements are available for the *measObjectEUTRA*:
 - 5> set the *measResultListEUTRA* in *measResultNeighCells* to include the best measured cells ordered such that the cell with highest RSRP is listed first if RSRP measurement results are available, otherwise the cell with highest RSRQ is listed first, based on measurements collected up to the moment the UE sends the *RRCReconfigurationComplete* message if the procedure is triggered due to successful completion of reconfiguration with sync, or up to the moment the UE sends the EUTRA *RRCConnectionReconfigurationComplete* message if the procedure is triggered due to successful completion of Mobility from NR to E-UTRA;
 - 5> for each neighbour cell included, include the optional fields that are available;
 - 3> for each of the neighbour cells included in *measResultNeighCells*:
 - 4> if the cell was a candidate target cell included in the *condRRCReconfig* within the *conditionalReconfiguration* configured by the source PCell including the *condExecutionCond* within the *conditionalReconfiguration* associated to *condEventA3* or *condEventA5*, in which the last *RRCReconfiguration* message including *reconfigurationWithSync* was applied:
 - 5> set the *choCandidate* to *true* in *measResultNR*;
 - 3> if available, set the *locationInfo* as in 5.3.3.7;
 - 1> release *successHO-Config* configured by the source PCell and *thresholdPercentageT304* if configured by the target PCell.

The UE may discard the successful handover information, i.e., release the UE variable *VarSuccessHO-Report*, 48 hours after the last successful handover information is added to the *VarSuccessHO-Report*.

5.7.10.7 Actions for the successful PSCell change or addition report determination

The UE shall for the PSCell:

- 1> if the ratio between the value of the elapsed time of the timer T304 and the configured value of the timer T304, included in the last applied *RRCReconfiguration* message for the SCG including the *reconfigurationWithSync*, is greater than *thresholdPercentageT304-SCG* if included in the *successPSCell-Config* received before executing the last reconfiguration with sync for the SCG; or
- 1> if *sn-InitiatedPSCellChange* associated to the last applied *RRCReconfiguration* with *reconfigurationWithSync* for the SCG is configured and if the ratio between the value of the elapsed time of the timer T310 and the configured value of the timer T310, configured while the UE was connected to the source PSCell before executing the last reconfiguration with sync for the SCG, is greater than *thresholdPercentageT310-SCG* included in the *successPSCell-Config* if configured by the source PSCell before executing the last reconfiguration with sync for the SCG; or
- 1> if *sn-InitiatedPSCellChange* associated to the last applied *RRCReconfiguration* with *reconfigurationWithSync* for the SCG is configured and if the T312 associated to the measurement identity of the target PSCell included in a *measConfig* associated with the SCG was running at the time of initiating the execution of the reconfiguration with sync procedure for the SCG and if the ratio between the value of the elapsed time of the timer T312 and the configured value of the timer T312, configured while the UE was connected to the source PSCell before executing the last reconfiguration with sync, is greater than *thresholdPercentageT312-SCG* included in the *successPSCell-Config* if configured by the source PSCell before executing the last reconfiguration with sync for the SCG;
- 1> if *sn-InitiatedPSCellChange* associated to the last applied *RRCReconfiguration* with *reconfigurationWithSync* for the SCG is not configured and if the ratio between the value of the elapsed time of the timer T310 and the configured value of the timer T310, configured while the UE was connected to the source PSCell before executing the last reconfiguration with sync for the SCG, is greater than *thresholdPercentageT310-SCG* included in the *successPSCell-Config* if configured by the PCell before executing the last reconfiguration with sync for the SCG; or

- 1> if *sn-InitiatedPSCellChange* associated to the last applied *RRCReconfiguration* with *reconfigurationWithSync* for the SCG is not configured and if the T312 associated to the measurement identity of the target PSCell included in a *measConfig* associated with the SCG was running at the time of initiating the execution of the reconfiguration with sync procedure for the SCG and if the ratio between the value of the elapsed time of the timer T312 and the configured value of the timer T312, configured while the UE was connected to the source PSCell before executing the last reconfiguration with sync, is greater than *thresholdPercentageT312-SCG* included in the *successPSCell-Config* if configured by the PCell before executing the last reconfiguration with sync for the SCG:
 - 2> clear the information included in *VarSuccessPSCell-Report*, if any;
 - 2> store the successful PSCell change or addition information in *VarSuccessPSCell-Report* and determine the content in *VarSuccessPSCell-Report* as follows:
 - 3> if the UE is not in SNPN access mode, set the *plmn-IdentityList* to include the list of EPLMNs (including the RPLMN) stored by the UE;
 - 3> else if the UE is in SNPN access mode, set the *snpn-IdentityList* to include the list of equivalent SNPN identities (including the registered SNPN identity) stored by the UE, if available;
 - 3> set the *pCellId* to the global cell identity and, if available, tracking area code of the PCell;
 - 3> for the source PSCell (in case of PSCell change procedure) in which the last *RRCReconfiguration* message for the SCG including *reconfigurationWithSync* was applied:
 - 4> set the *sourcePSCellId* in *sourcePSCellInfo* to the global cell identity and tracking area code, and otherwise to the physical cell identity and carrier frequency of the source PSCell;
 - 4> set the *sourcePSCellMeas* in *sourcePSCellInfo* to include the cell level RSRP, RSRQ and the available SINR, of the source PSCell based on the available SSB and CSI-RS measurements collected up to the moment the UE successfully completed the random access procedure for the SCG;
 - 4> set the *rsIndexResults* in *sourcePSCellMeas* to include all the available SSB and CSI-RS measurement quantities of the source PSCell collected up to the moment the UE successfully completed the random access procedure for the SCG;
 - 3> for the target PSCell indicated in the last applied *RRCReconfiguration* message for the SCG including *reconfigurationWithSync*:
 - 4> set the *targetPSCellId* in *targetPSCellInfo* to the global cell identity and tracking area code, if available, and otherwise to the physical cell identity and carrier frequency of the target PSCell;
 - 4> set the *targetPSCellMeas* in *targetPSCellInfo* to include the cell level RSRP, RSRQ and the available SINR, of the target PSCell based on the available SSB and CSI-RS measurements collected up to the moment the UE successfully completed the random access procedure for the SCG;
 - 4> set the *rsIndexResults* in *targetPSCellMeas* to include all the available SSB and CSI-RS measurement quantities of the target PSCell collected up to the moment the UE successfully completed the random access procedure for the SCG;
 - 4> if the last applied *RRCReconfiguration* message for the SCG including *reconfigurationWithSync* was included in the stored *condRRCReconfig*:
 - 5> set the *timeSinceCPAC-Reconfig* to the time elapsed between the initiation of the execution of conditional reconfiguration for the target PSCell and the reception of the last *conditionalReconfiguration* for the SCG including the *condRRCReconfig* of the target PSCell;
 - 3> if triggering threshold for storing the successful PSCell change or addition information in *VarSuccessPSCell-Report* based on the *thresholdPercentageT304-SCG* is met:
 - 4> set *t304-cause* in *spr-Cause* to *true*;
 - 4> set the *ra-InformationCommon* to include the random-access related information associated to the random access procedure in the target PSCell, as specified in clause 5.7.10.5;

- 3> if triggering threshold for storing the successful PSCell change or addition information in *VarSuccessPSCell-Report* based on the *thresholdPercentageT310-SCG* is met:
 - 4> set *t310-cause* in *spr-Cause* to *true*;
- 3> if triggering threshold for storing the successful PSCell change or addition information in *VarSuccessPSCell-Report* based on the *thresholdPercentageT312-SCG* is met:
 - 4> set *t312-cause* in *spr-Cause* to *true*;
- 3> if *sn-InitiatedPSCellChange* associated to the last applied *RRCReconfiguration* with *reconfigurationWithSync* for the SCG is configured:
 - 4> consider all *measObjectNR* configured by the source PSCell;
- 3> else:
 - 4> consider all *measObjectNR* configured by the PCell;
- 3> for each of the considered *measObjectNR*:
 - 4> if measurements are available for the *measObjectNR*:
 - 5> if the SS/PBCH block-based measurement quantities are available:
 - 6> include in the *measResultListNR* in *measResultNeighCells* all the available measurement quantities of the best measured cells, other than the source PSCell (in case of PSCell change procedure) or target PSCell, ordered such that the cell with highest SS/PBCH block RSRP is listed first if SS/PBCH block RSRP measurement results are available, otherwise the cell with highest SS/PBCH block RSRQ is listed first if SS/PBCH block RSRQ measurement results are available, otherwise the cell with highest SS/PBCH block SINR is listed first, based on the available SS/PBCH block based measurements collected up to the moment the UE successfully completed the random access procedure;
 - 6> for each neighbour cell included, include the optional fields that are available (including the CSI-RS based measurement quantities, if available);
 - 5> if the CSI-RS measurement quantities are available for the cells not yet included in *measResultListNR* in *measResultNeighCells*:
 - 6> include in the *measResultListNR* in *measResultNeighCells* all the available measurement quantities of the best measured cells, other than the source PSCell (in case of PSCell change procedure) and target PSCell, ordered such that the cell with highest CSI-RS RSRP is listed first if CSI-RS RSRP measurement results are available, otherwise the cell with highest CSI-RS RSRQ is listed first if CSI-RS RSRQ measurement results are available, otherwise the cell with highest CSI-RS SINR is listed first, based on the available CSI-RS based measurements collected up to the moment the UE successfully completed the random access procedure;
 - 6> for each neighbour cell included, include the optional fields that are available;
- 3> for each of the neighbour cells included in *measResultNeighCells*:
 - 4> if the cell was a candidate target cell included in the *condRRCReconfig* within the *conditionalReconfiguration*, configured by the source PCell including the *condExecutionCond* within the *conditionalReconfiguration* associated to *condEventA4* or by the source PSCell (in case of PSCell change) when the last *RRCReconfiguration* message for the SCG including *reconfigurationWithSync* was applied:
 - 5> set the *choCandidate* to *true* in *measResultNR*;
- 3> if *sn-InitiatedPSCellChange* associated to the last applied *RRCReconfiguration* with *reconfigurationWithSync* for the SCG is configured:
 - 4> if available, set the *locationInfo* as in 5.3.3.7 according to the *otherConfig* associated with the source PSCell;

- 4> include *sn-InitiatedPSCellChange*;
- 3> else:
 - 4> if available, set the *locationInfo* as in 5.3.3.7 according to the *otherConfig* associated with the PCell;
- 1> release *successPSCell-Config* configured by the source PSCell if available and *thresholdPercentageT304* if configured by the target PSCell.

The UE may discard the successful PSCell change or addition information, i.e., release the UE variable *VarSuccessPSCell-Report*, 48 hours after the last successful PSCell change or addition information is added to the *VarSuccessPSCell-Report* or upon deregistration from the network as specified in TS 23.502 [43].

5.7.11 Void

5.7.12 IAB Other Information

5.7.12.1 General

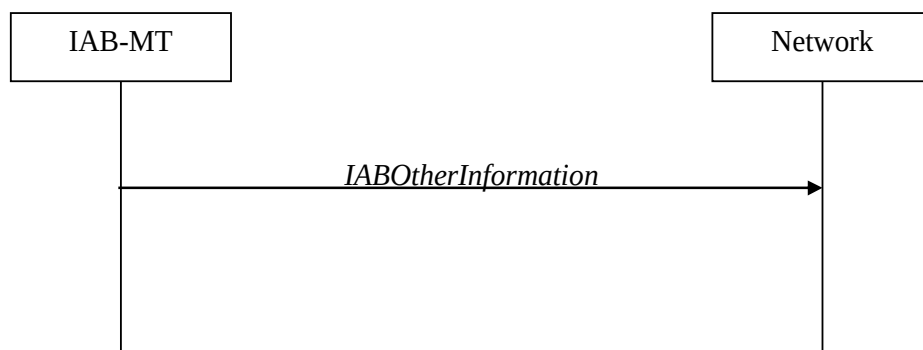 


Figure 5.7.12.1-1: IAB Other Information procedure

The IAB Other Information procedure is used by IAB-MT to request the IAB-donor-CU to allocate IP address or inform the IAB-donor-CU of the IP address for the collocated IAB-DU.

5.7.12.2 Initiation

Upon initiation of the procedure, the IAB-MT shall:

- 1> initiate transmission of the *IABOtherInformation* message in accordance with 5.7.12.3;

5.7.12.3 Actions related to transmission of *IABOtherInformation* message

The IAB-MT shall set the contents of *IABOtherInformation* message as follows:

- 1> if the procedure is used to request IP addresses:
 - 2> if IPv4 addresses are requested:
 - 3> set the *iab-IPv4-AddressNumReq* to the number of IPv4 addresses requested per specific usage;
 - 2> if IPv6 addresses or IPv6 address prefixes are requested:
 - 3> if IPv6 addresses are requested:
 - 4> set the *iab-IPv6-AddressNumReq* to the number of IPv6 addresses requested per specific usage;
 - 3> else if IPv6 address prefixes are requested:
 - 4> set the *iab-IPv6-AddressPrefixReq* to *true* per specific usage;

1> if the procedure is used to report IP addresses:

2> if IPv4 addresses are reported:

3> include *IPv4-Address* in *iab-IPv4-AddressReport*, and for each IP address included:

4> if IPv4 addresses are used for F1-C traffic:

5> include these addresses in *f1-C-Traffic-IP-Address*.

4> if IPv4 addresses are used for F1-U traffic:

5> include these addresses in *f1-U-Traffic-IP-Address*.

4> if IPv4 address are used for non-F1 traffic:

5> include these addresses in *non-f1-Traffic-IP-Address*.

4> if IPv4 addresses are used for all traffic:

5> include these addresses in *all-Traffic-IAB-IP-Address*.

2> if IPv6 addresses or IPv6 address prefixes are reported:

3> if IPv6 addresses are reported:

4> include *IPv6-Address* in *iab-IPv6-AddressReport*, and for each IP address included;

5> if IPv6 addresses are used for F1-C traffic:

6> include these addresses in *f1-C-Traffic-IP-Address*.

5> if IPv6 addresses are used for F1-U traffic:

6> include these addresses in *f1-U-Traffic-IP-Address*.

5> if IPv6 addresses are used for non-F1 traffic:

6> include these addresses in *non-f1-Traffic-IP-Address*.

5> if IPv6 addresses are used for all traffic:

6> include these addresses in *all-Traffic-IAB-IP-Address*.

3> else if IPv6 address prefixes are reported:

4> include these *IPv6-Prefix* in *iab-IPv6-PrefixReport*, and for each IP address prefix included;

5> if this IPv6 address prefix is used for F1-C traffic:

6> include this prefix in *f1-C-Traffic-IP-Address*.

5> if this IPv6 address prefix is used for F1-U traffic:

6> include this prefix in *f1-U-Traffic-IP-Address*.

5> if this IPv6 address prefix is used for non-F1 traffic:

6> include this prefix in *non-f1-Traffic-IP-Address*.

5> if this IPv6 address prefix is used for all traffic:

6> include this prefix in *all-Traffic-IAB-IP-Address*.

1> if the IAB-MT is in (NG)EN-DC, or

1> if the IAB-MT is in NR-DC and the IAB Other Information procedure is towards the IAB-donor-CU in the SN:

2> if SRB3 is configured:

- 3> submit the *IABOtherInformation* message via SRB3 to lower layers for transmission;
- 2> else if the IAB-MT is in (NG)EN-DC:
 - 3> submit the *IABOtherInformation* message via the E-UTRA MCG embedded in E-UTRA RRC message *ULInformationTransferMRDC* as specified in TS 36.331 [10];
- 2> else:
 - 3> submit the *IABOtherInformation* message via the NR MCG embedded in NR RRC message *ULInformationTransferMRDC* as specified in clause 5.7.2a.3;
- 1> else:
 - 2> submit the *IABOtherInformation* message to lower layers for transmission.

5.7.13 RLM/BFD relaxation

5.7.13.0 General

In case both low mobility criterion and good serving cell criterion are configured for RLM/BFD relaxation, the UE is allowed to perform RLM and/or BFD relaxation according to requirements specified in TS 38.133 [14] when both relaxed measurement criterion for low mobility and relaxed measurement criterion for good serving cell quality are met.

In case only the good serving cell quality criterion is configured for RLM/BFD relaxation, the UE is allowed to perform RLM and/or BFD relaxation according to requirements specified in TS 38.133 [14] when the relaxed measurement criterion for good serving cell quality is met.

When the short DRX cycle is smaller than or equal to 80 ms and the long DRX cycle is larger than 80 ms then the UE is allowed to perform RLM and/or BFD relaxation while *drx-ShortCycleTimer* is running and the relaxed measurement criteria are met. In this case the UE does not report change of its relaxation state for RLM and/or BFD relaxation due to start or stop of *drx-ShortCycleTimer*, if configured.

5.7.13.1 Relaxed measurement criterion for low mobility

The relaxed measurement criterion for UE with low mobility in RRC_CONNECTED is fulfilled when:

- $(SS\text{-}RSRP_{\text{Ref}} - SS\text{-}RSRP) < S_{\text{SearchDeltaP-Connected}}$,

Where:

- SS-RSRP = current L3 RSRP measurement of the SpCell based on SSB (dB).
- SS-RSRP_{Ref} = reference L3 RSRP measurement of the SpCell based on SSB (dB), set as follows:
 - After receiving low mobility criterion configuration, or
 - After MAC of the CG successfully completes a Random Access procedure after applying a *reconfigurationWithSync* in *spCellConfig* of the CG while low mobility criterion is configured, or
 - upon an indication from lower layers that a RACH-less handover or an LTM cell switch is successfully completed for the CG while low mobility criterion is configured, or
 - If $(SS\text{-}RSRP - SS\text{-}RSRP_{\text{Ref}}) > 0$, or
 - If the relaxed measurement criterion has not been met for $T_{\text{SearchDeltaP-Connected}}$:
 - The UE shall set the value of SS-RSRP_{Ref} to the current SS-RSRP value of the SpCell.

5.7.13.2 Relaxed measurement criterion for good serving cell quality

The relaxed measurement criterion of good serving cell quality for RLM is fulfilled when the downlink radio link quality on the configured RLM-RS resource is evaluated to be better than the threshold $Q_{\text{in}} + X_{\text{dB}}$, wherein

- Q_{in} is specified in clause 8.1 of TS 38.133 [14].
- X is the parameter *offset* in *goodServingCellEvaluationRLM* for the evaluated serving cell.

The relaxed measurement criterion of good serving cell quality for BFD is fulfilled when the downlink radio link quality on the configured BFD-RS resource is evaluated to be better than the threshold $Q_{in}+X_{dB}$, wherein

- Q_{in} is specified in clause 8.1 of TS 38.133 [14].
- X is the parameter *offset* in *goodServingCellEvaluationBFD* for the evaluated serving cell.

5.7.14 UE Positioning Assistance Information

5.7.14.1 General

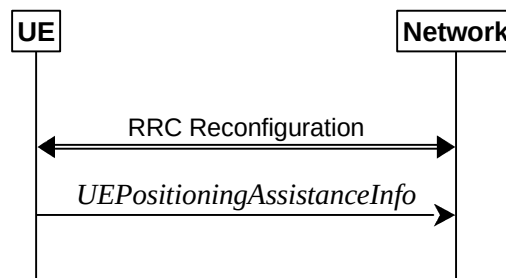 


Figure 5.7.14.1-1: UE Positioning Assistance Information procedure

The UE Positioning Assistance Information procedure is used by UE to report the UE Positioning Assistance Information. The UE reports the association between SRS resources for positioning and the UE Tx TEG ID as defined in TS 38.305 [73].

5.7.14.2 Initiation

A UE capable of providing the association between SRS resource for positioning and UE Tx TEG ID in RRC_CONNECTED may initiate the procedure upon being configured to provide this association information.

Upon initiation of the procedure, the UE shall:

- 1> initiate transmission of the *UEPositioningAssistanceInfo* message in accordance with 5.7.14.3 to provide the association.

5.7.14.3 Actions related to transmission of *UEPositioningAssistanceInfo* message

The UE shall set the contents of the *UEPositioningAssistanceInfo* message as follows:

- 1> if *ue-TxTEG-RequestUL-TDOA-Config* in *RRCReconfiguration* message is configured with *periodicReporting*:
 - 2> for all the association changes store *ue-TxTEG-Association* corresponding to each *ue-TxTEG-ID* with *nr-TimeStamp*;
 - 2> include the results in *ue-TxTEG-AssociationList* in the *UEPositioningAssistanceInfo* message on expiry of each configured period;
 - 2> optionally include one *ue-TxTEG-TimingErrorMarginValue* for each *UEPositioningAssistanceInfo* message;
- 1> else if *ue-TxTEG-RequestUL-TDOA-Config* in *RRCReconfiguration* message is configured with *oneShot*:
 - 2> identify the *ue-TxTEG-Association* corresponding to each *ue-TxTEG-ID* with *nr-TimeStamp*;
 - 2> include the results in *ue-TxTEG-AssociationList* in the *UEPositioningAssistanceInfo* message only one time;
 - 2> optionally include one *ue-TxTEG-TimingErrorMarginValue* for each *UEPositioningAssistanceInfo* message.

The UE shall submit the *UEPositioningAssistanceInfo* message to lower layers for transmission.

5.7.15 Void

5.7.16 Application layer measurement reporting

5.7.16.1 General

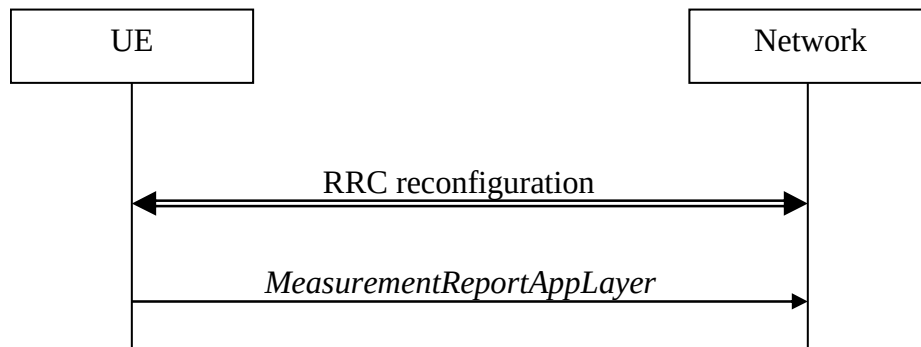 


Figure 5.7.16.1-1: Application layer measurement reporting

The purpose of this procedure is to send application layer measurement reports to the network.

5.7.16.2 Initiation

A UE capable of application layer measurement reporting in RRC_CONNECTED may initiate the procedure when configured with application layer measurement and reporting, i.e. when at least one *measConfigAppLayer* and SRB4 and/or SRB5 have been configured by the network.

Upon initiating the procedure, the UE shall:

- 1> for each stored application layer measurement configuration with *appLayerIdleInactiveConfig* configured and for which *appLayerIdleInactiveConfig* has not been transmitted since the UE received the *RRCSetup* message:
 - 2> set the parameters in *appLayerIdleInactiveConfig* in the *MeasurementReportAppLayer* message to the values stored in the UE variable *VarAppLayerIdleConfig*;
 - 2> if the *transmissionOfSessionStartStop* is set to *true*:
 - 3> if a session start or stop indication has been received from upper layers:
 - 4> set the *appLayerSessionStatus* in the *MeasurementReportAppLayer* message to the value of the latest received session start or stop indication;
 - 3> else:
 - 4> set the *appLayerSessionStatus* in the *MeasurementReportAppLayer* message to *stop*;
- 1> for each *measConfigAppLayerId* with an application layer measurement report container which has not been transmitted since the UE received the *RRCSetup* message:
 - 2> if the application layer measurement reporting has not been suspended for the *measConfigAppLayerId* associated with the application layer measurement report container according to clause 5.3.5.13d:
 - 3> set the *measConfigAppLayerId* in a *MeasReportAppLayer* in the *MeasurementReportAppLayer* message(s) to the value of the *measConfigAppLayerId* received together with the application layer measurement report container;
 - 3> for each application measurement report container stored for that *measConfigAppLayerId*:

- 4> set the *measReportAppLayerContainerList* in the *MeasurementReportAppLayer* message(s) to the stored value of the application layer measurement report container;

NOTE 0: If the size of the application layer measurement configurations, session status indications and reports exceed the size of an RRC message, the UE includes the *appLayerIdleInactiveConfig* and corresponding *appLayerSessionStatus* in the first *MeasurementReportAppLayer* message after the UE received the *RRCSetup* message, and transmits application layer measurement report containers in the same and subsequent *MeasurementReportAppLayer* messages.

1> for each *measConfigAppLayerId* received from upper layers:

- 2> if the UE AS has received application layer measurement report container from upper layers which has not been transmitted; and
- 2> if the application layer measurement reporting has not been suspended for the *measConfigAppLayerId* associated with the application layer measurement report container according to clause 5.3.5.13d:
 - 3> set the *measReportAppLayerContainer* in the *MeasurementReportAppLayer* message to the received value in the application layer measurement report container;
- 2> set the *measConfigAppLayerId* in the *MeasurementReportAppLayer* message to the value of the *measConfigAppLayerId* received together with application layer measurement report information;
- 2> if session start or stop information has been received from upper layers for the *measConfigAppLayerId*:
 - 3> set the *appLayerSessionStatus* in the *MeasurementReportAppLayer* message to the latest received value of session start or stop information;
- 2> if a RAN visible application layer measurement report has been received from upper layers:
 - 3> for each *appLayerBufferLevel* value in the received RAN visible application layer measurement report:
 - 4> set the *appLayerBufferLevel* values in the *appLayerBufferLevelList* in the *MeasurementReportAppLayer* message to the buffer level values received from the upper layer in the order with the first *appLayerBufferLevel* value set to the newest received buffer level value, the second *appLayerBufferLevel* value set to the second newest received buffer level value, and so on until all the buffer level values received from the upper layer have been assigned or the maximum number of values have been set according to *appLayerBufferLevel*, if configured;
 - 3> set the *playoutDelayForMediaStartup* in the *MeasurementReportAppLayer* message to the received value of playout delay for media startup in the RAN visible application layer measurement report, if any;
 - 3> for each PDU session ID value indicated in the received RAN visible application layer measurement report, if any:
 - 4> set the *PDU-SessionID* in the *pdu-SessionIdList* in the *MeasurementReportAppLayer* message to the indicated PDU session ID value;
 - 4> for each QoS Flow ID value indicated in the received RAN visible application layer measurement report associated with the PDU Session ID, if any:
 - 5> set the *QFI* associated with the PDU session ID to the indicated QoS Flow ID value.

1> if *reportingSRB* (or *SRB4* if *reportingSRB* is absent) and *ran-VisibleReportingSRB* (or *SRB4* if *ran-VisibleReportingSRB* is absent) indicates different SRBs for the *measConfigAppLayerId*:

- 2> include *measReportAppLayerContainer* and *appLayerSessionStatus* in a separate *MeasurementReportAppLayer* message than *ran-VisibleMeasurements*;

1> for each encoded *MeasurementReportAppLayer* message generated above which contains either only encapsulated application layer measurement reports or both encapsulated application layer measurement reports and RAN visible application layer measurement reports:

- 2> if *reportingSRB* is not configured for the *measConfigAppLayerId*:

- 3> if the encoded RRC message is larger than the maximum supported size of one PDCP SDU specified in TS 38.323 [5]:
 - 4> if the RRC message segmentation is enabled based on the field *rrc-SegAllowedSRB4* received in *appLayerMeasConfig*:
 - 5> initiate the UL message segment transfer procedure as specified in clause 5.7.7 for transmission via SRB4;
 - 4> else:
 - 5> discard the RRC message;
- 3> else:
 - 4> submit the *MeasurementReportAppLayer* message to lower layers for transmission via SRB4.
- 2> else if *reportingSRB* is configured for the *measConfigAppLayerId*:
 - 3> if the encoded RRC message is larger than the maximum supported size of one PDCP SDU specified in TS 38.323 [5]:
 - 4> if the RRC message segmentation is enabled based on the field *rrc-SegAllowedSRB4* received in *appLayerMeasConfig* and the *reportingSRB* is SRB4, or
 - 4> if RRC message segmentation is enabled based on the field *rrc-SegAllowedSRB5* received in *appLayerMeasConfig* and the *reportingSRB* is SRB5:
 - 5> initiate the UL message segment transfer procedure as specified in clause 5.7.7 for transmission via the SRB indicated in the field *reportingSRB* in *MeasConfigAppLayer*;
 - 4> else:
 - 5> discard the RRC message;
 - 3> else:
 - 4> submit the *MeasurementReportAppLayer* message to lower layers for transmission via the SRB indicated in the field *reportingSRB* in *MeasConfigAppLayer*.
- 1> for each encoded *MeasurementReportAppLayer* message generated above which contains only RAN visible application layer measurement reports:
 - 2> if *ran-VisibleReportingSRB* is not configured for the *measConfigAppLayerId*:
 - 3> submit the *MeasurementReportAppLayer* message to lower layers for transmission via SRB4;
 - 2> else if *ran-VisibleReportingSRB* is configured for the *measConfigAppLayerId*:
 - 3> submit the *MeasurementReportAppLayer* message to lower layers for transmission via the SRB indicated in the field *ran-VisibleReportingSRB* in *MeasConfigAppLayer*.

NOTE 1: If the SRB indicated by *reportingSRB* is not available or if *reportingSRB* is absent and SRB4 is not available, the UE may store application layer measurement report containers until the SRB is available. The UE may discard reports when the memory reserved for storing application layer measurement report containers becomes full. Reports with lower *appLayerMeasPriority* are discarded first. If equal or no *appLayerMeasPriority* is configured, older reports are discarded first.

NOTE 2: If the SRB indicated by *ran-VisibleReportingSRB* is not available or if *ran-VisibleReportingSRB* is absent and SRB4 is not available, the UE discards RAN visible application layer measurement reports.

5.7.17 Derivation of pathloss reference for TA validation of SRS for Positioning transmission and CG-SDT in RRC_INACTIVE

Upon request from lower layer for pathloss reference derivation for TA validation for SRS for Positioning transmission or CG-SDT in RRC_INACTIVE, the UE shall:

1> acquire *SIB2*, if stored version is invalid;

1> if *nrofSS-BlocksToAverage* or *absThreshSS-BlocksConsolidation* is not present or if *absThreshSS-BlocksConsolidation* is present and the highest beam measurement quantity value is below or equal to *absThreshSS-BlocksConsolidation*:

2> derive the downlink pathloss reference RSRP for TA validation as the highest beam measurement quantity value, where each beam measurement quantity is described in TS 38.215 [24];

1> else:

2> derive the downlink pathloss reference RSRP for TA validation as the linear average of the power values of up to *nrofSS-BlocksToAverage* of the highest beam measurement quantity values above *absThreshSS-BlocksConsolidation*, where each beam measurement quantity is described in TS 38.215 [24].

NOTE: If the UE is configured with multiple SSB configurations, the downlink pathloss reference RSRP for TA validation is derived from the SSB configured by *SIB1*.

5.7.18 Void

5.7.19 Satellite switch with resynchronization

A UE capable of hard satellite switch with resynchronization in RRC_CONNECTED initiates the procedure when *SatSwitchWithReSync* and *t-Service* are included in *SIB19*.

Upon initiating the procedure, the UE shall:

1> if *t-ServiceStart* is included in *SIB19* and the UE supports soft satellite switch with resynchronization:

2> start acquiring DL synchronization with the SpCell served by the satellite indicated by *ntn-Config* in *SatSwitchWithReSync* between the time indicated by *t-ServiceStart* and the time indicated by *t-Service* for the serving cell;

1> upon the time indicated by *t-Service*:

2> stop timer T430 if running;

2> inform lower layers that UL synchronisation is lost due to satellite switch with resynchronization;

2> synchronise to the DL of the SpCell served by the satellite indicated by *ntn-Config* in *SatSwitchWithReSync*, if the UE has not previously synchronized to the DL of the SpCell;

2> start timer T430 with the timer value set to *ntn-UISyncValidityDuration* from the subframe indicated by *epochTime* in *ntn-Config* in *SatSwitchWithReSync*;

2> inform lower layers when UL synchronisation is obtained.

NOTE: UE should attempt to re-acquire *SIB19* after satellite switch with resynchronization. The exact time is left to UE implementation.

5.7.20 Actions related to Transmission of SRS for Positioning in a validity area in RRC_INACTIVE

When configured with *srs-PosRRC-InactiveValidityAreaPreConfigList*, the UE shall:

1> upon receiving *RRCRelease* message after sending the *RRCResumeRequest* message with the *resumeCause* set to *srs-PosConfigOrActivationReq*:

2> if the current camped cell is included in any *srs-PosConfigValidityArea* in the *srs-PosRRC-InactiveValidityAreaPreConfigList*:

3> apply the corresponding preconfigured SRS for positioning available in *srs-PosRRC-InactiveValidityAreaPreConfigList* and instruct lower layers to initiate SRS for Positioning transmission.

5.8 Sidelink

5.8.1 General

NR sidelink communication consists of unicast, groupcast and broadcast. For unicast, the PC5-RRC connection is a logical connection between a pair of a Source Layer-2 ID and a Destination Layer-2 ID in the AS. The PC5-RRC signalling, as specified in clause 5.8.9, can be initiated after its corresponding PC5 unicast link establishment (TS 23.287 [55]). The PC5-RRC connection and the corresponding sidelink SRBs and sidelink DRB(s) are released when the PC5 unicast link is released as indicated by upper layers.

For each PC5-RRC connection of unicast, one sidelink SRB (i.e. SL-SRB0) is used to transmit the PC5-S message(s) before the PC5-S security has been established. One sidelink SRB (i.e. SL-SRB1) is used to transmit the PC5-S messages to establish the PC5-S security. One sidelink SRB (i.e. SL-SRB2) is used to transmit the PC5-S messages after the PC5-S security has been established, which is protected. One sidelink SRB (i.e. SL-SRB3) is used to transmit the PC5-RRC signalling, which is protected and only sent after the PC5-S security has been established. One sidelink SRB (i.e. SL-SRB4) is used to transmit/receive the NR sidelink discovery messages.

For unicast of NR sidelink communication, AS security comprises of integrity protection of PC5 signalling (SL-SRB1, SL-SRB2 and SL-SRB3) and user data (SL-DRBs), and it further comprises of ciphering of PC5 signaling (SL-SRB1 only for the Direct Link Security Mode Complete message as specified in TS 24.587 [57] for V2X service or TS 24.554 [72] for Proximity-services, SL-SRB2 and SL-SRB3) and user data (SL-DRBs). The ciphering and integrity protection algorithms and parameters for a PC5 unicast link are exchanged by PC5-S messages in the upper layers as specified in TS 33.536 [60], and applied to the corresponding PC5-RRC connection in the AS. Once AS security is activated for a PC5 unicast link in the upper layers as specified in TS 33.536 [60], all messages on SL-SRB2 and SL-SRB3 and/or user data on SL-DRBs of the corresponding PC5-RRC connection are integrity protected and/or ciphered by the PDCP.

For unicast of NR sidelink communication, if the change of the key is indicated by the upper layers as specified in TS 24.587 [57] or TS 24.554 [72], UE re-establishes the PDCP entity of the SL-SRB1, SL-SRB2, SL-SRB3 and SL-DRBs on the corresponding PC5-RRC connection.

NOTE 1: In case the configurations for NR sidelink communication are acquired via the E-UTRA, the configurations for NR sidelink communication in *SIB12* and *sl-ConfigDedicatedNR* within *RRCReconfiguration* used in clause 5.8 are provided by the configurations in *SystemInformationBlockType28* and *sl-ConfigDedicatedForNR* within *RRCConnectionReconfiguration* as specified in TS 36.331 [10], respectively.

NOTE 2: In this release, there is one-to-one correspondence between the PC5-RRC connection and the PC5 unicast link as specified in TS 38.300[2].

NOTE 3: All SL-DRBs related to the same PC5-RRC connection have the same activation/deactivation setting for ciphering and the same activation/deactivation setting for integrity protection as specified in TS 33.536 [60].

NOTE 4: When integrity check failure concerning SL-SRB1 for a specific destination is detected, the UE sends an indication to the upper layers [57].

NOTE 5: The selection of NULL algorithms means that the PC5 messages are considered protected for the purposes of being allowed to be sent or received.

5.8.2 Conditions for NR sidelink communication/discovery/positioning operation

The UE shall perform NR sidelink communication/discovery/positioning operation only if the conditions defined in this clause are met:

- 1> if the UE's serving cell is suitable (RRC_IDLE or RRC_INACTIVE or RRC_CONNECTED); and if either the selected cell on the frequency used for NR sidelink communication/discovery/positioning operation belongs to the registered or equivalent PLMN as specified in TS 24.587 [57] or TS 24.554 [72] or the UE is out of coverage on the frequency used for NR sidelink communication/discovery/positioning operation as defined in TS 38.304 [20] and TS 36.304 [27]; or

1> if the UE's serving cell (RRC_IDLE or RRC_CONNECTED) fulfils the conditions to support NR sidelink communication/discovery in limited service state as specified in TS 23.287 [55]; and if either the serving cell is on the frequency used for NR sidelink communication/discovery operation or the UE is out of coverage on the frequency used for NR sidelink communication/discovery operation as defined in TS 38.304 [20] and TS 36.304 [27]; or

1> if the UE has no serving cell (RRC_IDLE).

5.8.3 Sidelink UE information for NR sidelink communication/discovery/positioning

5.8.3.1 General

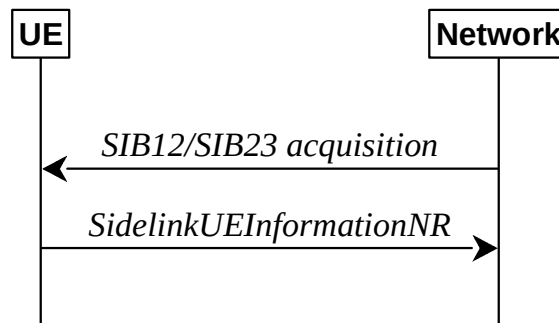 


Figure 5.8.3.1-1: Sidelink UE information for NR sidelink communication/discovery/positioning

The purpose of this procedure is to inform the network that the UE:

- is interested or no longer interested to receive or transmit NR sidelink communication/discovery/positioning,
- is requesting assignment or release of transmission resource for NR sidelink communication/discovery/positioning,
- is reporting QoS parameters and QoS profile(s) related to NR sidelink communication,
- is reporting mapped frequency(ies) for each QoS flow related to NR sidelink communication,
- is reporting associated Tx Profile for each QoS flow related to NR sidelink groupcast and broadcast communication,
- is reporting that a sidelink radio link failure, sidelink RRC reconfiguration failure or a sidelink carrier failure has been detected,
- is reporting the sidelink UE capability information of the associated peer UE for unicast communication,
- is reporting the RLC mode information of the sidelink data radio bearer(s) received from the associated peer UE for unicast communication,
- is reporting the accepted sidelink DRX configuration received from the associated peer UE for NR sidelink unicast reception,
- is reporting the sidelink DRX assistance information received from the associated peer UE for NR sidelink unicast transmission, when the UE is configured with *sl-ScheduledConfig*,
- is reporting, for NR sidelink groupcast transmission, the sidelink DRX on/off indication for the associated Destination Layer-2 ID, when the UE is configured with *sl-ScheduledConfig*,
- is reporting, for NR sidelink groupcast or broadcast reception, the Destination Layer-2 ID and QoS profile(s) associated with its interested services to which sidelink DRX is applied,
- is reporting DRX configuration reject information from its associated peer UE for NR sidelink unicast transmission, when the UE is configured with *sl-ScheduledConfig*,

- is reporting parameters related to U2N relay operation,
- is reporting parameters related to U2U relay operation.

5.8.3.2 Initiation

A UE capable of NR sidelink communication or NR sidelink discovery or NR sidelink U2N relay operation or NR sidelink U2U relay operation or NR sidelink positioning that is in RRC_CONNECTED may initiate the procedure to indicate it is (interested in) receiving or transmitting NR sidelink communication or NR sidelink discovery or NR sidelink U2N relay operation or NR sidelink U2U relay operation or SL-PRS transmission/reception in several cases including upon successful connection establishment or resuming, upon change of interest, upon changing QoS profile(s), upon receiving *UECapabilityInformationSidelink* from the associated peer UE, upon RLC mode information updated from the associated peer UE or upon change to a PCell providing *SIB12* including *sl-ConfigCommonNR*, or upon change to a PCell providing *SIB23* including *sl-PosConfigCommonNR*. A UE capable of NR sidelink communication may initiate the procedure to request assignment of dedicated sidelink DRB configuration and transmission resources for NR sidelink communication transmission. A UE capable of NR sidelink communication may initiate the procedure to report to the network that a sidelink radio link failure, sidelink RRC reconfiguration failure or sidelink carrier failure has been declared. A UE capable of NR sidelink discovery may initiate the procedure to request assignment of dedicated resources for NR sidelink discovery transmission or NR sidelink discovery reception. A UE capable of U2N relay operation may initiate the procedure to report/update parameters for acting as U2N Relay UE or U2N Remote UE (including L2 U2N Remote UE's source L2 ID). A UE capable of U2U relay operation may initiate the procedure to report/update parameters for acting as U2U Relay UE or U2U Remote UE. A UE capable of NR sidelink positioning may initiate the procedure to request it is interested or no longer interested in either transmitting SL-PRS or receiving SL-PRS.

A UE capable of NR sidelink operation that is in RRC_CONNECTED may initiate the procedure to report the sidelink DRX configuration received from the associated peer UE for NR sidelink unicast reception, upon accepting the sidelink DRX configuration from the associated peer UE. A UE capable of NR sidelink communication that is configured with *sl-ScheduledConfig* and is performing sidelink unicast transmission may initiate the procedure to report the sidelink DRX assistance information or the sidelink DRX configuration reject information received from the associated peer UE, upon receiving either of them from the associated peer UE. A UE capable of NR sidelink communication that is configured with *sl-ScheduledConfig* and is performing sidelink groupcast transmission may initiate the procedure to report the sidelink DRX on/off indication for the associated Destination Layer-2 ID. A UE capable of NR sidelink communication that is in RRC_CONNECTED may initiate the procedure to report the frequency(ies) and Tx Profile associated with each QoS flow for NR sidelink groupcast or broadcast transmission. A UE capable of NR sidelink communication that is in RRC_CONNECTED may initiate the procedure to report the frequency(ies) associated with each QoS flow for NR sidelink unicast transmission.

A UE capable of NR sidelink operation that is in RRC_CONNECTED may initiate the procedure to report the Destination Layer-2 ID and QoS profile(s) associated with its interested service(s) that sidelink DRX is applied, for NR sidelink groupcast or broadcast reception.

Upon initiating this procedure, the UE shall:

- 1> if *SIB12* including *sl-ConfigCommonNR* is provided by the PCell:
 - 2> ensure having a valid version of *SIB12* for the PCell;
- 2> if configured by upper layers to receive NR sidelink communication on the frequency included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* in *SIB12* of the PCell:
 - 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-ConfigCommonNR*; or
 - 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-RxInterestedFreqList*; or if the frequency configured by upper layers to receive NR sidelink communication on has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink communication reception frequency of interest in accordance with 5.8.3.3;

- 2> else:
 - 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-RxInterestedFreqList*:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it is no longer interested in NR sidelink communication reception in accordance with 5.8.3.3;
 - 2> if configured by upper layers to transmit non-relay NR sidelink communication on the frequency included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* in *SIB12* of the PCell; or
 - 2> if configured by upper layer to transmit NR sidelink L3 U2U relay communication on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L3-U2U-RelayDiscovery*:
 - 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-ConfigCommonNR*; or
 - 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-TxResourceReqList*; or if the information carried by the *sl-TxResourceReqList* has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink communication transmission resources required by the UE in accordance with 5.8.3.3;
- 2> else:
 - 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-TxResourceReqList*:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it no longer requires NR sidelink communication transmission resources in accordance with 5.8.3.3;
 - 2> if configured by upper layer to receive NR sidelink non-relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-NonRelayDiscovery*:
 - 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-ConfigCommonNR* or connected to a PCell providing *SIB12* but not including *sl-NonRelayDiscovery*; or
 - 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-RxInterestedFreqListDisc*; or if the frequency configured by upper layers to receive NR sidelink non-relay discovery messages on has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink non-relay discovery reception frequency of interest in accordance with 5.8.3.3;
- 2> else:
 - 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-RxInterestedFreqListDisc*:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it is no longer interested in NR sidelink non-relay discovery messages reception in accordance with 5.8.3.3;
 - 2> if configured by upper layer to receive NR sidelink L2 U2N relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L2U2N-Relay*; or if configured by upper layer to receive NR sidelink L3 U2N relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L3U2N-RelayDiscovery*; or
 - 2> if configured by upper layer to receive NR sidelink L2 U2U relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L2-U2U-Relay*; or

- 2> if configured by upper layer to receive NR sidelink L3 U2U relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L3-U2U-RelayDiscovery*:
 - 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-ConfigCommonNR*; or connected to a PCell providing *SIB12* but not including *sl-L2U2N-Relay* in case of L2 U2N relay operation; or connected to a PCell providing *SIB12* but not including *sl-L3U2N-RelayDiscovery* in case of L3 U2N relay operation; or
 - 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell providing *SIB12* but not including *sl-L2-U2U-Relay* in case of L2 U2U relay operation; or
 - 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell providing *SIB12* but not including *sl-L3-U2U-RelayDiscovery* in case of L3 U2U relay operation; or
 - 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-RxInterestedFreqListDisc*; or if the frequency configured by upper layers to receive NR sidelink relay discovery messages on has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 4> if the UE is capable of U2N Relay UE, and if *SIB12* includes *sl-RelayUE-ConfigCommon*; or
 - 4> if the UE is selecting a U2N Relay UE / has a selected U2N Relay UE, and if *SIB12* includes *sl-RemoteUE-ConfigCommon*; or
 - 4> if the UE is capable of U2U Relay UE, and if *SIB12* includes *sl-RelayUE-ConfigCommonU2U*; or
 - 4> if the UE is selecting a U2U Relay UE / has a selected U2U Relay UE, and if *SIB12* includes *sl-RemoteUE-ConfigCommonU2U*:
 - 5> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink relay discovery reception frequency of interest in accordance with 5.8.3.3;
- 2> else:
 - 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-RxInterestedFreqListDisc*:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it is no longer interested in NR sidelink relay discovery messages reception in accordance with 5.8.3.3;
- 2> if configured by upper layer to transmit NR sidelink non-relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-NonRelayDiscovery*:
 - 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-ConfigCommonNR* or connected to a PCell providing *SIB12* but not including *sl-NonRelayDiscovery*; or
 - 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-TxResourceReqListDisc*; or if the information carried by the *sl-TxResourceReqListDisc* has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink non-relay discovery messages resources required by the UE in accordance with 5.8.3.3;
- 2> else:
 - 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-TxResourceReqListDisc*:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it no longer requires NR sidelink non-relay discovery messages resources in accordance with 5.8.3.3;

- 2> if configured by upper layer to transmit NR sidelink L2 U2N relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L2U2N-Relay*; or if configured by upper layer to transmit NR sidelink L3 U2N relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L3U2N-RelayDiscovery*; or
- 2> if configured by upper layer to transmit NR sidelink L2 U2U relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L2-U2U-Relay*; or
- 2> if configured by upper layer to transmit NR sidelink L3 U2U relay discovery messages on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L3-U2U-RelayDiscovery*;
- 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
- 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-ConfigCommonNR*; or connected to a PCell providing *SIB12* but not including *sl-L2U2N-Relay* in case of L2 U2N relay operation; or connected to a PCell providing *SIB12* but not including *sl-L3U2N-RelayDiscovery* in case of L3 U2N relay operation; or
- 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell providing *SIB12* but not including *sl-L2-U2U-Relay* in case of L2 U2U relay operation;
- 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell providing *SIB12* but not including *sl-L3-U2U-RelayDiscovery* in case of L3 U2U relay operation; or
- 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-TxResourceReqListDisc*; or if the information carried by the *sl-TxResourceReqListDisc* has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 4> if the UE is capable of U2N Relay UE, and if *SIB12* includes *sl-RelayUE-ConfigCommon*, and if the U2N Relay UE threshold conditions as specified in 5.8.14.2 are met; or
 - 4> if the UE is selecting a U2N Relay UE / has a selected U2N Relay UE/ configured with measurement object associated to L2 U2N Relay UEs, and if *SIB12* includes *sl-RemoteUE-ConfigCommon*, and if the U2N Remote UE threshold conditions as specified in 5.8.15.2 are met; or
 - 4> if the UE is capable of U2U Relay UE, and if *SIB12* includes *sl-RelayUE-ConfigCommonU2U*, and if the U2U Relay UE threshold conditions as specified in 5.8.16.2 are met; or
 - 4> if the UE is selecting a U2U Relay UE / has a selected U2U Relay UE, and if *SIB12* includes *sl-RemoteUE-ConfigCommonU2U*, and if the U2U Remote UE threshold conditions as specified in 5.8.17.2 are met;
- 5> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink relay discovery messages resources required by the UE in accordance with 5.8.3.3;
- 2> else:
 - 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-TxResourceReqListDisc*:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it no longer requires NR sidelink relay discovery messages resources in accordance with 5.8.3.3;
- 2> if configured by upper layer to transmit NR sidelink L2 U2N relay communication on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L2U2N-Relay*; or if configured by upper layer to transmit NR sidelink L3 U2N relay communication on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L3U2N-RelayDiscovery*; or
- 2> if configured by upper layer to transmit NR sidelink L2 U2U relay communication on the frequency included in *sl-FreqInfoList* in *SIB12* of the PCell including *sl-L2-U2U-Relay*;
- 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or

- 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-ConfigCommonNR*; or connected to a PCell providing *SIB12* but not including *sl-L2U2N-Relay* in case of L2 U2N relay operation; or connected to a PCell providing *SIB12* but not including *sl-L3U2N-RelayDiscovery* in case of L3 U2N relay operation; or
- 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell providing *SIB12* but not including *sl-L2-U2U-Relay* in case of L2 U2U relay operation; or
- 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-TxResourceReqL2U2N-Relay*; or if the information carried by the *sl-TxResourceReqL2U2N-Relay* has changed since the last transmission of the *SidelinkUEInformationNR* message; or if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-TxResourceReqL3U2N-Relay*; or if the information carried by the *sl-TxResourceReqL3U2N-Relay* has changed since the last transmission of the *SidelinkUEInformationNR* message; or
- 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-TxResourceReqL2-U2U*; or if the information carried by the *sl-TxResourceReqL2-U2U* has changed since the last transmission of the *SidelinkUEInformationNR* message; or
- 3> if configured by upper layers not to transmit either NR sidelink L2 U2N relay communication or NR sidelink L3 U2N relay communication, and if the last transmission of the *SidelinkUEInformationNR* message includes both *sl-TxResourceReqL2U2N-Relay* and *sl-TxResourceReqL3U2N-Relay*:
 - 4> if the UE is capable of U2N Relay UE; or
 - 4> if the UE is selecting a U2N Relay UE / has a selected U2N Relay UE; or
 - 4> if the UE is capable of L2 U2U Relay UE; or
 - 4> if the UE is selecting a L2 U2U Relay UE / has a selected L2 U2U Relay UE:
 - 5> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink relay communication transmission resources required by the UE in accordance with 5.8.3.3;
- 2> else:
 - 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-TxResourceReqL2U2N-Relay* or *sl-TxResourceReqL3U2N-Relay* or *sl-TxResourceReqL2-U2U*:
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it no longer requires NR sidelink relay communication transmission resources in accordance with 5.8.3.3;
 - 2> if configured by upper layers to perform NR sidelink reception on the frequency included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* in *SIB12* of the PCell and if *sl-DRX-ConfigCommonGC-BC* is included in *SIB12-IEs*:
 - 3> if the UE received a sidelink DRX configuration in the *RRCReconfigurationSidelink* message for NR sidelink unicast reception from the associated peer UE and the UE accepted the sidelink DRX configuration:
 - 4> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering *RRC_CONNECTED* state; or
 - 4> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB12* including *sl-DRX-ConfigCommonGC-BC*; or
 - 4> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-RxDRX-ReportList*; or if the information carried by *sl-RxDRX-ReportList* has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 5> initiate transmission of the *SidelinkUEInformationNR* message to report the sidelink DRX configuration in accordance with 5.8.3.3;
 - 3> else:
 - 4> if the last transmission of the *SidelinkUEInformationNR* message included *sl-RxDRX-ReportList*:

- 5> initiate transmission of the *SidelinkUEInformationNR* message to indicate the sidelink DRX configuration is no longer used in accordance with 5.8.3.3;
- 3> if the UE is performing NR sidelink groupcast or broadcast reception and is interested in a service that sidelink DRX is applied:
 - 4> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 4> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing SIB12 including *sl-DRX-ConfigCommonGC-BC*; or
 - 4> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-RxInterestedGC-BC-DestList*; or if the information carried by *sl-RxInterestedGC-BC-DestList* has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 5> initiate transmission of the *SidelinkUEInformationNR* message to report the Destination Layer-2 ID and QoS profile(s) associated with the service(s) in accordance with 5.8.3.3;
- 3> else:
 - 4> if the last transmission of the *SidelinkUEInformationNR* message included *sl-RxInterestedGC-BC-DestList*:
 - 5> initiate transmission of the *SidelinkUEInformationNR* message to indicate it is no longer interested in the service that sidelink DRX is applied in accordance with 5.8.3.3;
- 2> if configured by upper layers to perform NR sidelink transmission on the frequency included in *sl-FreqInfoList* in SIB12 of the PCell and if *sl-DRX-ConfigCommonGC-BC* is included in SIB12-IEs and if the UE is configured with *sl-ScheduledConfig*:
- 3> if the UE received a sidelink DRX assistance information or a sidelink DRX configuration reject information from the associated peer UE for NR sidelink unicast transmission:
 - 4> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 4> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing SIB12 including *sl-DRX-ConfigCommonGC-BC*; or
 - 4> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-DRX-InfoFromRxList*, or *sl-FailureList*; or if the information carried by *sl-DRX-InfoFromRxList*, or *sl-FailureList* has changed since the last transmission of the *SidelinkUEInformationNR* message:
 - 5> initiate transmission of the *SidelinkUEInformationNR* message to report the sidelink DRX assistance information or the sidelink DRX configuration reject information in accordance with 5.8.3.3;

NOTE: After including the SL-DRX reject information in *sl-FailureList* in the last transmission of the *SidelinkUEInformationNR* message, it is up to UE implementation to consider another sidelink DRX rejection of a new SL DRX configuration from the same associated peer UE as "change" of *sl-FailureList*.

- 3> if the UE is performing NR sidelink groupcast transmission:
 - 4> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
 - 4> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing SIB12 including *sl-DRX-ConfigCommonGC-BC*; or
 - 4> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-DRX-Indication*; or if the information carried by *sl-DRX-Indication* has changed since the last transmission of the *SidelinkUEInformationNR* message:

- 5> initiate transmission of the *SidelinkUEInformationNR* message to report sidelink DRX on/off indication for the corresponding destination in accordance with 5.8.3.3;
- 1> if *SIB23* including *sl-PosConfigCommonNR* is provided by the PCell:
- 2> ensure having a valid version of *SIB23* for the PCell;
- 2> if configured to perform SL-PRS measurement on the frequency included in *sl-PosFreqInfoList* in *SIB23* of the PCell:
- 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
- 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB23* including *sl-PosConfigCommonNR*; or
- 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-PosRxInterestedFreqList*; or if the frequency configured to receive SL-PRS has changed since the last transmission of the *SidelinkUEInformationNR* message:
- 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate the frequency of interest for SL-PRS reception in accordance with 5.8.3.3;
- 2> else:
- 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-PosRxInterestedFreqList*:
- 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it is no longer interested in SL-PRS reception in accordance with 5.8.3.3;
- 2> if configured to transmit SL-PRS on the frequency included in *sl-PosFreqInfoList* in *SIB23* of the PCell:
- 3> if the UE did not transmit a *SidelinkUEInformationNR* message since last entering RRC_CONNECTED state; or
- 3> if since the last time the UE transmitted a *SidelinkUEInformationNR* message the UE connected to a PCell not providing *SIB23* including *sl-PosConfigCommonNR*; or
- 3> if the last transmission of the *SidelinkUEInformationNR* message did not include *sl-PosTxResourceReqList*; or if the information carried by the *sl-PosTxResourceReqList* has changed since the last transmission of the *SidelinkUEInformationNR* message:
- 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate the NR sidelink positioning transmission resources required by the UE in accordance with 5.8.3.3;
- 2> else:
- 3> if the last transmission of the *SidelinkUEInformationNR* message included *sl-PosTxResourceReqList*:
- 4> initiate transmission of the *SidelinkUEInformationNR* message to indicate it no longer requires NR sidelink positioning transmission resources in accordance with 5.8.3.3;

5.8.3.3 Actions related to transmission of *SidelinkUEInformationNR* message

The UE shall set the contents of the *SidelinkUEInformationNR* message as follows and shall include all concerned information, irrespective of what triggered the procedure:

- 1> if the UE initiates the procedure to indicate it is (no more) interested to receive NR sidelink communication/positioning; or
- 1> if the UE initiates the procedure to request (configuration/ release) of NR sidelink communication/positioning transmission resources or to report to the network that a sidelink radio link failure, sidelink RRC reconfiguration failure or sidelink carrier failure has been declared; or
- 1> if the UE initiates the procedure to report to the network the sidelink DRX configuration for NR sidelink unicast reception; or

- 1> if the UE initiates the procedure to report to the network the sidelink DRX assistance information or the sidelink DRX configuration reject information for NR sidelink unicast transmission; or
- 1> if the UE initiates the procedure to report to the network the Destination Layer-2 ID and QoS profile(s) associated with its interested service(s) that sidelink DRX is applied for NR sidelink groupcast or broadcast reception; or
- 1> if the UE initiates the procedure to report to the network the Destination Layer-2 ID and the sidelink DRX on/off indication for the corresponding destination for NR sidelink groupcast transmission; or
- 1> if the UE initiates the procedure to indicate it is (no more) interested to receive NR sidelink discovery messages; or
- 1> if the UE initiates the procedure to request (configuration/ release) of NR sidelink discovery messages transmission resources; or
- 1> if the UE initiates the procedure to request (configuration/ release) of NR sidelink U2N or U2U relay communication transmission resources or report other parameters related to U2N or U2U relay operation:
- 2> if *SIB12* including *sl-ConfigCommonNR* is provided by the PCell:
 - 3> if configured by upper layers to receive NR sidelink communication:
 - 4> include *sl-RxInterestedFreqList* and set it to the frequency for NR sidelink communication reception;
 - 3> if configured by upper layers to transmit non-relay NR sidelink communication and/or to transmit NR sidelink relay communication; or
 - 3> if configured by upper layers to transmit NR sidelink L3 U2U relay communication and *SIB12* includes *sl-L3-U2U-RelayDiscovery*:
 - 4> include *sl-TxResourceReqList* and set its fields (if needed) as follows for each destination for which it requests network to assign NR sidelink communication resource:
 - 5> set *sl-DestinationIdentity* to the destination identity configured by upper layer for NR sidelink communication transmission;
 - 5> set *sl-CastType* to the cast type of the associated destination identity configured by the upper layer for the NR sidelink communication transmission;
 - 5> set *sl-RLC-ModeIndicationList* to include the RLC mode(s) and optionally QoS profile(s) of the sidelink QoS flow(s) of the associated RLC mode(s), if the associated bi-directional sidelink DRB(s) have been established due to the configuration by *RRCReconfigurationSidelink*;
 - 5> set *sl-QoS-InfoList* to include QoS profile(s) of the sidelink QoS flow(s) of the associated destination configured by the upper layer for the NR sidelink communication transmission;
 - 5> set *sl-TxInterestedFreqList* to indicate the frequency of the associated destination for NR sidelink communication transmission;
 - 5> set *sl-TypeTxSyncList* to the current synchronization reference type used on the associated *sl-TxInterestedFreqList* for NR sidelink communication transmission;
 - 5> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message, if any, received from the associated peer UE;
 - 5> if *sl-FreqInfoListSizeExt* is included in *SIB12-IEs*:
 - 6> set *sl-QoS-InfoList* to include the frequency(ies), and Tx Profile, if any, mapped to the sidelink QoS flow(s) of the associated destination configured by the upper layer for the NR sidelink groupcast and broadcast communication transmission;
 - 4> if a sidelink radio link failure or a sidelink RRC reconfiguration failure has been declared, according to clauses 5.8.9.3 and 5.8.9.1.8, respectively;

- 5> include *sl-FailureList* and set its fields as follows for each destination for which it reports the NR sidelink communication failure:
 - 6> set *sl-DestinationIdentity* to the destination identity configured by upper layer for NR sidelink communication transmission;
 - 6> if the sidelink RLF is detected as specified in clause 5.8.9.3:
 - 7> set *sl-Failure* as *rlf* for the associated destination for the NR sidelink communication transmission;
 - 6> else if *RRCReconfigurationFailureSidelink* is received:
 - 7> set *sl-Failure* as *configFailure* for the associated destination for the NR sidelink communication transmission;
- 4> if a sidelink carrier failure has been indicated by MAC layer;
 - 5> include *sl-CarrierFailureList* and set its fields as follows for each destination for which it reports the sidelink carrier failure:
 - 6> set *sl-DestinationIdentity* to the destination identity for which the concerned sidelink carrier failure is indicated;
 - 6> set *sl-CarrierFailure* to include the concerned carrier for which the sidelink carrier failure is indicated;
- 3> if *SIB12* includes *sl-NonRelayDiscovery* and if configured by upper layers to receive NR sidelink non-relay discovery messages, or if *SIB12* includes *sl-L2U2N-Relay* and if configured by upper layers to receive NR sidelink L2 U2N relay discovery messages, or if *SIB12* includes *sl-L3U2N-RelayDiscovery* and if configured by upper layers to receive NR sidelink L3 U2N relay discovery messages; or
- 3> if *SIB12* includes *sl-L2-U2U-Relay* and if configured by upper layers to receive NR sidelink L2 U2U relay discovery messages; or
- 3> if *SIB12* includes *sl-L3-U2U-RelayDiscovery* and if configured by upper layers to receive NR sidelink L3 U2U relay discovery messages:
 - 4> include *sl-RxInterestedFreqListDisc* and set it to the frequency for NR sidelink discovery messages reception;
- 3> if *SIB12* includes *sl-L2U2N-Relay* and the UE is capable of L2 U2N remote UE:
 - 4> include *sl-SourceIdentityRemoteUE* and set it to the source identity configured by upper layer for NR sidelink L2 U2N relay communication transmission;
- 3> if *SIB12* includes *sl-NonRelayDiscovery* and if configured by upper layers to transmit NR sidelink non-relay discovery messages, or if *SIB12* includes *sl-L2U2N-Relay* and if configured by upper layers to transmit NR sidelink L2 U2N relay discovery messages, or if *SIB12* includes *sl-L3U2N-RelayDiscovery* and if configured by upper layers to transmit NR sidelink L3 U2N relay discovery messages; or
- 3> if *SIB12* includes *sl-L2-U2U-Relay* and if configured by upper layers to transmit NR sidelink L2 U2U relay discovery messages; or
- 3> if *SIB12* includes *sl-L3-U2U-RelayDiscovery* and if configured by upper layers to transmit NR sidelink L3 U2U relay discovery messages:
 - 4> include *sl-TxResourceReqListDisc* and set its fields (if needed) as follows for each destination for which it requests network to assign NR sidelink discovery messages resource:
 - 5> set *sl-DestinationIdentityDisc* to the destination identity configured by upper layer for NR sidelink discovery messages transmission;
 - 5> if the UE is acting as L2 U2N Relay UE:

- 6> set *sl-SourceIdentityRelayUE* to the source identity configured by upper layer for NR sidelink L2 U2N relay discovery messages transmission;
- 5> set *sl-CastTypeDisc* to the cast type of the associated destination identity for the NR sidelink discovery messages transmission;
- 5> set *sl-TxInterestedFreqListDisc* to indicate the frequency of the associated destination for NR sidelink discovery messages transmission;
- 5> set *sl-TypeTxSyncListDisc* to the current synchronization reference type used on the associated *sl-TxInterestedFreqListDisc* for NR sidelink discovery messages transmission;
- 5> set *sl-DiscoveryType* to the current discovery type of the associated destination identity configured by the upper layer for NR sidelink discovery messages transmission;
- 5> if the UE is acting as L2/L3 U2U Relay UE:
 - 6> include *ue-TypeU2U* and set it to *relayUE*;
- 5> if the UE is acting as L2/L3 U2U Remote UE:
 - 6> include *ue-TypeU2U* and set it to *remoteUE*;
- 3> if *SIB12* includes *sl-L2U2N-Relay* and if configured by upper layers to transmit NR sidelink L2 U2N relay communication and the UE is acting as L2 U2N Relay UE:
 - 4> include *sl-TxResourceReqL2U2N-Relay* in *sl-TxResourceReqListCommRelay* and set its fields (if needed) as follows for each destination for which it requests network to assign NR sidelink L2 U2N relay communication resource:
 - 5> set *sl-DestinationIdentityL2U2N* to the destination identity configured by upper layer for NR sidelink L2 U2N relay communication transmission;
 - 5> set *sl-TxInterestedFreqListL2U2N* to indicate the frequency of the associated destination for NR sidelink L2 U2N relay communication transmission;
 - 5> set *sl-TypeTxSyncListL2U2N* to the current synchronization reference type used on the associated *sl-TxInterestedFreqListL2U2N* for NR sidelink L2 U2N relay communication transmission;
 - 5> set *sl-LocalID-Request* to request local ID for L2 U2N Remote UE transiting to RRC_CONNECTED or in RRC_CONNECTED state;
 - 5> set *sl-PagingIdentityRemoteUE* to the paging UE ID received from peer L2 U2N Remote UE, if it is not released as in 5.8.9.8.3;
 - 5> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message, if any, received from peer UE;
 - 4> include *ue-Type* and set it to *relayUE*;
- 3> if *SIB12* includes *sl-L2U2N-Relay* and if configured by upper layers to transmit NR sidelink L2 U2N relay communication and the UE has a selected L2 U2N Relay UE:
 - 4> include *sl-TxResourceReqL2U2N-Relay* in *sl-TxResourceReqListCommRelay* and set its fields (if needed) as follows to request network to assign NR sidelink L2 U2N relay communication resource:
 - 5> set *sl-TxInterestedFreqListL2U2N* to indicate the frequency of the associated destination for NR sidelink L2 U2N relay communication transmission;
 - 5> set *sl-TypeTxSyncListL2U2N* to the current synchronization reference type used on the associated *sl-TxInterestedFreqListL2U2N* for NR sidelink L2 U2N relay communication transmission;
 - 5> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message, if any, received from peer UE;
 - 4> include *ue-Type* and set it to *remoteUE*;

- 3> if *SIB12* includes *sl-L3U2N-RelayDiscovery* and if configured by upper layers to transmit NR sidelink L3 U2N relay communication:
 - 4> include *sl-TxResourceReqL3U2N-Relay* in *sl-TxResourceReqListCommRelay* and set its fields (if needed) as follows for each destination for which it requests network to assign NR sidelink L3 U2N relay communication resource:
 - 5> set *sl-DestinationIdentity* to the destination identity configured by upper layer for NR sidelink L3 U2N relay communication transmission;
 - 5> set *sl-CastType* to the cast type of the associated destination identity configured by the upper layer for the NR sidelink L3 U2N relay communication transmission;
 - 5> set *sl-RLC-ModeIndicationList* to include the RLC mode(s) and optionally QoS profile(s) of the sidelink QoS flow(s) of the associated RLC mode(s), if the associated bi-directional sidelink DRB(s) have been established due to the configuration by *RRCReconfigurationSidelink*;
 - 5> set *sl-QoS-InfoList* to include QoS profile(s) of the sidelink QoS flow(s) of the associated destination configured by the upper layer for the NR sidelink L3 U2N relay communication transmission;
 - 5> set *sl-TxInterestedFreqList* to indicate the frequency of the associated destination for NR sidelink L3 U2N relay communication transmission;
 - 5> set *sl-TypeTxSyncList* to the current synchronization reference type used on the associated *sl-TxInterestedFreqList* for NR sidelink L3 U2N relay communication transmission;
 - 5> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message, if any, received from peer UE;
 - 4> include *ue-Type* and set it to *relayUE* if the UE is acting as NR sidelink L3 U2N Relay UE or to *remoteUE* otherwise;
- 3> if *SIB12* includes *sl-L2-U2U-Relay* and if configured by upper layers to transmit NR sidelink L2 U2U relay communication and the UE is acting as L2 U2U Relay UE:
 - 4> include *sl-TxResourceReqL2-U2U* and set its fields (if needed) as follows for each destination for which it requests network to assign NR sidelink L2 U2U relay communication resource:
 - 5> set *sl-DestinationIdentityL2-U2U* to the destination identity configured by upper layer for NR sidelink L2 U2U relay communication transmission to the target L2 U2U Remote UE;
 - 5> set *sl-TxInterestedFreqListL2-U2U* to indicate the frequency of the associated destination for NR sidelink L2 U2U relay communication transmission;
 - 5> set *sl-TypeTxSyncListL2-U2U* to the current synchronization reference type used on the associated *sl-InterestedFreqListL2-U2U* for NR sidelink L2 U2U relay communication transmission;
 - 5> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message, if any, received from the target L2 U2U Remote UE;
 - 5> include *sl-U2U-InfoList* and set its fields (if needed) for each entry as follows, to report the related information of the connected L2 U2U Remote UEs:
 - 6> include the source L2 U2U Remote UE's L2 ID in *sl-SourceUE-Identity*;
 - 6> include *sl-PerSLRB-QoS-InfoList*, with each entry including the per-SLRB second-hop QoS profile and the corresponding *sl-RemoteUE-SLRB-Identity* which is set to the same value as the *sl-E2E-SLRB-Index* received in *UEInformationRequestSidelink* message from the L2 U2U Remote UE for the same end-to-end SLRB;
 - 5> set *sl-RLC-ModeIndicationListL2-U2U* to include the RLC mode(s), if the associated bi-directional PC5 Relay RLC channel(s) has been established due to the configuration by *RRCReconfigurationSidelink*;

- 3> if *SIB12* includes *sl-L2-U2U-Relay* and if configured by upper layers to transmit NR sidelink L2 U2U relay communication and the UE has a selected L2 U2U Relay UE:
 - 4> include *sl-TxResourceReqL2-U2U* and set its fields (if needed) as follows to request network to assign NR sidelink L2 U2U relay communication resource:
 - 5> set *sl-DestinationIdentityL2-U2U* to the destination identity configured by upper layer for NR sidelink L2 U2U relay communication transmission to L2 U2U Relay UE;
 - 5> set *sl-TxInterestedFreqListL2-U2U* to indicate the frequency of the associated destination for NR sidelink L2 U2U relay communication transmission;
 - 5> set *sl-TypeTxSyncListL2-U2U* to the current synchronization reference type used on the associated *sl-InterestedFreqListL2-U2U* for NR sidelink L2 U2U relay communication transmission;
 - 5> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message received from L2 U2U Relay UE, if any;
 - 5> include *sl-U2U-InfoList* and set its fields (if needed) for each entry as follows to report the related end-to-end and the first hop information for the end-to-end PC5 connection with each target L2 U2U Remote UE:
 - 6> set *sl-TargetUE-Identity* to the destination identity configured by upper layer for NR sidelink L2 U2U relay communication transmission to the target L2 U2U Remote UE;
 - 6> set *sl-E2E-QoS-InfoList* to include end-to-end QoS profile(s) of the sidelink QoS flow(s) of the associated destination configured by the upper layer for the NR sidelink L2 U2U relay communication transmission to the target L2 U2U Remote UE;
 - 6> set *sl-PerHop-QoS-InfoList* to include the first-hop split PDB of the sidelink QoS flow(s) received from the *sl-SplitQoS-InfoListPC5* in *UEInformationResponseSidelink* message for the associated destination in accordance with the received *sl-TargetUE-Identity*;
 - 6> set *sl-CapabilityInformationTargetRemoteUE* to include the related UE capability information received from the target L2 U2U Remote UE, if any;
- 3> if *sl-DRX-ConfigCommonGC-BC* is included in *SIB12-IEs*:
 - 4> if configured by upper layers to perform NR sidelink reception:
 - 5> include *sl-RxDRX-ReportList* and set its fields (if needed) as follows for each destination for which it reports to network:
 - 6> set *sl-DRX-ConfigFromTx* to include the accepted sidelink DRX configuration of the associated destination for NR sidelink unicast communication, if received from the associated peer UE;
 - 5> include *sl-RxInterestedGC-BC-DestList* and set its fields (if needed) as follows for each Destination Layer-2 ID for which it reports to network:
 - 6> set *sl-RxInterestedQoS-InfoList* to include the QoS profile of its interested service(s) that sidelink DRX is applied for the associated destination for NR sidelink groupcast or broadcast reception;

NOTE 1: It is up to UE implementation to set the QoS profile in *sl-RxInterestedQoS-InfoList* for reception of NR sidelink discovery message or ProSe Direct Link Establishment Request message as described in TS 24.554 [72], or for reception of Direct Link Establishment Request message as described in TS 24.587 [57].

- 6> set *sl-DestinationIdentity* to the associated destination identity configured by upper layer for NR sidelink groupcast or broadcast reception;
 - 4> if configured by upper layers to perform NR sidelink transmission and configured with *sl-ScheduledConfig*:

- 5> include *sl-TxResourceReqList* and/or *sl-TxResourceReqListCommRelay* and/or *sl-FailureList* and set its fields (if needed) as follows for each destination for which it reports to network:
 - 6> set *sl-DRX-InfoFromRxList* to include the sidelink DRX assistance information of the associated destination, if any, received from the associated peer UE;
 - 6> if the *RRCReconfigurationCompleteSidelink* message includes the *sl-DRX-ConfigReject*:
 - 7> set *sl-Failure* as *drxReject-v1710* for the associated destination for the NR sidelink communication transmission;
 - 6> set *sl-DRX-Indication* to include the sidelink DRX on/off indication for the associated destination for NR sidelink groupcast transmission;
- 3> if *SIB12* includes *sl-PRS-ResourcesSharedSL-PRS-RP*:
 - 4> if configured to perform SL-PRS measurements:
 - 5> include *sl-PosRxInterestedFreqList2* and set it to the frequency configured with *sl-PRS-ResourcesSharedSL-PRS-RP* for SL-PRS reception;
 - 4> if configured to transmit SL-PRS:
 - 5> include *sl-PosTxResourceReqList* and set its fields (if needed) as follows for each destination for which it requests network to assign SL-PRS resource:
 - 6> set *sl-PosDestinationIdentity* to the destination identity configured by upper layer for SL-PRS transmission;
 - 6> set *sl-PosCastType* to the cast type of the associated destination identity configured by the upper layer for SL-PRS transmission;
 - 6> set *sl-PosTxInterestedFreqList2* to indicate the frequency configured with *sl-PRS-ResourcesSharedSL-PRS-RP* of the associated destination for SL-PRS transmission;
 - 6> set *sl-PosTypeTxSyncList* to the current synchronization reference type used on the associated *sl-PosRxInterestedFreqList* for SL-PRS transmission;
 - 6> set *sl-PosQoS-InfoList* to include the SL-PRS transmission QoS profile;
 - 5> include *sl-TxResourceReqList* and set its fields (if needed) as follows for each destination for which it requests network to assign SL-PRS resource:
 - 6> set *sl-PosDestinationIdentity* to the destination identity configured by upper layer for NR sidelink positioning transmission;
 - 6> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message, if any, received from the associated peer UE;
- 2> if *SIB23* including *sl-PosConfigCommonNR* is provided by the PCell;
- 3> if configured to transmit SL-PRS:
 - 4> include *sl-PosTxResourceReqList* and set its fields (if needed) as follows for each destination for which it requests network to assign SL-PRS resource:
 - 5> set *sl-PosDestinationIdentity* to the destination identity configured by upper layer for SL-PRS transmission;
 - 5> set *sl-PosCastType* to the cast type of the associated destination identity configured by the upper layer for the SL-PRS transmission;
 - 5> set *sl-PosTxInterestedFreqList* to indicate the frequency of the associated destination for SL-PRS transmission;
 - 5> set *sl-PosTypeTxSyncList* to the current synchronization reference type used on the associated *sl-PosRxInterestedFreqList* for SL-PRS transmission;

- 5> set *sl-PosQoS-InfoList* to include the SL-PRS transmission QoS profile;
- 5> set *sl-CapabilityInformationSidelink* to include *UECapabilityInformationSidelink* message, if any, received from the associated peer UE;
- 3> if configured to perform SL-PRS measurements;
 - 4> include *sl-PosRxInterestedFreqList* and set it to the frequency for SL-PRS reception;
- 1> if the UE initiates the procedure while connected to an E-UTRA PCell:
 - 2> submit the *SidelinkUEInformationNR* to lower layers via SRB1, embedded in E-UTRA RRC message *ULInformationTransferIRAT* as specified in TS 36.331 [10], clause 5.6.28;
- 1> else:
 - 2> submit the *SidelinkUEInformationNR* message to lower layers for transmission.

NOTE 2: When multiple lists are reported in *SidelinkUEInformationNR*, a UE can report up to *maxNrofSL-Dest-r16* SL destinations in *sl-TxResourceReqList*, *sl-TxResourceReqListDisc* and *sl-TxResourceReqListCommRelay* in total.

5.8.4 Void

5.8.5 Sidelink synchronisation information transmission for NR sidelink communication/discovery/positioning

5.8.5.1 General

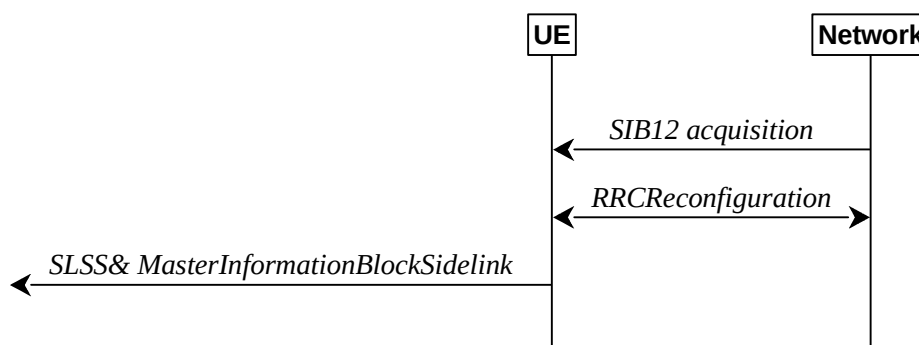 


Figure 5.8.5.1-1: Synchronisation information transmission for NR sidelink communication/discovery/positioning, in (partial) coverage

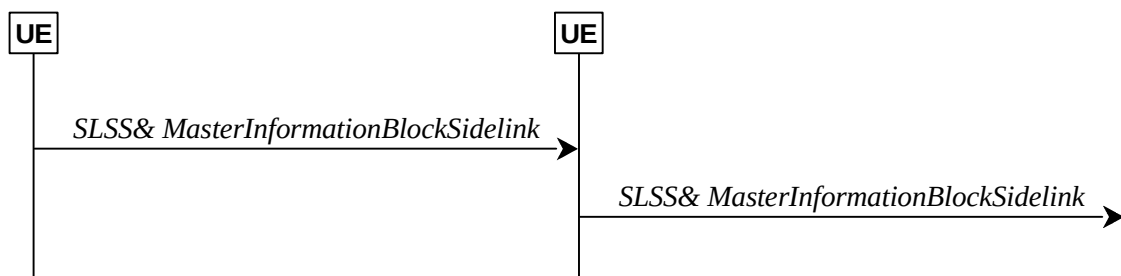 


Figure 5.8.5.1-2: Synchronisation information transmission for NR sidelink communication/discovery/positioning, out of coverage

The purpose of this procedure is to provide synchronisation information to a UE. This procedure also applies to NR sidelink discovery.

5.8.5.2 Initiation

A UE capable of NR sidelink communication/discovery/positioning and SLSS/PSBCH transmission shall, when transmitting NR sidelink communication/discovery/positioning, and if the conditions for NR sidelink communication/discovery/positioning operation are met and when the following conditions are met:

- 1> if in coverage on the frequency used for NR sidelink communication/discovery/positioning, as defined in TS 38.304 [20]; and has selected GNSS or the cell as synchronization reference as defined in 5.8.6.3; or
- 1> if out of coverage on the frequency used for NR sidelink communication/discovery/positioning, and the frequency used to transmit NR sidelink communication/discovery is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* within *SIB12*; and has selected GNSS or the cell as synchronization reference as defined in 5.8.6.3:
 - 2> if *sl-SyncFreqList* is neither included in *RRCReconfiguration* nor in *SIB12*; or
 - 2> if *sl-SyncFreqList* is included in *RRCReconfiguration* or in *SIB12*; and if none of the frequency(ies) selected as specified in TS 38.321 [3] is included in the *sl-SyncFreqList* or the concerned frequency is selected as the synchronisation carrier frequency in accordance with 5.8.6.2; or
 - 2> if *sl-SyncFreqList* and *sl-SyncTxMultiFreq* are included in *RRCReconfiguration* or in *SIB12*; and if the concerned frequency has been selected for NR sidelink communication transmission as specified in TS 38.321 [3] and is included in *sl-SyncFreqList*; and if the UE has selected a frequency other than the concerned frequency as the synchronisation carrier frequency in accordance with 5.8.6.2; and if *sl-SyncTxDisabled* corresponding to the concerned frequency is not configured in *RRCReconfiguration* or in *SIB12*:
 - 3> if in *RRC_CONNECTED*; and if *networkControlledSyncTx* is configured and set to *on*; or
 - 3> if *networkControlledSyncTx* is not configured; and for the concerned frequency *syncTxThreshIC* is configured; and the RSRP measurement of the reference cell, selected as defined in 5.8.6.3, for NR sidelink communication/discovery transmission is below the value of *syncTxThreshIC*:
 - 4> transmit sidelink SSB on the frequency used for NR sidelink communication/discovery in accordance with 5.8.5.3 and TS 38.211 [16], including the transmission of SLSS as specified in 5.8.5.3 and transmission of *MasterInformationBlockSidelink* as specified in 5.8.9.4.3;
- 1> else:
 - 2> if *sl-SyncFreqList* is not included in *SL-PreconfigurationNR*; or
 - 2> if *sl-SyncFreqList* is included in *SL-PreconfigurationNR*, and if none of the frequency(ies) selected as specified in TS 38.321 [3] is included in the *sl-SyncFreqList* or the concerned frequency is selected as the synchronisation carrier frequency in accordance with 5.8.6.2; or
 - 2> if *sl-SyncFreqList* and *sl-SyncTxMultiFreq* are included in *SL-PreconfigurationNR*, and if the concerned frequency has been selected for NR sidelink communication transmission as specified in TS 38.321 [3] and included in *sl-SyncFreqList*; and if the UE has selected a frequency other than the concerned frequency as the synchronisation carrier frequency in accordance with 5.8.6.2; and if *sl-SyncTxDisabled* corresponding to the concerned frequency is not configured in *SL-PreconfigurationNR*:
 - 3> for the frequency used for NR sidelink communication/discovery, if *syncTxThreshOoC* is included in *SidelinkPreconfigNR*; and the UE is not directly synchronized to GNSS, and the UE has no selected SyncRef UE or the PSBCH-RSRP measurement result of the selected SyncRef UE is below the value of *syncTxThreshOoC*; or
 - 3> for the frequency used for NR sidelink communication/discovery, if the UE selects GNSS as the synchronization reference source:
 - 4> transmit sidelink SSB on the frequency used for NR sidelink communication/discovery in accordance with 5.8.5.3 and TS 38.211 [16], including the transmission of SLSS as specified in 5.8.5.3 and transmission of *MasterInformationBlockSidelink* as specified in 5.8.9.4.3;

5.8.5.3 Transmission of SLSS

The UE shall select the SLSSID and the slot in which to transmit SLSS as follows:

- 1> if triggered by NR sidelink communication/discovery/positioning and in coverage on the frequency used for NR sidelink communication/discovery/positioning, as defined in TS 38.304 [20]; or
- 1> if triggered by NR sidelink communication/discovery/positioning, and out of coverage on the frequency used for NR sidelink communication/discovery/positioning, and the concerned frequency is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-FreqInfoList/sl-FreqInfoToAddModListExt* within *SIB12* or *SIB23* for NR sidelink positioning:
 - 2> if the UE has selected GNSS as synchronization reference in accordance with 5.8.6.2:
 - 3> select SLSSID 0;
 - 3> use *sl-SSB-TimeAllocation1* included in the entry of configured *sl-SyncConfigList* corresponding to the concerned frequency, that includes *txParameters* and *gnss-Sync*;
 - 3> select the slot(s) indicated by *sl-SSB-TimeAllocation1*;
 - 2> if the UE has selected a cell as synchronization reference in accordance with 5.8.6.2:
 - 3> select the SLSSID included in the entry of configured *sl-SyncConfigList* corresponding to the concerned frequency, that includes *txParameters* and does not include *gnss-Sync*;
 - 3> select the slot(s) indicated by *sl-SSB-TimeAllocation1*;
- 1> else if triggered by NR sidelink communication/discovery and the UE has GNSS as the synchronization reference:
 - 2> select SLSSID 0;
 - 2> if *sl-SSB-TimeAllocation3* is configured for the frequency used in *SidelinkPreconfigNR*:
 - 3> select the slot(s) indicated by *sl-SSB-TimeAllocation3*;
 - 2> else:
 - 3> select the slot(s) indicated by *sl-SSB-TimeAllocation1*;
- 1> else:
 - 2> select the synchronisation reference UE (i.e. SyncRef UE) as defined in 5.8.6;
 - 2> if the UE has a selected SyncRef UE and *inCoverage* in the *MasterInformationBlockSidelink* message received from this UE is set to *true*; or
 - 2> if the UE has a selected SyncRef UE and *inCoverage* in the *MasterInformationBlockSidelink* message received from this UE is set to *false* while the SLSS from this UE is part of the set defined for out of coverage, see TS 38.211 [16]:
 - 3> select the same SLSSID as the SLSSID of the selected SyncRef UE;
 - 3> select the slot in which to transmit the SLSS according to the *sl-SSB-TimeAllocation1* or *sl-SSB-TimeAllocation2* included in the preconfigured sidelink parameters corresponding to the concerned frequency, such that the timing is different from the SLSS of the selected SyncRef UE;
 - 2> else if the UE has a selected SyncRef UE and the SLSS from this UE was transmitted on the slot(s) indicated *sl-SSB-TimeAllocation3*, which is configured for the frequency used in *SidelinkPreconfigNR*:
 - 3> select SLSSID 337;
 - 3> select the slot(s) indicated by *sl-SSB-TimeAllocation2*;
 - 2> else if the UE has a selected SyncRef UE:

- 3> select the SLSSID from the set defined for out of coverage having an index that is 336 more than the index of the SLSSID of the selected SyncRef UE, see TS 38.211 [16];
- 3> select the slot in which to transmit the SLSS according to *sl-SSB-TimeAllocation1* or *sl-SSB-TimeAllocation2* included in the preconfigured sidelink parameters corresponding to the concerned frequency, such that the timing is different from the SLSS of the selected SyncRef UE;
- 2> else (i.e. no SyncRef UE selected):
 - 3> if the UE has not randomly selected an SLSSID:
 - 4> randomly select, using a uniform distribution, an SLSSID from the set of sequences defined for out of coverage except SLSSID 336 and 337, see TS 38.211 [16];
 - 4> select the slot in which to transmit the SLSS according to the *sl-SSB-TimeAllocation1* or *sl-SSB-TimeAllocation2* (arbitrary selection between these) included in the preconfigured sidelink parameters in *SidelinkPreconfigNR* corresponding to the concerned frequency;

5.8.5a Sidelink synchronisation information transmission for V2X sidelink communication

5.8.5a.1 General

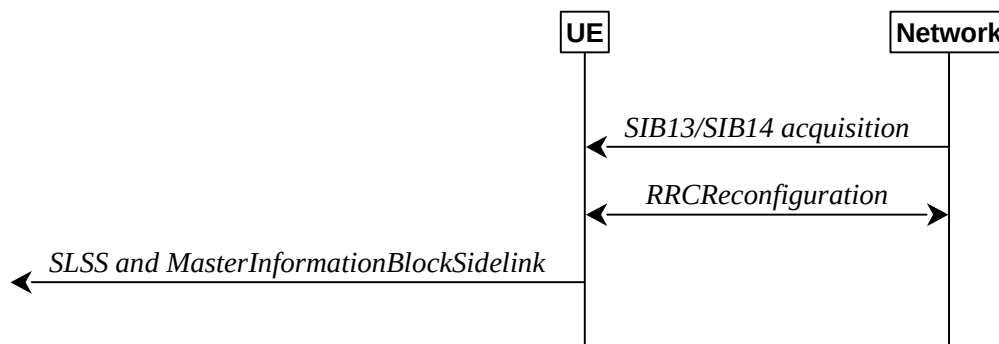 


Figure 5.8.5a.1-1: Synchronisation information transmission for V2X sidelink communication, in (partial) coverage

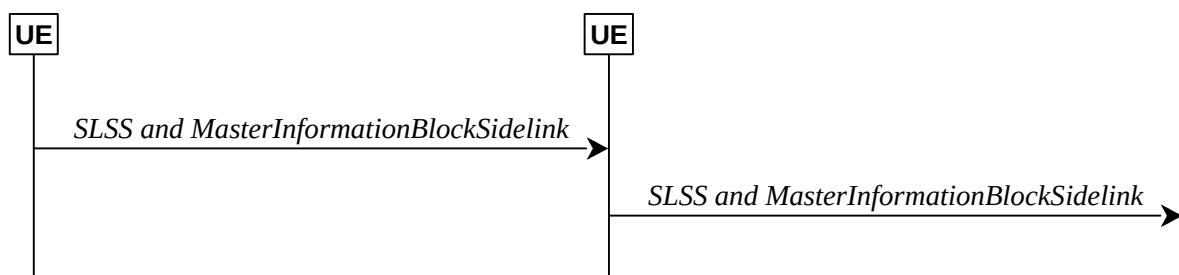 


Figure 5.8.5a.1-2: Synchronisation information transmission for V2X sidelink communication, out of coverage

The purpose of this procedure is to provide synchronisation information to a UE.

5.8.5a.2 Initiation

A UE capable of V2X sidelink communication initiates the transmission of SLSS and *MasterInformationBlock-SL-V2X* according to the conditions and the procedures specified for V2X sidelink communication in clause 5.10.7 of TS 36.331 [10].

NOTE 1: When applying the procedure in this clause, *SIB13* and *SIB14* correspond to *SystemInformationBlockType21* and *SystemInformationBlockType26* specified in TS 36.331 [10] respectively.

5.8.6 Sidelink synchronisation reference

5.8.6.1 General

The purpose of this procedure is to select a synchronisation reference and used when transmitting NR sidelink communication/discovery. This procedure also applies to NR sidelink discovery.

5.8.6.2 Selection and reselection of synchronisation reference

The UE shall for frequency(ies) which have been selected for NR sidelink communication/discovery as specified in TS 38.321 [3]:

- 1> if *sl-SyncFreqList* is not included in *RRCReconfiguration* nor in *SIB12*; or
- 1> if *sl-SyncFreqList* is included in *RRCReconfiguration* or in *SIB12*, and none of the frequency(ies) selected as specified in TS 38.321 [3] is included in the *syncFreqList*:
- 2> if the frequency used for NR sidelink communication/discovery is included in *sl-FreqInfoToAddModList* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12*, and *sl-SyncPriority* is configured for the concerned frequency and set to *gnbEnb*:
- 3> select a cell as the synchronization reference source as defined in 5.8.6.3:

NOTE 1: When an out of coverage L2 U2N Remote UE receives *SIB12* with *sl-SyncPriority* set to *gnbEnb*, the L2 U2N Remote UE continues using the current synchronization source until higher priority synchronization source is found or the current synchronization source becomes unreliable.

- 2> else if the frequency used for NR sidelink communication/discovery is included in *sl-FreqInfoToAddModList* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12*, and *sl-SyncPriority* for the concerned frequency is not configured or is set to *gnss*, and GNSS is reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14]:
- 3> select GNSS as the synchronization reference source;
- 2> else if the frequency used for NR sidelink communication/discovery is included in *SL-PreconfigurationNR*, and *sl-SyncPriority* in *SidelinkPreconfigNR* is set to *gnss* and GNSS is reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14]:
- 3> select GNSS as the synchronization reference source;
- 2> else:
- 3> perform synchronization reference search procedure as defined in 5.8.6.2b on each frequency which is used for NR sidelink communication/discovery;
- 3> if the UE has not selected any synchronization reference:
- 4> for each frequency which is used for NR sidelink communication/discovery:
 - 5> if the UE detects one or more SLSSIDs for which the PSBCH-RSRP exceeds the minimum requirement defined in TS 38.133 [14] by *sl-SyncRefMinHyst* and for which the UE received the corresponding *MasterInformationBlockSidelink* message (candidate SyncRef UEs), or if the UE detects GNSS that is reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14], or if the UE detects a cell, select a synchronization reference according to the priority group order as defined in 5.8.6.2a:
- 1> if *sl-SyncFreqList* is included in *RRCReconfiguration* or in *SIB12*, and includes at least one of the concerned frequency(ies)

- 2> if the concerned frequency(ies) are included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12*, and *sl-SyncPriority* is configured for the concerned frequency(ies) and set to *gnbEnb*:
 - 3> select one frequency from the concerned frequency(ies) which are included in *sl-SyncFreqList* as the synchronisation carrier frequency;
 - 3> select a cell in accordance with the synchronisation carrier frequency as the synchronization reference source as defined in 5.8.6.3;
- 2> else if the concerned frequency(ies) are included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12*, and *sl-SyncPriority* for concerned frequency(ies) are not configured or are set to *gnss*, and GNSS is reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14]; or if the concerned frequency(ies) are included in *SL-PreconfigurationNR*, and *sl-SyncPriority* in *SidelinkPreconfigNR* is set to *gnss* and GNSS is reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14]:
 - 3> select one frequency from the concerned frequency(ies) which are included in *sl-SyncFreqList* as the synchronisation carrier frequency;
 - 3> select GNSS in accordance with the synchronisation carrier frequency as the synchronization reference source;
- 2> else:
 - 3> perform a synchronization reference search procedure as defined in 5.8.6.2b on each concerned frequency which is included in *sl-SyncFreqList*;
 - 3> if the UE has not selected any synchronization reference:
 - 4> for each concerned frequency which is included in *sl-SyncFreqList*:
 - 5> if the UE detects one or more SLSSIDs for which the PSBCH-RSRP exceeds the minimum requirement defined in TS 38.133 [14] by *sl-SyncRefMinHyst* and for which the UE received the corresponding *MasterInformationBlockSidelink* message (candidate SyncRef UEs), or if the UE detects GNSS that is reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14], or if the UE detects a cell,
 - 6> select the synchronisation reference source(s) according to the following priority group order as defined in 5.8.6.2a;
 - 6> select the frequency with the highest synchronisation reference source priority as the synchronisation carrier frequency, according to the following priority group order as defined in 5.8.6.2a, and consider the synchronisation reference source (i.e. eNB/gNB, GNSS or SyncRef UE) that selected on the synchronisation carrier frequency as the synchronization reference;

NOTE 2: How the UE achieves subframe boundary alignment between V2X sidelink communication and NR sidelink communication/discovery (if both are performed by the UE) is as specified in TS 38.213, clause 16.7.

5.8.6.2a Sidelink synchronization reference priority group order

- 1> if *sl-SyncPriority* corresponding to the concerned frequency is set to *gnbEnb*:
 - 2> UEs of which SLSSID is part of the set defined for in coverage, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *true*, starting with the UE with the highest PSBCH-RSRP result (priority group 1);
 - 2> UE of which SLSSID is part of the set defined for in coverage, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 2);
 - 2> GNSS that is reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14] (priority group 3);

- 2> UEs of which SLSSID is 0, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *true*, or of which SLSSID is 0 and SLSS is transmitted on slot(s) indicated by *sl-SSB-TimeAllocation3*, starting with the UE with the highest PSBCH-RSRP result (priority group 4);
- 2> UEs of which SLSSID is 0 and SLSS is not transmitted on slot(s) indicated by *sl-SSB-TimeAllocation3*, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 5);
- 2> UEs of which SLSSID is 337 and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 5);
- 2> Other UEs, starting with the UE with the highest PSBCH-RSRP result (priority group 6);
- 1> if *sl-SyncPriority* corresponding to the concerned frequency is set to *gnss*, and *sl-NbAsSync* is set to *true*:
 - 2> UEs of which SLSSID is 0, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *true*, or of which SLSSID is 0 and SLSS is transmitted on slot(s) indicated by *sl-SSB-TimeAllocation3*, starting with the UE with the highest PSBCH-RSRP result (priority group 1);
 - 2> UEs of which SLSSID is 0 and SLSS is not transmitted on slot(s) indicated by *sl-SSB-TimeAllocation3*, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 2);
 - 2> UEs of which SLSSID is 337 and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 2);
 - 2> the cell detected by the UE as defined in 5.8.6.3 (priority group 3);
 - 2> UEs of which SLSSID is part of the set defined for in coverage, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *true*, starting with the UE with the highest PSBCH-RSRP result (priority group 4);
 - 2> UE of which SLSSID is part of the set defined for in coverage, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 5);
 - 2> Other UEs, starting with the UE with the highest S-RSRP result (priority group 6);
- 1> if *sl-SyncPriority* corresponding to the concerned frequency is set to *gnss*, and *sl-NbAsSync* is set to *false*:
 - 2> UEs of which SLSSID is 0, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *true*, or of which SLSSID is 0 and SLSS is transmitted on slot(s) indicated by *sl-SSB-TimeAllocation3*, starting with the UE with the highest PSBCH-RSRP result (priority group 1);
 - 2> UEs of which SLSSID is 0 and SLSS is not transmitted on slot(s) indicated by *sl-SSB-TimeAllocation3*, and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 2);
 - 2> UEs of which SLSSID is 337 and *inCoverage*, included in the *MasterInformationBlockSidelink* message received from this UE, is set to *false*, starting with the UE with the highest PSBCH-RSRP result (priority group 2);
 - 2> Other UEs, starting with the UE with the highest PSBCH-RSRP result (priority group 3);

5.8.6.2b Sidelink synchronization reference search

The UE shall for the indicated frequency(ies)

- 1> perform a full search (i.e. covering all subframes and all possible SLSSIDs) on each indicated frequency to detect candidate SLSS, in accordance with TS 38.133 [14];
- 1> when evaluating the one or more detected SLSSIDs, apply layer 3 filtering as specified in 5.5.3.2 using the preconfigured *sl-filterCoefficient*, before using the PSBCH-RSRP measurement results;

- 1> if the UE has selected a SyncRef UE:
 - 2> if the PSBCH-RSRP of the strongest candidate SyncRef UE exceeds the minimum requirement TS 38.133 [14] by *sl-SyncRefMinHyst* and the strongest candidate SyncRef UE belongs to the same priority group as the current SyncRef UE and the PSBCH-RSRP of the strongest candidate SyncRef UE exceeds the PSBCH-RSRP of the current SyncRef UE by *syncRefDiffHyst*; or
 - 2> if the PSBCH-RSRP of the candidate SyncRef UE exceeds the minimum requirement TS 38.133 [14] by *sl-SyncRefMinHyst* and the candidate SyncRef UE belongs to a higher priority group than the current SyncRef UE; or
 - 2> if GNSS becomes reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14], and GNSS belongs to a higher priority group than the current SyncRef UE; or
 - 2> if a cell is detected and gNB/eNB (if *sl-NbAsSync* is set to *true*) belongs to a higher priority group than the current SyncRef UE; or
 - 2> if the PSBCH-RSRP of the current SyncRef UE is less than the minimum requirement defined in TS 38.133 [14]:
 - 3> consider no SyncRef UE to be selected;
- 1> if the UE has selected GNSS as the synchronization reference for NR sidelink communication/discovery:
 - 2> if the PSBCH-RSRP of the candidate SyncRef UE exceeds the minimum requirement defined in TS 38.133 [14] by *sl-SyncRefMinHyst* and the candidate SyncRef UE belongs to a higher priority group than GNSS; or
 - 2> if GNSS becomes not reliable in accordance with TS 38.101-1 [15] and TS 38.133 [14]:
 - 3> consider GNSS not to be selected;
- 1> if the UE has selected cell as the synchronization reference for NR sidelink communication/discovery:
 - 2> if the PSBCH-RSRP of the candidate SyncRef UE exceeds the minimum requirement defined in TS 38.133 [14] by *sl-SyncRefMinHyst* and the candidate SyncRef UE belongs to a higher priority group than gNB/eNB;
or
 - 2> if the selected cell is not detected:
 - 3> consider the cell not to be selected;

5.8.6.3 Sidelink communication transmission reference cell selection

A UE capable of NR sidelink communication/discovery that is configured by upper layers to transmit NR sidelink communication/discovery shall:

- 1> for the frequency used to transmit NR sidelink communication/discovery, select a cell to be used as reference for synchronization in accordance with the following:
 - 2> if the frequency concerns the primary frequency:
 - 3> use the PCell or the serving cell as reference;
 - 2> else if the frequency concerns a secondary frequency:
 - 3> use the concerned SCell as reference;
 - 2> else if the UE is in coverage of the concerned frequency:
 - 3> use the DL frequency paired with the one used to transmit NR sidelink communication/discovery as reference;
 - 2> else (i.e., out of coverage on the concerned frequency):
 - 3> use the PCell or the serving cell as reference, if needed;

5.8.7 Sidelink communication reception

A UE capable of NR sidelink communication that is configured by upper layers to receive NR sidelink communication shall:

- 1> if the conditions for NR sidelink communication operation as defined in 5.8.2 are met:
- 2> if the frequency used for NR sidelink communication is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *RRCReconfiguration* message or *sl-FreqInfoList/sl-FreqInfoListSizeExt* included in *SIB12*:
- 3> if the UE is configured with *sl-RxPool* included in *RRCReconfiguration* message with *reconfigurationWithSync* (i.e. handover):
 - 4> configure lower layers to monitor sidelink control information and the corresponding data using the pool(s) of resources indicated by *sl-RxPool*;
- 3> else if the cell chosen for NR sidelink communication provides *SIB12*:
 - 4> configure lower layers to monitor sidelink control information and the corresponding data using the pool(s) of resources indicated by *sl-RxPool* in *SIB12*;
- 2> else:
 - 3> configure lower layers to monitor sidelink control information and the corresponding data using the pool(s) of resources that were preconfigured by *sl-RxPool* in *SL-PreconfigurationNR*, as defined in clause 9.3.

5.8.8 Sidelink communication transmission

A UE capable of NR sidelink communication that is configured by upper layers to transmit NR sidelink communication and has related data to be transmitted shall:

- 1> if the conditions for NR sidelink communication operation as defined in 5.8.2 are met:
- 2> if the frequency used for NR sidelink communication is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12*:
- 3> if the UE is in *RRC_CONNECTED* and uses the frequency included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message:
 - 4> if the UE acting as U2U Relay UE is performing U2U Relay Communication with integrated Discovery as specified in TS 23.304[65] and *sl-DiscConfig* is included in *RRCReconfiguration*, and if the NR sidelink U2U Relay UE threshold conditions for integrated Discovery as specified in 5.8.16.2 are met based on *sl-RelayUE-ConfigU2U*; or
 - 4> if the UE capable of U2U Remote UE is performing U2U Relay Communication with integrated Discovery as specified in TS 23.304[65] and *sl-DiscConfig* is included in *RRCReconfiguration*, and if the NR sidelink U2U Remote UE threshold conditions for integrated Discovery as specified in 5.8.17.2 are met based on *sl-RemoteUE-ConfigU2U*; or
 - 4> if the UE is performing NR sidelink communication other than U2U Relay Communication with integrated Discovery:

NOTE 0: For U2U Relay UE, it can be up to UE implementation on cross-layer interaction for the AS layer condition check for Direct Communication Request message with integrated discovery forwarding.

- 5> if the UE is configured with *sl-ScheduledConfig*:
 - 6> if T310 for MCG or T311 is running; and if *sl-TxPoolExceptional* is included in *sl-FreqInfoList/sl-FreqInfoListSizeExt* for the concerned frequency in *SIB12* or included in *sl-ConfigDedicatedNR* in *RRCReconfiguration*; or

- 6> if T301 is running and the cell on which the UE initiated RRC connection re-establishment provides SIB12 including *sl-TxPoolExceptional* for the concerned frequency; or
- 6> if T304 for MCG is running and the UE is configured with *sl-TxPoolExceptional* included in *sl-ConfigDedicatedNR* for the concerned frequency in *RRCReconfiguration*:
 - 7> configure lower layers to perform the sidelink resource allocation mode 2 based on random selection using the pool of resources indicated by *sl-TxPoolExceptional* as defined in TS 38.321 [3];
- 6> else:
 - 7> configure lower layers to perform the sidelink resource allocation mode 1 for NR sidelink communication;
- 6> if T311 is running, configure the lower layers to release the resources indicated by *rrc-ConfiguredSidelinkGrant* (if any);
- 5> if the UE is configured with *sl-UE-SelectedConfig*:
 - 6> if a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-TxPoolSelectedNormal* for the concerned frequency included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* is not available in accordance with TS 38.214 [19];
 - 7> if *sl-TxPoolExceptional* for the concerned frequency is included in *RRCReconfiguration*; or
 - 7> if the PCell provides SIB12 including *sl-TxPoolExceptional* in *sl-FreqInfoList/sl-FreqInfoListSizeExt* for the concerned frequency:
 - 8> configure lower layers to perform the sidelink resource allocation mode 2 based on random selection using the pool of resources indicated by *sl-TxPoolExceptional* as defined in TS 38.321 [3];
 - 6> else, if the *sl-TxPoolSelectedNormal* for the concerned frequency is included in the *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 7> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated by *sl-TxPoolSelectedNormal* for the concerned frequency;
- 3> else:
 - 4> if the cell chosen for NR sidelink communication transmission provides SIB12:
 - 5> if the UE acting as U2U Relay UE is performing U2U Relay communication with integrated Discovery as specified in TS 23.304[65], and if the NR sidelink U2U Relay UE threshold conditions for integrated Discovery as specified in 5.8.16.2 are met based on *sl-RelayUE-ConfigCommonU2U* in SIB12; or
 - 5> if the UE capable of U2U Remote UE is performing U2U Relay Communication with integrated Discovery as specified in TS 23.304[65], and if the NR sidelink U2U Remote UE threshold conditions for integrated Discovery as specified in 5.8.17.2 are met based on *sl-RemoteUE-ConfigCommonU2U* in SIB12; or
 - 5> if the UE is performing NR sidelink communication other than U2U Relay Communication with integrated Discovery:
 - 6> if SIB12 includes *sl-TxPoolSelectedNormal* for the concerned frequency, and a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in the *sl-TxPoolSelectedNormal* is available in accordance with TS 38.214 [19] or random selection, if allowed by *sl-AllowedResourceSelectionConfig*, is selected:
 - 7> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* using the pools of

resources indicated by *sl-TxPoolSelectedNormal* for the concerned frequency as defined in TS 38.321 [3];

6> else if *SIB12* includes *sl-TxPoolExceptional* for the concerned frequency:

- 7> from the moment the UE initiates RRC connection establishment or RRC connection resume, until receiving an *RRCReconfiguration* including *sl-ConfigDedicatedNR*, or receiving an *RRCRelease* or an *RRCReject*; or
- 7> if a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-TxPoolSelectedNormal* for the concerned frequency in *SIB12* is not available in accordance with TS 38.214 [19];
- 8> configure lower layers to perform the sidelink resource allocation mode 2 based on random selection (as defined in TS 38.321 [3]) using the pool of resources indicated by *sl-TxPoolExceptional* for the concerned frequency;

2> else:

- 3> if the UE acting as U2U Relay UE is performing U2U Relay communication with integrated Discovery as specified in TS 23.304[65], and if the NR sidelink U2U Relay UE threshold conditions for integrated Discovery as specified in 5.8.16.2 are met based on *sl-RelayUE-PreconfigU2U* in *SidelinkPreconfigNR*; or
- 3> if the UE capable of U2U Remote UE is performing U2U Relay Communication with integrated Discovery as specified in TS 23.304[65], and if the NR sidelink U2U Remote UE threshold conditions for integrated Discovery as specified in 5.8.17.2 are met based on *sl-RemoteUE-PreconfigU2U* in *SidelinkPreconfigNR*; or
- 3> if the UE is performing NR sidelink communication other than U2U Relay Communication with integrated Discovery:
 - 4> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated by *sl-TxPoolSelectedNormal* in *SidelinkPreconfigNR* for the concerned frequency.

NOTE 1: The UE continues to use resources configured in *rrc-ConfiguredSidelinkGrant* (while T310 is running) until it is released (i.e. until T310 has expired). The UE does not use sidelink configured grant type 2 resources while T310 is running.

NOTE 2: In case of RRC reconfiguration with sync, the UE uses resources configured in *rrc-ConfiguredSidelinkGrant* (while T304 on the MCG is running) if provided by the target cell.

NOTE 3: It is up to UE implementation to determine, in accordance with TS 38.321[3], which resource pool to use if multiple resource pools are configured, and which resource allocation scheme is used in the AS based on UE capability (for a UE in RRC_IDLE/RRC_INACTIVE) and the allowed resource schemes *sl-AllowedResourceSelectionConfig* in the resource pool configuration.

NOTE 4: In case that the network does not provide resource pools in *SIB12*, a UE which is out of coverage, will be unable to obtain sidelink resources to send the first UL RRC message.

If configured to perform sidelink resource allocation mode 2, the UE capable of NR sidelink communication that is configured by upper layers to transmit NR sidelink communication shall perform resource selection operation according to *sl-AllowedResourceSelectionConfig* on all pools of resources which may be used for transmission of the sidelink control information and the corresponding data. The pools of resources are indicated by *SidelinkPreconfigNR*, *sl-TxPoolSelectedNormal* in *sl-ConfigDedicatedNR*, or *sl-TxPoolSelectedNormal* in *SIB12* for the concerned frequency, as configured above.

5.8.9 Sidelink RRC procedure

5.8.9.1 Sidelink RRC reconfiguration

5.8.9.1.1 General

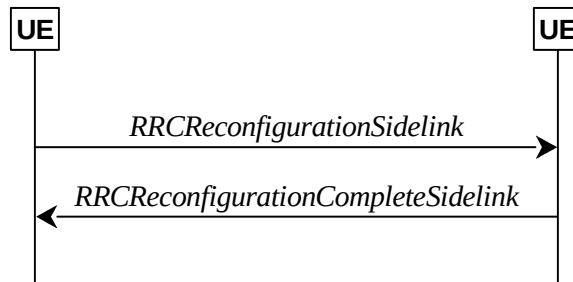 


Figure 5.8.9.1.1-1: Sidelink RRC reconfiguration, successful

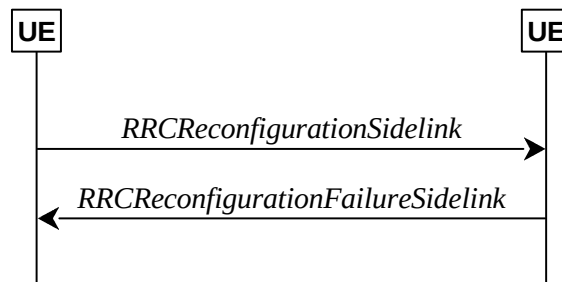 


Figure 5.8.9.1.1-2: Sidelink RRC reconfiguration, failure

The purpose of this procedure is to modify a PC5-RRC connection, e.g. to establish/modify/release sidelink DRBs or additional sidelink RLC bearer or PC5 Relay RLC channels, to add/release sidelink carrier, to (re-)configure NR sidelink measurement and reporting, to (re-)configure sidelink CSI reference signal resources, to (re)configure CSI reporting latency bound, to (re)configure sidelink DRX, to (re-)configure the latency bound of SL Inter-UE coordination report, and to indicate the SFN-DFN offset.

The UE may initiate the sidelink RRC reconfiguration procedure and perform the operation in clause 5.8.9.1.2 on the corresponding PC5-RRC connection in following cases:

- the release of sidelink DRBs associated with the peer UE, or peer L2 U2U Remote UE in case of L2 U2U Relay operation, as specified in clause 5.8.9.1a.1;
- the establishment of sidelink DRBs associated with the peer UE, or peer L2 U2U Remote UE in case of L2 U2U Relay operation, as specified in clause 5.8.9.1a.2;
- the modification for the parameters included in *SLRB-Config* of sidelink DRBs associated with the peer UE, or peer L2 U2U Remote UE in case of L2 U2U Relay operation, as specified in clause 5.8.9.1a.2;
- the release of additional sidelink RLC bearer associated with the peer UE, as specified in clause 5.8.9.1a.5;
- the establishment of additional sidelink RLC bearer associated with the peer UE, as specified in clause 5.8.9.1a.6;
- the modification for the parameters included in *SL-RLC-BearerConfig* of additional sidelink RLC bearer associated with the peer UE, as specified in clause 5.8.9.1a.6;
- the release of PC5 Relay RLC channels for L2 U2N/U2U Relay UE and Remote UE, as specified in clause 5.8.9.7.1;

- the establishment of PC5 Relay RLC channels for L2 U2N/U2U Relay UE and Remote UE, as specified in clause 5.8.9.7.2;
- the modification for the parameters included in *SL-RLC-ChannelConfigPC5* of PC5 Relay RLC channels for L2 U2N/U2U Relay UE and Remote UE, as specified in clause 5.8.9.7.2;
- the release of sidelink carrier associated with the peer UE, as specified in clause 5.8.9.1b.1;
- the addition of sidelink carrier associated with the peer UE, as specified in clause 5.8.9.1b.2;
- the (re-)configuration of the peer UE to perform NR sidelink measurement and report.
- the (re-)configuration of the sidelink CSI reference signal resources and CSI reporting latency bound;
- the (re-)configuration of the peer UE to perform sidelink DRX;
- the (re-)configuration of the latency bound of SL Inter-UE coordination report;
- the (re-)configuration of the local UE ID pair for L2 U2U Remote UE and its peer L2 U2U Remote UE by L2 U2U Relay UE.
- the response to the request in a *RemoteUEInformationSidelink* message for the SFN-DFN offset from the L2 U2N Remote UE;
- the change in the value of the SFN-DFN offset at the L2 U2N Relay UE.

NOTE: It is up to L2 U2N Relay UE implementation to determine when the SFN-DFN offset has changed in value to a degree requiring an update to be sent to the L2 U2N Remote UE.

In *RRC_CONNECTED*, the UE applies the NR sidelink communications parameters provided in *RRCReconfiguration* (if any). In *RRC_IDLE* or *RRC_INACTIVE*, the UE applies the NR sidelink communications parameters provided in system information (if any). For other cases, UEs apply the NR sidelink communications parameters provided in *SidelinkPreconfigNR* (if any). When UE performs state transition between above three cases, the UE applies the NR sidelink communications parameters provided in the new state, after acquisition of the new configurations. Before acquisition of the new configurations, UE continues applying the NR sidelink communications parameters provided in the old state.

5.8.9.1.2 Actions related to transmission of *RRCReconfigurationSidelink* message

The UE shall set the contents of *RRCReconfigurationSidelink* message as follows:

- 1> for each sidelink DRB that is to be released, according to clause 5.8.9.1a.1.1, due to configuration by *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, by upper layers, or due to end-to-end sidelink DRB release:
 - 2> set the entry included in the *slrb-ConfigToReleaseList* corresponding to the sidelink DRB;
- 1> for each sidelink DRB that is to be established or modified, according to clause 5.8.9.1a.2.1, due to receiving *sl-ConfigDedicatedNR*, *SIB12* or *SidelinkPreconfigNR*:
 - 2> if the sidelink DRB is a per-hop sidelink DRB (i.e. the UE is performing NR sidelink communication with a peer UE without via a L2 U2U Relay UE):
 - 3> if a sidelink DRB is to be established:
 - 4> assign a new logical channel identity for the logical channel to be associated with the sidelink DRB and set *sl-MAC-LogicalChannelConfigPC5* in the *SLRB-Config* to include the new logical channel identity;
 - 3> set the *SLRB-Config* included in the *slrb-ConfigToAddModList*, according to the received *sl-RadioBearerConfig* and *sl-RLC-BearerConfig* corresponding to the sidelink DRB;
 - 2> else if the sidelink DRB is an end-to-end sidelink DRB (i.e. the UE is acting as a L2 U2U Remote UE, and configure peer L2 U2U Remote UE with end-to-end SDAP and PDCP):

- 3> set the *SLRB-Config* (excluding *sl-RLC-ConfigPC5* and *sl-MAC-LogicalChannelConfigPC5*) included in the *slrb-ConfigToAddModList*, according to the received *sl-RadioBearerConfig* corresponding to the sidelink DRB;
 - 1> for each additional sidelink RLC bearer that is to be released, according to clause 5.8.9.1a.5.1, due to configuration by *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or by upper layers:
 - 2> set the entry included in the *sl-RLC-BearerToReleaseList* corresponding to the additional sidelink RLC bearer;
 - 1> for each additional sidelink RLC bearer that is to be established or modified, according to clause 5.8.9.1a.6.1, due to receiving *sl-ConfigDedicatedNR*, *SIB12* or *SidelinkPreconfigNR*:
 - 2> if an additional sidelink RLC bearer is to be established:
 - 3> assign a new logical channel identity for the logical channel to be associated with the additional sidelink RLC bearer and set *sl-MAC-LogicalChannelConfigPC5* in the *SL-RLC-BearerConfig* to include the new logical channel identity;
 - 2> set the *SL-RLC-BearerConfig* included in the *sl-RLC-BearerToAddModList*, according to the received *sl-RadioBearerConfig* and *sl-RLC-BearerConfig* corresponding to the additional sidelink RLC bearer;
 - 1> for each carrier that is to be released, according to clause 5.8.9.1b.1.1:
 - 2> include the corresponding sidelink carrier in the *sl-CarrierToReleaseList*;
 - 1> for each carrier that is to be added, according to clause 5.8.9.1b.2.1:
 - 2> include the corresponding sidelink carrier in the *sl-CarrierToAddModList*;
 - 1> set the *sl-MeasConfig* as follows:
 - 2> If the frequency used for NR sidelink communication is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12*:
 - 3> if UE is in *RRC_CONNECTED*:
 - 4> set the *sl-MeasConfig* according to stored NR sidelink measurement configuration information for this destination;
 - 3> if UE is in *RRC_IDLE* or *RRC_INACTIVE*:
 - 4> set the *sl-MeasConfig* according to stored NR sidelink measurement configuration received from *SIB12*;
 - 2> else:
 - 3> set the *sl-MeasConfig* according to the *sl-MeasPreConfig* in *SidelinkPreconfigNR*;
 - 1> set the *sl-LatencyBoundIUC-Report*;
 - 1> start timer T400 for the destination;
 - 1> set the *sl-CSI-RS-Config*;
 - 1> set the *sl-LatencyBoundCSI-Report*;
 - 1> set the *sl-ResetConfig*;
- NOTE 1: Whether/how to set the parameters included in *sl-LatencyBoundIUC-Report*, *sl-CSI-RS-Config*, *sl-LatencyBoundCSI-Report* and *sl-ResetConfig* is up to UE implementation.
- 1> set the *sl-DRX-ConfigUC-PC5* as follows:

2> If the frequency used for NR sidelink communication is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-ConfigCommonNR* within *SIB12*:

3> if UE is in *RRC_CONNECTED* and if *sl-ScheduledConfig* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*:

4> set the *sl-DRX-ConfigUC-PC5* according to stored NR sidelink DRX configuration information for this destination;

NOTE 2: If UE is in *RRC_IDLE* or in *RRC_INACTIVE* or out of coverage, or in *RRC_CONNECTED* and *sl-UE-SelectedConfig* is included in *sl-ConfigDedicatedNR* within *RRCReconfiguration*, it is up to UE implementation to set the *sl-DRX-ConfigUC-PC5*.

1> for each PC5 Relay RLC channel that is to be released due to configuration by *sl-ConfigDedicatedNR*:

2> set the *SL-RLC-ChannelID* corresponding to the PC5 Relay RLC channel in the *sl-RLC-ChannelToReleaseListPC5*;

1> for each PC5 Relay RLC channel that is to be established or modified due to receiving *sl-ConfigDedicatedNR*:

2> if a PC5 Relay RLC channel is to be established:

3> assign a new logical channel identity for the logical channel to be associated with the PC5 Relay RLC channel and set *sl-MAC-LogicalChannelConfigPC5* in the *SL-RLC-ChannelConfigPC5* to include the new logical channel identity;

2> set the *SL-RLC-ChannelConfigPC5* included in the *sl-RLC-ChannelToAddModListPC5* according to the received *SL-RLC-ChannelConfig* corresponding to the PC5 Relay RLC channel, including setting *sl-RLC-ChannelID-PC5* to the same value of *sl-RLC-ChannelID* received in *SL-RLC-ChannelConfig*;

1> if the UE is operating as a L2 U2N Relay UE:

2> if the destination UE is a L2 U2N Remote UE that requested the SFN-DFN offset in a previous *RemoteUEInformationSidelink* message:

3> if the SFN-DFN offset has changed since a previous transmission of the *RRCReconfigurationSidelink* message, or no previous transmission of the *RRCReconfigurationSidelink* message has occurred since the reception of the *RemoteUEInformationSidelink* message:

4> set the *sl-SFN-DFN-Offset* according to the relation between the SFN timeline of the PCell and the DFN timeline;

1> if the UE is acting as L2 U2U Relay UE, and if the procedure is initiated to configure local ID pair to a connected L2 U2U Remote UE:

2> if the local ID pair is to be assigned or modified for an end-to-end PC5 connection, and if the per-hop PC5-RRC connection with this L2 U2U Remote UE and the per-hop PC5-RRC connection with its peer L2 U2U Remote UE are successfully established:

3> include an entry in *sl-LocalID-PairList*, and set the fields as below:

4> set *sl-RemoteUE-L2Identity* to the source L2 ID of this L2 U2U Remote UE, and set *sl-RemoteUE-LocalIdentity* to include the new local UE ID assigned to this L2 U2U Remote UE, in the *SL-SRAP-ConfigPC5*;

4> set *sl-PeerRemoteUE-L2Identity* to the source L2 ID of the peer L2 U2U Remote UE, and set *sl-PeerRemoteUE-LocalIdentity* to include the new local UE ID assigned to the peer L2 U2U Remote UE, in the *SL-SRAP-ConfigPC5*;

1> if the UE is acting as L2 U2U Remote UE (i.e. Tx UE) and is in *RRC_IDLE* or in *RRC_INACTIVE* or out of coverage, and the procedure is initiated to release the first hop PC5 Relay RLC channel of an end-to-end sidelink DRB to the connected L2 U2U Relay UE (i.e. Rx UE) according to clause 5.8.9.7.1; or

- 1> if the UE is acting as L2 U2U Relay UE (i.e. Tx UE) and is in RRC_IDLE or in RRC_INACTIVE or out of coverage, and the procedure is initiated to release the second hop PC5 Relay RLC channel of an end-to-end sidelink DRB to the connected L2 U2U Remote UE (i.e. Rx UE) according to clause 5.8.9.7.1:
 - 2> set the *SL-RLC-ChannelID* corresponding to the PC5 Relay RLC channel in the *sl-RLC-ChannelToReleaseListPC5*;
- 1> if the UE is acting as L2 U2U Remote UE (i.e. Tx UE) and is in RRC_IDLE or in RRC_INACTIVE or out of coverage, and if the procedure is initiated to add/modify the first hop PC5 Relay RLC channel of an end-to-end sidelink DRB to the connected L2 U2U Relay UE (i.e. Rx UE), based on configuration in *SIB12* or *SidelinkPreconfigNR*; or
- 1> if the UE is acting as L2 U2U Relay UE (i.e. Tx UE) and is in RRC_IDLE or in RRC_INACTIVE or out of coverage, and if the procedure is initiated to add/modify the second hop PC5 Relay RLC channel to the connected L2 U2U Remote UE (i.e. Rx UE) based on configuration in *SIB12* or *SidelinkPreconfigNR*:
 - 2> if a PC5 Relay RLC channel is to be established:
 - 3> assign a new RLC channel ID and set *sl-RLC-ChannelID-PC5* in the *SL-RLC-ChannelConfigPC5* to include the new RLC channel ID;
 - 3> assign a new logical channel identity for the logical channel to be associated with the PC5 Relay RLC channel and set *sl-MAC-LogicalChannelConfigPC5* in the *SL-RLC-ChannelConfigPC5* to include the new logical channel identity;
 - 2> if the UE is in RRC_IDLE or in RRC_INACTIVE:
 - 3> set the *SL-RLC-ChannelConfigPC5* included in the *sl-RLC-ChannelToAddModListPC5* according to the *SL-RLC-BearerConfig* derived based on the per-hop QoS of the end-to-end SLRB according to *sl-RLC-BearerConfigList* in *SIB12*;
 - 2> else if the UE is out of coverage:
 - 3> set the *SL-RLC-ChannelConfigPC5* included in the *sl-RLC-ChannelToAddModListPC5* according to the *SL-RLC-BearerConfig* derived based on the per-hop QoS of the end-to-end SLRB according to *sl-RLC-BearerPreConfigList* in *SidelinkPreconfigNR*.

NOTE 3: Void.

The UE shall submit the *RRCReconfigurationSidelink* message to lower layers for transmission.

5.8.9.1.3 Reception of an *RRCReconfigurationSidelink* by the UE

The UE shall perform the following actions upon reception of the *RRCReconfigurationSidelink*:

- 1> if the *RRCReconfigurationSidelink* includes the *sl-ResetConfig*:
 - 2> perform the sidelink reset configuration procedure as specified in 5.8.9.1.10;
- 1> if the *RRCReconfigurationSidelink* includes the *slrb-ConfigToReleaseList*:
 - 2> for each entry value included in the *slrb-ConfigToReleaseList* that is part of the current UE sidelink configuration;
 - 3> perform the sidelink DRB release procedure, according to clause 5.8.9.1a.1;
- 1> if the *RRCReconfigurationSidelink* includes the *slrb-ConfigToAddModList*:
 - 2> for each *slrb-PC5-ConfigIndex* value included in the *slrb-ConfigToAddModList* that is not part of the current UE sidelink configuration;
 - 3> if *sl-MappedQoS-FlowsToAddList* is included:
 - 4> apply the *SL-PQFI* included in *sl-MappedQoS-FlowsToAddList*;
 - 3> perform the sidelink DRB addition procedure, according to clause 5.8.9.1a.2;

- 2> for each *slrb-PC5-ConfigIndex* value included in the *slrb-ConfigToAddModList* that is part of the current UE sidelink configuration:
 - 3> if *sl-MappedQoS-FlowsToAddList* is included:
 - 4> add the *SL-PQFI* included in *sl-MappedQoS-FlowsToAddList* to the corresponding sidelink DRB;
 - 3> if *sl-MappedQoS-FlowsToReleaseList* is included:
 - 4> remove the *SL-PQFI* included in *sl-MappedQoS-FlowsToReleaseList* from the corresponding sidelink DRB;
 - 3> if the sidelink DRB release conditions as described in clause 5.8.9.1a.1.1 are met:
 - 4> perform the sidelink DRB release procedure according to clause 5.8.9.1a.1.2;
 - 3> else if the sidelink DRB modification conditions as described in clause 5.8.9.1a.2.1 are met:
 - 4> perform the sidelink DRB modification procedure according to clause 5.8.9.1a.2.2;
- 1> if the *RRCReconfigurationSidelink* includes the *sl-RLC-BearerToReleaseList*:
 - 2> for each entry value included in the *sl-RLC-BearerToReleaseList* that is part of the current UE sidelink configuration;
 - 3> perform the additional sidelink RLC bearer release procedure, according to clause 5.8.9.1a.5;
- 1> if the *RRCReconfigurationSidelink* includes the *sl-RLC-BearerToAddModList*:
 - 2> for each *SL-RLC-BearerConfigIndex* value included in the *sl-RLC-BearerToAddModList* that is not part of the current UE sidelink configuration:
 - 3> perform the additional sidelink RLC bearer addition procedure, according to clause 5.8.9.1a.6;
 - 2> for each *SL-RLC-BearerConfigIndex* value included in the *sl-RLC-BearerToAddModList* that is part of the current UE sidelink configuration:
 - 3> perform the additional sidelink RLC bearer modification procedure, according to clause 5.8.9.1a.6;
- 1> if the *RRCReconfigurationSidelink* includes the *sl-CarrierToReleaseList*:
 - 2> for each entry value included in the *sl-CarrierToReleaseList* that is part of the current UE sidelink configuration;
 - 3> perform the sidelink carrier release procedure, according to clause 5.8.9.1b.1;
- 1> if the *RRCReconfigurationSidelink* includes the *sl-CarrierToAddModList*:
 - 2> for each *sl-CarrierId* value included in the *sl-CarrierToAddModList* that is not part of the current UE sidelink configuration:
 - 3> perform the sidelink carrier addition procedure, according to clause 5.8.9.1b.2;
- 1> if the *RRCReconfigurationSidelink* message includes the *sl-MeasConfig*:
 - 2> perform the sidelink measurement configuration procedure as specified in 5.8.10;
- 1> if the *RRCReconfigurationSidelink* message includes the *sl-CSI-RS-Config*:
 - 2> apply the sidelink CSI-RS configuration;
- 1> if the *RRCReconfigurationSidelink* message includes the *sl-LatencyBoundCSI-Report*:
 - 2> apply the configured sidelink CSI report latency bound;
- 1> if the *RRCReconfigurationSidelink* includes the *sl-RLC-ChannelToReleaseListPC5*:

- 2> for each *SL-RLC-ChannelID* value included in the *sl-RLC-ChannelToReleaseListPC5* that is part of the current UE sidelink configuration;
- 3> perform the PC5 Relay RLC channel release procedure, according to clause 5.8.9.7.1;
- 1> if the *RRCReconfigurationSidelink* includes the *sl-RLC-ChannelToAddModListPC5*:
 - 2> for each *sl-RLC-ChannelID-PC5* value included in the *sl-RLC-ChannelToAddModListPC5* that is not part of the current UE sidelink configuration:
 - 3> perform the PC5 Relay RLC channel addition procedure, according to clause 5.8.9.7.2;
 - 2> for each *sl-RLC-ChannelID-PC5* value included in the *sl-RLC-ChannelToAddModListPC5* that is part of the current UE sidelink configuration:
 - 3> perform the PC5 Relay RLC channel modification procedure according to clause 5.8.9.7.2;
- 1> if the *RRCReconfigurationSidelink* message includes the *sl-DRX-ConfigUC-PC5*; and
- 1> if the UE accepts the *sl-DRX-ConfigUC-PC5*:
 - 2> configure lower layers to perform sidelink DRX operation according to *sl-DRX-ConfigUC-PC5* for the associated destination as defined in TS 38.321 [3];
- 1> if the *RRCReconfigurationSidelink* message includes the *sl-LatencyBoundIUC-Report*:
 - 2> apply the configured sidelink IUC report latency bound;
- 1> if the *RRCReconfigurationSidelink* message includes the *sl-LocalID-PairList*:
 - 2> configure SRAP entity to perform NR sidelink L2 U2U relay operation accordingly for the end-to-end PC5 connection with the peer L2 U2U Remote UE as defined in TS 38.351 [65];
- 1> if the UE is unable to comply with (part of) the configuration included in the *RRCReconfigurationSidelink* (i.e. sidelink RRC reconfiguration failure):
 - 2> continue using the configuration used prior to the reception of the *RRCReconfigurationSidelink* message;
 - 2> set the content of the *RRCReconfigurationFailureSidelink* message;
 - 3> submit the *RRCReconfigurationFailureSidelink* message to lower layers for transmission;
- 1> if the *RRCReconfigurationSidelink* message includes the *sl-SFN-DFN-Offset*:
 - 2> if the *sl-SFN-DFN-Offset* is set to *setup*:
 - 3> apply the configured SFN-DFN time offset;
 - 2> if the *sl-SFN-DFN-Offset* is set to *release*:
 - 3> release the received *sl-SFN-DFN-Offset*;
- 1> else:
 - 2> set the content of the *RRCReconfigurationCompleteSidelink* message;
 - 3> if the UE rejects the sidelink DRX configuration *sl-DRX-ConfigUC-PC5* received from the peer UE:
 - 4> include the *sl-DRX-ConfigReject* in the *RRCReconfigurationCompleteSidelink* message;
 - 4> consider no sidelink DRX to be applied for the corresponding sidelink unicast communication;
 - 3> submit the *RRCReconfigurationCompleteSidelink* message to lower layers for transmission;

NOTE 1: When the same logical channel is configured with different RLC mode by another UE, the UE handles the case as sidelink RRC reconfiguration failure.

NOTE 2: It is up to the UE implementation whether or not to indicate the rejection to the peer UE for a received sidelink DRX configuration.

NOTE 3: When UE transmits SL-PRS in dedicated SL-PRS resource pool, the sidelink DRX configuration is not applied.

5.8.9.1.4 Void

5.8.9.1.5 Void

5.8.9.1.6 Void

5.8.9.1.7 Void

5.8.9.1.8 Reception of an *RRCReconfigurationFailureSidelink* by the UE

The UE shall perform the following actions upon reception of the *RRCReconfigurationFailureSidelink*:

- 1> stop timer T400 for the destination, if running;
- 1> continue using the configuration used prior to corresponding *RRCReconfigurationSidelink* message;
- 1> if UE is in RRC_CONNECTED:
 - 2> perform the sidelink UE information for NR sidelink communication procedure, as specified in 5.8.3.3 or clause 5.10.15 in TS 36.331 [10];

5.8.9.1.9 Reception of an *RRCReconfigurationCompleteSidelink* by the UE

The UE shall perform the following actions upon reception of the *RRCReconfigurationCompleteSidelink*:

- 1> stop timer T400 for the destination, if running;
- 1> consider the configurations in the corresponding *RRCReconfigurationSidelink* message to be applied.
 - 2> if the *RRCReconfigurationCompleteSidelink* message includes the *sl-DRX-ConfigReject*:
 - 3> consider no sidelink DRX to be applied for the corresponding sidelink unicast communication.

5.8.9.1.10 Sidelink reset configuration

The UE shall:

- 1> release/clear current sidelink radio configuration of this destination received in the *RRCReconfigurationSidelink*;
- 1> release the sidelink DRBs of this destination, in according to clause 5.8.9.1a.1;
- 1> release the additional sidelink RLC bearer of this destination, if configured, in according to clause 5.8.9.1a.5;
- 1> reset the sidelink specific MAC of this destination, except for end-to-end PC5 connection in L2 U2U Relay operation.

NOTE 1: Sidelink radio configuration is not just the resource configuration but may include other configurations included in the *RRCReconfigurationSidelink* message except the sidelink DRBs of this destination.

NOTE 2: After the sidelink DRB release procedure, UE may perform the sidelink DRB addition according to the current sidelink configuration of this destination, received in *sl-ConfigDedicatedNR*, *SIB12* and *SidelinkPreconfigNR*, according to clause 5.8.9.1a.2.

5.8.9.1a Sidelink radio bearer management

5.8.9.1a.1 Sidelink DRB release

5.8.9.1a.1.1 Sidelink DRB release conditions

For NR sidelink communication, a sidelink DRB release is initiated in the following cases:

- 1> for groupcast, broadcast and unicast, if *slrb-Uu-ConfigIndex* (if any) of the sidelink DRB is included in *sl-RadioBearerToReleaseList* in *sl-ConfigDedicatedNR*; or
- 1> for groupcast and broadcast, if no sidelink QoS flow with data indicated by upper layers is mapped to the sidelink DRB for transmission, which is (re)configured by receiving *SIB12* or *SidelinkPreconfigNR*; or
- 1> for groupcast, broadcast and unicast, if *SL-RLC-BearerConfigIndex* (if any) of the sidelink DRB is included in *sl-RLC-BearerToReleaseList/sl-RLC-BearerToReleaseListSizeExt* in *sl-ConfigDedicatedNR*; or
- 1> for unicast, if no sidelink QoS flow with data indicated by upper layers is mapped to the sidelink DRB for transmission, which is (re)configured by receiving *SIB12* or *SidelinkPreconfigNR*, and if no sidelink QoS flow mapped to the sidelink DRB, which is (re)configured by receiving *RRCReconfigurationSidelink*, has data; or
- 1> for unicast, if *SLRB-PC5-ConfigIndex* (if any) of the sidelink DRB is included in *slrb-ConfigToReleaseList* in *RRCReconfigurationSidelink* or if *sl-ResetConfig* is included in *RRCReconfigurationSidelink*; or
- 1> for unicast, when the corresponding PC5-RRC connection is released due to sidelink RLF being detected, according to clause 5.8.9.3; or
- 1> for unicast, when the corresponding PC5-RRC connection is released due to upper layer request according to clause 5.8.9.5; or
- 1> for L2 U2U relay operation, when the corresponding end-to-end PC5 connection failure is detected according to clause 5.8.9.3a; or
- 1> for L2 U2U relay operation, when the corresponding end-to-end PC5-RRC connection is released due to upper layer request according to clause 5.8.9.5a.

5.8.9.1a.1.2 Sidelink DRB release operations

For each sidelink DRB, whose sidelink DRB release conditions are met as in clause 5.8.9.1a.1.1, the UE capable of NR sidelink communication that is configured by upper layers to perform NR sidelink communication shall:

- 1> for groupcast and broadcast; or
- 1> for unicast, if the sidelink DRB release was triggered after the reception of the *RRCReconfigurationSidelink* message; or
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the sidelink DRB release was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or indicated by upper layers:
 - 2> release the PDCP entity for NR sidelink communication associated with the sidelink DRB;
 - 2> if SDAP entity for NR sidelink communication associated with this sidelink DRB is configured:
 - 3> indicate the release of the sidelink DRB to the SDAP entity associated with this sidelink DRB (TS 37.324 [24], clause 5.3.3);
 - 2> release SDAP entities for NR sidelink communication, if any, that have no associated sidelink DRB as specified in TS 37.324 [24] clause 5.1.2;
- 1> for groupcast and broadcast; or
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the sidelink DRB release was triggered due to the configuration received within the *sl-ConfigDedicatedNR*:

- 2> for each *sl-RLC-BearerConfigIndex* included in the received *sl-RLC-BearerToReleaseList/sl-RLC-BearerToReleaseListSizeExt* that is part of the current UE sidelink configuration:
 - 3> release the RLC entity and the corresponding logical channel for NR sidelink communication, associated with the *sl-RLC-BearerConfigIndex*.
- 1> if the sidelink DRB is a per-hop sidelink DRB (i.e. the UE is performing NR sidelink communication with a peer UE without via a L2 U2U Relay UE):
 - 2> for unicast, if the sidelink DRB release was triggered due to the reception of the *RRCReconfigurationSidelink* message; or
 - 2> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the sidelink DRB release was triggered due to the configuration received within the *SIB12*, *SidelinkPreconfigNR* or indicated by upper layers:
 - 3> release the RLC entity and the corresponding logical channel for NR sidelink communication associated with the sidelink DRB;
 - 3> perform the sidelink UE information procedure in clause 5.8.3 for unicast if needed.
- 1> if the sidelink radio link failure is detected for a specific destination:
 - 2> release the PDCP entity, RLC entity and the logical channel of the sidelink DRB for the specific destination.
- 1> if the UE is acting as a L2 U2U Remote UE, and if the end-to-end sidelink DRB release is triggered by end-to-end PC5 connection failure due to per-hop PC5 link failure, in accordance with clause 5.8.9.3a:
 - 2> release the PDCP entity(ies) of the end-to-end sidelink DRB(s) for the specific end-to-end PC5 connection;
- 1> if the sidelink DRB is an end-to-end sidelink DRB in L2 U2U relay operation and the UE is acting as a L2 U2U remote UE:
 - 2> trigger the UE information transfer procedure on sidelink as specified in 5.8.9.11.2;

5.8.9.1a.2 Sidelink DRB addition/modification

5.8.9.1a.2.1 Sidelink DRB addition/modification conditions

For NR sidelink communication, a sidelink DRB addition is initiated only in the following cases:

- 1> if any sidelink QoS flow is (re)configured by *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* and is to be mapped to one sidelink DRB, which is not established; or
- 1> if any sidelink QoS flow is (re)configured by *RRCReconfigurationSidelink* and is to be mapped to a sidelink DRB, which is not established;
- 1> if any sidelink QoS flow is (re)configured by source L2 U2U Remote UE and is mapped to an end-to-end sidelink DRB for transmission when the UE is acting as L2 U2U Relay UE;

The above conditions also apply to L2 U2U Remote UE for end-to-end sidelink DRB addition.

For NR sidelink communication, a sidelink DRB modification is initiated only in the following cases:

- 1> if any of the sidelink DRB related parameters is changed by *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or *RRCReconfigurationSidelink* for one sidelink DRB, which is established;

The above conditions also apply to L2 U2U Remote UE for end-to-end sidelink DRB modification.

5.8.9.1a.2.2 Sidelink DRB addition/modification operations

For the sidelink DRB, whose sidelink DRB addition conditions are met as in clause 5.8.9.1a.2.1, the UE capable of NR sidelink communication that is configured by upper layers to perform NR sidelink communication shall:

- 1> for groupcast and broadcast; or

- 1> for unicast, if the sidelink DRB addition was triggered due to the reception of the *RRCReconfigurationSidelink* message; or
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the sidelink DRB addition was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or indicated by upper layers:
 - 2> if an SDAP entity for NR sidelink communication associated with the destination and the cast type of the sidelink DRB does not exist:
 - 3> establish an SDAP entity for NR sidelink communication as specified in TS 37.324 [24] clause 5.1.1;
 - 2> (re)configure the SDAP entity in accordance with the *sl-SDAP-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-SDAP-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, associated with the sidelink DRB;
 - 2> establish a PDCP entity for NR sidelink communication and configure it in accordance with the *sl-PDCP-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-PDCP-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, associated with the sidelink DRB;
 - 2> for a per-hop sidelink DRB (i.e. the UE is performing NR sidelink communication with a peer UE without via a L2 U2U Relay UE):
 - 3> establish a RLC entity for NR sidelink communication and configure it in accordance with the *sl-RLC-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-RLC-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, associated with sidelink DRB;
 - 3> if this procedure was due to the reception of a *RRCReconfigurationSidelink* message:
 - 4> configure the MAC entity with a logical channel in accordance with the *sl-MAC-LogicalChannelConfigPC5* received in the *RRCReconfigurationSidelink* associated with the sidelink DRB, and perform the sidelink UE information procedure in clause 5.8.3 for unicast if needed;
 - 3> else if this procedure was due to the reception of a *RRCReconfigurationCompleteSidelink* message:
 - 4> configure the MAC entity with a logical channel associated with the sidelink DRB, in accordance with the *sl-MAC-LogicalChannelConfig* received in the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*;
 - 3> else (i.e. for groupcast/broadcast):
 - 4> configure the MAC entity with a logical channel associated with the sidelink DRB, in accordance with the *sl-MAC-LogicalChannelConfig* received in the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* and assign a new LCID to this logical channel.

1> if the DRB is an end-to-end sidelink DRB and the UE is acting as L2 U2U Remote UE:

- 2> trigger the UE information transfer procedure on sidelink as specified in 5.8.9.11.2;

NOTE 1: When a sidelink DRB addition is due to the configuration by *RRCReconfigurationSidelink*, it is up to UE implementation to select the sidelink DRB configuration as necessary transmitting parameters for the sidelink DRB, from the received *sl-ConfigDedicatedNR* (if in RRC_CONNECTED), *SIB12* (if in RRC_IDLE/INACTIVE), *SidelinkPreconfigNR* (if out of coverage) with the same RLC mode as the one configured in *RRCReconfigurationSidelink*.

For the sidelink DRB, whose sidelink DRB modification conditions are met as in clause 5.8.9.1a.2.1, the UE capable of NR sidelink communication that is configured by upper layers to perform NR sidelink communication shall:

- 1> for groupcast and broadcast; or
- 1> for unicast, if the sidelink DRB modification was triggered due to the reception of the *RRCReconfigurationSidelink* message; or
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the sidelink DRB modification was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12* or *SidelinkPreconfigNR*:

- 2> reconfigure the SDAP entity of the sidelink DRB, in accordance with the *sl-SDAP-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-SDAP-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, if included;
- 2> reconfigure the PDCP entity of the sidelink DRB, in accordance with the *sl-PDCP-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-PDCP-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, if included;
- 2> reconfigure the RLC entity of the sidelink DRB, in accordance with the *sl-RLC-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-RLC-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, if included;
- 2> reconfigure the logical channel of the sidelink DRB, in accordance with the *sl-MAC-LogicalChannelConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-MAC-LogicalChannelConfig* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, if included;
- 1> if the DRB is an end-to-end sidelink DRB and the UE is acting as L2 U2U Remote UE:
 - 2> trigger the UE information transfer procedure on sidelink as specified in 5.8.9.11.2.

5.8.9.1a.3 Sidelink SRB release

The UE shall:

- 1> if a PC5-RRC connection release for a specific destination is requested by upper layers or AS layer; or
- 1> if the sidelink radio link failure is detected for a specific destination:
 - 2> release the PDCP entity, RLC entity and the logical channel of the sidelink SRB for PC5-RRC message of the specific destination;
 - 2> consider the PC5-RRC connection is released for the destination.
- 1> if PC5-S transmission for a specific destination is terminated in upper layers:
 - 2> release the PDCP entity, RLC entity and the logical channel of the sidelink SRB(s) for PC5-S message of the specific destination if any;
- 1> if discovery transmission for a specific destination is terminated in upper layers:
 - 2> release the PDCP entity, RLC entity and the logical channel of the sidelink SRB4 for discovery message of the specific destination;
- 1> if an end-to-end PC5-RRC connection release/failure is detected:
 - 2> if the UE is acting L2 U2U Remote UE:
 - 3> release the PDCP entity of the end-to-end sidelink SRB for the end-to-end PC5 connection;
 - 2> release the association between the end-to-end sidelink SRB and the egress PC5 Relay RLC channel, and reconfigure SRAP configuration.

5.8.9.1a.4 Sidelink SRB addition

The UE shall:

- 1> if transmission of PC5-S message for a specific destination is requested by upper layers for sidelink SRB:
 - 2> establish PDCP entity, RLC entity and the logical channel of a sidelink SRB for PC5-S message if needed, as specified in clause 9.1.1.4;
 - 2> if in coverage on the frequency used for the NR sidelink communication as defined in TS 38.304 [20]:
 - 3> indicate the allowed carrier for the RLC bearer of the SRB before the reception of initial *RRCReconfigurationCompleteSidelink* message which confirms SL CA carrier(s) addition as indicated in *sl-FreqInfoList*, to lower layer;

- 2> else:
 - 3> indicate the allowed carrier for the RLC bearer of the SRB before the reception of initial *RRCReconfigurationCompleteSidelink* message which confirms SL CA carrier(s) addition as indicated in *sl-PreconfigFreqInfoList*, to lower layer;
- 1> if transmission of discovery message for a specific destination is requested by upper layers for sidelink SRB:
 - 2> establish PDCP entity, RLC entity and the logical channel of a sidelink SRB4 for discovery message, as specified in clause 9.1.1.4;
- 1> if a PC5-RRC connection establishment for a specific destination is indicated by upper layers:
 - 2> establish PDCP entity, RLC entity and the logical channel of a sidelink SRB for PC5-RRC message of the specific destination if needed, as specified in clause 9.1.1.4;
 - 2> consider the PC5-RRC connection is established for the destination;
 - 2> if in coverage on the frequency used for the NR sidelink communication as defined in TS 38.304 [20]:
 - 3> indicate the allowed carrier for the RLC bearer of the SRB before the reception of initial *RRCReconfigurationCompleteSidelink* message which confirms SL CA carrier(s) addition, as indicated in *sl-FreqInfoList*, to lower layer;
- 2> else:
 - 3> indicate the allowed carrier for the RLC bearer of the SRB before the reception of initial *RRCReconfigurationCompleteSidelink* message which confirms SL CA carrier(s) addition as specified in clause 5.8.9.1.9, as indicated in *sl-PreconfigFreqInfoList*, to lower layer;
- 1> for end-to-end SRB0/1/2/3:
 - 2> if the UE is acting L2 U2U Remote UE:
 - 3> consider the SL-U2U-RLC as specified in clause 9.1.1.4 as the egress PC5 Relay RLC channel;
 - 4> associate this end-to-end sidelink SRB with the SL-U2U-RLC and configure the mapping between the end-to-end sidelink SRB and the egress PC5 Relay RLC channel to SRAP.

5.8.9.1a.5 Additional Sidelink RLC Bearer release

5.8.9.1a.5.1 Additional Sidelink RLC Bearer release conditions

For NR sidelink communication, additional sidelink RLC bearer release is initiated in the following cases:

- 1> for sidelink DRB, the release conditions are met as in clause 5.8.9.1a.1.1 for the associated sidelink DRB; or
- 1> for sidelink SRB 1/2/3, the release conditions are met as in clause 5.8.9.1a.3 for the associated sidelink SRB; or
- 1> for sidelink DRB, if *SL-RLC-BearerConfigIndex* (if any) of the sidelink DRB is included in *sl-RLC-BearerToReleaseList* in *RRCReconfigurationSidelink*; or
- 1> for sidelink DRB, if *SL-RLC-BearerConfigIndex* (if any) of the additional Sidelink RLC Bearer is included in *sl-RLC-BearerToReleaseListSizeExt* in *sl-ConfigDedicatedNR*;

5.8.9.1a.5.2 Additional Sidelink RLC Bearer release operation

The UE shall:

- 1> for groupcast and broadcast; or
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the additional sidelink RLC bearer release was triggered due to the configuration received within the *sl-ConfigDedicatedNR*:
- 2> for each *sl-RLC-BearerConfigIndex* included in the received *sl-RLC-BearerToReleaseListSizeExt* in *sl-ConfigDedicatedNR* that is part of the current UE sidelink configuration:

- 3> release the RLC entity and the corresponding logical channel of the additional sidelink RLC bearer for NR sidelink communication, associated with the *sl-RLC-BearerConfigIndex*.
- 1> for unicast, if the additional sidelink RLC bearer release was triggered due to the reception of the *RRCReconfigurationSidelink* message:
 - 2> for each *SL-RLC-BearerConfigIndex* included in received *sl-RLC-BearerToReleaseList* in *RRCReconfigurationSidelink* that is part of the current UE sidelink configuration:
 - 3> release the RLC entity and the corresponding logical channel of the additional sidelink RLC bearer for NR sidelink communication associated with the *SL-RLC-BearerConfigIndex*;
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the additional sidelink RLC bearer release was triggered due to the configuration received within the *SIB12*, *SidelinkPreconfigNR* or indicated by upper layers:
 - 2> for each *SL-RLC-BearerConfigIndex* included in transmitted *sl-RLC-BearerToReleaseList* in *RRCReconfigurationSidelink* that is part of the current UE sidelink configuration:
 - 3> release the RLC entity and the corresponding logical channel of the additional sidelink RLC bearer for NR sidelink communication associated with the *SL-RLC-BearerConfigIndex*;

5.8.9.1a.6 Additional Sidelink RLC Bearer addition/modification

5.8.9.1a.6.1 Additional Sidelink RLC Bearer addition/modification conditions

For NR sidelink communication, additional sidelink RLC bearer addition is initiated only in the following cases:

- 1> for unicast, for sidelink DRB, if *SL-RLC-BearerConfig* is received in *sl-RLC-BearerToAddModList* in the *RRCReconfigurationSidelink* for a *slrb-PC5-ConfigIndex*; or
- 1> for groupcast and broadcast, for sidelink DRB, if *SL-RLC-BearerConfig* is received in *sl-RLC-BearerToAddModListSizeExt* in *sl-ConfigDedicatedNR* for a *sl-ServedRadioBearer*; or
- 1> for unicast, for sidelink DRB, if *SL-RLC-BearerConfig* is received in *sl-RLC-BearerToAddModListSizeExt* in *sl-ConfigDedicatedNR* for a *sl-ServedRadioBearer*; or
- 1> for groupcast and broadcast, for sidelink DRB, if *SL-RLC-BearerConfig* is received in *sl-RLC-BearerConfigListSizeExt* in *SIB12* or in *SidelinkPreconfigNR* for a *sl-ServedRadioBearer*, if the sidelink DRB has been established as in clause 5.8.9.1a.2 and has not been released as in clause 5.8.9.1a.1, and if the *SL-TxProfile* of all associated QoS flow(s) for the *sl-ServedRadioBearer* indicates *backwardsIncompatible*; or
- 1> for groupcast and broadcast, for sidelink DRB, if *SL-RLC-BearerConfig* is received in *sl-RLC-BearerConfigListSizeExt* in *SIB12* or in *SidelinkPreconfigNR* for a *sl-ServedRadioBearer*, if the sidelink DRB has been established as in clause 5.8.9.1a.2 and has not been released as in clause 5.8.9.1a.1, and if the *SL-TxProfile* of at least one QoS flow for the *sl-ServedRadioBearer* indicates *backwardsCompatible* and UE decides to use PDCP duplication; or
- 1> for unicast, for sidelink DRB, if *SL-RLC-BearerConfig* is received in *sl-RLC-BearerConfigListSizeExt* in *SIB12* or in *SidelinkPreconfigNR* for a *sl-ServedRadioBearer*, and if both UEs support PDCP duplication; or
- 1> for unicast, for sidelink SRB 1/2/3, if both UEs support PDCP duplication and UE decides to use PDCP duplication;

For NR sidelink communication, additional sidelink RLC bearer modification is initiated only in the following cases:

- 1> if any of the additional sidelink RLC bearer related parameters is changed by *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or *RRCReconfigurationSidelink* for one additional sidelink RLC bearer, which is established;

5.8.9.1a.6.2 Additional Sidelink RLC Bearer addition/modification operation

For the additional Sidelink RLC bearer, whose addition conditions are met as in clause 5.8.9.1a.6.1, the UE capable of NR sidelink communication that is configured by upper layers to perform NR sidelink communication shall:

- 1> for groupcast and broadcast; or
- 1> for unicast, if the additional Sidelink RLC bearer addition was triggered due to the reception of the *RRCReconfigurationSidelink* message; or
- 1> for unicast, for DRB, after receiving the *RRCReconfigurationCompleteSidelink* message, if the additional Sidelink RLC bearer addition was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or indicated by upper layers; or
- 1> for unicast, for SRB, after receiving the *RRCReconfigurationCompleteSidelink* message, if the additional Sidelink RLC bearer addition was decided by UE:
 - 2> establish an additional RLC entity for NR sidelink communication and configure it in accordance with each *sl-RLC-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-RLC-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* for SL DRB, or as specified in clause 9.1.1.4 for SL SRB;
 - 2> if this procedure was for Sidelink DRB:
 - 3> if this procedure was due to the reception of a *RRCReconfigurationSidelink* message:
 - 4> configure the MAC entity with a logical channel in accordance with the *sl-MAC-LogicalChannelConfigPC5* received in the *RRCReconfigurationSidelink* associated with the sidelink RLC entity;
 - 3> else if this procedure was due to the reception of a *RRCReconfigurationCompleteSidelink* message:
 - 4> configure the MAC entity with a logical channel associated with the sidelink RLC entity, in accordance with the *sl-MAC-LogicalChannelConfig* received in the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*;
 - 3> else (i.e. for groupcast/broadcast):
 - 4> configure the MAC entity with a logical channel associated with the sidelink RLC entity, in accordance with the *sl-MAC-LogicalChannelConfig* received in the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* and assign a new LCID to this logical channel.
 - 3> if the UE is in RRC_CONNECTED:
 - 4> indicate the allowed carriers for the two RLC bearers of the DRB, as indicated in *sl-AllowedCarriers*, to lower layer;
 - 3> else:
 - 4> indicate the allowed carriers for the two RLC bearers of the DRB, decided by UE implementation, from the sidelink carrier(s) mapped to the sidelink QoS flow(s) configured by the upper layer which is allowed carrier as indicated in *sl-FreqInfoList* as specified in 5.8.9.1a.4 or is additional allowed carrier(s) as specified in 5.8.9.1b.1.2 and 5.8.9.1b.2.2, to lower layer, where the carrier indicated in *sl-FreqInfoList* is used for the RLC bearer if the *SL-TxProfile* of at least one associated QoS flow for the *sl-ServedRadioBearer* indicates *backwardsCompatible*, and the allowed carriers for the two RLC bearers are not overlapping with each other;
- 2> else (i.e., if this procedure was for Sidelink SRB):
 - 3> configure the MAC entity with a logical channel associated with the sidelink RLC entity, as specified in clause 9.1.1.4.
 - 3> if the UE is in RRC_CONNECTED and if *sl-AllowedCarrierFreqSet1/sl-AllowedCarrierFreqSet2* are configured:
 - 4> indicate the allowed carriers for the two RLC bearers of the SRB, as indicated in *sl-AllowedCarrierFreqSet1/sl-AllowedCarrierFreqSet2*, to lower layer;
 - 3> else:
 - 4> indicate the allowed carriers for the two RLC bearers of the SRB, decided by UE implementation, from the allowed carrier as indicated in *sl-FreqInfoList* as specified in 5.8.9.1a.4 and additional

allowed carrier(s) as specified in 5.8.9.1b.1.2 and 5.8.9.1b.2.2, to lower layer, where the allowed carriers for the two RLC bearers are not overlapping with each other;

For the additional Sidelink RLC bearer, whose modification conditions are met as in clause 5.8.9.1a.6.1, the UE capable of NR sidelink communication that is configured by upper layers to perform NR sidelink communication shall:

- 1> for groupcast and broadcast; or
- 1> for unicast, if the additional Sidelink RLC bearer modification was triggered due to the reception of the *RRCReconfigurationSidelink* message; or
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the additional Sidelink RLC bearer modification was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12* or *SidelinkPreconfigNR*:
 - 2> reconfigure the RLC entity of the sidelink DRB, in accordance with the *sl-RLC-ConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-RLC-Config* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, if included;
 - 2> reconfigure the logical channel of the sidelink DRB, in accordance with the *sl-MAC-LogicalChannelConfigPC5* received in the *RRCReconfigurationSidelink* or *sl-MAC-LogicalChannelConfig* received in *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR*, if included.

5.8.9.1b Sidelink Carrier Configuration

5.8.9.1b.1 Sidelink Carrier Release

5.8.9.1b.1.1 Sidelink Carrier Release Condition

For NR sidelink communication, sidelink carrier release is initiated in the following cases:

- 1> for unicast, if *sl-CarrierId* of the sidelink carrier is received in *sl-CarrierToReleaseList* in the *RRCReconfigurationSidelink*; or
- 1> for unicast, if a sidelink carrier failure has been indicated by MAC layer; or
- 1> for unicast, if the sidelink carrier release was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or upper layer; or
- 1> for unicast, if the sidelink SRB(s), DRB(s) or additional sidelink RLC bearer(s), which was associated with the sidelink carrier(s), are released according to clause 5.8.9.1a.3.1, 5.8.9.1a.1.1 or 5.8.9.1a.5.1;

5.8.9.1b.1.2 Sidelink Carrier Release Operation

The UE shall:

- 1> for unicast, if the sidelink carrier release was triggered due to the reception of the *RRCReconfigurationSidelink* message:
 - 2> for each *sl-CarrierId* value included in the *sl-CarrierToReleaseList*:
 - 3> if the current UE configuration includes a sidelink carrier with value *sl-CarrierId*:
 - 4> release the sidelink carrier for reception.
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the sidelink carrier release was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or indicated by upper layers:
 - 2> for each *sl-CarrierId* value included in the *sl-CarrierToReleaseList*:
 - 3> if the current UE configuration includes a sidelink carrier with value *sl-CarrierId*:
 - 4> release the sidelink carrier for transmission;

- 4> indicate the sidelink carrier not as allowed carrier for the RLC bearer of the SRB to lower layer;
- 4> indicate the sidelink carrier not as additional allowed carrier for the RLC bearer of the DRB(s), to lower layer.

5.8.9.1b.2 Sidelink Carrier Addition

5.8.9.1b.2.1 Sidelink Carrier Addition Condition

For NR sidelink communication, sidelink carrier addition is initiated in the following cases:

- 1> for unicast, if *sl-CarrierId* of the sidelink carrier is received in *sl-CarrierToAddModList* in the *RRCReconfigurationSidelink*; or
- 1> for unicast, if a sidelink SRB(s), DRB(s) or additional sidelink RLC bearer(s), which is associated with the sidelink carrier(s) (taking into account at least carrier(s) mapped to the sidelink QoS flow(s) configured by the upper layer, carriers configured in *sl-ConfigDedicatedNR*, *SIB12* or *SidelinkPreconfigNR*, and carrier(s) supported by both UEs), are established according to clause 5.8.9.1a.4, 5.8.9.1a.2.1 or 5.8.9.1a.6.1;

5.8.9.1b.2.2 Sidelink Carrier Addition Operation

The UE shall:

- 1> for unicast, if the sidelink carrier addition was triggered due to the reception of the *RRCReconfigurationSidelink* message:
 - 2> for each *sl-CarrierId* value included in the *sl-CarrierToAddModList* that is not part of the current UE configuration (sidelink carrier addition):
 - 3> add the sidelink carrier, corresponding to the *sl-CarrierId*, in accordance with the *sl-OffsetToCarrier*, *subcarrierSpacing*, *carrierBandwidth* and *sl-AbsoluteFrequencyPointA* for reception;
- 1> for unicast, after receiving the *RRCReconfigurationCompleteSidelink* message, if the sidelink carrier addition was triggered due to the configuration received within the *sl-ConfigDedicatedNR*, *SIB12*, *SidelinkPreconfigNR* or indicated by upper layers:
 - 2> for each *sl-CarrierId* value included in the *sl-CarrierToAddModList* that is not part of the current UE configuration (sidelink carrier addition):
 - 3> add the sidelink carrier, corresponding to the *sl-CarrierId*, in accordance with the *sl-AbsoluteFrequencyPointA* for transmission;
 - 3> indicate the sidelink carrier as additional allowed carrier for the RLC bearer of the SRB, in addition to carrier as indicated in *sl-FreqInfoList*, from carrier(s) mapped to the sidelink QoS flow(s) configured by the upper layer, to lower layer;
 - 3> indicate the sidelink carrier as additional allowed carrier for the RLC bearer of the DRB(s), for which the sidelink carrier is mapped to the sidelink QoS flow(s) configured by the upper layer, to lower layer;

5.8.9.2 Sidelink UE capability transfer

5.8.9.2.1 General

This clause describes how the UE compiles and transfers its sidelink UE capability information for unicast to the initiating UE.

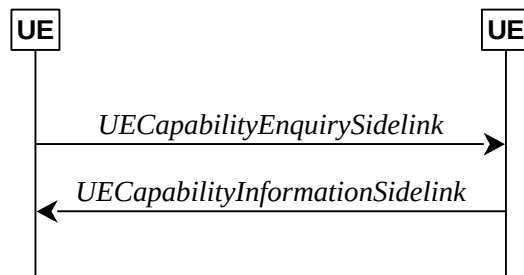 


Figure 5.8.9.2.1-1: Sidelink UE capability transfer

5.8.9.2.2 Initiation

The UE may initiate the sidelink UE capability transfer procedure upon indication from upper layer when it needs (additional) UE radio access capability information.

5.8.9.2.3 Actions related to transmission of the *UECapabilityEnquirySidelink* by the UE

The initiating UE shall set the contents of *UECapabilityEnquirySidelink* message as follows:

- 1> include in UE radio access capabilities for sidelink within *ue-CapabilityInformationSidelink*, if needed;

NOTE 1: It is up to initiating UE to decide whether *ue-CapabilityInformationSidelink* should be included.

- 1> set *frequencyBandListFilterSidelink* to include frequency bands for which the peer UE is requested to provide supported bands and band combinations;

NOTE 2: The initiating UE is not allowed to send the *UECapabilityEnquirySidelink* message without including the field *frequencyBandListFilterSidelink* except for end-to-end L2 U2U relay NR sidelink communication.

- 1> submit the *UECapabilityEnquirySidelink* message to lower layers for transmission.

5.8.9.2.4 Actions related to reception of the *UECapabilityEnquirySidelink* by the UE

The peer UE shall set the contents of *UECapabilityInformationSidelink* message as follows:

- 1> include UE radio access capabilities for sidelink within *ue-CapabilityInformationSidelink*;

- 1> compile a list of "candidate band combinations" only consisting of bands included in *frequencyBandListFilterSidelink*, and prioritized in the order of *frequencyBandListFilterSidelink* (i.e. first include band combinations containing the first-listed band, then include remaining band combinations containing the second-listed band, and so on).

- 1> include into *supportedBandCombinationListSidelinkNR* as many band combinations as possible from the list of "candidate band combinations", starting from the first entry;

- 1> include the received *frequencyBandListFilterSidelink* in the field *appliedFreqBandListFilter* of the requested UE capability;

- 1> submit the *UECapabilityInformationSidelink* message to lower layers for transmission.

NOTE 1: If the UE cannot include all band combinations due to message size or list size constraints, it is up to UE implementation which band combinations it prioritizes.

NOTE 2: It is up to UE implementation whether to include fields other than *pdcp-ParametersSidelink* in the *UECapabilityInformationSidelink* message for end-to-end L2 U2U relay NR sidelink communication.

5.8.9.3 Sidelink radio link failure related actions

The UE shall:

- 1> upon indication from sidelink RLC entity that the maximum number of retransmissions for a specific destination has been reached; or

- 1> upon T400 expiry for a specific destination; or
- 1> upon indication from MAC entity that HARQ-based Sidelink RLF for a specific destination has been detected;
or
- 1> upon integrity check failure indication from sidelink PDCP entity concerning SL-SRB2 or SL-SRB3 for a specific destination; or
- 1> upon indication of consistent sidelink LBT failures for all RB sets for a specific destination from MAC entity:
 - 2> consider sidelink radio link failure to be detected for this destination;
 - 2> release the DRBs (if any) of this destination, according to clause 5.8.9.1a.1;
 - 2> release the SRBs of this destination, according to clause 5.8.9.1a.3;
 - 2> release the PC5 Relay RLC channels of this destination if configured, in according to clause 5.8.9.7.1;
 - 2> discard the NR sidelink communication related configuration of this destination;
 - 2> reset the sidelink specific MAC of this destination, except for end-to-end PC5 connection in L2 U2U Relay operation;
 - 2> consider the PC5-RRC connection is released for the destination;
 - 2> indicate the release of the PC5-RRC connection to the upper layers for this destination (i.e. PC5 is unavailable);
 - 2> if UE is in RRC_CONNECTED:
 - 3> if the UE is acting as L2 U2N Remote UE for the destination:
 - 4> if MP is configured, and neither MCG transmission nor indirect path transmission is suspended:
 - 5> initiate the indirect path failure information procedure as specified in 5.7.3c;
 - 4> else (i.e., MP is not configured, or MP is configured and MCG transmission or indirect path transmission is suspended):
 - 5> initiate the RRC connection re-establishment procedure as specified in 5.3.7;
 - 3> else:
 - 4> perform the sidelink UE information for NR sidelink communication procedure, as specified in 5.8.3.3;
 - 2> if the UE is acting as L2 U2U Relay UE for the destination which identifies a connected L2 U2U Remote UE:
 - 3> consider the end-to-end PC5 connection failure for the end-to-end PC5 connection(s) over the per-hop PC5 link established with the L2 U2U Remote UE;
 - 3> send *NotificationMessageSidelink* to the peer L2 U2U Remote UE(s) of the end-to-end PC5 connection(s), in accordance with 5.8.9.10.
 - 3> initiate the end-to-end PC5 connection failure related actions as specified in 5.8.9.3b;
 - 2> if the UE is acting as L2 U2U Remote UE for the destination which identifies a connected L2 U2U Relay UE:
 - 3> consider the end-to-end PC5 connection failure for the end-to-end PC5 connection(s) over the per-hop PC5 link established with the L2 U2U Relay UE;
 - 3> initiate the end-to-end PC5 connection failure related actions as specified in 5.8.9.3a;

NOTE: It is up to UE implementation on whether and how to indicate to upper layers to maintain the keep-alive procedure [55].

5.8.9.3a End-to-end PC5 connection failure related actions performed by L2 U2U Remote UE

The UE acting as NR sidelink L2 U2U Remote UE shall:

- 1> upon detection of end-to-end PC5 connection failure due to per-hop PC5 link failure, in accordance with clause 5.8.9.3; or
- 1> upon detection of end-to-end PC5 connection failure due to per-hop PC5 link release, in accordance with clause 5.8.9.5; or
- 1> upon T400 expiry for an end-to-end PC5 connection; or
- 1> upon integrity check failure indication from sidelink PDCP entity concerning SL-SRB2 or SL-SRB3 for an end-to-end PC5 connection; or
- 1> upon detection end-to-end PC5 connection failure due to reception of *NotificationMessageSidelink* indicating PC5 RLF from the L2 U2U Relay UE for a specific destination based on the received *sl-DestinationIdentityRemoteUE*, in accordance with clause 5.8.9.10.4:
 - 2> release the end-to-end DRBs for this end-to-end PC5 connection, according to clause 5.8.9.1a.1;
 - 2> release the end-to-end SRBs for this end-to-end PC5 connection, according to clause 5.8.9.1a.3;
 - 2> discard the end-to-end NR sidelink communication related radio resources and configuration for this end-to-end PC5 connection, including local ID pair in SRAP configuration;
 - 2> consider the end-to-end PC5-RRC connection is released for this end-to-end PC5 connection;
 - 2> indicate the release of the end-to-end PC5-RRC connection to the upper layers;
 - 2> if the end-to-end PC5 connection failure is due to T400 expiry or integrity check failure of SL-SRB2 or SL-SRB3:
 - 3> send *RemoteUEInformationSidelink* message to the L2 U2U Relay UE of the end-to-end PC5 connection(s) in accordance with 5.8.9.8.2;
- 1> if the PC5 link between the UE and L2 U2U relay UE is not needed for U2U relay operation, but not released:
 - 2> if the UE is in RRC_IDLE or RRC_INACTIVE or out of coverage:
 - 3> trigger the PC5 Relay RLC channel derivation procedure, according to clause 5.8.9.7.0.

5.8.9.3b End-to-end PC5 connection failure/release related actions performed by L2 U2U Relay UE

The UE acting as NR sidelink L2 U2U Relay UE shall:

- 1> upon detection end-to-end PC5 connection failure due to per-hop PC5 link failure, in accordance with clause 5.8.9.3; or
- 1> upon detection end-to-end PC5 connection failure due to per-hop PC5 link release, in accordance with clause 5.8.9.5; or
- 1> upon reception of *RemoteUEInformationSidelink* indicating end-to-end connection release or failure for a specific destination based on the received *sl-DestinationIdentityRemoteUE*, in accordance with clause 5.8.9.8.3:
 - 2> discard the end-to-end NR sidelink communication related radio resources and configuration for this end-to-end PC5 connection, including end-to-end SRB/DRB related configuration, QoS related configuration, SRAP configuration;
 - 2> if the PC5 link between L2 U2U relay UE and the peer L2 U2U remote UE is still available:
 - 3> if the UE is in RRC_IDLE or RRC_INACTIVE or out of coverage:
 - 4> trigger the PC5 Relay RLC channel derivation procedure, according to clause 5.8.9.7.0;

3> if the UE is in RRC_CONNECTED:

4> initiate sidelink UE information procedure according to clause 5.8.3.2.

5.8.9.4 Sidelink common control information

5.8.9.4.1 General

The sidelink common control information is carried by *MasterInformationBlockSidelink*. The sidelink common control information may change at any transmission, i.e. neither a modification period nor a change notification mechanism is used. This procedure also applies to NR sidelink discovery.

A UE configured to receive or transmit NR sidelink communication/discovery/positioning shall:

1> if the UE has a selected SyncRef UE, as specified in 5.8.6:

2> ensure having a valid version of the *MasterInformationBlockSidelink* message of that SyncRef UE;

5.8.9.4.2 Actions related to reception of *MasterInformationBlockSidelink* message

Upon receiving *MasterInformationBlockSidelink*, the UE shall:

1> apply the values included in the received *MasterInformationBlockSidelink* message.

5.8.9.4.3 Transmission of *MasterInformationBlockSidelink* message

The UE shall set the contents of the *MasterInformationBlockSidelink* message as follows:

1> if in coverage on the frequency used for the NR sidelink communication/positioning as defined in TS 38.304 [20].

2> set *inCoverage* to true;

2> if *tdd-UL-DL-ConfigurationCommon* is included in the received *SIB1*:

3> set *sl-TDD-Config* to the value representing the same meaning as that is included in *tdd-UL-DL-ConfigurationCommon*, as described in TS 38.213, clause 16.1 [13];

2> else:

3> set *sl-TDD-Config* to the value as specified in TS 38.213 [13], clause 16.1;

2> if *syncInfoReserved* is included in an entry of configured *sl-SyncConfigList* corresponding to the concerned frequency from the received *SIB12*:

3> set *reservedBits* to the value of *syncInfoReserved* in the received *SIB12*;

2> else:

3> set all bits in *reservedBits* to 0;

1> else if out of coverage on the frequency used for NR sidelink communication/positioning as defined in TS 38.304 [20]; and the concerned frequency is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *RRCReconfiguration* or in *sl-FreqInfoList/sl-FreqInfoListSizeExt* within *SIB12*:

2> set *inCoverage* to true;

2> set *reservedBits* to the value of the corresponding field included in the preconfigured sidelink parameters (i.e. *sl-PreconfigGeneral* in *SidelinkPreconfigNR* defined in 9.3);

2> set *sl-TDD-Config* to the value representing the same meaning as that is included in the corresponding field included in the preconfigured sidelink parameters (i.e. *sl-PreconfigGeneral* in *SL-PreconfigurationNR* defined in 9.3) as described in TS 38.213, clause 16.1 [13];

- 1> else if out of coverage on the frequency used for NR sidelink communication/positioning as defined in TS 38.304 [20]; and the UE selects GNSS as the synchronization reference and *sl-SSB-TimeAllocation3* is not configured for the frequency used in *SidelinkPreconfigNR*:
 - 2> set *inCoverage* to *true*;
 - 2> set *reservedBits* to the value of the corresponding field included in the preconfigured sidelink parameters (i.e. *sl-PreconfigGeneral* in *SidelinkPreconfigNR* defined in 9.3);
 - 2> set *sl-TDD-Config* to the value representing the same meaning as that is included in the corresponding field included in the preconfigured sidelink parameters (i.e. *sl-PreconfigGeneral* in *SL-PreconfigurationNR* defined in 9.3) as described in TS 38.213, clause 16.1 [13];
- 1> else if the UE has a selected SyncRef UE (as defined in 5.8.6):
 - 2> set *inCoverage* to *false*;
 - 2> set *sl-TDD-Config* and *reservedBits* to the value of the corresponding field included in the received *MasterInformationBlockSidelink*;
- 1> else:
 - 2> set *inCoverage* to *false*;
 - 2> set *reservedBits* to the value of the corresponding field included in the preconfigured sidelink parameters (i.e. *sl-PreconfigGeneral* in *SidelinkPreconfigNR* defined in 9.3);
 - 2> set *sl-TDD-Config* to the value representing the same meaning as that is included in the corresponding field included in the preconfigured sidelink parameters (i.e. *sl-PreconfigGeneral* in *SL-PreconfigurationNR* defined in 9.3) as described in TS 38.213, clause 16.1 [13];
- 1> set *directFrameNumber* and *slotIndex* according to the slot used to transmit the SLSS, as specified in 5.8.5.3;
- 1> submit the *MasterInformationBlockSidelink* to lower layers for transmission upon which the procedure ends;

5.8.9.5 Actions related to PC5-RRC connection release requested by upper layers

The UE initiates the procedure when upper layers request the release of the PC5-RRC connection as specified in TS 24.587 [57] or TS 24.554 [72]. The UE shall not initiate the procedure for power saving purposes.

The UE shall:

- 1> if the PC5-RRC connection release for the specific destination is requested by upper layers:
 - 2> discard the NR sidelink communication related configuration of this destination;
 - 2> release the DRBs of this destination if configured, in according to clause 5.8.9.1a.1;
 - 2> release the SRBs of this destination, in according to clause 5.8.9.1a.3;
 - 2> release the PC5 Relay RLC channels if configured, in according to clause 5.8.9.7.1;
 - 2> reset the sidelink specific MAC of this destination except for end-to-end PC5-RRC connection in L2 U2U relay operation.
 - 2> consider the PC5-RRC connection is released for the destination;
- 2> if the UE is acting as MP remote UE, and this destination identifies a connected MP relay UE:
 - 3> if neither MCG transmission nor indirect path transmission is suspended:
 - 4> initiate the indirect path failure information procedure as specified in 5.7.3c to report indirect path failure;
 - 3> else if T301 is not running:
 - 4> initiate the RRC connection re-establishment procedure as specified in 5.3.7;

- 2> if the UE is acting as L2 U2U Remote UE, and this destination identifies a connected L2 U2U Relay UE:
 - 3> consider the end-to-end PC5 connection failure for the end-to-end PC5 connection(s) over the per-hop PC5 link established with the L2 U2U Relay UE;
 - 3> initiate the end-to-end PC5 connection failure related actions as specified in 5.8.9.3a;
- 2> if the UE is acting as L2 U2U Relay UE, and this destination identifies a connected L2 U2U Remote UE:
 - 3> consider the end-to-end PC5 connection failure for the end-to-end PC5 connection(s) over the per-hop PC5 link established with the L2 U2U Remote UE;
 - 3> send *NotificationMessageSidelink* message to the peer L2 U2U Remote UE(s) for the end-to-end PC5 connection(s) in accordance with 5.8.9.10;
 - 3> initiate the end-to-end PC5 connection failure related actions as specified in 5.8.9.3b;

5.8.9.5a Actions related to end-to-end PC5-RRC connection release performed by L2 U2U Remote UE

The UE acting as sidelink L2 U2U Remote UE shall:

- 1> if the end-to-end PC5-RRC connection release is requested by upper layers as specified in TS 23.304 [65]:
 - 2> release the end-to-end DRBs for this end-to-end PC5-RRC connection if configured, in according to clause 5.8.9.1a.1;
 - 2> release the end-to-end SRBs for this end-to-end PC5-RRC connection, in according to clause 5.8.9.1a.3;
 - 2> discard all the radio resources and configuration for this end-to-end PC5-RRC connection, including local ID pair in SRAP configuration;
 - 2> consider the end-to-end PC5-RRC connection is released for this end-to-end PC5-RRC connection;
 - 2> send *RemoteUEInformationSidelink* message to the L2 U2U Relay UE of the end-to-end PC5 connection(s) in accordance with 5.8.9.8.2;

5.8.9.6 Sidelink UE assistance information

5.8.9.6.1 General

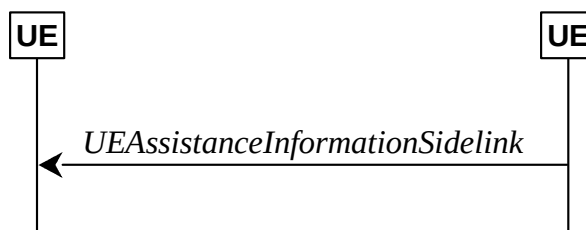 


Figure 5.8.9.6.1-1: Sidelink UE assistance information

The purpose of this procedure is for a UE to inform its peer UE of the sidelink DRX assistance information used to determine the sidelink DRX configuration for unicast communication.

For sidelink unicast, a UE may include its desired sidelink DRX configurations in the *UEAssistanceInformationSidelink* as the sidelink DRX assistance information which is transmitted to its peer UE.

NOTE: It is up to UE implementation to determine its desired sidelink DRX configurations for unicast communication.

5.8.9.6.2 Initiation

For sidelink unicast, if both a RX UE and its peer TX UE for a direction of sidelink communication are capable of sidelink DRX, the RX UE that is interested in sending the sidelink DRX assistance information may send the *UEAssistanceInformationSidelink* as the sidelink DRX assistance information to its peer UE when the sidelink DRX assistance information has not been sent previously or when the previously transmitted sidelink DRX assistance information has changed.

5.8.9.6.3 Actions related to reception of *UEAssistanceInformationSidelink* message

For sidelink unicast, when a UE is in RRC_CONNECTED and is performing sidelink operation with resource allocation mode 1, it may report the sidelink DRX assistance information received within the *UEAssistanceInformationSidelink* from its peer UE to the network as specified in 5.8.3. For sidelink unicast, when a UE is in RRC_CONNECTED and is performing sidelink operation with resource allocation mode 2 or is in RRC_IDLE or RRC_INACTIVE or out of coverage, regardless of whether the UE has obtained the sidelink DRX assistance information from the *UEAssistanceInformationSidelink* transmitted from its peer UE or not, it may determine the sidelink DRX configuration *SL-DRX-ConfigUC* for its peer UE.

NOTE: When UE determines the sidelink DRX configuration for its peer UE, it may take the sidelink DRX assistance information received from its peer UE into account.

5.8.9.7 PC5 Relay RLC channel management for L2 U2N or U2U relay

5.8.9.7.0 Derivation of PC5 Relay RLC channel configuration

An L2 U2U Remote UE/L2 U2U Relay UE in RRC_IDLE or in RRC_INACTIVE or out of coverage shall derive PC5 Relay RLC channel configuration based on the per-hop QoS requirements. The update of the PC5 Relay RLC channel configuration can be triggered upon reception of the *UEInformationRequestSidelink* or *UEInformationResponseSidelink* due to the update of the per-hop QoS requirements, as described in clause 5.8.9.11.3 and 5.8.9.11.4, or upon detection of end-to-end PC5 connection failure/release, as described in clause 5.8.9.3a and 5.8.9.3b. The UE shall perform PC5 Relay RLC channel release/addition/modification procedure when the corresponding PC5 Relay RLC channel configuration is released/added/modified.

The source L2 U2U Remote UE and L2 U2U Relay UE derive the configuration for the corresponding PC5 Relay RLC channel based on *SIB12*/Preconfiguration, as follows:

- The source L2 U2U Remote UE derives the configuration for the PC5 Relay RLC channel(s) between the source L2 U2U Remote UE and L2 U2U Relay UE (i.e. the first hop PC5 Relay RLC channel(s)), by aggregating the QoS profile(s) of the QoS flow(s) with split QoS information on the first hop into a per-SLRB level QoS profile for each end-to-end sidelink DRB as described in clause 5.8.9.11.4, and considering the *SL-RLC-BearerConfig* in either *sl-RLC-BearerConfigList* or *sl-RLC-BearerPreConfigList* (linked to the *SL-RadioBearerConfig* which matches the per-SLRB level QoS profile) as the first hop PC5 Relay RLC channel configuration.
- The L2 U2U Relay UE derives the configuration for the PC5 Relay RLC channel(s) between L2 U2U Relay UE and the target L2 U2U Remote UE (i.e. the second hop PC5 Relay RLC channel(s)), by aggregating the QoS profile(s) of the QoS flow(s) with split QoS information on the second hop into a per-SLRB level QoS profile for each end-to-end sidelink DRB as described in clause 5.8.9.11.3, and considering the *SL-RLC-BearerConfig* in either *sl-RLC-BearerConfigList* or *sl-RLC-BearerPreConfigList* (linked to the *SL-RadioBearerConfig* which matches the per-SLRB level QoS profile) as the second hop PC5 Relay RLC channel configuration.

5.8.9.7.1 PC5 Relay RLC channel release

The UE shall:

- 1> if the PC5 Relay RLC channel release was triggered after the reception of the *RRCReconfigurationSidelink* message; or
- 1> after receiving the *RRCReconfigurationCompleteSidelink* message, if the PC5 Relay RLC channel release was triggered due to the configuration received within the *sl-ConfigDedicatedNR*:

- 2> for each *SL-RLC-ChannelID* in *sl-RLC-ChannelToReleaseList* received in *sl-ConfigDedicatedNR* within *RRCReconfiguration*, or for each *SL-RLC-ChannelID* included in the received *sl-RLC-ChannelToReleaseListPC5* that is part of the current UE sidelink configuration:
- 3> release the RLC entity and the corresponding logical channel associated with the *SL-RLC-ChannelID*;
- 1> after receiving the *RRCReconfigurationCompleteSidelink* message, if the PC5 Relay RLC channel release was triggered based on the derivation of PC5 Relay RLC channel configuration for end-to-end sidelink DRB(s) as specified in 5.8.9.7.0:
- 2> release the RLC entity and the corresponding logical channel;
- 1> if the PC5 Relay RLC channel release was triggered for a specific destination by upper layers as specified in 5.8.9.5, or due to sidelink RLF as specified in 5.8.9.3:
- 2> release the RLC entity and the corresponding logical channel associated with the *SL-RLC-ChannelID* of the specific destination.

5.8.9.7.2 PC5 Relay RLC channel addition/modification

Upon PC5-RRC connection establishment between the L2 U2N Relay UE and L2 U2N Remote UE, the L2 U2N Relay UE shall:

- 1> establish a SRAP entity as specified in TS 38.351 [66], if no SRAP entity has been established;
- 1> apply RLC specified configuration of SL-RLC0 as specified in clause 9.1.1.4;
- 1> apply RLC default configuration of SL-RLC1 as defined in clause 9.2.4 if the L2 U2N Relay UE is in RRC_IDLE/INACTIVE state;

Upon PC5-RRC connection establishment between two UEs for L2 U2U relay operation, the L2 U2U Relay UE and the L2 U2U Remote UE shall:

- 1> establish a SRAP entity as specified in TS 38.351 [66], if no SRAP entity has been established;
- 1> apply RLC specified configuration of SL-U2U-RLC as specified in clause 9.1.1.4;

The UE shall:

- 1> if the PC5 Relay RLC channel addition/modification was triggered due to the reception of the *RRCReconfigurationSidelink* message; or
- 1> after receiving the *RRCReconfigurationCompleteSidelink* message, if the PC5 Relay RLC channel addition/modification was triggered due to the configuration received within the *sl-ConfigDedicatedNR*; or
- 1> after receiving the *RRCReconfigurationCompleteSidelink* message, if the PC5 Relay RLC channel addition/modification was triggered based on the derivation of PC5 Relay RLC channel configuration(s) for end-to-end sidelink DRB(s) as specified in 5.8.9.7.0:
- 2> if the current configuration contains a PC5 Relay RLC channel with the received *sl-RLC-ChannelID* or *sl-RLC-ChannelID-PC5*; or
- 2> if the configuration in *SIB12* or *SidelinkPreconfigNR* has updated, based on which the PC5 Relay RLC channel is derived:
- 3> reconfigure the sidelink RLC entity in accordance with the received *sl-RLC-Config* or *sl-RLC-ConfigPC5*;
- 3> reconfigure the sidelink MAC entity with a logical channel in accordance with the received *sl-MAC-LogicalChannelConfig* or *sl-MAC-LogicalChannelConfigPC5*;
- 2> else (a PC5 Relay RLC channel with the received *sl-RLC-ChannelID* or *sl-RLC-ChannelID-PC5* was not configured before):
- 3> establish a sidelink RLC entity in accordance with the received *sl-RLC-Config* (in *sl-ConfigDedicatedNR*, or *SIB12*, or *SidelinkPreconfigNR*) or *sl-RLC-ConfigPC5*;

- 3> configure the sidelink MAC entity with a logical channel in accordance with the received *sl-MAC-LogicalChannelConfig* or *sl-MAC-LogicalChannelConfigPC5*.

5.8.9.8 Remote UE information

5.8.9.8.1 General

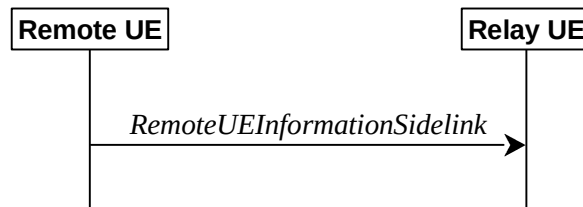 


Figure 5.8.9.8.1-1: Remote UE information

This procedure is used by the L2 U2N Remote UE in RRC_IDLE/RRC_INACTIVE to inform about the required SIB(s) /posSIB(s), provide Paging related information to the connected L2 U2N Relay UE, request the SFN-DFN offset from the connected L2 U2N Relay UE, and trigger L2 U2N Relay UE in RRC_IDLE/RRC_INACTIVE to enter RRC_CONNECTED during indirect path addition/change in MP operation. This procedure is also used by the L2 U2U Remote UE to send end-to-end PC5 connection release/failure related information to L2 U2U Relay UE.

This procedure is used by the L2 U2N Remote UE in RRC_CONNECTED to request the SFN-DFN offset from the connected L2 U2N Relay UE.

NOTE: MIB is not required by a L2 U2N Remote UE.

5.8.9.8.2 Actions related to transmission of *RemoteUEInformationSidelink* message

When entering RRC_IDLE or RRC_INACTIVE, or upon change in any of the information in the *RemoteUEInformationSidelink* while in RRC_IDLE or RRC_INACTIVE, the L2 U2N Remote UE shall:

- 1> if the UE has SIB request information to provide (e.g. the UE has not stored a valid version of a SIB, in accordance with clause 5.2.2.2.1, of one or several required SIB(s) in accordance with clause 5.2.2.1 and the requested SIB has not been indicated in *RemoteUEInformationSidelink* message to the L2 U2N Relay UE before):
 - 2> include *sl-RequestedSIB-List* in the *RemoteUEInformationSidelink* to indicate the requested SIB(s);
- 1> if the UE has not stored a valid version, in accordance with clause 5.2.2.2.1, of one or several posSIB(s) that the UE requires for a positioning operation, and the requested posSIB has not been indicated in *RemoteUEInformationSidelink* message to the L2 U2N Relay UE before, and the connected L2 U2N relay UE set *posSIB-ForwardingSupported* to *supported*:
 - 2> include *sl-RequestedPosSIB-List* in the *RemoteUEInformationSidelink* to indicate the requested posSIB(s);
- 1> if the UE needs the SFN-DFN offset based on the request from upper layers and the connected L2 U2N relay UE set *sfn-DFN-OffsetSupported* to *supported*:
 - 2> set *sl-SFN-DFN-OffsetRequested* to *true*;
- 1> if the UE has paging related information to provide (e.g. the UE has not sent *sl-PagingInfo-RemoteUE* in the *RemoteUEInformationSidelink* message to the L2 U2N Relay UE before), set *sl-PagingInfo-RemoteUE* as follows:
 - 2> if the L2 U2N Remote UE is in RRC_IDLE:
 - 3> include *ng-5G-S-TMSI* in the *sl-PagingIdentityRemoteUE*;
 - 3> if the UE specific DRX cycle is configured by upper layer, set *sl-PagingCycleRemoteUE* to the value of UE specific Uu DRX cycle configured by upper layer;
 - 2> else if the L2 U2N Remote UE is in RRC_INACTIVE:

- 3> include *ng-5G-S-TMSI* and *fullI-RNTI* in the *sl-PagingIdentityRemoteUE*;
- 3> if the UE specific DRX cycle is configured by upper layer,
 - 4> set *sl-PagingCycleRemoteUE* to the minimum value of UE specific Uu DRX cycles (configured by upper layer and configured by RRC);
- 3> else:
 - 4> set *sl-PagingCycleRemoteUE* to the value of UE specific DRX cycle configured by RRC;
- 1> submit the *RemoteUEInformationSidelink* message to lower layers for transmission;

When entering RRC_CONNECTED, if L2 U2N remote UE had sent *sl-RequestedSIB-List*, *sl-RequestedPosSIB-List*, and/or *sl-PagingInfo-RemoteUE*, the L2 U2N Remote UE shall:

- 1> set the *sl-RequestedSIB-List* to the value *release* if requested before;
- 1> set the *sl-RequestedPosSIB-List* to the value *release* if requested before;
- 1> set the *sl-PagingInfo-RemoteUE* to the value *release* if sent before;
- 1> submit the *RemoteUEInformationSidelink* message to lower layers for transmission;

Upon any change in the need of SFN-DFN offset while in RRC_CONNECTED, the L2 U2N Remote UE shall:

- 1> if the UE needs the SFN-DFN offset based on the request from upper layers and the connected L2 U2N relay UE set *sfn-DFN-OffsetSupported* to *supported*;
- 2> set *sl-SFN-DFN-OffsetRequested* to *true*;
- 1> submit the *RemoteUEInformationSidelink* message to lower layers for transmission;

The L2 U2N Remote UE in RRC_CONNECTED shall:

- 1> if the UE is configured with *sl-IndirectPathAddChange* set to *setup*, and not configured with split SRB1 with duplication:
 - 2> include *connectionForMP*;
 - 2> submit the *RemoteUEInformationSidelink* message to lower layers for transmission;

The L2 U2U Remote UE shall:

- 1> upon end-to-end PC5-RRC connection release; or
- 1> upon end-to-end PC5-RRC connection failure due to T400 expiry or integrity check failure of SL-SRB2 or SL-SRB3:
 - 2> include *sl-DestinationIdentityRemoteUE*;
 - 2> submit the *RemoteUEInformationSidelink* message to lower layers for transmission;

5.8.9.8.3 Reception of *RemoteUEInformationSidelink* message by the L2 U2N/U2U Relay UE

The L2 U2N Relay UE shall:

- 1> if the *RemoteUEInformationSidelink* includes the *sl-PagingInfo-RemoteUE*:
 - 2> if the UE is in RRC_CONNECTED on an active BWP with common search space configured including *pagingSearchSpace*; or
 - 2> if the UE is in RRC_IDLE or RRC_INACTIVE:
 - 3> if the *sl-PagingInfo-RemoteUE* is set to *setup*:

- 4> monitor the *Paging* message at the L2 U2N Remote UE's paging occasion calculated according to *sl-PagingIdentityRemoteUE* and *sl-PagingCycleRemoteUE* included in *sl-PagingInfo-RemoteUE*;
- 3> else (the *sl-PagingInfo-RemoteUE* is set to *release*):
 - 4> stop monitoring the *Paging* message at the L2 U2N Remote UE's paging occasion;
 - 4> release the received paging information in *sl-PagingInfo-RemoteUE*;
- 2> else (the UE is in RRC_CONNECTED on an active BWP without *pagingSearchSpace* configured):
 - 3> if the *sl-PagingInfo-RemoteUE* is set to *setup*:
 - 4> include the received *sl-PagingIdentityRemoteUE* in *SidelinkUEInformationNR* message and perform Sidelink UE information transmission in accordance with 5.8.3;
 - 3> else (the *sl-PagingInfo-RemoteUE* is set to *release*):
 - 4> initiate transmission of the *SidelinkUEInformationNR* message to release the *sl-PagingIdentityRemoteUE* in *SidelinkUEInformationNR* message in accordance with 5.8.3;
 - 4> release the received paging information in *sl-PagingInfo-RemoteUE*;
- 1> if the *RemoteUEInformationSidelink* includes the *sl-RequestedSIB-List*:
 - 2> if the *sl-RequestedSIB-List* is set to *setup*:
 - 3> if the L2 U2N Relay UE has not stored a valid version of SIB(s) indicated in *sl-RequestedSIB-List*:
 - 4> perform acquisition of the system information indicated in *sl-RequestedSIB-List* in accordance with 5.2.2;
 - 3> perform the Uu message transfer procedure in accordance with 5.8.9.9;
 - 2> if the *sl-RequestedSIB-List* is set to *release*:
 - 3> release received SIB request in *sl-RequestedSIB-List*;
- 1> if the *RemoteUEInformationSidelink* includes the *sl-RequestedPosSIB-List*:
 - 2> if the *sl-RequestedPosSIB-List* is set to *setup*:
 - 3> if the L2 U2N Relay UE has not stored a valid version of posSIB(s) indicated in *sl-RequestedPosSIB-List*:
 - 4> perform acquisition of the positioning system information indicated in *sl-RequestedPosSIB-List* in accordance with 5.2.2;
 - 3> perform the Uu message transfer procedure in accordance with 5.8.9.9;
 - 2> if the *sl-RequestedPosSIB-List* is set to *release*:
 - 3> release received posSIB request in *sl-RequestedPosSIB-List*.
- 1> if the *RemoteUEInformationSidelink* includes the *connectionForMP*:
 - 2> if the L2 U2N Relay UE is in RRC_IDLE:
 - 3> initiate an RRC connection establishment as specified in 5.3.3;
 - 2> else if the L2 U2N Relay UE is in RRC_INACTIVE:
 - 3> initiate an RRC connection resume as specified in 5.3.13;

The L2 U2U Relay UE shall:

- 1> if the *RemoteUEInformationSidelink* includes the *sl-DestinationIdentityRemoteUE*:

- 2> consider the end-to-end PC5 connection release for the end-to-end PC5 connection between the L2 U2U Remote UE and the peer L2 U2U Remote UE identified by *sl-DestinationIdentityRemoteUE*;
- 2> initiate the end-to-end PC5 connection failure/release related actions as specified in 5.8.9.3b;

5.8.9.9 Uu message transfer in sidelink

5.8.9.9.1 General



Figure 5.8.9.9.1-1: Uu message transfer in sidelink

The purpose of this procedure is to transfer *Paging* message and System Information from the L2 U2N Relay UE to the L2 U2N Remote UE in RRC_IDLE/RRC_INACTIVE.

5.8.9.9.2 Actions related to transmission of *UuMessageTransferSidelink* message

The L2 U2N Relay UE initiates the Uu message transfer procedure when at least one of the following conditions is met:

- 1> upon receiving *Paging* message related to the connected L2 U2N Remote UE from network (including *Paging* message within *RRCReconfiguration* message);
- 1> upon acquisition of the SIB(s) requested by the connected L2 U2N Remote UE (as indicated in *sl-RequestedSIB-List* in the *RemoteUEInformationSidelink*) or upon receiving the updated SIB(s) from network which has been requested by the connected L2 U2N Remote UE;
- 1> upon acquisition of the posSIB(s) requested by the connected L2 U2N Remote UE (as indicated in *sl-RequestedPosSIB-List* in the *RemoteUEInformationSidelink*) or upon receiving the updated posSIB(s) from network which have been requested by the connected L2 U2N Remote UE;
- 1> upon unsolicited SIB1 forwarding to the connected L2 U2N Remote UE or upon receiving the updated *SIB1* from network;

For each associated L2 U2N Remote UE, the L2 U2N Relay UE shall set the contents of *UuMessageTransferSidelink* message as follows:

- 1> include *sl-PagingDelivery* if the *Paging* message received from network containing the *ue-Identity* of the L2 U2N Remote UE;
- 1> include *sl-SIB1-Delivery* if any of the conditions for initiating Uu message transfer procedure related to SIB1 are met;
- 1> include *sl-SystemInformationDelivery* if any of the conditions for initiating Uu message transfer procedure related to System Information are met;
- 1> submit the *UuMessageTransferSidelink* message to lower layers for transmission.

NOTE: The L2 U2N Relay UE may perform unsolicited forwarding of SIB1 to the L2 U2N Remote UE based on UE implementation. A L2 U2N Remote UE configured with MP does not apply the *SIB1* received from the L2 U2N Relay UE on the indirect path, if any.

5.8.9.9.3 Reception of the *UuMessageTransferSidelink*

Upon receiving the *UuMessageTransferSidelink* message, the L2 U2N Remote UE shall:

- 1> if *sl-PagingDelivery* is included:

- 2> perform the paging reception procedure as specified in clause 5.3.2.3;
- 1> if *sl-SystemInformationDelivery* and/or *sl-SIB1-Delivery* is included:
 - 2> perform the actions specified in clause 5.2.2.4.

5.8.9.10 Notification Message

5.8.9.10.1 General



Figure 5.8.9.8.1-1: Notification message in sidelink

This procedure is used by a U2N Relay UE to send notification to the connected U2N Remote UE, or used by a L2 U2U Relay UE to send notification to the L2 U2U Remote UE for an end-to-end PC5 connection when condition(s) as specified in 5.8.9.10.2 is met for the hop between the L2 U2U Relay UE and the peer L2 U2U Remote UE.

5.8.9.10.2 Initiation

The Relay UE may initiate the procedure when one of the following conditions is met:

- 1> if the UE is acting as U2N Relay UE:
 - 2> upon Uu RLF as specified in 5.3.10;
 - 2> upon reception of an *RRCReconfiguration* including the *reconfigurationWithSync*;
 - 2> upon cell reselection;
 - 2> upon L2 U2N Relay UE's RRC connection failure including RRC connection reject as specified in 5.3.3.5 and 5.3.13.10, and T300 expiry as specified in 5.3.3.7, and RRC resume failure as specified in 5.3.13.5;
- 1> if the UE is acting as L2 U2U Relay UE:
 - 2> upon detection of PC5 RLF for the hop between the L2 U2U Relay UE and L2 U2U Remote UE as specified in 5.8.9.3;
 - 2> upon PC5-RRC connection release for the per-hop link between the L2 U2U Relay UE and L2 U2U Remote UE as specified in 5.8.9.5;

5.8.9.10.3 Actions related to transmission of *NotificationMessageSidelink* message

The Relay UE shall set the indication type as follows:

- 1> if the UE is acting as U2N Relay UE:
 - 2> if the UE initiates transmission of the *NotificationMessageSidelink* message due to Uu RLF:
 - 3> set the *indicationType* as *relayUE-Uu-RLF*;
 - 2> else if the UE initiates transmission of the *NotificationMessageSidelink* message due to reconfiguration with sync:
 - 3> set the *indicationType* as *relayUE-HO*;
 - 2> else if the UE initiates transmission of the *NotificationMessageSidelink* message due to cell reselection:

- 3> set the *indicationType* as *relayUE-CellReselection*;
- 2> if the UE initiates transmission of the *NotificationMessageSidelink* message due to Uu RRC connection establishment/Resume failure:
 - 3> set the *indicationType* as *relayUE-Uu-RRC-Failure*;
- 2> submit the *NotificationMessageSidelink* message to lower layers for transmission.
- 1> if the UE is acting as L2 U2U Relay UE:
 - 2> if the UE initiates transmission of the *NotificationMessageSidelink* message due to PC5 RLF with L2 U2U Remote UE; or
 - 2> if the UE initiates transmission of the *NotificationMessageSidelink* message due to PC5-RRC connection release for the per-hop link between the L2 U2U Relay UE and L2 U2U Remote UE:
 - 3> set the *sl-IndicationType* as *relayUE-PC5-RLF*;
 - 3> set the *sl-DestinationIdentityRemoteUE* as the associated destination for L2 U2U Remote UE;
 - 3> submit the *NotificationMessageSidelink* message to lower layers for transmission;

5.8.9.10.4 Actions related to reception of *NotificationMessageSidelink* message

Upon receiving the *NotificationMessageSidelink*, the Remote UE shall:

- 1> if the UE is acting as U2N Remote UE:
 - 2> if the *indicationType* is included:
 - 3> if the UE is L2 U2N Remote UE in RRC_CONNECTED:
 - 4> if MP is configured and MCG transmission (i.e. direct path) is not suspended;
 - 5> if the *indicationType* is *relayUE-HO*;
 - 6> suspend indirect path transmission;
 - 5> else:
 - 6> initiate the indirect path failure information procedure as specified in 5.7.3c to report indirect path failure;
 - 4> else if T301 is not running, initiate the RRC connection re-establishment procedure as specified in 5.3.7;
 - 3> else (the UE is L3 U2N Remote UE, or L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE):
 - 4> if the PC5-RRC connection with the U2N Relay UE is determined to be released:
 - 5> indicate upper layers to trigger PC5 unicast link release;
 - 4> else (i.e., maintain the PC5 RRC connection):
 - 5> if the UE is L2 U2N Remote UE and the *indicationType* is *relayUE-HO* or *relayUE-CellReselection*:
 - 6> consider cell re-selection occurs;

NOTE 1: For L3 U2N Remote UE, or L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE, it is up to Remote UE implementation whether to release or keep the PC5 unicast link.

NOTE 2: The L2 U2N Remote UE may ignore the *NotificationMessageSidelink* if it does not release the PC5 unicast link in source side yet during an indirect-to-direct path switch, i.e. T304 is running.

- 1> if the UE is acting as L2 U2U Remote UE:

2> if *sl-IndicationType* is *relayUE-PC5-RLF*:

- 3> indicate PC5 RLF received from L2 U2U Relay UE to the upper layers for the indicated L2 U2U Remote UE based on the received *sl-DestinationIdentityRemoteUE*;
- 3> consider the end-to-end PC5 connection failure for the end-to-end PC5 connection(s) over the per-hop PC5 link between the L2 U2U Relay UE and the L2 U2U Remote UE identified by *sl-DestinationIdentityRemoteUE*;
- 3> perform the end-to-end PC5 connection failure related actions as specified in 5.8.9.3a;

NOTE 3: It is up to the upper layers on whether to trigger U2U Relay reselection and whether to keep or release the PC5 link with the U2U Relay UE after the PC5 RLF indication received from U2U Relay UE.

5.8.9.11 UE information transfer on sidelink

5.8.9.11.1 General

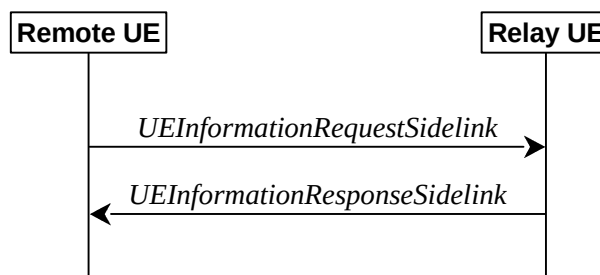 


Figure 5.8.9.11.1-1: Sidelink UE information procedure

The purpose of this procedure is to transfer the UE information between a Remote UE and a Relay UE in sidelink. The L2 U2U Remote UE informs its end-to-end QoS information to its connected L2 U2U Relay UE in the *UEInformationRequestSidelink* message, and the L2 U2U Relay UE delivers the split QoS information of the first-hop to the Remote UE in the *UEInformationResponseSidelink* message.

5.8.9.11.2 Actions related to transmission of the *UEInformationRequestSidelink* by the UE

For initial information transfer (e.g. for QoS split) or upon change in any of the information in the *UEInformationRequestSidelink*, the UE shall set the contents of *UEInformationRequestSidelink* message as follows and include all concerned information, irrespective of trigger condition:

- 1> if the UE is acting as L2 U2U Remote UE:
 - 2> set *sl-E2E-QoS-InfoListPC5* to include the end-to-end QoS profile(s) of the sidelink QoS flow(s) towards the peer L2 U2U Remote UE if configured by the upper layer, and for each entry:
 - 3> set *sl-DestinationIdentityRemoteUE* to include the associated identity for peer L2 U2U Remote UE;
 - 3> set *sl-E2E-SLRB-Index* to include the associated end-to-end SLRB configuration index;
 - 3> set *sl-QoS-InfoList* to include the end-to-end QoS profile(s) of the sidelink QoS flow(s);
 - 2> submit the *UEInformationRequestSidelink* message to lower layers for transmission.

5.8.9.11.3 Actions related to reception of the *UEInformationRequestSidelink* by the UE

The UE shall perform the following actions upon reception of the *UEInformationRequestSidelink*:

- 1> if the UE is acting as L2 U2U Relay UE:
 - 2> perform QoS split based on the *sl-QoS-InfoList* for each QoS flow to decide the split PDB value for each PC5 hop;

- 2> set the contents of *UEInformationResponseSidelink* message as follows:
 - 3> set *sl-SplitQoS-InfoListPC5* to include the split PDB value for each QoS flow on the first PC5 hop between L2 U2U Relay UE and L2 U2U Remote UE;
- 2> submit the *UEInformationResponseSidelink* message to lower layers for transmission;
- 2> for each *sl-E2E-SLRB-Index* value included in the *sl-E2E-QoS-InfoListPC5*:
 - 3> merge the split per-flow QoS on the second PC5 hop into a per-SLRB level QoS profile;
- 2> if the UE is in RRC_IDLE or RRC_INACTIVE or out of coverage:
 - 3> derive the PC5 Relay RLC channel configuration on the second PC5 hop based on the per-SLRB level QoS profile of this end-to-end sidelink DRB, as specified in 5.8.9.7.0;
 - 3> (re)configure the SRAP entity to map the end-to-end DRB with PC5 Relay RLC channel, if needed;
- 2> if the UE is in RRC_CONNECTED:
 - 3> initiate sidelink UE information procedure according to clause 5.8.3.2 to report per-SLRB level QoS.

NOTE 1: It is left to Relay UE implementation on how to split the PDB.

NOTE 2: For a L2 U2U Relay UE, how to merge the split per-flow QoS on the second PC5 hop into a per-SLRB level QoS profile is up to UE implementation.

5.8.9.11.4 Actions related to reception of the *UEInformationResponseSidelink* by the UE

The UE shall perform the following actions upon reception of the *UEInformationResponseSidelink*:

- 1> if the UE is in RRC_CONNECTED:
 - 2> initiate sidelink UE information procedure according to clause 5.8.3.2 to report the split QoS profile for the first PC5 hop;
- 1> else (UE in RRC_IDLE or RRC_INACTIVE or out of coverage):
 - 2> for each *sl-E2E-SLRB-Index* value included in the *sl-E2E-QoS-InfoListPC5* in *UEInformationRequestSidelink*:
 - 3> merge the split per-flow QoS on the first PC5 hop into a per-SLRB level QoS profile;
 - 3> derive the PC5 Relay RLC channel configuration for the first PC5 hop based on the per-SLRB level QoS profile of this end-to-end sidelink DRB, as specified in 5.8.9.7.0;
 - 3> (re)configure the SRAP entity to map the end-to-end DRB with PC5 Relay RLC channel, if needed.

NOTE: For a L2 U2U Remote UE in RRC_IDLE or RRC_INACTIVE or out of coverage, how to merge the split per-flow QoS on the first PC5 hop into a per-SLRB level QoS profile is up to UE implementation.

5.8.10 Sidelink measurement

5.8.10.1 Introduction

The UE may configure the associated peer UE to perform NR sidelink measurement and report on the corresponding PC5-RRC connection in accordance with the NR sidelink measurement configuration for unicast by *RRCReconfigurationSidelink* message.

The NR sidelink measurement configuration includes the following parameters for a PC5-RRC connection:

1. **NR sidelink measurement objects:** Object(s) on which the associated peer UE shall perform the NR sidelink measurements.

- For NR sidelink measurement, a NR sidelink measurement object indicates the NR sidelink frequency of reference signals to be measured.
- 2. NR sidelink reporting configurations:** NR sidelink measurement reporting configuration(s) where there can be one or multiple NR sidelink reporting configurations per NR sidelink measurement object. Each NR sidelink reporting configuration consists of the following:
- Reporting criterion: The criterion that triggers the UE to send a NR sidelink measurement report. This can either be periodical or a single event description.
 - RS type: The RS that the UE uses for NR sidelink measurement results. In this release, both DMRS and SL-PRS are supported for NR sidelink measurement.
 - Reporting format: The quantities that the UE includes in the measurement report. In this release, only RSRP measurement is supported.
- 3. NR sidelink measurement identities:** A list of NR sidelink measurement identities where each NR sidelink measurement identity links one NR sidelink measurement object with one NR sidelink reporting configuration. By configuring multiple NR sidelink measurement identities, it is possible to link more than one NR sidelink measurement object to the same NR sidelink reporting configuration, as well as to link more than one NR sidelink reporting configuration to the same NR sidelink measurement object. The NR sidelink measurement identity is also included in the NR sidelink measurement report that triggered the reporting, serving as a reference to the network.
- 4. NR sidelink quantity configurations:** The NR sidelink quantity configuration defines the NR sidelink measurement filtering configuration used for all event evaluation and related reporting, and for periodical reporting of that NR sidelink measurement. In each configuration, different filter coefficients can be configured for different NR sidelink measurement quantities.

Both UEs of the PC5-RRC connection maintains a NR sidelink measurement object list, a NR sidelink reporting configuration list, and a NR sidelink measurement identities list according to signalling and procedures in this specification.

5.8.10.2 Sidelink measurement configuration

5.8.10.2.1 General

The UE shall:

- 1> if the received *sl-MeasConfig* includes the *sl-MeasObjectToRemoveList* in the *RRCReconfigurationSidelink*:
 - 2> perform the sidelink measurement object removal procedure as specified in 5.8.10.2.4;
- 1> if the received *sl-MeasConfig* includes the *sl-MeasObjectToAddModList* in the *RRCReconfigurationSidelink*:
 - 2> perform the sidelink measurement object addition/modification procedure as specified in 5.8.10.2.5;
- 1> if the received *sl-MeasConfig* includes the *sl-ReportConfigToRemoveList* in the *RRCReconfigurationSidelink*:
 - 2> perform the sidelink reporting configuration removal procedure as specified in 5.8.10.2.6;
- 1> if the received *sl-MeasConfig* includes the *sl-ReportConfigToAddModList* in the *RRCReconfigurationSidelink*:
 - 2> perform the sidelink reporting configuration addition/modification procedure as specified in 5.8.10.2.7;
- 1> if the received *sl-MeasConfig* includes the *sl-QuantityConfig* in the *RRCReconfigurationSidelink*:
 - 2> perform the sidelink quantity configuration procedure as specified in 5.8.10.2.8;
- 1> if the received *sl-MeasConfig* includes the *sl-MeasIdToRemoveList* in the *RRCReconfigurationSidelink*:
 - 2> perform the sidelink measurement identity removal procedure as specified in 5.8.10.2.2;
- 1> if the received *sl-MeasConfig* includes the *sl-MeasIdToAddModList* in the *RRCReconfigurationSidelink*:
 - 2> perform the sidelink measurement identity addition/modification procedure as specified in 5.8.10.2.3;

5.8.10.2.2 Sidelink measurement identity removal

The UE shall:

- 1> for each *sl-MeasId* included in the received *sl-MeasIdToRemoveList* that is part of the current UE configuration in *VarMeasConfigSL*:
- 2> remove the entry with the matching *sl-MeasId* from the *sl-MeasIdList* within the *VarMeasConfigSL*;
- 2> remove the NR sidelink measurement reporting entry for this *sl-MeasId* from the *VarMeasReportListSL*, if included;
- 2> stop the periodical reporting timer and reset the associated information (e.g. *sl-TimeToTrigger*) for this *sl-MeasId*.

NOTE: The UE does not consider the message as erroneous if the *sl-MeasIdToRemoveList* includes any *sl-MeasId* value that is not part of the current UE configuration.

5.8.10.2.3 Sidelink measurement identity addition/modification

The UE shall:

- 1> for each *sl-MeasId* included in the received *sl-MeasIdToAddModList*:
- 2> if an entry with the matching *sl-MeasId* exists in the *sl-MeasIdList* within the *VarMeasConfigSL*:
 - 3> replace the entry with the value received for this *sl-MeasId*;
- 2> else:
 - 3> add a new entry for this *sl-MeasId* within the *VarMeasConfigSL*;
- 2> remove the measurement reporting entry for this *sl-MeasId* from the *VarMeasReportListSL*, if included;
- 2> stop the periodical reporting timer and reset the associated information (e.g. *sl-TimeToTrigger*) for this *sl-MeasId*;

5.8.10.2.4 Sidelink measurement object removal

The UE shall:

- 1> for each *sl-MeasObjectId* included in the received *sl-MeasObjectIdToRemoveList* that is part of *sl-MeasObjectList* in *VarMeasConfigSL*:
- 2> remove the entry with the matching *sl-MeasObjectId* from the *sl-MeasObjectList* within the *VarMeasConfigSL*;
- 2> remove all *sl-MeasId* associated with this *sl-MeasObjectId* from the *sl-MeasIdList* within the *VarMeasConfigSL*, if any;
- 2> if a *sl-MeasId* is removed from the *sl-MeasIdList*:
 - 3> remove the measurement reporting entry for this *sl-MeasId* from the *VarMeasReportListSL*, if included;
 - 3> stop the periodical reporting timer and reset the associated information (e.g. *sl-TimeToTrigger*) for this *sl-MeasId*.

NOTE: The UE does not consider the message as erroneous if the *sl-MeasObjectIdToRemoveList* includes any *sl-MeasObjectId* value that is not part of the current UE configuration.

5.8.10.2.5 Sidelink measurement object addition/modification

The UE shall:

- 1> for each *sl-MeasObjectId* included in the received *sl-MeasObjectIdToAddModList*:

- 2> if an entry with the matching *sl-MeasObjectId* exists in the *sl-MeasObjectList* within the *VarMeasConfigSL*, for this entry:
 - 3> for each *sl-MeasId* associated with this *sl-MeasObjectId* included in the *sl-MeasIdList* within the *VarMeasConfigSL*, if any:
 - 4> remove the measurement reporting entry for this *sl-MeasId* from the *VarMeasReportListSL*, if included;
 - 4> stop the periodical reporting timer and reset the associated information (e.g. *sl-TimeToTrigger*) for this *sl-MeasId*;
 - 3> reconfigure the entry with the value received for this *sl-MeasObject*;
- 2> else:
 - 3> add a new entry for the received *sl-MeasObject* to the *sl-MeasObjectList* within *VarMeasConfigSL*.

5.8.10.2.6 Sidelink reporting configuration removal

The UE shall:

- 1> for each *sl-ReportConfigId* included in the received *sl-ReportConfigToRemoveList* that is part of the current UE configuration in *VarMeasConfigSL*:
 - 2> remove the entry with the matching *sl-ReportConfigId* from the *sl-ReportConfigList* within the *VarMeasConfigSL*;
 - 2> remove all *sl-MeasId* associated with the *sl-ReportConfigId* from the *sl-MeasIdList* within the *VarMeasConfigSL*, if any;
 - 2> if a *sl-MeasId* is removed from the *sl-MeasIdList*:
 - 3> remove the measurement reporting entry for this *sl-MeasId* from the *VarMeasReportListSL*, if included;
 - 3> stop the periodical reporting timer and reset the associated information (e.g. *sl-TimeToTrigger*) for this *sl-MeasId*.

NOTE: The UE does not consider the message as erroneous if the *sl-ReportConfigToRemoveList* includes any *sl-ReportConfigId* value that is not part of the current UE configuration.

5.8.10.2.7 Sidelink reporting configuration addition/modification

The UE shall:

- 1> for each *sl-ReportConfigId* included in the received *sl-ReportConfigToAddModList*:
 - 2> if an entry with the matching *sl-ReportConfigId* exists in the *sl-ReportConfigList* within the *VarMeasConfigSL*, for this entry:
 - 3> reconfigure the entry with the value received for this *sl-ReportConfig*;
 - 3> for each *sl-MeasId* associated with this *sl-ReportConfigId* included in the *sl-MeasIdList* within the *VarMeasConfigSL*, if any:
 - 4> remove the measurement reporting entry for this *sl-MeasId* from the *VarMeasReportListSL*, if included;
 - 4> stop the periodical reporting timer and reset the associated information (e.g. *sl-TimeToTrigger*) for this *sl-MeasId*;
 - 2> else:
 - 3> add a new entry for the received *sl-ReportConfig* to the *sl-ReportConfigList* within the *VarMeasConfigSL*.

5.8.10.2.8 Sidelink quantity configuration

The UE shall:

- 1> for each received *sl-QuantityConfig*:
 - 2> set the corresponding parameter(s) in *sl-QuantityConfig* within *VarMeasConfigSL* to the value of the received *sl-QuantityConfig* parameter(s);
- 1> for each *sl-MeasId* included in the *sl-MeasIdList* within *VarMeasConfigSL*:
 - 2> remove the measurement reporting entry for this *sl-MeasId* from the *VarMeasReportListSL*, if included;
 - 2> stop the periodical reporting timer and reset the associated information (e.g. *sl-TimeToTrigger*) for this *sl-MeasId*.

5.8.10.3 Performing NR sidelink measurements

5.8.10.3.1 General

A UE shall derive NR sidelink measurement results by measuring one or multiple DMRS/SL-PRS associated per PC5-RRC connection as configured by the peer UE associated, as described in 5.8.10.3.2. For all NR sidelink measurement results the UE applies the layer 3 filtering as specified in clause 5.5.3.2, before using the measured results for evaluation of reporting criteria and measurement reporting. In this release, only NR sidelink RSRP can be configured as trigger quantity and reporting quantity.

The UE shall:

- 1> for each *sl-MeasId* included in the *sl-MeasIdList* within *VarMeasConfigSL*:
 - 2> if the *sl-MeasObject* is associated to NR sidelink and the *sl-RS-Type* is set to *dmrs*:
 - 3> derive the layer 3 filtered NR sidelink measurement result based on PSSCH DMRS for the trigger quantity and each measurement quantity indicated in *sl-ReportQuantity* using parameters from the associated *sl-MeasObject*, as described in 5.8.10.3.2.
 - 2> if the *sl-MeasObject* is associated to NR sidelink and the *sl-RS-Type* is set to *sl-prs*:
 - 3> derive the layer 3 filtered NR sidelink measurement result based on SL-PRS for the trigger quantity and each measurement quantity indicated in *sl-ReportQuantity* using parameters from the associated *sl-MeasObject*, as described in 5.8.10.3.2.
- 2> perform the evaluation of reporting criteria as specified in 5.8.10.4.

5.8.10.3.2 Derivation of NR sidelink measurement results

The UE may be configured by the peer UE associated to derive NR sidelink RSRP measurement results per PC5-RRC connection associated to the NR sidelink measurement objects based on parameters configured in the *sl-MeasObject* and in the *sl-ReportConfig*.

The UE shall:

- 1> for each NR sidelink measurement quantity to be derived based on NR sidelink DMRS/SL-PRS:
 - 2> derive the corresponding measurement of NR sidelink frequency indicated quantity based on PSSCH DMRS/SL-PRS as described in TS 38.215 [9] in the concerned *sl-MeasObject*;
 - 2> apply layer 3 filtering as described in 5.5.3.2.

5.8.10.4 Sidelink measurement report triggering

5.8.10.4.1 General

The UE shall:

- 1> for each *sl-MeasId* included in the *sl-MeasIdList* within *VarMeasConfigSL*:
 - 2> if the *sl-ReportType* is set to *sl-EventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *sl-EventId* of the corresponding *sl-ReportConfig* within *VarMeasConfigSL*, is fulfilled for NR sidelink frequency for all NR sidelink measurements after layer 3 filtering taken during *sl-TimeToTrigger* defined for this event within the *VarMeasConfigSL*, while the *VarMeasReportListSL* does not include a NR sidelink measurement reporting entry for this *sl-MeasId* (a first NR sidelink frequency triggers the event):
 - 3> include a NR sidelink measurement reporting entry within the *VarMeasReportListSL* for this *sl-MeasId*;
 - 3> set the *sl-NumberOfReportsSent* defined within the *VarMeasReportListSL* for this *sl-MeasId* to 0;
 - 3> include the concerned NR sidelink frequency in the *sl-FrequencyTriggeredList* defined within the *VarMeasReportListSL* for this *sl-MeasId*;
 - 3> initiate the NR sidelink measurement reporting procedure, as specified in 5.8.10.5;
 - 2> else if the *sl-ReportType* is set to *sl-EventTriggered* and if the entry condition applicable for this event, i.e. the event corresponding with the *sl-EventId* of the corresponding *sl-ReportConfig* within *VarMeasConfigSL*, is fulfilled for NR sidelink frequency not included in the *sl-FrequencyTriggeredList* for all NR sidelink measurements after layer 3 filtering taken during *sl-TimeToTrigger* defined for this event within the *VarMeasConfigSL* (a subsequent NR sidelink frequency triggers the event):
 - 3> set the *sl-NumberOfReportsSent* defined within the *VarMeasReportListSL* for this *sl-MeasId* to 0;
 - 3> include the concerned NR sidelink frequency in the *sl-FrequencyTriggeredList* defined within the *VarMeasReportListSL* for this *sl-MeasId*;
 - 3> initiate the NR sidelink measurement reporting procedure, as specified in 5.8.10.5;
 - 2> else if the *sl-ReportType* is set to *sl-EventTriggered* and if the leaving condition applicable for this event is fulfilled for NR sidelink frequency included in the *sl-FrequencyTriggeredList* defined within the *VarMeasReportListSL* for this *sl-MeasId* for all NR sidelink measurements after layer 3 filtering taken during *sl-TimeToTrigger* defined within the *VarMeasConfigSL* for this event:
 - 3> remove the concerned NR sidelink frequency in the *sl-FrequencyTriggeredList* defined within the *VarMeasReportListSL* for this *sl-MeasId*;
 - 3> if *sl-ReportOnLeave* is set to *true* for the corresponding reporting configuration:
 - 4> initiate the NR sidelink measurement reporting procedure, as specified in 5.8.10.5;
 - 3> if the *sl-FrequencyTriggeredList* defined within the *VarMeasReportListSL* for this *sl-MeasId* is empty:
 - 4> remove the NR sidelink measurement reporting entry within the *VarMeasReportListSL* for this *sl-MeasId*;
 - 4> stop the periodical reporting timer for this *sl-MeasId*, if running;
 - 2> if *sl-ReportType* is set to *sl-Periodical* and if a (first) NR sidelink measurement result is available:
 - 3> include a NR sidelink measurement reporting entry within the *VarMeasReportListSL* for this *sl-MeasId*;
 - 3> set the *sl-NumberOfReportsSent* defined within the *VarMeasReportListSL* for this *sl-MeasId* to 0;
 - 3> initiate the NR sidelink measurement reporting procedure, as specified in 5.8.10.5, immediately after the quantity to be reported becomes available for the NR sidelink frequency;
 - 2> upon expiry of the periodical reporting timer for this *sl-MeasId*:
 - 3> initiate the NR sidelink measurement reporting procedure, as specified in 5.8.10.5.

5.8.10.4.2 Event S1 (Serving becomes better than threshold)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition S1-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition S1-2, as specified below, is fulfilled;
- 1> for this NR sidelink measurement, consider the NR sidelink frequency corresponding to the associated *sl-MeasObject* associated with this event.

Inequality S1-1 (Entering condition)

$$Ms - Hys > Thresh$$

Inequality S1-2 (Leaving condition)

$$Ms + Hys < Thresh$$

The variables in the formula are defined as follows:

Ms is the NR sidelink measurement result of the NR sidelink frequency, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *sl-Hysteresis* as defined within *sl-ReportConfig* for this event).

Thresh is the threshold parameter for this event (i.e. *s1-Threshold* as defined within *sl-ReportConfig* for this event).

Ms is expressed in dBm in case of RSRP.

Hys is expressed in dB.

Thresh is expressed in the same unit as **Ms**.

5.8.10.4.3 Event S2 (Serving becomes worse than threshold)

The UE shall:

- 1> consider the entering condition for this event to be satisfied when condition S2-1, as specified below, is fulfilled;
- 1> consider the leaving condition for this event to be satisfied when condition S2-2, as specified below, is fulfilled;
- 1> for this NR sidelink measurement, consider the NR sidelink frequency indicated by the *sl-MeasObject* associated to this event.

Inequality S2-1 (Entering condition)

$$Ms + Hys < Thresh$$

Inequality S2-2 (Leaving condition)

$$Ms - Hys > Thresh$$

The variables in the formula are defined as follows:

Ms is the NR sidelink measurement result of the NR sidelink frequency, not taking into account any offsets.

Hys is the hysteresis parameter for this event (i.e. *sl-Hysteresis* as defined within *sl-ReportConfig* for this event).

Thresh is the threshold parameter for this event (i.e. *s2-Threshold* as defined within *sl-ReportConfig* for this event).

Ms is expressed in dBm in case of RSRP.

Hys is expressed in dB.

Thresh is expressed in the same unit as **Ms**.

5.8.10.5 Sidelink measurement reporting

5.8.10.5.1 General



Figure 5.8.10.5.1-1: NR sidelink measurement reporting

The purpose of this procedure is to transfer measurement results from the UE to the peer UE associated.

For the *sl-MeasId* for which the NR sidelink measurement reporting procedure was triggered, the UE shall set the *sl-MeasResults* within the *MeasurementReportSidelink* message as follows:

- 1> set the *sl-MeasId* to the measurement identity that triggered the NR sidelink measurement reporting;
- 1> if the *sl-ReportConfig* associated with the *sl-MeasId* that triggered the NR sidelink measurement reporting is set to *sl-EventTriggered* or *sl-Periodical*:
 - 2> if the *sl-RS-Type* within *sl-ReportConfig* is set to *dmrs*:
 - 3> set *sl-ResultDMRS* within *sl-MeasResult* to include the NR sidelink DMRS based quantity indicated in the *sl-ReportQuantity* within the concerned *sl-ReportConfig*;
 - 2> if the *sl-RS-Type* within *sl-ReportConfig* is set to *sl-prs*:
 - 3> set *sl-Result-SL-PRS* within *sl-MeasResult* to include the NR SL-PRS based quantity indicated in the *sl-ReportQuantity* within the concerned *sl-ReportConfig*;
- 1> increment the *sl-NumberOfReportsSent* as defined within the *VarMeasReportListSL* for this *sl-MeasId* by 1;
- 1> stop the periodical reporting timer, if running;
- 1> if the *sl-NumberOfReportsSent* as defined within the *VarMeasReportListSL* for this *sl-MeasId* is less than the *sl-ReportAmount* as defined within the corresponding *sl-ReportConfig* for this *sl-MeasId*:
 - 2> start the periodical reporting timer with the value of *sl-ReportInterval* as defined within the corresponding *sl-ReportConfig* for this *sl-MeasId*;
- 1> else:
 - 2> if the *sl-ReportType* is set to *sl-Periodical*:
 - 3> remove the entry within the *VarMeasReportListSL* for this *sl-MeasId*;
 - 3> remove this *sl-MeasId* from the *sl-MeasIdList* within *VarMeasConfigSL*;
- 1> submit the *MeasurementReportSidelink* message to lower layers for transmission, upon which the procedure ends.

5.8.11 Zone identity calculation

The UE shall determine an identity of the zone (i.e. *Zone_id*) in which it is located using the following formulae, if *sl-ZoneConfig* is configured:

$$x_1 = \text{Floor}(x / L) \bmod 64;$$

$$y_1 = \text{Floor}(y / L) \bmod 64;$$

$$\text{Zone\_id} = y_1 * 64 + x_1.$$

The parameters in the formulae are defined as follows:

L is the value of *sl-ZoneLength* included in *sl-ZoneConfig*;

x is the geodesic distance in longitude between UE's current location and geographical coordinates (0, 0) according to WGS84 model [58] and it is expressed in meters;

y is the geodesic distance in latitude between UE's current location and geographical coordinates (0, 0) according to WGS84 model [58] and it is expressed in meters.

NOTE: How the calculated zone_id is used is specified in TS 38.321 [3].

5.8.12 DFN derivation from GNSS

When the UE selects GNSS as the synchronization reference source, the DFN, the subframe number within a frame and slot number within a frame used for NR sidelink communication/discovery are derived from the current UTC time, by the following formulae:

$$DFN = \text{Floor}(0.1 * (T_{\text{current}} - T_{\text{ref}} - \text{OffsetDFN})) \bmod 1024$$

$$\text{SubframeNumber} = \text{Floor}(T_{\text{current}} - T_{\text{ref}} - \text{OffsetDFN}) \bmod 10$$

$$\text{SlotNumber} = \text{Floor}((T_{\text{current}} - T_{\text{ref}} - \text{OffsetDFN}) * 2^{\mu}) \bmod (10 * 2^{\mu})$$

Where:

T_{current} is the current UTC time obtained from GNSS. This value is expressed in milliseconds;

T_{ref} is the reference UTC time 00:00:00 on Gregorian calendar date 1 January, 1900 (midnight between Thursday, December 31, 1899 and Friday, January 1, 1900). This value is expressed in milliseconds;

OffsetDFN is the value *sl-OffsetDFN* if configured, otherwise it is zero. This value is expressed in milliseconds.

$\mu=0/1/2/3$ corresponding to the 15/30/60/120 kHz of SCS for SL, respectively.

NOTE 1: In case of leap second change event, how UE obtains the scheduled time of leap second change to adjust *T_{current}* correspondingly is left to UE implementation. How UE handles to avoid the sudden discontinuity of DFN is left to UE implementation.

NOTE 2: Void.

5.8.13 NR sidelink discovery

5.8.13.1 General

The purpose of this procedure is to perform NR sidelink discovery as specified in TS 23.304 [65].

5.8.13.2 NR sidelink discovery monitoring

A UE capable of NR sidelink discovery that is configured by upper layers to monitor NR sidelink discovery messages shall:

- 1> if the frequency used for NR sidelink discovery is included in *sl-FreqInfoToAddModList* in *RRCReconfiguration* message and *sl-DiscConfig* is included in *RRCReconfiguration*; or if the frequency used for NR sidelink discovery is included in *sl-FreqInfoList* included in *SIB12* and *sl-DiscConfigCommon* is included in *SIB12*;
- 2> if the UE is configured with *sl-DiscRxPool* for NR sidelink discovery reception included in *RRCReconfiguration* message with *reconfigurationWithSync* (i.e. handover);
- 3> configure lower layers to monitor sidelink control information and the corresponding data using the resource pool indicated by *sl-DiscRxPool* for NR sidelink discovery reception in *RRCReconfiguration*;
- 2> else if the UE is configured with *sl-RxPool* for NR sidelink discovery reception included in *RRCReconfiguration* message with *reconfigurationWithSync* (i.e. handover);

- 3> configure lower layers to monitor sidelink control information and the corresponding data using the resource pool indicated by *sl-RxPool* for NR sidelink discovery reception in *RRCReconfiguration*;
- 2> else if the cell chosen for NR sidelink discovery reception provides *SIB12*:
 - 3> if *sl-DiscRxPool* for NR sidelink discovery reception is included in *SIB12*:
 - 4> configure lower layers to monitor sidelink control information and the corresponding data using the resource pool indicated by *sl-DiscRxPool* for NR sidelink discovery reception in *SIB12*;
 - 3> else if *sl-RxPool* for NR sidelink discovery reception is included in *SIB12*:
 - 4> configure lower layers to monitor sidelink control information and the corresponding data using the resource pool indicated by *sl-RxPool* for NR sidelink discovery reception in *SIB12*;
- 1> else:
 - 2> if out of coverage on the concerned frequency for NR sidelink discovery:
 - 3> if *sl-DiscRxPool* was preconfigured:
 - 4> configure lower layers to monitor sidelink control information and the corresponding data using the resource pool that was preconfigured by *sl-DiscRxPool* for NR sidelink discovery reception in *SL-PreconfigurationNR*, as defined in clause 9.3;
 - 3> else:
 - 4> configure lower layers to monitor sidelink control information and the corresponding data using the resource pool that was preconfigured by *sl-RxPool* for NR sidelink discovery reception in *SL-PreconfigurationNR*, as defined in clause 9.3;

NOTE: If *sl-DiscRxPool* and *sl-RxPool* are both included in *SIB12* or preconfigured, it is up to UE implementation whether to monitor sidelink control information and the corresponding data using the resource pool indicated by *sl-RxPool* for NR sidelink discovery reception.

5.8.13.3 NR sidelink discovery transmission

A UE capable of NR sidelink discovery that is configured by upper layer to transmit NR sidelink discovery message shall:

- 1> if the frequency used for NR sidelink discovery is included in *sl-FreqInfoToAddModList* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message; or if the frequency used for NR sidelink discovery is included in *sl-FreqInfoList* within *SIB12*:
- 2> if the UE is in *RRC_CONNECTED* and uses the frequency included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message:
 - 3> if the UE is acting as NR sidelink U2N Relay UE and *sl-DiscConfig* is included in *RRCReconfiguration*, and if the NR sidelink U2N Relay UE threshold conditions as specified in 5.8.14.2 are met based on *sl-RelayUE-Config*; or
 - 3> if the UE is selecting NR sidelink U2N Relay UE / has a selected NR sidelink U2N Relay UE/ configured with measurement object associated to L2 U2N Relay UEs and *sl-DiscConfig* is included in *RRCReconfiguration*, and if the NR sidelink U2N Remote UE threshold conditions as specified in 5.8.15.2 are met based on *sl-RemoteUE-Config*; or
 - 3> if the UE is selecting NR sidelink U2U Relay UE / has a selected NR sidelink U2U Relay UE and *sl-DiscConfig* is included in *RRCReconfiguration*, and if the NR sidelink U2U Remote UE threshold conditions associated with the peer NR Sidelink U2U Remote UE as specified in 5.8.17.2 are met based on *sl-RemoteUE-ConfigU2U*; or
 - 3> if the UE acting as Target Remote UE is performing U2U Relay Discovery with Model B and *sl-DiscConfig* is included in *RRCReconfiguration*, and if the NR sidelink U2U Remote UE threshold conditions associated with the NR sidelink U2U Relay UE as specified in 5.8.17.2 are met based on *sl-RemoteUE-ConfigU2U*; or

- 3> if the UE acting as U2U Relay UE is performing U2U Relay Discovery with Model A as specified in TS 23.304[65], and neighbour UEs in discovery message to be transmitted meet the threshold conditions as specified in 5.8.16.3; or
- 3> if the UE acting as U2U Relay UE is sending Discovery Response message with Model B as specified in TS 23.304[65]; or
- 3> if the UE acting as U2U Relay UE is sending Discovery Solicitation message with Model B as specified in TS 23.304[65] and *sl-DiscConfig* is included in *RRCReconfiguration*, and if the NR sidelink U2U Relay UE threshold conditions as specified in 5.8.16.2 are met based on *sl-RelayUE-ConfigU2U*; or

NOTE 1: For U2U Relay UE and Target Remote UE, it can be up to UE implementation on cross-layer interaction for the AS layer condition check for discovery message forwarding.

- 3> if the UE is performing NR sidelink non-relay discovery:
 - 4> if the UE is configured with *sl-ScheduledConfig*:
 - 5> if T310 for MCG or T311 is running; and if *sl-TxPoolExceptional* is included in *sl-FreqInfoList* for the concerned frequency in *SIB12* or included in *sl-ConfigDedicatedNR* in *RRCReconfiguration*; or
 - 5> if T301 is running and the cell on which the UE initiated RRC connection re-establishment provides *SIB12* including *sl-TxPoolExceptional* for the concerned frequency; or
 - 5> if T304 for MCG is running and the UE is configured with *sl-TxPoolExceptional* included in *sl-ConfigDedicatedNR* for the concerned frequency in *RRCReconfiguration*:
 - 6> configure lower layers to perform the sidelink resource allocation mode 2 based on random selection using the resource pool indicated by *sl-TxPoolExceptional* as defined in TS 38.321 [3] for NR sidelink discovery transmission;
 - 5> else:
 - 6> configure lower layers to perform the sidelink resource allocation mode 1 using the resource pool indicated by *sl-DiscTxPoolScheduling* or *sl-TxPoolScheduling* for NR sidelink discovery transmission on the concerned frequency in *RRCReconfiguration*;
 - 5> if T311 is running, configure the lower layers to release the resources indicated by *rrc-ConfiguredSidelinkGrant* (if any);
 - 4> if the UE is configured with *sl-UE-SelectedConfig*:
 - 5> if the *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency is included in the *sl-ConfigDedicatedNR* within *RRCReconfiguration*, and if a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* is not available in accordance with TS 38.214 [19]; or
 - 5> if the *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency is not included in the *sl-ConfigDedicatedNR* within *RRCReconfiguration*, and a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission on the concerned frequency included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* is not available in accordance with TS 38.214 [19];
 - 6> if *sl-TxPoolExceptional* for the concerned frequency is included in *RRCReconfiguration*; or
 - 6> if the PCell provides *SIB12* including *sl-TxPoolExceptional* in *sl-FreqInfoList* for the concerned frequency:
 - 7> configure lower layers to perform the sidelink resource allocation mode 2 based on random selection using the resource pool indicated by *sl-TxPoolExceptional* as defined in TS 38.321 [3] for NR sidelink discovery transmission;

- 5> else, if the *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency is included in the *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 6> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated by *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency in *RRCReconfiguration*;
- 5> else, if the *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission on the concerned frequency is included in the *sl-ConfigDedicatedNR* within *RRCReconfiguration*:
 - 6> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated by *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission on the concerned frequency in *RRCReconfiguration*;
- 2> else if the cell chosen for NR sidelink discovery transmission provides *SIB12*:
 - 3> if the UE is acting as NR sidelink U2N Relay UE and *sl-DiscConfigCommon* is included in *SIB12*, and if the NR sidelink U2N Relay UE threshold conditions as specified in 5.8.14.2 are met based on *sl-RelayUE-ConfigCommon* in *SIB12*; or
 - 3> if the UE is selecting NR sidelink U2N Relay UE / has a selected NR sidelink U2N Relay UE and *sl-DiscConfigCommon* is included in *SIB12*, and if the NR sidelink U2N Remote UE threshold conditions as specified in 5.8.15.2 are met based on *sl-RemoteUE-ConfigCommon* in *SIB12*; or
 - 3> if the UE is selecting NR sidelink U2U Relay UE / has a selected NR sidelink U2U Relay UE and *sl-DiscConfigCommon* is included in *SIB12*, and if the NR sidelink U2U Remote UE threshold conditions associated with the peer NR Sidelink U2U Remote UE as specified in 5.8.17.2 are met based on *sl-RemoteUE-ConfigCommonU2U* in *SIB12*; or
 - 3> if the UE acting as Target Remote UE is performing U2U Relay Discovery with Model B and if the NR sidelink U2U Remote UE threshold conditions associated with the NR sidelink U2U Relay UE as specified in 5.8.17.2 are met based on *sl-RemoteUE-ConfigCommonU2U* in *SIB12*; or
 - 3> if the UE acting as U2U Relay UE is performing U2U Relay Discovery with Model A as specified in TS 23.304[65], and neighbor UEs in discovery message to be transmitted meet the threshold conditions as specified in 5.8.16.3; or
 - 3> if the UE acting as U2U Relay UE is sending Discovery Response message with Model B as specified in TS 23.304[65]; or
 - 3> if the UE acting as U2U Relay UE is sending Discovery Solicitation message with Model B as specified in TS 23.304[65] and if the NR sidelink U2U Relay UE threshold conditions as specified in 5.8.16.2 are met based on *sl-RelayUE-ConfigCommonU2U* in *SIB12*; or
 - 3> if the UE is performing NR sidelink non-relay discovery:
 - 4> if *SIB12* includes *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency, and a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in the *sl-DiscTxPoolSelected* for NR sidelink discovery transmission is available in accordance with TS 38.214 [19] or random selection, if allowed by *sl-AllowedResourceSelectionConfig*, is selected;
 - 5> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* using the pools of resources indicated by *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency in *SIB12* as defined in TS 38.321 [3];
 - 4> else if *SIB12* includes *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission on the concerned frequency, and a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in the *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission is available in accordance with TS 38.214 [19] or random selection, if allowed by *sl-AllowedResourceSelectionConfig*, is selected;

- 5> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* using the pools of resources indicated by *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission on the concerned frequency in *SIB12* as defined in TS 38.321 [3];
- 4> else if *SIB12* includes *sl-TxPoolExceptional* for the concerned frequency:
 - 5> from the moment the UE initiates RRC connection establishment or RRC connection resume, until receiving an *RRCReconfiguration* including *sl-ConfigDedicatedNR*, or receiving an *RRCRelease* or an *RRCReject*; or
 - 5> if a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency in *SIB12* is not available in accordance with TS 38.214 [19]; or
 - 5> if *sl-DiscTxPoolSelected* for NR sidelink discovery transmission on the concerned frequency is not included in *SIB12* and if a result of full/partial sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission on the concerned frequency in *SIB12* is not available in accordance with TS 38.214 [19];
 - 6> configure lower layers to perform the sidelink resource allocation mode 2 based on random selection (as defined in TS 38.321 [3]) using one of the pools of resources indicated by *sl-TxPoolExceptional* for NR sidelink discovery transmission on the concerned frequency;
- 1> else if out of coverage on the concerned frequency for NR sidelink discovery:
 - 2> if the UE is acting as L3 U2N Relay UE; or
 - 2> if the UE is selecting NR sidelink U2N Relay UE / has a selected NR sidelink U2N Relay UE and if the NR sidelink U2N Remote UE threshold conditions as specified in 5.8.15.2 are met based on *sl-PreconfigDiscConfig* in *SidelinkPreconfigNR*; or
 - 2> if the UE is selecting NR sidelink U2U Relay UE / has a selected NR sidelink U2U Relay UE and if the NR sidelink U2U Remote UE threshold conditions associated with the peer NR sidelink U2U Remote UE as specified in 5.8.17.2 are met based on *sl-RemoteUE-PreconfigU2U* in *SidelinkPreconfigNR*; or
 - 2> if the UE acting as Target Remote UE is performing U2U Relay Discovery with Model B and if the NR sidelink U2U Remote UE threshold conditions associated with the NR sidelink U2U Relay UE as specified in 5.8.17.2 are met based on *sl-RemoteUE-PreconfigU2U* in *SidelinkPreconfigNR*; or
 - 2> if the UE acting as U2U Relay UE is performing U2U Relay Discovery with Model A as specified in TS 23.304[65], and neighbor UEs in discovery message to be transmitted meet the threshold conditions as specified in 5.8.16.3; or
 - 2> if the UE acting as U2U Relay UE is sending Discovery Response message with Model B as specified in TS 23.304[65]; or
 - 2> if the UE acting as U2U Relay UE is sending Discovery Solicitation message with Model B as specified in TS 23.304[65] and if the NR sidelink U2U Relay UE threshold conditions as specified in 5.8.16.2 are met based on *sl-RelayUE-PreconfigU2U* in *SidelinkPreconfigNR*; or
 - 2> if the UE is performing NR sidelink non-relay discovery:
 - 3> configure lower layers to perform the sidelink resource allocation mode 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated in *sl-DiscTxPoolSelected* or *sl-TxPoolSelectedNormal* for NR sidelink discovery transmission on the concerned frequency in *SidelinkPreconfigNR*.

NOTE 2: It is up to UE implementation to determine, in accordance with TS 38.321[3], which resource pool to use if multiple resource pools are configured, and which resource allocation scheme is used in the AS based on UE capability (for a UE in RRC_IDLE/RRC_INACTIVE) and the allowed resource schemes *sl-AllowedResourceSelectionConfig* in the resource pool configuration.

5.8.14 NR sidelink U2N Relay UE operation

5.8.14.1 General

This procedure is used by a UE supporting NR sidelink U2N Relay UE operation configured by upper layers to transmit NR sidelink discovery messages to evaluate AS layer conditions.

5.8.14.2 NR sidelink U2N Relay UE threshold conditions

A UE capable of NR sidelink U2N Relay UE operation shall:

- 1> if the threshold conditions specified in this clause were previously not met:
 - 2> if *threshHighRelay* is not configured; or the RSRP measurement of the PCell, or the cell on which the UE camps, is below *threshHighRelay* by *hystMaxRelay* if configured; and
 - 2> if *threshLowRelay* is not configured; or the RSRP measurement of the PCell, or the cell on which the UE camps, is above *threshLowRelay* by *hystMinRelay* if configured:
- 3> consider the threshold conditions to be met (entry);
- 1> else:
 - 2> if the RSRP measurement of the PCell, or the cell on which the UE camps, is above *threshHighRelay* if configured; or
 - 2> if the RSRP measurement of the PCell, or the cell on which the UE camps, is below *threshLowRelay* if configured;
- 3> consider the threshold conditions not to be met (leave);

5.8.15 NR sidelink U2N Remote UE operation

5.8.15.1 General

This procedure is used by a UE supporting NR sidelink U2N Remote UE operation configured by upper layers to transmit NR sidelink discovery message to evaluate AS layer conditions. The procedure is also used to perform selection and reselection of NR sidelink U2N Relay UE.

5.8.15.2 NR Sidelink U2N Remote UE threshold conditions

A UE capable of NR sidelink U2N Remote UE operation shall:

- 1> if the threshold conditions specified in this clause were previously not met:
 - 2> if *threshHighRemote* is not configured; or the RSRP measurement of the PCell, or the cell on which the UE camps, is below *threshHighRemote* by *hystMaxRemote* if configured, or
 - 2> if the UE has no serving cell:
- 3> consider the threshold conditions to be met (entry);
- 1> else:
 - 2> if the RSRP measurement of the PCell, or the cell on which the UE camps, is above *threshHighRemote* if configured;
- 3> consider the threshold conditions not to be met (leave);

The L2 U2N Remote UE not configured with MP considers the cell indicated by *sl-ServingCellInfo* in the *SL-AccessInfo-L2U2N-r17* received from the connected L2 U2N Relay UE as the PCell/camping cell.

5.8.15.3 Selection and reselection of NR sidelink U2N Relay UE

A UE capable of NR sidelink U2N Remote UE operation that is configured by upper layers to search for a NR sidelink U2N Relay UE shall:

- 1> if the UE has no serving cell; or
- 1> if the RSRP measurement of the cell on which the UE camps (for L2 and L3 U2N Remote UE in RRC_IDLE or RRC_INACTIVE)/ the PCell (for L3 U2N Remote UE in RRC_CONNECTED) is below *threshHighRemote* within *sl-RemoteUE-ConfigCommon/sl-RemoteUE-Config*;
- 2> if the UE does not have a selected NR sidelink U2N Relay UE; or
- 2> if the UE has a selected NR sidelink U2N Relay UE, and SL-RSRP of the currently selected NR sidelink U2N Relay UE is available and is below *sl-RSRP-Thresh*; or
- 2> if the UE has a selected NR sidelink U2N Relay UE, and SL-RSRP of the currently selected NR sidelink U2N Relay UE is not available, and SD-RSRP of the currently selected U2N Relay UE is below *sl-RSRP-Thresh*; or

NOTE 1: U2N Remote UE uses SL-RSRP measurements for relay reselection trigger evaluation when there is data transmission from U2N Relay UE to U2N Remote UE, and it is left to UE implementation whether to use SL-RSRP or SD-RSRP for relay reselection trigger evaluation in case of no data transmission from U2N Relay UE to U2N Remote UE. If SD-RSRP is used, the discovery procedure will be performed between the U2N Remote UE and the selected U2N Relay UE.

- 2> if the UE has a selected NR sidelink U2N Relay UE, and upper layers indicate not to use the currently selected NR sidelink U2N Relay UE; or
- 2> if the UE has a selected NR sidelink U2N Relay UE, and upper layers request the release of the PC5-RRC connection; or
- 2> if the UE has a selected NR sidelink U2N Relay UE, and sidelink radio link failure is detected on the PC5-RRC connection with the current U2N Relay UE as specified in clause 5.8.9.3;
- 3> perform NR sidelink discovery procedure as specified in clause 5.8.13 in order to search for candidate NR sidelink U2N Relay UEs:
 - 4> when evaluating the one or more detected NR sidelink U2N Relay UEs, apply layer 3 filtering as specified in 5.5.3.2 across measurements that concern the same U2N Relay UE ID and using the *sl-FilterCoefficientRSRP* in *SIB12* (if in RRC_IDLE/INACTIVE), the *sl-FilterCoefficientRSRP* in *sl-ConfigDedicatedNR* (if in RRC_CONNECTED) or the *sl-FilterCoefficientRSRP* in *SidelinkPreconfigNR* (out of coverage), before using the SD-RSRP measurement results;
 - 4> consider a candidate NR sidelink U2N Relay UE for which SD-RSRP exceeds *sl-RSRP-Thresh* by *sl-HystMin* has met the AS criteria;
- 3> if the UE detects any suitable NR sidelink U2N Relay UE(s):
 - 4> consider one of the available suitable NR sidelink U2N relay UE(s) can be selected;

NOTE 2: A candidate NR sidelink U2N Relay UE which meets all AS layer criteria defined in 5.8.15.3 and higher layer criteria defined in TS 23.304 [65] can be regarded as suitable NR sidelink U2N Relay UE by the NR sidelink U2N Remote UE. If multiple suitable NR sidelink U2N Relay UEs are available, it is up to Remote UE implementation to choose one NR sidelink U2N Relay UE. The details of the interaction with upper layers are up to UE implementation.

NOTE 3: For L2 U2N Remote UEs in RRC_IDLE/INACTIVE and L3 U2N Remote UEs, the cell (re)selection procedure and relay (re)selection procedure run independently. If both suitable cells and suitable NR sidelink U2N Relay UEs are available, it is up to NR sidelink U2N Remote UE implementation to select either a cell or a NR sidelink U2N Relay UE. Furthermore, L3 U2N Remote UE's selection on both cell and NR sidelink U2N Relay UE is also based on UE implementation.

- 3> else:
 - 4> consider no NR sidelink U2N Relay UE to be selected.

When evaluating the currently selected NR sidelink U2N Relay UE, the U2N Remote UE should apply layer 3 filtering as specified in 5.5.3.2 using the *sl-FilterCoefficientRSRP* in *SIB12* (if in *RRC_IDLE/INACTIVE*), the *sl-FilterCoefficientRSRP* in *sl-ConfigDedicatedNR* (if in *RRC_CONNECTED*) or the *sl-FilterCoefficientRSRP* in *SidelinkPreconfigNR* (out of coverage), before using the SL-RSRP or SD-RSRP measurement results.

5.8.16 NR sidelink U2U Relay UE operation

5.8.16.1 General

This procedure is used by a UE supporting NR sidelink U2U Relay UE operation configured by upper layers to forward NR sidelink integrated discovery messages or Model B Discovery messages to evaluate AS layer conditions. The procedure is also used to determine whether a NR sidelink UE is in proximity to NR sidelink U2U Relay UE in Model A Discovery messages.

5.8.16.2 NR sidelink U2U Relay UE threshold conditions

A UE capable of NR sidelink U2U Relay UE operation shall:

- 1> if the threshold conditions for sending Direct Communication Request message with integrated Discovery specified in this clause were previously not met:
 - 2> if the *sd-RSRP-ThreshDiscConfig* is not configured, or if the SL-RSRP of the Direct Communication Request message with integrated Discovery received from the Source NR sidelink U2U Remote UE is available and is above *sd-RSRP-ThreshDiscConfig* if configured:
 - 3> consider the threshold conditions to be met (entry);
 - 1> else:
 - 2> if the SL-RSRP of the Direct Communication Request message with integrated Discovery received from the Source NR sidelink U2U Remote UE is available and is below *sd-RSRP-ThreshDiscConfig* by *sd-hystMaxRelay* if configured:
 - 3> consider the threshold conditions not to be met (leave);
 - 1> if the threshold conditions for sending Relay Discovery Solicitation message with Model B Discovery specified in this clause were previously not met:
 - 2> if the *sd-RSRP-ThreshDiscConfig* is not configured, or if the SD-RSRP of the Model B Discovery message received from the Source NR sidelink U2U Remote UE is available and is above *sd-RSRP-ThreshDiscConfig* if configured:
 - 3> consider the threshold conditions to be met (entry);
 - 1> else:
 - 2> if the SD-RSRP of the Model B Discovery message received from the Source NR sidelink U2U Remote UE is available and is below *sd-RSRP-ThreshDiscConfig* by *sd-hystMaxRelay* if configured:
 - 3> consider the threshold conditions not to be met (leave);

When evaluating the Source NR sidelink U2U Remote UE, the U2U Relay UE shall apply layer 3 filtering as specified in 5.5.3.2 using the *sd-FilterCoefficientU2U* in *SL-RelayUE-ConfigU2U* if provided, before using the SL-RSRP or SD-RSRP measurement results.

5.8.16.3 Neighbor UE(s) in proximity conditions

A UE capable of NR sidelink U2U Relay UE operation and is performing U2U Relay Discovery with Model A as specified in TS 23.304[65] shall:

- 1> for each of potential neighbor UE(s):
 - 2> if the SL-RSRP of the UE is available and is above *sl-RSRP-Thresh-DiscConfig* if configured; or

2> if the SD-RSRP of the UE is available and is above *sd-RSRP-ThreshDiscConfig* if configured:

3> consider the UE as neighbor UE in discovery message to be transmitted as defined in TS 23.304 [65].

NOTE: The interaction with upper layers is left to UE implementation.

When evaluating the potential neighbor UE(s), the U2U Relay UE shall apply layer 3 filtering as specified in 5.5.3.2 using the *sl-FilterCoefficientU2U* or *sd-FilterCoefficientU2U* in *SL-RelayUE-ConfigU2U* if provided, before using the SL-RSRP or SD-RSRP measurement results respectively.

5.8.17 NR sidelink U2U Remote UE operation

5.8.17.1 General

This procedure is used by a UE supporting NR sidelink U2U Remote UE operation configured by upper layers to transmit NR sidelink discovery messages to evaluate AS layer conditions. The procedure is also used to perform selection and reselection of NR sidelink U2U Relay UE.

5.8.17.2 NR Sidelink U2U Remote UE threshold conditions

A UE capable of NR sidelink U2U Remote UE operation shall:

1> if the threshold conditions for sending Relay Discovery Solicitation message with Model B or sending Direct Communication Request message with integrated Discovery specified in this clause were previously not met:

2> if the SL-RSRP measurement of the peer NR sidelink U2U Remote UE is to be used, and if *sl-RSRP-ThreshU2U* is not configured, or the SL-RSRP measurement of the peer NR sidelink U2U Remote UE is below *sl-RSRP-ThreshU2U* by *sl-HystMinU2U* if configured; or

2> if the SD-RSRP measurement of the peer NR sidelink U2U Remote UE is to be used, and if *sd-RSRP-ThreshU2U* is not configured, or the SD-RSRP measurement of the peer NR sidelink U2U Remote UE is below *sd-RSRP-ThreshU2U* by *sd-HystMinU2U* if configured; or

2> if the peer NR sidelink U2U Remote UE is not reachable, i.e. SL-RSRP/SD-RSRP measurement of the peer sidelink U2U Remote UE is not available;

3> consider the threshold conditions to be met (entry);

1> else:

2> if the SL-RSRP measurement of the peer NR sidelink U2U Remote UE is available and is above *sl-RSRP-ThreshU2U* if configured; or

2> if the SD-RSRP measurement of the peer NR sidelink U2U Remote UE is available and is above *sd-RSRP-ThreshU2U* if configured;

3> consider the threshold conditions not to be met (leave);

1> if the threshold conditions for sending Relay Discovery Response message with Model B specified in this clause were previously not met:

2> if the *sd-RSRP-ThreshU2U* is not configured, or if the SD-RSRP of the NR sidelink U2U Relay UE is available and is above *sd-RSRP-ThreshU2U* if configured;

3> consider the threshold conditions to be met (entry);

1> else:

2> if the SD-RSRP of the NR sidelink U2U Relay UE is available and is below *sd-RSRP-ThreshU2U* by *sd-HystMinU2U* if configured;

3> consider the threshold conditions not to be met (leave);

When evaluating the peer NR sidelink U2U Remote UE, the U2U Remote UE shall apply layer 3 filtering as specified in 5.5.3.2 using the *sl-FilterCoefficientU2U* or *sd-FilterCoefficientU2U* in *SL-RemoteUE-ConfigU2U* if provided, before using the SL-RSRP or SD-RSRP measurement results respectively.

5.8.17.3 Conditions for selection and reselection of NR sidelink U2U Relay UE

A UE capable of NR sidelink U2U Remote UE operation initiates NR sidelink U2U Relay (re)selection procedure as specified in 5.8.17.4 when one of the following conditions is met:

- 1> if the UE does not have a selected NR sidelink U2U Relay UE:
 - 2> if configured by upper layers to search for or select a NR sidelink U2U Relay UE; or
 - 2> if *sl-RSRP-ThreshU2U* is not configured, or if the SL-RSRP measurement of the peer NR sidelink U2U Remote UE is available and is below *sl-RSRP-ThreshU2U* by *sl-HystMinU2U* if configured; or
 - 2> if *sd-RSRP-ThreshU2U* is not configured, or if the SD-RSRP measurement of the peer NR sidelink U2U Remote UE is available and is below *sd-RSRP-ThreshU2U* by *sd-HystMinU2U* if configured;
- 1> else if the UE has a selected NR sidelink U2U Relay UE:
 - 2> if the SL-RSRP of the currently selected NR sidelink U2U Relay UE is available and is below *sl-RSRP-ThreshU2U* by *sl-HystMinU2U* within *sl-RemoteUE-ConfigU2U* if configured; or
 - 2> if the SD-RSRP of the currently selected NR sidelink U2U Relay UE is available, and is below *sd-RSRP-ThreshU2U* by *sd-HystMinU2U* within *sl-RemoteUE-ConfigU2U* if configured; or

NOTE: For relay selection, U2U Remote UE uses SL-RSRP measurements for relay selection trigger evaluation when there is data transmission from peer U2U Remote UE to U2U Remote UE. For relay reselection, U2U Remote UE uses SL-RSRP measurements for relay reselection trigger evaluation when there is data transmission from U2U Relay UE to U2U Remote UE. And in both cases, it is left to UE implementation whether to use SL-RSRP or SD-RSRP for relay (re)selection trigger evaluation in case of no data transmission.

- 2> if the upper layers indicate to (re)select another NR sidelink U2U Relay UE; or
- 2> if the sidelink radio link failure is detected on the PC5-RRC connection with the current NR sidelink U2U Relay UE as specified in clause 5.8.9.3.

When evaluating the currently selected NR sidelink U2U Relay UE, the U2U Remote UE shall apply layer 3 filtering as specified in 5.5.3.2 using the *sl-FilterCoefficientU2U* or *sd-FilterCoefficientU2U* in *SL-RemoteUE-ConfigU2U* if provided, before using the SL-RSRP or SD-RSRP measurement results respectively.

5.8.17.4 Actions related to selection and reselection of NR sidelink U2U Relay UE

Upon initiation of the NR sidelink U2U Relay (re)selection procedure, the UE shall:

- 1> perform NR sidelink discovery procedure as specified in clause 5.8.13 or U2U Relay Communication with integrated Discovery as specified in clause 5.8.8, in order to search for candidate NR sidelink U2U Relay UEs:
 - 2> if the UE is performing NR sidelink discovery procedure as specified in clause 5.8.13:
 - 3> when evaluating the one or more detected NR sidelink U2U Relay UEs, apply layer 3 filtering as specified in 5.5.3.2 across measurements that concern the same U2U Relay UE ID and using the *sd-FilterCoefficientU2U* in *SIB12* (if in RRC_IDLE/INACTIVE), the *sd-FilterCoefficientU2U* in *sl-ConfigDedicatedNR* (if in RRC_CONNECTED) or the preconfigured *sd-FilterCoefficientU2U* as defined in 9.3 (out of coverage), before using the SD-RSRP measurement results;
 - 3> consider a candidate NR sidelink U2U Relay UE for which SD-RSRP exceeds *sd-RSRP-ThreshU2U* has met the AS criteria;
 - 2> if the UE is performing U2U Relay Communication with integrated Discovery as specified in TS 23.304 [65] and has received Direct Communication Request message(s) from one or multiple NR sidelink U2U Relay UEs:

- 3> when evaluating the NR sidelink U2U Relay UE(s), apply layer 3 filtering as specified in 5.5.3.2 across measurements that concern the same U2U Relay UE ID and using the *sd-FilterCoefficientU2U* in *SIB12* (if in RRC_IDLE/INACTIVE), the *sd-FilterCoefficientU2U* in *sl-ConfigDedicatedNR* (if in RRC_CONNECTED) or the preconfigured *sd-FilterCoefficientU2U* as defined in 9.3 (out of coverage), before using the SL-RSRP measurement results;
- 3> consider a candidate NR sidelink U2U Relay UE for which SL-RSRP exceeds *sd-RSRP-ThreshU2U* has met the AS criteria;
- 1> if the UE detects any suitable NR sidelink U2U Relay UE(s):
 - 2> consider one of the available suitable NR sidelink U2U Relay UE(s) can be selected;
- 1> else:
 - 2> consider no NR sidelink U2U Relay UE to be selected.

NOTE: A candidate NR sidelink U2U Relay UE which meets all AS layer criteria defined in 5.8.17.4 and higher layer criteria defined in TS 23.304 [65] can be regarded as suitable NR sidelink U2U Relay UE by the NR sidelink U2U Remote UE. If multiple suitable NR sidelink U2U Relay UEs are available, it is up to Remote UE implementation to choose one NR sidelink U2U Relay UE. The details of the interaction with upper layers are up to UE implementation.

5.8.18 NR sidelink positioning

5.8.18.1 General

The purpose of this procedure is to perform NR sidelink positioning as specified in TS 38.305 [73].

5.8.18.2 NR sidelink positioning measurement

A UE capable of NR sidelink positioning that is configured by upper layers for performing SL-PRS measurement:

- 1> if the conditions for NR sidelink positioning operation as defined in 5.8.2 are met:
 - 2> if the frequency used for NR sidelink positioning is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *RRCReconfiguration* message or *sl-FreqInfoList/sl-FreqInfoListSizeExt* included in *SIB12* and/or *sl-PosFreqInfoList* included in *SIB23*:
 - 3> if the UE is configured with *sl-RxPool* and/or *sl-PRS-RxPool* included in *RRCReconfiguration* message with *reconfigurationWithSync* (i.e. handover):
 - 4> configure lower layers to monitor sidelink control information and the corresponding SL-PRS using the pool(s) of resources indicated by *sl-RxPool* and/or *sl-PRS-RxPool*;
 - 3> else if the cell chosen for NR sidelink positioning provides *SIB12* and/or *SIB23*:
 - 4> configure lower layers to monitor sidelink control information and the corresponding SL-PRS using the pool(s) of resources indicated by *sl-RxPool* in *SIB12* and/or *sl-PRS-RxPool* in *SIB23*;
 - 2> else:
 - 3> configure lower layers to monitor sidelink control information and the corresponding SL-PRS using the pool(s) of resources that were preconfigured by *sl-RxPool* and/or *sl-PRS-RxPool* in *SL-PreconfigurationNR*, as defined in clause 9.3.

5.8.18.3 NR sidelink positioning transmission

A UE capable of NR sidelink positioning that is configured by upper layers to transmit SL-PRS shall:

- 1> if the conditions for NR sidelink positioning operation as defined in 5.8.2 are met:
 - 2> if the frequency used for NR sidelink positioning is included in *sl-FreqInfoToAddModList/sl-FreqInfoToAddModListExt* in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message or included in *sl-*

PosConfigCommonNR within *SIB23* or included in *sl-ConfigCommonNR* or *sl-FreqInfoListSizeExt* within *SIB12*:

3> if the UE is in *RRC_CONNECTED* and uses the frequency included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* message:

4> if the UE is configured with *sl-ScheduledConfig*:

5> if T310 for MCG or T311 is running; and if *sl-PRS-TxPoolExceptional* or *sl-TxPoolExceptional* is included in *sl-PosFreqInfoList* or *sl-FreqInfoList/sl-FreqInfoListSizeExt* for the concerned frequency in *SIB23* or *SIB12* or included in *sl-ConfigDedicatedNR* in *RRCReconfiguration*; or

5> if T301 is running and the cell on which the UE initiated RRC connection re-establishment provides *SIB23* or *SIB12* including *sl-PRS-TxPoolExceptional* or *sl-TxPoolExceptional* for the concerned frequency; or

5> if T304 for MCG is running and the UE is configured with *sl-PRS-TxPoolExceptional* or *sl-TxPoolExceptional* included in *sl-ConfigDedicatedNR* for the concerned frequency in *RRCReconfiguration*:

6> configure lower layers to perform the sidelink resource allocation scheme 2 based on random selection using the resource pool indicated by *sl-PRS-TxPoolExceptional* or *sl-TxPoolExceptional* as defined in TS 38.321 [3];

5> else:

6> configure lower layers to perform the sidelink resource allocation scheme 1 for NR sidelink positioning;

5> if T311 is running, configure the lower layers to release the resources indicated by *rrc-ConfiguredSidelinkGrant* (if any);

4> if the UE is configured with *sl-UE-SelectedConfig*:

5> if a result of full sensing, if selected and is allowed by *sl-PosAllowedResourceSelectionConfig*, on the resources configured in *sl-PRS-TxPoolSelectedNormal* or by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-TxPoolSelectedNormal* for the concerned frequency included in *sl-ConfigDedicatedNR* within *RRCReconfiguration* is not available in accordance with TS 38.214 [19];

6> if *sl-TxPoolExceptional* or *sl-PRS-TxPoolExceptional* for the concerned frequency is included in *RRCReconfiguration*; or

6> if the PCell provides *SIB12* and/or *SIB23* including *sl-TxPoolExceptional* or *sl-PRS-TxPoolExceptional* in *sl-FreqInfoList/sl-FreqInfoListSizeExt* or *sl-PosFreqInfoList* for the concerned frequency;

7> configure lower layers to perform the sidelink resource allocation scheme 2 based on random selection using the pool of resources indicated by *sl-TxPoolExceptional* or *sl-PRS-TxPoolExceptional* as defined in TS 38.321 [3];

5> else, if the *sl-PRS-TxPoolSelectedNormal* or *sl-TxPoolSelectedNormal* for the concerned frequency is included in the *sl-ConfigDedicatedNR* within *RRCReconfiguration*:

6> configure lower layers to perform the sidelink resource allocation scheme 2 based on resource selection operation according to *sl-PosAllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated by *sl-PRS-TxPoolSelectedNormal* for the concerned frequency, or based on resource selection operation according to *sl-AllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated by *sl-TxPoolSelectedNormal* for the concerned frequency;

3> else:

4> if the cell chosen for NR sidelink positioning transmission provides *SIB23* or *SIB12*:

- 5> if *SIB23* includes *sl-PRS-TxPoolSelectedNormal* for the concerned frequency, and a result of full sensing, if selected and is allowed by *sl-PosAllowedResourceSelectionConfig*, on the resources configured in the *sl-PRS-TxPoolSelectedNormal* is available in accordance with TS 38.214 [19] or random selection, if allowed by *sl-PosAllowedResourceSelectionConfig*, is selected:
 - 6> configure lower layers to perform the sidelink resource allocation scheme 2 based on resource selection operation according to *sl-PosAllowedResourceSelectionConfig* using the pools of resources indicated by *sl-PosTxPoolSelectedNormal* for the concerned frequency as defined in TS 38.321 [3];
- 5> if *SIB12* includes *sl-TxPoolSelectedNormal* for the concerned frequency, and a result of full sensing, if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in the *sl-TxPoolSelectedNormal* is available in accordance with TS 38.214 [19] or random selection, if allowed by *sl-AllowedResourceSelectionConfig*, is selected:
 - 6> configure lower layers to perform the sidelink resource allocation scheme 2 based on resource selection operation according to *sl-AllowedResourceSelectionConfig* using the pools of resources indicated by *sl-TxPoolSelectedNormal* for the concerned frequency as defined in TS 38.321 [3];
- 5> else if *SIB23* includes *sl-PRS-TxPoolExceptional* or *SIB12* includes *sl-TxPoolExceptional* for the concerned frequency:
 - 6> from the moment the UE initiates RRC connection establishment or RRC connection resume, until receiving an *RRCReconfiguration* including *sl-ConfigDedicatedNR*, or receiving an *RRCRelease* or an *RRCReject*; or
 - 6> if a result of full sensing, if selected and is allowed by *sl-PosAllowedResourceSelectionConfig*, on the resources configured in *sl-PRS-TxPoolSelectedNormal* or if selected and is allowed by *sl-AllowedResourceSelectionConfig*, on the resources configured in *sl-TxPoolSelectedNormal* for the concerned frequency in *SIB12* and/or *SIB23* is not available in accordance with TS 38.214 [19];
 - 7> configure lower layers to perform the sidelink resource allocation scheme 2 based on random selection (as defined in TS 38.321 [3]) using the pool of resources indicated by *sl-PRS-TxPoolExceptional* or *sl-TxPoolExceptional* for the concerned frequency;
- 2> else:
 - 3> configure lower layers to perform the sidelink resource allocation scheme 2 based on resource selection operation according to *sl-PosAllowedResourceSelectionConfig* or *sl-AllowedResourceSelectionConfig* (as defined in TS 38.321 [3] and TS 38.214 [19]) using the pools of resources indicated by *sl-PRS-TxPoolSelectedNormal* or *sl-TxPoolSelectedNormal* in *SL-PreconfigurationNR* for the concerned frequency.

NOTE: Void.

NOTE 1: The UE continues to use resources configured in *rrc-ConfiguredSidelinkGrant* (while T310 is running) until it is released (i.e. until T310 has expired). The UE does not use sidelink configured grant type 2 resources while T310 is running.

NOTE 2: In case of RRC reconfiguration with sync, the UE uses resources configured in *rrc-ConfiguredSidelinkGrant* (while T304 on the MCG is running) if provided by the target cell.

NOTE 3: It is up to UE implementation to determine, in accordance with TS 38.321[3], which resource pool to use if multiple resource pools are configured, and which resource allocation scheme is used in the AS based on UE capability (for a UE in RRC_IDLE/RRC_INACTIVE) and the allowed resource schemes *sl-PosAllowedResourceSelectionConfig* or *sl-AllowedResourceSelectionConfig* in the resource pool configuration.

5.9 MBS Broadcast

5.9.1 Introduction

5.9.1.1 General

UE receiving or interested to receive MBS broadcast service(s) applies MBS broadcast procedures described in this clause as well as the MBS Interest Indication procedure as specified in clause 5.9.4. The UE may acquire MBS broadcast only if the UE can acquire it without disrupting unicast, SDT or MBS multicast data reception.

MBS broadcast configuration information, except CFR configuration for MCCH/MTCH, is provided on MCCH logical channel. MCCH carries the *MBSBroadcastConfiguration* message which indicates the MBS broadcast sessions that are provided in the cell as well as the corresponding scheduling related information for these sessions. Optionally, the *MBSBroadcastConfiguration* message may also contain a list of neighbour cells providing the same broadcast MBS service(s) as provided in the current cell. The configuration information required by the UE to receive MCCH is provided in *SIB1* and *SIB20*. Additionally, System Information may provide information related to service continuity of MBS broadcast in *SIB21*.

5.9.1.2 MCCH scheduling

The MCCH information (i.e. information transmitted in messages sent over MCCH) is transmitted periodically, using a configurable repetition period and within a configured transmission window. MCCH transmissions (and the associated radio resources and MCS) are indicated via the PDCCH addressed to MCCH-RNTI. PDCCH monitoring occasion(s) for MCCH transmission are determined according to the common search space indicated by *searchspaceMCCH*. If *searchspaceMCCH* is set to zero, PDCCH monitoring occasions for MCCH message reception in the MCCH transmission window are the same as PDCCH monitoring occasions for *SIB1* where the mapping between PDCCH monitoring occasions and SSBs is specified in TS 38.213[13]. If *searchspaceMCCH* is not set to zero, PDCCH monitoring occasions for MCCH message are determined based on search space indicated by *searchspaceMCCH*. PDCCH monitoring occasions for MCCH message which are not overlapping with UL symbols (determined according to *tdd-UL-DL-ConfigurationCommon*) are sequentially numbered from one in the MCCH transmission window. The $[x \times N + K]^{\text{th}}$ PDCCH monitoring occasion for MCCH message in MCCH transmission window corresponds to the K^{th} transmitted SSB, where $x = 0, 1, \dots, X-1$, $K = 1, 2, \dots, N$, N is the number of actual transmitted SSBs determined according to *ssb-PositionsInBurst* in *SIB1* and X is equal to $\text{CEIL}(\text{number of PDCCH monitoring occasions in MCCH transmission window} / N)$. The actual transmitted SSBs are sequentially numbered from one in ascending order of their SSB indexes. The UE assumes that, in the MCCH transmission window, PDCCH for an MCCH message is transmitted in at least one PDCCH monitoring occasion corresponding to each transmitted SSB and thus the selection of SSB for the reception MCCH messages is up to UE implementation.

5.9.1.3 MCCH information validity and notification of changes

Change of MCCH information only occurs at specific radio frames, i.e. the concept of a modification period is used. Within a modification period, the same MCCH information may be transmitted a number of times, as defined by its scheduling (which is based on a repetition period).

When the network changes (some of) the MCCH information, it notifies the UEs about the change starting from the beginning of the MCCH modification period via PDCCH which schedules the MCCH in every repetition in that modification period.

Upon receiving a change notification, a UE receiving or interested to receive MBS services transmitted using MBS broadcast acquires the new MCCH information starting from the same slot. The UE applies the previously acquired MCCH information until the UE acquires the new MCCH information. The notification is transmitted with a 2-bit bitmap, see TS 38.212 [17] clause 7.3.1.5.1. The MSB in the 2-bit bitmap, when set to '1', indicates the start of new MBS service(s). The LSB in the 2-bit bitmap, when set to '1', indicates modification of MCCH information other than the change caused by start of new MBS service(s), e.g. modification of a configuration of an on-going MBS session(s), MBS session(s) stop or neighbouring cell information modification.

5.9.2 MCCH information acquisition

5.9.2.1 General



Figure 5.9.2.1-1: MCCH information acquisition

The UE applies the MCCH information acquisition procedure to acquire the MBS broadcast configuration information broadcasted by the network. The procedure applies to MBS capable UEs interested to receive or that are receiving MBS broadcast services that are in RRC_IDLE, RRC_INACTIVE or RRC_CONNECTED with an active BWP with common search space configured by *searchSpaceMCCH*.

5.9.2.2 Initiation

A UE shall apply the MCCH information acquisition procedure upon becoming interested to receive MBS broadcast services. A UE interested to receive MBS broadcast services shall apply the MCCH information acquisition procedure upon entering the cell providing *SIB20* (e.g. upon power on, following UE mobility), upon receiving *SIB20* of an SCell via dedicated signalling and upon receiving a notification that the MCCH information has changed due to the start of new MBS service(s). A UE that is receiving data via broadcast MRB shall apply the MCCH information acquisition procedure upon receiving a notification that the MCCH information has changed due to MCCH information modification other than the change caused by the start of new MBS service(s).

NOTE 1: It is up to UE implementation how to address a possibility of the UE missing an MCCH change notification.

NOTE 2: It is up to UE implementation to use the cell/tracking area list in the USD to avoid acquiring the MCCH when the UE is outside the MBS service area of the MBS broadcast service.

Unless explicitly stated otherwise in the procedural specification, the MCCH information acquisition procedure overwrites any stored MCCH information, i.e. delta configuration is not applicable for MCCH information and the UE discontinues using a field if it is absent in MCCH information.

5.9.2.3 MCCH information acquisition by the UE

An MBS capable UE interested to receive or receiving an MBS broadcast service shall:

- 1> if the procedure is triggered by an MCCH information change notification:
 - 2> start acquiring the *MBSBroadcastConfiguration* message on MCCH in the concerned cell from the slot in which the change notification was received;
- 1> if the UE enters a cell providing *SIB20*; or
- 1> if the UE receives *sCellSIB20*:
 - 2> acquire the *MBSBroadcastConfiguration* message on MCCH in the concerned cell at the next repetition period.

5.9.2.4 Actions upon reception of the *MBSBroadcastConfiguration* message

No UE requirements related to the contents of the *MBSBroadcastConfiguration* message apply other than those specified elsewhere e.g. within the corresponding field descriptions.

5.9.3 Broadcast MRB configuration

5.9.3.1 General

The broadcast MRB configuration procedure is used by the UE to configure PDCP, RLC, MAC and the physical layer upon starting and/or stopping to receive a broadcast MRB transmitted on MTCH, or upon modification of a configuration of a broadcast MRB received by the UE. The procedure applies to MBS capable UEs that are interested to receive or that are receiving an MBS broadcast service that are in RRC_IDLE, RRC_INACTIVE or RRC_CONNECTED with an active BWP with common search space configured by *searchSpaceMTCH* or *searchSpaceMCCH*.

NOTE: How to perform a modification of a broadcast MRB which is already configured in the UE is left to UE implementation.

5.9.3.2 Initiation

The UE applies the broadcast MRB establishment procedure to start receiving an MBS session of an MBS broadcast service it is interested in. The procedure may be initiated e.g. upon start of the MBS session, upon entering a cell providing an MBS broadcast service the UE is interested in, upon becoming interested in the ongoing MBS broadcast service, upon removal of the UE capability limitations inhibiting reception of the ongoing MBS broadcast service UE is interested in.

The UE applies the broadcast MRB release procedure to stop receiving a session of an MBS broadcast service. The procedure may be initiated e.g. upon stop of the MBS session, upon leaving the cell broadcasting the MBS service the UE is interested in, upon losing interest in the MBS service, when capability limitations start inhibiting reception of the concerned service.

5.9.3.3 Broadcast MRB establishment

Upon a broadcast MRB establishment, the UE shall:

- 1> establish a PDCP entity and an RLC entity in accordance with *MRB-InfoBroadcast* for this broadcast MRB included in the *MBSBroadcastConfiguration* message and the configuration specified in 9.1.1.7;
- 1> configure the MAC layer in accordance with the *mtch-SchedulingInfo* (if included);
- 1> configure the physical layer in accordance with the *mbs-SessionInfoList*, *searchSpaceMTCH*, and *pdsch-ConfigMTCH*, applicable for the broadcast MRB;
- 1> if an SDAP entity with the received *mbs-SessionId* does not exist:
 - 2> establish an SDAP entity as specified in TS 37.324 [24] clause 5.1.1;
 - 2> indicate the establishment of the user plane resources for the *mbs-SessionId* to upper layers;
- 1> receive DL-SCH on the cell where the *MBSBroadcastConfiguration* message was received for the established broadcast MRB using *g-RNTI* and *mtch-SchedulingInfo* (if included) in this message for this MBS broadcast service.

5.9.3.4 Broadcast MRB release

Upon broadcast MRB release for MBS broadcast service, the UE shall:

- 1> release the PDCP entity, RLC entity as well as the related MAC and physical layer configuration;
- 1> if the SDAP entity associated with the corresponding *mbs-SessionId* has no associated MRB:
 - 2> release the SDAP entity, as specified in TS 37.324 [24] clause 5.1.2;
 - 2> indicate the release of the user plane resources for the *mbs-SessionId* to upper layers.

5.9.4 MBS Interest Indication

5.9.4.1 General

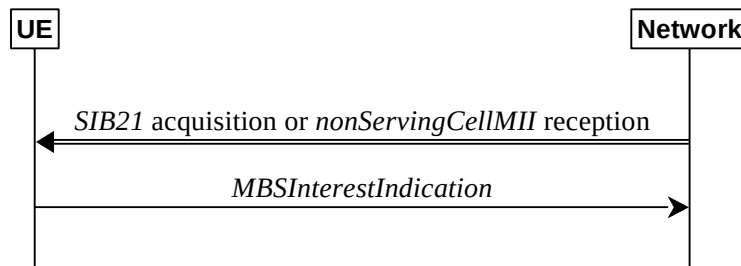 


Figure 5.9.4.1-1: MBS Interest Indication

The purpose of this procedure is to inform the network that the UE in RRC_CONNECTED is receiving or is interested to receive MBS broadcast service(s) and/or to inform the network about the priority of MBS broadcast versus unicast and multicast MRB reception. MBS Interest Indication can only be sent after AS security activation.

5.9.4.2 Initiation

An MBS capable UE in RRC_CONNECTED may initiate the procedure in several cases including upon successful connection establishment/resume, upon entering or leaving the broadcast service area, upon MBS broadcast session start or stop, upon change of interest, upon change of priority between MBS broadcast reception and unicast/multicast reception, upon change to a PCell providing *SIB21* (i.e. where the *SIB1* scheduling information contains *SIB21*), upon receiving *SIB20* of an SCell via dedicated signalling, upon handover, and upon RRC connection re-establishment, upon change to a PCell providing *nonServingCellMII* in *SIB1*, upon starting or stopping reception of MBS broadcast service on a non-serving cell, upon change of CFR information or subcarrier spacing for MBS broadcast reception on a non-serving cell. If the UE does not have the CFR information and subcarrier spacing for MBS broadcast reception on a non-serving cell at the time it sends the MBS Interest Indication, the UE sends another MBS Interest Indication after it has acquired this information from the non-serving cell.

Upon initiating the procedure, the UE shall:

- 1> if *SIB21* is provided by the PCell; or
- 1> if *nonServingCellMII* is provided in *SIB1* by the PCell:
 - 2> ensure having a valid version of *SIB21* for the PCell, if present;
 - 2> if the UE did not transmit MBS Interest Indication since last entering RRC_CONNECTED state; or
 - 2> if *SIB21* is provided and since the last time the UE transmitted an MBS Interest Indication to a PCell providing *SIB21*, the UE connected to a PCell, not providing *SIB21*; or
 - 2> if *nonServingCellMII* is provided in *SIB1* and since the last time the UE transmitted an MBS Interest Indication to a PCell providing *nonServingCellMII* in *SIB1*, the UE connected to a PCell not providing *nonServingCellMII* in *SIB1*:
 - 3> if the set of MBS broadcast frequencies of interest, determined in accordance with 5.9.4.3, is not empty:
 - 4> set the contents of MBS Interest Indication according to 5.9.4.5 and initiate transmission of the *MBSInterestIndication* message;
- 2> else:
 - 3> if the set of MBS broadcast frequencies of interest, determined in accordance with 5.9.4.3, is different from *mbs-FreqList* included in the last transmission of the MBS Interest Indication; or
 - 3> if the set of MBS broadcast frequencies of interest for MBS broadcast reception on non-serving cell, determined in accordance with 5.9.4.3, is different from *freqInfoMBS* included in the last transmission of the MBS Interest Indication; or

- 3> if any of the subcarrier spacing and the CFR information for MBS broadcast reception on non-serving cell has changed since the last transmission of the MBS Interest Indication; or
- 3> if the subcarrier spacing and the CFR information for MBS broadcast reception on non-serving cell have been acquired from the non-serving cell which were not reported in the previous MBS Interest Indication; or
- 3> if the prioritisation of reception of all indicated MBS broadcast frequencies compared to reception of any of the established unicast bearers and multicast MRBs has changed since the last transmission of the MBS Interest Indication:
- 4> set the contents of MBS Interest Indication according to 5.9.4.5 and initiate transmission of the *MBSInterestIndication* message;

NOTE: The UE may send MBS Interest Indication even when it is able to receive the MBS services it is interested in, i.e. to avoid that the network allocates a configuration inhibiting MBS broadcast reception.

- 3> else if *SIB20* is provided for the PCell or for the SCell:
 - 4> if since the last time the UE transmitted the MBS Interest Indication, the UE connected to a PCell not providing *SIB20* and the UE was not provided with *SIB20* for an SCell; or
 - 4> if the set of MBS broadcast services of interest determined in accordance with 5.9.4.4 is different from *mbs-ServiceList* included in the last transmission of the MBS Interest Indication:
 - 5> set the contents of MBS Interest Indication according to 5.9.4.5 and initiate the transmission of *MBSInterestIndication* message.

5.9.4.3 MBS frequencies of interest determination

The UE shall:

- 1> consider a frequency to be part of the MBS frequencies of interest if the following conditions are met:
 - 2> at least one MBS session the UE is receiving or interested to receive via a broadcast MRB is ongoing or about to start; and

NOTE 1: The UE may determine whether the session is ongoing or about to start from the start and stop time indicated in the User Service Description (USD), see TS 38.300 [2] or TS 23.247 [67].

- 2> for at least one of these MBS sessions, *SIB21* acquired from the PCell or a non-serving cell includes mapping between the concerned frequency and one or more MBS FSAs indicated in the USD for this session, or for at least one of these MBS sessions, the concerned frequency is not included in *SIB21* but is indicated in the USD for this session; and

NOTE 2: The UE considers a frequency to be part of the MBS frequencies of interest even though NG-RAN may (temporarily) not employ a broadcast MRB for the concerned session, i.e., the UE does not verify if the session is indicated on MCCH.

- 2> the *supportedBandCombinationList* the UE included in *UE-NR-Capability* contains at least one band combination including the concerned MBS frequency.

NOTE 3: When evaluating which frequencies the UE is capable of receiving, the UE does not take into account whether they are currently configured as serving frequencies.

5.9.4.4 MBS services of interest determination

The UE shall:

- 1> consider an MBS service to be part of the MBS services of interest if the following conditions are met:
 - 2> the UE is receiving or interested to receive this service via a broadcast MRB; and
 - 2> the session of this service is ongoing or about to start; and

- 2> one or more MBS FSAs in the USD for this service is included in *SIB21* acquired from the PCell for a frequency belonging to the set of MBS frequencies of interest, determined according to 5.9.4.3 or *SIB21* acquired from the PCell does not provide the frequency mapping for the concerned service but that frequency is included in the USD for this service.

NOTE: The UE may determine whether the session is ongoing or about to start from the start and stop time indicated in the User Service Description (USD), see TS 38.300 [2] or TS 23.247 [67].

5.9.4.5 Setting of the contents of MBS Interest Indication

The UE shall set the contents of the MBS Interest Indication as follows:

- 1> if the UE has a valid version of *SIB21* for the PCell; and
- 1> if the set of MBS frequencies of interest, determined in accordance with 5.9.4.3, is not empty:
 - 2> include *mbs-FreqList* and set it to include the MBS frequencies of interest sorted by decreasing order of interest, using the *absoluteFrequencySSB* for serving frequency, if applicable, and the *ARFCN-ValueNR(s)* as included in *SIB21* or in USD (for neighbouring frequencies);
 - 2> include *mbs-Priority* if the UE prioritises reception of all indicated MBS frequencies above reception of any of the unicast bearers and multicast MRBs;

NOTE 1: If the UE prioritises MBS broadcast reception and unicast/multicast data cannot be supported because of congestion on the MBS carrier(s), NG-RAN may for example initiate release of unicast bearers/multicast MRBs.

- 2> if *SIB20* is provided for the PCell or for the SCell:
 - 3> include *mbs-ServiceList* and set it to indicate the set of MBS services of interest sorted by decreasing order of interest determined in accordance with 5.9.4.4;

NOTE 2: The *mbs-ServiceList* is not required to be used by the NG-RAN to determine the frequency on which to enable MBS broadcast reception for the UE.

- 1> if *nonServingCellMII* is provided in *SIB1* by the PCell; and
- 1> if the set of MBS frequencies for MBS broadcast reception on non-serving cell, determined in accordance with 5.9.4.3, is not empty:
 - 2> include *freqInfoMBS*;
 - 2> if the UE has acquired *cfr-InfoMBS* and *subcarrierSpacing* for MBS broadcast reception on the non-serving cell:
 - 3> include *cfr-InfoMBS* and *subcarrierSpacing*.

5.10 MBS multicast reception in RRC_INACTIVE

5.10.1 Introduction

5.10.1.1 General

A UE configured to receive MBS multicast service(s) in RRC_INACTIVE that the UE has joined applies MBS multicast procedures described in this clause.

The multicast MCCH information (i.e., the *MBSMulticastConfiguration* message) is provided in *RRCRelease* and on multicast MCCH logical channel.

When there is temporarily no data for an active multicast session or when the multicast session is deactivated, the network notifies the UE to stop monitoring the corresponding G-RNTI via the *MBSMulticastConfiguration* message. If the UE is notified to stop monitoring the G-RNTI(s) for all the joined multicast sessions, it stops monitoring the Multicast MCCH-RNTI for the cell where it received the notification.

Multicast MCCH carries the *MBSMulticastConfiguration* message which indicates the MBS multicast sessions that are provided in the cell as well as the corresponding scheduling related information for these sessions. Optionally, the *MBSMulticastConfiguration* message may also contain a list of neighbour cells providing the same MBS multicast service(s) for reception in RRC_INACTIVE as provided in the current cell. The configuration information required by the UE to receive multicast MCCH is provided in *SIB24*.

5.10.1.2 Multicast MCCH scheduling

The multicast MCCH information (if sent on multicast MCCH logical channel) is transmitted periodically, using a configurable repetition period and within a configured transmission window. The multicast MCCH transmissions (and the associated radio resources and MCS) are indicated via the PDCCH addressed to Multicast MCCH-RNTI. PDCCH monitoring occasion(s) for the multicast MCCH transmission are determined according to the common search space indicated by *searchSpaceMulticastMCCH*. If *searchSpaceMulticastMCCH* is set to zero, PDCCH monitoring occasions for the multicast MCCH message reception in the multicast MCCH transmission window are the same as PDCCH monitoring occasions for *SIB1* where the mapping between PDCCH monitoring occasions and SSBs is specified in TS 38.213 [13]. If *searchSpaceMulticastMCCH* is not set to zero, PDCCH monitoring occasions for the multicast MCCH message are determined based on search space indicated by *searchSpaceMulticastMCCH*. PDCCH monitoring occasions for the multicast MCCH message which are not overlapping with UL symbols (determined according to *tdd-UL-DL-ConfigurationCommon*) are sequentially numbered from one in the multicast MCCH transmission window. The $[x \times N + K]^{\text{th}}$ PDCCH monitoring occasion for the multicast MCCH message in the multicast MCCH transmission window corresponds to the K^{th} transmitted SSB, where $x = 0, 1, \dots, X-1$, $K = 1, 2, \dots, N$, N is the number of actual transmitted SSBs determined according to *ssb-PositionsInBurst* in *SIB1* and X is equal to $\text{CEIL}(\text{number of PDCCH monitoring occasions in multicast MCCH transmission window} / N)$. The actual transmitted SSBs are sequentially numbered from one in ascending order of their SSB indexes. The UE assumes that, in the multicast MCCH transmission window, PDCCH for a multicast MCCH message is transmitted in at least one PDCCH monitoring occasion corresponding to each transmitted SSB and thus the selection of SSB for the reception of multicast MCCH messages is up to UE implementation.

5.10.1.3 Multicast MCCH information validity and notification of changes

Change of multicast MCCH information only occurs at specific radio frames, i.e. the concept of a modification period is used. Within a modification period, the same multicast MCCH information may be transmitted a number of times, as defined by its scheduling (which is based on a repetition period).

When the network changes (some of) the multicast MCCH information, it notifies the UEs about the change starting from the beginning of the multicast MCCH modification period via PDCCH which schedules the multicast MCCH in every repetition in that modification period.

Upon receiving a change notification, a UE receiving MBS multicast service(s) in RRC_INACTIVE acquires the new multicast MCCH information starting from the same slot. The UE applies the previously acquired multicast MCCH information until the UE acquires the new multicast MCCH information. The notification is transmitted with a 2-bit bitmap, see TS 38.212 [17] clause 7.3.1.5.1. The MSB in the 2-bit bitmap is reserved. The LSB in the 2-bit bitmap, when set to '1', indicates modification of multicast MCCH information, e.g. modification of a configuration of an on-going MBS multicast session, stop of G-RNTI monitoring for the corresponding multicast session or neighbouring cell information modification.

5.10.2 Multicast MCCH information acquisition

5.10.2.1 General



Figure 5.10.2.1-1: Multicast MCCH information acquisition

The UE applies the multicast MCCH information acquisition procedure to acquire the *MBSMulticastConfiguration* message from the network. The procedure applies to UEs configured to receive MBS multicast services in RRC_INACTIVE.

5.10.2.2 Initiation

If configured to receive MBS multicast services in RRC_INACTIVE, a UE applies the multicast MCCH information acquisition procedure for PTM configuration update and upon selection to a new cell (i.e., different from the cell where the UE was configured to receive multicast in RRC_CONNECTED) providing *SIB24* or reselection to a cell providing *SIB24* (except in case the UE is aware that the multicast sessions that the UE has joined are not available for RRC_INACTIVE in the new cell) and may apply the multicast MCCH information acquisition procedure upon receiving *GroupPaging* in the paging message. A UE that is receiving MBS multicast data in RRC_INACTIVE shall apply the multicast MCCH information acquisition procedure upon receiving a notification that the multicast MCCH information has changed.

NOTE: It is up to UE implementation how to address a possibility of the UE missing a multicast MCCH change notification.

Unless explicitly stated otherwise in the procedural specification, the multicast MCCH information acquisition procedure overwrites any stored multicast MCCH information as specified in 5.10.1.1, i.e. delta configuration is not applicable for multicast MCCH information and the UE discontinues using a field if it is absent in multicast MCCH information.

5.10.2.3 Multicast MCCH information acquisition by the UE

A UE configured to receive an MBS multicast service in RRC_INACTIVE shall:

- 1> if the procedure is triggered by a multicast MCCH information change notification:
 - 2> start acquiring the *MBSMulticastConfiguration* message on multicast MCCH in the concerned cell from the slot in which the change notification was received;
- 1> if the UE selects a new cell (i.e., different from the cell where the UE was configured to receive multicast in RRC_CONNECTED) providing *SIB24* or reselects a cell providing *SIB24*; or
- 1> if the procedure is triggered by the reception of *GroupPaging* in the paging message in 5.3.2.3; or
- 1> if the UE receives *RRCRelease* configuring the UE to receive MBS multicast in RRC_INACTIVE which does not include PTM configuration for at least one multicast session for which the UE is not indicated to stop monitoring the G-RNTI:
 - 2> acquire the *MBSMulticastConfiguration* message on multicast MCCH in the concerned cell at the next repetition period.

5.10.2.4 Actions upon reception of the *MBSMulticastConfiguration* message

No UE requirements related to the contents of the *MBSMulticastConfiguration* message apply other than those specified elsewhere, e.g., within the corresponding field descriptions.

5.10.3 MRB configuration

5.10.3.1 General

The multicast MRB configuration procedure is used by the UE in RRC_INACTIVE state to configure PDCP, RLC, MAC entities and the physical layer upon PTM configuration update and moving to a cell providing *SIB24*. The UE may perform multicast MRB modification or release/establishment when PTM configuration is updated via multicast MCCH or when it moves to a cell where the PDCP COUNT of the corresponding multicast MRB is not synchronized within the RNA. The UE may perform multicast MRB modification when it moves to a cell where the PDCP COUNT of the corresponding multicast MRB is synchronized within the RNA. The UE resets MAC upon cell selection or reselection.

NOTE: How to perform modification of a multicast MRB which is already configured in the UE is left to UE implementation.

Upon moving to a cell where the PDCP COUNT of a multicast MRB is not synchronized, an indication is sent to the lower layer to inform the PDCP COUNT non-synchronization of the corresponding multicast MRB. Upon transition from RRC_CONNECTED to RRC_INACTIVE in the same cell, the UE can continue using the multicast MRBs used in RRC_CONNECTED and in this case, the same LCIDs are used for the same multicast MRBs. Upon transition from RRC_INACTIVE to RRC_CONNECTED, the UE releases the MRBs configured in *RRCRelease* or multicast MCCH and performs delta configuration based on the stored MRB configuration from RRC_CONNECTED, if not indicated to perform full configuration.

5.10.3.2 Multicast MRB establishment

Upon establishment of a multicast MRB, the UE shall:

- 1> establish a PDCP entity and an RLC entity in accordance with *mrbs-ListMulticast* for this multicast MRB included in the *MBSMulticastConfiguration* message;
- 1> configure the MAC layer in accordance with the *mtch-SchedulingInfo* (if included);
- 1> configure the physical layer in accordance with the *mrbs-SessionInfoListMulticast*, *searchSpaceMulticastMTCH*, and *pdsch-ConfigMTCH*, applicable for the multicast MRB;
- 1> if an SDAP entity with the received *mrbs-SessionId* does not exist:
 - 2> establish an SDAP entity as specified in TS 37.324 [24] clause 5.1.1;
 - 2> indicate the establishment of the user plane resources for the *mrbs-SessionId* to upper layers;
- 1> receive DL-SCH for the established multicast MRB using *g-RNTI* (if not indicated to stop monitoring this G-RNTI) and *mtch-SchedulingInfo* (if included) in this message for this MBS multicast service.

5.10.3.3 Multicast MRB release

Upon release of a multicast MRB, the UE shall:

- 1> release the PDCP entity, RLC entity as well as the related MAC and physical layer configuration;
- 1> if the SDAP entity associated with the corresponding *mrbs-SessionId* has no associated MRB:
 - 2> release the SDAP entity, as specified in TS 37.324 [24] clause 5.1.2;
 - 2> indicate the release of the user plane resources for the *mrbs-SessionId* to upper layers.

6 Protocol data units, formats and parameters (ASN.1)

6.1 General

6.1.1 Introduction

The contents of each RRC message is specified in clause 6.2 using ASN.1 to specify the message syntax and using tables when needed to provide further detailed information about the fields specified in the message syntax. The syntax of the information elements that are defined as stand-alone abstract types is further specified in a similar manner in clause 6.3.

Usage of the text "Network always configures the UE with a value for this field" in the field description indicates that the network has to provide a value for the field in this or in a previous message based on delta configuration (for an optional field with Need M). It does not imply a mandatory presence of the field.

6.1.2 Need codes and conditions for optional fields

The need for fields to be present in a message or an abstract type, i.e., the ASN.1 fields that are specified as OPTIONAL in the abstract notation (ASN.1), is specified by means of comment text tags attached to the OPTIONAL statement in the abstract syntax. All comment text tags are available for use in the downlink direction for RRC message and in the sidelink for PC5 RRC message. The meaning of each tag is specified in table 6.1.2-1.

If conditions are used, a conditional presence table is provided for the message or information element specifying the need of the field for each condition case. The table also specifies whether UE maintains or releases the value in case the field is absent. The conditions clarify what the UE may expect regarding the setting of the message by the network for the RRC message or by the peer UE in the sidelink RRC message. Violation of conditions is regarded as invalid network behaviour when transmitting downlink RRC message or invalid UE behavior when transmitting PC5 RRC message, which the UE is not required to cope with. Hence the general error handling defined in 10.4 does not apply in case a field is absent although it is mandatory according to the CondC or CondM condition.

For guidelines on the use of need codes and conditions, see Annex A.6 and A.7.

Table 6.1.2-1: Meaning of abbreviations used to specify the need for fields to be present

Abbreviation	Meaning
Cond conditionTag	Conditionally present Presence of the field is specified in a tabular form following the ASN.1 segment.
CondC conditionTag	Configuration condition Presence of the field is conditional to other configuration settings.
CondM conditionTag	Message condition Presence of the field is conditional to other fields included in the message.
Need S	<i>Specified</i> Used for (configuration) fields, whose field description or procedure specifies the UE behavior performed upon receiving a message with the field absent (and not if field description or procedure specifies the UE behavior when field is not configured).
Need M	<i>Maintain</i> Used for (configuration) fields that are stored by the UE i.e. not one-shot. Upon receiving a message with the field absent, the UE maintains the current value.
Need N	<i>No action</i> (one-shot configuration that is not maintained) Used for (configuration) fields that are not stored and whose presence causes a one-time action by the UE. Upon receiving message with the field absent, the UE takes no action.
Need R	<i>Release</i> Used for (configuration) fields that are stored by the UE i.e. not one-shot. Upon receiving a message with the field absent, the UE releases the current value.

NOTE: In this version of the specification, the condition tags CondC and CondM are not used.

Any field with Need M or Need N in system information shall be interpreted as Need R.

The need code used within a CondX definition only applies for the case (part of the condition) where it is defined: A condition may have different need codes for different parts of the condition. In particular, the CondX definition may contain the following "otherwise the field is absent" parts:

- "Otherwise, the field is absent": The field is not relevant or should not be configured when this part of the condition applies. In particular, the UE behaviour is not defined when the field is configured via another part of the condition and is reconfigured to this part of the condition. A need code is not provided when the transition from another part of the condition to this part of the condition is not supported, when the field clearly is a one-shot or there is no difference whether UE maintains or releases the value (e.g., in case the field is mandatory present according to the other part of the condition).
- "Otherwise, the field is absent, Need R": The field is released if absent when this part of the condition applies. This handles UE behaviour in case the field is configured via another part of the condition and this part of the condition applies (which means that network when transmitting downlink RRC message or peer UE transmitting PC5 RRC message can assume UE releases the field if this part of the condition is valid).
- "Otherwise, the field is absent, Need M": The UE retains the field if it was already configured when this part of the condition applies. This means the network when transmitting downlink RRC message or the peer UE when transmitting PC5 RRC message cannot release the field, but UE retains the previously configured value.

Use of different Need codes in different parts of a condition should be avoided.

For downlink RRC message and sidelink PC5 RRC messages, the need codes, conditions and ASN.1 defaults specified for a particular (child) field only apply in case the (parent) field including the particular field is present. Thus, if the parent is absent the UE shall not release the field unless the absence of the parent field implies that.

For (parent) fields without need codes in downlink RRC messages or sidelink PC5 RRC message, if the parent field is absent, UE shall follow the need codes of the child fields. Thus, if parent field is absent, the need code of each child field is followed (i.e. Need R child fields are released, Need M child fields are not modified and the actions for Need S child fields depend on the specified conditions of each field). Examples of (parent) fields in downlink RRC messages and sidelink PC5 RRC message without need codes where this rule applies are:

- *nonCriticalExtension* fields at the end of a message using empty SEQUENCE extension mechanism,
- groups of non-critical extensions using double brackets (referred to as extension groups), and
- non-critical extensions at the end of a message or at the end of a structure, contained in a BIT STRING or OCTET STRING (referred to as parent extension fields).

The handling of need codes as specified in the previous is illustrated by means of an example, as shown in the following ASN.1.

```
-- /example/ ASN1START

RRCTest-IEs ::=
  field1
  field2
  nonCriticalExtension
}

RRCTest-1570-IEs ::=
  field3
  nonCriticalExtension
}

RRCTest-v1640-IEs ::=
  field4
  nonCriticalExtension
}

InformationElement1 ::=
  field10
  field11
  field12
  ...
  [[
    field13
    field14
  ]]
}

InformationElement2 ::=
  field21
  ...
}

-- ASN1STOP
```

The handling of need codes as specified in the previous implies that:

- if *field1* in *RRCMessage-IEs* is absent, UE does not modify or take action on any child fields configured within *field1* (regardless of their need codes);
- if *field2* in *RRCMessage-IEs* is absent, UE releases the *field2* (and also its child field *field21*);
- if *field1* or *field2* in *RRCMessage-IEs* is present, UE retains or releases their child fields according to the child field presence conditions;
- if *field1* in *RRCMessage-IEs* is present but the extension group containing *field13* and *field14* is absent, the UE releases *field13* but does not modify *field14*;
- if *nonCriticalExtension* defined by IE *RRCMessage-v1570-IEs* is absent, the UE does not modify *field3* but releases *field4*;

6.1.3 General rules

In the ASN.1 of this specification, the first bit of a bit string refers to the leftmost bit, unless stated otherwise.

Upon reception of a list not using ToAddModList and ToReleaseList structure, the UE shall delete all entries of the list currently in the UE configuration before applying the received list and shall consider each entry as newly created. This applies also to lists whose size is extended (i.e. with a second list structure in the ASN.1 comprising additional entries), unless otherwise specified. This implies that Need M should not be used for fields in the entries of these lists; if used, UE will handle such fields equivalent to a Need R.

6.2 RRC messages

6.2.1 General message structure

— *NR-RRC-Definitions*

This ASN.1 segment is the start of the NR RRC PDU definitions.

```
-- ASN1START
-- TAG-NR-RRC-DEFINITIONS-START
```

```
NR-RRC-Definitions DEFINITIONS AUTOMATIC TAGS ::=
```

```
BEGIN
```

```
-- TAG-NR-RRC-DEFINITIONS-STOP
-- ASN1STOP
```

— *BCCH-BCH-Message*

The *BCCH-BCH-Message* class is the set of RRC messages that may be sent from the network to the UE via BCH on the BCCH logical channel.

```
-- ASN1START
-- TAG-BCCH-BCH-MESSAGE-START
```



```

BCCH-BCH-Message ::=
    message
    SEQUENCE {
        BCCH-BCH-MessageType
    }

BCCH-BCH-MessageType ::=
    CHOICE {
        mib MIB,
        messageClassExtension SEQUENCE {}
    }

-- TAG-BCCH-BCH-MESSAGE-STOP
-- ASN1STOP

```

— *BCCH-DL-SCH-Message*

The *BCCH-DL-SCH-Message* class is the set of RRC messages that may be sent from the network to the UE via DL-SCH on the BCCH logical channel.

```

-- ASN1START
-- TAG-BCCH-DL-SCH-MESSAGE-START

BCCH-DL-SCH-Message ::=
    message
    SEQUENCE {
        BCCH-DL-SCH-MessageType
    }

BCCH-DL-SCH-MessageType ::=
    CHOICE {
        c1 CHOICE {
            systemInformation SystemInformation,
            systemInformationBlockType1 SIB1
        },
        messageClassExtension SEQUENCE {}
    }

-- TAG-BCCH-DL-SCH-MESSAGE-STOP
-- ASN1STOP

```

— *DL-CCCH-Message*

The *DL-CCCH-Message* class is the set of RRC messages that may be sent from the Network to the UE on the downlink CCCH logical channel.

```

-- ASN1START
-- TAG-DL-CCCH-MESSAGE-START

DL-CCCH-Message ::=
    message
    SEQUENCE {
        DL-CCCH-MessageType
    }

DL-CCCH-MessageType ::=
    CHOICE {
        c1 CHOICE {
            rrcReject RRCReject,

```

```

        rrcSetup
        spare2
        spare1
    },
    messageClassExtension
}
-- TAG-DL-CCCH-MESSAGE-STOP
-- ASN1STOP

```

— *DL-DCCH-Message*

The *DL-DCCH-Message* class is the set of RRC messages that may be sent from the network to the UE on the downlink DCCH logical channel.

```

-- ASN1START
-- TAG-DL-DCCH-MESSAGE-START

DL-DCCH-Message ::=
    message
}

DL-DCCH-MessageType ::=
    c1
        rrcReconfiguration
        rrcResume
        rrcRelease
        rrcReestablishment
        securityModeCommand
        dlInformationTransfer
        ueCapabilityEnquiry
        counterCheck
        mobilityFromNRCommand
        dlDedicatedMessageSegment-r16
        ueInformationRequest-r16
        dlInformationTransferMRDC-r16
        loggedMeasurementConfiguration-r16
        spare3 NULL, spare2 NULL, spare1 NULL
    },
    messageClassExtension
}
-- TAG-DL-DCCH-MESSAGE-STOP
-- ASN1STOP

```

— *MCCH-Message*

The *MCCH-Message* class is the set of RRC messages that may be sent from the network to the UE on the MCCH logical channel.

```

-- ASN1START

```

```

-- TAG-MCCH-MESSAGE-START

MCCH-Message-r17 ::= SEQUENCE {
    message          MCCH-MessageType-r17
}

MCCH-MessageType-r17 ::= CHOICE {
    c1                CHOICE {
        mbsBroadcastConfiguration-r17  MBSBroadcastConfiguration-r17,
        spare1                          NULL
    },
    messageClassExtension SEQUENCE {}
}

-- TAG-MCCH-MESSAGE-STOP
-- ASN1STOP

```

— *MulticastMCCH-Message*

The *MulticastMCCH-Message* class is the set of RRC messages that may be sent from the network to the UE on the multicast MCCH logical channel.

```

-- ASN1START
-- TAG-MULTICASTMCCH-MESSAGE-START

MulticastMCCH-Message-r18 ::= SEQUENCE {
    message          MulticastMCCH-MessageType-r18
}

MulticastMCCH-MessageType-r18 ::= CHOICE {
    c1                CHOICE {
        mbsMulticastConfiguration-r18  MBSMulticastConfiguration-r18,
        spare1                          NULL
    },
    messageClassExtension SEQUENCE {}
}

-- TAG-MULTICASTMCCH-MESSAGE-STOP
-- ASN1STOP

```

— *PCCH-Message*

The *PCCH-Message* class is the set of RRC messages that may be sent from the Network to the UE on the PCCH logical channel.

```

-- ASN1START
-- TAG-PCCH-PCH-MESSAGE-START

PCCH-Message ::= SEQUENCE {
    message          PCCH-MessageType
}

```

```

PCCH-MessageType ::=
    c1
        paging
        spare1 NULL
    },
    messageClassExtension SEQUENCE {}
}

-- TAG-PCCH-PCH-MESSAGE-STOP
-- ASN1STOP

```

— *UL-CCCH-Message*

The *UL-CCCH-Message* class is the set of 48-bits RRC messages that may be sent from the UE to the Network on the uplink CCCH logical channel.

```

-- ASN1START
-- TAG-UL-CCCH-MESSAGE-START

UL-CCCH-Message ::=
    SEQUENCE {
        message UL-CCCH-MessageType
    }

UL-CCCH-MessageType ::=
    c1
        rrcSetupRequest          RRCSetupRequest,
        rrcResumeRequest         RRCResumeRequest,
        rrcReestablishmentRequest RRCReestablishmentRequest,
        rrcSystemInfoRequest     RRCSystemInfoRequest
    },
    messageClassExtension SEQUENCE {}
}

-- TAG-UL-CCCH-MESSAGE-STOP
-- ASN1STOP

```

— *UL-CCCH1-Message*

The *UL-CCCH1-Message* class is the set of 64-bits RRC messages that may be sent from the UE to the Network on the uplink CCCH1 logical channel.

```

-- ASN1START
-- TAG-UL-CCCH1-MESSAGE-START

UL-CCCH1-Message ::=
    SEQUENCE {
        message UL-CCCH1-MessageType
    }

```

```

UL-CCCH1-MessageType ::=
    CHOICE {
        c1
            rrcResumeRequest1
            spare3 NULL,
            spare2 NULL,
            spare1 NULL
        },
        messageClassExtension SEQUENCE {}
    }

-- TAG-UL-CCCH1-MESSAGE-STOP
-- ASN1STOP

```

– *UL-DCCH-Message*

The *UL-DCCH-Message* class is the set of RRC messages that may be sent from the UE to the network on the uplink DCCH logical channel.

```

-- ASN1START
-- TAG-UL-DCCH-MESSAGE-START

UL-DCCH-Message ::=
    SEQUENCE {
        message
    }

UL-DCCH-MessageType ::=
    CHOICE {
        c1
            measurementReport
            rrcReconfigurationComplete
            rrcSetupComplete
            rrcReestablishmentComplete
            rrcResumeComplete
            securityModeComplete
            securityModeFailure
            ulInformationTransfer
            locationMeasurementIndication
            ueCapabilityInformation
            counterCheckResponse
            ueAssistanceInformation
            failureInformation
            ulInformationTransferMRDC
            scgFailureInformation
            scgFailureInformationEUTRA
            MeasurementReport,
            RRCReconfigurationComplete,
            RRCSetupComplete,
            RRCReestablishmentComplete,
            RRCResumeComplete,
            SecurityModeComplete,
            SecurityModeFailure,
            ULInformationTransfer,
            LocationMeasurementIndication,
            UECapabilityInformation,
            CounterCheckResponse,
            UEAssistanceInformation,
            FailureInformation,
            ULInformationTransferMRDC,
            SCGFailureInformation,
            SCGFailureInformationEUTRA
        },
        messageClassExtension
            CHOICE {
                c2
                    ulDedicatedMessageSegment-r16
                    dedicatedSIBRequest-r16
                    mcgFailureInformation-r16
                    ueInformationResponse-r16
                    sidelinkUEInformationNR-r16
                    ulInformationTransferIRAT-r16
                    ULDedicatedMessageSegment-r16,
                    DedicatedSIBRequest-r16,
                    MCGFailureInformation-r16,
                    UEInformationResponse-r16,
                    SidelinkUEInformationNR-r16,
                    ULInformationTransferIRAT-r16,

```

```
        iabOtherInformation-r16          IABOtherInformation-r16,
        mbsInterestIndication-r17       MBSInterestIndication-r17,
        uePositioningAssistanceInfo-r17 UEPositioningAssistanceInfo-r17,
        measurementReportAppLayer-r17   MeasurementReportAppLayer-r17,
        indirectPathFailureInformation-r18 IndirectPathFailureInformation-r18, spare5 NULL, spare4 NULL, spare3 NULL, spare2 NULL, spare1 NULL
    },
    messageClassExtensionFuture-r16     SEQUENCE {}
}

-- TAG-UL-DCCH-MESSAGE-STOP
-- ASN1STOP
```

6.2.2 Message definitions

– *CounterCheck*

The *CounterCheck* message is used by the network to indicate the current COUNT MSB values associated to each DRB and to request the UE to compare these to its COUNT MSB values and to report the comparison results to the network.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

CounterCheck message

```
-- ASN1START
-- TAG-COUNTERCHECK-START

CounterCheck ::=
    rrc-TransactionIdentifier      SEQUENCE {
    criticalExtensions              CHOICE {
        counterCheck              CounterCheck-IEs,
        criticalExtensionsFuture  SEQUENCE {}
    }
}

CounterCheck-IEs ::=
    drb-CountMSB-InfoList         SEQUENCE {
    lateNonCriticalExtension       OCTET STRING OPTIONAL,
    nonCriticalExtension           SEQUENCE {}      OPTIONAL
}

DRB-CountMSB-InfoList ::=
    SEQUENCE (SIZE (1..maxDRB)) OF DRB-CountMSB-Info

DRB-CountMSB-Info ::=
    drb-Identity                  SEQUENCE {
    countMSB-Uplink                INTEGER(0..33554431),
    countMSB-Downlink              INTEGER(0..33554431)
}

-- TAG-COUNTERCHECK-STOP
-- ASN1STOP
```

CounterCheck-IEs field descriptions
drb-CountMSB-InfoList Indicates the MSBs of the COUNT values of the DRBs.

DRB-CountMSB-Info field descriptions
countMSB-Downlink Indicates the value of 25 MSBs from RX_NEXT – 1 (specified in TS 38.323 [5]) associated to this DRB.
countMSB-Uplink Indicates the value of 25 MSBs from TX_NEXT – 1 (specified in TS 38.323 [5]) associated to this DRB.

– CounterCheckResponse

The CounterCheckResponse message is used by the UE to respond to a CounterCheck message.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

CounterCheckResponse message

```
-- ASN1START
-- TAG-COUNTERCHECKRESPONSE-START

CounterCheckResponse ::=
  rrc-TransactionIdentifier      SEQUENCE {
    criticalExtensions            CHOICE {
      counterCheckResponse       CounterCheckResponse-IEs,
      criticalExtensionsFuture    SEQUENCE {}
    }
  }

CounterCheckResponse-IEs ::=
  drb-CountInfoList             SEQUENCE {
    lateNonCriticalExtension      OCTET STRING OPTIONAL,
    nonCriticalExtension          SEQUENCE {} OPTIONAL
  }

DRB-CountInfoList ::=
  SEQUENCE (SIZE (0..maxDRB)) OF DRB-CountInfo

DRB-CountInfo ::=
  drb-Identity                  SEQUENCE {
    count-Uplink                 INTEGER(0..4294967295),
```



```
    count-Downlink          INTEGER(0..4294967295)
  }

-- TAG-COUNTERCHECKRESPONSE-STOP
-- ASN1STOP
```

CounterCheckResponse-IEs field descriptions
drb-CountInfoList Indicates the COUNT values of the DRBs.

DRB-CountInfo field descriptions
count-Downlink Indicates the value of RX_NEXT – 1 (specified in TS 38.323 [5]) associated to this DRB.
count-Uplink Indicates the value of TX_NEXT – 1 (specified in TS 38.323 [5]) associated to this DRB.

– *DedicatedSIBRequest*

The *DedicatedSIBRequest* message is used to request SIB(s) required by the UE in RRC_CONNECTED as specified in clause 5.2.2.3.5.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

DedicatedSIBRequest message

```
-- ASN1START
-- TAG-DEDICATEDSIBREQUEST-START

DedicatedSIBRequest-r16 ::= SEQUENCE {
    criticalExtensions      CHOICE {
        dedicatedSIBRequest-r16    DedicatedSIBRequest-r16-IEs,
        criticalExtensionsFuture    SEQUENCE {}
    }
}

DedicatedSIBRequest-r16-IEs ::= SEQUENCE {
    onDemandSIB-RequestList-r16    SEQUENCE {
        requestedSIB-List-r16      SEQUENCE (SIZE (1..maxOnDemandSIB-r16)) OF SIB-ReqInfo-r16 OPTIONAL,
        requestedPosSIB-List-r16   SEQUENCE (SIZE (1..maxOnDemandPosSIB-r16)) OF PosSIB-ReqInfo-r16 OPTIONAL,
    } OPTIONAL,
}
```

```
lateNonCriticalExtension
nonCriticalExtension
}

SIB-ReqInfo-r16 ::=
    ENUMERATED { sib12, sib13, sib14, sib20-v1700, sib21-v1700, sib23-v1810, spare2, spare1 }

PosSIB-ReqInfo-r16 ::=
    SEQUENCE {
        gnss-id-r16          GNSS-ID-r16          OPTIONAL,
        sbas-id-r16          SBAS-ID-r16          OPTIONAL,
        posSibType-r16       ENUMERATED { posSibType1-1, posSibType1-2, posSibType1-3, posSibType1-4, posSibType1-5, posSibType1-6,
                                         posSibType1-7, posSibType1-8, posSibType2-1, posSibType2-2, posSibType2-3, posSibType2-4,
                                         posSibType2-5, posSibType2-6, posSibType2-7, posSibType2-8, posSibType2-9, posSibType2-10,
                                         posSibType2-11, posSibType2-12, posSibType2-13, posSibType2-14, posSibType2-15,
                                         posSibType2-16, posSibType2-17, posSibType2-18, posSibType2-19, posSibType2-20,
                                         posSibType2-21, posSibType2-22, posSibType2-23, posSibType3-1, posSibType4-1,
                                         posSibType5-1, posSibType6-1, posSibType6-2, posSibType6-3, ..., posSibType1-9-v1710,
                                         posSibType1-10-v1710, posSibType2-24-v1710, posSibType2-25-v1710,
                                         posSibType6-4-v1710, posSibType6-5-v1710, posSibType6-6-v1710, posSibType2-17a-v1770,
                                         posSibType2-18a-v1770, posSibType2-20a-v1770, posSibType1-11-v1800, posSibType1-12-v1800,
                                         posSibType2-26-v1800, posSibType2-27-v1800, posSibType6-7-v1800, posSibType7-1-v1800,
                                         posSibType7-2-v1800, posSibType7-3-v1800, posSibType7-4-v1800 }
    }

-- TAG-DEDICATEDSIBREQUEST-STOP
-- ASN1STOP
```

DedicatedSIBRequest field descriptions
requestedSIB-List Contains a list of SIB(s) the UE requests while in RRC_CONNECTED.
requestedPosSIB-List Contains a list of posSIB(s) the UE requests while in RRC_CONNECTED.

PosSIB-ReqInfo field descriptions
gnss-id The presence of this field indicates that the request positioning SIB type is for a specific GNSS. Indicates a specific GNSS (see also TS 37.355 [49])
sbas-id The presence of this field indicates that the request positioning SIB type is for a specific SBAS. Indicates a specific SBAS (see also TS 37.355 [49]). If the UE includes this field it shall set <i>gnss-id</i> to <i>sbas</i> .

– *DL DedicatedMessageSegment*

The *DL DedicatedMessageSegment* message is used to transfer one segment of the *RRCResume* or *RRCReconfiguration* messages.

- Signalling radio bearer: SRB1
- RLC-SAP: AM

Logical channel: DCCH
Direction: Network to UE

DLDedicatedMessageSegment message

```
-- ASN1START
-- TAG-DLDEDICATEDMESSAGESEGMENT-START

DLDedicatedMessageSegment-r16 ::=
  criticalExtensions
    dLDedicatedMessageSegment-r16
    criticalExtensionsFuture
  }

DLDedicatedMessageSegment-r16-IEs ::=
  segmentNumber-r16
  rrc-MessageSegmentContainer-r16
  rrc-MessageSegmentType-r16
  lateNonCriticalExtension
  nonCriticalExtension
}

SEQUENCE {
  CHOICE {
    DLDedicatedMessageSegment-r16-IEs,
    SEQUENCE {}
  }
  INTEGER(0..4),
  OCTET STRING,
  ENUMERATED {notLastSegment, lastSegment},
  OCTET STRING
  SEQUENCE {}
  OPTIONAL,
  OPTIONAL
}

-- TAG-DLDEDICATEDMESSAGESEGMENT-STOP
-- ASN1STOP
```

DLDedicatedMessageSegment field descriptions
segmentNumber Identifies the sequence number of a segment within the encoded DL DCCH message. The network transmits the segments with continuously increasing <i>segmentNumber</i> order so that the UE's RRC layer may expect to obtain them from lower layers in the correct order. Hence, the UE is not required to perform segment re-ordering on RRC level.
rrc-MessageSegmentContainer Includes a segment of the encoded DL DCCH message. The size of the included segment in this container should be small enough so the resulting encoded RRC message PDU is less than or equal to the PDCP SDU size limit.
rrc-MessageSegmentType Indicates whether the included DL DCCH message segment is the last segment of the message or not.

– ***DLInformationTransfer***

The *DLInformationTransfer* message is used for the downlink transfer of NAS dedicated information, timing information for the 5G internal system clock, or IAB-DU specific F1-C related information.

Signalling radio bearer: SRB2 or SRB1 (only if SRB2 not established yet). If SRB2 is suspended, the network does not send this message until SRB2 is resumed. If only *dedicatedInfoF1c* is included, SRB2 is used.

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

DLInformationTransfer message

```
-- ASN1START
-- TAG-DLINFORMATIONTRANSFER-START

DLInformationTransfer ::= SEQUENCE {
    rrc-TransactionIdentifier RRC-TransactionIdentifier,
    criticalExtensions CHOICE {
        dlInformationTransfer DLInformationTransfer-IEs,
        criticalExtensionsFuture SEQUENCE {}
    }
}

DLInformationTransfer-IEs ::= SEQUENCE {
    dedicatedNAS-Message DedicatedNAS-Message OPTIONAL, -- Need N
    lateNonCriticalExtension OCTET STRING OPTIONAL,
    nonCriticalExtension DLInformationTransfer-v1610-IEs OPTIONAL
}

DLInformationTransfer-v1610-IEs ::= SEQUENCE {
    referenceTimeInfo-r16 ReferenceTimeInfo-r16 OPTIONAL, -- Need N
    nonCriticalExtension DLInformationTransfer-v1700-IEs OPTIONAL
}

DLInformationTransfer-v1700-IEs ::= SEQUENCE {
    dedicatedInfoF1c-r17 DedicatedInfoF1c-r17 OPTIONAL, -- Need N
    rxTxTimeDiff-gNB-r17 RxTxTimeDiff-r17 OPTIONAL, -- Need N
    ta-PDC-r17 ENUMERATED {activate, deactivate} OPTIONAL, -- Need N
    sib9Fallback-r17 ENUMERATED {true} OPTIONAL, -- Need N
    nonCriticalExtension DLInformationTransfer-v1800-IEs OPTIONAL
}

DLInformationTransfer-v1800-IEs ::= SEQUENCE {
    eventID-TSS-r18 INTEGER(0..63) OPTIONAL, -- Cond ClockQualityDetailsLevel
    clockQualityDetailsLevel-r18 CHOICE {
        clockQualityMetrics-r18 ClockQualityMetrics-r18,
        clockQualityAcceptanceStatus-r18 ENUMERATED {acceptable, notAcceptable}
    } OPTIONAL, -- Need N
    nonCriticalExtension SEQUENCE {} OPTIONAL
}

-- TAG-DLINFORMATIONTRANSFER-STOP
-- ASN1STOP
```

DLInformationTransfer field descriptions
clockQualityDetailsLevel This field indicates the clock quality reporting control information as defined in TS 23.501 [32].
eventID-TSS This field indicates the status of the 5G access stratum time distribution parameter Clock Quality Reporting Control Information as defined in TS 23.501 [32].
rxTxTimeDiff-gNB Indicates the Rx-Tx time difference measurement at the gNB (see clause 5.2.3, TS 38.215 [9]). Upon receiving this field, the UE calculates the propagation delay based on the RTT-based PDC mechanism method as described in TS 38.300 [2]. The network does not configure this field, if the UE is configured with <i>ta-PDC</i> with value <i>activate</i> .
sib9Fallback Indicates that the UE fallbacks to receive <i>referenceTimeInfo</i> in SIB9.
ta-PDC Indicates whether the UE-side TA-based propagation delay compensation (PDC) is activated or de-activated. The network does not configure this field with <i>activate</i> , if the field <i>rxTxTimeDiff-gNB</i> is configured.

Conditional Presence	Explanation
ClockQualityDetailsLevel	Field <i>eventID-TSS</i> is mandatory present if <i>clockQualityDetailsLevel</i> is present. Otherwise, the field is optionally present, Need M.

– DLInformationTransferMRDC

The *DLInformationTransferMRDC* message is used for the downlink transfer of RRC messages during fast MCG link recovery.

Signalling radio bearer: SRB3

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

DLInformationTransferMRDC message

```
-- ASN1START
-- TAG-DLINFORMATIONTRANSFERMRDC-START

DLInformationTransferMRDC-r16 ::= SEQUENCE {
    criticalExtensions CHOICE {
        c1 CHOICE {
            dlInformationTransferMRDC-r16 DLInformationTransferMRDC-r16-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture SEQUENCE {}
    }
}

DLInformationTransferMRDC-r16-IEs ::= SEQUENCE {
```

```

    dl-DCCH-MessageNR-r16          OCTET STRING      OPTIONAL, -- Need N
    dl-DCCH-MessageEUTRA-r16       OCTET STRING      OPTIONAL, -- Need N
    lateNonCriticalExtension        OCTET STRING      OPTIONAL,
    nonCriticalExtension            SEQUENCE {}         OPTIONAL
}

-- TAG-DLInformationTransferMRDC-STOP
-- ASN1STOP
```

DLInformationTransferMRDC field descriptions
dl-DCCH-MessageNR Includes the <i>DL-DCCH-Message</i> . In this version of the specification, the field is only used to transfer the NR <i>RRCReconfiguration</i> , <i>RRCRelease</i> , and <i>MobilityFromNRCommand</i> messages.
dl-DCCH-MessageEUTRA Includes the <i>DL-DCCH-Message</i> . In this version of the specification, the field is only used to transfer the E-UTRA <i>RRCCONNECTIONReconfiguration</i> , <i>RRCCONNECTIONRelease</i> , and <i>MobilityFromEUTRACommand</i> messages as specified in TS 36.331 [10].

– *FailureInformation*

The *FailureInformation* message is used to inform the network about a failure detected by the UE.

- Signalling radio bearer: SRB1 or SRB3
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to network

FailureInformation message

```

-- ASN1START
-- TAG-FAILUREINFORMATION-START

FailureInformation ::=
    criticalExtensions          SEQUENCE {
        failureInformation      CHOICE {
            criticalExtensionsFuture  FailureInformation-IEs,
        }
    }

FailureInformation-IEs ::=
    failureInfoRLC-Bearer      SEQUENCE {
        lateNonCriticalExtension OCTET STRING      OPTIONAL,
        nonCriticalExtension     FailureInformation-v1610-IEs OPTIONAL
    }
```

```

FailureInfoRLC-Bearer ::= SEQUENCE {
    cellGroupId          CellGroupId,
    logicalChannelIdentity LogicalChannelIdentity,
    failureType          ENUMERATED {rlc-failure, spare3, spare2, spare1}
}

FailureInformation-v1610-IEs ::= SEQUENCE {
    failureInfoDAPS-r16 FailureInfoDAPS-r16 OPTIONAL,
    nonCriticalExtension SEQUENCE {} OPTIONAL
}

FailureInfoDAPS-r16 ::= SEQUENCE {
    failureType-r16 ENUMERATED {daps-failure, spare3, spare2, spare1}
}

-- TAG-FAILUREINFORMATION-STOP
-- ASN1STOP

```

— *IABOtherInformation*

The *IABOtherInformation* message is used by IAB-MT to request the network to allocate IP addresses for the collocated IAB-DU or inform the network about IP addresses allocated to the collocated IAB-DU.

Signalling radio bearer: SRB1 or SRB3

RLC-SAP: AM

Logical channel: DCCH

Direction: IAB-MT to Network

IABOtherInformation message

```

-- ASN1START
-- TAG-IABOTHERINFORMATION-START

IABOtherInformation-r16 ::= SEQUENCE {
    dummy          RRC-TransactionIdentifier,
    criticalExtensions CHOICE {
        iabOtherInformation-r16 IABOtherInformation-r16-IEs,
        criticalExtensionsFuture SEQUENCE {}
    }
}

IABOtherInformation-r16-IEs ::= SEQUENCE {
    ip-InfoType-r16 CHOICE {
        iab-IP-Request-r16 SEQUENCE {
            iab-IPv4-AddressNumReq-r16 IAB-IP-AddressNumReq-r16 OPTIONAL,
            iab-IPv6-AddressReq-r16 CHOICE {

```

```

        iab-IPv6-AddressNumReq-r16
        iab-IPv6-AddressPrefixReq-r16
        ...
    }
},
iab-IP-Report-r16 SEQUENCE {
    iab-IPv4-AddressReport-r16 IAB-IP-AddressAndTraffic-r16
    iab-IPv6-Report-r16 CHOICE {
        iab-IPv6-AddressReport-r16 IAB-IP-AddressAndTraffic-r16,
        iab-IPv6-PrefixReport-r16 IAB-IP-PrefixAndTraffic-r16,
        ...
    }
},
...
},
lateNonCriticalExtension OCTET STRING
nonCriticalExtension SEQUENCE {}
}

IAB-IP-AddressNumReq-r16 ::= SEQUENCE {
    all-Traffic-NumReq-r16 INTEGER (1..8)
    f1-C-Traffic-NumReq-r16 INTEGER (1..8)
    f1-U-Traffic-NumReq-r16 INTEGER (1..8)
    non-F1-Traffic-NumReq-r16 INTEGER (1..8)
    ...
}

IAB-IP-AddressPrefixReq-r16 ::= SEQUENCE {
    all-Traffic-PrefixReq-r16 ENUMERATED {true}
    f1-C-Traffic-PrefixReq-r16 ENUMERATED {true}
    f1-U-Traffic-PrefixReq-r16 ENUMERATED {true}
    non-F1-Traffic-PrefixReq-r16 ENUMERATED {true}
    ...
}

IAB-IP-AddressAndTraffic-r16 ::= SEQUENCE {
    all-Traffic-IAB-IP-Address-r16 SEQUENCE (SIZE(1..8)) OF IAB-IP-Address-r16
    f1-C-Traffic-IP-Address-r16 SEQUENCE (SIZE(1..8)) OF IAB-IP-Address-r16
    f1-U-Traffic-IP-Address-r16 SEQUENCE (SIZE(1..8)) OF IAB-IP-Address-r16
    non-F1-Traffic-IP-Address-r16 SEQUENCE (SIZE(1..8)) OF IAB-IP-Address-r16
}

IAB-IP-PrefixAndTraffic-r16 ::= SEQUENCE {
    all-Traffic-IAB-IP-Address-r16 IAB-IP-Address-r16
    f1-C-Traffic-IP-Address-r16 IAB-IP-Address-r16
    f1-U-Traffic-IP-Address-r16 IAB-IP-Address-r16
    non-F1-Traffic-IP-Address-r16 IAB-IP-Address-r16
}

-- TAG-IABOTHERINFORMATION-STOP
-- ASN1STOP

```


<i>IABOtherInformation-IEs field descriptions</i>
<i>dummy</i> This field is not used in the specification and network ignores the received value.
<i>iab-IPv4-AddressNumReq</i> This field is used to request the numbers of IPv4 address per specific usage. The specific usages include F1-C traffic, F1-U traffic, non-F1 traffic and all traffic.
<i>iab-IPv4-AddressReport</i> This field is used to report the IPv4 address per specific usage assigned by OAM for IAB-DU. The specific usages include F1-C traffic, F1-U traffic, non-F1 traffic and all traffic.
<i>iab-IPv6-AddressNumReq</i> This field is used to request the numbers of IPv6 address per specific usage. The specific usages include F1-C traffic, F1-U traffic, non-F1 traffic and all traffic.
<i>iab-IPv6-AddressPrefixReq</i> This field is used to request the prefix of IPv6 address per specific usage. The specific usages include F1-C traffic, F1-U traffic, non-F1 traffic and all traffic.
<i>iab-IPv6-AddressReport</i> This field is used to report the IPv6 address per specific usage assigned by OAM for IAB-DU. The specific usages include F1-C traffic, F1-U traffic, non-F1 traffic and all traffic.
<i>iab-IPv6-PrefixReport</i> This field is used to report the prefix of IPv6 address per specific usage assigned by OAM for IAB-DU. The specific usages include F1-C traffic, F1-U traffic, non-F1 traffic and all traffic.

<i>IAB-IP-AddressNumReq-IEs field descriptions</i>
<i>all-Traffic-NumReq</i> This field is used to request the numbers of IP address for all traffic.
<i>f1-C-Traffic-NumReq</i> This field is used to request the numbers of IP address for F1-C traffic.
<i>f1-U-Traffic-NumReq</i> This field is used to request the numbers of IP address for F1-U traffic.
<i>non-F1-Traffic-NumReq</i> This field is used to request the numbers of IP address for non-F1 traffic.

<i>IAB-IP-AddressPrefixReq-IEs field descriptions</i>
<i>all-Traffic-PrefixReq</i> This field is used to request the IPv6 address prefix for all traffic. The length of allocated IPv6 prefix is fixed to 64.
<i>f1-C-Traffic-PrefixReq</i> This field is used to request the IPv6 address prefix for F1-C traffic. The length of allocated IPv6 prefix is fixed to 64.
<i>f1-U-Traffic-PrefixReq</i> This field is used to request the IPv6 address prefix for F1-U traffic. The length of allocated IPv6 prefix is fixed to 64.
<i>non-F1-Traffic-PrefixReq</i> This field is used to request the IPv6 address prefix for non-F1 traffic. The length of allocated IPv6 prefix is fixed to 64.

<i>IAB-IP-AddressAndTraffic-IEs field descriptions</i>
<i>all-Traffic-IAB-IP-Address</i> This field is used to report to IAB-donor-CU the IP address(es) or IPv6 address prefix for all traffic.
<i>f1-C-Traffic-IP-Address</i> This field is used to report to IAB-donor-CU the IP address(es) or IPv6 address prefix for F1-C traffic.
<i>f1-U-Traffic-IP-Address</i> This field is used to report to IAB-donor-CU the IP address(es) or IPv6 address prefix for F1-U traffic.
<i>non-F1-Traffic-IP-Address</i> This field is used to report to IAB-donor-CU the IP address(es) or IPv6 address prefix for non-F1 traffic.

— *IndirectPathFailureInformation*

The *IndirectPathFailureInformation* message is used to provide information regarding indirect path failure detected by the MP remote UE.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

IndirectPathFailureInformation message

```
-- ASN1START
-- TAG-INDIRECTPATHFAILUREINFORMATION-START

IndirectPathFailureInformation-r18 ::=
    criticalExtensions
        indirectPathFailureInformation-r18
        criticalExtensionsFuture
    }

IndirectPathFailureInformation-r18-IEs ::=
    failureReportIndirectPath-r18
    lateNonCriticalExtension
    nonCriticalExtension

FailureReportIndirectPath-r18 ::=
    failureTypeIndirectPath-r18

    sl-MeasResultServingRelay-r18

    sl-MeasResultsCandRelay-r18
    n3c-RelayUE-InfoList-r18
```

```
SEQUENCE {
    CHOICE {
        IndirectPathFailureInformation-r18-IEs,
        SEQUENCE {}
    }

SEQUENCE {
    FailureReportIndirectPath-r18
    OCTET STRING
    SEQUENCE {}

SEQUENCE {
    ENUMERATED {t421-Expiry, sl-Failure, n3c-Failure, relayUE-Uu-RLF,
        relayUE-Uu-RRC-Failure,
        indirectPathAddChangeFailure, sl-PC5-Release, spare1}
    OCTET STRING
    OCTET STRING
    SEQUENCE (SIZE (0..8)) OF N3C-RelayUE-Info-r18
    OPTIONAL,
    OPTIONAL,
    OPTIONAL,
    -- Contains PC5 SL-MeasResultRelay-r17
    OPTIONAL,
    OPTIONAL,
```

```
}    ...  
  
-- TAG-INDIRECTPATHFAILUREINFORMATION-STOP  
-- ASN1STOP
```

IndirectPathFailureInformation field descriptions
failureTypeIndirectPath The field indicates the failure type of the indirect path failure.
n3c-RelayUE-InfoList Information of available N3C relay UE(s).
sl-MeasResultsCandRelay Measurement result(s) of candiate L2 U2N relay UE(s).
sl-MeasResultServingRelay Measurement result of serving L2 U2N relay UE.

– *LocationMeasurementIndication*

The *LocationMeasurementIndication* message is used to indicate that the UE is going to either start or stop location related measurement which requires measurement gaps.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

LocationMeasurementIndication message

```
-- ASN1START  
-- TAG-LOCATIONMEASUREMENTINDICATION-START  
  
LocationMeasurementIndication ::=          SEQUENCE {  
    criticalExtensions                      CHOICE {  
        locationMeasurementIndication    LocationMeasurementIndication-IEs,  
        criticalExtensionsFuture          SEQUENCE {}  
    }  
}  
  
LocationMeasurementIndication-IEs ::=      SEQUENCE {  
    measurementIndication                  SetupRelease {LocationMeasurementInfo},  
    lateNonCriticalExtension                OCTET STRING  
    nonCriticalExtension                    SEQUENCE{}  
}  
  
-- TAG-LOCATIONMEASUREMENTINDICATION-STOP
```

```
-- ASN1STOP
```

— *LoggedMeasurementConfiguration*

The *LoggedMeasurementConfiguration* message is used to perform logging of measurement results while in RRC_IDLE or RRC_INACTIVE. It is used to transfer the logged measurement configuration for network performance optimisation.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

LoggedMeasurementConfiguration message

```
-- ASN1START
-- TAG-LOGGEDMEASUREMENTCONFIGURATION-START

LoggedMeasurementConfiguration-r16 ::= SEQUENCE {
    criticalExtensions      CHOICE {
        loggedMeasurementConfiguration-r16      LoggedMeasurementConfiguration-r16-IEs,
        criticalExtensionsFuture                  SEQUENCE {}
    }
}

LoggedMeasurementConfiguration-r16-IEs ::= SEQUENCE {
    traceReference-r16      TraceReference-r16,
    traceRecordingSessionRef-r16 OCTET STRING (SIZE (2)),
    tce-Id-r16               OCTET STRING (SIZE (1)),
    absoluteTimeInfo-r16    AbsoluteTimeInfo-r16,
    areaConfiguration-r16   AreaConfiguration-r16                OPTIONAL, --Need R
    plmn-IdentityList-r16   PLMN-IdentityList2-r16              OPTIONAL, --Need R
    bt-NameList-r16         SetupRelease {BT-NameList-r16}      OPTIONAL, --Need M
    wlan-NameList-r16       SetupRelease {WLAN-NameList-r16}    OPTIONAL, --Need M
    sensor-NameList-r16     SetupRelease {Sensor-NameList-r16}  OPTIONAL, --Need M
    loggingDuration-r16     LoggingDuration-r16,
    reportType              CHOICE {
        periodical          LoggedPeriodicalReportConfig-r16,
        eventTriggered      LoggedEventTriggerConfig-r16,
        ...
    },
    lateNonCriticalExtension OCTET STRING                        OPTIONAL,
    nonCriticalExtension     LoggedMeasurementConfiguration-v1700-IEs OPTIONAL
}

LoggedMeasurementConfiguration-v1700-IEs ::= SEQUENCE {
    sigLoggedMeasType-r17      ENUMERATED {true}                OPTIONAL, -- Need R
    earlyMeasIndication-r17    ENUMERATED {true}                OPTIONAL, -- Need R

```

```

    areaConfiguration-r17
    nonCriticalExtension
}
AreaConfiguration-r17
LoggedMeasurementConfiguration-v1800-IEs OPTIONAL, --Need R
OPTIONAL

LoggedMeasurementConfiguration-v1800-IEs ::= SEQUENCE {
    areaConfiguration-v1800
    nonCriticalExtension
}
AreaConfiguration-v1800
SEQUENCE {} OPTIONAL, --Need R
OPTIONAL

LoggedPeriodicalReportConfig-r16 ::=
    loggingInterval-r16
    ...
SEQUENCE {
    LoggingInterval-r16,
    ...
}

LoggedEventTriggerConfig-r16 ::=
    eventType-r16
    loggingInterval-r16
    ...
SEQUENCE {
    EventType-r16,
    LoggingInterval-r16,
    ...
}

EventType-r16 ::= CHOICE {
    outOfCoverage NULL,
    eventL1 SEQUENCE {
        l1-Threshold MeasTriggerQuantity,
        hysteresis Hysteresis,
        timeToTrigger TimeToTrigger
    },
    ...
}

-- TAG-LOGGEDMEASUREMENTCONFIGURATION-STOP
-- ASN1STOP

```

LoggedMeasurementConfiguration field descriptions
absoluteTimeInfo Indicates the absolute time in the current cell.
areaConfiguration Used to restrict the area in which the UE performs measurement logging to cells broadcasting any of the included cell identities, the included tracking area codes/ frequencies, the included PNI-NPN identities or the SNPN identities. If <i>areaConfiguration-r17</i> is present, the UE shall ignore <i>areaConfiguration-r16</i> . The <i>areaConfiguration-v1800</i> is a non-critical extension of <i>areaConfiguration-r17</i> . See NOTE 1.
earlyMeasIndication If included, the field indicates the UE is allowed to log measurements on early measurement related frequencies in logged measurements.
eventType The value <i>outOfCoverage</i> indicates the UE to perform logging of measurements when the UE enters any cell selection state, and the value <i>eventL1</i> indicates the UE to perform logging of measurements when the triggering condition (similar as event A2 as specified in 5.5.4.3) as configured in the event is met for the camping cell in camped normally state.
plmn-IdentityList Indicates a set of PLMNs defining when the UE performs measurement logging as well as the associated status indication and information retrieval i.e. the UE performs these actions when the RPLMN is part of this set of PLMNs. The network does not include this field when the UE is configured with MDT configuration in SNPN access mode.
sigLoggedMeasType If included, the field indicates a signalling based logged measurement configuration (See TS 37.320 [61]).
tce-Id Parameter Trace Collection Entity Id: See TS 32.422 [52].
traceRecordingSessionRef Parameter Trace Recording Session Reference: See TS 32.422 [52].
reportType Parameter configures the type of MDT configuration, specifically Periodic MDT configuration or Event Triggered MDT configuration.

NOTE 1: The UE should perform measurement logging based on the following area configuration limitations:

- If the *areaConfiguration-r16/areaConfiguration-r17* is present, and the *cag-ConfigList* is absent, the UE should perform logging in both PN and PNI-NPN based on *areaConfiguration-r16/areaConfiguration-r17*, if any;
- If the *areaConfiguration-r17* and the *cag-ConfigList* are present simultaneously, the UE should perform logging in PN within the *areaConfig-r16/areaConfig-r17* and perform logging in PNI-NPN within *cag-ConfigList*;
- If the *snpn-ConfigList* is present, the UE should perform logging only in SNPN based on *snpn-ConfigList*. The *snpn-ConfigList* should not be configured together with PN or PNI-NPN area configurations.

– MBSBroadcastConfiguration

The *MBSBroadcastConfiguration* message contains the control information applicable for MBS broadcast services transmitted via broadcast MRB.

Signalling radio bearer: N/A

RLC-SAP: UM
Logical channel: MCCH
Direction: Network to UE

MBSBroadcastConfiguration message

```
-- ASN1START
-- TAG-MBSBROADCASTCONFIGURATION-START

MBSBroadcastConfiguration-r17 ::= SEQUENCE {
    criticalExtensions          CHOICE {
        mbsBroadcastConfiguration-r17 MBSBroadcastConfiguration-r17-IEs,
        criticalExtensionsFuture        SEQUENCE {}
    }
}

MBSBroadcastConfiguration-r17-IEs ::= SEQUENCE {
    mbs-SessionInfoList-r17      MBS-SessionInfoList-r17                OPTIONAL, -- Need R
    mbs-NeighbourCellList-r17    MBS-NeighbourCellList-r17              OPTIONAL, -- Need S
    drx-ConfigPTM-List-r17       SEQUENCE (SIZE (1..maxNrofDRX-ConfigPTM-r17)) OF DRX-ConfigPTM-r17  OPTIONAL, -- Need R
    pdsch-ConfigMTCH-r17         PDSCH-ConfigBroadcast-r17              OPTIONAL, -- Need S
    mtch-SSB-MappingWindowList-r17 MTCH-SSB-MappingWindowList-r17      OPTIONAL, -- Need R
    lateNonCriticalExtension      OCTET STRING                          OPTIONAL,
    nonCriticalExtension          SEQUENCE {}                             OPTIONAL
}

-- TAG-MBSBROADCASTCONFIGURATION-STOP
-- ASN1STOP
```

MBSBroadcastConfiguration field descriptions
pdsch-ConfigMTCH Provides parameters for acquiring the PDSCH for MTCH. When this field is absent, the UE shall use parameters in <i>pdsch-ConfigMCCH</i> to acquire the PDSCH for MTCH.
mbs-SessionInfoList Provides the configuration of each MBS session provided by MBS broadcast in the current cell.
mbs-NeighbourCellList List of neighbour cells providing one or more MBS broadcast services via broadcast MRB that are provided by the current cell. This field is used by the UE together with <i>mtch-NeighbourCell</i> field signalled for each MBS session in the corresponding <i>MBS-SessionInfo</i> . When an empty <i>mbs-NeighbourCellList</i> list is signalled, the UE shall assume that MBS broadcast services signalled in <i>mbs-SessionInfoList</i> in the <i>MBSBroadcastConfiguration</i> message are not provided in any neighbour cell. When a non-empty <i>mbs-NeighbourCellList</i> is signalled, the current serving cell does not provide information about MBS broadcast services of a neighbour cell that is not included in <i>mbs-NeighbourCellList</i> , i.e., the UE cannot determine the presence or absence of an MBS service of a neighbour cell that is absent. When the field <i>mbs-NeighbourCellList</i> is absent, the current serving cell does not provide information about MBS broadcast services in the neighbouring cells, i.e. the UE cannot determine the presence or absence of an MBS service in neighbouring cells based on the absence of this field.

— *MBSInterestIndication*

The *MBSInterestIndication* message is used to inform network that the UE is receiving/ interested to receive or no longer receiving/ interested to receive MBS broadcast service(s) via a broadcast MRB.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

MBSInterestIndication message

```
-- ASN1START
-- TAG-MBSINTERESTINDICATION-START

MBSInterestIndication-r17 ::= SEQUENCE {
    criticalExtensions      CHOICE {
        mbsInterestIndication-r17      MBSInterestIndication-r17-IEs,
        criticalExtensionsFuture        SEQUENCE {}
    }
}

MBSInterestIndication-r17-IEs ::= SEQUENCE {
    mbs-FreqList-r17          CarrierFreqListMBS-r17          OPTIONAL,
    mbs-Priority-r17          ENUMERATED {true}               OPTIONAL,
    mbs-ServiceList-r17       MBS-ServiceList-r17             OPTIONAL,
    lateNonCriticalExtension  OCTET STRING                   OPTIONAL,
    nonCriticalExtension       MBSInterestIndication-v1800     OPTIONAL
}

MBSInterestIndication-v1800 ::= SEQUENCE {
    mbs-NonServingInfoList-r18 MBS-NonServingInfoList-r18    OPTIONAL,
    nonCriticalExtension        SEQUENCE {}                   OPTIONAL
}

-- TAG-MBSINTERESTINDICATION-STOP
-- ASN1STOP
```


MBSInterestIndication field descriptions
mbs-FreqList List of MBS frequencies on which the UE is receiving or interested to receive MBS broadcast service via a broadcast MRB.
mbs-NonServingInfoList Indicates information for MBS broadcast reception on the non-serving cell.
mbs-Priority Indicates whether the UE prioritises MBS broadcast reception above unicast and MBS multicast reception. The field is present (i.e. value <i>true</i>), if the UE prioritises reception of broadcast services, on frequencies indicated in <i>mbs-FreqList</i>, above a reception of any of the unicast bearers and multicast MRBs. Otherwise the field is absent.
mbs-ServiceList List of MBS broadcast services which the UE is receiving or interested to receive.

MBSMulticastConfiguration

The *MBSMulticastConfiguration* message contains the control information applicable for MBS multicast services transmitted via multicast MRBs for RRC_INACTIVE UEs.

Signalling radio bearer: N/A

RLC-SAP: UM

Logical channel: multicast MCCH

Direction: Network to UE

MBSMulticastConfiguration message

```

-- ASN1START
-- TAG-MBSMULTICASTCONFIGURATION-START

MBSMulticastConfiguration-r18 ::= SEQUENCE {
    criticalExtensions      CHOICE {
        mbsMulticastConfiguration-r18      MBSMulticastConfiguration-r18-IEs,
        criticalExtensionsFuture            SEQUENCE {}
    }
}

MBSMulticastConfiguration-r18-IEs ::= SEQUENCE {
    mbs-SessionInfoListMulticast-r18      MBS-SessionInfoListMulticast-r18      OPTIONAL, -- Need R
    mbs-NeighbourCellList-r18              MBS-NeighbourCellList-r17              OPTIONAL, -- Need S
    drx-ConfigPTM-List-r18                 SEQUENCE (SIZE (1..maxNrofDRX-ConfigPTM-r17)) OF DRX-ConfigPTM-r17  OPTIONAL, -- Need R
    pdsch-ConfigMTCH-r18                   PD SCH-ConfigBroadcast-r17              OPTIONAL, -- Need S
    mtch-SSB-MappingWindowList-r18         MTCH-SSB-MappingWindowList-r17        OPTIONAL, -- Need R
    thresholdMBS-List-r18                  SEQUENCE (SIZE (1..maxNrofThresholdMBS-r18)) OF ThresholdMBS-r18  OPTIONAL, -- Need R
    lateNonCriticalExtension                OCTET STRING                          OPTIONAL,
    nonCriticalExtension                    SEQUENCE {}                          OPTIONAL
}

ThresholdMBS-r18 ::= SEQUENCE {

```

rsrp-r18

rsrq-r18

RSRP-Range

RSRQ-Range

OPTIONAL,

OPTIONAL

-- Need R

-- Need R

}

-- TAG-MBSMULTICASTCONFIGURATION-STOP

-- ASN1STOP

MBSMulticastConfiguration field descriptions
mbs-NeighbourCellList List of neighbour cells providing one or more MBS multicast services for RRC_INACTIVE that are provided by the current cell. This field is used by the UE together with <i>mtch-NeighbourCell</i> field signalled for each MBS session in the corresponding <i>MBS-SessionInfo</i> . When an empty <i>mbs-NeighbourCellList</i> list is signalled, the UE shall assume that MBS multicast services signalled in <i>mbs-SessionInfoListMulticast</i> in the <i>MBSMulticastConfiguration</i> message are not provided in any neighbour cell. When a non-empty <i>mbs-NeighbourCellList</i> is signalled, the current serving cell does not provide information about MBS multicast services of a neighbour cell that is not included in <i>mbs-NeighbourCellList</i> , i.e., the UE cannot determine the presence or absence of an MBS multicast service of a neighbour cell that is absent. When the field <i>mbs-NeighbourCellList</i> is absent, the current serving cell does not provide information about MBS multicast services in the neighbouring cells, i.e. the UE cannot determine the presence or absence of an MBS multicast service in neighbouring cells based on the absence of this field.
mbs-SessionInfoListMulticast Provides the configuration of MBS multicast session(s) in the current cell.
pdsch-ConfigMTCH Provides parameters for acquiring the PDSCH for multicast MTCH. When this field is absent, the UE shall use parameters in <i>pdsch-ConfigMCCH</i> in <i>SIB24</i> to acquire the PDSCH for multicast MTCH.
thresholdMBS-List List of reception quality thresholds for RRC connection resume for a UE receiving multicast in RRC_INACTIVE.

– MCGFailureInformation

The *MCGFailureInformation* message is used to provide information regarding NR MCG failures detected by the UE.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

MCGFailureInformation message

-- ASN1START

-- TAG-MCGFAILUREINFORMATION-START

MCGFailureInformation-r16 ::= SEQUENCE {
criticalExtensions CHOICE {
mcgFailureInformation-r16 MCGFailureInformation-r16-IEs,
criticalExtensionsFuture SEQUENCE {}
}
}

```
}

MCGFailureInformation-r16-IEs ::= SEQUENCE {
    failureReportMCG-r16          FailureReportMCG-r16          OPTIONAL,
    lateNonCriticalExtension      OCTET STRING                 OPTIONAL,
    nonCriticalExtension          SEQUENCE {}                   OPTIONAL
}

FailureReportMCG-r16 ::= SEQUENCE {
    failureType-r16               ENUMERATED {t310-Expiry, randomAccessProblem, rlc-MaxNumRetx,
                                             t312-Expiry-r16, lbt-Failure-r16, beamFailureRecoveryFailure-r16,
                                             bh-RLF-r16, spare1}
    measResultFreqList-r16       MeasResultList2NR              OPTIONAL,
    measResultFreqListEUTRA-r16  MeasResultList2EUTRA            OPTIONAL,
    measResultSCG-r16            OCTET STRING (CONTAINING MeasResultSCG-Failure)  OPTIONAL,
    measResultSCG-EUTRA-r16      OCTET STRING                  OPTIONAL,
    measResultFreqListUTRA-FDD-r16 MeasResultList2UTRA          OPTIONAL,
    ...
}

MeasResultList2UTRA ::= SEQUENCE (SIZE (1..maxFreq)) OF MeasResult2UTRA-FDD-r16

MeasResult2UTRA-FDD-r16 ::= SEQUENCE {
    carrierFreq-r16              ARFCN-ValueUTRA-FDD-r16,
    measResultNeighCellList-r16  MeasResultListUTRA-FDD-r16
}

MeasResultList2EUTRA ::= SEQUENCE (SIZE (1..maxFreq)) OF MeasResult2EUTRA-r16

-- TAG-MCGFAILUREINFORMATION-STOP
-- ASN1STOP
```

MCGFailureInformation field descriptions	
measResultFreqList	The field contains available results of measurements on NR frequencies the UE is configured to measure by the <i>measConfig</i> associated with the MCG.
measResultFreqListEUTRA	The field contains available results of measurements on E-UTRA frequencies the UE is configured to measure by <i>measConfig</i> associated with the MCG.
measResultFreqListUTRA-FDD	The field contains available results of measurements on UTRA FDD frequencies the UE is configured to measure by <i>measConfig</i> associated with the MCG.
measResultSCG	The field contains the <i>MeasResultSCG-Failure</i> IE which includes available measurement results on NR frequencies the UE is configured to measure by the <i>measConfig</i> associated with the SCG.
measResultSCG-EUTRA	The field contains the EUTRA <i>MeasResultSCG-FailureMRDC</i> IE which includes available results of measurements on E-UTRA frequencies the UE is configured to measure by the E-UTRA <i>RRConnectionReconfiguration</i> message as specified in TS 36.331 [10].

— *MeasurementReport*

The *MeasurementReport* message is used for the indication of measurement results.

Signalling radio bearer: SRB1, SRB3

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

MeasurementReport message

```
-- ASN1START
-- TAG-MEASUREMENTREPORT-START

MeasurementReport ::=
    criticalExtensions
        measurementReport
        criticalExtensionsFuture
    }
}

MeasurementReport-IEs ::=
    measResults
    lateNonCriticalExtension
    nonCriticalExtension
}

SEQUENCE {
    CHOICE {
        MeasurementReport-IEs,
        SEQUENCE {}
    }
}

SEQUENCE {
    MeasResults,
    OCTET STRING
    SEQUENCE{}
}

OPTIONAL,
OPTIONAL

-- TAG-MEASUREMENTREPORT-STOP
-- ASN1STOP
```

— *MeasurementReportAppLayer*

The *MeasurementReportAppLayer* message is used for sending application layer measurement report.

Signalling radio bearer: SRB4, SRB5

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

MeasurementReportAppLayer message

```

-- ASN1START
-- TAG-MEASUREMENTREPORTAPPLAYER-START

MeasurementReportAppLayer-r17 ::= SEQUENCE {
    criticalExtensions          CHOICE {
        measurementReportAppLayer-r17
        criticalExtensionsFuture SEQUENCE {}
    }
}

MeasurementReportAppLayer-r17-IEs ::= SEQUENCE {
    measurementReportAppLayerList-r17 MeasurementReportAppLayerList-r17,
    lateNonCriticalExtension          OCTET STRING OPTIONAL,
    nonCriticalExtension              MeasurementReportAppLayer-v1800-IEs OPTIONAL
}

MeasurementReportAppLayer-v1800-IEs ::= SEQUENCE {
    measurementReportAppLayerList-v1800 MeasurementReportAppLayerList-v1800 OPTIONAL,
    nonCriticalExtension                 SEQUENCE{} OPTIONAL
}

MeasurementReportAppLayerList-r17 ::= SEQUENCE (SIZE (1..maxNrofAppLayerMeas-r17)) OF MeasReportAppLayer-r17

MeasurementReportAppLayerList-v1800 ::= SEQUENCE (SIZE (1..maxNrofAppLayerMeas-r17)) OF MeasReportAppLayer-v1800

MeasReportAppLayer-r17 ::= SEQUENCE {
    measConfigAppLayerId-r17      MeasConfigAppLayerId-r17,
    measReportAppLayerContainer-r17 OCTET STRING OPTIONAL,
    appLayerSessionStatus-r17     ENUMERATED {start, stop} OPTIONAL,
    ran-VisibleMeasurements-r17   RAN-VisibleMeasurements-r17 OPTIONAL
}

MeasReportAppLayer-v1800 ::= SEQUENCE {
    appLayerIdleInactiveConfig-r18 AppLayerIdleInactiveConfig-r18 OPTIONAL,
    measReportAppLayerContainerList-r18 SEQUENCE (SIZE (1..maxNrofAppLayerReports-r18)) OF OCTET STRING OPTIONAL,
    ...
}

RAN-VisibleMeasurements-r17 ::= SEQUENCE {
    appLayerBufferLevelList-r17 SEQUENCE (SIZE (1..8)) OF AppLayerBufferLevel-r17 OPTIONAL,
    playoutDelayForMediaStartup-r17 INTEGER (0..30000) OPTIONAL,
    pdu-SessionIdList-r17       SEQUENCE (SIZE (1..maxNrofPDU-Sessions-r17)) OF PDU-SessionID OPTIONAL,
    ...,
    [[
        pdu-SessionIdListExt-v1800 SEQUENCE (SIZE (1..maxNrofPDU-Sessions-r17)) OF QFI-List-r18 OPTIONAL
    ]]
}

AppLayerBufferLevel-r17 ::= INTEGER (0..30000)

QFI-List-r18 ::= SEQUENCE (SIZE (1..maxNrofQFIs)) OF QFI

```

-- TAG-MEASUREMENTREPORTAPPLAYER-STOP
-- ASN1STOP

MeasurementReportAppLayer field descriptions
measurementReportAppLayerList The field contains a list of application layer measurement reports. If <i>measurementReportAppLayerList-v1800</i> is present, it contains the same number of entries, listed in the same order as in <i>measurementReportAppLayerList-r17</i> .

MeasReportAppLayer field descriptions
appLayerSessionStatus Indicates that an application layer measurement session in the application layer starts or ends. For application layer measurements applicable to RRC_IDLE or RRC_INACTIVE, the UE transmits <i>appLayerSessionStatus</i> upon transfer to RRC_CONNECTED if <i>transmissionOfSessionStartStop</i> is set to <i>true</i> for the application layer measurement configuration.
measReportAppLayerContainer The field contains the application layer measurement report container, see Annex L (normative) in TS 26.247 [68], clause 16.5 in TS 26.114 [69] and clause 9.4 in TS 26.118 [70].
measReportAppLayerContainerList The field contains a list of application layer measurement report containers for each <i>measConfigAppLayerId</i> , see Annex L (normative) in TS 26.247 [68], clause 16.5 in TS 26.114 [69] and clause 9.4 in TS 26.118 [70].
ran-VisibleMeasurements The field contains the RAN visible application layer measurement report.

RAN-VisibleMeasurements field descriptions
appLayerBufferLevelList The field indicates a list of application layer buffer levels, and each <i>AppLayerBufferLevel</i> indicates the application layer buffer level in ms. Value 0 corresponds to 0 ms, value 1 corresponds to 10 ms, value 2 corresponds to 20 ms and so on. If the buffer level is larger than the maximum value of 30000 (5 minutes), the UE reports 30000.
playoutDelayForMediaStartup Indicates the application layer playout delay for media start-up in ms. Value 0 corresponds to 0 ms, value 1 corresponds to 1 ms, value 2 corresponds to 2 ms and so on. If the playout delay for media start-up is larger than the maximum value of 30000 ms, the UE reports 30000.
pdu-SessionIdList List of PDU session identities and QoS flow identities per PDU session associated with the application data flows subject to the RAN visible application layer measurements. If <i>pdu-SessionIdListExt-v1800</i> is present, it contains the same number of entries, listed in the same order as in <i>pdu-SessionIdList-r17</i> .

— MIB

The MIB includes the system information transmitted on BCH.

Signalling radio bearer: N/A

RLC-SAP: TM

Logical channel: BCCH

Direction: Network to UE

MIB

```
-- ASN1START
-- TAG-MIB-START
```

```
MIB ::=
  systemFrameNumber
  subCarrierSpacingCommon
  ssb-SubcarrierOffset
  dmrs-TypeA-Position
  pdcch-ConfigSIB1
  cellBarred
  intraFreqReselection
  spare
}

SEQUENCE {
  BIT STRING (SIZE (6)),
  ENUMERATED {scs15or60, scs30or120},
  INTEGER (0..15),
  ENUMERATED {pos2, pos3},
  PDCCH-ConfigSIB1,
  ENUMERATED {barred, notBarred},
  ENUMERATED {allowed, notAllowed},
  BIT STRING (SIZE (1))
}

-- TAG-MIB-STOP
-- ASN1STOP
```

MIB field descriptions
cellBarred Value <i>barred</i> means that the cell is barred, as defined in TS 38.304 [20]. This field is ignored by IAB-MT and NCR-MT. This field is ignored for connectivity to NTN or ATG.
dmrs-TypeA-Position Position of (first) DM-RS for downlink (see TS 38.211 [16], clause 7.4.1.1.2) and uplink (see TS 38.211 [16], clause 6.4.1.1.3).
intraFreqReselection Controls cell selection/reselection to intra-frequency cells when the highest ranked cell is barred, or treated as barred by the UE, as specified in TS 38.304 [20]. This field is ignored by IAB-MT, NCR-MT and (e)RedCap UE.
pdccch-ConfigSIB1 Determines a common <i>ControlResourceSet</i> (CORESET), a common search space and necessary PDCCH parameters. If the field <i>ssb-SubcarrierOffset</i> indicates that <i>SIB1</i> is absent, the field <i>pdccch-ConfigSIB1</i> indicates the frequency positions where the UE may find SS/PBCH block with <i>SIB1</i> or the frequency range where the network does not provide SS/PBCH block with <i>SIB1</i> (see TS 38.213 [13], clause 13).
ssb-SubcarrierOffset Corresponds to k_{SSB} (see TS 38.213 [13]), which is the frequency domain offset between SSB and the overall resource block grid in number of subcarriers. (See TS 38.211 [16], clause 7.4.3.1). For operation with shared spectrum channel access in FR1 (see 37.213 [48]), this field corresponds to $\bar{k}_{SSB}$, and k_{SSB} is obtained from $\bar{k}_{SSB}$ (see TS 38.211 [16], clause 7.4.3.1); the LSB of this field is used also for deriving the QCL relation between SS/PBCH blocks as specified in TS 38.213 [13], clause 4.1. The value range of this field may be extended by an additional most significant bit encoded within PBCH as specified in TS 38.213 [13]. This field may indicate that this cell does not provide <i>SIB1</i> and that there is hence no CORESET#0 configured in <i>MIB</i> (see TS 38.213 [13], clause 13). In this case, the field <i>pdccch-ConfigSIB1</i> may indicate the frequency positions where the UE may (not) find a SS/PBCH with a control resource set and search space for <i>SIB1</i> (see TS 38.213 [13], clause 13).
subCarrierSpacingCommon Subcarrier spacing for <i>SIB1</i> , Msg.2/4 and MsgB for initial access, paging and broadcast SI-messages. If the UE acquires this <i>MIB</i> on an FR1 carrier frequency, the value <i>scs15or60</i> corresponds to 15 kHz and the value <i>scs30or120</i> corresponds to 30 kHz. If the UE acquires this <i>MIB</i> on an FR2 carrier frequency, the value <i>scs15or60</i> corresponds to 60 kHz and the value <i>scs30or120</i> corresponds to 120 kHz. For operation with shared spectrum channel access in FR1 (see 37.213 [48]) and for operation in FR2-2, the subcarrier spacing for <i>SIB1</i> , Msg.2/4 and MsgB for initial access, paging and broadcast SI-messages is same as that for the corresponding SSB. For operation with shared spectrum channel access, this field instead is used for deriving the QCL relation between SS/PBCH blocks as specified in TS 38.213 [13], clause 4.1.
systemFrameNumber The 6 most significant bits (MSB) of the 10-bit System Frame Number (SFN). The 4 LSB of the SFN are conveyed in the PBCH transport block as part of channel coding (i.e. outside the <i>MIB</i> encoding), as defined in clause 7.1 in TS 38.212 [17].

– *MobilityFromNRCommand*

The *MobilityFromNRCommand* message is used to command handover from NR to E-UTRA/EPC, E-UTRA/5GC or UTRA-FDD.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: Network to UE

MobilityFromNRCommand message


```
-- TAG-MOBILITYFROMNRCOMMAND-START

MobilityFromNRCommand ::=
    rrc-TransactionIdentifier
    criticalExtensions
        mobilityFromNRCommand
        criticalExtensionsFuture
    }

MobilityFromNRCommand-IEs ::=
    targetRAT-Type
    targetRAT-MessageContainer
    nas-SecurityParamFromNR
    lateNonCriticalExtension
    nonCriticalExtension

MobilityFromNRCommand-v1610-IEs ::=
    voiceFallbackIndication-r16
    nonCriticalExtension

-- TAG-MOBILITYFROMNRCOMMAND-STOP
-- ASN1STOP
```

MobilityFromNRCommand-IEs field descriptions	
nas-SecurityParamFromNR	If <i>targetRAT-Type</i> is <i>eutra</i> , this field is used to deliver the key synchronisation and Key freshness for the NR to LTE/EPC handovers and a part of the downlink NAS COUNT as specified in TS 33.501 [11] and the content of the parameter is defined in TS 24.501 [23]. If <i>targetRAT-Type</i> is <i>utra-fdd</i> , this field is used to deliver the key synchronisation and Key freshness for the NR to FDD UTRAN handover and a part of the downlink NAS COUNT as specified in TS 33.501 [11] and the content of the parameter is defined in TS 24.501 [23].
targetRAT-MessageContainer	The field contains a message specified in another standard, as indicated by the <i>targetRAT-Type</i> , and carries information about the target cell identifier(s) and radio parameters relevant for the target radio access technology. A complete message is included, as specified in the other standard. See NOTE 1
targetRAT-Type	Indicates the target RAT type.
voiceFallbackIndication	Indicates the handover is triggered by EPS fallback for IMS voice as specified in TS 23.502 [43].

NOTE 1: The correspondence between the value of the *targetRAT-Type*, the standard to apply, and the message contained within the *targetRAT-MessageContainer* is shown in the table below:

targetRAT-Type	Standard to apply	targetRAT-MessageContainer
<i>eutra</i>	TS 36.331 [10] (clause 5.4.2)	<i>DL-DCCH-Message</i> including the <i>RRCCConnectionReconfiguration</i>
<i>utra-fdd</i>	TS 25.331 [45] (clause 10.2.16a)	<i>Handover TO UTRAN command</i>

Conditional Presence	Explanation
HO-ToEPCUTRAN	This field is mandatory present in case of inter system handover to "EPC" or "FDD UTRAN". Otherwise it is absent.

– *Paging*

The *Paging* message is used for the notification of one or more UEs.

- Signalling radio bearer: N/A
- RLC-SAP: TM
- Logical channel: PCCH
- Direction: Network to UE

Paging message

```
-- ASN1START
-- TAG-PAGING-START

Paging ::=
    pagingRecordList
    lateNonCriticalExtension
    nonCriticalExtension
}

Paging-v1700-IEs ::=
    pagingRecordList-v1700
    pagingGroupList-r17
    nonCriticalExtension
}

Paging-v1800-IEs ::=
    pagingRecordList-v1800
    pagingGroupList-v1800
    nonCriticalExtension
}

PagingRecordList ::=
    SEQUENCE (SIZE(1..maxNrofPageRec)) OF PagingRecord

PagingRecordList-v1700 ::=
    SEQUENCE (SIZE(1..maxNrofPageRec)) OF PagingRecord-v1700

PagingGroupList-r17 ::=
    SEQUENCE (SIZE(1..maxNrofPageGroup-r17)) OF TMGI-r17

PagingRecordList-v1800 ::=
    SEQUENCE (SIZE(1..maxNrofPageRec)) OF PagingRecord-v1800

PagingGroupList-v1800 ::=
    SEQUENCE (SIZE(1..maxNrofPageGroup-r17)) OF GroupPaging-r18

PagingRecord ::=
    SEQUENCE {
        pagingRecordList
        OCTET STRING
        Paging-v1700-IEs
    }
    OPTIONAL, -- Need N
    OPTIONAL,
    OPTIONAL

PagingRecordList-v1700 ::=
    SEQUENCE {
        pagingRecordList-v1700
        PagingGroupList-r17
        Paging-v1800-IEs
    }
    OPTIONAL, -- Need N
    OPTIONAL, -- Need N
    OPTIONAL

PagingRecordList-v1800 ::=
    SEQUENCE {
        pagingRecordList-v1800
        PagingGroupList-v1800
        SEQUENCE {}
    }
    OPTIONAL, -- Need N
    OPTIONAL, -- Need N
    OPTIONAL
```

```

    ue-Identity
    accessType
    ...
}

PagingRecord-v1700 ::=
    pagingCause-r17
}

PagingRecord-v1800 ::=
    mt-SDT
}

PagingUE-Identity ::=
    ng-5G-S-TMSI
    fullI-RNTI
    ...
}

GroupPaging-r18 ::=
    inactiveReceptionAllowed-r18
}

-- TAG-PAGING-STOP
-- ASN1STOP

```

PagingUE-Identity, **ENUMERATED** {non3GPP} **OPTIONAL**, -- Need N
 SEQUENCE { **ENUMERATED** {voice} **OPTIONAL** -- Need N
 SEQUENCE { **ENUMERATED** {true} **OPTIONAL** -- Need N
 CHOICE { NG-5G-S-TMSI, I-RNTI-Value,
 SEQUENCE { **ENUMERATED** {true} **OPTIONAL** -- Need N

PagingRecord field descriptions
accessType Indicates whether the <i>Paging</i> message is originated due to the PDU sessions from the non-3GPP access.
inactiveReceptionAllowed Indicates whether the UE with a valid PTM configuration for a <i>TMGI</i> in the <i>PagingGroupList</i> stays in RRC_INACTIVE to receive the corresponding MBS multicast session.
mt-SDT Mobile Terminated SDT indication. The network includes <i>mt-SDT</i> indication in paging message only if the UE's I-RNTI is included in the paging message.
pagingRecordList If the network includes <i>pagingRecordList-v1700</i> , it includes the same number of entries, and listed in the same order, as in <i>pagingRecordList</i> (i.e. without suffix). If the network includes <i>pagingRecordList-v1800</i> , it includes the same number of entries, and listed in the same order, as in <i>pagingRecordList</i> (i.e. without suffix). The first element in <i>pagingRecordList-v1700</i> corresponds to the first UE identity in <i>pagingRecordList</i> (i.e. without suffix). The second element in <i>pagingRecordList-v1700</i> corresponds to the second UE identity in <i>pagingRecordList</i> (i.e. without suffix), and so on. The first element in <i>pagingRecordList-v1800</i> corresponds to the first UE identity in <i>pagingRecordList</i> (i.e. without suffix). The second element in <i>pagingRecordList-v1800</i> corresponds to the second UE identity in <i>pagingRecordList</i> (i.e. without suffix), and so on.
pagingCause Indicates whether the Paging message is originated due to IMS voice. If this field is present, it implies that the corresponding paging entry is for IMS voice. If upper layers indicate the support of paging cause and if this field is not present but <i>pagingRecordList-v1700</i> is present, it implies that the corresponding paging entry is for a service other than IMS voice. Otherwise, paging cause is undetermined.
pagingGroupList If the network includes <i>pagingGroupList-v1800</i> , it includes the same number of elements, and listed in the same order, as in <i>pagingGroupList-r17</i> . The first element corresponds to the first TMGI in <i>pagingGroupList-r17</i> . The second element corresponds to the second TMGI in <i>pagingGroupList-r17</i> , and so on.

— *RRCReestablishment*

The *RRCReestablishment* message is used to re-establish SRB1.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

***RRCReestablishment* message**

```
-- ASN1START
-- TAG-RRCREESTABLISHMENT-START

RRCReestablishment ::=
  rrc-TransactionIdentifier
  criticalExtensions
    rrcReestablishment
    criticalExtensionsFuture
  }
}

RRCReestablishment-IEs ::=
  nextHopChainingCount
  lateNonCriticalExtension
  nonCriticalExtension
}

RRCReestablishment-v1700-IEs ::=
  sl-L2RemoteUE-Config-r17
  nonCriticalExtension
}

-- TAG-RRCREESTABLISHMENT-STOP
-- ASN1STOP
```

RRCReestablishment-IEs field descriptions	
sl-L2RemoteUE-Config Contains dedicated configurations used for L2 U2N relay related operation. The network configures only the SRAP configuration for local UE ID.	

Conditional Presence	Explanation
L2RemoteUE	The field is mandatory present for L2 U2N Remote UE; otherwise it is absent.

– *RRCReestablishmentComplete*

The *RRCReestablishmentComplete* message is used to confirm the successful completion of an RRC connection re-establishment.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

RRCReestablishmentComplete message

```
-- ASN1START
-- TAG-RRCREESTABLISHMENTCOMPLETE-START

RRCReestablishmentComplete ::=
    rrc-TransactionIdentifier
    criticalExtensions
        rrcReestablishmentComplete
        criticalExtensionsFuture
    }

RRCReestablishmentComplete-IEs ::=
    lateNonCriticalExtension
    nonCriticalExtension

RRCReestablishmentComplete-v1610-IEs ::=
    ue-MeasurementsAvailable-r16
    nonCriticalExtension

RRCReestablishmentComplete-v1800-IEs ::=
    flightPathInfoAvailable-r18
    measConfigReportAppLayerAvailable-r18
    musim-CapRestrictionInd-r18
    nonCriticalExtension

-- TAG-RRCREESTABLISHMENTCOMPLETE-STOP
-- ASN1STOP
```

<pre>SEQUENCE { RRC-TransactionIdentifier, CHOICE { RRCReestablishmentComplete-IEs, SEQUENCE {} } }</pre>	
<pre>SEQUENCE { OCTET STRING RRCReestablishmentComplete-v1610-IEs }</pre>	<pre>OPTIONAL, OPTIONAL</pre>
<pre>SEQUENCE { UE-MeasurementsAvailable-r16 RRCReestablishmentComplete-v1800-IEs }</pre>	<pre>OPTIONAL, OPTIONAL</pre>
<pre>SEQUENCE { ENUMERATED {true} ENUMERATED {true} ENUMERATED {true} SEQUENCE {} }</pre>	<pre>OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL</pre>

<i>RRCReestablishmentComplete-IEs</i> field descriptions
<i>measConfigReportAppLayerAvailable</i> Indication that the UE has at least one application layer measurement configuration with <i>appLayerIdleInactiveConfig</i> configured.
<i>musim-CapRestrictionInd</i> This field indicates the UE temporary capability restriction due to MUSIM operation.

— *RRCReestablishmentRequest*

The *RRCReestablishmentRequest* message is used to request the reestablishment of an RRC connection.

- Signalling radio bearer: SRB0
- RLC-SAP: TM
- Logical channel: CCCH
- Direction: UE to Network

RRCReestablishmentRequest message

```
-- ASN1START
-- TAG-RRCREESTABLISHMENTREQUEST-START

RRCReestablishmentRequest ::= SEQUENCE {
    rrcReestablishmentRequest RRCReestablishmentRequest-IEs
}

RRCReestablishmentRequest-IEs ::= SEQUENCE {
    ue-Identity ReestabUE-Identity,
    reestablishmentCause ReestablishmentCause,
    spare BIT STRING (SIZE (1))
}

ReestabUE-Identity ::= SEQUENCE {
    c-RNTI RNTI-Value,
    physCellId PhysCellId,
    shortMAC-I ShortMAC-I
}

ReestablishmentCause ::= ENUMERATED {reconfigurationFailure, handoverFailure, otherFailure, spare1}

-- TAG-RRCREESTABLISHMENTREQUEST-STOP
-- ASN1STOP
```

ReestabUE-Identity field descriptions
physCellId The Physical Cell Identity of the PCell the UE was connected to prior to the failure.

RRCReestablishmentRequest-IEs field descriptions
reestablishmentCause Indicates the failure cause that triggered the re-establishment procedure. gNB is not expected to reject a <i>RRCReestablishmentRequest</i> due to unknown cause value being used by the UE.
ue-Identity UE identity included to retrieve UE context and to facilitate contention resolution by lower layers.

– *RRCReconfiguration*

The *RRCReconfiguration* message is the command to modify an RRC connection. It may convey information for measurement configuration, mobility control, radio resource configuration (including RBs, MAC main configuration and physical channel configuration) and AS security configuration.

- Signalling radio bearer: SRB1 or SRB3
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: Network to UE

RRCReconfiguration message

```
-- ASN1START
-- TAG-RRCRECONFIGURATION-START

RRCReconfiguration ::=
    rrc-TransactionIdentifier
    criticalExtensions
        rrcReconfiguration
        criticalExtensionsFuture
    }

RRCReconfiguration-IEs ::=
    radioBearerConfig
    secondaryCellGroup
    measConfig
    lateNonCriticalExtension
    nonCriticalExtension

-- Regular non-critical extensions:
RRCReconfiguration-v1530-IEs ::=
```

```
SEQUENCE {
    RRC-TransactionIdentifier,
    CHOICE {
        RRCReconfiguration-IEs,
        SEQUENCE {}
    }
}

SEQUENCE {
    RadioBearerConfig
    OCTET STRING (CONTAINING CellGroupConfig)
    MeasConfig
    OCTET STRING (CONTAINING RRCReconfiguration-v15t0-IEs)
    RRCReconfiguration-v1530-IEs
}

OPTIONAL, -- Need M
OPTIONAL, -- Cond SCG
OPTIONAL, -- Need M
OPTIONAL,
OPTIONAL
```

masterCellGroup	OCTET STRING (CONTAINING CellGroupConfig)	OPTIONAL, -- Need M
fullConfig	ENUMERATED {true}	OPTIONAL, -- Cond FullConfig
dedicatedNAS-MessageList	SEQUENCE (SIZE(1..maxDRB)) OF DedicatedNAS-Message	OPTIONAL, -- Cond nonHO
masterKeyUpdate	MasterKeyUpdate	OPTIONAL, -- Cond
MasterKeyChange		
dedicatedSIB1-Delivery	OCTET STRING (CONTAINING SIB1)	OPTIONAL, -- Need N
dedicatedSystemInformationDelivery	OCTET STRING (CONTAINING SystemInformation)	OPTIONAL, -- Need N
otherConfig	OtherConfig	OPTIONAL, -- Need M
nonCriticalExtension	RRCReconfiguration-v1540-IEs	OPTIONAL
}		
RRCReconfiguration-v1540-IEs ::=	SEQUENCE {	
otherConfig-v1540	OtherConfig-v1540	OPTIONAL, -- Need M
nonCriticalExtension	RRCReconfiguration-v1560-IEs	OPTIONAL
}		
RRCReconfiguration-v1560-IEs ::=	SEQUENCE {	
mrdc-SecondaryCellGroupConfig	SetupRelease { MRDC-SecondaryCellGroupConfig }	OPTIONAL, -- Need M
radioBearerConfig2	OCTET STRING (CONTAINING RadioBearerConfig)	OPTIONAL, -- Need M
sk-Counter	SK-Counter	OPTIONAL, -- Need N
nonCriticalExtension	RRCReconfiguration-v1610-IEs	OPTIONAL
}		
RRCReconfiguration-v1610-IEs ::=	SEQUENCE {	
otherConfig-v1610	OtherConfig-v1610	OPTIONAL, -- Need M
bap-Config-r16	SetupRelease { BAP-Config-r16 }	OPTIONAL, -- Need M
iab-IP-AddressConfigurationList-r16	IAB-IP-AddressConfigurationList-r16	OPTIONAL, -- Need M
conditionalReconfiguration-r16	ConditionalReconfiguration-r16	OPTIONAL, -- Need M
daps-SourceRelease-r16	ENUMERATED{true}	OPTIONAL, -- Need N
t316-r16	SetupRelease {T316-r16}	OPTIONAL, -- Need M
needForGapsConfigNR-r16	SetupRelease {NeedForGapsConfigNR-r16}	OPTIONAL, -- Need M
onDemandSIB-Request-r16	SetupRelease { OnDemandSIB-Request-r16 }	OPTIONAL, -- Need M
dedicatedPosSysInfoDelivery-r16	OCTET STRING (CONTAINING PosSystemInformation-r16-IEs)	OPTIONAL, -- Need N
sl-ConfigDedicatedNR-r16	SetupRelease {SL-ConfigDedicatedNR-r16}	OPTIONAL, -- Need M
sl-ConfigDedicatedEUTRA-Info-r16	SetupRelease {SL-ConfigDedicatedEUTRA-Info-r16}	OPTIONAL, -- Need M
targetCellsMTC-SCG-r16	SSB-MTC	OPTIONAL, -- Need S
nonCriticalExtension	RRCReconfiguration-v1700-IEs	OPTIONAL
}		
RRCReconfiguration-v1700-IEs ::=	SEQUENCE {	
otherConfig-v1700	OtherConfig-v1700	OPTIONAL, -- Need M
sl-L2RelayUE-Config-r17	SetupRelease { SL-L2RelayUE-Config-r17 }	OPTIONAL, -- Need M
sl-L2RemoteUE-Config-r17	SetupRelease { SL-L2RemoteUE-Config-r17 }	OPTIONAL, -- Need M
dedicatedPagingDelivery-r17	OCTET STRING (CONTAINING Paging)	OPTIONAL, -- Cond PagingRelay
needForGapNCSG-ConfigNR-r17	SetupRelease {NeedForGapNCSG-ConfigNR-r17}	OPTIONAL, -- Need M
needForGapNCSG-ConfigEUTRA-r17	SetupRelease {NeedForGapNCSG-ConfigEUTRA-r17}	OPTIONAL, -- Need M
musim-GapConfig-r17	SetupRelease {MUSIM-GapConfig-r17}	OPTIONAL, -- Need M
ul-GapFR2-Config-r17	SetupRelease { UL-GapFR2-Config-r17 }	OPTIONAL, -- Need M
scg-State-r17	ENUMERATED { deactivated }	OPTIONAL, -- Need S
appLayerMeasConfig-r17	AppLayerMeasConfig-r17	OPTIONAL, -- Need M
ue-TxTEG-RequestUL-TDOA-Config-r17	SetupRelease {UE-TxTEG-RequestUL-TDOA-Config-r17}	OPTIONAL, -- Need M
nonCriticalExtension	RRCReconfiguration-v1800-IEs	OPTIONAL
}		
RRCReconfiguration-v1800-IEs ::=	SEQUENCE {	


```

    needForInterruptionConfigNR-r18      ENUMERATED { disabled, enabled }      OPTIONAL, -- Need M
    aerial-Config-r18                     SetupRelease { Aerial-Config-r18 }    OPTIONAL, -- Need M
    sl-IndirectPathAddChange-r18          SetupRelease { SL-IndirectPathAddChange-r18 }  OPTIONAL, -- Need M
    n3c-IndirectPathAddChange-r18         SetupRelease { N3C-IndirectPathAddChange-r18 }  OPTIONAL, -- Need M
    n3c-IndirectPathConfigRelay-r18       SetupRelease { N3C-IndirectPathConfigRelay-r18 }  OPTIONAL, -- Need M
    otherConfig-v1800                     OtherConfig-v1800                      OPTIONAL, -- Need M
    srs-PosResourceSetAggBW-CombinationList-r18 SetupRelease { SRS-PosResourceSetAggBW-CombinationList-r18 }  OPTIONAL, -- Need M
    ltm-Config-r18                        SetupRelease { LTM-Config-r18 }        OPTIONAL, -- Need M
    nonCriticalExtension                   RRCReconfiguration-v1830-IEs          OPTIONAL
}

RRCReconfiguration-v1830-IEs ::=
    otherConfig-v1830                      SEQUENCE {                               OPTIONAL, -- Need M
    nonCriticalExtension                     SEQUENCE {}                               OPTIONAL
}

-- Late non-critical Rel-15 extensions:
RRCReconfiguration-v15t0-IEs ::=
    -- Following field is only to be used for late REL-15 extensions
    lateNonCriticalExtension                OCTET STRING                          OPTIONAL,
    nonCriticalExtension                     RRCReconfiguration-v16k0-IEs          OPTIONAL
}

RRCReconfiguration-v16k0-IEs ::=
    sl-ConfigDedicatedNR-v16k0             SEQUENCE {                               OPTIONAL, -- Need M
    nonCriticalExtension                     SEQUENCE {}                               OPTIONAL
}

MRDC-SecondaryCellGroupConfig ::=
    mrdc-ReleaseAndAdd                     SEQUENCE {                               OPTIONAL, -- Need N
    mrdc-SecondaryCellGroup                 ENUMERATED {true}
    nr-SCG                                  CHOICE {
        eutra-SCG                           OCTET STRING (CONTAINING RRCReconfiguration),
        }
    }
}

BAP-Config-r16 ::=
    bap-Address-r16                        SEQUENCE {                               OPTIONAL, -- Need M
    defaultUL-BAP-RoutingID-r16             BIT STRING (SIZE (10))                  OPTIONAL, -- Need M
    defaultUL-BH-RLC-Channel-r16            BAP-RoutingID-r16                      OPTIONAL, -- Need M
    flowControlFeedbackType-r16             BH-RLC-ChannelID-r16                   OPTIONAL, -- Need R
    ...                                     ENUMERATED {perBH-RLC-Channel, perRoutingID, both}
}

MasterKeyUpdate ::=
    keySetChangeIndicator                  SEQUENCE {                               OPTIONAL,
    nextHopChainingCount                    BOOLEAN,
    nas-Container                           NextHopChainingCount,
    ...                                     OCTET STRING
}

OnDemandSIB-Request-r16 ::=
    onDemandSIB-RequestProhibitTimer-r16 SEQUENCE {                               OPTIONAL,
    ...                                     ENUMERATED {s0, s0dot5, s1, s2, s5, s10, s20, s30}
}

```

```

T316-r16 ::= ENUMERATED {ms50, ms100, ms200, ms300, ms400, ms500, ms600, ms1000, ms1500, ms2000}

IAB-IP-AddressConfigurationList-r16 ::= SEQUENCE {
    iab-IP-AddressToAddModList-r16 SEQUENCE (SIZE(1..maxIAB-IP-Address-r16)) OF IAB-IP-AddressConfiguration-r16 OPTIONAL, -- Need N
    iab-IP-AddressToReleaseList-r16 SEQUENCE (SIZE(1..maxIAB-IP-Address-r16)) OF IAB-IP-AddressIndex-r16 OPTIONAL, -- Need N
    ...
}

IAB-IP-AddressConfiguration-r16 ::= SEQUENCE {
    iab-IP-AddressIndex-r16 IAB-IP-AddressIndex-r16,
    iab-IP-Address-r16 IAB-IP-Address-r16 OPTIONAL, -- Need M
    iab-IP-Usage-r16 IAB-IP-Usage-r16 OPTIONAL, -- Need M
    iab-donor-DU-BAP-Address-r16 BIT STRING (SIZE(10)) OPTIONAL, -- Need M
    ...
}

SL-ConfigDedicatedEUTRA-Info-r16 ::= SEQUENCE {
    sl-ConfigDedicatedEUTRA-r16 OCTET STRING OPTIONAL, -- Need M
    sl-TimeOffsetEUTRA-List-r16 SEQUENCE (SIZE (8)) OF SL-TimeOffsetEUTRA-r16 OPTIONAL -- Need M
}

SL-TimeOffsetEUTRA-r16 ::= ENUMERATED {ms0, ms0dot25, ms0dot5, ms0dot625, ms0dot75, ms1, ms1dot25, ms1dot5, ms1dot75,
    ms2, ms2dot5, ms3, ms4, ms5, ms6, ms8, ms10, ms20}

UE-TxTEG-RequestUL-TDOA-Config-r17 ::= CHOICE {
    oneShot-r17 NULL,
    periodicReporting-r17 ENUMERATED { ms160, ms320, ms1280, ms2560, ms61440, ms81920, ms368640, ms737280 }
}

SRS-PosResourceSetAggBW-CombinationList-r18 ::= SEQUENCE (SIZE(1.. maxNrOfLinkedSRS-PosResSetComb-r18)) OF SRS-PosResourceSetLinkedForAggBW-List-
r18

SRS-PosResourceSetLinkedForAggBW-List-r18 ::= SEQUENCE (SIZE(2..maxNrOfLinkedSRS-PosResourceSet-r18)) OF SRS-PosResourceSetLinkedForAggBW-r18

-- TAG-RRCRECONFIGURATION-STOP
-- ASN1STOP

```

<i>RRCReconfiguration-IEs field descriptions</i>
<i>appLayerMeasConfig</i> This field is used to configure application layer measurements. This field is absent when the UE is configured to operate with shared spectrum channel access or if <i>sl-L2RemoteUE-Config-r17</i> is configured or not released.
<i>bap-Config</i> This field is used to configure the BAP entity for IAB nodes.
<i>bap-Address</i> Indicates the BAP address of an IAB-node. The BAP address of an IAB-node cannot be changed once configured for the cell group to the BAP entity.
<i>conditionalReconfiguration</i> Configuration of candidate target SpCell(s) and execution condition(s) for conditional handover, conditional PSCell addition or conditional PSCell change. The field is absent if any DAPS bearer is configured, if the <i>sl-L2RemoteUE-Config</i> or <i>sl-L2RelayUE-Config</i> is configured, or if the <i>RRCReconfiguration</i> message is contained within <i>condRRCReconfig</i> . When the <i>masterCellGroup</i> and/or <i>secondaryCellGroup</i> includes <i>ReconfigurationWithSync</i> , if this field is present, it only includes configurations/fields specific to subsequent CPAC. The <i>RRCReconfiguration</i> message contained in <i>DLInformationTransferMRDC</i> cannot contain the field <i>conditionalReconfiguration</i> for conditional PSCell change or for conditional PSCell addition. The network does not include this field in an <i>RRCReconfiguration</i> message contained within a <i>LTM-Config</i> IE.
<i>daps-SourceRelease</i> Indicates to UE that the source cell part of DAPS operation is to be stopped and the source cell part of DAPS configuration is to be released.
<i>dedicatedNAS-MessageList</i> This field is used to transfer UE specific NAS layer information between the network and the UE. The RRC layer is transparent for each PDU in the list.
<i>dedicatedPagingDelivery</i> This field is used to transfer <i>Paging</i> message for the associated L2 U2N Remote UE to the L2 U2N Relay UE in <i>RRC_CONNECTED</i> .
<i>dedicatedPosSysInfoDelivery</i> This field is used to transfer <i>SIBPos</i> to the UE in <i>RRC_CONNECTED</i> . This field may contain multiple posSIB segments of the same posSIB type. When the number of segments of posSIB of the same posSIB type exceeds the maximum number of posSIBs of this field (i.e., 32), the posSIB segments of the same posSIB type may be delivered in multiple <i>RRCReconfiguration</i> messages.
<i>dedicatedSIB1-Delivery</i> This field is used to transfer <i>SIB1</i> to the UE (including L2 U2N Remote UE). The field has the same values as the corresponding configuration in <i>servingCellConfigCommon</i> .
<i>dedicatedSystemInformationDelivery</i> This field is used to transfer <i>SIB6</i> , <i>SIB7</i> , <i>SIB8</i> , <i>SIB19</i> , <i>SIB20</i> , <i>SIB21</i> , <i>SIB25</i> to the UE with an active BWP with no common search space configured or the L2 U2N Remote UE in <i>RRC_CONNECTED</i> . For UEs in <i>RRC_CONNECTED</i> (including L2 U2N Remote UE), this field is also used to transfer the SIBs requested on-demand.
<i>defaultUL-BAP-RoutingID</i> This field is used for IAB-node to configure the default uplink Routing ID, which is used by IAB-node during IAB-node bootstrapping, migration, IAB-MT RRC resume and IAB-MT RRC re-establishment for <i>F1-C</i> and <i>non-F1</i> traffic. The <i>defaultUL-BAP-RoutingID</i> can be (re-)configured when IAB-node IP address for <i>F1-C</i> related traffic changes. This field is mandatory only for IAB-node bootstrapping.
<i>defaultUL-BH-RLC-Channel</i> This field is used for IAB-nodes to configure the default uplink BH RLC channel, which is used by IAB-node during IAB-node bootstrapping, migration, IAB-MT RRC resume and IAB-MT RRC re-establishment for <i>F1-C</i> and <i>non-F1</i> traffic. The <i>defaultUL-BH-RLC-Channel</i> can be (re-)configured when IAB-node IP address for <i>F1-C</i> related traffic changes, and the new IP address is anchored at a different IAB-donor-DU. This field is mandatory for IAB-node bootstrapping. If the IAB-MT is operating in EN-DC, the default uplink BH RLC channel is referring to an RLC channel on the SCG; Otherwise, it is referring to an RLC channel either on the MCG or on the SCG depending on whether the MN or the SN configures this field.
<i>flowControlFeedbackType</i> This field is only used for IAB-node that support hop-by-hop flow control to configure the type of flow control feedback. Value <i>perBH-RLC-Channel</i> indicates that the IAB-node shall provide flow control feedback per BH RLC channel, value <i>perRoutingID</i> indicates that the IAB-node shall provide flow control feedback per routing ID, and value <i>both</i> indicates that the IAB-node shall provide flow control feedback both per BH RLC channel and per routing ID.

fullConfig
Indicates that the full configuration option is applicable for the <i>RRCReconfiguration</i> message for intra-system intra-RAT HO. For inter-RAT HO from E-UTRA to NR, <i>fullConfig</i> indicates whether or not delta signalling of SDAP/PDCP from source RAT is applicable. This field is absent if any DAPS bearer is configured or when the <i>RRCReconfiguration</i> message is transmitted on SRB3, and in an <i>RRCReconfiguration</i> message for SCG contained in another <i>RRCReconfiguration</i> message (or <i>RRCConnectionReconfiguration</i> message, see TS 36.331 [10]) transmitted on SRB1.
iab-IP-Address
This field is used to provide the IP address information for IAB-node.
iab-IP-AddressIndex
This field is used to identify a configuration of an IP address.
iab-IP-AddressToAddModList
List of IP addresses allocated for IAB-node to be added and modified.
iab-IP-AddressToReleaseList
List of IP address allocated for IAB-node to be released.
iab-IP-Usage
This field is used to indicate the usage of the assigned IP address. If this field is not configured, the assigned IP address is used for all traffic.
iab-donor-DU-BAP-Address
This field is used to indicate the BAP address of the IAB-donor-DU where the IP address is anchored.
keySetChangeIndicator
Indicates whether UE shall derive a new K_{gNB} . If <i>reconfigurationWithSync</i> is included, value <i>true</i> indicates that a K_{gNB} key is derived from a K_{AMF} key taken into use through the latest successful NAS SMC procedure, or N2 handover procedure with K_{AMF} change, as described in TS 33.501 [11] for K_{gNB} re-keying. Value <i>false</i> indicates that the new K_{gNB} key is obtained from the current K_{gNB} key or from the NH as described in TS 33.501 [11].
ltm-Config
The network does not configure this field in an <i>RRCReconfiguration</i> message within an <i>LTM-Config</i> IE and <i>ConditionalReconfiguration</i> IE.
masterCellGroup
Configuration of master cell group.
mrhc-ReleaseAndAdd
This field indicates that the current SCG configuration is released and a new SCG is added at the same time.
mrhc-SecondaryCellGroup
Includes an RRC message for SCG configuration in NR-DC or NE-DC. For NR-DC (nr-SCG), <i>mrhc-SecondaryCellGroup</i> contains the <i>RRCReconfiguration</i> message as generated (entirely) by SN gNB. In this version of the specification, the RRC message can only include fields <i>secondaryCellGroup</i> , <i>otherConfig</i> , <i>conditionalReconfiguration</i> , <i>ltm-Config</i> , <i>measConfig</i> , <i>bap-Config</i> , <i>IAB-IP-AddressConfigurationList</i> and <i>appLayerMeasConfig</i> . For NE-DC (eutra-SCG), <i>mrhc-SecondaryCellGroup</i> includes the E-UTRA <i>RRCConnectionReconfiguration</i> message as specified in TS 36.331 [10]. In this version of the specification, the E-UTRA RRC message can only include the field <i>scg-Configuration</i> .
mrhc-SecondaryCellGroupConfig
This field is used to configure and release an SCG in NR-DC and NE-DC. In an <i>RRCReconfiguration</i> message within an <i>LTM-Config</i> IE associated with the MCG, if this field is present its value can only be set to <i>release</i> .
musim-GapConfig
Indicates the MUSIM gap configuration and controls setup/release of MUSIM gaps. In this version of the specification, the network does not configure MUSIM gap together preconfigured measurement gap for positioning. For the UE supporting <i>musim-GapPriorityPreference</i> , the network can configure MUSIM gap together with concurrent measurement gap. Otherwise, the network does not configure MUSIM gap together with concurrent measurement gap.
nas-Container
This field is used to transfer UE specific NAS layer information between the network and the UE. The RRC layer is transparent for this field, although it affects activation of AS security after inter-system handover to NR. The content is defined in TS 24.501 [23].
needForGapsConfigNR
Configuration for the UE to report measurement gap requirement information of NR target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message.

needForGapNCSG-ConfigEUTRA
Configuration for the UE to report measurement gap and NCSG requirement information of E-UTRA target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message.
needForGapNCSG-ConfigNR
Configuration for the UE to report measurement gap and NCSG requirement information of NR target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message.
needForInterruptionConfigNR
Indicates whether the UE shall report interruption requirement information of NR target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message. The network sets this field to <i>enabled</i> only if the <i>needForGapsConfigNR</i> is configured. The network sets this field to <i>disabled</i> if the <i>needForGapsConfigNR</i> is released.
nextHopChainingCount
Parameter NCC: See TS 33.501 [11]
onDemandSIB-Request
Indicates that the UE is allowed to request SIB(s) on-demand while in RRC_CONNECTED according to clause 5.2.2.3.5.
onDemandSIB-RequestProhibitTimer
Prohibit timer for requesting SIB(s) on-demand while in RRC_CONNECTED according to clause 5.2.2.3.5. Value in seconds. Value s0 means prohibit timer is set to 0 seconds, value s0dot5 means prohibit timer is set to 0.5 seconds, value s1 means prohibit timer is set to 1 second and so on.
otherConfig
Contains configuration related to other configurations. When configured for the SCG, only fields <i>drx-PreferenceConfig</i> , <i>maxBW-PreferenceConfig</i> , <i>maxBW-PreferenceConfigFR2-2</i> , <i>maxCC-PreferenceConfig</i> , <i>maxMIMO-LayerPreferenceConfig</i> , <i>maxMIMO-LayerPreferenceConfigFR2-2</i> , <i>minSchedulingOffsetPreferenceConfig</i> , <i>minSchedulingOffsetPreferenceConfigExt</i> , <i>rlm-RelaxationReportingConfig</i> , <i>bfd-RelaxationReportingConfig</i> , <i>btNameList</i> , <i>wlanNameList</i> , <i>sensorNameList</i> , <i>obtainCommonLocation</i> , <i>idc-AssistanceConfig</i> , <i>multiRx-PreferenceReportingConfigFR2</i> , <i>ul-TrafficInfoReportingConfig</i> , <i>n3c-RelayUE-InfoReportConfig</i> , <i>successPSCell-Config</i> and <i>sn-InitiatedPSCellChange</i> can be included.
radioBearerConfig
Configuration of Radio Bearers (DRBs, SRBs, multicast MRBs) including SDAP/PDCP. In (NG)EN-DC this field may only be present if the <i>RRCReconfiguration</i> is transmitted over SRB3. SRB4 should not be configured if <i>sl-L2RemoteUE-Config-r17</i> is configured or not released.
radioBearerConfig2
Configuration of Radio Bearers (DRBs, SRBs) including SDAP/PDCP. This field can only be used if the UE supports NR-DC or NE-DC.
scg-State
Indicates that the SCG is in deactivated state. This field is not used
- in an <i>RRCReconfiguration</i> message received: - within <i>mrdc-SecondaryCellGroup</i>, or - in an E-UTRA <i>RRCConnectionReconfiguration</i> message, or - in an E-UTRA <i>RRCConnectionResume</i> message or - in an <i>RRCReconfiguration</i> message received via SRB3, except if the <i>RRCReconfiguration</i> message is included in <i>DLInformationTransferMRDC</i>. The field is absent if CPA, CPC, or subsequent CPAC is configured for the UE, or if the <i>RRCReconfiguration</i> message is contained in <i>CondRRCReconfig</i>, or PSCell is configured with <i>tag2</i>, or if the <i>RRCReconfiguration</i> message is included within an <i>LTM-Config</i> IE.
sl-L2RelayUE-Config
Contains L2 U2N relay operation related configurations used by a UE acting as or to be acting as a L2 U2N Relay UE or L2 U2U relay operation related configuration used by a UE acting as a L2 U2U Relay UE. In case of L2 U2N relay operation, the field is absent if <i>conditionalReconfiguration</i> is configured for CHO.
sl-L2RemoteUE-Config
Contains L2 U2N relay operation related configurations used by a UE acting as or to be acting as a L2 U2N Remote UE or L2 U2U relay operation related configuration used by a UE acting as a L2 U2U Remote UE. In case of L2 U2N relay operation, the field is absent if <i>conditionalReconfiguration</i> is configured for CHO, or if <i>appLayerMeasConfig</i> or SRB4 is configured/not released.
secondaryCellGroup
Configuration of secondary cell group ((NG)EN-DC or NR-DC).

sk-Counter
A counter used upon initial configuration of S-K _{gNB} or S-K _{eNB} , as well as upon refresh of S-K _{gNB} or S-K _{eNB} . This field is always included either upon initial configuration of an NR SCG or upon configuration of the first RB with <i>keyToUse</i> set to <i>secondary</i> , whichever happens first. This field is absent if there is neither any NR SCG nor any RB with <i>keyToUse</i> set to <i>secondary</i> , or if the <i>RRCReconfiguration</i> message is contained in <i>condRRCReconfig</i> for subsequent CPAC.
sl-ConfigDedicatedNR
This field is used to provide the dedicated configurations for NR sidelink communication/discovery/positioning.
sl-ConfigDedicatedEUTRA-Info
This field includes the E-UTRA <i>RRCConnectionReconfiguration</i> as specified in TS 36.331 [10]. In this version of the specification, the E-UTRA <i>RRCConnectionReconfiguration</i> can only include sidelink related fields for V2X sidelink communication, i.e. <i>sl-V2X-ConfigDedicated</i> , <i>sl-V2X-SPS-Config</i> , <i>measConfig</i> and/or <i>otherConfig</i> .
sl-TimeOffsetEUTRA
This field indicates the possible time offset to (de)activation of V2X sidelink transmission after receiving DCI format 3_1 used for scheduling V2X sidelink communication. Value <i>ms0dpt75</i> corresponds to 0.75ms, <i>ms1</i> corresponds to 1ms and so on. The network includes this field only when <i>sl-ConfigDedicatedEUTRA</i> is configured.
srs-PosResourceSetAggBW-CombinationList
This field indicates the SRS resource sets across two or three carriers which are linked for SRS bandwidth aggregation in RRC_CONNECTED state as defined in clause 6.2.1.4 of TS 38.214 [19].
targetCellSMTC-SCG
The SSB periodicity/offset/duration configuration of target cell for NR PSCell addition and SN change. When UE receives this field, UE applies the configuration based on the timing reference of NR PCell for PSCell addition and PSCell change for the case of no reconfiguration with sync of MCG, and UE applies the configuration based on the timing reference of target NR PCell for the case of reconfiguration with sync of MCG. If both this field and the <i>smtc</i> in <i>secondaryCellGroup</i> -> <i>SpCellConfig</i> -> <i>reconfigurationWithSync</i> are absent, the UE uses the SMTC in the <i>measObjectNR</i> having the same SSB frequency and subcarrier spacing, as configured before the reception of the RRC message.
t316
Indicates the value for timer T316 as described in clause 7.1. Value <i>ms50</i> corresponds to 50 ms, value <i>ms100</i> corresponds to 100 ms and so on. This field can be configured only if the UE is configured with split SRB1 or SRB3.
ue-TxTEG-RequestUL-TDOA-Config
Configures the periodicity of UE reporting for the association between Tx TEG and SRS Positioning resources. When configured with <i>oneShot</i> UE reports the association only one time. When configured with <i>periodicReporting</i> UE reports the association periodically and the <i>periodicReporting</i> indicates the periodicity. Value <i>ms160</i> corresponds to 160ms, value <i>ms320</i> corresponds to 320ms and so on.
ul-GapFR2-Config
Indicates the FR2 UL gap configuration to UE. In EN-DC and NGEN-DC, the SN decides and configures the FR2 UL gap pattern. In NE-DC, the MN decides and configures the FR2 UL gap pattern. In NR-DC without FR2-FR2 band combination, the network entity which is configured with FR2 serving cell(s) decides and configures the FR2 UL gap pattern.

Conditional Presence	Explanation
<i>nonHO</i>	The field is absent in case of reconfiguration with sync within NR or to NR; otherwise it is optionally present, need N.
<i>securityNASC</i>	This field is mandatory present in case of inter system handover. Otherwise the field is optionally present, need N.
<i>MasterKeyChange</i>	This field is mandatory present in case <i>masterCellGroup</i> includes <i>ReconfigurationWithSync</i> and <i>RadioBearerConfig</i> includes <i>SecurityConfig</i> with <i>SecurityAlgorithmConfig</i> , indicating a change of the AS security algorithms associated to the master key. If <i>ReconfigurationWithSync</i> is included for other cases, this field is optionally present, need N. If <i>ReconfigurationWithSync</i> is part of an <i>RRCReconfiguration</i> message within an <i>LTM-Config</i> IE associated with the MCG, the field is absent. Otherwise the field is absent.
<i>FullConfig</i>	The field is mandatory present in case of inter-system handover from E-UTRA/EPC to NR. It is optionally present, Need N, during a reconfiguration with sync which is not related to an LTM cell switch or subsequent CPAC, and also in first reconfiguration after reestablishment; or for intra-system handover from E-UTRA/5GC to NR. It is absent otherwise.
SCG	The field is mandatory present in: - an <i>RRCReconfiguration</i> message contained in an <i>RRCResume</i> message (or in an <i>RRCConnectionResume</i> message, see TS 36.331 [10]), - an <i>RRCReconfiguration</i> message contained in an <i>RRCConnectionReconfiguration</i> message, see TS 36.331 [10], which is contained in <i>DLInformationTransferMRDC</i> transmitted on SRB3 (as a response to <i>ULInformationTransferMRDC</i> including an <i>MCGFailureInformation</i>). The field is optional present, Need M, in: - an <i>RRCReconfiguration</i> message transmitted on SRB3, - an <i>RRCReconfiguration</i> message contained in another <i>RRCReconfiguration</i> message (or in an <i>RRCConnectionReconfiguration</i> message, see TS 36.331 [10]) transmitted on SRB1 - an <i>RRCReconfiguration</i> message contained in another <i>RRCReconfiguration</i> message which is contained in <i>DLInformationTransferMRDC</i> transmitted on SRB3 (as a response to <i>ULInformationTransferMRDC</i> including an <i>MCGFailureInformation</i>). Otherwise, the field is absent.
<i>PagingRelay</i>	For L2 U2N Relay UE, the field is optionally present, Need N. Otherwise, it is absent.

– *RRCReconfigurationComplete*

The *RRCReconfigurationComplete* message is used to confirm the successful completion of an RRC connection reconfiguration.

Signalling radio bearer: SRB1 or SRB3

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

RRCReconfigurationComplete message

```
-- ASN1START
-- TAG-RRCRECONFIGURATIONCOMPLETE-START
```

```
RRCReconfigurationComplete ::=
    rrc-TransactionIdentifier
```

SEQUENCE {
 RRC-TransactionIdentifier,

criticalExtensions rrcReconfigurationComplete criticalExtensionsFuture }	CHOICE { RRCReconfigurationComplete-IEs, SEQUENCE {}	
RRCReconfigurationComplete-IEs ::= lateNonCriticalExtension nonCriticalExtension }	SEQUENCE { OCTET STRING RRCReconfigurationComplete-v1530-IEs	OPTIONAL, OPTIONAL
RRCReconfigurationComplete-v1530-IEs ::= uplinkTxDirectCurrentList nonCriticalExtension }	SEQUENCE { UplinkTxDirectCurrentList RRCReconfigurationComplete-v1560-IEs	OPTIONAL, OPTIONAL
RRCReconfigurationComplete-v1560-IEs ::= scg-Response nr-SCG-Response eutra-SCG-Response } nonCriticalExtension }	SEQUENCE { CHOICE { OCTET STRING (CONTAINING RRCReconfigurationComplete), OCTET STRING RRCReconfigurationComplete-v1610-IEs	OPTIONAL, OPTIONAL
RRCReconfigurationComplete-v1610-IEs ::= ue-MeasurementsAvailable-r16 needForGapsInfoNR-r16 nonCriticalExtension }	SEQUENCE { UE-MeasurementsAvailable-r16 NeedForGapsInfoNR-r16 RRCReconfigurationComplete-v1640-IEs	OPTIONAL, OPTIONAL, OPTIONAL
RRCReconfigurationComplete-v1640-IEs ::= uplinkTxDirectCurrentTwoCarrierList-r16 nonCriticalExtension }	SEQUENCE { UplinkTxDirectCurrentTwoCarrierList-r16 RRCReconfigurationComplete-v1700-IEs	OPTIONAL, OPTIONAL
RRCReconfigurationComplete-v1700-IEs ::= needForGapNCSG-InfoNR-r17 needForGapNCSG-InfoEUTRA-r17 selectedCondRRCReconfig-r17 nonCriticalExtension }	SEQUENCE { NeedForGapNCSG-InfoNR-r17 NeedForGapNCSG-InfoEUTRA-r17 CondReconfigId-r16 RRCReconfigurationComplete-v1720-IEs	OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL
RRCReconfigurationComplete-v1720-IEs ::= uplinkTxDirectCurrentMoreCarrierList-r17 nonCriticalExtension }	SEQUENCE { UplinkTxDirectCurrentMoreCarrierList-r17 RRCReconfigurationComplete-v1800-IEs	OPTIONAL, OPTIONAL
RRCReconfigurationComplete-v1800-IEs ::= needForInterruptionInfoNR-r18 flightPathInfoAvailable-r18 selectedPSCellForCHO-WithSCG-r18 selectedSK-Counter-r18 measConfigReportAppLayerAvailable-r18 appliedLTM-CandidateId-r18	SEQUENCE { NeedForInterruptionInfoNR-r18 ENUMERATED {true} SelectedPSCellForCHO-WithSCG-r18 SK-Counter ENUMERATED {true} LTM-CandidateId-r18	OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL


```

    nonCriticalExtension
  }
-- TAG-RRCRECONFIGURATIONCOMPLETE-STOP
-- ASN1STOP

```

SEQUENCE {}

OPTIONAL

<i>RRCReconfigurationComplete-IEs field descriptions</i>
<i>measConfigReportAppLayerAvailable</i> Indication that the UE has at least one application layer measurement configuration with <i>appLayerIdleInactiveConfig</i> configured.
<i>needForGapsInfoNR</i> This field is used to indicate the measurement gap requirement information of the UE for NR target bands.
<i>needForGapNCSG-InfoEUTRA</i> This field is used to indicate the measurement gap and NCSG requirement information of the UE for E-UTRA target bands.
<i>needForGapNCSG-InfoNR</i> This field is used to indicate the measurement gap and NCSG requirement information of the UE for NR target bands.
<i>needForInterruptionInfoNR</i> This field indicates whether interruption is needed while performing measurement on NR target bands without measurement gap.
<i>scg-Response</i> In case of NR-DC (<i>nr-SCG-Response</i>), this field includes the <i>RRCReconfigurationComplete</i> message. In case of NE-DC (<i>eutra-SCG-Response</i>), this field includes the E-UTRA <i>RRCConnectionReconfigurationComplete</i> message as specified in TS 36.331 [10].
<i>selectedCondRRCReconfig</i> This field indicates the ID of the selected conditional reconfiguration the UE applied upon the execution of CPA or inter-SN CPC or subsequent CPAC.
<i>selectedPSCellForCHO-WithSCG</i> This field indicates the information of the selected target PSCell to target MN at execution of a conditional reconfiguration for CHO with candidate SCG(s).
<i>selectedSK-Counter</i> This field includes the selected <i>sk-counter</i> value for security key update upon the execution of subsequent CPAC.
<i>uplinkTxDirectCurrentList</i> The Tx Direct Current locations for the configured serving cells and BWPs if requested by the NW (see <i>reportUplinkTxDirectCurrent</i> in <i>CellGroupConfig</i>).
<i>uplinkTxDirectCurrentMoreCarrierList</i> The Tx Direct Current locations for the configured intra-band CA requested by <i>reportUplinkTxDirectCurrentMoreCarrier-r17</i> .
<i>uplinkTxDirectCurrentTwoCarrierList</i> The Tx Direct Current locations for the configured uplink intra-band CA with two carriers if requested by the NW (see <i>reportUplinkTxDirectCurrentTwoCarrier-r16</i> in <i>CellGroupConfig</i>).

– ***RRCReject***

The *RRCReject* message is used to reject an RRC connection establishment or an RRC connection resumption.

Signalling radio bearer: SRB0

RLC-SAP: TM

Logical channel: CCCH

Direction: Network to UE

RRCReject message

```
-- ASN1START
-- TAG-RRCREJECT-START

RRCReject ::=
    criticalExtensions
        rrcReject
        criticalExtensionsFuture
    }
SEQUENCE {
    CHOICE {
        RRCReject-IEs,
        SEQUENCE {}
    }
}

RRCReject-IEs ::=
    waitTime
    lateNonCriticalExtension
    nonCriticalExtension
SEQUENCE {
    RejectWaitTime
    OCTET STRING
    SEQUENCE{}
}
OPTIONAL, -- Need N
OPTIONAL,
OPTIONAL

-- TAG-RRCREJECT-STOP
-- ASN1STOP
```

<i>RRCReject-IEs</i> field descriptions
<i>waitTime</i> Wait time value in seconds. The field is always included.

— ***RRCRelease***

The *RRCRelease* message is used to command the release of an RRC connection or the suspension of the RRC connection.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

RRCRelease message

```
-- ASN1START
-- TAG-RRCRELEASE-START

RRCRelease ::=
    rrc-TransactionIdentifier
    criticalExtensions
    rrcRelease
    criticalExtensionsFuture
    }
SEQUENCE {
    RRC-TransactionIdentifier,
    CHOICE {
        RRCRelease-IEs,
        SEQUENCE {}
    }
}
```

```

}

RRCRelease-IEs ::=
    redirectedCarrierInfo
    cellReselectionPriorities
    suspendConfig
    deprioritisationReq
        deprioritisationType
        deprioritisationTimer
    }
    lateNonCriticalExtension
    nonCriticalExtension
}

RRCRelease-v1540-IEs ::=
    waitTime
    nonCriticalExtension
}

RRCRelease-v1610-IEs ::=
    voiceFallbackIndication-r16
    measIdleConfig-r16
    nonCriticalExtension
}

RRCRelease-v1650-IEs ::=
    mpsPriorityIndication-r16
    nonCriticalExtension
}

RRCRelease-v1710-IEs ::=
    noLastCellUpdate-r17
    nonCriticalExtension
}

RedirectedCarrierInfo ::=
    nr
    eutra
    ...
}

RedirectedCarrierInfo-EUTRA ::=
    eutraFrequency
    cnType
}

CarrierInfoNR ::=
    carrierFreq
    ssbSubcarrierSpacing
    smtc
    ...
}

SuspendConfig ::=

```

SEQUENCE {

 RedirectedCarrierInfo OPTIONAL, -- Need N

 CellReselectionPriorities OPTIONAL, -- Need R

 SuspendConfig OPTIONAL, -- Need R

 SEQUENCE {

 ENUMERATED {frequency, nr},

 ENUMERATED {min5, min10, min15, min30}

 }

 OCTET STRING

 RRCRelease-v1540-IEs OPTIONAL, -- Need N

 OPTIONAL

 OPTIONAL

SEQUENCE {

 RejectWaitTime OPTIONAL, -- Need N

 RRCRelease-v1610-IEs OPTIONAL

SEQUENCE {

 ENUMERATED {true} OPTIONAL, -- Need N

 SetupRelease {MeasIdleConfigDedicated-r16} OPTIONAL, -- Need M

 RRCRelease-v1650-IEs OPTIONAL

SEQUENCE {

 ENUMERATED {true} OPTIONAL, -- Cond Redirection2

 RRCRelease-v1710-IEs OPTIONAL

SEQUENCE {

 ENUMERATED {true} OPTIONAL, -- Need S

 SEQUENCE {} OPTIONAL

CHOICE {

 CarrierInfoNR,

 RedirectedCarrierInfo-EUTRA,

SEQUENCE {

 ARFCN-ValueEUTRA,

 ENUMERATED {epc, fiveGC} OPTIONAL -- Need N

SEQUENCE {

 ARFCN-ValueNR,

 SubcarrierSpacing,

 SSB-MTC OPTIONAL, -- Need S

SEQUENCE {

```

fullI-RNTI          I-RNTI-Value,
shortI-RNTI         ShortI-RNTI-Value,
ran-PagingCycle     PagingCycle,
ran-NotificationAreaInfo RAN-NotificationAreaInfo
t380                PeriodicRNAU-TimerValue
nextHopChainingCount NextHopChainingCount,
...,
[[
sl-UEIdentityRemote-r17 RNTI-Value
sdt-Config-r17          SetupRelease { SDT-Config-r17 }
srs-PosRRC-Inactive-r17 SetupRelease { SRS-PosRRC-Inactive-r17 }
ran-ExtendedPagingCycle-r17 ExtendedPagingCycle-r17
]],
[[
ncd-SSB-RedCapInitialBWP-SDT-r17 SetupRelease {NonCellDefiningSSB-r17}
]],
[[
resumeIndication-r18          ENUMERATED {true}
srs-PosRRC-InactiveEnhanced-r18 SetupRelease { SRS-PosRRC-InactiveEnhanced-r18 }
ran-ExtendedPagingCycleConfig-r18 ExtendedPagingCycleConfig-r18
multicastConfigInactive-r18   SetupRelease { MulticastConfigInactive-r18 }
]]
}

PeriodicRNAU-TimerValue ::= ENUMERATED { min5, min10, min20, min30, min60, min120, min360, min720}

CellReselectionPriorities ::= SEQUENCE {
    freqPriorityListEUTRA FreqPriorityListEUTRA
    freqPriorityListNR    FreqPriorityListNR
    t320                  ENUMERATED {min5, min10, min20, min30, min60, min120, min180, spare1}
    ...,
    [[
    freqPriorityListDedicatedSlicing-r17 FreqPriorityListDedicatedSlicing-r17
    ]]
}

PagingCycle ::= ENUMERATED {rf32, rf64, rf128, rf256}

FreqPriorityListEUTRA ::= SEQUENCE (SIZE (1..maxFreq)) OF FreqPriorityEUTRA

FreqPriorityListNR ::= SEQUENCE (SIZE (1..maxFreq)) OF FreqPriorityNR

FreqPriorityEUTRA ::= SEQUENCE {
    carrierFreq ARFCN-ValueEUTRA,
    cellReselectionPriority CellReselectionPriority,
    cellReselectionSubPriority CellReselectionSubPriority
}

FreqPriorityNR ::= SEQUENCE {
    carrierFreq ARFCN-ValueNR,
    cellReselectionPriority CellReselectionPriority,
    cellReselectionSubPriority CellReselectionSubPriority
}

```

OPTIONAL, -- Need M
OPTIONAL, -- Need R

OPTIONAL, -- Cond L2RemoteUE
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Cond RANPaging

OPTIONAL -- Need M

OPTIONAL, -- Need N
OPTIONAL, -- Need M
OPTIONAL, -- Cond RANPaging
OPTIONAL -- Need M

OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need R

OPTIONAL -- Need M

OPTIONAL -- Need R

OPTIONAL -- Need R

```

RAN-NotificationAreaInfo ::= CHOICE {
    cellList
    ran-AreaConfigList
    ...
}

PLMN-RAN-AreaCellList ::= SEQUENCE (SIZE (1.. maxPLMNIdentities)) OF PLMN-RAN-AreaCell

PLMN-RAN-AreaCell ::= SEQUENCE {
    plmn-Identity
    ran-AreaCells
    ...
}

PLMN-RAN-AreaConfigList ::= SEQUENCE (SIZE (1..maxPLMNIdentities)) OF PLMN-RAN-AreaConfig

PLMN-RAN-AreaConfig ::= SEQUENCE {
    plmn-Identity
    ran-Area
    ...
}

RAN-AreaConfig ::= SEQUENCE {
    trackingAreaCode
    ran-AreaCodeList
    ...
}

SDT-Config-r17 ::= SEQUENCE {
    sdt-DRB-List-r17
    sdt-SRB2-Indication-r17
    sdt-MAC-PHY-CG-Config-r17
    sdt-DRB-ContinueROHC-r17
    ...
}

SDT-CG-Config-r17 ::= OCTET STRING (CONTAINING SDT-MAC-PHY-CG-Config-r17)

SDT-MAC-PHY-CG-Config-r17 ::= SEQUENCE {
    -- CG-SDT specific configuration
    cg-SDT-ConfigLCH-RestrictionToAddModList-r17 SEQUENCE (SIZE(1..maxLC-ID)) OF CG-SDT-ConfigLCH-Restriction-r17 OPTIONAL, -- Need N
    cg-SDT-ConfigLCH-RestrictionToReleaseList-r17 SEQUENCE (SIZE(1..maxLC-ID)) OF LogicalChannelIdentity OPTIONAL, -- Need N
    cg-SDT-ConfigInitialBWP-NUL-r17 SetupRelease {BWP-UplinkDedicatedSDT-r17} OPTIONAL, -- Need M
    cg-SDT-ConfigInitialBWP-SUL-r17 SetupRelease {BWP-UplinkDedicatedSDT-r17} OPTIONAL, -- Need M
    cg-SDT-ConfigInitialBWP-DL-r17 BWP-DownlinkDedicatedSDT-r17 OPTIONAL, -- Need M
    cg-SDT-TimeAlignmentTimer-r17 TimeAlignmentTimer OPTIONAL, -- Need M
    cg-SDT-RSRP-ThresholdSSB-r17 RSRP-Range OPTIONAL, -- Need M
    cg-SDT-TA-ValidationConfig-r17 SetupRelease { CG-SDT-TA-ValidationConfig-r17 } OPTIONAL, -- Need M
    cg-SDT-CS-RNTI-r17 RNTI-Value OPTIONAL, -- Need M
    ...
    [[
    cg-SDT-ConfigLCH-RestrictionToAddModListExt-v1800 SEQUENCE (SIZE(1..maxLC-ID)) OF CG-SDT-ConfigLCH-RestrictionExt-v1800
    OPTIONAL, -- Need N

    cg-MT-SDT-MaxDurationToNextCG-Occasion-r18 ENUMERATED {
        ms10, ms100, sec1, sec10, sec60, sec100, sec300, sec600,
        sec1200, sec1800, sec3600,
        spare5, spare4, spare3, spare2, spare1}
    OPTIONAL -- Need R
    ]]
}

```

```

}

CG-SDT-TA-ValidationConfig-r17 ::= SEQUENCE {
    cg-SDT-RSRP-ChangeThreshold-r17    ENUMERATED { dB2, dB4, dB6, dB8, dB10, dB14, dB18, dB22,
                                                dB26, dB30, dB34, spare5, spare4, spare3, spare2, spare1}
}

BWP-DownlinkDedicatedSDT-r17 ::= SEQUENCE {
    pdccch-Config-r17                  SetupRelease { PDCCH-Config }          OPTIONAL, -- Need M
    pdsch-Config-r17                   SetupRelease { PDSCH-Config }          OPTIONAL, -- Need M
    ...
}

BWP-UplinkDedicatedSDT-r17 ::= SEQUENCE {
    pusch-Config-r17                   SetupRelease { PUSCH-Config }          OPTIONAL, -- Need M
    configuredGrantConfigToAddModList-r17 ConfiguredGrantConfigToAddModList-r16 OPTIONAL, -- Need N
    configuredGrantConfigToReleaseList-r17 ConfiguredGrantConfigToReleaseList-r16 OPTIONAL, -- Need N
    ...
}

CG-SDT-ConfigLCH-Restriction-r17 ::= SEQUENCE {
    logicalChannelIdentity-r17          LogicalChannelIdentity,
    configuredGrantType1Allowed-r17     ENUMERATED {true}                  OPTIONAL, -- Need R
    allowedCG-List-r17                  SEQUENCE (SIZE (0.. maxNrofConfiguredGrantConfigMAC-1-r16)) OF ConfiguredGrantConfigIndexMAC-r16 OPTIONAL, -- Need R
}

CG-SDT-ConfigLCH-RestrictionExt-v1800 ::= SEQUENCE {
    cg-SDT-MaxDurationToNextCG-Occasion-r18 ENUMERATED {
                                                ms10, ms100, sec1, sec10, sec60, sec100, sec300, sec600,
                                                sec1200, sec1800, sec3600,
                                                spare5, spare4, spare3, spare2, spare1}
                                                OPTIONAL -- Need R
}

SRS-PosRRC-Inactive-r17 ::= OCTET STRING (CONTAINING SRS-PosRRC-InactiveConfig-r17)

SRS-PosRRC-InactiveConfig-r17 ::= SEQUENCE {
    srs-PosConfigNUL-r17                SRS-PosConfig-r17                  OPTIONAL, -- Need R
    srs-PosConfigSUL-r17                SRS-PosConfig-r17                  OPTIONAL, -- Need R
    bwp-NUL-r17                         BWP                                OPTIONAL, -- Need S
    bwp-SUL-r17                         BWP                                OPTIONAL, -- Need S
    inactivePosSRS-TimeAlignmentTimer-r17 TimeAlignmentTimer              OPTIONAL, -- Need M
    inactivePosSRS-RSRP-ChangeThreshold-r17 RSRP-ChangeThreshold-r17      OPTIONAL, -- Need M
}

RSRP-ChangeThreshold-r17 ::= ENUMERATED {dB4, dB6, dB8, dB10, dB14, dB18, dB22, dB26, dB30, dB34, spare6, spare5, spare4, spare3, spare2, spare1}

SRS-PosConfig-r17 ::= SEQUENCE {
    srs-PosResourceSetToReleaseList-r17 SEQUENCE (SIZE(1..maxNrofSRS-PosResourceSets-r16)) OF SRS-PosResourceSetId-r16 OPTIONAL, -- Need N
    srs-PosResourceSetToAddModList-r17 SEQUENCE (SIZE(1..maxNrofSRS-PosResourceSets-r16)) OF SRS-PosResourceSet-r16 OPTIONAL, -- Need N
    srs-PosResourceToReleaseList-r17 SEQUENCE (SIZE(1..maxNrofSRS-PosResources-r16)) OF SRS-PosResourceId-r16 OPTIONAL, -- Need N
    srs-PosResourceToAddModList-r17 SEQUENCE (SIZE(1..maxNrofSRS-PosResources-r16)) OF SRS-PosResource-r16 OPTIONAL, -- Need N
}

```

```

SRS-PosRRC-InactiveEnhanced-r18 ::= OCTET STRING (CONTAINING SRS-PosRRC-InactiveEnhancedConfig-r18)

SRS-PosRRC-InactiveEnhancedConfig-r18 ::= SEQUENCE {
    srs-PosRRC-InactiveAggBW-ConfigList-r18      SetupRelease { SRS-PosRRC-InactiveAggBW-ConfigList-r18 } OPTIONAL, -- Need M
    srs-PosTx-Hopping-r18                        SetupRelease { SRS-PosTx-Hopping-r18 } OPTIONAL, -- Need M
    srs-PosRRC-InactiveValidityAreaPreConfigList-r18 SetupRelease { SRS-PosRRC-InactiveValidityAreaPreConfigList-r18 } OPTIONAL, -- Need M
    srs-PosRRC-InactiveValidityAreaNonPreConfig-r18 SetupRelease { SRS-PosRRC-InactiveValidityAreaConfig-r18 } OPTIONAL, -- Need M
    ...,
    [[
        srs-PosRRC-InactiveAggBW-AdditionalCarriers-r18 SetupRelease {SRS-PosRRC-InactiveAggBW-AdditionalCarriers-r18 } OPTIONAL -- Need M
    ]]
}

SRS-PosRRC-InactiveAggBW-AdditionalCarriers-r18 ::= SEQUENCE{
    aggregatedPosSRS-CarrierList-r18      SEQUENCE (SIZE(1..maxNrOfLinkedSRS-CarriersInactive-1-r18)) OF SRS-PosConfigPerULCarrier-r18
OPTIONAL, -- Need R
    ...
}

SRS-PosConfigPerULCarrier-r18 ::= SEQUENCE{
    freqInfo-r18                ARFCN-ValueNR,
    srs-PosConfig-r18            SRS-PosConfig-r17,
    scs-SpecificCarrier-r18      SCS-SpecificCarrier OPTIONAL, -- Need R
    bwp-r18                      BWP OPTIONAL, -- Need R
    ...
}

SRS-PosRRC-InactiveValidityAreaPreConfigList-r18 ::= SEQUENCE (SIZE(1..maxNrOfVA-r18)) OF SRS-PosRRC-InactiveValidityAreaConfig-r18

SRS-PosRRC-InactiveValidityAreaConfig-r18 ::= SEQUENCE {
    srs-PosConfigValidityArea-r18      SEQUENCE (SIZE(1..maxNrOfCellsInVA-r18)) OF CellIdentity,
    srs-PosConfigNUL-r18                SRS-PosConfig-r17 OPTIONAL, -- Need R
    srs-PosConfigSUL-r18                SRS-PosConfig-r17 OPTIONAL, -- Need R
    bwp-NUL-r18                        BWP OPTIONAL, -- Need S
    bwp-SUL-r18                        BWP OPTIONAL, -- Need S
    areaValidityTA-Config-r18           AreaValidityTA-Config-r18 OPTIONAL, -- Need R
    ...,
    [[
        srs-PosConfigValidityAreaExt-v1830 SEQUENCE (SIZE(1..maxNrOfCellsInVA-Ext-r18)) OF CellIdentity OPTIONAL -- Need R
    ]],
    [[
        srs-PosRRC-InactiveAggBW-AdditionalCarriersPerVA-r18 SetupRelease {SRS-PosRRC-InactiveAggBW-AdditionalCarriers-r18 }
                                                                OPTIONAL, -- Need M
        srs-PosRRC-InactiveAggBW-ConfigListPerVA-r18      SetupRelease {SRS-PosRRC-InactiveAggBW-ConfigList-r18 } OPTIONAL -- Need M
    ]]
}

AreaValidityTA-Config-r18 ::= SEQUENCE {
    inactivePosSRS-ValidityAreaTAT-r18      ENUMERATED {ms1280, ms1920, ms2560, ms5120, ms10240, ms20480, ms40960, infinity},
    inactivePosSRS-ValidityAreaRSRP-r18     RSRP-ChangeThreshold-r17 OPTIONAL, -- Need R
    autonomousTA-AdjustmentEnabled-r18     ENUMERATED {true} OPTIONAL -- Need R
}

SRS-PosRRC-InactiveAggBW-ConfigList-r18 ::= SEQUENCE (SIZE(1..maxNrOfLinkedSRS-PosResSetCombInactive-r18)) OF

```

SRS-InactivePosResourceSetLinkedForAggBW-List-r18

SRS-InactivePosResourceSetLinkedForAggBW-List-r18 ::= SEQUENCE (SIZE (2..maxNrOfLinkedSRS-PosResourceSet-r18)) OF
SRS-PosResourceSetLinkedForAggBW-r18

ExtendedPagingCycle-r17 ::= ENUMERATED {rf256, rf512, rf1024, spare1}

ExtendedPagingCycleConfig-r18 ::= SEQUENCE {
 extendedPagingCycle-r18 ENUMERATED {hf2, hf4, hf8, hf16, hf32, hf64, hf128, hf256, hf512, hf1024,
 spare6, spare5, spare4, spare3, spare2, spare1},
 pagingPTWLength-r18 ENUMERATED {ms1280, ms2560, ms3840, ms5120, ms6400, ms7680, ms8960, ms10240, ms11520,
 ms12800, ms14080, ms15360, ms16640, ms17920, ms19200, ms20480, ms21760,
 ms23040, ms24320, ms25600, ms26880, ms28160, ms29440, ms30720, ms32000,
 ms33280, ms34560, ms35840, ms37120, ms38400, ms39680, ms40960}
 }

MulticastConfigInactive-r18 ::= SEQUENCE {
 inactivePTM-Config-r18 OCTET STRING (CONTAINING MBSMulticastConfiguration-r18) OPTIONAL, -- Need S
 inactiveMCCH-Config-r18 OCTET STRING (CONTAINING SystemInformation) OPTIONAL -- Need N
 }

-- TAG-RRCRELEASE-STOP
 -- ASN1STOP

<i>RRCRelease-IEs field descriptions</i>
<i>cellReselectionPriorities</i> Dedicated priorities to be used for cell reselection as specified in TS 38.304 [20]. The maximum number of NR carrier frequencies that the network can configure through <i>FreqPriorityListNR</i> and <i>FreqPriorityListDedicatedSlicing</i> together is eight. If the same frequency is configured in both <i>FreqPriorityListNR</i> and <i>FreqPriorityListDedicatedSlicing</i> , the frequency is only counted once.
<i>cnType</i> Indicate that the UE is redirected to EPC or 5GC.
<i>deprioritisationReq</i> Indicates whether the current frequency or RAT is to be de-prioritised.
<i>deprioritisationTimer</i> Indicates the value for timer T325 (see clause 5.3.8.3 and TS 38.304 [20]). Value <i>minN</i> corresponds to N minutes.
<i>srs-PosRRC-InactiveEnhanced</i> Contains the SRS for positioning configuration in RRC_INACTIVE state that is applicable for a validity area. The field also contains bandwidth aggregation (see TS 38.214 [19], clause 6.2.1.4.2) and frequency hopping configurations (see TS 38.214 [19], clause 6.2.1.4.1) for SRS for positioning in RRC_INACTIVE state.
<i>measIdleConfig</i> Indicates measurement configuration to be stored and used by the UE while in RRC_IDLE or RRC_INACTIVE.
<i>mpsPriorityIndication</i> Indicates the UE can set the establishment cause to <i>mps-PriorityAccess</i> for a new connection following a redirect to NR or set the resume cause to <i>mps-PriorityAccess</i> for a resume following a redirect to NR. If the target RAT is E-UTRA, see TS 36.331 [10]. The gNB sets the indication only for UEs authorized to receive MPS treatment as indicated by ARP and/or QoS characteristics at the gNB, and it is applicable only for this instance of release with redirection to carrier/RAT included in the <i>redirectedCarrierInfo</i> field in the <i>RRCRelease</i> message.
<i>multicastConfigInactive</i> Indicates whether the UE is configured to receive MBS multicast in RRC_INACTIVE. The presence of this field indicates the UE is configured to receive MBS multicast in RRC_INACTIVE; otherwise, the UE is not configured to receive MBS multicast in RRC_INACTIVE.
<i>noLastCellUpdate</i> Presence of the field indicates that the last used cell for PEI shall not be updated. When the field is absent, the PEI-capable UE shall update its last used cell with the current cell. The UE shall not update its last used cell with the current cell if the AS security is not activated.
<i>redirectedCarrierInfo</i> Indicates a carrier frequency (downlink for FDD) and is used to redirect the UE to an NR or an inter-RAT carrier frequency, by means of cell selection at transition to RRC_IDLE or RRC_INACTIVE as specified in TS 38.304 [20]. Based on UE capability, the network may include <i>redirectedCarrierInfo</i> in <i>RRCRelease</i> message with <i>suspendConfig</i> if this message is sent in response to an <i>RRCResumeRequest</i> or an <i>RRCResumeRequest1</i> which is triggered by the NAS layer (see 5.3.1.4 in TS 24.501 [23]).
<i>srs-PosRRC-Inactive</i> Contains the SRS for positioning configuration in RRC_INACTIVE state.
<i>suspendConfig</i> Indicates configuration for the RRC_INACTIVE state. The network does not configure <i>suspendConfig</i> when the network redirect the UE to an inter-RAT carrier frequency or if the UE is configured with a DAPS bearer.
<i>voiceFallbackIndication</i> Indicates the RRC release is triggered by EPS fallback for IMS voice as specified in TS 23.502 [43].

CarrierInfoNR field descriptions
carrierFreq Indicates the redirected NR frequency.
ssbSubcarrierSpacing Subcarrier spacing of SSB in the redirected SSB frequency. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 120 or 240 kHz FR2-2: 120, 480, or 960 kHz
smtc The SSB periodicity/offset/duration configuration for the redirected SSB frequency. It is based on timing reference of PCell. If the field is absent, the UE uses the SMTC configured in the measObjectNR having the same SSB frequency and subcarrier spacing.

RAN-NotificationAreaInfo field descriptions
cellList A list of cells configured as RAN area.
ran-AreaConfigList A list of RAN area codes or RA code(s) as RAN area.

PLMN-RAN-AreaConfig field descriptions
plmn-Identity PLMN Identity to which the cells in <i>ran-Area</i> belong. If the field is absent the UE not in SNPN access mode uses the ID of the registered PLMN. This field is not included for UE in SNPN access mode (for UE in SNPN access mode the <i>ran-Area</i> always belongs to the registered SNPN).
ran-AreaCodeList The total number of RAN-AreaCodes of all PLMNs does not exceed 32.
ran-Area Indicates whether TA code(s) or RAN area code(s) are used for the RAN notification area. The network uses only TA code(s) or both TA code(s) and RAN area code(s) to configure a UE. The total number of TACs across all PLMNs does not exceed 16.

PLMN-RAN-AreaCell field descriptions
plmn-Identity PLMN Identity to which the cells in <i>ran-AreaCells</i> belong. If the field is absent the UE not in SNPN access mode uses the ID of the registered PLMN. This field is not included for UE in SNPN access mode (for UE in SNPN access mode the <i>ran-AreaCells</i> always belongs to the registered SNPN).
ran-AreaCells The total number of cells of all PLMNs does not exceed 32.

<i>SDT-Config</i> field descriptions
<i>sdt-DRB-ContinueROHC</i> Indicates whether the PDCP entity of the radio bearers configured for SDT continues or resets the ROHC header compression protocol during PDCP re-establishment during SDT procedure, as specified in TS 38.323 [5]. Value <i>cell</i> indicates that ROHC header compression continues when the UE resumes for SDT in the same cell as the PCell when the RRCRelease message was received. Value <i>rna</i> indicates that ROHC header compression continues when the UE resumes for SDT in a cell belonging to the same RNA as the PCell where the RRCRelease message was received. If the field is absent, the UE releases any stored value for this field and the PDCP entity of the radio bearers configured for SDT always resets the ROHC header compression protocol during PDCP re-establishment when SDT procedure is initiated, as specified in TS 38.323 [5].
<i>sdt-DRB-List</i> Indicates the ID(s) of the DRB(s) that are configured for SDT. If size of the sequence is zero, then the UE assumes that none of the DRBs are configured for SDT. The network only configures MN terminated MCG bearers for SDT.
<i>sdt-SRB2-Indication</i> Indicates whether SRB2 is configured for SDT or not.

<i>SDT-MAC-PHY-CG-Config</i> field descriptions
<i>cg-MT-SDT-MaxDurationToNextCG-Occasion</i> The maximum duration until the next CG-SDT occasion as specified in TS 38.321 [3] for MT-SDT. If configured, the CG-SDT resource can only be used for the initial CG-SDT transmission if the duration between the initiation of the CG-SDT procedure and the next CG-SDT occasion is less than the value configured by this field.
<i>cg-SDT-ConfigInitialBWP-DL</i> Downlink BWP configuration for CG-SDT. If a UE is an (e)RedCap UE and if the <i>initialDownlinkBWP-RedCap</i> is configured in <i>downlinkConfigCommon</i> in <i>SIB1</i> , this field is configured for <i>initialDownlinkBWP-RedCap</i> , otherwise it is configured for <i>initialDownlinkBWP</i> .
<i>cg-SDT-ConfigInitialBWP-NUL</i> UL BWP configuration for CG-SDT on NUL carrier. If a UE is an (e)RedCap UE and if the <i>initialUplinkBWP-RedCap</i> is configured in <i>uplinkConfigCommon</i> in <i>SIB1</i> , this field is configured for <i>initialUplinkBWP-RedCap</i> , otherwise it is configured for <i>initialUplinkBWP</i> for NUL.
<i>cg-SDT-ConfigInitialBWP-SUL</i> UL BWP configuration for CG-SDT on SUL carrier configured for the <i>initialUplinkBWP</i> for SUL.
<i>cg-SDT-ConfigLCH-RestrictionToAddModList</i>, <i>cg-SDT-ConfigLCH-RestrictionToAddModListExt</i>, <i>cg-SDT-ConfigLCH-RestrictionToReleaseList</i> Lists for adding and releasing logical channel mapping restrictions for CG-SDT. If the network includes <i>cg-SDT-ConfigLCH-RestrictionToAddModListExt</i> , it includes the same number of entries, and listed in the same order, as in <i>cg-SDT-ConfigLCH-RestrictionToAddModList</i> .
<i>cg-SDT-CS-RNTI</i> The CS-RNTI value for CG-SDT as specified in TS 38.321 [3].
<i>cg-SDT-RSRP-ThresholdSSB</i> An RSRP threshold configured for SSB selection for CG-SDT as specified in TS 38.321 [3].
<i>cg-SDT-TA-ValidationConfig</i> Configuration for the RSRP based TA validation. If this field is not configured, then the UE does not perform RSRP based TA validation.
<i>cg-SDT-timeAlignmentTimer</i> TAT value for CG-SDT as specified in TS 38.321 [3]. The network always configures this field when <i>sdt-MAC-PHY-CG-Config</i> is configured. This field is associated with the PTAG indicated by <i>tag-Id</i> .

CG-SDT-ConfigLCH-Restriction field descriptions	
<i>allowedCG-List</i>	This restriction applies only when the UL grant is a configured grant for CG-SDT. If present, UL MAC SDUs from this logical channel can only be mapped to the indicated CG-SDT configured grant configuration. If the size of the sequence is zero, then UL MAC SDUs from this logical channel cannot be mapped to any CG-SDT configured grant configurations. If the field is not present, UL MAC SDUs from this logical channel can be mapped to any CG-SDT configured grant configurations. If the field <i>configuredGrantType1Allowed</i> is present, only those CG-SDT configured grant type 1 configurations indicated in this sequence are allowed for use by this logical channel; otherwise, this sequence shall not include any CG-SDT configured grant type 1 configuration. Corresponds to " <i>allowedCG-List</i> " as specified in TS 38.321 [3].
<i>cg-SDT-MaxDurationToNextCG-Occasion</i>	The maximum duration until the next CG-SDT occasion for the logical channel identified by the <i>logicalChannelIdentity</i> as specified in TS 38.321 [3]. If configured, the CG-SDT resource can only be used for the initial CG-SDT transmission if the duration between the initiation of the CG-SDT procedure and the next CG-SDT occasion is less than the value configured by this field as specified in TS 38.321 [3].
<i>configuredGrantType1Allowed</i>	If present, or if the capability <i>lcp-Restriction</i> as specified in TS 38.306 [26] is not supported, UL MAC SDUs from this logical channel can be transmitted on a configured grant type 1 for CG-SDT. Otherwise, UL MAC SDUs from this logical channel cannot be transmitted on a configured grant type 1 for CG-SDT. Corresponds to " <i>configuredGrantType1Allowed</i> " in TS 38.321 [3].
<i>logicalChannelIdentity</i>	ID used commonly for the MAC logical channel and for the RLC bearer associated with a <i>servedRadioBearer</i> configured for SDT.
CG-SDT-TA-ValidationConfig field descriptions	
<i>cg-SDT-RSRP-ChangeThreshold</i>	The RSRP threshold for TA validation for CG-SDT as specified in TS 38.321 [3]. Value <i>dB2</i> corresponds to 2 dB, value <i>dB4</i> corresponds to 4 dB and so on.
SRS-PosRRC-InactiveConfig field descriptions	
<i>bwp-NUL</i>	BWP configuration for SRS for Positioning during the RRC_INACTIVE state in Normal Uplink Carrier. If the field is absent UE is configured with an SRS for Positioning associated with the initial UL BWP and transmitted, during the RRC_INACTIVE state, inside the initial UL BWP with the same CP and SCS as configured for initial UL BWP.
<i>bwp-SUL</i>	BWP configuration for SRS for Positioning during the RRC_INACTIVE state in Supplementary Uplink Carrier. If the field is absent UE is configured with an SRS for Positioning associated with the initial UL BWP and transmitted, during the RRC_INACTIVE state, inside the initial UL BWP with the same CP and SCS as configured for initial UL BWP.
<i>inactivePosSRS-RSRP-ChangeThreshold</i>	RSRP threshold for the increase/decrease of RSRP for time alignment validation as specified in TS 38.321 [3].
<i>inactivePosSRS-TimeAlignmentTimer</i>	TAT value for SRS for positioning transmission during RRC_INACTIVE state as specified in TS 38.321 [3]. The network always configures this field when <i>srs-PosRRC-Inactive</i> is configured.
<i>srs-PosConfigNUL</i>	SRS for Positioning configuration in RRC_INACTIVE state in Normal Uplink Carrier.
<i>srs-PosConfigSUL</i>	SRS for Positioning configuration in RRC_INACTIVE state in Supplementary Uplink Carrier.

SRS-PosRRC-InactiveEnhancedConfig field descriptions
srs-PosRRC-InactiveAggBW-ConfigList SRS for positioning configuration with additional one or two carrier(s) configuration where the primary carrier is provided by <i>srs-PosRRC-Inactive-r17</i> for bandwidth aggregation and additional carriers are provided by <i>srs-PosRRC-InactiveAggBW-AdditionalCarriers-r18</i> and to be used in RRC_INACTIVE state (see TS 38.214 [19], clause 6.2.1.4.2). This field is included only if <i>srs-PosRRC-Inactive-r17</i> and <i>srs-PosRRC-InactiveAggBW-AdditionalCarriers-r18</i> are configured.
srs-PosRRC-InactiveValidityAreaNonPreConfig Contains the SRS for positioning configuration to be applied immediately upon reception. The configuration is valid across a number of cells as indicated in <i>srs-PosConfigValidityArea</i> in RRC_INACTIVE state.
srs-PosRRC-InactiveValidityAreaPreConfigList Contains the SRS for positioning configurations to be applied when a trigger for an event is met and which is valid across a number of cells comprising a validity area during RRC_INACTIVE state. For each validity area, the UE is preconfigured with only one SRS for positioning configuration.
srs-Postx-Hopping Contains configuration related to the SRS for Positioning with frequency hopping for RRC_INACTIVE state (see TS 38.214 [19], clause 6.2.1.4.1). When this field is present and SP positioning SRS is configured, other positioning SRS resource sets configured under <i>RRCRelease</i> message with <i>suspendConfig</i> cannot be configured as <i>semi-persistent</i>.
srs-PosRRC-InactiveAggBW-AdditionalCarriers Additional carriers of Positioning SRS resource for carrier aggregation for positioning SRS transmission without validity area in RRC_INACTIVE.
SRS-PosRRC-InactiveValidityAreaConfig field descriptions
autonomousTA-AdjustmentEnabled This field indicates that UE may adjust the TA value and stored RSRP autonomously after cell reselection within a validity area, if configured.
bwp-NUL BWP configuration for SRS for Positioning during the RRC_INACTIVE state in Normal Uplink Carrier. If the field is absent UE is configured with an SRS for Positioning associated with the initial UL BWP and transmitted, during the RRC_INACTIVE state, inside the initial UL BWP with the same CP and SCS as configured for initial UL BWP.
bwp-SUL BWP configuration for SRS for Positioning during the RRC_INACTIVE state in Supplementary Uplink Carrier. If the field is absent UE is configured with an SRS for Positioning associated with the initial UL BWP and transmitted, during the RRC_INACTIVE state, inside the initial UL BWP with the same CP and SCS as configured for initial UL BWP.
inactivePosSRS-ValidityAreaRSRP RSRP threshold for the increase/decrease of RSRP for validity area time alignment validation as specified in TS 38.321 [3].
inactivePosSRS-ValidityAreaTAT Time alignment timer value for SRS for positioning transmission during RRC_INACTIVE state which is applicable in a validity area.
srs-PosConfigValidityArea, srs-PosConfigValidityAreaExt This field provides list of cells present in the validity area. The maximum number of cells in a validity area is 32 which can be provided by using these two fields <i>srs-PosConfigValidityArea</i> and <i>srs-PosConfigValidityAreaExt</i>.
srs-PosRRC-InactiveAggBW-AdditionalCarriersPerVA SRS resource configuration on additional one or two carriers in each validity area for positioning SRS transmission for carrier aggregation in RRC_INACTIVE.
srs-PosRRC-InactiveAggBW-ConfigListPerVA Linkage for positioning SRS transmission in RRC_INACTIVE in each validity area. The field is included only if <i>srs-PosRRC-InactiveAggBW-AdditionalCarriersPerVA-r18</i> is configured.
srs-PosRRC-InactiveValidityArea Provides a list of cells where SRS Positioning Configuration in RRC_INACTIVE state is valid.

<i>SuspendConfig</i> field descriptions
<i>ncd-SSB-RedCapInitialBWP-SDT</i> Indicates that the UE uses the RedCap-specific initial DL BWP associated with the NCD-SSB for SDT. The network configures this field if an (e)RedCap UE is configured with SDT in the RedCap-specific initial DL BWP not associated with CD-SSB. If configured, the NCD-SSB indicated by this field can only be used during the SDT procedure for CG-SDT or RA-SDT. In the MIB associated with this NCD-SSB, the <i>systemFrameNumber</i> field indicates the frame boundary and frame number of the NCD-SSB. The <i>subCarrierSpacingCommon</i> and <i>dmrs-TypeA-Position</i> field in the MIBs associated with CD-SSB and NCD-SSB in the same cell are configured with the same values, respectively.
<i>ran-ExtendedPagingCycle</i> The extended DRX (eDRX) cycle for RAN-initiated paging to be applied by the UE as defined in TS 38.304 [20]. Value <i>rf256</i> corresponds to 256 radio frames, value <i>rf512</i> corresponds to 512 radio frames and so on. Value of the field indicates an eDRX cycle which is shorter or equal to the IDLE mode eDRX cycle configured for the UE.
<i>ran-ExtendedPagingCycleConfig</i> The extended DRX (eDRX) configuraiton for RAN-initiated paging to be applied by the UE when the eDRX cycle for RAN-initiated paging is longer than 10.24s.
<i>ran-NotificationAreaInfo</i> Network ensures that the UE in RRC_INACTIVE always has a valid <i>ran-NotificationAreaInfo</i> .
<i>ran-PagingCycle</i> Refers to the UE specific cycle for RAN-initiated paging. Value <i>rf32</i> corresponds to 32 radio frames, value <i>rf64</i> corresponds to 64 radio frames and so on.
<i>resumeIndication</i> Indicates that the UE shall trigger the RRC connection resume procedure after receiving this <i>RRCRelease</i> message, as specified in clause 5.3.8.3. The network only includes this field in the <i>RRCRelease</i> message used to terminate an ongoing SDT procedure.
<i>sl-UEIdentityRemote</i> Indicates the C-RNTI to the L2 U2N Remote UE.
<i>t380</i> Refers to the timer that triggers the periodic RNAU procedure in UE. Value <i>min5</i> corresponds to 5 minutes, value <i>min10</i> corresponds to 10 minutes and so on.

<i>MulticastConfigInactive</i> field descriptions
<i>inactivePTM-Config</i> Indicates the multicast session(s) that can be received in RRC_INACTIVE and optionally the corresponding PTM configuration (which includes <i>mrb-ListMulticast</i> , <i>pdsch-ConfigIndex</i> , <i>mtch-SSB-MappingWindowIndex</i> , etc.) for the cell where the multicast session(s) was configured in RRC_CONNECTED. If absent, UE considers that all joined multicast sessions can be received in RRC_INACTIVE.
<i>inactiveMCCH-Config</i> Indicates multicast MCCH/MTCH configuration for MBS multicast reception in RRC_INACTIVE in the cell where the multicast session(s) was configured in RRC_CONNECTED. Only <i>SIB24</i> is allowed to be included.

<i>ExtendedPagingCycleConfig</i> field descriptions
<i>extendedPagingCycle</i> The eDRX cycle longer than 10.24 s for RAN-initiated paging to be applied by the UE. Value <i>hf2</i> corresponds to 2 hyper frames, value <i>hf4</i> corresponds to 4 hyper frames and so on. Value of the field is shorter than or equal to the IDLE mode eDRX cycle configured for the UE.
<i>pagingPTWLength</i> The length of paging transmission window for RAN-initiated paging to be applied by the UE as defined in TS 38.304 [20]. Value <i>ms1280</i> corresponds to 1280 milliseconds, value <i>ms2560</i> corresponds to 2560 milliseconds and so on.

Conditional Presence	Explanation
<i>L2RemoteUE</i>	The field is mandatory present for L2 U2N Remote UE's RNAU; otherwise it is absent.
<i>RANPaging</i>	This field is optionally present, Need R, if the UE is configured with IDLE eDRX, see TS 24.501 [23]; otherwise the field is not present.
<i>Redirection2</i>	The field is optionally present, Need R, if <i>redirectedCarrierInfo</i> is included; otherwise the field is not present.

– *RRCResume*

The *RRCResume* message is used to resume the suspended RRC connection.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

RRCResume message

```

-- ASN1START
-- TAG-RRCRESUME-START

RRCResume ::=
    rrc-TransactionIdentifier
    criticalExtensions
        rrcResume
        criticalExtensionsFuture
    }

RRCResume-IEs ::=
    radioBearerConfig
    masterCellGroup
    measConfig
    fullConfig
    lateNonCriticalExtension
    nonCriticalExtension

RRCResume-v1560-IEs ::=
    radioBearerConfig2
    sk-Counter
    nonCriticalExtension

RRCResume-v1610-IEs ::=
    idleModeMeasurementReq-r16
    restoreMCG-SCells-r16

SEQUENCE {
    RRC-TransactionIdentifier,
    CHOICE {
        RRCResume-IEs,
        SEQUENCE {}
    }
}

SEQUENCE {
    RadioBearerConfig
    OCTET STRING (CONTAINING CellGroupConfig)
    MeasConfig
    ENUMERATED {true}
    OCTET STRING
    RRCResume-v1560-IEs
}
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need N
OPTIONAL,
OPTIONAL

SEQUENCE {
    OCTET STRING (CONTAINING RadioBearerConfig)
    SK-Counter
    RRCResume-v1610-IEs
}
OPTIONAL, -- Need M
OPTIONAL, -- Need N
OPTIONAL

SEQUENCE {
    ENUMERATED {true}
    ENUMERATED {true}
}
OPTIONAL, -- Need N
OPTIONAL, -- Need N
    
```

```

    restoreSCG-r16          ENUMERATED {true}
    mrdc-SecondaryCellGroup-r16 CHOICE {
        nr-SCG-r16          OCTET STRING (CONTAINING RRCReconfiguration),
        eutra-SCG-r16       OCTET STRING
    }
    needForGapsConfigNR-r16 SetupRelease {NeedForGapsConfigNR-r16}
    nonCriticalExtension     RRCResume-v1700-IEs
}

RRCResume-v1700-IEs ::=
    sl-ConfigDedicatedNR-r17 SetupRelease {SL-ConfigDedicatedNR-r16}
    sl-L2RemoteUE-Config-r17 SetupRelease {SL-L2RemoteUE-Config-r17}
    needForGapNCSG-ConfigNR-r17 SetupRelease {NeedForGapNCSG-ConfigNR-r17}
    needForGapNCSG-ConfigEUTRA-r17 SetupRelease {NeedForGapNCSG-ConfigEUTRA-r17}
    scg-State-r17            ENUMERATED {deactivated}
    appLayerMeasConfig-r17   AppLayerMeasConfig-r17
    nonCriticalExtension     RRCResume-v1800-IEs
}

RRCResume-v1800-IEs ::=
    needForInterruptionConfigNR-r18 ENUMERATED { disabled, enabled }
    reselectionMeasurementReq-r18    ENUMERATED { true }
    validatedMeasurementsReq-r18    ENUMERATED { true }
    nonCriticalExtension             SEQUENCE {}
}

-- TAG-RRCRESUME-STOP
-- ASN1STOP

```

OPTIONAL, -- Need N

OPTIONAL, -- Cond RestoreSCG

OPTIONAL, -- Need M

OPTIONAL

OPTIONAL, -- Cond L2RemoteUE

OPTIONAL, -- Cond L2RemoteUE

OPTIONAL, -- Need M

OPTIONAL, -- Need M

OPTIONAL, -- Need S

OPTIONAL, -- Need M

OPTIONAL

OPTIONAL, -- Need M

OPTIONAL, -- Need N

OPTIONAL, -- Need N

OPTIONAL

<i>RRCResume-IEs field descriptions</i>
<i>appLayerMeasConfig</i> This field is used to configure application layer measurements. This field is absent when the UE is configured to operate with shared spectrum channel access.
<i>idleModeMeasurementReq</i> This field indicates that the UE shall report the idle/inactive measurements, if available, to the network in the <i>RRCResumeComplete</i> message
<i>masterCellGroup</i> Configuration of the master cell group.
<i>mrdc-SecondaryCellGroup</i> Includes an RRC message for SCG configuration in NR-DC or NE-DC. For NR-DC (<i>nr-SCG</i>), <i>mrdc-SecondaryCellGroup</i> contains the <i>RRCReconfiguration</i> message as generated (entirely) by SN gNB. In this version of the specification, the RRC message can only include fields <i>secondaryCellGroup</i> (with at least <i>reconfigurationWithSync</i>), <i>otherConfig</i> and <i>measConfig</i> . For NE-DC (<i>eutra-SCG</i>), <i>mrdc-SecondaryCellGroup</i> includes the E-UTRA <i>RRCConnectionReconfiguration</i> message as specified in TS 36.331 [10]. In this version of the specification, the E-UTRA RRC message only include the field <i>scg-Configuration</i> with at least <i>mobilityControlInfoSCG</i> .
<i>needForGapsConfigNR</i> Configuration for the UE to report measurement gap requirement information of NR target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message.
<i>needForGapNCSG-ConfigEUTRA</i> Configuration for the UE to report measurement gap and NCSG requirement information of E-UTRA target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message.
<i>needForGapNCSG-ConfigNR</i> Configuration for the UE to report measurement gap and NCSG requirement information of NR target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message.
<i>needForInterruptionConfigNR</i> Indicates whether the UE shall report interruption requirement information of NR target bands in the <i>RRCReconfigurationComplete</i> and <i>RRCResumeComplete</i> message. The network sets this field to <i>enabled</i> only if the <i>needForGapsConfigNR</i> is configured. The network sets this field to <i>disabled</i> if the <i>needForGapsConfigNR</i> is released.
<i>radioBearerConfig</i> Configuration of Radio Bearers (DRBs, SRBs, multicast MRBs) including SDAP/PDCP.
<i>radioBearerConfig2</i> Configuration of Radio Bearers (DRBs, SRBs) including SDAP/PDCP. This field can only be used if the UE supports NR-DC or NE-DC.
<i>reselectionMeasurementReq</i> This field indicates that the UE shall report the reselection measurements, if available, to the network in the <i>RRCResumeComplete</i> message.
<i>restoreMCG-SCells</i> Indicates that the UE shall restore the MCG SCells from the UE Inactive AS Context, if stored.
<i>restoreSCG</i> Indicates that the UE shall restore the SCG configurations from the UE Inactive AS Context, if stored.
<i>scg-State</i> Indicates that the SCG is in deactivated state.
<i>sk-Counter</i> A counter used to derive $S-K_{gNB}$ or $S-K_{eNB}$ based on the newly derived K_{gNB} during RRC Resume. The field is only included when there is one or more RB with <i>keyToUse</i> set to <i>secondary</i> or <i>mrdc-SecondaryCellGroup</i> is included.
<i>sl-ConfigDedicatedNR</i> This field is used to provide the dedicated configurations for NR sidelink communication/discovery used by L2 U2N Remote UE.
<i>sl-L2RemoteUE-Config</i> Contains L2 U2N relay operation related configurations used by L2 U2N Remote UE. The field is absent if <i>appLayerMeasConfig</i> or SRB4 is configured/not released.

Conditional Presence	Explanation
<i>L2RemoteUE</i>	The field is mandatory present for L2 U2N Remote UE; otherwise it is absent.
<i>RestoreSCG</i>	The field is mandatory present if <i>restoreSCG</i> is included. It is optionally present, Need M, otherwise.

– *RRCResumeComplete*

The *RRCResumeComplete* message is used to confirm the successful completion of an RRC connection resumption.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

RRCResumeComplete message

```
-- ASN1START
-- TAG-RRCRESUMECOMPLETE-START
```

```
RRCResumeComplete ::=
  rrc-TransactionIdentifier
  criticalExtensions
    rrcResumeComplete
    criticalExtensionsFuture
  }
```

```
SEQUENCE {
  RRC-TransactionIdentifier,
  CHOICE {
    RRCResumeComplete-IEs,
    SEQUENCE {}
  }
```

```
RRCResumeComplete-IEs ::=
  dedicatedNAS-Message
  selectedPLMN-Identity
  uplinkTxDirectCurrentList
  lateNonCriticalExtension
  nonCriticalExtension
}
```

```
SEQUENCE {
  DedicatedNAS-Message
  INTEGER (1..maxPLMN)
  UplinkTxDirectCurrentList
  OCTET STRING
  RRCResumeComplete-v1610-IEs
```

OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL

```
RRCResumeComplete-v1610-IEs ::=
  idleMeasAvailable-r16
  measResultIdleEUTRA-r16
  measResultIdleNR-r16
  scg-Response-r16
    nr-SCG-Response
    eutra-SCG-Response
  }
  ue-MeasurementsAvailable-r16
  mobilityHistoryAvail-r16
  mobilityState-r16
  needForGapsInfoNR-r16
```

```
SEQUENCE {
  ENUMERATED {true}
  MeasResultIdleEUTRA-r16
  MeasResultIdleNR-r16
  CHOICE {
    OCTET STRING (CONTAINING RRCReconfigurationComplete),
    OCTET STRING
  }
  UE-MeasurementsAvailable-r16
  ENUMERATED {true}
  ENUMERATED {normal, medium, high, spare}
  NeedForGapsInfoNR-r16
```

OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL

```

    nonCriticalExtension          RRCResumeComplete-v1640-IEs
}

RRCResumeComplete-v1640-IEs ::= SEQUENCE {
    uplinkTxDirectCurrentTwoCarrierList-r16 UplinkTxDirectCurrentTwoCarrierList-r16
    nonCriticalExtension          RRCResumeComplete-v1700-IEs
}

RRCResumeComplete-v1700-IEs ::= SEQUENCE {
    needForGapNCSG-InfoNR-r17      NeedForGapNCSG-InfoNR-r17
    needForGapNCSG-InfoEUTRA-r17  NeedForGapNCSG-InfoEUTRA-r17
    nonCriticalExtension          RRCResumeComplete-v1720-IEs
}

RRCResumeComplete-v1720-IEs ::= SEQUENCE {
    uplinkTxDirectCurrentMoreCarrierList-r17 UplinkTxDirectCurrentMoreCarrierList-r17
    nonCriticalExtension          RRCResumeComplete-v1800-IEs
}

RRCResumeComplete-v1800-IEs ::= SEQUENCE {
    needForInterruptionInfoNR-r18      NeedForInterruptionInfoNR-r18
    musim-CapRestrictionInd-r18        ENUMERATED {true}
    flightPathInfoAvailable-r18        ENUMERATED {true}
    measConfigReportAppLayerAvailable-r18 ENUMERATED {true}
    measResultReselectionNR-r18        MeasResultIdleNR-r16
    reselectionMeasAvailable-r18       ENUMERATED {true}
    nonCriticalExtension                SEQUENCE {}
}

-- TAG-RRCRESUMECOMPLETE-STOP
-- ASN1STOP

```

OPTIONAL

OPTIONAL,
OPTIONALOPTIONAL,
OPTIONAL,
OPTIONALOPTIONAL,
OPTIONALOPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL

<i>RRCResumeComplete-IEs field descriptions</i>
<i>idleMeasAvailable</i> Indication that the UE has idle/inactive measurement report available.
<i>measConfigReportAppLayerAvailable</i> Indication that the UE has at least one application layer measurement configuration with <i>appLayerIdleInactiveConfig</i> configured.
<i>measResultIdleEUTRA</i> EUTRA measurement results performed during RRC_INACTIVE.
<i>measResultIdleNR</i> NR measurement results performed during RRC_INACTIVE.
<i>musim-CapRestrictionInd</i> This field indicates the UE temporary capability restriction due to MUSIM operation.
<i>needForGapsInfoNR</i> This field is used to indicate the measurement gap requirement information of the UE for NR target bands.
<i>needForGapNCSG-InfoEUTRA</i> This field is used to indicate the measurement gap and NCSG requirement information of the UE for E-UTRA target bands
<i>needForGapNCSG-InfoNR</i> This field is used to indicate the measurement gap and NCSG requirement information of the UE for NR target bands
<i>needForInterruptionInfoNR</i> This field indicates whether interruption is needed while performing measurement on NR target bands without measurement gap.
<i>reselectionMeasAvailable</i> Indication that the UE has reselection measurement report available.
<i>selectedPLMN-Identity</i> Index of the PLMN selected by the UE from the <i>plmn-IdentityInfoList</i> or <i>nprn-IdentityInfoList</i> fields included in <i>SIB1</i> .
<i>uplinkTxDirectCurrentList</i> The Tx Direct Current locations for the configured serving cells and BWPs if requested by the NW (see <i>reportUplinkTxDirectCurrent</i> in <i>CellGroupConfig</i>).
<i>uplinkTxDirectCurrentMoreCarrierList</i> The Tx Direct Current locations for the configured intra-band CA requested by <i>reportUplinkTxDirectCurrentMoreCarrier-r17</i> .
<i>uplinkTxDirectCurrentTwoCarrierList</i> The Tx Direct Current locations for the configured uplink intra-band CA with two carriers if requested by the NW (see <i>reportUplinkTxDirectCurrentTwoCarrier-r16</i> in <i>CellGroupConfig</i>).

– ***RRCResumeRequest***

The *RRCResumeRequest* message is used to request the resumption of a suspended RRC connection or perform an RNA update.

Signalling radio bearer: SRB0

RLC-SAP: TM

Logical channel: CCCH

Direction: UE to Network

RRCResumeRequest message

```
-- ASN1START
-- TAG-RRCRESUMEREQUEST-START

RRCResumeRequest ::= SEQUENCE {
    rrcResumeRequest    RRCResumeRequest-IEs
}

RRCResumeRequest-IEs ::= SEQUENCE {
    resumeIdentity      ShortI-RNTI-Value,
    resumeMAC-I         BIT STRING (SIZE (16)),
    resumeCause         ResumeCause,
    spare               BIT STRING (SIZE (1))
}

-- TAG-RRCRESUMEREQUEST-STOP
-- ASN1STOP
```

RRCResumeRequest-IEs field descriptions
resumeCause Provides the resume cause for the RRC connection resume request as provided by the upper layers or RRC. The network is not expected to reject an <i>RRCResumeRequest</i> due to unknown cause value being used by the UE.
resumeIdentity UE identity to facilitate UE context retrieval at gNB.
resumeMAC-I Authentication token to facilitate UE authentication at gNB. The 16 least significant bits of the MAC-I calculated using the AS security configuration as specified in 5.3.13.3.

– RRCResumeRequest1

The *RRCResumeRequest1* message is used to request the resumption of a suspended RRC connection or perform an RNA update.

- Signalling radio bearer: SRB0
- RLC-SAP: TM
- Logical channel: CCCH1
- Direction: UE to Network

RRCResumeRequest1 message

```
-- ASN1START
-- TAG-RRCRESUMEREQUEST1-START

RRCResumeRequest1 ::= SEQUENCE {
    rrcResumeRequest1    RRCResumeRequest1-IEs
}
```

```
}

RRCResumeRequest1-IEs ::= SEQUENCE {
    resumeIdentity      I-RNTI-Value,
    resumeMAC-I         BIT STRING (SIZE (16)),
    resumeCause         ResumeCause,
    spare               BIT STRING (SIZE (1))
}

-- TAG-RRCRESUMEREQUEST1-STOP
-- ASN1STOP
```

RRCResumeRequest1-IEs field descriptions
resumeCause Provides the resume cause for the <i>RRCResumeRequest1</i> as provided by the upper layers or RRC. A gNB is not expected to reject an <i>RRCResumeRequest1</i> due to unknown cause value being used by the UE.
resumeIdentity UE identity to facilitate UE context retrieval at gNB.
resumeMAC-I Authentication token to facilitate UE authentication at gNB. The 16 least significant bits of the MAC-I calculated using the AS security configuration as specified in 5.3.13.3.

– *RRCSetup*

The *RRCSetup* message is used to establish SRB1.

- Signalling radio bearer: SRB0
- RLC-SAP: TM
- Logical channel: CCCH
- Direction: Network to UE

RRCSetup message

```
-- ASN1START
-- TAG-RRCSETUP-START

RRCSetup ::=
    rrc-TransactionIdentifier      RRC-TransactionIdentifier,
    criticalExtensions             CHOICE {
        rrcSetup                  RRCSetup-IEs,
        criticalExtensionsFuture  SEQUENCE {}
    }
}

RRCSetup-IEs ::= SEQUENCE {
```

```

    radioBearerConfig
    masterCellGroup
    lateNonCriticalExtension
    nonCriticalExtension
}

RRCSetup-v1700-IEs ::=
    sl-ConfigDedicatedNR-r17
    sl-L2RemoteUE-Config-r17
    nonCriticalExtension
}

-- TAG-RRCSETUP-STOP
-- ASN1STOP
```

RRCSetup-IEs field descriptions	
masterCellGroup	The network configures only the RLC bearer for the SRB1, <i>mac-CellGroupConfig</i> , <i>physicalCellGroupConfig</i> and <i>spCellConfig</i> .
radioBearerConfig	Only SRB1 can be configured in RRC setup.
sl-ConfigDedicatedNR	Contains dedicated configurations for NR sidelink communication. The network configures only the PC5 Relay RLC channel and <i>sl-PHY-MAC-RLC-Config</i> used for the SRB1.
sl-L2RemoteUE-Config	Contains dedicated configurations used for L2 U2N relay related operation. The network configures only the SRAP configuration used for the SRB1 and local UE ID.

Conditional Presence	Explanation
L2RemoteUE	The field is mandatory present for L2 U2N Remote UE; otherwise it is absent.

– *RRCSetupComplete*

The *RRCSetupComplete* message is used to confirm the successful completion of an RRC connection establishment.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

RRCSetupComplete message

```

-- ASN1START
-- TAG-RRCSETUPCOMPLETE-START
```

```

RRCSetupComplete ::=
    rrc-TransactionIdentifier
    criticalExtensions
        rrcSetupComplete
        criticalExtensionsFuture
    }
}

RRCSetupComplete-IEs ::=
    selectedPLMN-Identity
    registeredAMF
    guami-Type
    s-NSSAI-List
    dedicatedNAS-Message
    ng-5G-S-TMSI-Value
        ng-5G-S-TMSI
        ng-5G-S-TMSI-Part2
    }
    lateNonCriticalExtension
    nonCriticalExtension
}

-- Regular non-critical extensions:
RRCSetupComplete-v1610-IEs ::=
    iab-NodeIndication-r16
    idleMeasAvailable-r16
    ue-MeasurementsAvailable-r16
    mobilityHistoryAvail-r16
    mobilityState-r16
    nonCriticalExtension
}

RRCSetupComplete-v1690-IEs ::=
    ul-RRC-Segmentation-r16
    nonCriticalExtension
}

RRCSetupComplete-v1700-IEs ::=
    onboardingRequest-r17
    nonCriticalExtension
}

RRCSetupComplete-v1800-IEs ::=
    ncr-NodeIndication-r18
    musim-CapRestrictionInd-r18
    flightPathInfoAvailable-r18
    measConfigReportAppLayerAvailable-r18
    mobileIAB-NodeIndication-r18
    reselectionMeasAvailable-r18
    nonCriticalExtension
}

-- Late non-critical extensions:
RRCSetupComplete-v15s0-IEs ::=

```

SEQUENCE {
 RRC-TransactionIdentifier,
 CHOICE {
 RRCSetupComplete-IEs,
 SEQUENCE {}
 }
}

SEQUENCE {
 INTEGER (1..maxPLMN),
 RegisteredAMF OPTIONAL,
 ENUMERATED {native, mapped} OPTIONAL,
 SEQUENCE (SIZE (1..maxNrofS-NSSAI)) OF S-NSSAI OPTIONAL,
 DedicatedNAS-Message,
 CHOICE {
 NG-5G-S-TMSI,
 BIT STRING (SIZE (9))
 }
 OCTET STRING (CONTAINING RRCSetupComplete-v15s0-IEs) OPTIONAL,
 RRCSetupComplete-v1610-IEs OPTIONAL
}

SEQUENCE {
 ENUMERATED {true} OPTIONAL,
 ENUMERATED {true} OPTIONAL,
 UE-MeasurementsAvailable-r16 OPTIONAL,
 ENUMERATED {true} OPTIONAL,
 ENUMERATED {normal, medium, high, spare} OPTIONAL,
 RRCSetupComplete-v1690-IEs OPTIONAL
}

SEQUENCE {
 ENUMERATED {true} OPTIONAL,
 RRCSetupComplete-v1700-IEs OPTIONAL
}

SEQUENCE {
 ENUMERATED {true} OPTIONAL,
 RRCSetupComplete-v1800-IEs OPTIONAL
}

SEQUENCE {
 ENUMERATED {true} OPTIONAL,
 ENUMERATED {true} OPTIONAL,
 ENUMERATED {true} OPTIONAL,
 ENUMERATED {true} OPTIONAL,
 ENUMERATED {true} OPTIONAL,
 ENUMERATED {true} OPTIONAL,
 SEQUENCE {} OPTIONAL
}

SEQUENCE {


```
-- Following field is only for REL-15 late non-critical extensions
  lateNonCriticalExtension      OCTET STRING
  nonCriticalExtension          RRCSetupComplete-v16j0-IEs
}

RRCSetupComplete-v16j0-IEs ::= SEQUENCE {
-- Following field is only for REL-16 late non-critical extensions
  lateNonCriticalExtension      OCTET STRING
  nonCriticalExtension          RRCSetupComplete-v17b0-IEs
}

RRCSetupComplete-v17b0-IEs ::= SEQUENCE {
  ul-RRC-MaxCapaSegments-r17   ENUMERATED {true}
  nonCriticalExtension          SEQUENCE{}
}

RegisteredAMF ::= SEQUENCE {
  plmn-Identity                PLMN-Identity
  amf-Identifier                AMF-Identifier
}

-- TAG-RRCSETUPCOMPLETE-STOP
-- ASN1STOP
```

<i>RRCSetupComplete-IEs field descriptions</i>
<i>guami-Type</i> This field is used to indicate whether the GUAMI included is native (derived from native 5G-GUTI) or mapped (from EPS, derived from EPS GUTI) as specified in TS 24.501 [23].
<i>iab-NodeIndication</i> This field is used to indicate that the connection is being established by an IAB-node as specified in TS 38.300 [2]. If this field is included, the UE shall not include the field <i>mobileIAB-NodeIndication</i> .
<i>idleMeasAvailable</i> Indication that the UE has idle/inactive measurement report available.
<i>measConfigReportAppLayerAvailable</i> Indication that the UE has at least one application layer measurement configuration with <i>appLayerIdleInactiveConfig</i> configured.
<i>mobileIAB-NodeIndication</i> This field is used to indicate that the connection is being established by a mobile IAB-node as specified in TS 38.300 [2]. If this field is included, the UE shall not include the field <i>iab-NodeIndication</i> .
<i>mobilityState</i> This field indicates the UE mobility state (as defined in TS 38.304 [20], clause 5.2.4.3) just prior to UE going into RRC_CONNECTED state. The UE indicates the value of <i>medium</i> and <i>high</i> when being in Medium-mobility and High-mobility states respectively. Otherwise the UE indicates the value <i>normal</i> .
<i>musim-CapRestrictionInd</i> This field indicates the UE temporary capability restriction due to MUSIM operation.
<i>ncr-NodeIndication</i> This field is used to indicate that the connection is being established by an NCR-node as specified in TS 38.300 [2].
<i>ng-5G-S-TMSI-Part2</i> The leftmost 9 bits of 5G-S-TMSI.
<i>onboardingRequest</i> This field indicates that the connection is being established for UE onboarding in the selected onboarding SNPN, see TS 23.501 [32].
<i>registeredAMF</i> This field is used to transfer the GUAMI of the AMF where the UE is registered, as provided by upper layers, see TS 23.003 [21].
<i>reselectionMeasAvailable</i> Indication that the UE has reselection measurement report available.
<i>selectedPLMN-Identity</i> Index of the PLMN or SNPN selected by the UE from the <i>plmn-IdentityInfoList</i> or <i>nprn-IdentityInfoList</i> fields included in SIB1.
<i>ul-RRC-MaxCapaSegments</i> This field indicates that the UE supports uplink RRC segmentation of <i>UECapabilityInformation</i> according to the network indication <i>rrc-MaxCapaSegAllowed</i> .
<i>ul-RRC-Segmentation</i> This field indicates the UE supports uplink RRC segmentation of <i>UECapabilityInformation</i> according to the network indication <i>rrc-SegAllowed</i> .

– *RRCSetupRequest*

The *RRCSetupRequest* message is used to request the establishment of an RRC connection.

Signalling radio bearer: SRB0

RLC-SAP: TM

Logical channel: CCCH

Direction: UE to Network

RRCSetupRequest message

```
-- ASN1START
-- TAG-RRCSETUPREQUEST-START

RRCSetupRequest ::=
SEQUENCE {
    rrcSetupRequest
    RRCSetupRequest-IEs
}

RRCSetupRequest-IEs ::=
SEQUENCE {
    ue-Identity
    InitialUE-Identity,
    establishmentCause,
    spare
    BIT STRING (SIZE (1))
}

InitialUE-Identity ::=
CHOICE {
    ng-5G-S-TMSI-Part1
    randomValue
    BIT STRING (SIZE (39)),
    BIT STRING (SIZE (39))
}

EstablishmentCause ::=
ENUMERATED {
    emergency, highPriorityAccess, mt-Access, mo-Signalling,
    mo-Data, mo-VoiceCall, mo-VideoCall, mo-SMS, mps-PriorityAccess, mcs-PriorityAccess,
    spare6, spare5, spare4, spare3, spare2, spare1}

-- TAG-RRCSETUPREQUEST-STOP
-- ASN1STOP
```

<i>RRCSetupRequest-IEs field descriptions</i>
<i>establishmentCause</i> Provides the establishment cause for the <i>RRCSetupRequest</i> in accordance with the information received from upper layers. gNB is not expected to reject an <i>RRCSetupRequest</i> due to unknown cause value being used by the UE.
<i>ue-Identity</i> UE identity included to facilitate contention resolution by lower layers.

<i>InitialUE-Identity field descriptions</i>
<i>ng-5G-S-TMSI-Part1</i> The rightmost 39 bits of 5G-S-TMSI.
<i>randomValue</i> Integer value in the range 0 to $2^{39} - 1$.

— ***RRCSystemInfoRequest***

The *RRCSystemInfoRequest* message is used to request SI message(s) required by the UE as specified in clause 5.2.2.3.3 and 5.2.2.3.3a.

Signalling radio bearer: SRB0

RLC-SAP: TM

Logical channel: CCCH

Direction: UE to Network

RRCSysInfoRequest message

```
-- ASN1START
-- TAG-RRCSYSTEMINFOREQUEST-START

RRCSysInfoRequest ::=
    criticalExtensions
        rrcSysInfoRequest
        criticalExtensionsFuture-r16
        rrcPosSysInfoRequest-r16
        criticalExtensionsFuture
    }
}

RRCSysInfoRequest-IEs ::= SEQUENCE {
    requested-SI-List          BIT STRING (SIZE (maxSI-Message)), --32bits
    spare                     BIT STRING (SIZE (12))
}

RRC-PosSysInfoRequest-r16-IEs ::= SEQUENCE {
    requestedPosSI-List       BIT STRING (SIZE (maxSI-Message)), --32bits
    spare                     BIT STRING (SIZE (11))
}

-- TAG-RRCSYSTEMINFOREQUEST-STOP
-- ASN1STOP
```

<i>RRCSystemInfoRequest-IEs</i> field descriptions
<i>requested-SI-List</i> Contains a list of requested SI messages which are configured by <i>schedulingInfoList</i> in <i>si-SchedulingInfo</i> and <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> (if present) in SIB1. If <i>si-SchedulingInfo-v1700</i> is not present: - According to the order of entry in the list of SI messages configured by <i>schedulingInfoList</i> in <i>si-SchedulingInfo</i> in <i>SIB1</i>, first bit corresponds to first/leftmost listed SI message, second bit corresponds to second listed SI message, and so on. If <i>si-SchedulingInfo-v1700</i> is present: - The UE generates a list of concatenated SI messages by appending the SI messages containing type1 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> to the SI messages configured by <i>schedulingInfoList</i> in <i>si-SchedulingInfo</i>. - According to the order of entry in the list of concatenated SI messages, first bit corresponds to first/leftmost listed SI message, second bit corresponds to second listed SI message, and so on.
<i>requestedPosSI-List</i> Contains a list of requested SI messages which are configured by <i>posSchedulingInfoList</i> in <i>posSI-SchedulingInfo</i> and <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> (if present) in SIB1. If <i>si-SchedulingInfo-v1700</i> is not present: - According to the order of entry in the list of SI messages configured by <i>posSchedulingInfoList</i> in <i>posSI-SchedulingInfo</i> in <i>SIB1</i>, first bit corresponds to first/leftmost listed SI message, second bit corresponds to second listed SI message, and so on. If <i>si-SchedulingInfo-v1700</i> is present: - The UE creates a list of concatenated SI messages by appending the SI messages containing type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> to the SI messages configured by <i>posSchedulingInfoList</i> in <i>posSI-SchedulingInfo</i>. - According to the order of entry in the list of concatenated SI messages, first bit corresponds to first/leftmost listed SI message, second bit corresponds to second listed SI message, and so on.

– *SCGFailureInformation*

The *SCGFailureInformation* message is used to provide information regarding NR SCG failures detected by the UE.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

SCGFailureInformation message

```
-- ASN1START
-- TAG-SCGFAILUREINFORMATION-START

SCGFailureInformation ::=
    criticalExtensions
        scgFailureInformation
        criticalExtensionsFuture
    }

SEQUENCE {
    CHOICE {
        SCGFailureInformation-IEs,
        SEQUENCE {}
    }
}
```

```

}

SCGFailureInformation-IEs ::=
    failureReportSCG
    nonCriticalExtension
}

SCGFailureInformation-v1590-IEs ::=
    lateNonCriticalExtension
    nonCriticalExtension
}

FailureReportSCG ::=
    failureType

    measResultFreqList
    measResultSCG-Failure
    ...,
    [[
        locationInfo-r16
        failureType-v1610
    ]],
    [[
        previousPSCellId-r17
        physCellId-r17
        carrierFreq-r17
    ]
    failedPSCellId-r17
    physCellId-r17
    carrierFreq-r17
    ]
    timeSCGFailure-r17
    perRAInfoList-r17
    ]],
    [[
        perRAInfoList-v17b0
    ]],
    [[
        perRAInfoList-v1840
    ]]
}

MeasResultFreqList ::=

SEQUENCE {
    FailureReportSCG
    SCGFailureInformation-v1590-IEs
    OPTIONAL,
    OPTIONAL

SEQUENCE {
    OCTET STRING
    SEQUENCE {}
    OPTIONAL,
    OPTIONAL

SEQUENCE {
    ENUMERATED {
        t310-Expiry, randomAccessProblem,
        rlc-MaxNumRetx,
        synchReconfigFailureSCG, scg-ReconfigFailure,
        srb3-IntegrityFailure, other-r16, spare1},
    MeasResultFreqList
    OCTET STRING (CONTAINING MeasResultSCG-Failure)
    OPTIONAL,
    OPTIONAL,

    LocationInfo-r16
    ENUMERATED {scg-lbtFailure-r16, beamFailureRecoveryFailure-r16,
        t312-Expiry-r16, bh-RLF-r16, beamFailure-r17, spare3, spare2, spare1}
    OPTIONAL,
    OPTIONAL

SEQUENCE {
    PhysCellId,
    ARFCN-ValueNR
    OPTIONAL,

SEQUENCE {
    PhysCellId,
    ARFCN-ValueNR
    OPTIONAL,
    OPTIONAL,
    OPTIONAL

INTEGER (0..1023)
PerRAInfoList-r16
OPTIONAL

PerRAInfoList-v1660
OPTIONAL

PerRAInfoList-v1800
OPTIONAL

SEQUENCE (SIZE (1..maxFreq)) OF MeasResult2NR

```

-- TAG-SCGFAILUREINFORMATION-STOP
-- ASN1STOP

SCGFailureInformation field descriptions
measResultFreqList The field contains available results of measurements on NR frequencies the UE is configured to measure by <i>measConfig</i> .
measResultSCG-Failure The field contains the <i>MeasResultSCG-Failure</i> IE which includes available results of measurements on NR frequencies the UE is configured to measure by the NR SCG <i>RRCReconfiguration</i> message.
previousPSCellId This field indicates the physical cell id and carrier frequency of the cell that is the source PSCell of the last PSCell change. In case of PSCell addition failure, this field is absent.
failedPSCellId This field indicates the physical cell id and carrier frequency of the cell in which SCG failure is detected or the target PSCell of the failed PSCell change or failed PSCell addition.
timeSCGFailure This field is used to indicate the time elapsed since the last execution of <i>RRCReconfiguration</i> with <i>reconfigurationWithSync</i> for the SCG until the SCG failure. Actual value = field value * 100ms. The maximum value 1023 means 102.3s or longer.

– SCGFailureInformationEUTRA

The *SCGFailureInformationEUTRA* message is used to provide information regarding E-UTRA SCG failures detected by the UE.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

SCGFailureInformationEUTRA message

```
-- ASN1START
-- TAG-SCGFAILUREINFORMATIONEUTRA-START

SCGFailureInformationEUTRA ::=
    criticalExtensions
        scgFailureInformationEUTRA
        criticalExtensionsFuture
    }

SCGFailureInformationEUTRA-IEs ::=
    failureReportSCG-EUTRA
    nonCriticalExtension
    }

SCGFailureInformationEUTRA-v1590-IEs ::=
    lateNonCriticalExtension
    nonCriticalExtension
    }
```

SEQUENCE {

CHOICE {

SCGFailureInformationEUTRA-IEs,

SEQUENCE {}

SEQUENCE {

FailureReportSCG-EUTRA

SCGFailureInformationEUTRA-v1590-IEs

OPTIONAL,

OPTIONAL

SEQUENCE {

OCTET STRING

SEQUENCE {}

OPTIONAL,

OPTIONAL

```
FailureReportSCG-EUTRA ::=
    failureType
                                SEQUENCE {
                                    ENUMERATED {
                                        t313-Expiry, randomAccessProblem, rlc-MaxNumRetx,
                                        scg-ChangeFailure, spare4,
                                        spare3, spare2, spare1},
                                    MeasResultFreqListFailMRDC
                                }
                                OPTIONAL,
    measResultFreqListMRDC
    measResultSCG-FailureMRDC
                                OCTET STRING
                                OPTIONAL,
    ...
    [[
        locationInfo-r16
                                LocationInfo-r16
                                OPTIONAL
    ]]
}

MeasResultFreqListFailMRDC ::= SEQUENCE (SIZE (1.. maxFreq)) OF MeasResult2EUTRA

-- TAG-SCGFAILUREINFORMATIONEUTRA-STOP
-- ASN1STOP
```

SCGFailureInformationEUTRA field descriptions
measResultFreqListMRDC The field contains available results of measurements on E-UTRA frequencies the UE is configured to measure by <i>measConfig</i> .
measResultSCG-FailureMRDC Includes the E-UTRA <i>MeasResultSCG-FailureMRDC</i> IE as specified in TS 36.331 [10]. The field contains available results of measurements on E-UTRA frequencies the UE is configured to measure by the E-UTRA <i>RRCConnectionReconfiguration</i> message.

– SecurityModeCommand

The *SecurityModeCommand* message is used to command the activation of AS security.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: Network to UE

SecurityModeCommand message

```
-- ASN1START
-- TAG-SECURITYMODECOMMAND-START

SecurityModeCommand ::=
    rrc-TransactionIdentifier
    criticalExtensions
        securityModeCommand
        criticalExtensionsFuture
    SEQUENCE {
        RRC-TransactionIdentifier,
        CHOICE {
            SecurityModeCommand-IEs,
            SEQUENCE {}
        }
    }
```



```

    }
}

SecurityModeCommand-IEs ::=
    securityConfigSMC
    lateNonCriticalExtension
    nonCriticalExtension
}

SecurityConfigSMC ::=
    securityAlgorithmConfig
    ...
}

-- TAG-SECURITYMODECOMMAND-STOP
-- ASN1STOP

```

OPTIONAL,
OPTIONAL

– *SecurityModeComplete*

The *SecurityModeComplete* message is used to confirm the successful completion of a security mode command.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

SecurityModeComplete message

```

-- ASN1START
-- TAG-SECURITYMODECOMPLETE-START

SecurityModeComplete ::=
    rrc-TransactionIdentifier
    criticalExtensions
    securityModeComplete
    criticalExtensionsFuture
}

SecurityModeComplete-IEs ::=
    lateNonCriticalExtension
    nonCriticalExtension
}

-- TAG-SECURITYMODECOMPLETE-STOP
-- ASN1STOP

```

OPTIONAL,
OPTIONAL

– *SecurityModeFailure*

The *SecurityModeFailure* message is used to indicate an unsuccessful completion of a security mode command.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

SecurityModeFailure message

```
-- ASN1START
-- TAG-SECURITYMODEFAILURE-START

SecurityModeFailure ::=
    rrc-TransactionIdentifier
    criticalExtensions
        securityModeFailure
        criticalExtensionsFuture
    }
}

SecurityModeFailure-IEs ::=
    lateNonCriticalExtension
    nonCriticalExtension
}

-- TAG-SECURITYMODEFAILURE-STOP
-- ASN1STOP
```

SEQUENCE {
 RRC-TransactionIdentifier,
 CHOICE {
 SecurityModeFailure-IEs,
 SEQUENCE {}
 }

SEQUENCE {
 OCTET STRING
 SEQUENCE{}
}

OPTIONAL,
OPTIONAL

– *SIB1*

SIB1 contains information relevant when evaluating if a UE is allowed to access a cell and defines the scheduling of other system information. It also contains radio resource configuration information that is common for all UEs and barring information applied to the unified access control.

Signalling radio bearer: N/A

RLC-SAP: TM

Logical channels: BCCH

Direction: Network to UE

SIB1 message

```
-- ASN1START
-- TAG-SIB1-START
```

```
SIB1 ::= SEQUENCE {
  cellSelectionInfo SEQUENCE {
    q-RxLevMin Q-RxLevMin,
    q-RxLevMinOffset INTEGER (1..8) OPTIONAL, -- Need S
    q-RxLevMinSUL Q-RxLevMin OPTIONAL, -- Need R
    q-QualMin Q-QualMin OPTIONAL, -- Need S
    q-QualMinOffset INTEGER (1..8) OPTIONAL, -- Need S
  }
  cellAccessRelatedInfo CellAccessRelatedInfo,
  connEstFailureControl ConnEstFailureControl OPTIONAL, -- Need R
  si-SchedulingInfo SI-SchedulingInfo OPTIONAL, -- Need R
  servingCellConfigCommon ServingCellConfigCommonSIB OPTIONAL, -- Need R
  ims-EmergencySupport ENUMERATED {true} OPTIONAL, -- Need R
  eCalloverIMS-Support ENUMERATED {true} OPTIONAL, -- Need R
  ue-TimersAndConstants UE-TimersAndConstants OPTIONAL, -- Need R
  uac-BarringInfo SEQUENCE {
    uac-BarringForCommon UAC-BarringPerCatList OPTIONAL, -- Need S
    uac-BarringPerPLMN-List UAC-BarringPerPLMN-List OPTIONAL, -- Need S
    uac-BarringInfoSetList UAC-BarringInfoSetList,
    uac-AccessCategory1-SelectionAssistanceInfo CHOICE {
      plmnCommon UAC-AccessCategory1-SelectionAssistanceInfo,
      individualPLMNList SEQUENCE (SIZE (2..maxPLMN)) OF UAC-AccessCategory1-SelectionAssistanceInfo
    } OPTIONAL, -- Need S
  }
  useFullResumeID ENUMERATED {true} OPTIONAL, -- Need R
  lateNonCriticalExtension OCTET STRING OPTIONAL, -- Need R
  nonCriticalExtension SIB1-v1610-IEs OPTIONAL
}

SIB1-v1610-IEs ::= SEQUENCE {
  idleModeMeasurementsEUTRA-r16 ENUMERATED {true} OPTIONAL, -- Need R
  idleModeMeasurementsNR-r16 ENUMERATED {true} OPTIONAL, -- Need R
  posSI-SchedulingInfo-r16 PosSI-SchedulingInfo-r16 OPTIONAL, -- Need R
  nonCriticalExtension SIB1-v1630-IEs OPTIONAL
}

SIB1-v1630-IEs ::= SEQUENCE {
  uac-BarringInfo-v1630 SEQUENCE {
    uac-AC1-SelectAssistInfo-r16 SEQUENCE (SIZE (2..maxPLMN)) OF UAC-AC1-SelectAssistInfo-r16
  } OPTIONAL, -- Need R
  nonCriticalExtension SIB1-v1700-IEs OPTIONAL
}

SIB1-v1700-IEs ::= SEQUENCE {
  hsdn-Cell-r17 ENUMERATED {true} OPTIONAL, -- Need R
  uac-BarringInfo-v1700 SEQUENCE {
    uac-BarringInfoSetList-v1700 UAC-BarringInfoSetList-v1700
  }
  sdt-ConfigCommon-r17 SDT-ConfigCommonSIB-r17 OPTIONAL, -- Cond MINT
  OPTIONAL, -- Need R
}
```

redCap-ConfigCommon-r17	RedCap-ConfigCommonSIB-r17	OPTIONAL,	-- Need R
featurePriorities-r17	SEQUENCE {		
redCapPriority-r17	FeaturePriority-r17	OPTIONAL,	-- Need R
slicingPriority-r17	FeaturePriority-r17	OPTIONAL,	-- Need R
msg3-Repetitions-Priority-r17	FeaturePriority-r17	OPTIONAL,	-- Need R
sdt-Priority-r17	FeaturePriority-r17	OPTIONAL,	-- Need R
}		OPTIONAL,	-- Need R
si-SchedulingInfo-v1700	SI-SchedulingInfo-v1700	OPTIONAL,	-- Need R
hyperSFN-r17	BIT STRING (SIZE (10))	OPTIONAL,	-- Need R
eDRX-AllowedIdle-r17	ENUMERATED {true}	OPTIONAL,	-- Need R
eDRX-AllowedInactive-r17	ENUMERATED {true}	OPTIONAL,	-- Cond EDRX-RC
intraFreqReselectionRedCap-r17	ENUMERATED {allowed, notAllowed}	OPTIONAL,	-- Need S
cellBarredNTN-r17	ENUMERATED {barred, notBarred}	OPTIONAL,	-- Need S
nonCriticalExtension	SIB1-v1740-IEs	OPTIONAL	
}			
SIB1-v1740-IEs ::=	SEQUENCE {		
si-SchedulingInfo-v1740	SI-SchedulingInfo-v1740	OPTIONAL,	-- Need R
nonCriticalExtension	SIB1-v1800-IEs	OPTIONAL	
}			
SIB1-v1800-IEs ::=	SEQUENCE {		
ncr-Support-r18	ENUMERATED {true}	OPTIONAL,	-- Need S
mt-SDT-ConfigCommonSIB-r18	MT-SDT-ConfigCommonSIB-r18	OPTIONAL,	-- Need R
musim-CapRestrictionAllowed-r18	ENUMERATED {true}	OPTIONAL,	-- Need R
featurePriorities-v1800	SEQUENCE {		
msg1-Repetitions-Priority-r18	FeaturePriority-r17	OPTIONAL,	-- Need R
eRedCapPriority-r18	FeaturePriority-r17	OPTIONAL,	-- Need R
}		OPTIONAL,	-- Need R
si-SchedulingInfo-v1800	SI-SchedulingInfo-v1800	OPTIONAL,	-- Need R
cellBarredATG-r18	ENUMERATED {barred, notBarred}	OPTIONAL,	-- Need S
cellBarredNES-r18	ENUMERATED {notBarred}	OPTIONAL,	-- Need R
mobileIAB-Cell-r18	ENUMERATED {true}	OPTIONAL,	-- Need R
eDRX-AllowedInactive-r18	ENUMERATED {true}	OPTIONAL,	-- Cond EDRX-RC
intraFreqReselection-eRedCap-r18	ENUMERATED {allowed, notAllowed}	OPTIONAL,	-- Need S
nonServingCellMII-r18	ENUMERATED {true}	OPTIONAL,	-- Need R
sdt-BeamFailureRecoveryProhibitTimer-r18	ENUMERATED {ms50, ms100, ms200, ms500, ms1000, ms1500, ms2000, ms3000}	OPTIONAL,	-- Need R
eRedCap-ConfigCommon-r18	ERedCap-ConfigCommonSIB-r18	OPTIONAL,	-- Need R
cellBarredFixedVSAT-r18	ENUMERATED {barred, notBarred}	OPTIONAL,	-- Cond NTN
cellBarredMobileVSAT-r18	ENUMERATED {barred, notBarred}	OPTIONAL,	-- Cond NTN
reselectionMeasurementsNR-r18	ENUMERATED {true}	OPTIONAL,	-- Need R
cellBarred2RxXR-r18	ENUMERATED {barred}	OPTIONAL,	-- Need R
intraFreqReselection2RxXR-r18	ENUMERATED {allowed, notAllowed}	OPTIONAL,	-- Cond 2RxXR
barringExemptEmergencyCall-r18	ENUMERATED {true}	OPTIONAL,	-- Cond EM-Barring
n3c-Support-r18	ENUMERATED {true}	OPTIONAL,	-- Need R
nonCriticalExtension	SEQUENCE {}	OPTIONAL	
}			
UAC-AccessCategory1-SelectionAssistanceInfo ::=	ENUMERATED {a, b, c}		
UAC-AC1-SelectAssistInfo-r16 ::=	ENUMERATED {a, b, c, notConfigured}		
SDT-ConfigCommonSIB-r17 ::=	SEQUENCE {		

```

sdt-RSRP-Threshold-r17          RSRP-Range          OPTIONAL, -- Need R
sdt-LogicalChannelSR-DelayTimer-r17 ENUMERATED { sf20, sf40, sf64, sf128, sf512, sf1024, sf2560, spare1} OPTIONAL, -- Need R
sdt-DataVolumeThreshold-r17      ENUMERATED {byte32, byte100, byte200, byte400, byte600, byte800, byte1000, byte2000, byte4000,
                                         byte8000, byte9000, byte10000, byte12000, byte24000, byte48000, byte96000},
t319a-r17                        ENUMERATED { ms100, ms200, ms300, ms400, ms600, ms1000, ms2000,
                                         ms3000, ms4000, spare7, spare6, spare5, spare4, spare3, spare2, spare1}
}

RedCap-ConfigCommonSIB-r17 ::= SEQUENCE {
    halfDuplexRedCapAllowed-r17    ENUMERATED {true}          OPTIONAL, -- Need R
    cellBarredRedCap-r17           SEQUENCE {
        cellBarredRedCap1Rx-r17    ENUMERATED {barred, notBarred},
        cellBarredRedCap2Rx-r17    ENUMERATED {barred, notBarred}
    }
    ...
}

ERedCap-ConfigCommonSIB-r18 ::= SEQUENCE {
    cellBarred-eRedCap-r18         SEQUENCE {
        cellBarred-eRedCap1Rx-r18  ENUMERATED {barred, notBarred},
        cellBarred-eRedCap2Rx-r18  ENUMERATED {barred, notBarred}
    }
}

FeaturePriority-r17 ::= INTEGER (0..7)

MT-SDT-ConfigCommonSIB-r18 ::= SEQUENCE {
    mt-SDT-RSRP-Threshold-r18      RSRP-Range          OPTIONAL, -- Need S
    sdt-LogicalChannelSR-DelayTimer-r18 ENUMERATED { sf20, sf40, sf64, sf128, sf512, sf1024, sf2560, spare1} OPTIONAL, -- Cond MT-SDT1
    t319a-r18                      ENUMERATED { ms100, ms200, ms300, ms400, ms600, ms1000, ms2000,
                                         ms3000, ms4000, spare7, spare6, spare5, spare4,
                                         spare3, spare2, spare1}          OPTIONAL -- Cond MT-SDT2
}

-- TAG-SIB1-STOP
-- ASN1STOP

```

SIB1 field descriptions
<i>barringExemptEmergencyCall</i> Indicates whether the cell allows emergency bearer services for UEs who would otherwise consider the cell as barred as specified in TS 38.304 [20].
<i>cellBarred2RxXR</i> Value <i>barred</i> means that the cell is barred for a 2Rx XR UE indicating <i>supportOf2RxXR</i> for the selected frequency band as specified in clause 5.2.2.4.2. This field is ignored by all UEs not indicating <i>supportOf2RxXR</i> for the selected frequency band. This field may be configured only if the cell operates in a frequency band where 4Rx antenna ports are mandated as specified in TS 38.101-1 [15]. If this field is absent on a cell operating in a frequency band where 4RX antenna ports are mandated, a 2RX XR UE shall treat the cell as not barred, as specified in TS 38.304 [20].
<i>cellBarredATG</i> Value <i>barred</i> means that the cell is barred for connectivity to ATG, as defined in TS 38.304 [20]. Value <i>notBarred</i> means that the cell is allowed for connectivity to ATG. If not present, the UE considers the cell is not allowed for connectivity to ATG, as defined in TS 38.304 [20]. This field is only applicable to ATG-capable UEs.
<i>cellBarred-eRedCap1Rx</i> Value <i>barred</i> means that the cell is barred for an eRedCap UE supporting 1 Rx branch on the selected frequency band as specified in clause 5.2.2.4.2, as defined in TS 38.304 [20]. This field is ignored by non-eRedCap UEs. An eRedCap UE supporting 2 Rx on the selected frequency band as specified in clause 5.2.2.4.2 shall ignore this field when <i>cellBarred-eRedCap2Rx</i> is set to <i>notBarred</i> .
<i>cellBarred-eRedCap2Rx</i> Value <i>barred</i> means that the cell is barred for an eRedCap UE supporting 2 Rx branches on the selected frequency band as specified in clause 5.2.2.4.2, as defined in TS 38.304 [20]. This field is ignored by non-eRedCap UEs. An eRedCap UE supporting 1 Rx on the selected frequency band as specified in clause 5.2.2.4.2 shall ignore this field when <i>cellBarred-eRedCap1Rx</i> is set to <i>notBarred</i> .
<i>cellBarredFixedVSAT</i> Value <i>barred</i> means that the cell is barred for fixed VSAT UEs, as defined in TS 38.304 [20]. If not present, the cell is not allowed for fixed VSAT UEs. This field is ignored by non-VSAT UEs.
<i>cellBarredMobileVSAT</i> Value <i>barred</i> means that the cell is barred for mobile VSAT UEs, as defined in TS 38.304 [20]. If not present, the cell is not allowed for mobile VSAT UEs. This field is ignored by non-VSAT UEs.
<i>cellBarredNES</i> This field indicates the cell barring status for UEs supporting <i>nes-CellDTX-DRX</i> on the selected frequency band as described in 5.2.2.4.2.
<i>cellBarredNTN</i> Value <i>barred</i> means that the cell is barred for connectivity to NTN, as defined in TS 38.304 [20]. Value <i>notBarred</i> means that the cell is allowed for connectivity to NTN. If not present, the UE considers the cell is not allowed for connectivity to NTN, as defined in TS 38.304 [20]. This field is only applicable to NTN-capable UEs.
<i>cellBarredRedCap1Rx</i> Value <i>barred</i> means that the cell is barred for a RedCap UE supporting 1 Rx branch on the selected frequency band as specified in clause 5.2.2.4.2, as defined in TS 38.304 [20]. This field is ignored by non-RedCap UEs. A RedCap UE supporting 2 Rx on the selected frequency band as specified in clause 5.2.2.4.2 shall ignore this field when <i>cellBarredRedCap2Rx</i> is set to <i>notBarred</i> .
<i>cellBarredRedCap2Rx</i> Value <i>barred</i> means that the cell is barred for a RedCap UE supporting 2 Rx branches on the selected frequency band as specified in clause 5.2.2.4.2, as defined in TS 38.304 [20]. This field is ignored by non-RedCap UEs. A RedCap UE supporting 1 Rx on the selected frequency band as specified in clause 5.2.2.4.2 shall ignore this field when <i>cellBarredRedCap1Rx</i> is set to <i>notBarred</i> .
<i>cellSelectionInfo</i> Parameters for cell selection related to the serving cell.
<i>eCallOverIMS-Support</i> Indicates whether the cell supports eCall over IMS services as defined in TS 23.501 [32]. If absent, eCall over IMS is not supported by the network in the cell.
<i>eDRX-AllowedIdle</i> The presence of this field indicates that extended DRX for CN paging is allowed in the cell for UEs in RRC_IDLE or RRC_INACTIVE. The UE shall stop using extended DRX for CN paging in RRC_IDLE or RRC_INACTIVE if <i>eDRX-AllowedIdle</i> is not present.

eDRX-AllowedInactive The presence of <i>eDRX-AllowedInactive-r17</i> indicates that extended DRX cycle equal to or shorter than 10.24 s for RAN paging is allowed in the cell for UEs in RRC_INACTIVE. The UE shall stop using extended DRX cycle equal to or shorter than 10.24 s for RAN paging in RRC_INACTIVE if <i>eDRX-AllowedInactive-r17</i> is not present. The presence of <i>eDRX-AllowedInactive-r18</i> indicates that extended DRX cycle longer than 10.24 s for RAN paging is allowed in the cell for UEs in RRC_INACTIVE. The UE shall stop using extended DRX cycle longer than 10.24 s for RAN paging in RRC_INACTIVE if <i>eDRX-AllowedInactive-r18</i> is not present.
featurePriorities Indicates priorities for features, such as (e)RedCap, Slicing, SDT, MSG1-Repetitions and MSG3-Repetitions for Coverage Enhancements. These priorities are used to determine which <i>FeatureCombinationPreambles</i> the UE shall use when a feature maps to more than one <i>FeatureCombinationPreambles</i>, as specified in TS 38.321 [3]. A lower value means a higher priority. The network does not signal the same priority for more than one feature. The network signals a priority for all feature that map to at least one <i>FeatureCombinationPreambles</i>.
halfDuplexRedCap-Allowed The presence of this field indicates that the cell supports half-duplex FDD (e)RedCap UEs.
hsdn-Cell This field indicates this is a HSDN cell as specified in TS 38.304 [20].
hyperSFN Indicates hyper SFN which increments by one when the SFN wraps around. This field is excluded when determining changes in system information, i.e. changes of hyper SFN should not result in system information change notifications.
idleModeMeasurementsEUTRA This field indicates that a UE that is configured for EUTRA idle/inactive measurements shall perform the measurements while camping in this cell and report availability of these measurements when establishing or resuming a connection in this cell. If absent, a UE is not required to perform EUTRA idle/inactive measurements.
idleModeMeasurementsNR This field indicates that a UE that is configured for NR idle/inactive measurements shall perform the measurements while camping in this cell and report availability of these measurements when establishing or resuming a connection in this cell. If absent, a UE is not required to perform NR idle/inactive measurements.
ims-EmergencySupport Indicates whether the cell supports IMS emergency bearer services for UEs in limited service mode. If absent, IMS emergency call is not supported by the network in the cell for UEs in limited service mode.
intraFreqReselection2RxXR This field controls cell selection/reselection to intra-frequency cells for 2Rx XR UEs when this cell is barred or treated as barred by the 2Rx XR UE, as specified in TS 38.304 [20]. This field is ignored by all UEs that are not 2Rx XR UEs. This field may be configured only if the cell operates in a frequency band where 4Rx antenna ports are mandated, as specified in TS 38.101-1 [15].
intraFreqReselection-eRedCap Controls cell selection/reselection to intra-frequency cells for eRedCap UEs when this cell is barred, or treated as barred by the eRedCap UE, as specified in TS 38.304 [20]. If not present, an eRedCap UE treats the cell as barred, i.e., the UE considers that the cell does not support eRedCap.
intraFreqReselectionRedCap Controls cell selection/reselection to intra-frequency cells for RedCap UEs when this cell is barred, or treated as barred by the RedCap UE, as specified in TS 38.304 [20]. If not present, a RedCap UE treats the cell as barred, i.e., the UE considers that the cell does not support RedCap.
mobileIAB-Cell The presence of this field indicates that this is a mobile IAB cell.
mt-SDT-RSRP-Threshold RSRP threshold used to determine whether MT-SDT procedure can be initiated, as specified in TS 38.321 [3]. If the field is absent, and the field <i>sdt-RSRP-Threshold</i> is present, the UE applies the value in the field <i>sdt-RSRP-Threshold</i>.
musim-CapRestrictionAllowed Indicates the UE is allowed to send the <i>musim-CapRestrictionInd</i> in <i>RRCSetupComplete</i>, <i>RRCResumeComplete</i> and <i>RRCReestablishmentComplete</i> messages.
n3c-Support This field indicates the support of N3C MP. If the field is present, the UE can perform early detection of candidate N3C relay UEs. If absent, a UE is not required to perform early detection of candidate N3C relay UEs.

ncr-Support This field combines both the support of NCR and the cell status for NCR. If the field is present, the cell supports NCR and the cell is also considered as a candidate for cell (re)selection for NCR-node; if the field is absent, the cell does not support NCR and/or the cell is barred for NCR-node.
nonServingCellMIB Indicates whether the <i>MBSInterestIndication</i> message for MBS broadcast reception on a non-serving cell is allowed to be transmitted to the serving gNB.
q-QualMin Parameter "Q _{qualmin} " in TS 38.304 [20], applicable for serving cell. If the field is absent, the UE applies the (default) value of negative infinity for Q _{qualmin} .
q-QualMinOffset Parameter "Q _{qualminoffset} " in TS 38.304 [20]. Actual value Q _{qualminoffset} = field value [dB]. If the field is absent, the UE applies the (default) value of 0 dB for Q _{qualminoffset} . Affects the minimum required quality level in the cell.
q-RxLevMin Parameter "Q _{rxlevmin} " in TS 38.304 [20], applicable for serving cell.
q-RxLevMinOffset Parameter "Q _{rxlevminoffset} " in TS 38.304 [20]. Actual value Q _{rxlevminoffset} = field value * 2 [dB]. If absent, the UE applies the (default) value of 0 dB for Q _{rxlevminoffset} . Affects the minimum required Rx level in the cell.
q-RxLevMinSUL Parameter "Q _{rxlevmin} " in TS 38.304 [20], applicable for serving cell.
reselectionMeasurementsNR This field indicates that a UE that is configured for NR reselection measurements shall report availability of these measurements when establishing or resuming a connection in this cell.
sdt-BeamFailureRecoveryProhibitTimer The value of the prohibit timer used for RACH for beam failure indication during SDT as specified in TS 38.321 [3]. Value <i>ms50</i> corresponds to 50 milliseconds, value <i>ms100</i> corresponds to 100 milliseconds and so on.
sdt-DataVolumeThreshold Data volume threshold used to determine whether SDT can be initiated, as specified in TS 38.321 [3]. Value <i>byte32</i> corresponds to 32 bytes, value <i>byte100</i> corresponds to 100 bytes, and so on.
sdt-LogicalChannelSR-DelayTimer The value of <i>logicalChannelSR-DelayTimer</i> applied during SDT for logical channels configured with SDT, as specified in TS 38.321 [3]. Value in number of subframes. Value <i>sf20</i> corresponds to 20 subframes, <i>sf40</i> corresponds to 40 subframes, and so on. If <i>sdt-LogicalChannelSR-DelayTimer-r18</i> is absent and <i>sdt-LogicalChannelSR-DelayTimer-r17</i> is present then, the UE applies the value configured in <i>sdt-LogicalChannelSR-DelayTimer-r17</i> for this field. If this field is not configured, then <i>logicalChannelSR-DelayTimer</i> is not applied for SDT logical channels.
sdt-RSRP-Threshold RSRP threshold used to determine whether SDT procedure can be initiated, as specified in TS 38.321 [3].
servingCellConfigCommon Configuration of the serving cell.
t319a Initial value of the timer T319a used for detection of SDT failure. Value <i>ms100</i> corresponds to 100 milliseconds, value <i>ms200</i> corresponds to 200 milliseconds and so on. If <i>t319a-r18</i> is absent, the UE applies the value configured in <i>t319a-r17</i> .
uac-AccessCategory1-SelectionAssistanceInfo Information used to determine whether Access Category 1 applies to the UE, as defined in TS 22.261 [25]. If <i>plmnCommon</i> is chosen, the <i>UAC-AccessCategory1-SelectionAssistanceInfo</i> is applicable to all the PLMNs and SNPNs in <i>plmn-IdentityInfoList</i> and <i>npn-IdentityInfoList</i> . If <i>individualPLMNList</i> is chosen, the 1 st entry in the list corresponds to the first network within all of the PLMNs and SNPNs across the <i>plmn-IdentityList</i> and the <i>npn-IdentityInfoList</i> , the 2 nd entry in the list corresponds to the second network within all of the PLMNs and SNPNs across the <i>plmn-IdentityList</i> and the <i>npn-IdentityInfoList</i> and so on. If <i>uac-AC1-SelectAssistInfo-r16</i> is present, the UE shall ignore the <i>uac-AccessCategory1-SelectionAssistanceInfo</i> .

uac-AC1-SelectAssistInfo

Information used to determine whether Access Category 1 applies to the UE, as defined in TS 22.261 [25]. The 1st entry in the list corresponds to the first network within all of the PLMNs and SNPNs across the *plmn-IdentityList* and *npn-IdentityInfoList*, the 2nd entry in the list corresponds to the second network within all of the PLMNs and SNPNs across the *plmn-IdentityList* and the *npn-IdentityInfoList* and so on. Value *notConfigured* indicates that Access Category1 is not configured for the corresponding PLMN/SNPN.

uac-BarringForCommon

Common access control parameters for each access category. Common values are used for all PLMNs/SNPNs, unless overwritten by the PLMN/SNPN specific configuration provided in *uac-BarringPerPLMN-List*. The parameters are specified by providing an index to the set of configurations (*uac-BarringInfoSetList*). UE behaviour upon absence of this field is specified in clause 5.3.14.2.

ue-TimersAndConstants

Timer and constant values to be used by the UE. The cell operating as PCell always provides this field.

useFullResumeID

Indicates which resume identifier and Resume request message should be used. UE uses *fullI-RNTI* and *RRCResumeRequest1* if the field is present, or *shortI-RNTI* and *RRCResumeRequest* if the field is absent.

Conditional Presence	Explanation
<i>2RxXR</i>	This field is mandatory present if <i>cellBarred2RxXR</i> is present, otherwise it is absent, Need R.
<i>EDRX-RC</i>	The field is optionally present, Need R, in a cell that enables <i>eDRX-AllowedIdle</i> , otherwise it is absent.
<i>EM-Barring</i>	The field is optionally present, Need R, in a cell that supports (e)RedCap or 2Rx XR UEs, otherwise it is absent.
<i>MINT</i>	The field is optionally present, Need R, in a cell that provides a configuration for disaster roaming, otherwise it is absent, Need R.
<i>MT-SDT1</i>	This field is optionally present, Need S, in a cell that supports MT-SDT if <i>sdt-ConfigCommon-r17</i> is not present, otherwise it is absent.
<i>MT-SDT2</i>	This field is mandatory present in a cell that supports MT-SDT if <i>sdt-ConfigCommon-r17</i> is not present, otherwise it is absent.
<i>NTN</i>	The field is optionally present, Need S, in a cell where <i>cellBarredNTN</i> is included with value <i>notBarred</i> , otherwise it is absent.
<i>Standalone</i>	The field is mandatory present in a cell that supports standalone operation, otherwise it is absent.

– ***SidelinkUEInformationNR***

The *SidelinkUEInformationNR* message is used for the indication of NR sidelink UE information to the network.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

***SidelinkUEInformationNR* message**

-- ASN1START
-- TAG-SIDELINKUEINFORMATIONNR-START

SidelinkUEInformationNR-r16 ::=	SEQUENCE {	
criticalExtensions	CHOICE {	
sidelinkUEInformationNR-r16	SidelinkUEInformationNR-r16-IEs,	
criticalExtensionsFuture	SEQUENCE {}	
}		
SidelinkUEInformationNR-r16-IEs ::=	SEQUENCE {	
sl-RxInterestedFreqList-r16	SL-InterestedFreqList-r16	OPTIONAL,
sl-TxResourceReqList-r16	SL-TxResourceReqList-r16	OPTIONAL,
sl-FailureList-r16	SL-FailureList-r16	OPTIONAL,
lateNonCriticalExtension	OCTET STRING	OPTIONAL,
nonCriticalExtension	SidelinkUEInformationNR-v1700-IEs	OPTIONAL
}		
SidelinkUEInformationNR-v1700-IEs ::=	SEQUENCE {	
sl-TxResourceReqList-v1700	SL-TxResourceReqList-v1700	OPTIONAL,
sl-RxDRX-ReportList-v1700	SL-RxDRX-ReportList-v1700	OPTIONAL,
sl-RxInterestedGC-BC-DestList-r17	SL-RxInterestedGC-BC-DestList-r17	OPTIONAL,
sl-RxInterestedFreqListDisc-r17	SL-InterestedFreqList-r16	OPTIONAL,
sl-TxResourceReqListDisc-r17	SL-TxResourceReqListDisc-r17	OPTIONAL,
sl-TxResourceReqListCommRelay-r17	SL-TxResourceReqListCommRelay-r17	OPTIONAL,
ue-Type-r17	ENUMERATED {relayUE, remoteUE}	OPTIONAL,
sl-SourceIdentityRemoteUE-r17	SL-SourceIdentity-r17	OPTIONAL,
nonCriticalExtension	SidelinkUEInformationNR-v1800-IEs	OPTIONAL
}		
SidelinkUEInformationNR-v1800-IEs ::=	SEQUENCE {	
sl-CarrierFailureList-r18	SL-CarrierFailureList-r18	OPTIONAL,
sl-TxResourceReqListL2-U2U-r18	SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-TxResourceReqL2-U2U-r18	OPTIONAL,
sl-PosRxInterestedFreqList-r18	SL-InterestedFreqList-r16	OPTIONAL,
sl-PosTxResourceReqList-r18	SL-PosTxResourceReqList-r18	OPTIONAL,
nonCriticalExtension	SidelinkUEInformationNR-v1840-IEs	OPTIONAL
}		
SidelinkUEInformationNR-v1840-IEs ::=	SEQUENCE {	
sl-PosRxInterestedFreqList2-r18	SL-InterestedFreqList-r16	OPTIONAL,
nonCriticalExtension	SEQUENCE {}	OPTIONAL
}		
SL-InterestedFreqList-r16 ::=	SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF INTEGER (1..maxNrofFreqSL-r16)	
SL-TxResourceReqList-r16 ::=	SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-TxResourceReq-r16	
SL-PosTxResourceReqList-r18 ::=	SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-PosTxResourceReq-r18	
SL-TxResourceReq-r16 ::=	SEQUENCE {	
sl-DestinationIdentity-r16	SL-DestinationIdentity-r16,	
sl-CastType-r16	ENUMERATED {broadcast, groupcast, unicast, spare1},	
sl-RLC-ModeIndicationList-r16	SEQUENCE (SIZE (1.. maxNrofSLRB-r16)) OF SL-RLC-ModeIndication-r16	OPTIONAL,
sl-QoS-InfoList-r16	SEQUENCE (SIZE (1..maxNrofSL-QFIsPerDest-r16)) OF SL-QoS-Info-r16	OPTIONAL,
sl-TypeTxSyncList-r16	SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-TypeTxSync-r16	OPTIONAL,
sl-TxInterestedFreqList-r16	SL-TxInterestedFreqList-r16	OPTIONAL

```

    sl-CapabilityInformationSidelink-r16  OCTET STRING                                OPTIONAL
}

SL-TxResourceReqList-v1700 ::= SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-TxResourceReq-v1700

SL-RxDRX-ReportList-v1700 ::= SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-RxDRX-Report-v1700

SL-TxResourceReq-v1700 ::= SEQUENCE {
    sl-DRX-InfoFromRxList-r17 SEQUENCE (SIZE (1..maxNrofSL-RxInfoSet-r17)) OF SL-DRX-ConfigUC-SemiStatic-r17 OPTIONAL,
    sl-DRX-Indication-r17 ENUMERATED {on, off} OPTIONAL,
    ...,
    [[
        sl-QoS-InfoList-v1800 SEQUENCE (SIZE (1..maxNrofSL-QFIsPerDest-r16)) OF SL-QoS-Info-v1800 OPTIONAL
    ]]
}

SL-RxDRX-Report-v1700 ::= SEQUENCE {
    sl-DRX-ConfigFromTx-r17 SL-DRX-ConfigUC-SemiStatic-r17,
    ...
}

SL-RxInterestedGC-BC-DestList-r17 ::= SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-RxInterestedGC-BC-Dest-r17

SL-RxInterestedGC-BC-Dest-r17 ::= SEQUENCE {
    sl-RxInterestedQoS-InfoList-r17 SEQUENCE (SIZE (1..maxNrofSL-QFIsPerDest-r16)) OF SL-QoS-Info-r16,
    sl-DestinationIdentity-r16 SL-DestinationIdentity-r16
}

SL-TxResourceReqListDisc-r17 ::= SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-TxResourceReqDisc-r17

SL-TxResourceReqDisc-r17 ::= SEQUENCE {
    sl-DestinationIdentityDisc-r17 SL-DestinationIdentity-r16,
    sl-SourceIdentityRelayUE-r17 SL-SourceIdentity-r17 OPTIONAL,
    sl-CastTypeDisc-r17 ENUMERATED {broadcast, groupcast, unicast, spare1},
    sl-TxInterestedFreqListDisc-r17 SL-TxInterestedFreqList-r16,
    sl-TypeTxSyncListDisc-r17 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-TypeTxSync-r16,
    sl-DiscoveryType-r17 ENUMERATED {relay, non-Relay},
    ...,
    [[
        ue-TypeU2U-r18 ENUMERATED {relayUE, remoteUE} OPTIONAL
    ]]
}

SL-TxResourceReqListCommRelay-r17 ::= SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-TxResourceReqCommRelayInfo-r17

SL-TxResourceReqCommRelayInfo-r17 ::= SEQUENCE {
    sl-RelayDRXConfig-r17 SL-TxResourceReq-v1700 OPTIONAL,
    sl-TxResourceReqCommRelay-r17 SL-TxResourceReqCommRelay-r17
}

SL-TxResourceReqCommRelay-r17 ::= CHOICE {
    sl-TxResourceReqL2U2N-Relay-r17 SL-TxResourceReqL2U2N-Relay-r17,
    sl-TxResourceReqL3U2N-Relay-r17 SL-TxResourceReq-r16
}

```

```

SL-TxResourceReqL2U2N-Relay-r17 ::= SEQUENCE {
    sl-DestinationIdentityL2U2N-r17 SL-DestinationIdentity-r16 OPTIONAL,
    sl-TxInterestedFreqListL2U2N-r17 SL-TxInterestedFreqList-r16,
    sl-TypeTxSyncListL2U2N-r17 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-TypeTxSync-r16,
    sl-LocalID-Request-r17 ENUMERATED {true} OPTIONAL,
    sl-PagingIdentityRemoteUE-r17 SL-PagingIdentityRemoteUE-r17 OPTIONAL,
    sl-CapabilityInformationSidelink-r17 OCTET STRING OPTIONAL,
    ...
}

SL-TxResourceReqL2-U2U-r18 ::= SEQUENCE {
    sl-DestinationIdentityL2-U2U-r18 SL-DestinationIdentity-r16 OPTIONAL,
    sl-TxInterestedFreqListL2-U2U-r18 SL-TxInterestedFreqList-r16,
    sl-TypeTxSyncListL2-U2U-r18 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-TypeTxSync-r16,
    sl-CapabilityInformationSidelink-r18 OCTET STRING OPTIONAL,
    sl-U2U-InfoList-r18 SEQUENCE (SIZE (1.. maxNrofRemoteUE-r17)) OF SL-U2U-Info-r18 OPTIONAL,
    sl-RLC-ModeIndicationListL2-U2U-r18 SEQUENCE (SIZE (1.. maxNrofSLRB-r16)) OF SL-RLC-Mode-r18 OPTIONAL,
    ...
}

SL-U2U-Info-r18 ::= SEQUENCE {
    sl-U2U-Identity-r18 CHOICE {
        sl-TargetUE-Identity-r18 SL-DestinationIdentity-r16,
        sl-SourceUE-Identity-r18 SL-SourceIdentity-r17
    },
    sl-E2E-QoS-InfoList-r18 SEQUENCE (SIZE (1.. maxNrofSL-QFIsPerDest-r16)) OF SL-QoS-Info-r16 OPTIONAL,
    sl-PerHop-QoS-InfoList-r18 SEQUENCE (SIZE (1.. maxNrofSL-QFIsPerDest-r16)) OF SL-SplitQoS-Info-r18 OPTIONAL,
    sl-PerSLRB-QoS-InfoList-r18 SEQUENCE (SIZE (1.. maxNrofSLRB-r16)) OF SL-PerSLRB-QoS-Info-r18 OPTIONAL,
    sl-CapabilityInformationTargetRemoteUE-r18 OCTET STRING OPTIONAL
}

SL-PosTxResourceReq-r18 ::= SEQUENCE {
    sl-PosDestinationIdentity-r18 SL-DestinationIdentity-r16,
    sl-PosCastType-r18 ENUMERATED {broadcast, groupcast, unicast, spare1},
    sl-PosTxInterestedFreqList-r18 SL-TxInterestedFreqList-r16 OPTIONAL,
    sl-PosTypeTxSyncList-r18 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-TypeTxSync-r16 OPTIONAL,
    sl-PosQoS-InfoList-r18 SEQUENCE (SIZE (1..maxNrofSL-PRS-PerDest-r18)) OF SL-PRS-QoS-Info-r18 OPTIONAL,
    sl-CapabilityInformationSidelink-r18 OCTET STRING OPTIONAL,
    ...,
    [[
        sl-PosTxInterestedFreqList2-r18 SL-TxInterestedFreqList-r16 OPTIONAL
    ]]
}

SL-TxInterestedFreqList-r16 ::= SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF INTEGER (1..maxNrofFreqSL-r16)

SL-QoS-Info-r16 ::= SEQUENCE {
    sl-QoS-FlowIdentity-r16 SL-QoS-FlowIdentity-r16,
    sl-QoS-Profile-r16 SL-QoS-Profile-r16 OPTIONAL
}

SL-QoS-Info-v1800 ::= SEQUENCE {
    sl-TxInterestedFreqList-r18 SL-TxInterestedFreqList-r16,

```

```

    sl-TxProfile-r18          SL-TxProfile-r18          OPTIONAL,
    ...
}

SL-TxProfile-r18 ::=          ENUMERATED {backwardsCompatible, backwardsIncompatible}

SL-RLC-ModeIndication-r16 ::= SEQUENCE {
    sl-Mode-r16                CHOICE {
        sl-AM-Mode-r16         NULL,
        sl-UM-Mode-r16         NULL
    },
    sl-QoS-InfoList-r16        SEQUENCE (SIZE (1..maxNrofSL-QFIsPerDest-r16)) OF SL-QoS-Info-r16
}

SL-FailureList-r16 ::=        SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-Failure-r16

SL-Failure-r16 ::=            SEQUENCE {
    sl-DestinationIdentity-r16 SL-DestinationIdentity-r16,
    sl-Failure-r16             ENUMERATED {rlf,configFailure, drxReject-v1710, spare5, spare4, spare3, spare2, spare1}
}

SL-CarrierFailureList-r18 ::= SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-CarrierFailure-r18

SL-CarrierFailure-r18 ::=     SEQUENCE {
    sl-DestinationIdentity-r18 SL-DestinationIdentity-r16,
    sl-CarrierFailure-r18      SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF INTEGER (1..maxNrofFreqSL-r16)
}

SL-SplitQoS-Info-r18 ::=     SEQUENCE {
    sl-QoS-FlowIdentity-r18    SL-QoS-FlowIdentity-r16,
    sl-SplitPacketDelayBudget-r18 INTEGER (0..1023)
    ...
}
OPTIONAL,

SL-PerSLRB-QoS-Info-r18 ::=  SEQUENCE {
    sl-RemoteUE-SLRB-Identity-r18 SLRB-Uu-ConfigIndex-r16,
    sl-QoS-ProfilePerSLRB-r18      SL-QoS-Profile-r16
}
OPTIONAL

SL-PRS-QoS-Info-r18 ::=      SEQUENCE {
    sl-PRS-Priority-r18          INTEGER (1..8)
    sl-PRS-DelayBudget-r18       INTEGER (0..1023)
    sl-PRS-Bandwidth-r18         ENUMERATED {mhz5, mhz10, mhz15, mhz20, mhz25, mhz30, mhz35, mhz40,
    mhz45, mhz50, mhz60, mhz70, mhz80, mhz90, mhz100, mhz200, mhz400,
    spare15, spare14, spare13, spare12, spare11, spare10, spare9, spare8,
    spare7, spare6, spare5, spare4, spare3, spare2, spare1}
    ...
}
OPTIONAL,
OPTIONAL,
OPTIONAL,

SL-RLC-Mode-r18 ::=          CHOICE {
    sl-AM-Mode-r18             NULL,
    sl-UM-Mode-r18             NULL
}

```

-- TAG-SIDELINKUEINFORMATIONNR-STOP
 -- ASN1STOP

SidelinkUEInformationNR field descriptions
<i>sl-PosRxInterestedFreqList</i> Indicates the index of frequency where dedicated SL-PRS resource pool(s) locates on which the UE is interested to perform SL-PRS measurement. The value 1 corresponds to the frequency of first entry in <i>sl-PosFreqInfoList</i> broadcast in <i>SIB23</i>, the value 2 corresponds to the frequency of second entry in <i>sl-PosFreqInfoList</i> broadcast in <i>SIB23</i> and so on. In this release, only value 1 can be included in the interested frequency list.
<i>sl-PosRxInterestedFreqList2</i> Indicates the index of frequency where shared SL-PRS resource pool(s) locates on which the UE is interested to perform SL-PRS measurement. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i>, the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i>, the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on. The list of interested frequencies indicated by this field should be a subset of the frequencies indicated by the field <i>sl-RxInterestedFreqList</i>.
<i>sl-PosTxResourceReqList</i> List of parameters to request the transmission resources for NR sidelink positioning for the associated destination.
<i>sl-RxDRX-ReportList</i> Indicates the accepted DRX configuration that is received from the peer UE and reported to the network for NR sidelink unicast communication.
<i>sl-RxInterestedFreqList</i> Indicates the index of frequency on which the UE is interested to receive NR sidelink communication. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i>, the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i>, the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.
<i>sl-RxInterestedGC-BC-DestList</i> Indicates the reported QoS profile and associated destination for which UE is interested in reception to the network for NR sidelink groupcast and broadcast communication, or for NR sidelink discovery or ProSe Direct Link Establishment Request as described in TS 24.554 [72], or for Direct Link Establishment Request (TS 24.587 [57]).
<i>sl-SourceIdentityRemoteUE</i> This field is used to indicate the Source Layer-2 ID to be used to establish PC5 link with the target L2 U2N Relay UE for path switch.
<i>sl-TxResourceReq</i> Parameters to request the transmission resources for NR sidelink communication to the network in the Sidelink UE Information report.
<i>sl-TxResourceReqList</i> List of parameters to request the transmission resources for NR sidelink communication for the associated destination. If <i>sl-TxResourceReqList-v1700</i> is present, it shall contain the same number of entries, listed in the same order as in <i>sl-TxResourceReqList-r16</i>.
<i>ue-Type</i> Indicates the UE is acting as U2N Relay UE or U2N Remote UE.

SL-TxResourceReq field descriptions
sl-CapabilityInformationSidelink Includes the <i>UECapabilityInformationSidelink</i> message (which can be also included in <i>ueCapabilityInformationSidelink-r16</i> in <i>UECapabilityEnquirySidelink</i> from peer UE) received from the peer UE.
sl-CastType Indicates the cast type for the corresponding destination for which to request the resource.
sl-DestinationIdentity Indicates the destination for which the TX resource request and allocation from the network are concerned.
sl-DRX-Indication Indicates the sidelink DRX is applied (value <i>on</i>) or not applied (value <i>off</i>) for the associated destination. This field is only valid for NR sidelink groupcast communication.
sl-DRX-InfoFromRxList Indicates list of the sidelink DRX configurations as assistance information received from the peer UE for NR sidelink unicast communication.
sl-QoS-InfoList Includes the QoS profile of the sidelink QoS flow as specified in TS 23.287 [55]. If <i>sl-QoS-InfoList-v1800</i> is included, shall include the same number of entries, and listed in the same order, as in <i>sl-QoS-InfoList-r16</i> .
sl-QoS-FlowIdentity This identity uniquely identifies one sidelink QoS flow between the UE and the network in the scope of UE, which is unique for different destination and cast type.
sl-RLC-ModeIndicationList Each entry of this field indicates the RLC mode and optionally the related QoS profiles for the sidelink radio bearer, which has not been configured by the network and is initiated by another UE in unicast. The RLC mode for one sidelink radio bearer is aligned between UE and NW by the <i>sl-QoS-FlowIdentity</i> .
sl-TxInterestedFreqList Each entry of this field indicates the index of frequency on which the UE is interested to transmit NR sidelink communication, for each destination. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> , the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.
sl-TypeTxSyncList A list of synchronization reference used by the UE. The UE shall include the same number of entries, listed in the same order, as in <i>sl-TxInterestedFreqList</i> , i.e. one for each carrier frequency included in <i>sl-TxInterestedFreqList</i> .

SL-Failure field descriptions
sl-DestinationIdentity Indicates the destination for which the SL failure is reporting for unicast.
sl-Failure Indicates the sidelink cause for the sidelink RLF (value <i>rlf</i>), sidelink AS configuration failure (value <i>configFailure</i>) and the rejection of sidelink DRX configuration (value <i>drxReject-v1710</i>) for the associated destination for unicast.

SL-RxDRX-Report field descriptions
sl-DRX-ConfigFromTx Indicates the sidelink DRX configuration received from the peer UE for NR sidelink unicast communication.

SL-RxInterestedGC-BC-Dest field descriptions
sl-RxInterestedQoS-InfoList Indicates the QoS profile for which UE reports its interested service to which SL DRX is applied to the network, for NR sidelink groupcast or broadcast reception.

SL-TxResourceReqDisc field descriptions
sl-CastTypeDisc Indicates the cast type for the NR sidelink discovery messages. Only value <i>broadcast</i> can be set in this release.
sl-DestinationIdentityDisc This field is used to indicate the destination L2 ID for which the TX resource request and allocation from the network are concerned for relay discovery and non-relay discovery.
sl-SourceIdentityRelayUE This field is used to indicate the source L2 ID of relay-related discovery transmission by L2 U2N Relay UE.
sl-TxInterestedFreqListDisc Each entry of this field indicates the index of frequency on which the UE is interested to transmit NR sidelink discovery. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of second entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> and so on. In this release, only value 1 can be included in the interested frequency list. In this release, only one entry can be included in the list.
SL-PosTxResourceReq field descriptions
sl-CapabilityInformationSidelink Includes the <i>UECapabilityInformationSidelink</i> message (which can be also included in <i>ueCapabilityInformationSidelink-r16</i> in <i>UECapabilityEnquirySidelink</i> from peer UE) received from the peer UE.
sl-PosCastType Indicates the cast type for the SL-PRS transmission.
sl-PosDestinationIdentity This field is used to indicate the destination L2 ID for which the TX resource request and allocation from the network are concerned for SL-PRS transmission
sl-PosQoS-InfoList This field is used to indicate the QoS information for SL-PRS transmission.
sl-PosTxInterestedFreqList Each entry of this field indicates the index of frequency in <i>SIB23</i> on which the UE is interested to transmit SL-PRS. The value 1 corresponds to the frequency of first entry in <i>sl-PosFreqInfoList</i> broadcast in <i>SIB23</i> , the value 2 corresponds to the frequency of second entry in <i>sl-PosFreqInfoList</i> broadcast in <i>SIB23</i> and so on. In this release, only value 1 can be included in the interested frequency list. In this release, only one entry can be included in the list.
sl-PosTxInterestedFreqList2 Each entry of this field indicates the index of frequency in <i>SIB12</i> on which the UE is interested to transmit SL-PRS. The value 1 corresponds to the frequency of first entry in <i>sl-PosFreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> , the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on. The list of interested frequencies indicated by this field should be a subset of the frequencies indicated by the field <i>sl-TxInterestedFreqList</i> .
sl-PosTypeTxSyncList A list of synchronization references used by the UE. The UE shall include the same number of entries, listed in the same order, as in <i>sl-PosTxInterestedFreqList</i> , i.e. one for each carrier frequency included in <i>sl-PosTxInterestedFreqList</i> .
sl-PRS-DelayBudget Indicates the SL-PRS delay budget provided by upper layers (see TS 38.355 [77]).
sl-PRS-Priority Indicates the priority of SL-PRS provided by upper layers (see TS 38.355 [77]). Value 1 is the highest priority whereas value 8 is the lowest priority.
sl-PRS-Bandwidth Indicates the desired bandwidth of the requested SL-PRS resources provided by upper layers (see TS 38.355 [77]) in the unit of MHz.

<i>SL-TxResourceReqCommRelayInfo</i> field descriptions
<i>sl-RelayDRXConfig</i> This field is used to indicate the applied sidelink DRX configuration for the relay related communication.
<i>sl-DestinationIdentityL2U2N</i> This field is used to indicate the destination L2 ID for which the TX resource request and allocation from the network are concerned for the established PC5 link for relay by L2 U2N Relay UE.
<i>sl-LocalID-Request</i> This field is used to request local UE ID for the corresponding destination by the L2 U2N Relay UE.
<i>sl-TxInterestedFreqListL2U2N</i> Each entry of this field indicates the index of frequency on which the UE is interested to transmit NR sidelink communication for established PC5 link for relay. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of second entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> and so on. In this release, only value 1 can be included in the interested frequency list. In this release, only one entry can be included in the list.
<i>sl-PagingIdentityRemoteUE</i> This field is used to indicate the paging UE ID(s) for the corresponding destination(s) by the L2 U2N Relay UE.

<i>SL-QoS-Info</i> field descriptions
<i>sl-TxInterestedFreqList</i> Each entry of this field indicates the index of frequency on which the UE is interested to transmit NR sidelink communication, for each QoS flow. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> , the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.
<i>sl-TxProfile</i> Indicating Tx profile for each QoS flow, i.e., compatibility of supporting SL CA operation. The IE of <i>SL-TxProfile</i> is referred by upper layer signaling as specified TS 24.588 [78].

<i>SL-CarrierFailure</i> field descriptions
<i>sl-CarrierFailure</i> Indicate the carrier(s) where the Sidelink carrier failure has been indicated by lower layer as specified in TS 38.321 [3]. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> , the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.
<i>sl-DestinationIdentity</i> This field is used to indicate the destination L2 ID for which the per-carrier failure report is concerned.

<i>SL-TxResourceReqL2-U2U</i> field descriptions
<i>sl-CapabilityInformationSidelink</i> Includes the <i>UECapabilityInformationSidelink</i> message (which can be also included in <i>ueCapabilityInformationSidelink-r16</i> in <i>UECapabilityEnquirySidelink</i> from the L2 U2U Relay UE) received from the L2 U2U Relay UE by the L2 U2U Remote UE or includes the <i>UECapabilityInformationSidelink</i> message (which can be also included in <i>ueCapabilityInformationSidelink-r16</i> in <i>UECapabilityEnquirySidelink</i> from the target L2 U2U Remote UE) received from the target L2 U2U Remote UE by the L2 U2U Relay UE.
<i>sl-DestinationIdentityL2-U2U</i> This field is used to indicate the destination L2 ID for which the TX resource request and allocation from the network are concerned for the established per-hop PC5 link between the L2 U2U Remote UE and L2 U2U Relay UE.
<i>sl-TxInterestedFreqListL2-U2U</i> Each entry of this field indicates the index of frequency on which the UE is interested to transmit NR sidelink communication for established per-hop PC5 link. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in SIB12, the value 2 corresponds to the frequency of second entry in <i>sl-FreqInfoList</i> broadcast in SIB12 and so on. In this release, only value 1 can be included in the interested frequency list. In this release, only one entry can be included in the list.
<i>sl-U2U-InfoList</i> This field indicates the information related to a list of end-to-end PC5 links.

<i>SL-U2U-Info</i> field descriptions
<i>sl-CapabilityInformationTargetRemoteUE</i> Includes the <i>UECapabilityInformationSidelink</i> message (which can be also included in <i>ueCapabilityInformationSidelink-r16</i> in <i>UECapabilityEnquirySidelink</i> from the target L2 U2U Remote UE) received from the target L2 U2U Remote UE. In this version of the specification, only <i>outOfOrderDeliverySidelink-r16</i> and <i>accessStratumReleaseSidelink-r16</i> are included in the <i>UECapabilityInformationSidelink</i> message.
<i>sl-E2E-QoS-InfoList</i> This field is used by L2 U2U Remote UE to indicate a list of end-to-end QoS info.
<i>sl-PerHop-QoS-InfoList</i> This field is used by L2 U2U Remote UE to indicate a list of split QoS info for the first hop.
<i>sl-PerSLRB-QoS-InfoList</i> This field is used by L2 U2U Relay UE to indicate a list of split QoS info for the second hop in per-SLRB level, with each entry in accordance with an end-to-end SLRB.
<i>sl-U2U-Identity</i> This field is to identify an end-to-end PC5 link. For a L2 U2U Remote UE acting as source UE it includes <i>sl-TargetUE-Identity</i> to indicate the target L2 U2U Remote UE on the second hop, and for a L2 U2U Relay UE, it includes <i>sl-SourceUE-Identity</i> to indicate the source L2 U2U Remote UE on the first hop.

— *SystemInformation*

The *SystemInformation* message is used to convey one or more System Information Blocks or Positioning System Information Blocks. All the SIBs or posSIBs included are transmitted with the same periodicity.

Signalling radio bearer: N/A

RLC-SAP: TM

Logical channels: BCCH

Direction: Network to UE

SystemInformation message

```

-- ASN1START
-- TAG-SYSTEMINFORMATION-START

SystemInformation ::=
    criticalExtensions
        systemInformation
        criticalExtensionsFuture-r16
        posSystemInformation-r16
        criticalExtensionsFuture
    }
}

SystemInformation-IEs ::=
    sib-TypeAndInfo
        sib2
        sib3
        sib4
        sib5
        sib6
        sib7
        sib8
        sib9
        ...,
        sib10-v1610
        sib11-v1610
        sib12-v1610
        sib13-v1610
        sib14-v1610
        sib15-v1700
        sib16-v1700
        sib17-v1700
        sib18-v1700
        sib19-v1700
        sib20-v1700
        sib21-v1700
        sib22-v1800
        sib23-v1800
        sib24-v1800
        sib25-v1800
        sib17bis-v1820
    },
    lateNonCriticalExtension
    nonCriticalExtension
}

SEQUENCE {
    CHOICE {
        SystemInformation-IEs,
        CHOICE {
            PosSystemInformation-r16-IEs,
            SEQUENCE {}
        }
    }
}

SEQUENCE {
    SEQUENCE (SIZE (1..maxSIB)) OF CHOICE {
        SIB2,
        SIB3,
        SIB4,
        SIB5,
        SIB6,
        SIB7,
        SIB8,
        SIB9,
        SIB10-r16,
        SIB11-r16,
        SIB12-r16,
        SIB13-r16,
        SIB14-r16,
        SIB15-r17,
        SIB16-r17,
        SIB17-r17,
        SIB18-r17,
        SIB19-r17,
        SIB20-r17,
        SIB21-r17,
        SIB22-r18,
        SIB23-r18,
        SIB24-r18,
        SIB25-r18,
        SIB17bis-r18
    }
}

OCTET STRING
SEQUENCE {}

OPTIONAL,
OPTIONAL

-- TAG-SYSTEMINFORMATION-STOP
-- ASN1STOP

```

– *UEAssistanceInformation*

The *UEAssistanceInformation* message is used for the indication of UE assistance information to the network.

Signalling radio bearer: SRB1, SRB3

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

UEAssistanceInformation message

```
-- ASN1START
-- TAG-UEASSISTANCEINFORMATION-START

UEAssistanceInformation ::=
    criticalExtensions
        ueAssistanceInformation
        criticalExtensionsFuture
    }
}

UEAssistanceInformation-IEs ::=
    delayBudgetReport
    lateNonCriticalExtension
    nonCriticalExtension
}

DelayBudgetReport ::=
    type1
    ...
}

UEAssistanceInformation-v1540-IEs ::=
    overheatingAssistance
    nonCriticalExtension
}

OverheatingAssistance ::=
    reducedMaxCCs
    reducedMaxBW-FR1
    reducedMaxBW-FR2
    reducedMaxMIMO-LayersFR1
        reducedMIMO-LayersFR1-DL
        reducedMIMO-LayersFR1-UL
    } OPTIONAL,
    reducedMaxMIMO-LayersFR2
        reducedMIMO-LayersFR2-DL
        reducedMIMO-LayersFR2-UL
    }
```

SEQUENCE {

CHOICE {

UEAssistanceInformation-IEs,

SEQUENCE {}

SEQUENCE {

DelayBudgetReport **OPTIONAL,**

OCTET STRING **OPTIONAL,**

UEAssistanceInformation-v1540-IEs **OPTIONAL**

CHOICE {

ENUMERATED {

msMinus1280, msMinus640, msMinus320, msMinus160, msMinus80, msMinus60, msMinus40,

msMinus20, ms0, ms20, ms40, ms60, ms80, ms160, ms320, ms640, ms1280},

SEQUENCE {

OverheatingAssistance **OPTIONAL,**

UEAssistanceInformation-v1610-IEs **OPTIONAL**

SEQUENCE {

ReducedMaxCCs-r16 **OPTIONAL,**

ReducedMaxBW-FR1-r16 **OPTIONAL,**

ReducedMaxBW-FR2-r16 **OPTIONAL,**

SEQUENCE {

MIMO-LayersDL,

MIMO-LayersUL

SEQUENCE {

MIMO-LayersDL,

```

    reducedMIMO-LayersFR2-UL          MIMO-LayersUL
  } OPTIONAL
}
OverheatingAssistance-r17 ::= SEQUENCE {
  reducedMaxBW-FR2-2-r17           SEQUENCE {
    reducedBW-FR2-2-DL-r17         ReducedAggregatedBandwidth-r17,
    reducedBW-FR2-2-UL-r17         ReducedAggregatedBandwidth-r17
  } OPTIONAL,
  reducedMaxMIMO-LayersFR2-2       SEQUENCE {
    reducedMIMO-LayersFR2-2-DL     MIMO-LayersDL,
    reducedMIMO-LayersFR2-2-UL     MIMO-LayersUL
  } OPTIONAL
}

ReducedAggregatedBandwidth ::= ENUMERATED {mhz0, mhz10, mhz20, mhz30, mhz40, mhz50, mhz60, mhz80, mhz100, mhz200, mhz300, mhz400}

ReducedAggregatedBandwidth-r17 ::= ENUMERATED {mhz0, mhz100, mhz200, mhz400, mhz800, mhz1200, mhz1600, mhz2000}

UEAssistanceInformation-v1610-IEs ::= SEQUENCE {
  idc-Assistance-r16                IDC-Assistance-r16                OPTIONAL,
  drx-Preference-r16                DRX-Preference-r16                OPTIONAL,
  maxBW-Preference-r16              MaxBW-Preference-r16              OPTIONAL,
  maxCC-Preference-r16              MaxCC-Preference-r16              OPTIONAL,
  maxMIMO-LayerPreference-r16        MaxMIMO-LayerPreference-r16    OPTIONAL,
  minSchedulingOffsetPreference-r16  MinSchedulingOffsetPreference-r16  OPTIONAL,
  releasePreference-r16              ReleasePreference-r16            OPTIONAL,
  sl-UE-AssistanceInformationNR-r16  SL-UE-AssistanceInformationNR-r16  OPTIONAL,
  referenceTimeInfoPreference-r16    BOOLEAN                        OPTIONAL,
  nonCriticalExtension                UEAssistanceInformation-v1700-IEs  OPTIONAL
}

UEAssistanceInformation-v1700-IEs ::= SEQUENCE {
  ul-GapFR2-Preference-r17          UL-GapFR2-Preference-r17          OPTIONAL,
  musim-Assistance-r17              MUSIM-Assistance-r17              OPTIONAL,
  overheatingAssistance-r17         OverheatingAssistance-r17         OPTIONAL,
  maxBW-PreferenceFR2-2-r17         MaxBW-PreferenceFR2-2-r17         OPTIONAL,
  maxMIMO-LayerPreferenceFR2-2-r17  MaxMIMO-LayerPreferenceFR2-2-r17  OPTIONAL,
  minSchedulingOffsetPreferenceExt-r17 MinSchedulingOffsetPreferenceExt-r17  OPTIONAL,
  rlm-MeasRelaxationState-r17       BOOLEAN                        OPTIONAL,
  bfd-MeasRelaxationState-r17       BIT STRING (SIZE (1..maxNrofServingCells)) OPTIONAL,
  nonSDT-DataIndication-r17         SEQUENCE {
    resumeCause-r17                ResumeCause                OPTIONAL
  }
  scg-DeactivationPreference-r17     ENUMERATED { scg-DeactivationPreferred, noPreference } OPTIONAL,
  uplinkData-r17                    ENUMERATED { true }              OPTIONAL,
  rrm-MeasRelaxationFulfilment-r17  BOOLEAN                        OPTIONAL,
  propagationDelayDifference-r17     PropagationDelayDifference-r17    OPTIONAL,
  nonCriticalExtension                UEAssistanceInformation-v1800-IEs  OPTIONAL
}

UEAssistanceInformation-v1800-IEs ::= SEQUENCE {
  idc-FDM-Assistance-r18             IDC-FDM-Assistance-r18             OPTIONAL,
  idc-TDM-Assistance-r18             IDC-TDM-Assistance-r18             OPTIONAL,
  multiRx-PreferenceFR2-r18          ENUMERATED {single, multiple }    OPTIONAL,

```

```

musim-Assistance-v1800          MUSIM-Assistance-v1800          OPTIONAL,
flightPathInfoAvailable-r18     ENUMERATED {true}             OPTIONAL,
ul-TrafficInfo-r18              UL-TrafficInfo-r18            OPTIONAL,
n3c-RelayUE-InfoList-r18        SEQUENCE (SIZE (0..8)) OF N3C-RelayUE-Info-r18 OPTIONAL,
sl-PRS-UE-AssistanceInformationNR-r18 SL-PRS-UE-AssistanceInformationNR-r18 OPTIONAL,
nonCriticalExtension             SEQUENCE {}                   OPTIONAL
}

IDC-Assistance-r16 ::=          SEQUENCE {
    affectedCarrierFreqList-r16  AffectedCarrierFreqList-r16    OPTIONAL,
    affectedCarrierFreqCombList-r16 AffectedCarrierFreqCombList-r16 OPTIONAL,
    ...
}

AffectedCarrierFreqList-r16 ::= SEQUENCE (SIZE (1.. maxFreqIDC-r16)) OF AffectedCarrierFreq-r16

AffectedCarrierFreq-r16 ::=      SEQUENCE {
    carrierFreq-r16              ARFCN-ValueNR,
    interferenceDirection-r16     ENUMERATED {nr, other, both, spare}
}

AffectedCarrierFreqCombList-r16 ::= SEQUENCE (SIZE (1..maxCombIDC-r16)) OF AffectedCarrierFreqComb-r16

AffectedCarrierFreqComb-r16 ::=  SEQUENCE {
    affectedCarrierFreqComb-r16   SEQUENCE (SIZE (2..maxNrofServingCells)) OF ARFCN-ValueNR    OPTIONAL,
    victimSystemType-r16          VictimSystemType-r16
}

VictimSystemType-r16 ::=        SEQUENCE {
    gps-r16                      ENUMERATED {true}          OPTIONAL,
    glonass-r16                  ENUMERATED {true}           OPTIONAL,
    bds-r16                      ENUMERATED {true}           OPTIONAL,
    galileo-r16                  ENUMERATED {true}           OPTIONAL,
    navIC-r16                    ENUMERATED {true}           OPTIONAL,
    wlan-r16                     ENUMERATED {true}           OPTIONAL,
    bluetooth-r16                ENUMERATED {true}           OPTIONAL,
    ...,
    [[
    uwb-r18                      ENUMERATED {true}           OPTIONAL
    ]]
}

DRX-Preference-r16 ::=          SEQUENCE {
    preferredDRX-InactivityTimer-r16 ENUMERATED {
        ms0, ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60, ms80,
        ms100, ms200, ms300, ms500, ms750, ms1280, ms1920, ms2560, spare9, spare8,
        spare7, spare6, spare5, spare4, spare3, spare2, spare1} OPTIONAL,
    preferredDRX-LongCycle-r16     ENUMERATED {
        ms10, ms20, ms32, ms40, ms60, ms64, ms70, ms80, ms128, ms160, ms256, ms320, ms512,
        ms640, ms1024, ms1280, ms2048, ms2560, ms5120, ms10240, spare12, spare11, spare10,
        spare9, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 } OPTIONAL,
    preferredDRX-ShortCycle-r16    ENUMERATED {
        ms2, ms3, ms4, ms5, ms6, ms7, ms8, ms10, ms14, ms16, ms20, ms30, ms32,
        ms35, ms40, ms64, ms80, ms128, ms160, ms256, ms320, ms512, ms640, spare9,

```

```

        spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 } OPTIONAL,
    preferredDRX-ShortCycleTimer-r16 INTEGER (1..16) OPTIONAL
}

MaxBW-Preference-r16 ::=
    reducedMaxBW-FR1-r16
    reducedMaxBW-FR2-r16
    SEQUENCE {
        ReducedMaxBW-FRx-r16
        ReducedMaxBW-FRx-r16
    } OPTIONAL,
    OPTIONAL

MaxBW-PreferenceFR2-2-r17 ::=
    reducedMaxBW-FR2-2-r17
    reducedBW-FR2-2-DL-r17
    reducedBW-FR2-2-UL-r17
    SEQUENCE {
        SEQUENCE {
            ReducedAggregatedBandwidth-r17
            ReducedAggregatedBandwidth-r17
        } OPTIONAL,
        OPTIONAL
    } OPTIONAL

MaxCC-Preference-r16 ::=
    reducedMaxCCs-r16
    SEQUENCE {
        ReducedMaxCCs-r16
    } OPTIONAL

MaxMIMO-LayerPreference-r16 ::=
    reducedMaxMIMO-LayersFR1-r16
    reducedMIMO-LayersFR1-DL-r16
    reducedMIMO-LayersFR1-UL-r16
    SEQUENCE {
        SEQUENCE {
            INTEGER (1..8),
            INTEGER (1..4)
        } OPTIONAL,
        reducedMaxMIMO-LayersFR2-r16
        reducedMIMO-LayersFR2-DL-r16
        reducedMIMO-LayersFR2-UL-r16
        SEQUENCE {
            INTEGER (1..8),
            INTEGER (1..4)
        } OPTIONAL
    } OPTIONAL

MaxMIMO-LayerPreferenceFR2-2-r17 ::=
    reducedMaxMIMO-LayersFR2-2-r17
    reducedMIMO-LayersFR2-2-DL-r17
    reducedMIMO-LayersFR2-2-UL-r17
    SEQUENCE {
        SEQUENCE {
            INTEGER (1..8),
            INTEGER (1..4)
        } OPTIONAL
    } OPTIONAL

MinSchedulingOffsetPreference-r16 ::= SEQUENCE {
    preferredK0-r16
    preferredK0-SCS-15kHz-r16
    preferredK0-SCS-30kHz-r16
    preferredK0-SCS-60kHz-r16
    preferredK0-SCS-120kHz-r16
    SEQUENCE {
        SEQUENCE {
            ENUMERATED {s11, s12, s14, s16}
            ENUMERATED {s11, s12, s14, s16}
            ENUMERATED {s12, s14, s18, s112}
            ENUMERATED {s12, s14, s18, s112}
        } OPTIONAL,
        preferredK2-r16
        preferredK2-SCS-15kHz-r16
        preferredK2-SCS-30kHz-r16
        preferredK2-SCS-60kHz-r16
        preferredK2-SCS-120kHz-r16
        SEQUENCE {
            ENUMERATED {s11, s12, s14, s16}
            ENUMERATED {s11, s12, s14, s16}
            ENUMERATED {s12, s14, s18, s112}
            ENUMERATED {s12, s14, s18, s112}
        } OPTIONAL,
        OPTIONAL
    } OPTIONAL

MinSchedulingOffsetPreferenceExt-r17 ::= SEQUENCE {

```

```

    preferredK0-r17
      preferredK0-SCS-480kHz-r17
      preferredK0-SCS-960kHz-r17
    }
    preferredK2-r17
      preferredK2-SCS-480kHz-r17
      preferredK2-SCS-960kHz-r17
    }
  }

MUSIM-Assistance-r17 ::=
  musim-PreferredRRC-State-r17
  musim-GapPreferenceList-r17

MUSIM-GapPreferenceList-r17 ::= SEQUENCE (SIZE (1..4)) OF MUSIM-GapInfo-r17

MUSIM-Assistance-v1800 ::=
  musim-GapPriorityPreferenceList-r18
  musim-GapKeepPreference-r18
  musim-CapRestriction-r18
  musim-NeedForGapsInfoNR-r18
  ...

MUSIM-GapPriorityPreferenceList-r18 ::= SEQUENCE (SIZE (1..3)) OF GapPriority-r17

MUSIM-CapRestriction-r18 ::=
  musim-Cell-SCG-ToRelease-r18
  musim-CellToAffectList-r18
  musim-AffectedBandsList-r18
  musim-AvoidedBandsList-r18
  musim-MaxCC-r18

MUSIM-Cell-SCG-ToRelease-r18 ::=
  musim-CellToRelease-r18
  scg-ReleasePreference-r18

MUSIM-CellToRelease-r18 ::=
  SEQUENCE (SIZE (1..maxNrofServingCells)) OF ServCellIndex

MUSIM-CellToAffectList-r18 ::=
  SEQUENCE (SIZE (1..maxNrofServingCells)) OF MUSIM-CellToAffect-r18

MUSIM-CellToAffect-r18 ::=
  musim-ServCellIndex-r18
  musim-MIMO-Layers-DL-r18
  musim-MIMO-Layers-UL-r18
  musim-SupportedBandwidth-DL-r18
  musim-SupportedBandwidth-UL-r18

MUSIM-AffectedBandsList-r18 ::=
  SEQUENCE (SIZE (1..maxBandComb-MUSIM-r18)) OF MUSIM-AffectedBands-r18

```

SEQUENCE {
 ENUMERATED {s18, s16, s132, s148}
 ENUMERATED {s18, s16, s132, s148}
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 SEQUENCE {
 ENUMERATED {s18, s16, s132, s148}
 ENUMERATED {s18, s16, s132, s148}
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 SEQUENCE {
 ENUMERATED {idle, inactive, outOfConnected}
 MUSIM-GapPreferenceList-r17
 OPTIONAL,
 OPTIONAL,
 SEQUENCE (SIZE (1..4)) OF MUSIM-GapInfo-r17
 SEQUENCE {
 MUSIM-GapPriorityPreferenceList-r18
 ENUMERATED {true}
 MUSIM-CapRestriction-r18
 NeedForGapsInfoNR-r16
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 SEQUENCE {
 MUSIM-Cell-SCG-ToRelease-r18
 MUSIM-CellToAffectList-r18
 MUSIM-AffectedBandsList-r18
 MUSIM-AvoidedBandsList-r18
 MUSIM-MaxCC-r18
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 SEQUENCE {
 MUSIM-CellToRelease-r18
 ENUMERATED {true}
 OPTIONAL,
 OPTIONAL,
 SEQUENCE (SIZE (1..maxNrofServingCells)) OF ServCellIndex
 SEQUENCE (SIZE (1..maxNrofServingCells)) OF MUSIM-CellToAffect-r18
 SEQUENCE {
 ServCellIndex,
 INTEGER (1..8)
 INTEGER (1..4)
 SupportedBandwidth-v1700
 SupportedBandwidth-v1700
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 SEQUENCE (SIZE (1..maxBandComb-MUSIM-r18)) OF MUSIM-AffectedBands-r18


```

MUSIM-AffectedBands-r18 ::= SEQUENCE (SIZE (1..maxCandidateBandIndex-r18)) OF MUSIM-CapabilityRestrictedBandParameters-r18

MUSIM-CapabilityRestrictedBandParameters-r18 ::= SEQUENCE {
    musim-bandEntryIndex-r18      MUSIM-BandEntryIndex-r18,
    musim-CapabilityRestricted-r18 SEQUENCE {
        musim-MIMO-Layers-DL-r18    INTEGER (1..8)           OPTIONAL,
        musim-MIMO-Layers-UL-r18    INTEGER (1..4)           OPTIONAL,
        musim-SupportedBandwidth-DL-r18 SupportedBandwidth-v1700 OPTIONAL,
        musim-SupportedBandwidth-UL-r18 SupportedBandwidth-v1700 OPTIONAL
    }
}

MUSIM-AvoidedBandsList-r18 ::= SEQUENCE (SIZE (1..maxBandComb-MUSIM-r18)) OF MUSIM-AvoidedBands-r18

MUSIM-AvoidedBands-r18 ::= SEQUENCE (SIZE (1..maxCandidateBandIndex-r18)) OF MUSIM-BandEntryIndex-r18

MUSIM-BandEntryIndex-r18 ::= INTEGER(1.. maxCandidateBandIndex-r18)

MUSIM-MaxCC-r18 ::= SEQUENCE {
    musim-MaxCC-TotalDL-r18    INTEGER (1..32)           OPTIONAL,
    musim-MaxCC-TotalUL-r18    INTEGER (1..32)           OPTIONAL,
    musim-MaxCC-FR1-DL-r18     INTEGER (1..32)           OPTIONAL,
    musim-MaxCC-FR1-UL-r18     INTEGER (1..32)           OPTIONAL,
    musim-MaxCC-FR2-1-DL-r18   INTEGER (1..32)           OPTIONAL,
    musim-MaxCC-FR2-1-UL-r18   INTEGER (1..32)           OPTIONAL,
    musim-MaxCC-FR2-2-DL-r18   INTEGER (1..32)           OPTIONAL,
    musim-MaxCC-FR2-2-UL-r18   INTEGER (1..32)           OPTIONAL
}

ReleasePreference-r16 ::= SEQUENCE {
    preferredRRC-State-r16     ENUMERATED {idle, inactive, connected, outOfConnected}
}

ReducedMaxBW-FRx-r16 ::= SEQUENCE {
    reducedBW-DL-r16           ReducedAggregatedBandwidth,
    reducedBW-UL-r16           ReducedAggregatedBandwidth
}

ReducedMaxCCs-r16 ::= SEQUENCE {
    reducedCCsDL-r16           INTEGER (0..31),
    reducedCCsUL-r16           INTEGER (0..31)
}

SL-UE-AssistanceInformationNR-r16 ::= SEQUENCE (SIZE (1..maxNrofTrafficPattern-r16)) OF SL-TrafficPatternInfo-r16

SL-TrafficPatternInfo-r16 ::= SEQUENCE {
    trafficPeriodicity-r16     ENUMERATED {ms20, ms50, ms100, ms200, ms300, ms400, ms500, ms600, ms700, ms800, ms900, ms1000},
    timingOffset-r16           INTEGER (0..10239),
    messageSize-r16            BIT STRING (SIZE (8)),
    sl-QoS-FlowIdentity-r16    SL-QoS-FlowIdentity-r16
}

UL-GapFR2-Preference-r17 ::= SEQUENCE {

```

```

    ul-GapFR2-PatternPreference-r17      INTEGER (0..3)                OPTIONAL
  }

PropagationDelayDifference-r17 ::= SEQUENCE (SIZE (1..4)) OF INTEGER (-270..270)

IDC-FDM-Assistance-r18 ::= SEQUENCE {
    affectedCarrierFreqRangeList-r18      AffectedCarrierFreqRangeList-r18      OPTIONAL,
    affectedCarrierFreqRangeCombList-r18  AffectedCarrierFreqRangeCombList-r18  OPTIONAL,
    ...
}

IDC-TDM-Assistance-r18 ::= SEQUENCE {
    cycleLength-r18                       ENUMERATED {ms2, ms3, ms4, ms5, ms6, ms7, ms8, ms10, ms14, ms16, ms20, ms30,
                                                    ms32, ms35, ms40, ms60, ms64, ms70, ms80, ms96, ms100, ms128, ms160,
                                                    ms256, ms320, ms512, ms640, ms1024, ms1280, ms2048, ms2560, ms5120, ms10240},
    startOffset-r18                       INTEGER (0..10239),
    slotOffset-r18                       INTEGER (0..31),
    activeDuration-r18                   CHOICE {
        subMilliSeconds-r18 INTEGER (1..31),
        milliSeconds-r18   ENUMERATED {
            ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
            ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
            ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 }
        },
    ...
}

AffectedCarrierFreqRangeList-r18 ::= SEQUENCE (SIZE (1..maxFreqIDC-r16)) OF AffectedCarrierFreqRange-r18

AffectedCarrierFreqRange-r18 ::= SEQUENCE {
    affectedFreqRange-r18      AffectedFreqRange-r18,
    interferenceDirection-r18  ENUMERATED {nr, other, both, spare},
    victimSystemType-r18      VictimSystemType-r16                OPTIONAL
}

AffectedCarrierFreqRangeCombList-r18 ::= SEQUENCE (SIZE (1..maxCombIDC-r16)) OF AffectedCarrierFreqRangeComb-r18

AffectedCarrierFreqRangeComb-r18 ::= SEQUENCE {
    affectedCarrierFreqRangeComb-r18  SEQUENCE (SIZE (2..maxNrofServingCells)) OF AffectedFreqRange-r18,
    interferenceDirection-r18         ENUMERATED {nr, other, both, spare},
    victimSystemType-r18             VictimSystemType-r16                OPTIONAL
}

AffectedFreqRange-r18 ::= SEQUENCE {
    centerFreq-r18      ARFCN-ValueNR,
    affectedBandwidth-r18 ENUMERATED {khz200, khz400, khz600, khz800, mhz1, mhz2, mhz3, mhz4, mhz5, mhz6,
                                     mhz8, mhz10, mhz20, mhz30, mhz40, mhz50, mhz60, mhz80, mhz100, mhz200,
                                     mhz300, mhz400, spare10, spare9, spare8, spare7, spare6, spare5, spare4,
                                     spare3, spare2, spare1}
}

UL-TrafficInfo-r18 ::= SEQUENCE (SIZE (1..maxNrofPDU-Sessions-r17)) OF PDU-SessionUL-TrafficInfo-r18

PDU-SessionUL-TrafficInfo-r18 ::= SEQUENCE {

```

```

    pdu-SessionID-r18          PDU-SessionID,
    qos-FlowUL-TrafficInfoList-r18 SEQUENCE (SIZE (1..maxNrofQFIs)) OF QOS-FlowUL-TrafficInfo-r18
}

QOS-FlowUL-TrafficInfo-r18 ::= SEQUENCE {
    qfi-r18          QFI,
    jitterRange-r18  SEQUENCE {
        lowerBound-r18 JitterBound-r18,
        upperBound-r18 JitterBound-r18
    } OPTIONAL,
    burstArrivalTime-r18 CHOICE {
        referenceTime ReferenceTime-r16,
        referenceSFN-AndSlot ReferenceSFN-AndSlot-r18
    } OPTIONAL,
    trafficPeriodicity-r18 INTEGER (1..640000) OPTIONAL,
    pdu-SetIdentification-r18 BOOLEAN OPTIONAL,
    psi-Identification-r18  BOOLEAN OPTIONAL,
    ...
}

ReferenceSFN-AndSlot-r18 ::= SEQUENCE {
    referenceSFN-r18 INTEGER (0..1023),
    referenceSlot-r18 INTEGER (0..639)
}

JitterBound-r18 ::= ENUMERATED {ms0, ms0dot5, ms1, ms1dot5, ms2, ms2dot5, ms3, ms3dot5, ms4, ms4dot5, ms5, ms5dot5, ms6, ms6dot5, ms7, beyondMs7}

SL-PRS-UE-AssistanceInformationNR-r18 ::= SEQUENCE (SIZE (1..maxNrofSL-PRS-TxConfig-r18)) OF SL-PRS-TxInfo-r18

SL-PRS-TxInfo-r18 ::= SEQUENCE {
    sl-PRS-Periodicity-r18 ENUMERATED {ms100, ms200, ms300, ms400, ms500, ms600, ms700, ms800, ms900, ms1000, spare6,
                                     spare5, spare4, spare3, spare2, spare1},
    sl-PRS-Priority-r18    INTEGER (1..8) OPTIONAL,
    sl-PRS-DelayBudget-r18 INTEGER (0..1023) OPTIONAL,
    sl-PRS-Bandwidth-r18  ENUMERATED {mhz5, mhz10, mhz15, mhz20, mhz25, mhz30, mhz35, mhz40,
                                     mhz45, mhz50, mhz60, mhz70, mhz80, mhz90, mhz100, mhz200, mhz400,
                                     spare15, spare14, spare13, spare12, spare11, spare10, spare9, spare8,
                                     spare7, spare6, spare5, spare4, spare3, spare2, spare1} OPTIONAL,
    ...
}

-- TAG-UEASSISTANCEINFORMATION-STOP
-- ASN1STOP

```

UEAssistanceInformation field descriptions
activeDuration Indicates the UE's preferred active duration to resolve the IDC problem. Value in multiples of 1/32 ms (subMilliSeconds) or in ms (milliSecond). For the latter, value ms1 corresponds to 1 ms, value ms2 corresponds to 2 ms, and so on.
affectedBandwidth Indicates the bandwidth around the center frequency of the carrier frequency range which is affected by the IDC problem. Value mhz5 corresponds to 5 MHz, value mhz10 corresponds to 10 MHz and so on. If <i>candidateBandwidth</i> is not configured, the UE is allowed to report the frequency range for any bandwidth as indicated by <i>affectedBandwidth</i> , within the frequency band limitation as defined in TS 38.101-1 [15], TS 38.101-2 [39], TS 38.101-3 [34] and TS 38.101-5 [75].
affectedCarrierFreqList Indicates a list of NR carrier frequencies that are affected by IDC problem.
affectedCarrierFreqRangeList Indicates a list of NR carrier frequency ranges that are affected by IDC problem.
affectedCarrierFreqCombList Indicates a list of NR carrier frequency combinations that are affected by IDC problems due to Inter-Modulation Distortion and harmonics from NR when configured with UL CA or NR-DC.
affectedCarrierFreqRangeCombList Indicates a list of NR carrier frequency range combinations that are affected by IDC problems due to Inter-Modulation Distortion and harmonics from NR when configured with UL CA or NR-DC.
bfd-MeasRelaxationState Indicates the relaxation state of BFD measurements. Each bit corresponds to a serving cell of the cell group. A serving cell is mapped to the (<i>servCellIndex</i> +1)-th bit, starting from MSB. A bit that is set to 1 indicates that the UE is performing BFD measurements relaxation on the serving cell mapped on the bit. A bit that is set to 0 indicates that the UE is not performing BFD measurements relaxation on the serving cell mapped on the bit. If a serving cell is not configured to the UE, the corresponding bit is set to 0.
centerFreq Indicates the center frequency of the carrier frequency range which is affected by the IDC problem.
cycleLength Indicates the UE's preferred cycle length to resolve the IDC problem. Value in ms. Value <i>ms2</i> corresponds to 2 ms, value <i>ms3</i> corresponds to 3 ms, and so on.
delayBudgetReport Indicates the UE-preferred adjustment to connected mode DRX.
interferenceDirection Indicates the direction of IDC interference. Value <i>nr</i> indicates that only NR is victim of IDC interference, value <i>other</i> indicates that only another radio is victim of IDC interference and value <i>both</i> indicates that both NR and another radio are victims of IDC interference. The other radio refers to either the ISM radio or GNSS (see TR 36.816 [44]).
minSchedulingOffsetPreference Indicates the UE's preferences on <i>minimumSchedulingOffset</i> of cross-slot scheduling for power saving.
minSchedulingOffsetPreferenceExt Indicates the UE's preferences on <i>minimumSchedulingOffset</i> of cross-slot scheduling for power saving for SCS 480 kHz and/or 960 kHz.
multiRx-PreferenceFR2 Indicates the UE's preference on single FR2 Rx operation to address overheating or power saving. This field is allowed to be reported only when UE is configured with serving cells operating on FR2.

<i>musim-AffectedBandsList</i>
Indicates the UE's preference on the band(s) and/or combination(s) of bands with restricted capability for MUSIM operation. If the <i>MUSIM-CapabilityRestrictedBandParameters-r18</i> with same <i>musim-bandEntryIndex</i> appears more than once in the list of bands in a <i>MUSIM-AffectedBands</i> entry, the UE supports intra-band non-contiguous CA with restricted capability for MUSIM operation for this band. UE explicitly indicates each band and each combination of bands that are affected. The Network should respect these capability restrictions when configuring the UE with bands or band combinations that contain these bands and/or combination of bands. Fields <i>musim-MIMO-Layers-DL/UL</i> and <i>musim-SupportedBandwidth-DL/UL</i> indicate the max number of MIMO layers and max bandwidth on each CC of the band, respectively. The band(s) and/or combination(s) of bands are supported in UE capability, and the <i>musim-MIMO-Layers-DL/UL</i> and <i>musim-SupportedBandwidth-DL/UL</i> range up to the concerned maximum capability of band(s) and/or combination(s) of bands in UE capability. For each concerned band or band combination, the lowest value of each <i>musim-MIMO-Layers-DL/UL</i> / <i>musim-SupportedBandwidth-DL/UL</i> and the corresponding capabilities in the UE capability determines the supported maximum MIMO layers and maximum bandwidth for DL/UL, respectively.
<i>musim-AvoidedBandsList</i>
Indicates the UE's preference on band(s) and/or combination(s) of bands to be avoided for MUSIM purpose. UE explicitly indicates each band and each combination of bands to be avoided. The list may include the band of the PCell. The Network should respect these capability restrictions for the band combinations that contain these bands and/or combination of bands. The band(s) and/or combination(s) of bands is a subset of the band combination(s) in UE capability.
<i>musim-bandEntryIndex</i>
Indicates an NR band by referring to the position of a band entry in <i>musim-CandidateBandList</i> IE. Value 1 identifies the first band in the <i>musim-CandidateBandList</i> IE, value 2 identifies the second band in the <i>musim-CandidateBandList</i> IE, and so on.
<i>musim-CapabilityRestricted</i>
Indicates the UE's preference on the temporary capability restriction on the band for MUSIM operation.
<i>musim-CapRestriction</i>
Indicates the UE's preference on SCell(s) or PCell to be released, serving cell(s) with restricted capability, band(s) or combination(s) of bands with restricted capability, or band(s) or band combination(s) to be avoided for UE temporary capabilities restriction.
<i>musim-Cell-SCG-ToRelease</i>
Indicates the UE's preference on any serving cell(s), except for Pcell, and/or SCG to be released for MUSIM operation.
<i>musim-CellToAffectList</i>
Indicates the UE's preference on the temporary capability restriction on the serving cell(s) for MUSIM operation.
<i>musim-CellToRelease</i>
Indicates the UE's preference on the temporary capability restriction on the serving cell(s) to release, except PCell, for MUSIM operation.
<i>musim-GapKeepPreference</i>
Indicates the UE's preference to keep all colliding gaps for requested MUSIM gap(s). If the field is absent, the colliding MUSIM gaps with lower priority shall be dropped as specified in TS 38.133 [14].
<i>musim-GapPreferenceList</i>
Indicates the UE's MUSIM gap preference and related MUSIM gap configuration, as defined in TS 38.133 [14] clause 9.1.10.
<i>musim-GapPriorityPreferenceList</i>
Indicates the UE's MUSIM gap priority preference for periodic MUSIM gaps as specified in TS 38.133[14]. If the UE includes <i>musim-GapPriorityPreferenceList-r18</i> , it includes the same number of entries, and listed in the same order for periodic gaps, as in <i>musim-GapPreferenceList-r17</i> .
<i>musim-MaxCC</i>
Indicates the UE's preference on the temporary capability restriction on maximum number of CCs per DL/UL in total, and per FR1/FR2-1/F2-2.
<i>musim-NeedForGapsInfoNR</i>
This field is used to indicate the measurement gap requirement information of the UE for NR target bands when in MUSIM operation while NR-DC or NE-DC is not configured.
<i>musim-PreferredRRC-State</i>
Indicates the UE's preferred RRC state when leaving RRC_CONNECTED.
<i>n3c-RelayUE-InfoList</i>
Information of available N3C relay UE(s).
<i>nonSDT-DataIndication</i>
Informs the network about the arrival of data and/or signaling mapped to radio bearers not configured for SDT while SDT procedure is ongoing.

preferredDRX-InactivityTimer Indicates the UE's preferred DRX inactivity timer length for power saving. Value in ms (milliSecond). <i>ms0</i> corresponds to 0, <i>ms1</i> corresponds to 1 ms, <i>ms2</i> corresponds to 2 ms, and so on. If the field is absent from the <i>DRX-Preference</i> IE, it is interpreted as the UE having no preference for the DRX inactivity timer. If secondary DRX group is configured, the <i>preferredDRX-InactivityTimer</i> only applies to the default DRX group.
preferredDRX-LongCycle Indicates the UE's preferred long DRX cycle length for power saving. Value in ms. <i>ms10</i> corresponds to 10ms, <i>ms20</i> corresponds to 20 ms, <i>ms32</i> corresponds to 32 ms, and so on. If <i>preferredDRX-ShortCycle</i> is provided, the value of <i>preferredDRX-LongCycle</i> shall be a multiple of the <i>preferredDRX-ShortCycle</i> value. If the field is absent from the <i>DRX-Preference</i> IE, it is interpreted as the UE having no preference for the long DRX cycle.
preferredDRX-ShortCycle Indicates the UE's preferred short DRX cycle length for power saving. Value in ms. <i>ms2</i> corresponds to 2ms, <i>ms3</i> corresponds to 3 ms, <i>ms4</i> corresponds to 4 ms, and so on. If the field is absent from the <i>DRX-Preference</i> IE, it is interpreted as the UE having no preference for the short DRX cycle.
preferredDRX-ShortCycleTimer Indicates the UE's preferred short DRX cycle timer for power saving. Value in multiples of <i>preferredDRX-ShortCycle</i>. A value of 1 corresponds to <i>preferredDRX-ShortCycle</i>, a value of 2 corresponds to 2 * <i>preferredDRX-ShortCycle</i> and so on. If the field is absent from the <i>DRX-Preference</i> IE, it is interpreted as the UE having no preference for the short DRX cycle timer. A preference for the short DRX cycle is indicated when a preference for the short DRX cycle timer is indicated.
preferredK0 Indicates the UE's preferred value of <i>k0</i> (slot offset between DCI and its scheduled PDSCH - see TS 38.214 [19], clause 5.1.2.1) for cross-slot scheduling for power saving. Value is defined for each subcarrier spacing (numerology) in units of slots. <i>s1</i> corresponds to 1 slot, <i>s2</i> corresponds to 2 slots, <i>s4</i> corresponds to 4 slots, and so on. If a value for a subcarrier spacing is absent, it is interpreted as the UE having no preference on <i>k0</i> for cross-slot scheduling for that subcarrier spacing. If the field is absent from the <i>MinSchedulingOffsetPreference</i> IE, it is interpreted as the UE having no preference on <i>k0</i> for cross-slot scheduling.
preferredK2 Indicates the UE's preferred value of <i>k2</i> (slot offset between DCI and its scheduled PUSCH - see TS 38.214 [19], clause 6.1.2.1) for cross-slot scheduling for power saving. Value is defined for each subcarrier spacing (numerology) in units of slots. <i>s1</i> corresponds to 1 slot, <i>s2</i> corresponds to 2 slots, <i>s4</i> corresponds to 4 slots, and so on. If a value for a subcarrier spacing is absent, it is interpreted as the UE having no preference on <i>k2</i> for cross-slot scheduling for that subcarrier spacing. If the field is absent from the <i>MinSchedulingOffsetPreference</i> IE, it is interpreted as the UE having no preference on <i>k2</i> for cross-slot scheduling.
preferredRRC-State Indicates the UE's preferred RRC state. The value <i>idle</i> is indicated if the UE prefers to be released from RRC_CONNECTED and transition to RRC_IDLE. The value <i>inactive</i> is indicated if the UE prefers to be released from RRC_CONNECTED and transition to RRC_INACTIVE. The value <i>connected</i> is indicated if the UE prefers to revert an earlier indication to leave RRC_CONNECTED state. The value <i>outOfConnected</i> is indicated if the UE prefers to be released from RRC_CONNECTED and has no preferred RRC state to transition to. The value <i>connected</i> can only be indicated if the UE is configured with <i>connectedReporting</i>.
propagationDelayDifference Indicates the one-way service link propagation delay difference between serving cell and each neighbour cell included in <i>neighCellInfoList</i>, defined as neighbour cell's service link propagation delay minus serving cell's service link propagation delay, in number of ms. First entry in <i>propagationDelayDifference</i> corresponds to first entry in <i>neighCellInfoList</i>, second entry in <i>propagationDelayDifference</i> corresponds to second entry in <i>neighCellInfoList</i>, and so on.
reducedCCsDL Indicates the UE's preference on reduced configuration corresponding to the maximum number of downlink SCells indicated by the field, to address overheating or power saving. When indicated to address overheating, this maximum number includes SCells of the NR MCG, PSCell and SCells of the SCG. This maximum number only includes PSCell and SCells of the SCG in (NG)EN-DC. When indicated to address power saving, this maximum number includes PSCell and SCells of the cell group that this UE assistance information is associated with. The maximum number of downlink SCells can only range up to the current active configuration when indicated to address power savings.
reducedCCsUL Indicates the UE's preference on reduced configuration corresponding to the maximum number of uplink SCells indicated by the field, to address overheating or power saving. When indicated to address overheating, this maximum number includes SCells of the NR MCG, PSCell and SCells of the SCG. This maximum number only includes PSCell and SCells of the SCG in (NG)EN-DC. When indicated to address power saving, this maximum number includes PSCell and SCells of the cell group that this UE assistance information is associated with. The maximum number of uplink SCells can only range up to the current active configuration when indicated to address power savings.

reducedMaxBW-FR1

Indicates the UE's preference on reduced configuration corresponding to the maximum aggregated bandwidth across all downlink carrier(s) and across all uplink carrier(s) of FR1, to address overheating or power saving. This field is allowed to be reported only when UE is configured with serving cell(s) operating on FR1. The aggregated bandwidth across all downlink carrier(s) of FR1 is the sum of bandwidth of active downlink BWP(s) across all activated downlink carrier(s) of FR1. The aggregated bandwidth across all uplink carrier(s) of FR1 is the sum of bandwidth of active uplink BWP(s) across all activated uplink carrier(s) of FR1. If the field is absent from the *MaxBW-Preference* IE or the *OverheatingAssistance* IE, it is interpreted as the UE having no preference on the maximum aggregated bandwidth of FR1.

When indicated to address overheating, this maximum aggregated bandwidth includes carrier(s) of FR1 of both the NR MCG and the SCG. This maximum aggregated bandwidth only includes carriers of FR1 of the SCG in (NG)EN-DC. Value *mhz0* is not used when indicated to address overheating.

When indicated to address power saving, this maximum aggregated bandwidth includes carrier(s) of FR1 of the cell group that this UE assistance information is associated with. The aggregated bandwidth can only range up to the current active configuration when indicated to address power savings.

reducedMaxBW-FR2

Indicates the UE's preference on reduced configuration corresponding to the maximum aggregated bandwidth across all downlink carrier(s) and across all uplink carrier(s) of FR2-1, to address overheating or power saving. This field is allowed to be reported only when UE is configured with serving cell(s) operating on FR2-1. The aggregated bandwidth across all downlink carrier(s) of FR2-1 is the sum of bandwidth of active downlink BWP(s) across all activated downlink carrier(s) of FR2-1. The aggregated bandwidth across all uplink carrier(s) of FR2-1 is the sum of bandwidth of active uplink BWP(s) across all activated uplink carrier(s) of FR2-1. If the field is absent from the *MaxBW-Preference* IE or the *OverheatingAssistance* IE, it is interpreted as the UE having no preference on the maximum aggregated bandwidth of FR2-1.

When indicated to address overheating, this maximum aggregated bandwidth includes carrier(s) of FR2-1 of both the NR MCG and the NR SCG. This maximum aggregated bandwidth only includes carriers of FR2-1 of the SCG in (NG)EN-DC.

When indicated to address power saving, this maximum aggregated bandwidth includes carrier(s) of FR2-1 of the cell group that this UE assistance information is associated with. The aggregated bandwidth can only range up to the current active configuration when indicated to address power savings.

reducedMaxBW-FR2-2

Indicates the UE's preference on reduced configuration corresponding to the maximum aggregated bandwidth across all downlink carrier(s) and across all uplink carrier(s) of FR2-2, to address overheating or power saving. This field is allowed to be reported only when UE is configured with serving cell(s) operating on FR2-2. The aggregated bandwidth across all downlink carrier(s) of FR2-2 is the sum of bandwidth of active downlink BWP(s) across all activated downlink carrier(s) of FR2-2. The aggregated bandwidth across all uplink carrier(s) of FR2-2 is the sum of bandwidth of active uplink BWP(s) across all activated uplink carrier(s) of FR2-2. If the field is absent from the *MaxBW-PreferenceFR2-2* IE or the *OverheatingAssistance* IE, it is interpreted as the UE having no preference on the maximum aggregated bandwidth of FR2-2.

When indicated to address overheating, this maximum aggregated bandwidth includes carrier(s) of FR2-2 of both the NR MCG and the NR SCG. This maximum aggregated bandwidth only includes carriers of FR2-2 of the SCG in (NG)EN-DC.

When indicated to address power saving, this maximum aggregated bandwidth includes carrier(s) of FR2-2 of the cell group that this UE assistance information is associated with. The aggregated bandwidth can only range up to the current active configuration when indicated to address power savings.

reducedMIMO-LayersFR1-DL

Indicates the UE's preference on reduced configuration corresponding to the maximum number of downlink MIMO layers of each serving cell operating on FR1 indicated by the field, to address overheating or power saving. This field is allowed to be reported only when UE is configured with serving cells operating on FR1. The maximum number of downlink MIMO layers can only range up to the maximum number of MIMO layers configured across all activated downlink carrier(s) of FR1 in the cell group when indicated to address power savings.

reducedMIMO-LayersFR1-UL

Indicates the UE's preference on reduced configuration corresponding to the maximum number of uplink MIMO layers of each serving cell operating on FR1 indicated by the field, to address overheating or power saving (see NOTE 1). This field is allowed to be reported only when UE is configured with serving cells operating on FR1. The maximum number of uplink MIMO layers can only range up to the maximum number of MIMO layers configured across all activated uplink carrier(s) of FR1 in the cell group when indicated to address power savings.

reducedMIMO-LayersFR2-DL

Indicates the UE's preference on reduced configuration corresponding to the maximum number of downlink MIMO layers of each serving cell operating on FR2-1 indicated by the field, to address overheating or power saving. This field is allowed to be reported only when UE is configured with serving cells operating on FR2-1. The maximum number of downlink MIMO layers can only range up to the maximum number of MIMO layers configured across all activated downlink carrier(s) of FR2-1 in the cell group when indicated to address power savings.

reducedMIMO-LayersFR2-UL
Indicates the UE's preference on reduced configuration corresponding to the maximum number of uplink MIMO layers of each serving cell operating on FR2-1 indicated by the field, to address overheating or power saving (see NOTE 1). This field is allowed to be reported only when UE is configured with serving cells operating on FR2-1. The maximum number of uplink MIMO layers can only range up to the maximum number of MIMO layers configured across all activated uplink carrier(s) of FR2-1 in the cell group when indicated to address power savings.
reducedMIMO-LayersFR2-2-DL
Indicates the UE's preference on reduced configuration corresponding to the maximum number of downlink MIMO layers of each serving cell operating on FR2-2 indicated by the field, to address overheating or power saving. This field is allowed to be reported only when UE is configured with serving cells operating on FR2-2. The maximum number of downlink MIMO layers can only range up to the maximum number of MIMO layers configured across all activated downlink carrier(s) of FR2-2 in the cell group when indicated to address power savings.
reducedMIMO-LayersFR2-2-UL
Indicates the UE's preference on reduced configuration corresponding to the maximum number of uplink MIMO layers of each serving cell operating on FR2-2 indicated by the field, to address overheating or power saving (see NOTE 1). This field is allowed to be reported only when UE is configured with serving cells operating on FR2-2. The maximum number of uplink MIMO layers can only range up to the maximum number of MIMO layers configured across all activated uplink carrier(s) of FR2-2 in the cell group when indicated to address power savings.
referenceTimeInfoPreference
Indicates whether the UE prefers being provisioned with the timing information specified in the IE <i>ReferenceTimeInfo</i> .
resumeCause
Provides the resume cause based on the information received from the upper layers.
rlm-MeasRelaxationState
Indicates the relaxation state of RLM measurements. Value <i>true</i> indicates that the UE is performing relaxation of RLM measurements, and value <i>false</i> indicates that the UE is not performing relaxation of RLM measurements.
rrm-MeasRelaxationFulfilment
Indicates whether the UE fulfils the relaxed measurement criterion for stationary UE in 5.7.4.4. Value <i>true</i> indicates that the UE fulfils the criterion, and value <i>false</i> indicates that the UE does not fulfil the criterion.
sl-QoS-FlowIdentity
This identity uniquely identifies one sidelink QoS flow between the UE and the network in the scope of UE, which is unique for different destination and cast type.
sl-PRS-Bandwidth
Indicates the desired bandwidth of the requested SL-PRS resources provided by upper layers (see TS 38.355 [77]) in the unit of MHz.
sl-PRS-DelayBudget
Indicates the SL-PRS delay budget provided by upper layers (see TS 38.355 [77]).
sl-PRS-Periodicity
Indicates the periodicity of SL-PRS transmission.
sl-PRS-Priority
Indicates the priority of SL-PRS provided by upper layers (see TS 38.355 [77]). Value 1 is the highest priority whereas value 8 is the lowest priority.
sl-UE-AssistanceInformationNR
Indicates the traffic characteristic of sidelink logical channel(s), specified in the IE <i>SL-TrafficPatternInfo</i> , that are setup for NR sidelink communication.
slotOffset
Indicates the UE's preferred slot offset to resolve the IDC problem, in multiples of 1/32 ms.
startOffset
Indicates the UE's preferred start offset to resolve the IDC problem, in multiples of 1 ms.
type1
Indicates the preferred amount of increment/decrement to the long DRX cycle length with respect to the current configuration. Value in number of milliseconds. Value <i>ms40</i> corresponds to 40 milliseconds, <i>msMinus40</i> corresponds to -40 milliseconds and so on.
ul-GapFR2-PatternPreference
Indicates the UE's preference on FR2 UL gap pattern as defined in TS 38.133 [14].

victimSystemType

Indicate the list of victim system types to which IDC interference is caused from NR. Value *gps*, *glonass*, *bds*, *galileo* and *navIC* indicates the type of GNSS. Value *wlan* indicates WLAN and value *bluetooth* indicates Bluetooth. Value *uwb* indicates Ultra Wide Band.

NOTE 1: The field may also indicate the UE's preference on reduced configuration corresponding to the maximum number of SRS ports (i.e. *nrofSRS-Ports*) of each serving cell operating on the associated frequency range.

SL-TrafficPatternInfo field descriptions**messageSize**

Indicates the maximum TB size based on the observed traffic pattern. The value refers to the index of TS 38.321 [3], table 6.1.3.1-2.

timingOffset

This field indicates the estimated timing for a packet arrival in a sidelink logical channel. Specifically, the value indicates the timing offset with respect to subframe#0 of SFN#0 in milliseconds.

trafficPeriodicity

This field indicates the estimated data arrival periodicity in a sidelink logical channel. Value *ms20* corresponds to 20 ms, *ms50* corresponds to 50 ms and so on.

UL-TrafficInfo field descriptions**burstArrivalTime**

Indicates the expected arrival time of the first packet of the Data Burst for the concerned QoS flow. If the UE provides both *burstArrivalTime* and *jitterRange*, *burstArrivalTime* is used as a reference time for the indicated jitter range.

If *burstArrivalTime* is indicated as *referenceTime*, the indicated time in 10ns unit from the origin is $refDays * 86400 * 1000 * 100000 + refSeconds * 1000 * 100000 + refMilliSeconds * 100000 + refTenNanoSeconds$. The *refDays* field specifies the sequential number of days (with day count starting at 0) from 00:00:00 on Gregorian calendar date 6 January, 1980 (start of GPS time).

If *burstArrivalTime* is indicated as *referenceSFN-AndSlot*, it refers to the UL timing of the closest SFN and slot of the PCell with the indicated number.

jitterRange

Indicates the maximum deviation of the arrival time of the first packet of a Data Burst compared to the time indicated with *burstArrivalTime* and the periodicity of the Data Bursts. *lowerBound* indicates the negative deviation while *upperBound* indicates the positive deviation. This field shall only be reported together with the *burstArrivalTime* or after the *burstArrivalTime* has been already reported. Value *ms0* corresponds to 0 ms, value *0dot5* to 0.5 ms, value *ms1* to 1 ms and so on. Value *beyondMs7* indicates the jitter bound is higher than 7 ms. Value 0 ms means there is no Data Burst arrival time deviation from the indicated *burstArrivalTime*.

pdu-SetIdentification

Indicates whether the UE is able to identify PDU Set(s) for the QoS flow. If set to *true*, the UE is able to identify PDU Set(s) for the associated QoS flow, otherwise, the UE is not able to do so. Before receiving this indication, the network assumes the value is set to *false*.

psi-Identification

Indicates whether the UE is able to identify PSI(s) for the QoS flow. This field shall only be set to *true* if *pdu-SetIdentification* is also set to *true* (or was set to *true* previously for the same QoS flow). If set to *true*, the UE is able to identify PSI(s) for the associated QoS flow, otherwise, the UE is not able to do so. Before receiving this indication, the network assumes the value is set to *false*.

qfi

Identity of the QoS flow to which this UL traffic information refers.

trafficPeriodicity

Indicates the average time period between the start times of two data bursts, expressed in the number of microseconds.

– *UECapabilityEnquiry*

The *UECapabilityEnquiry* message is used to request UE radio access capabilities for NR as well as for other RATs.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

UECapabilityEnquiry message

```
-- ASN1START
-- TAG-UECAPABILITYENQUIRY-START

UECapabilityEnquiry ::=
    rrc-TransactionIdentifier
    criticalExtensions
        ueCapabilityEnquiry
        criticalExtensionsFuture
    }
}

UECapabilityEnquiry-IEs ::=
    ue-CapabilityRAT-RequestList
    lateNonCriticalExtension
    ue-CapabilityEnquiryExt
}

UECapabilityEnquiry-v1560-IEs ::=
    capabilityRequestFilterCommon
    nonCriticalExtension
}

UECapabilityEnquiry-v1610-IEs ::=
    rrc-SegAllowed-r16
    nonCriticalExtension
}

UECapabilityEnquiry-v17b0-IEs ::=
    rrc-MaxCapaSegAllowed-r17
    nonCriticalExtension
}

-- TAG-UECAPABILITYENQUIRY-STOP
-- ASN1STOP
```

SEQUENCE {
RRC-TransactionIdentifier,
CHOICE {
UECapabilityEnquiry-IEs,
SEQUENCE {}
}

SEQUENCE {
UE-CapabilityRAT-RequestList,
OCTET STRING
OCTET STRING (CONTAINING UECapabilityEnquiry-v1560-IEs)
}

OPTIONAL,
OPTIONAL -- Need N

SEQUENCE {
UE-CapabilityRequestFilterCommon
UECapabilityEnquiry-v1610-IEs
}

OPTIONAL, -- Need N
OPTIONAL

SEQUENCE {
ENUMERATED {enabled}
UECapabilityEnquiry-v17b0-IEs
}

OPTIONAL, -- Need N
OPTIONAL

SEQUENCE {
INTEGER (2..16)
SEQUENCE {}
}

OPTIONAL, -- Need N
OPTIONAL

UECapabilityEnquiry-IEs field descriptions
rrc-MaxCapaSegAllowed This field is used to enable the UL message segment transfer for <i>UECapabilityInformation</i> message with the number of segments allowed by the network. The field is present only if <i>rrc-SegAllowed</i> is not present.
rrc-SegAllowed This field is used to enable the UL message segment transfer for <i>UECapabilityInformation</i> message. The field is present only if <i>rrc-MaxCapaSegAllowed</i> is not present.

– UECapabilityInformation

The IE *UECapabilityInformation* message is used to transfer UE radio access capabilities requested by the network.

- Signalling radio bearer: SRB1
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

UECapabilityInformation message

```
-- ASN1START
-- TAG-UECAPABILITYINFORMATION-START

UECapabilityInformation ::=
    rrc-TransactionIdentifier
    criticalExtensions
        ueCapabilityInformation
        criticalExtensionsFuture
    }
}

UECapabilityInformation-IEs ::=
    ue-CapabilityRAT-ContainerList
    lateNonCriticalExtension
    nonCriticalExtension
}

SEQUENCE {
    RRC-TransactionIdentifier,
    CHOICE {
        UECapabilityInformation-IEs,
        SEQUENCE {}
    }
}

SEQUENCE {
    UE-CapabilityRAT-ContainerList
    OCTET STRING
    SEQUENCE{}
}

OPTIONAL,
OPTIONAL,
OPTIONAL

-- TAG-UECAPABILITYINFORMATION-STOP
-- ASN1STOP
```

– UEInformationRequest

The *UEInformationRequest* message is used by the network to retrieve information from the UE.

- Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: Network to UE

UEInformationRequest message

```

-- ASN1START
-- TAG-UEINFORMATIONREQUEST-START

UEInformationRequest-r16 ::= SEQUENCE {
    rrc-TransactionIdentifier    RRC-TransactionIdentifier,
    criticalExtensions           CHOICE {
        ueInformationRequest-r16 UEInformationRequest-r16-IEs,
        criticalExtensionsFuture SEQUENCE {}
    }
}

UEInformationRequest-r16-IEs ::= SEQUENCE {
    idleModeMeasurementReq-r16    ENUMERATED {true}          OPTIONAL, -- Need N
    logMeasReportReq-r16          ENUMERATED {true}          OPTIONAL, -- Need N
    connEstFailReportReq-r16      ENUMERATED {true}          OPTIONAL, -- Need N
    ra-ReportReq-r16              ENUMERATED {true}          OPTIONAL, -- Need N
    rlf-ReportReq-r16             ENUMERATED {true}          OPTIONAL, -- Need N
    mobilityHistoryReportReq-r16  ENUMERATED {true}          OPTIONAL, -- Need N
    lateNonCriticalExtension      OCTET STRING               OPTIONAL,
    nonCriticalExtension           UEInformationRequest-v1700-IEs OPTIONAL
}

UEInformationRequest-v1700-IEs ::= SEQUENCE {
    successH0-ReportReq-r17      ENUMERATED {true}          OPTIONAL, -- Need N
    coarseLocationRequest-r17    ENUMERATED {true}          OPTIONAL, -- Need N
    nonCriticalExtension          UEInformationRequest-v1800-IEs OPTIONAL
}

UEInformationRequest-v1800-IEs ::= SEQUENCE {
    flightPathInfoReq-r18        FlightPathInfoReportConfig-r18 OPTIONAL, -- Need N
    successPSCell-ReportReq-r18  ENUMERATED {true}          OPTIONAL, -- Need N
    reselectionMeasurementReq-r18 ENUMERATED {true}          OPTIONAL, -- Need N
    validatedMeasurementsReq-r18 ENUMERATED {true}          OPTIONAL, -- Need N
    nonCriticalExtension          SEQUENCE {}                OPTIONAL
}

FlightPathInfoReportConfig-r18 ::= SEQUENCE {
    maxWaypointNumber-r18        INTEGER (1..maxWaypoint-r18),
    includeTimeStamp-r18         ENUMERATED {true}          OPTIONAL -- Need N
}

-- TAG-UEINFORMATIONREQUEST-STOP
-- ASN1STOP

```

<i>UEInformationRequest-IEs field descriptions</i>
<i>coarseLocationRequest</i> This field is used to request UE to report coarse location information.
<i>connEstFailReportReq</i> This field is used to indicate whether the UE shall report information about the connection failure.
<i>flightPathInfoReq</i> This field is used to indicate whether the UE shall report the flight path information, if available, and to specify the flight path information report configuration.
<i>idleModeMeasurementReq</i> This field indicates that the UE shall report the idle/inactive measurement information, if available, to the network in the <i>UEInformationResponse</i> message.
<i>logMeasReportReq</i> This field is used to indicate whether the UE shall report information about logged measurements.
<i>mobilityHistoryReportReq</i> This field is used to indicate whether the UE shall report information about mobility history information.
<i>ra-ReportReq</i> This field is used to indicate whether the UE shall report information about the random access procedure.
<i>reselectionMeasurementReq</i> This field indicates that the UE shall report the reselection measurement information, if available, to the network in the <i>UEInformationResponse</i> message.
<i>rlf-ReportReq</i> This field is used to indicate whether the UE shall report information about the radio link failure.
<i>successHO-ReportReq</i> This field is used to indicate whether the UE shall report information about the successful handover report.
<i>successPSCell-ReportReq</i> This field is used to indicate whether the UE shall report information about the successful PSCell change or addition report.

<i>FlightPathInfoReportConfig field descriptions</i>
<i>includeTimeStamp</i> Indicates whether time stamp of each way point can be reported in the flight path information report if time stamp information is available at the UE.
<i>maxWayPointNumber</i> Indicates the maximum number of way points UE can include in the flight path information report if this information is available at the UE.

– ***UEInformationResponse***

The *UEInformationResponse* message is used by the UE to transfer information requested by the network.

Signalling radio bearer: SRB1 or SRB2 (when logged measurement information is included)

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to network

UEInformationResponse message

```

-- ASN1START
-- TAG-UEINFORMATIONRESPONSE-START

UEInformationResponse-r16 ::= SEQUENCE {
    rrc-TransactionIdentifier RRC-TransactionIdentifier,
    criticalExtensions CHOICE {
        ueInformationResponse-r16-IEs,
        criticalExtensionsFuture SEQUENCE {}
    }
}

UEInformationResponse-r16-IEs ::= SEQUENCE {
    measResultIdleEUTRA-r16 MeasResultIdleEUTRA-r16 OPTIONAL,
    measResultIdleNR-r16 MeasResultIdleNR-r16 OPTIONAL,
    logMeasReport-r16 LogMeasReport-r16 OPTIONAL,
    connEstFailReport-r16 ConnEstFailReport-r16 OPTIONAL,
    ra-ReportList-r16 RA-ReportList-r16 OPTIONAL,
    rlf-Report-r16 RLF-Report-r16 OPTIONAL,
    mobilityHistoryReport-r16 MobilityHistoryReport-r16 OPTIONAL,
    lateNonCriticalExtension OCTET STRING OPTIONAL,
    nonCriticalExtension UEInformationResponse-v1700-IEs OPTIONAL
}

UEInformationResponse-v1700-IEs ::= SEQUENCE {
    successH0-Report-r17 SuccessH0-Report-r17 OPTIONAL,
    connEstFailReportList-r17 ConnEstFailReportList-r17 OPTIONAL,
    coarseLocationInfo-r17 OCTET STRING OPTIONAL,
    nonCriticalExtension UEInformationResponse-v1800-IEs OPTIONAL
}

UEInformationResponse-v1800-IEs ::= SEQUENCE {
    flightPathInfoReport-r18 FlightPathInfoReport-r18 OPTIONAL,
    successPSCell-Report-r18 SuccessPSCell-Report-r18 OPTIONAL,
    measResultReselectionNR-r18 MeasResultIdleNR-r16 OPTIONAL,
    nonCriticalExtension SEQUENCE {} OPTIONAL
}

FlightPathInfoReport-r18 ::= SEQUENCE (SIZE (0..maxWayPoint-r18)) OF WayPoint-r18

WayPoint-r18 ::= SEQUENCE {
    wayPointLocation-r18 OCTET STRING,
    timeStamp-r18 AbsoluteTimeInfo-r16 OPTIONAL
}

LogMeasReport-r16 ::= SEQUENCE {
    absoluteTimeStamp-r16 AbsoluteTimeInfo-r16,
    traceReference-r16 TraceReference-r16,
    traceRecordingSessionRef-r16 OCTET STRING (SIZE (2)),
    tce-Id-r16 OCTET STRING (SIZE (1)),
    logMeasInfoList-r16 LogMeasInfoList-r16,
    logMeasAvailable-r16 ENUMERATED {true} OPTIONAL,
    logMeasAvailableBT-r16 ENUMERATED {true} OPTIONAL
}

```

```

    logMeasAvailableWLAN-r16          ENUMERATED {true}          OPTIONAL,
    ...
}

LogMeasInfoList-r16 ::= SEQUENCE (SIZE (1..maxLogMeasReport-r16)) OF LogMeasInfo-r16

LogMeasInfo-r16 ::= SEQUENCE {
    locationInfo-r16                LocationInfo-r16            OPTIONAL,
    relativeTimeStamp-r16            INTEGER (0..7200),
    servCellIdentity-r16             CGI-Info-Logging-r16        OPTIONAL,
    measResultServingCell-r16        MeasResultServingCell-r16   OPTIONAL,
    measResultNeighCells-r16         SEQUENCE {
        measResultNeighCellListNR    MeasResultListLogging2NR-r16 OPTIONAL,
        measResultNeighCellListEUTRA MeasResultList2EUTRA-r16   OPTIONAL
    },
    anyCellSelectionDetected-r16     ENUMERATED {true}          OPTIONAL,
    ...
    [[
    inDeviceCoexDetected-r17        ENUMERATED {true}          OPTIONAL
    ]]
}

ConnEstFailReport-r16 ::= SEQUENCE {
    measResultFailedCell-r16         MeasResultFailedCell-r16,
    locationInfo-r16                 LocationInfo-r16            OPTIONAL,
    measResultNeighCells-r16         SEQUENCE {
        measResultNeighCellListNR    MeasResultList2NR-r16      OPTIONAL,
        measResultNeighCellListEUTRA MeasResultList2EUTRA-r16   OPTIONAL
    },
    numberOfConnFail-r16             INTEGER (1..8),
    perRAInfoList-r16                PerRAInfoList-r16,
    timeSinceFailure-r16             TimeSinceFailure-r16,
    ...
}

ConnEstFailReportList-r17 ::= SEQUENCE (SIZE (1..maxCEFReport-r17)) OF ConnEstFailReport-r16

MeasResultServingCell-r16 ::= SEQUENCE {
    resultsSSB-Cell                  MeasQuantityResults,
    resultsSSB                       SEQUENCE{
        best-ssb-Index              SSB-Index,
        best-ssb-Results             MeasQuantityResults,
        numberOfGoodSSB              INTEGER (1..maxNrofSSBs-r16)
    }
}
OPTIONAL

MeasResultFailedCell-r16 ::= SEQUENCE {
    cgi-Info                         CGI-Info-Logging-r16,
    measResult-r16                   SEQUENCE {
        cellResults-r16              SEQUENCE{
            resultsSSB-Cell-r16      MeasQuantityResults
        },
        rsIndexResults-r16           SEQUENCE{
            resultsSSB-Indexes-r16   ResultsPerSSB-IndexList
        }
    }
}

```

[illegible]


```

msgA-MCS-r17                INTEGER (0..15)                OPTIONAL,
nrofPRBs-PerMsgA-PO-r17      INTEGER (1..32)                OPTIONAL,
msgA-PUSCH-TimeDomainAllocation-r17 INTEGER (1..maxNrofUL-Allocations) OPTIONAL,
frequencyStartMsgA-PUSCH-r17 INTEGER (0..maxNrofPhysicalResourceBlocks-1) OPTIONAL,
nrofMsgA-PO-FDM-r17          ENUMERATED {one, two, four, eight} OPTIONAL,
dlPathlossRSRP-r17          RSRP-Range                     OPTIONAL,
intendedSIBs-r17             SEQUENCE (SIZE (1..maxSIB)) OF SIB-Type-r17 OPTIONAL,
ssbsForSI-Acquisition-r17    SEQUENCE (SIZE (1..maxNrofSSBs-r16)) OF SSB-Index OPTIONAL,
msgA-PUSCH-PayloadSize-r17    BIT STRING (SIZE (5))         OPTIONAL,
onDemandSISuccess-r17        ENUMERATED {true}              OPTIONAL
]],
[[
usedFeatureCombination-r18    ReportedFeatureCombination-r18 OPTIONAL,
triggeredFeatureCombination-r18 ReportedFeatureCombination-r18 OPTIONAL,
startPreambleForThisPartition-r18 INTEGER (0..63)           OPTIONAL,
numberOfPreamblesPerSSB-ForThisPartition-r18 INTEGER (1..64) OPTIONAL,
attemptedBWP-InfoList-r18     SEQUENCE (SIZE (1..maxNrofBWPs)) OF AttemptedBWP-Info-r18 OPTIONAL,
numberOfLBT-Failures-r18      INTEGER (1..128)              OPTIONAL,
perRAInfoList-v1800           PerRAInfoList-v1800           OPTIONAL,
intendedSIBs-r18             SEQUENCE (SIZE (1..maxSIB)) OF SIB-Type-r18 OPTIONAL
]]
}

AttemptedBWP-Info-r18 ::= SEQUENCE {
    locationAndBandwidth-r18    INTEGER (0..37949),
    subcarrierSpacing-r18      SubcarrierSpacing
}

ReportedFeatureCombination-r18 ::= SEQUENCE {
    redCap-r18                  ENUMERATED {true}            OPTIONAL,
    smallData-r18              ENUMERATED {true}            OPTIONAL,
    nsag-r18                   NSAG-List-r17                OPTIONAL,
    msg3-Repetitions-r18       ENUMERATED {true}            OPTIONAL,
    msg1-Repetitions-r18       ENUMERATED {true}            OPTIONAL,
    eRedCap-r18                ENUMERATED {true}            OPTIONAL,
    triggered-S-NSSAI-List-r18 SEQUENCE (SIZE (1..maxNrofS-NSSAI)) OF S-NSSAI OPTIONAL
}

PerRAInfoList-r16 ::= SEQUENCE (SIZE (1..200)) OF PerRAInfo-r16

PerRAInfoList-v1660 ::= SEQUENCE (SIZE (1..200)) OF PerRACSI-RSInfo-v1660

PerRAInfo-r16 ::= CHOICE {
    perRASSBInfoList-r16      PerRASSBInfo-r16,
    perRACSI-RSInfoList-r16   PerRACSI-RSInfo-r16
}

PerRAInfoList-v1800 ::= SEQUENCE (SIZE (1..200)) OF PerRAInfo-v1800

PerRAInfo-v1800 ::= CHOICE {
    perRASSBInfoList-v1800    PerRASSBInfo-v1800,
    perRACSI-RSInfoList-v1800 PerRACSI-RSInfo-v1800
}

```

```

PerRASSBInfo-r16 ::=
    ssb-Index-r16
    numberOfPreamblesSentOnSSB-r16
    perRAAttemptInfoList-r16
}

PerRASSBInfo-v1800 ::=
    allPreamblesBlocked
    lbt-Detected-r18
    ...
}

PerRACSI-RSInfo-r16 ::=
    csi-RS-Index-r16
    numberOfPreamblesSentOnCSI-RS-r16
}

PerRACSI-RSInfo-v1660 ::=
    csi-RS-Index-v1660
}

PerRACSI-RSInfo-v1800 ::=
    allPreamblesBlocked
    lbt-Detected-r18
    ...
}

PerRAAttemptInfoList-r16 ::=
    SEQUENCE (SIZE (1..200)) OF PerRAAttemptInfo-r16

PerRAAttemptInfo-r16 ::=
    contentionDetected-r16
    dlRSRPAboveThreshold-r16
    ...
    [[
        fallbackToFourStepRA-r17
    ]]
}

SIB-Type-r17 ::= ENUMERATED {sibType2, sibType3, sibType4, sibType5, sibType9, sibType10, sibType11, sibType12,
    sibType13, sibType14, posSIB-v1810, spare5, spare4, spare3, spare2, spare1}

SIB-Type-r18 ::= ENUMERATED {sibType15, sibType16, sibType17, sibType18, sibType19, sibType20,
    sibType21, sibType22, sibType23, sibType24, sibType25, spare5, spare4,
    spare3, spare2, spare1}

RLF-Report-r16 ::=
    nr-RLF-Report-r16
    measResultLastServCell-r16
    measResultNeighCells-r16
    measResultListNR-r16
    measResultListEUTRA-r16
    }
    c-RNTI-r16
    previousPCellId-r16
}

SEQUENCE {
    SSB-Index,
    INTEGER (1..200),
    PerRAAttemptInfoList-r16
}

SEQUENCE {
    ENUMERATED {true}
    ENUMERATED {true}
}

SEQUENCE {
    INTEGER (1..96)
}

SEQUENCE {
    ENUMERATED {true}
    ENUMERATED {true}
}

SEQUENCE (SIZE (1..200)) OF PerRAAttemptInfo-r16

SEQUENCE {
    BOOLEAN
    BOOLEAN
    ...
    ENUMERATED {true}
}

CHOICE {
    SEQUENCE {
        MeasResultRLFNR-r16,
        SEQUENCE {
            MeasResultList2NR-r16
            MeasResultList2EUTRA-r16
        }
    }
    RNTI-Value,
    CHOICE {

```

nrPreviousCell-r16	CGI-Info-Logging-r16,	
eutraPreviousCell-r16	CGI-InfoEUTRALogging	
}		OPTIONAL,
failedPCellId-r16	CHOICE {	
nrFailedPCellId-r16	CHOICE {	
cellGlobalId-r16	CGI-Info-Logging-r16,	
pci-arfcn-r16	PCI-ARFCN-NR-r16	
},		
eutraFailedPCellId-r16	CHOICE {	
cellGlobalId-r16	CGI-InfoEUTRALogging,	
pci-arfcn-r16	PCI-ARFCN-EUTRA-r16	
}		
},		
reconnectCellId-r16	CHOICE {	
nrReconnectCellId-r16	CGI-Info-Logging-r16,	
eutraReconnectCellId-r16	CGI-InfoEUTRALogging	
}		OPTIONAL,
timeUntilReconnection-r16	TimeUntilReconnection-r16	OPTIONAL,
reestablishmentCellId-r16	CGI-Info-Logging-r16	OPTIONAL,
timeConnFailure-r16	INTEGER (0..1023)	OPTIONAL,
timeSinceFailure-r16	TimeSinceFailure-r16,	
connectionFailureType-r16	ENUMERATED {rlf, hof},	
rlf-Cause-r16	ENUMERATED {t310-Expiry, randomAccessProblem, rlc-MaxNumRetx,	
	beamFailureRecoveryFailure, lbtFailure-r16,	
	bh-rlfRecoveryFailure, t312-expiry-r17, spare1},	
locationInfo-r16	LocationInfo-r16	OPTIONAL,
noSuitableCellFound-r16	ENUMERATED {true}	OPTIONAL,
ra-InformationCommon-r16	RA-InformationCommon-r16	OPTIONAL,
...		
[[		
csi-rsRLMConfigBitmap-v1650	BIT STRING (SIZE (96))	OPTIONAL
]],		
[[		
lastHO-Type-r17	ENUMERATED {cho, daps, spare2, spare1}	OPTIONAL,
timeConnSourceDAPS-Failure-r17	TimeConnSourceDAPS-Failure-r17	OPTIONAL,
timeSinceCHO-Reconfig-r17	TimeSinceCHO-Reconfig-r17	OPTIONAL,
choCellId-r17	CHOICE {	
cellGlobalId-r17	CGI-Info-Logging-r16,	
pci-arfcn-r17	PCI-ARFCN-NR-r16	
}		OPTIONAL,
choCandidateCellList-r17	ChoCandidateCellList-r17	OPTIONAL
]],		
[[		
pSCellId-r18	CHOICE {	
cellGlobalId-r18	CGI-Info-Logging-r16,	
pci-arfcn-r18	PCI-ARFCN-NR-r16	
}		OPTIONAL,
mcg-RecoveryFailureCause-r18	ENUMERATED {t316-Expiry, scg-Deactivated, spare2, spare1}	OPTIONAL,
scg-FailureCause-r18	ENUMERATED {t310-Expiry, randomAccessProblem, rlc-MaxNumRetx,	
	synchReconfigFailureSCG, scg-ReconfigFailure,	
	srB3-IntegrityFailure, scg-lbtFailure, beamFailureRecoveryFailure,	
	t312-Expiry, bh-RLF, beamFailure, spare5, spare4, spare3, spare2, spare1 }	
		OPTIONAL,
		OPTIONAL,
elapsedTimeSCG-Failure-r18	ElapsedTimeSCG-Failure-r18	

voiceFallbackH0-r18	ENUMERATED {true}	OPTIONAL,
measResultLastServCellRSSI-r18	RSSI-Range-r16	OPTIONAL,
measResultNeighFreqListRSSI-r18	MeasResultNeighFreqListRSSI-r18	OPTIONAL,
bwp-Info-r18	AttemptedBWP-Info-r18	OPTIONAL,
elapsedTimeT316-r18	ElapsedTimeT316-r18	OPTIONAL,
scg-FailedAfterMCG-r18	ENUMERATED {true}	OPTIONAL
]]		
},		
eutra-RLF-Report-r16	SEQUENCE {	
failedPCellId-EUTRA	CGI-InfoEUTRALogging,	
measResult-RLF-Report-EUTRA-r16	OCTET STRING,	
...		
[[		
measResult-RLF-Report-EUTRA-v1690	OCTET STRING	OPTIONAL
]]		
}		
}		
SuccessH0-Report-r17 ::=	SEQUENCE {	
sourceCellInfo-r17	SEQUENCE {	
sourcePCellId-r17	CGI-Info-Logging-r16,	
sourceCellMeas-r17	MeasResultSuccessHONR-r17	OPTIONAL,
rlf-InSourceDAPS-r17	ENUMERATED {true}	OPTIONAL
},		
targetCellInfo-r17	SEQUENCE {	
targetPCellId-r17	CGI-Info-Logging-r16,	
targetCellMeas-r17	MeasResultSuccessHONR-r17	OPTIONAL
},		
measResultNeighCells-r17	SEQUENCE {	
measResultListNR-r17	MeasResultList2NR-r16	OPTIONAL,
measResultListEUTRA-r17	MeasResultList2EUTRA-r16	OPTIONAL,
}		OPTIONAL,
locationInfo-r17	LocationInfo-r16	OPTIONAL,
timeSinceCH0-Reconfig-r17	TimeSinceCH0-Reconfig-r17	OPTIONAL,
shr-Cause-r17	SHR-Cause-r17	OPTIONAL,
ra-InformationCommon-r17	RA-InformationCommon-r16	OPTIONAL,
upInterruptionTimeAtH0-r17	UPInterruptionTimeAtH0-r17	OPTIONAL,
c-RNTI-r17	RNTI-Value	OPTIONAL,
...		
[[		
targetCell-PCI-ARFCN-r17	PCI-ARFCN-NR-r16	OPTIONAL
]],		
[[		
eutra-TargetCellInfo-r18	SEQUENCE {	
targetPCellId-r18	CHOICE {	
cellGlobalId-r18	CGI-Info-Logging-r16,	
pci-arfcn-r18	PCI-ARFCN-EUTRA-r16	
},		
targetCellMeas-r18	MeasQuantityResultsEUTRA	OPTIONAL
}		OPTIONAL,
measResultServCellRSSI-r18	RSSI-Range-r16	OPTIONAL,
measResultNeighFreqListRSSI-r18	MeasResultNeighFreqListRSSI-r18	OPTIONAL,
eutra-C-RNTI-r18	EUTRA-C-RNTI	OPTIONAL,
timeSinceSHR-r18	TimeSinceSHR-r18	OPTIONAL

```

}
]]
}

SuccessPSCell-Report-r18 ::=
    pCellId-r18
    sourcePSCellInfo-r18
        sourcePSCellId-r18
        cellGlobalId-r18
        pci-arfcn-r18
    },
    sourcePSCellMeas-r18
    },
    targetPSCellInfo-r18
        targetPSCellId-r18
        cellGlobalId-r18
        pci-arfcn-r18
    },
    targetPSCellMeas-r18
    },
    measResultNeighCells-r18
        measResultListNR-r18
        measResultListEUTRA-r18
    }
    spr-Cause-r18
    timeSinceCPAC-Reconfig-r18
    locationInfo-r18
    ra-InformationCommon-r18
    sn-InitiatedPSCellChange-r18
    ...
}

MeasResultNeighFreqListRSSI-r18 ::=
    SEQUENCE(SIZE (1..maxFreq)) OF MeasResultNeighFreqRSSI-r18

MeasResultNeighFreqRSSI-r18 ::=
    ssbFrequency-r18
    ssbSubcarrierSpacing-r18
    refFreqCSI-RS-r18
    measResult-RSSI-r18
    }

MeasResultList2NR-r16 ::=
    SEQUENCE(SIZE (1..maxFreq)) OF MeasResult2NR-r16
MeasResultList2EUTRA-r16 ::=
    SEQUENCE(SIZE (1..maxFreq)) OF MeasResult2EUTRA-r16

MeasResult2NR-r16 ::=
    SEQUENCE {
        ssbFrequency-r16
        refFreqCSI-RS-r16
        measResultList-r16
    }
    }

MeasResultListLogging2NR-r16 ::=
    SEQUENCE(SIZE (1..maxFreq)) OF MeasResultLogging2NR-r16

MeasResultLogging2NR-r16 ::=
    SEQUENCE {
        carrierFreq-r16
        measResultListLoggingNR-r16
    }
    }

```

```

}

MeasResultListLoggingNR-r16 ::= SEQUENCE (SIZE (1..maxCellReport)) OF MeasResultLoggingNR-r16

MeasResultLoggingNR-r16 ::= SEQUENCE {
    physCellId-r16
    resultsSSB-Cell-r16
    numberOfGoodSSB-r16
    INTEGER (1..maxNrofSSBs-r16) OPTIONAL
}

MeasResult2EUTRA-r16 ::= SEQUENCE {
    carrierFreq-r16
    measResultList-r16
}

MeasResultRLFNR-r16 ::= SEQUENCE {
    measResult-r16
    cellResults-r16
    resultsSSB-Cell-r16
    resultsCSI-RS-Cell-r16
    },
    rsIndexResults-r16
    resultsSSB-Indexes-r16
    ssbRLMConfigBitmap-r16
    resultsCSI-RS-Indexes-r16
    csi-rsRLMConfigBitmap-r16
    }
}

MeasResultSuccessHONR-r17 ::= SEQUENCE {
    measResult-r17
    cellResults-r17
    resultsSSB-Cell-r17
    resultsCSI-RS-Cell-r17
    },
    rsIndexResults-r17
    resultsSSB-Indexes-r17
    resultsCSI-RS-Indexes-r17
    }
}

ChoCandidateCellList-r17 ::= SEQUENCE(SIZE (1..maxNrofCondCells-r16)) OF ChoCandidateCell-r17

ChoCandidateCell-r17 ::= CHOICE {
    cellGlobalId-r17
    pci-arfcn-r17
}

SHR-Cause-r17 ::= SEQUENCE {
    t304-cause-r17
    t310-cause-r17
    t312-cause-r17
    ENUMERATED {true}
    ENUMERATED {true}
    ENUMERATED {true}
    OPTIONAL,
    OPTIONAL,
    OPTIONAL,

```

```

    sourceDAPS-Failure-r17          ENUMERATED {true}          OPTIONAL,
    ...
}

SPR-Cause-r18 ::=
    t304-cause-r18          ENUMERATED {true}          OPTIONAL,
    t310-cause-r18          ENUMERATED {true}          OPTIONAL,
    t312-cause-r18          ENUMERATED {true}          OPTIONAL,
    ...
}

TimeSinceFailure-r16 ::= INTEGER (0..172800)

MobilityHistoryReport-r16 ::= VisitedCellInfoList-r16

TimeUntilReconnection-r16 ::= INTEGER (0..172800)

TimeSinceCH0-Reconfig-r17 ::= INTEGER (0..1023)

TimeSinceCPAC-Reconfig-r18 ::= INTEGER (0.. 1023)

TimeConnSourceDAPS-Failure-r17 ::= INTEGER (0..1023)

UPInterruptionTimeAtH0-r17 ::= INTEGER (0..1023)

ElapsedTimeT316-r18 ::= INTEGER (0..2000)

ElapsedTimeSCG-Failure-r18 ::= INTEGER (0..1023)

TimeSinceSHR-r18 ::= INTEGER (0..172800)

-- TAG-UEINFORMATIONRESPONSE-STOP
-- ASN1STOP

```

<i>UEInformationResponse-IEs field descriptions</i>
<i>coarseLocationInfo</i> Parameter type Ellipsoid-Point defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit. The least significant bits of <i>degreesLatitude</i> and <i>degreesLongitude</i> are set to 0 to meet the accuracy requirement corresponds to a granularity of approximately 2 km. It is up to UE implementation how many LSBs are set to 0 to meet the accuracy requirement.
<i>connEstFailReport</i> This field is used to provide connection establishment failure or connection resume failure information.
<i>connEstFailReportList</i> This field is used to provide the list of <i>connEstFailReport</i> that are stored by the UE for the past up to <i>maxCEFReport-r17</i> .
<i>flightPathInfoReport</i> This field is used to provide the flight path information as list of waypoints and, if available, corresponding timestamps. List of size zero indicates the previously provided flight path information is no longer valid.
<i>logMeasReport</i> This field is used to provide the measurement results stored by the UE associated to logged MDT.
<i>measResultIdleEUTRA</i> EUTRA measurement results performed during RRC_INACTIVE or RRC_IDLE.
<i>measResultIdleNR</i> NR measurement results performed during RRC_INACTIVE or RRC_IDLE.
<i>ra-ReportList</i> This field is used to provide the list of RA reports that is stored by the UE for up to <i>maxRAReport-r16</i> number of random access procedures. If the UE is an eRedCap UE, this field is used to provide the list of RA reports that is stored by the UE for up to 2 number of random access procedures.
<i>rlf-Report</i> This field is used to indicate the RLF report related contents.
<i>successHO-Report</i> This field is used to provide the successful handover report if triggered based on the successful handover configuration.
<i>successPSCell-Report</i> This field is used to provide the successful PSCell change or addition report if triggered based on the successful PSCell change or addition report configuration.

LogMeasReport field descriptions
<i>absoluteTimeStamp</i> Indicates the absolute time when the logged measurement configuration logging is provided, as indicated by NR within <i>absoluteTimeInfo</i> .
<i>anyCellSelectionDetected</i> This field is used to indicate the detection of <i>any cell selection</i> state, as defined in TS 38.304 [20]. The UE sets this field when performing the logging of measurement results in RRC_IDLE or RRC_INACTIVE and there is no suitable cell or no acceptable cell.
<i>inDeviceCoexDetected</i> Indicates that measurement logging is suspended due to IDC problem detection.
<i>measResultServingCell</i> This field refers to the log measurement results taken in the Serving cell.
<i>numberOfGoodSSB</i> Indicates the number of good beams (beams that are above <i>absThreshSS-BlocksConsolidation</i> , if configured by the network) associated to the cells within the R value range (which is configured by network for cell reselection) of the highest ranked cell as part of the beam level measurements. If the UE has no SSB of a neighbour cell whose measurement quantity is above the <i>absThreshSS-BlocksConsolidation</i> or if the network has not configured the <i>absThreshSS-BlocksConsolidation</i> , then the UE does not include <i>numberOfGoodSSB</i> for the corresponding neighbour cell. If the UE has no SSB of the serving cell whose measurement quantity is above the <i>absThreshSS-BlocksConsolidation</i> or if the network has not configured the <i>absThreshSS-BlocksConsolidation</i> , then the UE shall set the <i>numberOfGoodSSB</i> for the serving cell to one.
<i>relativeTimeStamp</i> Indicates the time of logging measurement results, measured relative to the <i>absoluteTimeStamp</i> . Value in seconds.
<i>tce-Id</i> Parameter Trace Collection Entity Id: See TS 32.422 [52].
<i>traceRecordingSessionRef</i> Parameter Trace Recording Session Reference: See TS 32.422 [52].

ConnEstFailReport field descriptions
<i>measResultFailedCell</i> This field refers to the last measurement results taken in the cell, where connection establishment failure or connection resume failure happened.
<i>measResultNeighCells</i> This field refers to the neighbour cell measurements when connection establishment failure or connection resume failure happened.
<i>numberOfConnFail</i> This field is used to indicate the latest number of consecutive failed RRCSetup or RRCResume procedures in the same cell independent of RRC state transition.
<i>timeSinceFailure</i> This field is used to indicate the time that elapsed since the connection (establishment or resume) failure. Value in seconds. The maximum value 172800 means 172800s or longer.

RA-InformationCommon field descriptions
<i>absoluteFrequencyPointA</i> This field indicates the absolute frequency position of the reference resource block (Common RB 0).
<i>allPreamblesBlocked</i> This field is included when the all the preamble transmission attempts in the corresponding beam (SSB or CSI-RS) are blocked by failed LBT.
<i>attemptedBWP-InfoList</i> This field indicates <i>locationAndBandwidth</i> and <i>subcarrierSpacing</i> of all the bandwidth parts in which the consistent LBT failures are triggered at the moment of successful RA completion.
<i>locationAndBandwidth</i> Frequency domain location and bandwidth of the bandwidth part associated to the random-access resources used by the UE or of the bandwidth part in which the consistent LBT failures is triggered and not cancelled prior to successful completion of random access procedure (if this field is included in <i>attemptedBWP-InfoList</i>) or prior to RLF/HOF (if this field is included in <i>attemptedBWP-InfoList</i> or <i>bwp-Info</i>).
<i>numberOfLBT-Failures</i> This field is used to indicate the total number of preamble transmission attempts for which LBT failure indication is received in the RA procedure. If the number of LBT failure indications received from lower layers during the RA procedure exceeds or equals to 128, UE sets the field to 128. This field is optional present when there is at least one preamble transmission attempt for which LBT failure indication is received during the RA procedure, otherwise it is absent.
<i>numberOfPreamblesPerSSB-ForThisPartition</i> This field determines how many consecutive preambles are associated to the used feature or combination of features starting from the starting preamble(s) per SSB.
<i>perRAInfoList</i>, <i>perRAInfoList-v1660</i> This field provides detailed information about each of the random access attempts in the chronological order of the random access attempts. If <i>perRAInfoList-v1660</i> is present, it shall contain the same number of entries, listed in the same order as in <i>perRAInfoList-r16</i> .
<i>startPreambleForThisPartition</i> This field indicates the first preamble associated with the used feature or combination of features.
<i>subcarrierSpacing</i> Subcarrier spacing used in the bandwidth part associated to the random-access resources used by the UE or of the bandwidth part in which the consistent LBT failures is triggered and not cancelled prior to successful completion of random access procedure (if this field is included in <i>attemptedBWP-InfoList</i>) or prior to RLF/HOF (if this field is included in <i>attemptedBWP-InfoList</i> or <i>bwp-Info</i>).
<i>triggeredFeatureCombination</i> One or more features (e.g., <i>RedCap</i> , <i>Slicing</i> , <i>SDT</i> and <i>MSG3 repetition</i>) that triggers the random-access procedure. When triggered feature is <i>Slicing</i> , UE includes all the S-NSSAIs associated to the slices triggering the access attempt in the random-access procedure.
<i>usedFeatureCombination</i> The feature or combination of features (e.g., <i>redCap</i> , <i>smallData</i> , <i>nsag</i> and <i>msg3-Repetitions</i>) associated to the used random-access resources as specified in TS 38.321[3].

RA-Report field descriptions
cellID This field indicates the CGI of the cell in which the associated random access procedure was performed.
contentionDetected This field is used to indicate that contention was detected for the transmitted preamble in the given random access attempt or not. This field is not included when the UE performs random access attempt is using contention free random-access resources or when the <i>raPurpose</i> is set to <i>requestForOtherSI</i> or when the RA attempt is a 2-step RA attempt and fallback to 4-step RA did not occur (i.e. <i>fallbackToFourStepRA</i> is not included).
csi-RS-Index, csi-RS-Index-v1660 This field is used to indicate the CSI-RS index corresponding to the random access attempt. If the random access procedure is for beam failure recovery, the field indicates the NZP-CSI-RS-ResourceId. For CSI-RS index larger than maxNrofCSI-RS-ResourcesRRM-1, the index value is the sum of csi-RS-Index (without suffix) and csi-RS-Index-v1660.
dlPathlossRSRP Measured RSRP of the DL pathloss reference obtained at the time of <i>RA_Type</i> selection stage of the RA procedure as captured in TS 38.321 [3].
dlRSRPAboveThreshold In 4 step random access procedure, this field is used to indicate whether the DL beam (SSB) quality associated to the random access attempt was above or below the threshold <i>rsrp-ThresholdSSB</i> in <i>beamFailureRecoveryConfig</i> in UL BWP configuration of UL BWP selected for random access procedure initiated for beam failure recovery. Otherwise, if the UE has received <i>rsrp-ThresholdSSB-r17</i> in <i>FeatureCombinationPreambles</i> used for the feature specific random access, the field is used to indicate whether DL beam (SSB) quality associated to the random access attempt was above or below this <i>rsrp-ThresholdSSB-r17</i> ; else, if <i>rsrp-ThresholdSSB-r17</i> is not included in <i>FeatureCombinationPreambles</i> used for the feature specific random access, this field is used to indicate whether DL beam (SSB) quality associated to the random access attempt was above or below <i>rsrp-ThresholdSSB</i> included in the <i>RACH-ConfigCommon</i> which includes this <i>FeatureCombinationPreambles</i> ; else, this field is used to indicate whether DL beam (SSB) quality associated to the random access attempt was above or below <i>rsrp-ThresholdSSB</i> in <i>rach-ConfigCommon</i> in UL BWP configuration of UL BWP selected for random access procedure. In 2 step random access procedure, if the UE has received <i>rsrp-ThresholdSSB-r17</i> in <i>FeatureCombinationPreambles</i> used for the feature specific random access, the field is used to indicate whether DL beam (SSB) quality associated to the random access attempt was above or below this <i>rsrp-ThresholdSSB-r17</i> ; else, if <i>rsrp-ThresholdSSB-r17</i> is not included in <i>FeatureCombinationPreambles</i> used for the feature specific random access, this field is used to indicate whether the DL beam (SSB) quality associated to the random access attempt was above or below the threshold <i>msgA-RSRP-ThresholdSSB</i> included in the <i>RACH-ConfigCommonTwoStepRA</i> which includes this <i>FeatureCombinationPreambles</i> ; else, this field is used to indicate whether the DL beam (SSB) quality associated to the random access attempt was above or below the threshold <i>msgA-RSRP-ThresholdSSB</i> in <i>rach-ConfigCommonTwoStepRA</i> in UL BWP configuration of UL BWP selected for random access procedure.
fallbackToFourStepRA This field indicates if a fallback indication in MsgB is received (according to TS 38.321 [3]) for the 2-step random access attempt.
intendedSIBs This field indicates the SIB(s) the UE wanted to receive as a result of the on demand SI request (when the RA procedure is a used as a SI request) initiated by the UE. That is, it indicates the one(s) of the SIB(s) in the SI message(s) requested to be broadcast that the UE was interested in. Value <i>posSIB</i> indicates that the UE wanted to receive one or more positioning SIB(s).
lbt-Detected This field is included when there is at least one LBT failure indication received prior to change of beam for preamble transmission during RA procedure, otherwise this field is absent.
msg1-SCS-From-prach-ConfigurationIndex This field is set by the UE with the corresponding SCS for CBRA as derived from the <i>prach-ConfigurationIndex</i> in <i>RACH-ConfigGeneric</i> when the <i>msg1-SubcarrierSpacing</i> is absent; otherwise, this field is absent.
msg1-SCS-From-prach-ConfigurationIndexCFRA This field is set by the UE with the corresponding SCS for CFRA as derived from the <i>prach-ConfigurationIndex</i> in <i>RACH-ConfigGeneric</i> when the <i>msg1-SubcarrierSpacing</i> is absent; otherwise, this field is absent.
msgA-PUSCH-PayloadSize This field indicates the size of the overall payload available in the UE buffer at the time of initiating the 2 step RA procedure. The value refers to the index of TS 38.321 [3], table 6.1.3.1-1, corresponding to the UE buffer size.

<i>msgA-RO-FDM</i>
This field indicates the number of msgA PRACH transmission occasions Frequency-Division Multiplexed in one time instance for the PRACH resources configured for 2-step CBRA..
<i>msgA-RO-FDMCFRA</i>
This field indicates the number of msgA PRACH transmission occasions Frequency-Division Multiplexed in one time instance for the PRACH resources configured for 2-step CFRA.
<i>msgA-RO-FrequencyStart</i>
This field indicates the lowest resource block of the contention based random-access resources for 2-step CBRA in the random-access procedure. The indication has the form of the offset of the lowest PRACH transmissions occasion with respect to PRB 0 in the frequency domain.
<i>msgA-RO-FrequencyStartCFRA</i>
This field indicates the lowest resource block of the contention free random-access resources for the 2-step CFRA in the random-access procedure. The indication has the form of the offset of the lowest PRACH transmissions occasion with respect to PRB 0 in the frequency domain.
<i>msgA-SCS-From-prach-ConfigurationIndex</i>
This field is set by the UE with the corresponding SCS as derived from the <i>msgA-PRACH-ConfigurationIndex</i> in <i>RACH-ConfigGenericTwoStepRA</i> (see tables Table 6.3.3.1-1, Table 6.3.3.1-2, Table 6.3.3.2-2 and Table 6.3.3.2-3, TS 38.211 [16]) when the <i>msgA-SubcarrierSpacing</i> is absent and when only 2-step random-access resources are available in the UL BWP used in the random-access procedure; otherwise, this field is absent.
<i>numberOfPreamblesSentOnCSI-RS</i>
This field is used to indicate the total number of successive RA preambles that were transmitted on the corresponding CSI-RS.
<i>numberOfPreamblesSentOnSSB</i>
This field is used to indicate the total number of successive RA preambles that were transmitted on the corresponding SS/PBCH block.
<i>onDemandSISuccess</i>
This field is set to <i>true</i> when the RA report entry is included because of either msg1 based on demand SI request or msg3 based on demand SI request and if the on-demand SI request is successful. Otherwise, the field is absent.
<i>perRAAttemptInfoList</i>
This field provides detailed information about a random access attempt.
<i>perRACSI-RSInfoList</i>
This field provides detailed information about the successive random access attempts associated to the same CSI-RS.
<i>perRASSBInfoList</i>
This field provides detailed information about the successive random access attempts associated to the same SS/PBCH block.
<i>ra-InformationCommon</i>
This field is used to provide information on random access attempts. This field is mandatory present.
<i>raPurpose</i>
This field is used to indicate the RA scenario for which the RA report entry is triggered. The RA accesses associated to Initial access from RRC_IDLE, RRC re-establishment procedure, transition from RRC-INACTIVE. The indicator <i>beamFailureRecovery</i> is used in case of successful beam failure recovery related RA procedure in the SpCell [3]. The indicator <i>reconfigurationWithSync</i> is used if the UE executes a reconfiguration with sync. The indicator <i>ulUnSynchronized</i> is used if the random access procedure is initiated in a SpCell by DL or UL data arrival during RRC_CONNECTED when the timeAlignmentTimer is not running in the PTAG or if the RA procedure is initiated in a serving cell by a PDCCH order [3]. The indicator <i>schedulingRequestFailure</i> is used in case of SR failures [3]. The indicator <i>noPUCCHResourceAvailable</i> is used when the UE has no valid SR PUCCH resources configured [3]. The indicator <i>requestForOtherSI</i> is used for MSG1 based on demand SI request. The indicator <i>msg3RequestForOtherSI</i> is used in case of MSG3 based SI request. The indication <i>lbtFailure</i> is used when the UE initiates RACH in SpCell due to consistent uplink LBT failures [3]. The field can also be used for the SCG-related RA-Report when the <i>raPurpose</i> is set to <i>beamFailureRecovery</i> , <i>reconfigurationWithSync</i> , <i>ulUnSynchronized</i> , <i>schedulingRequestFailure</i> , <i>noPUCCHResourceAvailable</i> and <i>lbtFailure</i> .
<i>sdt-Failed</i>
This field is included when the RA report entry is included because of SDT and if the SDT transmission failed. Otherwise, the field is absent.

spCellID This field is used to indicate the CGI of the SpCell of the cell group associated to the SCell in which the associated random access procedure was performed. If the UE performs RA procedure on a SCell associated to the MCG, then this field is set to the CGI of the PCell and if the UE performs RA procedure on a SCell associated to the SCG, then this field is set to the CGI of the PSCell. If the CGI of the PSCell is not available at the UE for the RA procedure performed on a SCell associated to the SCG or for the RA procedure on the PSCell, this field is set to the CGI of the PCell. Otherwise, the field is absent.
ssb-Index This field is used to indicate the SS/PBCH index of the SS/PBCH block corresponding to the random access attempt.
ssbsForSI-Acquisition This field indicates the SSB(s) (in the form of SSB index(es)) that the UE used to receive the requested SI message(s). The field is present if the purpose of the random access procedure was to request on-demand SI (i.e. if the <i>raPurpose</i> is set to <i>requestForOtherSI</i> or <i>msg3RequestForOtherSI</i>). Otherwise, the field is absent.

RLF-Report field descriptions
bwp-Info This field is used to indicate the BWP information in which the UE detected consistent uplink LBT failure. This field is set only when the detected consistent uplink LBT failure did not trigger the random access procedure.
choCandidateCellList This field is used to indicate the list of candidate target cells for conditional handover included in <i>condRRCReconfig</i> at the time of connection failure. The field does not include the candidate target cells included in <i>measResultNeighCells</i> .
choCellId This field is used to indicate the candidate target cell for conditional handover included in <i>condRRCReconfig</i> that the UE selected for CHO based recovery while T311 is running.
connectionFailureType This field is used to indicate whether the connection failure is due to radio link failure or handover failure.
csi-rsRLMConfigBitmap, csi-rsRLMConfigBitmap-v1650 These fields are used to indicate the CSI-RS indexes configured in the RLM configurations for the active BWP when the UE declares RLF or HOF. The UE first fills in the <i>csi-rsRLMConfigBitmap-r16</i> to indicate the first 96 CSI-RS indexes and then <i>csi-rsRLMConfigBitmap-v1650</i> to indicate the latter 96 CSI-RS indexes. The first/leftmost bit in <i>csi-rsRLMConfigBitmap-r16</i> corresponds to CSI-RS index 0, the second bit corresponds to CSI-RS index 1. The first/leftmost bit in <i>csi-rsRLMConfigBitmap-v1650</i> corresponds to CSI-RS index 96, the second bit corresponds to CSI-RS index 97. These fields are included only if the <i>RadioLinkMonitoringConfig</i> for the respective BWP is configured.
c-RNTI This field indicates the C-RNTI used in the PCell upon detecting radio link failure or the C-RNTI used in the source PCell upon handover failure.
elapsedTimeSCG-Failure This field is used to indicate the time elapsed between the SCG failure and the MCG failure. The maximum value <i>1023</i> means 1023ms or longer.
elapsedTimeT316 This field is used to indicate the value of the elapsed time of the timer T316. Value in milliseconds.
failedPCellId This field is used to indicate the PCell in which RLF is detected or the target PCell of the failed handover. For intra-NR handover <i>nrFailedPCellId</i> is included and for the handover from NR to EUTRA <i>eutraFailedPCellId</i> is included. The UE sets the ARFCN according to the frequency band used for transmission/ reception when the failure occurred.
failedPCellId-EUTRA This field is used to indicate the PCell in which RLF is detected or the source PCell of the failed handover in an E-UTRA RLF report.
lastHO-Type This field is used to indicate the type of the last executed handover before the last detected connection failure. The field is set to <i>cho</i> if the last executed handover was initiated by a conditional reconfiguration execution. The field is set to <i>daps</i> if the last executed handover was a DAPS handover.
mcg-RecoveryFailureCause This field is used to indicate the cause of the fast MCG recovery failure.
measResultListEUTRA This field refers to the last measurement results taken in the neighboring EUTRA Cells, when the radio link failure or handover failure happened.
measResultListNR This field refers to the last measurement results taken in the neighboring NR Cells, when the radio link failure or handover failure happened.
measResultLastServCell This field refers to the log measurement results taken in the PCell upon detecting radio link failure or the source PCell upon handover failure.
measResultLastServCellRSSI This field refers to the log RSSI measurement results in dBm (see TS 38.215 [9]) taken for the frequency of the PCell upon detecting radio link failure or source PCell upon detecting handover failure.
measResultNeighFreqListRSSI This field is used to log the RSSI measurement results in dBm (see TS 38.215 [9]) taken for the neighbouring frequencies upon detecting radio link failure or handover failure, when UE operates in shared spectrum.

measResult-RLF-Report-EUTRA
Includes the E-UTRA <i>RLF-Report-r9</i> IE as specified in TS 36.331 [10].
measResult-RLF-Report-EUTRA-v1690
Includes the E-UTRA <i>RLF-Report-v9e0</i> IE as specified in TS 36.331 [10].
noSuitableCellFound
This field is set by the UE when the T311 expires.
previousPCellId
This field is used to indicate the source PCell of the last handover (source PCell when the last executed <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> was received, or when the last <i>MobilityFromNRCommand</i> message concerned an inter-RAT handover from NR to EUTRA was received). For intra-NR handover or the handover from NR to EUTRA <i>nrPreviousCell</i> is included and for the handover from EUTRA to NR <i>eutraPreviousCell</i> is included.
pSCellId
This field is used to indicate the PSCell in which the UE failed to perform fast MCG recovery procedure or the UE successfully performed fast MCG recovery procedure.
ra-InformationCommon
This field is optionally included when <i>connectionFailureType</i> is set to 'hof' and a random access procedure is triggered for the failed reconfiguration with sync, or when <i>connectionFailureType</i> is set to 'rlf' and the <i>rlf-Cause</i> equals to 'randomAccessProblem' or 'beamRecoveryFailure'; otherwise this field is absent.
reconnectCellId
This field is used to indicate the cell in which the UE comes back to connected after connection failure and after failing to perform reestablishment, or to indicate the suitable cell in which the UE reconnects after failure in performing <i>MobilityFromNRCommand</i> for voice fallback (without initiating re-establishment procedure). If the UE comes back to RRC CONNECTED in an NR cell then <i>nrReconnectCellId</i> is included and if the UE comes back to RRC CONNECTED in an LTE cell then <i>eutraReconnectCellId</i> is included.
reestablishmentCellId
If the UE was not configured with <i>conditionalReconfiguration</i> at the time of re-establishment attempt, or if the cell selected for the re-establishment attempt is not a candidate target cell for conditional reconfiguration, this field is used to indicate the cell in which the re-establishment attempt was made after connection failure.
rlf-Cause
This field is used to indicate the cause of the last radio link failure that was detected. In case of handover failure information reporting (i.e., the <i>connectionFailureType</i> is set to 'hof'), the UE is allowed to set this field to any value, except for the case in which a radio link failure was detected in the source PCell while performing a DAPS handover.
scg-FailedAfterMCG
This field is set if for the SCG failure is detected after MCG failure while T316 is running.
ssbRLMConfigBitmap
This field is used to indicate the SS/PBCH block indexes configured in the RLM configurations for the active BWP when the UE declares RLF or HOF. The first/leftmost bit corresponds to SSB index 0, the second bit corresponds to SSB index 1. This field is included only if the <i>RadioLinkMonitoringConfig</i> for the respective BWP is configured.
timeConnFailure
This field is used to indicate the time elapsed since the last HO execution until connection failure. Actual value = field value * 100ms. The maximum value 1023 means 102.3s or longer.
timeConnSourceDAPS-Failure
This field is used to indicate the time that elapsed between the last DAPS handover execution and the radio link failure detected in the source cell while T304 is running. Value in milliseconds. The maximum value 1023 means 1023ms or longer.
timeSinceFailure
This field is used to indicate the time that elapsed since the connection (radio link or handover) failure. Value in seconds. The maximum value 172800 means 172800s or longer. In the case of failure(s) (either at source or at target or at both) associated to DAPS handover, this field indicates the time elapsed since the latest connection (radio link or handover) failure.
timeSinceCHO-Reconfig
In case of handover failure, this field is used to indicate the time elapsed between the initiation of the last handover execution towards the target cell and the reception of the latest conditional reconfiguration. In case of radio link failure, this field is used to indicate the time elapsed between the radio link failure and the reception of the latest conditional reconfiguration while connected to the source PCell. Actual value = field value * 100ms. The maximum value 1023 means 102.3s or longer.
timeUntilReconnection
This field is used to indicate the time that elapsed between the connection (radio link or handover) failure and the next time the UE comes to RRC CONNECTED in an NR or EUTRA cell, after failing to perform reestablishment. Value in seconds. The maximum value 172800 means 172800s or longer.

voiceFallbackHO

This field is set if for the failed mobility from NR, the *voiceFallbackIndication* was included in the *MobilityFromNRCommand* message.

SuccessHO-Report field descriptions	
c-RNTI	This field indicates the C-RNTI assigned by the target PCell of the handover for which the successful HO report was generated.
eutra-TargetCellInfo	This field is used to indicate the target EUTRA PCell and the last measurement results of the target PCell of a handover in which the successful handover triggers the <i>SuccessHO-Report</i> .
eutra-C-RNTI	This field indicates the C-RNTI assigned by the E-UTRA target PCell of the mobility from NR command for which the successful HO report was generated.
measResultListNR	This field refers to the last measurement results taken in the neighboring NR Cells when a successful handover is executed.
measResultNeighFreqListRSSI	This field is used to log the RSSI measurement results in dBm (see TS 38.215 [9]) taken for the neighbouring frequencies upon successful handover execution.
measResultServCellRSSI	This field refers to the log RSSI measurement results in dBm (see TS 38.215 [9]) taken for the frequency of the source PCell upon successful handover execution.
rll-InSourceDAPS	This field indicates whether a radio link failure occurred at the source cell while T304 was running.
shr-Cause	This field is used to indicate the cause of the successful HO report.
sourceCellMeas	This field refers to the last measurement results taken in the source PCell of a handover in which the successful handover triggers the <i>SuccessHO-Report</i> .
sourcePCellId	This field is used to indicate the source PCell of a handover in which the successful handover triggers the <i>SuccessHO-Report</i> .
targetPCellId	This field is used to indicate the target PCell of a handover in which the successful handover triggers the <i>SuccessHO-Report</i> .
targetCellMeas	This field refers to the last measurement results taken in the target PCell of a handover in which the successful handover triggers the <i>SuccessHO-Report</i> .
timeSinceCHO-Reconfig	This field is used to indicate the time elapsed between the initiation of the last conditional reconfiguration execution towards the target cell and the reception of the latest conditional reconfiguration for this target cell. Actual value = field value * 100ms. The maximum value 1023 means 102.3s or longer.
timeSinceSHR	This field is used to indicate the time elapsed since the execution of the last MobilityFromNRCommand towards the target EUTRA cell. Value in seconds. The maximum value 172800 means 172800s or longer.
uplInterruptionTimeAtHO	This field is used to indicate the time elapsed between the time of arrival of the last PDCP PDU received from the source cell for any data radio bearer and the time of arrival of the first non-duplicate PDCP PDU received from the target cell for any data radio bearer, and it is measured at the time of arrival of the first non-duplicate PDCP PDU received from the target cell for any data radio bearer. The field is set only in case of DAPS handover. Value in milliseconds. The maximum value 1023 means 1023ms or longer.

<i>FlightPathInfoReport</i> field descriptions
timeStamp Time stamp that describes estimated time of arrival, if available, of the UE at the corresponding <i>wayPointLocation</i> .
wayPointLocation Location coordinates of the planned waypoint. Parameter type <i>LocationCoordinates</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.

<i>SuccessPSCell-Report</i> field descriptions
measResultListNR This field refers to the last measurement results according to the initiating node configuration taken in the neighboring NR Cells when a successful PSCell change/addition is executed.
pCellId This field is used to indicate the PCell to which the UE was connected when the successful PSCell change or addition triggers the <i>SuccessPSCell-Report</i> .
sn-InitiatedPSCellChange This field indicates whether the PSCell change procedure for which the successful PSCell change report is logged is SN initiated or not.
spr-Cause This field is used to indicate the cause of the successful PSCell change or addition report.
sourcePSCellId This field is used to indicate the source PSCell of a PSCell change in which the successful PSCell change triggers the <i>SuccessPSCell-Report</i> .
sourcePSCellMeas This field refers to the last measurement results taken in the source PSCell of a PSCell change in which the successful PSCell change triggers the <i>SuccessPSCell-Report</i> .
targetPSCellId This field is used to indicate the target PSCell of a PSCell change/addition in which the successful PSCell change or addition triggers the <i>SuccessPSCell-Report</i> .
targetPSCellMeas This field refers to the last measurement results taken in the target PSCell of a PSCell change/addition in which the successful PSCell change or addition triggers the <i>SuccessPSCell-Report</i> .
timeSinceCPAC-Reconfig This field is used to indicate the time elapsed between the initiation of the last conditional reconfiguration execution towards the target PSCell and the reception of the latest conditional reconfiguration for this target PSCell. Actual value = field value * 100ms. The maximum value 1023 means 102.3s or longer.

– *UEPositioningAssistanceInfo*

The *UEPositioningAssistanceInfo* message is used to provide positioning assistance information as requested by the Network.

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

UEPositioningAssistanceInfo message

```

-- ASN1START
-- TAG-UEPOSITIONINGASSISTANCEINFO-START

UEPositioningAssistanceInfo-r17 ::= SEQUENCE {
    criticalExtensions      CHOICE {
        uePositioningAssistanceInfo-r17    UEPositioningAssistanceInfo-r17-IEs,
        criticalExtensionsFuture            SEQUENCE {}
    }
}

UEPositioningAssistanceInfo-r17-IEs ::= SEQUENCE {
    ue-TxTEG-AssociationList-r17    UE-TxTEG-AssociationList-r17            OPTIONAL,
    lateNonCriticalExtension         OCTET STRING                          OPTIONAL,
    nonCriticalExtension             UEPositioningAssistanceInfo-v1720-IEs    OPTIONAL
}

UEPositioningAssistanceInfo-v1720-IEs ::= SEQUENCE {
    ue-TxTEG-TimingErrorMarginValue-r17    ENUMERATED {tc0, tc2, tc4, tc6, tc8, tc12, tc16, tc20, tc24, tc32, tc40, tc48, tc56,
                                                    tc64, tc72, tc80}                                OPTIONAL,
    nonCriticalExtension                   SEQUENCE {}                                OPTIONAL
}

UE-TxTEG-AssociationList-r17 ::= SEQUENCE (SIZE (1..maxNrOfTxTEGReport-r17)) OF UE-TxTEG-Association-r17

UE-TxTEG-Association-r17 ::= SEQUENCE {
    ue-TxTEG-ID-r17                INTEGER (0..maxNrOfTxTEG-ID-1-r17),
    nr-TimeStamp-r17               NR-TimeStamp-r17,
    associatedSRS-PosResourceIdList-r17 SEQUENCE (SIZE(1..maxNrofSRS-PosResources-r16)) OF SRS-PosResourceId-r16,
    servCellId-r17                 ServCellIndex                                OPTIONAL
}

NR-TimeStamp-r17 ::= SEQUENCE {
    nr-SFN-r17                    INTEGER (0..1023),
    nr-Slot-r17                   CHOICE {
        scs15-r17                INTEGER (0..9),
        scs30-r17                INTEGER (0..19),
        scs60-r17                INTEGER (0..39),
        scs120-r17               INTEGER (0..79)
    },
    ...
}

-- TAG-UEPOSITIONINGASSISTANCEINFO-STOP
-- ASN1STOP

```

UEPositioningAssistanceInfo field descriptions
associatedSRS-PosResourceIdList This field indicates list of SRS for Positioning Resources which are associated to the <i>ue-TxTEG-ID</i> .
nr-TimeStamp This field specifies the latest time instance at which the association is valid prior to the reporting.
servCellID This field indicates the serving cell information of SRS for positioning resources associated to the UE Tx TEG report.
ue-TxTEG-ID Identifies the ID of UE Tx TEG.
ue-TxTEG-TimingErrorMarginValue This field specifies the UE Tx TEG timing error margin value of all the UE Tx TEGs within one <i>UEPositioningAssistanceInfo</i> . Value <i>tc0</i> corresponds to 0 Tc, <i>tc2</i> corresponds to 2 Tc and so on (see TS 37.355 [49]).

–
 ULDedicatedMessageSegment

The *ULDedicatedMessageSegment* message is used to transfer segments of the *UECapabilityInformation* or *MeasurementReportAppLayer* message. SRB1 is used at transfer of segments of *UECapabilityInformation* and SRB4 or SRB5 is used at transfer of segments of *MeasurementReportAppLayer*.

Signalling radio bearer: SRB1, SRB4 or SRB5

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to Network

ULDedicatedMessageSegment message

```

-- ASN1START
-- TAG-ULDEDICATEDMESSAGESEGMENT-START

ULDedicatedMessageSegment-r16 ::=
    criticalExtensions
        uLDedicatedMessageSegment-r16
        criticalExtensionsFuture
    }
}

ULDedicatedMessageSegment-r16-IEs ::=
    segmentNumber-r16
    rrc-MessageSegmentContainer-r16
    rrc-MessageSegmentType-r16
    lateNonCriticalExtension
    nonCriticalExtension
}

-- TAG-ULDEDICATEDMESSAGESEGMENT-STOP
-- ASN1STOP

```

SEQUENCE {

CHOICE {

ULDedicatedMessageSegment-r16-IEs,

SEQUENCE {}

SEQUENCE {

INTEGER (0..15),

OCTET STRING,

ENUMERATED {notLastSegment, lastSegment},

OCTET STRING

SEQUENCE {}

OPTIONAL,

OPTIONAL

<i>ULDedicatedMessageSegment</i> field descriptions
<i>segmentNumber</i> Identifies the sequence number of a segment within the encoded UL DCCH message.
<i>rrc-MessageSegmentContainer</i> Includes a segment of the encoded UL DCCH message. The size of the included segment in this container should be small enough that the resulting encoded RRC message PDU is less than or equal to the PDCP SDU size limit.
<i>rrc-MessageSegmentType</i> Indicates whether the included UL DCCH message segment is the last segment or not.

– *ULInformationTransfer*

The *ULInformationTransfer* message is used for the uplink transfer of NAS or non-3GPP dedicated information, or IAB-DU specific F1-C related information.

Signalling radio bearer: SRB2 or SRB1 (only if SRB2 not established yet). If SRB2 is suspended, the UE does not send this message until SRB2 is resumed. If only *dedicatedInfoF1c* is included, SRB2 is used.

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to network

ULInformationTransfer message

```
-- ASN1START
-- TAG-ULINFORMATIONTRANSFER-START

ULInformationTransfer ::=
    criticalExtensions
        ulInformationTransfer
        criticalExtensionsFuture
    }
SEQUENCE {
    CHOICE {
        ULInformationTransfer-IEs,
        SEQUENCE {}
    }
}

ULInformationTransfer-IEs ::=
    dedicatedNAS-Message
    lateNonCriticalExtension
    nonCriticalExtension
SEQUENCE {
    DedicatedNAS-Message
    OCTET STRING
    ULInformationTransfer-v1700-IEs
OPTIONAL,
OPTIONAL,
OPTIONAL
}

ULInformationTransfer-v1700-IEs ::=
    dedicatedInfoF1c-r17
    nonCriticalExtension
SEQUENCE {
    DedicatedInfoF1c-r17
    SEQUENCE {}
OPTIONAL,
OPTIONAL
}

-- TAG-ULINFORMATIONTRANSFER-STOP
```

-- ASN1STOP

— *ULInformationTransferIRAT*

The *ULInformationTransferIRAT* message is used for the uplink transfer of information terminated at NR MCG but specified by another RAT. In this version of the specification, the message is used for V2X sidelink communication messages specified in TS 36.331 [10].

Signalling radio bearer: SRB1

RLC-SAP: AM

Logical channel: DCCH

Direction: UE to network

ULInformationTransferIRAT message

```
-- ASN1START
-- TAG-ULINFORMATIONTRANSFERIRAT-START

ULInformationTransferIRAT-r16 ::=
    criticalExtensions
        c1
            ulInformationTransferIRAT-r16
            spare3 NULL, spare2 NULL, spare1 NULL
        },
    criticalExtensionsFuture
        SEQUENCE {}
    }

ULInformationTransferIRAT-r16-IEs ::=
    ul-DCCH-MessageEUTRA-r16
    lateNonCriticalExtension
    nonCriticalExtension
    SEQUENCE {
        OCTET STRING
        OCTET STRING
        SEQUENCE {}
        OPTIONAL,
        OPTIONAL,
        OPTIONAL
    }

-- TAG-ULINFORMATIONTRANSFERIRAT-STOP
-- ASN1STOP
```

<i>ULInformationTransferIRAT</i> field descriptions
<i>ul-DCCH-MessageEUTRA</i> Includes the <i>UL-DCCH-Message</i> as defined in TS 36.331 [10]. In this version of the specification, the field is only used to transfer the E-UTRA RRC <i>MeasurementReport</i> , E-UTRA RRC <i>SidelinkUEInformation</i> and the E-UTRA RRC <i>UEAssistanceInformation</i> messages.

– *ULInformationTransferMRDC*

The *ULInformationTransferMRDC* message is used for the uplink transfer of MR-DC dedicated information (e.g. for transferring the NR or E-UTRA RRC *MeasurementReport* message, the *FailureInformation* message, the *UEAssistanceInformation* message, the *RRCReconfigurationComplete* message, the *IABOtherInformation* message or the NR or E-UTRA RRC *MCGFailureInformation* message).

- Signalling radio bearer: SRB1, SRB3
- RLC-SAP: AM
- Logical channel: DCCH
- Direction: UE to Network

ULInformationTransferMRDC message

```
-- ASN1START
-- TAG-ULINFORMATIONTRANSFERMRDC-START

ULInformationTransferMRDC ::=
    criticalExtensions
        c1
            ulInformationTransferMRDC
            spare3 NULL, spare2 NULL, spare1 NULL
        },
    criticalExtensionsFuture
        SEQUENCE {}
    }

ULInformationTransferMRDC-IEs ::=
    SEQUENCE {
        ul-DCCH-MessageNR          OCTET STRING          OPTIONAL,
        ul-DCCH-MessageEUTRA       OCTET STRING          OPTIONAL,
        lateNonCriticalExtension    OCTET STRING          OPTIONAL,
        nonCriticalExtension        SEQUENCE {}            OPTIONAL
    }

-- TAG-ULINFORMATIONTRANSFERMRDC-STOP
-- ASN1STOP
```

ULInformationTransferMRDC field descriptions
ul-DCCH-MessageNR Includes the <i>UL-DCCH-Message</i> . In this version of the specification, the field is only used to transfer the NR RRC <i>MeasurementReport</i> , <i>RRCReconfigurationComplete</i> , <i>UEAssistanceInformation</i> , <i>FailureInformation</i> , and <i>IABOtherInformation</i> messages when sent via SRB1 and to transfer the NR <i>MCGFailureInformation</i> message when sent via SRB3.
ul-DCCH-MessageEUTRA Includes the <i>UL-DCCH-Message</i> . In this version of the specification, the field is only used to transfer the E-UTRA RRC <i>MeasurementReport</i> message when sent via SRB1 and to transfer the E-UTRA <i>MCGFailureInformation</i> message when sent via SRB3.

6.3 RRC information elements

6.3.0 Parameterized types

– *SetupRelease*

SetupRelease allows the *ElementTypeParam* to be used as the referenced data type for the setup and release entries. See A.3.8 for guidelines.

```
-- ASN1START
-- TAG-SETUPRELEASE-START

SetupRelease { ElementTypeParam } ::= CHOICE {
    release      NULL,
    setup        ElementTypeParam
}

-- TAG-SETUPRELEASE-STOP
-- ASN1STOP
```

6.3.1 System information blocks

– *SIB2*

SIB2 contains cell re-selection information common for intra-frequency, inter-frequency and/or inter-RAT cell re-selection (i.e. applicable for more than one type of cell re-selection but not necessarily all) as well as intra-frequency cell re-selection information other than neighbouring cell related.

***SIB2* information element**

```
-- ASN1START
-- TAG-SIB2-START

SIB2 ::=
    cellReselectionInfoCommon
    nrofSS-BlocksToAverage
    absThreshSS-BlocksConsolidation
    rangeToBestCell
    q-Hyst
    speedStateReselectionPars
    mobilityStateParameters
    q-HystSF
    sf-Medium
    sf-High
}

SEQUENCE {
    SEQUENCE {
        INTEGER (2..maxNrofSS-BlocksToAverage)
        ThresholdNR
        RangeToBestCell
    }
    ENUMERATED {
        dB0, dB1, dB2, dB3, dB4, dB5, dB6, dB8, dB10,
        dB12, dB14, dB16, dB18, dB20, dB22, dB24},
    SEQUENCE {
        MobilityStateParameters,
    }
    SEQUENCE {
        ENUMERATED {dB-6, dB-4, dB-2, dB0},
        ENUMERATED {dB-6, dB-4, dB-2, dB0}
    }
}
```

```
-- Need S
-- Need S
-- Need R
```



```

        spare3, spare2, spare1},
        ENUMERATED {
            s5, s10, s20, s30, s60, s120, s180,
            s240, s300, spare7, spare6, spare5,
            spare4, spare3, spare2, spare1}
    }
    cellEdgeEvaluation-r16          SEQUENCE {
        s-SearchThresholdP-r16      ReselectionThreshold,
        s-SearchThresholdQ-r16      ReselectionThresholdQ
    }
    combineRelaxedMeasCondition-r16 ENUMERATED {true}
    highPriorityMeasRelax-r16       ENUMERATED {true}
}
]],
[[
cellEquivalentSize-r17            INTEGER(2..16)
relaxedMeasurement-r17           SEQUENCE {
    stationaryMobilityEvaluation-r17 SEQUENCE {
        s-SearchDeltaP-Stationary-r17 ENUMERATED {dB2, dB3, dB6, dB9, dB12, dB15, spare2, spare1},
        t-SearchDeltaP-Stationary-r17 ENUMERATED {s5, s10, s20, s30, s60, s120, s180, s240, s300, spare7, spare6, spare5,
            spare4, spare3, spare2, spare1}
    },
    cellEdgeEvaluationWhileStationary-r17 SEQUENCE {
        s-SearchThresholdP2-r17      ReselectionThreshold,
        s-SearchThresholdQ2-r17      ReselectionThresholdQ
    }
    combineRelaxedMeasCondition2-r17 ENUMERATED {true}
}
]]
}

RangeToBestCell ::= Q-OffsetRange

-- TAG-SIB2-STOP
-- ASN1STOP

```

OPTIONAL, -- Need R

OPTIONAL -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL -- Need R

OPTIONAL -- Need R

OPTIONAL, -- Cond HSDN

OPTIONAL -- Need R

OPTIONAL, -- Need R

OPTIONAL -- Need R

OPTIONAL -- Need R

SIB2 field descriptions
<i>absThreshSS-BlocksConsolidation</i> Threshold for consolidation of L1 measurements per RS index. If the field is absent, the UE uses the measurement quantity as specified in TS 38.304 [20].
<i>cellEdgeEvaluation</i> Indicates the criteria for a UE to detect that it is not at cell edge, in order to relax measurement requirements for cell reselection (see TS 38.304 [20], clause 5.2.4.9.2).
<i>cellEdgeEvaluationWhileStationary</i> Indicates the criteria for a UE to detect that it is not at cell edge while stationary, in order to relax measurement requirements for cell reselection (see TS 38.304 [20], clause 5.2.4.9.4).
<i>cellEquivalentSize</i> The number of cell count used for mobility state estimation for this cell as specified in TS 38.304 [20].
<i>cellReselectionInfoCommon</i> Cell re-selection information common for intra-frequency, inter-frequency and/ or inter-RAT cell re-selection.
<i>cellReselectionServingFreqInfo</i> Information common for non-intra-frequency cell re-selection i.e. cell re-selection to inter-frequency and inter-RAT cells.
<i>combineRelaxedMeasCondition</i> When both <i>lowMobilityEvaluation</i> and <i>cellEdgeEvaluation</i> criteria are present in SIB2, this parameter configures the UE to fulfil both criteria in order to relax measurement requirements for cell reselection. If the field is absent, the UE is allowed to relax measurement requirements for cell reselection when either or both of the criteria are met. (See TS 38.304 [20], clause 5.2.4.9.0)
<i>combineRelaxedMeasCondition2</i> When both <i>stationaryMobilityEvaluation</i> and <i>cellEdgeEvaluationWhileStationary</i> criteria are present in SIB2, this parameter configures the UE to fulfil both criteria in order to relax measurement requirements for cell reselection. If the field is absent, the UE is allowed to relax measurement requirements for cell reselection when only the stationary criteria is met. (See TS 38.304 [20], clause 5.2.4.9.0)
<i>deriveSSB-IndexFromCell</i> This field indicates whether the UE can utilize serving cell timing to derive the index of SS block transmitted by neighbour cell. If this field is set to <i>true</i> , the UE assumes SFN and frame boundary alignment across cells on the serving frequency as specified in TS 38.133 [14].
<i>frequencyBandList</i> Indicates the list of frequency bands for which the NR cell reselection parameters apply. The UE behaviour in case the field is absent is described in clause 5.2.2.4.3.
<i>frequencyBandListAerial</i> Indicates the list of frequency bands for aerial operation for which the NR cell reselection parameters apply. The UE behaviour in case the field is absent is described in clause 5.2.2.4.3.
<i>highPriorityMeasRelax</i> Indicates whether measurements can be relaxed on high priority frequencies. If the field is absent, the UE shall not relax measurements on high priority frequencies beyond "T _{higher_priority_search} " unless both low mobility and not at cell edge criteria are fulfilled (see TS 38.133 [14], clauses 4.2.2.7, 4.2.2.10 and 4.2.2.11).
<i>intraFreqCellReselectionInfo</i> Cell re-selection information common for intra-frequency cells.
<i>lowMobilityEvaluation</i> Indicates the criteria for a UE to detect low mobility, in order to relax measurement requirements for cell reselection (see TS 38.304 [20], clause 5.2.4.9.1).
<i>nrofSS-BlocksToAverage</i> Number of SS blocks to average for cell measurement derivation. If the field is absent the UE uses the measurement quantity as specified in TS 38.304 [20].
<i>p-Max</i> Value in dBm applicable for the intra-frequency neighbouring NR cells. If absent the UE applies the maximum power according to TS 38.101-1 [15] in case of an FR1 cell, TS 38.101-2 [39] in case of an FR2 cell or TS 38.101-5 [75] in case of an NTN cell. In this release of the specification, if <i>p-Max</i> is present on a carrier frequency in FR2, the UE shall ignore the field and applies the maximum power according to TS 38.101-2 [39] for FR2-1/2 or according to TS 38.101-5 [75] for FR2-NTN. This field is ignored by IAB-MT and NCR-MT. The IAB-MT applies output power and emissions requirements, as specified in TS 38.174 [63]. The NCR-MT applies output power and emissions requirements as specified in TS 38.106 [79].
<i>q-Hyst</i> Parameter "Q _{hyst} " in TS 38.304 [20], Value in dB. Value <i>dB1</i> corresponds to 1 dB, <i>dB2</i> corresponds to 2 dB and so on.

SIB2 field descriptions
q-HystSF Parameter "Speed dependent ScalingFactor for Qhyst" in TS 38.304 [20]. The <i>sf-Medium</i> and <i>sf-High</i> concern the additional hysteresis to be applied, in Medium and High Mobility state respectively, to Qhyst as defined in TS 38.304 [20]. In dB. Value <i>dB-6</i> corresponds to -6dB, <i>dB-4</i> corresponds to -4dB and so on.
q-QualMin Parameter "Q _{qualmin} " in TS 38.304 [20], applicable for intra-frequency neighbour cells. If the field is absent, the UE applies the (default) value of negative infinity for Q _{qualmin} .
q-RxLevMin Parameter "Q _{rxlevmin} " in TS 38.304 [20], applicable for intra-frequency neighbour cells.
q-RxLevMinSUL Parameter "Q _{rxlevmin} " in TS 38.304 [20], applicable for intra-frequency neighbour cells.
rangeToBestCell Parameter "rangeToBestCell" in TS 38.304 [20]. The network configures only non-negative (in dB) values.
relaxedMeasurement Configuration to allow relaxation of RRM measurement requirements for cell reselection (see TS 38.304 [20], clause 5.2.4.9). In NTN, this field is only applicable for GSO neighbour cells.
s-IntraSearchP Parameter "S _{intraSearchP} " in TS 38.304 [20].
s-IntraSearchQ Parameter "S _{intraSearchQ} " in TS 38.304 [20]. If the field is absent, the UE applies the (default) value of 0 dB for S _{intraSearchQ} .
s-NonIntraSearchP Parameter "S _{nonIntraSearchP} " in TS 38.304 [20]. If this field is absent, the UE applies the (default) value of infinity for S _{nonIntraSearchP} .
s-NonIntraSearchQ Parameter "S _{nonIntraSearchQ} " in TS 38.304 [20]. If the field is absent, the UE applies the (default) value of 0 dB for S _{nonIntraSearchQ} .
s-SearchDeltaP Parameter "S _{searchDeltaP} " in TS 38.304 [20]. Value <i>dB3</i> corresponds to 3 dB, <i>dB6</i> corresponds to 6 dB and so on.
s-SearchDeltaP-Stationary Parameter "S _{searchDeltaP-Stationary} " in TS 38.304 [20]. Value <i>dB2</i> corresponds to 2 dB, <i>dB3</i> corresponds to 3 dB and so on.
s-SearchThresholdP, s-SearchThresholdP2 Parameters "S _{searchThresholdP} " and "S _{searchThresholdP2} " in TS 38.304 [20]. The network configures <i>s-SearchThresholdP</i> and <i>s-SearchThresholdP2</i> to be less than or equal to <i>s-IntraSearchP</i> and <i>s-NonIntraSearchP</i> .
s-SearchThresholdQ, s-SearchThresholdQ2 Parameters "S _{searchThresholdQ} " and "S _{searchThresholdQ2} " in TS 38.304 [20]. The network configures <i>s-SearchThresholdQ</i> and <i>s-SearchThresholdQ2</i> to be less than or equal to <i>s-IntraSearchQ</i> and <i>s-NonIntraSearchQ</i> .
smtc Measurement timing configuration for intra-frequency measurement. If this field is absent, the UE assumes that SSB periodicity is 5 ms for the intra-frequency cells. If the field is broadcast by an NTN cell, the <i>offset</i> (derived from parameter <i>periodicityAndOffset</i>) is based on the assumption that the gNB-UE propagation delay difference between the serving cell and neighbour cells equals to 0 ms, and UE can adjust the actual <i>offset</i> based on the actual propagation delay difference.
smtc2-LP Measurement timing configuration for intra-frequency neighbour cells with a Long Periodicity (LP) indicated by periodicity in <i>smtc2-LP</i> . The timing offset and duration are equal to the offset and duration indicated in <i>smtc</i> in <i>intraFreqCellReselectionInfo</i> . The periodicity in <i>smtc2-LP</i> can only be set to a value strictly larger than the periodicity in <i>smtc</i> in <i>intraFreqCellReselectionInfo</i> (e.g. if <i>smtc</i> indicates sf20 the Long Periodicity can only be set to sf40, sf80 or sf160, if <i>smtc</i> indicates sf160, <i>smtc2-LP</i> cannot be configured). The <i>pci-List</i> , if present, includes the physical cell identities of the intra-frequency neighbour cells with Long Periodicity. If <i>smtc2-LP</i> is absent, the UE assumes that there are no intra-frequency neighbour cells with a Long Periodicity. This field is not configured together with <i>smtc4list</i> .
smtc4list Measurement timing configuration list for NTN deployments. The offset of each SSB-MTC4 in <i>smtc4list</i> is based on the assumption that the gNB-UE propagation delay difference between the serving cell and neighbour cells equals to 0 ms, and UE can adjust the actual <i>offset</i> based on the actual propagation delay difference. For a UE that supports less SMTCs than what is included in this list, it is up to the UE to select which SMTCs to consider.

SIB2 field descriptions
ssb-PositionQCL-Common Indicates the QCL relation between SS/PBCH blocks for intra-frequency neighbor cells as specified in TS 38.213 [13], clause 4.1.
ssb-ToMeasure The set of SS blocks to be measured within the SMTC measurement duration (see TS 38.215 [9]). When the field is absent the UE measures on all SS-blocks.
stationaryMobilityEvaluation Indicates the criteria for a UE to detect stationary mobility, in order to relax measurement requirements for cell reselection (see TS 38.304 [20], clause 5.2.4.9.0).
t-ReselectionNR Parameter "TreselectionNR" in TS 38.304 [20].
t-ReselectionNR-SF Parameter "Speed dependent ScalingFactor for TreselectionNR" in TS 38.304 [20]. If the field is absent, the UE behaviour is specified in TS 38.304 [20].
threshServingLowP Parameter "ThreshServing, LowP" in TS 38.304 [20].
threshServingLowQ Parameter "ThreshServing, LowQ" in TS 38.304 [20].
t-SearchDeltaP Parameter "TSearchDeltaP" in TS 38.304 [20]. Value in seconds. Value s5 means 5 seconds, value s10 means 10 seconds and so on.
t-SearchDeltaP-Stationary Parameter "TSearchDeltaP-Stationary" in TS 38.304 [20]. Value in seconds. Value s5 means 5 seconds, value s10 means 10 seconds and so on.

Conditional Presence	Explanation
HSDN	The field is optionally present, Need R, if <i>speedStateReselectionPars</i> is present; otherwise the field is not present.
SharedSpectrum	This field is mandatory present if this intra-frequency operates with shared spectrum channel access in FR1. Otherwise, it is absent, Need R.
SharedSpectrum2	This field is optionally present if this intra-frequency operates with shared spectrum channel access in FR2-2, Need R. Otherwise, it is absent, Need R.

–

SIB3

SIB3 contains neighbouring cell related information relevant only for intra-frequency cell re-selection. The IE includes cells with specific re-selection parameters as well as exclude-listed cells.

SIB3 information element

-- ASN1START			
-- TAG-SIB3-START			
SIB3 ::=	SEQUENCE {		
intraFreqNeighCellList	IntraFreqNeighCellList	OPTIONAL,	-- Need R
intraFreqExcludedCellList	IntraFreqExcludedCellList	OPTIONAL,	-- Need R
lateNonCriticalExtension	OCTET STRING	OPTIONAL,	
...			
[[			
intraFreqNeighCellList-v1610	IntraFreqNeighCellList-v1610	OPTIONAL,	-- Need R
intraFreqAllowedCellList-r16	IntraFreqAllowedCellList-r16	OPTIONAL,	-- Cond SharedSpectrum2

```

    intraFreqCAG-CellList-r16      SEQUENCE (SIZE (1..maxPLMN)) OF IntraFreqCAG-CellListPerPLMN-r16  OPTIONAL  -- Need R
  ]],
  [[
    intraFreqNeighHSDN-CellList-r17  IntraFreqNeighHSDN-CellList-r17  OPTIONAL,  -- Need R
    intraFreqNeighCellList-v1710     IntraFreqNeighCellList-v1710     OPTIONAL  -- Need R
  ]],
  [[
    channelAccessMode2-r17           ENUMERATED {enabled}              OPTIONAL  -- Need R
  ]]
}

IntraFreqNeighCellList ::= SEQUENCE (SIZE (1..maxCellIntra)) OF IntraFreqNeighCellInfo

IntraFreqNeighCellList-v1610 ::= SEQUENCE (SIZE (1..maxCellIntra)) OF IntraFreqNeighCellInfo-v1610

IntraFreqNeighCellList-v1710 ::= SEQUENCE (SIZE (1..maxCellIntra)) OF IntraFreqNeighCellInfo-v1710

IntraFreqNeighCellInfo ::= SEQUENCE {
    physCellId,
    q-OffsetCell,
    q-RxLevMinOffsetCell             INTEGER (1..8)              OPTIONAL,  -- Need R
    q-RxLevMinOffsetCellSUL          INTEGER (1..8)              OPTIONAL,  -- Need R
    q-QualMinOffsetCell              INTEGER (1..8)              OPTIONAL,  -- Need R
    ...
}

IntraFreqNeighCellInfo-v1610 ::= SEQUENCE {
    ssb-PositionQCL-r16              SSB-PositionQCL-Relation-r16  OPTIONAL  -- Cond SharedSpectrum2
}

IntraFreqNeighCellInfo-v1710 ::= SEQUENCE {
    ssb-PositionQCL-r17              SSB-PositionQCL-Relation-r17  OPTIONAL  -- Cond SharedSpectrum2
}

IntraFreqExcludedCellList ::= SEQUENCE (SIZE (1..maxCellExcluded)) OF PCI-Range

IntraFreqAllowedCellList-r16 ::= SEQUENCE (SIZE (1..maxCellAllowed)) OF PCI-Range

IntraFreqCAG-CellListPerPLMN-r16 ::= SEQUENCE {
    plmn-IdentityIndex-r16           INTEGER (1..maxPLMN),
    cag-CellList-r16                 SEQUENCE (SIZE (1..maxCAG-Cell-r16)) OF PCI-Range
}

IntraFreqNeighHSDN-CellList-r17 ::= SEQUENCE (SIZE (1..maxCellIntra)) OF PCI-Range

-- TAG-SIB3-STOP
-- ASN1STOP

```

SIB3 field descriptions
channelAccessMode2 If present, this field indicates that intra-frequency neighbor cells apply channel access mode procedures for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4 for FR2-2. If absent, the intra-frequency neighbor cells do not apply any channel access procedure.
intraFreqAllowedCellList List of allow-listed intra-frequency neighbouring cells, see TS 38.304 [20], clause 5.2.4.
intraFreqCAG-CellList List of intra-frequency neighbouring CAG cells (as defined in TS 38.304 [20]) per PLMN.
intraFreqExcludedCellList List of exclude-listed intra-frequency neighbouring cells.
intraFreqNeighCellList List of intra-frequency neighbouring cells with specific cell re-selection parameters. If <i>intraFreqNeighCellList-v1610</i> is present, it shall contain the same number of entries, listed in the same order as in <i>intraFreqNeighCellList</i> (without suffix).
intraFreqNeighHSDN-CellList List of intra-frequency neighbouring HSDN cells as specified in TS 38.304 [20].
plmn-IdentityIndex Index of the PLMN across the <i>plmn-IdentityInfoList</i> and <i>npn-IdentityInfoList</i> fields included in SIB1.
q-OffsetCell Parameter "Qoffset _{s,n} " in TS 38.304 [20].
q-QualMinOffsetCell Parameter "Q _{qualminoffsetcell} " in TS 38.304 [20]. Actual value Q _{qualminoffsetcell} = field value [dB].
q-RxLevMinOffsetCell Parameter "Q _{rxlevminoffsetcell} " in TS 38.304 [20]. Actual value Q _{rxlevminoffsetcell} = field value * 2 [dB].
q-RxLevMinOffsetCellSUL Parameter "Q _{rxlevminoffsetcellSUL} " in TS 38.304 [20]. Actual value Q _{rxlevminoffsetcellSUL} = field value * 2 [dB].
ssb-PositionQCL Indicates the QCL relation between SS/PBCH blocks for a specific intra-frequency neighbor cell as specified in TS 38.213 [13], clause 4.1. If provided, the cell specific value overwrites the value signalled by <i>ssb-PositionQCL-Common</i> in <i>SIB2</i> for the indicated cell.

Conditional Presence	Explanation
<i>SharedSpectrum2</i>	The field is optional present, Need R, if this intra-frequency or neighbor cell operates with shared spectrum channel access. Otherwise, it is absent, Need R.

– SIB4

SIB4 contains information relevant for inter-frequency cell re-selection (i.e. information about other NR frequencies and inter-frequency neighbouring cells relevant for cell re-selection), which can also be used for NR idle/inactive measurements. The IE includes cell re-selection parameters common for a frequency as well as cell specific re-selection parameters.

SIB4 information element

-- ASN1START
 -- TAG-SIB4-START

SIB4 ::=	SEQUENCE {			
interFreqCarrierFreqList	InterFreqCarrierFreqList,			
lateNonCriticalExtension	OCTET STRING	OPTIONAL,		
...				
[[				
interFreqCarrierFreqList-v1610	InterFreqCarrierFreqList-v1610	OPTIONAL	--	Need R
]],				
[[				
interFreqCarrierFreqList-v1700	InterFreqCarrierFreqList-v1700	OPTIONAL	--	Need R
]],				
[[				
interFreqCarrierFreqList-v1720	InterFreqCarrierFreqList-v1720	OPTIONAL	--	Need R
]],				
[[				
interFreqCarrierFreqList-v1730	InterFreqCarrierFreqList-v1730	OPTIONAL	--	Need R
]],				
[[				
interFreqCarrierFreqList-v1760	InterFreqCarrierFreqList-v1760	OPTIONAL	--	Need R
]],				
[[				
interFreqCarrierFreqList-v1800	InterFreqCarrierFreqList-v1800	OPTIONAL	--	Need R
]]				
}				
InterFreqCarrierFreqList ::=	SEQUENCE (SIZE (1..maxFreq)) OF	InterFreqCarrierFreqInfo		
InterFreqCarrierFreqList-v1610 ::=	SEQUENCE (SIZE (1..maxFreq)) OF	InterFreqCarrierFreqInfo-v1610		
InterFreqCarrierFreqList-v1700 ::=	SEQUENCE (SIZE (1..maxFreq)) OF	InterFreqCarrierFreqInfo-v1700		
InterFreqCarrierFreqList-v1720 ::=	SEQUENCE (SIZE (1..maxFreq)) OF	InterFreqCarrierFreqInfo-v1720		
InterFreqCarrierFreqList-v1730 ::=	SEQUENCE (SIZE (1..maxFreq)) OF	InterFreqCarrierFreqInfo-v1730		
InterFreqCarrierFreqList-v1760 ::=	SEQUENCE (SIZE (1..maxFreq)) OF	InterFreqCarrierFreqInfo-v1760		
InterFreqCarrierFreqList-v1800 ::=	SEQUENCE (SIZE (1..maxFreq)) OF	InterFreqCarrierFreqInfo-v1800		
InterFreqCarrierFreqInfo ::=	SEQUENCE {			
dl-CarrierFreq	ARFCN-ValueNR,			
frequencyBandList	MultiFrequencyBandListNR-SIB	OPTIONAL,	--	Cond Mandatory
frequencyBandListSUL	MultiFrequencyBandListNR-SIB	OPTIONAL,	--	Need R
nrofSS-BlocksToAverage	INTEGER (2..maxNrofSS-BlocksToAverage)	OPTIONAL,	--	Need S
absThreshSS-BlocksConsolidation	ThresholdNR	OPTIONAL,	--	Need S
smc	SSB-MTC	OPTIONAL,	--	Need S
ssbSubcarrierSpacing	SubcarrierSpacing,			
ssb-ToMeasure	SSB-ToMeasure	OPTIONAL,	--	Need S
deriveSSB-IndexFromCell	BOOLEAN,			
ss-RSSI-Measurement	SS-RSSI-Measurement	OPTIONAL,	--	Need R
q-RxLevMin	Q-RxLevMin,			
q-RxLevMinSUL	Q-RxLevMin	OPTIONAL,	--	Need R
q-QualMin	Q-QualMin	OPTIONAL,	--	Need S
p-Max	P-Max	OPTIONAL,	--	Need S
t-ReselectionNR	T-Reselection,			

t-ReselectionNR-SF	SpeedStateScaleFactors	OPTIONAL,	-- Need S
threshX-HighP	ReselectionThreshold,		
threshX-LowP	ReselectionThreshold,		
threshX-Q	SEQUENCE {		
threshX-HighQ	ReselectionThresholdQ,		
threshX-LowQ	ReselectionThresholdQ		
}		OPTIONAL,	-- Cond RSRQ
cellReselectionPriority	CellReselectionPriority	OPTIONAL,	-- Need R
cellReselectionSubPriority	CellReselectionSubPriority	OPTIONAL,	-- Need R
q-OffsetFreq	Q-OffsetRange	DEFAULT dB0,	
interFreqNeighCellList	InterFreqNeighCellList	OPTIONAL,	-- Need R
interFreqExcludedCellList	InterFreqExcludedCellList	OPTIONAL,	-- Need R
...			
}			
InterFreqCarrierFreqInfo-v1610 ::=	SEQUENCE {		
interFreqNeighCellList-v1610	InterFreqNeighCellList-v1610	OPTIONAL,	-- Need R
smtc2-LP-r16	SSB-MTC2-LP-r16	OPTIONAL,	-- Need R
interFreqAllowedCellList-r16	InterFreqAllowedCellList-r16	OPTIONAL,	-- Cond SharedSpectrum2
ssb-PositionQCL-Common-r16	SSB-PositionQCL-Relation-r16	OPTIONAL,	-- Cond SharedSpectrum
interFreqCAG-CellList-r16	SEQUENCE (SIZE (1..maxPLMN)) OF InterFreqCAG-CellListPerPLMN-r16	OPTIONAL	-- Need R
}			
InterFreqCarrierFreqInfo-v1700 ::=	SEQUENCE {		
interFreqNeighHSDN-CellList-r17	InterFreqNeighHSDN-CellList-r17	OPTIONAL,	-- Need R
highSpeedMeasInterFreq-r17	ENUMERATED {true}	OPTIONAL,	-- Need R
redCapAccessAllowed-r17	ENUMERATED {true}	OPTIONAL,	-- Need R
ssb-PositionQCL-Common-r17	SSB-PositionQCL-Relation-r17	OPTIONAL,	-- Cond SharedSpectrum
interFreqNeighCellList-v1710	InterFreqNeighCellList-v1710	OPTIONAL	-- Cond SharedSpectrum2
}			
InterFreqCarrierFreqInfo-v1720 ::=	SEQUENCE {		
smtc4list-r17	SSB-MTC4List-r17	OPTIONAL	-- Need R
}			
InterFreqCarrierFreqInfo-v1730 ::=	SEQUENCE {		
channelAccessMode2-r17	ENUMERATED {enabled}	OPTIONAL	-- Need R
}			
InterFreqCarrierFreqInfo-v1760 ::=	SEQUENCE {		
frequencyBandList-v1760	MultiFrequencyBandListNR-SIB-v1760	OPTIONAL,	-- Need R
frequencyBandListSUL-v1760	MultiFrequencyBandListNR-SIB-v1760	OPTIONAL	-- Need R
}			
InterFreqCarrierFreqInfo-v1800 ::=	SEQUENCE {		
dl-CarrierFreq-r18	ARFCN-ValueNR	OPTIONAL,	-- Cond LessThan5MHz
frequencyBandList-r18	MultiFrequencyBandListNR-SIB	OPTIONAL,	-- Cond LessThan5MHz
frequencyBandListAerial-r18	MultiFrequencyBandListNR-Aerial-SIB-r18	OPTIONAL,	-- Need S
mobileIAB-CellList-r18	PCI-Range	OPTIONAL,	-- Need R
mobileIAB-Freq-r18	ENUMERATED {true}	OPTIONAL,	-- Need R
eRedCapAccessAllowed-r18	ENUMERATED {true}	OPTIONAL,	-- Need R
tn-AreaIdList-r18	SEQUENCE (SIZE (1..maxTN-AreaInfo-r18)) OF TN-AreaId-r18	OPTIONAL,	-- Need R
accessAllowed2RxXR-r18	ENUMERATED {true}	OPTIONAL	-- Need R


```

}

InterFreqNeighHSDN-CellList-r17 ::= SEQUENCE (SIZE (1..maxCellInter)) OF PCI-Range

InterFreqNeighCellList ::= SEQUENCE (SIZE (1..maxCellInter)) OF InterFreqNeighCellInfo

InterFreqNeighCellList-v1610 ::= SEQUENCE (SIZE (1..maxCellInter)) OF InterFreqNeighCellInfo-v1610

InterFreqNeighCellList-v1710 ::= SEQUENCE (SIZE (1..maxCellInter)) OF InterFreqNeighCellInfo-v1710

InterFreqNeighCellInfo ::= SEQUENCE {
    physCellId          PhysCellId,
    q-OffsetCell        Q-OffsetRange,
    q-RxLevMinOffsetCell INTEGER (1..8) OPTIONAL, -- Need R
    q-RxLevMinOffsetCellSUL INTEGER (1..8) OPTIONAL, -- Need R
    q-QualMinOffsetCell INTEGER (1..8) OPTIONAL, -- Need R
    ...
}

InterFreqNeighCellInfo-v1610 ::= SEQUENCE {
    ssb-PositionQCL-r16 SSB-PositionQCL-Relation-r16 OPTIONAL -- Cond SharedSpectrum2
}

InterFreqNeighCellInfo-v1710 ::= SEQUENCE {
    ssb-PositionQCL-r17 SSB-PositionQCL-Relation-r17 OPTIONAL -- Cond SharedSpectrum2
}

InterFreqExcludedCellList ::= SEQUENCE (SIZE (1..maxCellExcluded)) OF PCI-Range

InterFreqAllowedCellList-r16 ::= SEQUENCE (SIZE (1..maxCellAllowed)) OF PCI-Range

InterFreqCAG-CellListPerPLMN-r16 ::= SEQUENCE {
    plmn-IdentityIndex-r16 INTEGER (1..maxPLMN),
    cag-CellList-r16      SEQUENCE (SIZE (1..maxCAG-Cell-r16)) OF PCI-Range
}

-- TAG-SIB4-STOP
-- ASN1STOP

```

SIB4 field descriptions
<i>absThreshSS-BlocksConsolidation</i> Threshold for consolidation of L1 measurements per RS index. If the field is absent, the UE uses the measurement quantity as specified in TS 38.304 [20].
<i>accessAllowed2RxXR</i> Indicates if the cells on the frequency support 2Rx XR UEs. If present, 2Rx XR UEs shall consider only these NR frequencies in cell reselection evaluation.
<i>channelAccessMode2</i> If present, this field indicates that the neighbor cells on the inter-frequency apply channel access mode procedures for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4 for FR2-2. If absent, the neighbor cells on the inter-frequency do not apply any channel access procedure.
<i>deriveSSB-IndexFromCell</i> This field indicates whether the UE may use the timing of any detected cell on that frequency to derive the SSB index of all neighbour cells on that frequency. If this field is set to <i>true</i> , the UE assumes SFN and frame boundary alignment across cells on the neighbor frequency as specified in TS 38.133 [14].
<i>dl-CarrierFreq</i> This field indicates center frequency of the SS block of the neighbour cells, where the frequency corresponds to a GSCN value as specified in TS 38.101-1 [15] or TS 38.101-5 [75]. For a neighbouring carrier frequency when <i>dl-CarrierFreq-r18</i> is included, the network sets the corresponding value of <i>dl-CarrierFreq</i> (without suffix) to 250, and the UE applies <i>dl-CarrierFreq-r18</i> instead of <i>dl-CarrierFreq</i> (without suffix). In such case, if the UE does not support the GSCN value corresponding to the <i>dl-CarrierFreq-r18</i> , it ignores the corresponding neighbour cell.
<i>eRedCapAccessAllowed</i> Indicates whether eRedCap UEs are allowed to access cells on the frequency.
<i>frequencyBandList</i> Indicates the list of frequency bands for which the NR cell reselection parameters apply. For a neighbouring carrier frequency when <i>frequencyBandList-r18</i> is included, the network sets the corresponding value of <i>freqBandIndicatorNR</i> in <i>frequencyBandList</i> (without suffix) to 200, and the UE applies <i>frequencyBandList-r18</i> instead of <i>frequencyBandList</i> (without suffix).
<i>frequencyBandListAerial</i> Indicates the list of frequency bands for aerial operation for which the NR cell reselection parameters apply. The UE behaviour in case the field is absent is described in clause 5.2.2.4.5.
<i>highSpeedMeasInterFreq</i> If the field is set to <i>true</i> and UE supports high speed inter-frequency IDLE/INACTIVE measurements, the UE shall apply the enhanced inter-frequency RRM requirements on the inter-frequency carrier to support high speed up to 500 km/h in RRC_IDLE/RRC_INACTIVE as specified in TS 38.133 [14].
<i>interFreqAllowedCellList</i> List of allow-listed inter-frequency neighbouring cells, see TS 38.304 [20], clause 5.2.4.
<i>interFreqCAG-CellList</i> List of inter-frequency neighbouring CAG cells (as defined in TS 38.304 [20] per PLMN.
<i>interFreqCarrierFreqList</i> List of neighbouring carrier frequencies and frequency specific cell re-selection information. If <i>interFreqCarrierFreqList-v1610</i> , <i>interFreqCarrierFreqList-v1700</i> , <i>interFreqCarrierFreqList-v1720</i> , <i>interFreqCarrierFreqList-v1730</i> , <i>interFreqCarrierFreqList-v1760</i> or <i>interFreqCarrierFreqList-v1800</i> are present, they shall contain the same number of entries, listed in the same order as in <i>interFreqCarrierFreqList</i> (without suffix).
<i>interFreqExcludedCellList</i> List of exclude-listed inter-frequency neighbouring cells.
<i>interFreqNeighCellList</i> List of inter-frequency neighbouring cells with specific cell re-selection parameters. If <i>interFreqNeighCellList-v1610</i> is present, it shall contain the same number of entries, listed in the same order as in <i>interFreqNeighCellList</i> (without suffix).
<i>interFreqNeighHSDN-CellList</i> List of inter-frequency neighbouring HSDN cells as specified in TS 38.304 [20].
<i>mobileIAB-CellList</i> Contains a PCI range on which mobile IAB cells may be deployed.

SIB4 field descriptions
mobileIAB-Freq If present, it indicates that a mobile IAB node may be deployed on the inter-frequency carrier.
nrofSS-BlocksToAverage Number of SS blocks to average for cell measurement derivation. If the field is absent, the UE uses the measurement quantity as specified in TS 38.304 [20].
plmn-IdentityIndex Index of the PLMN across the <i>plmn-IdentityInfoList</i> and <i>npn-IdentityInfoList</i> fields included in SIB1.
p-Max Value in dBm applicable for the neighbouring NR cells on this carrier frequency. If absent the UE applies the maximum power according to TS 38.101-1 [15] in case of an FR1 cell, TS 38.101-2 [39] in case of an FR2 cell or TS 38.101-5 [75] in case of an NTN cell. In this release of the specification, if <i>p-Max</i> is present on a carrier frequency in FR2, the UE shall ignore the field and applies the maximum power according to TS 38.101-2 [39] for FR2-1/2 or according to TS 38.101-5 [75] for FR2-NTN. This field is ignored by IAB-MT and NCR-MT. The IAB-MT applies output power and emissions requirements, as specified in TS 38.174 [63]. The NCR-MT applies output power and emissions requirements as specified in TS 38.106 [79].
q-OffsetCell Parameter "Qoffset _{s,n} " in TS 38.304 [20].
q-OffsetFreq Parameter "Qoffset _{frequency} " in TS 38.304 [20].
q-QualMin Parameter "Q _{qualmin} " in TS 38.304 [20]. If the field is absent, the UE applies the (default) value of negative infinity for Q _{qualmin} .
q-QualMinOffsetCell Parameter "Q _{qualminoffsetcell} " in TS 38.304 [20]. Actual value Q _{qualminoffsetcell} = field value [dB].
q-RxLevMin Parameter "Q _{rxlevmin} " in TS 38.304 [20].
q-RxLevMinOffsetCell Parameter "Q _{rxlevminoffsetcell} " in TS 38.304 [20]. Actual value Q _{rxlevminoffsetcell} = field value * 2 [dB].
q-RxLevMinOffsetCellSUL Parameter "Q _{rxlevminoffsetcellSUL} " in TS 38.304 [20]. Actual value Q _{rxlevminoffsetcellSUL} = field value * 2 [dB].
q-RxLevMinSUL Parameter "Q _{rxlevmin} " in TS 38.304 [20].
redCapAccessAllowed Indicates whether RedCap UEs are allowed to access cells on the frequency.
smtc Measurement timing configuration for inter-frequency measurement. If this field is absent, the UE assumes that SSB periodicity is 5 ms in this frequency. If the field is broadcast by an NTN cell, the <i>offset</i> (derived from parameter <i>periodicityAndOffset</i>) is based on the assumption that the gNB-UE propagation delay difference between the serving cell and neighbour cells equals to 0 ms, and UE can adjust the actual <i>offset</i> based on the actual propagation delay difference.
smtc2-LP Measurement timing configuration for inter-frequency neighbour cells with a Long Periodicity (LP) indicated by periodicity in <i>smtc2-LP</i> . The timing offset and duration are equal to the offset and duration indicated in <i>smtc</i> in <i>InterFreqCarrierFreqInfo</i> . The periodicity in <i>smtc2-LP</i> can only be set to a value strictly larger than the periodicity in <i>smtc</i> in <i>InterFreqCarrierFreqInfo</i> (e.g. if <i>smtc</i> indicates sf20 the Long Periodicity can only be set to sf40, sf80 or sf160, if <i>smtc</i> indicates sf160, <i>smtc2-LP</i> cannot be configured). The <i>pci-List</i> , if present, includes the physical cell identities of the inter-frequency neighbour cells with Long Periodicity. If <i>smtc2-LP</i> is absent, the UE assumes that there are no inter-frequency neighbour cells with a Long Periodicity. This field is not configured together with <i>smtc4list</i> .
smtc4list Measurement timing configuration list for NTN deployments. The offset of each SSB-MTC4 in <i>smtc4list</i> is based on the assumption that the gNB-UE propagation delay difference between the serving cell and neighbour cells equals to 0 ms, and UE can adjust the actual <i>offset</i> based on the actual propagation delay difference. For a UE that supports less SMTCS than what is included in this list, it is up to the UE to select which SMTCS to consider.

SIB4 field descriptions
ssb-PositionQCL Indicates the QCL relation between SS/PBCH blocks for a specific neighbor cell as specified in TS 38.213 [13], clause 4.1. If provided, the cell specific value overwrites the common value signalled by <i>ssb-PositionQCL-Common</i> in <i>SIB4</i> for the indicated cell.
ssb-PositionQCL-Common Indicates the QCL relation between SS/PBCH blocks for inter-frequency neighbor cells as specified in TS 38.213 [13], clause 4.1.
ssb-ToMeasure The set of SS blocks to be measured within the SMTC measurement duration (see TS 38.215 [9]). When the field is absent the UE measures on all SS-blocks.
ssbSubcarrierSpacing Subcarrier spacing of SSB. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 120 or 240 kHz FR2-2: 120, 480, or 960 kHz
threshX-HighP Parameter "Thresh _{X, HighP} " in TS 38.304 [20].
threshX-HighQ Parameter "Thresh _{X, HighQ} " in TS 38.304 [20].
threshX-LowP Parameter "Thresh _{X, LowP} " in TS 38.304 [20].
threshX-LowQ Parameter "Thresh _{X, LowQ} " in TS 38.304 [20].
tn-ArealList List of TN area identifiers. The associated coverage information is provided in <i>SIB25</i> .
t-ReselectionNR Parameter "Treselection _{NR} " in TS 38.304 [20].
t-ReselectionNR-SF Parameter "Speed dependent ScalingFactor for Treselection _{NR} " in TS 38.304 [20]. If the field is absent, the UE behaviour is specified in TS 38.304 [20].

Conditional Presence	Explanation
<i>LessThan5MHz</i>	The field is mandatory present if the <i>carrierBandwidth</i> in <i>SIB1</i> indicates UL or DL transmission bandwidth other than 15 PRB and the corresponding neighbour cell(s) support(s) 12 PRB, 15 PRB or 20 PRB transmission bandwidth configuration as defined in TS 38.101-1 [15], TS 38.211 [16] and TS 38.213 [13]. Otherwise, the field is optional, Need R.
<i>Mandatory</i>	The field is mandatory present in <i>SIB4</i> .
<i>RSRQ</i>	The field is mandatory present if <i>threshServingLowQ</i> is present in <i>SIB2</i> ; otherwise it is absent.
<i>SharedSpectrum</i>	This field is mandatory present if this inter-frequency operates with shared spectrum channel access. Otherwise, it is absent, Need R.
<i>SharedSpectrum2</i>	The field is optional present, Need R, if this inter-frequency or neighbor cell operates with shared spectrum channel access. Otherwise, it is absent, Need R.

– SIB5

SIB5 contains information relevant only for inter-RAT cell re-selection i.e. information about E-UTRA frequencies and E-UTRAs neighbouring cells relevant for cell re-selection. The IE includes cell re-selection parameters common for a frequency.

SIB5 information element

```
-- ASN1START
-- TAG-SIB5-START
```

```
SIB5 ::=
    carrierFreqListEUTRA          SEQUENCE {
        CarrierFreqListEUTRA      OPTIONAL,      -- Need R
        t-ReselectionEUTRA        T-Reselection,
        t-ReselectionEUTRA-SF     SpeedStateScaleFactors
        lateNonCriticalExtension  OCTET STRING
        ...,
        [[
            carrierFreqListEUTRA-v1610  CarrierFreqListEUTRA-v1610      OPTIONAL      -- Need R
        ]],
        [[
            carrierFreqListEUTRA-v1700  CarrierFreqListEUTRA-v1700      OPTIONAL,      -- Need R
            idleModeMeasVoiceFallback-r17 ENUMERATED{true}              OPTIONAL      -- Need R
        ]],
        [[
            carrierFreqListEUTRA-v1800  CarrierFreqListEUTRA-v1800      OPTIONAL      -- Need R
        ]]
    }

CarrierFreqListEUTRA ::= SEQUENCE (SIZE (1..maxEUTRA-Carrier)) OF CarrierFreqEUTRA

CarrierFreqListEUTRA-v1610 ::= SEQUENCE (SIZE (1..maxEUTRA-Carrier)) OF CarrierFreqEUTRA-v1610

CarrierFreqListEUTRA-v1700 ::= SEQUENCE (SIZE (1..maxEUTRA-Carrier)) OF CarrierFreqEUTRA-v1700

CarrierFreqListEUTRA-v1800 ::= SEQUENCE (SIZE (1..maxEUTRA-Carrier)) OF CarrierFreqEUTRA-v1800

CarrierFreqEUTRA ::= SEQUENCE {
    carrierFreq          ARFCN-ValueEUTRA,
    eutra-multiBandInfoList  EUTRA-MultiBandInfoList          OPTIONAL,      -- Need R
    eutra-FreqNeighCellList  EUTRA-FreqNeighCellList          OPTIONAL,      -- Need R
    eutra-ExcludedCellList   EUTRA-FreqExcludedCellList        OPTIONAL,      -- Need R
    allowedMeasBandwidth     EUTRA-AllowedMeasBandwidth,
    presenceAntennaPort1    EUTRA-PresenceAntennaPort1,
    cellReselectionPriority   CellReselectionPriority          OPTIONAL,      -- Need R
    cellReselectionSubPriority CellReselectionSubPriority      OPTIONAL,      -- Need R
    threshX-High             ReselectionThreshold,
    threshX-Low              ReselectionThreshold,
    q-RxLevMin               INTEGER (-70..-22),
    q-QualMin                 INTEGER (-34..-3),
    p-MaxEUTRA                INTEGER (-30..33),
    threshX-Q                 SEQUENCE {
        threshX-HighQ      ReselectionThresholdQ,
        threshX-LowQ       ReselectionThresholdQ
    }
}

CarrierFreqEUTRA-v1610 ::= SEQUENCE {
    highSpeedEUTRACarrier-r16  ENUMERATED {true}              OPTIONAL      -- Need R
}


```

```

CarrierFreqEUTRA-v1700 ::= SEQUENCE {
    eutra-FreqNeighHSDN-CellList-r17 EUTRA-FreqNeighHSDN-CellList-r17 OPTIONAL -- Need R
}

CarrierFreqEUTRA-v1800 ::= SEQUENCE {
    eutra-MultiBandInfoListAerial-r18 EUTRA-MultiBandInfoListAerial-r18 OPTIONAL, -- Need R
    tn-AreaIdList-r18 SEQUENCE (SIZE (1..maxTN-AreaInfo-r18)) OF TN-AreaId-r18 OPTIONAL -- Need R
}

EUTRA-FreqNeighHSDN-CellList-r17 ::= SEQUENCE (SIZE (1..maxCelleEUTRA)) OF EUTRA-PhysCellIdRange

EUTRA-FreqExcludedCellList ::= SEQUENCE (SIZE (1..maxEUTRA-CellExcluded)) OF EUTRA-PhysCellIdRange

EUTRA-FreqNeighCellList ::= SEQUENCE (SIZE (1..maxCelleEUTRA)) OF EUTRA-FreqNeighCellInfo

EUTRA-FreqNeighCellInfo ::= SEQUENCE {
    physCellId EUTRA-PhysCellId,
    dummy EUTRA-Q-OffsetRange,
    q-RxLevMinOffsetCell INTEGER (1..8) OPTIONAL, -- Need R
    q-QualMinOffsetCell INTEGER (1..8) OPTIONAL -- Need R
}

-- TAG-SIB5-STOP
-- ASN1STOP

```

SIB5 field descriptions
carrierFreqListEUTRA List of carrier frequencies of E-UTRA. If the <i>carrierFreqListEUTRA-v1610/ carrierFreqListEUTRA-v1700/ carrierFreqListEUTRA-v1800</i> is present, it shall contain the same number of entries, listed in the same order as in the <i>carrierFreqListEUTRA</i> (without suffix).
dummy This field is not used in the specification. If received it shall be ignored by the UE.
eutra-ExcludedCellList List of exclude-listed E-UTRA neighbouring cells.
eutra-FreqNeighHSDN-CellList List of neighbouring EUTRA HSDN cells as specified in TS 36.304 [27].
eutra-multiBandInfoList Indicates the list of frequency bands in addition to the band represented by <i>carrierFreq</i> for which cell reselection parameters are common, and a list of <i>additionalPmax</i> and <i>additionalSpectrumEmission</i> values, as defined in TS 36.101 [22], table 6.2.4-1, for the frequency bands in <i>eutra-multiBandInfoList</i>
highSpeedEUTRACarrier If the field is present, the UE shall apply the enhanced NR-EUTRA inter-RAT measurement requirements to support high speed up to 500 km/h as specified in TS 38.133 [14] to the E-UTRA carrier.
idleModeMeasVoiceFallback Indicates whether E-UTRA idle/inactive measurements and reporting for EPS fallback can be used.
p-MaxEUTRA The maximum allowed transmission power in dBm on the (uplink) carrier frequency, see TS 36.304 [27].
q-QualMin Parameter " <i>Q_{qualmin}</i> " in TS 36.304 [27]. Actual value $Q_{qualmin}$ = field value [dB].
q-QualMinOffsetCell Parameter " <i>Q_{qualminoffsetcell}</i> " in TS 36.304 [27]. Actual value $Q_{qualminoffsetcell}$ = field value [dB].
q-RxLevMin Parameter " <i>Q_{rxlevmin}</i> " in TS 36.304 [27]. Actual value $Q_{rxlevmin}$ = field value * 2 [dBm].
q-RxLevMinOffsetCell Parameter " <i>Q_{rxlevminoffsetcell}</i> " in TS 36.304 [27]. Actual value $Q_{rxlevminoffsetcell}$ = field value * 2 [dB].
t-ReselectionEUTRA Parameter " <i>Treselection_{EUTRA}</i> " in TS 38.304 [20].
threshX-High Parameter " <i>Thresh_{X, HighP}</i> " in TS 38.304 [20].
threshX-HighQ Parameter " <i>Thresh_{X, HighQ}</i> " in TS 38.304 [20].
threshX-Low Parameter " <i>Thresh_{X, LowP}</i> " in TS 38.304 [20].
threshX-LowQ Parameter " <i>Thresh_{X, LowQ}</i> " in TS 38.304 [20].
tn-ArealdList List of TN area identifiers. The associated coverage information is provided in <i>SIB25</i> .
t-ReselectionEUTRA-SF Parameter "Speed dependent ScalingFactor for <i>Treselection_{EUTRA}</i> " in TS 38.304 [20]. If the field is absent, the UE behaviour is specified in TS 38.304 [20].

Conditional Presence	Explanation
<i>RSRQ</i>	The field is mandatory present if the <i>threshServingLowQ</i> is present in <i>SIB2</i> ; otherwise it is absent.

— *SIB6*

SIB6 contains an ETWS primary notification.

SIB6 information element

```
-- ASN1START
-- TAG-SIB6-START

SIB6 ::=
  messageIdentifier      BIT STRING (SIZE (16)),
  serialNumber           BIT STRING (SIZE (16)),
  warningType            OCTET STRING (SIZE (2)),
  lateNonCriticalExtension OCTET STRING OPTIONAL,
  ...
}
```

```
-- TAG-SIB6-STOP
-- ASN1STOP
```

<i>SIB6</i> field descriptions
<i>messageIdentifier</i> Identifies the source and type of ETWS notification.
<i>serialNumber</i> Identifies variations of an ETWS notification.
<i>warningType</i> Identifies the warning type of the ETWS primary notification and provides information on emergency user alert and UE popup.

— *SIB7*

SIB7 contains an ETWS secondary notification.

SIB7 information element

```
-- ASN1START
-- TAG-SIB7-START

SIB7 ::=
  messageIdentifier      BIT STRING (SIZE (16)),
  serialNumber           BIT STRING (SIZE (16)),
  warningMessageSegmentType ENUMERATED {notLastSegment, lastSegment},
  warningMessageSegmentNumber INTEGER (0..63),
```



```
warningMessageSegment      OCTET STRING,
dataCodingScheme           OCTET STRING (SIZE (1))
lateNonCriticalExtension    OCTET STRING
...
}
-- TAG-SIB7-STOP
-- ASN1STOP
```

SIB7 field descriptions
dataCodingScheme Identifies the alphabet/coding and the language applied variations of an ETWS notification.
messageIdentifier Identifies the source and type of ETWS notification.
serialNumber Identifies variations of an ETWS notification.
warningMessageSegment Carries a segment of the Warning Message Contents IE.
warningMessageSegmentNumber Segment number of the ETWS warning message segment contained in the SIB. A segment number of zero corresponds to the first segment, A segment number of one corresponds to the second segment, and so on.
warningMessageSegmentType Indicates whether the included ETWS warning message segment is the last segment or not.

Conditional Presence	Explanation
Segment1	The field is mandatory present in the first segment of <i>SIB7</i> , otherwise it is absent.

– SIB8

SIB8 contains a CMAS notification.

SIB8 information element

```
-- ASN1START
-- TAG-SIB8-START

SIB8 ::=
  messageIdentifier      BIT STRING (SIZE (16)),
  serialNumber           BIT STRING (SIZE (16)),
  warningMessageSegmentType  ENUMERATED {notLastSegment, lastSegment},
  warningMessageSegmentNumber  INTEGER (0..63),
  warningMessageSegment    OCTET STRING,
  dataCodingScheme         OCTET STRING (SIZE (1))
  warningAreaCoordinatesSegment  OCTET STRING
  lateNonCriticalExtension  OCTET STRING
  ...
OPTIONAL, -- Cond Segment1
OPTIONAL, -- Need R
OPTIONAL,
```

```
}
-- TAG-SIB8-STOP
-- ASN1STOP
```

SIB8 field descriptions
dataCodingScheme Identifies the alphabet/coding and the language applied variations of a CMAS notification.
messageIdentifier Identifies the source and type of CMAS notification.
serialNumber Identifies variations of a CMAS notification.
warningAreaCoordinatesSegment If present, carries a segment, with one or more octets, of the geographical area where the CMAS warning message is valid as defined in [28]. The first octet of the first <i>warningAreaCoordinatesSegment</i> is equivalent to the first octet of Warning Area Coordinates IE defined in and encoded according to TS 23.041 [29] and so on.
warningMessageSegment Carries a segment, with one or more octets, of the <i>Warning Message Contents</i> IE defined in TS 38.413 [42]. The first octet of the <i>Warning Message Contents</i> IE is equivalent to the first octet of the <i>CB data</i> IE defined in and encoded according to TS 23.041 [29], clause 9.4.2.2.5, and so on.
warningMessageSegmentNumber Segment number of the CMAS warning message segment contained in the SIB. A segment number of zero corresponds to the first segment, one corresponds to the second segment, and so on. If warning area coordinates are provided for the warning message, then this field applies to both warning message segment and warning area coordinates segment.
warningMessageSegmentType Indicates whether the included CMAS warning message segment is the last segment or not. If warning area coordinates are provided for the warning message, then this field applies to both warning message segment and warning area coordinates segment.

Conditional Presence	Explanation
<i>Segment1</i>	The field is mandatory present in the first segment of <i>SIB8</i> , otherwise it is absent.

— SIB9

SIB9 contains information related to GPS time and Coordinated Universal Time (UTC). The UE may use the parameters provided in this system information block to obtain the UTC, the GPS and the local time.

NOTE: The UE may use the time information for numerous purposes, possibly involving upper layers e.g. to assist GPS initialisation, to synchronise the UE clock.

SIB9 information element

```
-- ASN1START
-- TAG-SIB9-START
```

```
SIB9 ::=
    timeInfo
    timeInfoUTC
    SEQUENCE {
        SEQUENCE {
            INTEGER (0..549755813887),
```

```

    dayLightSavingTime      BIT STRING (SIZE (2))      OPTIONAL, -- Need R
    leapSeconds             INTEGER (-127..128)         OPTIONAL, -- Need R
    localTimeOffset         INTEGER (-63..64)           OPTIONAL, -- Need R
  }
  lateNonCriticalExtension OCTET STRING               OPTIONAL,
  ...,
  [[
    referenceTimeInfo-r16   ReferenceTimeInfo-r16     OPTIONAL -- Need R
  ]],
  [[
    eventID-TSS-r18         INTEGER (0..63)            OPTIONAL -- Need R
  ]]
}

-- TAG-SIB9-STOP
-- ASN1STOP
```

SIB9 field descriptions
dayLightSavingTime Indicates if and how daylight-saving time (DST) is applied to obtain the local time. The semantics are the same as the semantics of the <i>Daylight Saving Time</i> IE in TS 24.501 [23] and TS 24.008 [38]. The first/leftmost bit of the bit string contains the b2 of octet 3 and the second bit of the bit string contains b1 of octet 3 in the value part of the <i>Daylight Saving Time</i> IE in TS 24.008 [38].
eventID-TSS This field indicates the status of the 5G access stratum time distribution parameter Clock Quality Reporting Control Information as defined in TS 23.501 [32].
leapSeconds Number of leap seconds offset between GPS Time and UTC. UTC and GPS time are related i.e. GPS time -leapSeconds = UTC time.
localTimeOffset Offset between UTC and local time in units of 15 minutes. Actual value = field value * 15 minutes. Local time of the day is calculated as UTC time + localTimeOffset.
timeInfoUTC Coordinated Universal Time corresponding to the SFN boundary at or immediately after the ending boundary of the SI-window in which SIB9 is transmitted. In an NTN cell, the indicated time is referenced at the uplink time synchronization reference point (RP), i.e., UE should take into account the propagation delay between UE and RP when determining the UTC time at the UE. The field counts the number of UTC seconds in 10 ms units since 00:00:00 on Gregorian calendar date 1 January, 1900 (midnight between Sunday, December 31, 1899 and Monday, January 1, 1900). See NOTE 1. This field is excluded when determining changes in system information, i.e. changes of <i>timeInfoUTC</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i> .

NOTE 1: The UE may use this field together with the *leapSeconds* field to obtain GPS time as follows: GPS Time (in seconds) = timeInfoUTC (in seconds) - 2,524,953,600 (seconds) + leapSeconds, where 2,524,953,600 is the number of seconds between 00:00:00 on Gregorian calendar date 1 January, 1900 and 00:00:00 on Gregorian calendar date 6 January, 1980 (start of GPS time).

— SIB10

SIB10 contains the HRNNs of the NPNs listed in SIB1.

SIB10 information element

-- ASN1START

```
-- TAG-SIB10-START

SIB10-r16 ::=
    hrnn-List-r16          SEQUENCE {
                           HRNN-List-r16
                           lateNonCriticalExtension OCTET STRING
                           ...
    }

HRNN-List-r16 ::=
    SEQUENCE (SIZE (1..maxNPN-r16)) OF HRNN-r16

HRNN-r16 ::=
    SEQUENCE {
        hrnn-r16          OCTET STRING (SIZE(1.. maxHRNN-Len-r16))
    }

-- TAG-SIB10-STOP
-- ASN1STOP
```

SIB10 field descriptions
HRNN-List The same amount of HRNN (see TS 23.003 [21]) elements as the number of NPNs in SIB 1 are included. The n-th entry of <i>HRNN-List</i> contains the human readable network name of the n-th NPN of SIB1. The <i>hrnn</i> in the corresponding entry in <i>HRNN-List</i> is absent if there is no HRNN associated with the given NPN.

— SIB11

SIB11 contains information related to idle/inactive measurements.

SIB11 information element

```
-- ASN1START
-- TAG-SIB11-START

SIB11-r16 ::=
    measIdleConfigSIB-r16 SEQUENCE {
                           MeasIdleConfigSIB-r16
                           lateNonCriticalExtension OCTET STRING
                           ...
    }

-- TAG-SIB11-STOP
-- ASN1STOP
```

SIB11 field descriptions
measIdleConfigSIB Indicates measurement configuration to be stored and used by the UE while in RRC_IDLE or RRC_INACTIVE.

— SIB12

SIB12 contains NR sidelink communication/discovery configuration.

SIB12 information element

```
-- ASN1START
-- TAG-SIB12-START

SIB12-r16 ::=
    SEQUENCE {
        segmentNumber-r16      INTEGER (0..63),
        segmentType-r16        ENUMERATED {notLastSegment, lastSegment},
        segmentContainer-r16    OCTET STRING
    }

SIB12-IEs-r16 ::=
    SEQUENCE {
        sl-ConfigCommonNR-r16    SL-ConfigCommonNR-r16,
        lateNonCriticalExtension  OCTET STRING (CONTAINING SIB12-IEs-v16k0) OPTIONAL,
        ...,
        [[
            sl-DRX-ConfigCommonGC-BC-r17    SL-DRX-ConfigGC-BC-r17 OPTIONAL, -- Need R
            sl-DiscConfigCommon-r17          SL-DiscConfigCommon-r17 OPTIONAL, -- Need R
            sl-L2U2N-Relay-r17               ENUMERATED {enabled}    OPTIONAL, -- Need R
            sl-NonRelayDiscovery-r17          ENUMERATED {enabled}    OPTIONAL, -- Need R
            sl-L3U2N-RelayDiscovery-r17       ENUMERATED {enabled}    OPTIONAL, -- Need R
            sl-TimersAndConstantsRemoteUE-r17 UE-TimersAndConstantsRemoteUE-r17 OPTIONAL, -- Need R
        ]],
        [[
            sl-FreqInfoListSizeExt-v1800      SEQUENCE (SIZE (1..maxNrofFreqSL-1-r18)) OF SL-FreqConfigCommon-r16 OPTIONAL, -- Need R
            sl-RLC-BearerConfigListSizeExt-v1800 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfig-r16 OPTIONAL, -- Need R
            sl-SyncFreqList-r18               SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-Freq-Id-r16    OPTIONAL, -- Need R
            sl-SyncTxMultiFreq-r18            ENUMERATED {true}      OPTIONAL, -- Need S
            sl-MaxTransPowerCA-r18            P-Max                  OPTIONAL, -- Need R
            sl-DiscConfigCommon-v1800          SL-DiscConfigCommon-v1800 OPTIONAL, -- Need R
            sl-L2-U2U-Relay-r18                ENUMERATED {enabled}  OPTIONAL, -- Need R
            sl-L3-U2U-RelayDiscovery-r18       ENUMERATED {enabled}  OPTIONAL, -- Need R
            t400-U2U-r18                       ENUMERATED {ms200, ms400, ms600, ms800, ms1200, ms2000, ms3000, ms4000} OPTIONAL, -- Need R
        ]],
        [[
            sl-DiscConfigCommon-v1840          SL-DiscConfigCommon-v1840 OPTIONAL -- Need R
        ]],
    }

-- Late non-critical Rel-16 extensions:
SIB12-IEs-v16k0 ::=
    SEQUENCE {
        sl-ConfigCommonNR-v16k0    SL-ConfigCommonNR-v16k0 OPTIONAL, -- Need R
        nonCriticalExtension         SEQUENCE{} OPTIONAL
    }

SL-ConfigCommonNR-r16 ::=
    SEQUENCE {
        sl-FreqInfoList-r16          SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigCommon-r16 OPTIONAL, -- Need R
        sl-UE-SelectedConfig-r16     SL-UE-SelectedConfig-r16 OPTIONAL, -- Need R
        sl-NR-AnchorCarrierFreqList-r16 SL-NR-AnchorCarrierFreqList-r16 OPTIONAL, -- Need R
    }
```

sl-EUTRA-AnchorCarrierFreqList-r16	SL-EUTRA-AnchorCarrierFreqList-r16	OPTIONAL,	-- Need R
sl-RadioBearerConfigList-r16	SEQUENCE (SIZE (1..maxNrofSLRB-r16)) OF SL-RadioBearerConfig-r16	OPTIONAL,	-- Need R
sl-RLC-BearerConfigList-r16	SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfig-r16	OPTIONAL,	-- Need R
sl-MeasConfigCommon-r16	SL-MeasConfigCommon-r16	OPTIONAL,	-- Need R
sl-CSI-Acquisition-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
sl-OffsetDFN-r16	INTEGER (1..1000)	OPTIONAL,	-- Need R
t400-r16	ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000}	OPTIONAL,	-- Need R
sl-MaxNumConsecutiveDTX-r16	ENUMERATED {n1, n2, n3, n4, n6, n8, n16, n32}	OPTIONAL,	-- Need R
sl-SSB-PriorityNR-r16	INTEGER (1..8)	OPTIONAL	-- Need R

}

SL-ConfigCommonNR-v16k0 ::= SEQUENCE {
 sl-FreqInfoListExt-v16k0 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigCommonExt-v16k0 OPTIONAL
 }

SL-NR-AnchorCarrierFreqList-r16 ::= SEQUENCE (SIZE (1..maxFreqSL-NR-r16)) OF ARFCN-ValueNR

SL-EUTRA-AnchorCarrierFreqList-r16 ::= SEQUENCE (SIZE (1..maxFreqSL-EUTRA-r16)) OF ARFCN-ValueEUTRA

SL-DiscConfigCommon-r17 ::= SEQUENCE {
 sl-RelayUE-ConfigCommon-r17 SL-RelayUE-Config-r17,
 sl-RemoteUE-ConfigCommon-r17 SL-RemoteUE-Config-r17
 }

SL-DiscConfigCommon-v1800 ::= SEQUENCE {
 sl-RelayUE-ConfigCommonU2U-r18 SL-RelayUE-ConfigU2U-r18,
 sl-RemoteUE-ConfigCommonU2U-r18 SL-RemoteUE-ConfigU2U-r18
 }

SL-DiscConfigCommon-v1840 ::= SEQUENCE {
 sl-RelayUE-ConfigCommonU2U-v1840 SL-RelayUE-ConfigU2U-v1840,
 sl-RemoteUE-ConfigCommonU2U-v1840 SL-RemoteUE-ConfigU2U-v1830
 }

-- TAG-SIB12-STOP
 -- ASN1STOP

SIB12 field descriptions
segmentContainer This field includes a segment of the encoded <i>SIB12-IEs</i> . The size of the included segment in this container should be small enough that the SIB message size is less than or equal to the maximum size of a NR SI, i.e. 2976 bits when SIB12 is broadcast.
segmentNumber This field identifies the sequence number of a segment of <i>SIB12-IEs</i> . A segment number of zero corresponds to the first segment, A segment number of one corresponds to the second segment, and so on.
segmentType This field indicates whether the included segment is the last segment or not.
sl-CSI-Acquisition This field indicates whether CSI reporting is enabled in sidelink unicast. If not set, SL CSI reporting is disabled.
sl-DRX-ConfigCommonGC-BC This field indicates the sidelink DRX configuration for groupcast and broadcast communication, as specified in TS 38.321 [3]. This field, if present, also indicates the gNB is capable of sidelink DRX.
sl-EUTRA-AnchorCarrierFreqList This field indicates the EUTRA anchor carrier frequency list, which can provide the NR sidelink communication configurations.
sl-FreqInfoList, sl-FreqInfoListSizeExt, sl-FreqInfoListExt This field indicates the NR sidelink communication/discovery configuration on some carrier frequency (ies). In this release, only one entry can be configured in <i>sl-FreqInfoList</i> . More entries can be configured in <i>sl-FreqInfoListSizeExt</i> . If network includes <i>sl-FreqInfoListExt</i> , it includes the same number of entries, and listed in the same order, as in <i>sl-FreqInfoList</i> together with <i>sl-FreqInfoListSizeExt</i> . The first entry corresponds to the AdditionalSpectrumEmission of the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the second entry corresponds to the AdditionalSpectrumEmission of the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> , the third entry corresponds to the AdditionalSpectrumEmission of the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.
sl-L2U2N-Relay This field indicates the support of NR sidelink Layer-2 U2N relay operation.
sl-L2-U2U-Relay This field indicates the support of NR sidelink Layer-2 U2U relay operation.
sl-L3U2N-RelayDiscovery This field indicates the support of L3 U2N relay AS-layer capability, i.e. NR sidelink L3 U2N relay discovery.
sl-L3-U2U-RelayDiscovery This field indicates the support of L3 U2U relay AS-layer capability, i.e. NR sidelink L3 U2U relay discovery.
sl-MaxNumConsecutiveDTX This field indicates the maximum number of consecutive HARQ DTX before triggering sidelink RLF. Value n1 corresponds to 1, value n2 corresponds to 2, and so on.
sl-MaxTransPowerCA The maximum total transmit power to be used by the UE across all sidelink carriers.
sl-MeasConfigCommon This field indicates the measurement configurations (e.g. RSRP) for NR sidelink communication.
sl-NonRelayDiscovery This field indicates the support of NR sidelink non-relay discovery.
sl-NR-AnchorCarrierFreqList This field indicates the NR anchor carrier frequency list, which can provide the NR sidelink communication/discovery configurations.
sl-OffsetDFN Indicates the timing offset for the UE to determine DFN timing when GNSS is used for timing reference. Value 1 corresponds to 0.001 milliseconds, value 2 corresponds to 0.002 milliseconds, and so on.
sl-RadioBearerConfigList This field indicates one or multiple sidelink radio bearer configurations.

SIB12 field descriptions
segmentContainer This field includes a segment of the encoded <i>SIB12-IEs</i>. The size of the included segment in this container should be small enough that the SIB message size is less than or equal to the maximum size of a NR SI, i.e. 2976 bits when SIB12 is broadcast.
segmentNumber This field identifies the sequence number of a segment of <i>SIB12-IEs</i>. A segment number of zero corresponds to the first segment, A segment number of one corresponds to the second segment, and so on.
segmentType This field indicates whether the included segment is the last segment or not.
sl-CSI-Acquisition This field indicates whether CSI reporting is enabled in sidelink unicast. If not set, SL CSI reporting is disabled.
sl-RLC-BearerConfigList, sl-RLC-BearerConfigListSizeExt This field indicates one or multiple sidelink RLC bearer configurations. For L2 U2U operation, <i>sl-RLC-BearerConfigList</i> also indicates the PC5 Relay RLC Channel configurations.
sl-SSB-PriorityNR This field indicates the priority of NR sidelink SSB transmission and reception.
sl-SyncFreqList Indicates a list of candidate carrier frequencies that can be used for the synchronisation of NR sidelink communication. For <i>SL-Freq-Id-r16</i>, the value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i>, the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i>, the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.
sl-SyncTxMultiFreq Indicates that the UE transmits S-SSB on multiple carrier frequencies for NR sidelink communication. If this field is absent, the UE transmits S-SSB only on the synchronisation carrier frequency.
t400 Indicates the value for timer T400 as described in clause 7.1. Value <i>ms100</i> corresponds to 100 ms, value <i>ms200</i> corresponds to 200 ms and so on.
t400-U2U Indicates the value for timer T400 to be applied for end-to-end PC5 connection in sidelink U2U relay operation as described in clause 7.1. Value <i>ms200</i> corresponds to 200 ms, value <i>ms400</i> corresponds to 400 ms and so on.

–

SIB13

SIB13 contains configurations of V2X sidelink communication defined in TS 36.331 [10].

SIB13 information element

```

-- ASN1START
-- TAG-SIB13-START

SIB13-r16 ::=
    sl-V2X-ConfigCommon-r16
    dummy
    tdd-Config-r16
    lateNonCriticalExtension
    ...
}

SEQUENCE {
    OCTET STRING,
    OCTET STRING,
    OCTET STRING,
    OCTET STRING
OPTIONAL,

```


-- TAG-SIB13-STOP
-- ASN1STOP

SIB13 field descriptions
<i>dummy</i> This field is not used in the specification and the UE ignores the received value.
<i>sl-V2X-ConfigCommon</i> This field includes the E-UTRA <i>SystemInformationBlockType21</i> message as specified in TS 36.331 [10].
<i>tdd-Config</i> This field includes the <i>tdd-Config</i> in E-UTRA <i>SystemInformationBlockType1</i> message as specified in TS 36.331 [10].

— SIB14

SIB14 contains configurations of V2X sidelink communication defined in TS 36.331 [10], which can be used jointly with that included in *SIB13*.

SIB14 information element

```
-- ASN1START
-- TAG-SIB14-START

SIB14-r16 ::=
    sl-V2X-ConfigCommonExt-r16
    lateNonCriticalExtension
    ...
}

SEQUENCE {
    OCTET STRING,
    OCTET STRING
OPTIONAL,
```

SIB14 field descriptions
<i>sl-V2X-ConfigCommonExt</i> This field includes the E-UTRA <i>SystemInformationBlockType26</i> message as specified in TS 36.331 [10].

— SIB15

SIB15 contains configurations of disaster roaming information.

SIB15 information element

```
-- ASN1START
-- TAG-SIB15-START

SIB15-r17 ::=
    SEQUENCE {
```

```

commonPLMNsWithDisasterCondition-r17 SEQUENCE (SIZE (1..maxPLMN)) OF PLMN-Identity OPTIONAL, -- Need R
applicableDisasterInfoList-r17 SEQUENCE (SIZE (1..maxPLMN)) OF ApplicableDisasterInfo-r17 OPTIONAL, -- Need R
lateNonCriticalExtension OCTET STRING OPTIONAL,
...
}

ApplicableDisasterInfo-r17 ::= CHOICE {
    noDisasterRoaming-r17 NULL,
    disasterRelatedIndication-r17 NULL,
    commonPLMNs-r17 NULL,
    dedicatedPLMNs-r17 SEQUENCE (SIZE (1..maxPLMN)) OF PLMN-Identity
}

-- TAG-SIB15-STOP
-- ASN1STOP

```

SIB15 field descriptions
commonPLMNsWithDisasterCondition A list of PLMN(s) for which disaster condition applies and that disaster inbound roaming is accepted, which can be commonly applicable to the PLMNs sharing the cell. applicableDisasterInfoList A list indicating the applicable disaster roaming information for the networks indicated in <i>plmn-IdentityInfoList</i> and <i>npn-IdentityInfoList-r16</i>. The network indicates in this list one entry for each entry of <i>plmn-IdentityInfoList</i>, followed by one entry for each entry of <i>npn-IdentityInfoList-r16</i>, meaning that this list will have as many entries as the number of entries of the combination of <i>plmn-IdentityInfoList</i> and <i>npn-IdentityInfoList-r16</i>. The first entry in this list indicates the disaster roaming information applicable for the network(s) in the first entry of <i>plmn-IdentityInfoList/npn-IdentityInfoList-r16</i>, the second entry in this list indicates the disaster roaming information applicable for the network(s) in the second entry of <i>plmn-IdentityInfoList/npn-IdentityInfoList-r16</i>, and so on. Each entry in this list can either be having the value <i>noDisasterRoaming</i>, <i>disasterRelatedIndication</i>, <i>commonPLMNs</i>, or <i>dedicatedPLMNs</i>. If an entry in this list takes the value <i>noDisasterRoaming</i>, disaster inbound roaming is not allowed in this network(s). If an entry in this list takes the value <i>disasterRelatedIndication</i>, the meaning of this field for this network(s) is as specified for "disaster related indication" in TS 23.122 [74], clause 4.4.3.1.1. If an entry in this list takes the value <i>commonPLMNs</i>, the PLMN(s) with disaster conditions indicated in the field <i>commonPLMNsWithDisasterCondition</i> apply for this network(s). If an entry in this list contains the value <i>dedicatedPLMNs</i>, the listed PLMN(s) are the PLMN(s) with disaster conditions that the network(s) corresponding to this entry accepts disaster inbound roamers from. For SNPNs, the network indicates the value <i>noDisasterRoaming</i>.

– SIB16

SIB16 contains configurations of slice-based cell reselection information.

SIB16 information element

```

-- ASN1START
-- TAG-SIB16-START

SIB16-r17 ::= SEQUENCE {
    freqPriorityListSlicing-r17 FreqPriorityListSlicing-r17 OPTIONAL, -- Need R
    lateNonCriticalExtension OCTET STRING OPTIONAL,
    ...
}

-- TAG-SIB16-STOP

```

-- ASN1STOP

SIB16 field descriptions
freqPriorityListSlicing This field indicates cell reselection priorities for slicing.

– SIB17

SIB17 contains configurations of TRS resources for idle/inactive UEs.

SIB17 information element

```
-- ASN1START
-- TAG-SIB17-START

SIB17-r17 ::= SEQUENCE {
    segmentNumber-r17      INTEGER (0..63),
    segmentType-r17        ENUMERATED {notLastSegment, lastSegment},
    segmentContainer-r17    OCTET STRING
}

SIB17-IEs-r17 ::= SEQUENCE {
    trs-ResourceSetConfig-r17 SEQUENCE (SIZE (1..maxNrofTRS-ResourceSets-r17)) OF TRS-ResourceSet-r17,
    validityDuration-r17      ENUMERATED {t1, t2, t4, t8, t16, t32, t64, t128, t256, t512, infinity, spare5, spare4, spare3, spare2, spare1}
                                OPTIONAL, -- Need S
    lateNonCriticalExtension  OCTET STRING
                                OPTIONAL,
    ...
}

TRS-ResourceSet-r17 ::= SEQUENCE {
    powerControlOffsetSS-r17  ENUMERATED {db-3, db0, db3, db6},
    scramblingID-Info-r17     CHOICE {
        scramblingIDforCommon-r17 ScramblingId,
        scramblingIDperResourceListWith2-r17 SEQUENCE (SIZE (2)) OF ScramblingId,
        scramblingIDperResourceListWith4-r17 SEQUENCE (SIZE (4)) OF ScramblingId,
        ...
    },
    firstOFDMSymbolInTimeDomain-r17 INTEGER (0..9),
    startingRB-r17                  INTEGER (0..maxNrofPhysicalResourceBlocks-1),
    nrofRBs-r17                     INTEGER (24..maxNrofPhysicalResourceBlocksPlus1),
    ssb-Index-r17                   SSB-Index,
    periodicityAndOffset-r17        CHOICE {
        slots10      INTEGER (0..9),
        slots20      INTEGER (0..19),
        slots40      INTEGER (0..39),
        slots80      INTEGER (0..79)
    },
    frequencyDomainAllocation-r17 BIT STRING (SIZE (4)),
    indBitID-r17                  INTEGER (0..5),

```

```
    nrofResources-r17          ENUMERATED {n2, n4}
  }

-- TAG-SIB17-STOP
-- ASN1STOP
```

SIB17 field descriptions
segmentContainer This field includes a segment of the encoded <i>SIB17</i> -IEs. The size of the included segment in this container should be small enough that the SIB message size is less than or equal to the maximum size of a NR SI, i.e. 2976 bits when <i>SIB17</i> is broadcast.
segmentNumber This field identifies the sequence number of a segment of <i>SIB17</i> -IEs. A segment number of zero corresponds to the first segment, a segment number of one corresponds to the second segment, and so on.
segmentType This field indicates whether the included segment is the last segment or not.
trs-ResourceSetConfig RS configuration of TRS occasion(s) for idle/inactive UE(s), in terms of a list of N>=1 NZP TRS resource set(s). The maximum number of TRS resource sets configured by higher layer is 64. If a TRS resource is configured, the L1 based availability indication is always enabled based on that configuration. A UE which acquired <i>SIB17</i> with a TRS configuration but did not yet receive an associated L1-based availability indication considers the configured TRS as unavailable. If SIB scheduling indicates that <i>SIB17</i> has changed, the UE considers its configured TRS(s) as unavailable until it receives the associated L1-based availability indication(s).
validityDuration The valid time duration for L1 availability indication, time unit is one default paging cycle. When the field is absent, UE assumes a default time duration to be 2 default paging cycles. The field is only valid while the UE has a valid <i>SIB17</i> .

TRS-ResourceSet field descriptions
firstOFDMSymbolInTimeDomain The index of the first OFDM symbol in the PRB used for TRS in a slot. The field indicates the first symbol in a slot for the first TRS resource within the slot, and the symbol for the second TRS resource in the same slot can be derived implicitly with symbol index as <i>firstOFDMSymbolInTimeDomain</i> +4.
frequencyDomainAllocation Indicates the offset of the first RE to RE#0 in a RB in row1 in table 7.4.1.5.3-1 for frequency domain allocation within a physical resource block (TS 38.211 [16], clause 7.4.1.5.3).
indBitID The index of the associated bit in TRS availability indication field in DCI. Each TRS resource set is configured with an ID <i>i</i> for the association with (i+1)-th indication bit in TRS availability indication field in DCI.
nrofRBs Number of PRBs across which corresponding TRS resource spans.
nrofResources The number of TRS resources for a TRS resource set.
periodicityAndOffset The periodicity and slot offset (slot) for periodic TRS. It is used to determine the location of the first slot of TRS resource set. The periodicity value <i>slots10</i> corresponds to 10 slots, value <i>slots20</i> corresponds to 20 slots, and so on. Only the following values of the periodicity are used: 10 slots (SCS 15 kHz), 20 slots (SCS 15 and 30 kHz) and 40 slots (SCS 15, 30 and 60 kHz) and 80 slots (SCS 15, 30, 60, 120 kHz).
powerControlOffsetSS Power offset (dB) of NZP CSI-RS RE to SSS RE.
scramblingID-Info One or more scrambling IDs are configured for a TRS resource set. If a common scrambling ID is configured, it applies to all the TRS resources within the TRS resource set. Otherwise, each TRS resource within the TRS resource set is provided with a scrambling ID. If the number of TRS resources for the TRS resource set is 2, <i>scramblingIDperResourceListWith2-r17</i> is configured, while <i>scramblingIDperResourceListWith4-r17</i> is configured for the case that the number of TRS resources for the TRS resource set is 4.
ssb-Index The index of reference SSB with which quasi-collocation information is provided as specified in TS 38.214 [19] clause 5.1.5.
startingRB The PRB index where corresponding TRS resource starts in relation to common resource block #0 (CRB#0) on the common resource block grid.

— *SIB17bis*

SIB17bis contains configurations of TRS resources for idle/inactive UEs. *SIB17bis* is optionally scheduled if *SIB17* is not scheduled.

***SIB17bis* information element**

```
-- ASN1START
-- TAG-SIB17bis-START

SIB17bis-r18 ::=
    segmentNumber-r18      SEQUENCE {
        segmentType-r18    INTEGER (0..63),
        segmentContainer-r18 ENUMERATED {notLastSegment, lastSegment},
    }
    OCTET STRING

SIB17bis-IEs-r18 ::= SEQUENCE {
```

```

    trs-ResourceSetConfig-r18 SEQUENCE (SIZE (1..maxNrofTRS-ResourceSets-r17)) OF TRS-ResourceSet-r18 OPTIONAL, -- Need R
    validityDuration-r18      ENUMERATED {t1, t2, t4, t8, t16, t32, t64, t128, t256, t512, infinity, spare5, spare4, spare3, spare2, spare1} OPTIONAL, -- Need S
    lateNonCriticalExtension  OCTET STRING OPTIONAL,
    ...
}

TRS-ResourceSet-r18 ::= SEQUENCE {
    powerControlOffsetSS-r18 ENUMERATED {db-3, db0, db3, db6},
    scramblingID-Info-r18 CHOICE {
        scramblingIDforCommon-r18 ScramblingId,
        scramblingIDperResourceListWith2-r18 SEQUENCE (SIZE (2)) OF ScramblingId,
        scramblingIDperResourceListWith4-r18 SEQUENCE (SIZE (4)) OF ScramblingId,
        ...
    },
    firstOFDMSymbolInTimeDomain-r18 INTEGER (0..9),
    startingRB-r18 INTEGER (0..maxNrofPhysicalResourceBlocks-1),
    nrofRBs-r18 INTEGER (24..maxNrofPhysicalResourceBlocksPlus1),
    ssb-Index-r18 SSB-Index,
    periodicityAndOffset-r18 CHOICE {
        slots10 INTEGER (0..9),
        slots20 INTEGER (0..19),
        slots40 INTEGER (0..39),
        slots80 INTEGER (0..79),
        slots160 INTEGER (0..159),
        slots320 INTEGER (0..319),
        slots640 INTEGER (0..639)
    },
    frequencyDomainAllocation-r18 BIT STRING (SIZE (4)),
    indBitID-r18 INTEGER (0..5),
    nrofResources-r18 ENUMERATED {n2, n4}
}

-- TAG-SIB17bis-STOP
-- ASN1STOP

```

***SIB17bis* field descriptions**

segmentContainer

This field includes a segment of the encoded *SIB17bis*-IEs. The size of the included segment in this container should be small enough that the SIB message size is less than or equal to the maximum size of a NR SI, i.e. 2976 bits when *SIB17bis* is broadcast.

segmentNumber

This field identifies the sequence number of a segment of *SIB17bis*-IEs. A segment number of zero corresponds to the first segment, a segment number of one corresponds to the second segment, and so on.

segmentType

This field indicates whether the included segment is the last segment or not.

trs-ResourceSetConfig

RS configuration of TRS occasion(s) for idle/inactive UE(s), in terms of a list of $N \geq 1$ NZP TRS resource set(s). The maximum number of TRS resource sets configured by higher layer is 64. If a TRS resource is configured, the L1 based availability indication is always enabled based on that configuration. A UE which acquired *SIB17bis* with a TRS configuration but did not yet receive an associated L1-based availability indication considers the configured TRS as unavailable. If SIB scheduling indicates that *SIB17bis* has changed, the UE considers its configured TRS(s) from *SIB17bis* as unavailable until it receives the associated L1-based availability indication(s).

<i>SIB17bis</i> field descriptions
<i>segmentContainer</i> This field includes a segment of the encoded <i>SIB17bis</i> -IEs. The size of the included segment in this container should be small enough that the SIB message size is less than or equal to the maximum size of a NR SI, i.e. 2976 bits when <i>SIB17bis</i> is broadcast.
<i>segmentNumber</i> This field identifies the sequence number of a segment of <i>SIB17bis</i> -IEs. A segment number of zero corresponds to the first segment, a segment number of one corresponds to the second segment, and so on.
<i>segmentType</i> This field indicates whether the included segment is the last segment or not.
<i>validityDuration</i> The valid time duration for L1 availability indication, time unit is one default paging cycle. When the field is absent, UE assumes a default time duration to be 2 default paging cycles. The field is only valid while the UE has a valid <i>SIB17bis</i> .

<i>TRS-ResourceSet</i> field descriptions
<i>firstOFDMSymbolInTimeDomain</i> The index of the first OFDM symbol in the PRB used for TRS in a slot. The field indicates the first symbol in a slot for the first TRS resource within the slot, and the symbol for the second TRS resource in the same slot can be derived implicitly with symbol index as <i>firstOFDMSymbolInTimeDomain</i> +4.
<i>frequencyDomainAllocation</i> Indicates the offset of the first RE to RE#0 in a RB in row1 in table 7.4.1.5.3-1 for frequency domain allocation within a physical resource block (TS 38.211 [16], clause 7.4.1.5.3).
<i>indBitID</i> The index of the associated bit in TRS availability indication field in DCI. Each TRS resource set is configured with an ID <i>i</i> for the association with (i+1)-th indication bit in TRS availability indication field in DCI.
<i>nrofRBs</i> Number of PRBs across which corresponding TRS resource spans.
<i>nrofResources</i> The number of TRS resources for a TRS resource set.
<i>periodicityAndOffset</i> The periodicity and slot offset (slot) for periodic TRS. It is used to determine the location of the first slot of TRS resource set. The periodicity value <i>slots10</i> corresponds to 10 slots, value <i>slots20</i> corresponds to 20 slots, and so on. Only the following values of the periodicity are used: 10 slots (SCS 15 kHz), 20 slots (SCS 15 and 30 kHz), 40 slots (SCS 15, 30 and 60 kHz), 80 slots (SCS 15, 30, 60 and 120 kHz), 160 slots (SCS 30, 60 and 120 kHz), 320 slots (SCS 60 and 120 kHz), and 640 slots (SCS 120 kHz).
<i>powerControlOffsetSS</i> Power offset (dB) of NZP CSI-RS RE to SSS RE.
<i>scramblingID-Info</i> One or more scrambling IDs are configured for a TRS resource set. If a common scrambling ID is configured, it applies to all the TRS resources within the TRS resource set. Otherwise, each TRS resource within the TRS resource set is provided with a scrambling ID. If the number of TRS resources for the TRS resource set is 2, <i>scramblingIDperResourceListWith2-r18</i> is configured, while <i>scramblingIDperResourceListWith4-r18</i> is configured for the case that the number of TRS resources for the TRS resource set is 4.
<i>ssb-Index</i> The index of reference SSB with which quasi-collocation information is provided as specified in TS 38.214 [19] clause 5.1.5.
<i>startingRB</i> The PRB index where corresponding TRS resource starts in relation to common resource block #0 (CRB#0) on the common resource block grid.

—

SIB18

SIB18 contains Group IDs for Network selection (GINs) to support access using credentials from a Credentials Holder or to support UE onboarding.

SIB18 information element

```
-- ASN1START
-- TAG-SIB18-START

SIB18-r17 ::=
    gin-ElementList-r17      SEQUENCE {
        gins-PerSNPN-List-r17 SEQUENCE (SIZE (1..maxGIN-r17)) OF GIN-Element-r17    OPTIONAL, -- Need R
        lateNonCriticalExtension OCTET STRING                                     OPTIONAL, -- Need S
        ...
    }

GIN-Element-r17 ::=
    plmn-Identity-r17      SEQUENCE {
        nid-List-r17       SEQUENCE (SIZE (1..maxGIN-r17)) OF NID-r16
    }

GINS-PerSNPN-r17 ::=
    supportedGINS-r17      SEQUENCE {
        BIT STRING (SIZE (1..maxGIN-r17))                                     OPTIONAL -- Need R
    }
-- TAG-SIB18-STOP
-- ASN1STOP
```

SIB18 field descriptions
gin-ElementList The <i>gin-ElementList</i> contains one or more GIN elements. Each GIN element contains either one GIN, which is identified by a PLMN ID and a NID, or multiple GINs that share the same PLMN ID. The total number of GINs indicated does not exceed maxGIN-r17. The GIN index <i>m</i> is defined as d1+d2+...+d(n-1)+i for the GIN included in the <i>n</i> -th entry of the <i>gin-ElementList</i> and the <i>i</i> -th entry of its corresponding <i>GIN-Element</i> , where <i>d(k)</i> is the number of GIN index values used in the <i>k</i> -th <i>gin-ElementList</i> entry.
gins-PerSNPN-List Indicates the supported GINs for each SNPN. The network includes the same number of entries as the number of SNPNS in <i>snpn-AccessInfoList</i> in provided in SIB1, and the <i>n</i> -th entry in this list corresponds to the <i>n</i> -th SNPN listed in <i>snpn-AccessInfoList</i> provided in SIB1. The network configures this field only if the cell broadcasts more than one SNPN in <i>SIB1</i> . If this field is absent, as in case of a single SNPN broadcasted in <i>SIB1</i> , the UE shall associate all GINs in <i>gin-ElementList</i> to that SNPN.

GINS-PerSNPN field descriptions
supportedGINS Indicates the GINs which are supported by the given SNPN. The first/leftmost bit corresponds to the GIN with GIN index 1, the second bit corresponds to the GIN with GIN index 2 and so on. A bit set to 1 indicates that the GIN is supported by the SNPN. If the field is not present, then the corresponding SNPN does not support any GINs.

—

SIB19

SIB19 contains satellite assistance information for NTN access.

SIB19 information element

```

-- ASN1START
-- TAG-SIB19-START

SIB19-r17 ::= SEQUENCE {
    ntn-Config-r17                NTN-Config-r17                OPTIONAL,      -- Need R
    t-Service-r17                INTEGER (0..549755813887)        OPTIONAL,      -- Need R
    referenceLocation-r17        ReferenceLocation-r17          OPTIONAL,      -- Need R
    distanceThresh-r17           INTEGER(0..65525)               OPTIONAL,      -- Need R
    ntn-NeighCellConfigList-r17  NTN-NeighCellConfigList-r17    OPTIONAL,      -- Need R
    lateNonCriticalExtension      OCTET STRING                  OPTIONAL,
    ...,
    [[
        ntn-NeighCellConfigListExt-v1720  NTN-NeighCellConfigList-r17    OPTIONAL      -- Need R
    ]],
    [[
        movingReferenceLocation-r18        ReferenceLocation-r17          OPTIONAL,      -- Need R
        ntn-CovEnh-r18                     NTN-CovEnh-r18             OPTIONAL,      -- Need R
        satSwitchWithReSync-r18            SatSwitchWithReSync-r18      OPTIONAL      -- Need R
    ]]
}

NTN-NeighCellConfigList-r17 ::= SEQUENCE (SIZE(1..maxCellNTN-r17)) OF NTN-NeighCellConfig-r17

NTN-NeighCellConfig-r17 ::= SEQUENCE {
    ntn-Config-r17                NTN-Config-r17                OPTIONAL,      -- Need R
    carrierFreq-r17               ARFCN-ValueNR                 OPTIONAL,      -- Need R
    physCellId-r17                PhysCellId                    OPTIONAL      -- Need R
}

NTN-CovEnh-r18 ::= SEQUENCE {
    numberOfMsg4HARQ-ACK-Repetitions-r18  BIT STRING (SIZE(4)),
    rsrp-ThresholdMsg4HARQ-ACK-r18        RSRP-Range              OPTIONAL      -- Need R
}

SatSwitchWithReSync-r18 ::= SEQUENCE {
    ntn-Config-r18                NTN-Config-r17,
    t-ServiceStart-r18            INTEGER (0..549755813887)        OPTIONAL,      -- Need R
    ssb-TimeOffset-r18            INTEGER (0..159)                 OPTIONAL      -- Need R
}

-- TAG-SIB19-STOP
-- ASN1STOP

```

SIB19 field descriptions
<i>distanceThresh</i> Distance from the serving cell reference location and is used in location-based measurement initiation in RRC_IDLE and RRC_INACTIVE, as defined in TS 38.304 [20]. Each step represents 50m. This field is only present in an NTN cell.
<i>movingReferenceLocation</i> Reference location of the serving cell of an NTN Earth-moving cell at a time reference. It is used in the evaluation of <i>eventD2</i> and <i>condEventD2</i> criteria for the serving cell in RRC_CONNECTED, and location-based measurement initiation in RRC_IDLE and RRC_INACTIVE when <i>distanceThresh</i> is also configured, as defined in TS 38.304 [20]. The time reference of this field is indicated by <i>epochTime</i> in <i>ntn-Config</i> of the serving cell. This field is excluded when determining changes in system information, i.e., changes to <i>movingReferenceLocation</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i>. This field is only present in an NTN cell.
<i>ntn-Config</i> Provides parameters needed for the UE to access NR via NTN access such as Ephemeris data, common TA parameters, <i>k_offset</i>, validity duration for UL sync information and epoch time. In a TN cell, this field is only present in <i>ntn-NeighCellConfigList</i> and <i>ntn-NeighCellConfigListExt</i>.
<i>ntn-NeighCellConfigList</i>, <i>ntn-NeighCellConfigListExt</i> Provides a list of NTN neighbour cells including their <i>ntn-Config</i>, carrier frequency and <i>PhysCellId</i>. This set includes all elements of <i>ntn-NeighCellConfigList</i> and all elements of <i>ntn-NeighCellConfigListExt</i>. If <i>ntn-Config</i> is absent for an entry in <i>ntn-NeighCellConfigListExt</i>, the <i>ntn-Config</i> provided in the entry at the same position in <i>ntn-NeighCellConfigList</i> applies. Network provides <i>ntn-Config</i> for the first entry of <i>ntn-NeighCellConfigList</i>. If the <i>ntn-Config</i> is absent for any other entry in <i>ntn-NeighCellConfigList</i>, the <i>ntn-Config</i> provided in the previous entry in <i>ntn-NeighCellConfigList</i> applies.
<i>referenceLocation</i> Reference location of the serving cell provided via NTN (quasi-)Earth fixed cell and is used in location-based measurement initiation in RRC_IDLE and RRC_INACTIVE, as defined in TS 38.304 [20]. This field is only present in an NTN cell.
<i>satSwitchWithReSync</i> Provides parameters for the target satellite required to perform satellite switch with resynchronization. This field is only present in an NTN cell and its presence indicates that satellite switch without PCI change is supported in the cell.
<i>t-Service</i> Indicates the time information on when a cell provided via NTN is going to stop serving the area it is currently covering. This field applies for both service link switches in NTN quasi-Earth fixed cell and feeder link switches for both NTN quasi-Earth fixed and Earth-moving cell. The field indicates a time in multiples of 10 ms after 00:00:00 on Gregorian calendar date 1 January, 1900 (midnight between Sunday, December 31, 1899 and Monday, January 1, 1900). The exact stop time is between the time indicated by the value of this field minus 1 and the time indicated by the value of this field. The reference point for <i>t-Service</i> is the uplink time synchronization reference point of the cell. This field is only present in an NTN cell.

NTN-CovEnh field descriptions
<i>numberOfMsg4HARQ-ACK-Repetitions</i> The number of repetition slots for PUCCH transmission with HARQ-ACK information for Msg4, see clause 9.2.6 in TS 38.213 [13]. The first/leftmost bit corresponds to the repetition factor 1, the second bit corresponds to the repetition factor 2, the third bit corresponds to the repetition factor 4, and the last/rightmost bit corresponds to the repetition factor 8. The repetition factor 1 shall be indicated together with at least one other repetition factor.
<i>rsrp-ThresholdMsg4HARQ-ACK</i> This threshold is used by the UE for determining the configuration of the MAC entity for PUCCH repetition for Msg4 HARQ-ACK, as specified in clause 6.2.1 in TS 38.321 [3].

SatSwitchWithReSync field descriptions
ssb-TimeOffset Indicates the time offset of the SSB from target satellite at its uplink time synchronization reference point with respect to the SSB from source satellite at its uplink time synchronization reference point. The starting boundaries of SFN0 of the source satellite and the target satellite are aligned at the uplink time synchronization reference point. The value is given in number of subframes and can only be configured as 5 subframes or multiples of 5 subframes. This field is included only for soft satellite switch with re-synchronization.
t-ServiceStart Indicates the time information on when the target satellite is going to start serving the area currently covered by the serving satellite. The field indicates a time in multiples of 10 ms after 00:00:00 on Gregorian calendar date 1st January 1900 (midnight between Sunday, December 31, 1899, and Monday, January 1, 1900). The exact start time is between the time indicated by the value of this field minus 1 and the time indicated by the value of this field. The reference point for t-ServiceStart is the uplink time synchronization reference point of the serving satellite.

—
SIB20

SIB20 contains the information required to acquire the MCCH/MTCH configuration for MBS broadcast.

SIB20 information element

```

-- ASN1START
-- TAG-SIB20-START

SIB20-r17 ::= SEQUENCE {
    mcch-Config-r17                MCCH-Config-r17,
    cfr-ConfigMCCH-MTCH-r17       CFR-ConfigMCCH-MTCH-r17 OPTIONAL, -- Need S
    lateNonCriticalExtension       OCTET STRING OPTIONAL,
    ...,
    [[
        cfr-ConfigMCCH-MTCH-RedCap-r18 CFR-ConfigMCCH-MTCH-r17 OPTIONAL, -- Need S
        mcch-ConfigRedCap-r18          MCCH-Config-r17 OPTIONAL -- Need S
    ]]
}

MCCH-Config-r17 ::= SEQUENCE {
    mcch-RepetitionPeriodAndOffset-r17 MCCH-RepetitionPeriodAndOffset-r17,
    mcch-WindowStartSlot-r17           INTEGER (0..79),
    mcch-WindowDuration-r17            ENUMERATED {sl2, sl4, sl8, sl10, sl20, sl40,sl80, sl160} OPTIONAL, -- Need S
    mcch-ModificationPeriod-r17        ENUMERATED {rf2, rf4, rf8, rf16, rf32, rf64, rf128, rf256,
    rf512, rf1024, rf2048, rf4096, rf8192, rf16384, rf32768, rf65536}
}

MCCH-RepetitionPeriodAndOffset-r17 ::= CHOICE {
    rf1-r17                INTEGER(0),
    rf2-r17                INTEGER(0..1),
    rf4-r17                INTEGER(0..3),
    rf8-r17                INTEGER(0..7),
    rf16-r17               INTEGER(0..15),
    rf32-r17               INTEGER(0..31),
    rf64-r17               INTEGER(0..63),
    rf128-r17              INTEGER(0..127),

```

```
    rf256-r17                                INTEGER(0..255)
}

-- TAG-SIB20-STOP
-- ASN1STOP
```

SIB20 field descriptions
cfr-ConfigMCCH-MTCH Common frequency resource used for MCCH and MTCH reception. If the field is absent, the CFR for broadcast has the same location and size as CORESET#0 and PDSCH configuration of MCCH is the same as PDSCH configuration provided in <i>initialDownlinkBWP</i> in <i>SIB1</i> .
cfr-ConfigMCCH-MTCH-RedCap Common frequency resource used for MCCH and MTCH reception for (e)RedCap UEs. If the field is absent, the (e)RedCap UE can use <i>cfr-ConfigMCCH-MTCH</i> if the UE supports the configured bandwidth.
mcch-ConfigRedcap Indicates MBS broadcast MCCH configuration for (e)Redcap UEs. If the field is absent, the (e)RedCap UE can use <i>mcch-Config</i> if the UE supports the bandwidth configured by <i>cfr-ConfigMCCH-MTCH</i> .
mcch-ModificationPeriod Defines periodically appearing boundaries, i.e. radio frames for which $\text{SFN mod } mcch\text{-ModificationPeriod} = 0$. The contents of different transmissions of MCCH information can only be different if there is at least one such boundary in-between them. Value rf2 corresponds to two radio frames, value rf4 corresponds to four radio frames and so on.
mcch-RepetitionPeriodAndOffset Defines the length and the offset of the MCCH repetition period. rf1 corresponds to a repetition period length of one radio frame, rf2 corresponds to a repetition period length of two radio frames and so on. The corresponding integer value indicates the offset of the repetition period in the number of radio frames. MCCH is scheduled in the MCCH transmission window starting from each radio frame for which: $\text{SFN mod repetition period length} = \text{offset of the repetition period}$.
mcch-WindowDuration Indicates, starting from the slot indicated by <i>mcch-WindowStartSlot</i> , the duration in slots during which MCCH may be scheduled. Absence of this field means that MCCH is only scheduled in the slot indicated by <i>mcch-WindowStartSlot</i> . The network always configures <i>mcch-WindowDuration</i> to be shorter or equal to the length of MCCH repetition period.
mcch-WindowStartSlot Indicates the slot in which MCCH transmission window starts.

– SIB21

SIB21 contains the mapping between the current and/or neighbouring carrier frequencies and MBS Frequency Selection Area Identities (FSAI).

SIB21 information element

```
-- ASN1START
-- TAG-SIB21-START

SIB21-r17 ::= SEQUENCE {
    mbs-FSAI-IntraFreq-r17          MBS-FSAI-List-r17          OPTIONAL, -- Need R
    mbs-FSAI-InterFreqList-r17     MBS-FSAI-InterFreqList-r17  OPTIONAL, -- Need R
    lateNonCriticalExtension        OCTET STRING                OPTIONAL,
    ...
}

MBS-FSAI-List-r17 ::= SEQUENCE (SIZE (1..maxFSAI-MBS-r17)) OF MBS-FSAI-r17
```

```
MBS-FSAI-InterFreqList-r17 ::= SEQUENCE (SIZE (1..maxFreq)) OF MBS-FSAI-InterFreq-r17

MBS-FSAI-InterFreq-r17 ::= SEQUENCE {
    dl-CarrierFreq-r17      ARFCN-ValueNR,
    mbs-FSAI-List-r17       MBS-FSAI-List-r17
}

MBS-FSAI-r17 ::= OCTET STRING (SIZE (3))

-- TAG-SIB21-STOP
-- ASN1STOP
```

SIB21 field descriptions
mbs-FSAI-InterFreqList Contains a list of neighboring frequencies including additional bands, if any, that provide MBS services and the corresponding MBS FSAs.
mbs-FSAI-IntraFreq Contains the list of MBS FSAs for the current frequency. For MBS service continuity, the UE shall use all MBS FSAs listed in <i>mbs-FSAI-IntraFreq</i> to derive the MBS frequencies of interest.

— SIB22

SIB22 contains ATG assistance information for ATG access.

SIB22 information element

```
-- ASN1START
-- TAG-SIB22-START

SIB22-r18 ::=
    atg-Config-r18                SEQUENCE {
    hs-ATG-CellReselectionSet-r18 ATG-Config-r18                OPTIONAL,
    atg-NeighCellConfigList-r18   ENUMERATED {true}            OPTIONAL,
    lateNonCriticalExtension       ATG-NeighCellConfigList-r18  OPTIONAL,
    ...                           OCTET STRING                OPTIONAL,
    }

ATG-NeighCellConfigList-r18 ::= SEQUENCE (SIZE(1..maxCellATG-r18)) OF ATG-NeighCellConfig-r18

ATG-NeighCellConfig-r18 ::= SEQUENCE {
    atg-gNB-Location-r18          ReferenceLocation-r17          OPTIONAL,
    height-gNB-r18                INTEGER (-16384..16383)         OPTIONAL,
    carrierFreq-r18               ARFCN-ValueNR                  OPTIONAL,
    physCellId-r18                PhysCellId                     OPTIONAL
}

-- TAG-SIB22-STOP
-- ASN1STOP
```

SIB22 field descriptions
atg-Config Provides parameters needed for ATG access such as ATG gNB location information, cell Specific Koffset, TA Report indication.
atg-NeighCellConfigList Provides ATG assistance information of ATG neighbour cells.
hs-ATG-CellReselectionSet Indicates whether the UE applies high speed inter-frequency measurements requirements for inter-frequency cell reselection in RRC_IDLE and RRC_INACTIVE states as specified in TS 38.133 [14]. If the field is absent UE applies only the NR cell reselection requirements as specified in TS 38.133 [14].

— SIB23

SIB23 contains NR sidelink Positioning configuration for dedicated SL-PRS resource pool.

SIB23 information element

```
-- ASN1START
-- TAG-SIB23-START

SIB23-r18 ::=
    segmentNumber-r18
    segmentType-r18
    segmentContainer-r18
}

SIB23-IEs-r18 ::=
    sl-PosConfigCommonNR-r18
    lateNonCriticalExtension
    ...
}

SL-PosConfigCommonNR-r18 ::=
    sl-PosFreqInfoList-r18
    sl-PosUE-SelectedConfig-r18
    sl-PosNR-AnchorCarrierFreqList-r18
    sl-PosMeasConfigCommon-r18
    sl-PosOffsetDFN-r18
    sl-PosSSB-PriorityNR-r18
    ...
}

-- TAG-SIB23-STOP
-- ASN1STOP
```

SEQUENCE {

INTEGER (0..63),

ENUMERATED {notLastSegment, lastSegment},

OCTET STRING

SEQUENCE {

SL-PosConfigCommonNR-r18,

OCTET STRING

OPTIONAL,

SEQUENCE {

SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigCommon-r16

SL-UE-SelectedConfig-r16

SL-NR-AnchorCarrierFreqList-r16

SL-MeasConfigCommon-r16

INTEGER (1..1000)

INTEGER (1..8)

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

-- Need R

-- Need R

-- Need R

-- Need R

-- Need R

-- Need R

SIB23 field descriptions
segmentContainer This field includes a segment of the encoded <i>SIB23-IEs</i> . The size of the included segment in this container should be small enough that the SI message size is less than or equal to the maximum size of a NR SI, i.e. 2976 bits when SIB23 is broadcast.
segmentNumber This field identifies the sequence number of a segment of <i>SIB23-IEs</i> . A segment number of zero corresponds to the first segment, a segment number of one corresponds to the second segment, and so on.
segmentType This field indicates whether the included segment is the last segment or not.
sl-PosConfigCommonNR This field indicates the NR sidelink positioning configuration.

SL-PosConfigCommonNR field descriptions
sl-PosFreqInfoList This field indicates the NR sidelink positioning carrier frequencies for SL-PRS transmission and reception. In this release, only one entry of <i>SL-FreqConfigCommon</i> is included in the list.
sl-PosMeasConfigCommon This field indicates the measurement configurations (e.g. RSRP) for NR sidelink positioning.
sl-PosNR-AnchorCarrierFreqList This field indicates the NR anchor carrier frequency list, which can provide the NR sidelink positioning configurations.
sl-PosOffsetDFN Indicates the timing offset for the UE to determine DFN timing when GNSS is used for timing reference. Value 1 corresponds to 0.001 milliseconds, value 2 corresponds to 0.002 milliseconds, and so on.
sl-PosSSB-PriorityNR This field indicates the priority of NR sidelink SSB transmission and reception.
sl-PosUE-SelectedConfig Indicates the configuration used for UE autonomous resource selection.

—
SIB24

SIB24 contains the information required to acquire the multicast MCCH/MTCH configuration for MBS multicast reception in RRC_INACTIVE.

SIB24 information element

```

-- ASN1START
-- TAG-SIB24-START

SIB24-r18 ::= SEQUENCE {
    multicastMCCH-Config-r18          MCCH-Config-r17          OPTIONAL, -- Need S
    cfr-ConfigMCCH-MTCH-r18          CFR-ConfigMCCH-MTCH-r17  OPTIONAL, -- Need S
    lateNonCriticalExtension          OCTET STRING              OPTIONAL,
    ...
}

-- TAG-SIB24-STOP

```

-- ASN1STOP

SIB24 field descriptions
cfr-ConfigMCCH-MTCH Common frequency resource used for multicast MCCH and/or multicast MTCH reception. If the field is absent, the CFR for multicast has the same location and size as CORESET#0 and PDSCH configuration of multicast MCCH, if present, is the same as PDSCH configuration provided in <i>initialDownlinkBWP</i> in <i>SIB1</i> .
multicastMCCH-Config Indicates MCCH configuration for MBS multicast reception in RRC_INACTIVE. This field is always included if it is provided via broadcast signalling in <i>SIB24</i> .

— SIB25

SIB25 contains TN coverage information to assist neighbour cell measurements for the UEs in an NTN cell.

SIB25 information element

```
-- ASN1START
-- TAG-SIB25-START

SIB25-r18 ::=
  coverageAreaInfoList-r18
  lateNonCriticalExtension
  ...
}

CoverageAreaInfoList-r18 ::= SEQUENCE (SIZE (1..maxTN-AreaInfo-r18)) OF CoverageAreaInfo-r18

CoverageAreaInfo-r18 ::= SEQUENCE {
  tn-AreaId-r18
  tn-ReferenceLocation-r18
  tn-DistanceRadius-r18
}

-- TAG-SIB25-STOP
-- ASN1STOP
```

SIB25 field descriptions
coverageAreaInfoList Contains a list of TN coverage area's information to assist skipping TN measurements for NTN UEs in RRC_IDLE and RRC_INACTIVE, as defined in TS 38.304 [20].
tn-DistanceRadius Distance from the TN coverage area reference location. It is used for skipping TN measurements in RRC_IDLE and RRC_INACTIVE, as defined in TS 38.304 [20]. Each step represents 1m.

6.3.1a Positioning System information blocks

– *PosSystemInformation-r16-IEs*

-- ASN1START

-- TAG-POSSYSTEMINFORMATION-R16-IES-START

```
PosSystemInformation-r16-IEs ::= SEQUENCE {
    posSIB-TypeAndInfo-r16          SEQUENCE (SIZE (1..maxSIB)) OF CHOICE {
        posSib1-1-r16              SIBpos-r16,
        posSib1-2-r16              SIBpos-r16,
        posSib1-3-r16              SIBpos-r16,
        posSib1-4-r16              SIBpos-r16,
        posSib1-5-r16              SIBpos-r16,
        posSib1-6-r16              SIBpos-r16,
        posSib1-7-r16              SIBpos-r16,
        posSib1-8-r16              SIBpos-r16,
        posSib2-1-r16              SIBpos-r16,
        posSib2-2-r16              SIBpos-r16,
        posSib2-3-r16              SIBpos-r16,
        posSib2-4-r16              SIBpos-r16,
        posSib2-5-r16              SIBpos-r16,
        posSib2-6-r16              SIBpos-r16,
        posSib2-7-r16              SIBpos-r16,
        posSib2-8-r16              SIBpos-r16,
        posSib2-9-r16              SIBpos-r16,
        posSib2-10-r16             SIBpos-r16,
        posSib2-11-r16             SIBpos-r16,
        posSib2-12-r16             SIBpos-r16,
        posSib2-13-r16             SIBpos-r16,
        posSib2-14-r16             SIBpos-r16,
        posSib2-15-r16             SIBpos-r16,
        posSib2-16-r16             SIBpos-r16,
        posSib2-17-r16             SIBpos-r16,
        posSib2-18-r16             SIBpos-r16,
        posSib2-19-r16             SIBpos-r16,
        posSib2-20-r16             SIBpos-r16,
        posSib2-21-r16             SIBpos-r16,
        posSib2-22-r16             SIBpos-r16,
        posSib2-23-r16             SIBpos-r16,
        posSib3-1-r16              SIBpos-r16,
        posSib4-1-r16              SIBpos-r16,
        posSib5-1-r16              SIBpos-r16,
        posSib6-1-r16              SIBpos-r16,
        posSib6-2-r16              SIBpos-r16,
        posSib6-3-r16              SIBpos-r16,
        ... ,
        posSib1-9-v1700            SIBpos-r16,
        posSib1-10-v1700           SIBpos-r16,
        posSib2-24-v1700           SIBpos-r16,
        posSib2-25-v1700           SIBpos-r16,
        posSib6-4-v1700            SIBpos-r16,
```

```

posSib6-5-v1700      SIBpos-r16,
posSib6-6-v1700      SIBpos-r16,
posSib2-17a-v1770    SIBpos-r16,
posSib2-18a-v1770    SIBpos-r16,
posSib2-20a-v1770    SIBpos-r16,
posSib1-11-v1800     SIBpos-r16,
posSib1-12-v1800     SIBpos-r16,
posSib2-26-v1800     SIBpos-r16,
posSib2-27-v1800     SIBpos-r16,
posSib6-7-v1800      SIBpos-r16,
posSib7-1-v1800      SIBpos-r16,
posSib7-2-v1800      SIBpos-r16,
posSib7-3-v1800      SIBpos-r16,
posSib7-4-v1800      SIBpos-r16

},
lateNonCriticalExtension OCTET STRING OPTIONAL,
nonCriticalExtension      SEQUENCE {}    OPTIONAL
}

-- TAG-POSSYSTEMINFORMATION-R16-IES-STOP
-- ASN1STOP

```

PosSI-SchedulingInfo

```

-- ASN1START
-- TAG-POSSI-SCHEDULINGINFO-START

PosSI-SchedulingInfo-r16 ::= SEQUENCE {
    posSchedulingInfoList-r16      SEQUENCE (SIZE (1..maxSI-Message)) OF PosSchedulingInfo-r16,
    posSI-RequestConfig-r16        SI-RequestConfig                      OPTIONAL, -- Cond MSG-1
    posSI-RequestConfigSUL-r16     SI-RequestConfig                      OPTIONAL, -- Cond SUL-MSG-1
    ...,
    [[
        posSI-RequestConfigRedCap-r17 SI-RequestConfig                  OPTIONAL -- Cond REDCAP-MSG-1
    ]],
    [[
        posSI-RequestConfigMSG1-Repetition-r18 SI-RequestConfigRepetition-r18 OPTIONAL, -- Cond MSG-1
        posSI-RequestConfigSUL-MSG1-Repetition-r18 SI-RequestConfigRepetition-r18 OPTIONAL, -- Cond SUL-MSG-1
        posSI-RequestConfigRedCap-MSG1-Repetition-r18 SI-RequestConfigRepetition-r18 OPTIONAL, -- Cond REDCAP-MSG-1
    ]]
}

PosSchedulingInfo-r16 ::= SEQUENCE {
    offsetToSI-Used-r16      ENUMERATED {true}                      OPTIONAL, -- Need R
    posSI-Periodicity-r16    ENUMERATED {rf8, rf16, rf32, rf64, rf128, rf256, rf512},
    posSI-BroadcastStatus-r16 ENUMERATED {broadcasting, notBroadcasting},
    posSIB-MappingInfo-r16   PosSIB-MappingInfo-r16,
    ...
}

PosSIB-MappingInfo-r16 ::= SEQUENCE (SIZE (1..maxSIB)) OF PosSIB-Type-r16

```

```

PosSIB-Type-r16 ::=
    encrypted-r16
    gnss-id-r16
    sbas-id-r16
    posSibType-r16

    areaScope-r16
}

GNSS-ID-r16 ::= SEQUENCE {
    gnss-id-r16
    ...
}

SBAS-ID-r16 ::= SEQUENCE {
    sbas-id-r16
    ...
}

-- TAG-POSSI-SCHEDULINGINFO-STOP
-- ASN1STOP

```

<i>PosSI-SchedulingInfo</i> field descriptions
areaScope Indicates that a posSIB is area specific. If the field is absent, the posSIB is cell specific.
encrypted The presence of this field indicates that the <i>pos-sib-type</i> is encrypted as specified in TS 37.355 [49].
gnss-id The presence of this field indicates that the positioning SIB type is for a specific GNSS. Indicates a specific GNSS (see also TS 37.355 [49])
posSchedulingInfoList List of scheduling information for SI messages. If <i>si-SchedulingInfo-v1700</i> is present, the network ensures that the total number of SI messages in the concatenated list of SI messages configured by <i>posSchedulingInfoList</i> in <i>posSI-SchedulingInfo</i> and SI messages containing type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> does not exceed the limit of <i>maxSI-Message</i> .
posSI-BroadcastStatus Indicates if the SI message is being broadcasted or not. Change of <i>posSI-BroadcastStatus</i> should not result in system information change notifications in Short Message transmitted with P-RNTI over DCI (see clause 6.5). The value of the indication is valid until the end of the BCCH modification period when set to <i>broadcasting</i> .
posSI-RequestConfig Configuration of Msg1 resources that the UE uses for requesting SI-messages for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> of the type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> , if present, is set to <i>notBroadcasting</i> .
posSI-RequestConfigMSG1-Repetition Configuration of Msg1 repetition resources on NUL that the UE uses for requesting SI-messages for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> of the type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> , if present, is set to <i>notBroadcasting</i> . This field is only applicable when Msg1 repetition resources can be used for requesting SI-messages.
posSI-RequestConfigRedCap Configuration of Msg1 resources for <i>initialUplinkBWP-RedCap</i> that the (e)RedCap UE uses for requesting SI-messages for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> of the type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> , if present, is set to <i>notBroadcasting</i> .
posSI-RequestConfigRedCap-MSG1-Repetition Configuration of Msg1 repetition resources for <i>initialUplinkBWP-RedCap</i> that the (e)RedCap UE uses for requesting SI-messages for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> of the type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> , if present, is set to <i>notBroadcasting</i> . This field is only applicable when Msg1 repetition resources can be used for requesting SI-messages.
posSI-RequestConfigSUL Configuration of Msg1 resources that the UE uses for requesting SI-messages for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> of the type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> , if present, is set to <i>notBroadcasting</i> .
posSI-RequestConfigSUL-MSG1-Repetition Configuration of Msg1 repetition resources on SUL that the UE uses for requesting SI-messages for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> of the type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> , if present, is set to <i>notBroadcasting</i> . This field is only applicable when Msg1 repetition resources can be used for requesting SI-messages.
posSIB-MappingInfo List of the posSIBs mapped to this <i>SystemInformation</i> message.
posSibType The positioning SIB type is defined in TS 37.355 [49].
posSI-Periodicity Periodicity of the SI-message in radio frames, such that rf8 denotes 8 radio frames, rf16 denotes 16 radio frames, and so on. If the <i>offsetToSI-Used</i> is configured, the <i>posSI-Periodicity</i> of rf8 cannot be used.
offsetToSI-Used This field, if present, indicates that all the SI messages in <i>posSchedulingInfoList</i> are scheduled with an offset of 8 radio frames compared to SI messages in <i>schedulingInfoList</i> . <i>offsetToSI-Used</i> may be present only if the shortest configured SI message periodicity for SI messages in <i>schedulingInfoList</i> is 80ms. If SI offset is used, this field is present in each of the SI messages in the <i>posSchedulingInfoList</i> .

<i>sbas-id</i> The presence of this field indicates that the positioning SIB type is for a specific SBAS. Indicates a specific SBAS (see also TS 37.355 [49]).

Conditional presence	Explanation
<i>GNSS-ID-SBAS</i>	The field is mandatory present if <i>gnss-id</i> is set to <i>sbas</i> . It is absent otherwise.
<i>MSG-1</i>	The field is optionally present, Need R, if <i>posSI-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message included in <i>posSchedulingInfoList</i> or if <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message containing type2 SIB included in <i>schedulingInfoList2</i> . It is absent otherwise.
<i>SUL-MSG-1</i>	The field is optionally present, Need R, if <i>supplementaryUplink</i> is configured in <i>ServingCellConfigCommonSIB</i> , and if <i>posSI-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message included in <i>posSchedulingInfoList</i> or if <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message containing type2 SIB included in <i>schedulingInfoList2</i> . It is absent otherwise.
<i>REDCAP-MSG-1</i>	The field is optionally present, Need R, if <i>initialUplinkBWP-RedCap</i> is configured in <i>UplinkConfigCommonSIB</i> , and if <i>posSI-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message included in <i>posSchedulingInfoList</i> or if <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message containing type2 SIB included in <i>schedulingInfoList2</i> . It is absent otherwise.

– *SIBpos*

The IE *SIBpos* contains positioning assistance data as defined in TS 37.355 [49].

***SIBpos* information element**

```
-- ASN1START
-- TAG-SIPOs-START

SIBpos-r16 ::= SEQUENCE {
  assistanceDataSIB-Element-r16      OCTET STRING,
  lateNonCriticalExtension             OCTET STRING OPTIONAL,
  ...
}

-- TAG-SIPOs-STOP
-- ASN1STOP
```

<i>SIBpos</i> field descriptions
<i>assistanceDataSIB-Element</i> Parameter <i>AssistanceDataSIBelement</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.

6.3.2 Radio resource control information elements

– *AdditionalPCIIndex*

The IE *AdditionalPCIIndex* identifies an additional physical cell identity (PCI) configured with *additionalPCI-ToAddModList-r17* in *ServingCellConfig*.

***AdditionalPCIIndex* information element**

```
-- ASN1START
-- TAG-ADDITIONALPCIINDEX-START

AdditionalPCIIndex-r17 ::= INTEGER(1..maxNrofAdditionalPCI-r17)

-- TAG-ADDITIONALPCIINDEX-STOP
-- ASN1STOP
```

AdditionalSpectrumEmission

The IE *AdditionalSpectrumEmission* is used to indicate emission requirements to be fulfilled by the UE (see TS 38.101-1 [15], clause 6.2.3/6.2A.3, TS 38.101-2 [39], clause 6.2.3/6.2A.3, and TS 38.101-5 [75], clause 6.2.3). If an extension is signalled using the extended value range (as defined by the IE *AdditionalSpectrumEmission-v1760*), the corresponding original field, using the value range as defined by the IE *AdditionalSpectrumEmission* (without suffix) shall be set to value 7.

***AdditionalSpectrumEmission* information element**

```
-- ASN1START
-- TAG-ADDITIONALSPECTRUMEMISSION-START

AdditionalSpectrumEmission ::= INTEGER (0..7)

AdditionalSpectrumEmission-v1760 ::= INTEGER (8..39)

AdditionalSpectrumEmission-r18 ::= INTEGER (0..39)

-- TAG-ADDITIONALSPECTRUMEMISSION-STOP
-- ASN1STOP
```

AdvancedReceiver-MU-MIMO

The IE *AdvancedReceiver-MU-MIMO* is used to provide a set of assistance information for R-ML (reduced complexity ML) receivers with enhanced inter-user interference suppression for MU-MIMO transmissions.

***AdvancedReceiver-MU-MIMO* information element**

```
-- ASN1START
-- TAG-ADVANCEDRECEIVER-MU-MIMO-START

AdvancedReceiver-MU-MIMO-r18 ::= SEQUENCE {
    precodingAndResourceAllocation-r18    BOOLEAN OPTIONAL, -- Need M
    pdsch-TimeDomainAllocation-r18        BOOLEAN OPTIONAL, -- Need M
    mcs-Table-r18                         ENUMERATED {qam1024, qam256, qam64, spare1} OPTIONAL, -- Need R
    advReceiver-MU-MIMO-DCI-1-1-r18       ENUMERATED {enabled} OPTIONAL, -- Need R
    ...
}
```

-- TAG-ADVANCEDRECEIVER-MU-MIMO-STOP
-- ASN1STOP

AdvancedReceiver-MU-MIMO field descriptions
advReceiver-MU-MIMO-DCI-1-1 Configure the presence of the co-scheduled UE information field in DCI format 1_1 (see TS 38.212 [17], clause 7.3.1.2.2).
mcs-Table Indicates the MCS table with the highest modulation order among all MCS tables configured to the co-scheduled UE(s), which has the same DMRS sequence as the target UE.
pdsch-TimeDomainAllocation If the field is set to true, the UE can assume the time domain resource assignment for PDSCH symbols of all the co-scheduled UE(s), which has the same DMRS sequence as the target UE, is same as the target UE. If the field is set to false, the UE can not assume the time domain resource assignment for PDSCH symbols of all the co-scheduled UE(s), which has the same DMRS sequence as the target UE, is same as the target UE.
precodingAndResourceAllocation If the field is set to true, the UE can assume the precoding and resource allocation of the co-scheduled UE are the same in the PRG-level grid configured to the target UE when PRG=2 or 4, when the target UE and any co-scheduled UEs are in different CDM groups and with the same DMRS sequence. If the field is set to false, the UE can not assume the precoding or resource allocation of the co-scheduled UE is the same in the PRG-level grid configured to the target UE when PRG=2 or 4, when the target UE and any co-scheduled UEs are in different CDM groups and with the same DMRS sequence.

NOTE: the same DMRS sequence represents the same root DMRS sequence $r(n)$, see TS 38.211 [16], clause 7.4.1.1.1.

— **Aerial-Config**

The IE *Aerial-Config* provides configuration parameters for aerial UE.

Aerial-Config information element

```
-- ASN1START
-- TAG-AERIAL-CONFIG-START

Aerial-Config-r18 ::= SEQUENCE {
    flightPathUpdateThrConfig-r18 SEQUENCE {
        flightPathUpdateDistanceThr-r18 SetupRelease { FlightPathUpdateDistanceThr-r18 } OPTIONAL, -- Need M
        flightPathUpdateTimeThr-r18 SetupRelease { FlightPathUpdateTimeThr-r18 } OPTIONAL, -- Need M
    }
    ...
}

FlightPathUpdateDistanceThr-r18 ::= INTEGER (0..1023)
FlightPathUpdateTimeThr-r18 ::= INTEGER (0..16383)

-- TAG-AERIAL-CONFIG-STOP
-- ASN1STOP
```

<i>Aerial-Config</i> field descriptions
<i>flightPathUpdateDistanceThr</i> Distance threshold for triggering flight path update indication. Actual value is 5 x field value in meters.
<i>flightPathUpdateTimeThr</i> Time threshold for triggering flight path update indication. Value in seconds.

— *Alpha*

The IE *Alpha* defines possible values of a the pathloss compensation coefficient for uplink power control. Value *alpha0* corresponds to the value 0, Value *alpha04* corresponds to the value 0.4, Value *alpha05* corresponds to the value 0.5 and so on. Value *alpha1* corresponds to value 1. See also clause 7.1 of TS 38.213 [13].

```
-- ASN1START
-- TAG-ALPHA-START

Alpha ::=
    ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1}

-- TAG-ALPHA-STOP
-- ASN1STOP
```

— *Altitude*

The IE *Altitude* is used to indicate altitude relative to sea level. The actual value is the field value in meters.

***Altitude* information element**

```
-- ASN1START
-- TAG-ALTITUDE-START

Altitude-r18 ::=
    INTEGER (minAltitude-r18..maxAltitude-r18)

-- TAG-ALTITUDE-STOP
-- ASN1STOP
```

— *AMF-Identifier*

The IE *AMF-Identifier* (AMFI) comprises of an AMF Region ID, an AMF Set ID and an AMF Pointer as specified in TS 23.003 [21], clause 2.10.1.

***AMF-Identifier* information element**

```
-- ASN1START
-- TAG-AMF-IDENTIFIER-START
```



```
AMF-Identifier ::= BIT STRING (SIZE (24))
```

```
-- TAG-AMF-IDENTIFIER-STOP
-- ASN1STOP
```

— *ARFCN-ValueEUTRA*

The IE *ARFCN-ValueEUTRA* is used to indicate the ARFCN applicable for a downlink, uplink or bi-directional (TDD) E-UTRA carrier frequency, as defined in TS 36.101 [22].

ARFCN-ValueEUTRA information element

```
-- ASN1START
-- TAG-ARFCN-VALUEEUTRA-START
```

```
ARFCN-ValueEUTRA ::= INTEGER (0..maxEARFCN)
```

```
-- TAG-ARFCN-VALUEEUTRA-STOP
-- ASN1STOP
```

— *ARFCN-ValueNR*

The IE *ARFCN-ValueNR* is used to indicate the ARFCN applicable for a downlink, uplink or bi-directional (TDD) NR global frequency raster, as defined in TS 38.101-1 [15], TS 38.101-2 [39] and TS 38.101-5 [75], clause 5.4.2.

```
-- ASN1START
-- TAG-ARFCN-VALUENR-START
```

```
ARFCN-ValueNR ::= INTEGER (0..maxNARFCN)
```

```
-- TAG-ARFCN-VALUENR-STOP
-- ASN1STOP
```

— *ARFCN-ValueUTRA-FDD*

The IE *ARFCN-ValueUTRA-FDD* is used to indicate the ARFCN applicable for a downlink (Nd, FDD) UTRA-FDD carrier frequency, as defined in TS 25.331 [45].

ARFCN-ValueUTRA-FDD information element

```
-- ASN1START
-- TAG-ARFCN-ValueUTRA-FDD-START
```

```
ARFCN-ValueUTRA-FDD-r16 ::= INTEGER (0..16383)
```

-- TAG-ARFCN-ValueUTRA-FDD-STOP
-- ASN1STOP

– *ATG-Config*

The IE *ATG-Config* provides parameters needed for the UE to access NR via ATG access.

ATG-Config information element

```
-- ASN1START
-- TAG-ATG-CONFIG-START

ATG-Config-r18 ::= SEQUENCE {
    atg-gNB-Location-r18      ReferenceLocation-r17      OPTIONAL, -- Need R
    height-gNB-r18           INTEGER (-16384..16383)     OPTIONAL, -- Need R
    cellSpecificOffset-r18   INTEGER(1..3)              OPTIONAL, -- Need R
    ta-ReportATG-r18         ENUMERATED {enabled}        OPTIONAL, -- Need R
}

-- TAG-ATG-CONFIG-STOP
-- ASN1STOP
```

ATG-Config field descriptions
atg-gNB-Location Indicates the BS location for ATG access.
cellSpecificOffset Scheduling offset used for the timing relationships that are modified for ATG. Unit in slot.
height-gNB Indicates the height of the BS for ATG access relative to the sea level. Unit in meter.
ta-ReportATG When this field is included in SIB22, it indicates reporting of timing advanced is enabled during Random Access due to RRC connection establishment or RRC connection resume, and during RRC connection reestablishment. When this field is included in <i>ServingCellConfigCommon</i> within dedicated signalling, it indicates TA reporting is enabled during Random Access due to reconfiguration with sync (see TS 38.321 [3], clause 5.4.8).

– *AvailabilityCombinationsPerCell*

The IE *AvailabilityCombinationsPerCell* is used to configure the *AvailabilityCombinations* applicable for a cell of the IAB DU (see TS 38.213 [13], clause 14). Note that the IE *AvailabilityCombinationsPerCellIndex* can only be configured up to 511.

AvailabilityCombinationsPerCell information element

-- ASN1START
-- TAG-AVAILABILITYCOMBINATIONSPERCELL-START

```

AvailabilityCombinationsPerCell-r16 ::= SEQUENCE {
    availabilityCombinationsPerCellIndex-r16 AvailabilityCombinationsPerCellIndex-r16,
    iab-DU-CellIdentity-r16 CellIdentity,
    positionInDCI-AI-r16 INTEGER(0..maxAI-DCI-PayloadSize-1-r16) OPTIONAL, -- Need M
    availabilityCombinations-r16 SEQUENCE (SIZE (1..maxNrofAvailabilityCombinationsPerSet-r16)) OF AvailabilityCombination-r16,
    ...
    [[
        availabilityCombinationsRB-Groups-r17 SEQUENCE (SIZE (1..maxNrofAvailabilityCombinationsPerSet-r16)) OF
                                                    AvailabilityCombinationRB-Groups-r17 OPTIONAL -- Need M
    ]],
    [[
        positionInDCI-AI-RBGroups-v1720 INTEGER(0..maxAI-DCI-PayloadSize-1-r16) OPTIONAL -- Need M
    ]]
}

AvailabilityCombinationsPerCellIndex-r16 ::= INTEGER(0..maxNrofDUCells-r16)

AvailabilityCombination-r16 ::= SEQUENCE {
    availabilityCombinationId-r16 AvailabilityCombinationId-r16,
    resourceAvailability-r16 SEQUENCE (SIZE (1..maxNrofResourceAvailabilityPerCombination-r16)) OF INTEGER (0..7)
}

AvailabilityCombinationId-r16 ::= INTEGER (0..maxNrofAvailabilityCombinationsPerSet-1-r16)

AvailabilityCombinationRB-Groups-r17 ::= SEQUENCE {
    availabilityCombinationId-r16 AvailabilityCombinationId-r16,
    rb-SetGroups-r17 SEQUENCE (SIZE (1..maxNrofRB-SetGroups-r17)) OF RB-SetGroup-r17 OPTIONAL, -- Need R
    resourceAvailability-r17 SEQUENCE (SIZE (1..maxNrofResourceAvailabilityPerCombination-r16)) OF INTEGER (0..7) OPTIONAL -- Need R
}

RB-SetGroup-r17 ::= SEQUENCE {
    resourceAvailability-r17 SEQUENCE (SIZE (1..maxNrofResourceAvailabilityPerCombination-r16)) OF INTEGER (0..7) OPTIONAL, -- Need R
    rb-Sets-r17 SEQUENCE (SIZE (1..maxNrofRB-Sets-r17)) OF INTEGER (0..7) OPTIONAL -- Need R
}

-- TAG-AVAILABILITYCOMBINATIONSPerCELL-STOP
-- ASN1STOP

```

<i>AvailabilityCombination field descriptions</i>	
availabilityCombinationId	This ID is used in the DCI Format 2_5 payload to dynamically select this <i>AvailabilityCombination</i> , see TS 38.213 [13], clause 14.
resourceAvailability	Indicates the resource availability of soft symbols for a set of consecutive slots in the time domain. The meaning of this field is described in TS 38.213 [13], Table 14.3. If included in <i>RB-SetGroup</i> within <i>AvailabilityCombinationRB-Groups-r17</i> , it indicates the availability of soft resources for an RB set group. If included in <i>AvailabilityCombinationRB-Groups-r17</i> when the <i>rb-SetGroups</i> is not configured, it indicates the availability of soft resources in one or multiple slots for all RB sets of a DU cell.

AvailabilityCombinationsPerCell field descriptions
iab-DU-CellIdentity The ID of the IAB-DU cell for which the <i>availabilityCombinations</i> are applicable.
positionInDCI-AI The (starting) position (bit) of the <i>availabilityCombinationId</i> for the indicated IAB-DU cell (<i>iab-DU-CellIdentity</i>) within the DCI payload. If <i>positionInDCI-AI-RBGroups</i> is not configured, it applies to the <i>availabilityCombinationId</i> included in <i>availabilityCombinations</i> and in <i>availabilityCombinationsRB-Groups</i> . If <i>positionInDCI-AI-RBGroups</i> is configured, it applies to the <i>availabilityCombinationId</i> included in <i>availabilityCombinations</i> .
positionInDCI-AI-RBGroups The (starting) position (bit) of the <i>availabilityCombinationId</i> associated to the <i>availabilityCombinationsRB-Groups</i> for the indicated IAB-DU cell (<i>iab-DU-CellIdentity</i>) within the DCI payload.

AvailabilityCombinationRB-Groups field descriptions
rb-SetGroups Indicates the RB set groups configured for the availability combination. Each group includes consecutive RB sets.
rb-Sets Indicates the one or more RB set indexes associated to one or more RB sets configured for one RB set group.

– AvailabilityIndicator

The IE *AvailabilityIndicator* is used to configure monitoring a PDCCH for Availability Indicators (AI).

AvailabilityIndicator information element

```
-- ASN1START
-- TAG-AVAILABILITYINDICATOR-START

AvailabilityIndicator-r16 ::= SEQUENCE {
    ai-RNTI-r16                AI-RNTI-r16,
    dci-PayloadSizeAI-r16      INTEGER (1..maxAI-DCI-PayloadSize-r16),
    availableCombToAddModList-r16 SEQUENCE (SIZE(1..maxNrofDUCells-r16)) OF AvailabilityCombinationsPerCell-r16 OPTIONAL, -- Need N
    availableCombToReleaseList-r16 SEQUENCE (SIZE(1..maxNrofDUCells-r16)) OF AvailabilityCombinationsPerCellIndex-r16 OPTIONAL, -- Need N
    ...
}

AI-RNTI-r16 ::= RNTI-Value

-- TAG-AVAILABILITYINDICATOR-STOP
-- ASN1STOP
```

AvailabilityIndicator field descriptions
ai-RNTI Used by an IAB-MT for detection of DCI format 2_5 indicating <i>AvailabilityCombinationId</i> for an IAB-DU's cells.
availableCombToAddModList A list of <i>availabilityCombinations</i> to add for the IAB-DU's cells. (see TS 38.213 [13], clause 14).
availableCombToReleaseList A list of <i>availabilityCombinations</i> to release for the IAB-DU's cells. (see TS 38.213 [13], clause 14).
dci-PayloadSizeAI Total length of the DCI payload scrambled with ai-RNTI (see TS 38.213 [13]).

— *BAP-RoutingID*

The IE *BAP-RoutingID* is used for IAB-node to configure the BAP Routing ID.

BAP-RoutingID information element

```
-- ASN1START
-- TAG-BAPROUTINGID-START

BAP-RoutingID-r16 ::= SEQUENCE {
    bap-Address-r16      BIT STRING (SIZE (10)),
    bap-PathId-r16       BIT STRING (SIZE (10))
}

-- TAG-BAPROUTINGID-STOP
-- ASN1STOP
```

BAP-RoutingID field descriptions
bap-Address The ID of a destination IAB-node or IAB-donor-DU used in the BAP header.
bap-PathId The ID of a path used in the BAP header.

— *BeamFailureRecoveryConfig*

The IE *BeamFailureRecoveryConfig* is used to configure the UE with RACH resources and candidate beams for beam failure recovery in case of beam failure detection. See also TS 38.321 [3], clause 5.1.1.

BeamFailureRecoveryConfig information element

```
-- ASN1START
-- TAG-BEAMFAILURERECOVERYCONFIG-START

BeamFailureRecoveryConfig ::= SEQUENCE {
```

rootSequenceIndex-BFR	INTEGER (0..137)	OPTIONAL, -- Need M
rach-ConfigBFR	RACH-ConfigGeneric	OPTIONAL, -- Need M
rsrp-ThresholdSSB	RSRP-Range	OPTIONAL, -- Need M
candidateBeamRSList	SEQUENCE (SIZE(1..maxNrofCandidateBeams)) OF PRACH-ResourceDedicatedBFR	OPTIONAL, -- Need M
ssb-perRACH-Occasion	ENUMERATED {oneEighth, oneFourth, oneHalf, one, two, four, eight, sixteen}	OPTIONAL, -- Need M
ra-ssb-OccasionMaskIndex	INTEGER (0..15)	OPTIONAL, -- Need M
recoverySearchSpaceId	SearchSpaceId	OPTIONAL, -- Need R
ra-Prioritization	RA-Prioritization	OPTIONAL, -- Need R
beamFailureRecoveryTimer	ENUMERATED {ms10, ms20, ms40, ms60, ms80, ms100, ms150, ms200}	OPTIONAL, -- Need M
...		
[[		
msg1-SubcarrierSpacing	SubcarrierSpacing	OPTIONAL -- Need M
]],		
[[		
ra-PrioritizationTwoStep-r16	RA-Prioritization	OPTIONAL, -- Need R
candidateBeamRSListExt-v1610	SetupRelease{ CandidateBeamRSListExt-r16 }	OPTIONAL -- Need M
]],		
[[		
spCell-BFR-CBRA-r16	ENUMERATED {true}	OPTIONAL -- Need R
]]		
}		
PRACH-ResourceDedicatedBFR ::=	CHOICE {	
ssb	BFR-SSB-Resource,	
csi-RS	BFR-CSIRS-Resource	
}		
BFR-SSB-Resource ::=	SEQUENCE {	
ssb	SSB-Index,	
ra-PreambleIndex	INTEGER (0..63),	
...		
}		
BFR-CSIRS-Resource ::=	SEQUENCE {	
csi-RS	NZP-CSI-RS-ResourceId,	
ra-OccasionList	SEQUENCE (SIZE(1..maxRA-OccasionsPerCSIRS)) OF INTEGER (0..maxRA-Occasions-1)	OPTIONAL, -- Need R
ra-PreambleIndex	INTEGER (0..63)	OPTIONAL, -- Need R
...		
}		
CandidateBeamRSListExt-r16::=	SEQUENCE (SIZE(1.. maxNrofCandidateBeamsExt-r16)) OF PRACH-ResourceDedicatedBFR	
-- TAG-BEAMFAILURERECOVERYCONFIG-STOP		
-- ASN1STOP		

<i>BeamFailureRecoveryConfig</i> field descriptions
<i>beamFailureRecoveryTimer</i> Timer for beam failure recovery timer. Upon expiration of the timer the UE does not use CFRA for BFR. Value in ms. Value <i>ms10</i> corresponds to 10 ms, value <i>ms20</i> corresponds to 20 ms, and so on.
<i>candidateBeamRSList</i>, <i>candidateBeamRSListExt-v1610</i> Set of reference signals (CSI-RS and/or SSB) identifying the candidate beams for recovery and the associated RA parameters. This set includes all elements of <i>candidateBeamRSList</i> (without suffix) and all elements of <i>candidateBeamRSListExt-v1610</i> . The UE maintains <i>candidateBeamRSList</i> and <i>candidateBeamRSListExt-v1610</i> separately: Receiving <i>candidateBeamRSListExt-v1610</i> set to <i>release</i> releases only the entries that were configured by <i>candidateBeamRSListExt-v1610</i> , and receiving <i>candidateBeamRSListExt-v1610</i> set to <i>setup</i> replaces only the entries that were configured by <i>candidateBeamRSListExt-v1610</i> with the newly signalled entries. The network configures these reference signals to be within the linked DL BWP (i.e., within the DL BWP with the same <i>bwp-Id</i>) of the UL BWP in which the <i>BeamFailureRecoveryConfig</i> is provided.
<i>msg1-SubcarrierSpacing</i> Subcarrier spacing for contention free beam failure recovery (see TS 38.211 [16], clause 5.3.2). Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz
<i>rsrp-ThresholdSSB</i> L1-RSRP threshold used for determining whether a candidate beam may be used by the UE to attempt contention free random access to recover from beam failure (see TS 38.213 [13], clause 6).
<i>ra-prioritization</i> Parameters which apply for prioritized random access procedure for BFR (see TS 38.321 [3], clause 5.1.1).
<i>ra-PrioritizationTwoStep</i> Parameters which apply for prioritized 2-step random access procedure for BFR (see TS 38.321 [3], clause 5.1.1).
<i>ra-ssb-OccasionMaskIndex</i> Explicitly signalled PRACH Mask Index for RA Resource selection in TS 38.321 [3]. The mask is valid for all SSB resources.
<i>rach-ConfigBFR</i> Configuration of random access parameters for BFR.
<i>recoverySearchSpaceId</i> Search space to use for BFR RAR. The network configures this search space to be within the linked DL BWP (i.e., within the DL BWP with the same <i>bwp-Id</i>) of the UL BWP in which the <i>BeamFailureRecoveryConfig</i> is provided. The CORESET associated with the recovery search space cannot be associated with another search space. Network always configures the UE with a value for this field when contention free random access resources for BFR are configured.
<i>rootSequenceIndex-BFR</i> PRACH root sequence index (see TS 38.211 [16], clause 6.3.3.1) for beam failure recovery.
<i>spCell-BFR-CBRA</i> Indicates that UE is configured to send MAC CE for SpCell BFR as specified in TS38.321 [3].
<i>ssb-perRACH-Occasion</i> Number of SSBs per RACH occasion for CF-BFR, see TS 38.213 [13], clause 8.1.

BFR-CSIRS-Resource field descriptions
csi-RS The ID of a <i>NZP-CSI-RS-Resource</i> configured in the <i>CSI-MeasConfig</i> of this serving cell. This reference signal determines a candidate beam for beam failure recovery (BFR).
ra-OccasionList RA occasions that the UE shall use when performing BFR upon selecting the candidate beam identified by this CSI-RS. The network ensures that the RA occasion indexes provided herein are also configured by <i>prach-ConfigurationIndex</i> and <i>msg1-FDM</i> . Each RACH occasion is sequentially numbered, first, in increasing order of frequency resource indexes for frequency multiplexed PRACH occasions; second, in increasing order of time resource indexes for time multiplexed PRACH occasions within a PRACH slot and Third, in increasing order of indexes for PRACH slots. If the field is absent the UE uses the RA occasion associated with the SSB that is QCLed with this CSI-RS.
ra-PreambleIndex The RA preamble index to use in the RA occasions associated with this CSI-RS. If the field is absent, the UE uses the preamble index associated with the SSB that is QCLed with this CSI-RS.

BFR-SSB-Resource field descriptions
ra-PreambleIndex The preamble index that the UE shall use when performing BFR upon selecting the candidate beams identified by this SSB.
ssb The ID of an SSB transmitted by this serving cell. It determines a candidate beam for beam failure recovery (BFR).

– *BeamFailureRecoveryRSConfig*

The IE *BeamFailureRecoveryRSConfig* is used to configure the UE with candidate beams for beam failure recovery in case of beam failure detection. See also TS 38.321 [3], clause 5.17.

BeamFailureRecoveryRSConfig information element

```
-- ASN1START
-- TAG-BEAMFAILURERECOVERYRSCONFIG-START

BeamFailureRecoveryRSConfig-r16 ::= SEQUENCE {
    rsrp-ThresholdBFR-r16          RSRP-Range                                OPTIONAL, -- Need M
    candidateBeamRS-List-r16       SEQUENCE (SIZE(1..maxNrofCandidateBeams-r16)) OF CandidateBeamRS-r16  OPTIONAL, -- Need M
    ...,
    [[
        candidateBeamRS-List2-r17  SEQUENCE (SIZE(1..maxNrofCandidateBeams-r16)) OF CandidateBeamRS-r16  OPTIONAL -- Need R
    ]]
}

-- TAG-BEAMFAILURERECOVERYRSCONFIG-STOP
-- ASN1STOP
```


<i>BeamFailureRecoveryRSConfig</i> field descriptions
<i>candidateBeamRS-List</i> A list of reference signals (CSI-RS and/or SSB) identifying the candidate beams for recovery. The network always configures this parameter in every instance of this IE.
<i>candidateBeamRS-List2</i> A list of reference signals (CSI-RS and/or SSB) identifying the candidate beams for recovery.
<i>rsrp-ThresholdBFR</i> L1-RSRP threshold used for determining whether a candidate beam may be included by the UE in MAC CE for BFR (see TS 38.321 [3] and TS 38.213 [13], clause 6). The network always configures this parameter in every instance of this IE.

– *BetaOffsets*

The IE *BetaOffsets* is used to configure beta-offset values, see TS 38.213 [13], clause 9.3.

BetaOffsets information element

```
-- ASN1START
-- TAG-BETAOFFSETS-START

BetaOffsets ::=
    betaOffsetACK-Index1      INTEGER(0..31)
    betaOffsetACK-Index2      INTEGER(0..31)
    betaOffsetACK-Index3      INTEGER(0..31)
    betaOffsetCSI-Part1-Index1 INTEGER(0..31)
    betaOffsetCSI-Part1-Index2 INTEGER(0..31)
    betaOffsetCSI-Part2-Index1 INTEGER(0..31)
    betaOffsetCSI-Part2-Index2 INTEGER(0..31)
}

-- TAG-BETAOFFSETS-STOP
-- ASN1STOP
```

OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S

<i>BetaOffsets</i> field descriptions
<i>betaOffsetACK-Index1</i> Up to 2 bits HARQ-ACK (see TS 38.213 [13], clause 9.3). When the field is absent the UE applies the value 11.
<i>betaOffsetACK-Index2</i> Up to 11 bits HARQ-ACK (see TS 38.213 [13], clause 9.3). When the field is absent the UE applies the value 11.
<i>betaOffsetACK-Index3</i> Above 11 bits HARQ-ACK (see TS 38.213 [13], clause 9.3). When the field is absent the UE applies the value 11.
<i>betaOffsetCSI-Part1-Index1</i> Up to 11 bits of CSI part 1 bits (see TS 38.213 [13], clause 9.3). When the field is absent the UE applies the value 13.
<i>betaOffsetCSI-Part1-Index2</i> Above 11 bits of CSI part 1 bits (see TS 38.213 [13], clause 9.3). When the field is absent the UE applies the value 13.
<i>betaOffsetCSI-Part2-Index1</i> Up to 11 bits of CSI part 2 bits (see TS 38.213 [13], clause 9.3). When the field is absent the UE applies the value 13.
<i>betaOffsetCSI-Part2-Index2</i> Above 11 bits of CSI part 2 bits (see TS 38.213 [13], clause 9.3). When the field is absent the UE applies the value 13.

– *BetaOffsetsCrossPri*

The IE *BetaOffsetsCrossPri* is used to configure beta-offset values for cross-priority HARQ-ACK multiplexing on PUSCH.

BetaOffsetsCrossPri information element

```
-- ASN1START
-- TAG-BETAOFFSETSCROSSPRI-START

BetaOffsetsCrossPri-r17 ::= SEQUENCE (SIZE(3)) OF INTEGER(0..31)

-- TAG-BETAOFFSETSCROSSPRI-STOP
-- ASN1STOP
```

– *BH-LogicalChannelIdentity*

The IE *BH-LogicalChannelIdentity* is used to identify a logical channel between an IAB-node and its parent IAB-node or IAB-donor-DU.

BH-LogicalChannelIdentity information element

```
-- ASN1START
-- TAG-BHLOGICALCHANNELIDENTITY-START

BH-LogicalChannelIdentity-r16 ::= CHOICE {
    bh-LogicalChannelIdentity-r16      LogicalChannelIdentity,
    bh-LogicalChannelIdentityExt-r16   BH-LogicalChannelIdentity-Ext-r16
}

-- TAG-BHLOGICALCHANNELIDENTITY-STOP
```

-- ASN1STOP

<i>BH-LogicalChannelIdentity</i> field descriptions
<i>bh-LogicalChannelIdentity</i> ID used for the MAC logical channel.
<i>bh-LogicalChannelIdentityExt</i> ID used for the MAC logical channel.

— *BH-LogicalChannelIdentity-Ext*

The IE *BH-LogicalChannelIdentity-Ext* is used to identify a logical channel between an IAB-node and its parent node.

BH-LogicalChannelIdentity-Ext information element

```
-- ASN1START
-- TAG-BHLOGICALCHANNELIDENTITYEXT-START

BH-LogicalChannelIdentity-Ext-r16 ::=  INTEGER (320.. maxLC-ID-Iab-r16)

-- TAG-BHLOGICALCHANNELIDENTITYEXT-STOP
-- ASN1STOP
```

— *BH-RLC-ChannelConfig*

The IE *BH-RLC-ChannelConfig* is used to configure an RLC entity, a corresponding logical channel in MAC for BH RLC channel between IAB-node and its parent node.

BH-RLC-ChannelConfig information element

```
-- ASN1START
-- TAG-BHRLCCHANNELCONFIG-START

BH-RLC-ChannelConfig-r16 ::=  SEQUENCE {
    bh-LogicalChannelIdentity-r16  BH-LogicalChannelIdentity-r16  OPTIONAL,  -- Cond LCH-SetupOnly
    bh-RLC-ChannelID-r16          BH-RLC-ChannelID-r16,
    reestablishRLC-r16            ENUMERATED {true}              OPTIONAL,  -- Need N
    rlc-Config-r16                RLC-Config                    OPTIONAL,  -- Cond LCH-Setup
    mac-LogicalChannelConfig-r16  LogicalChannelConfig           OPTIONAL,  -- Cond LCH-Setup
    ...
}

-- TAG-BHRLCCHANNELCONFIG-STOP
-- ASN1STOP
```

<i>BH-RLC-ChannelConfig</i> field descriptions
<i>bh-LogicalChannelIdentity</i> Indicates the logical channel id for BH RLC channel of the IAB-node.
<i>bh-RLC-ChannelID</i> Indicates the BH RLC channel in the link between IAB-MT of the IAB-node and IAB-DU of the parent IAB-node or IAB-donor-DU.
<i>reestablishRLC</i> Indicates that RLC should be re-established.
<i>rlc-Config</i> Determines the RLC mode (UM, AM) and provides corresponding parameters.

Conditional Presence	Explanation
<i>LCH-Setup</i>	This field is mandatory present upon creation of a new logical channel for a BH RLC channel. It is optionally present, Need M, otherwise.
<i>LCH-SetupOnly</i>	This field is mandatory present upon creation of a new logical channel for a BH RLC channel. It is absent, Need M otherwise.

—

BH-RLC-ChannelID

The IE *BH-RLC-ChannelID* is used to identify a BH RLC channel in the link between IAB-MT of the IAB-node and IAB-DU of the parent IAB-node or IAB-donor-DU.

BH-RLC-ChannelID information element

```

-- ASN1START
-- TAG-BHRLCCHANNELID-START

BH-RLC-ChannelID-r16 ::=  BIT STRING (SIZE (16))

-- TAG-BHRLCCHANNELID-STOP
-- ASN1STOP

```

—

BSR-Config

The IE *BSR-Config* is used to configure buffer status reporting.

BSR-Config information element

```

-- ASN1START
-- TAG-BSR-CONFIG-START

BSR-Config ::=
    periodicBSR-Timer          SEQUENCE {
                                ENUMERATED { sf1, sf5, sf10, sf16, sf20, sf32, sf40, sf64,
                                                sf80, sf128, sf160, sf320, sf640, sf1280, sf2560, infinity },
                                retxBSR-Timer          ENUMERATED { sf10, sf20, sf40, sf80, sf160, sf320, sf640, sf1280, sf2560,
                                                                    sf5120, sf10240, spare5, spare4, spare3, spare2, spare1},
                                logicalChannelSR-DelayTimer  ENUMERATED { sf20, sf40, sf64, sf128, sf512, sf1024, sf2560, spare1}
                                ...
                                OPTIONAL, -- Need R

```

```
}
-- TAG-BSR-CONFIG-STOP
-- ASN1STOP
```

BSR-Config field descriptions
logicalChannelSR-DelayTimer Value in number of subframes. Value <i>sf20</i> corresponds to 20 subframes, <i>sf40</i> corresponds to 40 subframes, and so on.
periodicBSR-Timer Value in number of subframes. Value <i>sf1</i> corresponds to 1 subframe, value <i>sf5</i> corresponds to 5 subframes and so on.
retxBSR-Timer Value in number of subframes. Value <i>sf10</i> corresponds to 10 subframes, value <i>sf20</i> corresponds to 20 subframes and so on.

— *BWP*

The IE *BWP* is used to configure generic parameters of a bandwidth part as defined in TS 38.211 [16], clause 4.5, and TS 38.213 [13], clause 12.

For each serving cell the network configures at least an initial downlink bandwidth part and one (if the serving cell is configured with an uplink) or two (if using supplementary uplink (SUL)) initial uplink bandwidth parts. Furthermore, the network may configure additional uplink and downlink bandwidth parts for a serving cell.

The uplink and downlink bandwidth part configurations are divided into common and dedicated parameters.

BWP information element

```
-- ASN1START
-- TAG-BWP-START

BWP ::=
  locationAndBandwidth
  subcarrierSpacing
  cyclicPrefix
}

SEQUENCE {
  INTEGER (0..37949),
  SubcarrierSpacing,
  ENUMERATED { extended }
}

OPTIONAL -- Need R

-- TAG-BWP-STOP
-- ASN1STOP
```

BWP field descriptions
cyclicPrefix Indicates whether to use the extended cyclic prefix for this bandwidth part. If not set, the UE uses the normal cyclic prefix. Normal CP is supported for all subcarrier spacings and slot formats. Extended CP is supported only for 60 kHz subcarrier spacing. (see TS 38.211 [16], clause 4.2). Except for SUL, the network ensures the same cyclic prefix length is used in active DL BWP and active UL BWP within a serving cell. If RedCap-specific initial DL BWP is configured, the network ensures the same cyclic prefix length is configured for initial DL BWP and RedCap-specific initial DL BWP.
locationAndBandwidth Frequency domain location and bandwidth of this bandwidth part. The value of the field shall be interpreted as resource indicator value (RIV) as defined TS 38.214 [19] with assumptions as described in TS 38.213 [13], clause 12, i.e. setting $N_{\text{BWP}}^{\text{size}}=275$. The first PRB is a PRB determined by <i>subcarrierSpacing</i> of this BWP and <i>offsetToCarrier</i> (configured in <i>SCS-SpecificCarrier</i> contained within <i>FrequencyInfoDL</i> / <i>FrequencyInfoUL</i> / <i>FrequencyInfoUL-SIB</i> / <i>FrequencyInfoDL-SIB</i> within <i>ServingCellConfigCommon</i> / <i>ServingCellConfigCommonSIB</i>) corresponding to this subcarrier spacing. In case of TDD, a BWP-pair (UL BWP and DL BWP with the same <i>bwp-Id</i>) must have the same center frequency (see TS 38.213 [13], clause 12)
subcarrierSpacing Subcarrier spacing to be used in this BWP for all channels and reference signals unless explicitly configured elsewhere. Corresponds to subcarrier spacing according to TS 38.211 [16], table 4.2-1. The value <i>kHz15</i> corresponds to $\mu=0$, value <i>kHz30</i> corresponds to $\mu=1$, and so on. Only the following values are applicable depending on the used frequency: FR1: 15, 30, or 60 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz For the initial DL BWP and operation in licensed spectrum this field has the same value as the field <i>subCarrierSpacingCommon</i> in <i>MIB</i> of the same serving cell. Except for SUL, the network ensures the same subcarrier spacing is used in active DL BWP and active UL BWP within a serving cell. For the initial DL BWP and operation with shared spectrum channel access, the value of this field corresponds to the subcarrier spacing of the SSB associated to the initial DL BWP. If RedCap-specific initial DL BWP is configured, the network ensures the same subcarrier spacing is configured for initial DL BWP and RedCap-specific initial DL BWP.

— **BWP-Downlink**

The IE *BWP-Downlink* is used to configure an additional downlink bandwidth part (not for the initial BWP).

BWP-Downlink information element

```
-- ASN1START
-- TAG-BWP-DOWNLINK-START

BWP-Downlink ::=
    bwp-Id
    bwp-Common
    bwp-Dedicated
    ...
}

SEQUENCE {
    BWP-Id,
    BWP-DownlinkCommon
    BWP-DownlinkDedicated
}

OPTIONAL, -- Cond SetupOtherBWP
OPTIONAL, -- Cond SetupOtherBWP

-- TAG-BWP-DOWNLINK-STOP
-- ASN1STOP
```

BWP-Downlink field descriptions	
bwpld An identifier for this bandwidth part. Other parts of the RRC configuration use the <i>BWP-Id</i> to associate themselves with a particular bandwidth part. The network configures the BWPs with consecutive IDs from 1. The Network does not include the value 0, since value 0 is reserved for the initial BWP.	

Conditional Presence	Explanation
SetupOtherBWP	The field is mandatory present upon configuration of a new DL BWP. The field is optionally present, Need M, otherwise.

– *BWP-DownlinkCommon*

The IE *BWP-DownlinkCommon* is used to configure the common parameters of a downlink BWP. They are "cell specific" and the network ensures the necessary alignment with corresponding parameters of other UEs. The common parameters of the initial bandwidth part of the PCell are also provided via system information. For all other serving cells, the network provides the common parameters via dedicated signalling.

BWP-DownlinkCommon information element

```
-- ASN1START
-- TAG-BWP-DOWNLINKCOMMON-START

BWP-DownlinkCommon ::=
    genericParameters
    pdcch-ConfigCommon
    pdsch-ConfigCommon
    ...
}

SEQUENCE {
    BWP,
    SetupRelease { PDCCH-ConfigCommon } OPTIONAL, -- Need M
    SetupRelease { PDSCH-ConfigCommon } OPTIONAL, -- Need M
}

-- TAG-BWP-DOWNLINKCOMMON-STOP
-- ASN1STOP
```

BWP-DownlinkCommon field descriptions	
pdccch-ConfigCommon Cell specific parameters for the PDCCH of this BWP. This field is absent for a dormant BWP.	
pdsch-ConfigCommon Cell specific parameters for the PDSCH of this BWP.	

– *BWP-DownlinkDedicated*

The IE *BWP-DownlinkDedicated* is used to configure the dedicated (UE specific) parameters of a downlink BWP.

BWP-DownlinkDedicated information element

```
-- ASN1START
```

-- TAG-BWP-DOWNLINKDEDICATED-START

```

BWP-DownlinkDedicated ::= SEQUENCE {
    pdccch-Config          SetupRelease { PDCCH-Config }          OPTIONAL, -- Need M
    pdsch-Config          SetupRelease { PDSCH-Config }          OPTIONAL, -- Need M
    sps-Config            SetupRelease { SPS-Config }             OPTIONAL, -- Need M
    radioLinkMonitoringConfig SetupRelease { RadioLinkMonitoringConfig } OPTIONAL, -- Need M
    ...,
    [[
        sps-ConfigToAddModList-r16          SPS-ConfigToAddModList-r16          OPTIONAL, -- Need N
        sps-ConfigToReleaseList-r16         SPS-ConfigToReleaseList-r16         OPTIONAL, -- Need N
        sps-ConfigDeactivationStateList-r16 SPS-ConfigDeactivationStateList-r16 OPTIONAL, -- Need R
        beamFailureRecoverySCellConfig-r16 SetupRelease { BeamFailureRecoveryRSConfig-r16 } OPTIONAL, -- Cond SCellOnly
        sl-PDCCH-Config-r16                 SetupRelease { PDCCH-Config }          OPTIONAL, -- Need M
        sl-V2X-PDCCH-Config-r16             SetupRelease { PDCCH-Config }          OPTIONAL, -- Need M
    ]],
    [[
        preConfigGapStatus-r17              BIT STRING (SIZE (maxNrofGapId-r17))    OPTIONAL, -- Cond PreConfigMG
        beamFailureRecoverySpCellConfig-r17 SetupRelease { BeamFailureRecoveryRSConfig-r16 } OPTIONAL, -- Cond SpCellOnly
        harq-FeedbackEnablingforSPSActive-r17 BOOLEAN                               OPTIONAL, -- Need R
        cfr-ConfigMulticast-r17             SetupRelease { CFR-ConfigMulticast-r17 } OPTIONAL, -- Need M
        dl-PPW-PreConfigToAddModList-r17    DL-PPW-PreConfigToAddModList-r17        OPTIONAL, -- Need N
        dl-PPW-PreConfigToReleaseList-r17   DL-PPW-PreConfigToReleaseList-r17       OPTIONAL, -- Need N
        nonCellDefiningSSB-r17             NonCellDefiningSSB-r17                 OPTIONAL, -- Need R
        servingCellM0-r17                  MeasObjectId                          OPTIONAL -- Cond MeasObject-NCD-SSB
    ]],
    [[
        tci-InDCI-r18                      SetupRelease {TCI-InDCI-r18}              OPTIONAL, -- Need M
    ]]
}

SPS-ConfigToAddModList-r16 ::= SEQUENCE (SIZE (1..maxNrofSPS-Config-r16)) OF SPS-Config
SPS-ConfigToReleaseList-r16 ::= SEQUENCE (SIZE (1..maxNrofSPS-Config-r16)) OF SPS-ConfigIndex-r16
SPS-ConfigDeactivationState-r16 ::= SEQUENCE (SIZE (1..maxNrofSPS-Config-r16)) OF SPS-ConfigIndex-r16
SPS-ConfigDeactivationStateList-r16 ::= SEQUENCE (SIZE (1..maxNrofSPS-DeactivationState)) OF SPS-ConfigDeactivationState-r16
DL-PPW-PreConfigToAddModList-r17 ::= SEQUENCE (SIZE (1..maxNrofPPW-Config-r17)) OF DL-PPW-PreConfig-r17
DL-PPW-PreConfigToReleaseList-r17 ::= SEQUENCE (SIZE (1..maxNrofPPW-Config-r17)) OF DL-PPW-ID-r17

TCI-InDCI-r18 ::= SEQUENCE {
    tci-SelectionPresentInDCI-r18      ENUMERATED { enabled }          OPTIONAL, -- Need R
    applyIndicatedTCI-StateDCI-1-0-r18 ENUMERATED {first, second, both, spare1} OPTIONAL, -- Need R
}

-- TAG-BWP-DOWNLINKDEDICATED-STOP
-- ASN1STOP

```


<i>BWP-DownlinkDedicated</i> field descriptions
<i>beamFailureRecoverySCellConfig</i> Configuration of candidate RS for beam failure recovery on SCells.
<i>beamFailureRecoverySpCellConfig</i> Configuration of candidate RS for beam failure recovery on the SpCell. This field can only be configured when <i>beamFailure-r17</i> is configured in <i>RadioLinkMonitoringConfig</i> .
<i>cfr-ConfigMulticast</i> UE specific common frequency resource configuration for MBS multicast for one dedicated BWP. This field can be configured within at most one serving cell.
<i>dl-PPW-PreConfigToAddModList</i> Indicates a list of DL-PRS processing window configurations to be added or modified for the dedicated DL BWP.
<i>dl-PPW-PreConfigToReleaseList</i> Indicates a list of DL-PRS processing window configurations to be released for the dedicated DL BWP.
<i>harq-FeedbackEnablingforSPSActive</i> If enabled, UE reports ACK/NACK for the first SPS PDSCH after activation, regardless of if HARQ feedback is enabled or disabled for the HARQ process corresponding to the first SPS PDSCH after activation. Otherwise, UE follows configuration of HARQ feedback enabled/disabled for the HARQ process corresponding to the first SPS PDSCH after activation.
<i>nonCellDefiningSSB</i> If configured, the UE operating in this BWP uses this SSB for the purposes for which it would otherwise have used the CD-SSB of the serving cell (e.g. obtaining sync, measurements, RLM, BFD, beam management). Furthermore, other parts of the BWP configuration that refer to an SSB (e.g. the "SSB" configured in the <i>QCL-Info</i> IE; the "ssb-Index" configured in the <i>RadioLinkMonitoringRS</i> ; <i>CFRA-SSB-Resource</i> ; <i>PRACH-ResourceDedicatedBFR</i>) refer implicitly to this NCD-SSB. The NCD-SSB has the same values for the properties (e.g., <i>ssb-PositionsInBurst</i> , <i>PCI</i> , <i>ssb-PBCH-BlockPower</i>) of the corresponding CD-SSB apart from the values of the properties configured in the <i>NonCellDefiningSSB-r17</i> IE. In the MIB associated with this NCD-SSB, the <i>systemFrameNumber</i> field indicates the frame boundary and frame number of the NCD-SSB. The <i>subCarrierSpacingCommon</i> and <i>dmrs-TypeA-Position</i> field in the MIBs associated with CD-SSB and NCD-SSB in the same cell are configured with the same values, respectively.
<i>pdcch-Config</i> UE specific PDCCH configuration for one BWP.
<i>pdsch-Config</i> UE specific PDSCH configuration for one BWP.
<i>preConfigGapStatus</i> Indicates whether the pre-configured measurement gaps (i.e. the gaps configured with <i>preConfigInd</i>) are activated or deactivated upon the switch to this BWP. If this field is configured, the UE shall apply network-controlled mechanism for activation and deactivation of the pre-configured measurement gaps, otherwise the UE shall apply the autonomous activation/deactivation mechanism, as specified in TS 38.133 [14]. The first/leftmost bit corresponds to the measurement gap with gap ID 1, the second bit corresponds to measurement gap with gap ID 2, and so on. Value 0 indicates that the corresponding pre-configured measurement gap is deactivated while value 1 indicates that the corresponding pre-configured measurement gap is activated. The UE shall ignore the bit if the corresponding measurement gap is not a pre-configured measurement gap.
<i>servingCellMO</i> <i>measObjectID</i> of the <i>MeasObjectNR</i> in <i>MeasConfig</i> which is associated to the serving cell. For this <i>MeasObjectNR</i> , the following relationship applies between this <i>MeasObjectNR</i> and <i>nonCellDefiningSSB</i> in <i>BWP-DownlinkDedicated</i> of the associated downlink BWP: if <i>ssbFrequency</i> is configured, its value is the same as the <i>absoluteFrequencySSB</i> in the <i>nonCellDefiningSSB</i> . If the field is present in a downlink BWP and the BWP is activated, the UE uses this measurement object for serving cell measurements (e.g., including those used in measurement report triggering events), otherwise, the UE uses the <i>servingCellMO</i> in <i>ServingCellConfig</i> IE.
<i>sps-Config</i> UE specific SPS (Semi-Persistent Scheduling) configuration for one BWP. Except for reconfiguration with sync, the NW does not reconfigure <i>sps-Config</i> when there is an active configured downlink assignment (see TS 38.321 [3]). However, the NW may release the <i>sps-Config</i> at any time. Network can only configure SPS in one BWP using either this field or <i>sps-ConfigToAddModList</i> . Network does not configure SPS in one BWP using this field and <i>sps-ConfigMulticastToAddModList-r17</i> simultaneously.
<i>sps-ConfigDeactivationStateList</i> Indicates a list of the deactivation states in which each state can be mapped to a single or multiple SPS configurations to be deactivated, see clause 10.2 in TS 38.213 [13]. If a state is mapped to multiple SPS configurations, each of these SPS configurations is configured with the same <i>harq-CodebookID</i> .

sps-ConfigToAddModList Indicates a list of one or more DL SPS configurations to be added or modified in one BWP. Except for reconfiguration with sync, the NW does not reconfigure a SPS configuration when it is active (see TS 38.321 [3]).
sps-ConfigToReleaseList Indicates a list of one or more DL SPS configurations to be released. The NW may release a SPS configuration at any time.
radioLinkMonitoringConfig UE specific configuration of radio link monitoring for detecting cell- and beam radio link failure occasions. The maximum number of failure detection resources should be limited up to 8 for both cell and beam radio link failure detection. For SCells, only periodic 1-port CSI-RS can be configured in IE <i>RadioLinkMonitoringConfig</i> .
sl-PDCCH-Config Indicates the UE specific PDCCH configurations for receiving the SL grants (via SL-RNTI or SL-CS-RNTI) for NR sidelink communication/discovery.
sl-V2X-PDCCH-Config Indicates the UE specific PDCCH configurations for receiving SL grants (i.e. sidelink SPS) for V2X sidelink communication.

TCI-InDCI field descriptions
applyIndicatedTCI-StateDCI-1-0 This field indicates, for PDSCH reception scheduled or activated by DCI format 1_0, if the UE applies the first, the second or both "indicated" DL only TCI or joint TCI as specified in TS 38.214 [19], clause 5.1.5.
tci-SelectionPresentInDCI Used as specified in TS 38.214 [19] clause 5.1.5 and TS 38.212 [17] clauses 7.3.1.2.2 and 7.3.1.2.3.

Conditional Presence	Explanation
MeasObject-NCD-SSB	This field is optionally present, Need S, if <i>nonCellDefiningSSB</i> is configured in this DL BWP. It is absent otherwise.
PreConfigMG	The field is optionally present, Need R, if there is at least one per UE gap configured with <i>preConfigInd</i> or there is at least one per FR gap of the same FR which the BWP belongs to and configured with <i>preConfigInd</i> . It is absent, Need R, otherwise.
ScellOnly	The field is optionally present, Need M, in the <i>BWP-DownlinkDedicated</i> of an Scell. It is absent otherwise.
SpCellOnly	The field is optionally present, Need M, in the <i>BWP-DownlinkDedicated</i> of an Spcell. It is absent otherwise.

—

BWP-Id

The IE *BWP-Id* is used to refer to Bandwidth Parts (BWP). The initial BWP (including RedCap-specific initial BWP, if configured) is referred to by *BWP-Id* 0. The other BWPs are referred to by *BWP-Id* 1 to *maxNrofBWPs*.

BWP-Id information element

-- ASN1START
-- TAG-BWP-ID-START

BWP-Id ::= INTEGER (0..maxNrofBWPs)

-- TAG-BWP-ID-STOP
-- ASN1STOP

— *BWP-Uplink*

The IE *BWP-Uplink* is used to configure an additional uplink bandwidth part (not for the initial BWP).

***BWP-Uplink* information element**

```
-- ASN1START
-- TAG-BWP-UPLINK-START

BWP-Uplink ::=
    bwp-Id
    bwp-Common
    bwp-Dedicated
    ...
}

SEQUENCE {
    BWP-Id,
    BWP-UplinkCommon
    BWP-UplinkDedicated
    OPTIONAL, -- Cond SetupOtherBWP
    OPTIONAL, -- Cond SetupOtherBWP
}

-- TAG-BWP-UPLINK-STOP
-- ASN1STOP
```

<i>BWP-Uplink</i> field descriptions	
<i>bwp-Id</i>	An identifier for this bandwidth part. Other parts of the RRC configuration use the <i>BWP-Id</i> to associate themselves with a particular bandwidth part. The network configures the BWPs with consecutive IDs from 1. The Network does not include the value 0, since value 0 is reserved for the initial BWP.

Conditional Presence	Explanation
<i>SetupOtherBWP</i>	The field is mandatory present upon configuration of a new UL BWP. The field is optionally present, Need M, otherwise.

— *BWP-UplinkCommon*

The IE *BWP-UplinkCommon* is used to configure the common parameters of an uplink BWP. They are "cell specific" and the network ensures the necessary alignment with corresponding parameters of other UEs. The common parameters of the initial bandwidth part of the PCell, excluding *additionalRACH-perPCI-ToAddModList* and *additionalRACH-perPCI-ToReleaseList*, are also provided via system information. For all other serving cells, the network provides the common parameters via dedicated signalling.

***BWP-UplinkCommon* information element**

```
-- ASN1START
-- TAG-BWP-UPLINKCOMMON-START

BWP-UplinkCommon ::=
    genericParameters
    rach-ConfigCommon
    BWP,
    SetupRelease { RACH-ConfigCommon }
    OPTIONAL, -- Need M
```

```

pusch-ConfigCommon      SetupRelease { PUSCH-ConfigCommon }      OPTIONAL, -- Need M
pucch-ConfigCommon      SetupRelease { PUCCH-ConfigCommon }      OPTIONAL, -- Need M
...
[[
rach-ConfigCommonIAB-r16      SetupRelease { RACH-ConfigCommon }      OPTIONAL, -- Need M
useInterlacePUCCH-PUSCH-r16  ENUMERATED {enabled}          OPTIONAL, -- Need R
msgA-ConfigCommon-r16      SetupRelease { MsgA-ConfigCommon-r16 }    OPTIONAL, -- Cond SpCellOnly2
]],
[[
enableRA-PrioritizationForSlicing-r17 BOOLEAN                      OPTIONAL, -- Cond RA-PrioSliceAI
additionalRACH-ConfigList-r17 SetupRelease { AdditionalRACH-ConfigList-r17 } OPTIONAL, -- Cond SpCellOnly2
rsrp-ThresholdMsg3-r17      RSRP-Range                          OPTIONAL, -- Need R
numberOfMsg3-RepetitionsList-r17 SEQUENCE (SIZE (4)) OF NumberOfMsg3-Repetitions-r17 OPTIONAL, -- Cond Msg3Rep
mcs-Msg3-Repetitions-r17    SEQUENCE (SIZE (8)) OF INTEGER (0..31) OPTIONAL, -- Cond Msg3Rep
]],
[[
additionalRACH-perPCI-ToAddModList-r18 SEQUENCE (SIZE (1.. maxNrofAdditionalPRACHConfigs-r18)) OF RACH-ConfigTwoTA-r18
                                                                    OPTIONAL, -- Cond 2TA-Only
additionalRACH-perPCI-ToReleaseList-r18 SEQUENCE (SIZE (1.. maxNrofAdditionalPRACHConfigs-r18)) OF AdditionalPCIIndex-r17
                                                                    OPTIONAL, -- Need N
rsrp-ThresholdMsg1-RepetitionNum2-r18 RSRP-Range                OPTIONAL, -- Need R
rsrp-ThresholdMsg1-RepetitionNum4-r18 RSRP-Range                OPTIONAL, -- Need R
rsrp-ThresholdMsg1-RepetitionNum8-r18 RSRP-Range                OPTIONAL, -- Need R
preambleTransMax-Msg1-Repetition-r18  ENUMERATED {n1, n2, n4, n6, n8, n10, n20, n50, n100, n200} OPTIONAL, -- Cond Msg1Rep1
]]
}

AdditionalRACH-ConfigList-r17 ::= SEQUENCE (SIZE(1..maxAdditionalRACH-r17)) OF AdditionalRACH-Config-r17

AdditionalRACH-Config-r17 ::= SEQUENCE {
    rach-ConfigCommon-r17      RACH-ConfigCommon                  OPTIONAL, -- Need R
    msgA-ConfigCommon-r17     MsgA-ConfigCommon-r16              OPTIONAL, -- Need R
    ...
}

NumberOfMsg3-Repetitions-r17 ::= ENUMERATED {n1, n2, n3, n4, n7, n8, n12, n16}

-- TAG-BWP-UPLINKCOMMON-STOP
-- ASN1STOP

```

<i>BWP-UplinkCommon</i> field descriptions
<i>additionalRACH-ConfigList</i> List of feature or feature combination-specific RACH configurations, i.e. the RACH configurations configured in addition to the one configured by <i>rach-ConfigCommon</i> and by <i>msgA-ConfigCommon</i> . The network associates all possible preambles of an additional RACH configuration to one or more feature(s) or feature combination(s). The network does not configure this list to have more than 16 entries. If both <i>rach-ConfigCommon</i> and <i>msgA-ConfigCommon</i> are configured for a specific <i>FeatureCombination</i> , the network always provides them in the same <i>additionalRACH-Config</i> .
<i>additionalRACH-perPCI-ToAddModList</i>, <i>additionalRACH-perPCI-ToReleaseList</i> List of RACH configurations for the additional PCIs. The RACH configuration for an additional PCI is applied for Random Access procedure initiated by PDCCH order towards to the additional PCI, as specified in TS 38.321 clause 5.1.1b. This list includes the same number of elements like <i>additionalPCI-ToAddModList</i> for this serving cell and the <i>n</i> -th element of this list is for the PCI in the <i>n</i> -th element of <i>additionalPCI-ToAddModList</i> . Either the network does not configure any RACH configuration for any additional PCI, or the network configures a RACH configuration for each additional PCI. When the network releases an additional PCI of a serving cell, the network also explicitly releases the associated random access configuration in every UL BWP of the serving cell. This configuration may be different for different UEs.
<i>enableRA-PrioritizationForSlicing</i> Indicates whether or not the <i>ra-PrioritizationForSlicing/ra-PrioritizationForSlicingTwoStep</i> should override the <i>ra-PrioritizationForAccessIdentity</i> . The field is applicable only when the UE is configured by upper layers with both NSAG and Access Identity 1 or 2. If value <i>TRUE</i> is configured, the UE should only apply the <i>ra-PrioritizationForSlicing/ra-PrioritizationForSlicingTwoStep</i> . If value <i>FALSE</i> is configured, the UE should only apply <i>ra-PrioritizationForAccessIdentity</i> . If the field is absent, whether to use <i>ra-PrioritizationForSlicing/ra-PrioritizationForSlicingTwoStep</i> or <i>ra-PrioritizationForAccessIdentity</i> is up to UE implementation.
<i>mcs-Msg3-Repetitions</i> Configuration of eight candidate MCS indexes for PUSCH transmission scheduled by RAR UL grant and DCI format 0_0 with CRC scrambled by TC-RNTI. Only the first 4 configured or default MCS indexes are used for PUSCH transmission scheduled by RAR UL grant. This field is only applicable when the UE selects Random Access resources indicating Msg3 repetition in this BWP. If this field is absent when the set(s) of Random Access resources with MSG3 repetition indication are configured in the <i>BWP-UplinkCommon</i> , the UE shall apply the values {0, 1, 2, 3, 4, 5, 6, 7} (see TS 38.214 [19], clause 6.1.4).
<i>msgA-ConfigCommon</i> Configuration of the cell specific PRACH and PUSCH resource parameters for transmission of MsgA in 2-step random access type procedure. The NW can configure <i>msgA-ConfigCommon</i> only for UL BWPs if the linked DL BWPs (same bwp-Id as UL-BWP) are the initial DL BWPs or DL BWPs containing the SSB associated to the initial DL BWP or DL BWPs associated with <i>nonCellDefiningSSB</i> or, for (e)RedCap UEs, the RedCap-specific initial downlink BWP. The network configures <i>msgA-ConfigCommon</i> (without suffix) and/or <i>msgA-ConfigCommon-r17</i> , whenever it configures contention free 2-step random access, the UE then applies the corresponding configuration depending on the RACH resource set selected upon RACH initialization, as specified in TS 38.321 [3].
<i>numberOfMsg3-RepetitionsList</i> The number of repetitions for PUSCH transmission scheduled by RAR UL grant and DCI format 0_0 with CRC scrambled by TC-RNTI. This field is only applicable when the UE selects Random Access resources indicating Msg3 repetition in this BWP. If this field is absent when the set(s) of Random Access resources with MSG3 repetition indication are configured in the <i>BWP-UplinkCommon</i> , the UE shall apply the values {n1, n2, n3, n4} (see TS 38.214 [19], clause 6.1.2.1).
<i>preambleTransMax-Msg1-Repetition</i> Max number of transmissions of MSG1 repetitions number (2, 4 and 8) performed before switching to higher repetition number (see TS 38.321 [3], clauses 5.1.1). This field is only applicable when more than one repetition numbers are configured in shared RO. If the field is absent, switching from lower repetition number to higher repetition number is not allowed.
<i>pucch-ConfigCommon</i> Cell specific parameters for the PUCCH of this BWP.
<i>pusch-ConfigCommon</i> Cell specific parameters for the PUSCH of this BWP.

<i>rach-ConfigCommon</i>
Configuration of cell specific random access parameters which the UE uses for contention based and contention free random access as well as for contention based beam failure recovery in this BWP. The NW configures SSB-based RA (and hence <i>RACH-ConfigCommon</i>) only for UL BWPs if the linked DL BWPs (same <i>bwp-Id</i> as UL-BWP) are the initial DL BWPs or DL BWPs containing the SSB associated to the initial DL BWP or DL BWPs associated with <i>nonCellDefiningSSB</i> or, for (e)RedCap UEs, the RedCap-specific initial downlink BWP. The network configures <i>rach-ConfigCommon</i> (without suffix) and/or <i>rach-ConfigCommon-r17</i> , whenever it configures contention free 4-step random access (e.g. for reconfiguration with sync or for beam failure recovery or PDCCH order), the UE then applies the corresponding configuration depending on the RACH resource set selected upon RACH initialization, as specified in TS 38.321 [3]. For RedCap-specific initial uplink BWP, <i>rach-ConfigCommon</i> is always configured when <i>msgA-ConfigCommon</i> is configured in this BWP.
<i>rach-ConfigCommonIAB</i>
Configuration of cell specific random access parameters for the IAB-MT. The IAB specific IAB RACH configuration is used by IAB-MT, if configured.
<i>rsrp-ThresholdMsg1-RepetitionNum2</i>, <i>rsrp-ThresholdMsg1-RepetitionNum4</i>, <i>rsrp-ThresholdMsg1-RepetitionNum8</i>
Threshold used by the UE for determining whether to select resources indicating Msg1 repetition number 2, 4 or 8 in this BWP, as specified in TS 38.321 [3]. The value applies to all the BWPs and all RACH configurations. For a given MSG1 repetition number, this corresponding field is mandatory if both set(s) of Random Access resources with MSG1 repetition indication associated with this MSG1 repetition number and set(s) of Random Access resources without MSG1 repetition indication are configured in the BWP, or if the set(s) of Random Access resources with MSG1 repetition indication associated with this MSG1 repetition number and set(s) of Random Access resources with MSG1 repetition indication associated with a lower repetition number are configured in the BWP. It is absent otherwise.
<i>rsrp-ThresholdMsg3</i>
Threshold used by the UE for determining whether to select resources indicating Msg3 repetition in this BWP, as specified in TS 38.321 [3]. The field is mandatory if both set(s) of Random Access resources with MSG3 repetition indication and set(s) of Random Access resources without MSG3 repetition indication are configured in the BWP. It is absent otherwise.
<i>useInterlacePUCCH-PUSCH</i>
If the field is present, the UE uses uplink frequency domain resource allocation Type 2 for cell-specific PUSCH, e.g., PUSCH scheduled by RAR UL grant (see TS 38.213 [13] clause 8.3 and TS 38.214 [19], clause 6.1.2.2) and uses interlaced PUCCH Format 0 and 1 for cell-specific PUCCH (see TS 38.213 [13], clause 9.2.1).

Conditional Presence	Explanation
<i>Msg1Rep1</i>	This field is optionally present, Need R, if the set(s) of Random Access resources with MSG1 repetition indication are configured in the <i>BWP-UplinkCommon</i> . It is absent otherwise.
<i>Msg3Rep</i>	This field is optionally present, Need S, if the set(s) of Random Access resources with MSG3 repetition indication are configured in the <i>BWP-UplinkCommon</i> . It is absent otherwise.
<i>RA-PrioSliceAI</i>	The field is optionally present in <i>SIB1</i> , Need R, if both parameters <i>ra-PrioritizationForAccessIdentity</i> and the <i>ra-PrioritizationForSlicing/ra-PrioritizationForSlicingTwoStep</i> are present in <i>SIB1</i> . It is absent otherwise.
<i>SpCellOnly2</i>	The field is optionally present, Need M, in the <i>BWP-UplinkCommon</i> of an SpCell. It is absent otherwise.
<i>2TA-Only</i>	The field is optionally present, Need N in the <i>BWP-UplinkCommon</i> if <i>additionalPCI-ToAddModList</i> is present in <i>ServingCellConfig</i> and if <i>tag2</i> is present in <i>ServingCellConfig</i> . It is absent otherwise.

– *BWP-UplinkDedicated*

The IE *BWP-UplinkDedicated* is used to configure the dedicated (UE specific) parameters of an uplink BWP.

BWP-UplinkDedicated information element

```
-- ASN1START
-- TAG-BWP-UPLINKDEDICATED-START
```

```

BWP-UplinkDedicated ::=
    pucch-Config          SetupRelease { PUCCH-Config }          OPTIONAL, -- Need M
    pusched-Config        SetupRelease { PUSCH-Config }          OPTIONAL, -- Need M
    configuredGrantConfig SetupRelease { ConfiguredGrantConfig } OPTIONAL, -- Need M
    srs-Config            SetupRelease { SRS-Config }            OPTIONAL, -- Need M
    beamFailureRecoveryConfig SetupRelease { BeamFailureRecoveryConfig } OPTIONAL, -- Cond SpCellOnly
    ...,
    [[
        sl-PUCCH-Config-r16 SetupRelease { PUCCH-Config }          OPTIONAL, -- Need M
        cp-ExtensionC2-r16   INTEGER (1..28)                      OPTIONAL, -- Need R
        cp-ExtensionC3-r16   INTEGER (1..28)                      OPTIONAL, -- Need R
        useInterlacePUCCH-PUSCH-r16 ENUMERATED {enabled}          OPTIONAL, -- Need R
        pucch-ConfigurationList-r16 SetupRelease { PUCCH-ConfigurationList-r16 } OPTIONAL, -- Need M
        lbt-FailureRecoveryConfig-r16 SetupRelease { LBT-FailureRecoveryConfig-r16 } OPTIONAL, -- Need M
        configuredGrantConfigToAddModList-r16 ConfiguredGrantConfigToAddModList-r16 OPTIONAL, -- Need N
        configuredGrantConfigToReleaseList-r16 ConfiguredGrantConfigToReleaseList-r16 OPTIONAL, -- Need N
        configuredGrantConfigType2DeactivationStateList-r16 ConfiguredGrantConfigType2DeactivationStateList-r16 OPTIONAL, -- Need R
    ]],
    [[
        ul-TCI-StateList-r17 CHOICE {
            explicitlist SEQUENCE {
                ul-TCI-ToAddModList-r17 SEQUENCE (SIZE (1..maxUL-TCI-r17)) OF TCI-UL-State-r17 OPTIONAL, -- Need N
                ul-TCI-ToReleaseList-r17 SEQUENCE (SIZE (1..maxUL-TCI-r17)) OF TCI-UL-StateId-r17 OPTIONAL, -- Need N
            },
            unifiedTCI-StateRef-r17 ServingCellAndBWP-Id-r17
        }
        ul-powerControl-r17 Uplink-powerControlId-r17 OPTIONAL, -- Need R
        pucch-ConfigurationListMulticast1-r17 SetupRelease { PUCCH-ConfigurationList-r16 } OPTIONAL, -- Cond NoTCI-PC
        pucch-ConfigurationListMulticast2-r17 SetupRelease { PUCCH-ConfigurationList-r16 } OPTIONAL, -- Need M
    ]],
    [[
        pucch-ConfigMulticast1-r17 SetupRelease { PUCCH-Config }          OPTIONAL, -- Need M
        pucch-ConfigMulticast2-r17 SetupRelease { PUCCH-Config }          OPTIONAL, -- Need M
    ]],
    [[
        pathlossReferenceRSToAddModList-r17 SEQUENCE (SIZE (1..maxNrofPathlossReferenceRSs-r17)) OF PathlossReferenceRS-r17 OPTIONAL, -- Need N
        pathlossReferenceRSToReleaseList-r17 SEQUENCE (SIZE (1..maxNrofPathlossReferenceRSs-r17)) OF PathlossReferenceRS-Id-r17 OPTIONAL, -- Need N
    ]],
]
}

ConfiguredGrantConfigToAddModList-r16 ::= SEQUENCE (SIZE (1..maxNrofConfiguredGrantConfig-r16)) OF ConfiguredGrantConfig
ConfiguredGrantConfigToReleaseList-r16 ::= SEQUENCE (SIZE (1..maxNrofConfiguredGrantConfig-r16)) OF ConfiguredGrantConfigIndex-r16
ConfiguredGrantConfigType2DeactivationState-r16 ::= SEQUENCE (SIZE (1..maxNrofConfiguredGrantConfig-r16)) OF ConfiguredGrantConfigIndex-r16
ConfiguredGrantConfigType2DeactivationStateList-r16 ::=
    SEQUENCE (SIZE (1..maxNrofCG-Type2DeactivationState)) OF ConfiguredGrantConfigType2DeactivationState-r16

```

-- TAG-BWP-UPLINKDEDICATED-STOP

-- ASN1STOP

BWP-UplinkDedicated field descriptions
beamFailureRecoveryConfig Configuration of beam failure recovery. If <i>supplementaryUplink</i> is present, the field is present only in one of the uplink carriers, either UL or SUL.
configuredGrantConfig A Configured-Grant of <i>type1</i> or <i>type2</i> . It may be configured for UL or SUL but in case of <i>type1</i> not for both at a time. Except for reconfiguration with sync, the NW does not reconfigure <i>configuredGrantConfig</i> when there is an active configured uplink grant Type 2 (see TS 38.321 [3]). However, the NW may release the <i>configuredGrantConfig</i> at any time. Network can only configure configured grant in one BWP using either this field or <i>configuredGrantConfigToAddModList</i> .
configuredGrantConfigToAddModList Indicates a list of one or more configured grant configurations to be added or modified for one BWP. Except for reconfiguration with sync, the NW does not reconfigure a Type 2 configured grant configuration when it is active (see TS 38.321 [3]). The network configures multiple CG configurations for one BWP with either all configurations or no configuration configured with <i>cg-RetransmissionTimer-r16</i> .
configuredGrantConfigToReleaseList Indicates a list of one or more UL Configured Grant configurations to be released. The NW may release a configured grant configuration at any time.
configuredGrantConfigType2DeactivationStateList Indicates a list of the deactivation states in which each state can be mapped to a single or multiple Configured Grant type 2 configurations to be deactivated when the corresponding deactivation DCI is received, see clause 7.3.1 in TS 38.212 [17] and clause 10.2 in TS 38.213 [13].
cp-ExtensionC2, cp-ExtensionC3 Configures the cyclic prefix (CP) extension (see TS 38.211 [16], clause 5.3.1). For 15 kHz SCS, {1..28} are valid for both <i>cp-ExtensionC2</i> and <i>cp-ExtensionC3</i> . For 30 kHz SCS, {1..28} are valid for <i>cp-ExtensionC2</i> and {2..28} are valid for <i>cp-ExtensionC3</i> . For 60 kHz SCS, {2..28} are valid for <i>cp-ExtensionC2</i> and {3..28} are valid for <i>cp-ExtensionC3</i> .
lbt-FailureRecoveryConfig Configures parameters used for detection of consistent uplink LBT failures for operation with shared spectrum channel access, as specified in TS 38.321 [3].
pathlossReferenceRSToAddModList A list of Reference Signals (e.g. a CSI-RS config or a SS block) to be used for path loss estimation for PUSCH, PUCCH and SRS for unified TCI state operation. If <i>unifiedTCI-StateType</i> is not configured for the serving cell, no element in this list is configured.
pucch-Config PUCCH configuration for one BWP of the normal UL or SUL of a serving cell. If the UE is configured with SUL, the network configures PUCCH only on the BWPs of one of the uplinks (normal UL or SUL). The network configures <i>PUCCH-Config</i> at least on non-initial BWP(s) for SpCell and on all BWP(s) for PUCCH SCell. If supported by the UE, the network may configure at most one additional SCell of a cell group with <i>PUCCH-Config</i> (i.e. PUCCH SCell). If PUCCH cell switching is supported by the UE, the network may configure two TDD serving cells with <i>PUCCH-Config</i> within each PUCCH group. For supporting PUCCH cell switching in the PUCCH group with the SpCell, the TDD SpCell and one TDD SCell shall have <i>PUCCH-Config</i> on their normal UL. For supporting PUCCH cell switching in the PUCCH group with only SCells, two TDD SCells shall have <i>PUCCH-Config</i> on their normal UL. In (NG)EN-DC and NE-DC, the NW configures at most one serving cell per frequency range with PUCCH. In (NG)EN-DC and NE-DC, if two PUCCH groups are configured, the serving cells of the NR PUCCH group in FR2 use the same numerology. For NR-DC, the maximum number of PUCCH groups in each cell group is one, and only the same numerology is supported for the cell group with carriers only in FR2. The NW may configure PUCCH for a BWP when setting up the BWP. The network may also add/remove the <i>pucch-Config</i> in an <i>RRCReconfiguration</i> with <i>reconfigurationWithSync</i> (for SpCell or PUCCH SCell) or with SCell release and add (for PUCCH SCell) to move the PUCCH between the UL and SUL carrier of one serving cell. In other cases, only modifications of a previously configured <i>pucch-Config</i> are allowed. If one (S)UL BWP of a serving cell is configured with PUCCH, all other (S)UL BWPs must be configured with PUCCH, too.
pucch-ConfigurationList PUCCH configurations for two simultaneously constructed HARQ-ACK codebooks (see TS 38.213 [13], clause 9.1). Different PUCCH Resource IDs are configured in different <i>PUCCH-Config</i> within the <i>pucch-ConfigurationList</i> if configured.
pucch-ConfigurationListMulticast1 PUCCH configurations for two simultaneously constructed HARQ-ACK codebooks for MBS multicast (see TS 38.213, clause 9).
pucch-ConfigurationListMulticast2 PUCCH configurations for two simultaneously constructed NACK-only feedback for MBS multicast (see TS 38.213, clause 9).

<i>pusch-Config</i>
PUSCH configuration for one BWP of the normal UL or SUL of a serving cell. If the UE is configured with SUL and if it has a <i>PUSCH-Config</i> for both UL and SUL, an UL/SUL indicator field in DCI indicates which of the two to use. See TS 38.212 [17], clause 7.3.1.
<i>pucch-ConfigMulticast1</i>
PUCCH configuration for the HARQ-ACK codebook for MBS multicast when multicast feedback is not configured with a priority value (see TS 38.213 [13], clause 9). If the field is not configured, <i>pucch-Config</i> applies.
<i>pucch-ConfigMulticast2</i>
PUCCH configuration for the NACK-only feedback for MBS multicast when multicast feedback is not configured with a priority value (see TS 38.213 [13], clause 9). If the field is not configured, <i>pucch-Config</i> applies.
<i>sl-PUCCH-Config</i>
Indicates the UE specific PUCCH configurations used for the HARQ-ACK feedback reporting for NR sidelink communication.
<i>srs-Config</i>
Uplink sounding reference signal configuration.
<i>ul-powerControl</i>
Configures power control parameters for PUCCH, PUSCH and SRS when UE is configured with <i>unifiedTCI-StateType</i> for this serving cell. For each serving cell, <i>ul-powerControl</i> is either configured in all <i>BWP-UplinkDedicated</i> or it is not configured in any <i>BWP-UplinkDedicated</i> . When <i>unifiedTCI-StateRef</i> in the <i>BWP-UplinkDedicated</i> or in the <i>PDSCH-Config</i> if the <i>unifiedTCI-StateType</i> is set to <i>joint</i> , of a serving cell refers to another serving cell, <i>ul-powerControl</i> is either configured in all <i>BWP-UplinkDedicated</i> of these two serving cells or it is not configured in any <i>BWP-UplinkDedicated</i> of these two serving cells.
<i>ul-TCI-StateList</i>
Indicates the applicable UL TCI states for PUCCH, PUSCH and SRS.
<i>ul-TCI-ToAddModList</i>
Indicates a list of UL TCI states.
<i>unifiedTCI-StateRef</i>
Provides the serving cell and UL BWP where UL TCI states applicable to this UL BWP are defined. The value of <i>unifiedTCI-StateType</i> of current serving cell is the same in the serving cell indicated by <i>unifiedTCI-StateRef</i> .
<i>useInterlacePUCCH-PUSCH</i>
If the field is present, the UE uses uplink frequency domain resource allocation Type 2 for PUSCH (see TS 38.213 [13], clause 8.3 and TS 38.214 [19], clause 6.1.2.2) and uses interlaced PUCCH Format 0, 1, 2, and 3 for PUCCH (see TS 38.213 [13], clause 9.2.1).

Conditional Presence	Explanation
<i>NoTCI-PC</i>	The field is mandatory present if <i>unifiedTCI-StateType</i> is configured for this serving cell and <i>ul-powerControl</i> is not configured for any UL TCI state or joint TCI state of this serving cell. Otherwise it is absent, Need R
<i>SpCellOnly</i>	The field is optionally present, Need M, in the <i>BWP-UplinkDedicated</i> of an SpCell. It is absent otherwise.

NOTE 1: In case of *RRCReconfiguration* with *reconfigurationWithSync*, the UE performs a MAC reset, which involves releasing the PUCCH-CSI/SRS/SR configuration in accordance with clause 5.3.12 and TS 38.321 [3], clauses 5.12 and 5.2. Hence, for these parts of the dedicated radio resource configuration, delta signalling is not supported in the message when *reconfigurationWithSync* is included.

– *CandidateBeamRS*

The IE *CandidateBeamRS* includes candidate beams for beam failure recovery in case of beam failure detection. See also TS 38.321 [3], clause 5.17.

CandidateBeamRS information element

```
-- ASN1START
-- TAG-CANDIDATEBEAMRS-START

CandidateBeamRS-r16 ::=
  candidateBeamConfig-r16
    ssb-r16
    csi-RS-r16
  },
  servingCellId
}

SEQUENCE {
  CHOICE {
    SSB-Index,
    NZP-CSI-RS-ResourceId
  }
  ServCellIndex
}

OPTIONAL -- Need R

-- TAG-CANDIDATEBEAMRS-STOP
-- ASN1STOP
```

CandidateBeamRS field descriptions
candidateBeamConfig Indicates the resource (i.e. SSB or CSI-RS) defining this beam resource.
servingCellId If the field is absent, the RS belongs to the serving cell in which <i>BeamFailureRecoveryRSConfig</i> is configured.

— CandidateTCI-State

The IE *CandidateTCI-State* defines a TCI states configuration which associate one or more reference signal with a corresponding quasi-colocation (QCL) type.

CandidateTCI-State information element

```
-- ASN1START
-- TAG-CANDIDATETCI-STATE-START

CandidateTCI-State-r18 ::=
  tci-StateId-r18
  qcl-Type1-r18
  qcl-Type2-r18
  pathlossReferenceRS-Id-r18
  tag-Id-ptr-r18
  ul-PowerControl-r18
  ...
}

SEQUENCE {
  TCI-StateId,
  LTM-QCL-Info-r18,
  LTM-QCL-Info-r18
  PathlossReferenceRS-Id-r17
  ENUMERATED {n0,n1}
  Uplink-powerControlId-r17
}

OPTIONAL, -- Need R
OPTIONAL, -- Cond Joint
OPTIONAL, -- Cond 2TA
OPTIONAL, -- Cond Joint2

LTM-QCL-Info-r18 ::=
  referenceSignal-r18
    ssb-Index
    csi-RS-Index
  },
  qcl-Type-r18
}

SEQUENCE {
  CHOICE {
    SSB-Index,
    NZP-CSI-RS-ResourceId
  }
  ENUMERATED {typeA, typeB, typeC, typeD},
}
```

```
}
...
-- TAG-CANDIDATETCI-STATE-STOP
-- ASN1STOP
```

CandidateTCI-State field descriptions
pathlossReferenceRS-Id Indicates a <i>PathlossReferenceRS</i> of the candidate that includes this <i>CandidateTCI-State</i> and it refers to one of the <i>PathlossReferenceRS</i> configured within <i>LTM-TCI-Info</i> . In this version of the specification only SSB can be included as reference signal when <i>PathlossReferenceRS</i> is included within a <i>CandidateTCI-State</i> IE.
qcl-Type1, qcl-Type2 QCL information for the TCI state.
tcid-StateId The ID number of the TCI state.
ul-PowerControl Indicates the UL power control parameters for PUSCH, PUCCH, and SRS of the candidate that includes this <i>CandidateTCI-State</i> . This field refers to an element in the list configured using <i>uplink-PowerControlToAddModList</i> in the <i>SpCellConfig</i> of the <i>ltn-CandidateConfig</i> in the <i>LTM-Candidate</i> where the <i>ltn-TCI-Info</i> is configured.

LTM-QCL-Info field descriptions
referenceSignal The field <i>csi-RS-Index</i> refers to one of the <i>NZP-CSI-RS-Resource</i> configured within <i>LTM-TCI-Info</i> .

Conditional Presence	Explanation
2TA	This field is mandatory present if <i>tag2</i> is present in the <i>SpCellConfig</i> in <i>ltn-CandidateConfig</i> and <i>unifiedTCI-StateType</i> in the <i>ltn-TCI-Info</i> within <i>LTM-Candidate</i> is set to <i>joint</i> . It is absent, Need R, otherwise.
Joint	This field is mandatory present, if <i>unifiedTCI-StateType</i> in the <i>ltn-TCI-Info</i> within <i>LTM-Candidate</i> is set to <i>joint</i> . It is absent, Need R, otherwise.
Joint2	This field is mandatory present if <i>unifiedTCI-StateType</i> in the <i>ltn-TCI-Info</i> within <i>LTM-Candidate</i> is set to <i>joint</i> and <i>ul-powerControl</i> is not configured in any <i>BWP-Uplink-Dedicated</i> of the <i>SpCellConfig</i> in <i>ltn-CandidateConfig</i> . It is absent, Need R, otherwise.

– CandidateTCI-UL-State

The IE *CandidateTCI-UL-State* defines an uplink TCI states configuration.

CandidateTCI-UL-State information element

```
-- ASN1START
-- TAG-CANDIDATETCI-UL-STATE-START
```

```
CandidateTCI-UL-State-r18 ::=
    tci-UL-StateId-r18
    referenceSignal-r18
    SEQUENCE {
        TCI-UL-StateId-r17,
        CHOICE {
```

```

        ssb-Index
        csi-RS-Index
    },
    pathlossReferenceRS-Id-r18
    tag-Id-ptr-r18
    ul-PowerControl-r18
    ...
}

-- TAG-CANDIDATETCI-UL-STATE-STOP
-- ASN1STOP

```

SSB-Index,
NZP-CSI-RS-ResourceId

PathlossReferenceRS-Id-r17
ENUMERATED {n0,n1}
Uplink-powerControlId-r17

OPTIONAL,

OPTIONAL,

OPTIONAL,

-- Need R

-- Cond 2TA

-- Cond separateTCI

CandidateTCI-UL-State field descriptions
csi-RS-Index Indicates an <i>NZP-CSI-RS-Resource</i> of the LTM candidate that includes this <i>CandidateTCI-UL-State</i> .
pathlossReferenceRS-Id Indicates a <i>PathlossReferenceRS</i> of the LTM candidate that includes this <i>CandidateTCI-UL-State</i> and it refers to one of the <i>PathlossReferenceRS</i> configured within <i>LTM-TCI-Info</i> . In this version of the specification, only SSB can be included as reference signal when <i>PathlossReferenceRS</i> is included within a <i>CandidateTCI-UL-State</i> IE.
referenceSignal Reference signal with which spatial relation information is provided. The field <i>csi-RS-Index</i> refers to one of the <i>NZP-CSI-RS-Resource</i> configured within <i>LTM-TCI-Info</i> .
ssb-Index The index of a SSB/PBCH block as indicated in <i>ltm-SSB-Config</i> of the LTM candidate that includes this <i>CandidateTCI-UL-State</i> .
tci-UL-StateID The ID number of the uplink TCI state.
ul-PowerControl Indicates the UL power control parameters for PUSCH, PUCCH, and SRS of the candidate that includes this <i>CandidateTCI-UL-State</i> . This field refers to an element in the list configured using <i>uplink-PowerControlToAddModList</i> in the <i>SpCellConfig</i> of the <i>ltm-CandidateConfig</i> in the <i>LTM-Candidate</i> where the <i>ltm-TCI-Info</i> is configured.

Conditional Presence	Explanation
2TA	This field is mandatory present if <i>tag2</i> is present in the <i>SpCellConfig</i> in <i>ltm-CandidateConfig</i> . It is absent, Need R, otherwise.
<i>separateTCI</i>	This field is mandatory present if <i>unifiedTCI-StateType</i> in the <i>ltm-TCI-Info</i> within <i>LTM-Candidate</i> is set to <i>separate</i> and <i>ul-powerControl</i> is not configured in any <i>BWP-Uplink-Dedicated</i> of the <i>SpCellConfig</i> in <i>ltm-CandidateConfig</i> . It is absent, Need R, otherwise.

—

CellAccessRelatedInfo

The IE *CellAccessRelatedInfo* indicates cell access related information for this cell.

CellAccessRelatedInfo information element

```

-- ASN1START
-- TAG-CELLACCESSRELATEDINFO-START

CellAccessRelatedInfo ::=
    plmn-IdentityInfoList

```

SEQUENCE {

PLMN-IdentityInfoList,

```

    cellReservedForOtherUse      ENUMERATED {true}      OPTIONAL,    -- Need R
    ...,
    [[
    cellReservedForFutureUse-r16  ENUMERATED {true}      OPTIONAL,    -- Need R
    npn-IdentityInfoList-r16      NPN-IdentityInfoList-r16  OPTIONAL    -- Need R
    ]],
    [[
    snpn-AccessInfoList-r17       SEQUENCE (SIZE (1..maxNPN-r16)) OF SNPN-AccessInfo-r17  OPTIONAL    -- Need R
    ]]
}

SNPN-AccessInfo-r17 ::= SEQUENCE {
    extCH-Supported-r17           ENUMERATED {true}      OPTIONAL,    -- Need R
    extCH-WithoutConfigAllowed-r17  ENUMERATED {true}      OPTIONAL,    -- Need R
    onboardingEnabled-r17          ENUMERATED {true}      OPTIONAL,    -- Need R
    imsEmergencySupportForSNPN-r17  ENUMERATED {true}      OPTIONAL,    -- Need R
}

-- TAG-CELLACCESSRELATEDINFO-STOP
-- ASN1STOP

```

CellAccessRelatedInfo field descriptions
cellReservedForFutureUse Indicates whether the cell is reserved, as defined in 38.304 [20] for future use. The field is applicable to all PLMNs and NPNs. This field is ignored by IAB-MT and NCR-MT.
cellReservedForOtherUse Indicates whether the cell is reserved, as defined in 38.304 [20]. The field is applicable to all PLMNs. This field is ignored by IAB-MT and NCR-MT for cell barring determination, but still considered by NPN capable IAB-MT and NPN capable NCR-MT for determination of an NPN-only cell.
nnp-IdentityInfoList The <i>nnp-IdentityInfoList</i> is used to configure a set of <i>NPN-IdentityInfo</i> elements. Each of those elements contains a list of one or more NPN Identities and additional information associated with those NPNs. The total number of PLMNs (identified by a PLMN identity in <i>plmn-IdentityList</i>), PNI-NPNs (identified by a PLMN identity and a CAG-ID), and SNPNs (identified by a PLMN identity and a NID) together in the <i>PLMN-IdentityInfoList</i> and <i>NPN-IdentityInfoList</i> does not exceed 12, except for the NPN-only cells. A PNI-NPN and SNPN can be included only once, and in only one entry of the <i>NPN-IdentityInfoList</i> . In case of NPN-only cells the <i>PLMN-IdentityList</i> contains a single element that does not count to the limit of 12 and the <i>cellIdentity</i> of the first entry of the <i>PLMN-IdentityInfoList</i> is set to the same value as the <i>cellIdentity-r16</i> of the first entry of the <i>NPN-IdentityInfoList</i> . The NPN index is defined as $B+c1+c2+...+c(n-1)+d1+d2+...+d(m-1)+e(i)$ for the NPN identity included in the <i>n</i> -th entry of <i>NPN-IdentityInfoList</i> and in the <i>m</i> -th entry of <i>nnp-Identitylist</i> within that <i>NPN-IdentityInfoList</i> entry, and the <i>i</i> -th entry of its corresponding <i>NPN-Identity</i> , where - <i>B</i> is the index used for the last PLMN in the <i>PLMN-IdentityInfoList</i>; in NPN-only cells <i>B</i> is considered 0; - <i>c(j)</i> is the number of NPN index values used in the <i>j</i>-th <i>NPN-IdentityInfoList</i> entry; - <i>d(k)</i> is the number of NPN index values used in the <i>k</i>-th <i>nnp-IdentityList</i> entry within the <i>n</i>-th <i>NPN-IdentityInfoList</i> entry; - <i>e(i)</i> is - <i>i</i> if the <i>n</i>-th entry of <i>NPN-IdentityInfoList</i> entry is for SNPN(s); - 1 if the <i>n</i>-th entry of <i>NPN-IdentityInfoList</i> entry is for PNI-NPN(s).
plmn-IdentityInfoList The <i>plmn-IdentityInfoList</i> is used to configure a set of <i>PLMN-IdentityInfo</i> elements. Each of those elements contains a list of one or more PLMN Identities and additional information associated with those PLMNs. A PLMN-identity can be included only once, and in only one entry of the <i>PLMN-IdentityInfoList</i> . The PLMN index is defined as $b1+b2+...+b(n-1)+i$ for the PLMN included at the <i>n</i> -th entry of <i>PLMN-IdentityInfoList</i> and the <i>i</i> -th entry of its corresponding <i>PLMN-IdentityInfo</i> , where <i>b(j)</i> is the number of <i>PLMN-Identity</i> entries in each <i>PLMN-IdentityInfo</i> , respectively.
snnp-AccessInfoList This list provides access related information for each SNPN in <i>nnp-IdentityInfoList</i> , see TS 23.501 [32]. The <i>n</i> -th entry of the list contains the access related information of the <i>n</i> -th SNPN in <i>nnp-IdentityInfoList</i> .

SNPN-AccessInfo field descriptions
extCH-Supported Indicates whether the SNPN supports access using credentials from a Credentials Holder as specified in TS 23.501 [32].
extCH-WithoutConfigAllowed Indicates whether the SNPN allows registration attempts with credentials from a Credentials Holder from UEs that are not explicitly configured to select the SNPN as specified in TS 23.501 [32].
imsEmergencySupportForSNPN Indicates whether the SNPN supports IMS emergency bearer services for UEs in limited service mode in the cell. If absent, IMS emergency call is not supported by the SNPN in the cell for UEs in limited service mode.
onboardingEnabled Indicates whether the onboarding SNPN allows registration for onboarding in the cell as specified in TS 23.501 [32].

– *CellAccessRelatedInfo-EUTRA-5GC*

The IE *CellAccessRelatedInfo-EUTRA-5GC* indicates cell access related information for an LTE cell connected to 5GC.

***CellAccessRelatedInfo-EUTRA-5GC* information element**

```

-- ASN1START
-- TAG-CELLACCESSRELATEDINFOEUTRA-5GC-START

CellAccessRelatedInfo-EUTRA-5GC ::= SEQUENCE {
    plmn-IdentityList-eutra-5gc    PLMN-IdentityList-EUTRA-5GC,
    trackingAreaCode-eutra-5gc    TrackingAreaCode,
    ranac-5gc                      RAN-AreaCode OPTIONAL,
    cellIdentity-eutra-5gc         CellIdentity-EUTRA-5GC
}

PLMN-IdentityList-EUTRA-5GC ::= SEQUENCE (SIZE (1..maxPLMN)) OF PLMN-Identity-EUTRA-5GC

PLMN-Identity-EUTRA-5GC ::= CHOICE {
    plmn-Identity-EUTRA-5GC    PLMN-Identity,
    plmn-index                 INTEGER (1..maxPLMN)
}

CellIdentity-EUTRA-5GC ::= CHOICE {
    cellIdentity-EUTRA         BIT STRING (SIZE (28)),
    cellId-index               INTEGER (1..maxPLMN)
}

-- TAG-CELLACCESSRELATEDINFOEUTRA-5GC-STOP
-- ASN1STOP

```

CellAccessRelatedInfo-EUTRA-EPC

The IE *CellAccessRelatedInfo-EUTRA-EPC* indicates cell access related information for an LTE cell connected to EPC.

***CellAccessRelatedInfo-EUTRA-EPC* information element**

```

-- ASN1START
-- TAG-CELLACCESSRELATEDINFOEUTRA-EPC-START

CellAccessRelatedInfo-EUTRA-EPC ::= SEQUENCE {
    plmn-IdentityList-eutra-epc    PLMN-IdentityList-EUTRA-EPC,
    trackingAreaCode-eutra-epc     BIT STRING (SIZE (16)),
    cellIdentity-eutra-epc         BIT STRING (SIZE (28))
}

PLMN-IdentityList-EUTRA-EPC ::= SEQUENCE (SIZE (1..maxPLMN)) OF PLMN-Identity

-- TAG-CELLACCESSRELATEDINFOEUTRA-EPC-STOP
-- ASN1STOP

```

— *CellDTX-DRX-Config*

The IE *CellDTX-DRX-Config* is used to configure cell DTX/DRX related parameters.

CellDTX-DRX-Config information element

```
-- ASN1START
-- TAG-CELDDTX-DRX-CONFIG-START

CellDTX-DRX-Config-r18 ::=
    cellDTX-DRX-onDurationTimer-r18

SEQUENCE {
    CHOICE {
        subMilliseconds INTEGER (1..31),
        milliseconds ENUMERATED {
            ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
            ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
            ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 }
    },
    cellDTX-DRX-CycleStartOffset-r18
        ms10
        ms20
        ms32
        ms40
        ms60
        ms64
        ms70
        ms80
        ms128
        ms160
        ms256
        ms320
        ms512
        ms640
        ms1024
        ms1280
        ms2048
        ms2560
        ms5120
        ms10240
    },
    cellDTX-DRX-SlotOffset-r18
    cellDTX-DRX-ConfigType-r18
    cellDTX-DRX-ActivationStatus-r18
}

CHOICE {
    INTEGER(0..9),
    INTEGER(0..19),
    INTEGER(0..31),
    INTEGER(0..39),
    INTEGER(0..59),
    INTEGER(0..63),
    INTEGER(0..69),
    INTEGER(0..79),
    INTEGER(0..127),
    INTEGER(0..159),
    INTEGER(0..255),
    INTEGER(0..319),
    INTEGER(0..511),
    INTEGER(0..639),
    INTEGER(0..1023),
    INTEGER(0..1279),
    INTEGER(0..2047),
    INTEGER(0..2559),
    INTEGER(0..5119),
    INTEGER(0..10239)
}

INTEGER (0..31),
ENUMERATED {dtx, drx, dtxdrx},
ENUMERATED {activated, deactivated}

OPTIONAL -- Need N

-- TAG-CELDDTX-DRX-CONFIG-STOP
-- ASN1STOP
```


<i>CellDTX-DRX-Config</i> field descriptions
<i>cellDTX-DRX-CycleStartOffset</i> Indicates <i>cellDTX-DRX-Cycle</i> in ms and <i>cellDTX-DRX-StartOffset</i> in multiples of 1 ms. The configured <i>cellDTX-DRX-Cycle</i> is an integer multiple of configured <i>drx-longCycle</i> or vice versa.
<i>cellDTX-DRX-onDurationTimer</i> Value in multiples of 1/32 ms (subMilliseconds) or in ms (millisecond). For the latter, value <i>ms1</i> corresponds to 1 ms, value <i>ms2</i> corresponds to 2 ms, and so on.
<i>cellDTX-DRX-SlotOffset</i> Value in 1/32 ms. Value 0 corresponds to 0 ms, value 1 corresponds to 1/32 ms, value 2 corresponds to 2/32 ms, and so on.
<i>cellDTX-DRX-ActivationStatus</i> Initial activation status of cell DTX/DRX indicating whether the UE shall activate the configuration according to the received parameters. This field is only used upon setup of a cell DTX/DRX configuration.
<i>cellDTX-DRX-ConfigType</i> Indicates whether the configuration is for cell DTX only, cell DRX only, or joint cell DTX/DRX configuration.

– *CellGroupConfig*

The *CellGroupConfig* IE is used to configure a master cell group (MCG) or secondary cell group (SCG). A cell group comprises of one MAC entity, a set of logical channels with associated RLC entities and of a primary cell (SpCell) and one or more secondary cells (SCells). For an NCR-MT, the *CellGroupConfig* IE is also used to provide the configuration of side control information for the NCR-Fwd access link.

CellGroupConfig information element

```
-- ASN1START
-- TAG-CELLGROUPCONFIG-START

-- Configuration of one Cell-Group:
CellGroupConfig ::=
    cellGroupId
    rlc-BearerToAddModList
    rlc-BearerToReleaseList
    mac-CellGroupConfig
    physicalCellGroupConfig
    spCellConfig
    sCellToAddModList
    sCellToReleaseList
    ...,
    [[
        reportUplinkTxDirectCurrent
    ]],
    [[
        bap-Address-r16
        bh-RLC-ChannelToAddModList-r16
        bh-RLC-ChannelToReleaseList-r16
        f1c-TransferPath-r16
        simultaneousTCI-UpdateList1-r16
        simultaneousTCI-UpdateList2-r16
        simultaneousSpatial-UpdatedList1-r16
```

```
SEQUENCE {
    CellGroupId,
    SEQUENCE (SIZE(1..maxLC-ID)) OF RLC-BearerConfig OPTIONAL, -- Need N
    SEQUENCE (SIZE(1..maxLC-ID)) OF LogicalChannelIdentity OPTIONAL, -- Need N
    MAC-CellGroupConfig OPTIONAL, -- Need M
    PhysicalCellGroupConfig OPTIONAL, -- Need M
    SpCellConfig OPTIONAL, -- Need M
    SEQUENCE (SIZE (1..maxNrofSCells)) OF SCellConfig OPTIONAL, -- Need N
    SEQUENCE (SIZE (1..maxNrofSCells)) OF SCellIndex OPTIONAL, -- Need N
    ENUMERATED {true} OPTIONAL -- Cond BWP-Reconfig
    BIT STRING (SIZE (10)) OPTIONAL, -- Need M
    SEQUENCE (SIZE(1..maxBH-RLC-ChannelID-r16)) OF BH-RLC-ChannelConfig-r16 OPTIONAL, -- Need N
    SEQUENCE (SIZE(1..maxBH-RLC-ChannelID-r16)) OF BH-RLC-ChannelID-r16 OPTIONAL, -- Need N
    ENUMERATED {lte, nr, both} OPTIONAL, -- Need M
    SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
    SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
    SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
```

```

simultaneousSpatial-UpdatedList2-r16 SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
uplinkTxSwitchingOption-r16 ENUMERATED {switchedUL, dualUL} OPTIONAL, -- Need R
uplinkTxSwitchingPowerBoosting-r16 ENUMERATED {enabled} OPTIONAL, -- Need R
]],
[[
reportUplinkTxDirectCurrentTwoCarrier-r16 ENUMERATED {true} OPTIONAL, -- Need N
]],
[[
f1c-TransferPathNRDC-r17 ENUMERATED {mcg, scg, both} OPTIONAL, -- Need M
uplinkTxSwitching-2T-Mode-r17 ENUMERATED {enabled} OPTIONAL, -- Cond 2Tx
uplinkTxSwitching-DualUL-TxState-r17 ENUMERATED {oneT, twoT} OPTIONAL, -- Cond 2Tx
uu-RelayRLC-ChannelToAddModList-r17 SEQUENCE (SIZE(1..maxUu-RelayRLC-ChannelID-r17)) OF Uu-RelayRLC-ChannelConfig-r17 OPTIONAL, -- Need N
uu-RelayRLC-ChannelToReleaseList-r17 SEQUENCE (SIZE(1..maxUu-RelayRLC-ChannelID-r17)) OF Uu-RelayRLC-ChannelID-r17 OPTIONAL, -- Need N
simultaneousU-TCI-UpdateList1-r17 SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
simultaneousU-TCI-UpdateList2-r17 SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
simultaneousU-TCI-UpdateList3-r17 SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
simultaneousU-TCI-UpdateList4-r17 SEQUENCE (SIZE (1..maxNrofServingCellsTCI-r16)) OF ServCellIndex OPTIONAL, -- Need R
rlc-BearerToReleaseListExt-r17 SEQUENCE (SIZE(1..maxLC-ID)) OF LogicalChannelIdentityExt-r17 OPTIONAL, -- Need N
iab-ResourceConfigToAddModList-r17 SEQUENCE (SIZE(1..maxNrofIABResourceConfig-r17)) OF IAB-ResourceConfig-r17 OPTIONAL, -- Need N
iab-ResourceConfigToReleaseList-r17 SEQUENCE (SIZE(1..maxNrofIABResourceConfig-r17)) OF IAB-ResourceConfigID-r17 OPTIONAL, -- Need N
]],
[[
reportUplinkTxDirectCurrentMoreCarrier-r17 ReportUplinkTxDirectCurrentMoreCarrier-r17 OPTIONAL, -- Need N
]],
[[
prioSCellPRACH-OverSP-PeriodicSRS-r17 ENUMERATED {enabled} OPTIONAL, -- Need R
]],
[[
ncr-FwdConfig-r18 SetupRelease { NCR-FwdConfig-r18 } OPTIONAL, -- Cond NCR
autonomousDenialParameters-r18 SetupRelease {AutonomousDenialParameters-r18} OPTIONAL, -- Need M
nonCollocatedTypeMRDC-r18 ENUMERATED { true } OPTIONAL, -- Need R
nonCollocatedTypeNR-CA-r18 ENUMERATED { true } OPTIONAL, -- Need R
uplinkTxSwitchingMoreBands-r18 SetupRelease { UplinkTxSwitchingMoreBands-r18 } OPTIONAL, -- Need M
]]
}

-- Serving cell specific MAC and PHY parameters for a SpCell:
SpCellConfig ::=
servCellIndex ServCellIndex OPTIONAL, -- Cond SCG
reconfigurationWithSync ReconfigurationWithSync OPTIONAL, -- Cond ReconfWithSync
rlf-TimersAndConstants SetupRelease { RLF-TimersAndConstants } OPTIONAL, -- Need M
rlmInSyncOutOfSyncThreshold ENUMERATED {n1} OPTIONAL, -- Need S
spCellConfigDedicated ServingCellConfig OPTIONAL, -- Need M
...,
[[
lowMobilityEvaluationConnected-r17 SEQUENCE {
s-SearchDeltaP-Connected-r17 ENUMERATED {dB3, dB6, dB9, dB12, dB15, spare3, spare2, spare1},
t-SearchDeltaP-Connected-r17 ENUMERATED {s5, s10, s20, s30, s60, s120, s180, s240, s300, spare7, spare6, spare5, spare4, spare3, spare2, spare1}
}
goodServingCellEvaluationRLM-r17 GoodServingCellEvaluation-r17 OPTIONAL, -- Need R
goodServingCellEvaluationBFD-r17 GoodServingCellEvaluation-r17 OPTIONAL, -- Need R

```

```

    deactivatedSCG-Config-r17      SetupRelease { DeactivatedSCG-Config-r17 }      OPTIONAL  -- Cond SCG-Opt
  ]]
}

ReconfigurationWithSync ::=
  spCellConfigCommon              SEQUENCE {
    newUE-Identity                 OPTIONAL,  -- Need M
    t304                           ENUMERATED {ms50, ms100, ms150, ms200, ms500, ms1000, ms2000, ms10000},
    rach-ConfigDedicated           CHOICE {
      uplink                       RACH-ConfigDedicated,
      supplementaryUplink           RACH-ConfigDedicated
    }
  }
  ...,
  [[
    smtc                           SSB-MTC
  ]],
  [[
    daps-UplinkPowerConfig-r16     DAPS-UplinkPowerConfig-r16
  ]],
  [[
    sl-PathSwitchConfig-r17        SL-PathSwitchConfig-r17
  ]],
  [[
    rach-LessHO-r18                RACH-LessHO-r18
    sl-IndirectPathMaintain-r18    ENUMERATED{true}
  ]],
}

DAPS-UplinkPowerConfig-r16 ::=
  p-DAPS-Source-r16               P-Max,
  p-DAPS-Target-r16               P-Max,
  uplinkPowerSharingDAPS-Mode-r16 ENUMERATED {semi-static-mode1, semi-static-mode2, dynamic }
}

SCellConfig ::=
  sCellIndex                      SEQUENCE {
    sCellConfigCommon             ServingCellConfigCommon      OPTIONAL,  -- Cond SCellAdd
    sCellConfigDedicated           ServingCellConfig            OPTIONAL,  -- Cond SCellAddMod
  },
  ...,
  [[
    smtc                           SSB-MTC
  ]],
  [[
    sCellState-r16                 ENUMERATED {activated}
    secondaryDRX-GroupConfig-r16   ENUMERATED {true}
  ]],
  [[
    preConfigGapStatus-r17          BIT STRING (SIZE (maxNrofGapId-r17))
    goodServingCellEvaluationBFD-r17 GoodServingCellEvaluation-r17
    sCellSIB20-r17                 SetupRelease { SCellSIB20-r17 }
  ]],
  [[
    plmn-IdentityInfoList-r17       SetupRelease {PLMN-IdentityInfoList}
    npn-IdentityInfoList-r17       SetupRelease {NPN-IdentityInfoList-r16}
  ]],

```

```

    ]]
  }

SCellSIB20-r17 ::= OCTET STRING (CONTAINING SystemInformation)

DeactivatedSCG-Config-r17 ::= SEQUENCE {
    bfd-and-RLM-r17          BOOLEAN,
    ...
}

GoodServingCellEvaluation-r17 ::= SEQUENCE {
    offset-r17                ENUMERATED {db2, db4, db6, db8}
                                OPTIONAL -- Need S
}

SL-PathSwitchConfig-r17 ::= SEQUENCE {
    targetRelayUE-Identity-r17 SL-SourceIdentity-r17,
    t420-r17                  ENUMERATED {ms50, ms100, ms150, ms200, ms500, ms1000, ms2000, ms10000},
    ...
}

IAB-ResourceConfig-r17 ::= SEQUENCE {
    iab-ResourceConfigID-r17  IAB-ResourceConfigID-r17,
    slotList-r17              SEQUENCE (SIZE (1..5120)) OF INTEGER (0..5119)
                                OPTIONAL, -- Need M
    periodicitySlotList-r17   ENUMERATED {ms0p5, ms0p625, ms1, ms1p25, ms2, ms2p5, ms5, ms10, ms20, ms40, ms80, ms160}
                                OPTIONAL, -- Need M
    slotListSubcarrierSpacing SubcarrierSpacing
                                OPTIONAL, -- Need M
    ...
}

IAB-ResourceConfigID-r17 ::= INTEGER(0..maxNrofIABResourceConfig-1-r17)

ReportUplinkTxDirectCurrentMoreCarrier-r17 ::= SEQUENCE (SIZE(1.. maxSimultaneousBands)) OF IntraBandCC-CombinationReqList-r17

IntraBandCC-CombinationReqList-r17 ::= SEQUENCE {
    servCellIndexList-r17     SEQUENCE (SIZE(1.. maxNrofServingCells)) OF ServCellIndex,
    cc-CombinationList-r17    SEQUENCE (SIZE(1.. maxNrofReqComDC-Location-r17)) OF IntraBandCC-Combination-r17
}

IntraBandCC-Combination-r17 ::= SEQUENCE (SIZE(1.. maxNrofServingCells)) OF CC-State-r17

CC-State-r17 ::= SEQUENCE {
    dlCarrier-r17             CarrierState-r17
                                OPTIONAL, -- Need N
    ulCarrier-r17             CarrierState-r17
                                OPTIONAL -- Need N
}

CarrierState-r17 ::= CHOICE {
    deActivated-r17           NULL,
    activeBWP-r17             INTEGER (0..maxNrofBWPs)
}

AutonomousDenialParameters-r18 ::= SEQUENCE {
    autonomousDenialSlots-r18 ENUMERATED {n2, n5, n10, n15, n20, n30, spare2, spare1},
    autonomousDenialValidity-r18 ENUMERATED {n200, n500, n1000, n2000}
}

```

```
RACH-LessH0-r18 ::=
    targetNTA-r18
    beamIndication-r18
    tci-StateID-r18
    ssb-Index-r18
    ...
}

UplinkTxSwitchingMoreBands-r18 ::=
    uplinkTxSwitchingBandList-r18
    uplinkTxSwitchingBandPairList-r18
    uplinkTxSwitchingAssociatedBandDualUL-List-r18
    ...
}

UplinkTxSwitchingBandPairList-r18 ::=
    UplinkTxSwitchingBandPairList-r18
    UplinkTxSwitchingAssociatedBandDualUL-List-r18
    ...
}

UplinkTxSwitchingBandPairConfig-r18 ::=
    bandInfoUL1-r18
    bandInfoUL2-r18
    switchingOptionConfigForBandPair-r18
    switching2T-Mode-r18
    switchingPeriodConfigForBandPair-r18
    ...
}

UplinkTxSwitchingAssociatedBandDualUL-List-r18 ::=
    UplinkTxSwitchingAssociatedBandDualUL-r18

UplinkTxSwitchingAssociatedBandDualUL-r18 ::=
    transmitBand-r18
    associatedBand-r18
    UplinkTxSwitchingBandIndex-r18
    UplinkTxSwitchingBandIndex-r18
}

UplinkTxSwitchingBandIndex-r18 ::=
    INTEGER (1..maxSimultaneousBands)

-- TAG-CELLGROUPCONFIG-STOP
-- ASN1STOP
```

AutonomousDenialParamters field descriptions	
autonomousDenialSlots	Indicates the maximum number of the UL slots for which the UE is allowed to deny any UL transmission. Value <i>n2</i> corresponds to 2 slots, value <i>n5</i> to 5 slots and so on.
autonomousDenialValidity	Indicates the validity period over which the UL autonomous denial slots shall be counted. Value <i>n200</i> corresponds to 200 slots, value <i>n500</i> corresponds to 500 slots and so on.

CC-State field descriptions	
<i>dlCarrier</i>	Indicates DL carrier activation state for this carrier and the related active BWP Index, if activated.
<i>ulCarrier</i>	Indicates UL carrier activation state for this carrier and the related active BWP Index, if activated.

<i>CellGroupConfig</i> field descriptions
bap-Address BAP address of the parent node in cell group.
bh-RLC-ChannelToAddModList Configuration of the backhaul RLC entities and the corresponding MAC Logical Channels to be added and modified.
bh-RLC-ChannelToReleaseList List of the backhaul RLC entities and the corresponding MAC Logical Channels to be released.
f1c-TransferPath The F1-C transfer path that an EN-DC IAB-MT should use for transferring F1-C packets to the IAB-donor-CU. If IAB-MT is configured with <i>lte</i> , IAB-MT can only use LTE leg for F1-C transfer. If IAB-MT is configured with <i>nr</i> , IAB-MT can only use NR leg for F1-C transfer. If IAB-MT is configured with <i>both</i> , it is up to IAB-MT to select an LTE leg or a NR leg for F1-C transfer. If the field is not configured, the IAB node uses the NR leg as the default one.
f1c-TransferPathNRDC The F1-C transfer path that an NR-DC IAB-MT should use for transferring F1-C packets to the IAB-donor-CU. If IAB-MT is configured with <i>mcg</i> , IAB-MT can only use the MCG for F1-C transfer. If IAB-MT is configured with <i>scg</i> , IAB-MT can only use the SCG for F1-C transfer. If IAB-MT is configured with <i>both</i> , it is up to IAB-MT to select the MCG or the SCG for F1-C transfer.
mac-CellGroupConfig MAC parameters applicable for the entire cell group.
ncr-FwdConfig Configuration of side control information for the NCR-Fwd access link.
nonCollocatedTypeMRDC This field is only present for a UE configured with <i>maxMIMO-Layers</i> with value less than or equal to 2 for all corresponding serving cells, in case of TDD-TDD inter-band (NG) EN-DC with overlapping or partially overlapping bands. If this field is present, the UE applies (NG)EN-DC MTTD/MRTD according to clause 7.5.3/7.6.3 in TS 38.133 [14] and inter-band RF requirements (i.e. Type 1 UE requirement). If this field is absent, the UE applies (NG)EN-DC MTTD/MRTD according to clause 7.5.2/7.6.2 in TS 38.133 [14] and inter-band RF requirements (i.e. Type 2 UE requirement) when indicating support of <i>interBandMRDC-WithOverlapDL-Bands-r16</i> .
nonCollocatedTypeNR-CA This field is only present for a UE configured with <i>maxMIMO-Layers</i> with value less than or equal to 2 for all corresponding serving cells, in case of TDD-TDD intra-band NR-CA. If this field is present, the UE applies MRTD according to Table 7.6.4-1 in TS 38.133 [14] and UE RF requirements for intra-band NR-CA except for 7.10A in TS 38.101-1 [15] (i.e. Type 1 UE requirement). If this field is absent, the UE applies MTTD/MRTD requirements according to Table 7.5.4-1/Table 7.6.4-2 in TS 38.133 [14] and UE RF requirements for intra-band non-collocated NR-CA including 7.10A in TS 38.101-1 [15] (i.e. Type 2 UE requirement) when indicating support of <i>intraBandNR-CA-non-collocated-r18</i> .
npn-IdentityInfoList This field is used to transfer <i>npn-IdentityInfoList</i> in <i>SIB1</i> of the SCell. The UE uses this field to translate the <i>plmn-Index</i> in MCCH of SCell to SNPN Identity. If this field and <i>plmn-IdentityInfoList</i> are both absent, the UE uses the <i>npn-IdentityInfoList</i> in <i>SIB1</i> of the PCell.
plmn-IdentityInfoList This field is used to transfer <i>plmn-IdentityInfoList</i> in <i>SIB1</i> of the SCell. The UE uses this field to translate the <i>plmn-Index</i> in MCCH of SCell to PLMN Identity. If this field and <i>npn-IdentityInfoList</i> are both absent, the UE uses the <i>plmn-IdentityInfoList</i> in <i>SIB1</i> of the PCell.
prioSCellPRACH-OverSP-PeriodicSRS When configured, the UE applies UL power control prioritization by prioritizing PRACH transmission on SCell over semi-persistent and/or periodic SRS transmission as defined in clause 7.5 of TS 38.213 [13].
rlc-BearerToAddModList Configuration of the MAC Logical Channel, the corresponding RLC entities and association with radio bearers.
reportUplinkTxDirectCurrent Enables reporting of uplink and supplementary uplink Direct Current location information upon BWP configuration and reconfiguration. This field is only present when the BWP configuration is modified or any serving cell is added or removed. This field is absent in the IE <i>CellGroupConfig</i> when provided as part of <i>RRCSetup</i> message. If UE is configured with SUL carrier, UE reports both UL and SUL Direct Current locations.

reportUplinkTxDirectCurrentMoreCarrier
Enables reporting of uplink Direct Current location information when the UE is configured with intra-band CA. This field is absent in the IE <i>CellGroupConfig</i> when provided as part of <i>RRCSetup</i> message. The UE only reports the uplink Direct Current location information that are related to the indicated <i>cc-CombinationList</i> . The network does not include carriers which locate in DL only spectrum described in TS 38.101-2 [39], clause 5.3A.4 and defined by Fsd according to Table 5.3A.4-3 in FR2 in the <i>IntraBandCC-CombinationReqList</i> . I.e. DL-only carrier in FR2 frequency spectrum is not used to calculate the default DC location.
reportUplinkTxDirectCurrentTwoCarrier
Enables reporting of uplink Direct Current location information when the UE is configured with uplink intra-band CA with two carriers. This field is absent in the IE <i>CellGroupConfig</i> when provided as part of <i>RRCSetup</i> message.
rlc-BearerToReleaseListExt
List of the RLC entities and the corresponding MAC Logical Channels to be released for multicast MRBs.
rlmInSyncOutOfSyncThreshold
BLER threshold pair index for IS/OOS indication generation, see TS 38.133 [14]. <i>n1</i> corresponds to the value 1. When the field is absent, the UE applies the value 0. Whenever this is reconfigured, UE resets N310 and N311, and stops T310, if running. Network does not include this field.
sCellSIB20
This field is used to transfer <i>SIB20</i> of the SCell in order to allow the UE for MBS broadcast reception on SCell. The network configures this field only for a single SCell at a time.
sCellToAddModList
List of secondary serving cells (SCells) to be added or modified.
sCellToReleaseList
List of secondary serving cells (SCells) to be released.
simultaneousSpatial-UpdatedList1, simultaneousSpatial-UpdatedList2
List of serving cells which can be updated simultaneously for spatial relation with a MAC CE. The <i>simultaneousSpatial-UpdatedList1</i> and <i>simultaneousSpatial-UpdatedList2</i> shall not contain same serving cells. Network should not configure serving cells that are configured with a BWP with two different values for the <i>coresetPoolIndex</i> in these lists.
simultaneousTCI-UpdateList1, simultaneousTCI-UpdateList2
List of serving cells which can be updated simultaneously for TCI relation with a MAC CE. The <i>simultaneousTCI-UpdateList1</i> and <i>simultaneousTCI-UpdateList2</i> shall not contain same serving cells. Network should not configure serving cells that are configured with a BWP with two different values for the <i>coresetPoolIndex</i> in these lists.
simultaneousU-TCI-UpdateList1, simultaneousU-TCI-UpdateList2, simultaneousU-TCI-UpdateList3, simultaneousU-TCI-UpdateList4
List of serving cells for which the Unified TCI States Activation/Deactivation MAC CE, the Enhanced Unified TCI States Activation/Deactivation MAC CE for Joint TCI States or the Enhanced Unified TCI States Activation/Deactivation MAC CE for Separate TCI States apply simultaneously, as specified in TS 38.321 [3] clauses 6.1.3.47, 6.1.3.70 and 6.1.3.71, respectively. The different lists shall not contain same serving cells. Network only configures in these lists serving cells that are configured with <i>unifiedTCI-StateType</i> . Network should not configure serving cells that are configured with a BWP with different number of <i>coresetPoolIndexes</i> in the same list.
spCellConfig
Parameters for the SpCell of this cell group (PCell of MCG or PSCell of SCG).
uplinkTxSwitchingOption
Indicates which option is configured for dynamic UL Tx switching for inter-band UL CA or (NG)EN-DC. The field is set to <i>switchedUL</i> if network configures option 1 as specified in TS 38.214 [19], or <i>dualUL</i> if network configures option 2 as specified in TS 38.214 [19]. Network always configures UE with a value for this field in inter-band UL CA case and (NG)EN-DC case where UE supports dynamic UL Tx switching.
uplinkTxSwitchingPowerBoosting
Indicates whether the UE is allowed to enable 3dB boosting on the maximum output power for transmission on carrier2 under the operation state in which 2-port transmission can be supported on carrier2 for inter-band UL CA case with dynamic UL Tx switching as defined in TS 38.101-1 [15]. Network can only configure this field for dynamic UL Tx switching in inter-band UL CA case with power Class 3 as defined in TS 38.101-1 [15].
uplinkTxSwitching-2T-Mode
Indicates 2Tx-2Tx switching mode is configured for inter-band UL CA or SUL, in which the switching gap duration for a triggered uplink switching (as specified in TS 38.214 [19]) is equal to the switching time capability value reported for the switching mode. If this field is absent and <i>uplinkTxSwitching</i> is configured, it is interpreted that 1Tx-2Tx UL Tx switching is configured as specified in TS 38.214 [19]. In this case, there is one uplink (or one uplink band in case of intra-band) configured with <i>uplinkTxSwitching</i> , on which the maximum number of antenna ports among all configured P-SRS/A-SRS and activated SP-SRS resources should be 1 and non-codebook based UL MIMO is not configured.

<i>uplinkTxSwitching-DualUL-TxState</i>
Indicates the state of Tx chains if the state of Tx chains after the UL Tx switching is not unique (as specified in TS 38.214 [19]) in case of 2Tx-2Tx switching is configured and <i>uplinkTxSwitchingOption</i> is set to <i>dualUL</i> . Value <i>oneT</i> indicates 1Tx is assumed to be supported on the carriers on each band, value <i>twoT</i> indicates 2Tx is assumed to be supported on that carrier. This field applies for all band pairs if <i>uplinkTxSwitchingMoreBands</i> is configured.
<i>uplinkTxSwitchingMoreBands</i>
Indicates UL band list, band pair list and other configurations for UL Tx switching.
<i>uu-RelayRLC-ChannelToAddModList</i>
List of the Uu RLC entities and the corresponding MAC Logical Channels to be added or modified.
<i>uu-RelayRLC-ChannelToReleaseList</i>
List of the Uu RLC entities and the corresponding MAC Logical Channels to be released.

<i>DeactivatedSCG-Config</i> field descriptions
<i>bfd-and-RLM</i>
If the field is set to <i>true</i> , the UE shall perform RLM and BFD on the PSCell when the SCG is deactivated and the network ensures that <i>beamFailure-r17</i> is not configured in the <i>radioLinkMonitoringConfig</i> of the DL BWP of the PSCell in which the UE performs BFD. If set to <i>false</i> , the UE is not required to perform RLM and BFD on the PSCell when the SCG is deactivated.

<i>DAPS-UplinkPowerConfig</i> field descriptions
<i>p-DAPS-Source</i>
The maximum total transmit power to be used by the UE in the source cell group during DAPS handover.
<i>p-DAPS-Target</i>
The maximum total transmit power to be used by the UE in the target cell group during DAPS handover.
<i>uplinkPowerSharingDAPS-Mode</i>
Indicates the uplink power sharing mode that the UE uses in DAPS handover (see TS 38.213 [13]).

<i>GoodServingCellEvaluation</i> field descriptions
<i>offset</i>
The parameter "X" (dB) for the good serving cell quality criterion in RRC_CONNECTED, for a cell operating in FR1 and FR2, respectively. If this field is absent, the UE applies the (default) value of 0 dB for "X".

<i>IAB-ResourceConfig</i> field descriptions
<i>iab-ResourceConfigID</i> This ID is used to indicate the specific resource configuration addressed by the MAC CEs specified in TS 38.321 [3].
<i>periodicitySlotList</i> Indicates the periodicity in ms of the list of slot indexes indicated in <i>slotList</i> .
<i>slotList</i> Indicates the list of slot indexes to which the information indicated in the specific MAC CE applies to, as specified in TS 38.321 [3]. The values of the entries in the <i>slotList</i> are strictly less than the value of the <i>periodicitySlotList</i> .
<i>slotListSubcarrierSpacing</i> Subcarrier spacing used as reference for the <i>slotList</i> configuration. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1: 60 or 120 kHz FR2-2: 120 or 480 kHz

<i>RACH-LessHO</i> field descriptions
<i>ssb-Index</i> This field indicates a beam that the UE should use in the target cell to monitor PDCCH for initial uplink transmission, see TS 38.321 [3]. The network configures this field when <i>cg-RRC-Configuration</i> is not configured for the initial uplink transmission in RACH-less handover in NTN or in case this cell is not a mobile IAB cell.
<i>targetNTA</i> This field refers to the timing adjustment, see TS 38.213 [13] and TS 38.321 [3], indicating the N_{TA} value which the UE shall use for the target PTAG of handover. The value zero corresponds to $N_{TA}=0$, while the value <i>source</i> corresponds to the N_{TA} value of the source PTAG indicated by the <i>tag-Id</i> . Only value <i>source</i> is configured by the network in case source cell is a mobile IAB cell. In this version of the specification, the network shall always configure this field if <i>rach-LessHO</i> is part of an <i>RRCReconfiguration</i> message.
<i>tcI-StateID</i> This field indicates a beam that the UE should use in the target cell to monitor PDCCH for initial uplink transmission and also indicates the TCI state information to be used in the target cell. The network configures this field in case this cell is not a NTN cell.

<i>ReconfigurationWithSync</i> field descriptions
<i>rach-ConfigDedicated</i> Random access configuration to be used for the reconfiguration with sync (e.g. handover). The UE performs the RA according to these parameters in the <i>firstActiveUplinkBWP</i> (see <i>UplinkConfig</i>).
<i>sl-IndirectPathMaintain</i> Indicates that the L2 U2N Remote UE keeps the PC5 connection with its connected L2 U2N Relay UE.
<i>smtc</i> The SSB periodicity/offset/duration configuration of target cell for NR PCell change and NR PCell change. The network sets the <i>periodicityAndOffset</i> to indicate the same periodicity as <i>ssb-periodicityServingCell</i> in <i>spCellConfigCommon</i> or sets to the same periodicity as <i>ssb-Periodicity-r17</i> in <i>nonCellDefiningSSB-r17</i> if the first active DL BWP included in this RRC message is configured with <i>nonCellDefiningSSB-r17</i> . For case of NR PCell change, the <i>smtc</i> is based on the timing reference of (source) PCell. For case of NR PCell change, it is based on the timing reference of source PCell. If both this field and <i>targetCellSMTc-SCG</i> are absent, the UE uses the SMTc in the <i>measObjectNR</i> having the same SSB frequency and subcarrier spacing, as configured before the reception of the RRC message. If the first active DL BWP included in this RRC message is configured with <i>nonCellDefiningSSB-r17</i> , this field corresponds to the NCD-SSB indicated by <i>nonCellDefiningSSB-r17</i> , otherwise, this field corresponds to the CD-SSB indicated by <i>absoluteFrequencySSB</i> in <i>frequencyInfoDL</i> .

ReportUplinkTxDirectCurrentMoreCarrier field descriptions
IntraBandCC-Combination Indicates the state of the carriers and BWPs indexes of the carriers in a CC combination, each carrier in this combination corresponds to an entry in <i>servCellIndexList</i> with same order. This IE shall have the same size as <i>servCellIndexList</i> .
IntraBandCC-CombinationReqList Indicates the list of the requested carriers/BWPs combinations for an intra-band CA component.
servCellIndexList indicates the list of cell index for an intra-band CA component.

SCellConfig field descriptions
goodServingCellEvaluationBFD Indicates the criterion for a UE to detect the good serving cell quality for BFD relaxation in an SCell in RRC_CONNECTED. This field is always configured when the network enables BFD relaxation for the UE in this SCell. This field is absent if <i>failureDetectionSetN</i> is present for the SCell.
preConfigGapStatus Indicates whether the pre-configured measurement gaps (i.e. the gaps configured with <i>preConfigInd</i>) are activated or deactivated while this SCell is deactivated. If this field is configured, the UE shall apply network-controlled mechanism for activation and deactivation of the pre-configured measurement gaps, otherwise the UE shall apply the autonomous activation/deactivation mechanism, as specified in TS 38.133 [14]. The first/leftmost bit corresponds to the measurement gap with gap ID 1, the second bit corresponds to measurement gap with gap ID 2, and so on. Value 0 indicates that the corresponding pre-configured measurement gap is deactivated while value 1 indicates that the corresponding pre-configured measurement gap is activated. The UE shall ignore the bit if the corresponding measurement gap is not a pre-configured measurement gap.
sCellState Indicates whether the SCell shall be considered to be in activated state upon SCell configuration. If the field is included for an SCell configured with TRS for fast activation of the SCell, such TRS is not used for the corresponding SCell.
secondaryDRX-GroupConfig The field is used to indicate whether the SCell belongs to the secondary DRX group. All serving cells in the secondary DRX group shall belong to one Frequency Range and all serving cells in the default DRX group shall belong to another Frequency Range. If <i>drx-ConfigSecondaryGroup</i> is configured, the field is optionally present. The network always includes the field if the field was previously configured for this SCell and the SCell remains in the secondary DRX group. Removal of an individual SCell from the secondary DRX group is supported by using an SCell release and addition. Otherwise, if <i>drx-ConfigSecondaryGroup</i> is not configured, the field is absent and the UE shall release the field. The UE shall also release the field if <i>drx-ConfigSecondaryGroup</i> is released without including <i>sCellToAddModList</i> .
smtc The SSB periodicity/offset/duration configuration of target cell for NR SCell addition. The network sets the <i>periodicityAndOffset</i> to indicate the same periodicity as <i>ssb-periodicityServingCell</i> in <i>sCellConfigCommon</i> . The <i>smtc</i> is based on the timing of the SpCell of associated cell group. In case of inter-RAT handover to NR, the timing reference is the NR PCell. In case of intra-NR PCell change (standalone NR) or NR PSCell change (EN-DC), the timing reference is the target SpCell. If the field is absent and <i>absoluteFrequencySSB</i> is included, the UE uses the SMTC in the <i>measObjectNR</i> having the same SSB frequency and subcarrier spacing, as configured before the reception of the RRC message. If the SCell is an SSB-less SCell (i.e., the IE <i>absoluteFrequencySSB</i> in <i>ServingCellConfigCommon</i> is absent), this field is absent.

SpCellConfig field descriptions
deactivatedSCG-Config Configuration applicable when the SCG is deactivated. The network always configures this field before or when indicating that the SCG is deactivated in an <i>RRCReconfiguration</i> , <i>RRCResume</i> , E-UTRA <i>RRCCConnectionReconfiguration</i> or E-UTRA <i>RRCCConnectionResume</i> message.
goodServingCellEvaluationBFD Indicates the criterion for a UE to detect the good serving cell quality for BFD relaxation in the SpCell in RRC_CONNECTED. The field is always configured when the network enables BFD relaxation for the UE in this SpCell. This field is absent if <i>failureDetectionSetN</i> is present for the SpCell.
goodServingCellEvaluationRLM Indicates the criterion for a UE to detect the good serving cell quality for RLM relaxation in the SpCell in RRC_CONNECTED. The field is always configured when the network enables RLM relaxation for the UE in this SpCell.
lowMobilityEvaluationConnected Indicates the criterion for a UE to detect low mobility in RRC_CONNECTED in an SpCell. The <i>s-SearchDeltaP-Connected</i> is the parameter "S _{SearchDeltaP-connected} ". Value <i>dB3</i> corresponds to 3 dB, <i>dB6</i> corresponds to 6 dB and so on. The <i>t-SearchDeltaP-Connected</i> is the parameter "T _{SearchDeltaP-Connected} ". Value <i>s5</i> means 5 seconds, value <i>s10</i> means 10 seconds and so on. Low mobility criterion is configured in NR PCell for the case of NR SA/ NR CA/ NE-DC/NR-DC, and in the NR PSCell for the case of EN-DC.
reconfigurationWithSync Parameters for the synchronous reconfiguration to the target SpCell.
rll-TimersAndConstants Timers and constants for detecting and triggering cell-level radio link failure. For the SCG, <i>rll-TimersAndConstants</i> can only be set to <i>setup</i> and is always included at SCG addition.
servCellIndex Serving cell ID of a PSCell. The PCell of the Master Cell Group uses ID = 0.

SL-PathSwitchConfig field descriptions
targetRelayUE-Identity Indicates the L2 source ID of the target L2 U2N Relay UE during path switch.
t420 Indicates the timer value of <i>T420</i> to be used during path switch.

UplinkTxSwitchingMoreBands field descriptions
uplinkTxSwitchingBandList Indicates the NR frequency band number of the UL bands for UL Tx switching. If the UE needs to determine location of switching period as specified in TS 38.101-1 [15], the UE considers that the bands are listed in decreasing order of priority, i.e. the first/leftmost entry corresponds to the band with the highest priority, the next entry corresponds to the band with the second highest priority, and so on. The last entry corresponds the band with the lowest priority.
uplinkTxSwitchingBandPairList Indicates the band pairs involved in UL Tx switching, as well as the per band pair configurations.
uplinkTxSwitchingAssociatedBandDualUL-List Indicates the associated band for the transmitting band indicated by <i>transmitBand</i> which the transmitting carrier(s) is on as specified in TS 38.214 [19], clause 6.1.6. The network ensures that each band pair of a transmitting band and an associated band supports the <i>dualUL</i> switching option.
UplinkTxSwitchingBandIndex The value <i>n</i> indicates the band included at the <i>n</i> -th entry of <i>uplinkTxSwitchingBandList</i> .

<i>UplinkTxSwitchingBandPairConfig</i> field descriptions
<i>bandInfoUL1, bandInfoUL2</i> Indicates the band index for a band pair. The value n indicates the band included at the n-th entry of <i>uplinkTxSwitchingBandList</i> .
<i>switching2T-Mode</i> Indicates 2Tx-2Tx switching mode is configured to the band pair. If this field is absent when uplink Tx switching is configured, it is interpreted that 1Tx-2Tx/1Tx-1Tx UL Tx switching is configured as specified in TS 38.214 [19].
<i>switchingOptionConfigForBandPair</i> Indicates the switching option for the band pair as specified in TS 38.214 [19], clause 6.1.6.
<i>switchingPeriodConfigForBandPair</i> Indicates the value of switching period for the band pair as specified in TS 38.214 [19], clause 6.1.6. Value <i>n35us</i> represents 35 us, <i>n140us</i> represents 140us. If the field is absent, 210 us is applied.

Conditional Presence	Explanation
<i>2Tx</i>	The field is optionally present, Need R, if <i>uplinkTxSwitching</i> is configured; otherwise it is absent, Need R.
<i>BWP-Reconfig</i>	The field is optionally present, Need N, if the BWPs are reconfigured or if serving cells are added or removed. Otherwise it is absent.
<i>DirectToIndirect-PathSwitch</i>	The field is mandatory present for the L2 U2N remote UE at path switch to the target L2 U2N Relay UE (including direct to indirect path switch and indirect to indirect path switch). It is absent otherwise. Note: the target L2 U2N Relay UE should not be the same as serving L2 U2N Relay UE for inter-gNB indirect to indirect path switch.
<i>MP</i>	This field is optionally present, Need N, if a L2 U2N remote UE is configured to perform MP direct path addition during indirect-to-direct path swith procedure, or to perform MP direct path release during direct-to-indirect path switch procedure. It is absent otherwise.
<i>NCR</i>	The field is optionally present, Need M, for NCR-MT. It is absent otherwise.
<i>PreConfigMG</i>	The field is optionally present, Need R, if there is at least one per UE gap configured with <i>preConfigInd</i> or there is at least one per FR gap of the same FR which the SCell belongs to and configured with <i>preConfigInd</i> . It is absent, Need R, otherwise.
<i>ReconfWithSync</i>	The field is mandatory present in the <i>RRCReconfiguration</i> message: - in each configured <i>CellGroupConfig</i> for which the SpCell changes, - in the <i>masterCellGroup</i>: - at change of AS security key derived from K_{gNB}, - in an <i>RRCReconfiguration</i> message contained in a <i>DLInformationTransferMRDC</i> message, - path switch of L2 U2N remote UE to the target PCell, - path switch of L2 U2N remote UE to the target L2 U2N Relay UE, - in the <i>secondaryCellGroup</i> at: - PSCell addition, - SCG resume with NR-DC or (NG)EN-DC, - update of required SI for PSCell, - change of AS security key derived from $S-K_{gNB}$ in NR-DC while the UE is configured with at least one radio bearer with <i>keyToUse</i> set to <i>secondary</i> and that is not released by this <i>RRCReconfiguration</i> message, - MN handover in (NG)EN-DC. Otherwise, it is optionally present, need M. The field is absent in the <i>masterCellGroup</i> in <i>RRCResume</i> and <i>RRCSetup</i> messages and is absent in the <i>masterCellGroup</i> in <i>RRCReconfiguration</i> messages if source configuration is not released during DAPS handover.
<i>SCellAdd</i>	The field is mandatory present upon SCell addition; otherwise it is absent, Need M.
<i>SCellAddMod</i>	The field is mandatory present upon SCell addition; otherwise it is optionally present, need M.
<i>SCellAddSync</i>	The field is optionally present, Need N: - in the <i>masterCellGroup</i> at - SCell addition, - reconfiguration with sync, - resume of an RRC connection. - in the <i>secondaryCellGroup</i>, when the SCG is not indicated as deactivated at: - SCG activation while the SCG was previously deactivated, - SCell addition, - reconfiguration with sync. It is absent otherwise.
<i>SCG</i>	The field is mandatory present in an <i>SpCellConfig</i> for the PSCell. It is absent otherwise.
<i>SCellSIB20-Opt</i>	This field is optionally present, Need M, if the field <i>sCellSIB20</i> is configured. It is absent otherwise.
<i>SCG-Opt</i>	The field is optionally present, Need M, in an <i>SpCellConfig</i> for the PSCell. It is absent otherwise.

NOTE: In case of change of AS security key derived from $S\text{-}K_{\text{gNB}}/S\text{-}K_{\text{eNB}}$, if *reconfigurationWithSync* is not included in the *masterCellGroup*, the network releases all existing MCG RLC bearers associated with a radio bearer with *keyToUse* set to *secondary*. In case of change of AS security key derived from $K_{\text{gNB}}/K_{\text{eNB}}$, if *reconfigurationWithSync* is not included in the *secondaryCellGroup*, the network releases all existing SCG RLC bearers associated with a radio bearer with *keyToUse* set to *master*.

– *CellGroupId*

The IE *CellGroupId* is used to identify a cell group. Value 0 identifies the master cell group. Other values identify secondary cell groups. In this version of the specification only values 0 and 1 are supported.

CellGroupId information element

```
-- ASN1START
-- TAG-CELLGROUPID-START

CellGroupId ::=                               INTEGER (0.. maxSecondaryCellGroups)

-- TAG-CELLGROUPID-STOP
-- ASN1STOP
```

– *CellIdentity*

The IE *CellIdentity* is used to unambiguously identify a cell within a PLMN/SNPN.

CellIdentity information element

```
-- ASN1START
-- TAG-CELLIDENTITY-START

CellIdentity ::=                             BIT STRING (SIZE (36))

-- TAG-CELLIDENTITY-STOP
-- ASN1STOP
```

– *CellReselectionPriority*

The IE *CellReselectionPriority* concerns the absolute priority of the concerned carrier frequency, as used by the cell reselection procedure. Corresponds to parameter "priority" in TS 38.304 [20]. Value 0 means lowest priority. The UE behaviour for the case the field is absent, if applicable, is specified in TS 38.304 [20].

***CellReselectionPriority* information element**

```
-- ASN1START
-- TAG-CELLRESELECTIONPRIORITY-START
```

```
CellReselectionPriority ::= INTEGER (0..7)
```

```
-- TAG-CELLRESELECTIONPRIORITY-STOP
-- ASN1STOP
```

— ***CellReselectionSubPriority***

The IE *CellReselectionSubPriority* indicates a fractional value to be added to the value of *cellReselectionPriority* to obtain the absolute priority of the concerned carrier frequency for E-UTRA and NR. Value *oDot2* corresponds to 0.2, value *oDot4* corresponds to 0.4 and so on.

***CellReselectionSubPriority* information element**

```
-- ASN1START
-- TAG-CELLRESELECTIONSUBPRIORITY-START
```

```
CellReselectionSubPriority ::= ENUMERATED {oDot2, oDot4, oDot6, oDot8}
```

```
-- TAG-CELLRESELECTIONSUBPRIORITY-STOP
-- ASN1STOP
```

— ***CFR-ConfigMulticast***

The IE *CFR-ConfigMulticast* indicates UE specific common frequency resource configuration for multicast for one dedicated BWP.

***CFR-ConfigMulticast* information element**

```
-- ASN1START
-- TAG-CFR-CONFIGMULTICAST-START
```

```
CFR-ConfigMulticast-r17 ::= SEQUENCE {
    locationAndBandwidthMulticast-r17      INTEGER (0..37949)          OPTIONAL, -- Need S
    pdcch-ConfigMulticast-r17              PDCCH-Config          OPTIONAL, -- Need M
    pdsch-ConfigMulticast-r17              PDSCH-Config          OPTIONAL, -- Need M
    sps-ConfigMulticastToAddModList-r17    SPS-ConfigMulticastToAddModList-r17 OPTIONAL, -- Need N
    sps-ConfigMulticastToReleaseList-r17    SPS-ConfigMulticastToReleaseList-r17 OPTIONAL -- Need N
}
```

```
SPS-ConfigMulticastToAddModList-r17 ::= SEQUENCE (SIZE (1..8)) OF SPS-Config
```

```
SPS-ConfigMulticastToReleaseList-r17 ::= SEQUENCE (SIZE (1..8)) OF SPS-ConfigIndex-r16
```

```
-- TAG-CFR-CONFIGMULTICAST-STOP
```


-- ASN1STOP

CFR-ConfigMulticast field descriptions
locationAndBandwidthMulticast Frequency domain location and bandwidth for MBS multicast. The value of the field shall be interpreted as resource indicator value (RIV) as defined in TS 38.214 [19] with assumptions as described in TS 38.213 [13], clause 12, i.e. setting N ^{size_BWP} =275. The first PRB is a PRB determined by <i>subcarrierSpacing</i> of the associated BWP and <i>offsetToCarrier</i> corresponding to this subcarrier spacing. If not configured, the UE applies the value of <i>locationAndBandwidth</i> of the DL BWP in which the <i>cfrr-ConfigMulticast</i> is configured.
pdcch-ConfigMulticast UE specific group-common PDCCH configuration for MBS multicast for one CFR.
pdsch-ConfigMulticast UE specific group-common PDSCH configuration for MBS multicast for one CFR.
sps-ConfigMulticastToAddModList Indicates a list of one or more DL SPS configurations for MBS multicast.
sps-ConfigMulticastToReleaseList Indicates a list of one or more DL SPS configurations to be released. The NW may release a SPS configuration at any time.

— CGI-InfoEUTRA

The IE CGI-InfoEUTRA indicates EUTRA cell access related information, which is reported by the UE as part of E-UTRA report CGI procedure.

CGI-InfoEUTRA information element

```
-- ASN1START
-- TAG-CGI-INFOEUTRA-START

CGI-InfoEUTRA ::=
  cgi-info-EPC
    cgi-info-EPC-legacy
    cgi-info-EPC-list
  }
  cgi-info-5GC
  freqBandIndicator
  multiBandInfoList
  freqBandIndicatorPriority
}

SEQUENCE {
  SEQUENCE {
    CellAccessRelatedInfo-EUTRA-EPC,
    SEQUENCE (SIZE (1..maxPLMN)) OF CellAccessRelatedInfo-EUTRA-EPC
  }
  SEQUENCE (SIZE (1..maxPLMN)) OF CellAccessRelatedInfo-EUTRA-5GC
  FreqBandIndicatorEUTRA,
  MultiBandInfoListEUTRA
  ENUMERATED {true}
}

OPTIONAL
OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL
```

— CGI-InfoEUTRALogging

The IE CGI-InfoEUTRALogging indicates EUTRA cell related information, which is reported by the UE as part of RLF reporting procedure.

CGI-InfoEUTRALogging information element

```
-- ASN1START
-- TAG-CGI-INFOEUTRALOGGING-START

CGI-InfoEUTRALogging ::=
    plmn-Identity-eutra-5gc          PLMN-Identity          OPTIONAL,
    trackingAreaCode-eutra-5gc       TrackingAreaCode       OPTIONAL,
    cellIdentity-eutra-5gc           BIT STRING (SIZE (28))  OPTIONAL,
    plmn-Identity-eutra-epc          PLMN-Identity          OPTIONAL,
    trackingAreaCode-eutra-epc       BIT STRING (SIZE (16))  OPTIONAL,
    cellIdentity-eutra-epc           BIT STRING (SIZE (28))  OPTIONAL
}

-- TAG-CGI-INFOEUTRALOGGING-STOP
-- ASN1STOP
```

CGI-InfoEUTRALogging field descriptions
cellIdentity-eutra-epc, cellIdentity-eutra-5GC Unambiguously identify a cell within the context of the PLMN. It belongs the first PLMN entry of <i>plmn-IdentityList</i> (when connected to EPC) or of <i>plmn-IdentityList-r15</i> (when connected to 5GC) in <i>SystemInformationBlockType1</i> .
plmn-Identity-eutra-epc, plmn-Identity-eutra-5GC Identifies the PLMN of the cell for the reported <i>cellIdentity</i> : the first PLMN entry of <i>plmn-IdentityList</i> (when connected to EPC) or of <i>plmn-IdentityList-r15</i> (when connected to 5GC) in <i>SystemInformationBlockType1</i> that contained the reported <i>cellIdentity</i> .
trackingAreaCode-eutra-epc, trackingAreaCode-eutra-5gc Indicates Tracking Area Code to which the cell indicated by <i>cellIdentity-eutra-epc</i> , <i>cellIdentity-eutra-5GC</i> belongs.

– CGI-InfoNR

The IE *CGI-InfoNR* indicates cell access related information, which is reported by the UE as part of report CGI procedure.

CGI-InfoNR information element

```
-- ASN1START
-- TAG-CGI-INFO-NR-START

CGI-InfoNR ::=
    plmn-IdentityInfoList          PLMN-IdentityInfoList    OPTIONAL,
    frequencyBandList              MultiFrequencyBandListNR  OPTIONAL,
    noSIB1                         SEQUENCE {
        ssb-SubcarrierOffset       INTEGER (0..15),
        pdccch-ConfigSIB1          PDCCCH-ConfigSIB1
    }                                OPTIONAL,
    ...,
    [[
        npn-IdentityInfoList-r16    NPN-IdentityInfoList-r16  OPTIONAL
    ]],
    [[
```

```
        cellReservedForOtherUse-r16      ENUMERATED {true}      OPTIONAL
      ]]
    }

-- TAG-CGI-INFO-NR-STOP
-- ASN1STOP
```

CGI-InfoNR field descriptions
noSIB1 Contains <i>ssb-SubcarrierOffset</i> and <i>pdccch-ConfigSIB1</i> fields acquired by the UE from <i>MIB</i> of the cell for which report CGI procedure was requested by the network in case <i>SIB1</i> was not broadcast by the cell.
cellReservedForOtherUse Contains <i>cellReservedForOtherUse</i> field acquired by the UE that supports <i>nr-CGI-Reporting-NPN</i> from <i>SIB1</i> of the cell for which report CGI procedure was requested by the network.

– CGI-Info-Logging

The IE *CGI-Info-Logging* indicates the NR Cell Global Identifier (NCGI) for logging purposes (e.g. RLF report), the globally unique identity, and the TAC information of a cell in NR.

CGI-Info-Logging information element

```
-- ASN1START
-- TAG-CGI-INFO-LOGGING-START

CGI-Info-Logging-r16 ::= SEQUENCE {
  plmn-Identity-r16      PLMN-Identity,
  cellIdentity-r16      CellIdentity,
  trackingAreaCode-r16   TrackingAreaCode      OPTIONAL
}

-- TAG-CGI-INFO-LOGGING-STOP
-- ASN1STOP
```

CGI-Info-Logging field descriptions
cellIdentity Unambiguously identify a cell within the context of the PLMN. It belongs the first <i>PLMN-IdentityInfo</i> IE of <i>PLMN-IdentityInfoList</i> in <i>SIB1</i> .
plmn-Identity Identifies the PLMN of the cell for the reported <i>cellIdentity</i> : the first PLMN entry of <i>plmn-IdentityList</i> (in <i>SIB1</i>) in the instance of <i>PLMN-IdentityInfoList</i> that contained the reported <i>cellIdentity</i> .
trackingAreaCode Indicates Tracking Area Code to which the cell indicated by <i>cellIdentity</i> field belongs.

— *CLI-RSSI-Range*

The IE *CLI-RSSI-Range* specifies the value range used in CLI-RSSI measurements and thresholds. The integer value for CLI-RSSI measurements is according to Table 10.1.22.2.2-1 in TS 38.133 [14].

CLI-RSSI-Range information element

```
-- ASN1START
-- TAG-CLI-RSSI-RANGE-START

CLI-RSSI-Range-r16 ::=                INTEGER(0..76)

-- TAG-CLI-RSSI-RANGE-STOP
-- ASN1STOP
```

— *ClockQualityMetrics*

The IE *ClockQualityMetrics* is used to configure RAN timing synchronisation status information as specified in TS 38.473 [36]

ClockQualityMetrics information element

```
-- ASN1START
-- TAG-CLOCKQUALITYMETRICS-START

ClockQualityMetrics-r18 ::= SEQUENCE {
    synchronisationState-r18      ENUMERATED {locked, holdover, freerun, spare1}      OPTIONAL, -- Need N
    traceabilityToUTC-r18         BOOLEAN                                           OPTIONAL, -- Need N
    traceabilityToGNSS-r18        BOOLEAN                                           OPTIONAL, -- Need N
    clockFrequencyStability-r18   BIT STRING (SIZE(16))                          OPTIONAL, -- Need N
    clockAccuracy-r18             CHOICE {
        value INTEGER (1..400000000),
        index INTEGER (32..47)
    }
    parentTimeSource-r18          ENUMERATED {syncE, pTP, gNSS,atomicClock, terrestrialRadio,
        serialTimeCode, nTP, handset, other, spare7,
        spare6, spare5, spare4, spare3, spare2, spare1}
    ...
}

-- TAG-CLOCKQUALITYMETRICS-STOP
-- ASN1STOP
```

— *CodebookConfig*

The IE *CodebookConfig* is used to configure codebooks of Type-I and Type-II (see TS 38.214 [19], clause 5.2.2.2)

CodebookConfig information element

```

-- ASN1START
-- TAG-CODEBOOKCONFIG-START

CodebookConfig ::=
  codebookType
    type1
      subType
        typeI-SinglePanel
          nrOfAntennaPorts
            two
              twoTX-CodebookSubsetRestriction
            },
            moreThanTwo
              n1-n2
                two-one-TypeI-SinglePanel-Restriction
                two-two-TypeI-SinglePanel-Restriction
                four-one-TypeI-SinglePanel-Restriction
                three-two-TypeI-SinglePanel-Restriction
                six-one-TypeI-SinglePanel-Restriction
                four-two-TypeI-SinglePanel-Restriction
                eight-one-TypeI-SinglePanel-Restriction
                four-three-TypeI-SinglePanel-Restriction
                six-two-TypeI-SinglePanel-Restriction
                twelve-one-TypeI-SinglePanel-Restriction
                four-four-TypeI-SinglePanel-Restriction
                eight-two-TypeI-SinglePanel-Restriction
                sixteen-one-TypeI-SinglePanel-Restriction
              },
              typeI-SinglePanel-codebookSubsetRestriction-i2
            },
            typeI-SinglePanel-ri-Restriction
          },
          typeI-MultiPanel
            ng-n1-n2
              two-two-one-TypeI-MultiPanel-Restriction
              two-four-one-TypeI-MultiPanel-Restriction
              four-two-one-TypeI-MultiPanel-Restriction
              two-two-two-TypeI-MultiPanel-Restriction
              two-eight-one-TypeI-MultiPanel-Restriction
              four-four-one-TypeI-MultiPanel-Restriction
              two-four-two-TypeI-MultiPanel-Restriction
              four-two-two-TypeI-MultiPanel-Restriction
            },
            ri-Restriction
          },
          codebookMode
        },
        type2
          subType

```

SEQUENCE {
 CHOICE {
 SEQUENCE {
 CHOICE {
 SEQUENCE {
 CHOICE {
 SEQUENCE {
 BIT STRING (SIZE (6))
 },
 SEQUENCE {
 CHOICE {
 BIT STRING (SIZE (8)),
 BIT STRING (SIZE (64)),
 BIT STRING (SIZE (16)),
 BIT STRING (SIZE (96)),
 BIT STRING (SIZE (24)),
 BIT STRING (SIZE (128)),
 BIT STRING (SIZE (32)),
 BIT STRING (SIZE (192)),
 BIT STRING (SIZE (192)),
 BIT STRING (SIZE (48)),
 BIT STRING (SIZE (256)),
 BIT STRING (SIZE (256)),
 BIT STRING (SIZE (64))
 },
 BIT STRING (SIZE (16)) OPTIONAL -- Need R
 },
 BIT STRING (SIZE (8))
 },
 SEQUENCE {
 CHOICE {
 BIT STRING (SIZE (8)),
 BIT STRING (SIZE (16)),
 BIT STRING (SIZE (8)),
 BIT STRING (SIZE (64)),
 BIT STRING (SIZE (32)),
 BIT STRING (SIZE (16)),
 BIT STRING (SIZE (128)),
 BIT STRING (SIZE (64))
 },
 BIT STRING (SIZE (4))
 },
 INTEGER (1..2)
 },
 SEQUENCE {
 CHOICE {

```

typeII
    n1-n2-codebookSubsetRestriction
        two-one
        two-two
        four-one
        three-two
        six-one
        four-two
        eight-one
        four-three
        six-two
        twelve-one
        four-four
        eight-two
        sixteen-one
    },
    typeII-RI-Restriction
        BIT STRING (SIZE (2))
    },
    typeII-PortSelection
        portSelectionSamplingSize
        typeII-PortSelectionRI-Restriction
    }
    },
    phaseAlphabetSize
    subbandAmplitude
    numberOfBeams
}
}
}

CodebookConfig-r16 ::=
    codebookType
        type2
            subType
                typeII-r16
                    n1-n2-codebookSubsetRestriction-r16
                        two-one
                        two-two
                        four-one
                        three-two
                        six-one
                        four-two
                        eight-one
                        four-three
                        six-two
                        twelve-one
                        four-four
                        eight-two
                        sixteen-one
                    },
                    typeII-RI-Restriction-r16
                        BIT STRING (SIZE(4))
                },
                typeII-PortSelection-r16
                    portSelectionSamplingSize-r16

```

```

        typeII-PortSelectionRI-Restriction-r16 BIT STRING (SIZE (4))
    },
    numberOfPMI-SubbandsPerCQI-Subband-r16 INTEGER (1..2),
    paramCombination-r16 INTEGER (1..8)
}
}

CodebookConfig-r17 ::=
    codebookType
        type1
            typeI-SinglePanel-Group1-r17
                nrOfAntennaPorts
                    two
                        twoTX-CodebookSubsetRestriction1-r17 BIT STRING (SIZE (6))
                    },
                    moreThanTwo
                        n1-n2
                            SEQUENCE {
                                CHOICE {
                                    two-one-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (8)),
                                    two-two-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (64)),
                                    four-one-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (16)),
                                    three-two-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (96)),
                                    six-one-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (24)),
                                    four-two-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (128)),
                                    eight-one-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (32)),
                                    four-three-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (192)),
                                    six-two-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (192)),
                                    twelve-one-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (48)),
                                    four-four-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (256)),
                                    eight-two-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (256)),
                                    sixteen-one-TypeI-SinglePanel-Restriction1-r17 BIT STRING (SIZE (64))
                                }
                            }
                        }
                    }
                }
            }
        typeI-SinglePanel-Group2-r17
            nrOfAntennaPorts
                two
                    twoTX-CodebookSubsetRestriction2-r17 BIT STRING (SIZE (6))
                },
                moreThanTwo
                    n1-n2
                        SEQUENCE {
                            CHOICE {
                                two-one-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (8)),
                                two-two-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (64)),
                                four-one-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (16)),
                                three-two-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (96)),
                                six-one-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (24)),
                                four-two-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (128)),
                                eight-one-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (32)),
                                four-three-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (192)),
                                six-two-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (192)),
                                twelve-one-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (48)),
                                four-four-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (256)),
                            }
                        }
                    }
                }
            }
        }
    }
}

```

OPTIONAL, -- Need R

```

        eight-two-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (256)),
        sixteen-one-TypeI-SinglePanel-Restriction2-r17 BIT STRING (SIZE (64))
    }
}
}
}
typeI-SinglePanel-ri-RestrictionSTRP-r17 BIT STRING (SIZE (8)) OPTIONAL, -- Need R
typeI-SinglePanel-ri-RestrictionSDM-r17 BIT STRING (SIZE (4)) OPTIONAL, -- Need R
},
type2 SEQUENCE {
    typeII-PortSelection-r17 SEQUENCE {
        paramCombination-r17 INTEGER (1..8),
        valueOfN-r17 ENUMERATED {n2, n4} OPTIONAL, -- Need R
        numberOfPMI-SubbandsPerCQI-Subband-r17 INTEGER(1..2) OPTIONAL, -- Need R
        typeII-PortSelectionRI-Restriction-r17 BIT STRING (SIZE (4))
    }
}
}
}
}
CodebookConfig-v1730 ::=
    codebookType
        type1
            codebookMode
        }
    }
}
CodebookConfig-r18 ::=
    codebookType
        type2
            typeII-CJT-r18 SEQUENCE {
                n1-n2-codebookSubsetRestrictionList-r18 N1-N2-CBSR-List-r18,
                paramCombination-CJT-r18 INTEGER (1..7),
                paramCombination-CJT-L-r18 SEQUENCE (SIZE (1..4)) OF INTEGER (1..5),
                restrictedCMR-Selection-r18 ENUMERATED {enable},
                valueOf03-r18 ENUMERATED {n1, n4} OPTIONAL, -- Need R
                numberOfPMI-SubbandsPerCQI-Subband-r18 INTEGER(1..2),
                typeII-RI-Restriction-r18 BIT STRING (SIZE (4)),
                codebookMode-r18 INTEGER (1..2)
            },
            typeII-CJT-PortSelection-r18 SEQUENCE {
                paramCombination-CJT-PS-r18 INTEGER (1..5),
                paramCombination-CJT-PS-alpha-r18 SEQUENCE (SIZE (1..4)) OF INTEGER (1..8),
                restrictedCMR-Selection-r18 ENUMERATED {enable},
                valueOf03-r18 ENUMERATED {n1, n4} OPTIONAL, -- Need R
                valueOfN-CJT-r18 ENUMERATED {n2, n4} OPTIONAL, -- Need R
                numberOfPMI-SubbandsPerCQI-Subband-r18 INTEGER(1..2),
                typeII-PortSelectionRI-Restriction-r18 BIT STRING (SIZE (4)),
                codebookMode-r18 INTEGER (1..2)
            },
            typeII-Doppler-r18 SEQUENCE {
                n1-n2-codebookSubsetRestriction-r18 N1-N2-CBSR-r18,
                paramCombination-Doppler-r18 INTEGER (1..9),
            }
        }
    }
}

```



```

        td-dd-config-r18
        numberOfPMI-SubbandsPerCQI-Subband-r18
        predictionDelay-r18
        typeII-RI-Restriction-r18
    },
    typeII-DopplerPortSelection-r18
    paramCombinationDoppler-PS-r18
    td-dd-config-r18
    valueOfN-Doppler-r18
    numberOfPMI-SubbandsPerCQI-Subband-r18
    predictionDelay-r18
    typeII-PortSelectionRI-Restriction-r18
}
}
}
}

N1-N2-CBSR-List-r18 ::= CHOICE {
    two-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (8))},
    two-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (27))},
    four-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (16))},
    three-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (35))},
    six-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (24))},
    four-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (43))},
    eight-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (32))},
    four-three-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (59))},
    twelve-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (48))},
    four-four-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (75))},
    eight-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (75))},
    sixteen-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-list-r18 SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (64))}
}

N1-N2-CBSR-r18 ::= CHOICE {
    two-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (8))},
    two-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (27))},
    four-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (16))},
    three-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (35))},
    six-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (24))},
    four-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (43))},
    eight-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (32))},
    four-three-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (59))},
    twelve-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (48))},
    four-four-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (75))},
    eight-two-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (75))},
    sixteen-one-r18 CHOICE {no-cbsr-r18 NULL, cbsr-r18 BIT STRING (SIZE (64))}
}

TD-DD-Config-r18 ::= SEQUENCE {
    vectorLengthDD-r18 ENUMERATED {n1, n2, n4, n8},
    unitDurationDD-r18 ENUMERATED {m1, m2} OPTIONAL, -- Need R
    aperiodicResourceOffset-r18 INTEGER(1..2) OPTIONAL, -- Need R
    tdCQI-r18 ENUMERATED {n11, n12, n2, spare1} OPTIONAL, -- Need R
}

```

-- TAG-CODEBOOKCONFIG-STOP
-- ASN1STOP

CodebookConfig field descriptions
codebookMode CodebookMode as specified in TS 38.214 [19], clause 5.2.2.2 8 and 5.2.2.9.
codebookType CodebookType including possibly sub-types and the corresponding parameters for each (see TS 38.214 [19], clause 5.2.2.2).
n1-n2-codebookSubsetRestriction, n1-n2-codebookSubsetRestrictionList Number of antenna ports in first (<i>n1</i>) and second (<i>n2</i>) dimension and codebook subset restriction (see TS 38.214 [19] clause 5.2.2.2.3). Value <i>no-cbsr</i> means no codebook subset restriction is configured for the <i>n1-n2</i> pair. If a codebook subset restriction is configured for the <i>n1-n2</i> pair, the number of elements in <i>cbsr-list</i> in <i>n1-n2-codebookSubSetRestrictionList</i> is up to the number of elements of <i>nzp-CSI-RS-Resources</i> in <i>NZP-CSI-RS-ResourceSet(s)</i> indicated by <i>nzp-CSI-RS-ResourceSetList</i> in the <i>CSI-ResourceConfig</i> indicated by <i>resourcesForChannelMeasurement</i> in the <i>CSI-ReportConfig</i> in which the <i>CodebookConfig</i> is included. An element in the list corresponds to the element at the same position in <i>nzp-CSI-RS-Resources</i> .
n1-n2 Number of antenna ports in first (<i>n1</i>) and second (<i>n2</i>) dimension and codebook subset restriction (see TS 38.214 [19] clause 5.2.2.2.1).
ng-n1-n2 Codebook subset restriction for Type I Multi-panel codebook (see TS 38.214 [19], clause 5.2.2.2.2).
numberOfBeams Number of beams, <i>L</i> , used for linear combination.
numberOfPMI-SubbandsPerCQI-Subband Field indicates how PMI subbands are defined per CQI subband according to TS 38.214 [19], clause 5.2.2.2.5, 5.2.2.2.8 and 5.2.2.9.
paramCombination, paramCombination-CJT-r18, paramCombination-CJT-L-r18, paramCombination-CJT-PS-r18, paramCombination-CJT-PS-alpha, paramCombinationDoppler-r18, paramCombinationDoppler-PS-r18 Field describes supported parameter combination (<i>M</i> , ,) as specified in TS 38.214 [19] Clause 5.2.2. For fields <i>paramCombination-CJT-L-r18</i> or <i>paramCombination-CJT-PS-alpha</i> the number of elements is 1, 2 or 4, and the values are configured according to the number of <i>nzp-CSI-RS-Resources</i> in <i>NZP-CSI-RS-ResourceSet</i> elements from Tables 5.2.2.2.8-1 and 5.2.2.2.9-1 in TS 38.214 [19], respectively. The allowed configuration combinations for <i>paramCombination-CJT-r18</i> and <i>paramCombination-CJT-L-r18</i> are given in Table 5.2.2.2.8-3 in TS 38.214 [19]. The allowed configuration combinations for <i>paramCombination-CJT-PS-r18</i> and <i>paramCombination-CJT-PS-alpha-r18</i> are given in Table 5.2.2.2.9-3 in TS 38.214 [19].
phaseAlphabetSize The size of the PSK alphabet, QPSK or 8-PSK.
portSelectionSamplingSize The size of the port selection codebook (parameter <i>d</i>), see TS 38.214 [19] clause 5.2.2.2.6.
predictionDelay Prediction delay for Doppler and Doppler port selection codebooks see TS 38.214 [19], Clause 5.2.1.4. The first value <i>m0</i> means that the first slot for which the CSI corresponds to is the slot where the CSI reference resource is located at. For the other three candidate values (<i>n0</i> , <i>n1</i> , <i>n2</i>), then the first slot for which the CSI corresponds to is given by $l = n + \text{delta}$, where <i>delta</i> can take on values of 0, 1, 2 and <i>n</i> the slot in which CSI is reported.
restrictedCMR-Selection Enabling CSI-RS resource (CMR) restriction, (see TS 38.214 [19], clause 5.2.2.2.8)
ri-Restriction Restriction for RI for <i>Type1-MultiPanel-RI-Restriction</i> (see TS 38.214 [19], clause 5.2.2.2.2).
subbandAmplitude If subband amplitude reporting is activated (<i>true</i>).
twoTX-CodebookSubsetRestriction Codebook subset restriction for 2TX codebook (see TS 38.214 [19] clause 5.2.2.2.1).
type1-SinglePanel-codebookSubsetRestriction-i2 <i>i2</i> codebook subset restriction for Type I Single-panel codebook used when <i>reportQuantity</i> is <i>CRI/RI/i1/CQI</i> (see TS 38.214 [19] clause 5.2.2.2.1).
type1-SinglePanel-ri-Restriction Restriction for RI for <i>Type1-SinglePanel-RI-Restriction</i> (see TS 38.214 [19], clause 5.2.2.2.1).

type1-SinglePanel-Group1, type1-SinglePanel-Group2 Configures codebooks for CSI calculation when UE is configured with two CMR Groups with <i>CMRGroupingAndPairing</i> in the <i>NZP-CSI-RS-ResourceSet</i> associated with the <i>CSI-ReportConfig</i> . Network configures the same number of ports for both codebooks.
type1-SinglePanel-ri-RestrictionSDM, type1-SinglePanel-ri-RestrictionSTRP Restriction for RI for <i>N</i> Resource Pairs when two CMR Groups are configured with <i>CMRGroupingAndPairing</i> in the <i>NZP-CSI-RS-ResourceSet</i> associated with the <i>CSI-ReportConfig</i> (see TS 38.214 [19], clause 5.2.1.4.2).
type1-PortSelectionRI-Restriction Restriction for RI for <i>Type1-PortSelection-RI-Restriction</i> (see TS 38.214 [19], clauses 5.2.2.2.4, 5.2.2.2.6 and 5.2.2.2.7).
type1-RI-Restriction Restriction for RI for <i>Type1-RI-Restriction</i> (see TS 38.214 [19], clauses 5.2.2.2.3 and 5.2.2.2.5).
valueOfN Field provides the value of parameter <i>N</i> as specified in TS 38.214 [19], clause 5.2.2.2.7. The field is present only when <i>M=2</i> set by <i>paramCombination</i> , see TS 38.214 [19].
valueOfO3 O3: oversampling factor for frequency-domain basis selection offset Only applicable when <i>CodebookMode</i> = 'Mode1'.
valueOfN-CJT Field describes the size of the window of FD basis for FeType-II port selection codebook for multi-TRP CJT. For <i>M=2</i> , <i>N=2,4</i> (see TS 38.214 [19], clause 5.2.2.2.9)
valueOfN-Doppler Field describes the size of the window of FD basis for FeType-II port selection codebook for Doppler CSI. For <i>M=2</i> , <i>N=2,4</i> (see TS 38.214 [19], clause 5.2.2.2.9)

TD-DD-Config field descriptions
aperiodicResourceOffset Offset <i>m</i> (in slots) between two consecutive aperiodic CSI-RS resources. See TS 38.214 [19], clause 5.2.1.4.
tdCQI Number of TD CQIs (<i>X</i>) in each SB and ref slot(s) + ref <i>W2</i> (s). 1-1: 1 TD CQI, ref = 1st slot and 1st <i>W2</i> 1-2: 1 TD CQI, ref = 1st and last slots, and 1st and last <i>W2</i> 2: 2 TD CQIs (see TS 38.214 [19], clause 5.2.1.4).
unitDurationDD DD/TD unit duration (in slots), for AP-CSI-RS only. Note: For P/SP-CSI-RS, <i>d</i> is set to CSI-RS periodicity (see TS 38.214 [19], clause 5.2.1.4). If the value of <i>aperiodicResourceOffset</i> is '1', network configures value ' <i>m1</i> ' for this field. Value <i>m1</i> corresponds to 1 slot and value <i>m2</i> corresponds to 2 slots.
vectorLengthDD Doppler-/time-domain (DD/TD) basis vector length; See TS 38.214 [19], clause 5.2.1.4.

– CommonLocationInfo

The IE *CommonLocationInfo* is used to transfer detailed location information available at the UE to correlate measurements and UE position information.

CommonLocationInfo information element

-- ASN1START
-- TAG-COMMONLOCATIONINFO-START

```
CommonLocationInfo-r16 ::= SEQUENCE {
    gnss-TOD-msec-r16      OCTET STRING  OPTIONAL,
    locationTimestamp-r16  OCTET STRING  OPTIONAL,
    locationCoordinate-r16 OCTET STRING  OPTIONAL,
    locationError-r16      OCTET STRING  OPTIONAL,
    locationSource-r16     OCTET STRING  OPTIONAL,
    velocityEstimate-r16   OCTET STRING  OPTIONAL
}

-- TAG-COMMONLOCATIONINFO-STOP
-- ASN1STOP
```

CommonLocationInfo field descriptions
gnss-TOD-msec Parameter type <i>gnss-TOD-msec</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.
locationTimeStamp Parameter type <i>DisplacementTimeStamp</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.
locationCoordinate Parameter type <i>LocationCoordinates</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.
locationError Parameter <i>LocationError</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.
locationSource Parameter <i>LocationSource</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.
velocityEstimate Parameter type <i>Velocity</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.

— *CondReconfigId*

The IE *CondReconfigId* is used to identify a CHO, CPA, CPC, subsequent CPAC, or CHO with candidate SCG(s) configuration.

***CondReconfigId* information element**

```
-- ASN1START
-- TAG-CONDRECONFIGID-START

CondReconfigId-r16 ::=
    INTEGER (1.. maxNrofCondCells-r16)

-- TAG-CONDRECONFIGID-STOP
-- ASN1STOP
```

— *CondReconfigToAddModList*

The IE *CondReconfigToAddModList* concerns a list of conditional reconfigurations to add or modify, with for each entry the *condReconfigId* and the associated fields.

CondReconfigToAddModList information element

```

-- ASN1START
-- TAG-CONDRECONFIGTOADDMODLIST-START

CondReconfigToAddModList-r16 ::= SEQUENCE (SIZE (1.. maxNrofCondCells-r16)) OF CondReconfigToAddMod-r16

CondReconfigToAddMod-r16 ::= SEQUENCE {
    condReconfigId-r16          CondReconfigId-r16,
    condExecutionCond-r16       SEQUENCE (SIZE (1..2)) OF MeasId          OPTIONAL,    -- Need M
    condRRCReconfig-r16         OCTET STRING (CONTAINING RRCReconfiguration) OPTIONAL,    -- Cond condReconfigAdd
    ...,
    [[
        condExecutionCondSCG-r17 OCTET STRING (CONTAINING CondReconfigExecCondSCG-r17) OPTIONAL -- Need M
    ]],
    [[
        condExecutionCondPSCell-r18 SEQUENCE (SIZE (1..2)) OF MeasId          OPTIONAL,    -- Cond condReconfigCHO-WithSCG
        subsequentCondReconfig-r18 SubsequentCondReconfig-r18              OPTIONAL,    -- Need M
        securityCellSetId-r18       SecurityCellSetId-r18                  OPTIONAL,    -- Need M
        scpac-ConfigComplete-r18    ENUMERATED {true}                     OPTIONAL,    -- Cond CPAC
    ]]
}

CondReconfigExecCondSCG-r17 ::= SEQUENCE (SIZE (1..2)) OF MeasId

SubsequentCondReconfig-r18 ::= SEQUENCE {
    condExecutionCondToReleaseList-r18 CondExecutionCondToReleaseList-r18 OPTIONAL,    -- Need N
    condExecutionCondToAddModList-r18  CondExecutionCondToAddModList-r18  OPTIONAL,    -- Need N
    ...
}

CondExecutionCondToAddModList-r18 ::= SEQUENCE (SIZE (1.. maxNrofCondCells-r16)) OF CondExecutionCondToAddMod-r18

CondExecutionCondToAddMod-r18 ::= SEQUENCE {
    subsequentCondReconfigId-r18      CondReconfigId-r16,
    subsequentCondExecutionCond-r18    SEQUENCE (SIZE (1..2)) OF MeasId          OPTIONAL,    -- Need M
    subsequentCondExecutionCondSCG-r18 OCTET STRING (CONTAINING CondReconfigExecCondSCG-r17) OPTIONAL,    -- Need M
    ...
}

CondExecutionCondToReleaseList-r18 ::= SEQUENCE (SIZE (1.. maxNrofCondCells-r16)) OF CondReconfigId-r16

-- TAG-CONDRECONFIGTOADDMODLIST-STOP
-- ASN1STOP

```

CondReconfigToAddMod field descriptions
condExecutionCond The execution condition that needs to be fulfilled in order to trigger the execution of a conditional reconfiguration for CHO, CPA, intra-SN CPC without MN involvement, MN initiated inter-SN CPC, MN initiated subsequent CPAC, or SN initiated intra-SN subsequent CPAC without MN involvement. When configuring 2 triggering events (Meas Ids) for a candidate cell, the network ensures that both refer to the same <i>measObject</i>. Except for CHO with only event <i>condEventD1</i>, or <i>condEventD2</i>, or <i>condEventT1</i>, if the network configures <i>condEventD1</i> or <i>condEventD2</i> or <i>condEventT1</i> for a candidate cell, the network configures a second triggering event <i>condEventA3</i>, <i>condEventA4</i> or <i>condEventA5</i> for the same candidate cell. The network configures at most one from <i>condEventD1</i>, <i>condEventD2</i> or <i>condEventT1</i> for the same candidate cell. For CPA, MN-initiated inter-SN CPC, and for MN initiated subsequent CPAC, the network only indicates <i>MeasId</i>(s) associated with <i>condEventA4</i>. For intra-SN CPC and for SN initiated intra-SN subsequent CPAC without MN involvement, the network only indicates <i>MeasId</i>(s) associated with <i>condEventA3</i> or <i>condEventA5</i>.
condExecutionCondPSCell The execution condition that needs to be fulfilled for the associated PSCell in order to trigger the execution of a conditional reconfiguration for CHO with candidate SCG(s). The Meas Ids refer to the <i>measConfig</i> associated with the MCG. When configuring 2 triggering events (Meas Ids) for a candidate cell, network ensures that both refer to the same <i>measObject</i>. The network only indicates <i>MeasId</i>(s) associated with <i>condEventA4</i>.
condExecutionCondSCG Contains execution condition that needs to be fulfilled in order to trigger the execution of a conditional reconfiguration for SN initiated inter-SN CPC, SN initiated inter-SN subsequent CPAC, or SN initiated intra-SN subsequent CPAC with MN involvement. The Meas Ids refer to the <i>measConfig</i> associated with the SCG. When configuring 2 triggering events (Meas Ids) for a candidate cell, network ensures that both refer to the same <i>measObject</i>. For each <i>condReconfigId</i>, the network always configures either <i>condExecutionCond</i> or <i>condExecutionCondSCG</i> (not both). The network only indicates <i>MeasId</i>(s) associated with <i>condEventA3</i> or <i>condEventA5</i>.
condRRCReconfig The <i>RRCReconfiguration</i> message to be applied when the condition(s) are fulfilled. The <i>RRCReconfiguration</i> message contained in <i>condRRCReconfig</i> cannot contain the field <i>conditionalReconfiguration</i> or the field <i>daps-Config</i>.
securityCellSetId This field is used to determine whether the UE should perform security update when conditional reconfiguration containing <i>subsequentCondReconfig</i> is executed. If the field <i>servingSecurityCellSetId</i> is configured in <i>conditionalReconfiguration</i>, this field is configured for all the candidate configurations for subsequent CPAC.
subsequentCondReconfig Contains the execution conditions that need to be fulfilled in order to trigger the execution of a subsequent CPAC. If the field is configured, the configuration of candidate PSCells for subsequent CPAC is supported. The subsequent execution condition is used for conditional reconfiguration evaluation for other candidate cells when the <i>RRCReconfiguration</i> message contained in <i>condRRCReconfig</i> has been applied.

CondExecutionCondToAddMod field descriptions
subsequentCondExecutionCond The execution condition that needs to be fulfilled in order to trigger the subsequent execution of a conditional reconfiguration for SN initiated intra-SN subsequent CPAC without MN involvement. When configuring 2 triggering events (Meas Ids) for a candidate cell, the network ensures that both refer to the same <i>measObject</i>. The network only indicates <i>MeasId</i>(s) associated with <i>condEventA3</i> or <i>condEventA5</i>.
subsequentCondExecutionCondSCG Contains execution condition that needs to be fulfilled in order to trigger the subsequent execution of a conditional reconfiguration for SN initiated inter-SN subsequent CPAC, SN initiated intra-SN subsequent CPAC with MN involvement, or MN initiated subsequent CPAC. The Meas Ids refer to the <i>measConfig</i> associated with the SCG. When configuring 2 triggering events (Meas Ids) for a candidate cell, network ensures that both refer to the same <i>measObject</i>. The network only indicates <i>MeasId</i>(s) associated with <i>condEventA3</i> or <i>condEventA5</i>.

Conditional Presence	Explanation
<i>condReconfigAdd</i>	The field is mandatory present when a <i>condReconfigId</i> is being added. Otherwise the field is optional, need M.
<i>condReconfigCHO-WithSCG</i>	This field is optional present, need M, if the <i>RRCReconfiguration</i> message contained in corresponding <i>condRRCReconfig</i> includes the <i>nr-SCG</i> and <i>condExecutionCond</i> is configured. Otherwise, it is absent.
<i>CPAC</i>	The field is optionally present, need M, when the conditional reconfiguration includes at least one candidate PSCell supporting subsequent CPAC. Otherwise, the field is absent, need R.

– ConditionalReconfiguration

The IE *ConditionalReconfiguration* is used to add, modify and release the configuration of conditional reconfiguration.

ConditionalReconfiguration information element

```
-- ASN1START
-- TAG-CONDITIONALRECONFIGURATION-START

ConditionalReconfiguration-r16 ::= SEQUENCE {
    attemptCondReconfig-r16      ENUMERATED {true}          OPTIONAL, -- Cond CHO
    condReconfigToRemoveList-r16 CondReconfigToRemoveList-r16 OPTIONAL, -- Need N
    condReconfigToAddModList-r16 CondReconfigToAddModList-r16 OPTIONAL, -- Need N
    ...,
    [[
        scpac-ReferenceConfiguration-r18 SetupRelease {ReferenceConfiguration-r18} OPTIONAL, -- Need M
        servingSecurityCellSetId-r18     SecurityCellSetId-r18      OPTIONAL, -- Need M
        sk-CounterConfiguration-r18      SK-CounterConfiguration-r18 OPTIONAL, -- Need M
    ]]
}

CondReconfigToRemoveList-r16 ::= SEQUENCE (SIZE (1.. maxNrofCondCells-r16)) OF CondReconfigId-r16

SK-CounterConfiguration-r18 ::= SEQUENCE {
    sk-CounterConfigToReleaseList-r18 SEQUENCE (SIZE (1..maxSecurityCellSet-r18)) OF SecurityCellSetId-r18 OPTIONAL, -- Need N
    sk-CounterConfigToAddModList-r18  SEQUENCE (SIZE (1..maxSecurityCellSet-r18)) OF SK-CounterConfig-r18  OPTIONAL, -- Need N
}

SK-CounterConfig-r18 ::= SEQUENCE {
    securityCellSetId-r18 SecurityCellSetId-r18,
    sk-CounterList-r18    SEQUENCE (SIZE (1..maxSK-Counter-r18)) OF SK-Counter
}

SecurityCellSetId-r18 ::= INTEGER (1.. maxSecurityCellSet-r18)

-- TAG-CONDITIONALRECONFIGURATION-STOP
-- ASN1STOP
```


<i>ConditionalReconfiguration</i> field descriptions	
<i>attemptCondReconfig</i>	If present, the UE shall perform conditional reconfiguration if selected cell is a target candidate cell and it is the first cell selection after failure as described in clause 5.3.7.3.
<i>condReconfigToAddModList</i>	List of the configuration of candidate SpCells to be added or modified for CHO, CPA or CPC.
<i>condReconfigToRemoveList</i>	List of the configuration of candidate SpCells to be removed.
<i>scpac-ReferenceConfiguration</i>	Includes the reference configuration for the candidate supporting subsequent CPAC.
<i>servingSecurityCellSetId</i>	This field identifies the security cell set for serving PSCell. The network does not provide this field for the conditional reconfiguration(s) generated by the SN.
<i>sk-counterConfiguration</i>	Includes a list of <i>sk-Counter</i> from which the UE should select the <i>sk-counter</i> used to derive S-K _{gNB} for inter-SN subsequent CPAC. The network does not provide this field for the conditional reconfiguration(s) generated by the SN.

Conditional Presence	Explanation
<i>CHO</i>	The field is optional present, Need R, if the UE is configured with at least a candidate SpCell for CHO. Otherwise the field is not present.

– *ConfiguredGrantConfig*

The IE *ConfiguredGrantConfig* is used to configure uplink transmission without dynamic grant according to two possible schemes. The actual uplink grant may either be configured via RRC (*type1*) or provided via the PDCCH (addressed to CS-RNTI) (*type2*). Multiple Configured Grant configurations may be configured in one BWP of a serving cell.

ConfiguredGrantConfig information element

```
-- ASN1START
-- TAG-CONFIGUREDGRANTCONFIG-START
```

```
ConfiguredGrantConfig ::=
    frequencyHopping                               SEQUENCE {
        cg-DMRS-Configuration                       ENUMERATED {intraSlot, interSlot}                OPTIONAL, -- Need S
        mcs-Table                                   DMRS-UplinkConfig,
        mcs-TableTransformPrecoder                 ENUMERATED {qam256, qam64LowSE}                OPTIONAL, -- Need S
        uci-OnPUSCH                                ENUMERATED {qam256, qam64LowSE}                OPTIONAL, -- Need S
        resourceAllocation                          SetupRelease { CG-UCI-OnPUSCH }                OPTIONAL, -- Need M
        rbg-Size                                    ENUMERATED { resourceAllocationType0, resourceAllocationType1, dynamicSwitch },
        powerControlLoopToUse                       ENUMERATED {config2}                            OPTIONAL, -- Need S
        p0-PUSCH-Alpha                             ENUMERATED {n0, n1},
        transformPrecoder                           P0-PUSCH-AlphaSetId,
        nrofHARQ-Processes                          ENUMERATED {enabled, disabled}                OPTIONAL, -- Need S
        repK                                         INTEGER(1..16),
        repK-RV                                     ENUMERATED {n1, n2, n4, n8},
        periodicity                                ENUMERATED {s1-0231, s2-0303, s3-0000}          OPTIONAL, -- Need R
        symmetry                                     ENUMERATED {
            sym2, sym7, sym1x14, sym2x14, sym4x14, sym5x14, sym8x14, sym10x14, sym16x14, sym20x14,
```



```

}
...,
[[
cg-RetransmissionTimer-r16      INTEGER (1..64)
cg-minDFI-Delay-r16            ENUMERATED
                                {sym7, sym1x14, sym2x14, sym3x14, sym4x14, sym5x14, sym6x14, sym7x14, sym8x14,
                                sym9x14, sym10x14, sym11x14, sym12x14, sym13x14, sym14x14, sym15x14, sym16x14}
                                OPTIONAL, -- Need R
cg-nrofPUSCH-InSlot-r16        INTEGER (1..7)
cg-nrofSlots-r16               INTEGER (1..40)
cg-StartingOffsets-r16         CG-StartingOffsets-r16
cg-UCI-Multiplexing-r16        ENUMERATED {enabled}
cg-COT-SharingOffset-r16       INTEGER (1..39)
betaOffsetCG-UCI-r16           INTEGER (0..31)
cg-COT-SharingList-r16         SEQUENCE (SIZE (1..1709)) OF CG-COT-Sharing-r16
harq-ProcID-Offset-r16         INTEGER (0..15)
harq-ProcID-Offset2-r16        INTEGER (0..15)
configuredGrantConfigIndex-r16 ConfiguredGrantConfigIndex-r16
configuredGrantConfigIndexMAC-r16 ConfiguredGrantConfigIndexMAC-r16
periodicityExt-r16             INTEGER (1..5120)
startingFromRV0-r16            ENUMERATED {on, off}
phy-PriorityIndex-r16          ENUMERATED {p0, p1}
autonomousTx-r16              ENUMERATED {enabled}
                                OPTIONAL
]],
[[
cg-betaOffsetsCrossPri0-r17     SetupRelease { BetaOffsetsCrossPriSelCG-r17 }
cg-betaOffsetsCrossPri1-r17     SetupRelease { BetaOffsetsCrossPriSelCG-r17 }
mappingPattern-r17             ENUMERATED {cyclicMapping, sequentialMapping}
sequenceOffsetForRV-r17         INTEGER (0..3)
p0-PUSCH-Alpha2-r17            P0-PUSCH-AlphaSetId
powerControlLoopToUse2-r17      ENUMERATED {n0, n1}
cg-COT-SharingList-r17         SEQUENCE (SIZE (1..50722)) OF CG-COT-Sharing-r17
periodicityExt-r17             INTEGER (1..40960)
repK-v1710                     ENUMERATED {n12, n16, n24, n32}
nrofHARQ-Processes-v1700        INTEGER(17..32)
harq-ProcID-Offset2-v1700       INTEGER (16..31)
configuredGrantTimer-v1700      INTEGER(33..288)
cg-minDFI-Delay-v1710          INTEGER (238..3584)
]],
[[
harq-ProcID-Offset-v1730        INTEGER (16..31)
cg-nrofSlots-r17               INTEGER (1..320)
]],
[[
disableCG-RetransmissionMonitoring-r18 ENUMERATED {true}
nrofSlotsInCG-Period-r18        INTEGER (2..32)
uto-UCI-Config-r18              SEQUENCE {
    nrofBitsInUTO-UCI-r18      INTEGER (3..8),
    betaOffsetUTO-UCI-r18      INTEGER (0..31),
    ...
}
]],
[[
precodingAndNumberOfLayers-v1850 INTEGER (64..1023)

```

```

    srs-ResourceIndicator-v1850      INTEGER (16..255)                OPTIONAL    -- Need R
  ]]
}

CG-UCI-OnPUSCH ::= CHOICE {
    dynamic                SEQUENCE (SIZE (1..4)) OF BetaOffsets,
    semiStatic             BetaOffsets
}

CG-COT-Sharing-r16 ::= CHOICE {
    noCOT-Sharing-r16      NULL,
    cot-Sharing-r16        SEQUENCE {
        duration-r16        INTEGER (1..39),
        offset-r16          INTEGER (1..39),
        channelAccessPriority-r16 INTEGER (1..4)
    }
}

CG-COT-Sharing-r17 ::= CHOICE {
    noCOT-Sharing-r17      NULL,
    cot-Sharing-r17        SEQUENCE {
        duration-r17        INTEGER (1..319),
        offset-r17          INTEGER (1..319)
    }
}

CG-StartingOffsets-r16 ::= SEQUENCE {
    cg-StartingFullBW-InsideCOT-r16 SEQUENCE (SIZE (1..7)) OF INTEGER (0..6)    OPTIONAL, -- Need R
    cg-StartingFullBW-OutsideCOT-r16 SEQUENCE (SIZE (1..7)) OF INTEGER (0..6)    OPTIONAL, -- Need R
    cg-StartingPartialBW-InsideCOT-r16 INTEGER (0..6)                          OPTIONAL, -- Need R
    cg-StartingPartialBW-OutsideCOT-r16 INTEGER (0..6)                          OPTIONAL, -- Need R
}

BetaOffsetsCrossPriSelCG-r17 ::= CHOICE {
    dynamic-r17             SEQUENCE (SIZE (1..4)) OF BetaOffsetsCrossPri-r17,
    semiStatic-r17          BetaOffsetsCrossPri-r17
}

CG-SDT-Configuration-r17 ::= SEQUENCE {
    cg-SDT-RetransmissionTimer INTEGER (1..64)                                OPTIONAL, -- Need R
    sdt-SSB-Subset-r17        CHOICE {
        shortBitmap-r17      BIT STRING (SIZE (4)),
        mediumBitmap-r17     BIT STRING (SIZE (8)),
        longBitmap-r17       BIT STRING (SIZE (64))
    }
    sdt-SSB-PerCG-PUSCH-r17    ENUMERATED {oneEighth, oneFourth, half, one, two, four, eight, sixteen} OPTIONAL, -- Need S
    sdt-P0-PUSCH-r17          INTEGER (-16..15)                                OPTIONAL, -- Need M
    sdt-Alpha-r17             ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1} OPTIONAL, -- Need M
    sdt-DMRS-Ports-r17        CHOICE {
        dmrsType1-r17        BIT STRING (SIZE (8)),
        dmrsType2-r17        BIT STRING (SIZE (12))
    }
    sdt-NrofDMRS-Sequences-r17 INTEGER (1..2)                                OPTIONAL, -- Need M
}

```

```

CG-RRC-Configuration-r18 ::= SEQUENCE {
  cg-RRC-RetransmissionTimer-r18 INTEGER (1..288) OPTIONAL, -- Need R
  cg-RRC-RSRP-ThresholdSSB-r18 RSRP-Range OPTIONAL, -- Need R
  rrc-SSB-Subset-r18 CHOICE {
    shortBitmap-r18 BIT STRING (SIZE (4)),
    mediumBitmap-r18 BIT STRING (SIZE (8)),
    longBitmap-r18 BIT STRING (SIZE (64))
  } OPTIONAL, -- Need S
  rrc-SSB-PerCG-PUSCH-r18 ENUMERATED {oneEighth, oneFourth, half, one, two, four, eight, sixteen} OPTIONAL, -- Need M
  rrc-P0-PUSCH-r18 INTEGER (-16..15) OPTIONAL, -- Need M
  rrc-Alpha-r18 ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1} OPTIONAL, -- Need M
  rrc-DMRS-Ports-r18 CHOICE {
    dmrsType1-r18 BIT STRING (SIZE (8)),
    dmrsType2-r18 BIT STRING (SIZE (12))
  } OPTIONAL, -- Need M
  rrc-NrofDMRS-Sequences-r18 INTEGER (1..2) OPTIONAL, -- Need M
  ...
}
-- TAG-CONFIGUREDGRANTCONFIG-STOP
-- ASN1STOP

```

ConfiguredGrantConfig field descriptions
antennaPort Indicates the antenna port(s) to be used for this configuration, and the maximum bitwidth is 5. See TS 38.214 [19], clause 6.1.2, and TS 38.212 [17], clause 7.3.1. The UE ignores this field in case of CG-SDT or if <i>cg-RRC-Configuration</i> is configured.
applyIndicatedTCI-State This field indicates, for PUSCH transmission(s) corresponding a Type1-CG configuration, if UE applies the first, the second or both "indicated" UL only TCI or joint TCI as specified in TS 38.214 [19], clause 6.1. Network does not configure this field if <i>cg-RRC-Configuration</i> is configured.
autonomousTx If this field is present, the Configured Grant configuration is configured with autonomous transmission, see TS 38.321 [3].
betaOffsetCG-UCI Beta offset for CG-UCI in CG-PUSCH, see TS 38.213 [13], clause 9.3
betaOffsetUTO-UCI Beta offset value for UTO-UCI multiplexing on CG PUSCH, see TS 38.213 [13], clause 9.3.
cg-betaOffsetsCrossPri0, cg-betaOffsetsCrossPri1 Selection between and configuration of dynamic and semi-static beta-offset for multiplexing HARQ-ACK in CG-PUSCH with different priorities. The field <i>cg-betaOffsetsCrossPri0</i> indicates multiplexing LP HARQ-ACK in HP CG-PUSCH. This field is configured only if <i>phy-PriorityIndex-r16</i> is configured with value <i>p1</i> . The field <i>cg-betaOffsetsCrossPri1</i> indicates multiplexing HP HARQ-ACK in LP CG-PUSCH. This field is configured only if <i>phy-PriorityIndex-r16</i> is configured with value <i>p0</i> .
cg-COT-SharingList Indicates a table for COT sharing combinations (see 37.213 [48], clause 4.1.3). One row of the table can be set to noCOT-Sharing to indicate that there is no channel occupancy sharing. If the <i>cg-RetransmissionTimer-r16</i> is configured and the UE operates as an initiating device in semi-static channel access mode (see TS 37.213 [48], clause 4.3), then <i>cg-COT-SharingList-r16</i> is configured.
cg-COT-SharingOffset Indicates the offset from the end of the slot where the COT sharing indication in UCI is enabled where the offset in symbols is equal to $14 \cdot n$, where <i>n</i> is the signaled value for <i>cg-COT-SharingOffset</i> . Applicable when <i>ul-toDL-COT-SharingED-Threshold-r16</i> is not configured (see 37.213 [48], clause 4.1.3).
cg-DMRS-Configuration DMRS configuration (see TS 38.214 [19], clause 6.1.2.3).
cg-minDFI-Delay Indicates the minimum duration (in unit of symbols) from the ending symbol of the PUSCH to the starting symbol of the PDCCH containing the downlink feedback indication (DFI) carrying HARQ-ACK for this PUSCH. The HARQ-ACK received before this minimum duration is not considered as valid for this PUSCH (see TS 38.213 [13], clause 10.5). The following minimum duration values are supported, depending on the configured subcarrier spacing [symbols]: 15 kHz: 7, $m \cdot 14$, where $m = \{1, 2, 3, 4\}$ 30 kHz: 7, $m \cdot 14$, where $m = \{1, 2, 3, 4, 5, 6, 7, 8\}$ 60 kHz: 7, $m \cdot 14$, where $m = \{1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16\}$ 120 kHz: 7, $m \cdot 14$, where $m = \{1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32\}$ 480 kHz: $m \cdot 14$, where $m = \{2, 4, 8, 12, 16, 20, 24, 28, 32, 36, 40, 44, 48, 52, 56, 60, 64, 68, 72, 76, 80, 84, 88, 92, 96, 100, 104, 108, 112, 116, 120, 124, 128\}$ 960 kHz: $m \cdot 14$, where $m = \{4, 8, 16, 24, 32, 40, 48, 56, 64, 72, 80, 88, 96, 104, 112, 120, 128, 136, 144, 152, 160, 168, 176, 184, 192, 200, 208, 216, 224, 232, 240, 248, 256\}$
cg-nrofPUSCH-InSlot Indicates the number of consecutive PUSCH configured to CG within a slot where the SLIV indicating the first PUSCH and additional PUSCH appended with the same length (see TS 38.214 [19], clause 6.1.2.3). The network can only configure this field if <i>cg-RetransmissionTimer</i> is configured.
cg-nrofSlots Indicates the number of allocated slots in a configured grant periodicity following the time instance of configured grant offset (see TS 38.214 [19], clause 6.1.2.3). <i>cg-nrofSlots-r17</i> is only applicable for operation with shared spectrum channel access in FR2-2. When <i>cg-nrofSlots-r17</i> is configured, the UE shall ignore <i>cg-nrofSlots-r16</i> . The network can only configure this field if <i>cg-RetransmissionTimer</i> is configured.

cg-RetransmissionTimer
Indicates the initial value of the configured retransmission timer (see TS 38.321 [3]) in multiples of <i>periodicity</i> . The value of <i>cg-RetransmissionTimer</i> is always less than or equal to the value of <i>configuredGrantTimer</i> . This field is always configured together with <i>harq-ProclD-Offset</i> . This field is not configured for operation in licensed spectrum or simultaneously with <i>harq-ProclD-Offset2</i> . The network does not configure this field for CG-SDT.
cg-SDT-PeriodicityExt
This field is used to calculate the periodicity for UL transmission without UL grant for type 1 (see TS 38.321 [3], clause 5.8.2) for extended CG-SDT periodicities. If this field is present, the fields <i>periodicity</i> and <i>periodicityExt</i> are ignored. The following periodicities are supported depending on the configured subcarrier spacing [symbols]: 15 kHz: $n \cdot 14 \cdot 1280$, where $n = \{1, 2, 4, 8, 48, 96, 240, 472, 944, 1408, 2816\}$ 30 kHz: $n \cdot 14 \cdot 1280$, where $n = \{2, 4, 8, 16, 96, 192, 480, 944, 1888, 2816, 5632\}$ 60 kHz with normal CP: $n \cdot 14 \cdot 1280$, where $n = \{4, 8, 16, 32, 192, 384, 960, 1888, 3776, 5632, 11264\}$ 60 kHz with ECP: $n \cdot 12 \cdot 1280$, where $n = \{4, 8, 16, 32, 192, 384, 960, 1888, 3776, 5632, 11264\}$ 120 kHz: $n \cdot 14 \cdot 1280$, where $n = \{8, 16, 32, 64, 384, 768, 1920, 3776, 7552, 11264, 22528\}$ 480 kHz: $n \cdot 14 \cdot 1280$, where $n = \{32, 64, 128, 256, 1536, 3072, 7680, 15104, 30208, 45056, 90112\}$ 960 kHz: $n \cdot 14 \cdot 1280$, where $n = \{64, 128, 256, 512, 3072, 6144, 15360, 30208, 60416, 90112, 180224\}$
cg-StartingOffsets
This field is not applicable for a UE which is allowed to operate as an initiating device in semi-static channel access mode, i.e., not applicable for a UE configured with UE FFP parameters (e.g. period, offset) regardless whether the UE would initiate its own COT or would share gNB's COT.
cg-UCI-Multiplexing
If present, this field indicates that in the case of PUCCH overlapping with CG-PUSCH(s) including CG-UCI within a PUCCH group, HARQ-ACK is multiplexed on the CG-PUSCH including CG-UCI (see TS 38.213 [13], clause 9).
configuredGrantConfigIndex
Indicates the index of the Configured Grant configurations within the BWP.
configuredGrantConfigIndexMAC
Indicates the index of the Configured Grant configurations within the MAC entity.
disableCG-RetransmissionMonitoring
When this field is configured, the UE does not start the <i>drx-HARQ-RTT-TimerUL</i> for PUSCH transmissions using configured uplink grants corresponding to this <i>ConfiguredGrantConfig</i> . See TS 38.321 [3], clause 5.7.
configuredGrantTimer
Indicates the initial value of the configured grant timer (see TS 38.321 [3]) in multiples of <i>periodicity</i> . When <i>cg-RetransmissionTimer</i> is configured, if HARQ processes are shared among different configured grants on the same BWP, <i>configuredGrantTimer * periodicity</i> is set to the same value for the configurations that share HARQ processes on this BWP. The value of the extension <i>configuredGrantTimer</i> is 2 times the configured value.
dmrs-SeqInitialization
The network configures this field if <i>transformPrecoder</i> is disabled or when the value of <i>sdt-NrofDMRS-Sequences</i> is set to 1. Otherwise, the field is absent.
frequencyDomainAllocation
Indicates the frequency domain resource allocation, see TS 38.214 [19], clause 6.1.2, and TS 38.212 [17], clause 7.3.1).
frequencyHopping
The value <i>intraSlot</i> enables 'Intra-slot frequency hopping' and the value <i>interSlot</i> enables 'Inter-slot frequency hopping'. If the field is absent, frequency hopping is not configured. The field <i>frequencyHopping</i> applies to configured grant for 'pusch-RepTypeA' (see TS 38.214 [19], clause 6.3.1).
frequencyHoppingOffset
Frequency hopping offset used when frequency hopping is enabled (see TS 38.214 [19], clause 6.1.2 and clause 6.3).
frequencyHoppingPUSCH-RepTypeB
Indicates the frequency hopping scheme for Type 1 CG when <i>pusch-RepTypeIndicator</i> is set to 'pusch-RepTypeB' (see TS 38.214 [19], clause 6.1). The value <i>interRepetition</i> enables 'Inter-repetition frequency hopping', and the value <i>interSlot</i> enables 'Inter-slot frequency hopping'. If the field is absent, the frequency hopping is not enabled for Type 1 CG.

harq-ProcID-Offset
For operation with shared spectrum channel access configured with <i>cg-RetransmissionTimer-r16</i> , this configures the range of HARQ process IDs which can be used for this configured grant where the UE can select a HARQ process ID within [<i>harq-procID-offset</i> , ..., (<i>harq-procID-offset</i> + <i>nrofHARQ-Processes</i> – 1)]. <i>harq-ProcID-Offset-v1730</i> is only applicable for operation with shared spectrum channel access in FR2-2. If the field <i>harq-ProcID-Offset-v1730</i> is present, the UE shall ignore the <i>harq-ProcID-Offset-r16</i> . The network does not configure this field for CG-SDT.
harq-ProcID-Offset2
Indicates the offset used in deriving the HARQ process IDs, see TS 38.321 [3], clause 5.4.1. This field is not configured together with <i>cg-RetransmissionTimer-r16</i> . If the field <i>harq-ProcID-Offset2-v1700</i> is present, the UE shall ignore the <i>harq-ProcID-Offset2-r16</i> .
mappingPattern
Indicates whether the UE should follow Cyclical mapping pattern or Sequential mapping pattern when two SRS resource sets are configured in <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook' for PUSCH transmission with a Type 1 configured grant and/or a Type 2 configured grant as described in clause 6.1.2.3 of TS 38.214 [19]
mcs-Table
Indicates the MCS table the UE shall use for PUSCH without transform precoding. If the field is absent the UE applies the value <i>qam64</i> .
mcs-TableTransformPrecoder
Indicates the MCS table the UE shall use for PUSCH with transform precoding. If the field is absent the UE applies the value <i>qam64</i> .
mcsAndTBS
The modulation order, target code rate and TB size (see TS 38.214 [19], clause 6.1.2). The NW does not configure the values 28–31 in this version of the specification.
nrofBitsInUTO-UCI
Indicates the number of bits in the UTO-UCI bitmap (see TS 38.212 [17], clause 6.2.7, 6.3.2, TS 38.213 [13], clause 9.3.1, TS 38.214 [19], clause 5.2.3). When this field is configured, UTO-UCI is enabled for the UE.
nrofHARQ-Processes
The number of HARQ processes configured. It applies for both Type 1 and Type 2. See TS 38.321 [3], clause 5.4.1. If the UE is configured with <i>nrofHARQ-Processes-v1700</i> , the UE shall ignore <i>nrofHARQ-Processes</i> (<i>without suffix</i>). The network sets the value of this field to 1 when <i>cg-LTM-Configuration</i> is configured.
nrofSlotsInCG-Period
Number of consecutive slots for CG PUSCH transmission occasions in a period of a single CG PUSCH configuration, see TS 38.214 [19], clause 6.1. The network does not configure this field for operation on shared spectrum.
pathlossReferenceIndex
Indicates the reference signal index used as PUSCH pathloss reference (see TS 38.213 [13], clause 7.1.1). In case of CG-SDT or if <i>cg-RRC-Configuration</i> is configured or if <i>enablePL-RS-UpdateForType1CG-PUSCH</i> is configured or if <i>unifiedTCI-StateType</i> is configured, the UE does not use this field.
pathlossReferenceIndex2
Indicates the reference signal used as PUSCH pathloss reference for the second SRS resource set. When this field is present, <i>pathlossReferenceIndex</i> indicates the reference signal used as PUSCH pathloss reference for the first SRS resource set. Network does not configure this field if <i>cg-RRC-Configuration</i> is configured.
p0-PUSCH-Alpha
Index of the <i>P0-PUSCH-AlphaSet</i> to be used for this configuration. If <i>unifiedTCI-StateType</i> is configured, the UE does not use this field.
p0-PUSCH-Alpha2
Index of the <i>P0-PUSCH-AlphaSet</i> to be used for second SRS resource set. If this field is present, the <i>p0-PUSCH-Alpha</i> provides index for the <i>P0-PUSCH-AlphaSet</i> to be used for first SRS resource set.

periodicity Periodicity for UL transmission without UL grant for type 1 and type 2 (see TS 38.321 [3], clause 5.8.2). The following periodicities are supported depending on the configured subcarrier spacing [symbols]: 15 kHz: 2, 7, $n \cdot 14$, where $n=\{1, 2, 4, 5, 8, 10, 16, 20, 32, 40, 64, 80, 128, 160, 320, 640\}$ 30 kHz: 2, 7, $n \cdot 14$, where $n=\{1, 2, 4, 5, 8, 10, 16, 20, 32, 40, 64, 80, 128, 160, 256, 320, 640, 1280\}$ 60 kHz with normal CP: 2, 7, $n \cdot 14$, where $n=\{1, 2, 4, 5, 8, 10, 16, 20, 32, 40, 64, 80, 128, 160, 256, 320, 512, 640, 1280, 2560\}$ 60 kHz with ECP: 2, 6, $n \cdot 12$, where $n=\{1, 2, 4, 5, 8, 10, 16, 20, 32, 40, 64, 80, 128, 160, 256, 320, 512, 640, 1280, 2560\}$ 120 kHz: 2, 7, $n \cdot 14$, where $n=\{1, 2, 4, 5, 8, 10, 16, 20, 32, 40, 64, 80, 128, 160, 256, 320, 512, 640, 1024, 1280, 2560, 5120\}$ 480 and 960 kHz: $n \cdot 14$, where $n=\{1, 2, 4, 5, 8, 10, 16, 20, 32, 40, 64, 80, 128, 160, 256, 320, 512, 640, 1024, 1280, 2560, 5120\}$ In case of SDT, the network does not configure periodicity values less than 5ms.	periodicityExt This field is used to calculate the periodicity for UL transmission without UL grant for type 1 and type 2 (see TS 38.321 [3], clause 5.8.2). If this field is present, the UE shall ignore field <i>periodicity</i> (without suffix). Network does not configure <i>periodicityExt-r17</i> together with <i>periodicityExt-r16</i>. The following periodicities are supported depending on the configured subcarrier spacing [symbols]: 15 kHz: <i>periodicityExt</i>*14, where <i>periodicityExt</i> has a value between 1 and 640. 30 kHz: <i>periodicityExt</i>*14, where <i>periodicityExt</i> has a value between 1 and 1280. 60 kHz with normal CP: <i>periodicityExt</i>*14, where <i>periodicityExt</i> has a value between 1 and 2560. 60 kHz with ECP: <i>periodicityExt</i>*12, where <i>periodicityExt</i> has a value between 1 and 2560. 120 kHz: <i>periodicityExt</i>*14, where <i>periodicityExt</i> has a value between 1 and 5120. 480 kHz: <i>periodicityExt</i>*14, where <i>periodicityExt</i> has a value between 1 and 20480. 960 kHz: <i>periodicityExt</i>*14, where <i>periodicityExt</i> has a value between 1 and 40960. In case of SDT, the network does not configure periodicity values less than 5ms.
phy-PriorityIndex Indicates the PHY priority of CG PUSCH at least for PHY-layer collision handling. Value <i>p0</i> indicates low priority and value <i>p1</i> indicates high priority. The network does not configure this for CG-SDT.	powerControlLoopToUse Closed control loop to apply (see TS 38.213 [13], clause 7.1.1). If <i>unifiedTCI-StateType</i> is configured, the UE does not use this field.
powerControlLoopToUse2 Closed control loop to apply to second SRS resource set (see TS 38.213 [13], clause 7.1.1). If this field is present, the <i>powerControlLoopToUse</i> applies to the first SRS resource set.	precodingAndNumberOfLayers, precodingAndNumberOfLayers-v1850 Indicates the precoding and number of layers (see TS 38.212 [17], clause 7.3.1.1.2, and TS 38.214 [19], clause 6.1.2.3). In case of CG-SDT or if <i>cg-RRC-Configuration</i> is configured, network sets this field to 1. Field <i>precodingAndNumberOfLayers-v1850</i> is only configured when <i>nrofSRS-Ports-n8</i> is configured. If the network configures <i>precodingAndNumberOfLayers-v1850</i>, the UE shall ignore <i>precodingAndNumberOfLayers</i> (without suffix).
precodingAndNumberOfLayers2 Indicates the precoding and number of layers for the second SRS resource set. When this field is present, <i>precodingAndNumberOfLayers</i> indicated the precoding and number of layers for the first SRS resource set. Network does not configure this field if <i>cg-RRC-Configuration</i> is configured.	pusch-RepTypeIndicator Indicates whether UE follows the behavior for PUSCH repetition type A or the behavior for PUSCH repetition type B for each Type 1 configured grant configuration. The value <i>pusch-RepTypeA</i> enables the 'PUSCH repetition type A' and the value <i>pusch-RepTypeB</i> enables the 'PUSCH repetition type B' (see TS 38.214 [19], clause 6.1.2.3). The value <i>pusch-RepTypeB</i> is not configured simultaneously with <i>nrofSlotsInCG-Period-r18</i>. The network does not configure this field if <i>cg-RetransmissionTimer-r16</i> is configured for CG operation with shared spectrum channel access.
rbg-Size Selection between configuration 1 and configuration 2 for RBG size for PUSCH. The UE does not apply this field if <i>resourceAllocation</i> is set to <i>resourceAllocationType1</i>. Otherwise, the UE applies the value <i>config1</i> when the field is absent. Note: <i>rbg-Size</i> is used when the <i>transformPrecoder</i> parameter is disabled.	

repK-RV The redundancy version (RV) sequence to use. See TS 38.214 [19], clause 6.1.2. The network configures this field if repetitions are used, i.e., if <i>repK</i> is set to <i>n2</i> , <i>n4</i> or <i>n8</i> . This field is not configured when <i>cg-RetransmissionTimer</i> is configured. Otherwise, the field is absent.
repK Number of repetitions K, see TS 38.214 [19]. If the field <i>repK-v1710</i> is present, the UE shall ignore the <i>repK</i> (without suffix).
resourceAllocation Configuration of resource allocation type 0 and resource allocation type 1. For Type 1 UL data transmission without grant, <i>resourceAllocation</i> should be <i>resourceAllocationType0</i> or <i>resourceAllocationType1</i> .
rrc-ConfiguredUplinkGrant Configuration for "configured grant" transmission with fully RRC-configured UL grant (Type1). If this field is absent the UE uses UL grant configured by DCI addressed to CS-RNTI (Type2).
sequenceOffsetForRV Configures the RV offset for the starting RV for the first repetition (first actual repetition in PUSCH repetition Type B) towards the second 'SRS resource set' for PUSCH configured in either <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook'.
srs-ResourceSetId Indicates the associated SRS resource set for PUSCH+PUSCH simultaneous uplink transmission for CG-type 1 PUSCH. Network does not configure this field if <i>cg-RRC-Configuration</i> is configured.
srs-ResourceIndicator, srs-ResourceIndicator-v1850 Indicates the SRS resource to be used (see TS 38.212 [17], clause 7.3.1.1.2, and TS 38.214 [19], clause 6.1.2.3). The network does not configure this for CG-SDT or if <i>cg-RRC-Configuration</i> is configured. Field <i>srs-ResourceIndicator-v1850</i> is only configured when 8 antenna ports are configured (see TS 38.214 [19], clause 6.1.1.2). The network does not configure both <i>srs-ResourceIndicator</i> and <i>srs-ResourceIndicator-v1850</i> .
srs-ResourceIndicator2 Indicates the SRS resource to be used for the second SRS resource set. When this field is present, the <i>srs-ResourceIndicator</i> is used for the first SRS resource set. Network does not configure this field if <i>cg-RRC-Configuration</i> is configured.
startingFromRV0 This field is used to determine the initial transmission occasion of a transport block for a given RV sequence, see TS 38.214 [19], clause 6.1.2.3.1. The network does not configure this field if <i>cg-RetransmissionTimer-r16</i> is configured for CG operation.
timeDomainAllocation, timeDomainAllocation-v1710 Indicates a combination of start symbol and length and PUSCH mapping type, see TS 38.214 [19], clause 6.1.2 and TS 38.212 [17], clause 7.3.1. If the field <i>timeDomainAllocation-v1710</i> is present, the UE shall ignore <i>timeDomainAllocation</i> field (without suffix).
timeDomainOffset Offset related to the reference SFN indicated by <i>timeReferenceSFN</i> , see TS 38.321 [3], clause 5.8.2. <i>timeDomainOffset-r17</i> is only applicable to 480 kHz and 960 kHz. If <i>timeDomainOffset-r17</i> is present, the UE shall ignore <i>timeDomainOffset</i> (without suffix).
timeReferenceHyperSFN Indicates H-SFN used for determination of the offset of a resource in time domain. The UE uses the closest H-SFN with the indicated number preceding the reception of the configured grant configuration, see TS 38.321 [3], clause 5.8.2. If the field <i>timeReferenceHyperSFN</i> is not present, the reference hyper SFN is 0.
timeReferenceSFN Indicates SFN used for determination of the offset of a resource in time domain. The UE uses the closest SFN with the indicated number preceding the reception of the configured grant configuration, see TS 38.321 [3], clause 5.8.2. If the field <i>timeReferenceSFN</i> is not present, the reference SFN is 0.
transformPrecoder Enables or disables transform precoding for <i>type1</i> and <i>type2</i> . If the field is absent, the UE enables or disables transform precoding in accordance with the field <i>msg3-transformPrecoder</i> in <i>RACH-ConfigCommon</i> from <i>rach-ConfigCommon</i> included directly within BWP configuration (i.e., not included in <i>additionalRACH-ConfigList</i>), see TS 38.214 [19], clause 6.1.3.
uci-OnPUSCH Selection between and configuration of dynamic and semi-static beta-offset. For Type 1 UL data transmission without grant, <i>uci-OnPUSCH</i> should be set to <i>semiStatic</i> . The network does not configure this for CG-SDT.

CG-COT-Sharing field descriptions
channelAccessPriority Indicates the Channel Access Priority Class that the gNB can assume when sharing the UE initiated COT (see 37.213 [48], clause 4.1.3).
duration Indicates the number of DL transmission slots within UE initiated COT (see 37.213 [48], clause 4.1.3).
offset Indicates the number of DL transmission slots from the end of the slot where CG-UCI is detected after which COT sharing can be used (see 37.213 [48], clause 4.1.3).

CG-StartingOffsets field descriptions
cg-StartingFullBW-InsideCOT A set of configured grant PUSCH transmission starting offsets (see TS 38.211[16], Table 5.3.1-2) which indicates the length of a CP extension of the first symbol that is located before the configured resource when frequency domain resource allocation includes all interlaces in the allocated RB set(s) and the CG PUSCH resource is inside gNB COT (see TS 38.214 [19], clause 6.1.2.3).
cg-StartingFullBW-OutsideCOT A set of configured grant PUSCH transmission starting offset indices (see TS 38.211[16], Table 5.3.1-2) which indicates the length of a CP extension of the first symbol that is located before the configured resource when frequency domain resource allocation includes all interlaces in the allocated RB set(s) and the CG PUSCH resource is outside gNB COT (see TS 38.214 [19], clause 6.1.2.3).
cg-StartingPartialBW-InsideCOT A set of configured grant PUSCH transmission starting offset index (see TS 38.211[16], Table 5.3.1-2) which indicates the length of a CP extension of the first symbol that is located before the configured resource when frequency domain resource allocation does not include all interlaces in the allocated RB set(s) and the CG PUSCH resource is inside gNB COT (see TS 38.214 [19], clause 6.1.2.3).
cg-StartingPartialBW-OutsideCOT A set of configured grant PUSCH transmission starting offset index (see TS 38.211[16], Table 5.3.1-2) which indicates the length of a CP extension of the first symbol that is located before the configured resource when frequency domain resource allocation does not include all interlaces in the allocated RB set(s) and the CG PUSCH resource is outside gNB COT (see TS 38.214 [19], clause 6.1.2.3).

CG-SDT-Configuration and CG-RRC-Configuration field descriptions	
<i>cg-RRC-RSRP-ThresholdSSB</i>	An RSRP threshold configured for SSB selection for the CG as specified in TS 38.321 [3]. This field is absent in <i>cg-LTM-Configuration</i> .
<i>cg-SDT-RetransmissionTimer</i>, <i>cg-RRC-RetransmissionTimer</i>	Indicates the initial value of the configured grant retransmission timer used for the initial transmission of CG with CCCH (for CG-SDT) or DCCH message (see TS 38.321 [3]) in multiples of <i>periodicity</i> . The field <i>cg-RRC-RetransmissionTimer</i> is not configured together with the field <i>harq-ProclD-Offset</i> for operations in unlicensed spectrum.
<i>sdt-DMRS-Ports</i>, <i>rrc-DMRS-Ports</i>	Indicates the set of DMRS ports for SSB to PUSCH mapping (see TS 38.213 [13]). The first (left-most / most significant) bit corresponds to DMRS port 0, the second most significant bit corresponds to DMRS port 1, and so on. A bit set to 1 indicates that this DMRS port is used for mapping. In case of an RedCap-specific initial downlink BWP that is associated with NCD-SSB, the SSB is the NCD-SSB. Otherwise, the SSB is the CD-SSB.
<i>sdt-NrofDMRS-Sequences</i>, <i>rrc-NrofDMRS-Sequences</i>	Indicates the number of DMRS sequences for SSB to PUSCH mapping (see TS 38.213 [13]). In case of an RedCap-specific initial downlink BWP that is associated with NCD-SSB, the SSB is the NCD-SSB. Otherwise, the SSB is the CD-SSB.
<i>sdt-SSB-Subset</i>, <i>rrc-SSB-Subset</i>	Indicates SSB subset for SSB to CG PUSCH mapping within one CG configuration. The first/leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not included in the SSB subset for SSB to CG PUSCH mapping while value 1 indicates that the corresponding SS/PBCH block is included in SSB subset for SSB to CG PUSCH mapping. If this field is absent, UE assumes the SSB set includes all actually transmitted SSBs. In case of an RedCap-specific initial downlink BWP that is associated with NCD-SSB, the SSB is the NCD-SSB. Otherwise, the SSB is the CD-SSB.
<i>sdt-SSB-PerCG-PUSCH</i>, <i>rrc-SSB-PerCG-PUSCH</i>	The number of SSBs per CG PUSCH (see TS 38.213 [13]). Value <i>one</i> corresponds to 1 SSBs per CG PUSCH, value <i>two</i> corresponds to 2 SSBs per CG PUSCH and so on. In case of an RedCap-specific initial downlink BWP that is associated with NCD-SSB, the SSB is the NCD-SSB. Otherwise, the SSB is the CD-SSB.
<i>sdt-P0-PUSCH</i>, <i>rrc-P0-PUSCH</i>	Indicates P0 value for PUSCH in steps of 1dB (see TS 38.213 [13]). When this field is configured, the UE ignores the <i>p0-PUSCH-Alpha</i> . This field is absent in <i>cg-LTM-Configuration</i> .
<i>sdt-Alpha</i>, <i>rrc-Alpha</i>	Indicates alpha value for PUSCH. <i>alpha0</i> indicates value 0 is used, <i>alpha04</i> indicates value 4 is used and so on (see TS 38.213 [13]). When this field is configured, the UE ignores the <i>p0-PUSCH-Alpha</i> . This field is absent in <i>cg-LTM-Configuration</i> .

Conditional Presence	Explanation
<i>LCH-BasedPrioritization</i>	This field is optionally present, Need R, if <i>lch-BasedPrioritization</i> is configured in the MAC entity. It is absent otherwise.
<i>RACH-LessHO</i>	The field is optionally present, Need N, if <i>rach-LessHO</i> is present in <i>reconfigurationWithSync</i> . It is absent otherwise.
<i>RepTypeB</i>	The field is optionally present if <i>pusch-RepTypeIndicator</i> is set to <i>pusch-RepTypeB</i> , Need S, and absent otherwise.
<i>CG-List</i>	The field is mandatory present when included in <i>configuredGrantConfigToAddModList-r16</i> , otherwise the field is absent.
<i>CG-IndexMAC</i>	The field is mandatory present if at least one configured grant is configured by <i>configuredGrantConfigToAddModList-r16</i> in any BWP of this MAC entity, otherwise it is optionally present, need R.
<i>CG-SDT1</i>	This field is optionally present, Need R, if <i>cg-SDT-Configuration</i> is configured, otherwise it is absent.
<i>CG-SDT2</i>	This field is optionally present, Need S, if <i>cg-SDT-PeriodicityExt</i> is configured, otherwise it is absent.
<i>LTM</i>	The field is optionally present, Need R, in an <i>RRCReconfiguration</i> message within the <i>LTM-Config</i> IE. Otherwise, the field is absent.
<i>SRSsets</i>	This field is mandatory present when UE is configured with two SRS sets configured in either <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage codebook or non-codebook and none of <i>multipanelSchemeSDM</i> or <i>multipanelSchemeSFN</i> or <i>sTx-2Panel</i> is configured. Otherwise it is absent, Need R

— *ConfiguredGrantConfigIndex*

The IE *ConfiguredGrantConfigIndex* is used to indicate the index of one of multiple UL Configured Grant configurations in one BWP.

***ConfiguredGrantConfigIndex* information element**

```
-- ASN1START
-- TAG-CONFIGUREDGRANTCONFIGINDEX-START

ConfiguredGrantConfigIndex-r16 ::= INTEGER (0.. maxNrofConfiguredGrantConfig-1-r16)

-- TAG-CONFIGUREDGRANTCONFIGINDEX-STOP
-- ASN1STOP
```

— *ConfiguredGrantConfigIndexMAC*

The IE *ConfiguredGrantConfigIndexMAC* is used to indicate the unique Configured Grant configurations index per MAC entity.

***ConfiguredGrantConfigIndexMAC* information element**

```
-- ASN1START
-- TAG-CONFIGUREDGRANTCONFIGINDEXMAC-START

ConfiguredGrantConfigIndexMAC-r16 ::= INTEGER (0.. maxNrofConfiguredGrantConfigMAC-1-r16)

-- TAG-CONFIGUREDGRANTCONFIGINDEXMAC-STOP
-- ASN1STOP
```

— *ConnEstFailureControl*

The IE *ConnEstFailureControl* is used to configure parameters for connection establishment failure control.

***ConnEstFailureControl* information element**

```
-- ASN1START
-- TAG-CONNЕСТFAILURECONTROL-START

ConnEstFailureControl ::= SEQUENCE {
    connEstFailCount          ENUMERATED {n1, n2, n3, n4},
    connEstFailOffsetValidity ENUMERATED {s30, s60, s120, s240, s300, s420, s600, s900},
    connEstFailOffset         INTEGER (0..15)
}

-- TAG-CONNЕСТFAILURECONTROL-STOP
-- ASN1STOP
```

OPTIONAL -- Need S

<i>ConnEstFailureControl</i> field descriptions
<i>connEstFailCount</i> Number of times that the UE detects T300 expiry on the same cell before applying <i>connEstFailOffset</i> .
<i>connEstFailOffset</i> Parameter "Qoffset _{temp} " in TS 38.304 [20]. If the field is absent, the value of infinity shall be used for "Qoffset _{temp} ".
<i>connEstFailOffsetValidity</i> Amount of time that the UE applies <i>connEstFailOffset</i> before removing the offset from evaluation of the cell. Value s30 corresponds to 30 seconds, value s60 corresponds to 60 seconds, and so on.

– *ControlResourceSet*

The IE *ControlResourceSet* is used to configure a time/frequency control resource set (CORESET) in which to search for downlink control information (see TS 38.213 [13], clause 10.1). For the UE not supporting *multipleCORESET* in FR1, in order to receive MBS multicast in CFR within the UE's active BWP, if a CORESET is not configured within the *PDCCH-ConfigMulticast*, the CORESET other than CORESET#0 configured within the UE's active BWP for scheduling unicast can be used for scheduling MBS multicast, and the CORESET is expected to be included completely within the CFR and the parameters configured in the CORESET are expected to be supported by the UE for MBS multicast.

ControlResourceSet information element

```
-- ASN1START
-- TAG-CONTROLRESOURCESET-START

ControlResourceSet ::=
    controlResourceSetId
    frequencyDomainResources
    duration
    cce-REG-MappingType
        interleaved
            reg-BundleSize
            interleaverSize
            shiftIndex
        },
    nonInterleaved
    },
    precoderGranularity
    tci-StatesPDCCH-ToAddList
    tci-StatesPDCCH-ToReleaseList
    tci-PresentInDCI
    pdcch-DMRS-ScramblingID
    ...
    [[
        rb-Offset-r16
        tci-PresentDCI-1-2-r16
        coresetPoolIndex-r16
        controlResourceSetId-v1610
    ]],
    [[
        followUnifiedTCI-State-r17
```

```
SEQUENCE {
    ControlResourceSetId,
    BIT STRING (SIZE (45)),
    INTEGER (1..maxCoReSetDuration),
    CHOICE {
        SEQUENCE {
            ENUMERATED {n2, n3, n6},
            ENUMERATED {n2, n3, n6},
            INTEGER(0..maxNrofPhysicalResourceBlocks-1)
        },
        NULL
    },
    ENUMERATED {sameAsREG-bundle, allContiguousRBs},
    SEQUENCE(SIZE (1..maxNrofTCI-StatesPDCCH)) OF TCI-StateId OPTIONAL, -- Cond NotSIB-initialBWP
    SEQUENCE(SIZE (1..maxNrofTCI-StatesPDCCH)) OF TCI-StateId OPTIONAL, -- Cond NotSIB-initialBWP
    ENUMERATED {enabled} OPTIONAL, -- Need S
    INTEGER (0..65535) OPTIONAL, -- Need S
    INTEGER (0..5) OPTIONAL, -- Need S
    INTEGER (1..3) OPTIONAL, -- Need S
    INTEGER (0..1) OPTIONAL, -- Need S
    ControlResourceSetId-v1610 OPTIONAL, -- Need S
    ENUMERATED {enabled} OPTIONAL, -- Need R
```

```
    ]],
    [[
    applyIndicatedTCI-State-r18      ENUMERATED {first, second, both,  none}
    ]]
}

-- TAG-CONTROLRESOURCESET-STOP
-- ASN1STOP
```

ControlResourceSet field descriptions
applyIndicatedTCI-State This field indicates, for PDCCH reception on this CORESET, if UE applies the first, the second, both or none "indicated" DL only TCI or joint TCI as specified in TS 38.213 [13], clause 10.1. Value <i>both</i> can be configured only if <i>sfnSchemePDCCH</i> is configured in the serving cell.
cce-REG-MappingType Mapping of Control Channel Elements (CCE) to Resource Element Groups (REG) (see TS 38.211 [16], clauses 7.3.2.2 and 7.4.1.3.2).
controlResourceSetId Identifies the instance of the <i>ControlResourceSet</i> IE. Value 0 identifies the common CORESET configured in <i>MIB</i> and in <i>ServingCellConfigCommon</i> (<i>controlResourceSetZero</i>) and is hence not used here in the <i>ControlResourceSet</i> IE. Other values identify CORESETs configured by dedicated signalling or in <i>SIB1</i> or <i>SIB20</i> . The <i>controlResourceSetId</i> is unique among the BWPs of a serving cell. If the field <i>controlResourceSetId-v1610</i> is present, the UE shall ignore the <i>controlResourceSetId</i> field (without suffix).
coresetPoolIndex The index of the CORESET pool for this CORESET as specified in TS 38.213 [13] (clauses 9 and 10) and TS 38.214 [19] (clauses 5.1 and 6.1). If the field is absent, the UE applies the value 0.
duration Contiguous time duration of the CORESET in number of symbols (see TS 38.211 [16], clause 7.3.2.2).
followUnifiedTCI-State When set to enabled, for PDCCH reception on this CORESET, the UE applies the "indicated" DL only TCI or joint TCI as specified in TS 38.214 [19], clause 5.1.5.
frequencyDomainResources Frequency domain resources for the CORESET. Each bit corresponds a group of 6 RBs, with grouping starting from the first RB group in the BWP or MBS CFR where the CORESET is configured. When at least one search space is configured with <i>freqMonitorLocation-r16</i> , only the first $N_{\text{RBG, set0}}^{\text{size}}$ bits are valid (see TS 38.213 [13], clause 10.1). The first (left-most / most significant) bit corresponds to the first RB group in the BWP or MBS CFR where the CORESET is configured, and so on. A bit that is set to 1 indicates that this RB group belongs to the frequency domain resource of this CORESET. Bits corresponding to a group of RBs not fully contained in the bandwidth part within which the CORESET is configured are set to zero (see TS 38.211 [16], clause 7.3.2.2).
interleaverSize Interleaver-size (see TS 38.211 [16], clause 7.3.2.2).
pdccch-DMRS-ScramblingID PDCCH DMRS scrambling initialization (see TS 38.211 [16], clause 7.4.1.3.1). When the field is absent the UE applies the value of the <i>physCellId</i> configured for this serving cell.
precoderGranularity Precoder granularity in frequency domain (see TS 38.211 [16], clauses 7.3.2.2 and 7.4.1.3.2).
rb-Offset Indicates the RB level offset in units of RB from the first RB of the first 6RB group to the first RB of BWP (see 38.213 [13], clause 10.1).
reg-BundleSize Resource Element Groups (REGs) can be bundled to create REG bundles. This parameter defines the size of such bundles (see TS 38.211 [16], clause 7.3.2.2).
shiftIndex When the field is absent the UE applies the value of the <i>physCellId</i> configured for this serving cell (see TS 38.211 [16], clause 7.3.2.2).
tcI-PresentInDCI This field indicates if TCI field is present or absent in DCI format 1_1, DCI format 1_3 and DCI format 4_2. When the field is absent the UE considers the TCI to be absent/disabled. In case of cross carrier scheduling, the network sets this field to enabled for the <i>ControlResourceSet</i> used for cross carrier scheduling in DCI format 1_1 in the scheduling cell if <i>enableDefaultBeamForCCS</i> is not configured (see TS 38.214 [19], clause 5.1.5).
tcI-PresentDCI-1-2 Configures the number of bits for "Transmission configuration indicator" in DCI format 1_2. When the field is absent the UE applies the value of 0 bit for the "Transmission configuration indicator" in DCI format 1_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.214 [19], clause 5.1.5). In case of cross carrier scheduling, the network configures this field for the <i>ControlResourceSet</i> used for cross carrier scheduling in DCI format 1_2 in the scheduling cell if <i>enableDefaultBeamForCCS</i> is not configured (see TS 38.214 [19], clause 5.1.5).

tcI-StatesPDCCH-ToAddList
A subset of the TCI states defined in *pdsch-Config*, either with *tcI-StatesToAddModList* or *dl-OrJointTCI-StateList*, included in the *BWP-DownlinkDedicated* corresponding to the serving cell and to the DL BWP to which the *ControlResourceSet* belong to. They are used for providing QCL relationships between the DL RS(s) in one RS Set (TCI-State) and the PDCCH DMRS ports (see TS 38.213 [13], clause 6.). The network configures at most *maxNrofTCI-StatesPDCCH* entries. The QCL relationships defined herein do not apply to MBS broadcast.

Conditional Presence	Explanation
<i>FollowUTCI</i>	The field is absent if the field <i>followUnifiedTCI-State</i> is present or if more than one value for the field <i>coresetPoolIndex</i> is configured in <i>controlResourceSet</i> for the same bandwidthpart. Otherwise, it is optionally present, Need R.
<i>NotSIB-initialBWP</i>	The field is absent in <i>SIB1/SIB20</i> and in the <i>PDCCH-ConfigCommon</i> of the initial BWP in <i>ServingCellConfigCommon</i> , if <i>SIB1/SIB20</i> is broadcasted. Otherwise, it is optionally present, Need N.

– *ControlResourceSetId*

The *ControlResourceSetId* IE concerns a short identity, used to identify a control resource set within a serving cell. The *ControlResourceSetId* = 0 identifies the *ControlResourceSet#0* configured via PBCH (*MIB*) and in *controlResourceSetZero* (*ServingCellConfigCommon*). The ID space is used across the BWPs and MBS CFRs of a Serving Cell.

ControlResourceSetId information element

```
-- ASN1START
-- TAG-CONTROLRESOURCESETID-START

ControlResourceSetId ::=
    INTEGER (0..maxNrofControlResourceSets-1)

ControlResourceSetId-r16 ::=
    INTEGER (0..maxNrofControlResourceSets-1-r16)

ControlResourceSetId-v1610 ::=
    INTEGER (maxNrofControlResourceSets..maxNrofControlResourceSets-1-r16)

-- TAG-CONTROLRESOURCESETID-STOP
-- ASN1STOP
```

– *ControlResourceSetZero*

The IE *ControlResourceSetZero* is used to configure CORESET#0 of the initial BWP (see TS 38.213 [13], clause 13).

ControlResourceSetZero information element

```
-- ASN1START
-- TAG-CONTROLRESOURCESETZERO-START

ControlResourceSetZero ::=
    INTEGER (0..15)

-- TAG-CONTROLRESOURCESETZERO-STOP
```

```
-- ASN1STOP
```

— *CrossCarrierSchedulingConfig*

The IE *CrossCarrierSchedulingConfig* is used to specify the configuration when the cross-carrier scheduling is used in a cell.

CrossCarrierSchedulingConfig information element

```
-- ASN1START
-- TAG-CROSSCARRIERSCHEDULINGCONFIG-START

CrossCarrierSchedulingConfig ::=
  schedulingCellInfo
    own
      cif-Presence
    },
    other
      schedulingCellId
      cif-InSchedulingCell
    }
  },
  ...,
  [[
    carrierIndicatorSize-r16
      carrierIndicatorSizeDCI-1-2-r16
      carrierIndicatorSizeDCI-0-2-r16
    ]
  ]
  enableDefaultBeamForCCS-r16
  ],
  [[
    ccs-BlindDetectionSplit-r17
  ]
  ]
}

-- TAG-CROSSCARRIERSCHEDULINGCONFIG-STOP
-- ASN1STOP
```

SEQUENCE {

CHOICE {

SEQUENCE {

BOOLEAN

-- Cross carrier scheduling: scheduling cell

SEQUENCE {

ServCellIndex,

INTEGER (1..7)

-- Cross carrier scheduling: scheduled cell

SEQUENCE {

INTEGER (0..3),

INTEGER (0..3)

OPTIONAL, -- Cond CIF-PRESENCE

OPTIONAL -- Need S

ENUMERATED {enabled}

ENUMERATED {oneSeventh, threeFourteenth, twoSeventh, threeSeventh, oneHalf, fourSeventh, fiveSeventh, spare1}

OPTIONAL -- Need R

CrossCarrierSchedulingConfig field descriptions	
carrierIndicatorSizeDCI-0-2, carrierIndicatorSizeDCI-1-2 Configures the number of bits for the field of carrier indicator in PDCCH DCI format 0_2/1_2. The field <i>carrierIndicatorSizeDCI-0-2</i> refers to DCI format 0_2 and the field <i>carrierIndicatorSizeDCI-1-2</i> refers to DCI format 1_2, respectively (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 10.1).	
ccs-BlindDetectionSplit Indicates the share of blind detection candidates and non-overlapping CCEs for PDCCH monitoring on an SpCell and an SCell when cross-carrier scheduling is configured from the SCell for the SpCell (see TS 38.213 [13], clause 10.1.1). The network only configures this field when it sets the field <i>other</i> for an SpCell, i.e., when it configures cross-carrier scheduling of the SpCell by a PDCCH on an SCell.	
cif-Presence The field is used to indicate whether carrier indicator field is present (value <i>true</i>) or not (value <i>false</i>) in PDCCH DCI formats, see TS 38.213 [13]. If <i>cif-Presence</i> is set to <i>true</i> , the CIF value indicating a grant or assignment for this cell is 0.	
cif-InSchedulingCell The field indicates the CIF value used in the scheduling cell to indicate a grant or assignment applicable for this cell, see TS 38.213 [13]. If configured for an SpCell, the non-fallback DCI formats on the SpCell include same number of CIF bits as the corresponding non-fallback DCI formats on the scheduling cell, and the CIF bits are considered reserved.	
enableDefaultBeamForCCS This field indicates whether default beam selection for cross-carrier scheduled PDSCH or aperiodic CSI-RS is enabled, see TS 38.214 [19]. If not present, the default beam selection behaviour is not applied, i.e. Rel-15 behaviour is applied. This field can only be configured in the cross-scheduled SCell or SpCell.	
other Parameters for cross-carrier scheduling. If configured for an SpCell, the SpCell can be scheduled by the PDCCH on another SCell as well as by the PDCCH on the SpCell. If configured for an SCell, the SCell is scheduled by a PDCCH on another cell.	
own Parameters for self-scheduling, i.e., a serving cell is scheduled by its own PDCCH.	
schedulingCellId If configured for an SpCell, this field indicates which SCell, in addition to the SpCell, signals the downlink allocations and uplink grants, if applicable, for the concerned SpCell. If configured for an SCell, this field indicates which cell signals the downlink allocations and uplink grants, if applicable, for the concerned SCell. In case the UE is configured with DC, the scheduling cell is part of the same cell group (i.e. MCG or SCG) as the scheduled cell. In case the UE is configured with two PUCCH groups, the scheduling cell and the scheduled cell are within the same PUCCH group. If <i>drx-ConfigSecondaryGroup</i> is configured in the <i>MAC-CellGroupConfig</i> associated with this serving cell, the scheduling cell and the scheduled cell belong to the same Frequency Range. In addition, the serving cell with an aperiodic CSI trigger and the PUSCH resource scheduled for the report are on the same carrier and serving cell, but the cell for which CSI is reported may belong to the same or a different Frequency Range. The network should not trigger a CSI request for a serving cell in the other Frequency Range when that serving cell is outside Active Time.	

Conditional Presence	Explanation
CIF-PRESENCE	The field is mandatory present if the <i>cif-Presence</i> is set to <i>true</i> . The field is absent otherwise.

– *CSI-AperiodicTriggerStateList*

The *CSI-AperiodicTriggerStateList* IE is used to configure the UE with a list of aperiodic trigger states. Each codepoint of the DCI field "CSI request" is associated with one trigger state (see TS 38.321 [3], clause 6.1.3.13). Upon reception of the value associated with a trigger state, the UE will perform measurement of CSI-RS, CSI-IM and/or SSB (reference signals) and aperiodic reporting on L1 according to all entries in the *associatedReportConfigInfoList* for that trigger state.

CSI-AperiodicTriggerStateList information element

-- ASN1START

```
-- TAG-CSI-APERIODICTRIGGERSTATELIST-START
```

```
CSI-AperiodicTriggerStateList ::= SEQUENCE (SIZE (1..maxNrOfCSI-AperiodicTriggers)) OF CSI-AperiodicTriggerState

CSI-AperiodicTriggerState ::= SEQUENCE {
    associatedReportConfigInfoList SEQUENCE (SIZE(1..maxNrOfReportConfigPerAperiodicTrigger)) OF CSI-AssociatedReportConfigInfo,
    ...,
    [[
        ap-CSI-MultiplexingMode-r17 ENUMERATED {enabled} OPTIONAL -- Need R
    ]],
    [[
        ltm-AssociatedReportConfigInfo-r18 LTM-CSI-ReportConfigId-r18 OPTIONAL -- Need R
    ]]
}

CSI-AssociatedReportConfigInfo ::= SEQUENCE {
    reportConfigId CSI-ReportConfigId,
    resourcesForChannel CHOICE {
        nzp-CSI-RS SEQUENCE {
            resourceSet INTEGER (1..maxNrOfNZP-CSI-RS-ResourceSetsPerConfig),
            qcl-info SEQUENCE (SIZE(1..maxNrOfAP-CSI-RS-ResourcesPerSet)) OF TCI-StateId OPTIONAL -- Cond Aperiodic
        },
        csi-SSB-ResourceSet INTEGER (1..maxNrOfCSI-SSB-ResourceSetsPerConfig)
    },
    csi-IM-ResourcesForInterference INTEGER(1..maxNrOfCSI-IM-ResourceSetsPerConfig) OPTIONAL, -- Cond CSI-IM-ForInterference
    nzp-CSI-RS-ResourcesForInterference INTEGER (1..maxNrOfNZP-CSI-RS-ResourceSetsPerConfig) OPTIONAL, -- Cond NZP-CSI-RS-ForInterference
    ...,
    [[
        resourcesForChannel2-r17 CHOICE {
            nzp-CSI-RS2-r17 SEQUENCE {
                resourceSet2-r17 INTEGER (1..maxNrOfNZP-CSI-RS-ResourceSetsPerConfig),
                qcl-info2-r17 SEQUENCE (SIZE(1..maxNrOfAP-CSI-RS-ResourcesPerSet)) OF TCI-StateId OPTIONAL -- Cond Aperiodic
            },
            csi-SSB-ResourceSet2-r17 INTEGER (1..maxNrOfCSI-SSB-ResourceSetsPerConfigExt)
        },
        csi-SSB-ResourceSetExt INTEGER (1..maxNrOfCSI-SSB-ResourceSetsPerConfigExt) OPTIONAL, -- Need R
    ]],
    [[
        resourcesForChannelTDCP-r18 SEQUENCE {
            resourceSet2TDCP-r18 INTEGER (1..maxNrOfNZP-CSI-RS-ResourceSetsPerConfig),
            resourceSet3TDCP-r18 INTEGER (1..maxNrOfNZP-CSI-RS-ResourceSetsPerConfig) OPTIONAL -- Need R
        },
        applyIndicatedTCI-State-r18 CHOICE {
            perSet-r18 ENUMERATED {first, second},
            perResource-r18 SEQUENCE (SIZE(1..maxNrOfAP-CSI-RS-ResourcesPerSet)) OF ENUMERATED {first, second} OPTIONAL, -- Cond TDCP
        },
        applyIndicatedTCI-State2-r18 CHOICE {
            perSet-r18 ENUMERATED {first, second},
            perResource-r18 SEQUENCE (SIZE(1..maxNrOfAP-CSI-RS-ResourcesPerSet)) OF ENUMERATED {first, second} OPTIONAL, -- Cond SecondCSICMR
    ]],
    csi-ReportSubConfigTriggerList-r18 CSI-ReportSubConfigTriggerList-r18 OPTIONAL -- Need R
}]]
```

```
}  
-- TAG-CSI-APERIODICTRIGGERSTATELIST-STOP  
-- ASN1STOP
```

CSI-AperiodicTriggerState field descriptions
Itm-AssociatedReportConfigInfo This field configures the aperiodic CSI reports of LTM candidate cells. If <i>Itm-associatedReportConfigInfo</i> is configured the UE shall ignore the field <i>associatedReportConfigInfoList</i> .

CSI-AssociatedReportConfigInfo field descriptions
ap-CSI-MultiplexingMode Indicates if the behavior of transmitting aperiodic CSI on the first PUSCH repetitions corresponding to two SRS resource sets configured in <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook' is enabled or not.
applyIndicatedTCI-State, applyIndicatedTCI-State2 This field indicates, for an aperiodic CSI-RS resource set (perSet) or for CSI-RS resource (perResource), if UE applies the first or the second "indicated" DL only TCI or joint TCI as specified in TS 38.214 [19], clause 5.2.1.5.1. The <i>applyIndicatedTCI-State</i> is for <i>ResourcesForChannel</i>, and <i>applyIndicatedTCI-State2</i> is for <i>ResourcesForChannel2</i>. When <i>applyIndicatedTCI-State</i> and <i>applyIndicatedTCI-State2</i> are absent, the UE shall use <i>qcl-info</i> for <i>ResourcesForChannel</i> and use <i>qcl-info2</i> for <i>ResourcesForChannel2</i>.
csi-IM-ResourcesForInterference <i>CSI-IM-ResourceSet</i> for interference measurement. Entry number in <i>csi-IM-ResourceSetList</i> in the <i>CSI-ResourceConfig</i> indicated by <i>csi-IM-ResourcesForInterference</i> in the <i>CSI-ReportConfig</i> indicated by <i>reportConfigId</i> above (value 1 corresponds to the first entry, value 2 to the second entry, and so on). The indicated <i>CSI-IM-ResourceSet</i> should have exactly the same number of resources like the <i>NZP-CSI-RS-ResourceSet</i> indicated in <i>resourceSet</i> within <i>nzp-CSI-RS</i>.
csi-ReportSubConfigTriggerList A list of sub-configuration ID(s) of N sub-configurations out of L configured sub-configurations within a <i>CSI-ReportConfig</i> associated with a triggering state for aperiodic CSI reporting on PUSCH.
csi-SSB-ResourceSet, csi-SSB-ResourceSet2 <i>CSI-SSB-ResourceSet</i> for channel measurements. Entry number in <i>csi-SSB-ResourceSetList</i> in the <i>CSI-ResourceConfig</i> indicated by <i>resourcesForChannelMeasurement</i> in the <i>CSI-ReportConfig</i> indicated by <i>reportConfigId</i> above (value 1 corresponds to the first entry, value 2 to the second entry, and so on).
nzp-CSI-RS-ResourcesForInterference <i>NZP-CSI-RS-ResourceSet</i> for interference measurement. Entry number in <i>nzp-CSI-RS-ResourceSetList</i> in the <i>CSI-ResourceConfig</i> indicated by <i>nzp-CSI-RS-ResourcesForInterference</i> in the <i>CSI-ReportConfig</i> indicated by <i>reportConfigId</i> above (value 1 corresponds to the first entry, value 2 to the second entry, and so on).
qcl-info, qcl-info2 Fields <i>qcl-Info</i> and <i>qcl-Info2</i> are lists of references to TCI-States for providing the QCL source and QCL type for each <i>NZP-CSI-RS-Resource</i> listed in <i>nzp-CSI-RS-Resources</i> of the <i>NZP-CSI-RS-ResourceSet</i>, indicated by <i>resourceSet</i> within <i>nzp-CSI-RS</i> and by <i>resourceSet2</i> within <i>nzp-CSI-RS2</i>, respectively. Each <i>TCI-StateId</i> refers to the <i>TCI-State</i> which has this value for <i>tcI-StateId</i> and is defined in <i>tcI-StatesToAddModList</i> or in <i>dl-OrJointTCI-StateList</i> in the <i>PDSCH-Config</i> included in the <i>BWP-Downlink</i> corresponding to the serving cell and to the DL BWP to which the <i>resourcesForChannelMeasurement</i> (in the <i>CSI-ReportConfig</i> indicated by <i>reportConfigId</i> above) belong to. First entry in <i>qcl-info/qcl-info2</i> corresponds to first entry in <i>nzp-CSI-RS-Resources</i> of that <i>NZP-CSI-RS-ResourceSet</i>, second entry in <i>qcl-info/qcl-info2</i> corresponds to second entry in <i>nzp-CSI-RS-Resources</i>, and so on (see TS 38.214 [19], clause 5.2.1.5.1). When this field is absent for aperiodic CSI RS, and <i>applyIndicatedTCI-State</i> or <i>applyIndicatedTCI-State2</i> is not configured, the UE shall use QCL information included in the "indicated" DL only/Joint TCI state as specified in TS 38.214 [19].
reportConfigId The <i>reportConfigId</i> of one of the <i>CSI-ReportConfigToAddMod</i> configured in <i>CSI-MeasConfig</i>.
resourcesForChannel2 Configures reference signals for channel measurement corresponding to the second resource set for L1-RSRP measurement as configured in IE <i>CSI-ResourceConfig</i> when <i>nrofReportedGroups-r17</i> is configured in IE <i>CSI-ReportConfig</i>. If this is present, network configures <i>csi-SSB-ResourceSetExt</i> instead of <i>csi-SSB-ResourceSet</i> and the UE ignores <i>csi-SSB-ResourceSet</i> in <i>resourcesForChannel</i>, and the <i>resourcesForChannel</i> configures the reference signals for channel measurement corresponding to the first resource set for L1-RSRP measurement (see TS 38.214 [19], clause 5.2.1.4).
resourcesForChannelTDCP Configures reference signals for channel measurement corresponding to the second resource set and third resource set for TDCP reporting. All CSI resources of these two resource sets always share the same QCL-info with the resource sets indicated by <i>resourcesForChannel</i> as specified in TS 38.214 [19].
resourceSet, resourceSet2 <i>NZP-CSI-RS-ResourceSet</i> for channel measurements. Entry number in <i>nzp-CSI-RS-ResourceSetList</i> in the <i>CSI-ResourceConfig</i> indicated by <i>resourcesForChannelMeasurement</i> in the <i>CSI-ReportConfig</i> indicated by <i>reportConfigId</i> above (value 1 corresponds to the first entry, value 2 to the second entry, and so on).

Conditional Presence	Explanation
<i>Aperiodic</i>	The field is mandatory present if the <i>NZP-CSI-RS-Resources</i> in the associated <i>resourceSet</i> have the <i>resourceType</i> aperiodic and <i>unifiedTCI-StateType</i> is not configured. The field is optionally present, Need R, if the <i>NZP-CSI-RS-Resources</i> in the associated <i>resourceSet</i> have the <i>resourceType</i> aperiodic and <i>unifiedTCI-StateType</i> is configured. The field is absent otherwise.
<i>ApplyIndicatedTCI</i>	The field is optionally present, need R, if <i>resourceForChannel</i> has aperiodic CSI-RS and <i>unifiedTCI-StateType</i> is configured. This field is absent otherwise.
<i>CSI-IM-ForInterference</i>	This field is mandatory present if the <i>CSI-ReportConfig</i> identified by <i>reportConfigId</i> is configured with <i>csi-IM-ResourcesForInterference</i> ; otherwise it is absent.
<i>NZP-CSI-RS-ForInterference</i>	This field is mandatory present if the <i>CSI-ReportConfig</i> identified by <i>reportConfigId</i> is configured with <i>nzp-CSI-RS-ResourcesForInterference</i> ; otherwise it is absent.
<i>SecondCSICMR</i>	This field is mandatory present if <i>resourcesForChannel2</i> is configured with aperiodic CSI-RS and <i>applyIndicatedTCI-State</i> is configured. It is absent otherwise.
<i>TDCP</i>	This field is absent if <i>resourcesForChannel2</i> is configured. It is optionally present, Need R, otherwise.

– CSI-FrequencyOccupation

The IE *CSI-FrequencyOccupation* is used to configure the frequency domain occupation of a channel state information measurement resource (e.g. *NZP-CSI-RS-Resource*, *CSI-IM-Resource*).

CSI-FrequencyOccupation information element

```

-- ASN1START
-- TAG-CSI-FREQUENCYOCCUPATION-START

CSI-FrequencyOccupation ::=
    SEQUENCE {
        startingRB          INTEGER (0..maxNrofPhysicalResourceBlocks-1),
        nrofRBs             INTEGER (24..maxNrofPhysicalResourceBlocksPlus1),
        ...
    }

-- TAG-CSI-FREQUENCYOCCUPATION-STOP
-- ASN1STOP
    
```

CSI-FrequencyOccupation field descriptions
nrofRBs Number of PRBs across which this CSI resource spans. Only multiples of 4 are allowed. The smallest configurable number is the minimum of 24 and the width of the associated BWP. If the configured value is larger than the width of the corresponding BWP, the UE shall assume that the actual CSI-RS bandwidth is equal to the width of the BWP.
startingRB PRB where this CSI resource starts in relation to common resource block #0 (CRB#0) on the common resource block grid. Only multiples of 4 are allowed (0, 4, ...)

— CSI-IM-Resource

The IE *CSI-IM-Resource* is used to configure one CSI Interference Management (IM) resource.

CSI-IM-Resource information element

```
-- ASN1START
-- TAG-CSI-IM-RESOURCE-START

CSI-IM-Resource ::=
  csi-IM-ResourceId          SEQUENCE {
    csi-IM-ResourceElementPattern CHOICE {
      pattern0 SEQUENCE {
        subcarrierLocation-p0 ENUMERATED { s0, s2, s4, s6, s8, s10 },
        symbolLocation-p0    INTEGER (0..12)
      },
      pattern1 SEQUENCE {
        subcarrierLocation-p1 ENUMERATED { s0, s4, s8 },
        symbolLocation-p1    INTEGER (0..13)
      }
    },
    freqBand          OPTIONAL, -- Need M
    periodicityAndOffset CSI-FrequencyOccupation OPTIONAL, -- Need M
    ...               CSI-ResourcePeriodicityAndOffset OPTIONAL, -- Cond PeriodicOrSemiPersistent
  }

-- TAG-CSI-IM-RESOURCE-STOP
-- ASN1STOP
```

CSI-IM-Resource field descriptions	
csi-IM-ResourceElementPattern	The resource element pattern (Pattern0 (2,2) or Pattern1 (4,1)) with corresponding parameters (see TS 38.214 [19], clause 5.2.2.4)
freqBand	Frequency-occupancy of CSI-IM (see TS 38.214 [19], clause 5.2.2.4)
periodicityAndOffset	Periodicity and slot offset for periodic/semi-persistent CSI-IM. Network always configures the UE with a value for this field for periodic and semi-persistent CSI-IM-Resources (as indicated in CSI-ResourceConfig). A change of configuration between periodic or semi-persistent and aperiodic for a CSI-IM-Resource is not supported without a release and add.
subcarrierLocation-p0	OFDM subcarrier occupancy of the CSI-IM resource for Pattern0 (see TS 38.214 [19], clause 5.2.2.4)
subcarrierLocation-p1	OFDM subcarrier occupancy of the CSI-IM resource for Pattern1 (see TS 38.214 [19], clause 5.2.2.4)
symbolLocation-p0	OFDM symbol location of the CSI-IM resource for Pattern0 (see TS 38.214 [19], clause 5.2.2.4)
symbolLocation-p1	OFDM symbol location of the CSI-IM resource for Pattern1 (see TS 38.214 [19], clause 5.2.2.4)

Conditional Presence	Explanation
<i>PeriodicOrSemiPersistent</i>	The field is optionally present, Need M, for periodic and semi-persistent CSI-IM-Resources (as indicated in CSI-ResourceConfig). The field is absent otherwise.

– *CSI-IM-ResourceId*

The IE *CSI-IM-ResourceId* is used to identify one *CSI-IM-Resource*.

***CSI-IM-ResourceId* information element**

```
-- ASN1START
-- TAG-CSI-IM-RESOURCEID-START

CSI-IM-ResourceId ::=                INTEGER (0..maxNrofCSI-IM-Resources-1)

-- TAG-CSI-IM-RESOURCEID-STOP
-- ASN1STOP
```

– *CSI-IM-ResourceSet*

The IE *CSI-IM-ResourceSet* is used to configure a set of one or more CSI Interference Management (IM) resources (their IDs) and set-specific parameters.

***CSI-IM-ResourceSet* information element**

```
-- ASN1START
-- TAG-CSI-IM-RESOURCESET-START

CSI-IM-ResourceSet ::=
  csi-IM-ResourceSetId               SEQUENCE {
    csi-IM-Resources                 CSI-IM-ResourceSetId,
    ...                             SEQUENCE (SIZE(1..maxNrofCSI-IM-ResourcesPerSet)) OF CSI-IM-ResourceId,
  }

-- TAG-CSI-IM-RESOURCESET-STOP
-- ASN1STOP
```

<i>CSI-IM-ResourceSet</i> field descriptions
<i>csi-IM-Resources</i> <i>CSI-IM-Resources</i> associated with this <i>CSI-IM-ResourceSet</i> (see TS 38.214 [19], clause 5.2).

– *CSI-IM-ResourceSetId*

The IE *CSI-IM-ResourceSetId* is used to identify *CSI-IM-ResourceSets*.

CSI-IM-ResourceSetId information element

```
-- ASN1START
-- TAG-CSI-IM-RESOURCESETID-START

CSI-IM-ResourceSetId ::=                INTEGER (0..maxNrofCSI-IM-ResourceSets-1)

-- TAG-CSI-IM-RESOURCESETID-STOP
-- ASN1STOP
```

CSI-MeasConfig

The IE *CSI-MeasConfig* is used to configure CSI-RS (reference signals) belonging to the serving cell in which *CSI-MeasConfig* is included, channel state information reports to be transmitted on PUCCH on the serving cell in which *CSI-MeasConfig* is included and channel state information reports on PUSCH triggered by DCI received on the serving cell in which *CSI-MeasConfig* is included. See also TS 38.214 [19], clause 5.2.

CSI-MeasConfig information element

```
-- ASN1START
-- TAG-CSI-MEASCONFIG-START

CSI-MeasConfig ::=
    SEQUENCE {
        nzp-CSI-RS-ResourceToAddModList    SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-Resources)) OF NZP-CSI-RS-Resource OPTIONAL, -- Need N
        nzp-CSI-RS-ResourceToReleaseList    SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-Resources)) OF NZP-CSI-RS-ResourceId OPTIONAL, -- Need N
        nzp-CSI-RS-ResourceSetToAddModList  SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourceSets)) OF NZP-CSI-RS-ResourceSet OPTIONAL, -- Need N
        nzp-CSI-RS-ResourceSetToReleaseList SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourceSets)) OF NZP-CSI-RS-ResourceSetId OPTIONAL, -- Need N
        csi-IM-ResourceToAddModList         SEQUENCE (SIZE (1..maxNrofCSI-IM-Resources)) OF CSI-IM-Resource OPTIONAL, -- Need N
        csi-IM-ResourceToReleaseList         SEQUENCE (SIZE (1..maxNrofCSI-IM-Resources)) OF CSI-IM-ResourceId OPTIONAL, -- Need N
        csi-IM-ResourceSetToAddModList       SEQUENCE (SIZE (1..maxNrofCSI-IM-ResourceSets)) OF CSI-IM-ResourceSet OPTIONAL, -- Need N
        csi-IM-ResourceSetToReleaseList      SEQUENCE (SIZE (1..maxNrofCSI-IM-ResourceSets)) OF CSI-IM-ResourceSetId OPTIONAL, -- Need N
        csi-SSB-ResourceSetToAddModList      SEQUENCE (SIZE (1..maxNrofCSI-SSB-ResourceSets)) OF CSI-SSB-ResourceSet OPTIONAL, -- Need N
        csi-SSB-ResourceSetToReleaseList     SEQUENCE (SIZE (1..maxNrofCSI-SSB-ResourceSets)) OF CSI-SSB-ResourceSetId OPTIONAL, -- Need N
        csi-ResourceConfigToAddModList      SEQUENCE (SIZE (1..maxNrofCSI-ResourceConfigurations)) OF CSI-ResourceConfig OPTIONAL, -- Need N
        csi-ResourceConfigToReleaseList      SEQUENCE (SIZE (1..maxNrofCSI-ResourceConfigurations)) OF CSI-ResourceConfigId OPTIONAL, -- Need N
        csi-ReportConfigToAddModList        SEQUENCE (SIZE (1..maxNrofCSI-ReportConfigurations)) OF CSI-ReportConfig OPTIONAL, -- Need N
        csi-ReportConfigToReleaseList        SEQUENCE (SIZE (1..maxNrofCSI-ReportConfigurations)) OF CSI-ReportConfigId OPTIONAL, -- Need N
        reportTriggerSize                   INTEGER (0..6) OPTIONAL, -- Need M
        aperiodicTriggerStateList            SetupRelease { CSI-AperiodicTriggerStateList } OPTIONAL, -- Need M
        semiPersistentOnPUSCH-TriggerStateList SetupRelease { CSI-SemiPersistentOnPUSCH-TriggerStateList } OPTIONAL, -- Need M
        ...
        [[
            reportTriggerSizeDCI-0-2-r16    INTEGER (0..6) OPTIONAL -- Need R
        ]],
        [[
            sCellActivationRS-ConfigToAddModList-r17 SEQUENCE (SIZE (1..maxNrofSCellActRS-r17)) OF SCellActivationRS-Config-r17 OPTIONAL, -- Need N
        ]]
```

```

sCellActivationRS-ConfigToReleaseList-r17 SEQUENCE (SIZE (1..maxNrofSCellActRS-r17)) OF SCellActivationRS-ConfigId-r17 OPTIONAL -- Need N
]],
[[
ltm-CSI-ReportConfigToAddModList-r18 SEQUENCE (SIZE (1..maxNrofLTM-CSI-ReportConfigurations-r18)) OF LTM-CSI-ReportConfig-r18
                                                                    OPTIONAL, -- Need N
ltm-CSI-ReportConfigToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofLTM-CSI-ReportConfigurations-r18)) OF LTM-CSI-ReportConfigId-r18
                                                                    OPTIONAL -- Need N
]]
}

-- TAG-CSI-MEASCONFIG-STOP
-- ASN1STOP

```

CSI-MeasConfig field descriptions
aperiodicTriggerStateList Contains trigger states for dynamically selecting one or more aperiodic and semi-persistent reporting configurations and/or triggering one or more aperiodic CSI-RS resource sets for channel and/or interference measurement (see TS 38.214 [19], clause 5.2.1).
csi-IM-ResourceSetToAddModList Pool of CSI-IM-ResourceSet which can be referred to from CSI-ResourceConfig or from MAC CEs.
csi-IM-ResourceToAddModList Pool of CSI-IM-Resource which can be referred to from CSI-IM-ResourceSet.
csi-ReportConfigToAddModList Configured CSI report settings as specified in TS 38.214 [19] clause 5.2.1.1.
csi-ResourceConfigToAddModList Configured CSI resource settings as specified in TS 38.214 [19] clause 5.2.1.2.
csi-SSB-ResourceSetToAddModList Pool of CSI-SSB-ResourceSet which can be referred to from CSI-ResourceConfig.
ltm-CSI-ReportConfigToAddModList Configured CSI report settings for LTM as specified in TS 38.214 [19].
nzp-CSI-RS-ResourceSetToAddModList Pool of NZP-CSI-RS-ResourceSet which can be referred to from CSI-ResourceConfig or from MAC CEs.
nzp-CSI-RS-ResourceToAddModList Pool of NZP-CSI-RS-Resource which can be referred to from NZP-CSI-RS-ResourceSet.
reportTriggerSize, reportTriggerSizeDCI-0-2 Size of CSI request field in DCI (bits) (see TS 38.214 [19], clause 5.2.1.5.1). The field <i>reportTriggerSize</i> applies to DCI format 0_1 and the field <i>reportTriggerSizeDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 5.2.1.5.1).
scellActivationRS-ConfigToAddModList Configured RS for fast SCell activation as specified in TS 38.214 [19] clause 5.2.1.5.3.

– CSI-ReportConfig

The IE *CSI-ReportConfig* is used to configure a periodic or semi-persistent report sent on PUCCH on the cell in which the *CSI-ReportConfig* is included, or to configure a semi-persistent or aperiodic report sent on PUSCH triggered by DCI received on the cell in which the *CSI-ReportConfig* is included (in this case, the cell on which the report is sent is determined by the received DCI). See TS 38.214 [19], clause 5.2.1.

CSI-ReportConfig information element

```

-- ASN1START
-- TAG-CSI-REPORTCONFIG-START

CSI-ReportConfig ::=
    reportConfigId
    carrier
    resourcesForChannelMeasurement
    csi-IM-ResourcesForInterference
    nzp-CSI-RS-ResourcesForInterference
    reportConfigType
        periodic
            reportSlotConfig
            pucch-CSI-ResourceList
        },
        semiPersistentOnPUCCH
            reportSlotConfig
            pucch-CSI-ResourceList
        },
        semiPersistentOnPUSCH
            reportSlotConfig
            reportSlotOffsetList
            p0alpha
        },
        aperiodic
            reportSlotOffsetList
    },
    reportQuantity
        none
        cri-RI-PMI-CQI
        cri-RI-i1
        cri-RI-i1-CQI
        pdsch-BundleSizeForCSI
    },
    cri-RI-CQI
    cri-RSRP
    ssb-Index-RSRP
    cri-RI-LI-PMI-CQI
},
reportFreqConfiguration
    cqi-FormatIndicator
    pmi-FormatIndicator
    csi-ReportingBand
        subbands3
        subbands4
        subbands5
        subbands6
        subbands7
        subbands8
        subbands9
        subbands10
        subbands11
    }

```

SEQUENCE {

CSI-ReportConfigId,

ServCellIndex OPTIONAL, -- Need S

CSI-ResourceConfigId,

CSI-ResourceConfigId OPTIONAL, -- Need R

CSI-ResourceConfigId OPTIONAL, -- Need R

CHOICE {

SEQUENCE {

CSI-ReportPeriodicityAndOffset,

SEQUENCE (SIZE (1..maxNrofBWPs)) OF PUCCH-CSI-Resource

SEQUENCE {

CSI-ReportPeriodicityAndOffset,

SEQUENCE (SIZE (1..maxNrofBWPs)) OF PUCCH-CSI-Resource

SEQUENCE {

ENUMERATED {sl5, sl10, sl20, sl40, sl80, sl160, sl320},

SEQUENCE (SIZE (1..maxNrofUL-Allocations)) OF INTEGER(0..32),

P0-PUSCH-AlphaSetId

SEQUENCE {

SEQUENCE (SIZE (1..maxNrofUL-Allocations)) OF INTEGER(0..32)

CHOICE {

NULL,

NULL,

NULL,

SEQUENCE {

ENUMERATED {n2, n4} OPTIONAL -- Need S

NULL,

NULL,

NULL,

NULL

SEQUENCE {

ENUMERATED { widebandCQI, subbandCQI } OPTIONAL, -- Need R

ENUMERATED { widebandPMI, subbandPMI } OPTIONAL, -- Need R

CHOICE {

BIT STRING(SIZE(3)),

BIT STRING(SIZE(4)),

BIT STRING(SIZE(5)),

BIT STRING(SIZE(6)),

BIT STRING(SIZE(7)),

BIT STRING(SIZE(8)),

BIT STRING(SIZE(9)),

BIT STRING(SIZE(10)),

BIT STRING(SIZE(11)),

```

        subbands12          BIT STRING(SIZE(12)),
        subbands13          BIT STRING(SIZE(13)),
        subbands14          BIT STRING(SIZE(14)),
        subbands15          BIT STRING(SIZE(15)),
        subbands16          BIT STRING(SIZE(16)),
        subbands17          BIT STRING(SIZE(17)),
        subbands18          BIT STRING(SIZE(18)),
        ...,
        subbands19-v1530    BIT STRING(SIZE(19))
    } OPTIONAL -- Need S

},
timeRestrictionForChannelMeasurements ENUMERATED {configured, notConfigured},
timeRestrictionForInterferenceMeasurements ENUMERATED {configured, notConfigured},
codebookConfig CodebookConfig OPTIONAL, -- Need R
dummy ENUMERATED {n1, n2} OPTIONAL, -- Need R
groupBasedBeamReporting CHOICE {
    enabled NULL,
    disabled SEQUENCE {
        nrofReportedRS ENUMERATED {n1, n2, n3, n4} OPTIONAL -- Need S
    }
},
cqi-Table ENUMERATED {table1, table2, table3, table4-r17} OPTIONAL, -- Need R
subbandSize ENUMERATED {value1, value2},
non-PMI-PortIndication SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourcesPerConfig)) OF PortIndexFor8Ranks OPTIONAL, -- Need R
...,
[[
semiPersistentOnPUSCH-v1530 SEQUENCE {
    reportSlotConfig-v1530 ENUMERATED {sl4, sl8, sl16}
}
]],
[[
semiPersistentOnPUSCH-v1610 SEQUENCE {
    reportSlotOffsetListDCI-0-2-r16 SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..32) OPTIONAL, -- Need R
    reportSlotOffsetListDCI-0-1-r16 SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..32) OPTIONAL, -- Need R
}
aperiodic-v1610 SEQUENCE {
    reportSlotOffsetListDCI-0-2-r16 SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..32) OPTIONAL, -- Need R
    reportSlotOffsetListDCI-0-1-r16 SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..32) OPTIONAL, -- Need R
}
reportQuantity-r16 CHOICE {
    cri-SINR-r16 NULL,
    ssb-Index-SINR-r16 NULL
}
codebookConfig-r16 CodebookConfig-r16 OPTIONAL, -- Need R
]],
[[
cqi-BitsPerSubband-r17 ENUMERATED {bits4} OPTIONAL, -- Need R
groupBasedBeamReporting-v1710 SEQUENCE {
    nrofReportedGroups-r17 ENUMERATED {n1, n2, n3, n4}
}
codebookConfig-r17 CodebookConfig-r17 OPTIONAL, -- Need R
sharedCMR-r17 ENUMERATED {enable} OPTIONAL, -- Need R
csi-ReportMode-r17 ENUMERATED {mode1, mode2} OPTIONAL, -- Need R

```

```

numberOfSingleTRP-CSI-Mode1-r17      ENUMERATED {n0, n1, n2}
reportQuantity-r17                    CHOICE {
  cri-RSRP-Index-r17                  NULL,
  ssb-Index-RSRP-Index-r17            NULL,
  cri-SINR-Index-r17                  NULL,
  ssb-Index-SINR-Index-r17            NULL
}
]],
[[
semiPersistentOnPUSCH-v1720           SEQUENCE {
  reportSlotOffsetList-r17            SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..128)
  reportSlotOffsetListDCI-0-2-r17     SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..128)
  reportSlotOffsetListDCI-0-1-r17     SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..128)
}
aperiodic-v1720                       SEQUENCE {
  reportSlotOffsetList-r17            SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..128)
  reportSlotOffsetListDCI-0-2-r17     SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..128)
  reportSlotOffsetListDCI-0-1-r17     SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER(0..128)
}
]],
[[
codebookConfig-v1730                  CodebookConfig-v1730
]],
[[
groupBasedBeamReporting-v1800         SEQUENCE {
  reportingMode-r18                    ENUMERATED {jointULDL, onlyUL}
}
reportQuantity-r18                     TDGP-r18
codebookConfig-r18                     CodebookConfig-r18
csi-ReportSubConfigToAddModList-r18    SEQUENCE (SIZE (1..maxNrofCSI-ReportSubconfigPerCSI-ReportConfig-r18)) OF CSI-ReportSubConfig-r18
csi-ReportSubConfigToReleaseList-r18   SEQUENCE (SIZE (1..maxNrofCSI-ReportSubconfigPerCSI-ReportConfig-r18)) OF CSI-ReportSubConfigId-r18
]]
}

PortIndexFor8Ranks ::=
  portIndex8
    rank1-8
    rank2-8
    rank3-8
    rank4-8
    rank5-8
    rank6-8
    rank7-8
    rank8-8
  },
  portIndex4
    rank1-4
    rank2-4
    rank3-4
    rank4-4
  },
  portIndex2
    SEQUENCE {
      PortIndex8
        SEQUENCE(SIZE(2)) OF PortIndex8
        SEQUENCE(SIZE(3)) OF PortIndex8
        SEQUENCE(SIZE(4)) OF PortIndex8
        SEQUENCE(SIZE(5)) OF PortIndex8
        SEQUENCE(SIZE(6)) OF PortIndex8
        SEQUENCE(SIZE(7)) OF PortIndex8
        SEQUENCE(SIZE(8)) OF PortIndex8
      },
      PortIndex4
        SEQUENCE(SIZE(2)) OF PortIndex4
        SEQUENCE(SIZE(3)) OF PortIndex4
        SEQUENCE(SIZE(4)) OF PortIndex4
      },
      PortIndex2
        SEQUENCE {

```

```

        rank1-2
        rank2-2
    },
    portIndex1
}

PortIndex8 ::=
PortIndex4 ::=
PortIndex2 ::=

TDCP-r18 ::=
    delayDSetofLengthY-r18
    phaseReporting-r18
}

DelayD ::=

CSI-ReportSubConfig-r18 ::=
    reportSubConfigId-r18
    reportSubConfigParams-r18
        a1-parameters
            codebookSubConfig-r18
            portSubsetIndicator-r18
                p2
                p4
                p8
                p12
                p16
                p24
                p32
            }
            non-PMI-PortIndication-r18
        },
        a2-parameters
            nzp-CSI-RS-ResourceList-r18
        }
    }
    powerOffset-r18
}

NZP-CSI-RS-ResourceIndex-r18 ::=

-- TAG-CSI-REPORTCONFIG-STOP
-- ASN1STOP

```

PortIndex2
 SEQUENCE(SIZE(2)) OF PortIndex2
 OPTIONAL, -- Need R
 OPTIONAL -- Need R
 NULL
 INTEGER (0..7)
 INTEGER (0..3)
 INTEGER (0..1)
 SEQUENCE {
 SEQUENCE (SIZE (1.. maxNrofDelayD-r18)) OF DelayD,
 ENUMERATED {enable}
 OPTIONAL -- Need R
 ENUMERATED { symb4, slot1, slot2, slot3, slot4, slot5, slot6, slot10 }
 SEQUENCE {
 CSI-ReportSubConfigId-r18,
 CHOICE {
 SEQUENCE {
 CodebookConfig
 CHOICE {
 BIT STRING (SIZE (2)),
 BIT STRING (SIZE (4)),
 BIT STRING (SIZE (8)),
 BIT STRING (SIZE (12)),
 BIT STRING (SIZE (16)),
 BIT STRING (SIZE (24)),
 BIT STRING (SIZE (32))
 }
 SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourcesPerConfig)) OF PortIndexFor8Ranks
 OPTIONAL, -- Need R
 OPTIONAL -- Need R
 SEQUENCE {
 SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourcesPerSet)) OF NZP-CSI-RS-ResourceIndex-r18
 }
 }
 INTEGER(0..23)
 OPTIONAL, -- Need R
 OPTIONAL -- Need R
 INTEGER (0..maxNrofNZP-CSI-RS-ResourcesPerSet-1-r18)

CSI-ReportConfig field descriptions
carrier Indicates in which serving cell the <i>CSI-ResourceConfig</i> indicated below are to be found. If the field is absent, the resources are on the same serving cell as this report configuration.
codebookConfig Codebook configuration for Type-1 or Type-2 including codebook subset restriction. Network can only configure one of <i>codebookConfig</i> , <i>codebookConfig-r16</i> or <i>codebookConfig-r17</i> or <i>codebookConfig-r18</i> in a <i>CSI-ReportConfig</i> . The network includes <i>codebookConfig-v1730</i> only if <i>codebookConfig-r17</i> is configured.
cqi-BitsPerSubband This field can only be present if <i>cqi-FormatIndicator</i> is set to <i>subbandCQI</i> . If the field is configured with <i>bits4</i> , the UE uses 4-bit sub-band CQI. If the field is not present and <i>cqi-FormatIndicator</i> is set to <i>subbandCQI</i> , the UE uses 2-bit sub-band differential CQI.
cqi-FormatIndicator Indicates whether the UE shall report a single (wideband) or multiple (subband) CQI (see TS 38.214 [19], clause 5.2.1.4).
cqi-Table Which CQI table to use for CQI calculation (see TS 38.214 [19], clause 5.2.2.1). For an (e)RedCap UE, CQI table 2 is only supported if the UE indicates support of 256QAM for PDSCH.
csi-IM-ResourcesForInterference CSI IM resources for interference measurement. <i>csi-ResourceConfigId</i> of a <i>CSI-ResourceConfig</i> included in the configuration of the serving cell indicated with the field "carrier" above. The <i>CSI-ResourceConfig</i> indicated here contains only CSI-IM resources. The <i>bwp-Id</i> in that <i>CSI-ResourceConfig</i> is the same value as the <i>bwp-Id</i> in the <i>CSI-ResourceConfig</i> indicated by <i>resourcesForChannelMeasurement</i> .
csi-ReportingBand Indicates a contiguous or non-contiguous subset of subbands in the bandwidth part which CSI shall be reported for. Each bit in the bit-string represents one subband in order of frequency position in the BWP. The right-most bit in the bit string represents the lowest subband with the lowest frequency position in the BWP. The choice determines the number of subbands (subbands3 for 3 subbands, subbands4 for 4 subbands, and so on) (see TS 38.214 [19], clause 5.2.1.4). This field is absent if there are less than 24 PRBs (no sub band) and present otherwise (see TS 38.214 [19], clause 5.2.1.4). NOTE: In TS 38.212 [17] clause 6.3.1.1.2 and TS 38.214 [19] clause 5.2.1.4, only subbands to be reported are numbered, e.g. subband #0 is the subband corresponding to the right-most bit set to 1.
csi-ReportMode Configures the CSI report modes Mode1 or Mode 2 (see TS 38.214 [19], clause 5.2.1.4.2)
csi-ReportSubConfigToAddModList List of CSI-ReportSubConfiguration(s) in a CSI report configuration to add or modify. No simultaneous configuration of <i>portSubsetIndicator</i> and a list of <i>nzp-CSI-RS-resources</i> in a same CSI report sub-configuration. The number of elements in a list is at least 2.
csi-ReportSubConfigToReleaseList List of CSI-ReportSubConfiguration(s) in a CSI report configuration to release.
dummy This field is not used in the specification. If received it shall be ignored by the UE.
groupBasedBeamReporting Turning on/off group beam based reporting (see TS 38.214 [19], clause 5.2.1.4). If <i>groupBasedBeamReporting</i> (without suffix) is set to disabled, <i>groupBasedBeamReporting-v1710</i> and <i>groupBasedBeamReporting-v1800</i> is absent.

non-PMI-PortIndication
Port indication for RI/CQI calculation. For each CSI-RS resource in the linked ResourceConfig for channel measurement, a port indication for each rank R, indicating which R ports to use. Applicable only for non-PMI feedback (see TS 38.214 [19], clause 5.2.1.4.2). The first entry in <i>non-PMI-PortIndication</i> corresponds to the NZP-CSI-RS-Resource indicated by the first entry in <i>nzp-CSI-RS-Resources</i> in the <i>NZP-CSI-RS-ResourceSet</i> indicated in the first entry of <i>nzp-CSI-RS-ResourceSetList</i> of the <i>CSI-ResourceConfig</i> whose <i>CSI-ResourceConfigId</i> is indicated in a CSI-MeasId together with the above <i>CSI-ReportConfigId</i> ; the second entry in <i>non-PMI-PortIndication</i> corresponds to the NZP-CSI-RS-Resource indicated by the second entry in <i>nzp-CSI-RS-Resources</i> in the <i>NZP-CSI-RS-ResourceSet</i> indicated in the first entry of <i>nzp-CSI-RS-ResourceSetList</i> of the same <i>CSI-ResourceConfig</i> , and so on until the NZP-CSI-RS-Resource indicated by the last entry in <i>nzp-CSI-RS-Resources</i> in the <i>NZP-CSI-RS-ResourceSet</i> indicated in the first entry of <i>nzp-CSI-RS-ResourceSetList</i> of the same <i>CSI-ResourceConfig</i> . Then the next entry corresponds to the NZP-CSI-RS-Resource indicated by the first entry in <i>nzp-CSI-RS-Resources</i> in the <i>NZP-CSI-RS-ResourceSet</i> indicated in the second entry of <i>nzp-CSI-RS-ResourceSetList</i> of the same <i>CSI-ResourceConfig</i> and so on.
nrofReportedGroups
Number of reported resource groups per CSI-report. Value <i>n1</i> means one resource group, <i>n2</i> means 2 resource groups, and so on. If <i>nrofReportedGroups</i> is configured, the UE ignores groupBasedBeamReporting (without suffix).
nrofReportedRS
The number (N) of measured RS resources to be reported per report setting in a non-group-based report. $N \leq N_{\max}$, where $N_{\max}$ is either 2 or 4 depending on UE capability. (see TS 38.214 [19], clause 5.2.1.4) When the field is absent the UE applies the value 1.
numberOfSingleTRP-CSI-Mode1
Configures the number of reported X CSIs when <i>csi-ReportMode</i> is set to 'Mode 1' as described in TS 38.214 [19], clause 5.2.1.4.2. The field is present only if <i>csi-ReportMode</i> configures Mode 1.
nzp-CSI-RS-ResourcesForInterference
NZP CSI RS resources for interference measurement. <i>csi-ResourceConfigId</i> of a <i>CSI-ResourceConfig</i> included in the configuration of the serving cell indicated with the field "carrier" above. The <i>CSI-ResourceConfig</i> indicated here contains only NZP-CSI-RS resources. The <i>bwpld</i> in that <i>CSI-ResourceConfig</i> is the same value as the <i>bwpld</i> in the <i>CSI-ResourceConfig</i> indicated by <i>resourcesForChannelMeasurement</i> .
p0alpha
Index of the p0-alpha set determining the power control for this CSI report transmission (see TS 38.214 [19], clause 6.2.1.2).
pdsch-BundleSizeForCSI
PRB bundling size to assume for CQI calculation when <i>reportQuantity</i> is CRI/RI/i1/CQI. If the field is absent, the UE assumes that no PRB bundling is applied (see TS 38.214 [19], clause 5.2.1.4.2).
pmi-FormatIndicator
Indicates whether the UE shall report a single (wideband) or multiple (subband) PMI. (see TS 38.214 [19], clause 5.2.1.4).
pucch-CSI-ResourceList
Indicates which PUCCH resource to use for reporting on PUCCH.
reportConfigType
Time domain behavior of reporting configuration.
reportFreqConfiguration
Reporting configuration in the frequency domain. (see TS 38.214 [19], clause 5.2.1.4).
reportQuantity
The CSI related quantities to report. see TS 38.214 [19], clause 5.2.1. If the field <i>reportQuantity-r16</i> , <i>reportQuantity-r17</i> or <i>reportQuantity-r18</i> is present, UE shall ignore <i>reportQuantity</i> (without suffix). Network does not configure <i>reportQuantity-r16</i> , <i>reportQuantity-r17</i> or <i>reportQuantity-r18</i> simultaneously.
reportingMode
Configures the UE with reporting mode for group based reporting.(see TS 38.214 [19] clause 5.2.1.4).
reportSlotConfig
Periodicity and slot offset (see TS 38.214 [19], clause 5.2.1.4). If the field <i>reportSlotConfig-v1530</i> is present, the UE shall ignore the value provided in <i>reportSlotConfig</i> (without suffix).

reportSlotOffsetList, reportSlotOffsetListDCI-0-1, reportSlotOffsetListDCI-0-2

Timing offset Y for semi persistent reporting using PUSCH. This field lists the allowed offset values. This list must have the same number of entries as the *pusch-TimeDomainAllocationList* in *PUSCH-Config*. A particular value is indicated in DCI. The network indicates in the DCI field of the UL grant, which of the configured report slot offsets the UE shall apply. The DCI value 0 corresponds to the first report slot offset in this list, the DCI value 1 corresponds to the second report slot offset in this list, and so on. The first report is transmitted in slot $n+Y$, second report in $n+Y+P$, where P is the configured periodicity.

Timing offset Y for aperiodic reporting using PUSCH. This field lists the allowed offset values. This list must have the same number of entries as the *pusch-TimeDomainAllocationList* in *PUSCH-Config*. A particular value is indicated in DCI. The network indicates in the DCI field of the UL grant, which of the configured report slot offsets the UE shall apply. The DCI value 0 corresponds to the first report slot offset in this list, the DCI value 1 corresponds to the second report slot offset in this list, and so on (see TS 38.214 [19], clause 6.1.2.1).

The field *reportSlotOffsetListDCI-0-1* applies to DCI format 0_1 and the field *reportSlotOffsetListDCI-0-2* applies to DCI format 0_2 (see TS 38.214 [19], clause 6.1.2.1).

The fields *reportSlotOffsetList-r17*, *reportSlotOffsetListDCI-0-1-r17* and *reportSlotOffsetListDCI-0-2-r17* are only applicable for SCS 480 kHz and 960 kHz and if they are configured, the UE shall ignore the fields *reportSlotOffsetList* (without suffix), *reportSlotOffsetListDCI-0-1* (without suffix) and *reportSlotOffsetListDCI-0-2* (without suffix) for SCS 480 kHz and 960 kHz.

resourcesForChannelMeasurement

Resources for channel measurement. *csi-ResourceConfigId* of a *CSI-ResourceConfig* included in the configuration of the serving cell indicated with the field "carrier" above. The *CSI-ResourceConfig* indicated here contains only NZP-CSI-RS resources and/or SSB resources. This *CSI-ReportConfig* is associated with the DL BWP indicated by *bwp-Id* in that *CSI-ResourceConfig*.

sharedCMR

Enables sharing of channel measurement resources between different CSI measurement hypotheses when (1) *csi-ReportMode* is set to 'Mode1' and *numberOfSingleTRP-CSI-Mode1* is set to 1 or 2; or (2) *csi-ReportMode* is set to 'Mode2' (see TS 38.214 [19], clause 5.2.1.4.2).

subbandSize

Indicates one out of two possible BWP-dependent values for the subband size as indicated in TS 38.214 [19], table 5.2.1.4-2 . If *csi-ReportingBand* is absent, the UE shall ignore this field.

timeRestrictionForChannelMeasurements

Time domain measurement restriction for the channel (signal) measurements (see TS 38.214 [19], clause 5.2.1.1).

timeRestrictionForInterferenceMeasurements

Time domain measurement restriction for interference measurements (see TS 38.214 [19], clause 5.2.1.1).

CSI-ReportSubConfig field descriptions
codebookSubConfig Applicable codebook parameters for the ports indicated by <i>portSubsetIndicator</i>. Applicable value ranges for codebook subset restriction, rank restriction, N1, N2, and Ng and twoTX-CodebookSubsetRestriction follow existing specification according to the <i>codebookConfig</i> configured within the <i>CSI-ReportConfig</i>, and apply for the number of ports determined by <i>portSubsetIndicator</i> (see TS 38.214 [19], clause 5.2.1.4.2). In this field, the network always sets the <i>codebookType</i> to <i>type1</i>. When <i>reportQuantity</i> is set to '<i>cri-RI-i1-CQI</i>', the parameter <i>type1SinglePanel-codebookSubsetRestriction-i2</i> is mandatory to be configured in the <i>codebookSubConfig</i> for each sub-configuration that includes <i>portSubsetIndicator</i>.
non-PMI-PortIndication Port indication for RI/CQI calculation applicable only for non-PMI feedback. The field shall be configured only if the <i>portSubsetIndicator-r18</i> is configured. For each CSI-RS resource in the linked <i>CSI-ResourceConfig</i> for channel measurement, a port indication for each rank R, indicating which R ports out of P ports to use within the sub-configuration. P corresponds to the number of bits with value 1 in the bitmap <i>portSubsetIndicator-r18</i>.
nzp-CSI-RS-ResourceList List of NZP CSI RS resources for the sub-configuration that is a (sub)set of NZP CSI-RS resource(s) of the CSI-RS resource set for channel measurement associated with the sub-configuration in the CSI report configuration. Value 0 refers to the first NZP CSI RS resource of the CSI-RS resource set, value 1 refers to the second NZP CSI RS resource of the CSI-RS resource set, and so on.
portSubsetIndicator Indicates the (sub)set of CSI-RS antenna ports used for CSI calculation of the sub-configuration. In the bit string, each bit corresponds to an antenna port. When a bit is set to 1, the corresponding port is enabled for CSI calculation corresponding to the sub-configuration. When the bit is set to zero, the corresponding port is not enabled for CSI calculation corresponding to the sub-configuration. The size of the bit string equals P bits, where $P=2/4/8/12/16/24/32$ represents the number of ports of the NZP CSI-RS resource(s) in the resource set for channel measurement associated with the <i>CSI-ReportConfig</i>.
powerOffset When <i>powerControlOffset</i> is configured in NZP CSI-RS resources in the resource set for channel measurement associated with the <i>CSI-ReportConfig</i>, the power offset of PDSCH EPRE to NZP CSI-RS EPRE is equal to <i>powerControlOffset</i> - <i>powerOffset</i>.
reportSubConfigParams Indicates the parameters to be used for the CSI report sub-configuration, which includes either <i>a1-parameters</i> that contain the antenna port subset and the associated parameters relevant to the sub-configuration or <i>a2-parameters</i> that contain the list of NZP CSI-RS resources for the sub-configuration (see TS 38.214 [19], clause 5.2.1.4.2).

PortIndexFor8Ranks field descriptions
portIndex8 Port-Index configuration for up to rank 8. If present, the network configures port indexes for at least one of the ranks.
portIndex4 Port-Index configuration for up to rank 4. If present, the network configures port indexes for at least one of the ranks.
portIndex2 Port-Index configuration for up to rank 2. If present, the network configures port indexes for at least one of the ranks.
portIndex1 Port-Index configuration for rank 1.

TDCCP field descriptions
delayDSetofLengthY Configures a set of Y delay values for TDCCP reporting, see reference TS 38.214 clause 5.2.1.4. The <i>synd4</i> denotes 4 symbols, the <i>slot1</i> denotes 1 slot, the <i>slot2</i> denotes 2 slots and so on. The value <i>slot10</i> is applicable only to SCS ≥ 30 kHz. The parameter Y, see reference TS38.214 clause 5.2.1.4, is given by the length of the set of D values.
phaseReporting Configures the UE for phase reporting for TDCCP reporting see reference TS 38.214 clause 5.2.1.4

– *CSI-ReportConfigId*

The IE *CSI-ReportConfigId* is used to identify one *CSI-ReportConfig*.

***CSI-ReportConfigId* information element**

```
-- ASN1START
-- TAG-CSI-REPORTCONFIGID-START

CSI-ReportConfigId ::=                INTEGER (0..maxNrofCSI-ReportConfigurations-1)

-- TAG-CSI-REPORTCONFIGID-STOP
-- ASN1STOP
```

– *CSI-ReportPeriodicityAndOffset*

The IE *CSI-ReportPeriodicityAndOffset* is used to configure a periodicity and a corresponding offset. Both the periodicity and the offset are given in number of slots. The periodicity value *slots4* corresponds to 4 slots, value *slots5* corresponds to 5 slots, and so on.

***CSI-ReportPeriodicityAndOffset* information element**

```
-- ASN1START
-- TAG-CSI-REPORTPERIODICITYANDOFFSET-START

CSI-ReportPeriodicityAndOffset ::= CHOICE {
    slots4                INTEGER(0..3),
    slots5                INTEGER(0..4),
    slots8                INTEGER(0..7),
    slots10               INTEGER(0..9),
    slots16               INTEGER(0..15),
    slots20               INTEGER(0..19),
    slots40               INTEGER(0..39),
    slots80               INTEGER(0..79),
    slots160              INTEGER(0..159),
    slots320              INTEGER(0..319)
}

-- TAG-CSI-REPORTPERIODICITYANDOFFSET-STOP
-- ASN1STOP
```

– *CSI-ReportSubConfigId*

The IE *CSI-ReportSubConfigId* is used to indicate the index of one *CSI-ReportSubConfig* within a CSI report configuration.

***CSI-ReportSubConfigId* information element**

```
-- ASN1START
-- TAG-CSI-REPORTSUBCONFIGID-START
```

```
CSI-ReportSubConfigId-r18 ::= INTEGER (0..maxNrofCSI-ReportSubconfigPerCSI-ReportConfig-1-r18)
```

```
-- TAG-CSI-REPORTSUBCONFIGID-STOP
-- ASN1STOP
```

CSI-ReportSubConfigTriggerList

The IE *CSI-ReportSubConfigTriggerList* is used to configure a list of sub-configuration ID(s) of N sub-configurations out of L configured sub-configurations within a CSI-ReportConfig associated with a triggering state for semi-persistent CSI reporting on PUSCH and aperiodic CSI reporting.

***CSI-ReportSubConfigTriggerList* information element**

```
-- ASN1START
-- TAG-CSI-REPORTSUBCONFIGTRIGGERLIST-START
```

```
CSI-ReportSubConfigTriggerList-r18 ::= SEQUENCE (SIZE(1..maxNrofCSI-ReportSubconfigPerCSI-ReportConfig-r18)) OF CSI-ReportSubConfigId-r18
```

```
-- TAG-CSI-REPORTSUBCONFIGTRIGGERLIST-STOP
-- ASN1STOP
```

CSI-ResourceConfig

The IE *CSI-ResourceConfig* defines a group of one or more *NZP-CSI-RS-ResourceSet*, *CSI-IM-ResourceSet* and/or *CSI-SSB-ResourceSet*.

***CSI-ResourceConfig* information element**

```
-- ASN1START
-- TAG-CSI-RESOURCECONFIG-START
```

```
CSI-ResourceConfig ::= SEQUENCE {
  csi-ResourceConfigId      CSI-ResourceConfigId,
  csi-RS-ResourceSetList    CHOICE {
    nzp-CSI-RS-SSB          SEQUENCE {
      nzp-CSI-RS-ResourceSetList SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourceSetsPerConfig)) OF NZP-CSI-RS-ResourceSetId
                                                                    OPTIONAL, -- Need R
    },
    csi-SSB-ResourceSetList SEQUENCE (SIZE (1..maxNrofCSI-SSB-ResourceSetsPerConfig)) OF CSI-SSB-ResourceSetId OPTIONAL -- Need R
  },
  csi-IM-ResourceSetList    SEQUENCE (SIZE (1..maxNrofCSI-IM-ResourceSetsPerConfig)) OF CSI-IM-ResourceSetId
},
bwp-Id                     BWP-Id,
resourceType                ENUMERATED { aperiodic, semiPersistent, periodic },
```

```

    ...
    [[
      csi-SSB-ResourceSetListExt-r17      CSI-SSB-ResourceSetId      OPTIONAL  -- Need R
    ]]
  }

-- TAG-CSI-RESOURCECONFIG-STOP
-- ASN1STOP

```

CSI-ResourceConfig field descriptions
bwp-Id The DL BWP which the CSI-RS associated with this <i>CSI-ResourceConfig</i> are located in (see TS 38.214 [19], clause 5.2.1.2).
csi-IM-ResourceSetList List of references to CSI-IM resources used for CSI measurement and reporting in a CSI-RS resource set. Contains up to <i>maxNrofCSI-IM-ResourceSetsPerConfig</i> resource sets if <i>resourceType</i> is 'aperiodic' and 1 otherwise (see TS 38.214 [19], clause 5.2.1.2).
csi-ResourceConfigId Used in <i>CSI-ReportConfig</i> to refer to an instance of <i>CSI-ResourceConfig</i> .
csi-SSB-ResourceSetList, csi-SSB-ResourceSetListExt List of references to SSB resources used for CSI measurement and reporting in a CSI-RS resource set (see TS 38.214 [19], clause 5.2.1.2). The <i>csi-SSB-ResourceSetListExt</i> provides additional references and can only be configured if <i>csi-SSB-ResourceSetList</i> is configured and <i>groupBasedBeamReporting-v1710</i> is configured in the <i>CSI-ReportConfig</i> that indicates this <i>CSI-ResourceConfig</i> as <i>resourcesForChannelMeasurement</i> . If <i>groupBasedBeamReporting-v1710</i> is configured in the IE <i>CSI-ReportConfig</i> that indicates this <i>CSI-ResourceConfig</i> as <i>resourcesForChannelMeasurement</i> , the network configures 2 resource sets, which may be two CSI SSB resource sets (see TS 38.214 [19], clause 5.2.1.2 and 5.2.1.4.2). In this case, in TS 38.212 [17] Table 6.3.1.1.2-8B, the first resource set is indicated by a resource set indicator set to 0 and the second resource set by a resource set indicator set to 1.
nzp-CSI-RS-ResourceSetList List of references to NZP CSI-RS resources used for beam measurement and reporting in a CSI-RS resource set. If <i>resourceType</i> is set to 'aperiodic', the network configures up to <i>maxNrofNZP-CSI-RS-ResourceSetsPerConfig</i> resource sets. If <i>resourceType</i> is set to 'periodic' or 'semiPersistent' and <i>groupBasedBeamReporting-v1710</i> is not configured in IE <i>CSI-ReportConfig</i> , the network configures 1 resource set. If <i>resourceType</i> is set to 'periodic' or 'semiPersistent' and <i>groupBasedBeamReporting-v1710</i> is configured, the network configures 2 resource sets, which may be two NZP CSI-RS resource sets (see TS 38.214 [19], clause 5.2.1.2 and 5.2.1.4.2). In this case, in TS 38.212 [17] Table 6.3.1.1.2-8B, the first resource set is indicated by a resource set indicator set to 0 and the second resource set by a resource set indicator set to 1. If <i>resourceType</i> is set to 'periodic' and <i>reportQuantity</i> is set to 'TDCCP', the network configures up to 3 resource sets, see TS 38.214 [19] clause 5.2.1.2.
resourceType Time domain behavior of resource configuration (see TS 38.214 [19], clause 5.2.1.2). It does not apply to resources provided in the <i>csi-SSB-ResourceSetList</i> .

– CSI-ResourceConfigId

The IE *CSI-ResourceConfigId* is used to identify a *CSI-ResourceConfig*.

CSI-ResourceConfigId information element

```

-- ASN1START
-- TAG-CSI-RESOURCECONFIGID-START

CSI-ResourceConfigId ::= INTEGER (0..maxNrofCSI-ResourceConfigurations-1)

```

```
-- TAG-CSI-RESOURCECONFIGID-STOP
-- ASN1STOP
```

– *CSI-ResourcePeriodicityAndOffset*

The IE *CSI-ResourcePeriodicityAndOffset* is used to configure a periodicity and a corresponding offset for periodic and semi-persistent CSI resources, and for periodic and semi-persistent reporting on PUCCH. both, the periodicity and the offset are given in number of slots. The periodicity value *slots4* corresponds to 4 slots, value *slots5* corresponds to 5 slots, and so on.

CSI-ResourcePeriodicityAndOffset information element

```
-- ASN1START
-- TAG-CSI-RESOURCEPERIODICITYANDOFFSET-START

CSI-ResourcePeriodicityAndOffset ::= CHOICE {
    slots4      INTEGER (0..3),
    slots5      INTEGER (0..4),
    slots8      INTEGER (0..7),
    slots10     INTEGER (0..9),
    slots16     INTEGER (0..15),
    slots20     INTEGER (0..19),
    slots32     INTEGER (0..31),
    slots40     INTEGER (0..39),
    slots64     INTEGER (0..63),
    slots80     INTEGER (0..79),
    slots160    INTEGER (0..159),
    slots320    INTEGER (0..319),
    slots640    INTEGER (0..639)
}

-- TAG-CSI-RESOURCEPERIODICITYANDOFFSET-STOP
-- ASN1STOP
```

– *CSI-RS-ResourceConfigMobility*

The IE *CSI-RS-ResourceConfigMobility* is used to configure CSI-RS based RRM measurements.

CSI-RS-ResourceConfigMobility information element

```
-- ASN1START
-- TAG-CSI-RS-RESOURCECONFIGMOBILITY-START

CSI-RS-ResourceConfigMobility ::= SEQUENCE {
    subcarrierSpacing      SubcarrierSpacing,
    csi-RS-CellList-Mobility SEQUENCE (SIZE (1..maxNrofCSI-RS-CellsRRM)) OF CSI-RS-CellMobility,
    ...,
    [[
```

```

    refServCellIndex          ServCellIndex          OPTIONAL    -- Need S
  ]]

}

CSI-RS-CellMobility ::=
  cellId
  csi-rs-MeasurementBW
    nrofPRBs
    startPRB
  },
  density
  csi-rs-ResourceList-Mobility
}

CSI-RS-Resource-Mobility ::=
  csi-RS-Index
  slotConfig
    ms4
    ms5
    ms10
    ms20
    ms40
  },
  associatedSSB
    ssb-Index
    isQuasiColocated
  },
  frequencyDomainAllocation
    row1
    row2
  },
  firstOFDMSymbolInTimeDomain
  sequenceGenerationConfig
  ...,
  [[
  slotConfig-r17
    ms4
    ms5
    ms10
    ms20
    ms40
  ]],
  ]],
}

CSI-RS-Index ::=
  INTEGER (0..maxNrofCSI-RS-ResourcesRRM-1)

-- TAG-CSI-RS-RESOURCECONFIGMOBILITY-STOP
-- ASN1STOP

```

```

SEQUENCE {
  PhysCellId,
  SEQUENCE {
    ENUMERATED { size24, size48, size96, size192, size264},
    INTEGER(0..2169)
  },
  ENUMERATED {d1,d3}
  SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesRRM)) OF CSI-RS-Resource-Mobility
}

SEQUENCE {
  CSI-RS-Index,
  CHOICE {
    INTEGER (0..31),
    INTEGER (0..39),
    INTEGER (0..79),
    INTEGER (0..159),
    INTEGER (0..319)
  },
  SEQUENCE {
    SSB-Index,
    BOOLEAN
  },
  CHOICE {
    BIT STRING (SIZE (4)),
    BIT STRING (SIZE (12))
  },
  INTEGER (0..13),
  INTEGER (0..1023),
  CHOICE {
    INTEGER (0..255),
    INTEGER (0..319),
    INTEGER (0..639),
    INTEGER (0..1279),
    INTEGER (0..2559)
  }
}
OPTIONAL -- Need R
OPTIONAL -- Need R

```


CSI-RS-CellMobility field descriptions
<i>csi-rs-ResourceList-Mobility</i> List of CSI-RS resources for mobility. The maximum number of CSI-RS resources that can be configured per <i>measObjectNR</i> depends on the configuration of <i>associatedSSB</i> and the support of <i>increasedNumberOfCSIRSPerMO</i> capability (see TS 38.214 [19], clause 5.1.6.1.3).
<i>density</i> Frequency domain density for the 1-port CSI-RS for L3 mobility. See TS 38.211 [16], clause 7.4.1.
<i>nrofPRBs</i> Allowed size of the measurement BW in PRBs. See TS 38.211 [16], clause 7.4.1.
<i>startPRB</i> Starting PRB index of the measurement bandwidth. See TS 38.211 [16], clause 7.4.1.

CSI-RS-ResourceConfigMobility field descriptions
<i>csi-RS-CellList-Mobility</i> List of cells for CSI-RS based RRM measurements.
<i>refServCellIndex</i> Indicates the serving cell providing the timing reference for CSI-RS resources without <i>associatedSSB</i> . The field may be present only if there is at least one CSI-RS resource configured without <i>associatedSSB</i> . If this field is absent, the UE shall use the timing of the PCell for measurements on the CSI-RS resources without <i>associatedSSB</i> . The CSI-RS resources and the serving cell indicated by <i>refServCellIndex</i> for timing reference should be located in the same band.
<i>subcarrierSpacing</i> Subcarrier spacing of CSI-RS. Only the following values are applicable depending on the used frequency: FR1: 15, 30, or 60 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz

CSI-RS-Resource-Mobility field descriptions
associatedSSB If this field is present, the UE may base the timing of the CSI-RS resource indicated in <i>CSI-RS-Resource-Mobility</i> on the timing of the cell indicated by the <i>cellId</i> in the <i>CSI-RS-CellMobility</i> . In this case, the UE is not required to monitor that CSI-RS resource if the UE cannot detect the SS/PBCH block indicated by this <i>associatedSSB</i> and <i>cellId</i> . If this field is absent, the UE shall base the timing of the CSI-RS resource indicated in <i>CSI-RS-Resource-Mobility</i> on the timing of the serving cell indicated by <i>refServCellIndex</i> . In this case, the UE is required to measure the CSI-RS resource even if SS/PBCH block(s) with <i>cellId</i> in the <i>CSI-RS-CellMobility</i> are not detected. CSI-RS resources with and without <i>associatedSSB</i> may be configured in accordance with the rules in TS 38.214 [19], clause 5.1.6.1.3.
csi-RS-Index CSI-RS resource index associated to the CSI-RS resource to be measured (and used for reporting).
firstOFDMSymbolInTimeDomain Time domain allocation within a physical resource block. The field indicates the first OFDM symbol in the PRB used for CSI-RS, see TS 38.211 [16], clause 7.4.1.5.3.
frequencyDomainAllocation Frequency domain allocation within a physical resource block in accordance with TS 38.211 [16], clause 7.4.1.5.3 including table 7.4.1.5.2-1. The number of bits that may be set to one depend on the chosen row in that table.
isQuasiColocated Indicates that the CSI-RS resource is quasi co-located with the associated SS/PBCH block, see TS 38.214 [19], clause 5.1.6.1.3.
sequenceGenerationConfig Scrambling ID for CSI-RS (see TS 38.211 [16], clause 7.4.1.5.2).
slotConfig Indicates the CSI-RS periodicity (in milliseconds) and for each periodicity the offset (in number of slots). When <i>subcarrierSpacing</i> is set to <i>kHz15</i> , the maximum offset values for periodicities <i>ms4/ms5/ms10/ms20/ms40</i> are 3/4/9/19/39 slots. When <i>subcarrierSpacing</i> is set to <i>kHz30</i> , the maximum offset values for periodicities <i>ms4/ms5/ms10/ms20/ms40</i> are 7/9/19/39/79 slots. When <i>subcarrierSpacing</i> is set to <i>kHz60</i> , the maximum offset values for periodicities <i>ms4/ms5/ms10/ms20/ms40</i> are 15/19/39/79/159 slots. When <i>subcarrierSpacing</i> is set to <i>kHz120</i> , the maximum offset values for periodicities <i>ms4/ms5/ms10/ms20/ms40</i> are 31/39/79/159/319 slots. When <i>subcarrierSpacing</i> is set to <i>kHz480</i> , the maximum offset values for periodicities <i>ms4/ms5/ms10/ms20/ms40</i> are 127/159/319/639/1279 slots. When <i>subcarrierSpacing</i> is set to <i>kHz960</i> , the maximum offset values for periodicities <i>ms4/ms5/ms10/ms20/ms40</i> are 255/319/639/1279/2559 slots. If <i>slotConfig-r17</i> is present, UE shall ignore the <i>slotConfig</i> (without suffix).

– CSI-RS-ResourceMapping

The IE *CSI-RS-ResourceMapping* is used to configure the resource element mapping of a CSI-RS resource in time- and frequency domain.

CSI-RS-ResourceMapping information element

```
-- ASN1START
-- TAG-CSI-RS-RESOURCEMAPPING-START
```

```
CSI-RS-ResourceMapping ::=
    frequencyDomainAllocation
        row1
        row2
        row4
        other
    },
    nrofPorts
    firstOFDMSymbolInTimeDomain
    firstOFDMSymbolInTimeDomain2
    cdm-Type
    SEQUENCE {
        CHOICE {
            BIT STRING (SIZE (4)),
            BIT STRING (SIZE (12)),
            BIT STRING (SIZE (3)),
            BIT STRING (SIZE (6))
        },
        ENUMERATED {p1, p2, p4, p8, p12, p16, p24, p32},
        INTEGER (0..13),
        INTEGER (2..12)
        ENUMERATED {noCDM, fd-CDM2, cdm4-FD2-TD2, cdm8-FD2-TD4},
        OPTIONAL, -- Need R
```

```

    density
    dot5
    one
    three
    spare
  },
  freqBand
  ...
}

-- TAG-CSI-RS-RESOURCEMAPPING-STOP
-- ASN1STOP
CHOICE {
  ENUMERATED {evenPRBs, oddPRBs},
  NULL,
  NULL,
  NULL
}
CSI-FrequencyOccupation,
```

CSI-RS-ResourceMapping field descriptions
cdm-Type CDM type (see TS 38.214 [19], clause 5.2.2.3.1).
density Density of CSI-RS resource measured in RE/port/PRB (see TS 38.211 [16], clause 7.4.1.5.3). Values 0.5 (<i>dot5</i>), 1 (<i>one</i>) and 3 (<i>three</i>) are allowed for X=1, values 0.5 (<i>dot5</i>) and 1 (<i>one</i>) are allowed for X=2, 16, 24 and 32, value 1 (<i>one</i>) is allowed for X=4, 8, 12. For density = 1/2, includes 1-bit indication for RB level comb offset indicating whether odd or even RBs are occupied by CSI-RS.
firstOFDMSymbolInTimeDomain2 Time domain allocation within a physical resource block. See TS 38.211 [16], clause 7.4.1.5.3.
firstOFDMSymbolInTimeDomain Time domain allocation within a physical resource block. The field indicates the first OFDM symbol in the PRB used for CSI-RS. See TS 38.211 [16], clause 7.4.1.5.3.
freqBand Wideband or partial band CSI-RS, (see TS 38.214 [19], clause 5.2.2.3.1).
frequencyDomainAllocation Frequency domain allocation within a physical resource block in accordance with TS 38.211 [16], clause 7.4.1.5.3. The applicable row number in table 7.4.1.5.3-1 is determined by the <i>frequencyDomainAllocation</i> for rows 1, 2 and 4, and for other rows by matching the values in the column Ports, Density and CDMtype in table 7.4.1.5.3-1 with the values of <i>nrofPorts</i> , <i>cdm-Type</i> and <i>density</i> below and, when more than one row has the 3 values matching, by selecting the row where the column (k bar, l bar) in table 7.4.1.5.3-1 has indexes for k ranging from 0 to 2*n-1 where n is the number of bits set to 1 in <i>frequencyDomainAllocation</i> .
nrofPorts Number of ports (see TS 38.214 [19], clause 5.2.2.3.1).

— CSI-SemiPersistentOnPUSCH-TriggerStateList

The *CSI-SemiPersistentOnPUSCH-TriggerStateList* IE is used to configure the UE with list of trigger states for semi-persistent reporting of channel state information on L1. See also TS 38.214 [19], clause 5.2.

CSI-SemiPersistentOnPUSCH-TriggerStateList information element

```

-- ASN1START
-- TAG-CSI-SEMIPERSISTENTONPUSCHTRIGGERSTATELIST-START

CSI-SemiPersistentOnPUSCH-TriggerStateList ::= SEQUENCE(SIZE (1..maxNrOfSemiPersistentPUSCH-Triggers)) OF CSI-SemiPersistentOnPUSCH-TriggerState
```

```

CSI-SemiPersistentOnPUSCH-TriggerState ::=
    associatedReportConfigInfo
    ...
    [[
        sp-CSI-MultiplexingMode-r17
    ]],
    [[
        csi-ReportSubConfigTriggerList-r18
        ltm-AssociatedReportConfigInfo-r18
    ]]
}

-- TAG-CSI-SEMI-PERSISTENT-ON-PUSCH-TRIGGER-STATE-LIST-STOP
-- ASN1STOP

```

CSI-SemiPersistentOnPUSCH-TriggerStateList field descriptions

csi-ReportSubConfigTriggerList

A list of sub-configuration ID(s) of N sub-configurations out of L configured sub-configurations within a *CSI-ReportConfig* associated with a triggering state for semi-persistent CSI reporting on PUSCH.

ltm-AssociatedReportConfigInfo

This field configures semi-persistent CSI reports on PUSCH of LTM candidate cells. If *ltm-associatedReportConfigInfo* is configured the UE shall ignore the field *associatedReportConfigInfo*.

sp-CSI-MultiplexingMode

Indicates if the behavior of transmitting SP-CSI on the first PUSCH repetitions corresponding to two SRS resource sets configured in *srs-ResourceSetToAddModList* or *srs-ResourceSetToAddModListDCI-0-2* with usage 'codebook' or 'noncodebook' is enabled or not.

– CSI-SSB-ResourceSet

The IE *CSI-SSB-ResourceSet* is used to configure one SS/PBCH block resource set which refers to SS/PBCH as indicated in *ServingCellConfigCommon* and *ServingCellConfig*.

CSI-SSB-ResourceSet information element

```

-- ASN1START
-- TAG-CSI-SSB-RESOURCESET-START

CSI-SSB-ResourceSet ::=
    csi-SSB-ResourceSetId
    csi-SSB-ResourceList
    ...
    [[
        servingAdditionalPCIList-r17
    ]]
}

ServingAdditionalPCIIndex-r17 ::= INTEGER(0..maxNrofAdditionalPCI-r17)

-- TAG-CSI-SSB-RESOURCESET-STOP
-- ASN1STOP

```

CSI-SSB-ResourceSet field descriptions
servingAdditionalPCIList Indicates the physical cell IDs (PCI) of the SSBs in the <i>csi-SSB-ResourceList</i>. If present, the list has the same number of entries as <i>csi-SSB-ResourceList</i>. The first entry of the list indicates the value of the PCI for the first entry of <i>csi-SSB-ResourceList</i>, the second entry of this list indicates the value of the PCI for the second entry of <i>csi-SSB-ResourceList</i>, and so on. For each entry, the following applies: - If the value is zero, the PCI is the PCI of the serving cell in which this <i>CSI-SSB-ResourceSet</i> is defined; - otherwise, the value is <i>additionalPCIIndex-r17</i> of an <i>SSB-MTC-AdditionalPCI-r17</i> configured using the <i>additionalPCI-ToAddModList-r17</i> in <i>ServingCellConfig</i>, and the PCI is the <i>additionalPCI-r17</i> in this <i>SSB-MTC-AdditionalPCI-r17</i>.

— *CSI-SSB-ResourceSetId*

The IE *CSI-SSB-ResourceSetId* is used to identify one SS/PBCH block resource set.

CSI-SSB-ResourceId information element

```
-- ASN1START
-- TAG-CSI-SSB-RESOURCESETID-START

CSI-SSB-ResourceSetId ::=          INTEGER (0..maxNrofCSI-SSB-ResourceSets-1)

-- TAG-CSI-SSB-RESOURCESETID-STOP
-- ASN1STOP
```

— *DedicatedNAS-Message*

The IE *DedicatedNAS-Message* is used to transfer UE specific NAS layer information between the 5GC CN and the UE. The RRC layer is transparent for this information.

DedicatedNAS-Message information element

```
-- ASN1START
-- TAG-DEDICATED-NAS-MESSAGE-START

DedicatedNAS-Message ::=          OCTET STRING

-- TAG-DEDICATED-NAS-MESSAGE-STOP
-- ASN1STOP
```

— *DL-PPW-PreConfig*

The IE *DL-PPW-PreConfig* provides configuration for a measurement window where a UE is expected to measure the DL PRS, if it is inside the active DL BWP and with the same numerology as the active DL BWP. Based upon the indication received in the configuration, the UE identifies whether the DL PRS priority is higher than that of the other DL signals or channels and accordingly determines, for example, the UE is expected to measure the DL PRS and is not expected to receive other DL signals and channels.

DL-PPW-PreConfig information element

```
-- ASN1START
-- TAG-DL-PPW-PRECONFIG-START

DL-PPW-PreConfig-r17 ::= SEQUENCE {
    dl-PPW-ID-r17                DL-PPW-ID-r17,
    dl-PPW-PeriodicityAndStartSlot-r17    DL-PPW-PeriodicityAndStartSlot-r17,
    length-r17                   INTEGER (1..160),
    type-r17                     ENUMERATED {type1A, type1B, type2}
    priority-r17                 ENUMERATED {st1, st2, st3}
}

DL-PPW-ID-r17 ::= INTEGER (0..maxNrofPPW-ID-1-r17)

DL-PPW-PeriodicityAndStartSlot-r17 ::= CHOICE {
    scs15
        CHOICE {
            n4          INTEGER (0..3),
            n5          INTEGER (0..4),
            n8          INTEGER (0..7),
            n10         INTEGER (0..9),
            n16         INTEGER (0..15),
            n20         INTEGER (0..19),
            n32         INTEGER (0..31),
            n40         INTEGER (0..39),
            n64         INTEGER (0..63),
            n80         INTEGER (0..79),
            n160        INTEGER (0..159),
            n320        INTEGER (0..319),
            n640        INTEGER (0..639),
            n1280       INTEGER (0..1279),
            n2560       INTEGER (0..2559),
            n5120       INTEGER (0..5119),
            n10240      INTEGER (0..10239),
            ...
        },
    scs30
        CHOICE {
            n8          INTEGER (0..7),
            n10         INTEGER (0..9),
            n16         INTEGER (0..15),
            n20         INTEGER (0..19),
            n32         INTEGER (0..31),
            n40         INTEGER (0..39),
            n64         INTEGER (0..63),
            n80         INTEGER (0..79),
            n128        INTEGER (0..127),
            ...
        }
}
```

OPTIONAL, -- Cond MultiType
OPTIONAL -- Cond MultiState

```

        n160          INTEGER (0..159),
        n320          INTEGER (0..319),
        n640          INTEGER (0..639),
        n1280         INTEGER (0..1279),
        n2560         INTEGER (0..2559),
        n5120         INTEGER (0..5119),
        n10240        INTEGER (0..10239),
        n20480        INTEGER (0..20479),
        ...
    },
    scs60
        CHOICE {
            n16          INTEGER (0..15),
            n20          INTEGER (0..19),
            n32          INTEGER (0..31),
            n40          INTEGER (0..39),
            n64          INTEGER (0..63),
            n80          INTEGER (0..79),
            n128         INTEGER (0..127),
            n160         INTEGER (0..159),
            n256         INTEGER (0..255),
            n320         INTEGER (0..319),
            n640         INTEGER (0..639),
            n1280        INTEGER (0..1279),
            n2560        INTEGER (0..2559),
            n5120        INTEGER (0..5119),
            n10240       INTEGER (0..10239),
            n20480       INTEGER (0..20479),
            n40960       INTEGER (0..40959),
            ...
        },
    scs120
        CHOICE {
            n32          INTEGER (0..31),
            n40          INTEGER (0..39),
            n64          INTEGER (0..63),
            n80          INTEGER (0..79),
            n128         INTEGER (0..127),
            n160         INTEGER (0..159),
            n256         INTEGER (0..255),
            n320         INTEGER (0..319),
            n512         INTEGER (0..511),
            n640         INTEGER (0..639),
            n1280        INTEGER (0..1279),
            n2560        INTEGER (0..2559),
            n5120        INTEGER (0..5119),
            n10240       INTEGER (0..10239),
            n20480       INTEGER (0..20479),
            n40960       INTEGER (0..40959),
            n81920       INTEGER (0..81919),
            ...
        },
    ...
}
-- TAG-DL-PPW-PRECONFIG-STOP

```

-- ASN1STOP

DL-PPW-PreConfig field descriptions
dl-PPW-ID Indicates the pre-configured ID for DL-PRS processing window configuration.
dl-PPW-PeriodicityAndStartSlot Indicates the periodicity in slots and the offset of the starting slot with respect to SFN #0 slot #0 of the serving cell where the DL-PRS processing window is configured.
length Indicates the length of DL-PRS processing window in slots. Value 1 indicates <i>length</i> of one slot, value 2 indicates <i>length</i> of two slots and so on.
priority Indicates the priority between PDCCH/PDSCH/CSI-RS and PRS as specified in TS 38.214 [19].
type Indicates the DL-PRS processing window type as specified in TS 38.214 [19].

Conditional Presence	Explanation
MultiType	The field is mandatory present when the UE reports its capability on supporting multiple processing types, otherwise it is absent.
MultiState	The field is mandatory present when the UE reports its capability on supporting option 1 or option 2 for the configured type, otherwise it is absent.

—
DMRS-BundlingPUCCH-Config

The IE *DMRS-BundlingPUCCH-Config-r17* is used to configure DMRS bundling for PUCCH.

DMRS-BundlingPUCCH-Config information element

```

-- ASN1START
-- TAG-DMRS-BUNDLINGPUCCH-CONFIG-START

DMRS-BundlingPUCCH-Config-r17 ::=
    pucch-DMRS-Bundling-r17          SEQUENCE {
    pucch-TimeDomainWindowLength-r17  ENUMERATED {enabled}          OPTIONAL, -- Need R
    pucch-WindowRestart-r17           INTEGER (2..8)                OPTIONAL, -- Need S
    pucch-FrequencyHoppingInterval-r17 ENUMERATED {enabled}          OPTIONAL, -- Need R
    ...                               ENUMERATED {s2, s4, s5, s10}     OPTIONAL, -- Need S
    }

-- TAG-DMRS-BUNDLINGPUCCH-CONFIG-STOP
-- ASN1STOP

```


DMRS-BundlingPUCCH-Config field descriptions
pucch-DMRS-Bundling Indicates whether DMRS bundling and time domain window for PUCCH are jointly enabled.
pucch-FrequencyHoppingInterval Configures the number of consecutive slots for the UE to perform inter-slot frequency hopping with inter-slot bundling for PUCCH. When both inter-frequency hopping and DMRS bundling are enabled for PUCCH repetitions, the UE is expected to be configured with at least one <i>pucch-FrequencyHoppingInterval-r17</i> and <i>pucch-TimeDomainWindowLength-r17</i>. When DMRS bundling for PUCCH is enabled by <i>pucch-DMRS-Bundling-r17</i>, PUCCH frequency hopping interval is only determined by the configuration of PUCCH hopping interval if PUCCH hopping interval is configured. If the field is absent, the number of consecutive slots for the UE to perform inter-slot PUCCH frequency hopping is indicated by <i>pucch-TimeDomainWindowLength-r17</i>.
pucch-TimeDomainWindowLength Configures the length of a nominal time domain window in slots for DMRS bundling for PUCCH. The value shall not exceed the maximum duration for DMRS bundling for PUCCH as specified in TS 38.306 [26]. If this field is absent, the UE shall apply the default value that is the minimum value in the unit of consecutive slots of the time duration for the transmission of all PUCCH repetitions and the maximum duration for DMRS bundling for PUCCH as specified in TS 38.306 [26].
pucch-WindowRestart Indicates whether UE bundles PUCCH DMRS remaining in a nominal time domain window after event(s) triggered by DCI or MAC CE that violate power consistency and phase continuity requirements is enabled (see TS 38.214 [19], clause 6.1.7). NOTE: Events, which are triggered by DCI or MAC CE, but do not require UE capability to resume maintaining power consistency and/or phase continuity as specified in clause 6.1.7 of TS 38.214 [19], are excluded.

– *DMRS-BundlingPUSCH-Config*

The IE *DMRS-BundlingPUSCH-Config-r17* is used to configure DMRS bundling for PUSCH.

DMRS-BundlingPUSCH-Config information element

```
-- ASN1START
-- TAG-DMRS-BUNDLINGPUSCH-CONFIG-START

DMRS-BundlingPUSCH-Config-r17 ::=
    pusch-DMRS-Bundling-r17
    pusch-TimeDomainWindowLength-r17
    pusch-WindowRestart-r17
    pusch-FrequencyHoppingInterval-r17
    ...
}

SEQUENCE {
    ENUMERATED {enabled}
    INTEGER (2..32)
    ENUMERATED {enabled}
    ENUMERATED {s2, s4, s5, s6, s8, s10, s12, s14, s16, s20}
}

-- TAG-DMRS-BUNDLINGPUSCH-CONFIG-STOP
-- ASN1STOP
```

OPTIONAL,

-- Need R

OPTIONAL,

-- Need S

OPTIONAL,

-- Need R

OPTIONAL,

-- Need S

DMRS-BundlingPUSCH-Config field descriptions
pusch-DMRS-Bundling Indicates whether DMRS bundling and time domain window for PUSCH are jointly enabled.
pusch-FrequencyHoppingInterval Configures the number of consecutive slots for the UE to perform inter-slot frequency hopping with inter-slot bundling for PUSCH. When both inter-frequency hopping and DMRS bundling are enabled for PUSCH repetitions, the UE is expected to be configured with at least one <i>pusch-FrequencyHoppingInterval-r17</i> and <i>pusch-TimeDomainWindowLength-r17</i>. This parameter is shared for both DG-PUSCH and CG-PUSCH. When DMRS bundling for PUSCH is enabled by <i>pusch-DMRS-Bundling-r17</i>, PUSCH frequency hopping interval is only determined by the configuration of PUSCH hopping interval if PUSCH hopping interval is configured. If the field is absent, the number of consecutive slots for the UE to perform inter-slot PUSCH frequency hopping is indicated by <i>pusch-TimeDomainWindowLength-r17</i>. Note: For unpaired spectrum, the UE is not expected to be configured the value of s6, s8, s12, s14 and s16.
pusch-TimeDomainWindowLength Configures the length of a nominal time domain window in number of consecutive slots for DMRS bundling for PUSCH. The value shall not exceed the maximum duration for DMRS bundling for PUSCH as specified in TS 38.306 [26]. For PUSCH repetition type A/B, if this field is absent, the UE shall apply the default value that is the minimum value in the unit of consecutive slots of the time duration for the transmission of all PUSCH repetitions and the maximum duration for DMRS bundling for PUSCH as specified in TS 38.306 [26]. For TBoMS, if this field is absent, the UE shall apply the default value that is the minimum value in the unit of consecutive slots of the duration of TBoMS transmission (including repetition of TBoMS) and the maximum duration for DMRS bundling for PUSCH as specified in TS 38.306 [26].
pusch-WindowRestart Indicates whether UE bundles PUSCH DMRS remaining in a nominal time domain window after event(s) triggered by DCI or MAC CE that violate power consistency and phase continuity requirements is enabled (see TS 38.214 [19], clause 6.1.7). NOTE: Events, which are triggered by DCI or MAC CE, but do not require UE capability to resume maintaining power consistency and/or phase continuity as specified in clause 6.1.7 of TS 38.214 [19], are excluded.

— **DMRS-DownlinkConfig**

The IE *DMRS-DownlinkConfig* is used to configure downlink demodulation reference signals for PDSCH.

DMRS-DownlinkConfig information element

```
-- ASN1START
-- TAG-DMRS-DOWNLINKCONFIG-START

DMRS-DownlinkConfig ::=
dmrs-Type                ENUMERATED {type2}                                OPTIONAL, -- Need S
dmrs-AdditionalPosition   ENUMERATED {pos0, pos1, pos3}                      OPTIONAL, -- Need S
maxLength                ENUMERATED {len2}                                  OPTIONAL, -- Need S
scramblingID0             INTEGER (0..65535)                                OPTIONAL, -- Need S
scramblingID1             INTEGER (0..65535)                                OPTIONAL, -- Need S
phaseTrackingRS           SetupRelease { PTRS-DownlinkConfig }              OPTIONAL, -- Need M
...
[[
dmrs-Downlink-r16         ENUMERATED {enabled}                             OPTIONAL -- Need R
]],
[[
dmrs-TypeEnh-r18          ENUMERATED {enabled}                             OPTIONAL -- Need R
]]
}

-- TAG-DMRS-DOWNLINKCONFIG-STOP
```

-- ASN1STOP

DMRS-DownlinkConfig field descriptions	
dmrs-AdditionalPosition	Position for additional DM-RS in DL, see Tables 7.4.1.1.2-3 and 7.4.1.1.2-4 in TS 38.211 [16]. If the field is absent, the UE applies the value pos2. See also clause 7.4.1.1.2 for additional constraints on how the network may set this field depending on the setting of other fields.
dmrs-Downlink	This field indicates whether low PAPR DMRS is used, as specified in TS38.211 [16], clause 7.4.1.1.1.
dmrs-Type	Selection of the DMRS type to be used for DL (see TS 38.211 [16], clause 7.4.1.1.1). If the field is absent, the UE uses DMRS type 1.
dmrs-TypeEnh	This field is used in TS 38.211 [16], clause 7.4.1.1.2.
maxLength	The maximum number of OFDM symbols for DL front loaded DMRS. <i>len1</i> corresponds to value 1. <i>len2</i> corresponds to value 2. If the field is absent, the UE applies value <i>len1</i> . If set to <i>len2</i> , the UE determines the actual number of DM-RS symbols by the associated DCI. (see TS 38.211 [16], clause 7.4.1.1.2).
phaseTrackingRS	Configures downlink PTRS. If the field is not configured, the UE assumes that downlink PTRS are absent. See TS 38.214 [19] clause 5.1.6.3.
scramblingID0	DL DMRS scrambling initialization (see TS 38.211 [16], clause 7.4.1.1.1). When the field is absent the UE applies the value <i>physCellId</i> configured for this serving cell.
scramblingID1	DL DMRS scrambling initialization (see TS 38.211 [16], clause 7.4.1.1.1). When the field is absent the UE applies the value <i>physCellId</i> configured for this serving cell.

– DMRS-UplinkConfig

The IE *DMRS-UplinkConfig* is used to configure uplink demodulation reference signals for PUSCH.

DMRS-UplinkConfig information element

-- ASN1START
-- TAG-DMRS-ULINKCONFIG-START

DMRS-UplinkConfig ::=	SEQUENCE {		
dmrs-Type	ENUMERATED {type2}	OPTIONAL,	-- Need S
dmrs-AdditionalPosition	ENUMERATED {pos0, pos1, pos3}	OPTIONAL,	-- Need S
phaseTrackingRS	SetupRelease { PTRS-UplinkConfig }	OPTIONAL,	-- Need M
maxLength	ENUMERATED {len2}	OPTIONAL,	-- Need S
transformPrecodingDisabled	SEQUENCE {		
scramblingID0	INTEGER (0..65535)	OPTIONAL,	-- Need S
scramblingID1	INTEGER (0..65535)	OPTIONAL,	-- Need S
...			
[[			
dmrs-Uplink-r16	ENUMERATED {enabled}	OPTIONAL	-- Need R
]]			
}		OPTIONAL,	-- Need R
transformPrecodingEnabled	SEQUENCE {		
nPUSCH-Identity	INTEGER(0..1007)	OPTIONAL,	-- Need S

```
sequenceGroupHopping      ENUMERATED {disabled}
sequenceHopping            ENUMERATED {enabled}
...
[[
  dmrs-UplinkTransformPrecoding-r16 SetupRelease {DMRS-UplinkTransformPrecoding-r16}
]]
}
...
[[
  dmrs-TypeEnh-r18          ENUMERATED {enabled}
]]
}

DMRS-UplinkTransformPrecoding-r16 ::= SEQUENCE {
  pi2BPSK-ScramblingID0    INTEGER(0..65535)
  pi2BPSK-ScramblingID1    INTEGER(0..65535)
}

-- TAG-DMRS-UPLINKCONFIG-STOP
-- ASN1STOP
```

OPTIONAL, -- Need S
OPTIONAL, -- Need S

OPTIONAL -- Need M

OPTIONAL, -- Need R

OPTIONAL -- Need R

OPTIONAL, -- Need S
OPTIONAL -- Need S

DMRS-UplinkConfig field descriptions
dmrs-AdditionalPosition Position for additional DM-RS in UL (see TS 38.211 [16], clause 6.4.1.1.3). If the field is absent, the UE applies the value pos2. See also clause 6.4.1.1.3 for additional constraints on how the network may set this field depending on the setting of other fields.
dmrs-Type Selection of the DMRS type to be used for UL (see TS 38.211 [16], clause 6.4.1.1.3) If the field is absent, the UE uses DMRS type 1.
dmrs-TypeEnh This field is used in TS 38.211 [16], clause 6.4.1.1.3.
dmrs-Uplink This field indicates whether low PAPR DMRS is used, as specified in TS38.211 [16], clause 6.4.1.1.1.1.
dmrs-UplinkTransformPrecoding This field indicates whether low PAPR DMRS is used for PUSCH with $\pi/2$ BPSK modulation, as specified in TS38.211 [16], clause 6.4.1.1.1.2. The network configures this field only if <i>tp-$\pi/2$BPSK</i> is configured in <i>PUSCH-Config</i> .
maxLength The maximum number of OFDM symbols for UL front loaded DMRS. <i>len1</i> corresponds to value 1. <i>len2</i> corresponds to value 2. If the field is absent, the UE applies value <i>len1</i> . If set to <i>len2</i> , the UE determines the actual number of DM-RS symbols by the associated DCI. (see TS 38.211 [16], clause 6.4.1.1.3).
nPUSCH-Identity Parameter: $N_{ID}^{(PUSCH)}$ for DFT-s-OFDM DMRS. If the value is absent or released, the UE uses the value Physical cell ID (<i>physCellId</i>). See TS 38.211 [16].
phaseTrackingRS Configures uplink PTRS (see TS 38.211 [16]).
$\pi/2$BPSK-ScramblingID0, $\pi/2$BPSK-ScramblingID1 UL DMRS scrambling initialization for $\pi/2$ BPSK DMRS for PUSCH (see TS 38.211 [16], Clause 6.4.1.1.2). When the field is absent the UE applies the value Physical cell ID (<i>physCellId</i>) of the serving cell.
scramblingID0 UL DMRS scrambling initialization for CP-OFDM (see TS 38.211 [16], clause 6.4.1.1.1.1). When the field is absent the UE applies the value Physical cell ID (<i>physCellId</i>).
scramblingID1 UL DMRS scrambling initialization for CP-OFDM. (see TS 38.211 [16], clause 6.4.1.1.1.1). When the field is absent the UE applies the value Physical cell ID (<i>physCellId</i>).
sequenceGroupHopping For DMRS transmission with transform precoder the NW may configure group hopping by the cell-specific parameter <i>groupHoppingEnabledTransformPrecoding</i> in <i>PUSCH-ConfigCommon</i> . In this case, the NW may include this UE specific field to disable group hopping for PUSCH transmission except for Msg3, i.e., to override the configuration in <i>PUSCH-ConfigCommon</i> (see TS 38.211 [16]). If the field is absent, the UE uses the same hopping mode as for Msg3.
sequenceHopping Determines if sequence hopping is enabled for DMRS transmission with transform precoder for PUSCH transmission other than Msg3 (sequence hopping is always disabled for Msg3). If the field is absent, the UE uses the same hopping mode as for msg3. The network does not configure simultaneous group hopping and sequence hopping. See TS 38.211 [16], clause 6.4.1.1.1.2.
transformPrecodingDisabled DMRS related parameters for Cyclic Prefix OFDM.
transformPrecodingEnabled DMRS related parameters for DFT-s-OFDM (Transform Precoding).

– DownlinkConfigCommon

The IE *DownlinkConfigCommon* provides common downlink parameters of a cell.

DownlinkConfigCommon information element

```
-- ASN1START
-- TAG-DOWNLINKCONFIGCOMMON-START

DownlinkConfigCommon ::= SEQUENCE {
    frequencyInfoDL          FrequencyInfoDL          OPTIONAL, -- Cond InterFreqH0AndServCellAdd
    initialDownlinkBWP        BWP-DownlinkCommon      OPTIONAL, -- Cond ServCellAdd
    ...
    [[
        initialDownlinkBWP-RedCap-r17 BWP-DownlinkCommon OPTIONAL -- Need R
    ]]
}

-- TAG-DOWNLINKCONFIGCOMMON-STOP
-- ASN1STOP
```

DownlinkConfigCommon field descriptions	
frequencyInfoDL	Basic parameters of a downlink carrier and transmission thereon.
initialDownlinkBWP	The initial downlink BWP configuration for a serving cell. The network configures the <i>locationAndBandwidth</i> so that the initial downlink BWP contains the entire CORESET#0 of this serving cell in the frequency domain.
initialDownlinkBWP-RedCap	If present, (e)RedCap UEs use this DL BWP instead of <i>initialDownlinkBWP</i> . If absent, (e)RedCap UEs use <i>initialDownlinkBWP</i> provided that it does not exceed the (e)RedCap UE maximum bandwidth (see also clause 5.2.2.4.2).

Conditional Presence	Explanation
<i>InterFreqH0AndServCellAdd</i>	This field is mandatory present for inter-frequency handover, and upon serving cell (PSCell/SCell) addition. Otherwise, the field is optionally present, Need M.
<i>ServCellAdd</i>	This field is mandatory present upon serving cell addition (for PSCell and SCell) and upon handover from E-UTRA to NR. It is optionally present, Need M otherwise.

– DownlinkConfigCommonSIB

The IE *DownlinkConfigCommonSIB* provides common downlink parameters of a cell.

DownlinkConfigCommonSIB information element

```
-- ASN1START
-- TAG-DOWNLINKCONFIGCOMMONSIB-START

DownlinkConfigCommonSIB ::= SEQUENCE {
    frequencyInfoDL          FrequencyInfoDL-SIB,
    initialDownlinkBWP        BWP-DownlinkCommon,
```

```

    bcch-Config          BCCH-Config,
    pcch-Config          PCCH-Config,
    ...,
    [[
    pei-Config-r17        PEI-Config-r17          OPTIONAL,    -- Need R
    initialDownlinkBWP-RedCap-r17 BWP-DownlinkCommon OPTIONAL    -- Need R
    ]],
    [[
    frequencyInfoDL-v1800      FrequencyInfoDL-SIB-v1800    OPTIONAL    -- Need R
    ]]
}

DownlinkConfigCommonSIB-v1760 ::= SEQUENCE {
    frequencyInfoDL-v1760      FrequencyInfoDL-SIB-v1760
}

BCCH-Config ::=
    modificationPeriodCoeff    SEQUENCE {
        ...,
        ENUMERATED {n2, n4, n8, n16},
    }

PCCH-Config ::=
    defaultPagingCycle          SEQUENCE {
        nAndPagingFrameOffset    PagingCycle,
        oneT                      CHOICE {
            NULL,
            INTEGER (0..1),
            halfT                  INTEGER (0..3),
            quarterT               INTEGER (0..7),
            oneEighthT             INTEGER (0..15)
        },
        ns                        ENUMERATED {four, two, one},
        firstPDCCH-MonitoringOccasionOfP0 CHOICE {
            sCS15KHZoneT          SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..139),
            sCS30KHZoneT-SCS15KHZhalfT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..279),
            sCS60KHZoneT-SCS30KHZhalfT-SCS15KHZquarterT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..559),
            sCS120KHZoneT-SCS60KHZhalfT-SCS30KHZquarterT-SCS15KHZoneEighthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..1119),
            sCS120KHZhalfT-SCS60KHZquarterT-SCS30KHZoneEighthT-SCS15KHZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..2239),
            sCS480KHZoneT-SCS120KHZquarterT-SCS60KHZoneEighthT-SCS30KHZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..4479),
            sCS480KHZhalfT-SCS120KHZoneEighthT-SCS60KHZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..8959),
            sCS480KHZquarterT-SCS120KHZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..17919)
        },
        OPTIONAL,                -- Need R
    },
    ...,
    [[
    nrofPDCCH-MonitoringOccasionPerSSB-InP0-r16    INTEGER (2..4)    OPTIONAL    -- Cond SharedSpectrum2
    ]],
    [[
    ranPagingInIdleP0-r17    ENUMERATED {true}    OPTIONAL,    -- Need R
    ],
    firstPDCCH-MonitoringOccasionOfP0-v1710 CHOICE {
        sCS480KHZoneEighthT    SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..35839),
        sCS480KHZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..71679)
    },
    OPTIONAL    -- Need R
}
]]

```

```

}

PEI-Config-r17 ::=
    po-NumPerPEI-r17
    payloadSizeDCI-2-7-r17
    pei-FrameOffset-r17
    subgroupConfig-r17
    lastUsedCellOnly-r17
    ...
}

SubgroupConfig-r17 ::= SEQUENCE {
    subgroupsNumPerPO-r17    INTEGER (1.. maxNrofPagingSubgroups-r17),
    subgroupsNumForUEID-r17  INTEGER (1.. maxNrofPagingSubgroups-r17)
    ...
}

-- TAG-DOWNLINKCONFIGCOMMONSIB-STOP
-- ASN1STOP

```

OPTIONAL, -- Need R

OPTIONAL, -- Need S

<i>DownlinkConfigCommonSIB</i> field descriptions
<i>bcch-Config</i> The modification period related configuration.
<i>frequencyInfoDL-SIB</i> Basic parameters of a downlink carrier and transmission thereon.
<i>initialDownlinkBWP</i> The initial downlink BWP configuration for a PCell. The network configures the <i>locationAndBandwidth</i> so that the initial downlink BWP contains the entire CORESET#0 of this serving cell in the frequency domain. The UE applies the <i>locationAndBandwidth</i> upon reception of this field (e.g. to determine the frequency position of signals described in relation to this <i>locationAndBandwidth</i>) but it keeps CORESET#0 until after reception of <i>RRCSetup/RRCResume/RRCReestablishment</i> .
<i>initialDownlinkBWP-RedCap</i> If present, (e)RedCap UEs use this DL BWP instead of <i>initialDownlinkBWP</i> . If the <i>locationAndBandwidth</i> of this BWP contains the entire CORESET#0, the UE applies the <i>locationAndBandwidth</i> upon reception of this field (e.g. to determine the frequency position of signals described in relation to this <i>locationAndBandwidth</i>) but it keeps CORESET#0 until after reception of <i>RRCSetup/RRCResume/RRCReestablishment</i> . Otherwise, i.e., if the <i>locationAndBandwidth</i> of this BWP does not contain the entire CORESET#0, the UE uses this BWP for receiving DL messages during initial access (Msg2, MsgB, Msg4) and after initial access. If absent, (e)RedCap UEs use <i>initialDownlinkBWP</i> provided that it does not exceed the (e)RedCap UE maximum bandwidth (see also clause 5.2.2.4.2).
<i>lastUsedCellOnly</i> When present, the field indicates that the UE monitors PEI only if the latest received <i>RRCRelease</i> without <i>noLastCellUpdate</i> is from this cell. A PEI-capable UE stores its last used cell information.
<i>pcch-Config</i> The paging related configuration.
<i>pei-Config</i> The PEI related configuration.
<i>subgroupConfig</i> The paging subgroup related configuration.

BCCH-Config field descriptions
modificationPeriodCoeff Actual modification period, expressed in number of radio frames $m = \text{modificationPeriodCoeff} * \text{defaultPagingCycle}$, see clause 5.2.2.2.2. $n2$ corresponds to value 2, $n4$ corresponds to value 4, and so on.
PCCH-Config field descriptions
defaultPagingCycle Default paging cycle, used to derive 'T' in TS 38.304 [20]. Value $rf32$ corresponds to 32 radio frames, value $rf64$ corresponds to 64 radio frames and so on.
firstPDCCH-MonitoringOccasionOfPO Points out the first PDCCH monitoring occasion for paging of each PO of the PF, see TS 38.304 [20].
nAndPagingFrameOffset Used to derive the number of total paging frames in T (corresponding to parameter N in TS 38.304 [20]) and paging frame offset (corresponding to parameter PF_offset in TS 38.304 [20]). A value of $oneSixteenthT$ corresponds to $T / 16$, a value of $oneEighthT$ corresponds to $T / 8$, and so on. If pagingSearchSpace is set to zero and if SS/PBCH block and CORESET multiplexing pattern is 2 or 3 (as specified in TS 38.213 [13]): - for $\text{ssb-periodicityServingCell}$ of 5 or 10 ms, N can be set to one of $\{oneT, halfT, quarterT, oneEighthT, oneSixteenthT\}$ - for $\text{ssb-periodicityServingCell}$ of 20 ms, N can be set to one of $\{halfT, quarterT, oneEighthT, oneSixteenthT\}$ - for $\text{ssb-periodicityServingCell}$ of 40 ms, N can be set to one of $\{quarterT, oneEighthT, oneSixteenthT\}$ - for $\text{ssb-periodicityServingCell}$ of 80 ms, N can be set to one of $\{oneEighthT, oneSixteenthT\}$ - for $\text{ssb-periodicityServingCell}$ of 160 ms, N can be set to $oneSixteenthT$ If pagingSearchSpace is set to zero and if SS/PBCH block and CORESET multiplexing pattern is 1 (as specified in TS 38.213 [13]), N can be set to one of $\{halfT, quarterT, oneEighthT, oneSixteenthT\}$ If pagingSearchSpace is not set to zero, N can be configured to one of $\{oneT, halfT, quarterT, oneEighthT, oneSixteenthT\}$
nrofPDCCH-MonitoringOccasionPerSSB-InPO The number of PDCCH monitoring occasions corresponding to an SSB within a Paging Occasion, see TS 38.304 [20], clause 7.1.
ns Number of paging occasions per paging frame.
ranPagingInIdlePO Indicates that the network supports to send RAN paging in PO that corresponds to the i_s as determined by UE in RRC_IDLE state, see TS38.304 [20].
PEI-Config field descriptions
payloadSizeDCI-2-7 Payload size of PEI DCI, i.e., DCI format 2_7. The size is no larger than the payload size of paging DCI which has maximum of 41 bits and 43 bits for licensed and unlicensed spectrums, respectively.
pei-FrameOffset Offset, in number of frames from the start of a reference frame for PEI-O to the start of a first paging frame of the paging frames associated with the PEI-O, see TS 38.213 [13], clause 10.4A.
po-NumPerPEI The number of PO(s) associated with one PEI monitoring occasion. It is a factor of the total PO number in a paging cycle, i.e $N \times N_s$, as specified in TS 38.304 [20]. The maximum number of PF associated with one PEI monitoring occasion is 2. The number of PO mapping to one PEI should be multiple of N_s when po-NumPerPEI is larger than N_s.

SubgroupConfig field descriptions
subgroupsNumPerPO Total number of subgroups per Paging Occasion (PO) for UE to read subgroups indication from physical-layer signaling. The field represents the sum of CN-assigned and UEID-based subgroups supported by the network. When <i>PEI-Config</i> is configured, there is always at least one subgroup (UEID-based subgroup or CN-assigned subgroup) configured.
subgroupsNumForUEID Number of subgroups per Paging Occasion (PO) for UE to read subgroups indication from physical-layer signaling, for UEID-based subgrouping method. When present, the field is set to an integer smaller than or equal to <i>subgroupsNumPerPO</i> . <i>subgroupsNumPerPO</i> equals to <i>subgroupsNumForUEID</i> when the network does not configure CN-assigned subgrouping. When <i>pei-Config</i> is configured, the field is absent when the network only configures CN-assigned subgrouping. Both this field and <i>subgroupsNumPerPO</i> are equal to 1 when the network does not configure subgrouping. When <i>pei-Config</i> is configured, if the field is absent, the UE uses subgrouping according to TS 38.304 [20], clause 7.3.0.

Conditional Presence	Explanation
<i>SharedSpectrum2</i>	The field is optional present, Need R, if this cell operates with shared spectrum channel access. Otherwise, it is absent, Need R.

– DownlinkPreemption

The IE *DownlinkPreemption* is used to configure the UE to monitor PDCCH for the INT-RNTI (interruption).

DownlinkPreemption information element

```
-- ASN1START
-- TAG-DOWNLINKPREEMPTION-START

DownlinkPreemption ::=
    int-RNTI                SEQUENCE {
        timeFrequencySet    RNTI-Value,
        dci-PayloadSize     ENUMERATED {set0, set1},
        int-ConfigurationPerServingCell INTEGER (0..maxINT-DCI-PayloadSize),
        ...                 SEQUENCE (SIZE (1..maxNrofServingCells)) OF INT-ConfigurationPerServingCell,
    }

INT-ConfigurationPerServingCell ::= SEQUENCE {
    servingCellId            ServCellIndex,
    positionInDCI            INTEGER (0..maxINT-DCI-PayloadSize-1)
}

-- TAG-DOWNLINKPREEMPTION-STOP
-- ASN1STOP
```

DownlinkPreemption field descriptions
dcI-PayloadSize Total length of the DCI payload scrambled with INT-RNTI (see TS 38.213 [13], clause 11.2).
int-ConfigurationPerServingCell Indicates (per serving cell) the position of the 14 bit INT values inside the DCI payload (see TS 38.213 [13], clause 11.2).
int-RNTI RNTI used for indication pre-emption in DL (see TS 38.213 [13], clause 10).
timeFrequencySet Set selection for DL-preemption indication (see TS 38.213 [13], clause 11.2) The set determines how the UE interprets the DL preemption DCI payload.

INT-ConfigurationPerServingCell field descriptions
positionInDCI Starting position (in number of bit) of the 14 bit INT value applicable for this serving cell (<i>servingCellId</i>) within the DCI payload (see TS 38.213 [13], clause 11.2). Must be multiples of 14 (bit).

— DRB-Identity

The IE *DRB-Identity* is used to identify a DRB used by a UE.

DRB-Identity information element

```
-- ASN1START
-- TAG-DRB-IDENTITY-START

DRB-Identity ::=
    INTEGER (1..32)

-- TAG-DRB-IDENTITY-STOP
-- ASN1STOP
```

— DRX-Config

The IE *DRX-Config* is used to configure DRX related parameters.

DRX-Config information element

```
-- ASN1START
-- TAG-DRX-CONFIG-START

DRX-Config ::=
    drx-onDurationTimer
        SEQUENCE {
            CHOICE {
                subMilliseconds INTEGER (1..31),
                milliseconds ENUMERATED {
                    ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
                    ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
```

```

        ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 }
    },
drx-InactivityTimer ENUMERATED {
    ms0, ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60, ms80,
    ms100, ms200, ms300, ms500, ms750, ms1280, ms1920, ms2560, spare9, spare8,
    spare7, spare6, spare5, spare4, spare3, spare2, spare1},
drx-HARQ-RTT-TimerDL INTEGER (0..56),
drx-HARQ-RTT-TimerUL INTEGER (0..56),
drx-RetransmissionTimerDL ENUMERATED {
    sl0, sl1, sl2, sl4, sl6, sl8, sl16, sl24, sl33, sl40, sl64, sl80, sl96, sl112, sl128,
    sl160, sl320, spare15, spare14, spare13, spare12, spare11, spare10, spare9,
    spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1},
drx-RetransmissionTimerUL ENUMERATED {
    sl0, sl1, sl2, sl4, sl6, sl8, sl16, sl24, sl33, sl40, sl64, sl80, sl96, sl112, sl128,
    sl160, sl320, spare15, spare14, spare13, spare12, spare11, spare10, spare9,
    spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 },
drx-LongCycleStartOffset CHOICE {
    ms10 INTEGER(0..9),
    ms20 INTEGER(0..19),
    ms32 INTEGER(0..31),
    ms40 INTEGER(0..39),
    ms60 INTEGER(0..59),
    ms64 INTEGER(0..63),
    ms70 INTEGER(0..69),
    ms80 INTEGER(0..79),
    ms128 INTEGER(0..127),
    ms160 INTEGER(0..159),
    ms256 INTEGER(0..255),
    ms320 INTEGER(0..319),
    ms512 INTEGER(0..511),
    ms640 INTEGER(0..639),
    ms1024 INTEGER(0..1023),
    ms1280 INTEGER(0..1279),
    ms2048 INTEGER(0..2047),
    ms2560 INTEGER(0..2559),
    ms5120 INTEGER(0..5119),
    ms10240 INTEGER(0..10239)
},
shortDRX
    drx-ShortCycle SEQUENCE {
        ENUMERATED {
            ms2, ms3, ms4, ms5, ms6, ms7, ms8, ms10, ms14, ms16, ms20, ms30, ms32,
            ms35, ms40, ms64, ms80, ms128, ms160, ms256, ms320, ms512, ms640, spare9,
            spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 },
        INTEGER (1..16)
    }
    drx-ShortCycleTimer OPTIONAL, -- Need R
}
drx-SlotOffset INTEGER (0..31)

DRX-ConfigExt-v1700 ::=
    drx-HARQ-RTT-TimerDL-r17 SEQUENCE {
        drx-HARQ-RTT-TimerUL-r17 INTEGER (0..448),
        INTEGER (0..448)
    }

DRX-ConfigExt2-v1800 ::= SEQUENCE {

```

```

drx-NonIntegerLongCycleStartOffset-r18 CHOICE {
    ms1001over240 INTEGER(0..3),
    ms25over6     INTEGER(0..3),
    ms25over3     INTEGER(0..7),
    ms1001over120 INTEGER(0..7),
    ms100over9    INTEGER(0..10),
    ms25over2     INTEGER(0..11),
    ms40over3     INTEGER(0..12),
    ms125over9    INTEGER(0..12),
    ms50over3     INTEGER(0..15),
    ms1001over60  INTEGER(0..15),
    ms125over6    INTEGER(0..19),
    ms200over9    INTEGER(0..21),
    ms250over9    INTEGER(0..26),
    ms100over3    INTEGER(0..32),
    ms1001over30  INTEGER(0..32),
    ms75over2     INTEGER(0..36),
    ms125over3    INTEGER(0..40),
    ms1001over24  INTEGER(0..40),
    ms200over3    INTEGER(0..65),
    ms1001over15  INTEGER(0..65),
    ms250over3    INTEGER(0..82),
    ms1001over12  INTEGER(0..82),
    ms400over3    INTEGER(0..132),
    ...
},
shortDRX-r18 SEQUENCE {
    drx-NonIntegerShortCycle-r18 ENUMERATED {ms1001over240, ms25over6, ms25over3, ms1001over120, ms100over9, ms25over2,
        ms40over3, ms125over9, ms50over3, ms1001over60, ms125over6, ms200over9,
        ms100over3, ms1001over30, ms125over3, ms1001over24, ms200over3, spare15,
        spare14, spare13, spare12, spare11, spare10, spare9, spare8, spare7, spare6,
        spare5, spare4, spare3, spare2, spare1},

    drx-ShortCycleTimer-r18 INTEGER (1..16)
}
drx-TimeReferenceSFN-r18 ENUMERATED {sfn512}
}
-- TAG-DRX-CONFIG-STOP
-- ASN1STOP

```

OPTIONAL, -- Need R
 OPTIONAL -- Need N

DRX-Config field descriptions
drx-HARQ-RTT-TimerDL Value in number of symbols of the BWP where the transport block was received. <i>drx-HARQ-RTT-TimerDL-r17</i> is only applicable for SCS 480 kHz and 960 kHz. If configured, the UE shall ignore <i>drx-HARQ-RTT-TimerDL</i> (without suffix) for SCS 480 kHz and 960 kHz.
drx-HARQ-RTT-TimerUL Value in number of symbols of the BWP where the transport block was transmitted. <i>drx-HARQ-RTT-TimerUL-r17</i> is only applicable for SCS 480 kHz and 960 kHz. If configured, the UE shall ignore <i>drx-HARQ-RTT-TimerUL</i> (without suffix) for SCS 480 kHz and 960 kHz.
drx-InactivityTimer Value in multiple integers of 1 ms. <i>ms0</i> corresponds to 0, <i>ms1</i> corresponds to 1 ms, <i>ms2</i> corresponds to 2 ms, and so on.
drx-LongCycleStartOffset <i>drx-LongCycle</i> in ms and <i>drx-StartOffset</i> in multiples of 1 ms. If <i>drx-ShortCycle</i> is configured, the value of <i>drx-LongCycle</i> shall be a multiple of the <i>drx-ShortCycle</i> value.
drx-NonIntegerLongCycleStartOffset <i>drx-NonIntegerLongCycle</i> in non-integer number of ms (e.g. <i>ms1001over240</i> corresponds to 1001/240 ms, <i>ms25over6</i> corresponds to 25/6 ms and so on) and <i>drx-StartOffset</i> in multiples of 1 ms. If <i>drx-NonIntegerShortCycle</i> is configured, the value of <i>drx-NonIntegerLongCycle</i> shall be a multiple of the <i>drx-NonIntegerShortCycle</i> value. If <i>drx-NonIntegerLongCycleStartOffset-r18</i> is configured, the UE shall ignore <i>drx-LongCycleStartOffset</i> .
drx-NonIntegerShortCycle Value in non-integer number of ms, e.g. <i>ms1001over240</i> corresponds to 1001/240 ms, <i>ms25over6</i> corresponds to 25/6 ms and so on.
drx-onDurationTimer Value in multiples of 1/32 ms (subMilliSeconds) or in ms (milliSecond). For the latter, value <i>ms1</i> corresponds to 1 ms, value <i>ms2</i> corresponds to 2 ms, and so on.
drx-RetransmissionTimerDL Value in number of slot lengths of the BWP where the transport block was received. value <i>s/0</i> corresponds to 0 slots, <i>s/1</i> corresponds to 1 slot, <i>s/2</i> corresponds to 2 slots, and so on.
drx-RetransmissionTimerUL Value in number of slot lengths of the BWP where the transport block was transmitted. <i>s/0</i> corresponds to 0 slots, <i>s/1</i> corresponds to 1 slot, <i>s/2</i> corresponds to 2 slots, and so on.
drx-ShortCycleTimer Value in multiples of <i>drx-ShortCycle</i> or <i>drx-NonIntegerShortCycle</i> (depending on which one is configured). A value of 1 corresponds to <i>drx-ShortCycle</i> or <i>drx-NonIntegerShortCycle</i> , a value of 2 corresponds to 2 * <i>drx-ShortCycle</i> or 2 * <i>drx-NonIntegerShortCycle</i> and so on.
drx-ShortCycle Value in ms. <i>ms1</i> corresponds to 1 ms, <i>ms2</i> corresponds to 2 ms, and so on.
drx-SlotOffset Value in 1/32 ms. Value 0 corresponds to 0 ms, value 1 corresponds to 1/32 ms, value 2 corresponds to 2/32 ms, and so on.
drx-TimeReferenceSFN Indicates how the UE initializes the counter DRX_SF_N_COUNTER, see TS 38.321 [3], clause 5.7.
shortDRX Configuration of a short DRX cycle. The network configures only one of <i>shortDRX</i> (without a suffix) or <i>shortDRX-r18</i> .

– DRX-ConfigSecondaryGroup

The IE *DRX-ConfigSecondaryGroup* is used to configure DRX related parameters for the second DRX group as specified in TS 38.321 [3].

DRX-ConfigSecondaryGroup information element

```
-- ASN1START
-- TAG-DRX-CONFIGSECONDARYGROUP-START
```

```

DRX-ConfigSecondaryGroup-r16 ::= SEQUENCE {
    drx-onDurationTimer-r16 CHOICE {
        subMilliseconds INTEGER (1..31),
        milliSeconds ENUMERATED {
            ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
            ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
            ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 }
        },
    drx-InactivityTimer-r16 ENUMERATED {
        ms0, ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60, ms80,
        ms100, ms200, ms300, ms500, ms750, ms1280, ms1920, ms2560, spare9, spare8,
        spare7, spare6, spare5, spare4, spare3, spare2, spare1}
    }
}

-- TAG-DRX-CONFIGSECONDARYGROUP-STOP
-- ASN1STOP

```

DRX-ConfigSecondaryGroup field descriptions
drx-InactivityTimer Value in multiple integers of 1 ms. <i>ms0</i> corresponds to 0 ms, <i>ms1</i> corresponds to 1 ms, <i>ms2</i> corresponds to 2 ms, and so on, as specified in TS 38.321 [3]. The network configures a <i>drx-InactivityTimer</i> value for the second DRX group that is smaller than the <i>drx-InactivityTimer</i> configured for the default DRX group in IE <i>DRX-Config</i> .
drx-onDurationTimer Value in multiples of 1/32 ms (subMilliseconds) or in ms (milliSeconds). For the latter, value <i>ms1</i> corresponds to 1 ms, value <i>ms2</i> corresponds to 2 ms, and so on, as specified in TS 38.321 [3]. The network configures a <i>drx-onDurationTimer</i> value for the second DRX group that is smaller than the <i>drx-onDurationTimer</i> configured for the default DRX group in IE <i>DRX-Config</i> .

— DRX-ConfigSL

The IE *DRX-ConfigSL* is used to configure additional DRX parameters for the UE performing sidelink operation with resource allocation mode 1, as specified in TS 38.321 [3].

DRX-ConfigSL information element

```

-- ASN1START
-- TAG-DRX-CONFIGSL-START

DRX-ConfigSL-r17 ::= SEQUENCE {
    drx-HARQ-RTT-TimerSL-r17 INTEGER (0..56),
    drx-RetransmissionTimerSL-r17 ENUMERATED {sl0, sl1, sl2, sl4, sl6, sl8, sl16, sl24, sl33, sl40, sl64, sl80, sl96, sl112, sl128,
        sl160, sl320, spare15, spare14, spare13, spare12, spare11, spare10, spare9, spare8,
        spare7, spare6, spare5, spare4, spare3, spare2, spare1}
    }

-- TAG-DRX-CONFIGSL-STOP
-- ASN1STOP

```

DRX-ConfigSL field descriptions
drx-HARQ-RTT-TimerSL For sidelink configured grant Type 1, value in number of symbols of the activated DL BWP of PCell. For other cases, value in number of symbols of the BWP where the PDCCH was transmitted. Value 0 is used in case <i>sl-PUCCH-Config</i> is not configured and the corresponding resource pool is not configured with PSFCH.
drx-RetransmissionTimerSL For sidelink configured grant Type 1, value in number of slot lengths of the activated DL BWP of PCell. For other cases, value in number of slot lengths of the BWP where the PDCCH was transmitted. <i>sl0</i> corresponds to 0 slots, <i>sl1</i> corresponds to 1 slot, <i>sl2</i> corresponds to 2 slots, and so on.

– *EarlyUL-SyncConfig*

The IE *EarlyUL-SyncConfig* is used to configure random access resources for the early UL synchronization procedure.

EarlyUL-SyncConfig information element

```
-- ASN1START
-- TAG-EARLYUL-SYNCCONFIG-START

EarlyUL-SyncConfig-r18 ::=
    frequencyInfoUL-r18          FrequencyInfoUL,
    rach-ConfigGeneric-r18       RACH-ConfigGeneric,
    bwp-GenericParameters-r18    BWP,
    ssb-PerRACH-Occasion-r18     ENUMERATED {oneEighth, oneFourth, oneHalf, one, two, four, eight, sixteen} OPTIONAL, -- Need R
    prach-RootSequenceIndex-r18 CHOICE {
        l839                      INTEGER (0..837),
        l139                      INTEGER (0..137)
    }                               OPTIONAL, -- Need R
    ltm-PRACH-SubcarrierSpacing-r18 SubcarrierSpacing                               OPTIONAL, -- Cond L139
    n-TimingAdvanceOffset-r18     ENUMERATED { n0, n25600, n39936, spare1 }        OPTIONAL, -- Need R
    ...,
    [[
        ltm-tdd-UL-DL-ConfigurationCommon-r18 TDD-UL-DL-ConfigCommon              OPTIONAL, -- Cond TDD
        ltm-restrictedSetConfig-r18           ENUMERATED {unrestrictedSet, restrictedSetTypeA, restrictedSetTypeB}
    ]]
}

-- TAG-EARLYUL-SYNCCONFIG-STOP
-- ASN1STOP
```


EarlyUL-SyncConfig field descriptions	
frequencyInfoUL	This field provides basic parameters of an uplink carrier for PRACH transmission on a candidate cell.
ltm-PRACH-SubcarrierSpacing	Indicates subcarrier spacing of PRACH for LTM (see TS 38.211 [16], clause 5.3.2). Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz If absent, the UE applies the SCS as derived from the <i>prach-ConfigurationIndex</i> in <i>RACH-ConfigGeneric</i> (see tables Table 6.3.3.1-1, Table 6.3.3.1-2, Table 6.3.3.2-2 and Table 6.3.3.2-3, TS 38.211 [16]).
n-TimingAdvanceOffset	The N_TA-Offset to be applied for all uplink transmissions on a candidate cell. If the field is absent, the UE applies the value as defined in TS 38.133 [14], table 7.1.2-2.
rach-ConfigGeneric	RACH parameters for performing a random access procedure on a candidate cell.
ssb-PerRACH-Occasion	This field indicated the number of SSBs for RACH occasion.

Conditional Presence	Explanation
L139	The field is mandatory present if <i>prach-RootSequenceIndex</i> L=139, otherwise the field is absent, Need S.
TDD	This field is optionally present, Need R, for TDD LTM candidate cells. It is absent otherwise.

— EphemerisInfo

The IE *EphemerisInfo* provides satellite ephemeris. Ephemeris may be expressed either in format of position and velocity state vector in ECEF or in format of orbital parameters in ECI. Note: The ECI and ECEF coincide at *epochTime*, i.e., x,y,z axis in ECEF are aligned with x,y,z axis in ECI at *epochTime*.

EphemerisInfo information element

```
-- ASN1START
-- TAG-EPHEMERISINFO-START

EphemerisInfo-r17 ::= CHOICE {
    positionVelocity-r17    PositionVelocity-r17,
    orbital-r17             Orbital-r17
}

PositionVelocity-r17 ::= SEQUENCE {
    positionX-r17           PositionStateVector-r17,
    positionY-r17           PositionStateVector-r17,
    positionZ-r17           PositionStateVector-r17,
    velocityVX-r17          VelocityStateVector-r17,
    velocityVY-r17          VelocityStateVector-r17,
    velocityVZ-r17          VelocityStateVector-r17
}
```

```

Orbital-r17 ::=
    semiMajorAxis-r17      SEQUENCE {
    eccentricity-r17        INTEGER (0..8589934591),
    periapsis-r17           INTEGER (0..1048575),
    longitude-r17           INTEGER (0..268435455),
    inclination-r17         INTEGER (0..268435455),
    meanAnomaly-r17        INTEGER (-67108864..67108863),
    }

PositionStateVector-r17 ::= INTEGER (-33554432..33554431)

VelocityStateVector-r17 ::= INTEGER (-131072..131071)

-- TAG-EPHEMERISINFO-STOP
-- ASN1STOP

```

<i>EphemerisInfo</i> field descriptions
eccentricity Satellite orbital parameter: eccentricity e , see NIMA TR 8350.2 [71]. Unit is radian. Step of $1.431 \cdot 10^{-8}$. Actual value = field value * ($1.431 \cdot 10^{-8}$).
inclination Satellite orbital parameter: inclination i , see NIMA TR 8350.2 [71]. Unit is radian. Step of $2.341 \cdot 10^{-8}$ rad. Actual value = field value * ($2.341 \cdot 10^{-8}$) for positive values. Actual value = field value * ($2.341 \cdot 10^{-8}$) + π for negative values.
longitude Satellite orbital parameter: longitude of ascending node Ω , see NIMA TR 8350.2 [71]. Unit is radian. Step of $2.341 \cdot 10^{-8}$ rad. Actual value = field value * ($2.341 \cdot 10^{-8}$).
meanAnomaly Satellite orbital parameter: Mean anomaly M at epoch time, see NIMA TR 8350.2 [71]. Unit is radian. Step of $2.341 \cdot 10^{-8}$ rad. Actual value = field value * ($2.341 \cdot 10^{-8}$).
periapsis Satellite orbital parameter: argument of periapsis ω , see NIMA TR 8350.2 [71]. Unit is radian. Step of $2.341 \cdot 10^{-8}$ rad. Actual value = field value * ($2.341 \cdot 10^{-8}$).
positionX, positionY, positionZ X, Y, Z coordinate of satellite position state vector in ECEF. Unit is meter. Step of 1.3 m. Actual value = field value * 1.3.
semiMajorAxis Satellite orbital parameter: semi major axis a , see NIMA TR 8350.2 [71]. Unit is meter. Step of $4.249 \cdot 10^{-3}$ m. Actual value = 6500000 + field value * ($4.249 \cdot 10^{-3}$).
velocityVX, velocityVY, velocityVZ X, Y, Z coordinate of satellite velocity state vector in ECEF. Unit is meter/second. Step of 0.06 m/s. Actual value = field value * 0.06.

— *EpochTime*

The IE *EpochTime* is used to indicate the epoch time for the NTN assistance information, and it is defined as the starting time of a DL sub-frame, indicated by a SFN and a sub-frame number signaled together with the assistance information. The reference point for *EpochTime* of the serving or neighbour NTN payload ephemeris and Common TA parameters is the uplink time synchronization reference point of the serving cell when this field is provided in an NTN cell and the gNB when this field is provided in a TN cell. In case of handover or conditional handover, the reference point for *EpochTime* of the target NTN payload ephemeris and Common TA parameters is the uplink time synchronization reference point of the target cell. In case of handover or conditional handover, *EpochTime* is based on the timing of the target cell, i.e. the SFN and sub-frame number indicated refers to the SFN and sub-frame of the target cell. Otherwise, *EpochTime* is used based on the timing of the serving cell, i.e. the SFN and sub-frame number indicated refers to the SFN and sub-frame of the serving cell.

EpochTime information element

```
-- ASN1START
-- TAG-EPOCHTIME-START

EpochTime-r17 ::=
    sfN-r17
    subFrameNR-r17
}

-- TAG-EPOCHTIME-STOP
-- ASN1STOP
```

<i>EpochTime</i> field descriptions
<i>sfN</i> For serving cell, it indicates the current SFN or the next upcoming SFN after the frame where the message indicating the <i>epochTime</i> is received. For neighbour or target cell, it indicates the SFN nearest to the frame where the message indicating the <i>epochTime</i> is received.

— *EUTRA-C-RNTI*

The IE *EUTRA-C-RNTI* identifies a UE having a RRC connection within an E-UTRA cell.

EUTRA-C-RNTI information element

```
-- ASN1START
-- TAG-EUTRACRNTI-START

EUTRA-C-RNTI ::=
    BIT STRING (SIZE (16))

-- TAG-EUTRACRNTI-STOP
-- ASN1STOP
```

— *FeatureCombination*

The IE *FeatureCombination* indicates a feature or a combination of features to be associated with a set of Random Access resources (i.e. an instance of *FeatureCombinationPreambles*).

***FeatureCombination* information element**

```
-- ASN1START
-- TAG-FEATURECOMBINATION-START

FeatureCombination-r17 ::= SEQUENCE {
    redCap-r17          ENUMERATED {true}          OPTIONAL, -- Need R
    smallData-r17      ENUMERATED {true}          OPTIONAL, -- Need R
    nsag-r17           NSAG-List-r17              OPTIONAL, -- Need R
    msg3-Repetitions-r17 ENUMERATED {true}          OPTIONAL, -- Need R
    msg1-Repetitions-r18 ENUMERATED {true}          OPTIONAL, -- Need R
    eRedCap-r18        ENUMERATED {true}          OPTIONAL, -- Need R
    spare2             ENUMERATED {true}          OPTIONAL, -- Need R
    spare1             ENUMERATED {true}          OPTIONAL, -- Need R
}

NSAG-List-r17 ::= SEQUENCE (SIZE (1.. maxSliceInfo-r17)) OF NSAG-ID-r17

-- TAG-FEATURECOMBINATION-STOP
-- ASN1STOP
```

FeatureCombination field descriptions
eRedCap If present, this field indicates that eRedCap is part of this feature combination. The fields <i>redCap</i> and <i>eRedCap</i> shall not be both set to <i>true</i> . If the UE is an eRedCap UE and there is no set of configured RA resources with <i>eRedCap</i> set to <i>true</i> among all sets of configured RA resources, the UE considers <i>redCap</i> to be applicable for random access procedure. This field is not configured in a set of preambles that is configured with 2-step random-access type.
msg1-Repetitions If present, this field indicates that signalling of msg1 repetition is part of this feature combination. This field is not configured in a set of preambles that is configured with 2-step random-access type.
msg3-Repetitions If present, this field indicates that signalling of msg3 repetition is part of this feature combination. This field is not configured in a set of preambles that is configured with 2-step random-access type.
nsag If present, this field indicates NSAG(s) that are part of this feature combination.
redCap If present, this field indicates that RedCap is part of this feature combination.
smallData If present, this field indicates that Small Data is part of this feature combination.

– *FeatureCombinationPreambles*

The IE *FeatureCombinationPreambles* associates a set of preambles with a feature combination. For parameters which can be provided in this IE, the UE applies this field value when performing Random Access using a preamble in this featureCombinationPreambles, otherwise the UE applies the corresponding value as determined by applicable Need Code, e.g. Need S. On a specific BWP, there can be at most one set of preambles associated with a given feature combination per RA Type (i.e. 4-step RACH or 2-step RACH) per MSG1 repetition number.

FeatureCombinationPreambles information element

```
-- ASN1START
-- TAG-FEATURECOMBINATIONPREAMBLES-START

FeatureCombinationPreambles-r17 ::= SEQUENCE {
    featureCombination-r17          FeatureCombination-r17,
    startPreambleForThisPartition-r17  INTEGER (0..63),
    numberOfPreamblesPerSSB-ForThisPartition-r17  INTEGER (1..64),
    ssb-SharedRO-MaskIndex-r17      INTEGER (1..15)                                OPTIONAL, -- Need S
    groupBconfigured-r17            SEQUENCE {
        ra-SizeGroupA-r17           ENUMERATED {b56, b144, b208, b256, b282, b480, b640,
                                                b800, b1000, b72, spare6, spare5, spare4, spare3, spare2, spare1},
        messagePowerOffsetGroupB-r17  ENUMERATED {minusinfinity, dB0, dB5, dB8, dB10, dB12, dB15, dB18},
        numberOfRA-PreamblesGroupA-r17  INTEGER (1..64)
    },
    separateMsgA-PUSCH-Config-r17    MsgA-PUSCH-Config-r16                        OPTIONAL, -- Need R
    msgA-RSRP-Threshold-r17          RSRP-Range                                OPTIONAL, -- Cond MsgAConfigCommon
    rsrp-ThresholdSSB-r17            RSRP-Range                                OPTIONAL, -- Need R
    deltaPreamble-r17               INTEGER (-1..6)                             OPTIONAL, -- Need R
    ...,
    [[
        msg1-RepetitionNum-r18        ENUMERATED {n2, n4, n8, spare1}              OPTIONAL, -- Cond Msg1Rep2
        msg1-RepetitionTimeOffsetROGroup-r18  ENUMERATED {n4, n8, n16, spare1}      OPTIONAL -- Cond Msg1Rep3
    ]]
}

-- TAG-FEATURECOMBINATIONPREAMBLES-STOP
-- ASN1STOP
```

FeatureCombinationPreambles field descriptions
deltaPreamble Power offset between msg3 or msgA-PUSCH and RACH preamble transmission. If configured, this parameter overrides <i>msg3-DeltaPreamble</i> or <i>msgA-DeltaPreamble</i>, Actual value = field value * 2 [dB] (see TS 38.213 [13], clause 7.1). If <i>msgA-DeltaPreamble</i> is configured in <i>separateMsgA-PUSCH-Config-r17</i>, this field is absent. This field is set to the same value for all <i>FeatureCombinationPreambles</i> for MSG1 repetitions.
featureCombination Indicates which combination of features that the preambles indicated by this IE are associated with. Network ensures that at least one field within the <i>featureCombination</i> is configured. The UE ignores a RACH resource defined by this <i>FeatureCombinationPreambles</i> if any feature within the <i>featureCombination</i> is not supported by the UE or if any of the spare fields within the <i>featureCombination</i> is set to <i>true</i>.
messagePowerOffsetGroupB Threshold for preamble selection. Value is in dB. Value <i>minusinfinity</i> corresponds to –infinity. Value <i>dB0</i> corresponds to 0 dB, <i>dB5</i> corresponds to 5 dB and so on (see TS 38.321 [3], clause 5.1.2).
msg1-RepetitionNum Indicates which MSG1-repetition number that this <i>FeatureCombinationPreambles</i> is associated with.
msg1-RepetitionTimeOffsetROGroup Indicates a time offset of the starting ROs between two successive RO groups for a given repetition number (2, 4 or 8) associated with this <i>FeatureCombinationPreambles</i> for each frequency resource index within a time period (see TS 38.213 [13]). If this field is absent, the time offset is implicitly determined (see TS 38.213 [13]). For each MSG1 repetition number, the following values are applicable. • {n16}, for RO groups for MSG1 repetition number 8 • {n8, n16}, for RO groups for MSG1 repetition number 4 • {n4, n8, n16}, for RO groups for MSG1 repetition number 2
msgA-RSRP-Threshold The UE selects 2-step random access type to perform random access based on this threshold (see TS 38.321 [3], clause 5.1.1). This field is only present if both 2-step and 4-step RA type are configured for the concerned feature combination in the BWP. If configured, this parameter overrides <i>msgA-RSRP-Threshold-r16</i>. If absent, the UE applies <i>msgA-RSRP-Threshold-r16</i>, if configured
numberOfPreamblesPerSSB-ForThisPartition It determines how many consecutive preambles are associated to the Feature Combination starting from the starting preamble(s) per SSB.
numberOfRA-PreamblesGroupA It determines how many consecutive preambles per SSB are associated to Group A starting from the starting preamble(s). The remaining preambles associated to the Feature Combination are associated to Group B
ra-SizeGroupA Transport Blocks size threshold in bits below which the UE shall use a contention-based RA preamble of group A. (see TS 38.321 [3], clause 5.1.2). If this feature combination preambles are associated to a <i>RACH-ConfigCommon-twostepRA</i>, this field correspond to <i>ra-MsgA-SizeGroupA</i>, otherwise it corresponds to <i>ra-Msg3SizeGroupA</i>.
rsrp-ThresholdSSB UE may select the SS block and corresponding PRACH resource for path-loss estimation and (re)transmission based on SS blocks that satisfy the threshold (see TS 38.213 [13]). If this parameter is included in <i>FeatureCombinationPreambles</i> which is included in <i>RACH-ConfigCommonTwoStepRA</i>, it corresponds to <i>msgA-RSRP-ThresholdSSB</i>, as defined in TS 38.321 [3]. If this parameter is included in <i>FeatureCombinationPreambles</i> which is included in <i>RACH-ConfigCommon</i>, it corresponds to <i>rsrp-ThresholdSSB</i>, as defined in TS 38.321 [3]. If this parameter is not included in <i>FeatureCombinationPreambles</i> which is included in <i>RACH-ConfigCommon</i>, the UE applies <i>rsrp-ThresholdSSB</i> included in the <i>RACH-ConfigCommon</i> which includes this <i>FeatureCombinationPreambles</i>. If this parameter is not included in <i>FeatureCombinationPreambles</i> which is included in <i>RACH-ConfigCommonTwoStepRA</i>, the UE applies <i>msgA-RSRP-ThresholdSSB</i> included in the <i>RACH-ConfigCommonTwoStepRA</i> which includes this <i>FeatureCombinationPreambles</i>.
separateMsgA-PUSCH-Config If present, it specifies how the 2-step RACH preambles identified by this <i>FeatureCombinationPreambles</i> are mapped to a PUSCH slot separate from the one defined in <i>MsgA-ConfigCommon-r16</i>. If the field is absent, the UE should apply the corresponding parameter in the <i>RACH-ConfigCommonTwoStepRA</i> of the BWP which includes the <i>FeatureCombinationPreambles</i> IE.

ssb-SharedRO-MaskIndex Mask index (see TS 38.321 [3]). Indicates a subset of ROs where preambles are allocated for this feature combination. If this field is configured within <i>FeatureCombinationPreambles</i> which is included in <i>RACH-ConfigCommonTwoStepRA</i>: - in case of separate ROs are configured for 4-step and 2-step random access, this field indicates a subset of ROs configured within this <i>RACH-ConfigCommonTwoStepRA</i>; - in case shared ROs are used for 4-step and 2-step random access, it indicates the subset of ROs configured within <i>RACH-ConfigCommon</i>, which are the subset of ROs configured for 2-step random access. This field is configured when there is more than one RO per SSB. If the field is absent, all ROs configured in <i>RACH-ConfigCommon</i> or <i>RACH-ConfigCommonTwoStepRA</i> containing this <i>FeatureCombinationPreambles</i> are shared. The network does not configure this field, if the field <i>msg1-RepetitionNum</i> is configured.
startPreambleForThisPartition It defines the first preamble associated with the Feature Combination. If the UE is provided with a number N of SSB block indexes associated with one PRACH occasion, and N<1, the first preamble in each PRACH occasion is the one having the same index as indicated by this field. If N>=1, N blocks of preambles associated with the Feature Combination are defined, each having start index $n \cdot N_{\text{SSB}} + \text{startPreambleForThisPartition}$, where n refers to SSB block index (see TS 38.213 [13], clause 8.1).

Conditional Presence	Explanation
<i>MsgAConfigCommon</i>	The field is optionally present, Need S, if <i>FeatureCombinationPreambles</i> is included in <i>RACH-ConfigCommonTwoStepRA</i> . Otherwise, it is absent. If the field is absent in <i>FeatureCombinationPreambles</i> included in <i>RACH-ConfigCommonTwoStepRA</i> , the UE applies <i>MsgA-PUSCH-Config</i> included in the corresponding <i>MsgA-ConfigCommon</i> .
<i>Msg1Rep2</i>	The field is mandatory present, if <i>msg1-Repetitions</i> is included in <i>FeatureCombination</i> for this concerned <i>FeatureCombinationPreambles</i> . Otherwise, it is absent.
<i>Msg1Rep3</i>	The field is optionally present, Need S, if <i>msg1-Repetitions</i> is included in <i>FeatureCombination</i> for this concerned <i>FeatureCombinationPreambles</i> . Otherwise, it is absent.

– *FilterCoefficient*

The IE *FilterCoefficient* specifies the measurement filtering coefficient. Value *fc0* corresponds to k = 0, *fc1* corresponds to k = 1, and so on.

***FilterCoefficient* information element**

```
-- ASN1START
-- TAG-FILTERCOEFFICIENT-START

FilterCoefficient ::=          ENUMERATED { fc0, fc1, fc2, fc3, fc4, fc5, fc6, fc7, fc8, fc9, fc11, fc13, fc15, fc17, fc19, spare1, ...}

-- TAG-FILTERCOEFFICIENT-STOP
-- ASN1STOP
```

— *FreqBandIndicatorNR*

The IE *FreqBandIndicatorNR* is used to convey an NR frequency band number as defined in TS 38.101-1 [15], TS 38.101-2 [39] and TS 38.101-5 [75].

***FreqBandIndicatorNR* information element**

```
-- ASN1START
-- TAG-FREQBANDINDICATORNR-START

FreqBandIndicatorNR ::=                INTEGER (1..1024)

-- TAG-FREQBANDINDICATORNR-STOP
-- ASN1STOP
```

— *FreqPriorityListDedicatedSlicing*

The IE *FreqPriorityListDedicatedSlicing* provides dedicated cell reselection priorities for slicing in *RRCRelease*.

***FreqPriorityListDedicatedSlicing* information element**

```
-- ASN1START
-- TAG-FREQPRIORITYLISTDEDICATEDSLICING-START

FreqPriorityListDedicatedSlicing-r17 ::= SEQUENCE (SIZE (1.. maxFreq)) OF FreqPriorityDedicatedSlicing-r17

FreqPriorityDedicatedSlicing-r17 ::=      SEQUENCE {
    dl-ExplicitCarrierFreq-r17             ARFCN-ValueNR,
    sliceInfoListDedicated-r17             SliceInfoListDedicated-r17                OPTIONAL  -- Cond Mandatory
}

SliceInfoListDedicated-r17 ::=           SEQUENCE (SIZE (1..maxSliceInfo-r17)) OF SliceInfoDedicated-r17

SliceInfoDedicated-r17 ::=               SEQUENCE {
    nsag-IdentityInfo-r17                 NSAG-IdentityInfo-r17,
    nsag-CellReselectionPriority-r17       CellReselectionPriority                OPTIONAL,  -- Need R
    nsag-CellReselectionSubPriority-r17    CellReselectionSubPriority            OPTIONAL  -- Need R
}

-- TAG-FREQPRIORITYLISTDEDICATEDSLICING-STOP
-- ASN1STOP
```

<i>FreqPriorityDedicatedSlicing</i> field descriptions
<i>dl-ExplicitCarrierFreq</i> Indicates the downlink carrier frequency to which <i>SliceInfoListDedicated</i> is associated.

Conditional Presence	Explanation
Mandatory	The field is mandatory present.

– *FreqPriorityListSlicing*

The IE *FreqPriorityListSlicing* indicates cell reselection priorities for slicing in SIB16.

FreqPriorityListSlicing information element

```
-- ASN1START
-- TAG-FREQPRIORITYLISTSLICING-START

FreqPriorityListSlicing-r17 ::= SEQUENCE (SIZE (1..maxFreqPlus1)) OF FreqPrioritySlicing-r17

FreqPrioritySlicing-r17 ::= SEQUENCE {
    dl-ImplicitCarrierFreq-r17      INTEGER (0..maxFreq),
    sliceInfoList-r17              SliceInfoList-r17
}
OPTIONAL -- Cond Mandatory

SliceInfoList-r17 ::= SEQUENCE (SIZE (1..maxSliceInfo-r17)) OF SliceInfo-r17

SliceInfo-r17 ::= SEQUENCE {
    nsag-IdentityInfo-r17          NSAG-IdentityInfo-r17,
    nsag-CellReselectionPriority-r17 CellReselectionPriority
    nsag-CellReselectionSubPriority-r17 CellReselectionSubPriority
    sliceCellListNR-r17           CHOICE {
        sliceAllowedCellListNR-r17 SliceCellListNR-r17,
        sliceExcludedCellListNR-r17 SliceCellListNR-r17
    }
}
OPTIONAL -- Need R
OPTIONAL -- Need R

SliceCellListNR-r17 ::= SEQUENCE (SIZE (1..maxCellSlice-r17)) OF PCI-Range

-- TAG-FREQPRIORITYLISTSLICING-STOP
-- ASN1STOP
```

<i>FreqPriorityListSlicing</i> field descriptions
dl-ImplicitCarrierFreq Indicates the downlink carrier frequency to which <i>sliceInfoList</i> is associated with. The frequency is signalled implicitly, value 0 corresponds to the serving frequency, value 1 corresponds to the first frequency indicated by the <i>InterFreqCarrierFreqList</i> in SIB4, and value 2 corresponds to the second frequency indicated by the <i>InterFreqCarrierFreqList</i> in SIB4, and so on.

<i>SliceInfo</i> field descriptions
<i>sliceAllowedCellListNR</i> List of allow-listed cells for slicing. If present, the cells listed in this list support the corresponding nsag-frequency pair, and the cells not listed in this list do not support the corresponding nsag-frequency pair, according to TS 38.304 [20], clause 5.2.4.11.
<i>sliceCellListNR</i> Contains either the list of allow-listed or exclude-listed cells for slicing. If absent, it implies all the cells support the corresponding nsag-frequency pair, according to 38.304 [20], clause 5.2.4.11.
<i>sliceExcludedCellListNR</i> List of exclude-listed cells for slicing. If present, the cells listed in this list do not support the corresponding nsag-frequency pair, and the cells not listed in this list support the corresponding nsag-frequency pair, according to TS 38.304 [20], clause 5.2.4.11.

Conditional Presence	Explanation
<i>Mandatory</i>	The field is mandatory present.

— *FrequencyInfoDL*

The IE *FrequencyInfoDL* provides basic parameters of a downlink carrier and transmission thereon.

FrequencyInfoDL information element

```
-- ASN1START
-- TAG-FREQUENCYINFODL-START

FrequencyInfoDL ::=
    absoluteFrequencySSB          SEQUENCE {
        ARFCN-ValueNR              OPTIONAL,  -- Cond SpCellAdd
        MultiFrequencyBandListNR,
        ARFCN-ValueNR,
        SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier,
        ...,
        [
            referenceCell-r18      ServCellIndex          OPTIONAL  -- Cond SSBlessSCell
        ]
    }

-- TAG-FREQUENCYINFODL-STOP
-- ASN1STOP
```

<i>FrequencyInfoDL</i> field descriptions
<i>absoluteFrequencyPointA</i> Absolute frequency position of the reference resource block (Common RB 0). Its lowest subcarrier is also known as Point A (see TS 38.211 [16], clause 4.4.4.2). Note that the lower edge of the actual carrier is not defined by this field but rather in the <i>scs-SpecificCarrierList</i>.
<i>absoluteFrequencySSB</i> Frequency of the SSB to be used for this serving cell. SSB related parameters (e.g. SSB index) provided for a serving cell refer to this SSB frequency unless mentioned otherwise. The CD-SSB of the PCell is always on the sync raster. Frequencies are considered to be on the sync raster if they are also identifiable with a GSCN value (see TS 38.101-1 [15] or TS 38.101-5 [75]). If the field is absent, the SSB related parameters should be absent, e.g. <i>ssb-PositionsInBurst</i>, <i>ssb-periodicityServingCell</i> and <i>subcarrierSpacing</i> in <i>ServingCellConfigCommon</i> IE. If the field is absent, the UE obtains timing reference from the intra-band SpCell or intra-band SCell if applicable as described in TS 38.213 [13], clause 4.1, or from the SpCell or an SCell indicated by <i>referenceCell</i>, or from the reference serving cell defined in TS 38.133 [14]. This is supported in case the SCell for which the UE obtains the timing reference is in the same or different frequency band as the cell (i.e. the SpCell or the SCell, respectively) from which the UE obtains the timing reference. For PCell, this field corresponds to the CD-SSB.
<i>frequencyBandList</i> List containing only one frequency band to which this carrier(s) belongs. Multiple values are not supported.
<i>referenceCell</i> Indicates the reference cell, i.e. the cell which provides the timing reference and AGC source for the inter-band SSB-less SCell. If the reference cell is an SCell or PSCell, it should be an activated SCell or activated PSCell. If this field is absent for an inter-band SSB-less SCell, the reference serving cell is defined in TS 38.133 [14].
<i>scs-SpecificCarrierList</i> A set of carriers for different subcarrier spacings (numerologies). Defined in relation to Point A. The network configures a <i>scs-SpecificCarrier</i> at least for each numerology (SCS) that is used e.g. in a BWP (see TS 38.211 [16], clause 5.3).

Conditional Presence	Explanation
<i>SpCellAdd</i>	The field is mandatory present if this <i>FrequencyInfoDL</i> is for SpCell. Otherwise the field is optionally present, Need S.
<i>SSBlessSCell</i>	The field is optionally present, Need S, if the inter-band SSB-less SCell is configured for this cell and <i>absoluteFrequencySSB</i> is absent. It is absent otherwise, Need R.

– *FrequencyInfoDL-SIB*

The IE *FrequencyInfoDL-SIB* provides basic parameters of a downlink carrier and transmission thereon.

FrequencyInfoDL-SIB information element

```
-- ASN1START
-- TAG-FREQUENCYINFODL-SIB-START
```

```
FrequencyInfoDL-SIB ::=
    frequencyBandList      SEQUENCE {
        offsetToPointA      INTEGER (0..2199),
        scs-SpecificCarrierList SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier
    }
```

```
FrequencyInfoDL-SIB-v1760 ::=
    frequencyBandList-v1760 SEQUENCE {
        MultiFrequencyBandListNR-SIB-v1760
```

```
}
FrequencyInfoDL-SIB-v1800 ::=
    frequencyBandListAerial-r18
}
-- TAG-FREQUENCYINFODL-SIB-STOP
-- ASN1STOP
```

FrequencyInfoDL-SIB field descriptions
offsetToPointA Represents the offset to Point A as defined in TS 38.211 [16], clause 4.4.4.2.
frequencyBandList List of one or multiple frequency bands to which this carrier(s) belongs. If <i>frequencyBandList-v1760</i> is present, it shall contain the same number of entries, listed in the same order as in <i>frequencyBandList</i> (without suffix).
scs-SpecificCarrierList A set of carriers for different subcarrier spacings (numerologies). Defined in relation to Point A (see TS 38.211 [16], clause 5.3). The network configures this for all SCSs that are used in DL BWPs in this serving cell.

– FrequencyInfoUL

The IE *FrequencyInfoUL* provides basic parameters of an uplink carrier and transmission thereon.

FrequencyInfoUL information element

```
-- ASN1START
-- TAG-FREQUENCYINFOUL-START

FrequencyInfoUL ::=
    frequencyBandList
    absoluteFrequencyPointA
    scs-SpecificCarrierList
    additionalSpectrumEmission
    p-Max
    frequencyShift7p5khz
    ...,
    [[
        additionalSpectrumEmission-v1760
    ]],
    [[
        additionalSpectrumEmissionAerial-r18
    ]]
}

SEQUENCE {
    MultiFrequencyBandListNR
    ARFCN-ValueNR
    SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier,
    AdditionalSpectrumEmission
    P-Max
    ENUMERATED {true}
    OPTIONAL, -- Cond FDD-0rSUL-0rEarlyUL-Sync
    OPTIONAL, -- Cond FDD-0rSUL-0rEarlyUL-Sync
    OPTIONAL, -- Need S
    OPTIONAL, -- Need S
    OPTIONAL, -- Cond FDD-TDD-0rSUL-Optional
    OPTIONAL -- Need S
    OPTIONAL -- Need S
}
```

```
-- TAG-FREQUENCYINFOUL-STOP
-- ASN1STOP
```

<i>FrequencyInfoUL</i> field descriptions
<i>absoluteFrequencyPointA</i> Absolute frequency of the reference resource block (Common RB 0). Its lowest subcarrier is also known as Point A (see TS 38.211 [16], clause 4.4.4.2). Note that the lower edge of the actual carrier is not defined by this field but rather in the <i>scs-SpecificCarrierList</i>.
<i>additionalSpectrumEmission</i> The additional spectrum emission requirements to be applied by the UE on this uplink. If both <i>additionalSpectrumEmission</i> (without suffix) and <i>additionalSpectrumEmission-v1760</i> are absent, the UE uses value 0 for the <i>additionalSpectrumEmission</i> (see TS 38.101-1 [15], tables 6.2.3.1-1A, 6.2A.3.1.1-2 and 6.2A.3.1.2-2, TS 38.101-2 [39], tables 6.2.3.1-2 and 6.2A.3.1-2, and TS 38.101-5 [75], table 6.2.3.1-1A). Network configures the same value in <i>additionalSpectrumEmission</i> for all uplink carrier(s) of the same band with UL configured and if signalled, the same value in <i>additionalSpectrumEmission-v1760</i> for all uplink carrier(s) of the same band with UL configured, except for <i>additionalSpectrumEmission</i> value corresponding to NS_55/NS_57. If NS_55/NS_57 (see TS 38.101-1 [15], table 6.2.3.1-1) is applicable for at least one uplink carrier, the network may configure either NS_55/NS_57 or NS_01 for these uplink carriers, and NS_01 for the remaining uplink carrier(s) of band n77. The <i>additionalSpectrumEmission</i> is applicable for all uplink carriers of the same band with UL configured.
<i>additionalSpectrumEmissionAerial</i> The additional spectrum emission requirements to be applied by the aerial UE on this uplink (see TS 38.101-1 [15], clause 6.2K). If the field is absent, the aerial UE uses value indicated by the field <i>additionalSpectrumEmission/ additionalSpectrumEmission-v1760</i>.
<i>frequencyBandList</i> List containing only one frequency band to which this carrier(s) belongs. Multiple values are not supported.
<i>frequencyShift7p5khz</i> Enable the NR UL transmission with a 7.5 kHz shift to the LTE raster. If the field is absent, the frequency shift is disabled.
<i>p-Max</i> Maximum transmit power allowed in this serving cell. The maximum transmit power that the UE may use on this serving cell may be additionally limited by <i>p-NR-FR1</i> (configured for the cell group) and by <i>p-UE-FR1</i> (configured total for all serving cells operating on FR1). If absent, the UE applies the maximum power according to TS 38.101-1 [15] in case of an FR1 cell, TS 38.101-2 [39] in case of an FR2 cell or TS 38.101-5 [75] in case of an NTN cell. In this release of the specification, if <i>p-Max</i> is present on a carrier frequency in FR2, the UE shall ignore the field and applies the maximum power according to TS 38.101-2 [39] for FR2-1/2 or according to TS 38.101-5 [75] for FR2-NTN. Value in dBm. This field is ignored by IAB-MT and NCR-MT. The IAB-MT applies output power and emissions requirements, as specified in TS 38.174 [63]. The NCR-MT applies output power and emission requirements as specified in TS 38.106 [79].
<i>scs-SpecificCarrierList</i> A set of carriers for different subcarrier spacings (numerologies). Defined in relation to Point A. The network configures a <i>scs-SpecificCarrier</i> at least for each numerology (SCS) that is used e.g. in a BWP (see TS 38.211 [16], clause 5.3).

Conditional Presence	Explanation
<i>FDD-OrSUL-OrEarlyUL-Sync</i>	The field is mandatory present if this <i>FrequencyInfoUL</i> is for the paired UL for a DL (defined in a <i>FrequencyInfoDL</i>), if this <i>FrequencyInfoUL</i> is for a supplementary uplink (SUL), or if this <i>FrequencyInfoUL</i> is configured within <i>EarlyUL-SyncConfig</i> . It is absent, Need R, otherwise.
<i>FDD-TDD-OrSUL-Optional</i>	The field is optionally present, Need R, if this <i>FrequencyInfoUL</i> is for the paired UL for a DL (defined in a <i>FrequencyInfoDL</i>), or if this <i>FrequencyInfoUL</i> is for an unpaired UL (TDD) in certain bands (as defined in clause 5.4.2.1 of TS 38.101-1 and in clause 5.4.2.1 of TS 38.104 [12]), or if this <i>FrequencyInfoUL</i> is for a supplementary uplink (SUL). It is absent, Need R, otherwise.

– *FrequencyInfoUL-SIB*

The IE *FrequencyInfoUL-SIB* provides basic parameters of an uplink carrier and transmission thereon.

FrequencyInfoUL-SIB information element

```

-- ASN1START
-- TAG-FREQUENCYINFOUL-SIB-START

FrequencyInfoUL-SIB ::=
    frequencyBandList          SEQUENCE {
        absoluteFrequencyPointA MultiFrequencyBandListNR-SIB          OPTIONAL, -- Cond FDD-OrSUL
        scs-SpecificCarrierList ARFCN-ValueNR                        OPTIONAL, -- Cond FDD-OrSUL
        p-Max                   SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier,
        frequencyShift7p5khz    P-Max                                OPTIONAL, -- Need S
        ...                     ENUMERATED {true}                    OPTIONAL, -- Cond FDD-TDD-OrSUL-Optional
        [[
            frequencyBandListAerial-r18 MultiFrequencyBandListNR-Aerial-SIB-r18 OPTIONAL -- Need S
        ]]
    }

FrequencyInfoUL-SIB-v1760 ::=
    frequencyBandList-v1760 SEQUENCE {
        MultiFrequencyBandListNR-SIB-v1760
    }

-- TAG-FREQUENCYINFOUL-SIB-STOP
-- ASN1STOP

```

FrequencyInfoUL-SIB field descriptions***absoluteFrequencyPointA***

Absolute frequency of the reference resource block (Common RB 0). Its lowest subcarrier is also known as Point A (see TS 38.211 [16], clause 4.4.4.2). Note that the lower edge of the actual carrier is not defined by this field but rather in the *scs-SpecificCarrierList*.

frequencyBandList

Provides the frequency band indicator and a list of *additionalPmax* and *additionalSpectrumEmission* values as defined in TS 38.101-1 [15], table 6.2.3.1-1, TS 38.101-2 [39], table 6.2.3.1-2, and TS 38.101-5 [75], table 6.2.3.1-1. The UE shall apply the first listed band which it supports in the *frequencyBandList* field. If *frequencyBandList-v1760* is present, it shall contain the same number of entries, listed in the same order as in *frequencyBandList* (without suffix).

frequencyBandListAerial

Provides the frequency band indicator and a list of *additionalPmax* and *additionalSpectrumEmission* values for aerial UE as defined in TS 38.101-1 [15], clause 6.2K. If the field is present, the aerial UE shall apply the first listed band which it supports in the *frequencyBandListAerial* field. If the field is absent, *frequencyBandList* applies.

frequencyShift7p5khz

Enable the NR UL transmission with a 7.5 kHz shift to the LTE raster. If the field is absent, the frequency shift is disabled.

p-Max

Value in dBm applicable for the cell. If absent the UE applies the maximum power according to TS 38.101-1 [15] in case of an FR1 cell, TS 38.101-2 [39] in case of an FR2 cell or TS 38.101-5 [75] in case of an NTN cell. In this release of the specification, if p-Max is present on a carrier frequency in FR2, the UE shall ignore the field and applies the maximum power according to TS 38.101-2 [39] for FR2-1/2 or according to TS 38.101-5 [75] for FR2-NTN. This field is ignored by IAB-MT and NCR-MT. The IAB-MT applies output power and emissions requirements, as specified in TS 38.174 [63]. The NCR-MT applies output power and emission requirements as specified in TS 38.106 [79].

scs-SpecificCarrierList

A set of carriers for different subcarrier spacings (numerologies). Defined in relation to Point A (see TS 38.211 [16], clause 5.3). The network configures this for all SCSs that are used in UL BWPs configured in this serving cell.

Conditional Presence	Explanation
<i>FDD-OrSUL</i>	The field is mandatory present if this <i>FrequencyInfoUL-SIB</i> is for the paired UL for a DL (defined in a <i>FrequencyInfoDL-SIB</i>) or if this <i>FrequencyInfoUL-SIB</i> is for a supplementary uplink (SUL). It is absent otherwise (if this <i>FrequencyInfoUL-SIB</i> is for an unpaired UL (TDD)).
<i>FDD-TDD-OrSUL-Optional</i>	The field is optionally present, Need R, if this <i>FrequencyInfoUL-SIB</i> is for the paired UL for a DL (defined in a <i>FrequencyInfoDL-SIB</i>), or if this <i>FrequencyInfoUL-SIB</i> is for an unpaired UL (TDD) in certain bands (as defined in clause 5.4.2.1 of TS 38.101-1 and in clause 5.4.2.1 of TS 38.104 [12]), or if this <i>FrequencyInfoUL-SIB</i> is for a supplementary uplink (SUL). It is absent otherwise.

— *GapPriority*

The IE *GapPriority* is used to identify the priority of a gap configuration.

***GapPriority* information element**

```
-- ASN1START
-- TAG-GAPPRIORITY-START

GapPriority-r17 ::=                INTEGER (1..maxNrOfGapPri-r17)

-- TAG-GAPPRIORITY-STOP
-- ASN1STOP
```

— *HighSpeedConfig*

The IE *HighSpeedConfig* is used to configure parameters for high speed scenarios.

***HighSpeedConfig* information element**

```
-- ASN1START
-- TAG-HIGHSPEEDCONFIG-START

HighSpeedConfig-r16 ::= SEQUENCE {
    highSpeedMeasFlag-r16    ENUMERATED {true}    OPTIONAL,  -- Cond SpCellOnly
    highSpeedDemodFlag-r16   ENUMERATED {true}    OPTIONAL,  -- Need R
    ...
}

HighSpeedConfig-v1700 ::= SEQUENCE {
    highSpeedMeasCA-Scell-r17    ENUMERATED {true}    OPTIONAL,  -- Cond SCellOnly
    highSpeedMeasInterFreq-r17   ENUMERATED {true}    OPTIONAL,  -- Cond SpCellOnly2
    highSpeedDemodCA-Scell-r17   ENUMERATED {true}    OPTIONAL,  -- Need R
    ...
}

HighSpeedConfigFR2-r17 ::= SEQUENCE {
```

```

    highSpeedMeasFlagFR2-r17          ENUMERATED {set1, set2}          OPTIONAL, -- Need R
    highSpeedDeploymentTypeFR2-r17     ENUMERATED {unidirectional, bidirectional} OPTIONAL, -- Need R
    highSpeedLargeOneStepUL-TimingFR2-r17 ENUMERATED {true}          OPTIONAL, -- Need R
    ...
}

-- TAG-HIGHSPEEDCONFIG-STOP
-- ASN1STOP

```

HighSpeedConfig field descriptions

HighSpeedDemodCA-Scell

If the field is present and UE supports *demodulationEnhancementCA-r17*, the UE shall apply the enhanced demodulation processing for HST-SFN joint transmission scheme with velocity up to 500km/h as specified in TS 38.101-4 [59]. This parameter only applies to SCell.

highSpeedDemodFlag

If the field is present and UE supports *demodulationEnhancement-r16*, the UE shall apply the enhanced demodulation processing for HST-SFN joint transmission scheme with velocity up to 500km/h as specified in TS 38.101-4 [59]. This parameter only applies to SpCell.

highSpeedDeploymentTypeFR2

If the field is present, and field value is *unidirectional*, the UE shall assume uni-directional deployment or if field value is *birectional* the UE shall assume bidirectional deployment for FR2 up to 350km/h as specified in TS 38.133 [14].

highSpeedLargeOneStepUL-TimingFR2

If the field is present, large one step UE autonomous uplink transmit timing adjustment for FR2 up to 350km/h as specified in TS 38.133 [14] is enabled.

highSpeedMeasCA-Scell

If the field is present and UE supports *measurementEnhancementCA-r17*, the UE shall apply the enhanced RRM requirements to the serving frequency of SCell for carrier aggregation to support high speed up to 500 km/h as specified in TS 38.133 [14].

highSpeedMeasFlag

If the field is present and UE supports *measurementEnhancement-r16*, the UE shall apply the enhanced intra-NR and inter-RAT EUTRAN RRM requirements to support high speed up to 500 km/h as specified in TS 38.133 [14].

If the field is present and UE supports *intraNR-MeasurementEnhancement-r16*, the UE shall apply enhanced intra-NR RRM requirement to support high speed up to 500 km/h as specified in TS 38.133 [14].

If the field is present and UE supports *interRAT-MeasurementEnhancement-r16*, the UE shall apply enhanced inter-RAT EUTRAN RRM requirement to support high speed up to 500 km/h as specified in TS 38.133 [14].

This parameter only applies to the serving frequency of SpCell.

highSpeedMeasFlagFR2

If the field is present and UE supports *ue-PowerClass-v1700* set to *pc6*, the UE shall apply enhanced intra-frequency RRM requirement to the serving frequency of SpCell to support high speed up to 350 km/h for FR2 as specified in TS 38.133 [14].

If the field is present and the UE supports enhanced inter-frequency RRM requirements for FR2 HST in RRC_IDLE and RRC_INACTIVE, the UE shall apply enhanced inter-frequency RRM requirement to support high speed up to 350 km/h for FR2 as specified in TS 38.133 [14] in RRC_IDLE and RRC_INACTIVE.

If the field is present for SpCell and the UE supports *measEnhCAInterFreqFR2-r18*, the UE shall apply enhanced inter-frequency RRM requirement to support high speed up to 350 km/h for FR2 as specified in TS 38.133 [14] in RRC_CONNECTED.

If the field is present for SCell(s) and the UE supports *measEnhCAInterFreqFR2-r18*, the UE shall apply enhanced intra-frequency RRM requirements to the serving frequency of the corresponding SCell to support high speed up to 350 km/h for FR2 as specified in TS 38.133 [14] in RRC_CONNECTED. If the UE is configured with intra-band CA and the field *highSpeedMeasFlagFR2* is present, the network configures the same value for all serving cells.

The field value, *set1* or *set2*, is applied as specified in TS38.133 [14].

highSpeedMeasInterFreq

If the field is present and UE supports *measurementEnhancementInterFreq-r17*, the UE shall apply the enhanced RRM requirements for inter-frequency measurement in RRC_CONNECTED to support high speed up to 500 km/h as specified in TS 38.133 [14].

Conditional Presence	Explanation
<i>SCellOnly</i>	The field is optionally present, Need R, in <i>ServingCellConfigCommon</i> of an SCell. It is absent otherwise.
<i>SpCellOnly</i>	The field is optionally present, Need R, in <i>ServingCellConfigCommonSIB</i> or in the <i>ServingCellConfigCommon</i> of an SpCell. It is absent otherwise.
<i>SpCellOnly2</i>	The field is optionally present, Need R, in <i>ServingCellConfigCommon</i> of an SpCell. It is absent otherwise.

— *Hysteresis*

The IE *Hysteresis* is a parameter used within the entry and leave condition of an event triggered reporting condition. The actual value is field value * 0.5 dB.

***Hysteresis* information element**

```
-- ASN1START
-- TAG-HYSTERESIS-START

Hysteresis ::=
    INTEGER (0..30)

-- TAG-HYSTERESIS-STOP
-- ASN1STOP
```

— *HysteresisAltitude*

The IE *HysteresisAltitude* is a parameter used within the entry and leave condition of an altitude-based event triggered reporting condition and within altitude range based parameter configuration. The actual value is field value in meters.

***HysteresisAltitude* information element**

```
-- ASN1START
-- TAG-HYSTERESISALTITUDE-START

HysteresisAltitude-r18 ::=
    INTEGER (0..64)

-- TAG-HYSTERESISALTITUDE-STOP
-- ASN1STOP
```

— *HysteresisLocation*

The IE *HysteresisLocation* is a parameter used within entry and leave condition of a location based event triggered reporting condition. The actual value is field value * 10 meters.

***HysteresisLocation* information element**

```
-- ASN1START
-- TAG-HYSTERESISLOCATION-START
```

```
HysteresisLocation-r17 ::= INTEGER (0..32768)
```

```
-- TAG-HYSTERESISLOCATION-STOP
-- ASN1STOP
```

— *InvalidSymbolPattern*

The IE *InvalidSymbolPattern* is used to configure one invalid symbol pattern for PUSCH transmission repetition type B applicable for both DCI format 0_1 and 0_2, see TS 38.214 [19], clause 6.1.

***InvalidSymbolPattern* information element**

```
-- ASN1START
-- TAG-INVALIDSYMBOLPATTERN-START
```

```
InvalidSymbolPattern-r16 ::= SEQUENCE {
    symbols-r16 CHOICE {
        oneSlot BIT STRING (SIZE (14)),
        twoSlots BIT STRING (SIZE (28))
    },
    periodicityAndPattern-r16 CHOICE {
        n2 BIT STRING (SIZE (2)),
        n4 BIT STRING (SIZE (4)),
        n5 BIT STRING (SIZE (5)),
        n8 BIT STRING (SIZE (8)),
        n10 BIT STRING (SIZE (10)),
        n20 BIT STRING (SIZE (20)),
        n40 BIT STRING (SIZE (40))
    }
    OPTIONAL, -- Need M
    ...
}
```

```
-- TAG-INVALIDSYMBOLPATTERN-STOP
-- ASN1STOP
```

InvalidSymbolPattern field descriptions
periodicityAndPattern A time domain repetition pattern at which the pattern defined by <i>symbols</i> recurs. This slot pattern repeats itself continuously. When the field is not configured, the UE uses the value n1 (see TS 38.214 [19], clause 6.1).
symbols A symbol level bitmap in time domain (see TS 38.214[19], clause 6.1). For <i>oneSlot</i>, if ECP is configured, the first 12 bits represent the symbols within the slot and the last two bits within the bitstring are ignored by the UE; Otherwise, the 14 bits represent the symbols within the slot. For <i>twoSlots</i>, if ECP is configured, the first 12 bits represent the symbols within the first slot and the next 12 bits represent the symbols in the second slot and the last four bits within the bit string are ignored by the UE; Otherwise, the first 14 bits represent the symbols within the first slot and the next 14 bits represent the symbols in the second slot. For the bits representing symbols in a slot, the most significant bit of the bit string represents the first symbol in the slot and the second most significant bit represents the second symbol in the slot and so on. This pattern recurs (in time domain) with the configured <i>periodicityAndPattern</i>.

– *I-RNTI-Value*

The IE *I-RNTI-Value* is used to identify the suspended UE context of a UE in RRC_INACTIVE.

***I-RNTI-Value* information element**

```
-- ASN1START
-- TAG-I-RNTI-VALUE-START

I-RNTI-Value ::=                               BIT STRING (SIZE(40))

-- TAG-I-RNTI-VALUE-STOP
-- ASN1STOP
```

– *LBT-FailureRecoveryConfig*

The IE *LBT-FailureRecoveryConfig-r16* is used to configure the parameters used for detection of consistent uplink LBT failures for operation with shared spectrum channel access, as specified in TS 38.321 [3].

***LBT-FailureRecoveryConfig* information element**

```
-- ASN1START
-- TAG-LBT-FAILURERECOVERYCONFIG-START

LBT-FailureRecoveryConfig-r16 ::= SEQUENCE {
    lbt-FailureInstanceMaxCount-r16    ENUMERATED {n4, n8, n16, n32, n64, n128},
    lbt-FailureDetectionTimer-r16      ENUMERATED {ms10, ms20, ms40, ms80, ms160, ms320},
    ...
}

-- TAG-LBT-FAILURERECOVERYCONFIG-STOP
```

-- ASN1STOP

LBT-FailureRecoveryConfig field descriptions
Ibt-FailureDetectionTimer Timer for consistent uplink LBT failure detection (see TS 38.321 [3]). Value <i>ms10</i> corresponds to 10 ms, value <i>ms20</i> corresponds to 20 ms, and so on.
Ibt-FailureInstanceMaxCount This field determines after how many LBT failure indications received from the physical layer the UE triggers uplink LBT failure recovery (see TS 38.321 [3]). Value <i>n4</i> corresponds to 4, value <i>n8</i> corresponds to 8, and so on.

— LocationInfo

The IE *LocationInfo* is used to transfer available detailed location information, Bluetooth, WLAN and sensor available measurement results at the UE.

LocationInfo information element

-- ASN1START
-- TAG-LOCATIONINFO-START

```

LocationInfo-r16 ::= SEQUENCE {
    commonLocationInfo-r16      CommonLocationInfo-r16      OPTIONAL,
    bt-LocationInfo-r16         LogMeasResultListBT-r16      OPTIONAL,
    wlan-LocationInfo-r16       LogMeasResultListWLAN-r16    OPTIONAL,
    sensor-LocationInfo-r16     Sensor-LocationInfo-r16     OPTIONAL,
    ...
}
-- TAG-LOCATIONINFO-STOP
-- ASN1STOP

```

— LocationMeasurementInfo

The IE *LocationMeasurementInfo* defines the information sent by the UE to the network to assist with the configuration of measurement gaps for location related measurements.

LocationMeasurementInfo information element

-- ASN1START
-- TAG-LOCATIONMEASUREMENTINFO-START

```

LocationMeasurementInfo ::= CHOICE {
    eutra-RSTD          EUTRA-RSTD-InfoList,
    ...,
    eutra-FineTimingDetection  NULL,
    nr-PRS-Measurement-r16     NR-PRS-MeasurementInfoList-r16
}

```

```

EUTRA-RSTD-InfoList ::= SEQUENCE (SIZE (1..maxInterRAT-RSTD-Freq)) OF EUTRA-RSTD-Info

EUTRA-RSTD-Info ::= SEQUENCE {
    carrierFreq          ARFCN-ValueEUTRA,
    measPRS-Offset       INTEGER (0..39),
    ...
}

NR-PRS-MeasurementInfoList-r16 ::= SEQUENCE (SIZE (1..maxFreqLayers)) OF NR-PRS-MeasurementInfo-r16

NR-PRS-MeasurementInfo-r16 ::= SEQUENCE {
    dl-PRS-PointA-r16      ARFCN-ValueNR,
    nr-MeasPRS-RepetitionAndOffset-r16 CHOICE {
        ms20-r16           INTEGER (0..19),
        ms40-r16           INTEGER (0..39),
        ms80-r16           INTEGER (0..79),
        ms160-r16          INTEGER (0..159),
        ...
    },
    nr-MeasPRS-length-r16  ENUMERATED {ms1dot5, ms3, ms3dot5, ms4, ms5dot5, ms6, ms10, ms20},
    ...
}

-- TAG-LOCATIONMEASUREMENTINFO-STOP
-- ASN1STOP

```

LocationMeasurementInfo field descriptions

carrierFreq

The EARFCN value of the carrier received from upper layers for which the UE needs to perform the inter-RAT RSTD measurements.

measPRS-Offset

Indicates the requested gap offset for performing RSTD measurements towards E-UTRA. It is the smallest subframe offset from the beginning of subframe 0 of SFN=0 of the serving cell of the requested gap for measuring PRS positioning occasions in the carrier frequency *carrierFreq* for which the UE needs to perform the inter-RAT RSTD measurements. The PRS positioning occasion information is received from upper layers. The value of *measPRS-Offset* is obtained by mapping the starting subframe of the PRS positioning occasion in the measured cell onto the corresponding subframe in the serving cell and is calculated as the serving cell's number of subframes from SFN=0 mod 40.

The UE shall take into account any additional time required by the UE to start PRS measurements on the other carrier when it does this mapping for determining the *measPRS-Offset*.

NOTE: Figure 6.2.2-1 in TS 36.331[10] illustrates the *measPRS-Offset* field.

dl-PRS-PointA

The ARFCN value of the carrier received from upper layers for which the UE needs to perform the NR DL-PRS measurements.

nr-MeasPRS-RepetitionAndOffset

Indicates the gap periodicity in ms and offset in number of subframes of the requested measurement gap for performing NR DL-PRS measurements.

nr-MeasPRS-length

Indicates measurement gap length in ms of the requested measurement gap for performing NR DL-PRS measurements. The measurement gap length is according to in Table 9.1.2-1 in TS 38.133 [14].

– *LogicalChannelConfig*

The IE *LogicalChannelConfig* is used to configure the logical channel parameters.

LogicalChannelConfig information element

```
-- ASN1START
-- TAG-LOGICALCHANNELCONFIG-START

LogicalChannelConfig ::=
    ul-SpecificParameters
        priority
        prioritisedBitRate
        bucketSizeDuration
        allowedServingCells
        allowedSCS-List
        maxPUSCH-Duration
        configuredGrantType1Allowed
        logicalChannelGroup
        schedulingRequestId
        logicalChannelSR-Mask
        logicalChannelSR-DelayTimerApplied
        ...
        bitRateQueryProhibitTimer
        [[
            allowedCG-List-r16
            allowedPHY-PriorityIndex-r16
        ]],
        [[
            logicalChannelGroupIAB-Ext-r17
            allowedHARQ-mode-r17
        ]]
    }
    ...
    [[
        channelAccessPriority-r16
        bitRateMultiplier-r16
    ]]
}

-- TAG-LOGICALCHANNELCONFIG-STOP
-- ASN1STOP
```

SEQUENCE {
 SEQUENCE {
 INTEGER (1..16),
 ENUMERATED {kBps0, kBps8, kBps16, kBps32, kBps64, kBps128, kBps256, kBps512, kBps1024, kBps2048, kBps4096, kBps8192, kBps16384, kBps32768, kBps65536, infinity},
 ENUMERATED {ms5, ms10, ms20, ms50, ms100, ms150, ms300, ms500, ms1000, spare7, spare6, spare5, spare4, spare3, spare2, spare1},
 SEQUENCE (SIZE (1..maxNrofServingCells-1)) OF ServCellIndex
 SEQUENCE (SIZE (1..maxSCSs)) OF SubcarrierSpacing
 ENUMERATED {ms0p02, ms0p04, ms0p0625, ms0p125, ms0p25, ms0p5, ms0p01-v1700, spare1}
 ENUMERATED {true}
 INTEGER (0..maxLCG-ID)
 SchedulingRequestId
 BOOLEAN,
 BOOLEAN,
 ENUMERATED {s0, s0dot4, s0dot8, s1dot6, s3, s6, s12, s30}
 SEQUENCE (SIZE (0.. maxNrofConfiguredGrantConfigMAC-1-r16)) OF ConfiguredGrantConfigIndexMAC-r16
 ENUMERATED {p0, p1}
 INTEGER (0..maxLCG-ID-IAB-r17)
 ENUMERATED {harqModeA, harqModeB}
 OPTIONAL, -- Cond PDCP-CADuplication
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Need S
 OPTIONAL, -- Need S
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Cond UL
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R

<i>LogicalChannelConfig</i> field descriptions
<i>allowedCG-List</i> This restriction applies only when the UL grant is a configured grant. If present, UL MAC SDUs from this logical channel can only be mapped to the indicated configured grant configuration. If the size of the sequence is zero, then UL MAC SDUs from this logical channel cannot be mapped to any configured grant configurations. If the field is not present, UL MAC SDUs from this logical channel can be mapped to any configured grant configurations. If the field <i>configuredGrantType1Allowed</i> is present, only those configured grant type 1 configuration indicated in this sequence are allowed for use by this logical channel; otherwise, this sequence shall not include any configured grant type 1 configuration. Corresponds to "allowedCG-List" as specified in TS 38.321 [3]. This field is ignored when SDT procedure is ongoing.
<i>allowedHARQ-mode</i> Indicates the allowed HARQ mode of a HARQ process mapped to this logical channel. If the parameter is absent, there is no restriction for HARQ mode for the mapping. This field applies to SRB1, SRB2, SRB4 and DRBs.
<i>allowedPHY-PriorityIndex</i> This restriction applies only when the UL grant is a dynamic grant. If the field is present and the dynamic grant has a PHY-priority index, UL MAC SDUs from this logical channel can only be mapped to the dynamic grants indicating PHY-priority index equal to the values configured by this field. If the field is present and the dynamic grant does not have a PHY-priority index, UL MAC SDUs from this logical channel can only be mapped to this dynamic grant if the value of the field is <i>p0</i>, see TS 38.213 [13], clause 9. If the field is not present, UL MAC SDUs from this logical channel can be mapped to any dynamic grants. Corresponds to "allowedPHY-PriorityIndex" as specified in TS 38.321 [3].
<i>allowedSCS-List</i> If present, UL MAC SDUs from this logical channel can only be mapped to the indicated numerology. Otherwise, UL MAC SDUs from this logical channel can be mapped to any configured numerology. Corresponds to '<i>allowedSCS-List</i>' as specified in TS 38.321 [3]. Only the following values are applicable depending on the used frequency: FR1: 15, 30, or 60 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz
<i>allowedServingCells</i> If present, UL MAC SDUs from this logical channel can only be mapped to the serving cells indicated in this list. Otherwise, UL MAC SDUs from this logical channel can be mapped to any configured serving cell of this cell group. Corresponds to '<i>allowedServingCells</i>' in TS 38.321 [3].
<i>bitRateMultiplier</i> Bit rate multiplier for recommended bit rate MAC CE as specified in TS 38.321 [3]. Value <i>x40</i> indicates bit rate multiplier 40, value <i>x70</i> indicates bit rate multiplier 70 and so on.
<i>bitRateQueryProhibitTimer</i> The timer is used for bit rate recommendation query in TS 38.321 [3], in seconds. Value <i>s0</i> means 0 s, <i>s0dot4</i> means 0.4 s and so on.
<i>bucketSizeDuration</i> Value in ms. <i>ms5</i> corresponds to 5 ms, value <i>ms10</i> corresponds to 10 ms, and so on.
<i>channelAccessPriority</i> Indicates the Channel Access Priority Class (CAPC), as specified in TS 38.300 [2], to be used on uplink transmissions for operation with shared spectrum channel access in FR1. The network configures this field only for SRB2 and DRBs.
<i>configuredGrantType1Allowed</i> If present, or if the capability <i>lcp-Restriction</i> as specified in TS 38.306 [26] is not supported, UL MAC SDUs from this logical channel can be transmitted on a configured grant type 1. Otherwise, UL MAC SDUs from this logical channel cannot be transmitted on a configured grant type 1. Corresponds to '<i>configuredGrantType1Allowed</i>' in TS 38.321 [3]. This field is ignored when SDT procedure is ongoing.
<i>logicalChannelGroup, logicalChannelGroupIAB-Ext</i> ID of the logical channel group, as specified in TS 38.321 [3], which the logical channel belongs to. The <i>logicalChannelGroupIAB-Ext</i> is only applicable to the IAB-MT. When <i>logicalChannelGroupIAB-Ext</i> is configured, <i>logicalChannelGroup</i> shall be ignored.
<i>logicalChannelSR-Mask</i> Controls SR triggering when a configured uplink grant of <i>type1</i> or <i>type2</i> is configured. <i>true</i> indicates that SR masking is configured for this logical channel as specified in TS 38.321 [3].
<i>logicalChannelSR-DelayTimerApplied</i> Indicates whether to apply the delay timer for SR transmission for this logical channel. Set to <i>false</i> if <i>logicalChannelSR-DelayTimer</i> is not included in <i>BSR-Config</i>.

maxPUSCH-Duration If present, UL MAC SDUs from this logical channel can only be transmitted using uplink grants that result in a PUSCH duration shorter than or equal to the duration indicated by this field. Otherwise, UL MAC SDUs from this logical channel can be transmitted using an uplink grant resulting in any PUSCH duration. Corresponds to "maxPUSCH-Duration" in TS 38.321 [3]. The PUSCH duration is calculated based on the same length of all symbols, and the shortest length applies if the symbol lengths are different.
priority Logical channel priority, as specified in TS 38.321 [3].
prioritisedBitRate Value in kiloBytes/s. Value <i>kBps0</i> corresponds to 0 kiloBytes/s, value <i>kBps8</i> corresponds to 8 kiloBytes/s, value <i>kBps16</i> corresponds to 16 kiloBytes/s, and so on. For SRBs, the value can only be set to <i>infinity</i> .
schedulingRequestId If present, it indicates the scheduling request configuration applicable for this logical channel, as specified in TS 38.321 [3].

Conditional Presence	Explanation
<i>PDCP-CADuplication</i>	The field is mandatory present if the DRB/SRB associated with this logical channel is configured with PDCP CA duplication in UL in the cell group in which this IE is included (i.e. the PDCP entity is associated with multiple RLC entities belonging to this cell group). Otherwise the field is optionally present, need R.
<i>UL</i>	The field is mandatory present for a logical channel with uplink if it serves DRB or multicast MRB. It is optionally present, Need R, for a logical channel with uplink if it serves an SRB. Otherwise it is absent.

– *LogicalChannelIdentity*

The IE *LogicalChannelIdentity* is used to identify one logical channel (*LogicalChannelConfig*) and the corresponding RLC bearer (*RLC-BearerConfig*) or BH RLC channel (*BH-RLC-ChannelConfig*) or Uu Relay RLC channel (*Uu-RelayRLC-ChannelConfig*) or PC5 Relay RLC channel (*SL-RLC-ChannelConfigPC5*).

***LogicalChannelIdentity* information element**

```
-- ASN1START
-- TAG-LOGICALCHANNELIDENTITY-START

LogicalChannelIdentity ::=          INTEGER (1..maxLC-ID)

-- TAG-LOGICALCHANNELIDENTITY-STOP
-- ASN1STOP
```

– *LTE-NeighCellsCRS-AssistInfoList*

The IE *LTE-NeighCellsCRS-AssistInfoList-r17* is used to provide configuration information of neighbour LTE cells to assist the UE to perform CRS interference mitigation (CRS-IM) in scenarios with overlapping spectrum for LTE and NR.

***LTE-NeighCellsCRS-AssistInfoList* information element**

```
-- ASN1START
-- TAG-LTE-NEIGHCELLSCRS-ASSISTINFOLIST-START
```



```

LTE-NeighCellsCRS-AssistInfoList-r17 ::= SEQUENCE (SIZE (1..maxNrofCRS-IM-InterfCell-r17)) OF LTE-NeighCellsCRS-AssistInfo-r17

LTE-NeighCellsCRS-AssistInfo-r17 ::= SEQUENCE {
    neighCarrierBandwidthDL-r17      ENUMERATED {n6, n15, n25, n50, n75, n100, spare2, spare1} OPTIONAL, -- Cond CRS-IM
    neighCarrierFreqDL-r17           INTEGER (0..16383)                                OPTIONAL, -- Need S
    neighCellId-r17                  EUTRA-PhysCellId                                OPTIONAL, -- Need S
    neighCRS-muting-r17              ENUMERATED {enabled}                            OPTIONAL, -- Need R
    neighMBSFN-SubframeConfigList-r17 EUTRA-MBSFN-SubframeConfigList                OPTIONAL, -- Need S
    neighNrofCRS-Ports-r17           ENUMERATED {n1, n2, n4}                        OPTIONAL, -- Need S
    neighV-Shift-r17                ENUMERATED {n0, n1, n2, n3, n4, n5}              OPTIONAL, -- Cond NotCellID
}

-- TAG-LTE-NEIGHCELLSCRS-ASSISTINFOLIST-STOP
-- ASN1STOP

```

***LTE-NeighCellsCRS-AssistInfo* field descriptions**

neighCarrierBandwidthDL

Indicates the channel bandwidth of the neighbour LTE cell in number of PRBs. If the field is absent, the UE applies the value of *carrierBandwidthDL* indicated in *RateMatchPatternLTE-CRS* for this serving cell, if configured.

neighCarrierFreqDL

Indicates the downlink centre frequency of the neighbour LTE cell. If the field is absent, the UE applies the value of *carrierFreqDL* indicated in *RateMatchPatternLTE-CRS* for this serving cell, if configured.

neighCellId

Indicates the physical cell ID of the neighbour LTE cell for which the other fields within the same *LTE-NeighCellsCRS-AssistInfo* apply.
 If the IE *LTE-NeighCellsCRS-AssistInfoList* contains multiple list entries, either this field or *neighV-Shift* is included in each instance.
 If the IE *LTE-NeighCellsCRS-AssistInfoList* contains multiple list entries, the entry with *neighV-Shift* is only used for neighbour LTE cells for which *neighCellId* is not provided (i.e. the entry with *neighCellId* takes precedence over the entry with *neighV-Shift*, if provided).
 If the IE *LTE-NeighCellsCRS-AssistInfoList* contains one list entry with neither this field nor *neighV-Shift*, the information within the entry applies to all neighbour LTE cells.

neighCRS-muting

Indicates whether the CRS interference mitigation is enabled in the neighbour LTE cell, as specified in TS 36.133 [40], clause 3.6.1.1.

neighMBSFN-SubframeConfigList

Indicates the MBSFN subframe configuration of the neighbour LTE cell. If *RateMatchPatternLTE-CRS* is configured for this serving cell and the field is absent, the UE applies the value of *mbsfn-SubframeConfigList* indicated in *RateMatchPatternLTE-CRS* for this serving cell if configured; otherwise, if the field is absent, the UE assumes MBSFN is not configured in the neighbour LTE cell.

neighNrofCRS-Ports

Indicates the CRS antenna ports number of the neighbour LTE cell. If the field is absent, the UE applies the value of *nrofCRS-Ports* indicated in *RateMatchPatternLTE-CRS* for this serving cell, if configured. If *RateMatchPatternLTE-CRS* is not configured for this serving cell and the field is absent, the UE applies the default value n4.

neighV-Shift

Indicates the shifting value v-shift of neighbour LTE cells for which the other fields within the same *LTE-NeighCellsCRS-AssistInfo* apply.

Conditional Presence	Explanation
<i>CRS-IM</i>	For the serving cell with 15kHz SCS, this field is mandatory present for the UE supporting the capability of <i>crs-IM-nonDSS-NWA-15kHzSCS-r17</i> , but not supporting <i>crs-IM-nonDSS-15kHzSCS-r17</i> , if <i>RateMatchPatternLTE-CRS</i> is not configured for this serving cell. Otherwise it is optionally present, Need S if <i>RateMatchPatternLTE-CRS</i> is configured for this serving cell; Need M otherwise. For the serving cell with 30kHz SCS, this field is mandatory present for the UE supporting the capability of <i>crs-IM-nonDSS-NWA-30kHzSCS-r17</i> , but not supporting <i>crs-IM-nonDSS-30kHzSCS-r17</i> , if <i>RateMatchPatternLTE-CRS</i> is not configured for this serving cell. Otherwise it is optionally present, Need S if <i>RateMatchPatternLTE-CRS</i> is configured for this serving cell; Need M otherwise.
<i>NotCellID</i>	If the field <i>neighCellId</i> is present, this field shall be absent; otherwise, it is optionally present if the IE <i>LTE-NeighCellsCRS-AssistInfoList</i> contains one list entry, Need S, or it is mandatory present if the IE <i>LTE-NeighCellsCRS-AssistInfoList</i> contains multiple list entries.

— *LTM-CandidateId*

The IE *LTM-CandidateId* is used to identify an LTM candidate configuration.

LTM-CandidateId information element

```
-- ASN1START
-- TAG-LTM-CANDIDATEID-START
```

```
LTM-CandidateId-r18 ::= INTEGER (1..maxNrofLTM-Configs-r18)
```

```
-- TAG-LTM-CANDIDATEID-STOP
-- ASN1STOP
```

— *LTM-Candidate*

The IE *LTM-Candidate* concerns a LTM candidate configuration to add or modify.

LTM-Candidate information element

```
-- ASN1START
-- TAG-LTM-CANDIDATE-START
```

```
LTM-Candidate-r18 ::= SEQUENCE {
    ltm-CandidateId-r18          LTM-CandidateId-r18,
    ltm-CandidatePCI-r18        PhysCellId                                OPTIONAL, -- Need M
    ltm-SSB-Config-r18          LTM-SSB-Config-r18                        OPTIONAL, -- Need M
    ltm-CandidateConfig-r18     OCTET STRING (CONTAINING RRCReconfiguration) OPTIONAL, -- Need M
    ltm-ConfigComplete-r18      ENUMERATED {true}                        OPTIONAL, -- Need R
    ltm-EarlyUL-SyncConfig-r18   OCTET STRING (CONTAINING EarlyUL-SyncConfig-r18) OPTIONAL, -- Need R
    ltm-EarlyUL-SyncConfigSUL-r18 OCTET STRING (CONTAINING EarlyUL-SyncConfig-r18) OPTIONAL, -- Need R
    ltm-TCI-Info-r18            LTM-TCI-Info-r18                          OPTIONAL, -- Need M
    ltm-NoResetID-r18           INTEGER (1..maxNrofLTM-Configs-plus1-r18) OPTIONAL, -- Need M
}
```

```

    ltm-UE-MeasuredTA-ID-r18          INTEGER (1..maxNrofLTM-Configs-plus1-r18)          OPTIONAL,    -- Need M
    ...
}

LTM-SSB-Config-r18 ::= SEQUENCE {
    ssb-Frequency-r18                ARFCN-ValueNR,
    subcarrierSpacing-r18            SubcarrierSpacing,
    ssb-Periodicity-r18              ENUMERATED {ms5, ms10, ms20, ms40, ms80, ms160, spare2, spare1} OPTIONAL,    -- Need S
    ssb-PositionsInBurst-r18         CHOICE {
        shortBitmap                  BIT STRING (SIZE (4)),
        mediumBitmap                 BIT STRING (SIZE (8)),
        longBitmap                   BIT STRING (SIZE (64))
    },
    ss-PBCH-BlockPower-r18           INTEGER (-60..50)                                OPTIONAL,    -- Need R
    ...
}

-- TAG-LTM-CANDIDATE-STOP
-- ASN1STOP

```

<i>LTM-Candidate</i> field descriptions	
<i>ltm-CandidateConfig</i>	This field includes an RRCReconfiguration message used to configure an LTM candidate configuration.
<i>ltm-CandidatePCI</i>	This field identifies the PCI of the SpCell of the LTM candidate configuration contained in <i>ltm-CandidateConfig</i> .
<i>ltm-EarlyUL-SyncConfig</i>, <i>ltm-EarlyUL-SyncConfigSUL</i>	A configuration used to perform the early UL synchronization procedure over an UL or SUL carrier.
<i>ltm-NoResetID</i>	If the network configures this field for one LTM candidate configuration, the network configures also for all LTM candidate configurations within <i>ltm-CandidateToAddModList</i> in <i>LTM-Config</i> and ensures that the UE has stored a value for <i>ltm-ServingCellNoResetID</i> within <i>VarLTM-ServingCellNoResetID</i> .
<i>ltm-UE-MeasuredTA-ID</i>	If the network configures this field for one LTM candidate configuration, the network configures also for all LTM candidate configurations within <i>ltm-CandidateToAddModList</i> in <i>LTM-Config</i> and ensures that the UE has stored a value for <i>ltm-ServingCellUE-MeasuredTA-ID</i> within <i>VarLTM-ServingCellUE-MeasuredTA-ID</i> . This field is absent if <i>tag2</i> is present for this LTM candidate configuration.

<i>LTM-SSB-Config</i> field descriptions	
<i>ssb-Periodicity</i>	The SSB periodicity in ms. If the field is absent, the UE applies the value <i>ms5</i> . (see TS 38.213 [13], clause 4.1).
<i>ssb-PositionsInBurst</i>	For operation in licensed spectrum, indicates the time domain positions of the transmitted SS-blocks in a half frame with SS/PBCH blocks as defined in TS 38.213 [13], clause 4.1. The first/leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not transmitted while value 1 indicates that the corresponding SS/PBCH block is transmitted. The network always includes this field if <i>ltm-SSB-Config</i> is configured.
<i>ss-PBCH-BlockPower</i>	Average EPRE of the resources elements that carry secondary synchronization signals in dBm that the NW used for SSB transmission, see TS 38.213 [13], clause 7. The network always includes this field if <i>ltm-SSB-Config</i> is configured.

— LTM-Config

The IE *LTM-Config* is used to provide LTM configurations.

LTM-Config information element

```

-- ASN1START
-- TAG-LTM-CONFIG-START

LTM-Config-r18 ::= SEQUENCE {
    ltm-ReferenceConfiguration-r18          SetupRelease {ReferenceConfiguration-r18}          OPTIONAL, -- Need M
    ltm-CandidateToReleaseList-r18          SEQUENCE (SIZE (1..maxNrofLTM-Configs-r18)) OF LTM-CandidateId-r18  OPTIONAL, -- Need N
    ltm-CandidateToAddModList-r18           SEQUENCE (SIZE (1..maxNrofLTM-Configs-r18)) OF LTM-Candidate-r18  OPTIONAL, -- Need N
    ltm-ServingCellNoResetID-r18            INTEGER (1..maxNrofLTM-Configs-plus1-r18)        OPTIONAL, -- Need N
    ltm-CSI-ResourceConfigToAddModList-r18  SEQUENCE (SIZE (1..maxNrofLTM-CSI-ResourceConfigurations-r18)) OF LTM-CSI-ResourceConfig-r18  OPTIONAL, -- Need N
    ltm-CSI-ResourceConfigToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofLTM-CSI-ResourceConfigurations-r18)) OF LTM-CSI-ResourceConfigId-r18  OPTIONAL, -- Need N
    attemptLTM-Switch-r18                   ENUMERATED {true}                             OPTIONAL, -- Cond LTM-MCG
    ltm-ServingCellUE-MeasuredTA-ID-r18     INTEGER (1..maxNrofLTM-Configs-plus1-r18)        OPTIONAL, -- Need N
    ...
}

-- TAG-LTM-CONFIG-STOP
-- ASN1STOP

```

Conditional Presence	Explanation
LTM-MCG	This field is optional present for the MCG, Need R, if the UE is configured with at least an LTM candidate configuration associated to the MCG. Otherwise, the field absent.

— LTM-CSI-ReportConfig

The IE *LTM-CSI-ReportConfig* is used to configure report on the cell in which the *LTM-CSI-ReportConfig* is included.

LTM-CSI-ReportConfig information element

```

-- ASN1START
-- TAG-LTM-CSI-REPORTCONFIG-START

LTM-CSI-ReportConfig-r18 ::= SEQUENCE {
    ltm-CSI-ReportConfigId-r18              LTM-CSI-ReportConfigId-r18,
    ltm-ResourcesForChannelMeasurement-r18  LTM-CSI-ResourceConfigId-r18,
    ltm-ReportConfigType-r18               CHOICE {
        periodic-r18                        SEQUENCE {
            reportSlotConfig-r18            CSI-ReportPeriodicityAndOffset,
            pucch-CSI-ResourceList-r18      SEQUENCE (SIZE (1..maxNrofBWPs)) OF PUCCH-CSI-Resource
        },
        semiPersistentOnPUCCH-r18          SEQUENCE {

```

```

        reportSlotConfig-r18
        pucch-CSI-ResourceList-r18
    },
    semiPersistentOnPUSCH-r18
    reportSlotConfig-r18
    reportSlotOffsetList-r18
    reportSlotOffsetListDCI-0-2-r18
    reportSlotOffsetListDCI-0-1-r18
    p0alpha-r18
},
aperiodic-r18
    reportSlotOffsetList-r18
    reportSlotOffsetListDCI-0-2-r18
    reportSlotOffsetListDCI-0-1-r18
},
...
},
ltm-ReportContent-r18
...
}

LTM-ReportContent-r18 ::= SEQUENCE {
    nrOfReportedCells-r18          ENUMERATED {n1,n2,n3,n4},
    nrOfReportedRS-PerCell-r18    ENUMERATED {n1,n2,n3,n4},
    spCellInclusion-r18            ENUMERATED {true}
}

-- TAG-LTM-CSI-REPORTCONFIG-STOP
-- ASN1STOP

```

```

CSI-ReportPeriodicityAndOffset,
SEQUENCE (SIZE (1..maxNrofBWPs)) OF PUCCH-CSI-Resource

SEQUENCE {
    CSI-ReportPeriodicityAndOffset,
    SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER (0..128),
    SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER (0..128),
    SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER (0..128),
    P0-PUSCH-AlphaSetId

SEQUENCE {
    SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER (0..128),
    SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER (0..128),
    SEQUENCE (SIZE (1.. maxNrofUL-Allocations-r16)) OF INTEGER (0..128)

LTM-ReportContent-r18,

```

OPTIONAL -- Need R

LTM-CSI-ReportConfig field descriptions**ltm-ReportContent**

This field defines the content of the LTM L1 measurement report.

reportSlotConfigPeriodicity and slot offset (see TS 38.214 [19], clause 5.2.1.4). The UE shall ignore the offset provided by this field in case *semiPersistentOnPUSCH* is configured.**reportSlotOffsetList, reportSlotOffsetListDCI-0-1, reportSlotOffsetListDCI-0-2**

Timing offset Y for semi persistent reporting using PUSCH and aperiodic reporting.

LTM-ReportContent field descriptions**nrOfReportedCells**

This field defines how many cells are reported within a single L1 measurement report instance.

nrOfReportedRS-PerCell

This field defines how many RSs per cell are reported within a single L1 measurement report instance.

spCellInclusionThis field indicates whether the UE shall include a L1 measurement report associated to the current SpCell. This field can only be configured if the current SpCell is configured as an SpCell of an LTM candidate configuration and the *LTM-CSI-ResourceConfig* IE associated to the *LTM-CSI-ReportConfig* IE includes resources for the current SpCell.

— *LTM-CSI-ReportConfigId*

The IE *LTM-CSI-ReportConfigId* is used to identify an *LTM-CSI-ReportConfig*.

***LTM-CSI-ReportConfigId* information element**

```
-- ASN1START
-- TAG-LTM-CSI-REPORTCONFIGID-START

LTM-CSI-ReportConfigId-r18 ::=          INTEGER (0..maxNrofLTM-CSI-ReportConfigurations-1-r18)

-- TAG-LTM-CSI-REPORTCONFIGID-STOP
-- ASN1STOP
```

— *LTM-CSI-ResourceConfig*

The IE *LTM-CSI-ResourceConfig* defines a group of one or more CSI resources for one or more LTM candidate configurations.

***LTM-CSI-ResourceConfig* information element**

```
-- ASN1START
-- TAG-LTM-CSI-RESOURCECONFIG-START

LTM-CSI-ResourceConfig-r18 ::=          SEQUENCE {
    ltm-CSI-ResourceConfigId-r18         LTM-CSI-ResourceConfigId-r18,
    ltm-CSI-SSB-ResourceSet-r18          LTM-CSI-SSB-ResourceSet-r18,
    ...
}

LTM-CSI-SSB-ResourceSet-r18 ::=          SEQUENCE {
    ltm-CSI-SSB-ResourceList-r18         SEQUENCE (SIZE (1..maxNrofLTM-CSI-SSB-ResourcesPerSet-r18)) OF SSB-Index,
    ltm-CandidateIdList-r18              SEQUENCE (SIZE (1..maxNrofLTM-CSI-SSB-ResourcesPerSet-r18)) OF LTM-CandidateId-r18,
    ...
}

-- TAG-LTM-CSI-RESOURCECONFIG-STOP
-- ASN1STOP
```

<i>LTM-CSI-SSB-ResourceSet</i> field descriptions
<i>ltm-CandidateIdList</i> This field indicates the LTM candidate configuration IDs related to the SSBs in the <i>ltm-CSI-SSB-ResourceList</i> . The list has the same number of entries as <i>ltm-CSI-SSB-ResourceList</i> . The first entry in this list shall be associated to the first entry in <i>ltm-CSI-SSB-ResourceList</i> , the second entry of this list shall be associated to the second entry in <i>ltm-CSI-SSB-ResourceList</i> , and so on.
<i>ltm-CSI-SSB-ResourceList</i> This field is used to indicate on SS/PBCH block resources from one or more LTM candidate cells.

– *LTM-CSI-ResourceConfigId*

The IE *LTM-CSI-ResourceConfigId* is used to identify an *LTM-CSI-ResourceConfig*.

LTM-CSI-ResourceConfigId information element

```
-- ASN1START
-- TAG-LTM-CSI-RESOURCECONFIGID-START

LTM-CSI-ResourceConfigId-r18 ::=                INTEGER (0..maxNrofLTM-CSI-ResourceConfigurations-1-r18)

-- TAG-LTM-CSI-RESOURCECONFIGID-STOP
-- ASN1STOP
```

– *LTM-TCI-Info*

The IE *LTM-TCI-Info* is used to configure TCI related information for an LTM candidate configuration to be used during activation of TCI state(s) and/or upon the reception of the LTM Cell Switch procedure.

LTM-TCI-Info information element

```
-- ASN1START
-- TAG-LTM-TCI-INFO-START

LTM-TCI-Info-r18 ::=                            SEQUENCE {
    ltm-DL-OrJointTCI-StateToAddModList-r18      SEQUENCE (SIZE (1..maxNrofCandidateTCI-State-r18)) OF CandidateTCI-State-r18
                                                OPTIONAL,           -- Need N
    ltm-DL-OrJointTCI-StateToReleaseList-r18      SEQUENCE (SIZE (1..maxNrofCandidateTCI-State-r18)) OF TCI-StateId
                                                OPTIONAL,           -- Need N
    ltm-UL-TCI-StateToAddModList-r18              SEQUENCE (SIZE (1..maxNrofCandidateUL-TCI-r18)) OF CandidateTCI-UL-State-r18
                                                OPTIONAL,           -- Need N
    ltm-UL-TCI-StateToReleaseList-r18             SEQUENCE (SIZE (1..maxNrofCandidateUL-TCI-r18)) OF TCI-UL-StateId-r17
                                                OPTIONAL,           -- Need N
    ltm-NZP-CSI-RS-ResourceToAddModList-r18       SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-Resources)) OF NZP-CSI-RS-Resource
                                                OPTIONAL,           -- Need N
    ltm-NZP-CSI-RS-ResourceToReleaseList-r18      SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-Resources)) OF NZP-CSI-RS-ResourceId
                                                OPTIONAL,           -- Need N
    ltm-NZP-CSI-RS-ResourceSetToAddModList-r18    SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourceSets)) OF NZP-CSI-RS-ResourceSet
                                                OPTIONAL,           -- Need N
    ltm-NZP-CSI-RS-ResourceSetToReleaseList-r18   SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourceSets)) OF NZP-CSI-RS-ResourceSetId
                                                OPTIONAL,           -- Need N
    pathlossReferenceRS-ToAddModList-r18          SEQUENCE (SIZE (1..maxNrofPathlossReferenceRSs-r17)) OF PathlossReferenceRS-r17
                                                OPTIONAL,           -- Need N
    pathlossReferenceRS-ToReleaseList-r18         SEQUENCE (SIZE (1..maxNrofPathlossReferenceRSs-r17)) OF PathlossReferenceRS-Id-r17
                                                OPTIONAL,           -- Need N
    unifiedTCI-StateType-r18                     ENUMERATED {separate, joint}
                                                OPTIONAL,           -- Need N
    ...
}
-- TAG-LTM-TCI-INFO-STOP
```

-- ASN1STOP

LTM-TCI-Info field descriptions

unifiedTCI-StateType

Indicates the unified TCI states type the UE is configured for this LTM candidate configuration. The value *separate* means this LTM candidate configuration is configured with *ltm-DL-OrJointTCI-StateToAddModList* for DL TCI states and *ltm-UL-TCI-StateToAddModList* for UL TCI states. The value *joint* means this LTM candidate configuration is configured with *ltm-DL-OrJointTCI-StateToAddModList* for joint TCI states for UL and DL operation. The network always configures this field.

MAC-CellGroupConfig

The IE *MAC-CellGroupConfig* is used to configure MAC parameters for a cell group, including DRX.

MAC-CellGroupConfig information element

-- ASN1START
-- TAG-MAC-CELLGROUPCONFIG-START

MAC-CellGroupConfig ::=	SEQUENCE {			
drx-Config	SetupRelease { DRX-Config }	OPTIONAL,	--	Need M
schedulingRequestConfig	SchedulingRequestConfig	OPTIONAL,	--	Need M
bsr-Config	BSR-Config	OPTIONAL,	--	Need M
tag-Config	TAG-Config	OPTIONAL,	--	Need M
phr-Config	SetupRelease { PHR-Config }	OPTIONAL,	--	Need M
skipUplinkTxDynamic	BOOLEAN,			
...				
[[				
csi-Mask	BOOLEAN	OPTIONAL,	--	Need M
dataInactivityTimer	SetupRelease { DataInactivityTimer }	OPTIONAL	--	Cond MCG-Only
]],				
[[				
usePreBSR-r16	ENUMERATED {true}	OPTIONAL,	--	Need R
schedulingRequestID-LBT-SCell-r16	SchedulingRequestId	OPTIONAL,	--	Need R
lch-BasedPrioritization-r16	ENUMERATED {enabled}	OPTIONAL,	--	Need R
schedulingRequestID-BFR-SCell-r16	SchedulingRequestId	OPTIONAL,	--	Need R
drx-ConfigSecondaryGroup-r16	SetupRelease { DRX-ConfigSecondaryGroup-r16 }	OPTIONAL	--	Need M
]],				
[[				
enhancedSkipUplinkTxDynamic-r16	ENUMERATED {true}	OPTIONAL,	--	Need R
enhancedSkipUplinkTxConfigured-r16	ENUMERATED {true}	OPTIONAL	--	Need R
]],				
[[				
intraCG-Prioritization-r17	ENUMERATED {enabled}	OPTIONAL,	--	Cond LCH-PriowithReTxTimer
drx-ConfigSL-r17	SetupRelease { DRX-ConfigSL-r17 }	OPTIONAL,	--	Need M
drx-ConfigExt-v1700	SetupRelease { DRX-ConfigExt-v1700 }	OPTIONAL,	--	Need M
schedulingRequestID-BFR-r17	SchedulingRequestId	OPTIONAL,	--	Need R
schedulingRequestID-BFR2-r17	SchedulingRequestId	OPTIONAL,	--	Need R
schedulingRequestConfig-v1700	SchedulingRequestConfig-v1700	OPTIONAL,	--	Need M
tar-Config-r17	SetupRelease { TAR-Config-r17 }	OPTIONAL,	--	Need M
g-RNTI-ConfigToAddModList-r17	SEQUENCE (SIZE (1..maxG-RNTI-r17)) OF MBS-RNTI-SpecificConfig-r17	OPTIONAL,	--	Need N


```

g-RNTI-ConfigToReleaseList-r17 SEQUENCE (SIZE (1..maxG-RNTI-r17)) OF MBS-RNTI-SpecificConfigId-r17 OPTIONAL, -- Need N
g-CS-RNTI-ConfigToAddModList-r17 SEQUENCE (SIZE (1..maxG-CS-RNTI-r17)) OF MBS-RNTI-SpecificConfig-r17 OPTIONAL, -- Need N
g-CS-RNTI-ConfigToReleaseList-r17 SEQUENCE (SIZE (1..maxG-CS-RNTI-r17)) OF MBS-RNTI-SpecificConfigId-r17 OPTIONAL, -- Need N
allowCSI-SRS-Tx-MulticastDRX-Active-r17 BOOLEAN OPTIONAL -- Need M
]],
[[
schedulingRequestID-PosMG-Request-r17 SchedulingRequestId OPTIONAL, -- Need R
drx-LastTransmissionUL-r17 ENUMERATED {enabled} OPTIONAL -- Need R
]],
[[
posMG-Request-r17 ENUMERATED {enabled} OPTIONAL -- Need R
]],
[[
drx-ConfigExt2-v1800 SetupRelease { DRX-ConfigExt2-v1800 } OPTIONAL, -- Need M
additionalBS-TableAllowed-r18 BIT STRING (SIZE (maxNrofLCGs-r18)) OPTIONAL, -- Need R
dsr-ConfigToAddModList-r18 SEQUENCE (SIZE (1..maxNrofLCGs-r18)) OF LCG-DSR-Config-r18 OPTIONAL, -- Need N
dsr-ConfigToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofLCGs-r18)) OF LCG-Id-r18 OPTIONAL, -- Need N
tar-Config-r18 SetupRelease { TAR-Config-r18 } OPTIONAL -- Need M
]]
}

DataInactivityTimer ::= ENUMERATED {s1, s2, s3, s5, s7, s10, s15, s20, s40, s50, s60, s80, s100, s120, s150, s180}

MBS-RNTI-SpecificConfig-r17 ::= SEQUENCE {
  mbs-RNTI-SpecificConfigId-r17 MBS-RNTI-SpecificConfigId-r17,
  groupCommon-RNTI-r17 CHOICE {
    g-RNTI RNTI-Value,
    g-CS-RNTI RNTI-Value
  },
  drx-ConfigPTM-r17 SetupRelease { DRX-ConfigPTM-r17 } OPTIONAL, -- Need M
  harq-FeedbackEnablerMulticast-r17 ENUMERATED {dci-enabler, enabled} OPTIONAL, -- Need S
  harq-FeedbackOptionMulticast-r17 ENUMERATED {ack-nack, nack-only} OPTIONAL, -- Cond HARQFeedback
  pdsch-AggregationFactor-r17 ENUMERATED {n2, n4, n8} OPTIONAL -- Cond G-RNTI
}

MBS-RNTI-SpecificConfigId-r17 ::= INTEGER (0..maxG-RNTI-1-r17)

LCG-DSR-Config-r18 ::= SEQUENCE {
  lcg-Id-r18 LCG-Id-r18,
  remainingTimeThreshold-r18 INTEGER (1..64),
  ...
}

LCG-Id-r18 ::= INTEGER (0..maxLCG-ID)

-- TAG-MAC-CELLGROUPCONFIG-STOP
-- ASN1STOP

```

MAC-CellGroupConfig field descriptions
additionalBS-TableAllowed Indicates whether a UE is allowed to utilize the refined buffer size levels, as specified in TS 38.321 [3], for a certain Logical Channel Group. The leftmost bit corresponds to LCG ID=0, second leftmost bit to LCG ID=1 and so on. The UE is allowed to utilize the refined buffer size levels for a Logical Channel Group only when the corresponding bit is set to 1.
allowCSI-SRS-Tx-MulticastDRX-Active Used to control the CSI/SRS transmission during MBS multicast DRX ActiveTime, see TS 38.321 [3].
csi-Mask If set to true, the UE limits CSI reports to the on-duration period of the DRX cycle, see TS 38.321 [3].
dataInactivityTimer Releases the RRC connection upon data inactivity as specified in clause 5.3.8.5 and in TS 38.321 [3]. Value s1 corresponds to 1 second, value s2 corresponds to 2 seconds, and so on.
drx-Config, drx-ConfigExt, drx-ConfigExt2 Used to configure DRX as specified in TS 38.321 [3]. Network only configures <i>drx-ConfigExt</i> or <i>drx-ConfigExt2</i> when <i>drx-Config</i> is configured.
drx-ConfigSecondaryGroup Used to configure DRX related parameters for the second DRX group as specified in TS 38.321 [3]. The network does not configure secondary DRX group with DCP simultaneously nor secondary DRX group with a dormant BWP simultaneously.
drx-ConfigSL Used to configure additional DRX parameters for the UE performing sidelink operation with resource allocation mode 1, as specified in TS 38.321 [3]. Network only configures this field if <i>sl-ScheduledConfig</i> is configured and <i>drx-Config</i> is configured.
drx-LastTransmissionUL If this field is present, the start of the <i>drx-HARQ-RTT-TimerUL</i> is after the last transmission within a bundle, see TS 38.321 [3].
dsr-ConfigToAddModList List of LCG-specific DSR configurations to add or modify.
dsr-ConfigToReleaseList List of LCG-specific DSR configurations to release.
g-RNTI-ConfigToAddModList List of G-RNTI configurations to add or modify. Up to 8 G-RNTIs can be configured in total in this release based on the UE capability.
g-RNTI-ConfigToReleaseList List of G-RNTI configurations to release.
g-CS-RNTI-ConfigToAddModList List of G-CS-RNTI configurations to add or modify. Up to 8 G-CS-RNTIs can be configured in total in this release based on the UE capability.
g-CS-RNTI-ConfigToReleaseList List of G-CS-RNTI configurations to release.
intraCG-Prioritization Used to enable HARQ process ID selection based on LCH-priority for one CG as specified in TS 38.321 [3].
lch-BasedPrioritization If this field is present, the corresponding MAC entity of the UE is configured with prioritization between overlapping grants and between scheduling request and overlapping grants based on LCH priority, see TS 38.321 [3]. The network does not configure <i>lch-BasedPrioritization</i> with <i>enhancedSkipUplinkTxDynamic</i> simultaneously nor <i>lch-BasedPrioritization</i> with <i>enhancedSkipUplinkTxConfigured</i> simultaneously.
posMG-Request Indicates whether UE is configured to send UL MAC CE for Positioning Measurement Gap Activation/Deactivation Request, as specified in TS 38.321 [3].
schedulingRequestID-BFR-SCell Indicates the scheduling request configuration applicable for BFR on SCell, as specified in TS 38.321 [3].

schedulingRequestID-BFR
Indicates the scheduling request configuration (SchedulingRequestConfig) that the UE shall use upon detecting a beam failure on the detection resources configured in <i>failureDetectionSet1</i> of a serving cell while beam failure is not detected on resources configured in <i>failureDetectionSet2</i> of the same serving cell.
schedulingRequestID-BFR2
Indicates the scheduling request configuration (SchedulingRequestConfig) that the UE shall use upon detecting a beam failure on the detection resources configured in <i>failureDetectionSet2</i> of a serving cell while beam failure is not detected on resources configured in <i>failureDetectionSet1</i> of the same serving cell.
schedulingRequestID-LBT-SCell
Indicates the scheduling request configuration applicable for consistent uplink LBT recovery on SCell, as specified in TS 38.321 [3].
schedulingRequestID-PosMG-Request
Indicates the scheduling request configuration applicable for Positioning Measurement Gap Activation/Deactivation Request, as specified in TS 38.321 [3].
skipUplinkTxDynamic, enhancedSkipUplinkTxDynamic, enhancedSkipUplinkTxConfigured
If set to <i>true</i> , the UE skips UL transmissions as described in TS 38.321 [3]. If the UE is configured with <i>enhancedSkipUplinkTxDynamic</i> or <i>enhancedSkipUplinkTxConfigured</i> with value <i>true</i> , REPETITION_NUMBER (as specified in TS 38.321 [3], clause 5.4.2.1) of the corresponding PUSCH transmission of the uplink grant shall be equal to 1. The network does not configure <i>enhancedSkipUplinkTxDynamic</i> or <i>enhancedSkipUplinkTxConfigured</i> with value <i>true</i> together with <i>numberOfSlotsTBoMS-r17</i> .
tag-Config
The field is used to configure parameters for a time-alignment group. The field is not present if any DAPS bearer is configured.
usePreBSR
If set to <i>true</i> , the MAC entity of the IAB-MT may use the Pre-emptive BSR, see TS 38.321 [3].

MBS-RNTI-SpecificConfig field descriptions
drx-ConfigPTM
Used to configure DRX for PTM transmission as specified in TS 38.321 [3].
g-CS-RNTI
Used to scramble the SPS group-common PDSCH and activation/deactivation of SPS group-common PDSCH for one or more MBS multicast services.
g-RNTI
Used to scramble the scheduling and transmission of PTM for one or more MBS multicast services.
groupCommon-RNTI
Used to configure g-RNTI or g-CS-RNTI.
harq-FeedbackEnablerMulticast
Indicates whether the UE shall provide HARQ feedback for MBS multicast. Value <i>dci-enabler</i> means that whether the UE shall provide HARQ feedback for MBS multicast is indicated by DCI as specified in TS 38.213 [13]. Value <i>enabled</i> means the UE shall always provide HARQ feedback for MBS multicast. When the field is absent, the UE behavior is specified in TS 38.213 [13].
harq-FeedbackOptionMulticast
Indicates the feedback mode for MBS multicast dynamically scheduled PDSCH or SPS PDSCH.
mbs-RNTI-SpecificConfigId
An identifier of the RNTI specific configuration for MBS multicast.
pdsch-AggregationFactor
Number of repetitions for dynamically scheduled MBS multicast data (see TS 38.214 [19], clause 5.1.2.1). When the field is absent and <i>groupCommon-RNTI</i> is set to <i>g-RNTI</i> , the UE applies the value 1.

LCG-DSR-Config field descriptions
lcg-Id Identifier of the Logical Channel Group which the DSR configuration refers to.
remainingTimeThreshold Remaining time threshold used for triggering DSR for the logical channels belonging to this Logical Channel Group, as specified in TS 38.321 [3]. Value in number of milliseconds.

Conditional Presence	Explanation
G-RNTI	This field is optionally present, Need S, if groupCommon-RNTI is set to g-RNTI. The field is absent when groupCommon-RNTI is set to g-CS-RNTI.
HARQFeedback	The field is mandatory present when harq-FeedbackEnablerMulticast is present. It is absent otherwise.
MCG-Only	This field is optionally present, Need M, for the MAC-CellGroupConfig of the MCG. It is absent otherwise.
LCH-PrioWithReTxTimer	This field is optionally present, Need R, if lch-BasedPrioritization-r16 is configured in this MAC entity and cg-RetransmissionTimer-r16 is configured for any configured grant configuration associated with this MAC entity. It is absent otherwise, Need R.

MeasConfig

The IE *MeasConfig* specifies measurements to be performed by the UE, and covers intra-frequency, inter-frequency and inter-RAT mobility as well as configuration of measurement gaps.

MeasConfig information element

-- ASN1START -- TAG-MEASCONFIG-START			
MeasConfig ::=	SEQUENCE {		
measObjectToRemoveList	MeasObjectToRemoveList	OPTIONAL,	-- Need N
measObjectToAddModList	MeasObjectToAddModList	OPTIONAL,	-- Need N
reportConfigToRemoveList	ReportConfigToRemoveList	OPTIONAL,	-- Need N
reportConfigToAddModList	ReportConfigToAddModList	OPTIONAL,	-- Need N
measIdToRemoveList	MeasIdToRemoveList	OPTIONAL,	-- Need N
measIdToAddModList	MeasIdToAddModList	OPTIONAL,	-- Need N
s-MeasureConfig	CHOICE {		
ssb-RSRP	RSRP-Range,		
csi-RSRP	RSRP-Range		
}		OPTIONAL,	-- Need M
quantityConfig	QuantityConfig	OPTIONAL,	-- Need M
measGapConfig	MeasGapConfig	OPTIONAL,	-- Need M
measGapSharingConfig	MeasGapSharingConfig	OPTIONAL,	-- Need M
...			
[[			
interFrequencyConfig-NoGap-r16	ENUMERATED {true}	OPTIONAL	-- Need R
]],			
[[			
effectiveMeasWindowConfig-r18	SetupRelease {MeasWindowConfig-r18}	OPTIONAL	-- Need M
]]			

```
}
MeasObjectToRemoveList ::=                SEQUENCE (SIZE (1..maxNrofObjectId)) OF MeasObjectId
MeasIdToRemoveList ::=                    SEQUENCE (SIZE (1..maxNrofMeasId)) OF MeasId
ReportConfigToRemoveList ::=              SEQUENCE (SIZE (1..maxReportConfigId)) OF ReportConfigId

-- TAG-MEASCONFIG-STOP
-- ASN1STOP
```

MeasConfig field descriptions
effectiveMeasWindowConfig Used to setup and release effective measurement window in NR for E-UTRA measurements.
interFrequencyConfig-NoGap-r16 If the field is set to true, UE is configured to perform SSB based inter-frequency measurement without measurement gaps when the inter-frequency SSB is completely contained in the active DL BWP of the UE, as specified in TS 38.133 [14], clause 9.3. Otherwise, the SSB based inter-frequency measurement is performed within measurement gaps. In NR-DC, the field can only be configured in the <i>measConfig</i> associated with MCG, and when configured, it applies to all the inter-frequency measurements configured by MN and SN.
measGapConfig Used to setup and release measurement gaps in NR.
measIdToAddModList List of measurement identities to add and/or modify.
measIdToRemoveList List of measurement identities to remove.
measObjectToAddModList List of measurement objects to add and/or modify.
measObjectToRemoveList List of measurement objects to remove.
reportConfigToAddModList List of measurement reporting configurations to add and/or modify.
reportConfigToRemoveList List of measurement reporting configurations to remove.
s-MeasureConfig Threshold for NR SpCell RSRP measurement controlling when the UE is required to perform measurements on non-serving cells. Choice of <i>ssb-RSRP</i> corresponds to cell RSRP based on SS/PBCH block and choice of <i>csi-RSRP</i> corresponds to cell RSRP of CSI-RS. This field is also applicable to L1 measurements configured with <i>l1m-CSI-ResourceConfigToAddModList-r18</i> . This field is not configured to a UE configured with event(s) related to the L2 U2N Relay UE.
measGapSharingConfig Specifies the measurement gap sharing scheme and controls setup/ release of measurement gap sharing.

– *MeasGapConfig*

The IE *MeasGapConfig* specifies the measurement gap configuration and controls setup/release of measurement gaps.

MeasGapConfig information element

```

-- ASN1START
-- TAG-MEASGAPCONFIG-START

MeasGapConfig ::=
    gapFR2                               SEQUENCE {                               OPTIONAL,    -- Need M
        SetupRelease { GapConfig }
        ...,
        [[
            gapFR1                       SetupRelease { GapConfig }             OPTIONAL,    -- Need M
            gapUE                         SetupRelease { GapConfig }             OPTIONAL,    -- Need M
        ]],
        [[
            gapToAddModList-r17           SEQUENCE (SIZE (1..maxNrofGapId-r17)) OF GapConfig-r17    OPTIONAL,    -- Need N
            gapToReleaseList-r17          SEQUENCE (SIZE (1..maxNrofGapId-r17)) OF MeasGapId-r17    OPTIONAL,    -- Need N
            posMeasGapPreConfigToAddModList-r17 PosMeasGapPreConfigToAddModList-r17    OPTIONAL,    -- Need N
            posMeasGapPreConfigToReleaseList-r17 PosMeasGapPreConfigToReleaseList-r17    OPTIONAL,    -- Need N
        ]]]
    ]

GapConfig ::=
    gapOffset                             INTEGER (0..159),
    mgl                                    ENUMERATED {ms1dot5, ms3, ms3dot5, ms4, ms5dot5, ms6},
    mgrp                                  ENUMERATED {ms20, ms40, ms80, ms160},
    mgta                                  ENUMERATED {ms0, ms0dot25, ms0dot5},
    ...,
    [[
        refServCellIndicator              ENUMERATED {pCell, pSCell, mcg-FR2}      OPTIONAL,    -- Cond NEDCorNRDC
    ]],
    [[
        refFR2ServCellAsyncCA-r16         ServCellIndex                          OPTIONAL,    -- Cond AsyncCA
        mgl-r16                           ENUMERATED {ms10, ms20}                 OPTIONAL,    -- Cond PRS
    ]]]
    ]

GapConfig-r17 ::=
    measGapId-r17                         SEQUENCE {                               OPTIONAL,    -- Cond NEDCorNRDC
        MeasGapId-r17,
        gapType-r17                       ENUMERATED {perUE, perFR1, perFR2},      OPTIONAL,    -- Cond AsyncCA
        gapOffset-r17                     INTEGER (0..159),
        mgl-r17                           ENUMERATED {ms1, ms1dot5, ms2, ms3, ms3dot5, ms4, ms5, ms5dot5, ms6, ms10, ms20},
        mgrp-r17                           ENUMERATED {ms20, ms40, ms80, ms160},
        mgta-r17                           ENUMERATED {ms0, ms0dot25, ms0dot5, ms0dot75},
        refServCellIndicator-r17           ENUMERATED {pCell, pSCell, mcg-FR2}      OPTIONAL,    -- Cond AsyncCA
        refFR2ServCellAsyncCA-r17         ServCellIndex                          OPTIONAL,    -- Need R
        preConfigInd-r17                   ENUMERATED {true}                      OPTIONAL,    -- Need R
        ncsgInd-r17                       ENUMERATED {true}                      OPTIONAL,    -- Need R
        gapAssociationPRS-r17              ENUMERATED {true}                      OPTIONAL,    -- Need R
        gapSharing-r17                    MeasGapSharingScheme                   OPTIONAL,    -- Need R
        gapPriority-r17                    GapPriority-r17                        OPTIONAL,    -- Need R
        ...
    ]

PosMeasGapPreConfigToAddModList-r17 ::= SEQUENCE (SIZE (1..maxNrofPreConfigPosGapId-r17)) OF PosGapConfig-r17

```

PosMeasGapPreConfigToReleaseList-r17 ::= SEQUENCE (SIZE (1..maxNrofPreConfigPosGapId-r17)) OF MeasPosPreConfigGapId-r17

PosGapConfig-r17 ::= SEQUENCE {
 measPosPreConfigGapId-r17 MeasPosPreConfigGapId-r17,
 gapOffset-r17 INTEGER (0..159),
 mgl-r17 ENUMERATED {ms1dot5, ms3, ms3dot5, ms4, ms5dot5, ms6, ms10, ms20},
 mgrp-r17 ENUMERATED {ms20, ms40, ms80, ms160},
 mgta-r17 ENUMERATED {ms0, ms0dot25, ms0dot5},
 gapType-r17 ENUMERATED {perUE, perFR1, perFR2},
 ...
}

MeasPosPreConfigGapId-r17 ::= INTEGER (1..maxNrofPreConfigPosGapId-r17)

-- TAG-MEASGAPCONFIG-STOP
-- ASN1STOP

MeasGapConfig field descriptions
gapAssociationPRS Indicates that PRS measurement is associated with this measurement gap. The network only includes this field for one per-UE gap or for one per-FR gap. If concurrent gap (i.e. one of the gap combination as defined in Table 9.1.8-1 in TS 38.133 [14]) is configured and no gap is configured with this field, the PRS measurement is associated with the gap configured via <i>GapConfig</i> (without suffix), if available. If both per-UE gap and per-FR gap are configured via <i>GapConfig</i> and/or <i>GapConfig-r17</i>, the PRS measurement is always associated with the per-UE gap.
gapFR1 Indicates measurement gap configuration that applies to FR1 only. In (NG)EN-DC, <i>gapFR1</i> cannot be set up by NR RRC (i.e. only LTE RRC can configure FR1 measurement gap). In NE-DC, <i>gapFR1</i> can only be set up by NR RRC (i.e. LTE RRC cannot configure FR1 gap). In NR-DC, <i>gapFR1</i> can only be set up in the <i>measConfig</i> associated with MCG. <i>gapFR1</i> can not be configured together with <i>gapUE</i>. The applicability of the FR1 measurement gap is according to Table 9.1.2-2 and Table 9.1.2-3 in TS 38.133 [14].
gapFR2 Indicates measurement gap configuration applies to FR2 only. In (NG)EN-DC or NE-DC, <i>gapFR2</i> can only be set up by NR RRC (i.e. LTE RRC cannot configure FR2 gap). In NR-DC, <i>gapFR2</i> can only be set up in the <i>measConfig</i> associated with MCG. <i>gapFR2</i> cannot be configured together with <i>gapUE</i>. The applicability of the FR2 measurement gap is according to Table 9.1.2-2 and Table 9.1.2-3 in TS 38.133 [14].
gapOffset Value <i>gapOffset</i> is the gap offset of the gap pattern with MGRP indicated in the field <i>mgrp</i>. The value range is from 0 to <i>mgrp</i>-1. If <i>ncsgInd-r17</i> is present, this offset value refers to the starting point of VIL1 (the visible interruption length before the ML).
gapPriority Indicates the priority of this measurement gap (see TS 38.133 [14]). Value 1 indicates highest priority, value 2 indicates second level priority, and so on.
gapSharing Indicates the measurement gap sharing scheme that applies to this <i>GapConfig</i>. For applicability of the different gap sharing schemes, see TS 38.133 [14]. Value <i>scheme00</i> corresponds to scheme "00", value <i>scheme01</i> corresponds to scheme "01", and so on.
gapToAddModList A list of of measurement gap configuration to be added or modified. If more than one measurement gap is configured (i.e. concurrent measurement gap as specified in TS 38.133[14], clause 9.1.8 for TN or clause 9.1C.8 for NTN), the maximum number of configured measurement gap is limited by the gap combinations defined in Table 9.1.8-1 in TS 38.133 [14] for TN. For NTN the maximum number of configured measurement gap is limited by UE capability indicated in <i>parallelMeasurementGap</i>. In this version of the specification, the network configures this field only in NR standalone. This field is used only for a UE that supports pre-configured measurement gap, concurrent measurement gap, or NCSG. In this version of the specification, the network does not configure concurrent measurement gap together with preconfigured measurement gap for positioning. For the UE supporting the capability of <i>musim-GapPriorityPreference</i>, the network can configure concurrent measurement gap together with MUSIM gap. Otherwise, the network does not configure concurrent measurement gap together with MUSIM gap.
gapToReleaseList A list of measurement gap configuration to be released.
gapType Indicates the type of this measurement gap. Value <i>perUE</i> indicates that it is a per UE measurement gap, value <i>perFR1</i> indicates that it is an FR1 measurement gap, and value <i>perFR2</i> indicates that it is an FR2 measurement gap.
gapUE Indicates measurement gap configuration that applies to all frequencies (FR1 and FR2). In (NG)EN-DC, <i>gapUE</i> cannot be set up by NR RRC (i.e. only LTE RRC can configure per UE measurement gap). In NE-DC, <i>gapUE</i> can only be set up by NR RRC (i.e. LTE RRC cannot configure per UE gap). In NR-DC, <i>gapUE</i> can only be set up in the <i>measConfig</i> associated with MCG. If <i>gapUE</i> is configured, then neither <i>gapFR1</i> nor <i>gapFR2</i> can be configured. For TN, the applicability of the per UE measurement gap is according to Table 9.1.2-2 and Table 9.1.2-3 for non-RedCap UEs, and Table 9.1A.2-2 for RedCap UEs in TS 38.133 [14]. For NTN, the applicability of per UE measurement gap is according to subclause 9.1C.2 in TS 38.133 [14].
measGapId The ID of this measurement gap configuration.

<i>mgl</i>	Value <i>mgl</i> is the measurement gap length in ms of the measurement gap. If <i>ncsglnd-r17</i> is not present, the measurement gap length is according to Table 9.1.2-1 for non-RedCap UEs in TN, Table 9.1A.2-1 for RedCap UEs in TN, and Table 9.1C.2-1 for NTN in TS 38.133 [14]. If <i>ncsglnd-r17</i> is present, this field indicates the measurement length (ML) in NCSG pattern and is configured according to Table 9.1.9.3-1 in TS 38.133 [14]. Value <i>ms1dot5</i> corresponds to 1.5 ms, <i>ms3</i> corresponds to 3 ms and so on. If <i>mgl-r16</i> is present, UE shall ignore the <i>mgl</i> (without suffix). Value <i>ms1</i> , <i>ms2</i> , and <i>ms5</i> can only be configured if <i>ncsglnd</i> is present.
<i>mgrp</i>	If <i>ncsglnd-r17</i> is not present, the <i>mgrp</i> field indicates the measurement gap repetition period in (ms) of the measurement gap according to Table 9.1.2-1 for non-RedCap UEs in TN, Table 9.1A.2-1 for RedCap UEs in TN, and Table 9.1C.2-1 for NTN in TS 38.133 [14]. If <i>ncsglnd-r17</i> is present, the <i>mgrp</i> field indicates the Visible Interruption Repetition Period (VIRP) of NCSG pattern and is configured according to Table 9.1.9.3-1 in TS 38.133 [14].
<i>mgta</i>	Value <i>mgta</i> is the measurement gap timing advance in ms. The applicability of the measurement gap timing advance is according to clause 9.1.2 for non-RedCap UEs in TN, clause 9.1A.2 for RedCap UEs in TN, and clause 9.1C.2 for NTN of TS 38.133 [14], or according to clause 9.1.9 of TS 38.133 [14] if <i>ncsglnd</i> is present. Value <i>ms0</i> corresponds to 0 ms, <i>ms0dot25</i> corresponds to 0.25 ms, <i>ms0dot5</i> corresponds to 0.5 ms and <i>ms0dot75</i> corresponds to 0.75 ms. For FR2, the network only configures 0 ms and 0.25 ms if <i>ncsglnd</i> is not present. If <i>ncsglnd</i> is present, the network only configures 0ms for per-UE NCSG and FR1 NCSG and only configures 0ms or 0.75ms for FR2 NCSG. Value <i>ms0dot75</i> can only be configured if <i>ncsglnd</i> is present.
<i>ncsglnd</i>	Indicates that the measurement gap is a NCSG as specified in 38.133 [14].
<i>posMeasGapPreConfigToAddModList</i>	List of preconfigured measurement gap for positioning to add and/or modify. All the gaps configured are associated with the measurement of PRS for RSTD, UE-RxTx Time Difference, PRS-RSRP and PRS-RSRPP as defined in TS 38.215 [9]. In this version of the specification, the network does not configure preconfigured measurement gap for positioning together with concurrent measurement gap or MUSIM gap.
<i>posMeasGapPreConfigToReleaseList</i>	List of preconfigured measurement gap for positioning to release.
<i>preConfigInd</i>	Indicates whether the measurement gap is a pre-configured measurement gap.
<i>refFR2ServCellAsyncCA</i>	Indicates the FR2 serving cell identifier whose SFN and subframe is used for FR2 gap calculation for this gap pattern with asynchronous CA involving FR2 carrier(s).
<i>refServCellIndicator</i>	Indicates the serving cell whose SFN and subframe are used for gap calculation for this gap pattern. Value pCell corresponds to the PCell, pSCell corresponds to the PSCell, and mcg-FR2 corresponds to a serving cell on FR2 frequency in MCG.

Conditional Presence	Explanation
<i>AsyncCA</i>	This field is mandatory present when configuring and reconfiguring FR2 gap pattern to UE in: - (NG)EN-DC or NR SA with asynchronous CA involving FR2 carrier(s); - NE-DC or NR-DC with asynchronous CA involving FR2 carrier(s), if the field <i>refServCellIndicator</i> is set to <i>mcg-FR2</i>. Otherwise, it is absent, Need R.
<i>NEDCorNRDC</i>	This field is mandatory present when configuring and reconfiguring gap pattern to UE in NE-DC or NR-DC. Otherwise, it is absent, Need R.
<i>PRS</i>	This field is optionally present, Need R, when configuring gap pattern to UE for measurements of DL-PRS configured via LPP (TS 37.355 [49]). Otherwise, it is absent.

– *MeasGapId*

The IE *MeasGapId* used to identify a per UE or per FR measurement gap configuration.

***MeasGapId* information element**

```
-- ASN1START
-- TAG-MEASGAPID-START

MeasGapId-r17 ::=                               INTEGER (1..maxNrofGapId-r17)

-- TAG-MEASGAPID-STOP
-- ASN1STOP
```

— *MeasGapSharingConfig*

The IE *MeasGapSharingConfig* specifies the measurement gap sharing scheme and controls setup/ release of measurement gap sharing.

***MeasGapSharingConfig* information element**

```
-- ASN1START
-- TAG-MEASGAPSHARINGCONFIG-START

MeasGapSharingConfig ::=                     SEQUENCE {
    gapSharingFR2                        SetupRelease { MeasGapSharingScheme }    OPTIONAL,    -- Need M
    ...,
    [[
        gapSharingFR1                    SetupRelease { MeasGapSharingScheme }    OPTIONAL,    --Need M
        gapSharingUE                      SetupRelease { MeasGapSharingScheme }    OPTIONAL    --Need M
    ]]
}

MeasGapSharingScheme ::=                     ENUMERATED {scheme00, scheme01, scheme10, scheme11}

-- TAG-MEASGAPSHARINGCONFIG-STOP
-- ASN1STOP
```

MeasGapSharingConfig field descriptions
gapSharingFR1 Indicates the measurement gap sharing scheme that applies to the gap set via <i>gapFR1</i>. In (NG)EN-DC, <i>gapSharingFR1</i> cannot be set up by NR RRC (i.e. only LTE RRC can configure FR1 gap sharing). In NE-DC, <i>gapSharingFR1</i> can only be set up by NR RRC (i.e. LTE RRC cannot configure FR1 gap sharing). In NR-DC, <i>gapSharingFR1</i> can only be set up in the <i>measConfig</i> associated with MCG. <i>gapSharingFR1</i> can not be configured together with <i>gapSharingUE</i>. For the applicability of the different gap sharing schemes, see TS 38.133 [14]. Value <i>scheme00</i> corresponds to scheme "00", value <i>scheme01</i> corresponds to scheme "01", and so on.
gapSharingFR2 Indicates the measurement gap sharing scheme that applies to the gap set via <i>gapFR2</i>. In (NG)EN-DC or NE-DC, <i>gapSharingFR2</i> can only be set up by NR RRC (i.e. LTE RRC cannot configure FR2 gap sharing). In NR-DC, <i>gapSharingFR2</i> can only be set up by MCG in the <i>measConfig</i> associated with MCG. <i>gapSharingFR2</i> cannot be configured together with <i>gapSharingUE</i>. For applicability of the different gap sharing schemes, see TS 38.133 [14]. Value <i>scheme00</i> corresponds to scheme "00", value <i>scheme01</i> corresponds to scheme "01", and so on.
gapSharingUE Indicates the measurement gap sharing scheme that applies to the gap set via <i>gapUE</i>. In (NG)EN-DC, <i>gapSharingUE</i> cannot be set up by NR RRC (i.e. only LTE RRC can configure per UE gap sharing). In NE-DC, <i>gapSharingUE</i> can only be set up by NR RRC (i.e. LTE RRC cannot configure per UE gap sharing). In NR-DC, <i>gapSharingUE</i> can only be set up in the <i>measConfig</i> associated with MCG. If <i>gapSharingUE</i> is configured, then neither <i>gapSharingFR1</i> nor <i>gapSharingFR2</i> can be configured. For the applicability of the different gap sharing schemes, see TS 38.133 [14]. Value <i>scheme00</i> corresponds to scheme "00", value <i>scheme01</i> corresponds to scheme "01", and so on.

–
 MeasId

The IE *MeasId* is used to identify a measurement configuration, i.e., linking of a measurement object and a reporting configuration.

MeasId information element

```

-- ASN1START
-- TAG-MEASID-START

MeasId ::=
    INTEGER (1..maxNrofMeasId)

-- TAG-MEASID-STOP
-- ASN1STOP

```

–
 MeasIdleConfig

The IE *MeasIdleConfig* is used to convey information to UE about measurements requested to be done while in RRC_IDLE or RRC_INACTIVE.

MeasIdleConfig information element

```

-- ASN1START
-- TAG-MEASIDLECONFIG-START

MeasIdleConfigSIB-r16 ::= SEQUENCE {
    measIdleCarrierListNR-r16      SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasIdleCarrierNR-r16      OPTIONAL, -- Need S
    measIdleCarrierListEUTRA-r16   SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasIdleCarrierEUTRA-r16   OPTIONAL, -- Need S
    ...
}

```

```

    measIdleCarrierListNR-LessThan5MHz-r18    SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasIdleCarrierNR-r16    OPTIONAL,    -- Cond LessThan5MHz
    measReselectionCarrierListNR-r18          SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasReselectionCarrierNR-r18    OPTIONAL,    -- Need S
    measReselectionCarrierListNR-LessThan5MHz-r18    SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasReselectionCarrierNR-r18    OPTIONAL,    -- Cond
LessThan5MHz
    measIdleValidityDuration-r18              MeasurementValidityDuration-r18    OPTIONAL,    -- Need S
    measReselectionValidityDuration-r18      MeasurementValidityDuration-r18    OPTIONAL,    -- Need S
  ]]
}

MeasIdleConfigDedicated-r16 ::= SEQUENCE {
    measIdleCarrierListNR-r16                SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasIdleCarrierNR-r16    OPTIONAL,    -- Need N
    measIdleCarrierListEUTRA-r16              SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasIdleCarrierEUTRA-r16    OPTIONAL,    -- Need N
    measIdleDuration-r16                     ENUMERATED{sec10, sec30, sec60, sec120, sec180, sec240, sec300, spare},
    validityAreaList-r16                    ValidityAreaList-r16                OPTIONAL,    -- Need N
    ...,
    [[
    measReselectionCarrierListNR-r18          SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasReselectionCarrierNR-r18    OPTIONAL,    -- Need S
    measIdleValidityDuration-r18              MeasurementValidityDuration-r18    OPTIONAL,    -- Need S
    measReselectionValidityDuration-r18      MeasurementValidityDuration-r18    OPTIONAL,    -- Need S
  ]]
}

ValidityAreaList-r16 ::= SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF ValidityArea-r16

ValidityArea-r16 ::=
    SEQUENCE {
        carrierFreq-r16                      ARFCN-ValueNR,
        validityCellList-r16                 ValidityCellList
    }
OPTIONAL -- Need N

ValidityCellList ::= SEQUENCE (SIZE (1.. maxCellMeasIdle-r16)) OF PCI-Range

MeasIdleCarrierNR-r16 ::=
    SEQUENCE {
        carrierFreq-r16                      ARFCN-ValueNR,
        ssbSubcarrierSpacing-r16             SubcarrierSpacing,
        frequencyBandList                    MultiFrequencyBandListNR
        measCellListNR-r16                   CellListNR-r16
        reportQuantities-r16                 ENUMERATED {rsrp, rsrq, both},
        qualityThreshold-r16                 SEQUENCE {
            idlerSRP-Threshold-NR-r16         RSRP-Range
            idlerRSRQ-Threshold-NR-r16        RSRQ-Range
        }
        ssb-MeasConfig-r16                   SEQUENCE {
            nrofSS-BlocksToAverage-r16        INTEGER (2..maxNrofSS-BlocksToAverage)
            absThreshSS-BlocksConsolidation-r16 ThresholdNR
            smtc-r16                          SSB-MTC
            ssb-ToMeasure-r16                 SSB-ToMeasure
            deriveSSB-IndexFromCell-r16       BOOLEAN,
            ss-RSSI-Measurement-r16           SS-RSSI-Measurement
        }
        beamMeasConfigIdle-r16               BeamMeasConfigIdle-NR-r16
        ...
    }
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need R

MeasIdleCarrierEUTRA-r16 ::= SEQUENCE {

```

```

    carrierFreqEUTRA-r16          ARFCN-ValueEUTRA,
    allowedMeasBandwidth-r16      EUTRA-AllowedMeasBandwidth,
    measCellListEUTRA-r16         CellListEUTRA-r16
    reportQuantitiesEUTRA-r16     ENUMERATED {rsrp, rsrq, both},
    qualityThresholdEUTRA-r16     SEQUENCE {
        idlerSRP-Threshold-EUTRA-r16  RSRP-RangeEUTRA
        idlerSRQ-Threshold-EUTRA-r16  RSRQ-RangeEUTRA-r16
    }
    ...
}

MeasReselectionCarrierNR-r18 ::= SEQUENCE {
    carrierFreq-r18          ARFCN-ValueNR,
    ...
}

CellListNR-r16 ::= SEQUENCE (SIZE (1..maxCellMeasIdle-r16)) OF PCI-Range

CellListEUTRA-r16 ::= SEQUENCE (SIZE (1..maxCellMeasIdle-r16)) OF EUTRA-PhysCellIdRange

BeamMeasConfigIdle-NR-r16 ::= SEQUENCE {
    reportQuantityRS-Indexes-r16     ENUMERATED {rsrp, rsrq, both},
    maxNrofRS-IndexesToReport-r16    INTEGER (1.. maxNrofIndexesToReport),
    includeBeamMeasurements-r16      BOOLEAN
}

RSRQ-RangeEUTRA-r16 ::= INTEGER (-30..46)

-- TAG-MEASIDLECONFIG-STOP
-- ASN1STOP

```

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need S

<i>MeasIdleConfig</i> field descriptions
<i>absThreshSS-BlocksConsolidation</i> Threshold for consolidation of L1 measurements per RS index.
<i>beamMeasConfigIdle</i> Indicates the beam level measurement configuration.
<i>carrierFreq</i> Indicates the NR carrier frequency to be used for measurements during RRC_IDLE or RRC_INACTIVE.
<i>carrierFreqEUTRA</i> Indicates the E-UTRA carrier frequency to be used for measurements during RRC_IDLE or RRC_INACTIVE.
<i>deriveSSB-IndexFromCell</i> This field indicates whether the UE may use the timing of any detected cell on that frequency to derive the SSB index of all neighbour cells on that frequency. If this field is set to true, the UE assumes SFN and frame boundary alignment across cells on the neighbor frequency as specified in TS 38.133 [14].
<i>frequencyBandList</i> Indicates the list of frequency bands for which the NR idle/inactive measurement parameters apply. The UE shall select the first listed band which it supports in the frequencyBandList field to represent the NR neighbour carrier frequency.
<i>includeBeamMeasurements</i> Indicates whether or not the UE shall include beam measurements in the NR idle/inactive measurement results.
<i>maxNrofRS-IndexesToReport</i> Max number of beam indices to include in the idle/inactive measurement result.
<i>measCellListEUTRA</i> Indicates the list of E-UTRA cells which the UE is requested to measure and report for idle/inactive measurements.
<i>measCellListNR</i> Indicates the list of NR cells which the UE is requested to measure and report for idle/inactive measurements.
<i>measIdleCarrierListEUTRA</i> Indicates the E-UTRA carriers to be measured during RRC_IDLE or RRC_INACTIVE.
<i>measIdleCarrierListNR</i> Indicates the NR carriers to be measured during RRC_IDLE or RRC_INACTIVE.
<i>measIdleCarrierListNR-LessThan5MHz</i> Indicates the NR carriers to be measured during RRC_IDLE or RRC_INACTIVE for the cell(s) supporting 12 PRB, 15 PRB or 20 PRB transmission bandwidth configuration as defined in TS 38.101-1 [15], TS 38.211 [16] and TS 38.213 [13]. Total number of <i>MeasIdleCarrierNR</i> included in <i>measIdleCarrierListNR</i> and <i>measIdleCarrierListNR-LessThan5MHz</i> does not exceed <i>maxFreqIdle-r16</i> .
<i>measIdleDuration</i> Indicates the duration for performing idle/inactive measurements while in RRC_IDLE or RRC_INACTIVE. Value sec10 correspond to 10 seconds, value sec30 to 30 seconds and so on.
<i>measIdleValidityDuration, measReselectionValidityDuration</i> Indicates time values for UE to determine validity of reported idle/inactive and reselection measurements as defined in TS 38.133[14]. Value s5 correspond to 5 seconds, value s10 correspond to 10 seconds and so on.
<i>measReselectionCarrierListNR</i> Indicates the NR carriers for reselection measurement reporting.
<i>measReselectionCarrierListNR-LessThan5MHz</i> Indicates the NR carriers for reselection measurement reporting for the cell(s) supporting 12 PRB, 15 PRB or 20 PRB transmission bandwidth configuration as defined in TS 38.101-1 [15], TS 38.211 [16] and TS 38.213 [13]. Total number of <i>MeasReselectionCarrierNR</i> included in <i>measReselectionCarrierListNR</i> and <i>measReselectionCarrierListNR-LessThan5MHz</i> does not exceed <i>maxFreqIdle-r16</i> .
<i>nrofSS-BlocksToAverage</i> Number of SS blocks to average for cell measurement derivation.

qualityThreshold Indicates the quality thresholds for reporting the measured cells for idle/inactive NR measurements.
qualityThresholdEUTRA Indicates the quality thresholds for reporting the measured cells for idle/inactive E-UTRA measurements.
reportQuantities Indicates which measurement quantities UE is requested to report in the idle/inactive measurement report.
reportQuantitiesEUTRA Indicates which E-UTRA measurement quantities the UE is requested to report in the idle/inactive measurement report.
reportQuantityRS-Indexes Indicates which measurement information per beam index the UE shall include in the NR idle/inactive measurement results.
smtc Indicates the measurement timing configuration for inter-frequency measurement. If this field is absent in <i>VarMeasIdleConfig</i> , the UE assumes that SSB periodicity is 5 ms in this frequency.
ssbSubcarrierSpacing Indicates subcarrier spacing of SSB. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1: 120 or 240 kHz FR2-2: 120, 480, or 960 kHz
ssb-ToMeasure The set of SS blocks to be measured within the SMTC measurement duration (see TS 38.215 [9]). When the field is absent in <i>VarMeasIdleConfig</i> , the UE measures on all SS-blocks.
ss-RSSI-Measurement Indicates the SSB-based RSSI measurement configuration. If the field is absent in <i>VarMeasIdleConfig</i> , the UE behaviour is defined in TS 38.215 [89], clause 5.1.3.
validityAreaList Indicates the list of frequencies and optionally, for each frequency, a list of cells within which the UE is required to perform measurements while in RRC_IDLE and RRC_INACTIVE.

Conditional Presence	Explanation
<i>LessThan5MHz</i>	The field is mandatory present if the <i>carrierBandwidth</i> in SIB1 indicates UL or DL transmission bandwidth other than 15 PRB and the corresponding neighbour cell(s) support(s) 12 PRB, 15 PRB or 20 PRB transmission bandwidth configuration as defined in TS 38.101-1 [15], TS 38.211 [16] and TS 38.213 [13]. Otherwise, the field is optional, Need R.

– *MeasIdToAddModList*

The IE *MeasIdToAddModList* concerns a list of measurement identities to add or modify, with for each entry the *measId*, the associated *measObjectId* and the associated *reportConfigId*.

MeasIdToAddModList information element

```
-- ASN1START
-- TAG-MEASIDTOADDMODLIST-START

MeasIdToAddModList ::=
    SEQUENCE (SIZE (1..maxNrofMeasId)) OF MeasIdToAddMod
```

```

MeasIdToAddMod ::=
    measId
    measObjectId
    reportConfigId
}

-- TAG-MEASIDTOADDMODLIST-STOP
-- ASN1STOP

```

```

SEQUENCE {
    MeasId,
    MeasObjectId,
    ReportConfigId
}

```

– *MeasObjectCLI*

The IE *MeasObjectCLI* specifies information applicable for SRS-RSRP measurements and/or CLI-RSSI measurements.

MeasObjectCLI information element

```

-- ASN1START
-- TAG-MEASOBJECTCLI-START

```

```

MeasObjectCLI-r16 ::=
    cli-ResourceConfig-r16
    ...
}

```

```

SEQUENCE {
    CLI-ResourceConfig-r16,

```

```

CLI-ResourceConfig-r16 ::=
    srs-ResourceConfig-r16
    rssi-ResourceConfig-r16
}

```

```

SEQUENCE {
    SetupRelease { SRS-ResourceListConfigCLI-r16 } OPTIONAL, -- Need M
    SetupRelease { RSSI-ResourceListConfigCLI-r16 } OPTIONAL -- Need M
}

```

```

SRS-ResourceListConfigCLI-r16 ::= SEQUENCE (SIZE (1.. maxNrofCLI-SRS-Resources-r16)) OF SRS-ResourceConfigCLI-r16

```

```

RSSI-ResourceListConfigCLI-r16 ::= SEQUENCE (SIZE (1.. maxNrofCLI-RSSI-Resources-r16)) OF RSSI-ResourceConfigCLI-r16

```

```

SRS-ResourceConfigCLI-r16 ::=
    srs-Resource-r16
    srs-SCS-r16
    refServCellIndex-r16
    refBWP-r16
    ...
}

```

```

SEQUENCE {
    SRS-Resource,
    SubcarrierSpacing,
    ServCellIndex OPTIONAL, -- Need S
    BWP-Id,

```

```

RSSI-ResourceConfigCLI-r16 ::=
    rssi-ResourceId-r16
    rssi-SCS-r16
    startPRB-r16
    nrofPRBs-r16
    startPosition-r16
    nrofSymbols-r16
    rssi-PeriodicityAndOffset-r16
    refServCellIndex-r16
    ...
}

```

```

SEQUENCE {
    RSSI-ResourceId-r16,
    SubcarrierSpacing,
    INTEGER (0..2169),
    INTEGER (4..maxNrofPhysicalResourceBlocksPlus1),
    INTEGER (0..13),
    INTEGER (1..14),
    RSSI-PeriodicityAndOffset-r16,
    ServCellIndex OPTIONAL, -- Need S

```



```
}
RSSI-ResourceId-r16 ::=                INTEGER (0.. maxNrofCLI-RSSI-Resources-1-r16)
RSSI-PeriodicityAndOffset-r16 ::= CHOICE {
    sl10                INTEGER(0..9),
    sl20                INTEGER(0..19),
    sl40                INTEGER(0..39),
    sl80                INTEGER(0..79),
    sl160               INTEGER(0..159),
    sl320               INTEGER(0..319),
    sl640               INTEGER(0..639),
    ...
}
-- TAG-MEASOBJECTCLI-STOP
-- ASN1STOP
```

CLI-ResourceConfig field descriptions
srs-ResourceConfig SRS resources to be used for CLI measurements.
rssI-ResourceConfig CLI-RSSI resources to be used for CLI measurements.

MeasObjectCLI field descriptions
cli-ResourceConfig SRS and/or CLI-RSSI resource configuration for CLI measurement.

SRS-ResourceConfigCLI field descriptions
refBWP DL BWP id that is used to derive the reference point of the SRS resource (see TS 38.211[16], clause 6.4.1.4.3)
refServCellIndex The index of the reference serving cell that the <i>refBWP</i> belongs to. If this field is absent, the reference serving cell is PCell.
srs-SCS Subcarrier spacing for SRS. Only the following values are applicable depending on the used frequency: FR1: 15, 30, or 60 kHz FR2-1: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz

RSSI-ResourceConfigCLI field descriptions
nrofPRBs Allowed size of the measurement BW. Only multiples of 4 are allowed. The smallest configurable number is the minimum of 4 and the width of the active DL BWP. If the configured value is larger than the width of the active DL BWP, the UE shall assume that the actual CLI-RSSI resource bandwidth is within the active DL BWP.
nrofSymbols Within a slot that is configured for CLI-RSSI measurement (see slotConfiguration), the UE measures the RSSI from <i>startPosition</i> to <i>startPosition</i> + <i>nrofSymbols</i> - 1. The configured CLI-RSSI resource does not exceed the slot boundary of the reference SCS. If the SCS of configured DL BWP(s) is larger than the reference SCS, network configures <i>startPosition</i> and <i>nrofSymbols</i> such that the configured CLI-RSSI resource not to exceed the slot boundary corresponding to the configured BWP SCS. If the reference SCS is larger than SCS of configured DL BWP(s), network ensures <i>startPosition</i> and <i>nrofSymbols</i> are integer multiple of reference SCS divided by configured BWP SCS.
refServCellIndex The index of the reference serving cell. Frequency reference point of the RSSI resource is subcarrier 0 of CRB0 of the reference serving cell. If this field is absent, the reference serving cell is PCell.
rsssi-PeriodicityAndOffset Periodicity and slot offset for this CLI-RSSI resource. All values are in "number of slots". Value <i>s1</i> corresponds to a periodicity of 1 slot, value <i>s1</i>/2 corresponds to a periodicity of 2 slots, and so on. For each periodicity the corresponding offset is given in number of slots.
rsssi-SCS Reference subcarrier spacing for CLI-RSSI measurement. Only the following values are applicable depending on the used frequency: FR1: 15, 30, or 60 kHz FR2-1: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz UE performs CLI-RSSI measurement with the SCS of the active bandwidth part within the configured CLI-RSSI resource in the active BWP regardless of the reference SCS of the measurement resource.
startPosition OFDM symbol location of the CLI-RSSI resource within a slot.
startPRB Starting PRB index of the measurement bandwidth. For the case where the reference subcarrier spacing is smaller than subcarrier spacing of active DL BWP(s), network configures startPRB and nrofPRBs are as a multiple of active BW SCS divided by reference SCS.

—
MeasObjectEUTRA

The IE *MeasObjectEUTRA* specifies information applicable for E-UTRA cells.

MeasObjectEUTRA information element

-- ASN1START
-- TAG-MEASOBJECTEUTRA-START

MeasObjectEUTRA ::=	SEQUENCE {			
carrierFreq	ARFCN-ValueEUTRA,			
allowedMeasBandwidth	EUTRA-AllowedMeasBandwidth,			
cellsToRemoveListEUTRAN	EUTRA-CellIndexList	OPTIONAL,	--	Need N
cellsToAddModListEUTRAN	SEQUENCE (SIZE (1..maxCellMeasEUTRA)) OF EUTRA-Cell	OPTIONAL,	--	Need N
excludedCellsToRemoveListEUTRAN	EUTRA-CellIndexList	OPTIONAL,	--	Need N
excludedCellsToAddModListEUTRAN	SEQUENCE (SIZE (1..maxCellMeasEUTRA)) OF EUTRA-ExcludedCell	OPTIONAL,	--	Need N

eutra-PresenceAntennaPort1
eutra-Q-OffsetRange
widebandRSRQ-Meas
...
[[
 associatedMeasGap-r17
]],
[[
 measSequence-r18
]]
}

EUTRA-CellIndexList ::=

EUTRA-CellIndex ::=

EUTRA-Cell ::=

EUTRA-ExcludedCell ::=

-- TAG-MEASOBJECTEUTRA-STOP
-- ASN1STOP

EUTRA-PresenceAntennaPort1,
EUTRA-Q-OffsetRange
BOOLEAN,

MeasGapId-r17

MeasSequence-r18

SEQUENCE (SIZE (1..maxCellMeasEUTRA)) OF EUTRA-CellIndex

INTEGER (1..maxCellMeasEUTRA)

SEQUENCE {
 EUTRA-CellIndex,
 EUTRA-PhysCellId,
 EUTRA-Q-OffsetRange

SEQUENCE {
 EUTRA-CellIndex,
 EUTRA-PhysCellIdRange

OPTIONAL, -- Need R

OPTIONAL -- Need R

OPTIONAL -- Need R

EUTRAN-ExcludedCell field descriptions	
cellIndexEUTRA	Entry index in the cell list.
physicalCellIdRange	Physical cell identity or a range of physical cell identities.

EUTRAN-Cell field descriptions	
physicalCellId	Physical cell identity of a cell in the cell list.
cellIndividualOffset	Cell individual offset applicable to a specific cell. Value <i>dB-24</i> corresponds to -24 dB, <i>dB-22</i> corresponds to -22 dB and so on.

MeasObjectEUTRA field descriptions
allowedMeasBandwidth The maximum allowed measurement bandwidth on a carrier frequency as defined by the parameter Transmission Bandwidth Configuration "N _{RB} " TS 36.104 [33].
associatedMeasGap Indicates the associated measurement gap for measuring this EUTRA frequency. If this field is absent, the associated measurement gap is the gap configured via <i>gapFR1</i> or <i>gapUE</i> .
carrierFreq Identifies E-UTRA carrier frequency for which this configuration is valid. Network does not configure more than one <i>MeasObjectEUTRA</i> for the same physical frequency, regardless of the E-ARFCN used to indicate this.
cellsToAddModListEUTRA List of cells to add/ modify in the cell list.
cellsToRemoveListEUTRA List of cells to remove from the cell list.
eutra-PresenceAntennaPort1 When set to <i>true</i> , the UE may assume that at least two cell-specific antenna ports are used in all neighbouring cells.
eutra-Q-OffsetRange Used to indicate a cell, or frequency specific offset to be applied when evaluating triggering conditions for measurement reporting. The value is in dB. Value <i>dB-24</i> corresponds to -24 dB, value <i>dB-22</i> corresponds to -22 dB and so on.
excludedCellsToAddModListEUTRA List of cells to add/ modify in the exclude-list of cells.
excludedCellsToRemoveListEUTRA List of cells to remove from the exclude-list of cells.
measSequence Indicates the recommended sequence for intra/inter-RAT intra/inter-frequency measurement. Value 1 means the corresponding frequency is measured firstly. Value 2 means the corresponding frequency is measured secondly and so on. If more than one frequency is configured with the same value, it means no recommended sequence among these frequencies. If not configured, it means there is no recommended sequence for the corresponding frequency. This field is only configured for NR standalone or if the <i>measObject</i> is associated to the MCG.
widebandRSRQ-Meas If set to <i>true</i> , the UE shall, when performing RSRQ measurements, use a wider bandwidth in accordance with TS 36.133 [40]. The network may set the field to <i>true</i> if the measurement bandwidth indicated by <i>allowedMeasBandwidth</i> is 50 resource blocks or larger; otherwise the network sets this field to <i>false</i> .

– MeasObjectId

The IE *MeasObjectId* used to identify a measurement object configuration.

MeasObjectId information element

```

-- ASN1START
-- TAG-MEASOBJECTID-START

MeasObjectId ::=
-- TAG-MEASOBJECTID-STOP
-- ASN1STOP

```

INTEGER (1..maxNrofObjectId)

– *MeasObjectNR*

The IE *MeasObjectNR* specifies information applicable for SS/PBCH block(s) intra/inter-frequency measurements and/or CSI-RS intra/inter-frequency measurements.

MeasObjectNR information element

-- ASN1START			
-- TAG-MEASOBJECTNR-START			
MeasObjectNR ::=	SEQUENCE {		
ssbFrequency	ARFCN-ValueNR	OPTIONAL,	-- Cond SSBorAssociatedSSB
ssbSubcarrierSpacing	SubcarrierSpacing	OPTIONAL,	-- Cond SSBorAssociatedSSB
smtc1	SSB-MTC	OPTIONAL,	-- Cond SSBorAssociatedSSB
smtc2	SSB-MTC2	OPTIONAL,	-- Cond IntraFreqConnected
refFreqCSI-RS	ARFCN-ValueNR	OPTIONAL,	-- Cond CSI-RS
referenceSignalConfig	ReferenceSignalConfig,		
absThreshSS-BlocksConsolidation	ThresholdNR	OPTIONAL,	-- Need R
absThreshCSI-RS-Consolidation	ThresholdNR	OPTIONAL,	-- Need R
nrofSS-BlocksToAverage	INTEGER (2..maxNrofSS-BlocksToAverage)	OPTIONAL,	-- Need R
nrofCSI-RS-ResourcesToAverage	INTEGER (2..maxNrofCSI-RS-ResourcesToAverage)	OPTIONAL,	-- Need R
quantityConfigIndex	INTEGER (1..maxNrofQuantityConfig),		
offsetM0	Q-OffsetRangeList,		
cellsToRemoveList	PCI-List	OPTIONAL,	-- Need N
cellsToAddModList	CellsToAddModList	OPTIONAL,	-- Need N
excludedCellsToRemoveList	PCI-RangeIndexList	OPTIONAL,	-- Need N
excludedCellsToAddModList	SEQUENCE (SIZE (1..maxNrofPCI-Ranges)) OF PCI-RangeElement	OPTIONAL,	-- Need N
allowedCellsToRemoveList	PCI-RangeIndexList	OPTIONAL,	-- Need N
allowedCellsToAddModList	SEQUENCE (SIZE (1..maxNrofPCI-Ranges)) OF PCI-RangeElement	OPTIONAL,	-- Need N
...			
[[			
freqBandIndicatorNR	FreqBandIndicatorNR	OPTIONAL,	-- Need R
measCycleSCell	ENUMERATED {sf160, sf256, sf320, sf512, sf640, sf1024, sf1280}	OPTIONAL	-- Need R
]],			
[[			
smtc3list-r16	SSB-MTC3List-r16	OPTIONAL,	-- Need R
rmtc-Config-r16	SetupRelease {RMTc-Config-r16}	OPTIONAL,	-- Need M
t312-r16	SetupRelease { T312-r16 }	OPTIONAL	-- Need M
]],			
[[			
associatedMeasGapSSB-r17	MeasGapId-r17	OPTIONAL,	-- Need R
associatedMeasGapCSIRS-r17	MeasGapId-r17	OPTIONAL,	-- Need R
smtc4list-r17	SSB-MTC4List-r17	OPTIONAL,	-- Need R
measCyclePSCell-r17	ENUMERATED {ms160, ms256, ms320, ms512, ms640, ms1024, ms1280, spare1}	OPTIONAL,	-- Cond SCG
]]		OPTIONAL	-- Need N
cellsToAddModListExt-v1710	CellsToAddModListExt-v1710		
]],			
[[			
associatedMeasGapSSB2-v1720	MeasGapId-r17	OPTIONAL,	-- Cond AssociatedGapSSB
associatedMeasGapCSIRS2-v1720	MeasGapId-r17	OPTIONAL	-- Cond AssociatedGapCSIRS
]],			
[[			
measSequence-r18	MeasSequence-r18	OPTIONAL,	-- Need R
cellsToAddModListExt-v1800	CellsToAddModListExt-v1800	OPTIONAL	-- Need N

```

    ]]
  }

SSB-MTC3List-r16 ::=
    SEQUENCE (SIZE(1..4)) OF SSB-MTC3-r16

SSB-MTC4List-r17 ::=
    SEQUENCE (SIZE(1..3)) OF SSB-MTC4-r17

T312-r16 ::=
    ENUMERATED { ms0, ms50, ms100, ms200, ms300, ms400, ms500, ms1000 }

ReferenceSignalConfig ::=
    SSB-ConfigMobility          SSB-ConfigMobility          OPTIONAL, -- Need M
    csi-rs-ResourceConfigMobility SetupRelease { CSI-RS-ResourceConfigMobility } OPTIONAL, -- Need M
}

SSB-ConfigMobility ::=
    SEQUENCE {
        ssb-ToMeasure          SetupRelease { SSB-ToMeasure }          OPTIONAL, -- Need M
        deriveSSB-IndexFromCell BOOLEAN,
        ss-RSSI-Measurement      SS-RSSI-Measurement                  OPTIONAL, -- Need M
        ...,
        [[
            ssb-PositionQCL-Common-r16          SSB-PositionQCL-Relation-r16          OPTIONAL, -- Cond SharedSpectrum
            ssb-PositionQCL-CellsToAddModList-r16 SSB-PositionQCL-CellsToAddModList-r16 OPTIONAL, -- Need N
            ssb-PositionQCL-CellsToRemoveList-r16 PCI-List                          OPTIONAL, -- Need N
        ]],
        [[
            deriveSSB-IndexFromCellInter-r17      ServCellIndex
            ssb-PositionQCL-Common-r17            SSB-PositionQCL-Relation-r17          OPTIONAL, -- Need R
            ssb-PositionQCL-Cells-r17              SetupRelease {SSB-PositionQCL-CellList-r17} OPTIONAL, -- Cond SharedSpectrum2
        ]],
        [[
            cca-CellsToAddModList-r17             PCI-List
            cca-CellsToRemoveList-r17             PCI-List
        ]],
        [[
            ssb-ToMeasureAltitudeBasedList-r18    SetupRelease { SSB-ToMeasureAltitudeBasedList-r18 } OPTIONAL, -- Need M
        ]]
    }

Q-OffsetRangeList ::=
    SEQUENCE {
        rsrpOffsetSSB          Q-OffsetRange          DEFAULT dB0,
        rsrqOffsetSSB          Q-OffsetRange          DEFAULT dB0,
        sinrOffsetSSB          Q-OffsetRange          DEFAULT dB0,
        rsrpOffsetCSI-RS       Q-OffsetRange          DEFAULT dB0,
        rsrqOffsetCSI-RS       Q-OffsetRange          DEFAULT dB0,
        sinrOffsetCSI-RS       Q-OffsetRange          DEFAULT dB0
    }

ThresholdNR ::=
    SEQUENCE{
        thresholdRSRP          RSRP-Range          OPTIONAL, -- Need R
        thresholdRSRQ          RSRQ-Range          OPTIONAL, -- Need R
        thresholdSINR          SINR-Range          OPTIONAL, -- Need R
    }

```

```

CellsToAddModList ::= SEQUENCE (SIZE (1..maxNrofCellMeas)) OF CellsToAddMod

CellsToAddModListExt-v1710 ::= SEQUENCE (SIZE (1..maxNrofCellMeas)) OF CellsToAddModExt-v1710

CellsToAddModListExt-v1800 ::= SEQUENCE (SIZE (1..maxNrofCellMeas)) OF CellsToAddModExt-v1800

CellsToAddMod ::= SEQUENCE {
    physCellId          PhysCellId,
    cellIndividualOffset Q-OffsetRangeList
}

CellsToAddModExt-v1710 ::= SEQUENCE {
    ntn-PolarizationDL-r17    ENUMERATED {rhcp, lhcp, linear} OPTIONAL, -- Need R
    ntn-PolarizationUL-r17    ENUMERATED {rhcp, lhcp, linear} OPTIONAL, -- Need S
}

CellsToAddModExt-v1800 ::= SEQUENCE {
    ntn-NeighbourCellInfo-r18 NTN-NeighbourCellInfo-r18 OPTIONAL -- Cond NeighbourCell
}

RMTC-Config-r16 ::= SEQUENCE {
    rmtc-Periodicity-r16    ENUMERATED {ms40, ms80, ms160, ms320, ms640},
    rmtc-SubframeOffset-r16 INTEGER(0..639) OPTIONAL, -- Need M
    measDurationSymbols-r16 ENUMERATED {sym1, sym14or12, sym28or24, sym42or36, sym70or60},
    rmtc-Frequency-r16      ARFCN-ValueNR,
    ref-SCS-CP-r16          ENUMERATED {kHz15, kHz30, kHz60-NCP, kHz60-ECP},
    ...,
    [[
        rmtc-Bandwidth-r17    ENUMERATED {mhz100, mhz400, mhz800, mhz1600, mhz2000} OPTIONAL, -- Need R
        measDurationSymbols-v1700 ENUMERATED {sym140, sym560, sym1120} OPTIONAL, -- Need R
        ref-SCS-CP-v1700      ENUMERATED {kHz120, kHz480, kHz960} OPTIONAL, -- Need R
        tci-StateInfo-r17     SEQUENCE {
            tci-StateId-r17    TCI-StateId,
            ref-ServCellId-r17 ServCellIndex
        } OPTIONAL -- Need R
    ]],
    [[
        ref-BWPId-r17          BWP-Id
    ]]
}

SSB-PositionQCL-CellsToAddModList-r16 ::= SEQUENCE (SIZE (1..maxNrofCellMeas)) OF SSB-PositionQCL-CellsToAddMod-r16

SSB-PositionQCL-CellsToAddMod-r16 ::= SEQUENCE {
    physCellId-r16          PhysCellId,
    ssb-PositionQCL-r16     SSB-PositionQCL-Relation-r16
}

SSB-PositionQCL-CellList-r17 ::= SEQUENCE (SIZE (1..maxNrofCellMeas)) OF SSB-PositionQCL-Cell-r17

SSB-PositionQCL-Cell-r17 ::= SEQUENCE {
    physCellId-r17          PhysCellId,
    ssb-PositionQCL-r17     SSB-PositionQCL-Relation-r17
}

```

```
SSB-ToMeasureAltitudeBasedList-r18 ::= SEQUENCE (SIZE (1..maxNrofAltitudeRanges-r18)) OF SSB-ToMeasureAltitudeBased-r18

SSB-ToMeasureAltitudeBased-r18 ::= SEQUENCE {
    altitudeRange-r18 SEQUENCE {
        altitudeMin-r18 Altitude-r18 OPTIONAL, -- Need S
        altitudeMax-r18 Altitude-r18 OPTIONAL, -- Need S
        altitudeHyst-r18 HysteresisAltitude-r18 OPTIONAL -- Need R
    },
    ssb-ToMeasure-r18 SSB-ToMeasure OPTIONAL -- Need S
}

NTN-NeighbourCellInfo-r18 ::= SEQUENCE {
    epochTime-r18 EpochTime-r17,
    ephemerisInfo-r18 EphemerisInfo-r17,
    referenceLocation-r18 ReferenceLocation-r17 OPTIONAL -- Need R
}

-- TAG-MEASOBJECTNR-STOP
-- ASN1STOP
```

CellsToAddMod field descriptions
cellIndividualOffset Cell individual offsets applicable to a specific cell.
ntn-NeighbourCellInfo Includes satellite assistance information of an NTN neighbour cell.
ntn-PolarizationDL If present, this parameter indicates polarization information for downlink transmission on service link: including Right hand, Left hand circular polarizations (RHCP, LHCP) and Linear polarization.
ntn-PolarizationUL In this version of the specification, the network does not include this field.
physCellId Physical cell identity of a cell in the cell list.
referenceLocation Reference location of a neighbor NTN Earth-moving cell for the evaluation of the trigger criteria of an associated <i>ReportConfig</i> which contains <i>EventD2</i> or <i>condEventD2</i> .

MeasObjectNR field descriptions
<i>absThreshCSI-RS-Consolidation</i> Absolute threshold for the consolidation of measurement results per CSI-RS resource(s) from L1 filter(s). The field is used for the derivation of cell measurement results as described in 5.5.3.3 and the reporting of beam measurement information per CSI-RS resource as described in 5.5.5.2.
<i>absThreshSS-BlocksConsolidation</i> Absolute threshold for the consolidation of measurement results per SS/PBCH block(s) from L1 filter(s). The field is used for the derivation of cell measurement results as described in 5.5.3.3 and the reporting of beam measurement information per SS/PBCH block index as described in 5.5.5.2.
<i>allowedCellsToAddModList</i> List of cells to add/modify in the allow-list of cells. It applies only to SSB resources.
<i>allowedCellsToRemoveList</i> List of cells to remove from the allow-list of cells.
<i>associatedMeasGapSSB</i> Indicates the associated measurement gap for SSB measuring identified by <i>ssb-ConfigMobility</i> in this measurement object. When multiple <i>MeasObjectNR</i> with the same SSB frequency are configured, the network configures the same measurement gap ID in this field for each <i>MeasObjectNR</i> . If this field is absent, the associated measurement gap is the gap configured via <i>gapFR1</i> , <i>gapFR2</i> , or <i>gapUE</i> .
<i>associatedMeasGapSSB2</i> Indicates the associated additional measurement gap for SSB measuring identified by <i>ssb-ConfigMobility</i> in this measurement object for NTN deployments. When multiple <i>MeasObjectNR</i> with the same SSB frequency are configured, the network configures the same measurement gap ID in this field for each <i>MeasObjectNR</i> . If this field is absent, the associated measurement gap is the gap indicated by <i>associatedMeasGapSSB</i> .
<i>associatedMeasGapCSIRS</i> Indicates the associated measurement gap for CSI-RS measuring identified by <i>csi-rs-ResourceConfigMobility</i> in this measurement object. If this field is absent, the associated measurement gap is the gap configured via <i>gapFR1</i> , <i>gapFR2</i> , or <i>gapUE</i> .
<i>associatedMeasGapCSIRS2</i> Indicates the associated additional measurement gap for CSI-RS measuring identified by <i>csi-rs-ResourceConfigMobility</i> in this measurement object for NTN deployments. If this field is absent, the associated measurement gap is the gap indicated by <i>associatedMeasGapCSIRS</i> . In this release of the specification, this field is not configured for NTN deployments.
<i>cellsToAddModList</i> List of cells to add/modify in the cell list. If the network includes <i>cellsToAddModListExt-v1710</i> and/or <i>cellsToAddModListExt-v1800</i> , it contains the same number of entries listed in the same order as in <i>cellsToAddModList</i> (i.e without suffix).
<i>cellsToRemoveList</i> List of cells to remove from the cell list.
<i>excludedCellsToAddModList</i> List of cells to add/modify in the exclude-list of cells. It applies only to SSB resources.
<i>excludedCellsToRemoveList</i> List of cells to remove from the exclude-list of cells.
<i>freqBandIndicatorNR</i> The frequency band in which the SSB and/or CSI-RS indicated in this <i>MeasObjectNR</i> are located and according to which the UE shall perform the RRM measurements. This field is always provided when the network configures measurements with this <i>MeasObjectNR</i> .
<i>measCyclePSCell</i> The parameter is used only when the PSCell is configured on the frequency indicated by the <i>measObjectNR</i> and the SCG is deactivated, see TS 38.133 [14]. The field may also be configured when the PSCell is not configured on that frequency. The network always configures <i>measCyclePSCell</i> for the <i>measObjectNR</i> associated with the PSCell if <i>bfd-and-RLM</i> is set to <i>true</i> and the SCG is deactivated. Value <i>ms160</i> corresponds to 160 ms, value <i>ms256</i> corresponds to 256 ms and so on.
<i>measCycleSCell</i> The parameter is used only when an SCell is configured on the frequency indicated by the <i>measObjectNR</i> and is in deactivated state, see TS 38.133 [14]. gNB configures the parameter whenever an SCell is configured on the frequency indicated by the <i>measObjectNR</i> , but the field may also be signalled when an SCell is not configured. Value <i>sf160</i> corresponds to 160 sub-frames, value <i>sf256</i> corresponds to 256 sub-frames and so on.

measSequence
Indicates the recommended sequence for intra/inter-RAT intra/inter-frequency measurement. Value 1 means the corresponding frequency is measured firstly. Value 2 means the corresponding frequency is measured secondly and so on. If more than one frequency is configured with the same value, it means no recommended sequence among these frequencies. If not provided, it means there is no recommended sequence for the corresponding frequency. This field is only configured for NR standalone or if the <i>measObject</i> is associated to the MCG.
nrofCSI-RS-ResourcesToAverage
Indicates the maximum number of measurement results per beam based on CSI-RS resources to be averaged. The same value applies for each detected cell associated with this <i>MeasObjectNR</i> .
nrofSS-BlocksToAverage
Indicates the maximum number of measurement results per beam based on SS/PBCH blocks to be averaged. The same value applies for each detected cell associated with this <i>MeasObject</i> .
offsetMO
Offset values applicable to all measured cells with reference signal(s) indicated in this <i>MeasObjectNR</i> .
quantityConfigIndex
Indicates the <i>n</i> -th element of <i>quantityConfigNR-List</i> provided in <i>MeasConfig</i> .
referenceSignalConfig
RS configuration for SS/PBCH block and CSI-RS.
refFreqCSI-RS
Point A which is used for mapping of CSI-RS to physical resources according to TS 38.211 [16] clause 7.4.1.5.3.
smtc1
Primary measurement timing configuration. (see clause 5.5.2.10).
smtc2
Secondary measurement timing configuration for SS corresponding to this <i>MeasObjectNR</i> with PCI listed in <i>pci-List</i> . For these SS, the periodicity is indicated by <i>periodicity</i> in <i>smtc2</i> and the timing offset is equal to the offset indicated in <i>periodicityAndOffset</i> modulo <i>periodicity</i> . <i>periodicity</i> in <i>smtc2</i> can only be set to a value strictly shorter than the periodicity indicated by <i>periodicityAndOffset</i> in <i>smtc1</i> (e.g. if <i>periodicityAndOffset</i> indicates <i>sf10</i> , <i>periodicity</i> can only be set of <i>sf5</i> , if <i>periodicityAndOffset</i> indicates <i>sf5</i> , <i>smtc2</i> cannot be configured). This field is not configured together with <i>smtc4list</i> .
smtc3list
Measurement timing configuration list for SS corresponding to IAB-MT. This is used for the IAB-node's discovery of other IAB-nodes and the IAB-Donor-DUs.
smtc4list
Measurement timing configuration list for NTN deployments, see clause 5.5.2.10.
ssbFrequency
Indicates the frequency of the SS associated to this <i>MeasObjectNR</i> . For operation with shared spectrum channel access, this field is a <i>k</i> *30 kHz shift from the sync raster where <i>k</i> = 0,1,2, and so on if the <i>reportType</i> within the corresponding <i>ReportConfigNR</i> is set to <i>reportCGI</i> (see TS 38.211 [16], clause 7.4.3.1). Frequencies are considered to be on the sync raster if they are also identifiable with a GSCN value (see TS 38.101-1 [15], or TS 38.101-5 [75]).
ssb-PositionQCL-Common
Indicates the QCL relationship between SS/PBCH blocks for all measured cells as specified in TS 38.213 [13], clause 4.1.
ssbSubcarrierSpacing
Subcarrier spacing of SSB. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 120 or 240 kHz FR2-2: 120, 480, or 960 kHz
t312
The value of timer T312. Value <i>ms0</i> represents 0 ms, <i>ms50</i> represents 50 ms and so on.

ReferenceSignalConfig field descriptions
csi-rs-ResourceConfigMobility CSI-RS resources to be used for CSI-RS based RRM measurements.
ssb-ConfigMobility SSB configuration for mobility (nominal SSBs, timing configuration).

RMTC-Config field descriptions
measDurationSymbols Number of consecutive symbols for which the Physical Layer reports samples of RSSI (see TS 38.215 [9], clause 5.1.21). Value <i>sym1</i> corresponds to one symbol, <i>sym14or12</i> corresponds to 14 symbols of the reference numerology for NCP and 12 symbols for ECP, and so on. If <i>measDurationSymbols-v1700</i> is signalled, the UE ignores <i>measDurationSymbols-r16</i> .
ref-BWPId Indicates the reference BWP for the TCI state indicated in <i>tc-StateInfo</i> . Network includes this field if <i>tc-StateInfo</i> is present. This field is only applicable for operation with shared spectrum channel access in FR2-2 and network does not configure this if the UE does not have any serving cells in FR2-2.
ref-SCS-CP Indicates a reference subcarrier spacing and cyclic prefix to be used for RSSI measurements (see TS 38.215 [9]). Value kHz15 corresponds to 15kHz, kHz30 corresponds to 30 kHz, value kHz60-NCP corresponds to 60 kHz using normal cyclic prefix (NCP), and kHz60-ECP corresponds to 60 kHz using extended cyclic prefix (ECP). If <i>ref-SCS-CP-v1700</i> is signalled, the UE ignores <i>ref-SCS-CP-r16</i> .
ref-ServCellId Indicates the FR2-2 reference serving cell index for the TCI state. Network includes this field if <i>tc-StateInfo</i> is present. This field is only applicable for operation with shared spectrum channel access in FR2-2 and network does not configure this if the UE does not have any serving cells in FR2-2.
rmtc-Bandwidth Indicates the bandwidth for the RSSI measurement (see TS 38. 215 [9], clause 5.1.21).
rmtc-Frequency Indicates the center frequency of the measured bandwidth for a frequency which operates with shared spectrum channel access (see TS 38. 215 [9], clause 5.1.21).
rmtc-Periodicity Indicates the RSSI measurement timing configuration (RMTC) periodicity (see TS 38.215 [9], clause 5.1.21).
rmtc-SubframeOffset Indicates the RSSI measurement timing configuration (RMTC) subframe offset for this frequency (see TS 38.215 [9], clause 5.1.21). For inter-frequency measurements, this field is optional present and if it is not configured, the UE chooses a random value as <i>rmtc-SubframeOffset</i> for <i>measDurationSymbols</i> which shall be selected to be between 0 and the configured <i>rmtc-Periodicity</i> with equal probability.
tc-StateId Indicates the TCI state to be used for RSSI measurements. This field is only applicable for shared spectrum channel access in FR2-2. Network does not configure this if the UE does not have any serving cells in FR2-2 and in such a case, it is up to UE implementation how to determine the spatial domain filter for the inter-frequency RSSI measurement in FR2-2.

SSB-ConfigMobility field descriptions	
cca-CellsToAddModList, cca-CellsToRemoveList	Lists of cells to be added or removed from the list of neighbor cells that apply channel access mode procedures for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4 for FR2-2.
deriveSSB-IndexFromCell	If this field is set to <i>true</i> , UE assumes SFN and frame boundary alignment across cells on the same frequency carrier as specified in TS 38.133 [14]. Hence, if the UE is configured with a serving cell for which (<i>absoluteFrequencySSB</i> , <i>subcarrierSpacing</i>) in <i>ServingCellConfigCommon</i> is equal to (<i>ssbFrequency</i> , <i>ssbSubcarrierSpacing</i>) in this <i>MeasObjectNR</i> , this field indicates whether the UE can utilize the timing of this serving cell to derive the index of SS block transmitted by neighbour cell. Otherwise, this field indicates whether the UE may use the timing of any detected cell on that target frequency to derive the SSB index of all neighbour cells on that frequency.
deriveSSB-IndexFromCellInter	If this field is present, UE assumes SFN and frame boundary alignment between the reference serving cell indicated by <i>ServCellIndex</i> and all neighbour cells in this <i>MeasObjectNR</i> as specified in TS 38.133 [14]. This field also indicates that the UE can utilize the timing of the reference serving cell indicated by <i>ServCellIndex</i> to derive the index of SS block transmitted by all inter-frequency neighbour cells on the frequency indicated by the <i>MeasObjectNR</i> . When this field is included, the network should set <i>deriveSSB-IndexFromCell</i> to <i>true</i> .
ssb-ToMeasure	The set of SS blocks to be measured within the SMTC measurement duration. The first/leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not to be measured while value 1 indicates that the corresponding SS/PBCH block is to be measured (see TS 38.215 [9]). When the field is not configured the UE measures on all SS blocks. Regardless of the value of this field, SS/PBCH blocks outside of the applicable <i>smtc</i> are not to be measured. See TS 38.215 [9] clause 5.1.1.
ssb-ToMeasureAltitudeBasedList	List of altitude-dependent <i>ssb-ToMeasure</i> . When the UE is within an altitude range indicated by <i>altitudeRange</i> , it ignores the <i>ssb-ToMeasure</i> (without suffix), and applies the corresponding <i>ssb-ToMeasure-r18</i> if present, otherwise (i.e., the UE is within an altitude range indicated by <i>altitudeRange</i> and <i>ssb-ToMeasure-r18</i> is absent) it measures on all SS-blocks. When the UE is outside all the altitude ranges indicated by <i>altitudeRange</i> (if any), <i>ssb-ToMeasure</i> (without suffix) applies. For each altitude range, <i>altitudeMin</i> indicates the minimum altitude in meters relative to sea level, <i>altitudeMax</i> indicates the maximum altitude in meters relative to sea level, and if included, <i>altitudeHyst</i> indicates hysteresis in meters for determination of the altitude range. I.e., when <i>altitudeHyst</i> is configured for an altitude range, the UE considers itself to have entered the range if $altitudeMin \leq \text{UE altitude} \leq altitudeMax$ and after entering the range considers itself to be in the range while $(altitudeMin - altitudeHyst) \leq \text{UE altitude} \leq (altitudeMax + altitudeHyst)$. For each <i>altitudeRange</i> , if <i>altitudeMin</i> is absent, value <i>minAltitude-r18</i> is used and if <i>altitudeMax</i> is absent, value <i>maxAltitude-r18</i> is used.
SSB-PositionQCL-CellsToAddMod field descriptions	
physCellId	Physical cell identity of a cell in the cell list.
ssb-PositionQCL	Indicates the QCL relation between SS/PBCH blocks for a specific cell as specified in TS 38.213 [13], clause 4.1. If provided, the cell specific value overwrites the value signalled by <i>ssb-PositionQCL-Common</i> .

Conditional Presence	Explanation
<i>AssociatedGapCSIRS</i>	This field is optionally present, Need R if <i>associatedMeasGapCSIRS</i> is configured, otherwise, it is absent.
<i>AssociatedGapSSB</i>	This field is optionally present, Need R if <i>associatedMeasGapSSB</i> is configured, otherwise, it is absent.
<i>CSI-RS</i>	This field is mandatory present if <i>csi-rs-ResourceConfigMobility</i> is configured, otherwise, it is absent.
<i>IntraFreqConnected</i>	This field is optionally present, Need R if the UE is configured with a serving cell for which (absoluteFrequencySSB, subcarrierSpacing) in <i>ServingCellConfigCommon</i> is equal to (<i>ssbFrequency</i> , <i>ssbSubcarrierSpacing</i>) in this <i>MeasObjectNR</i> , otherwise, it is absent.
<i>SCG</i>	This field is optionally present, Need R, in the <i>measConfig</i> associated with the SCG. It is absent in the <i>measConfig</i> associated with the MCG.
<i>NeighbourCell</i>	This field is mandatory present if this <i>MeasObject</i> is configured by the serving cell for a neighbour cell served by a NTN Earth-moving cell and is associated with a <i>ReportConfig</i> which contains <i>EventD2</i> or <i>condEventD2</i> . Otherwise, it is optional, Need R.
<i>SharedSpectrum</i>	This field is mandatory present if this <i>MeasObject</i> is for a frequency which operates with shared spectrum channel access in FR1. Otherwise, it is absent, Need R.
<i>SharedSpectrum2</i>	This field is optionally present if this <i>MeasObject</i> is for a frequency which operates with shared spectrum channel access in FR2-2, Need R. Otherwise, it is absent, Need R.
<i>SSBorAssociatedSSB</i>	This field is mandatory present if <i>ssb-ConfigMobility</i> is configured or <i>associatedSSB</i> is configured in at least one cell. Otherwise, it is absent, Need R.

– *MeasObjectNR-SL*

The IE *MeasObjectNR-SL* concerns a measurement object including a list of transmission resource pool(s) for which CBR measurement is performed for NR sidelink communication/discovery.

MeasObjectNR-SL information element

```
-- ASN1START
-- TAG-MEASOBJECTNR-SL-START

MeasObjectNR-SL-r16 ::= SEQUENCE {
    tx-PoolMeasToRemoveList-r16 Tx-PoolMeasList-r16 OPTIONAL, -- Need N
    tx-PoolMeasToAddModList-r16 Tx-PoolMeasList-r16 OPTIONAL -- Need N
}

MeasObjectNR-SL-r18 ::= SEQUENCE {
    sl-Frequency-r18 INTEGER (1..maxNrofFreqSL-r16),
    tx-PoolMeasToRemoveList-r18 Tx-PoolMeasList-r16 OPTIONAL, -- Need N
    tx-PoolMeasToAddModList-r18 Tx-PoolMeasList-r16 OPTIONAL -- Need N
}

Tx-PoolMeasList-r16 ::= SEQUENCE (SIZE (1..maxNrofSL-PoolToMeasureNR-r16)) OF SL-ResourcePoolID-r16

-- TAG-MEASOBJECTNR-SL-STOP
-- ASN1STOP
```

MeasObjectNR-SL field descriptions
sl-Frequency Indicates the sidelink frequency associated to this <i>MeasObjectNR-SL</i> . The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> , the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.

– *MeasObjectRxTxDiff*

The IE *MeasObjectRxTxDiff* is used to configure the measurement object for UE Rx-Tx time difference measurement.

MeasObjectRxTxDiff information element

```
-- ASN1START
-- TAG-MEASOBJECTRXTXDIFF-START

MeasObjectRxTxDiff-r17 ::= SEQUENCE {
    dl-Ref-r17 CHOICE {
        prs-Ref-r17 NULL,
        csi-RS-Ref-r17 NULL,
        ...
    } OPTIONAL, -- Need R
    ...
}

-- TAG-MEASOBJECTRXTXDIFF-STOP
-- ASN1STOP
```

MeasObjectRxTxDiff field descriptions
dl-Ref configures the DL references signals to measure Rx-Tx time difference. <i>prs-Ref-r17</i> indicates PRS is chosen, and <i>csi-RS-Ref-r17</i> indicates that CSI-RS for tracking is chosen. Only one PRS resource set is configured by the network. Only one <i>NZP-CSI-RS-ResourceSet</i> can be configured with <i>pdcc-Info-r17</i> set to <i>true</i> and it is used for UE Rx-Tx time difference measurement. Only reference signals from the PCell of the MCG can be configured by the network.

– *MeasObjectToAddModList*

The IE *MeasObjectToAddModList* concerns a list of measurement objects to add or modify.

MeasObjectToAddModList information element

```
-- ASN1START
-- TAG-MEASOBJECTTOADDMODLIST-START

MeasObjectToAddModList ::= SEQUENCE (SIZE (1..maxNrofObjectId)) OF MeasObjectToAddMod
```

```

MeasObjectToAddMod ::=
  measObjectId
  measObject
    measObjectNR
    ...,
    measObjectEUTRA
    measObjectUTRA-FDD-r16
    measObjectNR-SL-r16
    measObjectCLI-r16
    measObjectRxTxDiff-r17
    measObjectRelay-r17
    measObjectNR-SL-r18
  }
-- TAG-MEASOBJECTTOADDMODLIST-STOP
-- ASN1STOP

```

```

SEQUENCE {
  MeasObjectId,
  CHOICE {
    MeasObjectNR,

    MeasObjectEUTRA,
    MeasObjectUTRA-FDD-r16,
    MeasObjectNR-SL-r16,
    MeasObjectCLI-r16,
    MeasObjectRxTxDiff-r17,
    SL-MeasObject-r16,
    MeasObjectNR-SL-r18
  }
}

```

— *MeasObjectUTRA-FDD*

The IE *MeasObjectUTRA-FDD* specifies information applicable for inter-RAT UTRA-FDD neighbouring cells.

MeasObjectUTRA-FDD information element

```

-- ASN1START
-- TAG-MEASOBJECTUTRA-FDD-START

MeasObjectUTRA-FDD-r16 ::=
  carrierFreq-r16
  utra-FDD-Q-OffsetRange-r16
  cellsToRemoveList-r16
  cellsToAddModList-r16
  ...
}

CellsToAddModListUTRA-FDD-r16 ::=
  SEQUENCE (SIZE (1..maxCellMeasUTRA-FDD-r16)) OF CellsToAddModUTRA-FDD-r16

CellsToAddModUTRA-FDD-r16 ::=
  SEQUENCE {
    cellIndexUTRA-FDD-r16
    physCellId-r16
  }

UTRA-FDD-CellIndexList-r16 ::=
  SEQUENCE (SIZE (1..maxCellMeasUTRA-FDD-r16)) OF UTRA-FDD-CellIndex-r16

UTRA-FDD-CellIndex-r16 ::=
  INTEGER (1..maxCellMeasUTRA-FDD-r16)

-- TAG-MEASOBJECTUTRA-FDD-STOP
-- ASN1STOP

```

```

SEQUENCE {
  ARFCN-ValueUTRA-FDD-r16,
  UTRA-FDD-Q-OffsetRange-r16
  UTRA-FDD-CellIndexList-r16
  CellsToAddModListUTRA-FDD-r16
  OPTIONAL, -- Need R
  OPTIONAL, -- Need N
  OPTIONAL, -- Need N
}

```

MeasObjectUTRA-FDD field descriptions
carrierFreq Identifies UTRA-FDD carrier frequency for which this configuration is valid. NR does not configure more than one measurement object for the same physical frequency regardless of the ARFCN used to indicate this.
cellIndexUTRA-FDD Entry index in the neighbouring cell list.
cellsToAddModList List of UTRA-FDD cells to add/modify in the neighbouring cell list.
cellsToRemoveList List of cells to remove from the neighbouring cell list.
utra-FDD-Q-OffsetRange Used to indicate a frequency specific offset to be applied when evaluating triggering conditions for measurement reporting. The value is in dB.

–
 MeasResultCellListSFTD-NR

The IE *MeasResultCellListSFTD-NR* consists of SFN and radio frame boundary difference between the PCell and an NR cell as specified in TS 38.215 [9] and TS 38.133 [14].

MeasResultCellListSFTD-NR information element

```

-- ASN1START
-- TAG-MEASRESULTCELLLISTSFTD-NR-START

MeasResultCellListSFTD-NR ::=
    SEQUENCE (SIZE (1..maxCellsFTD)) OF MeasResultCellSFTD-NR

MeasResultCellSFTD-NR ::=
    SEQUENCE {
        physCellId          PhysCellId,
        sfn-OffsetResult     INTEGER (0..1023),
        frameBoundaryOffsetResult  INTEGER (-30720..30719),
        rsrp-Result          RSRP-Range
    }
-- TAG-MEASRESULTCELLLISTSFTD-NR-STOP
-- ASN1STOP
    
```

MeasResultCellSFTD-NR field descriptions
sfn-OffsetResult Indicates the SFN difference between the PCell and the NR cell as an integer value according to TS 38.215 [9].
frameBoundaryOffsetResult Indicates the frame boundary difference between the PCell and the NR cell as an integer value according to TS 38.215 [9].

–
 MeasResultCellListSFTD-EUTRA

The IE *MeasResultCellListSFTD-EUTRA* consists of SFN and radio frame boundary difference between the PCell and an E-UTRA PSCell.

MeasResultCellListSFTD-EUTRA information element

```
-- ASN1START
-- TAG-MEASRESULTCELLLISTSFTD-EUTRA-START

MeasResultCellListSFTD-EUTRA ::=
    SEQUENCE (SIZE (1..maxCellsFTD)) OF MeasResultSFTD-EUTRA

MeasResultSFTD-EUTRA ::=
    SEQUENCE {
        eutra-PhysCellId      EUTRA-PhysCellId,
        sfn-OffsetResult      INTEGER (0..1023),
        frameBoundaryOffsetResult  INTEGER (-30720..30719),
        rsrp-Result           RSRP-Range
    }

-- TAG-MEASRESULTCELLLISTSFTD-EUTRA-STOP
-- ASN1STOP
```

MeasResultSFTD-EUTRA field descriptions
eutra-PhysCellId Identifies the physical cell identity of the E-UTRA cell for which the reporting is being performed.
sfn-OffsetResult Indicates the SFN difference between the PCell and the E-UTRA cell as an integer value according to TS 38.215 [9].
frameBoundaryOffsetResult Indicates the frame boundary difference between the PCell and the E-UTRA cell as an integer value according to TS 38.215 [9].

MeasResults

The IE *MeasResults* covers measured results for intra-frequency, inter-frequency, inter-RAT mobility and measured results for NR sidelink communication/discovery/positioning.

MeasResults information element

```
-- ASN1START
-- TAG-MEASRESULTS-START

MeasResults ::=
    SEQUENCE {
        measId                MeasId,
        measResultServingMOList MeasResultServMOList,
        measResultNeighCells   CHOICE {
            measResultListNR      MeasResultListNR,
            ...,
            measResultListEUTRA    MeasResultListEUTRA,
            measResultListUTRA-FDD-r16 MeasResultListUTRA-FDD-r16,
            sl-MeasResultsCandRelay-r17 OCTET STRING -- Contains PC5 SL-MeasResultListRelay-r17
        }
        ...,
        [
            measResultServFreqListEUTRA-SCG MeasResultServFreqListEUTRA-SCG
        ]
    }
    OPTIONAL,
    [
        measResultServFreqListEUTRA-SCG MeasResultServFreqListEUTRA-SCG
    ]
    OPTIONAL,
```

measResultServFreqListNR-SCG	MeasResultServFreqListNR-SCG	OPTIONAL,
measResultSFTD-EUTRA	MeasResultSFTD-EUTRA	OPTIONAL,
measResultSFTD-NR	MeasResultCellSFTD-NR	OPTIONAL
]],		
[[		
measResultCellListSFTD-NR	MeasResultCellListSFTD-NR	OPTIONAL
]],		
[[		
measResultForRSSI-r16	MeasResultForRSSI-r16	OPTIONAL,
locationInfo-r16	LocationInfo-r16	OPTIONAL,
ul-PDCP-DelayValueResultList-r16	UL-PDCP-DelayValueResultList-r16	OPTIONAL,
measResultsSL-r16	MeasResultsSL-r16	OPTIONAL,
measResultCLI-r16	MeasResultCLI-r16	OPTIONAL
]],		
[[		
measResultRxTxTimeDiff-r17	MeasResultRxTxTimeDiff-r17	OPTIONAL,
sl-MeasResultServingRelay-r17	OCTET STRING	OPTIONAL,
		-- Contains PC5 SL-MeasResultRelay-r17
ul-PDCP-ExcessDelayResultList-r17	UL-PDCP-ExcessDelayResultList-r17	OPTIONAL,
coarseLocationInfo-r17	OCTET STRING	OPTIONAL
]],		
[[		
altitudeUE-r18	Altitude-r18	OPTIONAL,
cellsMetReportOnLeaveList-r18	SEQUENCE (SIZE (1..maxCellReport)) OF PhysCellId	OPTIONAL
]]		
}		
MeasResultServM0List ::=	SEQUENCE (SIZE (1..maxNrofServingCells)) OF MeasResultServM0	
MeasResultServM0 ::=	SEQUENCE {	
servCellId	ServCellIndex,	
measResultServingCell	MeasResultNR,	
measResultBestNeighCell	MeasResultNR	OPTIONAL,
...		
}		
MeasResultListNR ::=	SEQUENCE (SIZE (1..maxCellReport)) OF MeasResultNR	
MeasResultNR ::=	SEQUENCE {	
physCellId	PhysCellId	OPTIONAL,
measResult	SEQUENCE {	
cellResults	SEQUENCE{	
resultsSSB-Cell	MeasQuantityResults	OPTIONAL,
resultsCSI-RS-Cell	MeasQuantityResults	OPTIONAL
},		
rsIndexResults	SEQUENCE{	
resultsSSB-Indexes	ResultsPerSSB-IndexList	OPTIONAL,
resultsCSI-RS-Indexes	ResultsPerCSI-RS-IndexList	OPTIONAL
}		
},		
...		
[[		
cgi-Info	CGI-InfoNR	OPTIONAL
]],		

<pre> [[choCandidate-r17 choConfig-r17 triggeredEvent-r17 timeBetweenEvents-r17 firstTriggeredEvent-r17]], [[entering-r18]]] </pre>	<pre> ENUMERATED {true} SEQUENCE (SIZE (1..2)) OF CondTriggerConfig-r16 SEQUENCE { TimeBetweenEvent-r17 ENUMERATED {condFirstEvent, condSecondEvent} } ENUMERATED {true} </pre>	<pre> OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL OPTIONAL </pre>
<pre> MeasResultListEUTRA ::= </pre>	<pre> SEQUENCE (SIZE (1..maxCellReport)) OF MeasResultEUTRA </pre>	
<pre> MeasResultEUTRA ::= eutra-PhysCellId measResult cgi-Info ... } </pre>	<pre> SEQUENCE { PhysCellId, MeasQuantityResultsEUTRA, CGI-InfoEUTRA } </pre>	<pre> OPTIONAL, </pre>
<pre> MultiBandInfoListEUTRA ::= </pre>	<pre> SEQUENCE (SIZE (1..maxMultiBands)) OF FreqBandIndicatorEUTRA </pre>	
<pre> MeasQuantityResults ::= rsrp rsrq sinr } </pre>	<pre> SEQUENCE { RSRP-Range RSRQ-Range SINR-Range } </pre>	<pre> OPTIONAL, OPTIONAL, OPTIONAL </pre>
<pre> MeasQuantityResultsEUTRA ::= rsrp rsrq sinr } </pre>	<pre> SEQUENCE { RSRP-RangeEUTRA RSRQ-RangeEUTRA SINR-RangeEUTRA } </pre>	<pre> OPTIONAL, OPTIONAL, OPTIONAL </pre>
<pre> ResultsPerSSB-IndexList ::= </pre>	<pre> SEQUENCE (SIZE (1..maxNrofIndexesToReport2)) OF ResultsPerSSB-Index </pre>	
<pre> ResultsPerSSB-Index ::= ssb-Index ssb-Results } </pre>	<pre> SEQUENCE { SSB-Index, MeasQuantityResults } </pre>	<pre> OPTIONAL </pre>
<pre> ResultsPerCSI-RS-IndexList ::= </pre>	<pre> SEQUENCE (SIZE (1..maxNrofIndexesToReport2)) OF ResultsPerCSI-RS-Index </pre>	
<pre> ResultsPerCSI-RS-Index ::= csi-RS-Index csi-RS-Results } </pre>	<pre> SEQUENCE { CSI-RS-Index, MeasQuantityResults } </pre>	<pre> OPTIONAL </pre>
<pre> MeasResultServFreqListEUTRA-SCG ::= </pre>	<pre> SEQUENCE (SIZE (1..maxNrofServingCellsEUTRA)) OF MeasResult2EUTRA </pre>	
<pre> MeasResultServFreqListNR-SCG ::= </pre>	<pre> SEQUENCE (SIZE (1..maxNrofServingCells)) OF MeasResult2NR </pre>	

```

MeasResultListUTRA-FDD-r16 ::= SEQUENCE (SIZE (1..maxCellReport)) OF MeasResultUTRA-FDD-r16

MeasResultUTRA-FDD-r16 ::= SEQUENCE {
    physCellId-r16          PhysCellIdUTRA-FDD-r16,
    measResult-r16          SEQUENCE {
        utra-FDD-RSCP-r16    INTEGER (-5..91)          OPTIONAL,
        utra-FDD-EcN0-r16    INTEGER (0..49)            OPTIONAL
    }
}

MeasResultForRSSI-r16 ::= SEQUENCE {
    rssi-Result-r16          RSSI-Range-r16,
    channelOccupancy-r16    INTEGER (0..100)
}

MeasResultCLI-r16 ::= SEQUENCE {
    measResultListSRS-RSRP-r16 MeasResultListSRS-RSRP-r16
    measResultListCLI-RSSI-r16 MeasResultListCLI-RSSI-r16
}
OPTIONAL,
OPTIONAL

MeasResultListSRS-RSRP-r16 ::= SEQUENCE (SIZE (1.. maxCLI-Report-r16)) OF MeasResultSRS-RSRP-r16

MeasResultSRS-RSRP-r16 ::= SEQUENCE {
    srs-ResourceId-r16      SRS-ResourceId,
    srs-RSRP-Result-r16     SRS-RSRP-Range-r16
}

MeasResultListCLI-RSSI-r16 ::= SEQUENCE (SIZE (1.. maxCLI-Report-r16)) OF MeasResultCLI-RSSI-r16

MeasResultCLI-RSSI-r16 ::= SEQUENCE {
    rssi-ResourceId-r16     RSSI-ResourceId-r16,
    cli-RSSI-Result-r16     CLI-RSSI-Range-r16
}

UL-PDCP-DelayValueResultList-r16 ::= SEQUENCE (SIZE (1..maxDRB)) OF UL-PDCP-DelayValueResult-r16

UL-PDCP-DelayValueResult-r16 ::= SEQUENCE {
    drb-Id-r16              DRB-Identity,
    averageDelay-r16         INTEGER (0..10000),
    ...
}

UL-PDCP-ExcessDelayResultList-r17 ::= SEQUENCE (SIZE (1..maxDRB)) OF UL-PDCP-ExcessDelayResult-r17

UL-PDCP-ExcessDelayResult-r17 ::= SEQUENCE {
    drb-Id-r17              DRB-Identity,
    excessDelay-r17          INTEGER (0..31),
    ...
}

TimeBetweenEvent-r17 ::= INTEGER (0..1023)

-- TAG-MEASRESULTS-STOP
-- ASN1STOP

```

<i>MeasResultEUTRA</i> field descriptions
<i>eutra-PhysCellId</i> Identifies the physical cell identity of the E-UTRA cell for which the reporting is being performed. The UE reports a value in the range 0..503, other values are reserved.

MeasResultNR field descriptions
averageDelay Indicates average delay for the packets during the reporting period, as specified in TS 38.314 [53]. Value 0 corresponds to 0 millisecond, value 1 corresponds to 0.1 millisecond, value 2 corresponds to 0.2 millisecond, and so on.
cellResults Cell level measurement results.
cellsMetReportOnLeaveList This field indicates the list of cells which met the event leaving condition.
choCandidate This field indicates whether the associated cell is a candidate target cell for conditional handover or conditional PSCell change or addition. This field may be included only in the <i>SuccessHO-Report</i> or <i>SuccessPSCell-Report</i> within <i>UEInformationResponse</i> message.
choConfig If the associated cell is a candidate target cell for conditional handover, this field indicates the conditional handover execution condition for each <i>measId</i> within <i>condTriggerConfig</i> associated to the cell. This field may be included only in the <i>rlf-report</i> within <i>UEInformationResponse</i> message.
drb-Id Indicates DRB value for which uplink PDCP delay ratio or value is provided, according to TS 38.314 [53].
entering This field indicates if the event entering condition for the cell is satisfied and the cell has been just added within <i>cellsTriggeredList</i> .
firstTriggeredEvent This field is set to <i>condFirstEvent</i> if the execution condition associated to the first entry of <i>choConfig</i> was fulfilled first in time. This field is set to <i>condSecondEvent</i> if the execution condition associated to the second entry of <i>choConfig</i> was fulfilled first in time. This field may be included in <i>rlf-report</i> within <i>UEInformationResponse</i> message or in <i>SCGFailureInformation</i> message.
locationInfo Positioning related information and measurements.
physCellId The physical cell identity of the NR cell for which the reporting is being performed.
resultsSSB-Cell Cell level measurement results based on SS/PBCH related measurements.
resultsSSB-Indexes Beam level measurement results based on SS/PBCH related measurements.
resultsCSI-RS-Cell Cell level measurement results based on CSI-RS related measurements.
resultsCSI-RS-indexes Beam level measurement results based on CSI-RS related measurements.
rsIndexResults Beam level measurement results.
timeBetweenEvents Indicates the time elapsed between fulfilling the conditional execution conditions included in <i>choConfig</i> . Value in milliseconds. The maximum value 1023 means 1023ms or longer. This field may be included in the reports associated to <i>UEInformationResponse</i> message, e.g., <i>rlf-Report</i> or in the <i>SCGFailureInformation</i> message.

MeasResultUTRA-FDD field descriptions	
physCellId	The physical cell identity of the UTRA-FDD cell for which the reporting is being performed.
utra-FDD-EcN0	According to CPICH_Ec/No in TS 25.133 [46] for FDD.
utra-FDD-RSCP	According to CPICH_RSCP in TS 25.133 [46] for FDD.

<i>MeasResults</i> field descriptions
coarseLocationInfo This field indicates the coarse location information reported by the UE. This field is coded as the <i>Ellipsoid-Point</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit. The least significant bits of <i>degreesLatitude</i> and <i>degreesLongitude</i> are set to 0 to meet the accuracy requirement corresponds to a granularity of approximately 2 km. It is up to UE implementation how many LSBs are set to 0 to meet the accuracy requirement
excessDelay Indicates the ratio of packets in UL per DRB exceeding the configured delay threshold among the UL PDCP SDUs, according to the UL PDCP Excess Packet Delay per DRB mapping table, as defined in TS 38.314 [53], Table 4.3.1.e-1.
measId Identifies the measurement identity for which the reporting is being performed.
measQuantityResults The value <i>sinr</i> is not included when it is used for <i>LogMeasReport-r16</i> .
measResultCellListSFTD-NR SFTD measurement results between the PCell and the NR neighbour cell(s) in NR standalone.
measResultCLI CLI measurement results.
measResultEUTRA Measured results of an E-UTRA cell.
measResultForRSSI Includes measured RSSI result in dBm (see TS 38.215 [9]) and <i>channelOccupancy</i> which is the percentage of samples when the RSSI was above the configured <i>channelOccupancyThreshold</i> for the associated <i>reportConfig</i> .
measResultListEUTRA List of measured results for the maximum number of reported best cells for an E-UTRA measurement identity.
measResultListNR List of measured results for the maximum number of reported best cells for an NR measurement identity.
measResultListUTRA-FDD List of measured results for the maximum number of reported best cells for a UTRA-FDD measurement identity.
measResultNR Measured results of an NR cell.
measResultServFreqListEUTRA-SCG Measured results of the E-UTRA SCG serving frequencies: the measurement result of PSCell and each SCell, if any, and of the best neighbouring cell on each E-UTRA SCG serving frequency.
measResultServFreqListNR-SCG Measured results of the NR SCG serving frequencies: the measurement result of PSCell and each SCell, if any, and of the best neighbouring cell on each NR SCG serving frequency.
measResultServingMOList Measured results of measured cells with reference signals indicated in the serving cell measurement objects including measurement results of SpCell, configured SCell(s) and best neighbouring cell within measured cells with reference signals indicated in on each serving cell measurement object. If the sending of the <i>MeasurementReport</i> message is triggered by a measurement configured by the field <i>sl-ConfigDedicatedForNR</i> received within an E-UTRA <i>RRCCongestionReconfiguration</i> message (i.e. CBR measurements), this field is not applicable and its contents is ignored by the network.
measResultSFTD-EUTRA SFTD measurement results between the PCell and the E-UTRA PSCell in NE-DC.
measResultSFTD-NR SFTD measurement results between the PCell and the NR PSCell in NR-DC.

MeasResults field descriptions
coarseLocationInfo This field indicates the coarse location information reported by the UE. This field is coded as the <i>Ellipsoid-Point</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit. The least significant bits of <i>degreesLatitude</i> and <i>degreesLongitude</i> are set to 0 to meet the accuracy requirement corresponds to a granularity of approximately 2 km. It is up to UE implementation how many LSBs are set to 0 to meet the accuracy requirement
excessDelay Indicates the ratio of packets in UL per DRB exceeding the configured delay threshold among the UL PDCP SDUs, according to the UL PDCP Excess Packet Delay per DRB mapping table, as defined in TS 38.314 [53], Table 4.3.1.e-1.
measResultsSL CBR measurements results for NR sidelink communication/discovery/positioning.
measResultUTRA-FDD Measured result of a UTRA-FDD cell.
sl-MeasResultsCandRelay Measurement result(s) of candidate L2 U2N relay UE(s).
sl-MeasResultServingRelay Measurement result of serving L2 U2N relay UE.

— MeasResult2EUTRA

The IE *MeasResult2EUTRA* contains measurements on E-UTRA frequencies.

MeasResult2EUTRA information element

```
-- ASN1START
-- TAG-MEASRESULT2EUTRA-START

MeasResult2EUTRA ::= SEQUENCE {
    carrierFreq          ARFCN-ValueEUTRA,
    measResultServingCell MeasResultEUTRA
    measResultBestNeighCell MeasResultEUTRA
    ...
}

-- TAG-MEASRESULT2EUTRA-STOP
-- ASN1STOP
```

— MeasResult2NR

The IE *MeasResult2NR* contains measurements on NR frequencies.

MeasResult2NR information element

```
-- ASN1START
-- TAG-MEASRESULT2NR-START
```

```

MeasResult2NR ::=
    ssbFrequency                SEQUENCE {
    refFreqCSI-RS                ARFCN-ValueNR
    measResultServingCell        ARFCN-ValueNR
    measResultNeighCellListNR    MeasResultNR
    ...                          MeasResultListNR
    }
-- TAG-MEASRESULT2NR-STOP
-- ASN1STOP

```

OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL,

– *MeasResultIdleEUTRA*

The IE *MeasResultIdleEUTRA* covers the E-UTRA measurement results performed in RRC_IDLE and RRC_INACTIVE.

MeasResultIdleEUTRA information element

```

-- ASN1START
-- TAG-MEASRESULTIDLEEUTRA-START

MeasResultIdleEUTRA-r16 ::= SEQUENCE {
    measResultsPerCarrierListIdleEUTRA-r16 SEQUENCE (SIZE (1.. maxFreqIdle-r16)) OF MeasResultsPerCarrierIdleEUTRA-r16,
    ...
}

MeasResultsPerCarrierIdleEUTRA-r16 ::= SEQUENCE {
    carrierFreqEUTRA-r16 ARFCN-ValueEUTRA,
    measResultsPerCellListIdleEUTRA-r16 SEQUENCE (SIZE (1..maxCellMeasIdle-r16)) OF MeasResultsPerCellIdleEUTRA-r16,
    ...
}

MeasResultsPerCellIdleEUTRA-r16 ::= SEQUENCE {
    eutra-PhysCellId-r16 EUTRA-PhysCellId,
    measIdleResultEUTRA-r16 SEQUENCE {
        rsrp-ResultEUTRA-r16 RSRP-RangeEUTRA
        rsrq-ResultEUTRA-r16 RSRQ-RangeEUTRA-r16
    },
    ...
}

-- TAG-MEASRESULTIDLEEUTRA-STOP
-- ASN1STOP

```

OPTIONAL,
OPTIONAL

<i>MeasResultIdleEUTRA field descriptions</i>
carrierFreqEUTRA Indicates the E-UTRA carrier frequency.
eutra-PhysCellId Indicates the physical cell identity of an E-UTRA cell.
measIdleResultEUTRA Idle/inactive measurement results for an E-UTRA cell.
measResultsPerCarrierListIdleEUTRA List of idle/inactive measured results for the maximum number of reported E-UTRA carriers.
measResultsPerCellListIdleEUTRA List of idle/inactive measured results for the maximum number of reported best cells for a given E-UTRA carrier.

– *MeasResultIdleNR*

The IE *MeasResultIdleNR* covers the NR measurement results performed in RRC_IDLE and RRC_INACTIVE.

MeasResultIdleNR information element

```
-- ASN1START
-- TAG-MEASRESULTIDLENR-START

MeasResultIdleNR-r16 ::= SEQUENCE {
    measResultServingCell-r16 SEQUENCE {
        rsrp-Result-r16          RSRP-Range                                OPTIONAL,
        rsrq-Result-r16          RSRQ-Range                                OPTIONAL,
        resultsSSB-Indexes-r16    ResultsPerSSB-IndexList-r16             OPTIONAL
    },
    measResultsPerCarrierListIdleNR-r16 SEQUENCE (SIZE (1.. maxFreqIdle-r16)) OF MeasResultsPerCarrierIdleNR-r16  OPTIONAL,
    ...
}

MeasResultsPerCarrierIdleNR-r16 ::= SEQUENCE {
    carrierFreq-r16              ARFCN-ValueNR,
    measResultsPerCellListIdleNR-r16 SEQUENCE (SIZE (1..maxCellMeasIdle-r16)) OF MeasResultsPerCellIdleNR-r16,
    ...
}

MeasResultsPerCellIdleNR-r16 ::= SEQUENCE {
    physCellId-r16              PhysCellId,
    measIdleResultNR-r16          SEQUENCE {
        rsrp-Result-r16          RSRP-Range                                OPTIONAL,
        rsrq-Result-r16          RSRQ-Range                                OPTIONAL,
        resultsSSB-Indexes-r16    ResultsPerSSB-IndexList-r16             OPTIONAL
    },
    ...,
    [[
        validityStatus-r18        MeasurementValidityDuration-r18          OPTIONAL
    ]]
}
```

```
}

ResultsPerSSB-IndexList-r16 ::= SEQUENCE (SIZE (1.. maxNrofIndexesToReport)) OF ResultsPerSSB-IndexIdle-r16

ResultsPerSSB-IndexIdle-r16 ::= SEQUENCE {
    ssb-Index-r16                SSB-Index,
    ssb-Results-r16              SEQUENCE {
        ssb-RSRP-Result-r16      RSRP-Range
        ssb-RSRQ-Result-r16      RSRQ-Range
    }
}

-- TAG-MEASRESULTIDLENR-STOP
-- ASN1STOP
```

MeasResultIdleNR field descriptions
carrierFreq Indicates the NR carrier frequency.
measIdleResultNR Idle/inactive measurement results for an NR cell (optionally including beam level measurements).
measResultServingCell Measured results of the serving cell (i.e., PCell) from idle/inactive measurements.
measResultsPerCellListIdleNR List of idle/inactive measured results for the maximum number of reported best cells for a given NR carrier.
resultsSSB-Indexes Beam level measurement results (indexes and optionally, beam measurements).

– **MeasResultRxTxTimeDiff**

The IE *MeasResultRxTxTimeDiff* is used to provide Rx-Tx time difference measurement result.

MeasResultRxTxTimeDiff information element

```
-- ASN1START
-- TAG-MEASRESULTRXTXTIMEDIFF-START

MeasResultRxTxTimeDiff-r17 ::= SEQUENCE {
    rxTxTimeDiff-ue-r17      RXTxTimeDiff-r17    OPTIONAL,
    ...
}

-- TAG-MEASRESULTRXTXTIMEDIFF-STOP
-- ASN1STOP
```

MeasResultRxTxTimeDiff field descriptions
rxTxTimeDiff-ue indicates the Rx-Tx Time difference measurement at the UE (see clause 5.1.30, TS 38.215 [9]).

— **MeasResultSCG-Failure**

The IE *MeasResultSCG-Failure* is used to provide information regarding failures detected by the UE in (NG)EN-DC and NR-DC.

MeasResultSCG-Failure information element

```
-- ASN1START
-- TAG-MEASRESULTSCG-FAILURE-START

MeasResultSCG-Failure ::=
    measResultPerMOList
    ...
    [[
        locationInfo-r16
    ]]
}

MeasResultList2NR ::=
    SEQUENCE (SIZE (1..maxFreq)) OF MeasResult2NR

-- TAG-MEASRESULTSCG-FAILURE-STOP
-- ASN1STOP
```

— **MeasResultsSL**

The IE *MeasResultsSL* covers measured results for NR sidelink communication/discovery/positioning.

MeasResultsSL information element

```
-- ASN1START
-- TAG-MEASRESULTSSL-START

MeasResultsSL-r16 ::=
    measResultsListSL-r16
    ...
    [[
        measResultNR-SL-r18
    ]]
},
...
}

MeasResultNR-SL-r16 ::=
    SEQUENCE {
```

```
    measResultListCBR-NR-r16      SEQUENCE (SIZE (1.. maxNrofSL-PoolToMeasureNR-r16)) OF MeasResultCBR-NR-r16,
    ...
}

MeasResultCBR-NR-r16 ::= SEQUENCE {
    sl-poolReportIdentity-r16      SL-ResourcePoolID-r16,
    sl-CBR-ResultsNR-r16          SL-CBR-r16,
    ...
}

MeasResultNR-SL-r18 ::= SEQUENCE {
    measResultListCBR-DedicatedSL-PRS-r18 SEQUENCE (SIZE (1..maxNrofDedicatedSL-PRS-PoolToMeas-r18)) OF MeasResultCBR-DedicatedSL-PRS-r18,
    ...
}

MeasResultCBR-DedicatedSL-PRS-r18 ::= SEQUENCE {
    sl-PRS-ResourcePoolID-r18      SL-PRS-ResourcePoolID-r18,
    sl-CBR-ResultsDedicatedSL-PRS-RP-r18 SL-CBR-r16,
    ...
}

-- TAG-MEASRESULTSSL-STOP
-- ASN1STOP
```

MeasResultsSL field descriptions
measResultNR-SL Include the measured results for NR sidelink communication/discovery/positioning.

MeasResultNR-SL field descriptions
measResultListCBR-DedicatedSL-PRS CBR measurement results for NR sidelink positioning for dedicated SL PRS resource pool.
measResultListCBR-NR CBR measurement results for NR sidelink communication/discovery.
sl-poolReportIdentity The identity of the transmission resource pool which is corresponding to the <i>sl-ResourcePoolID</i> configured in a resource pool for NR sidelink communication/discovery.
sl-PRS-ResourcePoolID The ID of the transmission resource pool which is corresponding to the <i>sl-PRS-ResourcePoolID</i> configured in a resource pool for NR sidelink positioning.

— **MeasSequence**

The IE *MeasSequence* is used to configure a recommended sequence for intra/inter-RAT intra/inter-frequency measurement.

MeasSequence information element

```
-- ASN1START
-- TAG-MEASSEQUENCE-START
```

```
MeasSequence-r18 ::= INTEGER (1..maxMeasSequence-r18)
```

```
-- TAG-MEASSEQUENCE-STOP
-- ASN1STOP
```

— *MeasTriggerQuantityEUTRA*

The IE *MeasTriggerQuantityEUTRA* is used to configure the trigger quantity and reporting range for E-UTRA measurements. The RSRP, RSRQ and SINR ranges correspond to *RSRP-Range*, *RSRQ-Range* and *RS-SINR-Range* in TS 36.331 [10], respectively.

MeasTriggerQuantityEUTRA information element

```
-- ASN1START
-- TAG-MEASTRIGGERQUANTITYEUTRA-START
```

```
MeasTriggerQuantityEUTRA ::= CHOICE {
    rsrp          RSRP-RangeEUTRA,
    rsrq          RSRQ-RangeEUTRA,
    sinr          SINR-RangeEUTRA
}
```

```
RSRP-RangeEUTRA ::= INTEGER (0..97)
```

```
RSRQ-RangeEUTRA ::= INTEGER (0..34)
```

```
SINR-RangeEUTRA ::= INTEGER (0..127)
```

```
-- TAG-MEASTRIGGERQUANTITYEUTRA-STOP
-- ASN1STOP
```

— *MeasurementValidityDuration*

The IE *MeasurementValidityDuration* indicates time values for validation of reported idle/inactive and reselection measurements as defined in TS 38.133[14]. Value s5 corresponds to 5 seconds, value s10 corresponds to 10 seconds and so on.

MeasurementValidityDuration information element

```
-- ASN1START
-- TAG-MEASUREMENTVALIDITYDURATION-START
```

```
MeasurementValidityDuration-r18 ::= ENUMERATED {s5, s10, s20, s50, s100, spare3, spare2, spare1}
```

```
-- TAG-MEASUREMENTVALIDITYDURATION-STOP
-- ASN1STOP
```

— *MeasWindowConfig*

The IE *MeasWindowConfig* specifies the effective measurement window configuration for inter-RAT E-UTRA measurement.

***MeasWindowConfig* information element**

```
-- ASN1START
-- TAG-MEASWINDOWCONFIG-START

MeasWindowConfig-r18 ::= SEQUENCE {
    windowOffsetPeriodicity-r18 CHOICE {
        periodicityMs40-r18 INTEGER (0..39),
        periodicityMs80-r18 INTEGER (0..79),
        ...
    },
    windowDuration-r18 ENUMERATED {ms2, ms5, ms5dot5, spare1},
    ...
}

-- TAG-MEASWINDOWCONFIG-STOP
-- ASN1STOP
```

MeasWindowConfig field descriptions
windowDuration Value windowDuration is the measurement window length in ms of effective measurement window. Value <i>ms2</i> corresponds to 2 ms, value <i>ms5</i> corresponds to 5 ms, and Value <i>ms5dot5</i> corresponds to 5.5 ms.
windowOffsetPeriodicity Indicates the periodicity and offset of effective measurement window. The choice determines the periodicity (periodicityMs40 for 40ms and periodicityMs80 for 80 ms). The field value indicates the offset in ms.

— *MobilityStateParameters*

The IE *MobilityStateParameters* contains parameters to determine UE mobility state.

***MobilityStateParameters* information element**

```
-- ASN1START
-- TAG-MOBILITYSTATEPARAMETERS-START

MobilityStateParameters ::= SEQUENCE{
    t-Evaluation ENUMERATED {
        s30, s60, s120, s180, s240, spare3, spare2, spare1},
    t-HystNormal ENUMERATED {
        s30, s60, s120, s180, s240, spare3, spare2, spare1},
    n-CellChangeMedium INTEGER (1..16),
    n-CellChangeHigh INTEGER (1..16)
}
```


-- TAG-MOBILITYSTATEPARAMETERS-STOP
-- ASN1STOP

MobilityStateParameters field descriptions
n-CellChangeHigh The number of cell changes to enter high mobility state. Corresponds to N _{CR_H} in TS 38.304 [20].
n-CellChangeMedium The number of cell changes to enter medium mobility state. Corresponds to N _{CR_M} in TS 38.304 [20].
t-Evaluation The duration for evaluating criteria to enter mobility states. Corresponds to T _{CRmax} in TS 38.304 [20]. Value in seconds, s30 corresponds to 30 s and so on.
t-HystNormal The additional duration for evaluating criteria to enter normal mobility state. Corresponds to T _{CRmaxHyst} in TS 38.304 [20]. Value in seconds, value s30 corresponds to 30 seconds and so on.

— MRB-Identity

The IE *MRB-Identity* is used to identify a multicast MRB used by a UE.

MRB-Identity information element

-- ASN1START
-- TAG-MRB-IDENTITY-START

MRB-Identity-r17 ::= **INTEGER** (1..512)

-- TAG-MRB-IDENTITY-STOP
-- ASN1STOP

— MsgA-ConfigCommon

The IE *MsgA-ConfigCommon* is used to configure the PRACH and PUSCH resource for transmission of MsgA in 2-step random access type procedure.

-- ASN1START
-- TAG-MSGACONFIGCOMMON-START

MsgA-ConfigCommon-r16 ::= **SEQUENCE** {
 rach-ConfigCommonTwoStepRA-r16 RACH-ConfigCommonTwoStepRA-r16,
 msgA-PUSCH-Config-r16 MsgA-PUSCH-Config-r16 **OPTIONAL** --Cond InitialBWPCConfig
}

-- TAG-MSGACONFIGCOMMON-STOP
-- ASN1STOP

MsgA-ConfigCommon field descriptions	
msgA-PUSCH-Config	Configuration of cell-specific MsgA PUSCH parameters which the UE uses for contention-based MsgA PUSCH transmission of this BWP. If the field is not configured for the selected UL BWP, the UE shall use the MsgA PUSCH configuration of initial UL BWP.
rach-ConfigCommonTwoStepRA	Configuration of cell specific random access parameters which the UE uses for contention based and contention free 2-step random access type procedure as well as for 2-step RA type contention based beam failure recovery in this BWP.

Conditional Presence	Explanation
<i>InitialBWPCfg</i>	The field is mandatory present when <i>MsgA-ConfigCommon</i> is configured for the initial uplink BWP, or when <i>MsgA-ConfigCommon</i> is configured for a non-initial uplink BWP and <i>MsgA-ConfigCommon</i> is not configured for the initial uplink BWP, otherwise the field is optionally present, Need S.

- *MsgA-PUSCH-Config*

The IE *MsgA-PUSCH-Config* is used to specify the PUSCH allocation for MsgA in 2-step random access type procedure.

MsgA-PUSCH-Config information element

```
-- ASN1START
-- TAG-MSG5A-PUSCH-CONFIG-START
```

```

MsgA-PUSCH-Config-r16 ::=
    msgA-PUSCH-ResourceGroupA-r16
    msgA-PUSCH-ResourceGroupB-r16
    msgA-TransformPrecoder-r16
    msgA-DataScramblingIndex-r16
    msgA-DeltaPreamble-r16
}

SEQUENCE {
    MsgA-PUSCH-Resource-r16
    MsgA-PUSCH-Resource-r16
    ENUMERATED {enabled, disabled}
    INTEGER (0..1023)
    INTEGER (-1..6)
}

OPTIONAL, -- Cond InitialBWPCConfig
OPTIONAL, -- Cond GroupBConfigured
OPTIONAL, -- Need S
OPTIONAL, -- Need S
OPTIONAL, -- Need R

```

MsgA-PUSCH-Resource-r16 ::=	SEQUENCE {	
msgA-MCS-r16	INTEGER (0..15),	
nrofSlotsMsgA-PUSCH-r16	INTEGER (1..4),	
nrofMsgA-PO-PerSlot-r16	ENUMERATED {one, two, three, six},	
msgA-PUSCH-TimeDomainOffset-r16	INTEGER (1..32),	
msgA-PUSCH-TimeDomainAllocation-r16	INTEGER (1..maxNrofUL-Allocations)	OPTIONAL, -- Need S
startSymbolAndLengthMsgA-PO-r16	INTEGER (0..127)	OPTIONAL, -- Need S
mappingTypeMsgA-PUSCH-r16	ENUMERATED {typeA, typeB}	OPTIONAL, -- Need S
guardPeriodMsgA-PUSCH-r16	INTEGER (0..3)	OPTIONAL, -- Need R
guardBandMsgA-PUSCH-r16	INTEGER (0..1),	
frequencyStartMsgA-PUSCH-r16	INTEGER (0..maxNrofPhysicalResourceBlocks-1),	
nrofPRBs-PerMsgA-PO-r16	INTEGER (1..32),	
nrofMsgA-PO-FDM-r16	ENUMERATED {one, two, four, eight},	
msgA-IntraSlotFrequencyHopping-r16	ENUMERATED {enabled}	OPTIONAL, -- Need R
msgA-HoppingBits-r16	BIT STRING (SIZE(2))	OPTIONAL, -- Cond
FreqHopConfigured		
msgA-DMRS-Config-r16	MsgA-DMRS-Config-r16,	
nrofDMRS-Sequences-r16	INTEGER (1..2),	

```

msgA-Alpha-r16                               ENUMERATED {alpha0, alpha04, alpha05, alpha06,
                                              alpha07, alpha08, alpha09, alpha1}
interlaceIndexFirstPO-MsgA-PUSCH-r16         INTEGER (1..10)
nrofInterlacesPerMsgA-PO-r16                 INTEGER (1..10)
...
}

MsgA-DMRS-Config-r16 ::=
  msgA-DMRS-AdditionalPosition-r16           ENUMERATED {pos0, pos1, pos3}
  msgA-MaxLength-r16                         ENUMERATED {len2}
  msgA-PUSCH-DMRS-CDM-Group-r16              INTEGER (0..1)
  msgA-PUSCH-NrofPorts-r16                   INTEGER (0..1)
  msgA-ScramblingID0-r16                     INTEGER (0..65535)
  msgA-ScramblingID1-r16                     INTEGER (0..65535)
}

-- TAG-MSGA-PUSCH-CONFIG-STOP
-- ASN1STOP

```

OPTIONAL, -- Need S
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R

 OPTIONAL, -- Need S
 OPTIONAL, -- Need S
 OPTIONAL, -- Need S
 OPTIONAL, -- Need S
 OPTIONAL, -- Need S
 OPTIONAL, -- Need S
 OPTIONAL, -- Need S

<i>MsgA-PUSCH-Config</i> field descriptions
<i>msgA-DataScramblingIndex</i> Identifier used to initiate data scrambling (c_init) for msgA PUSCH. If the field is absent the UE applies the value Physical cell ID (<i>physCellID</i>).
<i>msgA-DeltaPreamble</i> Power offset of msgA PUSCH relative to the preamble received target power. Actual value = field value * 2 [dB] (see TS 38.213 [13], clause 7.1).
<i>msgA-PUSCH-ResourceGroupA</i> MsgA PUSCH resources that the UE shall use when performing MsgA transmission using preambles group A. If field is not configured for the selected UL BWP, the UE shall use the MsgA PUSCH configuration for group A of initial UL BWP or RedCap-specific initial UL BWP (if configured) for (e)RedCap UEs.
<i>msgA-PUSCH-ResourceGroupB</i> MsgA PUSCH resources that the UE shall use when performing MsgA transmission using preambles group B.
<i>msgA-TransformPrecoder</i> Enables or disables the transform precoder for MsgA transmission (see clause 6.1.3 of TS 38.214 [19]). If the field is absent in <i>MsgA-ConfigCommon</i> which is configured directly within a BWP (i.e., not within <i>AdditionalRACH-Config</i>), the UE determines whether to enable the transform precoding according to the <i>msg3-transformPrecoder</i> in <i>RACH-ConfigCommon</i> in the configured BWP. If the field is absent in <i>MsgA-ConfigCommon</i> in <i>AdditionalRACH-Config</i> , the UE determines whether to enable the transform precoding according to the <i>msg3-transformPrecoder</i> in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i> .

<i>MsgA-PUSCH-Resource</i> field descriptions
<i>guardBandMsgA-PUSCH</i> PRB-level guard band between FDMed PUSCH occasions (see TS 38.213 [13], clause 8.1A). If interlaced PUSCH is configured, value 0 is applied.
<i>guardPeriodMsgA-PUSCH</i> Guard period between PUSCH occasions in the unit of symbols (see TS 38.213 [13], clause 8.1A).
<i>frequencyStartMsgA-PUSCH</i> Offset of lowest PUSCH occasion in frequency domain with respect to PRB 0 (see TS 38.213 [13], clause 8.1A).
<i>interlaceIndexFirstPO-MsgA-PUSCH</i> Interlace index of the first PUSCH occasion in frequency domain if interlaced PUSCH is configured. For 30kHz SCS only the integers 1, 2, 3, 4, 5 are applicable (see TS 38.213 [13], clause 8.1A).
<i>mappingTypeMsgA-PUSCH</i> PUSCH mapping type A or B. If the field is absent, the UE shall use the parameter <i>msgA-PUSCH-TimeDomainAllocation</i> (see TS 38.213 [13], clause 8.1A).
<i>msgA-Alpha</i> Dedicated alpha value for MsgA PUSCH. If the field is absent, the UE shall use the value of <i>msg3-Alpha</i> if configured, else UE applies value 1 (see TS 38.213 [13], clause 7.1.1).
<i>msgA-DMRS-Config</i> DMRS configuration for msgA PUSCH (see TS 38.213 [13], clause 8.1A and TS 38.214 [19] clause 6.2.2).
<i>msgA-HoppingBits</i> Value of hopping bits to indicate which frequency offset to be used for second hop. See Table 8.3-1 in TS 38.213 [13].
<i>msgA-IntraSlotFrequencyHopping</i> Intra-slot frequency hopping per PUSCH occasion (see TS 38.213 [13], clause 8.1A).
<i>msgA-MCS</i> Indicates the MCS index for msgA PUSCH from the Table 6.1.4.1-1 for DFT-s-OFDM and Table 5.1.3.1-1 for CP-OFDM in TS 38.214 [19].
<i>msgA-PUSCH-TimeDomainAllocation</i> Indicates a combination of start symbol and length and PUSCH mapping type from the TDRA table (<i>PUSCH-TimeDomainResourceAllocationList</i> if provided in <i>PUSCH-ConfigCommon</i> , or else the default Table 6.1.2.1.1-2 in 38.214 [19] is used if <i>pusch-TimeDomainAllocationList</i> is not provided in <i>PUSCH-ConfigCommon</i>). The parameter K2 in the table is not used for msgA PUSCH. The network configures one of <i>msgA-PUSCH-TimeDomainAllocation</i> and <i>startSymbolAndLengthMsgA-PO</i> , but not both. If the field is absent, the UE shall use the value of <i>startSymbolAndLengthMsgA-PO</i> .
<i>msgA-PUSCH-TimeDomainOffset</i> A single time offset with respect to the start of each PRACH slot (with at least one valid RO), counted as the number of slots (based on the numerology of active UL BWP). See TS 38.213 [13], clause 8.1A.
<i>nrofDMRS-Sequences</i> Number of DMRS sequences for MsgA PUSCH for CP-OFDM. In case of single PUSCH configuration or if the DMRS symbols of multiple configurations are not overlapped, if the DMRS resources configured in one PUSCH occasion is no larger than 8 (for <i>len2</i>) or 4 (for <i>len1</i>), then only DMRS port is configured.
<i>nrofInterlacesPerMsgA-PO</i> Number of consecutive interlaces per PUSCH occasion if interlaced PUSCH is configured. For 30kHz SCS only the integers 1, 2, 3, 4, 5 are applicable (see TS 38.213 [13], clause 8.1A).
<i>nrofMsgA-PO-FDM</i> The number of msgA PUSCH occasions FDMed in one time instance (see TS 38.213 [13], clause 8.1A).
<i>nrofMsgA-PO-PerSlot</i> Number of time domain PUSCH occasions in each slot. PUSCH occasions including guard period are contiguous in time domain within a slot (see TS 38.213 [13], clause 8.1A).
<i>nrofPRBs-PerMsgA-PO</i> Number of PRBs per PUSCH occasion (see TS 38.213 [13], clause 8.1A). An eRedcap UE ignores the PRACH and PUSCH resource parameters for transmission of MsgA in 2-step random access type procedure if configured number of PRBs per PUSCH occasion for Preambles group A is larger than the maximum number of PRBs that can be configured per slot or per hop. If configured number of PRBs per PUSCH occasion for Preambles group B is larger than the maximum number of PRBs that can be configured per slot or per hop, an eRedCap UE ignores the PRACH and PUSCH resource parameters for transmission of MsgA using Preambles group B.

<i>nrofSlotsMsgA-PUSCH</i> Number of slots (in active UL BWP numerology) containing one or multiple PUSCH occasions, each slot has the same time domain resource allocation (see TS 38.213 [13], clause 8.1A).
<i>startSymbolAndLengthMsgA-PO</i> An index giving valid combinations of start symbol, length and mapping type as start and length indicator (SLIV) for the first msgA PUSCH occasion, for RRC_CONNECTED UEs in non-initial BWP as described in TS 38.214 [19] clause 6.1.2. The network configures the field so that the allocation does not cross the slot boundary. The number of occupied symbols excludes the guard period. If the field is absent, the UE shall use the value in <i>msgA-PUSCH-TimeDomainAllocation</i> (see TS 38.213 [13], clause 8.1A). The network configures one of <i>msgA-PUSCH-TimeDomainAllocation</i> and <i>startSymbolAndLengthMsgA-PO</i> , but not both. If the field is absent, the UE shall use the value of <i>msgA-PUSCH-TimeDomainAllocation</i> .

<i>MsgA-DMRS-Config</i> field descriptions
<i>msgA-DMRS-AdditionalPosition</i> Indicates the position for additional DM-RS. If the field is absent, the UE applies value <i>pos2</i> .
<i>msgA-MaxLength</i> indicates single-symbol or double-symbol DMRS. If the field is absent, the UE applies value <i>len1</i> .
<i>msgA-PUSCH-DMRS-CDM-Group</i> 1-bit indication of indices of CDM group(s). If the field is absent, then both CDM groups are used.
<i>msgA-PUSCH-NrofPorts</i> 0 indicates 1 port per CDM group, 1 indicates 2 ports per CDM group. If the field is absent then 4 ports per CDM group are used (see TS 38.213 [13], clause 8.1A).
<i>msgA-ScramblingID0</i> UL DMRS scrambling initialization for CP-OFDM. If the field is absent the UE applies the value Physical cell ID (<i>physCellID</i>).
<i>msgA-ScramblingID1</i> UL DMRS scrambling initialization for CP-OFDM. If the field is absent the UE applies the value Physical cell ID (<i>physCellID</i>).

Conditional Presence	Explanation
<i>FreqHopConfigured</i>	This field is mandatory present when the field <i>msgA-IntraSlotFrequencyHopping</i> is configured. Otherwise, the field is absent.
<i>GroupBConfigured</i>	The field is mandatory present if <i>groupB-ConfiguredTwoStepRA</i> is configured in <i>RACH-ConfigCommonTwoStepRA</i> , otherwise the field is absent.
<i>InitialBWPCongig</i>	The field is mandatory present when <i>MsgA-ConfigCommon</i> is configured for the initial uplink BWP, or when <i>MsgA-ConfigCommon</i> is configured for a non-initial uplink BWP and <i>MsgA-ConfigCommon</i> is not configured for the initial uplink BWP, otherwise the field is optionally present, Need S.

– MultiFrequencyBandListNR

The IE *MultiFrequencyBandListNR* is used to configure a list of one or multiple NR frequency bands.

***MultiFrequencyBandListNR* information element**

```
-- ASN1START
-- TAG-MULTIFREQUENCYBANDLISTNR-START
```

```
MultiFrequencyBandListNR ::= SEQUENCE (SIZE (1..maxNrofMultiBands)) OF FreqBandIndicatorNR
```

```
-- TAG-MULTIFREQUENCYBANDLISTNR-STOP
-- ASN1STOP
```

— *MultiFrequencyBandListNR-SIB*

The IE *MultiFrequencyBandListNR-SIB* indicates the list of frequency bands, for which cell (re-)selection parameters are common, and a list of *additionalPmax* and *additionalSpectrumEmission*.

MultiFrequencyBandListNR-SIB information element

```
-- ASN1START
-- TAG-MULTIFREQUENCYBANDLISTNR-SIB-START

MultiFrequencyBandListNR-SIB ::= SEQUENCE (SIZE (1.. maxNrofMultiBands)) OF NR-MultiBandInfo

NR-MultiBandInfo ::= SEQUENCE {
    freqBandIndicatorNR          OPTIONAL, -- Cond OptULNotSIB2
    nr-NS-PmaxList               OPTIONAL   -- Need S
}

MultiFrequencyBandListNR-SIB-v1760 ::= SEQUENCE (SIZE (1.. maxNrofMultiBands)) OF NR-MultiBandInfo-v1760

NR-MultiBandInfo-v1760 ::= SEQUENCE {
    nr-NS-PmaxList-v1760        OPTIONAL   -- Need S
}

MultiFrequencyBandListNR-Aerial-SIB-r18 ::= SEQUENCE (SIZE (1.. maxNrofMultiBands)) OF NR-MultiBandInfoAerial-r18

NR-MultiBandInfoAerial-r18 ::= SEQUENCE {
    freqBandIndicatorNR-Aerial-r18  OPTIONAL, -- Cond OptULNotSIB2
    nr-NS-PmaxListAerial-r18        OPTIONAL   -- Need S
}

-- TAG-MULTIFREQUENCYBANDLISTNR-SIB-STOP
-- ASN1STOP
```

<i>NR-MultiBandInfo</i> field descriptions	
<i>freqBandIndicatorNR</i>	Provides an NR frequency band number as defined in TS 38.101-1 [15], TS 38.101-2 [39], table 5.2-1, and TS 38.101-5 [75], table 5.2.2-1.
<i>freqBandIndicatorNR-Aerial</i>	Provides an NR frequency band number for aerial UE(s), as defined in TS 38.101-1 [15], TS 38.101-2 [39], table 5.2-1, and TS 38.101-5 [75], table 5.2.2-1.
<i>nr-NS-PmaxList</i>	Provides a list of <i>additionalPmax</i> and <i>additionalSpectrumEmission</i> values. If the field is absent the UE uses value 0 for the <i>additionalSpectrumEmission</i> (see TS 38.101-1 [15] table 6.2.3.1-1A, TS 38.101-2 [39], table 6.2.3.1-2, and TS 38.101-5 [75], table 6.2.3.1-1A). This field is ignored by IAB-MT and wide area NCR-MT (see TS 38.106 [79]). The IAB-MT applies output power and emissions requirements, as specified in TS 38.174 [63]. The wide area NCR-MT applies output power and emissions requirements as specified in TS 38.106 [79]. If <i>nr-NS-PmaxList-v1760</i> is present, it shall contain the same number of entries, listed in the same order as in <i>nr-NS-PmaxList</i> (without suffix).
<i>nr-NS-PmaxListAerial</i>	Provides a list of <i>additionalPmax</i> and <i>additionalSpectrumEmission</i> values for aerial UE(s) as defined in TS 38.101-1 [15], clause 6.2K. If the field is absent, the value indicated by the corresponding field within <i>frequencyBandList</i> for the same NR frequency band number applies, if present. Otherwise (i.e. the field is not present for the same NR frequency band number in any of the <i>nr-NS-PmaxList</i> , <i>nr-NS-PmaxList-v1760</i> or <i>nr-NS-PmaxListAerial</i>), the UE uses value 0 for the <i>additionalSpectrumEmission</i> (see TS 38.101-1 [15] table 6.2.3.1-1A, TS 38.101-2 [39], table 6.2.3.1-2, and TS 38.101-5 [75], table 6.2.3.1-1A). This field is ignored by IAB-MT and wide area NCR-MT (see TS 38.106 [79]). The IAB-MT applies output power and emissions requirements, as specified in TS 38.174 [63]. The wide area NCR-MT applies output power and emissions requirements as specified in TS 38.106 [79].

Conditional Presence	Explanation
<i>OptULNotSIB2</i>	The field is absent for <i>SIB2</i> and is mandatory present if the parent IE is included in <i>SIB4</i> or <i>frequencyInfoDL-SIB</i> . Otherwise, if the field is absent in <i>frequencyInfoUL-SIB</i> in <i>UplinkConfigCommonSIB</i> , the UE will use the frequency band indicated in <i>frequencyInfoDL-SIB</i> in <i>DownlinkConfigCommonSIB</i> .

– *MUSIM-GapConfig*

The IE *MUSIM-GapConfig* specifies the MUSIM gap configuration and controls setup/release of MUSIM gaps.

MUSIM-GapConfig information element

```
-- ASN1START
-- TAG-MUSIM-GAPCONFIG-START
```

```
MUSIM-GapConfig-r17 ::=
    musim-GapToReleaseList-r17          SEQUENCE {
    musim-GapToAddModList-r17           SEQUENCE (SIZE (1..3)) OF MUSIM-GapId-r17          OPTIONAL, -- Need N
    musim-AperiodicGap-r17              SEQUENCE (SIZE (1..3)) OF MUSIM-Gap-r17          OPTIONAL, -- Need N
    ...,                                MUSIM-GapInfo-r17                                OPTIONAL, -- Need N
    [[
    musim-GapToAddModListExt-v1820      SEQUENCE (SIZE (1..3)) OF MUSIM-GapExt-v1820      OPTIONAL, -- Need N
    musim-GapKeep-r18                  ENUMERATED {true}                                OPTIONAL, -- Need N
    ]]
}

MUSIM-Gap-r17 ::=
    musim-GapId-r17                    SEQUENCE {
    musim-GapInfo-r17                  MUSIM-GapId-r17,
                                     MUSIM-GapInfo-r17
```

```
}
MUSIM-GapExt-v1820 ::=
    gapPriority-r18
}
-- TAG-MUSIM-GAPCONFIG-STOP
-- ASN1STOP
```

MUSIM-GapConfig field descriptions
musim-AperiodicGap Indicates the MUSIM aperiodic gap as specified in TS 38.133 [14] clause 9.1.10. If UE indicates the <i>musim-Starting-SFN-AndSubframe</i> when requesting aperiodic gap the network can only configure the aperiodic gap with the same start point or no aperiodic gap. If the field <i>musim-Starting-SFN-AndSubframe</i> is absent for aperiodic gap, network can configure any timing as the starting point for aperiodic gap or configure no aperiodic gap.
musim-GapInfo Indicates the values for <i>musim-GapLength</i> and <i>musim-GapRepetitionAndOffset</i> . When network provides periodic gap, network always signals the <i>musim-GapLength</i> and <i>musim-GapRepetitionAndOffset</i> as indicated by the UE's preferred MUSIM gap configuration.
musim-GapKeep Indicates the UE is allowed to use "keep solution" for colliding MUSIM periodic/aperiodic gaps. If "keep solution" is not granted, collisions between MUSIM periodic gaps are resolved based on the assigned MUSIM gap priorities as specified in TS 38.133[14].
musim-GapToAddModListExt Indicates the priority of MUSIM periodic gap(s). If the network includes <i>musim-GapToAddModListExt-v1820</i> , it includes the same number of entries, and listed in the same order, as in <i>musim-GapToAddModList-r17</i> . For the priority of MUSIM aperiodic gap, the MUSIM aperiodic gap is always kept (not dropped) from UE perspective in case of collisions with other gaps (i.e. all gaps including MUSIM gaps, etc).
musim-GapToAddModList List of MUSIM periodic gap patterns to add or modify.
musim-GapToReleaseList List of MUSIM periodic gap patterns to release.

— MUSIM-GapId

The IE *MUSIM-GapId* is used to identify UE periodic MUSIM gap(s) to add, modify or release.

MUSIM-GapId information element

```
-- ASN1START
-- TAG-MUSIM-GAPID-START

MUSIM-GapId-r17 ::=
    INTEGER (0..2)

-- TAG-MUSIM-GAPID-STOP
-- ASN1STOP
```


— *MUSIM-GapInfo*

The IE *MUSIM-GapInfo* is used to indicate MUSIM gap parameters.

MUSIM-GapInfo information element

```
-- ASN1START
-- TAG-MUSIM-GAPINFO-START

MUSIM-GapInfo-r17 ::= SEQUENCE {
    musim-Starting-SFN-AndSubframe-r17 MUSIM-Starting-SFN-AndSubframe-r17 OPTIONAL, -- Cond aperiodic
    musim-GapLength-r17 ENUMERATED {ms3, ms4, ms6, ms10, ms20} OPTIONAL, -- Cond gapSetup
    musim-GapRepetitionAndOffset-r17 CHOICE {
        ms20-r17 INTEGER (0..19),
        ms40-r17 INTEGER (0..39),
        ms80-r17 INTEGER (0..79),
        ms160-r17 INTEGER (0..159),
        ms320-r17 INTEGER (0..319),
        ms640-r17 INTEGER (0..639),
        ms1280-r17 INTEGER (0..1279),
        ms2560-r17 INTEGER (0..2559),
        ms5120-r17 INTEGER (0..5119),
        ...
    } OPTIONAL -- Cond periodic
}

MUSIM-Starting-SFN-AndSubframe-r17 ::= SEQUENCE {
    starting-SFN-r17 INTEGER (0..1023),
    startingSubframe-r17 INTEGER (0..9)
}

-- TAG-MUSIM-GAPINFO-STOP
-- ASN1STOP
```

MUSIM-GapInfo field descriptions
musim-GapLength Indicates the length of the UE's MUSIM gap as specified in TS 38.133 [14] clause 9.1.10. This field is mandatory present for both periodic gap and aperiodic gap preference indication.
musim-GapRepetitionAndOffset Indicates the gap repetition period in ms and gap offset in number of subframes for the periodic MUSIM gap as specified in TS 38.133 [14] clause 9.1.10. This field is mandatory present for the periodic MUSIM gap preference indication.
musim-Starting-SFN-AndSubframe Indicates gap starting position for the aperiodic MUSIM gap. This field is optionally present for the aperiodic MUSIM gap preference indication.
starting-SFN Indicates gap starting SFN number for the aperiodic MUSIM gap.
startingSubframe Indicates gap starting subframe number for the aperiodic MUSIM gap.

Conditional Presence	Explanation
<i>aperiodic</i>	This field is mandatory present in case of aperiodic MUSIM gap configuration. Otherwise it is absent.
<i>gapSetup</i>	The field is mandatory present upon configuration of a new MUSIM gap. The field is optionally present, Need M, otherwise.
<i>periodic</i>	This field is mandatory present in case of periodic MUSIM gap configuration. Otherwise it is absent.

— *N3C-IndirectPathConfigRelay*

The IE *N3C-IndirectPathConfigRelay* indicates the N3C indirect path related configuration used by N3C relay UE in MP.

N3C-IndirectPathConfigRelay information element

```
-- ASN1START
-- TAG-N3C-INDIRECTPATHCONFIGRELAY-START

N3C-IndirectPathConfigRelay-r18 ::= SEQUENCE {
    n3c-MappingToReleaseList-r18 SEQUENCE (SIZE (1..maxLC-ID)) OF SL-RemoteUE-RB-Identity-r17 OPTIONAL, -- Need N
    n3c-MappingToAddModList-r18 SEQUENCE (SIZE (1..maxLC-ID)) OF N3C-MappingConfig-r18 OPTIONAL, -- Need N
    ...
}

N3C-MappingConfig-r18 ::= SEQUENCE {
    n3c-RemoteUE-RB-Identity-r18 SL-RemoteUE-RB-Identity-r17,
    n3c-RLC-ChannelUu-r18 Uu-RelayRLC-ChannelID-r17,
    ...
}

-- TAG-N3C-INDIRECTPATHCONFIGRELAY-STOP
-- ASN1STOP
```

<i>N3C-IndirectPathConfigRelay</i> field descriptions
<i>n3c-MappingToAddModList</i> Indicates the list of mappings between the bearer identity of the N3C remote UE and the Uu Relay RLC channel to be added or modified. The Uu Relay RLC channel is associated to only one N3C remote UE's end-to-end bearer.
<i>n3c-MappingToReleaseList</i> Indicates the list of mappings between the bearer identity of the N3C remote UE and the Uu Relay RLC channel to be released.

— *N3C-IndirectPathAddChange*

The IE *N3C-IndirectPathAddChange* indicates the N3C indirect path related configuration used by N3C remote UE.

N3C-IndirectPathAddChange information element

```
-- ASN1START
-- TAG-N3C-INDIRECTPATHADDCHANGE-START
```

```
N3C-IndirectPathAddChange-r18 ::= SEQUENCE {
    n3c-RelayIdentification-r18      N3C-RelayUE-Info-r18,
    ...
}

-- TAG-N3C-INDIRECTPATHADDCCHANGE-STOP
-- ASN1STOP
```

N3C-IndirectPathAddChange field descriptions
n3c-RelayIdentification Indicates the NCGI and C-RNTI of N3C relay UE.

— *N3C-RelayUE-Info*

The IE *N3C-RelayUE-Info* includes the information of N3C relay UE.

N3C-RelayUE-Info information element

```
-- ASN1START
-- TAG-N3CRELAYUEINFO-START

N3C-RelayUE-Info-r18 ::= SEQUENCE {
    n3c-CellGlobalId-r18      SEQUENCE {
        n3c-PLMN-Id-r18      PLMN-Identity,
        n3c-CellIdentity-r18  CellIdentity
    },
    n3c-C-RNTI-r18            RNTI-Value
}

-- TAG-N3CRELAYUEINFO-STOP
-- ASN1STOP
```

— *NCR-AperiodicFwdConfig*

The IE *NCR-AperiodicFwdConfig* is used to configure a list of aperiodic forwarding time resources for NCR-Fwd access link (see TS 38.212 [17], clause 7.3.1.3.9 and TS 38.213 [13], clause 20).

NCR-AperiodicFwdConfig information element

```
-- ASN1START
-- TAG-NCR-APERIODICFWDCONFIG-START

NCR-AperiodicFwdConfig-r18 ::= SEQUENCE {
    aperiodicFwdTimeRsrcToAddModList-r18 SEQUENCE (SIZE (1..maxNrofAperiodicFwdTimeResource-r18)) OF NCR-AperiodicFwdTimeResource-r18
}
```

```
aperiodicFwdTimeRsrcToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofAperiodicFwdTimeResource-r18)) OF NCR-AperiodicFwdTimeResourceId-r18
    OPTIONAL, -- Need N
referenceSCS-r18 SubcarrierSpacing OPTIONAL, -- Need N
aperiodicBeamFieldWidth-r18 INTEGER (1..6) OPTIONAL, -- Need M
numberOffields-r18 INTEGER (1..32) OPTIONAL, -- Need M
...
}

NCR-AperiodicFwdTimeResource-r18 ::= SEQUENCE {
    aperiodicFwdTimeRsrcId-r18 NCR-AperiodicFwdTimeResourceId-r18,
    slotOffsetAperiodic-r18 INTEGER (0..14),
    symbolOffset-r18 INTEGER (0..maxNrofSymbols-1),
    durationInSymbols-r18 INTEGER (1..28),
    ...
}

NCR-AperiodicFwdTimeResourceId-r18 ::= INTEGER (0..maxNrofAperiodicFwdTimeResource-1-r18)

-- TAG-NCR-APERIODICFWDCONFIG-STOP
-- ASN1STOP
```

NCR-AperiodicFwdConfig field descriptions	
aperiodicBeamFieldWidth	Indicates the bitwidth of each beam index field in DCI carrying aperiodic beam indication.
aperiodicFwdTimeRsrcToAddModList	List of aperiodic forwarding time resources to be added or modified.
durationInSymbols	Indicates the time duration in number of symbols.
numberOffields	Indicates the number of time resource fields in DCI carrying aperiodic beam indication.
referenceSCS	Indicates the reference subcarrier spacing for all the time resources in the list. Only values <i>kHz15</i> , <i>kHz30</i> , <i>kHz60</i> , <i>kHz120</i> and <i>kHz240</i> are applicable.
slotOffsetAperiodic	Indicates the slot offset used to define the start slot of aperiodic time resource.
symbolOffset	Indicates the symbol offset in one slot.

— *NCR-FwdConfig*

The IE *NCR-FwdConfig* contains configuration related to periodic, aperiodic and semi-persistent beam indication for NCR-Fwd access link.

NCR-FwdConfig information element

```
-- ASN1START
-- TAG-NCR-FWDCONFIG-START
```

```

NCR-FwdConfig-r18 ::= SEQUENCE {
    periodicFwdRsrcSetToAddModList-r18 SEQUENCE (SIZE (1..maxNrofPeriodicFwdResourceSet-r18)) OF NCR-PeriodicFwdResourceSet-r18
    periodicFwdRsrcSetToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofPeriodicFwdResourceSet-r18)) OF NCR-PeriodicFwdResourceSetId-r18
    aperiodicFwdConfig-r18 SetupRelease {NCR-AperiodicFwdConfig-r18}
    semiPersistentFwdRsrcSetToAddModList-r18 SEQUENCE (SIZE (1..maxNrofSemiPersistentFwdResourceSet-r18)) OF NCR-SemiPersistentFwdResourceSet-r18
    semiPersistentFwdRsrcSetToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofSemiPersistentFwdResourceSet-r18)) OF NCR-SemiPersistentFwdResourceSetId-r18
    ...
}
-- TAG-NCR-FWDCONFIG-STOP
-- ASN1STOP

```

<i>NCR-FwdConfig</i> field descriptions
<i>aperiodicFwdConfig</i> Aperiodic time resource configuration for beam indication for NCR. The configuration includes a list of time domain resources that can be selected for aperiodic forwarding.
<i>periodicFwdRsrcSetToAddModList</i> List of periodic forwarding resource configurations to be added or modified.
<i>periodicFwdRsrcSetToReleaseList</i> List of periodic forwarding resource configurations to be released.
<i>semiPersistentFwdRsrcSetToAddModList</i> List of semi-persistent forwarding resource configurations to be added or modified.

– *NCR-PeriodicityAndOffset*

The IE *NCR-PeriodicityAndOffset* is used to indicate the periodicity (in slot or ms) and offset (in slot) for periodic forwarding resource and semi-persistent forwarding resource.

NCR-PeriodicityAndOffset information element

```

-- ASN1START
-- TAG-NCR-PERIODICITYANDOFFSET-START

NCR-PeriodicityAndOffset-r18 ::= CHOICE {
    slot NCR-SlotPeriodicityAndSlotOffset-r18,
    ms NCR-MsPeriodicityAndSlotOffset-r18
}

NCR-SlotPeriodicityAndSlotOffset-r18 ::= CHOICE {
    sl1 NULL,
    sl2 INTEGER(0..1),
    sl4 INTEGER(0..3),
    sl5 INTEGER(0..4),
    sl8 INTEGER(0..7),
    sl10 INTEGER(0..9),
    sl16 INTEGER(0..15),

```

```

sl20      INTEGER(0..19),
sl32      INTEGER(0..31),
sl40      INTEGER(0..39),
sl64      INTEGER(0..63),
sl80      INTEGER(0..79),
sl128     INTEGER(0..127),
sl160     INTEGER(0..159),
sl256     INTEGER(0..255),
sl320     INTEGER(0..319),
sl512     INTEGER(0..511),
sl640     INTEGER(0..639),
sl1024    INTEGER(0..1023),
sl1280    INTEGER(0..1279),
sl2560    INTEGER(0..2559),
sl5120    INTEGER(0..5119),
sl10240   INTEGER(0..10239),
...
}

NCR-MsPeriodicityAndSlotOffset-r18 ::= CHOICE {
  ms1      INTEGER(0..15),
  ms2      INTEGER(0..31),
  ms4      INTEGER(0..63),
  ms5      INTEGER(0..79),
  ms8      INTEGER(0..127),
  ms10     INTEGER(0..159),
  ms16     INTEGER(0..255),
  ms20     INTEGER(0..319),
  ms32     INTEGER(0..511),
  ms40     INTEGER(0..639),
  ms64     INTEGER(0..1023),
  ms80     INTEGER(0..1279),
  ms128    INTEGER(0..2047),
  ms160    INTEGER(0..2559),
  ms256    INTEGER(0..4095),
  ms320    INTEGER(0..5119),
  ms512    INTEGER(0..8191),
  ms640    INTEGER(0..10239),
  ms1024   INTEGER(0..16383),
  ms1280   INTEGER(0..20479),
  ms2560   INTEGER(0..40959),
  ms5120   INTEGER(0..81919),
  ms10240  INTEGER(0..163839),
  ...
}

-- TAG-NCR-PERIODICITYANDOFFSET-STOP
-- ASN1STOP

```

– *NCR-PeriodicFwdResourceSet*

The IE *NCR-PeriodicFwdResourceSet* is used to configure a list of periodic forwarding resources for NCR-Fwd access link (see TS 38.213 [13], clause 20). Each periodic forwarding configuration includes a list of periodic forwarding resources, a common periodicity and a common reference SCS.

***NCR-PeriodicFwdResourceSet* information element**

```
-- ASN1START
-- TAG-NCR-PERIODICFWDRESOURCESET-START

NCR-PeriodicFwdResourceSet-r18 ::= SEQUENCE {
    periodicFwdRsrcSetId-r18          NCR-PeriodicFwdResourceSetId-r18,
    periodicFwdRsrcToAddModList-r18  SEQUENCE (SIZE (1..maxNrofPeriodicFwdResource-r18)) OF NCR-PeriodicFwdResource-r18
                                     OPTIONAL, -- Need N
    periodicFwdRsrcToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofPeriodicFwdResource-r18)) OF NCR-PeriodicFwdResourceId-r18
                                     OPTIONAL, -- Need N
    referenceSCS-r18                 SubcarrierSpacing
                                     OPTIONAL, -- Need M
    priorityFlag-r18                 ENUMERATED {true}
                                     OPTIONAL, -- Need R
    ...
}

NCR-PeriodicFwdResource-r18 ::= SEQUENCE {
    periodicFwdRsrcId-r18          NCR-PeriodicFwdResourceId-r18,
    beamIndex-r18                 INTEGER (0..63),
    periodicTimeRsrc-r18          SEQUENCE {
        periodicityAndOffset-r18  NCR-PeriodicityAndOffset-r18,
        symbolOffset-r18         INTEGER (0..maxNrofSymbols-1),
        durationInSymbols-r18    INTEGER (1..112)
    },
    ...
}

NCR-PeriodicFwdResourceId-r18 ::= INTEGER (0..maxNrofPeriodicFwdResource-1-r18)

-- TAG-NCR-PERIODICFWDRESOURCESET-STOP
-- ASN1STOP
```

<i>NCR-PeriodicFwdResourceSet</i> field descriptions
<i>beamIndex</i> Indicates the logical beam index for NCR-Fwd access link. NCR-Fwd is assumed to be ON over the indicated time domain resource if there is beam indication.
<i>durationInSymbols</i> Indicates the time duration in number of symbols.
<i>periodicFwdRsrcToAddModList</i> List of periodic forwarding resources to be added or modified.
<i>periodicityAndOffset</i> Indicates the periodicity and slot offset for the periodic forwarding resource. All the periodic forwarding resources configured within the same resource set should have the same periodicity. If the periodicity is expressed in [ms], the value range of slot offset is from 0 to Periodicity[ms] * referenceSCS[kHz]/15 -1.
<i>priorityFlag</i> Indicates the priority for the list of periodic forwarding resources, as specified in TS 38.213 [13], clause 20.
<i>referenceSCS</i> Indicates the reference subcarrier spacing for all the time resources in the list. Only values <i>kHz15</i> , <i>kHz30</i> , <i>kHz60</i> , <i>kHz120</i> and <i>kHz240</i> are applicable.
<i>symbolOffset</i> Indicates the symbol offset in one slot.

– *NCR-PeriodicFwdResourceSetId*

The IE *NCR-PeriodicFwdResourceSetId* is used to identify one *NCR-PeriodicFwdResourceSet*.

***NCR-PeriodicFwdResourceSetId* information element**

```
-- ASN1START
-- TAG-NCR-PERIODICFWDRESOURCESETID-START

NCR-PeriodicFwdResourceSetId-r18 ::= INTEGER (0..maxNrofPeriodicFwdResourceSet-1-r18)

-- TAG-NCR-PERIODICFWDRESOURCESETID-STOP
-- ASN1STOP
```

– *NCR-SemiPersistentFwdResourceSet*

The IE *NCR-SemiPersistentFwdResourceSet* is used to configure a list of semi-persistent forwarding resources for NCR-Fwd access link (see TS 38.213 [13], clause 20). Each semi-persistent forwarding resource configuration includes a list of semi-persistent forwarding resources, a common periodicity and a common reference SCS.

***NCR-SemiPersistentFwdResourceSet* information element**

```
-- ASN1START
-- TAG-NCR-SEMI-PERSISTENT-FWD-RESOURCESET-START

NCR-SemiPersistentFwdResourceSet-r18 ::= SEQUENCE {
    semiPersistentFwdRsrcSetId-r18          NCR-SemiPersistentFwdResourceSetId-r18,
    semiPersistentFwdRsrcToAddModList-r18  SEQUENCE (SIZE (1..maxNrofSemiPersistentFwdResource-r18)) OF
```



```

        NCR-SemiPersistentFwdResource-r18
semiPersistentFwdRsrcToReleaseList-r18  SEQUENCE (SIZE (1..maxNrofSemiPersistentFwdResource-r18)) OF
        NCR-SemiPersistentFwdResourceId-r18
referenceSCS-r18                        SubcarrierSpacing
priorityFlag-r18                       ENUMERATED {true}
        ...
    }

NCR-SemiPersistentFwdResource-r18 ::= SEQUENCE {
    semiPersistentFwdRsrcId-r18          NCR-SemiPersistentFwdResourceId-r18,
    beamIndex-r18                       INTEGER (0..63),
    semiPersistentTimeRsrc-r18          SEQUENCE {
        periodicityAndOffset-r18        NCR-PeriodicityAndOffset-r18,
        symbolOffset-r18               INTEGER (0..maxNrofSymbols-1),
        durationInSymbols-r18          INTEGER (1..112)
    },
    ...
}

NCR-SemiPersistentFwdResourceId-r18 ::= INTEGER (0..maxNrofSemiPersistentFwdResource-1-r18)

-- TAG-NCR-SEMI-PERSISTENT-FWD-RESOURCE-SET-STOP
-- ASN1STOP

```

NCR-SemiPersistentFwdResourceSet field descriptions	
beamIndex	Indicates logical beam index for NCR-Fwd access link. NCR-Fwd is assumed to be ON over the indicated time domain resource if there is beam indication.
durationInSymbols	Indicates the time duration in number of symbols.
periodicityAndOffset	Indicates the periodicity and slot offset for the semi-persistent forwarding resource. All the semi-persistent forwarding resources configured within the same resource set should have the same periodicity. If the periodicity is expressed in [ms], the value range of slot offset is from 0 to Periodicity[ms] * referenceSCS[kHz]/15 -1.
priorityFlag	Indicates the priority for the list of semi-persistent forwarding resources, as specified in TS 38.213 [13], clause 20.
referenceSCS	Indicates the reference subcarrier spacing for all the time resources in the list. Only values <i>kHz15</i> , <i>kHz30</i> , <i>kHz60</i> , <i>kHz120</i> and <i>kHz240</i> are applicable.
semiPersistentFwdRsrcToAddModList	List of semi-persistent forwarding resources to be added or modified.
symbolOffset	Indicates the symbol offset in one slot.

– NCR-SemiPersistentFwdResourceSetId

The IE *NCR-SemiPersistentFwdResourceSetId* is used to identify one *NCR-SemiPersistentFwdResourceSet*.

***NCR-SemiPersistentFwdResourceSetId* information element**

```
-- ASN1START
-- TAG-NCR-SEMIPERSISTENTFWDRESOURCESETID-START

NCR-SemiPersistentFwdResourceSetId-r18 ::= INTEGER (0..maxNrofSemiPersistentFwdResourceSet-1-r18)

-- TAG-NCR-SEMIPERSISTENTFWDRESOURCESETID-STOP
-- ASN1STOP
```

— ***NeedForGapsConfigNR***

The IE *NeedForGapsConfigNR* contains configuration related to the reporting of measurement gap requirement information.

***NeedForGapsConfigNR* information element**

```
-- ASN1START
-- TAG-NeedForGapsConfigNR-START

NeedForGapsConfigNR-r16 ::= SEQUENCE {
    requestedTargetBandFilterNR-r16 SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR OPTIONAL -- Need R
}

-- TAG-NeedForGapsConfigNR-STOP
-- ASN1STOP
```

<i>NeedForGapsConfigNR</i> field descriptions
<i>requestedTargetBandFilterNR</i> Indicates the target NR bands that the UE is requested to report the gap requirement information.

— ***NeedForGapsInfoNR***

The IE *NeedForGapsInfoNR* indicates whether measurement gap is required for the UE to perform SSB based measurements on an NR target band while NR-DC or NE-DC is not configured.

***NeedForGapsInfoNR* information element**

```
-- ASN1START
-- TAG-NeedForGapsInfoNR-START

NeedForGapsInfoNR-r16 ::= SEQUENCE {
    intraFreq-needForGap-r16 NeedForGapsIntraFreqList-r16,
    interFreq-needForGap-r16 NeedForGapsBandListNR-r16
}
```

```

NeedForGapsIntraFreqList-r16 ::=
    SEQUENCE (SIZE (1.. maxNrofServingCells)) OF NeedForGapsIntraFreq-r16

NeedForGapsBandListNR-r16 ::=
    SEQUENCE (SIZE (1..maxBands)) OF NeedForGapsNR-r16

NeedForGapsIntraFreq-r16 ::=
    SEQUENCE {
        servCellId-r16
        gapIndicationIntra-r16
    }

NeedForGapsNR-r16 ::=
    SEQUENCE {
        bandNR-r16
        gapIndication-r16
    }

-- TAG-NeedForGapsInfoNR-STOP
-- ASN1STOP

```

NeedForGapsInfoNR field descriptions
intraFreq-needForGap Indicates the measurement gap requirement information for NR intra-frequency measurement.
interFreq-needForGap Indicates the measurement gap requirement information for NR inter-frequency measurement.

NeedForGapsIntraFreq field descriptions
servCellId Indicates the serving cell which contains the target SSB (associated with the initial DL BWP) to be measured.
gapIndicationIntra Indicates whether measurement gap is required for the UE to perform intra-frequency SSB based measurements on the concerned serving cell. Value <i>gap</i> indicates that a measurement gap is needed if any of the UE configured BWPs (except the BWP(s) configured with <i>servingCellMO</i> associated with NCD-SSB) do not contain the frequency domain resources of the SSB associated to the initial DL BWP (CD-SSB). Value <i>no-gap</i> indicates a measurement gap is not needed to measure the SSB associated to the initial DL BWP (CD-SSB) for all configured BWPs (except the BWP(s) configured with <i>servingCellMO</i> associated with NCD-SSB), no matter the SSB is within the configured BWP or not. This field shall be set to 'no-gap' for the serving cell(s) belonging to the corresponding band(s) where <i>bwpOperationMeasWithoutInterrupt-r18</i> is supported by the UE.

NeedForGapsNR field descriptions
bandNR Indicates the NR target band to be measured.
gapIndication Indicates whether measurement gap is required for the UE to perform SSB based measurements on the concerned NR target band while NR-DC or NE-DC is not configured. The UE determines this information based on the resultant configuration of the <i>RRCReconfiguration</i> or <i>RRCResume</i> message that triggers this response. Value <i>gap</i> indicates that a measurement gap is needed, value <i>no-gap</i> indicates a measurement gap is not needed.

— *NeedForGapNCSG-ConfigEUTRA*

The IE *NeedForGapNCSG-ConfigEUTRA* contains configuration related to the reporting of measurement gap and NCSG requirement information.

***NeedForGapNCSG-ConfigEUTRA* information element**

```
-- ASN1START
-- TAG-NeedForGapNCSG-ConfigEUTRA-START

NeedForGapNCSG-ConfigEUTRA-r17 ::= SEQUENCE {
    requestedTargetBandFilterNCSG-EUTRA-r17 SEQUENCE (SIZE (1..maxBandsEUTRA)) OF FreqBandIndicatorEUTRA OPTIONAL -- Need R
}

-- TAG-NeedForGapNCSG-ConfigEUTRA-STOP
-- ASN1STOP
```

<i>NeedForGapNCSG-ConfigEUTRA</i> field descriptions
<i>requestedTargetBandFilterNCSG-EUTRA</i> Indicates the target E-UTRA bands that the UE is requested to report the measurement gap and NCSG requirement information.

— *NeedForGapNCSG-ConfigNR*

The IE *NeedForGapNCSG-ConfigNR* contains configuration related to the reporting of measurement gap and NCSG requirement information.

***NeedForGapNCSG-ConfigNR* information element**

```
-- ASN1START
-- TAG-NEEDFORGAPNCSG-CONFIGNR-START

NeedForGapNCSG-ConfigNR-r17 ::= SEQUENCE {
    requestedTargetBandFilterNCSG-NR-r17 SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR OPTIONAL -- Need R
}

-- TAG-NEEDFORGAPNCSG-CONFIGNR-STOP
-- ASN1STOP
```

<i>NeedForGapNCSG-ConfigNR</i> field descriptions
<i>requestedTargetBandFilterNCSG-NR</i> Indicates the target NR bands that the UE is requested to report the measurement gap and NCSG requirement information.

— *NeedForGapNCSG-InfoEUTRA*

The IE *NeedForGapNCSG-InfoEUTRA* indicates whether measurement gap or NCSG is required for the UE to perform measurements on an E-UTRA target band while NR-DC or NE-DC is not configured.

NeedForGapNCSG-InfoEUTRA information element

```
-- ASN1START
-- TAG-NEEDFORGAPNCSG-INFOEUTRA-START

NeedForGapNCSG-InfoEUTRA-r17 ::= SEQUENCE {
    needForNCSG-EUTRA-r17 SEQUENCE (SIZE (1..maxBandsEUTRA)) OF NeedForNCSG-EUTRA-r17
}

NeedForNCSG-EUTRA-r17 ::= SEQUENCE {
    bandEUTRA-r17 FreqBandIndicatorEUTRA,
    gapIndication-r17 ENUMERATED {gap, ncsg, nogap-noncsg}
}

-- TAG-NEEDFORGAPNCSG-INFOEUTRA-STOP
-- ASN1STOP
```

<i>NeedForGapNCSG-InfoEUTRA</i> field descriptions
<i>needForNCSG-EUTRA</i> Indicates the measurement gap and NCSG requirement information for E-UTRA measurement.

<i>NeedForNCSG-EUTRA</i> field descriptions
<i>bandEUTRA</i> Indicates the E-UTRA target band to be measured.
<i>gapIndication</i> Indicates whether measurement gap or NCSG is required for the UE to perform measurements on the concerned E-UTRA target band while NR-DC or NE-DC is not configured. The UE determines this information based on the resultant configuration of the <i>RRCReconfiguration</i> message or <i>RRCResume</i> message that triggers this response. Value <i>gap</i> indicates that a measurement gap is needed, value <i>ncsg</i> indicates that NCSG is needed, value <i>nogap-noncsg</i> indicates neither a measurement gap nor a NCSG is needed. Value <i>nogap-noncsg</i> also indicates interruption is not needed.

— *NeedForGapNCSG-InfoNR*

The IE *NeedForGapNCSG-InfoNR* indicates whether measurement gap or NCSG is required for the UE to perform SSB based measurements on an NR target band while NR-DC or NE-DC is not configured.

NeedForGapNCSG-InfoNR information element

```
-- ASN1START
-- TAG-NEEDFORGAPNCSG-INFONR-START
```

```
NeedForGapNCSG-InfoNR-r17 ::= SEQUENCE {
    intraFreq-needForNCSG-r17      NeedForNCSG-IntraFreqList-r17,
    interFreq-needForNCSG-r17      NeedForNCSG-BandListNR-r17
}

NeedForNCSG-IntraFreqList-r17 ::= SEQUENCE (SIZE (1.. maxNrofServingCells)) OF NeedForNCSG-IntraFreq-r17

NeedForNCSG-BandListNR-r17 ::= SEQUENCE (SIZE (1..maxBands)) OF NeedForNCSG-NR-r17

NeedForNCSG-IntraFreq-r17 ::= SEQUENCE {
    servCellId-r17                ServCellIndex,
    gapIndicationIntra-r17         ENUMERATED {gap, ncsg, nogap-noncsg}
}

NeedForNCSG-NR-r17 ::= SEQUENCE {
    bandNR-r17                    FreqBandIndicatorNR,
    gapIndication-r17             ENUMERATED {gap, ncsg, nogap-noncsg}
}

-- TAG-NEEDFORGAPNCSG-INFONR-STOP
-- ASN1STOP
```

NeedForGapNCSG-InfoNR field descriptions
intraFreq-needForNCSG Indicates the measurement gap and NCSG requirement information for NR intra-frequency measurement.
interFreq-needForNCSG Indicates the measurement gap and NCSG requirement information for NR inter-frequency measurement.

NeedForNCSG-IntraFreq field descriptions
servCellId Indicates the serving cell which contains the target SSB (associated with the initial DL BWP) to be measured.
gapIndicationIntra Indicates whether measurement gap or NCSG is required for the UE to perform intra-frequency SSB based measurements on the concerned serving cell. Value <i>gap</i> indicates that a measurement gap is needed if any of the UE configured BWPs (except the BWP(s) configured with <i>servingCellMO</i> associated with NCD-SSB) do not contain the frequency domain resources of the SSB associated to the initial DL BWP (CD-SSB). Value <i>ncsg</i> indicates that a NCSG is needed if any of the UE configured BWPs do not contain the frequency domain resources of the SSB associated to the initial DL BWP. Value <i>nogap-noncsg</i> indicates that neither a measurement gap nor a NCSG is needed to measure the SSB associated to the initial DL BWP (CD-SSB) for all configured BWPs (except the BWP(s) configured with <i>servingCellMO</i> associated with NCD-SSB), no matter the SSB is within the configured BWP or not. This field shall be set to ' <i>nogap-noncsg</i> ' for the serving cell cell(s) belonging to the corresponding band(s) where <i>bwpOperationMeasWithoutInterrupt-r18</i> is supported by the UE. Value <i>nogap-noncsg</i> also indicates interruption is not needed.

NeedForNCSG-NR field descriptions
bandNR Indicates the NR target band to be measured.
gapIndication Indicates whether measurement gap or NCSG is required for the UE to perform SSB based measurements on the concerned NR target band while NR-DC or NE-DC is not configured. The UE determines this information based on the resultant configuration of the <i>RRCReconfiguration</i> or <i>RRCResume</i> message that triggers this response. Value <i>gap</i> indicates that a measurement gap is needed, value <i>ncsg</i> indicates that a NCSG is needed, and value <i>nogap-noncsg</i> indicates neither a measurement gap nor a NCSG is needed. Value <i>nogap-noncsg</i> also indicates interruption is not needed.

– **NeedForInterruptionInfoNR**

The IE *NeedForInterruptionInfoNR* indicates whether interruption is needed for the UE to perform SSB based measurements on an NR target band without measurement gap while NR-DC or NE-DC is not configured.

NeedForInterruptionInfoNR information element

```
-- ASN1START
-- TAG-NeedForInterruptionInfoNR-START

NeedForInterruptionInfoNR-r18 ::= SEQUENCE {
    intraFreq-needForInterruption-r18    NeedForInterruptionIntraFreqList-r18,
    interFreq-needForInterruption-r18    NeedForInterruptionBandListNR-r18,
    ...
}

NeedForInterruptionIntraFreqList-r18 ::= SEQUENCE (SIZE (1.. maxNrofServingCells)) OF NeedForInterruptionNR-r18

NeedForInterruptionBandListNR-r18 ::= SEQUENCE (SIZE (1..maxBands)) OF NeedForInterruptionNR-r18

NeedForInterruptionNR-r18 ::= SEQUENCE {
    interruptionIndication-r18          ENUMERATED {no-gap-with-interruption, no-gap-no-interruption} OPTIONAL
}

-- TAG-NeedForInterruptionInfoNR-STOP
-- ASN1STOP
```

NeedForInterruptionInfoNR field descriptions
intraFreq-needForInterruption Indicates the interruption requirement information for NR intra-frequency measurement. Each entry in the list is associated to the entry in list <i>intraFreq-needForGap-r16</i> with the same index. This field shall be set to <i>no-gap-no-interruption</i> for the serving cell(s) belonging to the corresponding band(s) where <i>bwpOperationMeasWithoutInterrupt-r18</i> is supported by the UE.
interFreq-needForInterruption Indicates the interruption requirement information for NR inter-frequency measurement. Each entry in the list is associated to the entry in list <i>interFreq-needForGap-r16</i> with the same index.

<i>NeedForInterruptionNR</i> field descriptions
<i>interruptionIndication</i> Indicates whether interruption is needed for the UE to perform SSB based measurements without measurement gap. Value <i>no-gap-with-interruption</i> indicates that interruption is needed. Value <i>no-gap-no-interruption</i> indicates interruption is not needed.

— *NextHopChainingCount*

The IE *NextHopChainingCount* is used to update the K_{gNB} key and corresponds to parameter NCC: See TS 33.501 [11].

NextHopChainingCount information element

```
-- ASN1START
-- TAG-NEXTHOPCHAININGCOUNT-START

NextHopChainingCount ::=
    INTEGER (0..7)

-- TAG-NEXTHOPCHAININGCOUNT-STOP
-- ASN1STOP
```

— *NG-5G-S-TMSI*

The IE *NG-5G-S-TMSI* contains a 5G S-Temporary Mobile Subscription Identifier (5G-S-TMSI), a temporary UE identity provided by the 5GC which uniquely identifies the UE within the tracking area, see TS 23.003 [21].

NG-5G-S-TMSI information element

```
-- ASN1START
-- TAG-NG-5G-S-TMSI-START

NG-5G-S-TMSI ::=
    BIT STRING (SIZE (48))

-- TAG-NG-5G-S-TMSI-STOP
-- ASN1STOP
```

— *NonCellDefiningSSB*

The IE *NonCellDefiningSSB* is used to configure a NCD-SSB to be used while the UE operates in an RedCap-specific initial BWP that does not contain the CD-SSB or a dedicated BWP that does not contain the CD-SSB.

NonCellDefiningSSB information element

```
-- ASN1START
-- TAG-NONCELLDEFININGSSB-START
```



```

NonCellDefiningSSB-r17 ::=          SEQUENCE {
    absoluteFrequencySSB-r17        ARFCN-ValueNR,
    ssb-Periodicity-r17             ENUMERATED { ms5, ms10, ms20, ms40, ms80, ms160, spare2, spare1 } OPTIONAL, -- Need S
    ssb-TimeOffset-r17              ENUMERATED { ms5, ms10, ms15, ms20, ms40, ms80, spare2, spare1 } OPTIONAL, -- Need S
    ...
}

-- TAG-NONCELLDEFININGSSB-STOP
-- ASN1STOP

```

<i>NonCellDefiningSSB</i> field descriptions
<i>absoluteFrequencySSB</i> Frequency of the NCD-SSB. The network configures this field so that the SSB is within the bandwidth of the BWP configured in <i>BWP-DownlinkCommon</i> .
<i>ssb-Periodicity</i> The periodicity of this NCD-SSB. The network configures only periodicities that are larger than the periodicity of serving cell's CD-SSB. If the field is absent, the UE applies the SSB periodicity of the CD-SSB (<i>ssb-periodicityServingCell</i> configured in <i>ServingCellConfigCommon</i> or <i>ServingCellConfigCommonSIB</i>).
<i>ssb-TimeOffset</i> The time offset between CD-SSB of the serving cell and this NCD-SSB. Value <i>ms5</i> means the first burst of NCD-SSB is transmitted 5ms later than the first burst of CD-SSB transmitted after the first symbol of SFN=0 of the serving cell, value <i>ms10</i> means the first burst of NCD-SSB is transmitted 10ms later than the first burst of CD-SSB transmitted after the first symbol in SFN=0 of the serving cell, and so on. If the field is absent, UE considers that the time offset between the first burst of CD-SSB transmitted in the serving cell and the first burst of this NCD-SSB transmitted is zero. For UEs in TDD cells, the network configures this time offset to be an integer multiple of the periodicity of the serving cell's CD-SSB.

— *NPN-Identity*

The IE *NPN-Identity* includes either a list of CAG-IDs or a list of NIDs per PLMN Identity. Further information regarding how to set the IE is specified in TS 23.003 [21].

NPN-Identity information element

```

-- ASN1START
-- TAG-NPN-IDENTITY-START

NPN-Identity-r16 ::=
    pn1-npn-r16
        plmn-Identity-r16
        cag-IdentityList-r16
    },
    snpn-r16
        plmn-Identity-r16
        nid-List-r16
    }

CHOICE {
    SEQUENCE {
        PLMN-Identity,
        SEQUENCE (SIZE (1..maxNPN-r16)) OF CAG-IdentityInfo-r16
    },
    SEQUENCE {
        PLMN-Identity,
        SEQUENCE (SIZE (1..maxNPN-r16)) OF NID-r16
    }
}

CAG-IdentityInfo-r16 ::=
    SEQUENCE {
        cag-Identity-r16          BIT STRING (SIZE (32)),
        manualCAGselectionAllowed-r16 ENUMERATED {true} OPTIONAL -- Need R
    }

```

```
NID-r16 ::=                                BIT STRING (SIZE (44))

-- TAG-NPN-IDENTITY-STOP
-- ASN1STOP
```

<i>NPN-Identity</i> field descriptions
<i>cag-Identity</i> A CAG-ID as specified in TS 23.003 [21]. The PLMN ID and a CAG ID in the <i>NPN-Identity</i> identifies a PNI-NPN.
<i>cag-IdentityList</i> The <i>cag-IdentityList</i> contains one or more CAG IDs. All CAG IDs associated to the same PLMN ID are listed in the same <i>cag-IdentityList</i> entry.
<i>manualCAGselectionAllowed</i> The <i>manualCAGselectionAllowed</i> indicates that the CAG ID can be selected manually even if it is outside the UE's allowed CAG list.
<i>NID</i> A NID as specified in TS 23.003 [21]. The PLMN ID and a NID in the <i>NPN-Identity</i> identifies a SNPN.
<i>nid-List</i> The <i>nid-List</i> contains one or more <i>NID</i> .

– *NPN-IdentityInfoList*

The IE *NPN-IdentityInfoList* includes a list of NPN identity information.

NPN-IdentityInfoList information element

```
-- ASN1START
-- TAG-NPN-IDENTITYINFOLIST-START

NPN-IdentityInfoList-r16 ::=      SEQUENCE (SIZE (1..maxNPN-r16)) OF NPN-IdentityInfo-r16

NPN-IdentityInfo-r16 ::=          SEQUENCE {
    npn-IdentityList-r16          SEQUENCE (SIZE (1..maxNPN-r16)) OF NPN-Identity-r16,
    trackingAreaCode-r16          TrackingAreaCode,
    ranac-r16                     RAN-AreaCode                                OPTIONAL,      -- Need R
    cellIdentity-r16              CellIdentity,
    cellReservedForOperatorUse-r16 ENUMERATED {reserved, notReserved},
    iab-Support-r16               ENUMERATED {true}                        OPTIONAL,      -- Need S
    ...,
    [[
        gNB-ID-Length-r17         INTEGER (22..32)                        OPTIONAL      -- Need R
    ]],
    [[
        mobileIAB-Support-r18     ENUMERATED {true}                        OPTIONAL      -- Need S
    ]]
}

-- TAG-NPN-IDENTITYINFOLIST-STOP
-- ASN1STOP
```

NPN-IdentityInfoList field descriptions
iab-Support This field combines both the support of IAB and the cell status for IAB. If the field is present, the cell supports IAB and the cell is also considered as a candidate for cell (re)selection for IAB-nodes; if the field is absent, the cell does not support IAB and/or the cell is barred for IAB-node. This field is absent if <i>mobileIAB-Cell</i> is broadcasted in the cell.
gNB-ID-Length Indicates the length of the gNB ID out of the 36-bit long <i>cellIdentity</i>. This field is always present if the <i>mobileIAB-Support</i> is broadcasted.
mobileIAB-Support This field indicates the support of mobile IAB and whether the cell can be considered as a candidate for cell (re)selection for mobile IAB-node. This field is absent if <i>mobileIAB-Cell</i> is broadcasted in the cell. If the field is absent, the cell is barred for mobile IAB-node.
NPN-IdentityInfo The <i>NPN-IdentityInfo</i> contains one or more NPN identities and additional information associated with those NPNs. Only the same type of NPNs (either SNPNs or PNI-NPNs) can be listed in a <i>NPN-IdentityInfo</i> element.
npn-IdentityList The <i>npn-IdentityList</i> contains one or more NPN Identity elements.
trackingAreaCode Indicates the Tracking Area Code to which the cell indicated by <i>cellIdentity</i> field belongs.
ranac Indicates the RAN Area Code to which the cell indicated by <i>cellIdentity</i> field belongs.
cellReservedForOperatorUse Indicates whether the cell is reserved for operator use (for the NPN(s) identified in the <i>npn-IdentityList</i>) as defined in TS 38.304 [20]. This field is ignored by NPN capable IAB-MT and NPN capable NCR-MT.

–
 NR-DL-PRS-PDC-Info

The IE *NR-DL-PRS-PDC-Info* defines downlink PRS configuration for PDC.

NR-DL-PRS-PDC-Info information element

```

-- ASN1START
-- TAG-NR-DL-PRS-PDC-INFO-START

NR-DL-PRS-PDC-Info-r17 ::= SEQUENCE {
    nr-DL-PRS-PDC-ResourceSet-r17          NR-DL-PRS-PDC-ResourceSet-r17          OPTIONAL, -- Need R
    ...
}

NR-DL-PRS-PDC-ResourceSet-r17 ::= SEQUENCE {
    periodicityAndOffset-r17          NR-DL-PRS-Periodicity-and-ResourceSetSlotOffset-r17,
    numSymbols-r17                    ENUMERATED {n2, n4, n6, n12, n1-v1800, spare3, spare2, spare1},
    dl-PRS-ResourceBandwidth-r17      INTEGER (1..63),
    dl-PRS-StartPRB-r17               INTEGER (0..2176),
    resourceList-r17                  SEQUENCE (SIZE (1..maxNrofPRS-ResourcesPerSet-r17)) OF NR-DL-PRS-Resource-r17,
    repFactorAndTimeGap-r17           RepFactorAndTimeGap-r17                      OPTIONAL, -- Need S
    ...
}

```

```

}

NR-DL-PRS-Periodicity-and-ResourceSetSlotOffset-r17 ::= CHOICE {
  scs15-r17      CHOICE {
    n4-r17        INTEGER (0..3),
    n5-r17        INTEGER (0..4),
    n8-r17        INTEGER (0..7),
    n10-r17       INTEGER (0..9),
    n16-r17       INTEGER (0..15),
    n20-r17       INTEGER (0..19),
    n32-r17       INTEGER (0..31),
    n40-r17       INTEGER (0..39),
    n64-r17       INTEGER (0..63),
    n80-r17       INTEGER (0..79),
    n160-r17      INTEGER (0..159),
    n320-r17      INTEGER (0..319),
    n640-r17      INTEGER (0..639),
    n1280-r17     INTEGER (0..1279),
    n2560-r17     INTEGER (0..2559),
    n5120-r17     INTEGER (0..5119),
    n10240-r17    INTEGER (0..10239),
    ...
  },
  scs30-r17      CHOICE {
    n8-r17        INTEGER (0..7),
    n10-r17       INTEGER (0..9),
    n16-r17       INTEGER (0..15),
    n20-r17       INTEGER (0..19),
    n32-r17       INTEGER (0..31),
    n40-r17       INTEGER (0..39),
    n64-r17       INTEGER (0..63),
    n80-r17       INTEGER (0..79),
    n128-r17      INTEGER (0..127),
    n160-r17      INTEGER (0..159),
    n320-r17      INTEGER (0..319),
    n640-r17      INTEGER (0..639),
    n1280-r17     INTEGER (0..1279),
    n2560-r17     INTEGER (0..2559),
    n5120-r17     INTEGER (0..5119),
    n10240-r17    INTEGER (0..10239),
    n20480-r17    INTEGER (0..20479),
    ...
  },
  scs60-r17      CHOICE {
    n16-r17       INTEGER (0..15),
    n20-r17       INTEGER (0..19),
    n32-r17       INTEGER (0..31),
    n40-r17       INTEGER (0..39),
    n64-r17       INTEGER (0..63),
    n80-r17       INTEGER (0..79),
    n128-r17      INTEGER (0..127),
    n160-r17      INTEGER (0..159),
    n256-r17      INTEGER (0..255),
    n320-r17      INTEGER (0..319),

```

```

        n640-r17          INTEGER (0..639),
        n1280-r17         INTEGER (0..1279),
        n2560-r17         INTEGER (0..2559),
        n5120-r17         INTEGER (0..5119),
        n10240-r17        INTEGER (0..10239),
        n20480-r17        INTEGER (0..20479),
        n40960-r17        INTEGER (0..40959),
        ...
    },
    scs120-r17 CHOICE {
        n32-r17          INTEGER (0..31),
        n40-r17          INTEGER (0..39),
        n64-r17          INTEGER (0..63),
        n80-r17          INTEGER (0..79),
        n128-r17         INTEGER (0..127),
        n160-r17         INTEGER (0..159),
        n256-r17         INTEGER (0..255),
        n320-r17         INTEGER (0..319),
        n512-r17         INTEGER (0..511),
        n640-r17         INTEGER (0..639),
        n1280-r17        INTEGER (0..1279),
        n2560-r17        INTEGER (0..2559),
        n5120-r17        INTEGER (0..5119),
        n10240-r17       INTEGER (0..10239),
        n20480-r17       INTEGER (0..20479),
        n40960-r17       INTEGER (0..40959),
        n81920-r17       INTEGER (0..81919),
        ...
    },
    ...
}

NR-DL-PRS-Resource-r17 ::= SEQUENCE {
    nr-DL-PRS-ResourceID-r17 NR-DL-PRS-ResourceID-r17,
    dl-PRS-SequenceID-r17   INTEGER (0..4095),
    dl-PRS-CombSizeN-AndReOffset-r17 CHOICE {
        n2-r17          INTEGER (0..1),
        n4-r17          INTEGER (0..3),
        n6-r17          INTEGER (0..5),
        n12-r17         INTEGER (0..11),
        ...
    },
    dl-PRS-ResourceSlotOffset-r17 INTEGER (0..maxNrofPRS-ResourceOffsetValue-1-r17),
    dl-PRS-ResourceSymbolOffset-r17 INTEGER (0..12),
    dl-PRS-QCL-Info-r17           DL-PRS-QCL-Info-r17 OPTIONAL, -- Need N
    ...
    [[
        dl-PRS-ResourceSymbolOffset-v1800 INTEGER (13) OPTIONAL -- Need R
    ]]
}

DL-PRS-QCL-Info-r17 ::= CHOICE {
    ssb-r17 SEQUENCE {
        ssb-Index-r17 INTEGER (0..63),

```

```

        rs-Type-r17                ENUMERATED {typeC, typeD, typeC-plus-typeD},
        ...
    },
    dl-PRS-r17                      SEQUENCE {
        qcl-DL-PRS-ResourceID-r17    NR-DL-PRS-ResourceID-r17,
        ...
    },
    ...
}

NR-DL-PRS-ResourceID-r17 ::= INTEGER (0..maxNrofPRS-ResourcesPerSet-1-r17)

RepFactorAndTimeGap-r17 ::= SEQUENCE {
    repetitionFactor-r17            ENUMERATED {n2, n4, n6, n8, n16, n32, spare2, spare1},
    timeGap-r17                    ENUMERATED {s1, s2, s4, s8, s16, s32, spare2, spare1}
}

-- TAG-NR-DL-PRS-PDC-INFO-STOP
-- ASN1STOP

```

NR-DL-PRS-PDC-ResourceSet field descriptions
dl-PRS-ResourceBandwidth This field specifies the number of PRBs allocated for all the DL-PRS Resource (allocated DL-PRS bandwidth) in multiples of 4 PRBs in this resource set. All DL-PRS Resources of the DL-PRS-PDC Resource Set have the same bandwidth. Integer value 1 corresponds to 24 PRBs, value 2 corresponds to 28 PRBs, value 3 corresponds to 32 PRBs and so on.
dl-PRS-StartPRB This field specifies the start PRB index defined as offset with respect to subcarrier 0 in common resource block 0 for the DL-PRS Resource. All DL-PRS Resources of the DL-PRS-PDC Resource Set have the same value of dl-PRS-StartPRB.
numSymbols This field specifies the number of symbols per DL-PRS Resource within a slot. The UE does not expect to be configured for PDC with a PRS with <i>numSymbols</i> equals to n1 unless an SSB index is provided as a <i>typeC</i> or <i>typeC-plus-typeD</i> QCL source, or another PRS resource with <i>numSymbols</i> more than n1 is provided as QCL source.
periodicityAndOffset This field specifies the periodicity of DL-PRS allocation in slots and the slot offset with respect to SFN #0 slot #0 in the PCell where the DL-PRS-PDC Resource Set is configured (i.e., slot where the first DL-PRS Resource of DL-PRS-PDC Resource Set occurs).
repFactorAndTimeGap If this field is absent, the value for <i>repetitionFactor</i> is 1 (i.e., no resource repetition).

RepFactorAndTimeGap field descriptions
repetitionFactor This field specifies how many times each DL-PRS Resource is repeated for a single instance of the DL-PRS Resource Set. It is applied to all resources of the DL-PRS Resource Set. Enumerated values n2, n4, n6, n8, n16, n32 correspond to 2, 4, 6, 8, 16, 32 resource repetitions, respectively.
timeGap This field specifies the offset in units of slots between two repeated instances of a DL-PRS Resource corresponding to the same DL-PRS Resource ID within a single instance of the DL-PRS Resource Set. The time duration spanned by one DL-PRS Resource Set containing repeated DL-PRS Resources should not exceed the periodicity configured by <i>periodicityAndOffset</i>.

NR-DL-PRS-Resource field description
dl-PRS-ResourceSymbolOffset This field specifies the starting symbol of the <i>DL-PRS Resource</i> within a slot. If <i>dl-PRS-ResourceSymbolOffset-v1800</i> is present, the UE shall ignore <i>dl-PRS-ResourceSymbolOffset-r17</i> .

— NR-NS-PmaxList

The IE *NR-NS-PmaxList* is used to configure a list of *additionalPmax* and *additionalSpectrumEmission*, as defined in TS 38.101-1 [15], table 6.2.3.1-1A, TS 38.101-2 [39], table 6.2.3.1-2, and TS 38.101-5 [75], table 6.2.3.1-1A for a given frequency band.

NR-NS-PmaxList information element

```
-- ASN1START
-- TAG-NR-NS-PMAXLIST-START

NR-NS-PmaxList ::= SEQUENCE (SIZE (1..maxNR-NS-Pmax)) OF NR-NS-PmaxValue

NR-NS-PmaxValue ::= SEQUENCE {
    additionalPmax P-Max OPTIONAL, -- Need N
    additionalSpectrumEmission AdditionalSpectrumEmission
}

NR-NS-PmaxList-v1760 ::= SEQUENCE (SIZE (1.. maxNR-NS-Pmax)) OF NR-NS-PmaxValue-v1760

NR-NS-PmaxValue-v1760 ::= SEQUENCE {
    additionalSpectrumEmission-v1760 AdditionalSpectrumEmission-v1760 OPTIONAL -- Need N
}

NR-NS-PmaxListAerial-r18 ::= SEQUENCE (SIZE (1..maxNR-NS-Pmax)) OF NR-NS-PmaxValueAerial-r18

NR-NS-PmaxValueAerial-r18 ::= SEQUENCE {
    additionalPmax-r18 P-Max OPTIONAL, -- Need N
    additionalSpectrumEmission-r18 AdditionalSpectrumEmission-r18
}

-- TAG-NR-NS-PMAXLIST-STOP
-- ASN1STOP
```

— NSAG-ID

The IE *NSAG-ID* is used to identify an NSAG (TS 23.501 [32]) for slice-based cell reselection or slice-based random access.

NSAG-ID information element

```
-- ASN1START
-- TAG-NSAG-ID-START
```

```
NSAG-ID-r17 ::=
    BIT STRING (SIZE (8))

-- TAG-NSAG-ID-STOP
-- ASN1STOP
```

— **NSAG-IdentityInfo**

The IE *NSAG-IdentityInfo* is used to identify an NSAG (TS 23.501 [32]) for slice-based cell reselection.

NSAG-IdentityInfo information element

```
-- ASN1START
-- TAG-NSAG-IDENTITYINFO-START

NSAG-IdentityInfo-r17 ::=
    SEQUENCE {
        nsag-ID-r17          NSAG-ID-r17,
        trackingAreaCode-r17 TrackingAreaCode OPTIONAL -- Need R
    }

-- TAG-NSAG-IDENTITYINFO-STOP
-- ASN1STOP
```

NSAG-IdentityInfo field descriptions
trackingAreaCode If absent, UE assumes the <i>trackingAreaCode</i> of the serving cell.

— **NTN-Config**

The IE *NTN-Config* provides parameters needed for the UE to access NR via NTN access.

NTN-Config information element

```
-- ASN1START
-- TAG-NTN-CONFIG-START

NTN-Config-r17 ::=
    SEQUENCE {
        epochTime-r17          EpochTime-r17 OPTIONAL, -- Need R
        ntn-ULSyncValidityDuration-r17 ENUMERATED { s5, s10, s15, s20, s25, s30, s35,
                                                    s40, s45, s50, s55, s60, s120, s180, s240, s900} OPTIONAL, -- Cond SIB19
        cellSpecificKoffset-r17 INTEGER(1..1023) OPTIONAL, -- Need R
        kmac-r17                INTEGER(1..512) OPTIONAL, -- Need R
        ta-Info-r17              TA-Info-r17 OPTIONAL, -- Need R
        ntn-PolarizationDL-r17   ENUMERATED { rhcp, lhcp, linear} OPTIONAL, -- Need R
        ntn-PolarizationUL-r17   ENUMERATED { rhcp, lhcp, linear} OPTIONAL, -- Need S
        ephemerisInfo-r17        EphemerisInfo-r17 OPTIONAL, -- Need R
        ta-Report-r17            ENUMERATED { enabled} OPTIONAL, -- Need R
    }
```



```
}    ...
```

```
TA-Info-r17 ::=
    ta-Common-r17          SEQUENCE {
                           INTEGER(0..66485757),
    ta-CommonDrift-r17     INTEGER(-257303..257303)
    ta-CommonDriftVariant-r17 INTEGER(0..28949)
    }
```

```
OPTIONAL, -- Need R
OPTIONAL  -- Need R
```

```
-- TAG-NTN-CONFIG-STOP
-- ASN1STOP
```

NTN-Config field descriptions
<i>ephemerisInfo</i> This field provides satellite ephemeris either in format of position and velocity state vector or in format of orbital parameters. This field is excluded when determining changes in system information, i.e. changes to <i>ephemerisInfo</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i>.
<i>epochTime</i> If this field is absent for the NTN serving cell, the epoch time is the end of SI window where this <i>SIB19</i> is scheduled. This field is mandatory present when <i>ntn-Config</i> is provided in dedicated configuration. If this field is absent in <i>ntn-Config</i> provided via <i>NTN-NeighCellConfig</i> or <i>SatSwitchWithReSync</i> in an NTN cell, the UE uses epoch time of the serving cell, otherwise the field is based on the timing of the serving cell, i.e. the SFN and sub-frame number indicated in this field refers to the SFN and sub-frame of the serving cell. If this field is absent in <i>ntn-Config</i> provided via <i>NTN-NeighCellConfig</i> in a TN cell, the epoch time is the end of SI window where this <i>SIB19</i> is scheduled. In case of satellite switch with resynchronization, this field is based on the timing of the cell served by the source satellite. This field is excluded when determining changes in system information, i.e. changes to <i>epochTime</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i>.
<i>cellSpecificKoffset</i> Scheduling offset used for the timing relationships that are modified for NTN (see TS 38.213 [13]). The unit of the field <i>K_offset</i> is number of slots for a given subcarrier spacing of 15 kHz. If the field is absent UE assumes value 0.
<i>kmac</i> Scheduling offset provided by network if downlink and uplink frame timing are not aligned at gNB. If the field is absent UE assumes value 0. The unit of <i>kmac</i> is number of slots for a given subcarrier spacing of 15 kHz.
<i>ntn-PolarizationDL</i> If present, this parameter indicates polarization information for downlink transmission on service link: including Right hand, Left hand circular polarizations (RHCP, LHCP) and Linear polarization.
<i>ntn-PolarizationUL</i> If present, this parameter indicates Polarization information for uplink service link. If not present and <i>ntn-PolarizationDL</i> is present, UE assumes the same polarization for UL and DL. If both <i>ntn-PolarizationUL</i> and <i>ntn-PolarizationDL</i> are not present, the UE releases any stored value.
<i>ntn-UISyncValidityDuration</i> A validity duration configured by the network for assistance information (i.e. Serving and/or neighbour satellite ephemeris and Common TA parameters) which indicates the maximum time duration (from <i>epochTime</i>) during which the UE can apply assistance information without having acquired new assistance information. The unit of <i>ntn-UISyncValidityDuration</i> is second. Value <i>s5</i> corresponds to 5 s, value <i>s10</i> indicate 10 s and so on. If this field is absent in <i>ntn-Config</i> provided via <i>NTN-NeighCellConfig</i> or <i>SatSwitchWithReSync</i> in an NTN cell, the UE uses validity duration from the serving cell assistance information. If this field is absent in <i>ntn-Config</i> provided via <i>NTN-NeighCellConfig</i> in a TN cell, how the UE sets the validity duration is left to UE implementation. This field is excluded when determining changes in system information, i.e. changes of <i>ntn-UISyncValidityDuration</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i>. <i>ntn-UISyncValidityDuration</i> is only updated when at least one of <i>epochTime</i>, <i>ta-Info</i>, <i>ephemerisInfo</i> is updated.
<i>ta-Common</i> Network-controlled common timing advanced value and it may include any timing offset considered necessary by the network. <i>ta-Common</i> with value of 0 is supported. The granularity of <i>ta-Common</i> is 4.072×10^{-3} μs. Values are given in unit of corresponding granularity. This field is excluded when determining changes in system information, i.e. changes of <i>ta-Common</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i>.
<i>ta-CommonDrift</i> Indicate drift rate of the common TA. The granularity of <i>ta-CommonDrift</i> is 0.2×10^{-3} μs/s. Values are given in unit of corresponding granularity. This field is excluded when determining changes in system information, i.e. changes of <i>ta-CommonDrift</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i>.
<i>ta-CommonDriftVariant</i> Indicate drift rate variation of the common TA. The granularity of <i>ta-CommonDriftVariant</i> is 0.2×10^{-4} μs/s². Values are given in unit of corresponding granularity. This field is excluded when determining changes in system information, i.e. changes of <i>ta-CommonDriftVariant</i> should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i>.

ta-Report

When this field is included in *SIB19*, it indicates reporting of timing advanced is enabled during Random Access due to RRC connection establishment or RRC connection resume, and during RRC connection reestablishment. When this field is included in *ServingCellConfigCommon* within dedicated signalling, it indicates TA reporting is enabled during reconfiguration with sync (see TS 38.321 [3], clause 5.4.8).

Conditional Presence	Explanation
<i>SIB19</i>	The field is mandatory present for the serving cell in <i>SIB19</i> . The field is optionally present, Need R, otherwise.

– *NZP-CSI-RS-Resource*

The IE *NZP-CSI-RS-Resource* is used to configure Non-Zero-Power (NZP) CSI-RS transmitted in the cell where the IE is included, which the UE may be configured to measure on (see TS 38.214 [19], clause 5.2.2.3.1). A change of configuration between periodic, semi-persistent or aperiodic for an *NZP-CSI-RS-Resource* is not supported without a release and add.

***NZP-CSI-RS-Resource* information element**

```
-- ASN1START
-- TAG-NZP-CSI-RS-RESOURCE-START

NZP-CSI-RS-Resource ::=
  nzp-CSI-RS-ResourceId
  resourceMapping
  powerControlOffset
  powerControlOffsetSS
  scramblingID
  periodicityAndOffset
  qcl-InfoPeriodicCSI-RS
  ...,
  [[
    subcarrierSpacing-r18
    absoluteFrequencyPointA-r18
    cyclicPrefix-r18
  ]]
}

SEQUENCE {
  NZP-CSI-RS-ResourceId,
  CSI-RS-ResourceMapping,
  INTEGER (-8..15),
  ENUMERATED{db-3, db0, db3, db6}
  ScramblingId,
  CSI-ResourcePeriodicityAndOffset
  TCI-StateId
  OPTIONAL, -- Need R
  OPTIONAL, -- Cond PeriodicOrSemiPersistent
  OPTIONAL, -- Cond Periodic
  OPTIONAL, -- Cond LTM
  OPTIONAL, -- Cond LTM
  OPTIONAL, -- Cond LTM
}
```

NZP-CSI-RS-Resource field descriptions
periodicityAndOffset Periodicity and slot offset <i>s</i>/1 corresponds to a periodicity of 1 slot, <i>s</i>/2 to a periodicity of two slots, and so on. The corresponding offset is also given in number of slots (see TS 38.214 [19], clause 5.2.2.3.1). Network always configures the UE with a value for this field for periodic and semi-persistent NZP-CSI-RS-Resource (as indicated in <i>CSI-ResourceConfig</i>).
powerControlOffset Power offset of PDSCH EPRE to NZP CSI-RS EPRE. Value in dB (see TS 38.214 [19], clauses 5.2.2.3.1 and 4.1). The UE shall ignore this field in case <i>NZP-CSI-RS-Resources</i> is received as part of an <i>LTM-Candidate</i> IE.
powerControlOffsetSS Power offset of NZP CSI-RS EPRE to SS/PBCH block EPRE. Value in dB (see TS 38.214 [19], clause 5.2.2.3.1).
qcl-InfoPeriodicCSI-RS For a target periodic CSI-RS, contains a reference to one <i>TCI-State</i> in <i>TCI-States</i> for providing the QCL source and QCL type. For periodic CSI-RS, the source can be SSB or another periodic-CSI-RS. Refers to the <i>TCI-State</i> or <i>dl-OrJoint-TCI-State</i> which has this value for <i>tcI-StateId</i> and is defined in <i>tcI-StatesToAddModList</i> or in <i>dl-OrJointTCI-StateList</i> in the <i>PDSCH-Config</i> included in the <i>BWP-Downlink</i> corresponding to the serving cell and to the DL BWP to which the resource belongs to (see TS 38.214 [19], clause 5.2.2.3.1). In case <i>NZP-CSI-RS-Resources</i> is received as part of an <i>LTM-Candidate</i> IE, it refers to the TCI state identifier in <i>CandidateTCI-State</i> and is defined in <i>Itm-DL-OrJointTCI-StateToAddModList</i> within the <i>LTM-Candidate</i> IE.
resourceMapping OFDM symbol location(s) in a slot and subcarrier occupancy in a PRB of the CSI-RS resource.
scramblingID Scrambling ID (see TS 38.214 [19], clause 5.2.2.3.1).

Conditional Presence	Explanation
<i>LTM</i>	The field is optionally present, Need R, in an <i>LTM-Candidate</i> IE. Otherwise, the field is absent.
<i>Periodic</i>	The field is optionally present, Need M, for periodic <i>NZP-CSI-RS-Resources</i> (as indicated in <i>CSI-ResourceConfig</i>). The field is absent otherwise.
<i>PeriodicOrSemiPersistent</i>	The field is optionally present, Need M, for periodic and semi-persistent <i>NZP-CSI-RS-Resources</i> (as indicated in <i>CSI-ResourceConfig</i>). The field is absent otherwise.

–

NZP-CSI-RS-ResourceId

The IE *NZP-CSI-RS-ResourceId* is used to identify one NZP-CSI-RS-Resource.

NZP-CSI-RS-ResourceId information element

```

-- ASN1START
-- TAG-NZP-CSI-RS-RESOURCEID-START

NZP-CSI-RS-ResourceId ::=
    INTEGER (0..maxNrofNZP-CSI-RS-Resources-1)

-- TAG-NZP-CSI-RS-RESOURCEID-STOP
-- ASN1STOP

```

– *NZP-CSI-RS-ResourceSet*

The IE *NZP-CSI-RS-ResourceSet* is a set of Non-Zero-Power (NZP) CSI-RS resources (their IDs) and set-specific parameters.

NZP-CSI-RS-ResourceSet information element

```
-- ASN1START
-- TAG-NZP-CSI-RS-RESOURCESET-START

NZP-CSI-RS-ResourceSet ::=
  nzp-CSI-ResourceSetId          SEQUENCE {
    nzp-CSI-RS-Resources          NZP-CSI-RS-ResourceSetId,
    repetition                     SEQUENCE (SIZE (1..maxNrofNZP-CSI-RS-ResourcesPerSet)) OF NZP-CSI-RS-ResourceId,
    aperiodicTriggeringOffset      ENUMERATED { on, off }                                OPTIONAL, -- Need S
    trs-Info                       INTEGER(0..6)                                    OPTIONAL, -- Need S
    ...,                           ENUMERATED {true}                                OPTIONAL, -- Need R
    [[
      aperiodicTriggeringOffset-r16  INTEGER(0..31)                                OPTIONAL -- Need S
    ]],
    [[
      pdc-Info-r17                   ENUMERATED {true}                                OPTIONAL, -- Need R
      cmrGroupingAndPairing-r17      CMRGroupingAndPairing-r17                     OPTIONAL, -- Need R
      aperiodicTriggeringOffset-r17  INTEGER (0..124)                             OPTIONAL, -- Need S
      aperiodicTriggeringOffsetL2-r17 INTEGER(0..31)                             OPTIONAL -- Need R
    ]],
    [[
      resourceType-r18               ENUMERATED {periodic}                        OPTIONAL -- Cond LTM
    ]]
  }

CMRGroupingAndPairing-r17 ::=
  nrofResourcesGroup1-r17      SEQUENCE {
    pair1OfNZP-CSI-RS-r17      INTEGER (1..7),
    pair2OfNZP-CSI-RS-r17      NZP-CSI-RS-Pairing-r17                                OPTIONAL, -- Need R
  }
  NZP-CSI-RS-Pairing-r17      OPTIONAL -- Need R

NZP-CSI-RS-Pairing-r17 ::=
  nzp-CSI-RS-ResourceId1-r17   SEQUENCE {
    nzp-CSI-RS-ResourceId2-r17 INTEGER (1..7),
  }
  NZP-CSI-RS-ResourceId2-r17  INTEGER (1..7)

-- TAG-NZP-CSI-RS-RESOURCESET-STOP
-- ASN1STOP
```

NZP-CSI-RS-ResourceSet field descriptions	
<i>aperiodicTriggeringOffset</i>, <i>aperiodicTriggeringOffset-r16</i>, <i>aperiodicTriggeringOffset-r17</i>	Offset X between the slot containing the DCI that triggers a set of aperiodic NZP CSI-RS resources and the slot in which the CSI-RS resource set is transmitted. For <i>aperiodicTriggeringOffset</i> , the value 0 corresponds to 0 slots, value 1 corresponds to 1 slot, value 2 corresponds to 2 slots, value 3 corresponds to 3 slots, value 4 corresponds to 4 slots, value 5 corresponds to 16 slots, value 6 corresponds to 24 slots. For <i>aperiodicTriggeringOffset-r16</i> and <i>aperiodicTriggeringOffset-r17</i> , the value indicates the number of slots. <i>aperiodicTriggeringOffset-r17</i> is applicable to SCS 480 kHz and 960 kHz, and only the values of integer multiples of 4 are valid, i.e. 0, 4, 8, and so on. The network configures only one of the fields. When neither field is included, the UE applies the value 0. This field is not present in case <i>NZP-CSI-RS-ResourceSet</i> is received as part of an <i>LTM-Candidate</i> IE.
<i>aperiodicTriggeringOffsetL2</i>	Indicates triggering offset of aperiodic NZP CSI-RS resources used for fast activation of the SCell (see clause 5.2.1.5.3 of TS 38.214 [19]), when the NZP CSI-RS resources are activated by the MAC CE (see clause 5.9 of TS 38.321 [3]). The value indicates the number of slots. This field is not present in case <i>NZP-CSI-RS-ResourceSet</i> is received as part of an <i>LTM-Candidate</i> IE.
<i>cmrGroupingAndPairing</i>	Configures CMR groups and pairs. The first <i>nrofResourcesGroup1</i> resources in the NZP-CSI-RS resource set belong to Group 1 and the remaining resources in the NZP-CSI-RS resource set belong to Group 2. <i>nrofResourcesGroup1</i> is K_1 and the number of remaining resources in the NZP-CSI-RS resource set belonging to Group 2 is K_2 as specified in TS 38.214 clause 5.2.1.4.1. Maximum total number in Group 1 and Group 2 is 8 (see TS 38.214 [19], clauses 5.2.1.4.1 and 5.2.1.4.2). This field is not present in case <i>NZP-CSI-RS-ResourceSet</i> is received as part of an <i>LTM-Candidate</i> IE.
<i>pair1OfNZP-CSI-RS</i>, <i>pair2OfNZP-CSI-RS</i>	A pair of NZP CSI-RS resources. In one pair, one resource shall belong to group 1 and the other resource shall belong to group 2 (see TS 38.214 [19], clause 5.2.1.4.1).
<i>nzp-CSI-RS-Resources</i>	NZP-CSI-RS-Resources associated with this NZP-CSI-RS resource set (see TS 38.214 [19], clause 5.2). If the <i>NZP-CSI-RS-ResourceSet</i> is indicated in a <i>CSI-ResourceConfig</i> indicated by <i>resourcesForChannelMeasurement</i> in a <i>CSI-ReportConfig</i> , if the <i>codebookType</i> in the <i>codebookConfig</i> in the <i>CSI-ReportConfig</i> is <i>typell-Doppler-r18</i> or <i>typell-DopplerPortSelection-r18</i> , there are at most 1 periodic or semi-persistent NZP CSI-RS resource and 4, 8 or 12 aperiodic NZP CSI-RS resources and if the <i>codebookType</i> is <i>typell-CJT-r18</i> or <i>typell-CJT-PortSelection-r18</i> , there are 1, 2, 3, or 4 aperiodic, periodic or semi-persistent NZP-CSI-RS resources, see TS 38.214 [19], clause 5.2.1.4.
<i>nzp-CSI-RS-ResourceId1</i>, <i>nzp-CSI-RS-ResourceId2</i>	The <i>nzp-CSI-RS-ResourceId1-r17</i> represents the index of the NZP CSI-RS resource in Resource Group 1, and <i>nzp-CSI-RS-ResourceId2-r17</i> represents the index of the NZP CSI-RS resource in Resource Group 2.
<i>pdcc-Info</i>	Indicates that this NZP-CSI-RS-ResourceSet, if configured also with <i>trs-Info</i> , is used for propagation delay compensation. The field can be present only if <i>trs-info</i> is present. The field can be present in only one <i>NZP-CSI-RS-ResourceSet</i> . If network configures this field for an <i>NZP-CSI-RS-ResourceSet</i> , the UE measures the UE Rx-Tx time difference based on resources configured in this resource set. This field is not present in case <i>NZP-CSI-RS-ResourceSet</i> is received as part of an <i>LTM-Candidate</i> IE.
<i>repetition</i>	Indicates whether repetition is on/off. If the field is set to <i>off</i> or if the field is absent, the UE may not assume that the NZP-CSI-RS resources within the resource set are transmitted with the same downlink spatial domain transmission filter (see TS 38.214 [19], clauses 5.2.2.3.1 and 5.1.6.1.2). It can only be configured for CSI-RS resource sets which are associated with <i>CSI-ReportConfig</i> with report of L1 RSRP, L1 SINR or "no report". This field is not present in case <i>NZP-CSI-RS-ResourceSet</i> is received as part of an <i>LTM-Candidate</i> IE.
<i>resourceType</i>	Time domain behavior of resource configuration (see TS 38.214 [19], clause 5.2.1.2).
<i>trs-Info</i>	Indicates that the antenna port for all NZP-CSI-RS resources in the CSI-RS resource set is same. If the field is absent or released the UE applies the value <i>false</i> (see TS 38.214 [19], clause 5.2.2.3.1).

Conditional Presence	Explanation
<i>LTM</i>	The field is optionally present, Need R, in an <i>LTM-Candidate</i> IE. Otherwise, the field is absent.

— *NZP-CSI-RS-ResourceSetId*

The IE *NZP-CSI-RS-ResourceSetId* is used to identify one *NZP-CSI-RS-ResourceSet*.

***NZP-CSI-RS-ResourceSetId* information element**

```
-- ASN1START
-- TAG-NZP-CSI-RS-RESOURCESETID-START

NZP-CSI-RS-ResourceSetId ::=          INTEGER (0..maxNrofNZP-CSI-RS-ResourceSets-1)

-- TAG-NZP-CSI-RS-RESOURCESETID-STOP
-- ASN1STOP
```

— *P-Max*

The IE *P-Max* is used to limit the UE's uplink transmission power on a carrier frequency, in TS 38.101-1 [15] and in TS 38.101-5 [75], and is used to calculate the parameter *Pcompensation* defined in TS 38.304 [20]. In ATG cell, actual value of P-Max = 9 + field value [dBm].

***P-Max* information element**

```
-- ASN1START
-- TAG-P-MAX-START

P-Max ::=          INTEGER (-30..33)

-- TAG-P-MAX-STOP
-- ASN1STOP
```

— *PathlossReferenceRS*

The IE *PathlossReferenceRS* is used to configure a Reference Signal (e.g. a CSI-RS config or a SS block) to be used for path loss estimation for PUSCH, PUCCH and SRS for unified TCI state operation.

***PathlossReferenceRS* information element**

```
-- ASN1START
-- TAG-PATHLOSSREFERENCERS-START

PathlossReferenceRS-r17 ::= SEQUENCE {
```

```

    pathlossReferenceRS-Id-r17      PathlossReferenceRS-Id-r17,
    referenceSignal-r17             CHOICE {
        ssb-Index                  SSB-Index,
        csi-RS-Index               NZP-CSI-RS-ResourceId
    },
    additionalPCI-r17               AdditionalPCIIndex-r17
}

-- TAG-PATHLOSSREFERENCERS-STOP
-- ASN1STOP
```

PathlossReferenceRS field descriptions
additionalPCI Indicates the physical cell ID (PCI) of the SSB for the referenceSignal.

Conditional Presence	Explanation
RS-SSB	The field is optionally present, Need R, if <i>ssb-Index</i> is configured for <i>referenceSignal</i> . Otherwise it is absent, Need R.

— **PathlossReferenceRS-Id**

The IE *PathlossReferenceRS-Id* is an ID for a reference signal (RS) configured as PUSCH, PUCCH and SRS pathloss reference RS for unified TCI state operation.

PathlossReferenceRS-Id information element

```

-- ASN1START
-- TAG-PATHLOSSREFERENCERS-ID-START

PathlossReferenceRS-Id-r17 ::= INTEGER (0..maxNrofPathlossReferenceRSs-1-r17)

-- TAG-PATHLOSSREFERENCERS-ID-STOP
-- ASN1STOP
```

— **PCI-ARFCN-EUTRA**

The IE *PCI-ARFCN-EUTRA* is used to encode EUTRA PCI and ARFCN.

PCI-ARFCN-EUTRA information element

```

-- ASN1START
-- TAG-PCIARFCNEUTRA-START

PCI-ARFCN-EUTRA-r16 ::= SEQUENCE {
    physCellId-r16      EUTRA-PhysCellId,
```



```

    carrierFreq-r16                ARFCN-ValueEUTRA
}
-- TAG-PCIARFCNEUTRA-STOP
-- ASN1STOP

```

— *PCI-ARFCN-NR*

The IE *PCI-ARFCN-NR* is used to encode NR PCI and ARFCN.

PCI-ARFCN-NR information element

```

-- ASN1START
-- TAG-PCIARFCNNR-START

PCI-ARFCN-NR-r16 ::=
    physCellId-r16
    carrierFreq-r16
}
-- TAG-PCIARFCNNR-STOP
-- ASN1STOP

```

SEQUENCE {
 PhysCellId,
 ARFCN-ValueNR

— *PCI-List*

The IE *PCI-List* concerns a list of physical cell identities, which may be used for different purposes.

PCI-List information element

```

-- ASN1START
-- TAG-PCI-LIST-START

PCI-List ::=
    SEQUENCE (SIZE (1..maxNrofCellMeas)) OF PhysCellId
-- TAG-PCI-LIST-STOP
-- ASN1STOP

```

— *PCI-Range*

The IE *PCI-Range* is used to encode either a single or a range of physical cell identities. The range is encoded by using a *start* value and by indicating the number of consecutive physical cell identities (including *start*) in the range. For fields comprising multiple occurrences of *PCI-Range*, the Network may configure overlapping ranges of physical cell identities.

PCI-Range information element

```
-- ASN1START
-- TAG-PCI-RANGE-START

PCI-Range ::=
    start
    range
}

SEQUENCE {
    PhysCellId,
    ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64, n84,
                n96, n128, n168, n252, n504, n1008, spare1}
}

-- TAG-PCI-RANGE-STOP
-- ASN1STOP
```

OPTIONAL -- Need S

PCI-Range field descriptions
range Indicates the number of physical cell identities in the range (including <i>start</i>). Value <i>n4</i> corresponds with 4, value <i>n8</i> corresponds with 8 and so on. The UE shall apply value 1 in case the field is absent, in which case only the physical cell identity value indicated by <i>start</i> applies.
start Indicates the lowest physical cell identity in the range.

— *PCI-RangeElement*

The IE *PCI-RangeElement* is used to define a PCI-Range as part of a list (e.g. AddMod list).

PCI-RangeElement information element

```
-- ASN1START
-- TAG-PCI-RANGEELEMENT-START

PCI-RangeElement ::=
    pci-RangeIndex
    pci-Range
}

SEQUENCE {
    PCI-RangeIndex,
    PCI-Range
}

-- TAG-PCI-RANGEELEMENT-STOP
-- ASN1STOP
```

PCI-RangeElement field descriptions
pci-Range Physical cell identity or a range of physical cell identities.

— PCI-RangeIndex

The IE PCI-RangeIndex identifies a physical cell id range, which may be used for different purposes.

PCI-RangeIndex information element

```
-- ASN1START
-- TAG-PCI-RANGEINDEX-START

PCI-RangeIndex ::= INTEGER (1..maxNrofPCI-Ranges)

-- TAG-PCI-RANGEINDEX-STOP
-- ASN1STOP
```

— PCI-RangeIndexList

The IE PCI-RangeIndexList concerns a list of indexes of physical cell id ranges, which may be used for different purposes.

PCI-RangeIndexList information element

```
-- ASN1START
-- TAG-PCI-RANGEINDEXLIST-START

PCI-RangeIndexList ::= SEQUENCE (SIZE (1..maxNrofPCI-Ranges)) OF PCI-RangeIndex

-- TAG-PCI-RANGEINDEXLIST-STOP
-- ASN1STOP
```

— PDCCH-Config

The IE *PDCCH-Config* is used to configure UE specific PDCCH parameters or MBS multicast PDCCH parameters such as control resource sets (CORESET), search spaces and additional parameters for acquiring the PDCCH. If this IE is used for the scheduled SCell in case of cross carrier scheduling, the fields other than *searchSpacesToAddModList* and *searchSpacesToReleaseList* are absent. If the IE is used for a dormant BWP, the fields other than *controlResourceSetToAddModList* and *controlResourceSetToReleaseList* are absent. If this IE is used for MBS CFR, the field *downlinkPreemption, tpc-PUSCH, tpc-SRS, uplinkCancellation, monitoringCapabilityConfig*, and *searchSpaceSwitchConfig* are absent.

PDCCH-Config information element

```
-- ASN1START
```

```
-- TAG-PDCCH-CONFIG-START
```

```
PDCCH-Config ::=
    controlResourceSetToAddModList      SEQUENCE {
        controlResourceSetToAddModList  SEQUENCE(SIZE (1..3)) OF ControlResourceSet      OPTIONAL, -- Need N
        controlResourceSetToReleaseList  SEQUENCE(SIZE (1..3)) OF ControlResourceSetId    OPTIONAL, -- Need N
        searchSpacesToAddModList         SEQUENCE(SIZE (1..10)) OF SearchSpace            OPTIONAL, -- Need N
        searchSpacesToReleaseList        SEQUENCE(SIZE (1..10)) OF SearchSpaceId         OPTIONAL, -- Need N
        downlinkPreemption               SetupRelease { DownlinkPreemption }              OPTIONAL, -- Need M
        tpc-PUSCH                        SetupRelease { PUSCH-TPC-CommandConfig }          OPTIONAL, -- Need M
        tpc-PUCCH                        SetupRelease { PUCCH-TPC-CommandConfig }          OPTIONAL, -- Need M
        tpc-SRS                          SetupRelease { SRS-TPC-CommandConfig }            OPTIONAL, -- Need M
        ...,
        [[
            controlResourceSetToAddModListSizeExt-v1610 SEQUENCE (SIZE (1..2)) OF ControlResourceSet      OPTIONAL, -- Need N
            controlResourceSetToReleaseListSizeExt-r16 SEQUENCE (SIZE (1..5)) OF ControlResourceSetId-r16    OPTIONAL, -- Need N
            searchSpacesToAddModListExt-r16 SEQUENCE(SIZE (1..10)) OF SearchSpaceExt-r16              OPTIONAL, -- Need N
            uplinkCancellation-r16         SetupRelease { UplinkCancellation-r16 }            OPTIONAL, -- Need M
            monitoringCapabilityConfig-r16  ENUMERATED { r15monitoringcapability, r16monitoringcapability }  OPTIONAL, -- Need M
            searchSpaceSwitchConfig-r16    SearchSpaceSwitchConfig-r16                      OPTIONAL, -- Need R
        ]],
        [[
            searchSpacesToAddModListExt-v1700 SEQUENCE(SIZE (1..10)) OF SearchSpaceExt-v1700          OPTIONAL, -- Need N
            monitoringCapabilityConfig-v1710 ENUMERATED { r17monitoringcapability }              OPTIONAL, -- Need M
            searchSpaceSwitchConfig-r17     SearchSpaceSwitchConfig-r17                      OPTIONAL, -- Need R
            pdccch-SkippingDurationList-r17 SEQUENCE(SIZE (1..3)) OF SCS-SpecificDuration-r17        OPTIONAL, -- Need R
        ]],
        [[
            pdccch-MonitoringResumptionAfterNack-r18 ENUMERATED {true}                      OPTIONAL, -- Need R
            searchSpacesToAddModListExt-v1800 SEQUENCE(SIZE (1..10)) OF SearchSpaceExt-v1800        OPTIONAL, -- Need N
        ]]
    ]
}

SearchSpaceSwitchConfig-r16 ::=
    cellGroupsForSwitchList-r16 SEQUENCE(SIZE (1..4)) OF CellGroupForSwitch-r16      OPTIONAL, -- Need R
    searchSpaceSwitchDelay-r16  INTEGER (10..52)                                     OPTIONAL, -- Need R
}

SearchSpaceSwitchConfig-r17 ::=
    searchSpaceSwitchTimer-r17 SCS-SpecificDuration-r17                             OPTIONAL, -- Need R
    searchSpaceSwitchDelay-r17 INTEGER (10..52)                                     OPTIONAL, -- Need R
}

CellGroupForSwitch-r16 ::=
    SEQUENCE(SIZE (1..16)) OF ServCellIndex

SCS-SpecificDuration-r17 ::=
    INTEGER (1..166)

-- TAG-PDCCH-CONFIG-STOP
-- ASN1STOP
```

PDCCH-Config field descriptions
<i>controlResourceSetToAddModList, controlResourceSetToAddModListSizeExt</i> List of UE specifically configured Control Resource Sets (CORESETs) to be used by the UE. The network restrictions on configuration of CORESETs per DL BWP are specified in TS 38.213 [13], clause 10.1 and TS 38.306 [26]. The UE shall consider entries in <i>controlResourceSetToAddModList</i> and in <i>controlResourceSetToAddModListSizeExt</i> as a single list, i.e. an entry created using <i>controlResourceSetToAddModList</i> can be modified using <i>controlResourceSetToAddModListSizeExt</i> (or deleted using <i>controlResourceSetToReleaseListSizeExt</i>) and vice-versa. In case network reconfigures control resource set with the same <i>ControlResourceSetId</i> as used for <i>commonControlResourceSet</i> or <i>commonControlResourceSetExt</i> configured via <i>PDCCH-ConfigCommon</i> or via <i>SIB20</i> , the configuration from <i>PDCCH-Config</i> always takes precedence and should not be updated by the UE based on <i>servingCellConfigCommon</i> or based on <i>SIB20</i> .
<i>controlResourceSetToReleaseList, controlResourceSetToReleaseListSizeExt</i> List of UE specifically configured Control Resource Sets (CORESETs) to be released by the UE. This field only applies to CORESETs configured by <i>controlResourceSetToAddModList</i> or <i>controlResourceSetToAddModListSizeExt</i> and does not release the field <i>commonControlResourceSet</i> configured by <i>PDCCH-ConfigCommon</i> and <i>commonControlResourceSetExt</i> configured by <i>SIB20</i> .
<i>downlinkPreemption</i> Configuration of downlink preemption indications to be monitored in this cell (see TS 38.213 [13], clause 11.2).
<i>monitoringCapabilityConfig</i> Configures either Rel-15 PDCCH monitoring capability, Rel-16 PDCCH monitoring capability or Rel-17 PDCCH monitoring capability for PDCCH monitoring on a serving cell (see TS 38.213 [13], clause 10.1). Value <i>r15monitoringcapability</i> enables the Rel-15 monitoring capability, and value <i>r16monitoringcapability</i> enables the Rel-16 PDCCH monitoring capability. <i>r17monitoringcapability</i> enables the Rel-17 PDCCH multi-slot monitoring capability. For 480 and 960 kHz SCS, only value <i>r17monitoringcapability</i> is applicable.
<i>pdccch-MonitoringResumptionAfterNack</i> This field is used to enable UE PDCCH monitoring resumption after PDCCH skipping has started, if the UE transmits a NACK due to incorrectly decoding a PDSCH scheduled by a DCI format received from the serving cell (see TS 38.213 [13], clause 10.4).
<i>pdccch-SkippingDurationList</i> Provides one or more values to derive the skipping duration in unit of slots, as specified in TS 38.213 [13], clause 10.4. The DCI which schedules data indicates which of the values is to be applied (see TS 38.213 [13], clause 10.4). For the 15kHz SCS, for each entry, only the first 26 values are valid and correspond to {1, 2, 3, ..., 20, 30, 40, 50, 60, 80, 100}. For the 30kHz SCS, for each entry, only the first 46 values are valid and correspond to {1, 2, 3, ..., 40, 60, 80, 100, 120, 160, 200}. For the 60kHz SCS, for each entry, only the first 86 values are valid and correspond to {1, 2, 3, ..., 80, 120, 160, 200, 240, 320, 400}. For the 120kHz SCS, for each entry, the 166 values correspond to {1, 2, 3, ..., 160, 240, 320, 400, 480, 640, 800}. For the 480kHz SCS, for each entry, the 166 values correspond to {4, 8, 12, ..., 640, 960, 1280, 1600, 1920, 2560, 3200}. For the 960kHz SCS, for each entry, the 166 values correspond to {8, 16, 24, ..., 1280, 1920, 2560, 3200, 3840, 5120, 6400}.
<i>searchSpacesToAddModList, searchSpacesToAddModListExt</i> List of UE specifically configured Search Spaces or MBS multicast Search Spaces. The network configures at most 10 Search Spaces per BWP per cell (including UE-specific and common Search Spaces). If the network includes <i>searchSpacesToAddModListExt</i> , it includes the same number of entries, and listed in the same order, as in <i>searchSpacesToAddModList</i> in each of them.
<i>searchSpaceSwitchConfig</i> Configuration to control the UE behavior to switch from search space group X back to search space group 0, as specified in clause 10 of TS 38.213 [13]. The network only configures either <i>searchSpaceSwitchConfig-r16</i> or <i>searchSpaceSwitchConfig-r17</i> for a UE.
<i>tpc-PUCCH</i> Enable and configure reception of group TPC commands for PUCCH.
<i>tpc-PUSCH</i> Enable and configure reception of group TPC commands for PUSCH.
<i>tpc-SRS</i> Enable and configure reception of group TPC commands for SRS.
<i>uplinkCancellation</i> Configuration of uplink cancellation indications to be monitored in this cell (see TS 38.213 [13], clause 11.2A).

<i>SearchSpaceSwitchConfig</i> field descriptions
<i>cellGroupsForSwitchList</i> The list of serving cells which are bundled for the search space group switching purpose (see TS 38.213 [13], clause 10.4). A serving cell can belong to only one <i>CellGroupForSwitch</i> . The network configures the same list for all BWPs of serving cells in the same <i>CellGroupForSwitch</i> .
<i>searchSpaceSwitchDelay</i> Indicates the value to be applied by a UE for Search Space Set Group switching; corresponds to the P value in TS 38.213 [13], clause 10.4. The network configures the same value for all BWPs of serving cells in the same <i>CellGroupForSwitch</i> . For 120/480/960 kHz SCS, only values 40,41, ... 52 are valid and the actual value = field value * SCS/120 kHz i.e. field value 40 corresponds to 40 with 120 kHz SCS, 160 with 480 kHz SCS and 320 with 960 kHz SCS, and so on.
<i>searchSpaceSwitchTimer</i> Timer (in unit of slots) to control the UE behavior to switch from search space group X back to search space group 0, as specified in clause 10 of TS 38.213 [13]. For the 15kHz SCS, only the first 26 values are valid and correspond to {1, 2, 3, ..., 20, 30, 40, 50, 60, 80, 100}. For the 30kHz SCS, only the first 46 values are valid and correspond to {1, 2, 3, ..., 40, 60, 80, 100, 120, 160, 200}. For the 60kHz SCS, only the first 86 values are valid and correspond to {1, 2, 3, ..., 80, 120, 160, 200, 240, 320, 400}. For the 120kHz SCS, the 166 values correspond to {1, 2, 3, ..., 160, 240, 320, 400, 480, 640, 800}. For the 480kHz SCS, the 166 values correspond to {4, 8, 12, ..., 640, 960, 1280, 1600, 1920, 2560, 3200}. For the 960kHz SCS, the 166 values correspond to {8, 16, 24, ..., 1280, 1920, 2560, 3200, 3840, 5120, 6400}.

– *PDCCH-ConfigCommon*

The IE *PDCCH-ConfigCommon* is used to configure cell specific PDCCH parameters provided in SIB as well as in dedicated signalling.

PDCCH-ConfigCommon information element

```
-- ASN1START
-- TAG-PDCCH-CONFIGCOMMON-START

PDCCH-ConfigCommon ::=
    controlResourceSetZero          SEQUENCE {
        ControlResourceSetZero      OPTIONAL, -- Cond InitialBWP-Only
        ControlResourceSet          OPTIONAL, -- Need R
        SearchSpaceZero             OPTIONAL, -- Cond InitialBWP-Only
        commonSearchSpaceList       SEQUENCE (SIZE(1..4)) OF SearchSpace OPTIONAL, -- Need R
        searchSpaceSIB1             OPTIONAL, -- Need S
        searchSpaceOtherSystemInformation OPTIONAL, -- Need S
        pagingSearchSpace           OPTIONAL, -- Need S
        ra-SearchSpace              OPTIONAL, -- Need S
        ...,
        [[
            firstPDCCH-MonitoringOccasionOfPO CHOICE {
                sCS15KHzZoneT                SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..139),
                sCS30KHzZoneT-SCS15KHzhalfT   SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..279),
                sCS60KHzZoneT-SCS30KHzhalfT-SCS15KHzquarterT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..559),
                sCS120KHzZoneT-SCS60KHzhalfT-SCS30KHzquarterT-SCS15KHzZoneEighthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..1119),
                sCS120KHzhalfT-SCS60KHzquarterT-SCS30KHzZoneEighthT-SCS15KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..2239),
                sCS120KHzquarterT-SCS60KHzZoneEighthT-SCS30KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..4479),
                sCS120KHzZoneEighthT-SCS60KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..8959),
                sCS120KHzZoneSixteenthT       SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..17919)
            }
        ]],
        commonSearchSpaceListExt-r16 SEQUENCE (SIZE(1..4)) OF SearchSpaceExt-r16 OPTIONAL -- Need R
    ],
];
```

```

[[
sdt-SearchSpace-r17          CHOICE {
    newSearchSpace            SearchSpace,
    existingSearchSpace       SearchSpaceId
}
searchSpaceMCCH-r17          SearchSpaceId          OPTIONAL,    -- Need R
searchSpaceMTCH-r17          SearchSpaceId          OPTIONAL,    -- Need R
commonSearchSpaceListExt2-r17 SEQUENCE (SIZE(1..4)) OF SearchSpaceExt-v1700  OPTIONAL,    -- Need S
firstPDCCH-MonitoringOccasionOfPO-v1710 CHOICE {
    sCS480KHzZoneEighthT      SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..35839),
    sCS480KHzZoneSixteenthT   SEQUENCE (SIZE (1..maxPO-perPF)) OF INTEGER (0..71679)
}
pei-ConfigBWP-r17           SEQUENCE {
    pei-SearchSpace-r17       SearchSpaceId,
    firstPDCCH-MonitoringOccasionOfPEI-0-r17 CHOICE {
        sCS15KHzZoneT          SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..139),
        sCS30KHzZoneT-SCS15KHzHalfT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..279),
        sCS60KHzZoneT-SCS30KHzHalfT-SCS15KHzQuarterT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..559),
        sCS120KHzZoneT-SCS60KHzHalfT-SCS30KHzQuarterT-SCS15KHzZoneEighthT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..1119),
        sCS120KHzHalfT-SCS60KHzQuarterT-SCS30KHzZoneEighthT-SCS15KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..2239),
        sCS480KHzZoneT-SCS120KHzQuarterT-SCS60KHzZoneEighthT-SCS30KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..4479),
        sCS480KHzHalfT-SCS120KHzZoneEighthT-SCS60KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..8959),
        sCS480KHzQuarterT-SCS120KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..17919),
        sCS480KHzZoneEighthT   SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..35839),
        sCS480KHzZoneSixteenthT SEQUENCE (SIZE (1..maxPEI-perPF-r17)) OF INTEGER (0..71679)
    }
}
],
[[
followUnifiedTCI-State-v1720 ENUMERATED {enabled}          OPTIONAL    -- Need R
],
[[
applyIndicatedTCI-State-r18   ENUMERATED {first, second, both, none} OPTIONAL,    -- Cond FollowUTCI
commonSearchSpaceListExt-r18 SEQUENCE (SIZE(1..4)) OF SearchSpaceExt-v1800 OPTIONAL,    -- Need R
searchSpaceMulticastMCCH-r18 SearchSpaceId                OPTIONAL,    -- Need R
searchSpaceMulticastMTCH-r18 SearchSpaceId                OPTIONAL    -- Need S
]]
]
-- TAG-PDCCH-CONFIGCOMMON-STOP
-- ASN1STOP

```

<i>PDCCH-ConfigCommon</i> field descriptions
<i>applyIndicatedTCI-State</i> This field indicates, for PDCCH reception in CORESET #0, if UE applies the first, the second, both or none of the "indicated" DL only TCI or joint TCI as specified in TS 38.213 [13], clause 10.1. Value <i>both</i> is not configured if the CORESET is associated with <i>searchSpaceZero</i> for Type 0/0A/2 common search space and can be configured only if <i>sfnSchemePDCCH</i> is configured in the serving cell.
<i>commonControlResourceSet</i> An additional common control resource set which may be configured and used for any common or UE-specific search space. If the network configures this field, it uses a <i>ControlResourceSetId</i> other than 0 for this <i>ControlResourceSet</i>. The network configures the <i>commonControlResourceSet</i> in <i>SIB1</i> so that it is contained in the bandwidth of CORESET#0. If the RedCap-specific initial downlink BWP does not contain the entire CORESET#0, the network configures the <i>commonControlResourceSet</i> in the RedCap-specific initial downlink BWP in <i>SIB1</i> for (e)RedCap such that it does not have to be contained in the bandwidth of CORESET#0.
<i>commonSearchSpaceList</i>, <i>commonSearchSpaceListExt</i>, <i>commonSearchSpaceListExt2</i> A list of additional common search spaces. If the network configures this field, it uses the <i>SearchSpaceIds</i> other than 0. If the field is included, it replaces any previous list, i.e. all the entries of the list are replaced and each of the <i>SearchSpace</i> entries is considered to be newly created and the conditions and Need codes for setup of the entry apply. If the network includes <i>commonSearchSpaceListExt</i>/<i>commonSearchSpaceListExt2</i>, it includes the same number of entries, and listed in the same order, as in <i>commonSearchSpaceList</i>.
<i>controlResourceSetZero</i> Parameters of the common CORESET#0 which can be used in any common or UE-specific search spaces. The values are interpreted like the corresponding bits in <i>MIB pdccch-ConfigSIB1</i>. Even though this field is only configured in the initial BWP (BWP#0) <i>controlResourceSetZero</i> can be used in search spaces configured in other DL BWP(s) than the initial DL BWP if the conditions defined in TS 38.213 [13], clause 10 are satisfied.
<i>firstPDCCH-MonitoringOccasionOfPEI-O</i> Offset, in number of symbols, from the start of the reference frame for PEI-O to the start of the first PDCCH monitoring occasion of PEI-O on this BWP, see TS 38.213 [13], clause 10.4A. For the case <i>po-NumPerPEI</i> is smaller than <i>Ns</i>, UE applies the $(\text{floor}(\frac{N_s}{\text{po-NumPerPEI}})+1)$-th value out of $(\frac{N_s}{\text{po-NumPerPEI}})$ configured values in <i>firstPDCCH-MonitoringOccasionOfPEI-O</i> for the symbol-level offset. When <i>po-NumPerPEI</i> is one or multiple of <i>Ns</i>, UE applies the first configured value in <i>firstPDCCH-MonitoringOccasionOfPEI-O</i> for the symbol-level offset.
<i>firstPDCCH-MonitoringOccasionOfPO</i> Indicates the first PDCCH monitoring occasion of each PO of the PF on this BWP, see TS 38.304 [20]. The field <i>sCS120KHZquarterT-SCS60KHZZoneEighthT-SCS30KHZZoneSixteenthT</i>, <i>sCS120KHZZoneEighthT-SCS60KHZZoneSixteenthT</i> and <i>sCS120KHZZoneSixteenthT</i> can be applied for SCS 480kHz, corresponding to <i>sCS480KHZZoneT-SCS120KHZquarterT-SCS60KHZZoneEighthT-SCS30KHZZoneSixteenthT</i>, <i>sCS480KHZhalfT-SCS120KHZZoneEighthT-SCS60KHZZoneSixteenthT</i> and <i>sCS480KHZquarterT-SCS120KHZZoneSixteenthT</i> in IE <i>DownlinkConfigCommonSIB</i> respectively.
<i>followUnifiedTCI-State</i> When set to enabled, for PDCCH reception in CORESET #0, the UE applies the "indicated" DL only TCI or joint TCI as specified in TS 38.214 [19], clause 5.1.5.
<i>pagingSearchSpace</i> ID of the search space for paging (see TS 38.213 [13], clause 10.1). If the field is absent, the UE does not receive paging in this BWP (see TS 38.213 [13], clause 10). This field is absent for the RedCap-specific initial downlink BWP, if it does not include CD-SSB and the entire CORESET#0. In that case, an (e)RedCap UE in RRC_INACTIVE while SDT procedure is ongoing and T319a is not running, if CG-SDT is selected and if extended CG-SDT periodicity is configured (i.e. <i>cg-SDT-PeriodicityExt</i> is configured), or an (e)RedCap UE in RRC_IDLE or RRC_INACTIVE while SDT procedure is not ongoing, shall monitor paging in the initial DL BWP that includes CORESET#0.
<i>pei-ConfigBWP</i> Provides the configuration for PEI reception in this BWP. If the field is absent, the UE does not receive PEI in this BWP. For the <i>initialDownlinkBWP-RedCap</i> not including CD-SSB and the entire CORESET#0, an (e)RedCap UE in RRC_IDLE or RRC_INACTIVE while SDT procedure is not ongoing monitors PEI in the <i>initialDownlinkBWP</i> that includes CORESET#0, if the <i>initialDownlinkBWP</i> is configured with <i>pei-ConfigBWP</i>.
<i>pei-SearchSpace</i> ID of dedicated search space for PEI. It can be configured to one of up to 4 common SS sets configured by <i>commonSearchSpaceList</i> with <i>SearchSpaceId</i> > 0. The CCE aggregation levels and maximum number of PDCCH candidates per CCE aggregation level follows Table 10.1-1 of TS38.213 [13]. <i>SearchSpaceId</i> = 0 can be configured for the case of SS/PBCH block and CORESET multiplexing pattern 2 or 3.
<i>ra-SearchSpace</i> ID of the Search space for random access procedure (see TS 38.213 [13], clause 10.1). If the field is absent, the UE does not receive RAR in this BWP. This field is mandatory present in the DL BWP(s) if the conditions described in TS 38.321 [3], clause 5.15 are met.

<i>sdt-SearchSpace</i>
Common search space for CG-SDT and RA-SDT (see TS 38.213 [13]). If an <i>existingSearchSpace</i> is used, the network only signals the search space ID of the <i>ra-SearchSpace</i> .
<i>searchSpaceMCCH</i>
ID of the search space for MCCH. If the field is absent, the UE does not receive MCCH in this BWP (see TS 38.213 [13], clause 10). This field is absent for the RedCap-specific initial downlink BWP, if it does not include CD-SSB and the entire CORESET#0. In that case, the (e)RedCap UE in RRC_IDLE or RRC_INACTIVE may receive MCCH using <i>searchSpaceMCCH</i> in the initial DL BWP that includes CD-SSB and the entire CORESET#0.
<i>searchSpaceMTCH</i>
ID of the search space for MTCH of MBS broadcast. If the field is absent, the UE applies <i>searchSpaceMCCH</i> also for MTCH, (see TS 38.213 [13], clause 10). This field is absent for the RedCap-specific initial downlink BWP, if it does not include CD-SSB and the entire CORESET#0. In that case, the (e)RedCap UE in RRC_IDLE or RRC_INACTIVE may receive MTCH using <i>searchSpaceMTCH</i> in the initial DL BWP that includes CD-SSB and the entire CORESET#0.
<i>searchSpaceMulticastMCCH</i>
ID of the search space for multicast MCCH. If the field is absent, the UE does not receive multicast MCCH in this BWP (see TS 38.213 [13], clause 10). This field is absent for the RedCap-specific initial downlink BWP, if it does not include CD-SSB and the entire CORESET#0.
<i>searchSpaceMulticastMTCH</i>
ID of the search space for multicast MTCH. If the field is absent, the UE applies <i>searchSpaceMulticastMCCH</i> also for multicast MTCH, (see TS 38.213 [13], clause 10). This field is absent for the RedCap-specific initial downlink BWP, if it does not include CD-SSB and the entire CORESET#0.
<i>searchSpaceOtherSystemInformation</i>
ID of the Search space for other system information, i.e., <i>SIB2</i> and beyond (see TS 38.213 [13], clause 10.1). If the field is absent, the UE does not receive other system information in this BWP. This field is absent for the RedCap-specific initial DL BWP, if it does not include CD-SSB and the entire CORESET#0. In that case, an (e)RedCap UE in RRC_IDLE or RRC_INACTIVE shall monitor PDCCH to receive other system information using <i>searchSpaceOtherSystemInformation</i> in the initial DL BWP that includes CD-SSB and the entire CORESET#0.
<i>searchSpaceSIB1</i>
ID of the search space for <i>SIB1</i> message. In the initial DL BWP of the UE's PCell, the network sets this field to 0. If the field is absent, the UE does not receive <i>SIB1</i> in this BWP. (see TS 38.213 [13], clause 10). This field is absent for the RedCap-specific initial DL BWP, if it does not include CD-SSB and the entire CORESET#0. In that case, an (e)RedCap UE in RRC_IDLE or RRC_INACTIVE shall monitor PDCCH to receive <i>SIB1</i> using <i>searchSpaceSIB1</i> in the initial DL BWP that includes CD-SSB and the entire CORESET#0.
<i>searchSpaceZero</i>
Parameters of the common SearchSpace#0. The values are interpreted like the corresponding bits in <i>MIB pdccch-ConfigSIB1</i> . Even though this field is only configured in the initial BWP (BWP#0), <i>searchSpaceZero</i> can be used in search spaces configured in other DL BWP(s) than the initial DL BWP if the conditions described in TS 38.213 [13], clause 10, are satisfied.

Conditional Presence	Explanation
<i>FollowUTC1</i>	The field is absent if the field <i>followUnifiedTCI-State</i> is present or if more than one value for the field <i>coresetPoolIndex</i> is configured in <i>controlResourceSet</i> for the same bandwidthpart. Otherwise, it is optionally present, Need R.
<i>InitialBWP-Only</i>	If <i>SIB1</i> is broadcast the field is mandatory present in the <i>PDCCH-ConfigCommon</i> of the initial BWP (BWP#0) in <i>ServingCellConfigCommon</i> except it is the RedCap-specific initial BWP not including CD-SSB and the entire CORESET#0 in which case the field is absent, Need R; it is absent in other BWPs and when sent in system information. If <i>SIB1</i> is not broadcast and there is an SSB associated to the cell, the field is optionally present, Need M, in the <i>PDCCH-ConfigCommon</i> of the initial BWP (BWP#0) in <i>ServingCellConfigCommon</i> (still with the same setting for all UEs). In other cases, the field is absent.
<i>InitialBWP-Paging</i>	This field is optionally present, Need R, if this BWP is the <i>initialDownlinkBWP</i> or <i>initialDownlinkBWP-RedCap</i> including CD-SSB and the entire CORESET#0, and <i>pei-Config</i> is configured in <i>DownlinkConfigCommonSIB</i> . Otherwise, this field is absent.
<i>OtherBWP</i>	This field is optionally present, Need R, if this BWP is not the <i>initialDownlinkBWP</i> and <i>pagingSearchSpace</i> is configured in this BWP. Otherwise this field is absent.

— *PDCCH-ConfigSIB1*

The IE *PDCCH-ConfigSIB1* is used to configure CORESET#0 and search space#0.

***PDCCH-ConfigSIB1* information element**

```
-- ASN1START
-- TAG-PDCCH-CONFIGSIB1-START

PDCCH-ConfigSIB1 ::=
  controlResourceSetZero
  searchSpaceZero
}

SEQUENCE {
  ControlResourceSetZero,
  SearchSpaceZero
}

-- TAG-PDCCH-CONFIGSIB1-STOP
-- ASN1STOP
```

<i>PDCCH-ConfigSIB1</i> field descriptions
<i>controlResourceSetZero</i> Determines a common ControlResourceSet (CORESET) with ID #0, see TS 38.213 [13], clause 13.
<i>searchSpaceZero</i> Determines a common search space with ID #0, see TS 38.213 [13], clause 13.

— *PDCCH-ServingCellConfig*

The IE *PDCCH-ServingCellConfig* is used to configure UE specific PDCCH parameters applicable across all bandwidth parts of a serving cell.

***PDCCH-ServingCellConfig* information element**

```
-- ASN1START
-- TAG-PDCCH-SERVINGCELLCONFIG-START

PDCCH-ServingCellConfig ::=
  slotFormatIndicator
  ...
  [[
    availabilityIndicator-r16
    searchSpaceSwitchTimer-r16
  ]],
  [[
    searchSpaceSwitchTimer-v1710
  ]]
}

SEQUENCE {
  SetupRelease { SlotFormatIndicator }
  SetupRelease {AvailabilityIndicator-r16}
  INTEGER (1..80)
  INTEGER (81..1280)
}

OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL -- Need R
OPTIONAL -- Need R

-- TAG-PDCCH-SERVINGCELLCONFIG-STOP
-- ASN1STOP
```

<i>PDCCH-ServingCellConfig</i> field descriptions
availabilityIndicator Use to configure monitoring a PDCCH for Availability Indicators (AI).
searchSpaceSwitchTimer The value of the timer in slots for monitoring PDCCH in the active DL BWP of the serving cell before moving to the default search space group (see TS 38.213 [13], clause 10.4). For 15 kHz SCS, {1..20} are valid. For 30 kHz SCS, {1..40} are valid. For 60kHz SCS, {1..80} are valid. For 120 kHz SCS, {1..160} are valid. For 480 kHz SCS, {1..640} are valid. For 960 kHz SCS, {1..1280} are valid. The network configures the same value for all serving cells in the same <i>CellGroupForSwitch</i> .
slotFormatIndicator Configuration of Slot-Format-Indicators to be monitored in the correspondingly configured PDCCHs of this serving cell.

– *PDCP-Config*

The IE *PDCP-Config* is used to set the configurable PDCP parameters for signalling, MBS multicast and data radio bearers.

PDCP-Config information element

```
-- ASN1START
-- TAG-PDCP-CONFIG-START

PDCP-Config ::=
  drb
    SEQUENCE {
      discardTimer      ENUMERATED {ms10, ms20, ms30, ms40, ms50, ms60, ms75, ms100, ms150, ms200,
                                   ms250, ms300, ms500, ms750, ms1500, infinity} OPTIONAL, -- Cond Setup
      pdcp-SN-SizeUL    ENUMERATED {len12bits, len18bits} OPTIONAL, -- Cond Setup1
      pdcp-SN-SizeDL    ENUMERATED {len12bits, len18bits} OPTIONAL, -- Cond Setup2
      headerCompression CHOICE {
        notUsed          NULL,
        rohc             SEQUENCE {
          maxCID          INTEGER (1..16383) DEFAULT 15,
          profiles        SEQUENCE {
            profile0x0001  BOOLEAN,
            profile0x0002  BOOLEAN,
            profile0x0003  BOOLEAN,
            profile0x0004  BOOLEAN,
            profile0x0006  BOOLEAN,
            profile0x0101  BOOLEAN,
            profile0x0102  BOOLEAN,
            profile0x0103  BOOLEAN,
            profile0x0104  BOOLEAN
          },
          drb-ContinueROHC ENUMERATED { true } OPTIONAL -- Need N
        }
      },
      uplinkOnlyROHC    SEQUENCE {
```

```

maxCID INTEGER (1..16383)
profiles SEQUENCE {
  profile0x0006 BOOLEAN
},
drb-ContinueROHC ENUMERATED { true }
},
...
},
integrityProtection ENUMERATED { enabled }
statusReportRequired ENUMERATED { true }
outOfOrderDelivery ENUMERATED { true }
}
moreThanOneRLC SEQUENCE {
  primaryPath SEQUENCE {
    cellGroup CellGroupId
    logicalChannel LogicalChannelIdentity
  },
  ul-DataSplitThreshold UL-DataSplitThreshold
  pdcp-Duplication BOOLEAN
}
t-Reordering ENUMERATED {
  ms0, ms1, ms2, ms4, ms5, ms8, ms10, ms15, ms20, ms30, ms40,
  ms50, ms60, ms80, ms100, ms120, ms140, ms160, ms180, ms200, ms220,
  ms240, ms260, ms280, ms300, ms500, ms750, ms1000, ms1250,
  ms1500, ms1750, ms2000, ms2250, ms2500, ms2750,
  ms3000, spare28, spare27, spare26, spare25, spare24,
  spare23, spare22, spare21, spare20,
  spare19, spare18, spare17, spare16, spare15, spare14,
  spare13, spare12, spare11, spare10, spare09,
  spare08, spare07, spare06, spare05, spare04, spare03,
  spare02, spare01 }
...,
[[
  cipheringDisabled ENUMERATED {true}
]],
[[
  discardTimerExt-r16 SetupRelease { DiscardTimerExt-r16 }
  moreThanTwoRLC-DRB-r16 SEQUENCE {
    splitSecondaryPath-r16 LogicalChannelIdentity
    duplicationState-r16 SEQUENCE (SIZE (3)) OF BOOLEAN
  }
  ethernetHeaderCompression-r16 SetupRelease { EthernetHeaderCompression-r16 }
]],
[[
  survivalTimeStateSupport-r17 ENUMERATED {true}
  uplinkDataCompression-r17 SetupRelease { UplinkDataCompression-r17 }
  discardTimerExt2-r17 SetupRelease { DiscardTimerExt2-r17 }
  initialRX-DELIV-r17 BIT STRING (SIZE (32))
]],
[[
  pdu-SetDiscard-r18 ENUMERATED {true}
  discardTimerForLowImportance-r18 SetupRelease { DiscardTimerForLowImportance-r18 }
  primaryPathOnIndirectPath-r18 ENUMERATED {true}
]]

```

DEFAULT 15,
 OPTIONAL -- Need N
 OPTIONAL, -- Cond ConnectedTo5GC1
 OPTIONAL, -- Cond Rlc-AM-UM
 OPTIONAL, -- Need R
 OPTIONAL, -- Cond DRB
 OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Cond SplitBearer
 OPTIONAL, -- Need R
 OPTIONAL, -- Cond MoreThanOneRLC
 OPTIONAL, -- Need S
 OPTIONAL -- Cond ConnectedTo5GC
 OPTIONAL, -- Cond DRB2
 OPTIONAL, -- Cond SplitBearer2
 OPTIONAL, -- Need S
 OPTIONAL, -- Cond MoreThanTwoRLC-DRB
 OPTIONAL, -- Need M
 OPTIONAL, -- Cond Drb-Duplication
 OPTIONAL, -- Cond Rlc-AM
 OPTIONAL, -- Need M
 OPTIONAL, -- Cond MRB-Initialization
 OPTIONAL, -- Need R
 OPTIONAL, -- Cond DRB2
 OPTIONAL, -- Cond SplitBearerMP

```

    sn-GapReport-r18          ENUMERATED {true}                                OPTIONAL    -- Need R
  ]]
}

EthernetHeaderCompression-r16 ::= SEQUENCE {
    ehc-Common-r16            SEQUENCE {
        ehc-CID-Length-r16    ENUMERATED { bits7, bits15 },
        ...
    },
    ehc-Downlink-r16          SEQUENCE {
        drb-ContinueEHC-DL-r16 ENUMERATED { true }                                OPTIONAL,    -- Need N
        ...
    }
    ehc-Uplink-r16            SEQUENCE {
        maxCID-EHC-UL-r16      INTEGER (1..32767),
        drb-ContinueEHC-UL-r16 ENUMERATED { true }                                OPTIONAL,    -- Need N
        ...
    }
}
OPTIONAL    -- Need M

UL-DataSplitThreshold ::= ENUMERATED {
    b0, b100, b200, b400, b800, b1600, b3200, b6400, b12800, b25600, b51200, b102400, b204800,
    b409600, b819200, b1228800, b1638400, b2457600, b3276800, b4096000, b4915200, b5734400,
    b6553600, infinity, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1}

DiscardTimerExt-r16 ::= ENUMERATED {ms0dot5, ms1, ms2, ms4, ms6, ms8, spare2, spare1}

DiscardTimerExt2-r17 ::= ENUMERATED {ms2000, spare3, spare2, spare1}

UplinkDataCompression-r17 ::= CHOICE {
    newSetup                  SEQUENCE {
        bufferSize-r17        ENUMERATED {kbyte2, kbyte4, kbyte8, spare1},
        dictionary-r17        ENUMERATED {sip-SDP, operator}                                OPTIONAL    -- Need N
    },
    drb-ContinueUDC           NULL
}

DiscardTimerForLowImportance-r18 ::= ENUMERATED {ms0, ms2, ms4, ms6, ms8, ms10, ms12, ms14, ms18, ms22, ms26, ms30, ms40, ms50, ms75, ms100}

-- TAG-PDCP-CONFIG-STOP
-- ASN1STOP

```

<i>PDCP-Config</i> field descriptions
<i>cipheringDisabled</i> If included, ciphering is disabled for this DRB regardless of which ciphering algorithm is configured for the SRB/DRBs. The field may only be included if the UE is connected to 5GC. Otherwise the field is absent. The network configures all DRBs with the same PDU-session ID with same value for this field. The value for this field cannot be changed after the DRB is set up.
<i>discardTimer</i> Value in ms of <i>discardTimer</i> specified in TS 38.323 [5]. Value <i>ms10</i> corresponds to 10 ms, value <i>ms20</i> corresponds to 20 ms and so on. The value for this field cannot be changed in case of reconfiguration with sync, if the bearer is configured as DAPS bearer.
<i>discardTimerExt</i> Value in ms of <i>discardTimer</i> specified in TS 38.323 [5]. Value <i>ms0dot5</i> corresponds to 0.5 ms, value <i>ms1</i> corresponds to 1ms and so on. If this field is present, the field <i>discardTimer</i> is ignored and <i>discardTimerExt</i> is used instead.
<i>discardTimerExt2</i> Value in ms of <i>discardTimerExt</i> specified in TS 38.323 [5]. Value <i>ms2000</i> corresponds to 2000 ms. If this field is present, the field <i>discardTimer</i> and <i>discardTimerExt</i> are ignored and <i>discardTimerExt2</i> is used instead.
<i>discardTimerForLowImportance</i> Value in ms of <i>discardTimerForLowImportance</i> specified in TS 38.323 [5]. Value <i>ms0</i> corresponds to 0 ms, value <i>ms2</i> corresponds to 2 ms and so on. The value of this timer for a PDCP entity is always configured shorter than <i>discardTimer</i> , <i>discardTimerExt</i> or <i>discardTimerExt2</i> , whichever is used for the PDCP entity. The presence of this field indicates that PSI-based SDU discard is configured for a DRB. The network configures at most 8 DRBs with <i>discardTimerForLowImportance</i> .
<i>drb-ContinueROHC</i> Indicates whether the PDCP entity continues or resets the ROHC header compression protocol during PDCP re-establishment, as specified in TS 38.323 [5]. This field is configured only in case of resuming an RRC connection or reconfiguration with sync, where the PDCP termination point is not changed and the <i>fullConfig</i> is not indicated. The network does not include the field if the bearer is configured as DAPS bearer. This field can be configured for both DRB and multicast MRB.
<i>duplicationState</i> This field indicates the uplink PDCP duplication state for the associated RLC entities at the time of receiving this IE. If set to <i>true</i> , the PDCP duplication state is activated for the associated RLC entity. The index for the indication is determined by ascending order of logical channel ID of all RLC entities other than the primary RLC entity indicated by <i>primaryPath</i> in the order of MCG and SCG, as in clause 6.1.3.32 of TS 38.321 [3]. For MP, the index for the indication is determined by ascending order of direct path (where <i>i</i> is ascending order of logical channel ID of secondary RLC entities) and indirect path, as in clause 6.1.3.32 of TS 38.321 [3]. If the number of associated RLC entities other than the primary RLC entity is two, UE ignores the value in the largest index of this field. If the field is absent, the PDCP duplication states are deactivated for all associated RLC entities.
<i>ethernetHeaderCompression</i> This fields configures Ethernet Header Compression. This field can only be configured for a bi-directional DRB or a bi-directional multicast MRB. The network reconfigures <i>ethernetHeaderCompression</i> only upon reconfiguration involving PDCP re-establishment and with neither <i>drb-ContinueEHC-DL</i> nor <i>drb-ContinueEHC-UL</i> configured. Network only configures this field when <i>uplinkDataCompression</i> is not configured.
<i>headerCompression</i> If rohc is configured, the UE shall apply the configured ROHC profile(s) in both uplink and downlink. If <i>uplinkOnlyROHC</i> is configured, the UE shall apply the configured ROHC profile(s) in uplink (there is no header compression in downlink). ROHC can be configured for any bearer type. ROHC and EHC can be both configured simultaneously for a DRB or a multicast MRB. The network reconfigures <i>headerCompression</i> only upon reconfiguration involving PDCP re-establishment or involving PDCP entity reconfiguration to configure DAPS bearer(s), and without any <i>drb-ContinueROHC</i> . Network configures <i>headerCompression</i> to <i>notUsed</i> when <i>outOfOrderDelivery</i> is configured. Network only configures this field when <i>uplinkDataCompression</i> is not configured.
<i>initialRX-DELIV</i> Indicates the initial value of RX_DELIV during PDCP window initialization for multicast MRB as specified in TS 38.323 [5]. The first/leftmost bit of the bit string contains the most significant bit.
<i>integrityProtection</i> Indicates whether or not integrity protection is configured for this radio bearer. The network configures all DRBs with the same PDU-session ID with same value for this field. The value for this field cannot be changed after the DRB is set up.

<i>PDCP-Config</i> field descriptions
<i>maxCID</i> Indicates the value of the MAX_CID parameter as specified in TS 38.323 [5]. The total value of MAX_CIDs across all bearers for the UE should be less than or equal to the value of <i>maxNumberROHC-ContextSessions</i> parameter as indicated by the UE.
<i>moreThanOneRLC</i> This field configures UL data transmission when more than one RLC entity is associated with the PDCP entity. This field is not present if the bearer is configured as DAPS bearer.
<i>moreThanTwoRLC-DRB</i> This field configures UL data transmission when more than two RLC entities are associated with the PDCP entity for DRBs.
<i>outOfOrderDelivery</i> Indicates whether or not <i>outOfOrderDelivery</i> specified in TS 38.323 [5] is configured. This field should be either always present or always absent, after the radio bearer is established.
<i>pdcp-Duplication</i> Indicates whether or not uplink duplication status at the time of receiving this IE is configured and activated as specified in TS 38.323 [5]. The presence of this field indicates that duplication is configured. PDCP duplication is not configured for CA packet duplication of LTE RLC bearer. The value of this field, when the field is present, indicates the state of the duplication at the time of receiving this IE. If set to <i>true</i> , duplication is activated. The value of this field is always <i>true</i> , when configured for a SRB. For PDCP entity with more than two associated RLC entities for UL transmission, this field is always present. If the field <i>moreThanTwoRLC-DRB</i> is present, the value of this field is ignored and the state of the duplication is indicated by <i>duplicationState</i> . For PDCP entity with more than two associated RLC entities, only NR RLC bearer is supported.
<i>pdcp-SN-SizeDL</i> PDCP sequence number size for downlink, 12 or 18 bits, as specified in TS 38.323 [5]. For SRBs only the value <i>len12bits</i> is applicable. The value for this field cannot be changed in case of reconfiguration with sync, if the bearer is configured as DAPS bearer.
<i>pdcp-SN-SizeUL</i> PDCP sequence number size for uplink, 12 or 18 bits, as specified in TS 38.323 [5]. For SRBs only the value <i>len12bits</i> is applicable. The value for this field cannot be changed in case of reconfiguration with sync, if the bearer is configured as DAPS bearer.
<i>pdu-SetDiscard</i> If set to true, the UE shall perform PDU Set based discarding for this PDCP entity, as specified in TS 38.323 [5]. This field is only configured for a DRB.
<i>primaryPath</i> Indicates the cell group ID and LCID of the primary RLC entity as specified in TS 38.323 [5], clause 5.2.1 for UL data transmission when more than one RLC entity is associated with the PDCP entity. In this version of the specification, only cell group ID corresponding to MCG is supported for SRBs, except for the split SRB2 of the IAB-MT, and except when the UE is required to set the <i>primaryPath</i> to refer to the SCG or indirect path as specified in clause 5.7.3b.4. In this last case, if the network sends an <i>RRCReconfiguration</i> message (in NR-DC) or an EUTRA <i>RRCConnectionReconfiguration</i> message (in (NG)EN-DC) keeping SRB1 as split SRB, the network explicitly configures the <i>primaryPath</i> for the PDCP entity of SRB1 to refer to the MCG. In this version of the specification, only cell group ID corresponding to MCG is supported for DRBs when the SCG is deactivated. In MR-DC, the NW indicates <i>cellGroup</i> for split bearers using logical channels in different cell groups. The NW always indicates <i>logicalChannel</i> if CA based PDCP duplication is configured in the cell group indicated by <i>cellGroup</i> of this field. This field is also used for configuring Multi-path Primary Path defined in [5] for MP operation. In MP, when the primary path is indirect path, the field <i>cellGroup</i> and <i>logicalChannel</i> are absent, and the field <i>primaryPathOnIndirectPath</i> is set to true.
<i>primaryPathOnIndirectPath</i> Indicates that the primary path is SL indirect path, or primary path is associated with the N3C indirect path, for DRB when MP is configured.
<i>sn-GapReport</i> Indicates whether the PDCP entity is configured to send a PDCP SN gap report in the uplink, as specified in TS 38.323 [5]. This field is only configured for DRBs. This field can be included only if <i>outOfOrderDelivery</i> is not configured.
<i>splitSecondaryPath</i> Indicates the LCID of the split secondary RLC entity as specified in TS 38.323 [5] for fallback to split bearer operation when UL data transmission with more than two RLC entities is associated with the PDCP entity. This RLC entity belongs to a cell group that is different from the cell group indicated by <i>cellGroup</i> in the field <i>primaryPath</i> . This RLC entity belongs to the cell group of the direct path if <i>primaryPathOnIndirectPath</i> is set to <i>true</i> in MP case.

<i>PDCP-Config field descriptions</i>
<i>statusReportRequired</i> For AM DRBs, AM MRBs and DAPS UM DRBs, indicates whether the DRB or the multicast MRB is configured to send a PDCP status report in the uplink, as specified in TS 38.323 [5]. For DAPS AM DRBs, it also indicates whether the DRB is configured to send a second PDCP status report in the uplink, as specified in TS 38.323 [5].
<i>survivalTimeStateSupport</i> Indicates whether the DRB associated with this PDCP entity has survival time state support. If this field is configured to be true, all associated RLC entities are activated for PDCP duplication upon reception of a retransmission grant addressed to CS-RNTI, as specified in TS 38.321 [3].
<i>t-Reordering</i> Value in ms of t-Reordering specified in TS 38.323 [5]. Value <i>ms0</i> corresponds to 0 ms, value <i>ms20</i> corresponds to 20 ms, value <i>ms40</i> corresponds to 40 ms, and so on. When the field is absent the UE applies the value <i>infinity</i> . The value for this field cannot be changed in case of reconfiguration with sync, if the bearer is configured as DAPS bearer.
<i>ul-DataSplitThreshold</i> Parameter specified in TS 38.323 [5]. Value <i>b0</i> corresponds to 0 bytes, value <i>b100</i> corresponds to 100 bytes, value <i>b200</i> corresponds to 200 bytes, and so on. The network sets this field to <i>infinity</i> for UEs not supporting <i>splitDRB-withUL-Both-MCG-SCG</i> and when the SCG is deactivated or for multi-path U2N Remote UEs not supporting <i>splitDRB-WithUL-BothDirectIndirect</i> . If the field is absent when the split bearer is configured for the radio bearer first time, then the default value <i>infinity</i> is applied.
<i>uplinkDataCompression</i> Indicates the UDC configuration that the UE shall apply. Network does not configure <i>uplinkDataCompression</i> for a DRB, if <i>headerCompression</i> or <i>ethernetHeaderCompression</i> is already configured or <i>outOfOrderDelivery</i> or DAPS is configured for the DRB. The maximum number of DRBs where <i>uplinkDataCompression</i> can be applied is two. The network reconfigures <i>uplinkDataCompression</i> only upon reconfiguration involving PDCP re-establishment. If the field is set to <i>drb-ContinueUDC</i> , the PDCP entity continues the uplink data compression protocol during PDCP re-establishment, as specified in TS 38.323 [5]. The field is set to <i>drb-ContinueUDC</i> only in case of resuming an RRC connection or reconfiguration with sync, where the PDCP termination point is not changed and the <i>fullConfig</i> is not indicated.

<i>EthernetHeaderCompression field descriptions</i>
<i>drb-ContinueEHC-DL</i> Indicates whether the PDCP entity continues or resets the downlink EHC header compression protocol during PDCP re-establishment, as specified in TS 38.323 [5]. The field is configured only in case of resuming an RRC connection or reconfiguration with sync, where the PDCP termination point is not changed and the <i>fullConfig</i> is not indicated.
<i>drb-ContinueEHC-UL</i> Indicates whether the PDCP entity continues or resets the uplink EHC header compression protocol during PDCP re-establishment, as specified in TS 38.323 [5]. The field is configured only in case of resuming an RRC connection or reconfiguration with sync, where the PDCP termination point is not changed and the <i>fullConfig</i> is not indicated.
<i>ehc-CID-Length</i> Indicates the length of the CID field for EHC packet. The value <i>bits7</i> indicates the length is 7 bits, and the value <i>bits15</i> indicates the length is 15 bits. Once the field <i>ethernetHeaderCompression-r16</i> is configured for a DRB or a multicast MRB, the value of the field <i>ehc-CID-Length</i> for this DRB or multicast MRB is not reconfigured to a different value.
<i>ehc-Common</i> Indicates the configurations that apply for both downlink and uplink.
<i>ehc-Downlink</i> Indicates the configurations that apply for only downlink. If the field is configured, then Ethernet header compression is configured for downlink. Otherwise, it is not configured for downlink.
<i>ehc-Uplink</i> Indicates the configurations that apply for only uplink. If the field is configured, then Ethernet header compression is configured for uplink. Otherwise, it is not configured for uplink.
<i>maxCID-EHC-UL</i> Indicates the value of the MAX_CID_EHC_UL parameter as specified in TS 38.323 [5]. The total value of MAX_CID_EHC_UL across all bearers for the UE should be less than or equal to the value of <i>maxNumberEHC-Contexts</i> parameter as indicated by the UE.

<i>UplinkDataCompression field descriptions</i>	
bufferSize	This field indicates the buffer size applied for UDC as specified in TS 38.323 [5]. Value <i>kbyte2</i> means 2048 bytes, <i>kbyte4</i> means 4096 bytes and so on.
dictionary	This field indicates which pre-defined dictionary is used for UDC as specified in TS 38.323 [5]. The value <i>sip-SDP</i> means that UE shall prefill the buffer with standard dictionary for SIP and SDP defined in TS 38.323 [5], and the value <i>operator</i> means that UE shall prefill the buffer with operator-defined dictionary.

Conditional presence	Explanation
<i>DRB</i>	This field is mandatory present when the corresponding DRB/multicast MRB is being set up, absent for SRBs. Otherwise this field is optionally present, need M.
<i>DRB2</i>	This field is optionally present in case of DRB, need M. Otherwise, it is absent for SRBs and MRBs.
<i>Drb-Duplication</i>	For SRBs, this field is absent. For DRBs, this field is absent if duplication is not configured. Otherwise, this field is optional, need R.
<i>MoreThanOneRLC</i>	This field is mandatory present upon RRC reconfiguration with setup of a PDCP entity for a radio bearer (except for multicast MRB) with more than one associated logical channel and upon RRC reconfiguration with the association of additional logical channels to the PDCP entity. The field is also mandatory present in case the field <i>moreThanTwoRLC-DRB</i> is included in <i>PDCP-Config</i> . Upon RRC reconfiguration when a PDCP entity is associated with multiple logical channels, this field is optionally present need M. Otherwise, this field is absent. Need R.
<i>MoreThanTwoRLC-DRB</i>	For SRBs, this field is absent. For DRBs, this field is mandatory present upon RRC reconfiguration with setup of a PDCP entity for a radio bearer with more than two associated logical channels and upon RRC reconfiguration with the association of one or more additional logical channel(s) to the PDCP entity so that the PDCP entity has more than two associated logical channels. Upon RRC reconfiguration when a PDCP entity is associated with more than two logical channels, this field is optionally present, Need M. Otherwise, the field is absent, Need R.
<i>Rlc-AM</i>	For RLC AM, the field is optionally present, need M. Otherwise, the field is absent.
<i>Rlc-AM-UM</i>	In case of DRB, for RLC UM (if the UE supports DAPS handover) or RLC AM, the field is optionally present, need R. In case of multicast MRB, if multicast MRB is associated with at least one RLC AM entity, the field is optionally present, need R. Otherwise, the field is absent.
<i>Setup</i>	The field is mandatory present in case of DRB setup. Otherwise the field is optionally present, need M.
<i>SplitBearer</i>	The field is absent for SRBs. Otherwise, the field is optional present, need M, in case of radio bearer with more than one associated RLC mapped to different cell groups.
<i>SplitBearer2</i>	The field is mandatory present, in case of a split bearer except MP split bearer with primary path on direct path. Otherwise the field is absent.
<i>SplitBearerMP</i>	The field is absent for SRBs. Otherwise, the field is optionally present, need R, when MP is configured.
<i>ConnectedTo5GC</i>	The field is optionally present, need R, if the UE is connected to 5GC. Otherwise the field is absent.
<i>ConnectedTo5GC1</i>	The field is optionally present, need R, if the UE is connected to NR/5GC or if the UE supports user plane integrity protection when connected to E-UTRA/EPC (as specified in TS 33.401 [30]). Otherwise the field is absent.
<i>Setup1</i>	This field is mandatory present in case of DRB setup for RLC-AM and RLC-UM. Otherwise, this field is absent, Need M.
<i>Setup2</i>	This field is mandatory present in case for radio bearer setup for RLC-AM and RLC-UM. Otherwise, this field is absent, Need M.
<i>MRB-Initialization</i>	This field is mandatory present in case of multicast MRB setup or in case UE configured with multicast reception in RRC_INACTIVE resumes the RRC connection. In case of PDCP re-establishment for multicast MRB, this field is optionally present, Need N. Otherwise, this field is absent, Need N.

– PDSCH-Config

The *PDSCH-Config* IE is used to configure the UE specific PDSCH parameters. If this IE is used for MBS CFR, the following fields shall be absent: *tcI-StatesToAddModList*, *tcI-StatesToReleaseList*, *zp-CSI-RS-ResourceToAddModList*, *minimumSchedulingOffsetK0*, *antennaPortsFieldPresenceDCI-1-2*, *aperiodicZP-CSI-RS-ResourceSetsToAddModListDCI-1-2*, *aperiodicZP-CSI-RS-ResourceSetsToReleaseListDCI-1-2*, *dmrs-DownlinkForPDSCH-MappingTypeA-DCI-1-2*, *dmrs-DownlinkForPDSCH-MappingTypeB-DCI-1-2*, *dmrs-SequenceInitializationDCI-1-2*, *harq-ProcessNumberSizeDCI-1-2*, *mcs-TableDCI-1-2*, *numberOfBitsForRV-DCI-1-2*, *pdsch-AggregationFactor*, *pdsch-TimeDomainAllocationListDCI-1-2*, *prb-BundlingTypeDCI-1-2*, *priorityIndicatorDCI-1-2*, *rateMatchPatternGroup1DCI-1-2*, *rateMatchPatternGroup2DCI-1-2*, *resourceAllocationType1GranularityDCI-1-2*, *vrB-ToPRB-InterleaverDCI-1-2*, *referenceOfSLIVDCI-1-2*, *resourceAllocationDCI-1-2*, *dataScramblingIdentityPDSCH2-r16*, *repetitionSchemeConfig*, *pdsch-ConfigDCI-1-3*.

PDSCH-Config information element

```
-- ASN1START
-- TAG-PDSCH-CONFIG-START

PDSCH-Config ::=
  dataScramblingIdentityPDSCH          SEQUENCE {
    INTEGER (0..1023)                  OPTIONAL, -- Need S
    dmrs-DownlinkForPDSCH-MappingTypeA SetupRelease { DMRS-DownlinkConfig } OPTIONAL, -- Need M
    dmrs-DownlinkForPDSCH-MappingTypeB SetupRelease { DMRS-DownlinkConfig } OPTIONAL, -- Need M

    tcI-StatesToAddModList              SEQUENCE (SIZE(1..maxNrofTCI-States)) OF TCI-State OPTIONAL, -- Need N
    tcI-StatesToReleaseList             SEQUENCE (SIZE(1..maxNrofTCI-States)) OF TCI-StateId  OPTIONAL, -- Need N
    vrB-ToPRB-Interleaver              ENUMERATED {n2, n4}                               OPTIONAL, -- Need S
    resourceAllocation                  ENUMERATED { resourceAllocationType0, resourceAllocationType1, dynamicSwitch},
    pdsch-TimeDomainAllocationList      SetupRelease { PDSCH-TimeDomainResourceAllocationList } OPTIONAL, -- Need M
    pdsch-AggregationFactor             ENUMERATED { n2, n4, n8 }                       OPTIONAL, -- Need S
    rateMatchPatternToAddModList        SEQUENCE (SIZE (1..maxNrofRateMatchPatterns)) OF RateMatchPattern OPTIONAL, -- Need N
    rateMatchPatternToReleaseList       SEQUENCE (SIZE (1..maxNrofRateMatchPatterns)) OF RateMatchPatternId OPTIONAL, -- Need N
    rateMatchPatternGroup1              RateMatchPatternGroup                          OPTIONAL, -- Need R
    rateMatchPatternGroup2              RateMatchPatternGroup                          OPTIONAL, -- Need R

    rbg-Size                           ENUMERATED {config1, config2},
    mcs-Table                           ENUMERATED {qam256, qam64LowSE}                 OPTIONAL, -- Need S
    maxNrofCodewordsScheduledByDCI      ENUMERATED {n1, n2}                           OPTIONAL, -- Need R

    prb-BundlingType                   CHOICE {
      staticBundling                   SEQUENCE {
        bundleSize                     ENUMERATED { n4, wideband }                     OPTIONAL -- Need S
      },
      dynamicBundling                  SEQUENCE {
        bundleSizeSet1                 ENUMERATED { n4, wideband, n2-wideband, n4-wideband } OPTIONAL, -- Need S
        bundleSizeSet2                 ENUMERATED { n4, wideband }                     OPTIONAL -- Need S
      }
    },
    zp-CSI-RS-ResourceToAddModList      SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-Resources)) OF ZP-CSI-RS-Resource OPTIONAL, -- Need N
    zp-CSI-RS-ResourceToReleaseList     SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-Resources)) OF ZP-CSI-RS-ResourceId OPTIONAL, -- Need N
    aperiodic-ZP-CSI-RS-ResourceSetsToAddModList SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-ResourceSets)) OF ZP-CSI-RS-ResourceSet OPTIONAL, -- Need N
    aperiodic-ZP-CSI-RS-ResourceSetsToReleaseList SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-ResourceSets)) OF ZP-CSI-RS-ResourceSetId
```

```

sp-ZP-CSI-RS-ResourceSetsToAddModList SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-ResourceSets)) OF ZP-CSI-RS-ResourceSet OPTIONAL, -- Need N
sp-ZP-CSI-RS-ResourceSetsToReleaseList SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-ResourceSets)) OF ZP-CSI-RS-ResourceSetId OPTIONAL, -- Need N
p-ZP-CSI-RS-ResourceSet SetupRelease { ZP-CSI-RS-ResourceSet } OPTIONAL, -- Need M
...
[[
maxMIMO-Layers-r16 SetupRelease { MaxMIMO-LayersDL-r16 } OPTIONAL, -- Need M
minimumSchedulingOffsetK0-r16 SetupRelease { MinSchedulingOffsetK0-Values-r16 } OPTIONAL, -- Need M

-- Start of the parameters for DCI format 1_2 introduced in V16.1.0
antennaPortsFieldPresenceDCI-1-2-r16 ENUMERATED {enabled} OPTIONAL, -- Need S
aperiodicZP-CSI-RS-ResourceSetsToAddModListDCI-1-2-r16 SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-ResourceSets)) OF ZP-CSI-RS-ResourceSet OPTIONAL, -- Need N
aperiodicZP-CSI-RS-ResourceSetsToReleaseListDCI-1-2-r16 SEQUENCE (SIZE (1..maxNrofZP-CSI-RS-ResourceSets)) OF ZP-CSI-RS-ResourceSetId OPTIONAL, -- Need N
dmrs-DownlinkForPDSCH-MappingTypeA-DCI-1-2-r16 SetupRelease { DMRS-DownlinkConfig } OPTIONAL, -- Need M
dmrs-DownlinkForPDSCH-MappingTypeB-DCI-1-2-r16 SetupRelease { DMRS-DownlinkConfig } OPTIONAL, -- Need M
dmrs-SequenceInitializationDCI-1-2-r16 ENUMERATED {enabled} OPTIONAL, -- Need S
harq-ProcessNumberSizeDCI-1-2-r16 INTEGER (0..4) OPTIONAL, -- Need R
mcs-TableDCI-1-2-r16 ENUMERATED {qam256, qam64LowSE} OPTIONAL, -- Need S
numberOfBitsForRV-DCI-1-2-r16 INTEGER (0..2) OPTIONAL, -- Need R
pdsch-TimeDomainAllocationListDCI-1-2-r16 SetupRelease { PDSCH-TimeDomainResourceAllocationList-r16 } OPTIONAL, -- Need M
prb-BundlingTypeDCI-1-2-r16 CHOICE {
    staticBundling-r16 SEQUENCE {
        bundleSize-r16 ENUMERATED { n4, wideband } OPTIONAL -- Need S
    },
    dynamicBundling-r16 SEQUENCE {
        bundleSizeSet1-r16 ENUMERATED { n4, wideband, n2-wideband, n4-wideband } OPTIONAL, -- Need S
        bundleSizeSet2-r16 ENUMERATED { n4, wideband } OPTIONAL -- Need S
    }
}
priorityIndicatorDCI-1-2-r16 ENUMERATED {enabled} OPTIONAL, -- Need R
rateMatchPatternGroup1DCI-1-2-r16 RateMatchPatternGroup OPTIONAL, -- Need S
rateMatchPatternGroup2DCI-1-2-r16 RateMatchPatternGroup OPTIONAL, -- Need R
resourceAllocationType1GranularityDCI-1-2-r16 ENUMERATED {n2,n4,n8,n16} OPTIONAL, -- Need S
vrb-ToPRB-InterleaverDCI-1-2-r16 ENUMERATED {n2, n4} OPTIONAL, -- Need S
referenceOfSLIVDCI-1-2-r16 ENUMERATED {enabled} OPTIONAL, -- Need S
resourceAllocationDCI-1-2-r16 ENUMERATED { resourceAllocationType0, resourceAllocationType1, dynamicSwitch } OPTIONAL, -- Need M

-- End of the parameters for DCI format 1_2 introduced in V16.1.0

priorityIndicatorDCI-1-1-r16 ENUMERATED {enabled} OPTIONAL, -- Need S
dataScramblingIdentityPDSCH2-r16 INTEGER (0..1023) OPTIONAL, -- Need R
pdsch-TimeDomainAllocationList-r16 SetupRelease { PDSCH-TimeDomainResourceAllocationList-r16 } OPTIONAL, -- Need M
repetitionSchemeConfig-r16 SetupRelease { RepetitionSchemeConfig-r16 } OPTIONAL -- Need M
]],
[[
repetitionSchemeConfig-v1630 SetupRelease { RepetitionSchemeConfig-v1630 } OPTIONAL -- Need M
]],
[[

```

pdsch-HARQ-ACK-OneShotFeedbackDCI-1-2-r17	ENUMERATED {enabled}	OPTIONAL, -- Need R
pdsch-HARQ-ACK-EnhType3DCI-1-2-r17	ENUMERATED {enabled}	OPTIONAL, -- Need R
pdsch-HARQ-ACK-EnhType3DCI-Field-1-2-r17	ENUMERATED {enabled}	OPTIONAL, -- Need R
pdsch-HARQ-ACK-RetxDCI-1-2-r17	ENUMERATED {enabled}	OPTIONAL, -- Need R
pucch-sSCellDynDCI-1-2-r17	ENUMERATED {enabled}	OPTIONAL, -- Need R
dl-OrJointTCI-StateList-r17	CHOICE {	
explicitList	SEQUENCE {	
dl-OrJointTCI-StateToAddModList-r17	SEQUENCE (SIZE (1..maxNrofTCI-States)) OF TCI-State	OPTIONAL, -- Need N
dl-OrJointTCI-StateToReleaseList-r17	SEQUENCE (SIZE (1..maxNrofTCI-States)) OF TCI-StateId	OPTIONAL -- Need N
},		
unifiedTCI-StateRef-r17	ServingCellAndBWP-Id-r17	
}		OPTIONAL, -- Need R
beamAppTime-r17	ENUMERATED {n1, n2, n4, n7, n14, n28, n42, n56, n70, n84, n98, n112, n224, n336, spare2, spare1}	OPTIONAL, -- Need R
dummy	SetupRelease { Dummy-TDRA-List }	OPTIONAL, -- Need M
dmrs-FD-OCC-DisabledForRank1-PDSCH-r17	ENUMERATED {true}	OPTIONAL, -- Need R
minimumSchedulingOffsetK0-r17	SetupRelease { MinSchedulingOffsetK0-Values-r17 }	OPTIONAL, -- Need M
harq-ProcessNumberSizeDCI-1-2-v1700	INTEGER (0..5)	OPTIONAL, -- Need R
harq-ProcessNumberSizeDCI-1-1-r17	INTEGER (5)	OPTIONAL, -- Need R
mcs-Table-r17	ENUMERATED {qam1024}	OPTIONAL, -- Need R
mcs-TableDCI-1-2-r17	ENUMERATED {qam1024}	OPTIONAL, -- Need R
xOverheadMulticast-r17	ENUMERATED {x0h6, x0h12, x0h18}	OPTIONAL, -- Need S
priorityIndicatorDCI-4-2-r17	ENUMERATED {enabled}	OPTIONAL, -- Need S
sizeDCI-4-2-r17	INTEGER (20..maxDCI-4-2-Size-r17)	OPTIONAL -- Need R
[[		
pdsch-TimeDomainAllocationListForMultiPDSCH-r17	SetupRelease { MultiPDSCH-TDRA-List-r17 }	OPTIONAL -- Need M
[[		
advancedReceiver-MU-MIMO-r18	SetupRelease { AdvancedReceiver-MU-MIMO-r18 }	OPTIONAL, -- Need M
pdsch-ConfigDCI-1-3-r18	SetupRelease { PDSCH-ConfigDCI-1-3-r18 }	OPTIONAL -- Need M
[[		
pdsch-ConfigDCI-1-3-v1860	SetupRelease { PDSCH-ConfigDCI-1-3-v1860 }	OPTIONAL -- Need M
]]		
}		
RateMatchPatternGroup ::=	SEQUENCE (SIZE (1..maxNrofRateMatchPatternsPerGroup)) OF CHOICE {	
cellLevel	RateMatchPatternId,	
bwpLevel	RateMatchPatternId	
}		
MinSchedulingOffsetK0-Values-r16 ::=	SEQUENCE (SIZE (1..maxNrofMinSchedulingOffsetValues-r16)) OF INTEGER (0..maxK0-SchedulingOffset-r16)	
MinSchedulingOffsetK0-Values-r17 ::=	SEQUENCE (SIZE (1..maxNrofMinSchedulingOffsetValues-r16)) OF INTEGER (0..maxK0-SchedulingOffset-r17)	
MaxMIMO-LayersDL-r16 ::=	INTEGER (1..8)	
PDSCH-ConfigDCI-1-3-r18 ::=	SEQUENCE {	
resourceAllocationDCI-1-3-r18	ENUMERATED {resourceAllocationType0, resourceAllocationType1, dynamicSwitch}	OPTIONAL, -- Need M
rbg-SizeDCI-1-3-r18	ENUMERATED {config1, config2, config3, spare1}	OPTIONAL, -- Cond DCI-1-3

```
resourceAllocationType1GranularityDCI-1-3-r18 ENUMERATED {n2,n4,n8,n16}
numberOfBitsForRV-DCI-1-3-r18 INTEGER (0..2)
harq-ProcessNumberSizeDCI-1-3-r18 INTEGER (0..5)
}

PDSCH-ConfigDCI-1-3-v1860 ::= SEQUENCE {
    enabledDefaultBeamForMultiCellScheduling-r18 ENUMERATED {enabled}
}

-- TAG-PDSCH-CONFIG-STOP
-- ASN1STOP
```

```
OPTIONAL, -- Need S
OPTIONAL, -- Need R
OPTIONAL  -- Need R
```

PDSCH-Config field descriptions
advancedReceiver-MU-MIMO A set of assistance information for R-ML (reduced complexity ML) receivers with enhanced inter-user interference suppression for MU-MIMO transmissions.
antennaPortsFieldPresenceDCI-1-2 Configure the presence of "Antenna ports" field in DCI format 1_2. When the field is configured, then the "Antenna ports" field is present in DCI format 1_2. Otherwise, the field size is set to 0 for DCI format 1_2 (See TS 38.212 [17], clause 7.3.1.1.3). If neither <i>dmrs-DownlinkForPDSCH-MappingTypeA-DCI-1-2</i> nor <i>dmrs-DownlinkForPDSCH-MappingTypeB-DCI-1-2</i> is configured, this field is absent.
aperiodic-ZP-CSI-RS-ResourceSetsToAddModList, aperiodic-ZP-CSI-RS-ResourceSetsToAddModListDCI-1-2 AddMod/Release lists for configuring aperiodically triggered zero-power CSI-RS resource sets. Each set contains a <i>ZP-CSI-RS-ResourceSetId</i> and the IDs of one or more <i>ZP-CSI-RS-Resources</i> (the actual resources are defined in the <i>zp-CSI-RS-ResourceToAddModList</i>). The network configures the UE with at most 3 aperiodic <i>ZP-CSI-RS-ResourceSets</i> and it uses only the <i>ZP-CSI-RS-ResourceSetId</i> 1 to 3. The network triggers a set by indicating its <i>ZP-CSI-RS-ResourceSetId</i> in the DCI payload. The DCI codepoint '01' triggers the resource set with <i>ZP-CSI-RS-ResourceSetId</i> 1, the DCI codepoint '10' triggers the resource set with <i>ZP-CSI-RS-ResourceSetId</i> 2, and the DCI codepoint '11' triggers the resource set with <i>ZP-CSI-RS-ResourceSetId</i> 3 (see TS 38.214 [19], clause 5.1.4.2). The field <i>aperiodic-ZP-CSI-RS-ResourceSetsToAddModList</i> applies to DCI format 1_1 and the field <i>aperiodic-ZP-CSI-RS-ResourceSetsToAddModListDCI-1-2</i> applies to DCI format 1_2 (see TS 38.214 [19], clause 5.1.4.2 and TS 38.212 [17] clause 7.3.1).
beamAppTime Indicates the first slot to apply the unified TCI indicated by DCI as specified in TS 38.214 Clause 5.1.5. The value n1 means 1 symbol, n2 two symbols and so on. The first slot is at least Y symbols indicated by beamAppTime parameter after the last symbol of the acknowledgment of the joint or separate DL/UL beam indication. The same value shall be configured for all serving cells in any one of the <i>simultaneousU-TCI-UpdateListN</i> configured in IE <i>CellGroupConfig</i> based on the smallest SCS of the active BWP.
dataScramblingIdentityPDSCH, dataScramblingIdentityPDSCH2 Identifier(s) used to initialize data scrambling (c_init) for PDSCH as specified in TS 38.211 [16], clause 7.3.1.1. The <i>dataScramblingIdentityPDSCH2</i> is configured if <i>coresetPoolIndex</i> is configured with 1 for at least one CORESET in the same BWP.
dl-OrJointTCI-StateToAddModList A list of Transmission Configuration Indicator (TCI) states indicating a transmission configuration which includes QCL-relationships between the DL RSs in one RS set and the PDSCH DMRS ports, PDCCH DMRS ports, and CSI-RS, and in case of joint mode, also the PUSCH, PUCCH and SRS (see TS 38.214 [19], clause 5.1.5).
dmrs-DownlinkForPDSCH-MappingTypeA, dmrs-DownlinkForPDSCH-MappingTypeA-DCI-1-2 DMRS configuration for PDSCH transmissions using PDSCH mapping type A (chosen dynamically via <i>PDSCH-TimeDomainResourceAllocation</i>). Only the fields <i>dmrs-Type</i> , <i>dmrs-AdditionalPosition</i> and <i>maxLength</i> may be set differently for mapping type A and B. The field <i>dmrs-DownlinkForPDSCH-MappingTypeA</i> applies to DCI formats 1_1 and 1_3, and the field <i>dmrs-DownlinkForPDSCH-MappingTypeA-DCI-1-2</i> applies to DCI format 1_2 (see TS 38.212 [17], clause 7.3.1).
dmrs-DownlinkForPDSCH-MappingTypeB, dmrs-DownlinkForPDSCH-MappingTypeB-DCI-1-2 DMRS configuration for PDSCH transmissions using PDSCH mapping type B (chosen dynamically via <i>PDSCH-TimeDomainResourceAllocation</i>). Only the fields <i>dmrs-Type</i> , <i>dmrs-AdditionalPosition</i> and <i>maxLength</i> may be set differently for mapping type A and B. The field <i>dmrs-DownlinkForPDSCH-MappingTypeB</i> applies to DCI formats 1_1 and 1_3, and the field <i>dmrs-DownlinkForPDSCH-MappingTypeB-DCI-1-2</i> applies to DCI format 1_2 (see TS 38.212 [17], clause 7.3.1).
dmrs-FD-OCC-DisabledForRank1-PDSCH If configured, the UE may assume that the set of remaining orthogonal antenna ports, which are within the same code division multiplexing (CDM) group and have different frequency domain orthogonal cover codes (FD-OCC), are not associated with the PDSCH of another UE (see TS 38.214 [19], clause 5.1.6.2). It is applicable for PDSCH SCS of 480 and 960 kHz when rank 1 PDSCH with type-1 or type-2 DMRS is scheduled. If <i>dmrs-TypeEnh-r18</i> is configured, this field is not configured.
dmrs-SequenceInitializationDCI-1-2 Configure whether the field "DMRS Sequence Initialization" is present or not in DCI format 1_2. If the field is absent, then the UE applies the value of 0 bit for the field "DMRS Sequence Initialization" in DCI format 1_2. If the field is present, then the UE applies the value of 1 bit as in DCI format 1_2 (see TS 38.212 [17], clause 7.3.1).
dummy This field is not used in the specification. If received it shall be ignored by the UE.
harq-ProcessNumberSizeDCI-1-2 Configure the number of bits for the field "HARQ process number" in DCI format 1_2 (see TS 38.212 [17], clause 7.3.1).

maxMIMO-Layers Indicates the maximum number of MIMO layers to be used for PDSCH in this DL BWP. If not configured, the UE uses the <i>maxMIMO-Layers</i> configuration in IE <i>PDSCH-ServingCellConfig</i> of the serving cell to which this BWP belongs, when the UE operates in this BWP. The value of <i>maxMIMO-Layers</i> for a DL BWP shall be smaller than or equal to the value of <i>maxMIMO-Layers</i> configured in IE <i>PDSCH-ServingCellConfig</i> of the serving cell to which this BWP belongs. For MBS multicast, indicates the maximum number of MIMO layers to be used for group-common PDSCH of MBS multicast in this CFR. If not configured for CFR, the UE applies value 1. The value of <i>maxMIMO-Layers</i> for a CFR shall be smaller than or equal to the value of <i>maxMIMO-Layers</i> configured in <i>PDSCH-ServingCellConfig</i> IE of the serving cell to which this CFR belongs.
maxNrofCodeWordsScheduledByDCI Maximum number of code words that a single DCI may schedule. This changes the number of MCS/RV/NDI bits in the DCI message from 1 to 2.
mcs-Table Indicates which MCS table the UE shall use for PDSCH for DCI formats 1_0, 1_1 and 1_3 (see TS 38.214 [19], clause 5.1.3.1). If all fields are absent the UE applies the value 64QAM. If the field <i>mcs-Table-r17</i> is present for DCI formats 1_1 and 1_3, the network does not configure the field <i>mcs-Table</i> (without suffix). For an (e)RedCap UE, the 256QAM MCS table for PDSCH is only supported if the UE indicates support of 256QAM for PDSCH.
mcs-TableDCI-1-2 Indicates which MCS table the UE shall use for PDSCH for DCI format 1_2 (see TS 38.214 [19], clause 5.1.3.1). If all fields are absent the UE applies the value 64QAM. If the field <i>mcs-TableDCI-1-2-r17</i> is present, the network does not configure the field <i>mcs-TableDCI-1-2-r16</i>. For an (e)RedCap UE, the 256QAM MCS table for PDSCH is only supported if the UE indicates support of 256QAM for PDSCH.
minimumSchedulingOffsetK0 List of minimum K0 values. Minimum K0 parameter denotes minimum applicable value(s) for the TDRA table for PDSCH and for A-CSI RS triggering Offset(s) (see TS 38.214 [19], clause 5.3.1).
numberOfBitsForRV-DCI-1-2 Configures the number of bits for "Redundancy version" in the DCI format 1_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.214 [19], clause 5.1.2.1).
pdsch-AggregationFactor Number of repetitions for data (see TS 38.214 [19], clause 5.1.2.1). When the field is absent in <i>PDSCH-Config</i> which is not used for MBS CFR, the UE applies the value 1.
pdsch-HARQ-ACK-EnhType3DCI-1-2 When configured, enhanced Type 3 HARQ-ACK codebook triggering by DCI format 1_2 is enabled.
pdsch-HARQ-ACK-EnhType3DCI-Field-1-2 Enables the enhanced Type 3 codebook through a new DCI field to indicate the enhanced Type 3 HARQ-ACK codebook in DCI format 1_2 if the more than one enhanced Type 3 HARQ-ACK codebook is configured for the primary PUCCH cell group.
pdsch-HARQ-ACK-OneShotFeedbackDCI-1-2 When configured, DCI format 1_2 can request the UE to report A/N for all HARQ processes and all component carriers configured in the PUCCH group (see TS 38.212 [17], clause 7.3.1).
pdsch-HARQ-ACK-RetxDCI-1-2 When configured, DCI format 1_2 can request the UE to perform a HARQ-ACK re-transmission on a PUCCH resource (see TS 38.213 [13], clause 9.1.5).
pdsch-TimeDomainAllocationList, pdsch-TimeDomainAllocationListDCI-1-2, pdsch-TimeDomainAllocationListForMultiPDSCH List of time-domain configurations for timing of DL assignment to DL data. The field <i>pdsch-TimeDomainAllocationList</i> (with or without suffix) applies to DCI format 1_0, DCI format 1_1 and DCI format 1_3 (see table 5.1.2.1.1-1 in TS 38.214 [19]), and if the field <i>pdsch-TimeDomainAllocationListDCI-1-2</i> is not configured, to DCI format 1_2. If the field <i>pdsch-TimeDomainAllocationListDCI-1-2</i> is configured, it applies to DCI format 1_2 (see table 5.1.2.1.1-1A in TS 38.214 [19]). The field <i>pdsch-TimeDomainAllocationListForMultiPDSCH</i> applies to DCI format 1_1. The network does not configure the <i>pdsch-TimeDomainAllocationList-r16</i> simultaneously with the <i>pdsch-TimeDomainAllocationList</i> (without suffix) in the same <i>PDSCH-Config</i>.
prb-BundlingType, prb-BundlingTypeDCI-1-2 Indicates the PRB bundle type and bundle size(s) (see TS 38.214 [19], clause 5.1.2.3). If <i>dynamic</i> is chosen, the actual <i>bundleSizeSet1</i> or <i>bundleSizeSet2</i> to use is indicated via DCI. Constraints on <i>bundleSize(Set)</i> setting depending on <i>vrb-ToPRB-Interleaver</i> and <i>rbg-Size</i> settings are described in TS 38.214 [19], clause 5.1.2.3. If a <i>bundleSize(Set)</i> value is absent, the UE applies the value <i>n2</i>. The field <i>prb-BundlingType</i> applies to DCI formats 1_1 and 1_3, and the field <i>prb-BundlingTypeDCI-1-2</i> applies to DCI format 1_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.214 [19], clause 5.1.2.3).

priorityIndicatorDCI-1-1, priorityIndicatorDCI-1-2, priorityIndicatorDCI-4-2 Configure the presence of "priority indicator" in DCI format 1_1/1_2/4_2. When the field is absent in the IE, then 0 bit for "priority indicator" in DCI format 1_1/1_2/4_2. The field <i>priorityIndicatorDCI-1-1</i> applies to DCI format 1_1, the field <i>priorityIndicatorDCI-1-2</i> applies to DCI format 1_2 and the field <i>priorityIndicatorDCI-4-2</i> applies to DCI format 4_2, respectively (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13] clause 9).
pucch-sCellDynDCI-1-2 When configured, PUCCH cell switching based on dynamic indication in DCI format 1_2 is enabled (see TS 38.213 [13], clause 9.A).
p-ZP-CSI-RS-ResourceSet A set of periodically occurring ZP-CSI-RS-Resources (the actual resources are defined in the <i>zp-CSI-RS-ResourceToAddModList</i>). The network uses the ZP-CSI-RS-ResourceSetId=0 for this set. If <i>p-ZP-CSI-RS-ResourceSet</i> is configured in both <i>PDSCH-Config</i> for MBS CFR and <i>PDSCH-Config</i> for the associated BWP, it is subject to UE capability whether the <i>p-ZP-CSI-RS-ResourceSet</i> configured in <i>PDSCH-Config</i> for MBS CFR can be different from the <i>p-ZP-CSI-RS-ResourceSet</i> configured in <i>PDSCH-Config</i> for the associated BWP.
rateMatchPatternGroup1, rateMatchPatternGroup1DCI-1-2 The IDs of a first group of <i>RateMatchPatterns</i> defined in <i>PDSCH-Config->rateMatchPatternToAddModList</i> (BWP level) or in <i>ServingCellConfig->rateMatchPatternToAddModList</i> (cell level). These patterns can be activated dynamically by DCI (see TS 38.214 [19], clause 5.1.4.1). The field <i>rateMatchPatternGroup1</i> applies to DCI formats 1_1 and 1_3, and the field <i>rateMatchPatternGroup1DCI-1-2</i> applies to DCI format 1_2 (see TS 38.214 [19], clause 5.1.4.1).
rateMatchPatternGroup2, rateMatchPatternGroup2DCI-1-2 The IDs of a second group of <i>RateMatchPatterns</i> defined in <i>PDSCH-Config->rateMatchPatternToAddModList</i> (BWP level) or in <i>ServingCellConfig->rateMatchPatternToAddModList</i> (cell level). These patterns can be activated dynamically by DCI (see TS 38.214 [19], clause 5.1.4.1). The field <i>rateMatchPatternGroup2</i> applies to DCI formats 1_1 and 1_3, and the field <i>rateMatchPatternGroup2DCI-1-2</i> applies to DCI format 1_2 (see TS 38.214 [19], clause 5.1.4.1).
rateMatchPatternToAddModList Resources patterns which the UE should rate match PDSCH around. The UE rate matches around the union of all resources indicated in the rate match patterns (see TS 38.214 [19], clause 5.1.4.1). If a <i>RateMatchPattern</i> with the same <i>RateMatchPatternId</i> is configured in both MBS CFR and its associated BWP, the entire <i>RateMatchPattern</i> configuration, including the set of RBs/REs indicated by the patterns for the rate matching around, shall be the same and they are counted as a single rate match pattern in the total configured rate match patterns as defined in TS 38.214 [19].
rbg-Size Selection between config 1 and config 2 for RBG size for PDSCH except PDSCH scheduled by DCI format 1_3. The UE ignores this field if <i>resourceAllocation</i> is set to <i>resourceAllocationType1</i> (see TS 38.214 [19], clause 5.1.2.2.1).
referenceOfSLIVDCI-1-2 Enable using the starting symbol of the PDCCH monitoring occasion in which the DL assignment is detected as the reference of the SLIV for DCI format 1_2. When the RRC parameter enables the utilization of the new reference, the new reference is applied for TDRA entries with K0=0. For other entries (if any) in the same TDRA table, the reference is slot boundary as in Rel-15. PDSCH mapping type A is not supported with the new reference. The new reference of SLIV is not configured for a serving cell configured to be scheduled by cross-carrier scheduling on a scheduling cell with different numerology (see TS 38.212 [17] clause 7.3.1 and TS 38.214 [19] clause 5.1.2.1).
repetitionSchemeConfig Configure the UE with repetition schemes. The network does not configure <i>repetitionSchemeConfig-r16</i> and <i>repetitionSchemeConfig-v1630</i> simultaneously to <i>setup</i> in the same <i>PDSCH-Config</i>. The network does not configure this parameter and <i>sfnSchemePDSCH</i> in <i>MIMOParam-r17</i> simultaneously in the same serving cell.
resourceAllocation, resourceAllocationDCI-1-2 Configuration of resource allocation type 0 and resource allocation type 1 for non-fallback DCI (see TS 38.214 [19], clause 5.1.2.2). The field <i>resourceAllocation</i> applies to DCI format 1_1, and the field <i>resourceAllocationDCI-1-2</i> applies to DCI format 1_2 (see TS 38.214 [19], clause 5.1.2.2).
resourceAllocationType1GranularityDCI-1-2 Configure the scheduling granularity applicable for both the starting point and length indication for resource allocation type 1 in DCI format 1_2. If this field is absent, the granularity is 1 PRB (see TS 38.214 [19], clause 5.1.2.2.2).
sizeDCI-4-2 Indicates the size of DCI format 4-2 (see TS 38.213 [13], clause 10.1).
sp-ZP-CSI-RS-ResourceSetsToAddModList AddMod/Release lists for configuring semi-persistent zero-power CSI-RS resource sets. Each set contains a <i>ZP-CSI-RS-ResourceSetId</i> and the IDs of one or more <i>ZP-CSI-RS-Resources</i> (the actual resources are defined in the <i>zp-CSI-RS-ResourceToAddModList</i>) (see TS 38.214 [19], clause 5.1.4.2).

<i>tcI-StatesToAddModList</i>
A list of Transmission Configuration Indicator (TCI) states indicating a transmission configuration which includes QCL-relationships between the DL RSs in one RS set and the PDSCH DMRS ports (see TS 38.214 [19], clause 5.1.5). If <i>unifiedTCI-StateType</i> is configured for the serving cell, no element in this list is configured.
<i>unifiedTCI-StateRef</i>
Provides the serving cell and BWP where the configuration for <i>dl-OrJointTCI-StateToAddModList-r17</i> are defined. When this field is present, <i>dl-OrJointTCI-StateToAddModList</i> and <i>dl-OrJointTCI-StateToReleaseList</i> are not present. The value of <i>unifiedTCI-StateType</i> of current serving cell is the same in the serving cell indicated by <i>unifiedTCI-StateRef</i> .
<i>vrB-ToPRB-Interleaver, vrB-ToPRB-InterleaverDCI-1-2</i>
Interleaving unit configurable between 2 and 4 PRBs (see TS 38.211 [16], clause 7.3.1.6). When the field is absent, the UE performs non-interleaved VRB-to-PRB mapping.
<i>xOverheadMulticast</i>
Accounts for an overhead from CSI-RS, CORESET etc. If the field is absent, the UE applies value xOh0 (see TS 38.214 [19]).
<i>zp-CSI-RS-ResourceToAddModList</i>
A list of Zero-Power (ZP) CSI-RS resources used for PDSCH rate-matching. Each resource in this list may be referred to from only one type of resource set, i.e., aperiodic, semi-persistent or periodic (see TS 38.214 [19]).

<i>PDSCH-ConfigDCI-1-3</i> field descriptions
<i>enabledDefaultBeamForMultiCellScheduling</i>
This field indicates whether default beam selection for DCI format 1_3 scheduled PDSCH or aperiodic CSI-RS is enabled (see TS 38.214 [19], clause 5.1.5 and clause 5.2.1.5).
<i>harq-ProcessNumberSizeDCI-1-3</i>
Configure the number of bits for the field "HARQ process number" in DCI format 1_3 (see TS 38.212 [17], clause 7.3.1).
<i>numberOfBitsForRV-DCI-1-3</i>
Configures the number of bits for "Redundancy version" in the DCI format 1_3 (see TS 38.212 [17], clause 7.3.1 and TS 38.214 [19], clause 5.1.2.1).
<i>rbg-SizeDCI-1-3</i>
Selection among config 1, config 2 and config 3 for RBG size for PDSCH scheduled by DCI format 1_3. The UE ignores this field if resourceAllocationDCI-1-3 is set to resourceAllocationType1. (see TS 38.214 [19], clause 5.1.2.2.1).
<i>resourceAllocationDCI-1-3</i>
Configuration of resource allocation type 0 and resource allocation type 1 for DCI format 1_3 (see TS 38.214 [19], clause 5.1.2.2).
<i>resourceAllocationType1GranularityDCI-1-3</i>
Configure the scheduling granularity applicable for both the starting point and length indication for resource allocation type 1 in DCI format 1_3. If this field is absent, the granularity is 1 PRB (see TS 38.214 [19], clause 5.1.2.2.2).

Conditional Presence	Explanation
<i>DCI-1-3</i>	This field is mandatory present when <i>ScheduledCellListDCI-1-3</i> is configured to the serving cell. Otherwise, it is absent, Need R.

– *PDSCH-ConfigCommon*

The IE *PDSCH-ConfigCommon* is used to configure cell specific PDSCH parameters.

PDSCH-ConfigCommon information element

```
-- ASN1START
-- TAG-PDSCH-CONFIGCOMMON-START
```

```

PDSCH-ConfigCommon ::=
    pdsch-TimeDomainAllocationList
    ...
}

-- TAG-PDSCH-CONFIGCOMMON-STOP
-- ASN1STOP

```

PDSCH-ConfigCommon field descriptions

pdsch-TimeDomainAllocationList

List of time-domain configurations for timing of DL assignment to DL data (see table 5.1.2.1.1-1 in TS 38.214 [19]).

PDSCH-ServingCellConfig

The IE *PDSCH-ServingCellConfig* is used to configure UE specific PDSCH parameters that are common across the UE's BWPs of one serving cell.

PDSCH-ServingCellConfig information element

```

-- ASN1START
-- TAG-PDSCH-SERVINGCELLCONFIG-START

PDSCH-ServingCellConfig ::=
    codeBlockGroupTransmission
    xOverhead
    nrofHARQ-ProcessesForPDSCH
    pucch-Cell
    ...
    [[
        maxMIMO-Layers
        processingType2Enabled
    ]],
    [[
        pdsch-CodeBlockGroupTransmissionList-r16 SetupRelease { PDSCH-CodeBlockGroupTransmissionList-r16 }
    ]],
    [[
        downlinkHARQ-FeedbackDisabled-r17
        nrofHARQ-ProcessesForPDSCH-v1700
    ]]
}

PDSCH-CodeBlockGroupTransmission ::=
    maxCodeBlockGroupsPerTransportBlock
    codeBlockGroupFlushIndicator
    ...
}

PDSCH-CodeBlockGroupTransmissionList-r16 ::= SEQUENCE (SIZE (1..2)) OF PDSCH-CodeBlockGroupTransmission

DownlinkHARQ-FeedbackDisabled-r17 ::= BIT STRING (SIZE (32))

```

-- TAG-PDSCH-SERVINGCELLCONFIG-STOP
 -- ASN1STOP

<i>PDSCH-CodeBlockGroupTransmission</i> field descriptions
<i>codeBlockGroupFlushIndicator</i> Indicates whether CBGFI for CBG based (re)transmission in DL is enabled (true). (see TS 38.212 [17], clause 7.3.1.2.2).
<i>maxCodeBlockGroupsPerTransportBlock</i> Maximum number of code-block-groups (CBGs) per TB. In case of multiple CW, the maximum CBG is 4 (see TS 38.213 [13], clause 9.1.1).

<i>PDSCH-ServingCellConfig</i> field descriptions
<i>codeBlockGroupTransmission</i> Enables and configures code-block-group (CBG) based transmission (see TS 38.213 [13], clause 9.1.1). Network does not configure for a UE both spatial bundling of HARQ ACKs and <i>codeBlockGroupTransmission</i> within the same cell group. The network does not configure this field if - the SCS of at least one DL BWP configured in the cell is 480 or 960 kHz - Type-1 HARQ-ACK codebook is configured and <i>pdsch-TimeDomainAllocationListForMultiPDSCH-r17</i> for this serving cell contains pdsch-AllocationList with multiple entries (multiple PDSCH) - Type-2 HARQ-ACK codebook is configured and <i>pdsch-TimeDomainAllocationListForMultiPDSCH-r17</i> for any cell in the same PUCCH cell group associated with this serving cell contains pdsch-AllocationList with multiple entries (multiple PDSCH)
<i>downlinkHARQ-FeedbackDisabled</i> Used to disable the DL HARQ feedback, sent in the uplink, per HARQ process ID. The first/leftmost bit corresponds to HARQ process ID 0, the next bit to HARQ process ID 1 and so on. Bits corresponding to HARQ process IDs that are not configured shall be ignored. The bit(s) set to one identify HARQ processes with disabled DL HARQ feedback and the bit(s) set to zero identify HARQ processes with enabled DL HARQ feedback.
<i>maxMIMO-Layers</i> Indicates the maximum number of MIMO layers to be used for PDSCH in all BWPs of this serving cell. (see TS 38.212 [17], clause 5.4.2.1).
<i>nrofHARQ-ProcessesForPDSCH</i> The number of HARQ processes to be used on the PDSCH of a serving cell. Value <i>n2</i> corresponds to 2 HARQ processes, value <i>n4</i> to 4 HARQ processes, and so on. If both <i>nrofHARQ-ProcessesForPDSCH</i> and <i>nrofHARQ-ProcessesForPDSCH-v1700</i> are absent, the UE uses 8 HARQ processes (see TS 38.214 [19], clause 5.1).
<i>pdsch-CodeBlockGroupTransmissionList</i> A list of configurations for up to two simultaneously constructed HARQ-ACK codebooks (see TS 38.213 [13], clause 9.3).
<i>processingType2Enabled</i> Enables configuration of advanced processing time capability 2 for PDSCH (see 38.214 [19], clause 5.3).
<i>pucch-Cell</i> The ID of the serving cell (of the same cell group) to use for PUCCH. If the field is absent, the UE sends the HARQ feedback on the PUCCH of the SpCell of this cell group, or on this serving cell if it is a PUCCH SCell.
<i>xOverhead</i> Accounts for overhead from CSI-RS, CORESET, etc. If the field is absent, the UE applies value xOh0 (see TS 38.214 [19], clause 5.1.3.2).

Conditional Presence	Explanation
<i>SCellAddOnly</i>	It is optionally present, Need S, for (non-PUCCH) SCells when adding a new SCell. The field is absent, Need M, when reconfiguring SCells. The field is also absent for the SpCells as well as for a PUCCH SCell.

– *PDSCH-TimeDomainResourceAllocationList*

The IE *PDSCH-TimeDomainResourceAllocation* is used to configure a time domain relation between PDCCH and PDSCH. The *PDSCH-TimeDomainResourceAllocationList* contains one or more of such *PDSCH-TimeDomainResourceAllocations*. The network indicates in the DL assignment which of the configured time domain allocations the UE shall apply for that DL assignment. The UE determines the bit width of the DCI field based on the number of entries in the *PDSCH-TimeDomainResourceAllocationList*. Value 0 in the DCI field refers to the first element in this list, value 1 in the DCI field refers to the second element in this list, and so on.

PDSCH-TimeDomainResourceAllocationList information element

```
-- ASN1START
-- TAG-PDSCH-TIMEDOMAINRESOURCEALLOCATIONLIST-START

PDSCH-TimeDomainResourceAllocationList ::= SEQUENCE (SIZE(1..maxNrofDL-Allocations)) OF PDSCH-TimeDomainResourceAllocation

PDSCH-TimeDomainResourceAllocation ::= SEQUENCE {
    k0                INTEGER(0..32)                                OPTIONAL,    -- Need S
    mappingType       ENUMERATED {typeA, typeB},
    startSymbolAndLength INTEGER (0..127)
}

PDSCH-TimeDomainResourceAllocationList-r16 ::= SEQUENCE (SIZE(1..maxNrofDL-Allocations)) OF PDSCH-TimeDomainResourceAllocation-r16

PDSCH-TimeDomainResourceAllocation-r16 ::= SEQUENCE {
    k0-r16            INTEGER(0..32)                                OPTIONAL,    -- Need S
    mappingType-r16   ENUMERATED {typeA, typeB},
    startSymbolAndLength-r16 INTEGER (0..127),
    repetitionNumber-r16 ENUMERATED {n2, n3, n4, n5, n6, n7, n8, n16} OPTIONAL, -- Cond Formats1-0_1-1_4-0_4-1_4-2
    ...,
    [[
    k0-v1710          INTEGER(33..128)                                OPTIONAL    -- Need S
    ]],
    [[
    repetitionNumber-v1730 ENUMERATED {n2, n3, n4, n5, n6, n7, n8, n16} OPTIONAL -- Cond Format1-2
    ]]
}

Dummy-TDRA-List ::= SEQUENCE (SIZE(1.. maxNrofDL-Allocations)) OF MultiPDSCH-TDRA-r17

MultiPDSCH-TDRA-List-r17 ::= SEQUENCE (SIZE(1.. maxNrofDL-AllocationsExt-r17)) OF MultiPDSCH-TDRA-r17

MultiPDSCH-TDRA-r17 ::= SEQUENCE {
    pdsch-TDRA-List-r17 SEQUENCE (SIZE(1..maxNrofMultiplePDSCHs-r17)) OF PDSCH-TimeDomainResourceAllocation-r16,
    ...
}

-- TAG-PDSCH-TIMEDOMAINRESOURCEALLOCATIONLIST-STOP
-- ASN1STOP
```

<i>PDSCH-TimeDomainResourceAllocation</i> field descriptions
<i>k0</i> Slot offset between DCI and its scheduled PDSCH (see TS 38.214 [19], clause 5.1.2.1). <i>k0-v1710</i> is only applicable for PDSCH SCS of 480 kHz and 960 kHz. If multiple PDSCHs are configured per PDCCH, the network always configures this field. Otherwise, when the field is absent and only one PDSCH is configured per PDCCH, the UE applies the value 0.
<i>mappingType</i> PDSCH mapping type (see TS 38.214 [19], clause 5.3).
<i>repetitionNumber</i> Indicates the number of PDSCH transmission occasions for slot-based repetition scheme in IE <i>RepetitionSchemeConfig</i> . The parameter is used as specified in 38.214 [19].
<i>startSymbolAndLength</i> An index giving valid combinations of start symbol and length (jointly encoded) as start and length indicator (SLIV). The network configures the field so that the allocation does not cross the slot boundary (see TS 38.214 [19], clause 5.1.2.1).

<i>MultiPDSCH-TimeDomainResourceAllocation</i> field descriptions
<i>pdsch-TDRA-List</i> One or multiple PDSCHs which can be in consecutive or non-consecutive slots (see TS 38.214 [19], clause 5.1.2.1).

Conditional Presence	Explanation
<i>Format1-2</i>	In <i>pdsch-TimeDomainAllocationListDCI-1-2</i> , this field is optionally present, Need R. It is absent, Need R, otherwise.
<i>Formats1-0_1-1_4-0_4-1_4-2</i>	In <i>pdsch-TimeDomainAllocationListDCI-1-2</i> , <i>pdsch-TimeDomainAllocationListForMultiPDSCH</i> , and <i>SIB20</i> , this field is absent. Otherwise, in <i>pdsch-TimeDomainResourceAllocationList-r16</i> , this field is optionally present, Need R.

– *PDU-SessionID*

The IE *PDU-SessionID* identifies the PDU Session.

PDU-SessionID information element

```
-- ASN1START
-- TAG-PDU-SESSIONID-START

PDU-SessionID ::=  INTEGER (0..255)

-- TAG-PDU-SESSIONID-STOP
-- ASN1STOP
```

– *PHR-Config*

The IE *PHR-Config* is used to configure parameters for power headroom reporting.

PHR-Config information element

```

-- ASN1START
-- TAG-PHR-CONFIG-START

PHR-Config ::=
    phr-PeriodicTimer
    phr-ProhibitTimer
    phr-Tx-PowerFactorChange
    multiplePHR
    dummy
    phr-Type2OtherCell
    phr-Mode0therCG
    ...
    [[
        mpe-Reporting-FR2-r16
    ]],
    [[
        mpe-Reporting-FR2-r17
        twoPHRMode-r17
    ]],
    [[
        phr-AssumedPUSCH-Reporting-r18
        dpc-Reporting-FR1-r18
    ]]
}

MPE-Config-FR2-r16 ::=
    mpe-ProhibitTimer-r16
    mpe-Threshold-r16
}

MPE-Config-FR2-r17 ::=
    mpe-ProhibitTimer-r17
    mpe-Threshold-r17
    numberOfN-r17
    ...
}

-- TAG-PHR-CONFIG-STOP
-- ASN1STOP

```

SEQUENCE {

ENUMERATED {sf10, sf20, sf50, sf100, sf200, sf500, sf1000, infinity},

ENUMERATED {sf0, sf10, sf20, sf50, sf100, sf200, sf500, sf1000},

ENUMERATED {dB1, dB3, dB6, infinity},

BOOLEAN,

BOOLEAN,

BOOLEAN,

ENUMERATED {real, virtual},

SetupRelease { MPE-Config-FR2-r16 } OPTIONAL -- Need M

SetupRelease { MPE-Config-FR2-r17 } OPTIONAL, -- Need M

ENUMERATED {enabled} OPTIONAL -- Need R

ENUMERATED {enabled} OPTIONAL, -- Need R

ENUMERATED {enabled} OPTIONAL -- Need R

SEQUENCE {

ENUMERATED {sf0, sf10, sf20, sf50, sf100, sf200, sf500, sf1000},

ENUMERATED {dB3, dB6, dB9, dB12}

SEQUENCE {

ENUMERATED {sf0, sf10, sf20, sf50, sf100, sf200, sf500, sf1000},

ENUMERATED {dB3, dB6, dB9, dB12},

INTEGER(1..4),

<i>PHR-Config</i> field descriptions
<i>dpc-Reporting-FR1</i> Indicates if the delta power class (DPC) is reported, as specified in TS 38.321 [3].
<i>dummy</i> This field is not used in this version of the specification and the UE ignores the received value.
<i>mpe-ProhibitTimer</i> Value in number of subframes for MPE reporting, as specified in TS 38.321 [3]. Value <i>sf10</i> corresponds to 10 subframes, and so on.
<i>mpe-Reporting-FR2</i> Indicates whether the UE shall report MPE P-MPR in the PHR MAC control element, as specified in TS 38.321 [3].
<i>mpe-Threshold</i> Value of the P-MPR threshold in dB for reporting MPE P-MPR when FR2 is configured, as specified in TS 38.321 [3]. The same value applies for each serving cell (although the associated functionality is performed independently for each cell).
<i>multiplePHR</i> Indicates if power headroom shall be reported using the Single Entry PHR MAC control element or Multiple Entry PHR MAC control element defined in TS 38.321 [3]. True means to use Multiple Entry PHR MAC control element and False means to use the Single Entry PHR MAC control element defined in TS 38.321 [3]. The network configures this field to <i>true</i> for MR-DC and UL CA for NR, and to <i>false</i> in all other cases.
<i>numberOfN</i> Number of reported P-MPR values in a PHR MAC CE.
<i>phr-AssumedPUSCH-Reporting</i> Indicates if the PHR with an assumed PUSCH is reported, as specified in TS 38.321 [3]. The network ensures <i>phr-AssumedPUSCH-Reporting-r18</i> and <i>twoPHRMode-r17</i> are not configured at the same time for a UE.
<i>phr-ModeOtherCG</i> Indicates the mode (i.e. real or virtual) used for the PHR of the activated cells that are part of the other Cell Group (i.e. MCG or SCG), when DC is configured. If the UE is configured with only one cell group (no DC), it ignores the field.
<i>phr-PeriodicTimer</i> Value in number of subframes for PHR reporting as specified in TS 38.321 [3]. Value <i>sf10</i> corresponds to 10 subframes, value <i>sf20</i> corresponds to 20 subframes, and so on.
<i>phr-ProhibitTimer</i> Value in number of subframes for PHR reporting as specified in TS 38.321 [3]. Value <i>sf0</i> corresponds to 0 subframe, value <i>sf10</i> corresponds to 10 subframes, value <i>sf20</i> corresponds to 20 subframes, and so on.
<i>phr-Tx-PowerFactorChange</i> Value in dB for PHR reporting as specified in TS 38.321 [3]. Value <i>dB1</i> corresponds to 1 dB, <i>dB3</i> corresponds to 3 dB and so on. The same value applies for each serving cell (although the associated functionality is performed independently for each cell).
<i>phr-Type2OtherCell</i> If set to true, the UE shall report a PHR type 2 for the SpCell of the other MAC entity. See TS 38.321 [3], clause 5.4.6. Network sets this field to <i>false</i> if the UE is not configured with an E-UTRA MAC entity.
<i>twoPHRMode</i> Indicates if the power headroom shall be reported as two PHRs (each PHR associated with a SRS resource set) is enabled or not. The network ensures <i>phr-AssumedPUSCH-Reporting-r18</i> and <i>twoPHRMode-r17</i> are not configured at the same time for a UE.

– *PhysCellId*

The *PhysCellId* identifies the physical cell identity (PCI).

***PhysCellId* information element**

```
-- ASN1START
-- TAG-PHYSCELLID-START
```

```
PhysCellId ::= INTEGER (0..1007)
```

```
-- TAG-PHYSCELLID-STOP
-- ASN1STOP
```

PhysicalCellGroupConfig

The IE *PhysicalCellGroupConfig* is used to configure cell-group specific L1 parameters.

***PhysicalCellGroupConfig* information element**

```
-- ASN1START
-- TAG-PHYSICALCELLGROUPCONFIG-START
```

```
PhysicalCellGroupConfig ::= SEQUENCE {
  harq-ACK-SpatialBundlingPUCCH    ENUMERATED {true}          OPTIONAL, -- Need S
  harq-ACK-SpatialBundlingPUSCH    ENUMERATED {true}          OPTIONAL, -- Need S
  p-NR-FR1                          P-Max                     OPTIONAL, -- Need R
  pdsch-HARQ-ACK-Codebook           ENUMERATED {semiStatic, dynamic},
  tpc-SRS-RNTI                      RNTI-Value                OPTIONAL, -- Need R
  tpc-PUCCH-RNTI                    RNTI-Value                OPTIONAL, -- Need R
  tpc-PUSCH-RNTI                    RNTI-Value                OPTIONAL, -- Need R
  sp-CSI-RNTI                       RNTI-Value                OPTIONAL, -- Need R
  cs-RNTI                           SetupRelease { RNTI-Value } OPTIONAL, -- Need M
  ...,
  [[
    mcs-C-RNTI                      RNTI-Value                OPTIONAL, -- Need R
    p-UE-FR1                         P-Max                     OPTIONAL, -- Cond MCG-Only
  ]],
  [[
    xScale                           ENUMERATED {dB0, dB6, spare2, spare1} OPTIONAL, -- Cond SCG-Only
  ]],
  [[
    pdcch-BlindDetection              SetupRelease { PDCCH-BlindDetection } OPTIONAL, -- Need M
  ]],
  [[
    dcp-Config-r16                    SetupRelease { DCP-Config-r16 }          OPTIONAL, -- Need M
    harq-ACK-SpatialBundlingPUCCH-secondaryPUCCHgroup-r16  ENUMERATED {enabled, disabled}    OPTIONAL, -- Cond twoPUCCHgroup
    harq-ACK-SpatialBundlingPUSCH-secondaryPUCCHgroup-r16  ENUMERATED {enabled, disabled}    OPTIONAL, -- Cond twoPUCCHgroup
    pdsch-HARQ-ACK-Codebook-secondaryPUCCHgroup-r16         ENUMERATED {semiStatic, dynamic}   OPTIONAL, -- Cond twoPUCCHgroup
    p-NR-FR2-r16                                              P-Max                             OPTIONAL, -- Need R
    p-UE-FR2-r16                                              P-Max                             OPTIONAL, -- Cond MCG-Only
    nrhc-PCmode-FR1-r16                                       ENUMERATED {semi-static-mode1, semi-static-mode2, dynamic} OPTIONAL, -- Cond MCG-Only
    nrhc-PCmode-FR2-r16                                       ENUMERATED {semi-static-mode1, semi-static-mode2, dynamic} OPTIONAL, -- Cond MCG-Only
    pdsch-HARQ-ACK-Codebook-r16                               ENUMERATED {enhancedDynamic}       OPTIONAL, -- Need R
    nfi-TotalDAI-Included-r16                                ENUMERATED {true}                  OPTIONAL, -- Need R
  ]]
```



```

ul-TotalDAI-Included-r16          ENUMERATED {true}          OPTIONAL, -- Need R
pdsch-HARQ-ACK-OneShotFeedback-r16 ENUMERATED {true}          OPTIONAL, -- Need R
pdsch-HARQ-ACK-OneShotFeedbackNDI-r16 ENUMERATED {true}          OPTIONAL, -- Need R
pdsch-HARQ-ACK-OneShotFeedbackCBG-r16 ENUMERATED {true}          OPTIONAL, -- Need R
downlinkAssignmentIndexDCI-0-2-r16  ENUMERATED { enabled }    OPTIONAL, -- Need S
downlinkAssignmentIndexDCI-1-2-r16  ENUMERATED {n1, n2, n4}      OPTIONAL, -- Need S
pdsch-HARQ-ACK-CodebookList-r16     SetupRelease {PDSCH-HARQ-ACK-CodebookList-r16} OPTIONAL, -- Need M
ackNackFeedbackMode-r16             ENUMERATED {joint, separate} OPTIONAL, -- Need R
pdcch-BlindDetectionCA-CombIndicator-r16 SetupRelease { PDCCH-BlindDetectionCA-CombIndicator-r16 } OPTIONAL, -- Need M
pdcch-BlindDetection2-r16           SetupRelease { PDCCH-BlindDetection2-r16 }    OPTIONAL, -- Need M
pdcch-BlindDetection3-r16           SetupRelease { PDCCH-BlindDetection3-r16 }    OPTIONAL, -- Need M
bdFactorR-r16                      ENUMERATED {n1}             OPTIONAL, -- Need R
]],
[[
-- start of enhanced Type3 feedback
pdsch-HARQ-ACK-EnhType3ToAddModList-r17 SEQUENCE (SIZE(1..maxNrofEnhType3HARQ-ACK-r17)) OF PDSCH-HARQ-ACK-EnhType3-r17
                                                                    OPTIONAL, -- Need N
pdsch-HARQ-ACK-EnhType3ToReleaseList-r17 SEQUENCE (SIZE(1..maxNrofEnhType3HARQ-ACK-r17)) OF PDSCH-HARQ-ACK-EnhType3Index-r17
                                                                    OPTIONAL, -- Need N
pdsch-HARQ-ACK-EnhType3SecondaryToAddModList-r17 SEQUENCE (SIZE(1..maxNrofEnhType3HARQ-ACK-r17)) OF PDSCH-HARQ-ACK-EnhType3-r17
                                                                    OPTIONAL, -- Need N
pdsch-HARQ-ACK-EnhType3SecondaryToReleaseList-r17 SEQUENCE (SIZE(1..maxNrofEnhType3HARQ-ACK-r17)) OF PDSCH-HARQ-ACK-EnhType3Index-r17
                                                                    OPTIONAL, -- Need N
pdsch-HARQ-ACK-EnhType3DCI-FieldSecondaryPUCCHgroup-r17 ENUMERATED {enabled}      OPTIONAL, -- Cond twoPUCCHgroup
pdsch-HARQ-ACK-EnhType3DCI-Field-r17                   ENUMERATED {enabled}      OPTIONAL, -- Need R
-- end of enhanced Type3 feedback

-- start of triggering of HARQ-ACK re-transmission on a PUCCH resource
pdsch-HARQ-ACK-Retx-r17                                ENUMERATED {enabled}          OPTIONAL, -- Need R
pdsch-HARQ-ACK-RetxSecondaryPUCCHgroup-r17             ENUMERATED {enabled}          OPTIONAL, -- Cond twoPUCCHgroup
-- end of triggering of HARQ-ACK re-transmission on a PUCCH resource

-- start of PUCCH Cell switching
pucch-sSCell-r17                                       SCellIndex                    OPTIONAL, -- Need R
pucch-sSCellSecondaryPUCCHgroup-r17                   SCellIndex                    OPTIONAL, -- Cond twoPUCCHgroup
pucch-sSCellDyn-r17                                   ENUMERATED {enabled}          OPTIONAL, -- Need R
pucch-sSCellDynSecondaryPUCCHgroup-r17                ENUMERATED {enabled}          OPTIONAL, -- Cond twoPUCCHgroup
pucch-sSCellPattern-r17                               SEQUENCE (SIZE(1..maxNrofSlots)) OF INTEGER (0..1)    OPTIONAL, -- Need R
pucch-sSCellPatternSecondaryPUCCHgroup-r17            SEQUENCE (SIZE(1..maxNrofSlots)) OF INTEGER (0..1)    OPTIONAL, -- Cond twoPUCCHgroup
-- end of PUCCH Cell switching

uci-MuxWithDiffPrio-r17                               ENUMERATED {enabled}          OPTIONAL, -- Need R
uci-MuxWithDiffPrioSecondaryPUCCHgroup-r17            ENUMERATED {enabled}          OPTIONAL, -- Cond twoPUCCHgroup
simultaneousPUCCH-PUSCH-r17                           ENUMERATED {enabled}          OPTIONAL, -- Need R
simultaneousPUCCH-PUSCH-SecondaryPUCCHgroup-r17      ENUMERATED {enabled}          OPTIONAL, -- Cond twoPUCCHgroup

prioLowDG-HighCG-r17                                  ENUMERATED {enabled}          OPTIONAL, -- Need R
prioHighDG-LowCG-r17                                  ENUMERATED {enabled}          OPTIONAL, -- Need R
twoQCLTypeDforPDCCHRepetition-r17                   ENUMERATED {enabled}          OPTIONAL, -- Need R
multicastConfig-r17                                   SetupRelease { MulticastConfig-r17 }    OPTIONAL, -- Need M
pdcch-BlindDetectionCA-CombIndicator-r17 SetupRelease { PDCCH-BlindDetectionCA-CombIndicator-r17 } OPTIONAL, -- Need M
]],
[[
simultaneousSR-PUSCH-diffPUCCH-Groups-r17            ENUMERATED {enabled}          OPTIONAL, -- Cond twoPUCCHgroup

```

```

]],
[[
intraBandNC-PRACH-simulTx-r17      ENUMERATED {enabled}                                OPTIONAL    -- Need R
]],
[[
pdcch-BlindDetection4-r17          SetupRelease { PDCCH-BlindDetection4-r17 }          OPTIONAL    -- Need M
]],
[[
simultaneousPUCCH-PUSCH-SamePriority-r17      ENUMERATED {enabled}                                OPTIONAL,   -- Need R
simultaneousPUCCH-PUSCH-SamePriority-SecondaryPUCCHgroup-r17      ENUMERATED {enabled}                                OPTIONAL    -- Cond twoPUCCHgroup
]],
[[
ncr-RNTI-r18                        RNTI-Value                                OPTIONAL,   -- Cond NCR
cellDTRX-DCI-config-r18            SetupRelease { CellDTRX-DCI-config-r18 }          OPTIONAL,   -- Need M
twoQCL-TypeD-ForMultiDCI-r18      ENUMERATED {enabled}                                OPTIONAL,   -- Need R
enableType1HARQ-ACK-MuxForDL-AssignmentAfterUL-Grant-r18      ENUMERATED {enabled}                                OPTIONAL,   -- Need R
enableType2HARQ-ACK-MuxForDL-AssignmentAfterUL-Grant-r18      ENUMERATED {enabled}                                OPTIONAL,   -- Need R
enableType3HARQ-ACK-MuxForDL-AssignmentAfterUL-Grant-r18      ENUMERATED {enabled}                                OPTIONAL,   -- Need R
enableDiffPUCCH-Resource-r18      ENUMERATED {enabled}                                OPTIONAL,   -- Need R
enableDiffCB-Size-r18              ENUMERATED {enabled}                                OPTIONAL    -- Need R
]]
}

PDSCH-HARQ-ACK-EnhType3-r17 ::=
  pdsch-HARQ-ACK-EnhType3Index-r17
  applicable-r17 CHOICE {
    perCC
    perHARQ
  },
  pdsch-HARQ-ACK-EnhType3NDI-r17      ENUMERATED {true}                                OPTIONAL,   -- Need R
  pdsch-HARQ-ACK-EnhType3CBG-r17      ENUMERATED {true}                                OPTIONAL,   -- Need S
  ...,
  [[
  perHARQ-Ext-r17                      SEQUENCE (SIZE (1..maxNrofServingCells)) OF BIT STRING (SIZE (32)) OPTIONAL -- Need R
  ]]
}

PDSCH-HARQ-ACK-EnhType3Index-r17 ::= INTEGER (0..maxNrofEnhType3HARQ-ACK-1-r17)

PDCCH-BlindDetection ::= INTEGER (1..15)

DCP-Config-r16 ::= SEQUENCE {
  ps-RNTI-r16                RNTI-Value,
  ps-Offset-r16              INTEGER (1..120),
  sizedCI-2-6-r16            INTEGER (1..maxDCI-2-6-Size-r16),
  ps-PositionDCI-2-6-r16     INTEGER (0..maxDCI-2-6-Size-1-r16),
  ps-WakeUp-r16              ENUMERATED {true}                                OPTIONAL,   -- Need S
  ps-TransmitPeriodicL1-RSRP-r16      ENUMERATED {true}                                OPTIONAL,   -- Need S
  ps-TransmitOtherPeriodicCSI-r16      ENUMERATED {true}                                OPTIONAL    -- Need S
}

PDSCH-HARQ-ACK-CodebookList-r16 ::= SEQUENCE (SIZE (1..2)) OF ENUMERATED {semiStatic, dynamic}

PDCCH-BlindDetectionCA-CombIndicator-r16 ::= SEQUENCE {

```

```

    pdcch-BlindDetectionCA1-r16          INTEGER (1..15),
    pdcch-BlindDetectionCA2-r16          INTEGER (1..15)
}

PDCCH-BlindDetection2-r16 ::=          INTEGER (1..15)

PDCCH-BlindDetection3-r16 ::=          INTEGER (1..15)

PDCCH-BlindDetection4-r17 ::=          INTEGER (1..15)

MulticastConfig-r17 ::=                SEQUENCE {
    pdsch-HARQ-ACK-CodebookListMulticast-r17 SetupRelease { PDSCH-HARQ-ACK-CodebookList-r16} OPTIONAL, -- Need M
    type1CodebookGenerationMode-r17          ENUMERATED { mode1, mode2} OPTIONAL -- Need M
}

PDCCH-BlindDetectionCA-CombIndicator-r17 ::= SEQUENCE {
    pdcch-BlindDetectionCA1-r17          INTEGER (1..15) OPTIONAL, -- Need R
    pdcch-BlindDetectionCA2-r17          INTEGER (1..15) OPTIONAL, -- Need R
    pdcch-BlindDetectionCA3-r17          INTEGER (1..15)
}

CellDTRX-DCI-config-r18 ::=            SEQUENCE {
    cellDTRX-RNTI-r18                    RNTI-Value,
    sizeDCI-2-9-r18                      INTEGER (1..maxDCI-2-9-Size-r18)
}

-- TAG-PHYSICALCELLGROUPCONFIG-STOP
-- ASN1STOP

```

PhysicalCellGroupConfig field descriptions
ackNackFeedbackMode Indicates which among the joint and separate ACK/NACK feedback modes to use within a slot as specified in TS 38.213 [13] (clause 9).
bdFactorR Parameter for determining and distributing the maximum numbers of BD/CCE for mPDCCH based mPDSCH transmission as specified in TS 38.213 [13] Clause 10.1.
cs-RNTI RNTI value for downlink SPS (see <i>SPS-Config</i>) and uplink configured grant (see <i>ConfiguredGrantConfig</i>).
downlinkAssignmentIndexDCI-0-2 Indicates if "Downlink assignment index" is present or absent in DCI format 0_2. If the field " <i>downlinkAssignmentIndexDCI-0-2</i> " is absent, then 0 bit for "Downlink assignment index" in DCI format 0_2. If the field " <i>downlinkAssignmentIndexDCI-0-2</i> " is present, then the bitwidth of "Downlink assignment index" in DCI format 0_2 is defined in the same way as that in DCI format 0_1 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 9.1).
downlinkAssignmentIndexDCI-1-2 Configures the number of bits for "Downlink assignment index" in DCI format 1_2. If the field is absent, then 0 bit is applied for "Downlink assignment index" in DCI format 1_2. Note that 1 bit and 2 bits are applied if only one serving cell is configured in the DL and <i>pdsch-HARQ-ACK-Codebook</i> is set to <i>dynamic</i> . 4 bits is applied if more than one serving cell are configured in the DL and <i>pdsch-HARQ-ACK-Codebook</i> is set to <i>dynamic</i> (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 9.1).
enableDiffCB-Size This field indicates whether a different codebook size from the size determined based on HARQ-ACK information associated with PDSCH reception(s) scheduled before a UL grant, is determined or not to include HARQ-ACK information associated with PDSCH reception(s) scheduled after a UL grant scheduling a PUSCH transmission with repetitions and the HARQ-ACK information are multiplexed on a repetition of the PUSCH transmission other than a first repetition. If enabled, a different HARQ codebook size might be determined. See clause 9 in TS 38.213 [13].
enableDiffPUCCH-Resource This field indicates whether a different PUCCH resource in time domain in a slot from the PUCCH resource indicated by the last DCI format before a UL grant in the slot, is determined or not to include HARQ-ACK information associated with PDSCH reception(s) scheduled after a UL grant scheduling a PUSCH transmission with repetitions and the HARQ-ACK information are multiplexed on a repetition of the PUSCH transmission other than a first repetition in the same slot. If enabled, a different PUCCH resource in time domain might be determined. See clause 9 in TS 38.213 [13].
enableType1HARQ-ACK-MuxForDL-AssignmentAfterUL-Grant If enabled, UE multiplexes Type-1 HARQ-ACK codebook on a repetition of a PUSCH transmission other than a first repetition, where the HARQ-ACK codebook includes HARQ-ACK information associated with PDSCH reception(s) scheduled after the UL grant scheduling the PUSCH transmission. See clause 9 in TS 38.213 [13]. This feature is not simultaneously enabled with PUCCH cell switching.
enableType2HARQ-ACK-MuxForDL-AssignmentAfterUL-Grant If enabled, UE multiplexes Type-2 HARQ-ACK codebook on a repetition of a PUSCH transmission other than a first repetition, where the HARQ-ACK codebook includes HARQ-ACK information associated with PDSCH reception(s) scheduled after the UL grant scheduling the PUSCH transmission. See clause 9 in TS 38.213 [13]. This feature is not simultaneously enabled with PUCCH cell switching.
enableType3HARQ-ACK-MuxForDL-AssignmentAfterUL-Grant If enabled, UE multiplexes Type-3 HARQ-ACK codebook on a repetition of a PUSCH transmission other than a first repetition, where the HARQ-ACK codebook includes HARQ-ACK information associated with PDSCH reception(s) scheduled after the UL grant scheduling the PUSCH transmission. See clause 9 in TS 38.213 [13]. This feature is not simultaneously enabled with PUCCH cell switching.
harq-ACK-SpatialBundlingPUCCH Enables spatial bundling of HARQ ACKs. It is configured per cell group (i.e. for all the cells within the cell group) for PUCCH reporting of HARQ-ACK. It is only applicable when more than 4 layers are possible to schedule. When the field is absent, the spatial bundling of PUCCH HARQ ACKs for the primary PUCCH group is disabled (see TS 38.213 [13], clause 9.1.2.1). If the field <i>harq-ACK-SpatialBundlingPUCCH-secondaryPUCCHgroup</i> is present, <i>harq-ACK-SpatialBundlingPUCCH</i> is only applied to primary PUCCH group. Network does not configure for a UE both spatial bundling of HARQ ACKs and <i>codeBlockGroupTransmission</i> within the same cell group.
harq-ACK-SpatialBundlingPUCCH-secondaryPUCCHgroup Indicates whether spatial bundling of PUCCH HARQ ACKs for the secondary PUCCH group is enabled or disabled. The field is only applicable when more than 4 layers are possible to schedule (see TS 38.213 [13], clause 9.1.2.1). When the field is absent, the use of spatial bundling of PUCCH HARQ ACKs for the secondary PUCCH group is indicated by <i>harq-ACK-SpatialBundlingPUCCH</i> . See TS 38.213 [13], clause 9.1.2.1. Network does not configure for a UE both spatial bundling of HARQ ACKs and <i>codeBlockGroupTransmission</i> within the same cell group.

harq-ACK-SpatialBundlingPUSCH

Enables spatial bundling of HARQ ACKs. It is configured per cell group (i.e. for all the cells within the cell group) for PUSCH reporting of HARQ-ACK. It is only applicable when more than 4 layers are possible to schedule. When the field is absent, the spatial bundling of PUSCH HARQ ACKs for the primary PUCCH group is disabled (see TS 38.213 [13], clauses 9.1.2.2 and 9.1.3.2). If the field *harq-ACK SpatialBundlingPUSCH-secondaryPUCCHgroup* is present, *harq-ACK-SpatialBundlingPUSCH* is only applied to primary PUCCH group. Network does not configure for a UE both spatial bundling of HARQ ACKs and *codeBlockGroupTransmission* within the same cell group.

harq-ACK-SpatialBundlingPUSCH-secondaryPUCCHgroup

Indicates whether spatial bundling of PUSCH HARQ ACKs for the secondary PUCCH group is enabled or disabled. The field is only applicable when more than 4 layers are possible to schedule (see TS 38.213 [13], clauses 9.1.2.2 and 9.1.3.2). When the field is absent, the use of spatial bundling of PUSCH HARQ ACKs for the secondary PUCCH group is indicated by *harq-ACK-SpatialBundlingPUSCH*. See TS 38.213 [13], clauses 9.1.2.2 and 9.1.3.2. Network does not configure for a UE both spatial bundling of HARQ ACKs and *codeBlockGroupTransmission* within the same cell group.

intraBandNC-PRACH-simulTx

Enables parallel PRACH and SRS/PUCCH/PUSCH transmissions across CCs in intra-band non-contiguous CA (see TS 38.213 [13], clause 8.1 and TS 38.214 [19], clause 6.2.1). This field is absent in the IE *CellGroupConfig* when provided as part of *RRCSetup* message.

mcs-C-RNTI

RNTI to indicate use of *qam64LowSE* for grant-based transmissions. When the *mcs-C-RNTI* is configured, RNTI scrambling of DCI CRC is used to choose the corresponding MCS table.

ncr-RNTI

RNTI value for NCR-MT, used to scramble the PDCCHs carrying side control information (see TS 38.213 [13], clause 10.1).

nfi-TotalDAI-Included

Indicates whether the NFI and total DAI fields of the non-scheduled PDSCH group is included in the non-fallback DL grant DCI (see TS 38.212 [17], clause 7.3.1). The network configures this only when enhanced dynamic codebook is configured (*pdsch-HARQ-ACK-Codebook* is set to *enhancedDynamic*).

nr-dc-PCmode-FR1

Indicates the uplink power sharing mode that the UE uses in NR-DC in frequency range 1 (FR1) (see TS 38.213 [13], clause 7.6).

nr-dc-PCmode-FR2

Indicates the uplink power sharing mode that the UE uses in NR-DC in frequency range 2 (FR2) (see TS 38.213 [13], clause 7.6).

pdccch-BlindDetection, pdccch-BlindDetection2, pdccch-BlindDetection3, pdccch-BlindDetection4

Indicates the reference number of cells for PDCCH blind detection for the CG. Network configures the field for each CG when the UE is in NR DC and sets the value in accordance with the constraints specified in TS 38.213 [13]. The network configures *pdccch-BlindDetection* only if the UE is in NR-DC. The network configures *pdccch-BlindDetection2* only if the UE is in NR-DC with at least one downlink cell using Rel-16 PDCCH monitoring capability. The network configures *pdccch-BlindDetection3* only if the UE is in NR-DC with at least one downlink cell using Rel-15 PDCCH monitoring capability. The network configures *pdccch-BlindDetection4* only if the UE is in NR-DC with at least one downlink cell using Rel-17 PDCCH monitoring capability.

pdccch-BlindDetectionCA-CombIndicator

Configure one combination of *pdccch-BlindDetectionCA1* (for R15) and *pdccch-BlindDetectionCA2* (for R16) for UE to use for scaling PDCCH monitoring capability if the number of serving cells configured to a UE is larger than the reported capability, and if UE reports more than one combination of *pdccch-BlindDetectionCA1* and *pdccch-BlindDetectionCA2* as UE capability. The combination of *pdccch-BlindDetectionCA1* and *pdccch-BlindDetectionCA2* configured by *pdccch-BlindDetectionCA-CombIndicator* is from the more than one combination of *pdccch-BlindDetectionCA1* and *pdccch-BlindDetectionCA2* reported by UE (see TS 38.213 [13], clause 10).

pdccch-BlindDetectionCA-CombIndicator-r17 is used to configure one combination of *pdccch-BlindDetectionCA1* (for R15), *pdccch-BlindDetectionCA2* (for R16) and *pdccch-BlindDetectionCA3* (for R17) for UE to use for scaling PDCCH monitoring capability if the number of serving cells configured to a UE is larger than the reported capability, and if UE reports more than one combination of *pdccch-BlindDetectionCA1*, *pdccch-BlindDetectionCA2* and *pdccch-BlindDetectionCA3* as UE capability. The combination of *pdccch-BlindDetectionCA1*, *pdccch-BlindDetectionCA2* and *pdccch-BlindDetectionCA3* configured by *pdccch-BlindDetectionCA-CombIndicator-r17* is from the more than one combination of *pdccch-BlindDetectionCA1*, *pdccch-BlindDetectionCA2* and *pdccch-BlindDetectionCA3* reported by UE (see TS 38.213 [13], clause 10).

pdccch-BlindDetectionCA-CombIndicator-r16 and *pdccch-BlindDetectionCA-CombIndicator-r17* are not configured simultaneously.

<i>pdsch-HARQ-ACK-Codebook</i> The PDSCH HARQ-ACK codebook is either semi-static or dynamic. This is applicable to both CA and non-CA operation (see TS 38.213 [13], clauses 9.1.2 and 9.1.3). If <i>pdsch-HARQ-ACK-Codebook-r16</i> is signalled, UE shall ignore the <i>pdsch-HARQ-ACK-Codebook</i> (without suffix). For the HARQ-ACK for sidelink, if <i>pdsch-HARQ-ACK-Codebook-r16</i> is signalled, the UE uses <i>pdsch-HARQ-ACK-Codebook</i> (without suffix) and ignores <i>pdsch-HARQ-ACK-Codebook-r16</i>. If the field <i>pdsch-HARQ-ACK-Codebook-secondaryPUCCHgroup</i> is present, <i>pdsch-HARQ-ACK-Codebook</i> is applied to primary PUCCH group. Otherwise, this field is applied to the cell group (i.e. for all the cells within the cell group). For the HARQ-ACK for sidelink, if the field <i>pdsch-HARQ-ACK-Codebook-secondaryPUCCHgroup</i> is present, <i>pdsch-HARQ-ACK-Codebook</i> is applied to primary and secondary PUCCH group and the UE ignores <i>pdsch-HARQ-ACK-Codebook-secondaryPUCCHgroup</i>.
<i>pdsch-HARQ-ACK-CodebookList</i> A list of configurations for one or two HARQ-ACK codebooks. Each configuration in the list is defined in the same way as <i>pdsch-HARQ-ACK-Codebook</i> (see TS 38.212 [17], clause 7.3.1.2.2 and TS 38.213 [13], clauses 7.2.1, 9.1.2, 9.1.3 and 9.2.1). If this field is present, the field <i>pdsch-HARQ-ACK-Codebook</i> is ignored. If this field is present, the value of this field is applied for primary PUCCH group and for secondary PUCCH group (if configured). For the HARQ-ACK for sidelink, the UE uses <i>pdsch-HARQ-ACK-Codebook</i> and ignores <i>pdsch-HARQ-ACK-CodebookList</i> if this field is present.
<i>pdsch-HARQ-ACK-Codebook-secondaryPUCCHgroup</i> The PDSCH HARQ-ACK codebook is either semi-static or dynamic. This is applicable to CA operation (see TS 38.213 [13], clauses 9.1.2 and 9.1.3). It is configured for secondary PUCCH group.
<i>pdsch-HARQ-ACK-EnhType3DCI-Field</i>, <i>pdsch-HARQ-ACK-EnhType3DCI-FieldSecondaryPUCCHgroup</i> Indicates the enhanced Type 3 codebook through a new DCI field to indicate the enhanced Type 3 HARQ-ACK codebook in the primary PUCCH group if the more than one enhanced Type 3 HARQ-ACK codebook is configured for the primary PUCCH group, or in the secondary PUCCH group if the more than one enhanced Type 3 HARQ-ACK code is configured for the secondary PUCCH group, respectively.
<i>pdsch-HARQ-ACK-EnhType3ToAddModList</i>, <i>pdsch-HARQ-ACK-EnhType3SecondaryToAddModList</i> Configure the list of enhanced Type 3 HARQ-ACK codebooks for the primary PUCCH group and the secondary PUCCH group, respectively. When configured, DCI format 1_1 can request the UE to report A/N for one of the configured enhanced Type 3 HARQ-ACK codebooks in the corresponding PUCCH group (see TS 38.213 [13], clause 9.1.4). The network can configure <i>pdsch-HARQ-ACK-EnhType3SecondaryToAddModList</i> only if secondary PUCCH group is configured.
<i>pdsch-HARQ-ACK-OneShotFeedback</i> When configured, the DCI format 1_1 can request the UE to report A/N for all HARQ processes and all CCs configured in the PUCCH group (see TS 38.212 [17], clause 7.3.1).
<i>pdsch-HARQ-ACK-OneShotFeedbackCBG</i> When configured, the DCI format 1_1 can request the UE to include CBG level A/N for each CC with CBG level transmission configured. When not configured, the UE will report TB level A/N even if CBG level transmission is configured for a CC. The network configures this only when <i>pdsch-HARQ-ACK-OneShotFeedback</i> is configured.
<i>pdsch-HARQ-ACK-OneShotFeedbackNDI</i> When configured, the DCI format 1_1 can request the UE to include NDI for each A/N reported. The network configures this only when <i>pdsch-HARQ-ACK-OneShotFeedback</i> is configured.
<i>pdsch-HARQ-ACK-Retx</i>, <i>pdsch-HARQ-ACK-RetxSecondaryPUCCHgroup</i> When configured, the DCI format 1_1 can request the UE to perform a HARQ-ACK re-transmission on a PUCCH resource in the primary PUCCH group and the secondary PUCCH group, respectively (see TS 38.213 [13], clause 9.1.5).
<i>prioLowDG-HighCG</i> Enable PHY prioritization for the case where low-priority dynamic grant-PUSCH collides with high-priority configured grant-PUSCH on a BWP of a serving cell (see TS 38.213 [13], clause 9), when the UE has generated transport blocks for both DG-PUSCH and CG-PUSCH as described in TS 38.321 [3].
<i>prioHighDG-LowCG</i> Enable PHY prioritization for the case where high-priority dynamic grant PUSCH collides with low-priority configured grant PUSCH on a BWP of a serving cell (see TS 38.213 [13], clause 9), when the UE has generated transport blocks for both DG-PUSCH and CG-PUSCH as described in TS 38.321 [3].
<i>ps-RNTI</i> RNTI value for scrambling CRC of DCI format 2_6 used for power saving (see TS 38.213 [13], clause 10.1).
<i>ps-Offset</i> The start of the search-time of DCI format 2_6 with CRC scrambled by PS-RNTI relative to the start of the <i>drx-onDurationTimer</i> of Long DRX (see TS 38.213 [13], clause 10.3). Value in multiples of 0.125ms (milliseconds). 1 corresponds to 0.125 ms, 2 corresponds to 0.25 ms, 3 corresponds to 0.375 ms and so on.

ps-WakeUp
Indicates the UE to wake-up if DCI format 2_6 is not detected outside active time (see TS 38.321 [3], clause 5.7). If the field is absent, the UE does not wake-up if DCI format 2-6 is not detected outside active time.
ps-PositionDCI-2-6
Starting position of UE wakeup and SCell dormancy indication in DCI format 2_6 (see TS 38.213 [13], clause 10.3).
ps-TransmitPeriodicL1-RSRP
Indicates the UE to transmit periodic L1-RSRP report(s) when the <i>drx-onDurationTimer</i> does not start (see TS 38.321 [3], clause 5.7). If the field is absent, the UE does not transmit periodic L1-RSRP report(s) when the <i>drx-onDurationTimer</i> does not start.
ps-TransmitOtherPeriodicCSI
Indicates the UE to transmit periodic CSI report(s) other than L1-RSRP reports when the <i>drx-onDurationTimer</i> does not start (see TS 38.321 [3], clause 5.7). If the field is absent, the UE does not transmit periodic CSI report(s) other than L1-RSRP reports when the <i>drx-onDurationTimer</i> does not start.
pucch-sSCell, pucch-sSCellSecondaryPUCCHgroup
Indicates the alternative PUCCH cells for PUCCH cell switching in the primary and the secondary PUCCH group, respectively. For the primary PUCCH group, it is configured for cells on top of SpCell. For the secondary PUCCH group, it is configured for cell on top of the PUCCH SCell.
pucch-sSCellDyn, pucch-sSCellDynsecondaryPUCCHgroup
When configured, PUCCH cell switching based on dynamic indication in DCI format 1_1 is enabled (see TS 38.213 [13], clause 9.A, clause 9.1.5), respectively for the primary PUCCH group and the secondary PUCCH group.
pucch-sSCellPattern, pucch-sSCellPatternSecondaryPUCCHgroup
When configured, the UE applies the semi-static PUCCH cell switching (see TS 38.213 [13], clause 9.A) using the time domain pattern of applicable PUCCH cells indicated by this field, respectively for the primary PUCCH group and the secondary PUCCH group.
p-NR-FR1
The maximum total transmit power to be used by the UE in this NR cell group across all serving cells in frequency range 1 (FR1). The maximum transmit power that the UE may use may be additionally limited by <i>p-Max</i> (configured in <i>FrequencyInfoUL</i>) and by <i>p-UE-FR1</i> (configured total for all serving cells operating on FR1).
p-NR-FR2
The maximum total transmit power to be used by the UE in this NR cell group across all serving cells in frequency range 2 (FR2). The maximum transmit power that the UE may use may be additionally limited by <i>p-Max</i> (configured in <i>FrequencyInfoUL</i>) and by <i>p-UE-FR2</i> (configured total for all serving cells operating on FR2). This field is only used in NR-DC. A UE does not expect to be configured with this parameter in this release of the specification.
p-UE-FR1
The maximum total transmit power to be used by the UE across all serving cells in frequency range 1 (FR1) across all cell groups. The maximum transmit power that the UE may use may be additionally limited by <i>p-Max</i> (configured in <i>FrequencyInfoUL</i>) and by <i>p-NR-FR1</i> (configured for the cell group).
p-UE-FR2
The maximum total transmit power to be used by the UE across all serving cells in frequency range 2 (FR2) across all cell groups. The maximum transmit power that the UE may use may be additionally limited by <i>p-Max</i> (configured in <i>FrequencyInfoUL</i>) and by <i>p-NR-FR2</i> (configured for the cell group). A UE does not expect to be configured with this parameter in this release of the specification.
simultaneousPUCCH-PUSCH, simultaneousPUCCH-PUSCH-SecondaryPUCCHgroup
Enables simultaneous PUCCH and PUSCH transmissions with different priorities for the primary PUCCH group and the secondary PUCCH group, respectively.
simultaneousPUCCH-PUSCH-SamePriority, simultaneousPUCCH-PUSCH-SamePriority-SecondaryPUCCHgroup
Enables simultaneous PUCCH and PUSCH transmissions on different cells in different bands with same priority for the primary PUCCH group and the secondary PUCCH group, respectively, as specified in clause 9 of TS 38.213 [13].
simultaneousSR-PUSCH-diffPUCCH-Groups
Enables simultaneous SR and PUSCH transmissions in different PUCCH groups (see TS 38.321 [3], clause 5.4.1, clause 5.4.4).
sizeDCI-2-6
Size of DCI format 2_6 (see TS 38.213 [13], clause 10.3).
sp-CSI-RNTI
RNTI for Semi-Persistent CSI reporting on PUSCH (see <i>CSI-ReportConfig</i>) (see TS 38.214 [19], clause 5.2.1.5.2). Network always configures the UE with a value for this field when at least one <i>CSI-ReportConfig</i> with <i>reportConfigType</i> set to <i>semiPersistentOnPUSCH</i> is configured.

<i>tpc-PUCCH-RNTI</i> RNTI used for PUCCH TPC commands on DCI (see TS 38.213 [13], clause 10.1).
<i>tpc-PUSCH-RNTI</i> RNTI used for PUSCH TPC commands on DCI (see TS 38.213 [13], clause 10.1).
<i>tpc-SRS-RNTI</i> RNTI used for SRS TPC commands on DCI (see TS 38.213 [13], clause 10.1).
<i>twoQCL-TypeD-ForMultiDCI</i> Indicates whether a UE is expected to identify and monitor two QCL-TypeD properties for multiple overlapping CORESETs, where the first QCL-TypeD is associated with <i>coresetPoolIndex</i> value 0, and the second QCL-TypeD is associated with <i>coresetPoolIndex</i> value 1. (See TS 38.213 [13], clause 10).
<i>twoQCLTypeDforPDCCHRepetition</i> Indicates whether a UE is expected UE to identify and monitor two QCL-TypeD properties for multiple overlapping CORESETs in the case of PDCCH repetition.
<i>uci-MuxWithDiffPrio, uci-MuxWithDiffPrio-secondaryPUCCHgroup</i> When configured, enables multiplexing a high-priority (HP) HARQ-ACK UCI and a low-priority (LP) HARQ-ACK UCI into a PUCCH or PUSCH for the primary PUCCH group and the secondary PUCCH group, respectively.
<i>ul-TotalDAI-Included</i> Indicates whether the total DAI fields of the additional PDSCH group is included in the non-fallback UL grant DCI (see TS 38.212 [17], clause 7.3.1). The network configures this only when enhanced dynamic codebook is configured (<i>pdsch-HARQ-ACK-Codebook</i> is set to <i>enhancedDynamic</i>).
<i>xScale</i> The UE is allowed to drop NR only if the power scaling applied to NR results in a difference between scaled and unscaled NR UL of more than <i>xScale</i> dB (see TS 38.213 [13]). If the value is not configured for dynamic power sharing, the UE assumes default value of 6 dB.

<i>MulticastConfig</i> field descriptions
<i>pdsch-HARQ-ACK-CodebookListMulticast</i> A list of configurations for one or two HARQ-ACK codebooks for MBS multicast. Each configuration in the list is defined in the same way as <i>pdsch-HARQ-ACK-Codebook</i> (see TS 38.212 [17], clause 7.3.1.2.2 and TS 38.213 [13], clauses 7.2.1, 9.1.2, 9.1.3 and 9.2.1). If this field is present, the field <i>pdsch-HARQ-ACK-Codebook</i> is ignored. If this field is present, the value of this field is applied for primary PUCCH group and for secondary PUCCH group (if configured).
<i>type1CodebookGenerationMode</i> Indicates the mode of Type-1 HARQ-ACK codebook generation, as specified in TS 38.213 [13]. Mode 1 is based on the k1 values that are in the intersection of K1 set for unicast and K1 set for multicast. Mode 2 is based on the k1 values that are in the union of K1 set for unicast and K1 set for multicast.

<i>PDSCH-HARQ-ACK-EnhType3</i> field descriptions
<i>pdsch-HARQ-ACK-EnhType3CBG</i> When configured, the DCI format 1_1 or DCI format 1_2 can request the UE to include CBG level A/N for each CC with CBG level transmission configured of the enhanced Type 3 HARQ-ACK codebook. When not configured, the UE will report TB level A/N even if CBG level transmission is configured for a CC.
<i>pdsch-HARQ-ACK-EnhType3NDI</i> When configured, the DCI format 1_1 or DCI format 1_2 can request the UE to include NDI for each A/N reported of the enhanced Type 3 HARQ-ACK codebook.
<i>perCC</i> Configures enhanced Type 3 HARQ-ACK codebook using per CC configuration.
<i>perHARQ, perHARQ-Ext</i> Configures enhanced Type 3 HARQ-ACK codebook using per HARQ process and CC configuration. <i>perHARQ-Ext</i> is present only when <i>nrofHARQ-ProcessesForPDSCH-v1700</i> is present in <i>pdsch-ServingCellConfig</i> of at least one serving cell in the PUCCH group. If <i>perHARQ-Ext</i> is present, the UE ignores <i>perHARQ</i> .

CellDTRX-DCI-config field descriptions
cellDTRX-RNTI The RNTI value for scrambling CRC of DCI format 2_9 for activating and/or deactivating Cell DTX and/or Cell DRX and/or NES mode for CHO indication.
sizeDCI-2-9 The size of DCI format 2_9.

Conditional Presence	Explanation
MCG-Only	This field is optionally present, Need R, in the <i>PhysicalCellGroupConfig</i> of the MCG. It is absent otherwise.
NCR	This field is optionally present, Need M for NCR-MT. It is absent otherwise.
SCG-Only	This field is optionally present, Need S, in the <i>PhysicalCellGroupConfig</i> of the SCG in (NG)EN-DC as defined in TS 38.213 [13]. It is absent otherwise.
twoPUCCHgroup	This field is optionally present, Need R, if secondary PUCCH group is configured. It is absent otherwise, Need R.

– *PLMN-Identity*

The IE *PLMN-Identity* identifies a Public Land Mobile Network. Further information regarding how to set the IE is specified in TS 23.003 [21].

PLMN-Identity information element

```

-- ASN1START
-- TAG-PLMN-IDENTITY-START

PLMN-Identity ::=
    mcc
    mnc
}

MCC ::=
    SEQUENCE (SIZE (3)) OF MCC-MNC-Digit

MNC ::=
    SEQUENCE (SIZE (2..3)) OF MCC-MNC-Digit

MCC-MNC-Digit ::=
    INTEGER (0..9)

-- TAG-PLMN-IDENTITY-STOP
-- ASN1STOP

```

PLMN-Identity field descriptions
mcc The first element contains the first MCC digit, the second element the second MCC digit and so on. If the field is absent, it takes the same value as the <i>mcc</i> of the immediately preceding IE <i>PLMN-Identity</i> . See TS 23.003 [21].
mnc The first element contains the first MNC digit, the second element the second MNC digit and so on. See TS 23.003 [21].

Conditional Presence	Explanation
MCC	This field is mandatory present when PLMN-Identity is not used in a list or if it is the first entry of PLMN-Identity in a list. Otherwise it is optionally present, Need S.

— *PLMN-IdentityInfoList*

The IE *PLMN-IdentityInfoList* includes a list of PLMN identity information.

PLMN-IdentityInfoList information element

```
-- ASN1START
-- TAG-PLMN-IDENTITYINFOLIST-START

PLMN-IdentityInfoList ::=
    SEQUENCE (SIZE (1..maxPLMN)) OF PLMN-IdentityInfo

PLMN-IdentityInfo ::=
    SEQUENCE {
        plmn-IdentityList
            SEQUENCE (SIZE (1..maxPLMN)) OF PLMN-Identity,
            TrackingAreaCode
            RAN-AreaCode
            CellIdentity,
            cellReservedForOperatorUse
            ENUMERATED {reserved, notReserved},
        ...,
        [[
            iab-Support-r16
            ENUMERATED {true}
        ]],
        [[
            trackingAreaList-r17
            SEQUENCE (SIZE (1..maxTAC-r17)) OF TrackingAreaCode
            gNB-ID-Length-r17
            INTEGER (22..32)
        ]],
        [[
            mobileIAB-Support-r18
            ENUMERATED {true}
        ]]
    }
-- TAG-PLMN-IDENTITYINFOLIST-STOP
-- ASN1STOP
```

OPTIONAL,

-- Need R

OPTIONAL,

-- Need R

OPTIONAL

-- Need S

OPTIONAL,

-- Need R

OPTIONAL

-- Cond eventID-TSS

OPTIONAL

-- Need S

PLMN-IdentityInfo field descriptions	
cellReservedForOperatorUse	Indicates whether the cell is reserved for operator use (per PLMN), as defined in TS 38.304 [20]. This field is ignored by IAB-MT and NCR-MT.
gNB-ID-Length	Indicates the length of the gNB ID out of the 36-bit long <i>cellIdentity</i> . This field is always present if the <i>mobileIAB-Support</i> is broadcasted.
iab-Support	This field combines both the support of IAB and the cell status for IAB. If the field is present, the cell supports IAB and the cell is also considered as a candidate for cell (re)selection for IAB-node; if the field is absent, the cell does not support IAB and/or the cell is barred for IAB-node. This field is absent if <i>mobileIAB-Cell</i> is broadcasted in the cell.
mobileIAB-Support	This field indicates the support of mobile IAB and whether the cell can be considered as a candidate for cell (re)selection for mobile IAB-node. This field is absent if <i>mobileIAB-Cell</i> is broadcasted in the cell. If the field is absent, the cell is barred for mobile IAB-node.
trackingAreaCode	Indicates Tracking Area Code to which the cell indicated by <i>cellIdentity</i> field belongs. The absence of the field indicates that the cell only supports PSCell/SCell functionality (per PLMN) or is an NTN cell.
trackingAreaList	List of Tracking Areas to which the cell indicated by <i>cellIdentity</i> field belongs. If this field is present, network does not configure <i>trackingAreaCode</i> . Total number of different TACs across different <i>PLMN-IdentityInfos</i> shall not exceed <i>maxTAC</i> . This field is only present in an NTN cell.

Conditional Presence	Explanation
<i>eventID-TSS</i>	If <i>eventID-TSS</i> is present in SIB9, this field is mandatory present in the <i>PLMN-IdentityInfo</i> IE of <i>PLMN-IdentityInfoList</i> in <i>SIB1</i> . Otherwise, the field is optionally present, Need R.

— *PLMN-IdentityList2*

Includes a list of PLMN identities.

PLMN-IdentityList2 information element

```
-- ASN1START
-- TAG-PLMNIDENTITYLIST2-START

PLMN-IdentityList2-r16 ::= SEQUENCE (SIZE (1..16)) OF PLMN-Identity

-- TAG-PLMNIDENTITYLIST2-STOP
-- ASN1STOP
```

— *PRB-Id*

The IE *PRB-Id* identifies a Physical Resource Block (PRB) position within a carrier.

***PRB-Id* information element**

```

-- ASN1START
-- TAG-PRB-ID-START

PRB-Id ::=                               INTEGER (0..maxNrofPhysicalResourceBlocks-1)

-- TAG-PRB-ID-STOP
-- ASN1STOP

```

PTRS-DownlinkConfig

The IE *PTRS-DownlinkConfig* is used to configure downlink phase tracking reference signals (PTRS) (see TS 38.214 [19] clause 5.1.6.3)

***PTRS-DownlinkConfig* information element**

```

-- ASN1START
-- TAG-PTRS-DOWNLINKCONFIG-START

PTRS-DownlinkConfig ::=
    frequencyDensity          SEQUENCE {
        timeDensity           SEQUENCE (SIZE (2)) OF INTEGER (1..276)          OPTIONAL, -- Need S
        epre-Ratio            SEQUENCE (SIZE (3)) OF INTEGER (0..29)          OPTIONAL, -- Need S
        resourceElementOffset INTEGER (0..3)                                OPTIONAL, -- Need S
        ...
        [[
            maxNrofPorts-r16    ENUMERATED { offset01, offset10, offset11 }    OPTIONAL, -- Need S
        ]]
    }

-- TAG-PTRS-DOWNLINKCONFIG-STOP
-- ASN1STOP

```

<i>PTRS-DownlinkConfig</i> field descriptions
<i>epre-Ratio</i> EPRE ratio between PTRS and PDSCH. Value 0 corresponds to the codepoint "00" in tables 4.1-2 and 4.1-2A. Value 1 corresponds to codepoint "01", and so on. If the field is not provided, the UE applies value 0 (see TS 38.214 [19], clause 4.1).
<i>frequencyDensity</i> Presence and frequency density of DL PT-RS as a function of Scheduled BW. If the field is absent, the UE uses $K_{\text{PT-RS}} = 2$ (see TS 38.214 [19], clause 5.1.6.3, table 5.1.6.3-2).
<i>maxNrofPorts</i> The maximum number of DL PTRS ports specified in TS 38.214 [19] (clause 5.1.6.3). 2 PT-RS ports can only be configured for a DL BWP that is configured, as specified in TS 38.214 [19] clause 5.1, with a mode where a single PDSCH has association between the DM-RS ports and the TCI states as defined in TS 38.214 [19] clause 5.1.6.2.
<i>resourceElementOffset</i> Indicates the subcarrier offset for DL PTRS. If the field is absent, the UE applies the value offset00 (see TS 38.211 [16], clause 7.4.1.2.2).
<i>timeDensity</i> Presence and time density of DL PT-RS as a function of MCS. The value 29 is only applicable for MCS Table 5.1.3.1-1 (TS 38.214 [19]). If the field is absent, the UE uses $L_{\text{PT-RS}} = 1$ (see TS 38.214 [19], clause 5.1.6.3, table 5.1.6.3-1).

– ***PTRS-UplinkConfig***

The IE *PTRS-UplinkConfig* is used to configure uplink Phase-Tracking-Reference-Signals (PTRS).

PTRS-UplinkConfig information element

```

-- ASN1START
-- TAG-PTRS-UPLINKCONFIG-START

PTRS-UplinkConfig ::=
    transformPrecoderDisabled    SEQUENCE {
        frequencyDensity          SEQUENCE (SIZE (2)) OF INTEGER (1..276)          OPTIONAL, -- Need S
        timeDensity               SEQUENCE (SIZE (3)) OF INTEGER (0..29)          OPTIONAL, -- Need S
        maxNrofPorts              ENUMERATED {n1, n2},                             OPTIONAL, -- Need S
        resourceElementOffset     ENUMERATED {offset01, offset10, offset11 }        OPTIONAL, -- Need R
        ptrs-Power                ENUMERATED {p00, p01, p10, p11}                  OPTIONAL, -- Need R
    }
    transformPrecoderEnabled    SEQUENCE {
        sampleDensity             SEQUENCE (SIZE (5)) OF INTEGER (1..276),        OPTIONAL, -- Need S
        timeDensityTransformPrecoding  ENUMERATED {d2}                          OPTIONAL, -- Need R
    }
    ...,
    [[
        maxNrofPorts-SDM-r18     ENUMERATED {n1, n2}                             OPTIONAL, -- Need R
    ]]
}

-- TAG-PTRS-UPLINKCONFIG-STOP
-- ASN1STOP

```

<i>PTRS-UplinkConfig</i> field descriptions
<i>frequencyDensity</i> Presence and frequency density of UL PT-RS for CP-OFDM waveform as a function of scheduled BW. If the field is absent, the UE uses $K_{PT-RS} = 2$ (see TS 38.214 [19], clause 6.1).
<i>maxNrofPorts, maxNrofPorts-SDM</i> The maximum number of UL PTRS ports for CP-OFDM (see TS 38.214 [19], clause 6.2.3.1).
<i>ptrs-Power</i> UL PTRS power boosting factor per PTRS port (see TS 38.214 [19], clause 6.1, table 6.2.3.1.3).
<i>resourceElementOffset</i> Indicates the subcarrier offset for UL PTRS for CP-OFDM. If the field is absent, the UE applies the value offset00 (see TS 38.211 [16], clause 6.4.1.2.2).
<i>sampleDensity</i> Sample density of PT-RS for DFT-s-OFDM, pre-DFT, indicating a set of thresholds $T=\{NRB_n, n=0,1,2,3,4\}$, that indicates dependency between presence of PT-RS and scheduled BW and the values of X and K the UE should use depending on the scheduled BW, see TS 38.214 [19], clause 6.1, table 6.2.3.2-1.
<i>timeDensity</i> Presence and time density of UL PT-RS for CP-OFDM waveform as a function of MCS. If the field is absent, the UE uses $L_{PT-RS} = 1$ (see TS 38.214 [19], clause 6.1).
<i>timeDensityTransformPrecoding</i> Time density (OFDM symbol level) of PT-RS for DFT-s-OFDM. If the field is absent, the UE applies value d1 (see TS 38.214 [19], clause 6.1).
<i>transformPrecoderDisabled</i> Configuration of UL PTRS without transform precoder (with CP-OFDM).
<i>transformPrecoderEnabled</i> Configuration of UL PTRS with transform precoder (DFT-S-OFDM).

— *PUCCH-Config*

The IE *PUCCH-Config* is used to configure UE specific PUCCH parameters (per BWP).

PUCCH-Config information element

```
-- ASN1START
-- TAG-PUCCH-CONFIG-START
```

```
PUCCH-Config ::=
    SEQUENCE {
        resourceSetToAddModList SEQUENCE (SIZE (1..maxNrofPUCCH-ResourceSets)) OF PUCCH-ResourceSet OPTIONAL, -- Need N
        resourceSetToReleaseList SEQUENCE (SIZE (1..maxNrofPUCCH-ResourceSets)) OF PUCCH-ResourceSetId OPTIONAL, -- Need N
        resourceToAddModList SEQUENCE (SIZE (1..maxNrofPUCCH-Resources)) OF PUCCH-Resource OPTIONAL, -- Need N
        resourceToReleaseList SEQUENCE (SIZE (1..maxNrofPUCCH-Resources)) OF PUCCH-ResourceId OPTIONAL, -- Need N
        format1 SetupRelease { PUCCH-FormatConfig } OPTIONAL, -- Need M
        format2 SetupRelease { PUCCH-FormatConfig } OPTIONAL, -- Need M
        format3 SetupRelease { PUCCH-FormatConfig } OPTIONAL, -- Need M
        format4 SetupRelease { PUCCH-FormatConfig } OPTIONAL, -- Need M
        schedulingRequestResourceToAddModList SEQUENCE (SIZE (1..maxNrofSR-Resources)) OF SchedulingRequestResourceConfig OPTIONAL, -- Need N
        schedulingRequestResourceToReleaseList SEQUENCE (SIZE (1..maxNrofSR-Resources)) OF SchedulingRequestResourceId OPTIONAL, -- Need N
        multi-CSI-PUCCH-ResourceList SEQUENCE (SIZE (1..2)) OF PUCCH-ResourceId OPTIONAL, -- Need M
        dl-DataToUL-ACK SEQUENCE (SIZE (1..8)) OF INTEGER (0..15) OPTIONAL, -- Need M
        spatialRelationInfoToAddModList SEQUENCE (SIZE (1..maxNrofSpatialRelationInfos)) OF PUCCH-SpatialRelationInfo
```

```

spatialRelationInfoToReleaseList      SEQUENCE (SIZE (1..maxNrofSpatialRelationInfos)) OF PUCCH-SpatialRelationInfoId
                                     OPTIONAL, -- Need N
pucch-PowerControl                    PUCCH-PowerControl
                                     OPTIONAL, -- Need N
OPTIONAL, -- Need M
[[
resourceToAddModListExt-v1610         SEQUENCE (SIZE (1..maxNrofPUCCH-Resources)) OF PUCCH-ResourceExt-v1610
                                     OPTIONAL, -- Need N
dl-DataToUL-ACK-r16                   SetupRelease { DL-DataToUL-ACK-r16 }
                                     OPTIONAL, -- Need M
ul-AccessConfigListDCI-1-1-r16        SetupRelease { UL-AccessConfigListDCI-1-1-r16 }
                                     OPTIONAL, -- Need M
subslotLengthForPUCCH-r16             CHOICE {
normalCP-r16                          ENUMERATED {n2,n7},
extendedCP-r16                        ENUMERATED {n2,n6}
}
                                     OPTIONAL, -- Need R
dl-DataToUL-ACK-DCI-1-2-r16           SetupRelease { DL-DataToUL-ACK-DCI-1-2-r16 }
                                     OPTIONAL, -- Need M
numberOfBitsForPUCCH-ResourceIndicatorDCI-1-2-r16 INTEGER (0..3)
                                     OPTIONAL, -- Need R
dmrs-UplinkTransformPrecodingPUCCH-r16 ENUMERATED {enabled}
                                     OPTIONAL, -- Cond PI2-BPSK
spatialRelationInfoToAddModListSizeExt-v1610 SEQUENCE (SIZE (1..maxNrofSpatialRelationInfosDiff-r16)) OF PUCCH-SpatialRelationInfo
                                     OPTIONAL, -- Need N
spatialRelationInfoToReleaseListSizeExt-v1610 SEQUENCE (SIZE (1..maxNrofSpatialRelationInfosDiff-r16)) OF PUCCH-SpatialRelationInfoId
                                     OPTIONAL, -- Need N
spatialRelationInfoToAddModListExt-v1610 SEQUENCE (SIZE (1..maxNrofSpatialRelationInfos-r16)) OF PUCCH-SpatialRelationInfoExt-r16
                                     OPTIONAL, -- Need N
spatialRelationInfoToReleaseListExt-v1610 SEQUENCE (SIZE (1..maxNrofSpatialRelationInfos-r16)) OF
                                     PUCCH-SpatialRelationInfoId-r16
                                     OPTIONAL, -- Need N
resourceGroupToAddModList-r16         SEQUENCE (SIZE (1..maxNrofPUCCH-ResourceGroups-r16)) OF PUCCH-ResourceGroup-r16
                                     OPTIONAL, -- Need N
resourceGroupToReleaseList-r16        SEQUENCE (SIZE (1..maxNrofPUCCH-ResourceGroups-r16)) OF PUCCH-ResourceGroupId-r16
                                     OPTIONAL, -- Need N
sps-PUCCH-AN-List-r16                 SetupRelease { SPS-PUCCH-AN-List-r16 }
                                     OPTIONAL, -- Need M
schedulingRequestResourceToAddModListExt-v1610 SEQUENCE (SIZE (1..maxNrofSR-Resources)) OF SchedulingRequestResourceConfigExt-v1610
                                     OPTIONAL, -- Need N
]],
[[
format0-r17                           SetupRelease { PUCCH-FormatConfig }
                                     OPTIONAL, -- Need M
format2Ext-r17                         SetupRelease { PUCCH-FormatConfigExt-r17 }
                                     OPTIONAL, -- Need M
format3Ext-r17                         SetupRelease { PUCCH-FormatConfigExt-r17 }
                                     OPTIONAL, -- Need M
format4Ext-r17                         SetupRelease { PUCCH-FormatConfigExt-r17 }
                                     OPTIONAL, -- Need M
ul-AccessConfigListDCI-1-2-r17        SetupRelease { UL-AccessConfigListDCI-1-2-r17 }
                                     OPTIONAL, -- Need M
mappingPattern-r17                    ENUMERATED {cyclicMapping, sequentialMapping}
                                     OPTIONAL, -- Need R
powerControlSetInfoToAddModList-r17   SEQUENCE (SIZE (1..maxNrofPowerControlSetInfos-r17)) OF PUCCH-PowerControlSetInfo-r17
                                     OPTIONAL, -- Need N
powerControlSetInfoToReleaseList-r17 SEQUENCE (SIZE (1..maxNrofPowerControlSetInfos-r17)) OF PUCCH-PowerControlSetInfoId-r17
                                     OPTIONAL, -- Need N
secondTPCFieldDCI-1-1-r17              ENUMERATED {enabled}
                                     OPTIONAL, -- Need R
secondTPCFieldDCI-1-2-r17              ENUMERATED {enabled}
                                     OPTIONAL, -- Need R
dl-DataToUL-ACK-r17                   SetupRelease { DL-DataToUL-ACK-r17 }
                                     OPTIONAL, -- Need M
dl-DataToUL-ACK-DCI-1-2-r17           SetupRelease { DL-DataToUL-ACK-DCI-1-2-r17 }
                                     OPTIONAL, -- Need M
ul-AccessConfigListDCI-1-1-r17        SetupRelease { UL-AccessConfigListDCI-1-1-r17 }
                                     OPTIONAL, -- Need M
schedulingRequestResourceToAddModListExt-v1700 SEQUENCE (SIZE (1..maxNrofSR-Resources)) OF SchedulingRequestResourceConfigExt-v1700
                                     OPTIONAL, -- Need N
dmrs-BundlingPUCCH-Config-r17         SetupRelease { DMRS-BundlingPUCCH-Config-r17 }
                                     OPTIONAL, -- Need M
dl-DataToUL-ACK-v1700                 SetupRelease { DL-DataToUL-ACK-v1700 }
                                     OPTIONAL, -- Need M
dl-DataToUL-ACK-MulticastDCI-Format4-1-r17 SetupRelease { DL-DataToUL-ACK-MulticastDCI-Format4-1-r17 }
                                     OPTIONAL, -- Need M
sps-PUCCH-AN-ListMulticast-r17        SetupRelease { SPS-PUCCH-AN-List-r16 }
                                     OPTIONAL, -- Need M

```

```

    ]]
  }

PUCCH-FormatConfig ::=
  interslotFrequencyHopping
  additionalDMRS
  maxCodeRate
  nrofSlots
  pi2BPSK
  simultaneousHARQ-ACK-CSI
}

PUCCH-FormatConfigExt-r17 ::=
  maxCodeRateLP-r17
  ...
}

PUCCH-MaxCodeRate ::=
  ENUMERATED {zeroDot08, zeroDot15, zeroDot25, zeroDot35, zeroDot45, zeroDot60, zeroDot80}

-- A set with one or more PUCCH resources
PUCCH-ResourceSet ::=
  pucch-ResourceSetId
  resourceList
  maxPayloadSize
}

PUCCH-ResourceSetId ::=
  INTEGER (0..maxNrofPUCCH-ResourceSets-1)

PUCCH-Resource ::=
  pucch-ResourceId
  startingPRB
  intraSlotFrequencyHopping
  secondHopPRB
  format
    format0
    format1
    format2
    format3
    format4
  }
}

PUCCH-ResourceExt-v1610 ::=
  interlaceAllocation-r16
  rb-SetIndex-r16
  interlace0-r16
    scs15
    scs30
  }
  format-v1610
    interlace1-v1610
    occ-v1610
      occ-Length-v1610
}

SEQUENCE {
  ENUMERATED {enabled} OPTIONAL, -- Need R
  ENUMERATED {true} OPTIONAL, -- Need R
  PUCCH-MaxCodeRate OPTIONAL, -- Need R
  ENUMERATED {n2,n4,n8} OPTIONAL, -- Need S
  ENUMERATED {enabled} OPTIONAL, -- Need R
  ENUMERATED {true} OPTIONAL, -- Need R
}

SEQUENCE {
  PUCCH-MaxCodeRate OPTIONAL, -- Need R
}

ENUMERATED {zeroDot08, zeroDot15, zeroDot25, zeroDot35, zeroDot45, zeroDot60, zeroDot80}

SEQUENCE {
  PUCCH-ResourceSetId,
  SEQUENCE (SIZE (1..maxNrofPUCCH-ResourcesPerSet)) OF PUCCH-ResourceId, OPTIONAL -- Need R
  INTEGER (4..256)
}

INTEGER (0..maxNrofPUCCH-ResourceSets-1)

SEQUENCE {
  PUCCH-ResourceId,
  PRB-Id,
  ENUMERATED { enabled } OPTIONAL, -- Need R
  PRB-Id OPTIONAL, -- Need R
  CHOICE {
    PUCCH-format0,
    PUCCH-format1,
    PUCCH-format2,
    PUCCH-format3,
    PUCCH-format4
  }
}

SEQUENCE {
  SEQUENCE {
    INTEGER (0..4),
    CHOICE {
      INTEGER (0..9),
      INTEGER (0..4)
    }
  }
  CHOICE {
    INTEGER (0..9),
    SEQUENCE {
      ENUMERATED {n2,n4} OPTIONAL, -- Need M
    }
  }
}

```


<pre> occ-Index-v1610 } } ..., [[format-v1700 nrofPRBs-r17]], pucch-RepetitionNrofSlots-r17]], [[applyIndicatedTCI-State-r18 multipanelSFN-Scheme-r18 dl-DataToUL-ACK-r18 dl-DataToUL-ACK-DCI-1-2-r18]] } </pre>	<pre> ENUMERATED {n0,n1,n2,n3} SEQUENCE { INTEGER (1..16) ENUMERATED { n1,n2,n4,n8 } ENUMERATED {first, second, both, spare1} ENUMERATED {enabled} SetupRelease { DL-DataToUL-ACK-r18 } SetupRelease { DL-DataToUL-ACK-DCI-1-2-r18} } </pre>	<pre> OPTIONAL -- Need M OPTIONAL, -- Need R OPTIONAL, -- Need R OPTIONAL -- Need R OPTIONAL, -- Need R OPTIONAL, -- Need R OPTIONAL, -- Need M OPTIONAL -- Need M </pre>
<pre> PUCCH-ResourceId ::= </pre>	<pre> INTEGER (0..maxNrofPUCCH-Resources-1) </pre>	
<pre> PUCCH-format0 ::= initialCyclicShift nrofSymbols startingSymbolIndex } </pre>	<pre> SEQUENCE { INTEGER(0..11), INTEGER (1..2), INTEGER(0..13) } </pre>	
<pre> PUCCH-format1 ::= initialCyclicShift nrofSymbols startingSymbolIndex timeDomainOCC } </pre>	<pre> SEQUENCE { INTEGER(0..11), INTEGER (4..14), INTEGER(0..10), INTEGER(0..6) } </pre>	
<pre> PUCCH-format2 ::= nrofPRBs nrofSymbols startingSymbolIndex } </pre>	<pre> SEQUENCE { INTEGER (1..16), INTEGER (1..2), INTEGER(0..13) } </pre>	
<pre> PUCCH-format3 ::= nrofPRBs nrofSymbols startingSymbolIndex } </pre>	<pre> SEQUENCE { INTEGER (1..16), INTEGER (4..14), INTEGER(0..10) } </pre>	
<pre> PUCCH-format4 ::= nrofSymbols occ-Length occ-Index startingSymbolIndex } </pre>	<pre> SEQUENCE { INTEGER (4..14), ENUMERATED {n2,n4}, ENUMERATED {n0,n1,n2,n3}, INTEGER(0..10) } </pre>	
<pre> PUCCH-ResourceGroup-r16 ::= </pre>	<pre> SEQUENCE { </pre>	

```

    pucch-ResourceGroupId-r16
    resourcePerGroupList-r16
}
PUCCH-ResourceGroupId-r16 ::=
    INTEGER (0..maxNrofPUCCH-ResourceGroups-1-r16)
DL-DataToUL-ACK-r16 ::=
    SEQUENCE (SIZE (1..8)) OF INTEGER (-1..15)
DL-DataToUL-ACK-r17 ::=
    SEQUENCE (SIZE (1..8)) OF INTEGER (-1..127)
DL-DataToUL-ACK-v1700 ::=
    SEQUENCE (SIZE (1..8)) OF INTEGER (16..31)
DL-DataToUL-ACK-r18 ::=
    SEQUENCE (SIZE (1..8)) OF INTEGER (0..31)
DL-DataToUL-ACK-DCI-1-2-r16 ::=
    SEQUENCE (SIZE (1..8)) OF INTEGER (0..15)
DL-DataToUL-ACK-DCI-1-2-r17 ::=
    SEQUENCE (SIZE (1..8)) OF INTEGER (0..127)
DL-DataToUL-ACK-DCI-1-2-r18 ::=
    SEQUENCE (SIZE (1..8)) OF INTEGER (0..31)
UL-AccessConfigListDCI-1-1-r16 ::=
    SEQUENCE (SIZE (1..16)) OF INTEGER (0..15)
UL-AccessConfigListDCI-1-2-r17 ::=
    SEQUENCE (SIZE (1..16)) OF INTEGER (0..15)
UL-AccessConfigListDCI-1-1-r17 ::=
    SEQUENCE (SIZE (1..3)) OF INTEGER (0..2)
DL-DataToUL-ACK-MulticastDCI-Format4-1-r17 ::= SEQUENCE (SIZE (1..8)) OF INTEGER (0..15)
-- TAG-PUCCH-CONFIG-STOP
-- ASN1STOP

```

PUCCH-Config field descriptions
<i>dl-DataToUL-ACK, dl-DataToUL-ACK-DCI-1-2</i> List of timing for given PDSCH to the DL ACK (see TS 38.213 [13], clause 9.1.2). The field <i>dl-DataToUL-ACK</i> applies to DCI format 1_1 and the field <i>dl-DataToUL-ACK-DCI-1-2</i> applies to DCI format 1_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 9.2.3). The <i>dl-DataToUL-ACK-v1700</i> is applicable for NTN and <i>dl-DataToUL-ACK-r17</i> is applicable for FR2-2. The <i>dl-DataToUL-ACK-r18</i> is applicable for ATG. If <i>dl-DataToUL-ACK-r16</i> or <i>dl-DataToUL-ACK-r17</i> or <i>dl-DataToUL-ACK-v1700</i> or <i>dl-DataToUL-ACK-r18</i> is signalled, UE shall ignore the <i>dl-DataToUL-ACK</i> (without suffix). The value -1 corresponds to "inapplicable value" for the case where the A/N feedback timing is not explicitly included at the time of scheduling PDSCH. The fields <i>dl-DataToUL-ACK-r17</i> and <i>dl-DataToUL-ACK-DCI-1-2-r17</i> are only applicable for SCS of 480 kHz or 960 kHz. The field <i>dl-DataToUL-ACK-r18</i> applies to DCI format 1_1 and the field <i>dl-DataToUL-ACK-DCI-1-2-r18</i> applies to DCI format 1_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 9.2.3).
<i>dl-DataToUL-ACK-MulticastDCI-Format4-1</i> List of timing for given group-common PDSCH to the DL ACK (see TS 38.213 [13], clause 9.1.2). The field <i>dl-DataToUL-ACK-MulticastDciFormat4-1</i> applies to DCI format 4_1 for MBS multicast (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 9.2.3).
<i>dmrs-BundlingPUCCH-Config</i> Configuration of the parameters for DMRS bundling for PUCCH (see TS 38.214 [19], clause 6.1.7). DMRS bundling for PUCCH is not supported for PUCCH format 0/2. In this release, this is not applicable to FR2-2.
<i>dmrs-UplinkTransformPrecodingPUCCH</i> This field is used for PUCCH formats 3 and 4 according to TS 38.211, Clause 6.4.1.3.3.1.
<i>format0</i> Parameters that are common for all PUCCH resources of format 0.
<i>format1</i> Parameters that are common for all PUCCH resources of format 1.
<i>format2</i> Parameters that are common for all PUCCH resources of format 2.
<i>format3</i> Parameters that are common for all PUCCH resources of format 3.
<i>format4</i> Parameters that are common for all PUCCH resources of format 4.
<i>mappingPattern</i> Indicates whether the UE should follow Cyclical mapping pattern or Sequential mapping pattern for when a PUCCH resource used for repetitions of a PUCCH transmission includes first and second spatial settings for FR2, or first and second sets of power control parameters for FR1 (see TS 38.213 [13], clause 9.2.6).
<i>numberOfBitsForPUCCH-ResourceIndicatorDCI-1-2</i> Configuration of the number of bits for "PUCCH resource indicator" in DCI format 1_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 9.2.3).
<i>powerControlSetInfoToAddModList</i> Configures power control sets for repetition of a PUCCH transmission in FR1. This field is not configured if <i>ul-powerControl</i> is configured in the <i>BWP-UplinkDedicated</i> in which the <i>PUCCH-Config</i> is included.
<i>pucch-PowerControl</i> Configures power control parameters PUCCH transmission.
<i>resourceGroupToAddModList, resourceGroupToReleaseList</i> Lists for adding and releasing groups of PUCCH resources that can be updated simultaneously for spatial relations with a MAC CE.
<i>resourceSetToAddModList, resourceSetToReleaseList</i> Lists for adding and releasing PUCCH resource sets (see TS 38.213 [13], clause 9.2).
<i>resourceToAddModList, resourceToAddModListExt, resourceToReleaseList</i> Lists for adding and releasing PUCCH resources applicable for the UL BWP and serving cell in which the <i>PUCCH-Config</i> is defined. The resources defined herein are referred to from other parts of the configuration to determine which resource the UE shall use for which report. If the network includes of <i>resourceToAddModListExt</i>, it includes the same number of entries, and listed in the same order, as in <i>resourceToAddModList</i>.

secondTPCFieldDCI-1-1, secondTPCFieldDCI-1-2
A second TPC field can be configured via RRC for DCI-1-1 and DCI-1-2. Each TPC field is for each closed-loop index value respectively (i.e., 1st /2nd TPC fields correspond to "closedLoopIndex" value = 0 and 1.
spatialRelationInfoToAddModList, spatialRelationInfoToAddModListSizeExt, spatialRelationInfoToAddModListExt
Configuration of the spatial relation between a reference RS and PUCCH. Reference RS can be SSB/CSI-RS/SRS. If the list has more than one element, MAC-CE selects a single element (see TS 38.321 [3], clause 5.18.8 and TS 38.213 [13], clause 9.2.2). The UE shall consider entries in <i>spatialRelationInfoToAddModList</i> and in <i>spatialRelationInfoToAddModListSizeExt</i> as a single list, i.e. an entry created using <i>spatialRelationInfoToAddModList</i> can be modified using <i>spatialRelationInfoToAddModListSizeExt</i> (or deleted using <i>spatialRelationInfoToReleaseListSizeExt</i>) and vice-versa. If the network includes <i>spatialRelationInfoToAddModListExt</i> , it includes the same number of entries, and listed in the same order, as in the concatenation of <i>spatialRelationInfoToAddModList</i> and of <i>spatialRelationInfoToAddModListSizeExt</i> . If <i>unifiedTCI-StateType</i> is configured for the serving cell, no element in this list is configured.
spatialRelationInfoToReleaseList, spatialRelationInfoToReleaseListSizeExt, spatialRelationInfoToReleaseListExt
Lists of spatial relation configurations between a reference RS and PUCCH to be released by the UE.
sps-PUCCH-AN-List
Indicates a list of PUCCH resources for DL SPS HARQ ACK. The field <i>maxPayloadSize</i> is absent for the first and the last <i>SPS-PUCCH-AN</i> in the list. If configured, this overrides <i>n1PUCCH-AN</i> in <i>SPS-config</i> .
sps-PUCCH-AN-ListMulticast
The field is used to configure the list of PUCCH resources per HARQ ACK codebook for MBS multicast.
subslotLengthForPUCCH
Indicates the sub-slot length for sub-slot based PUCCH feedback in number of symbols (see TS 38.213 [13], clause 9). Value <i>n2</i> corresponds to 2 symbols, value <i>n6</i> corresponds to 6 symbols, value <i>n7</i> corresponds to 7 symbols. For normal CP, the value is either <i>n2</i> or <i>n7</i> . For extended CP, the value is either <i>n2</i> or <i>n6</i> .
ul-AccessConfigListDCI-1-1, ul-AccessConfigListDCI-1-2
List of the combinations of cyclic prefix extension and UL channel access type (see TS 38.212 [17], clause 7.3.1) applicable, respectively, to DCI format 1_1 and DCI format 1_2. The fields <i>ul-AccessConfigListDCI-1-1-r16</i> and <i>ul-AccessConfigListDCI-1-2-r17</i> are only applicable for FR1 (see TS 38.212 [17], Table 7.3.1.2.2-6). The field <i>ul-AccessConfigListDCI-1-1-r17</i> indicates a list which only contains UL channel access types and is only applicable for FR2-2 (see TS 38.212 [17], Table 7.3.1.2.2-6A).

PUCCH-format3 field descriptions
nrofPRBs
The supported values are 1,2,3,4,5,6,8,9,10,12,15 and 16. The UE shall ignore this field when <i>format-v1610</i> is configured.

<i>PUCCH-FormatConfig, PUCCH-FormatConfigExt field descriptions</i>
<i>additionalDMRS</i> If the field is present, the UE enables 2 DMRS symbols per hop of a PUCCH Format 3 or 4 if both hops are more than X symbols when FH is enabled (X=4). And it enables 4 DMRS symbols for a PUCCH Format 3 or 4 with more than 2X+1 symbols when FH is disabled (X=4). The field is not applicable for format 0, 1 and 2. See TS 38.213 [13], clause 9.2.2.
<i>interslotFrequencyHopping</i> If the field is present, the UE enables inter-slot frequency hopping when PUCCH Format 0, 1, 2, 3 or 4 is repeated over multiple slots. For a PUCCH over multiple slots, the intra and inter slot frequency hopping cannot be enabled at the same time for a UE. See TS 38.213 [13], clause 9.2.6.
<i>maxCodeRate</i> Max coding rate to determine how to feedback UCI on PUCCH for format 2, 3 or 4. The field is not applicable for format 0 and 1. See TS 38.213 [13], clause 9.2.5.
<i>maxCodeRateLP</i> Max coding rate to determine how to feedback UCI on PUCCH for format 2, 3 or 4. The field is not applicable for format 0 and 1. This field configures additional max code rate in the second entry of <i>PUCCH-ConfigurationList-r16</i> for multiplexing low-priority (LP) HARQ-ACK and high-priority (HP) UCI in a PUCCH as described Clause 9.2.5.3 of TS 38.213 [13]. The field is absent for the first entry of <i>PUCCH-ConfigurationList-r16</i>.
<i>nrofSlots</i> Number of slots with the same PUCCH. When the field is absent the UE applies the value <i>n1</i>. See TS 38.213 [13], clause 9.2.6.
<i>pi2BPSK</i> If the field is present, the UE uses $\pi/2$ BPSK for UCI symbols instead of QPSK for PUCCH. The field is not applicable for format 0, 1 and 2. See TS 38.213 [13], clause 9.2.5.
<i>rb-SetIndex</i> Indicates the RB set where PUCCH resource is allocated.
<i>simultaneousHARQ-ACK-CSI</i> If the field is present, the UE uses simultaneous transmission of CSI and HARQ-ACK feedback with or without SR with PUCCH Format 2, 3 or 4. See TS 38.213 [13], clause 9.2.5. When the field is absent the UE applies the value <i>off</i>. The field is not applicable for format 0 and 1.

<i>PUCCH-Resource, PUCCH-ResourceExt</i> field descriptions
<i>applyIndicatedTCI-State</i> This field indicates, for PUCCH transmission(s) corresponding to this PUCCH resource, if UE applies the first, the second or both "indicated" UL only TCI or joint TCI as specified in TS 38.213 9.2.2. For PUCCH resources belonging to a PUCCH group, network configures same value.
<i>format</i> Selection of the PUCCH format (format 0 – 4) and format-specific parameters, see TS 38.213 [13], clause 9.2. <i>format0</i> and <i>format1</i> are only allowed for a resource in a first PUCCH resource set. <i>format2</i>, <i>format3</i> and <i>format4</i> are only allowed for a resource in non-first PUCCH resource set. The network can only configure <i>format-v1610</i> when format is set to <i>format2</i> or <i>format3</i>. The network only configures <i>format-v1700</i> when format is set to <i>format0</i>, <i>format1</i> or <i>format4</i>.
<i>interlace0</i> This is the only interlace of interlaced PUCCH Format 0 and 1 and the first interlace for interlaced PUCCH Format 2 and 3.
<i>interlace1</i> A second interlace, in addition to interlace 0, as specified in TS 38.213 [13], clause 9.2.1. For 15kHz SCS, values {0..9} are applicable; for 30kHz SCS, values {0..4} are applicable. For 15kHz SCS, the values of <i>interlace1</i> shall satisfy $interlace1 = \text{mod}(interlace0 + X, 10)$ where $X=1, -1$, or 5.
<i>intraSlotFrequencyHopping</i> Enabling intra-slot frequency hopping, applicable for all types of PUCCH formats. For long PUCCH over multiple slots, the intra and inter slot frequency hopping cannot be enabled at the same time for a UE. See TS 38.213 [13], clause 9.2.1.
<i>nrofPRBs</i> Indicates the number of PRBs used per PUCCH resource for the PUCCH format, see TS 38.213 [13], clause 9.2.1. This field is applicable for PUCCH <i>format0</i>, <i>format1</i>, and <i>format4</i> in FR2-2. The supported values for <i>format4</i> are 1,2,3,4,5,6,8,9,10,12,15 and 16.
<i>multipanelSFN-Scheme</i> Parameter to configure multiple panel simultaneous uplink transmission SFN scheme for PUCCH resources, see TS 38.214 [19] clause 6.1.1.
<i>occ-Index</i> Indicates the orthogonal cover code index (see TS 38.213 [13], clause 9.2.1). This field is applicable when <i>useInterlacePUCCH-PUSCH-16</i> is configured.
<i>occ-Length</i> Indicates the orthogonal cover code length (see TS 38.213 [13], clause 9.2.1). This field is applicable when <i>useInterlacePUCCH-PUSCH-16</i> is configured.
<i>pucch-RepetitionNrofSlots</i> Configuration of PUCCH repetition factor per PUCCH resource with associated scheduling DCI corresponding to Rel-17 dynamic PUCCH repetition. For a PUCCH resource, if both the field <i>pucch-RepetitionNrofSlots</i> and the field <i>nrofSlots</i> are present, the field <i>nrofSlots</i> is ignored and apply the value of <i>pucch-RepetitionNrofSlots</i> corresponding to Rel-17 dynamic PUCCH repetition. If this field is absent in a PUCCH resource with associated scheduling DCI, the UE applies the value of field <i>nrofSlots</i>.
<i>pucch-ResourceId</i> Identifier of the PUCCH resource.
<i>secondHopPRB</i> Index of first PRB after frequency hopping of PUCCH. This value is applicable for intra-slot frequency hopping (see TS 38.213 [13], clause 9.2.1) or inter-slot frequency hopping (see TS 38.213 [13], clause 9.2.6).

<i>PUCCH-ResourceSet</i> field descriptions
maxPayloadSize Maximum number of UCI information bits that the UE may transmit using this PUCCH resource set (see TS 38.213 [13], clause 9.2.1). In a PUCCH occurrence, the UE chooses the first of its <i>PUCCH-ResourceSet</i> which supports the number of bits that the UE wants to transmit. The field is absent in the first set (Set0) and in the last configured set since the UE derives the maximum number of UCI information bits as specified in TS 38.213 [13], clause 9.2.1. This field can take integer values that are multiples of 4.
resourceList PUCCH resources of <i>format0</i> and <i>format1</i> are only allowed in the first PUCCH resource set, i.e., in a PUCCH-ResourceSet with <i>pucch-ResourceSetId</i> = 0. This set may contain between 1 and 32 resources. PUCCH resources of <i>format2</i>, <i>format3</i> and <i>format4</i> are only allowed in a <i>PUCCH-ResourceSet</i> with <i>pucch-ResourceSetId</i> > 0. If present, these sets contain between 1 and 8 resources each. The UE chooses a <i>PUCCH-Resource</i> from this list as specified in TS 38.213 [13], clause 9.2.3. Note that this list contains only a list of resource IDs. The actual resources are configured in <i>PUCCH-Config</i>.

Conditional Presence	Explanation
<i>PI2-BPSK</i>	The field is optionally present, Need R, if <i>format3</i> and/or <i>format4</i> are configured and <i>pi2BPSK</i> is configured in each of them. It is absent, Need R otherwise.

– *PUCCH-ConfigCommon*

The IE *PUCCH-ConfigCommon* is used to configure the cell specific PUCCH parameters.

PUCCH-ConfigCommon information element

```
-- ASN1START
-- TAG-PUCCH-CONFIGCOMMON-START

PUCCH-ConfigCommon ::=
    pucch-ResourceCommon          SEQUENCE {
        pucch-GroupHopping        INTEGER (0..15)                OPTIONAL, -- Cond InitialBWP-Only
        hoppingId                  ENUMERATED { neither, enable, disable },
        p0-nominal                  INTEGER (0..1023)                OPTIONAL, -- Need R
        ...
        [[
            nrofPRBs                INTEGER (1..16)                OPTIONAL, -- Need R
            intra-SlotFH-r17         ENUMERATED {fromLowerEdge, fromUpperEdge}
            pucch-ResourceCommonRedCap-r17 INTEGER (0..15)          OPTIONAL, -- Cond InitialBWP-RedCapOnly
            additionalPRBOffset-r17  ENUMERATED {n2, n3, n4, n6, n8, n9, n10, n12} OPTIONAL, -- Cond InitialBWP-RedCapOnly
        ]]
    ]
}

-- TAG-PUCCH-CONFIGCOMMON-STOP
-- ASN1STOP
```

<i>PUCCH-ConfigCommon</i> field descriptions
<i>additionalPRBOffset</i> When intra-slot PUCCH frequency hopping within RedCap-specific initial UL BWP is disabled, each common PUCCH resource is mapped to a single PRB on one side of the UL BWP. This parameter determines an additional PRB offset in the PRB mapping for the PUCCH resource. If the field is not configured, the UE shall assume an additional PRB offset of zero.
<i>hoppingId</i> Cell-specific scrambling ID for group hopping and sequence hopping if enabled, see TS 38.211 [16], clause 6.3.2.2.
<i>intra-SlotFH-r17</i> In case a separate initial UL BWP is configured for (e)RedCap UEs, the presence of this parameter indicates whether intra-slot PUCCH frequency hopping within the separate initial UL BWP in the common PUCCH resource is enabled for (e)RedCap UEs. If this field is absent, intra-slot PUCCH frequency hopping within RedCap-specific initial UL BWP is enabled. If this field is present, intra-slot PUCCH frequency hopping within RedCap-specific initial UL BWP is disabled and each PUCCH resource is mapped to a single PRB on one side of the UL BWP and this parameter determines whether the PRB index in the PRB mapping is counted in increasing order from the lower edge or in decreasing order from the upper edge of the UL BWP.
<i>nrofPRBs</i> Indicates the number of PRBs used per PUCCH resource for PUCCH format 0 and format 1 in FR2-2, see TS 38.213 [13], clause 9.2.1.
<i>p0-nominal</i> Power control parameter P0 for PUCCH transmissions. Value in dBm. Only even values (step size 2) allowed (see TS 38.213 [13], clause 7.2).
<i>pucch-GroupHopping</i> Configuration of group- and sequence hopping for all the PUCCH formats 0, 1, 3 and 4. Value <i>neither</i> implies neither group or sequence hopping is enabled. Value <i>enable</i> enables group hopping and disables sequence hopping. Value <i>disable</i> disables group hopping and enables sequence hopping (see TS 38.211 [16], clause 6.3.2.2).
<i>pucch-ResourceCommon</i> An entry into a 16-row table where each row configures a set of cell-specific PUCCH resources/parameters. The UE uses those PUCCH resources until it is provided with a dedicated <i>PUCCH-Config</i> (e.g. during initial access) on the initial uplink BWP. Once the network provides a dedicated <i>PUCCH-Config</i> for that bandwidth part the UE applies that one instead of the one provided in this field (see TS 38.213 [13], clause 9.2).
<i>pucch-ResourceCommonRedCap</i> An entry into a 16-row table where each row configures a set of cell-specific PUCCH resources/parameters for (e)RedCap UEs. The UE uses those PUCCH resources until it is provided with a dedicated <i>PUCCH-Config</i> (e.g. during initial access) on the initial uplink BWP. Once the network provides a dedicated <i>PUCCH-Config</i> for that bandwidth part the UE applies that one instead of the one provided in this field (see TS 38.213 [13], clause 9.2).

Conditional Presence	Explanation
<i>InitialBWP-Only</i>	The field is mandatory present in the <i>PUCCH-ConfigCommon</i> of the initial BWP (BWP#0) in SIB1. It is absent in other BWPs including the RedCap-specific initial uplink BWP, if configured.
<i>InitialBWP-RedCap</i>	The field is mandatory present in the <i>PUCCH-ConfigCommon</i> of the RedCap-specific initial BWP. It is optional present, Need R, in the <i>PUCCH-ConfigCommon</i> of the initial BWP configured by <i>initialUplinkBWP</i> . It is absent in other BWPs.
<i>InitialBWP-RedCapOnly</i>	The field is optional present, Need S, in the <i>PUCCH-ConfigCommon</i> of the RedCap-specific initial BWP. It is absent in other BWPs.

– *PUCCH-ConfigurationList*

The IE *PUCCH-ConfigurationList* is used to configure UE specific PUCCH parameters (per BWP) for two simultaneously constructed HARQ-ACK codebooks. See TS 38.213 [13], clause 9.1.

PUCCH-ConfigurationList information element

```
-- ASN1START
-- TAG-PUCCH-CONFIGURATIONLIST-START

PUCCH-ConfigurationList-r16 ::= SEQUENCE (SIZE (1..2)) OF PUCCH-Config

-- TAG-PUCCH-CONFIGURATIONLIST-STOP
-- ASN1STOP
```

– PUCCH-CSI-Resource

The IE *PUCCH-CSI-Resource* is used to indicate a PUCCH resource to use for reporting on PUCCH.

PUCCH-CSI-Resource information element

```
-- ASN1START
-- TAG-PUCCH-CSI-RESOURCE-START

PUCCH-CSI-Resource ::= SEQUENCE {
    uplinkBandwidthPartId BWP-Id,
    pucch-Resource PUCCH-ResourceId
}

-- TAG-PUCCH-CSI-RESOURCE-STOP
-- ASN1STOP
```

PUCCH-CSI-Resource field descriptions
pucch-Resource PUCCH resource for the associated uplink BWP. Only PUCCH-Resource of format 2, 3 and 4 is supported. The actual PUCCH-Resource is configured in <i>PUCCH-Config</i> and referred to by its ID. When two <i>PUCCH-Config</i> are configured within <i>PUCCH-ConfigurationList</i>, <i>PUCCH-ResourceId</i> in a <i>PUCCH-CSI-Resource</i> refers to a PUCCH-Resource in the <i>PUCCH-Config</i> used for HARQ-ACK with low priority.

– PUCCH-PathlossReferenceRS-Id

The IE *PUCCH-PathlossReferenceRS-Id* is an ID for a reference signal (RS) configured as PUCCH pathloss reference (see TS 38.213 [13], clause 7.2).

PUCCH-PathlossReferenceRS-Id information element

```
-- ASN1START
-- TAG-PUCCH-PATHLOSSREFERENCE-RS-ID-START

PUCCH-PathlossReferenceRS-Id ::= INTEGER (0..maxNrofPUCCH-PathlossReferenceRSs-1)

PUCCH-PathlossReferenceRS-Id-v1610 ::= INTEGER (maxNrofPUCCH-PathlossReferenceRSs..maxNrofPUCCH-PathlossReferenceRSs-1-r16)
```

PUCCH-PathlossReferenceRS-Id-r17 ::= INTEGER (0..maxNrofPUCCH-PathlossReferenceRSs-1-r17)

-- TAG-PUCCH-PATHLOSSREFERENCERS-ID-STOP
-- ASN1STOP

– PUCCH-PowerControl

The IE *PUCCH-PowerControl* is used to configure UE-specific parameters for the power control of PUCCH.

PUCCH-PowerControl information element

```
-- ASN1START
-- TAG-PUCCH-POWERCONTROL-START
PUCCH-PowerControl ::=
    deltaF-PUCCH-f0          INTEGER (-16..15)          OPTIONAL, -- Need R
    deltaF-PUCCH-f1          INTEGER (-16..15)          OPTIONAL, -- Need R
    deltaF-PUCCH-f2          INTEGER (-16..15)          OPTIONAL, -- Need R
    deltaF-PUCCH-f3          INTEGER (-16..15)          OPTIONAL, -- Need R
    deltaF-PUCCH-f4          INTEGER (-16..15)          OPTIONAL, -- Need R
    p0-Set                   SEQUENCE (SIZE (1..maxNrofPUCCH-P0-PerSet)) OF P0-PUCCH          OPTIONAL, -- Need M
    pathlossReferenceRSs     SEQUENCE (SIZE (1..maxNrofPUCCH-PathlossReferenceRSs)) OF PUCCH-PathlossReferenceRS          OPTIONAL, -- Need M
    twoPUCCH-PC-AdjustmentStates ENUMERATED {twoStates}          OPTIONAL, -- Need S
    ...,
    [[
    pathlossReferenceRSs-v1610 SetupRelease { PathlossReferenceRSs-v1610 }          OPTIONAL -- Need M
    ]]
}

P0-PUCCH ::=
    p0-PUCCH-Id
    p0-PUCCH-Value
}

P0-PUCCH-Id ::=
    INTEGER (1..8)

PathlossReferenceRSs-v1610 ::=
    SEQUENCE (SIZE (1..maxNrofPUCCH-PathlossReferenceRSsDiff-r16)) OF PUCCH-PathlossReferenceRS-r16

PUCCH-PathlossReferenceRS ::=
    pucch-PathlossReferenceRS-Id
    referenceSignal
    ssb-Index
    csi-RS-Index
}

PUCCH-PathlossReferenceRS-r16 ::=
    pucch-PathlossReferenceRS-Id-r16
    referenceSignal-r16
    ssb-Index-r16
    SEQUENCE {
        PUCCH-PathlossReferenceRS-Id-v1610,
        CHOICE {
            SSB-Index,
            NZP-CSI-RS-ResourceId
        }
    }
```

```

    csi-RS-Index-r16
  }
}

PUCCH-PowerControlSetInfo-r17 ::=
  pucch-PowerControlSetInfoId-r17
  p0-PUCCH-Id-r17
  pucch-ClosedLoopIndex-r17
  pucch-PathlossReferenceRS-Id-r17

SEQUENCE {
  PUCCH-PowerControlSetInfoId-r17,
  P0-PUCCH-Id,
  ENUMERATED { i0, i1 },
  PUCCH-PathlossReferenceRS-Id-r17
}

PUCCH-PowerControlSetInfoId-r17 ::=
  INTEGER (1.. maxNrofPowerControlSetInfos-r17)

-- TAG-PUCCH-POWERCONTROL-STOP
-- ASN1STOP

```

P0-PUCCH field descriptions

p0-PUCCH-Value

P0 value for PUCCH with 1dB step size.

PUCCH-PowerControl field descriptions

deltaF-PUCCH-f0

deltaF for PUCCH format 0 with 1dB step size (see TS 38.213 [13], clause 7.2).

deltaF-PUCCH-f1

deltaF for PUCCH format 1 with 1dB step size (see TS 38.213 [13], clause 7.2).

deltaF-PUCCH-f2

deltaF for PUCCH format 2 with 1dB step size (see TS 38.213 [13], clause 7.2).

deltaF-PUCCH-f3

deltaF for PUCCH format 3 with 1dB step size (see TS 38.213 [13], clause 7.2).

deltaF-PUCCH-f4

deltaF for PUCCH format 4 with 1dB step size (see TS 38.213 [13], clause 7.2).

p0-Set

A set with dedicated P0 values for PUCCH, i.e., {P01, P02,...} (see TS 38.213 [13], clause 7.2). This field is not configured if *unifiedTCI-StateType* is configured for the serving cell.

pathlossReferenceRSs, pathlossReferenceRSs-v1610

A set of Reference Signals (e.g. a CSI-RS config or a SS block) to be used for PUCCH pathloss estimation. Up to *maxNrofPUCCH-PathlossReference-RSs* may be configured. If the field is not configured, the UE uses the SSB as reference signal (see TS 38.213 [13], clause 7.2). The set includes Reference Signals indicated in *pathlossReferenceRSs* (without suffix) and in *pathlossReferenceRSs-v1610*. The UE maintains *pathlossReferenceRSs* and *pathlossReferenceRSs-v1610* separately: Receiving *pathlossReferenceRSs-v1610* set to *release* releases only the entries that were configured by *pathlossReferenceRSs-v1610*, and receiving *pathlossReferenceRSs-v1610* set to *setup* replaces only the entries that were configured by *pathlossReferenceRSs-v1610* with the newly signalled entries. Neither the field *pathlossReferenceRSs* (without suffix) nor *pathlossReferenceRSs-v1610* are configured if *unifiedTCI-StateType* is configured for the serving cell.

twoPUCCH-PC-AdjustmentStates

Number of PUCCH power control adjustment states maintained by the UE (i.e., *g(i)*). If the field is present (*n2*) the UE maintains two power control states (i.e., *g(i,0)* and *g(i,1)*). If the field is absent, it maintains one power control state (i.e., *g(i,0)*) (see TS 38.213 [13], clause 7.2).

— *PUCCH-SpatialRelationInfo*

The IE *PUCCH-SpatialRelationInfo* is used to configure the spatial setting for PUCCH transmission and the parameters for PUCCH power control, see TS 38.213, [13], clause 9.2.2.

PUCCH-SpatialRelationInfo information element

```
-- ASN1START
-- TAG-PUCCH-SPATIALRELATIONINFO-START

PUCCH-SpatialRelationInfo ::=
  pucch-SpatialRelationInfoId
  servingCellId
  referenceSignal
    ssb-Index
    csi-RS-Index
    srs
  },
  pucch-PathlossReferenceRS-Id
  p0-PUCCH-Id
  closedLoopIndex
}

PUCCH-SpatialRelationInfoExt-r16 ::=
  pucch-SpatialRelationInfoId-v1610
  pucch-PathlossReferenceRS-Id-v1610
  ...
}

PUCCH-SRS ::=
  resource
  uplinkBWP
}

-- TAG-PUCCH-SPATIALRELATIONINFO-STOP
-- ASN1STOP
```

SEQUENCE {

PUCCH-SpatialRelationInfoId,

ServCellIndex

OPTIONAL, -- Need S

CHOICE {

SSB-Index,

NZP-CSI-RS-ResourceId,

PUCCH-SRS

PUCCH-PathlossReferenceRS-Id,

p0-PUCCH-Id,

ENUMERATED { i0, i1 }

SEQUENCE {

PUCCH-SpatialRelationInfoId-v1610

PUCCH-PathlossReferenceRS-Id-v1610

OPTIONAL, -- Need S

OPTIONAL, --Need R

SEQUENCE {

SRS-ResourceId,

BWP-Id

<i>PUCCH-SpatialRelationInfo</i> field descriptions
<i>pucch-PathLossReferenceRS-Id</i> When <i>pucch-PathLossReferenceRS-Id-v1610</i> is configured, the UE shall ignore <i>pucch-PathLossReferenceRS-Id</i> (without suffix).
<i>pucch-SpatialRelationInfoId</i> When <i>pucch-SpatialRelationInfoId-v1610</i> is configured, the UE shall ignore <i>pucch-SpatialRelationInfoId</i> (without suffix). If <i>pucch-SpatialRelationInfoId-v1610</i> is absent, the UE shall use the <i>pucch-SpatialRelationInfoId</i> (without suffix).
<i>servingCellId</i> If the field is absent, the UE applies the <i>ServCellId</i> of the serving cell in which this <i>PUCCH-SpatialRelationInfo</i> is configured

– *PUCCH-SpatialRelationInfo-Id*

The IE *PUCCH-SpatialRelationInfo-Id* is used to identify a *PUCCH-SpatialRelationInfo*

PUCCH-SpatialRelationInfo-Id information element

```
-- ASN1START
-- TAG-PUCCH-SPATIALRELATIONINFO-START

PUCCH-SpatialRelationInfoId ::=          INTEGER (1..maxNrofSpatialRelationInfos)

PUCCH-SpatialRelationInfoId-r16 ::=      INTEGER (1..maxNrofSpatialRelationInfos-r16)

PUCCH-SpatialRelationInfoId-v1610 ::=    INTEGER (maxNrofSpatialRelationInfos-plus-1..maxNrofSpatialRelationInfos-r16)

-- TAG-PUCCH-SPATIALRELATIONINFO-STOP
-- ASN1STOP
```

– *PUCCH-TPC-CommandConfig*

The IE *PUCCH-TPC-CommandConfig* is used to configure the UE for extracting TPC commands for PUCCH from a group-TPC messages on DCI.

PUCCH-TPC-CommandConfig information element

```
-- ASN1START
-- TAG-PUCCH-TPC-COMMANDCONFIG-START

PUCCH-TPC-CommandConfig ::=
    SEQUENCE {
        tpc-IndexPCell                INTEGER (1..15)                OPTIONAL, -- Cond PDCCH-OfSpCell
        tpc-IndexPUCCH-SCell          INTEGER (1..15)                OPTIONAL, -- Cond PDCCH-ofSpCellOrPUCCH-SCell
        ...,
        [[
            tpc-IndexPUCCH-sSCell-r17    INTEGER (1..15)                OPTIONAL, -- Need R
            tpc-IndexPUCCH-sSCellSecondaryPUCCHgroup-r17    INTEGER (1..15)                OPTIONAL -- Cond twoPUCCHgroup
        ]]
    }

-- TAG-PUCCH-TPC-COMMANDCONFIG-STOP
-- ASN1STOP
```

PUCCH-TPC-CommandConfig field descriptions	
<i>tpc-IndexPCell</i>	An index determining the position of the first bit of TPC command (applicable to the SpCell) inside the DCI format 2-2 payload.
<i>tpc-IndexPUCCH-SCell</i>	An index determining the position of the first bit of TPC command (applicable to the PUCCH SCell) inside the DCI format 2-2 payload.
<i>tpc-IndexPUCCH-sSCell, tpc-IndexPUCCH-sSCellSecondaryPUCCHgroup</i>	An index determining the position of the first bit of TPC command (applicable to the alternative PUCCH cell for PUCCH cell switching) inside the DCI format 2-2 payload, for the primary PUCCH group and the secondary PUCCH group respectively.

Conditional Presence	Explanation
<i>PDCCH-OfSpCell</i>	The field is mandatory present if the <i>PUCCH-TPC-CommandConfig</i> is provided in the <i>PDCCH-Config</i> for the SpCell. Otherwise, the field is absent, Need R.
<i>PDCCH-ofSpCellOrPUCCH-SCell</i>	The field is mandatory present if the <i>PUCCH-TPC-CommandConfig</i> is provided in the <i>PDCCH-Config</i> for the PUCCH-SCell. The field is optionally present, need R, if the UE is configured with a PUCCH SCell in this cell group and if the <i>PUCCH-TPC-CommandConfig</i> is provided in the <i>PDCCH-Config</i> for the SpCell. Otherwise, the field is absent, Need R.
<i>twoPUCCHgroup</i>	This field is optionally present, Need R, if secondary PUCCH group is configured. It is absent otherwise.

– *PUSCH-Config*

The IE *PUSCH-Config* is used to configure the UE specific PUSCH parameters applicable to a particular BWP.

***PUSCH-Config* information element**

```
-- ASN1START
-- TAG-PUSCH-CONFIG-START
```

```
PUSCH-Config ::=
    dataScramblingIdentityPUSCH          SEQUENCE {
        txConfig                          INTEGER (0..1023)                OPTIONAL, -- Need S
        dmrs-UplinkForPUSCH-MappingTypeA ENUMERATED {codebook, nonCodebook}    OPTIONAL, -- Need S
        dmrs-UplinkForPUSCH-MappingTypeB SetupRelease { DMRS-UplinkConfig }    OPTIONAL, -- Need M
        pusch-PowerControl                SetupRelease { DMRS-UplinkConfig }    OPTIONAL, -- Need M
        frequencyHopping                   PUSCH-PowerControl                OPTIONAL, -- Need M
        frequencyHoppingOffsetLists        ENUMERATED {intraSlot, interSlot}    OPTIONAL, -- Need S
                                           SEQUENCE (SIZE (1..4)) OF INTEGER (1.. maxNrofPhysicalResourceBlocks-1)
                                           OPTIONAL, -- Need M
        resourceAllocation                 ENUMERATED { resourceAllocationType0, resourceAllocationType1, dynamicSwitch},
        pusch-TimeDomainAllocationList     SetupRelease { PUSCH-TimeDomainResourceAllocationList }    OPTIONAL, -- Need M
        pusch-AggregationFactor            ENUMERATED { n2, n4, n8 }            OPTIONAL, -- Need S
        mcs-Table                          ENUMERATED {qam256, qam64LowSE}        OPTIONAL, -- Need S
        mcs-TableTransformPrecoder         ENUMERATED {qam256, qam64LowSE}        OPTIONAL, -- Need S
        transformPrecoder                  ENUMERATED {enabled, disabled}         OPTIONAL, -- Need S
        codebookSubset                     ENUMERATED {fullyAndPartialAndNonCoherent, partialAndNonCoherent, nonCoherent}
                                           OPTIONAL, -- Cond codebookBased
        maxRank                            INTEGER (1..4)                      OPTIONAL, -- Cond codebookBased
        rbg-Size                           ENUMERATED { config2}                OPTIONAL, -- Need S
        uci-OnPUSCH                        SetupRelease { UCI-OnPUSCH}           OPTIONAL, -- Need M
```

```

tp-pi2BPSK          ENUMERATED {enabled}          OPTIONAL, -- Need S
...,
[[
minimumSchedulingOffsetK2-r16      SetupRelease { MinSchedulingOffsetK2-Values-r16 }    OPTIONAL, -- Need M
ul-AccessConfigListDCI-0-1-r16     SetupRelease { UL-AccessConfigListDCI-0-1-r16 }    OPTIONAL, -- Need M
-- Start of the parameters for DCI format 0_2 introduced in V16.1.0
harq-ProcessNumberSizeDCI-0-2-r16  INTEGER (0..4)                                OPTIONAL, -- Need R
dmrs-SequenceInitializationDCI-0-2-r16  ENUMERATED {enabled}                        OPTIONAL, -- Need S
numberOfBitsForRV-DCI-0-2-r16        INTEGER (0..2)                                OPTIONAL, -- Need R
antennaPortsFieldPresenceDCI-0-2-r16  ENUMERATED {enabled}                        OPTIONAL, -- Need S
dmrs-UplinkForPUSCH-MappingTypeA-DCI-0-2-r16  SetupRelease { DMRS-UplinkConfig }    OPTIONAL, -- Need M
dmrs-UplinkForPUSCH-MappingTypeB-DCI-0-2-r16  SetupRelease { DMRS-UplinkConfig }    OPTIONAL, -- Need M
frequencyHoppingDCI-0-2-r16          CHOICE {
    pusch-RepTypeA          ENUMERATED {intraSlot, interSlot},
    pusch-RepTypeB          ENUMERATED {interRepetition, interSlot}
}
frequencyHoppingOffsetListsDCI-0-2-r16 SetupRelease { FrequencyHoppingOffsetListsDCI-0-2-r16 }    OPTIONAL, -- Need S
codebookSubsetDCI-0-2-r16            ENUMERATED {fullyAndPartialAndNonCoherent, partialAndNonCoherent, nonCoherent}    OPTIONAL, -- Need M
invalidSymbolPatternIndicatorDCI-0-2-r16  ENUMERATED {enabled}                        OPTIONAL, -- Cond codebookBased
maxRankDCI-0-2-r16                   INTEGER (1..4)                                OPTIONAL, -- Cond codebookBased
mcs-TableDCI-0-2-r16                 ENUMERATED {qam256, qam64LowSE}                OPTIONAL, -- Need S
mcs-TableTransformPrecoderDCI-0-2-r16  ENUMERATED {qam256, qam64LowSE}                OPTIONAL, -- Need S
priorityIndicatorDCI-0-2-r16          ENUMERATED {enabled}                        OPTIONAL, -- Need S
pusch-RepTypeIndicatorDCI-0-2-r16      ENUMERATED { pusch-RepTypeA, pusch-RepTypeB }    OPTIONAL, -- Need R
resourceAllocationDCI-0-2-r16         ENUMERATED { resourceAllocationType0, resourceAllocationType1, dynamicSwitch }    OPTIONAL, -- Need M
resourceAllocationType1GranularityDCI-0-2-r16  ENUMERATED { n2,n4,n8,n16 }                OPTIONAL, -- Need S
uci-OnPUSCH-ListDCI-0-2-r16          SetupRelease { UCI-OnPUSCH-ListDCI-0-2-r16 }    OPTIONAL, -- Need M
pusch-TimeDomainAllocationListDCI-0-2-r16 SetupRelease { PUSCH-TimeDomainResourceAllocationList-r16 }    OPTIONAL, -- Need M
-- End of the parameters for DCI format 0_2 introduced in V16.1.0
-- Start of the parameters for DCI format 0_1 introduced in V16.1.0
pusch-TimeDomainAllocationListDCI-0-1-r16 SetupRelease { PUSCH-TimeDomainResourceAllocationList-r16 }    OPTIONAL, -- Need M
invalidSymbolPatternIndicatorDCI-0-1-r16  ENUMERATED {enabled}                        OPTIONAL, -- Need S
priorityIndicatorDCI-0-1-r16             ENUMERATED {enabled}                        OPTIONAL, -- Need S
pusch-RepTypeIndicatorDCI-0-1-r16        ENUMERATED { pusch-RepTypeA, pusch-RepTypeB }    OPTIONAL, -- Need R
frequencyHoppingDCI-0-1-r16             ENUMERATED {interRepetition, interSlot}        OPTIONAL, -- Cond RepTypeB
uci-OnPUSCH-ListDCI-0-1-r16            SetupRelease { UCI-OnPUSCH-ListDCI-0-1-r16 }    OPTIONAL, -- Need M
-- End of the parameters for DCI format 0_1 introduced in V16.1.0
invalidSymbolPattern-r16                InvalidSymbolPattern-r16                    OPTIONAL, -- Need S
pusch-PowerControl-v1610                SetupRelease {PUSCH-PowerControl-v1610}        OPTIONAL, -- Need M
ul-FullPowerTransmission-r16            ENUMERATED {fullpower, fullpowerMode1, fullpowerMode2}    OPTIONAL, -- Need R
pusch-TimeDomainAllocationListForMultiPUSCH-r16 SetupRelease { PUSCH-TimeDomainResourceAllocationList-r16 }    OPTIONAL, -- Need M
numberOfInvalidSymbolsForDL-UL-Switching-r16  INTEGER (1..4)                                OPTIONAL, -- Cond RepTypeB2
]],
[[
ul-AccessConfigListDCI-0-2-r17          SetupRelease { UL-AccessConfigListDCI-0-2-r17 }    OPTIONAL, -- Need M
betaOffsetsCrossPri0-r17                SetupRelease { BetaOffsetsCrossPriSel-r17 }    OPTIONAL, -- Need M
betaOffsetsCrossPri1-r17                SetupRelease { BetaOffsetsCrossPriSel-r17 }    OPTIONAL, -- Need M
betaOffsetsCrossPri0DCI-0-2-r17         SetupRelease { BetaOffsetsCrossPriSelDCI-0-2-r17 }    OPTIONAL, -- Need M
betaOffsetsCrossPri1DCI-0-2-r17         SetupRelease { BetaOffsetsCrossPriSelDCI-0-2-r17 }    OPTIONAL, -- Need M

```

```

mappingPattern-r17          ENUMERATED {cyclicMapping, sequentialMapping}          OPTIONAL, -- Cond SRSsets
secondTPCFieldDCI-0-1-r17   ENUMERATED {enabled}                                OPTIONAL, -- Need R
secondTPCFieldDCI-0-2-r17   ENUMERATED {enabled}                                OPTIONAL, -- Need R
sequenceOffsetForRV-r17     INTEGER (0..3)                                       OPTIONAL, -- Need R
ul-AccessConfigListDCI-0-1-r17 SetupRelease { UL-AccessConfigListDCI-0-1-r17 }    OPTIONAL, -- Need M
minimumSchedulingOffsetK2-r17 SetupRelease { MinSchedulingOffsetK2-Values-r17 }    OPTIONAL, -- Need M
availableSlotCounting-r17   ENUMERATED { enabled }                             OPTIONAL, -- Need S
dmrs-BundlingPUSCH-Config-r17 SetupRelease { DMRS-BundlingPUSCH-Config-r17 }    OPTIONAL, -- Need M
harq-ProcessNumberSizeDCI-0-2-v1700 INTEGER (5)                             OPTIONAL, -- Need R
harq-ProcessNumberSizeDCI-0-1-r17 INTEGER (5)                             OPTIONAL, -- Need R
mpe-ResourcePoolToAddModList-r17 SEQUENCE (SIZE(1..maxMPE-Resources-r17)) OF MPE-Resource-r17 OPTIONAL, -- Need N
mpe-ResourcePoolToReleaseList-r17 SEQUENCE (SIZE(1..maxMPE-Resources-r17)) OF MPE-ResourceId-r17 OPTIONAL, -- Need N
]],
[[
maxRank-v1810              INTEGER (5..8)                                       OPTIONAL, -- Need R
sTx-2Panel-r18             ENUMERATED {enabled}                                OPTIONAL, -- Need R
multipanelSchemeSDM-r18    SDM-Scheme-r18                                       OPTIONAL, -- Need R
multipanelSchemeSFN-r18    SFN-Scheme-r18                                       OPTIONAL, -- Need R
codebookTypeUL-r18        SetupRelease { CodebookTypeUL-r18 }                  OPTIONAL, -- Need M
applyIndicatedTCI-State-r18 ENUMERATED {first, second}                         OPTIONAL, -- Need R
dynamicTransformPrecoderFieldPresenceDCI-0-1-r18 ENUMERATED {enabled}            OPTIONAL, -- Need R
dynamicTransformPrecoderFieldPresenceDCI-0-2-r18 ENUMERATED {enabled}            OPTIONAL, -- Need R
pusch-ConfigDCI-0-3-r18    SetupRelease { PUSCH-ConfigDCI-0-3-r18 }             OPTIONAL, -- Need M
]]
}

UCI-OnPUSCH ::=
  betaOffsets
    dynamic
    semiStatic
  }
  scaling
    ENUMERATED { f0p5, f0p65, f0p8, f1 }
  }

MinSchedulingOffsetK2-Values-r16 ::= SEQUENCE (SIZE (1..maxNrOfMinSchedulingOffsetValues-r16)) OF INTEGER (0..maxK2-SchedulingOffset-r16)
MinSchedulingOffsetK2-Values-r17 ::= SEQUENCE (SIZE (1..maxNrOfMinSchedulingOffsetValues-r16)) OF INTEGER (0..maxK2-SchedulingOffset-r17)

UCI-OnPUSCH-DCI-0-2-r16 ::=
  betaOffsetsDCI-0-2-r16
    dynamicDCI-0-2-r16
      CHOICE {
        CHOICE {
          oneBit-r16          SEQUENCE (SIZE (2)) OF BetaOffsets,
          twoBits-r16         SEQUENCE (SIZE (4)) OF BetaOffsets
        }
      },
  semiStaticDCI-0-2-r16 BetaOffsets
  }
  scalingDCI-0-2-r16    ENUMERATED { f0p5, f0p65, f0p8, f1 }
  }

FrequencyHoppingOffsetListsDCI-0-2-r16 ::= SEQUENCE (SIZE (1..4)) OF INTEGER (1.. maxNrofPhysicalResourceBlocks-1)

UCI-OnPUSCH-ListDCI-0-2-r16 ::= SEQUENCE (SIZE (1..2)) OF UCI-OnPUSCH-DCI-0-2-r16
UCI-OnPUSCH-ListDCI-0-1-r16 ::= SEQUENCE (SIZE (1..2)) OF UCI-OnPUSCH

```



```

UL-AccessConfigListDCI-0-1-r16 ::= SEQUENCE (SIZE (1..64)) OF INTEGER (0..63)

UL-AccessConfigListDCI-0-1-r17 ::= SEQUENCE (SIZE (1..3)) OF INTEGER (0..2)

UL-AccessConfigListDCI-0-2-r17 ::= SEQUENCE (SIZE (1..64)) OF INTEGER (0..63)

BetaOffsetsCrossPriSel-r17 ::= CHOICE {
    dynamic-r17          SEQUENCE (SIZE (4)) OF BetaOffsetsCrossPri-r17,
    semiStatic-r17       BetaOffsetsCrossPri-r17
}

BetaOffsetsCrossPriSelDCI-0-2-r17 ::= CHOICE {
    dynamicDCI-0-2-r17   CHOICE {
        oneBit-r17       SEQUENCE (SIZE (2)) OF BetaOffsetsCrossPri-r17,
        twoBits-r17      SEQUENCE (SIZE (4)) OF BetaOffsetsCrossPri-r17
    },
    semiStaticDCI-0-2-r17 BetaOffsetsCrossPri-r17
}

MPE-Resource-r17 ::= SEQUENCE {
    mpe-ResourceId-r17    MPE-ResourceId-r17,
    cell-r17              ServCellIndex
    additionalPCI-r17     AdditionalPCIIndex-r17
    mpe-ReferenceSignal-r17 CHOICE {
        csi-RS-Resource-r17    NZP-CSI-RS-ResourceId,
        ssb-Resource-r17       SSB-Index
    }
}

MPE-ResourceId-r17 ::= INTEGER (1..maxMPE-Resources-r17)

SDM-Scheme-r18 ::= SEQUENCE {
    maxRankSDM-r18          INTEGER (1..2)
    maxRankSDM-DCI-0-2-r18  INTEGER (1..2)
}

SFN-Scheme-r18 ::= SEQUENCE {
    maxRankSFN-r18          INTEGER (1..2)
    maxRankSFN-DCI-0-2-r18  INTEGER (1..2)
}

CodebookTypeUL-r18 ::= CHOICE {
    codebook1-r18          ENUMERATED {ng1n4n1, ng1n2n2},
    codebook2-r18          ENUMERATED {ng2},
    codebook3-r18          ENUMERATED {ng4},
    codebook4-r18          ENUMERATED {ng8}
}

PUSCH-ConfigDCI-0-3-r18 ::= SEQUENCE {
    resourceAllocationDCI-0-3-r18
    resourceAllocationType0, resourceAllocationType1, dynamicSwitch
}
OPTIONAL, -- Need M

```

rbg-SizeDCI-0-3-r18

resourceAllocationType1GranularityDCI-0-3-r18

numberOfBitsForRV-DCI-0-3-r18

harq-ProcessNumberSizeDCI-0-3-r18

uci-OnPUSCH-ListDCI-0-3-r18

ENUMERATED {config2, config3}

ENUMERATED {n2,n4,n8,n16}

INTEGER (0..2)

INTEGER (0..5)

SetupRelease { UCI-OnPUSCH-ListDCI-0-1-r16 }

}

-- TAG-PUSCH-CONFIG-STOP

-- ASN1STOP

OPTIONAL, -- Need S

OPTIONAL, -- Need S

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL -- Need M

<i>PUSCH-Config</i> field descriptions
<i>antennaPortsFieldPresenceDCI-0-2</i> Configure the presence of "Antenna ports" field in DCI format 0_2. When the field is configured, then the "Antenna ports" field is present in DCI format 0_2. Otherwise, the field size is set to 0 for DCI format 0_2 (See TS 38.212 [17], clause 7.3.1.1.3). If neither <i>dmrs-UplinkForPUSCH-MappingTypeA-DCI-0-2</i> nor <i>dmrs-UplinkForPUSCH-MappingTypeB-DCI-0-2</i> is configured, this field is absent.
<i>applyIndicatedTCI-State</i> This field indicates, for a PUSCH transmission, if UE applies the first or the second "indicated" UL only TCI or joint TCI as specified in TS 38.214 [19], clause 6.1.
<i>availableSlotCounting</i> Indicate whether PUSCH repetitions counted on the basis of available slots is enabled. If the field is absent, PUSCH repetitions counted on the basis of available slots is disabled.
<i>betaOffsetsCrossPrio0</i>, <i>betaOffsetsCrossPrio1</i>, <i>betaOffsetsCrossPrio0DCI-0-2</i>, <i>betaOffsetsCrossPrio1DCI-0-2</i> Selection between and configuration of dynamic and semi-static beta-offset for multiplexing HARQ-ACK on dynamically scheduled PUSCH with different priorities, see TS 38.213 [13], clause 9.3. The field <i>betaOffsetsCrossPrio0</i> indicates multiplexing low priority (LP) HARQ-ACK on dynamically scheduled high priority (HP) PUSCH. The field <i>betaOffsetsCrossPrio1</i> indicates multiplexing HP HARQ-ACK on dynamically scheduled LP PUSCH. The field <i>betaOffsetsCrossPrio0DCI-0-2</i> indicates multiplexing LP HARQ-ACK on dynamically scheduled HP PUSCH by DCI format 0_2. The field <i>betaOffsetsCrossPrio1DCI-0-2</i> indicates multiplexing HP HARQ-ACK on dynamically scheduled LP PUSCH by DCI format 0_2.
<i>codebookSubset</i>, <i>codebookSubsetDCI-0-2</i> Subset of PMIs addressed by TPMI, where PMIs are those supported by UEs with maximum coherence capabilities (see TS 38.214 [19], clause 6.1.1.1). The field <i>codebookSubset</i> applies to DCI formats 0_1 and 0_3, and the field <i>codebookSubsetDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 6.1.1.1).
<i>codebookTypeUL</i> Configures a codebook and the corresponding number of antenna port groups for codebook-based transmission of PUSCH with 8 antenna ports, see TS 38.211 [16], tables 6.3.1.5-9 to 6.3.1.5-47, and table 6.3.1.5-8 respectively). The values <i>ng1n4n1</i> and <i>ng1n2n2</i> correspond to codebooks with one antenna port group ($N_g=1$), while <i>ng2</i> , <i>ng4</i> , and <i>ng8</i> correspond to codebooks with $N_g=2$, 4, and 8 antenna port groups, respectively.
<i>dataScramblingIdentityPUSCH</i> Identifier used to initialise data scrambling (<i>c_init</i>) for PUSCH. If the field is absent, the UE applies the physical cell ID. (see TS 38.211 [16], clause 6.3.1.1).
<i>dmrs-BundlingPUSCH-Config</i> Configure the parameters for DMRS bundling for PUSCH (see TS 38.214 [19], clause 6.1.7). In this release, this is not applicable to FR2-2.
<i>dmrs-SequenceInitializationDCI-0-2</i> Configure whether the field "DMRS Sequence Initialization" is present or not in DCI format 0_2. If the field is absent, then 0 bit for the field "DMRS Sequence Initialization" in DCI format 0_2. If the field is present, then the number of bits is determined in the same way as DCI format 0_1 (see TS 38.212 [17], clause 7.3.1).
<i>dmrs-UplinkForPUSCH-MappingTypeA</i>, <i>dmrs-UplinkForPUSCH-MappingTypeA-DCI-0-2</i> DMRS configuration for PUSCH transmissions using PUSCH mapping type A (chosen dynamically via <i>PUSCH-TimeDomainResourceAllocation</i>). Only the fields <i>dmrs-Type</i> , <i>dmrs-AdditionalPosition</i> and <i>maxLength</i> may be set differently for mapping type A and B. The field <i>dmrs-UplinkForPUSCH-MappingTypeA</i> applies to DCI formats 0_1 and 0_3, and the field <i>dmrs-UplinkForPUSCH-MappingTypeA-DCI-0-2</i> applies to DCI format 0_2 (see TS 38.212 [17], clause 7.3.1).
<i>dmrs-UplinkForPUSCH-MappingTypeB</i>, <i>dmrs-UplinkForPUSCH-MappingTypeB-DCI-0-2</i> DMRS configuration for PUSCH transmissions using PUSCH mapping type B (chosen dynamically via <i>PUSCH-TimeDomainResourceAllocation</i>). Only the fields <i>dmrs-Type</i> , <i>dmrs-AdditionalPosition</i> and <i>maxLength</i> may be set differently for mapping type A and B. The field <i>dmrs-UplinkForPUSCH-MappingTypeB</i> applies to DCI formats 0_1 and 0_3, and the field <i>dmrs-UplinkForPUSCH-MappingTypeB-DCI-0-2</i> applies to DCI format 0_2 (see TS 38.212 [17], clause 7.3.1).
<i>dynamicTransformPrecoderFieldPresenceDCI-0-1</i> Configure the presence of "Dynamic Transform Precoder" field in DCI format 0_1. When the field is configured, then the "Dynamic Transform Precoder" field is present in DCI format 0_1. Otherwise, the field size is set to 0 for DCI format 0_1 (See TS 38.212 [17]). The network ensures <i>dynamicTransformPrecoderFieldPresenceDCI-0-1-r18</i> and <i>twoPHRMode-r17</i> cannot be configured at the same time for a UE.
<i>dynamicTransformPrecoderFieldPresenceDCI-0-2</i> Configure the presence of "Dynamic Transform Precoder" field in DCI format 0_2. When the field is configured, then the "Dynamic Transform Precoder" field is present in DCI format 0_2. Otherwise, the field size is set to 0 for DCI format 0_2 (See TS 38.212 [17]). The network ensures <i>dynamicTransformPrecoderFieldPresenceDCI-0-2-r18</i> and <i>twoPHRMode-r17</i> cannot be configured at the same time for a UE.

frequencyHopping The value <i>intraSlot</i> enables 'Intra-slot frequency hopping' and the value <i>interSlot</i> enables 'Inter-slot frequency hopping'. If the field is absent, frequency hopping is not configured for 'pusch-RepTypeA' (see TS 38.214 [19], clause 6.3). The field <i>frequencyHopping</i> applies to DCI formats 0_0, 0_1 and 0_3 for 'pusch-RepTypeA'.
frequencyHoppingDCI-0-1 Indicates the frequency hopping scheme for DCI format 0_1 when <i>pusch-RepTypeIndicatorDCI-0-1</i> is set to 'pusch-RepTypeB'. The value <i>interRepetition</i> enables 'Inter-repetition frequency hopping', and the value <i>interSlot</i> enables 'Inter-slot frequency hopping'. If the field is absent, frequency hopping is not configured for DCI format 0_1 for 'pusch-RepTypeB' (see TS 38.214 [19], clause 6.1).
frequencyHoppingDCI-0-2 Indicate the frequency hopping scheme for DCI format 0_2. The value <i>intraSlot</i> enables 'intra-slot frequency hopping', and the value <i>interRepetition</i> enables 'Inter-repetition frequency hopping', and the value <i>interSlot</i> enables 'Inter-slot frequency hopping'. When <i>pusch-RepTypeIndicatorDCI-0-2</i> is not set to 'pusch-RepTypeB', the frequency hopping scheme can be chosen between 'intra-slot frequency hopping' and 'inter-slot frequency hopping' if enabled. When <i>pusch-RepTypeIndicatorDCI-0-2</i> is set to 'pusch-RepTypeB', the frequency hopping scheme can be chosen between 'inter-repetition frequency hopping' and 'inter-slot frequency hopping' if enabled. If the field is absent, frequency hopping is not configured for DCI format 0_2 (see TS 38.214 [19], clause 6.3).
frequencyHoppingOffsetLists, frequencyHoppingOffsetListsDCI-0-2 Set of frequency hopping offsets used when frequency hopping is enabled for granted transmission (not msg3) and type 2 configured grant activation (see TS 38.214 [19], clause 6.3). The field <i>frequencyHoppingOffsetLists</i> applies to DCI formats 0_0, 0_1 and 0_3, and the field <i>frequencyHoppingOffsetListsDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 6.3).
harq-ProcessNumberSizeDCI-0-2 Configure the number of bits for the field "HARQ process number" in DCI format 0_2 (see TS 38.212 [17], clause 7.3.1).
invalidSymbolPattern Indicates one pattern for invalid symbols for PUSCH transmission repetition type B applicable to both DCI format 0_1 and 0_2. If <i>InvalidSymbolPattern</i> is not configured, semi-static flexible symbols are used for PUSCH. Segmentation occurs only around semi-static DL symbols (see TS 38.214 [19] clause 6.1).
invalidSymbolPatternIndicatorDCI-0-1, invalidSymbolPatternIndicatorDCI-0-2 Indicates the presence of an additional bit in the DCI format 0_1/0_2. If <i>invalidSymbolPattern</i> is absent, then both <i>invalidSymbolPatternIndicatorDCI-0-1</i> and <i>invalidSymbolPatternIndicatorDCI-0-2</i> are absent. The field <i>invalidSymbolPatternIndicatorDCI-0-1</i> applies to the DCI format 0_1 and the field <i>invalidSymbolPatternIndicatorDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19] clause 6.1). If the field is absent, the UE behaviour is specified in TS 38.214 [19], clause 6.1.2.1.
mappingPattern Indicates whether the UE should follow Cyclical mapping pattern or Sequential mapping pattern for when two SRS resource sets are configured in <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook' for PUSCH transmission and the PUSCH transmission occasions are associated with both SRS resource sets.
maxRank, maxRankDCI-0-2 Subset of PMIs addressed by TRIs from 1 to ULmaxRank (see TS 38.214 [19], clause 6.1.1.1). The field <i>maxRank</i> applies to DCI formats 0_1 and 0_3, and the field <i>maxRankDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 6.1.1.1). If network configures <i>maxRank-v1810</i> UE ignores <i>maxRank</i> (without suffix).
mcs-Table, mcs-TableFormat0-2 Indicates which MCS table the UE shall use for PUSCH without transform precoder (see TS 38.214 [19], clause 6.1.4.1). If the field is absent the UE applies the value 64QAM. The field <i>mcs-Table</i> applies to DCI formats 0_0, 0_1 and 0_3, and the field <i>mcs-TableDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 6.1.4.1).
mcs-TableTransformPrecoder, mcs-TableTransformPrecoderDCI-0-2 Indicates which MCS table the UE shall use for PUSCH with transform precoding (see TS 38.214 [19], clause 6.1.4.1). If the field is absent the UE applies the value 64QAM. The field <i>mcs-TableTransformPrecoder</i> applies to DCI formats 0_0, 0_1 and 0_3, and the field <i>mcs-TableTransformPrecoderDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 6.1.4.1).
minimumSchedulingOffsetK2 List of minimum K2 values. Minimum K2 parameter denotes minimum applicable value(s) for the <i>Time domain resource assignment</i> table for PUSCH (see TS 38.214 [19], clause 6.1.2.1).

mpe-ResourcePoolToAddModList
List of SSB/CSI-RS resources for P-MPR reporting. Each resource is configured with serving cell index where the resource is configured for the UE. The <i>additionalPCI</i> is configured only if the resource is SSB. For each resource, if neither <i>cell</i> nor <i>additionalPCI</i> is present, the SSB/CSI-RS resource is from the serving cell where the <i>PUSCH-Config</i> is configured.
multipanelSchemeSDM
Configures UE with a multiple panel simultaneous uplink transmission SDM scheme for PUSCH, as specified in TS 38.214 [19], clause 6.1. Network does not configure <i>multipanelSchemeSDM</i> with <i>multipanelSchemeSFN</i> . When this parameter is configured, two SRS resource sets with <i>usage</i> for <i>codebook</i> or <i>noncodebook</i> are configured in <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> .
multipanelSchemeSFN
Configures UE with a multiple panel simultaneous uplink transmission SFN scheme for PUSCH, as specified in TS 38.214 [19], clause 6.1. Network does not configure <i>multipanelSchemeSFN</i> with <i>multipanelSchemeSDM</i> . When this parameter is configured, two SRS resource sets with <i>usage</i> for <i>codebook</i> or <i>noncodebook</i> are configured in <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> .
numberOfBitsForRV-DCI-0-2
Configures the number of bits for "Redundancy version" in the DCI format 0_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.214 [19], clause 6.1.2.1).
numberOfInvalidSymbolsForDL-UL-Switching
Indicates the number of symbols after the last semi-static DL symbol that are invalid symbols for PUSCH repetition Type B. If it is absent, no symbol is explicitly defined for DL-to-UL switching (see TS 38.214 [19], clause 6.1).
priorityIndicatorDCI-0-1, priorityIndicatorDCI-0-2
Configures the presence of "priority indicator" in DCI format 0_1/0_2. When the field is absent in the IE, then the UE shall apply 0 bit for "Priority indicator" in DCI format 0_1/0_2. The field <i>priorityIndicatorDCI-0-1</i> applies to DCI format 0_1 and the field <i>priorityIndicatorDCI-0-2</i> applies to DCI format 0_2 (see TS 38.212 [17] clause 7.3.1 and TS 38.213 [13] clause 9).
pusch-AggregationFactor
Number of repetitions for data (see TS 38.214 [19], clause 6.1.2.1). If the field is absent the UE applies the value 1.
pusch-PowerControl
Configures power control parameters PUSCH transmission.
pusch-RepTypeIndicatorDCI-0-1, pusch-RepTypeIndicatorDCI-0-2
Indicates whether UE follows the behavior for "PUSCH repetition type A" or the behavior for "PUSCH repetition type B" for the PUSCH scheduled by DCI format 0_1/0_2 and for Type 2 CG associated with the activating DCI format 0_1/0_2. The value <i>pusch-RepTypeA</i> enables the 'PUSCH repetition type A' and the value <i>pusch-RepTypeB</i> enables the 'PUSCH repetition type B'. The field <i>pusch-RepTypeIndicatorDCI-0-1</i> applies to DCI format 0_1 and the field <i>pusch-RepTypeIndicatorDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 6.1.2.1).
pusch-TimeDomainAllocationList
List of time domain allocations for timing of UL assignment to UL data (see TS 38.214 [19], table 6.1.2.1.1-1). The field <i>pusch-TimeDomainAllocationList</i> applies to DCI format 0_0, or DCI formats 0_1 and 0_3 when the field <i>pusch-TimeDomainAllocationListDCI-0-1</i> is not configured (see TS 38.214 [19], table 6.1.2.1.1-1 and tables 6.1.2.1.1-1A and 6.1.2.1.1-1C). The network does not configure the <i>pusch-TimeDomainAllocationList</i> (without suffix) simultaneously with the <i>pusch-TimeDomainAllocationListDCI-0-2-r16</i> or <i>pusch-TimeDomainAllocationListDCI-0-1-r16</i> or <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i> .
pusch-TimeDomainAllocationListDCI-0-1
Configuration of the time domain resource allocation (TDRA) table for DCI formats 0_1 and 0_3 (see TS 38.214 [19], clause 6.1, tables 6.1.2.1.1-1A and 6.1.2.1.1-1C).
pusch-TimeDomainAllocationListDCI-0-2
Configuration of the time domain resource allocation (TDRA) table for DCI format 0_2 (see TS 38.214 [19], clause 6.1.2, table 6.1.2.1.1-1B).
pusch-TimeDomainAllocationListForMultiPUSCH
Configuration of the time domain resource allocation (TDRA) table for multiple PUSCH (see TS 38.214 [19], clause 6.1.2). The network configures at most 64 rows in this TDRA table in <i>PUSCH-TimeDomainResourceAllocationList-r16</i> configured by this field. This field is not configured simultaneously with <i>pusch-AggregationFactor</i> if <i>extendedK2</i> is not configured. The network does not configure the <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i> simultaneously with the <i>pusch-TimeDomainAllocationListDCI-0-1-r16</i> . The network does not configure the <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i> simultaneously with the <i>numberOfSlotsTBoMS-r17</i> .
rbg-Size
Selection between configuration 1 and configuration 2 for RBG size for PUSCH except PUSCH scheduled by DCI format 0_3. The UE does not apply this field if <i>resourceAllocation</i> is set to <i>resourceAllocationType1</i> . Otherwise, the UE applies the value <i>config1</i> when the field is absent (see TS 38.214 [19], clause 6.1.2.2.1).

resourceAllocation, resourceAllocationDCI-0-2
Configuration of resource allocation type 0 and resource allocation type 1 for non-fallback DCI (see TS 38.214 [19], clause 6.1.2). The field <i>resourceAllocation</i> applies to DCI format 0_1 and the field <i>resourceAllocationDCI-0-2</i> applies to DCI format 0_2 (see TS 38.214 [19], clause 6.1.2).
resourceAllocationType1GranularityDCI-0-2
Configures the scheduling granularity applicable for both the starting point and length indication for resource allocation type 1 in DCI format 0_2. If this field is absent, the granularity is 1 PRB (see TS 38.214 [19], clause 6.1.2.2.2).
secondTPCFieldDCI-0-1, secondTPCFieldDCI-0-2
A second TPC field can be configured via RRC for DCI-0-1 and DCI-0-2. Each TPC field is for each closed-loop index value respectively (i.e., 1st /2nd TPC fields correspond to "closedLoopIndex" value = 0 and 1,
sequenceOffsetForRV
Configures the RV offset for the starting RV for the first repetition (first actual repetition in PUSCH repetition Type B) towards the second 'SRS resource set' for PUSCH configured in either <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook'.
sTx-2Panel
Parameter to enable PUSCH+PUSCH multiple panel simultaneous uplink transmission, as specified in TS 38.214 [19], clause 6.1.
tp-pi2BPSK
Enables pi/2-BPSK modulation with transform precoding if the field is present and disables it otherwise.
transformPrecoder
The UE specific selection of transformer precoder for PUSCH (see TS 38.214 [19], clause 6.1.3). When the field is absent the UE applies the value of the field <i>msg3-transformPrecoder</i> from <i>rach-ConfigCommon</i> included directly within BWP configuration (i.e., not included in <i>additionalRACH-ConfigList</i>).
txConfig
Whether UE uses codebook based or non-codebook based transmission (see TS 38.214 [19], clause 6.1.1). If the field is absent, the UE transmits PUSCH on one antenna port, see TS 38.214 [19], clause 6.1.1.
uci-OnPUSCH-ListDCI-0-1, uci-OnPUSCH-ListDCI-0-2
Configuration for up to 2 HARQ-ACK codebooks specific to DCI format 0_1/0_2. The field <i>uci-OnPUSCH-ListDCI-0-1</i> applies to DCI format 0_1 and the field <i>uci-OnPUSCH-ListDCI-0-2</i> applies to DCI format 0_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13] clause 9.3).
ul-AccessConfigListDCI-0-1, ul-AccessConfigListDCI-0-2
List of the combinations of cyclic prefix extension, channel access priority class (CAPC), and UL channel access type (see TS 38.212 [17], clause 7.3.1) applicable for DCI format 0_1 and DCI format 0_2, respectively. The fields <i>ul-AccessConfigListDCI-0-1-r16</i> and <i>ul-AccessConfigListDCI-0-2-r17</i> are only applicable for FR1 (see TS 38.212 [17], Table 7.3.1.1.2-35). The field <i>ul-AccessConfigListDCI-0-1-r17</i> only contains a list of UL channel access types and is only applicable for FR2-2 (see TS 38.212 [17], Table 7.3.1.1.2-35A).
ul-FullPowerTransmission
Configures the UE with UL full power transmission mode as specified in TS 38.213 [13]. This field is not configured if <i>ul-powerControl</i> is configured in the <i>BWP-UplinkDedicated</i> in which the <i>PUCCH-Config</i> is included.

PUSCH-ConfigDCI-0-3 field descriptions
harq-ProcessNumberSizeDCI-0-3 Configure the number of bits for the field "HARQ process number" in DCI format 0_3 (see TS 38.212 [17], clause 7.3.1).
numberOfBitsForRV-DCI-0-3 Configures the number of bits for "Redundancy version" in the DCI format 0_3 (see TS 38.212 [17], clause 7.3.1 and TS 38.214 [19], clause 6.1.2.1).
rbg-SizeDCI-0-3 Selection among configuration 1, configuration 2 and configuration 3 for RBG size for PUSCH scheduled by DCI format 0_3. The UE does not apply this field if <i>resourceAllocationDCI-0-3</i> is set to <i>resourceAllocationType1</i> . Otherwise, the UE applies the value <i>config1</i> when the field is absent (see TS 38.214 [19], clause 6.1.2.2.1).
resourceAllocationDCI-0-3 Configuration of resource allocation type 0 and resource allocation type 1 for DCI format 0_3 (see TS 38.214 [19], clause 6.1.2).
resourceAllocationType1GranularityDCI-0-3 Configures the scheduling granularity applicable for both the starting point and length indication for resource allocation type 1 in DCI format 0_3. If this field is absent, the granularity is 1 PRB (see TS 38.214 [19], clause 6.1.2.2.2).
uci-OnPUSCH-ListDCI-0-3 Configuration for up to 2 HARQ-ACK codebooks specific to DCI format 0_3 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13] clause 9.3).

SDM-Scheme field descriptions
maxRankSDM, maxRankSDM-DCI-0-2 configure maximal number of MIMO layers of each panel in SDM scheme for codebook based PUSCH or for DCI 0_2 for codebook based PUSCH.

SFN-Scheme field descriptions
maxRankSFN, maxRankSFN-DCI-0-2 configure maximal number of MIMO layers of each panel in SFN scheme for codebook based PUSCH or for DCI 0_2 for codebook based PUSCH.

UCI-OnPUSCH field descriptions
betaOffsets Selection between and configuration of dynamic and semi-static beta-offset for DCI formats other than DCI format 0_2. If the field is not configured, the UE applies the value 'semiStatic' (see TS 38.213 [13], clause 9.3).
scaling Indicates a scaling factor to limit the number of resource elements assigned to UCI on PUSCH for DCI formats other than DCI format 0_2. Value <i>f0p5</i> corresponds to 0.5, value <i>f0p65</i> corresponds to 0.65, and so on. The value configured herein is applicable for PUSCH with configured grant (see TS 38.212 [17], clause 6.3).

UCI-OnPUSCH-DCI-0-2 field descriptions
betaOffsetsDCI-0-2 Configuration of beta-offset for DCI format 0_2. If semiStaticDCI-0-2 is chosen, the UE shall apply the value of 0 bit for the field of beta offset indicator in DCI format 0_2. If dynamicDCI-0-2 is chosen, the UE shall apply the value of 1 bit or 2 bits for the field of beta offset indicator in DCI format 0_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13] clause 9.3).
dynamicDCI-0-2 Indicates the UE applies the value 'dynamic' for DCI format 0_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 9.3).
semiStaticDCI-0-2 Indicates the UE applies the value 'semiStatic' for DCI format 0_2. (see TS 38.212 [17], clause 7.3.1 and see TS 38.213 [13], clause 9.3).
scalingDCI-0-2 Indicates a scaling factor to limit the number of resource elements assigned to UCI on PUSCH for DCI format 0_2. Value f0p5 corresponds to 0.5, value f0p65 corresponds to 0.65, and so on (see TS 38.212 [17], clause 6.3).

Conditional Presence	Explanation
codebookBased	The field is mandatory present if txConfig is set to codebook and absent otherwise.
RepTypeB	The field is optionally present, Need S, if pusch-RepTypeIndicatorDCI-0-1 is set to pusch-RepTypeB. It is absent otherwise.
RepTypeB2	The field is optionally present, Need S, if pusch-RepTypeIndicatorDCI-0-1 or pusch-RepTypeIndicatorDCI-0-2 is set to pusch-RepTypeB. It is absent otherwise.
SRSsets	This field is mandatory present when UE is configured with two SRS sets in either srs-ResourceSetToAddModList or srs-ResourceSetToAddModListDCI-0-2 with usage codebook or non-codebook and none of multipanelSchemeSDM or multipanelSchemeSFN or sTx-2Panel is configured. It is absent otherwise.

– PUSCH-ConfigCommon

The IE *PUSCH-ConfigCommon* is used to configure the cell specific PUSCH parameters.

PUSCH-ConfigCommon information element

```

-- ASN1START
-- TAG-PUSCH-CONFIGCOMMON-START

PUSCH-ConfigCommon ::=
    groupHoppingEnabledTransformPrecoding
    pusch-TimeDomainAllocationList
    msg3-DeltaPreamble
    p0-NominalWithGrant
    ...
}

-- TAG-PUSCH-CONFIGCOMMON-STOP
-- ASN1STOP

```

SEQUENCE {

ENUMERATED {enabled}

PUSCH-TimeDomainResourceAllocationList

INTEGER (-1..6)

INTEGER (-202..24)

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

<i>PUSCH-ConfigCommon</i> field descriptions
groupHoppingEnabledTransformPrecoding For DMRS transmission with transform precoder, the NW may configure group hopping by this cell-specific parameter, see TS 38.211 [16], clause 6.4.1.1.1.2.
msg3-DeltaPreamble Power offset between msg3 and RACH preamble transmission. Actual value = field value * 2 [dB] (see TS 38.213 [13], clause 7.1)
p0-NominalWithGrant P0 value for PUSCH with grant (except msg3). Value in dBm. Only even values (step size 2) allowed (see TS 38.213 [13], clause 7.1) This field is cell specific
pusch-TimeDomainAllocationList List of time domain allocations for timing of UL assignment to UL data (see TS 38.214 [19], table 6.1.2.1.1-1).

– *PUSCH-PowerControl*

The IE *PUSCH-PowerControl* is used to configure UE specific power control parameter for PUSCH.

PUSCH-PowerControl information element

```
-- ASN1START
-- TAG-PUSCH-POWERCONTROL-START
```

```
PUSCH-PowerControl ::=
    tpc-Accumulation          ENUMERATED { disabled }                OPTIONAL, -- Need S
    msg3-Alpha               Alpha                                   OPTIONAL, -- Need S
    p0-NominalWithoutGrant   INTEGER (-202..24)                     OPTIONAL, -- Need M
    p0-AlphaSets             SEQUENCE (SIZE (1..maxNrofP0-PUSCH-AlphaSets)) OF P0-PUSCH-AlphaSet OPTIONAL, -- Need M
    pathlossReferenceRSToAddModList SEQUENCE (SIZE (1..maxNrofPUSCH-PathlossReferenceRSs)) OF PUSCH-PathlossReferenceRS OPTIONAL, -- Need N
    pathlossReferenceRSToReleaseList SEQUENCE (SIZE (1..maxNrofPUSCH-PathlossReferenceRSs)) OF PUSCH-PathlossReferenceRS-Id OPTIONAL, -- Need N
    twoPUSCH-PC-AdjustmentStates ENUMERATED {twoStates}            OPTIONAL, -- Need S
    deltaMCS                 ENUMERATED {enabled}                  OPTIONAL, -- Need S
    sri-PUSCH-MappingToAddModList SEQUENCE (SIZE (1..maxNrofSRI-PUSCH-Mappings)) OF SRI-PUSCH-PowerControl OPTIONAL, -- Need N
    sri-PUSCH-MappingToReleaseList SEQUENCE (SIZE (1..maxNrofSRI-PUSCH-Mappings)) OF SRI-PUSCH-PowerControlId OPTIONAL -- Need N
}

P0-PUSCH-AlphaSet ::=
    p0-PUSCH-AlphaSetId      P0-PUSCH-AlphaSetId,
    p0                        INTEGER (-16..15)                    OPTIONAL, -- Need S
    alpha                    Alpha                                  OPTIONAL -- Need S
}

P0-PUSCH-AlphaSetId ::=
    INTEGER (0..maxNrofP0-PUSCH-AlphaSets-1)

PUSCH-PathlossReferenceRS ::=
    pusch-PathlossReferenceRS-Id PUSCH-PathlossReferenceRS-Id,
    referenceSignal              CHOICE {
        ssb-Index                SSB-Index,
        csi-RS-Index              NZP-CSI-RS-ResourceId
    }
```

```

    }
  }

PUSCH-PathlossReferenceRS-r16 ::= SEQUENCE {
    pusch-PathlossReferenceRS-Id-r16 PUSCH-PathlossReferenceRS-Id-v1610,
    referenceSignal-r16 CHOICE {
        ssb-Index-r16 SSB-Index,
        csi-RS-Index-r16 NZP-CSI-RS-ResourceId
    }
}

DummyPathlossReferenceRS-v1710 ::= SEQUENCE {
    pusch-PathlossReferenceRS-Id-r17 PUSCH-PathlossReferenceRS-Id-r17,
    additionalPCI-r17 AdditionalPCIIndex-r17 OPTIONAL -- Need R
}

PUSCH-PathlossReferenceRS-Id ::= INTEGER (0..maxNrofPUSCH-PathlossReferenceRSs-1)

PUSCH-PathlossReferenceRS-Id-v1610 ::= INTEGER (maxNrofPUSCH-PathlossReferenceRSs..maxNrofPUSCH-PathlossReferenceRSs-1-r16)

PUSCH-PathlossReferenceRS-Id-r17 ::= INTEGER (0..maxNrofPUSCH-PathlossReferenceRSs-1-r16)

SRI-PUSCH-PowerControl ::= SEQUENCE {
    sri-PUSCH-PowerControlId SRI-PUSCH-PowerControlId,
    sri-PUSCH-PathlossReferenceRS-Id PUSCH-PathlossReferenceRS-Id,
    sri-P0-PUSCH-AlphaSetId P0-PUSCH-AlphaSetId,
    sri-PUSCH-ClosedLoopIndex ENUMERATED { i0, i1 }
}

SRI-PUSCH-PowerControlId ::= INTEGER (0..maxNrofSRI-PUSCH-Mappings-1)

PUSCH-PowerControl-v1610 ::= SEQUENCE {
    pathlossReferenceRSToAddModListSizeExt-v1610 SEQUENCE (SIZE (1..maxNrofPUSCH-PathlossReferenceRSsDiff-r16)) OF PUSCH-PathlossReferenceRS-r16
    pathlossReferenceRSToReleaseListSizeExt-v1610 SEQUENCE (SIZE (1..maxNrofPUSCH-PathlossReferenceRSsDiff-r16)) OF PUSCH-PathlossReferenceRS-Id-
v1610
    p0-PUSCH-SetList-r16 SEQUENCE (SIZE (1..maxNrofSRI-PUSCH-Mappings)) OF P0-PUSCH-Set-r16 OPTIONAL, -- Need N
    olpc-ParameterSet SEQUENCE {
        olpc-ParameterSetDCI-0-1-r16 INTEGER (1..2) OPTIONAL, -- Need R
        olpc-ParameterSetDCI-0-2-r16 INTEGER (1..2) OPTIONAL, -- Need R
    } OPTIONAL, -- Need M
    ...
    [[
        sri-PUSCH-MappingToAddModList2-r17 SEQUENCE (SIZE (1..maxNrofSRI-PUSCH-Mappings)) OF SRI-PUSCH-PowerControl
        sri-PUSCH-MappingToReleaseList2-r17 SEQUENCE (SIZE (1..maxNrofSRI-PUSCH-Mappings)) OF SRI-PUSCH-PowerControlId OPTIONAL, -- Need N
        p0-PUSCH-SetList2-r17 SEQUENCE (SIZE (1..maxNrofSRI-PUSCH-Mappings)) OF P0-PUSCH-Set-r16 OPTIONAL, -- Need R
        dummy SEQUENCE (SIZE (1..maxNrofPUSCH-PathlossReferenceRSs-r16)) OF DummyPathlossReferenceRS-v1710 OPTIONAL, -- Need N
    ]]
}

P0-PUSCH-Set-r16 ::= SEQUENCE {
    p0-PUSCH-SetId-r16 P0-PUSCH-SetId-r16,

```

```

    p0-List-r16                               SEQUENCE (SIZE (1..maxNrofP0-PUSCH-Set-r16)) OF P0-PUSCH-r16 OPTIONAL, -- Need R
    ...
}

P0-PUSCH-SetId-r16 ::=                       INTEGER (0..maxNrofSRI-PUSCH-Mappings-1)

P0-PUSCH-r16 ::=                             INTEGER (-16..15)

-- TAG-PUSCH-POWERCONTROL-STOP
-- ASN1STOP
```

P0-PUSCH-AlphaSet field descriptions
alpha alpha value for PUSCH with grant (except msg3) (see TS 38.213 [13], clause 7.1). When the field is absent the UE applies the value 1.
p0 P0 value for PUSCH with grant (except msg3) in steps of 1dB (see TS 38.213 [13], clause 7.1). When the field is absent the UE applies the value 0.

P0-PUSCH-Set field descriptions
p0-List Configuration of {p0-PUSCH, p0-PUSCH} sets for PUSCH. If SRI is present in the DCI, then one p0-PUSCH can be configured in P0-PUSCH-Set. If SRI is not present in the DCI, and both <i>olpc-ParameterSetDCI-0-1</i> and <i>olpc-ParameterSetDCI-0-2</i> are configured to be 1 bit, then one p0-PUSCH can be configured in P0-PUSCH-Set. If SRI is not present in the DCI, and if any of <i>olpc-ParameterSetDCI-0-1</i> and <i>olpc-ParameterSetDCI-0-2</i> is configured to be 2 bits, then two p0-PUSCH values can be configured in P0-PUSCH-Set (see TS 38.213 [13] clause 7 and TS 38.212 [17] clause 7.3.1).
p0-PUSCH-SetId Configure the index of a p0-PUSCH-Set (see TS 38.213 [13] clause 7 and TS 38.212 [17] clause 7.3.1).

PUSCH-PowerControl field descriptions
deltaMCS Indicates whether to apply delta MCS. When the field is absent, the UE applies $K_s = 0$ in delta_TFC formula for PUSCH (see TS 38.213 [13], clause 7.1).
dummy This field is not used in the specification. If received it shall be ignored by the UE.
msg3-Alpha Dedicated alpha value for msg3 PUSCH (see TS 38.213 [13], clause 7.1). When the field is absent the UE applies the value 1.
olpc-ParameterSetDCI-0-1, olpc-ParameterSetDCI-0-2 Configures the number of bits for Open-loop power control parameter set indication for DCI format 0_1/0_2 in case SRI is not configured in the DCI. 2 bits is applicable only if SRI is not present in the DCI format 0_1. The field <i>olpc-ParameterSetDCI-0-1</i> applies to DCI format 0_1 and the field <i>olpc-ParameterSetDCI-0-2</i> applies to DCI format 0_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 11).
p0-AlphaSets Configuration {p0-pusch, alpha} sets for PUSCH (except msg3 and msgA PUSCH), i.e., { {p0,alpha,index1}, {p0,alpha,index2},...} (see TS 38.213 [13], clause 7.1). When no set is configured, the UE uses the P0-nominal for msg3/msgA PUSCH, P0-UE is set to 0 and alpha is set according to either msg3-Alpha or msgA-Alpha (see TS 38.213 [13], clause 7.1). This field is not configured if <i>unifiedTCI-StateType</i> is configured for the serving cell.
p0-NominalWithoutGrant P0 value for UL grant-free/SPS based PUSCH. Value in dBm. Only even values (step size 2) allowed (see TS 38.213 [13], clause 7.1).
p0-PUSCH-SetList Configure one additional <i>P0-PUSCH-Set</i> per SRI. If present, the one bit or 2 bits in the DCI is used to dynamically indicate among the P0 value from the existing <i>P0-PUSCH-AlphaSet</i> and the P0 value(s) from the <i>P0-PUSCH-Set</i> (See TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 17).
p0-PUSCH-SetList2 For indicating per-TRP OLPC set in DCI format 0_1/0_2 with the open-loop power control parameter set indication field, a second <i>p0-PUSCH-SetList-r16</i> is used. When this field is present the <i>p0-PUSCH-SetList-r16</i> corresponds to the first SRS resource set (see TS 38.213 [13]).
pathlossReferenceRSToAddModList, pathlossReferenceRSToAddModListSizeExt A set of Reference Signals (e.g. a CSI-RS config or a SS block) to be used for PUSCH path loss estimation. The set consists of Reference Signals configured using <i>pathLossReferenceRSToAddModList</i> and Reference Signals configured using <i>pathlossReferenceRSToAddModListSizeExt</i> . Up to <i>maxNrofPUSCH-PathlossReferenceRSs</i> may be configured (see TS 38.213 [13], clause 7.1). No elements in the list <i>pathLossReferenceRSToAddModList</i> nor <i>pathlossReferenceRSToAddModListSizeExt</i> are configured if <i>unifiedTCI-StateType</i> is configured for the serving cell.
pathlossReferenceRSToReleaseList, pathlossReferenceRSToReleaseListSizeExt Lists of reference signals for PUSCH path loss estimation to be released by the UE.
sri-PUSCH-MappingToAddModList A list of <i>SRI-PUSCH-PowerControl</i> elements among which one is selected by the SRI field in DCI (see TS 38.213 [13], clause 7.1). No elements in this list are configured if <i>unifiedTCI-StateType</i> is configured for the serving cell.
sri-PUSCH-MappingToAddModList2 A list of <i>SRI-PUSCH-PowerControl</i> elements for second SRS-resource set, among which one is selected by the SRI field in DCI (see TS 38.213 [13], clause 7.1). When this field is present the <i>sri-PUSCH-MappingToAddModList</i> corresponds to the first SRS resource set for PUSCH. No elements in this list are configured if <i>unifiedTCI-StateType</i> is configured for the serving cell.
tpc-Accumulation If enabled, UE applies TPC commands via accumulation. If not enabled, UE applies the TPC command without accumulation. If the field is absent, TPC accumulation is enabled (see TS 38.213 [13], clause 7.1).
twoPUSCH-PC-AdjustmentStates Number of PUSCH power control adjustment states maintained by the UE (i.e., $fc(i)$). If the field is present (n_2) the UE maintains two power control states (i.e., $fc(i,0)$ and $fc(i,1)$). If the field is absent, it maintains one power control state (i.e., $fc(i,0)$) (see TS 38.213 [13], clause 7.1).

<i>SRI-PUSCH-PowerControl</i> field descriptions
<i>sri-P0-PUSCH-AlphaSetId</i> The ID of a <i>P0-PUSCH-AlphaSet</i> as configured in <i>p0-AlphaSets</i> in <i>PUSCH-PowerControl</i> .
<i>sri-PUSCH-ClosedLoopIndex</i> The index of the closed power control loop associated with this <i>SRI-PUSCH-PowerControl</i> .
<i>sri-PUSCH-PathlossReferenceRS-Id</i> The ID of <i>PUSCH-PathlossReferenceRS</i> as configured in the <i>pathlossReferenceRSToAddModList</i> in <i>PUSCH-PowerControl</i> .
<i>sri-PUSCH-PowerControlId</i> The ID of this <i>SRI-PUSCH-PowerControl</i> configuration. It is used as the codepoint (payload) in the SRI DCI field.

– *PUSCH-ServingCellConfig*

The IE *PUSCH-ServingCellConfig* is used to configure UE specific PUSCH parameters that are common across the UE's BWPs of one serving cell.

PUSCH-ServingCellConfig information element

```
-- ASN1START
-- TAG-PUSCH-SERVINGCELLCONFIG-START
```

```
PUSCH-ServingCellConfig ::= SEQUENCE {
    codeBlockGroupTransmission      SetupRelease { PUSCH-CodeBlockGroupTransmission }    OPTIONAL, -- Need M
    rateMatching                   ENUMERATED {limitedBufferRM}                  OPTIONAL, -- Need S
    xOverhead                      ENUMERATED {xoh6, xoh12, xoh18}                OPTIONAL, -- Need S
    ...,
    [[
        maxMIMO-Layers              INTEGER (1..4)                             OPTIONAL, -- Need M
        processingType2Enabled      BOOLEAN                                     OPTIONAL, -- Need M
    ]],
    [[
        maxMIMO-LayersDCI-0-2-r16   SetupRelease { MaxMIMO-LayersDCI-0-2-r16}    OPTIONAL, -- Need M
    ]],
    [[
        nrofHARQ-ProcessesForPUSCH-r17  ENUMERATED {n32}                      OPTIONAL, -- Need R
        uplinkHARQ-mode-r17           SetupRelease { UplinkHARQ-mode-r17}        OPTIONAL, -- Need M
    ]],
    [[
        maxMIMO-Layers-v1810         INTEGER (5..8)                           OPTIONAL, -- Need R
        maxMIMO-LayersforSDM-r18      INTEGER (1..2)                           OPTIONAL, -- Need R
        maxMIMO-LayersforSDM-DCI-0-2-r18  INTEGER (1..2)                       OPTIONAL, -- Need R
        maxMIMO-LayersforSFN-r18      INTEGER (1..2)                           OPTIONAL, -- Need R
        maxMIMO-LayersforSFN-DCI-0-2-r18  INTEGER (1..2)                       OPTIONAL, -- Need R
    ]],
]]
}

PUSCH-CodeBlockGroupTransmission ::= SEQUENCE {
    maxCodeBlockGroupsPerTransportBlock  ENUMERATED {n2, n4, n6, n8},
    ...
}
```

MaxMIMO-LayersDCI-0-2-r16 ::= INTEGER (1..4)

UplinkHARQ-mode-r17 ::= BIT STRING (SIZE (32))

-- TAG-PUSCH-SERVINGCELLCONFIG-STOP

-- ASN1STOP

***PUSCH-CodeBlockGroupTransmission* field descriptions**

maxCodeBlockGroupsPerTransportBlock

Maximum number of code-block-groups (CBGs) per TB (see TS 38.213 [13], clause 9.1).

***PUSCH-ServingCellConfig* field descriptions**

codeBlockGroupTransmission

Enables and configures code-block-group (CBG) based transmission (see TS 38.214 [19], clause 6.1.5).
The network does not configure this field if the SCS of at least one UL BWP configured in the cell is 480 or 960 kHz.

maxMIMO-Layers

Indicates the maximum MIMO layer to be used for PUSCH in all BWPs of the corresponding UL of this serving cell (see TS 38.212 [17], clause 5.4.2.1). If present, the network sets *maxRank* to the same value. The field *maxMIMO-Layers* refers to DCI format 0_1. If network configures *maxMIMO-Layers-v1810* the UE ignores *maxMIMO-Layers* (without suffix).

maxMIMO-LayersforSDM

Parameter to indicate maximal number of MIMO layers of each panel for PUSCH with SDM scheme for NCB PUSCH

maxMIMO-LayersforSDM-DCI-0-2

Parameter to indicate maximal number of MIMO layers of each panel for PUSCH with SDM scheme for DCI format 0_2 for NCB PUSCH

maxMIMO-LayersforSFN

Parameter to indicate maximal number of MIMO layers of each panel for PUSCH with SFN scheme for NCB PUSCH

maxMIMO-LayersforSFN-DCI-0-2

Parameter to indicate maximal number of MIMO layers of each panel for PUSCH with SFN scheme for DCI format 0_2 for NCB PUSCH

nrofHARQ-ProcessesForPUSCH

The number of HARQ processes to be used on the PUSCH of a serving cell. Value *n*32 corresponds to 32 HARQ processes. If the field is absent, the UE uses 16 HARQ processes (see TS 38.214 [19], clause 6.1).

processingType2Enabled

Enables configuration of advanced processing time capability 2 for PUSCH (see 38.214 [19], clause 6.4).

rateMatching

Enables LBRM (Limited buffer rate-matching). When the field is absent the UE applies FBRM (Full buffer rate-matchingLBRM) (see TS 38.212 [17], clause 5.4.2).

xOverhead

If the field is absent, the UE applies the value 0 (see TS 38.214 [19], clause 6.1.4.2).

maxMIMO-LayersDCI-0-2

Indicates the maximum MIMO layer to be used for PUSCH for DCI format 0_2 in all BWPs of the corresponding UL of this serving cell (see TS 38.212 [17], clause 5.4.2.1). If present, the network sets *maxRankDCI-0-2* to the same value.

uplinkHARQ-mode

Used to set the HARQ mode per HARQ process ID, see TS 38.321 [3]. The first/leftmost bit corresponds to HARQ process ID 0, the next bit to HARQ process ID 1 and so on. Bits corresponding to HARQ process IDs that are not configured shall be ignored. A bit set to one identifies a HARQ process with *HARQmodeA* and a bit set to zero identifies a HARQ process with *HARQ modeB*. This field applies for SRBs and DRBs.

– *PUSCH-TimeDomainResourceAllocationList*

The IE *PUSCH-TimeDomainResourceAllocation* is used to configure a time domain relation between PDCCH and PUSCH. *PUSCH-TimeDomainResourceAllocationList* contains one or more of such *PUSCH-TimeDomainResourceAllocations*. The network indicates in the UL grant which of the configured time domain allocations the UE shall apply for that UL grant. The UE determines the bit width of the DCI field based on the number of entries in the *PUSCH-TimeDomainResourceAllocationList*. Value 0 in the DCI field refers to the first element in this list, value 1 in the DCI field refers to the second element in this list, and so on.

PUSCH-TimeDomainResourceAllocation information element

```
-- ASN1START
-- TAG-PUSCH-TIMEDOMAINRESOURCEALLOCATIONLIST-START

PUSCH-TimeDomainResourceAllocationList ::= SEQUENCE (SIZE(1..maxNrofUL-Allocations)) OF PUSCH-TimeDomainResourceAllocation

PUSCH-TimeDomainResourceAllocation ::= SEQUENCE {
    k2                                INTEGER(0..32)                                OPTIONAL,    -- Need S
    mappingType                       ENUMERATED {typeA, typeB},
    startSymbolAndLength              INTEGER (0..127)
}

PUSCH-TimeDomainResourceAllocationList-r16 ::= SEQUENCE (SIZE(1..maxNrofUL-Allocations-r16)) OF PUSCH-TimeDomainResourceAllocation-r16

PUSCH-TimeDomainResourceAllocation-r16 ::= SEQUENCE {
    k2-r16                            INTEGER(0..32)                                OPTIONAL,    -- Need S
    puschedAllocationList-r16         SEQUENCE (SIZE(1..maxNrofMultiplePUSCHs-r16)) OF PUSCH-Allocation-r16,
    ...
}

PUSCH-Allocation-r16 ::= SEQUENCE {
    mappingType-r16                   ENUMERATED {typeA, typeB}                                OPTIONAL,    -- Cond NotFormat01-02-Or-TypeA
    startSymbolAndLength-r16          INTEGER (0..127)                                OPTIONAL,    -- Cond NotFormat01-02-Or-TypeA
    startSymbol-r16                   INTEGER (0..13)                                OPTIONAL,    -- Cond RepTypeB
    length-r16                        INTEGER (1..14)                                OPTIONAL,    -- Cond RepTypeB
    numberOfRepetitions-r16           ENUMERATED {n1, n2, n3, n4, n7, n8, n12, n16} OPTIONAL,    -- Cond Format01-02
    ...
    [[
        numberOfRepetitionsExt-r17     ENUMERATED {n1, n2, n3, n4, n7, n8, n12, n16, n20, n24, n28, n32, spare4, spare3, spare2, spare1}
                                         OPTIONAL,    -- Cond Format01-02-For-TypeA
        numberOfSlotsTBoMS-r17         ENUMERATED {n1, n2, n4, n8, spare4, spare3, spare2, spare1} OPTIONAL,    -- Need R
        extendedK2-r17                INTEGER (0..128)                                OPTIONAL    -- Cond MultiPUSCH
    ]]
}

-- TAG-PUSCH-TIMEDOMAINRESOURCEALLOCATIONLIST-STOP
-- ASN1STOP
```

<i>PUSCH-TimeDomainResourceAllocationList</i> field descriptions
<i>extendedK2</i> Corresponds to L1 parameter 'K2' (see TS 38.214 [19], clause 6.1.2.1) configurable per PUSCH allocation. Only values {0..32} are applicable for PUSCH SCS of 120 kHz and for FR1. When the field is absent for the first PUSCH if multiple PUSCH are configured per PDCCH and <i>k2-r16</i> is absent, or when the field is absent and only one PUSCH is configured per PDCCH and <i>k2-r16</i> is absent, the UE applies the value 1 when PUSCH SCS is 15/30 kHz; the value 2 when PUSCH SCS is 60 kHz, the value 3 when PUSCH SCS is 120 kHz, the value 11 when PUSCH SCS is 480 kHz, and the value 21 when PUSCH SCS is 960 kHz. If multiple contiguous PUSCHs are configured per PDCCH, when the field <i>extendedK2(n)</i> corresponding to <i>k2</i> of the PUSCH(s) in the <i>n</i>-th slot (<i>n</i>>1), or of the PUSCH(s) except the first PUSCH in the first slot (<i>n</i>=1), is absent, the UE applies <i>k2</i> of the first PUSCH plus <i>n</i>-1.
<i>k2</i> Corresponds to L1 parameter 'K2' (see TS 38.214 [19], clause 6.1.2.1). When the field is absent the UE applies the value 1 when PUSCH SCS is 15/30 kHz; the value 2 when PUSCH SCS is 60 kHz, and the value 3 when PUSCH SCS is 120 kHz. <i>k2</i> is absent/ignored if <i>extendedK2</i> is present.
<i>length</i> Indicates the length allocated for PUSCH for DCI format 0_1/0_2 (see TS 38.214 [19], clause 6.1.2.1).
<i>mappingType</i> Mapping type (see TS 38.214 [19], clause 6.1.2.1).
<i>numberOfRepetitions</i> Number of repetitions for DCI format 0_1/0_2 (see TS 38.214 [19], clause 6.1.2.1). When <i>numberOfSlotsTBoMS-r17</i> is set to 2, 4 or 8 (i.e. TB processing over multi-slot (TBoMS) PUSCH is enabled), it indicates the number of repetitions of a single TBoMS.
<i>numberOfRepetitionsExt</i> Number of repetitions for DCI format 0_1/0_2 if <i>pusch-RepTypeIndicatorDCI-0-1/pusch-RepTypeIndicatorDCI-0-2</i> is not set to <i>pusch-RepTypeB</i> (see TS 38.214 [19], clause 6.1.2.1). If this field is present, the field <i>numberOfRepetitions-r16</i> is ignored for PUSCH repetition Type A.
<i>numberOfSlotsTBoMS</i> Number of slots allocated for TB processing over multi-slot PUSCH for DCI format 0_1/0_2. If a number of repetitions <i>K</i> is configured by <i>numberOfRepetitions</i> or <i>numberOfRepetitionsExt</i>, the network configures <i>numberOfSlotsTBoMS</i> (<i>N</i>) and <i>K</i> such that $N \cdot K \leq 32$ (see TS 38.214 [19], clause 6.1.2.1). The network does not configure the <i>numberOfSlotsTBoMS-r17</i> simultaneously with the <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i>. The network does not configure <i>numberOfSlotsTBoMS-r17</i> together with <i>enhancedSkipUplinkTxDynamic</i> or <i>enhancedSkipUplinkTxConfigured</i> with value <i>true</i>.
<i>puschAllocationList</i> The field <i>puschAllocationList-r16</i> indicates one or multiple PUSCH continuous in time domain which share a common <i>k2</i> (see TS 38.214 [19], clause 6.1.2.1). In this release, this field configures one or multiple PUSCH that may be in consecutive or non-consecutive slots (see TS 38.214 [19], clause 6.1.2.1). The <i>puschAllocationList-r16</i> only has one element in <i>pusch-TimeDomainAllocationListDCI-0-1-r16</i> and in <i>pusch-TimeDomainAllocationListDCI-0-2-r16</i>.
<i>startSymbol</i> Indicates the index of start symbol for PUSCH for DCI format 0_1/0_2 (see TS 38.214 [19], clause 6.1.2.1).
<i>startSymbolAndLength</i> An index giving valid combinations of start symbol and length (jointly encoded) as start and length indicator (SLIV). The network configures the field so that the allocation does not cross the slot boundary. (see TS 38.214 [19], clause 6.1.2.1).

Conditional Presence	Explanation
<i>Format01-02</i>	In <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i> , the field is absent. In <i>pusch-TimeDomainAllocationListDCI-0-1</i> and in <i>pusch-TimeDomainAllocationListDCI-0-2</i> , the field is mandatory present.
<i>Format01-02-For-TypeA</i>	In <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i> , the field is absent. In <i>pusch-TimeDomainAllocationListDCI-0-1</i> , the field is optionally present if <i>pusch-RepTypeIndicatorDCI-0-1</i> is not set to pusch-RepTypeB, Need R. It is absent otherwise, Need R. In <i>pusch-TimeDomainAllocationListDCI-0-2</i> , the field is optionally present if <i>pusch-RepTypeIndicatorDCI-0-2</i> is not set to pusch-RepTypeB, Need R. It is absent otherwise, Need R.
<i>NotFormat01-02-Or-TypeA</i>	In <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i> , the field is mandatory present. In <i>pusch-TimeDomainAllocationListDCI-0-1</i> , the field is mandatory present if <i>pusch-RepTypeIndicatorDCI-0-1</i> is not set to pusch-RepTypeB. It is absent otherwise, Need R. In <i>pusch-TimeDomainAllocationListDCI-0-2</i> , the field is mandatory present if <i>pusch-RepTypeIndicatorDCI-0-2</i> is not set to pusch-RepTypeB. It is absent otherwise, Need R.
<i>RepTypeB</i>	In <i>pusch-TimeDomainAllocationListForMultiPUSCH-r16</i> , the field is absent. In <i>pusch-TimeDomainAllocationListDCI-0-1</i> , the field is mandatory present if <i>pusch-RepTypeIndicatorDCI-0-1</i> is set to pusch-RepTypeB. It is absent otherwise, Need R. In <i>pusch-TimeDomainAllocationListDCI-0-2</i> , the field is mandatory present if <i>pusch-RepTypeIndicatorDCI-0-2</i> is set to pusch-RepTypeB. It is absent otherwise, Need R.
<i>MultiPUSCH</i>	In case size of <i>puschAllocationList</i> is higher than 1, the field <i>extendedK2(n)</i> corresponding to k2 of the n-th PUSCH, n>1, is mandatory present for all n, if any two consecutive PUSCHs are non-contiguous. Otherwise, it is optionally present, Need S.

– PUSCH-TPC-CommandConfig

The IE *PUSCH-TPC-CommandConfig* is used to configure the UE for extracting TPC commands for PUSCH from a group-TPC messages on DCI.

PUSCH-TPC-CommandConfig information element

```
-- ASN1START
-- TAG-PUSCH-TPC-COMMANDCONFIG-START

PUSCH-TPC-CommandConfig ::= SEQUENCE {
    tpc-Index          INTEGER (1..15)          OPTIONAL, -- Cond SUL
    tpc-IndexSUL       INTEGER (1..15)          OPTIONAL, -- Cond SUL-Only
    targetCell         ServCellIndex            OPTIONAL, -- Need S
    ...
}

-- TAG-PUSCH-TPC-COMMANDCONFIG-STOP
-- ASN1STOP
```

PUSCH-TPC-CommandConfig field descriptions	
targetCell	The serving cell to which the acquired power control commands are applicable. If the value is absent, the UE applies the TPC commands to the serving cell on which the command has been received.
tpc-Index	An index determining the position of the first bit of TPC command inside the DCI format 2-2 payload.
tpc-IndexSUL	An index determining the position of the first bit of TPC command inside the DCI format 2-2 payload.

Conditional Presence	Explanation
SUL-Only	The field is optionally present, Need R, if supplementaryUplink is configured within ServingCellConfig. It is absent otherwise.
SUL	The field is optionally present, Need R, if supplementaryUplink is configured within ServingCellConfig. It is mandatory present otherwise.

— QFI

The IE QFI is used to indicate the QoS Flow Identifier.

QFI information element

-- ASN1START
-- TAG-QFI-START

QFI ::= INTEGER (0..maxQFI)

-- TAG-QFI-STOP
-- ASN1STOP

— Q-OffsetRange

The IE Q-OffsetRange is used to indicate a cell, beam or measurement object specific offset to be applied when evaluating candidates for cell re-selection or when evaluating triggering conditions for measurement reporting. The value is in dB. Value dB-24 corresponds to -24 dB, dB-22 corresponds to -22 dB and so on.

Q-OffsetRange information element

-- ASN1START
-- TAG-Q-OFFSETRANGE-START

Q-OffsetRange ::= ENUMERATED {
 dB-24, dB-22, dB-20, dB-18, dB-16, dB-14,
 dB-12, dB-10, dB-8, dB-6, dB-5, dB-4, dB-3,
 dB-2, dB-1, dB0, dB1, dB2, dB3, dB4, dB5,
 dB6, dB8, dB10, dB12, dB14, dB16, dB18,
 dB20, dB22, dB24}

```
-- TAG-Q-OFFSETRANGE-STOP
-- ASN1STOP
```

— *Q-QualMin*

The IE *Q-QualMin* is used to indicate for cell selection/ re-selection the required minimum received RSRQ level in the (NR) cell. Corresponds to parameter Q_{qualmin} in TS 38.304 [20]. Actual value Q_{qualmin} = field value [dB].

Q-QualMin information element

```
-- ASN1START
-- TAG-Q-QUALMIN-START
```

Q-QualMin ::= **INTEGER** (-43..-12)

```
-- TAG-Q-QUALMIN-STOP
-- ASN1STOP
```

— *Q-RxLevMin*

The IE *Q-RxLevMin* is used to indicate for cell selection/ re-selection the required minimum received RSRP level in the (NR) cell. Corresponds to parameter Q_{rxlevmin} in TS 38.304 [20]. Actual value Q_{rxlevmin} = field value * 2 [dBm].

Q-RxLevMin information element

```
-- ASN1START
-- TAG-Q-RXLEVMIN-START
```

Q-RxLevMin ::= **INTEGER** (-70..-22)

```
-- TAG-Q-RXLEVMIN-STOP
-- ASN1STOP
```

— *QuantityConfig*

The IE *QuantityConfig* specifies the measurement quantities and layer 3 filtering coefficients for NR and inter-RAT measurements.

QuantityConfig information element

```
-- ASN1START
-- TAG-QUANTITYCONFIG-START
```

```

QuantityConfig ::=
    quantityConfigNR-List
    ...,
    [[
        quantityConfigEUTRA
    ]],
    [[
        quantityConfigUTRA-FDD-r16
        quantityConfigCLI-r16
    ]]
}

QuantityConfigNR ::=
    quantityConfigCell
    quantityConfigRS-Index
}

QuantityConfigRS ::=
    ssb-FilterConfig
    csi-RS-FilterConfig
}

FilterConfig ::=
    filterCoefficientRSRP
    filterCoefficientRSRQ
    filterCoefficientRS-SINR
}

FilterConfigCLI-r16 ::=
    filterCoefficientSRS-RSRP-r16
    filterCoefficientCLI-RSSI-r16
}

QuantityConfigUTRA-FDD-r16 ::=
    filterCoefficientRSCP-r16
    filterCoefficientEcNO-r16
}

-- TAG-QUANTITYCONFIG-STOP
-- ASN1STOP

```

SEQUENCE {
 SEQUENCE (SIZE (1..maxNrofQuantityConfig)) OF QuantityConfigNR
 FilterConfig
 QuantityConfigUTRA-FDD-r16
 FilterConfigCLI-r16
 QuantityConfigRS,
 QuantityConfigRS
 FilterConfig,
 FilterConfig
 FilterCoefficient
 FilterCoefficient
 FilterCoefficient
 FilterCoefficient
 FilterCoefficient
 FilterCoefficient
 FilterCoefficient

OPTIONAL, -- Need M
 OPTIONAL -- Need M
 OPTIONAL, -- Need M
 OPTIONAL -- Need M
 OPTIONAL -- Need M
 DEFAULT fc4,
 DEFAULT fc4,
 DEFAULT fc4
 DEFAULT fc4,
 DEFAULT fc4
 DEFAULT fc4,
 DEFAULT fc4

QuantityConfigNR field descriptions

quantityConfigCell

Specifies L3 filter configurations for cell measurement results for the configurable RS Types (e.g. SS/PBCH block and CSI-RS) and the configurable measurement quantities (e.g. RSRP, RSRQ and SINR).

quantityConfigRS-Index

Specifies L3 filter configurations for measurement results per RS index for the configurable RS Types (e.g. SS/PBCH block and CSI-RS) and the configurable measurement quantities (e.g. RSRP, RSRQ and SINR).

<i>QuantityConfigRS field descriptions</i>
csi-RS-FilterConfig CSI-RS based L3 filter configurations: Specifies L3 filter configurations for CSI-RSRP, CSI-RSRQ and CSI-SINR measurement results from the L1 filter(s), as defined in TS 38.215 [9].
ssb-FilterConfig SS Block based L3 filter configurations: Specifies L3 filter configurations for SS-RSRP, SS-RSRQ and SS-SINR measurement results from the L1 filter(s), as defined in TS 38.215 [9].
<i>QuantityConfigUTRA-FDD field descriptions</i>
filterCoefficientRSCP Specifies L3 filter coefficient for FDD UTRAN CPICH_RSCP measuement results from L1 filter.
filterCoefficientEcN0 Specifies L3 filter coefficient for FDD UTRAN CPICH_EcN0 measuement results from L1 filter.

– RACH-ConfigCommon

The IE *RACH-ConfigCommon* is used to specify the cell specific random-access parameters.

RACH-ConfigCommon information element

```
-- ASN1START
-- TAG-RACH-CONFIGCOMMON-START

RACH-ConfigCommon ::=
    SEQUENCE {
        rach-ConfigGeneric          RACH-ConfigGeneric,
        totalNumberOfRA-Preambles  INTEGER (1..63) OPTIONAL, -- Need S
        ssb-perRACH-OccasionAndCB-PreamblesPerSSB CHOICE {
            oneEighth      ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32, n36, n40, n44, n48, n52, n56, n60, n64},
            oneFourth      ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32, n36, n40, n44, n48, n52, n56, n60, n64},
            oneHalf        ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32, n36, n40, n44, n48, n52, n56, n60, n64},
            one            ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32, n36, n40, n44, n48, n52, n56, n60, n64},
            two            ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32},
            four           INTEGER (1..16),
            eight          INTEGER (1..8),
            sixteen        INTEGER (1..4)
        } OPTIONAL, -- Need M
        groupBconfigured
            ra-Msg3SizeGroupA SEQUENCE {
                ENUMERATED {b56, b144, b208, b256, b282, b480, b640,
                           b800, b1000, b72, spare6, spare5, spare4, spare3, spare2, spare1},
                ENUMERATED {minusinfinity, dB0, dB5, dB8, dB10, dB12, dB15, dB18},
                INTEGER (1..64)
            } OPTIONAL, -- Need R
            messagePowerOffsetGroupB
            numberOfRA-PreamblesGroupA
        }
        ra-ContentionResolutionTimer
        rsrp-ThresholdSSB
        rsrp-ThresholdSSB-SUL
        prach-RootSequenceIndex
        l839
        INTEGER (0..837),
    }
```

```

        l139                                INTEGER (0..137)
    },
    msg1-SubcarrierSpacing                  SubcarrierSpacing                      OPTIONAL,    -- Cond L139
    restrictedSetConfig                      ENUMERATED {unrestrictedSet, restrictedSetTypeA, restrictedSetTypeB},
    msg3-transformPrecoder                  ENUMERATED {enabled}                    OPTIONAL,    -- Need R
    ...
    [[
    ra-PrioritizationForAccessIdentity-r16 SEQUENCE {
        ra-Prioritization-r16              RA-Prioritization,
        ra-PrioritizationForAI-r16          BIT STRING (SIZE (2))
    }                                       OPTIONAL,    -- Cond InitialBWP-Only
    prach-RootSequenceIndex-r16            CHOICE {
        l571                                INTEGER (0..569),
        l1151                               INTEGER (0..1149)
    }   OPTIONAL    -- Need R
    ]],
    [[
    ra-PrioritizationForSlicing-r17          RA-PrioritizationForSlicing-r17          OPTIONAL,    -- Cond InitialBWP-Only
    featureCombinationPreamblesList-r17     SEQUENCE (SIZE(1..maxFeatureCombPreamblesPerRACHResource-r17)) OF FeatureCombinationPreambles-r17
OPTIONAL -- Cond AdditionalRACH
    ]]
}

-- TAG-RACH-CONFIGCOMMON-STOP
-- ASN1STOP

```

<i>RACH-ConfigCommon</i> field descriptions
<i>featureCombinationPreamblesList</i> Specifies a series of preamble partitions each associated to a combination of features and 4-step RA. The network does not configure this list to have more than 16 entries.
<i>messagePowerOffsetGroupB</i> Threshold for preamble selection. Value is in dB. Value <i>minusinfinity</i> corresponds to –infinity. Value <i>dB0</i> corresponds to 0 dB, <i>dB5</i> corresponds to 5 dB and so on (see TS 38.321 [3], clause 5.1.2). This field is set to the same value for different repetition numbers associated with a specific <i>FeatureCombination</i> .
<i>msg1-SubcarrierSpacing</i> Subcarrier spacing of PRACH (see TS 38.211 [16], clause 5.3.2). Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz If absent, the UE applies the SCS as derived from the <i>prach-ConfigurationIndex</i> in <i>RACH-ConfigGeneric</i> (see tables Table 6.3.3.1-1, Table 6.3.3.1-2, Table 6.3.3.2-2 and Table 6.3.3.2-3, TS 38.211 [16]). The value also applies to contention free random access (<i>RACH-ConfigDedicated</i>), to SI-request and to contention-based beam failure recovery (CB-BFR). But it does not apply for contention free beam failure recovery (CF-BFR) (see <i>BeamFailureRecoveryConfig</i>).
<i>msg3-transformPrecoder</i> Enables the transform precoder for Msg3 transmission according to clause 6.1.3 of TS 38.214 [19]. If the field is absent, the UE disables the transformer precoder (see TS 38.213 [13], clause 8.3).
<i>numberOfRA-PreamblesGroupA</i> The number of CB preambles per SSB in group A. This determines implicitly the number of CB preambles per SSB available in group B. (see TS 38.321 [3], clause 5.1.1). The setting should be consistent with the setting of <i>ssb-perRACH-OccasionAndCB-PreamblesPerSSB</i> .
<i>prach-RootSequenceIndex</i> PRACH root sequence index (see TS 38.211 [16], clause 6.3.3.1). The value range depends on whether L=839 or L=139 or L=571 or L=1151. The length of the root sequence corresponding with the index indicated in this IE should be consistent with the one indicated in <i>prach-ConfigurationIndex</i> in the <i>RACH-ConfigDedicated</i> (if configured). If <i>prach-RootSequenceIndex-r16</i> is signalled, UE shall ignore the <i>prach-RootSequenceIndex</i> (without suffix). For FR2-2, only the following values are applicable depending on the used subcarrier spacing: 120 kHz: L=139, L=571, and L=1151 480 kHz: L=139, and L=571 960 kHz: L=139
<i>ra-ContentionResolutionTimer</i> The initial value for the contention resolution timer (see TS 38.321 [3], clause 5.1.5). Value <i>sf8</i> corresponds to 8 subframes, value <i>sf16</i> corresponds to 16 subframes, and so on.
<i>ra-Msg3SizeGroupA</i> Transport Blocks size threshold in bits below which the UE shall use a contention-based RA preamble of group A (see TS 38.321 [3], clause 5.1.2). This field is set to the same value for different repetition numbers associated with a specific <i>FeatureCombination</i> .
<i>ra-Prioritization</i> Parameters which apply for prioritized random access procedure on any UL BWP of SpCell for specific Access Identities (see TS 38.321 [3], clause 5.1.1a).
<i>ra-PrioritizationForAI</i> Indicates whether the field <i>ra-Prioritization-r16</i> applies for Access Identities. The first/leftmost bit corresponds to Access Identity 1, the next bit corresponds to Access Identity 2. Value 1 indicates that the field <i>ra-Prioritization-r16</i> applies otherwise the field does not apply (see TS 23.501 [32]).
<i>ra-PrioritizationForSlicing</i> Parameters which apply to configure prioritized CBRA 4-step random access type for slicing.
<i>rach-ConfigGeneric</i> RACH parameters for both regular random access and beam failure recovery.
<i>restrictedSetConfig</i> Configuration of an unrestricted set or one of two types of restricted sets, see TS 38.211 [16], clause 6.3.3.1.

rsrp-ThresholdSSB UE may select the SS block and corresponding PRACH resource for path-loss estimation and (re)transmission based on SS blocks that satisfy the threshold (see TS 38.213 [13]).
rsrp-ThresholdSSB-SUL The UE selects SUL carrier to perform random access based on this threshold (see TS 38.321 [3], clause 5.1.1). The value applies to all the BWPs and all RACH configurations.
ssb-perRACH-OccasionAndCB-PreamblesPerSSB The meaning of this field is twofold: the CHOICE conveys the information about the number of SSBs per RACH occasion. Value <i>oneEighth</i> corresponds to one SSB associated with 8 RACH occasions, value <i>oneFourth</i> corresponds to one SSB associated with 4 RACH occasions, and so on. The ENUMERATED part indicates the number of Contention Based preambles per SSB. Value <i>n4</i> corresponds to 4 Contention Based preambles per SSB, value <i>n8</i> corresponds to 8 Contention Based preambles per SSB, and so on. The total number of CB preambles in a RACH occasion is given by <i>CB-preambles-per-SSB</i> * max(1, <i>SSB-per-rach-occasion</i>). See TS 38.213 [13].
totalNumberOfRA-Preambles Total number of preambles used for contention based and contention free 4-step or 2-step random access in the RACH resources defined in <i>RACH-ConfigCommon</i> , excluding preambles used for other purposes (e.g. for SI request). If the field is absent, all 64 preambles are available for RA. The setting should be consistent with the setting of <i>ssb-perRACH-OccasionAndCB-PreamblesPerSSB</i> , i.e. it should be a multiple of the number of SSBs per RACH occasion.

Conditional Presence	Explanation
<i>AdditionalRACH</i>	The field is mandatory present if the <i>RACH-ConfigCommon</i> is included in an <i>AdditionalRACH-Config</i> . When included in <i>initialUplinkBWP-RedCap</i> to indicate other feature(s) than <i>redcap</i> and <i>eRedCap</i> , this field is mandatory present with at least <i>FeatureCombinationPreambles</i> list entries: the list entry/entries indicating only <i>redcap</i> or <i>eRedCap</i> and the other(s) indicating both <i>redcap</i> or <i>eRedCap</i> and one or multiple other feature(s) (e.g., <i>smallData</i> , <i>nsag</i> or <i>msg3-Repetitions</i>). When included in <i>initialUplinkBWP-RedCap</i> to indicate <i>eRedCap</i> and <i>RedCap</i> separately, this field is mandatory present with at least two <i>FeatureCombinationPreambles</i> list entries: one list entry indicating only <i>redcap</i> and the other list entry indicating only <i>eRedCap</i> . Otherwise, it is optional, Need R.
<i>InitialBWP-Only</i>	This field is optionally present, Need R, if this BWP is the initial BWP of SpCell. Otherwise, the field is absent.
<i>L139</i>	The field is mandatory present if <i>prach-RootSequenceIndex</i> L=139, or if L=571 for FR2-2, otherwise the field is absent, Need S.
<i>SUL</i>	The field is mandatory present in <i>rach-ConfigCommon</i> in <i>initialUplinkBWP</i> if <i>supplementaryUplink</i> is configured in <i>ServingCellConfigCommonSIB</i> or if <i>supplementaryUplinkConfig</i> is configured in <i>ServingCellConfigCommon</i> ; otherwise, the field is absent. This field is not configured in <i>additionalRACH-Config</i> .

– RACH-ConfigCommonTwoStepRA

The IE *RACH-ConfigCommonTwoStepRA* is used to specify cell specific 2-step random-access type parameters.

RACH-ConfigCommonTwoStepRA information element

```
-- ASN1START
-- TAG-RACH-CONFIGCOMMONTWOSTEPRA-START

RACH-ConfigCommonTwoStepRA-r16 ::=
    rach-ConfigGenericTwoStepRA-r16
    msgA-TotalNumberOfRA-Preambles-r16
    msgA-SSB-PerRACH-OccasionAndCB-PreamblesPerSSB-r16
    SEQUENCE {
        RACH-ConfigGenericTwoStepRA-r16,
        INTEGER (1..63)
        CHOICE {
            OPTIONAL, -- Need S
```



```

    oneEighth
    oneFourth
    oneHalf
    one
    two
    four
    eight
    sixteen
}
msgA-CB-PreamblesPerSSB-PerSharedRO-r16
msgA-SSB-SharedRO-MaskIndex-r16
groupB-ConfiguredTwoStepRA-r16
msgA-PRACH-RootSequenceIndex-r16
    l839
    l139
    l571
    l1151
}
msgA-TransMax-r16
msgA-RSRP-Threshold-r16
2Step4Step
    msgA-RSRP-ThresholdSSB-r16
    msgA-SubcarrierSpacing-r16
2StepOnlyL139
    msgA-RestrictedSetConfig-r16

    ra-PrioritizationForAccessIdentityTwoStep-r16
    ra-Prioritization-r16
    ra-PrioritizationForAI-r16
}
InitialBWP-Only
    ra-ContentionResolutionTimer-r16
    ...
    [[
        ra-PrioritizationForSlicingTwoStep-r17
        featureCombinationPreamblesList-r17 SEQUENCE (SIZE(1..maxFeatureCombPreamblesPerRACHResource-r17)) OF FeatureCombinationPreambles-r17 OPTIONAL
    -- Cond AdditionalRACH
    ]]
}

GroupB-ConfiguredTwoStepRA-r16 ::=
    ra-MsgA-SizeGroupA-r16

    messagePowerOffsetGroupB-r16
    numberOfRA-PreamblesGroupA-r16
}

-- TAG-RACH-CONFIGCOMMONTWOSTEPRA-STOP
-- ASN1STOP

```

ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32, n36, n40, n44, n48, n52, n56, n60, n64},
 ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32, n36, n40, n44, n48, n52, n56, n60, n64},
 ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32, n36, n40, n44, n48, n52, n56, n60, n64},
 ENUMERATED {n4, n8, n12, n16, n20, n24, n28, n32},
 INTEGER (1..16),
 INTEGER (1..8),
 INTEGER (1..4)

INTEGER (1..60)
 INTEGER (1..15)
 GroupB-ConfiguredTwoStepRA-r16
 CHOICE {
 INTEGER (0..837),
 INTEGER (0..137),
 INTEGER (0..569),
 INTEGER (0..1149)

ENUMERATED {n1, n2, n4, n6, n8, n10, n20, n50, n100, n200}
 RSRP-Range

RSRP-Range
 SubcarrierSpacing

ENUMERATED {unrestrictedSet, restrictedSetTypeA, restrictedSetTypeB}
 SEQUENCE {
 RA-Prioritization,
 BIT STRING (SIZE (2))

ENUMERATED {sf8, sf16, sf24, sf32, sf40, sf48, sf56, sf64}

RA-PrioritizationForSlicing-r17 OPTIONAL, -- Cond InitialBWP-Only
 featureCombinationPreamblesList-r17 SEQUENCE (SIZE(1..maxFeatureCombPreamblesPerRACHResource-r17)) OF FeatureCombinationPreambles-r17 OPTIONAL

SEQUENCE {
 ENUMERATED {b56, b144, b208, b256, b282, b480, b640, b800, b1000, b72, spare6, spare5, spare4, spare3, spare2, spare1},
 ENUMERATED {minusinfinity, dB0, dB5, dB8, dB10, dB12, dB15, dB18},
 INTEGER (1..64)

<i>RACH-ConfigCommonTwoStepRA</i> field descriptions
<i>featureCombinationPreamblesList</i> Specifies a series of preamble partitions each associated to a combination of features and 2-step RA. The network does not configure this list to have more than 16 entries.
<i>groupB-ConfiguredTwoStepRA</i> Preamble grouping for 2-step random access type. If the field is absent then there is only one preamble group configured and only one msgA PUSCH configuration.
<i>msgA-CB-PreamblesPerSSB-PerSharedRO</i> Number of contention-based preambles used for 2-step RA type from the non-CBRA 4-step type preambles associated with each SSB for RO shared with 4-step type RA. The number of preambles for 2-step RA type shall not exceed the number of preambles per SSB minus the number of contention-based preambles per SSB for 4-step type RA. The possible value range for this parameter needs to be aligned with value range for the configured SSBs per RACH occasion in <i>ssb-perRACH-OccasionAndCB-PreamblesPerSSB</i> in <i>RACH-ConfigCommon</i> . The field is only applicable for the case of shared ROs with 4-step type random access.
<i>msgA-PRACH-RootSequenceIndex</i> PRACH root sequence index. If the field is not configured in <i>RACH-ConfigCommonTwoStepRA</i> which is configured directly within a BWP (i.e., not within <i>AdditionalRACH-Config</i>), the UE applies the value in field <i>prach-RootSequenceIndex</i> in <i>RACH-ConfigCommon</i> in the configured BWP. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i> , the UE applies the corresponding value of <i>prach-RootSequenceIndex</i> in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i> . When both 2-step and 4-step type random access is configured, this field is only configured for the case of separate ROs between 2-step and 4-step type random access. For FR2-2, only the following values are applicable depending on the used subcarrier spacing: 120 kHz: L=139, L=571, and L=1151 480 kHz: L=139, and L=571 960 kHz: L=139
<i>msgA-RestrictedSetConfig</i> Configuration of an unrestricted set or one of two types of restricted sets for 2-step random access type preamble. If the field is not configured in <i>RACH-ConfigCommonTwoStepRA</i> which is configured directly within a BWP (i.e. not within <i>AdditionalRACH-Config</i>), the UE applies the value in field <i>restrictedSetConfig</i> in <i>RACH-ConfigCommon</i> in the configured BWP. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i> , the UE applies the value of <i>restrictedSetConfig</i> in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i> . When both 2-step and 4-step type random access is configured, this field is only configured for the case of separate ROs between 2-step and 4-step type random access.
<i>msgA-RSRP-Threshold</i> The UE selects 2-step random access type to perform random access based on this threshold (see TS 38.321 [3], clause 5.1.1). This field is only present if both 2-step and 4-step RA type are configured for the BWP.
<i>msgA-RSRP-ThresholdSSB</i> UE may select the SS block and corresponding PRACH resource for path-loss estimation and (re)transmission based on SS blocks that satisfy the threshold (see TS 38.213 [13]).
<i>msgA-SSB-PerRACH-OccasionAndCB-PreamblesPerSSB</i> The meaning of this field is twofold: the CHOICE conveys the information about the number of SSBs per RACH occasion. Value <i>oneEight</i> corresponds to one SSB associated with 8 RACH occasions, value <i>oneFourth</i> corresponds to one SSB associated with 4 RACH occasions, and so on. The ENUMERATED part indicates the number of Contention Based preambles per SSB. Value <i>n4</i> corresponds to 4 Contention Based preambles per SSB, value <i>n8</i> corresponds to 8 Contention Based preambles per SSB, and so on. The total number of CB preambles in a RACH occasion is given by <i>CB-preambles-per-SSB</i> * max(1, <i>SSB-per-rach-occasion</i>). If the field is not configured in <i>RACH-ConfigCommonTwoStepRA</i> which is configured directly within a BWP (i.e. not within <i>AdditionalRACH-Config</i>) and both 2-step and 4-step are configured for the BWP, the UE applies the value in the field <i>ssb-perRACH-OccasionAndCB-PreamblesPerSSB</i> in <i>RACH-ConfigCommon</i> . If the field is not configured in <i>AdditionalRACH-Config</i> and both 2-step and 4-step are configured in <i>AdditionalRACH-Config</i> , the UE applies the value in the field <i>ssb-perRACH-OccasionAndCB-PreamblesPerSSB</i> in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i> . The field is not present when RACH occasions are shared between 2-step and 4-step type random access in the BWP.
<i>msgA-SSB-SharedRO-MaskIndex</i> Indicates the subset of 4-step type ROs shared with 2-step random access type for each SSB. This field is configured when there is more than one RO per SSB. If the field is absent, and 4-step and 2-step has shared ROs, then all ROs are shared.

msgA-SubcarrierSpacing Subcarrier spacing of PRACH (see TS 38.211 [16], clause 5.3.2). Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz. If the field is absent, the UE applies the SCS as derived from the <i>msgA-PRACH-ConfigurationIndex</i> in <i>RACH-ConfigGenericTwoStepRA</i> (see tables Table 6.3.3.1-1, Table 6.3.3.1-2, Table 6.3.3.2-2 and Table 6.3.3.2-3, TS 38.211 [16]) in case of 2-step only BWP, otherwise the UE applies the same SCS as <i>Msg1</i> derived from <i>RACH-ConfigCommon</i>. The value also applies to contention free 2-step random access type (<i>RACH-ConfigDedicated</i>).
msgA-TotalNumberOfRA-Preambles Indicates the total number of preambles used for contention-based and contention-free 2-step random access type when ROs for 2-step are not shared with 4-step. If the field is absent, and 2-step and 4-step does not have shared ROs, all 64 preambles are available for 2-step random access type.
msgA-TransMax Max number of <i>MsgA</i> preamble transmissions performed before switching to 4-step random access (see TS 38.321 [3], clauses 5.1.1). This field is only applicable when 2-step and 4-step RA type are configured and switching to 4-step type RA is supported. If the field is absent, switching from 2-step RA type to 4-step RA type is not allowed.
ra-ContentionResolutionTimer The initial value for the contention resolution timer for fallback RAR in case no 4-step random access type is configured (see TS 38.321 [3], clause 5.1.5). Value <i>sf8</i> corresponds to 8 subframes, value <i>sf16</i> corresponds to 16 subframes, and so on. If both 2-step and 4-step random access type resources are configured on the BWP, then this field is absent. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i>, the UE shall apply the corresponding value in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i>.
ra-Prioritization Parameters which apply for prioritized random access procedure on any UL BWP of SpCell for specific Access Identities (see TS 38.321 [3], clause 5.1.1a).
ra-PrioritizationForAI Indicates whether the field <i>ra-Prioritization-r16</i> applies for Access Identities. The first/leftmost bit corresponds to Access Identity 1, the next bit corresponds to Access Identity 2. Value <i>1</i> for an Access Identity indicates that the field <i>ra-Prioritization-r16</i> applies, otherwise the field does not apply.
ra-PrioritizationForSlicingTwoStep Parameters which apply to configure prioritized CBRA 2-step random access type for slicing.
rach-ConfigGenericTwoStepRA 2-step random access type parameters for both regular random access and beam failure recovery.

GroupB-ConfiguredTwoStepRA field descriptions
messagePowerOffsetGroupB Threshold for preamble selection. Value is in dB. Value <i>minusinfinity</i> corresponds to –infinity. Value <i>dB0</i> corresponds to 0 dB, <i>dB5</i> corresponds to 5 dB and so on. (see TS 38.321 [3], clause 5.1.1).
numberOfRA-PreamblesGroupA The number of CB preambles per SSB in group A for idle/inactive or connected mode. The setting of the number of preambles for each group should be consistent with <i>msgA-SSB-PerRACH-OccasionAndCB-PreamblesPerSSB</i> or <i>msgA-CB-PreamblesPerSSB-PerSharedRO</i> if configured.
ra-MsgA-SizeGroupA Transport block size threshold in bits below which the UE shall use a contention-based RA preamble of group A. (see TS 38.321 [3], clause 5.1.1).

Conditional Presence	Explanation
<i>2Step4Step</i>	The field is mandatory present if both 2-step random access type and 4-step random access type are configured in the BWP, otherwise the field is not present. The field is mandatory present in <i>msgA-ConfigCommon</i> field in <i>AdditionalRACH-Config</i> if both 2-step random access type and 4-step random access type are configured for the same feature combination in the BWP.
<i>2StepOnlyL139</i>	The field is mandatory present if <i>msgA-PRACH-RootSequenceIndex</i> L=139 and no 4-step random access type is configured, or if L=571 for FR2-2 and no 4-step random access type is configured, otherwise the field is absent, Need S.
<i>2StepOnly</i>	The field is mandatory present in <i>msgA-ConfigCommon</i> field in <i>BWP-UplinkCommon</i> if <i>rach-ConfigCommon</i> field is absent in this <i>BWP-UplinkCommon</i> , otherwise the field is optionally present in <i>msgA-ConfigCommon</i> field in <i>BWP-UplinkCommon</i> , Need S. The field is mandatory present in <i>msgA-ConfigCommon</i> field in <i>AdditionalRACH-Config</i> if <i>rach-ConfigCommon</i> field is absent in this <i>AdditionalRACH-Config</i> , otherwise the field is optionally present in <i>msgA-ConfigCommon</i> field in <i>AdditionalRACH-Config</i> , Need S.
<i>AdditionalRACH</i>	The field is mandatory present if the <i>msgA-ConfigCommon</i> is included in an <i>AdditionalRACH-Config</i> . When included in <i>initialUplinkBWP-RedCap</i> to indicate other feature(s) than <i>redcap</i> , this field is mandatory present with at least two <i>FeatureCombinationPreambles</i> list entries: one list entry indicating only <i>redcap</i> and the other(s) indicating both <i>redcap</i> and one or multiple other feature(s) (e.g. <i>smallData</i> , <i>nsag</i> or <i>msg3-Repetitions</i>). Otherwise, it is optional, Need R.
<i>InitialBWP-Only</i>	This field is optionally present, Need R, if this BWP is the initial BWP of SpCell. Otherwise, the field is absent.
<i>SharedRO</i>	The field is mandatory present if the 2-step random access type occasions are shared with 4-step random access type, otherwise the field is not present.

– *RACH-ConfigDedicated*

The IE *RACH-ConfigDedicated* is used to specify the dedicated random access parameters.

RACH-ConfigDedicated information element

```
-- ASN1START
-- TAG-RACH-CONFIGDEDICATED-START
```

```
RACH-ConfigDedicated ::= SEQUENCE {
    cfra                CFRA                                OPTIONAL, -- Need S
    ra-Prioritization   RA-Prioritization                   OPTIONAL, -- Need N
    ...,
    [[
        ra-PrioritizationTwoStep-r16  RA-Prioritization    OPTIONAL, -- Need N
        cfra-TwoStep-r16              CFRA-TwoStep-r16     OPTIONAL  -- Need S
    ]]
}

CFRA ::= SEQUENCE {
    occasions SEQUENCE {
        rach-ConfigGeneric    RACH-ConfigGeneric,
        ssb-perRACH-Occasion  ENUMERATED {oneEighth, oneFourth, oneHalf, one, two, four, eight, sixteen}
    }
}
```

OPTIONAL, -- Cond Mandatory
OPTIONAL, -- Need S

```

resources
  ssb
    ssb-ResourceList
    ra-ssb-OccasionMaskIndex
  },
  csirs
    csirs-ResourceList
    rsrp-ThresholdCSI-RS
  }
},
...
[[
totalNumberOfRA-Preambles INTEGER (1..63)
]],
[[
msg1-RepetitionNum-r18
]]
}

CFRA-TwoStep-r16 ::=
  occasionsTwoStepRA-r16
  rach-ConfigGenericTwoStepRA-r16
  ssb-PerRACH-OccasionTwoStepRA-r16

  }
  msgA-CFRA-PUSCH-r16
  msgA-TransMax-r16
  resourcesTwoStep-r16
    ssb-ResourceList
    ra-ssb-OccasionMaskIndex
  },
  ...
}

CFRA-SSB-Resource ::=
  ssb
  ra-PreambleIndex
  ...
  [[
  msgA-PUSCH-Resource-Index-r16
  ]]
}

CFRA-CSIRS-Resource ::=
  csi-RS
  ra-OccasionList
  ra-PreambleIndex
  ...
}

-- TAG-RACH-CONFIGDEDICATED-STOP
-- ASN1STOP

```

CFRA-CSIRS-Resource field descriptions
csi-RS The ID of a CSI-RS resource defined in the measurement object associated with this serving cell.
ra-OccasionList RA occasions that the UE shall use when performing CF-RA upon selecting the candidate beam identified by this CSI-RS. The network ensures that the RA occasion indexes provided herein are also configured by prach-ConfigurationIndex and msg1-FDM. Each RACH occasion is sequentially numbered, first, in increasing order of frequency resource indexes for frequency multiplexed PRACH occasions; second, in increasing order of time resource indexes for time multiplexed PRACH occasions within a PRACH slot and Third, in increasing order of indexes for PRACH slots.
ra-PreambleIndex The RA preamble index to use in the RA occasions associated with this CSI-RS.
CFRA field descriptions
msg1-RepetitionNum Indicates the MSG1 repetition number used for contention free 4-step random access type in TS 38.321 [3]. If this field is absent, the UE performs contention free 4-step random access without MSG1-Repetitions.
occasions RA occasions for contention free random access. If the field is absent, the UE uses the RA occasions configured in <i>RACH-ConfigCommon</i> in the first active UL BWP.
ra-ssb-OccasionMaskIndex Explicitly signalled PRACH Mask Index for RA Resource selection in TS 38.321 [3]. The mask is valid for all SSB resources signalled in <i>ssb-ResourceList</i> . The UE shall ignore this field if the field <i>msg1-RepetitionNum</i> included in <i>CFRA</i> is configured.
rach-ConfigGeneric Configuration of contention free random access occasions for CFRA. The UE shall ignore <i>preambleReceivedTargetPower</i> , <i>preambleTransMax</i> , <i>powerRampingStep</i> , <i>ra-ResponseWindow</i> signaled within this field and use the corresponding values provided in <i>RACH-ConfigCommon</i> .
ssb-perRACH-Occasion Number of SSBs per RACH occasion.
totalNumberOfRA-Preambles Total number of preambles used for contention free random access in the RACH resources defined in CFRA, excluding preambles used for other purposes (e.g. for SI request). If the field is absent but the field <i>occasions</i> is present, the UE may assume all the 64 preambles are for RA. The setting should be consistent with the setting of <i>ssb-perRACH-Occasion</i> , if present, i.e. it should be a multiple of the number of SSBs per RACH occasion.
CFRA-SSB-Resource field descriptions
msgA-PUSCH-Resource-Index Identifies the index of the PUSCH resource used for MSGA CFRA. The PUSCH resource index indicates a valid PUSCH occasion (as specified in TS 38.213 [13], clause 8.1A) and the associated DMRS resources corresponding to a PRACH slot. The PUSCH resource indexes are sequentially numbered and are mapped to valid PUSCH occasions corresponding to a PRACH slot which are ordered, first, in increasing order of frequency resource indexes for frequency multiplexed PUSCH occasions; second, in increasing order of DMRS resource indexes within a PUSCH occasion, where a $DMRS_{id}$ resource index is determined first in an ascending order of a DMRS port index and then in an ascending order of a DMRS sequence index, third in increasing order of time resource indexes for time multiplexed PUSCH occasions within a PUSCH slot and fourth, in increasing order of indexes for PUSCH slots. For the case of contention free 2-step random access type, if this field is absent, the UE shall use the value 0.
ra-PreambleIndex The preamble index that the UE shall use when performing CF-RA upon selecting the candidate beams identified by this SSB.
ssb The ID of an SSB transmitted by this serving cell.

CFRA-<i>TwoStep</i> field descriptions
<i>msgA-CFRA-PUSCH</i> PUSCH resource configuration(s) for msgA CFRA.
<i>msgA-TransMax</i> Max number of MsgA preamble transmissions performed before switching to 4-step type random access (see TS 38.321 [3], clauses 5.1.1). This field is only applicable when 2-step and 4-step RA type are configured and switching to 4-step type RA is supported. If the field is absent in <i>cfra-TwoStep</i> , switching from 2-step RA type to 4-step RA type is not allowed.
<i>occasionsTwoStepRA</i> RA occasions for contention free random access. If the field is absent, the UE uses the RA occasions configured in <i>RACH-ConfigCommonTwoStepRA</i> in the first active UL BWP.
<i>ra-SSB-OccasionMaskIndex</i> Explicitly signalled PRACH Mask Index for RA Resource selection in TS 38.321 [3]. The mask is valid for all SSB resources signalled in <i>ssb-ResourceList</i> .
<i>rach-ConfigGenericTwoStepRA</i> Configuration of contention free random access occasions for CFRA 2-step random access type.
<i>ssb-PerRACH-OccasionTwoStep</i> Number of SSBs per RACH occasion for 2-step random access type.

RACH-ConfigDedicated field descriptions
<i>cfra</i> Parameters for contention free random access to a given target cell. If this field and <i>cfra-TwoStep</i> are absent, the UE performs contention based random access.
<i>cfra-TwoStep</i> Parameters for contention free 2-step random access type to a given target cell. Network ensures that <i>cfra</i> and <i>cfra-TwoStep</i> are not configured at the same time. If this field and <i>cfra</i> are absent, the UE performs contention based random access.
<i>ra-prioritization</i> Parameters which apply for prioritized random access procedure to a given target cell (see TS 38.321 [3], clause 5.1.1).
<i>ra-PrioritizationTwoStep</i> Parameters which apply for prioritized 2-step random access type procedure to a given target cell (see TS 38.321 [3], clause 5.1.1).

Conditional Presence	Explanation
<i>Mandatory</i>	The field is mandatory present.
<i>Occasions</i>	The field is optionally present, Need S, if the field <i>occasions</i> is present, otherwise it is absent.
<i>2StepCFRA</i>	The field is optionally present for the case of 2-step RA type contention free random access, Need S, otherwise it is absent.
<i>4StepCFRArep</i>	For non-(e)RedCap UEs, the field is optionally present, Need S, if <i>resources</i> is set to <i>ssb</i> and there is one <i>FeatureCombinationPreambles</i> entry indicating only <i>msg1-Repetitions</i> which is associated with the same Msg1 repetition number. For RedCap UEs or if RedCap is considered to be applicable for this Random Access procedure for eRedCap UEs, the field is optionally present, Need S, if <i>resources</i> is set to <i>ssb</i> and there is one <i>FeatureCombinationPreambles</i> entry indicating only <i>redCap</i> and <i>msg1-Repetitions</i> which is associated with the same Msg1 repetition number. For eRedCap UEs, if eRedCap is considered to be applicable for this Random Access procedure, the field is optional present, Need S, if <i>resource</i> is set to <i>ssb</i> and there is one <i>FeatureCombinationPreambles</i> entry indicating only <i>eRedCap</i> and <i>msg1-Repetitions</i> which is associated with the same Msg1 repetition number. Otherwise, it is absent.

– *RACH-ConfigGeneric*

The IE *RACH-ConfigGeneric* is used to specify the random-access parameters both for regular random access as well as for beam failure recovery.

RACH-ConfigGeneric information element

```
-- ASN1START
-- TAG-RACH-CONFIGGENERIC-START

RACH-ConfigGeneric ::=
    prach-ConfigurationIndex          SEQUENCE {
        msg1-FDM                      INTEGER (0..255),
        msg1-FrequencyStart           ENUMERATED {one, two, four, eight},
        zeroCorrelationZoneConfig     INTEGER (0..maxNrofPhysicalResourceBlocks-1),
        preambleReceivedTargetPower   INTEGER (0..15),
        preambleTransMax              INTEGER (-202..-60),
        powerRampingStep              ENUMERATED {n3, n4, n5, n6, n7, n8, n10, n20, n50, n100, n200},
        ra-ResponseWindow             ENUMERATED {dB0, dB2, dB4, dB6},
        ra-ResponseWindow             ENUMERATED {sl1, sl2, sl4, sl8, sl10, sl20, sl40, sl80},
        ...,
        [[
            prach-ConfigurationPeriodScaling-IAB-r16  ENUMERATED {scf1, scf2, scf4, scf8, scf16, scf32, scf64}      OPTIONAL, -- Need R
            prach-ConfigurationFrameOffset-IAB-r16    INTEGER (0..63)                                OPTIONAL, -- Need R
            prach-ConfigurationSOffset-IAB-r16        INTEGER (0..39)                                OPTIONAL, -- Need R
            ra-ResponseWindow-v1610                  ENUMERATED {sl60, sl160}                        OPTIONAL, -- Need R
            prach-ConfigurationIndex-v1610           INTEGER (256..262)                        OPTIONAL, -- Need R
        ]],
        [[
            ra-ResponseWindow-v1700                  ENUMERATED {sl240, sl320, sl640, sl960, sl1280, sl1920, sl2560} OPTIONAL -- Need R
        ]]
    ]
}

-- TAG-RACH-CONFIGGENERIC-STOP
-- ASN1STOP
```


<i>RACH-ConfigGeneric</i> field descriptions
<i>msg1-FDM</i> The number of PRACH transmission occasions FDMed in one time instance. (see TS 38.211 [16], clause 6.3.3.2).
<i>msg1-FrequencyStart</i> Offset of lowest PRACH transmission occasion in frequency domain with respect to PRB 0. The value is configured so that the corresponding RACH resource is entirely within the bandwidth of the UL BWP. (see TS 38.211 [16], clause 6.3.3.2).
<i>powerRampingStep</i> Power ramping steps for PRACH (see TS 38.321 [3], 5.1.3). This field is set to the same value for different repetition numbers associated with a specific <i>FeatureCombination</i> .
<i>prach-ConfigurationFrameOffset-IAB</i> Frame offset for ROs defined in the baseline configuration indicated by <i>prach-ConfigurationIndex</i> and is used only by the IAB-MT. (see TS 38.211 [16], clause 6.3.3.2).
<i>prach-ConfigurationIndex</i> PRACH configuration index. For <i>prach-ConfigurationIndex</i> configured under <i>beamFailureRecoveryConfig</i> , the <i>prach-ConfigurationIndex</i> can only correspond to the short preamble format, (see TS 38.211 [16], clause 6.3.3.2). If the field <i>prach-ConfigurationIndex-v1610</i> is present, the UE shall ignore the value provided in <i>prach-ConfigurationIndex</i> (without suffix).
<i>prach-ConfigurationPeriodScaling-IAB</i> Scaling factor to extend the periodicity of the baseline configuration indicated by <i>prach-ConfigurationIndex</i> and is used only by the IAB-MT. Value <i>scf1</i> corresponds to scaling factor of 1 and so on. (see TS 38.211 [16], clause 6.3.3.2).
<i>prach-ConfigurationSOffset-IAB</i> Subframe/Slot offset for ROs defined in the baseline configuration indicated by <i>prach-ConfigurationIndex</i> and is used only by the IAB-MT. (see TS 38.211 [16], clause 6.3.3.2).
<i>preambleReceivedTargetPower</i> The target power level at the network receiver side (see TS 38.213 [13], clause 7.4, TS 38.321 [3], clauses 5.1.2, 5.1.3). Only multiples of 2 dBm may be chosen (e.g. -202, -200, -198, ...). This field is set to the same value for different repetition numbers associated with a specific <i>FeatureCombination</i> .
<i>preambleTransMax</i> Max number of RA preamble transmission performed before declaring a failure (see TS 38.321 [3], clauses 5.1.4, 5.1.5). The UE shall ignore this field in case <i>rach-ConfigGeneric</i> is included within an <i>EarlyUL-SyncConfig</i> IE.
<i>ra-ResponseWindow</i> Msg2 (RAR) window length in number of slots. The network configures a value lower than or equal to 10 ms when Msg2 is transmitted in licensed spectrum and a value lower than or equal to 40 ms when Msg2 is transmitted with shared spectrum channel access (see TS 38.321 [3], clause 5.1.4). UE ignores the field if included in <i>SCellConfig</i> . If <i>ra-ResponseWindow-v1610</i> or <i>ra-ResponseWindow-v1700</i> is signalled, UE shall ignore the <i>ra-ResponseWindow</i> (without suffix). The field <i>ra-ResponseWindow-v1700</i> is applicable to SCS 480 kHz and SCS 960 kHz. The UE shall ignore this field in case <i>rach-ConfigGeneric</i> is included within an <i>EarlyUL-SyncConfig</i> IE.
<i>zeroCorrelationZoneConfig</i> N-CS configuration, see Table 6.3.3.1-5 in TS 38.211 [16].

– ***RACH-ConfigGenericTwoStepRA***

The IE *RACH-ConfigGenericTwoStepRA* is used to specify the 2-step random access type parameters.

RACH-ConfigGenericTwoStepRA information element

```
-- ASN1START
-- TAG-RACH-CONFIGGENERIC2WOSTEPRA-START
```

```
RACH-ConfigGenericTwoStepRA-r16 ::= SEQUENCE {
    msgA-PRACH-ConfigurationIndex-r16    INTEGER (0..262)                OPTIONAL, -- Cond 2StepOnly
    msgA-RO-FDM-r16                      ENUMERATED {one, two, four, eight}  OPTIONAL, -- Cond 2StepOnly
    msgA-RO-FrequencyStart-r16           INTEGER (0..maxNrofPhysicalResourceBlocks-1)  OPTIONAL, -- Cond 2StepOnly
}
```

```
msgA-ZeroCorrelationZoneConfig-r16      INTEGER (0..15)
msgA-PreamblePowerRampingStep-r16        ENUMERATED {dB0, dB2, dB4, dB6}
msgA-PreambleReceivedTargetPower-r16     INTEGER (-202..-60)
msgB-ResponseWindow-r16                  ENUMERATED {sl1, sl2, sl4, sl8, sl10, sl20, sl40, sl80, sl160, sl320}

preambleTransMax-r16                     ENUMERATED {n3, n4, n5, n6, n7, n8, n10, n20, n50, n100, n200}
...
[[
msgB-ResponseWindow-v1700                 ENUMERATED {sl240, sl640, sl960, sl1280, sl1920, sl2560}
]]
}

-- TAG-RACH-CONFIGGENERIC2WOSTEPRA-STOP
-- ASN1STOP
```

<i>RACH-ConfigGenericTwoStepRA</i> field descriptions
<i>msgA-PreamblePowerRampingStep</i> Power ramping steps for msgA PRACH. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i>, the UE shall apply the corresponding value in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i>. If the field is absent in other cases, UE shall use the value of <i>powerRampingStep</i> in <i>RACH-ConfigGeneric</i> in the configured BWP (see TS 38.321 [3], 5.1.3). This field may only be present if no 4-step type RA is configured in the BWP or in the case of separate ROs with 4-step type RA. The field is absent if <i>RACH-ConfigGenericTwoStepRA</i> is included in <i>CFRA-TwoStep</i> in <i>RACH-ConfigDedicated</i> and then the UE uses the value of <i>msgA-PreamblePowerRampingStep</i> in <i>RACH-ConfigGenericTwoStepRA</i> configured for CBRA.
<i>msgA-PreambleReceivedTargetPower</i> The target power level at the network receiver side (see TS 38.213 [13], clause 7.1.1 and TS 38.321 [3], clause 5.1.1). Only multiples of 2 dBm may be chosen (e.g -202, -200, -198, ...). If the field is absent, UE shall use the value of <i>preambleReceivedTargetPower</i> in <i>RACH-ConfigGeneric</i> in the configured BWP. This field may only be present if no 4-step type RA is configured in the BWP. The field is absent if <i>RACH-ConfigGenericTwoStepRA</i> is included in <i>CFRA-TwoStep</i> in <i>RACH-ConfigDedicated</i> and then the UE uses the value of <i>msgA-PreambleReceivedTargetPower</i> in <i>RACH-ConfigGenericTwoStepRA</i> configured for CBRA.
<i>msgA-PRACH-ConfigurationIndex</i> Cell-specific PRACH configuration index for 2-step RA type. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> which is configured directly within a BWP (i.e. not within <i>AdditionalRACH-Config</i>), the UE shall use the value of corresponding 4-step random access parameter in the configured BWP. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i>, the UE shall apply the corresponding value in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i>. If the value is in the range of 256 to 262, the field <i>prach-ConfigurationIndex-v1610</i> should be considered configured (see TS 38.211 [16], clause 6.3.3.2). This field may only be present if no 4-step type RA is configured in the BWP or in the case of separate ROs with 4-step type RA.
<i>msgA-RO-FDM</i> The number of msgA PRACH transmission occasions Frequency-Division Multiplexed in one time instance. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> which is configured directly within a BWP (i.e. not within <i>AdditionalRACH-Config</i>), UE shall use value of <i>msg1-FDM</i> in <i>RACH-ConfigGeneric</i> in the configured BWP. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i>, the UE shall apply the value of <i>msg1-FDM</i> in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i> (see TS 38.211 [16], clause 6.3.3.2). This field may only be present if no 4-step type RA is configured in the BWP or in the case of separate ROs with 4-step type RA.
<i>msgA-RO-FrequencyStart</i> Offset of lowest PRACH transmissions occasion in frequency domain with respect to PRB 0. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> which is configured directly within a BWP (i.e. not within <i>AdditionalRACH-Config</i>), UE shall use value of <i>msg1-FrequencyStart</i> in <i>RACH-ConfigGeneric</i> in the configured BWP. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i>, the UE shall apply the value of <i>msg1-FrequencyStart</i> in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i> (see TS 38.211 [16], clauses 5.3.2 and 6.3.3.2). This field may only be present if no 4-step type RA is configured in the BWP or in the case of separate ROs with 4-step type RA.
<i>msgA-ZeroCorrelationZoneConfig</i> N-CS configuration for msgA preamble, see Table 6.3.3.1-5 in TS 38.211 [16]. If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i>, the UE shall apply the corresponding value in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i>. If the field is absent in other cases, UE shall use value <i>zeroCorrelationZoneConfig</i> in <i>RACH-ConfigGeneric</i> in the configured BWP. This field may only be present if no 4-step type RA is configured in the BWP or in the case of separate ROs with 4-step type RA.
<i>msgB-ResponseWindow</i> MsgB monitoring window length in number of slots. The network configures a value lower than or equal to 40ms (see TS 38.321 [3], clause 5.1.1). The network does not configure <i>msgB-ResponseWindow-r16</i> simultaneously with <i>msgB-ResponseWindow-v1700</i>, and if both fields are absent, the UE uses the value of <i>msgB-ResponseWindow</i> in <i>RACH-ConfigGenericTwoStepRA</i> configured for CBRA.
<i>preambleTransMax</i> Max number of RA preamble transmission performed before declaring a failure (see TS 38.321 [3], clauses 5.1.4, 5.1.5). If the field is absent in <i>RACH-ConfigCommonTwoStepRA</i> in <i>AdditionalRACH-Config</i>, the UE shall apply the corresponding value in <i>RACH-ConfigCommon</i> in the same <i>AdditionalRACH-Config</i>. If the field is absent in other cases, UE shall use the value of <i>preambleTransMax</i> in <i>RACH-ConfigGeneric</i> in the configured BWP. The field is absent if <i>RACH-ConfigGenericTwoStepRA</i> is included in <i>CFRA-TwoStep</i> in <i>RACH-ConfigDedicated</i> and then the UE uses the value of <i>preambleTransMax</i> in <i>RACH-ConfigGenericTwoStepRA</i> configured for CBRA.

Conditional Presence	Explanation
<i>2StepOnly</i>	The field is mandatory present in <i>msgA-ConfigCommon</i> field in <i>BWP-UplinkCommon</i> if <i>rach-ConfigCommon</i> field is absent in this <i>BWP-UplinkCommon</i> , otherwise the field is optionally present in <i>msgA-ConfigCommon</i> field in <i>BWP-UplinkCommon</i> , Need S. The field is mandatory present in <i>msgA-ConfigCommon</i> in <i>AdditionalRACH-Config</i> if <i>rach-ConfigCommon</i> field is absent in this <i>AdditionalRACH-Config</i> , otherwise the field is optionally present in <i>msgA-ConfigCommon</i> field in <i>AdditionalRACH-Config</i> , Need S.
<i>2StepOnlyNoCFRA</i>	The field is mandatory present if <i>RACH-ConfigGenericTwoStepRA</i> is included in the <i>RACH-ConfigCommonTwoStepRA</i> and there are no 4-step random access configurations configured in the BWP (i.e only 2-step random access type configured in the BWP), otherwise (i.e. 4-step random access configuration also exists in the BWP) the field is optionally present, Need S. When <i>RACH-ConfigGenericTwoStepRA</i> is included in the <i>RACH-ConfigDedicated</i> , this field is absent.
<i>NoCFRA</i>	The field is mandatory present if <i>msgB-ResponseWindow-r17</i> is absent and <i>RACH-ConfigGenericTwoStepRA</i> is not included in <i>CFRA-TwoStep</i> in <i>RACH-ConfigDedicated</i> , otherwise the field is absent, Need S.
<i>NoCFRA2</i>	The field is mandatory present if <i>msgB-ResponseWindow-r16</i> is absent and <i>RACH-ConfigGenericTwoStepRA</i> is not included in <i>CFRA-TwoStep</i> in <i>RACH-ConfigDedicated</i> , otherwise the field is absent, Need S.

– *RACH-ConfigTwoTA*

The IE *RACH-ConfigTwoTA* is used to specify random access parameters for each additional PCI configured for the serving cell.

RACH-ConfigTwoTA information element

```
-- ASN1START
-- TAG-RACH-CONFIGTWOTA-START

RACH-ConfigTwoTA-r18 ::= SEQUENCE {
    additionalPCI-andRACH-Index-r18 AdditionalPCIIndex-r17,
    rach-ConfigGeneric-r18 RACH-ConfigGeneric,
    ssb-perRACH-Occasion-r18 ENUMERATED {oneEighth, oneFourth, oneHalf, one, two, four, eight, sixteen} OPTIONAL, -- Need M
    prach-RootSequenceIndex-r18 CHOICE {
        l839 INTEGER (0..837),
        l139 INTEGER (0..137),
        l571 INTEGER (0..569),
        l1151 INTEGER (0..1149)
    },
    msg1-SubcarrierSpacing-r18 SubcarrierSpacing OPTIONAL, -- Cond L139
    ...
    [[
        twoTA-restrictedSetConfig-r18 ENUMERATED {unrestrictedSet, restrictedSetTypeA, restrictedSetTypeB} OPTIONAL -- Need R
    ]]
}

-- TAG-RACH-CONFIGTWOTA-STOP
-- ASN1STOP
```

RACH-ConfigTwoTA field descriptions	
additionalPCI-andRACH-Index	Indicates the associated PCI to this random access configuration.
msg1-SubcarrierSpacing	Subcarrier spacing of PRACH when prach-RootSequenceIndex has value set to l139 (see TS 38.211 [16], clause 5.3.2). Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz. If absent, the UE applies the SCS as derived from the <i>prach-ConfigurationIndex</i> in <i>RACH-ConfigGeneric</i> (see tables Table 6.3.3.1-1, Table 6.3.3.1-2, Table 6.3.3.2-2 and Table 6.3.3.2-3, TS 38.211 [16]).
prach-RootSequenceIndex	PRACH root sequence index (see TS 38.211 [16], clause 6.3.3.1). The value range depends on whether L=839, L=139, L=571 or L=1151. For FR2-2, only the following values are applicable depending on the used subcarrier spacing: 120 kHz: L=139, L=571, and L=1151 480 kHz: L=139, and L=571 960 kHz: L=139
rach-ConfigGeneric	RACH parameters for contention free random access occasions for CFRA.
ssb-perRACH-Occasion	Number of SSBs per RACH occasion.
twoTA-restrictedSetConfig	Configuration of an unrestricted set or one of two types of restricted sets associated with additional PCI, see TS 38.211 [16], clause 6.3.3.1.

Conditional Presence	Explanation
L139	The field is mandatory present if <i>prach-RootSequenceIndex</i> L=139, or if L=571 for FR2-2, otherwise the field is absent, Need S.

– RA-Prioritization

The IE *RA-Prioritization* is used to configure prioritized random access.

RA-Prioritization information element

```
-- ASN1START
-- TAG-RA-PRIORITIZATION-START

RA-Prioritization ::= SEQUENCE {
    powerRampingStepHighPriority    ENUMERATED {dB0, dB2, dB4, dB6},
    scalingFactorBI                 ENUMERATED {zero, dot25, dot5, dot75}
    ...
}

-- TAG-RA-PRIORITIZATION-STOP
-- ASN1STOP
```

OPTIONAL, -- Need R

RA-Prioritization field descriptions
powerRampingStepHighPriority Power ramping step applied for prioritized random access procedure.
scalingFactorBI Scaling factor for the backoff indicator (BI) for the prioritized random access procedure. (see TS 38.321 [3], clause 5.1.4). Value <i>zero</i> corresponds to 0, value <i>dot25</i> corresponds to 0.25 and so on.

— RA-PrioritizationForSlicing

The IE *RA-PrioritizationForSlicing* is used to configure prioritized random access for slicing.

RA-PrioritizationForSlicing information element

```
-- ASN1START
-- TAG-RA-PRIORITIZATIONFORSLICING-START

RA-PrioritizationForSlicing-r17 ::= SEQUENCE {
    ra-PrioritizationSliceInfoList-r17 RA-PrioritizationSliceInfoList-r17,
    ...
}

RA-PrioritizationSliceInfoList-r17 ::= SEQUENCE (SIZE (1..maxSliceInfo-r17)) OF RA-PrioritizationSliceInfo-r17

RA-PrioritizationSliceInfo-r17 ::= SEQUENCE {
    nsag-ID-List-r17 SEQUENCE (SIZE (1..maxSliceInfo-r17)) OF NSAG-ID-r17,
    ra-Prioritization-r17 RA-Prioritization,
    ...
}

-- TAG-RA-PRIORITIZATIONFORSLICING-STOP
-- ASN1STOP
```

— RadioBearerConfig

The IE *RadioBearerConfig* is used to add, modify and release signalling, multicast MRBs and/or data radio bearers. Specifically, this IE carries the parameters for PDCP and, if applicable, SDAP entities for the radio bearers.

RadioBearerConfig information element

```
-- ASN1START
-- TAG-RADIOBEARERCONFIG-START

RadioBearerConfig ::= SEQUENCE {
    srb-ToAddModList SRB-ToAddModList OPTIONAL, -- Cond HO-Conn
    srb3-ToRelease ENUMERATED{true} OPTIONAL, -- Need N
    drb-ToAddModList DRB-ToAddModList OPTIONAL, -- Cond HO-toNR
}
```

drb-ToReleaseList	DRB-ToReleaseList	OPTIONAL,	-- Need N
securityConfig	SecurityConfig	OPTIONAL,	-- Need M
...			
[[			
mrB-ToAddModList-r17	MRB-ToAddModList-r17	OPTIONAL,	-- Need N
mrB-ToReleaseList-r17	MRB-ToReleaseList-r17	OPTIONAL,	-- Need N
srb4-ToAddMod-r17	SRB-ToAddMod	OPTIONAL,	-- Need N
srb4-ToRelease-r17	ENUMERATED{true}	OPTIONAL	-- Need N
]],			
[[			
srb5-ToAddMod-r18	SRB-ToAddMod	OPTIONAL,	-- Need N
srb5-ToRelease-r18	ENUMERATED{true}	OPTIONAL	-- Need N
]]			
}]			
SRB-ToAddModList ::=	SEQUENCE (SIZE (1..2)) OF SRB-ToAddMod		
SRB-ToAddMod ::=	SEQUENCE {		
srb-Identity	SRB-Identity,	OPTIONAL,	-- Need N
reestablishPDCP	ENUMERATED{true}	OPTIONAL,	-- Need N
discardOnPDCP	ENUMERATED{true}	OPTIONAL,	-- Cond PDCP
pdcP-Config	PDCP-Config		
...			
[[			
srb-Identity-v1700	SRB-Identity-v1700	OPTIONAL	-- Need M
]],			
[[			
srb-Identity-v1800	SRB-Identity-v1800	OPTIONAL,	-- Need M
n3c-BearerAssociated-r18	ENUMERATED{true}	OPTIONAL	-- Cond N3C MP
]]			
}]			
DRB-ToAddModList ::=	SEQUENCE (SIZE (1..maxDRB)) OF DRB-ToAddMod		
DRB-ToAddMod ::=	SEQUENCE {		
cnAssociation	CHOICE {		
eps-BearerIdentity	INTEGER (0..15),		
sdap-Config	SDAP-Config		
}		OPTIONAL,	-- Cond DRBSetup
drb-Identity	DRB-Identity,	OPTIONAL,	-- Need N
reestablishPDCP	ENUMERATED{true}	OPTIONAL,	-- Need N
recoverPDCP	ENUMERATED{true}	OPTIONAL,	-- Cond PDCP
pdcP-Config	PDCP-Config		
...			
[[			
daps-Config-r16	ENUMERATED{true}	OPTIONAL	-- Cond DAPS
]],			
[[			
n3c-BearerAssociated-r18	ENUMERATED{true}	OPTIONAL	-- Cond N3C MP
]]			
}]			
DRB-ToReleaseList ::=	SEQUENCE (SIZE (1..maxDRB)) OF DRB-Identity		
SecurityConfig ::=	SEQUENCE {		

<pre> securityAlgorithmConfig keyToUse ... } MRB-ToAddModList-r17 ::= MRB-ToAddMod-r17 ::= mbs-SessionId-r17 mrb-Identity-r17 mrb-IdentityNew-r17 reestablishPDCP-r17 recoverPDCP-r17 pdcp-Config-r17 ... } MRB-ToReleaseList-r17 ::= -- TAG-RADIOBEARERCONFIG-STOP -- ASN1STOP </pre>	<pre> SecurityAlgorithmConfig ENUMERATED{master, secondary} SEQUENCE (SIZE (1..maxMRB-r17)) OF MRB-ToAddMod-r17 SEQUENCE { TMGI-r17 MRB-Identity-r17, MRB-Identity-r17 ENUMERATED{true} ENUMERATED{true} PDCP-Config SEQUENCE (SIZE (1..maxMRB-r17)) OF MRB-Identity-r17 </pre>	<pre> OPTIONAL, -- Cond RBTermChange1 OPTIONAL, -- Cond RBTermChange OPTIONAL, -- Cond MRBSetup OPTIONAL, -- Need N OPTIONAL, -- Need N OPTIONAL, -- Need N OPTIONAL, -- Cond PDCP </pre>

<i>DRB-ToAddMod and MRB-ToAddMod field descriptions</i>
<i>cnAssociation</i> Indicates if the bearer is associated with the <i>eps-bearerIdentity</i> (when connected to EPC) or <i>sdap-Config</i> (when connected to 5GC).
<i>daps-Config</i> Indicates that the bearer is configured as DAPS bearer. The network does not include this field in an <i>RRCReconfiguration</i> message contained within a <i>LTM-Config</i> IE.
<i>drb-Identity</i> In case of DC, the DRB identity is unique within the scope of the UE, i.e. an MCG DRB cannot use the same value as a split DRB. For a split DRB the same identity is used for the MCG and SCG parts/indirect path of the configuration.
<i>eps-BearerIdentity</i> The EPS bearer ID determines the EPS bearer.
<i>mbs-SessionId</i> Indicates which multicast MBS session the bearer is associated with.
<i>mrbi-Identity</i> Identification of the multicast MRB.
<i>mrbi-IdentityNew</i> New identity of the multicast MRB when <i>mrbi-Identity</i> needs to be changed, e.g. as a result of a handover.
<i>n3c-BearerAssociated</i> Indicates that the radio bearer is associated with the N3C indirect path.
<i>reestablishPDCP</i> Indicates that PDCP should be re-established. Network sets this to <i>true</i> whenever the security key used for this radio bearer changes. Key change could for example be due to termination point change for the bearer, reconfiguration with sync, resuming an RRC connection, or the first reconfiguration after reestablishment. It is also applicable for LTE procedures when NR PDCP is configured. Network doesn't include this field for DRB if the bearer is configured as DAPS bearer, if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message within the <i>LTM-Config</i> IE, or if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message associated with subsequent CPAC within the <i>ConditionalReconfiguration</i> IE
<i>recoverPDCP</i> Indicates that PDCP should perform recovery according to TS 38.323 [5]. Network doesn't include this field if the bearer is configured as DAPS bearer, if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message within the <i>LTM-Config</i> IE, or if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message associated with subsequent CPAC within the <i>ConditionalReconfiguration</i> IE.
<i>sdap-Config</i> The SDAP configuration determines how to map QoS flows to DRBs when NR or E-UTRA connects to the 5GC and presence/absence of UL/DL SDAP headers.

<i>RadioBearerConfig field descriptions</i>
<i>securityConfig</i> Indicates the security algorithm and key to use for the signalling and data radio bearers configured with the list in this IE <i>RadioBearerConfig</i> . When the field is not included after AS security has been activated, the UE shall continue to use the currently configured <i>keyToUse</i> and security algorithm for the radio bearers reconfigured with the lists in this IE <i>RadioBearerConfig</i> . The field is not included when configuring SRB1 before AS security is activated.
<i>srb3-ToRelease</i> Release SRB3. SRB3 release can only be done over SRB1 and only at SCG release and reconfiguration with sync.

SecurityConfig field descriptions
keyToUse Indicates if the bearers configured with the list in this IE <i>RadioBearerConfig</i> are using the master key or the secondary key for deriving ciphering and/or integrity protection keys. For MR-DC, network should not configure SRB1 and SRB2 with secondary key and SRB3 with the master key. When the field is not included, the UE shall continue to use the currently configured <i>keyToUse</i> for the radio bearers reconfigured with the lists in this IE <i>RadioBearerConfig</i> .
securityAlgorithmConfig Indicates the security algorithm for the signalling and data radio bearers configured with the list in this IE <i>RadioBearerConfig</i> . When the field is not included, the UE shall continue to use the currently configured security algorithm for the radio bearers reconfigured with the lists in this IE <i>RadioBearerConfig</i> .

SRB-ToAddMod field descriptions
discardOnPDCP Indicates that PDCP should discard stored SDU and PDU according to TS 38.323 [5]. Network doesn't include this field if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message associated with subsequent CPAC within the <i>ConditionalReconfiguration</i> IE which is received within a MCG <i>RRCReconfiguration</i> message via SRB1.
reestablishPDCP Indicates that PDCP should be re-established. Network sets this to <i>true</i> whenever the security key used for this radio bearer changes. Key change could for example be due to reconfiguration with sync, for SRB2 when resuming an RRC connection, or at the first reconfiguration after RRC connection reestablishment in NR. For SRB1, when resuming an RRC connection, or at the first reconfiguration after RRC connection reestablishment in NR, the network does not set this field to <i>true</i> . For LTE SRBs using NR PDCP, it could be for handover, RRC connection reestablishment or resume. Network doesn't include this field if any DAPS bearer is configured or if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message within the <i>LTM-Config</i> IE. For SRB3, network doesn't include this field if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message associated with subsequent CPAC within the <i>ConditionalReconfiguration</i> IE.
srb-Identity, srb-Identity-v1700, srb-Identity-v1800 Value 1 is applicable for SRB1 only. Value 2 is applicable for SRB2 only. Value 3 is applicable for SRB3 only. Value 4 is applicable for SRB4 only. Value 5 is applicable for SRB5 only. If <i>srb-Identity-v1700</i> or <i>srb-Identity-v1800</i> is received for an SRB, the UE shall ignore <i>srb-Identity</i> (i.e. without suffix) for this SRB.

Conditional Presence	Explanation
<i>RBTermChange</i>	The field is mandatory present in case of: - set up of signalling and data radio bearer, - change of termination point for the radio bearer between MN and SN. It is optionally present otherwise, Need S.
<i>RBTermChange1</i>	The field is mandatory present in case of: - set up of signalling and data radio bearer, - change of termination point for the radio bearer between MN and SN, - handover from E-UTRA/EPC or E-UTRA/5GC to NR, - handover from NR or E-UTRA/EPC to E-UTRA/5GC if the UE supports NGEN-DC. It is optionally present otherwise, Need S.
<i>PDCP</i>	The field is mandatory present if the corresponding DRB/multicast MRB is being setup or corresponding DRB/multicast MRB is reconfigured with NR PDCP or corresponding SRB associated with two RLC entities is being setup or if the number of RLC bearers associated with the DRB/multicast MRB or SRB is changed. The field is optionally present, Need S, if the corresponding SRB associated with one RLC entity is being setup or corresponding SRB is reconfigured with NR PDCP; otherwise the field is optionally present, need M.
<i>DRBSetup</i>	The field is mandatory present if the corresponding DRB is being setup; otherwise the field is optionally present, need M.
<i>HO-Conn</i>	The field is mandatory present - in case of inter-system handover from E-UTRA/EPC to E-UTRA/5GC or NR, - or when the <i>fullConfig</i> is included in the <i>RRCReconfiguration</i> message and NE-DC/NR-DC is not configured, - or in case of <i>RRCSetup</i>. Otherwise the field is optionally present, need N. Upon <i>RRCSetup</i> , only SRB1 can be present.
<i>HO-toNR</i>	If <i>mrbs-ToAddModList</i> is not included, the field is mandatory present for UEs other than NCR-MT - in case of inter-system handover from E-UTRA/EPC to E-UTRA/5GC or NR, - or when the <i>fullConfig</i> is included in the <i>RRCReconfiguration</i> message and NE-DC/NR-DC is not configured. In case of <i>RRCSetup</i> , the field is absent; otherwise the field is optionally present, need N.
<i>DAPS</i>	The field is optionally present, need N, in case masterCellGroup includes ReconfigurationWithSync, SCell(s) and SCG are not configured, multi-DCI/single-DCI based multi-TRP are not configured in any DL BWP, <i>supplementaryUplink</i> is not configured, ethernetHeaderCompression is not configured for the DRB, <i>conditionalReconfiguration</i> is not configured, and NR sidelink and V2X sidelink are not configured. Otherwise the field is absent.
<i>MRBSetup</i>	The field is mandatory present if the corresponding multicast MRB is being setup; otherwise the field is optionally present, need M.
<i>N3C MP</i>	The field is optionally present if the corresponding radio bearer is being setup for MP with N3C indirect path, need R. It is absent otherwise.

– *RadioLinkMonitoringConfig*

The IE *RadioLinkMonitoringConfig* is used to configure radio link monitoring for detection of beam- and/or cell radio link failure. See also TS 38.321 [3], clause 5.1.1.

***RadioLinkMonitoringConfig* information element**

```
-- ASN1START
-- TAG-RADIOLINKMONITORINGCONFIG-START
```

```

RadioLinkMonitoringConfig ::= SEQUENCE {
    failureDetectionResourcesToAddModList SEQUENCE (SIZE(1..maxNrofFailureDetectionResources)) OF RadioLinkMonitoringRS OPTIONAL, -- Need N
    failureDetectionResourcesToReleaseList SEQUENCE (SIZE(1..maxNrofFailureDetectionResources)) OF RadioLinkMonitoringRS-Id OPTIONAL, -- Need N
    beamFailureInstanceMaxCount ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10} OPTIONAL, -- Need R
    beamFailureDetectionTimer ENUMERATED {pbfd1, pbfd2, pbfd3, pbfd4, pbfd5, pbfd6, pbfd8, pbfd10} OPTIONAL, -- Need R
    ...,
    [[
        beamFailure-r17 BeamFailureDetection-r17 OPTIONAL -- Need R
    ]]
}

BeamFailureDetection-r17 ::= SEQUENCE {
    failureDetectionSet1-r17 BeamFailureDetectionSet-r17 OPTIONAL, -- Need R
    failureDetectionSet2-r17 BeamFailureDetectionSet-r17 OPTIONAL, -- Need R
    additionalPCI-r17 AdditionalPCIIndex-r17 OPTIONAL -- Need R
}

RadioLinkMonitoringRS ::= SEQUENCE {
    radioLinkMonitoringRS-Id RadioLinkMonitoringRS-Id,
    purpose ENUMERATED {beamFailure, rlf, both},
    detectionResource CHOICE {
        ssb-Index SSB-Index,
        csi-RS-Index NZP-CSI-RS-ResourceId
    },
    ...
}

BeamFailureDetectionSet-r17 ::= SEQUENCE {
    bfdResourcesToAddModList-r17 SEQUENCE (SIZE(1..maxNrofBFDResourcePerSet-r17)) OF BeamLinkMonitoringRS-r17 OPTIONAL, -- Need N
    bfdResourcesToReleaseList-r17 SEQUENCE (SIZE(1..maxNrofBFDResourcePerSet-r17)) OF BeamLinkMonitoringRS-Id-r17 OPTIONAL, -- Need N
    beamFailureInstanceMaxCount-r17 ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10} OPTIONAL, -- Need R
    beamFailureDetectionTimer-r17 ENUMERATED {pbfd1, pbfd2, pbfd3, pbfd4, pbfd5, pbfd6, pbfd8, pbfd10} OPTIONAL, -- Need R
    ...
}

BeamLinkMonitoringRS-r17 ::= SEQUENCE {
    beamLinkMonitoringRS-Id-r17 BeamLinkMonitoringRS-Id-r17,
    detectionResource-r17 CHOICE {
        ssb-Index SSB-Index,
        csi-RS-Index NZP-CSI-RS-ResourceId
    },
    ...
}

BeamLinkMonitoringRS-Id-r17 ::= INTEGER (0..maxNrofFailureDetectionResources-1-r17)

-- TAG-RADIOLINKMONITORINGCONFIG-STOP
-- ASN1STOP

```

RadioLinkMonitoringConfig field descriptions
additionalPCI Indicates the physical cell IDs (PCI) of the SSBs in the <i>failureDetectionSet2</i>. If <i>candidateBeamRS-List2</i> is configured in IE <i>BeamFailureRecoveryRSConfig</i> the field indicates the physical cell IDs (PCI) of the SSBs in the <i>candidateBeamRS-List2</i>.
beamFailureDetectionTimer Timer for beam failure detection (see TS 38.321 [3], clause 5.17). See also the <i>BeamFailureRecoveryConfig</i> IE. Value in number of "Q_{out,LR} reporting periods of Beam Failure Detection" Reference Signal (see TS 38.213 [13], clause 6). Value <i>pbfd1</i> corresponds to 1 Q_{out,LR} reporting period of Beam Failure Detection Reference Signal, value <i>pbfd2</i> corresponds to 2 Q_{out,LR} reporting periods of Beam Failure Detection Reference Signal and so on.
beamFailureInstanceMaxCount This field determines after how many beam failure events the UE triggers beam failure recovery (see TS 38.321 [3], clause 5.17). Value n1 corresponds to 1 beam failure instance, value n2 corresponds to 2 beam failure instances and so on.
failureDetectionResourcesToAddModList A list of reference signals for detecting beam failure and/or cell level radio link failure (RLF). The limits of the reference signals that the network can configure are specified in TS 38.213 [13], table 5-1. The network configures at most two detectionResources per BWP for the purpose <i>beamFailure</i> or <i>both</i>. If no RSs are provided for the purpose of beam failure detection, the UE performs beam monitoring based on the activated <i>TCI-State</i> for PDCCH as described in TS 38.213 [13], clause 6. If no RSs are provided in this list for the purpose of RLF detection, the UE performs Cell-RLM based on the activated <i>TCI-State</i> of PDCCH as described in TS 38.213 [13], clause 5. The network ensures that the UE has a suitable set of reference signals for performing cell-RLM. If <i>failureDetectionSet1-r17</i> and <i>failureDetectionSet2-r17</i> are present, the <i>purpose</i> of <i>RadioLinkMonitoringRS</i> in <i>failureDetectionResourcesToAddModList</i> only can be set to <i>rlf</i>.
failureDetectionSet1, failureDetectionSet2 Configures parameters for beamfailure detection towards beam failure detection resources configured in the set. If additional PCIs are configured using <i>additionalPCI-ToAddModList</i> for the serving cell, each RS in one set can be associated only with one PCI. Network always configures the <i>failureDetectionSet1</i> and <i>failureDetectionSet2</i> together. <i>failureDetectionSetN</i> is present if and only if <i>candidateBeamRS-List2-r17</i> is configured. When a <i>failureDetectionSetN</i> is present, after the reconfiguration, the UE shall consider all the reference signals for this failure detection set as activated if at most <i>maxBFD-RS-resourcesPerSetPerBWP-r17</i> reference signals are configured for each failure detection set, otherwise the UE shall consider all the reference signals in this failure detection set as deactivated. If <i>bfdResourcesToAddModList-r17</i> in <i>failureDetectionSetN</i> is not present, the UE determines the RS(es) in each <i>failureDetectionSetN</i> as described in TS 38.213 [13], clause 6.

RadioLinkMonitoringRS field descriptions
detectionResource A reference signal that the UE shall use for radio link monitoring or beam failure detection (depending on the indicated <i>purpose</i>). Only periodic 1-port CSI-RS can be configured on SCell for beam failure detection purpose.
purpose Determines whether the UE shall monitor the associated reference signal for the purpose of cell- and/or beam failure detection. For SCell, network only configures the value to beamFailure.

– RadioLinkMonitoringRS-Id

The IE *RadioLinkMonitoringRS-Id* is used to identify one *RadioLinkMonitoringRS*.

RadioLinkMonitoringRS-Id information element

-- ASN1START
 -- TAG-RADIOLINKMONITORINGRS-ID-START

RadioLinkMonitoringRS-Id ::= INTEGER (0..maxNrofFailureDetectionResources-1)

```
-- TAG-RADIOLINKMONITORINGRS-ID-STOP
-- ASN1STOP
```

— *RAN-AreaCode*

The IE *RAN-AreaCode* is used to identify a RAN area within the scope of a tracking area.

RAN-AreaCode information element

```
-- ASN1START
-- TAG-RAN-AREACODE-START
```

```
RAN-AreaCode ::= INTEGER (0..255)
```

```
-- TAG-RAN-AREACODE-STOP
-- ASN1STOP
```

— *RateMatchPattern*

The IE *RateMatchPattern* is used to configure one rate matching pattern for PDSCH, see TS 38.214 [19], clause 5.1.4.1.

RateMatchPattern information element

```
-- ASN1START
-- TAG-RATEMATCHPATTERN-START
```

```
RateMatchPattern ::= SEQUENCE {
    rateMatchPatternId
        RateMatchPatternId,
    patternType
        CHOICE {
            bitmaps
                SEQUENCE {
                    resourceBlocks
                        BIT STRING (SIZE (275)),
                    symbolsInResourceBlock
                        CHOICE {
                            oneSlot
                                BIT STRING (SIZE (14)),
                            twoSlots
                                BIT STRING (SIZE (28))
                        },
                    periodicityAndPattern
                        CHOICE {
                            n2
                                BIT STRING (SIZE (2)),
                            n4
                                BIT STRING (SIZE (4)),
                            n5
                                BIT STRING (SIZE (5)),
                            n8
                                BIT STRING (SIZE (8)),
                            n10
                                BIT STRING (SIZE (10)),
                            n20
                                BIT STRING (SIZE (20)),
                            n40
                                BIT STRING (SIZE (40))
                        }
                },
            ...
        },
    controlResourceSet
        ControlResourceSetId
```

OPTIONAL, -- Need S

```
    },
    subcarrierSpacing          SubcarrierSpacing          OPTIONAL, -- Cond CellLevel
    dummy                      ENUMERATED { dynamic, semiStatic },
    ...,
    [[
    controlResourceSet-r16      ControlResourceSetId-r16    OPTIONAL -- Need R
    ]]
}

-- TAG-RATEMATCHPATTERN-STOP
-- ASN1STOP
```

RateMatchPattern field descriptions
bitmaps Indicates rate matching pattern by a pair of bitmaps <i>resourceBlocks</i> and <i>symbolsInResourceBlock</i> to define the rate match pattern within one or two slots, and a third bitmap <i>periodicityAndPattern</i> to define the repetition pattern with which the pattern defined by the above bitmap pair occurs.
controlResourceSet This ControlResourceSet is used as a PDSCH rate matching pattern, i.e., PDSCH reception rate matches around it. In frequency domain, the resource is determined by the frequency domain resource of the CORESET with the corresponding CORESET ID. Time domain resource is determined by the parameters of the associated search space of the CORESET. If the field <i>controlResourceSetId-r16</i> is present, UE shall ignore the <i>controlResourceSetId</i> (without suffix).
periodicityAndPattern A time domain repetition pattern at which the pattern defined by <i>symbolsInResourceBlock</i> and <i>resourceBlocks</i> recurs. This slot pattern repeats itself continuously. Absence of this field indicates the value <i>n1</i> (see TS 38.214 [19], clause 5.1.4.1).
resourceBlocks A resource block level bitmap in the frequency domain. A bit in the bitmap set to 1 indicates that the UE shall apply rate matching in the corresponding resource block in accordance with the <i>symbolsInResourceBlock</i> bitmap. If used as cell-level rate matching pattern, the bitmap identifies "common resource blocks (CRB)". If used for MBS broadcast CFR, the bitmap identifies "physical resource blocks" inside the MBS broadcast CFR. If used as BWP-level rate matching pattern, the bitmap identifies "physical resource blocks" inside the BWP or MBS multicast CFR. The first/ leftmost bit corresponds to resource block 0, and so on (see TS 38.214 [19], clause 5.1.4.1).
subcarrierSpacing The SubcarrierSpacing for this resource pattern. If the field is absent, the UE applies the SCS of the associated BWP. The value <i>kHz15</i> corresponds to $\mu=0$, the value <i>kHz30</i> corresponds to $\mu=1$, and so on. Only the following values are applicable depending on the used frequency (see TS 38.214 [19], clause 5.1.4.1): FR1: 15, 30 or 60 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz
symbolsInResourceBlock A symbol level bitmap in time domain. It indicates with a bit set to true that the UE shall rate match around the corresponding symbol. This pattern recurs (in time domain) with the configured periodicityAndPattern (see TS 38.214 [19], clause 5.1.4.1). For <i>oneSlot</i> , if ECP is configured, the first 12 bits represent the symbols within the slot and the last two bits within the bitstring are ignored by the UE; Otherwise, the 14 bits represent the symbols within the slot. For <i>twoSlots</i> , if ECP is configured, the first 12 bits represent the symbols within the first slot and the next 12 bits represent the symbols in the second slot and the last four bits within the bit string are ignored by the UE; Otherwise, the first 14 bits represent the symbols within the first slot and the next 14 bits represent the symbols in the second slot. For the bits representing symbols in a slot, the most significant bit of the bit string represents the first symbol in the slot and the second most significant bit represents the second symbol in the slot and so on.

Conditional Presence	Explanation
CellLevel	The field is mandatory present if the <i>RateMatchPattern</i> is defined on cell level. The field is absent when the <i>RateMatchPattern</i> is defined on BWP level or defined for MBS broadcast CFR. If the <i>RateMatchPattern</i> is defined on BWP level, the UE applies the SCS of the BWP and if <i>RateMatchPattern</i> is defined for MBS broadcast CFR, the UE applies the SCS of the initial BWP or RedCap-specific initial BWP (if configured) for (e)RedCap UEs.

– *RateMatchPatternId*

The IE *RateMatchPatternId* identifies one *RateMatchPattern* (see TS 38.214 [19], clause 5.1.4.1).

RateMatchPatternId information element

```
-- ASN1START
-- TAG-RATEMATCHPATTERNID-START

RateMatchPatternId ::=
    INTEGER (0..maxNrofRateMatchPatterns-1)

-- TAG-RATEMATCHPATTERNID-STOP
-- ASN1STOP
```

– *RateMatchPatternLTE-CRS*

The IE *RateMatchPatternLTE-CRS* is used to configure a pattern to rate match around LTE CRS. See TS 38.214 [19], clause 5.1.4.2.

RateMatchPatternLTE-CRS information element

```
-- ASN1START
-- TAG-RATEMATCHPATTERNLTE-CRS-START

RateMatchPatternLTE-CRS ::=
    SEQUENCE {
        carrierFreqDL          INTEGER (0..16383),
        carrierBandwidthDL     ENUMERATED {n6, n15, n25, n50, n75, n100, spare2, spare1},
        mbsfn-SubframeConfigList EUTRA-MBSFN-SubframeConfigList
        nrofCRS-Ports          ENUMERATED {n1, n2, n4},
        v-Shift                ENUMERATED {n0, n1, n2, n3, n4, n5}
    }

LTE-CRS-PatternList-r16 ::=
    SEQUENCE (SIZE (1..maxLTE-CRS-Patterns-r16)) OF RateMatchPatternLTE-CRS

-- TAG-RATEMATCHPATTERNLTE-CRS-STOP
-- ASN1STOP
```

OPTIONAL, -- Need M

<i>RateMatchPattern</i> LTE-CRS field descriptions
<i>carrierBandwidthDL</i> BW of the LTE carrier in number of PRBs (see TS 38.214 [19], clause 5.1.4.2).
<i>carrierFreqDL</i> Center of the LTE carrier (see TS 38.214 [19], clause 5.1.4.2).
<i>mbsfn-SubframeConfigList</i> LTE MBSFN subframe configuration (see TS 38.214 [19], clause 5.1.4.2).
<i>nrofCRS-Ports</i> Number of LTE CRS antenna port to rate-match around (see TS 38.214 [19], clause 5.1.4.2).
<i>v-Shift</i> Shifting value v-shift in LTE to rate match around LTE CRS (see TS 38.214 [19], clause 5.1.4.2).

– *ReferenceConfiguration*

The IE *ReferenceConfiguration* is used provide a configuration that is common, within the same cell group, to all configured non-complete candidate configurations.

ReferenceConfiguration information element

```
-- ASN1START
-- TAG-REFERENCECONFIGURATION-START

ReferenceConfiguration-r18 ::= OCTET STRING (CONTAINING RRCReconfiguration)

-- TAG-REFERENCECONFIGURATION-STOP
-- ASN1STOP
```

– *ReferenceLocation*

The IE *ReferenceLocation* contains location information used as a reference location. The value of the field is same as *Ellipsoid-Point* defined in TS37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.

ReferenceLocation information element

```
-- ASN1START
-- TAG-REFERENCELOCATION-START

ReferenceLocation-r17 ::= OCTET STRING

-- TAG-REFERENCELOCATION-STOP
-- ASN1STOP
```

— *ReferenceTimeInfo*

The IE *ReferenceTimeInfo* contains timing information for 5G internal system clock used for, e.g., time stamping, see TS 23.501 [32], clause 5.27.1.2.

***ReferenceTimeInfo* information element**

```
-- ASN1START
-- TAG-REFERENCETIMEINFO-START

ReferenceTimeInfo-r16 ::= SEQUENCE {
    time-r16                ReferenceTime-r16,
    uncertainty-r16          INTEGER (0..32767)          OPTIONAL, -- Need S
    timeInfoType-r16         ENUMERATED {localClock}     OPTIONAL, -- Need S
    referenceSFN-r16          INTEGER (0..1023)           OPTIONAL, -- Cond RefTime
}

ReferenceTime-r16 ::= SEQUENCE {
    refDays-r16              INTEGER (0..72999),
    refSeconds-r16            INTEGER (0..86399),
    refMilliseconds-r16       INTEGER (0..999),
    refTenNanoSeconds-r16     INTEGER (0..99999)
}

-- TAG-REFERENCETIMEINFO-STOP
-- ASN1STOP
```

ReferenceTimeInfo field descriptions
referenceSFN This field indicates the reference SFN corresponding to the reference time information. If <i>referenceTimeInfo</i> field is received in <i>DLInformationTransfer</i> message, this field indicates the SFN of PCell.
time This field indicates time reference with 10ns granularity. If included in <i>DLInformationTransfer</i> and if UE-side TA PDC is de-activated, the indicated time may not be referenced at the network, i.e., gNB may pre-compensate for RF propagation delay. If included in <i>DLInformationTransfer</i> and if UE is requested to transmit UE Rx-Tx time difference measurement, the indicated time may not be referenced at the network, i.e., gNB may pre-compensate for RF propagation delay. Otherwise, the indicated time is referenced at the network, i.e., without compensating for RF propagation delay. In an NTN cell, the indicated time is referenced at the uplink time synchronization reference point (RP), i.e., UE should take into account the propagation delay between UE and RP when determining the UTC time at the UE. The indicated time in 10ns unit from the origin is $refDays*86400*1000*100000 + refSeconds*1000*100000 + refMilliSeconds*100000 + refTenNanoSeconds$. The <i>refDays</i> field specifies the sequential number of days (with day count starting at 0) from the origin of the <i>time</i> field. If the <i>referenceTimeInfo</i> field is received in <i>DLInformationTransfer</i> message, the time field indicates the <i>time</i> at the ending boundary of the system frame indicated by <i>referenceSFN</i> . The UE considers this frame (indicated by <i>referenceSFN</i>) to be the frame which is nearest to the frame where the message is received (which can be either in the past or in the future). If the <i>referenceTimeInfo</i> field is received in <i>SIB9</i> , the <i>time</i> field indicates the time at the SFN boundary at or immediately after the ending boundary of the SI-window in which <i>SIB9</i> is transmitted. If <i>referenceTimeInfo</i> field is received in <i>SIB9</i> , this field is excluded when determining changes in system information, i.e. changes of time should neither result in system information change notifications nor in a modification of <i>valueTag</i> in <i>SIB1</i> . NOTE: The estimated time in an NTN-cell may be less accurate than the estimated time in a TN-cell.
timeInfoType If <i>timeInfoType</i> is not included, the <i>time</i> indicates the GPS time and the origin of the <i>time</i> field is 00:00:00 on Gregorian calendar date 6 January, 1980 (start of GPS time). If <i>timeInfoType</i> is set to <i>localClock</i> , the origin of the <i>time</i> is unspecified.
uncertainty This field indicates the uncertainty of the reference time information provided by the time field. The uncertainty is 25ns multiplied by this field. If this field is absent, the uncertainty is unspecified.

Conditional Presence	Explanation
<i>RefTime</i>	The field is mandatory present if <i>referenceTimeInfo</i> is included in <i>DLInformationTransfer</i> message; otherwise the field is absent.

– *RejectWaitTime*

The IE *RejectWaitTime* is used to provide the value in seconds for timer T302.

RejectWaitTime information element

```
-- ASN1START
-- TAG-REJECTWAITTIME-START

RejectWaitTime ::=
    INTEGER (1..16)

-- TAG-REJECTWAITTIME-STOP
-- ASN1STOP
```

– *RepetitionSchemeConfig*

The IE *RepetitionSchemeConfig* is used to configure the UE with repetition schemes as specified in TS 38.214 [19] clause 5.1.

***RepetitionSchemeConfig* information element**

```
-- ASN1START
-- TAG-REPETITIONSCHEMECONFIG-START

RepetitionSchemeConfig-r16 ::= CHOICE {
    fdm-TDM-r16                SetupRelease { FDM-TDM-r16 },
    slotBased-r16              SetupRelease { SlotBased-r16 }
}

RepetitionSchemeConfig-v1630 ::= SEQUENCE {
    slotBased-v1630            SetupRelease { SlotBased-v1630 }
}

FDM-TDM-r16 ::=
    repetitionScheme-r16      SEQUENCE {
    startingSymbolOffsetK-r16  ENUMERATED {fdmSchemeA, fdmSchemeB, tdmSchemeA },
                                INTEGER (0..7)
                                OPTIONAL -- Need R
}

SlotBased-r16 ::=
    tciMapping-r16            SEQUENCE {
    sequenceOffsetForRV-r16    ENUMERATED {cyclicMapping, sequentialMapping},
                                INTEGER (1..3)
}

SlotBased-v1630 ::=
    tciMapping-r16            SEQUENCE {
    sequenceOffsetForRV-r16    ENUMERATED {cyclicMapping, sequentialMapping},
                                INTEGER (0)
}

-- TAG-REPETITIONSCHEMECONFIG-STOP
-- ASN1STOP
```

<i>RepetitionSchemeConfig</i> field descriptions
<i>fdm-TDM</i> Configures UE with a repetition scheme among <i>fdmSchemeA</i> , <i>fdmSchemeB</i> and <i>tdmSchemeA</i> as specified in clause 5.1 of TS 38.214 [19]. The network does not set this field to <i>release</i> . Upon reception of this field in <i>RepetitionSchemeConfig-r16</i> , the UE shall release <i>slotBased</i> if previously configured in the same instance of <i>RepetitionSchemeConfig-r16</i> .
<i>sequenceOffsetForRV</i> For slot-based repetition scheme, selected RV sequence is applied to transmission occasions associated to the first TCI state. The RV sequence associated to the second TCI state is determined by a RV offset from that selected RV sequence.
<i>slotBased</i> Configures UE with slot-based repetition scheme. Network always configures this field when the parameter <i>repetitionNumber</i> is present in IE <i>PDSCH-TimeDomainResourceAllocationList</i> . The network does not set this field to <i>release</i> . Upon reception of this field in <i>RepetitionSchemeConfig-r16</i> , the UE shall release <i>fdm-TDM</i> if previously configured in the same instance of <i>RepetitionSchemeConfig-r16</i> .
<i>startingSymbolOffsetK</i> The starting symbol of the second transmission occasion has K symbol offset relative to the last symbol of the first transmission occasion. When UE is configured with <i>tdmSchemeA</i> , the parameter <i>startingSymbolOffsetK</i> is present, otherwise absent.
<i>tcMapping</i> Enables TCI state mapping method to PDSCH transmission occasions.

— *ReportConfigId*

The IE *ReportConfigId* is used to identify a measurement reporting configuration.

ReportConfigId information element

```
-- ASN1START
-- TAG-REPORTCONFIGID-START

ReportConfigId ::=
    INTEGER (1..maxReportConfigId)

-- TAG-REPORTCONFIGID-STOP
-- ASN1STOP
```

— *ReportConfigInterRAT*

The IE *ReportConfigInterRAT* specifies criteria for triggering of an inter-RAT measurement reporting event, or an L2 U2N relay measurement reporting event. The inter-RAT measurement reporting events for E-UTRA and UTRA-FDD are labelled BN with N equal to 1, 2 and so on. The measurement reporting events for L2 U2N relay UE are labelled YN with N equal to 1, 2 and so on, and Z1.

- Event B1: Neighbour becomes better than absolute threshold;
- Event B2: PCell becomes worse than absolute threshold1 AND Neighbour becomes better than another absolute threshold2;
- Event Y1: PCell becomes worse than absolute threshold1 AND candidate L2 U2N Relay UE becomes better than another absolute threshold2;

Event Y2: Candidate L2 U2N Relay UE becomes better than absolute threshold;

Event Z1: Serving L2 U2N Relay UE becomes worse than absolute threshold1 AND candidate L2 U2N Relay UE becomes better than another absolute threshold2;

ReportConfigInterRAT information element

```
-- ASN1START
-- TAG-REPORTCONFIGINTERRAT-START

ReportConfigInterRAT ::=
    reportType
    periodical
    eventTriggered
    reportCGI
    ...,
    reportSFTD
}

ReportCGI-EUTRA ::=
    cellForWhichToReportCGI
    ...,
    [[
        useAutonomousGaps-r16
    ]]
}

ReportSFTD-EUTRA ::=
    reportSFTD-Meas
    reportRSRP
    ...
}

EventTriggerConfigInterRAT ::=
    eventId
    eventB1
        b1-ThresholdEUTRA
        reportOnLeave
        hysteresis
        timeToTrigger
        ...
    },
    eventB2
        b2-Threshold1
        b2-Threshold2EUTRA
        reportOnLeave
        hysteresis
        timeToTrigger
        ...
    },
    ...,
    [[
        eventB1-UTRA-FDD-r16
    ]]
}

SEQUENCE {
    CHOICE {
        PeriodicalReportConfigInterRAT,
        EventTriggerConfigInterRAT,
        ReportCGI-EUTRA,
        ReportsSFTD-EUTRA
    }
}

SEQUENCE {
    EUTRA-PhysCellId,
    ...,
    useAutonomousGaps-r16 ENUMERATED {setup} OPTIONAL -- Need R
}

SEQUENCE {
    BOOLEAN,
    BOOLEAN,
    ...
}

SEQUENCE {
    CHOICE {
        SEQUENCE {
            MeasTriggerQuantityEUTRA,
            BOOLEAN,
            Hysteresis,
            TimeToTrigger,
        },
        SEQUENCE {
            MeasTriggerQuantity,
            MeasTriggerQuantityEUTRA,
            BOOLEAN,
            Hysteresis,
            TimeToTrigger,
        },
        SEQUENCE {

```

<pre> b1-ThresholdUTRA-FDD-r16 reportOnLeave-r16 hysteresis-r16 timeToTrigger-r16 ... }, eventB2-UTRA-FDD-r16 b2-Threshold1-r16 b2-Threshold2UTRA-FDD-r16 reportOnLeave-r16 hysteresis-r16 timeToTrigger-r16 ... }]], [[eventY1-Relay-r17 y1-Threshold1-r17 y1-Threshold2-Relay-r17 reportOnLeave-r17 hysteresis-r17 timeToTrigger-r17 ... }, eventY2-Relay-r17 y2-Threshold-Relay-r17 reportOnLeave-r17 hysteresis-r17 timeToTrigger-r17 ... }]], [[eventZ1-Relay-r18 z1-Threshold1-Relay-r18 sl-RSRP-r18 sd-RSRP-r18 }, z1-Threshold2-Relay-r18 reportOnLeave-r18 hysteresis-r18 timeToTrigger-r18 ... }]], }, rsType reportInterval reportAmount reportQuantity maxReportCells ... [[</pre>	<pre> MeasTriggerQuantityUTRA-FDD-r16, BOOLEAN, Hysteresis, TimeToTrigger, SEQUENCE { MeasTriggerQuantity, MeasTriggerQuantityUTRA-FDD-r16, BOOLEAN, Hysteresis, TimeToTrigger, SEQUENCE { MeasTriggerQuantity, SL-MeasTriggerQuantity-r16, BOOLEAN, Hysteresis, TimeToTrigger, SEQUENCE { SL-MeasTriggerQuantity-r16, BOOLEAN, Hysteresis, TimeToTrigger, SEQUENCE { SEQUENCE { SL-MeasTriggerQuantity-r16, SL-MeasTriggerQuantity-r16 } SL-MeasTriggerQuantity-r16, BOOLEAN, Hysteresis, TimeToTrigger, NR-RS-Type, ReportInterval, ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity}, MeasReportQuantity, INTEGER (1..maxCellReport), </pre>	<pre> OPTIONAL -- Need S </pre>

```

    reportQuantityUTRA-FDD-r16      MeasReportQuantityUTRA-FDD-r16      OPTIONAL  -- Need R
  ]],
  [[
    includeCommonLocationInfo-r16   ENUMERATED {true}                  OPTIONAL,  -- Need R
    includeBT-Meas-r16               SetupRelease {BT-NameList-r16}      OPTIONAL,  -- Need M
    includeWLAN-Meas-r16              SetupRelease {WLAN-NameList-r16}    OPTIONAL,  -- Need M
    includeSensor-Meas-r16            SetupRelease {Sensor-NameList-r16}  OPTIONAL,  -- Need M
  ]],
  [[
    reportQuantityRelay-r17           SL-MeasReportQuantity-r16         OPTIONAL  -- Need R
  ]],
  [[
    cellIndividualOffsetList-r18     SEQUENCE (SIZE (1..maxCellMeasEUTRA)) OF CellIndividualOffsetList-EUTRA-r18 OPTIONAL -- Need R
  ]]]
}

PeriodicalReportConfigInterRAT ::=
  reportInterval
  reportAmount
  reportQuantity
  maxReportCells
  ...,
  [[
    reportQuantityUTRA-FDD-r16      MeasReportQuantityUTRA-FDD-r16      OPTIONAL  -- Need R
  ]],
  [[
    includeCommonLocationInfo-r16   ENUMERATED {true}                  OPTIONAL,  -- Need R
    includeBT-Meas-r16               SetupRelease {BT-NameList-r16}      OPTIONAL,  -- Need M
    includeWLAN-Meas-r16              SetupRelease {WLAN-NameList-r16}    OPTIONAL,  -- Need M
    includeSensor-Meas-r16            SetupRelease {Sensor-NameList-r16}  OPTIONAL,  -- Need M
  ]],
  [[
    reportQuantityRelay-r17           SL-MeasReportQuantity-r16         OPTIONAL  -- Need R
  ]]]

}

MeasTriggerQuantityUTRA-FDD-r16 ::=
  utra-FDD-RSCP-r16
  utra-FDD-EcN0-r16
}

MeasReportQuantityUTRA-FDD-r16 ::=
  cpich-RSCP
  cpich-EcN0
}

CellIndividualOffsetList-EUTRA-r18 ::=
  physCellId-r18
  cellIndividualOffset-r18
  carrierFreq-r18
}

```


-- TAG-REPORTCONFIGINTERRAT-STOP
-- ASN1STOP

<i>ReportConfigInterRAT field descriptions</i>
reportType Type of the configured measurement report. In (NG)EN-DC, and NR-DC, network does not configure report of type <i>ReportCGI-EUTRA</i> for SCG.

<i>ReportCGI-EUTRA field descriptions</i>
useAutonomousGaps Indicates whether or not the UE is allowed to use autonomous gaps in acquiring system information from the E-UTRAN neighbour cell. When the field is included, the UE applies the corresponding value for T321.

<i>EventTriggerConfigInterRAT</i> field descriptions
b2-Threshold1 NR threshold to be used in inter RAT measurement report triggering condition for event B2.
bN-ThresholdEUTRA E-UTRA threshold value associated with the selected trigger quantity (RSRP, RSRQ, SINR) to be used in inter RAT measurement report triggering condition for event number bN. In the same <i>eventB2</i> , the network configures the same CHOICE name (<i>rsrp</i> , <i>rsrq</i> or <i>sinr</i>) for the <i>MeasTriggerQuantity</i> of the <i>b2-Threshold1</i> and for the <i>MeasTriggerQuantityEUTRA</i> of the <i>b2-Threshold2EUTRA</i> .
eventId Choice of inter RAT event triggered reporting criteria.
maxReportCells Max number of non-serving cells/candidate L2 U2N Relay UEs to include in the measurement report.
reportAmount Number of measurement reports applicable for <i>eventTriggered</i> as well as for <i>periodical</i> report types
reportOnLeave Indicates whether or not the UE shall initiate the measurement reporting procedure when the leaving condition is met for a cell in <i>cellsTriggeredList</i> or for a L2 U2N Relay UE in <i>relaysTriggeredList</i> , as specified in 5.5.4.1.
reportQuantity, reportQuantityUTRA-FDD The cell measurement quantities to be included in the measurement report. If the field <i>eventB1-UTRA-FDD</i> or <i>eventB2-UTRA-FDD</i> is present, the UE shall ignore the value(s) provided in <i>reportQuantity</i> .
reportQuantityRelay The L2 U2N Relay UE measurement quantity to be included in measurement report.
timeToTrigger Time during which specific criteria for the event needs to be met in order to trigger a measurement report.
bN-ThresholdUTRA-FDD UTRA-FDD threshold value associated with the selected trigger quantity (RSCP, EcN0) to be used in inter RAT measurement report triggering condition for event number bN. <i>utra-FDD-RSCP</i> corresponds to CPICH_RSCP in TS 25.133 [46] for FDD. <i>utra-FDD-EcN0</i> corresponds to CPICH_Ec/No in TS 25.133 [46] for FDD. For <i>utra-FDD-RSCP</i> : The actual value is field value – 115 dBm. For <i>utra-FDD-EcN0</i> : The actual value is (field value – 49)/2 dB.
y1-Threshold1 NR threshold to be used in measurement report triggering condition for event Y1.
y1-Threshold2-Relay L2 U2N Relay threshold value associated with the selected trigger quantity (i.e. RSRP) to be used in measurement report triggering condition for event Y1.
y2-Threshold-Relay L2 U2N Relay threshold value associated with the selected trigger quantity (i.e. RSRP) to be used in measurement report triggering condition for event Y2.
z1-Threshold1-Relay L2 U2N Relay threshold value associated with the selected trigger quantity (i.e. SL-RSRP and/or SD-RSRP) to be used in measurement report triggering condition for serving Relay UE in event Z1. If the field sd-RSRP is not included, the UE considers it to be equal to sl-RSRP.
z1-Threshold2-Relay L2 U2N Relay threshold value associated with the selected trigger quantity (i.e. SD-RSRP) to be used in measurement report triggering condition for candidate Relay UE in event Z1.

<i>PeriodicalReportConfigInterRAT</i> field descriptions
<i>maxReportCells</i> Max number of non-serving cells/candidate L2 U2N Relay UEs to include in the measurement report.
<i>reportAmount</i> Number of measurement reports applicable for <i>eventTriggered</i> as well as for <i>periodical</i> report types
<i>reportQuantity</i>, <i>reportQuantityUTRA-FDD</i> The cell measurement quantities to be included in the measurement report. If the field <i>reportQuantityUTRA-FDD</i> is present, the UE shall ignore the value(s) provided in <i>reportQuantity</i> .

<i>CellIndividualOffsetList-EUTRA</i> field descriptions
<i>carrierFreq</i> Indicates the EUTRA frequency for which <i>cellIndividualOffset</i> is applicable. If the field is not configured, the EUTRA frequency indicated by <i>carrierFreq</i> within the <i>MeasObjectEUTRA</i> of the <i>measID</i> associated with this <i>ReportConfigInterRAT</i> applies.
<i>cellIndividualOffset</i> Cell individual offsets applicable to a specific measurement event. If this field is present, the UE, for the same cell, shall ignore the cell individual offset configured within the <i>MeasObjectEUTRA</i> of the <i>measID</i> associated with this <i>ReportConfigInterRAT</i> .
<i>physCellId</i> Physical cell identity of a E-UTRAN cell in the cell list.

– *ReportConfigNR*

The IE *ReportConfigNR* specifies criteria for triggering of an NR measurement reporting event or of a CHO, CPA or CPC event or of an L2 U2N relay measurement reporting event. For events labelled AN with N equal to 1, 2 and so on, measurement reporting events and CHO, CPA or CPC events are based on cell measurement results, which can either be derived based on SS/PBCH block or CSI-RS.

Event A1: Serving becomes better than absolute threshold;

Event A2: Serving becomes worse than absolute threshold;

Event A3: Neighbour becomes amount of offset better than PCell/PSCell;

Event A4: Neighbour becomes better than absolute threshold;

Event A5: PCell/PSCell becomes worse than absolute threshold1 AND Neighbour/SCell becomes better than another absolute threshold2;

Event A6: Neighbour becomes amount of offset better than SCell;

Event D1: Distance between UE and a reference location *referenceLocation1* becomes larger than configured threshold *distanceThreshFromReference1* and distance between UE and a reference location *referenceLocation2* becomes shorter than configured threshold *distanceThreshFromReference2*;

Event D2: Distance between UE and the serving cell moving reference location determined based on *movingReferenceLocation* and its corresponding satellite ephemeris and epoch time broadcast in *SIB19* becomes larger than configured threshold *distanceThreshFromReference1* and distance between UE and a moving reference location determined based on *referenceLocation* and its corresponding satellite ephemeris and epoch time for the neighbor cell provided in the associated *MeasObjectNR* becomes shorter than configured threshold *distanceThreshFromReference2*;

CondEvent A3: Conditional reconfiguration candidate becomes amount of offset better than PCell/PSCell;

CondEvent A4: Conditional reconfiguration candidate becomes better than absolute threshold where *condEventA4* can also be used for current PSCell (i.e., in case it is configured as candidate PSCell for CondEvent A4 evaluation) for CHO with candidate SCG(s) case ;

CondEvent A5: PCell/PSCell becomes worse than absolute threshold1 AND Conditional reconfiguration candidate becomes better than another absolute threshold2;

CondEvent D1: Distance between UE and a reference location *referenceLocation1* becomes larger than configured threshold *distanceThreshFromReference1* and distance between UE and a reference location *referenceLocation2* of conditional reconfiguration candidate becomes shorter than configured threshold *distanceThreshFromReference2*;

CondEvent D2: Distance between UE and the serving cell moving reference location determined based on *movingReferenceLocation* and its corresponding satellite ephemeris and epoch time broadcast in *SIB19* becomes larger than configured threshold *distanceThreshFromReference1* and distance between UE and a moving reference location determined based on *referenceLocation* and its corresponding satellite ephemeris and epoch time for the conditional reconfiguration candidate provided in the associated *MeasObjectNR* becomes shorter than configured threshold *distanceThreshFromReference2*;

CondEvent T1: Time measured at UE becomes more than configured threshold *t1-Threshold* but is less than *t1-Threshold + duration*;

Event X1: Serving L2 U2N Relay UE becomes worse than absolute threshold1 AND NR Cell becomes better than another absolute threshold2;

Event X2: Serving L2 U2N Relay UE becomes worse than absolute threshold;

For event I1, measurement reporting event is based on CLI measurement results, which can either be derived based on SRS-RSRP or CLI-RSSI.

Event I1: Interference becomes higher than absolute threshold;

The reporting events concerning Aerial UE altitude are labelled HN with *N* equal to 1 and 2. Additionally, the reporting events concerning Aerial UE altitude and the neighboring cell measurements simultaneously are labelled AMHN with *M* equal to 3, 4, 5 and *N* equal to 1, 2.

Event H1: Aerial UE altitude becomes higher than a threshold;

Event H2: Aerial UE altitude becomes lower than a threshold;

Event A3H1: Neighbour becomes offset better than SpCell and the Aerial UE altitude becomes higher than a threshold;

Event A3H2: Neighbour becomes offset better than SpCell and the Aerial UE altitude becomes lower than a threshold;

Event A4H1: Neighbour becomes better than threshold1 and the Aerial UE altitude becomes higher than a threshold2;

Event A4H2: Neighbour becomes better than threshold1 and the Aerial UE altitude becomes lower than a threshold2;

Event A5H1: SpCell becomes worse than threshold1 and neighbour becomes better than threshold2 and the Aerial UE altitude becomes higher than a threshold3;

Event A5H2: SpCell becomes worse than threshold1 and neighbour becomes better than threshold2 and the Aerial UE altitude becomes lower than a threshold3.

ReportConfigNR information element

```

-- ASN1START
-- TAG-REPORTCONFIGNR-START

ReportConfigNR ::=
    reportType
        periodical
        eventTriggered
        ...,
        reportCGI
        reportSFTD
        condTriggerConfig-r16
        cli-Periodical-r16
        cli-EventTriggered-r16
        rxTxPeriodical-r17
        reportOnScellActivation-r18
    }

    SEQUENCE {
        CHOICE {
            PeriodicalReportConfig,
            EventTriggerConfig,

            ReportCGI,
            ReportSFTD-NR,
            CondTriggerConfig-r16,
            CLI-PeriodicalReportConfig-r16,
            CLI-EventTriggerConfig-r16,
            RXTxPeriodical-r17,
            ReportOnScellActivation-r18
        }
    }

ReportCGI ::=
    cellForWhichToReportCGI
        PhysCellId,
        ...,
    [[
        useAutonomousGaps-r16
    ]]
    ENUMERATED {setup} OPTIONAL -- Need R

}

ReportSFTD-NR ::=
    reportSFTD-Meas
    reportRSRP
    ...,
    [[
        reportSFTD-NeighMeas
        drx-SFTD-NeighMeas
        cellsForWhichToReportSFTD
    ]]
    SEQUENCE {
        BOOLEAN,
        BOOLEAN,

        ENUMERATED {true} OPTIONAL, -- Need R
        ENUMERATED {true} OPTIONAL, -- Need R
        SEQUENCE (SIZE (1..maxCellSFTD)) OF PhysCellId OPTIONAL -- Need R
    }

}

CondTriggerConfig-r16 ::=
    condEventId
        condEventA3
            a3-Offset
            hysteresis
            timeToTrigger
        },
        condEventA5
            a5-Threshold1
            a5-Threshold2
            hysteresis
            timeToTrigger
        },
        ...,
    }

    SEQUENCE {
        CHOICE {
            SEQUENCE {
                MeasTriggerQuantityOffset,
                Hysteresis,
                TimeToTrigger
            },

            SEQUENCE {
                MeasTriggerQuantity,
                MeasTriggerQuantity,
                Hysteresis,
                TimeToTrigger
            }
        }
    }

```

```

condEventA4-r17          SEQUENCE {
    a4-Threshold-r17      MeasTriggerQuantity,
    hysteresis-r17        Hysteresis,
    timeToTrigger-r17     TimeToTrigger
},
condEventD1-r17          SEQUENCE {
    distanceThreshFromReference1-r17 INTEGER(0.. 65525),
    distanceThreshFromReference2-r17 INTEGER(0.. 65525),
    referenceLocation1-r17 ReferenceLocation-r17,
    referenceLocation2-r17 ReferenceLocation-r17,
    hysteresisLocation-r17 HysteresisLocation-r17,
    timeToTrigger-r17     TimeToTrigger
},
condEventT1-r17          SEQUENCE {
    t1-Threshold-r17      INTEGER (0..549755813887),
    duration-r17          INTEGER (1..6000)
},
condEventD2-r18          SEQUENCE {
    distanceThreshFromReference1-r18 INTEGER(0.. 65535),
    distanceThreshFromReference2-r18 INTEGER(0.. 65535),
    hysteresisLocation-r18 HysteresisLocation-r17,
    timeToTrigger-r18     TimeToTrigger
}
},
rsType-r16               NR-RS-Type,
...
[[
nesEvent-r18             ENUMERATED {true}                OPTIONAL -- Need R
]]
}

EventTriggerConfig ::=
    eventId               SEQUENCE {
        eventA1           CHOICE {
            eventA1       SEQUENCE {
                a1-Threshold
                reportOnLeave
                hysteresis
                timeToTrigger
            },
            eventA2       SEQUENCE {
                a2-Threshold
                reportOnLeave
                hysteresis
                timeToTrigger
            },
            eventA3       SEQUENCE {
                a3-Offset
                reportOnLeave
                hysteresis
                timeToTrigger
                useAllowedCellList
            },
            eventA4       SEQUENCE {

```

```

        a4-Threshold
        reportOnLeave
        hysteresis
        timeToTrigger
        useAllowedCellList
    },
    eventA5
        a5-Threshold1
        a5-Threshold2
        reportOnLeave
        hysteresis
        timeToTrigger
        useAllowedCellList
    },
    eventA6
        a6-Offset
        reportOnLeave
        hysteresis
        timeToTrigger
        useAllowedCellList
    },
    ...,
    [[
    eventX1-r17
        x1-Threshold1-Relay-r17
        x1-Threshold2-r17
        reportOnLeave-r17
        hysteresis-r17
        timeToTrigger-r17
        useAllowedCellList-r17
    },
    eventX2-r17
        x2-Threshold-Relay-r17
        reportOnLeave-r17
        hysteresis-r17
        timeToTrigger-r17
    },
    eventD1-r17
        distanceThreshFromReference1-r17
        distanceThreshFromReference2-r17
        referenceLocation1-r17
        referenceLocation2-r17
        reportOnLeave-r17
        hysteresisLocation-r17
        timeToTrigger-r17
    }
    ]],
    [[
    eventH1-r18
        h1-Threshold-r18
        h1-Hysteresis-r18
        reportOnLeave-r18
        timeToTrigger-r18
        includeAltitudeUE-r18

```

```

        MeasTriggerQuantity,
        BOOLEAN,
        Hysteresis,
        TimeToTrigger,
        BOOLEAN
    SEQUENCE {
        MeasTriggerQuantity,
        MeasTriggerQuantity,
        BOOLEAN,
        Hysteresis,
        TimeToTrigger,
        BOOLEAN
    SEQUENCE {
        MeasTriggerQuantityOffset,
        BOOLEAN,
        Hysteresis,
        TimeToTrigger,
        BOOLEAN
    SEQUENCE {
        SL-MeasTriggerQuantity-r16,
        MeasTriggerQuantity,
        BOOLEAN,
        Hysteresis,
        TimeToTrigger,
        BOOLEAN
    SEQUENCE {
        SL-MeasTriggerQuantity-r16,
        BOOLEAN,
        Hysteresis,
        TimeToTrigger
    SEQUENCE {
        INTEGER(1.. 65525),
        INTEGER(1.. 65525),
        ReferenceLocation-r17,
        ReferenceLocation-r17,
        BOOLEAN,
        HysteresisLocation-r17,
        TimeToTrigger
    SEQUENCE {
        Altitude-r18,
        HysteresisAltitude-r18,
        BOOLEAN,
        TimeToTrigger,
        BOOLEAN,

```

```

        simulMultiTriggerSingleMeasReport-r18    BOOLEAN
    },
    eventH2-r18                                   SEQUENCE {
        h2-Threshold-r18                         Altitude-r18,
        h2-Hysteresis-r18                       HysteresisAltitude-r18,
        reportOnLeave-r18                        BOOLEAN,
        timeToTrigger-r18                       TimeToTrigger,
        includeAltitudeUE-r18                   BOOLEAN,
        simulMultiTriggerSingleMeasReport-r18    BOOLEAN
    },
    eventA3H1-r18                                 SEQUENCE {
        a3-Offset-r18                            MeasTriggerQuantityOffset,
        reportOnLeave-r18                        BOOLEAN,
        a3-Hysteresis-r18                       Hysteresis,
        timeToTrigger-r18                       TimeToTrigger,
        useAllowedCellList-r18                  BOOLEAN,
        h1-Threshold-r18                        Altitude-r18,
        h1-Hysteresis-r18                       HysteresisAltitude-r18,
        includeAltitudeUE-r18                   BOOLEAN,
        simulMultiTriggerSingleMeasReport-r18    BOOLEAN
    },
    eventA3H2-r18                                 SEQUENCE {
        a3-Offset-r18                            MeasTriggerQuantityOffset,
        reportOnLeave-r18                        BOOLEAN,
        a3-Hysteresis-r18                       Hysteresis,
        timeToTrigger-r18                       TimeToTrigger,
        useAllowedCellList-r18                  BOOLEAN,
        h2-Threshold-r18                        Altitude-r18,
        h2-Hysteresis-r18                       HysteresisAltitude-r18,
        includeAltitudeUE-r18                   BOOLEAN,
        simulMultiTriggerSingleMeasReport-r18    BOOLEAN
    },
    eventA4H1-r18                                 SEQUENCE {
        a4-Threshold-r18                        MeasTriggerQuantity,
        reportOnLeave-r18                        BOOLEAN,
        a4-Hysteresis-r18                       Hysteresis,
        timeToTrigger-r18                       TimeToTrigger,
        useAllowedCellList-r18                  BOOLEAN,
        h1-Threshold-r18                        Altitude-r18,
        h1-Hysteresis-r18                       HysteresisAltitude-r18,
        includeAltitudeUE-r18                   BOOLEAN,
        simulMultiTriggerSingleMeasReport-r18    BOOLEAN
    },
    eventA4H2-r18                                 SEQUENCE {
        a4-Threshold-r18                        MeasTriggerQuantity,
        reportOnLeave-r18                        BOOLEAN,
        a4-Hysteresis-r18                       Hysteresis,
        timeToTrigger-r18                       TimeToTrigger,
        useAllowedCellList-r18                  BOOLEAN,
        h2-Threshold-r18                        Altitude-r18,
        h2-Hysteresis-r18                       HysteresisAltitude-r18,
        includeAltitudeUE-r18                   BOOLEAN,
        simulMultiTriggerSingleMeasReport-r18    BOOLEAN
    },

```


eventA5H1-r18	SEQUENCE {		
a5-Threshold1-r18	MeasTriggerQuantity,		
a5-Threshold2-r18	MeasTriggerQuantity,		
reportOnLeave-r18	BOOLEAN,		
a5-Hysteresis-r18	Hysteresis,		
timeToTrigger-r18	TimeToTrigger,		
useAllowedCellList-r18	BOOLEAN,		
h1-Threshold-r18	Altitude-r18,		
h1-Hysteresis-r18	HysteresisAltitude-r18,		
includeAltitudeUE-r18	BOOLEAN,		
simulMultiTriggerSingleMeasReport-r18	BOOLEAN		
},			
eventA5H2-r18	SEQUENCE {		
a5-Threshold1-r18	MeasTriggerQuantity,		
a5-Threshold2-r18	MeasTriggerQuantity,		
reportOnLeave-r18	BOOLEAN,		
a5-Hysteresis-r18	Hysteresis,		
timeToTrigger-r18	TimeToTrigger,		
useAllowedCellList-r18	BOOLEAN,		
h2-Threshold-r18	Altitude-r18,		
h2-Hysteresis-r18	HysteresisAltitude-r18,		
includeAltitudeUE-r18	BOOLEAN,		
simulMultiTriggerSingleMeasReport-r18	BOOLEAN		
},			
eventD2-r18	SEQUENCE {		
distanceThreshFromReference1-r18	INTEGER(1.. 65535),		
distanceThreshFromReference2-r18	INTEGER(1.. 65535),		
reportOnLeave-r18	BOOLEAN,		
hysteresisLocation-r18	HysteresisLocation-r17,		
timeToTrigger-r18	TimeToTrigger		
}			
]]			
},			
rsType	NR-RS-Type,		
reportInterval	ReportInterval,		
reportAmount	ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity},		
reportQuantityCell	MeasReportQuantity,		
maxReportCells	INTEGER (1..maxCellReport),		
reportQuantityRS-Indexes	MeasReportQuantity	OPTIONAL,	-- Need R
maxNrofRS-IndexesToReport	INTEGER (1..maxNrofIndexesToReport)	OPTIONAL,	-- Need R
includeBeamMeasurements	BOOLEAN,		
reportAddNeighMeas	ENUMERATED {setup}	OPTIONAL,	-- Need R
...			
[[			
measRSSI-ReportConfig-r16	MeasRSSI-ReportConfig-r16	OPTIONAL,	-- Need R
useT312-r16	BOOLEAN	OPTIONAL,	-- Need M
includeCommonLocationInfo-r16	ENUMERATED {true}	OPTIONAL,	-- Need R
includeBT-Meas-r16	SetupRelease {BT-NameList-r16}	OPTIONAL,	-- Need M
includeWLAN-Meas-r16	SetupRelease {WLAN-NameList-r16}	OPTIONAL,	-- Need M
includeSensor-Meas-r16	SetupRelease {Sensor-NameList-r16}	OPTIONAL,	-- Need M
]],			
[[			
coarseLocationRequest-r17	ENUMERATED {true}	OPTIONAL,	-- Need R
reportQuantityRelay-r17	SL-MeasReportQuantity-r16	OPTIONAL,	-- Need R

```

    ]],
    [[
    numberOfTriggeringCells-r18          INTEGER (2..maxCellReport)          OPTIONAL, -- Need R
    cellIndividualOffsetList-r18         SEQUENCE (SIZE (1..maxNrofCellMeas)) OF CellIndividualOffsetList-r18 OPTIONAL, -- Need R
    eventX1-SD-Threshold1-r18           SL-MeasTriggerQuantity-r16          OPTIONAL, -- Need S
    eventX2-SD-Threshold-r18            SL-MeasTriggerQuantity-r16          OPTIONAL, -- Need S
    reportOnBestCellChange-r18          ENUMERATED {n1, n2}                  OPTIONAL, -- Need R
    enteringLeavingReport-r18           ENUMERATED {true}                   OPTIONAL, -- Need R
    ]]
}

PeriodicalReportConfig ::=
    rsType
    reportInterval
    reportAmount
    reportQuantityCell
    maxReportCells
    reportQuantityRS-Indexes
    maxNrofRS-IndexesToReport
    includeBeamMeasurements
    useAllowedCellList
    ...,
    [[
    measRSSI-ReportConfig-r16           MeasRSSI-ReportConfig-r16          OPTIONAL, -- Need R
    includeCommonLocationInfo-r16       ENUMERATED {true}                OPTIONAL, -- Need R
    includeBT-Meas-r16                  SetupRelease {BT-NameList-r16}    OPTIONAL, -- Need M
    includeWLAN-Meas-r16                 SetupRelease {WLAN-NameList-r16}   OPTIONAL, -- Need M
    includeSensor-Meas-r16               SetupRelease {Sensor-NameList-r16}  OPTIONAL, -- Need M
    ul-DelayValueConfig-r16              SetupRelease { UL-DelayValueConfig-r16 } OPTIONAL, -- Need M
    reportAddNeighMeas-r16               ENUMERATED {setup}                OPTIONAL, -- Need R
    ]],
    [[
    ul-ExcessDelayConfig-r17             SetupRelease { UL-ExcessDelayConfig-r17 } OPTIONAL, -- Need M
    coarseLocationRequest-r17            ENUMERATED {true}                OPTIONAL, -- Need R
    reportQuantityRelay-r17              SL-MeasReportQuantity-r16          OPTIONAL, -- Need R
    ]]
}

NR-RS-Type ::=
    ENUMERATED {ssb, csi-rs}

MeasTriggerQuantity ::=
    rsrp
    rsrq
    sinr
}

MeasTriggerQuantityOffset ::=
    rsrp
    rsrq
    sinr
}

MeasReportQuantity ::=
    SEQUENCE {

```

```

    rsrp          BOOLEAN,
    rsrq          BOOLEAN,
    sinr          BOOLEAN
}

MeasRSSI-ReportConfig-r16 ::=
    channelOccupancyThreshold-r16
}

CLI-EventTriggerConfig-r16 ::=
    eventId-r16
    eventI1-r16
        i1-Threshold-r16
        reportOnLeave-r16
        hysteresis-r16
        timeToTrigger-r16
    },
    ...
},
reportInterval-r16
reportAmount-r16
maxReportCLI-r16
...
}

CLI-PeriodicalReportConfig-r16 ::=
    reportInterval-r16
    reportAmount-r16
    reportQuantityCLI-r16
    maxReportCLI-r16
    ...
}

RxTxPeriodical-r17 ::=
    rxTxReportInterval-r17
    reportAmount-r17
    ...
}

RxTxReportInterval-r17 ::= ENUMERATED {ms80,ms120,ms160,ms240,ms320,ms480,ms640,ms1024,ms1280,ms2048,ms2560,ms5120,spare4,spare3,spare2,spare1}

MeasTriggerQuantityCLI-r16 ::=
    srs-RSRP-r16
    cli-RSSI-r16
}

MeasReportQuantityCLI-r16 ::=
    ENUMERATED {srs-rsrp, cli-rssi}

ReportOnScellActivation-r18 ::=
    rsType-r18
    reportQuantityRS-Indexes-r18
    maxNrofRS-IndexesToReport-r18
    includeBeamMeasurements-r18
}

```

BOOLEAN,
 BOOLEAN,
 BOOLEAN

SEQUENCE {
 RSSI-Range-r16 OPTIONAL -- Need R

SEQUENCE {
 CHOICE {
 SEQUENCE {
 MeasTriggerQuantityCLI-r16,
 BOOLEAN,
 Hysteresis,
 TimeToTrigger
 }
 }

ReportInterval,
 ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity},
 INTEGER (1..maxCLI-Report-r16),

SEQUENCE {
 ReportInterval,
 ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity},
 MeasReportQuantityCLI-r16,
 INTEGER (1..maxCLI-Report-r16),

SEQUENCE {
 RxTxReportInterval-r17 OPTIONAL, -- Need R
 ENUMERATED {r1, infinity, spare6, spare5, spare4, spare3, spare2, spare1},

CHOICE {
 SRS-RSRP-Range-r16,
 CLI-RSSI-Range-r16

ENUMERATED {srs-rsrp, cli-rssi}

SEQUENCE {
 NR-RS-Type,
 MeasReportQuantity,
 INTEGER (1..maxNrofIndexesToReport),
 BOOLEAN

```

CellIndividualOffsetList-r18 ::= SEQUENCE {
    physCellId-r18          PhysCellId,
    cellIndividualOffset-r18 Q-OffsetRangeList,
    ssbFrequency-r18        ARFCN-ValueNR
}
-- TAG-REPORTCONFIGNR-STOP
-- ASN1STOP

```

OPTIONAL -- Need R

<i>CondTriggerConfig</i> field descriptions
a3-Offset Offset value(s) to be used in NR conditional reconfiguration triggering condition for cond event a3. The actual value is field value * 0.5 dB.
a4-Threshold Threshold value associated to the selected trigger quantity (e.g. RSRP, RSRQ, SINR) per RS Type (e.g. SS/PBCH block, CSI-RS) to be used in NR conditional reconfiguration triggering condition for cond event a4.
a5-Threshold1/ a5-Threshold2 Threshold value associated to the selected trigger quantity (e.g. RSRP, RSRQ, SINR) per RS Type (e.g. SS/PBCH block, CSI-RS) to be used in NR conditional reconfiguration triggering condition for cond event a5. In the same <i>condeventA5</i> , the network configures the same quantity for the <i>MeasTriggerQuantity</i> of the <i>a5-Threshold1</i> and for the <i>MeasTriggerQuantity</i> of the <i>a5-Threshold2</i> .
condEventId Choice of NR conditional reconfiguration event triggered criteria.
distanceThreshFromReference1, distanceThreshFromReference2 Distance from a fixed reference location configured with <i>referenceLocation1</i> or <i>referenceLocation2</i> for <i>condEventD1</i> . Distance from a moving reference location determined by the UE based on the serving cell <i>movingReferenceLocation</i> broadcast in <i>SIB19</i> or <i>referenceLocation</i> and the corresponding epoch time and satellite ephemeris configured within the <i>MeasObjectNR</i> associated to the event for <i>condEventD2</i> . Each step represents 50m.
duration This field is used for defining the leaving condition T1-2 for conditional HO event <i>condEventT1</i> . Each step represents 100ms.
nesEvent Indicates the event is a NES-specific CHO event and the event is only considered to be satisfied if indication from lower layers is received indicating the applicability of NES-specific CHO event and the related entry condition(s) is fulfilled. This field can only be configured for <i>condEventA3</i> , <i>condEventA4</i> or <i>condEventA5</i> . This field cannot be configured for CPAC.
referenceLocation1, referenceLocation2 The <i>referenceLocation1</i> is associated to serving cell and <i>referenceLocation2</i> is associated to candidate target cell.
t1-Threshold The field counts the number of UTC seconds in 10 ms units since 00:00:00 on Gregorian calendar date 1 January, 1900 (midnight between Sunday, December 31, 1899 and Monday, January 1, 1900).
timeToTrigger Time during which specific criteria for the event needs to be met in order to execute the conditional reconfiguration evaluation.

<i>ReportConfigNR</i> field descriptions
reportType Type of the configured measurement report. In MR-DC, network does not configure report of type <i>reportCGI</i> using SRB3. The <i>condTriggerConfig</i> is used for CHO, CPA or CPC configuration.

<i>ReportCGI</i> field descriptions
<i>useAutonomousGaps</i> Indicates whether or not the UE is allowed to use autonomous gaps in acquiring system information from the NR neighbour cell. When the field is included, the UE applies the corresponding value for T321.

<i>EventTriggerConfig</i> field descriptions
a3-Offset/a6-Offset Offset value(s) to be used in NR measurement report triggering condition for event a3/a6. The actual value is field value * 0.5 dB.
aN-ThresholdM Threshold value associated to the selected trigger quantity (e.g. RSRP, RSRQ, SINR) per RS Type (e.g. SS/PBCH block, CSI-RS) to be used in NR measurement report triggering condition for event number aN. If multiple thresholds are defined for event number aN, the thresholds are differentiated by M. In the same <i>eventA5</i> , <i>eventA5H1</i> , <i>eventA5H2</i> , the network configures the same quantity for the <i>MeasTriggerQuantity</i> of the <i>a5-Threshold1</i> and for the <i>MeasTriggerQuantity</i> of the <i>a5-Threshold2</i> .
channelOccupancyThreshold RSSI threshold which is used for channel occupancy evaluation.
coarseLocationRequest This field is used to request UE to report coarse location information.
distanceThreshFromReference1, distanceThreshFromReference2 Distance from a fixed reference location configured with <i>referenceLocation1</i> or <i>referenceLocation2</i> for <i>eventD1</i> . Distance from a moving reference location determined by the UE based on the serving cell <i>movingReferenceLocation</i> broadcast in <i>SIB19</i> or <i>referenceLocation</i> and the corresponding epoch time and satellite ephemeris configured within the <i>MeasObjectNR</i> associated to the event for <i>eventD2</i> . Each step represents 50m.
eventId Choice of NR event triggered reporting criteria.
eventXN-SD-Threshold Indicates the SD-RSRP threshold value for the serving L2 U2N Relay UE in event <i>XN</i> (<i>N</i> equals 1 or 2). If this field is not included, the UE considers the SD-RSRP threshold value equals to the one indicated by <i>x1-Threshold1-Relay</i> / <i>x2-Threshold-Relay</i> .
includeAltitudeUE This field is used to request UE to report altitude information.
maxNrofRS-IndexesToReport Max number of RS indexes to include in the measurement report for A1-A6 events.
maxReportCells Max number of non-serving cells to include in the measurement report.
numberOfTriggeringCells Indicates the number of cells detected that are required to fulfill an event for a measurement report to be triggered. This field is applicable only for the events concerning neighbor cells, i.e. <i>eventA3</i> , <i>eventA4</i> , <i>eventA5</i> , <i>eventA3H1</i> , <i>eventA3H2</i> , <i>eventA4H1</i> , <i>eventA4H2</i> , <i>eventA5H1</i> , <i>eventA5H2</i> .
referenceLocation1, referenceLocation2 The <i>referenceLocation1</i> is associated to serving cell and <i>referenceLocation2</i> is associated to neighbour cell.
reportAddNeighMeas Indicates that the UE shall include the best neighbour cells per serving frequency.
reportAmount Number of measurement reports applicable for <i>eventTriggered</i> as well as for <i>periodical</i> report types.
reportOnBestCellChange Indicates whether the UE shall only send measurement report if the measured best cell (when configured to <i>n1</i>) or two best cells (when configured to <i>n2</i>) have changed. In this release of the specification, this field is applicable only for the events concerning neighbor cells. This field can only be configured when the value of the field <i>reportAmount</i> is set to any other value than <i>r1</i> .
reportOnLeave Indicates whether or not the UE shall initiate the measurement reporting procedure when the leaving condition is met for a cell in <i>cellsTriggeredList</i> or for a L2 U2N Relay UE in <i>relaysTriggeredList</i> , as specified in 5.5.4.1. Indicates whether or not the UE shall initiate the measurement reporting procedure when the leaving condition is met if configured in <i>eventD1</i> , <i>eventD2</i> , <i>eventH1</i> , <i>eventH2</i> as specified in 5.5.4.1.
reportQuantityCell The cell measurement quantities to be included in the measurement report.

reportQuantityRS-Indexes
Indicates which measurement information per RS index the UE shall include in the measurement report.
simulMultiTriggerSingleMeasReport
Indicates when multiple events with the same <i>eventID</i> satisfy the measurement report triggering condition(s), whether to consider only the event with the smallest value between the altitude of the UE and the configured altitude threshold.
timeToTrigger
Time during which specific criteria for the event needs to be met in order to trigger a measurement report.
useAllowedCellList
Indicates whether only the cells included in the allow-list of the associated measObject are applicable as specified in 5.5.4.1.
useT312
If value <i>TRUE</i> is configured, the UE shall use the timer T312 with the value <i>t312</i> as specified in the corresponding <i>measObjectNR</i> . If value <i>FALSE</i> is configured, the timer T312 is considered as disabled. Network configures value <i>TRUE</i> only if <i>reportType</i> is set to <i>eventTriggered</i> .
xN-ThresholdM
Threshold value associated to the selected trigger quantity (e.g. RSRP, RSRQ, SINR) per RS Type (e.g. SS/PBCH block, CSI-RS) to be used in NR measurement report triggering condition for event xN. If multiple thresholds are defined for event number xN, the thresholds are differentiated by M. <i>x1-Threshold1</i> and <i>x2-Threshold</i> indicates the threshold value for the serving L2 U2N Relay UE, <i>x1-Threshold2</i> indicates the threshold value for the NR Cells.

CLI-EventTriggerConfig field descriptions
i1-Threshold
Threshold value associated to the selected trigger quantity (e.g. SRS-RSRP, CLI-RSSI) to be used in CLI measurement report triggering condition for event i1.
eventID
Choice of CLI event triggered reporting criteria.
maxReportCLI
Max number of CLI measurement resource to include in the measurement report.
reportAmount
Number of measurement reports.
reportOnLeave
Indicates whether or not the UE shall initiate the measurement reporting procedure when the leaving condition is met for a CLI measurement resource in <i>srsTriggeredList</i> or <i>rssiTriggeredList</i> , as specified in 5.5.4.1.
timeToTrigger
Time during which specific criteria for the event needs to be met in order to trigger a measurement report.

CLI-PeriodicalReportConfig field descriptions
maxReportCLI
Max number of CLI measurement resource to include in the measurement report.
reportAmount
Number of measurement reports.
reportQuantityCLI
The CLI measurement quantities to be included in the measurement report.

<i>PeriodicalReportConfig</i> field descriptions
<i>coarseLocationRequest</i> This field is used to request UE to report coarse location information.
<i>maxNrofRS-IndexesToReport</i> Max number of RS indexes to include in the measurement report.
<i>maxReportCells</i> Max number of non-serving cells to include in the measurement report.
<i>reportAddNeighMeas</i> Indicates that the UE shall include the best neighbour cells per serving frequency.
<i>reportAmount</i> Number of measurement reports applicable for <i>eventTriggered</i> as well as for <i>periodical</i> report types
<i>reportQuantityCell</i> The cell measurement quantities to be included in the measurement report.
<i>reportQuantityRS-Indexes</i> Indicates which measurement information per RS index the UE shall include in the measurement report.
<i>ul-DelayValueConfig</i> Indicates that the UE shall perform the actual UL PDCP Packet Average Delay measurement per DRB as specified in TS 38.314 [53] and the UE shall ignore the fields <i>reportQuantityCell</i> and <i>maxReportCells</i> . The applicable values for the corresponding <i>reportInterval</i> are (one of the) {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960, min1,min6, min12, min30}. The <i>reportInterval</i> indicates the periodicity for performing and reporting of UL PDCP Packet Average Delay per DRB measurement as specified in TS 38.314 [53].
<i>ul-ExcessDelayConfig</i> Indicates that the UE shall perform the actual UL PDCP Excess Packet Delay per DRB measurement as specified in TS 38.314 [53] and the UE shall ignore the fields <i>reportQuantityCell</i> and <i>maxReportCells</i> . The applicable values for the corresponding <i>reportInterval</i> are (one of the) {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960, min1,min6, min12, min30}. The <i>reportInterval</i> indicates the periodicity for performing and reporting of UL PDCP Excess Packet Delay per DRB measurement as specified in TS 38.314 [53].
<i>useAllowedCellList</i> Indicates whether only the cells included in the allow-list of the associated measObject are applicable as specified in 5.5.4.1.

<i>ReportSFTD-NR</i> field descriptions
<i>cellForWhichToReportSFTD</i> Indicates the target NR neighbour cells for SFTD measurement between PCell and NR neighbour cells.
<i>drx-SFTD-NeighMeas</i> Indicates that the UE shall use available idle periods (i.e. DRX off periods) for the SFTD measurement in NR standalone. The network only includes <i>drx-SFTD-NeighMeas</i> field when <i>reprtSFTD-NeighMeas</i> is set to true.
<i>reportSFTD-Meas</i> Indicates whether UE is required to perform SFTD measurement between PCell and NR PSCell in NR-DC.
<i>reportSFTD-NeighMeas</i> Indicates whether UE is required to perform SFTD measurement between PCell and NR neighbour cells in NR standalone. The network does not include this field if <i>reportSFTD-Meas</i> is set to true.
<i>reportRSRP</i> Indicates whether UE is required to include RSRP result of NR PSCell or NR neighbour cells in SFTD measurement result, derived based on SSB. If it is set to true, the network should ensure that <i>ssb-ConfigMobility</i> is included in the measurement object for NR PSCell or NR neighbour cells.

<i>RxTxPeriodical field descriptions</i>
<i>reportAmount</i> This field indicates the number of UE Rx-Tx time difference measurement reports. If configured to <i>r1</i> , the network does not configure <i>rxTxReportInterval</i> and only one measurement is reported. If configured to <i>infinity</i> , UE periodically reports measurements according to the periodicity configured by <i>rxTxReportInterval</i> .
<i>rxTxReportInterval</i> This field indicates the measurement reporting periodicity of UE Rx-Tx time difference.

<i>other field descriptions</i>
<i>MeasTriggerQuantity</i> SINR is applicable only for CONNECTED mode events.

<i>ReportOnScellActivation field descriptions</i>
<i>rsType</i> Indicates which RS is used to provide the measurement result. Only value <i>ssb</i> can be set in this release.
<i>reportQuantityRS-Indexes</i> Indicates which measurement information per RS index is used to sort the reported measurement results and is included in the measurement report.
<i>maxNrofRS-IndexesToReport</i> Max number of RS indexes to include in the measurement report.
<i>includeBeamMeasurements</i> Indicates whether to include the measurement result per RS index in the measurement report.

<i>CellIndividualOffsetList field descriptions</i>
<i>cellIndividualOffset</i> Cell individual offsets applicable to a specific measurement event. If this field is present, the UE, for the same cell, shall ignore the cell individual offset configured within the <i>MeasObjectNR</i> of the <i>measID</i> associated with this <i>ReportConfigNR</i> .
<i>physCellId</i> Physical cell identity of a cell in the cell list.
<i>ssbFrequency</i> Indicates the NR frequency of SS for which <i>cellIndividualOffset</i> is applicable. If the field is not configured, the NR frequency of SS indicated by <i>ssbFrequency</i> indicated within the <i>MeasObjectNR</i> of the <i>measID</i> associated with this <i>ReportConfigNR</i> applies.

– ***ReportConfigNR-SL***

The IE *ReportConfigNR-SL* specifies criteria for triggering of a CBR measurement reporting event for NR sidelink communication/discovery. Measurement reporting events are based on CBR measurement results on the corresponding transmission resource pools. These events are labelled CN with N equal to 1 and 2.

Event C1: CBR of NR sidelink communication/discovery is above a threshold;

Event C2: CBR of NR sidelink communication/discovery is below a threshold;

ReportConfigNR-SL information element

```
-- ASN1START
-- TAG-REPORTCONFIGNR-SL-START

ReportConfigNR-SL-r16 ::=
  reportType-r16
  periodical-r16
  eventTriggered-r16
}

EventTriggerConfigNR-SL-r16 ::=
  eventId-r16
  eventC1
    c1-Threshold-r16
    hysteresis-r16
    timeToTrigger-r16
  },
  eventC2-r16
    c2-Threshold-r16
    hysteresis-r16
    timeToTrigger-r16
  },
  ...
},
reportInterval-r16
reportAmount-r16
reportQuantity-r16
...
}

PeriodicalReportConfigNR-SL-r16 ::=
  reportInterval-r16
  reportAmount-r16
  reportQuantity-r16
  ...
}

MeasReportQuantity-r16 ::=
  cbr-r16
  ...
}

-- TAG-REPORTCONFIGNR-SL-STOP
-- ASN1STOP
```

ReportConfigNR-SL field descriptions
reportType Type of the configured CBR measurement report for NR sidelink communication/discovery.

<i>EventTriggerConfigNR-SL</i> field descriptions
<i>cN-Threshold</i> Threshold used for events C1 and C2 specified in clauses 5.5.4.11 and 5.5.4.12, respectively.
<i>eventId</i> Choice of NR event triggered reporting criteria.
<i>reportAmount</i> Number of measurement reports applicable for <i>eventTriggered</i> as well as for <i>periodical</i> report types.
<i>reportQuantity</i> The sidelink measurement quantities to be included in the measurement report. In this release, this is set as the CBR measurement result.
<i>timeToTrigger</i> Time during which specific criteria for the event needs to be met in order to trigger a measurement report.

<i>PeriodicalReportConfigNR-SL</i> field descriptions
<i>reportAmount</i> Number of measurement reports applicable for <i>eventTriggered</i> as well as for <i>periodical</i> report types.
<i>reportQuantity</i> The sidelink measurement quantities to be included in the measurement report. In this release, this is set as the CBR measurement result.

— *ReportConfigToAddModList*

The IE *ReportConfigToAddModList* concerns a list of reporting configurations to add or modify.

ReportConfigToAddModList information element

```
-- ASN1START
-- TAG-REPORTCONFIGTOADDMODLIST-START

ReportConfigToAddModList ::=      SEQUENCE (SIZE (1..maxReportConfigId)) OF ReportConfigToAddMod

ReportConfigToAddMod ::=          SEQUENCE {
    reportConfigId                ReportConfigId,
    reportConfig                   CHOICE {
        reportConfigNR,
        ...,
        reportConfigInterRAT      ReportConfigInterRAT,
        reportConfigNR-SL-r16     ReportConfigNR-SL-r16
    }
}

-- TAG-REPORTCONFIGTOADDMODLIST-STOP
-- ASN1STOP
```

— *ReportInterval*

The IE *ReportInterval* indicates the interval between periodical reports. The *ReportInterval* is applicable if the UE performs periodical reporting (i.e. when *reportAmount* exceeds 1) when *reportType* is set to either *eventTriggered*, *periodical*, *cli-EventTriggered* or *cli-Periodical*. Value *ms120* corresponds to 120 ms, value *ms240* corresponds to 240 ms and so on, while value *min1* corresponds to 1 min, *min6* corresponds to 6 min and so on.

ReportInterval information element

```
-- ASN1START
-- TAG-REPORTINTERVAL-START

ReportInterval ::=
    ENUMERATED {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960,
                min1, min6, min12, min30 }

-- TAG-REPORTINTERVAL-STOP
-- ASN1STOP
```

— *ReselectionThreshold*

The IE *ReselectionThreshold* is used to indicate an Rx level threshold for cell reselection. Actual value of threshold = field value * 2 [dB].

ReselectionThreshold information element

```
-- ASN1START
-- TAG-RESELECTIONTHRESHOLD-START

ReselectionThreshold ::=
    INTEGER (0..31)

-- TAG-RESELECTIONTHRESHOLD-STOP
-- ASN1STOP
```

— *ReselectionThresholdQ*

The IE *ReselectionThresholdQ* is used to indicate a quality level threshold for cell reselection. Actual value of threshold = field value [dB].

ReselectionThresholdQ information element

```
-- ASN1START
-- TAG-RESELECTIONTHRESHOLDQ-START

ReselectionThresholdQ ::=
    INTEGER (0..31)

-- TAG-RESELECTIONTHRESHOLDQ-STOP
-- ASN1STOP
```

— *ResumeCause*

The IE *ResumeCause* is used to indicate the resume cause in *RRCResumeRequest*, *RRCResumeRequest1* and *UEAssistanceInformation*.

ResumeCause information element

```
-- ASN1START
-- TAG-RESUMECAUSE-START

ResumeCause ::=
    ENUMERATED {emergency, highPriorityAccess, mt-Access, mo-Signalling,
                mo-Data, mo-VoiceCall, mo-VideoCall, mo-SMS, rna-Update, mps-PriorityAccess,
                mcs-PriorityAccess, mt-SDT-v1810, srs-PosConfigOrActivationReq-v1800, spare3, spare2, spare1 }

-- TAG-RESUMECAUSE-STOP
-- ASN1STOP
```

— *RLC-BearerConfig*

The IE *RLC-BearerConfig* is used to configure an RLC entity, a corresponding logical channel in MAC and the linking to a PDCP entity (served radio bearer).

RLC-BearerConfig information element

```
-- ASN1START
-- TAG-RLC-BEARERCONFIG-START

RLC-BearerConfig ::=
    logicalChannelIdentity
    servedRadioBearer
        srb-Identity
        drb-Identity
    }
    reestablishRLC
    rlc-Config
    mac-LogicalChannelConfig
    ...,
    [[
        rlc-Config-v1610
    ]],
    [[
        rlc-Config-v1700
        logicalChannelIdentityExt-r17
        multicastRLC-BearerConfig-r17
        servedRadioBearerSRB4-r17
    ]],
    [[
        servedRadioBearerSRB5-r18
    ]]
}

SEQUENCE {
    LogicalChannelIdentity,
    CHOICE {
        SRB-Identity,
        DRB-Identity
    }
    ENUMERATED {true}
    RLC-Config
    LogicalChannelConfig
    OPTIONAL, -- Cond LCH-SetupOnly
    OPTIONAL, -- Need N
    OPTIONAL, -- Cond LCH-Setup
    OPTIONAL, -- Cond LCH-Setup

    RLC-Config-v1610
    OPTIONAL -- Need R

    RLC-Config-v1700
    LogicalChannelIdentityExt-r17
    MulticastRLC-BearerConfig-r17
    SRB-Identity-v1700
    OPTIONAL, -- Need R
    OPTIONAL, -- Cond LCH-SetupModMRB
    OPTIONAL, -- Cond LCH-SetupOnlyMRB
    OPTIONAL -- Cond LCH-SetupOnlySRB4

    SRB-Identity-v1800
    OPTIONAL -- Cond LCH-SetupOnlySRB5

}

MulticastRLC-BearerConfig-r17 ::=
    SEQUENCE {
```

```

    servedMBS-RadioBearer-r17
    isPTM-Entity-r17
}

LogicalChannelIdentityExt-r17 ::=
    INTEGER (320..65855)

-- TAG-RLC-BEARERCONFIG-STOP
-- ASN1STOP
```

RLC-BearerConfig field descriptions
isPTM-Entity If configured, indicates that the RLC entity is used for PTM reception. When the field is absent the RLC entity is used for PTP transmission/reception.
logicalChannelIdentity ID used commonly for the MAC logical channel and for the RLC bearer.
logicalChannelIdentityExt Extended logical channel ID used commonly for the MAC logical channel and for the RLC bearer for PTM reception. If this field is configured, the UE shall ignore <i>logicalChannelIdentity</i> .
reestablishRLC Indicates that RLC should be re-established. Network sets this to <i>true</i> at least whenever the security key used for the radio bearer associated with this RLC entity changes. For SRB2, multicast MRBs and DRBs, unless full configuration is used, it is also set to <i>true</i> during the resumption of the RRC connection or the first reconfiguration after reestablishment. For SRB1, when resuming an RRC connection, or at the first reconfiguration after RRC connection reestablishment, the network does not set this field to <i>true</i> . The network does not include this field if <i>servedRadioBearer</i> is set to <i>drb-Identity</i> and the <i>RLC-BearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message within the <i>LTM-Config</i> IE. For DRBs, network doesn't include this field if the <i>RLC-BearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message associated with subsequent CPAC within the <i>ConditionalReconfiguration</i> IE. Network doesn't include this field if the <i>RadioBearerConfig</i> IE is part of an <i>RRCReconfiguration</i> message associated with subsequent CPAC within the <i>ConditionalReconfiguration</i> IE which is received within a MCG <i>RRCReconfiguration</i> message via SRB1.
rlc-Config Determines the RLC mode (UM, AM) and provides corresponding parameters. RLC mode reconfiguration can only be performed by DRB/multicast MRB release/addition or full configuration. The network may configure <i>rlc-Config-v1610</i> only when <i>rlc-Config</i> (without suffix) is set to <i>am</i> .
servedMBS-RadioBearer Associates the RLC Bearer with a multicast MRB. The UE shall deliver DL RLC SDUs received via the RLC entity of this RLC bearer to the PDCP entity of the <i>servedMBS-RadioBearer</i> .
servedRadioBearer, servedRadioBearerSRB4, servedRadioBearerSRB5 Associates the RLC Bearer with an SRB or a DRB. The UE shall deliver DL RLC SDUs received via the RLC entity of this RLC bearer to the PDCP entity of the <i>servedRadioBearer</i> . Furthermore, the UE shall advertise and deliver uplink PDCP PDUs of the uplink PDCP entity of the <i>servedRadioBearer</i> to the uplink RLC entity of this RLC bearer unless the uplink scheduling restrictions (<i>moreThanOneRLC</i> in <i>PDCP-Config</i> and the restrictions in <i>LogicalChannelConfig</i>) forbid it to do so.

Conditional Presence	Explanation
<i>LCH-Setup</i>	This field is mandatory present upon creation of a new logical channel for a DRB or a multicast MRB or SRB4 or SRB5. This field is optionally present, Need S, upon creation of a new logical channel for an SRB except SRB4 and SRB5. It is optionally present, Need M, otherwise.
<i>LCH-SetupModMRB</i>	This field is optionally present upon creation of a new logical channel for PTM reception for a multicast MRB. If this field is included upon creation of a new logical channel for PTM reception for a multicast MRB, it shall be present when modifying this logical channel. The field is absent for logical channels configured for an SRB and a DRB.
<i>LCH-SetupOnly</i>	This field is mandatory present upon creation of a new logical channel for a DRB or an SRB (<i>servedRadioBearer</i>). It is absent, Need M otherwise.
<i>LCH-SetupOnlyMRB</i>	This field is mandatory present upon creation of a new logical channel for a multicast MRB and upon modification of <i>MRB-Identity</i> of the served MRB. It is absent, Need M otherwise.
<i>LCH-SetupOnlySRB4</i>	This field is mandatory present upon creation of a new logical channel for SRB4 (<i>servedRadioBearerSRB4</i>). It is absent, Need M otherwise.
<i>LCH-SetupOnlySRB5</i>	This field is mandatory present upon creation of a new logical channel for SRB5 (<i>servedRadioBearerSRB5</i>). It is absent, Need M otherwise.

– *RLC-Config*

The IE *RLC-Config* is used to specify the RLC configuration of SRBs, multicast MRBs and DRBs.

RLC-Config information element

```

-- ASN1START
-- TAG-RLC-CONFIG-START

RLC-Config ::=
    am
        ul-AM-RLC
        dl-AM-RLC
    },
    um-Bi-Directional
        ul-UM-RLC
        dl-UM-RLC
    },
    um-Uni-Directional-UL
        ul-UM-RLC
    },
    um-Uni-Directional-DL
        dl-UM-RLC
    },
    ...
}

UL-AM-RLC ::=
    sn-FieldLength
    t-PollRetransmit
    pollPDU
    pollByte
    maxRetxThreshold
}

CHOICE {
    SEQUENCE {
        UL-AM-RLC,
        DL-AM-RLC
    },
    SEQUENCE {
        UL-UM-RLC,
        DL-UM-RLC
    },
    SEQUENCE {
        UL-UM-RLC
    },
    SEQUENCE {
        DL-UM-RLC
    }
}

SEQUENCE {
    SN-FieldLengthAM
    T-PollRetransmit,
    PollPDU,
    PollByte,
    ENUMERATED { t1, t2, t3, t4, t6, t8, t16, t32 }
}

OPTIONAL, -- Cond Reestab

```

```

DL-AM-RLC ::=
    sn-FieldLength
    t-Reassembly
    t-StatusProhibit
}

UL-UM-RLC ::=
    sn-FieldLength
}

DL-UM-RLC ::=
    sn-FieldLength
    t-Reassembly
}

T-PollRetransmit ::=
    SEQUENCE {
        ms5, ms10, ms15, ms20, ms25, ms30, ms35,
        ms40, ms45, ms50, ms55, ms60, ms65, ms70,
        ms75, ms80, ms85, ms90, ms95, ms100, ms105,
        ms110, ms115, ms120, ms125, ms130, ms135,
        ms140, ms145, ms150, ms155, ms160, ms165,
        ms170, ms175, ms180, ms185, ms190, ms195,
        ms200, ms205, ms210, ms215, ms220, ms225,
        ms230, ms235, ms240, ms245, ms250, ms300,
        ms350, ms400, ms450, ms500, ms800, ms1000,
        ms2000, ms4000, ms1-v1610, ms2-v1610, ms3-v1610,
        ms4-v1610, spare1}

PollPDU ::=
    ENUMERATED {
        p4, p8, p16, p32, p64, p128, p256, p512, p1024, p2048, p4096, p6144, p8192, p12288, p16384, p20480,
        p24576, p28672, p32768, p40960, p49152, p57344, p65536, infinity, spare8, spare7, spare6, spare5, spare4,
        spare3, spare2, spare1}

PollByte ::=
    ENUMERATED {
        kB1, kB2, kB5, kB8, kB10, kB15, kB25, kB50, kB75,
        kB100, kB125, kB250, kB375, kB500, kB750, kB1000,
        kB1250, kB1500, kB2000, kB3000, kB4000, kB4500,
        kB5000, kB5500, kB6000, kB6500, kB7000, kB7500,
        mB8, mB9, mB10, mB11, mB12, mB13, mB14, mB15,
        mB16, mB17, mB18, mB20, mB25, mB30, mB40, infinity,
        spare20, spare19, spare18, spare17, spare16,
        spare15, spare14, spare13, spare12, spare11,
        spare10, spare9, spare8, spare7, spare6, spare5,
        spare4, spare3, spare2, spare1}

T-Reassembly ::=
    ENUMERATED {
        ms0, ms5, ms10, ms15, ms20, ms25, ms30, ms35,
        ms40, ms45, ms50, ms55, ms60, ms65, ms70,
        ms75, ms80, ms85, ms90, ms95, ms100, ms110,
        ms120, ms130, ms140, ms150, ms160, ms170,
        ms180, ms190, ms200, spare1}

T-StatusProhibit ::=
    ENUMERATED {

```



```

ms0, ms5, ms10, ms15, ms20, ms25, ms30, ms35,
ms40, ms45, ms50, ms55, ms60, ms65, ms70,
ms75, ms80, ms85, ms90, ms95, ms100, ms105,
ms110, ms115, ms120, ms125, ms130, ms135,
ms140, ms145, ms150, ms155, ms160, ms165,
ms170, ms175, ms180, ms185, ms190, ms195,
ms200, ms205, ms210, ms215, ms220, ms225,
ms230, ms235, ms240, ms245, ms250, ms300,
ms350, ms400, ms450, ms500, ms800, ms1000,
ms1200, ms1600, ms2000, ms2400, spare2, spare1}

SN-FieldLengthUM ::= ENUMERATED {size6, size12}
SN-FieldLengthAM ::= ENUMERATED {size12, size18}

RLC-Config-v1610 ::= SEQUENCE {
    dl-AM-RLC-v1610
}

RLC-Config-v1700 ::= SEQUENCE {
    dl-AM-RLC-v1700,
    dl-UM-RLC-v1700
}

DL-AM-RLC-v1610 ::= SEQUENCE {
    t-StatusProhibit-v1610
    ...
}
OPTIONAL, -- Need R

DL-AM-RLC-v1700 ::= SEQUENCE {
    t-ReassemblyExt-r17
}
OPTIONAL -- Need R

DL-UM-RLC-v1700 ::= SEQUENCE {
    t-ReassemblyExt-r17
}
OPTIONAL -- Need R

T-StatusProhibit-v1610 ::= ENUMERATED { ms1, ms2, ms3, ms4, spare4, spare3, spare2, spare1}

T-ReassemblyExt-r17 ::= ENUMERATED {ms210, ms220, ms340, ms350, ms550, ms1100, ms1650, ms2200}

-- TAG-RLC-CONFIG-STOP
-- ASN1STOP

```

RLC-Config field descriptions
maxRetxThreshold Parameter for RLC AM in TS 38.322 [4]. Value <i>t1</i> corresponds to 1 retransmission, value <i>t2</i> corresponds to 2 retransmissions and so on.
pollByte Parameter for RLC AM in TS 38.322 [4]. Value <i>kB25</i> corresponds to 25 kBytes, value <i>kB50</i> corresponds to 50 kBytes and so on. <i>infinity</i> corresponds to an infinite amount of kBytes.
pollPDU Parameter for RLC AM in TS 38.322 [4]. Value <i>p4</i> corresponds to 4 PDUs, value <i>p8</i> corresponds to 8 PDUs and so on. <i>infinity</i> corresponds to an infinite number of PDUs.
sn-FieldLength Indicates the RLC SN field size, see TS 38.322 [4], in bits. Value <i>size6</i> means 6 bits, value <i>size12</i> means 12 bits, value <i>size18</i> means 18 bits. The value of <i>sn-FieldLength</i> of an RLC entity for the DRB/multicast MRB shall be changed only using reconfiguration with sync. The network configures only value <i>size12</i> in <i>SN-FieldLengthAM</i> for SRB.
t-PollRetransmit Timer for RLC AM in TS 38.322 [4], in milliseconds. Value <i>ms5</i> means 5 ms, value <i>ms10</i> means 10 ms and so on.
t-Reassembly, t-ReassemblyExt Timer for reassembly in TS 38.322 [4], in milliseconds. Value <i>ms0</i> means 0 ms, value <i>ms5</i> means 5 ms and so on. If <i>t-ReassemblyExt-r17</i> is configured, the UE shall ignore <i>t-Reassembly</i> (without suffix).
t-StatusProhibit Timer for status reporting in TS 38.322 [4], in milliseconds. Value <i>ms0</i> means 0 ms, value <i>ms5</i> means 5 ms and so on. If <i>t-StatusProhibit-v1610</i> is present, the UE shall ignore <i>t-StatusProhibit</i> (without suffix).

Conditional Presence	Explanation
<i>Reestab</i>	The field is mandatory present at RLC bearer setup. It is optionally present, need M, at RLC re-establishment. Otherwise it is absent. Need M.

– RLF-TimersAndConstants

The IE *RLF-TimersAndConstants* is used to configure UE specific timers and constants.

RLF-TimersAndConstants information element

```
-- ASN1START
-- TAG-RLF-TIMERSANDCONSTANTS-START

RLF-TimersAndConstants ::=
    SEQUENCE {
        t310          ENUMERATED {ms0, ms50, ms100, ms200, ms500, ms1000, ms2000, ms4000, ms6000},
        n310          ENUMERATED {n1, n2, n3, n4, n6, n8, n10, n20},
        n311          ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10},
        ...,
        [[
            t311          ENUMERATED {ms1000, ms3000, ms5000, ms10000, ms15000, ms20000, ms30000}
        ]]
    }

-- TAG-RLF-TIMERSANDCONSTANTS-STOP
-- ASN1STOP
```

<i>RLF-TimersAndConstants</i> field descriptions
<i>n3xy</i> Constants are described in clause 7.3. Value <i>n1</i> corresponds to 1, value <i>n2</i> corresponds to 2 and so on.
<i>t3xy</i> Timers are described in clause 7.1. Value <i>ms0</i> corresponds to 0 ms, value <i>ms50</i> corresponds to 50 ms and so on.

— *RNTI-Value*

The IE *RNTI-Value* represents a Radio Network Temporary Identity.

RNTI-Value information element

```
-- ASN1START
-- TAG-RNTI-VALUE-START

RNTI-Value ::=
    INTEGER (0..65535)

-- TAG-RNTI-VALUE-STOP
-- ASN1STOP
```

— *RSRP-Range*

The IE *RSRP-Range* specifies the value range used in RSRP measurements and thresholds. For measurements, integer value for RSRP measurements is according to Table 10.1.6.1-1 in TS 38.133 [14]. For thresholds, the actual value is (IE value – 156) dBm, except for the IE value 127, in which case the actual value is infinity.

RSRP-Range information element

```
-- ASN1START
-- TAG-RSRP-RANGE-START

RSRP-Range ::=
    INTEGER(0..127)

-- TAG-RSRP-RANGE-STOP
-- ASN1STOP
```

— *RSRQ-Range*

The IE *RSRQ-Range* specifies the value range used in RSRQ measurements and thresholds. For measurements, integer value for RSRQ measurements is according to Table 10.1.11.1-1 in TS 38.133 [14]. For thresholds, the actual value is (IE value – 87) / 2 dB.

RSRQ-Range information element

```
-- ASN1START
```

```
-- TAG-RSRQ-RANGE-START

RSRQ-Range ::=
    INTEGER(0..127)

-- TAG-RSRQ-RANGE-STOP
-- ASN1STOP
```

— *RSSI-Range*

The IE *RSSI-Range* specifies the value range used in RSSI measurements and thresholds for NR operation with shared spectrum channel access. The integer value for RSSI measurements is according to Table 10.1.34.3-1 in TS 38.133 [14].

RSSI-Range information element

```
-- ASN1START
-- TAG-RSSI-RANGE-START

RSSI-Range-r16 ::=
    INTEGER(0..76)

-- TAG-RSSI-RANGE-STOP
-- ASN1STOP
```

— *RxTxTimeDiff*

The IE *RxTxTimeDiff* contains the Rx-Tx time difference measurement at either the UE or the gNB.

RxTxTimeDiff information element

```
-- ASN1START
-- TAG-RXTXTIMEDIFF-START

RxTxTimeDiff-r17 ::= SEQUENCE {
    result-k5-r17    INTEGER (0..61565)
    ...
}

-- TAG-RXTXTIMEDIFF-STOP
-- ASN1STOP
```

<i>RxTxTimeDiff</i> field descriptions
result-k5 This field indicates the Rx-Tx time difference measurement, see TS 38.215 [9], clause 10.1.25.3.1 of TS 38.133 [14] for UE Rx-Tx time difference and clause 13.2.1 of TS 38.133 [14] for gNB Rx-Tx time difference.

— *SCellActivationRS-Config*

The IE *SCellActivationRS-Config* is used to configure a Reference Signal for fast activation of the SCell where the IE is included (see TS 38.214 [19], clause 5.2.1.5.3. Usage of an *SCellActivationRS-Config* is indicated by including its *scellActivationRS-Id* in the Enhanced SCell activation MAC CE (see TS 38.321 [3] clause 6.1.3.55).

***SCellActivationRS-Config* information element**

```
-- ASN1START
-- TAG-SCELLACTIVATIONRS-CONFIG-START

SCellActivationRS-Config-r17 ::= SEQUENCE {
    scellActivationRS-Id-r17          SCellActivationRS-ConfigId-r17,
    resourceSet-r17                  NZP-CSI-RS-ResourceSetId,
    gapBetweenBursts-r17             INTEGER (2..31)                                OPTIONAL, -- Need R
    qcl-Info-r17                     TCI-StateId,
    ...
}

-- TAG-SCELLACTIVATIONRS-CONFIG-STOP
-- ASN1STOP
```

<i>SCellActivationRS-Config</i> field descriptions
gapBetweenBursts When this field is present, there are two bursts and it indicates the gap between the two bursts in number of slots. When this field is absent, there is a single burst.
qcl-Info Reference to TCI-State for providing the QCL source and QCL type for each <i>NZP-CSI-RS-Resource</i> listed in <i>nzp-CSI-RS-Resources</i> of the <i>NZP-CSI-RS-ResourceSet</i> indicated by <i>resourceSet</i> (see TS 38.214 [19], clause 5.1.6.1.1.1). <i>TCI-StateId</i> refers to the <i>TCI-State</i> which has this value for <i>tcid-StateId</i> and is defined in <i>tcid-StatesToAddModList</i> or <i>dl-OrJointTCI-StateList</i> in the <i>PD-SCH-Config</i> included in the <i>BWP-Downlink</i> of this serving cell indicated by <i>firstActiveDownlinkBWP-Id</i> in the <i>ServingCellConfig</i> in which this IE is included.
resourceSet <i>nzp-CSI-ResourceSetId</i> of the <i>NZP-CSI-RS-ResourceSet</i> of this serving cell used as resource configuration for one or two bursts for SCell activation. This NZP-CSI-RS-ResourceSet consists of four NZP CSI-RS resources in two consecutive slots with two NZP CSI-RS resources in each slot (see TS 38.214 [19], clause 5.1.6.1.1.1). The CSI-RS associated with this NZP-CSI-RS-ResourceSet are located in the BWP addressed by <i>firstActiveDownlinkBWP-Id</i> .

— *SCellActivationRS-ConfigId*

The IE *SCellActivationRS-ConfigId* is used to identify one *SCellActivationRS-Config*.

***SCellActivationRS-ConfigId* information element**

```
-- ASN1START
-- TAG-SCELLACTIVATIONRS-CONFIGID-START

SCellActivationRS-ConfigId-r17 ::= INTEGER (1.. maxNrofSCellActRS-r17)

-- TAG-SCELLACTIVATIONRS-CONFIGID-STOP
```

```
-- ASN1STOP
```

— *SCellIndex*

The IE *SCellIndex* concerns a short identity, used to identify an SCell. The value range is shared across the Cell Groups.

SCellIndex information element

```
-- ASN1START
-- TAG-SCCELLINDEX-START
```

```
SCellIndex ::= INTEGER (1..31)
```

```
-- TAG-SCCELLINDEX-STOP
-- ASN1STOP
```

— *SchedulingRequestConfig*

The IE *SchedulingRequestConfig* is used to configure the parameters, for the dedicated scheduling request (SR) resources.

SchedulingRequestConfig information element

```
-- ASN1START
-- TAG-SCHEDULINGREQUESTCONFIG-START
```

```
SchedulingRequestConfig ::= SEQUENCE {
    schedulingRequestToAddModList SEQUENCE (SIZE (1..maxNrofSR-ConfigPerCellGroup)) OF SchedulingRequestToAddMod OPTIONAL, -- Need N
    schedulingRequestToReleaseList SEQUENCE (SIZE (1..maxNrofSR-ConfigPerCellGroup)) OF SchedulingRequestId OPTIONAL -- Need N
}
```

```
SchedulingRequestToAddMod ::= SEQUENCE {
    schedulingRequestId SchedulingRequestId,
    sr-ProhibitTimer ENUMERATED {ms1, ms2, ms4, ms8, ms16, ms32, ms64, ms128} OPTIONAL, -- Need S
    sr-TransMax ENUMERATED {n4, n8, n16, n32, n64, spare3, spare2, spare1}
}
```

```
SchedulingRequestConfig-v1700 ::= SEQUENCE {
    schedulingRequestToAddModListExt-v1700 SEQUENCE (SIZE (1..maxNrofSR-ConfigPerCellGroup)) OF SchedulingRequestToAddModExt-v1700 OPTIONAL -- Need N
}
```

```
SchedulingRequestToAddModExt-v1700 ::= SEQUENCE {
    sr-ProhibitTimer-v1700 ENUMERATED { ms192, ms256, ms320, ms384, ms448, ms512, ms576, ms640, ms1082, spare7, spare6, spare5, spare4, spare3, spare2, spare1}
}
```

OPTIONAL -- Need R

-- TAG-SCHEDULINGREQUESTCONFIG-STOP
-- ASN1STOP

SchedulingRequestConfig field descriptions
schedulingRequestToAddModList, schedulingRequestToAddModListExt List of Scheduling Request configurations to add or modify. If <i>schedulingRequestToAddModListExt</i> is configured, it contains the same number of entries, and in the same order, as <i>schedulingRequestToAddModList</i> .
schedulingRequestToReleaseList List of Scheduling Request configurations to release.

SchedulingRequestToAddMod field descriptions
schedulingRequestId Used to modify a SR configuration and to indicate, in <i>LogicalChannelConfig</i> , the SR configuration to which a logical channel is mapped and to indicate, in <i>SchedulingRequestResourceConfig</i> , the SR configuration for which a scheduling request resource is used.
sr-ProhibitTimer Timer for SR transmission on PUCCH in TS 38.321 [3]. Value is in ms. Value <i>ms1</i> corresponds to 1ms, value <i>ms2</i> corresponds to 2ms, and so on. If <i>sr-ProhibitTimer-v1700</i> is configured, UE shall ignore <i>sr-ProhibitTimer</i> (without suffix). If both <i>sr-ProhibitTimer</i> (without suffix) and <i>sr-ProhibitTimer-v1700</i> are absent, the UE applies the value 0.
sr-TransMax Maximum number of SR transmissions as described in TS 38.321 [3]. Value <i>n4</i> corresponds to 4, value <i>n8</i> corresponds to 8, and so on.

– SchedulingRequestId

The IE *SchedulingRequestId* is used to identify a Scheduling Request instance in the MAC layer.

SchedulingRequestId information element

-- ASN1START
-- TAG-SCHEDULINGREQUESTID-START

SchedulingRequestId ::= INTEGER (0..7)

-- TAG-SCHEDULINGREQUESTID-STOP
-- ASN1STOP

– SchedulingRequestResourceConfig

The IE *SchedulingRequestResourceConfig* determines physical layer resources on PUCCH where the UE may send the dedicated scheduling request (D-SR) (see TS 38.213 [13], clause 9.2.4).

SchedulingRequestResourceConfig information element

```

-- ASN1START
-- TAG-SCHEDULINGREQUESTRESOURCECONFIG-START

SchedulingRequestResourceConfig ::= SEQUENCE {
    schedulingRequestResourceId      SchedulingRequestResourceId,
    schedulingRequestID              SchedulingRequestId,
    periodicityAndOffset             CHOICE {
        sym2                        NULL,
        sym6or7                     NULL,
        sl1                         NULL,
        sl2                         INTEGER (0..1),
        sl4                         INTEGER (0..3),
        sl5                         INTEGER (0..4),
        sl8                         INTEGER (0..7),
        sl10                       INTEGER (0..9),
        sl16                       INTEGER (0..15),
        sl20                       INTEGER (0..19),
        sl40                       INTEGER (0..39),
        sl80                       INTEGER (0..79),
        sl160                     INTEGER (0..159),
        sl320                     INTEGER (0..319),
        sl640                     INTEGER (0..639)
    },
    resource                        PUCCH-ResourceId
}

SchedulingRequestResourceConfigExt-v1610 ::= SEQUENCE {
    phy-PriorityIndex-r16          ENUMERATED {p0, p1}
    ...
}

SchedulingRequestResourceConfigExt-v1700 ::= SEQUENCE {
    periodicityAndOffset-r17       CHOICE {
        sl1280                     INTEGER (0..1279),
        sl2560                     INTEGER (0..2559),
        sl5120                     INTEGER (0..5119)
    }
}

-- TAG-SCHEDULINGREQUESTRESOURCECONFIG-STOP
-- ASN1STOP

```

OPTIONAL, -- Need M
OPTIONAL -- Need M

OPTIONAL, -- Need M

OPTIONAL -- Need M

SchedulingRequestResourceConfig field descriptions
periodicityAndOffset SR periodicity and offset in number of symbols or slots (see TS 38.213 [13], clause 9.2.4) The following periodicities may be configured depending on the chosen subcarrier spacing: SCS = 15 kHz: 2sym, 7sym, 1sl, 2sl, 4sl, 5sl, 8sl, 10sl, 16sl, 20sl, 40sl, 80sl SCS = 30 kHz: 2sym, 7sym, 1sl, 2sl, 4sl, 5sl, 8sl, 10sl, 16sl, 20sl, 40sl, 80sl, 160sl SCS = 60 kHz: 2sym, 7sym/6sym, 1sl, 2sl, 4sl, 8sl, 16sl, 20sl, 40sl, 80sl, 160sl, 320sl SCS = 120 kHz: 2sym, 7sym, 1sl, 2sl, 4sl, 5sl, 8sl, 10sl, 16sl, 40sl, 80sl, 160sl, 320sl, 640sl SCS = 480 kHz: 1sl, 2sl, 4sl, 8sl, 16sl, 40sl, 80sl, 160sl, 320sl, 640sl, 1280sl, 2560sl SCS = 960 kHz: 1sl, 2sl, 4sl, 8sl, 16sl, 40sl, 80sl, 160sl, 320sl, 640sl, 1280sl, 2560sl, 5120sl sym6or7 corresponds to 6 symbols if extended cyclic prefix and a SCS of 60 kHz are configured, otherwise it corresponds to 7 symbols. For periodicities 2sym, 7sym and sl1 the UE assumes an offset of 0 slots. If <i>periodicityAndOffset-r17</i> is present, any previously configured <i>periodicityAndOffset</i> (without suffix) is released, and vice versa. UE indicates support of the following SR periodicities in <i>additionalSR-Periodicities</i> (see TS 38.306, clause 4.2.6): SCS = 30 kHz: 5sl SCS = 120 kHz: 5sl, 10sl
phy-PriorityIndex Indicates whether this scheduling request resource is <i>high</i> or <i>low</i> priority in PHY prioritization/multiplexing handling (see TS 38.213 [13], clause 9.2.4). Value <i>p0</i> indicates low priority and value <i>p1</i> indicates high priority.
resource ID of the PUCCH resource in which the UE shall send the scheduling request. The actual <i>PUCCH-Resource</i> is configured in <i>PUCCH-Config</i> of the same UL BWP and serving cell as this <i>SchedulingRequestResourceConfig</i>. The network configures a <i>PUCCH-Resource</i> of <i>PUCCH-format0</i> or <i>PUCCH-format1</i> (other formats not supported) (see TS 38.213 [13], clause 9.2.4)
schedulingRequestID The ID of the <i>SchedulingRequestConfig</i> that uses this scheduling request resource.

– SchedulingRequestResourceId

The IE *SchedulingRequestResourceId* is used to identify scheduling request resources on PUCCH.

SchedulingRequestResourceId information element

```
-- ASN1START
-- TAG-SCHEDULINGREQUESTRESOURCEID-START

SchedulingRequestResourceId ::=      INTEGER (1..maxNrofSR-Resources)

-- TAG-SCHEDULINGREQUESTRESOURCEID-STOP
-- ASN1STOP
```

– ScramblingId

The IE *ScramblingID* is used for scrambling channels and reference signals.

***ScramblingId* information element**

```
-- ASN1START
-- TAG-SCRAMBLINGID-START
```

```
ScramblingId ::= INTEGER(0..1023)
```

```
-- TAG-SCRAMBLINGID-STOP
-- ASN1STOP
```

— *SCS-SpecificCarrier*

The IE *SCS-SpecificCarrier* provides parameters determining the location and width of the actual carrier or the carrier bandwidth. It is defined specifically for a numerology (subcarrier spacing (SCS)) and in relation (frequency offset) to Point A.

***SCS-SpecificCarrier* information element**

```
-- ASN1START
-- TAG-SCS-SPECIFICCARRIER-START
```

```
SCS-SpecificCarrier ::= SEQUENCE {
    offsetToCarrier          INTEGER (0..2199),
    subcarrierSpacing        SubcarrierSpacing,
    carrierBandwidth         INTEGER (1..maxNrofPhysicalResourceBlocks),
    ...,
    [[
        txDirectCurrentLocation    INTEGER (0..4095)          OPTIONAL    -- Need S
    ]]
}
```

```
-- TAG-SCS-SPECIFICCARRIER-STOP
-- ASN1STOP
```

SCS-SpecificCarrier field descriptions
carrierBandwidth Width of this carrier in number of PRBs (using the <i>subcarrierSpacing</i> defined for this carrier) (see TS 38.211 [16], clause 4.4.2). For the case that 12PRB/20 PRB transmission bandwidth is used as specified in TS 38.101-1 [15], TS 38.211[16] and TS 38.213[13], the network shall configure the <i>carrierBandwidth</i> to 15 PRB (for the 12 PRB case) and 25 PRB (for the 20 PRB case) respectively and the UE shall use 12PRB/20 PRB as the transmission bandwidth respectively.
offsetToCarrier Offset in frequency domain between Point A (lowest subcarrier of common RB 0) and the lowest usable subcarrier on this carrier in number of PRBs (using the <i>subcarrierSpacing</i> defined for this carrier). The maximum value corresponds to 275*8-1. See TS 38.211 [16], clause 4.4.2.
txDirectCurrentLocation Indicates the downlink Tx Direct Current location for the carrier. A value in the range 0..3299 indicates the subcarrier index within the carrier. The values in the value range 3301..4095 are reserved and ignored by the UE. If this field is absent for downlink within <i>ServingCellConfigCommon</i> and <i>ServingCellConfigCommonSIB</i> , the UE assumes the default value of 3300 (i.e. "Outside the carrier"). (see TS 38.211 [16], clause 4.4.2). Network does not configure this field via <i>ServingCellConfig</i> or for uplink carriers.
subcarrierSpacing Subcarrier spacing of this carrier. It is used to convert the <i>offsetToCarrier</i> into an actual frequency. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz

– SDAP-Config

The IE *SDAP-Config* is used to set the configurable SDAP parameters for a data radio bearer. All configured instances of *SDAP-Config* with the same value of *pdu-Session* correspond to the same SDAP entity as specified in TS 37.324 [24].

SDAP-Config information element

```
-- ASN1START
-- TAG-SDAP-CONFIG-START

SDAP-Config ::=
    pdu-Session
    sdap-HeaderDL
    sdap-HeaderUL
    defaultDRB
    mappedQoS-FlowsToAdd
    mappedQoS-FlowsToRelease
    ...
}

SEQUENCE {
    PDU-SessionID,
    ENUMERATED {present, absent},
    ENUMERATED {present, absent},
    BOOLEAN,
    SEQUENCE (SIZE (1..maxNrofQFIs)) OF QFI OPTIONAL, -- Need N
    SEQUENCE (SIZE (1..maxNrofQFIs)) OF QFI OPTIONAL, -- Need N
}

-- TAG-SDAP-CONFIG-STOP
-- ASN1STOP
```

SDAP-Config field descriptions
defaultDRB Indicates whether or not this is the default DRB for this PDU session. Among all configured instances of <i>SDAP-Config</i> with the same value of <i>pdu-Session</i> , this field shall be set to <i>true</i> in at most one instance of <i>SDAP-Config</i> and to <i>false</i> in all other instances.
mappedQoS-FlowsToAdd Indicates the list of QFIs of UL QoS flows of the PDU session to be additionally mapped to this DRB. A QFI value can be included at most once in all configured instances of <i>SDAP-Config</i> with the same value of <i>pdu-Session</i> . For QoS flow remapping, the QFI value of the remapped QoS flow is only included in <i>mappedQoS-FlowsToAdd</i> in <i>sdap-Config</i> corresponding to the new DRB and not included in <i>mappedQoS-FlowsToRelease</i> in <i>sdap-Config</i> corresponding to the old DRB.
mappedQoS-FlowsToRelease Indicates the list of QFIs of QoS flows of the PDU session to be released from existing QoS flow to DRB mapping of this DRB.
pdu-Session Identity of the PDU session whose QoS flows are mapped to the DRB.
sdap-HeaderUL Indicates whether or not a SDAP header is present for UL data on this DRB. The field cannot be changed after a DRB is established. The network sets this field to <i>present</i> if the field <i>defaultDRB</i> is set to <i>true</i> .
sdap-HeaderDL Indicates whether or not a SDAP header is present for DL data on this DRB. The field cannot be changed after a DRB is established.

– SearchSpace

The IE *SearchSpace* defines how/where to search for PDCCH candidates. Each search space is associated with one *ControlResourceSet*. For a scheduled SCell in the case of cross carrier scheduling, except for *nrofCandidates*, all the optional fields are absent (regardless of their presence conditions). For a scheduled SpCell in the case of the cross carrier scheduling, if the search space is linked to another search space in the scheduling SCell, all the optional fields of this search space in the scheduled SpCell are absent (regardless of their presence conditions) except for *nrofCandidates*.

SearchSpace information element

```
-- ASN1START
-- TAG-SEARCHSPACE-START

SearchSpace ::=
  searchSpaceId
  controlResourceSetId
  monitoringSlotPeriodicityAndOffset
  s11
  s12
  s14
  s15
  s18
  s110
  s116
  s120
  s140
  s180
  s1160
  s1320
  s1640
  SEQUENCE {
    SearchSpaceId,
    ControlResourceSetId
  CHOICE {
    NULL,
    INTEGER (0..1),
    INTEGER (0..3),
    INTEGER (0..4),
    INTEGER (0..7),
    INTEGER (0..9),
    INTEGER (0..15),
    INTEGER (0..19),
    INTEGER (0..39),
    INTEGER (0..79),
    INTEGER (0..159),
    INTEGER (0..319),
    INTEGER (0..639),
    OPTIONAL, -- Cond SetupOnly
```

```

sl1280      INTEGER (0..1279),
sl2560      INTEGER (0..2559)
}
duration    OPTIONAL, -- Cond Setup4
monitoringSymbolsWithinSlot OPTIONAL, -- Need S
nrofCandidates OPTIONAL, -- Cond Setup
    aggregationLevel1 ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8},
    aggregationLevel2 ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8},
    aggregationLevel4 ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8},
    aggregationLevel8 ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8},
    aggregationLevel16 ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8}
}
searchSpaceType CHOICE {
    common SEQUENCE {
        dci-Format0-0-AndFormat1-0 SEQUENCE {
            ...
        }
        dci-Format2-0 SEQUENCE {
            nrofCandidates-SFI SEQUENCE {
                aggregationLevel1 ENUMERATED {n1, n2}
                aggregationLevel2 ENUMERATED {n1, n2}
                aggregationLevel4 ENUMERATED {n1, n2}
                aggregationLevel8 ENUMERATED {n1, n2}
                aggregationLevel16 ENUMERATED {n1, n2}
            },
            ...
        }
        dci-Format2-1 SEQUENCE {
            ...
        }
        dci-Format2-2 SEQUENCE {
            ...
        }
        dci-Format2-3 SEQUENCE {
            dummy1 ENUMERATED {sl1, sl2, sl4, sl5, sl8, sl10, sl16, sl20}
            dummy2 ENUMERATED {n1, n2},
            ...
        }
    },
    ue-Specific SEQUENCE {
        dci-Formats ENUMERATED {formats0-0-And-1-0, formats0-1-And-1-1},
        ...,
        [[
            dci-Formats-MT-r16 ENUMERATED {formats2-5}
            dci-FormatsSL-r16 ENUMERATED {formats0-0-And-1-0, formats0-1-And-1-1, formats3-0, formats3-1,
                formats3-0-And-3-1}
            dci-FormatsExt-r16 ENUMERATED {formats0-2-And-1-2, formats0-1-And-1-1And-0-2-And-1-2}
        ]],
        [[
            dci-FormatsNCR-r18 ENUMERATED {formats2-8}
            dci-FormatsSL-PRS-r18 ENUMERATED {formats3-2, formats3-0-And-3-2, formats3-0-And-3-1-And-3-2,
                formats3-1-And-3-2}
        ]]
    }
}

```

```

    }
  }
}

SearchSpaceExt-r16 ::=
  controlResourceSetId-r16
  searchSpaceType-r16
  common-r16
    dci-Format2-4-r16
      nrofCandidates-CI-r16
        aggregationLevel1-r16
        aggregationLevel2-r16
        aggregationLevel4-r16
        aggregationLevel8-r16
        aggregationLevel16-r16
      },
      ...
    }
    dci-Format2-5-r16
      nrofCandidates-IAB-r16
        aggregationLevel1-r16
        aggregationLevel2-r16
        aggregationLevel4-r16
        aggregationLevel8-r16
        aggregationLevel16-r16
      },
      ...
    }
    dci-Format2-6-r16
      ...
    }
  }
  searchSpaceGroupIdList-r16
  freqMonitorLocations-r16
}

SearchSpaceExt-v1700 ::=
  monitoringSlotPeriodicityAndOffset-v1710
  s132
  s164
  s1128
  s15120
  s110240
  s120480
}
  monitoringSlotsWithinSlotGroup-r17
    slotGroupLength4-r17
    slotGroupLength8-r17
  }
  duration-r17
  searchSpaceType-r17

```

OPTIONAL -- Cond Setup2

OPTIONAL, -- Cond SetupOnly2

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Cond Setup3

OPTIONAL, -- Need R

OPTIONAL, -- Need R

OPTIONAL, -- Cond Setup5

OPTIONAL, -- Need R

OPTIONAL, -- Need R

SEQUENCE {

ControlResourceSetId-r16

SEQUENCE {

SEQUENCE {

SEQUENCE {

SEQUENCE {

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

}

}

}

}

SEQUENCE {

SEQUENCE {

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

ENUMERATED {n1, n2}

}

}

SEQUENCE {

}

SEQUENCE (SIZE (1.. 2)) OF INTEGER (0..1)

BIT STRING (SIZE (5))

SEQUENCE {

CHOICE {

INTEGER (0..31),

INTEGER (0..63),

INTEGER (0..127),

INTEGER (0..5119),

INTEGER (0..10239),

INTEGER (0..20479)

}

CHOICE {

BIT STRING (SIZE (4)),

BIT STRING (SIZE (8))

}

}

INTEGER (4..20476)

SEQUENCE{

```

common-r17
  dci-Format4-0-r17      SEQUENCE {
    ...                  SEQUENCE {
  }                      OPTIONAL, -- Need R
  dci-Format4-1-r17      SEQUENCE {
    ...
  }                      OPTIONAL, -- Need R
  dci-Format4-2-r17      SEQUENCE {
    ...
  }                      OPTIONAL, -- Need R
  dci-Format4-1-AndFormat4-2-r17 SEQUENCE {
    ...
  }                      OPTIONAL, -- Need R
  dci-Format2-7-r17      SEQUENCE {
    nrofCandidates-PEI-r17 SEQUENCE {
      aggregationLevel4-r17 ENUMERATED {n0, n1, n2, n3, n4} OPTIONAL, -- Need R
      aggregationLevel8-r17 ENUMERATED {n0, n1, n2}          OPTIONAL, -- Need R
      aggregationLevel16-r17 ENUMERATED {n0, n1}             OPTIONAL, -- Need R
    },
    ...
  }                      OPTIONAL, -- Need R
}
searchSpaceGroupIdList-r17 SEQUENCE (SIZE (1.. 3)) OF INTEGER (0.. maxNrofSearchSpaceGroups-1-r17) OPTIONAL, -- Cond DedicatedOnly
searchSpaceLinkingId-r17  INTEGER (0..maxNrofSearchSpacesLinks-1-r17) OPTIONAL, -- Cond DedicatedOnly
}

SearchSpaceExt-v1800 ::=
  searchSpaceType-r18
  common-r18
  dci-Format2-9-r18
  ...
}
  },
  ue-Specific-r18
  dci-FormatsMC-r18
  ...
}
}
OPTIONAL, -- Need R

}
OPTIONAL, -- Need R

}
OPTIONAL, -- Need R

-- TAG-SEARCHSPACE-STOP
-- ASN1STOP

```

SearchSpace field descriptions
common Configures this search space as common search space (CSS) and DCI formats to monitor.
controlResourceSetId The CORESET applicable for this SearchSpace. Value 0 identifies the common CORESET#0 configured in MIB and in <i>ServingCellConfigCommon</i> . Values 1.. <i>maxNrofControlResourceSets</i> -1 identify CORESETs configured in System Information or by dedicated signalling. The CORESETs with <i>non-zero controlResourceSetId</i> are configured in the same BWP as this <i>SearchSpace</i> except <i>commonControlResourceSetExt</i> which is configured by SIB20. If the field <i>controlResourceSetId-r16</i> is present, UE shall ignore the <i>controlResourceSetId</i> (without suffix).
dummy1, dummy2 This field is not used in the specification. If received it shall be ignored by the UE.
dci-Format0-0-AndFormat1-0 If configured, the UE monitors the DCI formats 0_0 and 1_0 according to TS 38.213 [13], clause 10.1.
dci-Format2-0 If configured, UE monitors the DCI format 2_0 according to TS 38.213 [13], clause 10.1, 11.1.1.
dci-Format2-1 If configured, UE monitors the DCI format 2_1 according to TS 38.213 [13], clause 10.1, 11.2.
dci-Format2-2 If configured, UE monitors the DCI format 2_2 according to TS 38.213 [13], clause 10.1, 11.3.
dci-Format2-3 If configured, UE monitors the DCI format 2_3 according to TS 38.213 [13], clause 10.1, 11.4.
dci-Format2-4 If configured, UE monitors the DCI format 2_4 according to TS 38.213 [13], clause 11.2A.
dci-Format2-5 If configured, IAB-MT monitors the DCI format 2_5 according to TS 38.213 [13], clause 14.
dci-Format2-6 If configured, UE monitors the DCI format 2_6 according to TS 38.213 [13], clause 10.1, 10.3. DCI format 2_6 can only be configured on the SpCell.
dci-Format2-7 If configured, UE monitors the DCI format 2_7 according to TS 38.213 [13], clause 10.1, 10.4A.
dci-Format2-9 If configured, UE monitors the DCI format 2_9 according to TS 38.213 [13], clause 10.1, 11.5. DCI format 2_9 can be configured on only one cell in the cell group.
dci-Format4-0 If configured, the UE monitors the DCI format 4_0 with CRC scrambled by MCCH-RNTI/G-RNTI according to TS 38.213 [13], clause [10.1].
dci-Format4-1-AndFormat4-2 If configured, the UE monitors the DCI format 4_1 and 4_2 with CRC scrambled by G-RNTI/G-CS-RNTI according to TS 38.213 [13], clause [11.1].
dci-Format4-1 If configured, the UE monitors the DCI format 4_1 with CRC scrambled by G-RNTI/G-CS-RNTI according to TS 38.213 [13], clause [10.1].
dci-Format4-2 If configured, the UE monitors the DCI format 4_2 with CRC scrambled by G-RNTI/G-CS-RNTI according to TS 38.213 [13], clause [10.1].
dci-Formats Indicates whether the UE monitors in this USS for DCI formats 0-0 and 1-0 or for formats 0-1 and 1-1.
dci-FormatsExt If this field is present, the field <i>dci-Formats</i> is ignored and <i>dci-FormatsExt</i> is used instead to indicate whether the UE monitors in this USS for DCI format 0_2 and 1_2 or formats 0_1 and 1_1 and 0_2 and 1_2 (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 10.1). This field is not configured for operation with shared spectrum channel access in this release.

<i>dc-FormatsMC</i> Indicates whether the UE monitors in this USS for DCI format 0_3 or for format 1_3 or for formats 0_3 and 1_3. Separate search space sets for DCI formats in this field and the DCI formats in <i>ue-Specific</i> (without suffix) are independently configured. NOTE: This parameter is used only for <i>SearchSpace</i> configured to the scheduling cell, while another <i>SearchSpace</i> configured to the reference scheduled cell (if any) configures only <i>nrofCandidates</i> (i.e., all other optional fields are absent) with same <i>searchSpaceId</i> with that for scheduling cell.
<i>dc-Formats-MT</i> Indicates whether the IAB-MT monitors the DCI formats 2-5 according to TS 38.213 [13], clause 14.
<i>dc-FormatsNCR</i> Indicates whether the NCR-MT monitors the DCI formats 2-8 according to TS 38.213 [13], clause 20.
<i>dc-FormatsSL</i> Indicates whether the UE monitors in this USS for DCI formats 0-0 and 1-0 or for formats 0-1 and 1-1 or for format 3-0 or for format 3-1 or for formats 3-0 and 3-1. If this field is present, the field <i>dc-Formats</i> is ignored and <i>dc-FormatsSL</i> is used.
<i>dc-FormatsSL-PRS</i> Indicates whether the UE monitors in this USS for DCI formats 3-2 or for formats 3-0 and 3-2 or for formats 3-0 and 3-1 and 3-2 or for formats 3-1 and 3-2. If this field is present, the field <i>dc-Formats</i> is ignored and <i>dc-FormatsSL-PRS</i> is used.
<i>duration</i> Number of consecutive slots that a SearchSpace lasts in every occasion, i.e., upon every period as given in the <i>periodicityAndOffset</i>. If the field is absent, the UE applies the value 1 slot, except for DCI format 2_0. The UE ignores this field for DCI format 2_0. The maximum valid duration is periodicity-1 (periodicity as given in the <i>monitoringSlotPeriodicityAndOffset</i>). For SCS 480 kHz and SCS 960 kHz, <i>duration-r17</i> is used, and the configured duration is restricted to be an integer multiple of L slots and smaller than periodicity, where L is the configured length of the bitmap <i>monitoringSlotsWithinSlotGroup-r17</i>. If <i>duration-r17</i> is absent, the UE assumes the duration in slots is equal to L. The maximum valid duration is periodicity-L. For IAB-MT, duration indicates number of consecutive slots that a SearchSpace lasts in every occasion, i.e., upon every period as given in the <i>periodicityAndOffset</i>. If the field is absent, the IAB-MT applies the value 1 slot, except for DCI format 2_0 and DCI format 2_5. The IAB-MT ignores this field for DCI format 2_0 and DCI format 2_5. The maximum valid duration is periodicity-1 (periodicity as given in the <i>monitoringSlotPeriodicityAndOffset</i>).
<i>freqMonitorLocations</i> Defines an association of the search space to multiple monitoring locations in the frequency domain and indicates whether the pattern configured in the associated CORESET is replicated to a specific RB set, see TS 38.213, clause 10.1. Each bit in the bitmap corresponds to one RB set, and the leftmost (most significant) bit corresponds to RB set 0 in the BWP. A bit set to 1 indicates that a frequency domain resource allocation replicated from the pattern configured in the associated CORESET is mapped to the RB set.

monitoringSlotPeriodicityAndOffset

Slots for PDCCH Monitoring configured as periodicity and offset.

For SCS 15, 30, 60, and 120 kHz and if the UE is configured to monitor:

- DCI format 2_1, only the values 'sl1', 'sl2' or 'sl4' are applicable.
- DCI format 2_0, only the values 'sl1', 'sl2', 'sl4', 'sl5', 'sl8', 'sl10', 'sl16', and 'sl20' are applicable (see TS 38.213 [13], clause 10).
- DCI format 2_4, only the values 'sl1', 'sl2', 'sl4', 'sl5', 'sl8' and 'sl10' are applicable.

For SCS 480 kHz and if the UE is configured to monitor:

- DCI format 2_0, only the values 'sl4', 'sl8', 'sl16', 'sl20', 'sl32', 'sl40', 'sl64', and 'sl80' are applicable.
- DCI format 2_1, only the values 'sl4', 'sl8', and 'sl16' are applicable.
- DCI format 2_4, only the values 'sl4', 'sl8', 'sl16', 'sl20', 'sl32', 'sl40' are applicable.

For SCS 960 kHz and if the UE is configured to monitor:

- DCI format 2_0, only the values 'sl8', 'sl16', 'sl32', 'sl40', 'sl64', 'sl80', 'sl128', and 'sl160' are applicable.
- DCI format 2_1, only the values 'sl8', 'sl16', and 'sl32' are applicable.
- DCI format 2_4, only the values 'sl8', 'sl16', 'sl32', 'sl40', 'sl64', 'sl80' are applicable.

For SCS 480 kHz and SCS 960 kHz, and the configured periodicity and offset are restricted to be an integer multiple of L slots, where L is the configured length of the bitmap provided by *monitoringSlotsWithinSlotGroup-r17*, i.e. for a given periodicity, the offset has a range of {0, L, 2*L, ..., L*FLOOR(1/L*(periodicity-1))}.

For IAB-MT, If the IAB-MT is configured to monitor DCI format 2_1, only the values 'sl1', 'sl2' or 'sl4' are applicable. If the IAB-MT is configured to monitor DCI format 2_0 or DCI format 2_5, only the values 'sl1', 'sl2', 'sl4', 'sl5', 'sl8', 'sl10', 'sl16', and 'sl20' are applicable (see TS 38.213, clause 10).

If *monitoringSlotPeriodicityAndOffset-v1710* is present, any previously configured *monitoringSlotPeriodicityAndOffset* is released, and if *monitoringSlotPeriodicityAndOffset* is present, any previously configured *monitoringSlotPeriodicityAndOffset-v1710* is released.

monitoringSlotsWithinSlotGroup

Indicates which slot(s) within a slot group are configured for multi-slot PDCCH monitoring. The first (leftmost, most significant) bit represents the first slot in the slot group, the second bit represents the second slot in the slot group, and so on. A bit set to '1' indicates that the corresponding slot is configured for multi-slot PDCCH monitoring (see TS 38.213 [13], clause 10). The number of slots for multi-slot PDCCH monitoring is configured according to clause 10 in TS 38.213 [13].

monitoringSymbolsWithinSlot

The first symbol(s) for PDCCH monitoring in the slots configured for (multi-slot) PDCCH monitoring (see *monitoringSlotPeriodicityAndOffset* and *duration*). The most significant (left) bit represents the first OFDM in a slot, and the second most significant (left) bit represents the second OFDM symbol in a slot and so on. The bit(s) set to one identify the first OFDM symbol(s) of the control resource set within a slot. If the cyclic prefix of the BWP is set to extended CP, the last two bits within the bit string shall be ignored by the UE or IAB-MT.

For DCI format 2_0, the first one symbol applies if the *duration* of CORESET (in the IE *ControlResourceSet*) identified by *controlResourceSetId* indicates 3 symbols, the first two symbols apply if the *duration* of CORESET identified by *controlResourceSetId* indicates 2 symbols, and the first three symbols apply if the *duration* of CORESET identified by *controlResourceSetId* indicates 1 symbol.

See TS 38.213 [13], clause 10.

For IAB-MT: For DCI format 2_0 or DCI format 2_5, the first one symbol applies if the duration of CORESET (in the IE *ControlResourceSet*) identified by *controlResourceSetId* indicates 3 symbols, the first two symbols apply if the *duration* of CORESET identified by *controlResourceSetId* indicates 2 symbols, and the first three symbols apply if the *duration* of CORESET identified by *controlResourceSetId* indicates 1 symbol.

See TS 38.213 [13], clause 10.

nrofCandidates-CI

The number of PDCCH candidates specifically for format 2-4 for the configured aggregation level. If an aggregation level is absent, the UE does not search for any candidates with that aggregation level. The network configures only one aggregationLevel and the corresponding number of candidates (see TS 38.213 [13], clause 10.1). In this release of the specification, only value *n1* is valid.

nrofCandidates-PEI

The number of PDCCH candidates specifically for format 2-7 for the configured aggregation level.

<i>nrofCandidates-SFI</i>
The number of PDCCH candidates specifically for format 2-0 for the configured aggregation level. If an aggregation level is absent, the UE does not search for any candidates with that aggregation level. The network configures only one aggregationLevel and the corresponding number of candidates (see TS 38.213 [13], clause 11.1.1). For a search space configured with <i>freqMonitorLocations-r16</i> , only value 'n1' is valid.
<i>nrofCandidates</i>
Number of PDCCH candidates per aggregation level. The number of candidates and aggregation levels configured here applies to all formats unless a particular value is specified or a format-specific value is provided (see inside <i>searchSpaceType</i>). If configured in the <i>SearchSpace</i> of a cross carrier scheduled cell, this field determines the number of candidates and aggregation levels to be used on the linked scheduling cell (see TS 38.213 [13], clause 10).
<i>searchSpaceGroupIDList-r16, searchSpaceGroupIDList-r17</i>
List of search space group IDs which the search space is associated with. The network configures at most 2 search space groups per BWP where the group ID is either 0 or 1 if <i>searchSpaceGroupIDList-r16</i> is included. The network configures at most 3 search space groups per BWP where the group ID is either 0, 1 or 2 if <i>searchSpaceGroupIDList-r17</i> is included. And if <i>searchSpaceGroupIDList-r17</i> is included, <i>searchSpaceGroupIDList-r16</i> is ignored.
<i>searchSpaceId</i>
Identity of the search space. SearchSpaceId = 0 identifies the <i>searchSpaceZero</i> configured via PBCH (MIB) or <i>ServingCellConfigCommon</i> and may hence not be used in the <i>SearchSpace</i> IE. The <i>searchSpaceId</i> is unique among the BWPs of a Serving Cell. In case of cross carrier scheduling, search spaces with the same <i>searchSpaceId</i> in scheduled cell and scheduling cell are linked to each other. The UE applies the search space for the scheduled cell only if the DL BWPs in which the linked search spaces are configured in scheduling cell and scheduled cell are both active. For an IAB-MT, the search space defines how/where to search for PDCCH candidates for an IAB-MT where each search space is associated with one ControlResearchSet and for a scheduled cell in the case of cross carrier scheduling, except for nrofCandidates, all the optional fields are absent.
<i>SearchSpaceLinkingId</i>
This parameter is used to link two search spaces of same type in the same BWP. If two search spaces have the same SearchSpaceLinkingId UE assumes these search spaces are linked to PDCCH repetition REF. When PDCCH repetition is monitored in two linked search space (SS) sets, the UE does not expect a third monitored SS set to be linked with any of the two linked SS sets. The two linked SS sets have the same SS set type (USS/CSS). The two linked SS sets have the same DCI formats to monitor. For intra-slot PDCCH repetition: The two SS sets should have the same periodicity and offset (monitoringSlotPeriodicityAndOffset), and the same duration. For linking monitoring occasions across the two SS sets that exist in the same slot: The two SS sets have the same number of monitoring occasions within a slot and n-th monitoring occasion of one SS set is linked to n-th monitoring occasion of the other SS set. The following SS sets cannot be linked with another SS set for PDCCH repetition: SS set 0, <i>searchSpaceSIB1</i> , <i>searchSpaceOtherSystemInformation</i> , <i>pagingSearchSpace</i> , <i>ra-SearchSpace</i> , <i>searchSpaceMCCH</i> , <i>searchSpaceMTCH</i> , <i>peiSearchSpace</i> , and <i>sdt-SearchSpace</i> . SS set configured by <i>recoverySearchSpaceId</i> cannot be linked to another SS set for PDCCH repetition. When a scheduled serving cell is configured to be cross-carrier scheduled by a scheduling serving cell, two PDCCH candidates (with the same AL and candidate index associated with the scheduled serving cell) are linked only if the corresponding two SS sets in the scheduling serving cell are linked and two SS sets in the scheduled serving cell with the same SS set IDs are also linked. This parameter is not applicable to search space configured with <i>dci-FormatsSL</i> for monitoring format 3-0 or format 3-1 or for monitoring formats 3-0 and format 3-1. This parameter is not applicable to search space configured with <i>dci-FormatsSL-PRS</i> for monitoring format 3-2 or for monitoring formats 3-0 and 3-2 or for monitoring formats 3-1 and 3-2.
<i>searchSpaceType</i>
Indicates whether this is a common search space (present) or a UE specific search space as well as DCI formats to monitor for.
<i>ue-Specific</i>
Configures this search space as UE specific search space (USS). The UE monitors the DCI format with CRC scrambled by C-RNTI, CS-RNTI (if configured), and SP-CSI-RNTI (if configured)

Conditional Presence	Explanation
<i>DedicatedOnly</i>	In PDCCH-Config, the field is optionally present, Need R. Otherwise it is absent, Need R.
<i>Setup</i>	This field is mandatory present upon creation of a new <i>SearchSpace</i> . It is optionally present, Need M, otherwise.
<i>Setup2</i>	This field is mandatory present when a new <i>SearchSpace</i> is set up, if the same <i>SearchSpace</i> ID is not included in <i>searchSpacesToAddModListExt-r16/searchSpacesToAddModListExt-v1700/searchSpacesToAddModListExt-v1800</i> of the parent IE with the field <i>searchSpaceType-r16</i> or <i>searchSpaceType-r17</i> or <i>searchSpaceType-r18</i> included. This field is absent if the same <i>SearchSpace</i> ID is included in <i>searchSpacesToAddModListExt-v1800</i> of the parent IE with the field <i>searchSpaceType-r18</i> included and set to <i>dci-FormatsMC-r18</i> . Otherwise it is optionally present, Need M.
<i>Setup3</i>	This field is mandatory present when a new <i>SearchSpace</i> is set up, if the same <i>SearchSpace</i> ID is not included in <i>searchSpacesToAddModListExt</i> (without suffix) of the parent IE with the field <i>searchSpaceType</i> (without suffix) included. Otherwise it is optionally present, Need M.
<i>Setup4</i>	This field is mandatory present upon creation of a new <i>SearchSpace</i> if <i>monitoringSlotPeriodicityAndOffset-v1710</i> is not included. It is optionally present, Need M, otherwise.
<i>Setup5</i>	This field is mandatory present upon creation of a new <i>SearchSpace</i> if <i>monitoringSlotPeriodicityAndOffset</i> (without suffix) is not included. It is optionally present, Need M, otherwise.
<i>SetupOnly</i>	This field is mandatory present upon creation of a new <i>SearchSpace</i> . It is absent, Need M, otherwise.
<i>SetupOnly2</i>	In PDCCH-Config, the field is optionally present upon creation of a new <i>SearchSpace</i> and absent, Need M upon reconfiguration of an existing <i>SearchSpace</i> . In PDCCH-ConfigCommon, the field is absent.

— SearchSpaceId

The IE *SearchSpaceId* is used to identify Search Spaces. The ID space is used across the BWPs of a Serving Cell. The search space with the *SearchSpaceId* = 0 identifies the search space configured via PBCH (MIB) and in *ServingCellConfigCommon* (*searchSpaceZero*). The number of Search Spaces per BWP is limited to 10 including the common and UE specific Search Spaces.

SearchSpaceId information element

```
-- ASN1START
-- TAG-SEARCHSPACEID-START
```

```
SearchSpaceId ::= INTEGER (0..maxNrofSearchSpaces-1)
```

```
-- TAG-SEARCHSPACEID-STOP
-- ASN1STOP
```

— SearchSpaceZero

The IE *SearchSpaceZero* is used to configure SearchSpace#0 of the initial BWP (see TS 38.213 [13], clause 13).

SearchSpaceZero information element

```
-- ASN1START
-- TAG-SEARCHSPACEZERO-START
```

```
SearchSpaceZero ::= INTEGER (0..15)

-- TAG-SEARCHSPACEZERO-STOP
-- ASN1STOP
```

– *SecurityAlgorithmConfig*

The IE *SecurityAlgorithmConfig* is used to configure AS integrity protection algorithm and AS ciphering algorithm for SRBs and DRBs.

***SecurityAlgorithmConfig* information element**

```
-- ASN1START
-- TAG-SECURITYALGORITHMCONFIG-START

SecurityAlgorithmConfig ::= SEQUENCE {
    cipheringAlgorithm      CipheringAlgorithm,
    integrityProtAlgorithm  IntegrityProtAlgorithm OPTIONAL, -- Need R
    ...
}

IntegrityProtAlgorithm ::= ENUMERATED {
    nia0, nia1, nia2, nia3, spare4, spare3,
    spare2, spare1, ...}

CipheringAlgorithm ::= ENUMERATED {
    nea0, nea1, nea2, nea3, spare4, spare3,
    spare2, spare1, ...}

-- TAG-SECURITYALGORITHMCONFIG-STOP
-- ASN1STOP
```

SecurityAlgorithmConfig field descriptions
<i>cipheringAlgorithm</i> Indicates the ciphering algorithm to be used for SRBs and DRBs, as specified in TS 33.501 [11]. The algorithms <i>nea0-nea3</i> are identical to the LTE algorithms <i>eea0-3</i>. The algorithms configured for all bearers using master key shall be the same, and the algorithms configured for all bearers using secondary key, if any, shall be the same. If UE is connected to E-UTRA/EPC, this field indicates the ciphering algorithm to be used for RBs configured with NR PDCP, as specified in TS 33.501 [11].
<i>integrityProtAlgorithm</i> Indicates the integrity protection algorithm to be used for SRBs and DRBs, as specified in TS 33.501 [11]. The algorithms <i>nia0-nia3</i> are identical to the E-UTRA algorithms <i>eia0-3</i>. The algorithms configured for all bearers using master key shall be the same and the algorithms configured for all bearers using secondary key, if any, shall be the same. The network does not configure <i>nia0</i> except for unauthenticated emergency sessions for unauthenticated UEs in LSM (limited service mode). If UE is connected to E-UTRA/EPC, this field indicates the integrity protection algorithm to be used for SRBs configured with NR PDCP as specified in TS 33.501 [11], and DRBs configured with integrity protection as specified in TS 33.401 [30]. The network does not configure <i>nia0</i> for SRB3.

– *SelectedPSCellForCHO-WithSCG*

The IE *SelectedPSCellForCHO-WithSCG* is used to indicate the information of the selected target PSCell to target MN at execution of a conditional reconfiguration for CHO with candidate SCG(s).

***SelectedPSCellForCHO-WithSCG* information element**

```
-- ASN1START
-- TAG-SELECTEDPSCELLFORCHO-WITHSCG-START

SelectedPSCellForCHO-WithSCG-r18 ::= SEQUENCE {
    ssbFrequency-r18          ARFCN-ValueNR,
    physCellId-r18            PhysCellId
}

-- TAG-SELECTEDPSCELLFORCHO-WITHSCG-STOP
-- ASN1STOP
```

– *SemiStaticChannelAccessConfig*

The IE *SemiStaticChannelAccessConfig* is used to configure channel access parameters when the network is operating in semi-static channel access mode (see clause 4.3 in TS 37.213 [48]).

***SemiStaticChannelAccessConfig* information element**

```
-- ASN1START
-- TAG-SEMISTATICCHANNELACCESSCONFIG-START

SemiStaticChannelAccessConfig-r16 ::= SEQUENCE {
    period-r16          ENUMERATED {ms1, ms2, ms2dot5, ms4, ms5, ms10}
}

-- TAG-SEMISTATICCHANNELACCESSCONFIG-STOP
-- ASN1STOP
```

<i>SemiStaticChannelAccessConfig</i> field descriptions
<i>period</i> Indicates the periodicity of the semi-static channel access mode (see TS 37.213 [48], clause 4.3). Value ms1 corresponds to 1 ms, value ms2 corresponds to 2 ms, value ms2dot5 corresponds to 2.5 ms, and so on.

– *SemiStaticChannelAccessConfigUE*

The IE *SemiStaticChannelAccessConfigUE* is used to configure channel access parameters for UE initiated semi-static channel access.

SemiStaticChannelAccessConfigUE information element

```
-- ASN1START
-- TAG-SEMISTATICCHANNELACCESSCONFIGUE-START

SemiStaticChannelAccessConfigUE-r17 ::= SEQUENCE {
    periodUE-r17          ENUMERATED {ms1, ms2, ms2dot5, ms4, ms5, ms10, spare2, spare1},
    offsetUE-r17          INTEGER (0..559)
}

-- TAG-SEMISTATICCHANNELACCESSCONFIGUE-STOP
-- ASN1STOP
```

<i>SemiStaticChannelAccessConfigUE</i> field descriptions
<i>periodUE</i> Indicates the period of a channel occupancy that the UE can initiate as described in TS 37.213 [48], clause 4.3. Value ms1 corresponds to 1 ms, value ms2 corresponds to 2 ms, value ms2dot5 corresponds to 2.5 ms, and so on.
<i>offsetUE</i> Indicates the number of symbols from the beginning of the even indexed radio frame to the start of the first period within that radio frame that the UE can initiate a channel occupancy (see TS 37.213 [48], clause 4.3), based on the smallest SCS among the configured SCSs in the serving cell. The offset duration indicated by this field is less than the period duration indicated by <i>periodUE</i> . The maximum value is 139, 279 and 559 for 15, 30 and 60 kHz subcarrier spacing, respectively.

— *Sensor-LocationInfo*

The IE *Sensor-LocationInfo* is used by the UE to provide sensor information.

Sensor-LocationInfo information element

```
-- ASN1START
-- TAG-SENSORLOCATIONINFO-START

Sensor-LocationInfo-r16 ::= SEQUENCE {
    sensor-MeasurementInformation-r16 OCTET STRING OPTIONAL,
    sensor-MotionInformation-r16     OCTET STRING OPTIONAL,
    ...
}

-- TAG-SENSORLOCATIONINFO-STOP
-- ASN1STOP
```

Sensor-LocationInfo field descriptions
sensor-MeasurementInformation This field provides barometric pressure measurements as <i>Sensor-MeasurementInformation</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.
sensor-MotionInformation This field provides motion sensor measurements as <i>Sensor-MotionInformation</i> defined in TS 37.355 [49]. The first/leftmost bit of the first octet contains the most significant bit.

– *ServingCellAndBWP-Id*

The IE *ServingCellAndBWP-Id* is used to indicate a serving cell and an uplink or a downlink BWP.

***ServingCellAndBWP-Id* information element**

```
-- ASN1START
-- TAG-SERVINGCELLANDBWP-ID-START

ServingCellAndBWP-Id-r17 ::= SEQUENCE {
    servingcell-r17      ServCellIndex,
    bwp-r17              BWP-Id
}

-- TAG-SERVINGCELLANDBWP-ID-STOP
-- ASN1STOP
```

– *ServCellIndex*

The IE *ServCellIndex* concerns a short identity, used to uniquely identify a serving cell (i.e. the PCell, the PSCell or an SCell) across the cell groups. Value 0 applies for the PCell, while the *SCellIndex* that has previously been assigned applies for SCells.

***ServCellIndex* information element**

```
-- ASN1START
-- TAG-SERVCELLINDEX-START

ServCellIndex ::=
    INTEGER (0..maxNrofServingCells-1)

-- TAG-SERVCELLINDEX-STOP
-- ASN1STOP
```


– *ServingCellConfig*

The IE *ServingCellConfig* is used to configure (add or modify) the UE with a serving cell, which may be the SpCell or an SCell of an MCG or SCG. The parameters herein are mostly UE specific but partly also cell specific (e.g. in additionally configured bandwidth parts). Reconfiguration between a PUCCH and PUCCHless SCell is only supported using an SCell release and add.

ServingCellConfig information element

```
-- ASN1START
-- TAG-SERVINGCELLCONFIG-START

ServingCellConfig ::= SEQUENCE {
    tdd-UL-DL-ConfigurationDedicated TDD-UL-DL-ConfigDedicated OPTIONAL, -- Cond TDD
    initialDownlinkBWP BWP-DownlinkDedicated OPTIONAL, -- Need M
    downlinkBWP-ToReleaseList SEQUENCE (SIZE (1..maxNrofBWPs)) OF BWP-Id OPTIONAL, -- Need N
    downlinkBWP-ToAddModList SEQUENCE (SIZE (1..maxNrofBWPs)) OF BWP-Downlink OPTIONAL, -- Need N
    firstActiveDownlinkBWP-Id BWP-Id OPTIONAL, -- Cond SyncAndCellAdd
    bwp-InactivityTimer ENUMERATED {ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30,
                                     ms40, ms50, ms60, ms80, ms100, ms200, ms300, ms500,
                                     ms750, ms1280, ms1920, ms2560, spare10, spare9, spare8,
                                     spare7, spare6, spare5, spare4, spare3, spare2, spare1 } OPTIONAL, -- Need R
    defaultDownlinkBWP-Id BWP-Id OPTIONAL, -- Need S
    uplinkConfig UplinkConfig OPTIONAL, -- Need M
    supplementaryUplink UplinkConfig OPTIONAL, -- Need M
    pdccch-ServingCellConfig SetupRelease { PDCCH-ServingCellConfig } OPTIONAL, -- Need M
    pdsch-ServingCellConfig SetupRelease { PDSCH-ServingCellConfig } OPTIONAL, -- Need M
    csi-MeasConfig SetupRelease { CSI-MeasConfig } OPTIONAL, -- Need M
    sCellDeactivationTimer ENUMERATED {ms20, ms40, ms80, ms160, ms200, ms240,
                                       ms320, ms400, ms480, ms520, ms640, ms720,
                                       ms840, ms1280, spare2, spare1} OPTIONAL, -- Cond ServingCellWithoutPUCCH
    crossCarrierSchedulingConfig CrossCarrierSchedulingConfig OPTIONAL, -- Need M
    tag-Id TAG-Id,
    dummy1 ENUMERATED {enabled} OPTIONAL, -- Need R
    pathlossReferenceLinking ENUMERATED {spCell, sCell} OPTIONAL, -- Cond SCellOnly
    servingCellMO MeasObjectId OPTIONAL, -- Cond MeasObject
    ...,
    [[
        lte-CRS-ToMatchAround SetupRelease { RateMatchPatternLTE-CRS } OPTIONAL, -- Need M
        rateMatchPatternToAddModList SEQUENCE (SIZE (1..maxNrofRateMatchPatterns)) OF RateMatchPattern OPTIONAL, -- Need N
        rateMatchPatternToReleaseList SEQUENCE (SIZE (1..maxNrofRateMatchPatterns)) OF RateMatchPatternId OPTIONAL, -- Need N
        downlinkChannelBW-PerSCS-List SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier OPTIONAL, -- Need S
    ]],
    [[
        supplementaryUplinkRelease-r16 ENUMERATED {true} OPTIONAL, -- Need N
        tdd-UL-DL-ConfigurationDedicated-IAB-MT-r16 TDD-UL-DL-ConfigDedicated-IAB-MT-r16 OPTIONAL, -- Cond TDD_IAB
        dormantBWP-Config-r16 SetupRelease { DormantBWP-Config-r16 } OPTIONAL, -- Need M
        ca-SlotOffset-r16 CHOICE {
            refSCS15kHz INTEGER (-2..2),
            refSCS30kHz INTEGER (-5..5),
            refSCS60kHz INTEGER (-10..10),
            refSCS120kHz INTEGER (-20..20)
        },
    ]],
}
```

dummy2	SetupRelease { DummyJ }	OPTIONAL,	-- Need M
intraCellGuardBandsDL-List-r16	SEQUENCE (SIZE (1..maxSCSs)) OF IntraCellGuardBandsPerSCS-r16	OPTIONAL,	-- Need S
intraCellGuardBandsUL-List-r16	SEQUENCE (SIZE (1..maxSCSs)) OF IntraCellGuardBandsPerSCS-r16	OPTIONAL,	-- Need S
csi-RS-ValidationWithDCI-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
lte-CRS-PatternList1-r16	SetupRelease { LTE-CRS-PatternList-r16 }	OPTIONAL,	-- Need M
lte-CRS-PatternList2-r16	SetupRelease { LTE-CRS-PatternList-r16 }	OPTIONAL,	-- Need M
crs-RateMatch-PerCORESETPoolIndex-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
enableTwoDefaultTCI-States-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
enableDefaultTCI-StatePerCoresetPoolIndex-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
enableBeamSwitchTiming-r16	ENUMERATED {true}	OPTIONAL,	-- Need R
cbg-TxDiffTBsProcessingType1-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
cbg-TxDiffTBsProcessingType2-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
[[			
directionalCollisionHandling-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need R
channelAccessConfig-r16	SetupRelease { ChannelAccessConfig-r16 }	OPTIONAL	-- Need M
[[			
nr-dl-PRS-PDC-Info-r17	SetupRelease {NR-DL-PRS-PDC-Info-r17}	OPTIONAL,	-- Need M
semiStaticChannelAccessConfigUE-r17	SetupRelease {SemiStaticChannelAccessConfigUE-r17}	OPTIONAL,	-- Need M
mimoParam-r17	SetupRelease {MIMOParam-r17}	OPTIONAL,	-- Need M
channelAccessMode2-r17	ENUMERATED {enabled}	OPTIONAL,	-- Need R
timeDomainHARQ-BundlingType1-r17	ENUMERATED {enabled}	OPTIONAL,	-- Need R
nrofHARQ-BundlingGroups-r17	ENUMERATED {n1, n2, n4}	OPTIONAL,	-- Need R
fdmed-ReceptionMulticast-r17	ENUMERATED {true}	OPTIONAL,	-- Need R
moreThanOneNackOnlyMode-r17	ENUMERATED {mode2}	OPTIONAL,	-- Need S
TCI_ActivatedConfig	TCI-ActivatedConfig-r17	OPTIONAL,	-- Cond
directionalCollisionHandling-DC-r17	ENUMERATED {enabled}	OPTIONAL,	-- Need R
lte-NeighCellsCRS-AssistInfoList-r17	SetupRelease { LTE-NeighCellsCRS-AssistInfoList-r17 }	OPTIONAL	-- Need M
[[			
lte-NeighCellsCRS-Assumptions-r17	ENUMERATED {false}	OPTIONAL	-- Need R
[[			
crossCarrierSchedulingConfigRelease-r17	ENUMERATED {true}	OPTIONAL	-- Need N
[[			
multiPDSCH-PerSlotType1-CB-r17	ENUMERATED {enabled, disabled}	OPTIONAL	-- Need R
[[			
lte-CRS-PatternList3-r18	SetupRelease { LTE-CRS-PatternList-r16 }	OPTIONAL,	-- Need M
lte-CRS-PatternList4-r18	SetupRelease { LTE-CRS-PatternList-r16 }	OPTIONAL,	-- Need M
pdccch-CandidateReceptionWithCRS-Overlap-r18	ENUMERATED {enabled}	OPTIONAL,	-- Need R
cjt-Scheme-PDSCH-r18	ENUMERATED {cjtSchemeA, cjtSchemeB}	OPTIONAL,	-- Need R
tag2-r18	Tag2-r18	OPTIONAL,	-- Need R
cellDTX-DRX-Config-r18	SetupRelease { CellDTX-DRX-Config-r18 }	OPTIONAL,	-- Need M
positionInDCI-cellDTRX-r18	INTEGER (0..maxDCI-2-9-Size-1-r18)	OPTIONAL,	-- Need R
cellDTX-DRX-L1activation-r18	ENUMERATED {enabled}	OPTIONAL,	-- Need R
mc-DCI-SetOfCellsToAddModList-r18	SEQUENCE (SIZE (1..maxNrofSetsOfCells-r18)) OF MC-DCI-SetOfCells-r18	OPTIONAL,	-- Need N
mc-DCI-SetOfCellsToReleaseList-r18	SEQUENCE (SIZE (1..maxNrofSetsOfCells-r18)) OF SetOfCellsId-r18	OPTIONAL	-- Need N
[[			
mimoParam-v1850	SetupRelease {MIMOParam-v1850}	OPTIONAL	-- Need M

```

    ]]
  }

  Tag2-r18 ::=
    tag2-Id-r18          TAG-Id,
    tag2-flag-r18        BOOLEAN,
    n-TimingAdvanceOffset2-r18  ENUMERATED { n0, n25600, n39936, spare1 }
  }

  UplinkConfig ::=
    initialUplinkBWP      BWP-UplinkDedicated
    uplinkBWP-ToReleaseList  SEQUENCE (SIZE (1..maxNrofBWPs)) OF BWP-Id
    uplinkBWP-ToAddModList  SEQUENCE (SIZE (1..maxNrofBWPs)) OF BWP-Uplink
    firstActiveUplinkBWP-Id BWP-Id
    pusch-ServingCellConfig SetupRelease { PUSCH-ServingCellConfig }
    carrierSwitching        SetupRelease { SRS-CarrierSwitching }
    ...,
    [[
    powerBoostPi2BPSK        BOOLEAN
    uplinkChannelBW-PerSCS-List SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier
    ]],
    [[
    enablePL-RS-UpdateForPUSCH-SRS-r16  ENUMERATED {enabled}
    enableDefaultBeamPL-ForPUSCH0-0-r16  ENUMERATED {enabled}
    enableDefaultBeamPL-ForPUCCH-r16     ENUMERATED {enabled}
    enableDefaultBeamPL-ForSRS-r16       ENUMERATED {enabled}
    uplinkTxSwitching-r16                SetupRelease { UplinkTxSwitching-r16 }
    mpr-PowerBoost-FR2-r16               ENUMERATED {true}
    ]],
    [[
    srs-PostTx-Hopping-r18                SetupRelease { SRS-PostTx-Hopping-r18 }
    enablePL-RS-UpdateForType1CG-PUSCH-r18  ENUMERATED {enabled}
    powerBoostPi2BPSK-r18                 BOOLEAN
    powerBoostQPSK-r18                   BOOLEAN
    ]],
  }

  DummyJ ::=
    maxEnergyDetectionThreshold-r16  INTEGER(-85..-52),
    energyDetectionThresholdOffset-r16  INTEGER (-20..-13),
    ul-toDL-COT-SharingED-Threshold-r16  INTEGER (-85..-52)
    absenceOfAnyOtherTechnology-r16      ENUMERATED {true}
  }

  ChannelAccessConfig-r16 ::=
    energyDetectionConfig-r16  CHOICE {
      maxEnergyDetectionThreshold-r16  INTEGER (-85..-52),
      energyDetectionThresholdOffset-r16  INTEGER (-13..20)
    }
    ul-toDL-COT-SharingED-Threshold-r16  INTEGER (-85..-52)
    absenceOfAnyOtherTechnology-r16      ENUMERATED {true}
  }

  IntraCellGuardBandsPerSCS-r16 ::=
    SEQUENCE {

```

OPTIONAL -- Need S

OPTIONAL, -- Need M
OPTIONAL, -- Need N
OPTIONAL, -- Need N
OPTIONAL, -- Cond SyncAndCellAdd
OPTIONAL, -- Need M
OPTIONAL, -- Need M

OPTIONAL, -- Need M
OPTIONAL, -- Need S

OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need M
OPTIONAL, -- Need R

OPTIONAL, -- Need M
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R

OPTIONAL, -- Need R
OPTIONAL, -- Need R

OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need R

```

    guardBandSCS-r16          SubcarrierSpacing,
    intraCellGuardBands-r16   SEQUENCE (SIZE (1..4)) OF GuardBand-r16
}

GuardBand-r16 ::=
    startCRB-r16              SEQUENCE {
        INTEGER (0..274),
        nrOfCRBs-r16          INTEGER (0..15)
    }

DormancyGroupID-r16 ::= INTEGER (0..4)

DormantBWP-Config-r16 ::= SEQUENCE {
    dormantBWP-Id-r16          BWP-Id                                OPTIONAL, -- Need M
    withinActiveTimeConfig-r16 SetupRelease { WithinActiveTimeConfig-r16 } OPTIONAL, -- Need M
    outsideActiveTimeConfig-r16 SetupRelease { OutsideActiveTimeConfig-r16 } OPTIONAL, -- Need M
}

WithinActiveTimeConfig-r16 ::= SEQUENCE {
    firstWithinActiveTimeBWP-Id-r16 BWP-Id                                OPTIONAL, -- Need M
    dormancyGroupWithinActiveTime-r16 DormancyGroupID-r16                OPTIONAL, -- Need R
}

OutsideActiveTimeConfig-r16 ::= SEQUENCE {
    firstOutsideActiveTimeBWP-Id-r16 BWP-Id                                OPTIONAL, -- Need M
    dormancyGroupOutsideActiveTime-r16 DormancyGroupID-r16                OPTIONAL, -- Need R
}

UplinkTxSwitching-r16 ::= SEQUENCE {
    uplinkTxSwitchingPeriodLocation-r16 BOOLEAN,
    uplinkTxSwitchingCarrier-r16        ENUMERATED {carrier1, carrier2}
}

MIMOParam-r17 ::= SEQUENCE {
    additionalPCI-ToAddModList-r17 SEQUENCE (SIZE(1..maxNrofAdditionalPCI-r17)) OF SSB-MTC-AdditionalPCI-r17 OPTIONAL, -- Need N
    additionalPCI-ToReleaseList-r17 SEQUENCE (SIZE(1..maxNrofAdditionalPCI-r17)) OF AdditionalPCIIndex-r17 OPTIONAL, -- Need N
    unifiedTCI-StateType-r17        ENUMERATED {separate, joint}                                OPTIONAL, -- Need R
    uplink-PowerControlToAddModList-r17 SEQUENCE (SIZE (1..maxUL-TCI-r17)) OF Uplink-powerControl-r17 OPTIONAL, -- Need N
    uplink-PowerControlToReleaseList-r17 SEQUENCE (SIZE (1..maxUL-TCI-r17)) OF Uplink-powerControlId-r17 OPTIONAL, -- Need N
    sfnSchemePDCCH-r17              ENUMERATED {sfnSchemeA, sfnSchemeB}                                OPTIONAL, -- Need R
    sfnSchemePDSCH-r17              ENUMERATED {sfnSchemeA, sfnSchemeB}                                OPTIONAL, -- Need R
}

MIMOParam-v1850 ::= SEQUENCE {
    additionalTDDConfig-perPCI-ToAddModList-r18 SEQUENCE (SIZE (1..maxNrofAdditionalPCI-r17)) OF AdditionalTDDConfig-perPCI-ToAddMod-r18 OPTIONAL, -- Cond 2TA-TDD-Only
    additionalTDDConfig-perPCI-ToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofAdditionalPCI-r17)) OF AdditionalPCIIndex-r17 OPTIONAL, -- Need N
}

AdditionalTDDConfig-perPCI-ToAddMod-r18 ::= SEQUENCE {
    additionalTDDConfig-Index-r18 AdditionalPCIIndex-r17,
    tdd-UL-DL-ConfigurationCommon-r18 TDD-UL-DL-ConfigCommon
}

```

```

MC-DCI-SetOfCells-r18 ::= SEQUENCE {
    setOfCellsId-r18          SetOfCellsId-r18,
    nCI-Value-r18             INTEGER (0..7),
    scheduledCellListDCI-1-3-r18 SEQUENCE (SIZE (2..maxNrofCellsInSet-r18)) OF ServCellIndex OPTIONAL, -- Need R
    scheduledCellListDCI-0-3-r18 SEQUENCE (SIZE (2..maxNrofCellsInSet-r18)) OF ServCellIndex OPTIONAL, -- Need R
    scheduledCellComboListDCI-1-3-r18 SEQUENCE (SIZE (1..maxNrofCellCombos-r18)) OF ScheduledCellCombo-r18 OPTIONAL, -- Need R
    scheduledCellComboListDCI-0-3-r18 SEQUENCE (SIZE (1..maxNrofCellCombos-r18)) OF ScheduledCellCombo-r18 OPTIONAL, -- Need R
    antennaPortsDCI1-3-r18      ENUMERATED {type1a, type2} OPTIONAL, -- Cond TypeDCI1-3
    antennaPortsDCI0-3-r18      ENUMERATED {type1a, type2} OPTIONAL, -- Cond TypeDCI0-3
    tpmi-DCI0-3-r18             ENUMERATED {type1a, type2} OPTIONAL, -- Cond TypeDCI0-3
    sri-DCI0-3-r18              ENUMERATED {type1a, type2} OPTIONAL, -- Cond TypeDCI0-3
    priorityIndicatorDCI-1-3-r18 ENUMERATED {enabled} OPTIONAL, -- Need R
    priorityIndicatorDCI-0-3-r18 ENUMERATED {enabled} OPTIONAL, -- Need R
    dormancyDCI-1-3-r18         ENUMERATED {enabled} OPTIONAL, -- Need R
    dormancyDCI-0-3-r18         ENUMERATED {enabled} OPTIONAL, -- Need R
    pdcchMonAdaptDCI-1-3-r18     ENUMERATED {enabled} OPTIONAL, -- Need R
    pdcchMonAdaptDCI-0-3-r18     ENUMERATED {enabled} OPTIONAL, -- Need R
    minimumSchedulingOffsetK0DCI-1-3-r18 ENUMERATED {enabled} OPTIONAL, -- Need R
    minimumSchedulingOffsetK0DCI-0-3-r18 ENUMERATED {enabled} OPTIONAL, -- Need R
    pdsch-HARQ-ACK-OneShotFeedbackDCI-1-3-r18 ENUMERATED {enabled} OPTIONAL, -- Need R
    pdsch-HARQ-ACK-enhType3DCI-1-3-r18      ENUMERATED {enabled} OPTIONAL, -- Need R
    pdsch-HARQ-ACK-enhType3DCIfieldDCI-1-3-r18 ENUMERATED {enabled} OPTIONAL, -- Need R
    pdsch-HARQ-ACK-retxDCI-1-3-r18          ENUMERATED {enabled} OPTIONAL, -- Need R
    pucch-sSCellDynDCI-1-3-r18              ENUMERATED {enabled} OPTIONAL, -- Need R
    tdra-FieldIndexListDCI-1-3-r18          SEQUENCE (SIZE (1..32)) OF TDRA-FieldIndexDCI-1-3-r18 OPTIONAL, -- Need R
    tdra-FieldIndexListDCI-0-3-r18          SEQUENCE (SIZE (1..64)) OF TDRA-FieldIndexDCI-0-3-r18 OPTIONAL, -- Need R
    rateMatchListDCI-1-3-r18               SEQUENCE (SIZE (1..16)) OF RateMatchDCI-1-3-r18 OPTIONAL, -- Need R
    zp-CSI-RSListDCI-1-3-r18               SEQUENCE (SIZE (1..8)) OF ZP-CSI-DCI-1-3-r18 OPTIONAL, -- Need R
    tci-ListDCI-1-3-r18                    SEQUENCE (SIZE (1..16)) OF TCI-DCI-1-3-r18 OPTIONAL, -- Need R
    srs-RequestListDCI-1-3-r18              SEQUENCE (SIZE (1..16)) OF SRS-RequestCombo-r18 OPTIONAL, -- Need R
    srs-OffsetListDCI-1-3-r18               SEQUENCE (SIZE (1..8)) OF SRS-OffsetCombo-r18 OPTIONAL, -- Need R
    srs-RequestListDCI-0-3-r18              SEQUENCE (SIZE (1..16)) OF SRS-RequestCombo-r18 OPTIONAL, -- Need R
    srs-OffsetListDCI-0-3-r18               SEQUENCE (SIZE (1..8)) OF SRS-OffsetCombo-r18 OPTIONAL, -- Need R
}

SetOfCellsId-r18 ::= INTEGER (0..maxNrofSetsOfCells-1-r18)

ScheduledCellCombo-r18 ::= SEQUENCE (SIZE (1..maxNrofCellsInSet-r18)) OF INTEGER (0..maxNrofCellsInSet-1-r18)

RateMatchDCI-1-3-r18 ::= SEQUENCE (SIZE (1..maxNrofCellsInSet-r18)) OF BIT STRING (SIZE (1..2))

ZP-CSI-DCI-1-3-r18 ::= SEQUENCE (SIZE (1.. maxNrofCellsInSet-r18)) OF BIT STRING (SIZE (1..2))

TCI-DCI-1-3-r18 ::= SEQUENCE (SIZE (2.. maxNrofCellsInSet-r18)) OF BIT STRING (SIZE (3))

SRS-RequestCombo-r18 ::= SEQUENCE (SIZE (1.. maxNrofCellsInSet-r18)) OF BIT STRING (SIZE (2..3))

SRS-OffsetCombo-r18 ::= SEQUENCE (SIZE (1.. maxNrofCellsInSet-r18)) OF INTEGER (0..3)

TDRA-FieldIndexDCI-1-3-r18 ::= SEQUENCE (SIZE (2.. maxNrofBWPsInSetOfCells-r18)) OF INTEGER (0..maxNrofDL-Allocations-1-r18)

TDRA-FieldIndexDCI-0-3-r18 ::= SEQUENCE (SIZE (2.. maxNrofBWPsInSetOfCells-r18)) OF INTEGER (0..maxNrofUL-Allocations-1-r18)

-- TAG-SERVINGCELLCONFIG-STOP

```

-- ASN1STOP

ChannelAccessConfig field descriptions
absenceOfAnyOtherTechnology Presence of this field indicates absence on a long term basis (e.g. by level of regulation) of any other technology sharing the carrier; absence of this field indicates the potential presence of any other technology sharing the carrier, as specified in TS 37.213 [48] clauses 4.2.1 and 4.2.3.
energyDetectionConfig Indicates whether to use the <i>maxEnergyDetectionThreshold</i> or the <i>energyDetectionThresholdOffset</i> (see TS 37.213 [48], clause 4.2.3).
energyDetectionThresholdOffset Indicates the offset to the default maximum energy detection threshold value. Unit in dB. Value -13 corresponds to -13dB, value -12 corresponds to -12dB, and so on (i.e. in steps of 1dB) as specified in TS 37.213 [48], clause 4.2.3.
maxEnergyDetectionThreshold Indicates the absolute maximum energy detection threshold value. Unit in dBm. Value -85 corresponds to -85 dBm, value -84 corresponds to -84 dBm, and so on (i.e. in steps of 1dBm) as specified in TS 37.213 [48], clause 4.2.3.
ul-toDL-COT-SharingED-Threshold Maximum energy detection threshold that the UE should use to share channel occupancy with gNB for DL transmission as specified in TS 37.213 [48], clause 4.1.3 for downlink channel access and clause 4.2.3 for uplink channel access. This field is not applicable in semi-static channel access mode.

<i>ServingCellConfig</i> field descriptions
<i>additionalPCI-ToAddModList</i> List of information for the additional SSB with different PCI than the serving cell PCI. The additional SSBs with different PCIs are not used for serving cell quality derivation.
<i>additionalTDDConfig-perPCI-ToAddModList</i> List of TDD-UL-DL configurations for the additional PCIs. When the network releases an additional PCI of a serving cell, the network also explicitly releases the associated TDD-UL-DL configuration for the additional PCI.
<i>bwp-InactivityTimer</i> The duration in ms after which the UE falls back to the default Bandwidth Part (see TS 38.321 [3], clause 5.15). When the network releases the timer configuration, the UE stops the timer without switching to the default BWP.
<i>ca-SlotOffset</i> Slot offset between the primary cell (PCell/PSCell) and the SCell in unaligned frame boundary with slot alignment and partial SFN alignment inter-band CA. Based on this field, the UE determines the time offset of the SCell as specified in clause 4.5 of TS 38.211 [16]. The granularity of this field is determined by the reference SCS for the slot offset (i.e. the maximum of PCell/PSCell lowest SCS among all the configured SCSs in DL/UL <i>SCS-SpecificCarrierList</i> in <i>ServingCellConfigCommon</i> or <i>ServingCellConfigCommonSIB</i> and this serving cell's lowest SCS among all the configured SCSs in DL/UL <i>SCS-SpecificCarrierList</i> in <i>ServingCellConfigCommon</i> or <i>ServingCellConfigCommonSIB</i>). The Network configures at most single non-zero offset duration in ms (independent on SCS) among CCs in the unaligned CA configuration. If the field is absent, the UE applies the value of 0. The slot offset value can only be changed with SCell release and add.
<i>cbg-TxDiffTbsProcessingType1, cbg-TxDiffTbsProcessingType2</i> Indicates whether processing types 1 and 2 based CBG based operation is enabled according to Rel-16 UE capabilities.
<i>cellDTX-DRX-Config</i> Used to configure cell DTX/DRX for the serving cell, as specified in TS 38.321 [3]. A maximum of two cell DTX/DRX patterns can be configured per MAC entity for different serving cells. The two configured patterns are aligned, that the start and slot offset are common and the periodicity of one pattern is an integer multiple of the other. Cell DTX is configured only when connected mode DRX is configured.
<i>cellDTX-DRX-L1activation</i> Indicates whether this serving cell has enabled L1 signaling based on DCI 2_9 for dynamic activation/deactivation of cell DTX/DRX configuration.
<i>cjt-Scheme-PDSCH</i> This field is used to configure CJT Tx scheme <i>cjtSchemeA</i> or <i>cjtSchemeB</i> for PDSCH reception, see TS 38.214 [19] clause 5.1.5.
<i>channelAccessConfig</i> List of parameters used for access procedures of operation with shared spectrum channel access (see TS 37.213 [48]).
<i>channelAccessMode2</i> If present, this field indicates that the UE shall apply channel access procedures for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4 for FR2-2. If absent, the UE does not apply these channel access procedures. The network always configures this field if channel access procedures are required for the serving cell within this region by regulations. Overwrites the corresponding field in <i>ServingCellConfigCommon</i> or <i>ServingCellConfigCommonSIB</i> for this serving cell.
<i>crossCarrierSchedulingConfig</i> Indicates whether this serving cell is cross-carrier scheduled by another serving cell or whether it cross-carrier schedules another serving cell. If the field <i>other</i> is configured for an SpCell (i.e., the SpCell is cross-carrier scheduled by another serving cell), the SpCell can be additionally scheduled by the PDCCH on the SpCell.
<i>crossCarrierSchedulingConfigRelease</i> If this field is included, the UE shall release the cross carrier scheduling configuration configured by <i>crossCarrierSchedulingConfig</i> . The network may only include either <i>crossCarrierSchedulingConfigRelease</i> or <i>crossCarrierSchedulingConfig</i> at a time.
<i>crs-RateMatch-PerCORESETPoolIndex</i> Indicates how UE performs rate matching when both <i>lte-CRS-PatternList1-r16</i> and <i>lte-CRS-PatternList2-r16</i> are configured or when both <i>lte-CRS-PatternList3-r18</i> and <i>lte-CRS-PatternList4-r18</i> are configured as specified in TS 38.214 [19], clause 5.1.4.2.
<i>csi-RS-ValidationWithDCI</i> Indicates how the UE performs periodic and semi-persistent CSI-RS reception in a slot. The presence of this field indicates that the UE uses DCI detection to validate whether to receive CSI-RS (see TS 38.213 [13], clause 11.1).

defaultDownlinkBWP-Id
The initial bandwidth part is referred to by BWP-Id = 0. ID of the downlink bandwidth part to be used upon expiry of the BWP inactivity timer. This field is UE specific. When the field is absent the UE uses the initial BWP as default BWP. (see TS 38.213 [13], clause 12 and TS 38.321 [3], clause 5.15).
directionalCollisionHandling
Indicates that this serving cell is using directional collision handling between a reference and other cell(s) for half-duplex operation in TDD CA with same SCS as specified in TS 38.213 [13], clause 11.1. The half-duplex operation only applies within the same frequency range and cell group.
The network only configures this field for TDD serving cells that are using the same SCS.
directionalCollisionHandling-DC
For the IAB-MT, it indicates that this serving cell is using directional collision handling between a reference and other cell(s) for half-duplex operation in TDD NR-DC with same SCS within same cell group or cross different cell groups.
dormantBWP-Config
The dormant BWP configuration for an SCell. This field can be configured only for a (non-PUCCH) SCell.
downlinkBWP-ToAddModList
List of additional downlink bandwidth parts to be added or modified. (see TS 38.213 [13], clause 12).
downlinkBWP-ToReleaseList
List of additional downlink bandwidth parts to be released. (see TS 38.213 [13], clause 12).
downlinkChannelBW-PerSCS-List
A set of UE specific channel bandwidth and location configurations for different subcarrier spacings (numerologies). Defined in relation to Point A. The UE uses the configuration provided in this field only for the purpose of channel bandwidth and location determination. If absent, UE uses the configuration indicated in <i>scs-SpecificCarrierList</i> in <i>DownlinkConfigCommon</i> / <i>DownlinkConfigCommonSIB</i> . Network only configures channel bandwidth that corresponds to the channel bandwidth values defined in TS 38.101-1 [15], TS 38.101-2 [39], and TS 38.101-5 [75]. If the UE is an (e)RedCap UE and needs to autonomously switch to its initial downlink bandwidth part to perform a random access procedure but its current UE specific channel bandwidth does not cover the initial downlink bandwidth part, the UE autonomously changes its UE specific channel bandwidth to cover the initial downlink bandwidth part. In that case, after completion of the random access procedure, the network ensures that the UE specific channel bandwidth fully covers the UE's active downlink bandwidth part in subsequent bandwidth part switch operations.
dummy1, dummy 2
This field is not used in the specification. If received it shall be ignored by the UE.
enableBeamSwitchTiming
Indicates the aperiodic CSI-RS triggering with beam switching triggering behaviour as defined in clause 5.2.1.5.1 of TS 38.214 [19].
enableDefaultTCI-StatePerCoresetPoolIndex
Presence of this field indicates the UE shall follow the release 16 behavior of default TCI state per CORESETPoolindex when the UE is configured by higher layer parameter PDCCH-Config that contains two different values of CORESETPoolIndex in ControlResourceSet is enabled.
enableTwoDefaultTCI-States
Presence of this field indicates the UE shall follow the release 16 behavior of two default TCI states for PDSCH when at least one TCI codepoint is mapped to two TCI states is enabled
fdmed-ReceptionMulticast
Indicates the Type-1 HARQ codebook generation as specified in TS 38.213 [13], clause 9.1.2.1.
firstActiveDownlinkBWP-Id
If configured for an SpCell, this field contains the ID of the DL BWP to be activated or to be used for RLM, BFD and measurements if included in an <i>RRCReconfiguration</i> message contained in an NR or E-UTRA RRC message indicating that the SCG is deactivated, upon performing the RRC (re-)configuration. If the field is absent, the RRC (re-)configuration does not impose a BWP switch. If the field is absent for the PSCell at SCG deactivation, the UE considers the previously activated DL BWP as the BWP to be used for RLM, BFD and measurements. If the field is absent for the PSCell at SCG activation, the DL BWP to be activated is the DL BWP previously to be used for RLM, BFD and measurements.
If configured for an SCell, this field contains the ID of the downlink bandwidth part to be used upon activation of an SCell. The initial bandwidth part is referred to by BWP-Id = 0.
Upon reconfiguration with <i>reconfigurationWithSync</i> , the network sets the <i>firstActiveDownlinkBWP-Id</i> and <i>firstActiveUplinkBWP-Id</i> to the same value.

<i>initialDownlinkBWP</i>
The dedicated (UE-specific) configuration for the initial downlink bandwidth-part (i.e., DL BWP#0). If any of the optional IEs are configured within this IE, the UE considers the BWP#0 to be an RRC configured BWP (from UE capability viewpoint). Otherwise, the UE does not consider the BWP#0 as an RRC configured BWP (from UE capability viewpoint). Network always configures the UE with a value for this field if no other BWPs are configured. NOTE1
<i>intraCellGuardBandsDL-List</i>, <i>intraCellGuardBandsUL-List</i>
List of intra-cell guard bands in a serving cell for operation with shared spectrum channel access in FR1. If not configured, the guard bands are defined according to 38.101-1 [15], see TS 38.214 [19], clause 7. For operation in licensed spectrum, this field is absent, and no UE action is required.
<i>lte-CRS-PatternList1</i>
A list of LTE CRS patterns around which the UE shall do rate matching for PDSCH. The LTE CRS patterns in this list shall be non-overlapping in frequency. The network does not configure this field and <i>lte-CRS-ToMatchAround</i> simultaneously.
<i>lte-CRS-PatternList2</i>
A list of LTE CRS patterns around which the UE shall do rate matching for PDSCH scheduled with a DCI detected on a CORESET with CORESETPoolIndex configured with 1. This list is configured only if CORESETPoolIndex configured with 1. The first LTE CRS pattern in this list shall be fully overlapping in frequency with the first LTE CRS pattern in <i>lte-CRS-PatternList1</i> . The second LTE CRS pattern in this list shall be fully overlapping in frequency with the second LTE CRS pattern in <i>lte-CRS-PatternList1</i> , and so on. Network configures this field only if the field <i>lte-CRS-ToMatchAround</i> is not configured and there is at least one ControlResourceSet in one DL BWP of this serving cell with <i>coresetPoolIndex</i> set to 1.
<i>lte-CRS-PatternList3</i>
A list of LTE CRS patterns around which the UE shall do rate matching for PDSCH. The LTE CRS patterns in this list shall be non-overlapping in frequency. The network does not configure this field and <i>lte-CRS-ToMatchAround</i> , or this field and <i>lte-CRS-PatternList1</i> , or this field and <i>lte-CRS-PatternList2</i> simultaneously.
<i>lte-CRS-PatternList4</i>
A list of LTE CRS patterns around which the UE shall do rate matching for PDSCH. The LTE CRS patterns in this list shall be non-overlapping in frequency. The first LTE CRS pattern in this list shall be fully overlapping in frequency with the first LTE CRS pattern in <i>lte-CRS-PatternList3</i> . The second LTE CRS pattern in this list shall be fully overlapping in frequency with the second LTE CRS pattern in <i>lte-CRS-PatternList3</i> , and so on. Network configures this field only if the field <i>lte-CRS-ToMatchAround</i> is not configured and the field <i>lte-CRS-PatternList3</i> is configured.
<i>lte-CRS-ToMatchAround</i>
Parameters to determine an LTE CRS pattern that the UE shall rate match around.
<i>lte-NeighCellsCRS-AssistInfoList</i>
A list of LTE neighbour cells configuration information which is used to assist the UE to perform CRS interference mitigation (CRS-IM) in scenarios with overlapping spectrum for LTE and NR (see TS 38.101-4 [59]). If the field is included, it replaces any previous list, i.e. all the entries of the list are replaced and each of the <i>LTE-NeighCellsCRS-AssistInfo</i> entries is considered to be newly created and the conditions and Need codes for setup of the entry apply.
<i>lte-NeighCellsCRS-Assumptions</i>
If the field is not configured, the following default network configuration assumptions are valid for all LTE neighbour cells for the purpose of CRS interference mitigation (CRS-IM) in scenarios with overlapping spectrum for LTE and NR (see TS 38.101-4 [59]).
- The CRS port number is the same as the one indicated in <i>RateMatchPatternLTE-CRS</i> if configured for the serving cell. - The CRS port number is 4 if <i>RateMatchPatternLTE-CRS</i> is not configured for the serving cell. - The channel bandwidth and centre frequency are the same as the ones indicated in <i>RateMatchPatternLTE-CRS</i> if configured for the serving cell. - The MBSFN configuration is the same as the one indicated in <i>RateMatchPatternLTE-CRS</i> if configured for the serving cell. If <i>RateMatchPatternLTE-CRS</i> is not configured for the serving cell, MBSFN subframe is not configured. - Network-based CRS interference mitigation (i.e., CRS muting), as in <i>crs-IntfMitigConfig</i> specified in TS 36.331 [10], is not enabled.
If the field is configured (i.e. false) and <i>LTE-NeighCellsCRS-AssistInfoList</i> is configured, the configuration provided in <i>LTE-NeighCellsCRS-AssistInfoList</i> overrides the default network configuration assumptions.
If the field is configured (i.e. false) and <i>LTE-NeighCellsCRS-AssistInfoList</i> is not configured, it is up to the UE implementation whether to apply CRS-IM operation.
<i>mc-DCI-SetOfCellsToAddModList</i>
List of up to N (N<=4) configurations of set(s) of cells for multi-cell PDSCH/PUSCH scheduling from the serving cell, where N is reported as UE capability and up to 4 sets of cells can be configured per PUCCH group. When this field is configured to a SCell, PCell cannot be included in either <i>ScheduledCellListDCI-1-3</i> or <i>ScheduledCellListDCI-0-3</i> .
<i>mc-DCI-SetOfCellsToReleaseList</i>
List of cell set configurations to release.

multiPDSCH-PerSlotType1-CB
Configures the UE behaviour for Type1 codebook HARQ ACK generation regarding the number of PDSCHs per slot on a serving cell as specified in TS 38.213 [13], clause 9.1.2.1. When this parameter is configured and set to <i>disabled</i> for a serving cell, the network does not schedule UE with more than one PDSCH in a slot on the serving cell if HARQ-ACKs of any two PDSCHs in the slot on the serving cell are supposed to be reported on one PUCCH resource in the same PUCCH slot. If two <i>coresetPoolIndex</i> values are configured, the number of received PDSCHs is per <i>coresetPoolIndex</i> value per slot for a serving cell. If the UE generates two HARQ-ACK codebooks for two priorities, the number of received PDSCHs is per priority per slot for a serving cell. If <i>fdmed-ReceptionMulticast</i> is configured, the number of received PDSCHs is per traffic type (unicast / multicast) per slot for a serving cell.
nr-dl-PRS-PDC-Info
Configures the DL PRS for propagation delay compensation. When configured, the UE measures the UE Rx-Tx time difference based on the reference signals configured in this field.
nrofHARQ-BundlingGroups
Indicates the number of HARQ bundling groups for type2 HARQ-ACK codebook.
pathlossReferenceLinking
Indicates whether UE shall apply as pathloss reference either the downlink of SpCell (PCell for MCG or PSCell for SCG) or of SCell that corresponds with this uplink (see TS 38.213 [13], clause 7).
pdcch-CandidateReceptionWithCRS-Overlap
Presence of this field indicates the UE shall monitor PDCCH candidates that overlap with LTE CRS RE(s).
pdsch-ServingCellConfig
PDSCH related parameters that are not BWP-specific.
positionInDCI-cellIDTRX
The starting bit position of an information block of DCI format 2_9 for this serving cell (see TS 38.212 [17], clause 7.3.1.3.10).
rateMatchPatternToAddModList
Resources patterns which the UE should rate match PDSCH around. The UE rate matches around the union of all resources indicated in the rate match patterns. Rate match patterns defined here on cell level apply only to PDSCH of the same numerology. See TS 38.214 [19], clause 5.1.4.1. If a <i>RateMatchPattern</i> with the same <i>RateMatchPatternId</i> is configured in both <i>ServingCellConfig/ServingCellConfigCommon</i> and in SIB20/MCCH, the entire <i>RateMatchPattern</i> configuration shall be the same, including the set of RBs/REs indicated by the patterns for the rate matching around, and they are counted as a single rate match pattern in the total configured rate match patterns as defined in TS 38.214 [19].
sCellDeactivationTimer
SCell deactivation timer in TS 38.321 [3]. If the field is absent, the UE applies the value infinity.
sfnSchemePDCCH
This parameter is used to configure single frequency network scheme for PDCCH: <i>sfnSchemeA</i> or <i>sfnSchemeB</i> as specified (see TS 38.214 [19], clause 5.1). If network includes both <i>sfnSchemePDCCH</i> and <i>sfnSchemePDSCH</i> , same value shall be configured.
sfnSchemePDSCH
This parameter is used to configure single frequency network scheme for PDSCH: <i>sfnSchemeA</i> or <i>sfnSchemeB</i> as specified (see TS 38.214 [19], clause 5.1). If network includes both <i>sfnSchemePDCCH</i> and <i>sfnSchemePDSCH</i> , same value shall be configured. The network does not configure this parameter and <i>repetitionSchemeConfig</i> in <i>PDSCH-Config</i> simultaneously in the same serving cell.
semiStaticChannelAccessConfigUE
When this field is configured and when <i>channelAccessMode-r16</i> (see IE <i>ServingCellConfigCommon</i> and IE <i>ServingCellConfigCommonSIB</i>) is configured to <i>semiStatic</i> , the UE operates in semi-static channel access mode and can initiate a channel occupancy periodically (see TS 37.213 [48], Clause 4.3). The period can be configured independently from period configured in <i>SemiStaticChannelAccessConfig-r16</i> if the UE indicates the corresponding capability. Otherwise, the periodicity configured by <i>periodUE-r17</i> is an integer multiple of or an integer factor of the periodicity indicated by <i>period</i> in <i>SemiStaticChannelAccessConfig-r16</i> .

servingCellMO <i>measObjectld</i> of the <i>MeasObjectNR</i> in <i>MeasConfig</i> which is associated to the serving cell. If the serving cell is associated with SSB, the following relationship applies between the corresponding <i>MeasObjectNR</i> and <i>frequencyInfoDL</i> in <i>ServingCellConfigCommon/ServingCellConfigCommonSIB</i> of the serving cell: if <i>ssbFrequency</i> is configured, its value is the same as the <i>absoluteFrequencySSB</i> and if <i>csi-rs-ResourceConfigMobility</i> is configured, the value of its <i>subcarrierSpacing</i> is present in one entry of the <i>scs-SpecificCarrierList</i>, <i>csi-RS-CellListMobility</i> includes an entry corresponding to the serving cell (with <i>cellld</i> equal to <i>physCellld</i> in <i>ServingCellConfigCommon</i>) and the frequency range indicated by the <i>csi-rs-MeasurementBW</i> of the entry in <i>csi-RS-CellListMobility</i> is included in the frequency range indicated by in the entry of the <i>scs-SpecificCarrierList</i>. If the serving cell is not associated with SSB (i.e. SSB-less SCell), the carrier frequency indicated by <i>ssbFrequency</i> of the corresponding <i>MeasObjectNR</i>, if configured, is within the frequency range indicated by any entry of the <i>scs-SpecificCarrierList</i>.
supplementaryUplink Network may configure this field only when <i>supplementaryUplinkConfig</i> is configured in <i>ServingCellConfigCommon</i> or <i>supplementaryUplink</i> is configured in <i>ServingCellConfigCommonSIB</i>.
supplementaryUplinkRelease If this field is included, the UE shall release the uplink configuration configured by <i>supplementaryUplink</i>. The network only includes either <i>supplementaryUplinkRelease</i> or <i>supplementaryUplink</i> at a time.
tag-Id Timing Advance Group ID, as specified in TS 38.321 [3], which this cell or set of TCI-States of this cell are associated with.
tag2 This field is used to indicate the second TAG information for the serving cell, it is optionally configured in a serving cell if and only if the serving cell is configured with more than one value for the <i>coresetPoolIndex</i>.
tcI-ActivatedConfig If configured for an SCell, or if configured for the PSCell when the SCG is being activated upon the reception of the containing message, the UE shall consider the TCI states provided in this field as the activated TCI states for PDCCH/PDSCH reception on this serving cell. If configured for the PSCell when the SCG is indicated as deactivated in the containing message: - the UE shall consider the TCI states provided in this field as the TCI states to be activated for PDCCH/PDSCH reception upon a later SCG activation in which <i>tcI-ActivatedConfig</i> is absent - if <i>bfd-and-RLM</i> is configured and no RS is configured in <i>RadioLinkMonitoringConfig</i> for RLM, respectively for BFD, the UE shall use the TCI states provided in this field for PDCCH as RS for RLM, respectively for BFD. When this field is absent for the PSCell and the SCG is being deactivated: - the UE shall consider the previously activated TCI states as the TCI states to be activated for PDCCH/PDSCH reception upon a later SCG activation in which <i>tcI-ActivatedConfig</i> is absent - if <i>bfd-and-RLM</i> is configured and no RS is configured in <i>RadioLinkMonitoringConfig</i> for RLM, respectively for BFD, the UE shall use the previously activated TCI states for PDCCH as RS for RLM, respectively for BFD.
tdd-UL-DL-ConfigurationDedicated-IAB-MT Resource configuration per IAB-MT D/U/F overrides all symbols (with a limitation that effectively only flexible symbols can be overwritten in Rel-16) per slot over the number of slots as provided by <i>TDD-UL-DL ConfigurationCommon</i>.
unifiedTCI-StateType Indicates the unified TCI state type the UE is configured for this serving cell. The value <i>separate</i> means this serving cell is configured with <i>dl-OrJointTCI-StateList</i> for DL TCI state and <i>ul-TCI-StateList</i> for UL TCI state. The value <i>joint</i> means this serving cell is configured with <i>dl-OrJointTCI-StateList</i> for joint TCI state for UL and DL operation.
uplinkConfig Network may configure this field only when <i>uplinkConfigCommon</i> is configured in <i>ServingCellConfigCommon</i> or <i>ServingCellConfigCommonSIB</i>. Addition or release of this field can only be done upon SCell addition or release (respectively).
uplink-PowerControlToAddModList Configures UL power control parameters for PUSCH, PUCCH and SRS when field <i>unifiedTCI-StateType</i> is configured for this serving cell.

Tag2 field descriptions
<i>n-TimingAdvanceOffset2</i> The <i>N_TA-Offset2</i> to be applied for PDCCH order CFRA towards the active <i>additionalPCI</i> as specified in TS 38.133 [14] clause 7.1.1 and for all uplink transmissions on this serving cell associated to <i>tag2</i> as specified in TS 38.213 [13] clause 4.2. This field is always present if <i>SSB-MTC-AdditionalPCI</i> is configured. It is absent otherwise. If absent, the <i>N_TA-Offset</i> is applied for all uplink transmissions on this serving cell associated to <i>tag2</i>.
<i>tag2-flag</i> If this field is set to true, the <i>tag2-Id</i> is associated to value 0 and <i>tag-Id</i> is associated to value 1 of field TI bit in RAR, fallbackRAR and in the absolute TAC MAC CE, see TS 38.321 [3]. Otherwise, the <i>tag2-Id</i> is associated to value 1 and <i>tag-Id</i> is associated to value 0 of field TI bit in RAR, fallbackRAR and in the absolute TAC MAC CE, see TS 38.321 [3].
<i>tag2-Id</i> Timing Advance Group ID, as specified in TS 38.321 [3], which this cell or set of TCI-States of this cell are associated with.

<i>UplinkConfig</i> field descriptions
<i>carrierSwitching</i> Includes parameters for configuration of carrier based SRS switching (see TS 38.214 [19], clause 6.2.1.3.
<i>enableDefaultBeamPL-ForPUSCH0-0, enableDefaultBeamPL-ForPUCCH, enableDefaultBeamPL-ForSRS</i> When the parameter is present, UE derives the spatial relation and the corresponding pathloss reference Rs as specified in 38.213, clauses 7.1.1, 7.2.1, 7.3.1 and 9.2.2. The network only configures these parameters for FR2.
<i>enablePL-RS-UpdateForPUSCH-SRS</i> When this parameter is present, the Rel-16 feature of MAC CE based pathloss RS updates for PUSCH/SRS is enabled. Network only configures this parameter when the UE is configured with <i>sri-PUSCH-PowerControl</i> . If this field is not configured, network configures at most 4 pathloss RS resources for PUSCH/PUCCH/SRS transmissions per BWP, not including pathloss RS resources for SRS transmissions for positioning. (See TS 38.213 [13], clause 7).
<i>enablePL-RS-UpdateForType1CG-PUSCH</i> When this parameter is present, the Rel-18 feature of MAC CE based pathloss RS updates for Type 1 CG-PUSCH is enabled. The network only configures this parameter, when the parameter <i>enablePL-RS-UpdateForPUSCH-SRS</i> is configured. (See TS 38.213 [13], clause 7).
<i>firstActiveUplinkBWP-Id</i> If configured for an SpCell, this field contains the ID of the UL BWP to be activated upon performing the RRC (re-)configuration. If the field is absent, the RRC (re-)configuration does not impose a BWP switch. If configured for an SCell, this field contains the ID of the uplink bandwidth part to be used upon activation of an SCell. The initial bandwidth part is referred to by <i>BandwidthPartId</i> = 0.
<i>initialUplinkBWP</i> The dedicated (UE-specific) configuration for the initial uplink bandwidth-part (i.e. UL BWP#0). If any of the optional IEs are configured within this IE as part of the IE <i>uplinkConfig</i> , the UE considers the BWP#0 to be an RRC configured BWP (from UE capability viewpoint). Otherwise, the UE does not consider the BWP#0 as an RRC configured BWP (from UE capability viewpoint). Network always configures the UE with a value for this field if no other BWPs are configured. NOTE1
<i>moreThanOneNackOnlyMode</i> Indicates the mode of NACK-only feedback in the PUCCH transmission, as specified in TS 38.213 [13], clause 18. If multicast CFR is not configured, this field is not included. Otherwise, if the field is absent, UE uses mode 1 for multicast CFR.
<i>mpr-PowerBoost-FR2</i> Indicates whether UE is allowed to boost uplink transmission power by suspending in-band emission (IBE) requirements as specified in TS 38.101-2 [39]. Network only configures this field for FR2 serving cells.
<i>powerBoostPi2BPSK</i> If this field is set to <i>true</i> , the UE determines the maximum output power for PUCCH/PUSCH transmissions that use pi/2 BPSK modulation according to TS 38.101-1 [15] /TS 38.101-5 [75], clause 6.2.4. The network ensures that <i>powerBoostPi2BPSK</i> and <i>powerBoostPi2BPSK-r18</i> are not configured at the same time for a UE.
<i>powerBoostQPSK</i> If this field is set to <i>true</i> , the UE determines the maximum output power for PUSCH transmissions that use QPSK modulation according to TS 38.101-1 [15], clause 6.2.4.
<i>pusch-ServingCellConfig</i> PUSCH related parameters that are not BWP-specific.
<i>srs-PosTx-Hopping</i> Contains configuration related to the SRS for Positioning with frequency hopping for RRC_CONNECTED state. When this field is present for a certain uplink carrier, and SP positioning SRS is configured, other positioning SRS resource sets configured in the uplink BWP configurations (i.e., <i>BWP-UplinkDedicated</i>) on this uplink carrier cannot be configured as <i>semi-persistent</i> .
<i>uplinkBWP-ToAddModList</i> The additional bandwidth parts for uplink to be added or modified. In case of TDD uplink- and downlink BWP with the same <i>bandwidthPartId</i> are considered as a BWP pair and must have the same center frequency.
<i>uplinkBWP-ToReleaseList</i> The additional bandwidth parts for uplink to be released.

<i>uplinkChannelBW-PerSCS-List</i> A set of UE specific channel bandwidth and location configurations for different subcarrier spacings (numerologies). Defined in relation to Point A. The UE uses the configuration provided in this field only for the purpose of channel bandwidth and location determination. If absent, UE uses the configuration indicated in <i>scs-SpecificCarrierList</i> in <i>UplinkConfigCommon</i> / <i>UplinkConfigCommonSIB</i>. Network only configures channel bandwidth that corresponds to the channel bandwidth values defined in TS 38.101-1 [15], TS 38.101-2 [39], and TS 38.101-5 [75]. If the UE is an (e)RedCap UE and needs to autonomously switch to its initial uplink bandwidth part to perform a random access procedure but its current UE specific channel bandwidth does not cover the initial uplink bandwidth part, the UE autonomously changes its UE specific channel bandwidth to cover the initial uplink bandwidth part. In that case, after completion of the random access procedure, the network ensures that the UE specific channel bandwidth fully covers the UE's active uplink bandwidth part in subsequent bandwidth part switch operations.
<i>uplinkTxSwitchingPeriodLocation</i> Indicates whether the location of UL Tx switching period is configured in this uplink carrier in case of inter-band UL CA, SUL, or (NG)EN-DC, as specified in TS 38.101-1 [15] and TS 38.101-3 [34]. In case of (NG)EN-DC, network always configures this field to TRUE for NR carrier (i.e. with (NG)EN-DC, the UL switching period always occurs on the NR carrier). In case of inter-band UL CA or SUL, for dynamic uplink Tx switching between 2 bands with 2 uplink carriers or 3 uplink carriers as defined in TS 38.101-1 [15], network configures this field to TRUE for the uplink carrier(s) on one band and configures this field to FALSE for the uplink carrier(s) on the other band. This field is set to the same value for the carriers on the same band.
<i>uplinkTxSwitchingCarrier</i> Indicates that the configured carrier is carrier1 or carrier2 for dynamic uplink Tx switching, as defined in TS 38.101-1 [15] and TS 38.101-3 [34]. In case of (NG)EN-DC, network always configures the NR carrier as carrier 2. In case of inter-band UL CA or SUL, for dynamic uplink Tx switching between 2 bands with 2 uplink carriers or 3 uplink carriers as defined in TS 38.101-1 [15], network configures the uplink carrier(s) on one band as carrier1 and the uplink carrier(s) on the other band as carrier2. This field is set to the same value for the carriers on the same band.

<i>DormantBWP-Config field descriptions</i>
<i>dormancyGroupWithinActiveTime</i> This field contains the ID of an SCell group for Dormancy within active time, to which this SCell belongs. The use of the Dormancy within active time for SCell groups is specified in TS 38.213 [13].
<i>dormancyGroupOutsideActiveTime</i> This field contains the ID of an SCell group for Dormancy outside active time, to which this SCell belongs. The use of the Dormancy outside active time for SCell groups is specified in TS 38.213 [13].
<i>dormantBWP-Id</i> This field contains the ID of the downlink bandwidth part to be used as dormant BWP. If this field is configured, its value is different from <i>defaultDownlinkBWP-Id</i>, and at least one of the <i>withinActiveTimeConfig</i> and <i>outsideActiveTimeConfig</i> should be configured.
<i>firstOutsideActiveTimeBWP-Id</i> This field contains the ID of the downlink bandwidth part to be activated when receiving a DCI indication for SCell dormancy outside active time.
<i>firstWithinActiveTimeBWP-Id</i> This field contains the ID of the downlink bandwidth part to be activated when receiving a DCI indication for SCell dormancy within active time.
<i>outsideActiveTimeConfig</i> This field contains the configuration to be used for SCell dormancy outside active time, as specified in TS 38.213 [13]. The field can only be configured when the cell group the SCell belongs to is configured with <i>dcp-Config</i>.
<i>withinActiveTimeConfig</i> This field contains the configuration to be used for SCell dormancy within active time, as specified in TS 38.213 [13].

GuardBand field descriptions	
startCRB	Indicates the starting RB of the guard band.
nrofCRB	Indicates the length of the guard band in RBs. When set to 0, zero-size guard band is used.

MC-DCI-SetOfCells field descriptions
antennaPortsDCI1-3, antennaPortsDCI0-3 Configure the indication type for antenna port(s) field in DCI format 1_3 and DCI format 0_3, respectively (see TS 38.212, clauses 7.3.1.2.4 and 7.3.1.1.4).
dormancyDCI-1-3, dormancyDCI-0-3 Configure the presence of SCell dormancy indication field in DCI format 1_3 and DCI format 0_3, respectively.
minimumSchedulingOffsetK0DCI-1-3, minimumSchedulingOffsetK0DCI-0-3 Configure the presence of minimum applicable scheduling offset indicator field in DCI format 1_3 and DCI format 0_3, respectively.
nCI-Value Configure n_CI value used for the set of cells, where unique n_CI value is configured for each set of cells.
pdccchMonAdaptDCI-1-3, pdccchMonAdaptDCI-0-3 Configure the presence of PDCCH monitoring adaptation indication field in DCI format 1_3 and DCI format 0_3, respectively.
pdsch-HARQ-ACK-enhType3DCI-1-3 Enable the enhanced Type 3 HARQ-ACK codebook triggering using DCI format 1_3.
pdsch-HARQ-ACK-enhType3DCIfieldDCI-1-3 Enables the enhanced Type 3 CB through a new DCI field to indicate the enhanced Type 3 HARQ-ACK codebook in DCI format 1_3 if the more than one enhanced Type HARQ-ACK codebook is configured for the primary PUCCH cell group.
pdsch-HARQ-ACK-OneShotFeedbackDCI-1-3 When configured, the DCI format 1_3 can request the UE to report A/N for all HARQ processes and all CCs configured in the PUCCH group.
pdsch-HARQ-ACK-retxDCI-1-3 When configured, the DCI format 1_3 can request the UE to perform a HARQ-ACK re-transmission on a PUCCH resource (see TS 38.213 [13], clause 9.1.5).
priorityIndicatorDCI-1-3, priorityIndicatorDCI-0-3 Configure the presence of priority indicator field in DCI format 1_3 and DCI format 0_3, respectively (see TS 38.212 [17], clauses 7.3.1.2.4 and 7.3.1.1.4 and TS 38.213 [13] clause 9).
pucch-sSCellDynDCI-1-3 Configure the UE with PUCCH cell switching based on dynamic indication in DCI format 1_3 (see TS 38.213 [13], clause 9.A).
RateMatchDCI-1-3 Configure each row of the joint rate matching indication table for DL scheduling via DCI format 1_3, where bitmap for a cell points to a corresponding rate matching indication applicable for DCI format 1_1 (i.e., MSB and LSB of bitmap refer <i>rateMatchPatternGroup1</i> and <i>rateMatchPatternGroup2</i> for a cell, respectively), the order of rate matching indication bitmap in each row refers the order of cells in <i>ScheduledCellListDCI-1-3</i> , that are configured with <i>rateMatchPatternGroup1</i> or <i>rateMatchPatternGroup2</i> on at least one DL BWP (i.e., first bitmap is for the first cell in <i>ScheduledCellListDCI-1-X</i> , that are configured with <i>rateMatchPatternGroup1</i> or <i>rateMatchPatternGroup2</i> on at least one DL BWP and so on), the number of entries in a row of <i>rateMatchDCI-1-3</i> should be the same as the number of cells, that are configured with <i>rateMatchPatternGroup1</i> or <i>rateMatchPatternGroup2</i> on at least one DL BWP, included in <i>ScheduledCellListDCI-1-3</i> , and entries for co-scheduled cells in a row of <i>rateMatchDCI-1-3</i> are interpreted based on the BWPs of co-scheduled cells on which the UE operates based on the BWP indicator field of DCI format 1_3 (see TS 38.212 [17], clause 7.3.1.2.4 and TS 38.213 [13], clause 12).
rateMatchListDCI-1-3 Configure joint rate matching indication table for DL scheduling via DCI format 1_3.
ScheduledCellCombo Configure each row of the table for combinations of co-scheduled cells for DL scheduling via DCI format 1_3 and for UL scheduling via DCI format 0_3, where index with value INTEGER (0...3) of co-scheduled cell refers to <i>scheduledCellListDCI-1-3</i> for DL and <i>scheduledCellListDCI-0-3</i> for UL.
scheduledCellComboListDCI-1-3, scheduledCellComboListDCI-0-3 Configure the table for combinations of co-scheduled cells for DL scheduling via DCI format 1_3 and UL scheduling via DCI format 0_3, respectively.
scheduledCellListDCI-1-3, scheduledCellListDCI-0-3 Configure the list of possible co-scheduled cells in the set for DL scheduling via DCI format 1_3 and UL scheduling via DCI format 0_3 respectively, where the serving cells in the list are in ascending order of serving cell indices and are mapped to index {0, 1, 2, 3} in the set. Total number of cells within the same set of cells i.e., in <i>scheduledCellListDCI-1-3</i> and <i>scheduledCellListDCI-0-3</i> , is up to 4. When a cell is included in either or both of <i>scheduledCellListDCI-1-3</i> or <i>scheduledCellListDCI-0-3</i> for one set of cells <i>MC-DCI-SetofCells</i> , the cell cannot be included in any of <i>scheduledCellListDCI-1-3</i> or <i>scheduledCellListDCI-0-3</i> for any other set of cells.

setOfCellsId
Configure index of the set of cells to be indicated in DCI format 0_3/1_3.
sri-DCI0-3
Configure the indication type for SRS resource indicator field in DCI format 0_3 (See TS 38.212, clause 7.3.1.1.4).
SRS-OffsetCombo
Configure each row of the joint SRS offset indicator table for DL scheduling via DCI format 1_3 and for UL scheduling via DCI format 0_3, where index for a cell points to a corresponding SRS offset indicator applicable for DCI formats 1_1 and 0_1, and the order of SRS offset indicator index in each row refers the order of cells in <i>scheduledCellListDCI-1-3</i> (i.e., first index is for the first cell in <i>scheduledCellListDCI-1-3</i> , that are configured with more than one entry in <i>availableSlotOffsetList</i> for at least one aperiodic SRS resource set on at least one UL BWP and so on) for DL and <i>scheduledCellListDCI-0-3</i> for UL, included in <i>scheduledCellListDCI-1-3</i> for <i>srs-OffsetListDCI-1-3</i> and <i>scheduledCellListDCI-0-3</i> for <i>srs-OffsetListDCI-0-3</i> , and entries for co-scheduled cells in a row of <i>SRS-OffsetCombo</i> are interpreted based on the BWPs of co-scheduled cells on which the UE operates based on the BWP indicator field of DCI format 1_3 and 0_3 (see TS 38.212 [17], clause 7.3.1.2.4 and clause 7.3.1.1.4, and TS 38.213 [13], clause 12).
srs-OffsetListDCI-1-3, srs-OffsetListDCI-0-3
Configure joint SRS offset indicator table for DL scheduling via DCI format 1_3 and UL scheduling via DCI format 0_3, respectively.
SRS-RequestCombo
Configure each row of the joint SRS request table for DL scheduling via DCI format 1_3 and for UL scheduling via DCI format 0_3, where index for a cell points to a corresponding SRS request applicable for DCI formats 1_1 and 0_1, and the order of SRS request index in each row refers the order of cells in <i>scheduledCellListDCI-1-3</i> (i.e., first index is for the first cell in <i>scheduledCellListDCI-1-3</i> and so on) for DL and <i>scheduledCellListDCI-0-3</i> for UL. The number of entries in a row of <i>SRS-RequestCombo</i> should be the same as the number of cells included in <i>scheduledCellListDCI-1-3</i> for <i>srs-RequestListDCI-1-3</i> and <i>scheduledCellListDCI-0-3</i> for <i>srs-RequestListDCI-0-3</i> , and entries for co-scheduled cells in a row of <i>SRS-RequestCombo</i> are interpreted based on the BWPs of co-scheduled cells on which the UE operates based on the BWP indicator field of DCI format 1_3 and 0_3 (see TS 38.212 [17], clause 7.3.1.2.4 and clause 7.3.1.1.4, and TS 38.213 [13], clause 12).
srs-RequestListDCI-1-3, srs-RequestListDCI-0-3
Configure joint SRS request table for DL scheduling via DCI format 1_3 and UL scheduling via DCI format 0_3, respectively.
TCI-DCI-1-3
Configure each row of the joint TCI table for DL scheduling via DCI format 1_3, where index for a cell points to a corresponding TCI applicable for DCI format 1_1, and the order of TCI index in each row refers the order of cells in <i>scheduledCellListDCI-1-3</i> (i.e., first index is for the first cell in <i>scheduledCellListDCI-1-3</i> that configured with <i>tc-StatesToAddModList</i> or <i>dl-OrJointTCI-StateList</i> and so on), the number of entries in a row of <i>TCI-DCI-1-3</i> should be the same as the number of cells that configured with <i>tc-StatesToAddModList</i> or <i>dl-OrJointTCI-StateList</i> on at least one DL BWP, included in <i>scheduledCellListDCI-1-3</i> , and entries for cells in a row of <i>TCI-DCI-1-3</i> are interpreted based on the BWPs of cells in <i>scheduledCellListDCI-1-3</i> on which the UE operates based on the BWP indicator field of DCI format 1_3 (see TS 38.212 [17], clause 7.3.1.2.4, and TS 38.213 [13], clause 12).
tc-ListDCI-1-3
Configure joint TCI table for DL scheduling via DCI format 1_3
TDRA-FieldIndexDCI-0-3
Configure each row of the joint TDRA field table for UL scheduling via DCI format 0_3 containing the applicable TDRA field indexes for multiple BWPs/cells, where the TDRA index for a BWP of a cell points to a corresponding TDRA in the TDRA table applicable for DCI format 0_1, the order of TDRA index in each row refers the <i>BWP-Id</i> for a cell and the order of cells in <i>scheduledCellListDCI-0-3</i> (i.e., first TDRA index in a row is for the smallest BWP-Id that can be scheduled by the DCI format 0_3, as specified in TS 38.212 [17], of the first cell in <i>scheduledCellListDCI-0-3</i> , second TDRA index in a row is for the second smallest BWP-Id that can be scheduled by the DCI format 0_3, as specified in TS 38.212 [17], of the first cell and so on), and the number of TDRA indices in a row of <i>TDRA-FieldIndexDCI-0-3</i> should be the same as the total number of BWPs that can be scheduled by the DCI format 0_3, as specified in TS 38.212 [17], across cells included in <i>scheduledCellListDCI-0-3</i> .
TDRA-FieldIndexDCI-1-3
Configure each row of the joint TDRA field table for DL scheduling via DCI format 1_3 containing the applicable TDRA field indexes for multiple BWPs/cells, where the TDRA index for a BWP of a cell points to a corresponding TDRA in the TDRA table applicable for DCI format 1_1, the order of TDRA index in each row refers the <i>BWP-Id</i> for a cell and the order of cells in <i>scheduledCellListDCI-1-3</i> (i.e., first TDRA index in a row is for the smallest BWP-Id that can be scheduled by the DCI format 1_3, as specified in TS 38.212 [17], of the first cell in <i>scheduledCellListDCI-1-3</i> , second TDRA index in a row is for the second smallest BWP-Id that can be scheduled by the DCI format 1_3, as specified in TS 38.212 [17], of the first cell and so on), and the number of TDRA indices in a row of <i>TDRA-FieldIndexDCI-1-3</i> should be the same as the total number of BWPs that can be scheduled by the DCI format 1_3, as specified in TS 38.212 [17], across cells included in <i>scheduledCellListDCI-1-3</i> .

<i>tdra-FieldIndexListDCI-1-3, tdra-FieldIndexListDCI-0-3</i>
Configure joint TDRA table for DL scheduling via DCI format 1_3 and UL scheduling via DCI format 0_3, respectively.
<i>tpmi-DCI0-3</i>
Configure the indication type for precoding information and number of layers field in DCI format 0_3 (See TS 38.212 [17], clause 7.3.1.1.4).
<i>ZP-CSI-DCI-1-3</i>
Configure each row of the joint ZP-CSI-RS trigger table for DL scheduling via DCI format 1_3, where index for a cell points to a corresponding ZP-CSI-RS trigger applicable for DCI format 1_1, and the order of ZP-CSI-RS trigger index in each row refers the order of cells in <i>scheduledCellListDCI-1-3</i> (i.e., first index is for the first cell in <i>scheduledCellListDCI-1-3</i> , that are configured with <i>aperiodic-ZP-CSI-RS-ResourceSetsToAddModList</i> on at least one DL BWP and so on), the number of entries in a row of <i>ZP-CSI-DCI-1-3</i> should be the same as the number of cells, that are configured with <i>aperiodic-ZP-CSI-RS-ResourceSetsToAddModList</i> on at least one DL BWP, included in <i>scheduledCellListDCI-1-3</i> , and entries for co-scheduled cells in a row of <i>ZP-CSI-DCI-1-3</i> are interpreted based on the BWPs of co-scheduled cells on which the UE operates based on the BWP indicator field of DCI format 1_3 (see TS 38.212 [17], clause 7.3.1.2.4 and TS 38.213 [13], clause 12).
<i>zp-CSI-RSListDCI-1-3</i>
Configure joint ZP-CSI-RS trigger table for DL scheduling via DCI format 1_3.

NOTE 1: If the dedicated part of initial UL/DL BWP configuration is absent, the initial BWP can be used but with some limitations. For example, changing to another BWP requires *RRCReconfiguration* since DCI format 1_0 doesn't support DCI-based switching.

Conditional Presence	Explanation
<i>2TA-TDD-Only</i>	The field is optionally present, Need N, for a TDD cell, in the <i>mimoParam-v1850</i> if <i>additionalPCI-ToAddModList</i> is present in <i>ServingCellConfig</i> and if <i>tag2</i> is present in <i>ServingCellConfig</i> . It is absent otherwise.
<i>AsyncCA</i>	This field is mandatory present for SCells whose slot offset between the SpCell is not 0. Otherwise it is absent, Need S.
<i>MeasObject</i>	This field is mandatory present for the SpCell if the UE has a <i>measConfig</i> , and it is optionally present, Need M, for SCells. For (e)RedCap UEs, this field is optionally present, Need M. For SSB-less SCell(s), this field is not present if <i>intraF-NeighMeasForSCellWithoutSSB</i> is not supported by the UE, otherwise this field is optionally present, Need M.
<i>SCellOnly</i>	This field is optionally present, Need R, for SCells. It is absent otherwise.
<i>ServingCellWithoutPUCCH</i>	This field is optionally present, Need S, for SCells except PUCCH SCells. It is absent otherwise.
<i>SyncAndCellAdd</i>	This field is mandatory present for a SpCell upon reconfiguration with <i>reconfigurationWithSync</i> and upon <i>RRCSetup/RRCResume</i> . The field is optionally present for an SpCell, Need N, upon reconfiguration without <i>reconfigurationWithSync</i> . The field is mandatory present for an SCell upon addition, and absent for SCell in other cases, Need M.
<i>TCI_ActivatedConfig</i>	This field is optional Need N for SCells if <i>sCellState</i> is configured, otherwise it is absent. This field is optional Need S for the PSCell when the SCG is indicated as deactivated or is being activated, otherwise it is absent. This field is absent for the PCell.
<i>TDD</i>	This field is optionally present, Need R, for TDD cells. It is absent otherwise.
<i>TDD_IAB</i>	For IAB-MT, this field is optionally present, Need R, for TDD cells. It is absent otherwise.
<i>TypeDCI0-3</i>	This field is mandatory present if <i>ScheduledCellListDCI-0-3</i> is configured, otherwise it is absent, Need R.
<i>TypeDCI1-3</i>	This field is mandatory present if <i>ScheduledCellListDCI-1-3</i> is configured, otherwise it is absent, Need R.

– *ServingCellConfigCommon*

The IE *ServingCellConfigCommon* is used to configure cell specific parameters of a UE's serving cell. The IE contains parameters which a UE would typically acquire from SSB, MIB or SIBs when accessing the cell from IDLE. With this IE, the network provides this information in dedicated signalling when configuring a UE with a SCells or with an additional cell group (SCG). It also provides it for SpCells (MCG and SCG) upon reconfiguration with sync.

ServingCellConfigCommon information element

```
-- ASN1START
-- TAG-SERVINGCELLCONFIGCOMMON-START

ServingCellConfigCommon ::=
    physCellId                                OPTIONAL, -- Cond HOAndServCellAdd,
    downlinkConfigCommon                      OPTIONAL, -- Cond HOAndServCellAdd
    uplinkConfigCommon                        OPTIONAL, -- Need M
    supplementaryUplinkConfig                  OPTIONAL, -- Need S
    n-TimingAdvanceOffset                     OPTIONAL, -- Need S
    ssb-PositionsInBurst                      CHOICE {
        shortBitmap                           BIT STRING (SIZE (4)),
        mediumBitmap                          BIT STRING (SIZE (8)),
        longBitmap                            BIT STRING (SIZE (64))
    }
    ssb-periodicityServingCell                OPTIONAL, -- Cond AbsFreqSSB
    dmrs-TypeA-Position                       OPTIONAL, -- Need S
    lte-CRS-ToMatchAround                     ENUMERATED { ms5, ms10, ms20, ms40, ms80, ms160, spare2, spare1 }
    rateMatchPatternToAddModList              ENUMERATED {pos2, pos3},
    rateMatchPatternToReleaseList              SetupRelease { RateMatchPatternLTE-CRS }
    ssbSubcarrierSpacing                      SEQUENCE (SIZE (1..maxNrofRateMatchPatterns)) OF RateMatchPattern OPTIONAL, -- Need M
    tdd-UL-DL-ConfigurationCommon              SEQUENCE (SIZE (1..maxNrofRateMatchPatterns)) OF RateMatchPatternId OPTIONAL, -- Need N
    ss-PBCH-BlockPower                        SubcarrierSpacing
    ...                                       OPTIONAL, -- Cond HOAndServCellWithSSB
    [[                                         TDD-UL-DL-ConfigCommon
        channelAccessMode-r16                  INTEGER (-60..50),
        dynamic                               CHOICE {
            semiStatic                         NULL,
            SemiStaticChannelAccessConfig-r16
        }
    ]
    ]
    discoveryBurstWindowLength-r16            ENUMERATED {ms0dot5, ms1, ms2, ms3, ms4, ms5}
    ssb-PositionQCL-r16                       SSB-PositionQCL-Relation-r16
    highSpeedConfig-r16                       HighSpeedConfig-r16
    ]],
    [[
        highSpeedConfig-v1700                 HighSpeedConfig-v1700
        channelAccessMode2-r17                 ENUMERATED {enabled}
        discoveryBurstWindowLength-r17         ENUMERATED {ms0dot125, ms0dot25, ms0dot5, ms0dot75, ms1, ms1dot25}
        ssb-PositionQCL-r17                    SSB-PositionQCL-Relation-r17
        highSpeedConfigFR2-r17                  HighSpeedConfigFR2-r17
        uplinkConfigCommon-v1700                UplinkConfigCommon-v1700
        ntn-Config-r17                          NTN-Config-r17
    ]],
    [[
        featurePriorities-r17                  SEQUENCE {
            redCapPriority-r17
        }
    ]]
```

```

        slicingPriority-r17           FeaturePriority-r17
        msg3-Repetitions-Priority-r17 FeaturePriority-r17
        sdt-Priority-r17             FeaturePriority-r17
    }
  ]],
  [[
    ra-ChannelAccess-r17             ENUMERATED {enabled}
  ]],
  [[
    featurePriorities-v1800          SEQUENCE {
      msg1-Repetitions-Priority-r18  FeaturePriority-r17
      eRedCapPriority-r18             FeaturePriority-r17
    }
    atg-Config-r18                  ATG-Config-r18
  ]]
}

-- TAG-SERVINGCELLCONFIGCOMMON-STOP
-- ASN1STOP
```

```

OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL  -- Need R
OPTIONAL  -- Need R

OPTIONAL -- Cond SharedSpectrum2

OPTIONAL, -- Need R
OPTIONAL  -- Need R
OPTIONAL, -- Need R
OPTIONAL  -- Need R
```

<i>ServingCellConfigCommon</i> field descriptions
<i>channelAccessMode</i> If present, this field indicates which channel access procedures to apply for operation with shared spectrum channel access as defined in TS 37.213 [48]. If the field is configured as "semiStatic", the UE shall apply the channel access procedures for semi-static channel occupancy as described in clause 4.3 in TS 37.213. If the field is configured as "dynamic", the UE shall apply the channel access procedures as defined in TS 37.213, clause 4.1 and 4.2.
<i>channelAccessMode2</i> If present, the UE shall apply channel access procedures for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4 for FR2-2. If absent, the UE shall not apply any channel access procedure. The network always configures this field if channel access procedures are required for the serving cell within this region by regulations.
<i>dmrs-TypeA-Position</i> Position of (first) DM-RS for downlink (see TS 38.211 [16], clause 7.4.1.1.1) and uplink (TS 38.211 [16], clause 6.4.1.1.3).
<i>downlinkConfigCommon</i> The common downlink configuration of the serving cell, including the frequency information configuration and the initial downlink BWP common configuration. The parameters provided herein should match the parameters configured by MIB and SIB1 (if provided) of the serving cell, with the exception of <i>controlResourceSetZero</i> and <i>searchSpaceZero</i> which can be configured in <i>ServingCellConfigCommon</i> even if MIB indicates that they are absent.
<i>discoveryBurstWindowLength</i> Indicates the window length of the discovery burst in ms (see TS 37.213 [48]). The field <i>discoveryBurstWindowLength-r17</i> is applicable to SCS 480 kHz and SCS 960 kHz.
<i>featurePriorities</i> Indicates priorities for features, such as (e)RedCap, Slicing, SDT, MSG1-Repetitions, and MSG3-Repetitions for Coverage Enhancements. These priorities are used to determine which <i>FeatureCombinationPreambles</i> the UE shall use when a feature maps to more than one <i>FeatureCombinationPreambles</i> , as specified in TS 38.321 [3]. A lower value means a higher priority. The network does not signal the same priority for more than one feature. The network signals a priority for all feature that map to at least one <i>FeatureCombinationPreambles</i> .
<i>longBitmap</i> Bitmap when maximum number of SS/PBCH blocks per half frame equals to 64 as defined in TS 38.213 [13], clause 4.1.
<i>lte-CRS-ToMatchAround</i> Parameters to determine an LTE CRS pattern that the UE shall rate match around.
<i>mediumBitmap</i> Bitmap when maximum number of SS/PBCH blocks per half frame equals to 8 as defined in TS 38.213 [13], clause 4.1.
<i>n-TimingAdvanceOffset</i> The N_TA-Offset to be applied for all uplink transmissions on this serving cell if <i>n-TimingAdvanceOffset2</i> is not configured. If <i>tag2</i> is configured for this serving cell, this field is to be applied to all uplink transmissions associated to <i>tag-id</i> configured for this serving cell. If the field is absent, the UE applies the value defined for the duplex mode and frequency range of this serving cell. See TS 38.133 [14], table 7.1.2-2/table 7.1C.2-4.
<i>ra-ChannelAccess</i> If present, this field indicates that the UE shall apply channel access procedures before msg1/msgA transmission for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4.5 for FR2-2.
<i>rateMatchPatternToAddModList</i> Resources patterns which the UE should rate match PDSCH around. The UE rate matches around the union of all resources indicated in the rate match patterns. Rate match patterns defined here on cell level apply only to PDSCH of the same numerology (see TS 38.214 [19], clause 5.1.4.1). If a <i>RateMatchPattern</i> with the same <i>RateMatchPatternId</i> is configured in both <i>ServingCellConfig/ServingCellConfigCommon</i> and in SIB20/MCCH, the entire <i>RateMatchPattern</i> configuration, including the set of RBs/REs indicated by the patterns for the rate matching around, shall be the same and they are counted as a single rate match pattern in the total configured rate match patterns as defined in TS 38.214 [19].
<i>shortBitmap</i> Bitmap when maximum number of SS/PBCH blocks per half frame equals to 4 as defined in TS 38.213 [13], clause 4.1.
<i>ss-PBCH-BlockPower</i> Average EPRE of the resources elements that carry secondary synchronization signals in dBm that the NW used for SSB transmission, see TS 38.213 [13], clause 7.
<i>ssb-periodicityServingCell</i> The SSB periodicity in ms for the rate matching purpose. If the field is absent, the UE applies the value ms5. (see TS 38.213 [13], clause 4.1)

<i>ssb-PositionQCL</i>
Indicates the QCL relation between SSB positions for this serving cell as specified in TS 38.213 [13], clause 4.1.
<i>ssb-PositionsInBurst</i>
For operation in licensed spectrum, indicates the time domain positions of the transmitted SS-blocks in a half frame with SS/PBCH blocks as defined in TS 38.213 [13], clause 4.1. The first/leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not transmitted while value 1 indicates that the corresponding SS/PBCH block is transmitted. The network configures the same pattern in this field as in the corresponding field in <i>ServingCellConfigCommonSIB</i> . For operation with shared spectrum channel access, the UE assumes that one or more SS/PBCH blocks indicated by <i>ssb-PositionsInBurst</i> may be transmitted within the discovery burst transmission window and have candidate SS/PBCH blocks indexes corresponding to SS/PBCH block indexes provided by <i>ssb-PositionsInBurst</i> (see TS 38.213 [13], clause 4.1). If the k-th bit of <i>ssb-PositionsInBurst</i> is set to 1, the UE assumes that one or more SS/PBCH blocks within the discovery burst transmission window with candidate SS/PBCH block indexes corresponding to SS/PBCH block index equal to k – 1 may be transmitted; if the kt-th bit is set to 0, the UE assumes that the corresponding SS/PBCH block(s) are not transmitted. The k-th bit is set to 0, where k > <i>ssb-PositionQCL</i> and the number of actually transmitted SS/PBCH blocks is not larger than the number of 1's in the bitmap. The network configures the same pattern in this field as in the corresponding field in <i>ServingCellConfigCommonSIB</i> . For operation with shared spectrum channel access in FR1, only <i>mediumBitmap</i> is used, and for FR2-2, <i>longBitmap</i> is used.
<i>ssbSubcarrierSpacing</i>
Subcarrier spacing of SSB. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 120 or 240 kHz FR2-2: 120, 480, or 960 kHz
<i>supplementaryUplinkConfig</i>
The network configures this field only if <i>uplinkConfigCommon</i> is configured. If this field is absent, the UE shall release the <i>supplementaryUplinkConfig</i> and the <i>supplementaryUplink</i> configured in <i>ServingCellConfig</i> of this serving cell, if configured.
<i>tdd-UL-DL-ConfigurationCommon</i>
A cell-specific TDD UL/DL configuration, see TS 38.213 [13], clause 11.1.

Conditional Presence	Explanation
<i>AbsFreqSSB</i>	The field is absent when <i>absoluteFrequencySSB</i> in <i>frequencyInfoDL</i> is absent, otherwise the field is mandatory present.
<i>HOAndServCellAdd</i>	This field is mandatory present upon SpCell change (including path switch between a serving cell and a L2 U2N Relay UE) and upon serving cell (PSCell/SCell) addition. Otherwise, the field is absent.
<i>HOAndServCellWithSSB</i>	This field is mandatory present upon SpCell change and upon serving cell (SCell with SSB or PSCell) addition. Otherwise, the field is absent.
<i>SharedSpectrum</i>	This field is mandatory present if this cell operates with shared spectrum channel access in FR1. Otherwise, it is absent, Need R.
<i>SharedSpectrum2</i>	This field is optionally present if this cell operates with shared spectrum channel access in FR2-2, Need R. Otherwise, it is absent, Need R.
<i>TDD</i>	The field is optionally present, Need R, for TDD cells; otherwise it is absent.

– *ServingCellConfigCommonSIB*

The IE *ServingCellConfigCommonSIB* is used to configure cell specific parameters of a UE's serving cell in SIB1.

ServingCellConfigCommonSIB information element

```

-- ASN1START
-- TAG-SERVINGCELLCONFIGCOMMONSIB-START

ServingCellConfigCommonSIB ::= SEQUENCE {
    downlinkConfigCommon          DownlinkConfigCommonSIB,
    uplinkConfigCommon            UplinkConfigCommonSIB                OPTIONAL, -- Need R
    supplementaryUplink            UplinkConfigCommonSIB                OPTIONAL, -- Need R
    n-TimingAdvanceOffset         ENUMERATED { n0, n25600, n39936 }     OPTIONAL, -- Need S
    ssb-PositionsInBurst          SEQUENCE {
        inOneGroup                BIT STRING (SIZE (8)),
        groupPresence              BIT STRING (SIZE (8))                OPTIONAL -- Cond FR2-Only
    },
    ssb-PeriodicityServingCell    ENUMERATED {ms5, ms10, ms20, ms40, ms80, ms160},
    tdd-UL-DL-ConfigurationCommon TDD-UL-DL-ConfigCommon              OPTIONAL, -- Cond TDD
    ss-PBCH-BlockPower            INTEGER (-60..50),
    ...,
    [[
        channelAccessMode-r16     CHOICE {
            dynamic,
            semiStatic             SemiStaticChannelAccessConfig-r16
        },
        discoveryBurstWindowLength-r16 ENUMERATED {ms0dot5, ms1, ms2, ms3, ms4, ms5}
        highSpeedConfig-r16        HighSpeedConfig-r16                OPTIONAL, -- Cond SharedSpectrum
        ],
        [[
            channelAccessMode2-r17 ENUMERATED {enabled}
            discoveryBurstWindowLength-v1700 ENUMERATED {ms0dot125, ms0dot25, ms0dot5, ms0dot75, ms1, ms1dot25}
            highSpeedConfigFR2-r17   HighSpeedConfigFR2-r17            OPTIONAL, -- Need R
            uplinkConfigCommon-v1700 UplinkConfigCommonSIB-v1700        OPTIONAL, -- Need R
        ]],
        [[
            enhancedMeasurementNGS0-r17 ENUMERATED {true}
        ]],
        [[
            ra-ChannelAccess-r17      ENUMERATED {enabled}
        ]],
        [[
            downlinkConfigCommon-v1760 DownlinkConfigCommonSIB-v1760
            uplinkConfigCommon-v1760    UplinkConfigCommonSIB-v1760
        ]],
    ]
}

-- TAG-SERVINGCELLCONFIGCOMMONSIB-STOP
-- ASN1STOP

```

ServingCellConfigCommonSIB field descriptions	
channelAccessMode	If present, this field indicates which channel access procedures to apply for operation with shared spectrum channel access as defined in TS 37.213 [48]. If the field is configured as "semiStatic", the UE shall apply the channel access procedures for semi-static channel occupancy as described in clause 4.3 in TS 37.213. If the field is configured as "dynamic", the UE shall apply the channel access procedures as defined in TS 37.213, clause 4.1 and 4.2.
channelAccessMode2	If present, this field indicates that the UE shall apply channel access procedures for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4 for FR2-2. If absent, the UE shall not apply any channel access procedure. The network always configures this field if channel access procedures are required for the serving cell within this region by regulations.
discoveryBurstWindowLength	Indicates the window length of the discovery burst in ms (see TS 37.213 [48]). The field <i>discoveryBurstWindowLength-v1700</i> is applicable to SCS 480 kHz and SCS 960 kHz.
enhancedMeasurementNGSO	If the field is present and UE supports the enhanced cell reselection requirements for NTN NGSO in RRC_IDLE/RRC_INACTIVE, the UE shall apply the enhanced cell reselection requirements for NTN NGSO as specified in TS 38.133 [14], clauses 4.2C.2.3 and 4.2C.2.4.
groupPresence	This field is present when maximum number of SS/PBCH blocks per half frame equals to 64 as defined in TS 38.213 [13], clause 4.1. The first/leftmost bit corresponds to the SS/PBCH index 0-7, the second bit corresponds to SS/PBCH block 8-15, and so on. Value 0 in the bitmap indicates that the SSBs according to <i>inOneGroup</i> are absent. Value 1 indicates that the SS/PBCH blocks are transmitted in accordance with <i>inOneGroup</i> .
inOneGroup	When maximum number of SS/PBCH blocks per half frame equals to 4 as defined in TS 38.213 [13], clause 4.1, only the 4 leftmost bits are valid; the UE ignores the 4 rightmost bits. When maximum number of SS/PBCH blocks per half frame equals to 8 as defined in TS 38.213 [13], clause 4.1, all 8 bits are valid. The first/ leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. When maximum number of SS/PBCH blocks per half frame equals to 64 as defined in TS 38.213 [13], clause 4.1, all 8 bit are valid; The first/ leftmost bit corresponds to the first SS/PBCH block index in the group (i.e., to SSB index 0, 8, and so on); the second bit corresponds to the second SS/PBCH block index in the group (i.e., to SSB index 1, 9, and so on), and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not transmitted while value 1 indicates that the corresponding SS/PBCH block is transmitted.
n-TimingAdvanceOffset	The N_TA-Offset to be applied for random access on this serving cell. If the field is absent, the UE applies the value defined for the duplex mode and frequency range of this serving cell. See TS 38.133 [14], table 7.1.2-2/table 7.1C.2-4.
ra-ChannelAccess	If present, this field indicates that the UE shall apply channel access procedures before msg1/msgA transmission for operation with shared spectrum channel access in accordance with TS 37.213 [48], clause 4.4.5 for FR2-2.
ssb-PositionsInBurst	Time domain positions of the transmitted SS-blocks in an SS-burst as defined in TS 38.213 [13], clause 4.1. For operation with shared spectrum channel access in FR1, only <i>inOneGroup</i> is used and the UE interprets this field same as <i>mediumBitmap</i> in <i>ServingCellConfigCommon</i> . The UE assumes that a bit in <i>inOneGroup</i> at position $k > N_{SSB}^{QCL}$ is 0, where N_{SSB}^{QCL} is obtained from <i>MIB</i> as specified in TS 38.213 [13], clause 4.1. For operation with shared spectrum channel access in FR2-2, the m-th bit in <i>groupPresence</i> is set to 0 for $m > N_{SSB}^{QCL}/8$, where N_{SSB}^{QCL} is obtained from <i>MIB</i> as specified in TS 38.213 [13], clause 4.1.
ss-PBCH-BlockPower	Average EPRE of the resources elements that carry secondary synchronization signals in dBm that the NW used for SSB transmission, see TS 38.213 [13], clause 7.

Conditional Presence	Explanation
<i>FR2-Only</i>	This field is mandatory present for an FR2 carrier frequency. It is absent otherwise and UE releases any configured value.
<i>SharedSpectrum</i>	This field is mandatory present if this cell operates with shared spectrum channel access in FR1. Otherwise, it is absent, Need R.
<i>SharedSpectrum2</i>	This field is optionally present if this cell operates with shared spectrum channel access in FR2-2, Need R. Otherwise, it is absent, Need R.
<i>TDD</i>	The field is optionally present, Need R, for TDD cells; otherwise it is absent.

— *ShortI-RNTI-Value*

The IE *ShortI-RNTI-Value* is used to identify the suspended UE context of a UE in RRC_INACTIVE using fewer bits compared to I-RNTI-Value.

ShortI-RNTI-Value information element

```
-- ASN1START
-- TAG-SHORTI-RNTI-VALUE-START
```

```
ShortI-RNTI-Value ::= BIT STRING (SIZE(24))
```

```
-- TAG-SHORTI-RNTI-VALUE-STOP
-- ASN1STOP
```

— *ShortMAC-I*

The IE *ShortMAC-I* is used to identify and verify the UE at RRC connection re-establishment. The 16 least significant bits of the MAC-I calculated using the AS security configuration of the source PCell, as specified in 5.3.7.4.

ShortMAC-I information element

```
-- ASN1START
-- TAG-SHORTMAC-I-START
```

```
ShortMAC-I ::= BIT STRING (SIZE (16))
```

```
-- TAG-SHORTMAC-I-STOP
-- ASN1STOP
```

— *SINR-Range*

The IE *SINR-Range* specifies the value range used in SINR measurements and thresholds. For measurements, integer value for SINR measurements is according to Table 10.1.16.1-1 in TS 38.133 [14]. For thresholds, the actual value is (IE value – 46) / 2 dB.

SINR-Range information element

```
-- ASN1START
-- TAG-SINR-RANGE-START
```

```
SINR-Range ::= INTEGER(0..127)
```

```
-- TAG-SINR-RANGE-STOP
-- ASN1STOP
```

– *SI-RequestConfig*

The IE *SI-RequestConfig* contains configuration for Msg1 based SI request without Msg1 repetition. For the random access parameters (e.g. *prach-RootSequenceIndex*, *msg1-SubcarrierSpacing*, etc.) not configured in *SI-RequestConfig*, the UE applies the parameters configured in *rach-ConfigCommon* corresponding to the RACH resource set selected upon RACH initialization (as specified in TS 38.321 [3]), of the initial uplink BWP unless otherwise specified.

SI-RequestConfig information element

```
-- ASN1START
-- TAG-SI-REQUESTCONFIG-START

SI-RequestConfig ::=
    rach-OccasionsSI          SEQUENCE {
        rach-ConfigSI        SEQUENCE {
            rach-ConfigGeneric,
            ssb-perRACH-Occasion ENUMERATED {oneEighth, oneFourth, oneHalf, one, two, four, eight, sixteen}
        }
        si-RequestPeriod      ENUMERATED {one, two, four, six, eight, ten, twelve, sixteen}
        si-RequestResources    SEQUENCE (SIZE (1..maxSI-Message)) OF SI-RequestResources
    }

SI-RequestResources ::=
    ra-PreambleStartIndex     INTEGER (0..63),
    ra-AssociationPeriodIndex INTEGER (0..15)
    ra-ssb-OccasionMaskIndex  INTEGER (0..15)

-- TAG-SI-REQUESTCONFIG-STOP
-- ASN1STOP
```

SI-RequestConfig field descriptions
<i>rach-OccasionsSI</i> Configuration of dedicated RACH Occasions for SI. If the field is absent, the UE uses the corresponding parameters configured in <i>rach-ConfigCommon</i> corresponding to the RACH resource set selected upon RACH initialization (as specified in TS 38.321 [3]), of the initial uplink BWP.
<i>si-RequestPeriod</i> Periodicity of the <i>SI-Request</i> configuration in number of association periods.
<i>si-RequestResources</i> If there is only one entry in the list, the configuration is used for all SI messages for which <i>si-BroadcastStatus</i> or <i>posSI-BroadcastStatus</i> is set to <i>notBroadcasting</i>. Otherwise: - If <i>si-SchedulingInfo-v1700</i> is not present and the <i>SI-RequestConfig</i> is used for on-demand SI request in <i>SI-SchedulingInfo</i> or <i>PosSI-SchedulingInfo</i>, the 1st entry in the list corresponds to the first SI message in <i>schedulingInfoList</i> or <i>posSchedulingInfoList</i> for which <i>si-BroadcastStatus</i> or <i>posSI-BroadcastStatus</i> is set to <i>notBroadcasting</i>, 2nd entry in the list corresponds to the second SI message in <i>schedulingInfoList</i> or <i>posSchedulingInfoList</i> for which <i>si-BroadcastStatus</i> or <i>posSI-BroadcastStatus</i> is set to <i>notBroadcasting</i> and so on. - If <i>si-SchedulingInfo-v1700</i> is present and <i>SI-RequestConfig</i> is configured in <i>SI-SchedulingInfo</i> for on-demand SI request, the UE generates a list of concatenated SI messages by appending the SI messages containing type1 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> to the SI messages configured by <i>schedulingInfoList</i> in <i>si-SchedulingInfo</i>. The 1st entry in the list corresponds to the first SI message for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i>, 2nd entry in the list corresponds to the second SI message for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> and so on. - If <i>si-SchedulingInfo-v1700</i> is present and <i>SI-RequestConfig</i> is configured in <i>PosSI-SchedulingInfo</i> for on-demand SI request, the UE generates a list of concatenated SI messages by appending the SI messages containing type2 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> to the SI messages configured by <i>posSchedulingInfoList</i> in <i>posSI-SchedulingInfo</i>. The 1st entry in the list corresponds to the first SI message for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i>, 2nd entry in the list corresponds to the second SI message for which <i>posSI-BroadcastStatus</i> or <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> and so on. Change of <i>si-RequestResources</i> should not result in system information change notification.

SI-RequestResources field descriptions
<i>ra-AssociationPeriodIndex</i> Index of the association period in the <i>si-RequestPeriod</i> in which the UE can send the SI request for SI message(s) corresponding to this <i>SI-RequestResources</i>, using the preambles indicated by <i>ra-PreambleStartIndex</i> and rach occasions indicated by <i>ra-ssb-OccasionMaskIndex</i>.
<i>ra-PreambleStartIndex</i> If N SSBs are associated with a RACH occasion, where N >= 1, for the i-th SSB (i=0, ..., N-1) the preamble with preamble index = <i>ra-PreambleStartIndex</i> + i is used for SI request; For N < 1, the preamble with preamble index = <i>ra-PreambleStartIndex</i> is used for SI request.

– SI-RequestConfigRepetition

The IE *SI-RequestConfigRepetition* contains configuration for Msg1 based SI request with Msg1 repetition. For the random access parameters (e.g. *prach-RootSequenceIndex*, *msg1-SubcarrierSpacing* and *msg1-RepetitionTimeOffsetROGroup*, etc.) not configured in *SI-RequestConfigRepetition*, the UE applies the parameters configured in *rach-ConfigCommon* corresponding to the RACH resource set selected upon RACH initialization (as specified in TS 38.321 [3]), of the initial uplink BWP unless otherwise specified.

SI-RequestConfigRepetition information element

```

-- ASN1START
-- TAG-SI-REQUESTCONFIGREPETITION-START

SI-RequestConfigRepetition-r18 ::= SEQUENCE {
    rach-OccasionsSI-r18 SEQUENCE {
```

```

    rach-ConfigSI-r18          RACH-ConfigGeneric,
    ssb-perRACH-Occasion-r18   ENUMERATED {oneEighth, oneFourth, oneHalf, one, two, four, eight, sixteen}
  }
  si-RequestResourcesRepetitionNum2-r18 SEQUENCE (SIZE (1..maxSI-Message)) OF SI-RequestResourcesRepetition-r18 OPTIONAL, -- Need R
  si-RequestResourcesRepetitionNum4-r18 SEQUENCE (SIZE (1..maxSI-Message)) OF SI-RequestResourcesRepetition-r18 OPTIONAL, -- Need R
  si-RequestResourcesRepetitionNum8-r18 SEQUENCE (SIZE (1..maxSI-Message)) OF SI-RequestResourcesRepetition-r18 OPTIONAL, -- Need R
  ...
}

SI-RequestResourcesRepetition-r18 ::= SEQUENCE {
  ra-PreambleStartIndex-r18 INTEGER (0..63)
}

-- TAG-SI-REQUESTCONFIGREPETITION-STOP
-- ASN1STOP

```

SI-RequestConfigRepetition field descriptions

rach-OccasionsSI

Configuration of dedicated RACH Occasions for SI. If the field is absent, the UE uses the corresponding parameters configured in *rach-ConfigCommon* corresponding to the RACH resource set selected upon RACH initialization (as specified in TS 38.321 [3]), of the initial uplink BWP.

si-RequestResourcesRepetitionNum2, si-RequestResourcesRepetitionNum4, si-RequestResourcesRepetitionNum8

Indicates the configurations for Msg1-based SI request with Msg1 repetition for repetition number 2, 4 and 8, respectively.

If there is only one entry in the list, the configuration is used for all SI messages for which *si-BroadcastStatus* or *posSI-BroadcastStatus* is set to *notBroadcasting*. Otherwise:

- If *si-SchedulingInfo-v1700* is not present and the *si-RequestResourcesRepetitionNum2/si-RequestResourcesRepetitionNum4/si-RequestResourcesRepetitionNum8* is used for on-demand SI request in *SI-SchedulingInfo* or *PosSI-SchedulingInfo*, the 1st entry in the list corresponds to the first SI message in *schedulingInfoList* or *posSchedulingInfoList* for which *si-BroadcastStatus* or *posSI-BroadcastStatus* is set to *notBroadcasting*, 2nd entry in the list corresponds to the second SI message in *schedulingInfoList* or *posSchedulingInfoList* for which *si-BroadcastStatus* or *posSI-BroadcastStatus* is set to *notBroadcasting* and so on.
- If *si-SchedulingInfo-v1700* is present and *si-RequestResourcesRepetitionNum2/si-RequestResourcesRepetitionNum4/si-RequestResourcesRepetitionNum8* is configured in *SI-SchedulingInfo* for on-demand SI request, the UE generates a list of concatenated SI messages by appending the SI messages containing type1 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700* to the SI messages configured by *schedulingInfoList* in *si-SchedulingInfo*. The 1st entry in the list corresponds to the first SI message for which *si-BroadcastStatus* is set to *notBroadcasting*, 2nd entry in the list corresponds to the second SI message for which *si-BroadcastStatus* is set to *notBroadcasting* and so on.
- If *si-SchedulingInfo-v1700* is present and *si-RequestResourcesRepetitionNum2/si-RequestResourcesRepetitionNum4/si-RequestResourcesRepetitionNum8* is configured in *PosSI-SchedulingInfo* for on-demand SI request, the UE generates a list of concatenated SI messages by appending the SI messages containing type2 SIB configured by *schedulingInfoList2* in *si-SchedulingInfo-v1700* to the SI messages configured by *posSchedulingInfoList* in *posSI-SchedulingInfo*. The 1st entry in the list corresponds to the first SI message for which *posSI-BroadcastStatus* or *si-BroadcastStatus* is set to *notBroadcasting*, 2nd entry in the list corresponds to the second SI message for which *posSI-BroadcastStatus* or *si-BroadcastStatus* is set to *notBroadcasting* and so on.

Change of *si-RequestResourcesRepetitionNum2/si-RequestResourcesRepetitionNum4/si-RequestResourcesRepetitionNum8* should not result in system information change notification.

SI-RequestResourcesRepetition field descriptions***ra-PreambleStartIndex***

If N SSBs are associated with a RACH occasion, where $N \geq 1$, for the i -th SSB ($i=0, \dots, N-1$) the preamble with preamble index = *ra-PreambleStartIndex* + i is used for SI request with Msg1 repetition; For $N < 1$, the preamble with preamble index = *ra-PreambleStartIndex* is used for SI request with Msg1 repetition.

— ***SI-SchedulingInfo***

The IE *SI-SchedulingInfo* contains information needed for acquisition of SI messages.

***SI-SchedulingInfo* information element**

```
-- ASN1START
-- TAG-SI-SCHEDULINGINFO-START

SI-SchedulingInfo ::=
    schedulingInfoList
    si-WindowLength
    si-RequestConfig
    si-RequestConfigSUL
    systemInformationAreaID
    ...
    SEQUENCE {
        SEQUENCE (SIZE (1..maxSI-Message)) OF SchedulingInfo,
        ENUMERATED {s5, s10, s20, s40, s80, s160, s320, s640, s1280, s2560-v1710, s5120-v1710 },
        SI-RequestConfig
        SI-RequestConfig
        BIT STRING (SIZE (24))
        OPTIONAL, -- Cond MSG-1
        OPTIONAL, -- Cond SUL-MSG-1
        OPTIONAL, -- Need R
    }

SchedulingInfo ::=
    si-BroadcastStatus
    si-Periodicity
    sib-MappingInfo
    SEQUENCE {
        ENUMERATED {broadcasting, notBroadcasting},
        ENUMERATED {rf8, rf16, rf32, rf64, rf128, rf256, rf512},
        SIB-Mapping
    }

SI-SchedulingInfo-v1700 ::=
    schedulingInfoList2-r17
    dummy
    SEQUENCE {
        SEQUENCE (SIZE (1..maxSI-Message)) OF SchedulingInfo2-r17,
        SI-RequestConfig
        OPTIONAL

SI-SchedulingInfo-v1740 ::=
    si-RequestConfigRedCap-r17
    SEQUENCE {
        SI-RequestConfig
        OPTIONAL -- Cond REDCAP-MSG-1

SI-SchedulingInfo-v1800 ::=
    si-RequestConfigMSG1-Repetition-r18
    si-RequestConfigRedCap-MSG1-Repetition-r18
    si-RequestConfigSUL-MSG1-Repetition-r18
    SEQUENCE {
        SI-RequestConfigRepetition-r18
        SI-RequestConfigRepetition-r18
        SI-RequestConfigRepetition-r18
        OPTIONAL, -- Cond MSG-1
        OPTIONAL, -- Cond REDCAP-MSG-1
        OPTIONAL, -- Cond SUL-MSG-1

SchedulingInfo2-r17 ::=
    si-BroadcastStatus-r17
    si-WindowPosition-r17
    si-Periodicity-r17
    sib-MappingInfo-r17
    SEQUENCE {
        ENUMERATED {broadcasting, notBroadcasting},
        INTEGER (1..256),
        ENUMERATED {rf8, rf16, rf32, rf64, rf128, rf256, rf512},
        SIB-Mapping-v1700
    }
```

```

SIB-Mapping ::= SEQUENCE (SIZE (1..maxSIB)) OF SIB-TypeInfo
SIB-Mapping-v1700 ::= SEQUENCE (SIZE (1..maxSIB)) OF SIB-TypeInfo-v1700
SIB-TypeInfo ::= SEQUENCE {
    type ENUMERATED {sibType2, sibType3, sibType4, sibType5, sibType6, sibType7, sibType8, sibType9,
        sibType10-v1610, sibType11-v1610, sibType12-v1610, sibType13-v1610,
        sibType14-v1610, spare3, spare2, spare1,... },
    valueTag INTEGER (0..31) OPTIONAL, -- Cond SIB-TYPE
    areaScope ENUMERATED {true} OPTIONAL -- Need S
}
SIB-TypeInfo-v1700 ::= SEQUENCE {
    sibType-r17 CHOICE {
        type1-r17 ENUMERATED {sibType15, sibType16, sibType17, sibType18, sibType19, sibType20, sibType21,
            sibType22-v1800, sibType23-v1800, sibType24-v1800, sibType25-v1800,
            sibType17bis-v1820, spare4, spare3, spare2, spare1,...},
        type2-r17 SEQUENCE {
            posSibType-r17 ENUMERATED {posSibType1-9, posSibType1-10, posSibType2-24, posSibType2-25,
                posSibType6-4, posSibType6-5, posSibType6-6, posSibType2-17a-v1770,
                posSibType2-18a-v1770, posSibType2-20a-v1770, posSibType1-11-v1800,
                posSibType1-12-v1800, posSibType2-26-v1800, posSibType2-27-v1800,
                posSibType6-7-v1800, posSibType7-1-v1800,...,
                posSibType7-2-v1800, posSibType7-3-v1800, posSibType7-4-v1800},
            encrypted-r17 ENUMERATED { true } OPTIONAL, -- Need R
            gnss-id-r17 GNSS-ID-r16 OPTIONAL, -- Need R
            sbas-id-r17 SBAS-ID-r16 OPTIONAL -- Cond GNSS-ID-SBAS
        },
    },
    valueTag-r17 INTEGER (0..31) OPTIONAL, -- Cond NonPosSIB
    areaScope-r17 ENUMERATED {true} OPTIONAL -- Need S
}
-- TAG-SI-SCHEDULINGINFO-STOP
-- ASN1STOP

```

SchedulingInfo field descriptions	
areaScope	Indicates that a SIB is area specific. If the field is absent, the SIB is cell specific.
si-BroadcastStatus	Indicates if the SI message is being broadcasted or not. Change of <i>si-BroadcastStatus</i> should not result in system information change notifications in Short Message transmitted with P-RNTI over DCI (see clause 6.5). The value of the indication is valid until the end of the BCCH modification period when set to <i>broadcasting</i> . When <i>SIB19</i> is scheduled in an NTN cell, the <i>si-BroadcastStatus</i> for the mapped <i>SIB19</i> is set to <i>broadcasting</i> . When <i>SIB22</i> is scheduled in an ATG cell, the <i>si-broadcastStatus</i> for the mapped <i>SIB22</i> is set to <i>broadcasting</i> .
si-Periodicity	Periodicity of the SI-message in radio frames. Value <i>rf8</i> corresponds to 8 radio frames, value <i>rf16</i> corresponds to 16 radio frames, and so on.

<i>SI-SchedulingInfo</i> field descriptions
<i>dummy</i> This field is not used in this specification. If received, it is ignored by the UE.
<i>schedulingInfoList</i>, <i>schedulingInfoList2</i> List of scheduling information for SI messages. If <i>si-SchedulingInfo-v1700</i> is present, the network ensures that the total number of SI messages in the list of concatenated SI messages configured by <i>schedulingInfoList</i> in <i>si-SchedulingInfo</i> and SI messages containing type1 SIB configured by <i>schedulingInfoList2</i> in <i>si-SchedulingInfo-v1700</i> does not exceed the limit of <i>maxSI-Message</i> .
<i>si-RequestConfig</i> Configuration of Msg1 resources that the UE uses for requesting SI-messages for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> .
<i>si-RequestConfigMSG1-Repetition</i> Configuration of Msg1 repetition resources on NUL that the UE uses for requesting SI-messages for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> . This field is only applicable when Msg1 repetition resources can be used for requesting SI-messages.
<i>si-RequestConfigRedCap</i> Configuration of Msg1 resources for <i>initialUplinkBWP-RedCap</i> that the (e)RedCap UE uses for requesting SI-messages for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> .
<i>si-RequestConfigRedCap-MSG1-Repetition</i> Configuration of Msg1 repetition resources for <i>initialUplinkBWP-RedCap</i> that the (e)RedCap UE uses for requesting SI-messages for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> . This field is only applicable when Msg1 repetition resources can be used for requesting SI-messages.
<i>si-RequestConfigSUL</i> Configuration of Msg1 resources that the UE uses for requesting SI-messages for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> .
<i>si-RequestConfigSUL-MSG1-Repetition</i> Configuration of Msg1 repetition resources on SUL that the UE uses for requesting SI-messages for which <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> . This field is only applicable when Msg1 repetition resources can be used for requesting SI-messages.
<i>si-WindowLength</i> The length of the SI scheduling window. Value <i>s5</i> corresponds to 5 slots, value <i>s10</i> corresponds to 10 slots and so on. The network always configures <i>si-WindowLength</i> to be shorter than or equal to the <i>si-Periodicity</i> . The values <i>s2560-v1710</i> and <i>s5120-v1710</i> are only applicable for SCS 480 kHz.
<i>systemInformationAreaID</i> Indicates the system information area that the cell belongs to, if any. Any SIB with <i>areaScope</i> within the SI is considered to belong to this <i>systemInformationAreaID</i> . The <i>systemInformationAreaID</i> is unique within a PLMN/SNPN.

SchedulingInfo2 field descriptions	
encrypted	The presence of this field indicates that the pos-sib-type is encrypted as specified in TS 37.355 [49].
gnss-id	The presence of this field indicates that the positioning SIB type is for a specific GNSS. Indicates a specific GNSS (see also TS 37.355 [49]).
posSibType	The posSIBs as defined in TS 37.355 [49] mapped to SI for scheduling using <i>schedulingInfoList2</i> .
sbas-id	The presence of this field indicates that the positioning SIB type is for a specific SBAS. Indicates a specific SBAS (see also TS 37.355 [49]).
si-WindowPosition	This field indicates the SI window position of the associated SI-message. The network provides <i>si-WindowPosition</i> in an ascending order, i.e. <i>si-WindowPosition</i> in the subsequent entry in <i>schedulingInfoList2</i> has always value higher than in the previous entry of <i>schedulingInfoList2</i> . The network configures this field in a way that ensures that SI messages scheduled by <i>schedulingInfoList</i> and/or <i>posSchedulingInfoList</i> do not overlap with SI messages scheduled by <i>schedulingInfoList2</i> .
sib-MappingInfo	Indicates which SIBs or posSIBs are contained in the SI message.
sibType	The type of SIB(s) mapped to SI for scheduling using <i>schedulingInfoList2</i> . Value <i>type1</i> indicates SIBs and value <i>type2</i> indicates posSIBs.

Conditional presence	Explanation
GNSS-ID-SBAS	The field is mandatory present if <i>gnss-id</i> is set to <i>sbas</i> . It is absent otherwise.
MSG-1	The field is optionally present, Need R, if <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message included in <i>schedulingInfoList</i> or any SI-message containing type1 SIB included in <i>schedulingInfoList2</i> . It is absent otherwise.
SIB-TYPE	The field is mandatory present if the SIB type is different from <i>SIB6</i> , <i>SIB7</i> or <i>SIB8</i> . For <i>SIB6</i> , <i>SIB7</i> and <i>SIB8</i> it is absent.
NonPosSIB	The field is mandatory present if the SIB type is <i>type1</i> . For <i>type2</i> it is absent.
SUL-MSG-1	The field is optionally present, Need R, if <i>supplementaryUplink</i> is configured in <i>ServingCellConfigCommonSIB</i> and if <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message included in <i>schedulingInfoList</i> or any SI-message containing type1 SIB included in <i>schedulingInfoList2</i> . It is absent otherwise.
REDCAP-MSG-1	The field is optionally present, Need R, if <i>initialUplinkBWP-RedCap</i> is configured in <i>UplinkConfigCommonSIB</i> and if <i>si-BroadcastStatus</i> is set to <i>notBroadcasting</i> for any SI-message included in <i>schedulingInfoList</i> or any SI-message containing type1 SIB included in <i>schedulingInfoList2</i> . It is absent otherwise.

– SK-Counter

The IE *SK-Counter* is a counter used upon initial configuration of SN security for NR-DC and NE-DC, as well as upon refresh of $S\text{-}K_{\text{gNB}}$ or $S\text{-}K_{\text{eNB}}$ based on the current or newly derived K_{gNB} during RRC Resume or RRC Reconfiguration, as defined in TS 33.501 [11].

```
-- ASN1START
-- TAG-SKCOUNTER-START
```

```
SK-Counter ::= INTEGER (0..65535)
```

```
-- TAG-SKCOUNTER-STOP
-- ASN1STOP
```


– SlotFormatCombinationsPerCell

The IE *SlotFormatCombinationsPerCell* is used to configure the *SlotFormatCombinations* applicable for one serving cell (see TS 38.213 [13], clause 11.1.1).

SlotFormatCombinationsPerCell information element

```
-- ASN1START
-- TAG-SLOTFORMATCOMBINATIONSPERCELL-START

SlotFormatCombinationsPerCell ::= SEQUENCE {
    servingCellId          ServCellIndex,
    subcarrierSpacing      SubcarrierSpacing,
    subcarrierSpacing2     SubcarrierSpacing OPTIONAL, -- Need R
    slotFormatCombinations SEQUENCE (SIZE (1..maxNrofSlotFormatCombinationsPerSet)) OF SlotFormatCombination OPTIONAL, -- Need M
    positionInDCI          INTEGER(0..maxSFI-DCI-PayloadSize-1) OPTIONAL, -- Need M
    ...
    [[
    enableConfiguredUL-r16 ENUMERATED {enabled} OPTIONAL -- Need R
    ]]
}

SlotFormatCombination ::= SEQUENCE {
    slotFormatCombinationId SlotFormatCombinationId,
    slotFormats             SEQUENCE (SIZE (1..maxNrofSlotFormatsPerCombination)) OF INTEGER (0..255)
}

SlotFormatCombinationId ::= INTEGER (0..maxNrofSlotFormatCombinationsPerSet-1)

-- TAG-SLOTFORMATCOMBINATIONSPERCELL-STOP
-- ASN1STOP
```

SlotFormatCombination field descriptions
slotFormatCombinationId This ID is used in the DCI payload to dynamically select this <i>SlotFormatCombination</i> (see TS 38.213 [13], clause 11.1.1).
slotFormats Slot formats that occur in consecutive slots in time domain order as listed here (see TS 38.213 [13], clause 11.1.1 and TS 38.213 [13], clause 14 for IAB-MT).

<i>SlotFormatCombinationsPerCell</i> field descriptions
<i>enableConfiguredUL</i> If configured, the UE is allowed to transmit uplink signals/channels (SRS, PUCCH, CG-PUSCH) in the set of symbols of the slot when the UE does not detect a DCI format 2_0 providing a slot format for the set of symbols (see TS 38.213 [13], 11.1.1). This field is applicable only if <i>cg-RetransmissionTimer-r16</i> is configured.
<i>positionInDCI</i> The (starting) position (bit) of the slotFormatCombinationId (SFI-Index) for this serving cell (servingCellId) within the DCI payload (see TS 38.213 [13], clause 11.1.1).
<i>servingCellId</i> The ID of the serving cell for which the slotFormatCombinations are applicable.
<i>slotFormatCombinations</i> A list with <i>SlotFormatCombinations</i> . Each <i>SlotFormatCombination</i> comprises of one or more <i>SlotFormats</i> (see TS 38.211 [16], clause 4.3.2). The total number of <i>slotFormats</i> in the <i>slotFormatCombinations</i> list does not exceed 512.
<i>subcarrierSpacing2</i> Reference subcarrier spacing for a Slot Format Combination on an FDD or SUL cell (see TS 38.213 [13], clause 11.1.1). For FDD, subcarrierSpacing (SFI-scs) is the reference SCS for DL BWP and subcarrierSpacing2 (SFI-scs2) is the reference SCS for UL BWP. For SUL, <i>subcarrierSpacing</i> (SFI-scs) is the reference SCS for non-SUL carrier and <i>subcarrierSpacing2</i> (SFI-scs2) is the reference SCS for SUL carrier. The network configures a value that is smaller than or equal to any SCS of configured BWPs of the serving cell that the command applies to. And the network configures a value that is smaller than or equal to the SCS of the serving cell which the UE monitors for SFI indications.
<i>subcarrierSpacing</i> Reference subcarrier spacing for this Slot Format Combination. The network configures a value that is smaller than or equal to any SCS of configured BWPs of the serving cell that the command applies to. And the network configures a value that is smaller than or equal to the SCS of the serving cell which the UE monitors for SFI indications (see TS 38.213 [13], clause 11.1.1).

– *SlotFormatIndicator*

The IE *SlotFormatIndicator* is used to configure monitoring a Group-Common-PDCCH for Slot-Format-Indicators (SFI).

SlotFormatIndicator information element

```
-- ASN1START
-- TAG-SLOTFORMATINDICATOR-START
```

```
SlotFormatIndicator ::= SEQUENCE {
    sfi-RNTI                RNTI-Value,
    dci-PayloadSize          INTEGER (1..maxSFI-DCI-PayloadSize),
    slotFormatCombToAddModList SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroup)) OF SlotFormatCombinationsPerCell OPTIONAL, -- Need N
    slotFormatCombToReleaseList SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroup)) OF ServCellIndex OPTIONAL, -- Need N
    ...,
    [[
        availableRB-SetsToAddModList-r16 SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroup)) OF AvailableRB-SetsPerCell-r16 OPTIONAL, -- Need N
        availableRB-SetsToReleaseList-r16 SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroup)) OF ServCellIndex OPTIONAL, -- Need N
        switchTriggerToAddModList-r16 SEQUENCE (SIZE(1..4)) OF SearchSpaceSwitchTrigger-r16 OPTIONAL, -- Need N
        switchTriggerToReleaseList-r16 SEQUENCE (SIZE(1..4)) OF ServCellIndex OPTIONAL, -- Need N
        co-DurationsPerCellToAddModList-r16 SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroup)) OF CO-DurationsPerCell-r16 OPTIONAL, -- Need N
        co-DurationsPerCellToReleaseList-r16 SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroup)) OF ServCellIndex OPTIONAL, -- Need N
    ]],
    [[
        switchTriggerToAddModListSizeExt-r16 SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroupMinus4-r16)) OF
            SearchSpaceSwitchTrigger-r16 OPTIONAL, -- Need N
    ]]
```

```

    switchTriggerToReleaseListSizeExt-r16 SEQUENCE (SIZE(1.. maxNrofAggregatedCellsPerCellGroupMinus4-r16)) OF
      ServCellIndex OPTIONAL -- Need N
  ]],
  [[
    co-DurationsPerCellToAddModList-r17 SEQUENCE (SIZE(1..maxNrofAggregatedCellsPerCellGroup)) OF CO-DurationsPerCell-r17 OPTIONAL -- Need N
  ]]
}

CO-DurationsPerCell-r16 ::= SEQUENCE {
  servingCellId-r16 ServCellIndex,
  positionInDCI-r16 INTEGER(0..maxSFI-DCI-PayloadSize-1),
  subcarrierSpacing-r16 SubcarrierSpacing,
  co-DurationList-r16 SEQUENCE (SIZE(1..64)) OF CO-Duration-r16
}

CO-DurationsPerCell-r17 ::= SEQUENCE {
  servingCellId-r17 ServCellIndex,
  positionInDCI-r17 INTEGER(0..maxSFI-DCI-PayloadSize-1),
  subcarrierSpacing-r17 SubcarrierSpacing,
  co-DurationList-r17 SEQUENCE (SIZE(1..64)) OF CO-Duration-r17
}

CO-Duration-r16 ::= INTEGER (0..1120)
CO-Duration-r17 ::= INTEGER (0..4480)

AvailableRB-SetsPerCell-r16 ::= SEQUENCE {
  servingCellId-r16 ServCellIndex,
  positionInDCI-r16 INTEGER(0..maxSFI-DCI-PayloadSize-1)
}

SearchSpaceSwitchTrigger-r16 ::= SEQUENCE {
  servingCellId-r16 ServCellIndex,
  positionInDCI-r16 INTEGER(0..maxSFI-DCI-PayloadSize-1)
}

-- TAG-SLOTFORMATINDICATOR-STOP
-- ASN1STOP

```

SlotFormatIndicator field descriptions
availableRB-SetsToAddModList A list of <i>AvailableRB-SetsPerCell</i> objects (see TS 38.213 [13], clause 11.1.1).
co-DurationsPerCellToAddModList A list of <i>CO-DurationsPerCell</i> objects. If not configured, the UE uses the slot format indicator (SFI), if available, to determine the channel occupancy duration (see TS 38.213 [13], clause 11.1.1).
co-DurationsPerCellToReleaseList A list of <i>CO-DurationsPerCell</i> objects to be released. An entry created using <i>co-DurationsPerCellToAddModList-r16</i> or <i>co-DurationsPerCellToAddModList-r17</i> can be deleted using <i>co-DurationsPerCellToReleaseList</i> .
dci-PayloadSize Total length of the DCI payload scrambled with SFI-RNTI (see TS 38.213 [13], clause 11.1.1).
sfi-RNTI RNTI used for SFI on the given cell (see TS 38.213 [13], clause 11.1.1).
slotFormatCombToAddModList A list of <i>SlotFormatCombinations</i> for the UE's serving cells (see TS 38.213 [13], clause 11.1.1).
switchTriggerToAddModList, switchTriggerToAddModListSizeExt A list of <i>SearchSpaceSwitchTrigger</i> objects. Each <i>SearchSpaceSwitchTrigger</i> object provides position in DCI of the bit field indicating search space switching flag for a serving cell or, if <i>cellGroupsForSwitchList</i> is configured, group of serving cells (see TS 38.213 [13], clause 10.4). If <i>cellGroupsForSwitchList</i> is configured, only one of the cells belonging to the same cell group is added/modified, and the configuration applies to all cells belonging to the <i>cellGroupsForSwitchList</i> (see TS 38.213 [13], clause 10.4). The network configures more than 4 <i>SearchSpaceSwitchTrigger</i> objects only if <i>cellGroupsForSwitchList</i> is not configured. The UE shall consider entries in <i>switchTriggerToAddModList</i> and in <i>switchTriggerToAddModListSizeExt</i> as a single list, i.e. an entry created using <i>switchTriggerToAddModList</i> can be modified using <i>switchTriggerToAddModListSizeExt</i> and vice-versa.
switchTriggerToReleaseModList, switchTriggerToReleaseListSizeExt A list of <i>SearchSpaceSwitchTriggers</i> to be released. If <i>cellGroupsForSwitchList</i> is configured, the <i>SearchSpaceSwitchTrigger</i> is released for all serving cells belonging to the same <i>CellGroupForSwitch</i> . The UE shall consider entries in <i>switchTriggerToReleaseList</i> and in <i>switchTriggerToReleaseListSizeExt</i> as a single list, i.e. an entry created using <i>switchTriggerToAddModList</i> or <i>switchTriggerToAddModListSizeExt</i> can be deleted using <i>switchTriggerToReleaseList</i> or <i>switchTriggerToReleaseListSizeExt</i> .

AvailableRB-SetsPerCell field descriptions
positionInDCI The (starting) position of the bits within DCI payload indicating the availability of the RB sets of a serving cell (see TS 38.213 [13], clause 11.1.1).
servingCellId The ID of the serving cell for which the configuration is applicable.

CO-DurationsPerCell field descriptions
co-DurationList A list of Channel Occupancy duration in symbols. The maximum duration that can be configured for the following SCS: - 15 kHz: 280. - 30 kHz: 560. - 60 kHz: 1120. - 120 kHz: 560. - 480 kHz: 2240. - 960 kHz: 4480.
positionInDCI Position in DCI of the bit field indicating Channel Occupancy duration for UE's serving cells (see TS 38.213 [13], clause 11.1.1).
servingCellId The ID of the serving cell for which the configuration is applicable.
subcarrierSpacing Reference subcarrier spacing for the list of Channel Occupancy durations (see TS 38.213 [13], clause 11.1.1). Only the following values are applicable depending on the used frequency range: FR1: 15, 30, or 60 kHz FR2-2: 120, 480, or 960 kHz

SearchSpaceSwitchTrigger field descriptions
positionInDCI The position of the bit within DCI payload containing a search space switching flag (see TS 38.213 [13], clause 11.1.1).
servingCellId The ID of the serving cell for which the configuration is applicable or the group of serving cells as indicated by <i>CellGroupsForSwitch-r16</i> containing this <i>servingCellId</i> .

— S-NSSAI

The IE *S-NSSAI* (*Single Network Slice Selection Assistance Information*) identifies a Network Slice end to end and comprises a slice/service type and a slice differentiator, see TS 23.003 [21].

S-NSSAI information element

```
-- ASN1START
-- TAG-S-NSSAI-START

S-NSSAI ::=
    CHOICE{
        sst          BIT STRING (SIZE (8)),
        sst-SD       BIT STRING (SIZE (32))
    }

-- TAG-S-NSSAI-STOP
-- ASN1STOP
```

S-NSSAI field descriptions
sst Indicates the S-NSSAI consisting of Slice/Service Type, see TS 23.003 [21].
sst-SD Indicates the S-NSSAI consisting of Slice/Service Type and Slice Differentiator, see TS 23.003 [21].

– *SpeedStateScaleFactors*

The IE *SpeedStateScaleFactors* concerns factors, to be applied when the UE is in medium or high speed state, used for scaling a mobility control related parameter.

SpeedStateScaleFactors information element

```
-- ASN1START
-- TAG-SPEEDSTATESCALEFACTORS-START

SpeedStateScaleFactors ::=
    sf-Medium
    sf-High
}
-- TAG-SPEEDSTATESCALEFACTORS-STOP
-- ASN1STOP
```

<i>SpeedStateScaleFactors</i> field descriptions
sf-High The concerned mobility control related parameter is multiplied with this factor if the UE is in High Mobility state as defined in TS 38.304 [20]. Value <i>oDot25</i> corresponds to 0.25, value <i>oDot5</i> corresponds to 0.5, <i>oDot75</i> corresponds to 0.75 and so on.
sf-Medium The concerned mobility control related parameter is multiplied with this factor if the UE is in Medium Mobility state as defined in TS 38.304 [20]. Value <i>oDot25</i> corresponds to 0.25, value <i>oDot5</i> corresponds to 0.5, value <i>oDot75</i> corresponds to 0.75, and so on.

– *SPS-Config*

The IE *SPS-Config* is used to configure downlink semi-persistent transmission. Multiple Downlink SPS configurations may be configured in one BWP of a serving cell.

SPS-Config information element

```
-- ASN1START
-- TAG-SPS-CONFIG-START

SPS-Config ::=
    periodicity
    nrofHARQ-Processes
    n1PUCCH-AN
    SEQUENCE {
        ENUMERATED {ms10, ms20, ms32, ms40, ms64, ms80, ms128, ms160, ms320, ms640, spare6, spare5, spare4, spare3, spare2, spare1},
        INTEGER (1..8),
        PUCCH-ResourceId
    }
    OPTIONAL, -- Need M
```

```
mcs-Table          ENUMERATED {qam64LowSE}          OPTIONAL, -- Need S
...,
[[
sps-ConfigIndex-r16      SPS-ConfigIndex-r16        OPTIONAL, -- Cond SPS-List
harq-ProcID-Offset-r16   INTEGER (0..15)             OPTIONAL, -- Need R
periodicityExt-r16       INTEGER (1..5120)           OPTIONAL, -- Need R
harq-CodebookID-r16      INTEGER (1..2)              OPTIONAL, -- Need R
pdsch-AggregationFactor-r16 ENUMERATED {n1, n2, n4, n8 } OPTIONAL, -- Need S
]],
[[
sps-HARQ-Deferral-r17     INTEGER (1..32)           OPTIONAL, -- Need R
n1PUCCH-AN-PUCCHsSCell-r17 PUCCH-ResourceId        OPTIONAL, -- Need R
periodicityExt-r17        INTEGER (1..40960)         OPTIONAL, -- Need R
nrofHARQ-Processes-v1710  INTEGER(9..32)             OPTIONAL, -- Need R
harq-ProcID-Offset-v1700  INTEGER (16..31)           OPTIONAL, -- Need R
]]
}

-- TAG-SPS-CONFIG-STOP
-- ASN1STOP
```

SPS-Config field descriptions	
harq-CodebookID	Indicates the HARQ-ACK codebook index for the corresponding HARQ-ACK codebook for SPS PDSCH and ACK for SPS PDSCH release.
harq-ProcID-Offset	Indicates the offset used in deriving the HARQ process IDs, see TS 38.321 [3], clause 5.3.1.
mcs-Table	Indicates the MCS table the UE shall use for DL SPS (see TS 38.214 [19], clause 5.1.3.1. If present, the UE shall use the MCS table of low-SE 64QAM table indicated in Table 5.1.3.1-3 of TS 38.214 [19]. If this field is absent and field mcs-table in PDSCH-Config is set to 'qam256' and the activating DCI is of format 1_1, the UE applies the 256QAM table indicated in Table 5.1.3.1-2 of TS 38.214 [19]. If this field is absent and the field <i>mcs-Table-r17</i> in <i>PDSCH-Config</i> is set to 'qam1024' and the activating DCI is format 1_1, the UE applies the 1024QAM table indicated in Table 5.1.3.1-4 of TS 38.214 [19]. Otherwise, the UE applies the non-low-SE 64QAM table indicated in Table 5.1.3.1-1 of TS 38.214 [19].
n1PUCCH-AN	HARQ resource for PUCCH for DL SPS. The network configures the resource either as format0 or format1. The actual <i>PUCCH-Resource</i> is configured in <i>PUCCH-Config</i> and referred to by its ID. See TS 38.213 [13], clause 9.2.3.
n1PUCCH-AN-PUCCHsSCell	HARQ resource for PUCCH on PUCCH switching SCell (sSCell) for DL SPS. The network configures the resource either as format 0 or format 1. The actual <i>PUCCH-Resource</i> is configured in <i>PUCCH-Config</i> of the <i>PUCCH sSCell</i> and referred to by its ID. See TS 38.213 [13], clause 9.2.3.
nrofHARQ-Processes	Number of configured HARQ processes for SPS DL (see TS 38.321 [3], clause 5.8.1). If UE is configured with <i>nrofHARQ-Processes-v1710</i> UE shall ignore <i>nrofHARQ-Processes</i> (without suffix).
pdsch-AggregationFactor	Number of repetitions for SPS PDSCH (see TS 38.214 [19], clause 5.1.2.1). When the field is absent, the UE applies the value 1 for MBS multicast data and the <i>pdsch-AggregationFactor</i> in <i>pdsch-Config</i> for other data.
periodicity	Periodicity for DL SPS (see TS 38.214 [19] and TS 38.321 [3], clause 5.8.1).
periodicityExt	This field is used to calculate the periodicity for DL SPS (see TS 38.214 [19] and see TS 38.321 [3], clause 5.8.1). If this field is present, the field <i>periodicity</i> is ignored. The following periodicities are supported depending on the configured subcarrier spacing [ms]: 15 kHz: $periodicityExt$, where <i>periodicityExt</i> has a value between 1 and 640. 30 kHz: $0.5 \times periodicityExt$, where <i>periodicityExt</i> has a value between 1 and 1280. 60 kHz with normal CP: $0.25 \times periodicityExt$, where <i>periodicityExt</i> has a value between 1 and 2560. 60 kHz with ECP: $0.25 \times periodicityExt$, where <i>periodicityExt</i> has a value between 1 and 2560. 120 kHz: $0.125 \times periodicityExt$, where <i>periodicityExt</i> has a value between 1 and 5120. 480 kHz: $0.03125 \times periodicityExt$, where <i>periodicityExt</i> has a value between 1 and 20480. 960 kHz: $0.015625 \times periodicityExt$, where <i>periodicityExt</i> has a value between 1 and 40960. <i>periodicityExt-r17</i> is only applicable for SCS 480 kHz and 960 kHz.
sps-ConfigIndex	Indicates the index of one of multiple SPS configurations.
sps-HARQ-Deferral	Indicates the maximum number of slots or subslots the transmission of DL SPS HARQ-ACK in a slot or subslot can be deferred (see TS 38.213 [13], clause 9.2.5.4).

Conditional Presence	Explanation
SPS-List	The field is mandatory present when included in <i>sps-ConfigToAddModList-r16</i> or <i>sps-ConfigMulticastToAddModList-r17</i> , otherwise the field is absent.

— *SPS-ConfigIndex*

The IE *SPS-ConfigIndex* is used to indicate the index of one of multiple DL SPS configurations in one BWP.

***SPS-ConfigIndex* information element**

```
-- ASN1START
-- TAG-SPS-CONFIGINDEX-START

SPS-ConfigIndex-r16 ::= INTEGER (0.. maxNrofSPS-Config-1-r16)

-- TAG-SPS-CONFIGINDEX-STOP
-- ASN1STOP
```

— *SPS-PUCCH-AN*

The IE *SPS-PUCCH-AN* is used to indicate a PUCCH resource for HARQ ACK and configure the corresponding maximum payload size for the PUCCH resource.

***SPS-PUCCH-AN* information element**

```
-- ASN1START
-- TAG-SPS-PUCCH-AN-START

SPS-PUCCH-AN-r16 ::= SEQUENCE {
    sps-PUCCH-AN-ResourceID-r16 PUCCH-ResourceId,
    maxPayloadSize-r16 INTEGER (4..256) OPTIONAL -- Need R
}

-- TAG-SPS-PUCCH-AN-STOP
-- ASN1STOP
```

<i>SPS-PUCCH-AN</i> field descriptions
<i>maxPayloadSize</i> Indicates the maximum payload size for the corresponding PUCCH resource ID.
<i>sps-PUCCH-AN-ResourceID</i> Indicates the PUCCH resource ID

— *SPS-PUCCH-AN-List*

The IE *SPS-PUCCH-AN-List* is used to configure the list of PUCCH resources per HARQ ACK codebook

***SPS-PUCCH-AN-List* information element**

```
-- ASN1START
```

```
-- TAG-SPS-PUCCH-AN-LIST-START
SPS-PUCCH-AN-List-r16 ::= SEQUENCE (SIZE(1..4)) OF SPS-PUCCH-AN-r16
-- TAG-SPS-PUCCH-AN-LIST-STOP
-- ASN1STOP
```

— *SRB-Identity*

The IE *SRB-Identity* is used to identify a Signalling Radio Bearer (SRB) used by a UE.

SRB-Identity information element

```
-- ASN1START
-- TAG-SRB-IDENTITY-START
SRB-Identity ::= INTEGER (1..3)
SRB-Identity-v1700 ::= INTEGER (4)
SRB-Identity-v1800 ::= INTEGER (5)
-- TAG-SRB-IDENTITY-STOP
-- ASN1STOP
```

— *SRS-CarrierSwitching*

The IE *SRS-CarrierSwitching* is used to configure SRS carrier switching when PUSCH is not configured or to configure independent SRS power control from that of PUSCH.

SRS-CarrierSwitching information element

```
-- ASN1START
-- TAG-SRS-CARRIERSWITCHING-START
SRS-CarrierSwitching ::= SEQUENCE {
    srs-SwitchFromServCellIndex INTEGER (0..31) OPTIONAL, -- Need M
    srs-SwitchFromCarrier ENUMERATED {sUL, nUL},
    srs-TPC-PDCCH-Group CHOICE {
        typeA SEQUENCE (SIZE (1..32)) OF SRS-TPC-PDCCH-Config,
        typeB SRS-TPC-PDCCH-Config
    } OPTIONAL, -- Need M
    monitoringCells SEQUENCE (SIZE (1..maxNrofServingCells)) OF ServCellIndex OPTIONAL, -- Need M
    ...
}
SRS-TPC-PDCCH-Config ::= SEQUENCE {
    srs-CC-SetIndexList SEQUENCE (SIZE(1..4)) OF SRS-CC-SetIndex OPTIONAL -- Need M
```

```

}

SRS-CC-SetIndex ::=
    cc-SetIndex          SEQUENCE {
                           INTEGER (0..3)
                           INTEGER (0..7)
    }
    OPTIONAL, -- Need M
    OPTIONAL  -- Need M

-- TAG-SRS-CARRIERSWITCHING-STOP
-- ASN1STOP

```

SRS-CC-SetIndex field descriptions
cc-IndexInOneCC-Set Indicates the CC index in one CC set for Type A (see TS 38.212 [17], TS 38.213 [13], clause 7.3.1, 11.4). The network always includes this field when the <i>srs-TPC-PDCCH-Group</i> is set to <i>typeA</i> .
cc-SetIndex Indicates the CC set index for Type A associated (see TS 38.212 [17], TS 38.213 [13], clause 7.3.1, 11.4). The network always includes this field when the <i>srs-TPC-PDCCH-Group</i> is set to <i>typeA</i> . The network does not configure this field to 3 in this release of specification.

SRS-CarrierSwitching field descriptions
monitoringCells A set of serving cells for monitoring PDCCH conveying SRS DCI format with CRC scrambled by TPC-SRS-RNTI (see TS 38.212 [17], TS 38.213 [13], clause 7.3.1, 11.4).
srs-SwitchFromCarrier The UE ignores this field in case of independent SRS power control from that of PUSCH.
srs-SwitchFromServCellIndex Indicates the serving cell whose UL transmission may be interrupted during SRS transmission on a PUSCH-less SCell. During SRS transmission on a PUSCH-less SCell, the UE may temporarily suspend the UL transmission on a serving cell with PUSCH in the same CG to allow the PUSCH-less SCell to transmit SRS. (see TS 38.214 [19], clause 6.2.1.3).
srs-TPC-PDCCH-Group Network configures the UE with either typeA-SRS-TPC-PDCCH-Group or typeB-SRS-TPC-PDCCH-Group, if any.
typeA Type A trigger configuration for SRS transmission on a PUSCH-less SCell, or for SRS transmission on a serving cell with independent SRS power control from that of PUSCH (see TS 38.213 [13], clause 11.4). In this release, the network configures at most one entry (the first entry) of <i>typeA</i> , and the first entry corresponds to the serving cell in which the <i>SRS-CarrierSwitching</i> field is configured. SRS carrier switching to SUL carrier is not supported in this version of the specification.
typeB Type B trigger configuration for SRS transmission on a PUSCH-less SCell, or for SRS transmission on a serving cell with independent SRS power control from that of PUSCH (see TS 38.213 [13], clause 11.4).

SRS-TPC-PDCCH-Config field descriptions
srs-CC-SetIndexlist A list of pairs of [cc-SetIndex; cc-IndexInOneCC-Set] (see TS 38.212 [17], TS 38.213 [13], clause 7.3.1, 11.4). The network does not configure this field for <i>typeB</i> .

– SRS-Config

The IE *SRS-Config* is used to configure sounding reference signal transmissions. The configuration defines a list of SRS-Resources, a list of SRS-PosResources, a list of SRS-PosResourceSets and a list of SRS-ResourceSets. Each resource set defines a set of SRS-Resources or SRS-PosResources. The network triggers the transmission of the set of SRS-Resources or SRS-PosResources using a configured aperiodicSRS-ResourceTrigger (L1 DCI). The network does not configure SRS specific power control parameters *alpha* (without suffix) or *pathlossReferenceRS* if *unifiedTCI-StateType* is configured for the serving cell.

SRS-Config information element

```
-- ASN1START
-- TAG-SRS-CONFIG-START

SRS-Config ::=
    srs-ResourceSetToReleaseList      SEQUENCE {
    srs-ResourceSetToAddModList        SEQUENCE (SIZE(1..maxNrofSRS-ResourceSets)) OF SRS-ResourceSetId      OPTIONAL, -- Need N
    srs-ResourceSetToAddModList        SEQUENCE (SIZE(1..maxNrofSRS-ResourceSets)) OF SRS-ResourceSet      OPTIONAL, -- Need N
    srs-ResourceToReleaseList          SEQUENCE (SIZE(1..maxNrofSRS-Resources)) OF SRS-ResourceId          OPTIONAL, -- Need N
    srs-ResourceToAddModList           SEQUENCE (SIZE(1..maxNrofSRS-Resources)) OF SRS-Resource            OPTIONAL, -- Need N
    tpc-Accumulation                   ENUMERATED {disabled}                                          OPTIONAL, -- Need S
    ...
    [[
    srs-RequestDCI-1-2-r16              INTEGER (1..2)                                              OPTIONAL, -- Need S
    srs-RequestDCI-0-2-r16              INTEGER (1..2)                                              OPTIONAL, -- Need S
    srs-ResourceSetToAddModListDCI-0-2-r16 SEQUENCE (SIZE(1..maxNrofSRS-ResourceSets)) OF SRS-ResourceSet      OPTIONAL, -- Need N
    srs-ResourceSetToReleaseListDCI-0-2-r16 SEQUENCE (SIZE(1..maxNrofSRS-ResourceSets)) OF SRS-ResourceSetId      OPTIONAL, -- Need N
    srs-PosResourceSetToReleaseList-r16 SEQUENCE (SIZE(1..maxNrofSRS-PosResourceSets-r16)) OF SRS-PosResourceSetId-r16  OPTIONAL, -- Need N
    srs-PosResourceSetToAddModList-r16 SEQUENCE (SIZE(1..maxNrofSRS-PosResourceSets-r16)) OF SRS-PosResourceSet-r16  OPTIONAL, -- Need N
    srs-PosResourceToReleaseList-r16 SEQUENCE (SIZE(1..maxNrofSRS-PosResources-r16)) OF SRS-PosResourceId-r16  OPTIONAL, -- Need N
    srs-PosResourceToAddModList-r16 SEQUENCE (SIZE(1..maxNrofSRS-PosResources-r16)) OF SRS-PosResource-r16  OPTIONAL, -- Need N
    ]],
    [[
    dci-TriggeringPosResourceSetLink-r18 ENUMERATED { enabled }                                     OPTIONAL -- Need R
    ]]
    ]

SRS-ResourceSet ::=
    srs-ResourceSetId                  SEQUENCE {
    srs-ResourceSetId,
    srs-ResourceIdList                 SEQUENCE (SIZE(1..maxNrofSRS-ResourcesPerSet)) OF SRS-ResourceId      OPTIONAL, -- Cond Setup
    resourceType                       CHOICE {
    aperiodic                          SEQUENCE {
    aperiodicSRS-ResourceTrigger       INTEGER (1..maxNrofSRS-TriggerStates-1),
    csi-RS                             NZP-CSI-RS-ResourceId                               OPTIONAL, -- Cond NonCodebook
    slotOffset                         INTEGER (1..32)                               OPTIONAL, -- Need S
    ...
    [[
    aperiodicSRS-ResourceTriggerList SEQUENCE (SIZE(1..maxNrofSRS-TriggerStates-2))
    OF INTEGER (1..maxNrofSRS-TriggerStates-1)  OPTIONAL -- Need M
    ]],
    ]],
    semi-persistent                    SEQUENCE {
    associatedCSI-RS                   NZP-CSI-RS-ResourceId                               OPTIONAL, -- Cond NonCodebook
    ...
    }
```

```

    },
    periodic
        associatedCSI-RS
        ...
    }
},
usage
alpha
p0
pathlossReferenceRS
srs-PowerControlAdjustmentStates
...
[[
pathlossReferenceRSList-r16
]],
[[
usagePDC-r17
availableSlotOffsetList-r17
followUnifiedTCI-StateSRS-r17
]],
[[
applyIndicatedTCI-State-r18
]]
}

AvailableSlotOffset-r17 ::= INTEGER (0..7)

PathlossReferenceRS-Config ::=
    ssb-Index
    csi-RS-Index
}

PathlossReferenceRSList-r16 ::=
    SEQUENCE (SIZE (1..maxNrofSRS-PathlossReferenceRS-r16)) OF PathlossReferenceRS-r16

PathlossReferenceRS-r16 ::=
    srs-PathlossReferenceRS-Id-r16
    pathlossReferenceRS-r16
}

SRS-PathlossReferenceRS-Id-r16 ::=
    INTEGER (0..maxNrofSRS-PathlossReferenceRS-1-r16)

SRS-PosResourceSet-r16 ::=
    srs-PosResourceSetId-r16
    srs-PosResourceIdList-r16
    resourceType-r16
    aperiodic-r16
        aperiodicSRS-ResourceTriggerList-r16
        ...
    },
    semi-persistent-r16
        ...
    },

```

SEQUENCE {
NZIP-CSI-RS-ResourceId
OPTIONAL, -- Cond NonCodebook

ENUMERATED {beamManagement, codebook, nonCodebook, antennaSwitching},
Alpha
OPTIONAL, -- Need S
INTEGER (-202..24)
OPTIONAL, -- Cond Setup
PathlossReferenceRS-Config
OPTIONAL, -- Need M
ENUMERATED { sameAsFci2, separateClosedLoop}
OPTIONAL, -- Need S

SetupRelease { PathlossReferenceRSList-r16}
OPTIONAL -- Need M

ENUMERATED {true}
OPTIONAL, -- Need R
SEQUENCE (SIZE(1..4)) OF AvailableSlotOffset-r17
OPTIONAL, -- Need R
ENUMERATED {enabled}
OPTIONAL -- Need R

ENUMERATED {first, second}
OPTIONAL -- Cond FollowUTCI

CHOICE {
SSB-Index,
NZP-CSI-RS-ResourceId

SEQUENCE (SIZE (1..maxNrofSRS-PathlossReferenceRS-r16)) OF PathlossReferenceRS-r16

SEQUENCE {
SRS-PathlossReferenceRS-Id-r16,
PathlossReferenceRS-Config

INTEGER (0..maxNrofSRS-PathlossReferenceRS-1-r16)

SEQUENCE {
SRS-PosResourceSetId-r16,
SEQUENCE (SIZE(1..maxNrofSRS-ResourcesPerSet)) OF SRS-PosResourceId-r16
OPTIONAL, -- Cond Setup

CHOICE {
SEQUENCE {
SEQUENCE (SIZE(1..maxNrofSRS-TriggerStates-1))
OF INTEGER (1..maxNrofSRS-TriggerStates-1)
OPTIONAL, -- Need M

SEQUENCE {

```

        periodic-r16
        ...
    },
    alpha-r16
    p0-r16
    pathlossReferenceRS-Pos-r16
        ssb-IndexServing-r16
        ssb-Ncell-r16
        dl-PRS-r16
    }
    ...
}

SRS-ResourceSetId ::=
    INTEGER (0..maxNrofSRS-ResourceSets-1)

SRS-PosResourceSetId-r16 ::=
    INTEGER (0..maxNrofSRS-PosResourceSets-1-r16)

SRS-Resource ::=
    srs-ResourceId
    nrofSRS-Ports
    ptrs-PortIndex
    transmissionComb
        n2
            combOffset-n2
            cyclicShift-n2
        },
        n4
            combOffset-n4
            cyclicShift-n4
    },
    resourceMapping
        startPosition
        nrofSymbols
        repetitionFactor
    },
    freqDomainPosition
    freqDomainShift
    freqHopping
        c-SRS
        b-SRS
        b-hop
    },
    groupOrSequenceHopping
    resourceType
        aperiodic
        ...
    },
    semi-persistent
        periodicityAndOffset-sp
        ...
    },

```

SEQUENCE {

Alpha

INTEGER (-202..24)

CHOICE {

SSB-Index,

SSB-InfoNcell-r16,

DL-PRS-Info-r16

OPTIONAL, -- Need S

OPTIONAL, -- Cond Setup

OPTIONAL, -- Need M

SEQUENCE {

SRS-ResourceId,

ENUMERATED {port1, ports2, ports4},

ENUMERATED {n0, n1 }

CHOICE {

SEQUENCE {

INTEGER (0..1),

INTEGER (0..7)

SEQUENCE {

INTEGER (0..3),

INTEGER (0..11)

SEQUENCE {

INTEGER (0..5),

ENUMERATED {n1, n2, n4},

ENUMERATED {n1, n2, n4}

INTEGER (0..67),

INTEGER (0..268),

SEQUENCE {

INTEGER (0..63),

INTEGER (0..3),

INTEGER (0..3)

ENUMERATED { neither, groupHopping, sequenceHopping },

CHOICE {

SEQUENCE {

SEQUENCE {

SRS-PeriodicityAndOffset,

periodic	SEQUENCE {		
periodicityAndOffset-p	SRS-PeriodicityAndOffset,		
...			
}			
},			
sequenceId	INTEGER (0..1023),		
spatialRelationInfo	SRS-SpatialRelationInfo	OPTIONAL,	-- Need R
...			
[[			
resourceMapping-r16	SEQUENCE {		
startPosition-r16	INTEGER (0..13),		
nrofSymbols-r16	ENUMERATED {n1, n2, n4},		
repetitionFactor-r16	ENUMERATED {n1, n2, n4}		
}		OPTIONAL	-- Need R
]],			
[[			
spatialRelationInfo-PDC-r17	SetupRelease { SpatialRelationInfo-PDC-r17 }	OPTIONAL,	-- Need M
resourceMapping-r17	SEQUENCE {		
startPosition-r17	INTEGER (0..13),		
nrofSymbols-r17	ENUMERATED {n1, n2, n4, n8, n10, n12, n14},		
repetitionFactor-r17	ENUMERATED {n1, n2, n4, n5, n6, n7, n8, n10, n12, n14}		
}		OPTIONAL,	-- Need R
partialFreqSounding-r17	SEQUENCE {		
startRBIndexFScaling-r17	CHOICE{		
startRBIndexAndFreqScalingFactor2-r17	INTEGER (0..1),		
startRBIndexAndFreqScalingFactor4-r17	INTEGER (0..3)		
},			
enableStartRBHopping-r17	ENUMERATED {enable}	OPTIONAL	-- Need R
}		OPTIONAL,	-- Need R
transmissionComb-n8-r17	SEQUENCE {		
combOffset-n8-r17	INTEGER (0..7),		
cyclicShift-n8-r17	INTEGER (0..5)		
}		OPTIONAL,	-- Need R
srs-TCI-State-r17	CHOICE {		
srs-UL-TCI-State	TCI-UL-StateId-r17,		
srs-DLorJointTCI-State	TCI-StateId		
}		OPTIONAL	-- Need R
]],			
[[			
repetitionFactor-v1730	ENUMERATED {n3}	OPTIONAL,	-- Need R
srs-DLorJointTCI-State-v1730	SEQUENCE {		
cellAndBWP-r17	ServingCellAndBWP-Id-r17		
}		OPTIONAL	-- Cond DLorJointTCI-SRS
]],			
[[			
nrofSRS-Ports-n8-r18	ENUMERATED {ports8, ports8tdm}	OPTIONAL,	-- Need R
combOffsetHopping-r18	SEQUENCE {		
hoppingId-r18	INTEGER (0..1023)		
hoppingSubset-r18	CHOICE {		
transmissionComb-n4	BIT STRING (SIZE (4)),		
transmissionComb-n8	BIT STRING (SIZE (8))		
}		OPTIONAL,	-- Need R
hoppingWithRepetition-r18	ENUMERATED {symbol, repetition}	OPTIONAL	-- Need R
}		OPTIONAL,	-- Need R

cyclicShiftHopping-r18	SEQUENCE {		
hoppingId-r18	INTEGER (0..1023)	OPTIONAL,	-- Need R
hoppingSubset-r18	CHOICE {		
transmissionComb-n2	BIT STRING (SIZE (8)),		
transmissionComb-n4	BIT STRING (SIZE (12)),		
transmissionComb-n8	BIT STRING (SIZE (6))		
}		OPTIONAL,	-- Need R
hoppingFinerGranularity-r18	ENUMERATED {enable}	OPTIONAL	-- Need R
}		OPTIONAL	-- Need R
}			
}			
SRS-PosResource-r16::=	SEQUENCE {		
srs-PosResourceId-r16	SRS-PosResourceId-r16,		
transmissionComb-r16	CHOICE {		
n2-r16	SEQUENCE {		
combOffset-n2-r16	INTEGER (0..1),		
cyclicShift-n2-r16	INTEGER (0..7)		
},			
n4-r16	SEQUENCE {		
combOffset-n4-r16	INTEGER (0..3),		
cyclicShift-n4-r16	INTEGER (0..11)		
},			
n8-r16	SEQUENCE {		
combOffset-n8-r16	INTEGER (0..7),		
cyclicShift-n8-r16	INTEGER (0..5)		
},			
...}			
resourceMapping-r16	SEQUENCE {		
startPosition-r16	INTEGER (0..13),		
nrofSymbols-r16	ENUMERATED {n1, n2, n4, n8, n12}		
},			
freqDomainShift-r16	INTEGER (0..268),		
freqHopping-r16	SEQUENCE {		
c-SRS-r16	INTEGER (0..63),		
...}			
groupOrSequenceHopping-r16	ENUMERATED { neither, groupHopping, sequenceHopping },		
resourceType-r16	CHOICE {		
aperiodic-r16	SEQUENCE {		
slotOffset-r16	INTEGER (1..32)	OPTIONAL,	-- Need S
...}			
},			
semi-persistent-r16	SEQUENCE {		
periodicityAndOffset-sp-r16	SRS-PeriodicityAndOffset-r16,		
...}			
[[			
periodicityAndOffset-sp-Ext-r16	SRS-PeriodicityAndOffsetExt-r16	OPTIONAL	-- Need R
]],			
[[			
srs-PosPeriodicConfigHyperSFN-Index-r18	ENUMERATED {even0, odd1}	OPTIONAL	--Need R
]],			
},			


```

        periodic-r16
        periodicityAndOffset-p-r16
        ...
        [[
        periodicityAndOffset-p-Ext-r16
        ]],
        [[
        srs-PosPeriodicConfigHyperSFN-Index-r18
        ]]
    }
},
sequenceId-r16
spatialRelationInfoPos-r16
...
[[
txHoppingConfig-r18
]]
}

SRS-SpatialRelationInfo ::=
    servingCellId
    referenceSignal
    ssb-Index
    csi-RS-Index
    srs
    resourceId
    uplinkBWP
}

}

SRS-SpatialRelationInfoPos-r16 ::=
    servingRS-r16
    servingCellId
    referenceSignal-r16
    ssb-IndexServing-r16
    csi-RS-IndexServing-r16
    srs-SpatialRelation-r16
    resourceSelection-r16
    srs-ResourceId-r16
    srs-PosResourceId-r16
    },
    uplinkBWP-r16
}

},
ssb-Ncell-r16
dl-PRS-r16
}

SSB-Configuration-r16 ::=
    ssb-Freq-r16
    halfFrameIndex-r16
    ssbSubcarrierSpacing-r16

```

SEQUENCE {
SRS-PeriodicityAndOffset-r16,
SRS-PeriodicityAndOffsetExt-r16
ENUMERATED {even0, odd1}
INTEGER (0..65535),
SRS-SpatialRelationInfoPos-r16
TxHoppingConfig-r18

OPTIONAL -- Need R

OPTIONAL --Need R

OPTIONAL, -- Need R

OPTIONAL, --Need R

OPTIONAL, -- Need S

CHOICE {
SEQUENCE {
ServCellIndex
CHOICE {
SSB-Index,
NZP-CSI-RS-ResourceId,
SEQUENCE {
SRS-ResourceId,
BWP-Id

OPTIONAL, -- Need S

CHOICE {
SEQUENCE {
ServCellIndex
CHOICE {
SSB-Index,
NZP-CSI-RS-ResourceId,
SEQUENCE {
CHOICE {
SRS-ResourceId,
SRS-PosResourceId-r16

BWP-Id

SSB-InfoNcell-r16,
DL-PRS-Info-r16

SEQUENCE {
ARFCN-ValueNR,
ENUMERATED {zero, one},
SubcarrierSpacing,

```

    ssb-Periodicity-r16      ENUMERATED { ms5, ms10, ms20, ms40, ms80, ms160, spare2, spare1 } OPTIONAL, -- Need S
    sfn0-Offset-r16          SEQUENCE {
        sfn-Offset-r16      INTEGER (0..1023),
        integerSubframeOffset-r16 INTEGER (0..9)
    }
    sfn-SSB-Offset-r16      INTEGER (0..15),
    ss-PBCH-BlockPower-r16  INTEGER (-60..50)
}
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL -- Cond Pathloss

SSB-InfoNcell-r16 ::=
    physicalCellId-r16
    ssb-IndexNcell-r16
    ssb-Configuration-r16
SEQUENCE {
    PhysCellId,
    SSB-Index
    SSB-Configuration-r16
}
OPTIONAL, -- Need S
OPTIONAL -- Need S

DL-PRS-Info-r16 ::=
    dl-PRS-ID-r16
    dl-PRS-ResourceSetId-r16
    dl-PRS-ResourceId-r16
SEQUENCE {
    INTEGER (0..255),
    INTEGER (0..7),
    INTEGER (0..63)
}
OPTIONAL -- Need S

SRS-ResourceId ::=
SRS-PosResourceId-r16 ::=
INTEGER (0..maxNrofSRS-Resources-1)
INTEGER (0..maxNrofSRS-PosResources-1-r16)

SRS-PeriodicityAndOffset ::=
    sl1
    sl2
    sl4
    sl5
    sl8
    sl10
    sl16
    sl20
    sl32
    sl40
    sl64
    sl80
    sl160
    sl320
    sl640
    sl1280
    sl2560
CHOICE {
    NULL,
    INTEGER(0..1),
    INTEGER(0..3),
    INTEGER(0..4),
    INTEGER(0..7),
    INTEGER(0..9),
    INTEGER(0..15),
    INTEGER(0..19),
    INTEGER(0..31),
    INTEGER(0..39),
    INTEGER(0..63),
    INTEGER(0..79),
    INTEGER(0..159),
    INTEGER(0..319),
    INTEGER(0..639),
    INTEGER(0..1279),
    INTEGER(0..2559)
}

SRS-PeriodicityAndOffset-r16 ::=
    sl1
    sl2
    sl4
    sl5
    sl8
    sl10
    sl16
    sl20
    sl32
CHOICE {
    NULL,
    INTEGER(0..1),
    INTEGER(0..3),
    INTEGER(0..4),
    INTEGER(0..7),
    INTEGER(0..9),
    INTEGER(0..15),
    INTEGER(0..19),
    INTEGER(0..31),

```

```

sl40      INTEGER(0..39),
sl64      INTEGER(0..63),
sl80      INTEGER(0..79),
sl160     INTEGER(0..159),
sl320     INTEGER(0..319),
sl640     INTEGER(0..639),
sl1280    INTEGER(0..1279),
sl2560    INTEGER(0..2559),
sl5120    INTEGER(0..5119),
sl10240   INTEGER(0..10239),
sl40960   INTEGER(0..40959),
sl81920   INTEGER(0..81919),
...
}

SRS-PeriodicityAndOffsetExt-r16 ::= CHOICE {
    sl128      INTEGER(0..127),
    sl256      INTEGER(0..255),
    sl512      INTEGER(0..511),
    sl20480    INTEGER(0..20479)
}

SpatialRelationInfo-PDC-r17 ::= SEQUENCE {
    referenceSignal CHOICE {
        ssb-Index      SSB-Index,
        csi-RS-Index    NZP-CSI-RS-ResourceId,
        dl-PRS-PDC      NR-DL-PRS-ResourceID-r17,
        srs              SEQUENCE {
            resourceId   SRS-ResourceId,
            uplinkBWP    BWP-Id
        },
        ...
    },
    ...
}

TxHoppingConfig-r18 ::= SEQUENCE {
    overlapValue-r18      ENUMERATED {zeroRB, oneRB, twoRB, fourRB},
    numberOfHops-r18      INTEGER(1..6),
    slotOffsetForRemainingHopsList-r18 SEQUENCE (SIZE (1..maxNrofHops-1-r18) ) OF SlotOffsetForRemainingHops-r18,
    ...
}

SlotOffsetForRemainingHops-r18 ::= SEQUENCE {
    slotOffsetRemainingHops-r18 CHOICE {
        aperiodic-r18 SEQUENCE {
            slotOffset-r18      INTEGER (1..32) OPTIONAL, -- Need S
            startPosition-r18    INTEGER (0..13)  OPTIONAL, -- Need R
            ...
        },
        semi-persistent-r18 SEQUENCE {
            periodicityAndOffset-sp-r18      SRS-PeriodicityAndOffset-r16 OPTIONAL, -- Need R
            periodicityAndOffset-sp-Ext-r18  SRS-PeriodicityAndOffsetExt-r16 OPTIONAL, -- Need R
            startPosition-r18                INTEGER (0..13)                OPTIONAL, -- Need R
        }
    }
}

```

```

    },
    periodic-r18
    periodicityAndOffset-p-r18
    periodicityAndOffset-p-Ext-r18
    startPosition-r18
    ...
  },
  ...
}

-- TAG-SRS-CONFIG-STOP
-- ASN1STOP
```

SEQUENCE {
SRS-PeriodicityAndOffset-r16
SRS-PeriodicityAndOffsetExt-r16
INTEGER (0..13)

OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL, -- Need S

SRS-Config field descriptions
dc-TriggeringPosResourceSetLink Indicates whether the single DCI-triggering SRS positioning resource sets across the linked carriers is enabled or not for bandwidth aggregation.
tpc-Accumulation If the field is absent, UE applies TPC commands via accumulation. If disabled, UE applies the TPC command without accumulation (this applies to SRS when a separate closed loop is configured for SRS) (see TS 38.213 [13], clause 7.3).

SRS-Resource, SRS-PosResource field descriptions
cyclicShift-n2 Cyclic shift configuration (see TS 38.214 [19], clause 6.2.1).
cyclicShift-n4 Cyclic shift configuration (see TS 38.214 [19], clause 6.2.1).
cyclicShift-n8 Cyclic shift configuration (see TS 38.214 [19], clause 6.2.1).
combOffsetHopping Configures UE with comb offset hopping. The <i>hoppingId</i> is used to initialize pseudo random comb offset hopping. If UE is configured with both comb offset and cyclic shift hopping, only one <i>hoppingId</i> is configured. The <i>hoppingWithRepetition</i> configures time-domain hopping behavior for repetition factor $R > 1$. The <i>hoppingSubset</i> indicates a set of comb offset by a bit string (see clause 6.4.1.4.3 of TS 38.211 [16]). The i -th bit in the bit string is set to 1 to indicate the $s_{coh}^{SRS}(t) = i - 1$, where t is determined by its ordinary position among the positive bits in bit string, i.e., if the i -th bit is a first positive bit, $t=0$; if the i -th bit is a second positive bit, $t=1$, and so on.
cyclicShiftHopping Configures UE with cyclic shift hopping. The <i>hoppingId</i> is used to initialize pseudo random cyclic shift hopping. If UE is configured with both comb offset and cyclic shift hopping, only one <i>hoppingId</i> is configured. The <i>hoppingFinerGranularity</i> enables finer granular hopping, see TS 38.211 [16], clause 6.4.1.4.2. If <i>hoppingSubset</i> is configured, <i>hoppingFinerGranularity</i> is not configured. The <i>hoppingSubset</i> indicates a set of cyclic shift by a bit string (see clause 6.4.1.4.2 of TS 38.211 [16]). The i -th bit in the bit string is set to 1 to indicate the $s_{ch}^{SRS}(t) = i - 1$, where t is determined by its ordinary position among the positive bits in bit string, i.e., if the i -th bit is a first positive bit, $t=0$; if the i -th bit is a second positive bit, $t=1$, and so on.
enableStartRBHopping When this RRC parameter is configured, start RB location hopping is enabled for partial frequency sounding in different SRS frequency hopping periods for periodic/semi-persistent/aperiodic SRS as described in clause 6.4.1.4 in TS 38.211.
freqHopping Includes parameters capturing SRS frequency hopping (see TS 38.214 [19], clause 6.2.1). For CLI SRS-RSRP measurement, the network always configures this field such that $b\text{-hop} > b\text{-SRS}$. For SRS for positioning configuration in multiple cells, the value of this field applies to all cells in the validity area. <i>c-SRS</i> Indicates the maximum bandwidth per hop. When <i>TxHoppingConfig</i> is configured the valid values for <i>c-SRS</i> are such that the maximum bandwidth is: 104 PRBs, 48 PRBs, 132 PRBs, 64 PRBs, for 15,30,60,120 KHz respectively. The same value for <i>c-SRS</i> is configured for all the hops when <i>TxHoppingConfig</i> is configured.
groupOrSequenceHopping Parameter(s) for configuring group or sequence hopping (see TS 38.211 [16], clause 6.4.1.4.2). For CLI SRS-RSRP measurement, the network always configures this parameter to 'neither'. For SRS for positioning configuration in multiple cells, the value of this field applies to all cells in the validity area.
nrofSRS-Ports Number of ports. For CLI SRS-RSRP measurement, the network always configures this parameter to 'port1'.
nrofSRS-Ports-n8 Number of ports if the number of antenna ports is 8. The value 'ports8' configures UE with 8 antenna ports and the value 'ports8tdm' configures the UE with 8 antenna ports which are partitioned into 2 subsets with each subset having 4 different ports, and the subsets are mapped to different OFDM symbols, see TS 38.211 [16], clause 6.4.1.4.2. If <i>combOffsetHopping-r18</i> or <i>cyclicShiftHopping-r18</i> is configured, this field is not set to <i>ports8tdm</i> . If this field is present UE ignores the field <i>nrofSRS-Ports</i> .
periodicityAndOffset-p, periodicityAndOffset-p-Ext Periodicity and slot offset for this SRS resource. All values are in "number of slots". Value <i>s1</i> corresponds to a periodicity of 1 slot, value <i>s2</i> corresponds to a periodicity of 2 slots, and so on. For each periodicity the corresponding offset is given in number of slots. For periodicity <i>s1</i> the offset is 0 slots (see TS 38.214 [19], clause 6.2.1). For CLI SRS-RSRP measurement, <i>s1280</i> and <i>s12560</i> cannot be configured. For <i>SRS-PosResource</i> , values <i>s120480</i> , <i>s140960</i> and <i>s181920</i> cannot be configured for SCS=15kHz, values <i>s140960</i> and <i>s181920</i> cannot be configured for SCS=30kHz, and value <i>s181920</i> cannot be configured for SCS=60kHz except when periodicity of 20480ms is configured. When <i>periodicityAndOffset-p-Ext</i> is present, <i>periodicityAndOffset-p</i> shall be ignored by the UE.
periodicityAndOffset-sp, periodicityAndOffset-sp-Ext Periodicity and slot offset for this SRS resource. All values are in "number of slots". Value <i>s1</i> corresponds to a periodicity of 1 slot, value <i>s2</i> corresponds to a periodicity of 2 slots, and so on. For each periodicity the corresponding offset is given in number of slots. For periodicity <i>s1</i> the offset is 0 slots (see TS 38.214 [19], clause 6.2.1). For <i>SRS-PosResource</i> , values <i>s120480</i> , <i>s140960</i> and <i>s181920</i> cannot be configured for SCS=15kHz, values <i>s140960</i> and <i>s181920</i> cannot be configured for SCS=30kHz, and value <i>s181920</i> cannot be configured for SCS=60kHz. When <i>periodicityAndOffset-sp-Ext</i> is present, <i>periodicityAndOffset-sp</i> shall be ignored by the UE.

<i>ptrs-PortIndex</i>
The PTRS port index for this SRS resource for non-codebook based UL MIMO. This is only applicable when the corresponding <i>PTRS-UplinkConfig</i> is set to CP-OFDM. The <i>ptrs-PortIndex</i> configured here must be smaller than the <i>maxNrofPorts</i> configured in the <i>PTRS-UplinkConfig</i> (see TS 38.214 [19], clause 6.2.3.1). This parameter is not applicable to CLI SRS-RSRP measurement.
<i>resourceMapping</i>
OFDM symbol location of the SRS resource within a slot including <i>nrofSymbols</i> (number of OFDM symbols), <i>startPosition</i> (value 0 refers to the last symbol, value 1 refers to the second last symbol, and so on) and <i>repetitionFactor</i> (see TS 38.214 [19], clause 6.2.1 and TS 38.211 [16], clause 6.4.1.4). The configured SRS resource does not exceed the slot boundary. If <i>resourceMapping-r16</i> is signalled, UE shall ignore the <i>resourceMapping</i> (without suffix). If <i>resourceMapping-r17</i> is signalled, <i>resourceMapping-r16</i> is not signalled and the UE shall ignore the <i>resourceMapping</i> (without suffix) and only the values of <i>nrofSymbols</i> which are integer multiples of the configured <i>repetitionFactor</i> can be configured. The network can only signal <i>repetitionFactor-v1730</i> if <i>resourceMapping-r17</i> is signalled. When <i>repetitionFactor-v1730</i> is signalled, the UE shall ignore <i>repetitionFactor-r17</i> . For CLI SRS-RSRP measurement, the network always configures <i>nrofSymbols</i> and <i>repetitionFactor</i> to 'n1'. If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, the value of this field applies to all cells in the validity area. <i>nrofSymbols</i> is same for all the hops when <i>TxHoppingConfig</i> is configured.
<i>resourceType</i>
Periodicity and offset for semi-persistent and periodic SRS resource, or slot offset for aperiodic SRS resource for positioning (see TS 38.214 [19], clause 6.2.1). For CLI SRS-RSRP measurement, only 'periodic' is applicable for <i>resourceType</i> . If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, the value of this field applies to all cells in the validity area.
<i>sequenceId</i>
Sequence ID used to initialize pseudo random group and sequence hopping (see TS 38.214 [19], clause 6.2.1). If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, the value of this field applies to all cells in the validity area.
<i>slotOffset</i>
An offset in number of slots between the triggering DCI and the actual transmission of this <i>SRS-PosResource</i> . If the field is absent the UE applies no offset (value 0).
<i>spatialRelationInfo</i>
Configuration of the spatial relation between a reference RS and the target SRS. Reference RS can be SSB/CSI-RS/SRS (see TS 38.214 [19], clause 6.2.1). This parameter is not applicable to CLI SRS-RSRP measurement. This field is not configured if <i>unifiedTCI-StateType</i> is configured for the serving cell.
<i>spatialRelationInfo-PDC</i>
Configuration of the spatial relation between a reference RS and the target SRS. Reference RS can be SSB/CSI-RS/SRS/DL-PRS-PDC (see TS 38.214 [19], clause 6.2.1). The field is present in case of <i>resourceType=periodic</i> and <i>usagePDC-r17=true</i> in the <i>SRS-ResourceSet</i> , otherwise the field is absent.
<i>spatialRelationInfoPos</i>
Configuration of the spatial relation between a reference RS and the target SRS. Reference RS can be SSB/CSI-RS/SRS/DL-PRS (see TS 38.214 [19], clause 6.2.1). If the IE <i>srs-ResourceId-Ext</i> is present, the IE <i>srs-ResourceId</i> in <i>spatialRelationInfoPos</i> represents the index from 0 to 63. Otherwise the IE <i>srs-ResourceId</i> in <i>spatialRelationInfoPos</i> represents the index from 0 to 31. If the SRS for positioning is configured for RRC_INACTIVE state, the <i>srs-ResourceId</i> and <i>csi-RS-IndexServing</i> are not included in this field.
<i>srs-PosPeriodicConfigHyperSFN-Index</i>
Indicates even or odd hyper SFN in which the SRS for positioning is transmitted for the periodicity value of 20480m. If this field is not configured, the UE assumes that SRS for positioning periodicity longer than one Hyper SFN is not configured.
<i>srs-RequestDCI-0-2</i>
Indicate the number of bits for "SRS request" in DCI format 0_2. When the field is absent, then the value of 0 bit for "SRS request" in DCI format 0_2 is applied. If the parameter <i>srs-RequestDCI-0-2</i> is configured to value 1, 1 bit is used to indicate one of the first two rows of Table 7.3.1.1.2-24 in TS 38.212 [17] for triggered aperiodic SRS resource set. If the value 2 is configured, 2 bits are used to indicate one of the rows of Table 7.3.1.1.2-24 in TS 38.212 [17]. When UE is configured with <i>supplementaryUplink</i> , an extra bit (the first bit of the SRS request field) is used for the non-SUL/SUL indication.
<i>srs-RequestDCI-1-2</i>
Indicate the number of bits for "SRS request" in DCI format 1_2. When the field is absent, then the value of 0 bit for "SRS request" in DCI format 1_2 is applied. When the UE is configured with <i>supplementaryUplink</i> , an extra bit (the first bit of the SRS request field) is used for the non-SUL/SUL indication (see TS 38.214 [19], clause 6.1.1.2).
<i>srs-ResourceSetToAddModListDCI-0-2</i>
List of SRS resource set to be added or modified for DCI format 0_2 (see TS 38.212 [17], clause 7.3.1).

srs-ResourceSetToReleaseListDCI-0-2 List of SRS resource set to be released for DCI format 0_2 (see TS 38.212 [17], clause 7.3.1).
srs-TCI-State Configuration of either a UL TCI state or a joint TCI state for the SRS resource. In case of <i>UL TCI-State</i> , refers to the TCI state defined in <i>ul-TCI-StateList</i> in the <i>BWP-UplinkDedicated</i> where the <i>SRS-Config</i> is configured. In case of joint TCI state, refers to a TCI state defined in <i>dl-OrJointTCI-StateList</i> in <i>pdsch-Config</i> of the <i>BWP-DownlinkDedicated</i> and serving cell indicated by <i>cellAndBWP</i> . This field is absent when the SRS resource is in an <i>SRS-ResourceSet</i> configured with <i>followUnifiedTCI-StateSRS-r17</i> or <i>applyIndicatedTCI-State</i> , or when the field <i>unifiedTCI-StateType</i> is not configured to the serving cell which the SRS resource is located in.
startRBIndexAndFreqScalingFactor Configures the UE with the <i>startRBIndex</i> and <i>freqScalingFactor</i> for partial frequency sounding as described in Clause 6.4.1.4 in TS 38.211. The <i>startRBIndexForFScaling2</i> gives the <i>startRBIndex</i> when <i>freqScalingFactor</i> is 2 and the <i>startRBIndexForFScaling4</i> gives the <i>startRBIndex</i> when <i>FreqScalingFactor</i> is 4
transmissionComb, transmissionComb-n2, transmissionComb-n4, transmissionComb-n8 Comb value (2 or 4 or 8) and comb offset (0..combValue-1) (see TS 38.214 [19], clause 6.2.1). If network configures field <i>transmissionComb-n8</i> , the UE ignores <i>transmissionComb</i> . If <i>srs-PosRRC-InactiveValidityAreaPreConfig</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, the value of this field applies to all cells in the validity area.

<i>SRS-ResourceSet, SRS-PosResourceSet</i> field descriptions
<i>alpha</i> alpha value for SRS power control (see TS 38.213 [13], clause 7.3). When the field is absent the UE applies the value 1. If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, the value of this field applies to all cells in the validity area.
<i>aperiodicSRS-ResourceTriggerList</i> An additional list of DCI "code points" upon which the UE shall transmit SRS according to this SRS resource set configuration (see TS 38.214 [19], clause 6). When the field is not included during a reconfiguration of <i>SRS-ResourceSet</i> of <i>resourceType</i> set to <i>aperiodic</i> , UE maintains this value based on the Need M; that is, this list is not considered as an extension of <i>aperiodicSRS-ResourceTrigger</i> for purpose of applying the general rule for extended list in clause 6.1.3.
<i>aperiodicSRS-ResourceTrigger</i> The DCI "code point" upon which the UE shall transmit SRS according to this SRS resource set configuration (see TS 38.214 [19], clause 6).
<i>applyIndicatedTCI-State</i> This field indicates, for an SRS-ResourceSet, if UE applies the first or the second "indicated" UL only TCI or joint TCI as specified in TS 38.214 [19], clause 6.2.1.
<i>associatedCSI-RS</i> ID of CSI-RS resource associated with this SRS resource set in non-codebook based operation (see TS 38.214 [19], clause 6.1.1.2).
<i>availableSlotOffsetList</i> Indicates a list of up to four different available slot offset values from slot $n+k$ to the slot where the aperiodic SRS resource set is transmitted, where slot n is the slot with the triggering DCI, and k is the <i>slotOffset</i> (without suffix) as described in clause 6.2.1 of TS 38.214 [19].
<i>csi-RS</i> ID of CSI-RS resource associated with this SRS resource set (see TS 38.214 [19], clause 6.1.1.2).
<i>dl-PRS</i> This field indicates a PRS configuration.
<i>followUnifiedTCI-StateSRS</i> When set to enabled, for SRS resource Set, the UE applies the "indicated" UL only TCI or joint TCI as specified in TS 38.214 [19], clause 5.1.5. This parameter may be configured for aperiodic SRS for BM or SRS of any time-domain behavior for codebook, non-codebook, and antenna switching.
<i>p0</i> P0 value for SRS power control. The value is in dBm. Only even values (step size 2) are allowed (see TS 38.213 [13], clause 7.3). If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, the value of this field applies to all cells in the validity area.
<i>pathlossReferenceRS</i> A reference signal (e.g. a CSI-RS config or a SS block) to be used for SRS path loss estimation (see TS 38.213 [13], clause 7.3).
<i>pathlossReferenceRS-Pos</i> A reference signal (e.g. a SS block or a DL-PRS config) to be used for SRS path loss estimation (see TS 38.213 [13], clause 7.3).
<i>pathlossReferenceRSList</i> Multiple candidate pathloss reference RS(s) for SRS power control, where one candidate RS can be mapped to SRS Resource Set via MAC CE (clause 6.1.3.27 in TS 38.321 [3]). The network can only configure this field if <i>pathlossReferenceRS</i> is not configured in the same <i>SRS-ResourceSet</i> .
<i>resourceType</i> Time domain behavior of SRS resource configuration, see TS 38.214 [19], clause 6.2.1. The network configures SRS resources in the same resource set with the same time domain behavior on periodic, aperiodic and semi-persistent SRS. The aperiodic SRS is not applicable for the UE in RRC_INACTIVE. If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, the value of this field applies to all cells in the validity area.
<i>slotOffset</i> An offset in number of slots between the triggering DCI and the actual transmission of this <i>SRS-ResourceSet</i> . If the field is absent the UE applies no offset (value 0).
<i>srs-PowerControlAdjustmentStates</i> Indicates whether $hsrs,c(i) = fc(i,1)$ or $hsrs,c(i) = fc(i,2)$ (if twoPUSCH-PC-AdjustmentStates are configured) or separate close loop is configured for SRS. This parameter is applicable only for Uls on which UE also transmits PUSCH. If absent or release, the UE applies the value sameAs-Fci1 (see TS 38.213 [13], clause 7.3).

<i>srs-ResourceIdList, srs-PosResourceIdList</i>
The IDs of the SRS-Resources/SRS-PosResource used in this <i>SRS-ResourceSet</i> / <i>SRS-PosResourceSet</i> . If this <i>SRS-ResourceSet</i> is configured with usage set to codebook, the <i>srs-ResourceIdList</i> contains at most 2 entries. If this <i>SRS-ResourceSet</i> is configured with usage set to <i>nonCodebook</i> , the <i>srs-ResourceIdList</i> contains at most 4 entries. If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, <i>srs-PosResourceIdList</i> is commonly configured across cells within the validity area.
<i>srs-ResourceSetId, srs-PosResourceSetId</i>
The ID of this resource set. It is unique in the context of the BWP in which the parent <i>SRS-Config</i> is defined. If <i>srs-PosRRC-InactiveValidityAreaPreConfigList</i> or <i>srs-PosRRC-InactiveValidityAreaNonPreConfig</i> is configured, <i>srs-PosResourceSetId</i> is commonly configured across cells within the validity area.
<i>ssb-IndexServing</i>
Indicates SSB index belonging to a serving cell where the SRS is configured.
<i>ssb-Ncell</i>
This field indicates a SSB configuration from neighboring cell.
<i>usage</i>
Indicates if the SRS resource set is used for beam management, codebook based or non-codebook based transmission or antenna switching. See TS 38.214 [19], clause 6.2.1. Reconfiguration between codebook based and non-codebook based transmission is not supported.
<i>usagePDC</i>
If configured, it indicates that this SRS resource set is used for propagation delay compensation. The field can be present in only one <i>SRS-ResourceSet</i> .

<i>SRS-SpatialRelationInfoPos</i> field descriptions
<i>csi-RS-IndexServing</i>
Indicates CSI-RS index belonging to a serving cell.
<i>dl-PRS</i>
This field indicates a PRS configuration.
<i>resourceSelection</i>
Indicates whether the configured SRS spatial relation resource is a <i>SRS-Resource</i> or <i>SRS-PosResource</i> .
<i>servingCellId</i>
The serving Cell ID of the source SSB, CSI-RS, or SRS for the spatial relation of the target SRS resource. If this field is absent the SSB, the CSI-RS, or the SRS is from the same serving cell where the SRS is configured.
<i>ssb-IndexServing</i>
Indicates SSB index belonging to a serving cell.
<i>ssb-Ncell</i>
This field indicates a SSB configuration from neighboring cell.

<i>SSB-InfoNCell</i> field descriptions
<i>physicalCellId</i>
This field specifies the physical cell ID of the neighbour cell or NCD-SSB of the serving cell for which SSB configuration is provided.
<i>ssb-IndexNcell</i>
This field specifies the index of the SSB for a neighbour cell or NCD-SSB of the serving cell. See TS 38.213 [13]. If this field is absent, the UE determines the <i>ssb-IndexNcell</i> of the <i>physicalCellId</i> based on its SSB measurement from the cell.
<i>ssb-Configuration</i>
This field specifies the full configuration of the SSB. If this field is absent, the UE obtains the configuration for the SSB from <i>nr-SSB-Config</i> received as part of DL-PRS assistance data in LPP, see TS 37.355 [49], by looking up the corresponding SSB configuration using the field <i>physicalCellId</i> .

DL-PRS-Info field descriptions
dl-PRS-ID This field specifies the UE specific TRP ID (see TS 37.355 [49]) for which PRS configuration is provided.
dl-PRS-ResourceSetId This field specifies the PRS-ResourceSet ID of a PRS resourceSet.
dl-PRS-ResourceId This field specifies the PRS-Resource ID of a PRS resource. If this field is absent, the UE determines the <i>dl-PRS-ResourceID</i> based on its PRS measurement from the TRP (see TS 37.355 [49]) and DL-PRS Resource Set.

SSB-Configuration field descriptions
halfFrameIndex Indicates whether SSB is in the first half or the second half of the frame. Value zero indicates the first half and value 1 indicates the second half.
integerSubframeOffset Indicates the subframe boundary offset of the cell in which SSB is transmitted.
sfn0-Offset Indicates the time offset of the SFN0 slot 0 for the cell with respect to SFN0 slot 0 of serving cell.
sfn-Offset Specifies the SFN offset between the cell in which SSB is transmitted and serving cell. The offset corresponds to the number of full radio frames counted from the beginning of a radio frame #0 of serving cell to the beginning of the closest subsequent radio frame #0 of the cell in which SSB is transmitted.
sfn-SSB-Offset Indicates the SFN offset of the transmitted SSB relative to the start of the SSB period. Value 0 indicates that the SSB is transmitted in the first system frame, value 1 indicates that SSB is transmitted in the second system frame and so on. The network configures this field according to the field <i>ssb-Periodicity</i> such that the indicated system frame does not exceed the configured SSB periodicity.
ssb-Freq Indicates the frequency of the SSB.
ss-PBCH-BlockPower Average EPRE of the resources elements that carry secondary synchronization signals in dBm that the NW used for SSB transmission, see TS 38.213 [13], clause 7.
ssb-Periodicity Indicates the periodicity of the SSB. If the field is absent, the UE applies the value ms5. (see TS 38.213 [13], clause 4.1)
ssbSubcarrierSpacing Subcarrier spacing of SSB. Only the following values are applicable depending on the used frequency: FR1: 15 or 30 kHz FR2-1/FR2-NTN: 120 or 240 kHz FR2-2: 120, 480, or 960 kHz

<i>TxHoppingConfig</i> field descriptions
<i>numberOfHops</i> This field specifies the number of hops. Value 1 indicates one hop, value 2 indicates two hops and so on.
<i>overlapValue</i> This field specifies the overlap during SRS transmission in terms of number of <i>resource blocks</i> . Value <i>zeroRB</i> implies 0 RB, value <i>oneRB</i> corresponds to 1 RB, value <i>twoRB</i> corresponds to 2 RBs and so on. The same value for the <i>overlapValue</i> is configured to all the hops.
<i>slotOffsetForRemainingHopsList</i> This field specifies the starting slot offset and starting symbol for the SRS resource with tx hopping for different resource types (aperiodic, semi-persistent or periodic SRS transmission). Each hop is configured with the same periodicity.

Conditional Presence	Explanation
<i>DLorJointTCI-SRS</i>	The field is mandatory present if srs-DLorJointTCI-State is configured, otherwise it is absent Need R.
<i>FollowUTCI</i>	The field is optionally present, Need R, if the field <i>followUnifiedTCI-StateSRS</i> is present. Otherwise, it is absent.
<i>NonCodebook</i>	This field is optionally present, Need M, in case of non-codebook based transmission, otherwise the field is absent.
<i>Pathloss</i>	The field is mandatory present if the IE <i>SSB-InfoNcell</i> is included in <i>pathlossReferenceRS-Pos</i> ; otherwise it is optionally present, Need R
<i>Setup</i>	This field is mandatory present upon configuration of SRS-ResourceSet or SRS-Resource and optionally present, Need M, otherwise.

– SRS-PosTx-Hopping

The IE *SRS-PosTx-Hopping* specifies the uplink Tx frequency hopping configuration for SRS for positioning transmission.

SRS-PosTx-Hopping information element

```
-- ASN1START
-- TAG-SRS-PosTx-Hopping-START
```

```
SRS-PosTx-Hopping-r18 ::=
    srs-PosConfig-r18
    bwp-r18
    inactivePosSRS-TimeAlignmentTimer-r18
    inactivePosSRS-RSRP-ChangeThreshold-r18
    srs-PosUplinkTransmissionWindowConfig-r18
    ...
}

SEQUENCE {
    SRS-PosConfig-r17,
    BWP
    TimeAlignmentTimer
    RSRP-ChangeThreshold-r17
    SetupRelease { SRS-PosUplinkTransmissionWindowConfig-r18 }
    ...
}

SRS-PosUplinkTransmissionWindowConfig-r18 ::= SEQUENCE {
    dummy INTEGER(0..1023),
    windowPeriodicityAndOffset-r18 CHOICE {
        periodicityAndOffset-r18 SRS-PeriodicityAndOffset-r16,
        periodicityAndOffsetExt-r18 SRS-PeriodicityAndOffsetExt-r16
    },
    duration-r18 ENUMERATED {sl1, sl2, sl4, sl6},
    ...
}
```

-- TAG-SRS-PosTx-Hopping-STOP
-- ASN1STOP

SRS-PosTx-Hopping field descriptions
bwp For RRC_CONNECTED state, it indicates the frequency region outside of active BWP for SRS for positioning frequency hopping. For RRC_INACTIVE state, it indicates the BWP configuration for SRS for positioning frequency hopping.
inactivePosSRS-RSRP-ChangeThreshold RSRP threshold for the increase/decrease of RSRP for time alignment validation as specified in TS 38.321 [3].
inactivePosSRS-TimeAlignmentTimer TAT value for SRS for positioning transmission during RRC_INACTIVE state as specified in TS 38.321 [3]. The network always configures this field when <i>srs-PosRRC-Inactive</i> is configured.
srs-PosConfig Provides the SRS configuration to be used for frequency hopping.
srs-PosUplinkTransmissionWindowConfig Used to setup and release the configuration of the periodic uplink transmission window for SRS for positioning with Tx frequency hopping in RRC_CONNECTED state.

SRS-PosUplinkTransmissionWindowConfig field descriptions
dummy This field is not used in the specification and the UE ignores the received value.
duration Indicates the duration of the uplink transmission window for SRS for positioning with Tx frequency hopping. Value <i>s/1</i> indicates 1 slot, <i>s/2</i> indicates 2 slots and so on.
periodicityAndOffset, periodicityAndOffsetExt Indicates the periodicity and slot offset with respect to SFN#0 slot#0 for uplink transmission window for SRS for positioning with Tx frequency hopping. The UL transmission window starts in the first symbol of the slot for which the following condition is satisfied: CURRENT_slot modulo (periodicity) = slot offset where CURRENT_slot = current SFN × number of slots per frame + slot number in the frame, and number of slots per frame refers to the number of consecutive slots per frame as specified in TS 38.211[16].

—
SRS-PosResourceSetLinkedForAggBW

The IE *SRS-PosResourceSetLinkedForAggBW* provides the SRS Positioning Resource Sets that are linked for bandwidth aggregation across two or three component carriers.

SRS-PosResourceSetLinkedForAggBW information element

-- ASN1START
-- TAG-SRS-POSRESOURCESETLINKEDFORAGGBW-START

SRS-PosResourceSetLinkedForAggBW-r18 ::= SEQUENCE {
srs-PosResourceSetLinked-r18 SRS-PosResourceSetId-r16,
srs-LinkedConfig-r18 CHOICE {
rrc-connectedState-r18 SEQUENCE {

```

    servingCellAndBWP-Id-r18      ServingCellAndBWP-Id-r17,
    ...
  },
  rrc-inactiveState-r18          SEQUENCE {
    scs-SpecificCarrier-r18      SCS-SpecificCarrier,
    freqInfo-r18                 ARFCN-ValueNR,
    ...
  }
},
...
}

-- TAG-SRS-POSRESOURCESETLINKEDFORAGGBW-STOP
-- ASN1STOP
```

SRS-PosResourceSetLinkedForAggBW field descriptions
freqInfo Indicates the SRS Positioning Resource set carrier frequency that is linked for bandwidth aggregation.
scs-SpecificCarrier A set of UE specific channel bandwidth and location configurations for different subcarrier spacings (numerologies). Defined in relation to Point A and to be used for SRS for positioning bandwidth aggregation.
servingCellAndBWP-Id Provides the serving cell and BWP config for SRS for positioning transmission using aggregated bandwidth in RRC_CONNECTED state.
srs-LinkedConfig Provides the linked bandwidth aggregation configuration for RRC_CONNECTED or RRC_INACTIVE state for the SRS for positioning transmission.
srs-PosResourceSetLinked Indicates the SRS Positioning Resource set that is linked for bandwidth aggregation.

— SRS-RSRP-Range

The IE *SRS-RSRP-Range* specifies the value range used in SRS-RSRP measurements and thresholds. The integer value for SRS-RSRP measurements is according to Table 10.1.22.1.2-1 in TS 38.133 [14]. For thresholds, the actual value is (IE value –140) dBm, except for the IE value 98, in which case the actual value is infinity.

SRS-RSRP-Range information element

```

-- ASN1START
-- TAG-SRS-RSRP-RANGE-START

SRS-RSRP-Range-r16 ::=          INTEGER(0..98)

-- TAG-SRS-RSRP-RANGE-STOP
-- ASN1STOP
```

— *SRS-TPC-CommandConfig*

The IE *SRS-TPC-CommandConfig* is used to configure the UE for extracting TPC commands for SRS from a group-TPC messages on DCI.

***SRS-TPC-CommandConfig* information element**

```
-- ASN1START
-- TAG-SRS-TPC-COMMANDCONFIG-START

SRS-TPC-CommandConfig ::=
    startingBitOfFormat2-3          SEQUENCE {
        INTEGER (1..31)              OPTIONAL, -- Need R
        fieldTypeFormat2-3          OPTIONAL, -- Need R
        ...
        [[
            startingBitOfFormat2-3SUL  INTEGER (1..31)              OPTIONAL -- Need R
        ]]
    }

-- TAG-SRS-TPC-COMMANDCONFIG-STOP
-- ASN1STOP
```

<i>SRS-TPC-CommandConfig</i> field descriptions
<i>fieldTypeFormat2-3</i> The type of a field within the group DCI with SRS request fields (optional), which indicates how many bits in the field are for SRS request (0 or 2). Note that for Type A, there is a common SRS request field for all SCells in the set, but each SCell has its own TPC command bits. See TS 38.212 [17] clause 7.3.1 and , TS 38.213 [13], clause 11.4.
<i>startingBitOfFormat2-3</i> The starting bit position of a block within the group DCI with SRS request fields (optional) and TPC commands. The value 1 of the field corresponds to the first/left most bit of format2-3. The value 2 of the field corresponds to the second bit format2-3, and so on (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 11.4).
<i>startingBitOfFormat2-3SUL</i> The starting bit position of a block within the group DCI with SRS request fields (optional) and TPC commands for SUL carrier (see TS 38.212 [17], clause 7.3.1 and TS 38.213 [13], clause 11.4).

— *SSB-Index*

The IE *SSB-Index* identifies an SS-Block within an SS-Burst. See TS 38.213 [13], clause 4.1.

***SSB-Index* information element**

```
-- ASN1START
-- TAG-SSB-INDEX-START

SSB-Index ::=
    INTEGER (0..maxNrofSSBs-1)

-- TAG-SSB-INDEX-STOP
-- ASN1STOP
```

– SSB-MTC

The IE *SSB-MTC* is used to configure measurement timing configurations, i.e., timing occasions at which the UE measures SSBs.

SSB-MTC information element

```
-- ASN1START
-- TAG-SSB-MTC-START

SSB-MTC ::=
    periodicityAndOffset
        sf5
        sf10
        sf20
        sf40
        sf80
        sf160
    },
    duration
}

SSB-MTC2 ::=
    pci-List
    periodicity
}

SSB-MTC2-LP-r16 ::=
    pci-List
    periodicity
}

SSB-MTC3-r16 ::=
    periodicityAndOffset-r16
        sf5-r16
        sf10-r16
        sf20-r16
        sf40-r16
        sf80-r16
        sf160-r16
        sf320-r16
        sf640-r16
        sf1280-r16
    },
    duration-r16
    pci-List-r16
    ssb-ToMeasure-r16
}

SSB-MTC4-r17 ::=
    pci-List-r17
```

```
SEQUENCE {
    CHOICE {
        INTEGER (0..4),
        INTEGER (0..9),
        INTEGER (0..19),
        INTEGER (0..39),
        INTEGER (0..79),
        INTEGER (0..159)
    }
    ENUMERATED { sf1, sf2, sf3, sf4, sf5 }
}

SEQUENCE {
    SEQUENCE (SIZE (1..maxNrofPCIsPerSMTc)) OF PhysCellId
    ENUMERATED {sf5, sf10, sf20, sf40, sf80, spare3, spare2, spare1}
}

OPTIONAL, -- Need M

SEQUENCE {
    SEQUENCE (SIZE (1..maxNrofPCIsPerSMTc)) OF PhysCellId
    ENUMERATED {sf10, sf20, sf40, sf80, sf160, spare3, spare2, spare1}
}

OPTIONAL, -- Need R

SEQUENCE {
    CHOICE {
        INTEGER (0..4),
        INTEGER (0..9),
        INTEGER (0..19),
        INTEGER (0..39),
        INTEGER (0..79),
        INTEGER (0..159),
        INTEGER (0..319),
        INTEGER (0..639),
        INTEGER (0..1279)
    }
    ENUMERATED {sf1, sf2, sf3, sf4, sf5},
    SEQUENCE (SIZE (1..maxNrofPCIsPerSMTc)) OF PhysCellId
    SetupRelease { SSB-ToMeasure }
}

OPTIONAL, -- Need M
OPTIONAL, -- Need M

SEQUENCE {
    SEQUENCE (SIZE (1..maxNrofPCIsPerSMTc)) OF PhysCellId
}

OPTIONAL, -- Need M
```

```
offset-r17                INTEGER (0..159)
}

SSB-MTC-AdditionalPCI-r17 ::= SEQUENCE {
    additionalPCIIndex-r17  AdditionalPCIIndex-r17,
    additionalPCI-r17       PhysCellId,
    periodicity-r17         ENUMERATED { ms5, ms10, ms20, ms40, ms80, ms160, spare2, spare1 },
    ssb-PositionsInBurst-r17 CHOICE {
        shortBitmap        BIT STRING (SIZE (4)),
        mediumBitmap        BIT STRING (SIZE (8)),
        longBitmap          BIT STRING (SIZE (64))
    },
    ss-PBCH-BlockPower-r17  INTEGER (-60..50)
}

-- TAG-SSB-MTC-STOP
-- ASN1STOP
```

SSB-MTC field descriptions
duration Duration of the measurement window in which to receive SS/PBCH blocks. It is given in number of subframes (see TS 38.213 [13], clause 4.1).
periodicityAndOffset Periodicity and offset of the measurement window in which to receive SS/PBCH blocks, see 5.5.2.10. Periodicity and offset are given in number of subframes.

SSB-MTC2 field descriptions
pci-List PCIs that follow this SMTC.

SSB-MTC3 field descriptions
duration Duration of the measurement window in which to receive SS/PBCH blocks. It is given in number of subframes (see TS 38.213 [13], clause 4.1).
pci-List PCIs that follow this SMTC, used for IAB-node discovery.
periodicityAndOffset Periodicity and offset of the measurement window in which to receive SS/PBCH blocks, see 5.5.2.10. Periodicity and offset are given in number of subframes.
ssb-ToMeasure The set of SS blocks to be measured within the SMTC measurement duration. The first/leftmost bit corresponds to SS block index 0, the second bit corresponds to SS block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS block is not to be measured while value 1 indicates that the corresponding SS block is to be measured (see TS 38.215 [9]). When the field is not configured the IAB-MT measures on all SS blocks. Regardless of the value of this field, SS blocks outside of the applicable <i>smtc</i> are not to be measured. See TS 38.215 [9] clause 5.1.1.

SSB-MTC4 field descriptions
pci-List PCIs that follow this SMTc.
offset Offset of the measurement window in which to receive SS/PBCH blocks, see 5.5.2.10. Offset is given in number of subframes.

SSB-MTC-AdditionalPCI field descriptions
additionalPCI PCI of the additional SSB different from serving cell PCI.
periodicity Periodicity of the SS/PBCH blocks, see 5.5.2.10. Periodicity is given in number of subframes.
ssb-PositionsInBurst Indicates the time domain positions of the transmitted SS-blocks in a half frame with SS/PBCH blocks as defined in TS 38.213 [13], clause 4.1. The first/leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not transmitted while value 1 indicates that the corresponding SS/PBCH block is transmitted.
ss-PBCH-BlockPower Average EPRE of the resources elements that carry secondary synchronization signals in dBm that the NW used for SSB transmission, see TS 38.213 [13], clause 7.

– SSB-PositionQCL-Relation

The IE *SSB-PositionQCL-Relation* is used to indicate the QCL relationship between SSB positions on the frequency indicated by *ssbFrequency* (see TS 38.213 [13], clause 4.1) for operation with shared spectrum channel access. Value n1 corresponds to 1, value n2 corresponds to 2 and so on.

SSB-PositionQCL-Relation information element

```
-- ASN1START
-- TAG-SSB-POSITIONQCL-RELATION-START

SSB-PositionQCL-Relation-r16 ::= ENUMERATED {n1,n2,n4,n8}

SSB-PositionQCL-Relation-r17 ::= ENUMERATED {n32, n64}

-- TAG-SSB-POSITIONQCL-RELATION-STOP
-- ASN1STOP
```

– SSB-ToMeasure

The IE *SSB-ToMeasure* is used to configure a pattern of SSBs. For operation with shared spectrum channel access in FR1, only *mediumBitmap* is used, and for FR2-2, *longBitmap* is used.

SSB-ToMeasure information element

```
-- ASN1START
```

```
-- TAG-SSB-TOMEASURE-START
```

```
SSB-ToMeasure ::= CHOICE {
    shortBitmap      BIT STRING (SIZE (4)),
    mediumBitmap     BIT STRING (SIZE (8)),
    longBitmap       BIT STRING (SIZE (64))
}
```

```
-- TAG-SSB-TOMEASURE-STOP
-- ASN1STOP
```

<i>SSB-ToMeasure</i> field descriptions
longBitmap Bitmap when maximum number of SS/PBCH blocks per half frame equals to 64 as defined in TS 38.213 [13], clause 4.1. For operation with shared spectrum channel access in FR2-2, if the k-th bit is set to 1, the UE assumes that one or more SS/PBCH blocks within the SMTC measurement duration with candidate SS/PBCH block indexes corresponding to SS/PBCH block index equal to (k- 1) may be transmitted; if the k-th bit is set to 0, the UE assumes that the corresponding SS/PBCH block(s) are not transmitted.
mediumBitmap Bitmap when maximum number of SS/PBCH blocks per half frame equals to 8 as defined in TS 38.213 [13], clause 4.1. For operation with shared spectrum channel access, if the k-th bit is set to 1, the UE assumes that one or more SS/PBCH blocks within the SMTC measurement duration with candidate SS/PBCH block indexes corresponding to SS/PBCH block index equal to k – 1 may be transmitted; if the kt-th bit is set to 0, the UE assumes that the corresponding SS/PBCH block(s) are not transmitted. The k-th bit is set to 0, where $k > \text{ssb-PositionQCL-Common}$ and the number of actually transmitted SS/PBCH blocks is not larger than the number of 1's in the bitmap. If <i>ssb-PositionQCL</i> is configured with a value smaller than <i>ssb-PositionQCL-Common</i>, only the leftmost K bits ($K = \text{ssb-PositionQCL}$) are applicable for the corresponding cell.
shortBitmap Bitmap when maximum number of SS/PBCH blocks per half frame equals to 4 as defined in TS 38.213 [13], clause 4.1.

– *SS-RSSI-Measurement*

The IE *SS-RSSI-Measurement* is used to configure RSSI measurements based on synchronization reference signals.

SS-RSSI-Measurement information element

```
-- ASN1START
-- TAG-SS-RSSI-MEASUREMENT-START
```

```
SS-RSSI-Measurement ::= SEQUENCE {
    measurementsSlots BIT STRING (SIZE (1..80)),
    endSymbol         INTEGER(0..3)
}
```

```
-- TAG-SS-RSSI-MEASUREMENT-STOP
-- ASN1STOP
```

SS-RSSI-Measurement field descriptions
endSymbol Within a slot that is configured for RSSI measurements (see <i>measurementSlots</i>) the UE measures the RSSI from symbol 0 to symbol <i>endSymbol</i> . This field identifies the entry in Table 5.1.3-1 in TS 38.215 [9], which determines the actual end symbol.
measurementSlots Indicates the slots in which the UE can perform RSSI measurements. The length of the BIT STRING is equal to the number of slots in the configured SMTC window (determined by the duration and by the subcarrierSpacing). The first (left-most / most significant) bit in the bitmap corresponds to the first slot in the SMTC window, the second bit in the bitmap corresponds to the second slot in the SMTC window, and so on. The UE measures in slots for which the corresponding bit in the bitmap is set to 1. In case this field is configured for a SCell with <i>ca-SlotOffset-r16</i> , the bits in the bitmap corresponds to the slots that are fully contained in the SMTC window.

— SubcarrierSpacing

The IE *SubcarrierSpacing* determines the subcarrier spacing. Restrictions applicable for certain frequencies, channels or signals are clarified in the fields that use this IE.

SubcarrierSpacing information element

```
-- ASN1START
-- TAG-SUBCARRIERSPACING-START

SubcarrierSpacing ::=
    ENUMERATED {kHz15, kHz30, kHz60, kHz120, kHz240, kHz480-v1700, kHz960-v1700, spare1}

-- TAG-SUBCARRIERSPACING-STOP
-- ASN1STOP
```

— TAG-Config

The IE *TAG-Config* is used to configure parameters for a time-alignment group.

TAG-Config information element

```
-- ASN1START
-- TAG-TAG-CONFIG-START

TAG-Config ::=
    SEQUENCE {
        tag-ToReleaseList
            SEQUENCE (SIZE (1..maxNrofTAGs)) OF TAG-Id
            OPTIONAL, -- Need N
        tag-ToAddModList
            SEQUENCE (SIZE (1..maxNrofTAGs)) OF TAG
            OPTIONAL -- Need N
    }

TAG ::=
    SEQUENCE {
        tag-Id,
        timeAlignmentTimer,
        ...
    }

TAG-Id ::=
    INTEGER (0..maxNrofTAGs-1)
```

-- TAG-TAG-CONFIG-STOP
-- ASN1STOP

TAG field descriptions
tag-Id Indicates the TAG of the SpCell or an SCell, see TS 38.321 [3]. Uniquely identifies the TAG within the scope of a Cell Group (i.e. MCG or SCG).
timeAlignmentTimer The <i>timeAlignmentTimer</i> for TAG with ID <i>tag-Id</i> , as specified in TS 38.321 [3].

– TAR-Config

The IE *TAR-Config* is used to configure Timing Advance reporting in non-terrestrial networks and ATG network.

TAR-Config information element

```
-- ASN1START
-- TAG-TAR-CONFIG-START

TAR-Config-r17 ::=
    offsetThresholdTA-r17
    timingAdvancesSR-r17
    ...
}
TAR-Config-r18 ::=
    offsetThresholdTA-r18
    timingAdvancesSR-r18
    ...
}

-- TAG-TAR-CONFIG-STOP
-- ASN1STOP
```

SEQUENCE {
ENUMERATED {ms0dot5, ms1, ms2, ms3, ms4, ms5, ms6 ,ms7, ms8, ms9, ms10, ms11, ms12, ms13, ms14, ms15, spare13, spare12, spare11, spare10, spare9, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1} OPTIONAL, -- Need R
ENUMERATED {enabled} OPTIONAL, -- Need R

SEQUENCE {
INTEGER (1..56) OPTIONAL, -- Need R
ENUMERATED {enabled} OPTIONAL, -- Need R

TAR-Config field descriptions
offsetThresholdTA Offset for TA reporting as specified in TS 38.321 [3]. Network only configures this parameter for MCG. For <i>offsetThresholdTA-r17</i> , value <i>ms0dot5</i> corresponds to 0.5 ms, value <i>ms1</i> corresponds to 1 ms, and so on. Network only configures <i>offsetThresholdTA-r18</i> for ATG, which is in unit of symbols based on the subcarrier spacing of the BWP indicated by <i>firstActiveDownlinkBWP-Id</i> if received in the same RRC message, otherwise, it is based on the subcarrier spacing of the active DL BWP of the PCell when <i>offsetThresholdTA-r18</i> is received. Once configured, the value of TA offset threshold does not change autonomously by the UE with BWP switching.
timingAdvanceSR Used to configure whether a Timing Advance report may trigger a Scheduling Request as specified in TS 38.321 [3].

– *TCI-ActivatedConfig*

The IE *TCI-ActivatedConfig* is used to provide activated TCI states for PDSCH and/or PDCCH of the PSCell or of an SCell.

***TCI-ActivatedConfig* information element**

```
-- ASN1START
-- TAG-TCI-ACTIVATEDCONFIG-START

TCI-ActivatedConfig-r17 ::= SEQUENCE {
    pdcch-TCI-r17          SEQUENCE (SIZE (1..5)) OF TCI-StateId,
    pdsch-TCI-r17          BIT STRING (SIZE (1..maxNrofTCI-States))
}

-- TAG-TCI-ACTIVATEDCONFIG-STOP
-- ASN1STOP
```

<i>TCI-ActivatedConfig</i> field descriptions
<i>pdcch-TCI</i> Indicates the TCI state for PDCCH for each configured CORESET of the DL BWP to be activated at SCell activation, to be activated for the PSCell at SCG activation and/or to be used for BFD, RLM and measurements while the SCG is deactivated. The list includes exactly as many entries as CORESETs configured in this BWP, ordered by increasing values of <i>ControlResourceSet-Id</i> , i.e. the first entry indicates the TCI state for the configured CORESET with the lowest <i>ControlResourceSet-Id</i> value, the second value indicates the TCI states for the configured CORESET with the second lowest <i>ControlResourceSet-Id</i> value, and so on.
<i>pdsch-TCI</i> Indicates TCI states for PDSCH reception at SCell addition/activation or of the PSCell at SCG activation. This field indicates activated TCI state(s) for this BWP ordered by increasing values of <i>TCI-StateId</i> , i.e. the first bit indicates the activation state of the TCI state with the lowest <i>TCI-StateId</i> value, the second value indicates the activation status of the TCI state with the second lowest <i>TCI-StateId</i> value, and so on. A bit set to 0 indicates that the corresponding TCI state is deactivated, a bit set to 1 indicates that the TCI state is activated.

– *TCI-State*

The IE *TCI-State* associates one or two DL reference signals with a corresponding quasi-colocation (QCL) type.

***TCI-State* information element**

```
-- ASN1START
-- TAG-TCI-STATE-START

TCI-State ::=
    tci-StateId
    qcl-Type1
    qcl-Type2
    ...
    [[
        additionalPCI-r17
        pathlossReferenceRS-Id-r17
        ul-powerControl-r17
    ]]
    SEQUENCE {
        TCI-StateId,
        QCL-Info,
        QCL-Info
        OPTIONAL, -- Need R
        AdditionalPCIIndex-r17
        PathlossReferenceRS-Id-r17
        Uplink-powerControlId-r17
        OPTIONAL, -- Need R
        OPTIONAL, -- Cond JointTCI1
        OPTIONAL  -- Cond JointTCI
    }
```

```

    ]],
    [[
    tag-Id-ptr-r18                ENUMERATED {n0,n1}                OPTIONAL    -- Cond 2TA
    ]]
}

QCL-Info ::=
    cell                        SEQUENCE {
        cellIndex                OPTIONAL,    -- Need R
        bwp-Id                    OPTIONAL,    -- Cond CSI-RS-Indicated
        referenceSignal
            csI-rs
            ssb
        },
    qcl-Type                    ENUMERATED {typeA, typeB, typeC, typeD},
    ...
}

-- TAG-TCI-STATE-STOP
-- ASN1STOP
```

QCL-Info field descriptions
bwp-Id The DL BWP which the RS is located in. If the field is absent, the RS is located in the DL BWP in which the <i>TCI-State</i> is applied by the UE.
cell The UE's serving cell in which the <i>referenceSignal</i> is configured. If the field is absent, the <i>referenceSignal</i> is configured in the serving cell in which the <i>TCI-State</i> is applied by the UE. The RS can be located on a serving cell other than the serving cell for which the <i>TCI-State</i> is applied by the UE only if the <i>qcl-Type</i> is configured as <i>typeC</i> or <i>typeD</i> . If the <i>referenceSignal</i> is set to <i>csi-rs</i> and <i>unifiedTCI-StateType</i> is configured, either both <i>cell</i> and <i>bwp-Id</i> are present or both <i>cell</i> and <i>bwp-Id</i> are absent. See TS 38.214 [19] clause 5.1.5.
referenceSignal Reference signal with which quasi-collocation information is provided as specified in TS 38.214 [19] clause 5.1.5.
qcl-Type QCL type as specified in TS 38.214 [19] clause 5.1.5.

TCI-State field descriptions
additionalPCI Indicates the physical cell IDs (PCI) of the SSBs when <i>referenceSignal</i> is configured as SSB for both QCL-Type1 and QCL-Type2. In case the <i>cell</i> is present, the <i>additionalPCI</i> refers to a PCI value configured in the list configured using <i>additionalPCI-ToAddModList</i> in the serving cell indicated by the field <i>cell</i>. Otherwise, it refers to a PCI value configured in a list <i>additionalPCI-ToAddModList</i> configured in the serving cell where the <i>TCI-State</i> is applied by the UE. When this field is present the <i>cell</i> for <i>qcl-Type1</i> and <i>qcl-Type2</i> is configured with same value, if present.
pathlossReferenceRS-Id The ID of the reference signal (e.g. a CSI-RS or an SS block) used for PUSCH, PUCCH and SRS path loss estimation. This field refers to an element in the list configured using <i>pathlossReferenceRSToAddModList</i> in the serving cell and UL BWP where the TCI State is applied by the UE.
qcl-Type1, qcl-Type2 QCL information for the TCI state as specified in TS 38.214 [19] clause 5.1.5.
tag-Id-ptr It indicates the TAG that is associated with this TCI state, value n0 means the TCI state associate with the TAG indicated by <i>tag-Id</i>, value n1 means this TCI state associated with the TAG indicated by <i>tag2-Id</i>. The <i>tag-Id-ptr</i> refers to the TAG of the serving cell where the TCI state is applied.
tci-StateId ID number of the TCI state.
ul-PowerControl Configures power control parameters for PUCCH, PUSCH and SRS for this TCI state. The field is present here only if <i>ul-powerControl</i> is not configured in any <i>BWP-Uplink-Dedicated</i> of this serving cell. This field refers to an element in the list configured using <i>uplink-PowerControlToAddModList</i> in the serving cell where the <i>dl-OrJointTCI-StateToAddModList</i> is configured. For each serving cell, <i>ul-powerControl</i> is either configured in each <i>TCI-State</i> configured or referred to in <i>dl-OrJointTCI-StateList</i> in each DL BWP, or it is not configured in any <i>TCI-State</i> configured or referred to in <i>dl-OrJointTCI-StateList</i> in any DL BWP.

Conditional Presence	Explanation
2TA	This field is mandatory present if <i>tag2</i> is present for the serving cell and the serving cell is configured with <i>unifiedTCI-StateType</i> set to <i>joint</i> . It is absent, Need R, otherwise.
CSI-RS-Indicated	This field is mandatory present if <i>csi-rs</i> is included and <i>unifiedTCI-StateType</i> is not configured. This field is optionally present, Need R, if <i>csi-rs</i> is included and <i>unifiedTCI-StateType</i> is configured. Otherwise, it is absent, Need R.
JointTCI	This field is optionally present, Need R, if this serving cell is configured with <i>unifiedTCI-StateType</i> set to <i>'joint'</i> . It is absent, Need R, otherwise.
JointTCI1	This field is mandatory present, if this serving cell is configured with <i>unifiedTCI-StateType</i> set to <i>'joint'</i> . It is absent, Need R, otherwise.

– *TCI-StateId*

The IE *TCI-StateId* is used to identify one *TCI-State* configuration.

TCI-StateId information element

```

-- ASN1START
-- TAG-TCI-STATEID-START

TCI-StateId ::=
    INTEGER (0..maxNrofTCI-States-1)

-- TAG-TCI-STATEID-STOP
-- ASN1STOP

```

– *TCI-UL-State*

The IE *TCI-UL-State* indicates the TCI state information for UL transmission.

TCI-UL-State information element

```
-- ASN1START
-- TAG-TCI-UL-STATE-START

TCI-UL-State-r17 ::=
    tci-UL-StateId-r17
    servingCellId-r17
    bwp-Id-r17
    referenceSignal-r17
        ssb-Index-r17
        csi-RS-Index-r17
        srs-r17
    },
    additionalPCI-r17
    ul-powerControl-r17
    pathlossReferenceRS-Id-r17
    ...,
    [[
        tag-Id-ptr-r18
    ]]
}

-- TAG-TCI-UL-STATE-STOP
-- ASN1STOP
```

<pre>SEQUENCE { TCI-UL-StateId-r17, ServCellIndex BWP-Id CHOICE { SSB-Index, NZP-CSI-RS-ResourceId, SRS-ResourceId } AdditionalPCIIndex-r17 Uplink-powerControlId-r17 PathlossReferenceRS-Id-r17 ENUMERATED {n0,n1}</pre>	<pre>OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL</pre>	<pre>-- Need R -- Cond CSI-RSorSRS-Indicated -- Need R -- Need R -- Cond Mandatory -- Cond 2TA</pre>

TCI-UL-State field descriptions
additionalPCI Indicates the physical cell IDs (PCI) of the SSBs when <i>referenceSignal</i> is configured as SSB. In case the <i>servingCellId</i> is present, the <i>additionalPCI</i> refers to a PCI value configured in the list configured using <i>additionalPCI-ToAddModList</i> in the serving cell indicated by the field <i>servingCellId</i>. Otherwise, it refers to a PCI value configured in the list configured using <i>additionalPCI-ToAddModList</i> in the serving cell where the <i>ul-TCI-StateList</i> is applied by the UE.
bwp-Id The DL BWP which the CSI-RS is located in or UL BWP where the SRS is located in.
servingCellId The UE's serving cell in which the <i>referenceSignal</i> is configured. If the field is absent, the <i>referenceSignal</i> is configured in the serving cell in which the <i>TCI-UL-State</i> is applied by the UE.
pathlossReferenceRS-Id The ID of the reference Signal (e.g. a CSI-RS or a SS block) used for PUSCH, PUCCH and SRS path loss estimation. This field refers to an element in the list configured using <i>pathlossReferenceRSToAddModList</i> in the serving cell and UL BWP where the UL TCI State is applied by the UE.
tag-Id-ptr It indicates the TAG that is associated with this TCI state, value n0 means the TCI state associate with the TAG indicated by <i>tag-Id</i>, value n1 means this TCI state associated with the TAG indicated by <i>tag2-Id</i>. The <i>tag-Id-ptr</i> refers to the TAG of the serving cell where the TCI state is applied.
ul-powerControl Configures power control parameters for PUCCH, PUSCH and SRS for this TCI state. The field is present here only if <i>ul-powerControl</i> is not configured in any <i>BWP-Uplink-Dedicated</i> of this serving cell. This field refers to an element in the list configured using <i>uplink-PowerControlToAddModList</i> in the serving cell where the <i>ul-TCI-ToAddModList</i> is configured. For each serving cell, <i>ul-powerControl</i> is either configured in each <i>TCI-UL-State</i> configured or referred to in <i>ul-OrJointTCI-StateList</i> in each UL BWP, or it is not configured in any <i>TCI-UL-State</i> configured or referred to in <i>ul-OrJointTCI-StateList</i> in any UL BWP.

Conditional Presence	Explanation
2TA	This field is mandatory present if tag2 is present for the serving cell. It is absent, Need R, otherwise.
CSI-RS or SRS-Indicated	This field is mandatory present if <i>referenceSignal</i> is set to <i>csi-RS-index</i> or to <i>srs</i> , absent otherwise
Mandatory	The field is mandatory present.

– *TCI-UL-StateId*

The IE *TCI-UL-StateId* is used to identify one *TCI-UL-State* configuration.

TCI-UL-StateId information element

-- ASN1START
-- TAG-TCI-UL-STATEID-START

TCI-UL-StateId-r17 ::= INTEGER (0..maxUL-TCI-1-r17)

-- TAG-TCI-UL-STATEID-STOP
-- ASN1STOP

– *TDD-UL-DL-ConfigCommon*

The IE *TDD-UL-DL-ConfigCommon* determines the cell specific Uplink/Downlink TDD configuration.

TDD-UL-DL-ConfigCommon information element

```
-- ASN1START
-- TAG-TDD-UL-DL-CONFIGCOMMON-START

TDD-UL-DL-ConfigCommon ::=          SEQUENCE {
    referenceSubcarrierSpacing        SubcarrierSpacing,
    pattern1                          TDD-UL-DL-Pattern,
    pattern2                          TDD-UL-DL-Pattern
    ...
}

TDD-UL-DL-Pattern ::=              SEQUENCE {
    dl-UL-TransmissionPeriodicity    ENUMERATED {ms0p5, ms0p625, ms1, ms1p25, ms2, ms2p5, ms5, ms10},
    nrofDownlinkSlots                 INTEGER (0..maxNrofSlots),
    nrofDownlinkSymbols                INTEGER (0..maxNrofSymbols-1),
    nrofUplinkSlots                    INTEGER (0..maxNrofSlots),
    nrofUplinkSymbols                  INTEGER (0..maxNrofSymbols-1),
    ...
    [[
        dl-UL-TransmissionPeriodicity-v1530    ENUMERATED {ms3, ms4}
    ]]
}

-- TAG-TDD-UL-DL-CONFIGCOMMON-STOP
-- ASN1STOP
```

<i>TDD-UL-DL-ConfigCommon</i> field descriptions
<i>referenceSubcarrierSpacing</i> Reference SCS used to determine the time domain boundaries in the UL-DL pattern which must be common across all subcarrier specific carriers, i.e., independent of the actual subcarrier spacing using for data transmission. Only the following values are applicable depending on the used frequency: FR1: 15, 30, or 60 kHz FR2-1: 60 or 120 kHz FR2-2: 120, 480, or 960 kHz The network configures a not larger than any SCS of configured BWPs for the serving cell. The network or <i>SL-PreconfigGeneral</i> configures a not larger than the SCS of (pre-)configured SL BWP. See TS 38.213 [13], clause 11.1.

<i>TDD-UL-DL-Pattern</i> field descriptions
<i>dl-UL-TransmissionPeriodicity</i> Periodicity of the DL-UL pattern, see TS 38.213 [13], clause 11.1. If the <i>dl-UL-TransmissionPeriodicity-v1530</i> is signalled, UE shall ignore the <i>dl-UL-TransmissionPeriodicity</i> (without suffix).
<i>nrofDownlinkSlots</i> Number of consecutive full DL slots at the beginning of each DL-UL pattern, see TS 38.213 [13], clause 11.1. In this release, the maximum value for this field is 320.
<i>nrofDownlinkSymbols</i> Number of consecutive DL symbols in the beginning of the slot following the last full DL slot (as derived from <i>nrofDownlinkSlots</i>). The value 0 indicates that there is no partial-downlink slot. (see TS 38.213 [13], clause 11.1).
<i>nrofUplinkSlots</i> Number of consecutive full UL slots at the end of each DL-UL pattern, see TS 38.213 [13], clause 11.1. In this release, the maximum value for this field is 320.
<i>nrofUplinkSymbols</i> Number of consecutive UL symbols in the end of the slot preceding the first full UL slot (as derived from <i>nrofUplinkSlots</i>). The value 0 indicates that there is no partial-uplink slot. (see TS 38.213 [13], clause 11.1).

– *TDD-UL-DL-ConfigDedicated*

The IE *TDD-UL-DL-ConfigDedicated* determines the UE-specific Uplink/Downlink TDD configuration.

TDD-UL-DL-ConfigDedicated information element

```
-- ASN1START
-- TAG-TDD-UL-DL-CONFIGDEDICATED-START

TDD-UL-DL-ConfigDedicated ::= SEQUENCE {
    slotSpecificConfigurationsToAddModList SEQUENCE (SIZE (1..maxNrofSlots)) OF TDD-UL-DL-SlotConfig OPTIONAL, -- Need N
    slotSpecificConfigurationsToReleaseList SEQUENCE (SIZE (1..maxNrofSlots)) OF TDD-UL-DL-SlotIndex OPTIONAL, -- Need N
    ...
}

TDD-UL-DL-ConfigDedicated-IAB-MT-r16 ::= SEQUENCE {
    slotSpecificConfigurationsToAddModList-IAB-MT-r16 SEQUENCE (SIZE (1..maxNrofSlots)) OF TDD-UL-DL-SlotConfig-IAB-MT-r16 OPTIONAL, -- Need
N
    slotSpecificConfigurationsToReleaseList-IAB-MT-r16 SEQUENCE (SIZE (1..maxNrofSlots)) OF TDD-UL-DL-SlotIndex OPTIONAL, -- Need
N
    ...
}

TDD-UL-DL-SlotConfig ::= SEQUENCE {
    slotIndex TDD-UL-DL-SlotIndex,
    symbols CHOICE {
        allDownlink NULL,
        allUplink NULL,
        explicit SEQUENCE {
            nrofDownlinkSymbols INTEGER (1..maxNrofSymbols-1) OPTIONAL, -- Need S
            nrofUplinkSymbols INTEGER (1..maxNrofSymbols-1) OPTIONAL, -- Need S
        }
    }
}
-- ASN1END
```

```
TDD-UL-DL-SlotConfig-IAB-MT-r16 ::= SEQUENCE {
  slotIndex-r16 TDD-UL-DL-SlotIndex,
  symbols-IAB-MT-r16 CHOICE {
    allDownlink-r16 NULL,
    allUplink-r16 NULL,
    explicit-r16 SEQUENCE {
      nrofDownlinkSymbols-r16 INTEGER (1..maxNrofSymbols-1) OPTIONAL, -- Need S
      nrofUplinkSymbols-r16 INTEGER (1..maxNrofSymbols-1) OPTIONAL -- Need S
    },
    explicit-IAB-MT-r16 SEQUENCE {
      nrofDownlinkSymbols-r16 INTEGER (1..maxNrofSymbols-1) OPTIONAL, -- Need S
      nrofUplinkSymbols-r16 INTEGER (1..maxNrofSymbols-1) OPTIONAL -- Need S
    }
  }
}

TDD-UL-DL-SlotIndex ::= INTEGER (0..maxNrofSlots-1)

-- TAG-TDD-UL-DL-CONFIGDEDICATED-STOP
-- ASN1STOP
```

TDD-UL-DL-ConfigDedicated field descriptions
slotSpecificConfigurationsToAddModList The <i>slotSpecificConfigurationToAddModList</i> allows overriding UL/DL allocations provided in tdd-UL-DL-configurationCommon, see TS 38.213 [13], clause 11.1.

TDD-UL-DL-ConfigDedicated-IAB-MT field descriptions
slotSpecificConfigurationsToAddModList-IAB-MT The <i>slotSpecificConfigurationToAddModList-IAB-MT</i> allows overriding UL/DL allocations provided in tdd-UL-DL-configurationCommon with a limitation that effectively only flexible symbols can be overwritten in Rel-16.
slotSpecificConfigurationsToReleaseList-IAB-MT The <i>slotSpecificConfigurationsToReleaseList-IAB-MT</i> allows release of a set of slot configuration previously add with <i>slotSpecificConfigurationToAddModList-IAB-MT</i> .

TDD-UL-DL-SlotConfig field descriptions
nrofDownlinkSymbols Number of consecutive DL symbols in the beginning of the slot identified by <i>slotIndex</i> . If the field is absent the UE assumes that there are no leading DL symbols. (see TS 38.213 [13], clause 11.1).
nrofUplinkSymbols Number of consecutive UL symbols in the end of the slot identified by <i>slotIndex</i> . If the field is absent the UE assumes that there are no trailing UL symbols. (see TS 38.213 [13], clause 11.1).
slotIndex Identifies a slot within a slot configuration period given in <i>tdd-UL-DL-configurationCommon</i> , see TS 38.213 [13], clause 11.1.
symbols The direction (downlink or uplink) for the symbols in this slot. Value <i>allDownlink</i> indicates that all symbols in this slot are used for downlink; value <i>allUplink</i> indicates that all symbols in this slot are used for uplink; value <i>explicit</i> indicates explicitly how many symbols in the beginning and end of this slot are allocated to downlink and uplink, respectively.

TDD-UL-DL-SlotConfig-IAB-MT field descriptions
symbols-IAB-MT The <i>symbols-IAB-MT</i> is used to configure an IAB-MT with the SlotConfig applicable for one serving cell. Value <i>allDownlink</i> indicates that all symbols in this slot are used for downlink; value <i>allUplink</i> indicates that all symbols in this slot are used for uplink; value <i>explicit</i> indicates explicitly how many symbols in the beginning and end of this slot are allocated to downlink and uplink, respectively; value <i>explicit-IAB-MT</i> indicates explicitly how many symbols in the beginning and end of this slot are allocated to uplink and downlink, respectively.

– TrackingAreaCode

The IE *TrackingAreaCode* is used to identify a tracking area within the scope of a PLMN/SNPN, see TS 24.501 [23].

TrackingAreaCode information element

```
-- ASN1START
-- TAG-TRACKINGAREACODE-START

TrackingAreaCode ::= BIT STRING (SIZE (24))

-- TAG-TRACKINGAREACODE-STOP
-- ASN1STOP
```

– T-Reselection

The IE *T-Reselection* concerns the cell reselection timer $T_{reselction_{RAT}}$ for NR and E-UTRA. Value in seconds. For value 0, behaviour as specified in 7.1.2 applies.

T-Reselection information element

```
-- ASN1START
-- TAG-TRESELECTION-START
```

T-Reselection ::= INTEGER (0..7)

-- TAG-TRESELECTION-STOP
-- ASN1STOP

— *TimeAlignmentTimer*

The IE *TimeAlignmentTimer* is used to configure the time alignment timer as specified in TS 38.321 [3]. The values are in ms.

TimeAlignmentTimer information element

-- ASN1START
-- TAG-TIMEALIGNMENTTIMER-START

TimeAlignmentTimer ::= ENUMERATED {ms500, ms750, ms1280, ms1920, ms2560, ms5120, ms10240, infinity}

-- TAG-TIMEALIGNMENTTIMER-STOP
-- ASN1STOP

— *TimeToTrigger*

The IE *TimeToTrigger* specifies the value range used for time to trigger parameter, which concerns the time during which specific criteria for the event needs to be met in order to trigger a measurement report. Value *ms0* corresponds to 0 ms and behaviour as specified in 7.1.2 applies, value *ms40* corresponds to 40 ms, and so on.

TimeToTrigger information element

-- ASN1START
-- TAG-TIMETOTRIGGER-START

TimeToTrigger ::= ENUMERATED {
ms0, ms40, ms64, ms80, ms100, ms128, ms160, ms256,
ms320, ms480, ms512, ms640, ms1024, ms1280, ms2560,
ms5120}

-- TAG-TIMETOTRIGGER-STOP
-- ASN1STOP

— *TN-AreaId*

The IE *TN-AreaId* is used to identify a TN coverage area in an NTN system.

***TN-AreaId* information element**

```
-- ASN1START
-- TAG-TN-AREAID-START

TN-AreaId-r18 ::=                INTEGER (1..maxTN-AreaInfo-r18)

-- TAG-TN-AREAID-STOP
-- ASN1STOP
```

— *UAC-BarringInfoSetIndex*

The IE *UAC-BarringInfoSetIndex* provides the index of the entry in *uac-BarringInfoSetList*. Value 1 corresponds to the first entry in *uac-BarringInfoSetList*, value 2 corresponds to the second entry in this list and so on. An index value referring to an entry not included in *uac-BarringInfoSetList* indicates no barring.

***UAC-BarringInfoSetIndex* information element**

```
-- ASN1START
-- TAG-UAC-BARRINGINFOSETINDEX-START

UAC-BarringInfoSetIndex ::=      INTEGER (1..maxBarringInfoSet)

-- TAG-UAC-BARRINGINFOSETINDEX-STOP
-- ASN1STOP
```

— *UAC-BarringInfoSetList*

The IE *UAC-BarringInfoSetList* provides a list of access control parameter sets. An access category can be configured with access parameters according to one of the sets.

***UAC-BarringInfoSetList* information element**

```
-- ASN1START
-- TAG-UAC-BARRINGINFOSETLIST-START

UAC-BarringInfoSetList ::=      SEQUENCE (SIZE(1..maxBarringInfoSet)) OF UAC-BarringInfoSet

UAC-BarringInfoSetList-v1700 ::= SEQUENCE (SIZE(1..maxBarringInfoSet)) OF UAC-BarringInfoSet-v1700

UAC-BarringInfoSet ::=          SEQUENCE {
    uac-BarringFactor             ENUMERATED {p00, p05, p10, p15, p20, p25, p30, p40,
                                             p50, p60, p70, p75, p80, p85, p90, p95},
    uac-BarringTime              ENUMERATED {s4, s8, s16, s32, s64, s128, s256, s512},
    uac-BarringForAccessIdentity BIT STRING (SIZE(7))
}

UAC-BarringInfoSet-v1700 ::= SEQUENCE {
    uac-BarringFactorForAI3-r17  ENUMERATED {p00, p05, p10, p15, p20, p25, p30, p40, p50, p60, p70, p75, p80, p85, p90, p95}
```

OPTIONAL -- Need S

}

-- TAG-UAC-BARRINGINFOSETLIST-STOP

-- ASN1STOP

UAC-BarringInfoSetList field descriptions
uac-BarringInfoSetList List of access control parameter sets. Each access category can be configured with access parameters corresponding to a particular set by <i>uac-barringInfoSetIndex</i> . Association of an access category with an index that has no corresponding entry in the <i>uac-BarringInfoSetList</i> is valid configuration and indicates no barring.
uac-BarringForAccessIdentity Indicates whether access attempt is allowed for each Access Identity. The leftmost bit, bit 0 in the bit string corresponds to Access Identity 1, bit 1 in the bit string corresponds to Access Identity 2, bit 2 in the bit string corresponds to Access Identity 11, bit 3 in the bit string corresponds to Access Identity 12, bit 4 in the bit string corresponds to Access Identity 13, bit 5 in the bit string corresponds to Access Identity 14, and bit 6 in the bit string corresponds to Access Identity 15. Value 0 means that access attempt is allowed for the corresponding access identity.
uac-BarringFactor Represents the probability that access attempt would be allowed during access barring check.
uac-BarringFactorForAI3 Barring factor applicable for Access Identity 3. Represents the probability that access attempt would be allowed during access barring check. If absent, the UE considers the access attempt as allowed.
uac-BarringTime The average time in seconds before a new access attempt is to be performed after an access attempt was barred at access barring check for the same access category, see 5.3.14.5.

— UAC-BarringPerCatList

The IE *UAC-BarringPerCatList* provides access control parameters for a list of access categories.

UAC-BarringPerCatList information element

-- ASN1START

-- TAG-UAC-BARRINGPERCATLIST-START

UAC-BarringPerCatList ::=SEQUENCE (SIZE (1..maxAccessCat-1)) OF UAC-BarringPerCat

UAC-BarringPerCat ::=SEQUENCE {

accessCategoryINTEGER (1..maxAccessCat-1),

uac-barringInfoSetIndexUAC-BarringInfoSetIndex

}

-- TAG-UAC-BARRINGPERCATLIST-STOP

-- ASN1STOP

UAC-BarringPerCatList field descriptions
accessCategory The Access Category according to TS 22.261 [25].

– UAC-BarringPerPLMN-List

The IE *UAC-BarringPerPLMN-List* provides access category specific access control parameters, which are configured per PLMN/SNP.

UAC-BarringPerPLMN-List information element

```
-- ASN1START
-- TAG-UAC-BARRINGPERPLMN-LIST-START

UAC-BarringPerPLMN-List ::=          SEQUENCE (SIZE (1.. maxPLMN)) OF UAC-BarringPerPLMN

UAC-BarringPerPLMN ::=                SEQUENCE {
    plmn-IdentityIndex                INTEGER (1..maxPLMN),
    uac-ACBarringListType              CHOICE{
        uac-ImplicitACBarringList     SEQUENCE (SIZE(maxAccessCat-1)) OF UAC-BarringInfoSetIndex,
        uac-ExplicitACBarringList      UAC-BarringPerCatList
    }
}                                     OPTIONAL          -- Need S

-- TAG-UAC-BARRINGPERPLMN-LIST-STOP
-- ASN1STOP
```

UAC-BarringPerPLMN-List field descriptions
uac-ACBarringListType Access control parameters for each access category valid only for a specific PLMN or SNP. UE behaviour upon absence of this field is specified in clause 5.3.14.2.
plmn-IdentityIndex Index of the PLMN or SNP across the <i>plmn-IdentityInfoList</i> and <i>npn-IdentityInfoList</i> fields included in SIB1.

– UE-TimersAndConstants

The IE *UE-TimersAndConstants* contains timers and constants used by the UE in RRC_CONNECTED, RRC_INACTIVE and RRC_IDLE.

UE-TimersAndConstants information element

```
-- ASN1START
-- TAG-UE-TIMERSANDCONSTANTS-START

UE-TimersAndConstants ::=            SEQUENCE {
    t300                             ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000},
    t301                             ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000},
    t310                             ENUMERATED {ms0, ms50, ms100, ms200, ms500, ms1000, ms2000},
```

```

n310      ENUMERATED {n1, n2, n3, n4, n6, n8, n10, n20},
t311      ENUMERATED {ms1000, ms3000, ms5000, ms10000, ms15000, ms20000, ms30000},
n311      ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10},
t319      ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000},
...
}

-- TAG-UE-TIMERSANDCONSTANTS-STOP
-- ASN1STOP
```

– *UE-TimersAndConstantsRemoteUE*

The IE *UE-TimersAndConstantsRemoteUE* contains timers and constants used by the L2 U2N Remote UE in RRC_CONNECTED, RRC_INACTIVE and RRC_IDLE.

UE-TimersAndConstantsRemoteUE information element

```

-- ASN1START
-- TAG-UE-TIMERSANDCONSTANTSREMOTEUE-START

UE-TimersAndConstantsRemoteUE-r17 ::= SEQUENCE {
  t300-RemoteUE-r17      ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000} OPTIONAL, -- Need S
  t301-RemoteUE-r17      ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000} OPTIONAL, -- Need S
  t319-RemoteUE-r17      ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000} OPTIONAL, -- Need S
  ...
}

-- TAG-UE-TIMERSANDCONSTANTSREMOTEUE-STOP
-- ASN1STOP
```

UE-TimersAndConstantsRemoteUE field descriptions	
t300-RemoteUE	Indicates the timer value of T300 used by L2 U2N Remote UE. If the field is absent, the timer value indicated in t300 applies to L2 U2N Remote UE.
t301-RemoteUE	Indicates the timer value of T301 used by L2 U2N Remote UE. If the field is absent, the timer value indicated in t301 applies to L2 U2N Remote UE.
t319-RemoteUE	Indicates the timer value of T319 used by L2 U2N Remote UE. If the field is absent, the timer value indicated in t319 applies to L2 U2N Remote UE.

– *UL-DelayValueConfig*

The IE *UL-DelayValueConfig* specifies the configuration of the UL PDCP Packet Delay value per DRB measurement specified in TS 38.314 [53].

UL-DelayValueConfig information element

```

-- ASN1START
-- TAG-ULDELAYVALUECONFIG-START
```

```
UL-DelayValueConfig-r16 ::= SEQUENCE {
    delay-DRBlist-r16          SEQUENCE (SIZE(1..maxDRB)) OF DRB-Identity
}

-- TAG-ULDELAYVALUECONFIG-STOP
-- ASN1STOP
```

UL-DelayValueConfig field descriptions
delay-DRBlist Indicates the DRB IDs used by UE to provide results of UL PDCP Packet Delay value per DRB measurement as specified in TS 38.314 [53].

– *UL-ExcessDelayConfig*

The IE *UL-ExcessDelayConfig* IE specifies the configuration of the UL PDCP Excess Packet Delay per DRB measurement specified in TS 38.314 [53].

UL-ExcessDelayConfig information element

```
-- ASN1START
-- TAG-ULEXCESSDELAYCONFIG-START

UL-ExcessDelayConfig-r17 ::= SEQUENCE {
    excessDelay-DRBlist-r17      SEQUENCE (SIZE(1..maxDRB)) OF ExcessDelay-DRB-IdentityInfo-r17
}

ExcessDelay-DRB-IdentityInfo-r17 ::= SEQUENCE {
    drb-IdentityList             SEQUENCE (SIZE (1..maxDRB)) OF DRB-Identity,
    delayThreshold               ENUMERATED {ms0dot25, ms0dot5, ms1, ms2, ms4, ms5, ms10, ms20, ms30, ms40, ms50, ms60, ms70,
                                           ms80, ms90, ms100, ms150, ms300, ms500}
}

-- TAG-ULEXCESSDELAYCONFIG-STOP
-- ASN1STOP
```

UL-ExcessDelayConfig field descriptions
drb-IdentityList Indicates the DRB IDs used by UE to provide results of UL PDCP Excess Packet Delay per DRB measurement as specified in TS 38.314 [53].
delayThreshold Indicates the delay threshold for the DRB IDs indicated in DRB-IdentityList. Value ms0dot25 corresponds to 0.25ms, ms0dot5 corresponds to 0.5ms, ms1 corresponds to 1ms and so on.

– *UL-GapFR2-Config*

The IE *UL-GapFR2-Config* specifies the FR2 uplink gap configuration.

UL-GapFR2-Config information element

```
-- ASN1START
-- TAG-UL-GAPFR2-CONFIG-START

UL-GapFR2-Config-r17 ::= SEQUENCE {
    gapOffset-r17          INTEGER (0..159),
    ugl-r17                ENUMERATED {ms0dot125, ms0dot25, ms0dot5, ms1},
    ugrp-r17               ENUMERATED {ms5, ms20, ms40, ms160},
    refFR2-ServCellAsyncCA-r17 ServCellIndex
}

-- TAG-UL-GAPFR2-CONFIG-STOP
-- ASN1STOP
```

UL-GapFR2-Config field descriptions	
gapOffset	Value gapOffset is the gap offset of the FR2 UL gap pattern with UGRP indicated in the field ugrp. The value range is from 0 to ugrp-1.
refFR2-ServCellAsyncCA	Indicates the FR2 serving cell identifier whose SFN and subframe is used for FR2 UL gap calculation for this gap pattern with asynchronous CA involving FR2 carrier(s).
ugl	Value ugl is the gap length in ms of the FR2 UL gap. The FR2 UL gap length is according to Table 9.1.11-1 in TS 38.133 [14]. Value ms0dot125 corresponds to 0.125 ms, ms0dot25 corresponds to 0.25 ms and so on.
ugrp	Value ugrp is the gap repetition period in (ms) of the FR2 UL gap. The FR2 UL gap repetition period is according to Table 9.1.11-1 in TS 38.133 [14].

Conditional Presence	Explanation
AsyncCA	This field is mandatory present when configuring FR2 UL gap pattern to UE in: - (NG)EN-DC, NR SA, NE-DC or NR-DC without FR2-FR2 band combination, with asynchronous CA involving FR2 carriers. Otherwise, it is absent.

UplinkCancellation

The IE UplinkCancellation is used to configure the UE to monitor PDCCH for the CI-RNTI.

UplinkCancellation information element

```
-- ASN1START
-- TAG-ULINKCANCELLATION-START

UplinkCancellation-r16 ::= SEQUENCE {
    ci-RNTI-r16          RNTI-Value,
    dci-PayloadSizeForCI-r16 INTEGER (0..maxCI-DCI-PayloadSize-r16),
    ci-ConfigurationPerServingCell-r16 SEQUENCE (SIZE (1..maxNrofServingCells)) OF CI-ConfigurationPerServingCell-r16,
    ...
}
```

```
CI-ConfigurationPerServingCell-r16 ::= SEQUENCE {
  servingCellId
    ServCellIndex,
  positionInDCI-r16
    INTEGER (0..maxCI-DCI-PayloadSize-1-r16),
  positionInDCI-ForSUL-r16
    INTEGER (0..maxCI-DCI-PayloadSize-1-r16) OPTIONAL, -- Cond SUL-Only
  ci-PayloadSize-r16
    ENUMERATED {n1, n2, n4, n5, n7, n8, n10, n14, n16, n20, n28, n32, n35, n42, n56, n112},
  timeFrequencyRegion-r16
    SEQUENCE {
      timeDurationForCI-r16
        ENUMERATED {n2, n4, n7, n14} OPTIONAL, -- Cond
      SymbolPeriodicity
        ENUMERATED {n1, n2, n4, n7, n14, n28},
      timeGranularityForCI-r16
        INTEGER (0..37949),
      frequencyRegionForCI-r16
        INTEGER (0..2),
      deltaOffset-r16
        ...
    },
  uplinkCancellationPriority-v1610
    ENUMERATED {enabled} OPTIONAL -- Need S
}

-- TAG-ULINKCANCELLATION-STOP
-- ASN1STOP
```

UplinkCancellation field descriptions	
ci-ConfigurationPerServingCell	Indicates (per serving cell) the position of the <i>ci-PayloadSize</i> bit CI values inside the DCI payload (see TS 38.213 [13], clause 11.2A).
ci-RNTI	RNTI used for indication cancellation in UL (see TS 38.212 [17] clause 7.3.1 and TS 38.213 [13], clause 11.2A).
dci-PayloadSizeForCI	Total length of the DCI payload scrambled with CI-RNTI (see TS 38.213 [13], clause 11.2A).

<i>CI-ConfigurationPerServingCell</i> field descriptions	
<i>ci-PayloadSize</i>	Configures the field size for each UL cancelation indicator of this serving cell (<i>servingCellId</i>) (see TS 38.213 [13], clause 11.2A).
<i>deltaOffset</i>	Configures the additional offset from the end of a PDCCH reception where the UE detects the DCI format 2_4 and the first symbol of the T_ "CI" symbols, in the unit of OFDM symbols (see TS 38.213 [13], clause 11.2A).
<i>frequencyRegionForCI</i>	Configures the reference frequency region where a detected UL CI is applicable (see TS 38.213 [13], clause 11.2A). It is defined in the same way as <i>locationAndBandwidth</i> .
<i>positionInDCI</i>	Starting position (in number of bit) of the <i>ci-PayloadSize</i> bit CI value applicable for this serving cell (<i>servingCellId</i>) within the DCI payload (see TS 38.213 [13], clause 11.2A).
<i>positionInDCI-ForSUL</i>	Starting position (in number of bit) of the <i>ci-PayloadSize</i> bit CI value applicable for SUL of this serving cell (<i>servingCellId</i>) within the DCI payload (see TS 38.213 [13], clause 11.2A).
<i>timeDurationForCI</i>	Configures the duration of the reference time region in symbols where a detected UL CI is applicable of this serving cell (<i>servingCellId</i>) (see TS 38.213 [13], clause 11.2A). If the field is absent, i.e., the configured UL CI monitoring periodicity indicated by <i>monitoringSlotPeriodicityAndOffset</i> for DCI format 2_4 is larger than 1 slot or 1 slot with only one monitoring occasion, the UE applies the value of the configured UL CI monitoring periodicity,
<i>timeFrequencyRegion</i>	Configures the reference time and frequency region where a detected UL CI is applicable of this serving cell (<i>servingCellId</i>) (see TS 38.213 [13], clause 11.2A).
<i>timeGranularityForCI</i>	Configures the number of partitions within the time region of this serving cell (<i>servingCellId</i>) (see TS 38.213 [13], clause 11.2A).
<i>uplinkCancellationPriority</i>	Configures uplink cancellation behavior if both UL CI and intra-UE priority indicator are configured for a given UE. If the field is present, then UL CI is only applicable to the UL transmissions indicated/configured as low priority level. If the field is absent, UL CI is applicable to UL transmission irrespective of its priority level (see TS 38.213 [13], clause 11.2A).

Conditional Presence	Explanation
<i>SUL-Only</i>	The field is optionally present, Need R, if <i>supplementaryUplink</i> is configured in <i>ServingCellConfig</i> . It is absent otherwise.
<i>SymbolPeriodicity</i>	This field is mandatory present if the configured UL CI monitoring periodicity indicated by <i>monitoringSlotPeriodicityAndOffset</i> for DCI format 2_4 is 1 slot with more than one monitoring occasion, otherwise absent.

– *UplinkConfigCommon*

The IE *UplinkConfigCommon* provides common uplink parameters of a cell.

UplinkConfigCommon information element

```
-- ASN1START
-- TAG-ULINKCONFIGCOMMON-START
```

```
UplinkConfigCommon ::=
    frequencyInfoUL          SEQUENCE {
        initialUplinkBWP      FrequencyInfoUL          OPTIONAL, -- Cond InterFreqHOAndServCellAdd
        dummy                 BWP-UplinkCommon          OPTIONAL, -- Cond ServCellAdd
        TimeAlignmentTimer
    }
```

```
UplinkConfigCommon-v1700 ::=
    initialUplinkBWP-RedCap-r17
}
SEQUENCE {
    BWP-UplinkCommon
OPTIONAL -- Need R
-- TAG-UPLINKCONFIGCOMMON-STOP
-- ASN1STOP
```

UplinkConfigCommon field descriptions
frequencyInfoUL Absolute uplink frequency configuration and subcarrier specific virtual carriers.
initialUplinkBWP The initial uplink BWP configuration for a serving cell (see TS 38.213 [13], clause 12).
initialUplinkBWP-RedCap If present, (e)RedCap UEs use this UL BWP instead of <i>initialUplinkBWP</i> . If absent, (e)RedCap UEs use <i>initialUplinkBWP</i> provided that it does not exceed the (e)RedCap UE maximum bandwidth (see also clause 5.2.2.4.2).

Conditional Presence	Explanation
InterFreqHOAndServCellAdd	This field is mandatory present for inter-frequency handover and upon serving cell (PSCell/SCell) addition. Otherwise, the field is optionally present, Need M.
ServCellAdd	This field is mandatory present upon serving cell addition (for PSCell and SCell) and upon handover from E-UTRA to NR. It is optionally present, Need M otherwise.

– UplinkConfigCommonSIB

The IE *UplinkConfigCommonSIB* provides common uplink parameters of a cell.

UplinkConfigCommonSIB information element

```
-- ASN1START
-- TAG-UPLINKCONFIGCOMMONSIB-START

UplinkConfigCommonSIB ::=
    frequencyInfoUL
    initialUplinkBWP
    timeAlignmentTimerCommon
SEQUENCE {
    FrequencyInfoUL-SIB,
    BWP-UplinkCommon,
    TimeAlignmentTimer
}

UplinkConfigCommonSIB-v1700 ::=
    initialUplinkBWP-RedCap-r17
}
SEQUENCE {
    BWP-UplinkCommon
OPTIONAL -- Need R

UplinkConfigCommonSIB-v1760 ::=
    frequencyInfoUL-v1760
}
SEQUENCE {
    FrequencyInfoUL-SIB-v1760
```

-- TAG-UPLINKCONFIGCOMMONSIB-STOP
-- ASN1STOP

UplinkConfigCommonSIB field descriptions
frequencyInfoUL Absolute uplink frequency configuration and subcarrier specific virtual carriers.
InitialUplinkBWP The initial uplink BWP configuration for a PCell (see TS 38.213 [13], clause 12).
initialUplinkBWP-RedCap If present, (e)RedCap UEs use this UL BWP instead of <i>initialUplinkBWP</i> . If absent, (e)RedCap UEs use <i>initialUplinkBWP</i> provided that it does not exceed the (e)RedCap UE maximum bandwidth (see also clause 5.2.2.4.2).

– Uplink-PowerControl

The IE *Uplink-PowerControl* is used to configure UE specific power control parameter for PUSCH, PUCCH and SRS.

Uplink-PowerControl information element

```
-- ASN1START
-- TAG-UPLINK-POWERCONTROL-START

Uplink-powerControl-r17 ::= SEQUENCE {
    ul-powercontrolId-r17      Uplink-powerControlId-r17,
    p0AlphaSetforPUSCH-r17    P0AlphaSet-r17,
    p0AlphaSetforPUCCH-r17    P0AlphaSet-r17,
    p0AlphaSetforSRS-r17      P0AlphaSet-r17
}
OPTIONAL, -- Need R
OPTIONAL, -- Need R
OPTIONAL  -- Need R

P0AlphaSet-r17 ::= SEQUENCE {
    p0-r17      INTEGER (-16..15),
    alpha-r17   Alpha,
    closedLoopIndex-r17  ENUMERATED { i0, i1 }
}
OPTIONAL, -- Need R
OPTIONAL, -- Need S

Uplink-powerControlId-r17 ::= INTEGER(1.. maxUL-TCI-r17)

-- TAG-UPLINK-POWERCONTROL-STOP
-- ASN1STOP
```

Uplink-PowerControl field descriptions
p0AlphaSetforPUSCH, p0AlphaSetforPUCCH, p0AlphaSetforSRS Configures power control parameters for PUSCH, PUCCH and SRS (see TS 38.213 [13], clause 7.2). When the field <i>alpha</i> is absent in <i>p0AlphaSetforPUSCH</i> , the UE applies the value 1 for PUSCH power control. When the field <i>alpha</i> is absent in <i>p0AlphaSetforSRS</i> , the UE applies the value 1 for SRS power control. In <i>p0AlphaSetForPUCCH</i> , the field <i>alpha</i> is absent (not used).

– *Uu-RelayRLC-ChannelConfig*

The IE *Uu-RelayRLC-ChannelConfig* is used to configure an RLC entity, a corresponding logical channel in MAC for Uu Relay RLC channel between L2 U2N Relay UE and network, or between a N3C relay UE and network in case of MP.

***Uu-RelayRLC-ChannelConfig* information element**

```
-- ASN1START
-- TAG-UU-RELAYRLC-CHANNELCONFIG-START

Uu-RelayRLC-ChannelConfig-r17 ::= SEQUENCE {
    uu-LogicalChannelIdentity-r17      LogicalChannelIdentity      OPTIONAL,    -- Cond RelayLCH-SetupOnly
    uu-RelayRLC-ChannelID-r17         Uu-RelayRLC-ChannelID-r17,
    reestablishRLC-r17                ENUMERATED {true}           OPTIONAL,    -- Need N
    rlc-Config-r17                    RLC-Config                  OPTIONAL,    -- Cond RelayLCH-Setup
    mac-LogicalChannelConfig-r17      LogicalChannelConfig         OPTIONAL,    -- Cond RelayLCH-Setup
    ...
}

-- TAG-UU-RELAYRLC-CHANNELCONFIG-STOP
-- ASN1STOP
```

<i>Uu-RelayRLC-ChannelConfig</i> field descriptions	
<i>uu-LogicalChannelIdentity</i>	Indicates the logical channel id for Uu Relay RLC channel of the L2 U2N Relay UE.
<i>uu-RelayRLC-ChannelID</i>	Indicates the Uu Relay RLC channel in the link between L2 U2N Relay UE and network.
<i>reestablishRLC</i>	Indicates that RLC should be re-established.
<i>rlc-Config</i>	Determines the RLC mode (UM, AM) and provides corresponding parameters.

Conditional Presence	Explanation
<i>RelayLCH-Setup</i>	This field is mandatory present upon creation of a new logical channel for a Uu Relay RLC channel. It is optionally present, Need M, otherwise.
<i>RelayLCH-SetupOnly</i>	This field is mandatory present upon creation of a new logical channel for a Uu Relay RLC channel. It is absent otherwise.

– *Uu-RelayRLC-ChannelID*

The IE *Uu-RelayRLC-ChannelID* is used to identify a Uu Relay RLC channel in the link between L2 U2N Relay UE and network.

***Uu-RelayRLC-ChannelID* information element**

```
-- ASN1START
```

```
-- TAG-UU-RELAYRLC-CHANNELID-START

Uu-RelayRLC-ChannelID-r17 ::= INTEGER (1..maxLC-ID)

-- TAG-UU-RELAYRLC-CHANNELID-STOP
-- ASN1STOP
```

— *UplinkTxDirectCurrentList*

The IE *UplinkTxDirectCurrentList* indicates the Tx Direct Current locations per serving cell for each configured UL BWP in the serving cell, based on the BWP numerology and the associated carrier bandwidth.

UplinkTxDirectCurrentList information element

```
-- ASN1START
-- TAG-UPLINKTXDIRECTCURRENTLIST-START

UplinkTxDirectCurrentList ::=          SEQUENCE (SIZE (1..maxNrofServingCells)) OF UplinkTxDirectCurrentCell

UplinkTxDirectCurrentCell ::=          SEQUENCE {
    servCellIndex                      ServCellIndex,
    uplinkDirectCurrentBWP              SEQUENCE (SIZE (1..maxNrofBWPs)) OF UplinkTxDirectCurrentBWP,
    ...,
    [[
    uplinkDirectCurrentBWP-SUL          SEQUENCE (SIZE (1..maxNrofBWPs)) OF UplinkTxDirectCurrentBWP          OPTIONAL
    ]]
}

UplinkTxDirectCurrentBWP ::=          SEQUENCE {
    bwp-Id                             BWP-Id,
    shift7dot5kHz                      BOOLEAN,
    txDirectCurrentLocation             INTEGER (0..3301)
}

-- TAG-UPLINKTXDIRECTCURRENTLIST-STOP
-- ASN1STOP
```

UplinkTxDirectCurrentBWP field descriptions	
bwp-Id	The BWP-Id of the corresponding uplink BWP.
shift7dot5kHz	Indicates whether there is 7.5 kHz shift or not. 7.5 kHz shift is applied if the field is set to <i>true</i> . Otherwise 7.5 kHz shift is not applied.
txDirectCurrentLocation	The uplink Tx Direct Current location for the carrier. Only values in the value range of this field between 0 and 3299, which indicate the subcarrier index within the carrier corresponding to the numerology of the corresponding uplink BWP and value 3300, which indicates "Outside the carrier" and value 3301, which indicates "Undetermined position within the carrier" are used in this version of the specification.

<i>UplinkTxDirectCurrentCell</i> field descriptions
<i>servCellIndex</i> The serving cell ID of the serving cell corresponding to the <i>uplinkDirectCurrentBWP</i> .
<i>uplinkDirectCurrentBWP</i> The Tx Direct Current locations for all the uplink BWPs configured at the corresponding serving cell.
<i>uplinkDirectCurrentBWP-SUL</i> The Tx Direct Current locations for all the supplementary uplink BWPs configured at the corresponding serving cell.

– *UplinkTxDirectCurrentMoreCarrierList*

The IE *UplinkTxDirectCurrentMoreCarrierList* indicates the Tx Direct Current locations for intra-band CA including one, two or more uplink carriers. The UE does not report the uplink Direct Current location information for SUL carrier(s).

UplinkTxDirectCurrentMoreCarrierList information element

```
-- ASN1START
-- TAG-ULINKTXDIRECTCURRENTMORECARRIERLIST-START

UplinkTxDirectCurrentMoreCarrierList-r17 ::= SEQUENCE (SIZE (1..maxNrofCC-Group-r17)) OF CC-Group-r17

CC-Group-r17 ::= SEQUENCE {
    servCellIndexLower-r17 ServCellIndex,
    servCellIndexHigher-r17 ServCellIndex OPTIONAL,
    defaultDC-Location-r17 DefaultDC-Location-r17,
    offsetToDefault-r17 CHOICE {
        offsetValue OffsetValue-r17,
        offsetlist SEQUENCE (SIZE(1..maxNrofReqComDC-Location-r17)) OF OffsetValue-r17 OPTIONAL
    }
}

OffsetValue-r17 ::= SEQUENCE {
    offsetValue-r17 INTEGER (-20000.. 20000),
    shift7dot5kHz-r17 BOOLEAN
}

DefaultDC-Location-r17 ::= CHOICE {
    ul FrequencyComponent-r17,
    dl FrequencyComponent-r17,
    ulAndDL FrequencyComponent-r17
}

FrequencyComponent-r17 ::= ENUMERATED {activeCarrier,configuredCarrier,activeBWP,configuredBWP}

-- TAG-ULINKTXDIRECTCURRENTMORECARRIERLIST-STOP
-- ASN1STOP
```

<i>UplinkTxDirectCurrentMoreCarrierList</i> and <i>CC-Group</i> field descriptions
<i>CC-Group</i> The contiguous carriers sharing the same PA in an intra-band UL CA configuration. The UE shall report only one DC location for an intra-band CC combination with one active uplink carrier in case <i>DefaultDC-Location</i> is set to <i>activeCarrier</i> or <i>activeBWP</i> .
<i>defaultDC-Location</i> Indicates the default DC location derivation option. The default Tx Direct Current is located at the mathematical center of the UE bandwidth, i.e. between the lower edge of the lowest subcarrier of the lowest frequency component and the upper edge of the highest subcarrier of the highest frequency component, rounded to the subcarrier grid of the lowest SCS defined for the component carrier on which the default Direct Current is located. The lowest and highest frequency components used for derivation of mathematical center are indicated by <i>FrequencyComponent</i> in the associated <i>CC-Group</i> , where the lowest frequency component and the highest frequency component may be the same. If the mathematical center of the UE bandwidth lands on frequencies where there is no subcarrier grid defined, the subcarrier grid of the lowest SCS of the nearest lower frequency component carrier shall be extended to cover the frequency of the mathematical default Direct Current location.
<i>offsetToDefault</i> Indicates the DC location offset to the default DC location derived from <i>defaultDC-Location</i> . The lowest SCS in the CC group is used as the offset granularity. Value 0 represents no offset. offsetValue is used in case <i>DefaultDC-Location</i> is set to <i>configuredCarrier</i> or <i>configuredBWP</i> . <i>offsetlist</i> is used in case <i>DefaultDC-Location</i> is set to <i>activeCarrier</i> or <i>activeBWP</i> . Each entity in this list corresponds to the entry in carriers combination in <i>IntraBandCC-CombinationReqList</i> of the intra-band CA component. For each CC group, the UE shall include the same number of entries, and listed in the same order as in <i>CC-CombinationList</i> . If <i>DefaultDC-Location</i> is set the <i>activeCarrier</i> , same offsetValue is signalled for all requested carriers combinations with same active carriers states (regardless of the active BWP index).
<i>servCellIndexHigher</i> Indicates the serving cell index of the highest edge of the <i>CC-Group</i> . If absent, there is only one carrier in this group indicated by <i>servCellIndexLower</i> .
<i>servCellIndexLower</i> Indicates the serving cell index of the lowest edge of the <i>CC-Group</i> .
<i>shift7dot5kHz</i> Indicates whether there is 7.5 kHz shift or not. 7.5 kHz shift is applied if the field is set to true, otherwise 7.5 kHz shift is not applied.

<i>DefaultDC-Location</i> field descriptions
<i>dl</i> Indicates that the default DC location is derived based on the DL frequencies of the frequency component.
<i>ul</i> Indicates that the default DC location is derived based on the UL frequencies of the frequency component.
<i>ulAndDL</i> Indicates that the default DC location is derived based on the edge most frequencies among any DL and UL frequency components.

– *UplinkTxDirectCurrentTwoCarrierList*

The IE *UplinkTxDirectCurrentTwoCarrierList* indicates the Tx Direct Current locations when uplink intra-band CA with two carriers is configured, based on the configured carriers and BWP numerology and the associated carrier bandwidth of the carriers. The UE does not report the uplink Direct Current location information for SUL carrier(s).

UplinkTxDirectCurrentTwoCarrierList information element

```
-- ASN1START
-- TAG-ULINKTXDIRECTCURRENTTWOARRIERLIST-START
```

```
UplinkTxDirectCurrentTwoCarrierList-r16 ::= SEQUENCE (SIZE (1..maxNrofTxDC-TwoCarrier-r16)) OF UplinkTxDirectCurrentTwoCarrier-r16
```

```

UplinkTxDirectCurrentTwoCarrier-r16 ::=
    carrierOneInfo-r16
    carrierTwoInfo-r16
    singlePA-TxDirectCurrent-r16
    secondPA-TxDirectCurrent-r16
}
SEQUENCE {
    UplinkTxDirectCurrentCarrierInfo-r16,
    UplinkTxDirectCurrentCarrierInfo-r16,
    UplinkTxDirectCurrentTwoCarrierInfo-r16,
    UplinkTxDirectCurrentTwoCarrierInfo-r16
} OPTIONAL

UplinkTxDirectCurrentCarrierInfo-r16 ::=
    servCellIndex-r16
    servCellInfo-r16
    bwp-Id-r16
    deactivatedCarrier-r16
}
SEQUENCE {
    ServCellIndex,
    CHOICE {
        BWP-Id,
        ENUMERATED {deactivated}
    }
}

UplinkTxDirectCurrentTwoCarrierInfo-r16 ::=
    referenceCarrierIndex-r16
    shift7dot5kHz-r16
    txDirectCurrentLocation-r16
}
SEQUENCE {
    ServCellIndex,
    BOOLEAN,
    INTEGER (0..3301)
}

-- TAG-ULINKTXDIRECTCURRENTTWCARRIERLIST-STOP
-- ASN1STOP

```

***UplinkTxDirectCurrentTwoCarrierInfo* field descriptions**

referenceCarrierIndex

The serving cell ID of the carrier which is to be used as the reference for interpreting the Tx Direction Current location as reported using *txDirectCurrentLocation-r16*. The numerology of the uplink BWP ID reported with *bwp-Id-r16* for this serving cell is the numerology used for interpreting the reported subcarrier location.

shift7dot5kHz

Indicates whether there is 7.5 kHz shift or not. 7.5 kHz shift is applied if the field is set to *true*. Otherwise 7.5 kHz shift is not applied.

txDirectCurrentLocation

The uplink Tx Direct Current location for the two carrier uplink CA with the serving cells reported using *carrierOneInfo-r16* and *carrierTwoInfo-r16*. Values in the range of this field between 0 and 3299 indicate the subcarrier index of the uplink Tx Direct Current location with the subcarrier taken from the serving cell with ID *referenceCarrierIndex* and the numerology of the corresponding uplink BWP reported for this serving cell. Value 3300 indicates "Outside the carrier" and value 3301 indicates "Undetermined position within the carrier".

***UplinkTxDirectCurrentCarrierInfo* field descriptions**

bwp-Id

The BWP ID of the serving cell which is part of the two carrier uplink carrier aggregation. The UE shall not report this field if the serving cell is reported as deactivated using *deactivatedCarrier-r16*.

deactivatedCarrier

For the reported uplink Tx Direct Current location(s) corresponding to *singlePA-TxDirectCurrent-r16*, indicates whether the carrier is deactivated or not for this serving cell. If the carrier refers to the PCell, the UE shall not set this field to *deactivated*.

servCellIndex

The serving cell ID of the serving cell which is part of the two carrier uplink carrier aggregation.

UplinkTxDirectCurrentTwoCarrier field descriptions
carrierOneInfo The serving cell ID and BWP ID of the first carrier of the uplink carrier aggregation for which the uplink Tx Direct Current location(s) are being reported.
carrierTwoInfo The serving cell ID and BWP ID of the second carrier of the uplink carrier aggregation for which the uplink Tx Direct Current location(s) are being reported.
singlePA-TxDirectCurrent The uplink Tx Direct Current location for the UE which support single PA for this uplink carrier aggregation. For the UEs which support dual PA for this uplink carrier aggregation, this field is for reporting the uplink Tx Direct Current location of the first PA.
secondPA-TxDirectCurrent The uplink Tx Direct Current location used by the UE with the second PA for the UEs which support dual PA for this uplink carrier aggregation. This field shall be absent for the <i>UplinkTxDirectCurrentTwoCarrier</i> entity where <i>deactivatedCarrier</i> of <i>carrierOneInfo</i> or <i>carrierTwoInfo</i> is set to <i>deactivated</i> .

– ZP-CSI-RS-Resource

The IE *ZP-CSI-RS-Resource* is used to configure a Zero-Power (ZP) CSI-RS resource (see TS 38.214 [19], clause 5.1.4.2). Reconfiguration of a *ZP-CSI-RS-Resource* between periodic or semi-persistent and aperiodic is not supported.

ZP-CSI-RS-Resource information element

```

-- ASN1START
-- TAG-ZP-CSI-RS-RESOURCE-START

ZP-CSI-RS-Resource ::=
    zp-CSI-RS-ResourceId
    resourceMapping
    periodicityAndOffset
    ...
}

ZP-CSI-RS-ResourceId ::=
    INTEGER (0..maxNrofZP-CSI-RS-Resources-1)

-- TAG-ZP-CSI-RS-RESOURCE-STOP
-- ASN1STOP

```

ZP-CSI-RS-Resource field descriptions
periodicityAndOffset Periodicity and slot offset for periodic/semi-persistent ZP-CSI-RS (see TS 38.214 [19], clause 5.1.4.2). Network always configures the UE with a value for this field for periodic and semi-persistent ZP-CSI-RS resource (as indicated in PDSCH-Config).
resourceMapping OFDM symbol and subcarrier occupancy of the ZP-CSI-RS resource within a slot.
zp-CSI-RS-ResourceId ZP CSI-RS resource configuration ID (see TS 38.214 [19], clause 5.1.4.2).

Conditional Presence	Explanation
<i>PeriodicOrSemiPersistent</i>	The field is optionally present, Need M, for periodic and semi-persistent ZP-CSI-RS-Resources (as indicated in PDSCH-Config). The field is absent otherwise.

— *ZP-CSI-RS-ResourceSet*

The IE *ZP-CSI-RS-ResourceSet* refers to a set of *ZP-CSI-RS-Resources* using their *ZP-CSI-RS-ResourceIds*.

***ZP-CSI-RS-ResourceSet* information element**

```
-- ASN1START
-- TAG-ZP-CSI-RS-RESOURCESET-START

ZP-CSI-RS-ResourceSet ::=
    zp-CSI-RS-ResourceSetId          SEQUENCE {
        zp-CSI-RS-ResourceSetId,
        zp-CSI-RS-ResourceIdList     SEQUENCE (SIZE(1..maxNrofZP-CSI-RS-ResourcesPerSet)) OF ZP-CSI-RS-ResourceId,
        ...
    }

-- TAG-ZP-CSI-RS-RESOURCESET-STOP
-- ASN1STOP
```

<i>ZP-CSI-RS-ResourceSet</i> field descriptions
<i>zp-CSI-RS-ResourceIdList</i> The list of <i>ZP-CSI-RS-ResourceId</i> identifying the <i>ZP-CSI-RS-Resource</i> elements belonging to this set.

— *ZP-CSI-RS-ResourceSetId*

The IE *ZP-CSI-RS-ResourceSetId* identifies a *ZP-CSI-RS-ResourceSet*.

***ZP-CSI-RS-ResourceSetId* information element**

```
-- ASN1START
-- TAG-ZP-CSI-RS-RESOURCESETID-START

ZP-CSI-RS-ResourceSetId ::=
    INTEGER (0..maxNrofZP-CSI-RS-ResourceSets-1)

-- TAG-ZP-CSI-RS-RESOURCESETID-STOP
-- ASN1STOP
```

6.3.3 UE capability information elements

– *AccessStratumRelease*

The IE *AccessStratumRelease* indicates the release supported by the UE.

***AccessStratumRelease* information element**

```
-- ASN1START
-- TAG-ACCESSSTRATUMRELEASE-START

AccessStratumRelease ::= ENUMERATED {
    rel15, rel16, rel17, rel18, spare4, spare3, spare2, spare1, ... }

-- TAG-ACCESSSTRATUMRELEASE-STOP
-- ASN1STOP
```

– *AerialParameters*

The IE *AerialParameters* is used to convey the capabilities supported by the UE for aerial operation.

***AerialParameters* information element**

```
-- ASN1START
-- TAG-AERIALPARAMETERS-START

AerialParameters-r18 ::= SEQUENCE {
    -- Support of Aerial UE features
    aerialUE-Capability-r18          ENUMERATED {supported}                OPTIONAL,
    -- Support of altitude measurement and event H1/H2-triggered reporting
    altitudeMeas-r18                 ENUMERATED {supported}                OPTIONAL,
    -- Support of altitude based measurement configuration of SSB-ToMeasure
    altitudeBasedSSB-ToMeasure-r18   ENUMERATED {supported}                OPTIONAL,
    -- Support of events A3H1, A3H2, A4H1, A4H2, A5H1, A5H2
    eventAxHy-r18                     ENUMERATED {supported}                OPTIONAL,
    -- Support of flight path reporting
    flightPathReporting-r18           ENUMERATED {supported}                OPTIONAL,
    -- Support of flight path availability indication via UAI
    flightPathAvailabilityIndicationUAI-r18  ENUMERATED {supported}          OPTIONAL,
    -- Support of numberOfTriggeringCells for eventA3, eventA4, and eventA5, and additionally, if the UE supports eventAxHy-r18,
    -- support of numberOfTriggeringCells for eventA3H1, eventA3H2, eventA4H1, eventA4H2, eventA5H1, and eventA5H2
    multipleCellsMeasExtension-r18     ENUMERATED {supported}                OPTIONAL,
    -- Support of handling aerial-specific Ns value(s) and Pmax list broadcasted by the cell
    nr-NS-PmaxListAerial-r18           ENUMERATED {supported}                OPTIONAL,
    -- Support of reporting only the measurement report corresponding to the event with the smallest value between the
    -- altitude of the UAV and the altitude threshold for which the altitude-related entering condition e.g. A3H1-2 is satisfied, when
    -- multiple events of the same type (Hx or AxHy) for the same MO (for AxHy) are triggered simultaneously.
    simulMultiTriggerSingleMeasReport-r18  ENUMERATED {supported}            OPTIONAL,
```



```

-- Support of A2X service(s) using PC5 Sidelink and dedicated resource pool for A2X service(s)
sl-A2X-Service-r18          ENUMERATED {brid, daa, bridAndDAA} OPTIONAL,
...
}

-- TAG-AERIALPARAMETERS-STOP
-- ASN1STOP

```

– *AppLayerMeasParameters*

The IE *AppLayerMeasParameters* is used to convey the capabilities supported by the UE for application layer measurements.

AppLayerMeasParameters information element

```

-- ASN1START
-- TAG-APPLAYERMEASPARAMETERS-START

AppLayerMeasParameters-r17 ::= SEQUENCE {
    qoe-Streaming-MeasReport-r17    ENUMERATED {supported} OPTIONAL,
    qoe-MTSI-MeasReport-r17        ENUMERATED {supported} OPTIONAL,
    qoe-VR-MeasReport-r17          ENUMERATED {supported} OPTIONAL,
    ran-VisibleQoE-Streaming-MeasReport-r17  ENUMERATED {supported} OPTIONAL,
    ran-VisibleQoE-VR-MeasReport-r17  ENUMERATED {supported} OPTIONAL,
    ul-MeasurementReportAppLayer-Seg-r17  ENUMERATED {supported} OPTIONAL,
    ...,
    [
        qoe-IdleInactiveMeasReport-r18    ENUMERATED {supported} OPTIONAL,
        qoe-NRDC-MeasReport-r18          ENUMERATED {supported} OPTIONAL,
        qoe-AdditionalMemoryMeasReport-r18  ENUMERATED {kB128, kB256, kB512, kB1024} OPTIONAL,
        qoe-PriorityBasedDiscarding-r18    ENUMERATED {supported} OPTIONAL,
        srb5-r18                          ENUMERATED {supported} OPTIONAL
    ]
}

-- TAG-APPLAYERMEASPARAMETERS-STOP
-- ASN1STOP

```

– *BandCombinationList*

The IE *BandCombinationList* contains a list of NR CA, NR non-CA and/or MR-DC band combinations (also including DL only or UL only band).

BandCombinationList information element

```

-- ASN1START
-- TAG-BANDCOMBINATIONLIST-START

BandCombinationList ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination

```

BandCombinationList-v1540 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1540

BandCombinationList-v1550 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1550

BandCombinationList-v1560 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1560

BandCombinationList-v1570 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1570

BandCombinationList-v1580 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1580

BandCombinationList-v1590 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1590

BandCombinationList-v15g0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v15g0

BandCombinationList-v15n0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v15n0

BandCombinationList-v1610 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1610

BandCombinationList-v1630 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1630

BandCombinationList-v1640 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1640

BandCombinationList-v1650 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1650

BandCombinationList-v1680 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1680

BandCombinationList-v1690 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1690

BandCombinationList-v16a0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v16a0

BandCombinationList-v16j0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v16j0

BandCombinationList-v1700 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1700

BandCombinationList-v1720 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1720

BandCombinationList-v1730 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1730

BandCombinationList-v1740 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1740

BandCombinationList-v1760 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1760

BandCombinationList-v1770 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1770

BandCombinationList-v1780 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1780

BandCombinationList-v1790 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1790

BandCombinationList-v17b0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v17b0

BandCombinationList-v1800 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1800

BandCombinationList-v1830 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1830

```

BandCombinationList-v1840 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1840
BandCombinationList-v1860 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-v1860
BandCombinationList-UplinkTxSwitch-r16 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-r16
BandCombinationList-UplinkTxSwitch-v1630 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1630
BandCombinationList-UplinkTxSwitch-v1640 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1640
BandCombinationList-UplinkTxSwitch-v1650 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1650
BandCombinationList-UplinkTxSwitch-v1670 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1670
BandCombinationList-UplinkTxSwitch-v1690 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1690
BandCombinationList-UplinkTxSwitch-v16a0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v16a0
BandCombinationList-UplinkTxSwitch-v16e0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v16e0
BandCombinationList-UplinkTxSwitch-v16j0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v16j0
BandCombinationList-UplinkTxSwitch-v1700 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1700
BandCombinationList-UplinkTxSwitch-v1720 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1720
BandCombinationList-UplinkTxSwitch-v1730 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1730
BandCombinationList-UplinkTxSwitch-v1740 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1740
BandCombinationList-UplinkTxSwitch-v1760 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1760
BandCombinationList-UplinkTxSwitch-v1770 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1770
BandCombinationList-UplinkTxSwitch-v1780 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1780
BandCombinationList-UplinkTxSwitch-v1790 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1790
BandCombinationList-UplinkTxSwitch-v17b0 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v17b0
BandCombinationList-UplinkTxSwitch-v1800 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1800
BandCombinationList-UplinkTxSwitch-v1830 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1830
BandCombinationList-UplinkTxSwitch-v1840 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1840
BandCombinationList-UplinkTxSwitch-v1860 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombination-UplinkTxSwitch-v1860

BandCombination ::= SEQUENCE {
    bandList SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParameters,
    featureSetCombination FeatureSetCombinationId,
    ca-ParametersEUTRA CA-ParametersEUTRA OPTIONAL,
    ca-ParametersNR CA-ParametersNR OPTIONAL,
    mrdc-Parameters MRDC-Parameters OPTIONAL,
}

```

supportedBandwidthCombinationSet	BIT STRING (SIZE (1..32))	OPTIONAL,
powerClass-v1530	ENUMERATED {pc2}	OPTIONAL
}		
BandCombination-v1540 ::=	SEQUENCE {	
bandList-v1540	SEQUENCE (SIZE (1..maxSimultaneousBands))	OF BandParameters-v1540,
ca-ParametersNR-v1540	CA-ParametersNR-v1540	OPTIONAL
}		
BandCombination-v1550 ::=	SEQUENCE {	
ca-ParametersNR-v1550	CA-ParametersNR-v1550	
}		
BandCombination-v1560 ::=	SEQUENCE {	
ne-DC-BC	ENUMERATED {supported}	OPTIONAL,
ca-ParametersNRDC	CA-ParametersNRDC	OPTIONAL,
ca-ParametersEUTRA-v1560	CA-ParametersEUTRA-v1560	OPTIONAL,
ca-ParametersNR-v1560	CA-ParametersNR-v1560	OPTIONAL
}		
BandCombination-v1570 ::=	SEQUENCE {	
ca-ParametersEUTRA-v1570	CA-ParametersEUTRA-v1570	
}		
BandCombination-v1580 ::=	SEQUENCE {	
mrdc-Parameters-v1580	MRDC-Parameters-v1580	
}		
BandCombination-v1590 ::=	SEQUENCE {	
supportedBandwidthCombinationSetIntraENDC	BIT STRING (SIZE (1..32))	OPTIONAL,
mrdc-Parameters-v1590	MRDC-Parameters-v1590	
}		
BandCombination-v15g0 ::=	SEQUENCE {	
ca-ParametersNR-v15g0	CA-ParametersNR-v15g0	OPTIONAL,
ca-ParametersNRDC-v15g0	CA-ParametersNRDC-v15g0	OPTIONAL,
mrdc-Parameters-v15g0	MRDC-Parameters-v15g0	OPTIONAL
}		
BandCombination-v15n0 ::=	SEQUENCE {	
mrdc-Parameters-v15n0	MRDC-Parameters-v15n0	
}		
BandCombination-v1610 ::=	SEQUENCE {	
bandList-v1610	SEQUENCE (SIZE (1..maxSimultaneousBands))	OF BandParameters-v1610 OPTIONAL,
ca-ParametersNR-v1610	CA-ParametersNR-v1610	OPTIONAL,
ca-ParametersNRDC-v1610	CA-ParametersNRDC-v1610	OPTIONAL,
powerClass-v1610	ENUMERATED {pc1dot5}	OPTIONAL,
powerClassNRPart-r16	ENUMERATED {pc1, pc2, pc3, pc5}	OPTIONAL,
featureSetCombinationDAPS-r16	FeatureSetCombinationId	OPTIONAL,
mrdc-Parameters-v1620	MRDC-Parameters-v1620	OPTIONAL
}		
BandCombination-v1630 ::=	SEQUENCE {	
ca-ParametersNR-v1630	CA-ParametersNR-v1630	OPTIONAL,

ca-ParametersNRDC-v1630	CA-ParametersNRDC-v1630	OPTIONAL,
mrhc-Parameters-v1630	MRDC-Parameters-v1630	OPTIONAL,
supportedTxBandCombListPerBC-Sidelink-r16	BIT STRING (SIZE (1..maxBandComb))	OPTIONAL,
supportedRxBandCombListPerBC-Sidelink-r16	BIT STRING (SIZE (1..maxBandComb))	OPTIONAL,
scalingFactorTxSidelink-r16	SEQUENCE (SIZE (1..maxBandComb)) OF ScalingFactorSidelink-r16	OPTIONAL,
scalingFactorRxSidelink-r16	SEQUENCE (SIZE (1..maxBandComb)) OF ScalingFactorSidelink-r16	OPTIONAL
}		
BandCombination-v1640 ::=	SEQUENCE {	
ca-ParametersNR-v1640	CA-ParametersNR-v1640	OPTIONAL,
ca-ParametersNRDC-v1640	CA-ParametersNRDC-v1640	OPTIONAL
}		
BandCombination-v1650 ::=	SEQUENCE {	
ca-ParametersNRDC-v1650	CA-ParametersNRDC-v1650	OPTIONAL
}		
BandCombination-v1680 ::=	SEQUENCE {	
intrabandConcurrentOperationPowerClass-r16	SEQUENCE (SIZE (1..maxBandComb)) OF IntraBandPowerClass-r16	OPTIONAL
}		
BandCombination-v1690 ::=	SEQUENCE {	
dummy	CA-ParametersNR-v1690	OPTIONAL
}		
BandCombination-v16a0 ::=	SEQUENCE {	
ca-ParametersNR-v16a0	CA-ParametersNR-v16a0	OPTIONAL,
ca-ParametersNRDC-v16a0	CA-ParametersNRDC-v16a0	OPTIONAL
}		
BandCombination-v16j0 ::=	SEQUENCE {	
ca-ParametersNR-v16j0	CA-ParametersNR-v1690	OPTIONAL,
ca-ParametersNRDC-v16j0	CA-ParametersNRDC-v16j0	OPTIONAL
}		
BandCombination-v1700 ::=	SEQUENCE {	
ca-ParametersNR-v1700	CA-ParametersNR-v1700	OPTIONAL,
ca-ParametersNRDC-v1700	CA-ParametersNRDC-v1700	OPTIONAL,
mrhc-Parameters-v1700	MRDC-Parameters-v1700	OPTIONAL,
bandList-v1710	SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParameters-v1710	OPTIONAL,
supportedBandCombListPerBC-SL-RelayDiscovery-r17	BIT STRING (SIZE (1..maxBandComb))	OPTIONAL,
supportedBandCombListPerBC-SL-NonRelayDiscovery-r17	BIT STRING (SIZE (1..maxBandComb))	OPTIONAL
}		
BandCombination-v1720 ::=	SEQUENCE {	
ca-ParametersNR-v1720	CA-ParametersNR-v1720	OPTIONAL,
ca-ParametersNRDC-v1720	CA-ParametersNRDC-v1720	OPTIONAL
}		
BandCombination-v1730 ::=	SEQUENCE {	
ca-ParametersNR-v1730	CA-ParametersNR-v1730	OPTIONAL,
ca-ParametersNRDC-v1730	CA-ParametersNRDC-v1730	OPTIONAL,
bandList-v1730	SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParameters-v1730	OPTIONAL
}		

```

BandCombination-v1740 ::=
    dummy
}
SEQUENCE {
    CA-ParametersNR-v1740
OPTIONAL

BandCombination-v1760 ::=
    ca-ParametersNR-v1760
    ca-ParametersNRDC-v1760
}
SEQUENCE {
    CA-ParametersNR-v1760,
    CA-ParametersNRDC-v1760

BandCombination-v1770 ::=
    bandList-v1770
    mrdc-Parameters-v1770
    ca-ParametersNR-v1770
}
SEQUENCE {
    SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParameters-v1770,
    MRDC-Parameters-v1770
OPTIONAL,
    CA-ParametersNR-v1770
OPTIONAL

BandCombination-v1780 ::=
    ca-ParametersNR-v1780
    ca-ParametersNRDC-v1780
    bandList-v1780
    mrdc-Parameters-v1780
}
SEQUENCE {
    CA-ParametersNR-v1780
OPTIONAL,
    CA-ParametersNRDC-v1780
OPTIONAL,
    SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParameters-v1780
OPTIONAL,
    MRDC-Parameters-v1770
OPTIONAL

BandCombination-v1790 ::=
    supportedIntraENDC-BandCombinationList-r17
OPTIONAL
}
SEQUENCE {
    SEQUENCE (SIZE (1..maxNrofIntraEndc-Components-r17)) OF SupportedIntraENDC-BandCombination-r17

BandCombination-v17b0 ::=
    ca-ParametersNR-v17b0
    ca-ParametersNRDC-v17b0
}
SEQUENCE {
    CA-ParametersNR-v1740
OPTIONAL,
    CA-ParametersNRDC-v17b0
OPTIONAL

BandCombination-v1800 ::=
    ca-ParametersNR-v1800
    ca-ParametersNRDC-v1800
    supportedBandCombListPerBC-SL-U2U-RelayDiscovery-r18
    bandList-v1810
}
SEQUENCE {
    CA-ParametersNR-v1800
OPTIONAL,
    CA-ParametersNRDC-v1800
OPTIONAL,
    BIT STRING (SIZE (1..maxBandComb))
OPTIONAL,
    SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParameters-v1810
OPTIONAL

BandCombination-v1830 ::=
    ca-ParametersNR-v1830
    ca-ParametersNRDC-v1830
}
SEQUENCE {
    CA-ParametersNR-v1830
OPTIONAL,
    CA-ParametersNRDC-v1830
OPTIONAL

BandCombination-v1840 ::=
    mrdc-Parameters-v1840
}
SEQUENCE {
    MRDC-Parameters-v1840
OPTIONAL

BandCombination-v1860 ::=
    ca-ParametersNR-v1860
}
SEQUENCE {
    CA-ParametersNR-v1860
OPTIONAL

BandCombination-UplinkTxSwitch-r16 ::= SEQUENCE {

```

```

bandCombination-r16          BandCombination,
bandCombination-v1540        BandCombination-v1540          OPTIONAL,
bandCombination-v1560        BandCombination-v1560          OPTIONAL,
bandCombination-v1570        BandCombination-v1570          OPTIONAL,
bandCombination-v1580        BandCombination-v1580          OPTIONAL,
bandCombination-v1590        BandCombination-v1590          OPTIONAL,
bandCombination-v1610        BandCombination-v1610          OPTIONAL,
supportedBandPairListNR-r16  SEQUENCE (SIZE (1..maxULTxSwitchingBandPairs)) OF ULTxSwitchingBandPair-r16,
uplinkTxSwitching-OptionSupport-r16  ENUMERATED {switchedUL, dualUL, both}  OPTIONAL,
uplinkTxSwitching-PowerBoosting-r16  ENUMERATED {supported}  OPTIONAL,
...
[[
-- R4 16-5 UL-MIMO coherence capability for dynamic Tx switching between 3CC 1Tx-2Tx switching
uplinkTxSwitching-PUSCH-TransCoherence-r16  ENUMERATED {nonCoherent, fullCoherent}  OPTIONAL
]]
}

BandCombination-UplinkTxSwitch-v1630 ::= SEQUENCE {
    bandCombination-v1630          BandCombination-v1630          OPTIONAL
}

BandCombination-UplinkTxSwitch-v1640 ::= SEQUENCE {
    bandCombination-v1640          BandCombination-v1640          OPTIONAL
}

BandCombination-UplinkTxSwitch-v1650 ::= SEQUENCE {
    bandCombination-v1650          BandCombination-v1650          OPTIONAL
}

BandCombination-UplinkTxSwitch-v1670 ::= SEQUENCE {
    bandCombination-v15g0          BandCombination-v15g0          OPTIONAL
}

BandCombination-UplinkTxSwitch-v1690 ::= SEQUENCE {
    bandCombination-v1690          BandCombination-v1690          OPTIONAL
}

BandCombination-UplinkTxSwitch-v16a0 ::= SEQUENCE {
    bandCombination-v16a0          BandCombination-v16a0          OPTIONAL
}

BandCombination-UplinkTxSwitch-v16e0 ::= SEQUENCE {
    bandCombination-v15n0          BandCombination-v15n0          OPTIONAL
}

BandCombination-UplinkTxSwitch-v16j0 ::= SEQUENCE {
    bandCombination-v16j0          BandCombination-v16j0          OPTIONAL
}

BandCombination-UplinkTxSwitch-v1700 ::= SEQUENCE {
    bandCombination-v1700          BandCombination-v1700          OPTIONAL,
    -- R4 16-1/16-2/16-3 Dynamic Tx switching between 2CC/3CC 2Tx-2Tx/1Tx-2Tx switching
    supportedBandPairListNR-v1700 SEQUENCE (SIZE (1..maxULTxSwitchingBandPairs)) OF ULTxSwitchingBandPair-v1700  OPTIONAL,
    -- R4 16-6: UL-MIMO coherence capability for dynamic Tx switching between 2Tx-2Tx switching

```

```

    uplinkTxSwitchingBandParametersList-v1700 SEQUENCE (SIZE (1.. maxSimultaneousBands)) OF UplinkTxSwitchingBandParameters-v1700 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1720 ::= SEQUENCE {
    bandCombination-v1720 BandCombination-v1720 OPTIONAL,
    uplinkTxSwitching-OptionSupport2T2T-r17 ENUMERATED {switchedUL, dualUL, both} OPTIONAL
}

BandCombination-UplinkTxSwitch-v1730 ::= SEQUENCE {
    bandCombination-v1730 BandCombination-v1730 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1740 ::= SEQUENCE {
    bandCombination-v1740 BandCombination-v1740 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1760 ::= SEQUENCE {
    bandCombination-v1760 BandCombination-v1760 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1770 ::= SEQUENCE {
    bandCombination-v1770 BandCombination-v1770 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1780 ::= SEQUENCE {
    bandCombination-v1780 BandCombination-v1780 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1790 ::= SEQUENCE {
    bandCombination-v1790 BandCombination-v1790 OPTIONAL
}

BandCombination-UplinkTxSwitch-v17b0 ::= SEQUENCE {
    bandCombination-v17b0 BandCombination-v17b0 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1800 ::= SEQUENCE {
    bandCombination-v1800 BandCombination-v1800 OPTIONAL,
    supportedBandPairListNR-r18 SEQUENCE (SIZE (1..maxULTxSwitchingBandPairs)) OF ULTxSwitchingBandPair-r18 OPTIONAL,
    -- R1 49-Y: Minimum separation time for two uplink switching on more than 2 bands within any two consecutive reference slots
    uplinkTxSwitchingMinimumSeparationTime-r18 ENUMERATED {n0us, n500us} OPTIONAL,
    -- R4 38-4: Switching Period for unaffected Band for Dual UL
    uplinkTxSwitchingAdditionalPeriodDualUL-List-r18 SEQUENCE (SIZE (1..maxULTxSwitchingBetweenBandPairs-r18)) OF
        UplinkTxSwitchingAdditionalPeriodDualUL-r18 OPTIONAL,
    -- R4 38-6: Switching period restriction for fallback band combination
    switchingPeriodRestriction-r18 ENUMERATED {true} OPTIONAL
}

BandCombination-UplinkTxSwitch-v1830 ::= SEQUENCE {
    bandCombination-v1830 BandCombination-v1830 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1840 ::= SEQUENCE {
    bandCombination-v1840 BandCombination-v1840 OPTIONAL,

```



```

    supportedBandPairListNR-v1840          SEQUENCE (SIZE (1..maxULTxSwitchingBandPairs)) OF ULTxSwitchingBandPair-v1840 OPTIONAL
}

BandCombination-UplinkTxSwitch-v1860 ::= SEQUENCE {
    bandCombination-v1860                  BandCombination-v1860
} OPTIONAL

ULTxSwitchingBandPair-r16 ::= SEQUENCE {
    bandIndexUL1-r16                      INTEGER(1..maxSimultaneousBands),
    bandIndexUL2-r16                      INTEGER(1..maxSimultaneousBands),
    uplinkTxSwitchingPeriod-r16           ENUMERATED {n35us, n140us, n210us},
    uplinkTxSwitching-DL-Interruption-r16 BIT STRING (SIZE(1..maxSimultaneousBands)) OPTIONAL
}

ULTxSwitchingBandPair-v1700 ::= SEQUENCE {
    uplinkTxSwitchingPeriod2T2T-r17       ENUMERATED {n35us, n140us, n210us} OPTIONAL
}

ULTxSwitchingBandPair-r18 ::= SEQUENCE {
    bandIndexUL1-r18                      INTEGER(1..maxSimultaneousBands),
    bandIndexUL2-r18                      INTEGER(1..maxSimultaneousBands),
    -- R1 49-X: Supported switching option for each band pair in the band combination for UL Tx switching across more than 2 bands
    uplinkTxSwitchingOptionForBandPair-r18 ENUMERATED {switchedUL, dualUL, both},
    -- R4 38-1: Switching period for dynamic UL Tx switching across up to 4 bands in case of inter-band CA, SUL up to two TAGs
    uplinkTxSwitchingPeriodForBandPair-r18 SEQUENCE {
        switchingPeriodFor2T-r18          ENUMERATED {n35us, n140us, n210us} OPTIONAL,
        switchingPeriodFor1T-r18          ENUMERATED {n35us, n140us, n210us}
    },
    -- R4 38-2: Application of DL interruptions due to dynamic UL Tx switching
    uplinkTxSwitching-DL-Interruption-r18 BIT STRING (SIZE(1..maxSimultaneousBands)) OPTIONAL,
    -- R4 38-3: Switching Period for unaffected Band for Dual UL
    uplinkTxSwitchingPeriodUnaffectedBandDualUL-List-r18 SEQUENCE (SIZE (1..maxSimultaneousBands-2-r18)) OF
        SwitchingPeriodUnaffectedBandDualUL-r18 OPTIONAL
}

ULTxSwitchingBandPair-v1840 ::= SEQUENCE {
    -- R1 49-Z: Support of 2-band configuration of 1T-1T UL Tx switching by using Rel-18 UL Tx switching configurations
    configured1T1T-OnTwoBands-r18         ENUMERATED {supported} OPTIONAL
}

UplinkTxSwitchingBandParameters-v1700 ::= SEQUENCE {
    bandIndex-r17                        INTEGER(1..maxSimultaneousBands),
    -- R4 38-5: UL-MIMO coherence capability for dynamic Tx switching between 2Tx-2Tx switching among up to 4 bands
    uplinkTxSwitching2T2T-PUSCH-TransCoherence-r17 ENUMERATED {nonCoherent, fullCoherent} OPTIONAL
}

UplinkTxSwitchingAdditionalPeriodDualUL-r18 ::= SEQUENCE {
    uplinkTxSwitchingBetweenBandPairs-r18 SEQUENCE {
        bandPairIndex1-r18                INTEGER(1.. maxULTxSwitchingBandPairs),
        anotherBandPairOrBand-r18         CHOICE {
            bandPairIndex2-r18            INTEGER(1.. maxULTxSwitchingBandPairs),
            bandIndex-r18                  INTEGER(1..maxSimultaneousBands)
        }
    },
}

```

```

-- R4 38-4: Additional switching Period for switching case across three or four bands for Dual UL
switchingAdditionalPeriodDualUL-r18      ENUMERATED {n35us, n140us, n210us}
}

SwitchingPeriodUnaffectedBandDualUL-r18 ::=
    bandIndexUnaffected-r18              SEQUENCE {
        periodUnaffectedBandDualUL-r18  INTEGER(1..maxSimultaneousBands),
        maintainedUL-Trans-r18           CHOICE {
            periodOnULBands-r18          NULL,
            ENUMERATED {n35us, n140us, n210us}
        }
    }

BandParameters ::=
    eutra                                CHOICE {
        SEQUENCE {
            bandEUTRA
            ca-BandwidthClassDL-EUTRA    FreqBandIndicatorEUTRA,
            ca-BandwidthClassUL-EUTRA    CA-BandwidthClassEUTRA                OPTIONAL,
                                          CA-BandwidthClassEUTRA                OPTIONAL
        },
        nr                                SEQUENCE {
            bandNR
            ca-BandwidthClassDL-NR        FreqBandIndicatorNR,
            ca-BandwidthClassUL-NR        CA-BandwidthClassNR                OPTIONAL,
                                          CA-BandwidthClassNR                OPTIONAL
        }
    }

BandParameters-v1540 ::=
    srs-CarrierSwitch                    SEQUENCE {
        nr                                CHOICE {
            srs-SwitchingTimesListNR     SEQUENCE {
                SEQUENCE (SIZE (1..maxSimultaneousBands)) OF SRS-SwitchingTimeNR
            },
            eutra                         SEQUENCE {
                srs-SwitchingTimesListEUTRA SEQUENCE (SIZE (1..maxSimultaneousBands)) OF SRS-SwitchingTimeEUTRA
            }
        },
        srs-TxSwitch                      SEQUENCE {
            supportedSRS-TxPortSwitch    ENUMERATED {t1r2, t1r4, t2r4, t1r4-t2r4, t1r1, t2r2, t4r4, notSupported},
            txSwitchImpactToRx            INTEGER (1..32)                OPTIONAL,
            txSwitchWithAnotherBand       INTEGER (1..32)                OPTIONAL,
                                          OPTIONAL
        }
    }

BandParameters-v1610 ::=
    srs-TxSwitch-v1610                  SEQUENCE {
        supportedSRS-TxPortSwitch-v1610 SEQUENCE {
            ENUMERATED {t1r1-t1r2, t1r1-t1r2-t1r4, t1r1-t1r2-t2r2-t2r4, t1r1-t1r2-t2r2-t1r4-t2r4,
            t1r1-t2r2, t1r1-t2r2-t4r4}
        },
        OPTIONAL
    }

BandParameters-v1710 ::=
    -- R1 23-8-3    SRS Antenna switching for >4Rx
    srs-AntennaSwitchingBeyond4Rx-r17    SEQUENCE {
        -- 1. Support of SRS antenna switching xTyR with y>4
        supportedSRS-TxPortSwitchBeyond4Rx-r17 BIT STRING (SIZE (11)),
    }

```

```

-- 2. Report the entry number of the first-listed band with UL in the band combination that affects this DL
entryNumberAffectBeyond4Rx-r17      INTEGER (1..32)      OPTIONAL,
-- 3. Report the entry number of the first-listed band with UL in the band combination that switches together with this UL
entryNumberSwitchBeyond4Rx-r17      INTEGER (1..32)      OPTIONAL
}
}

BandParameters-v1730 ::= SEQUENCE {
-- R1 39-3-2    Affected bands for inter-band CA during SRS carrier switching
srs-SwitchingAffectedBandsListNR-r17 SEQUENCE (SIZE (1..maxSimultaneousBands)) OF SRS-SwitchingAffectedBandsNR-r17
}

BandParameters-v1770 ::= SEQUENCE {
ca-BandwidthClassDL-NR-r17    CA-BandwidthClassNR-r17      OPTIONAL,
ca-BandwidthClassUL-NR-r17    CA-BandwidthClassNR-r17      OPTIONAL
}

BandParameters-v1780 ::= SEQUENCE {
ca-BandwidthClassDL-NR-r17    CA-BandwidthClassNR-r17      OPTIONAL,
ca-BandwidthClassUL-NR-r17    CA-BandwidthClassNR-r17      OPTIONAL,
supportedAggBW-FR2-r17        SEQUENCE {
supportedAggBW-DL-r17        SupportedAggBandwidth-r17    OPTIONAL,
supportedAggBW-UL-r17        SupportedAggBandwidth-r17    OPTIONAL
} OPTIONAL
}

BandParameters-v1810 ::= SEQUENCE {
-- R1 40-5-4: SRS 8 Tx ports-antenna switching
srs-AntennaSwitching8T8R-r18 SEQUENCE {
antennaSwitch8T8R-r18      ENUMERATED {noTdm, tdmAndNoTdm}    OPTIONAL,
downgradeConfig-r18        CHOICE {
empty-r18                  NULL,
downgrade-r18              BIT STRING (SIZE (11))
}
entryNumberAffect-r18      INTEGER (1..32)                    OPTIONAL,
entryNumberSwitch-r18      INTEGER (1..32)                    OPTIONAL
}
}

ScalingFactorSidelink-r16 ::= ENUMERATED {f0p4, f0p75, f0p8, f1}

IntraBandPowerClass-r16 ::= ENUMERATED {pc2, pc3, spare6, spare5, spare4, spare3, spare2, spare1}

SRS-SwitchingAffectedBandsNR-r17 ::= BIT STRING (SIZE (1..maxSimultaneousBands))

SupportedIntraENDC-BandCombination-r17 ::= SEQUENCE {
supportedBandwidthCombinationSetIntraENDC-v1790 BIT STRING (SIZE (1..32))    OPTIONAL,
mrdc-Parameters-v1790                          MRDC-Parameters-v1790        OPTIONAL
}

-- TAG-BANDCOMBINATIONLIST-STOP
-- ASN1STOP

```

BandCombination field descriptions
BandCombinationList-v1540, BandCombinationList-v1550, BandCombinationList-v1560, BandCombinationList-v1570, BandCombinationList-v1580, BandCombinationList-v1590, BandCombinationList-v15g0, BandCombinationList-v15n0, BandCombinationList-v1610, BandCombinationList-v1630, BandCombinationList-v1640, BandCombinationList-v1650, BandCombinationList-v1680, BandCombinationList-v1690, BandCombinationList-v16a0, BandCombinationList-v16j0, BandCombinationList-v1700, BandCombinationList-v1720, BandCombinationList-v1730, BandCombinationList-v1760, BandCombinationList-v1780, BandCombinationList-v1790, BandCombinationList-v17b0, BandCombinationList-v1800, BandCombinationList-v1830, BandCombinationList-v1840, BandCombinationList-v1860 The UE shall include the same number of entries, and listed in the same order, as in <i>BandCombinationList</i> (without suffix). If the field is included in <i>supportedBandCombinationListNEDC-Only-v1610</i>, the UE shall include the same number of entries, and listed in the same order, as in <i>BandCombinationList</i> of <i>supportedBandCombinationListNEDC-Only</i> (without suffix) field. If the field is included in <i>supportedBandCombinationListNEDC-Only-v15a0</i>, the UE shall include the same number of entries, and listed in the same order, as in <i>BandCombinationList</i> (without suffix) of <i>supportedBandCombinationListNEDC-Only</i> (without suffix) field.
BandCombinationList-UplinkTxSwitch-r16, BandCombinationList-UplinkTxSwitch-v1630, BandCombinationList-UplinkTxSwitch-v1640, BandCombinationList-UplinkTxSwitch-v1650, BandCombinationList-UplinkTxSwitch-v1690, BandCombinationList-UplinkTxSwitch-v16a0, BandCombinationList-UplinkTxSwitch-v16e0, BandCombinationList-UplinkTxSwitch-v16j0, BandCombinationList-UplinkTxSwitch-v1700, BandCombinationList-UplinkTxSwitch-v1720, BandCombinationList-UplinkTxSwitch-v1730, BandCombinationList-UplinkTxSwitch-v1760, BandCombinationList-UplinkTxSwitch-v1780, BandCombinationList-UplinkTxSwitch-v1790, BandCombinationList-UplinkTxSwitch-v17b0, BandCombinationList-UplinkTxSwitch-v1800, BandCombinationList-UplinkTxSwitch-v1830, BandCombinationList-UplinkTxSwitch-v1840, BandCombinationList-UplinkTxSwitch-v1860 The UE shall include the same number of entries, and listed in the same order, as in <i>BandCombinationList-UplinkTxSwitch-r16</i>. For the field of <i>supportedBandCombinationList-UplinkTxSwitch-v1700</i>, if the UE does not support 2Tx-2Tx switching for a given band combination, the field of <i>supportedBandPairListNR-v1700</i> in the corresponding entry is absent.
ca-ParametersNRDC If the field (without suffix) is included for a band combination in the NR capability container, the field (without suffix) indicates support of NR-DC. Otherwise, the field is absent. If a version of the field (with suffix) is absent for a band combination, <i>ca-ParametersNR</i> field version in <i>BandCombination</i> corresponding to the <i>ca-ParametersNR-ForDC</i> field version in the field (with suffix) is applicable to the UE configured with NR-DC for the band combination.
featureSetCombinationDAPS If this field is present for a band combination, it reports the feature set combination supported for the band combination when any DAPS bearer is configured.
ne-DC-BC If the field is included for a band combination in the MR-DC capability container, the field indicates support of NE-DC. Otherwise, the field is absent.
supportedBandPairListNR-r16, supportedBandPairListNR-v1700 Indicates a list of band pair supporting UL Tx switching as defined in TS 38.101-1 [15] for a given band combination. A UE supporting 2Tx-2Tx switching should include both of <i>supportedBandPairListNR-r16</i> and <i>supportedBandPairListNR-v1700</i>. And the UE shall include the same number of entries listed in the same order as in <i>supportedBandPairListNR-r16</i>. If the UE does not support 2Tx-2Tx switching for a given band pair, the field of <i>uplinkTxSwitchingPeriod2T2T</i> in the corresponding entry is absent.
supportedBandPairListNR-r18, supportedBandPairListNR-v1840 Indicates a list of band pair supporting UL Tx switching up to 4 bands as defined in TS 38.101-1 [15] for a given band combination. The UE shall include all the possible band pairs. If <i>supportedBandPairListNR-v1840</i> is included, the UE shall include the same number of entries listed in the same order as in <i>supportedBandPairListNR-r18</i>. For a band pair only supporting 1Tx-1Tx switching, the UE should include <i>switchingPeriodFor1T</i> in <i>ULTxSwitchingBandPair-r18</i>. For a band pair supporting 1Tx-2Tx switching, the UE always supports 1Tx-1Tx switching, and the UE should include <i>switchingPeriodFor1T</i> in <i>ULTxSwitchingBandPair-r18</i>. For a band pair supporting 2Tx-2Tx switching, the UE always supports 1Tx-2Tx switching and 1Tx-1Tx switching, the UE should include <i>switchingPeriodFor2T</i> as well as <i>switchingPeriodFor1T</i> in <i>ULTxSwitchingBandPair-r18</i>.
srs-SwitchingTimesListNR Indicates, for a particular pair of NR bands, the RF retuning time when switching between a NR carrier corresponding to this band entry and another (PUSCH-less) NR carrier corresponding to the band entry in the order indicated below: - For the first NR band, the UE shall include the same number of entries for NR bands as in <i>bandList</i>, i.e. first entry corresponds to first NR band in <i>bandList</i> and so on, - For the second NR band, the UE shall include one entry less, i.e. first entry corresponds to the second NR band in <i>bandList</i> and so on - And so on

srs-SwitchingTimesListEUTRA

Indicates, for a particular pair of E-UTRA bands, the RF retuning time when switching between an E-UTRA carrier corresponding to this band entry and another (PUSCH-less) E-UTRA carrier corresponding to the band entry in the order indicated below:

- For the first E-UTRA band, the UE shall include the same number of entries for E-UTRA bands as in *bandList*, i.e. first entry corresponds to first E-UTRA band in *bandList* and so on,
- For the second E-UTRA band, the UE shall include one entry less, i.e. first entry corresponds to the second E-UTRA band in *bandList* and so on
- And so on

srs-TxSwitch

Indicates supported SRS antenna switch capability for the associated band. If the UE indicates support of *SRS-SwitchingTimeNR*, the UE is allowed to set this field for a band with associated *FeatureSetUplinkId* set to 0 for SRS carrier switching.

supportedIntraENDC-BandCombinationList

Indicates BCS and/or spectrum contiguity capability for each entry in a list of intra-band (NG)EN-DC components in an inter-band (NG)EN-DC band combination. The UE shall include the entries in the order corresponding to the order of NR band entries of the intra-band (NG)EN-DC components in the *bandList* in the inter-band (NG)EN-DC band combination (i.e., *BandCombination* without suffix).

uplinkTxSwitchingBandParametersList-v1700

Indicates a list of per band per band combination capabilities for UL Tx switching.

– ***BandCombinationListSidelinkEUTRA-NR***

The IE *BandCombinationListSidelinkEUTRA-NR* contains a list of V2X sidelink and NR sidelink band combinations.

BandCombinationListSidelinkEUTRA-NR information element

```
-- ASN1START
-- TAG-BANDCOMBINATIONLISTSIDELINKEUTRANR-START

BandCombinationListSidelinkEUTRA-NR-r16 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombinationParametersSidelinkEUTRA-NR-r16

BandCombinationListSidelinkEUTRA-NR-v1630 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombinationParametersSidelinkEUTRA-NR-v1630

BandCombinationListSidelinkEUTRA-NR-v1710 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombinationParametersSidelinkEUTRA-NR-v1710

BandCombinationParametersSidelinkEUTRA-NR-r16 ::= SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParametersSidelinkEUTRA-NR-r16

BandCombinationParametersSidelinkEUTRA-NR-v1630 ::= SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParametersSidelinkEUTRA-NR-v1630

BandCombinationParametersSidelinkEUTRA-NR-v1710 ::= SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParametersSidelinkEUTRA-NR-v1710

BandParametersSidelinkEUTRA-NR-r16 ::= CHOICE {
    eutra          SEQUENCE {
        bandParametersSidelinkEUTRA1-r16  OCTET STRING      OPTIONAL,
        bandParametersSidelinkEUTRA2-r16  OCTET STRING      OPTIONAL
    },
    nr             SEQUENCE {
        bandParametersSidelinkNR-r16      BandParametersSidelink-r16
    }
}
```

```

BandParametersSidelinkEUTRA-NR-v1630 ::= CHOICE {
    eutra
    nr
        tx-Sidelink-r16
        rx-Sidelink-r16
        sl-CrossCarrierScheduling-r16
    }
}

BandParametersSidelinkEUTRA-NR-v1710 ::= CHOICE {
    eutra
    nr
        --32-4
        sl-TransmissionMode2-PartialSensing-r17
        harq-TxProcessModeTwoSidelink-r17
        scs-CP-PatternTxSidelinkModeTwo-r17
        fr1-r17
            scs-15kHz-r17
            scs-30kHz-r17
            scs-60kHz-r17
        },
        fr2-r17
            scs-60kHz-r17
            scs-120kHz-r17
        }
        extendedCP-Mode2PartialSensing-r17
        dl-openLoopPC-Sidelink-r17
    }
    --32-2a: Receiving NR sidelink of PSFCH
    rx-sidelinkPSFCH-r17
    --32-5a-1
    tx-IUC-Scheme1-Mode2Sidelink-r17
    --32-5b-1
    tx-IUC-Scheme2-Mode2Sidelink-r17
}

BandParametersSidelink-r16 ::= SEQUENCE {
    freqBandSidelink-r16
    FreqBandIndicatorNR
}

-- TAG-BANDCOMBINATIONLISTSIDELINKETRANR-STOP
-- ASN1STOP

```

BandParametersSidelinkEUTRA-NR field descriptions

bandParametersSidelinkEUTRA1, bandParametersSidelinkEUTRA2

This field includes the *V2X-BandParameters-r14* and *V2X-BandParameters-v1530* IE as specified in 36.331 [10]. It is used for reporting the per-band capability for V2X sidelink communication.

– *BandCombinationListSL-Discovery*

The IE *BandCombinationListSL-Discovery* contains a list of NR Sidelink discovery band combinations.

BandCombinationListSidelinkSL-Discovery information element

```
-- ASN1START
-- TAG-BANDCOMBINATIONLISTSLDISCOVERY-START

BandCombinationListSL-Discovery-r17 ::= SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParametersSidelinkDiscovery-r17

BandParametersSidelinkDiscovery-r17 ::= SEQUENCE {
    sl-CrossCarrierScheduling-r17      ENUMERATED {supported}                OPTIONAL,
    --R1 32-4: Transmitting NR sidelink mode 2 with partial sensing
    sl-TransmissionMode2-PartialSensing-r17 SEQUENCE {
        harq-TxProcessModeTwoSidelink-r17 ENUMERATED {n8, n16},
        scs-CP-PatternTxSidelinkModeTwo-r17 CHOICE {
            fr1-r17 SEQUENCE {
                scs-15kHz-r17 BIT STRING (SIZE (16))                OPTIONAL,
                scs-30kHz-r17 BIT STRING (SIZE (16))                OPTIONAL,
                scs-60kHz-r17 BIT STRING (SIZE (16))                OPTIONAL,
            },
            fr2-r17 SEQUENCE {
                scs-60kHz-r17 BIT STRING (SIZE (16))                OPTIONAL,
                scs-120kHz-r17 BIT STRING (SIZE (16))                OPTIONAL,
            }
        },
        extendedCP-Mode2PartialSensing-r17 ENUMERATED {supported}        OPTIONAL,
        dl-openLoopPC-Sidelink-r17          ENUMERATED {supported}        OPTIONAL,
    }
    --R1 32-5a-1: Transmitting Inter-UE coordination scheme 1 in NR sidelink mode 2
    tx-IUC-Scheme1-Mode2Sidelink-r17      ENUMERATED {supported}          OPTIONAL
}

-- TAG-BANDCOMBINATIONLISTSLDISCOVERY-STOP
-- ASN1STOP
```

– *CA-BandwidthClassEUTRA*

The IE *CA-BandwidthClassEUTRA* indicates the E-UTRA CA bandwidth class as defined in TS 36.101 [22], table 5.6A-1.

CA-BandwidthClassEUTRA information element

```
-- ASN1START
-- TAG-CA-BANDWIDTHCLASSEUTRA-START

CA-BandwidthClassEUTRA ::= ENUMERATED {a, b, c, d, e, f, ...}
```

```
-- TAG-CA-BANDWIDTHCLASSEUTRA-STOP
-- ASN1STOP
```

— *CA-BandwidthClassNR*

The IE *CA-BandwidthClassNR* indicates the NR CA bandwidth class as defined in TS 38.101-1 [15], table 5.3A.5-1 and TS 38.101-2 [39], table 5.3A.4-1.

CA-BandwidthClassNR information element

```
-- ASN1START
-- TAG-CA-BANDWIDTHCLASSNR-START
```

```
-- R4 17-6: new CA BW Classes R2-R12
-- R4 17-7: new CA BW Classes V, W
```

```
CA-BandwidthClassNR ::= ENUMERATED {a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, ..., r2-v1730, r3-v1730, r4-v1730, r5-v1730, r6-
v1730, r7-v1730, r8-v1730, r9-v1730, r10-v1730, r11-v1730, r12-v1730, v-v1770, w-v1770 }
```

```
CA-BandwidthClassNR-r17 ::= ENUMERATED {r, s, t, u, ...}
```

```
-- TAG-CA-BANDWIDTHCLASSNR-STOP
-- ASN1STOP
```

— *CA-ParametersEUTRA*

The IE *CA-ParametersEUTRA* contains the E-UTRA part of band combination parameters for a given MR-DC band combination.

NOTE: If additional E-UTRA band combination parameters are defined in TS 36.331 [10], which are supported for MR-DC, they will be defined here as well.

CA-ParametersEUTRA information element

```
-- ASN1START
-- TAG-CA-PARAMETERSEUTRA-START
```

```
CA-ParameterseUTRA ::= SEQUENCE {
    multipleTimingAdvance          ENUMERATED {supported}          OPTIONAL,
    simultaneousRx-Tx              ENUMERATED {supported}          OPTIONAL,
    supportedNAICS-2CRS-AP         BIT STRING (SIZE (1..8))        OPTIONAL,
    additionalRx-Tx-PerformanceReq ENUMERATED {supported}          OPTIONAL,
    ue-CA-PowerClass-N             ENUMERATED {class2}              OPTIONAL,
    supportedBandwidthCombinationSetEUTRA-v1530 BIT STRING (SIZE (1..32)) OPTIONAL,
    ...
}
```

```
CA-ParametersEUTRA-v1560 ::= SEQUENCE {
    fd-MIMO-TotalWeightedLayers    INTEGER (2..128)                OPTIONAL
}
```



```

}

CA-ParametersEUTRA-v1570 ::=
    dl-1024QAM-TotalWeightedLayers

}

-- TAG-CA-PARAMETERSEUTRA-STOP
-- ASN1STOP

```

– *CA-ParametersNR*

The IE *CA-ParametersNR* contains carrier aggregation and inter-frequency DAPS handover related capabilities that are defined per band combination.

CA-ParametersNR information element

```

-- ASN1START
-- TAG-CA-PARAMETERSNR-START

CA-ParametersNR ::=
    dummy
    parallelTxSRS-PUCCH-PUSCH
    parallelTxPRACH-SRS-PUCCH-PUSCH
    simultaneousRXTxInterBandCA
    simultaneousRXTxSUL
    diffNumerologyAcrossPUCCH-Group
    diffNumerologyWithinPUCCH-GroupSmallerSCS
    supportedNumberTAG
    ...
}

CA-ParametersNR-v1540 ::=
    simultaneousSRS-AssocCSI-RS-AllCC
    csi-RS-IM-ReceptionForFeedbackPerBandComb
        maxNumberSimultaneousNZP-CSI-RS-ActBWP-AllCC
        totalNumberPortsSimultaneousNZP-CSI-RS-ActBWP-AllCC
    }
    simultaneousCSI-ReportsAllCC
    dualPA-Architecture

CA-ParametersNR-v1550 ::=
    dummy

CA-ParametersNR-v1560 ::=
    diffNumerologyWithinPUCCH-GroupLargerSCS

CA-ParametersNR-v15g0 ::=
    simultaneousRXTxInterBandCAPerBandPair
    simultaneousRXTxSULPerBandPair
    SimultaneousRXTxPerBandPair
    SimultaneousRXTxPerBandPair

```

```

}

CA-ParametersNR-v1610 ::= SEQUENCE {
  -- R1 9-3: Parallel MsgA and SRS/PUCCH/PUSCH transmissions across CCs in inter-band CA
  parallelTxMsgA-SRS-PUCCH-PUSCH-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 9-4: MsgA operation in a band combination including SUL
  msgA-SUL-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 10-9c: Joint search space group switching across multiple cells
  jointSearchSpaceSwitchAcrossCells-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 14-5: Half-duplex UE behaviour in TDD CA for same SCS
  half-DuplexTDD-CA-SameSCS-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 18-4: SCell dormancy within active time
  scellDormancyWithinActiveTime-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 18-4a: SCell dormancy outside active time
  scellDormancyOutsideActiveTime-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 18-6: Cross-carrier A-CSI RS triggering with different SCS
  crossCarrierA-CSI-trigDiffSCS-r16 ENUMERATED {higherA-CSI-SCS, lowerA-CSI-SCS, both} OPTIONAL,
  -- R1 18-6a: Default QCL assumption for cross-carrier A-CSI-RS triggering
  defaultQCL-CrossCarrierA-CSI-Trig-r16 ENUMERATED {diffOnly, both} OPTIONAL,
  -- R1 18-7: CA with non-aligned frame boundaries for inter-band CA
  interCA-NonAlignedFrame-r16 ENUMERATED {supported} OPTIONAL,
  simul-SRS-Trans-BC-r16 ENUMERATED {n2} OPTIONAL,
  interFreqDAPS-r16 SEQUENCE {
    interFreqAsyncDAPS-r16 ENUMERATED {supported} OPTIONAL,
    interFreqDiffSCS-DAPS-r16 ENUMERATED {supported} OPTIONAL,
    interFreqMultiUL-TransmissionDAPS-r16 ENUMERATED {supported} OPTIONAL,
    interFreqSemiStaticPowerSharingDAPS-Mode1-r16 ENUMERATED {supported} OPTIONAL,
    interFreqSemiStaticPowerSharingDAPS-Mode2-r16 ENUMERATED {supported} OPTIONAL,
    interFreqDynamicPowerSharingDAPS-r16 ENUMERATED {short, long} OPTIONAL,
    interFreqUL-TransCancellationDAPS-r16 ENUMERATED {supported} OPTIONAL,
  }
  codebookParametersPerBC-r16 CodebookParameters-v1610 OPTIONAL,
  -- R1 16-2a-10 Value of R for BD/CCE
  blindDetectFactor-r16 INTEGER (1..2) OPTIONAL,
  -- R1 11-2a: Capability on the number of CCs for monitoring a maximum number of BDs and non-overlapped CCEs per span when configured
  -- with DL CA with Rel-16 PDCCH monitoring capability on all the serving cells
  pdcch-MonitoringCA-r16 SEQUENCE {
    maxNumberOfMonitoringCC-r16 INTEGER (2..16),
    supportedSpanArrangement-r16 ENUMERATED {alignedOnly, alignedAndNonAligned} OPTIONAL,
  }
  -- R1 11-2c: Number of carriers for CCE/BD scaling with DL CA with mix of Rel. 16 and Rel. 15 PDCCH monitoring capabilities on
  -- different carriers
  pdcch-BlindDetectionCA-Mixed-r16 SEQUENCE {
    pdcch-BlindDetectionCA1-r16 INTEGER (1..15),
    pdcch-BlindDetectionCA2-r16 INTEGER (1..15),
    supportedSpanArrangement-r16 ENUMERATED {alignedOnly, alignedAndNonAligned} OPTIONAL,
  }
  -- R1 11-2d: Capability on the number of CCs for monitoring a maximum number of BDs and non-overlapped CCEs per span for MCG and for
  -- SCG when configured for NR-DC operation with Rel-16 PDCCH monitoring capability on all the serving cells
  pdcch-BlindDetectionMCG-UE-r16 INTEGER (1..14) OPTIONAL,
  pdcch-BlindDetectionSCG-UE-r16 INTEGER (1..14) OPTIONAL,
  -- R1 11-2e: Number of carriers for CCE/BD scaling for MCG and for SCG when configured for NR-DC operation with mix of Rel. 16 and
  -- Rel. 15 PDCCH monitoring capabilities on different carriers
  pdcch-BlindDetectionMCG-UE-Mixed-r16 SEQUENCE {

```

```

    pdcch-BlindDetectionMCG-UE1-r16          INTEGER (0..15),
    pdcch-BlindDetectionMCG-UE2-r16          INTEGER (0..15)
}
pdcch-BlindDetectionSCG-UE-Mixed-r16        SEQUENCE {
    pdcch-BlindDetectionSCG-UE1-r16          INTEGER (0..15),
    pdcch-BlindDetectionSCG-UE2-r16          INTEGER (0..15)
}
-- R1 18-5 cross-carrier scheduling with different SCS in DL CA
crossCarrierSchedulingDL-DiffSCS-r16         ENUMERATED {low-to-high, high-to-low, both} OPTIONAL,
-- R1 18-5a Default QCL assumption for cross-carrier scheduling
crossCarrierSchedulingDefaultQCL-r16         ENUMERATED {diff-only, both} OPTIONAL,
-- R1 18-5b cross-carrier scheduling with different SCS in UL CA
crossCarrierSchedulingUL-DiffSCS-r16         ENUMERATED {low-to-high, high-to-low, both} OPTIONAL,
-- R1 13.19a Simultaneous positioning SRS and MIMO SRS transmission for a given BC
simul-SRS-MIMO-Trans-BC-r16                 ENUMERATED {n2} OPTIONAL,
-- R1 16-3a, 16-3a-1, 16-3b, 16-3b-1: New Individual Codebook
codebookParametersAdditionPerBC-r16          CodebookParametersAdditionPerBC-r16 OPTIONAL,
-- R1 16-8: Mixed codebook
codebookComboParametersAdditionPerBC-r16     CodebookComboParametersAdditionPerBC-r16 OPTIONAL
}

CA-ParametersNR-v1630 ::= SEQUENCE {
    -- R1 22-5b: Simultaneous transmission of SRS for antenna switching and SRS for CB/NCB /BM for inter-band UL CA
    -- R1 22-5d: Simultaneous transmission of SRS for antenna switching for inter-band UL CA
    simulTX-SRS-AntSwitchingInterBandUL-CA-r16 SimulSRS-ForAntennaSwitching-r16 OPTIONAL,
    -- R4 8-5: supported beam management type for inter-band CA
    beamManagementType-r16                     ENUMERATED {ibm, dummy} OPTIONAL,
    -- R4 7-3a: UL frequency separation class with aggregate BW and Gap BW
    intraBandFreqSeparationUL-AggBW-GapBW-r16  ENUMERATED {classI, classII, classIII} OPTIONAL,
    -- RAN 89: Case B in case of Inter-band CA with non-aligned frame boundaries
    interCA-NonAlignedFrame-B-r16              ENUMERATED {supported} OPTIONAL
}

CA-ParametersNR-v1640 ::= SEQUENCE {
    -- R4 7-5: Support of reporting UL Tx DC locations for uplink intra-band CA.
    uplinkTxDC-TwoCarrierReport-r16            ENUMERATED {supported} OPTIONAL,
    -- RAN 22-6: Support of up to 3 different numerologies in the same NR PUCCH group for NR part of EN-DC, NGEN-DC, NE-DC and NR-CA
    -- where UE is not configured with two NR PUCCH groups
    maxUpTo3Diff-NumerologiesConfigSinglePUCCH-grp-r16 PUCCH-Grp-CarrierTypes-r16 OPTIONAL,
    -- RAN 22-6a: Support of up to 4 different numerologies in the same NR PUCCH group for NR part of EN-DC, NGEN-DC, NE-DC and NR-CA
    -- where UE is not configured with two NR PUCCH groups
    maxUpTo4Diff-NumerologiesConfigSinglePUCCH-grp-r16 PUCCH-Grp-CarrierTypes-r16 OPTIONAL,
    -- RAN 22-7: Support two PUCCH groups for NR-CA with 3 or more bands with at least two carrier types
    twoPUCCH-Grp-ConfigurationsList-r16 SEQUENCE (SIZE (1..maxTwoPUCCH-Grp-ConfigList-r16)) OF TwoPUCCH-Grp-Configurations-r16 OPTIONAL,
    -- R1 22-7a: Different numerology across NR PUCCH groups
    diffNumerologyAcrossPUCCH-Group-CarrierTypes-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 22-7b: Different numerologies across NR carriers within the same NR PUCCH group, with PUCCH on a carrier of smaller SCS
    diffNumerologyWithinPUCCH-GroupSmallerSCS-CarrierTypes-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 22-7c: Different numerologies across NR carriers within the same NR PUCCH group, with PUCCH on a carrier of larger SCS
    diffNumerologyWithinPUCCH-GroupLargerSCS-CarrierTypes-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 11-2f: add the replicated FGs of 11-2a/c with restriction for non-aligned span case
    -- with DL CA with Rel-16 PDCCH monitoring capability on all the serving cells
    pdcch-MonitoringCA-NonAlignedSpan-r16       INTEGER (2..16) OPTIONAL,
    -- R1 11-2g: add the replicated FGs of 11-2a/c with restriction for non-aligned span case

```

```

    pdcch-BlindDetectionCA-Mixed-NonAlignedSpan-r16
    pdcch-BlindDetectionCA1-r16
    pdcch-BlindDetectionCA2-r16
  }
}

CA-ParametersNR-v1690 ::= SEQUENCE {
  csi-ReportingCrossPUCCH-Grp-r16
  computationTimeForA-CSI-r16
  additionalSymbols-r16
    scs-15kHz-additionalSymbols-r16
    scs-30kHz-additionalSymbols-r16
    scs-60kHz-additionalSymbols-r16
    scs-120kHz-additionalSymbols-r16
  }
  sp-CSI-ReportingOnPUCCH-r16
  sp-CSI-ReportingOnPUSCH-r16
  carrierTypePairList-r16
}

CA-ParametersNR-v16a0 ::= SEQUENCE {
  pdcch-BlindDetectionMixedList-r16
}

CA-ParametersNR-v1700 ::= SEQUENCE {
  -- R1 23-9-1: Basic Features of Further Enhanced Port-Selection Type II Codebook (FeType-II) per band combination information
  codebookParametersfetype2PerBC-r17
  demodulationEnhancementCA-r17
  -- R4 20-1: Maximum uplink duty cycle for NR inter-band CA power class 2
  maxUplinkDutyCycle-interBandCA-PC2-r17
  -- R4 20-2: Maximum uplink duty cycle for NR SUL combination power class 2
  maxUplinkDutyCycle-SULcombination-PC2-r17
  beamManagementType-CBM-r17
  -- R1 25-18: Parallel PUCCH and PUSCH transmission across CCs in inter-band CA
  parallelTxPUCCH-PUSCH-r17
  -- R1 23-9-5 Active CSI-RS resources and ports for mixed codebook types in any slot per band combination
  codebookComboParameterMixedTypePerBC-r17
  -- R1 23-7-1 Basic Features of CSI Enhancement for Multi-TRP
  mTRP-CSI-EnhancementPerBC-r17
  maxNumNZP-CSI-RS-r17
  cSI-Report-mode-r17
  supportedComboAcrossCCs-r17
  codebookMode-NCJT-r17
  -- R1 23-7-1b Active CSI-RS resources and ports in the presence of multi-TRP CSI
  codebookComboParameterMultiTRP-PerBC-r17
  -- R1 24-8b: 32 DL HARQ processes for FR 2-2 - maximum number of component carriers
  maxCC-32-DL-HARQ-ProcessFR2-2-r17
  -- R1 24-9b: 32 UL HARQ processes for FR 2-2 - maximum number of component carriers
  maxCC-32-UL-HARQ-ProcessFR2-2-r17
  -- R1 34-2: Cross-carrier scheduling from SCell to PCell/PSCell (Type B)
  crossCarrierSchedulingSCell-SpCellTypeB-r17
}

```

SEQUENCE {
 INTEGER (1..15),
 INTEGER (1..15)
 OPTIONAL
 SEQUENCE {
 ENUMERATED {sameAsNoCross, relaxed},
 SEQUENCE {
 ENUMERATED {s14, s28} OPTIONAL,
 ENUMERATED {s14, s28} OPTIONAL,
 ENUMERATED {s14, s28, s56} OPTIONAL,
 ENUMERATED {s14, s28, s56} OPTIONAL,
 }
 ENUMERATED {supported} OPTIONAL,
 ENUMERATED {supported} OPTIONAL,
 SEQUENCE (SIZE (1..maxCarrierTypePairList-r16)) OF CarrierTypePair-r16
 OPTIONAL
 SEQUENCE(SIZE(1..maxNrofPdcch-BlindDetectionMixed-1-r16)) OF PDCCH-BlindDetectionMixedList-r16
 CodebookParametersfetype2PerBC-r17 OPTIONAL,
 ENUMERATED {supported} OPTIONAL,
 ENUMERATED {n50, n60, n70, n80, n90, n100} OPTIONAL,
 ENUMERATED {n50, n60, n70, n80, n90, n100} OPTIONAL,
 ENUMERATED {supported} OPTIONAL,
 ENUMERATED {supported} OPTIONAL,
 ENUMERATED {supported} OPTIONAL,
 CodebookComboParameterMixedTypePerBC-r17 OPTIONAL,
 SEQUENCE {
 INTEGER (2..8),
 ENUMERATED {mode1, mode2, both},
 SEQUENCE (SIZE (1..16)) OF CSI-MultiTRP-SupportedCombinations-r17,
 }
 OPTIONAL,
 CodebookComboParameterMultiTRP-PerBC-r17 OPTIONAL,
 ENUMERATED {n1, n2, n3, n4, n6, n8, n16, n32} OPTIONAL,
 ENUMERATED {n1, n2, n3, n4, n5, n8, n16, n32} OPTIONAL,
 CrossCarrierSchedulingSCell-SpCell-r17 OPTIONAL,

```

-- R1 34-1: Cross-carrier scheduling from SCell to PCell/PSCell with search space restrictions (Type A)
crossCarrierSchedulingSCell-SpCellTypeA-r17      CrossCarrierSchedulingSCell-SpCell-r17      OPTIONAL,
-- R1 34-1a: DCI formats on PCell/PSCell USS set(s) support
dci-FormatsPCellPSCellUSS-Sets-r17              ENUMERATED {supported}                        OPTIONAL,
-- R1 34-3: Disabling scaling factor alpha when sSCell is deactivated
disablingScalingFactorDeactSCell-r17             ENUMERATED {supported}                        OPTIONAL,
-- R1 34-4: Disabling scaling factor alpha when sSCell is deactivated
disablingScalingFactorDormantSCell-r17           ENUMERATED {supported}                        OPTIONAL,
-- R1 34-5: Non-aligned frame boundaries between PCell/PSCell and sSCell
non-AlignedFrameBoundaries-r17 SEQUENCE {
    scs15kHz-15kHz-r17                          BIT STRING (SIZE (1..496))                  OPTIONAL,
    scs15kHz-30kHz-r17                          BIT STRING (SIZE (1..496))                  OPTIONAL,
    scs15kHz-60kHz-r17                          BIT STRING (SIZE (1..496))                  OPTIONAL,
    scs30kHz-30kHz-r17                          BIT STRING (SIZE (1..496))                  OPTIONAL,
    scs30kHz-60kHz-r17                          BIT STRING (SIZE (1..496))                  OPTIONAL,
    scs60kHz-60kHz-r17                          BIT STRING (SIZE (1..496))                  OPTIONAL,
}
}

CA-ParametersNR-v1720 ::= SEQUENCE {
-- R1 39-1: Parallel SRS and PUCCH/PUSCH transmission across CCs in intra-band non-contiguous CA
parallelTxSRS-PUCCH-PUSCH-intraBand-r17         ENUMERATED {supported}                        OPTIONAL,
-- R1 39-2: Parallel PRACH and SRS/PUCCH/PUSCH transmissions across CCs in intra-band non-contiguous CA
parallelTxPRACH-SRS-PUCCH-PUSCH-intraBand-r17   ENUMERATED {supported}                        OPTIONAL,
-- R1 25-9: Semi-static PUCCH cell switching for a single PUCCH group only
semiStaticPUCCH-CellSwitchSingleGroup-r17       SEQUENCE {
    pucch-Group-r17                             ENUMERATED {primaryGroupOnly, secondaryGroupOnly, eitherPrimaryOrSecondaryGroup},
    pucch-Group-Config-r17                      PUCCH-Group-Config-r17
}
-- R1 25-9a: Semi-static PUCCH cell switching for two PUCCH groups
semiStaticPUCCH-CellSwitchTwoGroups-r17         SEQUENCE (SIZE (1..maxTwoPUCCH-Grp-ConfigList-r17)) OF TwoPUCCH-Grp-Configurations-r17 OPTIONAL,
-- R1 25-10: PUCCH cell switching based on dynamic indication for same length of overlapping PUCCH slots/sub-slots for a single
-- PUCCH group only
dynamicPUCCH-CellSwitchSameLengthSingleGroup-r17 SEQUENCE {
    pucch-Group-r17                             ENUMERATED {primaryGroupOnly, secondaryGroupOnly, eitherPrimaryOrSecondaryGroup},
    pucch-Group-Config-r17                      PUCCH-Group-Config-r17
}
-- R1 25-10a: PUCCH cell switching based on dynamic indication for different length of overlapping PUCCH slots/sub-slots
-- for a single PUCCH group only
dynamicPUCCH-CellSwitchDiffLengthSingleGroup-r17 SEQUENCE {
    pucch-Group-r17                             ENUMERATED {primaryGroupOnly, secondaryGroupOnly, eitherPrimaryOrSecondaryGroup},
    pucch-Group-Config-r17                      PUCCH-Group-Config-r17
}
-- R1 25-10b: PUCCH cell switching based on dynamic indication for same length of overlapping PUCCH slots/sub-slots for two PUCCH
-- groups
dynamicPUCCH-CellSwitchSameLengthTwoGroups-r17 SEQUENCE (SIZE (1..maxTwoPUCCH-Grp-ConfigList-r17)) OF TwoPUCCH-Grp-Configurations-r17
-- R1 25-10c: PUCCH cell switching based on dynamic indication for different length of overlapping PUCCH slots/sub-slots for two
-- PUCCH groups
dynamicPUCCH-CellSwitchDiffLengthTwoGroups-r17 SEQUENCE (SIZE (1..maxTwoPUCCH-Grp-ConfigList-r17)) OF TwoPUCCH-Grp-Configurations-r17
-- R1 33-2a: ACK/NACK based HARQ-ACK feedback and RRC-based enabling/disabling ACK/NACK-based
-- feedback for dynamic scheduling for multicast
ack-NACK-FeedbackForMulticast-r17              ENUMERATED {supported}                        OPTIONAL,

```

```

-- R1 33-2d: PTP retransmission for multicast dynamic scheduling
ptp-Retx-Multicast-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 33-4: NACK-only based HARQ-ACK feedback for RRC-based enabling/disabling multicast with ACK/NACK transforming
nack-OnlyFeedbackForMulticast-r17  ENUMERATED {supported}      OPTIONAL,
-- R1 33-4a: NACK-only based HARQ-ACK feedback for multicast corresponding to a specific sequence or a PUCCH transmission
nack-OnlyFeedbackSpecificResourceForMulticast-r17  ENUMERATED {supported}  OPTIONAL,
-- R1 33-5-1a: ACK/NACK based HARQ-ACK feedback and RRC-based enabling/disabling ACK/NACK-based feedback
-- for SPS group-common PDSCH for multicast
ack-NACK-FeedbackForSPS-Multicast-r17  ENUMERATED {supported}  OPTIONAL,
-- R1 33-5-1d: PTP retransmission for SPS group-common PDSCH for multicast
ptp-Retx-SPS-Multicast-r17          ENUMERATED {supported}      OPTIONAL,
-- R4 26-1: Higher Power Limit CA DC
higherPowerLimit-r17              ENUMERATED {supported}        OPTIONAL,
-- R1 39-4: Parallel MsgA and SRS/PUCCH/PUSCH transmissions across CCs in intra-band non-contiguous CA
parallelTxMsgA-SRS-PUCCH-PUSCH-intraBand-r17  ENUMERATED {supported}  OPTIONAL,
-- R1 24-11a: Capability on the number of CCs for monitoring a maximum number of BDs and non-overlapped CCEs per span when
-- configured with DL CA with Rel-17 PDCCH monitoring capability on all the serving cells
pdcch-MonitoringCA-r17            INTEGER (4..16)              OPTIONAL,
-- R1 24-11f: Capability on the number of CCs for monitoring a maximum number of BDs and non-overlapped CCEs for MCG and for SCG
-- when configured for NR-DC operation with Rel-17 PDCCH monitoring capability on all the serving cells
pdcch-BlindDetectionMCG-SCG-List-r17  SEQUENCE(SIZE(1..maxNrofPdcch-BlindDetection-r17)) OF PDCCH-BlindDetectionMCG-SCG-r17
                                                                    OPTIONAL,
-- R1 24-11c: Number of carriers for CCE/BD scaling with DL CA with mix of Rel. 17 and Rel. 15 PDCCH monitoring capabilities on
-- different Carriers
-- R1 24-11g: Number of carriers for CCE/BD scaling for MCG and for SCG when configured for NR-DC operation with mix of Rel. 17 and
-- Rel. 15 PDCCH monitoring capabilities on different carriers
pdcch-BlindDetectionMixedList1-r17  SEQUENCE(SIZE(1..maxNrofPdcch-BlindDetection-r17)) OF PDCCH-BlindDetectionMixed-r17
                                                                    OPTIONAL,
-- R1 24-11d: Number of carriers for CCE/BD scaling with DL CA with mix of Rel. 17 and Rel. 16 PDCCH monitoring capabilities on
-- different Carriers
-- R1 24-11h: Number of carriers for CCE/BD scaling for MCG and for SCG when configured for NR-DC operation with mix of Rel. 17 and
-- Rel. 16 PDCCH monitoring capabilities on different carriers
pdcch-BlindDetectionMixedList2-r17  SEQUENCE(SIZE(1..maxNrofPdcch-BlindDetection-r17)) OF PDCCH-BlindDetectionMixed-r17
                                                                    OPTIONAL,
-- R1 24-11e: Number of carriers for CCE/BD scaling with DL CA with mix of Rel. 17, Rel. 16 and Rel. 15 PDCCH monitoring
-- capabilities on different carriers
-- R1 24-11i: Number of carriers for CCE/BD scaling for MCG and for SCG when configured for NR-DC operation with mix of Rel. 17,
-- Rel. 16 and Rel. 15 PDCCH monitoring capabilities on different carriers
pdcch-BlindDetectionMixedList3-r17  SEQUENCE(SIZE(1..maxNrofPdcch-BlindDetection-r17)) OF PDCCH-BlindDetectionMixed1-r17
                                                                    OPTIONAL
}

CA-ParametersNR-v1730 ::= SEQUENCE {
-- R1 30-4a: DM-RS bundling for PUSCH repetition type A (per BC)
dmrs-BundlingPUSCH-RepTypeAPerBC-r17  ENUMERATED {supported}  OPTIONAL,
-- R1 30-4b: DM-RS bundling for PUSCH repetition type B(per BC)
dmrs-BundlingPUSCH-RepTypeBPerBC-r17  ENUMERATED {supported}  OPTIONAL,
-- R1 30-4c: DM-RS bundling for TB processing over multi-slot PUSCH(per BC)
dmrs-BundlingPUSCH-multiSlotPerBC-r17  ENUMERATED {supported}  OPTIONAL,
-- R1 30-4d: DMRS bundling for PUCCH repetitions(per BC)
dmrs-BundlingPUCCH-RepPerBC-r17        ENUMERATED {supported}  OPTIONAL,
-- R1 30-4g: Restart DM-RS bundling (per BC)
dmrs-BundlingRestartPerBC-r17          ENUMERATED {supported}  OPTIONAL,
-- R1 30-4h: DM-RS bundling for non-back-to-back transmission (per BC)

```



```

dmrs-BundlingNonBackToBackTX-PerBC-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 39-3-1: Stay on the target CC for SRS carrier switching
stayOnTargetCC-SRS-CarrierSwitch-r17             ENUMERATED {supported}          OPTIONAL,
-- R1 33-3-3a: FDM-ed Type-1 and Type-2 HARQ-ACK codebooks for multiplexing HARQ-ACK for unicast and HARQ-ACK for multicast
fdm-CodebookForMux-UnicastMulticastHARQ-ACK-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 33-3-3b: Mode 2 TDM-ed Type-1 and Type-2 HARQ-ACK codebook for multiplexing HARQ-ACK for unicast and HARQ-ACK for multicast
mode2-TDM-CodebookForMux-UnicastMulticastHARQ-ACK-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 33-3-4: Mode 1 for type1 codebook generation
mode1-ForType1-CodebookGeneration-r17            ENUMERATED {supported}          OPTIONAL,
-- R1 33-5-1j: NACK-only based HARQ-ACK feedback for multicast corresponding to a specific sequence or a PUCCH transmission
-- for SPS group-common PDSCH for multicast
nack-OnlyFeedbackSpecificResourceForSPS-Multicast-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 33-8-2: Up to 2 PUCCH resources configuration for multicast feedback for dynamically scheduled multicast
multiPUCCH-ConfigForMulticast-r17                ENUMERATED {supported}          OPTIONAL,
-- R1 33-8-3: PUCCH resource configuration for multicast feedback for SPS GC-PDSCH
pucch-ConfigForSPS-Multicast-r17                 ENUMERATED {supported}          OPTIONAL,
-- The following parameter is associated with R1 33-2a, R1 33-3-3a, and R1 33-3-3b, and is not a RAN1 FG.
maxNumberG-RNTI-HARQ-ACK-Codebook-r17            INTEGER (1..4)                 OPTIONAL,
-- R1 33-3-5: Feedback multiplexing for unicast PDSCH and group-common PDSCH for multicast with same priority and different codebook
-- type
mux-HARQ-ACK-UnicastMulticast-r17                 ENUMERATED {supported}          OPTIONAL
}

CA-ParametersNR-v1740 ::= SEQUENCE {
-- R1 33-5-1f: NACK-only based HARQ-ACK feedback for multicast RRC-based enabling/disabling NACK-only based feedback
-- for SPS group-common PDSCH for multicast
nack-OnlyFeedbackForSPS-Multicast-r17             ENUMERATED {supported}          OPTIONAL,
-- R1 33-8-1: PUCCH resource configuration for multicast feedback for dynamically scheduled multicast
singlePUCCH-ConfigForMulticast-r17                ENUMERATED {supported}          OPTIONAL
}

CA-ParametersNR-v1760 ::= SEQUENCE {
prioSCellPRACH-OverSP-PeriodicSRS-Support-r17     ENUMERATED {supported}          OPTIONAL
}

CA-ParametersNR-v1770 ::= SEQUENCE {
parallelTxPUCCH-PUSCH-SamePriority-r17             ENUMERATED {supported}          OPTIONAL
}

CA-ParametersNR-v1780 ::= SEQUENCE {
parallelTxPUCCH-PUSCH-SamePriority-r17             ENUMERATED {supported}          OPTIONAL,
supportedAggBW-FR1-r17                             SEQUENCE {
scalingFactorSCS-r17                               ENUMERATED {true}              OPTIONAL,
supportedAggBW-FDD-DL-r17                          SupportedAggBandwidth-r17       OPTIONAL,
supportedAggBW-FDD-UL-r17                          SupportedAggBandwidth-r17       OPTIONAL,
supportedAggBW-TDD-DL-r17                          SupportedAggBandwidth-r17       OPTIONAL,
supportedAggBW-TDD-UL-r17                          SupportedAggBandwidth-r17       OPTIONAL,
supportedAggBW-TotalDL-r17                         SupportedAggBandwidth-r17       OPTIONAL,
supportedAggBW-TotalUL-r17                         SupportedAggBandwidth-r17       OPTIONAL
} OPTIONAL
}

CA-ParametersNR-v1800 ::= SEQUENCE {
codebookParametersetype2DopplerCSI-PerBC-r18      CodebookParametersetype2DopplerCSI-r18  OPTIONAL,

```

```

codebookParametersfetype2DopplerCSI-PerBC-r18 CodebookParametersfetype2DopplerCSI-r18 OPTIONAL,
codebookParameterssetype2CJT-PerBC-r18 CodebookParameterssetype2CJT-r18 OPTIONAL,
codebookParametersfetype2CJT-PerBC-r18 CodebookParametersfetype2CJT-r18 OPTIONAL,
codebookComboParametersCJT-PerBC-r18 CodebookComboParametersCJT-r18 OPTIONAL,
codebookParametersSHARQ-ACK-PUSCH-PerBC-r18 CodebookParametersSHARQ-ACK-PUSCH-r18 OPTIONAL,
-- R1 40-2-8: Maximum number of TAGs across all CCs
maxNumberTAG-AcrossCC-r18 INTEGER (2..4) OPTIONAL,
-- R1 40-3-3-1: TDCP (Time Domain Channel Properties) report
tdcp-ReportPerBC-r18 SEQUENCE {
    valueX-r18 INTEGER (1..2),
    maxNumberActiveResource-r18 INTEGER (2..32)
} OPTIONAL,
-- R1 40-3-3-5: Number of CSI-RS resources for TDCP
tdcp-ResourcePerBC-r18 SEQUENCE {
    maxNumberConfigPerCC-r18 ENUMERATED {n2,n4,n6,n8,n10,n12},
    maxNumberConfigAcrossCC-r18 INTEGER (1..32),
    maxNumberSimultaneousPerCC-r18 ENUMERATED {n2, n4, n6, n8, n12, n16, n20, n24, n28, n32}
} OPTIONAL,
-- R1 40-3-1-24: Timeline for regular eType-II-CJT CSI, or for port selection FeType-II-CJT CSI
timelineRelax-CJT-CSI-CA-r18 ENUMERATED {n0,n2} OPTIONAL,
-- R1 42-1: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for periodic CSI reporting
spatialAdaptation-CSI-FeedbackPerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18 SEQUENCE {
        sdType1-Resource-r18 ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22,
            n24, n26, n28, n30, n32, n34, n36, n38, n40, n42, n44,
            n46, n48, n50, n52, n54, n56, n58, n60, n62, n64},
        sdType2-Resource-r18 ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22,
            n24, n26, n28, n30, n32, n34, n36, n38, n40, n42, n44,
            n46, n48, n50, n52, n54, n56, n58, n60, n62, n64}
    },
    maxNumberPortsAcrossCC-r18 SEQUENCE {
        sdType1-Resource-r18 INTEGER (1..32),
        sdType2-Resource-r18 INTEGER (1..32)
    }
} OPTIONAL,
-- R1 40-7-2a: Association between CSI-RS and SRS for non-codebook case
nonCodebook-CSI-RS-SRS-PerBC-r18 SEQUENCE (SIZE (1.. maxNrofCSI-RS-Resources)) OF SupportedCSI-RS-Resource OPTIONAL,
-- R1 42-1a: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for periodic CSI reporting on
-- PUSCH
spatialAdaptation-CSI-FeedbackPUSCH-PerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18 ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22, n24, n26, n28,
        n30, n32, n34, n36, n38, n40, n42, n44, n46, n48, n50, n52, n54,
        n56, n58, n60, n62, n64},
    maxNumberPortsAcrossCC-r18 INTEGER (1..32)
} OPTIONAL,
-- R1 42-1b: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for aperiodic CSI reporting
spatialAdaptation-CSI-FeedbackAperiodicPerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18 SEQUENCE {
        sdType1-Resource-r18 ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22,
            n24, n26, n28, n30, n32, n34, n36, n38, n40, n42, n44,
            n46, n48, n50, n52, n54, n56, n58, n60, n62, n64},
        sdType2-Resource-r18 ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22,
            n24, n26, n28, n30, n32, n34, n36, n38, n40, n42, n44,
            n46, n48, n50, n52, n54, n56, n58, n60, n62, n64}
    }
}

```



```

    },
    maxNumberPortsAcrossCC-r18          SEQUENCE {
        sdType1-Resource-r18             INTEGER (1..32),
        sdType2-Resource-r18             INTEGER (1..32)    }
}
-- R1 42-1c: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for semi-persistent CSI
-- reporting on PUCCH
spatialAdaptation-CSI-FeedbackPUCCH-PerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18    ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22, n24, n26, n28,
        n30, n32, n34, n36, n38, n40, n42, n44, n46, n48, n50, n52, n54,
        n56, n58, n60, n62, n64},
    maxNumberPortsAcrossCC-r18           INTEGER (1..32)
}
-- R1 42-2: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for periodic CSI reporting
powerAdaptation-CSI-FeedbackPerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18    ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22, n24, n26, n28,
        n30, n32, n34, n36, n38, n40, n42, n44, n46, n48, n50, n52, n54,
        n56, n58, n60, n62, n64},
    maxNumberPortsAcrossCC-r18           INTEGER (1..32)
}
-- R1 42-2a: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for periodic CSI reporting on PUSCH
powerAdaptation-CSI-FeedbackPUSCH-PerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18    ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22, n24, n26, n28,
        n30, n32, n34, n36, n38, n40, n42, n44, n46, n48, n50, n52, n54,
        n56, n58, n60, n62, n64},
    maxNumberPortsAcrossCC-r18           INTEGER (1..32)
}
-- R1 42-2b: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for aperiodic CSI reporting
powerAdaptation-CSI-FeedbackAperiodicPerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18    ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22, n24, n26, n28,
        n30, n32, n34, n36, n38, n40, n42, n44, n46, n48, n50, n52, n54,
        n56, n58, n60, n62, n64},
    maxNumberPortsAcrossCC-r18           INTEGER (1..32)
}
-- R1 42-2c: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for semi-persistent CSI
-- reporting on PUCCH
powerAdaptation-CSI-FeedbackPUCCH-PerBC-r18 SEQUENCE {
    maxNumberCSI-ResourceAcrossCC-r18    ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22, n24, n26, n28,
        n30, n32, n34, n36, n38, n40, n42, n44, n46, n48, n50, n52, n54,
        n56, n58, n60, n62, n64},
    maxNumberPortsAcrossCC-r18           INTEGER (1..32)
}
-- R1 42-7: Mixed codebook combination for spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s),
-- each containing one port subset configuration
mixCodeBookSpatialAdaptationPerBC-r18 SEQUENCE (SIZE (1.. maxNrofCSI-RS-Resources)) OF SupportedCSI-RS-Resource OPTIONAL,
-- R1 42-9: Indicates whether the UE supports CSI report framework and the number of CSI report(s) which the UE can
-- simultaneously process across all CCs, and across MCG and SCG in case of NR-DC.
simultaneousCSI-SubReportsAllCC-r18    INTEGER (5..32) OPTIONAL,
-- R1 49-1: Multi-cell PDSCH scheduling by DCI format 1_3 on a scheduling cell with same SCS between scheduling
-- cell and cells in the set
multiCell-PDSCH-DCI-1-3-SameSCS-r18 SEQUENCE {
    coScheduledCellSCS-r18             SEQUENCE {

```

```

        nonSharedSpectrum-fdd-fr1      ENUMERATED {supported}      OPTIONAL,
        nonSharedSpectrum-tdd-fr1      ENUMERATED {supported}      OPTIONAL,
        sharedSpectrum-tdd-fr1         ENUMERATED {supported}      OPTIONAL,
        fr2-1                          ENUMERATED {supported}      OPTIONAL,
        fr2-2                          ENUMERATED {supported}      OPTIONAL
    },
    maxNumberCoScheduledCell-r18        INTEGER (2..4),
    maxNumberSetsOfCellAcrossPUCCH-Group-r18 INTEGER (1..8),
    maxNumberSetsOfCellScheduling-r18   INTEGER (1..4),
    harqFeedbackType-r18                ENUMERATED {type1, type2, type1And2},
    coScheduledCellIndicationScheme-r18  ENUMERATED {fdra, cellInd, both},
    supportOfSearchSpace-r18            ENUMERATED {supported}      OPTIONAL,
    licensed-fdd-tdd-fr1-r18            ENUMERATED {supported}      OPTIONAL,
}
-- R1 49-1b: Multi-cell PDSCH scheduling by DCI format 1_3 on a scheduling cell not included in a set of cells with different
-- SCS/carrier type between scheduling cell and cells in the set
multiCell-PDSCH-DCI-1-3-DiffSCS-r18    SEQUENCE {
    coScheduledCellSCS-r18              ENUMERATED {lowScheduling-highScheduled, highScheduling-lowScheduled, both},
    combinationCarrierType-r18          SEQUENCE (SIZE(1..maxSchedulingBandCombination-r18)) OF
                                        CombinationCarrierType-r18,

    maxNumberCoScheduledCell-r18        INTEGER (2..4),
    maxNumberSetsOfCellAcrossPUCCH-Group-r18 INTEGER (1..8),
    maxNumberSetsOfCellScheduling-r18   INTEGER (1..4),
    harqFeedbackType-r18                ENUMERATED {type1, type2, type1And2},
    coScheduledCellIndicationScheme-r18  ENUMERATED {fdra, cellInd, both}
}
-- R1 49-2: Multi-cell PUSCH scheduling by DCI format 0_3 on a scheduling cell with same SCS between scheduling cell
-- and cells in the set
multiCell-PUSCH-DCI-0-3-SameSCS-r18    SEQUENCE {
    coScheduledCellSCS-r18              SEQUENCE {
        nonSharedSpectrum-fdd-fr1      ENUMERATED {supported}      OPTIONAL,
        nonSharedSpectrum-tdd-fr1      ENUMERATED {supported}      OPTIONAL,
        sharedSpectrum-tdd-fr1         ENUMERATED {supported}      OPTIONAL,
        fr2-1                          ENUMERATED {supported}      OPTIONAL,
        fr2-2                          ENUMERATED {supported}      OPTIONAL
    },
    maxNumberCoScheduledCell-r18        INTEGER (2..4),
    maxNumberSetsOfCellAcrossPUCCH-Group-r18 INTEGER (1..8),
    maxNumberSetsOfCellScheduling-r18   INTEGER (1..4),
    coScheduledCellIndicationScheme-r18  ENUMERATED {fdra, cellInd, both},
    supportOfSearchSpace-r18            ENUMERATED {supported}      OPTIONAL,
    licensed-fdd-tdd-fr1-r18            ENUMERATED {supported}      OPTIONAL,
}
-- R1 49-2b: Multi-cell PUSCH scheduling by DCI format 0_3 on a scheduling cell not included in a set of cells with
-- different SCS/carrier type between scheduling cell and cells in the set
multiCell-PUSCH-DCI-0-3-DiffSCS-r18    SEQUENCE {
    coScheduledCellSCS-r18              ENUMERATED {lowScheduling-highScheduled, highScheduling-lowScheduled, both},
    combinationCarrierType-r18          SEQUENCE (SIZE(1..maxSchedulingBandCombination-r18)) OF
                                        CombinationCarrierType-r18,

    maxNumberCoScheduledCell-r18        INTEGER (2..4),
    maxNumberSetsOfCellAcrossPUCCH-Group-r18 INTEGER (1..8),
    maxNumberSetsOfCellScheduling-r18   INTEGER (1..4),
    coScheduledCellIndicationScheme-r18  ENUMERATED {fdra, cellInd, both}
}

```

```

-- R1 49-3x: Advanced UE capability for larger number of unicast DL DCI
advUnicastDCI-DL-r18 SEQUENCE {
    scs-15kHz-120kHz-r18 ENUMERATED {n2, n4} OPTIONAL,
    scs-15kHz-60kHz-r18 ENUMERATED {n2, n4} OPTIONAL,
    scs-30kHz-120kHz-r18 ENUMERATED {n2, n4} OPTIONAL,
    scs-15kHz-30kHz-r18 ENUMERATED {n2} OPTIONAL,
    scs-30kHz-60kHz-r18 ENUMERATED {n2} OPTIONAL,
    scs-60kHz-120kHz-r18 ENUMERATED {n2} OPTIONAL,
}
-- R1 49-3y: Advanced UE capability for larger number of unicast UL DCI
advUnicastDCI-UL-r18 SEQUENCE {
    scs-15kHz-120kHz-r18 ENUMERATED {n2, n4} OPTIONAL,
    scs-15kHz-60kHz-r18 ENUMERATED {n2, n4} OPTIONAL,
    scs-30kHz-120kHz-r18 ENUMERATED {n2, n4} OPTIONAL,
    scs-15kHz-30kHz-r18 ENUMERATED {n2} OPTIONAL,
    scs-30kHz-60kHz-r18 ENUMERATED {n2} OPTIONAL,
    scs-60kHz-120kHz-r18 ENUMERATED {n2} OPTIONAL,
}
-- R1 49-5a: Trigger Type 3 HARQ CB based feedback using DCI format 1_3
type3HARQ-CB-DCI-1-3-r18 ENUMERATED {supported} OPTIONAL,
-- R1 49-5b: Trigger enhanced Type 3 HARQ CB based feedback using DCI format 1_3
type3EnhHARQ-CB-DCI-1-3-r18 SEQUENCE {
    numberOfCodebook-r18 ENUMERATED {n1, n2, n4, n8},
    maxNumberPUCCH-Trans-r18 INTEGER (1..7)
} OPTIONAL,
-- R1 49-9: SCell dormancy indication within active time in DCI format 0_3/1_3
scellDormancyWithinActiveTime-DCI-0-3-And-1-3-r18 ENUMERATED {supported} OPTIONAL,
pdcch-MonitoringCA-Ext-r18 CHOICE {
    -- R1 55-6a: Capability on the number of CCs for monitoring a maximum number of BDs and non-overlapped CCEs per span when
    -- configured with DL CA with Rel-16 PDCCH monitoring capability on all the serving cells
    pdcch-MonitoringCA-r18 SEQUENCE {
        maxNumberOfMonitoringCC-r18 INTEGER (2..16),
        supportedSpanArrangement-r18 ENUMERATED {alignedOnly, alignedAndNonAligned}
    },
    -- R1 55-6f: Capability on the number of CCs for monitoring a maximum number of BDs and non-overlapped CCEs per span when
    -- configured with DL CA with Rel-16 PDCCH monitoring capability on all the serving cells with restriction for non-aligned
    -- span case
    pdcch-MonitoringCA-NonAlignedSpan-r18 INTEGER (2..16)
} OPTIONAL,
pdcch-BlindDetectionCA-MixedExt-r18 CHOICE {
    -- R1 55-6c: Number of carriers for CCE/BD scaling with DL CA with mix of Rel. 16 and Rel. 15 PDCCH monitoring capabilities on
    -- different carriers
    pdcch-BlindDetectionCA-Mixed-r18 SEQUENCE {
        blindDetectionCA-Mixed-r18 SEQUENCE(SIZE (1..maxNrofPdcch-BlindDetectionMixed-1-r16)) OF
            PDCCH-BlindDetectionCA-MixedExt-r16,
        supportedSpanArrangement-r18 ENUMERATED { alignedOnly, alignedAndNonAligned }
    },
    -- R1 55-6g: Number of carriers for CCE/BD scaling with DL CA with mix of Rel. 16 and Rel. 15 PDCCH monitoring capabilities on
    -- different carriers with restriction for non-aligned span case
    pdcch-BlindDetectionCA-Mixed-NonAlignedSpan-r18 SEQUENCE(SIZE (1..maxNrofPdcch-BlindDetectionMixed-1-r16)) OF
        PDCCH-BlindDetectionCA-MixedExt-r16
} OPTIONAL,
-- R1 55-6e: Number of carriers for CCE/BD scaling for MCG and for SCG when configured for NR-DC operation with mix of Rel. 16
-- and Rel. 15 PDCCH monitoring capabilities on different carriers

```

```

pdccch-BlindDetectionMCG-SCG-List-r18          SEQUENCE(SIZE (1..maxNrofPdcch-BlindDetectionMixed-1-r16)) OF
                                                PDCCH-BlindDetectionMixed2-r18          OPTIONAL,
-- R4 33-1: Support of intra-band non-collocated NR CA operation
intraBandNR-CA-non-collocated-r18              ENUMERATED {supported}                      OPTIONAL
}

CA-ParametersNR-v1830 ::= SEQUENCE {
-- R1 45-1: Intra-frequency L1 measurement and reports for L1-L2 Triggered Mobility (LTM) procedure
intraFreqL1-MeasConfig-r18                    SEQUENCE {
    supportedMaxIntraFreqCellsConfig-r18        INTEGER (1..8),
    supportedMaxIntraFreqCellsPerReport-r18      INTEGER (1..4),
    supportedMaxReportBeamsPerReportedCell-r18   INTEGER (1..4),
    supportedMaxReportBeamsReports-r18           ENUMERATED {n1, n2, n3, n4, n6, n8, n9, n12, n16},
    supportedMaxAperiodic-LTM-CSI-ReportConfig-r18 INTEGER (0..4),
    supportedMaxPeriodic-LTM-CSI-ReportConfig-r18 INTEGER (1..4),
    supportedMaxSemiPersistent-LTM-CSI-ReportConfig-r18 INTEGER (0..4)
}
-- R1 45-1a: Inter-frequency L1 measurement and reports for L1-L2 Triggered Mobility (LTM) procedure
interFreqL1-MeasConfig-r18                    SEQUENCE {
    supportedMaxIntraInterFreqCellsConfig-r18    INTEGER (1..8),
    supportedMaxIntraInterFreqCellsPerReport-r18 INTEGER (1..4),
    supportedMaxIntraInterFreqBeamsPerCellReports-r18 INTEGER (1..4),
    supportedMaxIntraInterFreqBeamsReports-r18   ENUMERATED {n1, n2, n3, n4, n6, n8, n9, n12, n16}
}
-- R1 45-2: Inclusion of current SpCell in the L1 measurement report
currentSpCellInclL1-Report-r18                ENUMERATED {supported}                  OPTIONAL,
-- R4 39-1: SSB based L1-RSRP measurements for multiple cells with RTD > CP
multiCellL1-measRTD-greaterThan-CP-r18        ENUMERATED {supported}                  OPTIONAL,
-- R4 39-2: SSB based inter-frequency L1-RSRP measurements without measurement gaps
interFreqSSB-L1-MeasWithoutGaps-r18           ENUMERATED {supported}                  OPTIONAL,
-- R4 39-3-1: Number of frequency layers for L1-RSRP measurement
maxFreqLayersL1-Meas-r18                      SEQUENCE {
    supportedMaxIntraInterFreqLayersWithoutGaps-r18 INTEGER (1..8)                  OPTIONAL,
    supportedMaxInterFreqLayersWithGaps-r18      INTEGER (1..8)                  OPTIONAL,
}
-- R4 39-3-2: Number of neighbour cells to be measured per frequency layer
maxNeighCellsPerFreqLayerL1-Meas-r18          SEQUENCE {
    supportedMaxNeighCellsPerFreqLayersWithoutGaps-r18 INTEGER (1..8)                  OPTIONAL,
    supportedMaxNeighCellsPerFreqLayersWithGaps-r18   INTEGER (1..8)                  OPTIONAL,
}
-- R4 39-3-3: Number of total cells to be measured
supportedMaxCellsWithoutGapsL1-Meas-r18        INTEGER (1..24)                      OPTIONAL,
-- R4 39-3-4: Number of SSB resources for L1-RSRP measurement within a slot
supportedMaxSSB-WithinSlotL1-Meas-r18          ENUMERATED {n1, n2, n3, n4, n5, n6, n7, n8, n16, n32, n48, n64}  OPTIONAL,
dummy                                           SEQUENCE {
    supportedMaxSSB-PerFreqLayerWithoutGaps-r18    INTEGER (1..8)                  OPTIONAL,
    supportedMaxSSB-PerFreqLayerWithGaps-r18       INTEGER (1..8)                  OPTIONAL,
}
-- R4 39-3-6: Number of total SSB resources to be measured
supportedMaxSSB-L1-Meas-r18                    ENUMERATED {n2, n4, n8, n12, n16, n32, n64}  OPTIONAL,
-- R1 49-13: Default QCL assumption for multi-cell scheduling by DCI format 1_3
qcl-MultiCellDCI-1-3-r18                      ENUMERATED {diff, both}                  OPTIONAL,
-- R1 49-14: Support of BWP switch indication by DCI format 0_3/1_3
bwp-SwitchingDCI-0-3-And-1-3-r18              ENUMERATED {supported}                  OPTIONAL
}

```

```

}

CA-ParametersNR-v1860 ::= SEQUENCE {
  -- R4 39-3-5: Number of SSB resources for L1-RSRP measurement per frequency layer
  maxSSB-PerFreqLayerL1-Meas-r18          SEQUENCE {
    supportedMaxSSB-PerFreqLayerWithoutGaps-r18  ENUMERATED {n1, n2, n3, n4, n5, n6, n7, n8, n12, n16, n20, n24} OPTIONAL,
    supportedMaxSSB-PerFreqLayerWithGaps-r18      INTEGER (1..8)                                OPTIONAL
  }
}

CrossCarrierSchedulingSCell-SpCell-r17 ::= SEQUENCE {
  supportedSCS-Combinations-r17          SEQUENCE {
    scs15kHz-15kHz-r17                    ENUMERATED {supported}                                OPTIONAL,
    scs15kHz-30kHz-r17                    ENUMERATED {supported}                                OPTIONAL,
    scs15kHz-60kHz-r17                    ENUMERATED {supported}                                OPTIONAL,
    scs30kHz-30kHz-r17                    BIT STRING (SIZE (1..496))                        OPTIONAL,
    scs30kHz-60kHz-r17                    BIT STRING (SIZE (1..496))                        OPTIONAL,
    scs60kHz-60kHz-r17                    BIT STRING (SIZE (1..496))                        OPTIONAL
  },
  pdcch-MonitoringOccasion-r17            ENUMERATED {val1, val2}
}

PDCCH-BlindDetectionMixedList-r16 ::= SEQUENCE {
  pdcch-BlindDetectionCA-MixedExt-r16    CHOICE {
    pdcch-BlindDetectionCA-Mixed-v16a0    PDCCH-BlindDetectionCA-MixedExt-r16,
    pdcch-BlindDetectionCA-Mixed-NonAlignedSpan-v16a0 PDCCH-BlindDetectionCA-MixedExt-r16
  }
  pdcch-BlindDetectionCG-UE-MixedExt-r16 SEQUENCE {
    pdcch-BlindDetectionMCG-UE-Mixed-v16a0 PDCCH-BlindDetectionCG-UE-MixedExt-r16,
    pdcch-BlindDetectionSCG-UE-Mixed-v16a0 PDCCH-BlindDetectionCG-UE-MixedExt-r16
  }
}

PDCCH-BlindDetectionCA-MixedExt-r16 ::= SEQUENCE {
  pdcch-BlindDetectionCA1-r16          INTEGER (1..15),
  pdcch-BlindDetectionCA2-r16          INTEGER (1..15)
}

PDCCH-BlindDetectionCG-UE-MixedExt-r16 ::= SEQUENCE {
  pdcch-BlindDetectionCG-UE1-r16        INTEGER (0..15),
  pdcch-BlindDetectionCG-UE2-r16        INTEGER (0..15)
}

PDCCH-BlindDetectionMCG-SCG-r17 ::= SEQUENCE {
  pdcch-BlindDetectionMCG-UE-r17        INTEGER (1..15),
  pdcch-BlindDetectionSCG-UE-r17        INTEGER (1..15)
}

PDCCH-BlindDetectionMixed-r17 ::= SEQUENCE {
  pdcch-BlindDetectionCA-Mixed-r17      PDCCH-BlindDetectionCA-Mixed-r17                                OPTIONAL,
  pdcch-BlindDetectionCG-UE-Mixed-r17   SEQUENCE {
    pdcch-BlindDetectionMCG-UE-Mixed-v17 PDCCH-BlindDetectionCG-UE-Mixed-r17,
    pdcch-BlindDetectionSCG-UE-Mixed-v17 PDCCH-BlindDetectionCG-UE-Mixed-r17
  }
}

```

```

}

PDCCH-BlindDetectionCG-UE-Mixed-r17 ::= SEQUENCE {
    pdcch-BlindDetectionCG-UE1-r17    INTEGER (0..15),
    pdcch-BlindDetectionCG-UE2-r17    INTEGER (0..15)
}

PDCCH-BlindDetectionCA-Mixed-r17 ::= SEQUENCE {
    pdcch-BlindDetectionCA1-r17    INTEGER (1..15)        OPTIONAL,
    pdcch-BlindDetectionCA2-r17    INTEGER (1..15)        OPTIONAL
}

PDCCH-BlindDetectionMixed1-r17 ::= SEQUENCE {
    pdcch-BlindDetectionCA-Mixed1-r17    PDCCH-BlindDetectionCA-Mixed1-r17    OPTIONAL,
    pdcch-BlindDetectionCG-UE-Mixed1-r17 SEQUENCE{
        pdcch-BlindDetectionMCG-UE-Mixed1-v17    PDCCH-BlindDetectionCG-UE-Mixed1-r17,
        pdcch-BlindDetectionSCG-UE-Mixed1-v17    PDCCH-BlindDetectionCG-UE-Mixed1-r17
    }    OPTIONAL
}

PDCCH-BlindDetectionCG-UE-Mixed1-r17 ::= SEQUENCE {
    pdcch-BlindDetectionCG-UE1-r17    INTEGER (0..15),
    pdcch-BlindDetectionCG-UE2-r17    INTEGER (0..15),
    pdcch-BlindDetectionCG-UE3-r17    INTEGER (0..15)
}

PDCCH-BlindDetectionCA-Mixed1-r17 ::= SEQUENCE {
    pdcch-BlindDetectionCA1-r17    INTEGER (1..15)        OPTIONAL,
    pdcch-BlindDetectionCA2-r17    INTEGER (1..15)        OPTIONAL,
    pdcch-BlindDetectionCA3-r17    INTEGER (1..15)        OPTIONAL
}

PDCCH-BlindDetectionMixed2-r18 ::= SEQUENCE{
    pdcch-BlindDetectionMCG-UE-Mixed-r18    PDCCH-BlindDetectionCG-UE-MixedExt-r16,
    pdcch-BlindDetectionSCG-UE-Mixed-r18    PDCCH-BlindDetectionCG-UE-MixedExt-r16
}

SimulSRS-ForAntennaSwitching-r16 ::= SEQUENCE {
    supportSRS-xTyR-xLessThanY-r16    ENUMERATED {supported}    OPTIONAL,
    supportSRS-xTyR-xEqualToY-r16     ENUMERATED {supported}    OPTIONAL,
    supportSRS-AntennaSwitching-r16    ENUMERATED {supported}    OPTIONAL
}

TwoPUCCH-Grp-Configurations-r16 ::= SEQUENCE {
    pucch-PrimaryGroupMapping-r16    TwoPUCCH-Grp-ConfigParams-r16,
    pucch-SecondaryGroupMapping-r16  TwoPUCCH-Grp-ConfigParams-r16
}

TwoPUCCH-Grp-Configurations-r17 ::= SEQUENCE {
    primaryPUCCH-GroupConfig-r17    PUCCH-Group-Config-r17,
    secondaryPUCCH-GroupConfig-r17  PUCCH-Group-Config-r17
}

TwoPUCCH-Grp-ConfigParams-r16 ::= SEQUENCE {
    pucch-GroupMapping-r16          PUCCH-Grp-CarrierTypes-r16,

```

```

    pucch-TX-r16                PUCCH-Grp-CarrierTypes-r16
}

CarrierTypePair-r16 ::=
    carrierForCSI-Measurement-r16
    carrierForCSI-Reporting-r16
}

PUCCH-Grp-CarrierTypes-r16 ::=
    fr1-NonSharedTDD-r16
    fr1-SharedTDD-r16
    fr1-NonSharedFDD-r16
    fr2-r16
}

PUCCH-Group-Config-r17 ::=
    fr1-FR1-NonSharedTDD-r17
    fr2-FR2-NonSharedTDD-r17
    fr1-FR2-NonSharedTDD-r17
}

CombinationCarrierType-r18 ::=
    schedulingCellCarrierType-r18
    scheduledCellCarrierType-r18
}

-- TAG-CA-PARAMETERSNR-STOP
-- ASN1STOP

```

CA-ParametersNR field description
codebookParametersPerBC For a given supported band combination, this field indicates the alternative list of <i>SupportedCSI-RS-Resource</i> supported for each codebook type, amongst the supported CSI-RS resources included in <i>codebookParametersPerBand</i> in <i>MIMO-ParametersPerBand</i> .
dummy The field is not used in the specification and the network ignores the received value.

– CA-ParametersNRDC

The IE *CA-ParametersNRDC* contains dual connectivity related capabilities that are defined per band combination.

CA-ParametersNRDC information element

```

-- ASN1START
-- TAG-CA-PARAMETERS-NRDC-START

CA-ParametersNRDC ::=
    ca-ParametersNR-ForDC
    ca-ParametersNR-ForDC-v1540
}

SEQUENCE {
    CA-ParametersNR
    CA-ParametersNR-v1540
}
OPTIONAL,
OPTIONAL,

```

ca-ParametersNR-ForDC-v1550	CA-ParametersNR-v1550	OPTIONAL,
ca-ParametersNR-ForDC-v1560	CA-ParametersNR-v1560	OPTIONAL,
featureSetCombinationDC	FeatureSetCombinationId	OPTIONAL
}		
CA-ParametersNRDC-v15g0 ::=	SEQUENCE {	
ca-ParametersNR-ForDC-v15g0	CA-ParametersNR-v15g0	OPTIONAL
}		
CA-ParametersNRDC-v1610 ::= SEQUENCE {		
-- R1 18-1: Semi-static power sharing mode1 between MCG and SCG cells of same FR for NR dual connectivity		
intraFR-NR-DC-PwrSharingMode1-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 18-1a: Semi-static power sharing mode 2 between MCG and SCG cells of same FR for NR dual connectivity		
intraFR-NR-DC-PwrSharingMode2-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 18-1b: Dynamic power sharing between MCG and SCG cells of same FR for NR dual connectivity		
intraFR-NR-DC-DynamicPwrSharing-r16	ENUMERATED {short, long}	OPTIONAL,
asyncNRDC-r16	ENUMERATED {supported}	OPTIONAL
}		
CA-ParametersNRDC-v1630 ::=	SEQUENCE {	
ca-ParametersNR-ForDC-v1610	CA-ParametersNR-v1610	OPTIONAL,
ca-ParametersNR-ForDC-v1630	CA-ParametersNR-v1630	OPTIONAL
}		
CA-ParametersNRDC-v1640 ::=	SEQUENCE {	
ca-ParametersNR-ForDC-v1640	CA-ParametersNR-v1640	OPTIONAL
}		
CA-ParametersNRDC-v1650 ::=	SEQUENCE {	
supportedCellGrouping-r16	BIT STRING (SIZE (1..maxCellGroupings-r16))	OPTIONAL
}		
CA-ParametersNRDC-v16a0 ::=	SEQUENCE {	
ca-ParametersNR-ForDC-v16a0	CA-ParametersNR-v16a0	OPTIONAL
}		
CA-ParametersNRDC-v16j0 ::=	SEQUENCE {	
ca-ParametersNR-ForDC-v16j0	CA-ParametersNR-v1690	OPTIONAL
}		
CA-ParametersNRDC-v1700 ::=	SEQUENCE {	
-- R1 31-9: Indicates the support of simultaneous transmission and reception of an IAB-node from multiple parent nodes		
simultaneousRxTx-IAB-MultipleParents-r17	ENUMERATED {supported}	OPTIONAL,
condPSCellAdditionNRDC-r17	ENUMERATED {supported}	OPTIONAL,
scg-ActivationDeactivationNRDC-r17	ENUMERATED {supported}	OPTIONAL,
scg-ActivationDeactivationResumeNRDC-r17	ENUMERATED {supported}	OPTIONAL,
beamManagementType-CBM-r17	ENUMERATED {supported}	OPTIONAL
}		
CA-ParametersNRDC-v1720 ::=	SEQUENCE {	
ca-ParametersNR-ForDC-v1700	CA-ParametersNR-v1700	OPTIONAL,
ca-ParametersNR-ForDC-v1720	CA-ParametersNR-v1720	OPTIONAL
}		

CA-ParametersNRDC-v1730 ::=
ca-ParametersNR-ForDC-v1730
}

SEQUENCE {
CA-ParametersNR-v1730
}

OPTIONAL

CA-ParametersNRDC-v1760 ::=
ca-ParametersNR-ForDC-v1760
}

SEQUENCE {
CA-ParametersNR-v1760
}

CA-ParametersNRDC-v1780 ::=
ca-ParametersNR-ForDC-v1780
}

SEQUENCE {
CA-ParametersNR-v1780
}

OPTIONAL

CA-ParametersNRDC-v17b0 ::=
ca-ParametersNR-ForDC-v17b0
}

SEQUENCE {
CA-ParametersNR-v1740
}

OPTIONAL

CA-ParametersNRDC-v1800 ::=
ca-ParametersNR-ForDC-v1800
-- R1 55-6d: Capability on the number of CCs for monitoring a maximum number of BDs and non-overlapped CCEs per span for MCG and for
-- SCG when configured for NR-DC operation with Rel-16 PDCCH monitoring on all the serving cells
pdcch-BlindDetectionNRDC-r18
}

SEQUENCE {
CA-ParametersNR-v1800
SEQUENCE(SIZE (1..maxNrofPdcch-BlindDetectionMixed-1-r16)) OF
PDCCH-BlindDetectionMixed1-r18
}

OPTIONAL,
OPTIONAL

CA-ParametersNRDC-v1830 ::=
ca-ParametersNR-ForDC-v1830
}

SEQUENCE {
CA-ParametersNR-v1830
}

OPTIONAL

PDCCH-BlindDetectionMixed1-r18::=
pdcch-BlindDetectionCG-UE-Mixed-r18
pdcch-BlindDetectionMCG-UE-Mixed-r18
pdcch-BlindDetectionSCG-UE-Mixed-r18
}

SEQUENCE {
SEQUENCE{
INTEGER (1..15),
INTEGER (1..15)
}

-- TAG-CA-PARAMETERS-NRDC-STOP
-- ASN1STOP

CA-ParametersNRDC field descriptions
ca-ParametersNR-forDC (with and without suffix) If this field is present for a band combination, it reports the UE capabilities when NR-DC is configured with the band combination. If a version of this field (i.e., with or without suffix) is absent for a band combination, the corresponding <i>ca-ParametersNR</i> field version in <i>BandCombination</i> is applicable to the UE configured with NR-DC for the band combination. If a version of this field (i.e., with or without suffix) is present for a band combination but does not contain any parameters, the UE does not support the corresponding field version when configured with NR-DC for the band combination.
featureSetCombinationDC If this field is present for a band combination, it reports the feature set combination supported for the band combination when NR-DC is configured. If this field is absent for a band combination, the <i>featureSetCombination</i> in <i>BandCombination</i> (without suffix) is applicable to the UE configured with NR-DC for the band combination.

– *CarrierAggregationVariant*

The IE *CarrierAggregationVariant* informs the network about supported "placement" of the SpCell in an NR cell group.

CarrierAggregationVariant information element

```
-- ASN1START
-- TAG-CARRIERAGGREGATIONVARIANT-START

CarrierAggregationVariant ::=
    fr1fdd-FR1TDD-CA-SpCellOnFR1FDD      ENUMERATED {supported}      OPTIONAL,
    fr1fdd-FR1TDD-CA-SpCellOnFR1TDD      ENUMERATED {supported}      OPTIONAL,
    fr1fdd-FR2TDD-CA-SpCellOnFR1FDD      ENUMERATED {supported}      OPTIONAL,
    fr1fdd-FR2TDD-CA-SpCellOnFR2TDD      ENUMERATED {supported}      OPTIONAL,
    fr1tdd-FR2TDD-CA-SpCellOnFR1TDD      ENUMERATED {supported}      OPTIONAL,
    fr1tdd-FR2TDD-CA-SpCellOnFR2TDD      ENUMERATED {supported}      OPTIONAL,
    fr1fdd-FR1TDD-FR2TDD-CA-SpCellOnFR1FDD  ENUMERATED {supported}      OPTIONAL,
    fr1fdd-FR1TDD-FR2TDD-CA-SpCellOnFR1TDD  ENUMERATED {supported}      OPTIONAL,
    fr1fdd-FR1TDD-FR2TDD-CA-SpCellOnFR2TDD  ENUMERATED {supported}      OPTIONAL
}

-- TAG-CARRIERAGGREGATIONVARIANT-STOP
-- ASN1STOP
```

– *CodebookParameters*

The IE *CodebookParameters* is used to convey codebook related parameters.

CodebookParameters information element

```
-- ASN1START
-- TAG-CODEBOOKPARAMETERS-START

CodebookParameters ::=
    type1
        singlePanel
            supportedCSI-RS-ResourceList
            modes
            maxNumberCSI-RS-PerResourceSet
        },
        multiPanel
            supportedCSI-RS-ResourceList
            modes
            nrofPanels
            maxNumberCSI-RS-PerResourceSet
        }
    },
    type2
        supportedCSI-RS-ResourceList
        parameterLx

SEQUENCE {
    SEQUENCE {
        SEQUENCE {
            SEQUENCE (SIZE (1.. maxNrofCSI-RS-Resources)) OF SupportedCSI-RS-Resource,
            ENUMERATED {mode1, mode1andMode2},
            INTEGER (1..8)
        },
        SEQUENCE {
            SEQUENCE (SIZE (1.. maxNrofCSI-RS-Resources)) OF SupportedCSI-RS-Resource,
            ENUMERATED {mode1, mode2, both},
            ENUMERATED {n2, n4},
            INTEGER (1..8)
        }
    },
    SEQUENCE {
        SEQUENCE (SIZE (1.. maxNrofCSI-RS-Resources)) OF SupportedCSI-RS-Resource,
        INTEGER (2..4),
    }
}

OPTIONAL
```

```

    amplitudeScalingType      ENUMERATED {wideband, widebandAndSubband},
    amplitudeSubsetRestriction ENUMERATED {supported} OPTIONAL
  }
  type2-PortSelection SEQUENCE {
    supportedCSI-RS-ResourceList SEQUENCE (SIZE (1..maxNrofCSI-RS-Resources)) OF SupportedCSI-RS-Resource,
    parameterLx INTEGER (2..4),
    amplitudeScalingType ENUMERATED {wideband, widebandAndSubband}
  } OPTIONAL
}

CodebookParameters-v1610 ::= SEQUENCE {
  supportedCSI-RS-ResourceListAlt-r16 SEQUENCE {
    type1-SinglePanel-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-Resources)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
  } OPTIONAL,
  type1-MultiPanel-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-Resources)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
  } OPTIONAL,
  type2-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-Resources)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
  } OPTIONAL,
  type2-PortSelection-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-Resources)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
  } OPTIONAL
}

CodebookParametersAddition-r16 ::= SEQUENCE {
  etype2-r16 SEQUENCE {
    -- R1 16-3a Regular eType 2 R=1
    etype2R1-r16 SEQUENCE {
      supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF
      INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    },
    -- R1 16-3a-1 Regular eType 2 R=2
    etype2R2-r16 SEQUENCE {
      supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF
      INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    }
  } OPTIONAL,
  -- R1 16-3a-2: Support of parameter combinations 7-8
  paramComb7-8-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 16-3a-3: Support of rank 3,4
  rank3-4-r16 ENUMERATED {supported} OPTIONAL,
  -- R1 16-3a-4: CBR with soft amplitude restriction
  amplitudeSubsetRestriction-r16 ENUMERATED {supported} OPTIONAL
} OPTIONAL,
  etype2-PS-r16 SEQUENCE {
    -- R1 16-3b Regular eType 2 R=1 PortSelection
    etype2R1-PortSelection-r16 SEQUENCE {
      supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF
      INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    },
    -- R1 16-3b-1 Regular eType 2 R=2 PortSelection
    etype2R2-PortSelection-r16 SEQUENCE {
      supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF
      INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    }
  } OPTIONAL,
}

```

```

-- R1 16-3b-2: Support of rank 3,4
rank3-4-r16          ENUMERATED {supported}      OPTIONAL
}
}
}

CodebookComboParametersAddition-r16 ::= SEQUENCE {
-- R1 16-8 Mixed codebook types
type1SP-Type2-null-r16          SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1SP-Type2PS-null-r16        SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1SP-eType2R1-null-r16       SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1SP-eType2R2-null-r16       SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1SP-eType2R1PS-null-r16     SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1SP-eType2R2PS-null-r16     SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1SP-Type2-Type2PS-r16       SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1MP-Type2-null-r16          SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1MP-Type2PS-null-r16        SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1MP-eType2R1-null-r16       SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1MP-eType2R2-null-r16       SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1MP-eType2R1PS-null-r16     SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1MP-eType2R2PS-null-r16     SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
type1MP-Type2-Type2PS-r16       SEQUENCE {
supportedCSI-RS-ResourceListAdd-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
}
}

CodebookParametersfetype2-r17 ::= SEQUENCE {
-- R1 23-9-1 Basic Features of Further Enhanced Port-Selection Type II Codebook (FeType-II)
fetype2basic-r17 SEQUENCE (SIZE (1.. maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16),
}

```

```

-- R1 23-9-2 Support of M=2 and R=1 for FeType-II
fetype2R1-r17          SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r17)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                        OPTIONAL,
-- R1 23-9-4 Support of R = 2 for FeType-II
fetype2R2-r17          SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r17)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                        OPTIONAL,
-- R1 23-9-3 Support of rank 3, 4 for FeType-II
fetype2Rank3Rank4-r17  ENUMERATED {supported}      OPTIONAL
}

CodebookComboParameterMixedType-r17 ::= SEQUENCE {
-- R1 23-9-5 Active CSI-RS resources and ports for mixed codebook types in any slot
type1SP-feType2PS-null-r17          SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1SP-feType2PS-M2R1-null-r17      SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1SP-feType2PS-M2R2-null-r17      SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1SP-Type2-feType2-PS-M1-r17      SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1SP-Type2-feType2-PS-M2R1-r17    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1SP-eType2R1-feType2-PS-M1-r17   SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1SP-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1MP-feType2PS-null-r17           SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1MP-feType2PS-M2R1-null-r17      SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1MP-feType2PS-M2R2-null-r17      SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1MP-Type2-feType2-PS-M1-r17      SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1MP-Type2-feType2-PS-M2R1-r17    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1MP-eType2R1-feType2-PS-M1-r17   SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL,
type1MP-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                     OPTIONAL
}

CodebookComboParameterMultiTRP-r17 ::= SEQUENCE {
-- R1 23-7-1b Active CSI-RS resources and ports in the presence of multi-TRP CSI
-- {Codebook 2, Codebook 3} =(NULL, NULL}
nCJT-null-null          SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                        OPTIONAL,
nCJT1SP-null-null       SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                        OPTIONAL,
-- {Codebook 2, Codebook 3} = {( "Rel 16 combinations in FG 16-8"}
nCJT-Type2-null-r16     SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                        OPTIONAL,
nCJT-Type2PS-null-r16   SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                        OPTIONAL,
}

```

```

nCJT-eType2R1-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-eType2R2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-eType2R1PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-eType2R2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-Type2-Type2PS-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-Type2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-Type2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-eType2R1-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-eType2R2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-eType2R1PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-eType2R2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-Type2-Type2PS-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
-- {Codebook 2, Codebook 3} = {"New Rel17 combinations in FG 23-9-5"}
nCJT-feType2PS-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-feType2PS-M2R1-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-feType2PS-M2R2-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-Type2-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-Type2-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-eType2R1-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-feType2PS-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-feType2PS-M2R1-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-feType2PS-M2R2-null-r1 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-Type2-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-Type2-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-eType2R1-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
nCJT1SP-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
}

```

```

CodebookParametersAdditionPerBC-r16 ::= SEQUENCE {
    -- R1 16-3a Regular eType 2 R=1
    etype2R1-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    -- R1 16-3a-1 Regular eType 2 R=2
    etype2R2-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    -- R1 16-3b Regular eType 2 R=1 PortSelection
    etype2R1-PortSelection-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    -- R1 16-3b-1 Regular eType 2 R=2 PortSelection
    etype2R2-PortSelection-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL
}

```

```

CodebookComboParametersAdditionPerBC-r16 ::= SEQUENCE {
    -- R1 16-8 Mixed codebook types
    type1SP-Type2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1SP-Type2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1SP-eType2R1-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1SP-eType2R2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1SP-eType2R1PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1SP-eType2R2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1SP-Type2-Type2PS-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1MP-Type2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1MP-Type2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1MP-eType2R1-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1MP-eType2R2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1MP-eType2R1PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1MP-eType2R2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
    type1MP-Type2-Type2PS-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL
}

```

```

CodebookParametersfetype2PerBC-r17 ::= SEQUENCE {
    -- R1 23-9-1 Basic Features of Further Enhanced Port-Selection Type II Codebook (FeType-II)
    fetype2basic-r17 SEQUENCE (SIZE (1.. maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16),
    -- R1 23-9-2 Support of M=2 and R=1 for FeType-II
    fetype2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r17)) OF INTEGER (0.. maxNrofCSI-RS-ResourcesAlt-1-r16)
    OPTIONAL,
}

```



```

-- R1 23-9-4    Support of R = 2 for FeType-II
fetype2R2-r17    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r17)) OF INTEGER (0.. maxNrofCSI-RS-ResourcesAlt-1-r16)
                  OPTIONAL
}

CodebookComboParameterMixedTypePerBC-r17 ::= SEQUENCE {
-- R1 23-9-5 Active CSI-RS resources and ports for mixed codebook types in any slot
type1SP-feType2PS-null-r17    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1SP-feType2PS-M2R1-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1SP-feType2PS-M2R2-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1SP-Type2-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1SP-Type2-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1SP-eType2R1-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1SP-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1MP-feType2PS-null-r17    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1MP-feType2PS-M2R1-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1MP-feType2PS-M2R2-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1MP-Type2-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1MP-Type2-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1MP-eType2R1-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
type1MP-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL
}

CodebookComboParameterMultiTRP-PerBC-r17 ::= SEQUENCE {
-- R1 23-7-1b Active CSI-RS resources and ports in the presence of multi-TRP CSI
-- {Codebook 2, Codebook 3} =(NULL, NULL)
nCJT-null-null    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                  OPTIONAL,
nCJT1SP-null-null    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                  OPTIONAL,
-- {Codebook 2, Codebook 3} = {( "Rel 16 combinations in FG 16-8" )}
nCJT-Type2-null-r16    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                  OPTIONAL,
nCJT-Type2PS-null-r16    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                  OPTIONAL,
nCJT-eType2R1-null-r16    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                  OPTIONAL,
nCJT-eType2R2-null-r16    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                  OPTIONAL,
nCJT-eType2R1PS-null-r16    SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)

```



```

OPTIONAL,
nCJT-eType2R2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT-Type2-Type2PS-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-Type2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-Type2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-eType2R1-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-eType2R2-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-eType2R1PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-eType2R2PS-null-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-Type2-Type2PS-r16 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
-- {Codebook 2, Codebook 3} = {"New Rel17 combinations in FG 23-9-5"}
nCJT-feType2PS-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT-feType2PS-M2R1-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT-feType2PS-M2R2-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT-Type2-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT-Type2-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT-eType2R1-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-feType2PS-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-feType2PS-M2R1-null-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-feType2PS-M2R2-null-r1 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-Type2-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-Type2-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-eType2R1-feType2-PS-M1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL,
nCJT1SP-eType2R1-feType2-PS-M2R1-r17 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
OPTIONAL
}

CodebookParameterssetType2DopplerCSI-r18 ::= SEQUENCE {
  -- R1 40-3-2-1: Support of Rel-16-based doppler CSI
  eType2Doppler-r18 SEQUENCE {
    supportedCSI-RS-ResourceList-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
  }
}

```

```

        valueY-P-SP-CSI-RS-r18          INTEGER (1..3),
        valueY-A-CSI-RS-r18             INTEGER (1..3),
        scalingfactor-r18                ENUMERATED {n1, n2, n4}
    },
    -- R1 40-3-2-1a: Support of Rel-16-based doppler measurement with N4>1
    eType2DopplerN4-r18 SEQUENCE {
        supportedCSI-RS-ReportSettingList1-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF
                                                    SupportedCSI-RS-ReportSetting-r18,
        supportedCSI-RS-ReportSettingList2-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF
                                                    SupportedCSI-RS-ReportSetting-r18
    }
    -- R1 40-3-2-1a-1: DD unit size when A-CSI-RS is configured for CMR N4>1
    ddUnitSize-A-CSI-RS-CMR-r18          ENUMERATED {supported}
    -- R1 40-3-2-1b: Maximum number of aperiodic CSI-RS resources that can be configured in the same CSI report setting for
    -- Rel-16-based doppler measurement
    maxNumberAperiodicCSI-RS-Resource-r18 ENUMERATED {n4, n8, n12}
    -- R1 40-3-2-2: Support R=2 for Rel-16-based doppler codebook
    eType2DopplerR2-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    -- R1 40-3-2-3: Support X=1 based on first and last slot of WCSI, for Rel-16-based doppler codebook
    eType2DopplerX1-r18          ENUMERATED {supported}
    -- R1 40-3-2-3a: Support X=2 CQI based on 2 slots for Rel-16-based doppler codebook
    eType2DopplerX2-r18          ENUMERATED {supported}
    -- R1 40-3-2-7: support of l = (n - nCSI,ref ) for CSI reference slot for Rel-16 based doppler codebook
    eType2DopplerL-N4D1-r18      ENUMERATED {supported}
    -- R1 40-3-2-8: Support of L=6 for Rel-16 based doppler codebook
    eType2DopplerL6-r18          ENUMERATED {supported}
    -- R1 40-3-2-9: Support of rank equals 3 and 4 for Rel-16 based doppler codebook
    eType2DopplerR3R4-r18        ENUMERATED {supported}
}

CodebookParametersfetype2DopplerCSI-r18 ::= SEQUENCE {
    -- R1 40-3-2-4: Support of Rel-17-based doppler CSI
    feType2Doppler-r18 SEQUENCE {
        supportedCSI-RS-ResourceList-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                                    (0..maxNrofCSI-RS-ResourcesAlt-1-r16),
        valueY-A-CSI-RS-r18             INTEGER (1..3),
        scalingfactor-r18                ENUMERATED {n1, n2, n4}
    },
    -- R1 40-3-2-4b: Maximum number of aperiodic CSI-RS resources that can be configured in the same CSI report setting for
    -- Rel-17-based doppler CSI
    maxNumberAperiodicCSI-RS-Resource-r18 ENUMERATED {n4, n8, n12}
    -- R1 40-3-2-5: Support of M=2 and R=1 for Rel-17-based doppler codebook
    feType2DopplerM2R1-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                                    (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    -- R1 40-3-2-6: Support R=2 for Rel-17-based doppler codebook
    feType2DopplerR2-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
    -- R1 40-3-2-7a: Support of l = (n - nCSI,ref ) for CSI reference slot for Rel-17 based doppler codebook
    feType2DopplerL-N4D1-r18 ENUMERATED {supported}
    -- R1 40-3-2-10: Support of rank equals 3 and 4 for Rel-17 based doppler codebook
}

```

```

    feType2DopplerR3R4-r18          ENUMERATED {supported}          OPTIONAL
}

CodebookParametersetype2CJT-r18 ::= SEQUENCE {
    -- R1 40-3-1-1: Basic feature for Rel-16-based CJT type-II codebook
    eType2CJT-r18                    SEQUENCE {
        supportedCSI-RS-ResourceList-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                          (0..maxNrofCSI-RS-ResourcesAlt-1-r16),
        scalingfactor-r18              ENUMERATED {n1, n1dot5, n2},
        maxNumberNZP-CSI-RS-MultiTRP-CJT-r18 INTEGER (2..4)
    },
    -- R1 40-3-1-1a: Support of mode 1 for Rel-16-based CJT type-II codebook with FD basis selection integer frequency offset
    eType2CJT-FD-IO-r18              SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                          (0..maxNrofCSI-RS-ResourcesAlt-1-r16)          OPTIONAL,
    -- R1 40-3-1-2: Support for FD basis selection fractional offset mode for Rel-16-based CJT codebook with mode1
    eType2CJT-FD-FO-r18              ENUMERATED {supported}          OPTIONAL,
    -- R1 40-3-1-3: Support R=2 for Rel-16-based CJT codebook
    eType2CJT-R2-r18                 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                          (0..maxNrofCSI-RS-ResourcesAlt-1-r16)          OPTIONAL,
    -- R1 40-3-1-4: Support pv={1/2,1/2,1/2,1/2} and beta=1/2 for Rel-16-based CJT codebook
    eType2CJT-PV-Beta-r18            ENUMERATED {supported}          OPTIONAL,
    -- R1 40-3-1-9: Support for 2NN1N2 >32 for Rel-16 based CJT codebook
    eType2CJT-2NN1N2-r18            ENUMERATED {n64,n96,n128}        OPTIONAL,
    -- R1 40-3-1-12: Support of Rank 3 and 4 for Rel-16-based CJT type-II codebook
    eType2CJT-Rank3Rank4-r18         ENUMERATED {supported}          OPTIONAL,
    -- R1 40-3-1-14: Support of Support of L=6 for Rel-16-based CJT type-II codebook
    eType2CJT-L6-r18                 ENUMERATED {supported}          OPTIONAL,
    -- R1 40-3-1-15: dynamic selection of N<=N_TRP for Rel-16-based CJT type-II codebook
    eType2CJT-NN-r18                 ENUMERATED {supported}          OPTIONAL,
    -- R1 40-3-1-17: Support for N_L>1 combinations of number of SD basis across CSI-RS resources for Rel-16-based CJT
    -- type-II codebook
    eType2CJT-NL-SD-r18              ENUMERATED {n2,n4}              OPTIONAL,
    -- R1 40-3-1-23: Unequal number of spatial basis selection configuration for multi-TRP CJT
    eType2CJT-Unequal-r18            ENUMERATED {supported}          OPTIONAL
}

CodebookParametersfetype2CJT-r18 ::= SEQUENCE {
    -- R1 40-3-1-5: Basic feature for Rel-17-based CJT type-II codebook
    feType2CJT-r18                  SEQUENCE {
        supportedCSI-RS-ResourceList-r18 SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                          (0..maxNrofCSI-RS-ResourcesAlt-1-r16),
        scalingfactor-r18              ENUMERATED {n1, n1dot5, n2},
        maxNumberNZP-CSI-RS-MultiTRP-CJT-r18 INTEGER (2..4)
    },
    -- R1 40-3-1-5a: Support of mode 1 for Rel-17-based CJT type-II codebook with FD basis selection integer frequency offset
    feType2CJT-FD-IO-r18            SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                          (0..maxNrofCSI-RS-ResourcesAlt-1-r16)          OPTIONAL,
    -- R1 40-3-1-6: Support for FD basis selection fractional offset mode for Rel-17-based CJT codebook with mode1
    feType2CJT-FD-FO-r18            ENUMERATED {supported}          OPTIONAL,
    -- R1 40-3-1-7: Support of M=2 and R=1 for Rel-17-based CJT codebook
    feType2CJT-M2R1-r18             SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
                                          (0..maxNrofCSI-RS-ResourcesAlt-1-r16)          OPTIONAL,
    -- R1 40-3-1-8: Support of R=2 for Rel-17-based CJT codebook
    feType2CJT-R2-r18               SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER
}

```

```

                                (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
-- R1 40-3-1-9a: Support for 2NN1N2 >32 for Rel-17 based CJT codebook
feType2CJT-2NN1N2-r18      ENUMERATED {n64,n96,n128}
-- R1 40-3-1-13: Support of Rank 3 and 4 for Rel-17-based CJT type-II codebook
feType2CJT-Rank3Rank4-r18  ENUMERATED {supported}
-- R1 40-3-1-16: dynamic selection of N<=N_TRP for Rel-17-based CJT type-II codebook
feType2CJT-NN-r18          ENUMERATED {supported}
-- R1 40-3-1-18: Support for N_L>1 combinations of number of SD basis across CSI-RS resources for Rel-17-based CJT
-- type-II codebook
feType2CJT-NL-r18          ENUMERATED {n2,n4}
-- R1 40-3-1-23a: Unequal number of port selection configuration for multi-TRP CJT
feType2CJT-Unequal-r18     ENUMERATED {supported}
}

CodebookComboParametersCJT-r18 ::= SEQUENCE {
-- R1 40-3-1-11: Active CSI-RS resources and ports for mixed codebook types including Type-II-CJT in any slot
-- {Codebook 1} = Type I SP
cjt-Type1SP-eType2R1-null   SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1SP-eType2R2-null   SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1SP-feType2R1M1-null SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1SP-feType2R1M2-null SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1SP-feType2R2M2-null SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
-- {Codebook 1} = Type I MP
cjt-Type1MP-eType2R1-null   SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1MP-eType2R2-null   SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1MP-feType2R1M1-null SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1MP-feType2R1M2-null SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL,
cjt-Type1MP-feType2R2M2-null SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesExt-r16)) OF INTEGER (0..maxNrofCSI-RS-ResourcesAlt-1-r16)
                                OPTIONAL
}

CodebookParametersHARQ-ACK-PUSCH-r18 ::= SEQUENCE {
-- R1 55-4a: Multiplexing Type-1 HARQ-ACK codebook in a PUSCH for PDSCH scheduled after UL grant
multiplexingType1-r18      ENUMERATED {supported}
-- R1 55-4b: Multiplexing Type-2 HARQ-ACK codebook in a PUSCH for PDSCH scheduled after UL grant
multiplexingType2-r18      ENUMERATED {supported}
-- R1 55-4c: Multiplexing Type-3 HARQ-ACK codebook in a PUSCH for PDSCH scheduled after UL grant
multiplexingType3-r18      ENUMERATED {supported}
-- R1 55-4d: Determining a different PUCCH resource to transmit HARQ-ACK for PDSCH scheduled after UL grant
pucch-DiffResource-PDSCH-r18 ENUMERATED {supported}
-- R1 55-4e: Determining different codebook size to transmit HARQ-ACK for PDSCH scheduled after UL grant
diffCB-Size-PDSCH-r18      ENUMERATED {supported}
}

CodebookVariantsList-r16 ::= SEQUENCE (SIZE (1..maxNrofCSI-RS-ResourcesAlt-r16)) OF SupportedCSI-RS-Resource

```

```

SupportedCSI-RS-Resource ::= SEQUENCE {
    maxNumberTxPortsPerResource    ENUMERATED {p2, p4, p8, p12, p16, p24, p32},
    maxNumberResourcesPerBand      INTEGER (1..64),
    totalNumberTxPortsPerBand      INTEGER (2..256)
}

SupportedCSI-RS-ReportSetting-r18 ::= SEQUENCE {
    maxN4-r18                      ENUMERATED {n1, n2, n4, n8},
    maxNumberTxPortsPerResource-r18 ENUMERATED {p2, p4, p8, p12, p16, p24, p32},
    maxNumberResourcesPerBand-r18  INTEGER (1..64),
    totalNumberTxPortsPerBand-r18  INTEGER (2..256)
}

-- TAG-CODEBOOKPARAMETERS-STOP
-- ASN1STOP

```

CodebookParameters field descriptions

supportedCSI-RS-ResourceListAlt

This field indicates the alternative list of *SupportedCSI-RS-Resource* supported for each codebook type. The supported CSI-RS resource is indicated by an integer value which pinpoints *SupportedCSI-RS-Resource* defined in *CodebookVariantsList*. The value 0 corresponds to the first entry of *CodebookVariantsList*. The value 1 corresponds to the second entry of *CodebookVariantsList*, and so on. For each codebook type, the field shall be included in both *codebookParametersPerBC* (but optional for single CC) and *codebookParametersPerBand*.

— *DL-PRS-MeasurementWithRxFH-RRC-Connected*

The IE *DL-PRS-MeasurementWithRxFH-RRC-Connected* is used to convey the capabilities supported by the UE for PRS measurement with Rx frequency hopping within a measurement gap and measurement reporting in RRC_CONNECTED for RedCap UEs.

DL-PRS-MeasurementWithRxFH-RRC-Connected information element

```

-- ASN1START
-- TAG-DL-PRS-MEASUREMENTWITHRXFH-RRC-CONNECTED-START

DL-PRS-MeasurementWithRxFH-RRC-Connected-r18 ::= SEQUENCE {
    maximumPRS-BandwidthAcrossAllHopsFR1-r18    ENUMERATED {mhz40, mhz50, mhz80, mhz100}    OPTIONAL,
    maximumPRS-BandwidthAcrossAllHopsFR2-r18    ENUMERATED {mhz100, mhz200, mhz400}    OPTIONAL,
    maximumFH-Hops-r18                          ENUMERATED {n2, n3, n4, n5, n6}        OPTIONAL,
    processingDuration-r18                      SEQUENCE {
        processingPRS-SymbolsDurationN3-r18      ENUMERATED {msDot125, msDot25, msDot5, ms1, ms2, ms4, ms6, ms8, ms12,
                                                             ms16, ms20, ms25, ms30, ms32, ms35, ms40, ms45, ms50},
        processingDurationT3-r18                ENUMERATED {ms8, ms16, ms20, ms30, ms40, ms80, ms160, ms320, ms640, ms1280}
    } OPTIONAL,
    rf-RxRetuneTimeFR1-r18                     ENUMERATED {n70, n140, n210}             OPTIONAL,
    rf-RxRetuneTimeFR2-r18                     ENUMERATED {n35, n70, n140}             OPTIONAL,
    numOfOverlappingPRB-r18                    ENUMERATED {n0, n1, n2, n4}             OPTIONAL,
    ...
}

```

```
-- TAG-DL-PRS-MEASUREMENTWITHRXFH-RRC-CONNECTED-STOP
-- ASN1STOP
```

— *ERedCapParameters*

The IE *ERedCapParameters* is used to indicate the UE capabilities supported by eRedCap UEs.

ERedCapParameters information element

```
-- ASN1START
-- TAG-EREDCAPPARAMETERS-START

ERedCapParameters-r18 ::= SEQUENCE {
  -- R1 48-1: eRedCap UE with reduced peak data rate and reduced baseband bandwidth in FR1
  supportOfERedCap-r18      ENUMERATED {supported},
  -- R1 48-2: eRedCap UE with reduced peak data rate without reduced baseband bandwidth in FR1
  eRedCapNotReducedBB-BW-r18 ENUMERATED {supported} OPTIONAL,
  eRedCapIgnoreCapabilityFiltering-r18 ENUMERATED {supported} OPTIONAL
}

-- TAG-EREDCAPPARAMETERS-STOP
-- ASN1STOP
```

— *FeatureSetCombination*

The IE *FeatureSetCombination* is a two-dimensional matrix of *FeatureSet* entries.

Each *FeatureSetsPerBand* contains a list of feature sets applicable to the carrier(s) of one band entry of the associated band combination. Across the associated bands, the UE shall support the combination of *FeatureSets* at the same position in the *FeatureSetsPerBand*. All *FeatureSetsPerBand* in one *FeatureSetCombination* must have the same number of entries.

The number of *FeatureSetsPerBand* in the *FeatureSetCombination* must be equal to the number of band entries in an associated band combination. The first *FeatureSetPerBand* applies to the first band entry of the band combination, and so on.

Each *FeatureSet* contains either a pair of NR or E-UTRA feature set IDs for UL and DL.

In case of NR, the actual feature sets for UL and DL are defined in the *FeatureSets* IE and referred to from here by their ID, i.e., their position in the *featureSetsUplink* / *featureSetsDownlink* list in the *FeatureSet* IE.

In case of E-UTRA, the feature sets referred to from this list are defined in TS 36.331 [10] and conveyed as part of the *UE-EUTRA-Capability* container.

The *FeatureSetUplink* and *FeatureSetDownlink* referred to from the *FeatureSet* comprise, among other information, a set of *FeatureSetUplinkPerCC-Ids* and *FeatureSetDownlinkPerCC-Ids*. The number of these per-CC IDs determines the number of carriers that the UE is able to aggregate contiguously in frequency domain in the corresponding band. The number of carriers supported by the UE is also restricted by the bandwidth class indicated in the associated *BandCombination*, if present.

In feature set combinations the UE shall exclude entries with same or lower capabilities, since the network may anyway assume that the UE supports those.

NOTE 1: The UE may advertise fallback band-combinations in which it supports additional functionality explicitly in two ways: Either by setting FeatureSet IDs to zero (inter-band and intra-band non-contiguous fallback) and by reducing the number of FeatureSet-PerCC Ids in a Feature Set (intra-band contiguous fallback). Or by separate *BandCombination* entries with associated *FeatureSetCombinations*.

NOTE 2: The UE may advertise a *FeatureSetCombination* containing only fallback band combinations. That means, in a *FeatureSetCombination*, each group of *FeatureSets* across the bands may contain at least one pair of *FeatureSetUplinkId* and *FeatureSetDownlinkId* which is set to 0/0.

NOTE 3: The Network configures serving cell(s) and BWP(s) configuration to comply with capabilities derived from the combination of FeatureSets at the same position in the FeatureSetsPerBand, regardless of activated/deactivated serving cell(s) and BWP(s).

***FeatureSetCombination* information element**

```
-- ASN1START
-- TAG-FEATURESETCOMBINATION-START

FeatureSetCombination ::= SEQUENCE (SIZE (1..maxSimultaneousBands)) OF FeatureSetsPerBand
FeatureSetsPerBand ::= SEQUENCE (SIZE (1..maxFeatureSetsPerBand)) OF FeatureSet
FeatureSet ::= CHOICE {
    eutra SEQUENCE {
        downlinkSetEUTRA
        uplinkSetEUTRA
    },
    nr SEQUENCE {
        downlinkSetNR
        uplinkSetNR
    }
}

-- TAG-FEATURESETCOMBINATION-STOP
-- ASN1STOP
```

FeatureSetCombinationId

The IE *FeatureSetCombinationId* identifies a *FeatureSetCombination*. The *FeatureSetCombinationId* of a *FeatureSetCombination* is the position of the *FeatureSetCombination* in the featureSetCombinations list (in *UE-NR-Capability* or *UE-MRDC-Capability*). The *FeatureSetCombinationId* = 0 refers to the first entry in the *featureSetCombinations* list (in *UE-NR-Capability* or *UE-MRDC-Capability*).

NOTE: The *FeatureSetCombinationId* = 1024 is not used due to the maximum entry number of *featureSetCombinations*.

***FeatureSetCombinationId* information element**

```
-- ASN1START
-- TAG-FEATURESETCOMBINATIONID-START
```


FeatureSetCombinationId ::= INTEGER (0.. maxFeatureSetCombinations)

-- TAG-FEATURESETCOMBINATIONID-STOP
-- ASN1STOP

— FeatureSetDownlink

The IE *FeatureSetDownlink* indicates a set of features that the UE supports on the carriers corresponding to one band entry in a band combination.

FeatureSetDownlink information element

-- ASN1START
-- TAG-FEATURESETDOWNLINK-START

```
FeatureSetDownlink ::=
    featureSetListPerDownlinkCC
        SEQUENCE {
            intraBandFreqSeparationDL
                FreqSeparationClass
                OPTIONAL,
            scalingFactor
                ENUMERATED {f0p4, f0p75, f0p8}
                OPTIONAL,
            dummy8
                ENUMERATED {supported}
                OPTIONAL,
            scellWithoutSSB
                ENUMERATED {supported}
                OPTIONAL,
            csi-RS-MeasSCellWithoutSSB
                ENUMERATED {supported}
                OPTIONAL,
            dummy1
                ENUMERATED {supported}
                OPTIONAL,
            type1-3-CSS
                ENUMERATED {supported}
                OPTIONAL,
            pdcch-MonitoringAnyOccasions
                ENUMERATED {withoutDCI-Gap, withDCI-Gap}
                OPTIONAL,
            dummy2
                ENUMERATED {supported}
                OPTIONAL,
            ue-SpecificUL-DL-Assignment
                ENUMERATED {supported}
                OPTIONAL,
            searchSpaceSharingCA-DL
                ENUMERATED {supported}
                OPTIONAL,
            timeDurationForQCL
                SEQUENCE {
                    scs-60kHz
                        ENUMERATED {s7, s14, s28}
                        OPTIONAL,
                    scs-120kHz
                        ENUMERATED {s14, s28}
                        OPTIONAL,
                }
            pdsch-ProcessingType1-DifferentTB-PerSlot
                SEQUENCE {
                    scs-15kHz
                        ENUMERATED {upto2, upto4, upto7}
                        OPTIONAL,
                    scs-30kHz
                        ENUMERATED {upto2, upto4, upto7}
                        OPTIONAL,
                    scs-60kHz
                        ENUMERATED {upto2, upto4, upto7}
                        OPTIONAL,
                    scs-120kHz
                        ENUMERATED {upto2, upto4, upto7}
                        OPTIONAL,
                }
            dummy3
                DummyA
                OPTIONAL,
            dummy4
                SEQUENCE (SIZE (1.. maxNrofCodebooks)) OF DummyB
                OPTIONAL,
            dummy5
                SEQUENCE (SIZE (1.. maxNrofCodebooks)) OF DummyC
                OPTIONAL,
            dummy6
                SEQUENCE (SIZE (1.. maxNrofCodebooks)) OF DummyD
                OPTIONAL,
            dummy7
                SEQUENCE (SIZE (1.. maxNrofCodebooks)) OF DummyE
                OPTIONAL,
        }

FeatureSetDownlink-v1540 ::= SEQUENCE {
    oneFL-DMRS-TwoAdditionalDMRS-DL
        ENUMERATED {supported}
        OPTIONAL,
    additionalDMRS-DL-Alt
        ENUMERATED {supported}
        OPTIONAL,
    twoFL-DMRS-TwoAdditionalDMRS-DL
        ENUMERATED {supported}
        OPTIONAL,
    oneFL-DMRS-ThreeAdditionalDMRS-DL
        ENUMERATED {supported}
        OPTIONAL,
}
```



```

    pdcch-MonitoringAnyOccasionsWithSpanGap SEQUENCE {
        scs-15kHz          ENUMERATED {set1, set2, set3}          OPTIONAL,
        scs-30kHz          ENUMERATED {set1, set2, set3}          OPTIONAL,
        scs-60kHz          ENUMERATED {set1, set2, set3}          OPTIONAL,
        scs-120kHz         ENUMERATED {set1, set2, set3}          OPTIONAL,
    }
    pdsch-SeparationWithGap          ENUMERATED {supported}      OPTIONAL,
    pdsch-ProcessingType2            SEQUENCE {
        scs-15kHz          ProcessingParameters                  OPTIONAL,
        scs-30kHz          ProcessingParameters                  OPTIONAL,
        scs-60kHz          ProcessingParameters                  OPTIONAL,
    } OPTIONAL,
    pdsch-ProcessingType2-Limited    SEQUENCE {
        differentTB-PerSlot-SCS-30kHz ENUMERATED {upto1, upto2, upto4, upto7}
    } OPTIONAL,
    dl-MCS-TableAlt-DynamicIndication ENUMERATED {supported}      OPTIONAL
}

FeatureSetDownlink-v15a0 ::= SEQUENCE {
    supportedSRS-Resources          SRS-Resources                OPTIONAL
}

FeatureSetDownlink-v15t0 ::= SEQUENCE {
    zeroSlotOffsetAperiodicSRS      ENUMERATED {supported}      OPTIONAL
}

FeatureSetDownlink-v1610 ::= SEQUENCE {
    -- R1 22-4e/4f/4g/4h: CBG based reception for DL with unicast PDSCH(s) per slot per CC with UE processing time Capability 1
    cbgPDSCH-ProcessingType1-DifferentTB-PerSlot-r16 SEQUENCE {
        scs-15kHz-r16      ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
        scs-30kHz-r16      ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
        scs-60kHz-r16      ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
        scs-120kHz-r16     ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
    } OPTIONAL,

    -- R1 22-3e/3f/3g/3h: CBG based reception for DL with unicast PDSCH(s) per slot per CC with UE processing time Capability 2
    cbgPDSCH-ProcessingType2-DifferentTB-PerSlot-r16 SEQUENCE {
        scs-15kHz-r16      ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
        scs-30kHz-r16      ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
        scs-60kHz-r16      ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
        scs-120kHz-r16     ENUMERATED {one, upto2, upto4, upto7} OPTIONAL,
    } OPTIONAL,
    intraFreqDAPS-r16          SEQUENCE {
        intraFreqDiffSCS-DAPS-r16 ENUMERATED {supported}          OPTIONAL,
        intraFreqAsyncDAPS-r16    ENUMERATED {supported}          OPTIONAL,
    } OPTIONAL,
    intraBandFreqSeparationDL-v1620 FreqSeparationClassDL-v1620  OPTIONAL,
    intraBandFreqSeparationDL-Only-r16 FreqSeparationClassDL-Only-r16 OPTIONAL,

    -- R1 11-2: Rel-16 PDCCH monitoring capability
    pdcch-Monitoring-r16        SEQUENCE {
        pdsch-ProcessingType1-r16 SEQUENCE {
            scs-15kHz-r16          PDCCH-MonitoringOccasions-r16 OPTIONAL,
            scs-30kHz-r16          PDCCH-MonitoringOccasions-r16 OPTIONAL
        }
    }

```

```

    }
    pdsch-ProcessingType2-r16 SEQUENCE {
        scs-15kHz-r16 PDCCH-MonitoringOccasions-r16 OPTIONAL,
        scs-30kHz-r16 PDCCH-MonitoringOccasions-r16 OPTIONAL,
    }
    }
    OPTIONAL,
    OPTIONAL,
    OPTIONAL,
    OPTIONAL,

-- R1 11-2b: Mix of Rel. 16 PDCCH monitoring capability and Rel. 15 PDCCH monitoring capability on different carriers
pdcch-MonitoringMixed-r16 ENUMERATED {supported} OPTIONAL,

-- R1 18-5c: Processing up to X unicast DCI scheduling for DL per scheduled CC
crossCarrierSchedulingProcessing-DiffSCS-r16 SEQUENCE {
    scs-15kHz-120kHz-r16 ENUMERATED {n1, n2, n4} OPTIONAL,
    scs-15kHz-60kHz-r16 ENUMERATED {n1, n2, n4} OPTIONAL,
    scs-30kHz-120kHz-r16 ENUMERATED {n1, n2, n4} OPTIONAL,
    scs-15kHz-30kHz-r16 ENUMERATED {n2} OPTIONAL,
    scs-30kHz-60kHz-r16 ENUMERATED {n2} OPTIONAL,
    scs-60kHz-120kHz-r16 ENUMERATED {n2} OPTIONAL,
}
OPTIONAL,

-- R1 16-2b-1: Support of single-DCI based SDM scheme
singleDCI-SDM-scheme-r16 ENUMERATED {supported} OPTIONAL,
}

FeatureSetDownlink-v16k0 ::= SEQUENCE {
    -- R1 22-8: For SRS for CB PUSCH and antenna switching on FR1 with symbol level offset for aperiodic SRS transmission
    offsetSRS-CB-PUSCH-Ant-Switch-fr1-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 22-8a: PDCCH monitoring on any span of up to 3 consecutive OFDM symbols of a slot and constrained timeline for SRS for CB
    -- PUSCH and antenna switching on FR1
    offsetSRS-CB-PUSCH-PDCCH-MonitorSingleOcc-fr1-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 22-8b: For type 1 CSS with dedicated RRC configuration, type 3 CSS, and UE-SS, monitoring occasion can be any OFDM symbol(s)
    -- of a slot for Case 2 and constrained timeline for SRS for CB PUSCH and antenna switching on FR1
    offsetSRS-CB-PUSCH-PDCCH-MonitorAnyOccWithoutGap-fr1-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 22-8c: For type 1 CSS with dedicated RRC configuration, type 3 CSS, and UE-SS, monitoring occasion can be any OFDM symbol(s)
    -- of a slot for Case 2 with a DCI gap and constrained timeline for SRS for CB PUSCH and antenna switching on FR1
    offsetSRS-CB-PUSCH-PDCCH-MonitorAnyOccWithGap-fr1-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 22-8d: All PDCCH monitoring occasion can be any OFDM symbol(s) of a slot for Case 2 with a span gap and constrained timeline
    -- for SRS for CB PUSCH and antenna switching on FR1
    offsetSRS-CB-PUSCH-PDCCH-MonitorAnyOccWithSpanGap-fr1-r16 SEQUENCE {
        scs-15kHz-r16 ENUMERATED {set1, set2, set3} OPTIONAL,
        scs-30kHz-r16 ENUMERATED {set1, set2, set3} OPTIONAL,
        scs-60kHz-r16 ENUMERATED {set1, set2, set3} OPTIONAL,
    }
    OPTIONAL,
}

FeatureSetDownlink-v1700 ::= SEQUENCE {
    -- R1 36-2: Scaling factor to be applied to 1024QAM for FR1
    scalingFactor-1024QAM-FR1-r17 ENUMERATED {f0p4, f0p75, f0p8} OPTIONAL,
    -- R1 24 feature for existing UE cap to include new SCS
    timeDurationForQCL-v1710 SEQUENCE {
        scs-480kHz ENUMERATED {s56, s112} OPTIONAL,
        scs-960kHz ENUMERATED {s112, s224} OPTIONAL,
    }
    OPTIONAL,
    -- R1 23-6-1 SFN scheme A (scheme 1) for PDSCH and PDCCH

```

```

sfn-SchemeA-r17                               ENUMERATED {supported}           OPTIONAL,
-- R1 23-6-1-1 SFN scheme A (scheme 1) for PDCCH only
sfn-SchemeA-PDCCH-only-r17                     ENUMERATED {supported}           OPTIONAL,
-- R1 23-6-1a Dynamic switching - scheme A
sfn-SchemeA-DynamicSwitching-r17               ENUMERATED {supported}           OPTIONAL,
-- R1 23-6-1b SFN scheme A (scheme 1) for PDSCH only
sfn-SchemeA-PDSCH-only-r17                     ENUMERATED {supported}           OPTIONAL,
-- R1 23-6-2 SFN scheme B (TRP based pre-compensation) for PDSCH and PDCCH
sfn-SchemeB-r17                               ENUMERATED {supported}           OPTIONAL,
-- R1 23-6-2a Dynamic switching - scheme B
sfn-SchemeB-DynamicSwitching-r17               ENUMERATED {supported}           OPTIONAL,
-- R1 23-6-2b SFN scheme B (TRP based pre-compensation) for PDSCH only
sfn-SchemeB-PDSCH-only-r17                     ENUMERATED {supported}           OPTIONAL,
-- R1 23-2-1d PDCCH repetition for Case 2 PDCCH monitoring with a span gap
mTRP-PDCCH-Case2-1SpanGap-r17                 SEQUENCE {
    scs-15kHz-r17                             PDCCH-RepetitionParameters-r17   OPTIONAL,
    scs-30kHz-r17                             PDCCH-RepetitionParameters-r17   OPTIONAL,
    scs-60kHz-r17                             PDCCH-RepetitionParameters-r17   OPTIONAL,
    scs-120kHz-r17                            PDCCH-RepetitionParameters-r17   OPTIONAL,
}
-- R1 23-2-1e PDCCH repetition for Rel-16 PDCCH monitoring
mTRP-PDCCH-legacyMonitoring-r17               SEQUENCE {
    scs-15kHz-r17                             PDCCH-RepetitionParameters-r17   OPTIONAL,
    scs-30kHz-r17                             PDCCH-RepetitionParameters-r17   OPTIONAL,
}
-- R1 23-2-4 Simultaneous configuration of PDCCH repetition and multi-DCI based multi-TRP
mTRP-PDCCH-multiDCI-multiTRP-r17             ENUMERATED {supported}           OPTIONAL,
-- R1 33-2: Dynamic scheduling for multicast for PCell
dynamicMulticastPCell-r17                     ENUMERATED {supported}           OPTIONAL,
-- R1 23-2-1 PDCCH repetition
mTRP-PDCCH-Repetition-r17                     SEQUENCE {
    numBD-twoPDCCH-r17                        INTEGER (2..3),
    maxNumOverlaps-r17                        ENUMERATED {n1,n2,n3,n5,n10,n20,n40}
}
}
OPTIONAL

FeatureSetDownlink-v1720 ::= SEQUENCE {
-- R1 25-19: RTT-based Propagation delay compensation based on CSI-RS for tracking and SRS
rtt-BasedPDC-CSI-RS-ForTracking-r17           ENUMERATED {supported}           OPTIONAL,
-- R1 25-19a: RTT-based Propagation delay compensation based on DL PRS for RTT-based PDC and SRS
rtt-BasedPDC-PRS-r17                          SEQUENCE {
    maxNumberPRS-Resource-r17                 ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
    maxNumberPRS-ResourceProcessedPerSlot-r17 SEQUENCE {
        scs-15kHz-r17                        ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL,
        scs-30kHz-r17                        ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL,
        scs-60kHz-r17                        ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL,
        scs-120kHz-r17                       ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL
    }
}
OPTIONAL,
-- R1 33-5-1: SPS group-common PDSCH for multicast on PCell
sps-Multicast-r17                             ENUMERATED {supported}           OPTIONAL
}

FeatureSetDownlink-v1730 ::= SEQUENCE {

```

```

-- R1 25-19b: Support of PRS as spatial relation RS for SRS
prs-AsSpatialRelationRS-For-SRS-r17    ENUMERATED {supported}
}

FeatureSetDownlink-v17d0 ::=
-- R1 23-8-4    Maximum 2 SP and 1 periodic SRS sets for antenna switching
srs-AntennaSwitching2SP-1Periodic-r17    ENUMERATED {supported}
-- R1 23-8-9    Extension of aperiodic SRS configuration for 1T4R, 1T2R and 2T4R
srs-ExtensionAperiodicSRS-r17    ENUMERATED {supported}
-- R1 23-8-10   1 aperiodic SRS resource set for 1T4R
srs-OneAP-SRS-r17    ENUMERATED {supported}
}

FeatureSetDownlink-v1800 ::=
-- R1 40-1-14a: Dynamic switching - scheme A
dynamicSwitchingA-r18    ENUMERATED {supported}
-- R1 40-1-14b: Dynamic switching - scheme B
dynamicSwitchingB-r18    ENUMERATED {supported}
-- R1 40-3-2-11: Aperiodic CSI report timing relaxation for doppler codebook based on Type-II codebook
aperiodicCSI-TimeRelaxation-r18
  valueW-r18
    scs-15kHz    ENUMERATED {value1, value2}
    scs-30kHz    ENUMERATED {value1, value2}
    scs-60kHz    ENUMERATED {value1, value2}
    scs-120kHz   ENUMERATED {value1, value2}
  },
  timeRelaxation-r18    ENUMERATED {cap1, cap2}
}
-- R1 40-4-1: Basic feature of Rel.18 enhanced DMRS ports for PDSCH for scheduling of mapping type A
pdsch-TypeA-DMRS-r18    ENUMERATED {supported}
-- R1 40-4-1a: Basic feature of Rel.18 enhanced DMRS ports for PDSCH for scheduling of mapping type B
pdsch-TypeB-DMRS-r18    ENUMERATED {supported}
-- R1 40-4-1b: 1 symbol FL DMRS and 2 additional DMRS symbols for more than one port for Rel.18 enhanced DMRS ports for PDSCH
pdsch-1SymbolFL-DMRS-Addition2Symbol-r18    ENUMERATED {supported}
-- R1 40-4-1c: Alternative additional DMRS position for co-existence with LTE CRS for Rel.18 enhanced DMRS ports for PDSCH
pdsch-AlternativeDMRS-Coexistence-r18    ENUMERATED {supported}
-- R1 40-4-1d: 2 symbols FL-DMRS for Rel.18 enhanced DMRS ports for PDSCH
pdsch-2SymbolFL-DMRS-r18    ENUMERATED {supported}
-- R1 40-4-1e: 2-symbol FL DMRS + one additional 2-symbols DMRS for Rel.18 enhanced DMRS ports for PDSCH
pdsch-2SymbolFL-DMRS-Addition2Symbol-r18    ENUMERATED {supported}
-- R1 40-4-1f: 1 symbol FL DMRS and 3 additional DMRS symbols for Rel.18 enhanced DMRS ports for PDSCH
pdsch-1SymbolFL-DMRS-Addition3Symbol-r18    ENUMERATED {supported}
-- R1 40-4-1g: DMRS type for Rel.18 enhanced DMRS ports for PDSCH
pdsch-DMRS-Type-r18    ENUMERATED {etype1, etype1And2}
-- R1 40-4-1h: 1 port DL PTRS for Rel.18 enhanced DMRS ports for PDSCH with rank 1-8
pdsch-1PortDL-PTRS-r18    ENUMERATED {supported}
-- R1 40-4-1i: 2 port DL PTRS for Rel.18 enhanced DMRS ports for PDSCH with rank 1-8
pdsch-2PortDL-PTRS-r18    ENUMERATED {supported}
-- R1 40-4-1j: Support 1 symbol FL DMRS and 2 additional DMRS symbols for one port for scheduling of mapping type A
mappingTypeA-1SymbolFL-DMRS-Addition2Symbol-r18    ENUMERATED {supported}
-- R1 40-4-2: Capability on the maximum number of configured DMRS types for PDSCH across all DL DCI formats per cell
maxNumberDMRS-AcrossAllDL-DCI-r18    INTEGER (2..4)
-- R1 40-4-4: Reception of PDSCH without the scheduling restriction for Rel.18 eType1 DMRS ports
pdsch-ReceptionWithoutSchedulingRestriction-r18    ENUMERATED {supported}

```

```

-- R1 40-4-4a: Reception of PDSCH without the scheduling restriction for Rel.18 eType1 DMRS ports for PDSCH with fdmSchemeA
pdsch-ReceptionSchemeA-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 40-4-4b: Reception of PDSCH without the scheduling restriction for Rel.18 eType1 DMRS ports for PDSCH with fdmSchemeB
pdsch-ReceptionSchemeB-r18          ENUMERATED {supported}          OPTIONAL,

-- R1 40-4-5: Rel-18 DL DMRS with single DCI based M-TRP
dmrs-MultiTRP-SingleDCI-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 40-4-5a: Additional row(s) for antenna ports (0,2,3) for Rel.18 DL DMRS ports for single-DCI based M-TRP
dmrs-MultiTRP-AdditionRows-r18       ENUMERATED {supported}          OPTIONAL,
-- R1 40-4-7: Rel-18 DL DMRS with M-DCI based M-TRP
dmrs-MultiTRP-MultiDCI-r18           ENUMERATED {supported}          OPTIONAL,
-- R1 40-4-12: Support of Rel-18 DMRS and PDSCH processing capability 2 simultaneously
simulDMRS-PDSCH-r18                  SEQUENCE {
    scs-15kHz-r18                     INTEGER (0..4)                OPTIONAL,
    scs-30kHz-r18                     INTEGER (0..5)                OPTIONAL,
    scs-60kHz-r18                     INTEGER (0..7)                OPTIONAL,
}

-- R1 53-1: Support RLM/BM/BFD and gapless L3 intra-frequency measurements based on CD-SSB outside active BWP without interruptions
bwpOperationMeasWithoutInterrupt-r18 ENUMERATED {supported}          OPTIONAL,

-- R1 55-6: (2, 2) span-based PDCCH monitoring with additional restriction(s)
pdcch-MonitoringSpan2-2-r18          SEQUENCE{
    pdsch-ProcessingType1-r18          SEQUENCE{
        scs-15kHz-r18                 ENUMERATED {supported}          OPTIONAL,
        scs-30kHz-r18                 ENUMERATED {supported}          OPTIONAL,
    },
    pdsch-ProcessingType2-r18          SEQUENCE{
        scs-15kHz-r18                 ENUMERATED {supported}          OPTIONAL,
        scs-30kHz-r18                 ENUMERATED {supported}          OPTIONAL,
    }
}
-- R1 55-6b: Mix of Rel-16 PDCCH monitoring capability and Rel. 15 PDCCH monitoring capability on different carriers
pdcch-MonitoringMixed-r18             ENUMERATED {supported}          OPTIONAL,
-- R1 55-6h: PDCCH repetition for Rel-16 PDCCH monitoring
mTRP-PDCCH-legacyMonitoring-r18      SEQUENCE {
    scs-15kHz-r18                     PDCCH-RepetitionParameters-r17  OPTIONAL,
    scs-30kHz-r18                     PDCCH-RepetitionParameters-r17  OPTIONAL,
}

-- R4 42-1: Support of SCell without SS/PBCH block for inter-band CA
scellWithoutSSB-InterBandCA-r18       CHOICE {
    supportOfSingleGroup               ENUMERATED {referenceBand, scellWithoutSSB, both},
    supportOfMultipleGroups             ENUMERATED {referenceBand1, scellWithoutSSB1, referenceBand2, scellWithoutSSB2}
}
dummy                                 SEQUENCE (SIZE (1..maxBandsMRDC)) OF Dummy-PDCCH-RACH-DL-Info-r18  OPTIONAL,
}

FeatureSetDownlink-v1830 ::= SEQUENCE {
-- R4 39-4: Interruption on DL slot(s) due to PDCCH- ordered RACH transmission
pdcch-RACH-AffectedBands-TargetBandList-r18 SEQUENCE (SIZE (1..maxBandsMRDC)) OF ENUMERATED {noInterruption, interruption}
                                                OPTIONAL,
-- R4 39-4a: Interruption due to RF retuning for PDCCH- ordered RACH
pdcch-RACH-SwitchingTime-TargetBandList-r18 SEQUENCE (SIZE (1..maxBandsMRDC)) OF ENUMERATED {ms0, ms0dot25, ms0dot5, ms1, ms2, notSupported}

```

```

-- R4 39-5: the RF/BB preparation time for PDCCH ordered RACH of which the resources are not fully contained
-- in any of UE's configured UL BWP(s) of active serving cells
pdcch-RACH-PrepTime-TargetBandList-r18      SEQUENCE (SIZE (1..maxBandsMRDC)) OF ENUMERATED {ms1, ms3, ms5, ms10, notSupported}
                                            OPTIONAL,
                                            OPTIONAL
}

FeatureSetDownlink-v1860 ::= SEQUENCE {
  -- R1 40-5-5: Maximum 2 SP and 1 periodic SRS sets for 8T8R antenna switching
  srs-AntennaSwitching8T8R2SP-1Periodic-r18  ENUMERATED {supported}
                                            OPTIONAL
}

PDCCH-MonitoringOccasions-r16 ::= SEQUENCE {
  period7span3-r16      ENUMERATED {supported}      OPTIONAL,
  period4span3-r16      ENUMERATED {supported}      OPTIONAL,
  period2span2-r16      ENUMERATED {supported}      OPTIONAL
}

PDCCH-RepetitionParameters-r17 ::= SEQUENCE {
  supportedMode-r17      ENUMERATED {intra-span, inter-span, both},
  limitX-PerCC-r17      ENUMERATED {n4, n8, n16, n32, n44, n64, nolimit}      OPTIONAL,
  limitX-AcrossCC-r17    ENUMERATED {n4, n8, n16, n32, n44, n64, n128, n256, n512, nolimit}      OPTIONAL
}

DummyA ::= SEQUENCE {
  maxNumberNZP-CSI-RS-PerCC      INTEGER (1..32),
  maxNumberPortsAcrossNZP-CSI-RS-PerCC  ENUMERATED {p2, p4, p8, p12, p16, p24, p32, p40, p48, p56, p64, p72, p80,
  p88, p96, p104, p112, p120, p128, p136, p144, p152, p160, p168,
  p176, p184, p192, p200, p208, p216, p224, p232, p240, p248, p256},
  maxNumberCS-IM-PerCC      ENUMERATED {n1, n2, n4, n8, n16, n32},
  maxNumberSimultaneousCSI-RS-ActBWP-AllCC  ENUMERATED {n5, n6, n7, n8, n9, n10, n12, n14, n16, n18, n20, n22, n24, n26,
  n28, n30, n32, n34, n36, n38, n40, n42, n44, n46, n48, n50, n52,
  n54, n56, n58, n60, n62, n64},
  totalNumberPortsSimultaneousCSI-RS-ActBWP-AllCC  ENUMERATED {p8, p12, p16, p24, p32, p40, p48, p56, p64, p72, p80,
  p88, p96, p104, p112, p120, p128, p136, p144, p152, p160, p168,
  p176, p184, p192, p200, p208, p216, p224, p232, p240, p248, p256}
}

DummyB ::= SEQUENCE {
  maxNumberTxPortsPerResource      ENUMERATED {p2, p4, p8, p12, p16, p24, p32},
  maxNumberResources      INTEGER (1..64),
  totalNumberTxPorts      INTEGER (2..256),
  supportedCodebookMode      ENUMERATED {mode1, mode1AndMode2},
  maxNumberCSI-RS-PerResourceSet  INTEGER (1..8)
}

DummyC ::= SEQUENCE {
  maxNumberTxPortsPerResource      ENUMERATED {p8, p16, p32},
  maxNumberResources      INTEGER (1..64),
  totalNumberTxPorts      INTEGER (2..256),
  supportedCodebookMode      ENUMERATED {mode1, mode2, both},
  supportedNumberPanels      ENUMERATED {n2, n4},
  maxNumberCSI-RS-PerResourceSet  INTEGER (1..8)
}

```

```
DummyD ::= SEQUENCE {
    maxNumberTxPortsPerResource    ENUMERATED {p4, p8, p12, p16, p24, p32},
    maxNumberResources              INTEGER (1..64),
    totalNumberTxPorts              INTEGER (2..256),
    parameterLx                     INTEGER (2..4),
    amplitudeScalingType             ENUMERATED {wideband, widebandAndSubband},
    amplitudeSubsetRestriction       ENUMERATED {supported} OPTIONAL,
    maxNumberCSI-RS-PerResourceSet   INTEGER (1..8)
}

DummyE ::= SEQUENCE {
    maxNumberTxPortsPerResource    ENUMERATED {p4, p8, p12, p16, p24, p32},
    maxNumberResources              INTEGER (1..64),
    totalNumberTxPorts              INTEGER (2..256),
    parameterLx                     INTEGER (2..4),
    amplitudeScalingType             ENUMERATED {wideband, widebandAndSubband},
    maxNumberCSI-RS-PerResourceSet   INTEGER (1..8)
}

Dummy-PDCCH-RACH-DL-Info-r18 ::= CHOICE {
    notSupported                     NULL,
    supported                        SEQUENCE {
        -- R4 39-4: Interruption on DL slot(s) due to PDCCH- ordered RACH transmission
        pdcch-RACH-AffectedBands-r18    ENUMERATED {noInterruption, interruption},
        -- R4 39-4a: Interruption on DL slot(s) due to PDCCH- ordered RACH transmission
        pdcch-RACH-SwitchingTimeList-r18    ENUMERATED {ms0, ms0dot25, ms0dot5 , ms1, ms2} OPTIONAL,
        -- R4 39-5: the RF/BB preparation time for PDCCH ordered RACH of which the resources are not fully contained
        -- in any of UE's configured UL BWP(s) of active serving cells
        pdcch-RACH-PrepTime-r18          ENUMERATED {ms1, ms3, ms5, ms10} OPTIONAL
    }
}

-- TAG-FEATURESETDOWNLINK-STOP
-- ASN1STOP
```

FeatureSetDownlink field descriptions
featureSetListPerDownlinkCC Indicates which features the UE supports on the individual DL carriers of the feature set (and hence of a band entry that refer to the feature set). The UE shall hence include at least as many <i>FeatureSetDownlinkPerCC-Id</i> in this list as the number of carriers it supports according to the <i>ca-BandwidthClassDL</i> , except if indicating additional functionality by reducing the number of <i>FeatureSetDownlinkPerCC-Id</i> in the feature set (see NOTE 1 in <i>FeatureSetCombination</i> IE description). The order of the elements in this list is not relevant, i.e., the network may configure any of the carriers in accordance with any of the <i>FeatureSetDownlinkPerCC-Id</i> in this list.
supportedSRS-Resources Indicates supported SRS resources for SRS carrier switching to the band associated with this <i>FeatureSetDownlink</i> . The UE is only allowed to set this field for a band with associated <i>FeatureSetUplinkId</i> set to 0.

– *FeatureSetDownlinkId*

The IE *FeatureSetDownlinkId* identifies a downlink feature set. The *FeatureSetDownlinkId* of a *FeatureSetDownlink* is the index position of the *FeatureSetDownlink* in the *featureSetsDownlink* list in the *FeatureSets* IE. The first element in that list is referred to by *FeatureSetDownlinkId* = 1. The *FeatureSetDownlinkId*=0 is not used by an actual *FeatureSetDownlink* but means that the UE does not support a carrier in this band of a band combination.

FeatureSetDownlinkId information element

```
-- ASN1START
-- TAG-FEATURESETDOWNLINKID-START

FeatureSetDownlinkId ::=          INTEGER (0..maxDownlinkFeatureSets)

-- TAG-FEATURESETDOWNLINKID-STOP
-- ASN1STOP
```

– *FeatureSetDownlinkPerCC*

The IE *FeatureSetDownlinkPerCC* indicates a set of features that the UE supports on the corresponding carrier of one band entry of a band combination.

FeatureSetDownlinkPerCC information element

```
-- ASN1START
-- TAG-FEATURESETDOWNLINKPERCC-START

FeatureSetDownlinkPerCC ::=      SEQUENCE {
    supportedSubcarrierSpacingDL   SubcarrierSpacing,
    supportedBandwidthDL           SupportedBandwidth,
    channelBW-90mhz                ENUMERATED {supported}           OPTIONAL,
    maxNumberMIMO-LayersPDSCH      MIMO-LayersDL                   OPTIONAL,
    supportedModulationOrderDL      ModulationOrder                  OPTIONAL
}

FeatureSetDownlinkPerCC-v1620 ::= SEQUENCE {
    -- R1 16-2a: Multi-DCI based multi-TRP
    multiDCI-MultiTRP-r16          MultiDCI-MultiTRP-r16           OPTIONAL,
    -- R1 16-2b-3: Support of single-DCI based FDMSchemeB
    supportFDM-SchemeB-r16         ENUMERATED {supported}          OPTIONAL
}

FeatureSetDownlinkPerCC-v1700 ::= SEQUENCE {
    supportedMinBandwidthDL-r17     SupportedBandwidth-v1700        OPTIONAL,
    broadcastSCell-r17              ENUMERATED {supported}          OPTIONAL,
    -- R1 33-2g: MIMO layers for multicast PDSCH
    maxNumberMIMO-LayersMulticastPDSCH-r17 ENUMERATED {n2, n4, n8}   OPTIONAL,
    -- R1 33-2h: Dynamic scheduling for multicast for SCell
    dynamicMulticastSCell-r17       ENUMERATED {supported}          OPTIONAL,
    supportedBandwidthDL-v1710      SupportedBandwidth-v1710        OPTIONAL,
    -- R4 24-1/24-2/24-3/24-4/24-5
}
```



```

supportedCRS-InterfMitigation-r17    CRS-InterfMitigation-r17    OPTIONAL
}

FeatureSetDownlinkPerCC-v1720 ::= SEQUENCE {
  -- R1 33-2j: Supported maximum modulation order used for maximum data rate calculation for multicast PDSCH
  maxModulationOrderForMulticastDataRateCalculation-r17    ENUMERATED {qam64, qam256, qam1024}    OPTIONAL,
  -- R1 33-1-2: FDM-ed unicast PDSCH and group-common PDSCH for broadcast
  fdm-BroadcastUnicast-r17    ENUMERATED {supported}    OPTIONAL,
  -- R1 33-3-2: FDM-ed unicast PDSCH and one group-common PDSCH for multicast
  fdm-MulticastUnicast-r17    ENUMERATED {supported}    OPTIONAL
}

FeatureSetDownlinkPerCC-v1730 ::= SEQUENCE {
  -- R1 33-3-3: Intra-slot TDM-ed unicast PDSCH and group-common PDSCH
  intraSlotTDM-UnicastGroupCommonPDSCH-r17    ENUMERATED {yes, no}    OPTIONAL,
  -- R1 33-5-3: One SPS group-common PDSCH configuration for multicast for SCell
  sps-MulticastSCell-r17    ENUMERATED {supported}    OPTIONAL,
  -- R1 33-5-4: Up to 8 SPS group-common PDSCH configurations per CFR for multicast for SCell
  sps-MulticastSCellMultiConfig-r17    INTEGER (1..8)    OPTIONAL,
  -- R1 33-1-1: Dynamic slot-level repetition for broadcast MTCH
  dci-BroadcastWith16Repetitions-r17    ENUMERATED {supported}    OPTIONAL
}

FeatureSetDownlinkPerCC-v1780 ::= SEQUENCE {
  supportedBandwidthDL-v1780    SupportedBandwidth-v1700    OPTIONAL
}

FeatureSetDownlinkPerCC-v1800 ::= SEQUENCE {
  -- R1 40-2-1: Basic feature for multi-DCI based intra-cell Multi-TRP operation with two TA enhancement
  multiDCI-IntraCellMultiTRP-TwoTA-r18    ENUMERATED {supported}    OPTIONAL,
  -- R1 40-2-2: Basic feature for multi-DCI based inter-cell Multi-TRP operation with two TA enhancement
  multiDCI-InterCellMultiTRP-TwoTA-r18    INTEGER (1..2)    OPTIONAL,
  -- R1 40-2-6: Rx timing difference larger than CP length
  rxTimingDiff-r18    ENUMERATED {supported}    OPTIONAL,

  -- R1 55-7: Two QCL TypeD for CORESET monitoring in multi-DCI based multi-TRP
  multiDCI-MultiTRP-CORESET-Monitoring-r18    ENUMERATED {supported}    OPTIONAL,
  broadcastNonServingCell-r18    ENUMERATED {supported}    OPTIONAL,

  -- R4 30-1: Supports scheduling restriction relaxation and measurement restriction relaxation
  schedulingMeasurementRelaxation-r18    ENUMERATED {supported}    OPTIONAL
}

FeatureSetDownlinkPerCC-v1840 ::= SEQUENCE {
  supportedBandwidthDL-v1840    SupportedBandwidth-v1840    OPTIONAL,
  supportedMinBandwidthDL-v1840    SupportedBandwidth-v1840    OPTIONAL
}

MultiDCI-MultiTRP-r16 ::= SEQUENCE {
  maxNumberCORESET-r16    ENUMERATED {n2, n3, n4, n5},
  maxNumberCORESETPerPoolIndex-r16    INTEGER (1..3),
  maxNumberUnicastPDSCH-PerPool-r16    ENUMERATED {n1, n2, n3, n4, n7}
}

```

```

CRS-InterfMitigation-r17 ::= SEQUENCE {
  -- R4 24-1 CRS-IM (Interference Mitigation) in DSS scenario
  crs-IM-DSS-15kHzSCS-r17 ENUMERATED {supported} OPTIONAL,
  -- R4 24-2 CRS-IM in non-DSS and 15 kHz NR SCS scenario, without the assistance of network signaling on LTE channel bandwidth
  crs-IM-nonDSS-15kHzSCS-r17 ENUMERATED {supported} OPTIONAL,
  -- R4 24-3 CRS-IM in non-DSS and 15 kHz NR SCS scenario, with the assistance of network signaling on LTE channel bandwidth
  crs-IM-nonDSS-NWA-15kHzSCS-r17 ENUMERATED {supported} OPTIONAL,
  -- R4 24-4 CRS-IM in non-DSS and 30 kHz NR SCS scenario, without the assistance of network signaling on LTE channel bandwidth
  crs-IM-nonDSS-30kHzSCS-r17 ENUMERATED {supported} OPTIONAL,
  -- R4 24-5 CRS-IM in non-DSS and 30 kHz NR SCS scenario, with the assistance of network signaling on LTE channel bandwidth
  crs-IM-nonDSS-NWA-30kHzSCS-r17 ENUMERATED {supported} OPTIONAL
}

-- TAG-FEATURESETDOWNLINKPERCC-STOP
-- ASN1STOP

```

— *FeatureSetDownlinkPerCC-Id*

The IE *FeatureSetDownlinkPerCC-Id* identifies a set of features applicable to one carrier of a feature set. The *FeatureSetDownlinkPerCC-Id* of a *FeatureSetDownlinkPerCC* is the index position of the *FeatureSetDownlinkPerCC* in the *featureSetsDownlinkPerCC*. The first element in the list is referred to by *FeatureSetDownlinkPerCC-Id* = 1, and so on.

***FeatureSetDownlinkPerCC-Id* information element**

```

-- ASN1START
-- TAG-FEATURESETDOWNLINKPERCC-ID-START

FeatureSetDownlinkPerCC-Id ::= INTEGER (1..maxPerCC-FeatureSets)

-- TAG-FEATURESETDOWNLINKPERCC-ID-STOP
-- ASN1STOP

```

— *FeatureSetEUTRA-DownlinkId*

The IE *FeatureSetEUTRA-DownlinkId* identifies a downlink feature set in E-UTRA list (see TS 36.331 [10]). The first element in that list is referred to by *FeatureSetEUTRA-DownlinkId* = 1. The *FeatureSetEUTRA-DownlinkId*=0 is used when the UE does not support a carrier in this band of a band combination.

***FeatureSetEUTRA-DownlinkId* information element**

```

-- ASN1START
-- TAG-FEATURESETEUTRADOWNLINKID-START

FeatureSetEUTRA-DownlinkId ::= INTEGER (0..maxEUTRA-DL-FeatureSets)

-- TAG-FEATURESETEUTRADOWNLINKID-STOP
-- ASN1STOP

```

– *FeatureSetEUTRA-UplinkId*

The IE *FeatureSetEUTRA-UplinkId* identifies an uplink feature set in E-UTRA list (see TS 36.331 [10]). The first element in that list is referred to by *FeatureSetEUTRA-UplinkId* = 1. The *FeatureSetEUTRA-UplinkId* = 0 is used when the UE does not support a carrier in this band of a band combination.

FeatureSetEUTRA-UplinkId information element

```
-- ASN1START
-- TAG-FEATURESETEUTRAUPLINKID-START

FeatureSetEUTRA-UplinkId ::=                INTEGER (0..maxEUTRA-UL-FeatureSets)

-- TAG-FEATURESETEUTRAUPLINKID-STOP
-- ASN1STOP
```

– *FeatureSets*

The IE *FeatureSets* is used to provide pools of downlink and uplink features sets. A *FeatureSetCombination* refers to the IDs of the feature set(s) that the UE supports in that *FeatureSetCombination*. The *BandCombination* entries in the *BandCombinationList* then indicate the ID of the *FeatureSetCombination* that the UE supports for that band combination.

The entries in the lists in this IE are identified by their index position. For example, the *FeatureSetUplinkPerCC-Id* = 4 identifies the 4th element in the *featureSetsUplinkPerCC* list.

NOTE: When feature sets (per CC) IEs require extension in future versions of the specification, new versions of the *FeatureSetDownlink*, *FeatureSetUplink*, *FeatureSets*, *FeatureSetDownlinkPerCC* and/or *FeatureSetUplinkPerCC* will be created and instantiated in corresponding new lists in the *FeatureSets* IE. For example, if new capability bits are to be added to the *FeatureSetDownlink*, they will instead be defined in a new *FeatureSetDownlink-rxy* which will be instantiated in a new *featureSetDownlinkList-rxy* list. If a UE indicates in a *FeatureSetCombination* that it supports the *FeatureSetDownlink* with ID #5, it implies that it supports both the features in *FeatureSetDownlink* #5 and *FeatureSetDownlink-rxy* #5 (if present). The number of entries in the new list(s) shall be the same as in the original list(s).

FeatureSets information element

```
-- ASN1START
-- TAG-FEATURESETS-START

FeatureSets ::= SEQUENCE {
    featureSetsDownlink          SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink          OPTIONAL,
    featureSetsDownlinkPerCC     SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC     OPTIONAL,
    featureSetsUplink            SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink            OPTIONAL,
    featureSetsUplinkPerCC       SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetUplinkPerCC       OPTIONAL,
    ...,
    [[
        featureSetsDownlink-v1540 SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1540 OPTIONAL,
        featureSetsUplink-v1540    SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1540    OPTIONAL,
        featureSetsUplinkPerCC-v1540 SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetUplinkPerCC-v1540 OPTIONAL
    ]],
}
```

```

[[
featureSetsDownlink-v15a0      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v15a0      OPTIONAL
]],
[[
featureSetsDownlink-v1610      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1610      OPTIONAL,
featureSetsUplink-v1610        SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1610      OPTIONAL,
featureSetDownlinkPerCC-v1620  SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC-v1620      OPTIONAL
]],
[[
featureSetsUplink-v1630        SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1630      OPTIONAL
]],
[[
featureSetsUplink-v1640        SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1640      OPTIONAL
]],
[[
featureSetsDownlink-v1700      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1700      OPTIONAL,
featureSetsDownlinkPerCC-v1700 SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC-v1700      OPTIONAL,
featureSetsUplink-v1710        SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1710      OPTIONAL,
featureSetsUplinkPerCC-v1700   SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetUplinkPerCC-v1700      OPTIONAL
]],
[[
featureSetsDownlink-v1720      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1720      OPTIONAL,
featureSetsDownlinkPerCC-v1720 SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC-v1720      OPTIONAL,
featureSetsUplink-v1720        SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1720      OPTIONAL
]],
[[
featureSetsDownlink-v1730      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1730      OPTIONAL,
featureSetsDownlinkPerCC-v1730 SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC-v1730      OPTIONAL
]],
[[
featureSetsDownlinkPerCC-v1780 SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC-v1780      OPTIONAL,
featureSetsUplinkPerCC-v1780   SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetUplinkPerCC-v1780      OPTIONAL
]],
[[
featureSetsDownlink-v1800      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1800      OPTIONAL,
featureSetsDownlinkPerCC-v1800 SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC-v1800      OPTIONAL,
featureSetsUplink-v1800        SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1800      OPTIONAL,
featureSetsUplinkPerCC-v1800   SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetUplinkPerCC-v1800      OPTIONAL
]],
[[
featureSetsDownlink-v1830      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1830      OPTIONAL
]],
[[
featureSetsDownlinkPerCC-v1840 SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetDownlinkPerCC-v1840      OPTIONAL,
featureSetsUplinkPerCC-v1840   SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetUplinkPerCC-v1840      OPTIONAL
]],
[[
featureSetsUplink-v1850        SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v1850      OPTIONAL,
featureSetsUplinkPerCC-v1850   SEQUENCE (SIZE (1..maxPerCC-FeatureSets)) OF FeatureSetUplinkPerCC-v1850      OPTIONAL
]],
[[
featureSetsDownlink-v1860      SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v1860      OPTIONAL
]]
}

```

```

FeatureSets-v15t0 ::= SEQUENCE {
    featureSetsDownlink-v15t0 SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v15t0 OPTIONAL
}

FeatureSets-v16d0 ::= SEQUENCE {
    featureSetsUplink-v16d0 SEQUENCE (SIZE (1..maxUplinkFeatureSets)) OF FeatureSetUplink-v16d0 OPTIONAL
}

FeatureSets-v16k0 ::= SEQUENCE {
    featureSetsDownlink-v16k0 SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v16k0 OPTIONAL
}

FeatureSets-v17d0 ::= SEQUENCE {
    featureSetsDownlink-v17d0 SEQUENCE (SIZE (1..maxDownlinkFeatureSets)) OF FeatureSetDownlink-v17d0 OPTIONAL
}

-- TAG-FEATURESETS-STOP
-- ASN1STOP

```

– FeatureSetUplink

The IE *FeatureSetUplink* is used to indicate the features that the UE supports on the carriers corresponding to one band entry in a band combination.

FeatureSetUplink information element

```

-- ASN1START
-- TAG-FEATURESETUPLINK-START

FeatureSetUplink ::= SEQUENCE {
    featureSetListPerUplinkCC SEQUENCE (SIZE (1.. maxNrofServingCells)) OF FeatureSetUplinkPerCC-Id,
    scalingFactor ENUMERATED {f0p4, f0p75, f0p8} OPTIONAL,
    dummy3 ENUMERATED {supported} OPTIONAL,
    intraBandFreqSeparationUL FreqSeparationClass OPTIONAL,
    searchSpaceSharingCA-UL ENUMERATED {supported} OPTIONAL,
    dummy1 DummyI OPTIONAL,
    supportedSRS-Resources SRS-Resources OPTIONAL,
    twoPUCCH-Group ENUMERATED {supported} OPTIONAL,
    dynamicSwitchSUL ENUMERATED {supported} OPTIONAL,
    simultaneousTxSUL-NonSUL ENUMERATED {supported} OPTIONAL,
    pusch-ProcessingType1-DifferentTB-PerSlot SEQUENCE {
        scs-15kHz ENUMERATED {upto2, upto4, upto7} OPTIONAL,
        scs-30kHz ENUMERATED {upto2, upto4, upto7} OPTIONAL,
        scs-60kHz ENUMERATED {upto2, upto4, upto7} OPTIONAL,
        scs-120kHz ENUMERATED {upto2, upto4, upto7} OPTIONAL
    }
    dummy2 DummyF OPTIONAL,
}

FeatureSetUplink-v1540 ::= SEQUENCE {
    zeroSlotOffsetAperiodicSRS ENUMERATED {supported} OPTIONAL,

```

```

    pa-PhaseDiscontinuityImpacts      ENUMERATED {supported}      OPTIONAL,
    pusch-SeparationWithGap             ENUMERATED {supported}      OPTIONAL,
    pusch-ProcessingType2               SEQUENCE {
        scs-15kHz                      ProcessingParameters        OPTIONAL,
        scs-30kHz                      ProcessingParameters        OPTIONAL,
        scs-60kHz                      ProcessingParameters        OPTIONAL
    }
    ul-MCS-TableAlt-DynamicIndication  ENUMERATED {supported}      OPTIONAL,
}

FeatureSetUplink-v1610 ::= SEQUENCE {
    -- R1 11-5: PUSCH repetition Type B
    pusch-RepetitionTypeB-r16          SEQUENCE {
        maxNumberPUSCH-Tx-r16          ENUMERATED {n2, n3, n4, n7, n8, n12},
        hoppingScheme-r16              ENUMERATED {interSlotHopping, interRepetitionHopping, both}
    }
    -- R1 11-7: UL cancellation scheme for self-carrier
    ul-CancellationSelfCarrier-r16     ENUMERATED {supported}      OPTIONAL,
    -- R1 11-7a: UL cancellation scheme for cross-carrier
    ul-CancellationCrossCarrier-r16    ENUMERATED {supported}      OPTIONAL,
    -- R1 16-5c: The maximum number of SRS resources in one SRS resource set with usage set to 'codebook' for Mode 2
    ul-FullPwrMode2-MaxSRS-ResInSet-r16 ENUMERATED {n1, n2, n4}      OPTIONAL,

    -- R1 22-4a/4b/4c/4d: CBG based transmission for UL with unicast PUSCH(s) per slot per CC with UE processing time Capability 1
    cbgPUSCH-ProcessingType1-DifferentTB-PerSlot-r16 SEQUENCE {
        scs-15kHz-r16                  ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL,
        scs-30kHz-r16                  ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL,
        scs-60kHz-r16                  ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL,
        scs-120kHz-r16                 ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL
    } OPTIONAL,

    -- R1 22-3a/3b/3c/3d: CBG based transmission for UL with unicast PUSCH(s) per slot per CC with UE processing time Capability 2
    cbgPUSCH-ProcessingType2-DifferentTB-PerSlot-r16 SEQUENCE {
        scs-15kHz-r16                  ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL,
        scs-30kHz-r16                  ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL,
        scs-60kHz-r16                  ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL,
        scs-120kHz-r16                 ENUMERATED {one-pusch, upto2, upto4, upto7}      OPTIONAL
    } OPTIONAL,
    supportedSRS-PosResources-r16      SRS-AllPosResources-r16      OPTIONAL,
    intraFreqDAPS-UL-r16               SEQUENCE {
        dummy                          ENUMERATED {supported}      OPTIONAL,
        intraFreqTwoTAGs-DAPS-r16      ENUMERATED {supported}      OPTIONAL,
        dummy1                         ENUMERATED {supported}      OPTIONAL,
        dummy2                         ENUMERATED {supported}      OPTIONAL,
        dummy3                         ENUMERATED {short, long}     OPTIONAL
    }
    intraBandFreqSeparationUL-v1620    FreqSeparationClassUL-v1620  OPTIONAL,

    -- R1 11-3: More than one PUCCH for HARQ-ACK transmission within a slot
    multiPUCCH-r16                     SEQUENCE {
        sub-SlotConfig-NCP-r16         ENUMERATED {set1, set2}      OPTIONAL,
        sub-SlotConfig-ECP-r16         ENUMERATED {set1, set2}      OPTIONAL
    }
    -- R1 11-3c: 2 PUCCH of format 0 or 2 for a single 7*2-symbol subslot based HARQ-ACK codebook

```

```

twoPUCCH-Type1-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-3d: 2 PUCCH of format 0 or 2 for a single 2*7-symbol subslot based HARQ-ACK codebook
twoPUCCH-Type2-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-3e: 1 PUCCH format 0 or 2 and 1 PUCCH format 1, 3 or 4 in the same subslot for a single 2*7-symbol HARQ-ACK codebooks
twoPUCCH-Type3-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-3f: 2 PUCCH transmissions in the same subslot for a single 2*7-symbol HARQ-ACK codebooks which are not covered by 11-3d and
-- 11-3e
twoPUCCH-Type4-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-3g: SR/HARQ-ACK multiplexing once per subslot using a PUCCH (or HARQ-ACK piggybacked on a PUSCH) when SR/HARQ-ACK
-- are supposed to be sent with different starting symbols in a subslot
mux-SR-HARQ-ACK-r16         ENUMERATED {supported}          OPTIONAL,
dummy1                      ENUMERATED {supported}          OPTIONAL,
dummy2                      ENUMERATED {supported}          OPTIONAL,
-- R1 11-4c: 2 PUCCH of format 0 or 2 for two HARQ-ACK codebooks with one 7*2-symbol sub-slot based HARQ-ACK codebook
twoPUCCH-Type5-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-4d: 2 PUCCH of format 0 or 2 in consecutive symbols for two HARQ-ACK codebooks with one 2*7-symbol sub-slot based HARQ-ACK
-- codebook
twoPUCCH-Type6-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-4e: 2 PUCCH of format 0 or 2 for two subslot based HARQ-ACK codebooks
twoPUCCH-Type7-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-4f: 1 PUCCH format 0 or 2 and 1 PUCCH format 1, 3 or 4 in the same subslot for HARQ-ACK codebooks with one 2*7-symbol
-- subslot based HARQ-ACK codebook
twoPUCCH-Type8-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-4g: 1 PUCCH format 0 or 2 and 1 PUCCH format 1, 3 or 4 in the same subslot for two subslot based HARQ-ACK codebooks
twoPUCCH-Type9-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 11-4h: 2 PUCCH transmissions in the same subslot for two HARQ-ACK codebooks with one 2*7-symbol subslot which are not covered
-- by 11-4c and 11-4e
twoPUCCH-Type10-r16         ENUMERATED {supported}          OPTIONAL,
-- R1 11-4i: 2 PUCCH transmissions in the same subslot for two subslot based HARQ-ACK codebooks which are not covered by 11-4d and
-- 11-4f
twoPUCCH-Type11-r16         ENUMERATED {supported}          OPTIONAL,
-- R1 12-1: UL intra-UE multiplexing/prioritization of overlapping channel/signals with two priority levels in physical layer
ul-IntraUE-Mux-r16          SEQUENCE {
    pusch-PreparationLowPriority-r16    ENUMERATED {sym0, sym1, sym2},
    pusch-PreparationHighPriority-r16   ENUMERATED {sym0, sym1, sym2}
}
-- R1 16-5a: Supported UL full power transmission mode of fullpower
ul-FullPwrMode-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 18-5d: Processing up to X unicast DCI scheduling for UL per scheduled CC
crossCarrierSchedulingProcessing-DiffSCS-r16 SEQUENCE {
    scs-15kHz-120kHz-r16    ENUMERATED {n1, n2, n4}          OPTIONAL,
    scs-15kHz-60kHz-r16     ENUMERATED {n1, n2, n4}          OPTIONAL,
    scs-30kHz-120kHz-r16    ENUMERATED {n1, n2, n4}          OPTIONAL,
    scs-15kHz-30kHz-r16     ENUMERATED {n2}                  OPTIONAL,
    scs-30kHz-60kHz-r16     ENUMERATED {n2}                  OPTIONAL,
    scs-60kHz-120kHz-r16    ENUMERATED {n2}                  OPTIONAL,
}
-- R1 16-5b: Supported UL full power transmission mode of fullpowerMode1
ul-FullPwrMode1-r16         ENUMERATED {supported}          OPTIONAL,
-- R1 16-5c-2: Ports configuration for Mode 2
ul-FullPwrMode2-SRSCConfig-diffNumSRSPorts-r16 ENUMERATED {p1-2, p1-4, p1-2-4} OPTIONAL,
-- R1 16-5c-3: TPMI group for Mode 2
ul-FullPwrMode2-TPMIGroup-r16 SEQUENCE {
    twoPorts-r16            BIT STRING(SIZE(2))              OPTIONAL,

```



```

    fourPortsNonCoherent-r16          ENUMERATED {g0, g1, g2, g3}          OPTIONAL,
    fourPortsPartialCoherent-r16      ENUMERATED {g0, g1, g2, g3, g4, g5, g6} OPTIONAL
  }
}

FeatureSetUplink-v1630 ::= SEQUENCE {
  -- R1 22-8: For SRS for CB PUSCH and antenna switching on FR1 with symbol level offset for aperiodic SRS transmission
  offsetSRS-CB-PUSCH-Ant-Switch-fr1-r16 ENUMERATED {supported}          OPTIONAL,
  -- R1 22-8a: PDCCH monitoring on any span of up to 3 consecutive OFDM symbols of a slot and constrained timeline for SRS for CB
  -- PUSCH and antenna switching on FR1
  offsetSRS-CB-PUSCH-PDCCH-MonitorSingleOcc-fr1-r16 ENUMERATED {supported}          OPTIONAL,
  -- R1 22-8b: For type 1 CSS with dedicated RRC configuration, type 3 CSS, and UE-SS, monitoring occasion can be any OFDM symbol(s)
  -- of a slot for Case 2 and constrained timeline for SRS for CB PUSCH and antenna switching on FR1
  offsetSRS-CB-PUSCH-PDCCH-MonitorAnyOccWithoutGap-fr1-r16 ENUMERATED {supported}          OPTIONAL,
  -- R1 22-8c: For type 1 CSS with dedicated RRC configuration, type 3 CSS, and UE-SS, monitoring occasion can be any OFDM symbol(s)
  -- of a slot for Case 2 with a DCI gap and constrained timeline for SRS for CB PUSCH and antenna switching on FR1
  offsetSRS-CB-PUSCH-PDCCH-MonitorAnyOccWithGap-fr1-r16 ENUMERATED {supported}          OPTIONAL,
  dummy                                                  ENUMERATED {supported}          OPTIONAL,
  -- R1 22-9: Cancellation of PUCCH, PUSCH or PRACH with a DCI scheduling a PDSCH or CSI-RS or a DCI format 2_0 for SFI
  partialCancellationPUCCH-PUSCH-PRACH-TX-r16          ENUMERATED {supported}          OPTIONAL
}

FeatureSetUplink-v1640 ::= SEQUENCE {
  -- R1 11-4: Two HARQ-ACK codebooks with up to one sub-slot based HARQ-ACK codebook (i.e. slot-based + slot-based, or slot-based +
  -- sub-slot based) simultaneously constructed for supporting HARQ-ACK codebooks with different priorities at a UE
  twoHARQ-ACK-Codebook-type1-r16          SubSlot-Config-r16          OPTIONAL,
  -- R1 11-4a: Two sub-slot based HARQ-ACK codebooks simultaneously constructed for supporting HARQ-ACK codebooks with different
  -- priorities at a UE
  twoHARQ-ACK-Codebook-type2-r16          SubSlot-Config-r16          OPTIONAL,
  -- R1 22-8d: All PDCCH monitoring occasion can be any OFDM symbol(s) of a slot for Case 2 with a span gap and constrained timeline
  -- for SRS for CB PUSCH and antenna switching on FR1
  offsetSRS-CB-PUSCH-PDCCH-MonitorAnyOccWithSpanGap-fr1-r16 SEQUENCE {
    scs-15kHz-r16          ENUMERATED {set1, set2, set3}          OPTIONAL,
    scs-30kHz-r16          ENUMERATED {set1, set2, set3}          OPTIONAL,
    scs-60kHz-r16          ENUMERATED {set1, set2, set3}          OPTIONAL
  }
}

FeatureSetUplink-v16d0 ::= SEQUENCE {
  pusch-RepetitionTypeB-v16d0 SEQUENCE {
    maxNumberPUSCH-Tx-Cap1-r16          ENUMERATED {n2, n3, n4, n7, n8, n12},
    maxNumberPUSCH-Tx-Cap2-r16          ENUMERATED {n2, n3, n4, n7, n8, n12}
  }
} OPTIONAL

FeatureSetUplink-v1710 ::= SEQUENCE {
  -- R1 23-3-1 Multi-TRP PUSCH repetition (type A) -codebook based
  mTRP-PUSCH-TypeA-CB-r17          ENUMERATED {n1,n2,n4}          OPTIONAL,
  -- R1 23-3-1-2 Multi-TRP PUSCH repetition (type A) - non-codebook based
  mTRP-PUSCH-RepetitionTypeA-r17          ENUMERATED {n1,n2,n3,n4}          OPTIONAL,
  -- R1 23-3-3 Multi-TRP PUCCH repetition-intra-slot
  mTRP-PUCCH-IntraSlot-r17          ENUMERATED {pf0-2, pf1-3-4, pf0-4}          OPTIONAL,
  -- R1 23-8-4 Maximum 2 SP and 1 periodic SRS sets for antenna switching
  srs-AntennaSwitching2SP-1Periodic-r17          ENUMERATED {supported}          OPTIONAL,
}

```



```

-- R1 23-8-9 Extension of aperiodic SRS configuration for 1T4R, 1T2R and 2T4R
srs-ExtensionAperiodicSRS-r17 ENUMERATED {supported} OPTIONAL,
-- R1 23-8-10 1 aperiodic SRS resource set for 1T4R
srs-OneAP-SRS-r17 ENUMERATED {supported} OPTIONAL,
-- R4 16-8 UE power class per band per band combination
ue-PowerClassPerBandPerBC-r17 ENUMERATED {pc1dot5, pc2, pc3} OPTIONAL,
-- R4 17-8 UL transmission in FR2 bands within an UL gap when the UL gap is activated
tx-Support-UL-GapFR2-r17 ENUMERATED {supported} OPTIONAL
}

FeatureSetUplink-v1720 ::= SEQUENCE {
-- R1 25-3: Repetitions for PUCCH format 0, 1, 2, 3 and 4 over multiple PUCCH subslots with configured K = 2, 4, 8
pucch-Repetition-F0-1-2-3-4-RRC-Config-r17 ENUMERATED {supported} OPTIONAL,
-- R1 25-3a: Repetitions for PUCCH format 0, 1, 2, 3 and 4 over multiple PUCCH subslots using dynamic repetition indication
pucch-Repetition-F0-1-2-3-4-DynamicIndication-r17 ENUMERATED {supported} OPTIONAL,
-- R1 25-3b: Inter-subslot frequency hopping for PUCCH repetitions
interSubslotFreqHopping-PUCCH-r17 ENUMERATED {supported} OPTIONAL,
-- R1 25-8: Semi-static HARQ-ACK codebook for sub-slot PUCCH
semiStaticHARQ-ACK-CodebookSub-SlotPUCCH-r17 ENUMERATED {supported} OPTIONAL,
-- R1 25-14: PHY prioritization of overlapping low-priority DG-PUSCH and high-priority CG-PUSCH
phy-PrioritizationLowPriorityDG-HighPriorityCG-r17 INTEGER(1..16) OPTIONAL,
-- R1 25-15: PHY prioritization of overlapping high-priority DG-PUSCH and low-priority CG-PUSCH
phy-PrioritizationHighPriorityDG-LowPriorityCG-r17 SEQUENCE {
pusch-PreparationLowPriority-r17 ENUMERATED{sym0, sym1, sym2},
additionalCancellationTime-r17 SEQUENCE {
scs-15kHz-r17 ENUMERATED{sym0, sym1, sym2} OPTIONAL,
scs-30kHz-r17 ENUMERATED{sym0, sym1, sym2, sym3, sym4} OPTIONAL,
scs-60kHz-r17 ENUMERATED{sym0, sym1, sym2, sym3, sym4, sym5, sym6, sym7, sym8} OPTIONAL,
scs-120kHz-r17 ENUMERATED{sym0, sym1, sym2, sym3, sym4, sym5, sym6, sym7, sym8, sym9,
sym10, sym11, sym12, sym13, sym14, sym15, sym16} OPTIONAL
},
maxNumberCarriers-r17 INTEGER(1..16) OPTIONAL,
}
-- R4 17-5 Support of UL DC location(s) report
extendedDC-LocationReport-r17 ENUMERATED {supported} OPTIONAL
}

FeatureSetUplink-v1800 ::= SEQUENCE {
-- R1 40-3-3-1a: Supported maximum delay value larger than D_basic
maxDelayValueBeyondD-Basic-r18 ENUMERATED {sl2,sl3,sl4,sl5,sl6,sl10} OPTIONAL,
-- R1 40-3-3-2: Number of delay values
tdcp-NumberDelayValue-r18 INTEGER (2..4) OPTIONAL,
-- R1 40-3-3-4: Phase report
phaseReportMoreThanOne-r18 ENUMERATED {supported} OPTIONAL,
-- R1 40-3-3-6: Maximum number of TRS resource sets in a report configuration
maxNumberTRS-ResourceSet-r18 INTEGER (2..3) OPTIONAL,
-- R1 40-3-3-7: Maximum number of TDCP report settings per-BWP
maxNumberTDCP-PerBWP-r18 INTEGER (1..4) OPTIONAL,

-- R1 40-4-6c: DMRS type for Rel.18 enhanced DMRS ports for PUSCH
pusch-DMRS-TypeEnh-r18 SEQUENCE {
dmrs-Type-r18 ENUMERATED {etype1, both},
pusch-TypeA-DMRS-r18 SEQUENCE {
-- R1 40-4-6: Basic feature of Rel.18 enhanced DMRS ports for PUSCH for scheduling mapping of type A for Rel.18 enhanced

```

```

-- DMRS ports
dmrs-TypeA-r18                                     ENUMERATED {supported},
-- R1 40-4-6d: 2 symbols front-loaded DMRS (uplink) for Rel.18 enhanced DMRS ports for PUSCH
pusch-2SymbolFL-DMRS-r18                           ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-6e: 2-symbol FL DMRS + one additional 2-symbols DMRS for Rel.18 enhanced DMRS ports for PUSCH
pusch-2SymbolFL-DMRS-Addition2Symbol-r18           ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-6f: 1 symbol FL DMRS and 3 additional DMRS symbols for Rel.18 enhanced DMRS ports for PUSCH
pusch-1SymbolFL-DMRS-Addition3Symbol-r18           ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-6k: 1 symbol FL DMRS and 2 additional DMRS symbols for more than one port for Rel.18 enhanced DMRS ports for
-- PUSCH
pusch-1SymbolFL-DMRS-BeyondOnePort-r18             ENUMERATED {supported}           OPTIONAL,
}
-- R1 40-4-10: DMRS port configuration for PUSCH with 8Tx
dummy                                               ENUMERATED {rel15, both}         OPTIONAL,
-- R1 40-4-6a: Basic feature of Rel.18 enhanced DMRS ports for PUSCH for scheduling type B for Rel.18 enhanced DMRS ports
pusch-TypeB-DMRS-r18                               ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-6g: 1 port UL PTRS for Rel.18 enhanced DMRS ports for PUSCH with rank 1-4
pusch-rank-1-4-1Port-r18                           ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-6h: 1 port UL PTRS for Rel.18 enhanced DMRS ports for PUSCH with rank 5-8
pusch-rank-5-8-1Port-r18                           ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-6i: 2 port UL PTRS for Rel.18 enhanced DMRS ports for PUSCH with rank 1-4
pusch-rank-1-4-2Port-r18                           ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-6j: 2 port UL PTRS for Rel.18 enhanced DMRS ports for PUSCH with rank 5-8
pusch-rank-5-8-2Port-r18                           ENUMERATED {supported}           OPTIONAL,
}
-- R1 40-4-13: Support Rel.18 UL DMRS with single-DCI based M-TRP
ul-DMRS-SingleDCI-M-TRP-r18                         ENUMERATED {supported}           OPTIONAL,
-- R1 40-4-14: Support Rel.18 UL DMRS with M-DCI based M-TRP
ul-DMRS-M-DCI-M-TRP-r18                           ENUMERATED {supported}           OPTIONAL,
-- R1 40-5-5: Maximum 2 SP and 1 periodic SRS sets for 8T8R antenna switching
srs-AntennaSwitching8T8R2SP-1Periodic-r18         ENUMERATED {supported}           OPTIONAL,

-- R1 40-6-4: Single-DCI based STx2P SFN scheme for PUCCH
pucch-SingleDCI-STx2P-SFN-r18                     ENUMERATED {pf0-2, pf1-3-4, pf0-4} OPTIONAL,

-- R1 41-4-6: Positioning SRS bandwidth aggregation in RRC_CONNECTED
posSRS-BWA-RRC-Connected-r18                      PosSRS-BWA-RRC-Connected-r18     OPTIONAL,
-- R1 41-4-7: Positioning SRS bandwidth aggregation independent from UL communication CA in RRC_CONNECTED
posSRS-BWA-IndependentCA-RRC-Connected-r18         PosSRS-BWA-IndependentCA-RRC-Connected-r18 OPTIONAL,
-- R1 41-4-9: Indicate which other bands in the band combination are affected due to the need of a guard period
posSRS-BWA-AffectedBandList-r18                   SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR OPTIONAL,
-- R1 45-5a: RACH-based early TA acquisition with simultaneous transmission
rach-EarlyTA-BandList-r18                         SEQUENCE (SIZE (1..maxBandsMRDC)) OF BOOLEAN    OPTIONAL,

-- R1 49-6: Two HARQ-ACK codebooks with up to one sub-slot based HARQ-ACK codebook simultaneously constructed for supporting
-- HARQ-ACK codebooks with different priorities by DCI format 1_3
simultaneous-2-1-HARQ-ACK-CB-r18                  SubSlot-Config-r16               OPTIONAL,
-- R1 49-6a: Two HARQ-ACK codebooks with two sub-slot based HARQ-ACK codebook simultaneously constructed for supporting
-- HARQ-ACK codebooks with different priorities by DCI format 1_3
simultaneous-2-2-HARQ-ACK-CB-r18                  SubSlot-Config-r16               OPTIONAL,
-- R1 49-7: UL intra-UE multiplexing/prioritization of overlapping channel/signals with two priority levels in physical
-- layer for DCI format 1_3/0_3
ul-IntraUE-MuxEnh-r18                             SEQUENCE {
pusch-PreparationLowPriority-r18                   ENUMERATED {sym0, sym1, sym2},

```

pusch-PreparationHighPriority-r18	ENUMERATED {sym0, sym1, sym2}	OPTIONAL,
}		
-- R4 27-1 TxDiversity for 4Tx txDiversity4Tx-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 41-2: Power boosting for DFT-s-OFDM pi/2 BPSK and QPSK transmissions without modified spectrum flatness requirement powerBoosting-pi2BPSK-QPSK-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 41-3: Power boosting for DFT-s-OFDM pi/2 BPSK and QPSK transmissions with modified spectrum flatness requirement shaping powerBoosting-pi2BPSK-QPSK-Modified-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 44-1 TxDiversity for 2Tx txDiversity2Tx-r18	ENUMERATED {supported}	OPTIONAL,
ue-PowerClassPerBandPerBC-v1820	ENUMERATED {pc5}	OPTIONAL
}		
FeatureSetUplink-v1850 ::=	SEQUENCE {	
-- R1 40-4-10: DMRS port configuration for PUSCH with 8Tx pusch-DMRS8Tx-r18	ENUMERATED {rel15, both}	OPTIONAL,
-- R1 40-7-1h: UE 8Tx PUSCH processing capability for codebook additionalTime-CB-8TxPUSCH-r18	SEQUENCE {	
scs-15kHz-r18	ENUMERATED {sym1, sym2, sym4}	OPTIONAL,
scs-30kHz-r18	ENUMERATED {sym1, sym2, sym4, sym8}	OPTIONAL,
scs-60kHz-r18	ENUMERATED {sym2, sym4, sym8, sym16}	OPTIONAL,
scs-120kHz-r18	ENUMERATED {sym4, sym8, sym16, sym32}	OPTIONAL,
scs-480kHz-r18	ENUMERATED {sym16, sym32, sym64, sym128}	OPTIONAL,
scs-960kHz-r18	ENUMERATED {sym32, sym64, sym128, sym256}	OPTIONAL,
}		
-- R1 40-7-2b: UE 8Tx PUSCH processing capability for non-codebook additionalTime-NonCB-8TxPUSCH-r18	SEQUENCE {	
scs-15kHz-r18	ENUMERATED {sym1, sym2, sym4}	OPTIONAL,
scs-30kHz-r18	ENUMERATED {sym1, sym2, sym4, sym8}	OPTIONAL,
scs-60kHz-r18	ENUMERATED {sym2, sym4, sym8, sym16}	OPTIONAL,
scs-120kHz-r18	ENUMERATED {sym4, sym8, sym16, sym32}	OPTIONAL,
scs-480kHz-r18	ENUMERATED {sym16, sym32, sym64, sym128}	OPTIONAL,
scs-960kHz-r18	ENUMERATED {sym32, sym64, sym128, sym256}	OPTIONAL
}		
}		
SubSlot-Config-r16 ::=	SEQUENCE {	
sub-SlotConfig-NCP-r16	ENUMERATED {n4,n5,n6,n7}	OPTIONAL,
sub-SlotConfig-ECP-r16	ENUMERATED {n4,n5,n6}	OPTIONAL
}		
SRS-AllPosResources-r16 ::=	SEQUENCE {	
srs-PosResources-r16	SRS-PosResources-r16,	
srs-PosResourceAP-r16	SRS-PosResourceAP-r16	OPTIONAL,
srs-PosResourceSP-r16	SRS-PosResourceSP-r16	OPTIONAL
}		
SRS-PosResources-r16 ::=	SEQUENCE {	
maxNumberSRS-PosResourceSetPerBWP-r16	ENUMERATED {n1, n2, n4, n8, n12, n16},	
maxNumberSRS-PosResourcesPerBWP-r16	ENUMERATED {n1, n2, n4, n8, n16, n32, n64},	
maxNumberSRS-ResourcesPerBWP-PerSlot-r16	ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},	
maxNumberPeriodicSRS-PosResourcesPerBWP-r16	ENUMERATED {n1, n2, n4, n8, n16, n32, n64},	

```

    maxNumberPeriodicSRS-PosResourcesPerBWP-PerSlot-r16  ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
}

SRS-PosResourceAP-r16 ::=
    maxNumberAP-SRS-PosResourcesPerBWP-r16  ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
    maxNumberAP-SRS-PosResourcesPerBWP-PerSlot-r16  ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
}

SRS-PosResourceSP-r16 ::=
    maxNumberSP-SRS-PosResourcesPerBWP-r16  ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
    maxNumberSP-SRS-PosResourcesPerBWP-PerSlot-r16  ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
}

SRS-Resources ::=
    maxNumberAperiodicSRS-PerBWP  ENUMERATED {n1, n2, n4, n8, n16},
    maxNumberAperiodicSRS-PerBWP-PerSlot  INTEGER (1..6),
    maxNumberPeriodicSRS-PerBWP  ENUMERATED {n1, n2, n4, n8, n16},
    maxNumberPeriodicSRS-PerBWP-PerSlot  INTEGER (1..6),
    maxNumberSemiPersistentSRS-PerBWP  ENUMERATED {n1, n2, n4, n8, n16},
    maxNumberSemiPersistentSRS-PerBWP-PerSlot  INTEGER (1..6),
    maxNumberSRS-Ports-PerResource  ENUMERATED {n1, n2, n4}
}

DummyF ::=
    maxNumberPeriodicCSI-ReportPerBWP  INTEGER (1..4),
    maxNumberAperiodicCSI-ReportPerBWP  INTEGER (1..4),
    maxNumberSemiPersistentCSI-ReportPerBWP  INTEGER (0..4),
    simultaneousCSI-ReportsAllCC  INTEGER (5..32)
}

PosSRS-BWA-RRC-Connected-r18 ::=
    numOfCarriersIntraBandContiguous-r18  ENUMERATED {two, three, twoandthree},
    maximumAggregatedBW-TwoCarriersFR1-r18  ENUMERATED {mhz20, mhz40, mhz50, mhz80, mhz100,
    mhz160, mhz180, mhz190, mhz200}
    maximumAggregatedBW-TwoCarriersFR2-r18  ENUMERATED {mhz50, mhz100, mhz200, mhz400, mhz600, mhz800}
    maximumAggregatedBW-ThreeCarriersFR1-r18  ENUMERATED {mhz80, mhz100, mhz160, mhz200, mhz240, mhz300}
    maximumAggregatedBW-ThreeCarriersFR2-r18  ENUMERATED {mhz50, mhz100, mhz200, mhz300, mhz400,
    mhz600, mhz800, mhz1000, mhz1200}
    OPTIONAL,
    maximumAggregatedResourceSet-r18  ENUMERATED {n1, n2, n4, n8, n12, n16},
    maximumAggregatedResourcePeriodic-r18  ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
    maximumAggregatedResourceAperiodic-r18  ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64},
    maximumAggregatedResourceSemi-r18  ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64},
    maximumAggregatedResourcePeriodicPerSlot-r18  ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
    maximumAggregatedResourceAperiodicPerSlot-r18  ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
    maximumAggregatedResourceSemiPerSlot-r18  ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
    ...
}

PosSRS-BWA-IndependentCA-RRC-Connected-r18 ::=
    numOfCarriersIntraBandContiguous-r18  ENUMERATED {two, three, twoandthree},
    maximumAggregatedBW-TwoCarriersFR1-r18  ENUMERATED {mhz20, mhz40, mhz50, mhz80, mhz100,
    mhz160, mhz180, mhz190, mhz200}
    maximumAggregatedBW-TwoCarriersFR2-r18  ENUMERATED {mhz50, mhz100, mhz200, mhz400, mhz600, mhz800}

```

OPTIONAL,
OPTIONAL,
OPTIONAL,

OPTIONAL,
OPTIONAL,

maximumAggregatedBW-ThreeCarriersFR1-r18
maximumAggregatedBW-ThreeCarriersFR2-r18

OPTIONAL,
maximumAggregatedResourceSet-r18
maximumAggregatedResourcePeriodic-r18
maximumAggregatedResourceAperiodic-r18
maximumAggregatedResourceSemi-r18
maximumAggregatedResourcePeriodicPerSlot-r18
maximumAggregatedResourceAperiodicPerSlot-r18
maximumAggregatedResourceSemiPerSlot-r18
guardPeriod-r18
powerClassForTwoAggregatedCarriers-r18
powerClassForThreeAggregatedCarriers-r18
...
}

ENUMERATED {mhz80, mhz100, mhz160, mhz200, mhz240, mhz300}
ENUMERATED {mhz50, mhz100, mhz200, mhz300, mhz400, mhz600, mhz800, mhz1000, mhz1200}

ENUMERATED {n1, n2, n4, n8, n12, n16},
ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64},
ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64},
ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
ENUMERATED {n0, n30, n100, n140, n200},
ENUMERATED {pc2, pc3}
ENUMERATED {pc2, pc3}

OPTIONAL,
OPTIONAL,

-- TAG-FEATURESETUPLINK-STOP
-- ASN1STOP

FeatureSetUplink field descriptions
featureSetListPerUplinkCC Indicates which features the UE supports on the individual UL carriers of the feature set (and hence of a band entry that refers to the feature set). The UE shall hence include at least as many <i>FeatureSetUplinkPerCC-Id</i> in this list as the number of carriers it supports according to the <i>ca-BandwidthClassUL</i>, except if indicating additional functionality by reducing the number of <i>FeatureSetUplinkPerCC-Id</i> in the feature set (see NOTE 1 in <i>FeatureSetCombination</i> IE description). The order of the elements in this list is not relevant, i.e., the network may configure any of the carriers in accordance with any of the <i>FeatureSetUplinkPerCC-Id</i> in this list.

–

FeatureSetUplinkId

The IE *FeatureSetUplinkId* identifies an uplink feature set. The *FeatureSetUplinkId* of a *FeatureSetUplink* is the index position of the *FeatureSetUplink* in the *featureSetsUplink* list in the *FeatureSets* IE. The first element in the list is referred to by *FeatureSetUplinkId* = 1, and so on. The *FeatureSetUplinkId* = 0 is not used by an actual *FeatureSetUplink* but means that the UE does not support a carrier in this band of a band combination.

FeatureSetUplinkId information element

-- ASN1START
-- TAG-FEATURESETUPLINKID-START

FeatureSetUplinkId ::= INTEGER (0..maxUplinkFeatureSets)

-- TAG-FEATURESETUPLINKID-STOP
-- ASN1STOP

– FeatureSetUplinkPerCC

The IE *FeatureSetUplinkPerCC* indicates a set of features that the UE supports on the corresponding carrier of one band entry of a band combination.

FeatureSetUplinkPerCC information element

```
-- ASN1START
-- TAG-FEATURESETUPLINKPERCC-START

FeatureSetUplinkPerCC ::=
    supportedSubcarrierSpacingUL      SEQUENCE {
        supportedBandwidthUL          SubcarrierSpacing,
        channelBW-90mhz               SupportedBandwidth,
        mimo-CB-PUSCH                 ENUMERATED {supported} OPTIONAL,
        maxNumberMIMO-LayersCB-PUSCH  SEQUENCE {
            MIMO-LayersUL              OPTIONAL,
            maxNumbersRS-ResourcePerSet INTEGER (1..2)
        } OPTIONAL,
        maxNumberMIMO-LayersNonCB-PUSCH MIMO-LayersUL OPTIONAL,
        supportedModulationOrderUL      ModulationOrder OPTIONAL
    }
FeatureSetUplinkPerCC-v1540 ::= SEQUENCE {
    mimo-NonCB-PUSCH SEQUENCE {
        maxNumbersRS-ResourcePerSet INTEGER (1..4),
        maxNumberSimultaneousSRS-ResourceTx INTEGER (1..4)
    } OPTIONAL
}

FeatureSetUplinkPerCC-v1700 ::= SEQUENCE {
    supportedMinBandwidthUL-r17      SupportedBandwidth-v1700 OPTIONAL,
    -- R1 23-3-1-3 FeMIMO: Multi-TRP PUSCH repetition (type B) - non-codebook based
    mTRP-PUSCH-RepetitionTypeB-r17  ENUMERATED {n1, n2, n3, n4} OPTIONAL,
    -- R1 23-3-1-1 -codebook based Multi-TRP PUSCH repetition (type B)
    mTRP-PUSCH-TypeB-CB-r17         ENUMERATED {n1, n2, n4} OPTIONAL,
    supportedBandwidthUL-v1710      SupportedBandwidth-v1700 OPTIONAL
}

FeatureSetUplinkPerCC-v1780 ::= SEQUENCE {
    supportedBandwidthUL-v1780      SupportedBandwidth-v1700 OPTIONAL
}

FeatureSetUplinkPerCC-v1800 ::= SEQUENCE {
    -- R1 40-2-7: Two TAs for multi-DCI STxMP PUSCH+PUSCH
    twoPUSCH-MultiDCI-STx2P-TwoTA-r18 ENUMERATED {supported} OPTIONAL,
    -- R1 40-6-1: Single-DCI based STx2P SDM scheme for PUSCH-codebook
    pusch-CB-SingleDCI-STx2P-SDM-r18 SEQUENCE {
        maxNumbersRS-ResourcePerSet-r18 ENUMERATED {n1, n2, n4},
        maxNumberLayerPerPanel-r18      INTEGER (1..2),
        maxNumberNZP-PUSCH-PortsPerSet-r18 ENUMERATED {n1, n2, n4},
        maxNumbersRS-AntennaPortsPerSet-r18 ENUMERATED {n1, n2, n4}
    } OPTIONAL,
    -- R1 40-6-1a: Single-DCI based STx2P SDM scheme for PUSCH-noncodebook
    pusch-NonCB-SingleDCI-STx2P-SDM-r18 SEQUENCE {
        maxNumbersRS-ResourcePerSet-r18 INTEGER (1..4),
    }
```

```

        maxNumberLayerPerPanel-r18          INTEGER (1..2),
        maxNumberSimulSRS-OneResourcePerSet-r18  INTEGER (1..4),
        maxNumberSimulSRS-TwoResourcePerSet-r18  INTEGER (1..8)
    }
    -- R1 40-6-2: Single-DCI based STx2P SFN scheme for PUSCH-codebook
    pusched-CB-SingleDCI-STx2P-SFN-r18 SEQUENCE {
        maxNumberSRS-ResourcePerSet-r18    ENUMERATED {n1,n2,n4},
        maxNumberLayerPerSet-r18           INTEGER (1..2),
        maxNumberSRS-AntennaPortsPerSet-r18 ENUMERATED {n1,n2,n4},
        maxNumberNZP-PUSCH-PortsPerSet-r18  ENUMERATED {n1,n2,n4}
    }
    -- R1 40-6-2a: Single-DCI based STx2P SFN scheme for PUSCH-noncodebook
    pusched-NonCB-SingleDCI-STx2P-SFN-r18 SEQUENCE {
        maxNumberSRS-ResourcePerSet-r18    INTEGER (1..4),
        maxNumberLayerPerSet-r18           INTEGER (1..2),
        maxNumberSimulSRS-OneResourcePerSet-r18  INTEGER (1..4),
        maxNumberSimulSRS-TwoResourcePerSet-r18  INTEGER (1..8)
    }
    -- R1 40-6-3a: codebook multi-DCI based STx2P PUSCH+PUSCH for DG+DG
    twoPUSCH-CB-MultiDCI-STx2P-DG-DG-r18 SEQUENCE {
        maxNumberSRS-ResourcePerSet-r18    ENUMERATED {n1, n2, n4},
        maxNumberLayerOverlapping-r18      INTEGER (1..2),
        maxNumberNZP-PUSCH-Overlapping-r18  ENUMERATED {n1, n2, n4},
        maxNumberPUSCH-PerCORESET-PerSlot-r18 SEQUENCE {
            scs-60kHz-r18    ENUMERATED {n1,n2,n3,n4,n7}
            scs-120kHz-r18   ENUMERATED {n1,n2,n3,n4,n7}
        }
        maxNumberTotalLayerOverlapping-r18  INTEGER (2..4),
        maxNumberSRS-AntennaPortsPerSet-r18 ENUMERATED {n1,n2,n4}
    }
    -- R1 40-6-3b: Noncodebook multi-DCI based STx2P PUSCH+PUSCH for DG+DG
    twoPUSCH-NonCB-MultiDCI-STx2P-DG-DG-r18 SEQUENCE {
        maxNumberSRS-ResourcePerSet-r18    INTEGER (1..4),
        maxNumberLayerOverlapping-r18      INTEGER (1..2),
        maxNumberSimulSRS-ResourcePerSet-r18  INTEGER (1..4),
        maxNumberPUSCH-PerCORESET-PerSlot-r18 SEQUENCE {
            scs-60kHz-r18    ENUMERATED {n1,n2,n3,n4,n7}
            scs-120kHz-r18   ENUMERATED {n1,n2,n3,n4,n7}
        }
        maxNumberTotalLayerOverlapping-r18  INTEGER (2..4)
    }
    -- R1 40-6-6: Out-of-order operation for multi-DCI based STx2P PUSCH+PUSCH
    twoPUSCH-MultiDCI-STx2P-OutOfOrder-r18 ENUMERATED {supported}

codebookParameter8TxPUSCH-r18 SEQUENCE {
    -- R1 40-7-1: Basic features for Codebook-based 8Tx PUSCH
    codebook-8TxBasic-r18 SEQUENCE {
        maxNumberPUSCH-MIMO-Layer-r18    INTEGER (1..8),
        maxNumberSRS-Resource-r18        INTEGER (1..2),
        srs-8TxPorts-r18                  ENUMERATED {noTDM, both}
    },
    -- R1 40-7-1a: Codebook-based 8Tx PUSCH-codebook1
    codebook1-8TxPUSCH-r18 SEQUENCE {
        codebookN1N4-r18    ENUMERATED {ng1n4n1,ng1n2n2,both}
    }
}

```



```

        srs-8TxPorts-r18                ENUMERATED {noTDM, both}
    },
    -- R1 40-7-1b: Codebook-based 8Tx PUSCH-codebook2
    codebook2-8TxPUSCH-r18              ENUMERATED {supported}                OPTIONAL,
    -- R1 40-7-1c: Codebook-based 8Tx PUSCH-codebook3
    codebook3-8TxPUSCH-r18              ENUMERATED {supported}                OPTIONAL,
    -- R1 40-7-1d: Codebook-based 8Tx PUSCH-codebook4
    codebook4-8TxPUSCH-r18              ENUMERATED {supported}                OPTIONAL,
    -- R1 40-7-1e: UL full power transmission mode 0
    ul-FullPwrTransMode0-r18            ENUMERATED {supported}                OPTIONAL,
    -- R1 40-7-1f: UL full power transmission mode 1
    ul-FullPwrTransMode1-r18            ENUMERATED {supported}                OPTIONAL,
    -- R1 40-7-1g: UL full power transmission mode 2 with 1/2/4 resources
    ul-FullPwrTransMode2-r18            ENUMERATED {n1,n2,n4}                  OPTIONAL,
    -- R1 40-7-1g-1: SRS resources for UL full power transmission mode 2
    ul-SRS-TransMode2-r18               BIT STRING (SIZE(3))                  OPTIONAL,
    -- R1 40-7-1g-2: TPMI group(s) which delivers full power for codebook2
    tpmi-FullPwrCodebook2-r18           ENUMERATED {first, second}            OPTIONAL
}
-- R1 40-7-2: Basic features for Non-Codebook-based 8Tx PUSCH
nonCodebook-8TxPUSCH-r18              SEQUENCE {
    maxNumberPUSCH-MIMO-Layer-r18      INTEGER (1..8),
    maxNumberSRS-Resource-r18          INTEGER (1..8),
    maxNumberSimultaneousSRS-r18       INTEGER (1..8)
}
-- R1 40-7-2a: Association between CSI-RS and SRS for non-codebook case
nonCodebook-CSI-RS-SRS-r18            ENUMERATED {supported}                OPTIONAL,
-- R1 40-7-3: CBG based 2 CWs PUSCH with rank >4
cgb-2CW-PUSCH-r18                     ENUMERATED {supported}                OPTIONAL
}

FeatureSetUplinkPerCC-v1840 ::=
    supportedBandwidthUL-v1840          SupportedBandwidth-v1840              OPTIONAL,
    supportedMinBandwidthUL-v1840       SupportedBandwidth-v1840              OPTIONAL
}

FeatureSetUplinkPerCC-v1850 ::=
    SEQUENCE {
        -- R1 40-6-3a-1: UE STxMP processing capability for codebook
        twoPUSCH-CB-MultiDCI-STx2P-AdditionalTime-r18 CHOICE {
            scs-60kHz-r18                     ENUMERATED {sym1, sym4, sym8, sym16},
            scs-120kHz-r18                    ENUMERATED {sym4, sym8, sym16, sym32},
            scs-480kHz-r18                     ENUMERATED {sym16, sym32, sym64, sym128},
            scs-960kHz-r18                     ENUMERATED {sym32, sym64, sym128, sym256}
        }
        -- R1 40-6-3b-2: UE STxMP processing capability for non-codebook
        twoPUSCH-NonCB-MultiDCI-STx2P-AdditionalTime-r18 CHOICE {
            scs-60kHz-r18                     ENUMERATED {sym1, sym4, sym8, sym16},
            scs-120kHz-r18                    ENUMERATED {sym4, sym8, sym16, sym32},
            scs-480kHz-r18                     ENUMERATED {sym16, sym32, sym64, sym128},
            scs-960kHz-r18                     ENUMERATED {sym32, sym64, sym128, sym256}
        }
    }
}

-- TAG-FEATURESETUPLINKPERCC-STOP

```



```
-- ASN1STOP
```

— *FeatureSetUplinkPerCC-Id*

The IE *FeatureSetUplinkPerCC-Id* identifies a set of features applicable to one carrier of a feature set. The *FeatureSetUplinkPerCC-Id* of a *FeatureSetUplinkPerCC* is the index position of the *FeatureSetUplinkPerCC* in the *featureSetsUplinkPerCC*. The first element in the list is referred to by *FeatureSetUplinkPerCC-Id* = 1, and so on.

FeatureSetUplinkPerCC-Id information element

```
-- ASN1START
-- TAG-FEATURESETUPLINKPERCC-ID-START
```

```
FeatureSetUplinkPerCC-Id ::= INTEGER (1..maxPerCC-FeatureSets)
```

```
-- TAG-FEATURESETUPLINKPERCC-ID-STOP
-- ASN1STOP
```

— *FreqBandIndicatorEUTRA*

```
-- ASN1START
-- TAG-FREQBANDINDICATOREUTRA-START
```

```
FreqBandIndicatorEUTRA ::= INTEGER (1..maxBandsEUTRA)
```

```
-- TAG-FREQBANDINDICATOREUTRA-STOP
-- ASN1STOP
```

— *FreqBandList*

The IE *FreqBandList* is used by the network to request NR CA, NR non-CA and/or MR-DC band combinations for specific NR and/or E-UTRA frequency bands and/or up to a specific number of carriers and/or up to specific aggregated bandwidth. This is also used to request feature sets (for NR) and feature set combinations (for NR and MR-DC). For NR sidelink communication, this is used by the initiating UE to request sidelink UE radio access capabilities from the peer UE. This is also used to request lower MSD capability for specific NR frequency bands for the UE supporting lower MSD.

FreqBandList information element

```
-- ASN1START
-- TAG-FREQBANDLIST-START
```

```
FreqBandList ::= SEQUENCE (SIZE (1..maxBandsMRDC)) OF FreqBandInformation
```

```
FreqBandInformation ::= CHOICE {
    bandInformationEUTRA,
    bandInformationNR
```

```

}

FreqBandInformationEUTRA ::= SEQUENCE {
    bandEUTRA                      FreqBandIndicatorEUTRA,
    ca-BandwidthClassDL-EUTRA      CA-BandwidthClassEUTRA OPTIONAL, -- Need N
    ca-BandwidthClassUL-EUTRA      CA-BandwidthClassEUTRA OPTIONAL, -- Need N
}

FreqBandInformationNR ::= SEQUENCE {
    bandNR                        FreqBandIndicatorNR,
    maxBandwidthRequestedDL       AggregatedBandwidth OPTIONAL, -- Need N
    maxBandwidthRequestedUL       AggregatedBandwidth OPTIONAL, -- Need N
    maxCarriersRequestedDL        INTEGER (1..maxNrofServingCells) OPTIONAL, -- Need N
    maxCarriersRequestedUL        INTEGER (1..maxNrofServingCells) OPTIONAL, -- Need N
}

AggregatedBandwidth ::= ENUMERATED {mhz50, mhz100, mhz150, mhz200, mhz250, mhz300, mhz350,
                                     mhz400, mhz450, mhz500, mhz550, mhz600, mhz650, mhz700, mhz750, mhz800}

-- TAG-FREQBANDLIST-STOP
-- ASN1STOP

```

– *FreqSeparationClass*

The IE *FreqSeparationClass* is used for an intra-band non-contiguous CA band combination to indicate frequency separation between lower edge of lowest CC and upper edge of highest CC in a frequency band.

FreqSeparationClass information element

```

-- ASN1START
-- TAG-FREQSEPARATIONCLASS-START

FreqSeparationClass ::= ENUMERATED { mhz800, mhz1200, mhz1400, ..., mhz400-v1650, mhz600-v1650}

FreqSeparationClassDL-v1620 ::= ENUMERATED {mhz1000, mhz1600, mhz1800, mhz2000, mhz2200, mhz2400}

FreqSeparationClassUL-v1620 ::= ENUMERATED {mhz1000}

-- TAG-FREQSEPARATIONCLASS-STOP
-- ASN1STOP

```

– *FreqSeparationClassDL-Only*

The IE *FreqSeparationClassDL-Only* is used to indicate the frequency separation between lower edge of lowest CC and upper edge of highest CC of DL only frequency spectrum in a frequency band.

***FreqSeparationClassDL-Only* information element**

```
-- ASN1START
-- TAG-FREQSEPARATIONCLASSDL-Only-START

FreqSeparationClassDL-Only-r16 ::= ENUMERATED {mhz200, mhz400, mhz600, mhz800, mhz1000, mhz1200}

-- TAG-FREQSEPARATIONCLASSDL-Only-STOP
-- ASN1STOP
```

FR2-2-AccessParamsPerBand

The IE *FR2-2-AccessParamsPerBand* is used to convey FR2-2 related parameters specific for a certain frequency band (not per feature set or band combination).

FR2-2-AccessParamsPerBand information element

```
-- ASN1START
-- TAG-FR2-2-ACCESSPARAMSPERBAND-START

FR2-2-AccessParamsPerBand-r17 ::= SEQUENCE {
  -- R1 24-1: Basic FR2-2 DL support
  dl-FR2-2-SCS-120kHz-r17          ENUMERATED {supported}          OPTIONAL,
  -- R1 24-1a: Basic FR2-2 UL support
  ul-FR2-2-SCS-120kHz-r17          ENUMERATED {supported}          OPTIONAL,
  -- R1 24-2: 120kHz SSB support for initial access in FR2-2
  initialAccessSSB-120kHz-r17      ENUMERATED {supported}          OPTIONAL,
  -- R1 24-1b: Wideband PRACH for 120 kHz in FR2-2
  widebandPRACH-SCS-120kHz-r17      ENUMERATED {supported}          OPTIONAL,
  -- R1 24-1c: Multi-RB support PUCCH format 0/1/4 for 120 kHz in FR2-2
  multiRB-PUCCH-SCS-120kHz-r17      ENUMERATED {supported}          OPTIONAL,
  -- R1 24-1d: Multiple PDSCH scheduling by single DCI for 120kHz in FR2-2
  multiPDSCH-SingleDCI-FR2-2-SCS-120kHz-r17 ENUMERATED {supported}  OPTIONAL,
  -- R1 24-1e: Multiple PUSCH scheduling by single DCI for 120kHz in FR2-2
  multiPUSCH-SingleDCI-FR2-2-SCS-120kHz-r17 ENUMERATED {supported}  OPTIONAL,
  -- R1 24-4: 480kHz SCS support for DL
  dl-FR2-2-SCS-480kHz-r17          ENUMERATED {supported}          OPTIONAL,
  -- R1 24-4a: 480kHz SCS support for UL
  ul-FR2-2-SCS-480kHz-r17          ENUMERATED {supported}          OPTIONAL,
  -- R1 24-3: 480kHz SSB support for initial access in FR2-2
  initialAccessSSB-480kHz-r17      ENUMERATED {supported}          OPTIONAL,
  -- R1 24-4b: Wideband PRACH for 480 kHz in FR2-2
  widebandPRACH-SCS-480kHz-r17      ENUMERATED {supported}          OPTIONAL,
  -- R1 24-4c: Multi-RB support PUCCH format 0/1/4 for 480 kHz in FR2-2
  multiRB-PUCCH-SCS-480kHz-r17      ENUMERATED {supported}          OPTIONAL,
  -- R1 24-4f: Enhanced PDCCH monitoring for 480kHz in FR2-2
  enhancedPDCCH-monitoringSCS-480kHz-r17 ENUMERATED {supported}    OPTIONAL,
  -- R1 24-5: 960kHz SCS support for DL
  dl-FR2-2-SCS-960kHz-r17          ENUMERATED {supported}          OPTIONAL,
  -- R1 24-5a: 960kHz SCS support for UL
  ul-FR2-2-SCS-960kHz-r17          ENUMERATED {supported}          OPTIONAL,
  -- R1 24-5c: Multi-RB support PUCCH format 0/1/4 for 960 kHz in FR2-2
```

```

multiRB-PUCCH-SCS-960kHz-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 24-5f: Enhanced PDCCH monitoring for 960KHz in FR2-2
enhancedPDCCH-monitoringSCS-960kHz-r17 SEQUENCE {
  pdcch-monitoring4-1-r17      ENUMERATED {supported}      OPTIONAL,
  pdcch-monitoring4-2-r17      ENUMERATED {supported}      OPTIONAL,
  pdcch-monitoring8-4-r17      ENUMERATED {supported}      OPTIONAL,
}
-- R1 24-6: Type 1 channel access procedure in uplink for FR2-2 with shared spectrum channel access
type1-ChannelAccess-FR2-2-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 24-7: Type 2 channel access procedure in uplink for FR2-2 with shared spectrum channel access
type2-ChannelAccess-FR2-2-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 24-10: Reduced beam switching time delay
reduced-BeamSwitchTiming-FR2-2-r17 ENUMERATED {supported}      OPTIONAL,
-- R1 24-8: 32 DL HARQ processes for FR 2-2
support32-DL-HARQ-ProcessPerSCS-r17 SEQUENCE {
  scs-120kHz-r17      ENUMERATED {supported}      OPTIONAL,
  scs-480kHz-r17      ENUMERATED {supported}      OPTIONAL,
  scs-960kHz-r17      ENUMERATED {supported}      OPTIONAL,
}
-- R1 24-9: 32 UL HARQ processes for FR 2-2
support32-UL-HARQ-ProcessPerSCS-r17 SEQUENCE {
  scs-120kHz-r17      ENUMERATED {supported}      OPTIONAL,
  scs-480kHz-r17      ENUMERATED {supported}      OPTIONAL,
  scs-960kHz-r17      ENUMERATED {supported}      OPTIONAL,
}
...
[[
-- R4 15-1: 64QAM for PUSCH for FR2-2
modulation64-QAM-PUSCH-FR2-2-r17      ENUMERATED {supported}      OPTIONAL
]]
}

-- TAG-FR2-2-ACCESSPARAMSPERBAND-STOP
-- ASN1STOP

```

— *HighSpeedParameters*

The IE *HighSpeedParameters* is used to convey capabilities related to high speed scenarios.

HighSpeedParameters information element

```

-- ASN1START
-- TAG-HIGHSPEEDPARAMETERS-START

HighSpeedParameters-r16 ::= SEQUENCE {
  measurementEnhancement-r16      ENUMERATED {supported}      OPTIONAL,
  demodulationEnhancement-r16      ENUMERATED {supported}      OPTIONAL,
}

HighSpeedParameters-v1650 ::= CHOICE {
  intraNR-MeasurementEnhancement-r16      ENUMERATED {supported},

```

```

    interRAT-MeasurementEnhancement-r16      ENUMERATED {supported}
  }

HighSpeedParameters-v1700 ::= SEQUENCE {
  -- R4 18-1: Enhanced RRM requirements specified for CA for FR1 HST
  measurementEnhancementCA-r17      ENUMERATED {supported}    OPTIONAL,
  -- R4 18-2: Enhanced RRM requirements specified for inter-frequency measurement in connected mode for FR1 HST
  measurementEnhancementInterFreq-r17  ENUMERATED {supported}    OPTIONAL
}

-- TAG-HIGHSPEEDPARAMETERS-STOP
-- ASN1STOP

```

— *IMS-Parameters*

The IE *IMS-Parameters* is used to convey capabilities related to IMS.

IMS-Parameters information element

```

-- ASN1START
-- TAG-IMS-PARAMETERS-START

IMS-Parameters ::= SEQUENCE {
  ims-ParametersCommon      IMS-ParametersCommon      OPTIONAL,
  ims-ParametersFRX-Diff    IMS-ParametersFRX-Diff      OPTIONAL,
  ...
}

IMS-Parameters-v1700 ::= SEQUENCE {
  ims-ParametersFR2-2-r17    IMS-ParametersFR2-2-r17    OPTIONAL
}

IMS-ParametersCommon ::= SEQUENCE {
  voiceOverEUTRA-5GC      ENUMERATED {supported}      OPTIONAL,
  ...,
  [[
    voiceOverSCG-BearerEUTRA-5GC      ENUMERATED {supported}      OPTIONAL
  ]],
  [[
    voiceFallbackIndicationEPS-r16      ENUMERATED {supported}      OPTIONAL
  ]]
}

IMS-ParametersFRX-Diff ::= SEQUENCE {
  voiceOverNR      ENUMERATED {supported}      OPTIONAL,
  ...
}

IMS-ParametersFR2-2-r17 ::= SEQUENCE {
  voiceOverNR-r17      ENUMERATED {supported}      OPTIONAL,
  ...
}

```

```

}
-- TAG-IMS-PARAMETERS-STOP
-- ASN1STOP

```

— *InterRAT-Parameters*

The IE *InterRAT-Parameters* is used convey UE capabilities related to the other RATs.

InterRAT-Parameters information element

```

-- ASN1START
-- TAG-INTERRAT-PARAMETERS-START

InterRAT-Parameters ::=
    eutra                               SEQUENCE {
        EUTRA-Parameters                OPTIONAL,
        ...,
        [[
            utra-FDD-r16                 UTRA-FDD-Parameters-r16    OPTIONAL
        ]]
    }

EUTRA-Parameters ::=
    supportedBandListEUTRA              SEQUENCE {
        supportedBandListEUTRA          SEQUENCE (SIZE (1..maxBandsEUTRA)) OF FreqBandIndicatorEUTRA,
        eutra-ParametersCommon          EUTRA-ParametersCommon      OPTIONAL,
        eutra-ParametersXDD-Diff         EUTRA-ParametersXDD-Diff     OPTIONAL,
        ...
    }

EUTRA-ParametersCommon ::=
    SEQUENCE {
        mfbf-EUTRA                      ENUMERATED {supported}      OPTIONAL,
        modifiedMPR-BehaviorEUTRA        BIT STRING (SIZE (32))      OPTIONAL,
        multiNS-Pmax-EUTRA               ENUMERATED {supported}      OPTIONAL,
        rs-SINR-MeasEUTRA                ENUMERATED {supported}      OPTIONAL,
        ...,
        [[
            ne-DC                        ENUMERATED {supported}      OPTIONAL
        ]],
        [[
            nr-HO-ToEN-DC-r16            ENUMERATED {supported}      OPTIONAL
        ]]
    }

EUTRA-ParametersXDD-Diff ::=
    SEQUENCE {
        rsrqMeasWidebandEUTRA            ENUMERATED {supported}      OPTIONAL,
        ...
    }

UTRA-FDD-Parameters-r16 ::=
    SEQUENCE {
        supportedBandListUTRA-FDD-r16    SEQUENCE (SIZE (1..maxBandsUTRA-FDD-r16)) OF SupportedBandUTRA-FDD-r16,

```

```

    ...
}

SupportedBandUTRA-FDD-r16 ::= ENUMERATED {
    bandI, bandII, bandIII, bandIV, bandV, bandVI,
    bandVII, bandVIII, bandIX, bandX, bandXI,
    bandXII, bandXIII, bandXIV, bandXV, bandXVI,
    bandXVII, bandXVIII, bandXIX, bandXX,
    bandXXI, bandXXII, bandXXIII, bandXXIV,
    bandXXV, bandXXVI, bandXXVII, bandXXVIII,
    bandXXIX, bandXXX, bandXXXI, bandXXXII}

-- TAG-INTERRAT-PARAMETERS-STOP
-- ASN1STOP

```

— *MAC-Parameters*

The IE *MAC-Parameters* is used to convey capabilities related to MAC.

MAC-Parameters information element

```

-- ASN1START
-- TAG-MAC-PARAMETERS-START

MAC-Parameters ::= SEQUENCE {
    mac-ParametersCommon          MAC-ParametersCommon      OPTIONAL,
    mac-ParametersXDD-Diff        MAC-ParametersXDD-Diff      OPTIONAL
}

MAC-Parameters-v1610 ::= SEQUENCE {
    mac-ParametersFRX-Diff-r16    MAC-ParametersFRX-Diff-r16  OPTIONAL
}

MAC-Parameters-v1700 ::= SEQUENCE {
    mac-ParametersFR2-2-r17       MAC-ParametersFR2-2-r17     OPTIONAL
}

MAC-Parameters-v17b0 ::= SEQUENCE {
    mTRP-PUSCH-PHR-Type1-Reporting-r17  ENUMERATED {supported}  OPTIONAL
}

MAC-Parameters-v17c0 ::= SEQUENCE {
    directSCellActivationWithTCI-r17     ENUMERATED {supported}  OPTIONAL
}

MAC-ParametersCommon ::= SEQUENCE {
    lcp-Restriction                    ENUMERATED {supported}  OPTIONAL,
    dummy                             ENUMERATED {supported}  OPTIONAL,
    lch-ToSCellRestriction              ENUMERATED {supported}  OPTIONAL,
    ...
}

```

```

recommendedBitRate      ENUMERATED {supported}      OPTIONAL,
recommendedBitRateQuery  ENUMERATED {supported}      OPTIONAL
]],
[[
recommendedBitRateMultiplier-r16  ENUMERATED {supported}      OPTIONAL,
preEmptiveBSR-r16                ENUMERATED {supported}      OPTIONAL,
autonomousTransmission-r16        ENUMERATED {supported}      OPTIONAL,
lch-PriorityBasedPrioritization-r16  ENUMERATED {supported}      OPTIONAL,
lch-ToConfiguredGrantMapping-r16    ENUMERATED {supported}      OPTIONAL,
lch-ToGrantPriorityRestriction-r16    ENUMERATED {supported}      OPTIONAL,
singlePHR-P-r16                  ENUMERATED {supported}      OPTIONAL,
ul-LBT-FailureDetectionRecovery-r16  ENUMERATED {supported}      OPTIONAL,
-- R4 8-1: MPE
tdd-MPE-P-MPR-Reporting-r16        ENUMERATED {supported}      OPTIONAL,
lcid-ExtensionIAB-r16              ENUMERATED {supported}      OPTIONAL
]],
[[
spCell-BFR-CBRA-r16              ENUMERATED {supported}      OPTIONAL
]],
[[
srs-ResourceId-Ext-r16            ENUMERATED {supported}      OPTIONAL
]],
[[
enhancedUuDRX-forSidelink-r17      ENUMERATED {supported}      OPTIONAL,
--27-10: Support of UL MAC CE based MG activation request for PRS measurements
mg-ActivationRequestPRS-Meas-r17    ENUMERATED {supported}      OPTIONAL,
--27-11: Support of DL MAC CE based MG activation request for PRS measurements
mg-ActivationCommPRS-Meas-r17      ENUMERATED {supported}      OPTIONAL,
intraCG-Prioritization-r17         ENUMERATED {supported}      OPTIONAL,
jointPrioritizationCG-Retx-Timer-r17  ENUMERATED {supported}      OPTIONAL,
survivalTime-r17                  ENUMERATED {supported}      OPTIONAL,
lcg-ExtensionIAB-r17              ENUMERATED {supported}      OPTIONAL,
harq-FeedbackDisabled-r17          ENUMERATED {supported}      OPTIONAL,
uplink-Harq-ModeB-r17             ENUMERATED {supported}      OPTIONAL,
sr-TriggeredBy-TA-Report-r17       ENUMERATED {supported}      OPTIONAL,
extendedDRX-CycleInactive-r17      ENUMERATED {supported}      OPTIONAL,
simultaneousSR-PUSCH-DiffPUCCH-groups-r17  ENUMERATED {supported}      OPTIONAL,
lastTransmissionUL-r17            ENUMERATED {supported}      OPTIONAL
]],
[[
harq-RTT-TimerDL-ForNTN-MulticastMBS-r17  ENUMERATED {supported}      OPTIONAL
]],
[[
sr-TriggeredByTA-ReportATG-r18      ENUMERATED {supported}      OPTIONAL,
extendedDRX-CycleInactive-r18       ENUMERATED {supported}      OPTIONAL,
additionalBS-Table-r18              ENUMERATED {supported}      OPTIONAL,
delayStatusReport-r18              ENUMERATED {supported}      OPTIONAL,
cg-RetransmissionMonitoringDisabling-r18  ENUMERATED {supported}      OPTIONAL,
non-IntegerDRX-r18                 ENUMERATED {supported}      OPTIONAL
]]
}

MAC-ParametersFRX-Diff-r16 ::= SEQUENCE {
  directMCG-SCellActivation-r16      ENUMERATED {supported}      OPTIONAL,

```


directMCG-SCellActivationResume-r16	ENUMERATED {supported}	OPTIONAL,
directSCG-SCellActivation-r16	ENUMERATED {supported}	OPTIONAL,
directSCG-SCellActivationResume-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 19-1: DRX Adaptation		
drx-Adaptation-r16	SEQUENCE {	
non-SharedSpectrumChAccess-r16	MinTimeGap-r16	OPTIONAL,
sharedSpectrumChAccess-r16	MinTimeGap-r16	OPTIONAL,
}		OPTIONAL,
...		
}		
MAC-ParametersFR2-2-r17 ::= SEQUENCE {		
directMCG-SCellActivation-r17	ENUMERATED {supported}	OPTIONAL,
directMCG-SCellActivationResume-r17	ENUMERATED {supported}	OPTIONAL,
directSCG-SCellActivation-r17	ENUMERATED {supported}	OPTIONAL,
directSCG-SCellActivationResume-r17	ENUMERATED {supported}	OPTIONAL,
drx-Adaptation-r17	SEQUENCE {	
non-SharedSpectrumChAccess-r17	MinTimeGapFR2-2-r17	OPTIONAL,
sharedSpectrumChAccess-r17	MinTimeGapFR2-2-r17	OPTIONAL,
}		OPTIONAL,
...		
}		
MAC-ParametersXDD-Diff ::= SEQUENCE {		
skipUplinkTxDynamic	ENUMERATED {supported}	OPTIONAL,
logicalChannelSR-DelayTimer	ENUMERATED {supported}	OPTIONAL,
longDRX-Cycle	ENUMERATED {supported}	OPTIONAL,
shortDRX-Cycle	ENUMERATED {supported}	OPTIONAL,
multipleSR-Configurations	ENUMERATED {supported}	OPTIONAL,
multipleConfiguredGrants	ENUMERATED {supported}	OPTIONAL,
...		
[[		
secondaryDRX-Group-r16	ENUMERATED {supported}	OPTIONAL
]],		
[[		
enhancedSkipUplinkTxDynamic-r16	ENUMERATED {supported}	OPTIONAL,
enhancedSkipUplinkTxConfigured-r16	ENUMERATED {supported}	OPTIONAL
]],		
[[		
dummy1	ENUMERATED {supported}	OPTIONAL,
dummy2	ENUMERATED {supported}	OPTIONAL
]]		
}		
MinTimeGap-r16 ::= SEQUENCE {		
scs-15kHz-r16	ENUMERATED {sl1, sl3}	OPTIONAL,
scs-30kHz-r16	ENUMERATED {sl1, sl6}	OPTIONAL,
scs-60kHz-r16	ENUMERATED {sl1, sl12}	OPTIONAL,
scs-120kHz-r16	ENUMERATED {sl2, sl24}	OPTIONAL
}		
MinTimeGapFR2-2-r17 ::= SEQUENCE {		
scs-120kHz-r17	ENUMERATED {sl2, sl24}	OPTIONAL,
scs-480kHz-r17	ENUMERATED {sl8, sl96}	OPTIONAL,

```

    scs-960kHz-r17          ENUMERATED {sl16, sl192}  OPTIONAL
  }

MAC-ParametersPerBand-r18 ::= SEQUENCE {
    ptm-Retransmission-r18    ENUMERATED {supported}  OPTIONAL,
    ptm-RetransmissionInactive-r18  ENUMERATED {supported}  OPTIONAL,
    ...
}

-- TAG-MAC-PARAMETERS-STOP
-- ASN1STOP

```

— *MeasAndMobParameters*

The IE *MeasAndMobParameters* is used to convey UE capabilities related to measurements for radio resource management (RRM), radio link monitoring (RLM) and mobility (e.g. handover).

MeasAndMobParameters information element

```

-- ASN1START
-- TAG-MEASANDMOBPARAMETERS-START

MeasAndMobParameters ::=
    measAndMobParametersCommon          SEQUENCE {
        measAndMobParametersCommon      MeasAndMobParametersCommon      OPTIONAL,
        measAndMobParametersXDD-Diff     MeasAndMobParametersXDD-Diff     OPTIONAL,
        measAndMobParametersFRX-Diff     MeasAndMobParametersFRX-Diff     OPTIONAL
    }

MeasAndMobParameters-v15t0 ::=
    measAndMobParametersCommon-v15t0    SEQUENCE {
        MeasAndMobParametersCommon-v15t0  OPTIONAL
    }

MeasAndMobParameters-v1700 ::=
    measAndMobParametersFR2-2-r17        SEQUENCE {
        MeasAndMobParametersFR2-2-r17      OPTIONAL
    }

MeasAndMobParametersCommon ::=
    supportedGapPattern                  SEQUENCE {
        ssb-RLM                          BIT STRING (SIZE (22))          OPTIONAL,
        ssb-AndCSI-RS-RLM                ENUMERATED {supported}          OPTIONAL,
        ...
        [[
            eventB-MeasAndReport          ENUMERATED {supported}          OPTIONAL,
            handoverFDD-TDD                ENUMERATED {supported}          OPTIONAL,
            eutra-CGI-Reporting            ENUMERATED {supported}          OPTIONAL,
            nr-CGI-Reporting               ENUMERATED {supported}          OPTIONAL,
        ]],
        [[
            independentGapConfig           ENUMERATED {supported}          OPTIONAL,
            periodicEUTRA-MeasAndReport    ENUMERATED {supported}          OPTIONAL,
            handoverFR1-FR2                ENUMERATED {supported}          OPTIONAL,

```

```

maxNumberCSI-RS-RRM-RS-SINR      ENUMERATED {n4, n8, n16, n32, n64, n96} OPTIONAL
]],
[[
nr-CGI-Reporting-ENDC              ENUMERATED {supported}                OPTIONAL
]],
[[
eutra-CGI-Reporting-NEDC          ENUMERATED {supported}                OPTIONAL,
eutra-CGI-Reporting-NRDC          ENUMERATED {supported}                OPTIONAL,
nr-CGI-Reporting-NEDC              ENUMERATED {supported}                OPTIONAL,
nr-CGI-Reporting-NRDC              ENUMERATED {supported}                OPTIONAL
]],
[[
reportAddNeighMeasForPeriodic-r16 ENUMERATED {supported}                OPTIONAL,
condHandoverParametersCommon-r16  SEQUENCE {
    condHandoverFDD-TDD-r16        ENUMERATED {supported}                OPTIONAL,
    condHandoverFR1-FR2-r16        ENUMERATED {supported}                OPTIONAL,
}
nr-NeedForGap-Reporting-r16        ENUMERATED {supported}                OPTIONAL,
supportedGapPattern-NRonly-r16     BIT STRING (SIZE (10))              OPTIONAL,
supportedGapPattern-NRonly-NEDC-r16 ENUMERATED {supported}                OPTIONAL,
maxNumberCLI-RSSI-r16              ENUMERATED {n8, n16, n32, n64}          OPTIONAL,
maxNumberCLI-SRS-RSRP-r16          ENUMERATED {n4, n8, n16, n32}          OPTIONAL,
maxNumberPerSlotCLI-SRS-RSRP-r16  ENUMERATED {n2, n4, n8}            OPTIONAL,
mfbi-IAB-r16                       ENUMERATED {supported}                OPTIONAL,
dummy                             ENUMERATED {supported}                OPTIONAL,
nr-CGI-Reporting-NPN-r16           ENUMERATED {supported}                OPTIONAL,
idleInactiveEUTRA-MeasReport-r16  ENUMERATED {supported}                OPTIONAL,
idleInactive-ValidityArea-r16     ENUMERATED {supported}                OPTIONAL,
eutra-AutonomousGaps-r16          ENUMERATED {supported}                OPTIONAL,
eutra-AutonomousGaps-NEDC-r16     ENUMERATED {supported}                OPTIONAL,
eutra-AutonomousGaps-NRDC-r16     ENUMERATED {supported}                OPTIONAL,
pcellT312-r16                     ENUMERATED {supported}                OPTIONAL,
supportedGapPattern-r16            BIT STRING (SIZE (2))              OPTIONAL
]],
[[
-- R4 19-2 Concurrent measurement gaps
concurrentMeasGap-r17              CHOICE {
    concurrentPerUE-OnlyMeasGap-r17 ENUMERATED {supported},
    concurrentPerUE-PerFRCombMeasGap-r17 ENUMERATED {supported}
}
-- R4 19-1 Network controlled small gap (NCSG)
nr-NeedForGapNCSG-Reporting-r17    ENUMERATED {supported}                OPTIONAL,
eutra-NeedForGapNCSG-Reporting-r17 ENUMERATED {supported}                OPTIONAL,
-- R4 19-1-1 per FR Network controlled small gap (NCSG)
ncsg-MeasGapPerFR-r17              ENUMERATED {supported}                OPTIONAL,
-- R4 19-1-2 Network controlled small gap (NCSG) supported patterns
ncsg-MeasGapPatterns-r17           BIT STRING (SIZE(24))              OPTIONAL,
-- R4 19-1-3 Network controlled small gap (NCSG) supported NR-only patterns
ncsg-MeasGapNR-Patterns-r17        BIT STRING (SIZE(24))              OPTIONAL,
-- R4 19-3-2 pre-configured measurement gap
preconfiguredUE-AutonomousMeasGap-r17 ENUMERATED {supported}                OPTIONAL,
-- R4 19-3-1 pre-configured measurement gap
preconfiguredNW-ControlledMeasGap-r17 ENUMERATED {supported}                OPTIONAL,
handoverFR1-FR2-2-r17              ENUMERATED {supported}                OPTIONAL

```

```

handoverFR2-1-FR2-2-r17      ENUMERATED {supported}      OPTIONAL,
-- RAN4 14-1: per-FR MG for PRS measurement
independentGapConfigPRS-r17   ENUMERATED {supported}      OPTIONAL,
rrm-RelaxationRRC-ConnectedRedCap-r17  ENUMERATED {supported}      OPTIONAL,
-- R4 25-3: Parallel measurements with multiple measurement gaps
parallelMeasurementGap-r17    ENUMERATED {n2}              OPTIONAL,
condHandoverWithSCG-NRDC-r17  ENUMERATED {supported}      OPTIONAL,
gNB-ID-LengthReporting-r17    ENUMERATED {supported}      OPTIONAL,
gNB-ID-LengthReporting-ENDC-r17  ENUMERATED {supported}      OPTIONAL,
gNB-ID-LengthReporting-NEDC-r17  ENUMERATED {supported}      OPTIONAL,
gNB-ID-LengthReporting-NRDC-r17  ENUMERATED {supported}      OPTIONAL,
gNB-ID-LengthReporting-NPN-r17  ENUMERATED {supported}      OPTIONAL,
]],
[[
-- R4 25-1: Parallel measurements on multiple SMTC-s for a single frequency carrier
parallelSMTC-r17              ENUMERATED {n4}              OPTIONAL,
-- R4 19-2-1 Concurrent measurement gaps for EUTRA
concurrentMeasGapEUTRA-r17    ENUMERATED {supported}      OPTIONAL,
serviceLinkPropDelayDiffReporting-r17  ENUMERATED {supported}      OPTIONAL,
-- R4 19-1-4 Network controlled small gap (NCSG) performing measurement based on flag deriveSSB-IndexFromCellInter
ncsg-SymbolLevelScheduleRestrictionInter-r17  ENUMERATED {supported}      OPTIONAL,
]],
[[
eventD1-MeasReportTrigger-r17  ENUMERATED {supported}      OPTIONAL,
independentGapConfig-maxCC-r17  SEQUENCE {
    fr1-Only-r17                INTEGER (1..32)            OPTIONAL,
    fr2-Only-r17                INTEGER (1..32)            OPTIONAL,
    fr1-AndFR2-r17              INTEGER (1..32)            OPTIONAL,
}
]],
[[
interSatMeas-r17              ENUMERATED {supported}      OPTIONAL,
deriveSSB-IndexFromCellInterNon-NCSG-r17  ENUMERATED {supported}      OPTIONAL,
]],
[[
-- R4 31-1 Enhanced L3 measurement reporting for unknown SCell activation if the valid L3 measurement results are available
l3-MeasUnknownSCellActivation-r18  ENUMERATED {supported}      OPTIONAL,
-- R4 31-3 Shorter measurement interval for unknown SCell activation
shortMeasInterval-r18          ENUMERATED {supported}      OPTIONAL,
nr-NeedForInterruptionReport-r18  ENUMERATED {supported}      OPTIONAL,
measSequenceConfig-r18         ENUMERATED {supported}      OPTIONAL,
cellIndividualOffsetPerMeasEvent-r18  ENUMERATED {supported}      OPTIONAL,
eventD2-MeasReportTrigger-r18  ENUMERATED {supported}      OPTIONAL,
-- R4 32-1: Concurrent gaps with Pre-MG in a FR
concurrentMeasGapsPreMG-r18     ENUMERATED {supported}      OPTIONAL,
-- R4 32-2: Support for dynamic collisions
dynamicCollision-r18           ENUMERATED {supported}      OPTIONAL,
-- R4 32-3: Concurrent gaps with NCSG in a FR
concurrentMeasGapsNCSG-r18     ENUMERATED {supported}      OPTIONAL,
-- R4 32-4: Inter-RAT EUTRAN measurements without gap and outside active DL BWP
eutra-NoGapMeasurementOutsideBWP-r18  ENUMERATED {supported}      OPTIONAL,
-- R4 32-5: Inter-RAT EUTRAN measurement without gap and within active DL BWP
eutra-NoGapMeasurementInsideBWP-r18  ENUMERATED {supported}      OPTIONAL,
-- R4 32-6: Effective measurement window for inter-RAT EUTRAN measurements

```

```

eutra-MeasEMW-r18 BIT STRING (SIZE(6)) OPTIONAL,
-- R4 32-7: Simultaneous reception of NR data and EUTRAN CRS with different numerology
concurrentMeasCRS-InsideBWP-EUTRA-r18 ENUMERATED {supported} OPTIONAL,
-- R4 39-2a: SSB based inter-frequency L1-RSRP measurements with measurement gaps
ltm-InterFreqMeasGap-r18 ENUMERATED {supported} OPTIONAL,
dummy-ltm-FastUE-Processing-r18 SEQUENCE {
    fr1-r18 ENUMERATED {ms10, ms15},
    fr2-r18 ENUMERATED {ms10, ms15},
    fr1-AndFR2-r18 ENUMERATED {ms20, ms30}
} OPTIONAL,
rach-LessHandoverInterFreq-r18 ENUMERATED {supported} OPTIONAL,
enterAndLeaveCellReport-r18 ENUMERATED {supported} OPTIONAL,
bestCellChangeReport-r18 ENUMERATED {supported} OPTIONAL,
secondBestCellChangeReport-r18 ENUMERATED {supported} OPTIONAL,
]],
[[
ltm-InterFreq-r18 ENUMERATED {supported} OPTIONAL,
ltm-MCG-NRDC-r18 ENUMERATED {supported} OPTIONAL,
ltm-RACH-LessDG-r18 ENUMERATED {supported} OPTIONAL,
ltm-RACH-LessCG-r18 ENUMERATED {supported} OPTIONAL,
ltm-Recovery-r18 ENUMERATED {supported} OPTIONAL,
ltm-ReferenceConfig-r18 ENUMERATED {supported} OPTIONAL,
ltm-MCG-NRDC-Release-r18 ENUMERATED {supported} OPTIONAL,
-- R4 39-7: Faster UE processing time during cell switch
ltm-FastUE-Processing-r18 SEQUENCE {
    fr1-r18 ENUMERATED {ms10, ms15} OPTIONAL,
    fr2-r18 ENUMERATED {ms10, ms15} OPTIONAL,
    fr1-AndFR2-r18 ENUMERATED {ms20, ms30} OPTIONAL,
} OPTIONAL,
ntn-NeighbourCellInfoSupport-r18 ENUMERATED {supported} OPTIONAL,
]],
[[
ltm-interFreqL1-OnlyInBC-r18 ENUMERATED {supported} OPTIONAL,
]]
}

MeasAndMobParametersCommon-v15t0 ::= SEQUENCE {
    intraF-NeighMeasForSCellWithoutSSB ENUMERATED{supported} OPTIONAL,
}

MeasAndMobParametersXDD-Diff ::= SEQUENCE {
    intraAndInterF-MeasAndReport ENUMERATED {supported} OPTIONAL,
    eventA-MeasAndReport ENUMERATED {supported} OPTIONAL,
    ...,
    [[
        handoverInterF ENUMERATED {supported} OPTIONAL,
        handoverLTE-EPC ENUMERATED {supported} OPTIONAL,
        handoverLTE-5GC ENUMERATED {supported} OPTIONAL,
    ]],
    [[
        sftd-MeasNR-Neigh ENUMERATED {supported} OPTIONAL,
        sftd-MeasNR-Neigh-DRX ENUMERATED {supported} OPTIONAL,
    ]],
    [[

```


– *MeasAndMobParametersMRDC*

The IE *MeasAndMobParametersMRDC* is used to convey capability parameters related to RRM measurements and RRC mobility.

MeasAndMobParametersMRDC information element

```
-- ASN1START
-- TAG-MEASANDMOBPARAMETERSMRDC-START

MeasAndMobParametersMRDC ::=
    measAndMobParametersMRDC-Common      SEQUENCE {
        measAndMobParametersMRDC-Common  MeasAndMobParametersMRDC-Common      OPTIONAL,
        measAndMobParametersMRDC-XDD-Diff MeasAndMobParametersMRDC-XDD-Diff    OPTIONAL,
        measAndMobParametersMRDC-FRX-Diff MeasAndMobParametersMRDC-FRX-Diff    OPTIONAL
    }

MeasAndMobParametersMRDC-v1560 ::= SEQUENCE {
    measAndMobParametersMRDC-XDD-Diff-v1560 MeasAndMobParametersMRDC-XDD-Diff-v1560 OPTIONAL
}

MeasAndMobParametersMRDC-v1610 ::= SEQUENCE {
    measAndMobParametersMRDC-Common-v1610 MeasAndMobParametersMRDC-Common-v1610 OPTIONAL,
    interNR-MeasEUTRA-IAB-r16              ENUMERATED {supported}          OPTIONAL
}

MeasAndMobParametersMRDC-v1700 ::= SEQUENCE {
    measAndMobParametersMRDC-Common-v1700 MeasAndMobParametersMRDC-Common-v1700 OPTIONAL
}

MeasAndMobParametersMRDC-v1730 ::= SEQUENCE {
    measAndMobParametersMRDC-Common-v1730 MeasAndMobParametersMRDC-Common-v1730 OPTIONAL
}

MeasAndMobParametersMRDC-v1810 ::= SEQUENCE {
    measAndMobParametersMRDC-Common-v1810 MeasAndMobParametersMRDC-Common-v1810 OPTIONAL
}

MeasAndMobParametersMRDC-Common ::= SEQUENCE {
    independentGapConfig      ENUMERATED {supported}          OPTIONAL
}

MeasAndMobParametersMRDC-Common-v1610 ::= SEQUENCE {
    condPSCellChangeParametersCommon-r16 SEQUENCE {
        condPSCellChangeFDD-TDD-r16      ENUMERATED {supported}          OPTIONAL,
        condPSCellChangeFR1-FR2-r16      ENUMERATED {supported}          OPTIONAL,
    }
    pscellT312-r16              ENUMERATED {supported}          OPTIONAL
}

MeasAndMobParametersMRDC-Common-v1700 ::= SEQUENCE {
    condPSCellChangeParameters-r17 SEQUENCE {
        inter-SN-condPSCellChangeFDD-TDD-NRDC-r17 ENUMERATED {supported}          OPTIONAL,
        inter-SN-condPSCellChangeFR1-FR2-NRDC-r17 ENUMERATED {supported}          OPTIONAL,
        inter-SN-condPSCellChangeFDD-TDD-ENDC-r17 ENUMERATED {supported}          OPTIONAL,
    }
}
```

```

inter-SN-condPSCellChangeFR1-FR2-ENDC-r17      ENUMERATED {supported}      OPTIONAL,
mn-InitiatedCondPSCellChange-FR1FDD-ENDC-r17    ENUMERATED {supported}      OPTIONAL,
mn-InitiatedCondPSCellChange-FR1TDD-ENDC-r17    ENUMERATED {supported}      OPTIONAL,
mn-InitiatedCondPSCellChange-FR2TDD-ENDC-r17    ENUMERATED {supported}      OPTIONAL,
sn-InitiatedCondPSCellChange-FR1FDD-ENDC-r17    ENUMERATED {supported}      OPTIONAL,
sn-InitiatedCondPSCellChange-FR1TDD-ENDC-r17    ENUMERATED {supported}      OPTIONAL,
sn-InitiatedCondPSCellChange-FR2TDD-ENDC-r17    ENUMERATED {supported}      OPTIONAL,
}
condHandoverWithSCG-ENDC-r17                    ENUMERATED {supported}      OPTIONAL,
condHandoverWithSCG-NEDC-r17                    ENUMERATED {supported}      OPTIONAL,
}

MeasAndMobParametersMRDC-Common-v1730 ::= SEQUENCE {
    independentGapConfig-maxCC-r17              SEQUENCE {
        fr1-Only-r17                            INTEGER (1..32)             OPTIONAL,
        fr2-Only-r17                            INTEGER (1..32)             OPTIONAL,
        fr1-AndFR2-r17                          INTEGER (1..32)             OPTIONAL,
    }
}

MeasAndMobParametersMRDC-Common-v1810 ::= SEQUENCE {
    mn-ConfiguredMN-TriggerSCPAC-r18            ENUMERATED {supported}      OPTIONAL,
    mn-ConfiguredSN-TriggerSCPAC-r18            ENUMERATED {supported}      OPTIONAL,
    sn-ConfiguredSCPAC-r18                      ENUMERATED {supported}      OPTIONAL,
    mn-ConfiguredMN-TriggerSCPAC-afterSCG-release-r18 ENUMERATED {supported}      OPTIONAL,
    mn-ConfiguredReferenceConfigSCPAC-r18       ENUMERATED {supported}      OPTIONAL,
    sn-ConfiguredReferenceConfigSCPAC-r18       ENUMERATED {supported}      OPTIONAL,
    condHandoverWithCandSCG-Addition-r18        ENUMERATED {supported}      OPTIONAL,
    condHandoverWithCandSCG-FR1-FR2-Change-r18  ENUMERATED {supported}      OPTIONAL,
    condHandoverWithCandSCG-FDD-TDD-Change-r18  ENUMERATED {supported}      OPTIONAL,
}

MeasAndMobParametersMRDC-XDD-Diff ::= SEQUENCE {
    sftd-MeasPSCell                            ENUMERATED {supported}      OPTIONAL,
    sftd-MeasNR-Cell                           ENUMERATED {supported}      OPTIONAL,
}

MeasAndMobParametersMRDC-XDD-Diff-v1560 ::= SEQUENCE {
    sftd-MeasPSCell-NEDC                      ENUMERATED {supported}      OPTIONAL,
}

MeasAndMobParametersMRDC-FRX-Diff ::= SEQUENCE {
    simultaneousRxDataSSB-DiffNumerology       ENUMERATED {supported}      OPTIONAL,
}

-- TAG-MEASANDMOBPARAMETERSMRDC-STOP
-- ASN1STOP

```

— MIMO-Layers

The IE *MIMO-Layers* is used to convey the number of supported MIMO layers.

dummy2	ENUMERATED {supported}	OPTIONAL,
twoPortsPTRS-UL	ENUMERATED {supported}	OPTIONAL,
dummy5	SRS-Resources	OPTIONAL,
dummy3	INTEGER (1..4)	OPTIONAL,
beamReportTiming	SEQUENCE {	
scs-15kHz	ENUMERATED {sym2, sym4, sym8}	OPTIONAL,
scs-30kHz	ENUMERATED {sym4, sym8, sym14, sym28}	OPTIONAL,
scs-60kHz	ENUMERATED {sym8, sym14, sym28}	OPTIONAL,
scs-120kHz	ENUMERATED {sym14, sym28, sym56}	OPTIONAL,
}		
ptrs-DensityRecommendationSetDL	SEQUENCE {	
scs-15kHz	PTRS-DensityRecommendationDL	OPTIONAL,
scs-30kHz	PTRS-DensityRecommendationDL	OPTIONAL,
scs-60kHz	PTRS-DensityRecommendationDL	OPTIONAL,
scs-120kHz	PTRS-DensityRecommendationDL	OPTIONAL,
}		
ptrs-DensityRecommendationSetUL	SEQUENCE {	
scs-15kHz	PTRS-DensityRecommendationUL	OPTIONAL,
scs-30kHz	PTRS-DensityRecommendationUL	OPTIONAL,
scs-60kHz	PTRS-DensityRecommendationUL	OPTIONAL,
scs-120kHz	PTRS-DensityRecommendationUL	OPTIONAL,
}		
dummy4	DummyH	OPTIONAL,
aperiodicTRS	ENUMERATED {supported}	OPTIONAL,
...		
[[		
dummy6	ENUMERATED {true}	OPTIONAL,
beamManagementSSB-CSI-RS	BeamManagementSSB-CSI-RS	OPTIONAL,
beamSwitchTiming	SEQUENCE {	
scs-60kHz	ENUMERATED {sym14, sym28, sym48, sym224, sym336}	OPTIONAL,
scs-120kHz	ENUMERATED {sym14, sym28, sym48, sym224, sym336}	OPTIONAL,
}		
codebookParameters	CodebookParameters	OPTIONAL,
csi-RS-IM-ReceptionForFeedback	CSI-RS-IM-ReceptionForFeedback	OPTIONAL,
csi-RS-ProcFrameworkForSRS	CSI-RS-ProcFrameworkForSRS	OPTIONAL,
csi-ReportFramework	CSI-ReportFramework	OPTIONAL,
csi-RS-ForTracking	CSI-RS-ForTracking	OPTIONAL,
srs-AssocCSI-RS	SEQUENCE (SIZE (1.. maxNrofCSI-RS-Resources)) OF SupportedCSI-RS-Resource	OPTIONAL,
spatialRelations	SpatialRelations	OPTIONAL,
]],		
[[		
-- R1 16-2b-0: Support of default QCL assumption with two TCI states		
defaultQCL-TwoTCI-r16	ENUMERATED {supported}	OPTIONAL,
codebookParametersPerBand-r16	CodebookParameters-v1610	OPTIONAL,
-- R1 16-1b-3: Support of PUCCH resource groups per BWP for simultaneous spatial relation update		
simul-SpatialRelationUpdatePUCCHResGroup-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 16-1f: Maximum number of SCells configured for SCell beam failure recovery simultaneously		
maxNumberScellBFR-r16	ENUMERATED {n1, n2, n4, n8}	OPTIONAL,
-- R1 16-2c: Supports simultaneous reception with different Type-D for FR2 only		
simultaneousReceptionDiffTypeD-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 16-1a-1: SSB/CSI-RS for L1-SINR measurement		
ssb-csirs-SINR-measurement-r16	SEQUENCE {	

```

    maxNumberSSB-CSIRS-OneTx-CMR-r16      ENUMERATED {n8, n16, n32, n64},
    maxNumberCSI-IM-NZP-IMR-res-r16      ENUMERATED {n8, n16, n32, n64},
    maxNumberCSIRS-2Tx-res-r16           ENUMERATED {n0, n4, n8, n16, n32, n64},
    maxNumberSSB-CSIRS-res-r16           ENUMERATED {n8, n16, n32, n64, n128},
    maxNumberCSI-IM-NZP-IMR-res-mem-r16  ENUMERATED {n8, n16, n32, n64, n128},
    supportedCSI-RS-Density-CMR-r16      ENUMERATED {one, three, oneAndThree},
    maxNumberAperiodicCSI-RS-Res-r16     ENUMERATED {n2, n4, n8, n16, n32, n64},
    supportedSINR-meas-r16                ENUMERATED {ssbWithCSI-IM, ssbWithNZP-IMR, csirsWithNZP-IMR, csi-RSWithoutIMR} OPTIONAL
  }
  -- R1 16-1a-2: Non-group based L1-SINR reporting
  nonGroupSINR-reporting-r16             ENUMERATED {n1, n2, n4} OPTIONAL,
  -- R1 16-1a-3: Non-group based L1-SINR reporting
  groupSINR-reporting-r16                ENUMERATED {supported} OPTIONAL,

  multiDCI-multiTRP-Parameters-r16      SEQUENCE {
    -- R1 16-2a-0: Overlapping PDSCHs in time and fully overlapping in frequency and time
    overlapPDSCHsFullyFreqTime-r16      INTEGER (1..2) OPTIONAL,
    -- R1 16-2a-1: Overlapping PDSCHs in time and partially overlapping in frequency and time
    overlapPDSCHsInTimePartiallyFreq-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 16-2a-2: Out of order operation for DL
    outOfOrderOperationDL-r16            SEQUENCE {
      supportPDCCH-ToPDSCH-r16           ENUMERATED {supported} OPTIONAL,
      supportPDSCH-ToHARQ-ACK-r16        ENUMERATED {supported} OPTIONAL,
    }
    -- R1 16-2a-3: Out of order operation for UL
    outOfOrderOperationUL-r16            ENUMERATED {supported} OPTIONAL,
    -- R1 16-2a-5: Separate CRS rate matching
    separateCRS-RateMatching-r16         ENUMERATED {supported} OPTIONAL,
    -- R1 16-2a-6: Default QCL enhancement for multi-DCI based multi-TRP
    defaultQCL-PerCORESETPoolIndex-r16   ENUMERATED {supported} OPTIONAL,
    -- R1 16-2a-7: Maximum number of activated TCI states
    maxNumberActivatedTCI-States-r16     SEQUENCE {
      maxNumberPerCORESET-Pool-r16       ENUMERATED {n1, n2, n4, n8},
      maxTotalNumberAcrossCORESET-Pool-r16 ENUMERATED {n2, n4, n8, n16}
    }
  }
  }
  singleDCI-SDM-scheme-Parameters-r16   SEQUENCE {
    -- R1 16-2b-1b: Single-DCI based SDM scheme - Support of new DMRS port entry
    supportNewDMRS-Port-r16              ENUMERATED {supported1, supported2, supported3}
  }
OPTIONAL,
  -- R1 16-2b-1a: Support of s-port DL PTRS
  supportTwoPortDL-PTRS-r16              ENUMERATED {supported} OPTIONAL,
  }
  -- R1 16-2b-2: Support of single-DCI based FDMSchemeA
  supportFDM-SchemeA-r16                 ENUMERATED {supported} OPTIONAL,
  -- R1 16-2b-3a: Single-DCI based FDMSchemeB CW soft combining
  supportCodeWordSoftCombining-r16      ENUMERATED {supported} OPTIONAL,
  -- R1 16-2b-4: Single-DCI based TDMSchemeA
  supportTDM-SchemeA-r16                 ENUMERATED {kb3, kb5, kb10, kb20, noRestriction} OPTIONAL,
  -- R1 16-2b-5: Single-DCI based inter-slot TDM
  supportInter-slotTDM-r16               SEQUENCE {
    supportRepNumPDSCH-TDRA-r16          ENUMERATED {n2, n3, n4, n5, n6, n7, n8, n16},
    maxTBS-Size-r16                      ENUMERATED {kb3, kb5, kb10, kb20, noRestriction},
    maxNumberTCI-states-r16              INTEGER (1..2)
  }

```

```

}
-- R1 16-4: Low PAPR DMRS for PDSCH
lowPAPR-DMRS-PDSCH-r16 ENUMERATED {supported}
-- R1 16-6a: Low PAPR DMRS for PUSCH without transform precoding
lowPAPR-DMRS-PUSCHwithoutPrecoding-r16 ENUMERATED {supported}
-- R1 16-6b: Low PAPR DMRS for PUCCH
lowPAPR-DMRS-PUCCH-r16 ENUMERATED {supported}
-- R1 16-6c: Low PAPR DMRS for PUSCH with transform precoding & pi/2 BPSK
lowPAPR-DMRS-PUSCHwithPrecoding-r16 ENUMERATED {supported}
-- R1 16-7: Extension of the maximum number of configured aperiodic CSI report settings
csi-ReportFrameworkExt-r16 CSI-ReportFrameworkExt-r16
-- R1 16-3a, 16-3a-1, 16-3b, 16-3b-1, 16-8: Individual new codebook types
codebookParametersAddition-r16 CodebookParametersAddition-r16
-- R1 16-8: Mixed codebook types
codebookComboParametersAddition-r16 CodebookComboParametersAddition-r16
-- R4 8-2: SSB based beam correspondence
beamCorrespondenceSSB-based-r16 ENUMERATED {supported}
-- R4 8-3: CSI-RS based beam correspondence
beamCorrespondenceCSI-RS-based-r16 ENUMERATED {supported}
beamSwitchTiming-r16 SEQUENCE {
    scs-60kHz-r16 ENUMERATED {sym224, sym336}
    scs-120kHz-r16 ENUMERATED {sym224, sym336}
}
]],
[[
-- R1 16-1a-4: Semi-persistent L1-SINR report on PUCCH
semi-PersistentL1-SINR-Report-PUCCH-r16 SEQUENCE {
    supportReportFormat1-20FDM-syms-r16 ENUMERATED {supported}
    supportReportFormat4-140FDM-syms-r16 ENUMERATED {supported}
}
-- R1 16-1a-5: Semi-persistent L1-SINR report on PUSCH
semi-PersistentL1-SINR-Report-PUSCH-r16 ENUMERATED {supported}
]],
[[
-- R1 16-1h: Support of 64 configured PUCCH spatial relations
spatialRelations-v1640 SEQUENCE {
    maxNumberConfiguredSpatialRelations-v1640 ENUMERATED {n96, n128, n160, n192, n224, n256, n288, n320}
}
-- R1 16-1i: Support of 64 configured candidate beam RSs for BFR
support64CandidateBeamRS-BFR-r16 ENUMERATED {supported}
]],
[[
-- R1 16-2a-9: Interpretation of maxNumberMIMO-LayersPDSCH for multi-DCI based mTRP
maxMIMO-LayersForMulti-DCI-mTRP-r16 ENUMERATED {supported}
]],
[[
supportedSINR-meas-v1670 BIT STRING (SIZE (4))
]],
[[
-- R1 23-8-5 Increased repetition for SRS
srs-increasedRepetition-r17 ENUMERATED {supported}
-- R1 23-8-6 Partial frequency sounding of SRS
srs-partialFrequencySounding-r17 ENUMERATED {supported}
-- R1 23-8-7 Start RB location hopping for partial frequency SRS

```

```

srs-startRB-locationHoppingPartial-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-8-8      Comb-8 SRS
srs-combEight-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-9-1      Basic Features of Further Enhanced Port-Selection Type II Codebook (FeType-II) per band information
codebookParameterssfetype2-r17      CodebookParameterssfetype2-r17      OPTIONAL,
-- R1 23-3-1-2a      Two associated CSI-RS resources
mTRP-PUSCH-twoCSI-RS-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-3-2      Multi-TRP PUCCH repetition scheme 1 (inter-slot)
mTRP-PUCCH-InterSlot-r17      ENUMERATED {pf0-2, pf1-3-4, pf0-4}      OPTIONAL,
-- R1 23-3-2b      Cyclic mapping for multi-TRP PUCCH repetition
mTRP-PUCCH-CyclicMapping-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-3-2c      Second TPC field for multi-TRP PUCCH repetition
mTRP-PUCCH-SecondTPC-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-5-2      MTRP BFR based on two BFD-RS set
mTRP-BFR-twoBFD-RS-Set-r17      SEQUENCE {
    maxBFD-RS-resourcesPerSetPerBWP-r17      ENUMERATED {n1, n2},
    maxBFR-r17      INTEGER (1..9),
    maxBFD-RS-resourcesAcrossSetsPerBWP-r17      ENUMERATED {n2, n3, n4}
}      OPTIONAL,
-- R1 23-5-2a      PUCCH-SR resources for MTRP BFRQ - Max number of PUCCH-SR resources for MTRP BFRQ per cell group
mTRP-BFR-PUCCH-SR-perCG-r17      ENUMERATED {n1, n2}      OPTIONAL,
-- R1 23-5-2b      Association between a BFD-RS resource set on SpCell and a PUCCH SR resource
mTRP-BFR-association-PUCCH-SR-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-6-3      Simultaneous activation of two TCI states for PDCCH across multiple CCs (HST/URLLC)
sfm-SimultTwoTCI-AcrossMultiCC-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-6-4      Default DL beam setup for SFN
sfm-DefaultDL-BeamSetup-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-6-4a      Default UL beam setup for SFN PDCCH (FR2 only)
sfm-DefaultUL-BeamSetup-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-8-1      SRS triggering offset enhancement
srs-TriggeringOffset-r17      ENUMERATED {n1, n2, n4}      OPTIONAL,
-- R1 23-8-2      Triggering SRS only in DCI 0_1/0_2
srs-TriggeringDCI-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-9-5      Active CSI-RS resources and ports for mixed codebook types in any slot per band information
codebookComboParameterMixedType-r17      CodebookComboParameterMixedType-r17      OPTIONAL,
-- R1 23-1-1      Unified TCI [with joint DL/UL TCI update] for intra-cell beam management
unifiedJointTCI-r17      SEQUENCE{
    maxConfiguredJointTCI-r17      ENUMERATED {n8, n12, n16, n24, n32, n48, n64, n128},
    maxActivatedTCIAcrossCC-r17      ENUMERATED {n1, n2, n4, n8, n16}
}      OPTIONAL,
-- R1 23-1-1b      Unified TCI with joint DL/UL TCI update for intra- and inter-cell beam management with more than one MAC-CE
unifiedJointTCI-multiMAC-CE-r17      SEQUENCE{
    minBeamApplicationTime-r17      ENUMERATED {n1, n2, n4, n7, n14, n28, n42, n56, n70, n84, n98, n112, n224, n336}
    maxNumMAC-CE-PerCC      ENUMERATED {n2, n3, n4, n5, n6, n7, n8}
}      OPTIONAL,
-- R1 23-1-1d      Per BWP TCI state pool configuration for CA mode
unifiedJointTCI-perBWP-CA-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-1-1e      TCI state pool configuration with TCI pool sharing for CA mode
unifiedJointTCI-ListSharingCA-r17      ENUMERATED {n1, n2, n4, n8}      OPTIONAL,
-- R1 23-1-1f      Common multi-CC TCI state ID update and activation
unifiedJointTCI-commonMultiCC-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 23-1-1g      Beam misalignment between the DL source RS in the TCI state
unifiedJointTCI-BeamAlignDLRS-r17      ENUMERATED {supported}      OPTIONAL,

```

```

-- R1 23-1-1h Association between TCI state and UL PC settings for PUCCH, PUSCH, and SRS
unifiedJointTCI-PC-association-r17 ENUMERATED {supported} OPTIONAL,
-- R1 23-1-1i Indication/configuration of R17 TCI states for aperiodic CSI-RS, PDCCH, PDSCH
unifiedJointTCI-Legacy-r17 ENUMERATED {supported} OPTIONAL,
-- 23-1-1m Indication/configuration of R17 TCI states for SRS
unifiedJointTCI-Legacy-SRS-r17 ENUMERATED {supported} OPTIONAL,
-- R1 23-1-1j Indication/configuration of R17 TCI states for CORESET #0
unifiedJointTCI-Legacy-CORESET0-r17 ENUMERATED {supported} OPTIONAL,
-- R1 23-1-1c SCell BFR with unified TCI framework (NOTE; pre-requisite is empty)
unifiedJointTCI-SCellBFR-r17 ENUMERATED {supported} OPTIONAL,
-- R1 23-1-1a Unified TCI with joint DL/UL TCI update for inter-cell beam management
unifiedJointTCI-InterCell-r17 SEQUENCE{
    additionalMAC-CE-PerCC-r17 ENUMERATED {n0, n1, n2, n4},
    additionalMAC-CE-AcrossCC-r17 ENUMERATED {n0, n1, n2, n4}
} OPTIONAL,
-- R1 23-10-1 Unified TCI with separate DL/UL TCI update for intra-cell beam management
unifiedSeparateTCI-r17 SEQUENCE{
    maxConfiguredDL-TCI-r17 ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64, n128},
    maxConfiguredUL-TCI-r17 ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64},
    maxActivatedDL-TCIAcrossCC-r17 ENUMERATED {n1, n2, n4, n8, n16},
    maxActivatedUL-TCIAcrossCC-r17 ENUMERATED {n1, n2, n4, n8, n16}
} OPTIONAL,
-- R1 23-10-1b Unified TCI with separate DL/UL TCI update for intra-cell beam management with more than one MAC-CE
unifiedSeparateTCI-multiMAC-CE-r17 SEQUENCE{
    minBeamApplicationTime-r17 ENUMERATED {n1, n2, n4, n7, n14, n28, n42, n56, n70, n84, n98, n112, n224, n336},
    maxActivatedDL-TCIPerCC-r17 INTEGER (2..8),
    maxActivatedUL-TCIPerCC-r17 INTEGER (2..8)
} OPTIONAL,
-- R1 23-10-1d Per BWP DL/UL-TCI state pool configuration for CA mode
unifiedSeparateTCI-perBWP-CA-r17 ENUMERATED {supported} OPTIONAL,
-- R1 23-10-1e TCI state pool configuration with DL/UL-TCI pool sharing for CA mode
unifiedSeparateTCI-ListSharingCA-r17 SEQUENCE {
    maxNumListDL-TCI-r17 ENUMERATED {n1,n2,n4,n8} OPTIONAL,
    maxNumListUL-TCI-r17 ENUMERATED {n1,n2,n4,n8} OPTIONAL
} OPTIONAL,
-- R1 23-10-1f Common multi-CC DL/UL-TCI state ID update and activation with separate DL/UL TCI update
unifiedSeparateTCI-commonMultiCC-r17 ENUMERATED {supported} OPTIONAL,
-- 23-10-1m Unified TCI with separate DL/UL TCI update for inter-cell beam management with more than one MAC-CE
unifiedSeparateTCI-InterCell-r17 SEQUENCE {
    k-DL-PerCC-r17 ENUMERATED {n0, n1, n2, n4},
    k-UL-PerCC-r17 ENUMERATED {n0, n1, n2, n4},
    k-DL-AcrossCC-r17 ENUMERATED {n0, n1, n2, n4},
    k-UL-AcrossCC-r17 ENUMERATED {n0, n1, n2, n4}
} OPTIONAL,
-- R1 23-1-2 Inter-cell beam measurement and reporting (for inter-cell BM and mTRP)
unifiedJointTCI-mTRP-InterCell-BM-r17 SEQUENCE {
    maxNumAdditionalPCI-L1-RSRP-r17 INTEGER (1..7),
    maxNumSSB-ResourceL1-RSRP-AcrossCC-r17 ENUMERATED {n1,n2,n4,n8}
} OPTIONAL,
-- R1 23-1-3 MPE mitigation
mpe-Mitigation-r17 SEQUENCE {
    maxNumP-MPR-RI-pairs-r17 INTEGER (1..4),
    maxNumConFRS-r17 ENUMERATED {n1, n2, n4, n8, n12, n16, n28, n32, n48, n64}
} OPTIONAL,

```

```

-- R1 23-1-4    UE capability value reporting
srs-PortReport-r17
    capVal1-r17    ENUMERATED {n1, n2, n4}    OPTIONAL,
    capVal2-r17    ENUMERATED {n1, n2, n4}    OPTIONAL,
    capVal3-r17    ENUMERATED {n1, n2, n4}    OPTIONAL,
    capVal4-r17    ENUMERATED {n1, n2, n4}    OPTIONAL,
}
-- R1 23-2-1a    Monitoring of individual candidates
mTRP-PDCCH-individual-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-2-1b    PDCCH repetition with PDCCH monitoring on any span of up to 3 consecutive OFDM symbols of a slot
mTRP-PDCCH-anySpan-3Symbols-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-2-2    Two QCL TypeD for CORESET monitoring in PDCCH repetition
mTRP-PDCCH-TwoQCL-TypeD-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-3-1-2b    CSI-RS processing framework for SRS with two associated CSI-RS resources
mTRP-PUSCH-CSI-RS-r17
    maxNumPeriodicSRS-r17    INTEGER (1..8),
    maxNumAperiodicSRS-r17    INTEGER (1..8),
    maxNumSP-SRS-r17    INTEGER (0..8),
    numSRS-ResourcePerCC-r17    INTEGER (1..16),
    numSRS-ResourceNonCodebook-r17    INTEGER (1..2)
}    OPTIONAL,
-- R1 23-3-1a    Cyclic mapping for Multi-TRP PUSCH repetition
mTRP-PUSCH-cyclicMapping-r17    ENUMERATED {typeA, typeB, both}    OPTIONAL,
-- R1 23-3-1b    Second TPC field for Multi-TRP PUSCH repetition
mTRP-PUSCH-secondTPC-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-3-1c    Two PHR reporting
mTRP-PUSCH-twoPHR-Reporting-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-3-1e    A-CSI report
mTRP-PUSCH-A-CSI-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-3-1f    SP-CSI report
mTRP-PUSCH-SP-CSI-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-3-1g    CG PUSCH transmission
mTRP-PUSCH-CG-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-3-2d    Updating two Spatial relation or two sets of power control parameters for PUCCH group
mTRP-PUCCH-MAC-CE-r17    ENUMERATED {supported}    OPTIONAL,
-- R1 23-3-2e    Maximum number of power control parameter sets configured for multi-TRP PUCCH repetition in FR1
mTRP-PUCCH-maxNum-PC-FR1-r17    INTEGER (3..8)    OPTIONAL,
-- R1 23-4    IntCell-mTRP
mTRP-inter-Cell-r17
    maxNumAdditionalPCI-Case1-r17    INTEGER (1..7),
    maxNumAdditionalPCI-Case2-r17    INTEGER (0..7)
}    OPTIONAL,
-- R1 23-5-1    Group based L1-RSRP reporting enhancements
mTRP-GroupBasedL1-RSRP-r17
    maxNumBeamGroups-r17    INTEGER (1..4),
    maxNumRS-WithinSlot-r17    ENUMERATED {n2, n3, n4, n8, n16, n32, n64},
    maxNumRS-AcrossSlot-r17    ENUMERATED {n8, n16, n32, n64, n128}
}    OPTIONAL,
-- R1 23-5-2c    MAC-CE based update of explicit BFD-RS    mTRP-PUCCH-IntraSlot-r17 => per band
mTRP-BFD-RS-MAC-CE-r17    ENUMERATED {n4, n8, n12, n16, n32, n48, n64 }    OPTIONAL,
-- R1 23-7-1    Basic Features of CSI Enhancement for Multi-TRP
mTRP-CSI-EnhancementPerBand-r17
    maxNumNZP-CSI-RS-r17    INTEGER (2..8),
    cSI-Report-mode-r17    ENUMERATED {mode1, mode2, both},

```



```

supportedComboAcrossCCs-r17          SEQUENCE (SIZE (1..16)) OF CSI-MultiTRP-SupportedCombinations-r17,
codebookModeNCJT-r17                  ENUMERATED {mode1, mode1And2}
}
-- R1 23-7-1b    Active CSI-RS resources and ports in the presence of multi-TRP CSI
codebookComboParameterMultiTRP-r17    CodebookComboParameterMultiTRP-r17
-- R1 23-7-1a    Additional CSI report mode 1
mTRP-CSI-additionalCSI-r17             ENUMERATED {x1, x2}
-- R1 23-7-4     Support of Nmax=2 for Multi-TRP CSI
mTRP-CSI-N-Max2-r17                    ENUMERATED {supported}
-- R1 23-7-5     CMR sharing
mTRP-CSI-CMR-r17                      ENUMERATED {supported}
-- R1 23-8-11    Partial frequency sounding of SRS for non-frequency hopping case
srs-partialFreqSounding-r17           ENUMERATED {supported}
-- R1-24 feature: Extend beamSwitchTiming for FR2-2
beamSwitchTiming-v1710                SEQUENCE {
    scs-480kHz                         ENUMERATED {sym56, sym112, sym192, sym896, sym1344}
    scs-960kHz                         ENUMERATED {sym112, sym224, sym384, sym1792, sym2688}
}
-- R1-24 feature: Extend beamSwitchTiming-r16 for FR2-2
beamSwitchTiming-r17                  SEQUENCE {
    scs-480kHz-r17                    ENUMERATED {sym896, sym1344}
    scs-960kHz-r17                    ENUMERATED {sym1792, sym2688}
}
-- R1-24 feature: Extend beamReportTiming for FR2-2
beamReportTiming-v1710               SEQUENCE {
    scs-480kHz-r17                    ENUMERATED {sym56, sym112, sym224}
    scs-960kHz-r17                    ENUMERATED {sym112, sym224, sym448}
}
-- R1-24 feature:    Extend maximum number of RX/TX beam switch DL for FR2-2
maxNumberRxTxBeamSwitchDL-v1710      SEQUENCE {
    scs-480kHz-r17                    ENUMERATED {n2, n4, n7}
    scs-960kHz-r17                    ENUMERATED {n1, n2, n4, n7}
}
]],
[[
-- R1-23-1-4a: Semi-persistent/aperiodic capability value report
srs-PortReportSP-AP-r17              ENUMERATED {supported}
maxNumberRxBeam-v1720                INTEGER (9..12)
-- R1-23-6-5     Support implicit configuration of RS(s) with two TCI states for beam failure detection
sfn-ImplicitRS-twoTCI-r17            ENUMERATED {supported}
-- R1-23-6-6     QCL-TypeD collision handling with CORESET with 2 TCI states
sfn-QCL-TypeD-Collision-twoTCI-r17   ENUMERATED {supported}
-- R1-23-7-1c    Basic Features of CSI Enhancement for Multi-TRP - number of CPUs
mTRP-CSI-numCPU-r17                  ENUMERATED {n2, n3, n4}
]],
[[
supportRepNumPDSCH-TDRA-DCI-1-2-r17  ENUMERATED {n2, n3, n4, n5, n6, n7, n8, n16}
]],
[[
codebookParametersetype2DopplerCSI-r18    CodebookParametersetype2DopplerCSI-r18
codebookParametersfetype2DopplerCSI-r18   CodebookParametersfetype2DopplerCSI-r18
codebookParametersetype2CJT-r18           CodebookParametersetype2CJT-r18
codebookParametersfetype2CJT-r18         CodebookParametersfetype2CJT-r18
codebookComboParametersCJT-r18           CodebookComboParametersCJT-r18

```



```

codebookParametersSHARQ-ACK-PUSCH-r18          CodebookParametersSHARQ-ACK-PUSCH-r18          OPTIONAL,
-- R1 40-1-1: Unified TCI with joint DL/UL TCI update for single-DCI based intra-cell multi-TRP with single activated TCI
-- codepoint per CC
tci-JointTCI-UpdateSingleActiveTCI-PerCC-r18 SEQUENCE {
    maxNumConfigJointTCI-PerCC-PerBWP-r18      ENUMERATED {n8, n12, n16, n24, n32, n48, n64, n128},
    maxNumActiveJointTCI-AcrossCC-r18           ENUMERATED {n2, n4, n6, n8, n16, n32}
}
-- R1 40-1-1a: Unified TCI with joint DL/UL TCI update for single-DCI based intra-cell multi-TRP with multiple activated TCI
-- codepoints per CC
tci-JointTCI-UpdateMultiActiveTCI-PerCC-r18 SEQUENCE {
    tci-StateInd-r18                           ENUMERATED {withAssignment, withoutAssignment},
    maxNumActiveJointTCI-PerCC-r18              INTEGER (2..8)
}
-- R1 40-1-1c: DCI format 1_1 and if supported 1_2 configured with TCI selection field
tci-SelectionDCI-r18                          ENUMERATED {supported}
-- R1 40-1-2: Unified TCI with separate DL/UL TCI update for single-DCI based intra-cell multi-TRP with single activated TCI
-- codepoint per CC
tci-SeparateTCI-UpdateSingleActiveTCI-PerCC-r18 SEQUENCE {
    maxNumConfigDL-TCI-PerCC-PerBWP-r18        ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64, n128},
    maxNumConfigUL-TCI-PerCC-PerBWP-r18        ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64},
    maxNumActiveDL-TCI-AcrossCC-r18            ENUMERATED {n2, n4, n8, n16},
    maxNumActiveUL-TCI-AcrossCC-r18            ENUMERATED {n2, n4, n8, n16}
}
-- R1 40-1-2a: Unified TCI with separate DL/UL TCI update for single-DCI based intra-cell multi-TRP with multiple
-- activated TCI codepoints per CC
tci-SeparateTCI-UpdateMultiActiveTCI-PerCC-r18 SEQUENCE {
    maxNumActiveDL-TCI-AcrossCC-r18            ENUMERATED {n2, n4, n8, n16},
    maxNumActiveUL-TCI-AcrossCC-r18            ENUMERATED {n2, n4, n8, n16}
}
-- R1 40-1-3: Per aperiodic CSI-RS resource/resource set configuration for TCI selection in S-DCI based MTRP
tci-SelectionAperiodicCSI-RS-r18              ENUMERATED {perResource, perResourceSet, both}
-- R1 40-1-3a: Per aperiodic CSI-RS resource/resource set configuration for TCI selection in M-DCI based MTRP
tci-SelectionAperiodicCSI-RS-M-DCI-r18        ENUMERATED {perResource, perResourceSet, both}
-- R1 40-1-4: Two TCI states for CJT Tx scheme for PDSCH
twoTCI-StatePDSCH-CJT-TxScheme-r18           ENUMERATED {cjtSchemeA, cjtSchemeB, both}
-- R1 40-1-7: Unified TCI with joint DL/UL TCI update for multi-DCI based multi-TRP with single activated TCI
-- codepoint per CORESETPoolIndex per CC
tci-JointTCI-UpdateSingleActiveTCI-PerCC-PerCORESET-r18 SEQUENCE {
    mTRP-Operation-r18                        ENUMERATED {intraCell, intraCellAndInterCell},
    maxNumConfigJointTCI-PerCC-PerBWP-r18      ENUMERATED {n8, n12, n16, n24, n32, n48, n64, n128},
    maxNumActiveJointTCI-AcrossCC-PerCORESET-r18 ENUMERATED {n1, n2, n4, n8, n16}
}
-- R1 40-1-7a: Unified TCI with joint DL/UL TCI update for multi-DCI based multi-TRP with multiple activated TCI
-- codepoints per CORESETPoolIndex per CC
tci-JointTCI-UpdateMultiActiveTCI-PerCC-PerCORESET-r18 INTEGER (2..8)
-- R1 40-1-8: TRP-specific BFR with unified TCI framework with Unified TCI
tci-TRP-BFR-r18                             ENUMERATED {supported}
-- R1 40-1-9: Unified TCI with separate DL/UL TCI update for multi-DCI based multi-TRP with single activated TCI
-- codepoint per CORESETPoolIndex per CC
tci-SeparateTCI-UpdateSingleActiveTCI-PerCC-PerCORESET-r18 SEQUENCE {
    mTRP-Operation-r18                        ENUMERATED {intraCell, intraCellAndInterCell},
    maxNumConfigDL-TCI-PerCC-PerBWP-r18      ENUMERATED {n8, n12, n16, n24, n32, n48, n64, n128},
    maxNumConfigUL-TCI-PerCC-PerBWP-r18      ENUMERATED {n8, n12, n16, n24, n32, n48, n64},
    maxNumActiveDL-TCI-AcrossCC-r18          ENUMERATED {n1, n2, n4, n8, n16},

```

```

    maxNumActiveUL-TCI-AcrossCC-r18          ENUMERATED {n1, n2, n4, n8, n16}
  }
  -- R1 40-1-9a: Unified TCI with separate DL/UL TCI update for multi-DCI based multi-TRP with multiple activated TCI
  -- codepoints per CORESETPoolIndex per CC
  tci-SeparateTCI-UpdateMultiActiveTCI-PerCC-PerCORESET-r18 SEQUENCE {
    maxNumConfigDL-TCI-PerCC-PerBWP-r18    INTEGER (1..8),
    maxNumConfigUL-TCI-PerCC-PerBWP-r18    INTEGER (1..8)
  }
  -- R1 40-1-12: Common multi-CC TCI state ID update and activation for single-DCI based multi-TRP
  commonTCI-SingleDCI-r18                    INTEGER (1..4)
  -- R1 40-1-13: Common multi-CC TCI state ID update and activation for multi-DCI based multi-TRP
  commonTCI-MultiDCI-r18                    INTEGER (1..4)
  -- R1 40-1-14: Two PHR reporting for STx2P
  twoPHR-Reporting-r18                      ENUMERATED {supported}
  -- R1 40-2-3: TAG ID indication via absolute TA command MAC CE
  spCell-TAG-Ind-r18                        ENUMERATED {supported}
  -- R1 40-2-4: PDCCH order sent by one TRP triggers RACH procedure (specifically PRACH) towards a different TRP based on CFRA for
  -- inter-cell
  interCellCrossTRP-PDCCH-OrderCFRA-r18    ENUMERATED {supported}
  -- R1 40-2-4a: PDCCH order sent by one TRP triggers RACH procedure (specifically PRACH) towards a different TRP based on CFRA for
  -- intra-cell
  intraCellCrossTRP-PDCCH-OrderCFRA-r18    ENUMERATED {supported}
  -- R1 40-2-9: Overlapping UL transmission reduction
  overlapUL-TransReduction-r18             ENUMERATED {supported}
  -- R1 40-3-2-12: Supported maximum periodicity of CMR when configured as periodic CSI-RS
  maxPeriodicityCMR-r18                    ENUMERATED {sl4, sl5, sl8, sl10, sl20}
  -- R1 40-3-3-1: TDCP (Time Domain Channel Properties) report
  tdcP-Report-r18                          SEQUENCE {
    valueX-r18                             INTEGER (1..2),
    maxNumberActiveResource-r18             INTEGER (2..32)
  }
  -- R1 40-3-3-5: Number of CSI-RS resources for TDCP
  tdcP-Resource-r18                        SEQUENCE {
    maxNumberConfigPerCC-r18                ENUMERATED {n2, n4, n6, n8, n10, n12},
    maxNumberConfigAcrossCC-r18             INTEGER (1..32),
    maxNumberSimultaneousPerCC-r18          ENUMERATED {n2, n4, n6, n8, n12, n16, n20, n24, n28, n32}
  }
  -- R1 40-3-1-24: Timeline for regular eType-II-CJT CSI, or for port selection FeType-II-CJT CSI
  timelineRelax-CJT-CSI-r18                ENUMERATED {n0, n2}
  -- R1 40-4-11: Joint configuration of Rel.18 DMRS ports and Rel.18 dynamic switching between DFT-S-OFDM and CP-OFDM for PUSCH
  jointConfigDMRSPortDynamicSwitching-r18 ENUMERATED {supported}
  -- R1 40-5-1: SRS comb offset hopping
  srs-combOffsetHopping-r18                ENUMERATED {supported}
  -- R1 40-5-1a: Comb offset hopping time-domain behavior when repetition factor R>1
  srs-combOffsetInTime-r18                 ENUMERATED {srs, rsrs, both}
  -- R1 40-5-1b: SRS comb offset hopping combined with group/sequence hopping
  srs-combOffsetCombinedGroupSequence-r18 ENUMERATED {supported}
  -- R1 40-5-1c: Comb offset hopping within a subset
  srs-combOffsetHoppingWithinSubset-r18    ENUMERATED {supported}
  -- R1 40-5-2: SRS cyclic shift hopping
  srs-cyclicShiftHopping-r18               ENUMERATED {supported}
  -- R1 40-5-2a: Smaller cyclic shift granularity for cyclic shift hopping
  srs-cyclicShiftHoppingSmallGranularity-r18 ENUMERATED {supported}
  -- R1 40-5-2b: SRS cyclic shift hopping combined with group/sequence hopping

```

```

srs-cyclicShiftCombinedGroupSequence-r18    ENUMERATED {supported}                                OPTIONAL,
-- R1 40-5-2c: Cyclic shift hopping within a subset
cyclicShiftHoppingWithinSubset-r18          ENUMERATED {supported}                                OPTIONAL,
-- R1 40-5-3: SRS cyclic shift hopping combined with SRS comb offset hopping
srs-cyclicShiftCombinedCombOffset-r18       ENUMERATED {supported}                                OPTIONAL,

-- R1 40-6-1-1: 2 PTRS ports for single-DCI based STx2P SDM scheme for PUSCH-codebook
pusch-CB-2PTRS-SingleDCI-STx2P-SDM-r18     ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-1a-1: 2 PTRS ports for single-DCI based STx2P SDM scheme for PUSCH-noncodebook
pusch-NonCB-2PTRS-SingleDCI-STx2P-SDM-r18  ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-1b: Association between CSI-RS and SRS for noncodebook single-DCI based STx2P SDM scheme for PUSCH
pusch-NonCB-SingleDCI-STx2P-SDM-CSI-RS-SRS-r18 SEQUENCE {
    maxNumberPeriodicSRS-Resource-PerBWP-r18    INTEGER (1..8),
    maxNumberAperiodicSRS-Resource-PerBWP-r18    INTEGER (1..8),
    maxNumberSemiPersistentSRS-ResourcePerBWP-r18 INTEGER (0..8),
    valueY-SRS-ResourceAssociate-r18             INTEGER (1..16),
    valueX-CSI-RS-ResourceAssociate-r18           INTEGER (1..2)
}
-- R1 40-6-3b-1: Associated CSI-RS resources for noncodebook multi-DCI based STx2P PUSCH+PUSCH
twoPUSCH-NonCB-Multi-DCI-STx2P-CSI-RS-Resource-r18 SEQUENCE {
    maxNumberPeriodicSRS-r18                      INTEGER (1..8),
    maxNumberAperiodicSRS-r18                     INTEGER (1..8),
    maxNumberSemiPersistentSRS-r18                 INTEGER (0..8),
    simultaneousSRS-PerCC-r18                     INTEGER (1..16),
    simultaneousCSI-RS-NonCB-r18                   INTEGER (1..2)
}
-- R1 40-6-1-2: New UL DMRS port entry for single-DCI based SDM scheme for Rel-15 DMRS port and/or Rel-18 DMRS port
dmrs-PortEntrySingleDCI-SDM-r18              ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-2-1: 2 PTRS ports for single-DCI based STx2P SFN scheme for PUSCH-codebook
pusch-CB-2PTRS-SingleDCI-STx2P-SFN-r18       ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-2a-1: 2 PTRS ports for single-DCI based STx2P SFN scheme for PUSCH-codebook
pusch-NonCB-2PTRS-SingleDCI-STx2P-SFN-r18    ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-2b: Association between CSI-RS and SRS for noncodebook single-DCI based STx2P SFN scheme for PUSCH
pusch-NonCB-SingleDCI-STx2P-SFN-CSI-RS-SRS-r18 SEQUENCE {
    maxNumberPeriodicSRS-Resource-PerBWP-r18    INTEGER (1..8),
    maxNumberAperiodicSRS-Resource-PerBWP-r18    INTEGER (1..8),
    maxNumberSemiPersistentSRS-ResourcePerBWP-r18 INTEGER (0..8),
    valueY-SRS-ResourceAssociate-r18             INTEGER (1..16),
    valueX-CSI-RS-ResourceAssociate-r18           INTEGER (1..2)
}
-- R1 40-6-3c: Codebook multi-DCI based STx2P PUSCH+PUSCH - Fully overlapping PUSCHs in time and fully overlapping in frequency
twoPUSCH-CB-MultiDCI-STx2P-FullTimeFullFreqOverlap-r18 ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-3d: Codebook multi-DCI based STx2P PUSCH+PUSCH - Fully overlapping PUSCHs in time and partially overlapping in frequency
twoPUSCH-CB-MultiDCI-STx2P-FullTimePartialFreqOverlap-r18 ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-3e: Codebook multi-DCI based STx2P PUSCH+PUSCH - Partially overlapping PUSCHs in time and fully overlapping in frequency
twoPUSCH-CB-MultiDCI-STx2P-PartialTimeFullFreqOverlap-r18 ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-3f: Codebook multi-DCI based STx2P PUSCH+PUSCH - Partially overlapping PUSCHs in time, partially overlapping in frequency
twoPUSCH-CB-MultiDCI-STx2P-PartialTimePartialFreqOverlap-r18 ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-3g: Codebook multi-DCI based STx2P PUSCH+PUSCH - Partially overlapping PUSCHs in time, partially or non-overlapping
-- in frequency
twoPUSCH-CB-MultiDCI-STx2P-PartialTimeNonFreqOverlap-r18 ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-3h: Codebook multi-DCI based STx2P PUSCH+PUSCH for CG+CG
twoPUSCH-CB-MultiDCI-STx2P-CG-CG-r18        ENUMERATED {supported}                                OPTIONAL,
-- R1 40-6-3i: Codebook multi-DCI based STx2P PUSCH+PUSCH for DG+CG

```

```

twoPUSCH-CB-MultiDCI-STx2P-CG-DG-r18      ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-3j: Noncodebook multi-DCI based STx2P PUSCH+PUSCH - Fully overlapping PUSCHs in time and fully overlapping in frequency
twoPUSCH-NonCB-MultiDCI-STx2P-FullTimeFullFreqOverlap-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-3k: Noncodebook multi-DCI based STx2P PUSCH+PUSCH - Fully overlapping PUSCHs in time and partially overlapping in
-- frequency
twoPUSCH-NonCB-MultiDCI-STx2P-FullTimePartialFreqOverlap-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-3l: Noncodebook multi-DCI based STx2P PUSCH+PUSCH - Partially overlapping PUSCHs in time and fully overlapping in
-- frequency
twoPUSCH-NonCB-MultiDCI-STx2P-PartialTimeFullFreqOverlap-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-3m: Noncodebook multi-DCI based STx2P PUSCH+PUSCH - Partially overlapping PUSCHs in time, partially overlapping in
-- frequency
twoPUSCH-NonCB-MultiDCI-STx2P-PartialTimePartialFreqOverlap-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-3n: Noncodebook multi-DCI based STx2P PUSCH+PUSCH - Partially overlapping PUSCHs in time, non-overlapping in frequency
twoPUSCH-NonCB-MultiDCI-STx2P-PartialTimeNonFreqOverlap-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-3o: Noncodebook multi-DCI based STx2P PUSCH+PUSCH for CG+CG
twoPUSCH-NonCB-MultiDCI-STx2P-CG-CG-r18      ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-3p: Noncodebook multi-DCI based STx2P PUSCH+PUSCH for DG+CG
twoPUSCH-NonCB-MultiDCI-STx2P-CG-DG-r18      ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-4a: Dynamic indication of repetition number for SFN scheme for PUCCH
pucch-RepetitionDynamicIndicationSFN-r18      ENUMERATED {supported}      OPTIONAL,
-- R1 40-6-5: Support grouped-based beam reporting for STx2P
groupBeamReporting-STx2P-r18      SEQUENCE {
    groupL1-RSRP-Reporting-r18      ENUMERATED {jointULandDL, ulOnly, both},
    maxNumberBeamGroups-r18      INTEGER (1..4),
    maxNumberResWithinSlotAcrossCC-r18      ENUMERATED {n2, n3, n4, n8, n16, n32, n64},
    maxNumberResAcrossCC-r18      ENUMERATED {n8, n16, n32, n64, n128}
},
[[
-- R1 40-4-1k: Simultaneous Configuration of Rel-18 DL DMRS and DCI format 1_3
simulConfigDMRS-DCI-1-3-r18      ENUMERATED {supported}      OPTIONAL
]]
}

MIMO-ParametersPerBand-v17b0 ::= SEQUENCE {
-- R1 23-1-1b Unified TCI with joint DL/UL TCI update for intra- and inter-cell beam management with more than one MAC-CE
unifiedJointTCI-multiMAC-CE-v17b0      SEQUENCE{
    minBeamApplicationTimeJointTCI-v17b0      CHOICE {
        fr1-v17b0      SEQUENCE {
            scs-15kHz-v17b0      ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70} OPTIONAL,
            scs-30kHz-v17b0      ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70} OPTIONAL,
            scs-60kHz-v17b0      ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70} OPTIONAL
        },
        fr2-v17b0      SEQUENCE {
            scs-60kHz-v17b0      ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
            sym84, sym98, sym112, sym224, sym336} OPTIONAL,
            scs-120kHz-v17b0      ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
            sym84, sym98, sym112, sym224, sym336} OPTIONAL
        }
    },
    maxNumMAC-CE-PerCC-v17b0      ENUMERATED {n2, n3, n4, n5, n6, n7, n8}
}

-- R1 23-10-1b Unified TCI with separate DL/UL TCI update for intra-cell beam management with more than one MAC-CE
unifiedSeparateTCI-multiMAC-CE-v17b0      SEQUENCE{

```

```

minBeamApplicationTimeSeparateTCI-v17b0 CHOICE {
    fr1-v17b0 SEQUENCE {
        scs-15kHz-v17b0 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70} OPTIONAL,
        scs-30kHz-v17b0 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70} OPTIONAL,
        scs-60kHz-v17b0 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70} OPTIONAL
    },
    fr2-v17b0 SEQUENCE {
        scs-60kHz-v17b0 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
            sym84, sym98, sym112, sym224, sym336} OPTIONAL,
        scs-120kHz-v17b0 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
            sym84, sym98, sym112, sym224, sym336} OPTIONAL
    }
},
maxActivatedDL-TCIPerCC-v17b0 INTEGER (2..8),
maxActivatedUL-TCIPerCC-v17b0 INTEGER (2..8)
}
}

DummyG ::= SEQUENCE {
    maxNumberSSB-CSI-RS-ResourceOneTx ENUMERATED {n8, n16, n32, n64},
    maxNumberSSB-CSI-RS-ResourceTwoTx ENUMERATED {n0, n4, n8, n16, n32, n64},
    supportedCSI-RS-Density ENUMERATED {one, three, oneAndThree}
}

BeamManagementSSB-CSI-RS ::= SEQUENCE {
    maxNumberSSB-CSI-RS-ResourceOneTx ENUMERATED {n0, n8, n16, n32, n64},
    maxNumberCSI-RS-Resource ENUMERATED {n0, n4, n8, n16, n32, n64},
    maxNumberCSI-RS-ResourceTwoTx ENUMERATED {n0, n4, n8, n16, n32, n64},
    supportedCSI-RS-Density ENUMERATED {one, three, oneAndThree} OPTIONAL,
    maxNumberAperiodicCSI-RS-Resource ENUMERATED {n0, n1, n4, n8, n16, n32, n64}
}

DummyH ::= SEQUENCE {
    burstLength INTEGER (1..2),
    maxSimultaneousResourceSetsPerCC INTEGER (1..8),
    maxConfiguredResourceSetsPerCC INTEGER (1..64),
    maxConfiguredResourceSetsAllCC INTEGER (1..128)
}

CSI-RS-ForTracking ::= SEQUENCE {
    maxBurstLength INTEGER (1..2),
    maxSimultaneousResourceSetsPerCC INTEGER (1..8),
    maxConfiguredResourceSetsPerCC INTEGER (1..64),
    maxConfiguredResourceSetsAllCC INTEGER (1..256)
}

CSI-RS-IM-ReceptionForFeedback ::= SEQUENCE {
    maxConfigNumberNZP-CSI-RS-PerCC INTEGER (1..64),
    maxConfigNumberPortsAcrossNZP-CSI-RS-PerCC INTEGER (2..256),
    maxConfigNumberCSI-IM-PerCC ENUMERATED {n1, n2, n4, n8, n16, n32},
    maxNumberSimultaneousNZP-CSI-RS-PerCC INTEGER (1..64),
    totalNumberPortsSimultaneousNZP-CSI-RS-PerCC INTEGER (2..256)
}

```

```

CSI-RS-ProcFrameworkForSRS ::=
    maxNumberPeriodicSRS-AssocCSI-RS-PerBWP      INTEGER (1..4),
    maxNumberAperiodicSRS-AssocCSI-RS-PerBWP      INTEGER (1..4),
    maxNumberSP-SRS-AssocCSI-RS-PerBWP            INTEGER (0..4),
    simultaneousSRS-AssocCSI-RS-PerCC              INTEGER (1..8)
}

CSI-ReportFramework ::=
    maxNumberPeriodicCSI-PerBWP-ForCSI-Report      INTEGER (1..4),
    maxNumberAperiodicCSI-PerBWP-ForCSI-Report      INTEGER (1..4),
    maxNumberSemiPersistentCSI-PerBWP-ForCSI-Report INTEGER (0..4),
    maxNumberPeriodicCSI-PerBWP-ForBeamReport       INTEGER (1..4),
    maxNumberAperiodicCSI-PerBWP-ForBeamReport      INTEGER (1..4),
    maxNumberAperiodicCSI-triggeringStatePerCC      ENUMERATED {n3, n7, n15, n31, n63, n128},
    maxNumberSemiPersistentCSI-PerBWP-ForBeamReport INTEGER (0..4),
    simultaneousCSI-ReportsPerCC                    INTEGER (1..8)
}

CSI-ReportFrameworkExt-r16 ::=
    maxNumberAperiodicCSI-PerBWP-ForCSI-ReportExt-r16 INTEGER (5..8)
}

PTRS-DensityRecommendationDL ::=
    frequencyDensity1      INTEGER (1..276),
    frequencyDensity2      INTEGER (1..276),
    timeDensity1            INTEGER (0..29),
    timeDensity2            INTEGER (0..29),
    timeDensity3            INTEGER (0..29)
}

PTRS-DensityRecommendationUL ::=
    frequencyDensity1      INTEGER (1..276),
    frequencyDensity2      INTEGER (1..276),
    timeDensity1            INTEGER (0..29),
    timeDensity2            INTEGER (0..29),
    timeDensity3            INTEGER (0..29),
    sampleDensity1          INTEGER (1..276),
    sampleDensity2          INTEGER (1..276),
    sampleDensity3          INTEGER (1..276),
    sampleDensity4          INTEGER (1..276),
    sampleDensity5          INTEGER (1..276)
}

SpatialRelations ::=
    maxNumberConfiguredSpatialRelations      ENUMERATED {n4, n8, n16, n32, n64, n96},
    maxNumberActiveSpatialRelations          ENUMERATED {n1, n2, n4, n8, n14},
    additionalActiveSpatialRelationPUCCH     ENUMERATED {supported} OPTIONAL,
    maxNumberDL-RS-QCL-TypeD                ENUMERATED {n1, n2, n4, n8, n14}
}

DummyI ::=
    supportedSRS-TxPortSwitch      ENUMERATED {t1r2, t1r4, t2r4, t1r4-t2r4, tr-equal},
    txSwitchImpactToRx             ENUMERATED {true} OPTIONAL
}

```

```
CSI-MultiTRP-SupportedCombinations-r17 ::= SEQUENCE {
    maxNumTx-Ports-r17          ENUMERATED {n2, n4, n8, n12, n16, n24, n32},
    maxTotalNumCMR-r17          INTEGER (2..64),
    maxTotalNumTx-PortsNZP-CSI-RS-r17  INTEGER (2..256)
}

-- TAG-MIMO-PARAMETERSPERBAND-STOP
-- ASN1STOP
```

MIMO-ParametersPerBand field descriptions
codebookParametersPerBand For a given frequency band, this field indicates the alternative list of <i>SupportedCSI-RS-Resource</i> supported for each codebook type. The supported CSI-RS resources indicated by this field are referred by <i>codebookParametersperBC</i> in <i>CA-ParametersNR</i> to indicate the supported CSI-RS resource per band combination.
csi-RS-IM-ReceptionForFeedback/ csi-RS-ProcFrameworkForSRS/ csi-ReportFramework CSI related capabilities which the UE supports on each of the carriers operated on this band. If the network configures the UE with serving cells on both FR1 and FR2 bands these values may be further limited by the corresponding fields in <i>fr1-fr2-Add-UE-NR-Capabilities</i> .
supportNewDMRS-Port Presence of this field set to <i>supported1</i> , <i>supported2</i> or <i>supported3</i> indicates that the UE supports the new DMRS port entry {0,2,3}.

— ModulationOrder

The IE *ModulationOrder* is used to convey the maximum supported modulation order.

ModulationOrder information element

```
-- ASN1START
-- TAG-MODULATIONORDER-START

ModulationOrder ::= ENUMERATED {bpsk-halfpi, bpsk, qpsk, qam16, qam64, qam256}

-- TAG-MODULATIONORDER-STOP
-- ASN1STOP
```

— MRDC-Parameters

The IE *MRDC-Parameters* contains the band combination parameters specific to MR-DC for a given MR-DC band combination.

MRDC-Parameters information element

```
-- ASN1START
-- TAG-MRDC-PARAMETERS-START

MRDC-Parameters ::= SEQUENCE {
    singleUL-Transmission          ENUMERATED {supported} OPTIONAL,
```



```

dynamicPowerSharingENDC      ENUMERATED {supported}      OPTIONAL,
tdm-Pattern                  ENUMERATED {supported}      OPTIONAL,
ul-SharingEUTRA-NR           ENUMERATED {tdm, fdm, both}  OPTIONAL,
ul-SwitchingTimeEUTRA-NR     ENUMERATED {type1, type2}    OPTIONAL,
simultaneousRxTxInterBandENDC ENUMERATED {supported}    OPTIONAL,
asyncIntraBandENDC           ENUMERATED {supported}      OPTIONAL,
...
[[
dualPA-Architecture          ENUMERATED {supported}      OPTIONAL,
intraBandENDC-Support        ENUMERATED {non-contiguous, both} OPTIONAL,
ul-TimingAlignmentEUTRA-NR  ENUMERATED {required}    OPTIONAL
]]
}

MRDC-Parameters-v1580 ::= SEQUENCE {
    dynamicPowerSharingNEDC      ENUMERATED {supported}      OPTIONAL
}

MRDC-Parameters-v1590 ::= SEQUENCE {
    interBandContiguousMRDC      ENUMERATED {supported}      OPTIONAL
}

MRDC-Parameters-v15g0 ::= SEQUENCE {
    simultaneousRxTxInterBandENDCPerBandPair SimultaneousRxTxPerBandPair OPTIONAL
}

MRDC-Parameters-v15n0 ::= SEQUENCE {
    intraBandENDC-Support-UL      ENUMERATED {non-contiguous, both} OPTIONAL
}

MRDC-Parameters-v1620 ::= SEQUENCE {
    maxUplinkDutyCycle-interBandENDC-TDD-PC2-r16 SEQUENCE{
        eutra-TDD-Config0-r16    ENUMERATED {n20, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
        eutra-TDD-Config1-r16    ENUMERATED {n20, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
        eutra-TDD-Config2-r16    ENUMERATED {n20, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
        eutra-TDD-Config3-r16    ENUMERATED {n20, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
        eutra-TDD-Config4-r16    ENUMERATED {n20, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
        eutra-TDD-Config5-r16    ENUMERATED {n20, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
        eutra-TDD-Config6-r16    ENUMERATED {n20, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
    }
    -- R1 18-2 Single UL TX operation for TDD PCell in EN-DC
    tdm-restrictionTDD-endc-r16    ENUMERATED {supported}      OPTIONAL,
    -- R1 18-2a Single UL TX operation for FDD PCell in EN-DC
    tdm-restrictionFDD-endc-r16    ENUMERATED {supported}      OPTIONAL,
    -- R1 18-2b Support of HARQ-offset for SU0 case1 in EN-DC with LTE TDD PCell for type 1 UE
    singleUL-HARQ-offsetTDD-PCell-r16 ENUMERATED {supported}    OPTIONAL,
    -- R1 18-3 Dual Tx transmission for EN-DC with FDD PCell(TDM pattern for dual Tx UE)
    tdm-restrictionDualTX-FDD-endc-r16 ENUMERATED {supported}    OPTIONAL
}

MRDC-Parameters-v1630 ::= SEQUENCE {
    -- R4 2-20 Maximum uplink duty cycle for FDD+TDD EN-DC power class 2
    maxUplinkDutyCycle-interBandENDC-FDD-TDD-PC2-r16 SEQUENCE {
        maxUplinkDutyCycle-FDD-TDD-EN-DC1-r16    ENUMERATED {n30, n40, n50, n60, n70, n80, n90, n100} OPTIONAL,
    }
}

```



```

    maxUplinkDutyCycle-FDD-TDD-EN-DC2-r16      ENUMERATED {n30, n40, n50, n60, n70, n80, n90, n100}
  }
  -- R4 2-19 FDD-FDD or TDD-TDD inter-band MR-DC with overlapping or partially overlapping DL spectrum
  interBandMRDC-WithOverlapDL-Bands-r16      ENUMERATED {supported}      OPTIONAL
}

MRDC-Parameters-v1700 ::= SEQUENCE {
  condPSCellAdditionENDC-r17      ENUMERATED {supported}      OPTIONAL,
  scg-ActivationDeactivationENDC-r17      ENUMERATED {supported}      OPTIONAL,
  scg-ActivationDeactivationResumeENDC-r17      ENUMERATED {supported}      OPTIONAL
}

MRDC-Parameters-v1770 ::= SEQUENCE {
  -- R4 26-1: Higher Power Limit CA DC
  higherPowerLimitMRDC-r17      ENUMERATED {supported}      OPTIONAL
}

MRDC-Parameters-v1790 ::= SEQUENCE {
  intraBandENDC-Support-v1790      ENUMERATED {non-contiguous, both}      OPTIONAL,
  intraBandENDC-Support-UL-v1790      ENUMERATED {non-contiguous, both}      OPTIONAL
}

MRDC-Parameters-v1840 ::= SEQUENCE {
  intraBandENDC-NominalSpacing-r18      ENUMERATED {supported}      OPTIONAL
}

-- TAG-MRDC-PARAMETERS-STOP
-- ASN1STOP

```

— *NCR-Parameters*

The IE *NCR-Parameters* is used to indicate the UE capabilities supported by NCR-MT.

NCR-Parameters information element

```

-- ASN1START
-- TAG-NCR-PARAMETERS-START

NCR-Parameters-r18 ::=
  SEQUENCE {
    inactiveStateNCR-r18      ENUMERATED {supported}      OPTIONAL,
    supportedNumberOfDRBs-NCR-r18      ENUMERATED {n1,n16}      OPTIONAL,
    dummy      ENUMERATED {supported}      OPTIONAL
  }

-- TAG-NCR-PARAMETERS-STOP
-- ASN1STOP

```

NCR-Parameters field descriptions	
<i>dummy</i>	The field is not used in the specification and the network ignores the received value.

— NRDC-Parameters

The IE *NRDC-Parameters* contains parameters specific to NR-DC, i.e., which are not applicable to NR SA.

NRDC-Parameters information element

```
-- ASN1START
-- TAG-NRDC-PARAMETERS-START

NRDC-Parameters ::=
    measAndMobParametersNRDC
    generalParametersNRDC
    fdd-Add-UE-NRDC-Capabilities
    tdd-Add-UE-NRDC-Capabilities
    fr1-Add-UE-NRDC-Capabilities
    fr2-Add-UE-NRDC-Capabilities
    dummy2
    dummy
}

NRDC-Parameters-v1570 ::=
    sfn-SyncNRDC
}

NRDC-Parameters-v15c0 ::=
    pdcp-DuplicationSplitSRB
    pdcp-DuplicationSplitDRB
}

NRDC-Parameters-v1610 ::=
    measAndMobParametersNRDC-v1610
}

NRDC-Parameters-v1700 ::=
    f1c-OverNR-RRC-r17
    measAndMobParametersNRDC-v1700
}

-- TAG-NRDC-PARAMETERS-STOP
-- ASN1STOP
```

–
 NTN-Parameters

The IE *NTN-Parameters* is used to convey the subset of UE Radio Access Capability Parameters that apply to NTN access when there is a difference compared to TN access.

NTN-Parameters information element

```

-- ASN1START
-- TAG-NTN-PARAMETERS-START

NTN-Parameters-r17 ::= SEQUENCE {
    inactiveStateNTN-r17          ENUMERATED {supported}          OPTIONAL,
    ra-SDT-NTN-r17                ENUMERATED {supported}          OPTIONAL,
    srb-SDT-NTN-r17                ENUMERATED {supported}          OPTIONAL,
    measAndMobParametersNTN-r17    MeasAndMobParameters            OPTIONAL,
    mac-ParametersNTN-r17          MAC-Parameters                 OPTIONAL,
    phy-ParametersNTN-r17          Phy-Parameters                  OPTIONAL,
    fdd-Add-UE-NR-CapabilitiesNTN-r17 UE-NR-CapabilityAddXDD-Mode  OPTIONAL,
    fr1-Add-UE-NR-CapabilitiesNTN-r17 UE-NR-CapabilityAddFRX-Mode  OPTIONAL,
    ue-BasedPerfMeas-ParametersNTN-r17 UE-BasedPerfMeas-Parameters-r16  OPTIONAL,
    son-ParametersNTN-r17          SON-Parameters-r16              OPTIONAL
}

NTN-Parameters-v1820 ::= SEQUENCE {
    fr2-Add-UE-NR-CapabilitiesNTN-r18 UE-NR-CapabilityAddFRX-Mode  OPTIONAL
}

-- TAG-NTN-PARAMETERS-STOP
-- ASN1STOP

```

NTN-Parameters field descriptions
fdd-Add-UE-NR-CapabilitiesNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>fdd-Add-UE-NR-Capabilities</i> applies to NTN.
fr1-Add-UE-NR-CapabilitiesNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>fr1-Add-UE-NR-Capabilities</i> applies to NTN.
fr2-Add-UE-NR-CapabilitiesNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>fr2-Add-UE-NR-Capabilities</i> applies to NTN. This field is not used in this release of specification.
mac-ParametersNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>mac-Parameters</i> applies to NTN.
measAndMobParametersNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>measAndMobParameters</i> applies to NTN.
phy-ParametersNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>phy-Parameters</i> applies to NTN.
son-ParametersNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>son-Parameters-r16</i> applies to NTN.
ue-BasedPerfMeas-ParametersNTN NTN related capabilities which the UE supports in NTN differently than in TN. If absent, <i>ue-BasedPerfMeas-Parameters-r16</i> applies to NTN.

— *OLPC-SRS-Pos*

The IE *OLPC-SRS-Pos* is used to convey OLPC SRS positioning related parameters specific for a certain band.

OLPC-SRS-Pos information element

```
-- ASN1START
-- TAG-OLPC-SRS-POS-START

OLPC-SRS-Pos-r16 ::= SEQUENCE {
    olpc-SRS-PosBasedOnPRS-Serving-r16      ENUMERATED {supported}      OPTIONAL,
    olpc-SRS-PosBasedOnSSB-Neigh-r16        ENUMERATED {supported}      OPTIONAL,
    olpc-SRS-PosBasedOnPRS-Neigh-r16        ENUMERATED {supported}      OPTIONAL,
    maxNumberPathLossEstimatePerServing-r16 ENUMERATED {n1, n4, n8, n16}  OPTIONAL
}

--TAG-OLPC-SRS-POS-STOP
-- ASN1STOP
```

— *PDCP-Parameters*

The IE *PDCP-Parameters* is used to convey capabilities related to PDCP.

PDCP-Parameters information element

```
-- ASN1START
-- TAG-PDCP-PARAMETERS-START

PDCP-Parameters ::= SEQUENCE {
    supportedROHC-Profiles SEQUENCE {
        profile0x0000    BOOLEAN,
        profile0x0001    BOOLEAN,
        profile0x0002    BOOLEAN,
        profile0x0003    BOOLEAN,
        profile0x0004    BOOLEAN,
        profile0x0006    BOOLEAN,
        profile0x0101    BOOLEAN,
        profile0x0102    BOOLEAN,
        profile0x0103    BOOLEAN,
        profile0x0104    BOOLEAN
    },
    maxNumberROHC-ContextSessions ENUMERATED {cs2, cs4, cs8, cs12, cs16, cs24, cs32, cs48, cs64,
        cs128, cs256, cs512, cs1024, cs16384, spare2, spare1},
    uplinkOnlyROHC-Profiles      ENUMERATED {supported}      OPTIONAL,
    continueROHC-Context         ENUMERATED {supported}      OPTIONAL,
    outOfOrderDelivery           ENUMERATED {supported}      OPTIONAL,
    shortSN                      ENUMERATED {supported}      OPTIONAL,
    pdcp-DuplicationSRB          ENUMERATED {supported}      OPTIONAL,
    pdcp-DuplicationMCG-OrSCG-DRB ENUMERATED {supported}      OPTIONAL,
    ...
}
```

```

[[
drb-IAB-r16                ENUMERATED {supported}    OPTIONAL,
non-DRB-IAB-r16            ENUMERATED {supported}    OPTIONAL,
extendedDiscardTimer-r16   ENUMERATED {supported}    OPTIONAL,
continueEHC-Context-r16   ENUMERATED {supported}    OPTIONAL,
ehc-r16                    ENUMERATED {supported}    OPTIONAL,
maxNumberEHC-Contexts-r16  ENUMERATED {cs2, cs4, cs8, cs16, cs32, cs64, cs128, cs256, cs512,
                                     cs1024, cs2048, cs4096, cs8192, cs16384, cs32768, cs65536}  OPTIONAL,
jointEHC-ROHC-Config-r16   ENUMERATED {supported}    OPTIONAL,
pdcp-DuplicationMoreThanTwoRLC-r16  ENUMERATED {supported}    OPTIONAL,
]],
[[
longSN-RedCap-r17          ENUMERATED {supported}    OPTIONAL,
udc-r17                    SEQUENCE {
    standardDictionary-r17  ENUMERATED {supported}    OPTIONAL,
    operatorDictionary-r17  SEQUENCE {
        versionOfDictionary-r17  INTEGER (0..15),
        associatedPLMN-ID-r17    PLMN-Identity
    }
    continueUDC-r17         ENUMERATED {supported}    OPTIONAL,
    supportOfBufferSize-r17  ENUMERATED {kbyte4, kbyte8}  OPTIONAL
}
]],
[[
longSN-NCR-r18             ENUMERATED {supported}    OPTIONAL,
supportOfPDU-SetDiscard-r18  ENUMERATED {supported}    OPTIONAL,
psi-BasedDiscard-r18       ENUMERATED {supported}    OPTIONAL,
supportOfSN-GapReport-r18  ENUMERATED {supported}    OPTIONAL
]]
}

-- TAG-PDCP-PARAMETERS-STOP
-- ASN1STOP

```

— *PDCP-ParametersMRDC*

The IE *PDCP-ParametersMRDC* is used to convey PDCP related capabilities for MR-DC.

PDCP-ParametersMRDC information element

```

-- ASN1START
-- TAG-PDCP-PARAMETERSMRDC-START

PDCP-ParametersMRDC ::= SEQUENCE {
    pdcp-DuplicationSplitSRB  ENUMERATED {supported}    OPTIONAL,
    pdcp-DuplicationSplitDRB  ENUMERATED {supported}    OPTIONAL
}

PDCP-ParametersMRDC-v1610 ::= SEQUENCE {
    scg-DRB-NR-IAB-r16        ENUMERATED {supported}    OPTIONAL
}

```


configuredUL-GrantType2	ENUMERATED {supported}	OPTIONAL,
pre-EmptIndication-DL	ENUMERATED {supported}	OPTIONAL,
cbg-TransIndication-DL	ENUMERATED {supported}	OPTIONAL,
cbg-TransIndication-UL	ENUMERATED {supported}	OPTIONAL,
cbg-FlushIndication-DL	ENUMERATED {supported}	OPTIONAL,
dynamicHARQ-ACK-CodeB-CBG-Retx-DL	ENUMERATED {supported}	OPTIONAL,
rateMatchingResrcSetSemi-Static	ENUMERATED {supported}	OPTIONAL,
rateMatchingResrcSetDynamic	ENUMERATED {supported}	OPTIONAL,
bwp-SwitchingDelay	ENUMERATED {type1, type2}	OPTIONAL,
...		
[[		
dummy	ENUMERATED {supported}	OPTIONAL
]],		
[[		
maxNumberSearchSpaces	ENUMERATED {n10}	OPTIONAL,
rateMatchingCtrlResrcSetDynamic	ENUMERATED {supported}	OPTIONAL,
maxLayersMIMO-Indication	ENUMERATED {supported}	OPTIONAL
]],		
[[		
spCellPlacement	CarrierAggregationVariant	OPTIONAL
]],		
[[		
-- R1 9-1: Basic channel structure and procedure of 2-step RACH		
twoStepRACH-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 11-1: Monitoring DCI format 1_2 and DCI format 0_2		
dcI-Format1-2And0-2-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 11-1a: Monitoring both DCI format 0_1/1_1 and DCI format 0_2/1_2 in the same search space		
monitoringDCI-SameSearchSpace-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 11-10: Type 2 configured grant release by DCI format 0_1		
type2-CG-ReleaseDCI-0-1-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 11-11: Type 2 configured grant release by DCI format 0_2		
type2-CG-ReleaseDCI-0-2-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 12-3: SPS release by DCI format 1_1		
sps-ReleaseDCI-1-1-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 12-3a: SPS release by DCI format 1_2		
sps-ReleaseDCI-1-2-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 14-8: CSI trigger states containing non-active BWP		
csi-TriggerStateNon-ActiveBWP-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 20-2: Support up to 4 SMTCS configured for an IAB node MT per frequency location, including IAB-specific SMTCS window periodicities		
separateSMTCS-InterIAB-Support-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 20-3: Support RACH configuration separately from the RACH configuration for UE access, including new IAB-specific offset and scaling factors		
separateRACH-IAB-Support-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 20-5a: Support semi-static configuration/indication of UL-Flexible-DL slot formats for IAB-MT resources		
ul-flexibleDL-SlotFormatSemiStatic-IAB-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 20-5b: Support dynamic indication of UL-Flexible-DL slot formats for IAB-MT resources		
ul-flexibleDL-SlotFormatDynamics-IAB-r16	ENUMERATED {supported}	OPTIONAL,
dft-S-OFDM-WaveformUL-IAB-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 20-6: Support DCI Format 2_5 based indication of soft resource availability to an IAB node		
dcI-25-AI-RNTI-Support-IAB-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 20-7: Support T_delta reception.		
t-DeltaReceptionSupport-IAB-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 20-8: Support of Desired guard symbol reporting and provided guard symbol reception.		
guardSymbolReportReception-IAB-r16	ENUMERATED {supported}	OPTIONAL,

```

-- R1 18-8 HARQ-ACK codebook type and spatial bundling per PUCCH group
harqACK-CB-SpatialBundlingPUCCH-Group-r16    ENUMERATED {supported}    OPTIONAL,
-- R1 19-2: Cross Slot Scheduling
crossSlotScheduling-r16                      SEQUENCE {
    non-SharedSpectrumChAccess-r16            ENUMERATED {supported}    OPTIONAL,
    sharedSpectrumChAccess-r16                ENUMERATED {supported}    OPTIONAL,
}
maxNumberSRS-PosPathLossEstimateAllServingCells-r16    ENUMERATED {n1, n4, n8, n16}    OPTIONAL,
extendedCG-Periodicities-r16                  ENUMERATED {supported}    OPTIONAL,
extendedSPS-Periodicities-r16                 ENUMERATED {supported}    OPTIONAL,
codebookVariantsList-r16                     CodebookVariantsList-r16    OPTIONAL,
-- R1 11-6: PUSCH repetition Type A
pusch-RepetitionTypeA-r16                    SEQUENCE {
    sharedSpectrumChAccess-r16                ENUMERATED {supported}    OPTIONAL,
    non-SharedSpectrumChAccess-r16            ENUMERATED {supported}    OPTIONAL,
}
-- R1 11-4b: DL priority indication in DCI with mixed DCI formats
dci-DL-PriorityIndicator-r16                  ENUMERATED {supported}    OPTIONAL,
-- R1 12-1a: UL priority indication in DCI with mixed DCI formats
dci-UL-PriorityIndicator-r16                  ENUMERATED {supported}    OPTIONAL,
-- R1 16-1e: Maximum number of configured pathloss reference RSs for PUSCH/PUCCH/SRS by RRC for MAC-CE based pathloss reference RS update
maxNumberPathlossRS-Update-r16               ENUMERATED {n4, n8, n16, n32, n64}    OPTIONAL,

-- R1 18-9: Usage of the PDSCH starting time for HARQ-ACK type 2 codebook
type2-HARQ-ACK-Codebook-r16                  ENUMERATED {supported}    OPTIONAL,
-- R1 16-1g-1: Resources for beam management, pathloss measurement, BFD, RLM and new beam identification across frequency ranges
maxTotalResourcesForAcrossFreqRanges-r16     SEQUENCE {
    maxNumberResWithinSlotAcrossCC-AcrossFR-r16    ENUMERATED {n2, n4, n8, n12, n16, n32, n64, n128}    OPTIONAL,
    maxNumberResAcrossCC-AcrossFR-r16              ENUMERATED {n2, n4, n8, n12, n16, n32, n40, n48, n64, n72, n80, n96, n128, n256}    OPTIONAL,
}
-- R1 16-2a-4: HARQ-ACK for multi-DCI based multi-TRP - separate
harqACK-separateMultiDCI-MultiTRP-r16        SEQUENCE {
    maxNumberLongPUCCHs-r16                      ENUMERATED {longAndLong, longAndShort, shortAndShort}    OPTIONAL,
}
-- R1 16-2a-4: HARQ-ACK for multi-DCI based multi-TRP - joint
harqACK-jointMultiDCI-MultiTRP-r16           ENUMERATED {supported}    OPTIONAL,
-- R4 9-1: BWP switching on multiple CCs RRM requirements
bwp-SwitchingMultiCCs-r16                    CHOICE {
    type1-r16                                    ENUMERATED {us100, us200},
    type2-r16                                    ENUMERATED {us200, us400, us800, us1000}    OPTIONAL,
}
]],
[[
targetSMTC-SCG-r16                           ENUMERATED {supported}    OPTIONAL,
supportRepetitionZeroOffsetRV-r16            ENUMERATED {supported}    OPTIONAL,
-- R1 11-12: in-order CBG-based re-transmission
cbg-TransInOrderPUSCH-UL-r16                 ENUMERATED {supported}    OPTIONAL,
]],
[[
-- R4 6-3: Dormant BWP switching on multiple CCs RRM requirements
bwp-SwitchingMultiDormancyCCs-r16            CHOICE {
    type1-r16                                    ENUMERATED {us100, us200},
    type2-r16                                    ENUMERATED {us200, us400, us800, us1000}
}

```



```

}
-- R1 16-2a-8: Indicates that retransmission scheduled by a different CORESETPoolIndex for multi-DCI multi-TRP is not supported.
supportRetx-Diff-CoresetPool-Multi-DCI-TRP-r16          ENUMERATED {notSupported}          OPTIONAL,
-- R1 22-10: Support of pdccch-MonitoringAnyOccasionsWithSpanGap in case of cross-carrier scheduling with different SCSS
pdccch-MonitoringAnyOccasionsWithSpanGapCrossCarrierSch-r16  ENUMERATED {mode2, mode3}          OPTIONAL
]],
[[
-- R1 16-1j-1: Support of 2 port CSI-RS for new beam identification
newBeamIdentifications2PortCSI-RS-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 16-1j-2: Support of 2 port CSI-RS for pathloss estimation
pathlossEstimation2PortCSI-RS-r16          ENUMERATED {supported}          OPTIONAL
]],
[[
mux-HARQ-ACK-withoutPUCCH-onPUSCH-r16          ENUMERATED {supported}          OPTIONAL
]],
[[
-- R1 31-1: Support of Desired Guard Symbol reporting and provided guard symbol reception.
guardSymbolReportReception-IAB-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 31-2: support of restricted IAB-DU beam reception
restricted-IAB-DU-BeamReception-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 31-3: support of recommended IAB-MT beam transmission for DL and UL beam
recommended-IAB-MT-BeamTransmission-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 31-4: support of case 6 timing alignment indication reception
case6-TimingAlignmentReception-IAB-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 31-5: support of case 7 timing offset indication reception and case 7 timing at parent-node indication reception
case7-TimingAlignmentReception-IAB-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 31-6: support of desired DL Tx power adjustment reporting and DL Tx power adjustment reception
dl-tx-PowerAdjustment-IAB-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 31-7: support of desired IAB-MT PSD range reporting
desired-ul-tx-PowerAdjustment-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 31-8: support of monitoring DCI Format 2_5 scrambled by AI-RNTI for indication of FDM soft resource availability to an IAB node
fdm-SoftResourceAvailability-DynamicIndication-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 31-10: Support of updated T_delta range reception
updated-T-DeltaRangeReception-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 30-5: Support slot based dynamic PUCCH repetition indication for PUCCH formats 0/1/2/3/4
slotBasedDynamicPUCCH-Rep-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 25-1: Support of HARQ-ACK deferral in case of TDD collision
sps-HARQ-ACK-Deferral-r17          SEQUENCE {
    non-SharedSpectrumChAccess-r17          ENUMERATED {supported}          OPTIONAL,
    sharedSpectrumChAccess-r17          ENUMERATED {supported}          OPTIONAL,
}
-- R1 23-1-1k Maximum number of configured CC lists (per UE)
unifiedJointTCI-commonUpdate-r17          INTEGER (1..4)          OPTIONAL,
-- R1 23-2-1c PDCCH repetition with a single span of three contiguous OFDM symbols that is within the first four OFDM symbols in a slot
mTRP-PDCCH-singleSpan-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 27-23: Support of more than one activated PRS processing windows across all active DL BWPs
supportedActivatedPRS-ProcessingWindow-r17          ENUMERATED {n2, n3, n4}          OPTIONAL,
cg-TimeDomainAllocationExtension-r17          ENUMERATED {supported}          OPTIONAL
]],
[[
-- R1 25-20: Propagation delay compensation based on Rel-15 TA procedure for TN and licensed
ta-BasedPDC-TN-NonSharedSpectrumChAccess-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 31-11: Directional Collision Handling in DC operation
directionalCollisionDC-IAB-r17          ENUMERATED {supported}          OPTIONAL
]]

```

```

]],
[[
dummy1                ENUMERATED {supported}                OPTIONAL,
dummy2                ENUMERATED {supported}                OPTIONAL,
dummy3                ENUMERATED {supported}                OPTIONAL,
dummy4                ENUMERATED {supported}                OPTIONAL,
srs-AdditionalRepetition-r17    ENUMERATED {supported}        OPTIONAL,
pusch-Repetition-CG-SDT-r17    ENUMERATED {supported}        OPTIONAL,
]],
[[
multiPDSCH-PerSlotType1-CB-Support-r17    ENUMERATED {supported}    OPTIONAL,
]],
[[
-- R1 42-6: Joint operation of power domain and spatial domain adaptation
jointPowerSpatialAdaptation-r18    ENUMERATED {supported}        OPTIONAL,
-- R1 43-3: Aperiodic beam indication for access link
ncr-AperiodicBeamInd-AccessLink-r18    SEQUENCE {
    scs-15kHz-r18                INTEGER (0..1)                OPTIONAL,
    scs-30kHz-r18                INTEGER (0..1)                OPTIONAL,
    scs-60kHz-r18                INTEGER (0..2)                OPTIONAL,
    scs-120kHz-r18               INTEGER (0..2)                OPTIONAL,
}
-- R1 43-4: Semi-persistent beam indication for access link
ncr-Semi-PersistentBeamInd-AccessLink-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 43-5: Simultaneous UL transmission of backhaul link and C-Link
ncr-SimultaneousUL-BackhaulAndC-Link-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 43-6: Dedicated signalling for backhaul link beam indication
ncr-BackhaulBeamInd-r18    ENUMERATED {nonUnifiedTCI, unifiedTCI, both}    OPTIONAL,
-- R1 43-8: Adaptive beam for NCR backhaul link/C-link
ncr-AdaptiveBeamBackhaulAndC-Link-r18    ENUMERATED {nonUnifiedTCI, unifiedTCI, both}    OPTIONAL,

-- R1 49-4a: Nominal RBG size of Configuration 3 for FDRA type 0 for DCI format 1_3
nominalRBG-SizeOfConfig-3-FDRA-Type-0-DCI-1-3-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 49-4b: Nominal RBG size of Configuration 3 for FDRA type 0 for DCI format 0_3
nominalRBG-SizeOfConfig-3-FDRA-Type-0-DCI-0-3-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 49-4c: Configurable Type-1A fields for DCI format 0_3/1_3
configurableType-1A-FieldsForDCI-0-3-And-1-3-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 49-4d: FDRA Type 1 granularity of 2, 4, 8, or 16 consecutive RBs based RIV for DCI format 1_3/0_3
fdra-Type-1-Gty-2-4-8-16-RBs-RIV-DCI-1-3-And-0-3-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 49-6b: DL priority indication in DCI with mixed DCI formats including DCI format 1_3
priorityIndicationDL-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 49-7a: UL priority indication in DCI with mixed DCI formats including DCI format 0_3
priorityIndicationUL-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 49-10: Dynamic indication of applicable minimum scheduling restriction by DCI format 0_3/1_3
dynamicIndicationSchedulingRestriction-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 49-11: PHY priority indication for one-shot HARQ-ACK feedback triggered by DCI format 1_3
priorityIndicationOneSlotHARQ-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 50-1c: Multi-PUSCHs Type 2 configured grant release by DCI format 0_1
multiPUSCH-DCI-0-1-r18    ENUMERATED {supported}    OPTIONAL,
-- R1 50-1d: Multi-PUSCHs Type 2 configured grant release by DCI format 0_2
multiPUSCH-DCI-0-2-r18    ENUMERATED {supported}    OPTIONAL,

-- R1 55-1: Additional SR periodicities
additionalSR-Periodicities-r18    SEQUENCE {

```

```

        scs-30kHz-r18          ENUMERATED {supported}          OPTIONAL,
        scs-120kHz-r18         ENUMERATED {supported}          OPTIONAL,
    }
    -- R1 55-5: Enable MAC CE based pathloss RS updates for Type 1 CG-PUSCH
    pathlossRS-UpdateForType1CG-PUSCH-r18 ENUMERATED {supported} OPTIONAL,
    -- R4 38-9: Dormant BWP switching on multiple CCs RRM requirements with DCI 0-3/1-3
    bwp-SwitchingMultiDormancyCC-DCI-0-3-And-1-3-r18 CHOICE {
        type1-r18          ENUMERATED {us100, us200},
        type2-r18          ENUMERATED {us200, us400, us800, us1000}
    }
    ]],
    [[
    ncr-dft-S-OFDM-WaveformUL-r18          ENUMERATED {supported}          OPTIONAL
    ]]
}

Phy-ParametersCommon-v16a0 ::=
    srs-PeriodicityAndOffsetExt-r16          SEQUENCE {
        ENUMERATED {supported}          OPTIONAL
    }

Phy-ParametersXDD-Diff ::=
    dynamicSFI          SEQUENCE {
        twoPUCCH-F0-2-ConsecSymbols          ENUMERATED {supported}          OPTIONAL,
        twoDifferentTPC-Loop-PUSCH          ENUMERATED {supported}          OPTIONAL,
        twoDifferentTPC-Loop-PUCCH          ENUMERATED {supported}          OPTIONAL,
        ...,
        [[
        dl-SchedulingOffset-PDSCH-TypeA          ENUMERATED {supported}          OPTIONAL,
        dl-SchedulingOffset-PDSCH-TypeB          ENUMERATED {supported}          OPTIONAL,
        ul-SchedulingOffset          ENUMERATED {supported}          OPTIONAL
        ]]
    ]
}

Phy-ParametersFRX-Diff ::=
    dynamicSFI          SEQUENCE {
        dummy1          ENUMERATED {supported}          OPTIONAL,
        twoFL-DMRS          BIT STRING (SIZE (2))          OPTIONAL,
        dummy2          BIT STRING (SIZE (2))          OPTIONAL,
        dummy3          BIT STRING (SIZE (2))          OPTIONAL,
        supportedDMRS-TypeDL          ENUMERATED {type1, type1And2}          OPTIONAL,
        supportedDMRS-TypeUL          ENUMERATED {type1, type1And2}          OPTIONAL,
        semiOpenLoopCSI          ENUMERATED {supported}          OPTIONAL,
        csi-ReportWithoutPMI          ENUMERATED {supported}          OPTIONAL,
        csi-ReportWithoutCQI          ENUMERATED {supported}          OPTIONAL,
        onePortsPTRS          BIT STRING (SIZE (2))          OPTIONAL,
        twoPUCCH-F0-2-ConsecSymbols          ENUMERATED {supported}          OPTIONAL,
        pucch-F2-WithFH          ENUMERATED {supported}          OPTIONAL,
        pucch-F3-WithFH          ENUMERATED {supported}          OPTIONAL,
        pucch-F4-WithFH          ENUMERATED {supported}          OPTIONAL,
        pucch-F0-2WithoutFH          ENUMERATED {notSupported}          OPTIONAL,
        pucch-F1-3-4WithoutFH          ENUMERATED {notSupported}          OPTIONAL,
        mux-SR-HARQ-ACK-CSI-PUCCH-MultiPerSlot          ENUMERATED {supported}          OPTIONAL,
        uci-CodeBlockSegmentation          ENUMERATED {supported}          OPTIONAL,

```

onePUCCH-LongAndShortFormat	ENUMERATED {supported}	OPTIONAL,
twoPUCCH-AnyOthersInSlot	ENUMERATED {supported}	OPTIONAL,
intraSlotFreqHopping-PUSCH	ENUMERATED {supported}	OPTIONAL,
pusch-LBRM	ENUMERATED {supported}	OPTIONAL,
pdcch-BlindDetectionCA	INTEGER (4..16)	OPTIONAL,
tpc-PUSCH-RNTI	ENUMERATED {supported}	OPTIONAL,
tpc-PUCCH-RNTI	ENUMERATED {supported}	OPTIONAL,
tpc-SRS-RNTI	ENUMERATED {supported}	OPTIONAL,
absoluteTPC-Command	ENUMERATED {supported}	OPTIONAL,
twoDifferentTPC-Loop-PUSCH	ENUMERATED {supported}	OPTIONAL,
twoDifferentTPC-Loop-PUCCH	ENUMERATED {supported}	OPTIONAL,
pusch-HalfPi-BPSK	ENUMERATED {supported}	OPTIONAL,
pucch-F3-4-HalfPi-BPSK	ENUMERATED {supported}	OPTIONAL,
almostContiguousCP-OFDM-UL	ENUMERATED {supported}	OPTIONAL,
sp-CSI-RS	ENUMERATED {supported}	OPTIONAL,
sp-CSI-IM	ENUMERATED {supported}	OPTIONAL,
tdd-MultiDL-UL-SwitchPerSlot	ENUMERATED {supported}	OPTIONAL,
multipleCORESET	ENUMERATED {supported}	OPTIONAL,
...		
[[		
csi-RS-IM-ReceptionForFeedback	CSI-RS-IM-ReceptionForFeedback	OPTIONAL,
csi-RS-ProcFrameworkForSRS	CSI-RS-ProcFrameworkForSRS	OPTIONAL,
csi-ReportFramework	CSI-ReportFramework	OPTIONAL,
mux-SR-HARQ-ACK-CSI-PUCCH-OncePerSlot	SEQUENCE {	
sameSymbol	ENUMERATED {supported}	OPTIONAL,
diffSymbol	ENUMERATED {supported}	OPTIONAL,
}		OPTIONAL,
mux-SR-HARQ-ACK-PUCCH	ENUMERATED {supported}	OPTIONAL,
mux-MultipleGroupCtrlCH-Overlap	ENUMERATED {supported}	OPTIONAL,
dl-SchedulingOffset-PDSCH-TypeA	ENUMERATED {supported}	OPTIONAL,
dl-SchedulingOffset-PDSCH-TypeB	ENUMERATED {supported}	OPTIONAL,
ul-SchedulingOffset	ENUMERATED {supported}	OPTIONAL,
dl-64QAM-MCS-TableAlt	ENUMERATED {supported}	OPTIONAL,
ul-64QAM-MCS-TableAlt	ENUMERATED {supported}	OPTIONAL,
cqi-TableAlt	ENUMERATED {supported}	OPTIONAL,
oneFL-DMRS-TwoAdditionalDMRS-UL	ENUMERATED {supported}	OPTIONAL,
twoFL-DMRS-TwoAdditionalDMRS-UL	ENUMERATED {supported}	OPTIONAL,
oneFL-DMRS-ThreeAdditionalDMRS-UL	ENUMERATED {supported}	OPTIONAL,
]],		
[[		
pdcch-BlindDetectionNRDC	SEQUENCE {	
pdcch-BlindDetectionMCG-UE	INTEGER (1..15),	
pdcch-BlindDetectionSCG-UE	INTEGER (1..15)	
}		OPTIONAL,
mux-HARQ-ACK-PUSCH-DiffSymbol	ENUMERATED {supported}	OPTIONAL,
]],		
[[		
-- R1 11-1b: Type 1 HARQ-ACK codebook support for relative TDRA for DL		
type1-HARQ-ACK-Codebook-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 11-8: Enhanced UL power control scheme		
enhancedPowerControl-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 16-1b-1: TCI state activation across multiple CCs		
simultaneousTCI-ActMultipleCC-r16	ENUMERATED {supported}	OPTIONAL,
-- R1 16-1b-2: Spatial relation update across multiple CCs		

```

simultaneousSpatialRelationMultipleCC-r16    ENUMERATED {supported}    OPTIONAL,
cli-RSSI-FDM-DL-r16                          ENUMERATED {supported}    OPTIONAL,
cli-SRS-RSRP-FDM-DL-r16                     ENUMERATED {supported}    OPTIONAL,
-- R1 19-3: Maximum MIMO Layer Adaptation
maxLayersMIMO-Adaptation-r16                 ENUMERATED {supported}    OPTIONAL,
-- R1 12-5: Configuration of aggregation factor per SPS configuration
aggregationFactorSPS-DL-r16                 ENUMERATED {supported}    OPTIONAL,
-- R1 16-1g: Resources for beam management, pathloss measurement, BFD, RLM and new beam identification
maxTotalResourcesForOneFreqRange-r16        SEQUENCE {
    maxNumberResWithinSlotAcrossCC-OneFR-r16 ENUMERATED {n2, n4, n8, n12, n16, n32, n64, n128} OPTIONAL,
    maxNumberResAcrossCC-OneFR-r16           ENUMERATED {n2, n4, n8, n12, n16, n32, n40, n48, n64, n72, n80, n96, n128, n256}
                                           OPTIONAL
}
-- R1 16-7: Extension of the maximum number of configured aperiodic CSI report settings
csi-ReportFrameworkExt-r16                  CSI-ReportFrameworkExt-r16 OPTIONAL
]],
[[
twoTCI-Act-servingCellInCC-List-r16         ENUMERATED {supported}    OPTIONAL
]],
[[
-- R1 22-11: Support of 'cri-RI-CQI' report without non-PMI-PortIndication
cri-RI-CQI-WithoutNon-PMI-PortInd-r16       ENUMERATED {supported}    OPTIONAL
]],
[[
-- R1 25-11: 4-bits subband CQI for TN and licensed
cqi-4-BitsSubbandTN-NonSharedSpectrumChAccess-r17 ENUMERATED {supported}    OPTIONAL
]],
[[
multipleCORESET-RedCap-r17                  ENUMERATED {supported}    OPTIONAL
]]
}

Phy-ParametersFR1 ::=
    pdcch-MonitoringSingleOccasion           ENUMERATED {supported}    OPTIONAL,
    scs-60kHz                                ENUMERATED {supported}    OPTIONAL,
    pdsch-256QAM-FR1                         ENUMERATED {supported}    OPTIONAL,
    pdsch-RE-MappingFR1-PerSymbol            ENUMERATED {n10, n20}    OPTIONAL,
    ...
    [[
    pdsch-RE-MappingFR1-PerSlot               ENUMERATED {n16, n32, n48, n64, n80, n96, n112, n128,
    n144, n160, n176, n192, n208, n224, n240, n256}    OPTIONAL
    ]],
    [[
    -- R1 22-12: PDCCH monitoring with a single span of three contiguous OFDM symbols that is within the first four OFDM symbols in a
    -- slot
    pdcch-MonitoringSingleSpanFirst4Sym-r16    ENUMERATED {supported}    OPTIONAL
    ]],
    [[
    -- R1 56-4: K1 range extension defined for ATG as well
    k1-RangeExtensionATG-r18                  ENUMERATED {supported}    OPTIONAL,
    -- R1 56-3: Increasing the number of HARQ processes defined for ATG as well
    maxHARQ-ProcessNumberATG-r18             ENUMERATED {u16d32, u32d16, u32d32}    OPTIONAL,
    -- R1 56-1: Uplink Time and Frequency pre-compensation and timing relationship enhancements defined for ATG as well
    uplinkPreCompensationATG-r18             ENUMERATED {supported}    OPTIONAL,

```

```

-- R1 56-2: UE reporting of TA information
uplinkTA-ReportingATG-r18      ENUMERATED {supported}      OPTIONAL,
-- R4 36-1: MU-MIMO Interference Mitigation advanced receiver
advReceiver-MU-MIMO-r18      ENUMERATED {supported}      OPTIONAL,
-- R4 41-1: Support of delta PPowerClass reporting mechanism
deltaPowerClassReporting-r18  ENUMERATED {type1, type2}      OPTIONAL,
-- R1 51-2b: Support 12 PRB CORESET0 with an associated SS/PBCH block located at GSCN 41637
support12PRB-CORESET0-GSCN-41637-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 51-3: Support 5 MHz channel bandwidth with 20 PRB CORESET0
support5MHz-ChannelBW-20PRB-CORESET0-r18  ENUMERATED {supported}      OPTIONAL
]]
}

Phy-ParametersFR2 ::=
    dummy      ENUMERATED {supported}      OPTIONAL,
    pdsch-RE-MappingFR2-PerSymbol      ENUMERATED {n6, n20}      OPTIONAL,
    ...,
    [[
    pCell-FR2      ENUMERATED {supported}      OPTIONAL,
    pdsch-RE-MappingFR2-PerSlot      ENUMERATED {n16, n32, n48, n64, n80, n96, n112, n128,
        n144, n160, n176, n192, n208, n224, n240, n256}      OPTIONAL
    ]],
    [[
    -- R1 16-1c: Support of default spatial relation and pathloss reference RS for dedicated-PUCCH/SRS and PUSCH
    defaultSpatialRelationPathlossRS-r16      ENUMERATED {supported}      OPTIONAL,
    -- R1 16-1d: Support of spatial relation update for AP-SRS via MAC CE
    spatialRelationUpdateAP-SRS-r16      ENUMERATED {supported}      OPTIONAL,
    maxNumberSRS-PosSpatialRelationsAllServingCells-r16      ENUMERATED {n0, n1, n2, n4, n8, n16}      OPTIONAL
    ]],
    [[
    -- R4 30-3: Supports Indication of multi-Rx operation preference
    multiRxPreferenceIndication-r18      ENUMERATED {supported}      OPTIONAL
    ]]
}

-- TAG-PHY-PARAMETERS-STOP
-- ASN1STOP

```

Phy-ParametersFRX-Diff field descriptions

csi-RS-IM-ReceptionForFeedback/ csi-RS-ProcFrameworkForSRS/ csi-ReportFramework

These fields are optionally present in *fr1-fr2-Add-UE-NR-Capabilities* in *UE-NR-Capability*. They shall not be set in any other instance of the IE *Phy-ParametersFRX-Diff*. If the network configures the UE with serving cells on both FR1 and FR2 bands, these parameters, if present, limit the corresponding parameters in *MIMO-ParametersPerBand*.

– *Phy-ParametersMRDC*

The IE *Phy-ParametersMRDC* is used to convey physical layer capabilities for MR-DC.

Phy-ParametersMRDC information element

```
-- ASN1START
-- TAG-PHY-PARAMETERSMRDC-START

Phy-ParametersMRDC ::=
    naics-Capability-List          SEQUENCE {
                                   SEQUENCE (SIZE (1..maxNrofNAICS-Entries)) OF NAICS-Capability-Entry  OPTIONAL,
                                   ...,
                                   [[
    spCellPlacement                CarrierAggregationVariant                                OPTIONAL
                                   ]],
                                   [[
-- R1 18-3b: Semi-statically configured LTE UL transmissions in all UL subframes not limited to tdm-pattern in case of TDD PCell
    tdd-PCellUL-TX-AllUL-Subframe-r16  ENUMERATED {supported}                                OPTIONAL,
-- R1 18-3a: Semi-statically configured LTE UL transmissions in all UL subframes not limited to tdm-pattern in case of FDD PCell
    fdd-PCellUL-TX-AllUL-Subframe-r16  ENUMERATED {supported}                                OPTIONAL
                                   ]]
    }

NAICS-Capability-Entry ::=
    numberOfNAICS-CapableCC          SEQUENCE {
                                   INTEGER(1..5),
                                   numberOfAggregatedPRB          ENUMERATED {n50, n75, n100, n125, n150, n175, n200, n225,
                                   n250, n275, n300, n350, n400, n450, n500, spare},
                                   ...
    }

-- TAG-PHY-PARAMETERSMRDC-STOP
-- ASN1STOP
```

PHY-ParametersMRDC field descriptions
naics-Capability-List Indicates that UE in MR-DC supports NAICS as defined in TS 36.331 [10].

Phy-ParametersSharedSpectrumChAccess

The IE *Phy-ParametersSharedSpectrumChAccess* is used to convey the physical layer capabilities specific for shared spectrum channel access.

Phy-ParametersSharedSpectrumChAccess information element

```
-- ASN1START
-- TAG-PHY-PARAMETERSSSHAREDSPPECTRUMCHACCESS-START

Phy-ParametersSharedSpectrumChAccess-r16 ::=
    SEQUENCE {
-- 10-32 (1-2): SS block based SINR measurement (SS-SINR) for unlicensed spectrum
    ss-SINR-Meas-r16          ENUMERATED {supported}                                OPTIONAL,
-- 10-33 (2-32a): Semi-persistent CSI report on PUCCH for unlicensed spectrum
    sp-CSI-ReportPUCCH-r16    ENUMERATED {supported}                                OPTIONAL,
-- 10-33a (2-32b): Semi-persistent CSI report on PUSCH for unlicensed spectrum
    sp-CSI-ReportPUSCH-r16    ENUMERATED {supported}                                OPTIONAL,
    }

```



```

-- 10-34 (3-6): Dynamic SFI monitoring for unlicensed spectrum
dynamicSFI-r16                               ENUMERATED {supported}                OPTIONAL,
-- 10-35c (4-19c): SR/HARQ-ACK/CSI multiplexing once per slot using a PUCCH (or HARQ-ACK/CSI piggybacked on a PUSCH) when SR/HARQ-
-- ACK/CSI are supposed to be sent with different starting symbols in a slot for unlicensed spectrum
-- 10-35 (4-19): SR/HARQ-ACK/CSI multiplexing once per slot using a PUCCH (or HARQ-ACK/CSI piggybacked on a PUSCH) when SR/HARQ-
-- ACK/CSI are supposed to be sent with the same starting symbol on the PUCCH resources in a slot for unlicensed spectrum
mux-SR-HARQ-ACK-CSI-PUCCH-OncePerSlot-r16    SEQUENCE {
    sameSymbol-r16                           ENUMERATED {supported}                OPTIONAL,
    diffSymbol-r16                           ENUMERATED {supported}                OPTIONAL,
}
-- 10-35a (4-19a): Overlapping PUCCH resources have different starting symbols in a slot for unlicensed spectrum
mux-SR-HARQ-ACK-PUCCH-r16                     ENUMERATED {supported}                OPTIONAL,
-- 10-35b (4-19b): SR/HARQ-ACK/CSI multiplexing more than once per slot using a PUCCH (or HARQ-ACK/CSI piggybacked on a PUSCH) when
-- SR/HARQ ACK/CSI are supposed to be sent with the same or different starting symbol in a slot for unlicensed spectrum
mux-SR-HARQ-ACK-CSI-PUCCH-MultiPerSlot-r16    ENUMERATED {supported}                OPTIONAL,
-- 10-36 (4-28): HARQ-ACK multiplexing on PUSCH with different PUCCH/PUSCH starting OFDM symbols for unlicensed spectrum
mux-HARQ-ACK-PUSCH-DiffSymbol-r16             ENUMERATED {supported}                OPTIONAL,
-- 10-37 (4-23): Repetitions for PUCCH format 1, 3, and 4 over multiple slots with K = 2, 4, 8 for unlicensed spectrum
pucch-Repetition-F1-3-4-r16                   ENUMERATED {supported}                OPTIONAL,
-- 10-38 (5-14): Type 1 configured PUSCH repetitions over multiple slots for unlicensed spectrum
type1-PUSCH-RepetitionMultiSlots-r16         ENUMERATED {supported}                OPTIONAL,
-- 10-39 (5-16): Type 2 configured PUSCH repetitions over multiple slots for unlicensed spectrum
type2-PUSCH-RepetitionMultiSlots-r16         ENUMERATED {supported}                OPTIONAL,
-- 10-40 (5-17): PUSCH repetitions over multiple slots for unlicensed spectrum
pusch-RepetitionMultiSlots-r16               ENUMERATED {supported}                OPTIONAL,
-- 10-40a (5-17a): PDSCCH repetitions over multiple slots for unlicensed spectrum
pdsch-RepetitionMultiSlots-r16               ENUMERATED {supported}                OPTIONAL,
-- 10-41 (5-18): DL SPS
downlinkSPS-r16                              ENUMERATED {supported}                OPTIONAL,
-- 10-42 (5-19): Type 1 Configured UL grant
configuredUL-GrantType1-r16                  ENUMERATED {supported}                OPTIONAL,
-- 10-43 (5-20): Type 2 Configured UL grant
configuredUL-GrantType2-r16                  ENUMERATED {supported}                OPTIONAL,
-- 10-44 (5-21): Pre-emption indication for DL
pre-EmptIndication-DL-r16                    ENUMERATED {supported}                OPTIONAL,
...
}

-- TAG-PHY-PARAMETERSSHAREDSPSPECTRUMCHACCESS-STOP
-- ASN1STOP

```

– *PosSRS-BWA-RRC-Inactive*

The IE *PosSRS-BWA-RRC-Inactive* is used to convey the capabilities supported by the UE for support of positioning SRS bandwidth aggregation in RRC_INACTIVE

PosSRS-BWA-RRC-Inactive information element

```

-- ASN1START
-- TAG-POSSRS-BWA-RRC-INACTIVE-START

```

```
PosSRS-BWA-RRC-Inactive-r18 ::= SEQUENCE {
```



```

numOfCarriersIntraBandContiguous-r18      ENUMERATED {two, three, twoandthree},
maximumAggregatedBW-TwoCarriersFR1-r18    ENUMERATED { mhz20, mhz40, mhz50, mhz80, mhz100, mhz160,
                                         mhz180, mhz190, mhz200}
                                         OPTIONAL,
maximumAggregatedBW-TwoCarriersFR2-r18    ENUMERATED {mhz50, mhz100, mhz200, mhz400, mhz600, mhz800}
                                         OPTIONAL,
maximumAggregatedBW-ThreeCarriersFR1-r18  ENUMERATED {mhz80, mhz100, mhz160, mhz200, mhz240, mhz300}
                                         OPTIONAL,
maximumAggregatedBW-ThreeCarriersFR2-r18  ENUMERATED {mhz50, mhz100, mhz200, mhz300, mhz400, mhz600,
                                         mhz800, mhz1000, mhz1200}
                                         OPTIONAL,
maximumAggregatedResourceSet-r18          ENUMERATED {n1, n2, n4, n8, n12, n16},
maximumAggregatedResourcePeriodic-r18     ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
maximumAggregatedResourceSemi-r18         ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64},
maximumAggregatedResourcePeriodicPerSlot-r18 ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
maximumAggregatedResourceSemiPerSlot-r18  ENUMERATED {n0, n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
guardPeriod-r18                          ENUMERATED {n0, n30, n100, n140, n200},
powerClassForTwoAggregatedCarriers-r18    ENUMERATED {pc2, pc3}
powerClassForThreeAggregatedCarriers-r18  ENUMERATED {pc2, pc3}
                                         OPTIONAL,
...
}

-- TAG-POSSRS-BWA-RRC-INACTIVE-STOP
-- ASN1STOP

```

– *PosSRS-RRC-Inactive-OutsideInitialUL-BWP*

The IE *PosSRS-RRC-Inactive-OutsideInitialUL-BWP* is used to convey the capabilities supported by the UE for SRS for Positioning transmission in RRC_INACTIVE state configured outside initial UL BWP.

PosSRS-RRC-Inactive-OutsideInitialUL-BWP information element

```

-- ASN1START
-- TAG-POSSRS-RRC-INACTIVE-OUTSIDEINITIALUL-BWP-START

PosSRS-RRC-Inactive-OutsideInitialUL-BWP-r17 ::= SEQUENCE {
    -- R1 27-15b: Positioning SRS transmission in RRC_INACTIVE state configured outside initial UL BWP
    maxSRSPosBandwidthForEachSCS-withinCC-FR1-r17  ENUMERATED {mhz5, mhz10, mhz15, mhz20, mhz25, mhz30, mhz35, mhz40,
                                                             mhz45, mhz50, mhz60, mhz70, mhz80, mhz90, mhz100}
                                                             OPTIONAL,
    maxSRSPosBandwidthForEachSCS-withinCC-FR2-r17  ENUMERATED {mhz50, mhz100, mhz200, mhz400}
                                                             OPTIONAL,
    maxNumOfSRSPosResourceSets-r17                 ENUMERATED {n1, n2, n4, n8, n12, n16}
                                                             OPTIONAL,
    maxNumOfPeriodicSRSPosResources-r17            ENUMERATED {n1, n2, n4, n8, n16, n32, n64}
                                                             OPTIONAL,
    maxNumOfPeriodicSRSPosResourcesPerSlot-r17     ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
                                                             OPTIONAL,
    differentNumerologyBetweenSRSPosAndInitialBWP-r17 ENUMERATED {supported}
                                                             OPTIONAL,
    srsPosWithoutRestrictionOnBWP-r17              ENUMERATED {supported}
                                                             OPTIONAL,
    maxNumOfPeriodicAndSemipersistentSRSPosResources-r17 ENUMERATED {n1, n2, n4, n8, n16, n32, n64}
                                                             OPTIONAL,
    maxNumOfPeriodicAndSemipersistentSRSPosResourcesPerSlot-r17 ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
                                                             OPTIONAL,
    differentCenterFreqBetweenSRSPosAndInitialBWP-r17 ENUMERATED {supported}
                                                             OPTIONAL,
    switchingTimeSRS-TX-OtherTX-r17               ENUMERATED {us100, us140, us200, us300, us500}
                                                             OPTIONAL,
    -- R1 27-15c: Support of positioning SRS transmission in RRC_INACTIVE state outside initial BWP with semi-persistent SRS
    maxNumOfSemiPersistentSRSPosResources-r17      ENUMERATED {n1, n2, n4, n8, n16, n32, n64}
                                                             OPTIONAL,
    maxNumOfSemiPersistentSRSPosResourcesPerSlot-r17 ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
                                                             OPTIONAL,
    ...
}

```

```
-- TAG-POSSRS-RRC-INACTIVE-OUTSIDEINITIALUL-BWP-STOP
-- ASN1STOP
```

– *PosSRS-TxFrequencyHoppingRRC-Connected*

The IE *PosSRS-TxFrequencyHoppingRRC-Connected* is used to convey the capabilities supported by the RRC_CONNECTED UE for support of positioning SRS with Tx frequency hopping for RedCap UEs.

PosSRS-TxFrequencyHoppingRRC-Connected information element

```
-- ASN1START
-- TAG-POSSRS-TXFREQUENCYHOPPINGRRCCONNECTED-START
```

```
PosSRS-TxFrequencyHoppingRRC-Connected-r18 ::= SEQUENCE {
    maximumSRS-BandwidthAcrossAllHopsFR1-r18    ENUMERATED {mhz40, mhz50, mhz80, mhz100}    OPTIONAL,
    maximumSRS-BandwidthAcrossAllHopsFR2-r18    ENUMERATED {mhz100, mhz200, mhz400}    OPTIONAL,
    maximumTxFH-Hops-r18                        ENUMERATED {n2, n3, n4, n5, n6}        OPTIONAL,
    rf-TxRetuneTimeFR1-r18                      ENUMERATED {n70, n140, n210}          OPTIONAL,
    rf-TxRetuneTimeFR2-r18                      ENUMERATED {n35, n70, n140}          OPTIONAL,
    switchTimeBetweenActiveBWP-FrequencyHop-r18 ENUMERATED {n100, n140, n200, n300, n500}    OPTIONAL,
    numOfOverlappingPRB-r18                     ENUMERATED {n0, n1, n2, n4}            OPTIONAL,
    maximumSRS-ResourcePeriodic-r18             ENUMERATED {n1, n2, n4, n8, n16, n32, n64}  OPTIONAL,
    maximumSRS-ResourceAperiodic-r18            ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64}  OPTIONAL,
    maximumSRS-ResourceSemipersistent-r18       ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64}  OPTIONAL,
    ...
}

-- TAG-POSSRS-TXFREQUENCYHOPPINGRRCCONNECTED-STOP
-- ASN1STOP
```

– *PosSRS-TxFrequencyHoppingRRC-Inactive*

The IE *PosSRS-TxFrequencyHoppingRRC-Inactive* is used to convey the capabilities supported by the RRC_INACTIVE UE for support of positioning SRS with Tx frequency hopping for RedCap UEs.

PosSRS-TxFrequencyHoppingRRC-Inactive information element

```
-- ASN1START
-- TAG-POSSRS-TXFREQUENCYHOPPINGRRGINACTIVE-START
```

```
PosSRS-TxFrequencyHoppingRRC-Inactive-r18 ::= SEQUENCE {
    maximumSRS-BandwidthAcrossAllHopsFR1-r18    ENUMERATED {mhz40, mhz50, mhz80, mhz100}    OPTIONAL,
    maximumSRS-BandwidthAcrossAllHopsFR2-r18    ENUMERATED {mhz100, mhz200, mhz400}    OPTIONAL,
    maximumTxFH-Hops-r18                        ENUMERATED {n2, n3, n4, n5, n6}        OPTIONAL,
    rf-TxRetuneTimeFR1-r18                      ENUMERATED {n70, n140, n210}          OPTIONAL,
    rf-TxRetuneTimeFR2-r18                      ENUMERATED {n35, n70, n140}          OPTIONAL,
    switchTimeBetweenActiveBWP-FrequencyHop-r18 ENUMERATED {n100, n140, n200, n300, n500}    OPTIONAL,
    numOfOverlappingPRB-r18                     ENUMERATED {n0, n1, n2, n4}            OPTIONAL,
    maximumSRS-ResourcePeriodic-r18             ENUMERATED {n1, n2, n4, n8, n16, n32, n64}  OPTIONAL,

```

```

    maximumSRS-ResourceSemipersistent-r18      ENUMERATED {n0, n1, n2, n4, n8, n16, n32, n64}  OPTIONAL,
    ...
}
-- TAG-POSSRS-TXFREQUENCYHOPPINGRRCINACTIVE-STOP
-- ASN1STOP

```

— *PowSav-Parameters*

The IE *PowSav-Parameters* is used to convey the capabilities supported by the UE for the power saving preferences.

PowSav-Parameters information element

```

-- ASN1START
-- TAG-POWSAV-PARAMETERS-START

PowSav-Parameters-r16 ::=          SEQUENCE {
    powSav-ParametersCommon-r16     PowSav-ParametersCommon-r16      OPTIONAL,
    powSav-ParametersFRX-Diff-r16   PowSav-ParametersFRX-Diff-r16     OPTIONAL,
    ...
}

PowSav-Parameters-v1700 ::=       SEQUENCE {
    powSav-ParametersFR2-2-r17     PowSav-ParametersFR2-2-r17        OPTIONAL,
    ...
}

PowSav-ParametersCommon-r16 ::=   SEQUENCE {
    drx-Preference-r16             ENUMERATED {supported}             OPTIONAL,
    maxCC-Preference-r16           ENUMERATED {supported}             OPTIONAL,
    releasePreference-r16          ENUMERATED {supported}             OPTIONAL,
    -- R1 19-4a: UE assistance information
    minSchedulingOffsetPreference-r16  ENUMERATED {supported}         OPTIONAL,
    ...
}

PowSav-ParametersFRX-Diff-r16 ::= SEQUENCE {
    maxBW-Preference-r16           ENUMERATED {supported}             OPTIONAL,
    maxMIMO-LayerPreference-r16    ENUMERATED {supported}             OPTIONAL,
    ...
}

PowSav-ParametersFR2-2-r17 ::=    SEQUENCE {
    maxBW-Preference-r17           ENUMERATED {supported}             OPTIONAL,
    maxMIMO-LayerPreference-r17    ENUMERATED {supported}             OPTIONAL,
    ...
}

-- TAG-POWSAV-PARAMETERS-STOP
-- ASN1STOP

```

– *ProcessingParameters*

The IE *ProcessingParameters* is used to indicate PDSCH/PUSCH processing capabilities supported by the UE.

ProcessingParameters information element

```
-- ASN1START
-- TAG-PROCESSINGPARAMETERS-START

ProcessingParameters ::= SEQUENCE {
    fallback                ENUMERATED {sc, cap1-only},
    differentTB-PerSlot     SEQUENCE {
        upto1              NumberOfCarriers OPTIONAL,
        upto2              NumberOfCarriers OPTIONAL,
        upto4              NumberOfCarriers OPTIONAL,
        upto7              NumberOfCarriers OPTIONAL
    }
}

NumberOfCarriers ::= INTEGER (1..16)

-- TAG-PROCESSINGPARAMETERS-STOP
-- ASN1STOP
```

– *PRS-ProcessingCapabilityOutsideMGinPPWperType*

The IE *PRS-ProcessingCapabilityOutsideMGinPPWperType* is used to indicate DL PRS Processing Capability outside MG capabilities supported by the UE.

PRS-ProcessingCapabilityOutsideMGinPPWperType information element

```
-- ASN1START
-- TAG-PRS-PROCESSINGCAPABILITYOUTSIDEMGINPPWPType-START

PRS-ProcessingCapabilityOutsideMGinPPWperType-r17 ::= SEQUENCE {
    prsProcessingType-r17      ENUMERATED {type1A, type1B, type2},
    ppw-dl-PRS-BufferType-r17  ENUMERATED {type1, type2, ...},
    ppw-durationOfPRS-Processing-r17 CHOICE {
        ppw-durationOfPRS-Processing1-r17 SEQUENCE {
            ppw-durationOfPRS-ProcessingSymbolsN-r17 ENUMERATED {msDot125, msDot25, msDot5, ms1, ms2, ms4, ms6, ms8, ms12,
                                                                    ms16, ms20, ms25, ms30, ms32, ms35, ms40, ms45, ms50},
            ppw-durationOfPRS-ProcessingSymbolsT-r17 ENUMERATED {ms1, ms2, ms4, ms8, ms16, ms20, ms30, ms40, ms80,
                                                                    ms160, ms320, ms640, ms1280}
        },
        ppw-durationOfPRS-Processing2-r17 SEQUENCE {
            ppw-durationOfPRS-ProcessingSymbolsN2-r17 ENUMERATED {msDot125, msDot25, msDot5, ms1, ms2, ms3, ms4, ms5,
                                                                    ms6, ms8, ms12},
            ppw-durationOfPRS-ProcessingSymbolsT2-r17 ENUMERATED {ms4, ms5, ms6, ms8}
        }
    }
}

ppw-maxNumOfDL-PRS-ResProcessedPerSlot-r17 SEQUENCE {
```

OPTIONAL,

```

    scs15-r17
    scs30-r17
    scs60-r17
    scs120-r17
    ...
  },
  ppw-maxNumOfDL-Bandwidth-r17
    fr1-r17
    fr2-r17
  }
}

-- TAG-PRS-PROCESSINGCAPABILITYOUTSIDEMGINPPWPType-STOP
-- ASN1STOP
```

ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL,
ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL,
ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL,
ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64} OPTIONAL,
CHOICE {
 ENUMERATED {mhz5, mhz10, mhz20, mhz40, mhz50, mhz80, mhz100},
 ENUMERATED {mhz50, mhz100, mhz200, mhz400}
} OPTIONAL

— *RAT-Type*

The IE *RAT-Type* is used to indicate the radio access technology (RAT), including NR, of the requested/transferred UE capabilities.

***RAT-Type* information element**

```

-- ASN1START
-- TAG-RAT-TYPE-START

RAT-Type ::= ENUMERATED {nr, eutra-nr, eutra, utra-fdd-v1610, ...}

-- TAG-RAT-TYPE-STOP
-- ASN1STOP
```

— *RedCapParameters*

The IE *RedCapParameters* is used to indicate the UE capabilities supported by RedCap UEs.

***RedCapParameters* information element**

```

-- ASN1START
-- TAG-REDCAPPARAMETERS-START

RedCapParameters-r17 ::= SEQUENCE {
  -- R1 28-1: RedCap UE
  supportOfRedCap-r17          ENUMERATED {supported}          OPTIONAL,
  supportOf16DRB-RedCap-r17    ENUMERATED {supported}          OPTIONAL
}

RedCapParameters-v1740 ::= SEQUENCE {
  ncd-SSB-ForRedCapInitialBWP-SDT-r17  ENUMERATED {supported}  OPTIONAL
}
```

```
-- TAG-REDCAPPARAMETERS-STOP
-- ASN1STOP
```

— *RF-Parameters*

The IE *RF-Parameters* is used to convey RF-related capabilities for NR operation.

RF-Parameters information element

```
-- ASN1START
-- TAG-RF-PARAMETERS-START
```

RF-Parameters ::=	SEQUENCE {	
supportedBandListNR	SEQUENCE (SIZE (1..maxBands)) OF BandNR,	
supportedBandCombinationList	BandCombinationList	OPTIONAL,
appliedFreqBandListFilter	FreqBandList	OPTIONAL,
...		
[[		
supportedBandCombinationList-v1540	BandCombinationList-v1540	OPTIONAL,
srs-SwitchingTimeRequested	ENUMERATED {true}	OPTIONAL
]],		
[[		
supportedBandCombinationList-v1550	BandCombinationList-v1550	OPTIONAL
]],		
[[		
supportedBandCombinationList-v1560	BandCombinationList-v1560	OPTIONAL
]],		
[[		
supportedBandCombinationList-v1610	BandCombinationList-v1610	OPTIONAL,
supportedBandCombinationListSidelinkEUTRA-NR-r16	BandCombinationListSidelinkEUTRA-NR-r16	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-r16	BandCombinationList-UplinkTxSwitch-r16	OPTIONAL
]],		
[[		
supportedBandCombinationList-v1630	BandCombinationList-v1630	OPTIONAL,
supportedBandCombinationListSidelinkEUTRA-NR-v1630	BandCombinationListSidelinkEUTRA-NR-v1630	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1630	BandCombinationList-UplinkTxSwitch-v1630	OPTIONAL
]],		
[[		
supportedBandCombinationList-v1640	BandCombinationList-v1640	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1640	BandCombinationList-UplinkTxSwitch-v1640	OPTIONAL
]],		
[[		
supportedBandCombinationList-v1650	BandCombinationList-v1650	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1650	BandCombinationList-UplinkTxSwitch-v1650	OPTIONAL
]],		
[[		
extendedBand-n77-r16	ENUMERATED {supported}	OPTIONAL
]],		
[[		
supportedBandCombinationList-UplinkTxSwitch-v1670	BandCombinationList-UplinkTxSwitch-v1670	OPTIONAL
]],		

```

[[
supportedBandCombinationList-v1680          BandCombinationList-v1680          OPTIONAL
]],
[[
supportedBandCombinationList-v1690          BandCombinationList-v1690          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1690  BandCombinationList-UplinkTxSwitch-v1690  OPTIONAL
]],
[[
supportedBandCombinationList-v1700          BandCombinationList-v1700          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1700  BandCombinationList-UplinkTxSwitch-v1700  OPTIONAL,
supportedBandCombinationListSL-RelayDiscovery-r17  OCTET STRING                      OPTIONAL, -- Contains PC5
BandCombinationListSidelinkNR-r16
supportedBandCombinationListSL-NonRelayDiscovery-r17  OCTET STRING                      OPTIONAL, -- Contains PC5
BandCombinationListSidelinkNR-r16
supportedBandCombinationListSidelinkEUTRA-NR-v1710  BandCombinationListSidelinkEUTRA-NR-v1710  OPTIONAL,
sidelinkRequested-r17                             ENUMERATED {true}                 OPTIONAL,
extendedBand-n77-2-r17                             ENUMERATED {supported}            OPTIONAL
]],
[[
supportedBandCombinationList-v1720          BandCombinationList-v1720          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1720  BandCombinationList-UplinkTxSwitch-v1720  OPTIONAL
]],
[[
supportedBandCombinationList-v1730          BandCombinationList-v1730          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1730  BandCombinationList-UplinkTxSwitch-v1730  OPTIONAL,
supportedBandCombinationListSL-RelayDiscovery-v1730  BandCombinationListSL-Discovery-r17  OPTIONAL,
supportedBandCombinationListSL-NonRelayDiscovery-v1730  BandCombinationListSL-Discovery-r17  OPTIONAL
]],
[[
supportedBandCombinationList-v1740          BandCombinationList-v1740          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1740  BandCombinationList-UplinkTxSwitch-v1740  OPTIONAL
]],
[[
supportedBandCombinationList-v1760          BandCombinationList-v1760          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1760  BandCombinationList-UplinkTxSwitch-v1760  OPTIONAL
]],
[[
dummy1                                         BandCombinationList-v1770          OPTIONAL,
dummy2                                         BandCombinationList-UplinkTxSwitch-v1770  OPTIONAL
]],
[[
supportedBandCombinationList-v1780          BandCombinationList-v1780          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1780  BandCombinationList-UplinkTxSwitch-v1780  OPTIONAL
]],
[[
supportedBandCombinationList-v1800          BandCombinationList-v1800          OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1800  BandCombinationList-UplinkTxSwitch-v1800  OPTIONAL,
supportedBandCombinationListSL-U2U-Relay-r18      SEQUENCE {
  supportedBandCombinationListSL-U2U-RelayDiscovery-r18  OCTET STRING                      OPTIONAL, -- Contains PC5
  supportedBandCombinationListSL-U2U-DiscoveryExt  BandCombinationListSL-Discovery-r17  OPTIONAL, -- BandCombinationListSidelinkNR-r16
}
]],
[[

```

```

supportedBandCombinationList-v1830      BandCombinationList-v1830      OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1830  BandCombinationList-UplinkTxSwitch-v1830  OPTIONAL
]],
[[
supportedBandCombinationList-v1840      BandCombinationList-v1840      OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1840  BandCombinationList-UplinkTxSwitch-v1840  OPTIONAL
]],
[[
supportedBandCombinationList-v1860      BandCombinationList-v1860      OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1860  BandCombinationList-UplinkTxSwitch-v1860  OPTIONAL
]]
}

RF-Parameters-v15g0 ::=
supportedBandCombinationList-v15g0      SEQUENCE {
                                         BandCombinationList-v15g0      OPTIONAL
}

RF-Parameters-v16a0 ::=
supportedBandCombinationList-v16a0      SEQUENCE {
supportedBandCombinationList-UplinkTxSwitch-v16a0  BandCombinationList-UplinkTxSwitch-v16a0  OPTIONAL,
}

RF-Parameters-v16c0 ::=
supportedBandListNR-v16c0              SEQUENCE {
                                         SEQUENCE (SIZE (1..maxBands)) OF BandNR-v16c0
}

RF-Parameters-v16j0 ::=
supportedBandCombinationList-v16j0      SEQUENCE {
supportedBandCombinationList-UplinkTxSwitch-v16j0  BandCombinationList-UplinkTxSwitch-v16j0  OPTIONAL,
}

RF-Parameters-v17b0 ::=
supportedBandListNR-v17b0              SEQUENCE {
supportedBandCombinationList-v17b0      SEQUENCE (SIZE (1..maxBands)) OF BandNR-v17b0  OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v17b0  BandCombinationList-UplinkTxSwitch-v17b0  OPTIONAL,
}

BandNR ::=
bandNR                                SEQUENCE {
modifiedMPR-Behaviour                  FreqBandIndicatorNR,
mimo-ParametersPerBand                  BIT STRING (SIZE (8))
extendedCP                              OPTIONAL,
multipleTCI                             MIMO-ParametersPerBand
bwp-WithoutRestriction                  OPTIONAL,
bwp-SameNumerology                       ENUMERATED {supported}
bwp-DiffNumerology                       OPTIONAL,
crossCarrierScheduling-SameSCS           ENUMERATED {supported}
pdsch-256QAM-FR2                        OPTIONAL,
pusch-256QAM                            ENUMERATED {supported}
ue-PowerClass                           OPTIONAL,
rateMatchingLTE-CRS                      ENUMERATED {supported}
channelBWs-DL                           CHOICE {
fr1                                     SEQUENCE {
scs-15kHz                             BIT STRING (SIZE (10))
                                         OPTIONAL,

```



```

[[
asymmetricBandwidthCombinationSet    BIT STRING (SIZE (1..32))    OPTIONAL
]],
[[
-- R1 10: NR-unlicensed
sharedSpectrumChAccessParamsPerBand-r16 SharedSpectrumChAccessParamsPerBand-r16 OPTIONAL,
-- R1 11-7b: Independent cancellation of the overlapping PUSCHs in an intra-band UL CA
cancelOverlappingPUSCH-r16            ENUMERATED {supported}      OPTIONAL,
-- R1 14-1: Multiple LTE-CRS rate matching patterns
multipleRateMatchingEUTRA-CRS-r16     SEQUENCE {
    maxNumberPatterns-r16              INTEGER (2..6),
    maxNumberNon-OverlapPatterns-r16   INTEGER (1..3)
}                                       OPTIONAL,
-- R1 14-1a: Two LTE-CRS overlapping rate matching patterns within a part of NR carrier using 15 kHz overlapping with a LTE carrier
overlapRateMatchingEUTRA-CRS-r16      ENUMERATED {supported}      OPTIONAL,
-- R1 14-2: PDSCH Type B mapping of length 9 and 10 OFDM symbols
pdsch-MappingTypeB-Alt-r16            ENUMERATED {supported}      OPTIONAL,
-- R1 14-3: One slot periodic TRS configuration for FR1
oneSlotPeriodicTRS-r16                ENUMERATED {supported}      OPTIONAL,
olpc-SRS-Pos-r16                       OLPC-SRS-Pos-r16           OPTIONAL,
spatialRelationsSRS-Pos-r16            SpatialRelationsSRS-Pos-r16  OPTIONAL,
simulSRS-MIMO-TransWithinBand-r16      ENUMERATED {n2}           OPTIONAL,
channelBW-DL-IAB-r16                   CHOICE {
    fr1-100mhz                         SEQUENCE {
        scs-15kHz                      ENUMERATED {supported}    OPTIONAL,
        scs-30kHz                      ENUMERATED {supported}    OPTIONAL,
        scs-60kHz                      ENUMERATED {supported}    OPTIONAL,
    },
    fr2-200mhz                         SEQUENCE {
        scs-60kHz                      ENUMERATED {supported}    OPTIONAL,
        scs-120kHz                     ENUMERATED {supported}    OPTIONAL,
    }
}                                       OPTIONAL,
channelBW-UL-IAB-r16                   CHOICE {
    fr1-100mhz                         SEQUENCE {
        scs-15kHz                      ENUMERATED {supported}    OPTIONAL,
        scs-30kHz                      ENUMERATED {supported}    OPTIONAL,
        scs-60kHz                      ENUMERATED {supported}    OPTIONAL,
    },
    fr2-200mhz                         SEQUENCE {
        scs-60kHz                      ENUMERATED {supported}    OPTIONAL,
        scs-120kHz                     ENUMERATED {supported}    OPTIONAL,
    }
}                                       OPTIONAL,
rasterShift7dot5-IAB-r16               ENUMERATED {supported}    OPTIONAL,
ue-PowerClass-v1610                    ENUMERATED {pc1dot5}      OPTIONAL,
condHandover-r16                       ENUMERATED {supported}    OPTIONAL,
condHandoverFailure-r16                 ENUMERATED {supported}    OPTIONAL,
condHandoverTwoTriggerEvents-r16        ENUMERATED {supported}    OPTIONAL,
condPSCellChange-r16                   ENUMERATED {supported}    OPTIONAL,
condPSCellChangeTwoTriggerEvents-r16    ENUMERATED {supported}    OPTIONAL,
mpr-PowerBoost-FR2-r16                 ENUMERATED {supported}    OPTIONAL,

-- R1 11-9: Multiple active configured grant configurations for a BWP of a serving cell

```

```

activeConfiguredGrant-r16          SEQUENCE {
maxNumberConfigsPerBWP-r16        ENUMERATED {n1, n2, n4, n8, n12},
maxNumberConfigsAllCC-r16         INTEGER (2..32)
}
-- R1 11-9a: Joint release in a DCI for two or more configured grant Type 2 configurations for a given BWP of a serving cell
jointReleaseConfiguredGrantType2-r16  ENUMERATED {supported}
-- R1 12-2: Multiple SPS configurations
sps-r16                             SEQUENCE {
maxNumberConfigsPerBWP-r16        INTEGER (1..8),
maxNumberConfigsAllCC-r16         INTEGER (2..32)
}
-- R1 12-2a: Joint release in a DCI for two or more SPS configurations for a given BWP of a serving cell
jointReleaseSPS-r16                 ENUMERATED {supported}
-- R1 13-19: Simultaneous positioning SRS and MIMO SRS transmission within a band across multiple CCs
simulSRS-TransWithinBand-r16        ENUMERATED {n2}
trs-AdditionalBandwidth-r16          ENUMERATED {trs-AddBW-Set1, trs-AddBW-Set2}
handoverIntraF-IAB-r16              ENUMERATED {supported}
]],
[[
-- R1 22-5a: Simultaneous transmission of SRS for antenna switching and SRS for CB/NCB /BM for intra-band UL CA
-- R1 22-5c: Simultaneous transmission of SRS for antenna switching and SRS for antenna switching for intra-band UL CA
simulTX-SRS-AntSwitchingIntraBandUL-CA-r16  SimulSRS-ForAntennaSwitching-r16
-- R1 10: NR-unlicensed
sharedSpectrumChAccessParamsPerBand-v1630  SharedSpectrumChAccessParamsPerBand-v1630
]],
[[
handoverUTRA-FDD-r16                ENUMERATED {supported}
-- R4 7-4: Report the shorter transient capability supported by the UE: 2, 4 or 7us
enhancedUL-TransientPeriod-r16        ENUMERATED {us2, us4, us7}
sharedSpectrumChAccessParamsPerBand-v1640  SharedSpectrumChAccessParamsPerBand-v1640
]],
[[
type1-PUSCH-RepetitionMultiSlots-v1650    ENUMERATED {supported}
type2-PUSCH-RepetitionMultiSlots-v1650    ENUMERATED {supported}
pusch-RepetitionMultiSlots-v1650          ENUMERATED {supported}
configuredUL-GrantType1-v1650            ENUMERATED {supported}
configuredUL-GrantType2-v1650            ENUMERATED {supported}
sharedSpectrumChAccessParamsPerBand-v1650  SharedSpectrumChAccessParamsPerBand-v1650
]],
[[
enhancedSkipUplinkTxConfigured-v1660      ENUMERATED {supported}
enhancedSkipUplinkTxDynamic-v1660        ENUMERATED {supported}
]],
[[
maxUplinkDutyCycle-PC1dot5-MPE-FR1-r16    ENUMERATED {n10, n15, n20, n25, n30, n40, n50, n60, n70, n80, n90, n100}
txDiversity-r16                          ENUMERATED {supported}
]],
[[
-- R1 36-1: Support of 1024QAM for PDSCH for FR1
pdsch-1024QAM-FR1-r17                  ENUMERATED {supported}
-- R4 22-1 support of FR2 HST operation
ue-PowerClass-v1700                    ENUMERATED {pc5, pc6, pc7}
-- R1 24: NR extension to 71GHz (FR2-2)
fr2-2-AccessParamsPerBand-r17          FR2-2-AccessParamsPerBand-r17

```

rlm-Relaxation-r17	ENUMERATED {supported}	OPTIONAL,
bfd-Relaxation-r17	ENUMERATED {supported}	OPTIONAL,
cg-SDT-r17	ENUMERATED {supported}	OPTIONAL,
locationBasedCondHandover-r17	ENUMERATED {supported}	OPTIONAL,
timeBasedCondHandover-r17	ENUMERATED {supported}	OPTIONAL,
eventA4BasedCondHandover-r17	ENUMERATED {supported}	OPTIONAL,
mn-InitiatedCondPSCellChangeNRDC-r17	ENUMERATED {supported}	OPTIONAL,
sn-InitiatedCondPSCellChangeNRDC-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 29-3a: PDCCH skipping		
pdcch-SkippingWithoutSSSG-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 29-3b: 2 search space sets group switching		
sssg-Switching-1BitInd-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 29-3c: 3 search space sets group switching		
sssg-Switching-2BitInd-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 29-3d: 2 search space sets group switching with PDCCH skipping		
pdcch-SkippingWithSSSG-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 29-3e: Support Search space set group switching capability 2 for FR1		
searchSpaceSetGrp-switchCap2-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 26-1: Uplink Time and Frequency pre-compensation and timing relationship enhancements		
uplinkPreCompensation-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 26-4: UE reporting of information related to TA pre-compensation		
uplink-TA-Reporting-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 26-5: Increasing the number of HARQ processes		
max-HARQ-ProcessNumber-r17	ENUMERATED {u16d32, u32d16, u32d32}	OPTIONAL,
-- R1 26-6: Type-2 HARQ codebook enhancement		
type2-HARQ-Codebook-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 26-6a: Type-1 HARQ codebook enhancement		
type1-HARQ-Codebook-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 26-6b: Type-3 HARQ codebook enhancement		
type3-HARQ-Codebook-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 26-9: UE-specific K_offset		
ue-specific-K-Offset-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 24-1f: Multiple PDSCH scheduling by single DCI for 120kHz in FR2-1		
multiPDSCH-SingleDCI-FR2-1-SCS-120kHz-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 24-1g: Multiple PUSCH scheduling by single DCI for 120kHz in FR2-1		
multiPUSCH-SingleDCI-FR2-1-SCS-120kHz-r17	ENUMERATED {supported}	OPTIONAL,
-- R4 14-4: Parallel PRS measurements in RRC_INACTIVE state, FR1/FR2 diff		
parallelPRS-MeasRRC-Inactive-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 27-1-2: Support of UE-TxTEGs for UL TDOA		
nr-UE-TxTEG-ID-MaxSupport-r17	ENUMERATED {n1, n2, n3, n4, n6, n8}	OPTIONAL,
-- R1 27-17: PRS processing in RRC_INACTIVE		
prs-ProcessingRRC-Inactive-r17	ENUMERATED {supported}	OPTIONAL,
-- R1 27-3-2: DL PRS measurement outside MG and in a PRS processing window		
prs-ProcessingWindowType1A-r17	ENUMERATED {option1, option2, option3}	OPTIONAL,
prs-ProcessingWindowType1B-r17	ENUMERATED {option1, option2, option3}	OPTIONAL,
prs-ProcessingWindowType2-r17	ENUMERATED {option1, option2, option3}	OPTIONAL,
-- R1 27-15: Positioning SRS transmission in RRC_INACTIVE state for initial UL BWP		
srs-AllPosResourcesRRC-Inactive-r17	SRS-AllPosResourcesRRC-Inactive-r17	OPTIONAL,
-- R1 27-16: OLPC for positioning SRS in RRC_INACTIVE state - gNB		
olpc-SRS-PosRRC-Inactive-r17	OLPC-SRS-Pos-r16	OPTIONAL,
-- R1 27-19: Spatial relation for positioning SRS in RRC_INACTIVE state - gNB		
spatialRelationsSRS-PosRRC-Inactive-r17	SpatialRelationsSRS-Pos-r16	OPTIONAL,
-- R1 30-1: Increased maximum number of PUSCH Type A repetitions		
maxNumberPUSCH-TypeA-Repetition-r17	ENUMERATED {supported}	OPTIONAL,

```

-- R1 30-2: PUSCH Type A repetitions based on available slots
puschTypeA-RepetitionsAvailSlot-r17      ENUMERATED {supported}      OPTIONAL,
-- R1 30-3: TB processing over multi-slot PUSCH
tb-ProcessingMultiSlotPUSCH-r17          ENUMERATED {supported}      OPTIONAL,
-- R1 30-3a: Repetition of TB processing over multi-slot PUSCH
tb-ProcessingRepMultiSlotPUSCH-r17       ENUMERATED {supported}      OPTIONAL,
-- R1 30-4: The maximum duration for DM-RS bundling
maxDurationDMRS-Bundling-r17             SEQUENCE {
    fdd-r17                               ENUMERATED {n4, n8, n16, n32}  OPTIONAL,
    tdd-r17                               ENUMERATED {n2, n4, n8, n16}   OPTIONAL,
}
-- R1 30-6: Repetition of PUSCH transmission scheduled by RAR UL grant and DCI format 0_0 with CRC scrambled by TC-RNTI
pusch-RepetitionMsg3-r17                 ENUMERATED {supported}      OPTIONAL,
sharedSpectrumChAccessParamsPerBand-v1710 SharedSpectrumChAccessParamsPerBand-v1710 OPTIONAL,
-- R4 25-2: Parallel measurements on cells belonging to a different NGSO satellite than a serving satellite without scheduling restrictions
-- on normal operations with the serving cell
parallelMeasurementWithoutRestriction-r17 ENUMERATED {supported}      OPTIONAL,
-- R4 25-5: Parallel measurements on multiple NGSO satellites within a SMTC
maxNumber-NGSO-SatellitesWithinOneSMTC-r17 ENUMERATED {n1, n2, n3, n4}  OPTIONAL,
-- R1 26-10: K1 range extension
k1-RangeExtension-r17                    ENUMERATED {supported}      OPTIONAL,
-- R1 35-1: Aperiodic CSI-RS for tracking for fast SCell activation
aperiodicCSI-RS-FastScellActivation-r17  SEQUENCE {
    maxNumberAperiodicCSI-RS-PerCC-r17   ENUMERATED {n8, n16, n32, n48, n64, n128, n255},
    maxNumberAperiodicCSI-RS-AcrossCCs-r17 ENUMERATED {n8, n16, n32, n64, n128, n256, n512, n1024}
}
-- R1 35-2: Aperiodic CSI-RS bandwidth for tracking for fast SCell activation for 10MHz UE channel bandwidth
aperiodicCSI-RS-AdditionalBandwidth-r17  ENUMERATED {addBW-Set1, addBW-Set2}  OPTIONAL,
-- R1 28-1a: RRC-configured DL BWP without CD-SSB or NCD-SSB
bwp-WithoutCD-SSB-OrNCD-SSB-RedCap-r17  ENUMERATED {supported}              OPTIONAL,
-- R1 28-3: Half-duplex FDD operation type A for (e)RedCap UE
halfDuplexFDD-TypeA-RedCap-r17          ENUMERATED {supported}      OPTIONAL,
-- R1 27-15b: Positioning SRS transmission in RRC_INACTIVE state configured outside initial UL BWP
posSRS-RRC-Inactive-OutsideInitialUL-BWP-r17 PosSRS-RRC-Inactive-OutsideInitialUL-BWP-r17 OPTIONAL,
-- R4 15-3 UE support of CBW for 480kHz SCS
channelBWs-DL-SCS-480kHz-FR2-2-r17      BIT STRING (SIZE (8))          OPTIONAL,
channelBWs-UL-SCS-480kHz-FR2-2-r17      BIT STRING (SIZE (8))          OPTIONAL,
-- R4 15-4 UE support of CBW for 960kHz SCS
channelBWs-DL-SCS-960kHz-FR2-2-r17      BIT STRING (SIZE (8))          OPTIONAL,
channelBWs-UL-SCS-960kHz-FR2-2-r17      BIT STRING (SIZE (8))          OPTIONAL,
-- R4 17-1 UL gap for Tx power management
ul-GapFR2-r17                           ENUMERATED {supported}      OPTIONAL,
-- R1 25-4: One-shot HARQ ACK feedback triggered by DCI format 1_2
oneShotHARQ-feedbackTriggeredByDCI-1-2-r17 ENUMERATED {supported}      OPTIONAL,
-- R1 25-5: PHY priority handling for one-shot HARQ ACK feedback
oneShotHARQ-feedbackPhy-Priority-r17     ENUMERATED {supported}      OPTIONAL,
-- R1 25-6: Enhanced type 3 HARQ-ACK codebook feedback
enhancedType3-HARQ-CodebookFeedback-r17 SEQUENCE {
    enhancedType3-HARQ-Codebooks-r17     ENUMERATED {n1, n2, n4, n8},
    maxNumberPUCCH-Transmissions-r17     ENUMERATED {n1, n2, n3, n4, n5, n6, n7}
}
-- R1 25-7: Triggered HARQ-ACK codebook re-transmission
triggeredHARQ-CodebookRetx-r17          SEQUENCE {
    minHARQ-Retx-Offset-r17              ENUMERATED {n-7, n-5, n-3, n-1, n1},

```

```

    maxHARQ-Retx-Offset-r17          ENUMERATED {n4, n6, n8, n10, n12, n14, n16, n18, n20, n22, n24}
  },
  ],
  [[
    -- R4 22-2 support of one shot large UL timing adjustment
    ue-OneShotUL-TimingAdj-r17        ENUMERATED {supported}          OPTIONAL,
    -- R1 25-2: Repetitions for PUCCH format 0, and 2 over multiple slots with K = 2, 4, 8
    pucch-Repetition-F0-2-r17         ENUMERATED {supported}          OPTIONAL,
    -- R1 25-11a: 4-bits subband CQI for NTN and unlicensed
    cqi-4-BitsSubbandNTN-SharedSpectrumChAccess-r17 ENUMERATED {supported}          OPTIONAL,
    -- R1 25-16: HARQ-ACK with different priorities multiplexing on a PUCCH/PUSCH
    mux-HARQ-ACK-DiffPriorities-r17   ENUMERATED {supported}          OPTIONAL,
    -- R1 25-20a: Propagation delay compensation based on Rel-15 TA procedure for NTN and unlicensed
    ta-BasedPDC-NTN-SharedSpectrumChAccess-r17   ENUMERATED {supported}          OPTIONAL,
    -- R1 33-2b: DCI-based enabling/disabling ACK/NACK-based feedback for dynamic scheduling for multicast
    ack-NACK-FeedbackForMulticastWithDCI-Enabler-r17 ENUMERATED {supported}          OPTIONAL,
    -- R1 33-2e: Multiple G-RNTIs for group-common PDSCHs
    maxNumberG-RNTI-r17              INTEGER (2..8)                  OPTIONAL,
    -- R1 33-2f: Dynamic multicast with DCI format 4_2
    dynamicMulticastDCI-Format4-2-r17 ENUMERATED {supported}          OPTIONAL,
    -- R1 33-2i: Supported maximal modulation order for multicast PDSCH
    maxModulationOrderForMulticast-r17 CHOICE {
      fr1-r17          ENUMERATED {qam256, qam1024},
      fr2-r17          ENUMERATED {qam64, qam256}
    }
    -- R1 33-3-1: Dynamic Slot-level repetition for group-common PDSCH for TN and licensed
    dynamicSlotRepetitionMulticastTN-NonSharedSpectrumChAccess-r17 ENUMERATED {n8, n16}          OPTIONAL,
    -- R1 33-3-1a: Dynamic Slot-level repetition for group-common PDSCH for NTN and unlicensed
    dynamicSlotRepetitionMulticastNTN-SharedSpectrumChAccess-r17   ENUMERATED {n8, n16}          OPTIONAL,
    -- R1 33-4-1: DCI-based enabling/disabling NACK-only based feedback for dynamic scheduling for multicast
    nack-OnlyFeedbackForMulticastWithDCI-Enabler-r17               ENUMERATED {supported}          OPTIONAL,
    -- R1 33-5-1b: DCI-based enabling/disabling ACK/NACK-based feedback for dynamic scheduling for multicast
    ack-NACK-FeedbackForSPS-MulticastWithDCI-Enabler-r17           ENUMERATED {supported}          OPTIONAL,
    -- R1 33-5-1h: Multiple G-CS-RNTIs for SPS group-common PDSCHs
    maxNumberG-CS-RNTI-r17                                         INTEGER (2..8)                  OPTIONAL,
    -- R1 33-10: Support group-common PDSCH RE-level rate matching for multicast
    re-LevelRateMatchingForMulticast-r17                           ENUMERATED {supported}          OPTIONAL,
    -- R1 36-1a: Support of 1024QAM for PDSCH with maximum 2 MIMO layers for FR1
    pdsch-1024QAM-2MIMO-FR1-r17                                    ENUMERATED {supported}          OPTIONAL,
    -- R4 14-3 PRS measurement without MG
    prs-MeasurementWithoutMG-r17                                    ENUMERATED {cpLength, quarterSymbol, halfSymbol, halfSlot} OPTIONAL,
    -- R4 25-7: The number of target NGSO satellites the UE can monitor per carrier
    maxNumber-NGSO-SatellitesPerCarrier-r17                       INTEGER (3..4)                  OPTIONAL,
    -- R1 27-3-3 DL PRS Processing Capability outside MG - buffering capability
    prs-ProcessingCapabilityOutsideMGinPPW-r17 SEQUENCE (SIZE(1..3)) OF PRS-ProcessingCapabilityOutsideMGinPPWperType-r17 OPTIONAL,
    -- R1 27-15a: Positioning SRS transmission in RRC_INACTIVE state for initial UL BWP with semi-persistent SRS
    srs-SemiPersistent-PosResourcesRRC-Inactive-r17 SEQUENCE {
      maxNumOfSemiPersistentSRSposResources-r17   ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
      maxNumOfSemiPersistentSRSposResourcesPerSlot-r17 ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
    }
    -- R2: UE support of CBW for 120kHz SCS
    channelBWs-DL-SCS-120kHz-FR2-2-r17 BIT STRING (SIZE (8))          OPTIONAL,
    channelBWs-UL-SCS-120kHz-FR2-2-r17 BIT STRING (SIZE (8))          OPTIONAL,
  ]],

```

```

[[
-- R1 30-4a: DM-RS bundling for PUSCH repetition type A
dmrs-BundlingPUSCH-RepTypeA-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 30-4b: DM-RS bundling for PUSCH repetition type B
dmrs-BundlingPUSCH-RepTypeB-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 30-4c: DM-RS bundling for TB processing over multi-slot PUSCH
dmrs-BundlingPUSCH-multiSlot-r17         ENUMERATED {supported}          OPTIONAL,
-- R1 30-4d: DMRS bundling for PUCCH repetitions
dmrs-BundlingPUCCH-Rep-r17               ENUMERATED {supported}          OPTIONAL,
-- R1 30-4e: Enhanced inter-slot frequency hopping with inter-slot bundling for PUSCH
interSlotFreqHopInterSlotBundlingPUSCH-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 30-4f: Enhanced inter-slot frequency hopping for PUCCH repetitions with DMRS bundling
interSlotFreqHopPUCCH-r17               ENUMERATED {supported}          OPTIONAL,
-- R1 30-4g: Restart DM-RS bundling
dmrs-BundlingRestart-r17                 ENUMERATED {supported}          OPTIONAL,
-- R1 30-4h: DM-RS bundling for non-back-to-back transmission
dmrs-BundlingNonBackToBackTX-r17         ENUMERATED {supported}          OPTIONAL,
]],
[[
-- R1 33-5-1e: Dynamic Slot-level repetition for SPS group-common PDSCH for multicast
maxDynamicSlotRepetitionForSPS-Multicast-r17  ENUMERATED {n8, n16}          OPTIONAL,
-- R1 33-5-1g: DCI-based enabling/disabling NACK-only based feedback for SPS group-common PDSCH for multicast
nack-OnlyFeedbackForSPS-MulticastWithDCI-Enabler-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 33-5-1i: Multicast SPS scheduling with DCI format 4_2
sps-MulticastDCI-Format4-2-r17            ENUMERATED {supported}          OPTIONAL,
-- R1 33-5-2: Multiple SPS group-common PDSCH configuration on PCell
sps-MulticastMultiConfig-r17              INTEGER (1..8)          OPTIONAL,
-- R1 33-6-1: DL priority indication for multicast in DCI
priorityIndicatorInDCI-Multicast-r17       ENUMERATED {supported}          OPTIONAL,
-- R1 33-6-1a: DL priority configuration for SPS multicast
priorityIndicatorInDCI-SPS-Multicast-r17    ENUMERATED {supported}          OPTIONAL,
-- R1 33-6-2: Two HARQ-ACK codebooks simultaneously constructed for supporting HARQ-ACK codebooks with different priorities
-- for unicast and multicast at a UE
twoHARQ-ACK-CodebookForUnicastAndMulticast-r17  ENUMERATED {supported}          OPTIONAL,
-- R1 33-6-3: More than one PUCCH for HARQ-ACK transmission for multicast or for unicast and multicast within a slot
multiPUCCH-HARQ-ACK-ForMulticastUnicast-r17    ENUMERATED {supported}          OPTIONAL,
-- R1 33-9: Supporting unicast PDCCH to release SPS group-common PDSCH
releaseSPS-MulticastWithCS-RNTI-r17        ENUMERATED {supported}          OPTIONAL,
]],
[[
-- R1 41-3-1a UE autonomous TA adjustment when cell-reselection happens
posUE-TA-AutoAdjustment-r18               ENUMERATED {supported}          OPTIONAL,
-- R1 41-3-1: SRS for positioning configuration in multiple cells for UEs in RRC_INACTIVE state for initial UL BWP
posSRS-ValidityAreaRRC-InactiveInitialUL-BWP-r18  ENUMERATED {supported}          OPTIONAL,
-- R1 41-3-2: SRS for positioning configuration in multiple cells for UEs in RRC_INACTIVE state for configured outside
-- initial UL BWP
posSRS-ValidityAreaRRC-InactiveOutsideInitialUL-BWP-r18  ENUMERATED {supported}          OPTIONAL,
-- R1 41-5-1: PRS measurement with Rx frequency hopping within a MG and measurement reporting RRC_CONNECTED for RedCap UEs
dl-PRS-MeasurementWithRxFH-RRC-ConnectedForRedCap-r18  DL-PRS-MeasurementWithRxFH-RRC-Connected-r18  OPTIONAL,
-- R1 41-5-2: Support of positioning SRS with Tx frequency hopping in RRC_CONNECTED for RedCap UEs
posSRS-TxFH-RRC-ConnectedForRedCap-r18        PosSRS-TxFrequencyHoppingRRC-Connected-r18  OPTIONAL,
-- R1 41-5-2a: Support of positioning SRS with Tx frequency hopping in RRC_INACTIVE for RedCap UEs
posSRS-TxFH-RRC-InactiveForRedCap-r18        PosSRS-TxFrequencyHoppingRRC-Inactive-r18  OPTIONAL,
-- R1 41-4-8: Support of Positioning SRS bandwidth aggregation in RRC_INACTIVE

```


posSRS-BWA-RRC-Inactive-r18	PosSRS-BWA-RRC-Inactive-r18	OPTIONAL,
-- R1 41-4-6a support a Rel-17 single DCI scheduling positioning SRS resource sets across the linked carriers		
-- for SRS bandwidth aggregation in RRC_CONNECTED state		
posJointTriggerBySingleDCI-RRC-Connected-r18	ENUMERATED {supported}	OPTIONAL,
-- R1 41-5-1a PRS measurement with Rx frequency hopping in RRC_INACTIVE for RedCap UEs		
dl-PRS-MeasurementWithRxFH-RRC-InactiveforRedCap-r18	ENUMERATED {supported}	OPTIONAL,
-- R1 41-5-1b PRS measurement with Rx frequency hopping in RRC_IDLE for RedCap UEs		
dl-PRS-MeasurementWithRxFH-RRC-IdleforRedCap-r18	ENUMERATED {supported}	OPTIONAL,
-- R1 42-1: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for periodic CSI reporting		
spatialAdaptation-CSI-Feedback-r18	SEQUENCE {	
csiFeedbackType-r18	ENUMERATED {sdType1, sdType2, both},	
maxNumberLmax-r18	INTEGER (2..4),	
maxNumberCSI-ResourcePerCC-r18	SEQUENCE {	
sdType1-Resource-r18	INTEGER (1..32),	
sdType2-Resource-r18	INTEGER (1..32)	
},		
maxNumberTotalCSI-ResourcePerCC-r18	SEQUENCE {	
sdType1-Resource-r18	ENUMERATED {n8, n16, n24, n32, n64, n128},	
sdType2-Resource-r18	ENUMERATED {n8, n16, n24, n32, n64, n128}	
},		
totalNumberCSI-Reporting-r18	INTEGER (2..4)	
}		OPTIONAL,
-- R1 42-1a: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for periodic CSI reporting on PUSCH		
spatialAdaptation-CSI-FeedbackPUSCH-r18	SEQUENCE {	
csiFeedbackType-r18	ENUMERATED {sdType1, sdType2, both},	
maxNumberLmax-r18	INTEGER (2..8),	
subReportCSI-r18	INTEGER (2..4),	
maxNumberCSI-ResourcePerCC-r18	INTEGER (1..32),	
maxNumberTotalCSI-ResourcePerCC-r18	ENUMERATED {n8, n16, n24, n32, n64, n128},	
totalNumberCSI-Reporting-r18	INTEGER (2..12)	
}		OPTIONAL,
-- R1 42-1b: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for aperiodic CSI reporting		
spatialAdaptation-CSI-FeedbackAperiodic-r18	SEQUENCE {	
csiFeedbackType-r18	ENUMERATED {sdType1, sdType2, both},	
maxNumberLmax-r18	INTEGER (2..8),	
subReportCSI-r18	INTEGER (2..4),	
maxNumberCSI-ResourcePerCC-r18	SEQUENCE {	
sdType1-Resource-r18	INTEGER (1..32),	
sdType2-Resource-r18	INTEGER (1..32)	
},		
maxNumberTotalCSI-ResourcePerCC-r18	SEQUENCE {	
sdType1-Resource-r18	ENUMERATED {n8, n16, n24, n32, n64, n128},	
sdType2-Resource-r18	ENUMERATED {n8, n16, n24, n32, n64, n128}	
},		
totalNumberCSI-Reporting-r18	INTEGER (2..12)	
}		OPTIONAL,
-- R1 42-1c: Spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s) for semi-persistent CSI reporting on PUCCH		
spatialAdaptation-CSI-FeedbackPUCCH-r18	SEQUENCE {	
csiFeedbackType-r18	ENUMERATED {sdType1, sdType2, both},	
maxNumberLmax-r18	INTEGER (2..4),	
subReportCSI-r18	INTEGER (2..4),	
maxNumberCSI-ResourcePerCC-r18	INTEGER (1..32),	


```

    maxNumberTotalCSI-ResourcePerCC-r18
    totalNumberCSI-Reporting-r18
}
-- R1 42-2: Power domain adaptation with CSI feedback based on CSI report sub-configuration(s) for periodic CSI reporting
powerAdaptation-CSI-Feedback-r18
    maxNumberLmax-r18
    maxNumberCSI-ResourcePerCC-r18
    maxNumberTotalCSI-ResourcePerCC-r18
    totalNumberCSI-Reporting-r18
}
-- R1 42-2a: Power domain adaptation with CSI feedback based on CSI report sub-configuration(s) for semi-persistent CSI
-- reporting on PUSCH
powerAdaptation-CSI-FeedbackPUSCH-r18
    maxNumberLmax-r18
    subReportCSI-r18
    maxNumberCSI-ResourcePerCC-r18
    maxNumberTotalCSI-ResourcePerCC-r18
    totalNumberCSI-Reporting-r18
}
-- R1 42-2b: Power domain adaptation with CSI feedback based on CSI report sub-configuration(s) for aperiodic CSI reporting
powerAdaptation-CSI-FeedbackAperiodic-r18
    maxNumberLmax-r18
    subReportCSI-r18
    maxNumberCSI-ResourcePerCC-r18
    maxNumberTotalCSI-ResourcePerCC-r18
    totalNumberCSI-Reporting-r18
}
-- R1 42-2c: Power domain adaptation with CSI feedback based on CSI report sub-configuration(s) for semi-persistent CSI
-- reporting on PUCCH
powerAdaptation-CSI-FeedbackPUCCH-r18
    maxNumberLmax-r18
    subReportCSI-r18
    maxNumberCSI-ResourcePerCC-r18
    maxNumberTotalCSI-ResourcePerCC-r18
    totalNumberCSI-Reporting-r18
}
-- R1 42-4: Cell DTX and/or DRX operation based on RRC configuration
nes-CellDTX-DRX-r18
-- R1 42-5: Cell DTX/DRX operation triggered by DCI format 2_9
nes-CellDTX-DRX-DCI2-9-r18
-- R1 42-7: Mixed codebook combination for spatial domain adaptation with CSI feedback based on CSI report sub-configuration(s),
-- each containing one port subset configuration
mixCodeBookSpatialAdaptation-r18
-- R1 42-8: the number of CSI report(s) for which the UE can measure and process reference signals simultaneously in a CC of the
-- band for which this capability is provided.
simultaneousCSI-SubReportsPerCC-r18
-- R1 44-2: NTN DMRS bundling enhancement for PUSCH in NGSO scenarios
ntn-DMRS-BundlingNGSO-r18
-- R1 45-3: Beam indication with joint DL/UL LTM TCI states
ltm-BeamIndicationJointTCI-r18
    maxNumberJointTCI-PerCell-r18
    qcl-Resource-r18
    maxNumberJointTCI-AcrossCells-r18
    maxNumberCells-r18

```

ENUMERATED {n8, n16, n24, n32, n64, n128},
INTEGER (2..4) OPTIONAL,
SEQUENCE {
INTEGER (2..4),
INTEGER (1..32),
ENUMERATED {n8, n16, n24, n32, n64, n128},
INTEGER (2..4) OPTIONAL,
SEQUENCE {
INTEGER (2..8),
INTEGER (2..4),
INTEGER (1..32),
ENUMERATED {n8, n16, n24, n32, n64, n128},
INTEGER (2..12) OPTIONAL,
SEQUENCE {
INTEGER (2..8),
INTEGER (2..4),
INTEGER (1..32),
ENUMERATED {n8, n16, n24, n32, n64, n128},
INTEGER (2..12) OPTIONAL,
SEQUENCE {
INTEGER (2..4),
INTEGER (2..4),
INTEGER (1..32),
ENUMERATED {n8, n16, n24, n32, n64, n128},
INTEGER (2..4) OPTIONAL,
ENUMERATED {cellDTXonly, cellDRXonly, both} OPTIONAL,
ENUMERATED {supported} OPTIONAL,
ENUMERATED {supported} OPTIONAL,
INTEGER (1..8) OPTIONAL,
ENUMERATED {n4, n8, n16, n32} OPTIONAL,
SEQUENCE {
ENUMERATED {n8, n12, n16, n24, n32, n48, n64, n128},
ENUMERATED {ssb, trs, both},
INTEGER (1..128),
INTEGER (1..8)

```

}
dummy-ltm-MAC-CE-JointTCI-r18
    qcl-Resource-r18
    maxNumberJointTCI-PerCell-r18
    maxNumberJointTCI-AcrossCells-r18
}
-- R1 45-4: Beam indication with separate DL/UL LTM TCI states
ltm-BeamIndicationSeparateTCI-r18
    maxNumberDL-TCI-PerCell-r18
    maxNumberUL-TCI-PerCell-r18
    qcl-Resource-r18
    maxNumberDL-TCI-AcrossCells-r18
    maxNumberUL-TCI-AcrossCells-r18
    maxNumberCells-r18
}
dummy-ltm-MAC-CE-SeparateTCI-r18
    qcl-Resource-r18
    maxNumberDL-TCI-PerCell-r18
    maxNumberUL-TCI-PerCell-r18
    maxNumberDL-TCI-AcrossCells-r18
    maxNumberUL-TCI-AcrossCells-r18
}
-- R1 45-5: RACH-based early TA acquisition
rach-EarlyTA-Measurement-r18
-- R1 45-6: UE-based TA measurement
ue-TA-Measurement-r18
-- R1 45-7: TA indication in cell switch command
ta-IndicationCellSwitch-r18
-- R1 49-8: Triggered HARQ-ACK codebook re-transmission for DCI format 1_3
triggeredHARQ-CodebookRetxDCI-1-3-r18
    minHARQ-Retx-Offset-r18
    maxHARQ-Retx-Offset-r18
}
-- R1 49-12: Unified TCI with joint DL/UL TCI update by DCI format 1_3 for intra-cell and inter-cell beam management with more than
-- one MAC-CE activated joint TCI state per CC
unifiedJointTCI-MultiMAC-CE-DCI-1-3-r18
    minBeamApplicationTime-r18
        fr1-r18
            scs-15kHz-r18
            scs-30kHz-r18
            scs-60kHz-r18
        },
        fr2-r18
            scs-60kHz-r18
            scs-120kHz-r18
        },
    },
    maxActivatedTCI-PerCC-r18
}
-- R1 49-12a: Unified TCI with separate DL/UL TCI update by DCI format 1_3 for intra-cell beam management with more than
-- one MAC-CE activated separate TCI state per CC
unifiedSeparateTCI-MultiMAC-CE-IntraCell-r18

```

SEQUENCE {
 ENUMERATED {ssb, trs, both},
 INTEGER (1..16),
 ENUMERATED {n1, n2, n3, n4, n8, n16, n32}

SEQUENCE {
 ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64, n128},
 ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64},
 ENUMERATED {ssb, trs, both},
 INTEGER (1..128),
 INTEGER (1..64),
 INTEGER (1..8)

SEQUENCE {
 ENUMERATED {ssb, trs, both},
 INTEGER (1..8),
 INTEGER (1..8),
 ENUMERATED {n1, n2, n4, n8, n16},
 ENUMERATED {n1, n2, n4, n8, n16}

INTEGER (1..8)

INTEGER (1..8)

ENUMERATED {supported}

SEQUENCE {
 ENUMERATED {n-7, n-5, n-3, n-1, n1},
 ENUMERATED {n4, n6, n8, n10, n12, n14, n16, n18, n20, n22, n24}

OPTIONAL,

OPTIONAL

CHOICE {
 SEQUENCE {
 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70}
 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70}
 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70}

SEQUENCE {
 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70, sym84, sym98, sym112, sym224, sym336}
 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70, sym84, sym98, sym112, sym224, sym336}

INTEGER (2..8)

```

minBeamApplicationTime-r18      CHOICE {
  fr1-r18      SEQUENCE {
    scs-15kHz-r18  ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
                                sym84, sym98, sym112, sym224, sym336}      OPTIONAL,
    scs-30kHz-r18  ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
                                sym84, sym98, sym112, sym224, sym336}      OPTIONAL,
    scs-60kHz-r18  ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
                                sym84, sym98, sym112, sym224, sym336}      OPTIONAL,
  },
  fr2-r18      SEQUENCE {
    scs-60kHz-r18  ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
                                sym84, sym98, sym112, sym224, sym336}      OPTIONAL,
    scs-120kHz-r18 ENUMERATED {sym1, sym2, sym4, sym7, sym14, sym28, sym42, sym56, sym70,
                                sym84, sym98, sym112, sym224, sym336}      OPTIONAL,
  }
},
maxActivatedDL-TCI-PerCC-r18    INTEGER (2..8)      OPTIONAL,
maxActivatedUL-TCI-PerCC-r18    INTEGER (2..8)      OPTIONAL,
}
-- R1 50-1: Multi-PUSCHs for Configured Grant
multiPUSCH-CG-r18              ENUMERATED {n16, n32}      OPTIONAL,
-- R1 50-1a: Multiple active multi-PUSCHs configured grant configurations for a BWP of a serving cell
multiPUSCH-ActiveConfiguredGrant-r18 SEQUENCE {
  maxNumberConfigsPerBWP      ENUMERATED {n1, n2, n4, n8, n12},
  maxNumberConfigsAllCC-FR1    INTEGER (2..32),
  maxNumberConfigsAllCC-FR2    INTEGER (2..32)
}
-- R1 50-1b: Joint release in a DCI for two or more configured grant Type 2 configurations, including multi-PUSCH CG
-- configuration(s), for a given BWP of a serving cell
jointReleaseDCI-r18            ENUMERATED {supported}      OPTIONAL,
-- R1 50-2: UCI indication of unused CG-PUSCH transmission occasions
cg-PUSCH-UTO-UCI-Ind-r18      ENUMERATED {supported}      OPTIONAL,
-- R1 50-3: PDCCH monitoring resumption after UL NACK
pdcch-MonitoringResumptionAfterUL-NACK-r18 ENUMERATED {supported}      OPTIONAL,

-- R1 51-1: Support for 3 MHz symmetric channel bandwidth in DL and UL
support3MHz-ChannelBW-Symmetric-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 51-1a: Support for 3 MHz channel bandwidth in uplink with larger than 3 MHz channel BW in DL
support3MHz-ChannelBW-Asymmetric-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 51-2a: support 12 PRB CORESET0
support12PRB-CORESET0-r18          ENUMERATED {supported}      OPTIONAL,

-- R1 52-1: Reception of NR PDCCH candidates overlapping with LTE CRS RES
nr-PDCCH-OverlapLTE-CRS-RE-r18      SEQUENCE {
  overlapInRE-r18      ENUMERATED {oneSymbolNoOverlap, someOrAllSymOverlap},
  overlapInSymbol-r18  ENUMERATED {symbol2, symbol1And2}
}
-- R1 52-1a: Reception of NR PDCCH candidates overlapping with LTE CRS RES with multiple non-overlapping CRS rate matching patterns
nr-PDCCH-OverlapLTE-CRS-RE-MultiPatterns-r18  ENUMERATED {supported}      OPTIONAL,
-- R1 52-1b: NR PDCCH reception that overlaps with LTE CRS within a single span of 3 consecutive OFDM symbols that is within the
-- first 4 OFDM symbols in a slot
nr-PDCCH-OverlapLTE-CRS-RE-Span-3-4-r18      ENUMERATED {supported}      OPTIONAL,
-- R1 52-2: Two LTE-CRS overlapping rate matching patterns within NR 15 kHz carrier overlapping with LTE carrier (regardless of
-- support or configuration of multi-TRP)

```

```

twoRateMatchingEUTRA-CRS-patterns-3-4-r18
    maxNumberPatterns-r18
    maxNumberNon-OverlapPatterns-r18
}
-- R1 52-2a: Two LTE-CRS overlapping rate matching patterns with two different values of coresetPoolIndex within NR 15 kHz carrier
-- overlapping with LTE carrier
overlapRateMatchingEUTRA-CRS-Patterns-3-4-Diff-CS-Pool-r18
SEQUENCE {
    INTEGER (2..6),
    INTEGER (1..3)
}
OPTIONAL,

-- R1 53-3: Support RLM/BM/BFD measurements based on NCD-SSB within active BWP
ncd-SSB-BWP-Wor-r18
ENUMERATED {supported}
OPTIONAL,
-- R1 53-4: Support Support RLM/BM/BFD measurements based on CSI-RS when CD-SSB is outside active BWP
rlm-BM-BFD-CSI-RS-OutsideActiveBWP-r18
ENUMERATED {supported}
OPTIONAL,
-- R1 54-1: PRACH coverage enhancements
prach-CoverageEnh-r18
ENUMERATED {supported}
OPTIONAL,
-- R1 54-1a: PRACH repetitions with less than N symbols gap
prach-Repetition-r18
ENUMERATED {supported}
OPTIONAL,
-- R1 54-3: Dynamic waveform switching
dynamicWaveformSwitch-r18
ENUMERATED {supported}
OPTIONAL,
-- R1 54-3a: PHR enhancement for dynamic waveform switching
dynamicWaveformSwitchPHR-r18
ENUMERATED {supported}
OPTIONAL,
-- R1 54-3b: Dynamic waveform switching for intra-band UL CA
dynamicWaveformSwitchIntraCA-r18
INTEGER (2..8)
OPTIONAL,

-- R1 55-3: Multiple PUSCHs scheduling by single DCI for non-consecutive slots in FR1
multiPUSCH-SingleDCI-NonConsSlots-r18
ENUMERATED {supported}
OPTIONAL,
-- R1 55-2d: single-symbol DL-PRS used in RTT-based Propagation delay compensation
pdc-maxNumberPRS-ResourceProcessedPerSlot-r18
SEQUENCE {
    fr1-r18 SEQUENCE {
        scs-15kHz-r18
        scs-30kHz-r18
        scs-60kHz-r18
    },
    fr2-r18 SEQUENCE {
        scs-60kHz-r18
        scs-120kHz-r18
    }
}
OPTIONAL,
-- R1 57-2: Intra-slot TDM-ed unicast PDSCH and group-common PDSCH for multicast in RRC_INACTIVE state
intraSlot-PDSCH-MulticastInactive-r18
BOOLEAN
OPTIONAL,
-- R1 57-1: Dynamic scheduling for multicast in RRC_INACTIVE state
multicastInactive-r18
ENUMERATED {supported}
OPTIONAL,
thresholdBasedMulticastResume-r18
ENUMERATED {supported}
OPTIONAL,

-- R4 27-2: LowerMSD for inter-band NR CA and EN-DC
lowerMSD-r18
SEQUENCE (SIZE (1..maxLowerMSD-r18)) OF LowerMSD-r18
OPTIONAL,
lowerMSD-ENDC-r18
SEQUENCE (SIZE (1..maxLowerMSD-r18)) OF LowerMSD-r18
OPTIONAL,
-- R4 28-1: Enhanced channel raster
enhancedChannelRaster-r18
ENUMERATED {supported}
OPTIONAL,
-- R4 30-2: Fast beam sweeping for layer-1 measurement when the UE is in multi-Rx operation
fastBeamSweepingMultiRx-r18
ENUMERATED {n2,n4,n6}
OPTIONAL,

-- R4 31-2 Beam sweeping factor reduction for FR2 unknown SCell activation
beamSweepingFactorReduction-r18
SEQUENCE {

```

reduceForCellDetection	ENUMERATED {n1, n2, n4, n6},	
reduceForSSB-L1-RSRP-Meas	INTEGER (0..7)	
}		OPTIONAL,
-- R4 34-1: Support of NR FR2 HST with simultaneous DL reception with two different QCL TypeD RSs		
simultaneousReceptionTwoQCL-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 34-2: Enhanced FR2 HST RRM requirements for intra-band CA and inter-frequency measurements in connected mode		
measEnhCAInterFreqFR2-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 34-4: Support of enhanced MAC CE for TCI state switch indication for FR2 HST		
tcI-StateSwitchInd-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 35-2: the requirements defined for ATG UE with antenna array or omni-direction antenna requirements.		
antennaArrayType-r18	ENUMERATED {supported}	OPTIONAL,
locationBasedCondHandoverATG-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 35-3: rated maximum output power value range from 23dBm to 40dBm with 1dB as granularity at maximum modulation order and full		
-- PRB configurations.		
maxOutputPowerATG-r18	INTEGER (1..18)	OPTIONAL,
-- R4 39-6: Fast processing of LTM candidate cell RRC configuration		
ltm-FastProcessingConfig-r18	SEQUENCE {	
maxNumberStoredConfigCells-r18	ENUMERATED {n2, n3, n4, n5, n6, n7, n8, n9, n10, n11, n12, n16},	
maxNumberConfigs-r18	INTEGER (1..4)	
}		OPTIONAL,
-- R4 39-8: Measurement validation based on EMR measurement during connection setup/resume		
measValidationReportEMR-r18	ENUMERATED {supported}	OPTIONAL,
-- R4 39-9: Measurement validation based on reselection measurement during connection setup/resume		
measValidationReportReselectionMeasurements-r18	ENUMERATED {supported}	OPTIONAL,
eventA4BasedCondHandoverNES-r18	ENUMERATED {supported}	OPTIONAL,
nesBasedCondHandoverWithDCI-r18	ENUMERATED {supported}	OPTIONAL,
rach-LessHandoverCG-r18	ENUMERATED {supported}	OPTIONAL,
rach-LessHandoverDG-r18	ENUMERATED {supported}	OPTIONAL,
locationBasedCondHandoverEMC-r18	ENUMERATED {supported}	OPTIONAL,
mt-CG-SDT-r18	ENUMERATED {supported}	OPTIONAL,
posSRS-PreconfigureRRC-InactiveInitialUL-BWP-r18	ENUMERATED {supported}	OPTIONAL,
posSRS-PreconfigureRRC-InactiveOutsideInitialUL-BWP-r18	ENUMERATED {supported}	OPTIONAL,
cg-SDT-PeriodicityExt-r18	ENUMERATED {supported}	OPTIONAL,
-- R2: 2Rx XR UEs		
supportOf2RxXR-r18	ENUMERATED {supported}	OPTIONAL,
condHandoverWithCandSCG-change-r18	ENUMERATED {supported}	OPTIONAL,
]],		
[[		
mac-ParametersPerBand-r18	MAC-ParametersPerBand-r18	OPTIONAL,
channelBW-DL-NCR-r18	CHOICE {	
fr1-100mhz	SEQUENCE {	
scs-15kHz	ENUMERATED {supported}	OPTIONAL,
scs-30kHz	ENUMERATED {supported}	OPTIONAL,
scs-60kHz	ENUMERATED {supported}	OPTIONAL,
},		
fr2-200mhz	SEQUENCE {	
scs-60kHz	ENUMERATED {supported}	OPTIONAL,
scs-120kHz	ENUMERATED {supported}	OPTIONAL,
}		
}		OPTIONAL,
channelBW-UL-NCR-r18	CHOICE {	
fr1-100mhz	SEQUENCE {	
scs-15kHz	ENUMERATED {supported}	OPTIONAL,

```

        scs-30kHz
        scs-60kHz
    },
    fr2-200mhz
        scs-60kHz
        scs-120kHz
    }
}
ncr-PDSCH-64QAM-FR2-r18
ltm-MCG-IntraFreq-r18
ltm-SCG-IntraFreq-r18
]],
[[
-- R1 45-3a: MAC-CE activated joint LTM TCI states
ltm-MAC-CE-JointTCI-r18
    qcl-Resource-r18
    maxNumberJointTCI-PerCell-r18
    maxNumberJointTCI-AcrossCells-r18
}
-- R1 45-4a: MAC-CE activated DL/UL LTM TCI states
ltm-MAC-CE-SeparateTCI-r18
    qcl-Resource-r18
    maxNumberDL-TCI-PerCell-r18
    maxNumberUL-TCI-PerCell-r18
    maxNumberDL-TCI-AcrossCells-r18
    maxNumberUL-TCI-AcrossCells-r18
}
]],
[[
eventA4BasedCondHandoverATG-r18
]]
}

BandNR-v16c0 ::=
    pusch-RepetitionTypeA-v16c0
    ...
}

BandNR-v17b0 ::=
    mimo-ParametersPerBand-v17b0
    ...
}

LowerMSD-r18 ::=
    aggressorband1-r18
        nr
        eutra
    },
    aggressorband2-r18
    msd-Information-r18
}

MSD-Information-r18 ::=
    msd-Type-r18

```

```

ENUMERATED {supported}
ENUMERATED {supported}

```

```

OPTIONAL,
OPTIONAL

```

```

SEQUENCE {
    ENUMERATED {supported}
    ENUMERATED {supported}
}

```

```

OPTIONAL,
OPTIONAL

```

```

ENUMERATED {supported}
ENUMERATED {supported}
ENUMERATED {supported}

```

```

OPTIONAL,
OPTIONAL,
OPTIONAL,
OPTIONAL

```

```

SEQUENCE {
    ENUMERATED {ssb, trs, both},
    INTEGER (1..16),
    INTEGER (1..32)
}

```

```

OPTIONAL,

```

```

SEQUENCE {
    ENUMERATED {ssb, trs, both},
    INTEGER (1..8),
    INTEGER (1..8),
    INTEGER (1..32),
    INTEGER (1..32)
}

```

```

OPTIONAL

```

```

ENUMERATED {supported}

```

```

OPTIONAL

```

```

SEQUENCE {
    ENUMERATED {supported}
}

```

```

OPTIONAL,

```

```

SEQUENCE {
    MIMO-ParametersPerBand-v17b0
}

```

```

OPTIONAL,

```

```

SEQUENCE {
    CHOICE {
        FreqBandIndicatorNR,
        FreqBandIndicatorEUTRA
    },
    FreqBandIndicatorNR
    SEQUENCE (SIZE (1..maxLowerMSDInfo-r18)) OF MSD-Information-r18
}

```

```

OPTIONAL,

```

```

SEQUENCE {
    ENUMERATED {harmonic, harmonicMixing, crossBandIsolation, imd2, imd3, imd4, imd5, all, spare8, spare7,
}

```

```

    spare6, spare5, spare4, spare3, spare2, spare1},
    msd-PowerClass-r18      ENUMERATED {pc1dot5, pc2, pc3},
    msd-Class-r18           ENUMERATED {classI, classII, classIII, classIV, classV, classVI, classVII, classVIII }
}

-- TAG-RF-PARAMETERS-STOP
-- ASN1STOP

```

<i>RF-Parameters</i> field descriptions
<i>appliedFreqBandListFilter</i> In this field the UE mirrors the <i>FreqBandList</i> that the NW provided in the capability enquiry, if any, as described in clause 5.6.1.4. The UE filtered the band combinations in the <i>supportedBandCombinationList</i> in accordance with this <i>appliedFreqBandListFilter</i> . The UE does not include this field if the UE capability is requested by E-UTRAN and the network request includes the field <i>eutra-nr-only</i> [10].
<i>dummy1, dummy2, dummy-ltm-MAC-CE-JointTCI-r18, dummy-ltm-MAC-CE-SeparateTCI-r18</i> The fields are not used in the specification and the network ignores the received values.
<i>supportedBandCombinationList</i> A list of band combinations that the UE supports for NR (and NR-DC, if requested). The <i>FeatureSetCombinationId</i> :s in this list refer to the <i>FeatureSetCombination</i> entries in the <i>featureSetCombinations</i> list in the <i>UE-NR-Capability</i> IE. The UE does not include this field if the UE capability is requested by E-UTRAN and the network request includes the field <i>eutra-nr-only</i> [10].
<i>supportedBandCombinationListSidelinkEUTRA-NR</i> A list of band combinations that the UE supports for NR sidelink communication only, for joint NR sidelink communication and V2X sidelink communication, or for V2X sidelink communication only. The UE does not include this field if the UE capability is requested by E-UTRAN (see TS 36.331[10]) and the network request includes the field <i>eutra-nr-only</i> .
<i>supportedBandCombinationListSL-NonRelayDiscovery</i> A list of band combinations that the UE supports for NR sidelink non-relay discovery. The encoding is defined in PC5 <i>BandCombinationListSidelinkNR-r16</i> .
<i>supportedBandCombinationListSL-RelayDiscovery</i> A list of band combinations that the UE supports for NR sidelink relay discovery. The encoding is defined in PC5 <i>BandCombinationListSidelinkNR-r16</i> .
<i>supportedBandCombinationListSL-U2U-DiscoveryExt</i> This field indicates the band parameter in <i>BandCombinationListSL-Discovery-r17</i> that the UE supports for NR U2U sidelink relay discovery in a band included in <i>supportedBandCombinationListSL-U2U-RelayDiscovery</i> .
<i>supportedBandCombinationListSL-U2U-RelayDiscovery</i> A list of band combinations that the UE supports for NR U2U sidelink relay discovery. The encoding is defined in PC5 <i>BandCombinationListSidelinkNR-r16</i> .
<i>supportedBandCombinationList-UplinkTxSwitch</i> A list of band combinations that the UE supports dynamic uplink Tx switching for NR UL CA and SUL. The <i>FeatureSetCombinationId</i> :s in this list refer to the <i>FeatureSetCombination</i> entries in the <i>featureSetCombinations</i> list in the <i>UE-NR-Capability</i> IE. The UE does not include this field if the UE capability is requested by E-UTRAN and the network request includes the field <i>eutra-nr-only</i> [10].
<i>supportedBandListNR</i> A list of NR bands supported by the UE. If <i>supportedBandListNR-v16c0</i> is included, the UE shall include the same number of entries, and listed in the same order, as in <i>supportedBandListNR</i> (without suffix).

– *RF-ParametersMRDC*

The IE *RF-ParametersMRDC* is used to convey RF related capabilities for MR-DC.

RF-ParametersMRDC information element

```
-- ASN1START
-- TAG-RF-PARAMETERSMRDC-START
```

```
RF-ParametersMRDC ::=
  supportedBandCombinationList      SEQUENCE {
    appliedFreqBandListFilter      BandCombinationList      OPTIONAL,
                                   FreqBandList              OPTIONAL,
    ...,
    [[
      srs-SwitchingTimeRequested    ENUMERATED {true}        OPTIONAL,
      supportedBandCombinationList-v1540 BandCombinationList-v1540  OPTIONAL
    ]],
    [[
      supportedBandCombinationList-v1550 BandCombinationList-v1550  OPTIONAL
    ]],
    [[
      supportedBandCombinationList-v1560 BandCombinationList-v1560  OPTIONAL,
      supportedBandCombinationListNEDC-Only BandCombinationList      OPTIONAL
    ]],
    [[
      supportedBandCombinationList-v1570 BandCombinationList-v1570  OPTIONAL
    ]],
    [[
      supportedBandCombinationList-v1580 BandCombinationList-v1580  OPTIONAL
    ]],
    [[
      supportedBandCombinationList-v1590 BandCombinationList-v1590  OPTIONAL
    ]],
    [[
      supportedBandCombinationListNEDC-Only-v15a0 SEQUENCE {
        supportedBandCombinationList-v1540 BandCombinationList-v1540  OPTIONAL,
        supportedBandCombinationList-v1560 BandCombinationList-v1560  OPTIONAL,
        supportedBandCombinationList-v1570 BandCombinationList-v1570  OPTIONAL,
        supportedBandCombinationList-v1580 BandCombinationList-v1580  OPTIONAL,
        supportedBandCombinationList-v1590 BandCombinationList-v1590  OPTIONAL
      }
    ]],
    [[
      supportedBandCombinationList-v1610 BandCombinationList-v1610  OPTIONAL,
      supportedBandCombinationListNEDC-Only-v1610 BandCombinationList-v1610  OPTIONAL,
      supportedBandCombinationList-UplinkTxSwitch-r16 BandCombinationList-UplinkTxSwitch-r16  OPTIONAL
    ]],
    [[
      supportedBandCombinationList-v1630 BandCombinationList-v1630  OPTIONAL,
      supportedBandCombinationListNEDC-Only-v1630 BandCombinationList-v1630  OPTIONAL,
      supportedBandCombinationList-UplinkTxSwitch-v1630 BandCombinationList-UplinkTxSwitch-v1630  OPTIONAL
    ]],
    [[
      supportedBandCombinationList-v1640 BandCombinationList-v1640  OPTIONAL,
      supportedBandCombinationListNEDC-Only-v1640 BandCombinationList-v1640  OPTIONAL,
      supportedBandCombinationList-UplinkTxSwitch-v1640 BandCombinationList-UplinkTxSwitch-v1640  OPTIONAL
    ]],
    [[
```


supportedBandCombinationList-UplinkTxSwitch-v1670]], [[	BandCombinationList-UplinkTxSwitch-v1670	OPTIONAL
supportedBandCombinationList-v1700	BandCombinationList-v1700	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1700]], [[	BandCombinationList-UplinkTxSwitch-v1700	OPTIONAL
supportedBandCombinationList-v1720	BandCombinationList-v1720	OPTIONAL,
supportedBandCombinationListNEDC-Only-v1720	SEQUENCE {	
supportedBandCombinationList-v1700	BandCombinationList-v1700	OPTIONAL,
supportedBandCombinationList-v1720	BandCombinationList-v1720	OPTIONAL,
}		OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1720]], [[	BandCombinationList-UplinkTxSwitch-v1720	OPTIONAL
supportedBandCombinationList-v1730	BandCombinationList-v1730	OPTIONAL,
supportedBandCombinationListNEDC-Only-v1730	BandCombinationList-v1730	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1730]], [[	BandCombinationList-UplinkTxSwitch-v1730	OPTIONAL
supportedBandCombinationList-v1740	BandCombinationList-v1740	OPTIONAL,
supportedBandCombinationListNEDC-Only-v1740	BandCombinationList-v1740	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1740]], [[	BandCombinationList-UplinkTxSwitch-v1740	OPTIONAL
dummy1	BandCombinationList-v1770	OPTIONAL,
dummy2	BandCombinationList-UplinkTxSwitch-v1770	OPTIONAL
]], [[		
supportedBandCombinationList-v1780	BandCombinationList-v1780	OPTIONAL,
supportedBandCombinationListNEDC-Only-v1780	BandCombinationList-v1780	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1780]], [[	BandCombinationList-UplinkTxSwitch-v1780	OPTIONAL
supportedBandCombinationList-v1790	BandCombinationList-v1790	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1790]], [[	BandCombinationList-UplinkTxSwitch-v1790	OPTIONAL
supportedBandCombinationList-v1800	BandCombinationList-v1800	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1800]], [[	BandCombinationList-UplinkTxSwitch-v1800	OPTIONAL
supportedBandCombinationList-v1830	BandCombinationList-v1830	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1830]], [[	BandCombinationList-UplinkTxSwitch-v1830	OPTIONAL
supportedBandCombinationList-v1840	BandCombinationList-v1840	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1840]], [[	BandCombinationList-UplinkTxSwitch-v1840	OPTIONAL
supportedBandCombinationList-v1860	BandCombinationList-v1860	OPTIONAL,
supportedBandCombinationList-UplinkTxSwitch-v1860]]	BandCombinationList-UplinkTxSwitch-v1860	OPTIONAL
}		

```
RF-ParametersMRDC-v15g0 ::=
    supportedBandCombinationList-v15g0
    supportedBandCombinationListNEDC-Only-v15g0
}
SEQUENCE {
    BandCombinationList-v15g0
    BandCombinationList-v15g0
OPTIONAL,
OPTIONAL

RF-ParametersMRDC-v15n0 ::=
    supportedBandCombinationList-v15n0
}
SEQUENCE {
    BandCombinationList-v15n0
OPTIONAL

RF-ParametersMRDC-v16e0 ::=
    supportedBandCombinationList-UplinkTxSwitch-v16e0
    BandCombinationList-UplinkTxSwitch-v16e0
}
SEQUENCE {
    BandCombinationList-UplinkTxSwitch-v16e0
OPTIONAL

-- TAG-RF-PARAMETERSMRDC-STOP
-- ASN1STOP
```

RF-ParametersMRDC field descriptions
appliedFreqBandListFilter In this field the UE mirrors the <i>FreqBandList</i> that the NW provided in the capability enquiry, if any. The UE filtered the band combinations in the <i>supportedBandCombinationList</i> in accordance with this <i>appliedFreqBandListFilter</i> .
dummy1, dummy2 The fields are not used in the specification and the network ignores the received values.
supportedBandCombinationList A list of band combinations that the UE supports for (NG)EN-DC, or both (NG)EN-DC and NE-DC. The <i>FeatureSetCombinationId</i> :s in this list refer to the <i>FeatureSetCombination</i> entries in the <i>featureSetCombinations</i> list in the <i>UE-MRDC-Capability</i> IE.
supportedBandCombinationListNEDC-Only, supportedBandCombinationListNEDC-Only-v1610, supportedBandCombinationListNEDC-Only-v1780 A list of band combinations that the UE supports only for NE-DC. The <i>FeatureSetCombinationId</i> :s in this list refer to the <i>FeatureSetCombination</i> entries in the <i>featureSetCombinations</i> list in the <i>UE-MRDC-Capability</i> IE.
supportedBandCombinationList-UplinkTxSwitch A list of band combinations that the UE supports dynamic UL Tx switching for (NG)EN-DC. The <i>FeatureSetCombinationId</i> :s in this list refer to the <i>FeatureSetCombination</i> entries in the <i>featureSetCombinations</i> list in the <i>UE-MRDC-Capability</i> IE.

– RLC-Parameters

The IE *RLC-Parameters* is used to convey capabilities related to RLC.

RLC-Parameters information element

```
-- ASN1START
-- TAG-RLC-PARAMETERS-START

RLC-Parameters ::= SEQUENCE {
    am-WithShortSN
    um-WithShortSN
    um-WithLongSN
    ...
    ENUMERATED {supported} OPTIONAL,
    ENUMERATED {supported} OPTIONAL,
    ENUMERATED {supported} OPTIONAL,
```

```

[[
  extendedT-PollRetransmit-r16    ENUMERATED {supported} OPTIONAL,
  extendedT-StatusProhibit-r16    ENUMERATED {supported} OPTIONAL
]],
[[
  am-WithLongSN-RedCap-r17        ENUMERATED {supported} OPTIONAL
]],
[[
  am-WithLongSN-NCR-r18          ENUMERATED {supported} OPTIONAL
]]
}

-- TAG-RLC-PARAMETERS-STOP
-- ASN1STOP

```

— *SDAP-Parameters*

The IE *SDAP-Parameters* is used to convey capabilities related to SDAP.

SDAP-Parameters information element

```

-- ASN1START
-- TAG-SDAP-PARAMETERS-START

SDAP-Parameters ::= SEQUENCE {
  as-ReflectiveQoS          ENUMERATED {true}          OPTIONAL,
  ...,
  [[
    sdap-QoS-IAB-r16        ENUMERATED {supported}    OPTIONAL,
    sdapHeaderIAB-r16       ENUMERATED {supported}    OPTIONAL
  ]],
  [[
    sdap-QoS-NCR-r18        ENUMERATED {supported}    OPTIONAL,
    sdap-HeaderNCR-r18      ENUMERATED {supported}    OPTIONAL
  ]]
}

-- TAG-SDAP-PARAMETERS-STOP
-- ASN1STOP

```

— *SharedSpectrumChAccessParamsPerBand*

The IE *SharedSpectrumChAccessParamsPerBand* is used to convey shared channel access related parameters specific for a certain frequency band (not per feature set or band combination).

SharedSpectrumChAccessParamsPerBand information element

```
-- ASN1START
-- TAG-SHAREDSPECTRUMCHACCESSPARAMSPERBAND-START
```

```
SharedSpectrumChAccessParamsPerBand-r16 ::= SEQUENCE {
    -- R1 10-1: UL channel access for dynamic channel access mode
    ul-DynamicChAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-1a: UL channel access for semi-static channel access mode
    ul-Semi-StaticChAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2: SSB-based RRM for dynamic channel access mode
    ssb-RRM-DynamicChAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2a: SSB-based RRM for semi-static channel access mode
    ssb-RRM-Semi-StaticChAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2b: MIB reading on unlicensed cell
    mib-Acquisition-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2c: SSB-based RLM for dynamic channel access mode
    ssb-RLM-DynamicChAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2d: SSB-based RLM for semi-static channel access mode
    ssb-RLM-Semi-StaticChAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2e: SIB1 reception on unlicensed cell
    sib1-Acquisition-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2f: Support monitoring of extended RAR window
    extra-ResponseWindow-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2g: SSB-based BFD/CBD for dynamic channel access mode
    ssb-BFD-CBD-dynamicChannelAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2h: SSB-based BFD/CBD for semi-static channel access mode
    ssb-BFD-CBD-semi-staticChannelAccess-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-2i: CSI-RS-based BFD/CBD for NR-U
    csi-RS-BFD-CBD-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-7: UL channel access for 10 MHz SCell
    ul-ChannelBW-SCell-10mhz-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-10: RSSI and channel occupancy measurement and reporting
    rssi-ChannelOccupancyReporting-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-11: SRS starting position at any OFDM symbol in a slot
    srs-StartAnyOFDM-Symbol-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-20: Support search space set configuration with freqMonitorLocation-r16
    searchSpaceFreqMonitorLocation-r16 INTEGER (1..5) OPTIONAL,
    -- R1 10-20a: Support coreset configuration with rb-Offset
    coreset-RB-Offset-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-23: CGI reading on unlicensed cell for ANR functionality
    cgi-Acquisition-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-25: Enable configured UL transmissions when DCI 2_0 is configured but not detected
    configuredUL-Tx-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-27: Wideband PRACH
    prach-Wideband-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-29: Support available RB set indicator field in DCI 2_0
    dci-AvailableRB-Set-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-30: Support channel occupancy duration indicator field in DCI 2_0
    dci-ChOccupancyDuration-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-8: Type B PDSCH length {3, 5, 6, 8, 9, 10, 11, 12, 13} without DMRS shift due to CRS collision
    typeB-PDSCH-length-r16 ENUMERATED {supported} OPTIONAL,
    -- R1 10-9: Search space set group switching with explicit DCI 2_0 bit field trigger or with implicit PDCCH decoding with DCI 2_0 monitoring
```

```

searchSpaceSwitchWithDCI-r16          ENUMERATED {supported}          OPTIONAL,
-- R1 10-9b: Search space set group switching with implicit PDCCH decoding without DCI 2_0 monitoring
searchSpaceSwitchWithoutDCI-r16       ENUMERATED {supported}          OPTIONAL,
-- R1 10-9d: Support Search space set group switching capability 2
searchSpaceSwitchCapability2-r16      ENUMERATED {supported}          OPTIONAL,
-- R1 10-14: Non-numerical PDSCH to HARQ-ACK timing
non-numericalPDSCH-HARQ-timing-r16    ENUMERATED {supported}          OPTIONAL,
-- R1 10-15: Enhanced dynamic HARQ codebook
enhancedDynamicHARQ-codebook-r16      ENUMERATED {supported}          OPTIONAL,
-- R1 10-16: One-shot HARQ ACK feedback
oneShotHARQ-feedback-r16              ENUMERATED {supported}          OPTIONAL,
-- R1 10-17: Multi-PUSCH UL grant
multiPUSCH-UL-grant-r16               ENUMERATED {supported}          OPTIONAL,
-- R1 10-26: CSI-RS based RLM for NR-U
csi-RS-RLM-r16                        ENUMERATED {supported}          OPTIONAL,
dummy                                ENUMERATED {supported}          OPTIONAL,
-- R1 10-31: Support of P/SP-CSI-RS reception with CSI-RS-ValidationWith-DCI-r16 configured
periodicAndSemi-PersistentCSI-RS-r16 ENUMERATED {supported}          OPTIONAL,
-- R1 10-3: PRB interlace mapping for PUSCH
pusch-PRB-interlace-r16               ENUMERATED {supported}          OPTIONAL,
-- R1 10-3a: PRB interlace mapping for PUCCH
pucch-F0-F1-PRB-Interlace-r16         ENUMERATED {supported}          OPTIONAL,
-- R1 10-12: OCC for PRB interlace mapping for PF2 and PF3
occ-PRB-PF2-PF3-r16                   ENUMERATED {supported}          OPTIONAL,
-- R1 10-13a: Extended CP range of more than one symbol for CG-PUSCH
extCP-rangeCG-PUSCH-r16               ENUMERATED {supported}          OPTIONAL,
-- R1 10-18: Configured grant with retransmission in CG resources
configuredGrantWithRetx-r16           ENUMERATED {supported}          OPTIONAL,
-- R1 10-21a: Support using ED threshold given by gNB for UL to DL COT sharing
ed-Threshold-r16                      ENUMERATED {supported}          OPTIONAL,
-- R1 10-21b: Support UL to DL COT sharing
ul-DL-COT-Sharing-r16                 ENUMERATED {supported}          OPTIONAL,
-- R1 10-24: CG-UCI multiplexing with HARQ ACK
mux-CG-UCI-HARQ-ACK-r16               ENUMERATED {supported}          OPTIONAL,
-- R1 10-28: Configured grant with Rel-16 enhanced resource configuration
cg-resourceConfig-r16                 ENUMERATED {supported}          OPTIONAL
}

SharedSpectrumChAccessParamsPerBand-v1630 ::= SEQUENCE {
-- R4 4-1: DL reception in intra-carrier guardband
dl-ReceptionIntraCellGuardband-r16    ENUMERATED {supported}          OPTIONAL,
-- R4 4-2: DL reception when gNB does not transmit on all RB sets of a carrier as a result of LBT
dl-ReceptionLBT-subsetRB-r16          ENUMERATED {supported}          OPTIONAL
}

SharedSpectrumChAccessParamsPerBand-v1640 ::= SEQUENCE {
-- 10-26b(1-4): CSI-RS based RRM measurement with associated SS-block
csi-RSRP-AndRSRQ-MeasWithSSB-r16      ENUMERATED {supported}          OPTIONAL,
-- 10-26c(1-5): CSI-RS based RRM measurement without associated SS-block
csi-RSRP-AndRSRQ-MeasWithoutSSB-r16    ENUMERATED {supported}          OPTIONAL,
-- 10-26d(1-6): CSI-RS based RS-SINR measurement
csi-SINR-Meas-r16                      ENUMERATED {supported}          OPTIONAL,
-- 10-26e(1-8): RLM based on a mix of SS block and CSI-RS signals within active BWP
ssb-AndCSI-RS-RLM-r16                  ENUMERATED {supported}          OPTIONAL
}

```

```

-- 10-26f(1-9): CSI-RS based contention free RA for H0
csi-RS-CFRA-ForH0-r16          ENUMERATED {supported}          OPTIONAL
}

SharedSpectrumChAccessParamsPerBand-v1650 ::= SEQUENCE {
-- Extension of R1 10-9 capability to configure up to 16 instead of 4 cells or cell groups, respectively
extendedSearchSpaceSwitchWithDCI-r16          ENUMERATED {supported}          OPTIONAL
}

SharedSpectrumChAccessParamsPerBand-v1710 ::= SEQUENCE {
-- R1 25-12: UE initiated semi-static channel occupancy with dependent configurations
ul-Semi-StaticChAccessDependentConfig-r17          ENUMERATED {supported}          OPTIONAL,
-- R1 25-13: UE initiated semi-static channel occupancy with independent configurations
ul-Semi-StaticChAccessIndependentConfig-r17          ENUMERATED {supported}          OPTIONAL
}

-- TAG-SHAREDSPECTRUMCHACCESSPARAMSPERBAND-STOP
-- ASN1STOP

```

– *SharedSpectrumChAccessParamsSidelinkPerBand*

The IE *SharedSpectrumChAccessParamsSidelinkPerBand* is used to convey shared channel access related parameters related to NR sidelink communication, specific for a certain frequency band (not per feature set or band combination).

SharedSpectrumChAccessParamsSidelinkPerBand information element

```

-- ASN1START
-- TAG-SHAREDSPECTRUMCHACCESSPARAMSSIDELINKPERBAND-START

SharedSpectrumChAccessParamsSidelinkPerBand-r18 ::= SEQUENCE {
-- R1 47-k1: SL channel access for dynamic channel access mode
sl-DynamicChannelAccess-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-k2: SL multi-channel access for dynamic channel access mode
sl-DynamicMultiChannelAccess-r18          INTEGER (2..5)          OPTIONAL,
-- R1 47-k6: Type1 LBT blocking Option 1
sl-LBT-Option1-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-k7: Type1 LBT blocking Option 2
sl-LBT-Option2-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-k9: Sidelink mode 1 resource allocation in shared spectrum
sl-ResourceAllocMode1-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-m1: Interlace RB-based SL transmission/reception
sl-Interlace-RB-TxRx-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-m5: Multiple PSFCH occasions per PSCCH/PSSCH
sl-PSFCH-MultiOccasion-r18          INTEGER (1..4)          OPTIONAL,
-- R1 47-m10: Contiguous RB-based PSCCH/PSSCH transmission/reception
sl-ContiguousRB-TxRx-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-m11: PSFCH transmissions in multiple contiguous RB sets
sl-PSFCH-MultiContiguousRB-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-m11a: PSFCH transmissions in multiple non-contiguous RB sets
sl-PSFCH-MultiNonContiguousRB-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-m13: Transmissions/receptions of multiple dedicated PRBs in common interlace-based PSFCH

```

```

sl-MultiplePRB-CommonInterlacePSFCH-r18
  tx-TotalPRB-PSFCH-r18
  rx-TotalPRB-PSFCH-r18
}
-- R1 47-m13a: Transmissions/receptions of multiple interlaces in dedicated interlace-based PSFCH
sl-MultiplePRB-DedicatedInterlacePSFCH-r18
  tx-TotalPRB-PSFCH-r18
  rx-TotalPRB-PSFCH-r18
}
-- TAG-SHAREDSPECTRUMCHACCESSPARAMSSIDELINKPERBAND-STOP
-- ASN1STOP

```

SidelinkParameters

The IE *SidelinkParameters* is used to convey capabilities related to NR and V2X sidelink communications/positioning.

SidelinkParameters information element

```

-- ASN1START
-- TAG-SIDELINKPARAMETERS-START

SidelinkParameters-r16 ::= SEQUENCE {
  sidelinkParametersNR-r16          SidelinkParametersNR-r16          OPTIONAL,
  sidelinkParametersEUTRA-r16       SidelinkParametersEUTRA-r16       OPTIONAL
}

SidelinkParametersNR-r16 ::= SEQUENCE {
  rlc-ParametersSidelink-r16        RLC-ParametersSidelink-r16        OPTIONAL,
  mac-ParametersSidelink-r16        MAC-ParametersSidelink-r16        OPTIONAL,
  fdd-Add-UE-Sidelink-Capabilities-r16 UE-SidelinkCapabilityAddXDD-Mode-r16 OPTIONAL,
  tdd-Add-UE-Sidelink-Capabilities-r16 UE-SidelinkCapabilityAddXDD-Mode-r16 OPTIONAL,
  supportedBandListSidelink-r16     SEQUENCE (SIZE (1..maxBands)) OF BandSidelink-r16 OPTIONAL,
  ...
  [[
    relayParameters-r17              RelayParameters-r17              OPTIONAL
  ]],
  [[
    -- R1 32-x: Use of new P0 parameters for open loop power control
    p0-OLPC-Sidelink-r17             ENUMERATED {supported}           OPTIONAL
  ]],
  [[
    pdcp-ParametersSidelink-r18      PDCP-ParametersSidelink-r18      OPTIONAL,
    --R1 41-1-1a: Common SL-PRS processing capability
    sl-PRS-CommonProcCapabilityPerUE-r18 SEQUENCE {
      maxNumOfActiveSL-PRS-Resources-r18 SEQUENCE {
        fr1-r18                      ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24} OPTIONAL,
        fr2-r18                      ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64, n128} OPTIONAL
      }
    }
  ]],
}
-- ASN1STOP

```

```

    },
    maxNumOfSlotsWithActiveSL-PRS-Resources-r18 SEQUENCE {
        fr1-r18 ENUMERATED {n1, n2, n3, n4, n6, n8} OPTIONAL,
        fr2-r18 ENUMERATED {n1, n2, n4, n8, n12, n16, n24, n32, n48, n64} OPTIONAL
    } OPTIONAL
}]]

SidelinkParametersEUTRA-r16 ::= SEQUENCE {
    sl-ParametersEUTRA1-r16 OCTET STRING OPTIONAL,
    sl-ParametersEUTRA2-r16 OCTET STRING OPTIONAL,
    sl-ParametersEUTRA3-r16 OCTET STRING OPTIONAL,
    supportedBandListSidelinkEUTRA-r16 SEQUENCE (SIZE (1..maxBandsEUTRA)) OF BandSidelinkEUTRA-r16 OPTIONAL,
    ...
}

RLC-ParametersSidelink-r16 ::= SEQUENCE {
    am-WithLongSN-Sidelink-r16 ENUMERATED {supported} OPTIONAL,
    um-WithLongSN-Sidelink-r16 ENUMERATED {supported} OPTIONAL,
    ...
}

MAC-ParametersSidelink-r16 ::= SEQUENCE {
    mac-ParametersSidelinkCommon-r16 MAC-ParametersSidelinkCommon-r16 OPTIONAL,
    mac-ParametersSidelinkXDD-Diff-r16 MAC-ParametersSidelinkXDD-Diff-r16 OPTIONAL,
    ...
}

UE-SidelinkCapabilityAddXDD-Mode-r16 ::= SEQUENCE {
    mac-ParametersSidelinkXDD-Diff-r16 MAC-ParametersSidelinkXDD-Diff-r16 OPTIONAL
}

MAC-ParametersSidelinkCommon-r16 ::= SEQUENCE {
    lcp-RestrictionSidelink-r16 ENUMERATED {supported} OPTIONAL,
    multipleConfiguredGrantsSidelink-r16 ENUMERATED {supported} OPTIONAL,
    ...,
    [[
        drx-OnSidelink-r17 ENUMERATED {supported} OPTIONAL
    ]],
    [[
        sl-LBT-FailureDectectionRecovery-r18 ENUMERATED {supported} OPTIONAL
    ]]
}

MAC-ParametersSidelinkXDD-Diff-r16 ::= SEQUENCE {
    multipleSR-ConfigurationsSidelink-r16 ENUMERATED {supported} OPTIONAL,
    logicalChannelSR-DelayTimerSidelink-r16 ENUMERATED {supported} OPTIONAL,
    ...
}

BandSidelinkEUTRA-r16 ::= SEQUENCE {
    freqBandSidelinkEUTRA-r16 FreqBandIndicatorEUTRA,
    -- R1 15-7: Transmitting LTE sidelink mode 3 scheduled by NR Uu

```



```

gnb-ScheduledMode3SidelinkEUTRA-r16 SEQUENCE {
  gnb-ScheduledMode3DelaySidelinkEUTRA-r16 ENUMERATED {ms0, ms0dot25, ms0dot5, ms0dot625, ms0dot75, ms1,
ms1dot25, ms1dot5, ms1dot75, ms2, ms2dot5, ms3, ms4,
ms5, ms6, ms8, ms10, ms20}
}
-- R1 15-9: Transmitting LTE sidelink mode 4 configured by NR Uu
gnb-ScheduledMode4SidelinkEUTRA-r16 ENUMERATED {supported}
}

BandSidelink-r16 ::= SEQUENCE {
  freqBandSidelink-r16 FreqBandIndicatorNR,
  --15-1
  sl-Reception-r16 SEQUENCE {
    harq-RxProcessSidelink-r16 ENUMERATED {n16, n24, n32, n48, n64},
    pscch-RxSidelink-r16 ENUMERATED {value1, value2},
    scs-CP-PatternRxSidelink-r16 CHOICE {
      fr1-r16 SEQUENCE {
        scs-15kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
        scs-30kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
        scs-60kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
      },
      fr2-r16 SEQUENCE {
        scs-60kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
        scs-120kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
      }
    },
    extendedCP-RxSidelink-r16 ENUMERATED {supported} OPTIONAL,
  }
  --15-2
  sl-TransmissionMode1-r16 SEQUENCE {
    harq-TxProcessModeOneSidelink-r16 ENUMERATED {n8, n16},
    scs-CP-PatternTxSidelinkModeOne-r16 CHOICE {
      fr1-r16 SEQUENCE {
        scs-15kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
        scs-30kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
        scs-60kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
      },
      fr2-r16 SEQUENCE {
        scs-60kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
        scs-120kHz-r16 BIT STRING (SIZE (16)) OPTIONAL,
      }
    },
    extendedCP-TxSidelink-r16 ENUMERATED {supported} OPTIONAL,
    harq-ReportOnPUCCH-r16 ENUMERATED {supported} OPTIONAL,
  }
  --15-4
  sync-Sidelink-r16 SEQUENCE {
    gNB-Sync-r16 ENUMERATED {supported} OPTIONAL,
    gNB-GNSS-UE-SyncWithPriorityOnGNB-ENB-r16 ENUMERATED {supported} OPTIONAL,
    gNB-GNSS-UE-SyncWithPriorityOnGNSS-r16 ENUMERATED {supported} OPTIONAL,
  }
  --15-10
  sl-Tx-256QAM-r16 ENUMERATED {supported} OPTIONAL,
  --15-11

```

```

psfch-FormatZeroSidelink-r16
  psfch-RxNumber
  psfch-TxNumber
}
--15-12
lowSE-64QAM-MCS-TableSidelink-r16
--15-15
enb-sync-Sidelink-r16
...
[[
--15-3
sl-TransmissionMode2-r16
  harq-TxProcessModeTwoSidelink-r16
  scs-CP-PatternTxSidelinkModeTwo-r16
  dl-openLoopPC-Sidelink-r16
}
--15-5
congestionControlSidelink-r16
  cbr-ReportSidelink-r16
  cbr-CR-TimeLimitSidelink-r16
}
--15-22
fewerSymbolSlotSidelink-r16
--15-23
sl-openLoopPC-RSRP-ReportSidelink-r16
--13-1
sl-Rx-256QAM-r16
]],
[[
ue-PowerClassSidelink-r16
                                ENUMERATED {pc2, pc3, pc5-v1820, spare5, spare4, spare3, spare2, spare1}
                                OPTIONAL

]],
[[
--32-4a
sl-TransmissionMode2-RandomResourceSelection-r17
  harq-TxProcessModeTwoSidelink-r17
  scs-CP-PatternTxSidelinkModeTwo-r17
    fr1-r17
      scs-15kHz-r17
      scs-30kHz-r17
      scs-60kHz-r17
    },
    fr2-r17
      scs-60kHz-r17
      scs-120kHz-r17
    }
  }
  extendedCP-Mode2Random-r17
  dl-openLoopPC-Sidelink-r17
}
--32-4b
sync-Sidelink-v1710
  sync-GNSS-r17
  gNB-Sync-r17

```

SEQUENCE {
 ENUMERATED {n5, n15, n25, n32, n35, n45, n50, n64},
 ENUMERATED {n4, n8, n16}
 OPTIONAL,
 ENUMERATED {supported}
 ENUMERATED {supported}
 OPTIONAL,
 SEQUENCE {
 ENUMERATED {n8, n16},
 ENUMERATED {supported}
 ENUMERATED {supported}
 OPTIONAL,
 SEQUENCE {
 ENUMERATED {supported}
 ENUMERATED {time1, time2}
 OPTIONAL,
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {pc2, pc3, pc5-v1820, spare5, spare4, spare3, spare2, spare1}
 OPTIONAL
 SEQUENCE {
 ENUMERATED {n8, n16},
 CHOICE {
 SEQUENCE {
 BIT STRING (SIZE (16))
 BIT STRING (SIZE (16))
 BIT STRING (SIZE (16))
 SEQUENCE {
 BIT STRING (SIZE (16))
 BIT STRING (SIZE (16))
 }
 }
 ENUMERATED {supported}
 ENUMERATED {supported}
 OPTIONAL,
 SEQUENCE {
 ENUMERATED {supported}
 ENUMERATED {supported}
 OPTIONAL,
 SEQUENCE {
 ENUMERATED {supported}
 ENUMERATED {supported}

```

    gNB-GNSS-UE-SyncWithPriorityOnGNB-ENB-r17      ENUMERATED {supported}      OPTIONAL,
    gNB-GNSS-UE-SyncWithPriorityOnGNSS-r17          ENUMERATED {supported}      OPTIONAL,
  },
  --32-4c
  enb-sync-Sidelink-v1710                          ENUMERATED {supported}      OPTIONAL,
  --32-5a-2
  rx-IUC-Scheme1-PreferredMode2Sidelink-r17        ENUMERATED {supported}      OPTIONAL,
  --32-5a-3
  rx-IUC-Scheme1-NonPreferredMode2Sidelink-r17     ENUMERATED {supported}      OPTIONAL,
  --32-5b-2
  rx-IUC-Scheme2-Mode2Sidelink-r17                 ENUMERATED {n5, n15, n25, n32, n35, n45, n50, n64} OPTIONAL,
  --32-6-1
  rx-IUC-Scheme1-SCI-r17                           ENUMERATED {supported}      OPTIONAL,
  --32-6-2
  rx-IUC-Scheme1-SCI-ExplicitReq-r17               ENUMERATED {supported}      OPTIONAL,
]],
[[
sharedSpectrumChAccessParamsSidelinkPerBand-r18 SharedSpectrumChAccessParamsSidelinkPerBand-r18 OPTIONAL,
--R1 41-1-1 Common SL-PRS processing capability in a SL BWP
sl-PRS-CommonProcCapabilityPerBand-r18            SEQUENCE {
  maxSL-PRS-Bandwidth-r18                         CHOICE {
    fr1-r18                                         ENUMERATED {mhz5, mhz10, mhz20, mhz40, mhz50, mhz80, mhz100},
    fr2-r18                                         ENUMERATED {mhz50, mhz100, mhz200, mhz400}
  },
  maxNumOfActiveSL-PRS-ResourcesInOneSlot-r18      CHOICE {
    fr1-r18                                         ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24},
    fr2-r18                                         ENUMERATED {n1, n2, n4, n6, n8, n12, n16, n24, n32, n48, n64, n128}
  },
  maxNumOfSlotsWithActiveSL-PRS-Resources-r18      CHOICE {
    fr1-r18                                         ENUMERATED {n1, n2, n3, n4, n6, n8},
    fr2-r18                                         ENUMERATED {n1, n2, n4, n8, n12, n16, n24, n32, n48, n64}
  },
  minTimeAfterEndofSlotCarryActiveSL-PRS-Resources-r18 ENUMERATED {ms20, ms30, ms40, ms50, ms80, ms100, ms160}
},
}

-- R1 41-1-2: Receiving SL-PRS in a shared resource pool
sl-PRS-RxInSharedResourcePool-r18                 ENUMERATED {supported}      OPTIONAL,
-- R1 41-1-3: Receiving SL-PRS in a dedicated resource pool
sl-PRS-RxInDedicatedResourcePool-r18              SEQUENCE {
  numOfSupportedRxPSCCH-PerSlot-r18               ENUMERATED {value1, value2},
  supportedCP-TypeFor60kHzSCS-r18                 ENUMERATED {ncp, ncpAndECP}
},
-- R1 41-1-4a: Transmitting SL-PRS in a shared resource pool
sl-PRS-TxInSharedResourcePool-r18                 ENUMERATED {supported}      OPTIONAL,
-- R1 41-1-4b: Transmitting SL-PRS scheme 1 in a dedicated resource pool
sl-PRS-TxScheme1InDedicatedResourcePool-r18       ENUMERATED {supported}      OPTIONAL,
-- R1 41-1-4c: Transmitting SL-PRS mode 2 in a dedicated resource pool
sl-PRS-TxScheme2InDedicatedResourcePool-r18       ENUMERATED {supported}      OPTIONAL,
-- R1 41-1-5: SL-PRS congestion control in a dedicated resource pool
sl-PRS-CongestionCtrl-r18                         ENUMERATED {cpt1, cpt2, cpt3} OPTIONAL,
-- R1 41-1-8: Support of random selection in a dedicated resource pool
sl-PRS-TxRandomSelection-r18                      ENUMERATED {supported}      OPTIONAL,
-- R1 41-1-10: Support of full sensing in a dedicated resource pool
sl-PRS-TxUsingFullSensing-r18                    ENUMERATED {value1, value2}  OPTIONAL,

```

```

-- R1 41-1-20: Supports SL PRS Rx for a band configured with SL CA
sl-PRS-RxForBandWithSL-CA-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 41-1-21: Supports SL PRS Tx for a band configured with SL CA
sl-PRS-TxForBandWithSL-CA-r18          ENUMERATED {supported}          OPTIONAL,
-- R1 47-s1: Transmission/Reception using dynamic resource pool sharing
sl-DynamicSharingTxRx-r18              ENUMERATED {supported}          OPTIONAL,
-- R1 47-v1: NR SL communication with SL CA
sl-CA-Communication-r18                 SEQUENCE {
  numberOfCarriers-r18                  INTEGER (2..8),
  numberOfPSCCH-DecodeValueZ-r18       INTEGER (1..2),
  totalBandwidth-r18                   ENUMERATED {mhz20,mhz30,mhz40,mhz50,mhz60,mhz70}
}
-- R1 47-v2: Synchronization for SL CA
sl-CA-Synchronization-r18              ENUMERATED {supported}          OPTIONAL,
-- R1 47-v3: PSFCH for SL CA
sl-CA-PSFCH-r18                        SEQUENCE {
  rx-PSFCH-Resource-r18                ENUMERATED {n5,n15,n25,n32,n35,n45,n50,n64,n100},
  tx-PSFCH-Resource-r18                ENUMERATED {n4,n8,n16,n24}
}
-- R4 45-2: SL reception in intra-carrier guard band
sl-ReceptionIntraCarrierGuardBand-r18  ENUMERATED {supported}          OPTIONAL,
]],
[[
-- R1 41-1-17: Open loop SL pathloss based power control for SL-PRS and associated PSCCH and SL RSRP report for dedicated
-- resource pool
sl-PathlossBasedOLPC-SL-RSRP-Report-r18  ENUMERATED {supported}          OPTIONAL,
]]
}

RelayParameters-r17 ::= SEQUENCE {
  relayUE-Operation-L2-r17              ENUMERATED {supported}          OPTIONAL,
  remoteUE-Operation-L2-r17             ENUMERATED {supported}          OPTIONAL,
  remoteUE-PathSwitchToIdleInactiveRelay-r17  ENUMERATED {supported}          OPTIONAL,
  ...,
  [[
    relayUE-U2U-OperationL2-r18          ENUMERATED {supported}          OPTIONAL,
    remoteUE-U2U-OperationL2-r18          ENUMERATED {supported}          OPTIONAL,
    remoteUE-U2N-PathSwitchOperationL2-r18  ENUMERATED {supported}          OPTIONAL,
    multipathRemoteUE-PC5L2-r18           ENUMERATED {supported}          OPTIONAL,
    multipathRelayUE-N3C-r18              ENUMERATED {supported}          OPTIONAL,
    multipathRemoteUE-N3C-r18              ENUMERATED {supported}          OPTIONAL,
    remoteUE-IndirectPathAddChangeToIdleInactiveRelay-r18  ENUMERATED {supported}          OPTIONAL,
    pdcp-DuplicationMoreThanOneUuRLC-r18  ENUMERATED {supported}          OPTIONAL,
    pdcp-CADuplicationDirectpath-DRB-r18  ENUMERATED {supported}          OPTIONAL,
    pdcp-CADuplicationDirectpath-SRB-r18  ENUMERATED {supported}          OPTIONAL,
    pdcp-DuplicationMP-SplitDRB-r18       ENUMERATED {supported}          OPTIONAL,
    pdcp-DuplicationMP-SplitSRB-r18       ENUMERATED {supported}          OPTIONAL,
    directpathRLF-RecoveryViaSRB1-r18     ENUMERATED {supported}          OPTIONAL,
    splitDRB-WithUL-BothDirectIndirect-r18  ENUMERATED {supported}          OPTIONAL,
  ]]
}

PDCP-ParametersSidelink-r18 ::= SEQUENCE {
  pdcp-DuplicationSRB-sidelink-r18      ENUMERATED {supported}          OPTIONAL,

```

```
    pdcp-DuplicationDRB-sidelink-r18
    ...
}

-- TAG-SIDELINKPARAMETERS-STOP
-- ASN1STOP
```

SidelinkParametersEUTRA field descriptions
sl-ParametersEUTRA1, sl-ParametersEUTRA2, sl-ParametersEUTRA3 This field includes IE of <i>SL-Parameters-v1430</i> (where <i>v2x-eNB-Scheduled-r14</i> and <i>V2X-SupportedBandCombination-r14</i> shall not be included), <i>SL-Parameters-v1530</i> (where <i>V2X-SupportedBandCombination-r1530</i> shall not be included) and <i>SL-Parameters-v1540</i> respectively defined in 36.331 [10]. It is used for reporting the per-UE capability for V2X sidelink communication.

— *SimultaneousRxTxPerBandPair*

The IE *SimultaneousRxTxPerBandPair* contains the simultaneous Rx/Tx UE capability for each band pair in a band combination.

SimultaneousRxTxPerBandPair information element

```
-- ASN1START
-- TAG-SIMULTANEOUSRXTXPERBANDPAIR-START

SimultaneousRxTxPerBandPair ::=
    BIT STRING (SIZE (3..496))

-- TAG-SIMULTANEOUSRXTXPERBANDPAIR-STOP
-- ASN1STOP
```

— *SON-Parameters*

The IE *SON-Parameters* contains SON related parameters.

SON-Parameters information element

```
-- ASN1START
-- TAG-SON-PARAMETERS-START

SON-Parameters-r16 ::= SEQUENCE {
    rach-Report-r16      ENUMERATED {supported}    OPTIONAL,
    ...,
    [
        rlfReportCH0-r17    ENUMERATED {supported}    OPTIONAL,
        rlfReportDAPS-r17   ENUMERATED {supported}    OPTIONAL,
        success-H0-Report-r17 ENUMERATED {supported}    OPTIONAL,
        twoStepRACH-Report-r17 ENUMERATED {supported}    OPTIONAL,
        psCell-MHI-Report-r17 ENUMERATED {supported}    OPTIONAL,
        onDemandSI-Report-r17 ENUMERATED {supported}    OPTIONAL
    ]
}
```

```

    ]],
    [[
      cef-ReportRedCap-r17  ENUMERATED {supported}  OPTIONAL,
      rlf-ReportRedCap-r17  ENUMERATED {supported}  OPTIONAL
    ]],
    [[
      spr-Report-r18        ENUMERATED {supported}  OPTIONAL,
      successIRAT-H0-Report-r18  ENUMERATED {supported}  OPTIONAL
    ]]
  }

-- TAG-SON-PARAMETERS-STOP
-- ASN1STOP

```

– *SpatialRelationsSRS-Pos*

The IE *SpatialRelationsSRS-Pos* is used to convey spatial relation for SRS for positioning related parameters.

SpatialRelationsSRS-Pos information element

```

-- ASN1START
-- TAG-SPATIALRELATIONSSRS-POS-START

SpatialRelationsSRS-Pos-r16 ::= SEQUENCE {
  spatialRelation-SRS-PosBasedOnSSB-Serving-r16  ENUMERATED {supported}  OPTIONAL,
  spatialRelation-SRS-PosBasedOnCSI-RS-Serving-r16  ENUMERATED {supported}  OPTIONAL,
  spatialRelation-SRS-PosBasedOnPRS-Serving-r16    ENUMERATED {supported}  OPTIONAL,
  spatialRelation-SRS-PosBasedOnSRS-r16            ENUMERATED {supported}  OPTIONAL,
  spatialRelation-SRS-PosBasedOnSSB-Neigh-r16      ENUMERATED {supported}  OPTIONAL,
  spatialRelation-SRS-PosBasedOnPRS-Neigh-r16      ENUMERATED {supported}  OPTIONAL
}

-- TAG-SPATIALRELATIONSSRS-POS-STOP
-- ASN1STOP

```

– *SRS-AllPosResourcesRRC-Inactive*

The IE *SRS-AllPosResourcesRRC-Inactive* is used to convey SRS positioning related parameters specific for a certain band.

SRS-AllPosResourcesRRC-Inactive information element

```

-- ASN1START
-- TAG-SRS-ALLPOSRESOURCESRRC-INACTIVE-START

SRS-AllPosResourcesRRC-Inactive-r17 ::= SEQUENCE {
  srs-PosResourcesRRC-Inactive-r17  SEQUENCE {
    -- R1 27-15: Positioning SRS transmission in RRC_INACTIVE state for initial UL BWP
    maxNumberSRS-PosResourceSetPerBWP-r17  ENUMERATED {n1, n2, n4, n8, n12, n16},

```

```

    maxNumberSRS-PosResourcesPerBWP-r17      ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
    maxNumberSRS-ResourcesPerBWP-PerSlot-r17  ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
    maxNumberPeriodicSRS-PosResourcesPerBWP-r17 ENUMERATED {n1, n2, n4, n8, n16, n32, n64},
    maxNumberPeriodicSRS-PosResourcesPerBWP-PerSlot-r17 ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14},
    dummy1                                     ENUMERATED {n1, n2, n4, n8, n16, n32, n64 },
    dummy2                                     ENUMERATED {n1, n2, n3, n4, n5, n6, n8, n10, n12, n14}
  }
}

-- TAG-SRS-ALLPOSRESOURCESRRC-INACTIVE-STOP
-- ASN1STOP
```

SRS-AllPosResourcesRRC-Inactive field descriptions
dummy1, dummy2 The fields are not used in the specification and the network ignores the received values.

— SRS-SwitchingTimeNR

The IE *SRS-SwitchingTimeNR* is used to indicate the SRS carrier switching time supported by the UE for one NR band pair.

SRS-SwitchingTimeNR information element

```

-- ASN1START
-- TAG-SRS-SWITCHINGTIMENR-START

SRS-SwitchingTimeNR ::= SEQUENCE {
    switchingTimeDL      ENUMERATED {n0us, n30us, n100us, n140us, n200us, n300us, n500us, n900us} OPTIONAL,
    switchingTimeUL      ENUMERATED {n0us, n30us, n100us, n140us, n200us, n300us, n500us, n900us} OPTIONAL
}

-- TAG-SRS-SWITCHINGTIMENR-STOP
-- ASN1STOP
```

— SRS-SwitchingTimeEUTRA

The IE *SRS-SwitchingTimeEUTRA* is used to indicate the SRS carrier switching time supported by the UE for one E-UTRA band pair.

SRS-SwitchingTimeEUTRA information element

```

-- ASN1START
-- TAG-SRS-SWITCHINGTIMEEUTRA-START

SRS-SwitchingTimeEUTRA ::= SEQUENCE {
    switchingTimeDL      ENUMERATED {n0, n0dot5, n1, n1dot5, n2, n2dot5, n3, n3dot5, n4, n4dot5, n5, n5dot5, n6, n6dot5, n7}
```

```

switchingTimeUL      ENUMERATED {n0, n0dot5, n1, n1dot5, n2, n2dot5, n3, n3dot5, n4, n4dot5, n5, n5dot5, n6, n6dot5, n7}
}
-- TAG-SRS-SWITCHINGTIMEEUTRA-STOP
-- ASN1STOP

```

OPTIONAL,
OPTIONAL

— SupportedAggBandwidth

The IE *SupportedAggBandwidth* is used to indicate the aggregated bandwidth supported by the UE.

SupportedAggBandwidth information element

```

-- ASN1START
-- TAG-SUPPORTEDAGGBANDWIDTH-START

SupportedAggBandwidth-r17 ::= CHOICE {
    fr1-r17    ENUMERATED {mhz20, mhz30, mhz35, mhz40, mhz50, mhz60, mhz70, mhz80, mhz90, mhz100, mhz110, mhz120, mhz130, mhz140,
                          mhz150, mhz160, mhz180, mhz200, mhz220, mhz230, mhz250, mhz280, mhz290, mhz300, mhz350, mhz400, mhz450,
                          mhz500, mhz600, mhz700, mhz800, spare1},
    fr2-r17    ENUMERATED {mhz200, mhz300, mhz400, mhz500, mhz600, mhz700, mhz800, mhz900, mhz1000, mhz1100, mhz1200, mhz1300, mhz1400,
                          mhz1500, mhz1600, mhz1700, mhz1800, mhz1900, mhz2000, mhz2100, mhz2200, mhz2300, mhz2400, spare9, spare8,
                          spare7, spare6, spare5, spare4, spare3, spare2, spare1}
}

-- TAG-SUPPORTEDAGGBANDWIDTH-STOP
-- ASN1STOP

```

— SupportedBandwidth

The IE *SupportedBandwidth* is used to indicate the channel bandwidth supported by the UE on one carrier of a band of a band combination.

SupportedBandwidth information element

```

-- ASN1START
-- TAG-SUPPORTEDBANDWIDTH-START

SupportedBandwidth ::= CHOICE {
    fr1    ENUMERATED {mhz5, mhz10, mhz15, mhz20, mhz25, mhz30, mhz40, mhz50, mhz60, mhz80, mhz100},
    fr2    ENUMERATED {mhz50, mhz100, mhz200, mhz400}
}

SupportedBandwidth-v1700 ::= CHOICE {
    fr1-r17    ENUMERATED {mhz5, mhz10, mhz15, mhz20, mhz25, mhz30, mhz35, mhz40, mhz45, mhz50, mhz60, mhz70, mhz80, mhz90, mhz100},
    fr2-r17    ENUMERATED {mhz50, mhz100, mhz200, mhz400, mhz800, mhz1600, mhz2000}
}

SupportedBandwidth-v1840 ::= ENUMERATED {mhz3}

```



```
-- TAG-SUPPORTEDBANDWIDTH-STOP
-- ASN1STOP
```

– *UE-BasedPerfMeas-Parameters*

The IE *UE-BasedPerfMeas-Parameters* contains UE-based performance measurement parameters.

UE-BasedPerfMeas-Parameters information element

```
-- ASN1START
-- TAG-UE-BASEDPERFMEAS-PARAMETERS-START

UE-BasedPerfMeas-Parameters-r16 ::= SEQUENCE {
    barometerMeasReport-r16      ENUMERATED {supported}      OPTIONAL,
    immMeasBT-r16                ENUMERATED {supported}      OPTIONAL,
    immMeasWLAN-r16              ENUMERATED {supported}      OPTIONAL,
    loggedMeasBT-r16             ENUMERATED {supported}      OPTIONAL,
    loggedMeasurements-r16       ENUMERATED {supported}      OPTIONAL,
    loggedMeasWLAN-r16           ENUMERATED {supported}      OPTIONAL,
    orientationMeasReport-r16     ENUMERATED {supported}      OPTIONAL,
    speedMeasReport-r16          ENUMERATED {supported}      OPTIONAL,
    gnss-Location-r16            ENUMERATED {supported}      OPTIONAL,
    ulPDCP-Delay-r16             ENUMERATED {supported}      OPTIONAL,
    ...,
    [[
        sigBasedLogMDT-OverrideProtect-r17 ENUMERATED {supported} OPTIONAL,
        multipleCEF-Report-r17            ENUMERATED {supported} OPTIONAL,
        excessPacketDelay-r17             ENUMERATED {supported} OPTIONAL,
        earlyMeasLog-r17                  ENUMERATED {supported} OPTIONAL,
    ]],
    [[
        loggedMDT-PNI-NPN-r18             ENUMERATED {supported} OPTIONAL,
        loggedMDT-SNPn-r18                 ENUMERATED {supported} OPTIONAL,
    ]]
}

-- TAG-UE-BASEDPERFMEAS-PARAMETERS-STOP
-- ASN1STOP
```

– *UE-CapabilityRAT-ContainerList*

The IE *UE-CapabilityRAT-ContainerList* contains a list of radio access technology specific capability containers.

UE-CapabilityRAT-ContainerList information element

```
-- ASN1START
-- TAG-UE-CAPABILITYRAT-CONTAINERLIST-START
```

```
UE-CapabilityRAT-ContainerList ::= SEQUENCE (SIZE (0..maxRAT-CapabilityContainers)) OF UE-CapabilityRAT-Container

UE-CapabilityRAT-Container ::= SEQUENCE {
    rat-Type          RAT-Type,
    ue-CapabilityRAT-Container OCTET STRING
}

-- TAG-UE-CAPABILITYRAT-CONTAINERLIST-STOP
-- ASN1STOP
```

UE-CapabilityRAT-ContainerList field descriptions**ue-CapabilityRAT-Container**

Container for the UE capabilities of the indicated RAT. The encoding is defined in the specification of each RAT:

For *rat-Type* set to *nr*: the encoding of UE capabilities is defined in *UE-NR-Capability*.

For *rat-Type* set to *eutra-nr*: the encoding of UE capabilities is defined in *UE-MRDC-Capability*.

For *rat-Type* set to *eutra*: the encoding of UE capabilities is defined in *UE-EUTRA-Capability* specified in TS 36.331 [10].

For *rat-Type* set to *utra-fdd*: the octet string contains the INTER RAT HANDOVER INFO message defined in TS 25.331 [45].

– UE-CapabilityRAT-RequestList

The IE *UE-CapabilityRAT-RequestList* is used to request UE capabilities for one or more RATs from the UE.

UE-CapabilityRAT-RequestList information element

```
-- ASN1START
-- TAG-UE-CAPABILITYRAT-REQUESTLIST-START

UE-CapabilityRAT-RequestList ::= SEQUENCE (SIZE (1..maxRAT-CapabilityContainers)) OF UE-CapabilityRAT-Request

UE-CapabilityRAT-Request ::= SEQUENCE {
    rat-Type          RAT-Type,
    capabilityRequestFilter OCTET STRING
    ...
}

-- TAG-UE-CAPABILITYRAT-REQUESTLIST-STOP
-- ASN1STOP
```

<i>UE-CapabilityRAT-Request</i> field descriptions
capabilityRequestFilter Information by which the network requests the UE to filter the UE capabilities. For <i>rat-Type</i> set to <i>nr</i> or <i>eutra-nr</i> : the encoding of the <i>capabilityRequestFilter</i> is defined in <i>UE-CapabilityRequestFilterNR</i> . For <i>rat-Type</i> set to <i>eutra</i> : the encoding of the <i>capabilityRequestFilter</i> is defined by <i>UECapabilityEnquiry</i> message defined in TS36.331 [10], in which <i>RAT-Type</i> in <i>UE-CapabilityRequest</i> includes only 'eutra'.
rat-Type The RAT type for which the NW requests UE capabilities.

– *UE-CapabilityRequestFilterCommon*

The IE *UE-CapabilityRequestFilterCommon* is used to request filtered UE capabilities. The filter is common for all capability containers that are requested.

UE-CapabilityRequestFilterCommon information element

```
-- ASN1START
-- TAG-UE-CAPABILITYREQUESTFILTERCOMMON-START

UE-CapabilityRequestFilterCommon ::=
    mrdc-Request
        SEQUENCE {
            SEQUENCE {
                omitEN-DC          ENUMERATED {true}          OPTIONAL,    -- Need N
                includeNR-DC       ENUMERATED {true}          OPTIONAL,    -- Need N
                includeNE-DC       ENUMERATED {true}          OPTIONAL,    -- Need N
            }
            ...,
            [[
                codebookTypeRequest-r16 SEQUENCE {
                    type1-SinglePanel-r16 ENUMERATED {true}    OPTIONAL,    -- Need N
                    type1-MultiPanel-r16  ENUMERATED {true}    OPTIONAL,    -- Need N
                    type2-r16              ENUMERATED {true}    OPTIONAL,    -- Need N
                    type2-PortSelection-r16 ENUMERATED {true}    OPTIONAL,    -- Need N
                }
                uplinkTxSwitchRequest-r16 ENUMERATED {true}    OPTIONAL,    -- Need N
            ]],
            [[
                requestedCellGrouping-r16 SEQUENCE (SIZE (1..maxCellGroupings-r16)) OF CellGrouping-r16 OPTIONAL -- Cond NRDC
            ]],
            [[
                fallbackGroupFiveRequest-r17 ENUMERATED {true}    OPTIONAL    -- Need N
            ]],
            [[
                lowerMSDRequest-r18 SEQUENCE {
                    pc1dot5-r18 ENUMERATED {true}    OPTIONAL,    -- Need N
                    pc2-r18     ENUMERATED {true}    OPTIONAL,    -- Need N
                    pc3-r18     ENUMERATED {true}    OPTIONAL,    -- Need N
                }
            ]],
        ]
    ]
}

CellGrouping-r16 ::= SEQUENCE {
```

```
    mcg-r16          SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR,  
    scg-r16          SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR,  
    mode-r16         ENUMERATED {sync, async}  
}
```

```
-- TAG-UE-CAPABILITYREQUESTFILTERCOMMON-STOP  
-- ASN1STOP
```

UE-CapabilityRequestFilterCommon field descriptions	
codebookTypeRequest	Only if this field is present, the UE includes <i>SupportedCSI-RS-Resource</i> supported for the codebook type(s) requested within this field (i.e. type I single/multi-panel, type II and type II port selection) into <i>codebookVariantsList</i> , <i>codebookParametersPerBand</i> and <i>codebookParametersPerBC</i> . If this field is present and none of the codebook types is requested within this field (i.e. empty field), the UE includes <i>SupportedCSI-RS-Resource</i> supported for all codebook types into <i>codebookVariantsList</i> , <i>codebookParametersPerBand</i> and <i>codebookParametersPerBC</i> .
fallbackGroupFiveRequest	Only if this field is present, the UE supporting FR2 CA bandwidth class from fallback group 5 shall include band combinations with FR2 CA bandwidth class from fallback group 5, and shall omit band combinations with FR2 CA bandwidth class from fallback group 2 or 3 (see TS 38.101-2 [39]) with same or lower capabilities.
includeNE-DC	Only if this field is present, the UE supporting NE-DC shall indicate support for NE-DC in band combinations and include feature set combinations which are applicable to NE-DC. Band combinations supporting both NE-DC and (NG)EN-DC shall be included in <i>supportedBandCombinationList</i> , band combinations supporting only NE-DC shall be included in <i>supportedBandCombinationListNEDC-Only</i> .
includeNR-DC	Only if this field is present, the UE supporting NR-DC shall indicate support for NR-DC in band combinations and include feature set combinations which are applicable to NR-DC.
lowerMSDRequest	Only if this field is present, the UE supporting lower MSD shall indicate the lower MSD capability for the requested power class if supported. If no power class is explicitly requested, the UE supporting lower MSD shall indicate the lower MSD capability for the highest supported power class of the band combination consisting of victim band and aggressor band(s).
mode	The mode of NR-DC operation that the NW is interested in for this cell grouping. The value <i>sync</i> means that the UE only indicates NR-DC support for band combinations for which it supports synchronous NR-DC with the requested cell grouping. The value <i>async</i> means that the UE only indicates NR-DC support for band combinations for which it supports asynchronous NR-DC with the requested cell grouping.
omitEN-DC	Only if this field is present, the UE shall omit band combinations and feature set combinations which are only applicable to (NG)EN-DC.
requestedCellGrouping	The NR-DC cell groupings that the NW is interested in, i.e., the bands that it might use in an MCG and the bands that it might use in an SCG. Only if this field is present, the UE indicates NR-DC support for band combinations for which it supports the requested cell grouping, i.e., in which it supports at least one of the <i>mcg</i> bands on MCG and at least one of the <i>scg</i> bands on the SCG. In its <i>supportedBandCombinationList</i> , the UE indicates which of its NR-DC band combinations supports which of the requested cell groupings. The first element in this list is referred to by ID#0, the second by ID#1 and so on. If this field is absent, the UE only includes band combinations for which it supports NR-DC with only FR1 bands in MCG and only FR2 bands in SCG. Example 1: <i>requestedCellGrouping</i> is set to <i>mcg</i> =[n1, n7, n41, n66] and <i>scg</i> =[n78, n261]. This assumes that the NW would always use CA among n1, n7, n41 and n66 (depending on which are deployed on a given site) whereas with n78 and/or n261 the NW may need to use DC. With this filter a UE may report a band combination n1A-n7A-n78A for NR-DC only if it supports that serving cells for n1 and n7 are in the MCG and a serving cell for n78 is in the SCG. The UE may also report a band combination n41C-n261M for NR-DC provided that it supports a serving cell for n41 in the MCG and a serving cell for n261 in the SCG. Example 2: One <i>requestedCellGrouping</i> is set to <i>mcg</i> =[n1, n7, n41, n66] and <i>scg</i> =[n78, n261] and another <i>requestedCellGrouping</i> is set to <i>mcg</i> =[n1, n7, n66] and <i>scg</i> =[n41, n78, n261]. This assumes that the NW uses sometimes CA among n1, n7, n41 and n66 (as in example 1) and sometimes CA among n1, n7 and n66 but DC towards one or several of n41, n78, n261. If a UE supports n1A-n41A-n78A only if n41A and n78A are in the same cell group, this UE may only indicate cell grouping ID#1 (not #0) in its BC.
uplinkTxSwitchRequest	Only if this field is present, the UE supporting dynamic UL Tx switching shall indicate support for UL Tx switching in band combinations which are applicable to inter-band UL CA, SUL and (NG)EN-DC.

Conditional Presence	Explanation
NRDC	The field is optionally present, Need N, if <i>includeNR-DC</i> is included. It is absent otherwise.


```

-- Regular non-critical extensions:
UE-MRDC-Capability-v1560 ::= SEQUENCE {
    receivedFilters OCTET STRING (CONTAINING UECapabilityEnquiry-v1560-IEs) OPTIONAL,
    measAndMobParametersMRDC-v1560 MeasAndMobParametersMRDC-v1560 OPTIONAL,
    fdd-Add-UE-MRDC-Capabilities-v1560 UE-MRDC-CapabilityAddXDD-Mode-v1560 OPTIONAL,
    tdd-Add-UE-MRDC-Capabilities-v1560 UE-MRDC-CapabilityAddXDD-Mode-v1560 OPTIONAL,
    nonCriticalExtension UE-MRDC-Capability-v1610 OPTIONAL
}

UE-MRDC-Capability-v1610 ::= SEQUENCE {
    measAndMobParametersMRDC-v1610 MeasAndMobParametersMRDC-v1610 OPTIONAL,
    generalParametersMRDC-v1610 GeneralParametersMRDC-v1610 OPTIONAL,
    pdcp-ParametersMRDC-v1610 PDCP-ParametersMRDC-v1610 OPTIONAL,
    nonCriticalExtension UE-MRDC-Capability-v1700 OPTIONAL
}

UE-MRDC-Capability-v1700 ::= SEQUENCE {
    measAndMobParametersMRDC-v1700 MeasAndMobParametersMRDC-v1700,
    nonCriticalExtension UE-MRDC-Capability-v1730 OPTIONAL
}

UE-MRDC-Capability-v1730 ::= SEQUENCE {
    measAndMobParametersMRDC-v1730 MeasAndMobParametersMRDC-v1730 OPTIONAL,
    nonCriticalExtension UE-MRDC-Capability-v1800 OPTIONAL
}

UE-MRDC-Capability-v1800 ::= SEQUENCE {
    -- R4 33-2: Support network control of requirement network applicability for UE supporting interBandMRDC-WithOverlapDL-Bands-r16
    requirementTypeIndication-r18 ENUMERATED {supported} OPTIONAL,
    measAndMobParametersMRDC-v1810 MeasAndMobParametersMRDC-v1810 OPTIONAL,
    nonCriticalExtension SEQUENCE {} OPTIONAL
}

-- Late non-critical extensions:
UE-MRDC-Capability-v15g0 ::= SEQUENCE {
    rf-ParametersMRDC-v15g0 RF-ParametersMRDC-v15g0 OPTIONAL,
    nonCriticalExtension UE-MRDC-Capability-v15n0 OPTIONAL
}

UE-MRDC-Capability-v15n0 ::= SEQUENCE {
    rf-ParametersMRDC-v15n0 RF-ParametersMRDC-v15n0 OPTIONAL,
    -- Following field is only for REL-15 late non-critical extensions
    lateNonCriticalExtension OCTET STRING OPTIONAL,
    nonCriticalExtension UE-MRDC-Capability-v16e0 OPTIONAL
}

UE-MRDC-Capability-v16e0 ::= SEQUENCE {
    rf-ParametersMRDC-v16e0 RF-ParametersMRDC-v16e0 OPTIONAL,
    nonCriticalExtension SEQUENCE {} OPTIONAL
}

UE-MRDC-CapabilityAddXDD-Mode ::= SEQUENCE {
    measAndMobParametersMRDC-XDD-Diff MeasAndMobParametersMRDC-XDD-Diff OPTIONAL,

```

generalParametersMRDC-XDD-Diff

GeneralParametersMRDC-XDD-Diff

OPTIONAL

}

UE-MRDC-CapabilityAddXDD-Mode-v1560 ::= SEQUENCE {

measAndMobParametersMRDC-XDD-Diff-v1560 MeasAndMobParametersMRDC-XDD-Diff-v1560

}

OPTIONAL

UE-MRDC-CapabilityAddFRX-Mode ::= SEQUENCE {

measAndMobParametersMRDC-FRX-Diff MeasAndMobParametersMRDC-FRX-Diff

}

GeneralParametersMRDC-XDD-Diff ::= SEQUENCE {

splitSRB-WithOneUL-Path ENUMERATED {supported}

splitDRB-withUL-Both-MCG-SCG ENUMERATED {supported}

srb3 ENUMERATED {supported}

dummy ENUMERATED {supported}

...

}

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

GeneralParametersMRDC-v1610 ::= SEQUENCE {

f1c-OverEUTRA-r16 ENUMERATED {supported}

}

OPTIONAL

-- TAG-UE-MRDC-CAPABILITY-STOP

-- ASN1STOP

UE-MRDC-Capability field descriptions
featureSetCombinations A list of <i>FeatureSetCombination</i>:s for <i>supportedBandCombinationList</i> and <i>supportedBandCombinationListNEDC-Only</i> in <i>UE-MRDC-Capability</i>. The <i>FeatureSetDownlink</i>:s and <i>FeatureSetUplink</i>:s referred to from these <i>FeatureSetCombination</i>:s are defined in the <i>featureSets</i> list in <i>UE-NR-Capability</i>.

— UE-NR-Capability

The IE *UE-NR-Capability* is used to convey the NR UE Radio Access Capability Parameters, see TS 38.306 [26].

UE-NR-Capability information element

-- ASN1START

-- TAG-UE-NR-CAPABILITY-START

UE-NR-Capability ::=

SEQUENCE {

accessStratumRelease AccessStratumRelease,

pdcp-Parameters PDCP-Parameters,

rlc-Parameters RLC-Parameters

mac-Parameters MAC-Parameters

phy-Parameters Phy-Parameters,

rf-Parameters RF-Parameters,

measAndMobParameters MeasAndMobParameters

OPTIONAL,

OPTIONAL,

OPTIONAL,

fdd-Add-UE-NR-Capabilities	UE-NR-CapabilityAddXDD-Mode	OPTIONAL,
tdd-Add-UE-NR-Capabilities	UE-NR-CapabilityAddXDD-Mode	OPTIONAL,
fr1-Add-UE-NR-Capabilities	UE-NR-CapabilityAddFRX-Mode	OPTIONAL,
fr2-Add-UE-NR-Capabilities	UE-NR-CapabilityAddFRX-Mode	OPTIONAL,
featureSets	FeatureSets	OPTIONAL,
featureSetCombinations	SEQUENCE (SIZE (1..maxFeatureSetCombinations)) OF FeatureSetCombination	OPTIONAL,
lateNonCriticalExtension	OCTET STRING (CONTAINING UE-NR-Capability-v15c0)	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1530	OPTIONAL

}

-- Regular non-critical Rel-15 extensions:

UE-NR-Capability-v1530 ::=	SEQUENCE {	
fdd-Add-UE-NR-Capabilities-v1530	UE-NR-CapabilityAddXDD-Mode-v1530	OPTIONAL,
tdd-Add-UE-NR-Capabilities-v1530	UE-NR-CapabilityAddXDD-Mode-v1530	OPTIONAL,
dummy	ENUMERATED {supported}	OPTIONAL,
interRAT-Parameters	InterRAT-Parameters	OPTIONAL,
inactiveState	ENUMERATED {supported}	OPTIONAL,
delayBudgetReporting	ENUMERATED {supported}	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1540	OPTIONAL

}

UE-NR-Capability-v1540 ::=	SEQUENCE {	
sdap-Parameters	SDAP-Parameters	OPTIONAL,
overheatingInd	ENUMERATED {supported}	OPTIONAL,
ims-Parameters	IMS-Parameters	OPTIONAL,
fr1-Add-UE-NR-Capabilities-v1540	UE-NR-CapabilityAddFRX-Mode-v1540	OPTIONAL,
fr2-Add-UE-NR-Capabilities-v1540	UE-NR-CapabilityAddFRX-Mode-v1540	OPTIONAL,
fr1-fr2-Add-UE-NR-Capabilities	UE-NR-CapabilityAddFRX-Mode	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1550	OPTIONAL

}

UE-NR-Capability-v1550 ::=	SEQUENCE {	
reducedCP-Latency	ENUMERATED {supported}	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1560	OPTIONAL

}

UE-NR-Capability-v1560 ::=	SEQUENCE {	
nrhc-Parameters	NRDC-Parameters	OPTIONAL,
receivedFilters	OCTET STRING (CONTAINING UECapabilityEnquiry-v1560-IEs)	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1570	OPTIONAL

}

UE-NR-Capability-v1570 ::=	SEQUENCE {	
nrhc-Parameters-v1570	NRDC-Parameters-v1570	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1610	OPTIONAL

}

-- Late non-critical Rel-15 extensions:

UE-NR-Capability-v15c0 ::=	SEQUENCE {	
nrhc-Parameters-v15c0	NRDC-Parameters-v15c0	OPTIONAL,
partialFR2-FallbackRX-Req	ENUMERATED {true}	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v15g0	OPTIONAL

}

UE-NR-Capability-v15g0 ::=	SEQUENCE {	
rf-Parameters-v15g0	RF-Parameters-v15g0	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v15j0	OPTIONAL
}		
UE-NR-Capability-v15j0 ::=	SEQUENCE {	
-- Following field is only for REL-15 late non-critical extensions		
lateNonCriticalExtension	OCTET STRING (CONTAINING UE-NR-Capability-v15t0)	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v16a0	OPTIONAL
}		
UE-NR-Capability-v15t0 ::=	SEQUENCE {	
featureSets-v15t0	FeatureSets-v15t0	OPTIONAL,
measAndMobParameters-v15t0	MeasAndMobParameters-v15t0	OPTIONAL,
nonCriticalExtension	SEQUENCE {}	OPTIONAL
}		
-- Regular non-critical Rel-16 extensions:		
UE-NR-Capability-v16i0 ::=	SEQUENCE {	
inDeviceCoexInd-r16	ENUMERATED {supported}	OPTIONAL,
dl-DedicatedMessageSegmentation-r16	ENUMERATED {supported}	OPTIONAL,
nrdc-Parameters-v16i0	NRDC-Parameters-v16i0	OPTIONAL,
powSav-Parameters-r16	PowSav-Parameters-r16	OPTIONAL,
fr1-Add-UE-NR-Capabilities-v16i0	UE-NR-CapabilityAddFRX-Mode-v16i0	OPTIONAL,
fr2-Add-UE-NR-Capabilities-v16i0	UE-NR-CapabilityAddFRX-Mode-v16i0	OPTIONAL,
bh-RLF-Indication-r16	ENUMERATED {supported}	OPTIONAL,
directSN-AdditionFirstRRC-IAB-r16	ENUMERATED {supported}	OPTIONAL,
bap-Parameters-r16	BAP-Parameters-r16	OPTIONAL,
referenceTimeProvision-r16	ENUMERATED {supported}	OPTIONAL,
sidelinkParameters-r16	SidelinkParameters-r16	OPTIONAL,
highSpeedParameters-r16	HighSpeedParameters-r16	OPTIONAL,
mac-Parameters-v16i0	MAC-Parameters-v16i0	OPTIONAL,
mcgRLF-RecoveryViaSCG-r16	ENUMERATED {supported}	OPTIONAL,
resumeWithStoredMCG-SCells-r16	ENUMERATED {supported}	OPTIONAL,
resumeWithStoredSCG-r16	ENUMERATED {supported}	OPTIONAL,
resumeWithSCG-Config-r16	ENUMERATED {supported}	OPTIONAL,
ue-BasedPerfMeas-Parameters-r16	UE-BasedPerfMeas-Parameters-r16	OPTIONAL,
son-Parameters-r16	SON-Parameters-r16	OPTIONAL,
onDemandSIB-Connected-r16	ENUMERATED {supported}	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1640	OPTIONAL
}		
UE-NR-Capability-v1640 ::=	SEQUENCE {	
redirectAtResumeByNAS-r16	ENUMERATED {supported}	OPTIONAL,
phy-ParametersSharedSpectrumChAccess-r16	Phy-ParametersSharedSpectrumChAccess-r16	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1650	OPTIONAL
}		
UE-NR-Capability-v1650 ::=	SEQUENCE {	
mpsPriorityIndication-r16	ENUMERATED {supported}	OPTIONAL,
highSpeedParameters-v1650	HighSpeedParameters-v1650	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1690	OPTIONAL
}		

<code>UE-NR-Capability-v1690 ::=</code>	<code>SEQUENCE {</code>	
<code> ul-RRC-Segmentation-r16</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> nonCriticalExtension</code>	<code>UE-NR-Capability-v1700</code>	<code>OPTIONAL</code>
<code>}</code>		
<code>-- Late non-critical extensions from Rel-16 onwards:</code>		
<code>UE-NR-Capability-v16a0 ::=</code>	<code>SEQUENCE {</code>	
<code> phy-Parameters-v16a0</code>	<code>Phy-Parameters-v16a0</code>	<code>OPTIONAL,</code>
<code> rf-Parameters-v16a0</code>	<code>RF-Parameters-v16a0</code>	<code>OPTIONAL,</code>
<code> nonCriticalExtension</code>	<code>UE-NR-Capability-v16c0</code>	<code>OPTIONAL</code>
<code>}</code>		
<code>UE-NR-Capability-v16c0 ::=</code>	<code>SEQUENCE {</code>	
<code> rf-Parameters-v16c0</code>	<code>RF-Parameters-v16c0</code>	<code>OPTIONAL,</code>
<code> nonCriticalExtension</code>	<code>UE-NR-Capability-v16d0</code>	<code>OPTIONAL</code>
<code>}</code>		
<code>UE-NR-Capability-v16d0 ::=</code>	<code>SEQUENCE {</code>	
<code> featureSets-v16d0</code>	<code>FeatureSets-v16d0</code>	<code>OPTIONAL,</code>
<code> nonCriticalExtension</code>	<code>UE-NR-Capability-v16j0</code>	<code>OPTIONAL</code>
<code>}</code>		
<code>UE-NR-Capability-v16j0 ::=</code>	<code>SEQUENCE {</code>	
<code> rf-Parameters-v16j0</code>	<code>RF-Parameters-v16j0</code>	<code>OPTIONAL,</code>
<code> -- Following field is only for REL-16 late non-critical extensions</code>		
<code> lateNonCriticalExtension</code>	<code>OCTET STRING (CONTAINING UE-NR-Capability-v16k0)</code>	<code>OPTIONAL,</code>
<code> nonCriticalExtension</code>	<code>UE-NR-Capability-v17b0</code>	<code>OPTIONAL</code>
<code>}</code>		
<code>UE-NR-Capability-v16k0 ::=</code>	<code>SEQUENCE {</code>	
<code> featureSets-v16k0</code>	<code>FeatureSets-v16k0</code>	<code>OPTIONAL,</code>
<code> nonCriticalExtension</code>	<code>SEQUENCE {}</code>	<code>OPTIONAL</code>
<code>}</code>		
<code>-- Regular non-critical Rel-17 extensions:</code>		
<code>UE-NR-Capability-v1700 ::=</code>	<code>SEQUENCE {</code>	
<code> inactiveStateP0-Determination-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> highSpeedParameters-v1700</code>	<code>HighSpeedParameters-v1700</code>	<code>OPTIONAL,</code>
<code> powSav-Parameters-v1700</code>	<code>PowSav-Parameters-v1700</code>	<code>OPTIONAL,</code>
<code> mac-Parameters-v1700</code>	<code>MAC-Parameters-v1700</code>	<code>OPTIONAL,</code>
<code> ims-Parameters-v1700</code>	<code>IMS-Parameters-v1700</code>	<code>OPTIONAL,</code>
<code> measAndMobParameters-v1700</code>	<code>MeasAndMobParameters-v1700,</code>	
<code> appLayerMeasParameters-r17</code>	<code>AppLayerMeasParameters-r17</code>	<code>OPTIONAL,</code>
<code> redCapParameters-r17</code>	<code>RedCapParameters-r17</code>	<code>OPTIONAL,</code>
<code> ra-SDT-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> srB-SDT-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> gNB-SideRTT-BasedPDC-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> bh-RLF-DetectionRecovery-Indication-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> nrDC-Parameters-v1700</code>	<code>NRDC-Parameters-v1700</code>	<code>OPTIONAL,</code>
<code> bAP-Parameters-v1700</code>	<code>BAP-Parameters-v1700</code>	<code>OPTIONAL,</code>
<code> musim-GapPreference-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> musimLeaveConnected-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL,</code>
<code> mBS-Parameters-r17</code>	<code>MBS-Parameters-r17,</code>	
<code> nonTerrestrialNetwork-r17</code>	<code>ENUMERATED {supported}</code>	<code>OPTIONAL</code>

```

    ntn-ScenarioSupport-r17          ENUMERATED {gso, ngso}
    sliceInfoforCellReselection-r17  ENUMERATED {supported}
    ue-RadioPagingInfo-r17           UE-RadioPagingInfo-r17
    -- R4 17-2 UL gap pattern for Tx power management
    ul-GapFR2-Pattern-r17            BIT STRING (SIZE (4))
    ntn-Parameters-r17               NTN-Parameters-r17
    nonCriticalExtension              UE-NR-Capability-v1740
}

UE-NR-Capability-v1740 ::=
    redCapParameters-v1740
    nonCriticalExtension
}

UE-NR-Capability-v1750 ::=
    crossCarrierSchedulingConfigurationRelease-r17
    nonCriticalExtension
}

-- Late non-critical extensions from Rel-17 onwards:
UE-NR-Capability-v17b0 ::=
    mac-Parameters-v17b0
    rf-Parameters-v17b0
    ul-RRC-MaxCapaSegments-r17
    nonCriticalExtension
}

UE-NR-Capability-v17c0 ::=
    mac-Parameters-v17c0
    nonCriticalExtension
}

UE-NR-Capability-v17d0 ::=
    featureSets-v17d0
    nonCriticalExtension
}

-- Regular non-critical Rel-18 extensions:
UE-NR-Capability-v1800 ::=
    airToGroundNetwork-r18
    eRedCapParameters-r18
    ncr-Parameters-r18
    softSatelliteSwitchResyncNTN-r18
    hardSatelliteSwitchResyncNTN-r18
    mt-SDT-r18
    mt-SDT-NTN-r18
    inDeviceCoexIndAutonomousDenial-r18
    inDeviceCoexIndFDM-r18
    inDeviceCoexIndTDM-r18
    musim-GapPriorityPreference-r18
    musim-CapabilityRestriction-r18
    dummy
    ra-InsteadCG-SDT-r18
    resumeAfterSDT-Release-r18

```

ENUMERATED {gso, ngso}
 ENUMERATED {supported}
 UE-RadioPagingInfo-r17
 BIT STRING (SIZE (4))
 NTN-Parameters-r17
 UE-NR-Capability-v1740
 SEQUENCE {
 RedCapParameters-v1740,
 UE-NR-Capability-v1750
 SEQUENCE {
 crossCarrierSchedulingConfigurationRelease-r17
 nonCriticalExtension
 SEQUENCE {
 mac-Parameters-v17b0
 RF-Parameters-v17b0
 ENUMERATED {supported}
 UE-NR-Capability-v17c0
 SEQUENCE {
 MAC-Parameters-v17c0
 UE-NR-Capability-v17d0
 SEQUENCE {
 FeatureSets-v17d0
 SEQUENCE {}
 SEQUENCE {
 ENUMERATED {supported}
 ERedCapParameters-r18
 NCR-Parameters-r18
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}
 ENUMERATED {supported}

ul-TrafficInfo-r18	ENUMERATED {supported}	OPTIONAL,
aerialParameters-r18	AerialParameters-r18	OPTIONAL,
--R4 40-2: beam steering		
ntn-VSAT-AntennaType-r18	ENUMERATED {electronic, mechanical}	OPTIONAL,
--R4 40-1: VSAT UE type in NTN		
ntn-VSAT-MobilityType-r18	ENUMERATED {fixed, mobile}	OPTIONAL,
ntn-Parameters-v1820	NTN-Parameters-v1820	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1830	OPTIONAL
}		
UE-NR-Capability-v1830 ::=	SEQUENCE {	
sib19-Support-r18	ENUMERATED {supported}	OPTIONAL,
nonCriticalExtension	UE-NR-Capability-v1860	OPTIONAL
}		
UE-NR-Capability-v1860 ::=	SEQUENCE {	
ntn-CHO-OnlyLocationTimeTrigger-r18	ENUMERATED {supported}	OPTIONAL,
nonCriticalExtension	SEQUENCE{}	OPTIONAL
}		
UE-NR-CapabilityAddXDD-Mode ::=	SEQUENCE {	
phy-ParametersXDD-Diff	Phy-ParametersXDD-Diff	OPTIONAL,
mac-ParametersXDD-Diff	MAC-ParametersXDD-Diff	OPTIONAL,
measAndMobParametersXDD-Diff	MeasAndMobParametersXDD-Diff	OPTIONAL
}		
UE-NR-CapabilityAddXDD-Mode-v1530 ::=	SEQUENCE {	
eutra-ParametersXDD-Diff	EUTRA-ParametersXDD-Diff	
}		
UE-NR-CapabilityAddFRX-Mode ::=	SEQUENCE {	
phy-ParametersFRX-Diff	Phy-ParametersFRX-Diff	OPTIONAL,
measAndMobParametersFRX-Diff	MeasAndMobParametersFRX-Diff	OPTIONAL
}		
UE-NR-CapabilityAddFRX-Mode-v1540 ::=	SEQUENCE {	
ims-ParametersFRX-Diff	IMS-ParametersFRX-Diff	OPTIONAL
}		
UE-NR-CapabilityAddFRX-Mode-v1610 ::=	SEQUENCE {	
powSav-ParametersFRX-Diff-r16	PowSav-ParametersFRX-Diff-r16	OPTIONAL,
mac-ParametersFRX-Diff-r16	MAC-ParametersFRX-Diff-r16	OPTIONAL
}		
BAP-Parameters-r16 ::=	SEQUENCE {	
flowControlBH-RLC-ChannelBased-r16	ENUMERATED {supported}	OPTIONAL,
flowControlRouting-ID-Based-r16	ENUMERATED {supported}	OPTIONAL
}		
BAP-Parameters-v1700 ::=	SEQUENCE {	
bapHeaderRewriting-Rerouting-r17	ENUMERATED {supported}	OPTIONAL,
bapHeaderRewriting-Routing-r17	ENUMERATED {supported}	OPTIONAL
}		

```
MBS-Parameters-r17 ::=
    maxMRB-Add-r17
}
-- TAG-UE-NR-CAPABILITY-STOP
-- ASN1STOP
```

SEQUENCE {
 INTEGER (1..16)
}

OPTIONAL

UE-NR-Capability field descriptions
featureSetCombinations A list of <i>FeatureSetCombination</i> :s for <i>supportedBandCombinationList</i> in <i>UE-NR-Capability</i> . The <i>FeatureSetDownlink</i> :s and <i>FeatureSetUplink</i> :s referred to from these <i>FeatureSetCombination</i> :s are defined in the <i>featureSets</i> list in <i>UE-NR-Capability</i> .

UE-NR-Capability-v1540 field descriptions
fr1-fr2-Add-UE-NR-Capabilities This instance of <i>UE-NR-CapabilityAddFRX-Mode</i> does not include any other fields than <i>csi-RS-IM-ReceptionForFeedback</i> / <i>csi-RS-ProcFrameworkForSRS</i> / <i>csi-ReportFramework</i> .

– UE-RadioPagingInfo

The IE *UE-RadioPagingInfo* contains UE capability information needed for paging.

UE-RadioPagingInfo information element

```
-- ASN1START
-- TAG-UE-RADIOPAGINGINFO-START

UE-RadioPagingInfo-r17 ::=
    -- R1 29-1: Paging enhancement
    pei-SubgroupingSupportBandList-r17
    ...
}
-- TAG-UE-RADIOPAGINGINFO-STOP
-- ASN1STOP
```

SEQUENCE {
 SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR
 OPTIONAL,
}

6.3.4 Other information elements

– *AbsoluteTimeInfo*

The IE *AbsoluteTimeInfo* indicates an absolute time in a format YY-MM-DD HH:MM:SS and using BCD encoding. The first/ leftmost bit of the bit string contains the most significant bit of the most significant digit of the year and so on.

***AbsoluteTimeInfo* information element**

```
-- ASN1START
-- TAG-ABSOLUTETIMEINFO-START
```

```
AbsoluteTimeInfo-r16 ::= BIT STRING (SIZE (48))
```

```
-- TAG-ABSOLUTETIMEINFO-STOP
-- ASN1STOP
```

– *AppLayerIdleInactiveConfig*

The IE *AppLayerIdleInactiveConfig* indicates parameters specific to application layer measurements applicable to RRC_IDLE and RRC_INACTIVE. The configured application layer measurement is also applicable to RRC_CONNECTED.

***AppLayerIdleInactiveConfig* information element**

```
-- ASN1START
-- TAG-APPLAYERIDLEINACTIVECONFIG-START
```

```
AppLayerIdleInactiveConfig-r18 ::= SEQUENCE {
    measConfigAppLayerId-r18      MeasConfigAppLayerId-r17,
    serviceType-r18               ENUMERATED {streaming, mtsi, vr, spare5, spare4, spare3, spare2, spare1} OPTIONAL, -- Need M
    appLayerMeasPriority-r18       INTEGER (1..16) OPTIONAL, -- Need M
    qoe-Reference-r18             OCTET STRING (SIZE (6)) OPTIONAL, -- Need M
    qoe-MeasurementType-r18       ENUMERATED {sbased, mbased} OPTIONAL, -- Need M
    qoe-AreaScope-r18             Qoe-AreaScope-r18 OPTIONAL, -- Need M
    mce-Id-r18                    OCTET STRING (SIZE (1)) OPTIONAL, -- Need M
    availableRAN-VisibleMetrics-r18 AvailableRAN-VisibleMetrics-r18 OPTIONAL, -- Need M
    ...
}
```

```
Qoe-AreaScope-r18 ::= CHOICE {
    cellGlobalIdList      CellGlobalIdList-r16,
    trackingAreaCodeList  TrackingAreaCodeList-r16,
    trackingAreaIdentityList TrackingAreaIdentityList-r16,
    plmn-IdentityList     PLMN-IdentityList2-r16,
    ...
}
```

```
AvailableRAN-VisibleMetrics-r18 ::= SEQUENCE {
```

```

    appLayerBufferLevelList-r18      ENUMERATED {true}
    playoutDelayForMediaStartup-r18  ENUMERATED {true}
    ...
}

-- TAG-APPLAYERIDLEINACTIVECONFIG-STOP
-- ASN1STOP

```

OPTIONAL, -- Need M
OPTIONAL, -- Need M

<i>AppLayerIdleInactiveConfig</i> field descriptions
<i>appLayerBufferLevelList</i> The field defines whether the buffer level for DASH streaming and VR service types can be collected as a RAN visible QoE metric from the UE.
<i>qoe-AreaScope</i> The field contains the area where the application layer measurement shall start if an application layer session starts.
<i>qoe-MeasurementType</i> Indicates whether the application layer measurement is signalling based or management based.
<i>qoe-Reference</i> Indicates the QoE Reference as defined in TS 28.405 [80], clause 5.2.
<i>mce-id</i> The field contains the Measurement Collection Entity ID.
<i>playoutDelayForMediaStartup</i> The field defines whether the playout delay for DASH streaming and VR service types can be collected as a RAN visible QoE metric from the UE.

— *AppLayerMeasConfig*

The IE *AppLayerMeasConfig* indicates configuration of application layer measurements.

AppLayerMeasConfig information element

```

-- ASN1START
-- TAG-APPLAYERMEASCONFIG-START

AppLayerMeasConfig-r17 ::= SEQUENCE {
    measConfigAppLayerToAddModList-r17 SEQUENCE (SIZE (1..maxNrofAppLayerMeas-r17)) OF MeasConfigAppLayer-r17 OPTIONAL, -- Need N
    measConfigAppLayerToReleaseList-r17 SEQUENCE (SIZE (1..maxNrofAppLayerMeas-r17)) OF MeasConfigAppLayerId-r17 OPTIONAL, -- Need N
    rrc-SegAllowedSRB4-r17 ENUMERATED {enabled} OPTIONAL, -- Need R
    ...
    [[
        rrc-SegAllowedSRB5-r18 ENUMERATED {enabled} OPTIONAL, -- Need R
        idleInactiveReportAllowed-r18 ENUMERATED {enabled} OPTIONAL -- Need R
    ]]
}

MeasConfigAppLayer-r17 ::= SEQUENCE {
    measConfigAppLayerId-r17 MeasConfigAppLayerId-r17,
    measConfigAppLayerContainer-r17 OCTET STRING (SIZE (1..8000)) OPTIONAL, -- Need N
    serviceType-r17 ENUMERATED {streaming, mtsi, vr, spare5, spare4, spare3, spare2, spare1} OPTIONAL, -- Need M
    pauseReporting-r17 BOOLEAN OPTIONAL, -- Need M
}

```



```

    transmissionOfSessionStartStop-r17 BOOLEAN
    ran-VisibleParameters-r17 SetupRelease {RAN-VisibleParameters-r17}
    ...,
    [[
    reportingSRB-r18 ENUMERATED {srb4, srb5}
    appLayerMeasPriority-r18 INTEGER (1..16)
    appLayerIdleInactiveConfig-r18 SetupRelease {AppLayerIdleInactiveConfig-r18}
    ]]
  }

RAN-VisibleParameters-r17 ::= SEQUENCE {
    ran-VisiblePeriodicity-r17 ENUMERATED {ms120, ms240, ms480, ms640, ms1024}
    numberOfBufferLevelEntries-r17 INTEGER (1..8)
    reportPlayoutDelayForMediaStartup-r17 BOOLEAN
    ...,
    [[
    ran-VisibleReportingSRB-r18 ENUMERATED {srb4, srb5}
    ]]
  }

-- TAG-APPLAYERMEASCONFIG-STOP
-- ASN1STOP

```

```

OPTIONAL, -- Need M
OPTIONAL, -- Cond ServiceType

```

```

OPTIONAL, -- Cond QoENRDC
OPTIONAL, -- Need M
OPTIONAL -- Need M

```

```

OPTIONAL, -- Need S
OPTIONAL, -- Need R
OPTIONAL, -- Need M

```

```

OPTIONAL -- Cond QoENRDC

```

<i>AppLayerMeasConfig</i> field descriptions
<i>appLayerMeasPriority</i> The field indicates the priority of the application layer measurement configuration, where a higher value indicates lower priority. If the field is not configured, the application layer measurement configuration has the lowest priority.
<i>idleInactiveReportAllowed</i> The field indicates whether transmission of application layer measurement configurations and reports for application layer measurements applicable to RRC_IDLE and/or RRC_INACTIVE is allowed in the cell where the field is received. If the field is not configured, transmission of application layer measurement reports and configurations for RRC_IDLE/RRC_INACTIVE is not allowed.
<i>measConfigAppLayerContainer</i> The field contains configuration of application layer measurements, see Annex L (normative) in TS 26.247 [68], clause 16.5 in TS 26.114 [69] and clause 9.4 in TS 26.118 [70].
<i>measConfigAppLayerId</i> The field contains the identity of the application layer measurements. When application layer measurements are configured for an SCG, the <i>measConfigAppLayerId</i> is obtained according to TS 38.423 [37], clauses 8.3.1 and 8.3.3.
<i>pauseReporting</i> The field indicates whether the transmission of <i>measReportAppLayerContainer</i> is paused or not. Value <i>true</i> indicates the transmission of <i>measReportAppLayerContainer</i> is paused; value <i>false</i> indicates the transmission of <i>measReportAppLayerContainer</i> is not paused.
<i>ran-VisibleParameters</i> The field indicates whether RAN visible application layer measurements shall be reported or not.
<i>ran-VisibleReportingSRB</i> The field indicates the SRB to be used for transmission of RAN visible application layer measurement reports.
<i>reportingSRB</i> The field indicates the SRB to be used for transmission of encapsulated application layer measurement reports.
<i>rrc-SegAllowedSRB4</i> This field indicates that RRC segmentation of <i>MeasurementReportAppLayer</i> is enabled on SRB4. The field is only configured for an MCG. It may be present only if the UE supports RRC segmentation of the <i>MeasurementReportAppLayer</i> message.
<i>rrc-SegAllowedSRB5</i> This field indicates that RRC segmentation of <i>MeasurementReportAppLayer</i> is enabled on SRB5. The field is only configured for an SCG. It may be present only if the UE supports RRC segmentation of the <i>MeasurementReportAppLayer</i> message.
<i>serviceType</i> Indicates the type of application layer measurement. Value <i>streaming</i> indicates Quality of Experience Measurement Collection for streaming services (see TS 26.247 [68]), value <i>mtsi</i> indicates Quality of Experience Measurement Collection for MTSI (see TS 26.114 [69]) and value <i>vr</i> indicates Quality of Experience Measurement Collection for VR service (see TS 26.118 [70]). The network always configures <i>serviceType</i> when application layer measurements are initially configured and at <i>fullConfig</i> .
<i>transmissionOfSessionStartStop</i> Value <i>true</i> indicates that the UE shall transmit indications when the measurement session in the application layer starts and stops. Value <i>false</i> indicates that the UE shall not transmit any session status indications. The UE transmits a session start indication upon configuration of this field set to value <i>true</i> if a session already has started in the application layer.

<i>RAN-VisibleParameters</i> field descriptions
<i>numberOfBufferLevelEntries</i> The field contains the maximum number of buffer level entries that can be reported for RAN visible application layer measurements. This field is also used by application layer to calculate the interval of RAN visible buffer level measurement, which is equal to the periodicity of RAN visible application layer measurements reporting divided by <i>numberOfBufferLevelEntries</i> .
<i>ran-VisiblePeriodicity</i> The field indicates the periodicity of RAN visible application layer measurements reporting. Value <i>ms120</i> indicates 120 ms, value <i>ms240</i> indicates 240 ms and so on. If this field is absent, the periodicity of RAN visible application layer measurements reporting is the same as the reporting periodicity indicated in <i>measConfigAppLayerContainer</i> .
<i>reportPayoutDelayForMediaStartup</i> The field indicates whether the UE shall report Payout Delay for Media Startup for RAN visible application layer measurements.

Conditional Presence	Explanation
<i>QoENRDC</i>	This field is optionally present, Need M, when QoE for an NR-DC configuration is configured, i.e. when either QoE for an SCG is configured or when SRB5 is configured. Otherwise, it is absent.
<i>ServiceType</i>	This field is optionally present, Need M, when <i>serviceType</i> is set to <i>streaming</i> or <i>vr</i> . Otherwise, it is absent.

– *AreaConfiguration*

The *AreaConfiguration* indicates area for which UE is requested to perform measurement logging. If not configured, measurement logging is not restricted to specific cells or tracking areas but applies as long as the RPLMN is contained in *plmn-IdentityList* stored in *VarLogMeasReport* or the registered SNPN identity is included in *snpn-ConfigID-List* stored in *VarLogMeasReport*.

AreaConfiguration information element

```
-- ASN1START
-- TAG-AREACONFIGURATION-START

AreaConfiguration-r16 ::=
  areaConfig-r16
  interFreqTargetList-r16
}
SEQUENCE {
  AreaConfig-r16,
  SEQUENCE(SIZE (1..maxFreq)) OF InterFreqTargetInfo-r16
OPTIONAL -- Need R

AreaConfiguration-r17 ::=
  areaConfig-r17
  interFreqTargetList-r17
}
SEQUENCE {
  AreaConfig-r16
  SEQUENCE(SIZE (1..maxFreq)) OF InterFreqTargetInfo-r16
OPTIONAL, -- Need R
OPTIONAL -- Need R

AreaConfiguration-v1800 ::=
  cag-ConfigList-r18
  snpn-ConfigList-r18
}
CHOICE {
  CAG-ConfigList-r18,
  SNPN-ConfigList-r18

AreaConfig-r16 ::=
  cellGlobalIdList-r16
}
CHOICE {
  CellGlobalIdList-r16,
```

```

        trackingAreaCodeList-r16      TrackingAreaCodeList-r16,
        trackingAreaIdentityList-r16   TrackingAreaIdentityList-r16
    }

InterFreqTargetInfo-r16 ::= SEQUENCE {
    dl-CarrierFreq-r16      ARFCN-ValueNR,
    cellList-r16            SEQUENCE (SIZE (1..32)) OF PhysCellId
}

CellGlobalIdList-r16 ::= SEQUENCE (SIZE (1..32)) OF CGI-Info-Logging-r16

TrackingAreaCodeList-r16 ::= SEQUENCE (SIZE (1..8)) OF TrackingAreaCode

TrackingAreaIdentityList-r16 ::= SEQUENCE (SIZE (1..8)) OF TrackingAreaIdentity-r16

TrackingAreaIdentity-r16 ::= SEQUENCE {
    plmn-Identity-r16      PLMN-Identity,
    trackingAreaCode-r16   TrackingAreaCode
}

CAG-ConfigList-r18 ::= SEQUENCE (SIZE (1..maxNPN-r16)) OF CAG-Config-r18

CAG-Config-r18 ::= SEQUENCE {
    plmn-Identity-r18      PLMN-Identity,
    cag-IdentityList-r18   SEQUENCE (SIZE (1..maxNPN-r16)) OF BIT STRING (SIZE (32))
}

SNPN-ConfigList-r18 ::= CHOICE {
    snpn-ConfigCellIdList-r18 SNPN-ConfigCellIdList-r18,
    snpn-ConfigTAI-List-r18   SNPN-ConfigTAI-List-r18,
    snpn-ConfigID-List-r18    SNPN-ConfigID-List-r18
}

SNPN-ConfigCellIdList-r18 ::= SEQUENCE (SIZE (1..maxSNPN-ConfigCellId-r18)) OF SNPN-ConfigCellId-r18

SNPN-ConfigCellId-r18 ::= SEQUENCE {
    cgi-Identity-r18      CGI-Info-Logging-r16,
    nid-IdentityList-r18  SEQUENCE (SIZE (1..maxNPN-r16)) OF NID-r16
}

SNPN-ConfigTAI-List-r18 ::= SEQUENCE (SIZE (1..maxSNPN-ConfigTAI-r18)) OF SNPN-ConfigTAI-r18

SNPN-ConfigTAI-r18 ::= SEQUENCE {
    tai-Identity-r18      TrackingAreaIdentity-r16,
    nid-IdentityList-r18  SEQUENCE (SIZE (1..maxNPN-r16)) OF NID-r16
}

SNPN-ConfigID-List-r18 ::= SEQUENCE (SIZE (1..maxSNPN-ConfigID-r18)) OF SNPN-ConfigID-r18

SNPN-ConfigID-r18 ::= SEQUENCE {
    plmn-Identity-r18      PLMN-Identity,
    nid-IdentityList-r18   SEQUENCE (SIZE (1..maxNPN-r16)) OF NID-r16
}

-- TAG-AREACONFIGURATION-STOP

```

-- ASN1STOP

AreaConfiguration field descriptions
cag-IdentityList The <i>cag-IdentityList</i> contains one or more CAG IDs. A PLMN ID may be present more than once within <i>CAG-ConfigList</i> .
InterFreqTargetInfo If configured, it indicates the neighbouring frequency and cells for which UE is requested to perform measurement logging. It can include sync raster or non-sync raster frequencies.
nid-IdentityList The <i>nid-IdentityList</i> contains one or more NID. All NIDs associated to the same PLMN ID are listed in the same <i>nid-IdentityList</i> entry.

— *BT-NameList*

The IE *BT-NameList* is used to indicate the names of the Bluetooth beacon which the UE is configured to measure.

***BT-NameList* information element**

```
-- ASN1START
-- TAG-BTNAMELIST-START

BT-NameList-r16 ::=          SEQUENCE (SIZE (1..maxBT-Name-r16)) OF BT-Name-r16

BT-Name-r16 ::=              OCTET STRING (SIZE (1..248))

-- TAG-BTNAMELIST-STOP
-- ASN1STOP
```

BT-NameList field descriptions
bt-Name If configured, the UE only performs Bluetooth measurements according to the names identified. For each name, it refers to LOCAL NAME defined in Bluetooth specification [51].

— *DedicatedInfoF1c*

The IE *DedicatedInfoF1c* is used to transfer IAB-DU specific F1-C related information between the network and the IAB node. The carried information consists of F1AP message encapsulated in SCTP/IP or F1-C related (SCTP)/IP packet, see TS 38.472 [64]. The RRC layer is transparent for this information.

***DedicatedInfoF1c* information element**

```
-- ASN1START
-- TAG-DEDICATEDINFOF1C-START

DedicatedInfoF1c-r17 ::=      OCTET STRING
```

```
-- TAG-DEDICATEDINFOF1C-STOP
-- ASN1STOP
```

– *EUTRA-AllowedMeasBandwidth*

The IE *EUTRA-AllowedMeasBandwidth* is used to indicate the maximum allowed measurement bandwidth on a carrier frequency as defined by the parameter Transmission Bandwidth Configuration "N_{RB}" in TS 36.104 [33]. The values *mbw6*, *mbw15*, *mbw25*, *mbw50*, *mbw75*, *mbw100* indicate 6, 15, 25, 50, 75 and 100 resource blocks, respectively.

EUTRA-AllowedMeasBandwidth information element

```
-- ASN1START
-- TAG-EUTRA-ALLOWEDMEASBANDWIDTH-START
```

```
EUTRA-AllowedMeasBandwidth ::= ENUMERATED {mbw6, mbw15, mbw25, mbw50, mbw75, mbw100}
```

```
-- TAG-EUTRA-ALLOWEDMEASBANDWIDTH-STOP
-- ASN1STOP
```

– *EUTRA-MBSFN-SubframeConfigList*

The IE *EUTRA-MBSFN-SubframeConfigList* is used to define an E-UTRA MBSFN subframe pattern (for the purpose of NR rate matching).

EUTRA-MBSFN-SubframeConfigList information element

```
-- ASN1START
-- TAG-EUTRA-MBSFN-SUBFRAMECONFIGLIST-START
```

```
EUTRA-MBSFN-SubframeConfigList ::= SEQUENCE (SIZE (1..maxMBSFN-Allocations)) OF EUTRA-MBSFN-SubframeConfig
```

```
EUTRA-MBSFN-SubframeConfig ::= SEQUENCE {
    radioframeAllocationPeriod    ENUMERATED {n1, n2, n4, n8, n16, n32},
    radioframeAllocationOffset    INTEGER (0..7),
    subframeAllocation1           CHOICE {
        oneFrame                  BIT STRING (SIZE(6)),
        fourFrames                BIT STRING (SIZE(24))
    },
    subframeAllocation2           CHOICE {
        oneFrame                  BIT STRING (SIZE(2)),
        fourFrames                BIT STRING (SIZE(8))
    }
    ...
}
```

OPTIONAL, -- Need R

```
-- TAG-EUTRA-MBSFN-SUBFRAMECONFIGLIST-STOP
-- ASN1STOP
```

<i>EUTRA-MBSFN-SubframeConfig</i> field descriptions
radioframeAllocationOffset Field as defined in <i>MBSFN-SubframeConfig</i> in TS 36.331 [10].
radioframeAllocationPeriod Field as defined in <i>MBSFN-SubframeConfig</i> in TS 36.331 [10], where <i>SFN</i> refers to the SFN of the NR serving cell.
subframeAllocation1 Field as defined in <i>MBSFN-SubframeConfig</i> in TS 36.331 [10], where the UE assumes the duplex mode (FDD or TDD) of the NR cell for which the <i>E-UTRA-MBSFN-SubframeConfig</i> is provided.
subframeAllocation2 Field as defined in <i>MBSFN-SubframeConfig-v1430</i> in TS 36.331 [10], where the UE assumes the duplex mode (FDD or TDD) of the NR cell for which the <i>E-UTRA-MBSFN-SubframeConfig</i> is provided.

– *EUTRA-MultiBandInfoList*

The IE *EUTRA-MultiBandInfoList* indicates the list of frequency bands in addition to the band represented by *CarrierFreq* for which cell reselection parameters are common, and a list of *additionalPmax* and *additionalSpectrumEmission*.

EUTRA-MultiBandInfoList information element

```

-- ASN1START
-- TAG-EUTRA-MULTIBANDINFOLIST-START

EUTRA-MultiBandInfoList ::=      SEQUENCE (SIZE (1..maxMultiBands)) OF EUTRA-MultiBandInfo

EUTRA-MultiBandInfo ::=          SEQUENCE {
    eutra-FreqBandIndicator      FreqBandIndicatorEUTRA,
    eutra-NS-PmaxList            EUTRA-NS-PmaxList                OPTIONAL    -- Need R
}

-- TAG-EUTRA-MULTIBANDINFOLIST-STOP
-- ASN1STOP

```

– *EUTRA-MultiBandInfoListAerial*

The IE *EUTRA-MultiBandInfoListAerial* indicates the list of frequency bands for aerial UE in addition to the band represented by *CarrierFreq* for which cell reselection parameters are common, and a list of *additionalPmax* and *additionalSpectrumEmission*.

EUTRA-MultiBandInfoListAerial information element

```

-- ASN1START
-- TAG-EUTRA-MULTIBANDINFOLISTAERIAL-START

EUTRA-MultiBandInfoListAerial-r18 ::=      SEQUENCE (SIZE (1..maxMultiBands)) OF EUTRA-MultiBandInfoAerial-r18

```

```

EUTRA-MultiBandInfoAerial-r18 ::=
    eutra-FreqBandIndicator-r18
    eutra-NS-PmaxListAerial-r18
}
-- TAG-EUTRA-MULTIBANDINFOLISTAERIAL-STOP
-- ASN1STOP

```

SEQUENCE {
 FreqBandIndicatorEUTRA,
 EUTRA-NS-PmaxList
 OPTIONAL -- Need R

— *EUTRA-NS-PmaxList*

The IE *EUTRA-NS-PmaxList* concerns a list of *additionalPmax* and *additionalSpectrumEmission*, as defined in TS 36.101 [22], clause 6, for a given frequency band.

***EUTRA-NS-PmaxList* information element**

```

-- ASN1START
-- TAG-EUTRA-NS-PMAXLIST-START

EUTRA-NS-PmaxList ::=
    SEQUENCE (SIZE (1..maxEUTRA-NS-Pmax)) OF EUTRA-NS-PmaxValue

EUTRA-NS-PmaxValue ::=
    SEQUENCE {
        additionalPmax      INTEGER (-30..33)
        additionalSpectrumEmission  INTEGER (1..288)
    }
-- TAG-EUTRA-NS-PMAXLIST-STOP
-- ASN1STOP

```

OPTIONAL, -- Need R
 OPTIONAL -- Need R

— *EUTRA-PhysCellId*

The IE *EUTRA-PhysCellId* is used to indicate the physical layer identity of the cell, as defined in TS 36.211 [31].

***EUTRA-PhysCellId* information element**

```

-- ASN1START
-- TAG-EUTRA-PHYSCELLID-START

EUTRA-PhysCellId ::=
    INTEGER (0..503)

-- TAG-EUTRA-PHYSCELLID-STOP
-- ASN1STOP

```


— *EUTRA-PhysCellIdRange*

The IE *EUTRA-PhysCellIdRange* is used to encode either a single or a range of physical cell identities. The range is encoded by using a *start* value and by indicating the number of consecutive physical cell identities (including *start*) in the range. For fields comprising multiple occurrences of *EUTRA-PhysCellIdRange*, NW may configure overlapping ranges of physical cell identities.

EUTRA-PhysCellIdRange information element

```
-- ASN1START
-- TAG-EUTRA-PHYSCELLIDRANGE-START

EUTRA-PhysCellIdRange ::= SEQUENCE {
    start          EUTRA-PhysCellId,
    range          ENUMERATED {n4, n8, n12, n16, n24, n32, n48, n64, n84, n96,
                                n128, n168, n252, n504, spare2, spare1} OPTIONAL -- Need N
}

-- TAG-EUTRA-PHYSCELLIDRANGE-STOP
-- ASN1STOP
```

— *EUTRA-PresenceAntennaPort1*

The IE *EUTRA-PresenceAntennaPort1* is used to indicate whether all the neighbouring cells use Antenna Port 1. When set to *true*, the UE may assume that at least two cell-specific antenna ports are used in all neighbouring cells.

EUTRA-PresenceAntennaPort1 information element

```
-- ASN1START
-- TAG-EUTRA-PRESENCEANTENNAPO1-START

EUTRA-PresenceAntennaPort1 ::= BOOLEAN

-- TAG-EUTRA-PRESENCEANTENNAPO1-STOP
-- ASN1STOP
```

— *EUTRA-Q-OffsetRange*

The IE *EUTRA-Q-OffsetRange* is used to indicate a cell, or frequency specific offset to be applied when evaluating triggering conditions for measurement reporting. The value in dB. Value *dB-24* corresponds to -24 dB, value *dB-22* corresponds to -22 dB and so on.

EUTRA-Q-OffsetRange information element

```
-- ASN1START
-- TAG-EUTRA-Q-OFFSETRANGE-START
```

```
EUTRA-Q-OffsetRange ::=
    ENUMERATED {
        dB-24, dB-22, dB-20, dB-18, dB-16, dB-14,
        dB-12, dB-10, dB-8, dB-6, dB-5, dB-4, dB-3,
        dB-2, dB-1, dB0, dB1, dB2, dB3, dB4, dB5,
        dB6, dB8, dB10, dB12, dB14, dB16, dB18,
        dB20, dB22, dB24}

-- TAG-EUTRA-Q-OFFSETRANGE-STOP
-- ASN1STOP
```

— *IAB-IP-Address*

The IE *IAB-IP-Address* is used to indicate the IP address/prefix.

IAB-IP-Address information element

```
-- ASN1START
-- TAG-IABIPADDRESS-START

IAB-IP-Address-r16 ::= CHOICE {
    iIPv4-Address-r16      BIT STRING (SIZE(32)),
    iIPv6-Address-r16      BIT STRING (SIZE(128)),
    iIPv6-Prefix-r16       BIT STRING (SIZE(64)),
    ...
}

-- TAG-IABIPADDRESS-STOP
-- ASN1STOP
```

<i>IAB-IP-Address</i> field descriptions	
<i>iIPv4-Address</i>	This field is used to provide the allocated IPv4 address.
<i>iIPv6-Address</i>	This field is used to provide the allocated IPv6 address.
<i>iIPv6-Prefix</i>	This field is used to provide the allocated IPv6 prefix.

— *IAB-IP-AddressIndex*

The IE *IAB-IP-AddressIndex* is used to identify a configuration of an IP address.

IAB-IP-AddressIndex information element

```
-- ASN1START
-- TAG-IABIPADDRESSINDEX-START
```

IAB-IP-AddressIndex-r16 ::= INTEGER (1..maxIAB-IP-Address-r16)

-- TAG-IABIPADDRESSINDEX-STOP
-- ASN1STOP

— *IAB-IP-Usage*

The IE *IAB-IP-Usage* is used to indicate the usage of the assigned IP address/prefix.

IAB-IP-Usage information element

-- ASN1START
-- TAG-IAB-IP-USAGE-START

IAB-IP-Usage-r16 ::= ENUMERATED {f1-C, f1-U, non-F1, spare}

-- TAG-IAB-IP-USAGE-STOP
-- ASN1STOP

— *LoggingDuration*

The *LoggingDuration* indicates the duration for which UE is requested to perform measurement logging. Value min10 corresponds to 10 minutes, value min20 corresponds to 20 minutes and so on.

LoggingDuration information element

-- ASN1START
-- TAG-LOGGINGDURATION-START

LoggingDuration-r16 ::= ENUMERATED {
min10, min20, min40, min60, min90, min120, spare2, spare1}

-- TAG-LOGGINGDURATION-STOP
-- ASN1STOP

— *LoggingInterval*

The *LoggingInterval* indicates the periodicity for logging measurement results. Value ms1280 corresponds to 1.28s, value ms2560 corresponds to 2.56s and so on. Value infinity means it is equal to the configured value of the *LoggingDuration* IE.

LoggingInterval information element

-- ASN1START

```
-- TAG-LOGGINGINTERVAL-START

LoggingInterval-r16 ::=  ENUMERATED {
                           ms320, ms640, ms1280, ms2560, ms5120, ms10240, ms20480,
                           ms30720, ms40960, ms61440 , infinity}

-- TAG-LOGGINGINTERVAL-STOP
-- ASN1STOP
```

— *LogMeasResultListBT*

The IE *LogMeasResultListBT* covers measured results for Bluetooth.

LogMeasResultListBT information element

```
-- ASN1START
-- TAG-LOGMEASRESULTLISTBT-START

LogMeasResultListBT-r16 ::= SEQUENCE (SIZE (1..maxBT-IdReport-r16)) OF LogMeasResultBT-r16

LogMeasResultBT-r16 ::= SEQUENCE {
    bt-Addr-r16          BIT STRING (SIZE (48)),
    rssi-BT-r16          INTEGER (-128..127)      OPTIONAL,
    ...
}

-- TAG-LOGMEASRESULTLISTBT-STOP
-- ASN1STOP
```

LogMeasResultListBT field descriptions	
bt-Addr	This field indicates the Bluetooth public address of the Bluetooth beacon as defined in TS 37.355 [49].
rssi-BT	This field provides the beacon received signal strength indicator (RSSI) in dBm as defined in TS 37.355 [49].

— *LogMeasResultListWLAN*

The IE *LogMeasResultListWLAN* covers measured results for WLAN.

LogMeasResultListWLAN information element

```
-- ASN1START
-- TAG-LOGMEASRESULTLISTWLAN-START

LogMeasResultListWLAN-r16 ::= SEQUENCE (SIZE (1..maxWLAN-Id-Report-r16)) OF LogMeasResultWLAN-r16
```

```
LogMeasResultWLAN-r16 ::=
    wlan-Identifiers-r16
    rssiWLAN-r16
    rtt-WLAN-r16
    ...
}

WLAN-Identifiers-r16 ::=
    ssid-r16
    bssid-r16
    hessid-r16
    ...
}

WLAN-RSSI-Range-r16 ::= INTEGER(0..141)

WLAN-RTT-r16 ::=
    rttValue-r16
    rttUnits-r16
    ...
    rttAccuracy-r16
    ...
}

-- TAG-LOGMEASRESULTLISTWLAN-STOP
-- ASN1STOP
```

LogMeasResultListWLAN field descriptions
bssid Basic Service Set Identifier (BSSID) defined in IEEE 802.11-2012 [50].
hessid Homogenous Extended Service Set Identifier (HESSID) defined in IEEE 802.11-2012 [50].

LogMeasResultListWLAN field descriptions
<i>rsstiWLAN</i> Measured WLAN RSSI result in dBm. The IE WLAN-RSSI-Range specifies the value range used in WLAN RSSI measurements and thresholds. Integer value for WLAN RSSI measurements is according to mapping table in TS 36.133 [40]. Value 0 corresponds to –infinity, value 1 to -100dBm, value 2 to -99dBm, and so on (i.e. in steps of 1dBm) until value 140, which corresponds to 39dBm, while value 141 corresponds to +infinity.
<i>rtt-WLAN</i> This field provides the measured roundtrip time between the target device and WLAN AP and optionally the accuracy expressed as the standard deviation of the delay. Units for each of these are 1000ns, 100ns, 10ns, 1ns, and 0.1ns as defined in TS 37.355 [49].
<i>rttValue</i> This field specifies the Round Trip Time (RTT) measurement between the target device and WLAN AP in units given by the field rttUnits as defined in TS 37.355 [49].
<i>rttUnits</i> This field specifies the Units for the fields rttValue and rttAccuracy. The available Units are 1000ns, 100ns, 10ns, 1ns, and 0.1ns as defined in TS 37.355 [49].
<i>rttAccuracy</i> This field provides the estimated accuracy of the provided rttValue expressed as the standard deviation in units given by the field rttUnits as defined in TS 37.355 [49].
<i>ssid</i> Service Set Identifier (SSID) defined in IEEE 802.11-2012 [50].
<i>wlan-Identifiers</i> Indicates the WLAN parameters used for identification of the WLAN for which the measurement results are applicable.

– ***MeasConfigAppLayerId***

The IE *MeasConfigAppLayerId* identifies the application layer measurement.

***MeasConfigAppLayerId* information element**

```
-- ASN1START
-- TAG-MEASCONFIGAPPLAYERID-START

MeasConfigAppLayerId-r17 ::= INTEGER (0..maxNrofAppLayerMeas-1-r17)

-- TAG-MEASCONFIGAPPLAYERID-STOP
-- ASN1STOP
```

– ***OtherConfig***

The IE *OtherConfig* contains configuration related to miscellaneous other configurations.

***OtherConfig* information element**

```
-- ASN1START
-- TAG-OTHERCONFIG-START

OtherConfig ::=
    delayBudgetReportingConfig
    release
    SEQUENCE {
        CHOICE{
            NULL,
```



```

OtherConfig-v1830 ::=
    sl-PRS-AssistanceConfigNR-r18
}
SEQUENCE {
    ENUMERATED {true}
OPTIONAL -- Need R

IDC-AssistanceConfig-v1800 ::=
    idc-FDM-AssistanceConfig-r18
    idc-TDM-AssistanceConfig-r18
}
SEQUENCE {
    SetupRelease {IDC-FDM-AssistanceConfig-r18}
    ENUMERATED {setup}
OPTIONAL, -- Need M
OPTIONAL -- Cond FDM

MultiRx-PreferenceReportingConfigFR2-r18 ::= SEQUENCE {
    multiRx-PreferenceReportingConfigFR2ProhibitTimer-r18
}
ENUMERATED {
    s0, s0dot5, s1, s2, s3, s4, s5, s6, s7,
    s8, s9, s10, s20, s30, spare2, spare1}

CandidateServingFreqListNR-r16 ::= SEQUENCE (SIZE (1..maxFreqIDC-r16)) OF ARFCN-ValueNR

MUSIM-GapAssistanceConfig-r17 ::= SEQUENCE {
    musim-GapProhibitTimer-r17
}
ENUMERATED {s0, s0dot1, s0dot2, s0dot3, s0dot4, s0dot5, s1, s2, s3, s4, s5, s6, s7, s8, s9, s10}

MUSIM-LeaveAssistanceConfig-r17 ::= SEQUENCE {
    musim-LeaveWithoutResponseTimer-r17
}
ENUMERATED {ms10, ms20, ms40, ms60, ms80, ms100, spare2, spare1}

MUSIM-CapabilityRestrictionConfig-r18 ::= SEQUENCE {
    musim-CandidateBandList-r18
    musim-WaitTimer-r18
    musim-ProhibitTimer-r18
}
MUSIM-CandidateBandList-r18
ENUMERATED {ms10, ms20, ms40, ms60, ms80, ms100, spare2, spare1},
ENUMERATED {s0, s0dot1, s0dot2, s0dot3, s0dot4, s0dot5, s1, s2, s3, s4, s5, s6, s7, s8,
    s9, s10}
OPTIONAL, -- Need R

MUSIM-CandidateBandList-r18 ::= SEQUENCE (SIZE (1..maxCandidateBandIndex-r18)) OF FreqBandIndicatorNR

SuccessH0-Config-r17 ::=
    thresholdPercentageT304-r17
    thresholdPercentageT310-r17
    thresholdPercentageT312-r17
    sourceDAPS-FailureReporting-r17
    ...
}
SEQUENCE {
    ENUMERATED {p40, p60, p80, spare5, spare4, spare3, spare2, spare1}
    ENUMERATED {p40, p60, p80, spare5, spare4, spare3, spare2, spare1}
    ENUMERATED {p20, p40, p60, p80, spare4, spare3, spare2, spare1}
    ENUMERATED {true}
OPTIONAL, --Need R
OPTIONAL, --Need R
OPTIONAL, --Need R
OPTIONAL, --Need R

SuccessPSCell-Config-r18 ::=
    thresholdPercentageT304-SCG-r18
    thresholdPercentageT310-SCG-r18
    thresholdPercentageT312-SCG-r18
    ...
}
SEQUENCE {
    ENUMERATED {p40, p60, p80, spare5, spare4, spare3, spare2, spare1}
    ENUMERATED {p40, p60, p80, spare5, spare4, spare3, spare2, spare1}
    ENUMERATED {p20, p40, p60, p80, spare4, spare3, spare2, spare1}
OPTIONAL, --Need R
OPTIONAL, --Need R
OPTIONAL, --Need R

OverheatingAssistanceConfig ::= SEQUENCE {
    overheatingIndicationProhibitTimer
}
ENUMERATED {s0, s0dot5, s1, s2, s5, s10, s20, s30,
    s60, s90, s120, s300, s600, spare3, spare2, spare1}

```



```

IDC-AssistanceConfig-r16 ::= SEQUENCE {
    candidateServingFreqListNR-r16 CandidateServingFreqListNR-r16 OPTIONAL, -- Need R
    ...
}

DRX-PreferenceConfig-r16 ::= SEQUENCE {
    drx-PreferenceProhibitTimer-r16 ENUMERATED {
        s0, s0dot5, s1, s2, s3, s4, s5, s6, s7,
        s8, s9, s10, s20, s30, spare2, spare1}
}

MaxBW-PreferenceConfig-r16 ::= SEQUENCE {
    maxBW-PreferenceProhibitTimer-r16 ENUMERATED {
        s0, s0dot5, s1, s2, s3, s4, s5, s6, s7,
        s8, s9, s10, s20, s30, spare2, spare1}
}

MaxCC-PreferenceConfig-r16 ::= SEQUENCE {
    maxCC-PreferenceProhibitTimer-r16 ENUMERATED {
        s0, s0dot5, s1, s2, s3, s4, s5, s6, s7,
        s8, s9, s10, s20, s30, spare2, spare1}
}

MaxMIMO-LayerPreferenceConfig-r16 ::= SEQUENCE {
    maxMIMO-LayerPreferenceProhibitTimer-r16 ENUMERATED {
        s0, s0dot5, s1, s2, s3, s4, s5, s6, s7,
        s8, s9, s10, s20, s30, spare2, spare1}
}

MinSchedulingOffsetPreferenceConfig-r16 ::= SEQUENCE {
    minSchedulingOffsetPreferenceProhibitTimer-r16 ENUMERATED {
        s0, s0dot5, s1, s2, s3, s4, s5, s6, s7,
        s8, s9, s10, s20, s30, spare2, spare1}
}

ReleasePreferenceConfig-r16 ::= SEQUENCE {
    releasePreferenceProhibitTimer-r16 ENUMERATED {
        s0, s0dot5, s1, s2, s3, s4, s5, s6, s7,
        s8, s9, s10, s20, s30, infinity, spare1},
    connectedReporting-r16 ENUMERATED {true} OPTIONAL -- Need R
}

RLM-RelaxationReportingConfig-r17 ::= SEQUENCE {
    rlm-RelaxtionReportingProhibitTimer-r17 ENUMERATED {s0, s0dot5, s1, s2, s5, s10, s20, s30,
        s60, s90, s120, s300, s600, infinity, spare2, spare1}
}

BFD-RelaxationReportingConfig-r17 ::= SEQUENCE {
    bfd-RelaxtionReportingProhibitTimer-r17 ENUMERATED {s0, s0dot5, s1, s2, s5, s10, s20, s30,
        s60, s90, s120, s300, s600, infinity, spare2, spare1}
}

SCG-DeactivationPreferenceConfig-r17 ::= SEQUENCE {

```

```

    scg-DeactivationPreferenceProhibitTimer-r17    ENUMERATED {
                                                    s0, s1, s2, s4, s8, s10, s15, s30,
                                                    s60, s120, s180, s240, s300, s600, s900, s1800}
    }

RRM-MeasRelaxationReportingConfig-r17 ::= SEQUENCE {
    s-SearchDeltaP-Stationary-r17    ENUMERATED {dB2, dB3, dB6, dB9, dB12, dB15, spare2, spare1},
    t-SearchDeltaP-Stationary-r17    ENUMERATED {s5, s10, s20, s30, s60, s120, s180, s240, s300, spare7, spare6, spare5,
                                                    spare4, spare3, spare2, spare1}
    }

PropDelayDiffReportConfig-r17 ::= SEQUENCE {
    threshPropDelayDiff-r17          ENUMERATED {ms0dot5, ms1, ms2, ms3, ms4, ms5, ms6, ms7, ms8, ms9, ms10, spare5,
                                                    spare4, spare3, spare2, spare1}    OPTIONAL, -- Need M
    neighCellInfoList-r17            SEQUENCE (SIZE (1..maxCellNTN-r17)) OF NeighbourCellInfo-r17    OPTIONAL -- Need M
    }

NeighbourCellInfo-r17 ::= SEQUENCE {
    epochTime-r17                    EpochTime-r17,
    ephemerisInfo-r17                EphemerisInfo-r17
    }

IDC-FDM-AssistanceConfig-r18 ::= SEQUENCE {
    candidateServingFreqRangeListNR-r18    CandidateServingFreqRangeListNR-r18    OPTIONAL, -- Need R
    ...
    }

CandidateServingFreqRangeListNR-r18 ::= SEQUENCE (SIZE (1..maxFreqIDC-r16)) OF CandidateServingFreqRangeNR-r18

CandidateServingFreqRangeNR-r18 ::= SEQUENCE {
    candidateCenterFreq-r18            ARFCN-ValueNR,
    candidateBandwidth-r18             ENUMERATED {khz200, khz400, khz600, khz800, mhz1, mhz2, mhz3, mhz4, mhz5,
                                                    mhz6, mhz8, mhz10, mhz20, mhz30, mhz40, mhz50, mhz60, mhz80, mhz100,
                                                    mhz200, mhz300, mhz400}    OPTIONAL -- Need R
    }

UL-TrafficInfoReportingConfig-r18 ::= SEQUENCE {
    pdu-SessionsToReportUL-TrafficInfoList-r18    SEQUENCE (SIZE (1..maxNrofPDU-Sessions-r17)) OF PDU-SessionToReportUL-TrafficInfo-r18,
    ul-TrafficInfoProhibitTimer-r18              ENUMERATED {s0, s0dot5, s1, s2, s5, s10, s20, s30,
                                                    s60, s90, s120, s300, s600, spare3, spare2, spare1}
    }

PDU-SessionToReportUL-TrafficInfo-r18 ::= SEQUENCE {
    pdu-SessionID-r18                    PDU-SessionID,
    qfi-ToReportUL-TrafficInfoList-r18    SEQUENCE (SIZE (1..maxNrofQFIs)) OF QFI
    }

-- TAG-OTHERCONFIG-STOP
-- ASN1STOP

```

<i>OtherConfig</i> field descriptions
<i>aerial-FlightPathAvailabilityConfig</i> Configuration for the UE to indicate the availability of flight path information for Aerial UE operation.
<i>bfd-RelaxationReportingConfig</i> Configuration for the UE to report the relaxation state of BFD measurements.
<i>btNameList</i> Configuration for the UE to report measurements from specific Bluetooth beacons. NG-RAN configures the field if <i>includeBT-Meas</i> is configured for one or more measurements.
<i>candidateBandwidth</i> Indicates the bandwidth of the candidate frequency range around the center frequency.
<i>candidateCenterFreq</i> Indicates the center frequency of the candidate frequency range.
<i>candidateServingFreqListNR</i> Indicates for each candidate NR serving cells, the center frequency around which UE is requested to report IDC issues.
<i>candidateServingFreqRangeListNR</i> Indicates the candidate frequency range with the combination of the center frequency and the candidate bandwidth, around which the UE is requested to report IDC issues.
<i>connectedReporting</i> Indicates that the UE can report a preference to remain in RRC_CONNECTED state following a report to leave RRC_CONNECTED state. If absent, the UE cannot report a preference to stay in RRC_CONNECTED state.
<i>delayBudgetReportingProhibitTimer</i> Prohibit timer for delay budget reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot4</i> means prohibit timer is set to 0.4 seconds, and so on.
<i>drx-PreferenceConfig</i> Configuration for the UE to report assistance information to inform the gNB about the UE's DRX preferences for power saving.
<i>drx-PreferenceProhibitTimer</i> Prohibit timer for DRX preferences assistance information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
<i>idc-AssistanceConfig</i> Configuration for the UE to report assistance information to inform the gNB about UE detected IDC problem.
<i>maxBW-PreferenceConfig</i> Configuration for the UE to report assistance information to inform the gNB about the UE's preferred bandwidth for power saving.
<i>maxBW-PreferenceProhibitTimer</i> Prohibit timer for preferred bandwidth assistance information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
<i>maxCC-PreferenceConfig</i> Configuration for the UE to report assistance information to inform the gNB about the UE's preferred number of carriers for power saving.
<i>maxBW-PreferenceConfigFR2-2</i> Configuration for the UE to report assistance information to inform the gNB about the UE's preferred bandwidth for power saving for FR2-2.
<i>maxCC-PreferenceProhibitTimer</i> Prohibit timer for preferred number of carriers assistance information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
<i>maxMIMO-LayerPreferenceConfig</i> Configuration for the UE to report assistance information to inform the gNB about the UE's preferred number of MIMO layers for power saving.
<i>maxMIMO-LayerPreferenceConfigFR2-2</i> Configuration for the UE to report assistance information to inform the gNB about the UE's preferred number of MIMO layers for power saving for FR2-2.
<i>maxMIMO-LayerPreferenceProhibitTimer</i> Prohibit timer for preferred number of number of MIMO layers assistance information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.

<i>minSchedulingOffsetPreferenceConfig</i>
Configuration for the UE to report assistance information to inform the gNB about the UE's preferred <i>minimumSchedulingOffset</i> value for cross-slot scheduling for power saving.
<i>minSchedulingOffsetPreferenceConfigExt</i>
Configuration for the UE to report assistance information to inform the gNB about the UE's preferred <i>minimumSchedulingOffset</i> value for cross-slot scheduling for power saving for SCS 480 kHz and/or 960 kHz.
<i>minSchedulingOffsetPreferenceProhibitTimer</i>
Prohibit timer for preferred <i>minimumSchedulingOffset</i> assistance information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
<i>multiRx-PreferenceReportingConfigFR2</i>
Configuration for the UE to report assistance information to inform gNB about the UE's preference on multi-Rx operation for FR2.
<i>multiRx-PreferenceReportingConfigFR2ProhibitTimer</i>
Prohibit timer for multi-Rx operation preference reporting for FR2. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
<i>musim-CandidateBandList</i>
A list of candidate bands that the network intends to use, e.g., for serving cells and for which the UE is requested to provide information on temporary restricted capabilities for MUSIM operation as specified in clause 5.7.4.3.
<i>musim-GapAssistanceConfig</i>
Configuration for the UE to report assistance information for gap preference.
<i>musim-GapPriorityAssistanceConfig</i>
Indicates the UE is allowed to provide MUSIM assistance information for gap(s) priority and/or MUSIM gaps keep preference.
<i>musim-GapProhibitTimer</i>
Prohibit timer for MUSIM assistance information reporting for gap preference.
<i>musim-LeaveAssistanceConfig</i>
Configuration for the UE to report assistance information for leaving RRC_CONNECTED for MUSIM purpose.
<i>musim-LeaveWithoutResponseTimer</i>
Indicates the timer for the UE to enter RRC_IDLE for MUSIM purpose as defined in clause 5.3.8.6.
<i>musim-ProhibitTimer</i>
Indicates the prohibit timer for UE temporary restricted capabilities for MUSIM operation. Value in milliseconds. Value <i>ms0</i> means prohibit timer is set to 0 milliseconds, value <i>ms10</i> means prohibit timer is set to 10 milliseconds and so on.
<i>musim-WaitTimer</i>
Indicates the wait timer for UE temporary restricted capabilities for MUSIM operation. Value in milliseconds. Value <i>ms10</i> means wait timer is set to 10 milliseconds, value <i>ms20</i> means wait timer is set to 20 milliseconds and so on.
<i>obtainCommonLocation</i>
Requests the UE to attempt to have detailed location information available using GNSS. NR configures the field if <i>includeCommonLocationInfo</i> is configured for one or more measurements.
<i>overheatingAssistanceConfig</i>
Configuration for the UE to report assistance information to inform the gNB about UE detected internal overheating.
<i>overheatingIndicationProhibitTimer</i>
Prohibit timer for overheating assistance information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
<i>pdu-SessionsToReportUL-TrafficInfoList</i>
A list of PDU sessions for which the UE shall report UL traffic information.
<i>propDelayDiffReportConfig</i>
Configuration for the UE to report service link propagation delay difference between serving cell and neighbour cell(s).
<i>qfi-ToReportUL-TrafficInfoList</i>
A list of QFIs of a PDU session for which the UE shall report UL traffic information.

referenceTimePreferenceReporting
If present, the field indicates the UE is configured to provide reference time assistance information.
releasePreferenceConfig
Configuration for the UE to report assistance information to inform the gNB about the UE's preference to leave RRC_CONNECTED state.
rlm-RelaxationReportingConfig
Configuration for the UE to report the relaxation state of RLM measurements.
releasePreferenceProhibitTimer
Prohibit timer for release preference assistance information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on. Value <i>infinity</i> means that once a UE has reported a release preference, the UE cannot report a release preference again during the RRC connection.
s-SearchDeltaP-Stationary
Parameter "S _{SearchDeltaP-StationaryConnected} " in 5.7.4.4. Value dB2 corresponds to 2 dB, dB3 corresponds to 3 dB and so on.
scg-DeactivationPreferenceConfig
Configuration of the UE to indicate its preference for SCG deactivation.
scg-StatePreferenceProhibitTimer
Prohibit timer for UE indication of its preference for SCG deactivation. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
sensorNameList
Configuration for the UE to report measurements from specific sensors. NG-RAN configures the field if <i>includeSensor-Meas</i> is configured for one or more measurements.
sl-AssistanceConfigNR
Indicate whether UE is configured to provide configured grant assistance information for NR sidelink communication.
sl-PRS-AssistanceConfigNR
Indicate whether UE is configured to provide configured grant assistance information for NR sidelink positioning.
sn-InitiatedPSCellChange
This field indicates whether the PSCell change procedure or the CPC included in the <i>RRCReconfiguration</i> message is SN initiated or not. In case of SN initiated inter-SN PSCell change procedure or SN configured inter-SN CPC, MN includes this field in the MCG RRC Reconfiguration message. In case of intra-SN PSCell change, or intra-SN CPC, source SN includes the field in the SCG RRC Reconfiguration.
sourceDAPS-FailureReporting
This field indicates whether the UE shall generate the SHR upon successfully completing the DAPS handover to the target cell and if a radio link failure was experienced in the source PCell while executing the DAPS handover. This field is set in the <i>otherConfig</i> configured by the source cell of the DAPS handover.
successHO-Config
Configuration for the UE to report the successful handover information to the network.
successPSCell-Config
Configuration for the UE to report the successful PSCell change or addition information to the network. When this field is configured in CG-Config, the <i>thresholdPercentageT304-SCG</i> is absent.
t-SearchDeltaP-Stationary
Parameter "T _{SearchDeltaP-StationaryConnected} " in 5.7.4.4. Value in seconds. Value <i>s5</i> means 5 seconds, value <i>s10</i> means 10 seconds and so on.
thresholdPercentageT304
This field indicates the threshold for the ratio in percentage between the elapsed T304 timer and the configured value of the T304 timer. Value <i>p40</i> corresponds to 40%, value <i>p60</i> corresponds to 60% and so on. This field is set in the <i>otherConfig</i> configured by the target cell of the handover.
thresholdPercentageT310
This field indicates the threshold for the ratio in percentage between the elapsed T310 timer and the configured value of the T310 timer. Value <i>p40</i> corresponds to 40%, value <i>p60</i> corresponds to 60% and so on. This field is set in the <i>otherConfig</i> configured by the source cell of the handover.
thresholdPercentageT312
This field indicates the threshold for the ratio in percentage between the elapsed T312 timer and the configured value(s) of the T312 timer. Value <i>p20</i> corresponds to 20%, value <i>p40</i> corresponds to 40% and so on. This field is set in the <i>otherConfig</i> configured by the source cell of the handover.

<i>thresholdPercentageT304-SCG</i>
This field indicates the threshold for the ratio in percentage between the elapsed T304 timer associated to the target PSCell and the configured value of the T304 timer. Value <i>p40</i> corresponds to 40%, value <i>p60</i> corresponds to 60% and so on. This field is set in the <i>otherConfig</i> configured by the target PSCell of the PSCell change or addition.
<i>thresholdPercentageT310-SCG</i>
This field indicates the threshold for the ratio in percentage between the elapsed T310 timer associated to the source PSCell and the configured value of the T310 timer. Value <i>p40</i> corresponds to 40%, value <i>p60</i> corresponds to 60% and so on. This field is set in the <i>otherConfig</i> configured by the source PSCell of the PSCell change or CPC, or in the <i>otherConfig</i> configured by the PCell for the PSCell change or CPC. This field is not configured at the time of PSCell change via SRB3.
<i>thresholdPercentageT312-SCG</i>
This field indicates the threshold for the ratio in percentage between the elapsed T312 timer associated to the measurement identity of the target PSCell and the configured value of the T312 timer. Value <i>p20</i> corresponds to 20%, value <i>p40</i> corresponds to 40% and so on. This field is set in the <i>otherConfig</i> configured by the source PSCell of the PSCell change or CPC, or in the <i>otherConfig</i> configured by the PCell for the PSCell change or CPC. This field is not configured at the time of PSCell change via SRB3.
<i>threshPropDelayDiff</i>
Threshold for one-way service link propagation delay difference report as specified in 5.7.4.2.
<i>ul-GapFR2-PreferenceConfig</i>
Indicates whether UE is configured to request for FR2 UL gap activation/deactivation and preferred FR2 UL gap pattern.
<i>wlanNameList</i>
Configuration for the UE to report measurements from specific WLAN APs. NG-RAN configures the field if <i>includeWLAN-Meas</i> is configured for one or more measurements.
<i>ul-TrafficInfoProhibitTimer</i>
Prohibit timer for UL traffic information reporting. Value in seconds. Value <i>s0</i> means prohibit timer is set to 0 seconds, value <i>s0dot5</i> means prohibit timer is set to 0.5 seconds, value <i>s1</i> means prohibit timer is set to 1 second and so on.
<i>ul-TrafficInfoReportingConfig</i>
Configuration for the UE to report UL traffic information.

Conditional Presence	Explanation
<i>FDM</i>	This field is optionally present, need R, if <i>idc-AssistanceConfig-r16</i> or <i>idc-FDM-AssistanceConfig</i> is setup. Otherwise, it is absent, need R.
<i>maxBW</i>	This field is optionally present, need R, if <i>maxBW-PreferenceConfig-r16</i> is setup; otherwise it is absent, need R.
<i>maxMIMO</i>	This field is optionally present, need R, if <i>maxMIMO-LayerPreferenceConfig-r16</i> is setup; otherwise it is absent, need R.
<i>minOffset</i>	This field is optionally present, need R, if <i>minSchedulingOffsetPreferenceConfig-r16</i> is setup; otherwise it is absent, need R.
<i>musimGapConfig</i>	This field is optionally present, need R, if <i>musim-GapAssistanceConfig-r17</i> is setup; otherwise it is absent, need R.
<i>SCG</i>	This field is optionally present, need M, in an <i>RRCReconfiguration</i> message not within <i>mrdc-SecondaryCellGroup</i> and received, either via SRB3 within <i>DLInformationTransferMRDC</i> or via SRB1. Otherwise, it is absent.

– PhysCellIdUTRA-FDD

The IE *PhysCellIdUTRA-FDD* is used to indicate the physical layer identity of the cell, i.e. the primary scrambling code, as defined in TS 25.331 [45].

PhysCellIdUTRA-FDD information element

```
-- ASN1START
-- TAG-PHYSCELLIDUTRA-FDD-START
```

```
PhysCellIdUTRA-FDD-r16 ::= INTEGER (0..511)
```

-- TAG-PHYSCELLIDUTRA-FDD-STOP
-- ASN1STOP

— *RRC-TransactionIdentifier*

The IE *RRC-TransactionIdentifier* is used, together with the message type, for the identification of an RRC procedure (transaction).

RRC-TransactionIdentifier information element

```
-- ASN1START
-- TAG-RRC-TRANSACTIONIDENTIFIER-START

RRC-TransactionIdentifier ::=      INTEGER (0..3)

-- TAG-RRC-TRANSACTIONIDENTIFIER-STOP
-- ASN1STOP
```

— *Sensor-NameList*

The IE *Sensor-NameList* is used to indicate the names of the sensors which the UE is configured to measure.

Sensor-NameList information element

```
-- ASN1START
-- TAG-SENSORNAMELIST-START

Sensor-NameList-r16 ::= SEQUENCE {
    measUncomBarPre-r16      ENUMERATED {true}      OPTIONAL, -- Need R
    measUeSpeed              ENUMERATED {true}      OPTIONAL, -- Need R
    measUeOrientation        ENUMERATED {true}      OPTIONAL  -- Need R
}

-- TAG-SENSORNAMELIST-STOP
-- ASN1STOP
```

<i>Sensor-NameList</i> field descriptions
<i>measUncomBarPre</i> If configured, the UE reports the uncompensated Barometric pressure measurement as defined in TS 37.355 [49].
<i>measUeSpeed</i> If configured, the UE reports the UE speed measurement as defined in TS 37.355 [49].
<i>measUeOrientation</i> If configured, the UE reports the UE orientation information as defined in TS 37.355 [49].

– *TraceReference*

The *TraceReference* contains parameter Trace Reference as defined in TS 32.422 [52].

***TraceReference* information element**

```
-- ASN1START
-- TAG-TRACEREFERENCE-START

TraceReference-r16 ::= SEQUENCE {
    plmn-Identity-r16      PLMN-Identity,
    traceId-r16            OCTET STRING (SIZE (3))
}

-- TAG-TRACEREFERENCE-STOP
-- ASN1STOP
```

– *UE-MeasurementsAvailable*

The IE *UE-MeasurementsAvailable* is used to indicate all relevant available indicators for UE measurements.

***UE-MeasurementsAvailable* information element**

```
-- ASN1START
-- TAG-UE-MeasurementsAvailable-START

UE-MeasurementsAvailable-r16 ::=
    SEQUENCE {
        logMeasAvailable-r16          ENUMERATED {true}          OPTIONAL,
        logMeasAvailableBT-r16        ENUMERATED {true}          OPTIONAL,
        logMeasAvailableWLAN-r16      ENUMERATED {true}          OPTIONAL,
        connEstFailInfoAvailable-r16  ENUMERATED {true}          OPTIONAL,
        rlf-InfoAvailable-r16         ENUMERATED {true}          OPTIONAL,
        ...,
        [[
            successH0-InfoAvailable-r17  ENUMERATED {true}      OPTIONAL,
            sigLogMeasConfigAvailable-r17 BOOLEAN                OPTIONAL
        ]],
        [[
            successPSCell-InfoAvailable-r18  ENUMERATED {true}  OPTIONAL
        ]]
    }

-- TAG-UE-MeasurementsAvailable-STOP
-- ASN1STOP
```


— *UTRA-FDD-Q-OffsetRange*

The IE *UTRA-FDD-Q-OffsetRange* is used to indicate a frequency specific offset to be applied when evaluating triggering conditions for measurement reporting. The value is in dB. Value *dB-24* corresponds to -24 dB, value *dB-22* corresponds to -22 dB and so on.

UTRA-FDD-Q-OffsetRange information element

```
-- ASN1START
-- TAG-UTRA-FDD-Q-OFFSETRANGE-START

UTRA-FDD-Q-OffsetRange-r16 ::= ENUMERATED {
    dB-24, dB-22, dB-20, dB-18, dB-16, dB-14,
    dB-12, dB-10, dB-8, dB-6, dB-5, dB-4, dB-3,
    dB-2, dB-1, dB0, dB1, dB2, dB3, dB4, dB5,
    dB6, dB8, dB10, dB12, dB14, dB16, dB18,
    dB20, dB22, dB24}

-- TAG-UTRA-FDD-Q-OFFSETRANGE-STOP
-- ASN1STOP
```

— *VisitedCellInfoList*

The IE *VisitedCellInfoList* includes the mobility history information of maximum of 16 most recently visited primary cells or time spent in any cell selection state and/or camped on any cell state in NR or E-UTRA and, in case of Dual Connectivity, the mobility history information of *maxPSCellHistory* most recently visited primary secondary cell group cells across all the primary cells included in the *VisitedCellInfoList*. The most recently visited cell is stored first in the list. The list includes cells visited in RRC_IDLE, RRC_INACTIVE and RRC_CONNECTED states for NR and RRC_IDLE and RRC_CONNECTED for E-UTRA.

VisitedCellInfoList information element

```
-- ASN1START
-- TAG-VISITEDCELLINFOLIST-START

VisitedCellInfoList-r16 ::= SEQUENCE (SIZE (1..maxCellHistory-r16)) OF VisitedCellInfo-r16

VisitedCellInfo-r16 ::= SEQUENCE {
    visitedCellId-r16 CHOICE {
        nr-CellId-r16 CHOICE {
            cgi-Info CGI-Info-Logging-r16,
            pci-arfcn-r16 PCI-ARFCN-NR-r16
        },
        eutra-CellId-r16 CHOICE {
            cellGlobalId-r16 CGI-InfoEUTRA,
            pci-arfcn-r16 PCI-ARFCN-EUTRA-r16
        }
    },
    timeSpent-r16 OPTIONAL,
    INTEGER (0..4095),
    ...
    [[
        visitedPSCellInfoListReport-r17 VisitedPSCellInfoList-r17 OPTIONAL
    ]]
```

```
    ]]
  }

VisitedPSCellInfoList-r17 ::= SEQUENCE (SIZE (1..maxPSCellHistory-r17)) OF VisitedPSCellInfo-r17

VisitedPSCellInfo-r17 ::= SEQUENCE {
  visitedCellId-r17 CHOICE {
    nr-CellId-r17 CHOICE {
      cgi-Info-r17 CGI-Info-Logging-r16,
      pci-arfcn-r17 PCI-ARFCN-NR-r16
    },
    eutra-CellId-r17 CHOICE {
      cellGlobalId-r17 CGI-InfoEUTRALogging,
      pci-arfcn-r17 PCI-ARFCN-EUTRA-r16
    }
  },
  timeSpent-r17 INTEGER (0..4095), OPTIONAL,
  ...
}

-- TAG-VISITEDCELLINFOLIST-STOP
-- ASN1STOP
```

VisitedCellInfoList field descriptions
timeSpent This field indicates the duration of stay in the cell or in any cell selection state and/or camped on any cell state in NR or E-UTRA approximated to the closest second. If included in <i>VisitedPSCellInfo</i> , it indicates the duration of stay in the PSCell or without any PSCell. If the duration of stay exceeds 4095s, the UE shall set it to 4095s.
visitedCellId This field indicates the visited cell id including NR and E-UTRA cells.

– **WLAN-NameList**

The IE *WLAN-NameList* is used to indicate the names of the WLAN AP for which the UE is configured to measure.

WLAN-NameList information element

```
-- ASN1START
-- TAG-WLANNAMELIST-START

WLAN-NameList-r16 ::= SEQUENCE (SIZE (1..maxWLAN-Name-r16)) OF WLAN-Name-r16

WLAN-Name-r16 ::= OCTET STRING (SIZE (1..32))

-- ASN1STOP
-- TAG-WLANNAMELIST-STOP
```



```

sl-AbsoluteFrequencySSB-NonAnchorList-r18 SEQUENCE (SIZE (1.. maxSL-NonAnchorRBsets)) OF ARFCN-ValueNR OPTIONAL, -- Need M
sl-CPE-StartingPositionS-SSB-r18 INTEGER (1..9) OPTIONAL, -- Need M
sl-CWS-ForPsschWithoutHrqAck-r18 ENUMERATED {t1, t8, t16, t32, infinity} OPTIONAL, -- Need M
sl-NumOfAdditionalSSSB0occasion-r18 INTEGER (0..4) OPTIONAL, -- Need M
sl-SSSBPowerOffsetOfAnchorRBSet-r18 ENUMERATED {value1, value2} OPTIONAL, -- Need M
sl-RBSetConfigList-r18 SEQUENCE (SIZE (1..5)) OF SL-RBSetConfig-r18 OPTIONAL, -- Need M
sl-IntraCellGuardBandsSL-List-r18 SEQUENCE (SIZE (1..maxSCs)) OF IntraCellGuardBandsPerSCS-r16 OPTIONAL, -- Need M
}

-- TAG-SL-BWP-CONFIG-STOP
-- ASN1STOP

```

SL-BWP-Config field descriptions

sl-BWP-DiscPoolConfig

This field indicates the NR sidelink discovery dedicated resource pool configurations on the configured sidelink BWP. The total number of Rx/Tx resource pools configured for communication and discovery does not exceed the maximum number of Rx/Tx resource pool for NR sidelink communication (i.e. *maxNrofRXPool-r16/maxNrofTXPool-r16*).

sl-BWP-Generic

This field indicates the generic parameters on the configured sidelink BWP.

sl-BWP-Id

An identifier for this sidelink bandwidth part.

sl-BWP-PoolConfig

This field indicates the resource pool configurations on the configured sidelink BWP.

sl-BWP-PoolConfigA2X

This field indicates the resource pool configurations for A2X services on the configured sidelink BWP. This field does not include *sl-TxPoolScheduling*. This field does not include *sl-TxPoolExceptional*.

sl-BWP-PoolConfigPS

This field indicates the resource pool configurations for power saving on the configured sidelink BWP. This field does not include *sl-TxPoolExceptional*.

sl-BWP-PRS-PoolConfig

This field indicates the dedicated SL-PRS resource pool configurations for SL-PRS on the configured sidelink BWP. This field does not include *sl-PRS-TxPoolExceptional*. Dedicated SL-PRS resource pool is not expected to be configured in the slots colliding with the slots (pre)configured for any other resource pool(s) or S-SSB resource(s) in other SL carriers.

SL-BWP-Generic field descriptions

sl-LengthSymbols

This field indicates the number of symbols used for sidelink in a slot without S-SSB. A single value can be (pre)configured per sidelink bandwidth part.

sl-StartSymbol

This field indicates the starting symbol used for sidelink in a slot without S-SSB. A single value can be (pre)configured per sidelink bandwidth part.

sl-Unlicensed

This field indicates the configurations for sidelink carrier of shared spectrum channel access. This field is not expected to be provided when *sl-FreqInfoListSizeExt* or *sl-PreconfigFreqInfoListSizeExt* is present.

sl-TxDirectCurrentLocation

The sidelink Tx/Rx Direct Current location for the carrier. Only values in the value range of this field between 0 and 3299, which indicate the subcarrier index within the carrier corresponding to the numerology of the corresponding sidelink BWP and value 3300, which indicates "Outside the carrier" and value 3301, which indicates "Undetermined position within the carrier" are used in this version of the specification.

<i>SL-Unlicensed</i> field descriptions
<i>sl-AbsoluteFrequencySSB-NonAnchorList</i> Indicates the lowest S-SSB in a non-anchor RB set via each parameter in this list. Anchor RB set refers to the RB set where S-SSB indicated by <i>sl-AbsoluteFrequencySSB-r16</i> locates.
<i>sl-CPE-StartingPositionS-SSB</i> Indicates the CPE starting position within the last symbol before the start of S-SSB transmission. The value is an index of the set of all candidate CPE starting positions specified in Table 5.3.1-3 of [16, TS 38.211] for $C_i=1$ and the corresponding SCS of the SL BWP.
<i>sl-CWS-ForPsschWithoutHarqAck</i> The latest CW_p is autonomously increased to the next higher allowed value for every priority class p of {1,2,3,4} if the same CW_p which is different from $CW\_(\max,p)$ is consecutively used for general of N_init in SL Type 1 LBT for a number of times indicated by this parameter. This operation is restricted only to PSCCH/PSSCH transmission(s) with "HARQ feedback enabled/disabled indicator" in the 2nd stage SCI set to disabled, regardless of whether PSFCH resources being configured in a resource pool.
<i>sl-GapOfAdditionalSSSB-Occasion</i> Indicate the gap between each R16/R17 NR SL S-SSB slot and its first corresponding additional candidate S-SSB occasion, and the gap between adjacent two additional candidate S-SSB occasions corresponding to a R16/R17 NR SL S-SSB slot.
<i>sl-IntraCellGuardBandsSL-List</i> List of intra-cell guard bands for operation with shared spectrum channel access. If not configured, the guard bands are defined according to 38.101-1 [15], see TS 38.214 [19], clause 7. For operation in licensed spectrum, this field is absent, and no UE action is required. NOTE: Value '0' is not expected to be (pre-)configured for <i>nrofCRBs</i> when the SL BWP is larger than UE supported RF bandwidth for SL-U operation.
<i>sl-LBT-FailureRecoveryConfig</i> Configures parameters used for detection and cancellation of Sidelink consistent LBT failures for operation with shared spectrum channel access, as specified in TS 38.321 [3].
<i>sl-NumOfAdditionalSSSBOccasion</i> Indicate the number of additional candidate S-SSB occasion(s) for each R16/R17 NR SL S-SSB slot.
<i>sl-SSSBPowerOffsetOfAnchorRBSet</i> Indicate the power offset for one S-SSB transmission on anchor RB set, where anchor RB set refers to the RB set where S-SSB indicated by <i>sl-AbsoluteFrequencySSB-r16</i> locates. Value <i>value1</i> corresponds to the power offset of $10\lg(N)$, where N is the number of S-SSB repetitions within the anchor RB set, and <i>value2</i> corresponds to the power offset of $10\lg(W)$, where W is the maximum total number of S-SSB repetitions on RB sets within the SL-BWP.
<i>sl-StartingSymbolFirst</i> Indicates the location of first starting symbol within a slot. Value <i>sym0</i> corresponds to first symbol, value <i>sym1</i> corresponds to the second symbol and so on. If the field is not configured, the UE shall use value <i>sym0</i> .
<i>sl-StartingSymbolSecond</i> Indicates the location of second starting symbol within a slot. Value <i>sym3</i> corresponds to fourth symbol, value <i>sym4</i> corresponds to the fifth symbol and so on. The number of symbols used for PSCCH/PSSCH transmission from second starting symbol is not smaller than 6. Within a slot, the second starting symbol is later than the first starting symbol. PSCCH/PSSCH transmission starting from first or second starting symbol shall have the same ending symbol within a slot.
<i>sl-TransmissionStructureForPSCCHandPSSCH</i> Indicate a SL-BWP is (pre-)configured with contiguous RB-based or interlace RB-based PSCCH/PSSCH transmission. Contiguous RB-based PSCCH/PSSCH are applicable in region with no OCB requirement, or with OCB exemption.

– *SL-BWP-ConfigCommon*

The IE *SL-BWP-ConfigCommon* is used to configure the cell-specific configuration information on one particular sidelink bandwidth part.

SL-BWP-ConfigCommon information element

```
-- ASN1START
-- TAG-SL-BWP-CONFIGCOMMON-START
```

```

SL-BWP-ConfigCommon-r16 ::=
    sl-BWP-Generic-r16
    sl-BWP-PoolConfigCommon-r16
    ...
    [[
        sl-BWP-PoolConfigCommonPS-r17
        sl-BWP-DiscPoolConfigCommon-r17
    ]],
    [[
        sl-BWP-PoolConfigCommonA2X-r18
    ]]
}

-- TAG-SL-BWP-CONFIGCOMMON-STOP
-- ASN1STOP

```

SEQUENCE {

SL-BWP-Generic-r16

OPTIONAL, -- Need R

SL-BWP-PoolConfigCommon-r16

OPTIONAL, -- Need R

SL-BWP-PoolConfigCommonPS-r17

OPTIONAL, -- Need R

SL-BWP-DiscPoolConfigCommon-r17

OPTIONAL -- Need R

SL-BWP-PoolConfigCommonA2X-r18

OPTIONAL -- Need R

SL-BWP-ConfigCommon field descriptions
sl-BWP-DiscPoolConfigCommon This field indicates the NR sidelink discovery dedicated resource pool configurations on the configured sidelink BWP. The total number of Rx/Tx resource pools configured for communication and discovery does not exceed the maximum number of Rx/Tx resource pool for NR sidelink communication (i.e. <i>maxNrofRXPool-r16/maxNrofTXPool-r16</i>).
sl-BWP-Generic This field indicates the generic parameters on the configured sidelink BWP.
sl-BWP-PoolConfigCommon This field indicates the resource pool configurations on the configured sidelink BWP.
sl-BWP-PoolConfigCommonA2X This field indicates the resource pool configurations for A2X services on the configured sidelink BWP. This field does not include <i>sl-TxPoolExceptional</i> .
sl-BWP-PoolConfigCommonPS This field indicates the resource pool configurations for power saving on the configured sidelink BWP. This field does not include <i>sl-TxPoolExceptional</i> .

– SL-BWP-DiscPoolConfig

The IE *SL-BWP-DiscPoolConfig* is used to configure UE specific NR sidelink discovery dedicated resource pool.

SL-BWP-DiscPoolConfig information element

```

-- ASN1START
-- TAG-SL-BWP-DISCPoolCONFIG-START

SL-BWP-DiscPoolConfig-r17 ::=
    sl-DiscRxPool-r17
    sl-DiscTxPoolSelected-r17
    sl-DiscTxPoolScheduling-r17
}

-- TAG-SL-BWP-DISCPoolCONFIG-STOP
-- ASN1STOP

```

SEQUENCE {

SEQUENCE (SIZE (1..maxNrofRXPool-r16)) OF SL-ResourcePool-r16

OPTIONAL, -- Cond HO

SL-TxPoolDedicated-r16

OPTIONAL, -- Need M

SL-TxPoolDedicated-r16

OPTIONAL -- Need N

SL-BWP-DiscPoolConfig field descriptions
sl-DiscTxPoolScheduling Indicates the resources by which the UE is allowed to transmit NR sidelink discover based on network scheduling on the configured BWP. For the PSFCH related configuration, if configured, will be used for PSFCH transmission/reception. When this field is configured together with sl-TxPoolScheduling, the resource pool index (which is used in DCI Format 3_0 in TS 38.212 [17], clause 7.3.1.4.1) is defined as 0, 1, ..., x-1 for the resource pools included in the sl-TxPoolScheduling, and x, x+1, ..., x+y-1 for the resource pools included in sl-DiscTxPoolScheduling, where x is the number of the resource pools in sl-TxPoolScheduling, and y is the number of resource pools in sl-DiscTxPoolScheduling.

Conditional Presence	Explanation
HO	This field is optionally present, need M, in an RRCReconfiguration message including reconfigurationWithSync; otherwise it is absent, need M.

– SL-BWP-DiscPoolConfigCommon

The IE SL-BWP-DiscPoolConfigCommon is used to configure the cell-specific NR sidelink discovery dedicated resource pool.

SL-BWP-DiscPoolConfigCommon information element

```

-- ASN1START
-- TAG-SL-BWP-DISCPPOOLCONFIGCOMMON-START

SL-BWP-DiscPoolConfigCommon-r17 ::= SEQUENCE {
    sl-DiscRxPool-r17          SEQUENCE (SIZE (1..maxNrofRXPool-r16)) OF SL-ResourcePool-r16    OPTIONAL,    -- Need R
    sl-DiscTxPoolSelected-r17 SEQUENCE (SIZE (1..maxNrofTXPool-r16)) OF SL-ResourcePoolConfig-r16 OPTIONAL,    -- Need R
    ...
}

-- TAG-SL-BWP-DISCPPOOLCONFIGCOMMON-STOP
-- ASN1STOP
    
```

– SL-BWP-PoolConfig

The IE SL-BWP-PoolConfig is used to configure NR sidelink communication resource pool.

SL-BWP-PoolConfig information element

```

-- ASN1START
-- TAG-SL-BWP-POOLCONFIG-START

SL-BWP-PoolConfig-r16 ::=
    SEQUENCE {
        sl-RxPool-r16          SEQUENCE (SIZE (1..maxNrofRXPool-r16)) OF SL-ResourcePool-r16    OPTIONAL,    -- Cond HO
        sl-TxPoolSelectedNormal-r16 SL-TxPoolDedicated-r16    OPTIONAL,    -- Need M
    }
    
```

sl-TxPoolScheduling-r16
sl-TxPoolExceptional-r16
}

SL-TxPoolDedicated-r16
SL-ResourcePoolConfig-r16

OPTIONAL,
OPTIONAL

-- Need N
-- Need M

SL-TxPoolDedicated-r16 ::=
sl-PoolToReleaseList-r16
sl-PoolToAddModList-r16
}

SEQUENCE {
SEQUENCE (SIZE (1..maxNrofTXPool-r16))
SEQUENCE (SIZE (1..maxNrofTXPool-r16))
}

SL-ResourcePoolID-r16
SL-ResourcePoolConfig-r16

OPTIONAL,
OPTIONAL

-- Need N
-- Need N

SL-ResourcePoolConfig-r16 ::=
sl-ResourcePoolID-r16
sl-ResourcePool-r16
}

SEQUENCE {
SL-ResourcePoolID-r16,
SL-ResourcePool-r16
}

OPTIONAL

-- Need M

SL-ResourcePoolID-r16 ::=

INTEGER (1..maxNrofPoolID-r16)

-- TAG-SL-BWP-POOLCONFIG-STOP
-- ASN1STOP

SL-BWP-PoolConfig field descriptions
sl-RxPool Indicates the receiving resource pool on the configured BWP. For the PSFCH related configuration, if configured, will be used for PSFCH transmission/reception. If the field is included, it replaces any previous list, i.e. all the entries of the list are replaced and each of the <i>SL-ResourcePool</i> entries is considered to be newly created.
sl-TxPoolExceptional Indicates the resources by which the UE is allowed to perform NR sidelink transmission in exceptional conditions on the configured BWP. For the PSFCH related configuration, if configured, will be used for PSFCH transmission/reception.
sl-TxPoolScheduling Indicates the resources by which the UE is allowed to perform NR sidelink transmission based on network scheduling on the configured BWP. For the PSFCH related configuration, if configured, will be used for PSFCH transmission/reception.
sl-TxPoolSelectedNormal Indicates the resources by which the UE is allowed to perform NR sidelink transmission by UE autonomous resource selection on the configured BWP. For the PSFCH related configuration, if configured, will be used for PSFCH transmission/reception.

Conditional Presence	Explanation
HO	This field is optionally present, need M, in an <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> ; otherwise it is absent, Need M.

SL-BWP-PoolConfigCommon

The IE *SL-BWP-PoolConfigCommon* is used to configure the cell-specific NR sidelink communication resource pool.

SL-BWP-PoolConfigCommon information element

-- ASN1START
-- TAG-SL-BWP-POOLCONFIGCOMMON-START


```

SL-BWP-PoolConfigCommon-r16 ::= SEQUENCE {
    sl-RxPool-r16 SEQUENCE (SIZE (1..maxNrofRXPool-r16)) OF SL-ResourcePool-r16 OPTIONAL, -- Need R
    sl-TxPoolSelectedNormal-r16 SEQUENCE (SIZE (1..maxNrofTXPool-r16)) OF SL-ResourcePoolConfig-r16 OPTIONAL, -- Need R
    sl-TxPoolExceptional-r16 SL-ResourcePoolConfig-r16 OPTIONAL -- Need R
}

-- TAG-SL-BWP-POOLCONFIGCOMMON-STOP
-- ASN1STOP

```

***SL-BWP-PoolConfigCommon* field descriptions**

sl-TxPoolExceptional

Indicates the resources by which the UE is allowed to perform NR sidelink transmission in exceptional conditions on the configured BWP. For the PSFCH related configuration, if configured, will be used for PSFCH transmission/reception. This field is not present when *SL-BWP-PoolConfigCommon* is included in *SidelinkPreconfigNR*.

– ***SL-BWP-PRS-PoolConfig***

The IE *SL-BWP-PRS-PoolConfig* is used to configure UE specific NR sidelink PRS dedicated resource pool.

***SL-BWP-PRS-PoolConfig* information element**

```

-- ASN1START
-- TAG-SL-BWP-PRS-POOLCONFIG-START

SL-BWP-PRS-PoolConfig-r18 ::= SEQUENCE {
    sl-PRS-RxPool-r18 SEQUENCE (SIZE (1..maxNrofRXPool-r16)) OF SL-PRS-ResourcePool-r18 OPTIONAL, -- Cond H0
    sl-PRS-TxPoolSelectedNormal-r18 SL-PRS-TxPoolDedicated-r18 OPTIONAL, -- Need M
    sl-PRS-TxPoolScheduling-r18 SL-PRS-TxPoolDedicated-r18 OPTIONAL, -- Need M
    sl-PRS-TxPoolExceptional-r18 SL-PRS-ResourcePoolConfig-r18 OPTIONAL -- Need R
}

SL-PRS-TxPoolDedicated-r18 ::= SEQUENCE {
    sl-PRS-PoolToReleaseList-r1 SEQUENCE (SIZE (1..maxNrofSL-PRS-TxPool-r18)) OF SL-PRS-ResourcePoolID-r18 OPTIONAL, -- Need N
    sl-PRS-PoolToAddModList-r18 SEQUENCE (SIZE (1..maxNrofSL-PRS-TxPool-r18)) OF SL-PRS-ResourcePoolConfig-r18 OPTIONAL -- Need N
}

SL-PRS-ResourcePoolConfig-r18 ::= SEQUENCE {
    sl-PRS-ResourcePoolID-r18 SL-PRS-ResourcePoolID-r18,
    sl-PRS-ResourcePool-r18 SL-PRS-ResourcePool-r18 OPTIONAL -- Need M
}

SL-PRS-ResourcePoolID-r18 ::= INTEGER (1.. maxNrofSL-PRS-TxPool-r18)

-- TAG-SL-BWP-PRS-POOLCONFIG-STOP
-- ASN1STOP

```

<i>SL-BWP-PRS-PoolConfig</i> field descriptions
<i>sl-PRS-TxPoolSelectedNormal</i> Indicates the resources by which the UE is allowed to perform SL-PRS transmission by UE autonomous resource selection on the configured BWP.
<i>sl-PRS-TxPoolScheduling</i> Indicates the resources by which the UE is allowed to perform SL-PRS transmission based on network selection on the configured BWP.
<i>sl-PRS-TxPoolExceptional</i> Indicates the resources by which the UE is allowed to perform SL-PRS transmission in exceptional conditions on the configured BWP.

Conditional Presence	Explanation
<i>HO</i>	This field is optionally present, need M, in an <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> ; otherwise it is absent, Need M.

– *SL-BWP-PRS-PoolConfigCommon*

The IE *SL-BWP-PRS-PoolConfigCommon* is used to configure the cell-specific NR sidelink PRS dedicated resource pool.

***SL-BWP-PRS-PoolConfigCommon* information element**

```
-- ASN1START
-- TAG-SL-BWP-PRS-POOLCONFIGCOMMON-START

SL-BWP-PRS-PoolConfigCommon-r18 ::= SEQUENCE {
    sl-PRS-RxPool-r18          SEQUENCE (SIZE (1..maxNrofRXPool-r16)) OF SL-PRS-ResourcePool-r18          OPTIONAL, -- Need R
    sl-PRS-TxPoolSelectedNormal-r18 SEQUENCE (SIZE (1..maxNrofSL-PRS-TxPool-r18)) OF SL-PRS-ResourcePoolConfig-r18 OPTIONAL, -- Need R
    sl-PRS-TxPoolExceptional-r18    SL-PRS-ResourcePoolConfig-r18          OPTIONAL, -- Need R
    ...
}

-- TAG-SL-BWP-PRS-POOLCONFIGCOMMON-STOP
-- ASN1STOP
```

<i>SL-BWP-PRS-PoolConfigCommon</i> field descriptions
<i>sl-PRS-TxPoolExceptional</i> Indicates the resources by which the UE is allowed to perform NR sidelink transmission in exceptional conditions on the configured BWP. This field is not present when <i>SL-BWP-PRS-PoolConfigCommon</i> is included in <i>SL-PreconfigurationNR</i>

– *SL-CBR-PriorityTxConfigList*

The IE *SL-CBR-PriorityTxConfigList* indicates the mapping between PSSCH transmission parameter (such as MCS, PRB number, retransmission number, CR limit) sets by using the indexes of the configurations provided in *sl-CBR-PSSCH-TxConfigList*, CBR ranges by an index to the entry of the CBR range configuration in *sl-CBR-RangeConfigList*, and priority ranges. It also indicates the default PSSCH transmission parameters to be used when CBR measurement results are not available, and MCS range for the MCS tables used in the resource pool.

SL-CBR-PriorityTxConfigList information element

```

-- ASN1START
-- TAG-SL-CBR-PRIORITYTXCONFIGLIST-START

SL-CBR-PriorityTxConfigList-r16 ::= SEQUENCE (SIZE (1..8)) OF SL-PriorityTxConfigIndex-r16

SL-CBR-PriorityTxConfigList-v1650 ::= SEQUENCE (SIZE (1..8)) OF SL-PriorityTxConfigIndex-v1650

SL-PriorityTxConfigIndex-r16 ::= SEQUENCE {
    sl-PriorityThreshold-r16          INTEGER (1..8)                OPTIONAL, -- Need M
    sl-DefaultTxConfigIndex-r16      INTEGER (0..maxCBR-Level-1-r16)  OPTIONAL, -- Need M
    sl-CBR-ConfigIndex-r16           INTEGER (0..maxCBR-Config-1-r16)  OPTIONAL, -- Need M
    sl-Tx-ConfigIndexList-r16        SEQUENCE (SIZE (1.. maxCBR-Level-r16)) OF SL-TxConfigIndex-r16  OPTIONAL -- Need M
}

SL-PriorityTxConfigIndex-v1650 ::= SEQUENCE {
    sl-MCS-RangeList-r16              SEQUENCE (SIZE (1..maxCBR-Level-r16)) OF SL-MinMaxMCS-List-r16  OPTIONAL -- Need M
}

SL-TxConfigIndex-r16 ::= INTEGER (0..maxTxConfig-1-r16)

-- TAG-SL-CBR-PRIORITYTXCONFIGLIST-STOP
-- ASN1STOP

```

SL-CBR-PriorityTxConfigList field descriptions
sl-CBR-ConfigIndex Indicates the CBR ranges to be used by an index to the entry of the CBR range configuration in <i>sl-CBR-RangeConfigList</i> .
sl-DefaultTxConfigIndex Indicates the PSSCH transmission parameters to be used by the UEs which do not have available CBR measurement results, by means of an index to the corresponding entry in <i>sl-Tx-ConfigIndexList</i> . Value 0 indicates the first entry in <i>sl-Tx-ConfigIndexList</i> . The field is ignored if the UE has available CBR measurement results.
sl-MCS-RangeList Indicates the minimum MCS value and maximum MCS value for the associated MCS table(s). UE shall ignore the minimum MCS value and maximum MCS value used for table of 64QAM indicated in <i>SL-CBR-PriorityTxConfigList-r16</i> if <i>SL-CBR-PriorityTxConfigList-v1650</i> is present.
sl-PriorityThreshold Indicates the upper bound of priority range which is associated with the configurations in <i>sl-CBR-ConfigIndex</i> and in <i>sl-Tx-ConfigIndexList</i> . The upper bounds of the priority ranges are configured in ascending order for consecutive entries of <i>SL-PriorityTxConfigIndex</i> in <i>SL-CBR-PriorityTxConfigList</i> . For the first entry of <i>SL-PriorityTxConfigIndex</i> , the lower bound of the priority range is 1.
SL-CBR-PriorityTxConfigList-v1650 If included, it includes the same number of entries, and listed in the same order, as in <i>SL-CBR-PriorityTxConfigList-r16</i> .

SL-CBR-CommonTxConfigList

The IE *SL-CBR-CommonTxConfigList* indicates the list of PSSCH transmission parameters (such as MCS, sub-channel number, retransmission number, CR limit) in *sl-CBR-PSSCH-TxConfigList*, and the list of CBR ranges in *sl-CBR-RangeConfigList*, to configure congestion control to the UE for sidelink communication.

SL-CBR-CommonTxConfigList information element

```

-- ASN1START
-- TAG-SL-CBR-COMMONTXCONFIGLIST-START

SL-CBR-CommonTxConfigList-r16 ::= SEQUENCE {
    sl-CBR-RangeConfigList-r16 SEQUENCE (SIZE (1..maxCBR-Config-r16)) OF SL-CBR-LevelsConfig-r16 OPTIONAL, -- Need M
    sl-CBR-PSSCH-TxConfigList-r16 SEQUENCE (SIZE (1.. maxTxConfig-r16)) OF SL-CBR-PSSCH-TxConfig-r16 OPTIONAL -- Need M
}

SL-CBR-LevelsConfig-r16 ::= SEQUENCE (SIZE (1..maxCBR-Level-r16)) OF SL-CBR-r16

SL-CBR-PSSCH-TxConfig-r16 ::= SEQUENCE {
    sl-CR-Limit-r16 INTEGER(0..10000) OPTIONAL, -- Need M
    sl-TxParameters-r16 SL-PSSCH-TxParameters-r16 OPTIONAL -- Need M
}

SL-CBR-r16 ::= INTEGER (0..100)

-- TAG-SL-CBR-COMMONTXCONFIGLIST-STOP
-- ASN1STOP

```

SL-CBR-CommonTxConfigList field descriptions
sl-CBR-RangeConfigList Each entry in <i>sl-CBR-RangeConfigList</i> is <i>SL-CBR-LevelsConfig</i> containing the list of CBR ranges. The values within each <i>SL-CBR-LevelsConfig</i> indicate the upper bound of the each CBR range (and implicitly indicate the lower bound of next CBR range) and are configured in ascending order. For the first CBR range of each <i>SL-CBR-LevelsConfig</i>, the lower bound of the CBR range is 0. Value 0 corresponds to 0, value 1 to 0.01, value 2 to 0.02, and so on.
sl-CR-Limit Indicates the maximum limit on the occupancy ratio. Value 0 corresponds to 0, value 1 to 0.0001, value 2 to 0.0002, and so on (i.e. in steps of 0.0001) until value 10000, which corresponds to 1.
sl-CBR-PSSCH-TxConfigList Indicates the list of available PSSCH transmission parameters (such as MCS, sub-channel number, retransmission number and CR limit) configurations.
sl-TxParameters Indicates PSSCH transmission parameters.

SL-CBR-CommonTxDedicatedSL-PRS-RP-List

The IE *SL-CBR-CommonTxDedicatedSL-PRS-RP-List* indicates the list of SL PRS transmission parameters (such as Maximum SL PRS transmission power, Maximum Number of SL PRS (re-)transmissions, and CR limit) in *sl-CBR-SL-PRS-TxConfigList*, and the list of CBR ranges in *sl-CBR-RangeDedicatedSL-PRS-RP-List*, to configure congestion control to the UE for sidelink positioning.

SL-CBR-CommonTxDedicatedSL-PRS-RP-List information element

```

-- ASN1START
-- TAG- SL-CBR-COMMONTXDEDICATEDSL-PRS-RP-LIST-START

SL-CBR-CommonTxDedicatedSL-PRS-RP-List-r18 ::= SEQUENCE {

```

```

sl-CBR-RangeDedicatedSL-PRS-RP-List-r18    SEQUENCE (SIZE (1..maxCBR-ConfigDedSL-PRS-1-r18)) OF SL-CBR-LevelsDedicatedSL-PRS-RP-r18
sl-CBR-SL-PRS-TxConfigList-r18              SEQUENCE (SIZE (1..maxNrofSL-PRS-TxConfig-r18)) OF SL-CBR-SL-PRS-TxConfig-r18
}
SL-CBR-LevelsDedicatedSL-PRS-RP-r18 ::= SEQUENCE (SIZE (0..maxCBR-LevelDedSL-PRS-1-r18)) OF SL-CBR-DedicatedSL-PRS-RP-r18

SL-CBR-SL-PRS-TxConfig-r18 ::= SEQUENCE {
    sl-PRS-CR-Limit-r18          INTEGER(0..10000)                                OPTIONAL, -- Need M
    sl-PRS-MaxTx-power-r18       INTEGER (-30..33)                               OPTIONAL, -- Need M
    sl-PRS-MaxNum-Transmissions-r18 INTEGER(1..32)                               OPTIONAL, -- Need M
}

SL-CBR-DedicatedSL-PRS-RP-r18 ::= INTEGER (0..100)

-- TAG-SL-CBR-COMMONTXDEDICATEDSL-PRS-RP-LIST-STOP
-- ASN1STOP

```

SL-CBR-CommonTxDedicatedSL-PRS-RP-List field descriptions

sl-CBR-RangeDedicatedSL-PRS-RP-List

Indicates the list of CBR ranges. Each entry of the list in *SL-CBR-LevelsDedicatedSL-PRS-RP* indicates the upper bound of the CBR range for the respective entry. The upper bounds of the CBR ranges are configured in ascending order for consecutive entries of *SL-CBR-LevelsDedicatedSL-PRS-RP*. For the first entry of *SL-CBR-LevelsDedicatedSL-PRS-RP* the lower bound of the CBR range is 0. Value 0 corresponds to 0, value 1 to 0.01, value 2 to 0.02, and so on.

sl-CBR-SL-PRS-TxConfigList

Indicates the list of available SL PRS transmission parameters configurations.

sl-PRS-CR-Limit

Indicates the maximum limit on the occupancy ratio. Value 0 corresponds to 0, value 1 to 0.0001, value 2 to 0.0002, and so on (i.e. in steps of 0.0001) until value 10000, which corresponds to 1.

sl-PRS-MaxNum-Transmissions

Indicates the maximum number of SL PRS (re-)transmissions.

sl-PRS-MaxTx-power

Indicates the maximum SL PRS transmission power. The unit is dBm.

– ***SL-ConfigDedicatedNR***

The IE *SL-ConfigDedicatedNR* specifies the dedicated configuration information for NR sidelink communication/discovery/positioning.

SL-ConfigDedicatedNR information element

```

-- ASN1START
-- TAG-SL-CONFIGDEDICATEDNR-START

SL-ConfigDedicatedNR-r16 ::= SEQUENCE {
    sl-PHY-MAC-RLC-Config-r16          SL-PHY-MAC-RLC-Config-r16                                OPTIONAL, -- Need M
    sl-RadioBearerToReleaseList-r16     SEQUENCE (SIZE (1..maxNrofSLRB-r16)) OF SLRB-Uu-ConfigIndex-r16  OPTIONAL, -- Need N
    sl-RadioBearerToAddModList-r16      SEQUENCE (SIZE (1..maxNrofSLRB-r16)) OF SL-RadioBearerConfig-r16  OPTIONAL, -- Need N
}

```

```

sl-MeasConfigInfoToReleaseList-r16 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-DestinationIndex-r16 OPTIONAL, -- Need N
sl-MeasConfigInfoToAddModList-r16 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-MeasConfigInfo-r16 OPTIONAL, -- Need N
t400-r16 ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000} OPTIONAL, -- Need M
...
[[
sl-PHY-MAC-RLC-Config-v1700 SetupRelease { SL-PHY-MAC-RLC-Config-v1700 } OPTIONAL, -- Need M
sl-DiscConfig-r17 SetupRelease { SL-DiscConfig-r17 } OPTIONAL, -- Need M
]],
[[
sl-DiscConfig-v1800 SL-DiscConfig-v1800 OPTIONAL, -- Need M
]],
[[
sl-DiscConfig-v1830 SL-DiscConfig-v1830 OPTIONAL, -- Need M
]],
[[
sl-DiscConfig-v1840 SL-DiscConfig-v1840 OPTIONAL, -- Need M
]]
}

SL-ConfigDedicatedNR-v16k0 ::= SEQUENCE {
    sl-PHY-MAC-RLC-Config-v16k0 SL-PHY-MAC-RLC-Config-v16k0 OPTIONAL, -- Need M
}

SL-DestinationIndex-r16 ::= INTEGER (0..maxNrofSL-Dest-1-r16)

SL-PHY-MAC-RLC-Config-r16 ::= SEQUENCE {
    sl-ScheduledConfig-r16 SetupRelease { SL-ScheduledConfig-r16 } OPTIONAL, -- Need M
    sl-UE-SelectedConfig-r16 SetupRelease { SL-UE-SelectedConfig-r16 } OPTIONAL, -- Need M
    sl-FreqInfoToReleaseList-r16 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-Freq-Id-r16 OPTIONAL, -- Need N
    sl-FreqInfoToAddModList-r16 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfig-r16 OPTIONAL, -- Need N
    sl-RLC-BearerToReleaseList-r16 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfigIndex-r16 OPTIONAL, -- Need N
    sl-RLC-BearerToAddModList-r16 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfig-r16 OPTIONAL, -- Need N
    sl-MaxNumConsecutiveDTX-r16 ENUMERATED {n1, n2, n3, n4, n6, n8, n16, n32} OPTIONAL, -- Need M
    sl-CSI-Acquisition-r16 ENUMERATED {enabled} OPTIONAL, -- Need R
    sl-CSI-SchedulingRequestId-r16 SetupRelease {SchedulingRequestId} OPTIONAL, -- Need M
    sl-SSB-PriorityNR-r16 INTEGER (1..8) OPTIONAL, -- Need R
    networkControlledSyncTx-r16 ENUMERATED {on, off} OPTIONAL, -- Need M
}

SL-PHY-MAC-RLC-Config-v16k0 ::= SEQUENCE {
    sl-FreqInfoToAddModListExt-v16k0 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigExt-v16k0 OPTIONAL, -- Need N
}

SL-PHY-MAC-RLC-Config-v1700 ::= SEQUENCE {
    sl-DRX-Config-r17 SL-DRX-Config-r17 OPTIONAL, -- Need M
    sl-RLC-ChannelToReleaseList-r17 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-ChannelID-r17 OPTIONAL, -- Cond L2U2N
    sl-RLC-ChannelToAddModList-r17 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-ChannelConfig-r17 OPTIONAL, -- Cond L2U2N
    ...
    [[
    sl-RLC-BearerToAddModListSizeExt-v1800 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfig-r16 OPTIONAL, -- Need N
    sl-RLC-BearerToReleaseListSizeExt-v1800 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfigIndex-v1800 OPTIONAL, -- Need N
    sl-FreqInfoToAddModListExt-v1800 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigExt-v1800 OPTIONAL, -- Need N
    sl-LBT-SchedulingRequestId-r18 SetupRelease {SchedulingRequestId} OPTIONAL, -- Need M
    sl-SyncFreqList-r18 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-Freq-Id-r16 OPTIONAL, -- Need M
    ]]

```

```

    sl-SyncTxMultiFreq-r18      ENUMERATED {true}
    sl-MaxTransPowerCA-r18      P-Max
    sl-SCCH-CarrierSetConfig-r18 SetupRelease {SL-SCCH-CarrierSetConfigList-r18}
    sl-PRS-SchedulingRequestId-r18 SetupRelease {SchedulingRequestId}
  ]]
}

SL-DiscConfig-r17 ::=
  sl-RelayUE-Config-r17      SEQUENCE {
    SetupRelease { SL-RelayUE-Config-r17}
    sl-RemoteUE-Config-r17    SetupRelease { SL-RemoteUE-Config-r17}
  }

SL-DiscConfig-v1800 ::=
  sl-RelayUE-ConfigU2U-r18    SEQUENCE {
    SetupRelease { SL-RelayUE-ConfigU2U-r18}
    sl-RemoteUE-ConfigU2U-r18 SetupRelease { SL-RemoteUE-ConfigU2U-r18}
  }

SL-SCCH-CarrierSetConfigList-r18 ::= SEQUENCE (SIZE (1..maxNrofSL-CarrierSetConfig-r18)) OF SL-SCCH-CarrierSetConfig-r18

SL-SCCH-CarrierSetConfig-r18 ::=
  sl-DestinationList-r18      SEQUENCE {
    SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-DestinationIdentity-r16,
    sl-SRB-Identity-r18        SEQUENCE (SIZE (1..3)) OF SRB-Identity,
    sl-AllowedCarrierFreqSet1-r18 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF INTEGER (1..maxNrofFreqSL-r16),
    sl-AllowedCarrierFreqSet2-r18 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF INTEGER (1..maxNrofFreqSL-r16)
  }

SL-DiscConfig-v1830 ::=
  sl-RemoteUE-ConfigU2U-v1830 SEQUENCE {
    SetupRelease { SL-RemoteUE-ConfigU2U-v1830}
  }

SL-DiscConfig-v1840 ::=
  sl-RelayUE-ConfigU2U-v1840 SEQUENCE {
    SetupRelease { SL-RelayUE-ConfigU2U-v1840}
  }

-- TAG-SL-CONFIGDEDICATEDNR-STOP
-- ASN1STOP

```

OPTIONAL, -- Need R
 OPTIONAL, -- Need R
 OPTIONAL, -- Need M
 OPTIONAL -- Need M

OPTIONAL, -- Cond L2RelayUE
 OPTIONAL -- Cond L2RemoteUE

OPTIONAL, -- Cond U2URelayUE
 OPTIONAL -- Cond U2URemoteUE

OPTIONAL -- Cond U2URemoteUE

OPTIONAL -- Cond U2URelayUE

<i>SL-ConfigDedicatedNR</i> field descriptions
<i>sl-LBT-SchedulingRequestId</i> Indicates the scheduling request configuration applicable for Sidelink consistent LBT failure report, as specified in TS 38.321 [3].
<i>sl-MaxTransPowerCA</i> The maximum total transmit power to be used by the UE across all sidelink carriers.
<i>sl-MeasConfigInfoToAddModList</i> This field indicates the RSRP measurement configurations for unicast destinations to add and/or modify.
<i>sl-MeasConfigInfoToReleaseList</i> This field indicates the RSRP measurement configurations for unicast destinations to remove.
<i>sl-PHY-MAC-RLC-Config</i> This field indicates the lower layer sidelink radio bearer configurations.
<i>sl-RadioBearerToAddModList</i> This field indicates one or multiple sidelink radio bearer configurations to add and/or modify. This field is not configured to the PC5 connection used for L2 U2N relay operation.
<i>sl-RadioBearerToReleaseList</i> This field indicates one or multiple sidelink radio bearer configurations to remove. This field is not configured to the PC5 connection used for L2 U2N relay operation.

SL-PHY-MAC-RLC-Config field descriptions
networkControlledSyncTx This field indicates whether the UE shall transmit synchronisation information (i.e. become synchronisation source). Value <i>on</i> indicates the UE to transmit synchronisation information while value <i>off</i> indicates the UE to not transmit such information.
sl-DRX-Config This field indicates the sidelink DRX configuration(s) for unicast, groupcast and/or broadcast communication, as specified in TS 38.321 [3].
sl-MaxNumConsecutiveDTX This field indicates the maximum number of consecutive HARQ DTX before triggering sidelink RLF. Value n1 corresponds to 1, value n2 corresponds to 2, and so on.
sl-FreqInfoToAddModList, sl-FreqInfoToAddModListExt-v16k0, sl-FreqInfoToAddModListExt-v1800 This field indicates the NR sidelink communication configuration on some carrier frequency (ies) to add and/or modify. If the network includes <i>sl-FreqInfoToAddModListExt-v16k0</i> , it includes the same number of entries, and listed in the same order, as in <i>sl-FreqInfoToAddModList-r16</i> . If the network includes <i>sl-FreqInfoToAddModListExt-v1800</i> , it includes the same number of entries, and listed in the same order, as in <i>sl-FreqInfoToAddModList-r16</i> .
sl-FreqInfoToReleaseList This field indicates the NR sidelink communication configuration on some carrier frequency (ies) to remove. In this release, only one entry can be configured in the list.
sl-RLC-BearerToAddModList, sl-RLC-BearerToAddModListSizeExt This field indicates one or multiple sidelink RLC bearer configurations to add and/or modify.
sl-RLC-BearerToReleaseList, sl-RLC-BearerToReleaseListSizeExt This field indicates one or multiple sidelink RLC bearer configurations to remove.
sl-RLC-ChannelToAddModList This field indicates one or multiple PC5 Relay RLC Channel configurations to add and/or modify. Each PC5 Relay RLC channel configuration provided by network to L2 U2N Relay UE is uniquely associated with one L2 U2N Remote UE.
sl-RLC-ChannelToReleaseList This field indicates one or multiple PC5 Relay RLC Channel configurations to remove.
sl-ScheduledConfig Indicates the configuration for UE to transmit NR sidelink communication based on network scheduling. This field is not configured simultaneously with <i>sl-UE-SelectedConfig</i> . This field is not configured to a L2 U2N Remote UE.
sl-UE-SelectedConfig Indicates the configuration used for UE autonomous resource selection. This field is not configured simultaneously with <i>sl-ScheduledConfig</i> .
sl-CSI-Acquisition Indicates whether CSI reporting is enabled in sidelink unicast. If the field is absent, sidelink CSI reporting is disabled.
sl-CSI-SchedulingRequestId If present, it indicates the scheduling request configuration applicable for Sidelink CSI Reporting MAC CE and Sidelink DRX Command MAC CE, as specified in TS 38.321 [3].
sl-PRS-SchedulingRequestId If present, it indicates the scheduling request configuration applicable for Sidelink PRS Request MAC CE, as specified in TS 38.321 [3].
sl-SSB-PriorityNR This field indicates the priority of NR sidelink SSB transmission and reception.
sl-SyncFreqList Indicates a list of candidate carrier frequencies that can be used for the synchronisation of NR sidelink communication.
sl-SyncTxMultiFreq Indicates that the UE transmits S-SSB on multiple carrier frequencies for NR sidelink communication. If this field is absent, the UE transmits S-SSB only on the synchronisation carrier frequency.

SL-SCCH-CarrierSetConfig field descriptions**sl-AllowedCarrierFreqSet1, sl-AllowedCarrierFreqSet2**

Indicates the set of carrier frequencies applicable for the transmission of the MAC SDUs from the sidelink SRB logical channels whose associated destination is included in sl-destinationList. If present, network ensures sl-AllowedCarrierFreqSet1 and sl-AllowedCarrierFreqSet2 do not include the same carrier frequency. The value 1 corresponds to the frequency of first entry in sl-FreqInfoList broadcast in SIB12, the value 2 corresponds to the frequency of first entry in sl-FreqInfoListSizeExt broadcast in SIB12, the value 3 corresponds to the frequency of second entry in sl-FreqInfoListSizeExt broadcast in SIB12 and so on.

sl-DestinationList

This field indicates the list of destination identify that the sl-AllowedCarrierFreqSet1 and sl-AllowedCarrierFreqSet2 apply. Only destination identity for unicast link can be included in this field.

sl-SRB-Identity

This field indicates the list of sidelink SRB identities that the sl-AllowedCarrierFreqSet1 and sl-AllowedCarrierFreqSet2 apply.

Conditional Presence	Explanation
L2RelayUE	For L2 U2N Relay UE, the field is optionally present, Need M. Otherwise, it is absent.
L2RemoteUE	For L2 U2N Remote UE, the field is optionally present, Need M. Otherwise, it is absent.
L2U2N	The field is optional present for L2 U2N or L2 U2U Relay UE and L2 U2N or L2 U2U Remote UE, need N. Otherwise, it is absent.
U2URelayUE	For U2U Relay UE, the field is optionally present, Need M. Otherwise, it is absent.
U2URemoteUE	For U2U Remote UE, the field is optionally present, Need M. Otherwise, it is absent.

– SL-ConfiguredGrantConfig

The IE *SL-ConfiguredGrantConfig* specifies the configured grant configuration information for NR sidelink communication.

SL-ConfiguredGrantConfig information element

```
-- ASN1START
-- TAG-SL-CONFIGUREDGRANTCONFIG-START
```

```
SL-ConfiguredGrantConfig-r16 ::=
  sl-ConfigIndexCG-r16
  sl-PeriodCG-r16
  sl-NrOfHARQ-Processes-r16
  sl-HARQ-ProcID-offset-r16
  sl-CG-MaxTransNumList-r16
  rrc-ConfiguredSidelinkGrant-r16
    sl-TimeResourceCG-Type1-r16
    sl-StartSubchannelCG-Type1-r16
    sl-FreqResourceCG-Type1-r16
    sl-TimeOffsetCG-Type1-r16
    sl-N1PUCCH-AN-r16
    sl-PSFCH-ToPUCCH-CG-Type1-r16
    sl-ResourcePoolID-r16
    sl-TimeReferenceSFN-Type1-r16
  }
  ... ,
```

```
SEQUENCE {
  SL-ConfigIndexCG-r16,
  SL-PeriodCG-r16
  INTEGER (1..16)
  INTEGER (0..15)
  SL-CG-MaxTransNumList-r16
  SEQUENCE {
    INTEGER (0..496)
    INTEGER (0..26)
    INTEGER (0..6929)
    INTEGER (0..7999)
    PUCCH-ResourceId
    INTEGER (0..15)
    SL-ResourcePoolID-r16
    ENUMERATED {sf512}
  }
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need M
  OPTIONAL, -- Need S
  OPTIONAL, -- Need M
}
```

```

    [[
      sl-N1PUCCH-AN-Type2-r16                PUCCH-ResourceId
    ]],
    [[
      sl-StartRBsetCG-Type1-r18              INTEGER (0..4)
    ]]
  }

SL-ConfigIndexCG-r16 ::=                INTEGER (0..maxNrofCG-SL-1-r16)

SL-CG-MaxTransNumList-r16 ::=          SEQUENCE (SIZE (1..8)) OF SL-CG-MaxTransNum-r16

SL-CG-MaxTransNum-r16 ::=              SEQUENCE {
  sl-Priority-r16                       INTEGER (1..8),
  sl-MaxTransNum-r16                   INTEGER (1..32)
}

SL-PeriodCG-r16 ::=                   CHOICE{
  sl-PeriodCG1-r16                     ENUMERATED {ms100, ms200, ms300, ms400, ms500, ms600, ms700, ms800, ms900, ms1000, spare6,
  sl-PeriodCG2-r16                     INTEGER (1..99)
}

-- TAG-SL-CONFIGUREDGRANTCONFIG-STOP
-- ASN1STOP

```

OPTIONAL -- Need M

OPTIONAL -- Need M

<i>SL-ConfiguredGrantConfig</i> field descriptions
<i>rrc-ConfiguredSidelinkGrant</i> Configuration for "sidelink configured grant" transmission with fully RRC-configured SL grant (Type1). If this field is not configured, the UE uses SL grant configured by DCI addressed to SL-CS-RNTI (Type2).
<i>sl-ConfigIndexCG</i> This field indicates the ID to identify sidelink configured grant.
<i>sl-CG-MaxTransNumList</i> This field indicates the maximum number of times that a TB can be transmitted using the resources provided by the sidelink configured grant. <i>sl-Priority</i> corresponds to the logical channel priority.
<i>sl-FreqResourceCG-Type1</i> Indicates the frequency resource location of sidelink configured grant type 1. An index giving valid combinations of one or two starting sub-channel and length (jointly encoded) as resource indicator value (RIV), as defined in TS 38.214 [19].
<i>sl-HARQ-Procid-Offset</i> Indicates the offset used in deriving the HARQ process ID for sidelink configured grant type 1 or sidelink configured grant type 2, see TS 38.321 [3], clause 5.8.3.
<i>sl-N1PUCCH-AN</i> This field indicates the PUCCH resource for HARQ feedback for sidelink configured grant type 1. The actual PUCCH-Resource is configured in <i>sl-PUCCH-Config</i> and referred to by its ID.
<i>sl-N1PUCCH-AN-Type2</i> This field indicates the PUCCH resource for HARQ feedback for PSSCH/PSSCH transmissions without a corresponding PDCCH on sidelink configured grant type 2. The actual PUCCH-Resource is configured in <i>sl-PUCCH-Config</i> and referred to by its ID.
<i>sl-NrofHARQ-Processes</i> This field indicates the number of HARQ processes configured for a specific sidelink configured grant. It applies for both type 1 and type 2.
<i>sl-PeriodCG</i> This field indicates the period of sidelink configured grant in the unit of ms.
<i>sl-PSFCH-ToPUCCH-CG-Type1</i> This field, for sidelink configured grant type 1, indicates slot offset between the PSFCH associated with the last PSSCH resource of each period and the PUCCH occasion used for reporting sidelink HARQ.
<i>sl-ResourcePoolID</i> Indicates the resource pool in which the sidelink configured grant type 1 is applied.
<i>sl-StartRBsetCG-Type1</i> Indicates starting RB set index of the initial PSSCH transmission of the sidelink configured grant Type 1 for interlace RB-based PSSCH transmission.
<i>sl-StartSubchannelCG-Type1</i> This field indicates the starting sub-channel of sidelink configured grant type 1. An index giving valid sub-channel index.
<i>sl-TimeOffsetCG-Type1</i> This field indicates the slot offset with respect to logical slot defined by <i>sl-TimeReferenceSFN-Type1</i> , as specified in TS 38.321 [3].
<i>sl-TimeReferenceSFN-Type1</i> Indicates SFN used for determination of the offset of a resource in time domain. If it is present, the UE uses the 1 st logical slot of associated resource pool after the starting time of the closest SFN with the indicated number preceding the reception of the sidelink configured grant configuration type 1 as reference logical slot, see TS 38.321 [3], clause 5.8.3. If it is not present, the reference SFN is 0.
<i>sl-TimeResourceCG-Type1</i> This field indicates the time resource location of sidelink configured grant type 1. An index giving valid combinations of up to two slot positions (jointly encoded) as time resource indicator value (TRIV), as defined in TS 38.212 [17].

– *SL-ConfiguredGrantConfigDedicatedSL-PRS-RP*

The IE *SL-ConfiguredGrantConfigDedicatedSL-PRS-RP* specifies the configured grant configuration information for NR sidelink positioning in a dedicated SL-PRS resource pool.

SL-ConfiguredGrantConfigDedicatedSL-PRS-RP information element

```
-- ASN1START
-- TAG-SL-CONFIGUREDGRANTCONFIGDEDICATEDSL-PRS-RP-START

SL-ConfiguredGrantConfigDedicatedSL-PRS-RP-r18 ::= SEQUENCE {
    sl-PRS-ConfigIndexCG-r18          SL-ConfigIndexCG-r16,
    sl-PRS-PeriodCG-r18              SL-PeriodCG-r16,
    sl-PRS-ResourcePoolID-r18        SL-ResourcePoolID-r16,
    rrc-ConfiguredSidelinkGrantDedicatedSL-PRS-RP-r18 SEQUENCE {
        sl-TimeOffsetCG-Type1-r18    INTEGER (0..7999),
        sl-TimeReferenceSFN-Type1-r18 ENUMERATED {sfn512},
        sl-TimeResourceCG-Type1-r18  INTEGER (0..496),
        sl-PRS-ResourceIndicationFirstType1-r18 INTEGER(0..11),
        sl-PRS-ResourceIndicationFutureType1-r18 INTEGER(0..143)
    }
}

-- TAG-SL-CONFIGUREDGRANTCONFIGDEDICATEDSL-PRS-RP-STOP
-- ASN1STOP
```

OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need R
OPTIONAL, -- Need S
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M

SL-ConfiguredGrantConfigDedicatedSL-PRS-RP field descriptions

<i>sl-PRS-ConfigIndexCG</i>
This field indicates the ID to identify sidelink configured grant. The field value should not be duplicated with <i>sl-ConfigIndexCG</i> in IE <i>SL-ConfiguredGrantConfig</i> .
<i>sl-PRS-PeriodCG</i>
This field indicates the period of SL PRS configured grant in a dedicated resources in ms for either CG type 1 or CG type 2.
<i>sl-PRS-ResourceIndicationFirstType1</i>
Indicates SL-PRS Resource ID for the first SL-PRS transmission.
<i>sl-PRS-ResourceIndicationFutureType1</i>
Indicates SL-PRS resource IDs for future SL PRS transmissions. An index giving valid combinations of up to two SL PRS resource IDs (jointly encoded) .
<i>sl-PRS-ResourcePoolID</i>
Indicates the resource pool in which the configured sidelink grant Type 1 is applied. This field value is configured with value up to 8 (<i>maxNrofSL-PRS-TxPool-r18</i>). The network always configures this field when <i>rrc-ConfiguredSidelinkGrantDedicatedSL-PRS-RP</i> contains parameters for a type 1 configured grant.
<i>sl-TimeOffsetCG-Type1</i>
This field indicates the slot offset with respect to logical slot defined by <i>sl-TimeReferenceSFN-Type1</i> , as specified in TS 38.321 [3].
<i>sl-TimeReferenceSFN-Type1</i>
Indicates SFN used for determination of the offset of a resource in time domain. If it is present, the UE uses the 1 st logical slot of associated resource pool after the starting time of the closest SFN with the indicated number preceding the reception of the sidelink configured grant configuration type 1 as reference logical slot, see TS 38.321 [3], clause 5.8.3. If it is not present, the reference SFN is 0.
<i>sl-TimeResourceCG-Type1</i>
This field indicates the time resource location of sidelink configured grant type 1. An index giving valid combinations of up to two slot positions (jointly encoded) as time resource indicator value (TRIV), as defined in TS 38.212 [17].

– *SL-DestinationIdentity*

The IE *SL-DestinationIdentity* is used to identify a destination of a NR sidelink communication.

SL-DestinationIdentity information element

```
-- ASN1START
-- TAG-SL-DESTINATIONIDENTITY-START

SL-DestinationIdentity-r16 ::=          BIT STRING (SIZE (24))

-- TAG-SL-DESTINATIONIDENTITY-STOP
-- ASN1STOP
```

– *SL-DRX-Config*

The IE *SL-DRX-Config* is used to configure DRX related parameters for NR sidelink communication/discovery. The SL DRX timers should be calculated in the unit of physical slot.

SL-DRX-Config information element

```
-- ASN1START
-- TAG-SL-DRX-CONFIG-START

SL-DRX-Config-r17 ::=
    SL-DRX-ConfigGC-BC-r17
    SL-DRX-ConfigUC-ToReleaseList-r17
    SL-DRX-ConfigUC-ToAddModList-r17
    ...
}

SL-DRX-ConfigUC-Info-r17 ::=
    SL-DestinationIndex-r17
    SL-DRX-Config-r17
    ...
}

-- TAG-SL-DRX-CONFIG-STOP
-- ASN1STOP
```

SEQUENCE {

SL-DRX-ConfigGC-BC-r17	OPTIONAL,	-- Cond H0
SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-DestinationIndex-r16	OPTIONAL,	-- Need N
SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-DRX-ConfigUC-Info-r17	OPTIONAL,	-- Need N

SEQUENCE {

SL-DestinationIndex-r16	OPTIONAL,	-- Need N
SL-DRX-Config-r17	OPTIONAL,	-- Need N

<i>SL-DRX-Config</i> field descriptions	
<i>sl-DRX-ConfigGC-BC</i>	This field indicates the sidelink DRX configurations for groupcast and broadcast communication, as specified in TS 38.321 [3].
<i>sl-DRX-ConfigUC-ToReleaseList</i>	This field indicates the sidelink DRX configurations for corresponding unicast destinations to remove.
<i>sl-DRX-ConfigUC-ToAddModList</i>	This field indicates the sidelink DRX configurations for corresponding unicast destinations to add and/or modify.

Conditional Presence	Explanation
<i>HO</i>	This field is optionally present, need M, in an <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> ; otherwise it is absent, Need M.

– *SL-DRX-ConfigGC-BC*

The IE *SL-DRX-ConfigGC-BC* is used to configure DRX related parameters for NR sidelink groupcast and broadcast communication, unicast/broadcast based communication of Direct Link Establishment Request (TS 24.587 [57]), and discovery message (TS 24.554 [72]).

SL-DRX-ConfigGC-BC information element

```
-- ASN1START
-- TAG-SL-DRX-CONFIGGC-BC-START

SL-DRX-ConfigGC-BC-r17 ::= SEQUENCE {
    sl-DRX-GC-BC-PerQoS-List-r17 SEQUENCE (SIZE (1..maxSL-GC-BC-DRX-QoS-r17)) OF SL-DRX-GC-BC-QoS-r17 OPTIONAL, -- Need M
    sl-DRX-GC-generic-r17 SL-DRX-GC-Generic-r17 OPTIONAL, -- Need M
    sl-DefaultDRX-GC-BC-r17 SL-DRX-GC-BC-QoS-r17 OPTIONAL, -- Need M
    ...
}

SL-DRX-GC-BC-QoS-r17 ::= SEQUENCE {
    sl-DRX-GC-BC-MappedQoS-FlowList-r17 SEQUENCE (SIZE (1..maxNrofSL-QFIs-r16)) OF SL-QoS-Profile-r16 OPTIONAL, -- Need M
    sl-DRX-GC-BC-OnDurationTimer-r17 CHOICE {
        subMilliseconds INTEGER (1..31),
        milliseconds ENUMERATED {
            ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
            ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
            ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1}
    },
    sl-DRX-GC-InactivityTimer-r17 ENUMERATED {
        ms0, ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60, ms80,
        ms100, ms200, ms300, ms500, ms750, ms1280, ms1920, ms2560, spare9, spare8,
        spare7, spare6, spare5, spare4, spare3, spare2, spare1},
    sl-DRX-GC-BC-Cycle-r17 ENUMERATED {
        ms10, ms20, ms32, ms40, ms60, ms64, ms70, ms80, ms128, ms160, ms256, ms320, ms512,
        ms640, ms1024, ms1280, ms2048, ms2560, ms5120, ms10240, spare12, spare11, spare10,
        spare9, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1},
    ...
}
```

```

SL-DRX-GC-Generic-r17 ::=
    sl-DRX-GC-HARQ-RTT-Timer1-r17
    sl-DRX-GC-HARQ-RTT-Timer2-r17
    sl-DRX-GC-RetransmissionTimer-r17
SEQUENCE {
    ENUMERATED {sl0, sl1, sl2, sl4, spare4, spare3, spare2, spare1} OPTIONAL, -- Need M
    ENUMERATED {sl0, sl1, sl2, sl4, spare4, spare3, spare2, spare1} OPTIONAL, -- Need M
    ENUMERATED {
        sl0, sl1, sl2, sl4, sl6, sl8, sl16, sl24, sl33, sl40, sl64, sl80, sl96, sl112, sl128,
        sl160, sl320, spare15, spare14, spare13, spare12, spare11, spare10, spare9, spare8,
        spare7, spare6, spare5, spare4, spare3, spare2, spare1}
}

-- TAG-SL-DRX-CONFIGGC-BC-STOP
-- ASN1STOP

```

<i>SL-DRX-ConfigGC-BC</i> field descriptions
<i>sl-DefaultDRX-GC-BC</i> Indicates the default sidelink DRX configuration for groupcast and broadcast communications, which is used for QoS profile(s) that cannot be mapped into DRX configuration(s) configured for dedicated QoS profile(s). This field can be applied for the broadcast based or unicast based communication of Direct Link Establishment Request as described in TS 24.587 [57], ProSe Direct Link Establishment Request message and discovery message as described in TS 24.554 [72].
<i>sl-DRX-GC-BC-PerQoS-List</i> List of one or multiple sidelink DRX configurations for groupcast and broadcast communication, which are mapped from QoS profile(s).
<i>sl-DRX-GC-BC-Cycle</i> Value in ms, ms10 corresponds to 10ms, ms20 corresponds to 20 ms, ms32 corresponds to 32 ms, and so on.
<i>sl-DRX-GC-BC-MappedQoS-FlowsList</i> List of QoS profiles of the NR sidelink communication, which are mapped to a sidelink DRX configuration.
<i>sl-DRX-GC-BC-OnDurationTimer</i> Value in multiples of 1/32 ms (subMilliSeconds) or in ms (milliSecond). For the latter, value ms1 corresponds to 1 ms, value ms2 corresponds to 2 ms, and so on.
<i>sl-DRX-GC-HARQ-RTT-Timer1, sl-DRX-GC-HARQ-RTT-Timer2</i> Value in number of slot lengths of the sidelink BWP where the transport block was received. Value sl0 corresponds to 0 slots, sl1 corresponds to 1 slot, sl2 corresponds to 2 slots, and so on. <i>sl-DRX-GC-HARQ-RTT-Timer1</i> is used for HARQ feedback enabled sidelink retransmission if SCI does not indicate retransmission resource(s). <i>sl-DRX-GC-HARQ-RTT-Timer2</i> is used for HARQ feedback disabled sidelink retransmission in resource pool configured with PSFCH if SCI does not indicate retransmission resource(s).
<i>sl-DRX-GC-Generic</i> Indicates a sidelink DRX configuration for groupcast communication, which is applicable to any QoS profile or any Destination Layer-2 ID.
<i>sl-DRX-GC-InactivityTimer</i> Value in multiple integers of 1 ms, ms0 corresponds to 0, ms1 corresponds to 1 ms, ms2 corresponds to 2 ms, and so on. This field is only valid for groupcast communication.
<i>sl-DRX-GC-RetransmissionTimer</i> Value in number of slot lengths of the sidelink BWP where the transport block was received. Value sl0 corresponds to 0 slots, sl1 corresponds to 1 slot, sl2 corresponds to 2 slots, and so on.

– *SL-DRX-ConfigUC*

The IE *SL-DRX-ConfigUC* is used to configure sidelink DRX related parameters for unicast communication.

***SL-DRX-ConfigUC* information element**

```

-- ASN1START
-- TAG-DRX-CONFIGUC-START

```



```

SL-DRX-ConfigUC-r17 ::=
  sl-drx-onDurationTimer-r17

  sl-drx-InactivityTimer-r17

  sl-drx-HARQ-RTT-Timer1-r17
  sl-drx-HARQ-RTT-Timer2-r17
  sl-drx-RetransmissionTimer-r17

  sl-drx-CycleStartOffset-r17
    ms10
    ms20
    ms32
    ms40
    ms60
    ms64
    ms70
    ms80
    ms128
    ms160
    ms256
    ms320
    ms512
    ms640
    ms1024
    ms1280
    ms2048
    ms2560
    ms5120
    ms10240
  },
  sl-drx-SlotOffset

}

-- TAG-SL-DRX-CONFIGUC-STOP
-- ASN1STOP

```

```

SEQUENCE {
  CHOICE {
    subMilliseconds INTEGER (1..31),
    milliseconds ENUMERATED {
      ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
      ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
      ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1}
    },
    ENUMERATED {
      ms0, ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60, ms80,
      ms100, ms200, ms300, ms500, ms750, ms1280, ms1920, ms2560, spare9, spare8,
      spare7, spare6, spare5, spare4, spare3, spare2, spare1},
    ENUMERATED {sl0, sl1, sl2, sl4, spare4, spare3, spare2, spare1} OPTIONAL, -- Need M
    ENUMERATED {sl0, sl1, sl2, sl4, spare4, spare3, spare2, spare1} OPTIONAL, -- Need M
    ENUMERATED {
      sl0, sl1, sl2, sl4, sl6, sl8, sl16, sl24, sl33, sl40, sl64, sl80, sl96, sl112, sl128,
      sl160, sl320, spare15, spare14, spare13, spare12, spare11, spare10, spare9,
      spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1},
    CHOICE {
      INTEGER(0..9),
      INTEGER(0..19),
      INTEGER(0..31),
      INTEGER(0..39),
      INTEGER(0..59),
      INTEGER(0..63),
      INTEGER(0..69),
      INTEGER(0..79),
      INTEGER(0..127),
      INTEGER(0..159),
      INTEGER(0..255),
      INTEGER(0..319),
      INTEGER(0..511),
      INTEGER(0..639),
      INTEGER(0..1023),
      INTEGER(0..1279),
      INTEGER(0..2047),
      INTEGER(0..2559),
      INTEGER(0..5119),
      INTEGER(0..10239)
    }
  },
  INTEGER (0..31)
}

```

<i>SL-DRX-ConfigUC</i> field descriptions
<i>sl-drx-CycleStartOffset</i> <i>sl-drx-Cycle</i> in ms and <i>sl-drx-StartOffset</i> in multiples of 1 ms.
<i>sl-drx-HARQ-RTT-Timer1</i>, <i>sl-drx-HARQ-RTT-Timer2</i> Value in number of slot lengths of the BWP where the transport block was received. Value <i>sl0</i> corresponds to 0 slots, <i>sl1</i> corresponds to 1 slot, <i>sl2</i> corresponds to 2 slots, and so on. <i>sl-drx-HARQ-RTT-Timer1</i> is used for HARQ feedback enabled sidelink retransmission if SCI does not indicate retransmission resource(s). <i>sl-drx-HARQ-RTT-Timer2</i> is used for HARQ feedback disabled sidelink retransmission in resource pool configured with PSFCH if SCI does not indicate retransmission resource(s).
<i>sl-drx-InactivityTimer</i> Value in number of slot lengths of the BWP where the transport block was received, <i>sl0</i> corresponds to 0, <i>sl1</i> corresponds to 1 slot, <i>sl2</i> corresponds to 2 slots, and so on.
<i>sl-drx-onDurationTimer</i> Value in multiples of 1/32 ms (subMilliSeconds) or in ms (milliSecond). For the latter, value <i>ms1</i> corresponds to 1 ms, value <i>ms2</i> corresponds to 2 ms, and so on.
<i>sl-drx-RetransmissionTimer</i> Value in number of slot lengths of the BWP where the transport block was received. Value <i>sl0</i> corresponds to 0 slots, <i>sl1</i> corresponds to 1 slot, <i>sl2</i> corresponds to 2 slots, and so on.
<i>sl-drx-SlotOffset</i> Value in 1/32 ms. Value 0 corresponds to 0 ms, value 1 corresponds to 1/32 ms, value 2 corresponds to 2/32 ms, and so on.

– *SL-DRX-ConfigUC-SemiStatic*

The IE *SL-DRX-ConfigUC-SemiStatic* is used to indicate the semi-static sidelink DRX related parameters for unicast communication.

SL-DRX-ConfigUC-SemiStatic information element

```
-- ASN1START
-- TAG-DRX-CONFIGUCSEMISTATIC-START
```

```
SL-DRX-ConfigUC-SemiStatic-r17 ::=
    sl-drx-onDurationTimer-r17
```

```
SEQUENCE {
    CHOICE {
        subMilliSeconds INTEGER (1..31),
        milliSeconds    ENUMERATED {
            ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
            ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
            ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1}
    },
    CHOICE {
        INTEGER(0..9),
        INTEGER(0..19),
        INTEGER(0..31),
        INTEGER(0..39),
        INTEGER(0..59),
        INTEGER(0..63),
        INTEGER(0..69),
        INTEGER(0..79),
        INTEGER(0..127),
        INTEGER(0..159),
        INTEGER(0..255),
        INTEGER(0..319),
        INTEGER(0..511),
    }
}
```

```
sl-drx-CycleStartOffset-r17
    ms10
    ms20
    ms32
    ms40
    ms60
    ms64
    ms70
    ms80
    ms128
    ms160
    ms256
    ms320
    ms512
```

```

ms640          INTEGER(0..639),
ms1024         INTEGER(0..1023),
ms1280         INTEGER(0..1279),
ms2048         INTEGER(0..2047),
ms2560         INTEGER(0..2559),
ms5120         INTEGER(0..5119),
ms10240        INTEGER(0..10239)
},
sl-drx-SlotOffset-r17    INTEGER (0..31)
}

-- TAG-SL-DRX-CONFIGUCSEMISTATIC-STOP
-- ASN1STOP

```

– *SL-FreqConfig*

The IE *SL-FreqConfig* specifies the dedicated configuration information on one particular carrier frequency for NR sidelink communication/positioning.

SL-FreqConfig information element

```

-- ASN1START
-- TAG-SL-FREQCONFIG-START

SL-FreqConfig-r16 ::= SEQUENCE {
    sl-Freq-Id-r16,
    sl-SCS-SpecificCarrierList-r16 SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier,
    sl-AbsoluteFrequencyPointA-r16 ARFCN-ValueNR OPTIONAL, -- Need M
    sl-AbsoluteFrequencySSB-r16 ARFCN-ValueNR OPTIONAL, -- Need R
    frequencyShift7p5khzSL-r16 ENUMERATED {true} OPTIONAL, -- Cond V2X-SL-Shared
    valueN-r16 INTEGER (-1..1),
    sl-BWP-ToReleaseList-r16 SEQUENCE (SIZE (1..maxNrofSL-BWPs-r16)) OF BWP-Id OPTIONAL, -- Need N
    sl-BWP-ToAddModList-r16 SEQUENCE (SIZE (1..maxNrofSL-BWPs-r16)) OF SL-BWP-Config-r16 OPTIONAL, -- Need N
    sl-SyncConfigList-r16 SL-SyncConfigList-r16 OPTIONAL, -- Need M
    sl-SyncPriority-r16 ENUMERATED {gnss, gnbEnb} OPTIONAL -- Need M
}

SL-Freq-Id-r16 ::= INTEGER (1.. maxNrofFreqSL-r16)

SL-FreqConfigExt-v16k0 ::= SEQUENCE {
    additionalSpectrumEmission-r16 AdditionalSpectrumEmission OPTIONAL -- Need M
}

SL-FreqConfigExt-v1800 ::= SEQUENCE {
    absenceOfAnyOtherTechnology-r18 ENUMERATED {true} OPTIONAL, -- Need R
    sl-FreqSelectionConfigList-r18 SEQUENCE (SIZE (1..8)) OF SL-FreqSelectionConfig-r18 OPTIONAL, -- Need R
    sl-SyncTxDisabled-r18 ENUMERATED {true} OPTIONAL, -- Need R
    sl-EnergyDetectionConfig-r18 CHOICE {
        sl-MaxEnergyDetectionThreshold-r18 INTEGER (-85..-52),
        sl-EnergyDetectionThresholdOffset-r18 INTEGER (-13..20)
    }
    ue-ToUE-COT-SharingED-Threshold-r18 INTEGER (-85..-52)
}

```

```

    harq-ACK-FeedbackRatioforCW-AdjustmentGC-Option2-r18 INTEGER (10..100)
    ...,
    [[
    additionalSpectrumEmission-v1860    AdditionalSpectrumEmission-v1760
    ]]
}

-- TAG-SL-FREQCONFIG-STOP
-- ASN1STOP
```

OPTIONAL, -- Need R

OPTIONAL -- Need M

<i>SL-FreqConfig</i> field descriptions
<i>absenceOfAnyOtherTechnology</i> Presence of this field indicates absence on a long term basis (e.g. by level of regulation) of any other technology sharing the carrier; absence of this field indicates the potential presence of any other technology sharing the carrier, as specified in TS 37.213 [48] clauses 4.5. This parameter is not expected to be provided if the sidelink carrier is overlapped with uplink carrier.
<i>additionalSpectrumEmission</i> Provides the <i>additionalSpectrumEmission</i> values as defined in TS 38.101-1 [15], clause 6.2E.3.1 or 6.2E.3F.1. Only one of <i>additionalSpectrumEmission-r16</i> or <i>additionalSpectrumEmission-v1860</i> is configured by network for each sidelink frequency.
<i>sl-EnergyDetectionConfig</i> Indicates whether to use the <i>maxEnergyDetectionThreshold</i> or the <i>energyDetectionThresholdOffset</i> (see TS 37.213 [48], clause 4.5.5).
<i>sl-EnergyDetectionThresholdOffset</i> Indicates the offset to the default maximum energy detection threshold value. Unit in dB. Value -13 corresponds to -13dB, value -12 corresponds to -12dB, and so on (i.e. in steps of 1dB) as specified in TS 37.213 [48], clause 4.5.5.
<i>frequencyShift7p5khzSL</i> Enable the NR SL transmission with a 7.5 kHz shift to the LTE raster. If the field is absent, the frequency shift is disabled.
<i>harq-ACK-FeedbackRatioforCW-AdjustmentGC-Option2</i> Indicates the ratio threshold for contention window adjustment for SL groupcast option 2 as specified in TS 37.213 [48], clause 4.5.4. Unit is percentage.
<i>sl-MaxEnergyDetectionThreshold</i> Indicates the absolute maximum energy detection threshold value. Unit in dBm. Value -85 corresponds to -85 dBm, value -84 corresponds to -84 dBm, and so on (i.e. in steps of 1dBm) as specified in TS 37.213 [48], clause 4.5.5.
<i>sl-AbsoluteFrequencyPointA</i> Absolute frequency of the reference resource block (Common RB 0). Its lowest subcarrier is also known as Point A.
<i>sl-AbsoluteFrequencySSB</i> Indicates the frequency location of sidelink SSB. The transmission bandwidth for sidelink SSB is within the bandwidth of this sidelink BWP.
<i>sl-BWP-ToAddModList</i> This field indicates the list of sidelink BWP(s) on which the NR sidelink communication configuration is to be added or reconfigured. In this release, only one BWP is allowed to be configured for NR sidelink communication.
<i>sl-BWP-ToReleaseList</i> This field indicates the list of sidelink BWP(s) on which the NR sidelink communication configuration is to be released.
<i>sl-Freq-Id</i> This field indicates the identity of the dedicated configuration information on the carrier frequency for NR sidelink communication.
<i>sl-SCS-SpecificCarrierList</i> A set of UE specific channel bandwidth and location configurations for different subcarrier spacings (numerologies). Defined in relation to Point A. The UE uses the configuration provided in this field only for the purpose of channel bandwidth and location determination. In this release, only one <i>SCS-SpecificCarrier</i> is allowed to be configured for NR sidelink communication.
<i>sl-SyncTxDisabled</i> Indicates that the carrier, even though equipped with synchronisation resources, cannot be used as a synchronisation carrier frequency to transmit S-SSB.
<i>sl-SyncPriority</i> This field indicates synchronization priority order, as specified in clause 5.8.6. <i>sl-SyncPriority</i> is configured with the same value across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies.
<i>ue-ToUE-COT-SharingED-Threshold</i> Indicates the energy detection threshold that a UE uses to initiate a channel occupancy with other UE(s), and the other UE(s) that shares the initiated channel occupancy shall use this configured parameter for accessing the channel(s) as specified in TS 37.213 [48], clause 4.5.5 for sidelink channel access. Unit in dBm. Value -85 corresponds to -85 dBm, value -84 corresponds to -84 dBm, and so on (i.e. in steps of 1dBm).
<i>valueN</i> Indicate the NR SL transmission with a valueN *5kHz shift to the LTE raster. (see TS 38.101-1 [15], clause 5.4E.2).

Conditional Presence	Explanation
V2X-SL-Shared	This field is mandatory present if the carrier frequency configured for NR sidelink communication is shared by V2X sidelink communication. It is absent, Need R, otherwise.

– *SL-FreqConfigCommon*

The IE *SL-FreqConfigCommon* specifies the cell-specific configuration information on one particular carrier frequency for NR sidelink communication/positioning.

SL-FreqConfigCommon information element

```
-- ASN1START
-- TAG-SL-FREQCONFIGCOMMON-START

SL-FreqConfigCommon-r16 ::= SEQUENCE {
    sl-SCS-SpecificCarrierList-r16 SEQUENCE (SIZE (1..maxSCSs)) OF SCS-SpecificCarrier,
    sl-AbsoluteFrequencyPointA-r16 ARFCN-ValueNR,
    sl-AbsoluteFrequencySSB-r16 ARFCN-ValueNR OPTIONAL, -- Need R
    frequencyShift7p5khzSL-r16 ENUMERATED {true} OPTIONAL, -- Cond V2X-SL-Shared
    valueN-r16 INTEGER (-1..1),
    sl-BWP-List-r16 SEQUENCE (SIZE (1..maxNrofSL-BWPs-r16)) OF SL-BWP-ConfigCommon-r16 OPTIONAL, -- Need R
    sl-SyncPriority-r16 ENUMERATED {gnss, gnbEnb} OPTIONAL, -- Need R
    sl-NbAsSync-r16 BOOLEAN OPTIONAL, -- Need R
    sl-SyncConfigList-r16 SL-SyncConfigList-r16 OPTIONAL, -- Need R
    ...
    [[
        sl-UnlicensedFreqConfigCommon-r18 SEQUENCE {
            absenceOfAnyOtherTechnology-r18 ENUMERATED {true} OPTIONAL, -- Need R
            sl-FreqSelectionConfigList-r18 SEQUENCE (SIZE (1..8)) OF SL-FreqSelectionConfig-r18 OPTIONAL, -- Need R
            sl-SyncTxDisabled-r18 ENUMERATED {true} OPTIONAL, -- Need R
            sl-EnergyDetectionConfig-r18 CHOICE {
                sl-MaxEnergyDetectionThreshold-r18 INTEGER (-85..-52),
                sl-EnergyDetectionThresholdOffset-r18 INTEGER (-13..20)
            } OPTIONAL, -- Need R
            ue-ToUE-COT-SharingED-Threshold-r18 INTEGER (-85..-52) OPTIONAL, -- Need R
            harq-ACK-FeedbackRatioforCW-AdjustmentGC-Option2-r18 INTEGER (10..100) OPTIONAL, -- Need R
        }
        sl-PosBWP-List-r18 SEQUENCE ( SIZE (1..maxNrofSL-BWPs-r16)) OF SL-PosBWP-ConfigCommon-r18 OPTIONAL, -- Cond SIB12
    ]],
    [[
        additionalSpectrumEmission-v1860 AdditionalSpectrumEmission-v1760 OPTIONAL -- Need R
    ]]
}

SL-FreqConfigCommonExt-v16k0 ::= SEQUENCE {
    additionalSpectrumEmission-r16 AdditionalSpectrumEmission OPTIONAL -- Need R
}

-- TAG-SL-FREQCONFIGCOMMON-STOP
```

-- ASN1STOP

<i>SL-FreqConfigCommon</i> field descriptions
<i>absenceOfAnyOtherTechnology</i> Presence of this field indicates absence on a long term basis (e.g. by level of regulation) of any other technology sharing the carrier; absence of this field indicates the potential presence of any other technology sharing the carrier, as specified in TS 37.213 [48] clauses 4.5.5. This parameter is not expected to be provided if the sidelink carrier is overlapped with uplink carrier.
<i>additionalSpectrumEmission</i> Provides the <i>additionalSpectrumEmission</i> values as defined in TS 38.101-1 [15], clause 6.2E.3.1 or 6.2E.3F.1. Only one of <i>additionalSpectrumEmission-r16</i> or <i>additionalSpectrumEmission-v1860</i> is configured by network for each sidelink frequency.
<i>sl-EnergyDetectionConfig</i> Indicates whether to use the <i>maxEnergyDetectionThreshold</i> or the <i>energyDetectionThresholdOffset</i> (see TS 37.213 [48], clause 4.5.5).
<i>sl-EnergyDetectionThresholdOffset</i> Indicates the offset to the default maximum energy detection threshold value. Unit in dB. Value -13 corresponds to -13dB, value -12 corresponds to -12dB, and so on (i.e. in steps of 1dB) as specified in TS 37.213 [48], clause 4.5.5.
<i>frequencyShift7p5khzSL</i> Enable the NR SL transmission with a 7.5 kHz shift to the LTE raster. If the field is absent, the frequency shift is disabled.
<i>harq-ACK-FeedbackRatioforCW-AdjustmentGC-Option2</i> Indicates the ratio threshold for contention window adjustment for SL groupcast option 2 as specified in TS 37.213 [48], clause 4.5.4. Unit is percentage.
<i>sl-MaxEnergyDetectionThreshold</i> Indicates the absolute maximum energy detection threshold value. Unit in dBm. Value -85 corresponds to -85 dBm, value -84 corresponds to -84 dBm, and so on (i.e. in steps of 1dBm) as specified in TS 37.213 [48], clause 4.5.5.
<i>sl-AbsoluteFrequencyPointA</i> Absolute frequency of the reference resource block (Common RB 0). Its lowest subcarrier is also known as Point A.
<i>sl-AbsoluteFrequencySSB</i> Indicates the frequency location of sidelink SSB. The transmission bandwidth for sidelink SSB is within the bandwidth of this sidelink BWP.
<i>sl-BWP-List</i> This field indicates the list of sidelink BWP(s) on which the NR sidelink communication configuration. In this release, only one BWP is allowed to be configured for NR sidelink communication.
<i>sl-NbAsSync</i> This field indicates whether the network can be selected as synchronization reference directly/indirectly only, if <i>sl-SyncPriority</i> is set to gnss. If this field is set to TRUE, the network is enabled to be selected as synchronization reference directly/indirectly. The field is only present in <i>SidelinkPreconfigNR</i> . Otherwise it is absent. All values in <i>sl-NbAsSync</i> are same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies.
<i>sl-PosBWP-List</i> This field indicates the list of sidelink BWP(s) for NR sidelink positioning configuration. Only one BWP is allowed to be configured for NR sidelink positioning.
<i>sl-SyncTxDisabled</i> Indicates that the carrier, even though equipped with synchronisation resources, cannot be used as a synchronisation carrier frequency to transmit S-SSB.
<i>sl-SyncPriority</i> This field indicates synchronization priority order, as specified in clause 5.8.6. All values in <i>sl-SyncPriority</i> are same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies.
<i>sl-SyncConfigList</i> This field indicates the configuration by which the UE is allowed to receive and transmit synchronisation information for NR sidelink communication. Network configures <i>sl-SyncConfig</i> including <i>txParameters</i> when configuring UEs to transmit synchronisation information. If this field is configured in <i>SL-PreconfigurationNR-r16</i> , only one entry is configured in <i>sl-SyncConfigList</i> .
<i>ue-ToUE-COT-SharingED-Threshold</i> Indicates the energy detection threshold that a UE uses to initiate a channel occupancy with to other UE(s), and the other UE(s) that shares the initiated channel occupancy shall use this configured parameter for accessing the channel(s) as specified in TS 37.213 [48], clause 4.5.5 for sidelink channel access. Unit in dBm. Value -85 corresponds to -85 dBm, value -84 corresponds to -84 dBm, and so on (i.e. in steps of 1dBm).

valueN
Indicate the NR SL transmission with a valueN *5kHz shift to the LTE raster (see TS 38.101-1 [15], clause 5.4E.2).

Conditional Presence	Explanation
<i>SIB12</i>	This field is optional present if included within <i>SIB12</i> , need R. Otherwise, the field is absent.
<i>SIB23</i>	This field is optional present if included within <i>SIB23</i> , need R. Otherwise, the field is absent.
<i>V2X-SL-Shared</i>	This field is mandatory present if the carrier frequency configured for NR sidelink communication is shared by V2X sidelink communication. It is absent, Need R, otherwise.

– *SL-FreqSelectionConfig*

The IE *SL-FreqSelectionConfig* specifies the configuration information for carrier selection for NR sidelink transmission using UE autonomous resource selection.

***SL-FreqSelectionConfig* information element**

```
-- ASN1START
-- TAG-SL-FREQSELECTIONCONFIG-START

SL-FreqSelectionConfig-r18 ::= SEQUENCE {
    sl-priorityList-r18          SEQUENCE (SIZE (1..8)) OF INTEGER (1..8),
    sl-threshCBR-FreqReselection-r18 SL-CBR-r16,
    sl-threshCBR-FreqKeeping-r18  SL-CBR-r16
}

-- TAG-SL-FREQSELECTIONCONFIG-STOP
-- ASN1STOP
```

<i>SL-FreqSelectionConfig</i> field descriptions
<i>sl-priorityList</i> Indicates the list of sidelink logical channel priority which is associated with the configurations in <i>sl-threshCBR-FreqReselection</i> and in <i>sl-threshCBR-FreqKeeping</i> .
<i>sl-threshCBR-FreqReselection</i> Indicates the CBR threshold based on which UE determines whether the carrier frequency can be (re)selected for the transmission of NR sidelink. See TS 38.321 [3].
<i>sl-threshCBR-FreqKeeping</i> Indicates the CBR threshold based on which UE determines whether the UE can keep using the carrier which was selected for the transmission of NR sidelink. See TS 38.321 [3].

– *SL-IndirectPathAddChange*

The IE *SL-IndirectPathAddChange* specifies the configuration information of SL indirect path for SL indirect path addition/change in MP.

SL-IndirectPathAddChange information element

```
-- ASN1START
-- TAG-SL-INDIRECTPATHADDCHANGE-START

SL-IndirectPathAddChange-r18 ::=
    sl-IndirectPathRelayUE-Identity-r18
    sl-IndirectPathCellIdentity-r18
    t421-r18
    SEQUENCE {
        SL-SourceIdentity-r17,
        CellIdentity,
        ENUMERATED {ms50, ms100, ms150, ms200, ms500, ms1000, ms2000, ms10000} OPTIONAL, -- Need M
    }
    ...
-- TAG-SL-INDIRECTPATHADDCHANGE-STOP
-- ASN1STOP
```

SL-IndirectPathAddChange field descriptions***sl-IndirectPathRelayUEIdentity***

Indicates the L2 source ID of the L2 U2N Relay UE of SL indirect path.

sl-IndirectPathCellIdentity

Identifies the serving cell of the indicated L2 U2N Relay UE.

t421

Indicates the timer value of T421 to be used during indirect path addition or change.

SL-InterUE-CoordinationConfig

The IE *SL-InterUE-CoordinationConfig* is used to configure the sidelink inter-UE coordination (between a UE, UE-A, and a peer UE, UE-B) parameters. The network ensures sidelink inter-UE coordination and sidelink DRX are not configured at the same time for a UE.

SL-InterUE-CoordinationConfig information element

```
-- ASN1START
-- TAG-SL-INTERUE-COORDINATIONCONFIG-START

SL-InterUE-CoordinationConfig-r17 ::=
    sl-InterUE-CoordinationScheme1-r17
    sl-InterUE-CoordinationScheme2-r17
    SEQUENCE {
        SL-InterUE-CoordinationScheme1-r17
        SL-InterUE-CoordinationScheme2-r17
        ...
    }
    SEQUENCE {
        sl-IUC-Explicit-r17
        sl-IUC-Condition-r17
        sl-Condition1-A-2-r17
        sl-ThresholdRSRP-Condition1-B-1-Option1List-r17
        sl-ThresholdRSRP-Condition1-B-1-Option2List-r17
        sl-ContainerCoordInfo-r17
        sl-ContainerRequest-r17
        ENUMERATED {enabled, disabled}
        ENUMERATED {enabled, disabled}
        ENUMERATED {disabled}
        SEQUENCE (SIZE (1..8)) OF SL-ThresholdRSRP-Condition1-B-1-r17
        SEQUENCE (SIZE (1..8)) OF SL-ThresholdRSRP-Condition1-B-1-r17
        ENUMERATED {enabled, disabled}
        ENUMERATED {enabled, disabled}
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
    }
```

```

sl-TriggerConditionCoordInfo-r17      INTEGER (0..1)
sl-TriggerConditionRequest-r17         INTEGER (0..1)
sl-PriorityCoordInfoExplicit-r17       INTEGER (1..8)
sl-PriorityCoordInfoCondition-r17      INTEGER (1..8)
sl-PriorityRequest-r17                 INTEGER (1..8)
sl-PriorityPreferredResourceSet-r17     INTEGER (1..8)
sl-MaxSlotOffsetTRIV-r17               INTEGER (1..8000)
sl-NumSubCH-PreferredResourceSet-r17    INTEGER (1..27)
sl-ReservedPeriodPreferredResourceSet-r17 INTEGER (1..16)
sl-DetermineResourceType-r17           ENUMERATED {uea, ueb}
...
}

SL-InterUE-CoordinationScheme2-r17 ::= SEQUENCE {
    sl-IUC-Scheme2-r17      ENUMERATED {enabled}
    sl-RB-SetPSFCH-r17      BIT STRING (SIZE (10..275))
    sl-TypeUE-A-r17         ENUMERATED {enabled}
    sl-PSFCH-Occasion-r17   INTEGER (0..1)
    sl-SlotLevelResourceExclusion-r17 ENUMERATED {enabled}
    sl-OptionForCondition2-A-1-r17 INTEGER (0..1)
    sl-IndicationUE-B-r17   ENUMERATED {enabled, disabled}
    ...,
    [[
        sl-DeltaRSRP-Thresh-v1720      INTEGER (-30..30)
    ]]
}

SL-ThresholdRSRP-Condition1-B-1-r17 ::= SEQUENCE {
    sl-Priority-r17          INTEGER (1..8),
    sl-ThresholdRSRP-Condition1-B-1-r17 INTEGER (0..66)
}

-- TAG-SL-INTERUE-COORDINATIONCONFIG-STOP
-- ASN1STOP

```

```

OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M

```

```

OPTIONAL, -- Need R
OPTIONAL, -- Need M
OPTIONAL, -- Need R
OPTIONAL, -- Need M
OPTIONAL, -- Need R
OPTIONAL, -- Need M
OPTIONAL, -- Need M

```

```

OPTIONAL -- Need M

```

<i>SL-InterUE-CoordinationScheme1</i> field descriptions
<i>sl-Condition1-A-2</i> Indicates disabling the use of condition of excluding from preferred resource set resource(s) in slot(s) where UE-A, when it is intended receiver of UE-B, does not expect to perform SL reception from UE-B due to half duplex operation.
<i>sl-ContainerCoordInfo</i> Indicates whether a SCI format 2-C can be used as the container of inter-UE coordination information transmission from UE-A to UE-B in Scheme 1 in addition to using MAC CE.
<i>sl-ContainerRequest</i> Indicates whether a SCI format 2-C can be used as the container of an explicit request for inter-UE coordination information transmission from UE-B to UE-A in Scheme 1 in addition to using MAC CE.
<i>sl-DetermineResourceType</i> Indicates how to determine the resource set type to be provided by inter-UE coordination information transmission. Value "uea" means the resource set type is determined by UE-A's implementation. Value "ueb" means the resource set type is determined by UE-B's request.
<i>sl-IUC-Condition</i> Indicates whether inter-UE coordination information triggered by a condition is enabled or not other than explicit request reception.
<i>sl-IUC-Explicit</i> Indicates whether inter-UE coordination information triggered by an explicit request is enabled or not.
<i>sl-MaxSlotOffsetTRIV</i> Indicates the maximum value of logical slot offset with respect to a reference slot that is used for representing the first resource location of each TRIV to indicate the set of resources in Scheme 1 as specified in TS 38.214 [19].
<i>sl-NumSubCH-PreferredResourceSet</i> Indicates the number of sub-channels used for determining the preferred resource set in Scheme 1 when the inter-UE coordination information transmission is triggered by a condition other than explicit request reception.
<i>sl-PriorityCoordInfoCondition</i> Parameter used to determine the priority values for the purpose defined in TS 38.213 [13] and TS 38.214 [19] including, the priority value for sensing and candidate resource (re-)selection for transmitting the TB carrying the IUC MAC CE and the priority value in the SCI Format 1-A corresponding to the TB carrying the IUC MAC CE, triggered by a condition other than explicit request reception in Scheme 1. The priority value of IUC MAC CE used in LCP procedure (see TS 38.321 [3]) is fixed as "1".
<i>sl-PriorityCoordInfoExplicit</i> Parameter used to determine the priority values for the purpose defined in TS 38.213 [13] and TS 38.214 [19] including, the priority value for sensing and candidate resource (re-)selection for transmitting the TB carrying the IUC MAC CE and the priority value in the SCI Format 1-A corresponding to the TB carrying the IUC MAC CE, triggered by an explicit request in Scheme 1. The priority value of IUC MAC CE used in LCP procedure (see TS 38.321 [3]) is fixed as "1".
<i>sl-PriorityPreferredResourceSet</i> Indicates the priority value used for determining the preferred resource set in Scheme 1 when the inter-UE coordination information transmission is triggered by a condition other than explicit request reception.
<i>sl-PriorityRequest</i> Parameter used to determine the priority values for the purpose defined in TS 38.213 [13] and TS 38.214 [19] including, the priority value for sensing and candidate resource (re-)selection for transmitting the TB carrying the IUC request MAC CE and the priority value in the SCI Format 1-A corresponding to the TB carrying the IUC request MAC CE, in an explicit request for inter-UE coordination information in Scheme 1. The priority value of IUC request MAC CE used in LCP procedure (see TS 38.321 [3]) is fixed as "1".
<i>sl-ReservedPeriodPreferredResourceSet</i> Indicates the resource reservation interval used for determining the preferred resource set in Scheme 1 when the inter-UE coordination information transmission is triggered by a condition, by means of an index to the corresponding entry of <i>sl-ResourceReservePeriodList-r16</i> .
<i>sl-TriggerConditionCoordInfo</i> Indicates the additional alternative trigger condition of inter-UE coordination information triggered by a condition rather than request reception for data transmission in Scheme-1 from UE-A to UE-B. This field is also used to indicate the additional alternative trigger condition of inter-UE coordination information triggered by a condition rather than request reception for SL-PRS transmission in a shared SL PRS resource pool in Scheme-1 from UE-A to UE-B. Value 0 means inter-UE coordination information is triggered by UE-A's implementation. Value 1 means inter-UE coordination information can be triggered only when UE-A has data to be transmitted together with the inter-UE coordination information to UE-B.

<i>sl-TriggerConditionRequest</i>
Indicates the trigger condition of an explicit request from UE-B to UE-A for data transmission. This field is also used to indicate the trigger condition of an explicit request from UE-B to UE-A for SL-PRS transmission in a shared SL PRS resource pool. Value 0 means the explicit request is triggered by UE-B's implementation. Value 1 means the explicit request can be triggered only when UE-B has data or SL-PRS to be transmitted to UE-A.
<i>sl-ThresholdRSRP-Condition1-B-1-Option1List</i>
Indicates the RSRP threshold used to determine reserved resource(s) of other UE(s) whose RSRP measurement is larger than it as the set of resource(s) non-preferred for UE-B's transmission for Condition 1-B-1 of Scheme 1, as specified in TS 38.214 [19]. Value 0 corresponds to minus infinity dBm, value 1 corresponds to -128dBm, value 2 corresponds to -126dBm, value n corresponds to $(-128 + (n-1)*2)$ dBm and so on, value 66 corresponds to infinity dBm.
<i>sl-ThresholdRSRP-Condition1-B-1-Option2List</i>
Indicates the RSRP threshold used to determine reserved resource(s) of other UE(s) whose RSRP measurement is smaller than it as the set of resource(s) non-preferred for UE-B's transmission for Condition 1-B-1 of Scheme 1, as specified in TS 38.214 [19]. Value 0 corresponds to minus infinity dBm, value 1 corresponds to -128dBm, value 2 corresponds to -126dBm, value n corresponds to $(-128 + (n-1)*2)$ dBm and so on, value 66 corresponds to infinity dBm.

***SL-InterUE-CoordinationScheme2* field descriptions**

<i>sl-DeltaRSRP-Thresh</i>
Indicates the RSRP threshold delta value corresponding to <i>deltaRSRPThresh</i> specified in clause 16.3.0 of TS 38.213 [13] and used to determine reserved resource(s) of other UE(s). Value in dB. Only even values (step size 2) allowed.
<i>sl-IndicationUE-B</i>
Indicates whether to enable or disable the usage of 1 LSB of reserved bits of a SCI format 1-A to indicate of whether UE scheduling a conflict TB can be UE-B or not.
<i>sl-IUC-Scheme2</i>
Indicates whether inter-UE coordination Scheme 2 is enabled or not.
<i>sl-OptionForCondition2-A-1</i>
Indicates the RSRP threshold used to consider additional criteria for condition 2-A-1. Value 0 corresponds to using the RSRP threshold according to the priorities included in the SCI, UE uses thresholds <i>sl-Thres-RSRP-List</i> , in its resource pool configuration <i>sl-UE-SelectedConfigRP</i> , corresponding to <i>ThresPSSCH-RSRP-List</i> specified in clause 16.3.0 of TS 38.213 [13]. Value 1 corresponds to using a (pre)configured RSRP threshold delta value <i>sl-DeltaRSRP-Thresh</i> , corresponding to <i>deltaRSRPThresh</i> specified in clause 16.3.0 of TS 38.213 [13].
<i>sl-PSFCH-Occasion</i>
Indicates the reference slot from which a PSFCH occasion for inter-UE coordination information transmission is derived. Value 0 corresponds to the slot where UE-B's SCI is transmitted and value 1 corresponds to the slot where expected/potential resource conflict occurs on PSSCH resource indicated by UE-B's SCI.
<i>sl-RB-SetPSFCH</i>
Indicates the set of PRBs that are actually used for inter-UE coordination information transmission and reception in Scheme 2. The leftmost bit of the bitmap refers to the lowest RB index in the resource pool, and so on.
<i>sl-SlotLevelResourceExclusion</i>
Indicates that physical layer of UE-B reports resources in a slot including the next reserved resource indicated by the corresponding UE-B's SCI to higher layer.
<i>sl-TypeUE-A</i>
Indicates that a non-destination UE of a TB transmitted by UE-B can be UE-A which sends inter-UE coordination information to UE-B, when UE-A is a destination UE of another TB conflicting with the TB transmitted by UE-B.

— *SL-LBT-FailureRecoveryConfig*

The IE *SL-LBT-FailureRecoveryConfig-r18* is used to configure the parameters used for detection and cancellation of Sidelink consistent LBT failures for operation with shared spectrum channel access, as specified in TS 38.321 [3].

SL-LBT-FailureRecoveryConfig information element

```
-- ASN1START
-- TAG-SL-LBT-FAILURERECOVERYCONFIG-START

SL-LBT-FailureRecoveryConfig-r18 ::= SEQUENCE {
    sl-LBT-FailureInstanceMaxCount-r18    ENUMERATED {n4, n8, n16, n32, n64, n128, spare2, spare1}    OPTIONAL,    -- Need M
    sl-LBT-FailureDetectionTimer-r18      ENUMERATED {ms10, ms20, ms40, ms80, ms160, ms320, spare2, spare1}    OPTIONAL,    -- Need M
    sl-LBT-RecoveryTimer-r18              ENUMERATED {ms10, ms20, ms40, ms80, ms160, ms320, spare2, spare1}    OPTIONAL,    -- Need M
    ...
}

-- TAG-SL-LBT-FAILURERECOVERYCONFIG-STOP
-- ASN1STOP
```

SL-LBT-FailureRecoveryConfig field descriptions	
sl-LBT-FailureDetectionTimer	Timer for consistent sidelink LBT failure detection (see TS 38.321 [3]). Value ms10 corresponds to 10 ms, value ms20 corresponds to 20 ms, and so on.
sl-LBT-FailureInstanceMaxCount	This field determines after how many LBT failure indications received from the physical layer the UE triggers sidelink LBT failure recovery (see TS 38.321 [3]). Value n4 corresponds to 4, value n8 corresponds to 8, and so on.
sl-LBT-RecoveryTimer	Timer for consistent sidelink LBT failure cancellation (see TS 38.321 [3]). Value ms10 corresponds to 10 ms, value ms20 corresponds to 20 ms, and so on.

— *SL-LogicalChannelConfig*

The IE *SL-LogicalChannelConfig* is used to configure the sidelink logical channel parameters.

SL-LogicalChannelConfig information element

```
-- ASN1START
-- TAG-SL-LOGICALCHANNELCONFIG-START

SL-LogicalChannelConfig-r16 ::= SEQUENCE {
    sl-Priority-r16                INTEGER (1..8),
    sl-PrioritisedBitRate-r16      ENUMERATED {kBps0, kBps8, kBps16, kBps32, kBps64, kBps128, kBps256, kBps512,
    kBps1024, kBps2048, kBps4096, kBps8192, kBps16384, kBps32768, kBps65536, infinity},
    sl-BucketSizeDuration-r16     ENUMERATED {ms5, ms10, ms20, ms50, ms100, ms150, ms300, ms500, ms1000,
    spare7, spare6, spare5, spare4, spare3, spare2, spare1},
    sl-ConfiguredGrantType1Allowed-r16    ENUMERATED {true}    OPTIONAL,    -- Need R
    sl-HARQ-FeedbackEnabled-r16    ENUMERATED {enabled, disabled }    OPTIONAL,    -- Need R
    sl-AllowedCG-List-r16          SEQUENCE (SIZE (0.. maxNrofCG-SL-1-r16)) OF SL-ConfigIndexCG-r16
}
```

```

sl-AllowedSCS-List-r16          SEQUENCE (SIZE (1..maxSCSs)) OF SubcarrierSpacing OPTIONAL, -- Need R
sl-MaxPUSCH-Duration-r16       ENUMERATED {ms0p02, ms0p04, ms0p0625, ms0p125, ms0p25, ms0p5, spare2, spare1} OPTIONAL, -- Need R
                                OPTIONAL, -- Need R
sl-LogicalChannelGroup-r16     INTEGER (0..maxLCG-ID) OPTIONAL, -- Need R
sl-SchedulingRequestId-r16     SchedulingRequestId OPTIONAL, -- Need R
sl-LogicalChannelSR-DelayTimerApplied-r16 BOOLEAN OPTIONAL, -- Need R
...,
[[
sl-ChannelAccessPriority-r18    INTEGER (1..4) OPTIONAL, -- Need R
sl-AllowedCarriers-r18         SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF INTEGER (1..maxNrofFreqSL-r16) OPTIONAL -- Cond CONNECTED
]]
}
-- TAG-SL-LOGICALCHANNELCONFIG-STOP
-- ASN1STOP

```

<i>SL-LogicalChannelConfig</i> field descriptions
<i>sl-AllowedCarriers</i> If present, SL MAC SDUs from this logical channel can only be mapped to the sidelink carriers indicated in this list. Otherwise, SL MAC SDUs from this logical channel can be mapped to any configured sidelink carriers. The value 1 corresponds to the frequency of first entry in <i>sl-FreqInfoList</i> broadcast in <i>SIB12</i> , the value 2 corresponds to the frequency of first entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> , the value 3 corresponds to the frequency of second entry in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> and so on.
<i>sl-AllowedCG-List</i> This restriction applies only when the SL grant is a configured grant. If present, SL MAC SDUs from this logical channel can only be mapped to the indicated configured grant configuration. If the size of the sequence is zero, then SL MAC SDUs from this logical channel cannot be mapped to any configured grant configurations. If the field is not present, SL MAC SDUs from this logical channel can be mapped to any configured grant configurations. If the field <i>sl-ConfiguredGrantType1Allowed</i> is present, only those sidelink configured grant type 1 configurations indicated in this sequence are allowed for use by this sidelink logical channel; otherwise, this sequence shall not include any sidelink configured grant type 1 configuration. Corresponds to "sl-AllowedCG-List" as specified in TS 38.321 [3].
<i>sl-AllowedSCS-List</i> If present, it indicates the numerology of UL-SCH resources that this sidelink logical channel is mapped to, when checking the SR trigger condition. Corresponds to 'sl-AllowedSCS-List' in TS 38.321 [3].
<i>sl-BucketSizeDuration</i> Value in ms. <i>ms5</i> corresponds to 5 ms, value <i>ms10</i> corresponds to 10 ms, and so on.
<i>sl-ChannelAccessPriority</i> Indicates the Channel Access Priority Class (CAPC), as specified in TS 38.300 [2], to be used on sidelink transmissions for operation with shared spectrum channel access in FR1. The network configures this field only for DRBs.
<i>sl-ConfiguredGrantType1Allowed</i> If present and set to true, or if the capability <i>lcp-RestrictionSidelink</i> as specified in TS 38.306 [26] is not indicated, SL MAC SDUs from this sidelink logical channel can be transmitted on a sidelink configured grant type 1. Otherwise, SL MAC SDUs from this logical channel cannot be transmitted on a sidelink configured grant type 1. Corresponds to 'sl-configuredGrantType1Allowed' in TS 38.321 [3].
<i>sl-HARQ-FeedbackEnabled</i> Network always includes this field. It indicates the HARQ feedback enabled/disabled restriction in LCP for this sidelink logical channel. If set to <i>enabled</i> , the sidelink logical channel will be multiplexed only with a logical channel which enabling the HARQ feedback. If set to <i>disabled</i> , the sidelink logical channel cannot be multiplexed with a logical channel which enabling the HARQ feedback. Corresponds to 'sl-HARQ-FeedbackEnabled' in TS 38.321 [3]. If this field of at least one sidelink logical channel for the UE is set to enabled, <i>sl-PSFCH-Config</i> should be mandatory present in configuration <i>SL-ResourcePool</i> of at least one of the sidelink resource pools.
<i>sl-LogicalChannelGroup</i> ID of the sidelink logical channel group, as specified in TS 38.321 [3], which the sidelink logical channel belongs to.
<i>sl-LogicalChannelSR-DelayTimerApplied</i> Indicates whether to apply the delay timer for SR transmission for this sidelink logical channel. Set to false if <i>logicalChannelSR-DelayTimer</i> is not included in <i>sl-BSR-Config</i> .
<i>sl-MaxPUSCH-Duration</i> If present, it indicates the maximum PUSCH duration of UL-SCH resources that this sidelink logical channel is mapped to, when checking the SR trigger condition. Corresponds to "sl-MaxPUSCH-Duration" in TS 38.321 [3].
<i>sl-PrioritisedBitRate</i> Value in kiloBytes/s. Value <i>kBps0</i> corresponds to 0 kiloBytes/s, value <i>kBps8</i> corresponds to 8 kiloBytes/s, value <i>kBps16</i> corresponds to 16 kiloBytes/s, and so on.
<i>sl-Priority</i> Sidelink logical channel priority, as specified in TS 38.321 [3].
<i>sl-SchedulingRequestId</i> If present, it indicates the scheduling request configuration applicable for this sidelink logical channel, as specified in TS 38.321 [3].

Conditional Presence	Explanation
<i>CONNECTED</i>	This field is optionally present, Need M, in an RRCReconfiguration message, for a SL DRB with additional sidelink RLC bearer being configured. The field is absent otherwise.

– *SL-L2RelayUE-Config*

The IE *SL-L2RelayUE-Config* is used to configure L2 U2N relay operation related configurations used by L2 U2N Relay UE, or L2 U2U relay operation related configurations used by L2 U2U Relay UE.

SL-L2RelayUE-Config information element

```
-- ASN1START
-- TAG-SL-L2RELAYUE-CONFIG-START

SL-L2RelayUE-Config-r17 ::= SEQUENCE {
    sl-RemoteUE-ToAddModList-r17 SEQUENCE (SIZE (1..maxNrofRemoteUE-r17)) OF SL-RemoteUE-ToAddMod-r17 OPTIONAL, -- Need N
    sl-RemoteUE-ToReleaseList-r17 SEQUENCE (SIZE (1..maxNrofRemoteUE-r17)) OF SL-DestinationIdentity-r16 OPTIONAL, -- Need N
    ...,
    [[
        sl-U2U-RemoteUE-ToAddModList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-U2U-RemoteUE-Config-r18 OPTIONAL, -- Need N
        sl-U2U-RemoteUE-ToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-DestinationIdentity-r16 OPTIONAL -- Need N
    ]]
}

SL-RemoteUE-ToAddMod-r17 ::= SEQUENCE {
    sl-L2IdentityRemote-r17 SL-DestinationIdentity-r16,
    sl-SRAP-ConfigRelay-r17 SL-SRAP-Config-r17 OPTIONAL, -- Need M
    ...
}

SL-U2U-RemoteUE-Config-r18 ::= SEQUENCE {
    sl-L2IdentityRemoteUE-r18 SL-DestinationIdentity-r16,
    sl-SourceRemoteUE-ToAddModList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-SourceRemoteUE-Config-r18 OPTIONAL, -- Need N
    sl-SourceRemoteUE-ToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-SourceIdentity-r17 OPTIONAL, -- Need N
    ...
}

SL-SourceRemoteUE-Config-r18 ::= SEQUENCE {
    sl-SourceUE-Identity-r18 SL-SourceIdentity-r17,
    sl-SRAP-ConfigU2U-r18 SL-SRAP-ConfigU2U-r18,
    ...
}

-- TAG-SL-L2RELAYUE-CONFIG-STOP
-- ASN1STOP
```

<i>SL-L2RelayUE-Config</i> field descriptions
<i>sl-RemoteUE-ToAddModList</i> List of L2 U2N Remote UEs to be added and modified to the L2 U2N Relay UE.
<i>sl-RemoteUE-ToReleaseList</i> List of L2 U2N Remote UEs to be released by the L2 U2N Relay UE.
<i>sl-U2U-RemoteUE-ToAddModList</i> List of target L2 U2U Remote UEs for which the related configuration is to be added and modified to the L2 U2U Relay UE.
<i>sl-U2U-RemoteUE-ToReleaseList</i> List of target L2 U2U Remote UEs for which the related configuration is to be released by the L2 U2U Relay UE.
<i>sl-U2U-SourceRemoteUE-ToAddModList</i> List of Source L2 U2U Remote UEs for which the related configuration is to be added and modified relative to the destination L2 U2U Remote UE identified by the <i>sl-L2IdentityRemoteUE</i> .
<i>sl-U2U-SourceRemoteUE-ToReleaseList</i> List of Source L2 U2U Remote UEs for which the related configuration is to be released relative to the destination L2 U2U Remote UE identified by the <i>sl-L2IdentityRemoteUE</i> .

– *SL-L2RemoteUE-Config*

The IE *SL-L2RemoteUE-Config* is used to configure L2 U2N relay operation related configurations used by L2 U2N Remote UE, or L2 U2U relay operation related configurations used by L2 U2U Remote UE.

SL-L2RemoteUE-Config information element

```
-- ASN1START
-- TAG-SL-L2REMOTEUE-CONFIG-START

SL-L2RemoteUE-Config-r17 ::= SEQUENCE {
    sl-SRAP-ConfigRemote-r17      SL-SRAP-Config-r17                OPTIONAL, --Need M
    sl-UEIdentityRemote-r17       RNTI-Value                        OPTIONAL, -- Cond FirstRRCReconfig
    ...,
    [[
        sl-U2U-RelayUE-ToAddModList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-U2U-RelayUE-Config-r18    OPTIONAL, -- Need N
        sl-U2U-RelayUE-ToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-DestinationIdentity-r16    OPTIONAL, -- Need N
    ]]
}

SL-U2U-RelayUE-Config-r18 ::= SEQUENCE {
    sl-L2IdentityRelay-r18      SL-DestinationIdentity-r16,
    sl-TargetRemoteUE-ToAddModList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-TargetRemoteUE-Config-r18 OPTIONAL, -- Need N
    sl-TargetRemoteUE-ToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-DestinationIdentity-r16    OPTIONAL, -- Need N
    ...
}

SL-TargetRemoteUE-Config-r18 ::= SEQUENCE {
    sl-TargetUE-Identity-r18    SL-DestinationIdentity-r16,
    sl-SRAP-ConfigU2U-r18      SL-SRAP-ConfigU2U-r18,
    ...
}
```

-- TAG-SL-L2REMOTEUE-CONFIG-STOP
-- ASN1STOP

SL-L2RemoteUE-Config field descriptions
sl-SRAP-ConfigRemote Indicates SRAP configuration used for L2 U2N Remote UE.
sl-UEIdentityRemote Indicates the C-RNTI to the L2 U2N Remote UE.
sl-U2U-RelayUE-ToAddModList List of L2 U2U Relay UEs for which the related configuration is to be added and modified to the L2 U2U Remote UE.
sl-U2U-RelayUE-ToReleaseList List of L2 U2U Relay UEs for which the related configuration is to be released by the L2 U2U Remote UE.
sl-U2U-TargetRemoteUE-ToAddModList List of target L2 U2U Remote UEs for which the related configuration is to be added and modified relative to the L2 U2U Relay UE identified by the <i>sl-L2IdentityRelay</i> .
sl-U2U-TargetRemoteUE-ToReleaseList List of target L2 U2U Remote UEs for which the related configuration is to be released relative to the L2 U2U Relay UE identified by the <i>sl-L2IdentityRelay</i> .

Conditional Presence	Explanation
<i>FirstRRCReconfig</i>	This field is mandatory present in the first <i>RRCReconfiguration</i> for L2 U2N Remote UE when PCell is on indirect path, i.e. MP configuration is not present. Otherwise the field is absent.

– SL-MeasConfigCommon

The IE *SL-MeasConfigCommon* is used to set the cell specific SL RSRP measurement configurations for unicast destinations.

SL-MeasConfigCommon information element

```
-- ASN1START
-- TAG-SL-MEASCONFIGCOMMON-START

SL-MeasConfigCommon-r16 ::=
  SL-MeasObjectListCommon-r16
  SL-ReportConfigListCommon-r16
  SL-MeasIdListCommon-r16
  SL-QuantityConfigCommon-r16
  ...
}

SEQUENCE {
  SL-MeasObjectList-r16          OPTIONAL, -- Need R
  SL-ReportConfigList-r16       OPTIONAL, -- Need R
  SL-MeasIdList-r16             OPTIONAL, -- Need R
  SL-QuantityConfig-r16         OPTIONAL, -- Need R
}

-- TAG-SL-MEASCONFIGCOMMON-STOP
-- ASN1STOP
```

SL-MeasConfigCommon field descriptions
sl-MeasIdListCommon List of sidelink measurement identities
sl-MeasObjectListCommon List of sidelink measurement objects.
sl-QuantityConfigCommon Indicates the layer 3 filtering coefficient for sidelink measurement.
sl-ReportConfigListCommon List of sidelink measurement reporting configurations.

– SL-MeasConfigInfo

The IE *SL-MeasConfigInfo* is used to set RSRP measurement configurations for unicast destinations.

SL-MeasConfigInfo information element

```
-- ASN1START
-- TAG-SL-MEASCONFIGINFO-START

SL-MeasConfigInfo-r16 ::= SEQUENCE {
    sl-DestinationIndex-r16 SL-DestinationIndex-r16,
    sl-MeasConfig-r16 SL-MeasConfig-r16,
    ...
}

SL-MeasConfig-r16 ::= SEQUENCE {
    sl-MeasObjectToRemoveList-r16 SL-MeasObjectToRemoveList-r16 OPTIONAL, -- Need N
    sl-MeasObjectToAddModList-r16 SL-MeasObjectList-r16 OPTIONAL, -- Need N
    sl-ReportConfigToRemoveList-r16 SL-ReportConfigToRemoveList-r16 OPTIONAL, -- Need N
    sl-ReportConfigToAddModList-r16 SL-ReportConfigList-r16 OPTIONAL, -- Need N
    sl-MeasIdToRemoveList-r16 SL-MeasIdToRemoveList-r16 OPTIONAL, -- Need N
    sl-MeasIdToAddModList-r16 SL-MeasIdList-r16 OPTIONAL, -- Need N
    sl-QuantityConfig-r16 SL-QuantityConfig-r16 OPTIONAL, -- Need M
    ...
}

SL-MeasObjectToRemoveList-r16 ::= SEQUENCE (SIZE (1..maxNrofSL-ObjectId-r16)) OF SL-MeasObjectId-r16

SL-ReportConfigToRemoveList-r16 ::= SEQUENCE (SIZE (1..maxNrofSL-ReportConfigId-r16)) OF SL-ReportConfigId-r16

SL-MeasIdToRemoveList-r16 ::= SEQUENCE (SIZE (1..maxNrofSL-MeasId-r16)) OF SL-MeasId-r16

-- TAG-SL-MEASCONFIGINFO-STOP
-- ASN1STOP
```

SL-MeasConfigInfo field descriptions
sl-MeasIdToAddModList List of sidelink measurement identities to add and/or modify.
sl-MeasIdToRemoveList List of sidelink measurement identities to remove.
sl-MeasObjectToAddModList List of sidelink measurement objects to add and/or modify.
sl-MeasObjectToRemoveList List of sidelink measurement objects to remove.
sl-QuantityConfig Indicates the layer 3 filtering coefficient for sidelink measurement.
sl-ReportConfigToAddModList List of sidelink measurement reporting configurations to add and/or modify.
sl-ReportConfigToRemoveList List of sidelink measurement reporting configurations to remove.

— SL-MeasIdList

The IE *SL-MeasIdList* concerns a list of SL measurement identities to add or modify for a destination, with for each entry the *sl-MeasId*, the associated *sl-MeasObjectId* and the associated *sl-ReportConfigId*.

SL-MeasIdList information element

```
-- ASN1START
-- TAG-SL-MEASIDLIST-START

SL-MeasIdList-r16 ::= SEQUENCE (SIZE (1..maxNrofSL-MeasId-r16)) OF SL-MeasIdInfo-r16

SL-MeasIdInfo-r16 ::= SEQUENCE {
    sl-MeasId-r16,
    sl-MeasObjectId-r16,
    sl-ReportConfigId-r16,
    ...
}

SL-MeasId-r16 ::= INTEGER (1..maxNrofSL-MeasId-r16)

-- TAG-SL-MEASIDLIST-STOP
-- ASN1STOP
```

— SL-MeasObjectList

The IE *SL-MeasObjectList* concerns a list of SL measurement objects to add or modify for a destination.

SL-MeasObjectList information element

```
-- ASN1START
-- TAG-SL-MEASOBJECTLIST-START

SL-MeasObjectList-r16 ::= SEQUENCE (SIZE (1..maxNrofSL-ObjectId-r16)) OF SL-MeasObjectInfo-r16

SL-MeasObjectInfo-r16 ::= SEQUENCE {
    sl-MeasObjectId-r16 SL-MeasObjectId-r16,
    sl-MeasObject-r16 SL-MeasObject-r16,
    ...
}

SL-MeasObjectId-r16 ::= INTEGER (1..maxNrofSL-ObjectId-r16)

SL-MeasObject-r16 ::= SEQUENCE {
    frequencyInfoSL-r16 ARFCN-ValueNR,
    ...
}

-- TAG-SL-MEASOBJECTLIST-STOP
-- ASN1STOP
```

SL-MeasObjectList field descriptions
frequencyInfoSL It indicates the lowest usable subcarrier on the carrier where SL RSRP is measured, determined according to <i>sl-AbsoluteFrequencyPointA</i> in IE <i>SL-FreqConfig/SL-FreqConfigCommon</i> and <i>offsetToCarrier</i> in IE <i>SCS-SpecificCarrier</i> configured for <i>sl-SCS-SpecificCarrierList</i> in IE <i>SL-FreqConfig/SL-FreqConfigCommon</i> . See TS 38.211 [16], clause 8.2.5.
sl-MeasObjectId It is used to identify a sidelink measurement object configuration.
sl-MeasObject It specifies information applicable for sidelink DMRS, SL-PRS measurement.

– SL-PagingIdentityRemoteUE

The IE *SL-PagingIdentityRemoteUE* includes the Remote UE's paging UE ID.

SL-PagingIdentityRemoteUE information element

```
-- ASN1START
-- TAG-SL-PAGINGIDENTITYREMOTEUE-START

SL-PagingIdentityRemoteUE-r17 ::= SEQUENCE {
    ng-5G-S-TMSI-r17 NG-5G-S-TMSI,
    fullI-RNTI-r17 I-RNTI-Value OPTIONAL -- Need R
}

-- TAG-SL-PAGINGIDENTITYREMOTEUE-STOP
```

```
-- ASN1STOP
```

— *SL-PBPS-CPS-Config*

The IE *SL-PBPS-CPS-Config* specifies the operation information for a resource pool which can be (pre-)configured to enable full sensing only, partial sensing only, random resource selection only, or any combination(s) thereof.

SL-PBPS-CPS-Config information element

```
-- ASN1START
-- TAG-SL-PBPS-CPS-CONFIG-START

SL-PBPS-CPS-Config-r17 ::=
sl-AllowedResourceSelectionConfig-r17 SEQUENCE {
sl-MinNumCandidateSlotsPeriodic-r17   ENUMERATED {c1, c2, c3, c4, c5, c6, c7} OPTIONAL, -- Need M
sl-PBPS-OccasionReservePeriodList-r17 INTEGER (1..32)          OPTIONAL, -- Need M
sl-Additional-PBPS-Occasion-r17       SEQUENCE (SIZE (1..16)) OF INTEGER (1..16) OPTIONAL, -- Need M
sl-CPS-WindowPeriodic-r17            ENUMERATED { monitored }    OPTIONAL, -- Need M
sl-MinNumCandidateSlotsAperiodic-r17 INTEGER (5..30)           OPTIONAL, -- Need M
sl-MinNumRssiMeasurementSlots-r17    INTEGER (1..32)           OPTIONAL, -- Need M
sl-DefaultCBR-RandomSelection-r17    INTEGER (1..800)          OPTIONAL, -- Need M
sl-DefaultCBR-PartialSensing-r17     INTEGER (0..100)          OPTIONAL, -- Need M
sl-CPS-WindowAperiodic-r17           INTEGER (0..100)          OPTIONAL, -- Need M
sl-PartialSensingInactiveTime-r17    INTEGER (0..30)           OPTIONAL, -- Need M
...
}

-- TAG-SL-PBPS-CPS-CONFIG-STOP
-- ASN1STOP
```

SL-PBPS-CPS-Config field descriptions
sl-Additional-PBPS-Occasion Indicates that UE additionally monitors periodic sensing occasions that correspond to a set of values. (see TS 38.214 [19], clause 8.1.4).
sl-AllowedResourceSelectionConfig Indicates the allowed resource selection mechanism(s), i.e. full sensing only, partial sensing only, random resource selection only, or any combination(s) thereof. (see TS 38.214 [19], clause 8.1.4). Only <i>c1</i>, <i>c4</i>, <i>c5</i> or <i>c7</i> can be configured for a Rel-16 resource pool. Only <i>c1</i> can be configured for a resource pool included in <i>sl-TxPoolSelectedNormal</i>, for which <i>sl-NRPSFCH-EUTRA-ThresRSRP-List/sl-NRPSSCH-EUTRA-ThresRSRP-List</i> is configured. If this field is not configured for a resource pool included in <i>sl-TxPoolSelectedNormal</i>, only full sensing is allowed in the corresponding resource pool. <i>c1</i>: only full sensing allowed <i>c2</i>: only partial sensing allowed <i>c3</i>: only random selection allowed <i>c4</i>: full sensing+random selection allowed <i>c5</i>: full sensing+ partial sensing allowed <i>c6</i>: partial sensing + random selection allowed <i>c7</i>: full sensing+ partial sensing + random selection allowed.
sl-CPS-WindowAperiodic Parameter that indicates the minimum size of contiguous partial sensing window in logical slot units for a resource (re)selection procedure and re-evaluation/pre-emption checking triggered by aperiodic transmission. (see TS 38.214 [19], clause 8.1.4). If not configured, the size of contiguous partial sensing window in logical slot units is 31.
sl-CPS-WindowPeriodic Indicates the size of contiguous partial sensing window in logical slot units when UE performs periodic-based and contiguous partial sensing for a resource (re)selection procedure triggered by periodic transmission. If not configured, the size of contiguous partial sensing window in logical slot units is 31.
sl-DefaultCBR-PartialSensing Indicates default value of SL CBR measurement for a UE that is configured to perform partial sensing by its higher layer (including when SL DRX is configured) if the number of SL RSSI measurement slots over CBR measurement window is below <i>sl-MinNumRssiMeasurementSlots</i>, (see TS 38.214 [19], clause 8.1.6). Value 0 corresponds to 0, value 1 to 0.01, value 2 to 0.02, and so on.
sl-DefaultCBR-RandomSelection Indicates default value of CBR measurement for a UE that performs random resource selection if no SL CBR measurement result over SL CBR measurement window, (see TS 38.214 [19], clause 8.1.6). Value 0 corresponds to 0, value 1 to 0.01, value 2 to 0.02, and so on.
sl-MinNumCandidateSlotsAperiodic Indicates the minimum number of Y slots that are included in the possible candidate resources corresponding to periodic-based partial sensing and/or contiguous partial sensing for resource (re)selection triggered by aperiodic transmission. (see TS 38.214 [19], clause 8.1.4).
sl-MinNumCandidateSlotsPeriodic Indicates the minimum number of Y slots that are included in the possible candidate resources corresponding to periodic-based partial sensing for resource (re)selection triggered by periodic transmission. (see TS 38.214 [19], clause 8.1.4).
sl-MinNumRssiMeasurementSlots Indicates a threshold for a minimum number of SL RSSI measurement slots over CBR measurement window for which the SL RSSI is measured for a UE that is configured to perform partial sensing by its higher layer (including when SL DRX is configured). (see TS 38.214 [19], clause 8.1.6).
sl-PartialSensingInactiveTime Indicates whether or not UE is required to perform SL reception of PSCCH and RSRP measurement for partial sensing on slots in SL DRX inactive time when partial sensing is configured by its higher layer. (see TS 38.214 [19], clause 8.1.4).
sl-PBPS-OccasionReservePeriodList Indicates the subset of periodicity values from <i>sl-ResourceReservePeriodList</i> used to determine periodic sensing occasions in periodic-based partial sensing, by means of an index to the corresponding entry in <i>sl-ResourceReservePeriodList-r16</i>. If not configured, all periodicity values from <i>sl-ResourceReservePeriodList</i> are used to determine periodic sensing occasions in periodic-based partial sensing (see TS 38.214 [19], clause 8.1.4).

— *SL-PDCP-Config*

The IE *SL-PDCP-Config* is used to set the configurable PDCP parameters for a sidelink radio bearer.

***SL-PDCP-Config* information element**

```
-- ASN1START
-- TAG-SL-PDCP-CONFIG-START

SL-PDCP-Config-r16 ::=
  SEQUENCE {
    sl-DiscardTimer-r16      ENUMERATED {ms3, ms10, ms20, ms25, ms30, ms40, ms50, ms60, ms75, ms100, ms150, ms200,
                                     ms250, ms300, ms500, ms750, ms1500, infinity} OPTIONAL, -- Cond Setup
    sl-PDCP-SN-Size-r16     ENUMERATED {len12bits, len18bits}          OPTIONAL, -- Cond Setup2
    sl-OutOfOrderDelivery   ENUMERATED { true }                      OPTIONAL, -- Need R
    ...
  }

-- TAG-SL-PDCP-CONFIG-STOP
-- ASN1STOP
```

<i>SL-PDCP-Config</i> field descriptions	
<i>sl-DiscardTimer</i>	Value in ms of <i>discardTimer</i> specified in TS 38.323 [5]. Value <i>ms50</i> corresponds to 50 ms, value <i>ms100</i> corresponds to 100 ms and so on.
<i>sl-OutOfOrderDelivery</i>	Indicates whether or not <i>outOfOrderDelivery</i> specified in TS 38.323 [5] is configured. This field should be either always present or always absent, after the radio bearer is established.
<i>sl-PDCP-SN-Size</i>	PDCP sequence number size for unicast NR sidelink communication, 12 or 18 bits, as specified in TS 38.323 [5]. For groupcast and broadcast NR sidelink communication, only 12 bits is applicable, as specified in 9.1.1.5.

Conditional Presence	Explanation
<i>Setup</i>	The field is mandatory present in case of sidelink DRB setup via dedicated signaling and in case of sidelink DRB configuration via system information and pre-configuration; otherwise the field is optionally present, need M.
<i>Setup2</i>	The field is mandatory present in case of sidelink DRB setup via dedicated signaling and in case of sidelink DRB configuration via system information and pre-configuration for RLC-AM and RLC-UM for unicast NR sidelink communication; otherwise the field is not present, Need M.

- *SL-PosBWP-ConfigCommon*

The IE *SL-PosBWP-ConfigCommon* is used to configure the cell-specific configuration for sidelink positioning on one particular sidelink bandwidth part.

***SL-PosBWP-ConfigCommon* information element**

```
-- ASN1START
```



```

sl-TimeWindowSizeCBR-DedicatedSL-PRS-RP-r18      ENUMERATED {ms100, slot100}      OPTIONAL, -- Need M
sl-TimeWindowSizeCR-DedicatedSL-PRS-RP-r18        ENUMERATED {ms1000, slot1000}    OPTIONAL, -- Need M
sl-CBR-CommonTxDedicatedSL-PRS-RP-List-r18        SL-CBR-CommonTxDedicatedSL-PRS-RP-List-r18  OPTIONAL, -- Need M
sl-PriorityThreshold-UL-URLLC-r18                  INTEGER (1..9)                  OPTIONAL, -- Need M
sl-PriorityThreshold-r18                           INTEGER (1..9)                  OPTIONAL, -- Need M
sl-SelectionWindowListDedicatedSL-PRS-RP-r18       SEQUENCE (SIZE (8)) OF SL-SelectionWindowConfigDedicatedSL-PRS-RP-r18  OPTIONAL, -- Need M
sl-Thres-RSRP-ListDedicatedSL-PRS-RP-r18           SEQUENCE (SIZE (64)) OF SL-PRS-ThresRSRP-r18  OPTIONAL, -- Need M
sl-PreemptionEnableDedicatedSL-PRS-RP-r18          ENUMERATED {enabled, pl1, pl2, pl3, pl4, pl5, pl6, pl7, pl8}  OPTIONAL, -- Need R
}

SL-PSCCH-ConfigDedicatedSL-PRS-RP-r18 ::= SEQUENCE {
  sl-TimeResourcePSCCH-DedicatedSL-PRS-RP-r18      ENUMERATED {n2, n3}      OPTIONAL, -- Need M
  sl-FreqResourcePSCCH-DedicatedSL-PRS-RP-r18      ENUMERATED {n10,n12, n15, n20, n25}  OPTIONAL, -- Need M
  ...,
  [[
    sl-DMRS-ScrambleID-DedicatedSL-PRS-RP-r18      INTEGER (0..65535)      OPTIONAL, -- Need M
  ]]
}

SL-ReservationPeriodAllowedDedicatedSL-PRS-RP-r18 ::= CHOICE {
  sl-ResourceReservePeriod1-r18                    ENUMERATED {ms0, ms100, ms160, ms200, ms300, ms320, ms400, ms500, ms600, ms640, ms700, ms800, ms900, ms1000, ms1280, ms2560, ms5120, ms10240},
  sl-ResourceReservePeriod2-r18                    INTEGER (1..99)
}

SL-PRS-ResourceDedicatedSL-PRS-RP-r18 ::= SEQUENCE {
  sl-PRS-ResourceID-r18                            INTEGER (0..11)          OPTIONAL, -- Need M
  sl-NumberOfSymbols-r18                           INTEGER (1..9)          OPTIONAL, -- Need M
  sl-CombSize-r18                                  ENUMERATED {n2,n4,n6}    OPTIONAL, -- Need R
  sl-PRS-starting-symbol-r18                        INTEGER (4..12)          OPTIONAL, -- Need M
  sl-PRS-comb-offset-r18                           INTEGER (1..5)          OPTIONAL, -- Need M
}

SL-PRS-PowerControl-r18 ::= SEQUENCE {
  dl-P0-SL-PRS-r18                                 INTEGER (-202..24)      OPTIONAL, -- Need M
  dl-Alpha-SL-PRS-r18                              ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1}  OPTIONAL, -- Need M
  sl-P0-SL-PRS-r18                                  INTEGER (-202..24)      OPTIONAL, -- Need M
  sl-Alpha-SL-PRS-r18                              ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1}  OPTIONAL, -- Need S
}

SL-TxPercentageDedicatedSL-PRS-RP-Config-r18 ::= SEQUENCE {
  sl-TxPercentageDedicatedSL-PRS-RP-r18            INTEGER (1..8)          OPTIONAL, -- Need M
  sl-Priority-DedicatedSL-PRS-RP                    ENUMERATED {p20, p35, p50}  OPTIONAL, -- Need M
}

SL-PriorityTxConfigIndexDedicatedSL-PRS-RP-r18 ::= SEQUENCE {
  sl-PriorityThresholdDedicatedSL-PRS-RP-r18        INTEGER (1..8)          OPTIONAL, -- Need M
  sl-DefaultTxConfigIndexDedicatedSL-PRS-RP-r18     INTEGER (0..maxCBR-LevelDedSL-PRS-1-r18)  OPTIONAL, -- Need M
  sl-CBR-ConfigIndexDedicatedSL-PRS-RP-r18          INTEGER (0..maxCBR-ConfigDedSL-PRS-1-r18)  OPTIONAL, -- Need M
  sl-PRS-TxConfigIndexList-r18                      SEQUENCE (SIZE (1.. maxCBR-LevelDedSL-PRS-1-r18)) OF SL-PRS-TxConfigIndex-r18  OPTIONAL, -- Need M
}

```

```

SL-PRS-TxConfigIndex-r18 ::= INTEGER (0.. maxNrofSL-PRS-TxConfig-r18)

SL-SelectionWindowConfigDedicatedSL-PRS-RP-r18 ::= SEQUENCE {
    sl-PRS-Priority-r18          INTEGER (1..8),
    sl-PRS-SelectionWindow-r18  ENUMERATED {n1, n5, n10, n20}
}

SL-PRS-ThresRSRP-r18 ::= INTEGER (0..66)

-- TAG-SL-PRS-RESOURCEPOOL-STOP
-- ASN1STOP

```

SL-PRS-ResourcePool field descriptions
<i>sl-CBR-ConfigIndexDedicatedSL-PRS-RP</i> Indicates the CBR ranges to be used by an index to the entry of the CBR range configuration in <i>sl-CBR-RangeDedicatedSL-PRS-RP-List</i> .
<i>sl-CBR-PriorityTxConfigDedicatedSL-PRS-RP-List</i> Indicates the mapping between SL-PRS transmission parameter (such as transmission power, etc.) sets by using the indexes of the configurations in <i>sl-CBR-SL-PRS-TxConfigList</i> , CBR ranges by using the indexes to the entry of the CBR range configurations in <i>sl-CBR-RangeDedicatedSL-PRS-RP-List</i> , and priority ranges. It also indicates the default SL-PRS transmission parameters to be used when CBR measurement results are not available.
<i>sl-DefaultTxConfigIndexDedicatedSL-PRS-RP</i> Indicates the SL PRS transmission parameters to be used by the UEs which do not have available CBR measurement results, by means of an index to the corresponding entry in <i>sl-PRS-TxConfigIndexList</i> . Value 0 indicates the first entry in <i>sl-PRS-TxConfigIndexList</i> . The field is ignored if the UE has available CBR measurement results.
<i>sl-FilterCoefficient</i> This field indicates the filtering coefficient for long-term measurement and reference signal power derivation used for sidelink open-loop power control.
<i>sl-MaxNumPerReserveDedicatedSL-PRS-RP</i> Indicates the maximum number of SL PRS reservations that can be indicated by an SCI.
<i>sl-NumReservedBitsSCI1B-DedicatedSL-PRS-RP</i> Indicates the number of reserved bits in SCI format 1-B.
<i>sl-NumSubchannelDedicatedSL-PRS-RP</i> Indicates the number of subchannels in the corresponding resource pool, which consists of contiguous PRBs only.
<i>sl-PosAllowedResourceSelectionConfig</i> Indicates allowed resource allocation method configured per resource pool. c1: only sensing allowed c2: only random resource selection allowed c3: sensing and random resource selection allowed
<i>sl-PreemptionEnableDedicatedSL-PRS-RP</i> Indicates whether pre-emption is disabled or enabled in a resource pool. If the field is present and the value is <i>p1</i> , <i>p2</i> , and so on (but not <i>enabled</i>), it means that pre-emption is enabled and a priority level <i>p_preemption</i> is configured. If the field is present and the value is <i>enabled</i> , the pre-emption is enabled (but <i>p_preemption</i> is not configured) and pre-emption is applicable to all levels.
<i>sl-PriorityThreshold</i> Indicates the threshold used to determine whether NR sidelink transmission in dedicated SL PRS resource pool is prioritized over uplink transmission of priority index 0 as specified in TS 38.213[13], clause 16.2.4.3, or whether PUCCH transmission carrying SL HARQ is prioritized over PUCCH transmission carrying UCI of priority index 0 if they overlap in time as specified in TS 38.213 [13], clause 9.2.5.0.
<i>sl-PriorityThresholdDedicatedSL-PRS-RP</i> Indicates the upper bound of priority range which is associated with the configurations in <i>sl-CBR-ConfigIndexDedicatedSL-PRS-RP</i> and in <i>sl-PRS-TxConfigIndexList</i> . The upper bounds of the priority ranges are configured in ascending order for consecutive entries of <i>SL-PriorityTxConfigIndexDedicatedSL-PRS-RP</i> in <i>sl-CBR-PriorityTxConfigDedicatedSL-PRS-RP-List</i> . For the first entry of <i>sl-PriorityThresholdDedicatedSL-PRS-RP</i> , the lower bound of the priority range is 1.

<i>sl-PriorityThreshold-UL-URLLC</i>
Indicates the threshold used to determine whether NR sidelink transmission in dedicated SL PRS resource pool is prioritized over uplink transmission of priority index 1 as specified in TS 38.213[13], clause 16.2.4.3, or whether PUCCH transmission carrying SL HARQ is prioritized over PUCCH transmission carrying UCI of priority index 1 if they overlap in time as specified in TS 38.213 [13], clause 9.2.5.0.
<i>sl-PRS-ResourceReservePeriodList</i>
Indicates set of possible resource reservation period in the unit of ms allowed in the resource pool. Up to 16 values can be configured per resource pool. The value <i>ms0</i> is always configured.
<i>sl-PRS-ResourcesDedicatedSL-PRS-RP</i>
Indicates SL PRS resources in a slot of dedicated SL PRS resource pool as defined in TS 38.211 [16].
<i>sl-PRS-TxConfigIndexList</i>
Indicates list of <i>SL-PRS-Tx-ConfigIndex</i> indicating the SL PRS transmission configuration index.
<i>sl-RB-Number</i>
Indicates the number of PRBs in the corresponding SL PRS dedicated resource pool, which consists of contiguous PRBs only.
<i>sl-SCI-basedSL-PRS-TxTriggerSCI1-B</i>
Indicates presence of a bit-field in SCI format 1-B to trigger SL-PRS transmission by a receiving UE.
<i>sl-SelectionWindowListDedicatedSL-PRS-RP</i>
Parameter that determines the end of the selection window in the resource selection for a SL-PRS with respect to priority indicated in SCI. Value <i>n1</i> corresponds to $1 \cdot 2^\mu$, value <i>n5</i> corresponds to $5 \cdot 2^\mu$, and so on, where $\mu = 0,1,2,3$ refers to SCS 15,30,60,120 kHz respectively.
<i>sl-SensingWindowDedicatedSL-PRS-RP</i>
Indicates the start of the sensing window for SL PRS in a dedicated resource pool.
<i>sl-SRC-ID-LenDedicatedSL-PRS-RP</i>
Indicates the number of bits used for the source ID in SCI format 1-B.
<i>sl-StartRB-SubchannelDedicatedSL-PRS-RP</i>
Indicates the lowest RB index of the SL PRS dedicated resource pool with respect to the lowest RB index of a SL BWP.
<i>sl-SubchannelSizeDedicatedSL-PRS-RP</i>
Indicates size of a subchannel for PSCCH in number of RBs.
<i>sl-Thres-RSRP-ListDedicatedSL-PRS-RP</i>
Indicates a list of 64 thresholds, the threshold should be selected based on the priority in the decoded SCI and the priority in the SCI to be transmitted.
<i>sl-ThreshS-RSSI-PRS-CBR</i>
Indicates the S-RSSI threshold for determining the contribution of a sub-channel to the SL-PRS CBR measurement in a dedicated SL-PRS resource pool. Value 0 corresponds to -112 dBm, value 1 to -110 dBm, value <i>n</i> to $(-112 + n \cdot 2)$ dBm, and so on.
<i>sl-TimeResource</i>
This field indicates the bitmap of the SL PRS dedicated resource pool, which is defined by repeating the bitmap with a periodicity during a SFN or DFN cycle.
<i>sl-TimeWindowSizeCBR-DedicatedSL-PRS-RP</i>
Indicates the time window size for CBR measurement in a dedicated SL-PRS resource pool.
<i>sl-TimeWindowSizeCR-DedicatedSL-PRS-RP</i>
Indicates the time window size for CR evaluation in a dedicated SL-PRS resource pool.
<i>sl-TxPercentageDedicatedSL-PRS-RP-List</i>
Indicates list of minimum Tx percentage (list per priority).

<i>SL-PSCCH-ConfigDedicatedSL-PRS-RP</i> field descriptions
<i>sl-DMRS-ScrambleID-DedicatedSL-PRS-RP</i> Indicates the initialization value for PSCCH DMRS scrambling in a dedicated SL PRS resource pool.
<i>sl-FreqResourcePSCCH-DedicatedSL-PRS-RP</i> Indicates the number of PRBs for PSCCH in a dedicated SL PRS resource pool.
<i>sl-TimeResourcePSCCH-DedicatedSL-PRS-RP</i> Indicates the number of symbols for PSCCH in a dedicated SL PRS resource pool.

<i>SL-PRS-PowerControl</i> field descriptions
<i>dl-P0-SL-PRS</i> Indicates P0 value for DL pathloss based open loop power control for SL PRS transmission in dedicated SL PRS resource pool.
<i>dl-Alpha-SL-PRS</i> Indicates alpha value for DL pathloss based open loop power control for SL PRS transmission in dedicated SL PRS resource pool.
<i>sl-P0-SL-PRS</i> Indicates P0 value for SL pathloss based open loop power control for SL PRS transmission in dedicated SL PRS resource pool.
<i>sl-Alpha-SL-PRS</i> Indicates alpha value for SL pathloss based open loop power control for SL PRS transmission in dedicated SL PRS resource pool. When the field is absent the UE applies the value 1.

– *SL-PSBCH-Config*

The IE *SL-PSBCH-Config* indicates PSBCH transmission parameters on each sidelink bandwidth part.

SL-PSBCH-Config information element

```
-- ASN1START
-- TAG-SL-PSBCH-CONFIG-START

SL-PSBCH-Config-r16 ::= SEQUENCE {
    dl-P0-PSBCH-r16          INTEGER (-16..15)                OPTIONAL,    -- Need M
    dl-Alpha-PSBCH-r16       ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1} OPTIONAL,    -- Need M
    ...,
    [[
        dl-P0-PSBCH-r17      INTEGER (-202..24)                OPTIONAL    -- Need M
    ]]
}

-- TAG-SL-PSBCH-CONFIG-STOP
-- ASN1STOP
```

<i>SL-PSBCH-Config</i> field descriptions
<i>dl-Alpha-PSBCH</i> Indicates alpha value for DL pathloss based power control for PSBCH. When the field is not configured the UE applies the value 1.
<i>dl-P0-PSBCH</i> Indicates P0 value for DL pathloss based power control for PSBCH. If not configured, DL pathloss based power control is disabled for PSBCH. When <i>dl-P0-PSBCH-r17</i> is configured, the UE ignores <i>dl-P0-PSBCH-r16</i> . A Remote UE which is out of coverage, considers downlink pathloss based power control is disabled for PSBCH when <i>dl-P0-PSBCH</i> is configured.

– *SL-PSSCH-TxConfigList*

The IE *SL-PSSCH-TxConfigList* indicates PSSCH transmission parameters. When lower layers select parameters from the range indicated in IE *SL-PSSCH-TxConfigList*, the UE considers both configurations in IE *SL-PSSCH-TxConfigList* and the CBR-dependent configurations represented in IE *SL-CBR-PriorityTxConfigList*. Only one IE *SL-PSSCH-TxConfig* is provided per *SL-TypeTxSync*.

SL-PSSCH-TxConfigList information element

```
-- ASN1START
-- TAG-SL-PSSCH-TXCONFIGLIST-START

SL-PSSCH-TxConfigList-r16 ::= SEQUENCE (SIZE (1..maxPSSCH-TxConfig-r16)) OF SL-PSSCH-TxConfig-r16

SL-PSSCH-TxConfig-r16 ::= SEQUENCE {
    sl-TypeTxSync-r16          SL-TypeTxSync-r16                      OPTIONAL,    -- Need R
    sl-ThresUE-Speed-r16       ENUMERATED {kmph60, kmph80, kmph100, kmph120,
                                          kmph140, kmph160, kmph180, kmph200},
    sl-ParametersAboveThres-r16 SL-PSSCH-TxParameters-r16,
    sl-ParametersBelowThres-r16 SL-PSSCH-TxParameters-r16,
    ...,
    [[
        sl-ParametersAboveThres-v1650 SL-MinMaxMCS-List-r16          OPTIONAL,    -- Need R
        sl-ParametersBelowThres-v1650 SL-MinMaxMCS-List-r16          OPTIONAL    -- Need R
    ]]
}

SL-PSSCH-TxParameters-r16 ::= SEQUENCE {
    sl-MinMCS-PSSCH-r16        INTEGER (0..27),
    sl-MaxMCS-PSSCH-r16        INTEGER (0..31),
    sl-MinSubChannelNumPSSCH-r16 INTEGER (1..27),
    sl-MaxSubChannelNumPSSCH-r16 INTEGER (1..27),
    sl-MaxTxTransNumPSSCH-r16  INTEGER (1..32),
    sl-MaxTxPower-r16          SL-TxPower-r16                      OPTIONAL    -- Cond CBR
}

-- TAG-SL-PSSCH-TXCONFIGLIST-STOP
-- ASN1STOP
```

<i>SL-PSSCH-TxConfigList</i> field descriptions
<i>sl-MaxTxTransNumPSSCH</i> Indicates the maximum transmission number (including new transmission and retransmission) for PSSCH.
<i>sl-MaxTxPower</i> This field indicates the maximum transmission power for transmission on PSSCH and PSCCH.
<i>sl-MinMCS-PSSCH, sl-MaxMCS-PSSCH</i> This field indicates the minimum and maximum MCS values used for transmissions on PSSCH. The UE shall ignore the minimum and maximum MCS values used for the associated MCS table(s) in <i>sl-ParametersAboveThres-r16</i> and <i>sl-ParametersBelowThres-r16</i> if <i>sl-ParametersAboveThres-v1650</i> and <i>sl-ParametersBelowThres-v1650</i> are present, respectively.
<i>sl-MinSubChannelNumPSSCH, sl-MaxSubChannelNumPSSCH</i> This field indicates the minimum and maximum number of sub-channels which may be used for transmissions on PSSCH.
<i>sl-TypeTxSync</i> This field indicates the synchronization reference type. For configurations by the eNB/gNB, only <i>gnbEnb</i> can be configured; and for pre-configuration or when this field is absent, the configuration is applicable for all synchronization reference types.
<i>sl-ThresUE-Speed</i> This field indicates a UE absolute speed threshold.

Conditional Presence	Explanation
<i>CBR</i>	The field is optionally present, Need R, when the IE <i>SL-PSSCH-TxParameters</i> is present in <i>SL-CBR-CommonTxConfigList</i> , <i>SL-UE-SelectedConfig</i> , <i>SIB12</i> or <i>SidelinkPreconfigNR</i> ; otherwise the field is not present, need R.

– *SL-QoS-FlowIdentity*

The IE *SL-QoS-FlowIdentity* is used to identify a sidelink QoS flow.

SL-QoS-FlowIdentity information element

```

-- ASN1START
-- TAG-SL-QOS-FLOWIDENTITY-START

SL-QoS-FlowIdentity-r16 ::=
    INTEGER (1..maxNrofSL-QFIs-r16)

-- TAG-SL-QOS-FLOWIDENTITY-STOP
-- ASN1STOP

```

– *SL-QoS-Profile*

The IE *SL-QoS-Profile* is used to give the QoS parameters for a sidelink QoS flow. Need codes or conditions specified for *SL-QoS-Profile* do not apply, in case *SL-QoS-Profile* is included in *SidelinkUEInformationNR*.

SL-QoS-Profile information element

```

-- ASN1START

```



```
-- TAG-SL-QOS-PROFILE-START

SL-QoS-Profile-r16 ::=
    SL-PQI-r16          SL-PQI-r16          OPTIONAL, -- Need R
    SL-GFBR-r16         INTEGER (0..40000000000) OPTIONAL, -- Need R
    SL-MFBR-r16         INTEGER (0..40000000000) OPTIONAL, -- Need R
    SL-Range-r16        INTEGER (1..1000)     OPTIONAL, -- Need R
    ...
}

SL-PQI-r16 ::=
    SL-StandardizedPQI-r16  INTEGER (0..255),
    SL-Non-StandardizedPQI-r16 SEQUENCE {
        SL-ResourceType-r16    ENUMERATED {gbr, non-GBR, delayCriticalGBR, spare1} OPTIONAL, -- Need R
        SL-PriorityLevel-r16   INTEGER (1..8)                                OPTIONAL, -- Need R
        SL-PacketDelayBudget-r16 INTEGER (0..1023)                            OPTIONAL, -- Need R
        SL-PacketErrorRate-r16 INTEGER (0..9)                                OPTIONAL, -- Need R
        SL-AveragingWindow-r16 INTEGER (0..4095)                            OPTIONAL, -- Need R
        SL-MaxDataBurstVolume-r16 INTEGER (0..4095)                            OPTIONAL, -- Need R
        ...
    }
}

-- TAG-SL-QOS-PROFILE-STOP
-- ASN1STOP
```

SL-QoS-Profile field descriptions	
sl-GFBR	Indicate the guaranteed bit rate for a GBR QoS flow. The unit is: Kbit/s
sl-MFBR	Indicate the maximum bit rate for a GBR QoS flow. The unit is: Kbit/s
sl-PQI	This field indicates either the PQI for standardized PQI or non-standardized QoS parameters.
sl-Range	This field indicates the range parameter of the Qos flow, as defined in clause 5.4.1.1.1, TS 23.287 [55]. It is present only for groupcast. The unit is meter.

SL-PQI field descriptions
sl-AveragingWindow Indicates the Averaging Window for a QoS flow, and applies to GBR QoS flows only. Unit: ms. The default value of the IE is 2000ms.
sl-MaxDataBurstVolume Indicates the Maximum Data Burst Volume for a QoS flow, and applies to delay critical GBR QoS flows only. Unit: byte.
sl-PacketDelayBudget Indicates the Packet Delay Budget for a QoS flow. Upper bound value for the delay that a packet may experience expressed in unit of 0.5ms.
sl-PacketErrorRate Indicates the Packet Error Rate for a QoS flow. The packet error rate is expressed as Scalar x 10-k where k is the Exponent.
sl-PriorityLevel Indicates the Priority Level for a QoS flow. Values ordered in decreasing order of priority, i.e. with 1 as the highest priority and 8 as the lowest priority.
sl-StandardizedPQI Indicate the PQI for standardized PQI.

– SL-QuantityConfig

The IE SL-QuantityConfig specifies the layer 3 filtering coefficients for NR SL RSRP measurement for a destination.

SL-QuantityConfig information element

```
-- ASN1START
-- TAG-SL-QUANTITYCONFIG-START

SL-QuantityConfig-r16 ::=
    sl-FilterCoefficientDMRS-r16
    SEQUENCE {
        FilterCoefficient
        DEFAULT fc4,
        ...
    }

-- TAG-SL-QuantityConfig-STOP
-- ASN1STOP
```

SL-QuantityConfig field descriptions
sl-FilterCoefficientDMRS DMRS based L3 filter configuration: Specifies L3 filter configuration for sidelink RSRP measurement result from the L1 filter(s), as defined in TS 38.215 [9].

– SL-RadioBearerConfig

The IE SL-RadioBearerConfig specifies the sidelink DRB configuration information for NR sidelink communication.

SL-RadioBearerConfig information element

```
-- ASN1START
```

```
-- TAG-SL-RADIOBEARERCONFIG-START

SL-RadioBearerConfig-r16 ::= SEQUENCE {
    slrb-Uu-ConfigIndex-r16 SLRB-Uu-ConfigIndex-r16,
    sl-SDAP-Config-r16 SL-SDAP-Config-r16 OPTIONAL, -- Cond SLRBSetup
    sl-PDCP-Config-r16 SL-PDCP-Config-r16 OPTIONAL, -- Cond SLRBSetup
    sl-TransRange-r16 ENUMERATED {m20, m50, m80, m100, m120, m150, m180, m200, m220, m250, m270, m300, m350, m370,
                                   m400, m420, m450, m480, m500, m550, m600, m700, m1000, spare9, spare8, spare7, spare6,
                                   spare5, spare4, spare3, spare2, spare1} OPTIONAL, -- Need R
    ...
}

-- TAG-SL-RADIOBEARERCONFIG-STOP
-- ASN1STOP
```

SL-RadioBearerConfig field descriptions	
sl-PDCP-Config	This field indicates the PDCP parameters for the sidelink DRB.
sl-SDAP-Config	This field indicates how to map sidelink QoS flows to sidelink DRB.
slrb-Uu-ConfigIndex	This field indicates the index of sidelink DRB configuration.
sl-TransRange	This field indicates the transmission range of the sidelink DRB. The unit is meter.

Conditional Presence	Explanation
SLRBSetup	The field is mandatory present in case of sidelink DRB setup via the dedicated signalling and in case of sidelink DRB configuration via system information and pre-configuration; otherwise the field is optionally present, need M.

– SL-RBSetConfig

The IE SL-RBSetConfig specifies the configuration information for RB set for NR Sidelink Communication.

SL-RBSetConfig information element

```
-- ASN1START
-- TAG-SL-RBSETCONFIG-START

SL-RBSetConfig-r18 ::= SEQUENCE {
    sl-RBSetIndex-r18 INTEGER (0..4),
    sl-NumOfSSSBRepetition-r18 INTEGER (2..9) OPTIONAL, -- Need R
    sl-GapBetweenSSSBRepetition-r18 INTEGER (1..84) OPTIONAL, -- Need R
}

-- TAG-SL-RBSETCONFIG-STOP
-- ASN1STOP
```

SL-RBSetConfig field descriptions
sl-GapBetweenSSSBRepetition Indicate the gap between two adjacent S-SSB repetitions in frequency domain in one RB set, and the gap is between the lowest subcarrier of the upper PSBCH and the highest subcarrier of the lower PSBCH. The Unit is PRB.
sl-NumOfSSSBRepetition Indicate the number of S-SSB repetitions in frequency domain in one RB set. S-SSB in the frequency domain indicated by <i>sl-AbsoluteFrequencySSB</i> (i.e. S-SSB transmission without repetition) is applicable in region with no OCB requirement, or with OCB exemption.
sl-RBSetIndex Indicates the index of RB-set for which the configuration applies.

–
 SL-RelayIndicationMP

The IE *SL-RelayIndicationMP* is used to indicate the L2 U2N Relay UE supporting RRC connection establishment/resume for MP operation triggered by receiving *RemoteUEInformationSidelink* containing the *connectionForMP* as specified in 5.3.3.1a and 5.3.13.1a in Rel-18.

SL-RelayIndicationMP information element

```

-- ASN1START
-- TAG-SL-RELAYINDICATIONMP-START

SL-RelayIndicationMP-r18 ::=  ENUMERATED {support}

-- TAG-SL-RELAYINDICATIONMP-STOP
-- ASN1STOP

```

–
 SL-RelayUE-Config

The IE *SL-RelayUE-Config* specifies the configuration information for NR sidelink U2N Relay UE.

SL-RelayUE-Config information element

```

-- ASN1START
-- TAG-SL-RELAYUE-CONFIG-START

SL-RelayUE-Config-r17::=      SEQUENCE {
    threshHighRelay-r17        OPTIONAL,  -- Need R
    threshLowRelay-r17         OPTIONAL,  -- Need R
    hystMaxRelay-r17           OPTIONAL,  -- Cond ThreshHighRelay
    hystMinRelay-r17           OPTIONAL,  -- Cond ThreshLowRelay
}

-- TAG-SL-RELAYUE-CONFIG-STOP
-- ASN1STOP

```

SL-RelayUE-Config field descriptions	
threshHighRelay	Indicates the upper threshold of Uu RSRP for a UE that is in network coverage to evaluate AS layer conditions for U2N relay UE operation.
threshLowRelay	Indicates the lower threshold of Uu RSRP for a UE that is in network coverage to evaluate AS layer conditions for U2N relay UE operation.

Conditional Presence	Explanation
ThreshHighRelay	This field is mandatory present if threshHighRelay is included. Otherwise, the field is absent, Need R.
ThreshLowRelay	This field is mandatory present if threshLowRelay is included. Otherwise, the field is absent, Need R.

— SL-RelayUE-ConfigU2U

The IE SL-RelayUE-ConfigU2U specifies the threshold configuration information for NR sidelink U2U Relay UE.

SL-RelayUE-ConfigU2U information element

```
-- ASN1START
-- TAG-SL-RELAYUE-CONFIGU2U-START

SL-RelayUE-ConfigU2U-r18 ::=
    sl-RSRP-Thresh-DiscConfig-r18
    sd-RSRP-ThreshDiscConfig-r18
    sd-hystMaxRelay-r18
}

SL-RelayUE-ConfigU2U-v1840 ::=
    sl-FilterCoefficientU2U-r18
    sd-FilterCoefficientU2U-r18
    ...
}

-- TAG-SL-RELAYUE-CONFIGU2U-STOP
-- ASN1STOP
```

SL-RelayUE-ConfigU2U field descriptions	
sd-FilterCoefficientU2U	Specifies L3 filter coefficient for SD-RSRP measurement results from L1 filter, and for SL-RSRP measurements.
sd-RSRP-ThreshDiscConfig	Indicates the threshold of SD-RSRP for a U2U Relay UE to evaluate AS layer conditions for discovery. The U2U relay UE applies the value of this field to evaluate AS layer conditions to decide which UE(s) can be announced as proximity UE(s) in the discovery message when performing U2U Relay Discovery with Model A, and decide whether to forward the discovery message when performing the U2U Relay Discovery with Model B or U2U relay communication with integrated Discovery as specified in TS 23.304 [65].
sl-FilterCoefficientU2U	Specifies L3 filter coefficient for SL-RSRP measurement results from L1 filter.
sl-RSRP-Thresh-DiscConfig	Indicates the threshold of SL-RSRP for a U2U Relay UE to evaluate AS layer conditions for discovery. The U2U relay UE applies the value of this field to decide which UE(s) can be announced as proximity UE(s) in the discovery message when performing U2U Relay Discovery with Model A.

Conditional Presence	Explanation
SD-RSRP-ThreshRelay	This field is mandatory present if sd-RSRP-ThreshDiscConfig is included. Otherwise, the field is absent, Need R.

– SL-RemoteUE-Config

The IE SL-RemoteUE-Config specifies the configuration information for NR sidelink U2N Remote UE.

SL-RemoteUE-Config information element

```
-- ASN1START
-- TAG-SL-REMOTEUE-CONFIG-START

SL-RemoteUE-Config-r17 ::=
    threshHighRemote-r17          SEQUENCE {
        RSRP-Range                OPTIONAL, -- Need R
        Hysteresis                 OPTIONAL, -- Cond ThreshHighRemote
        SL-ReselectionConfig-r17  OPTIONAL -- Need R
    }

SL-ReselectionConfig-r17 ::=
    SL-RSRP-Range-r16             SEQUENCE {
        SL-RSRP-Range-r16         OPTIONAL, -- Need R
        FilterCoefficient         OPTIONAL, -- Need R
        Hysteresis                 OPTIONAL -- Cond SL-RSRP-Thresh
    }

-- TAG-SL-REMOTEUE-CONFIG-STOP
-- ASN1STOP
```

SL-RemoteUE-Config field descriptions
sl-ReselectionConfig Includes the parameters used by the U2N remote UE when selecting/ reselecting a U2N relay UE.
threshHighRemote Indicates the threshold of Uu RSRP for a UE that is in network coverage to evaluate AS layer conditions for U2N remote UE operation.

SL-ReselectionConfig field descriptions
sl-FilterCoefficientRSRP Specifies L3 filter coefficient for SL communication/ discovery RSRP measurement results from L1 filter.
sl-RSRP-Thresh Indicates the threshold of SL communication/ discovery RSRP for a U2N remote UE to perform relay UE selection/ reselection.

Conditional Presence	Explanation
SL-RSRP-Thresh	This field is mandatory present if sl-RSRP-Thresh is included. Otherwise, the field is absent, Need R.
ThreshHighRemote	This field is mandatory present if threshHighRemote is included. Otherwise, the field is absent, Need R.

– SL-RemoteUE-ConfigU2U

The IE SL-RemoteUE-ConfigU2U specifies the threshold configuration information for NR sidelink U2U Remote UE.

SL-RemoteUE-ConfigU2U information element

```
-- ASN1START
-- TAG-SL-REMOTEUE-CONFIGU2U-START

SL-RemoteUE-ConfigU2U-r18 ::=
    sl-RSRP-ThreshU2U-r18          SEQUENCE {
        sl-RSRP-Range-r16          SL-RSRP-Range-r16          OPTIONAL,      -- Need R
        sl-HystMinU2U-r18          Hysteresis                   OPTIONAL,      -- Cond SL-RSRP-ThreshU2U
        sd-RSRP-ThreshU2U-r18      SL-RSRP-Range-r16          OPTIONAL,      -- Need R
        sd-FilterCoefficientU2U-r18 FilterCoefficient          OPTIONAL,      -- Need R
        sd-HystMinU2U-r18          Hysteresis                   OPTIONAL      -- Cond SD-RSRP-ThreshU2U
    }

SL-RemoteUE-ConfigU2U-v1830 ::=
    sl-FilterCoefficientU2U-r18    SEQUENCE {
        FilterCoefficient          OPTIONAL,      -- Need R
        ...
    }

-- TAG-SL-REMOTEUE-CONFIGU2U-STOP
-- ASN1STOP
```

SL-RemoteUE-ConfigU2U field descriptions
sl-FilterCoefficientU2U Specifies L3 filter coefficient for SL-RSRP measurement results from L1 filter.
sl-RSRP-ThreshU2U Indicates the threshold of SL-RSRP for a U2U Remote UE to perform Relay UE selection/ reselection. The U2U remote UE applies the value of this field to evaluate AS layer conditions on direct PC5 link with the peer U2U Remote UE to trigger relay selection, and evaluate AS layer conditions on U2U relay link with U2U Relay UE to trigger relay reselection.
sd-RSRP-ThreshU2U Indicates the threshold of SD-RSRP for a U2U Remote UE to perform discovery and Relay UE selection/ reselection. For discovery, the U2U Remote UE applies the value of this field to evaluate AS layer conditions to decide whether to respond the discovery message when performing the U2U Relay Discovery with Model B as specified in TS 23.304 [65]. For relay selection and reselection, the U2U remote UE applies the value of this field to evaluate AS layer conditions on direct PC5 link to trigger relay selection, and evaluate AS layer conditions on U2U relay link to trigger relay reselection. The target U2U remote UE applies the value of this field to evaluate AS layer conditions trigger relay selection when performing U2U relay communication with integrated Discovery as specified in TS 23.304 [65].
sd-FilterCoefficientU2U Specifies L3 filter coefficient for SD-RSRP measurement results from L1 filter, and for SL-RSRP measurement.

Conditional Presence	Explanation
SL-RSRP-ThreshU2U	This field is mandatory present if <i>sl-RSRP-ThreshU2U</i> is included. Otherwise, the field is absent, Need R.
SD-RSRP-ThreshU2U	This field is mandatory present if <i>sd-RSRP-ThreshU2U</i> is included. Otherwise, the field is absent, Need R.

– SL-ReportConfigList

The IE *SL-ReportConfigList* concerns a list of SL measurement reporting configurations to add or modify for a destination.

SL-ReportConfigList information element

```

-- ASN1START
-- TAG-SL-REPORTCONFIGLIST-START

SL-ReportConfigList-r16 ::=
    SEQUENCE (SIZE (1..maxNrofSL-ReportConfigId-r16)) OF SL-ReportConfigInfo-r16

SL-ReportConfigInfo-r16 ::=
    SEQUENCE {
        sl-ReportConfigId-r16
            SL-ReportConfigId-r16,
        sl-ReportConfig-r16
            SL-ReportConfig-r16,
        ...
    }

SL-ReportConfigId-r16 ::=
    INTEGER (1..maxNrofSL-ReportConfigId-r16)

SL-ReportConfig-r16 ::=
    SEQUENCE {
        sl-ReportType-r16
            CHOICE {
                sl-Periodical-r16
                    SL-PeriodicalReportConfig-r16,
                sl-EventTriggered-r16
                    SL-EventTriggerConfig-r16,
                ...
            },
        ...
    }

```



```

SL-PeriodicalReportConfig-r16 ::=
    sl-ReportInterval-r16
    sl-ReportAmount-r16
    sl-ReportQuantity-r16
    sl-RS-Type-r16
    ...
}

SL-EventTriggerConfig-r16 ::=
    sl-EventId-r16
        eventS1-r16
            s1-Threshold-r16
            sl-ReportOnLeave-r16
            sl-Hysteresis-r16
            sl-TimeToTrigger-r16
            ...
        },
        eventS2-r16
            s2-Threshold-r16
            sl-ReportOnLeave-r16
            sl-Hysteresis-r16
            sl-TimeToTrigger-r16
            ...
        },
        ...
    },
    sl-ReportInterval-r16
    sl-ReportAmount-r16
    sl-ReportQuantity-r16
    sl-RS-Type-r16
    ...
}

SL-MeasReportQuantity-r16 ::=
    sl-RSRP-r16
    ...
}

SL-MeasTriggerQuantity-r16 ::=
    sl-RSRP-r16
    ...
}

SL-RS-Type-r16 ::=
    -- TAG-SL-REPORTCONFIGLIST-STOP
    -- ASN1STOP

```

SEQUENCE {
 ReportInterval,
 ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity},
 SL-MeasReportQuantity-r16,
 SL-RS-Type-r16,
 ...
}

SEQUENCE {
 CHOICE {
 SEQUENCE {
 SL-MeasTriggerQuantity-r16,
 BOOLEAN,
 Hysteresis,
 TimeToTrigger,
 ...
 },
 SEQUENCE {
 SL-MeasTriggerQuantity-r16,
 BOOLEAN,
 Hysteresis,
 TimeToTrigger,
 ...
 },
 ...
 },
 ReportInterval,
 ENUMERATED {r1, r2, r4, r8, r16, r32, r64, infinity},
 SL-MeasReportQuantity-r16,
 SL-RS-Type-r16,
 ...
}

CHOICE {
 BOOLEAN,
 ...
}

CHOICE {
 RSRP-Range,
 ...
}

ENUMERATED {dmrs, sl-prs, spare2, spare1}

SL-ReportConfig field descriptions
sl-ReportType Type of the configured sidelink measurement report.

SL-EventTriggerConfig field descriptions
sl-EventId Choice of sidelink measurement event triggered reporting criteria.
sl-ReportAmount Number of sidelink measurement reports applicable for <i>sl-EventTriggered</i> report type.
sl-ReportInterval Indicates the interval between periodical reports (i.e., when <i>sl-ReportAmount</i> exceeds 1) for <i>sl-EventTriggered</i> report type.
sl-ReportOnLeave indicates whether or not the UE shall initiate the sidelink measurement reporting procedure when the leaving condition is met for a frequency in <i>sl-FrequencyTriggeredList</i> , as specified in 5.8.10.4.1.
sl-ReportQuantity The sidelink measurement quantities to be included in the sidelink measurement report.
sl-TimeToTrigger Time during which specific criteria for the event needs to be met in order to trigger a sidelink measurement report.
sN-Threshold Threshold used for events S1 and S2 specified in clauses 5.8.10.4.2 and 5.8.10.4.3, respectively.

SL-PeriodicalReportConfig field descriptions
sl-ReportAmount Number of sidelink measurement reports applicable for <i>sl-Periodical</i> report type.
sl-ReportInterval Indicates the interval between periodical reports (i.e., when <i>sl-ReportAmount</i> exceeds 1) for <i>sl-Periodical</i> report type.
sl-ReportQuantity The sidelink measurement quantities to be included in the sidelink measurement report.

– SL-ResourcePool

The IE *SL-ResourcePool* specifies the configuration information for NR sidelink communication resource pool.

SL-ResourcePool information element

-- ASN1START
-- TAG-SL-RESOURCEPOOL-START

SL-ResourcePool-r16 ::=	SEQUENCE {		
sl-PSCCH-Config-r16	SetupRelease { SL-PSCCH-Config-r16 }	OPTIONAL,	-- Need M
sl-PSSCH-Config-r16	SetupRelease { SL-PSSCH-Config-r16 }	OPTIONAL,	-- Need M
sl-PSFCH-Config-r16	SetupRelease { SL-PSFCH-Config-r16 }	OPTIONAL,	-- Need M
sl-SyncAllowed-r16	SL-SyncAllowed-r16	OPTIONAL,	-- Need M
sl-SubchannelSize-r16	ENUMERATED {n10, n12, n15, n20, n25, n50, n75, n100}	OPTIONAL,	-- Need M

dummy	INTEGER (10..160)	OPTIONAL,	-- Need M
sl-StartRB-Subchannel-r16	INTEGER (0..265)	OPTIONAL,	-- Need M
sl-NumSubchannel-r16	INTEGER (1..27)	OPTIONAL,	-- Need M
sl-Additional-MCS-Table-r16	ENUMERATED {qam256, qam64LowSE, qam256-qam64LowSE }	OPTIONAL,	-- Need M
sl-ThreshS-RSSI-CBR-r16	INTEGER (0..45)	OPTIONAL,	-- Need M
sl-TimeWindowSizeCBR-r16	ENUMERATED {ms100, slot100}	OPTIONAL,	-- Need M
sl-TimeWindowSizeCR-r16	ENUMERATED {ms1000, slot1000}	OPTIONAL,	-- Need M
sl-PTRS-Config-r16	SL-PTRS-Config-r16	OPTIONAL,	-- Need M
sl-UE-SelectedConfigRP-r16	SL-UE-SelectedConfigRP-r16	OPTIONAL,	-- Need M
sl-RxParametersNcell-r16	SEQUENCE {		
sl-TDD-Configuration-r16	TDD-UL-DL-ConfigCommon	OPTIONAL,	-- Need M
sl-SyncConfigIndex-r16	INTEGER (0..15)		
}		OPTIONAL,	-- Need M
sl-ZoneConfigMCR-List-r16	SEQUENCE (SIZE (16)) OF SL-ZoneConfigMCR-r16	OPTIONAL,	-- Need M
sl-FilterCoefficient-r16	FilterCoefficient	OPTIONAL,	-- Need M
sl-RB-Number-r16	INTEGER (10..275)	OPTIONAL,	-- Need M
sl-PreemptionEnable-r16	ENUMERATED {enabled, pl1, pl2, pl3, pl4, pl5, pl6, pl7, pl8}	OPTIONAL,	-- Need R
sl-PriorityThreshold-UL-URLLC-r16	INTEGER (1..9)	OPTIONAL,	-- Need M
sl-PriorityThreshold-r16	INTEGER (1..9)	OPTIONAL,	-- Need M
sl-X-Overhead-r16	ENUMERATED {n0,n3, n6, n9}	OPTIONAL,	-- Need S
sl-PowerControl-r16	SL-PowerControl-r16	OPTIONAL,	-- Need M
sl-TxPercentageList-r16	SL-TxPercentageList-r16	OPTIONAL,	-- Need M
sl-MinMaxMCS-List-r16	SL-MinMaxMCS-List-r16	OPTIONAL,	-- Need M
...			
[[			
sl-TimeResource-r16	BIT STRING (SIZE (10..160))	OPTIONAL	-- Need M
]],			
[[			
sl-PBPS-CPS-Config-r17	SetupRelease { SL-PBPS-CPS-Config-r17 }	OPTIONAL,	-- Need M
sl-InterUE-CoordinationConfig-r17	SetupRelease { SL-InterUE-CoordinationConfig-r17 }	OPTIONAL	-- Need M
]],			
[[			
sl-CPE-StartingPositionsPSCCH-PSSCH-InitiateCOT-List-r18	SetupRelease { SL-CPE-StartingPositionsPSCCH-PSSCH-List-r18 }	OPTIONAL,	-- Need M
sl-CPE-StartingPositionsPSCCH-PSSCH-InitiateCOT-Default-r18	INTEGER (1..9)	OPTIONAL,	-- Need M
sl-CPE-StartingPositionsPSCCH-PSSCH-WithinCOT-List-r18	SetupRelease { SL-CPE-StartingPositionsPSCCH-PSSCH-List-r18 }	OPTIONAL,	-- Need M
sl-CPE-StartingPositionsPSCCH-PSSCH-WithinCOT-Default-r18	INTEGER (1..9)	OPTIONAL,	-- Need M
sl-Type1-LBT-BlockingOption1-r18	ENUMERATED {enabled}	OPTIONAL,	-- Need R
sl-Type1-LBT-BlockingOption2-r18	ENUMERATED {enabled}	OPTIONAL,	-- Need R
sl-NumInterlacePerSubchannel-r18	ENUMERATED {sc1, sc2}	OPTIONAL,	-- Need M
sl-NumReferencePRBs-OfInterlace-r18	ENUMERATED {prb10, prb11}	OPTIONAL,	-- Need M
sl-TransmissionStructureForPSFCH-r18	ENUMERATED {commonInterlace, dedicatedInterlace}	OPTIONAL,	-- Need M
sl-NumDedicatedPRBs-ForPSFCH-r18	ENUMERATED {prb1, prb2, prb5}	OPTIONAL,	-- Need M
sl-NumPSFCH-Occasions-r18	ENUMERATED {o1, o2, o3, o4}	OPTIONAL,	-- Need M
sl-PSFCH-CommonInterlaceIndex-r18	INTEGER (0..9)	OPTIONAL,	-- Need M
sl-CPE-StartingPositionPSFCH-r18	INTEGER (1..9)	OPTIONAL,	-- Need M
sl-NumRefSymbolLength-r18	ENUMERATED {sym7, sym8, sym9, sym10, sym11, sym12, sym13, sym14}	OPTIONAL,	-- Need M
sl-PSFCH-RB-SetList-r18	SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (10..275))	OPTIONAL,	-- Need M
sl-IUC-RB-SetList-r18	SEQUENCE (SIZE (1..4)) OF BIT STRING (SIZE (10..275))	OPTIONAL,	-- Need M
sl-PSFCH-PowerOffset-r18	INTEGER (0..10)	OPTIONAL,	-- Need M
sl-RBSetIndexOfResourcePool-r18	SEQUENCE (SIZE (1..5)) OF INTEGER (0..4)	OPTIONAL,	-- Need M
sl-A2X-Service-r18	ENUMERATED {brid, daa, bridAndDAA, spare1}	OPTIONAL,	-- Cond A2X
sl-PRS-ResourcesSharedSL-PRS-RP-r18	SEQUENCE (SIZE (1..17)) OF SL-PRS-ResourcesSharedSL-PRS-RP-r18	OPTIONAL,	-- Need M

```

numSym-SL-PRS-2ndStageSCI-r18      INTEGER (1..4)
sl-SCI-basedSL-PRS-TxTriggerSCI2-D-r18  BOOLEAN
]]
}

SL-CPE-StartingPositionsPSCCH-PSSCH-List-r18 ::= SEQUENCE (SIZE (8)) OF SL-CPE-StartingPositionsPSCCH-PSSCH-r18

SL-CPE-StartingPositionsPSCCH-PSSCH-r18 ::= SEQUENCE {
    sl-Priority-r18                INTEGER (1..8),
    sl-CPE-StartingPositions-r18    SEQUENCE (SIZE (1..9)) OF INTEGER (1..9)
}

SL-ZoneConfigMCR-r16 ::=
    sl-ZoneConfigMCR-Index-r16      INTEGER (0..15),
    sl-TransRange-r16               ENUMERATED {m20, m50, m80, m100, m120, m150, m180, m200, m220, m250, m270, m300, m350,
                                              m370, m400, m420, m450, m480, m500, m550, m600, m700, m1000, spare9, spare8,
                                              spare7, spare6, spare5, spare4, spare3, spare2, spare1}
    sl-ZoneConfig-r16              SL-ZoneConfig-r16
    ...
}

SL-SyncAllowed-r16 ::=
    gnss-Sync-r16                  ENUMERATED {true}
    gnbEnb-Sync-r16                ENUMERATED {true}
    ue-Sync-r16                    ENUMERATED {true}
}

SL-PSCCH-Config-r16 ::=
    sl-TimeResourcePSCCH-r16        ENUMERATED {n2, n3}
    sl-FreqResourcePSCCH-r16        ENUMERATED {n10, n12, n15, n20, n25}
    sl-DMRS-ScrambleID-r16          INTEGER (0..65535)
    sl-NumReservedBits-r16          INTEGER (2..4)
    ...
}

SL-PSSCH-Config-r16 ::=
    sl-PSSCH-DMRS-TimePatternList-r16 SEQUENCE (SIZE (1..3)) OF INTEGER (2..4)
    sl-BetaOffsets2ndSCI-r16         SEQUENCE (SIZE (4)) OF SL-BetaOffsets-r16
    sl-Scaling-r16                   ENUMERATED {f0p5, f0p65, f0p8, f1}
    ...
}

SL-PSFCH-Config-r16 ::=
    sl-PSFCH-Period-r16             ENUMERATED {sl0, sl1, sl2, sl4}
    sl-PSFCH-RB-Set-r16              BIT STRING (SIZE (10..275))
    sl-NumMuxCS-Pair-r16             ENUMERATED {n1, n2, n3, n6}
    sl-MinTimeGapPSFCH-r16           ENUMERATED {sl2, sl3}
    sl-PSFCH-HopID-r16               INTEGER (0..1023)
    sl-PSFCH-CandidateResourceType-r16 ENUMERATED {startSubCH, allocSubCH}
    ...
}

SL-PTRS-Config-r16 ::=
    sl-PTRS-FreqDensity-r16          SEQUENCE (SIZE (2)) OF INTEGER (1..276)

```

sl-PTRS-TimeDensity-r16	SEQUENCE (SIZE (3)) OF INTEGER (0..29)	OPTIONAL,	-- Need M
sl-PTRS-RE-Offset-r16	ENUMERATED {offset01, offset10, offset11}	OPTIONAL,	-- Need M
...			
}			
SL-UE-SelectedConfigRP-r16 ::=	SEQUENCE {		
sl-CBR-PriorityTxConfigList-r16	SL-CBR-PriorityTxConfigList-r16	OPTIONAL,	-- Need M
sl-Thres-RSRP-List-r16	SL-Thres-RSRP-List-r16	OPTIONAL,	-- Need M
sl-MultiReserveResource-r16	ENUMERATED {enabled}	OPTIONAL,	-- Need M
sl-MaxNumPerReserve-r16	ENUMERATED {n2, n3}	OPTIONAL,	-- Need M
sl-SensingWindow-r16	ENUMERATED {ms100, ms1100}	OPTIONAL,	-- Need M
sl-SelectionWindowList-r16	SL-SelectionWindowList-r16	OPTIONAL,	-- Need M
sl-ResourceReservePeriodList-r16	SEQUENCE (SIZE (1..16)) OF SL-ResourceReservePeriod-r16	OPTIONAL,	-- Need M
sl-RS-ForSensing-r16	ENUMERATED {psscch, pssch},		
...			
[[			
sl-CBR-PriorityTxConfigList-v1650	SL-CBR-PriorityTxConfigList-v1650	OPTIONAL	-- Need M
]],			
[[			
sl-NRPSSCH-EUTRA-ThresRSRP-List-r18	SL-Thres-RSRP-List-r16	OPTIONAL,	-- Need S
sl-NRPSFCH-EUTRA-ThresRSRP-List-r18	SL-Thres-RSRP-List-r16	OPTIONAL	-- Need S
]]			
}			
SL-ResourceReservePeriod-r16 ::=	CHOICE {		
sl-ResourceReservePeriod1-r16	ENUMERATED {ms0, ms100, ms200, ms300, ms400, ms500, ms600, ms700, ms800, ms900, ms1000},		
sl-ResourceReservePeriod2-r16	INTEGER (1..99)		
}			
SL-SelectionWindowList-r16 ::=	SEQUENCE (SIZE (8)) OF SL-SelectionWindowConfig-r16		
SL-SelectionWindowConfig-r16 ::=	SEQUENCE {		
sl-Priority-r16	INTEGER (1..8),		
sl-SelectionWindow-r16	ENUMERATED {n1, n5, n10, n20}		
}			
SL-TxPercentageList-r16 ::=	SEQUENCE (SIZE (8)) OF SL-TxPercentageConfig-r16		
SL-TxPercentageConfig-r16 ::=	SEQUENCE {		
sl-Priority-r16	INTEGER (1..8),		
sl-TxPercentage-r16	ENUMERATED {p20, p35, p50}		
}			
SL-MinMaxMCS-List-r16 ::=	SEQUENCE (SIZE (1..3)) OF SL-MinMaxMCS-Config-r16		
SL-MinMaxMCS-Config-r16 ::=	SEQUENCE {		
sl-MCS-Table-r16	ENUMERATED {qam64, qam256, qam64LowSE},		
sl-MinMCS-PSSCH-r16	INTEGER (0..27),		
sl-MaxMCS-PSSCH-r16	INTEGER (0..31)		
}			
SL-BetaOffsets-r16 ::=	INTEGER (0..31)		
SL-PowerControl-r16 ::=	SEQUENCE {		

```
sl-MaxTransPower-r16      INTEGER (-30..33),
sl-Alpha-PSSCH-PSCCH-r16  ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1} OPTIONAL, -- Need M
dl-Alpha-PSSCH-PSCCH-r16  ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1} OPTIONAL, -- Need S
sl-P0-PSSCH-PSCCH-r16     INTEGER (-16..15)      OPTIONAL, -- Need S
dl-P0-PSSCH-PSCCH-r16     INTEGER (-16..15)      OPTIONAL, -- Need M
dl-Alpha-PSFCH-r16        ENUMERATED {alpha0, alpha04, alpha05, alpha06, alpha07, alpha08, alpha09, alpha1} OPTIONAL, -- Need S
dl-P0-PSFCH-r16           INTEGER (-16..15)      OPTIONAL, -- Need M
...
[[
dl-P0-PSSCH-PSCCH-r17     INTEGER (-202..24)
sl-P0-PSSCH-PSCCH-r17     INTEGER (-202..24)      OPTIONAL, -- Need S
dl-P0-PSFCH-r17           INTEGER (-202..24)      OPTIONAL, -- Need M
]]
}

SL-PRS-ResourceSharedSL-PRS-RP-r18 ::= SEQUENCE {
  sl-PRS-ResourceID-r18      INTEGER (0..16),
  mNumberOfSymbols-r18      INTEGER (1..9),
  sl-PRS-CombSizeN-AndReOffset-r18 CHOICE {
    n2-r18                   INTEGER (0..1),
    n4-r18                   INTEGER (0..3),
    dummy1                   INTEGER (0..5),
    ...
  }
}

-- TAG-SL-RESOURCEPOOL-STOP
-- ASN1STOP
```

SL-ZoneConfigMCR field descriptions
sl-TransRange Indicates the communication range requirement for the corresponding <i>sl-ZoneConfigMCR-Index</i> . The unit is meter.
sl-ZoneConfig Indicates the zone configuration for the corresponding <i>sl-ZoneConfigMCR-Index</i> .
sl-ZoneConfigMCR-Index Indicates the codepoint of the communication range requirement field in SCI.

<i>SL-ResourcePool</i> field descriptions
<i>dummy, dummy1</i> This field is not used in the specification. If received it shall be ignored by the UE.
<i>numSym-SL-PRS-2ndStageSCI</i> Indicates the number symbols to be assumed for SL PRS in determining the number of coded modulation symbols for second stage SCI in a slot of a shared SL PRS resource pool.
<i>sl-A2X-Service</i> Presence of this field indicates the resource pool is dedicated for A2X service, i.e., not to be used for other than A2X service. Value <i>brid</i> indicates the resource pool is for BRID, value <i>daa</i> indicates the resource pool is for DAA, and value <i>bridAndDAA</i> indicates the resource pool is for both BRID and DAA. If this field is absent in all the configured resource pools, the UE may choose non-dedicated resource pool for A2X service.
<i>sl-Additional-MCS-Table</i> Indicates the MCS table(s) additionally used in the resource pool. 64QAM table is (pre-)configured as default. Zero, one or two can be additionally (pre-)configured using the 256QAM and/or low-SE MCS tables. If two MCS tables are indicated, 256QAM MCS table is the 1st table and qam64lowSE MCS table is the 2nd table as specified in TS 38.214 [19], clause 8.1.3.1.
<i>sl-CPE-StartingPositionsPSCCH-PSSCH-InitiateCOT-Default</i> Indicates CPE starting position index for the default CPE starting position, to be used for PSCCH/PSSCH transmission when UE initiating a COT.
<i>sl-CPE-StartingPositionsPSCCH-PSSCH-InitiateCOT-List</i> Indicates a set of selected indices that correspond to multiple candidate CPE starting positions to be used for PSCCH/PSSCH transmission when UE initiating a COT, associated per L1 priority of PSSCH.
<i>sl-CPE-StartingPositionsPSCCH-PSSCH-WithinCOT-Default</i> Indicates CPE starting position index for the default CPE starting position, to be used by UE for PSCCH/PSSCH transmission within a COT.
<i>sl-CPE-StartingPositionsPSCCH-PSSCH-WithinCOT-List</i> Indicates a set of one or multiple selected indices that correspond to one or multiple candidate CPE starting positions to be used by UE for PSCCH/PSSCH transmission within a COT, associated per L1 priority of PSSCH.
<i>sl-CPE-StartingPositionPSFCH</i> Indicates CPE starting position within the GP symbol before PSFCH transmission. The value is an index of the set of all candidate CPE starting positions specified in Table 5.3.1-3 of [16, TS38.211] for $C_i=1$ and the corresponding SCS of the SL BWP.
<i>sl-FilterCoefficient</i> This field indicates the filtering coefficient for long-term measurement and reference signal power derivation used for sidelink open-loop power control.
<i>sl-InterUE-CoordinationConfig</i> Indicates the configured sidelink inter-UE coordination parameters.
<i>sl-IUC-RB-SetList</i> The n-th value in the list indicates the set of PRBs of n-th PSFCH occasion that are actually used for inter-UE coordination information transmission and reception in Scheme 2. It shall be (pre-)configured such that N candidate PSFCH occasion(s) are associated with N different PRB sets. PRBs within intra-cell guard band are not used for PSFCH transmission. The length of this list is aligned with <i>sl-NumPSFCH-Occasions</i>. For each PSFCH occasion, the set of PRBs are indicated in the same format as in <i>sl-PSFCH-RB-Set</i>.
<i>sl-NumDedicatedPRBs-ForPSFCH</i> Indicates the value of K3 when each PSFCH transmission occupies "1 common interlace and K3 dedicated PRB(s)" (as indicated by <i>sl-TransmissionStructureForPSFCH</i>). Value prb1 corresponds to K3=1, value prb2 corresponds to K3=2, and so on. UE expects the same (pre-)configured value of <i>sl-NumDedicatedPRBs-ForPSFCH</i> across all resource pools.
<i>sl-NumInterlacePerSubchannel</i> Indicates the number of (K) interlaces per sub-channel within a resource pool. Value sc1 corresponds to 1 interlace per sub-channel, and value sc2 corresponds to 2 interlaces per sub-channel. The applicable values are related to the subcarrier spacing as below: For SCS = 15 kHz: K=1 or 2 For SCS = 30 kHz: K=1

<i>sl-NumPSFCH-Occasions</i>
Indicates one PSCCH/PSSCH transmission has N associated candidate PSFCH occasion(s). Value <i>o1</i> corresponds to N=1, value <i>o2</i> corresponds to N=2, and so on. If the field is not configured, the UE shall use value <i>o1</i> .
<i>sl-NumReferencePRBs-OfInterlace</i>
Indicate reference number of PRBs of one interlace within 1 RB set. Value <i>prb10</i> corresponds to 10 PRBs, and value <i>prb11</i> corresponds to 11 PRBs.
<i>sl-NumRefSymbolLength</i>
Indicates a reference number of symbols for TBS determination.
<i>sl-NumSubchannel</i>
Indicates the number of subchannels in the corresponding resource pool, which consists of contiguous PRBs only.
<i>sl-PBPS-CPS-Config</i>
Indicates the allowed resource allocation schemes of full sensing only, partial sensing only, random resource selection only, or any combination(s), and the related configuration for power saving resource allocation schemes. This field is absent for <i>sl-TxPoolExceptional</i> .
<i>sl-PreemptionEnable</i>
Indicates whether pre-emption is disabled or enabled in a resource pool. If the field is present and the value is <i>pl1</i> , <i>pl2</i> , and so on (but not <i>enabled</i>), it means that pre-emption is enabled and a priority level <i>p_preemption</i> is configured. If the field is present and the value is <i>enabled</i> , the pre-emption is enabled (but <i>p_preemption</i> is not configured) and pre-emption is applicable to all levels.
<i>sl-PriorityThreshold-UL-URLLC</i>
Indicates the threshold used to determine whether NR sidelink transmission is prioritized over uplink transmission of priority index 1 as specified in TS 38.213[13], clause 16.2.4.3, or whether PUCCH transmission carrying SL HARQ is prioritized over PUCCH transmission carrying UCI of priority index 1 if they overlap in time as specified in TS 38.213 [13], clause 9.2.5.0.
<i>sl-PriorityThreshold</i>
Indicates the threshold used to determine whether NR sidelink transmission is prioritized over uplink transmission of priority index 0 as specified in TS 38.213[13], clause 16.2.4.3, or whether PUCCH transmission carrying SL HARQ is prioritized over PUCCH transmission carrying UCI of priority index 0 if they overlap in time as specified in TS 38.213 [13], clause 9.2.5.0.
<i>sl-PRS-ResourcesSharedSL-PRS-RP</i>
Indicates SL PRS resources in a slot of shared SL PRS resource pool as defined in TS 38.211 [16]. The UE can use the resource pool to transmit or receive SL-PRS only if this field is present.
<i>sl-PSFCH-CommonInterlaceIndex</i>
Indicate the index of common interlace to meet OCB requirements when <i>transmissionStructureForPSFCH</i> is set to common interlace. Value 0 corresponds to interlace 0 is used as common interlace, value 1 corresponds to interlace 1 is used as common interlace and so on.
<i>sl-PSFCH-PowerOffset</i>
Indicates the power offset between Tx power on one common PRB (<i>P_common</i>) and Tx power on one dedicated PRB (<i>P_dedicated</i>) when <i>sl-TransmissionStructureForPSFCH</i> is (pre-)configured as <i>commonInterlace</i> , i.e., $P_{common} = P_{dedicated} - \text{offset}$. UE expects the same (pre-)configured value of <i>sl-PSFCH-PowerOffset</i> across all resource pools. The unit is dB.
<i>sl-PSFCH-RB-SetList</i>
The n-th value in the list indicates the set of PRBs that are actually used for PSFCH transmission and reception of n-th PSFCH occasion of a PSCCH/PSSCH transmission. It shall be (pre-)configured such that N candidate PSFCH occasion(s) are associated with N different PRB sets. PRBs within intra-cell guard band are not used for PSFCH transmission. The length of this list is aligned with <i>sl-NumPSFCH-Occasions</i> . For each PSFCH occasion, the set of PRBs are indicated in the same format as in <i>sl-PSFCH-RB-Set</i> .
<i>sl-RB-Number</i>
Indicates the number of PRBs in the corresponding resource pool, which consists of contiguous PRBs only. The remaining RB cannot be used (See TS 38.214[19], clause 8).
<i>sl-RBSetIndexOfResourcePool</i>
For interlace RB based PSCCH/PSSCH, indicates the RB set index(s) included in the resource pool. Contiguous RB sets are (pre-)configured for a resource pool.
<i>sl-SCI-basedSL-PRS-TxTriggerSCI2-D</i>
Indicates presence of a bit-field in SCI format 2-D to trigger SL-PRS transmission by a receiving UE.
<i>sl-StartRB-Subchannel</i>
Indicates the lowest RB index of the subchannel with the lowest index in the resource pool with respect to the lowest RB index of a SL BWP.

<i>sl-SubchannelSize</i>
Indicates the minimum granularity in frequency domain for the sensing for PSSCH resource selection in the unit of PRB.
<i>sl-SyncAllowed</i>
Indicates the allowed synchronization reference(s) which is (are) allowed to use the configured resource pool.
<i>sl-SyncConfigIndex</i>
Indicates the synchronisation configuration that is associated with a reception pool, by means of an index to the corresponding entry <i>SL-SyncConfigList</i> of in <i>SIB12</i> for NR sidelink communication.
<i>sl-TDD-Configuration</i>
Indicates the TDD configuration associated with the reception pool of the cell indicated by <i>sl-SyncConfigIndex</i> .
<i>sl-ThreshS-RSSI-CBR</i>
Indicates the S-RSSI threshold for determining the contribution of a sub-channel to the CBR measurement. Value 0 corresponds to -112 dBm, value 1 to -110 dBm, value n to $(-112 + n \times 2)$ dBm, and so on.
<i>sl-TimeResource</i>
Indicates the bitmap of the resource pool, which is defined by repeating the bitmap with a periodicity during a SFN or DFN cycle.
<i>sl-TimeWindowSizeCBR</i>
Indicates the time window size for CBR measurement.
<i>sl-TimeWindowSizeCR</i>
Indicates the time window size for CR evaluation.
<i>sl-TransmissionStructureForPSFCH</i>
Indicate each PSFCH transmission occupies "1 common interlace and K3 dedicated PRB(s)", or "1 dedicated interlace". Value <i>commonInterlace</i> corresponds to "1 common interlace and K3 dedicated PRB(s)", and value <i>dedicatedInterlace</i> corresponds to "1 dedicated interlace". UE expects the same (pre-)configured value of <i>transmissionStructureForPSFCH</i> across all resource pools.
<i>sl-TxPercentageList</i>
Indicates the portion of candidate single-slot PSSCH resources over the total resources. Value p20 corresponds to 20%, and so on.
<i>sl-Type1-LBT-BlockingOption1</i>
Indicates UE may avoid selection of N consecutive resource(s) before a reserved resource of another UE when the L1 SL priority value for the transmission is higher than the L1 SL priority value of the reserved resource, and UE may also avoid selection of M consecutive resource(s) after a reserved resource of another UE when the transmitting symbols of the reserved resource overlap with LBT of the selected resource. The selection of the value N is up to UE implementation from {0, 1, 2}. M is determined based on UE implementation (at least including 0).
<i>sl-Type1-LBT-BlockingOption2</i>
Indicates UE may prioritize/select resource(s) in the slot(s) for transmission, if UE's transmission in slot(s) before a reserved resource is able to share its initiated COT to the reservation.
<i>sl-X-Overhead</i>
Accounts for overhead from CSI-RS, PT-RS. If the field is absent, the UE applies value <i>n0</i> (see TS 38.214 [19], clause 8.1.3.2).

***SL-SyncAllowed* field descriptions**

gnbEnb-Sync

If configured, the (pre-) configured resources can be used if the UE is directly or indirectly synchronized to eNB or gNB (i.e., synchronized to a reference UE which is directly synchronized to eNB or gNB).

gnss-Sync

If configured, the (pre-) configured resources can be used if the UE is directly or indirectly synchronized to GNSS (i.e., synchronized to a reference UE which is directly synchronized to GNSS).

ue-Sync

If configured, the (pre-) configured resources can be used if the UE is synchronized to a reference UE which is not synchronized to eNB, gNB and GNSS directly or indirectly.

<i>SL-PSCCH-Config</i> field descriptions
<i>sl-FreqResourcePSCCH</i> Indicates the number of PRBs for PSCCH in a resource pool where it is not greater than the number PRBs of the subchannel.
<i>sl-DMRS-ScrambleID</i> Indicates the initialization value for PSCCH DMRS scrambling.
<i>sl-NumReservedBits</i> Indicates the number of reserved bits in first stage SCI.
<i>sl-TimeResourcePSCCH</i> Indicates the number of symbols of PSCCH in a resource pool.

<i>SL-PSSCH-Config</i> field descriptions
<i>sl-BetaOffsets2ndSCI</i> Indicates candidates of beta-offset values to determine the number of coded modulation symbols for second stage SCI. The value indicates the index of Table 9.3-2 of TS 38.213 [13].
<i>sl-PSSCH-DMRS-TimePatternList</i> Indicates the set of PSSCH DMRS time domain patterns in terms of PSSCH DMRS symbols in a slot that can be used in the resource pool.
<i>sl-Scaling</i> Indicates a scaling factor to limit the number of resource elements assigned to the second stage SCI on PSSCH. Value <i>f0p5</i> corresponds to 0.5, value <i>f0p65</i> corresponds to 0.65, and so on.

<i>SL-PSFCH-Config</i> field descriptions
<i>sl-MinTimeGapPSFCH</i> The minimum time gap between PSFCH and the associated PSSCH in the unit of slots.
<i>sl-NumMuxCS-Pair</i> Indicates the number of cyclic shift pairs used for a PSFCH transmission that can be multiplexed in a PRB.
<i>sl-PSFCH-CandidateResourceType</i> Indicates the number of PSFCH resources available for multiplexing HARQ-ACK information in a PSFCH transmission (see TS 38.213 [13], clause 16.3).
<i>sl-PSFCH-HopID</i> Scrambling ID for sequence hopping of the PSFCH used in the resource pool.
<i>sl-PSFCH-Period</i> Indicates the period of PSFCH resource in the unit of slots within this resource pool. If set to <i>s/0</i> , no resource for PSFCH, and HARQ feedback for all transmissions in the resource pool is disabled.
<i>sl-PSFCH-RB-Set</i> Indicates the set of PRBs that are actually used for PSFCH transmission and reception. The leftmost bit of the bitmap refers to the lowest RB index in the resource pool, and so on. Value 0 in the bitmap indicates that the corresponding PRB is not used for PSFCH transmission and reception while value 1 indicates that the corresponding PRB is used for PSFCH transmission and reception (see TS 38.213 [13]).

<i>SL-PRS-ResourceSharedSL-PRS-RP</i> field descriptions
<i>mNumberOfSymbols</i> Indicates the number of symbols in the SL PRS resource in the shared resource pool. The maximum value that is configured for this field is 4.
<i>sl-PRS-CombSizeN-AndReOffset</i> Indicates a comb offset and a comb size of the SL PRS resource in a shared SL PRS resource pool (see TS 38.214 [19], clause 8.2.4).
<i>sl-PRS-ResourceID</i> Indicates the index of the SL PRS resource in shared resource pool.

<i>SL-PTRS-Config</i> field descriptions
<i>sl-PTRS-FreqDensity</i> Presence and frequency density of SL PT-RS as a function of scheduled BW. If the field is not configured, the UE uses $K_{PT-RS} = 2$
<i>sl-PTRS-TimeDensity</i> Presence and time density of SL PT-RS as a function of MCS. If the field is not configured, the UE uses $L_{PT-RS} = 1$
<i>sl-PTRS-RE-Offset</i> Indicates the subcarrier offset for SL PT-RS . If the field is not configured, the UE applies the value <i>offset00</i> (see TS 38.211 [16], clause 8.4.1.2.2).

<i>SL-UE-SelectedConfigRP</i> field descriptions
<i>sl-CBR-PriorityTxConfigList</i> Indicates the mapping between PSSCH transmission parameter (such as MCS, PRB number, retransmission number, CR limit) sets by using the indexes of the configurations in <i>sl-CBR-PSSCH-TxConfigList</i> , CBR ranges by using the indexes to the entry of the CBR range configurations in <i>sl-CBR-RangeConfigList</i> , and priority ranges. It also indicates the default PSSCH transmission parameters to be used when CBR measurement results are not available, and MCS range for the MCS tables used in the resource pool. The field <i>sl-CBR-PriorityTxConfigList-v1650</i> is present only when <i>sl-CBR-PriorityTxConfigList-r16</i> is configured.
<i>sl-MaxNumPerReserve</i> Indicates the maximum number of reserved PSCCH/PSSCH resources that can be indicated by an SCI.
<i>sl-MultiReserveResource</i> Indicates if it is allowed to reserve a sidelink resource for an initial transmission of a TB by an SCI associated with a different TB, based on sensing and resource selection procedure.
<i>sl-NRPSFCH-EUTRA-ThresRSRP-List</i> Indicates a list of 64 thresholds from which a threshold should be selected based on the priority in the decoded EUTRA SCI and the priority in the NR SCI to be transmitted. A NR SL resource is excluded if the corresponding PSFCH transmission occasions overlap with resources indicated or reserved by the decoded EUTRA SCI in time domain and EUTRA PSSCH RSRP in the associated data resource is above the threshold.
<i>sl-NRPSSCH-EUTRA-ThresRSRP-List</i> Indicates a list of 64 thresholds, and a threshold should be selected based on the priority in the decoded EUTRA SCI and the priority in the NR SCI to be transmitted. A NR SL resource is excluded if it is indicated or reserved by the decoded EUTRA SCI and EUTRA PSSCH RSRP in the associated data resource is above the threshold. If the field is present, the UE shall perform the dynamic co-channel coexistence of LTE sidelink and NR sidelink as specified in TS 38.214; otherwise it shall not perform it.
<i>sl-ResourceReservePeriodList</i> Set of possible resource reservation period allowed in the resource pool in the unit of ms. Up to 16 values can be configured per resource pool. The value <i>ms0</i> is always configured.
<i>sl-RS-ForSensing</i> Indicates whether DMRS of PSCCH or PSSCH is used for L1 RSRP measurement in the sensing operation.
<i>sl-SensingWindow</i> Parameter that indicates the start of the sensing window.
<i>sl-SelectionWindowList</i> Parameter that determines the end of the selection window in the resource selection for a TB with respect to priority indicated in SCI. Value <i>n1</i> corresponds to $1 \cdot 2^\mu$, value <i>n5</i> corresponds to $5 \cdot 2^\mu$, and so on, where $\mu = 0,1,2,3$ refers to SCS 15,30,60,120 kHz respectively.
<i>sl-Thres-RSRP-List</i> Indicates a list of 64 thresholds, and the threshold should be selected based on the priority in the decoded SCI and the priority in the SCI to be transmitted. A resource is excluded if it is indicated or reserved by a decoded SCI and PSSCH/PSCCH RSRP in the associated data resource is above a threshold.

SL-PowerControl field descriptions
<i>sl-MaxTransPower</i> Indicates the maximum value of the UE's sidelink transmission power on this resource pool when the sidelink transmission is performed only on this resource pool. The unit is dBm. If the sidelink transmission is PSFCH, and multiple resource pools are used, the maximum transmission power for PSFCH is configured as sum of fields <i>sl-MaxTransPower</i> over multiple resource pools, as specified in TS 38.101-1 [15].
<i>sl-Alpha-PSSCH-PSCCH</i> Indicates alpha value for sidelink pathloss based power control for PSCCH/PSSCH when <i>sl-P0-PSSCH-PSCCH</i> is configured. When the field is absent the UE applies the value 1.
<i>sl-P0-PSSCH-PSCCH</i> Indicates P0 value for sidelink pathloss based power control for PSCCH/PSSCH. If not configured, sidelink pathloss based power control is disabled for PSCCH/PSSCH. When <i>sl-P0-PSSCH-PSCCH-r17</i> is configured, the UE ignores <i>sl-P0-PSSCH-PSCCH-r16</i> .
<i>dl-Alpha-PSSCH-PSCCH</i> Indicates alpha value for downlink pathloss based power control for PSCCH/PSSCH when <i>dl-P0-PSSCH-PSCCH</i> is configured. When the field is absent the UE applies the value 1.
<i>dl-P0-PSSCH-PSCCH</i> Indicates P0 value for downlink pathloss based power control for PSCCH/PSSCH. If not configured, downlink pathloss based power control is disabled for PSCCH/PSSCH. When <i>dl-P0-PSSCH-PSCCH-r17</i> is configured, the UE ignores <i>dl-P0-PSSCH-PSCCH-r16</i> . A Remote UE which is out of coverage, considers downlink pathloss based power control is disabled for PSCCH/PSSCH when <i>dl-P0-PSSCH-PSCCH</i> is configured.
<i>dl-Alpha-PSFCH</i> Indicates alpha value for downlink pathloss based power control for PSFCH when <i>dl-P0-PSFCH</i> is configured. When the field is absent the UE applies the value 1. For resource pools configured with PSFCH resources overlapping in time, this field is either not configured in any of the resource pools or configured with the same value for all the resource pools.
<i>dl-P0-PSFCH</i> Indicates P0 value for downlink pathloss based power control for PSFCH. If not configured, downlink pathloss based power control is disabled for PSFCH. When <i>dl-P0-PSFCH-r17</i> is configured, the UE ignores <i>dl-P0-PSFCH-r16</i> . For resource pools configured with PSFCH resources overlapping in time, this field is either not configured in any of the resource pools or configured with the same value for all the resource pools. A Remote UE which is out of coverage, considers downlink pathloss based power control is disabled for PSFCH when <i>dl-P0-PSFCH</i> is configured.

SL-MinMaxMCS-Config field descriptions
<i>sl-MaxMCS-PSSCH</i> Indicates the maximum MCS value when using the associated MCS table. If no MCS is configured, UE autonomously selects MCS from the full range of values.
<i>sl-MinMCS-PSSCH</i> Indicates the minimum MCS value when using the associated MCS table. If no MCS is configured, UE autonomously selects MCS from the full range of values.

SL-CPE-StartingPositionsPSCCH-PSSCH field descriptions
<i>sl-Priority</i> Indicates L1 priority of PSSCH.
<i>sl-CPE-StartingPositions</i> Indicates a set of candidate CPE starting positions specified in Table 5.3.1-3 [16, TS38.211],

Conditional Presence	Explanation
A2X	The field is mandatory present in <i>sl-BWP-PoolConfigA2X</i> and <i>sl-BWP-PoolConfigCommonA2X</i> ; otherwise the field is optionally present, Need M.

– *SL-RLC-BearerConfig*

The IE *SL-RLC-BearerConfig* specifies the SL RLC bearer configuration information for NR sidelink communication.

SL-RLC-BearerConfig information element

```
-- ASN1START
-- TAG-SL-RLC-BEARERCONFIG-START

SL-RLC-BearerConfig-r16 ::=
    sl-RLC-BearerConfigIndex-r16
    sl-ServedRadioBearer-r16
    sl-RLC-Config-r16
    sl-MAC-LogicalChannelConfig-r16
    ...
    [[
        sl-RLC-BearerConfigIndex-v1800
    ]]
}

SEQUENCE {
    SL-RLC-BearerConfigIndex-r16,
    SLRB-Uu-ConfigIndex-r16
    SL-RLC-Config-r16
    SL-LogicalChannelConfig-r16
    OPTIONAL, -- Cond LCH-SetupOnly
    OPTIONAL, -- Cond LCH-Setup
    OPTIONAL, -- Cond LCH-Setup
    SL-RLC-BearerConfigIndex-v1800
    OPTIONAL -- Need R

-- TAG-SL-RLC-BEARERCONFIG-STOP
-- ASN1STOP
```

<i>SL-RLC-BearerConfig</i> field descriptions
<i>sl-MAC-LogicalChannelConfig</i> The field is used to configure MAC SL logical channel parameters.
<i>sl-RLC-BearerConfigIndex</i> The index of the RLC bearer configuration. If the field <i>sl-RLC-BearerConfigIndex-v1800</i> is present, the UE shall ignore the <i>sl-RLC-BearerConfigIndex-r16</i> field.
<i>sl-RLC-Config</i> Determines the RLC mode (UM, AM) and provides corresponding parameters.
<i>sl-ServedRadioBearer</i> Associates the sidelink RLC Bearer with a sidelink DRB. It indicates the index of SL radio bearer configuration, which is corresponding to the RLC bearer configuration.

Conditional Presence	Explanation
<i>LCH-Setup</i>	The field is mandatory present upon creation of a new sidelink logical channel via the dedicated signalling and in case of sidelink DRB configuration via system information and pre-configuration; otherwise the field is optionally present, Need M.
<i>LCH-SetupOnly</i>	This field is mandatory present upon creation of a new sidelink logical channel via the dedicated signalling and in case of sidelink DRB configuration via system information and pre-configuration. Otherwise, it is absent, Need M.

– *SL-RLC-BearerConfigIndex*

The IE *SL-RLC-BearerConfigIndex* is used to identify a SL RLC bearer configuration.

SL-RLC-BearerConfigIndex information element

```
-- ASN1START
-- TAG-SL-RLC-BEARERCONFIGINDEX-START

SL-RLC-BearerConfigIndex-r16 ::=                INTEGER (1..maxSL-LCID-r16)

SL-RLC-BearerConfigIndex-v1800 ::=              INTEGER (maxSL-LCID-Plus1-r18..maxSL-LCID-r18)

-- TAG-RLC-BEARERCONFIGINDEX-STOP
-- ASN1STOP
```

– *SL-RLC-ChannelConfig*

The IE *SL-RLC-ChannelConfig* specifies the configuration information for PC5 Relay RLC channel between L2 U2N Relay UE and L2 U2N Remote UE, or between L2 U2U Remote UE and L2 U2U Relay UE.

SL-RLC-ChannelConfig information element

```
-- ASN1START
-- TAG-SL-RLC-RLC-CHANNEL-CONFIG-START

SL-RLC-ChannelConfig-r17 ::=
    SL-RLC-ChannelID-r17
    SL-RLC-Config-r17
    SL-MAC-LogicalChannelConfig-r17
    SL-PacketDelayBudget-r17
    ...}
    SEQUENCE {
        SL-RLC-ChannelID-r17,
        SL-RLC-Config-r16
        SL-LogicalChannelConfig-r16
        INTEGER (0..1023)
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M
        OPTIONAL, -- Need M

-- TAG-SL-RLC-CHANNEL-CONFIG-STOP
-- ASN1STOP
```

SL-RLC-ChannelConfig field descriptions
sl-MAC-LogicalChannelConfig The field is used to configure MAC SL logical channel parameters.
sl-RLC-ChannelID Indicates the PC5 Relay RLC channel in the link between L2 U2N Relay UE and L2 U2N Remote UE, or between L2 U2U Remote UE and L2 U2U Relay UE.
sl-RLC-Config Determines the RLC mode (UM, AM) and provides corresponding parameters.
sl-PacketDelayBudget Indicates the Packet Delay Budget for a PC5 Relay RLC channel used in L2 U2N relay operation. Upper bound value for the delay that a packet may experience expressed in unit of 0.5ms.

— SL-RLC-ChannelID

The IE *SL-RLC-ChannelID* is used to identify a PC5 Relay RLC channel in the link between L2 U2N Relay UE and L2 U2N Remote UE, or between L2 U2U Relay UE and L2 U2U Remote UE.

SL-RLC-ChannelID information element

```
-- ASN1START
-- TAG-SL-RLC-CHANNELID-START

SL-RLC-ChannelID-r17 ::=  INTEGER (1..maxSL-LCID-r16)

-- TAG-SL-RLC-CHANNELID-STOP
-- ASN1STOP
```

— SL-RLC-Config

The IE *SL-RLC-Config* is used to specify the RLC configuration of sidelink DRB. RLC AM configuration is only applicable to the unicast NR sidelink communication.

SL-RLC-Config information element

```
-- ASN1START
-- TAG-SL-RLC-CONFIG-START

SL-RLC-Config-r16 ::=
  sl-AM-RLC-r16
    sl-SN-FieldLengthAM-r16
    sl-T-PollRetransmit-r16
    sl-PollPDU-r16
    sl-PollByte-r16
    sl-MaxRetxThreshold-r16
  ...
},
sl-UM-RLC-r16
  sl-SN-FieldLengthUM-r16
  CHOICE {
    SEQUENCE {
      SN-FieldLengthAM
      T-PollRetransmit,
      PollPDU,
      PollByte,
      ENUMERATED { t1, t2, t3, t4, t6, t8, t16, t32 },
    }
    SEQUENCE {
      SN-FieldLengthUM
    }
  }
  OPTIONAL, -- Cond SLRBSetup
```



```
    ...
  },
  ...
}

-- TAG-SL-RLC-CONFIG-STOP
-- ASN1STOP
```

SL-RLC-Config field descriptions
sl-MaxRetxThreshold Parameter value of <i>maxRetxThreshold</i> for RLC AM for NR sidelink communications, see TS 38.322 [4]. Value <i>t1</i> corresponds to 1 retransmission, value <i>t2</i> corresponds to 2 retransmissions and so on.
sl-PollByte Parameter value of <i>pollByte</i> for RLC AM for NR sidelink communications, see TS 38.322 [4]. Value <i>kB25</i> corresponds to 25 kBytes, value <i>kB50</i> corresponds to 50 kBytes and so on. <i>infinity</i> corresponds to an infinite amount of kBytes.
sl-PollPDU Parameter value of <i>pollPDU</i> for RLC AM for NR sidelink communications, see TS 38.322 [4]. Value <i>p4</i> corresponds to 4 PDUs, value <i>p8</i> corresponds to 8 PDUs and so on. <i>infinity</i> corresponds to an infinite number of PDUs.
sl-SN-FieldLength This field indicates the RLC SN field size for NR sidelink communication, see TS 38.322 [4]. For groupcast and broadcast, only value <i>size6</i> (6 bits) is configured for the field <i>sl-SN-FieldLengthUM</i> .
sl-T-PollRetransmit Timer value of <i>t-PollRetransmit</i> for RLC AM for NR sidelink communications, see TS 38.322 [4], in milliseconds. Value <i>ms5</i> means 5 ms, value <i>ms10</i> means 10 ms and so on.

Conditional Presence	Explanation
SLRBSetup	The field is mandatory present in case of sidelink DRB setup via the dedicated signalling and in case of sidelink DRB configuration via system information and pre-configuration; otherwise the field is optionally present, need M.

– SL-ScheduledConfig

The IE *SL-ScheduledConfig* specifies sidelink communication/positioning configurations used for network scheduled NR sidelink communication/positioning.

SL-ScheduledConfig information element

```
-- ASN1START
-- TAG-SL-SCHEDULEDCONFIG-START
```

SL-ScheduledConfig-r16 ::=	SEQUENCE {		
sl-RNTI-r16	RNTI-Value,		
mac-MainConfigSL-r16	MAC-MainConfigSL-r16	OPTIONAL,	-- Need M
sl-CS-RNTI-r16	RNTI-Value	OPTIONAL,	-- Need M
sl-PSFCH-ToPUCCH-r16	SEQUENCE (SIZE (1..8)) OF INTEGER (0..15)	OPTIONAL,	-- Need M
sl-ConfiguredGrantConfigList-r16	SL-ConfiguredGrantConfigList-r16	OPTIONAL,	-- Need M
...			
[[			

```

sl-DCI-ToSL-Trans-r16          SEQUENCE (SIZE (1..8)) OF INTEGER (1..32)          OPTIONAL          -- Need M
]],
[[
sl-ConfiguredGrantConfigDedicatedSL-PRS-RP-List-r18 SL-ConfiguredGrantConfigDedicatedSL-PRS-RP-List-r18 OPTIONAL, -- Need M
sl-PRS-RNTI-r18          RNTI-Value          OPTIONAL,          -- Need M
sl-PRS-CS-RNTI-r18       RNTI-Value          OPTIONAL          -- Need M
]]
}

MAC-MainConfigSL-r16 ::=          SEQUENCE {
    sl-BSR-Config-r16          BSR-Config          OPTIONAL,          -- Need M
    ul-PrioritizationThres-r16  INTEGER (1..16)      OPTIONAL,          -- Need M
    sl-PrioritizationThres-r16  INTEGER (1..8)        OPTIONAL,          -- Need M
    ...
}

SL-ConfiguredGrantConfigList-r16 ::=          SEQUENCE {
    sl-ConfiguredGrantConfigToReleaseList-r16 SEQUENCE (SIZE (1..maxNrofCG-SL-r16)) OF SL-ConfigIndexCG-r16 OPTIONAL, -- Need N
    sl-ConfiguredGrantConfigToAddModList-r16  SEQUENCE (SIZE (1..maxNrofCG-SL-r16)) OF SL-ConfiguredGrantConfig-r16 OPTIONAL -- Need N
}

SL-ConfiguredGrantConfigDedicatedSL-PRS-RP-List-r18 ::= SEQUENCE {
    sl-ConfiguredGrantConfigDedicatedSL-PRS-RP-ToReleaseList-r18 SEQUENCE (SIZE (1..maxNrofCG-SL-r16)) OF SL-ConfigIndexCG-r16
                                                                OPTIONAL, -- Need N
    sl-ConfiguredGrantConfigDedicatedSL-PRS-RP-ToAddModList-r18
        SEQUENCE (SIZE (1..maxNrofCG-SL-r16)) OF SL-ConfiguredGrantConfigDedicatedSL-PRS-RP-r18
                                                                OPTIONAL -- Need N
}

-- TAG-SL-SCHEDULEDCONFIG-STOP
-- ASN1STOP

```

***SL-ScheduledConfig* field descriptions**

sl-CS-RNTI

Indicate the RNTI used to scramble CRC of DCI format 3_0, see TS 38.321 [3].

sl-DCI-ToSL-Trans

Indicate the time gap between DCI reception and the first sidelink transmission scheduled by the DCI (see TS 38.214 [19], clause 8.1.2.1). Value 1 included in this field corresponds to 1 slot, value 2 corresponds to 2 slots and so on, based on the numerology of sidelink BWP.

sl-PRS-CS-RNTI

Indicates the RNTI used to scramble CRC of DCI format 3_2 for configured grants.

sl-PRS-RNTI

Indicates the SL-PRS-RNTI used for monitoring the network scheduling to transmit NR sidelink positioning reference signal (i.e. the mode 1) for dynamic grants.

sl-PSFCH-ToPUCCH

For dynamic grant and configured grant type 2, this field configures the values (in number of slot lengths) of the PSFCH to PUCCH gap. The field PSFCH-to-HARQ_feedback timing indicator in DCI format 3_0 selects one of the configured values of the PSFCH to PUCCH gap.

sl-RNTI

Indicate the SL-RNTI used for monitoring the network scheduling to transmit NR sidelink communication (i.e. the mode 1).

MAC-MainConfigSL field descriptions
sl-BSR-Config This field is to configure the sidelink buffer status report.
sl-PrioritizationThres Indicates the SL priority threshold, which is used to determine whether SL TX is prioritized over UL TX, as specified in TS 38.321 [3]. Network does not configure the <i>sl-PrioritizationThres</i> and the <i>ul-PrioritizationThres</i> to the UE separately.
ul-PrioritizationThres Indicates the UL priority threshold, which is used to determine whether SL TX is prioritized over UL TX, as specified in TS 38.321 [3]. Network does not configure the <i>sl-PrioritizationThres</i> and the <i>ul-PrioritizationThres</i> to the UE separately.

— SL-SDAP-Config

The IE *SL-SDAP-Config* is used to set the configurable SDAP parameters for a Sidelink DRB.

SL-SDAP-Config information element

```
-- ASN1START
-- TAG-SL-SDAP-CONFIG-START

SL-SDAP-Config-r16 ::=
    sl-SDAP-Header-r16
    sl-DefaultRB-r16
    sl-MappedQoS-Flows-r16
    sl-MappedQoS-FlowsList-r16
    sl-MappedQoS-FlowsListDedicated-r16
    sl-CastType-r16
    ...
}

SL-MappedQoS-FlowsListDedicated-r16 ::= SEQUENCE {
    sl-MappedQoS-FlowsToAddList-r16 SEQUENCE (SIZE (1..maxNrofSL-QFIs-r16)) OF SL-QoS-FlowIdentity-r16 OPTIONAL, -- Need N
    sl-MappedQoS-FlowsToReleaseList-r16 SEQUENCE (SIZE (1..maxNrofSL-QFIs-r16)) OF SL-QoS-FlowIdentity-r16 OPTIONAL -- Need N
}

-- TAG-SL-SDAP-CONFIG-STOP
-- ASN1STOP
```

SL-SDAP-Config field descriptions
sl-DefaultRB Indicates whether or not this is the default sidelink DRB for this NR sidelink communication transmission destination. Among all configured instances of <i>SL-SDAP-Config</i> for this destination, this field shall be set to <i>true</i> in at most one instance of <i>SL-SDAP-Config</i> and to <i>false</i> in all other instances.
sl-MappedQoS-Flows Indicates QoS flows to be mapped to the sidelink DRB. If the field is included in dedicated signalling, it is set to <i>sl-MappedQoS-FlowsListDedicated</i> ; otherwise, it is set to <i>sl-MappedQoS-FlowsList</i> .
sl-MappedQoS-FlowsList Indicates the list of QoS profiles of the NR sidelink communication transmission destination mapped to this sidelink DRB.
sl-MappedQoS-FlowsToAddList Indicates the list of SL QoS flows ID of the NR sidelink communication transmission destination to be additionally mapped to this sidelink DRB.
sl-MappedQoS-FlowsToReleaseList Indicates the list of SL QoS flows ID of the NR sidelink communication transmission destination to be released from existing QoS flow to SLRB mapping of this sidelink DRB.
sl-SDAP-Header Indicates whether or not a SDAP header is present on this sidelink DRB. The field cannot be changed after a sidelink DRB is established. This field is set to present if the field <i>sl-DefaultRB</i> is set to <i>true</i> .

– SL-ServingCellInfo

The IE *SL-ServingCellInfo* is used to indicate the L2 U2N Relay UE's PCell/camping cell, which is considered as PCell/camping cell by the L2 U2N Remote UEs connecting with this L2 U2N Relay UE.

SL-ServingCellInfo information element

```
-- ASN1START
-- TAG-SL-SERVINGCELLINFO-START

SL-ServingCellInfo-r17 ::= SEQUENCE {
    sl-PhysCellId-r17 PhysCellId,
    sl-CarrierFreqNR-r17 ARFCN-ValueNR
}

-- TAG-SL-SERVINGCELLINFO-STOP
-- ASN1STOP
```

SL-ServingCellInfo field descriptions
sl-CarrierFreqNR Indicates the DL frequency of the cell indicated by <i>sl-PhysCellId</i> .
sl-PhysCellId Indicates the PCI of the PCell.

— *SL-SourceIdentity*

The IE *SL-SourceIdentity* is used to identify a source of a NR sidelink communication.

SL-SourceIdentity information element

```
-- ASN1START
-- TAG-SL-SOURCEIDENTITY-START

SL-SourceIdentity-r17 ::=  BIT STRING (SIZE (24))

-- TAG-SL-SOURCEIDENTITY-STOP
-- ASN1STOP
```

— *SL-SRAP-Config*

The IE *SL-SRAP-Config* is used to set the configurable SRAP parameters used by L2 U2N Relay UE and L2 U2N Remote UE as specified in TS 38.351 [66].

SL-SRAP-Config information element

```
-- ASN1START
-- TAG-SL-SRAP-CONFIG-START

SL-SRAP-Config-r17 ::=
    sl-LocalIdentity-r17
    sl-MappingToAddModList-r17
    sl-MappingToReleaseList-r17
    ...
}

SL-MappingToAddMod-r17 ::=
    sl-RemoteUE-RB-Identity-r17
    sl-EgressRLC-ChannelUu-r17
    sl-EgressRLC-ChannelPC5-r17
    ...
}

SL-RemoteUE-RB-Identity-r17 ::=
    srb-Identity-r17
    drb-Identity-r17
    ...
}

-- TAG-SL-SRAP-CONFIG-STOP
-- ASN1STOP
```

SEQUENCE {
 INTEGER (0..255)
 SEQUENCE (SIZE (1..maxLC-ID)) OF SL-MappingToAddMod-r17
 SEQUENCE (SIZE (1..maxLC-ID)) OF SL-RemoteUE-RB-Identity-r17
 ...
}

SEQUENCE {
 SL-RemoteUE-RB-Identity-r17,
 Uu-RelayRLC-ChannelID-r17
 SL-RLC-ChannelID-r17
 ...
}

CHOICE {
 INTEGER (0..3),
 DRB-Identity,
 ...
}

OPTIONAL, -- Need M
 OPTIONAL, -- Need N
 OPTIONAL, -- Need N
 OPTIONAL, -- Cond L2RelayUE
 OPTIONAL, -- Need N

SL-SRAP-Config field descriptions	
sl-LocalIdentity	Indicates the local UE ID of the L2 U2N Remote UE used in SRAP as specified in TS 38.351 [66].
sl-MappingToAddModList	Indicates the list of mappings between the bearer identity of the L2 U2N Remote UE and the egress RLC channel as specified in TS 38.351 [66] to be added or modified.
sl-MappingToReleaseList	Indicates the list of mappings between the bearer identity of the L2 U2N Remote UE and the egress RLC channel as specified in TS 38.351 [66] to be released.
sl-RemoteUE-RB-Identity	Identity of the end-to-end Uu bearer identity of the L2 U2N Remote UE. The value 3 for the field <i>slrb-identity-r17</i> (i.e., for configuring SRB3) is not supported in this version of the specification.
sl-EgressRLC-ChannelUu	Indicates the egress RLC channel on Uu Hop for uplink transmissions at the L2 U2N Relay UE.
sl-EgressRLC-ChannelPC5	Indicates the egress RLC channel on PC5 Hop for downlink transmissions at the L2 U2N Relay UE and for uplink transmissions at the L2 U2N Remote UE.

Conditional Presence	Explanation
L2RelayUE	For L2 U2N Relay UE, the field is optionally present, Need M. Otherwise, it is absent.

– SL-SRAP-ConfigU2U

The IE *SL-SRAP-ConfigU2U* is used to set the configurable SRAP parameters used by L2 U2U Relay UE and L2 U2U Remote UE as specified in TS 38.351 [66].

SL-SRAP-ConfigU2U information element

```
-- ASN1START
-- TAG-SL-SRAP-CONFIGU2U-START

SL-SRAP-ConfigU2U-r18 ::=
  sl-MappingToAddMod-U2U-List-r18
  sl-MappingToRelease-U2U-List-r18
}

SL-MappingConfig-U2U-r18 ::=
  sl-RemoteUE-SLRB-Identity-r18
  sl-EgressRLC-ChannelPC5-r18
  ...
}

-- TAG-SL-SRAP-CONFIGU2U-STOP
-- ASN1STOP
```

SEQUENCE {
 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-MappingConfig-U2U-r18 OPTIONAL, -- Need N
 SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SLRB-Uu-ConfigIndex-r16 OPTIONAL -- Need N
}

SEQUENCE {
 SLRB-Uu-ConfigIndex-r16,
 SL-RLC-ChannelID-r17,
 ...
}

<i>SL-SRAP-ConfigU2U</i> field descriptions
<i>sl-MappingToAddMod-U2U-List</i> Indicates the list of mappings between the end-to-end sidelink DRB of a given L2 U2U Remote UE and the egress PC5 Relay RLC channel used by L2 U2U Remote UE and L2 U2U Relay UE when acting as Tx UE, as specified in TS 38.351 [66] to be added or modified.
<i>sl-MappingToRelease-U2U-List</i> Indicates the list of mappings between the end-to-end sidelink DRB of a given L2 U2U Remote UE and the egress PC5 Relay RLC channel as specified in TS 38.351 [66] to be released.
<i>sl-EgressRLC-ChannelPC5</i> Indicates the egress PC5 Relay RLC channel for sidelink transmissions at the L2 U2U Relay UE and at the L2 U2U Remote UE.
<i>sl-RemoteUE-SLRB-Identity</i> Identity of the end-to-end sidelink DRB of the L2 U2U Remote UE.

– *SL-SyncConfig*

The IE *SL-SyncConfig* specifies the configuration information concerning reception of synchronisation signals from neighbouring cells as well as concerning the transmission of synchronisation signals for sidelink communication.

SL-SyncConfig information element

```
-- ASN1START
-- TAG-SL-SYNCCONFIG-START

SL-SyncConfigList-r16 ::= SEQUENCE (SIZE (1..maxSL-SyncConfig-r16)) OF SL-SyncConfig-r16

SL-SyncConfig-r16 ::= SEQUENCE {
    sl-SyncRefMinHyst-r16      ENUMERATED {dB0, dB3, dB6, dB9, dB12}      OPTIONAL, -- Need R
    sl-SyncRefDiffHyst-r16    ENUMERATED {dB0, dB3, dB6, dB9, dB12, dBinf} OPTIONAL, -- Need R
    sl-FilterCoefficient-r16  FilterCoefficient                          OPTIONAL, -- Need R
    sl-SSB-TimeAllocation1-r16 SL-SSB-TimeAllocation-r16                OPTIONAL, -- Need R
    sl-SSB-TimeAllocation2-r16 SL-SSB-TimeAllocation-r16                OPTIONAL, -- Need R
    sl-SSB-TimeAllocation3-r16 SL-SSB-TimeAllocation-r16                OPTIONAL, -- Need R
    sl-SSID-r16               INTEGER (0..671)                           OPTIONAL, -- Need R
    txParameters-r16          SEQUENCE {
        syncTxThreshIC-r16      SL-RSRP-Range-r16                      OPTIONAL, -- Need R
        syncTxThresh0oC-r16     SL-RSRP-Range-r16                      OPTIONAL, -- Need R
        syncInfoReserved-r16    BIT STRING (SIZE (2))                  OPTIONAL, -- Need R
    },
    gnss-Sync-r16              ENUMERATED {true}                        OPTIONAL, -- Need R
    ...
}

SL-RSRP-Range-r16 ::= INTEGER (0..13)

SL-SSB-TimeAllocation-r16 ::= SEQUENCE {
    sl-NumSSB-WithinPeriod-r16 ENUMERATED {n1, n2, n4, n8, n16, n32, n64}    OPTIONAL, -- Need R
    sl-TimeOffsetSSB-r16       INTEGER (0..1279)                        OPTIONAL, -- Need R
    sl-TimeInterval-r16        INTEGER (0..639)                         OPTIONAL, -- Need R
}
```

-- TAG-SL-SYNCCONFIG-STOP
 -- ASN1STOP

<i>SL-SyncConfig</i> field descriptions
<i>gnss-Sync</i> If configured, the synchronization configuration is used for SLSS transmission/reception when the UE is synchronized to GNSS. If not configured, the synchronization configuration is used for SLSS transmission/reception when the UE is synchronized to eNB/gNB.
<i>sl-SyncRefMinHyst</i> Hysteresis when evaluating a SyncRef UE using absolute comparison.
<i>sl-SyncRefDiffHyst</i> Hysteresis when evaluating a SyncRef UE using relative comparison.
<i>sl-NumSSB-WithinPeriod</i> Indicates the number of sidelink SSB transmissions within one sidelink SSB period. The applicable values are related to the subcarrier spacing and frequency as follows: FR1, SCS = 15 kHz: 1 FR1, SCS = 30 kHz: 1, 2 FR1, SCS = 60 kHz: 1, 2, 4 FR2, SCS = 60 kHz: 1, 2, 4, 8, 16, 32 FR2, SCS = 120 kHz: 1, 2, 4, 8, 16, 32, 64 All values in <i>sl-NumSSB-WithinPeriod</i> in <i>sl-SSB-TimeAllocation1</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured. All values in <i>sl-NumSSB-WithinPeriod</i> in <i>sl-SSB-TimeAllocation2</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured. All values in <i>sl-NumSSB-WithinPeriod</i> in <i>sl-SSB-TimeAllocation3</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured.
<i>sl-TimeOffsetSSB</i> Indicates the slot offset from the start of sidelink SSB period to the first sidelink SSB. All values in <i>sl-TimeOffsetSSB</i> in <i>sl-SSB-TimeAllocation1</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured. All values in <i>sl-TimeOffsetSSB</i> in <i>sl-SSB-TimeAllocation2</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured. All values in <i>sl-TimeOffsetSSB</i> in <i>sl-SSB-TimeAllocation3</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured.
<i>sl-TimeInterval</i> Indicates the slot interval between neighboring sidelink SSBs. This value is applicable when there are more than one sidelink SSBs within one sidelink SSB period. All values in <i>sl-TimeInterval</i> in <i>sl-SSB-TimeAllocation1</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured. All values in <i>sl-TimeInterval</i> in <i>sl-SSB-TimeAllocation2</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured. All values in <i>sl-TimeInterval</i> in <i>sl-SSB-TimeAllocation3</i> is set to be same across all carrier frequencies configured for UEs performing NR sidelink communication on multiple carrier frequencies, if configured.
<i>sl-SSID</i> Indicates the ID of sidelink synchronization signal associated with different synchronization priorities.
<i>syncInfoReserved</i> Reserved for future use.
<i>syncTxThreshIC</i>, <i>syncTxThreshOoC</i> Indicates the thresholds used while in coverage and out of coverage, respectively. Value 0 corresponds to -infinity, value 1 to -115 dBm, value 2 to -110 dBm, and so on (i.e. in steps of 5 dBm) until value 12, which corresponds to -60 dBm, while value 13 corresponds to +infinity.

— *SL-Thres-RSRP-List*

IE *SL-Thres-RSRP-List* indicates a threshold used for sensing based UE autonomous resource selection (see TS 38.215 [9]). A resource is excluded if it is indicated or reserved by a decoded SCI and PSSCH/PSCCH RSRP in the associated data resource is above the threshold defined by IE *SL-Thres-RSRP-List*. A NR sidelink resource is excluded if the corresponding PSFCH transmission occasions overlap with resources indicated or reserved by the decoded EUTRA SCI in time domain and EUTRA PSSCH RSRP in the associated data resource is above the threshold defined by IE *sl-NRPSFCH-EUTRA-ThresRSRP-List*. A NR sidelink resource is excluded if it is indicated or reserved by the decoded EUTRA SCI and EUTRA PSSCH RSRP in the associated data resource is above the threshold defined by IE *sl-NRPSSCH-EUTRA-ThresRSRP-List*. Value 0 corresponds to minus infinity dBm, value 1 corresponds to -128dBm, value 2 corresponds to -126dBm, value n corresponds to $(-128 + (n-1)*2)$ dBm and so on, value 66 corresponds to infinity dBm.

SL-Thres-RSRP-List information element

```
-- ASN1START
-- TAG-SL-THRES-RSRP-LIST-START

SL-Thres-RSRP-List-r16 ::= SEQUENCE (SIZE (64)) OF SL-Thres-RSRP-r16

SL-Thres-RSRP-r16 ::= INTEGER (0..66)

-- TAG-SL-THRES-RSRP-LIST-STOP
-- ASN1STOP
```

— *SL-TxPower*

The IE *SL-TxPower* is used to limit the UE's sidelink transmission power on a carrier frequency. The unit is dBm. Value minusinfinity corresponds to –infinity.

SL-TxPower information element

```
-- ASN1START
-- TAG-SL-TXPOWER-START

SL-TxPower-r16 ::= CHOICE{
    minusinfinity-r16,
    txPower-r16
}

-- TAG-SL-TXPOWER-STOP
-- ASN1STOP
```

— *SL-TypeTxSync*

The IE *SL-TypeTxSync* indicates the synchronization reference type.

***SL-TypeTxSync* information element**

```
-- ASN1START
-- TAG-SL-TYPETXSYNC-START
```

```
SL-TypeTxSync-r16 ::= ENUMERATED {gnss, gnbEnb, ue}
```

```
-- TAG-SL-TYPETXSYNC-STOP
-- ASN1STOP
```

SL-UE-SelectedConfig

IE *SL-UE-SelectedConfig* specifies sidelink communication/positioning configurations used for UE autonomous resource selection.

***SL-UE-SelectedConfig* information element**

```
-- ASN1START
-- TAG-SL-UE-SELECTEDCONFIG-START
```

```
SL-UE-SelectedConfig-r16 ::= SEQUENCE {
    sl-PSSCH-TxConfigList-r16          SL-PSSCH-TxConfigList-r16          OPTIONAL, -- Cond SIB12
    sl-ProbResourceKeep-r16            ENUMERATED {v0, v0dot2, v0dot4, v0dot6, v0dot8} OPTIONAL, -- Need R
    sl-ReselectAfter-r16               ENUMERATED {n1, n2, n3, n4, n5, n6, n7, n8, n9} OPTIONAL, -- Need R
    sl-CBR-CommonTxConfigList-r16     SL-CBR-CommonTxConfigList-r16     OPTIONAL, -- Need R
    ul-PrioritizationThres-r16         INTEGER (1..16)                   OPTIONAL, -- Need R
    sl-PrioritizationThres-r16         INTEGER (1..8)                    OPTIONAL, -- Need R
    ...,
    [[
        sl-CBR-CommonTxDedicatedSL-PRS-RP-List-r18 SL-CBR-CommonTxDedicatedSL-PRS-RP-List-r18 OPTIONAL -- Cond notSIB12
    ]]
}
```

```
-- TAG-SL-UE-SELECTEDCONFIG-STOP
-- ASN1STOP
```

SL-UE-SelectedConfig field descriptions
sl-PrioritizationThres Indicates the SL priority threshold, which is used to determine whether SL TX is prioritized over UL TX, as specified in TS 38.321 [3]. Network does not configure the <i>sl-PrioritizationThres</i> and the <i>ul-PrioritizationThres</i> to the UE separately.
sl-ProbResourceKeep Indicates the probability with which the UE keeps the current resource when the resource reselection counter reaches zero for sensing based UE autonomous resource selection (see TS 38.321 [3]).
sl-PSSCH-TxConfigList Indicates PSSCH TX parameters such as MCS, sub-channel number, retransmission number, associated to different UE absolute speeds and different synchronization reference types for UE autonomous resource selection.
sl-ReselectAfter Indicates the number of consecutive skipped transmissions before triggering resource reselection for sidelink communication (see TS 38.321 [3]).
ul-PrioritizationThres Indicates the UL priority threshold, which is used to determine whether SL TX is prioritized over UL TX, as specified in TS 38.321 [3]. Network does not configure the <i>sl-PrioritizationThres</i> and the <i>ul-PrioritizationThres</i> to the UE separately.

Conditional Presence	Explanation
SIB12	This field is optional present if included within SIB12, need R. Otherwise, the field is absent.
notSIB12	The field is absent in SIB12. Otherwise, it is optional present, Need R

– SL-ZoneConfig

The IE *SL-ZoneConfig* is used to configure the zone ID related parameters.

SL-ZoneConfig information element

```
-- ASN1START
-- TAG-SL-ZONECONFIG-START

SL-ZoneConfig-r16 ::=
    sl-ZoneLength-r16
    ...
}

-- TAG-SL-ZONECONFIG-STOP
-- ASN1STOP
```

SEQUENCE {
ENUMERATED { m5, m10, m20, m30, m40, m50, spare2, spare1},

SL-ZoneConfig field descriptions
sl-ZoneLength Indicates the length of each geographic zone.

— *SLRB-Uu-ConfigIndex*

The IE *SLRB-Uu-ConfigIndex* is used to identify a sidelink DRB configuration from the network side, or to indicate an end-to-end sidelink DRB by L2 U2U Relay UE in *SidelinkUEInformation* message.

***SLRB-Uu-ConfigIndex* information element**

```
-- ASN1START
-- TAG-SLRB-UU-CONFIGINDEX-START

SLRB-Uu-ConfigIndex-r16 ::=                INTEGER (1..maxNrofSLRB-r16)

-- TAG-SLRB-UU-CONFIGINDEX-STOP
-- ASN1STOP
```

6.3.6 MBS information elements

— *CarrierFreqListMBS*

The IE *CarrierFreqListMBS* is used to inform network of the frequencies on which the UE is receiving or interested to receive MBS broadcast service via a broadcast MRB.

***CarrierFreqListMBS* information element**

```
-- ASN1START
-- TAG-CARRIERFREQLISTMBS-START

CarrierFreqListMBS-r17 ::=                SEQUENCE (SIZE (1..maxFreqMBS-r17)) OF ARFCN-ValueNR

-- TAG-CARRIERFREQLISTMBS-STOP
-- ASN1STOP
```

— *CFR-ConfigMCCH-MTCH*

The IE *CFR-ConfigMCCH-MTCH* is used to configure the common frequency resource used for MCCH, multicast MCCH and MTCH reception.

***CFR-ConfigMCCH-MTCH* information element**

```
-- ASN1START
-- TAG-CFR-CONFIGMCCH-MTCH-START

CFR-ConfigMCCH-MTCH-r17 ::= SEQUENCE {
    locationAndBandwidthBroadcast-r17      LocationAndBandwidthBroadcast-r17  OPTIONAL, -- Need S
    pdsch-ConfigMCCH-r17                  PDSCH-ConfigBroadcast-r17     OPTIONAL, -- Need S
    commonControlResourceSetExt-r17       ControlResourceSet             OPTIONAL, -- Cond NotSIB1CommonControlResource
}
```

```
LocationAndBandwidthBroadcast-r17 ::= CHOICE {
    sameAsSib1ConfiguredLocationAndBW    NULL,
    locationAndBandwidth                  INTEGER (0..37949)
}

-- TAG-CFR-CONFIGMCCH-MTCH-STOP
-- ASN1STOP
```

CFR-ConfigMCCH-MTCH field descriptions
commonControlResourceSetExt An additional common control resource set which may be configured and used for <i>searchSpaceMCCH</i> / <i>searchSpaceMTCH</i> or UE-specific search space in the BWP where <i>searchSpaceMCCH</i> is configured. It is contained in the bandwidth of the CFR for broadcast and larger than CORESET#0.
locationAndBandwidthBroadcast Indicates starting PRB and the number of PRBs of CFR used for MCCH, multicast MCCH and MTCH reception. Value <i>sameAsSib1ConfiguredLocationAndBW</i> means the CFR for broadcast or multicast has the same location and size as the <i>locationAndBandwidth</i> for initial BWP (for (e)RedCap UEs: <i>initialDownlinkBWP-RedCap</i> if it is configured and includes CD-SSB and the entire CORESET#0) configured in <i>SIB1</i> . Value <i>locationAndBandwidth</i> is used to configure CFR with bandwidth that is larger than and fully contains the bandwidth for the initial DL BWP (for (e)RedCap UEs: <i>initialDownlinkBWP-RedCap</i> if it is configured and includes CD-SSB and the entire CORESET#0) configured in <i>SIB1</i> and CORESET#0. The value of the field shall be interpreted as defined in TS 38.214 [19] with assumptions as described in TS 38.213 [13]. This field is not included in <i>cfr-ConfigMCCH-MTCH-RedCap</i> if <i>initialDownlinkBWP-RedCap</i> in <i>SIB1</i> is configured but does not include CD-SSB and the entire CORESET#0. If the field is absent, the CFR for broadcast or multicast has the same location and size as CORESET#0.
pdsch-ConfigMCCH Indicates PDSCH parameters used for MCCH or multicast MCCH transmission. If the field is absent, PDSCH parameters used for MCCH or multicast MCCH are the same as those of PDSCH configuration provided in <i>initialDownlinkBWP</i> in <i>SIB1</i> .

Conditional Presence	Explanation
<i>NotSIB1CommonControlResource</i>	The field is optional present in case <i>commonControlResourceSet</i> is not configured in <i>SIB1</i> , Need R, otherwise it is absent.

– DRX-ConfigPTM

The IE *DRX-ConfigPTM* is used to configure DRX related parameters for PTM transmission as specified in TS 38.321 [3].

DRX-ConfigPTM information element

```
-- ASN1START
-- TAG-DRX-CONFIGPTM-START

DRX-ConfigPTM-r17 ::= SEQUENCE {
    drx-onDurationTimerPTM-r17 CHOICE {
        subMilliseconds INTEGER (1..31),
        milliseconds     ENUMERATED {
            ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
            ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
            ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1
        }
    }
}
```

```

    }
  },
  drx-InactivityTimerPTM-r17      ENUMERATED {
    ms0, ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60, ms80,
    ms100, ms200, ms300, ms500, ms750, ms1280, ms1920, ms2560, spare9, spare8,
    spare7, spare6, spare5, spare4, spare3, spare2, spare1
  },
  drx-HARQ-RTT-TimerDL-PTM-r17    INTEGER (0..56)                                OPTIONAL, -- Cond HARQFeedback
  drx-RetransmissionTimerDL-PTM-r17 ENUMERATED {
    sl0, sl1, sl2, sl4, sl6, sl8, sl16, sl24, sl33, sl40, sl64, sl80, sl96, sl112, sl128,
    sl160, sl320, spare15, spare14, spare13, spare12, spare11, spare10, spare9,
    spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1
  }
}
drx-LongCycleStartOffsetPTM-r17 CHOICE {
  ms10      INTEGER(0..9),
  ms20      INTEGER(0..19),
  ms32      INTEGER(0..31),
  ms40      INTEGER(0..39),
  ms60      INTEGER(0..59),
  ms64      INTEGER(0..63),
  ms70      INTEGER(0..69),
  ms80      INTEGER(0..79),
  ms128     INTEGER(0..127),
  ms160     INTEGER(0..159),
  ms256     INTEGER(0..255),
  ms320     INTEGER(0..319),
  ms512     INTEGER(0..511),
  ms640     INTEGER(0..639),
  ms1024    INTEGER(0..1023),
  ms1280    INTEGER(0..1279),
  ms2048    INTEGER(0..2047),
  ms2560    INTEGER(0..2559),
  ms5120    INTEGER(0..5119),
  ms10240   INTEGER(0..10239)
},
drx-SlotOffsetPTM-r17            INTEGER (0..31)
}

-- TAG-DRX-CONFIGPTM-STOP
-- ASN1STOP

```

DRX-ConfigPTM field descriptions
drx-HARQ-RTT-TimerDL-PTM Value in number of symbols of the CFR where the transport block was received.
drx-InactivityTimerPTM Value in multiple integers of 1 ms. <i>ms0</i> corresponds to 0, <i>ms1</i> corresponds to 1 ms, <i>ms2</i> corresponds to 2 ms, and so on.
drx-LongCycleStartOffsetPTM <i>drx-LongCycle-PTM</i> in ms and <i>drx-StartOffset-PTM</i> in multiples of 1 ms.
drx-onDurationTimerPTM Value in multiples of 1/32 ms (subMilliSeconds) or in ms (milliSecond). For the latter, value <i>ms1</i> corresponds to 1 ms, value <i>ms2</i> corresponds to 2 ms, and so on.
drx-RetransmissionTimerDL-PTM Value in number of slot lengths of the CFR where the transport block was received. value <i>s/0</i> corresponds to 0 slots, <i>s/1</i> corresponds to 1 slot, <i>s/2</i> corresponds to 2 slots, and so on.
drx-SlotOffsetPTM Value in 1/32 ms. Value 0 corresponds to 0 ms, value 1 corresponds to 1/32 ms, value 2 corresponds to 2/32 ms, and so on.

Conditional Presence	Explanation
<i>HARQFeedback</i>	The field is mandatory present if HARQ feedback is enabled for a G-RNTI/G-CS-RNTI associated with this DRX configuration. It is optionally present. Need R, otherwise.

– *MBS-NeighbourCellList*

The IE *MBS-NeighbourCellList* indicates a list of neighbour cells where ongoing MBS sessions provided via broadcast/multicast MRB in the current cell may also be provided, as indicated in the *mtch-NeighbourCell*.

MBS-NeighbourCellList information element

```
-- ASN1START
-- TAG-MBS-NEIGHBOURCELLLIST-START

MBS-NeighbourCellList-r17 ::= SEQUENCE (SIZE (0..maxNeighCellMBS-r17)) OF MBS-NeighbourCell-r17

MBS-NeighbourCell-r17 ::= SEQUENCE {
    physCellId-r17          PhysCellId,
    carrierFreq-r17         ARFCN-ValueNR
}

-- TAG-MBS-NEIGHBOURCELLLIST-STOP
-- ASN1STOP
```

MBS-NeighbourCellList field descriptions
carrierFreq Indicates the frequency of the neighbour cell indicated by <i>physCellId</i> . Absence of the IE means that the neighbour cell is on the same frequency as the current cell.

— *MBS-NonServingInfoList*

The IE *MBS-NonServingInfoList* is used to inform network of the frequencies, CFR information and subcarrier spacing for MBS broadcast reception on the non-serving cell.

***MBS-NonServingInfoList* information element**

```
-- ASN1START
-- TAG-MBS-NSERVINGINFOLIST-START

MBS-NonServingInfoList-r18 ::= SEQUENCE (SIZE (1..maxFreqMBS-r17)) OF NonServingInfo-r18

NonServingInfo-r18 ::= SEQUENCE {
    freqInfoMBS-r18          FreqInfoMBS-r18                                OPTIONAL,
    cfr-InfoMBS-r18          CHOICE {
        cfr-Bandwidth-r18    INTEGER (1..maxNrofPhysicalResourceBlocks),
        cfr-LocationAndBW-r18 CFR-LocationAndBW-r18
    }                                OPTIONAL,
    subcarrierSpacing-r18    SubcarrierSpacing                            OPTIONAL
}

FreqInfoMBS-r18 ::= SEQUENCE {
    carrierFreqMBS-r18       ARFCN-ValueNR,
    freqBandIndicatorMBS-r18 FreqBandIndicatorNR
}

CFR-LocationAndBW-r18 ::= SEQUENCE {
    locationAndBandwidthMBS-r18 INTEGER (0..37949)                                OPTIONAL,
    absoluteFrequencyPointA-MBS-r18 ARFCN-ValueNR                                OPTIONAL,
    offsetToCarrierMBS-r18          INTEGER (0..2199)                            OPTIONAL
}

-- TAG-MBS-NSERVINGINFOLIST-STOP
-- ASN1STOP
```

MBS-NonServingInfoList field descriptions
freqInfoMBS Indicates MBS frequency of interest and the frequency band of the non-serving cell for MBS broadcast reception as specified in clause 5.9.4.3.
cfr-infoMBS Indicates the CFR information of the non-serving cell for MBS broadcast reception. It is up to UE implementation to choose <i>cfr-Bandwidth</i> or <i>cfr-LocationAndBW</i> as the reported CFR information.
cfr-Bandwidth Indicates the CFR bandwidth of the non-serving cell for MBS broadcast reception.
cfr-LocationAndBW Indicates the CFR location and bandwidth of the non-serving cell for MBS broadcast reception.
subcarrierSpacing Indicates the subcarrier spacing of the CORESET#0 of the non-serving cell for MBS broadcast reception.

CFR-LocationAndBW field descriptions
locationAndBandwidthMBS Indicates the starting PRB and the number of PRBs of CFR used for MBS broadcast reception from non-serving cell. The value of the field shall be interpreted as resource indicator value (RIV) as defined in TS 38.214 [19] with assumptions as described in TS 38.213 [13]. The first PRB is a PRB determined by <i>subcarrierSpacing</i> , <i>offsetToCarrierMBS</i> and <i>absoluteFrequencyPointA-MBS</i> of the non-serving cell.
absoluteFrequencyPointA-MBS Indicates the absolute frequency position of the reference resource block (common RB 0) of the non-serving cell for MBS broadcast reception. Its lowest subcarrier is also known as Point A (see TS 38.211 [16], clause 4.4.4.2).
offsetToCarrierMBS Indicates the offset in frequency domain between Point A (lowest subcarrier of common RB 0) and the lowest usable subcarrier on this carrier in number of PRBs (using the <i>subcarrierSpacing</i> indicated for the non-serving cell).

— *MBS-ServiceList*

The IE *MBS-ServiceList* is used to inform the network of the MBS services that the UE is receiving or interested to receive.

MBS-ServiceList information element

```
-- ASN1START
-- TAG-MBS-SERVICELIST-START

MBS-ServiceList-r17 ::=          SEQUENCE (SIZE (1..maxNrofMBS-ServiceListPerUE-r17)) OF MBS-ServiceInfo-r17

MBS-ServiceInfo-r17 ::=          SEQUENCE {
    tmgi-r17                      TMGI-r17
}

-- TAG-MBS-SERVICELIST-STOP
-- ASN1STOP
```

— *MBS-SessionInfoList*

The IE *MBS-SessionInfoList* provides the list of ongoing MBS broadcast sessions transmitted via broadcast MRB and, for each MBS broadcast session, the associated G-RNTI and scheduling information.

MBS-SessionInfoList information element

```
-- ASN1START
-- TAG-MBS-SESSIONINFOLIST-START

MBS-SessionInfoList-r17 ::=      SEQUENCE (SIZE (1..maxNrofMBS-Session-r17)) OF MBS-SessionInfo-r17

MBS-SessionInfo-r17 ::=          SEQUENCE {
    mbs-SessionId-r17             TMGI-r17,
    g-RNTI-r17                    RNTI-Value,
    mrb-ListBroadcast-r17         MRB-ListBroadcast-r17,
```

```

    mtch-SchedulingInfo-r17          DRX-ConfigPTM-Index-r17          OPTIONAL, -- Need S
    mtch-NeighbourCell-r17          BIT STRING (SIZE(maxNeighCellMBS-r17)) OPTIONAL, -- Need S
    pdsch-ConfigIndex-r17          PDSCH-ConfigIndex-r17          OPTIONAL, -- Need S
    mtch-SSB-MappingWindowIndex-r17 MTCH-SSB-MappingWindowIndex-r17 OPTIONAL -- Cond MTCH-Mapping
}

DRX-ConfigPTM-Index-r17 ::= INTEGER (0..maxNrofDRX-ConfigPTM-1-r17)

PDSCH-ConfigIndex-r17 ::= INTEGER (0..maxNrofPDSCH-ConfigPTM-1-r17)

MTCH-SSB-MappingWindowIndex-r17 ::= INTEGER (0..maxNrofMTCH-SSB-MappingWindow-1-r17)

MRB-ListBroadcast-r17 ::= SEQUENCE (SIZE (1..maxNrofMRB-Broadcast-r17)) OF MRB-InfoBroadcast-r17

MRB-InfoBroadcast-r17 ::= SEQUENCE {
    pdcp-Config-r17          MRB-PDCP-ConfigBroadcast-r17,
    rlc-Config-r17          MRB-RLC-ConfigBroadcast-r17,
    ...
}

MRB-PDCP-ConfigBroadcast-r17 ::= SEQUENCE {
    pdcp-SN-SizeDL-r17      ENUMERATED {len12bits}          OPTIONAL, -- Need S
    headerCompression-r17  CHOICE {
        notUsed,
        rohc,
        maxCID-r17          INTEGER (1..16)          DEFAULT 15,
        profiles-r17        SEQUENCE {
            profile0x0000-r17 BOOLEAN,
            profile0x0001-r17 BOOLEAN,
            profile0x0002-r17 BOOLEAN
        }
    },
    t-Reordering-r17        ENUMERATED {ms1, ms10, ms40, ms160, ms500, ms1000, ms1250, ms2750} OPTIONAL -- Need S
}

MRB-RLC-ConfigBroadcast-r17 ::= SEQUENCE {
    logicalChannelIdentity-r17 LogicalChannelIdentity,
    sn-FieldLength-r17        ENUMERATED {size6}          OPTIONAL, -- Need S
    t-Reassembly-r17          T-Reassembly                OPTIONAL, -- Need S
}

-- TAG-MBS-SESSIONINFOLIST-STOP
-- ASN1STOP

```

MBS-SessionInfoList field descriptions	
g-RNTI	G-RNTI used to scramble the scheduling and transmission of MTCH.
headerCompression	If <i>rohc</i> is configured, the UE shall apply the configured ROHC profile(s) in downlink.
mbs-SessionId	Indicates an identifier of the MBS session provided by the MTCH.
mrbs-listBroadcast	A list of broadcast MRBs to which the associated broadcast MBS session is mapped to.
mtch-neighbourCell	Indicates neighbour cells which provide this service on MTCH. The first bit is set to 1 if the service is provided on MTCH in the first cell in <i>mbs-NeighbourCellList</i> , otherwise it is set to 0. The second bit is set to 1 if the service is provided on MTCH in the second cell in <i>mbs-NeighbourCellList</i> , and so on. If the service is not available in any neighbouring cell and <i>mbs-NeighbourCellList</i> is signalled, the network sets all bits in this field to 0. The field is absent when <i>mbs-NeighbourCellList</i> is absent or an empty <i>mbs-NeighbourCellList</i> is signalled. If this field is absent when <i>mbs-NeighbourCellList</i> is absent or a non-empty <i>mbs-NeighbourCellList</i> is signalled, the related service may or may not be available in any neighbouring cell, i.e. the UE cannot determine the presence or absence of an MBS service in neighbouring cells based on the absence of this field. If this field is absent and an empty <i>mbs-NeighbourCellList</i> is signalled, then the UE shall assume that MBS broadcast services signalled in <i>mbs-SessionInfoList</i> in the <i>MBSBroadcastConfiguration</i> message are not provided in any neighbour cell.
mtch-schedulingInfo	Indicates the index of DRX configuration entry in <i>drx-ConfigPTM-List</i> that is used for scheduling the MTCH. The value 0 corresponds to the first entry in <i>drx-ConfigPTM-List</i> , the value 1 corresponds to the second entry in <i>drx-ConfigPTM-List</i> and so on. In case <i>mtch-schedulingInfo</i> is absent for a G-RNTI (i.e. no PTM DRX), the UE shall monitor for PDCCH scrambled with G-RNTI in any slot according to the search space configured for MTCH [see TS 38.213 [13], clause 10.1].
mtch-SSB-MappingWindowIndex	Indicates the index of <i>MTCH-SSB-MappingWindowCycleOffset</i> configuration entry in <i>MTCH-SSB-MappingWindowList</i> . The value 0 corresponds to the first entry in <i>MTCH-SSB-MappingWindowList</i> , the value 1 corresponds to the second entry in <i>MTCH-SSB-MappingWindowList</i> and so on. This field is set to the same value for all MBS sessions mapped to the same G-RNTI.
pdcp-SN-SizeDL	Indicates that PDCP sequence number size of 12 bits is used, as specified in TS 38.323 [5]. When the field is absent the UE applies the value as specified in 9.1.1.7.
pdschConfigIndex	Indicates the index of PDSCH configuration entry in <i>pdschConfigList</i> for MTCH. Value 0 corresponds to the first entry in <i>pdschConfigList</i> , the value 1 corresponds to the second entry in <i>pdschConfigList</i> and so on. When the field is absent the UE applies the first entry in <i>pdschConfigList</i> for MTCH.
sn-FieldLength	Indicates that the RLC SN field size of 6 bits is used, see TS 38.322 [4]. When the field is absent the UE applies the value as specified in 9.1.1.7.
t-Reassembly	Timer for reassembly in TS 38.322 [4], in milliseconds. Value ms0 means 0 ms, value ms5 means 5 ms and so on. When the field is absent the UE applies the value in specified in 9.1.1.7.
t-Reordering	Value in ms of t-Reordering specified in TS 38.323 [5]. Value ms1 corresponds to 1 ms, value ms10 corresponds to 10 ms, and so on. When the field is absent the UE applies the value as specified in 9.1.1.7.

Conditional Presence	Explanation
<i>MTCH-Mapping</i>	The field is mandatory present if the number of actual transmitted SSBs determined according to <i>ssb-PositionsInBurst</i> in SIB1 is more than 1, and <i>searchspaceMTCH</i> is not set to zero (including the case where <i>searchSpaceMTCH</i> is absent and <i>searchSpaceMCCH</i> is not set to zero). Otherwise, it is absent, Need R.

– *MBS-SessionInfoListMulticast*

The IE *MBS-SessionInfoListMulticast* provides a list of MBS multicast sessions transmitted via multicast MRB for RRC_INACTIVE UEs and, for each MBS multicast session, the associated G-RNTI and scheduling information.

MBS-SessionInfoListMulticast information element

```
-- ASN1START
-- TAG-MBS-SESSIONINFOLISTMULTICAST-START

MBS-SessionInfoListMulticast-r18 ::= SEQUENCE (SIZE (1..maxNrofMBS-Session-r17)) OF MBS-SessionInfoMulticast-r18

MBS-SessionInfoMulticast-r18 ::= SEQUENCE {
    mbs-SessionId-r18          TMGI-r17,
    g-RNTI-r18                 RNTI-Value OPTIONAL, -- Need R
    mrb-ListMulticast-r18      MRB-ListMulticast-r18 OPTIONAL, -- Need R
    mtch-SchedulingInfo-r18    DRX-ConfigPTM-Index-r17 OPTIONAL, -- Need S
    mtch-NeighbourCell-r18     BIT STRING (SIZE(maxNeighCellMBS-r17)) OPTIONAL, -- Need S
    pdsch-ConfigIndex-r18      PDSCH-ConfigIndex-r17 OPTIONAL, -- Need S
    mtch-SSB-MappingWindowIndex-r18 MTCH-SSB-MappingWindowIndex-r17 OPTIONAL, -- Cond MTCH-Mapping
    thresholdIndex-r18         INTEGER (0..maxNrofThresholdMBS-1-r18) OPTIONAL, -- Need R
    pdcp-SyncIndicator-r18     ENUMERATED {true} OPTIONAL, -- Cond RRCRelease
    stopMonitoringRNTI-r18     ENUMERATED {true} OPTIONAL, -- Cond G-RNTI
    ...
}

MRB-ListMulticast-r18 ::= SEQUENCE (SIZE (1.. maxMRB-r17)) OF MRB-InfoMulticast-r18

MRB-InfoMulticast-r18 ::= SEQUENCE {
    pdcp-Config-r18      MRB-PDCP-ConfigMulticast-r18,
    rlc-Config-r18        MRB-RLC-ConfigMulticast-r18,
    ...
}

MRB-PDCP-ConfigMulticast-r18 ::= SEQUENCE {
    pdcp-SN-SizeDL-r18     ENUMERATED {len12bits, len18bits},
    headerCompression-r18 CHOICE {
        notUsed            NULL,
        rohc                SEQUENCE {
            maxCID-r18      INTEGER (1..16) DEFAULT 15,
            profiles-r18    SEQUENCE {
                profile0x0000-r18 BOOLEAN,
                profile0x0001-r18 BOOLEAN,
                profile0x0002-r18 BOOLEAN
            }
        }
    },
    t-Reordering-r17       ENUMERATED {ms1, ms10, ms40, ms160, ms500, ms1000, ms1250, ms2750} OPTIONAL -- Need R
}

MRB-RLC-ConfigMulticast-r18 ::= SEQUENCE {
    logicalChannelIdentity-r18 CHOICE {
```

```

    logicalChannelIdentitymulticast-r18 LogicalChannelIdentity,
    logicalChannelIdentityExt-r18      LogicalChannelIdentityExt-r17
  },
  sn-FieldLength-r18                  ENUMERATED {size6, size12},
  t-Reassembly-r18                    T-Reassembly
}
-- TAG-MBS-SESSIONINFOLISTMULTICAST-STOP
-- ASN1STOP
```

OPTIONAL -- Need R

MBS-SessionInfoListMulticast field descriptions
g-RNTI G-RNTI used to scramble the scheduling and transmission of multicast MTCH.
mbs-SessionId Indicates an identifier of the MBS session to be received by the UE in RRC_INACTIVE.
mrbs-ListMulticast A list of multicast MRBs to which the associated MBS multicast session is mapped to.
mtch-NeighbourCell Indicates neighbour cells which provide this service on MTCH for RRC_INACTIVE. The first bit is set to 1 if the service is provided on MTCH in the first cell in <i>mbs-NeighbourCellList</i> , otherwise it is set to 0. The second bit is set to 1 if the service is provided on MTCH in the second cell in <i>mbs-NeighbourCellList</i> , and so on. If the service is not available in any neighbouring cell and <i>mbs-NeighbourCellList</i> is signalled, the network sets all bits in this field to 0. The field is absent when <i>mbs-NeighbourCellList</i> is absent or an empty <i>mbs-NeighbourCellList</i> is signalled. If this field is absent when <i>mbs-NeighbourCellList</i> is absent or a non-empty <i>mbs-NeighbourCellList</i> is signalled, the related service may or may not be available in any neighbouring cell, i.e. the UE cannot determine the presence or absence of an MBS service in neighbouring cells based on the absence of this field. If this field is absent and an empty <i>mbs-NeighbourCellList</i> is signalled, then the UE shall assume that MBS multicast services signalled in <i>mbs-SessionInfoListMulticast</i> in the <i>MBSMulticastConfiguration</i> message are not provided in any neighbour cell.
mtch-SchedulingInfo Indicates the index of DRX configuration entry in <i>drx-ConfigPTM-List</i> that is used for scheduling the MTCH. The value 0 corresponds to the first entry in <i>drx-ConfigPTM-List</i> , the value 1 corresponds to the second entry in <i>drx-ConfigPTM-List</i> and so on. In case <i>mtch-schedulingInfo</i> is absent for a G-RNTI (i.e. no PTM DRX), the UE shall monitor for PDCCH scrambled with G-RNTI in any slot according to the search space configured for MTCH.
mtch-SSB-MappingWindowIndex Indicates the index of <i>MTCH-SSB-MappingWindowCycleOffset</i> configuration entry in <i>MTCH-SSB-MappingWindowList</i> . The value 0 corresponds to the first entry in <i>MTCH-SSB-MappingWindowList</i> , the value 1 corresponds to the second entry in <i>MTCH-SSB-MappingWindowList</i> and so on. This field is set to the same value for all MBS sessions mapped to the same G-RNTI.
pdcps-SN-SizeDL Indicates PDCP sequence number size of 12 or 18 bits, as specified in TS 38.323 [5].
pdsch-ConfigIndex Indicates the index of PDSCH configuration entry in <i>pdsch-ConfigList</i> for MTCH. Value 0 corresponds to the first entry in <i>pdsch-ConfigList</i> , the value 1 corresponds to the second entry in <i>pdsch-ConfigList</i> and so on. When the field is absent the UE applies the first entry in <i>pdsch-ConfigList</i> for MTCH.
pdcps-SyncIndicator Indicates the PDCP COUNT of the corresponding multicast session is synchronized in the RNA, i.e. the cells in the RNA follow a common QoS flow to MRB mapping rule and at the same time PDCP COUNT is set according to the MBS QoS Flow SN.
sn-FieldLength Indicates RLC SN field size of 6 or 12 bits, as specified in TS 38.322 [4].
stopMonitoringRNTI Indicates the UE to stop monitoring the G-RNTI for the corresponding multicast session.
t-Reassembly Timer for reassembly in TS 38.322 [4], in milliseconds. Value ms0 means 0 ms, value ms5 means 5 ms and so on.
t-Reordering Value in ms of <i>t-Reordering</i> specified in TS 38.323 [5]. Value ms1 corresponds to 1 ms, value ms10 corresponds to 10 ms, and so on.
thresholdIndex Indicates the index of <i>thresholdMBS</i> entry in <i>thresholdMBS-List</i> that is used for RRC connection resume for a UE receiving the corresponding multicast session in RRC_INACTIVE. Value 0 corresponds to the first entry in <i>thresholdMBS-List</i> , the value 1 corresponds to the second entry in <i>thresholdMBS-List</i> and so on.

Conditional Presence	Explanation
<i>G-RNTI</i>	The field is optionally present, Need R, if <i>g-RNTI</i> is included. Otherwise, it is absent.
<i>MTCH-Mapping</i>	The field is mandatory present if the number of actual transmitted SSBs determined according to <i>ssb-PositionsInBurst</i> in <i>SIB1</i> is more than 1, and <i>searchSpaceMulticastMTCH</i> is not set to zero (including the case where <i>searchSpaceMulticastMTCH</i> is absent and <i>searchSpaceMulticastMCCH</i> is not set to zero). Otherwise, it is absent, Need R.
<i>RRCRelease</i>	The field is optionally present, Need R, if <i>mbs-SessionInfoListMulticast</i> is included in <i>RRCRelease</i> message. Otherwise, it is absent.

– *MTCH-SSB-MappingWindowList*

The IE *MTCH-SSB-MappingWindowList* is used to configure MTCH PDCCH occasions to SSB mapping window related periodic and offset parameters.

MTCH-SSB-MappingWindowList information element

```
-- ASN1START
-- TAG-MTCH-SSB-MAPPINGWINDOWLIST-START

MTCH-SSB-MappingWindowList-r17 ::= SEQUENCE (SIZE (1..maxNrofMTCH-SSB-MappingWindow-r17)) OF MTCH-SSB-MappingWindowCycleOffset-r17

MTCH-SSB-MappingWindowCycleOffset-r17 ::= CHOICE {
    ms10          INTEGER(0..9),
    ms20          INTEGER(0..19),
    ms32          INTEGER(0..31),
    ms64          INTEGER(0..63),
    ms128         INTEGER(0..127),
    ms256         INTEGER(0..255)
}

-- TAG-MTCH-SSB-MAPPINGWINDOWLIST-STOP
-- ASN1STOP
```

<i>MTCH-SSB-MappingWindowList</i> field descriptions
<i>MTCH-SSB-MappingWindowCycleOffset</i> Indicates the <i>cycle</i> and <i>offset</i> for MTCH PDCCH occasions to SSB mapping. Values in unit of ms. <i>ms10</i> corresponds to cycle of 10 ms with corresponding offset between 0 and 9 ms, value <i>ms20</i> corresponds to cycle of 20 ms with corresponding offset between 0 and 19 ms, and so on. The mapping window starts at a subframe in a SFN where $[(\text{SFN number} \times 10) + \text{subframe number}] \bmod (\text{cycle}) = \text{offset}$. PDCCH monitoring occasions for MTCH in a mapping window which are not overlapping with UL symbols (determined according to <i>tdd-UL-DL-ConfigurationCommon</i>) are sequentially numbered starting from 1 in the maping window. The $[x \times N + K]^{\text{th}}$ PDCCH monitoring occasion for MTCH in this mapping window corresponds to the K^{th} transmitted SSB, where $x = 0, 1, \dots, X-1$, $K = 1, 2, \dots, N$, N is the number of actual transmitted SSBs determined according to <i>ssb-PositionsInBurst</i> in <i>SIB1</i> and X is equal to $\text{CEIL}(\text{number of PDCCH monitoring occasions in MTCH to SSB mapping transmission window} / N)$. The actual transmitted SSBs are sequentially numbered from one in ascending order of their SSB indexes.

– PDSCH-ConfigBroadcast

The IE *PDSCH-ConfigBroadcast* is used to configure parameters for acquiring the PDSCH for MCCH, multicast MCCH and MTCH.

PDSCH-ConfigBroadcast information element

```
-- ASN1START
-- TAG-PDSCH-CONFIGBROADCAST-START

PDSCH-ConfigBroadcast-r17 ::= SEQUENCE {
    pdschConfigList-r17          SEQUENCE (SIZE (1..maxNrofPDSCH-ConfigPTM-r17) ) OF PDSCH-ConfigPTM-r17,
    pdsch-TimeDomainAllocationList-r17 PDSCH-TimeDomainResourceAllocationList-r16 OPTIONAL, -- Need R
    rateMatchPatternToAddModList-r17 SEQUENCE (SIZE (1..maxNrofRateMatchPatterns)) OF RateMatchPattern OPTIONAL, -- Need R
    lte-CRS-ToMatchAround-r17      RateMatchPatternLTE-CRS OPTIONAL, -- Need R
    mcs-Table-r17                  ENUMERATED {qam256, qam64LowSE} OPTIONAL, -- Need S
    xOverhead-r17                  ENUMERATED {x0h6, x0h12, x0h18} OPTIONAL, -- Need S
}

PDSCH-ConfigPTM-r17 ::= SEQUENCE {
    dataScramblingIdentityPDSCH-r17 INTEGER (0..1023) OPTIONAL, -- Need S
    dmrs-ScramblingID0-r17          INTEGER (0..65535) OPTIONAL, -- Need S
    pdsch-AggregationFactor-r17     ENUMERATED {n2, n4, n8} OPTIONAL, -- Need S
}

-- TAG-PDSCH-CONFIGBROADCAST-STOP
-- ASN1STOP
```

PDSCH-ConfigBroadcast field descriptions

lte-CRS-ToMatchAround

Parameters to determine an LTE CRS pattern that the UE shall rate match around.

pdschConfigList

List of PDSCH parameters which can be configured per G-RNTI. Only one entry is allowed to be configured if included in *SIB20* or *SIB24*.

pdsch-TimeDomainAllocationList

List of time-domain configurations for timing of DL assignment to DL data.

The field *pdsch-TimeDomainAllocationList* applies to DCI format 4_0 (see table 5.1.2.1.1-1 in TS 38.214 [19]). When the field is absent, the UE follows PDSCH time domain resource allocation determination rule as specified in TS 38.214 [19], clause 5.1.2.1.1.

rateMatchPatternToAddModList

Resources patterns which the UE should rate match PDSCH around. The UE rate matches around the union of all resources indicated in the rate match patterns (see TS 38.214 [19], clause 5.1.4.1).

mcs-Table

Indicates which MCS table the UE shall use for PDSCH. If the field is absent the UE applies the value 64QAM. The field *mcs-Table* applies to DCI format 4_0 with CRC scrambled by MCCH-RNTI/G-RNTI for MBS broadcast or by Multicast MCCH-RNTI for MBS multicast in RRC_INACTIVE, and applies to DCI format 4_1 with CRC scrambled by G-RNTI for MBS multicast in RRC_INACTIVE (see TS 38.214 [19], clause 5.1.3.1).

xOverhead

Accounts for an overhead from CSI-RS, CORESET, etc. If the field is absent, the UE applies value x0h0 (see TS 38.214 [19], clause 5.1.3.2).

PDSCH-ConfigPTM field descriptions
dataScramblingIdentityPDSCH Identifier(s) used to initialize data scrambling (c_init) for PDSCH as specified in TS 38.211 [16], clause 7.3.1.1. When the field is absent the UE applies the value physCellId configured for this serving cell.
dmrs-ScramblingID0 DL DMRS scrambling initialization (see TS 38.211 [16], clause 7.4.1.1.1). When the field is absent the UE applies the value <i>physCellId</i> configured for this serving cell.
pdsch-AggregationFactor Number of repetitions for dynamic scheduling of MBS broadcast data for MTCH PDSCH (see TS 38.214 [19], clause 5.1.2.1). When the field is absent the UE applies the value 1.

— *TMGI*

The IE *TMGI* is used to identify the MBS session.

TMGI information element

```
-- ASN1START
-- TAG-TMGI-START

TMGI-r17 ::=
    plmn-Id-r17
        plmn-Index
        explicitValue
    },
    serviceId-r17
}

SEQUENCE {
    CHOICE {
        INTEGER (1..maxPLMN),
        PLMN-Identity
    }
    OCTET STRING (SIZE (3))
}

-- TAG-TMGI-STOP
-- ASN1STOP
```

TMGI field descriptions
plmn-Index PLMN index or NPN index according to the <i>plmn-IdentityInfoList</i> and <i>npn-IdentityInfoList</i> fields included in <i>SIB1</i> . If this field is included in the <i>MRB-ToAddMod-r17</i> , the UE translates the <i>plmn-Index</i> into the PLMN Identity or SNPN Identity based on the configuration in <i>SIB1</i> (which is the <i>SIB1</i> of the target cell in case of handover). The <i>explicitValue</i> is not used for MBS service(s) of an SNPN.
serviceId Uniquely identifies the identity of an MBS service within a PLMN. The field contains octet 3- 5 of the IE Temporary Mobile Group Identity (TMGI) as defined in TS 24.008 [38]. The first octet contains the third octet of the TMGI, the second octet contains the fourth octet of the TMGI and so on.

6.4 RRC multiplicity and type constraint values

– Multiplicity and type constraint definitions

```
-- ASN1START
-- TAG-MULTIPLICITY-AND-TYPE-CONSTRAINT-DEFINITIONS-START

maxAdditionalRACH-r17          INTEGER ::= 256    -- Maximum number of additional RACH configurations.
maxAI-DCI-PayloadSize-r16     INTEGER ::= 128    -- Maximum size of the DCI payload scrambled with ai-RNTI
maxAI-DCI-PayloadSize-1-r16   INTEGER ::= 127    -- Maximum size of the DCI payload scrambled with ai-RNTI minus 1
maxBandComb                   INTEGER ::= 65536   -- Maximum number of DL band combinations
maxBandComb-MUSIM-r18         INTEGER ::= 64      -- Maximum number of MUSIM bands and/or band combinations
maxBandsUTRA-FDD-r16          INTEGER ::= 64      -- Maximum number of bands listed in UTRA-FDD UE caps
maxCandidateBandIndex-r18     INTEGER ::= 8       -- Maximum number of band entry index for MUSIM capability
maxBH-RLC-ChannelID-r16       INTEGER ::= 65536   -- Maximum value of BH RLC Channel ID
maxBT-IdReport-r16            INTEGER ::= 32      -- Maximum number of Bluetooth IDs to report
maxBT-Name-r16                INTEGER ::= 4       -- Maximum number of Bluetooth name
maxCAG-Cell-r16               INTEGER ::= 16      -- Maximum number of NR CAG cell ranges in SIB3, SIB4
maxTwoPUCCH-Grp-ConfigList-r16 INTEGER ::= 32    -- Maximum number of supported configuration(s) of {primary PUCCH group
-- config, secondary PUCCH group config}
maxTwoPUCCH-Grp-ConfigList-r17 INTEGER ::= 16    -- Maximum number of supported configuration(s) of {primary PUCCH group
-- config, secondary PUCCH group config} for PUCCH cell switching
maxCBR-Config-r16             INTEGER ::= 8       -- Maximum number of CBR range configurations for sidelink communication
-- congestion control
maxCBR-Config-1-r16           INTEGER ::= 7       -- Maximum number of CBR range configurations for sidelink communication
-- congestion control minus 1
maxCBR-Level-r16              INTEGER ::= 16      -- Maximum number of CBR levels
maxCBR-Level-1-r16            INTEGER ::= 15      -- Maximum number of CBR levels minus 1
maxCellATG-r18                INTEGER ::= 8       -- Maximum number of ATG neighbour cells for which assistance information is
-- provided
maxCellExcluded               INTEGER ::= 16      -- Maximum number of NR exclude-listed cell ranges in SIB3, SIB4
maxCellGroupings-r16          INTEGER ::= 32      -- Maximum number of cell groupings for NR-DC
maxCellHistory-r16            INTEGER ::= 16      -- Maximum number of visited PCells reported
maxPSCellHistory-r17          INTEGER ::= 16      -- Maximum number of visited PSCells across all reported PCells
maxCellInter                  INTEGER ::= 16      -- Maximum number of inter-Freq cells listed in SIB4
maxCellIntra                  INTEGER ::= 16      -- Maximum number of intra-Freq cells listed in SIB3
maxCellMeasEUTRA              INTEGER ::= 32      -- Maximum number of cells in E-UTRAN
maxCellMeasIdle-r16           INTEGER ::= 8       -- Maximum number of cells per carrier for idle/inactive measurements
maxCellMeasUTRA-FDD-r16       INTEGER ::= 32      -- Maximum number of cells in FDD UTRAN
maxCellNTN-r17                INTEGER ::= 4       -- Maximum number of NTN neighbour cells for which assistance information is
-- provided
maxCarrierTypePairList-r16     INTEGER ::= 16      -- Maximum number of supported carrier type pair of (carrier type on which
-- CSI measurement is performed, carrier type on which CSI reporting is
-- performed) for CSI reporting cross PUCCH group
maxCellAllowed                INTEGER ::= 16      -- Maximum number of NR allow-listed cell ranges in SIB3, SIB4
maxEARFCN                     INTEGER ::= 262143  -- Maximum value of E-UTRA carrier frequency
maxEUTRA-CellExcluded          INTEGER ::= 16      -- Maximum number of E-UTRA exclude-listed physical cell identity ranges
-- in SIB5
maxEUTRA-NS-Pmax               INTEGER ::= 8       -- Maximum number of NS and P-Max values per band
maxFeatureCombPreamblesPerRACHResource-r17 INTEGER ::= 256 -- Maximum number of feature combination preambles.
maxLogMeasReport-r16          INTEGER ::= 520     -- Maximum number of entries for logged measurements
maxMultiBands                  INTEGER ::= 8       -- Maximum number of additional frequency bands that a cell belongs to
```

maxNARFCN	INTEGER	::= 3279165	-- Maximum value of NR carrier frequency
maxNR-NS-Pmax	INTEGER	::= 8	-- Maximum number of NS and P-Max values per band
maxFreqIdle-r16	INTEGER	::= 8	-- Maximum number of carrier frequencies for idle/inactive measurements
maxNrofServingCells	INTEGER	::= 32	-- Max number of serving cells (SpCells + SCells)
maxNrofServingCells-1	INTEGER	::= 31	-- Max number of serving cells (SpCells + SCells) minus 1
maxNrofAggregatedCellsPerCellGroup	INTEGER	::= 16	
maxNrofAggregatedCellsPerCellGroupMinus4-r16	INTEGER	::= 12	
maxNrofAperiodicFwdTimeResource-r18	INTEGER	::= 112	-- Max number of aperiodic forwarding time resources for NCR
maxNrofAperiodicFwdTimeResource-1-r18	INTEGER	::= 111	-- Max number of aperiodic forwarding time resources for NCR minus 1
maxNrofDUCells-r16	INTEGER	::= 512	-- Max number of cells configured on the collocated IAB-DU
maxNrofAppLayerMeas-r17	INTEGER	::= 16	-- Max number of simultaneous application layer measurements
maxNrofAppLayerMeas-1-r17	INTEGER	::= 15	-- Max number of simultaneous application layer measurements minus 1
maxNrofAppLayerReports-r18	INTEGER	::= 16	-- Max number of application layer measurement reports with the same -- measConfigAppLayerId included in the same -- MeasurementReportAppLayerMessage
maxNrofAvailabilityCombinationsPerSet-r16	INTEGER	::= 512	-- Max number of AvailabilityCombinationId used in the DCI format 2_5
maxNrofAvailabilityCombinationsPerSet-1-r16	INTEGER	::= 511	-- Max number of AvailabilityCombinationId used in the DCI format 2_5 minus 1
maxNrofIABResourceConfig-r17	INTEGER	::= 65536	-- Max number of IAB-ResourceConfigID used in MAC CE
maxNrofIABResourceConfig-1-r17	INTEGER	::= 65535	-- Max number of IAB-ResourceConfigID used in MAC CE minus 1
maxNrofPeriodicFwdResourceSet-r18	INTEGER	::= 32	-- Max number of periodic forwarding resource sets for NCR
maxNrofPeriodicFwdResourceSet-1-r18	INTEGER	::= 31	-- Max number of periodic forwarding resource sets for NCR minus 1
maxNrofPeriodicFwdResource-r18	INTEGER	::= 1024	-- Max number of periodic forwarding resources for NCR
maxNrofPeriodicFwdResource-1-r18	INTEGER	::= 1023	-- Max number of periodic forwarding resources for NCR minus 1
maxNrofSemiPersistentFwdResourceSet-r18	INTEGER	::= 32	-- Max number of semi-persistent forwarding resource sets for NCR
maxNrofSemiPersistentFwdResourceSet-1-r18	INTEGER	::= 31	-- Max number of semi-persistent forwarding resource sets for NCR minus 1
maxNrofSemiPersistentFwdResource-r18	INTEGER	::= 128	-- Max number of semi-persistent forwarding resources for NCR
maxNrofSemiPersistentFwdResource-1-r18	INTEGER	::= 127	-- Max number of semi-persistent forwarding resources for NCR minus 1
maxNrofSCellActRS-r17	INTEGER	::= 255	-- Max number of RS configurations per SCell for SCell activation
maxNrofSCells	INTEGER	::= 31	-- Max number of secondary serving cells per cell group
maxNrofCellMeas	INTEGER	::= 32	-- Maximum number of entries in each of the cell lists in a measurement object
maxNrofCRS-IM-InterfCell-r17	INTEGER	::= 8	-- Maximum number of LTE interference cells for CRS-IM per UE
maxNrofRelayMeas-r17	INTEGER	::= 32	-- Maximum number of L2 U2N Relay UEs to measure for each measurement object -- on sidelink frequency
maxNrofCG-SL-r16	INTEGER	::= 8	-- Max number of sidelink configured grant
maxNrofCG-SL-1-r16	INTEGER	::= 7	-- Max number of sidelink configured grant minus 1
maxSL-GC-BC-DRX-QoS-r17	INTEGER	::= 16	-- Max number of sidelink DRX configurations for NR -- sidelink groupcast/broadcast communication
maxNrofSL-RxInfoSet-r17	INTEGER	::= 4	-- Max number of sidelink DRX configuration sets in sidelink DRX assistant -- information
maxNrofSS-BlocksToAverage measurement	INTEGER	::= 16	-- Max number for the (max) number of SS blocks to average to determine cell
maxNrofCondCells-r16	INTEGER	::= 8	-- Max number of conditional candidate SpCells
maxNrofCondCells-1-r17	INTEGER	::= 7	-- Max number of conditional candidate SpCells minus 1
maxNrofCSI-RS-ResourcesToAverage	INTEGER	::= 16	-- Max number for the (max) number of CSI-RS to average to determine cell measurement
maxNrofDL-Allocations	INTEGER	::= 16	-- Maximum number of PDSCH time domain resource allocations
maxNrofDL-AllocationsExt-r17	INTEGER	::= 64	-- Maximum number of PDSCH time domain resource allocations for multi-PDSCH -- scheduling
maxNrofDL-Allocations-1-r18	INTEGER	::= 15	-- Maximum number of PDSCH time domain resource allocations minus 1
maxNrofPDU-Sessions-r17	INTEGER	::= 256	-- Maximum number of PDU Sessions
maxNrofSR-ConfigPerCellGroup	INTEGER	::= 8	-- Maximum number of SR configurations per cell group
maxNrofLCGs-r18	INTEGER	::= 8	-- Maximum number of LCGs
maxLCG-ID	INTEGER	::= 7	-- Maximum value of LCG ID
maxLCG-ID-IAB-r17	INTEGER	::= 255	-- Maximum value of LCG ID for IAB-MT

maxLC-ID	INTEGER	::= 32	-- Maximum value of Logical Channel ID
maxLC-ID-Iab-r16	INTEGER	::= 65855	-- Maximum value of BH Logical Channel ID extension
maxLTE-CRS-Patterns-r16	INTEGER	::= 3	-- Maximum number of additional LTE CRS rate matching patterns
maxNrOfLinkedSRS-CarriersInactive-1-r18	INTEGER	::= 2	-- Maximum number of carriers for positioning SRS CA in RRC_INACTIVE minus 1
maxNrOfTAGs	INTEGER	::= 4	-- Maximum number of Timing Advance Groups
maxNrOfTAGs-1	INTEGER	::= 3	-- Maximum number of Timing Advance Groups minus 1
maxNrOfBWPs	INTEGER	::= 4	-- Maximum number of BWPs per serving cell
maxNrOfCombIDC	INTEGER	::= 128	-- Maximum number of reported MR-DC combinations for IDC
maxNrOfSymbols-1	INTEGER	::= 13	-- Maximum index identifying a symbol within a slot (14 symbols, indexed from 0..13)
maxNrOfSlots	INTEGER	::= 320	-- Maximum number of slots in a 10 ms period
maxNrOfSlots-1	INTEGER	::= 319	-- Maximum number of slots in a 10 ms period minus 1
maxNrOfPhysicalResourceBlocks	INTEGER	::= 275	-- Maximum number of PRBs
maxNrOfPhysicalResourceBlocks-1	INTEGER	::= 274	-- Maximum number of PRBs minus 1
maxNrOfPhysicalResourceBlocksPlus1	INTEGER	::= 276	-- Maximum number of PRBs plus 1
maxNrOfControlResourceSets	INTEGER	::= 12	-- Max number of CoReSets configurable on a serving cell
maxNrOfControlResourceSets-1	INTEGER	::= 11	-- Max number of CoReSets configurable on a serving cell minus 1
maxNrOfControlResourceSets-1-r16	INTEGER	::= 15	-- Max number of CoReSets configurable on a serving cell extended in minus 1
maxNrOfCoresetPools-r16	INTEGER	::= 2	-- Maximum number of CORESET pools
maxCoReSetDuration	INTEGER	::= 3	-- Max number of OFDM symbols in a control resource set
maxNrOfSearchSpaces-1	INTEGER	::= 39	-- Max number of Search Spaces minus 1
maxNrOfSearchSpacesLinks-1-r17	INTEGER	::= 39	-- Max number of Search Space links minus 1
maxNrOfBFDResourcePerSet-r17	INTEGER	::= 64	-- Max number of reference signal in one BFD set
maxSFI-DCI-PayloadSize	INTEGER	::= 128	-- Max number payload of a DCI scrambled with SFI-RNTI
maxSFI-DCI-PayloadSize-1	INTEGER	::= 127	-- Max number payload of a DCI scrambled with SFI-RNTI minus 1
maxIAB-IP-Address-r16	INTEGER	::= 32	-- Max number of assigned IP addresses
maxINT-DCI-PayloadSize	INTEGER	::= 126	-- Max number payload of a DCI scrambled with INT-RNTI
maxINT-DCI-PayloadSize-1	INTEGER	::= 125	-- Max number payload of a DCI scrambled with INT-RNTI minus 1
maxNrOfRateMatchPatterns	INTEGER	::= 4	-- Max number of rate matching patterns that may be configured
maxNrOfRateMatchPatterns-1	INTEGER	::= 3	-- Max number of rate matching patterns that may be configured minus 1
maxNrOfRateMatchPatternsPerGroup	INTEGER	::= 8	-- Max number of rate matching patterns that may be configured in one group
maxNrOfCSI-ReportConfigurations	INTEGER	::= 48	-- Maximum number of report configurations
maxNrOfCSI-ReportConfigurations-1	INTEGER	::= 47	-- Maximum number of report configurations minus 1
maxNrOfCSI-ResourceConfigurations	INTEGER	::= 112	-- Maximum number of resource configurations
maxNrOfCSI-ResourceConfigurations-1	INTEGER	::= 111	-- Maximum number of resource configurations minus 1
maxNrOfAP-CSI-RS-ResourcesPerSet	INTEGER	::= 16	
maxNrOfCSI-AperiodicTriggers	INTEGER	::= 128	-- Maximum number of triggers for aperiodic CSI reporting
maxNrOfReportConfigPerAperiodicTrigger	INTEGER	::= 16	-- Maximum number of report configurations per trigger state for aperiodic reporting
maxNrOfNZP-CSI-RS-Resources	INTEGER	::= 192	-- Maximum number of Non-Zero-Power (NZP) CSI-RS resources
maxNrOfNZP-CSI-RS-Resources-1	INTEGER	::= 191	-- Maximum number of Non-Zero-Power (NZP) CSI-RS resources minus 1
maxNrOfNZP-CSI-RS-ResourcesPerSet	INTEGER	::= 64	-- Maximum number of NZP CSI-RS resources per resource set
maxNrOfNZP-CSI-RS-ResourcesPerSet-1-r18	INTEGER	::= 63	-- Maximum number of NZP CSI-RS resources per resource set minus 1
maxNrOfNZP-CSI-RS-ResourceSets	INTEGER	::= 64	-- Maximum number of NZP CSI-RS resource sets per cell
maxNrOfNZP-CSI-RS-ResourceSets-1	INTEGER	::= 63	-- Maximum number of NZP CSI-RS resource sets per cell minus 1
maxNrOfNZP-CSI-RS-ResourceSetsPerConfig	INTEGER	::= 16	-- Maximum number of resource sets per resource configuration
maxNrOfNZP-CSI-RS-ResourcesPerConfig	INTEGER	::= 128	-- Maximum number of resources per resource configuration
maxNrOfZP-CSI-RS-Resources	INTEGER	::= 32	-- Maximum number of Zero-Power (ZP) CSI-RS resources
maxNrOfZP-CSI-RS-Resources-1	INTEGER	::= 31	-- Maximum number of Zero-Power (ZP) CSI-RS resources minus 1
maxNrOfZP-CSI-RS-ResourceSets-1	INTEGER	::= 15	
maxNrOfZP-CSI-RS-ResourcesPerSet	INTEGER	::= 16	
maxNrOfZP-CSI-RS-ResourceSets	INTEGER	::= 16	
maxNrOfCSI-IM-Resources	INTEGER	::= 32	-- Maximum number of CSI-IM resources
maxNrOfCSI-IM-Resources-1	INTEGER	::= 31	-- Maximum number of CSI-IM resources minus 1
maxNrOfCSI-IM-ResourcesPerSet	INTEGER	::= 8	-- Maximum number of CSI-IM resources per set
maxNrOfCSI-IM-ResourceSets	INTEGER	::= 64	-- Maximum number of NZP CSI-IM resource sets per cell

maxNrofCSI-IM-ResourceSets-1	INTEGER	::= 63	-- Maximum number of NZP CSI-IM resource sets per cell minus 1
maxNrofCSI-IM-ResourceSetsPerConfig	INTEGER	::= 16	-- Maximum number of CSI IM resource sets per resource configuration
maxNrofCSI-SSB-ResourcePerSet	INTEGER	::= 64	-- Maximum number of SSB resources in a resource set
maxNrofCSI-SSB-ResourceSets	INTEGER	::= 64	-- Maximum number of CSI SSB resource sets per cell
maxNrofCSI-SSB-ResourceSets-1	INTEGER	::= 63	-- Maximum number of CSI SSB resource sets per cell minus 1
maxNrofCSI-SSB-ResourceSetsPerConfig	INTEGER	::= 1	-- Maximum number of CSI SSB resource sets per resource configuration
maxNrofCSI-SSB-ResourceSetsPerConfigExt	INTEGER	::= 2	-- Maximum number of CSI SSB resource sets per resource configuration -- extended
maxNrofFailureDetectionResources	INTEGER	::= 10	-- Maximum number of failure detection resources
maxNrofFailureDetectionResources-1	INTEGER	::= 9	-- Maximum number of failure detection resources minus 1
maxNrofFailureDetectionResources-1-r17	INTEGER	::= 63	-- Maximum number of the enhanced failure detection resources minus 1
maxNrofFreqSL-r16	INTEGER	::= 8	-- Maximum number of carrier frequency for NR sidelink communication
maxNrofFreqSL-1-r18	INTEGER	::= 7	-- Maximum number of carrier frequency for NR sidelink communication minus 1
maxNrofSL-BWPs-r16	INTEGER	::= 4	-- Maximum number of BWP for NR sidelink communication
maxNrofSL-CarrierSetConfig-r18	INTEGER	::= 96	-- Maximum number of SCCH carrier set configuration for NR sidelink -- communication
maxFreqSL-EUTRA-r16	INTEGER	::= 8	-- Maximum number of EUTRA anchor carrier frequency for NR sidelink -- communication
maxNrofSL-MeasId-r16	INTEGER	::= 64	-- Maximum number of sidelink measurement identity (RSRP) per destination
maxNrofSL-ObjectId-r16	INTEGER	::= 64	-- Maximum number of sidelink measurement objects (RSRP) per destination
maxNrofSL-ReportConfigId-r16	INTEGER	::= 64	-- Maximum number of sidelink measurement reporting configuration(RSRP) per destination
maxNrofSL-PoolToMeasureNR-r16	INTEGER	::= 8	-- Maximum number of resource pool for NR sidelink measurement to measure -- for each measurement object (for CBR)
maxNrofDedicatedSL-PRS-PoolToMeas-r18	INTEGER	::= 8	-- Maximum number of SL-PRS dedicated resource pool for positioning -- measurement to measure for each measurement object (for SL-PRS CBR)
maxFreqSL-NR-r16	INTEGER	::= 8	-- Maximum number of NR anchor carrier frequency for NR sidelink communication
maxNrofSL-QFIS-r16	INTEGER	::= 2048	-- Maximum number of QoS flow for NR sidelink communication per UE
maxNrofSL-QFISPerDest-r16	INTEGER	::= 64	-- Maximum number of QoS flow per destination for NR sidelink communication
maxNrofObjectId	INTEGER	::= 64	-- Maximum number of measurement objects
maxNrofPageRec	INTEGER	::= 32	-- Maximum number of page records
maxNrofPCI-Ranges	INTEGER	::= 8	-- Maximum number of PCI ranges
maxPLMN	INTEGER	::= 12	-- Maximum number of PLMNs broadcast and reported by UE at establishment
maxTAC-r17	INTEGER	::= 12	-- Maximum number of Tracking Area Codes to which a cell belongs to
maxNrofCSI-RS-ResourcesRRM	INTEGER	::= 96	-- Maximum number of CSI-RS resources per cell for an RRM measurement object
maxNrofCSI-RS-ResourcesRRM-1	INTEGER	::= 95	-- Maximum number of CSI-RS resources per cell for an RRM measurement object -- minus 1.
maxNrofMeasId	INTEGER	::= 64	-- Maximum number of configured measurements
maxNrofQuantityConfig	INTEGER	::= 2	-- Maximum number of quantity configurations
maxNrofCSI-RS-CellsRRM	INTEGER	::= 96	-- Maximum number of cells with CSI-RS resources for an RRM measurement object
maxNrofSL-Dest-r16	INTEGER	::= 32	-- Maximum number of destination for NR sidelink communication and discovery
maxNrofSL-Dest-1-r16	INTEGER	::= 31	-- Highest index of destination for NR sidelink communication and discovery
maxNrofSL-PRS-PerDest-r18	INTEGER	::= 8	-- Max number of SL-PRS transmission supported per destination UE
maxNrofSLRB-r16	INTEGER	::= 512	-- Maximum number of radio bearer for NR sidelink communication per UE without duplication
maxSL-LCID-Plus1-r18	INTEGER	::= 513	-- Maximum number of RLC bearer for NR sidelink communication per UE without duplication plus 1
maxSL-LCID-r18	INTEGER	::= 1024	-- Maximum number of RLC bearer for NR sidelink communication per UE with duplication
maxSL-NonAnchorRBsets	INTEGER	::= 4	-- Maximum number of non-anchor RB sets
maxSL-LCID-r16	INTEGER	::= 512	-- Maximum number of RLC bearer for NR sidelink communication per UE
maxSL-SyncConfig-r16	INTEGER	::= 16	-- Maximum number of sidelink Sync configurations
maxNrofRXPool-r16	INTEGER	::= 16	-- Maximum number of Rx resource pool for NR sidelink communication and -- discovery
maxNrofTXPool-r16	INTEGER	::= 8	-- Maximum number of Tx resource pool for NR sidelink communication and -- discovery

maxNrofPoolID-r16	INTEGER ::= 16	-- Maximum index of resource pool for NR sidelink communication and discovery
maxNrofSRS-PathlossReferenceRS-r16	INTEGER ::= 64	-- Maximum number of RSs used as pathloss reference for SRS power control.
maxNrofSRS-PathlossReferenceRS-1-r16	INTEGER ::= 63	-- Maximum number of RSs used as pathloss reference for SRS power control minus 1.
maxNrofSRS-ResourceSets	INTEGER ::= 16	-- Maximum number of SRS resource sets in a BWP.
maxNrofSRS-ResourceSets-1	INTEGER ::= 15	-- Maximum number of SRS resource sets in a BWP minus 1.
maxNrofSRS-PosResourceSets-r16	INTEGER ::= 16	-- Maximum number of SRS Positioning resource sets in a BWP.
maxNrofSRS-PosResourceSets-1-r16	INTEGER ::= 15	-- Maximum number of SRS Positioning resource sets in a BWP minus 1.
maxNrofSRS-Resources	INTEGER ::= 64	-- Maximum number of SRS resources.
maxNrofSRS-Resources-1	INTEGER ::= 63	-- Maximum number of SRS resources minus 1.
maxNrofSRS-PosResources-r16	INTEGER ::= 64	-- Maximum number of SRS Positioning resources.
maxNrofSRS-PosResources-1-r16	INTEGER ::= 63	-- Maximum number of SRS Positioning resources minus 1.
maxNrofSRS-ResourcesPerSet	INTEGER ::= 16	-- Maximum number of SRS resources in an SRS resource set
maxNrofSRS-TriggerStates-1	INTEGER ::= 3	-- Maximum number of SRS trigger states minus 1, i.e., the largest code point.
maxNrofSRS-TriggerStates-2	INTEGER ::= 2	-- Maximum number of SRS trigger states minus 2.
maxRAT-CapabilityContainers	INTEGER ::= 8	-- Maximum number of interworking RAT containers (incl NR and MRDC)
maxSimultaneousBands	INTEGER ::= 32	-- Maximum number of simultaneously aggregated bands
maxSimultaneousBands-2-r18	INTEGER ::= 30	-- Maximum number of simultaneously aggregated bands minus 2.
maxULTxSwitchingBandPairs	INTEGER ::= 32	-- Maximum number of band pairs supporting dynamic UL Tx switching in a band combination.
maxULTxSwitchingBetweenBandPairs-r18	INTEGER ::= 32	-- Maximum number of combinations of a band pair and another band pair/band between which dynamic UL Tx switching requires additional switching period.
maxSchedulingBandCombination-r18	INTEGER ::= 32	-- Maximum number of combinations of scheduling cell and co-scheduled cells have same or different carrier type.
maxNrofSlotFormatCombinationsPerSet	INTEGER ::= 512	-- Maximum number of Slot Format Combinations in a SF-Set.
maxNrofSlotFormatCombinationsPerSet-1	INTEGER ::= 511	-- Maximum number of Slot Format Combinations in a SF-Set minus 1.
maxNrofTrafficPattern-r16	INTEGER ::= 8	-- Maximum number of Traffic Pattern for NR sidelink communication.
maxNrofPUCCH-Resources	INTEGER ::= 128	
maxNrofPUCCH-Resources-1	INTEGER ::= 127	
maxNrofPUCCH-ResourceSets	INTEGER ::= 4	-- Maximum number of PUCCH Resource Sets
maxNrofPUCCH-ResourceSets-1	INTEGER ::= 3	-- Maximum number of PUCCH Resource Sets minus 1.
maxNrofPUCCH-ResourcesPerSet	INTEGER ::= 32	-- Maximum number of PUCCH Resources per PUCCH-ResourceSet
maxNrofPUCCH-P0-PerSet	INTEGER ::= 8	-- Maximum number of P0-pucch present in a p0-pucch set
maxNrofPUCCH-PathlossReferenceRSs	INTEGER ::= 4	-- Maximum number of RSs used as pathloss reference for PUCCH power control.
maxNrofPUCCH-PathlossReferenceRSs-1	INTEGER ::= 3	-- Maximum number of RSs used as pathloss reference for PUCCH power control minus 1.
maxNrofPUCCH-PathlossReferenceRSs-r16	INTEGER ::= 64	-- Maximum number of RSs used as pathloss reference for PUCCH power control extended.
maxNrofPUCCH-PathlossReferenceRSs-1-r16	INTEGER ::= 63	-- Maximum number of RSs used as pathloss reference for PUCCH power control minus 1 extended.
maxNrofPUCCH-PathlossReferenceRSs-1-r17	INTEGER ::= 7	-- Maximum number of RSs used as pathloss reference for PUCCH power control minus 1.
maxNrofPUCCH-PathlossReferenceRSsDiff-r16	INTEGER ::= 60	-- Difference between the extended maximum and the non-extended maximum
maxNrofPUCCH-ResourceGroups-r16	INTEGER ::= 4	-- Maximum number of PUCCH resources groups.
maxNrofPUCCH-ResourcesPerGroup-r16	INTEGER ::= 128	-- Maximum number of PUCCH resources in a PUCCH group.
maxNrofPowerControlSetInfos-r17	INTEGER ::= 8	-- Maximum number of PUCCH power control set infos
maxNrofMultiplePUSCHs-r16	INTEGER ::= 8	-- Maximum number of multiple PUSCHs in PUSCH TDRA list
maxNrofP0-PUSCH-AlphaSets	INTEGER ::= 30	-- Maximum number of P0-pusch-alpha-sets (see TS 38.213 [13], clause 7.1)
maxNrofP0-PUSCH-AlphaSets-1	INTEGER ::= 29	-- Maximum number of P0-pusch-alpha-sets minus 1 (see TS 38.213 [13], clause 7.1)
maxNrofPUSCH-PathlossReferenceRSs	INTEGER ::= 4	-- Maximum number of RSs used as pathloss reference for PUSCH power control.
maxNrofPUSCH-PathlossReferenceRSs-1	INTEGER ::= 3	-- Maximum number of RSs used as pathloss reference for PUSCH power control minus 1.

maxNrofPUSCH-PathlossReferenceRSs-r16	INTEGER	::= 64	-- Maximum number of RSs used as pathloss reference for PUSCH power control
maxNrofPUSCH-PathlossReferenceRSs-1-r16	INTEGER	::= 63	-- extended
maxNrofPUSCH-PathlossReferenceRSsDiff-r16	INTEGER	::= 60	-- Maximum number of RSs used as pathloss reference for PUSCH power control
maxNrofPathlossReferenceRSs-r17	INTEGER	::= 64	-- extended minus 1
maxNrofPathlossReferenceRSs-1-r17	INTEGER	::= 63	-- Difference between maxNrofPUSCH-PathlossReferenceRSs-r16 and maxNrofPUSCH-PathlossReferenceRSs
maxNrofNAICS-Entries	INTEGER	::= 8	-- Maximum number of RSs used as pathloss reference for PUSCH, PUCCH, SRS
maxBands	INTEGER	::= 1024	-- power control for unified TCI state operation
maxBandsMRDC	INTEGER	::= 1280	-- Maximum number of RSs used as pathloss reference for PUSCH, PUCCH, SRS
maxBandsEUTRA	INTEGER	::= 256	-- power control for unified TCI state operation minus 1
maxCellReport	INTEGER	::= 8	-- Maximum number of supported NAICS capability set
maxDRB	INTEGER	::= 29	-- Maximum number of supported bands in UE capability.
maxFreq	INTEGER	::= 8	-- Maximum number of DRBs (that can be added in DRB-ToAddModList).
maxFreqLayers	INTEGER	::= 4	-- Max number of frequencies.
maxFreqPlus1	INTEGER	::= 9	-- Max number of frequency layers.
maxFreqIDC-r16	INTEGER	::= 128	-- Max number of frequencies for Slicing.
maxCombIDC-r16	INTEGER	::= 128	-- Max number of frequencies for IDC indication.
maxFreqIDC-MRDC	INTEGER	::= 32	-- Max number of reported UL CA for IDC indication.
maxNrofCandidateBeams	INTEGER	::= 16	-- Maximum number of candidate NR frequencies for MR-DC IDC indication
maxNrofCandidateBeams-r16	INTEGER	::= 64	-- Max number of PRACH-ResourceDedicatedBFR in BFR config.
maxNrofCandidateBeamsExt-r16	INTEGER	::= 48	-- Max number of candidate beam resources in BFR config.
maxNrofPCIsPerSMTC	INTEGER	::= 64	-- Max number of PRACH-ResourceDedicatedBFR in the CandidateBeamRSLISTExt
maxNrofQFIs	INTEGER	::= 64	-- Maximum number of PCIs per SMTC.
maxNrofResourceAvailabilityPerCombination-r16	INTEGER	::= 256	
maxNrofSemiPersistentPUSCH-Triggers	INTEGER	::= 64	-- Maximum number of triggers for semi persistent reporting on PUSCH
maxNrofSR-Resources	INTEGER	::= 8	-- Maximum number of SR resources per BWP in a cell.
maxNrofSlotFormatsPerCombination	INTEGER	::= 256	
maxNrofSpatialRelationInfos	INTEGER	::= 8	
maxNrofSpatialRelationInfos-plus-1	INTEGER	::= 9	
maxNrofSpatialRelationInfos-r16	INTEGER	::= 64	
maxNrofSpatialRelationInfosDiff-r16	INTEGER	::= 56	-- Difference between maxNrofSpatialRelationInfos-r16 and maxNrofSpatialRelationInfos
maxNrofIndexesToReport	INTEGER	::= 32	
maxNrofIndexesToReport2	INTEGER	::= 64	
maxNrofSSBs-r16	INTEGER	::= 64	-- Maximum number of SSB resources in a resource set.
maxNrofSSBs-1	INTEGER	::= 63	-- Maximum number of SSB resources in a resource set minus 1.
maxNrofS-NSSAI	INTEGER	::= 8	-- Maximum number of S-NSSAI.
maxNrofTCI-StatesPDCCH	INTEGER	::= 64	
maxNrofTCI-States	INTEGER	::= 128	-- Maximum number of TCI states.
maxNrofTCI-States-1	INTEGER	::= 127	-- Maximum number of TCI states minus 1.
maxUL-TCI-r17	INTEGER	::= 64	-- Maximum number of TCI states.
maxUL-TCI-1-r17	INTEGER	::= 63	-- Maximum number of TCI states minus 1.
maxNrofAdditionalPCI-r17	INTEGER	::= 7	-- Maximum number of additional PCI
maxNrofAdditionalPRACHConfigs-r18	INTEGER	::= 7	-- Maximum number of additional PRACH configurations for 2TA
maxNrofDelayD-r18	INTEGER	::= 4	-- Maximum number of delayD values.
maxMPE-Resources-r17	INTEGER	::= 64	-- Maximum number of pooled MPE resources
maxNrofUL-Allocations	INTEGER	::= 16	-- Maximum number of PUSCH time domain resource allocations.
maxQFI	INTEGER	::= 63	
maxRA-CSIRS-Resources	INTEGER	::= 96	
maxRA-OccasionsPerCSIRS	INTEGER	::= 64	-- Maximum number of RA occasions for one CSI-RS
maxRA-Occasions-1	INTEGER	::= 511	-- Maximum number of RA occasions in the system

maxRA-SSB-Resources	INTEGER ::= 64	
maxSCSs	INTEGER ::= 5	
maxSecondaryCellGroups	INTEGER ::= 3	
maxNrofServingCellsEUTRA	INTEGER ::= 32	
maxMBSFN-Allocations	INTEGER ::= 8	
maxNrofMultiBands	INTEGER ::= 8	
maxCellsFTD	INTEGER ::= 3	-- Maximum number of cells for SFTD reporting
maxReportConfigId	INTEGER ::= 64	
maxNrofCodebooks	INTEGER ::= 16	-- Maximum number of codebooks supported by the UE
maxNrofCSI-RS-ResourcesExt-r16	INTEGER ::= 16	-- Maximum number of codebook resources supported by the UE for eType2/Codebook combo
maxNrofCSI-RS-ResourcesExt-r17	INTEGER ::= 8	-- Maximum number of codebook resources for fetype2R1 and fetype2R2
maxNrofCSI-RS-Resources	INTEGER ::= 7	-- Maximum number of codebook resources supported by the UE
maxNrofCSI-RS-ResourcesAlt-r16	INTEGER ::= 512	-- Maximum number of alternative codebook resources supported by the UE
maxNrofCSI-RS-ResourcesAlt-1-r16	INTEGER ::= 511	-- Maximum number of alternative codebook resources supported by the UE minus 1
maxNrofSRI-PUSCH-Mappings	INTEGER ::= 16	
maxNrofSRI-PUSCH-Mappings-1	INTEGER ::= 15	
maxSIB	INTEGER ::= 32	-- Maximum number of SIBs
maxSI-Message	INTEGER ::= 32	-- Maximum number of SI messages
maxSIB-MessagePlus1-r17	INTEGER ::= 33	-- Maximum number of SIB messages plus 1
maxPO-perPF	INTEGER ::= 4	-- Maximum number of paging occasion per paging frame
maxPEI-perPF-r17	INTEGER ::= 4	-- Maximum number of PEI occasion per paging frame
maxAccessCat-1	INTEGER ::= 63	-- Maximum number of Access Categories minus 1
maxBarringInfoSet	INTEGER ::= 8	-- Maximum number of access control parameter sets
maxCelleUTRA	INTEGER ::= 8	-- Maximum number of E-UTRA cells in SIB list
maxEUTRA-Carrier	INTEGER ::= 8	-- Maximum number of E-UTRA carriers in SIB list
maxPLMNIdentities	INTEGER ::= 8	-- Maximum number of PLMN identities in RAN area configurations
maxDownlinkFeatureSets	INTEGER ::= 1024	-- (for NR DL) Total number of FeatureSets (size of the pool)
maxUplinkFeatureSets	INTEGER ::= 1024	-- (for NR UL) Total number of FeatureSets (size of the pool)
maxEUTRA-DL-FeatureSets	INTEGER ::= 256	-- (for E-UTRA) Total number of FeatureSets (size of the pool)
maxEUTRA-UL-FeatureSets	INTEGER ::= 256	-- (for E-UTRA) Total number of FeatureSets (size of the pool)
maxFeatureSetsPerBand	INTEGER ::= 128	-- (for NR) The number of feature sets associated with one band.
maxPerCC-FeatureSets	INTEGER ::= 1024	-- (for NR) Total number of CC-specific FeatureSets (size of the pool)
maxFeatureSetCombinations	INTEGER ::= 1024	-- (for MR-DC/NR) Total number of Feature set combinations (size of the pool)
maxInterRAT-RSTD-Freq	INTEGER ::= 3	
maxGIN-r17	INTEGER ::= 24	-- Maximum number of broadcast GINs
maxHRNN-Len-r16	INTEGER ::= 48	-- Maximum length of HRNNs
maxNPN-r16	INTEGER ::= 12	-- Maximum number of NPNs broadcast and reported by UE at establishment
maxSNPN-ConfigCellId-r18	INTEGER ::= 32	-- Maximum number of Cell ID subject for SNPNS for MDT scope
maxSNPN-ConfigID-r18	INTEGER ::= 16	-- Maximum number of SNPNS subject for MDT scope
maxSNPN-ConfigTAI-r18	INTEGER ::= 8	-- Maximum number of TA subject for MDT scope
maxNrofMinSchedulingOffsetValues-r16	INTEGER ::= 2	-- Maximum number of min. scheduling offset (K0/K2) configurations
maxK0-SchedulingOffset-r16	INTEGER ::= 16	-- Maximum number of slots configured as min. scheduling offset (K0)
maxK2-SchedulingOffset-r16	INTEGER ::= 16	-- Maximum number of slots configured as min. scheduling offset (K2)
maxK0-SchedulingOffset-r17	INTEGER ::= 64	-- Maximum number of slots configured as min. scheduling offset (K0)
maxK2-SchedulingOffset-r17	INTEGER ::= 64	-- Maximum number of slots configured as min. scheduling offset (K2)
maxDCI-2-6-Size-r16	INTEGER ::= 140	-- Maximum size of DCI format 2-6
maxDCI-2-7-Size-r17	INTEGER ::= 43	-- Maximum size of DCI format 2-7
maxDCI-2-6-Size-1-r16	INTEGER ::= 139	-- Maximum DCI format 2-6 size minus 1
maxDCI-2-9-Size-r18	INTEGER ::= 140	-- Maximum DCI format 2-9 size
maxDCI-2-9-Size-1-r18	INTEGER ::= 139	-- Maximum DCI format 2-9 size minus 1
maxNrofUL-Allocations-r16	INTEGER ::= 64	-- Maximum number of PUSCH time domain resource allocations
maxNrofUL-Allocations-1-r18	INTEGER ::= 63	-- Maximum number of PUSCH time domain resource allocations minus 1
maxNrofP0-PUSCH-Set-r16	INTEGER ::= 2	-- Maximum number of P0 PUSCH set(s)
maxOnDemandSIB-r16	INTEGER ::= 8	-- Maximum number of SIB(s) that can be requested on-demand

maxOnDemandPosSIB-r16	INTEGER	::= 32	-- Maximum number of posSIB(s) that can be requested on-demand
maxCI-DCI-PayloadSize-r16	INTEGER	::= 126	-- Maximum number of the DCI size for CI
maxCI-DCI-PayloadSize-1-r16	INTEGER	::= 125	-- Maximum number of the DCI size for CI minus 1
maxUu-RelayRLC-ChannelID-r17	INTEGER	::= 32	-- Maximum value of Uu Relay RLC channel ID
maxWLAN-Id-Report-r16	INTEGER	::= 32	-- Maximum number of WLAN IDs to report
maxWLAN-Name-r16	INTEGER	::= 4	-- Maximum number of WLAN name
maxRARReport-r16	INTEGER	::= 8	-- Maximum number of RA procedures information to be included in the RA report
maxTxConfig-r16	INTEGER	::= 64	-- Maximum number of sidelink transmission parameters configurations
maxTxConfig-1-r16	INTEGER	::= 63	-- Maximum number of sidelink transmission parameters configurations minus 1
maxPSSCH-TxConfig-r16	INTEGER	::= 16	-- Maximum number of PSSCH TX configurations
maxNrofCLI-RSSI-Resources-r16	INTEGER	::= 64	-- Maximum number of CLI-RSSI resources for UE
maxNrofCLI-RSSI-Resources-1-r16	INTEGER	::= 63	-- Maximum number of CLI-RSSI resources for UE minus 1
maxNrofCLI-SRS-Resources-r16	INTEGER	::= 32	-- Maximum number of SRS resources for CLI measurement for UE
maxCLI-Report-r16	INTEGER	::= 8	
maxNrofCC-Group-r17	INTEGER	::= 16	-- Maximum number of CC groups for DC location report
maxNrofConfiguredGrantConfig-r16	INTEGER	::= 12	-- Maximum number of configured grant configurations per BWP
maxNrofConfiguredGrantConfig-1-r16	INTEGER	::= 11	-- Maximum number of configured grant configurations per BWP minus 1
maxNrofCG-Type2DeactivationState	INTEGER	::= 16	-- Maximum number of deactivation state for type 2 configured grants per BWP
maxNrofConfiguredGrantConfigMAC-1-r16	INTEGER	::= 31	-- Maximum number of configured grant configurations per MAC entity minus 1
maxNrofCSI-ReportSubconfigPerCSI-ReportConfig-r18	INTEGER	::= 8	-- Maximum number of CSI report subconfigurations per CSI report
			-- configuration
maxNrofCSI-ReportSubconfigPerCSI-ReportConfig-1-r18	INTEGER	::= 7	-- Maximum number of CSI report subconfigurations per CSI report
			-- configuration minus 1
maxNrofSPS-Config-r16	INTEGER	::= 8	-- Maximum number of SPS configurations per BWP
maxNrofSPS-Config-1-r16	INTEGER	::= 7	-- Maximum number of SPS configurations per BWP minus 1
maxNrofSPS-DeactivationState	INTEGER	::= 16	-- Maximum number of deactivation state for SPS per BWP
maxNrofPPW-Config-r17	INTEGER	::= 4	-- Maximum number of Preconfigured PRS processing windows per DL BWP
maxNrofPPW-ID-1-r17	INTEGER	::= 15	-- Maximum number of Preconfigured PRS processing windows minus 1
maxNrofTxTEGReport-r17	INTEGER	::= 256	-- Maximum number of UE Tx Timing Error Group Report
maxNrofTxTEG-ID-1-r17	INTEGER	::= 7	-- Maximum number of UE Tx Timing Error Group ID minus 1
maxNrofPagingSubgroups-r17	INTEGER	::= 8	-- Maximum number of paging subgroups per paging occasion
maxNrofPUCCH-ResourceGroups-1-r16	INTEGER	::= 3	
maxNrofReqComDC-Location-r17	INTEGER	::= 128	-- Maximum number of requested carriers/BWPs combinations for DC location
			-- report
maxNrofServingCellsTCI-r16	INTEGER	::= 32	-- Maximum number of serving cells in simultaneousTCI-UpdateList
maxNrofTxDC-TwoCarrier-r16	INTEGER	::= 64	-- Maximum number of UL Tx DC locations reported by the UE for 2CC uplink CA
maxNrofRB-SetGroups-r17	INTEGER	::= 8	-- Maximum number of RB set groups
maxNrofRB-Sets-r17	INTEGER	::= 8	-- Maximum number of RB sets
maxNrofEnhType3HARQ-ACK-r17	INTEGER	::= 8	-- Maximum number of enhanced type 3 HARQ-ACK codebook
maxNrofEnhType3HARQ-ACK-1-r17	INTEGER	::= 7	-- Maximum number of enhanced type 3 HARQ-ACK codebook minus 1
maxNrofPRS-ResourcesPerSet-r17	INTEGER	::= 64	-- Maximum number of PRS resources for one set
maxNrofPRS-ResourcesPerSet-1-r17	INTEGER	::= 63	-- Maximum number of PRS resources for one set minus 1
maxNrofPRS-ResourceOffsetValue-1-r17	INTEGER	::= 511	
maxNrofGapId-r17	INTEGER	::= 8	-- Maximum number of measurement gap ID
maxNrofPreConfigPosGapId-r17	INTEGER	::= 16	-- Maximum number of preconfigured positioning measurement gap
maxNrofGapPri-r17	INTEGER	::= 16	-- Maximum number of gap priority level
maxCEFReport-r17	INTEGER	::= 4	-- Maximum number of CEF reports by the UE
maxNrofMultiplePDSCHs-r17	INTEGER	::= 8	-- Maximum number of PDSCHs in PDSCH TDRA list
maxSliceInfo-r17	INTEGER	::= 8	-- Maximum number of NSAGs
maxCellSlice-r17	INTEGER	::= 16	-- Maximum number of cells supporting the NSAG
maxNrofTRS-ResourceSets-r17	INTEGER	::= 64	-- Maximum number of TRS resource sets
maxNrofSearchSpaceGroups-1-r17	INTEGER	::= 2	-- Maximum number of search space groups minus 1
maxNrofRemoteUE-r17	INTEGER	::= 32	-- Maximum number of connected L2 U2N Remote UEs
maxDCI-4-2-Size-r17	INTEGER	::= 140	-- Maximum size of DCI format 4-2

maxFreqMBS-r17	INTEGER ::= 16	-- Maximum number of MBS frequencies reported in MBSInterestIndication
maxNrofDRX-ConfigPTM-r17	INTEGER ::= 64	-- Max number of DRX configuration for PTM provided in MBS broadcast in a cell
maxNrofDRX-ConfigPTM-1-r17	INTEGER ::= 63	-- Max number of DRX configuration for PTM provided in MBS broadcast in a cell minus 1
maxNrofMBS-ServiceListPerUE-r17	INTEGER ::= 16	-- Maximum number of services which the UE can include in the MBS interest indication
maxNrofMBS-Session-r17	INTEGER ::= 1024	-- Maximum number of MBS sessions provided in MBS broadcast or multicast in a cell
maxNrofMTCH-SSB-MappingWindow-r17	INTEGER ::= 16	-- Maximum number of MTCH to SSB beam mapping pattern
maxNrofMTCH-SSB-MappingWindow-1-r17	INTEGER ::= 15	-- Maximum number of MTCH to SSB beam mapping pattern minus 1
maxNrofMRB-Broadcast-r17	INTEGER ::= 4	-- Maximum number of broadcast MRBs configured for one MBS broadcast service
maxNrofPageGroup-r17	INTEGER ::= 32	-- Maximum number of paging groups in a paging message
maxNrofPDSCH-ConfigPTM-r17	INTEGER ::= 16	-- Maximum number of PDSCH configuration groups for PTM
maxNrofPDSCH-ConfigPTM-1-r17	INTEGER ::= 15	-- Maximum number of PDSCH configuration groups for PTM minus 1
maxG-RNTI-r17	INTEGER ::= 16	-- Maximum number of G-RNTI that can be configured for a UE.
maxG-RNTI-1-r17	INTEGER ::= 15	-- Maximum number of G-RNTI that can be configured for a UE minus 1.
maxG-CS-RNTI-r17	INTEGER ::= 8	-- Maximum number of G-CS-RNTI that can be configured for a UE.
maxG-CS-RNTI-1-r17	INTEGER ::= 7	-- Maximum number of G-CS-RNTI that can be configured for a UE minus 1.
maxMRB-r17	INTEGER ::= 32	-- Maximum number of multicast MRBs (that can be added in MRB-ToAddModList)
maxFSAI-MBS-r17	INTEGER ::= 64	-- Maximum number of MBS frequency selection area identities
maxNeighCellMBS-r17	INTEGER ::= 8	-- Maximum number of MBS broadcast neighbour cells
maxNrofPdcch-BlindDetectionMixed-1-r16	INTEGER ::= 7	-- Maximum number of combinations of mixed Rel-16 and Rel-15 PDCCH monitoring capabilities minus 1
maxNrofPdcch-BlindDetection-r17	INTEGER ::= 16	-- Maximum number of combinations of PDCCH blind detection monitoring capabilities
maxNrofAltitudeRanges-r18	INTEGER ::= 8	-- Maximum number of altitude ranges for altitude-based measurement configurations
maxWayPoint-r18	INTEGER ::= 20	-- Maximum number of flight path information waypoints
maxAltitude-r18	INTEGER ::= 10000	-- Maximum altitude in meters
minAltitude-r18	INTEGER ::= -420	-- Minimum altitude in meters
maxMeasSequence-r18	INTEGER ::= 64	-- Maximum number of configured sequence for measurement
maxNrofHops-1-r18	INTEGER ::= 5	-- Maximum number of Hops that can be configured for Positioning SRS Transmission
maxNrOfCellsInVA-r18	INTEGER ::= 16	-- Maximum number of cells in validity area for Positioning SRS
maxNrOfCellsInVA-Ext-r18	INTEGER ::= 16	-- Maximum number of additional cells in validity area for Positioning SRS
maxNrOfLinkedSRS-PosResourceSet-r18	INTEGER ::= 3	-- Maximum number of linked SRSPosResourceSets that can be aggregated across CCs
maxNrOfLinkedSRS-PosResSetComb-r18	INTEGER ::= 32	-- Maximum number of combinations of linked SRSPosResourceSets that can be aggregated in RRC_CONNECTED state
maxNrOfLinkedSRS-PosResSetCombInactive-r18	INTEGER ::= 16	-- Maximum number of combinations of linked SRSPosResourceSets that can be aggregated in RRC_INACTIVE state
maxCBR-ConfigDedSL-PRS-1-r18	INTEGER ::= 7	-- Maximum number of CBR ranges for dedicated SL PRS resource pool
maxCBR-LevelDedSL-PRS-1-r18	INTEGER ::= 15	-- Maximum number of CBR levels for dedicated SL PRS resource pool
maxNrofSL-PRS-TxPool-r18	INTEGER ::= 8	-- Maximum number of Tx dedicated SL-PRS resource pool for NR sidelink positioning
maxNrofSL-PRS-TxConfig-r18	INTEGER ::= 64	-- Maximum number of SL PRS transmission parameter configurations
maxNrOfVA-r18	INTEGER ::= 16	-- Maximum number of validity area
maxNrofLTM-Configs-r18	INTEGER ::= 8	-- Maximum number of LTM candidate cells
maxNrofLTM-Configs-plus1-r18	INTEGER ::= 9	-- Maximum number of LTM candidate cells plus 1
maxNrofLTM-CSI-ReportConfigurations-r18	INTEGER ::= 48	-- Maximum number of LTM CSI reporting configurations
maxNrofLTM-CSI-ReportConfigurations-1-r18	INTEGER ::= 47	-- Maximum number of LTM CSI reporting configurations minus 1
maxNrofLTM-CSI-SSB-ResourcesPerSet-r18	INTEGER ::= 512	-- Maximum number of LTM CSI SSB resource per set
maxNrofLTM-CSI-ResourceConfigurations-r18	INTEGER ::= 112	-- Maximum number of LTM CSI resource configurations
maxNrofLTM-CSI-ResourceConfigurations-1-r18	INTEGER ::= 111	-- Maximum number of LTM CSI resource configurations minus 1
maxNrofCandidateTCI-State-r18	INTEGER ::= 128	-- Maximum number of LTM TCI states
maxNrofCandidateUL-TCI-r18	INTEGER ::= 64	-- Maximum number of LTM UL TCI states

```

maxSecurityCellSet-r18          INTEGER ::= 9      -- Maximum number of cell sets for subsequent CPAC.
maxSK-Counter-r18              INTEGER ::= 8      -- Maximum number of SK-counters configured for a cell set for subsequent CPAC.
maxNrofThresholdMBS-r18        INTEGER ::= 8      -- Max number of thresholds of MBS sessions for RRC connection resume for a
-- UE receiving multicast in RRC_INACTIVE
maxNrofThresholdMBS-1-r18      INTEGER ::= 7      -- Max number of thresholds of MBS sessions for RRC connection resume for a
-- UE receiving multicast in RRC_INACTIVE minus 1
maxTN-AreaInfo-r18             INTEGER ::= 32     -- Maximum number of TN coverage areas for which assistance info is
-- provided in an NTN cell
maxNrofSetsOfCells-r18         INTEGER ::= 4      -- Maximum number of sets of cells for multi-cell PDSCH/PUSCH scheduling
maxNrofSetsOfCells-1-r18      INTEGER ::= 3      -- Maximum number of sets of cells for multi-cell PDSCH/PUSCH scheduling
-- minus 1
maxNrofCellsInSet-r18          INTEGER ::= 4      -- Maximum number of cells configured in a set of cells for multi-cell
-- PDSCH/PUSCH scheduling
maxNrofCellsInSet-1-r18        INTEGER ::= 3      -- Maximum number of cells configured in a set of cells for multi-cell
-- PDSCH/PUSCH scheduling minus 1
maxNrofCellCombos-r18          INTEGER ::= 16     -- Maximum number of combinations of co-scheduled cells for multi-cell
-- PDSCH/PUSCH scheduling
maxNrofBWPsInSetOfCells-r18    INTEGER ::= 16     -- Maximum number of BWPs configured in a set of cells for multi-cell
-- PDSCH/PUSCH scheduling
maxLowerMSD-r18                INTEGER ::= 256    -- Maximum number of lower MSD capability sets for a victim band
maxLowerMSDInfo-r18            INTEGER ::= 64     -- Maximum number of lower MSD capability sets for a band combination
maxNrofIntraEndc-Components-r17 INTEGER ::= 4     -- Maximum number of intra-band (NG)EN-DC band components in an inter-band
-- (NG)EN-DC band combination

-- TAG-MULTIPLICITY-AND-TYPE-CONSTRAINT-DEFINITIONS-STOP
-- ASN1STOP

```

— End of NR-RRC-Definitions

```

-- ASN1START

END

-- ASN1STOP

```

6.5 Short Message

Short Messages can be transmitted on PDCCH using P-RNTI with or without associated *Paging* message using Short Message field in DCI format 1_0 (see TS 38.212 [17], clause 7.3.1.2.1).

Table 6.5-1 defines Short Messages. Bit 1 is the most significant bit.

Table 6.5-1: Short Messages

Bit	Short Message
1	systemInfoModification If set to 1: indication of a BCCH modification other than <i>SIB6</i> , <i>SIB7</i> , <i>SIB8</i> and <i>posSIBs</i> .
2	etwsAndCmasIndication If set to 1: indication of an ETWS primary notification and/or an ETWS secondary notification and/or a CMAS notification.
3	stopPagingMonitoring This bit can be used for only operation with shared spectrum channel access and if <i>nrofPDCCH-MonitoringOccasionPerSSB-InPO</i> is present. If set to 1: indication that the UE may stop monitoring PDCCH occasion(s) for paging in this Paging Occasion as specified in TS 38.304 [20], clause 7.1.
4	systemInfoModification-eDRX If set to 1: indication of a BCCH modification other than <i>SIB6</i> , <i>SIB7</i> , <i>SIB8</i> and <i>posSIBs</i> . This indication applies only to UEs using IDLE eDRX cycle longer than the BCCH modification period.
5 – 8	Not used in this release of the specification, and shall be ignored by UE if received.

6.6 PC5 RRC messages

6.6.1 General message structure

– PC5-RRC-Definitions

This ASN.1 segment is the start of the PC5 RRC PDU definitions.

```
-- ASN1START
-- TAG-PC5-RRC-DEFINITIONS-START

PC5-RRC-Definitions DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    ARFCN-ValueNR,
    CellAccessRelatedInfo,
    SetupRelease,
    RRC-TransactionIdentifier,
    SN-FieldLengthAM,
    SN-FieldLengthUM,
    LogicalChannelIdentity,
    maxNrofSLRB-r16,
    maxNrofSL-RxInfoSet-r17,
    maxNrofSL-QFIs-r16,
    maxNrofSL-QFIsPerDest-r16,
    PagingCycle,
    PagingRecord,
    RSRP-Range,
    SL-MeasConfig-r16,
```

```

    SL-MeasId-r16,
    FreqBandList,
    FreqBandIndicatorNR,
    GNSS-ID-r16,
    maxNrofRelayMeas-r17,
    maxSimultaneousBands,
    maxBandComb,
    maxBands,
    maxSIB,
    maxSIB-MessagePlus1-r17,
    maxSL-LCID-r16,
    maxNrofFreqSL-1-r18,
    BandParametersSidelink-r16,
    PagingRecord-v1700,
    RLC-ParametersSidelink-r16,
    SBAS-ID-r16,
    SIB1,
    SL-DRX-ConfigUC-r17,
    SL-DRX-ConfigUC-SemiStatic-r17,
    SL-PagingIdentityRemoteUE-r17,
    SL-RLC-ChannelID-r17,
    SL-SourceIdentity-r17,
    SystemInformation,
    maxNrofSL-Dest-r16,
    SL-DestinationIdentity-r16,
    SL-RelayIndicationMP-r18,
    SL-RSRP-Range-r16,
    SL-QoS-FlowIdentity-r16,
    SL-QoS-Info-r16,
    maxNrofPhysicalResourceBlocks,
    SubcarrierSpacing
FROM NR-RRC-Definitions;

-- TAG-PC5-RRC-DEFINITIONS-STOP
-- ASN1STOP

```

— *SBCCH-SL-BCH-Message*

The *SBCCH-SL-BCH-Message* class is the set of RRC messages that may be sent from the UE to the UE via SL-BCH on the SBCCH logical channel.

```

-- ASN1START
-- TAG-SBCCH-SL-BCH-MESSAGE-START

SBCCH-SL-BCH-Message ::= SEQUENCE {
    message                SBCCH-SL-BCH-MessageType
}

SBCCH-SL-BCH-MessageType ::= CHOICE {
    c1                     CHOICE {
        masterInformationBlockSidelink    MasterInformationBlockSidelink,
        spare1 NULL
    },

```

```

    messageClassExtension SEQUENCE {}
}

-- TAG-SBCCH-SL-BCH-MESSAGE-STOP
-- ASN1STOP

```

– SCCH-Message

The *SCCH-Message* class is the set of PC5-RRC messages that may be sent from the UE to the UE for unicast of NR sidelink communication on SCCH logical channel.

```

-- ASN1START
-- TAG-SCCH-MESSAGE-START

SCCH-Message ::= SEQUENCE {
    message SCCH-MessageType
}

SCCH-MessageType ::= CHOICE {
    c1 CHOICE {
        measurementReportSidelink MeasurementReportSidelink,
        rrcReconfigurationSidelink RRCReconfigurationSidelink,
        rrcReconfigurationCompleteSidelink RRCReconfigurationCompleteSidelink,
        rrcReconfigurationFailureSidelink RRCReconfigurationFailureSidelink,
        ueCapabilityEnquirySidelink UECapabilityEnquirySidelink,
        ueCapabilityInformationSidelink UECapabilityInformationSidelink,
        uuMessageTransferSidelink-r17 UuMessageTransferSidelink-r17,
        remoteUEInformationSidelink-r17 RemoteUEInformationSidelink-r17
    },
    messageClassExtension CHOICE {
        c2 CHOICE {
            notificationMessageSidelink-r17 NotificationMessageSidelink-r17,
            ueAssistanceInformationSidelink-r17 UEAssistanceInformationSidelink-r17,
            ueInformationRequestSidelink-r18 UEInformationRequestSidelink-r18,
            ueInformationResponseSidelink-r18 UEInformationResponseSidelink-r18, spare4 NULL, spare3 NULL, spare2 NULL, spare1 NULL
        },
        messageClassExtensionFuture-r17 SEQUENCE {}
    }
}

-- TAG-SCCH-MESSAGE-STOP
-- ASN1STOP

```

6.6.2 Message definitions

– MasterInformationBlockSidelink

The *MasterInformationBlockSidelink* includes the system information transmitted by a UE via SL-BCH.

Signalling radio bearer: N/A

RLC-SAP: TM

Logical channel: SBCCH

Direction: UE to UE

MasterInformationBlockSidelink

```
-- ASN1START
-- TAG-MASTERINFORMATIONBLOCKSIDELINK-START

MasterInformationBlockSidelink ::=
    sl-TDD-Config-r16
    inCoverage-r16
    directFrameNumber-r16
    slotIndex-r16
    reservedBits-r16
}

-- TAG-MASTERINFORMATIONBLOCKSIDELINK-STOP
-- ASN1STOP
```

MasterInformationBlockSidelink field descriptions
directFrameNumber Indicates the frame number in which S-SSB transmitted.
inCoverage Value true indicates that the UE transmitting the <i>MasterInformationBlockSidelink</i> is in network coverage, or UE selects GNSS timing as the synchronization reference source.
slotIndex Indicates the slot index in which S-SSB transmitted.

– **MeasurementReportSidelink**

The *MeasurementReportSidelink* message is used for the indication of measurement results of NR sidelink.

Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: UE to UE

MeasurementReportSidelink message

```

-- ASN1START
-- TAG-MEASUREMENTREPORTSIDELINK-START

MeasurementReportSidelink ::=
    criticalExtensions
        measurementReportSidelink-r16
        criticalExtensionsFuture
    }

MeasurementReportSidelink-r16-IEs ::=
    sl-MeasResults-r16
    lateNonCriticalExtension
    nonCriticalExtension
}

SL-MeasResults-r16 ::=
    sl-MeasId-r16
    sl-MeasResult-r16
    ...
}

SL-MeasResult-r16 ::=
    sl-ResultDMRS-r16
    ...,
    [[
        sl-Result-SL-PRS-r18
    ]]
}

SL-MeasQuantityResult-r16 ::=
    sl-RSRP-r16
    ...,
    [[
        sl-RSRP-DedicatedSL-PRS-RP-r18
    ]]
}

SL-MeasResultListRelay-r17 ::=

SL-MeasResultRelay-r17 ::=
    cellIdentity-r17
    sl-RelayUE-Identity-r17
    sl-MeasResult-r17
    ...,
    [[
        sl-MeasQuantity-r18
        sl-RelayIndicationMP-r18
    ]]
}

-- TAG-MEASUREMENTREPORTSIDELINK-STOP

```

SEQUENCE {
CHOICE {
MeasurementReportSidelink-r16-IEs,
SEQUENCE {}
}

SEQUENCE {
SL-MeasResults-r16,
OCTET STRING
SEQUENCE{}
} OPTIONAL,
OPTIONAL

SEQUENCE {
SL-MeasId-r16,
SL-MeasResult-r16,
...
}

SEQUENCE {
SL-MeasQuantityResult-r16
...
SL-MeasQuantityResult-r16
} OPTIONAL,
OPTIONAL

SEQUENCE {
RSRP-Range
...
SL-RSRP-Range-r16
} OPTIONAL,
OPTIONAL

SEQUENCE (SIZE (1..maxNrofRelayMeas-r17)) OF SL-MeasResultRelay-r17

SEQUENCE {
CellAccessRelatedInfo,
SL-SourceIdentity-r17,
SL-MeasResult-r16,
...
ENUMERATED { sl-rsrp, sd-rsrp }
SL-RelayIndicationMP-r18
} OPTIONAL,
OPTIONAL

-- ASN1STOP

MeasurementReportSidelink field descriptions
sl-MeasId Identifies the sidelink measurement identity for which the reporting is being performed.
sl-MeasResult Measured RSRP results of a unicast destination.
sl-RSRP-DedicatedSL-PRS-RP Measured SL PRS-based filtered RSRP.
sl-RelayIndicationMP Indicate the reported L2 U2N Relay UE supports RRC connection establishment/resume for MP operation triggered by receiving <i>RemoteUEInformationSidelink</i> containing the <i>connectionForMP</i> as specified in 5.3.3.1a and 5.3.13.1a in Rel-18.

– NotificationMessageSidelink

The *NotificationMessageSidelink* message is used to send notification message from U2N Relay UE to the connected U2N Remote UE or from U2U Relay UE to the connected U2U Remote UE.

Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: U2N Relay UE to U2N Remote UE or U2U Relay UE to U2U Remote UE

NotificationMessageSidelink message

```
-- ASN1START
-- TAG-NOTIFICATIONMESSAGESIDELINK-START

NotificationMessageSidelink-r17 ::=
    criticalExtensions
        notificationMessageSidelink-r17
        criticalExtensionsFuture
    }
}

NotificationMessageSidelink-r17-IEs ::=
    indicationType-r17
    lateNonCriticalExtension
    nonCriticalExtension
}

SEQUENCE {
    CHOICE {
        NotificationMessageSidelink-r17-IEs,
        SEQUENCE {}
    }
}

SEQUENCE {
    ENUMERATED {
        relayUE-Uu-RLF, relayUE-HO, relayUE-CellReselection,
        relayUE-Uu-RRC-Failure
    }
    OCTET STRING
    NotificationMessageSidelink-v1800-IEs
}
OPTIONAL, -- Need N
OPTIONAL,
OPTIONAL
```

```

NotificationMessageSidelink-v1800-IEs ::= SEQUENCE {
    sl-IndicationType-r18          ENUMERATED {relayUE-PC5-RLF, spare1} OPTIONAL, -- Need N
    sl-DestinationIdentityRemoteUE-r18 SL-DestinationIdentity-r16    OPTIONAL, -- Need N
    nonCriticalExtension           SEQUENCE {}                        OPTIONAL
}
-- TAG-NOTIFICATIONMESSAGESIDELINK -STOP
-- ASN1STOP

```

– RemoteUEInformationSidelink

The *RemoteUEInformationSidelink* message is used to request SIB(s) or provide paging related information, or provide other remote UE information, as specified in clause 5.8.9.8.1.

Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: L2 U2N Remote UE to L2 U2N Relay UE, or L2 U2U Remote UE to L2 U2U Relay UE

RemoteUEInformationSidelink message

```

-- ASN1START
-- TAG-REMOTEUEINFORMATIONSIDELINK-START

RemoteUEInformationSidelink-r17 ::=
    criticalExtensions
        remoteUEInformationSidelink-r17
        criticalExtensionsFuture
    }

RemoteUEInformationSidelink-r17-IEs ::=
    sl-RequestedSIB-List-r17
    sl-PagingInfo-RemoteUE-r17
    lateNonCriticalExtension
    nonCriticalExtension

RemoteUEInformationSidelink-v1800-IEs ::=
    sl-RequestedPosSIB-List-r18
    sl-SFN-DFN-OffsetRequested-r18
    connectionForMP-r18
    sl-DestinationIdentityRemoteUE-r18
    nonCriticalExtension

SL-RequestedSIB-List-r17 ::=

```

```

SEQUENCE {
    CHOICE {
        RemoteUEInformationSidelink-r17-IEs,
        SEQUENCE {}
    }
}

SEQUENCE {
    SetupRelease { SL-RequestedSIB-List-r17}          OPTIONAL, -- Need M
    SetupRelease { SL-PagingInfo-RemoteUE-r17}        OPTIONAL, -- Need M
    OCTET STRING                                       OPTIONAL,
    RemoteUEInformationSidelink-v1800-IEs              OPTIONAL
}

SEQUENCE {
    SetupRelease { SL-RequestedPosSIB-List-r18 }      OPTIONAL, -- Need M
    ENUMERATED { true }                               OPTIONAL, -- Need R
    ENUMERATED {true}                                 OPTIONAL, -- Need N
    SL-DestinationIdentity-r16                        OPTIONAL, -- Need N
    SEQUENCE {}                                       OPTIONAL
}

SEQUENCE (SIZE (maxSIB-MessagePlus1-r17)) OF SL-SIB-ReqInfo-r17

```

```

SL-PagingInfo-RemoteUE-r17 ::=
    sl-PagingIdentityRemoteUE-r17
    sl-PagingCycleRemoteUE-r17
}

SL-SIB-ReqInfo-r17 ::=
    ENUMERATED { sib1, sib2, sib3, sib4, sib5, sib6, sib7, sib8, sib9, sib10, sib11, sib12, sib13,
        sib14, sib15, sib16, sib17, sib18, sib19, sib20, sib21, sibNotReq11, sibNotReq10,
        sibNotReq9, sibNotReq8, sibNotReq7, sibNotReq6, sibNotReq5, sibNotReq4,
        sibNotReq3, sibNotReq2, sibNotReq1, ..., sib17bis-v1820 }

SL-RequestedPosSIB-List-r18 ::=
    SEQUENCE (SIZE (1..maxSIB)) OF SL-PosSIB-ReqInfo-r18

SL-PosSIB-ReqInfo-r18 ::=
    gnss-id-r18
    sbas-id-r18
    posSibType-r18
}

-- TAG-REMOTEUEINFORMATIONSIDELINK-STOP
-- ASN1STOP

```

```

SEQUENCE {
    SL-PagingIdentityRemoteUE-r17,
    PagingCycle
}
OPTIONAL -- Need M

ENUMERATED { sib1, sib2, sib3, sib4, sib5, sib6, sib7, sib8, sib9, sib10, sib11, sib12, sib13,
    sib14, sib15, sib16, sib17, sib18, sib19, sib20, sib21, sibNotReq11, sibNotReq10,
    sibNotReq9, sibNotReq8, sibNotReq7, sibNotReq6, sibNotReq5, sibNotReq4,
    sibNotReq3, sibNotReq2, sibNotReq1, ..., sib17bis-v1820 }

SEQUENCE (SIZE (1..maxSIB)) OF SL-PosSIB-ReqInfo-r18

SEQUENCE {
    GNSS-ID-r16
    SBAS-ID-r16
    posSibType1-1, posSibType1-2, posSibType1-3, posSibType1-4, posSibType1-5, posSibType1-6,
    posSibType1-7, posSibType1-8, posSibType1-9, posSibType1-10, posSibType1-11,
    posSibType1-12, posSibType2-1, posSibType2-2, posSibType2-3, posSibType2-4, posSibType2-5,
    posSibType2-6, posSibType2-7, posSibType2-8, posSibType2-9, posSibType2-10, posSibType2-11,
    posSibType2-12, posSibType2-13, posSibType2-14, posSibType2-15, posSibType2-16,
    posSibType2-17, posSibType2-17a, posSibType2-18, posSibType2-18a, posSibType2-19,
    posSibType2-20, posSibType2-20a, posSibType2-21, posSibType2-22, posSibType2-23,
    posSibType2-24, posSibType2-25, posSibType2-26, posSibType2-27, posSibType3-1,
    posSibType4-1, posSibType5-1, posSibType6-1, posSibType6-2, posSibType6-3, posSibType6-4,
    posSibType6-5, posSibType6-6, posSibType6-7, posSibType7-1, posSibType7-2, posSibType7-3,
    posSibType7-4, spare9, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1,
    ... }
OPTIONAL, -- Need R
OPTIONAL, -- Cond GNSS-ID-SBAS

```

RemoteUEInformationSidelink-IEs field descriptions	
connectionForMP	Indicates the connected L2 U2N Relay UE by the L2 U2N Remote UE that the access is for MP.
sl-DestinationIdentityRemoteUE	Indicates the peer L2 U2U Remote UE upon end-to-end PC5 connection failure or release.
sl-PagingCycleRemoteUE	Indicates the L2 U2N Remote UE's UE specific DRX cycle as the minimum value of the one provided by upper layers (if configured) and the one provided by RRC layer (if configured). Value rf32 corresponds to 32 radio frames, value rf64 corresponds to 64 radio frames and so on.
sl-PagingIdentityRemoteUE	Indicates the L2 U2N Remote UE's paging UE ID.
sl-PagingInfo-RemoteUE	Indicates the paging information used by L2 U2N Relay UE to perform the connected L2 U2N Remote UE's paging monitoring.
sl-RequestedPosSIB-List	Contains a list of requested PosSIBs.
sl-RequestedSIB-List	Contains a list of requested SIBs.
sl-SFN-DFN-OffsetRequested	If present, this field indicates that the L2 U2N Remote UE requests the L2 U2N Relay UE to provide the SFN-DFN offset in a subsequent <i>RRCReconfigurationSidelink</i> message.
SL-SIB-ReqInfo	Indicates the requested SIB type. Values sibNotReq11, sibNotReq10, ..., sibNotReq1 shall be ignored by L2 U2N relay UE (i.e., no SIB requested).

Conditional presence	Explanation
GNSS-ID-SBAS	The field is mandatory present if <i>gnss-id</i> is set to <i>sbas</i> . It is absent otherwise.

– *RRCReconfigurationSidelink*

The *RRCReconfigurationSidelink* message is the command to AS configuration of the PC5 RRC connection. It is only applied to unicast of NR sidelink communication.

Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: UE to UE

RRCReconfigurationSidelink message

-- ASN1START
-- TAG-RRCRECONFIGURATIONSIDELINK-START

```
RRCReconfigurationSidelink ::=
  rrc-TransactionIdentifier-r16
  criticalExtensions
  SEQUENCE {
    RRC-TransactionIdentifier,
    CHOICE {
```

```

rrcReconfigurationSidelink-r16
criticalExtensionsFuture
}
}

RRCReconfigurationSidelink-r16-IEs ::= SEQUENCE {
    slrb-ConfigToAddModList-r16          SEQUENCE (SIZE (1..maxNrofSLRB-r16)) OF SLRB-Config-r16          OPTIONAL, -- Need N
    slrb-ConfigToReleaseList-r16         SEQUENCE (SIZE (1..maxNrofSLRB-r16)) OF SLRB-PC5-ConfigIndex-r16  OPTIONAL, -- Need N
    sl-MeasConfig-r16                    SetupRelease {SL-MeasConfig-r16}                                OPTIONAL, -- Need M
    sl-CSI-RS-Config-r16                 SetupRelease {SL-CSI-RS-Config-r16}                                OPTIONAL, -- Need M
    sl-ResetConfig-r16                   ENUMERATED {true}                                           OPTIONAL, -- Need N
    sl-LatencyBoundCSI-Report-r16        INTEGER (3..160)                                           OPTIONAL, -- Need M
    lateNonCriticalExtension              OCTET STRING                                              OPTIONAL,
    nonCriticalExtension                  RRCReconfigurationSidelink-v1700-IEs                        OPTIONAL
}

RRCReconfigurationSidelink-v1700-IEs ::= SEQUENCE {
    sl-DRX-ConfigUC-PC5-r17              SetupRelease { SL-DRX-ConfigUC-r17 }                                OPTIONAL, -- Need M
    sl-LatencyBoundIUC-Report-r17        SetupRelease { SL-LatencyBoundIUC-Report-r17 }                OPTIONAL, -- Need M
    sl-RLC-ChannelToReleaseListPC5-r17   SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-ChannelID-r17          OPTIONAL, -- Need N
    sl-RLC-ChannelToAddModListPC5-r17   SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-ChannelConfigPC5-r17  OPTIONAL, -- Need N
    nonCriticalExtension                  RRCReconfigurationSidelink-v1800-IEs                        OPTIONAL
}

RRCReconfigurationSidelink-v1800-IEs ::= SEQUENCE {
    sl-SFN-DFN-Offset-r18                SetupRelease { SL-SFN-DFN-Offset-r18 }                                OPTIONAL, -- Need M
    sl-CarrierToAddModList-r18           SEQUENCE (SIZE (1..maxNrofFreqSL-1-r18)) OF SL-CarrierConfig-r18          OPTIONAL, -- Need N
    sl-CarrierToReleaseList-r18          SEQUENCE (SIZE (1..maxNrofFreqSL-1-r18)) OF SL-CarrierId-r18           OPTIONAL, -- Need N
    sl-RLC-BearerToAddModList-r18        SEQUENCE (SIZE(1..maxNrofSLRB-r16)) OF SL-RLC-BearerConfig-r18          OPTIONAL, -- Need N
    sl-RLC-BearerToReleaseList-r18       SEQUENCE (SIZE(1..maxNrofSLRB-r16)) OF SL-RLC-BearerConfigIndex-r18  OPTIONAL, -- Need N
    sl-LocalID-PairList-r18              SEQUENCE (SIZE (1..maxNrofSL-Dest-r16)) OF SL-SRAP-ConfigPC5-r18    OPTIONAL, -- Need N
    nonCriticalExtension                  SEQUENCE {}                                           OPTIONAL
}

SL-CarrierConfig-r18 ::= SEQUENCE {
    sl-CarrierId-r18                     SL-CarrierId-r18,
    sl-OffsetToCarrier-r18                INTEGER (0..2199),
    subcarrierSpacing-r18                 SubcarrierSpacing,
    carrierBandwidth-r18                  INTEGER (1..maxNrofPhysicalResourceBlocks),
    sl-AbsoluteFrequencyPointA-r18        ARFCN-ValueNR
}

SL-CarrierId-r18 ::= INTEGER (1..maxNrofFreqSL-1-r18)

SL-RLC-BearerConfig-r18 ::= CHOICE {
    srb SEQUENCE {
        sl-SRB-IdentityWithDuplication    INTEGER (1..3),
        sl-RLC-BearerConfigIndex-r18      SL-RLC-BearerConfigIndex-r18,
        ...
    },
    drb SEQUENCE {
        slrb-PC5-ConfigIndex-r18          SLRB-PC5-ConfigIndex-r16,
        sl-RLC-BearerConfigIndex-r18      SL-RLC-BearerConfigIndex-r18,
        sl-RLC-ConfigPC5-r18              SL-RLC-ConfigPC5-r16
    }
}
OPTIONAL, -- Need M

```

```

        sl-MAC-LogicalChannelConfigPC5-r18  SL-LogicalChannelConfigPC5-r16
        ...
    }
}

SL-RLC-BearerConfigIndex-r18 ::=          INTEGER (1..maxSL-LCID-r16)

SL-LatencyBoundIUC-Report-r17 ::=          INTEGER (3..160)

SLRB-Config-r16 ::=                      SEQUENCE {
    slrb-PC5-ConfigIndex-r16              SLRB-PC5-ConfigIndex-r16,
    sl-SDAP-ConfigPC5-r16                  SL-SDAP-ConfigPC5-r16,
    sl-PDCP-ConfigPC5-r16                  SL-PDCP-ConfigPC5-r16,
    sl-RLC-ConfigPC5-r16                   SL-RLC-ConfigPC5-r16,
    sl-MAC-LogicalChannelConfigPC5-r16     SL-LogicalChannelConfigPC5-r16
    ...
}

SLRB-PC5-ConfigIndex-r16 ::=              INTEGER (1..maxNrofSLRB-r16)

SL-SDAP-ConfigPC5-r16 ::=                  SEQUENCE {
    sl-MappedQoS-FlowsToAddList-r16         SEQUENCE (SIZE (1.. maxNrofSL-QFIsPerDest-r16)) OF SL-PQFI-r16
    sl-MappedQoS-FlowsToReleaseList-r16     SEQUENCE (SIZE (1.. maxNrofSL-QFIsPerDest-r16)) OF SL-PQFI-r16
    sl-SDAP-Header-r16                     ENUMERATED {present, absent},
    ...
}

SL-PDCP-ConfigPC5-r16 ::=                  SEQUENCE {
    sl-PDCP-SN-Size-r16                     ENUMERATED {len12bits, len18bits}
    sl-OutOfOrderDelivery-r16               ENUMERATED { true }
    ...
}

SL-RLC-ConfigPC5-r16 ::=                    CHOICE {
    sl-AM-RLC-r16                            SEQUENCE {
        sl-SN-FieldLengthAM-r16              SN-FieldLengthAM
        ...
    },
    sl-UM-Bi-Directional-RLC-r16             SEQUENCE {
        sl-SN-FieldLengthUM-r16              SN-FieldLengthUM
        ...
    },
    sl-UM-Uni-Directional-RLC-r16            SEQUENCE {
        sl-SN-FieldLengthUM-r16              SN-FieldLengthUM
        ...
    }
}

SL-LogicalChannelConfigPC5-r16 ::=          SEQUENCE {
    sl-LogicalChannelIdentity-r16            LogicalChannelIdentity,
    ...
    [[
    sl-LogicalChannelIdentity-v1800          INTEGER (33..38)
    ]]
}

```

OPTIONAL, -- Need M

OPTIONAL, -- Need M

OPTIONAL, -- Need M

OPTIONAL, -- Need M

OPTIONAL, -- Need M

OPTIONAL, -- Need N

OPTIONAL, -- Need N

OPTIONAL, -- Need M

OPTIONAL, -- Need R

OPTIONAL, -- Need M

OPTIONAL, -- Need M

OPTIONAL, -- Need M

OPTIONAL -- Need M

```

}

SL-PQFI-r16 ::= INTEGER (1..64)

SL-CSI-RS-Config-r16 ::= SEQUENCE {
    sl-CSI-RS-FreqAllocation-r16 CHOICE {
        sl-OneAntennaPort-r16 BIT STRING (SIZE (12)),
        sl-TwoAntennaPort-r16 BIT STRING (SIZE (6))
    }
    sl-CSI-RS-FirstSymbol-r16 INTEGER (3..12)
    ...
}

SL-RLC-ChannelConfigPC5-r17 ::= SEQUENCE {
    sl-RLC-ChannelID-PC5-r17 SL-RLC-ChannelID-r17,
    sl-RLC-ConfigPC5-r17 SL-RLC-ConfigPC5-r16
    sl-MAC-LogicalChannelConfigPC5-r17 SL-LogicalChannelConfigPC5-r16
    ...
}

SL-SFN-DFN-Offset-r18 ::= SEQUENCE {
    sl-FrameOffset-r18 INTEGER (0..1023),
    sl-SubframeOffset-r18 INTEGER (0..9),
    sl-SlotOffset-r18 INTEGER (0..31)
}

SL-SRAP-ConfigPC5-r18 ::= SEQUENCE {
    sl-PeerRemoteUE-L2Identity-r18 SL-DestinationIdentity-r16
    sl-PeerRemoteUE-LocalIdentity-r18 INTEGER (0..255)
    sl-RemoteUE-L2Identity-r18 SL-SourceIdentity-r17
    sl-RemoteUE-LocalIdentity-r18 INTEGER (0..255)
    ...
}

-- TAG-RRCRECONFIGURATIONSIDELINK-STOP
-- ASN1STOP

```

OPTIONAL, -- Need M
OPTIONAL, -- Need M

OPTIONAL, -- Need M
OPTIONAL, -- Need M

OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M
OPTIONAL, -- Need M

<i>RRCReconfigurationSidelink</i> field descriptions
<i>sl-AbsoluteFrequencyPointA</i> Absolute frequency of the reference resource block (Common RB 0). Its lowest subcarrier is also known as Point A.
<i>sl-CarrierToAddModList</i> Indicate the carrier(s) to be added/modified for transmission by UE transmitting <i>RRCReconfigurationSidelink</i> message, corresponding to the frequency in <i>sl-FreqInfoListSizeExt</i> broadcast in <i>SIB12</i> or corresponding to the frequency in <i>sl-PreconfigFreqInfoListSizeExt</i> in <i>SL-PreconfigurationNR</i> .
<i>sl-CarrierToReleaseList</i> Indicate the carrier(s) to be released for the transmission by UE transmitting <i>RRCReconfigurationSidelink</i> message.
<i>sl-CSI-RS-FreqAllocation</i> Indicates the frequency domain position for sidelink CSI-RS.
<i>sl-CSI-RS-FirstSymbol</i> Indicates the position of first symbol of sidelink CSI-RS.
<i>sl-DRX-ConfigUC-PC5</i> Indicates the NR sidelink DRX configuration for unicast communication, as specified in TS 38.321 [3]
<i>sl-LatencyBoundCSI-Report</i> Indicates the latency bound of SL CSI report from the associated SL CSI triggering in terms of number of slots.
<i>sl-LatencyBoundIUC-Report</i> Indicates the latency bound of SL Inter-UE coordination report from the associated SL Inter-UE coordination explicit request triggering in terms of number of slots.
<i>sl-LocalID-PairList</i> Indicate a list of local ID pair which is assigned for one end-to-end PC5 connection by the L2 U2U Relay UE.
<i>sl-LogicalChannelIdentity</i> Indicates the identity of the sidelink logical channel, as specified in TS 38.321 [3], clause 6.2.4. If the <i>sl-LogicalChannelIdentity-v1800</i> is present, the UE shall ignore the <i>sl-LogicalChannelIdentity-r16</i> field.
<i>sl-MappedQoS-FlowsToAddList</i> Indicate the QoS flows to be mapped to the configured sidelink DRB. Each entry is indicated by the <i>SL-PQFI</i> , which is used between UEs, as defined in TS 23.287 [55].
<i>sl-MappedQoS-FlowsToReleaseList</i> Indicate the QoS flows to be released from the configured sidelink DRB. Each entry is indicated by the <i>SL-PQFI</i> , which is used between UEs, as defined in TS 23.287 [55].
<i>sl-MeasConfig</i> Indicates the sidelink measurement configuration for the unicast destination.
<i>sl-OffsetToCarrier</i> Offset in frequency domain between Point A (lowest subcarrier of common RB 0) and the lowest usable subcarrier on this carrier in number of PRBs (using the subcarrierSpacing defined for this carrier). The maximum value corresponds to 275*8-1. See TS 38.211 [16], clause 4.4.2.
<i>sl-OutOfOrderDelivery</i> Indicates whether or not outOfOrderDelivery specified in TS 38.323 [5] is configured. This field should be either always present or always absent, after the sidelink radio bearer is established.
<i>sl-PDCP-SN-Size</i> Indicates the PDCP SN size of the configured sidelink DRB.
<i>sl-Resetconfig</i> Indicates that the full configuration should be applicable for the <i>RRCReconfigurationSidelink</i> message.
<i>sl-RLC-BearerToAddModList</i> Indicate the additional Sidelink RLC bearer to be added / modified for the configured sidelink SRB/DRB.
<i>sl-RLC-BearerToReleaseList</i> Indicate the additional Sidelink RLC bearer to be released for the configured sidelink SRB/DRB.
<i>sl-SDAP-Header</i> Indicates whether or not a SDAP header is present on this sidelink DRB.

sl-SFN-DFN-Offset Indicates the SFN-DFN offset to be used for determining the SFN timeline based on the DFN timeline.
sl-SRB-IdentityWithDuplication Indicate the sidelink SRB for which duplication is configured.
slrb-PC5-ConfigIndex Indicates the identity of the configuration of a sidelink DRB. In case of L2 U2U relay, only value 4-31 can be signaled for an end-to-end sidelink DRB, and all other values are reserved.

SL-SRAP-ConfigPC5 field descriptions
sl-RemoteUE-LocalIdentity Indicates the local UE ID of the L2 U2U Remote UE used in SRAP as specified in TS 38.351 [66].
sl-RemoteUE-L2Identity Indicates the Source L2 ID of the L2 U2U Remote UE as specified in TS 23.304 [65].
sl-PeerRemoteUE-LocalIdentity Indicates the local UE ID of the peer L2 U2U Remote UE used in SRAP as specified in TS 38.351 [66].
sl-PeerRemoteUE-L2Identity Indicates the destination L2 ID identifying the peer L2 U2U Remote UE as specified in TS 23.304 [65].

– *RRCReconfigurationCompleteSidelink*

The *RRCReconfigurationCompleteSidelink* message is used to confirm the successful completion of a PC5 RRC AS reconfiguration. It is only applied to unicast of NR sidelink communication.

- Signalling radio bearer: SL-SRB3
- RLC-SAP: AM
- Logical channel: SCCH
- Direction: UE to UE

RRCReconfigurationCompleteSidelink message

```
-- ASN1START
-- TAG-RRCRECONFIGURATIONCOMPLETESIDELINK-START

RRCReconfigurationCompleteSidelink ::= SEQUENCE {
    rrc-TransactionIdentifier-r16          RRC-TransactionIdentifier,
    criticalExtensions                     CHOICE {
        rrcReconfigurationCompleteSidelink-r16 RRCReconfigurationCompleteSidelink-r16-IEs,
        criticalExtensionsFuture                SEQUENCE {}
    }
}

RRCReconfigurationCompleteSidelink-r16-IEs ::= SEQUENCE {
    lateNonCriticalExtension OCTET STRING OPTIONAL,
```

```

    nonCriticalExtension
  }

RRCReconfigurationCompleteSidelink-v1710-IEs ::=
  dummy
  nonCriticalExtension
}

RRCReconfigurationCompleteSidelink-v1720-IEs ::=
  sl-DRX-ConfigReject-v1720
  nonCriticalExtension
}

-- TAG-RRCRECONFIGURATIONCOMPLETESIDELINK-STOP
-- ASN1STOP
```

RRCReconfigurationCompleteSidelink field descriptions
dummy This field is not used in the specification. The UE shall not include this field. If received it shall be ignored by the peer UE.
sl-DRX-ConfigReject Indicates the rejection of sidelink DRX configuration received from the peer UE for the corresponding NR sidelink unicast communication.

– RRCReconfigurationFailureSidelink

The *RRCReconfigurationFailureSidelink* message is used to indicate the failure of a PC5 RRC AS reconfiguration. It is only applied to unicast of NR sidelink communication.

- Signalling radio bearer: SL-SRB3
- RLC-SAP: AM
- Logical channel: SCCH
- Direction: UE to UE

RRCReconfigurationFailureSidelink message

```

-- ASN1START
-- TAG-RRCRECONFIGURATIONFAILURESIDELINK-START

RRCReconfigurationFailureSidelink ::=
  rrc-TransactionIdentifier-r16
  criticalExtensions
    rrcReconfigurationFailureSidelink-r16
    criticalExtensionsFuture
  }
}
```

```
RRCReconfigurationFailureSidelink-r16-IEs ::= SEQUENCE {
    lateNonCriticalExtension OCTET STRING OPTIONAL,
    nonCriticalExtension SEQUENCE {} OPTIONAL
}

-- TAG-RRCRECONFIGURATIONFAILURESIDELINK-STOP
-- ASN1STOP
```

— *UEAssistanceInformationSidelink*

The *UEAssistanceInformationSidelink* message may include sidelink DRX assistance information used to determine the sidelink DRX configuration.

- Signalling radio bearer: SL-SRB3
- RLC-SAP: AM
- Logical channel: SCCH
- Direction: UE to UE

UEAssistanceInformationSidelink message

```
-- ASN1START
-- TAG-UEASSISTANCEINFORMATIONSIDELINK-START

UEAssistanceInformationSidelink-r17 ::= SEQUENCE {
    criticalExtensions CHOICE {
        ueAssistanceInformationSidelink-r17 UEAssistanceInformationSidelink-r17-IEs,
        criticalExtensionsFuture SEQUENCE {}
    }
}

UEAssistanceInformationSidelink-r17-IEs ::= SEQUENCE {
    sl-PreferredDRX-ConfigList-r17 SEQUENCE (SIZE (1..maxNrofSL-RxInfoSet-r17)) OF SL-DRX-ConfigUC-SemiStatic-r17 OPTIONAL, -- Need R
    lateNonCriticalExtension OCTET STRING OPTIONAL,
    nonCriticalExtension SEQUENCE {} OPTIONAL
}

-- TAG-UEASSISTANCEINFORMATIONSIDELINK-STOP
-- ASN1STOP
```

UEAssistanceInformationSidelink field descriptions
sl-PreferredDRX-ConfigList Indicates a list of the reference sidelink DRX configurations provided by a UE to a peer UE for determining the sidelink DRX configuration.

– *UECapabilityEnquirySidelink*

The *UECapabilityEnquirySidelink* message is used to request UE sidelink capabilities. It is only applied to unicast of NR sidelink communication.

- Signalling radio bearer: SL-SRB3
- RLC-SAP: AM
- Logical channel: SCCH
- Direction: UE to UE

UECapabilityEnquirySidelink message

```
-- ASN1START
-- TAG-UECAPABILITYENQUIRYSIDELINK-START

UECapabilityEnquirySidelink ::=
    rrc-TransactionIdentifier-r16
    criticalExtensions
        ueCapabilityEnquirySidelink-r16
        criticalExtensionsFuture
    }
}

UECapabilityEnquirySidelink-r16-IEs ::= SEQUENCE {
    frequencyBandListFilterSidelink-r16 FreqBandList
    ue-CapabilityInformationSidelink-r16 OCTET STRING
    lateNonCriticalExtension OCTET STRING
    nonCriticalExtension SEQUENCE{}
}

-- TAG-UECAPABILITYENQUIRYSIDELINK-STOP
-- ASN1STOP
```

UECapabilityEnquirySidelink-IEs field descriptions
frequencyBandListFilterSidelink This field is used to indicate frequency bands for which the peer UE is requested to provide supported bands and band combinations for NR sidelink communications. The UE always provides this field.
ue-CapabilityInformationSidelink This field indicates the <i>UECapabilityInformationSidelink</i> message to provide the UE sidelink capability, which can be optionally sent together with <i>UECapabilityEnquirySidelink</i> .

– *UECapabilityInformationSidelink*

The *UECapabilityInformationSidelink* message is used to transfer UE radio access capabilities. It is only applied to unicast of NR sidelink communication.

- Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: UE to UE

***UECapabilityInformationSidelink* message**

```

-- ASN1START
-- TAG-UECAPABILITYINFORMATIONSIDELINK-START

UECapabilityInformationSidelink ::= SEQUENCE {
    rrc-TransactionIdentifier-r16      RRC-TransactionIdentifier,
    criticalExtensions                 CHOICE {
        ueCapabilityInformationSidelink-r16-IEs,
        criticalExtensionsFuture         SEQUENCE {}
    }
}

UECapabilityInformationSidelink-r16-IEs ::= SEQUENCE {
    accessStratumReleaseSidelink-r16  AccessStratumReleaseSidelink-r16,
    pdcp-ParametersSidelink-r16       PDCP-ParametersSidelink-r16,
    rlc-ParametersSidelink-r16         RLC-ParametersSidelink-r16,
    supportedBandCombinationListSidelinkNR-r16 BandCombinationListSidelinkNR-r16,
    supportedBandListSidelink-r16     SEQUENCE (SIZE (1..maxBands)) OF BandSidelinkPC5-r16,
    appliedFreqBandListFilter-r16     FreqBandList,
    lateNonCriticalExtension           OCTET STRING,
    nonCriticalExtension               UECapabilityInformationSidelink-v1700-IEs
}

UECapabilityInformationSidelink-v1700-IEs ::= SEQUENCE {
    mac-ParametersSidelink-r17        MAC-ParametersSidelink-r17,
    supportedBandCombinationListSidelinkNR-v1710 BandCombinationListSidelinkNR-v1710,
    nonCriticalExtension              UECapabilityInformationSidelink-v1800-IEs
}

UECapabilityInformationSidelink-v1800-IEs ::= SEQUENCE {
    sfn-DFN-OffsetSupported-r18       ENUMERATED { supported },
    posSIB-ForwardingSupported-r18    ENUMERATED { supported },
    nonCriticalExtension              SEQUENCE {}
}

MAC-ParametersSidelink-r17 ::= SEQUENCE {
    drx-OnSidelink-r17                ENUMERATED {supported},
    ...
}

AccessStratumReleaseSidelink-r16 ::= ENUMERATED { rel16, rel17, rel18, spare5, spare4, spare3, spare2, spare1, ... }

PDCP-ParametersSidelink-r16 ::= SEQUENCE {
    outOfOrderDeliverySidelink-r16    ENUMERATED {supported}
    ...
}

```

```

    pdcp-DuplicationSRB-sidelink-r18      ENUMERATED {supported}      OPTIONAL,
    pdcp-DuplicationDRB-sidelink-r18      ENUMERATED {supported}      OPTIONAL
  ]]
}

BandCombinationListSidelinkNR-r16 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombinationParametersSidelinkNR-r16

BandCombinationListSidelinkNR-v1710 ::= SEQUENCE (SIZE (1..maxBandComb)) OF BandCombinationParametersSidelinkNR-v1710

BandCombinationParametersSidelinkNR-r16 ::= SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParametersSidelink-r16

BandCombinationParametersSidelinkNR-v1710 ::= SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandParametersSidelink-v1710

BandParametersSidelink-v1710 ::= SEQUENCE {
  --32-5a-1
  tx-IUC-Scheme1-Mode2Sidelink-r17      ENUMERATED {supported}      OPTIONAL,
  --32-5b-1
  tx-IUC-Scheme2-Mode2Sidelink-r17      ENUMERATED {n4, n8, n16}      OPTIONAL
}

BandSidelinkPC5-r16 ::= SEQUENCE {
  freqBandSidelink-r16                  FreqBandIndicatorNR,
  --15-1
  sl-Reception-r16                      SEQUENCE {
    harq-RxProcessSidelink-r16          ENUMERATED {n16, n24, n32, n64},
    pscch-RxSidelink-r16                ENUMERATED {value1, value2},
    scs-CP-PatternRxSidelink-r16        CHOICE {
      fr1-r16                           SEQUENCE {
        scs-15kHz-r16                   BIT STRING (SIZE (16))      OPTIONAL,
        scs-30kHz-r16                   BIT STRING (SIZE (16))      OPTIONAL,
        scs-60kHz-r16                   BIT STRING (SIZE (16))      OPTIONAL
      },
      fr2-r16                           SEQUENCE {
        scs-60kHz-r16                   BIT STRING (SIZE (16))      OPTIONAL,
        scs-120kHz-r16                  BIT STRING (SIZE (16))      OPTIONAL
      }
    },
    extendedCP-RxSidelink-r16            ENUMERATED {supported}      OPTIONAL,
    OPTIONAL,
    OPTIONAL
  },
  --15-10
  sl-Tx-256QAM-r16                      ENUMERATED {supported}      OPTIONAL,
  --15-12
  lowSE-64QAM-MCS-TableSidelink-r16     ENUMERATED {supported}      OPTIONAL,
  ...,
  [[
  --15-14
  csi-ReportSidelink-r16                 SEQUENCE {
    csi-RS-PortsSidelink-r16            ENUMERATED {p1, p2}
  },
  --15-19
  rankTwoReception-r16                  ENUMERATED {supported}      OPTIONAL,
  --15-23
  sl-openLoopPC-RSRP-ReportSidelink-r16 ENUMERATED {supported}      OPTIONAL,
  --13-1

```

```

sl-Rx-256QAM-r16          ENUMERATED {supported}          OPTIONAL
]],
[[
--32-5a-2
rx-IUC-Scheme1-PreferredMode2Sidelink-r17  ENUMERATED {supported}          OPTIONAL,
--32-5a-3
rx-IUC-Scheme1-NonPreferredMode2Sidelink-r17  ENUMERATED {supported}          OPTIONAL,
--32-5b-2
rx-IUC-Scheme2-Mode2Sidelink-r17            ENUMERATED {n5, n15, n25, n32, n35, n45, n50, n64} OPTIONAL,
--32-6-1
rx-IUC-Scheme1-SCI-r17              ENUMERATED {supported}          OPTIONAL,
--32-6-2
rx-IUC-Scheme1-SCI-ExplicitReq-r17        ENUMERATED {supported}          OPTIONAL,
--32-7
scheme2-ConflictDeterminationRSRP-r17      ENUMERATED {supported}          OPTIONAL
]],
[[
-- R1 41-1-17: Open loop SL pathloss based power control for SL-PRS and associated PSCCH and SL RSRP report for dedicated resource
-- pool
sl-PathlossBasedOLPC-SL-RSRP-Report-r18    ENUMERATED {supported}          OPTIONAL,
-- R1 47-k4: Transmitting UE to UE COT sharing information
sl-UE-COT-Sharing-r18                    ENUMERATED {supported}          OPTIONAL,
-- R1 47-m11: PSFCH transmissions in multiple contiguous RB sets
sl-PSFCH-MultiContiguousRB-r18           ENUMERATED {supported}          OPTIONAL,
-- R1 47-m11a: PSFCH transmissions in multiple non-contiguous RB sets
sl-PSFCH-MultiNonContiguousRB-r18        ENUMERATED {supported}          OPTIONAL,
-- R1 47-v1: NR SL communication with SL CA
sl-CA-Communication-r18                  SEQUENCE {
  numberOfCarriers-r18                    INTEGER (2..8),
  numberOfPSCCH-DecodeValueZ-r18         INTEGER (1..2),
  totalBandwidth-r18                     ENUMERATED {mhz20,mhz30,mhz40,mhz50,mhz60,mhz70}
}
-- R4 45-2: SL reception in intra-carrier guard band
sl-ReceptionIntraCarrierGuardBand-r18     ENUMERATED {supported}          OPTIONAL,
-- R4 45-3: Power class for sidelink unlicensed
sl-PowerClassUnlicensed-r18              ENUMERATED {pc5, spare7, spare6, spare5, spare4, spare3, spare2, spare1} OPTIONAL
]]
}

-- TAG-UECAPABILITYINFORMATIONSIDELINK-STOP
-- ASN1STOP

```

– *UEInformationRequestSidelink*

The *UEInformationRequestSidelink* message is used to transfer UE information in sidelink, e.g. the end-to-end QoS information for L2 U2U Relay operation.

Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: L2 U2U Remote UE to L2 U2U Relay UE

***UEInformationRequestSidelink* message**

```
-- ASN1START
-- TAG-UEINFORMATIONREQUESTSIDELINK-START

UEInformationRequestSidelink-r18 ::= SEQUENCE {
    rrc-TransactionIdentifier-r18      RRC-TransactionIdentifier,
    criticalExtensions                 CHOICE {
        ueInformationRequestSidelink-r18  UEInformationRequestSidelink-r18-IEs,
        criticalExtensionsFuture          SEQUENCE {}
    }
}

UEInformationRequestSidelink-r18-IEs ::= SEQUENCE {
    sl-E2E-QoS-InfoListPC5-r18      SEQUENCE (SIZE (1..maxNrofSLRB-r16)) OF SL-E2E-QoS-InfoPC5-r18 OPTIONAL, -- Need N
    lateNonCriticalExtension          OCTET STRING OPTIONAL,
    nonCriticalExtension              SEQUENCE {} OPTIONAL
}

SL-E2E-QoS-InfoPC5-r18 ::= SEQUENCE {
    sl-DestinationIdentityRemoteUE-r18  SL-DestinationIdentity-r16,
    sl-E2E-SLRB-Index-r18               SLRB-PC5-ConfigIndex-r16,
    sl-QoS-InfoList-r18                 SEQUENCE (SIZE (1..maxNrofSL-QFIsPerDest-r16)) OF SL-QoS-Info-r16
}

-- TAG-UEINFORMATIONREQUESTSIDELINK-STOP
-- ASN1STOP
```

***UEInformationRequestSidelink* field descriptions**

sl-E2E-QoS-InfoListPC5

Indicates the per-QoS flow QoS info for a list of end-to-end PC5 connections with each connection indicated by the destination L2 ID of the peer L2 U2U Remote UE. In addition, the end-to-end SLRB index is included to indicate the mapping from the QoS flow to the SLRB.

***SL-E2E-QoS-InfoPC5* field descriptions**

sl-DestinationIdentityRemoteUE

Indicates the destination L2 ID of the peer L2 U2U Remote UE for an end-to-end PC5 connection.

sl-E2E-SLRB-Index

Indicates the index of an end-to-end SLRB.

sl-QoS-InfoList

List of QoS profile of the sidelink QoS flow for an end-to-end PC5 connection, with each QoS flow indicated by *sl-QoS-FlowIdentity* which is unique for different end-to-end PC5 connection in the scope of UE, and uniquely identifies one sidelink QoS flow between the L2 U2U Remote UE and the L2 U2U Relay UE.

– *UEInformationResponseSidelink*

The *UEInformationResponseSidelink* message is used to deliver UE information in sidelink, e.g. the split QoS information for L2 U2U Relay operation.

Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: L2 U2U Relay UE to L2 U2U Remote UE

UEInformationResponseSidelink message

```
-- ASN1START
-- TAG-UEINFORMATIONRESPONSESIDELINK-START

UEInformationResponseSidelink-r18 ::=
    rrc-TransactionIdentifier-r18
    criticalExtensions
        ueInformationResponseSidelink-r18
        criticalExtensionsFuture
    }

UEInformationResponseSidelink-r18-IEs ::=
    sl-SplitQoS-InfoListPC5-r18
    lateNonCriticalExtension
    nonCriticalExtension

SL-SplitQoS-InfoPC5-r18 ::=
    sl-QoS-FlowIdentity-r18
    sl-SplitPacketDelayBudget-r18

-- TAG-UEINFORMATIONRESPONSESIDELINK-STOP
-- ASN1STOP
```

UEInformationResponseSidelink field descriptions
sl-SplitQoS-InfoListPC5 Indicates the split PDB on the first PC5 hop between L2 U2U Relay UE and the L2 U2U Remote UE for a list of QoS flow indicated by <i>sl-QoS-FlowIdentity</i> for one or more end-to-end PC5 connections. <i>sl-SplitPacketDelayBudget</i> indicates upper bound value for the delay that a packet may experience expressed in unit of 0.5ms.

– *UuMessageTransferSidelink*

The *UuMessageTransferSidelink* message is used for the sidelink transfer of Paging message and System Information messages.

Signalling radio bearer: SL-SRB3

RLC-SAP: AM

Logical channel: SCCH

Direction: L2 U2N Relay UE to L2 U2N Remote UE

***UuMessageTransferSidelink* message**

```
-- ASN1START
-- TAG-UUMESSAGETRANSFERSIDELINK-START

UuMessageTransferSidelink-r17 ::=
    criticalExtensions
        uuMessageTransferSidelink-r17
        criticalExtensionsFuture
    }
}

UuMessageTransferSidelink-r17-IEs ::=
    sl-PagingDelivery-r17
    sl-SIB1-Delivery-r17
    sl-SystemInformationDelivery-r17
    lateNonCriticalExtension
    nonCriticalExtension

UuMessageTransferSidelink-v1800-IEs ::=
    sl-PagingDelivery-r18
    nonCriticalExtension

-- TAG-UUMESSAGETRANSFERSIDELINK-STOP
-- ASN1STOP
```

```
SEQUENCE {
    CHOICE {
        UuMessageTransferSidelink-r17-IEs,
        SEQUENCE {}
    }
}

SEQUENCE {
    OCTET STRING (CONTAINING PagingRecord)           OPTIONAL, -- Need N
    OCTET STRING (CONTAINING SIB1)                   OPTIONAL, -- Need N
    OCTET STRING (CONTAINING SystemInformation)       OPTIONAL, -- Need N
    OCTET STRING                                     OPTIONAL,
    UuMessageTransferSidelink-v1800-IEs                OPTIONAL
}

SEQUENCE {
    OCTET STRING (CONTAINING PagingRecord-v1700)     OPTIONAL, -- Need N
    SEQUENCE {}                                     OPTIONAL
}
```

<i>UuMessageTransferSidelink-IEs</i> field descriptions
<i>sl-PagingDelivery</i> This field is used to transfer PagingRecord and <i>PagingRecord-v1700</i> relevant to the L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE.
<i>sl-SIB1-Delivery</i> This field is used to transfer SIB1 to the L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE.
<i>sl-SystemInformationDelivery</i> This field is used to transfer SIBs and posSIBs to the L2 U2N Remote UE in RRC_IDLE or RRC_INACTIVE.

— *End of PC5-RRC-Definitions*

-- ASN1START

END

-- ASN1STOP

7 Variables and constants

7.1 Timers

7.1.1 Timers (Informative)

Timer	Start	Stop	At expiry
T300	Upon transmission of <i>RRCSetupRequest</i> .	Upon reception of <i>RRCSetup</i> or <i>RRCReject</i> message, cell re-selection, relay (re)selection or cell selection by a L2 U2N Remote UE, and upon abortion of connection establishment by upper layers.	Perform the actions as specified in 5.3.3.7.
T301	Upon transmission of <i>RRCReestablishmentRequest</i>	Upon reception of <i>RRCReestablishment</i> or <i>RRCSetup</i> message as well as when the selected cell becomes unsuitable or the (re)selected L2 U2N Relay UE becomes unsuitable, upon reception of <i>NotificationMessageSidelink</i> indicating <i>relayUE-HO</i> or <i>relayUE-CellReselection</i> .	Go to RRC_IDLE
T302	Upon reception of <i>RRCReject</i> while performing RRC connection establishment or resume, upon reception of <i>RRCRelease</i> with <i>waitTime</i> .	Upon entering RRC_CONNECTED or RRC_IDLE, upon cell re-selection, upon cell change due to relay (re)selection or cell selection by a L2 U2N Remote UE, and upon reception of <i>RRCReject</i> message.	Inform upper layers about barring alleviation as specified in 5.3.14.4

Timer	Start	Stop	At expiry
T304	Upon reception of <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> for the MCG which does not include <i>sl-PathSwitchConfig</i>, or upon reception of <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> for the SCG not indicated as deactivated in the NR or E-UTRA message containing the <i>RRCReconfiguration</i> message or upon conditional reconfiguration execution i.e. when applying a stored <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i>. Also, for the MCG and SCG upon an indication from lower layer that an LTM cell switch procedure is triggered and, for the MCG, upon performing an LTM cell switch procedure following cell selection performed while timer T311 is running.	Upon successful completion of random access on the corresponding SpCell. Upon receiving an indication from lower layers of successful completion of Rach-less handover, or upon receiving an indication from lower layers of successful completion of an LTM RACH-less cell switch. For T304 of SCG, upon SCG release.	For T304 of MCG, in case of the handover from NR or intra-NR handover, or path switch from a L2 U2N Relay UE to a NR cell, or an LTM cell switch procedure, initiate the RRC re-establishment procedure; In case of handover to NR, perform the actions defined in the specifications applicable for the source RAT. If any DAPS bearer is configured and if there is no RLF in source PCell, initiate the failure information procedure. For T304 of SCG, inform network about the reconfiguration with sync failure by initiating the SCG failure information procedure as specified in 5.7.3.

Timer	Start	Stop	At expiry
T310	Upon detecting physical layer problems for the SpCell i.e. upon receiving N310 consecutive out-of-sync indications from lower layers.	Upon receiving N311 consecutive in-sync indications from lower layers for the SpCell, upon receiving RRCReconfiguration with <i>reconfigurationWithSync</i> for that cell group, upon reception of <i>MobilityFromNRCommand</i> , upon the reconfiguration of <i>rlf-TimersAndConstant</i> , upon initiating the connection re-establishment procedure, upon conditional reconfiguration execution i.e. when applying a stored RRCReconfiguration message including <i>reconfigurationWithSync</i> for that cell group, upon an indication from lower layers that an LTM cell switch procedure is triggered, and upon initiating the MCG failure information procedure. Upon SCG release, if the T310 is kept in SCG.	If the T310 is kept in MCG: If AS security is not activated: go to RRC_IDLE else: initiate the MCG failure information procedure as specified in 5.7.3b or the connection re-establishment procedure as specified in 5.3.7 or the procedure as specified in 5.3.10.3 if any DAPS bearer is configured. If the T310 is kept in SCG, Inform E-UTRAN/NR about the SCG radio link failure by initiating the SCG failure information procedure as specified in 5.7.3.
T311	Upon initiating the RRC connection re-establishment procedure	Upon selection of a suitable NR cell, or upon selection of a suitable L2 U2N Relay UE, or a cell using another RAT.	Enter RRC_IDLE

Timer	Start	Stop	At expiry
T312	If T312 is configured in MCG: Upon triggering a measurement report for a measurement identity for which T312 has been configured and <i>useT312</i> has been set to true, while T310 in PCell is running. If T312 is configured in SCG and <i>useT312</i> has been set to true: Upon triggering a measurement report for a measurement identity for which T312 has been configured, while T310 in PSCell is running.	Upon receiving N311 consecutive in-sync indications from lower layers for the SpCell, receiving <i>RRCReconfiguration</i> with <i>reconfigurationWithSync</i> for that cell group, upon reception of <i>MobilityFromNRCommand</i>, upon initiating the connection re-establishment procedure, upon the reconfiguration of <i>rll-TimersAndConstant</i>, upon initiating the MCG failure information procedure, upon conditional reconfiguration execution i.e. when applying a stored RRCReconfiguration message including <i>reconfigurationWithSync</i> for that cell group, upon an indication from lower layers that an LTM cell switch procedure is triggered, and upon the expiry of T310 in corresponding SpCell. Upon SCG release, if the T312 is kept in SCG	If the T312 is kept in MCG, initiate the MCG failure information procedure as specified in 5.7.3b or the connection re-establishment procedure. If the T312 is kept in SCG, Inform E-UTRAN/NR about the SCG radio link failure by initiating the SCG failure information procedure.as specified in 5.7.3.
T316	Upon transmission of the <i>MCGFailureInformation</i> message	Upon receiving <i>RRCRelease</i> , <i>RRCReconfiguration</i> with <i>reconfigurationWithSync</i> for the PCell, <i>MobilityFromNRCommand</i> , or upon initiating the re-establishment procedure	Perform the actions as specified in 5.7.3b.5.
T319	Upon transmission of <i>RRCResumeRequest</i> or <i>RRCResumeRequest1</i> when the resume procedure is not initiated for SDT.	Upon reception of <i>RRCResume</i> , <i>RRCSetup</i> , <i>RRCRelease</i> , <i>RRCRelease</i> with <i>suspendConfig</i> or <i>RRCReject</i> message, upon cell re-selection or upon relay (re)selection.	Perform the actions as specified in 5.3.13.5.
T319a	Upon transmission of <i>RRCResumeRequest</i> or <i>RRCResumeRequest1</i> when the resume procedure is initiated for SDT.	Upon reception of <i>RRCResume</i> , <i>RRCSetup</i> , <i>RRCRelease</i> , <i>RRCReject</i> message or upon failure to resume RRC connection for SDT as specified in 5.3.13.5 or upon cell reselection.	Perform the actions as specified in 5.3.13.5.

Timer	Start	Stop	At expiry
T320	Upon reception of <i>t320</i> or upon cell (re)selection to NR from another RAT with validity time configured for dedicated priorities (in which case the remaining validity time is applied).	Upon entering RRC_CONNECTED, upon reception of <i>RRCRelease</i> , when PLMN selection or SNPN selection is performed on request by NAS, when the UE enters RRC_IDLE from RRC_INACTIVE, or upon cell (re)selection to another RAT (in which case the timer is carried on to the other RAT).	Discard the cell reselection priority information provided by dedicated signalling.
T321	Upon receiving <i>measConfig</i> including a <i>reportConfig</i> with the <i>reportType</i> set to <i>reportCGI</i>	Upon acquiring the information needed to set all fields of <i>cgi-info</i> , upon receiving <i>measConfig</i> that includes removal of the <i>reportConfig</i> with the <i>reportType</i> set to <i>reportCGI</i> and upon detecting that a cell is not broadcasting SIB1.	Initiate the measurement reporting procedure, stop performing the related measurements.
T322	Upon receiving <i>measConfig</i> including <i>reportConfigNR</i> with the <i>reportType</i> set to <i>reportSFTD</i> and <i>drx-SFTD-NeighMeas</i> is set to <i>true</i> .	Upon acquiring the SFTD measurement results, upon receiving <i>measConfig</i> that includes removal of the <i>reportConfig</i> with the <i>reportType</i> set to <i>reportSFTD</i> .	Initiate the measurement reporting procedure, stop performing the related measurements.
T325	Upon reception of <i>RRCRelease</i> message with <i>deprioritisationTimer</i> .	When PLMN selection or SNPN selection is performed on request by NAS according to TS 38.304 [20].	Stop deprioritisation of all frequencies or NR signalled by <i>RRCRelease</i> and discard the stored deprioritisation request(s).
T330	Upon receiving <i>LoggedMeasurementConfiguration</i> message	Upon log volume exceeding the suitable UE memory, upon initiating the release of <i>LoggedMeasurementConfiguration</i> procedure	Perform the actions specified in 5.5a.1.4
T331	Upon receiving <i>RRCRelease</i> message with <i>measIdleDuration</i>	Upon receiving <i>RRCSetup</i> , <i>RRCResume</i> , <i>RRCRelease</i> with idle/inactive measurement configuration, upon cell selection/reselection to a cell that does not belong to the <i>validityArea</i> (if configured), or upon cell re-selection to another RAT.	Perform the actions as specified in 5.7.8.3.

Timer	Start	Stop	At expiry
T342	Upon transmitting <i>UEAssistanceInformation</i> message with <i>DelayBudgetReport</i> .	Upon releasing <i>delayBudgetReportingConfig</i> during the connection re-establishment/resume procedures, and upon receiving <i>delayBudgetReportingConfig</i> set to <i>release</i> .	No action.
T345	Upon transmitting <i>UEAssistanceInformation</i> message with <i>overheatingAssistance</i>	Upon releasing <i>overheatingAssistanceConfig</i> during the connection re-establishment procedure, upon initiating the connection resumption procedure, and upon receiving <i>overheatingAssistanceConfig</i> set to <i>release</i> .	No action.
T346a (The UE maintains one instance of this timer per cell group)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>drx-Preference</i> .	Upon releasing <i>drx-PreferenceConfig</i> during the connection re-establishment/resume procedures, upon receiving <i>drx-PreferenceConfig</i> set to <i>release</i> , or upon performing MR-DC release.	No action.
T346b (The UE maintains one instance of this timer per cell group)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>maxBW-Preference</i> .	Upon releasing <i>maxBW-PreferenceConfig</i> during the connection re-establishment/resume procedures, upon receiving <i>maxBW-PreferenceConfig</i> set to <i>release</i> , or upon performing MR-DC release.	No action.
T346c (The UE maintains one instance of this timer per cell group)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>maxCC-Preference</i> .	Upon releasing <i>maxCC-PreferenceConfig</i> during the connection re-establishment/resume procedures, upon receiving <i>maxCC-PreferenceConfig</i> set to <i>release</i> , or upon performing MR-DC release.	No action.

Timer	Start	Stop	At expiry
T346d (The UE maintains one instance of this timer per cell group)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>maxMIMO-LayerPreference</i> .	Upon releasing <i>maxMIMO-LayerPreferenceConfig</i> during the connection re-establishment/resume procedures, upon receiving <i>maxMIMO-LayerPreferenceConfig</i> set to <i>release</i> , or upon performing MR-DC release.	No action.
T346e (The UE maintains one instance of this timer per cell group)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>minSchedulingOffsetPreference</i> .	Upon releasing <i>minSchedulingOffsetPreferenceConfig</i> during the connection re-establishment/resume procedures, upon receiving <i>minSchedulingOffsetPreferenceConfig</i> set to <i>release</i> , or upon performing MR-DC release.	No action.
T346f	Upon transmitting <i>UEAssistanceInformation</i> message with <i>releasePreference</i> .	Upon releasing <i>releasePreferenceConfig</i> during the connection re-establishment/resume procedures, or upon receiving <i>releasePreferenceConfig</i> set to <i>release</i> .	No action.
T346g	Upon transmitting <i>UEAssistanceInformation</i> message with <i>musim-PreferredRRC-State</i> .	Upon receiving <i>RRCRelease</i> , or upon receiving <i>musim-LeaveAssistanceConfig</i> set to <i>release</i> .	Perform the actions as specified in 5.3.8.6.
T346h	Upon transmitting <i>UEAssistanceInformation</i> message with <i>musim-GapPreferenceList</i> and/or <i>musim-GapPriorityPreferenceList</i> and/or <i>musim-GapKeepPreferenceInformation</i> .	Upon releasing <i>musim-GapAssistanceConfig</i> during the connection re-establishment/resume procedures, or upon receiving <i>musim-GapAssistanceConfig</i> set to <i>release</i> .	No action.
T346i	Upon transmitting <i>UEAssistanceInformation</i> message with <i>scg-DeactivationPreference</i>	Upon releasing <i>scg-DeactivationPreferenceConfig</i> during RRC connection re-establishment/resume or upon receiving <i>scg-DeactivationPreferenceConfig</i> set to <i>release</i> .	No action.

Timer	Start	Stop	At expiry
T346j (The UE maintains one instance of this timer per cell group)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>rlm-RelaxationReportingConfig</i> .	Upon releasing <i>rlm-RelaxationReportingConfig</i> during the connection re-establishment/resume procedures, upon receiving <i>rlm-RelaxationReportingConfig</i> set to <i>release</i> , or upon performing MR-DC release.	No action.
T346k (The UE maintains one instance of this timer per cell group)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>bfd-RelaxationReportingConfig</i> .	Upon releasing <i>bfd-RelaxationReportingConfig</i> during the connection re-establishment/resume procedures, upon receiving <i>bfd-RelaxationReportingConfig</i> set to <i>release</i> , or upon performing MR-DC release.	No action.
T346l (The UE maintains one instance of this timer per QoS flow)	Upon transmitting <i>UEAssistanceInformation</i> message with <i>ul-TrafficInfo</i> for the concerned QoS flow.	Upon releasing <i>ul-TrafficInfoReportingConfig</i> during the connection re-establishment/resume procedures, or upon receiving <i>ul-TrafficInfoReportingConfig</i> set to <i>release</i> .	No action.
T346m	Upon transmitting <i>UEAssistanceInformation</i> message with <i>multiRx-PreferenceFR2</i> .	Upon releasing <i>multiRx-PreferenceReportingConfigFR2</i> during the connection re-establishment/resume procedures, upon receiving <i>multiRx-PreferenceReportingConfigFR2</i> set to <i>release</i> .	No action.
T346n	Upon transmission of MUSIM temporary restriction of <i>musim-CapRestriction</i> for affected bands or combination of bands and/or avoided band(s) or combination of bands.	Upon releasing <i>musim-CapabilityRestrictionConfig</i> during the connection re-establishment/resume procedures, or upon receiving <i>musim-CapabilityRestrictionConfig</i> set to <i>release</i> .	No action.

Timer	Start	Stop	At expiry
T348	Upon transmission of MUSIM temporary restriction of <i>musim-CapRestriction</i> for serving cell(s) with capabilities restricted, release of SCell or PSCell or release of SCG.	Upon reception of <i>RRCReconfiguration</i> message that does not exceed UE temporary capability restriction indicated via <i>musim-CapRestriction</i> .	UE may apply the temporary UE capability restriction in accordance with the one indicated in the last transmission of the <i>UEAssistanceInformation</i> message including <i>musim-CapRestriction</i> . UE may apply the temporary capability restriction that SCG is not supported if <i>ServCellIndex</i> of PSCell was included in indicated <i>MUSIM-CellToRelease-r18</i> .
T350	Upon transmitting <i>DedicatedSIBRequest</i> message with <i>requestedSIB-List</i> and/or <i>requestedPosSIB-List</i> .	Upon acquiring the requested SIB(s) or posSIB(s), upon releasing <i>onDemandSIB-Request</i> during the connection re-establishment procedures, upon receiving <i>onDemandSIB-Request</i> set to release, upon reception of <i>RRCRelease</i> or upon successful change of PCell while in RRC_CONNECTED.	No action
T380	Upon reception of t380 in <i>RRCRelease</i> .	Upon reception of <i>RRCResume</i> , <i>RRCSetup</i> or <i>RRCRelease</i> .	Perform the actions as specified in 5.3.13.
T390	When access attempt is barred at access barring check for an Access Category. The UE maintains one instance of this timer per Access Category.	Upon cell (re)selection, upon relay (re)selection, upon entering RRC_CONNECTED, upon reception of <i>RRCReconfiguration</i> including <i>reconfigurationWithSync</i> , upon change of PCell while in RRC_CONNECTED, upon reception of <i>MobilityFromNRCommand</i> , or upon reception of <i>RRCRelease</i> .	Perform the actions as specified in 5.3.14.4.
T400	Upon transmission of <i>RRCReconfigurationSidelink</i>	Upon reception of <i>RRCReconfigurationFailureSidelink</i> or <i>RRCReconfigurationCompleteSidelink</i>	Perform the Sidelink radio link failure related actions as specified in 5.8.9.3.

Timer	Start	Stop	At expiry
T420	Upon reception of the <i>RRCReconfiguration</i> message including <i>sl-PathSwitchConfig</i> where <i>sl-IndirectPathMaintain</i> is not included in <i>reconfigurationWithSync</i>	Upon successfully sending <i>RRCReconfigurationComplete</i> message (i.e., PC5 RLC acknowledgement is received from target L2 U2N Relay UE)	Perform the RRC re-establishment procedure as specified in 5.3.7.
T421	Upon reception of the <i>RRCReconfiguration</i> message including <i>sl-IndirectPathAddChange</i> where <i>sl-IndirectPathMaintain</i> is not included in <i>reconfigurationWithSync</i>	Upon successfully sending <i>RRCReconfigurationComplete</i> message (i.e., PC5 RLC acknowledgement is received from target L2 U2N Relay UE) if split SRB1 with duplication is configured, or upon reception of <i>RRCReconfigurationCompleteSi delink</i> if split SRB1 with duplication is not configured, or upon initiation of indirect path failure information procedure.	Perform the Failure Information Reporting as specified in 5.7.3c.
T430	Start or restart from the subframe indicated by <i>epochTime</i> upon reception of <i>SIB19</i> , or upon reception of <i>RRCReconfiguration</i> message for the target cell including <i>reconfigurationWithSync</i> , or upon conditional reconfiguration execution i.e. when applying a stored <i>RRCReconfiguration</i> message for the target cell including <i>reconfigurationWithSync</i> , or upon satellite switch with resynchronization.	Stop T430, if it is running, for the source cell upon reception of <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> , or upon conditional reconfiguration execution i.e. when applying a stored <i>RRCReconfiguration</i> message including <i>reconfigurationWithSync</i> , or upon satellite switch with resynchronization.	Perform the actions as specified in 5.2.2.6.

7.1.2 Timer handling

When the UE applies zero value for a timer, the timer shall be started and immediately expire unless explicitly stated otherwise.

7.2 Counters

Counter	Reset	Incremented	When reaching max value
N310	Upon reception of "in-sync" indication from lower layers; upon receiving <i>RRCReconfiguration</i> with <i>reconfigurationWithSync</i> for that cell group; upon initiating the connection re-establishment procedure.	Upon reception of "out-of-sync" from lower layer while the timer T310 is stopped.	Start timer T310
N311	Upon reception of "out-of-sync" indication from lower layers; upon receiving <i>RRCReconfiguration</i> with <i>reconfigurationWithSync</i> for that cell group; upon initiating the connection re-establishment procedure.	Upon reception of the "in-sync" from lower layer while the timer T310 is running.	Stop the timer T310.

7.3 Constants

Constant	Usage
N310	Maximum number of consecutive "out-of-sync" indications for the SpCell received from lower layers
N311	Maximum number of consecutive "in-sync" indications for the SpCell received from lower layers

7.4 UE variables

NOTE: To facilitate the specification of the UE behavioural requirements, UE variables are represented using ASN.1. Unless explicitly specified otherwise, it is however up to UE implementation how to store the variables. The optionality of the IEs in ASN.1 is used only to indicate that the values may not always be available.

– *NR-UE-Variables*

This ASN.1 segment is the start of the NR UE variable definitions.

```
-- ASN1START
-- NR-UE-VARIABLES-START

NR-UE-Variables DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    AreaConfiguration-r17,
    ARFCN-ValueNR,
    CellIdentity,
    EUTRA-PhysCellId,
    maxCEFReport-r17,
    maxCellReport,
    MeasId,
    MeasIdToAddModList,
    MeasIdleCarrierEUTRA-r16,
    MeasIdleCarrierNR-r16,
    MeasResultIdleEUTRA-r16,
    MeasResultIdleNR-r16,
    MeasReselectionCarrierNR-r18,
    MeasurementValidityDuration-r18,
    MeasObjectToAddModList,
    MeasConfigAppLayerId-r17,
    MeasConfigAppLayer-r17,
    maxNrofAppLayerMeas-r17,
    AppLayerIdleInactiveConfig-r18,
    PhysCellId,
    RNTI-Value,
    ReportConfigToAddModList,
    RSRP-Range,
    SL-MeasId-r16,
    SL-MeasIdList-r16,
    SL-MeasObjectList-r16,
    SL-ReportConfigList-r16,
    SL-QuantityConfig-r16,
    Tx-PoolMeasList-r16,
    QuantityConfig,
    maxNrofCellMeas,
    maxNrofMeasId,
    maxFreqIdle-r16,
    PhysCellIdUTRA-FDD-r16,
    ValidityAreaList-r16,
    CondReconfigToAddModList-r16,
    ConnEstFailReport-r16,
    LoggingDuration-r16,
    LoggingInterval-r16,
    LogMeasInfoList-r16,
    LogMeasInfo-r16,
    RA-Report-r16,
    RLF-Report-r16,
    TraceReference-r16,
    WLAN-Identifiers-r16,
    WLAN-NameList-r16,
```



```

BT-NameList-r16,
PLMN-Identity,
maxNrofRelayMeas-r17,
maxPLMN,
RA-ReportList-r16,
VisitedCellInfoList-r16,
AbsoluteTimeInfo-r16,
LoggedEventTriggerConfig-r16,
LoggedPeriodicalReportConfig-r16,
Sensor-NameList-r16,
SL-SourceIdentity-r17,
SuccessHO-Report-r17,
PLMN-IdentityList2-r16,
AreaConfiguration-r16,
maxNrofSL-MeasId-r16,
maxNrofFreqSL-r16,
maxNrofCLI-RSSI-Resources-r16,
maxNrofCLI-SRS-Resources-r16,
RSSI-ResourceId-r16,
SRS-ResourceId,
VisitedPSCellInfoList-r17,
SuccessPSCell-Report-r18,
maxNPN-r16,
SNPN-ConfigID-List-r18,
AreaConfiguration-v1800,
NID-r16,
SK-CounterConfig-r18,
ReferenceConfiguration-r18,
maxNrofLTM-Configs-plus1-r18,
maxSecurityCellSet-r18

```

```
FROM NR-RRC-Definitions;
```

```

-- NR-UE-VARIABLES-STOP
-- ASN1STOP

```

— *VarAppLayerIdleConfig*

The UE variable *VarAppLayerIdleConfig* includes the parameters of the application layer measurements stored in the UE while in RRC_IDLE.

VarAppLayerIdleConfig UE variable

```

-- ASN1START
-- TAG-VARAPPLAYERIDLECONFIG-START

```

```

VarAppLayerIdleConfig-r18 ::= SEQUENCE {
    appLayerIdleConfigList-r18 SEQUENCE (SIZE (1..maxNrofAppLayerMeas-r17)) OF VarAppLayerIdle-r18
}

```

```

VarAppLayerIdle-r18 ::= SEQUENCE {
    measConfigAppLayerId-r18 MeasConfigAppLayerId-r17,

```

```

    serviceType-r18          ENUMERATED {streaming, mtsi, vr, spare5, spare4, spare3, spare2, spare1},
    appLayerIdleInactiveConfig-r18 AppLayerIdleInactiveConfig-r18,
    appLayerMeasPriority-r18  INTEGER (1..16)
}
-- TAG-VARAPPLAYERIDLECONFIG-STOP
-- ASN1STOP

```

OPTIONAL

– *VarAppLayerPLMN-ListConfig*

The UE variable *VarAppLayerPLMN-ListConfig* includes the PLMNs to which application layer measurement reports and application layer measurement configurations are allowed to be sent.

VarAppLayerPLMN-ListConfig UE variable

```

-- ASN1START
-- TAG-VARAPPLAYERPLMN-LISTCONFIG-START

VarAppLayerPLMN-ListConfig-r18 ::= SEQUENCE {
    plmnConfigList-r18 SEQUENCE (SIZE (1..maxNrofAppLayerMeas-r17)) OF VarAppLayerPLMN-List-r18
}

VarAppLayerPLMN-List-r18 ::= SEQUENCE {
    measConfigAppLayerId-r18 MeasConfigAppLayerId-r17,
    plmn-IdentityList-r18 PLMN-IdentityList2-r16
}

-- TAG-VARAPPLAYERPLMN-LISTCONFIG-STOP
-- ASN1STOP

```

– *VarConditionalReconfig*

The UE variable *VarConditionalReconfig* includes the accumulated configuration of the conditional handover, conditional PSCell addition or conditional PSCell change configurations including the pointers to conditional handover, conditional PSCell addition, conditional PSCell change, or subsequent CPAC execution condition (associated *measId(s)*), the stored target candidate SpCell *RRCReconfiguration*, the stored reference configuration, and the stored *SK-Counter* configuration.

VarConditionalReconfig UE variable

```

-- ASN1START
-- TAG-VARCONDITIONALRECONFIG-START

VarConditionalReconfig ::= SEQUENCE {
    condReconfigList CondReconfigToAddModList-r16 OPTIONAL,
    scpac-ReferenceConfiguration-r18 ReferenceConfiguration-r18 OPTIONAL,
    sk-CounterConfiguration-r18 SEQUENCE (SIZE (1..maxSecurityCellSet-r18)) OF SK-CounterConfig-r18 OPTIONAL
}

```

```
-- TAG-VARCONDITIONALRECONFIG-STOP
-- ASN1STOP
```

– *VarConnEstFailReport*

The UE variable *VarConnEstFailReport* includes the connection establishment failure and/or connection resume failure information.

VarConnEstFailReport UE variable

```
-- ASN1START
-- TAG-VARCONNЕСТFАILREPORT-START

VarConnEstFailReport-r16 ::= SEQUENCE {
    connEstFailReport-r16      ConnEstFailReport-r16,
    networkIdentity-r18        CHOICE {
        plmn-Identity-r18      PLMN-Identity,
        snpn-Identity-r18      SNPN-Identity-r18
    }
}

SNPN-Identity-r18 ::= SEQUENCE {
    plmn-Identity-r18          PLMN-Identity,
    nid-r18                    NID-r16
}
-- TAG-VARCONNЕСТFАILREPORT-STOP
-- ASN1STOP
```

– *VarConnEstFailReportList*

The UE variable *VarConnEstFailReportList* includes a list of the connection establishment failure and/or connection resume failure information.

VarConnEstFailReportList UE variable

```
-- ASN1START
-- TAG-VARCONNЕСТFАILREPORTLIST-START

VarConnEstFailReportList-r17 ::= SEQUENCE {
    connEstFailReportList-r17 SEQUENCE (SIZE (1..maxCEFReport-r17)) OF VarConnEstFailReport-r16
}

-- TAG-VARCONNЕСТFАILREPORTLIST-STOP
-- ASN1STOP
```

– *VarLogMeasConfig*

The UE variable *VarLogMeasConfig* includes the configuration of the logging of measurements to be performed by the UE while in RRC_IDLE, RRC_INACTIVE, covering intra-frequency, inter-frequency and inter-RAT mobility related measurements. The UE performs logging of measurements only while in RRC_IDLE and RRC_INACTIVE.

VarLogMeasConfig UE variable

```
-- ASN1START
-- TAG-VARLOGMEASCONFIG-START

VarLogMeasConfig-r16 ::= SEQUENCE {
    areaConfiguration-r16      AreaConfiguration-r16      OPTIONAL,
    bt-NameList-r16           BT-NameList-r16            OPTIONAL,
    wlan-NameList-r16         WLAN-NameList-r16          OPTIONAL,
    sensor-NameList-r16       Sensor-NameList-r16         OPTIONAL,
    loggingDuration-r16       LoggingDuration-r16,
    reportType                 CHOICE {
        periodical            LoggedPeriodicalReportConfig-r16,
        eventTriggered        LoggedEventTriggerConfig-r16
    },
    earlyMeasIndication-r17    ENUMERATED {true}          OPTIONAL,
    areaConfiguration-r17     AreaConfiguration-r17       OPTIONAL,
    areaConfiguration-v1800    AreaConfiguration-v1800    OPTIONAL
}
-- TAG-VARLOGMEASCONFIG-STOP
-- ASN1STOP
```

– *VarLogMeasReport*

The UE variable *VarLogMeasReport* includes the logged measurements information.

VarLogMeasReport UE variable

```
-- ASN1START
-- TAG-VARLOGMEASREPORT-START

VarLogMeasReport-r16 ::= SEQUENCE {
    absoluteTimeInfo-r16      AbsoluteTimeInfo-r16,
    traceReference-r16        TraceReference-r16,
    traceRecordingSessionRef-r16 OCTET STRING (SIZE (2)),
    tce-Id-r16                OCTET STRING (SIZE (1)),
    logMeasInfoList-r16       LogMeasInfoList-r16,
    sigLoggedMeasType-r17     ENUMERATED {true},
    identityList-r18          CHOICE {
        plmn-IdentityList-r18 PLMN-IdentityList2-r16,
        snpn-ConfigID-List-r18 SNPN-ConfigID-List-r18
    }
}
}
```

```
-- TAG-VARLOGMEASREPORT-STOP
-- ASN1STOP
```

– *VarLTM-ServingCellNoResetID*

The IE *VarLTM-ServingCellNoResetID* is used to store the ID associated with the serving cell based on which the UE determines whether a L2 reset is needed or not upon an LTM cell switch procedure.

VarLTM-ServingCellNoResetID UE variable

```
-- ASN1START
-- TAG-VARLTM-SERVINGCELLNORESETID-START

VarLTM-ServingCellNoResetID-r18 ::= SEQUENCE {
    ltm-ServingCellNoResetID-r18    INTEGER (1..maxNrofLTM-Configs-plus1-r18)    OPTIONAL
}

-- TAG-VARLTM-SERVINGCELLNORESETID-STOP
-- ASN1STOP
```

– *VarLTM-ServingCellUE-MeasuredTA-ID*

The IE *VarLTM-ServingCellUE-MeasuredTA-ID* is used to store the ID associated with the serving cell based on which the UE determines whether UE-based TA measurements are needed or not.

VarLTM-ServingCellUE-MeasuredTA-ID UE variable

```
-- ASN1START
-- TAG-VARLTM-SERVINGCELLUE-MEASUREDTA-ID-START

VarLTM-ServingCellUE-MeasuredTA-ID-r18 ::= SEQUENCE {
    ltm-ServingCellUE-MeasuredTA-ID-r18    INTEGER (1..maxNrofLTM-Configs-plus1-r18)    OPTIONAL
}

-- TAG-VARLTM-SERVINGCELLUE-MEASUREDTA-ID-STOP
-- ASN1STOP
```

– *VarMeasConfig*

The UE variable *VarMeasConfig* includes the accumulated configuration of the measurements to be performed by the UE, covering intra-frequency, inter-frequency and inter-RAT mobility related measurements.

VarMeasConfig UE variable

```

-- ASN1START
-- TAG-VARMEASCONFIG-START

VarMeasConfig ::=
  -- Measurement identities
  measIdList                               MeasIdToAddModList           OPTIONAL,
  -- Measurement objects
  measObjectList                           MeasObjectToAddModList        OPTIONAL,
  -- Reporting configurations
  reportConfigList                         ReportConfigToAddModList      OPTIONAL,
  -- Other parameters
  quantityConfig                           QuantityConfig                OPTIONAL,
  s-MeasureConfig
    ssb-RSRP                               CHOICE {
    csi-RSRP                               RSRP-Range,
                                           RSRP-Range
    }                                       OPTIONAL
}

-- TAG-VARMEASCONFIG-STOP
-- ASN1STOP

```

VarMeasConfigSL

The UE variable *VarMeasConfigSL* includes the accumulated configuration of the NR sidelink measurements to be performed by the UE of unicast destination.

VarMeasConfigSL UE variable

```

-- ASN1START
-- TAG-VARMEASCONFIGSL-START

VarMeasConfigSL-r16 ::=
  -- NR sidelink measurement identities
  sl-MeasIdList-r16                        SL-MeasIdList-r16           OPTIONAL,
  -- NR sidelink measurement objects
  sl-MeasObjectList-r16                    SL-MeasObjectList-r16        OPTIONAL,
  -- NR sidelink reporting configurations
  sl-ReportConfigList-r16                  SL-ReportConfigList-r16      OPTIONAL,
  -- Other parameters
  sl-QuantityConfig-r16                     SL-QuantityConfig-r16        OPTIONAL
}

-- TAG-VARMEASCONFIGSL-STOP
-- ASN1STOP

```

— *VarMeasIdleConfig*

The UE variable *VarMeasIdleConfig* includes the configuration of the measurements to be performed by the UE while in RRC_IDLE or RRC_INACTIVE for NR inter-frequency and inter-RAT (i.e. EUTRA) measurements.

VarMeasIdleConfig UE variable

```
-- ASN1START
-- TAG-VARMEASIDLECONFIG-START

VarMeasIdleConfig-r16 ::= SEQUENCE {
    measIdleCarrierListNR-r16 SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasIdleCarrierNR-r16 OPTIONAL,
    measIdleCarrierListEUTRA-r16 SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasIdleCarrierEUTRA-r16 OPTIONAL,
    measIdleDuration-r16 ENUMERATED {sec10, sec30, sec60, sec120, sec180, sec240, sec300, spare},
    validityAreaList-r16 ValidityAreaList-r16 OPTIONAL
}

VarEnhMeasIdleConfig-r18 ::= SEQUENCE {
    measIdleValidityDuration-r18 MeasurementValidityDuration-r18 OPTIONAL
}

-- TAG-VARMEASIDLECONFIG-STOP
-- ASN1STOP
```

— *VarMeasIdleReport*

The UE variable *VarMeasIdleReport* includes the logged measurements information.

VarMeasIdleReport UE variable

```
-- ASN1START
-- TAG-VARMEASIDLEREPORT-START

VarMeasIdleReport-r16 ::= SEQUENCE {
    measReportIdleNR-r16 MeasResultIdleNR-r16 OPTIONAL,
    measReportIdleEUTRA-r16 MeasResultIdleEUTRA-r16 OPTIONAL
}

-- TAG-VARMEASIDLEREPORT-STOP
-- ASN1STOP
```

— *VarMeasReportList*

The UE variable *VarMeasReportList* includes information about the measurements for which the triggering conditions have been met.

VarMeasReportList UE variable

```

-- ASN1START
-- TAG-VARMEASREPORTLIST-START

VarMeasReportList ::= SEQUENCE (SIZE (1..maxNrofMeasId)) OF VarMeasReport

VarMeasReport ::= SEQUENCE {
    -- List of measurement that have been triggered
    measId MeasId,
    cellsTriggeredList CellsTriggeredList OPTIONAL,
    numberOfReportsSent INTEGER,
    cli-TriggeredList-r16 CLI-TriggeredList-r16 OPTIONAL,
    tx-PoolMeasToAddModListNR-r16 Tx-PoolMeasList-r16 OPTIONAL,
    relaysTriggeredList-r17 RelaysTriggeredList-r17 OPTIONAL,
    cellsMetLeavingCond-r18 SEQUENCE (SIZE (1..maxCellReport)) OF PhysCellId OPTIONAL,
    reportedBestNeighbourCell-r18 SEQUENCE (SIZE (1..2)) OF PhysCellId OPTIONAL
}

CellsTriggeredList ::= SEQUENCE (SIZE (1..maxNrofCellMeas)) OF CHOICE {
    physCellId PhysCellId,
    physCellIdEUTRA EUTRA-PhysCellId,
    physCellIdUTRA-FDD-r16 PhysCellIdUTRA-FDD-r16
}

CLI-TriggeredList-r16 ::= CHOICE {
    srs-RSRP-TriggeredList-r16 SRS-RSRP-TriggeredList-r16,
    cli-RSSI-TriggeredList-r16 CLI-RSSI-TriggeredList-r16
}

SRS-RSRP-TriggeredList-r16 ::= SEQUENCE (SIZE (1.. maxNrofCLI-SRS-Resources-r16)) OF SRS-ResourceId

CLI-RSSI-TriggeredList-r16 ::= SEQUENCE (SIZE (1.. maxNrofCLI-RSSI-Resources-r16)) OF RSSI-ResourceId-r16

RelaysTriggeredList-r17 ::= SEQUENCE (SIZE (1.. maxNrofRelayMeas-r17)) OF SL-SourceIdentity-r17

-- TAG-VARMEASREPORTLIST-STOP
-- ASN1STOP

```

VarMeasReportListSL

The UE variable *VarMeasReportListSL* includes information about the NR sidelink measurements for which the triggering conditions have been met.

VarMeasReportListSL UE variable

```

-- ASN1START
-- TAG-VARMEASREPORTLISTSL-START

VarMeasReportListSL-r16 ::= SEQUENCE (SIZE (1..maxNrofSL-MeasId-r16)) OF VarMeasReportSL-r16

VarMeasReportSL-r16 ::= SEQUENCE {

```



```

-- List of NR sidelink measurement that have been triggered
sl-MeasId-r16          SL-MeasId-r16,
sl-FrequencyTriggeredList-r16 SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF ARFCN-ValueNR OPTIONAL,
sl-NumberOfReportsSent-r16  INTEGER
}

-- TAG-VARMEASREPORTLISTSL-STOP
-- ASN1STOP

```

— *VarMeasReselectionConfig*

The UE variable *VarMeasReselectionConfig* includes the configuration for reporting the NR inter-frequency and inter-RAT (i.e. EUTRA) reselection measurements while in RRC_IDLE or RRC_INACTIVE for.

VarMeasReselectionConfig UE variable

```

-- ASN1START
-- TAG-VARMEASRESELECTIONCONFIG-START

VarMeasReselectionConfig-r18 ::= SEQUENCE {
    measReselectionCarrierListNR-r18 SEQUENCE (SIZE (1..maxFreqIdle-r16)) OF MeasReselectionCarrierNR-r18 OPTIONAL,
    measReselectionValidityDuration-r18 MeasurementValidityDuration-r18 OPTIONAL
}

-- TAG-VARMEASRESELECTIONCONFIG-STOP
-- ASN1STOP

```

— *VarMobilityHistoryReport*

The UE variable *VarMobilityHistoryReport* includes the mobility history information.

VarMobilityHistoryReport UE variable

```

-- ASN1START
-- TAG-VARMOBILITYHISTORYREPORT-START

VarMobilityHistoryReport-r16 ::= VisitedCellInfoList-r16

VarMobilityHistoryReport-r17 ::= SEQUENCE {
    visitedCellInfoList-r16 VisitedCellInfoList-r16,
    visitedPSCellInfoList-r17 VisitedPSCellInfoList-r17 OPTIONAL
}

-- TAG-VARMOBILITYHISTORYREPORT-STOP
-- ASN1STOP

```

— *VarPendingRNA-Update*

The UE variable *VarPendingRNA-Update* indicates whether there is a pending RNA update procedure or not. The setting of this BOOLEAN variable to *true* means that there is a pending RNA Update procedure.

VarPendingRNA-Update UE variable

```
-- ASN1START
-- TAG-VARPENDINGRNA-UPDATE-START

VarPendingRNA-Update ::=
    pendingRNA-Update          SEQUENCE {
                                BOOLEAN                                OPTIONAL
    }

-- TAG-VARPENDINGRNA-UPDATE-STOP
-- ASN1STOP
```

— *VarRA-Report*

The UE variable *VarRA-Report* includes the random-access related information.

VarRA-Report UE variable

```
-- ASN1START
-- TAG-VARRA-REPORT-START

VarRA-Report-r16 ::=
    ra-ReportList-r16          SEQUENCE {
    identityList-r18            RA-ReportList-r16,
                                CHOICE {
    plmn-IdentityList-r18       PLMN-IdentityList2-r16,
    snpn-IdentityList-r18       SEQUENCE (SIZE (1..maxNPN-r16)) OF SNPN-Identity-r18
                                }
    }

-- TAG-VARRA-REPORT-STOP
-- ASN1STOP
```

— *VarResumeMAC-Input*

The UE variable *VarResumeMAC-Input* specifies the input used to generate the *resumeMAC-I* during RRC Connection Resume procedure.

VarResumeMAC-Input UE variable

```
-- ASN1START
-- TAG-VARRESUMEMAC-INPUT-START
```

```
VarResumeMAC-Input ::= SEQUENCE {
    sourcePhysCellId      PhysCellId,
    targetCellIdentity     CellIdentity,
    source-c-RNTI          RNTI-Value
}

-- TAG-VARRESUMEMAC-INPUT-STOP
-- ASN1STOP
```

VarResumeMAC-Input field descriptions
targetCellIdentity An input variable used to calculate the <i>resumeMAC-I</i> . Set to the <i>cellIdentity</i> of the first <i>PLMN-Identity</i> included in the <i>PLMN-IdentityInfoList</i> broadcasted in <i>SIB1</i> of the target cell i.e. the cell the UE is trying to resume.
source-c-RNTI Set to C-RNTI that the UE had in the PCell it was connected to prior to suspension of the RRC connection.
sourcePhysCellId Set to the physical cell identity of the PCell the UE was connected to prior to suspension of the RRC connection.

– VarRLF-Report

The UE variable *VarRLF-Report* includes the radio link failure information or handover failure information.

VarRLF-Report UE variable

```
-- ASN1START
-- TAG-VARRLF-REPORT-START

VarRLF-Report-r16 ::= SEQUENCE {
    rlf-Report-r16      RLF-Report-r16,
    identityList-r18     CHOICE {
        plmn-IdentityList-r18  PLMN-IdentityList2-r16,
        snpn-IdentityList-r18  SEQUENCE (SIZE (1..maxNPN-r16)) OF SNPN-Identity-r18
    }
}

-- TAG-VARRLF-REPORT-STOP
-- ASN1STOP
```

– VarServingSecurityCellSetID

The UE variable *VarServingSecurityCellSetID* includes the security cell set ID of serving PCell.

VarServingSecurityCellSetID UE variable

```
-- ASN1START
```

```
-- TAG-VARSERVINGSECURITYCELLSETID-START
VarServingSecurityCellSetID ::=
    servingSecurityCellSetId-r18
}
-- TAG-VARSERVINGSECURITYCELLSETID-STOP
-- ASN1STOP
```

— *VarShortMAC-Input*

The UE variable *VarShortMAC-Input* specifies the input used to generate the *shortMAC-I* during RRC Connection Reestablishment procedure.

VarShortMAC-Input UE variable

```
-- ASN1START
-- TAG-VARSHORTMAC-INPUT-START
VarShortMAC-Input ::=
    sourcePhysCellId
    targetCellIdentity
    source-c-RNTI
}
-- TAG-VARSHORTMAC-INPUT-STOP
-- ASN1STOP
```

VarShortMAC-Input field descriptions
targetCellIdentity An input variable used to calculate the <i>shortMAC-I</i> . Set to the <i>cellIdentity</i> of the first <i>PLMN-Identity</i> in the <i>PLMN-IdentityInfoList</i> broadcasted in <i>SIB1</i> of the target cell i.e. the cell the UE is trying to reestablish the connection.
source-c-RNTI Set to C-RNTI that the UE had in the PCell it was connected to prior to the reestablishment.
sourcePhysCellId Set to the physical cell identity of the PCell the UE was connected to prior to the reestablishment.

— *VarSuccessHO-Report*

The UE variable *VarSuccessHO-Report* includes the successful handover information.

VarSuccessHO-Report UE variable

```
-- ASN1START
-- TAG-VARSUCCESSHO-Report-START
```

```

VarSuccessH0-Report-r17 ::= SEQUENCE {
    successH0-Report-r17 SuccessH0-Report-r17,
    identityList-r18 CHOICE {
        plmn-IdentityList-r18 PLMN-IdentityList2-r16,
        snpn-IdentityList-r18 SEQUENCE (SIZE (1..maxNPN-r16)) OF SNPN-Identity-r18
    }
}
-- TAG-VARSUCCESSH0-Report-STOP
-- ASN1STOP

```

— *VarSuccessPSCell-Report*

The UE variable *VarSuccessPSCell-Report* includes the successful PSCell change or addition information.

VarSuccessPSCell-Report UE variable

```

-- ASN1START
-- TAG-VARSUCCESSPSCELL-Report-START

VarSuccessPSCell-Report-r18 ::= SEQUENCE {
    successPSCell-Report-r18 SuccessPSCell-Report-r18,
    identityList-r18 CHOICE {
        plmn-IdentityList-r18 PLMN-IdentityList2-r16,
        snpn-IdentityList-r18 SEQUENCE (SIZE (1..maxNPN-r16)) OF SNPN-Identity-r18
    }
}
-- TAG-VARSUCCESSPSCELL-Report-STOP
-- ASN1STOP

```

— *VarTSS-Info*

The UE variable *VarTSS-Info* includes information about the current value of *eventID-TSS* and the current value of the global gNB Identity.

VarTSS-Info UE variable

```

-- ASN1START
-- TAG-VARTSS-INFO-START

VarTSS-Info-r18 ::= SEQUENCE {
    storedEventID-r18 INTEGER (0..63),
    storedGlobalGnbID-r18 SEQUENCE {
        plmn-Identity-r18 PLMN-Identity,
        gnb-ID-r18 BIT STRING (SIZE (22..32))
    }
}
-- TAG-VARTSS-INFO-STOP

```

-- ASN1STOP

— End of *NR-UE-Variables*

-- ASN1START

END

-- ASN1STOP

8 Protocol data unit abstract syntax

8.1 General

The RRC PDU contents in clause 6 and clause 10 are described using abstract syntax notation one (ASN.1) as specified in ITU-T Rec. X.680 [6] and X.681 [7]. Transfer syntax for RRC PDUs is derived from their ASN.1 definitions by use of Packed Encoding Rules, unaligned as specified in ITU-T Rec. X.691 [8].

The following encoding rules apply in addition to what has been specified in X.691:

- When a bit string value is placed in a bit-field as specified in 15.6 to 15.11 in X.691, the leading bit of the bit string value shall be placed in the leading bit of the bit-field, and the trailing bit of the bit string value shall be placed in the trailing bit of the bit-field;

NOTE: The terms 'leading bit' and 'trailing bit' are defined in ITU-T Rec. X.680. When using the 'bstring' notation, the leading bit of the bit string value is on the left, and the trailing bit of the bit string value is on the right.

- When decoding types constrained with the ASN.1 Contents Constraint ("CONTAINING"), automatic decoding of the contained type should not be performed because errors in the decoding of the contained type should not cause the decoding of the entire RRC message PDU to fail. It is recommended that the decoder first decodes the outer PDU type that contains the OCTET STRING or BIT STRING with the Contents Constraint, and then decodes the contained type that is nested within the OCTET STRING or BIT STRING as a separate step;
- When decoding a) RRC message PDUs, b) BIT STRING constrained with a Contents Constraint, or c) OCTET STRING constrained with a Contents Constraint, PER decoders are required to never report an error if there are extraneous zero or non-zero bits at the end of the encoded RRC message PDU, BIT STRING or OCTET STRING.

8.2 Structure of encoded RRC messages

An RRC PDU, which is the bit string that is exchanged between peer entities/across the radio interface contains the basic production as defined in X.691.

RRC PDUs shall be mapped to and from PDCP SDUs (in case of DCCH) or RLC SDUs (in case of PCCH, BCCH or CCCH) upon transmission and reception as follows:

- when delivering an RRC PDU as an PDCP SDU to the PDCP layer for transmission, the first bit of the RRC PDU shall be represented as the first bit in the PDCP SDU and onwards; and
- when delivering an RRC PDU as an RLC SDU to the RLC layer for transmission, the first bit of the RRC PDU shall be represented as the first bit in the RLC SDU and onwards; and
- upon reception of an PDCP SDU from the PDCP layer, the first bit of the PDCP SDU shall represent the first bit of the RRC PDU and onwards; and
- upon reception of an RLC SDU from the RLC layer, the first bit of the RLC SDU shall represent the first bit of the RRC PDU and onwards.

8.3 Basic production

The 'basic production' is obtained by applying UNALIGNED PER to the abstract syntax value (the ASN.1 description) as specified in X.691. It always contains a multiple of 8 bits.

8.4 Extension

The following rules apply with respect to the use of protocol extensions:

- A transmitter compliant with this version of the specification shall, unless explicitly indicated otherwise on a PDU type basis, set the extension part empty. Transmitters compliant with a later version may send non-empty extensions;
- A transmitter compliant with this version of the specification shall set spare bits to zero.

8.5 Padding

If the encoded RRC message does not fill a transport block, the RRC layer shall add padding bits. This applies to PCCH and BCCH.

Padding bits shall be set to 0 and the number of padding bits is a multiple of 8.

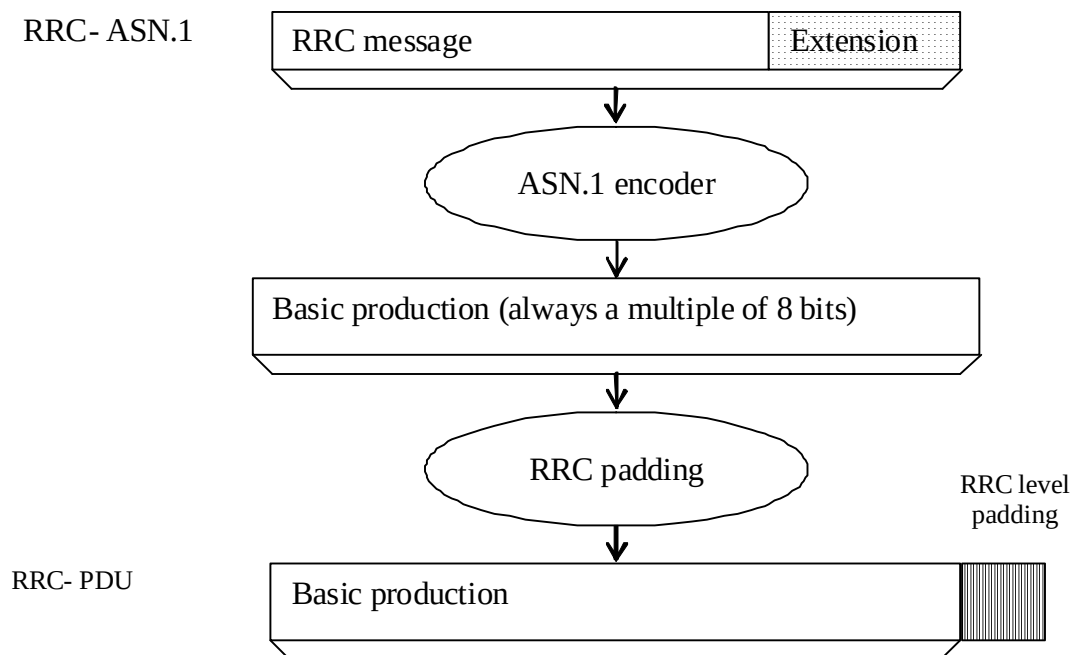 


Figure 8.5-1: RRC level padding

9 Specified and default radio configurations

Specified and default configurations are configurations of which the details are specified in the standard. Specified configurations are fixed while default configurations can be modified using dedicated signalling. The default value for the parameters not listed in following clauses shall be set such as the corresponding features are not configured, i.e. *release* or *false* unless explicitly stated otherwise.

NOTE: The UE applies the default values specified in the field description of ASN.1 parameters only when the parent IE is present. Hence, the UE does not apply all default values in field descriptions when it applies the "default radio configuration" in accordance with this clause.

9.1 Specified configurations

9.1.1 Logical channel configurations

9.1.1.1 BCCH configuration

Parameters

Name	Value	Semantics description	Ver
SDAP configuration	Not used		
PDCH configuration	Not used		
RLC configuration	TM		
Logical channel configuration	Not used		

NOTE: RRC will perform padding, if required due to the granularity of the TF signalling, as defined in 8.5.

9.1.1.2 CCCH configuration

Parameters

Name	Value	Semantics description	Ver
SDAP configuration	Not used		
PDCH configuration	Not used		
RLC configuration	TM		
Logical channel configuration			
>priority	1	Highest priority	
>prioritisedBitRate	infinity		
>bucketSizeDuration	ms1000		
>logicalChannelGroup	0		

9.1.1.3 PCCH configuration

Parameters

Name	Value	Semantics description	Ver
SDAP configuration	Not used		
PDCH configuration	Not used		
RLC configuration	TM		
Logical channel configuration	Not used		

NOTE: RRC will perform padding, if required due to the granularity of the TF signalling, as defined in 8.5.

9.1.1.4 SCCH configuration

Parameters that are specified for unicast of NR sidelink communication, which is used for the sidelink signalling radio bearer of PC5-RRC message. The SL-SRB using this SCCH configuration is named as SL-SRB3.

Name	Value	Semantics description	Ver
PDCP configuration			
> <i>t-Reordering</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>pdcp-SN-Size</i>	12		
SRAP configuration		Specified for L2 U2U relay operation, which is used for U2U Remote UE's SL-SRB3 with the peer U2U Remote UE.	
> <i>sl-RemoteUE-SLRB-Identity</i>	3	This parameter is only applicable to L2 U2U relay operation.	
RLC configuration		AM RLC	
> <i>sn-FieldLength</i>	12		
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>t-PollRetransmit</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>pollPDU</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>pollByte</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>maxRetxThreshold</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>t-StatusProhibit</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>logicalChannelIdentity</i>	3		
MAC configuration			
> <i>priority</i>	1		
> <i>prioritisedBitRate</i>	infinity		
> <i>logicalChannelGroup</i>	0		
> <i>schedulingRequestId</i>	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	
> <i>sl-HARQ-FeedbackEnabled</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
Additional RLC configuration		AM RLC This RLC is used for PDCP duplication	v1800
> <i>sn-FieldLength</i>	12		v1800
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to UE implementation	v1800
> <i>t-PollRetransmit</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>pollPDU</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>pollByte</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>maxRetxThreshold</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>t-StatusProhibit</i>	Undefined	Selected by the receiving UE, up to UE implementation	v1800
> <i>logicalChannelIdentity</i>	22		v1800
MAC configuration associated to additional RLC configuration		This logical channel is used for PDCP duplication	v1800
> <i>priority</i>	1		v1800
> <i>prioritisedBitRate</i>	infinity		v1800
> <i>logicalChannelGroup</i>	0		v1800
> <i>schedulingRequestId</i>	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	v1800
> <i>sl-HARQ-FeedbackEnabled</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800

Parameters that are specified of NR sidelink communication, which is used for the sidelink signalling radio bearer of unprotected PC5-S message (e.g. Direct Link Establishment Request, TS 24.587 [57] or ProSe Direct Link Establishment Request, TS 24.554 [72]). The SL-SRB using this SCCH configuration is named as SL-SRB0.

Name	Value	Semantics description	Ver
PDCP configuration			
> <i>t-Reordering</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>pdcp-SN-Size</i>	12		
SRAP configuration		Specified for L2 U2U relay operation, which is used for U2U Remote UE's SL-SRB0 with the peer U2U Remote UE.	
> <i>sl-RemoteUE-SLRB-Identity</i>	0	This parameter is only applicable to L2 U2U relay operation.	
RLC configuration		UM RLC	
> <i>sn-FieldLength</i>	6		
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>logicalChannelIdentity</i>	0		
MAC configuration			
> <i>priority</i>	1		
> <i>prioritisedBitRate</i>	infinity		
> <i>logicalChannelGroup</i>	0		
> <i>schedulingRequestId</i>	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	
> <i>sl-HARQ-FeedbackEnabled</i>	Undefined	Selected by the transmitting UE, up to UE implementation	

Parameters that are specified for unicast of NR sidelink communication, which is used for the sidelink signalling radio bearer of PC5-S message establishing PC5-S security (e.g. Direct Link Security Mode Command and Direct Link Security Mode Complete, TS 24.587 [57] or ProSe Direct Link Security Mode Command and ProSe Direct Link Security Mode Complete, TS 24.554 [72]). The SL-SRB using this SCCH configuration is named as SL-SRB1.

Name	Value	Semantics description	Ver
PDCP configuration			
> <i>t-Reordering</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>pdcp-SN-Size</i>	12		
SRAP configuration		Specified for L2 U2U relay operation, which is used for U2U Remote UE's SL-SRB1 with the peer U2U Remote UE.	
> <i>sl-RemoteUE-SLRB-Identity</i>	1	This parameter is only applicable to L2 U2U relay operation.	
RLC configuration		AM RLC	
> <i>sn-FieldLength</i>	12		
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>t-PollRetransmit</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>pollPDU</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>pollByte</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>maxRetxThreshold</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>t-StatusProhibit</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>logicalChannelIdentity</i>	1		
MAC configuration			
> <i>priority</i>	1		
> <i>prioritisedBitRate</i>	infinity		
> <i>logicalChannelGroup</i>	0		
> <i>schedulingRequestId</i>	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	
> <i>sl-HARQ-FeedbackEnabled</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
Additional RLC configuration		AM RLC This RLC is used for PDCP duplication	v1800
> <i>sn-FieldLength</i>	12		v1800
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to UE implementation	v1800
> <i>t-PollRetransmit</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>pollPDU</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>pollByte</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>maxRetxThreshold</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>t-StatusProhibit</i>	Undefined	Selected by the receiving UE, up to UE implementation	v1800
> <i>logicalChannelIdentity</i>	20		v1800
MAC configuration associated to additional RLC configuration		This logical channel is used for PDCP duplication	v1800
> <i>priority</i>	1		v1800
> <i>prioritisedBitRate</i>	infinity		v1800
> <i>logicalChannelGroup</i>	0		v1800
> <i>schedulingRequestId</i>	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	v1800
> <i>sl-HARQ-FeedbackEnabled</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800

Parameters that are specified for unicast of NR sidelink communication, which is used for the sidelink signalling radio bearer of protected PC5-S message except Direct Link Security Mode Complete, TS 24.587 [57] or Prose Direct Link Security Mode Complete, TS 24.554 [72]. The SL-SRB using this SCCH configuration is named as SL-SRB2.

Name	Value	Semantics description	Ver
PDCP configuration			
> <i>t-Reordering</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>pdcp-SN-Size</i>	12		
SRAP configuration		Specified for L2 U2U relay operation, which is used for U2U Remote UE's SL-SRB2 with the peer U2U Remote UE.	
> <i>sl-RemoteUE-SLRB-Identity</i>	2	This parameter is only applicable to L2 U2U relay operation.	
RLC configuration		AM RLC	
> <i>sn-FieldLength</i>	12		
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>t-PollRetransmit</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>pollPDU</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>pollByte</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>maxRetxThreshold</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
> <i>t-StatusProhibit</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>logicalChannelIdentity</i>	2		
MAC configuration			
> <i>priority</i>	1		
> <i>prioritisedBitRate</i>	infinity		
> <i>logicalChannelGroup</i>	0		
> <i>schedulingRequestId</i>	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	
> <i>sl-HARQ-FeedbackEnabled</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
Additional RLC configuration		AM RLC This RLC is used for PDCP duplication	v1800
> <i>sn-FieldLength</i>	12		v1800
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to UE implementation	v1800
> <i>t-PollRetransmit</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>pollPDU</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>pollByte</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>maxRetxThreshold</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800
> <i>t-StatusProhibit</i>	Undefined	Selected by the receiving UE, up to UE implementation	v1800
> <i>logicalChannelIdentity</i>	21		v1800
MAC configuration associated to additional RLC configuration		This logical channel is used for PDCP duplication	v1800
> <i>priority</i>	1		v1800
> <i>prioritisedBitRate</i>	infinity		v1800
> <i>logicalChannelGroup</i>	0		v1800
> <i>schedulingRequestId</i>	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	v1800
> <i>sl-HARQ-FeedbackEnabled</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1800

Parameters that are specified for NR sidelink discovery, which is used for the sidelink signalling radio bearer of NR sidelink discovery messages (e.g., Announcement message, Solicitation message and Response message, see TS 23.304 [65]). The SL-SRB using this SCCH configuration is named as SL-SRB4.

Name	Value	Semantics description	Ver
PDCP configuration			
>t-Reordering	Undefined	Selected by the receiving UE, up to UE implementation	
>pdcp-SN-Size	12		
RLC configuration		UM RLC	
>sn-FieldLength	6		
>t-Reassembly	Undefined	Selected by the receiving UE, up to UE implementation	
>logicalChannelIdentity	58		
MAC configuration			
>priority	1		
>prioritisedBitRate	infinity		
>logicalChannelGroup	0		
>schedulingRequestId	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	
>sl-HARQ-FeedbackEnabled	disabled	HARQ feedback is not supported for NR sidelink discovery transmission	

Parameters that are specified for NR sidelink L2 U2N Relay operations, which is used for the PC5 Relay RLC channel for Remote UE's SRB0 message transmission/reception. The PC5 Relay RLC channel using this configuration is named as SL-RLC0.

Name	Value	Semantics description	Ver
RLC configuration		AM	
>sn-FieldLength	12		
>t-Reassembly	Undefined	Selected by the receiving UE, up to UE implementation	
>t-PollRetransmit	Undefined	Selected by the transmitting UE, up to UE implementation	
>pollPDU	Undefined	Selected by the transmitting UE, up to UE implementation	
>pollByte	Undefined	Selected by the transmitting UE, up to UE implementation	
>maxRetxThreshold	Undefined	Selected by the transmitting UE, up to UE implementation	
>t-StatusProhibit	Undefined	Selected by the receiving UE, up to UE implementation	
>logicalChannelIdentity	56		
MAC configuration			
>priority	1		
>prioritisedBitRate	Infinity		
>logicalChannelGroup	0		
>schedulingRequestId	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network. The scheduling request configuration is not applicable to L2 U2N Remote UE.	
>sl-HARQ-FeedbackEnabled	Undefined	Selected by the transmitting UE, up to UE implementation	

Parameters that are specified for NR sidelink L2 U2U Relay operations, which is used for the PC5 Relay RLC channel for U2U Remote UE's SL-SRB0/1/2/3 message transmission/reception with the peer U2U Remote UE. The PC5 Relay RLC channel using this configuration is named as SL-U2U-RLC.

Name	Value	Semantics description	Ver
RLC configuration		AM	
>sn-FieldLength	12		
>t-Reassembly	Undefined	Selected by the receiving UE, up to UE implementation	
>t-PollRetransmit	Undefined	Selected by the transmitting UE, up to UE implementation	
>pollPDU	Undefined	Selected by the transmitting UE, up to UE implementation	
>pollByte	Undefined	Selected by the transmitting UE, up to UE implementation	
>maxRetxThreshold	Undefined	Selected by the transmitting UE, up to UE implementation	
>t-StatusProhibit	Undefined	Selected by the receiving UE, up to UE implementation	
>logicalChannelIdentity	55		
MAC configuration			
>priority	1		
>prioritisedBitRate	Infinity		
>logicalChannelGroup	0		
>schedulingRequestId	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	
>sl-HARQ-FeedbackEnabled	Undefined	Selected by the transmitting UE, up to UE implementation	

9.1.1.5 STCH configuration

Parameters that are specified for NR sidelink communication, which is used for the sidelink data radio bearer.

Name	Value	Semantics description	Ver
PDCP configuration			
> <i>t-Reordering</i>	Undefined	Selected by the receiving UE, up to UE implementation	
> <i>pdcp-SN-Size</i>	12	For broadcast and groupcast of NR sidelink communication	
> <i>maxCID</i>	15	For broadcast and groupcast of NR sidelink communication	
> <i>profiles</i>			
RLC configuration		For broadcast and groupcast of NR sidelink communication, uni-directional UM RLC UM window size is set to 32	
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to Up to UE implementation	
> <i>sn-FieldLength</i>	6	For broadcast and groupcast of NR sidelink communication	
> <i>logicalChannelIdentity</i>	Undefined	Selected by the transmitting UE, up to UE implementation	
MAC configuration			
> <i>priority</i>			
Additional RLC configuration		For broadcast and groupcast of NR sidelink communication, uni-directional UM RLC UM window size is set to 32 This RLC is used for PDCP duplication	v1810
> <i>t-Reassembly</i>	Undefined	Selected by the receiving UE, up to Up to UE implementation	v1810
> <i>sn-FieldLength</i>	6	For broadcast and groupcast of NR sidelink communication	v1810
> <i>logicalChannelIdentity</i>	Undefined	Selected by the transmitting UE, up to UE implementation	v1810
MAC configuration associated to additional RLC configuration			
> <i>priority</i>			

9.1.1.6 MCCH configuration

Parameters that are specified for MCCH.

Name	Value	Semantics description	Ver
RLC configuration		UM RLC	
> <i>sn-FieldLength</i>	6		
> <i>t-Reassembly</i>	ms0		

9.1.1.7 MTCH configuration for MBS broadcast

Parameters that are specified for MBS broadcast MTCH.

Name	Value	Semantics description	Ver
PDCP configuration			
> <i>t-Reordering</i>	ms0		
> <i>pdcp-SN-SizeDL</i>	18		
RLC configuration		UM RLC	
> <i>sn-FieldLength</i>	12		
> <i>t-Reassembly</i>	ms0		

9.1.2 Void

9.2 Default radio configurations

The following clauses only list default values for REL-15 parameters included in protocol version v15.3.0. For all fields introduced in a later protocol version, the default value is "released" or "false" unless explicitly specified otherwise. If the UE is to apply default configuration while it is configured with some critically extended fields, the UE shall apply the original version of those fields with only default values.

NOTE 1: In general, the signalling should preferably support a "release" option for fields introduced after v15.3.0. The "value not applicable" should be used restrictively, mainly limited to for fields which value is relevant only if another field is set to a value other than its default.

NOTE 2: For parameters in *ServingCellConfig*, the default values are specified in the corresponding specification.

9.2.1 Default SRB configurations

Parameters

Name	Value			Semantics description	Ver
	SRB1	SRB2	SRB3		
<i>PDCP-Config</i>					
> <i>t-Reordering</i>	infinity				
<i>RLC-Config CHOICE</i>	Am				
<i>ul-AM-RLC</i>					
> <i>sn-FieldLength</i>	size12				
> <i>t-PollRetransmit</i>	ms45				
> <i>pollPDU</i>	infinity				
> <i>pollByte</i>	infinity				
> <i>maxRetxThreshold</i>	t8				
<i>dl-AM-RLC</i>					
> <i>sn-FieldLength</i>	size12				
> <i>t-Reassembly</i>	ms35				
> <i>t-StatusProhibit</i>	ms0				
<i>logicalChannelIdentity</i>	1	2	3		
<i>LogicalChannelConfig</i>					
> <i>priority</i>	1	3	1		
> <i>prioritisedBitRate</i>	infinity				
> <i>logicalChannelGroup</i>	0				

9.2.2 Default MAC Cell Group configuration

Parameters

Name	Value	Semantics description	Ver
MAC Cell Group configuration			
<i>bsr-Config</i>			
> <i>periodicBSR-Timer</i>	sf10		
> <i>retxBSR-Timer</i>	sf80		
<i>phr-Config</i>			
> <i>phr-PeriodicTimer</i>	sf10		
> <i>phr-ProhibitTimer</i>	sf10		
> <i>phr-Tx-PowerFactorChange</i>	dB1		

9.2.3 Default values timers and constants

Parameters

Name	Value	Semantics description	Ver
t310	ms1000		
n310	n1		
t311	ms30000		
n311	n1		

9.2.4 Default PC5 Relay RLC Channel

Parameters of the PC5 Relay RLC Channel used for Remote UE's SRB1 RRC message transmission and reception. The PC5 Relay RLC Channel using this configuration is named as SL-RLC1.

Name	Value	Semantics description	Ver
RLC configuration		AM	
>sn-FieldLength	12		
>t-Reassembly	Undefined	Selected by the receiving UE, up to UE implementation	
>t-PollRetransmit	Undefined	Selected by the transmitting UE, up to UE implementation	
>pollPDU	Undefined	Selected by the transmitting UE, up to UE implementation	
>pollByte	Undefined	Selected by the transmitting UE, up to UE implementation	
>maxRetxThreshold	Undefined	Selected by the transmitting UE, up to UE implementation	
>t-StatusProhibit	Undefined	Selected by the receiving UE, up to UE implementation	
>logicalChannelIdentity	57		
MAC configuration			
>priority	1		
>prioritisedBitRate	Infinity		
>logicalChannelGroup	0		
>schedulingRequestId	0	The scheduling request configuration with this value is applicable for this SCCH if configured by the network.	

9.2.5 Default SRAP configurations

Parameters that are used for reception of Remote UE's *RRCResume*, *RRCRelease* in response to an *RRCResumeRequest*/*RRCResumeRequest1* and *RRCReestablishment* messages.

Name	Value	Semantics description	Ver
SL SRAP Config			
>sl-LocalIdentity	Undefined	SRAP PDUs with any local identity will be submitted to the SRB1 PDCP entity.	
>sl-RemoteUE-RB-Identity	SRB1		

9.3 Sidelink pre-configured parameters

This ASN.1 segment is the start of the NR definitions of pre-configured sidelink parameters.

```

— NR-Sidelink-Preconf

-- ASN1START
-- TAG-NR-SIDELINK-PRECONF-DEFINITIONS-START

NR-Sidelink-Preconf DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    SL-RelayUE-ConfigU2U-r18,
    SL-RemoteUE-ConfigU2U-r18,
    SL-RelayUE-ConfigU2U-v1840,
    SL-RemoteUE-ConfigU2U-v1830,
    SL-RemoteUE-Config-r17,
    SL-DRX-ConfigGC-BC-r17,
    SL-Freq-Id-r16,
    maxNrofFreqSL-1-r18,
    SL-FreqConfigCommon-r16,
    SL-RadioBearerConfig-r16,
    SL-RLC-BearerConfig-r16,
    SL-EUTRA-AnchorCarrierFreqList-r16,
    SL-NR-AnchorCarrierFreqList-r16,
    SL-MeasConfigCommon-r16,
    SL-UE-SelectedConfig-r16,
    TDD-UL-DL-ConfigCommon,
    maxNrofFreqSL-r16,
    maxNrofSLRB-r16,
    maxSL-LCID-r16,
    SL-FreqConfigCommonExt-v16k0
FROM NR-RRC-Definitions;

-- TAG-NR-SIDELINK-PRECONF-DEFINITIONS-STOP
-- ASN1STOP

```

— *SL-PreconfigurationNR*

The IE *SL-PreconfigurationNR* includes the sidelink pre-configured parameters used for NR sidelink communication. Need codes or conditions specified for subfields in *SL-PreconfigurationNR* do not apply.

SL-PreconfigurationNR information elements

```
-- ASN1START
```

```
-- TAG-SL-PRECONFIGURATIONNR-START
```

```
SL-PreconfigurationNR-r16 ::=
    sidelinkPreconfigNR-r16
    ...
    [[
        sidelinkPreconfigNR-v16k0
    ]]
}

SidelinkPreconfigNR-r16 ::=
    SEQUENCE {
        sl-PreconfigFreqInfoList-r16
        sl-PreconfigNR-AnchorCarrierFreqList-r16
        sl-PreconfigEUTRA-AnchorCarrierFreqList-r16
        sl-RadioBearerPreConfigList-r16
        sl-RLC-BearerPreConfigList-r16
        sl-MeasPreConfig-r16
        sl-OffsetDFN-r16
        t400-r16
        sl-MaxNumConsecutiveDTX-r16
        sl-SSB-PriorityNR-r16
        sl-PreconfigGeneral-r16
        sl-UE-SelectedPreConfig-r16
        sl-CSI-Acquisition-r16
        sl-RoHC-Profiles-r16
        sl-MaxCID-r16
        ...
        [[
            sl-DRX-PreConfigGC-BC-r17
            sl-TxProfileList-r17
            sl-PreconfigDiscConfig-r17
        ]],
        [[
            sl-PreconfigFreqInfoListSizeExt-v1800
            sl-RLC-BearerConfigListSizeExt-v1800
            sl-SyncFreqList-r18
            sl-SyncTxMultiFreq-r18
            sl-PreconfigDiscConfig-v1800
            sl-PosPreconfigFreqInfoList-r18
        ]],
        [[
            t400-U2U-r18
        ]],
        [[
            sl-PreconfigDiscConfig-v1840
        ]]
    }

    SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigCommon-r16 OPTIONAL,
    SL-NR-AnchorCarrierFreqList-r16 OPTIONAL,
    SL-EUTRA-AnchorCarrierFreqList-r16 OPTIONAL,
    SEQUENCE (SIZE (1..maxNrofSLRB-r16)) OF SL-RadioBearerConfig-r16 OPTIONAL,
    SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfig-r16 OPTIONAL,
    SL-MeasConfigCommon-r16 OPTIONAL,
    INTEGER (1..1000) OPTIONAL,
    ENUMERATED {ms100, ms200, ms300, ms400, ms600, ms1000, ms1500, ms2000} OPTIONAL,
    ENUMERATED {n1, n2, n3, n4, n6, n8, n16, n32} OPTIONAL,
    INTEGER (1..8) OPTIONAL,
    SL-PreconfigGeneral-r16 OPTIONAL,
    SL-UE-SelectedConfig-r16 OPTIONAL,
    ENUMERATED {enabled} OPTIONAL,
    SL-RoHC-Profiles-r16 OPTIONAL,
    INTEGER (1..16383) DEFAULT 15,

    SL-DRX-ConfigGC-BC-r17 OPTIONAL,
    SL-TxProfileList-r17 OPTIONAL,
    SL-RemoteUE-Config-r17 OPTIONAL,

    SEQUENCE (SIZE (1..maxNrofFreqSL-1-r18)) OF SL-FreqConfigCommon-r16 OPTIONAL,
    SEQUENCE (SIZE (1..maxSL-LCID-r16)) OF SL-RLC-BearerConfig-r16 OPTIONAL,
    SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-Freq-Id-r16 OPTIONAL,
    ENUMERATED {true} OPTIONAL,
    SL-PreconfigDiscConfig-v1800 OPTIONAL,
    SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigCommon-r16 OPTIONAL,

    ENUMERATED {ms200, ms400, ms600, ms800, ms1200, ms2000, ms3000, ms4000} OPTIONAL,

    SL-PreconfigDiscConfig-v1840 OPTIONAL,
}

SidelinkPreconfigNR-v16k0 ::=
    SEQUENCE {
        sl-PreconfigFreqInfoListExt-v16k0
    }
    SEQUENCE (SIZE (1..maxNrofFreqSL-r16)) OF SL-FreqConfigCommonExt-v16k0 OPTIONAL,

SL-TxProfileList-r17 ::=
    SEQUENCE (SIZE (1..256)) OF SL-TxProfile-r17
```

```
SL-TxProfile-r17 ::=                               ENUMERATED {drx-Compatible, drx-Incompatible, spare6, spare5, spare4, spare3, spare2, spare1}

SL-PreconfigGeneral-r16 ::=                       SEQUENCE {
    sl-TDD-Configuration-r16                       TDD-UL-DL-ConfigCommon                                OPTIONAL,
    reservedBits-r16                               BIT STRING (SIZE (2))                      OPTIONAL,
    ...
}

SL-RoHC-Profiles-r16 ::=                          SEQUENCE {
    profile0x0001-r16                              BOOLEAN,
    profile0x0002-r16                              BOOLEAN,
    profile0x0003-r16                              BOOLEAN,
    profile0x0004-r16                              BOOLEAN,
    profile0x0006-r16                              BOOLEAN,
    profile0x0101-r16                              BOOLEAN,
    profile0x0102-r16                              BOOLEAN,
    profile0x0103-r16                              BOOLEAN,
    profile0x0104-r16                              BOOLEAN
}

SL-PreconfigDiscConfig-v1800 ::=                  SEQUENCE {
    sl-RelayUE-PreconfigU2U-r18                    SL-RelayUE-ConfigU2U-r18,
    sl-RemoteUE-PreconfigU2U-r18                    SL-RemoteUE-ConfigU2U-r18
}

SL-PreconfigDiscConfig-v1840 ::=                  SEQUENCE {
    sl-RelayUE-PreconfigU2U-v1840                    SL-RelayUE-ConfigU2U-v1840,
    sl-RemoteUE-PreconfigU2U-v1840                    SL-RemoteUE-ConfigU2U-v1830
}

-- TAG-SL-PRECONFIGURATIONNR-STOP
-- ASN1STOP
```

SL-PreconfigurationNR field descriptions
<i>sl-DRX-PreConfig-GC-BC</i> This field indicates the sidelink DRX configuration for groupcast and broadcast communication, as specified in TS 38.321 [3].
<i>sl-OffsetDFN</i> Indicates the timing offset for the UE to determine DFN timing when GNSS is used for timing reference. Value 1 corresponds to 0.001 milliseconds, value 2 corresponds to 0.002 milliseconds, and so on. If the field is absent, no offset is applied.
<i>sl-PosPreconfigFreqInfoList</i> This field indicates the NR sidelink positioning carrier frequencies of SL-PRS dedicated resource pool for SL-PRS transmission and reception. In this release, only one entry of <i>SL-FreqConfigCommon</i> is included in the list.
<i>sl-PreconfigDiscConfig</i> This field indicates the configuration for discovery message transmission used by NR sidelink U2N Remote UE, used by NR sidelink U2U Relay UE or used by NR sidelink U2U Remote UE.
<i>sl-PreconfigEUTRA-AnchorCarrierFreqList</i> This field indicates the EUTRA anchor carrier frequency list, which can provide the NR sidelink communication configuration.
<i>sl-PreconfigFreqInfoList</i>, <i>sl-PreconfigFreqInfoListSizeExt</i>, <i>sl-PreconfigFreqInfoListExt</i> This field indicates the NR sidelink communication and/ or NR sidelink discovery configuration some carrier frequency(ies). In this release, only one <i>SL-FreqConfig</i> can be configured in <i>sl-PreconfigFreqInfoList</i> . More entries of <i>SL-FreqConfig</i> can be configured in <i>sl-PreconfigFreqInfoListSizeExt</i> . If <i>sl-PreconfigFreqInfoListExt</i> is included, it contains the same number of entries, and listed in the same order, as in <i>sl-PreconfigFreqInfoList</i> together with <i>sl-PreconfigFreqInfoListSizeExt</i> . The first entry corresponds to the AdditionalSpectrumEmission of the frequency of first entry in <i>sl-PreconfigFreqInfoList</i> , the second entry corresponds to the AdditionalSpectrumEmission of the frequency of first entry in <i>sl-PreconfigFreqInfoListSizeExt</i> , the third entry corresponds to the AdditionalSpectrumEmission of the frequency of second entry in <i>sl-PreconfigFreqInfoListSizeExt</i> and so on.
<i>sl-PreconfigNR-AnchorCarrierFreqList</i> This field indicates the NR anchor carrier frequency list, which can provide the NR sidelink communication configuration.
<i>sl-RadioBearerPreConfigList</i> This field indicates one or multiple sidelink radio bearer configurations.
<i>sl-RLC-BearerPreConfigList</i>, <i>sl-RLC-BearerPreConfigListSizeExt</i> This field indicates one or multiple sidelink RLC bearer configurations.
<i>sl-RoHC-Profiles</i> This field indicates the supported RoHC profiles for NR sidelink communications.
<i>sl-SSB-PriorityNR</i> This field indicates the priority of NR sidelink SSB transmission and reception.
<i>sl-SyncFreqList</i> Indicates a list of candidate carrier frequencies that can be used for the synchronisation of NR sidelink communication. For <i>SL-Freq-Id-r16</i> , the value 1 corresponds to the frequency of first entry in <i>sl-PreconfigFreqInfoList</i> , the value 2 corresponds to the frequency of first entry in <i>sl-PreconfigFreqInfoListSizeExt</i> , the value 3 corresponds to the frequency of second entry in <i>sl-PreconfigFreqInfoListSizeExt</i> and so on.
<i>sl-SyncTxMultiFreq</i> Indicates that the UE transmits S-SSB on multiple carrier frequencies for NR sidelink communication. If this field is absent, the UE transmits S-SSB only on the synchronisation carrier frequency.
<i>sl-TxProfileList</i> List of one or multiple Tx profiles, indicating the compatibility of supporting SL DRX as specified in TS 38.321 [3]. Value <i>drx-Compatible</i> means SL DRX is supported, and value <i>drx-Incompatible</i> means SL DRX is not supported. It is up to the UE implementation whether/how to apply this field.
<i>t400</i> Indicates the value for timer T400 as described in clause 7.1. Value <i>ms100</i> corresponds to 100 ms, value <i>ms200</i> corresponds to 200 ms and so on.
<i>t400-U2U</i> Indicates the value for timer T400 to be applied for end-to-end PC5 connection in sidelink U2U relay operation as described in clause 7.1. Value <i>ms200</i> corresponds to 200 ms, value <i>ms400</i> corresponds to 400 ms and so on.

— *End of NR-Sidelink-Preconf*

-- ASN1START

END

-- ASN1STOP

9.4 Radio Information Related to Discovery Message

This clause specifies RRC information elements that are transferred in Discovery Message.

— *SL-AccessInfo-L2U2N*

The IE *SL-AccessInfo-L2U2N* includes the radio information included in Discovery Message used for L2 U2N relay operation.

SL-AccessInfo-L2U2N information elements

-- ASN1START

-- TAG-SL-ACCESSINFO-L2U2N-START

NR-Sidelink-DiscoveryMessage DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS

CellAccessRelatedInfo,
SL-ServingCellInfo-r17,
SL-RelayIndicationMP-r18

FROM NR-RRC-Definitions;

SL-AccessInfo-L2U2N-r17 ::=

cellAccessRelatedInfo-r17
sl-ServingCellInfo-r17

...,

[[
sl-RelayIndication-r18
]]

}

END

-- TAG-SL-ACCESSINFO-L2U2N-STOP

-- ASN1STOP

SEQUENCE {

CellAccessRelatedInfo,
SL-ServingCellInfo-r17,

SL-RelayIndicationMP-r18

OPTIONAL

9.5 Void

10 Generic error handling

10.1 General

The generic error handling defined in the subsequent clauses applies unless explicitly specified otherwise e.g. within the procedure specific error handling.

The UE shall consider a value as not comprehended when it is set:

- to an extended value that is not defined in the version of the transfer syntax supported by the UE;
- to a spare or reserved value unless the specification defines specific behaviour that the UE shall apply upon receiving the concerned spare/reserved value.

The UE shall consider a field as not comprehended when it is defined:

- as spare or reserved unless the specification defines specific behaviour that the UE shall apply upon receiving the concerned spare/reserved field.

10.2 ASN.1 violation or encoding error

The UE shall:

- 1> when receiving an RRC message on the BCCH, CCCH, PCCH, MCCH, multicast MCCH or a PC5 RRC message on SBCCH for which the abstract syntax is invalid [6]:
 - 2> ignore the message.

NOTE: This clause applies in case one or more fields is set to a value, other than a spare, reserved or extended value, not defined in this version of the transfer syntax. E.g. in the case the UE receives value 12 for a field defined as INTEGER (1..11). In cases like this, it may not be possible to reliably detect which field is in the error hence the error handling is at the message level.

10.3 Field set to a not comprehended value

The UE shall, when receiving an RRC message or PC5 RRC message on any logical channel:

- 1> if the message includes a field that has a value that the UE does not comprehend:
 - 2> if a default value is defined for this field:
 - 3> treat the message while using the default value defined for this field;
 - 2> else if the concerned field is optional:
 - 3> treat the message as if the field were absent and in accordance with the need code for absence of the concerned field;
 - 2> else:
 - 3> treat the message as if the field were absent and in accordance with clause 10.4.

10.4 Mandatory field missing

The UE shall:

- 1> if the message includes a field that is mandatory to include in the message (e.g. because conditions for mandatory presence are fulfilled) and that field is absent or treated as absent:
- 2> if the RRC message was not received on DCCH or CCCH; or
- 2> if the PC5 RRC message was not received on SCCH:
- 3> if the field concerns a (sub-field of) an entry of a list (i.e. a SEQUENCE OF):
 - 4> treat the list as if the entry including the missing or not comprehended field was absent;
- 3> else if the field concerns a sub-field of another field, referred to as the 'parent' field i.e. the field that is one nesting level up compared to the erroneous field:
 - 4> consider the 'parent' field to be set to a not comprehended value;
 - 4> apply the generic error handling to the subsequent 'parent' field(s), until reaching the top nesting level i.e. the message level;
- 3> else (field at message level):
 - 4> ignore the message.

NOTE 1: The error handling defined in these clauses implies that the UE ignores a message with the message type or version set to a not comprehended value.

NOTE 2: The nested error handling for messages received on logical channels other than DCCH, CCCH and SCCH applies for errors in extensions also, even for errors that can be regarded as invalid network operation e.g. the network not observing conditional presence.

NOTE 3: UE behaviour on receipt of an RRC message on DCCH or CCCH or a PC5 RRC message on SCCH that does not include a field that is mandatory (e.g. because conditions for mandatory presence are fulfilled) is unspecified.

The following ASN.1 further clarifies the levels applicable in case of nested error handling for errors in extension fields.

```
-- /example/ ASN1START
-- Example with extension addition group

ItemInfoList ::=
    SEQUENCE (SIZE (1..max)) OF ItemInfo
ItemInfo ::=
    SEQUENCE {
        itemIdentity      INTEGER (1..max),
        field1            Field1,
        field2            Field2 OPTIONAL,           -- Need N
        ...
        [[
            field3-r9      Field3-r9 OPTIONAL,       -- Cond Cond1
            field4-r9      Field4-r9 OPTIONAL         -- Need N
        ]]
    }

-- Example with traditional non-critical extension (empty sequence)

BroadcastInfoBlock1 ::=
    SEQUENCE {
        itemIdentity      INTEGER (1..max),
        field1            Field1,
        field2            Field2 OPTIONAL,           -- Need N
        nonCriticalExtension
        BroadcastInfoBlock1-v940-IEs OPTIONAL
    }

BroadcastInfoBlock1-v940-IEs ::= SEQUENCE {
        field3-r9      Field3-r9 OPTIONAL,       -- Cond Cond1
        field4-r9      Field4-r9 OPTIONAL         -- Need N
        nonCriticalExtension
        SEQUENCE {} OPTIONAL                     -- Need S
    }

-- ASN1STOP
```

The UE shall, apply the following principles regarding the levels applicable in case of nested error handling:

- an extension addition group is not regarded as a level on its own. E.g. in the ASN.1 extract in the previous, a error regarding the conditionality of *field3* would result in the entire *itemInfo* entry to be ignored (rather than just the extension addition group containing *field3* and *field4*);
- a traditional *nonCriticalExtension* is not regarded as a level on its own. E.g. in the ASN.1 extract in the previous, an error regarding the conditionality of *field3* would result in the entire *BroadcastInfoBlock1* to be ignored (rather than just the non-critical extension containing *field3* and *field4*).

10.5 Not comprehended field

The UE shall, when receiving an RRC message on any logical channel:

- 1> if the message includes a field that the UE does not comprehend:
- 2> treat the rest of the message as if the field was absent.

NOTE: This clause does not apply to the case of an extension to the value range of a field. Such cases are addressed instead by the requirements in clause 10.3.

11 Radio information related interactions between network nodes

11.1 General

This clause specifies RRC messages that are transferred between network nodes. These RRC messages may be transferred to or from the UE via another Radio Access Technology. Consequently, these messages have similar characteristics as the RRC messages that are transferred across the NR radio interface, i.e. the same transfer syntax and protocol extension mechanisms apply.

11.2 Inter-node RRC messages

11.2.1 General

This clause specifies RRC messages that are sent either across the X2-, Xn- or the NG-interface, either to or from the gNB, i.e. a single 'logical channel' is used for all RRC messages transferred across network nodes. The information could originate from or be destined for another RAT.

```
-- ASN1START
-- TAG-NR-INTER-NODE-DEFINITIONS-START

NR-InterNodeDefinitions DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    AffectedCarrierFreqCombList-r16,
    AffectedCarrierFreqRangeCombList-r18,
    ARFCN-ValueNR,
    ARFCN-ValueEUTRA,
    CandidateServingFreqListNR-r16,
    CandidateServingFreqRangeListNR-r18,
    CellIdentity,
    CGI-InfoEUTRA,
    CGI-InfoNR,
    CondReconfigExecCondSCG-r17,
    CSI-RS-Index,
    CSI-RS-CellMobility,
    DRX-Config,
    EUTRA-PhysCellId,
    FeatureSetDownlinkPerCC-Id,
    FeatureSetUplinkPerCC-Id,
    FlightPathInfoReport-r18,
    FreqBandIndicatorNR,
    GapConfig,
    IDC-TDM-Assistance-r18,
    maxBandComb,
```

maxBands,
maxBandsEUTRA,
maxCandidateBandIndex-r18,
maxCellsSFTD,
maxFeatureSetsPerBand,
maxFreq,
maxFreqIDC-MRDC,
maxNrofCombIDC,
maxNrofCondCells-r16,
maxNrofCondCells-1-r17,
maxNrofPhysicalResourceBlocks,
maxNrofSCells,
maxNrofServingCells,
maxNrofServingCells-1,
maxNrofServingCellsEUTRA,
maxNrofIndexesToReport,
maxNrofLTM-Configs-r18,
maxSimultaneousBands,
MBSInterestIndication-r17,
MeasQuantityResults,
MeasResultCellListSFTD-EUTRA,
MeasResultCellListSFTD-NR,
MeasResultList2NR,
MeasResultSCG-Failure,
MeasResultServFreqListEUTRA-SCG,
MUSIM-CandidateBandList-r18,
MUSIM-CapRestriction-r18,
MUSIM-GapConfig-r17,
NeedForGapsInfoNR-r16,
NeedForGapNCSG-InfoNR-r17,
NeedForGapNCSG-InfoEUTRA-r17,
NeedForInterruptionInfoNR-r18,
OverheatingAssistance,
OverheatingAssistance-r17,
P-Max,
PhysCellId,
RadioBearerConfig,
RAN-NotificationAreaInfo,
ReferenceConfiguration-r18,
ReportConfigNR,
RRCReconfiguration,
ServCellIndex,
SetupRelease,
SSB-Index,
SSB-MTC,
SSB-ToMeasure,
SS-RSSI-Measurement,
ShortMAC-I,
SubcarrierSpacing,
UEAssistanceInformation,
UE-CapabilityRAT-ContainerList,
maxNrofCLI-RSSI-Resources-r16,
maxNrofCLI-SRS-Resources-r16,
RSSI-ResourceId-r16,

```

SDT-Config-r17,
SidelinkUEInformationNR-r16,
SRS-PosRRC-InactiveValidityAreaPreConfigList-r18,
SRS-ResourceId,
SuccessPSCell-Config-r18,
SupportedAggBandwidth-r17,
UE-RadioPagingInfo-r17
FROM NR-RRC-Definitions;

-- TAG-NR-INTER-NODE-DEFINITIONS-STOP
-- ASN1STOP

```

11.2.2 Message definitions

– *CG-CandidateList*

This message is used to transfer the SCG radio configuration for one or more candidate cells for Conditional PSCell Addition (CPA), Conditional PSCell Change (CPC), inter-SN subsequent CPAC, or CHO with candidate SCG(s) as generated by the candidate target SgNB, or the serving SgNB in case of intra-SN subsequent CPAC configuration(s) which are delivered embedded within an RRC message generated by the MN.

Direction: Secondary gNB to master gNB or eNB.

***CG-CandidateList* message**

```

-- ASN1START
-- TAG-CG-CANDIDATELIST-START

CG-CandidateList ::=
    criticalExtensions
        c1
            cg-CandidateList-r17
            spare3 NULL, spare2 NULL, spare1 NULL
        },
    criticalExtensionsFuture
        SEQUENCE {}
    }

CG-CandidateList-r17-IEs ::=
    SEQUENCE {
        cg-CandidateToAddModList-r17 SEQUENCE (SIZE (1..maxNrofCondCells-r16)) OF CG-CandidateInfo-r17 OPTIONAL,
        cg-CandidateToReleaseList-r17 SEQUENCE (SIZE (1..maxNrofCondCells-r16)) OF CG-CandidateInfoId-r17 OPTIONAL,
        nonCriticalExtension          SEQUENCE {}
    }

CG-CandidateInfo-r17 ::=
    SEQUENCE {
        cg-CandidateInfoId-r17
        candidateCG-Config-r17 OCTET STRING (CONTAINING CG-Config)
    }

CG-CandidateInfoId-r17 ::=
    SEQUENCE {

```

```
        ssbFrequency-r17
        physCellId-r17
    }
    -- TAG-CG-CANDIDATELIST-STOP
    -- ASN1STOP
```

CG-CandidateList field descriptions
cg-CandidateToAddModList Contains information regarding candidate target cells to be added or modified for Conditional PSCell Addition (CPA), Conditional PSCell Change (CPC), inter-SN subsequent CPAC, or CHO with candidate SCG(s) from the candidate target secondary node or from the serving secondary node for intra-SN subsequent CPAC in configuration(s) which are delivered embedded within an RRC message generated by the MN.
cg-CandidateToReleaseList Contains information regarding candidate target cells for CPA, CPC, inter-SN subsequent CPAC, or CHO with candidate SCG(s) to be removed from the candidate target secondary node or from the serving secondary node for intra-SN subsequent CPAC in configuration(s) which are delivered embedded within an RRC message generated by the MN. This list is not used in CPA, CPC, subsequent CPAC, or CHO with candidate SCG(s) preparation.

CG-CandidateInfo field descriptions
cg-CandidateInfoId SSB frequency and Physical Cell Identity of the candidate target cell.
candidateCG-Config CG-Config message corresponding to the cell indicated by cg-CandidateInfoId.

— HandoverCommand

This message is used to transfer the handover command as generated by the target gNB.

Direction: target gNB to source gNB/source RAN.

HandoverCommand message

```
-- ASN1START
-- TAG-HANDOVER-COMMAND-START

HandoverCommand ::=
    criticalExtensions
        c1
            handoverCommand
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture
    }
}

HandoverCommand-IEs ::=
    handoverCommandMessage
        SEQUENCE {
            CHOICE {
                CHOICE{
                    HandoverCommand-IEs,
                }
            }
        }
        SEQUENCE {}

HandoverCommand-IEs ::=
    SEQUENCE {
        OCTET STRING (CONTAINING RRCReconfiguration),
```

```

    nonCriticalExtension                HandoverCommand-v1800-IEs                OPTIONAL
}

HandoverCommand-v1800-IEs ::=
    candPSCellExecutionConditionInfo-r18    SEQUENCE {
        candPSCellExecutionConditionInfo-r18    CandPSCellExecutionConditionInfo-r18    OPTIONAL,
        nonCriticalExtension                    SEQUENCE {}                                OPTIONAL
    }

CandPSCellExecutionConditionInfo-r18 ::= SEQUENCE {
    candPSCellExecCondReportConfigNR-r18    SEQUENCE (SIZE (1..2)) OF ReportConfigNR,
    ...
}

-- TAG-HANDOVER-COMMAND-STOP
-- ASN1STOP
```

HandoverCommand field descriptions
candPSCellExecCondReportConfigNR Contains execution condition parameters of candidate PSCells in case of CHO with candidate SCG(s). This fields can include only <i>a4-Threshold</i> , <i>hysteresis</i> , <i>timeToTrigger</i> , and <i>rsType</i> associated to <i>condEventA4</i> .
handoverCommandMessage Contains the <i>RRCReconfiguration</i> message used to perform handover within NR or handover to NR, as generated (entirely) by the target gNB.

— **HandoverPreparationInformation**

This message is used to transfer the NR RRC information used by the target gNB during handover preparation or UE context retrieval, e.g. in case of resume or re-establishment, including UE capability information. This message is also used for transferring the information between the CU and DU.

Direction: source gNB/source RAN to target gNB or CU to DU.

HandoverPreparationInformation message

```

-- ASN1START
-- TAG-HANDOVER-PREPARATION-INFORMATION-START

HandoverPreparationInformation ::=
    criticalExtensions                SEQUENCE {
        c1                            CHOICE {
            handoverPreparationInformation    HandoverPreparationInformation-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture            SEQUENCE {}
    }

HandoverPreparationInformation-IEs ::= SEQUENCE {
    ue-CapabilityRAT-List                UE-CapabilityRAT-ContainerList,
    sourceConfig                            AS-Config                                OPTIONAL, -- Cond HO
}
```


rrm-Config	RRM-Config	OPTIONAL,	
as-Context	AS-Context	OPTIONAL,	
nonCriticalExtension	SEQUENCE {}	OPTIONAL	
}			
AS-Config ::=	SEQUENCE {		
rrcReconfiguration	OCTET STRING (CONTAINING RRCReconfiguration),		
...			
[[			
sourceRB-SN-Config	OCTET STRING (CONTAINING RadioBearerConfig)	OPTIONAL,	
sourceSCG-NR-Config	OCTET STRING (CONTAINING RRCReconfiguration)	OPTIONAL,	
sourceSCG-EUTRA-Config	OCTET STRING	OPTIONAL	
]],			
[[			
sourceSCG-Configured	ENUMERATED {true}	OPTIONAL	
]],			
[[			
sdt-Config-r17	SDT-Config-r17	OPTIONAL	
]],			
[[			
srs-PosRRC-InactiveValidityAreaPreConfigList-r18	SRS-PosRRC-InactiveValidityAreaPreConfigList-r18	OPTIONAL	
]]			
}			
AS-Context ::=	SEQUENCE {		
reestablishmentInfo	ReestablishmentInfo	OPTIONAL,	
configRestrictInfo	ConfigRestrictInfoSCG	OPTIONAL,	
...			
[[			
ran-NotificationAreaInfo	RAN-NotificationAreaInfo	OPTIONAL	
]],			
[[			
ueAssistanceInformation	OCTET STRING (CONTAINING UEAssistanceInformation)	OPTIONAL	-- Cond H02
]],			
[[			
selectedBandCombinationSN	BandCombinationInfoSN	OPTIONAL	
]],			
[[			
configRestrictInfoDAPS-r16	ConfigRestrictInfoDAPS-r16	OPTIONAL,	
sidelinkUEInformationNR-r16	OCTET STRING	OPTIONAL,	
sidelinkUEInformationEUTRA-r16	OCTET STRING	OPTIONAL,	
ueAssistanceInformationEUTRA-r16	OCTET STRING	OPTIONAL,	
ueAssistanceInformationSCG-r16	OCTET STRING (CONTAINING UEAssistanceInformation)	OPTIONAL,	-- Cond H02
needForGapsInfoNR-r16	NeedForGapsInfoNR-r16	OPTIONAL	
]],			
[[			
configRestrictInfoDAPS-v1640	ConfigRestrictInfoDAPS-v1640	OPTIONAL	
]],			
[[			
needForGapNCSG-InfoNR-r17	NeedForGapNCSG-InfoNR-r17	OPTIONAL,	
needForGapNCSG-InfoEUTRA-r17	NeedForGapNCSG-InfoEUTRA-r17	OPTIONAL,	
mbsInterestIndication-r17	OCTET STRING (CONTAINING MBSInterestIndication-r17)	OPTIONAL	
]],			
[[			
needForInterruptionInfoNR-r18	NeedForInterruptionInfoNR-r18	OPTIONAL,	
flightPathInfoReport-r18	FlightPathInfoReport-r18	OPTIONAL	

```

    ]]
  }

  ConfigRestrictInfoDAPS-r16 ::=
    powerCoordination-r16
    p-DAPS-Source-r16
    p-DAPS-Target-r16
    uplinkPowerSharingDAPS-Mode-r16
  }

  ConfigRestrictInfoDAPS-v1640 ::=
    sourceFeatureSetPerDownlinkCC-r16
    sourceFeatureSetPerUplinkCC-r16
  }

  ReestablishmentInfo ::=
    sourcePhysCellId
    targetCellShortMAC-I
    additionalReestabInfoList
  }

  ReestabNCellInfoList ::=
    ReestabNCellInfo { 1..maxCellPrep } OF ReestabNCellInfo

  ReestabNCellInfo ::=
    cellIdentity
    key-gNodeB-Star
    shortMAC-I
  }

  RRM-Config ::=
    ue-InactiveTime
    candidateCellInfoList
    ...
    [[
      candidateCellInfoListSN-EUTRA
    ]]
  }

  TAG-HANDOVER-PREPARATION-INFORMATION-STOP
  ASN1STOP

```

<i>HandoverPreparationInformation</i> field descriptions
as-Context Local RAN context required by the target gNB or DU.
rrm-Config Local RAN context used mainly for RRM purposes.
sourceConfig The radio resource configuration as used in the source cell.
ue-CapabilityRAT-List The UE radio access related capabilities concerning RATs supported by the UE. A gNB that retrieves MRDC related capability containers ensures that the set of included MRDC containers is consistent w.r.t. the feature set related information.
ue-InactiveTime Duration while UE has not received or transmitted any user data. Thus the timer is still running in case e.g., UE measures the neighbour cells for the HO purpose. Value <i>s1</i> corresponds to 1 second, <i>s2</i> corresponds to 2 seconds and so on. Value <i>min1</i> corresponds to 1 minute, value <i>min1s20</i> corresponds to 1 minute and 20 seconds, value <i>min1s40</i> corresponds to 1 minute and 40 seconds and so on. Value <i>hr1</i> corresponds to 1 hour, <i>hr1min30</i> corresponds to 1 hour and 30 minutes and so on.

<i>AS-Config</i> field descriptions
rrcReconfiguration Contains the <i>RRCReconfiguration</i> configuration as generated entirely by the MN. If the <i>TMGI-r17</i> is included in the <i>MRB-ToAddMod-r17</i> in the <i>RadioBearerConfig</i> , the <i>plmn-Index</i> is replaced by the PLMN ID, if needed.
sdt-Config Contains the IE <i>SDT-Config</i> as generated entirely by the last serving gNB. This field is only used during the SDT procedure and the RNA update procedure with UE context relocation as defined in TS 38.300 [2], clause 18.2 and 9.2.2.5 respectively.
sourceRB-SN-Config Contains the IE <i>RadioBearerConfig</i> as generated entirely by the SN. This field is only used when the UE is configured with SN terminated RB(s).
sourceSCG-Configured Value <i>true</i> indicates that the UE is configured with NR or EUTRA SCG in source configuration. The field is only used in NR-DC and NE-DC and is included only if the fields <i>sourceSCG-NR-Config</i> and <i>sourceSCG-EUTRA-Config</i> are absent.
sourceSCG-EUTRA-Config Contains the current dedicated SCG configuration in <i>RRCConnectionReconfiguration</i> message as specified in TS 36.331 [10] and generated entirely by the SN. In this version of the specification, the E-UTRA <i>RRCConnectionReconfiguration</i> message can only include the field <i>scg-Configuration</i> . This field is only used in NE-DC.
sourceSCG-NR-Config Contains the current dedicated SCG configuration in <i>RRCReconfiguration</i> message as generated entirely by the SN. In this version of the specification, the <i>RRCReconfiguration</i> message can only include fields <i>secondaryCellGroup</i> , <i>measConfig</i> , and <i>conditionalReconfiguration</i> . This field is only used in NR-DC.
srs-PosRRC-InactiveValidityAreaPreConfigList Contains the IE <i>SRS-PosRRC-InactiveValidityAreaPreConfigList</i> as generated entirely by the last serving gNB. This field is only used UE is preconfigured with SRS for positioning with validity area and during the RNA update procedure with UE context relocation as defined in TS 38.300 [2], clause 18.2 and 9.2.2.5 respectively.

AS-Context field descriptions
configRestrictInfoDAPS Includes fields for which source cell explicitly indicates the restriction to be observed by target cell during DAPS handover.
mbsInterestIndication Includes the information last reported by the UE in the NR <i>MBSInterestIndication</i> message, where the <i>plmn-Index</i> (if included by the UE in <i>tmgi</i>) is replaced by the PLMN ID, if needed. A TMGI for which the <i>plmn-Index</i> points to a non-serving SNPN is removed from the NR <i>MBSInterestIndication</i> message.
needForGapsInfoNR Includes measurement gap requirement information of the UE for NR target bands. The field includes <i>needForGapsInfoNR</i> in <i>RRCReconfigurationComplete</i> message, <i>needForGapsInfoNR</i> in <i>RRCResumeComplete</i> message or <i>musim-needForGapsInfoNR</i> in <i>UEAssistanceInformation</i> message that is last reported by the UE, if any.
selectedBandCombinationSN Indicates the band combination selected by SN in (NG)EN-DC, NE-DC, and NR-DC.
sidelinkUEInformationEUTRA This field includes <i>SidelinkUEInformation</i> IE as specified in TS 36.331 [10].
sidelinkUEInformationNR This field includes <i>SidelinkUEInformationNR</i> IE.
ueAssistanceInformation Includes for each UE assistance feature the information last reported by the UE, if any.
ueAssistanceInformationSCG Includes for each UE assistance feature associated with the SCG, the information last reported by the UE in the NR <i>UEAssistanceInformation</i> message for the SCG, if any.

ConfigRestrictInfoDAPS field descriptions
sourceFeatureSetPerUplinkCC/sourceFeatureSetPerDownlinkCC Indicates an index referring to the position of the <i>FeatureSetUplinkPerCC/FeatureSetDownlinkPerCC</i> selected by source in the <i>featureSetsUplinkPerCC/featureSetsDownlinkPerCC</i> .

RRM-Config field descriptions
candidateCellInfoList A list of the best cells on each frequency for which measurement information was available
candidateCellInfoListSN-EUTRA A list of EUTRA cells including serving cells and best neighbour cells on each serving frequency, for which measurement results were available. This field is only used in NE-DC.

Conditional Presence	Explanation
<i>HO</i>	The field is mandatory present in case of handover within NR or UE context retrieval, e.g. in case of resume or re-establishment. The field is optionally present in case of handover from E-UTRA/5GC. Otherwise the field is absent.
<i>HO2</i>	The field is optionally present in case of handover within NR; otherwise the field is absent.

NOTE 1: The following table indicates per source RAT whether RAT capabilities are included or not.

Source RAT	NR capabilities	E-UTRA capabilities	MR-DC capabilities	UTRA capabilities
NR	May be included if UE Radio Capability ID as specified in 23.502 [43] is used for the UE. Included otherwise.	May be included	May be included	May be included, ignored by gNB if received
E-UTRAN	May be included if UE Radio Capability ID as specified in 23.502 [43] is used for the UE. Included otherwise.	May be included	May be included	May be included, ignored by gNB if received

NOTE 2: The following table indicates, in case of inter-RAT handover from E-UTRA, which additional IEs are included or not:

Source system	sourceConfig	rrm-Config	as-Context
E-UTRA/EPC	Not included	May be included	Not included
E-UTRA/5GC	May be included, but only <i>radioBearerConfig</i> is included in the <i>RRCReconfiguration</i> .	May be included	Not included

– CG-Config

This message is used to transfer the SCG radio configuration as generated by the SgNB or SeNB. It can also be used by a CU to request a DU to perform certain actions, e.g. to request the DU to perform a new lower layer configuration.

Direction: Secondary gNB or eNB to master gNB or eNB, alternatively CU to DU.

CG-Config message

```
-- ASN1START
-- TAG-CG-CONFIG-START

CG-Config ::=
    criticalExtensions
        c1
            cg-Config
            spare3 NULL, spare2 NULL, spare1 NULL
        },
    criticalExtensionsFuture
        SEQUENCE {}
    }

CG-Config-IEs ::=
    SEQUENCE {
        scg-CellGroupConfig OCTET STRING (CONTAINING RRCReconfiguration) OPTIONAL,
        scg-RB-Config OCTET STRING (CONTAINING RadioBearerConfig) OPTIONAL,
        configRestrictModReq ConfigRestrictModReqSCG OPTIONAL,
        drx-InfoSCG DRX-Info OPTIONAL,
        candidateCellInfoListSN OCTET STRING (CONTAINING MeasResultList2NR) OPTIONAL,
        measConfigSN MeasConfigSN OPTIONAL,
        selectedBandCombination BandCombinationInfoSN OPTIONAL,
        fr-InfoListSCG FR-InfoList OPTIONAL,
```

candidateServingFreqListNR nonCriticalExtension }	CandidateServingFreqListNR CG-Config-v1540-IEs	OPTIONAL, OPTIONAL	
CG-Config-v1540-IEs ::= pSCellFrequency reportCGI-RequestNR requestedCellInfo ssbFrequency cellForWhichToReportCGI } ph-InfoSCG nonCriticalExtension }	SEQUENCE { ARFCN-ValueNR SEQUENCE { SEQUENCE { ARFCN-ValueNR, PhysCellId } } PH-TypeListSCG CG-Config-v1560-IEs	OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL	
CG-Config-v1560-IEs ::= pSCellFrequencyEUTRA scg-CellGroupConfigEUTRA candidateCellInfoListSN-EUTRA candidateServingFreqListEUTRA needForGaps drx-ConfigSCG reportCGI-RequestEUTRA requestedCellInfoEUTRA eutraFrequency cellForWhichToReportCGI-EUTRA } nonCriticalExtension }	SEQUENCE { ARFCN-ValueEUTRA OCTET STRING OCTET STRING CandidateServingFreqListEUTRA ENUMERATED {true} DRX-Config SEQUENCE { SEQUENCE { ARFCN-ValueEUTRA, EUTRA-PhysCellId } } CG-Config-v1590-IEs	OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL, OPTIONAL	
CG-Config-v1590-IEs ::= scellFrequenciesSN-NR scellFrequenciesSN-EUTRA nonCriticalExtension }	SEQUENCE { SEQUENCE (SIZE (1.. maxNrofServingCells-1)) OF ARFCN-ValueNR SEQUENCE (SIZE (1.. maxNrofServingCells-1)) OF ARFCN-ValueEUTRA CG-Config-v1610-IEs	OPTIONAL, OPTIONAL, OPTIONAL	
CG-Config-v1610-IEs ::= drx-InfoSCG2 nonCriticalExtension }	SEQUENCE { DRX-Info2 CG-Config-v1620-IEs	OPTIONAL, OPTIONAL	
CG-Config-v1620-IEs ::= ueAssistanceInformationSCG-r16 nonCriticalExtension }	SEQUENCE { OCTET STRING (CONTAINING UEAssistanceInformation) CG-Config-v1630-IEs	OPTIONAL, OPTIONAL	
CG-Config-v1630-IEs ::= selectedTOffset-r16 nonCriticalExtension }	SEQUENCE { T-Offset-r16 CG-Config-v1640-IEs	OPTIONAL, OPTIONAL	
CG-Config-v1640-IEs ::=	SEQUENCE {		

```

servCellInfoListSCG-NR-r16      ServCellInfoListSCG-NR-r16      OPTIONAL,
servCellInfoListSCG-EUTRA-r16  ServCellInfoListSCG-EUTRA-r16  OPTIONAL,
nonCriticalExtension            CG-Config-v1700-IEs          OPTIONAL
}

CG-Config-v1700-IEs ::=
  candidateCellInfoListCPC-r17  SEQUENCE {
    twoPHRModeSCG-r17           CandidateCellInfoListCPC-r17  OPTIONAL,
    nonCriticalExtension          ENUMERATED {enabled}             OPTIONAL,
                                CG-Config-v1730-IEs              OPTIONAL
  }

CG-Config-v1730-IEs ::=
  fr1-Carriers-SCG-r17          SEQUENCE {
    fr2-Carriers-SCG-r17        INTEGER (1..32)                  OPTIONAL,
    nonCriticalExtension          INTEGER (1..32)                  OPTIONAL,
                                CG-Config-v1800-IEs              OPTIONAL
  }

CG-Config-v1800-IEs ::=
  candidateServingFreqRangeListNR-r18  SEQUENCE {
    candidateServingFreqListNR-r16      CandidateServingFreqRangeListNR-r18  OPTIONAL,
    idc-TDM-AssistanceConfig-r18         CandidateServingFreqListNR-r16      OPTIONAL,
    candidateCellInfoListSubsequentCPC-r18  ENUMERATED {enabled}             OPTIONAL,
    scpac-ReferenceConfigurationSCG-r18    CandidateCellInfoListCPC-r17  OPTIONAL,
    subsequentCPAC-Information-r18         ReferenceConfiguration-r18    OPTIONAL,
    successPSCell-Config-r18              CandidateCellInfoListCPC-r17  OPTIONAL,
    nonCriticalExtension                   SuccessPSCell-Config-r18      OPTIONAL,
                                SEQUENCE {}
  }

ServCellInfoListSCG-NR-r16 ::= SEQUENCE (SIZE (1.. maxNrofServingCells)) OF ServCellInfoXCG-NR-r16

ServCellInfoXCG-NR-r16 ::= SEQUENCE {
  dl-FreqInfo-NR-r16          FrequencyConfig-NR-r16          OPTIONAL,
  ul-FreqInfo-NR-r16          FrequencyConfig-NR-r16          OPTIONAL, -- Cond FDD
  ...
}

FrequencyConfig-NR-r16 ::= SEQUENCE {
  freqBandIndicatorNR-r16     FreqBandIndicatorNR,
  carrierCenterFreq-NR-r16    ARFCN-ValueNR,
  carrierBandwidth-NR-r16     INTEGER (1..maxNrofPhysicalResourceBlocks),
  subcarrierSpacing-NR-r16    SubcarrierSpacing
}

ServCellInfoListSCG-EUTRA-r16 ::= SEQUENCE (SIZE (1.. maxNrofServingCellsEUTRA)) OF ServCellInfoXCG-EUTRA-r16

ServCellInfoXCG-EUTRA-r16 ::= SEQUENCE {
  dl-CarrierFreq-EUTRA-r16    ARFCN-ValueEUTRA              OPTIONAL,
  ul-CarrierFreq-EUTRA-r16    ARFCN-ValueEUTRA              OPTIONAL, -- Cond FDD
  transmissionBandwidth-EUTRA-r16  TransmissionBandwidth-EUTRA-r16  OPTIONAL,
  ...
}

TransmissionBandwidth-EUTRA-r16 ::= ENUMERATED {rb6, rb15, rb25, rb50, rb75, rb100}

PH-TypeListSCG ::= SEQUENCE (SIZE (1..maxNrofServingCells)) OF PH-InfoSCG

```

```

PH-InfoSCG ::=
    servCellIndex
    ph-Uplink
    ph-SupplementaryUplink
    ...,
    [[
        twoSRS-PUSCH-Repetition-r17
    ]],
    [[
        twoSRS-MultipanelScheme-r18
    ]]
}

PH-UplinkCarrierSCG ::=
    ph-Type1or3
    ...
}

MeasConfigSN ::=
    measuredFrequenciesSN
    ...
}

NR-FreqInfo ::=
    measuredFrequency
    ...
}

ConfigRestrictModReqSCG ::=
    requestedBC-MRDC
    requestedP-MaxFR1
    ...,
    [[
        requestedPDCCH-BlindDetectionSCG
        requestedP-MaxEUTRA
    ]],
    [[
        requestedP-MaxFR2-r16
        requestedMaxInterFreqMeasIdSCG-r16
        requestedMaxIntraFreqMeasIdSCG-r16
        requestedTOffset-r16
    ]],
    [[
        reservedResourceConfigNRDC-r17
    ]],
    [[
        aggregatedBandwidthSN-r17
    ]],
    [[
        requestedMaxLTM-CandidateIdSCG-r18
    ]],
    [[
        requestedL1-MeasConfigNRDC-r18
    ]]

```

SEQUENCE {

ServCellIndex,

PH-UplinkCarrierSCG,

PH-UplinkCarrierSCG

OPTIONAL,

ENUMERATED{enabled}

OPTIONAL

ENUMERATED{enabled}

OPTIONAL

SEQUENCE{

ENUMERATED {type1, type3},

SEQUENCE {

SEQUENCE (SIZE (1..maxMeasFreqsSN)) OF NR-FreqInfo

OPTIONAL,

SEQUENCE {

ARFCN-ValueNR

OPTIONAL,

SEQUENCE {

BandCombinationInfoSN

P-Max

OPTIONAL,

OPTIONAL,

INTEGER (1..15)

P-Max

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

P-Max

INTEGER(1..maxMeasIdentitiesMN)

OPTIONAL,

INTEGER(1..maxMeasIdentitiesMN)

OPTIONAL,

T-Offset-r16

OPTIONAL

ResourceConfigNRDC-r17

OPTIONAL

AggregatedBandwidthSN-r17

OPTIONAL

INTEGER(0..maxNrofLTM-Configs-r18)

OPTIONAL

L1-MeasConfigNRDC-r18

OPTIONAL


```

    ]],
    [[
    requestedLTM-ResourceConfigNRDC-r18 LTM-ResourceConfigNRDC-r18
    ]]
}

BandCombinationIndex ::= INTEGER (1..maxBandComb)

BandCombinationInfoSN ::= SEQUENCE {
    bandCombinationIndex      BandCombinationIndex,
    requestedFeatureSets      FeatureSetEntryIndex
}

FR-InfoList ::= SEQUENCE (SIZE (1..maxNrofServingCells-1)) OF FR-Info

FR-Info ::= SEQUENCE {
    servCellIndex      ServCellIndex,
    fr-Type             ENUMERATED {fr1, fr2}
}

CandidateServingFreqListNR ::= SEQUENCE (SIZE (1.. maxFreqIDC-MRDC)) OF ARFCN-ValueNR

CandidateServingFreqListEUTRA ::= SEQUENCE (SIZE (1.. maxFreqIDC-MRDC)) OF ARFCN-ValueEUTRA

T-Offset-r16 ::= ENUMERATED {ms0dot5, ms0dot75, ms1, ms1dot5, ms2, ms2dot5, ms3, spare1}

CandidateCellInfoListCPC-r17 ::= SEQUENCE (SIZE (1..maxFreq)) OF CandidateCellInfo-r17

CandidateCellInfo-r17 ::= SEQUENCE {
    ssbFrequency-r17      ARFCN-ValueNR,
    candidateList-r17      SEQUENCE (SIZE (1..maxNrofCondCells-r16)) OF CandidateCell-r17
}

CandidateCell-r17 ::= SEQUENCE {
    physCellId-r17        PhysCellId,
    condExecutionCondSCG-r17 OCTET STRING (CONTAINING CondReconfigExecCondSCG-r17)
}

AggregatedBandwidthSN-r17 ::= SEQUENCE {
    aggBW-FDD-DL-r17      SupportedAggBandwidth-r17
    aggBW-FDD-UL-r17      SupportedAggBandwidth-r17
    aggBW-TDD-DL-r17      SupportedAggBandwidth-r17
    aggBW-TDD-UL-r17      SupportedAggBandwidth-r17
    aggBW-TotalDL-r17     SupportedAggBandwidth-r17
    aggBW-TotalUL-r17     SupportedAggBandwidth-r17
}

-- TAG-CG-CONFIG-STOP
-- ASN1STOP

```

OPTIONAL

OPTIONAL

OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL,
 OPTIONAL

CG-Config field descriptions
aggregatedBandwidthSN Used to indicate or request the maximum aggregated bandwidth at the SN side if the <i>supportedAggBW-FR1</i> was reported for the <i>selectedBandCombination</i> or <i>requestedBC-MRDC</i>, respectively. This field is only used in NR-DC. - <i>aggBW-FDD-DL/UL-r17</i> indicates the aggregated bandwidth across FDD DL/UL CCs in SCG; - <i>aggBW-TDD-DL/UL-r17</i> indicates the aggregated bandwidth across TDD DL/UL CCs in SCG; - <i>aggBW-TotalDL/UL-r17</i> indicates the aggregated bandwidth across all DL/UL CCs in SCG.
candidateCellInfoListCPC Contains information regarding candidate target cells for Conditional PSCell Change (CPC) or inter-SN subsequent CPAC that the source secondary gNB suggests the target secondary gNB to consider configuring for CPC or subsequent CPAC, and/or that the source secondary gNB prepares for intra-SN subsequent CPAC configuration(s) which are delivered embedded within an RRC message generated by the MN. This field is only used in SN initiated CPC and SN initiated subsequent CPAC.
candidateCellInfoListSN Contains information regarding cells that the source secondary node suggests the target secondary gNB to consider configuring.
candidateCellInfoListSN-EUTRA Includes the <i>MeasResultList3EUTRA</i> as specified in TS 36.331 [10]. Contains information regarding cells that the source secondary node suggests the target secondary eNB to consider configuring. This field is only used in NE-DC.
candidateCellInfoListSubsequentCPC Contains information regarding candidate target cells for subsequent CPAC that candidate secondary gNB (or the serving secondary gNB in case of intra-SN subsequent CPAC configuration(s) which are delivered embedded within an RRC message generated by the MN) suggests the master gNB to consider configuring for subsequent CPAC. This field is only used in MN initiated and SN initiated subsequent CPAC. This field is only included in a <i>CG-Config</i> message which is contained within a <i>CG-CandidateList</i> message.
candidateServingFreqListNR, candidateServingFreqListEUTRA Indicates frequencies of candidate serving cells for In-Device Co-existence Indication (see TS 36.331 [10]).
candidateServingFreqListNR-r18 Indicates the candidate frequencies configured by SN for IDC. This field is only used in NR-DC.
candidateServingFreqRangeListNR Indicates the candidate frequency ranges configured by SN for IDC. This field is only used in NR-DC.
configRestrictModReq Used by SN to request changes to SCG configuration restrictions previously set by MN to ensure UE capabilities are respected and to indicate the configured/reserved SCG resources. E.g. can be used to request configuring an NR band combination whose use MN has previously forbidden. SN only includes this field in SN-initiated procedures unless this field is used to indicate configured/reserved SCG resources (corresponding to <i>reservedResourceConfigNRDC</i> and/or <i>aggregatedBandwidthSN</i>) only.
drx-ConfigSCG This field contains the complete DRX configuration of the SCG. This field is only used in NR-DC.
drx-InfoSCG This field contains the DRX long and short cycle configuration of the SCG. This field is used in (NG)EN-DC and NE-DC.
drx-InfoSCG2 This field contains the drx-onDurationTimer configuration of the SCG. This field is only used in (NG)EN-DC.
fr-InfoListSCG Contains information of FR information of serving cells that include PSCell and SCells configured in SCG.
fr1-Carriers-SCG, fr2-Carriers-SCG Indicates the number of FR1 or FR2 serving cells configured in SCG.
idc-TDM-AssistanceConfig Indicates if the IDC TDM reporting is enabled for the UE by SN. This field is only used in NR-DC.
measuredFrequenciesSN Used by SN to indicate a list of frequencies measured by the UE.
needForGaps In NE-DC, indicates whether the SN requests gNB to configure measurements gaps.

ph-InfoSCG
Power headroom information in SCG that is needed in the reception of PHR MAC CE of MCG
ph-SupplementaryUplink
Power headroom information for supplementary uplink. In the case of (NG)EN-DC and NR-DC, this field is only present when two UL carriers are configured for a serving cell and one UL carrier reports type1 PH while the other reports type 3 PH.
ph-Type1or3
Type of power headroom for a certain serving cell in SCG (PSCell and activated SCCells). Value <i>type1</i> refers to type 1 power headroom, value <i>type3</i> refers to type 3 power headroom. (See TS 38.321 [3]).
ph-Uplink
Power headroom information for uplink.
pSCellFrequency, pSCellFrequencyEUTRA
Indicates the frequency of PSCell in NR (i.e., <i>pSCellFrequency</i>) or E-UTRA (i.e., <i>pSCellFrequencyEUTRA</i>). In this version of the specification, <i>pSCellFrequency</i> is not used in NE-DC whereas <i>pSCellFrequencyEUTRA</i> is only used in NE-DC. <i>pSCellFrequency</i> indicates the <i>absoluteFrequencySSB</i> .
reportCGI-RequestNR, reportCGI-RequestEUTRA
Used by SN to indicate to MN about configuring <i>reportCGI</i> procedure. The request may optionally contain information about the cell for which SN intends to configure <i>reportCGI</i> procedure. In this version of the specification, the <i>reportCGI-RequestNR</i> is used in (NG)EN-DC and NR-DC whereas <i>reportCGI-RequestEUTRA</i> is used only for NE-DC.
requestedBC-MRDC
Used to request configuring a band combination and corresponding feature sets which are forbidden to use by MN (i.e. outside of the <i>allowedBC-ListMRDC</i>) to allow re-negotiation of the UE capabilities for SCG configuration.
requestedL1-MeasConfigNRDC
Used to request the maximum number of allowed resources for L1 measurements to be configured for LTM at the SCG. This field is only used in NR-DC.
requestedLTM-ResourceConfigNRDC
Used to request the maximum number of allowed resources for configuring LTM at the SCG. This field is only used in NR-DC.
requestedMaxInterFreqMeasIdSCG
Used to request the maximum number of allowed measurement identities to configure for inter-frequency measurement. This field is only used in NR-DC.
requestedMaxIntraFreqMeasIdSCG
Used to request the maximum number of allowed measurement identities to configure for intra-frequency measurement on each serving frequency.
requestedMaxLTM-CandidateIdSCG
Used to request the maximum number of allowed LTM candidate configurations to configure. This field is only used in NR-DC.
requestedPDCCH-BlindDetectionSCG
Requested value of the reference number of cells for PDCCH blind detection allowed to be configured for the SCG.
requestedP-MaxEUTRA
Requested value for the maximum power for the serving cells the UE can use in E-UTRA SCG. This field is only used in NE-DC.
requestedP-MaxFR1
Requested value for the maximum power for the serving cells on frequency range 1 (FR1) in this secondary cell group (see TS 38.104 [12]) the UE can use in NR SCG.
requestedP-MaxFR2
Requested value for the maximum power for the serving cells on frequency range 2 (FR2) in this secondary cell group the UE can use in NR SCG. This field is only used in NR-DC.
requestedTOffset
Requests the new value for the time offset restriction used by the SN for scheduling SCG transmissions (i.e. $T_{proc,SCG}^{max}$, see TS 38.213 [13]). This field is used in NR-DC only when the fields <i>nrdc-PC-mode-FR1-r16</i> or <i>nrdc-PC-mode-FR2-r16</i> are set to dynamic. Value ms0dot5 corresponds to 0.5 ms, value ms0dot75 corresponds to 0.75 ms, value ms1 corresponds to 1ms and so on.
reservedResourceConfigNRDC
Used to request or indicate the maximum number of resources reserved for the SCG. This field is only used in NR-DC.

scellFrequenciesSN-EUTRA, scellFrequenciesSN-NR

Indicates the frequency of all SCells with SSB configured in SCG. The field *scellFrequenciesSN-EUTRA* is used in NE-DC; the field *scellFrequenciesSN-NR* is used in (NG)EN-DC and NR-DC. In (NG)EN-DC, the field is optionally provided to the MN. *scellFrequenciesSN-NR* indicates *absoluteFrequencySSB*.

scg-CellGroupConfig

Contains the *RRCReconfiguration* message (containing only *secondaryCellGroup* and/or *measConfig* and/or *otherConfig* and/or *appLayerMeasConfig* and/or *conditionalReconfiguration*, *ltm-Config*, and/or *bap-Config* and/or *iab-IP-AddressConfigurationList*):

- to be sent to the UE, used upon SCG establishment or modification (only when the SCG is not released by the SN), as generated (entirely) by the (target) SgNB. In this case, the SN sets the *RRCReconfiguration* message in accordance with clause 6 e.g. regarding the "Need" or "Cond" statements.

or

- including the current SCG configuration of the UE, when provided in response to a query from MN, or in SN triggered SN change in order to enable delta signaling by the target SN, or in SN triggered modification procedure in order to coordinate CHO or MN-initiated CPC with SCG reconfigurations (see TS 38.423 [35]). In this case, the SN sets the *RRCReconfiguration* message in accordance with clause 11.2.3.

The field is absent if neither SCG (re)configuration nor SCG configuration query nor SN triggered modification procedure in order to coordinate CHO or MN-initiated CPC with SCG reconfigurations (see TS 38.423 [35]) nor SN triggered SN change is performed, e.g. at inter-node capability/configuration coordination which does not result in SCG (re)configuration towards the UE. The field is also absent upon an SCG release triggered by the SN. This field is not applicable in NE-DC.

scg-CellGroupConfigEUTRA

Includes the E-UTRA *RRCConnectionReconfiguration* message as specified in TS 36.331 [10]. In this version of the specification, the E-UTRA RRC message can only include the field *scg-Configuration*:

- to be sent to the UE, used to (re-)configure the SCG configuration upon SCG establishment or modification (only when the SCG is not released by the SN), as generated (entirely) by the (target) SeNB. In this case, the SN sets the *scg-Configuration* within the EUTRA *RRCConnectionReconfiguration* message in accordance with clause 6 in TS 36.331 [10] e.g. regarding the "Need" or "Cond" statements.

or

- including the current SCG configuration of the UE, when provided in response to a query from MN, or in SN triggered SN change in order to enable delta signalling by the target SN.

The field is absent if neither SCG (re)configuration nor SCG configuration query nor SN triggered SN change is performed, e.g. at inter-node capability/configuration coordination which does not result in SCG (re)configuration towards the UE. The field is also absent upon an SCG release triggered by the SN. This field is only used in NE-DC.

scg-RB-Config

Contains the IE *RadioBearerConfig*:

- to be sent to the UE, used to (re-)configure the SCG RB configuration upon SCG establishment or modification, as generated (entirely) by the (target) SgNB or SeNB. In this case, the SN sets the *RadioBearerConfig* in accordance with clause 6, e.g. regarding the "Need" or "Cond" statements.

or

- including the current SCG RB configuration of the UE, when provided in response to a query from MN or in SN triggered SN change or in SN triggered SN release or bearer type change between SN terminated bearer to MN terminated bearer in order to enable delta signaling by the MN or target SN. In this case, the SN sets the *RadioBearerConfig* in accordance with clause 11.2.3.

The field is absent if neither SCG (re)configuration nor SCG configuration query nor SN triggered SN change nor SN triggered SN release is performed, e.g. at inter-node capability/configuration coordination which does not result in SCG RB (re)configuration.

scpac-ReferenceConfigurationSCG

Includes the reference configuration associated with the SCG for the candidate supporting subsequent CPAC.

selectedBandCombination
Indicates the band combination selected by SN in (NG)EN-DC, NE-DC, and NR-DC. The SN should inform the MN with this field whenever the band combination and/or feature set it selected for the SCG changes (i.e. even if the new selection concerns a band combination and/or feature set that is allowed by the <i>allowedBC-ListMRDC</i>)
selectedToffset
Indicates the value used by the SN for scheduling SCG transmissions (i.e. $T_{proc,SCG}^{max}$, see TS 38.213 [13]). This field is used in NR-DC only when the fields <i>nrdc-PC-mode-FR1-r16</i> or <i>nrdc-PC-mode-FR2-r16</i> are set to dynamic. The SN can only indicate a value that is less than or equal to <i>maxToffset</i> received from MN. This field is used in NR-DC only when MN has included the field <i>maxToffset</i> in <i>CG-ConfigInfo</i> . Value <i>ms0dot5</i> corresponds to 0.5 ms, value <i>ms0dot75</i> corresponds to 0.75 ms, value <i>ms1</i> corresponds to 1ms and so on.
servCellInfoListSCG-EUTRA
Indicates the carrier frequency and the transmission bandwidth of the serving cell(s) in the SCG in intra-band NE-DC. The field is needed when MN and SN operate serving cells in the same band for either contiguous or non-contiguous intra-band band combination or LTE NR inter-band band combinations where the frequency range of the E-UTRA band is a subset of the frequency range of the NR band (as specified in Table 5.5B.4.1-1 of TS 38.101-3 [34]) in NE-DC.
servCellInfoListSCG-NR
Indicates the frequency band indicator, carrier center frequency, UE specific channel bandwidth and SCS of the serving cell(s) in the SCG in intra-band (NG)EN-DC. The field is needed when MN and SN operate serving cells in the same band for either contiguous or non-contiguous intra-band band combination or LTE NR inter-band band combinations where the frequency range of the E-UTRA band is a subset of the frequency range of the NR band (as specified in Table 5.5B.4.1-1 of TS 38.101-3 [34]) in (NG)EN-DC.
subsequentCPAC-Information
Contains information about handling of stored subsequent CPAC configurations for the UE that the target secondary gNB suggests the master gNB to consider configuring for normal PSCell addition or change. It includes information about updates of execution conditions for the subsequent CPAC configurations that are to be kept at the PSCell addition/change.
successPSCell-Config
Include the successful PSCell change or addition report configuration in case of SN initiated PSCell change or CPC. The <i>thresholdPercentageT304-SCG</i> is not configured in this message.
twoPHRModeSCG
Indicates if the power headroom for SCG shall be reported as two PHRs (each PHR associated with a SRS resource set) is enabled or not.
twoSRS-MultipanelScheme
Indicates whether the indicated serving cell is configured with multiple panel simultaneous uplink transmission schemes of multipanelSchemeSDM or multipanelSchemeSFN corresponding to two SRS resource sets configured in either <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook'.
twoSRS-PUSCH-Repetition
Indicates whether the indicated serving cell is configured for PUSCH repetition corresponding to two SRS resource sets configured in either <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook'.
transmissionBandwidth-EUTRA
Indicates the transmission bandwidth on an E-UTRA carrier frequency as defined by the parameter Transmission Bandwidth Configuration "NRB" TS 36.104 [33]. The values rb6, rb15, rb25, rb50, rb75, rb100 indicate 6, 15, 25, 50, 75 and 100 resource blocks respectively.
ueAssistanceInformationSCG
Includes for each UE assistance feature associated with the SCG, the information last reported by the UE in the NR <i>UEAssistanceInformation</i> message for the SCG, if any.

BandCombinationInfoSN field descriptions
bandCombinationIndex In case of NR-DC, this field indicates the position of a band combination in the <i>supportedBandCombinationList</i>. In case of NE-DC, this field indicates the position of a band combination in the <i>supportedBandCombinationList</i> and/or <i>supportedBandCombinationListNEDC-Only</i>. In case of (NG)EN-DC, this field indicates the position of a band combination in the <i>supportedBandCombinationList</i> and/or <i>supportedBandCombinationList-UplinkTxSwitch</i>. Band combination entries in <i>supportedBandCombinationList</i> are referred by an index which corresponds to the position of a band combination in the <i>supportedBandCombinationList</i>. Band combination entries in <i>supportedBandCombinationListNEDC-Only</i> are referred by an index which corresponds to the position of a band combination in the <i>supportedBandCombinationListNEDC-Only</i> increased by the number of entries in <i>supportedBandCombinationList</i>. Band combination entries in <i>supportedBandCombinationList-UplinkTxSwitch</i> are referred by an index which corresponds to the position of a band combination in the <i>supportedBandCombinationList-UplinkTxSwitch</i> increased by the number of entries in <i>supportedBandCombinationList</i>. requestedFeatureSets The position in the <i>FeatureSetCombination</i> which identifies one <i>FeatureSetUplink/Downlink</i> for each band entry in the associated band combination

Conditional Presence	Explanation
FDD	This field is mandatory present if dl-FreqInfo-NR is included and concerns an FDD carrier; otherwise the field is absent.

– CG-ConfigInfo

This message is used by master eNB or gNB to request the SgNB or SeNB to perform certain actions e.g. to establish, modify or release an SCG. The message may include additional information e.g. to assist the SgNB or SeNB to set the SCG configuration. It can also be used by a CU to request a DU to perform certain actions, e.g. to establish, or modify an MCG or SCG.

Direction: Master eNB or gNB to secondary gNB or eNB, alternatively CU to DU.

CG-ConfigInfo message

```

-- ASN1START
-- TAG-CG-CONFIG-INFO-START

CG-ConfigInfo ::=
    criticalExtensions
        c1
            cg-ConfigInfo
            spare3 NULL, spare2 NULL, spare1 NULL
        },
    criticalExtensionsFuture
        SEQUENCE {}
    }

CG-ConfigInfo-IEs ::=
    SEQUENCE {
        ue-CapabilityInfo OCTET STRING (CONTAINING UE-CapabilityRAT-ContainerList) OPTIONAL, -- Cond SN-AddMod
        candidateCellInfoListMN MeasResultList2NR OPTIONAL,
        candidateCellInfoListSN OCTET STRING (CONTAINING MeasResultList2NR) OPTIONAL,
        measResultCellListSFTD-NR MeasResultCellListSFTD-NR OPTIONAL,
        scgFailureInfo SEQUENCE {
            failureType ENUMERATED { t310-Expiry, randomAccessProblem,
                                     rlc-MaxNumRetx, synchReconfigFailure-SCG,

```

	scg-reconfigFailure, srb3-IntegrityFailure},	
measResultSCG	OCTET STRING (CONTAINING MeasResultSCG-Failure)	
}		OPTIONAL,
configRestrictInfo	ConfigRestrictInfoSCG	OPTIONAL,
drx-InfoMCG	DRX-Info	OPTIONAL,
measConfigMN	MeasConfigMN	OPTIONAL,
sourceConfigSCG	OCTET STRING (CONTAINING RRCReconfiguration)	OPTIONAL,
scg-RB-Config	OCTET STRING (CONTAINING RadioBearerConfig)	OPTIONAL,
mcb-RB-Config	OCTET STRING (CONTAINING RadioBearerConfig)	OPTIONAL,
mrdc-AssistanceInfo	MRDC-AssistanceInfo	OPTIONAL,
nonCriticalExtension	CG-ConfigInfo-v1540-IEs	OPTIONAL
}		
CG-ConfigInfo-v1540-IEs ::=	SEQUENCE {	
ph-InfoMCG	PH-TypeListMCG	OPTIONAL,
measResultReportCGI	SEQUENCE {	
ssbFrequency	ARFCN-ValueNR,	
cellForWhichToReportCGI	PhysCellId,	
cgi-Info	CGI-InfoNR	
}		OPTIONAL,
nonCriticalExtension	CG-ConfigInfo-v1560-IEs	OPTIONAL
}		
CG-ConfigInfo-v1560-IEs ::=	SEQUENCE {	
candidateCellInfoListMN-EUTRA	OCTET STRING	OPTIONAL,
candidateCellInfoListSN-EUTRA	OCTET STRING	OPTIONAL,
sourceConfigSCG-EUTRA	OCTET STRING	OPTIONAL,
scgFailureInfoEUTRA	SEQUENCE {	
failureTypeEUTRA	ENUMERATED { t313-Expiry, randomAccessProblem, rlc-MaxNumRetx, scg-ChangeFailure},	
measResultSCG-EUTRA	OCTET STRING	
}		OPTIONAL,
drx-ConfigMCG	DRX-Config	OPTIONAL,
measResultReportCGI-EUTRA	SEQUENCE {	
eutraFrequency	ARFCN-ValueEUTRA,	
cellForWhichToReportCGI-EUTRA	EUTRA-PhysCellId,	
cgi-InfoEUTRA	CGI-InfoEUTRA	
}		OPTIONAL,
measResultCellListSFTD-EUTRA	MeasResultCellListSFTD-EUTRA	OPTIONAL,
fr-InfoListMCG	FR-InfoList	OPTIONAL,
nonCriticalExtension	CG-ConfigInfo-v1570-IEs	OPTIONAL
}		
CG-ConfigInfo-v1570-IEs ::=	SEQUENCE {	
sftdFrequencyList-NR	SFTD-FrequencyList-NR	OPTIONAL,
sftdFrequencyList-EUTRA	SFTD-FrequencyList-EUTRA	OPTIONAL,
nonCriticalExtension	CG-ConfigInfo-v1590-IEs	OPTIONAL
}		
CG-ConfigInfo-v1590-IEs ::=	SEQUENCE {	
servFrequenciesMN-NR	SEQUENCE (SIZE (1.. maxNrofServingCells-1)) OF ARFCN-ValueNR	OPTIONAL,
nonCriticalExtension	CG-ConfigInfo-v1610-IEs	OPTIONAL
}		

```

CG-ConfigInfo-v1610-IEs ::= SEQUENCE {
    drx-InfoMCG2                DRX-Info2                                OPTIONAL,
    alignedDRX-Indication        ENUMERATED {true}                     OPTIONAL,
    scgFailureInfo-r16           SEQUENCE {
        failureType-r16          ENUMERATED { scg-lbtFailure-r16, beamFailureRecoveryFailure-r16,
                                             t312-Expiry-r16, bh-RLF-r16,
                                             beamFailure-r17, spare3, spare2, spare1},
    measResultSCG-r16           OCTET STRING (CONTAINING MeasResultSCG-Failure)
    }                                                                    OPTIONAL,
    dummy1                      SEQUENCE {
        failureTypeEUTRA-r16     ENUMERATED { scg-lbtFailure-r16, beamFailureRecoveryFailure-r16,
                                             t312-Expiry-r16, spare5,
                                             spare4, spare3, spare2, spare1},
    measResultSCG-EUTRA-r16     OCTET STRING
    }                                                                    OPTIONAL,
    sidelinkUEInformationNR-r16  OCTET STRING (CONTAINING SidelinkUEInformationNR-r16)  OPTIONAL,
    sidelinkUEInformationEUTRA-r16 OCTET STRING                                OPTIONAL,
    nonCriticalExtension         CG-ConfigInfo-v1620-IEs                OPTIONAL
}

CG-ConfigInfo-v1620-IEs ::= SEQUENCE {
    ueAssistanceInformationSourceSCG-r16 OCTET STRING (CONTAINING UEAssistanceInformation)  OPTIONAL,
    nonCriticalExtension                 CG-ConfigInfo-v1640-IEs                OPTIONAL
}

CG-ConfigInfo-v1640-IEs ::= SEQUENCE {
    servCellInfoListMCG-NR-r16          ServCellInfoListMCG-NR-r16                OPTIONAL,
    servCellInfoListMCG-EUTRA-r16       ServCellInfoListMCG-EUTRA-r16            OPTIONAL,
    nonCriticalExtension                 CG-ConfigInfo-v1700-IEs                OPTIONAL
}

CG-ConfigInfo-v1700-IEs ::= SEQUENCE {
    candidateCellListCPC-r17            CandidateCellListCPC-r17                OPTIONAL,
    twoPHRModeMCG-r17                  ENUMERATED {enabled}                     OPTIONAL,
    lowMobilityEvaluationConnectedInPCell-r17 ENUMERATED {enabled}                OPTIONAL,
    nonCriticalExtension                 CG-ConfigInfo-v1730-IEs                OPTIONAL
}

CG-ConfigInfo-v1730-IEs ::= SEQUENCE {
    fr1-Carriers-MCG-r17                INTEGER (1..32)                        OPTIONAL,
    fr2-Carriers-MCG-r17                INTEGER (1..32)                        OPTIONAL,
    nonCriticalExtension                 CG-ConfigInfo-v1800-IEs                OPTIONAL
}

CG-ConfigInfo-v1800-IEs ::= SEQUENCE {
    musim-GapConfigInfo-r18             MUSIM-GapConfig-r17                    OPTIONAL,
    musim-CapRestrictionInfo-r18        SEQUENCE {
        musim-CapRestriction-r18        MUSIM-CapRestriction-r18                OPTIONAL,
        musim-CandidateBandList-r18     MUSIM-CandidateBandList-r18            OPTIONAL,
    }
    scpac-ReferenceConfiguration-r18    ReferenceConfiguration-r18              OPTIONAL,
    subsequentCPAC-Candidates-r18       CandidateCellListCPC-r17                OPTIONAL,
    nonCriticalExtension                 SEQUENCE {}                           OPTIONAL
}

```



```

}

ServCellInfoListMCG-NR-r16 ::= SEQUENCE (SIZE (1.. maxNrofServingCells)) OF ServCellInfoXCG-NR-r16

ServCellInfoListMCG-EUTRA-r16 ::= SEQUENCE (SIZE (1.. maxNrofServingCellsEUTRA)) OF ServCellInfoXCG-EUTRA-r16

SFTD-FrequencyList-NR ::= SEQUENCE (SIZE (1..maxCellsFTD)) OF ARFCN-ValueNR

SFTD-FrequencyList-EUTRA ::= SEQUENCE (SIZE (1..maxCellsFTD)) OF ARFCN-ValueEUTRA

ConfigRestrictInfoSCG ::= SEQUENCE {
    allowedBC-ListMRDC          BandCombinationInfoList OPTIONAL,
    powerCoordination-FR1      SEQUENCE {
        p-maxNR-FR1            P-Max OPTIONAL,
        p-maxEUTRA             P-Max OPTIONAL,
        p-maxUE-FR1            P-Max OPTIONAL,
    } OPTIONAL,
    servCellIndexRangesSCG     SEQUENCE {
        lowBound               ServCellIndex,
        upBound                ServCellIndex
    } OPTIONAL,
    maxMeasFreqsSCG           INTEGER(1..maxMeasFreqsMN) OPTIONAL,
    dummy                     INTEGER(1..maxMeasIdentitiesMN) OPTIONAL,
    ...,
    [[
        selectedBandEntriesMNLst SEQUENCE (SIZE (1..maxBandComb)) OF SelectedBandEntriesMN OPTIONAL,
        pdcch-BlindDetectionSCG  INTEGER (1..15) OPTIONAL,
        maxNumberROHC-ContextSessionsSN INTEGER(0.. 16384) OPTIONAL,
    ]],
    [[
        maxIntraFreqMeasIdentitiesSCG INTEGER(1..maxMeasIdentitiesMN) OPTIONAL,
        maxInterFreqMeasIdentitiesSCG INTEGER(1..maxMeasIdentitiesMN) OPTIONAL,
    ]],
    [[
        p-maxNR-FR1-MCG-r16      P-Max OPTIONAL,
        powerCoordination-FR2-r16 SEQUENCE {
            p-maxNR-FR2-MCG-r16    P-Max OPTIONAL,
            p-maxNR-FR2-SCG-r16    P-Max OPTIONAL,
            p-maxUE-FR2-r16        P-Max OPTIONAL,
        } OPTIONAL,
        nrddc-PC-mode-FR1-r16    ENUMERATED {semi-static-mode1, semi-static-mode2, dynamic} OPTIONAL,
        nrddc-PC-mode-FR2-r16    ENUMERATED {semi-static-mode1, semi-static-mode2, dynamic} OPTIONAL,
        maxMeasSRS-ResourceSCG-r16 INTEGER(0..maxNrofCLI-SRS-Resources-r16) OPTIONAL,
        maxMeasCLI-ResourceSCG-r16 INTEGER(0..maxNrofCLI-RSSI-Resources-r16) OPTIONAL,
        maxNumberEHC-ContextsSN-r16 INTEGER(0..65536) OPTIONAL,
        allowedReducedConfigForOverheating-r16 OverheatingAssistance OPTIONAL,
        maxToffset-r16           T-Offset-r16 OPTIONAL,
    ]],
    [[
        allowedReducedConfigForOverheating-r17 OverheatingAssistance-r17 OPTIONAL,
        maxNumberUDC-DRB-r17                 INTEGER(0..2) OPTIONAL,
        maxNumberCPCCandidates-r17           INTEGER(0..maxNrofCondCells-1-r17) OPTIONAL,
    ]],
    [[

```

```

    allowedResourceConfigNRDC-r17    ResourceConfigNRDC-r17                OPTIONAL
  ]],
  [[
    allowedAggregatedBandwidthSNList-r17    AllowedAggregatedBandwidthSNList-r17    OPTIONAL
  ]],
  [[
    maxNumberLTM-CandidatesSCG-r18    INTEGER(0..maxNrofLTM-Configs-r18)    OPTIONAL
  ]],
  [[
    allowedL1-MeasConfigNRDC-r18    L1-MeasConfigNRDC-r18                OPTIONAL
  ]],
  [[
    allowedLTM-ResourceConfigNRDC-r18    LTM-ResourceConfigNRDC-r18        OPTIONAL
  ]],
}

SelectedBandEntriesMN ::=          SEQUENCE (SIZE (1..maxSimultaneousBands)) OF BandEntryIndex

BandEntryIndex ::=                INTEGER (0.. maxNrofServingCells)

PH-TypeListMCG ::=                SEQUENCE (SIZE (1..maxNrofServingCells)) OF PH-InfoMCG

PH-InfoMCG ::=                    SEQUENCE {
    servCellIndex                  ServCellIndex,
    ph-Uplink                      PH-UplinkCarrierMCG,
    ph-SupplementaryUplink          PH-UplinkCarrierMCG                OPTIONAL,
    ...,
    [[
      twoSRS-PUSCH-Repetition-r17    ENUMERATED{enabled}            OPTIONAL
    ]],
    [[
      twoSRS-MultipanelScheme-r18    ENUMERATED{enabled}            OPTIONAL
    ]],
}

PH-UplinkCarrierMCG ::=           SEQUENCE{
    ph-Type1or3                    ENUMERATED {type1, type3},
    ...
}

BandCombinationInfoList ::=       SEQUENCE (SIZE (1..maxBandComb)) OF BandCombinationInfo

BandCombinationInfo ::=           SEQUENCE {
    bandCombinationIndex            BandCombinationIndex,
    allowedFeatureSetsList          SEQUENCE (SIZE (1..maxFeatureSetsPerBand)) OF FeatureSetEntryIndex
}

FeatureSetEntryIndex ::=          INTEGER (1.. maxFeatureSetsPerBand)

DRX-Info ::=                      SEQUENCE {
    drx-LongCycleStartOffset        CHOICE {
        ms10                        INTEGER(0..9),
        ms20                        INTEGER(0..19),
        ms32                        INTEGER(0..31),

```

```

ms40          INTEGER(0..39),
ms60          INTEGER(0..59),
ms64          INTEGER(0..63),
ms70          INTEGER(0..69),
ms80          INTEGER(0..79),
ms128         INTEGER(0..127),
ms160         INTEGER(0..159),
ms256         INTEGER(0..255),
ms320         INTEGER(0..319),
ms512         INTEGER(0..511),
ms640         INTEGER(0..639),
ms1024        INTEGER(0..1023),
ms1280        INTEGER(0..1279),
ms2048        INTEGER(0..2047),
ms2560        INTEGER(0..2559),
ms5120        INTEGER(0..5119),
ms10240       INTEGER(0..10239)
},
shortDRX      SEQUENCE {
  drx-ShortCycle      ENUMERATED {
    ms2, ms3, ms4, ms5, ms6, ms7, ms8, ms10, ms14, ms16, ms20, ms30, ms32,
    ms35, ms40, ms64, ms80, ms128, ms160, ms256, ms320, ms512, ms640, spare9,
    spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 },
  drx-ShortCycleTimer INTEGER (1..16)
}
}
OPTIONAL

DRX-Info2 ::= SEQUENCE {
  drx-onDurationTimer CHOICE {
    subMilliseconds INTEGER (1..31),
    milliseconds     ENUMERATED {
      ms1, ms2, ms3, ms4, ms5, ms6, ms8, ms10, ms20, ms30, ms40, ms50, ms60,
      ms80, ms100, ms200, ms300, ms400, ms500, ms600, ms800, ms1000, ms1200,
      ms1600, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1 }
    }
}

MeasConfigMN ::= SEQUENCE {
  measuredFrequenciesMN SEQUENCE (SIZE (1..maxMeasFreqsMN)) OF NR-FreqInfo OPTIONAL,
  measGapConfig          SetupRelease { GapConfig } OPTIONAL,
  gapPurpose             ENUMERATED {perUE, perFR1} OPTIONAL,
  ...,
  [[
    measGapConfigFR2      SetupRelease { GapConfig } OPTIONAL
  ]],
  [[
    interFreqNoGap-r16    ENUMERATED {true} OPTIONAL
  ]]
}

MRDC-AssistanceInfo ::= SEQUENCE {
  affectedCarrierFreqCombInfoListMRDC SEQUENCE (SIZE (1..maxNrofCombIDC)) OF AffectedCarrierFreqCombInfoMRDC,
  ...,
  [[

```

```

    overheatingAssistanceSCG-r16      OCTET STRING (CONTAINING OverheatingAssistance)  OPTIONAL
  ]],
  [[
    overheatingAssistanceSCG-FR2-2-r17  OCTET STRING (CONTAINING OverheatingAssistance-r17)  OPTIONAL
  ]],
  [[
    affectedCarrierFreqRangeCombList-r18  AffectedCarrierFreqRangeCombList-r18  OPTIONAL,
    affectedCarrierFreqCombList-r18       AffectedCarrierFreqCombList-r16     OPTIONAL,
    idc-TDM-Assistance-r18                IDC-TDM-Assistance-r18              OPTIONAL
  ]]
}

AffectedCarrierFreqCombInfoMRDC ::= SEQUENCE {
  victimSystemType      VictimSystemType,
  interferenceDirectionMRDC  ENUMERATED {eutra-nr, nr, other, utra-nr-other, nr-other, spare3, spare2, spare1},
  affectedCarrierFreqCombMRDC  SEQUENCE {
    affectedCarrierFreqCombEUTRA  AffectedCarrierFreqCombEUTRA  OPTIONAL,
    affectedCarrierFreqCombNR      AffectedCarrierFreqCombNR      OPTIONAL
  }
}

VictimSystemType ::= SEQUENCE {
  gps      ENUMERATED {true}  OPTIONAL,
  glonass  ENUMERATED {true}  OPTIONAL,
  bds      ENUMERATED {true}  OPTIONAL,
  galileo  ENUMERATED {true}  OPTIONAL,
  wlan     ENUMERATED {true}  OPTIONAL,
  bluetooth  ENUMERATED {true}  OPTIONAL
}

AffectedCarrierFreqCombEUTRA ::= SEQUENCE (SIZE (1..maxNrofServingCellsEUTRA)) OF ARFCN-ValueEUTRA

AffectedCarrierFreqCombNR ::= SEQUENCE (SIZE (1..maxNrofServingCells)) OF ARFCN-ValueNR

CandidateCellListCPC-r17 ::= SEQUENCE (SIZE (1..maxFreq)) OF CandidateCellCPC-r17

CandidateCellCPC-r17 ::=
  SEQUENCE {
    ssbFrequency-r17      ARFCN-ValueNR,
    candidateCellList-r17 SEQUENCE (SIZE (1..maxNrofCondCells-r16)) OF PhysCellId
  }

AllowedAggregatedBandwidthSNList-r17 ::= SEQUENCE (SIZE (1..maxBandComb)) OF AllowedAggregatedBandwidth-r17

AllowedAggregatedBandwidth-r17 ::= SEQUENCE {
  bandCombinationIndex-r17  BandCombinationIndex,
  allowedAggBW-FDD-DL-r17    SupportedAggBandwidth-r17  OPTIONAL,
  allowedAggBW-FDD-UL-r17    SupportedAggBandwidth-r17  OPTIONAL,
  allowedAggBW-TDD-DL-r17    SupportedAggBandwidth-r17  OPTIONAL,
  allowedAggBW-TDD-UL-r17    SupportedAggBandwidth-r17  OPTIONAL,
  allowedAggBW-TotalDL-r17   SupportedAggBandwidth-r17  OPTIONAL,
  allowedAggBW-TotalUL-r17   SupportedAggBandwidth-r17  OPTIONAL
}

-- TAG-CG-CONFIG-INFO-STOP

```

-- ASN1STOP

CG-ConfigInfo field descriptions
<i>affectedCarrierFreqCombList</i> This field is signalled upon MN not addressing IDC issue and contains the list of NR carrier frequency combinations reported by UE to MN for IDC problem caused by the NR-DC frequency combination.
<i>affectedCarrierFreqRangeCombList</i> This field is signalled upon MN not addressing IDC issue and contains the list of NR carrier frequency range combinations reported by UE to MN for IDC problem caused by the NR-DC frequency combination.
<i>alignedDRX-Indication</i> This field is signalled upon MN triggered CGI reporting by the UE that requires aligned DRX configurations between the MCG and the SCG (i.e. same DRX cycle and on-duration configured by MN completely contains on-duration configured by SN).
<i>allowedAggregatedBandwidthSNList</i> A list of allowed maximum aggregated bandwidth at the SN side for the band combination included in the <i>allowedBC-ListMRDC</i> . This field is only used in NR-DC.
<i>allowedBC-ListMRDC</i> A list of indices referring to band combinations in MR-DC capabilities from which SN is allowed to select the SCG band combination. Each entry refers to: - a band combination numbered according to <i>supportedBandCombinationList</i> and <i>supportedBandCombinationList-UplinkTxSwitch</i> in the <i>UE-MRDC-Capability</i> (in case of (NG)EN-DC), or according to <i>supportedBandCombinationList</i> and <i>supportedBandCombinationListNEDC-Only</i> in the <i>UE-MRDC-Capability</i> (in case of NE-DC), or according to <i>supportedBandCombinationList</i> in the <i>UE-NR-Capability</i> (in case of NR-DC), - and the Feature Sets allowed for each band entry. All MR-DC band combinations indicated by this field comprise the MCG band combination, which is a superset of the MCG band(s) selected by MN.
<i>allowedL1-MeasConfigNRDC</i> Used to indicate the maximum number of allowed resources for L1 measurements to be configured for LTM at the SCG. This field is only used in NR-DC.
<i>allowedLTM-ResourceConfigNRDC</i> Used to indicate the maximum number of allowed resources for configuring LTM at the SCG. This field is only used in NR-DC.
<i>allowedReducedConfigForOverheating</i> Indicates the reduced configuration that the SCG is allowed to configure. <i>reducedMaxCCs</i> in <i>allowedReducedConfigForOverheating</i> indicates the maximum number of downlink/uplink PSCell/SCells that the SCG is allowed to configure. This field is used in (NG)EN-DC and NR-DC. <i>reducedMaxBW-FR1</i> and <i>reducedMaxBW-FR2</i> in <i>allowedReducedConfigForOverheating</i> indicates the maximum aggregated bandwidth across all downlink/uplink carriers of FR1 and FR2-1, respectively that the SCG is allowed to configure. <i>reducedMaxBW-FR2-2</i> in <i>allowedReducedConfigForOverheating-r17</i> indicates the maximum aggregated bandwidth across all downlink/uplink carriers of FR2-2 that the SCG is allowed to configure. This field is only used in NR-DC. <i>reducedMaxMIMO-LayersFR1</i> and <i>reducedMaxMIMO-LayersFR2</i> in <i>allowedReducedConfigForOverheating</i> indicates the maximum number of downlink/uplink MIMO layers of each serving cell operating on FR1 and FR2-1, respectively that the SCG is allowed to configure. <i>reducedMaxMIMO-LayersFR2-2</i> in <i>allowedReducedConfigForOverheating-r17</i> indicates the maximum number of downlink/uplink MIMO layers of each serving cell operating on FR2-2 that the SCG is allowed to configure. This field is only used in NR-DC.
<i>allowedResourceConfigNRDC</i> Used to indicate the maximum number of resources reserved for the SCG. This field is only used in NR-DC.
<i>candidateCellInfoListMN</i>, <i>candidateCellInfoListSN</i> Contains information regarding cells that the master node or the source node suggests the target gNB or DU to consider configuring. In case of MN initiated CPA, CPC or CHO with candidate SCG(s), the field <i>candidateCellInfoListMN</i> contains information regarding cells that the MN suggests the candidate target secondary node to consider configuring for MN initiated CPA, CPC, CHO with candidate SCG(s), or subsequent CPAC. For (NG)EN-DC, including CSI-RS measurement results in <i>candidateCellInfoListMN</i> is not supported in this version of the specification. For NR-DC, including SSB and/or CSI-RS measurement results in <i>candidateCellInfoListMN</i> is supported.
<i>candidateCellInfoListMN-EUTRA</i>, <i>candidateCellInfoListSN-EUTRA</i> Includes the <i>MeasResultList3EUTRA</i> as specified in TS 36.331 [10]. Contains information regarding cells that the master node or the source node suggests the target secondary eNB to consider configuring. These fields are only used in NE-DC.

<i>candidateCellListCPC</i>
Contains information regarding cells that the source secondary node suggests the candidate target secondary node to consider configuring for SN initiated Conditional PSCell Change (CPC) or SN initiated inter-SN subsequent CPAC.
<i>configRestrictInfo</i>
Includes fields for which SgNB is explicitly indicated to observe a configuration restriction.
<i>drx-ConfigMCG</i>
This field contains the complete DRX configuration of the MCG. This field is only used in NR-DC.
<i>drx-InfoMCG</i>
This field contains the DRX long and short cycle configuration of the MCG. This field is used in (NG)EN-DC and NE-DC.
<i>drx-InfoMCG2</i>
This field contains the <i>drx-onDurationTimer</i> configuration of the MCG. This field is only used in (NG)EN-DC.
<i>dummy, dummy1</i>
These fields are not used in the specification and SN ignores the received value(s).
<i>fr-InfoListMCG</i>
Contains information of FR information of serving cells that include PCell and SCell(s) configured in MCG.
<i>fr1-Carriers-MCG, fr2-Carriers-MCG</i>
Indicates the number of FR1 or FR2 serving cells configured in MCG.
<i>idc-TDM-Assistance</i>
This field is signalled upon MN not addressing IDC issue and contains IDC TDM assistance information reported by UE to MN for IDC problem.
<i>interFreqNoGap</i>
Indicates that the field <i>interFrequencyConfig-NoGap-r16</i> has been included within the <i>MeasConfig</i> IE generated by the MN.
<i>lowMobilityEvaluationConnectedInPCell</i>
Indicates if low mobility criterion has been configured in NR PCell.
<i>maxInterFreqMeasIdentitiesSCG</i>
Indicates the maximum number of allowed measurement identities that the SCG is allowed to configure for inter-frequency measurement. The maximum value for this field is 10. If the field is absent, the SCG is allowed to configure inter-frequency measurements up to the maximum value. This field is only used in NR-DC.
<i>maxIntraFreqMeasIdentitiesSCG</i>
Indicates the maximum number of allowed measurement identities that the SCG is allowed to configure for intra-frequency measurement on each serving frequency. The maximum value for this field is 9 (in case of (NG)EN-DC or NR-DC) or 10 (in case of NE-DC). If the field is absent, the SCG is allowed to configure intra-frequency measurements up to the maximum value on each serving frequency.
<i>maxMeasCLI-ResourceSCG</i>
Indicates the maximum number of CLI RSSI resources that the SCG is allowed to configure.
<i>maxMeasFreqsSCG</i>
Indicates the maximum number of NR inter-frequency carriers the SN is allowed to configure with PSCell for measurements.
<i>maxMeasSRS-ResourceSCG</i>
Indicates the maximum number of SRS resources that the SCG is allowed to configure for CLI measurement.
<i>maxNumberCPCCandidates</i>
Indicates the maximum numbers of conditional reconfigurations the SN is allowed to configure for SN initiated CPC. Value 0 indicates that the SN is not allowed to configure SN initiated CPC. If the field is absent, the SN is allowed to configure up to <i>maxNrofCondCells-r16</i> conditional reconfigurations for SN-initiated CPC.
<i>maxNumberEHC-ContextsSN</i>
Indicates the maximum number of EHC contexts allowed to the SN terminated bearer. The field indicates the number of contexts in addition to CID = "all zeros", as specified in TS 38.323 [5].
<i>maxNumberLTM-CandidatesSCG</i>
Indicates the maximum number of LTM candidate configurations that the SN is allowed to configure. If the field is absent the SN is not allowed to configure LTM candidate configurations. This field is only used in NR-DC.

maxNumberROHC-ContextSessionsSN
Indicates the maximum number of ROHC context sessions allowed to SN terminated bearer, excluding context sessions that leave all headers uncompressed.
maxNumberUDC-DRB
Indicates the maximum number of UDC DRBs allowed to SN terminated bearer. This field is used in NGEN-DC, NR-DC and NE-DC.
maxToffset
Indicates the maximum Toffset value the SN is allowed to use for scheduling SCG transmissions (see TS 38.213 [13]). This field is used in NR-DC only when the fields <i>nrdc-PC-mode-FR1-r16</i> or <i>nrdc-PC-mode-FR2-r16</i> are set to dynamic. Value <i>ms0dot5</i> corresponds to 0.5 ms, value <i>ms0dot75</i> corresponds to 0.75 ms, value <i>ms1</i> corresponds to 1 ms and so on.
measuredFrequenciesMN
Used by MN to indicate a list of frequencies measured by the UE.
measGapConfig
Indicates the FR1 and perUE measurement gap configuration configured by MN.
measGapConfigFR2
Indicates the FR2 measurement gap configuration configured by MN.
mcb-RB-Config
Contains all of the fields in the IE <i>RadioBearerConfig</i> used in MN, used by the SN to support delta configuration to UE (i.e. when MN does not use full configuration option), for bearer type change between MN terminated bearer with NR PDCP to SN terminated bearer. It is also used to indicate the PDCP duplication related information for MN terminated split bearer (whether duplication is configured and if so, whether it is initially activated) in SN Addition/Modification procedure. Otherwise, this field is absent.
measResultReportCGI, measResultReportCGI-EUTRA
Used by MN to provide SN with CGI-Info for the cell as per SN's request. In this version of the specification, the <i>measResultReportCGI</i> is used for (NG)EN-DC and NR-DC and the <i>measResultReportCGI-EUTRA</i> is used only for NE-DC.
measResultSCG-EUTRA
This field includes the <i>MeasResultSCG-FailureMRDC</i> IE as specified in TS 36.331 [10]. This field is only used in NE-DC.
measResultSFTD-EUTRA
SFTD measurement results between the PCell and the E-UTRA PScell in NE-DC. This field is only used in NE-DC.
mrdc-AssistanceInfo
Contains the IDC assistance information for MR-DC reported by the UE (see TS 36.331 [10]).
musim-CapRestrictionInfo
Indicates the UE's preference on SCell(s) or PScell to be released, serving cell(s) with restricted capability, band(s) or combination(s) of bands with restricted capability, or band(s) or band combination(s) to be avoided for UE temporary capabilities restriction purpose with the <i>musim-candidateBandList-r18</i> only for <i>musim-AffectedBandsList-r18</i> and <i>musim-AvoidedBandsList-r18</i> . All fields in <i>musim-CapRestriction-r18</i> can be sent from MN to SN, i.e., it is up to MN implementation to decide which field(s) need to be sent.
musim-GapConfigInfo
Indicates the MUSIM gap configuration configured by MN.
nrdc-PC-mode-FR1
Indicates the uplink power sharing mode that the UE uses in NR-DC FR1 (see TS 38.213 [13], clause 7.6).
nrdc-PC-mode-FR2
Indicates the uplink power sharing mode that the UE uses in NR-DC FR2 (see TS 38.213 [13], clause 7.6).
overheatingAssistanceSCG
Contains the UE's preference on reduced configuration for NR SCG to address overheating. This field is only used in (NG)EN-DC.
overheatingAssistanceSCG-FR2-2
Contains the UE's preference on reduced configuration for NR SCG on FR2-2 to address overheating. This field is only used in (NG)EN-DC.
p-maxEUTRA
Indicates the maximum total transmit power to be used by the UE in the E-UTRA cell group (see TS 36.104 [33]). This field is used in (NG)EN-DC and NE-DC.

<i>p-maxNR-FR1</i> For (NG)EN-DC and NE-DC, the field indicates the maximum total transmit power to be used by the UE in the NR cell group across all serving cells in frequency range 1 (FR1) (see TS 38.104 [12]). For NR-DC, it indicates the maximum total transmit power to be used by the UE in the NR cell group across all serving cells in frequency range 1 (FR1) (see TS 38.104 [12]) the UE can use in NR SCG.
<i>p-maxUE-FR1</i> Indicates the maximum total transmit power to be used by the UE across all serving cells in frequency range 1 (FR1).
<i>p-maxNR-FR1-MCG</i> Indicates the maximum total transmit power to be used by the UE in the NR cell group across all serving cells in frequency range 1 (FR1) (see TS 38.104 [12]) the UE can use in NR MCG. This field is only used in NR-DC.
<i>p-maxNR-FR2-SCG</i> Indicates the maximum total transmit power to be used by the UE in the NR cell group across all serving cells in frequency range 2 (FR2) (see TS 38.104 [12]) the UE can use in NR SCG.
<i>p-maxUE-FR2</i> Indicates the maximum total transmit power to be used by the UE across all serving cells in frequency range 2 (FR2).
<i>p-maxNR-FR2-MCG</i> Indicates the maximum total transmit power to be used by the UE in the NR cell group across all serving cells in frequency range 2 (FR2) (see TS 38.104 [12]) the UE can use in NR MCG.
<i>pdccch-BlindDetectionSCG</i> Indicates the maximum value of the reference number of cells for PDCCH blind detection allowed to be configured for the SCG.
<i>ph-InfoMCG</i> Power headroom information in MCG that is needed in the reception of PHR MAC CE in SCG.
<i>ph-SupplementaryUplink</i> Power headroom information for supplementary uplink. For UE in (NG)EN-DC, this field is absent.
<i>ph-Type1or3</i> Type of power headroom for a serving cell in MCG (PCell and activated SCells). <i>type1</i> refers to type 1 power headroom, <i>type3</i> refers to type 3 power headroom. (See TS 38.321 [3]).
<i>ph-Uplink</i> Power headroom information for uplink.
<i>powerCoordination-FR1</i> Indicates the maximum power that the UE can use in FR1.
<i>powerCoordination-FR2</i> Indicates the maximum power that the UE can use in frequency range 2 (FR2). This field is only used in NR-DC.
<i>scgFailureInfo</i> Contains SCG failure type and measurement results. In case the sender has no measurement results available, the sender may include one empty entry (i.e. without any optional fields present) in <i>measResultPerMOList</i> . This field is used in (NG)EN-DC and NR-DC.
<i>scg-RB-Config</i> Contains all of the fields in the IE RadioBearerConfig used in SN, used to allow the target SN to use delta configuration to the UE, e.g. during SN change. The field is signalled upon change of SN unless MN uses full configuration option. Otherwise, the field is absent.
<i>scpac-ReferenceConfiguration</i> Includes the reference configuration associated with the SCG for the candidate supporting subsequent CPAC.
<i>selectedBandEntriesMNLList</i> A list of indices referring to the position of a band entry selected by the MN, in each band combination entry in <i>allowedBC-ListMRDC</i> IE. <i>BandEntryIndex</i> 0 identifies the first band in the <i>bandList</i> of the <i>BandCombination</i> , <i>BandEntryIndex</i> 1 identifies the second band in the <i>bandList</i> of the <i>BandCombination</i> , and so on. This <i>selectedBandEntriesMNLList</i> includes the same number of entries, and listed in the same order as in <i>allowedBC-ListMRDC</i> . The SN uses this information to determine which bands out of the NR band combinations in <i>allowedBC-ListMRDC</i> it can configure in SCG in NR-DC. The SN can use this information to determine for which band pair(s) it should check <i>SimultaneousRxTxPerBandPair</i> .

<i>servCellIndexRangeSCG</i> Range of serving cell indices that SN is allowed to configure for SCG serving cells.
<i>servCellInfoListMCG-EUTRA</i> Indicates the carrier frequency and the transmission bandwidth of the serving cell(s) in the MCG in intra-band (NG)EN-DC. The field is needed when MN and SN operate serving cells in the same band for either contiguous or non-contiguous intra-band band combination or LTE NR inter-band band combinations where the frequency range of the E-UTRA band is a subset of the frequency range of the NR band (as specified in Table 5.5B.4.1-1 of TS 38.101-3 [34]) in (NG)EN-DC.
<i>servCellInfoListMCG-NR</i> Indicates the frequency band indicator, carrier center frequency, UE specific channel bandwidth and SCS of the serving cell(s) in the MCG in intra-band NE-DC. The field is needed when MN and SN operate serving cells in the same band for either contiguous or non-contiguous intra-band band combination or LTE NR inter-band band combinations where the frequency range of the E-UTRA band is a subset of the frequency range of the NR band (as specified in Table 5.5B.4.1-1 of TS 38.101-3 [34]) in NE-DC.
<i>servFrequenciesMN-NR</i> Indicates the frequency of all serving cells that include PCell and SCell(s) with SSB configured in MCG. This field is only used in NR-DC. <i>servFrequenciesMN-NR</i> indicates <i>absoluteFrequencySSB</i> .
<i>sftdFrequencyList-NR</i> Includes a list of SSB frequencies. Each entry identifies the SSB frequency of a PCell, which corresponds to one <i>MeasResultCellSFTD-NR</i> entry in the <i>MeasResultCellListSFTD-NR</i> .
<i>sftdFrequencyList-EUTRA</i> Includes a list of E-UTRA frequencies. Each entry identifies the carrier frequency of a PCell, which corresponds to one <i>MeasResultSFTD-EUTRA</i> entry in the <i>MeasResultCellListSFTD-EUTRA</i> .
<i>sidelinkUEInformationEUTRA</i> This field contains the E-UTRA <i>SidelinkUEInformation</i> message as specified in TS 36.331 [10].
<i>sidelinkUEInformationNR</i> This field contains the NR <i>SidelinkUEInformationNR</i> message.
<i>sourceConfigSCG</i> Includes all of the current SCG configurations used by the target SN to build delta configuration to be sent to UE, e.g. during SN change. The field contains the <i>RRCReconfiguration</i> message which may include <i>secondaryCellGroup</i> , <i>measConfig</i> , and <i>conditionalReconfiguration</i> . The field is signalled upon change of SN, unless MN uses full configuration option. Otherwise, the field is absent.
<i>sourceConfigSCG-EUTRA</i> Includes the E-UTRA <i>RRCConnectionReconfiguration</i> message as specified in TS 36.331 [10]. In this version of the specification, the E-UTRA RRC message can only include the field <i>scg-Configuration</i> . In this version of the specification, this field is absent when master gNB uses full configuration option. This field is only used in NE-DC.
<i>subsequentCPAC-Candidates</i> Includes the subsequent CPAC candidate PSCells that the UE has stored in MCG <i>VarConditionalReconfig</i> .
<i>twoPHRModeMCG</i> Indicates if the power headroom for MCG shall be reported as two PHRs (each PHR associated with a SRS resource set) is enabled or not.
<i>twoSRS-PUSCH-Repetition</i> Indicates whether the indicated serving cell is configured for PUSCH repetition corresponding to two SRS resource sets configured in either <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook'.
<i>twoSRS-MultipanelScheme</i> Indicates whether the indicated serving cell is configured with multiple panel simultaneous uplink transmission schemes of multipanelSchemeSDM or multipanelSchemeSFN corresponding to two SRS resource sets configured in either <i>srs-ResourceSetToAddModList</i> or <i>srs-ResourceSetToAddModListDCI-0-2</i> with usage 'codebook' or 'noncodebook'.
<i>ueAssistanceInformationSourceSCG</i> Includes for each UE assistance feature associated with the SCG, the information last reported by the UE in the NR <i>UEAssistanceInformation</i> message for the source SCG, if any.

ue-CapabilityInfo

Contains the IE *UE-CapabilityRAT-ContainerList* supported by the UE (see NOTE 3). A gNB that retrieves MRDC related capability containers ensures that the set of included MRDC containers is consistent w.r.t. the feature set related information.

BandCombinationInfo field descriptions**allowedFeatureSetsList**

Defines a subset of the entries in a *FeatureSetCombination*. Each index identifies a position in the *FeatureSetCombination*, which corresponds to one *FeatureSetUplink/Downlink* for each band entry in the associated band combination.

bandCombinationIndex

In case of NR-DC, this field indicates the position of a band combination in the *supportedBandCombinationList*. In case of NE-DC, this field indicates the position of a band combination in the *supportedBandCombinationList* and/or *supportedBandCombinationListNEDC-Only*. In case of (NG)EN-DC, this field indicates the position of a band combination in the *supportedBandCombinationList* and/or *supportedBandCombinationList-UplinkTxSwitch*. Band combination entries in *supportedBandCombinationList* are referred by an index which corresponds to the position of a band combination in the *supportedBandCombinationList*. Band combination entries in *supportedBandCombinationListNEDC-Only* are referred by an index which corresponds to the position of a band combination in the *supportedBandCombinationListNEDC-Only* increased by the number of entries in *supportedBandCombinationList*. Band combination entries in *supportedBandCombinationList-UplinkTxSwitch* are referred by an index which corresponds to the position of a band combination in the *supportedBandCombinationList-UplinkTxSwitch* increased by the number of entries in *supportedBandCombinationList*.

AllowedAggregatedBandwidth field descriptions**AllowedAggregatedBandwidth**

Indicates the allowed maximum aggregated bandwidth at the SN side.

- *allowedAggBW-FDD-DL/UL-r17* indicates the allowed maximum aggregated bandwidth across FDD DL/UL CCs in SCG;
- *allowedAggBW-TDD-DL/UL-r17* indicates the allowed maximum aggregated bandwidth across TDD DL/UL CCs in SCG;
- *allowedAggBW-TotalDL/UL-r17* indicates the allowed maximum aggregated bandwidth across all DL/UL CCs in SCG.

bandCombinationIndex

This field indicates the position of a band combination in the *supportedBandCombinationList*. Band combination entries in *supportedBandCombinationList* are referred by an index which corresponds to the position of a band combination in the *supportedBandCombinationList*. Band combination entries in *supportedBandCombinationList-UplinkTxSwitch* are referred by an index which corresponds to the position of a band combination in the *supportedBandCombinationList-UplinkTxSwitch* increased by the number of entries in *supportedBandCombinationList*.

Conditional Presence	Explanation
<i>SN-AddMod</i>	The field is mandatory present upon SN addition and SN change. It is optionally present upon SN modification and inter-MN handover without SN change. Otherwise, the field is absent.

NOTE 3: The following table indicates per MN RAT and SN RAT whether RAT capabilities are included or not in *ue-CapabilityInfo*.

MN RAT	SN RAT	NR capabilities	E-UTRA capabilities	MR-DC capabilities
E-UTRA	NR	Need not be included if the UE Radio Capability ID as specified in 23.502 [43] is used. Included otherwise	Not included	Need not be included if the UE Radio Capability ID as specified in 23.502 [43] is used. Included otherwise
NR	E-UTRA	Not included	Need not be included if the UE Radio Capability ID as specified in 23.502 [43] is used. Included otherwise	Need not be included if the UE Radio Capability ID as specified in 23.502 [43] is used. Included otherwise
NR	NR	Need not be included if the UE Radio Capability ID as specified in 23.502 [43] is used. Included otherwise	Not included	Not included

– *MeasurementTimingConfiguration*

The *MeasurementTimingConfiguration* message is used to convey assistance information for measurement timing and to indicate which neighbour cell SSB is CD-SSB. The other indicated SSB can be considered as the NCD-SSB in use.

Direction: en-gNB to eNB, eNB to en-gNB, gNB to gNB, ng-eNB to gNB, gNB to ng-eNB, ng-eNB to ng-eNB, gNB DU to gNB CU, and gNB CU to gNB DU.

MeasurementTimingConfiguration message

```
-- ASN1START
-- TAG-MEASUREMENT-TIMING-CONFIGURATION-START

MeasurementTimingConfiguration ::= SEQUENCE {
    criticalExtensions      CHOICE {
        c1                 CHOICE{
            measTimingConf      MeasurementTimingConfiguration-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture SEQUENCE {}
    }
}

MeasurementTimingConfiguration-IEs ::= SEQUENCE {
    measTiming      MeasTimingList OPTIONAL,
    nonCriticalExtension MeasurementTimingConfiguration-v1550-IEs OPTIONAL
}

MeasurementTimingConfiguration-v1550-IEs ::= SEQUENCE {
    campOnFirstSSB      BOOLEAN,
    psCellOnlyOnFirstSSB BOOLEAN,
    nonCriticalExtension MeasurementTimingConfiguration-v1610-IEs OPTIONAL
}

MeasurementTimingConfiguration-v1610-IEs ::= SEQUENCE {
```

```

csi-RS-Config-r16
  csi-RS-SubcarrierSpacing-r16
  csi-RS-CellMobility-r16
  refSSBFreq-r16
},
nonCriticalExtension
}

MeasTimingList ::= SEQUENCE (SIZE (1..maxMeasFreqsMN)) OF MeasTiming

MeasTiming ::= SEQUENCE {
  frequencyAndTiming
    carrierFreq
    ssbSubcarrierSpacing
    ssb-MeasurementTimingConfiguration
    ss-RSSI-Measurement
  },
  ...
  [[
    ssb-ToMeasure
    physCellId
  ]]
}

-- TAG-MEASUREMENT-TIMING-CONFIGURATION-STOP
-- ASN1STOP
```

MeasTiming field descriptions
carrierFreq, ssbSubcarrierSpacing Indicates the frequency and subcarrier spacing of the SS block of the cell for which this message is included, or of other SS blocks within the same carrier.
ssb-MeasurementTimingConfiguration Indicates the SMTC which can be used to search for SSB of the cell for which the message is included. When the message is included in "Served NR Cell Information" (see TS 36.423 [37]), "Served Cell Information NR" (see TS 38.423 [35]), or "Served Cell Information" (see TS 38.473 [36]), the timing is based on the cell for which the message is included. When the message is included in "NR Neighbour Information" (see TS 36.423 [37]), or "Served Cell Information" (see TS 38.423 [35]), the timing is based on the cell indicated in the "Served NR Cell Information" or "Served Cell Information NR" with which the "NR Neighbour Information" or "Neighbour Information NR" is provided. When the message is included in "CU to DU RRC Information", the timing is based on the cell indicated by SpCell ID with which the message is included. If the field is provided by an NTN cell, the offset (derived from parameter <i>periodicityAndOffset</i>) is based on the assumption that the NTN payload to gNB propagation delay of the cell for which the message is included equals to 0 ms.
ss-RSSI-Measurement Provides the configuration which can be used for RSSI measurements of the cell for which the message is included.

<i>MeasurementTimingConfiguration</i> field descriptions
campOnFirstSSB Value <i>true</i> indicates that the SSB indicated in the first instance of <i>MeasTiming</i> in the <i>measTiming</i> list can be used for camping and for a PCell configuration (i.e. in <i>spCellConfigCommon</i> of the <i>masterCellGroup</i>) and to indicate which neighbour cell SSB is CD-SSB and which one is NCD-SSB in use.
csi-RS-CellMobility Indicates the CSI-RS configuration of the cell for which this message is included. The timing of the CSI-RS resources is based on the SSB indicated by <i>refSSBFreq</i> .
csi-RS-SubcarrierSpacing Indicates the subcarrier spacing of the CSI-RS resources included in <i>csi-rs-CellMobility</i> .
measTiming A list of SMTC information, SSB RSSI measurement information and associated NR frequency exchanged via EN-DC X2 Setup, EN-DC Configuration Update, Xn Setup and NG-RAN Node Configuration Update procedures, or F1 messages between gNB DU and gNB CU.
physCellId Physical Cell Identity of the SSB on the ARFCN indicated by <i>carrierFreq</i> .
psCellOnlyOnFirstSSB Value <i>true</i> indicates that only the SSB indicated in the first instance of <i>MeasTiming</i> in the <i>measTiming</i> list can be used for a PSCell configuration (i.e. in <i>spCellConfigCommon</i> of the <i>secondaryCellGroup</i>).
ssb-ToMeasure The set of SS blocks to be measured within the SMTC measurement duration (see TS 38.215 [9]).

– *UERadioPagingInformation*

This message is used to transfer radio paging information, covering both upload to and download from the 5GC, and between gNBs.

Direction: gNB to/ from 5GC and gNB to/from gNB

UERadioPagingInformation message

```
-- ASN1START
-- TAG-UE-RADIO-PAGING-INFORMATION-START
```

```
UERadioPagingInformation ::= SEQUENCE {
    criticalExtensions      CHOICE {
        c1                 CHOICE {
            ueRadioPagingInformation    UERadioPagingInformation-IEs,
            spare7    NULL,
            spare6    NULL, spare5    NULL, spare4    NULL,
            spare3    NULL, spare2    NULL, spare1    NULL
        },
        criticalExtensionsFuture    SEQUENCE {}
    }
}

UERadioPagingInformation-IEs ::= SEQUENCE {
    supportedBandListNRForPaging    SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR    OPTIONAL,
    nonCriticalExtension              UERadioPagingInformation-v15e0-IEs    OPTIONAL
}

UERadioPagingInformation-v15e0-IEs ::= SEQUENCE {
```

```

    dl-SchedulingOffset-PDSCH-TypeA-FDD-FR1    ENUMERATED {supported}    OPTIONAL,
    dl-SchedulingOffset-PDSCH-TypeA-TDD-FR1    ENUMERATED {supported}    OPTIONAL,
    dl-SchedulingOffset-PDSCH-TypeA-TDD-FR2    ENUMERATED {supported}    OPTIONAL,
    dl-SchedulingOffset-PDSCH-TypeB-FDD-FR1    ENUMERATED {supported}    OPTIONAL,
    dl-SchedulingOffset-PDSCH-TypeB-TDD-FR1    ENUMERATED {supported}    OPTIONAL,
    dl-SchedulingOffset-PDSCH-TypeB-TDD-FR2    ENUMERATED {supported}    OPTIONAL,
    nonCriticalExtension                        UERadioPagingInformation-v1700-IEs    OPTIONAL
}

UERadioPagingInformation-v1700-IEs ::= SEQUENCE {
    ue-RadioPagingInfo-r17                    OCTET STRING (CONTAINING UE-RadioPagingInfo-r17)    OPTIONAL,
    inactiveStatePO-Determination-r17        ENUMERATED {supported}    OPTIONAL,
    numberOfRxRedCap-r17                      ENUMERATED {one, two}    OPTIONAL,
    halfDuplexFDD-TypeA-RedCap-r17           SEQUENCE (SIZE (1..maxBands)) OF FreqBandIndicatorNR    OPTIONAL,
    nonCriticalExtension                      UERadioPagingInformation-v1800-IEs    OPTIONAL
}

UERadioPagingInformation-v1800-IEs ::= SEQUENCE {
    numberOfRxERedCap-r18                     ENUMERATED {one, two}    OPTIONAL,
    supportOf2RxXR-r18                       ENUMERATED {supported}    OPTIONAL,
    nonCriticalExtension                      UERadioPagingInformation-v1840-IEs    OPTIONAL
}

UERadioPagingInformation-v1840-IEs ::= SEQUENCE {
    dl-SchedulingOffset-PDSCH-TypeA-FDD-FR2-NTN-r18    ENUMERATED {supported}    OPTIONAL,
    dl-SchedulingOffset-PDSCH-TypeB-FDD-FR2-NTN-r18    ENUMERATED {supported}    OPTIONAL,
    nonCriticalExtension                        SEQUENCE {}    OPTIONAL
}

-- TAG-UE-RADIO-PAGING-INFORMATION-STOP
-- ASN1STOP

```

<i>UERadioPagingInformation</i> field descriptions
<i>supportedBandListNRForPaging</i> Indicates the UE supported NR frequency bands which are derived by the gNB from <i>UE-NR-Capability</i> .
<i>dl-SchedulingOffset-PDSCH-TypeA-FDD-FR1</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type A in FDD FR1.
<i>dl-SchedulingOffset-PDSCH-TypeA-FDD-FR2-NTN</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type A in FDD FR2-NTN.
<i>dl-SchedulingOffset-PDSCH-TypeA-TDD-FR1</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type A in TDD FR1.
<i>dl-SchedulingOffset-PDSCH-TypeA-TDD-FR2</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type A in TDD FR2.
<i>dl-SchedulingOffset-PDSCH-TypeB-FDD-FR1</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type B in FDD FR1.
<i>dl-SchedulingOffset-PDSCH-TypeB-FDD-FR2-NTN</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type B in FDD FR2-NTN.
<i>dl-SchedulingOffset-PDSCH-TypeB-TDD-FR1</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type B in TDD FR1.
<i>dl-SchedulingOffset-PDSCH-TypeB-TDD-FR2</i> Indicates whether the UE supports DL scheduling slot offset (K0) greater than 0 for PDSCH mapping type B in TDD FR2.
<i>halfDuplexFDD-TypeA-RedCap</i> Indicates whether the (e)RedCap UE only supports half-duplex operation for FDD in the indicated band(s).
<i>inactiveStatePO-Determination</i> Indicates whether the UE supports to use the same <i>i_s</i> to determine PO in RRC_INACTIVE state as in RRC_IDLE state.
<i>numberOfRxERedCap</i> Indicates the number of Rx branches supported by an eRedCap UE.
<i>numberOfRxRedCap</i> Indicates the number of Rx branches supported by a RedCap UE.
<i>supportOf2RxXR</i> Indicates whether the UE is a 2Rx XR UE.
<i>ue-RadioPagingInfo</i> The field is used to transfer UE capability information used for paging. The gNB generates the <i>ue-RadioPagingInfo</i> and the contained UE capability information is absent when not supported by the UE.

– *UERadioAccessCapabilityInformation*

This message is used to transfer UE radio access capability information, covering both upload to and download from the 5GC.

Direction: ng-eNB or gNB to/ from 5GC

UERadioAccessCapabilityInformation message

```
-- ASN1START
-- TAG-UE-RADIO-ACCESS-CAPABILITY-INFORMATION-START
```

```
UERadioAccessCapabilityInformation ::= SEQUENCE {
```



```
criticalExtensions CHOICE {
  c1 CHOICE{
    ueRadioAccessCapabilityInformation UERadioAccessCapabilityInformation-IEs,
    spare7 NULL,
    spare6 NULL, spare5 NULL, spare4 NULL,
    spare3 NULL, spare2 NULL, spare1 NULL
  },
  criticalExtensionsFuture SEQUENCE {}
}

UERadioAccessCapabilityInformation-IEs ::= SEQUENCE {
  ue-RadioAccessCapabilityInfo OCTET STRING (CONTAINING UE-CapabilityRAT-ContainerList),
  nonCriticalExtension SEQUENCE {} OPTIONAL
}

-- TAG-UE-RADIO-ACCESS-CAPABILITY-INFO-STOP
-- ASN1STOP
```

UERadioAccessCapabilityInformation-IEs field descriptions
ue-RadioAccessCapabilityInfo Including NR, MR-DC, E-UTRA radio access capabilities. A gNB that retrieves MRDC related capability containers ensures that the set of included MRDC containers is consistent w.r.t. the feature set related information.

11.2.3 Mandatory information in inter-node RRC messages

For the *AS-Config* transferred within the *HandoverPreparationInformation*:

- The source node shall include all fields necessary to reflect the current AS configuration of the UE, except for the fields *sourceSCG-NR-Config*, *sourceSCG-EUTRA-Config* and *sourceRB-SN-Config*, which can be omitted in case the source MN did not receive the latest configuration from the source SN. For *RRCReconfiguration* included in the field *rrcReconfiguration*, *ReconfigurationWithSync* is included with only the mandatory subfields (e.g. *newUE-Identity* and *t304*) and *ServingCellConfigCommon*;
- Need codes or conditions specified for subfields according to IEs defined in clause 6 do not apply. I.e. some fields shall be included regardless of the "Need" or "Cond" e.g. *discardTimer*;
- Based on the received AS configuration, the target node can indicate the delta (difference) to the current AS configuration (as included in *HandoverCommand*) to the UE. The fields *newUE-Identity* and *t304* included in *ReconfigurationWithSync* are not used for delta configuration purpose.

The *candidateCellInfoListSN(-EUTRA)* in *CG-Config* and the *candidateCellInfoListMN(-EUTRA)/candidateCellInfoListSN(-EUTRA)* in *CG-ConfigInfo* need not be included in procedures that do not involve a change of node.

For fields *scg-CellGroupConfig*, *scg-CellGroupConfigEUTRA* and *scg-RB-Config* in *CG-Config* (sent upon SN initiated SN change or other conditions as specified in field descriptions) and fields *mcg-RB-Config*, *scg-RB-Config* and *sourceConfigSCG* in *CG-ConfigInfo* (sent upon change of SN):

- The source node shall include all fields necessary to reflect the current AS configuration of the UE, unless stated otherwise in the field description. For *RRCReconfiguration* included in the field *scg-CellGroupConfig* in *CG-Config*, *ReconfigurationWithSync* is included with only the mandatory subfields (e.g. *newUE-Identity* and *t304*) and *ServingCellConfigCommon*;
- Need codes or conditions specified for subfields according to IEs defined in clause 6 do not apply;
- Based on the received AS configuration, the target node can indicate the delta (difference) as compared to the current AS configuration to the UE. The fields *newUE-Identity* and *t304* in *ReconfigurationWithSync* are always included by the target node, i.e. they are not used for delta configuration purpose to UE.

For fields in *CG-Config* and *CG-ConfigInfo* listed below, absence of the field means that the receiver maintains the values informed via the previous message. Note that every time there is a change in the configuration covered by a listed field, the MN or SN shall include the field and it shall provide the full configuration provided by that field unless stated otherwise. Otherwise, if there is no change, the field can be omitted:

- *configRestrictInfo*;
- *gapPurpose*;
- *measGapConfig* (for which delta signaling applies);
- *measGapConfigFR2* (for which delta signaling applies);
- *measResultCellListSFTD*;
- *measResultSFTD-EUTRA*;
- *sftdFrequencyList-EUTRA*;
- *sftdFrequencyList-NR*;
- *ue-CapabilityInfo*;
- *servFrequenciesMN-NR*;
- *musim-GapConfigInfo-r18*;
- *musim-CapRestrictionInfo-r18*.

For other fields in *CG-Config* and *CG-ConfigInfo*, the sender shall always signal the appropriate value even if same as indicated in the previous inter-node message, unless explicitly stated otherwise.

11.3 Inter-node RRC information element definitions

– *L1-MeasConfigNRDC*

The IE *L1-MeasConfigNRDC* is used to indicate or request a maximum value that can be used by the SN in NR-DC to configure L1 measurement related to LTM at the SCG. Each value is equal to or lower than the value of the corresponding field in the UE capability, as reported by the UE, unless specified otherwise. The value indicated by each field is applicable to all BCs within the field *allowedBC-ListMRDC*.

L1-MeasConfigNRDC information element

```
-- ASN1START
-- TAG-L1-MEASCONFIGNRDC-START

L1-MeasConfigNRDC-r18 ::= SEQUENCE {
    maxL1-MeasNoGapSCG-r18          INTEGER(0..maxNrofL1-MeasNoGap-r18)          OPTIONAL,
    maxL1-MeasWithGapSCG-r18        INTEGER(0..maxNrofL1-MeasWithGap-r18)        OPTIONAL,
    maxCellsL1-MeasNoGapSCG-r18      INTEGER(0..maxNrofCellsL1-MeasNoGap-r18)      OPTIONAL,
    maxCellsL1-MeasWithGapSCG-r18    INTEGER(0..maxNrofCellsL1-MeasWithGap-r18)    OPTIONAL,
    maxTotalCellsL1-MeasNoGapSCG-r18 INTEGER(0..maxNrofTotalCellsL1-MeasNoGap-r18)    OPTIONAL,
    maxSSBsL1-MeasNoGapSCG-r18       INTEGER(0..maxNrofSSBsL1-MeasNoGap-r18)       OPTIONAL,
    maxSSBsL1-MeasWithGapSCG-r18     INTEGER(0..maxNrofSSBsL1-MeasWithGap-r18)     OPTIONAL,
    maxTotalSSBsL1-MeasNoGapSCG-r18  INTEGER(0..maxNrofTotalSSBsL1-MeasNoGap-r18)  OPTIONAL,
    maxCellsL1-MeasIntraFreqSCG-r18  INTEGER(0..maxNrofSSBsL1-MeasIntraFreq-r18)  OPTIONAL,
    maxCellsL1-MeasInterFreqSCG-r18 INTEGER(0..maxNrofSSBsL1-MeasInterFreq-r18)  OPTIONAL,
    maxReportConfigsAperiodic-r18    INTEGER(0..maxNrofReportConfigsAperiodic-r18)  OPTIONAL,
    maxReportConfigsPeriodic-r18     INTEGER(0..maxNrofReportConfigsPeriodic-r18)   OPTIONAL,
    maxReportConfigsSemiPersistent-r18 INTEGER(0..maxNrofReportConfigsSemiPersistent-r18)  OPTIONAL,
    ...
    [[
        maxSSBsL1-MeasNoGapSCGExt-r18  INTEGER(0..maxNrofSSBsL1-MeasNoGapExt-r18)  OPTIONAL
    ]]
}

-- TAG-L1-MEASCONFIGNRDC-STOP
-- ASN1STOP
```

L1-MeasConfigNRDC field descriptions
maxCellsL1-MeasInterFreqSCG Indicates the maximum number of RRC configured LTM candidate cells for intra- and inter-frequency L1 measurement.
maxCellsL1-MeasIntraFreqSCG Indicates the maximum number of RRC configured LTM candidate cells for intra-frequency L1 measurement.
maxCellsL1-MeasNoGapSCG Indicates the maximum number of neighbour cells UE can measure per frequency layer for intra-frequency or inter-frequency L1 measurements without measurement gaps.
maxCellsL1-MeasWithGapSCG Indicates the maximum number of neighbour cells UE can measure per frequency layer for inter-frequency L1 measurements with measurement gaps.
maxL1-MeasNoGapSCG Indicates the maximum number of frequency layers UE can measure for intra- and inter-frequency L1 measurements without measurement gaps.
maxL1-MeasWithGapSCG Indicates the maximum number of frequency layers UE can measure for inter-frequency L1 measurements with measurement gaps.
maxReportConfigsAperiodic Indicates the maximum number of aperiodic LTM CSI report configurations.
maxReportConfigsPeriodic Indicates the maximum number of periodic LTM CSI report configurations.
maxReportConfigsSemiPersistent Indicates the maximum number of semi-persistent LTM CSI report configurations.
maxSSBsL1-MeasNoGapSCG, maxSSBsL1-MeasNoGapSCGExt Indicates the maximum number of SSB resources UE can measure per frequency layer for intra-frequency or inter-frequency L1 measurements without measurement gaps. If the field <i>maxSSBsL1-MeasNoGapSCGExt</i> is included, the field <i>maxSSBsL1-MeasNoGapSCG</i> is not present.
maxSSBsL1-MeasWithGapSCG Indicates the maximum number of SSB resources UE can measure per frequency layer for inter-frequency L1 measurements with measurement gaps.
maxTotalCellsL1-MeasNoGapSCG Indicates the maximum total number of cells, including serving cells and neighboring cells, across all frequency layers of intra-frequency and inter-frequency L1 measurements, UE can measure without measurement gaps.
maxTotalSSBsL1-MeasNoGapSCG Indicates the maximum total number of SSB resources, including serving cells and neighboring cells, across all frequency layers of intra-frequency and inter-frequency L1 measurements, UE can measure without measurement gaps.

– LTM-ResourceConfigNRDC

The IE *LTM-ResourceConfigNRDC* is used to indicate or request a maximum value that can be used by the SN in NR-DC to configure LTM related configuration at the SCG e.g., number of TCI states to be configured and activated, and number of LTM candidates on which to trigger the early UL synchronization. Each value is equal to or lower than the value of the corresponding field in the UE capability, as reported by the UE, unless specified otherwise. The value indicated by each field is applicable to all BCs within the field *allowedBC-ListMRDC*.

LTM-ResourceConfigNRDC information element

```
-- ASN1START
-- TAG-LTM-RESOURCECONFIGNRDC-START
```

```
LTM-ResourceConfigNRDC-r18 ::= SEQUENCE {
    maxCellsTA-Meas-r18          INTEGER(0..maxNrofCellsTA-Meas-r18)    OPTIONAL,
```

```

    maxConfigJointTCI-States-r18    INTEGER(0..maxNrofConfigJointTCI-States-r18)    OPTIONAL,
    maxCellsJointTCI-r18            INTEGER(0..maxNrofCellsTCI-r18)                OPTIONAL,
    maxConfigDL-TCI-States-r18      INTEGER(0..maxNrofConfigDL-TCI-States-r18)    OPTIONAL,
    maxConfigUL-TCI-States-r18      INTEGER(0..maxNrofConfigUL-TCI-States-r18)    OPTIONAL,
    maxCellsTCI-r18                 INTEGER(0..maxNrofCellsTCI-r18)                OPTIONAL,
    maxStoredConfigCells-r18        INTEGER(0..maxNrofStoredConfigCells-r18)      OPTIONAL,
    maxConfigCells-r18              INTEGER(0..maxNrofConfigCells-r18)            OPTIONAL,
    maxActivatedJointTCI-States-r18 INTEGER(0..maxNrofActivatedJointTCI-States-r18)    OPTIONAL,
    maxActivatedDL-TCI-States-r18   INTEGER(0..maxNrofActivatedDL-TCI-States-r18)  OPTIONAL,
    maxActivatedUL-TCI-States-r18   INTEGER(0..maxNrofActivatedUL-TCI-States-r18)  OPTIONAL,
    ...
}

-- TAG-LTM-RSOURCECONFIGNRDC-STOP
-- ASN1STOP

```

<i>LTM-ResourceConfigNRDC</i> field descriptions
<i>maxActivatedDL-TCI-States</i> Indicates the maximum number of MAC CE activated LTM DL TCI states.
<i>maxActivatedJointTCI-States</i> Indicates the maximum number of MAC CE activated joint LTM TCI states.
<i>maxActivatedUL-TCI-States</i> Indicates the maximum number of MAC CE activated LTM UL TCI states.
<i>maxCellsJointTCI</i> Indicates the maximum number of configured cells for joint LTM TCI state(s).
<i>maxCellsTA-Meas</i> Indicates the maximum number of candidate cells for TA acquisition based on PDCCH ordered CFRA procedure before receiving cell switch command MAC-CE.
<i>maxCellsTCI</i> Indicates the maximum number of configured cells for separate DL/UL LTM TCI state(s).
<i>maxConfigCells</i> Indicates the maximum number of LTM candidate configuration(s) for which the UE can perform early ASN.1 decoding and validity check.
<i>maxConfigDL-TCI-States</i> Indicates the maximum number of configured separate DL LTM TCI state(s).
<i>maxConfigJointTCI-States</i> Indicates the maximum number of configured joint LTM TCI state(s).
<i>maxConfigUL-TCI-States</i> Indicates the maximum number of configured separate UL LTM TCI state(s).
<i>maxStoredConfigCells</i> Indicates the maximum number of serving cell(s) and candidate cell(s), including serving SpCell(s), serving SCell(s) in SCG, SpCell in LTM candidate configurations and SCell(s) in LTM candidate configurations for SCG.

– *ResourceConfigNRDC*

The IE is used to indicate or request the maximum values that can be used by the SCG in NR-DC, with each value equal to or lower than the value of the corresponding field in the UE capability, as reported by the UE, unless specified otherwise.

ResourceConfigNRDC information element

```
-- ASN1START
-- TAG-RESOURCECONFIGNRDC-START

ResourceConfigNRDC-r17 ::= SEQUENCE {
    fr1-ResourceConfig-r17          ResourceConfigPerFR-r17          OPTIONAL,
    fr2-ResourceConfig-r17          ResourceConfigPerFR-r17          OPTIONAL,
    maxNumberResAcrossCC-AcrossFR-r17 INTEGER (0..256)              OPTIONAL,
    ...
}

ResourceConfigPerFR-r17 ::= SEQUENCE {
    bm-MaxNumberCSI-RS-Resource-r17 INTEGER (0..64)              OPTIONAL,
    bm-MaxNumberAperiodicCSI-RS-Resource-r17 INTEGER (0..64)      OPTIONAL,
    cg-MaxNumberConfigsAllCC-r17    INTEGER (0..32)              OPTIONAL,
    maxNumberCSI-RS-BFD-r17         INTEGER (0..64)              OPTIONAL,
    maxNumberCSI-RS-SSB-CBD-r17     INTEGER (0..256)             OPTIONAL,
    maxNumberSSB-BFD-r17           INTEGER (0..64)              OPTIONAL,
    sps-MaxNumberConfigsAllCC-r17   INTEGER (0..32)              OPTIONAL,
    trs-MaxConfResourceSetsAllCC-r17 INTEGER (0..256)             OPTIONAL,
    ...
}

-- TAG-RESOURCECONFIGNRDC-STOP
-- ASN1STOP
```

ResourceConfigNRDC field descriptions	
fr1-ResourceConfig, fr2-ResourceConfig	Indicates the maximum number of resources that SCG is allowed to configure for FR1/FR2, respectively.
maxNumberResAcrossCC-AcrossFR	Indicates the maximum number of configured CSI-RS resources. Corresponds to the UE capability <i>maxNumberResAcrossCC-AcrossFR-r16</i> in <i>maxTotalResourcesForAcrossFreqRanges-r16</i> .

<i>ResourceConfigPerFR</i> field descriptions
<i>bm-MaxNumberAperiodicCSI-RS-Resource</i> Indicates the maximum number of aperiodic CSI-RS resources that the SCG is allowed to configure for the UE to measure L1-RSRP. Corresponds to the UE capability <i>maxNumberAperiodicCSI-RS-Resource</i> in <i>beamManagementSSB-CSI-RS</i> .
<i>bm-MaxNumberCSI-RS-Resource</i> Indicates the maximum total number of NZP-CSI-RS resources that can be configured for the UE to measure L1-RSRP. Corresponds to the UE capability <i>maxNumberCSI-RS-Resource</i> in <i>beamManagementSSB-CSI-RS</i> .
<i>cg-MaxNumberConfigsAllCC</i> Indicates the maximum number of active configured grant configurations. Corresponds to the UE capability <i>maxNumberConfigsAllCC-r16</i> in <i>activeConfiguredGrant-r16</i> .
<i>maxNumberCSI-RS-BFD</i> Indicates the maximal number of different CSI-RS resources for the UE to monitor PDCCH quality. Corresponds to the UE capability <i>maxNumberCSI-RS-BFD</i> .
<i>maxNumberCSI-RS-SSB-CBD</i> Indicates the maximal number of different CSI-RS (and/or SSB) resources for new beam identifications. Corresponds to the UE capability <i>maxNumberCSI-RS-SSB-CBD</i> .
<i>maxNumberSSB-BFD</i> Indicates the maximal number of different SSBs for the UE to monitor PDCCH quality. Corresponds to the UE capability <i>maxNumberSSB-BFD</i> .
<i>sps-MaxNumberConfigsAllCC</i> Indicates the maximum number of SPS configurations. Corresponds to the UE capability <i>maxNumberConfigsAllCC-r16</i> in <i>sps-r16</i> .
<i>trs-MaxConfResourceSetsAllCC</i> Indicates the maximum configured CSI-RS for tracking (i.e. TRS) resource sets. Corresponds to the UE capability <i>maxConfiguredResourceSetsAllCC</i> in <i>csi-RS-ForTracking</i> .

11.4 Inter-node RRC multiplicity and type constraint values

– Multiplicity and type constraints definitions

```
-- ASN1START
-- TAG-NR-MULTIPLICITY-AND-CONSTRAINTS-START

maxMeasFreqsMN          INTEGER ::= 32 -- Maximum number of MN-configured measurement frequencies
maxMeasFreqsSN          INTEGER ::= 32 -- Maximum number of SN-configured measurement frequencies
maxMeasIdentitiesMN     INTEGER ::= 62 -- Maximum number of measurement identities that a UE can be configured with
maxCellPrep             INTEGER ::= 32 -- Maximum number of cells prepared for handover
maxNrofL1-MeasNoGap-r18 INTEGER ::= 8  -- Maximum number of frequencies layers for L1 measurements UE can measure without gaps
maxNrofL1-MeasWithGap-r18 INTEGER ::= 8  -- Maximum number of frequencies layers for L1 measurements UE can measure with gaps
maxNrofCellsL1-MeasNoGap-r18 INTEGER ::= 8  -- Maximum number of neighboring cells for L1 measurements UE can measure without gaps
maxNrofCellsL1-MeasWithGap-r18 INTEGER ::= 8  -- Maximum number of neighboring cells for L1 measurements UE can measure with gaps
maxNrofTotalCellsL1-MeasNoGap-r18 INTEGER ::= 24 -- Maximum total number of cell across all frequencies layers UE can measure
maxNrofSSBsL1-MeasNoGap-r18 INTEGER ::= 8  -- Maximum number of SSB resources for L1 measurements without gaps
maxNrofSSBsL1-MeasNoGapExt-r18 INTEGER ::= 24 -- Maximum number of SSB resources for L1 measurements without gaps
maxNrofSSBsL1-MeasWithGap-r18 INTEGER ::= 8  -- Maximum number of SSB resources for L1 measurements with gaps
maxNrofTotalSSBsL1-MeasNoGap-r18 INTEGER ::= 64 -- Maximum total number of SSB resources for L1 measurements without gaps
maxNrofSSBsL1-MeasIntraFreq-r18 INTEGER ::= 8  -- Maximum number of RRC configured intra-frequency LTM candidate configurations
maxNrofSSBsL1-MeasInterFreq-r18 INTEGER ::= 8  -- Maximum number of RRC configured inter-frequency LTM candidate configurations
maxNrofReportConfigsAperiodic-r18 INTEGER ::= 4  -- Maximum number of aperiodic LTM CSI report configurations
maxNrofReportConfigsPeriodic-r18 INTEGER ::= 4  -- Maximum number of periodic LTM CSI report configurations
maxNrofReportConfigsSemiPersistent-r18 INTEGER ::= 4  -- Maximum number of semi-persistent LTM CSI report configurations
maxNrofCellsTA-Meas-r18 INTEGER ::= 8  -- Maximum number of LTM candidate cells for TA acquisition
maxNrofConfigJointTCI-States-r18 INTEGER ::= 128 -- Maximum number of joint LTM DL TCI states that can be configured
```

```
maxNrofConfigDL-TCI-States-r18    INTEGER ::= 128 -- Maximum number of separate LTM DL TCI states that can be configured
maxNrofConfigUL-TCI-States-r18    INTEGER ::= 64  -- Maximum number of separate LTM UL TCI states that can be configured
maxNrofCellsTCI-r18               INTEGER ::= 8   -- Maximum number of configured joint LTM TCI state(s) across candidate cells
maxNrofStoredConfigCells-r18      INTEGER ::= 16  -- Maximum number cells which can be stored by the UE
maxNrofConfigCells-r18            INTEGER ::= 4   -- Maximum number LTM candidate configurations on which UE can fast processing
maxNrofActivatedJointTCI-States-r18 INTEGER ::= 32 -- Maximum number of joint DL TCI states that can be activated via MAC CE
maxNrofActivatedDL-TCI-States-r18  INTEGER ::= 32 -- Maximum number of separate DL TCI states that can be activated via MAC CE
maxNrofActivatedUL-TCI-States-r18  INTEGER ::= 32 -- Maximum number of separate DL TCI states that can be activated via MAC CE

-- TAG-NR-MULTIPLICITY-AND-CONSTRAINTS-STOP
-- ASN1STOP
```

— *End of NR-InterNodeDefinitions*

```
-- ASN1START
-- TAG-NR-INTER-NODE-DEFINITIONS-END-START
```

END

```
-- TAG-NR-INTER-NODE-DEFINITIONS-END-STOP
-- ASN1STOP
```


12 Processing delay requirements for RRC procedures

The UE performance requirements for RRC procedures are specified in the following tables. The performance requirement is expressed as the time in [ms] from the end of reception of the network -> UE message on the UE physical layer up to when the UE shall be ready for the reception of uplink grant for the UE -> network response message with no access delay other than the TTI-alignment (e.g. excluding delays caused by scheduling, the random access procedure or physical layer synchronisation).

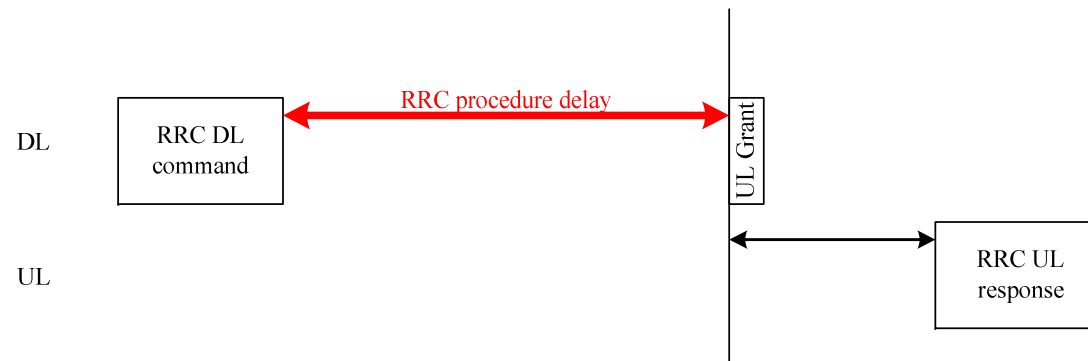 


Figure 12.1-1: Illustration of RRC procedure delay

Table 12.1-1: UE performance requirements for RRC procedures for UEs

Procedure title:	Network -> UE	UE -> Network	Value [ms]	Notes
RRC Connection Control Procedures				
RRC reconfiguration	<i>RRCReconfiguration</i>	<i>RRCReconfigurationComplete</i>	10	
RRC reconfiguration (scell addition/release)	<i>RRCReconfiguration</i>	<i>RRCReconfigurationComplete</i>	16	
RRC reconfiguration (LTE/NR SCG establishment/ modification/ release)	<i>RRCReconfiguration</i>	<i>RRCReconfigurationComplete</i>	16	
RRC reconfiguration (Intra-NR mobility with LTE/NR SCG establishment/ modification/ release)	<i>RRCReconfiguration</i>	<i>RRCReconfigurationComplete</i>	16	
RRC reconfiguration	<i>DL DedicatedMessage Segment</i>	<i>RRCReconfigurationComplete</i>	16+(Nseg-1)*10	Nseg is number of RRC segments
RRC setup	<i>RRCSetup</i>	<i>RRCSetupComplete</i>	10	
RRC Release	<i>RRCRelease</i>		NA	
RRC re-establishment	<i>RRCReestablishment</i>	<i>RRCReestablishmentComplete</i>	10	

Procedure title:	Network -> UE	UE -> Network	Value [ms]	Notes
RRC resume	<i>RRCResume</i>	<i>RRCResumeComplete</i>	6 or 10	Value=6 applies for a UE supporting reduced CP latency for the case of RRCResume message only including MAC and PHY configuration, reestablishPDCP and reestablishRLC for SRB2, multicast MRB(s) and DRB(s), and no DRX, SPS, configured grant, CA or MIMO re-configuration will be triggered by this message. Further, the UL grant for transmission of <i>RRCResumeComplete</i> and the data is transmitted over common search space with DCI format 0_0. In this scenario, the RRC procedure delay [ms] can extend beyond the reception of the UL grant, up to 7 ms. For other cases, Value = 10 applies.
RRC resume (MCG SCell addition/restoration/release)	<i>RRCResume</i>	<i>RRCResumeComplete</i>	16	
RRC resume (SCG establishment/restoration/release)	<i>RRCResume</i>	<i>RRCResumeComplete</i>	16	
RRC resume	<i>DLDedicatedMessageSegment</i>	<i>RRCResumeComplete</i>	16+(Nseg-1)*10	Nseg is number of RRC segments
Initial AS security activation	<i>SecurityModeCommand</i>	<i>SecurityModeComplete/SecurityModeFailure</i>	5	
Inter RAT mobility				

Procedure title:	Network -> UE	UE -> Network	Value [ms]	Notes
Handover to NR	<i>RRCReconfiguration (sent by other RAT)</i>	<i>RRCReconfigurationComplete</i>	NA	The performance of this procedure is specified in TS 36.133 [40] clauses 5.3.4.2, 5.3.4A.2 and 5.3.5.2 in case of handover from E-UTRA to NR.
Handover from NR	<i>MobilityFromNRComm and</i>		NA	The performance of this procedure is specified in TS 38.133 [14], clauses 6.1.2.1.2 and 6.1.2.2.2.
Other procedures				
UE assistance information		<i>UEAssistanceInformation</i>	NA	
UE capability transfer	<i>UECapabilityEnquiry</i>	<i>UECapabilityInformation</i>	80	
UE capability transfer	<i>UECapabilityEnquiry</i>	<i>ULDedicatedMessageSegment</i>	80	Applicable when UL RRC segmentation is enabled by the field <i>rrc-SegAllowed</i> .
UE capability transfer	<i>UECapabilityEnquiry</i>	<i>ULDedicatedMessageSegment</i>	560+max (0, Nseg-7)*80	Applicable when UL RRC segmentation is enabled by the field <i>rrc-MaxCapaSegAllowed</i> . Nseg is the value indicated by <i>rrc-MaxCapaSegAllowed</i> .
Counter check	<i>CounterCheck</i>	<i>CounterCheckResponse</i>	5	
UE information	<i>UEInformationRequest</i>	<i>UEInformationResponse</i>	15	
DL Information transfer MR-DC	<i>DLInformationTransfer MRDC</i>		NA	The UE shall apply the performance requirements of the RRC message included within the <i>DLInformationTransfer MRDC</i> message.
IAB other information		<i>IABOtherInformation</i>	NA	
Sidelink UE information		<i>SidelinkUEInformationNR</i>	NA	
UE Positioning assistance information		<i>UEPositioningAssistanceInfo</i>	NA	

Annex A (informative): Guidelines mainly on use of ASN.1

A.1 Introduction

The following clauses contain guidelines for the specification of RRC protocol data units (PDUs) with ASN.1.

A.2 Procedural specification

A.2.1 General principles

The procedural specification provides an overall high level description regarding the UE behaviour in a particular scenario.

It should be noted that most of the UE behaviour associated with the reception of a particular field is covered by the applicable parts of the PDU specification. The procedural specification may also include specific details of the UE behaviour upon reception of a field, but typically this should be done only for cases that are not easy to capture in the PDU clause e.g. general actions, more complicated actions depending on the value of multiple fields.

Likewise, the procedural specification need not specify the UE requirements regarding the setting of fields within the messages that are sent to the network i.e. this may also be covered by the PDU specification.

A.2.2 More detailed aspects

The following more detailed conventions should be used:

- Bullets:
 - Capitals should be used in the same manner as in other parts of the procedural text i.e. in most cases no capital applies since the bullets are part of the sentence starting with 'The UE shall:'
 - All bullets, including the last one in a clause, should end with a semi-colon i.e. an ';'.
- Conditions:
 - Whenever multiple conditions apply, a semi-colon should be used at the end of each conditions with the exception of the last one, i.e. as in 'if cond1, or cond2'.

A.3 PDU specification

A.3.1 General principles

A.3.1.1 ASN.1 clauses

The RRC PDU contents are formally and completely described using abstract syntax notation (ASN.1), see X.680 [6], X.681 [7].

The complete ASN.1 code is divided into a number of ASN.1 clauses in the specifications. In order to facilitate the extraction of the complete ASN.1 code from the specification, each ASN.1 clause begins with the following:

- a first text paragraph consisting entirely of an *ASN.1 start tag*, which consists of a double hyphen followed by a single space and the text string "ASN1START" (in all upper case letters);
- a second text paragraph consisting entirely of a *block start tag* is included, which consists of a double hyphen followed by a single space and the text string "TAG-NAME-START" (in all upper case letters), where the "NAME" refers to the main name of the paragraph (in all upper-case letters).

Similarly, each ASN.1 clause ends with the following:

- a first text paragraph consisting entirely of a *blockstop tag*, which consists of a double hyphen followed by a single space and the text string "TAG-NAME-STOP" (in all upper-case letters), where the "NAME" refers to the main name of the paragraph (in all upper-case letters);
- a second text paragraph consisting entirely of an *ASN.1 stop tag*, which consists of a double hyphen followed by a singlespace and the text "ASN1STOP" (in all upper case letters).

This results in the following tags:

```
-- ASN1START
-- TAG-NAME-START

-- TAG-NAME-STOP
-- ASN1STOP
```

The text paragraphs containing either of the start and stop tags should not contain any ASN.1 code significant for the complete description of the RRC PDU contents. The complete ASN.1 code may be extracted by copying all the text paragraphs between an ASN.1 start tag and the following ASN.1 stop tag in the order they appear, throughout the specification.

NOTE: A typical procedure for extraction of the complete ASN.1 code consists of a first step where the entire RRC PDU contents description (ultimately the entire specification) is saved into a plain text (ASCII) file format, followed by a second step where the actual extraction takes place, based on the occurrence of the ASN.1 start and stop tags.

A.3.1.2 ASN.1 identifier naming conventions

The naming of identifiers (i.e., the ASN.1 field and type identifiers) should be based on the following guidelines:

- Message (PDU) identifiers should be ordinary mixed case without hyphenation. These identifiers, *e.g.*, the *RRCCConnectionModificationCommand*, should be used for reference in the procedure text. Abbreviations should be avoided in these identifiers and abbreviated forms of these identifiers should not be used.
- Type identifiers other than PDU identifiers should be ordinary mixed case, with hyphenation used to set off acronyms only where an adjacent letter is a capital, *e.g.*, *EstablishmentCause*, *SelectedPLMN* (not *Selected-PLMN*, since the "d" in "Selected" is lowercase), *InitialUE-Identity* and *MeasSFN-SFN-TimeDifference*.
- Field identifiers shall start with a lowercase letter and use mixed case thereafter, *e.g.*, *establishmentCause*. If a field identifier begins with an acronym (which would normally be in upper case), the entire acronym is lowercase (*plmn-Identity*, not *pLMN-Identity*). The acronym is set off with a hyphen (*ue-Identity*, not *ueIdentity*), in order to facilitate a consistent search pattern with corresponding type identifiers.
- Identifiers should convey the meaning of the identifier and should avoid adding unnecessary postfixes (e.g. abstractions like 'Info') for the name.
- Identifiers that are likely to be keywords of some language, especially widely used languages, such as C++ or Java, should be avoided to the extent possible.
- Identifiers, other than PDU identifiers, longer than 25 characters should be avoided where possible. It is recommended to use abbreviations, which should be done in a consistent manner i.e. use 'Meas' instead of 'Measurement' for all occurrences. Examples of typical abbreviations are given in table A.3.1.2.1-1 below.
- *For future extension:* When an extension is introduced a suffix is added to the identifier of the concerned ASN.1 field and/or type. A suffix of the form "-rX" is used, with X indicating the release, for ASN.1 fields or types introduced in a later release (i.e. a release later than the original/first release of the protocol) as well as for ASN.1 fields or types for which a revision is introduced in a later release replacing a previous version, *e.g.*, *Foo-r9* for the Rel-9 version of the ASN.1 type *Foo*. A suffix of the form "-rXb" is used for the first revision of a field that it appears in the same release (X) as the original version of the field, "-rXc" for a second intra-release revision and so on. A suffix of the form "-vXYZ" is used for ASN.1 fields or types that only are an extension of a corresponding earlier field or type (see clause A.4), *e.g.*, *AnElement-v10b0* for the extension of the ASN.1 type *AnElement* introduced in version 10.11.0 of the specification. A number 0...9, 10, 11, *etc.* is used to represent the first part of the version number, indicating the release of the protocol. Lower case letters *a*, *b*, *c*, *etc.* are used to represent the second (and third) part of the version number if they are greater than 9. In the procedural specification, in field descriptions as well as in headings suffices are not used, unless there is a clear need to distinguish the extension from the original field.
- More generally, in case there is a need to distinguish different variants of an ASN.1 field or IE, a suffix should be added at the end of the identifiers *e.g.* *MeasObjectUTRA*, *ConfigCommon*. When there is no particular need to distinguish the fields (*e.g.* because the field is included in different IEs), a common field identifier name may be used. This may be attractive *e.g.* in case the procedural specification is the same for the different variants.
- It should be avoided to use field identifiers with the same name within the elements of a CHOICE, including using a CHOICE inside a SEQUENCE (to avoid certain compiler errors).

Table A.3.1.2-1: Examples of typical abbreviations used in ASN.1 identifiers

Abbreviation	Abbreviated word
Config	Configuration
DL	Downlink
Ext	Extension
Freq	Frequency
Id	Identity
Ind	Indication
Meas	Measurement
MIB	MasterInformationBlock
Neigh	Neighbour(ing)
Param(s)	Parameter(s)
Phys	Physical
PCI	Physical Cell Id
Proc	Process
Reconfig	Reconfiguration
Reest	Re-establishment
Req	Request
Rx	Reception
Sched	Scheduling
SIB	SystemInformationBlock
Sync	Synchronisation
Thr	Threshold
Tx	Transmission
UL	Uplink

NOTE: The table A.3.1.2.1-1 is not exhaustive. Additional abbreviations may be used in ASN.1 identifiers when needed.

A.3.1.3 Text references using ASN.1 identifiers

A text reference into the RRC PDU contents description from other parts of the specification is made using the ASN.1 field identifier of the referenced type. The ASN.1 field and type identifiers used in text references should be in the *italic font style*. The "do not check spelling and grammar" attribute in Word should be set. Quotation marks (i.e., "") should not be used around the ASN.1 field or type identifier.

A reference to an RRC PDU should be made using the corresponding ASN.1 field identifier followed by the word "message", e.g., a reference to the *RRCRelease* message.

A reference to a specific part of an RRC PDU, or to a specific part of any other ASN.1 type, should be made using the corresponding ASN.1 field identifier followed by the word "field", e.g., a reference to the *prioritisedBitRate* field in the example below.

```
-- /example/ ASN1START
```

```
LogicalChannelConfig ::=
    ul-SpecificParameters
        priority
SEQUENCE {
    SEQUENCE {
        Priority,
```

```

        prioritisedBitRate
        bucketSizeDuration
        logicalChannelGroup
    }
    OPTIONAL
}
-- ASN1STOP

```

NOTE: All the ASN.1 start tags in the ASN.1 clauses, used as examples in this annex to the specification, are deliberately distorted, in order not to include them when the ASN.1 description of the RRC PDU contents is extracted from the specification.

A reference to a specific type of information element should be made using the corresponding ASN.1 type identifier preceded by the acronym "IE", e.g., a reference to the IE *LogicalChannelConfig* in the example above.

References to a specific type of information element should only be used when those are generic, i.e., without regard to the particular context wherein the specific type of information element is used. If the reference is related to a particular context, e.g., an RRC PDU type (message) wherein the information element is used, the corresponding field identifier in that context should be used in the text reference.

A reference to a specific value of an ASN.1 field should be made using the corresponding ASN.1 value without using quotation marks around the ASN.1 value, e.g., 'if the *status* field is set to value *true*'.

A.3.2 High-level message structure

Within each logical channel type, the associated RRC PDU (message) types are alternatives within a CHOICE, as shown in the example below.

```

-- /example/ ASN1START

DL-DCCH-Message ::= SEQUENCE {
    message          DL-DCCH-MessageType
}

DL-DCCH-MessageType ::= CHOICE {
    c1               CHOICE {
        dlInformationTransfer
        handoverFromEUTRAPreparationRequest
        mobilityFromEUTRACommand
        rrcConnectionReconfiguration
        rrcConnectionRelease
        securityModeCommand
        ueCapabilityEnquiry
        spare1 NULL
    },
    messageClassExtension SEQUENCE {}
}

-- ASN1STOP

```

A nested two-level CHOICE structure is used, where the alternative PDU types are alternatives within the inner level *c1* CHOICE.

Spare alternatives (i.e., *spare1* in this case) may be included within the *c1* CHOICE to facilitate future extension. The number of such spare alternatives should not extend the total number of alternatives beyond an integer-power-of-two number of alternatives (i.e., eight in this case).

Further extension of the number of alternative PDU types is facilitated using the *messageClassExtension* alternative in the outer level CHOICE.

A.3.3 Message definition

Each PDU (message) type is specified in an ASN.1 clause similar to the one shown in the example below.

```
-- /example/ ASN1START

RRConnectionReconfiguration ::= SEQUENCE {
    rrc-TransactionIdentifier      RRC-TransactionIdentifier,
    criticalExtensions             CHOICE {
        c1                       CHOICE {
            rrcConnectionReconfiguration-r8      RRCConnectionReconfiguration-r8-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture      SEQUENCE {}
    }
}

RRConnectionReconfiguration-r8-IEs ::= SEQUENCE {
    -- Enter the IEs here.
    ...
}

-- ASN1STOP
```

Hooks for *critical* and *non-critical* extension should normally be included in the PDU type specification. How these hooks are used is further described in clause A.4.

Critical extensions are characterised by a redefinition of the PDU contents and need to be governed by a mechanism for protocol version agreement between the encoder and the decoder of the PDU, such that the encoder is prevented from sending a critically extended version of the PDU type, which is not comprehended by the decoder.

Critical extension of a PDU type is facilitated by a two-level CHOICE structure, where the alternative PDU contents are alternatives within the inner level *c1* CHOICE. Spare alternatives (i.e., *spare3* down to *spare1* in this case) may be included within the *c1* CHOICE. The number of spare alternatives to be included in the original PDU specification should be decided case by case, based on the expected rate of critical extension in the future releases of the protocol.

Further critical extension, when the spare alternatives from the original specifications are used up, is facilitated using the *criticalExtensionsFuture* in the outer level CHOICE.

In PDU types where critical extension is not expected in the future releases of the protocol, the inner level *c1* CHOICE and the spare alternatives may be excluded, as shown in the example below.

```
-- /example/ ASN1START
```

```
RRConnectionReconfigurationComplete ::= SEQUENCE {
    rrc-TransactionIdentifier      RRC-TransactionIdentifier,
    criticalExtensions              CHOICE {
        rrcConnectionReconfigurationComplete-r8
        RRCConnectionReconfigurationComplete-r8-IEs,
        criticalExtensionsFuture    SEQUENCE {}
    }
}

RRConnectionReconfigurationComplete-r8-IEs ::= SEQUENCE {
    -- Enter the fields here.
    ...
}

-- ASN1STOP
```

Non-critical extensions are characterised by the addition of new information to the original specification of the PDU type. If not comprehended, a non-critical extension may be skipped by the decoder, whilst the decoder is still able to complete the decoding of the comprehended parts of the PDU contents.

Non-critical extensions at locations other than the end of the message or other than at the end of a field contained in a BIT or OCTET STRING are facilitated by use of the ASN.1 extension marker "...". The original specification of a PDU type should normally include the extension marker at the end of the sequence of information elements contained.

Non-critical extensions at the end of the message or at the end of a field that is contained in a BIT or OCTET STRING may be facilitated by use of an empty sequence that is marked OPTIONAL e.g. as shown in the following example:

```
-- /example/ ASN1START

RRCMessage-r8-IEs ::=
    field1
    field2
    nonCriticalExtension
}

SEQUENCE {
    InformationElement1,
    InformationElement2,
    SEQUENCE {} OPTIONAL

-- ASN1STOP
```

The ASN.1 clause specifying the contents of a PDU type may be followed by a *field description* table where a further description of, e.g., the semantic properties of the fields may be included. The general format of this table is shown in the example below. The field description table is absent in case there are no fields for which further description needs to be provided e.g. because the PDU does not include any fields, or because an IE is defined for each field while there is nothing specific regarding the use of this IE that needs to be specified.

%PDU-TypeIdentifier% field descriptions	
%field identifier%	Field description.
%field identifier%	Field description.

The field description table has one column. The header row shall contain the ASN.1 type identifier of the PDU type.

The following rows are used to provide field descriptions. Each row shall include a first paragraph with a *field identifier* (in ***bold and italic*** font style) referring to the part of the PDU to which it applies. The following paragraphs at the same row may include (in regular font style), e.g., semantic description, references to other specifications and/or specification of value units, which are relevant for the particular part of the PDU.

The parts of the PDU contents that do not require a field description shall be omitted from the field description table.

A.3.4 Information elements

Each IE (information element) type is specified in an ASN.1 clause similar to the one shown in the example below.

```
-- /example/ ASN1START

PRACH-ConfigSIB ::=
    rootSequenceIndex
    prach-ConfigInfo
}

PRACH-Config ::=
    rootSequenceIndex
    prach-ConfigInfo
}

PRACH-ConfigInfo ::=
    prach-ConfigIndex
    highSpeedFlag
    zeroCorrelationZoneConfig
}

-- ASN1STOP
```

IEs should be introduced whenever there are multiple fields for which the same set of values apply. IEs may also be defined for other reasons e.g. to break down a ASN.1 definition in to smaller pieces.

A group of closely related IE type definitions, like the IEs *PRACH-ConfigSIB* and *PRACH-Config* in this example, are preferably placed together in a common ASN.1 clause. The IE type identifiers should in this case have a common base, defined as the *generic type identifier*. It may be complemented by a suffix to distinguish the different variants. The "*PRACH-Config*" is the generic type identifier in this example, and the "*SIB*" suffix is added to distinguish the variant. The clause heading and generic references to a group of closely related IEs defined in this way should use the generic type identifier.

The same principle should apply if a new version, or an extension version, of an existing IE is created for *critical* or *non-critical* extension of the protocol (see clause A.4). The new version, or the extension version, of the IE is included in the same ASN.1 clause defining the original. A suffix is added to the type identifier, using the naming conventions defined in clause A.3.1.2, indicating the release or version of the where the new version, or extension version, was introduced.

Local IE type definitions, like the IE *PRACH-ConfigInfo* in the example above, may be included in the ASN.1 clause and be referenced in the other IE types defined in the same ASN.1 clause. The use of locally defined IE types should be encouraged, as a tool to break up large and complex IE type definitions. It can improve the readability of the code.

There may also be a benefit for the software implementation of the protocol end-points, as these IE types are typically provided by the ASN.1 compiler as independent data elements, to be used in the software implementation.

An IE type defined in a local context, like the IE *PRACH-ConfigInfo*, should not be referenced directly from other ASN.1 clauses in the RRC specification. An IE type which is referenced in more than one ASN.1 clause should be defined in a separate clause, with a separate heading and a separate ASN.1 clause (possibly as one in a set of closely related IE types, like the IEs *PRACH-ConfigSIB* and *PRACH-Config* in the example above). Such IE types are also referred to as 'global IEs'.

NOTE: Referring to an IE type, that is defined as a local IE type in the context of another ASN.1 clause, does not generate an ASN.1 compilation error. Nevertheless, using a locally defined IE type in that way makes the IE type definition difficult to find, as it would not be visible at an outline level of the specification. It should be avoided.

The ASN.1 clause specifying the contents of one or more IE types, like in the example above, may be followed by a *field description* table, where a further description of, e.g., the semantic properties of the fields of the information elements may be included. This table may be absent, similar as indicated in clause A.3.3 for the specification of the PDU type. The general format of the *field description* table is the same as shown in clause A.3.3 for the specification of the PDU type.

A.3.5 Fields with optional presence

A field with optional presence may be declared with the keyword **DEFAULT**. It identifies a default value to be assumed, if the sender does not include a value for that field in the encoding:

```
-- /example/ ASN1START
PreambleInfo ::=
    numberOfRA-Preambles      SEQUENCE {
        ...                  INTEGER (1..64)
    }                          DEFAULT 1,
-- ASN1STOP
```

Alternatively, a field with optional presence may be declared with the keyword **OPTIONAL**. It identifies a field for which a value can be omitted. The omission carries semantics, which is different from any normal value of the field:

```
-- /example/ ASN1START
PRACH-Config ::=
    rootSequenceIndex         SEQUENCE {
        prach-ConfigInfo      INTEGER (0..1023),
    }                          PRACH-ConfigInfo OPTIONAL -- Need N
-- ASN1STOP
```

The semantics of an optionally present field, in the case it is omitted, should be indicated at the end of the paragraph including the keyword **OPTIONAL**, using a short comment text with a need code. The need code includes the keyword "Need", followed by one of the predefined semantics tags (S, M, N or R) defined in clause 6.1. If the semantics tag S is used, the semantics of the absent field are further specified either in the field description table following the ASN.1 clause, or in procedure text.

The addition of OPTIONAL keywords for capability groups is based on the following guideline. If there is more than one field in the lower level IE, then OPTIONAL keyword is added at the group level. If there is only one field in the lower level IE, OPTIONAL keyword is not added at the group level.

A.3.6 Fields with conditional presence

A field with conditional presence is declared with the keyword OPTIONAL. In addition, a short comment text shall be included at the end of the paragraph including the keyword OPTIONAL. The comment text includes the keyword "Cond", followed by a condition tag associated with the field ("UL" in this example):

```
-- /example/ ASN1START
LogicalChannelConfig ::=
    ul-SpecificParameters
        priority
        ...
    } OPTIONAL
}
-- Cond UL
-- ASN1STOP
```

When conditionally present fields are included in an ASN.1 clause, the field description table after the ASN.1 clause shall be followed by a *conditional presence* table. The conditional presence table specifies the conditions for including the fields with conditional presence in the particular ASN.1 clause.

Conditional presence	Explanation
UL	Specification of the conditions for including the field associated with the condition tag = "UL". Semantics in case of optional presence under certain conditions may also be specified.

The conditional presence table has two columns. The first column (heading: "Conditional presence") contains the condition tag (in *italic* font style), which links the fields with a condition tag in the ASN.1 clause to an entry in the table. The second column (heading: "Explanation") contains a text specification of the conditions and requirements for the presence of the field. The second column may also include semantics, in case of an optional presence of the field, under certain conditions i.e. using the same predefined tags as defined for optional fields in A.3.5.

Conditional presence should primarily be used when presence of a field depends on the presence and/or value of other fields within the same message. If the presence of a field depends on whether another feature/function has been configured, while this function can be configured independently e.g. by another message and/or at another point in time, the relation is best reflected by means of a statement in the field description table.

If the ASN.1 clause does not include any fields with conditional presence, the conditional presence table shall not be included.

Whenever a field is only applicable in specific cases e.g. TDD, use of conditional presence should be considered.

A.3.7 Guidelines on use of lists with elements of SEQUENCE type

Where an information element has the form of a list (the SEQUENCE OF construct in ASN.1) with the type of the list elements being a SEQUENCE data type, an information element shall be defined for the list elements even if it would not otherwise be needed.

For example, a list of PLMN identities with reservation flags is defined as in the following example:

```
-- /example/ ASN1START

PLMN-IdentityInfoList ::=          SEQUENCE (SIZE (1..6)) OF PLMN-IdentityInfo

PLMN-IdentityInfo ::=             SEQUENCE {
    plmn-Identity                PLMN-Identity,
    cellReservedForOperatorUse    ENUMERATED {reserved, notReserved}
}

-- ASN1STOP
```

rather than as in the following (bad) example, which may cause generated code to contain types with unpredictable names:

```
-- /bad example/ ASN1START

PLMN-IdentityList ::=             SEQUENCE (SIZE (1..6)) OF SEQUENCE {
    plmn-Identity                PLMN-Identity,
    cellReservedForOperatorUse    ENUMERATED {reserved, notReserved}
}

-- ASN1STOP
```

A.3.8 Guidelines on use of parameterised SetupRelease type

The usage of the parameterised *SetupRelease* type is like a function call in programming languages where the element type parameter is passed as a parameter. The parameterised type only implies a textual change in abstract syntax where all references to the parameterised type are replaced by the compiler with the release/setup choice. Two examples of the usage are shown below:

```
-- /example/ ASN1START

RRCMessage-rX-IEs ::= SEQUENCE {
    field-rX          SetupRelease { IE-rX }          OPTIONAL,      -- Need M
    ...
}

RRCMessage-rX-IEs ::= SEQUENCE {
    field-rX          SetupRelease { Element-rX }      OPTIONAL,      -- Need M
}

Element-rX ::= SEQUENCE {
    field1-rX          IE1-rX,
    field2-rX          IE2-rX
}                                OPTIONAL,      -- Need N
                                OPTIONAL,      -- Need M

-- /example/ ASN1STOP
```


The *SetupRelease* is always be used with only named IEs, i.e. the example below is not allowed:

```
-- /example/ ASN1START
RRCTest-rX-IEs ::= SEQUENCE {
    field-rX      SetupRelease { SEQUENCE { -- Unnamed SEQUENCES are not allowed!
        field1-rX IE1-rX,
        field2-rX IE2-rX
    }
}
-- /example/ ASN1STOP
```

Typically, a field defined using the parameterized *SetupRelease* type does not require procedural or field description text that refers to the *setup* or *release* values. If such a field anyway requires procedural text for specific actions, the field is referred to using the values defined for the type itself, namely, "setup" and "release". For example, procedural text for field-rX above could be as follows:

- 1> if *field-rX* is set to "setup":
 - 2> do something;
- 1> else (*field-rX* is set to "release"):
 - 2> release *field-rX* (if appropriate).

A.3.9 Guidelines on use of ToAddModList and ToReleaseList

In order to benefit from delta signalling when modifying lists with many and/or large elements, so-called add/mod- and release- lists should be used. Instead of a single list containing all elements of the list, the ASN.1 provides two lists. One list is used to convey the actual elements that are to be added to the list or modified in the list. The second list conveys only the identities (IDs) of the list elements that are to be released from the list. In other words, the ASN.1 defines only means to signal modifications to a list maintained in the receiver (typically the UE). An example is provided below:

```
-- /example/ ASN1START
AnExampleIE ::= SEQUENCE {
    elementsToAddModList SEQUENCE (SIZE (1..maxNrofElements)) OF Element OPTIONAL, -- Need N
    elementsToReleaseList SEQUENCE (SIZE (1..maxNrofElements)) OF ElementId OPTIONAL, -- Need N
    ...
}

Element ::= SEQUENCE {
    elementId ElementId,
    aField INTEGER (0..16777215),
    anotherField OCTET STRING,
    ...
}
```

```

}
ElementId ::=          INTEGER (0..maxNrofElements-1)
maxNrofElements        INTEGER ::= 50
maxNrofElements-1      INTEGER ::= 49
-- /example/ ASN1STOP

```

As can be seen, the elements of the list must contain an identity (INTEGER) that identifies the elements unambiguously upon addition, modification and removal. It is recommended to define an IE for that identifier (here *ElementId*) so that it can be used both for a field inside the element as well as in the *elementsToReleaseList*.

Both lists should be made OPTIONAL and flagged as "Need N". The need code reflects that the UE does not maintain the received lists as such but rather updates its configuration using the information therein. In other words, it is not possible to provide via delta signalling an update to a previously signalled *elementsToAddModList* or *elementsToReleaseList* (which Need M would imply). The update is always in relation to the UE's internal configuration.

Note that the release of a field (a list element as well as any other field) releases all its sub-fields (sub-fields configured by *elementsToAddModList* and any other sub-field).

If no procedural text is provided for a set of *ToAddModList* and *ToReleaseList*, the following generic procedure applies:

The UE shall:

- 1> for each *ElementId* in the *elementsToReleaseList*,:
 - 2> if the current UE configuration includes an *Element* with the given *ElementId*:
 - 3> release the *Element* from the current UE configuration;
- 1> for each *Element* in the *elementsToAddModList*:
 - 2> if the current UE configuration includes an *Element* with the given *ElementId*:
 - 3> modify the configured *Element* in accordance with the received *Element*;
 - 2> else:
 - 3> add received *Element* to the UE configuration.

A.3.10 Guidelines on use of lists (without *ToAddModList* and *ToReleaseList*)

As per clause 6.1.3, when using lists without the *ToAddModList* and *ToReleaseList* structure, the contents of the lists are always replaced. To illustrate this, an example is provided below:

```

-- /example/ ASN1START
-- TAG_EXAMPLE_LISTS_START

```

```

AnExampleIE ::=
    elementList          SEQUENCE {
        ...,
        [[
            elementListExt-v2030 SEQUENCE (SIZE (1..maxNrofElementsExt)) OF Element
        ]]
    }
    OPTIONAL, -- Need M

Element ::=
    SEQUENCE {
        useFeatureX      BOOLEAN,
        aField            INTEGER (0..127)
        anotherField     INTEGER (0..127)
        ...
    }
    OPTIONAL, -- Need M
    OPTIONAL, -- Need R

maxNrofElements      INTEGER ::= 8
maxNrofElements-1   INTEGER ::= 7
maxNrofElementsExt   INTEGER ::= 8
maxNrofElementsExt-1 INTEGER ::= 7

-- TAG_EXAMPLE_LISTS_STOP
-- /example/ ASN1STOP

```

As can be seen, the *elementList* list itself uses Need M, but each list entry *Element* contains mandatory, Need M and Need R fields. If the list is first signalled to UE with 3 entries, and subsequently again with 2 entries, UE shall retain only the latter list, i.e. the list with 2 elements will completely replace the list with 3 elements. That also means that the field *aField* will be treated as if it was newly created, i.e. network must include it if it wishes UE to utilize the field even if it was previously signalled. This also implies that the Need M field (*aField*) will be treated in the same way as the Need R field (*anotherField*), i.e. delta signalling is not applied and the network has to signal the field to ensure UE does not release the value (which is why Need M should not normally be used in the entries of these lists).

A.4 Extension of the PDU specifications

A.4.1 General principles to ensure compatibility

It is essential that extension of the protocol does not affect interoperability i.e. it is essential that implementations based on different versions of the RRC protocol are able to interoperate. In particular, this requirement applies for the following kind of protocol extensions:

- Introduction of new PDU types (i.e. these should not cause unexpected behaviour or damage).
- Introduction of additional fields in an extensible PDUs (i.e. it should be possible to ignore uncomprehended extensions without affecting the handling of the other parts of the message).
- Introduction of additional values of an extensible field of PDUs. If used, the behaviour upon reception of an uncomprehended value should be defined.

It should be noted that the PDU extension mechanism may depend on the logical channel used to transfer the message e.g. for some PDUs an implementation may be aware of the protocol version of the peer in which case selective ignoring of extensions may not be required.

The non-critical extension mechanism is the primary mechanism for introducing protocol extensions i.e. the critical extension mechanism is used merely when there is a need to introduce a 'clean' message version. Such a need appears when the last message version includes a large number of non-critical extensions, which results in issues like readability, overhead associated with the extension markers. The critical extension mechanism may also be considered when it is complicated to accommodate the extensions by means of non-critical extension mechanisms.

A.4.2 Critical extension of messages and fields

The mechanisms to critically extend a message are defined in A.3.3. There are both "outer branch" and "inner branch" mechanisms available. The "outer branch" consists of a CHOICE having the name *criticalExtensions*, with two values, *c1* and *criticalExtensionsFuture*. The *criticalExtensionsFuture* branch consists of an empty SEQUENCE, while the *c1* branch contains the "inner branch" mechanism.

The "inner branch" structure is a CHOICE with values of the form "*MessageName-rX-IEs*" (e.g., "*RRCConnectionReconfiguration-r8-IEs*") or "*spareX*", with the spare values having type NULL. The "-rX-IEs" structures contain the *complete* structure of the message IEs for the appropriate release; i.e., the critical extension branch for the Rel-10 version of a message includes all Rel-8 and Rel-9 fields (that are not obviated in the later version), rather than containing only the additional Rel-10 fields.

The following guidelines may be used when deciding which mechanism to introduce for a particular message, i.e. only an 'outer branch', or an 'outer branch' in combination with an 'inner branch' including a certain number of spares:

- For certain messages, e.g. initial uplink messages, messages transmitted on a broadcast channel, critical extension may not be applicable.
- An outer branch may be sufficient for messages not including any fields.
- The number of spares within inner branch should reflect the likelihood that the message will be critically extended in future releases (since each release with a critical extension for the message consumes one of the spare values). The estimation of the critical extension likelihood may be based on the number, size and changeability of the fields included in the message.
- In messages where an inner branch extension mechanism is available, all spare values of the inner branch should be used before any critical extensions are added using the outer branch.

The following example illustrates the use of the critical extension mechanism by showing the ASN.1 of the original and of a later release

```
-- /example/ ASN1START
-- Original release
RRCTest ::=
  rrc-TransactionIdentifier
  criticalExtensions
    c1
      rrcMessage-r8
      spare3 NULL, spare2 NULL, spare1 NULL
    },
    criticalExtensionsFuture
  }
}
```

```
-- ASN1STOP
```

```
-- /example/ ASN1START          -- Later release

RRCMessage ::=
  rrc-TransactionIdentifier
  criticalExtensions
    c1
      rrcMessage-r8
      rrcMessage-r10
      rrcMessage-r11
      rrcMessage-r14
    },
    later
    c2
      rrcMessage-r16
      spare7 NULL, spare6 NULL, spare5 NULL, spare4 NULL,
      spare3 NULL, spare2 NULL, spare1 NULL
    },
    criticalExtensionsFuture
  }
}

-- ASN1STOP
```

It is important to note that critical extensions may also be used at the level of individual fields i.e. a field may be replaced by a critically extended version. When sending the extended version, the original version may also be included (e.g. original field is mandatory, E-UTRAN is unaware if UE supports the extended version). In such cases, a UE supporting both versions may be required to ignore the original field. The following example illustrates the use of the critical extension mechanism by showing the ASN.1 of the original and of a later release.

```
-- /example/ ASN1START          -- Original release

RRCMessage ::=
  rrc-TransactionIdentifier
  criticalExtensions
    c1
      rrcMessage-r8
      spare3 NULL, spare2 NULL, spare1 NULL
    },
    criticalExtensionsFuture
  }
}

RRCMessage-rN-IEs ::= SEQUENCE {
  field1-rN
  field2-rN
  nonCriticalExtension
}

-- Original release
SEQUENCE {
  RRC-TransactionIdentifier,
  CHOICE {
    CHOICE{
      RRCMessage-r8-IEs,
    }
  }
}

SEQUENCE {}

ENUMERATED {
  value1, value2, value3, value4}
InformationElement2-rN
RRCConnectionReconfiguration-vMxy-IEs

OPTIONAL, -- Need N
OPTIONAL, -- Need N
OPTIONAL
```

```
RRConnectionReconfiguration-vMxy-IEs ::= SEQUENCE {
    field2-rM                               OPTIONAL, -- Cond NoField2rN
    nonCriticalExtension                     SEQUENCE {}    OPTIONAL
}

-- ASN1STOP
```

Conditional presence	Explanation
NoField2rN	The field is optionally present, need N, if field2-rN is absent. Otherwise the field is absent

Finally, it is noted that a critical extension may be introduced in the same release as the one in which the original field was introduced e.g. to correct an essential ASN.1 error. In such cases a UE capability may be introduced, to assist the network in deciding whether or not to use the critical extension.

In the case of list fields (SEQUENCE OF types in ASN.1) using the ToAddMod/ToRelease construction, the use of critical extensions to increase the size of a list should be avoided; that is, replacing the original list field by a new field also used to signal entries previously covered by the original field (i.e. extensions done according to the following example) should be avoided:

```
-- /example/ ASN1START                -- Discouraged example
ContainingStructure ::=
    listElementToAddModList             SEQUENCE {
        ..                               SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElement    OPTIONAL, -- Need N
        [[
            listElementToAddModList-rN   SEQUENCE (SIZE (1..maxNrofListElements-rN)) OF ListElement    OPTIONAL -- Need N
        ]]
    }
-- ASN1STOP
```

Instead, a non-critical list extension mechanism should typically be used, such that the extension field only adds the new entries of the list. This approach is further described in clause A.4.3.6.

If the critical extension mechanism for a list is used, it should be clarified in the field description that the two versions of the list are not configured together, and that the network should release the contents of the original version when configuring the replacement version.

A.4.3 Non-critical extension of messages

A.4.3.1 General principles

The mechanisms to extend a message in a non-critical manner are defined in A.3.3. W.r.t. the use of extension markers, the following additional guidelines apply:

- When further non-critical extensions are added to a message that has been critically extended, the inclusion of these non-critical extensions in earlier critical branches of the message should be avoided when possible.

- The extension marker ("...") is the primary non-critical extension mechanism that is used but empty sequences may be used if length determinant is not required. Examples of cases where a length determinant is not required:
 - at the end of a message;
 - at the end of a structure contained in a BIT STRING or OCTET STRING.
- When an extension marker is available, non-critical extensions are preferably placed at the location (e.g. the IE) where the concerned parameter belongs from a logical/functional perspective (referred to as the '*default extension location*').
- It is desirable to aggregate extensions of the same release or version of the specification into a group, which should be placed at the lowest possible level.
- In specific cases it may be preferable to place extensions elsewhere (referred to as the '*actual extension location*') e.g. when it is possible to aggregate several extensions in a group. In such a case, the group should be placed at the lowest suitable level in the message.
- In case placement at the default extension location affects earlier critical branches of the message, locating the extension at a following higher level in the message should be considered.
- In case an extension is not placed at the default extension location, an IE should be defined. The IE's ASN.1 definition should be placed in the same ASN.1 clause as the default extension location. In case there are intermediate levels in-between the actual and the default extension location, an IE may be defined for each level. Intermediate levels are primarily introduced for readability and overview. Hence intermediate levels need not always be introduced e.g. they may not be needed when the default and the actual extension location are within the same ASN.1 clause.

A.4.3.2 Further guidelines

Further to the general principles defined in the previous clause, the following additional guidelines apply regarding the use of extension markers:

- Extension markers within SEQUENCE:
 - Extension markers are primarily, but not exclusively, introduced at the higher nesting levels.
 - Extension markers are introduced for a SEQUENCE comprising several fields as well as for information elements whose extension would result in complex structures without it (e.g. re-introducing another list).
 - Extension markers are introduced to make it possible to maintain important information structures e.g. parameters relevant for one particular RAT.
 - Extension markers are also used for size critical messages (i.e. messages on BCCH, BR-BCCH, PCCH and CCCH), although introduced somewhat more carefully.
 - The extension fields introduced (or frozen) in a specific version of the specification are grouped together using double brackets.
- Extension markers within ENUMERATED:
 - Spare values may be used until the number of values reaches the next power of 2, while the extension marker caters for extension beyond that limit, given that the use of spare values in a later Release is possible without any error cases.
 - A suffix of the form "vXYZ" is used for the identifier of each new value, e.g. "value-vXYZ".

- Extension markers within CHOICE:
 - Extension markers are introduced when extension is foreseen and when comprehension is not required by the receiver i.e. behaviour is defined for the case where the receiver cannot comprehend the extended value (e.g. ignoring an optional CHOICE field). It should be noted that defining the behaviour of a receiver upon receiving a not comprehended choice value is not required if the sender is aware whether or not the receiver supports the extended value.
 - A suffix of the form "vXYZ" is used for the identifier of each new choice value, e.g. "choice-vXYZ".

Non-critical extensions at the end of a message/ of a field contained in an OCTET or BIT STRING:

- When a nonCriticalExtension is actually used, a "Need" code should not be provided for the field, which always is a group including at least one extension and a field facilitating further possible extensions. For simplicity, it is recommended not to provide a "Need" code when the field is not actually used either.

Further, more general, guidelines:

- In case a need code is not provided for a group, a "Need" code is provided for all individual extension fields within the group i.e. including for fields that are not marked as OPTIONAL. The latter is to clarify the action upon absence of the whole group.

A.4.3.3 Typical example of evolution of IE with local extensions

The following example illustrates the use of the extension marker for a number of elementary cases (sequence, enumerated, choice). The example also illustrates how the IE may be revised in case the critical extension mechanism is used.

NOTE In case there is a need to support further extensions of release n while the ASN.1 of release (n+1) has been frozen, without requiring the release n receiver to support decoding of release (n+1) extensions, more advanced mechanisms are needed e.g. including multiple extension markers.

```
-- /example/ ASN1START
InformationElement1 ::=
    field1
    field2
        field2a
        field2b
        ...,
        field2c-v960
    },
    ...,
    [[
        field3-r9
    ]],
    [[
        field3-v9a0
        field4-r9
    ]]
}

InformationElement1-r10 ::= SEQUENCE {
    SEQUENCE {
        ENUMERATED {
            value1, value2, value3, value4-v880,
            ..., value5-v960 },
        CHOICE {
            BOOLEAN,
            InformationElement2b,
            InformationElement2c-r9
        }
    }
    InformationElement3-r9 OPTIONAL -- Need R
    InformationElement3-v9a0 OPTIONAL, -- Need R
    InformationElement4 OPTIONAL -- Need R
}
```



```

field1      ENUMERATED {
            value1, value2, value3, value4-v880,
            value5-v960, value6-v1170, spare2, spare1, ... },
field2      CHOICE {
    field2a  BOOLEAN,
    field2b  InformationElement2b,
    field2c-v960
    ...,
    field2d-v12b0
},
field3-r9   InformationElement3-r10    OPTIONAL,    -- Need R
field4-r9   InformationElement4       OPTIONAL,    -- Need R
field5-r10  BOOLEAN,
field6-r10  InformationElement6-r10   OPTIONAL,    -- Need R
...,
[[
field3-v1170   InformationElement3-v1170    OPTIONAL    -- Need R
]]
}
-- ASN1STOP

```

Some remarks regarding the extensions of *InformationElement1* as shown in the above example:

- The *InformationElement1* is initially extended with a number of non-critical extensions. In release 10 however, a critical extension is introduced for the message using this IE. Consequently, a new version of the IE *InformationElement1* (i.e. *InformationElement1-r10*) is defined in which the earlier non-critical extensions are incorporated by means of a revision of the original field.
- The *value4-v880* is replacing a spare value defined in the original protocol version for *field1*. Likewise *value6-v1170* replaces *spare3* that was originally defined in the r10 version of *field1*.
- Within the critically extended release 10 version of *InformationElement1*, the names of the original fields/IEs are not changed, unless there is a real need to distinguish them from other fields/IEs. E.g. the *field1* and *InformationElement4* were defined in the original protocol version (release 8) and hence not tagged. Moreover, the *field3-r9* is introduced in release 9 and not re-tagged; although, the *InformationElement3* is also critically extended and therefore tagged *InformationElement3-r10* in the release 10 version of *InformationElement1*.

A.4.3.4 Typical examples of non critical extension at the end of a message

The following example illustrates the use of non-critical extensions at the end of the message or at the end of a field that is contained in a BIT or OCTET STRING i.e. when an empty sequence is used.

```

-- /example/ ASN1START
RRCMessage-r8-IEs ::=
    field1      InformationElement1,
    field2      InformationElement2,
    field3      InformationElement3    OPTIONAL,    -- Need N
    nonCriticalExtension  RRCMessage-v860-IEs    OPTIONAL

```

```

}
RRCMessage-v860-IEs ::=
    field4-v860          SEQUENCE {
    field5-v860          InformationElement4      OPTIONAL,    -- Need S
    nonCriticalExtension  BOOLEAN              OPTIONAL,    -- Cond C54
    RRCMessage-v940-IEs  OPTIONAL
    }
RRCMessage-v940-IEs ::=
    field6-v940          SEQUENCE {
    nonCriticalExtensions InformationElement6-r9  OPTIONAL,    -- Need R
    SEQUENCE {}          OPTIONAL
    }
-- ASN1STOP

```

Some remarks regarding the extensions shown in the above example:

- The *InformationElement4* is introduced in the original version of the protocol (release 8) and hence no suffix is used.

A.4.3.5 Examples of non-critical extensions not placed at the default extension location

The following example illustrates the use of non-critical extensions in case an extension is not placed at the default extension location.

– *ParentIE-WithEM*

The IE *ParentIE-WithEM* is an example of a high level IE including the extension marker (EM). The root encoding of this IE includes two lower level IEs *ChildIE1-WithoutEM* and *ChildIE2-WithoutEM* which not include the extension marker. Consequently, non-critical extensions of the Child-IEs have to be included at the level of the Parent-IE.

The example illustrates how the two extension IEs *ChildIE1-WithoutEM-vNx0* and *ChildIE2-WithoutEM-vNx0* (both in release N) are used to connect non-critical extensions with a default extension location in the lower level IEs to the actual extension location in this IE.

ParentIE-WithEM information element

```

-- /example/ ASN1START
ParentIE-WithEM ::=
    -- Root encoding, including:
    childIE1-WithoutEM      ChildIE1-WithoutEM      OPTIONAL,    -- Need N
    childIE2-WithoutEM      ChildIE2-WithoutEM      OPTIONAL,    -- Need N
    ...,
    [[
    childIE1-WithoutEM-vNx0  ChildIE1-WithoutEM-vNx0  OPTIONAL,    -- Need N
    childIE2-WithoutEM-vNx0  ChildIE2-WithoutEM-vNx0  OPTIONAL,    -- Need N
    ]]
    ]
-- ASN1STOP

```

Some remarks regarding the extensions shown in the above example:

- The fields *childIE1-WithoutEM-vNx0* may not really need to be optional (depends on what is defined at the next lower level).
- In general, especially when there are several nesting levels, fields should be marked as optional only when there is a clear reason.

– *ChildIE1-WithoutEM*

The IE *ChildIE1-WithoutEM* is an example of a lower level IE, used to control certain radio configurations including a configurable feature which can be setup or released using the local IE *ChIE1-ConfigurableFeature*. The example illustrates how the new field *chIE1-NewField* is added in release N to the configuration of the configurable feature. The example is based on the following assumptions:

- When initially configuring as well as when modifying the new field, the original fields of the configurable feature have to be provided also i.e. as if the extended ones were present within the setup branch of this feature.
- When the configurable feature is released, the new field should be released also.
- When omitting the original fields of the configurable feature the UE continues using the existing values (which is used to optimise the signalling for features that typically continue unchanged upon handover).
- When omitting the new field of the configurable feature the UE releases the existing values and discontinues the associated functionality (which may be used to support release of unsupported functionality upon handover to an eNB supporting an earlier protocol version).

The above assumptions, which affect the use of conditions and need codes, may not always apply. Hence, the example should not be re-used blindly.

ChildIE1-WithoutEM information element

```
-- /example/ ASN1START

ChildIE1-WithoutEM ::=          SEQUENCE {
    -- Root encoding, including:
    chIE1-ConfigurableFeature    ChIE1-ConfigurableFeature    OPTIONAL    -- Need N
}

ChildIE1-WithoutEM-vNx0 ::=    SEQUENCE {
    chIE1-ConfigurableFeature-vNx0    ChIE1-ConfigurableFeature-vNx0    OPTIONAL    -- Cond ConfigF
}

ChIE1-ConfigurableFeature ::=    CHOICE {
    release                        NULL,
    setup                        SEQUENCE {
        -- Root encoding
    }
}

ChIE1-ConfigurableFeature-vNx0 ::= SEQUENCE {
    chIE1-NewField-rN            INTEGER (0..31)
}
```

-- ASN1STOP

Conditional presence	Explanation
<i>ConfigF</i>	The field is optional present, need R, in case of chIE1-ConfigurableFeature is included and set to "setup"; otherwise the field is absent and the UE shall delete any existing value for this field.

– *ChildIE2-WithoutEM*

The IE *ChildIE2-WithoutEM* is an example of a lower level IE, typically used to control certain radio configurations. The example illustrates how the new field *chIE1-NewField* is added in release N to the configuration of the configurable feature.

ChildIE2-WithoutEM information element

```
-- /example/ ASN1START
ChildIE2-WithoutEM ::=
    release
    setup
    -- Root encoding
}
ChildIE2-WithoutEM-vNx0 ::=
    chIE2-NewField-rN
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>ConfigF</i>	The field is optional present, need R, in case of chIE2-ConfigurableFeature is included and set to "setup"; otherwise the field is absent and the UE shall delete any existing value for this field.

A.4.3.6 Non-critical extensions of lists with ToAddMod/ToRelease

When the size of a list using the ToAddMod/ToRelease construction is extended and/or fields are added to the list element structure, the list should be non-critically extended in accordance with the following general principles:

- When only the size of the list is extended, this extension is reflected in a non-critical extension of the list, with a "SizeExt" suffix added to the end of the field name (before the -vNx_y suffix). The differential size of the extended list uses the suffix "Diff". A new ToRelease list is needed, and its range should include only the increase in list size. In many cases, extending the list size will also require an extended list element ID type to account for the increased size of the list; in these cases the element type will need to be extended to include the extended element ID, resulting in a more complex extension (see example 3 for further discussion of this case). The field

description table should indicate that the UE considers the original list and the extension list as a single list; thus entries added with the original list can be modified by the extension list (or removed by the extension of the ToRelease list), or vice versa. The result is as shown in the following example:

```
-- /example 1/ ASN1START

ContainingStructure ::=
    listElementToAddModList      SEQUENCE {
    listElementToReleaseList      SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElement      OPTIONAL,      -- Need N
    ...,
    listElementToAddModListSizeExt-vNxY SEQUENCE (SIZE (1..maxNrofListElementsDiff-rN)) OF ListElement      OPTIONAL,      -- Need N
    listElementToReleaseListSizeExt-vNxY SEQUENCE (SIZE (1..maxNrofListElementsDiff-rN)) OF ListElementId      OPTIONAL      -- Need N
    }
-- ASN1STOP
```

- When fields are added to the list element structure, an extension marker should normally be used if available. If no extension marker is available or if overhead or other considerations prevent using the extension marker, an extension structure should be created for the new fields, with the suffix "Ext" added to the end of the field name and the element structure type name (before the -vNxY suffix), and a parallel ToAddMod list introduced to hold the new structures, also with the "Ext" suffix. The field description table should indicate that the parallel list contains the same number of entries, and in the same order, as the original list. No new ToRelease list is typically needed (unless the list element ID type changes). It should typically be ensured that the contained fields in the "Ext" elements are releasable without release and add of the entire list element; this can, for instance, be ensured by having the new fields be OPTIONAL Need R. If multiple extensions of the same list are needed, the version suffix should distinguish the lists (e.g. *listElementToAddModListExt-vNwz* added after *listElementToAddModListExt-vNxY*). The result is as shown in the following example:

```
-- /example 2/ ASN1START

ContainingStructure ::=
    listElementToAddModList      SEQUENCE {
    listElementToReleaseList      SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElement      OPTIONAL,      -- Need N
    ...,
    listElementToAddModListExt-vNxY SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElementExt-vNxY      OPTIONAL      -- Need N
    },
    listElementToAddModListExt-vNwz SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElementExt-vNwz      OPTIONAL      -- Need N
    }

ListElement ::=
    elementId
    field1
    field2
    SEQUENCE {
        ListElementId,
        INTEGER (0..3),
        ENUMERATED { value1, value2, value3 }
    }
```

```

ListElementExt-vNxy ::=          SEQUENCE {
    field3-rN                    BIT STRING (SIZE (8))
}                                OPTIONAL    -- Need R

ListElementExt-vNwz ::=          SEQUENCE {
    field4-rN                    INTEGER (0..255)
}                                OPTIONAL    -- Need R
-- ASN1STOP

```

- When the size of a list is extended and fields are added to the list element structure, an extension marker should normally be used for the added fields if available, and the list extended with the non-critical mechanism as described in example 1 above. Note that if the list element ID type changes in this case, the new ID can be added after the extension marker, and the entries of the size-extended ToRelease list should have the type of the new ID (e.g. *ListElementId-vNxy*). If no extension marker is available or if overhead or other considerations prevent using the extension marker, an extension structure should be created for the new fields and a parallel list with ToAddMod introduced to hold the extension structures, as in the second example above, for entries of the original list and for entries of the extension list holding new entries. The field description table should indicate that the parallel list contains the same number of entries, and in the same order, as the concatenation of the original list and the extension list. An extended ToRelease list is needed, but no additional parallel ToRelease list is needed (i.e. there is no *listElementToReleaseListExt-vNxy* in the example below), as the original and extended ToRelease lists suffice to release any element of the combined list. The extended element ID type should be captured as a non-critical extension of the original element ID type, with the field description indicating that if the extended ID is present, the original ID is ignored. The result is as shown in the following example:

```

-- /example 3/ ASN1START

ContainingStructure ::=          SEQUENCE {
    listElementToAddModList      SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElement    OPTIONAL,    -- Need N
    listElementToReleaseList     SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElementId    OPTIONAL,    -- Need N
    ...
    [[
        -- Non-critical extension lists
        listElementToAddModListSizeExt-vNxy SEQUENCE (SIZE (1..maxNrofListElementsDiff-rN)) OF ListElement    OPTIONAL,    -- Need N
        listElementToReleaseListSizeExt-vNxy SEQUENCE (SIZE (1..maxNrofListElementsDiff-rN)) OF ListElementId-vNxy    OPTIONAL,    -- Need N
        -- Parallel list with maxNrofListElements-rN = maxNrofListElements + maxNrofListElementsDiff-rN
        listElementToAddModListExt-vNxy     SEQUENCE (SIZE (1..maxNrofListElements-rN)) OF ListElementExt-vNxy    OPTIONAL    -- Need N
    ]]
}

ListElement ::=          SEQUENCE {
    elementId
    field1                INTEGER (0..3),
    field2                ENUMERATED { value1, value2, value3 }
}

ListElementExt-vNxy ::=          SEQUENCE {
    -- Field description should indicate that if the elementId-vNxy is present, the elementId (without suffix) is ignored
    elementId-vNxy        ListElementId-vNxy    OPTIONAL,    -- Need S
    field3-rN             BIT STRING (SIZE (8))    OPTIONAL    -- Need R
}

ListElementId ::= INTEGER (0..maxNrofListElements-1)

ListElementId-vNxy ::= INTEGER (maxNrofListElements..maxNrofListElements-1-rN)

```

```
-- ASN1STOP
```

- When different extensions are made to a list in separate releases, the extension mechanisms described above may interact. In case fields are added in Rel-M (*listElementToAddModListExt-vMxy*) and later the list size is extended in Rel-N (*listElementToAddModListSizeExt-vNwz*), the size-extended list in Rel-N should be a single list extending the combination of *listElementToAddModList* and *listElementToAddModListExt-vMxy*. This requires creating a new type (*ListElement-rN*) to contain the combined fields of *ListElement* and *ListElementExt-vMxy*. A corresponding ToRelease list is needed. The result is as shown in the following example:

```
-- /example 4/ ASN1START

ContainingStructure ::=
    listElementToAddModList      SEQUENCE {
        listElementToAddModList  SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElement      OPTIONAL,    -- Need N
        listElementToReleaseList SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElementId    OPTIONAL,    -- Need N
        ...
    },
    -- Parallel list (Rel-M)
    listElementToAddModListExt-vMxy SEQUENCE (SIZE (1..maxNrofListElements)) OF ListElementExt-vMxy OPTIONAL -- Need N
],
-- Size-extended list (Rel-N) with maxNrofListElements-rN = maxNrofListElements + maxNrofListElementsDiff-rN
listElementToAddModListSizeExt-vNwz SEQUENCE (SIZE (1..maxNrofListElementsDiff-rN)) OF ListElement-rN OPTIONAL, -- Need N
listElementToReleaseListSizeExt-vNwz SEQUENCE (SIZE (1..maxNrofListElementsDiff-rN)) OF ListElementId-vNwz OPTIONAL -- Need N
]

ListElement ::=
    elementId
    field1
    field2
    SEQUENCE {
        ListElementId,
        INTEGER (0..3),
        ENUMERATED { value1, value2, value3 }
    }

ListElementExt-vMxy ::=
    field3-rM
    SEQUENCE {
        BIT STRING (SIZE (8))
    } OPTIONAL -- Need R

ListElement-rN ::=
    elementId-vNwz
    field1
    field2
    field3-rN
    SEQUENCE {
        ListElementId-vNwz,
        INTEGER (0..3),
        ENUMERATED { value1, value2, value3 },
        BIT STRING (SIZE (8))
    } OPTIONAL -- Need R

ListElementId ::= INTEGER (0..maxNrofListElements-1)

ListElementId-vNwz ::= INTEGER (maxNrofListElements..maxNrofListElementsDiff-1-rN)
-- ASN1STOP
```

A.5 Guidelines regarding inclusion of transaction identifiers in RRC messages

The following rules provide guidance on which messages should include a Transaction identifier

- 1: DL messages on CCCH that move UE to RRC-Idle should not include the RRC transaction identifier.
- 2: All network initiated DL messages by default should include the RRC transaction identifier.
- 3: All UL messages that are direct response to a DL message with an RRC Transaction identifier should include the RRC Transaction identifier.
- 4: All UL messages that require a direct DL response message should include an RRC transaction identifier.
- 5: All UL messages that are not in response to a DL message nor require a corresponding response from the network should not include the RRC Transaction identifier.

A.6 Guidelines regarding use of need codes

The following rule provides guidance for determining need codes for optional downlink fields:

- if the field needs to be stored by the UE (i.e. maintained) when absent:
 - use Need M (=Maintain);
- else, if the field needs to be released by the UE when absent:
 - use Need R (=Release);
- else, if UE shall take no action when the field is absent (i.e. UE does not even need to maintain any existing value of the field):
 - use Need N (=None);
- else (UE behaviour upon absence does not fit any of the above conditions):
 - use Need S (=Specified);
 - specify the UE behaviour upon absence of the field in the procedural text or in the field description table.

A.7 Guidelines regarding use of conditions

Conditions are primarily used to specify network restrictions, for which the following types can be distinguished:

- Message Contents related constraints e.g. that a field B is mandatory present if the same message includes field A and when it is set value X.

- Configuration Constraints e.g. that a field D can only be signalled if field C is configured and set to value Y. (i.e. regardless of whether field C is present in the same message or previously configured).

The use of these conditions is illustrated by an example.

```
-- /example/ ASN1START
RRCMessage-IEs ::= SEQUENCE {
    fieldA                FieldA                OPTIONAL, -- Need M
    fieldB                FieldB                OPTIONAL, -- Cond FieldAsetToX
    fieldC                FieldC                OPTIONAL, -- Need M
    fieldD                FieldD                OPTIONAL, -- Cond FieldCsetToY
    nonCriticalExtension  SEQUENCE {}           OPTIONAL
}
-- /example/ ASN1STOP
```

Conditional presence	Explanation
<i>FieldAsetToX</i>	The field is mandatory present if fieldA is included and set to valueX. Otherwise the field is optionally present, need R.
<i>FieldCsetToY</i>	The field is optionally present, need M, if fieldC is configured and set to valueY. Otherwise the field is absent and the UE does not maintain the value

A.8 Miscellaneous

The following miscellaneous convention should be used:

- UE capabilities: TS 38.306 [26] specifies that the network should in general respect the UE's capabilities. Hence there is no need to include statement clarifying that the network, when setting the value of a certain configuration field, shall respect the related UE capabilities unless there is a particular need e.g. particularly complicated cases.
- UE capabilities: If a UE capability for a feature requires at least FR1/FR2 or at least FDD/TDD differentiation, it is defined in per band signaling (under *BandNR* in *RF-Parameters*) in the ASN.1, i.e. no new UE capabilities is defined in the FR1/FR2 and FDD/TDD differentiation capability signaling branches.

Annex B (informative): RRC Information

B.1 Protection of RRC messages

The following list provides information which messages can be sent (unprotected) prior to AS security activation and which messages can be sent unprotected after AS security activation. Those messages indicated "-" in "P" column should never be sent unprotected by gNB or UE. Further requirements are defined in the procedural text.

P...Messages that can be sent (unprotected) prior to AS security activation

A – I...Messages that can be sent without integrity protection after AS security activation

A – C...Messages that can be sent unciphered after AS security activation

NA... Message can never be sent after AS security activation

Message	P	A-I	A-C	Comment
<i>CounterCheck</i>	-	-	-	
<i>CounterCheckResponse</i>	-	-	-	
<i>DedicatedSIBRequest</i>	+	-	-	
<i>DLDedicatedMessageSegment</i>	NOTE 1			
<i>DLInformationTransfer</i>	+	-	-	
<i>DLInformationTransferMRDC</i>	-	-	-	
<i>FailureInformation</i>	-	-	-	
<i>IABOtherInformation</i>	-	-	-	
<i>IndirectPathFailureInformation</i>	-	-	-	
<i>LocationMeasurementIndication</i>	-	-	-	
<i>LoggedMeasurementConfiguration</i>	-	-	-	
<i>MCGFailureInformation</i>	-	-	-	
<i>MeasurementReportAppLayer</i>	-	-	-	
<i>MBSBroadcastConfiguration</i>	+	+	+	
<i>MBSInterestIndication</i>	-	-	-	
<i>MBSMulticastConfiguration</i>	+	+	+	
<i>MIB</i>	+	+	+	
<i>MeasurementReport</i>	-	-	-	Measurement configuration may be sent prior to AS security activation. But: In order to protect privacy of UEs, <i>MeasurementReport</i> is only sent from the UE after successful AS security activation.
<i>MobilityFromNRCommand</i>	-	-	-	
<i>Paging</i>	+	+	+	
<i>RRCReconfiguration</i>	+	-	-	The message shall not be sent unprotected before AS security activation if it is used to perform handover or to establish SRB2, SRB4, multicast MRBs and DRBs.
<i>RRCReconfigurationComplete</i>	+	-	-	Unprotected, if sent as response to <i>RRCReconfiguration</i> which was sent before AS security activation.
<i>RRCReestablishment</i>	-	-	+	Integrity protection applied, but no ciphering.
<i>RRCReestablishmentComplete</i>	-	-	-	
<i>RRCReestablishmentRequest</i>	-	-	+	This message is not protected by PDCP operation. However, a <i>shortMAC-I</i> is included.
<i>RRCReject</i>	+	+	+	Justification for A-I and A-C: the message can be sent in SRB0 in RRC_INACTIVE state, after the AS security is activated.
<i>RRCRelease</i>	+	-	-	Justification for P: If the RRC connection only for signalling not requiring DRBs or ciphered messages, or the signalling connection has to be released prematurely, this message is sent as unprotected. <i>RRCRelease</i> message sent before AS security activation cannot include <i>deprioritisationReq</i> , <i>suspendConfig</i> , <i>redirectedCarrierInfo</i> , <i>cellReselectionPriorities</i> information fields.
<i>RRCResume</i>	-	-	-	
<i>RRCResumeComplete</i>	-	-	-	
<i>RRCResumeRequest</i>	-	-	+	This message is not protected by PDCP operation. However, a <i>resumeMAC-I</i> is included.
<i>RRCResumeRequest1</i>	-	-	+	This message is not protected by PDCP operation. However, a <i>resumeMAC-I</i> is included.
<i>RRCSetup</i>	+	+	+	Justification for A-I and A-C: the message can be sent in SRB0 in RRC_INACTIVE or RRC_CONNECTED states, after the AS security is activated.
<i>RRCSetupComplete</i>	+	NA	NA	
<i>RRCSetupRequest</i>	+	NA	NA	
<i>RRCSystemInfoRequest</i>	+	+	+	Justification for A-I and A-C: the message can be sent in SRB0 in RRC_INACTIVE state, after the AS security is activated.
<i>SIB1</i>	+	+	+	

Message	P	A-I	A-C	Comment
<i>SCGFailureInformation</i>	-	-	-	
<i>SCGFailureInformationEUTRA</i>	-	-	-	
<i>SecurityModeCommand</i>	+	NA	NA	Integrity protection applied, but no ciphering (integrity verification done after the message received by RRC).
<i>SecurityModeComplete</i>	-	-	+	The message is sent after AS security activation. Integrity protection applied, but no ciphering. Ciphering is applied after completing the procedure.
<i>SecurityModeFailure</i>	+	NA	NA	Neither integrity protection nor ciphering applied.
<i>SidelinkUEInformationNR</i>	+	-	-	The message shall not be sent unprotected before AS security activation if <i>sl-CapabilityInformationSidelink</i> information field is included in the message.
<i>SystemInformation</i>	+	+	+	
<i>UEAssistanceInformation</i>	-	-	-	
<i>UECapabilityEnquiry</i>	+	-	-	The network should retrieve UE capabilities only after AS security activation.
<i>UECapabilityInformation</i>	+	-	-	
<i>ULDedicatedMessageSegment</i>	NOTE 1			
<i>UEInformationRequest</i>	-	-	-	
<i>UEInformationResponse</i>	-	-	-	In order to protect privacy of UEs, <i>UEInformationResponse</i> is only sent from the UE after successful security activation
<i>UEPositioningAssistanceInfo</i>	-	-	-	
<i>ULInformationTransfer</i>	+	-	-	
<i>ULInformationTransferIRAT</i>	NOTE 2			
<i>ULInformationTransferMRDC</i>	-	-	-	
NOTE 1: This message type carries segments of other RRC messages. The protection of an instance of this message is the same as for the message which this message is carrying.				
NOTE 2: This message type carries others RRC messages. The protection of an instance of this message is the same as for the message which this message is carrying.				

B.2 Description of BWP configuration options

There are two possible ways to configure BWP#0 (i.e. the initial BWP) for a UE:

- 1) Configure *BWP-DownlinkCommon* and *BWP-UplinkCommon* in *ServingCellConfigCommon*, but do not configure dedicated configurations in *BWP-DownlinkDedicated* or *BWP-UplinkDedicated* in *ServingCellConfig*.
- 2) Configure both *BWP-DownlinkCommon* and *BWP-UplinkCommon* in *ServingCellConfigCommon* and configure dedicated configurations in at least one of *BWP-DownlinkDedicated* or *BWP-UplinkDedicated* in *ServingCellConfig*.

The same way of configuration is used for UL BWP#0 and DL BWP#0 if both are configured.

With the first option (illustrated by figure B2-1 below), the BWP#0 is not considered to be an RRC-configured BWP, i.e., UE only supporting one BWP can still be configured with BWP#1 in addition to BWP#0 when using this configuration. The BWP#0 can still be used even if it does not have the dedicated configuration, albeit in a more limited manner since only the SIB1-defined configurations are available. For example, only DCI format 1_0 can be used with BWP#0 without dedicated configuration, so changing to another BWP requires RRCReconfiguration since DCI format 1_0 doesn't support DCI-based switching.

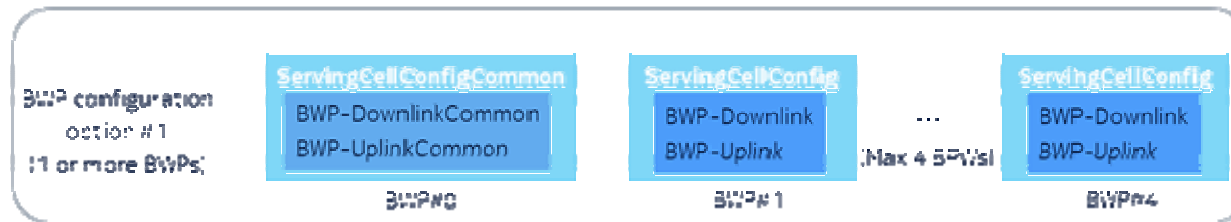 


Figure B2-1: BWP#0 configuration without dedicated configuration

With the second option (illustrated by figure B2-2 below), the BWP#0 is considered to be an RRC-configured BWP, i.e. UE only supporting one BWP cannot be configured with BWP#1 in addition to BWP#0 when using this configuration. However, UE supporting more than one BWP can still switch to and from BWP#0 e.g. via DCI normally, and there are no explicit limitations to using the BWP#0 (compared to the first option).

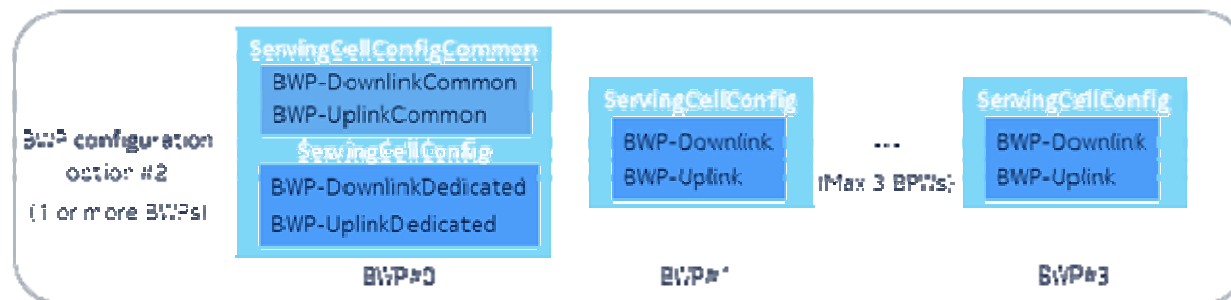 


Figure B2-2: BWP#0 configuration with dedicated configuration

For BWP#0, the *BWP-DownlinkCommon* and *BWP-UplinkCommon* in *ServingCellConfigCommon* should match the parameters configured by MIB and SIB1 (if provided) in the corresponding serving cell.

If an RedCap-specific initial DL BWP is configured, for BWP switching, the BWP #0 always maps to the RedCap-specific initial DL BWP. If a RedCap-specific initial UL BWP is configured, for BWP switching on NUL, the BWP #0 always maps to the RedCap-specific initial UL BWP, for BWP switching on SUL, the BWP#0 always maps to the initial UL BWP.

Annex C (normative): List of CRs Containing Early Implementable Features and Corrections

This annex lists the Change Requests (CRs) whose changes may be implemented by a UE of an earlier release than which the CR was approved in (i.e. CRs that contain on their coversheets the sentence "Implementation of this CR from Rel-N will not cause interoperability issues").

Table C-1: List of CRs Containing Early Implementable Features and Corrections

TDoc Number (RP-xxxxxx): CR Title	CR Number(s)	CR Revision Number(s)	Earliest Implementable Release	Additional Information
RP-200335: Correction on usage of access category 2 for UAC for RNA update	1141	2	Release 15	
RP-201185: Introduction of signalling for high-speed train scenarios	1464	5	Release 15	
RP-201216: Release-16 UE capabilities based on RAN1, RAN4 feature lists and RAN2	1665	2	Release 15	Early implementation part is referring to the aspect covered by - R2-2006203: Extension of CSI-RS capabilities per codebook type - R2-2006360: Intraband EN_DC power class expansion for 29 dBm
RP-202768: UE behaviour when UL 7.5KHz shift is not supported	2107	2	Release 15	
RP-202790: Correction on uac-AccessCategory1-SelectionAssistanceInfo	2130	1	Release 15	
RP-211483: Clarification on the initiation of RNA update	2581	1	Release 15	
RP-201190: Introduction of eCall over IMS for NR	1670	-	Release 15	
RP-212598: Distinguishing support of extended band n77	2810	2	Release 15	
RP-213342: Duty cycle signalling for power class 1.5	2817	1	Release 15	
RP-213345: CR on 38.331 for introducing UE capability of txDiversity	2859	1	Release 15	
RP-220497: Introduction of function for RRM enhancements for Rel-17 NR FR1 HST	2898	2	Release 16	
RP-220838: Release-17 UE capabilities based on R1 and R4 feature lists (TS38.331)	2901	1	Release 15	Early implementation part is referring to the aspect covered by: - R2-2203898: Introduction of BCS4 and BCS5 - R2-2203836: Introducing UE capability for power class 5 for FR2 FWA
RP-221721: CR on the CBM/IBM reporting-38331	2916	2	Release 16	
RP-221736: Distinguishing support of band n77 restrictions in Canada [n77 Canada]	3078	2	Release 15	

RP-222527: Correction to additionalSpectrumEmission for UL CA in n77 for the US	3476	-	Release 15	
RP-222527: Correction to additionalSpectrumEmission for UL CA in n77 for Canada	3478	-	Release 15	
RP-232570: Addition of extended number range for NS value	3900	6	Release 16	
RP-233888: Introduction of FR2 FBG2 CA BW classes	2867	6	Release 15	
RP-233882: Enhancing SCell A2 event reporting	4375	2	Release 15	
RP-233890: PTM retransmission reception for multicast DRX with HARQ feedback disabled [PTM ReTx Mcast HARQ Disb]	4504	-	Release 17	
RP-240667: UE capability for Enhanced channel raster	4445	3	Release 16	
RP-240658: Introduction of TxDiversity for 2Tx capability	4639	2	Release 17	
RP-241543: Introduction of barring exemption for RedCap UEs for emergency calls	4570	4	Release 17	
RP-241543: Correction on Redcap 1 Rx and 2 Rx barring	4632	5	Release 17	
RP-241544: Correction on TRS in idle and inactive	4755	3	Release 17	
RP-241544: Clarification RLM/BFD relaxation and short DRX	4771	2	Release 17	
RP-233915: Introduction of further measurement gap enhancements	4063	6	Release 17	Early implementation part is referring to all aspects other than effective measurement window. Early implementation also includes the corresponding capability of R2-2311897 (within CR 4510 of RP-233940).
RP-243227: Introduction of network signalling of maximum number of UL segments [Max-RRC-SegUL]	5004	3	Release 16	
RP-243233: Correction on deprioritisationTimer	5170	2	Release 15	

Annex D (normative): UE requirements on ASN.1 comprehension

This clause specifies UE requirements regarding the ASN.1 transfer syntax support, i.e. the ASN.1 definitions to be comprehended by the UE.

A UE that indicates release X in field *accessStratumRelease* shall comprehend the entire transfer syntax (ASN.1) of release X, in particular at least the first version upon ASN.1 freeze. The UE is however not required to support dedicated signalling related transfer syntax associated with optional features it does not support.

In case a UE that indicates release X in field *accessStratumRelease* supports a feature specified in release Y, which is later than release X, (i.e. early UE implementation) additional requirements apply. The UE obviously also has to support the ASN.1 parts related to indicating support of the feature (in UE capabilities).

Critical extensions (dedicated signaling)

If the early implemented feature involves one or more critical extensions in dedicated signalling, the UE shall comprehend the parts of the transfer syntax (ASN.1) of release Y that are related to the feature implemented early. This, in particular, concerns the ASN.1 parts related to configuration of the feature.

If configuration of an early implemented feature introduced in release Y involves a message or field that has been critically extended, the UE shall support configuration of all features supported by the UE that are associated with sub-fields of this critical extension. Apart from the early implemented feature(s), the UE needs, however, not to support functionality beyond what is defined in the release the UE indicates in access stratum release.

Let's consider the example of a UE indicating value X in field *accessStratumRelease* that supports the features A1, A3, and A5, associated with fields *fieldA1*, *fieldA3* and *fieldA5* of *InformationElementA* (see ASN.1 below).

The feature A5 implemented early is associated with *fieldA5*, and can only be configured by the –rY version of *InformationElementA*. In such case, the UE should support configuration of all the features A1, A3 and A5 associated with fields *fieldA1*, *fieldA3* and *fieldA5* by the –rY version of *InformationElementA*.

If, however, one of the features was modified, e.g. the feature A3 associated with *fieldA3*, the network should assume the UE only supports the feature A3 according to the release it indicated in field *accessStratumRelease* (i.e. X).

The UE is neither required to support the additional code-point (*n80-vY0*) nor the additional sub-field (*fieldA3c-rY*).

```

InformationElementA-rX ::= SEQUENCE {
    fieldA1-rX      InformationElementA1-rX      OPTIONAL, -- Need N
    fieldA2-rX      InformationElementA2-rX      OPTIONAL, -- Need R
    fieldA3-rX      InformationElementA3-rX      OPTIONAL
}

InformationElementA-rY ::= SEQUENCE {
    fieldA1-rY      InformationElementA1-rX      OPTIONAL, -- Need N
    fieldA2-rY      InformationElementA2-rX      OPTIONAL, -- Need R
    fieldA3-rY      InformationElementA3-rY      OPTIONAL, -- Need R
    fieldA4-rY      InformationElementA4-rY      OPTIONAL, -- Need R
    fieldA5-rY      InformationElementA5-rY      OPTIONAL, -- Need R
}

InformationElementA3-rX ::= SEQUENCE {
    fieldA3a-rX      InformationElementA3a-rX      OPTIONAL, -- Need N

```

```

    fieldA3b-rX          ENUMERATED {n10, n20, n40}          OPTIONAL    -- Need R
}

InformationElementA3-rY ::= SEQUENCE {
    fieldA3a-rY          InformationElementA3a-rX            OPTIONAL,    -- Need N
    fieldA3b-rY          ENUMERATED {n10, n20, n40, n80-vY0}  OPTIONAL,    -- Need R
    fieldA3c-rY          InformationElementA3c-rY            OPTIONAL    -- Need R
}
```

Non-critical extensions (dedicated and broadcast signaling)

If the early implemented feature involves one or more non-critical extensions, the UE shall comprehend the parts of the transfer syntax (ASN.1) of release Y that are related to the feature implemented early.

If the early implemented feature involves one or more non-critical extensions in dedicated signaling, the network does not include extensions introduced after the release X that are not the parts related to the feature which the UE indicates early support of in UE capabilities. The UE shall anyway comprehend the parts of the transfer syntax (ASN.1) which indicate absence of such extensions.

If the early implemented feature involves one or more non-critical extensions in system information, the SIB(s) containing the release Y fields related to the early implemented features may also include other extensions introduced after the release X that are not the parts related to the feature which the UE supports. The UE shall comprehend such intermediate fields (but again is not required to support the functionality associated with these intermediate fields, in case this concerns optional features not supported by the UE).

Annex E (informative): Change history

Change history							
Date	Meeting	TDoc	CR	Rev	Category	Subject/Comment	New version
04/2017	RAN2#97bis	R2-1703395					0.0.1
04/2017	RAN2#97bis	R2-1703922					0.0.2
05/2017	RAN2#98	R2-1705815					0.0.3
06/2017	RAN2#NR2	R2-1707187					0.0.4
08/2017	RAN2#99	R2-1708468					0.0.5
09/2017	RAN2#99bis	R2-1710557					0.1.0
11/2017	RAN2#100	R2-1713629					0.2.0
11/2017	RAN2#100	R2-1714126					0.3.0
12/2017	RAN2#100	R2-1714259					0.4.0
12/2017	RP#78	RP-172570				Submitted for Approval in RAN#78	1.0.0
12/2017	RP#78					Upgraded to Rel-15 (MCC)	15.0.0
03/2018	RP#79	RP-180479	0008	1	F	Corrections for EN-DC (Note: the clause numbering between 15.0.0 and 15.1.0 has changed in some cases).	15.1.0
06/2018	RP-80	RP-181326	0042	7	F	Miscellaneous EN-DC corrections	15.2.0
	RP-80					Correction: Duplicate Foreword clause removed & ASN.1 clauses touched up	15.2.1
09/2018	RP-81	RP-181942	0100	4	F	Introduction of SA	15.3.0
12/2018	RP-82	RP-182656	0179	3	F	Handling of Resume Failure	15.4.0
	RP-82	RP-182651	0187	1	F	Clarification on the presence of ra-ResponseWindow	15.4.0
	RP-82	RP-182656	0188	3	F	Addition of RAN specific Access Category	15.4.0
	RP-82	RP-182653	0199	2	F	CR for TS38.331 on MIB	15.4.0
	RP-82	RP-182653	0200	1	F	CR for TS38.331 on PDCCH-ConfigSIB	15.4.0
	RP-82	RP-182661	0202	2	F	Handling Cell Reselection during SI Request	15.4.0
	RP-82	RP-182649	0213	2	F	Corrections on security field descriptions	15.4.0
	RP-82	RP-182649	0216	2	F	Remain issue for T302	15.4.0
	RP-82	RP-182649	0219	1	F	[C204] Handling of timer T380	15.4.0
	RP-82	RP-182655	0229	2	F	Clarification on configured grant timer in 38.331	15.4.0
	RP-82	RP-182663	0232	2	F	CR for ServingCellConfigCommon in 38.331	15.4.0
	RP-82	RP-182659	0234	3	F	Introduction of cell level rate matching parameters in ServingCellConfig	15.4.0
	RP-82	RP-182650	0235	2	F	CR for introducing PSCell frequency in CG-Config	15.4.0
	RP-82	RP-182650	0236	2	F	CR for security handling for eLTE in 38.331	15.4.0
	RP-82	RP-182650	0237	1	F	Handling on simultaneously triggered NAS&AS events (I770)	15.4.0
	RP-82	RP-182650	0238	2	F	Handling on security keys for resume procedure (I774)	15.4.0
	RP-82	RP-182664	0239	5	F	RIL I556, I557, I558 on RB handling when resuming	15.4.0
	RP-82	RP-182650	0242	2	F	Security for RRC connection release	15.4.0
	RP-82	RP-182650	0243	4	F	Corrections on reestablishment and security procedures	15.4.0
	RP-82	RP-182650	0244	1	F	RIL I118 on release case to upper layers for CN paging for a UE in RRC_INACTIVE	15.4.0
	RP-82	RP-182650	0246	2	F	CR on SI request procedure in TS38.331	15.4.0
	RP-82	RP-182650	0248	2	F	CR to 38331 on ul-DataSplitThreshold for SRB	15.4.0
	RP-82	RP-182652	0249	2	F	Clarification of guami-Type	15.4.0
	RP-82	RP-182652	0252	1	F	CR to 38.331 on Protection of RRC messages Table	15.4.0
	RP-82	RP-182663	0254	2	F	Access barring check after handover	15.4.0
	RP-82	RP-182663	0259	3	F	Stop of T390 and related UE actions	15.4.0
	RP-82	RP-182657	0260	4	F	Corrections for handover between NR and E-UTRA	15.4.0
	RP-82	RP-182738	0267	3	F	CR on ssb-ToMeasure in MeasurementTimingConfiguration	15.4.0
	RP-82	RP-182659	0269	3	F	Clarification of the applicability of 38.331 to EN-DC	15.4.0
	RP-82	RP-182654	0270	3	F	Clarification on the smtc signalled for intra-NR handover, PSCell change or SCell addition	15.4.0
	RP-82	RP-182654	0273	3	F	CR on fallback to the setup procedure	15.4.0

	RP-82	RP-182654	0275	1	F	Correction on cell sorting for periodical measurement reporting	15.4.0
	RP-82	RP-182660	0277	2	F	Measurement related actions upon re-establishment	15.4.0
	RP-82	RP-182654	0278	1	F	CR on threshold description for cell quality derivation	15.4.0
	RP-82	RP-182654	0282	1	F	CR to avoid unnecessary L3 filtered beam measurements	15.4.0
	RP-82	RP-182660	0283	2	F	CR on CGI reporting	15.4.0
	RP-82	RP-182660	0291	3	F	Additional UE capabilities for NR standalone	15.4.0
	RP-82	RP-182667	0294	4	F	NR RRC Processing Time	15.4.0
	RP-82	RP-182812	0295	5	F	Update of L1/RF capabilities	15.4.0
	RP-82	RP-182651	0296	2	F	UE configuration on re-establishment procedure	15.4.0
	RP-82	RP-182651	0298	2	F	SIB size limitation [M201]	15.4.0
	RP-82	RP-182651	0299	2	F	Correction on SRS-TPC-CommandConfig	15.4.0
	RP-82	RP-182651	0302	2	F	Clarification on counter check procedure	15.4.0
	RP-82	RP-182666	0307	4	F	CR on the Clarification for the Support of the Delay Budget Report in NR	15.4.0
	RP-82	RP-182666	0320	3	F	ssb-PositionsInBurst correction	15.4.0
	RP-82	RP-182666	0325	3	F	Barring behaviour when SIB1 reception fails	15.4.0
	RP-82	RP-182666	0329	5	F	System Information Storing and Validity Clarifications and Corrections	15.4.0
	RP-82	RP-182666	0330	3	F	SIBs required before initiating connection	15.4.0
	RP-82	RP-182652	0333	1	F	On contents of measObjectEUTRA	15.4.0
	RP-82	RP-182654	0335	2	F	A3 and A5 corrections – neighbouring cell definition	15.4.0
	RP-82	RP-182650	0339	2	F	SI reception in RRC Connected mode (RIL#I1611)	15.4.0
	RP-82	RP-182650	0340	2	F	Miscellaneous corrections on SI procedures	15.4.0
	RP-82	RP-182652	0342	1	F	On RRM measurements related procedural text corrections	15.4.0
	RP-82	RP-182651	0344	1	F	Clarification for absense of nr-NS-PmaxList IE	15.4.0
	RP-82	RP-182652	0345	2	F	Clarification on paging in connected mode	15.4.0
	RP-82	RP-182651	0350	2	F	ASN.1 correction to fr-InfoListSCG in CG-Config	15.4.0
	RP-82	RP-182661	0355	2	F	Update of L2 capability parameters	15.4.0
	RP-82	RP-182651	0364	1	F	Procedures for full config at RRCResume	15.4.0
	RP-82	RP-182651	0365	2	F	Clarification of PDCP-Config field descriptions	15.4.0
	RP-82	RP-182653	0368	2	F	UE Context handling during handover to NR	15.4.0
	RP-82	RP-182652	0371	2	F	[E255] CR to 38.331 on corrections related to CGI reporting timer T321	15.4.0
	RP-82	RP-182655	0375	3	F	R2-1817981 CR to 38.331 on pendingRnaUpdate setting	15.4.0
	RP-82	RP-182653	0376	2	F	Introducing procedure for reporting RLC failures	15.4.0
	RP-82	RP-182654	0379	2	F	Correction of frequency band indication in MeasObjectNR	15.4.0
	RP-82	RP-182654	0382	2	F	RRC connection release triggered by upper layers	15.4.0
	RP-82	RP-182660	0384	3	F	Correction to configuration of measurement object	15.4.0
	RP-82	RP-182665	0388	3	F	Correction to 38331 in SRS-Config	15.4.0
	RP-82	RP-182657	0391	2	F	Correction for PowerControl-related issues	15.4.0
	RP-82	RP-182668	0395	4	F	Inter-band EN-DC Configured Output Power requirements	15.4.0
	RP-82	RP-182655	0396	2	F	E573 Configuration of SRB1 during Resume	15.4.0
	RP-82	RP-182655	0402	1	F	Triggers for abortion of RRC establishment	15.4.0
	RP-82	RP-182656	0406	2	F	Correction on CN type indication for Redirection from NR to E-UTRA	15.4.0
	RP-82	RP-182664	0409	4	F	Miscellaneous minor corrections	15.4.0
	RP-82	RP-182654	0410	1	F	Invalidation of L1 parameter nrofCQIsPerReport	15.4.0
	RP-82	RP-182654	0411	1	F	Clarifications on RNA update and CN registration (N023)	15.4.0
	RP-82	RP-182666	0412	3	F	Missing optionality bit in CG-ConfigInfo	15.4.0
	RP-82	RP-182662	0414	2	F	Clarification for the implementation of UE feature list item 6-1 (BWP op1)	15.4.0
	RP-82	RP-182654	0417	1	F	Clarification on ssb-PositionsInBurst	15.4.0
	RP-82	RP-182667	0418	3	F	Correction to commonControlResourceSet	15.4.0
	RP-82	RP-182667	0420	2	F	Correction to TDD configuration in SIB1	15.4.0
	RP-82	RP-182668	0421	5	F	Clarification on handling of default parameters	15.4.0
	RP-82	RP-182663	0429	2	F	SRB3 integrity protection failure handling	15.4.0
	RP-82	RP-182653	0431	2	F	Corrections to the field descriptions of System Information	15.4.0
	RP-82	RP-182653	0434	1	F	Correction to SI provision in connected mode	15.4.0
	RP-82	RP-182661	0436	3	F	PDCCH Monitoring Occasions in SI Window	15.4.0
	RP-82	RP-182655	0438	3	F	CR on SI Message Acquisition	15.4.0
	RP-82	RP-182652	0439	1	F	Update of nas-SecurityParamFromNR according to LS from SA3	15.4.0
	RP-82	RP-182652	0445	2	F	Correction to Default MAC Cell Group configuration	15.4.0
	RP-82	RP-182652	0447	1	F	Correction to missing field descriptions of PLMN Identity	15.4.0
	RP-82	RP-182657	0448	2	F	Introducing PDCP suspend procedure	15.4.0
	RP-82	RP-182657	0449	2	F	Correction to PDCP statusReportRequired	15.4.0
	RP-82	RP-182664	0454	3	F	CR to 38.331 on the ambiguity of targetCellIdentity in Resume/Reestablishment MAC-I calculation	15.4.0
	RP-82	RP-182655	0457	1	F	Corrections on P-Max description	15.4.0
	RP-82	RP-182651	0460	2	F	Clarification on Configuration of multiplePHR for EN-DC and NR-CA	15.4.0
	RP-82	RP-182656	0469	2	F	Correction on conditional presence of PCellOnly	15.4.0
	RP-82	RP-182657	0474	4	F	Introduction of power boosting indicator for pi2BPSK waveform	15.4.0
	RP-82	RP-182655	0475	1	F	Correction on the allowedBC-ListMRDC	15.4.0
	RP-82	RP-182649	0476	2	F	Removal of restriction on RB removal and addition	15.4.0
	RP-82	RP-182649	0482	2	F	Correction to full configuration	15.4.0
	RP-82	RP-182661	0492	3	F	CR on MeasurementTimingConfiguration	15.4.0
	RP-82	RP-182654	0502	1	F	Bandwidth configuration for initial BWP	15.4.0

	RP-82	RP-182664	0503	4	F	CORESET#0 configuration when SIB1 is not broadcast	15.4.0
	RP-82	RP-182663	0506	1	F	Correction on the behaviors with cell reselection while T302 is running	15.4.0
	RP-82	RP-182661	0509	2	F	Correction on SDAP reconfiguration handling	15.4.0
	RP-82	RP-182663	0510	1	F	Clarification for the UE behaviour in camped normally and camped on any cell states	15.4.0
	RP-82	RP-182663	0514	2	F	Correction to description of parameter Ns nAndPagingFrameOffset	15.4.0
	RP-82	RP-182649	0515	-	F	Correction to description of parameter Ns	15.4.0
	RP-82	RP-182661	0516	1	F	CR on UE behaviour after SI Acquisition Failure	15.4.0
	RP-82	RP-182662	0518	1	F	CR on PUCCH-ConfigCommon	15.4.0
	RP-82	RP-182662	0520	1	F	Clarifications on receiving RRCReject without wait timer	15.4.0
	RP-82	RP-182665	0522	1	F	CR on powerControlOffset	15.4.0
	RP-82	RP-182664	0524	2	F	Correction to configuration of firstPDCCH-MonitoringOccasionOfPO	15.4.0
	RP-82	RP-182660	0539	1	F	R on PCCH-Config	15.4.0
	RP-82	RP-182649	0541	-	F	Clarification to no barring configuration for Implicit UAC	15.4.0
	RP-82	RP-182649	0542	-	F	Correction to Access Category and barring config determination for implicit access barring	15.4.0
	RP-82	RP-182664	0543	2	F	Per serving cell MIMO layer configuration	15.4.0
	RP-82	RP-182661	0545	1	F	Correction to reconfiguration with sync	15.4.0
	RP-82	RP-182659	0552	1	F	Correction for SSB power	15.4.0
	RP-82	RP-182659	0554	1	F	Corrections on SearchSpace configuration	15.4.0
	RP-82	RP-182665	0558	1	F	Correction for TCI state in ControlResourceSet	15.4.0
	RP-82	RP-182663	0560	1	F	CR for the optional configuration of subbandSize	15.4.0
	RP-82	RP-182650	0562	-	F	Correction on ShortMAC-I description in 38.331	15.4.0
	RP-82	RP-182661	0567	1	F	CR to the field descriptions of System Information	15.4.0
	RP-82	RP-182650	0569	-	F	Clarification on SRB3 release	15.4.0
	RP-82	RP-182650	0570	-	F	Avoiding security risk for RLC UM bearers during termination point change	15.4.0
	RP-82	RP-182660	0571	1	F	MO configuration with SSB SCS for a given SSB frequency	15.4.0
	RP-82	RP-182663	0572	1	F	Barring alleviation for emergency service	15.4.0
	RP-82	RP-182664	0575	1	F	Corrections for security configurations during setup of SRB1	15.4.0
	RP-82	RP-182660	0577	1	F	Clarification of UE behaviour when frequencyBandList is absent in SIB4	15.4.0
	RP-82	RP-182661	0578	2	F	Handling of missing fields in SIB1	15.4.0
	RP-82	RP-182659	0580	1	F	Correction to ControlResourceSetZero	15.4.0
	RP-82	RP-182667	0582	2	F	Full configuration for inter-RAT handover	15.4.0
	RP-82	RP-182664	0587	1	F	Corrections on number of RadioLinkMonitoringRS condifuration	15.4.0
	RP-82	RP-182659	0591	1	F	Clarification on phr-Type2OtherCell	15.4.0
	RP-82	RP-182667	0594	2	F	Addition of PCI in MeasTiming	15.4.0
	RP-82	RP-182667	0600	5	F	Clarifications to SIBs requiring request procedure	15.4.0
	RP-82	RP-182659	0601	1	F	Correction for support of initial downlink BWP	15.4.0
	RP-82	RP-182657	0602	1	F	Miscellaneous corrections related to idle mode SIBs	15.4.0
	RP-82	RP-182657	0603	1	F	Correction for missing fields in SIB2 and SIB4	15.4.0
	RP-82	RP-182657	0604	2	F	Correction to Q-QualMin value range	15.4.0
	RP-82	RP-182663	0616	1	F	Clarification of cell reselection during resume procedure	15.4.0
	RP-82	RP-182663	0617	1	F	Determination of Access Identities for RRC-triggered Access Attempts	15.4.0
	RP-82	RP-182663	0618	1	F	CR to 38.331 on stopping of timer T390 upon reception of RRCRelease	15.4.0
	RP-82	RP-182840	0620	3	F	CR on MN/SN coordination for report CGI procedure	15.4.0
	RP-82	RP-182666	0624	2	F	CR to 38.331 on aligning I-RNTI terminology in paging and SuspendConfig (Alt.2)	15.4.0
	RP-82	RP-182665	0627	2	F	CR to 38.331 on IRAT Cell reselection in RRC_INACTIVE	15.4.0
	RP-82	RP-182662	0638	1	F	CR for pendingRnaUpdate set	15.4.0
	RP-82	RP-182665	0640	2	F	Corrections on BWP ID	15.4.0
	RP-82	RP-182664	0643	1	F	Inter-frequency handover capability	15.4.0
	RP-82	RP-182659	0646	1	F	Search space configuration for DCI format 2_0 monitoring	15.4.0
	RP-82	RP-182739	0647	3	F	Correction on power headroom configuration exchange	15.4.0
	RP-82	RP-182665	0649	2	F	UE capability on PA architecture	15.4.0
	RP-82	RP-182662	0654	1	F	CR on pdsch-TimeDomainAllocationList and pussh-TimeDomainAllocationList	15.4.0
	RP-82	RP-182664	0655	1	F	Correction on the SSB based RACH configuration	15.4.0
	RP-82	RP-182659	0656	1	F	CR on starting bit of Format 2-3	15.4.0
	RP-82	RP-182663	0660	1	C	CR on wait timer in RRC release	15.4.0
	RP-82	RP-182662	0664	1	F	SCell release at RRC Reestablishment	15.4.0
	RP-82	RP-182663	0665	1	F	Clean up of SRB1 terminology	15.4.0
	RP-82	RP-182662	0670	1	F	Correction on the size of PUCCH resource ID	15.4.0
	RP-82	RP-182667	0673	3	F	CR to 38.331 on Integrity Check failure at RRC Reestablishment	15.4.0
	RP-82	RP-182661	0680	1	F	Correction on SI message acquisition timing	15.4.0
	RP-82	RP-182653	0682	-	F	Add t-ReselectionNR-SF in SIB2	15.4.0
	RP-82	RP-182654	0683	-	F	freqBandIndicatorNR correction in MultiFrequencyBandListNR-SIB	15.4.0
	RP-82	RP-182658	0684	2	F	Corrections to CellSelectionInfo in SIB1 and SIB4	15.4.0
	RP-82	RP-182654	0686	-	F	Correction on the field description of DRX timers	15.4.0
	RP-82	RP-182661	0687	1	F	Correction on DC subcarrier usage in SetupComplete message	15.4.0
	RP-82	RP-182665	0688	3	F	Various carrier frequency definiton corrections	15.4.0
	RP-82	RP-182661	0689	1	F	CR on signaling contiguous and non-contiguous EN-DC capability	15.4.0
	RP-82	RP-182654	0692	-	F	Update of the usage of QCL type-C	15.4.0

	RP-82	RP-182659	0694	1	F	Cleanup of references to L1 specifications	15.4.0
	RP-82	RP-182660	0695	1	F	Correction of MeasResultEUTRA	15.4.0
	RP-82	RP-182660	0696	1	F	Missing need code for refFreqCSI-RS	15.4.0
	RP-82	RP-182661	0697	2	F	Missing procedure text in RRC Reconfiguration	15.4.0
	RP-82	RP-182781	0700	3	F	Correction to UE capability procedures in 38.331	15.4.0
	RP-82	RP-182667	0701	1	F	Correction to aperiodicTriggeringOffset	15.4.0
	RP-82	RP-182664	0709	1	F	CR to 38.331 on including serving cell measurements	15.4.0
	RP-82	RP-182660	0711	1	F	CR to 38.331 on associatedSSB	15.4.0
	RP-82	RP-182662	0714	1	F	CR on 38.331 for RRCResumeRequest and RRCResumeRequest1 and protection of RRCResumeRequest1	15.4.0
	RP-82	RP-182667	0715	2	F	Correction for reporting of NR serving cell measurements when rsType is missing	15.4.0
	RP-82	RP-182656	0719	1	F	Clarification of the values for RangeToBestCell	15.4.0
	RP-82	RP-182668	0721	2	F	CR on handling of timer T380	15.4.0
	RP-82	RP-182662	0723	2	F	CR on supporting signalling only connection	15.4.0
	RP-82	RP-182838	0725	3	F	Signalling introduction of SRS switching capability	15.4.0
	RP-82	RP-182667	0729	3	B	CR on signalling introduction of UE overheating support in NR SA scenario	15.4.0
	RP-82	RP-182856	0730	4	F	CR on SRS antenna switching	15.4.0
	RP-82	RP-182660	0731	1	F	Correction to offsetToPointA	15.4.0
	RP-82	RP-182655	0732	-	F	Correction to cell selection parameters	15.4.0
	RP-82	RP-182665	0746	2	F	CR to 38.331 on stopping T302 and UE related actions	15.4.0
	RP-82	RP-182666	0750	2	F	Correction on indication for user plane resource release	15.4.0
	RP-82	RP-182662	0767	1	F	Correction on the terminology scg-ChangeFailure	15.4.0
	RP-82	RP-182661	0768	1	F	Correction on default configuration	15.4.0
	RP-82	RP-182660	0772	1	F	Clarification of measurement object for beam reporting for NR cells	15.4.0
	RP-82	RP-182667	0773	3	F	CR to 38.331 on UE AS Context definition – Include suspendConfig	15.4.0
	RP-82	RP-182661	0778	1	F	CR to 38.331 on HO support in Setup Procedure	15.4.0
	RP-82	RP-182656	0781	-	F	CR on description of k0	15.4.0
	RP-82	RP-182666	0783	2	F	CR to 38.331 on removing FFS of locationInfo	15.4.0
	RP-82	RP-182661	0787	-	F	Clarification on MIB Acquisition	15.4.0
	RP-82	RP-182662	0788	-	F	CR to 38331 on release after completion of inter-RAT HO	15.4.0
	RP-82	RP-182662	0789	-	F	CR to 38.331 on rbg-Size in PDSCH-Config, PUSCH-Config and ConfiguredGrantConfig	15.4.0
	RP-82	RP-182657	0790	-	F	Advanced processing time configuration for PDSCH and PUSCH	15.4.0
	RP-82	RP-182896	0791	2	F	UE specific channel bandwidth signaling	15.4.0

03/2019	RP-83	RP-190541	0416	4	F	Clarification on hopping parameters for PUSCH	15.5.0
	RP-83	RP-190541	0593	2	F	Removal of creation of MCG MAC entity	15.5.0
	RP-83	RP-190633	0792	1	F	Capability for aperiodic CSI-RS triggering with different numerology between PDCCH and CSI-RS	15.5.0
	RP-83	RP-190541	0796	2	F	Correction on Mapping between SSBs and PDCCH Monitoring Occasions in SI Window	15.5.0
	RP-83	RP-190541	0797	2	F	Correction to SI Reqeust Procedure	15.5.0
	RP-83	RP-190546	0798	2	F	CR to 38.331 on clarification of reportCGI	15.5.0
	RP-83	RP-190545	0799	2	F	Describing mandatory/optional information in inter-node RRC messages	15.5.0
	RP-83	RP-190541	0800	1	F	Search space configuration for cross carrier scheduling	15.5.0
	RP-83	RP-190542	0803	1	F	Clarification on FeatureSetCombinationId zero value	15.5.0
	RP-83	RP-190546	0805	2	F	Clarification on UE Capability Request Filtering	15.5.0
	RP-83	RP-190545	0807	3	F	Miscellaneous non-controversial corrections	15.5.0
	RP-83	RP-190541	0808	2	F	CR to 38.331 on MAC configuration	15.5.0
	RP-83	RP-190543	0810	2	F	Correction to SCG failiure	15.5.0
	RP-83	RP-190540	0811	1	F	Clarifying handling of parent and child IE need nodes	15.5.0
	RP-83	RP-190544	0812	2	F	Clarification to channel bandwidth signalling	15.5.0
	RP-83	RP-190541	0813	1	F	Clarifications to BWP configuration options	15.5.0
	RP-83	RP-190543	0822	2	F	Correction to EUTRA-MBSFN-SubframeConfig	15.5.0
	RP-83	RP-190545	0823	2	F	Clarification on dedicated serving cell configuration in Re-establishment	15.5.0
	RP-83	RP-190541	0828	2	F	Clarification on the BWP id configuration	15.5.0
	RP-83	RP-190541	0836	1	F	Upon entering a new PLMN which is in the list of EPLMNs in RRC INACTIVE state	15.5.0
	RP-83	RP-190546	0843	1	F	EUTRA UE capability filtering in NR UE capability enquiry	15.5.0
	RP-83	RP-190543	0847	2	F	Correction to SIB1 transmission during handover	15.5.0
	RP-83	RP-190545	0850	2	F	Clarification to monitoring occasion of PWS notification	15.5.0
	RP-83	RP-190541	0853	1	F	HandoverPreparationInformation for CU/DU	15.5.0
	RP-83	RP-190542	0855	1	F	CR to introduce simultaneousRxDataSSB-DiffNumerology for NR SA	15.5.0
	RP-83	RP-190550	0858	-	F	Condition on integrity protection for DRB	15.5.0
	RP-83	RP-190544	0860	2	F	Handling on UE Inactive AS context upon resume	15.5.0
	RP-83	RP-190542	0861	1	F	Miscellaneous Corrections for INACTIVE	15.5.0
	RP-83	RP-190542	0864	1	F	Correction on RRC processing delay	15.5.0
	RP-83	RP-190540	0865	-	F	Dummify the ue-BeamLockFunction IE	15.5.0
	RP-83	RP-190545	0866	2	F	Further update of Need codes	15.5.0
	RP-83	RP-190541	0867	1	F	Corrections to reestablishment procedure	15.5.0
	RP-83	RP-190545	0868	2	F	CR on use of positioning measurement gaps for subframe and slot timing detection towards E-UTRA	15.5.0
	RP-83	RP-190542	0876	2	F	Barring alleviation when T302 or T390 is stopped	15.5.0
	RP-83	RP-190544	0877	2	F	Correction on smtc configuration in NR SCell addition procedure	15.5.0
	RP-83	RP-190543	0884	2	F	Correction on the configuration for transform preceding of PUSCH	15.5.0
	RP-83	RP-190543	0896	2	F	Correction to Need Codes in system information	15.5.0
	RP-83	RP-190541	0897	1	F	Corrections on drb-ContinueROHC	15.5.0
	RP-83	RP-190541	0898	1	F	Correction on outOfOrderDelivery	15.5.0
	RP-83	RP-190542	0902	1	F	Corrections on radio link failure related actions	15.5.0
	RP-83	RP-190541	0904	1	F	Clarification for SIB validity	15.5.0
	RP-83	RP-190540	0905	-	F	Corrections to MFBI	15.5.0
	RP-83	RP-190542	0912	1	F	CR on clarification on the description of NIA0	15.5.0
	RP-83	RP-190542	0913	1	F	CR on the number of bits of downlink NAS COUNT value	15.5.0
	RP-83	RP-190541	0920	1	F	CR to 38.331 for not supporting different quantities for thresholds in Event A5 and B2	15.5.0
	RP-83	RP-190544	0922	2	F	CR on SSB type indication	15.5.0
	RP-83	RP-190545	0923	2	F	Correction for measurements of serving cells without SSB or without CSI-RS	15.5.0
	RP-83	RP-190540	0930	-	F	CR on introduction of UE assistance information in inter-node message	15.5.0
	RP-83	RP-190540	0931	-	F	CR on description of SRS carrier switching	15.5.0
	RP-83	RP-190542	0932	1	F	Clarification on the relation between CA configuration and supported featureset combination Option1	15.5.0
	RP-83	RP-190545	0935	2	F	Unification of EN-DC terminology	15.5.0
	RP-83	RP-190550	0938	-	F	PDCCP re-establishment during SRB modification for EUTRA/5GC	15.5.0
	RP-83	RP-190541	0939	1	F	The support of drb-ContinueROHC	15.5.0
	RP-83	RP-190541	0948	1	F	Correction on PTRS port index	15.5.0
	RP-83	RP-190541	0956	1	F	CR on the supplementaryUplink and uplinkConfig	15.5.0
	RP-83	RP-190545	0963	2	F	Correction on MIB acquisition upon Reconfiguration with Sync	15.5.0
	RP-83	RP-190543	0967	2	F	Qoffset for inter-RAT cell reselection	15.5.0
	RP-83	RP-190541	0975	1	F	Correction on SI scheduling	15.5.0
	RP-83	RP-190543	0976	2	F	Correction of uac-AccessCategory1-SelectionAssistanceInfo field description	15.5.0
	RP-83	RP-190546	0978	3	F	Correction on going to RRC_IDLE upon inter-RAT cell reselection in RRC_INACTIVE	15.5.0
	RP-83	RP-190543	0981	2	F	Clarification on nrofSS-BlocksToAverage and absThreshSS-BlocksConsolidation	15.5.0
	RP-83	RP-190543	0984	3	F	Correction on compilation of featureSets for NR container	15.5.0
	RP-83	RP-190540	0985	-	F	Enable and disable of security at DRB setup	15.5.0

	RP-83	RP-190545	0986	2	F	Clarification on TCI state ID	15.5.0
	RP-83	RP-190544	0987	-	F	Clarification for random access on SUL	15.5.0
	RP-83	RP-190545	0988	1	F	Correction on supportedBandwidthCombinationSetEUTRA-v1530 usage	15.5.0
	RP-83	RP-190544	0989	-	F	CR on Processing delay requirements for RRC Resume procedures in TS 38.331	15.5.0
04/2019	RP-83					MCC: Formatting error correction (missing carriage return) in the end of clause 5.3.5.11.	15.5.1
06/2019	RP-84	RP-191379	0906	5	F	Reconfig with sync terminology	15.6.0
	RP-84	RP-191378	0916	5	B	Introduction of late drop NGEN-DC, NE-DC and NR-DC	15.6.0
	RP-84	RP-191374	0996	2	F	Correction to the need code of some fields in SIB2	15.6.0
	RP-84	RP-191377	1003	3	F	Clarification for handling of suspendConfig	15.6.0
	RP-84	RP-191377	1005	3	F	Reporting of serving cell and best neighbour cell and sorting of beam	15.6.0
	RP-84	RP-191377	1011	1	F	On T321 timer related informative text correction	15.6.0
	RP-84	RP-191377	1013	1	C	CR to direct current report for UL and SUL	15.6.0
	RP-84	RP-191380	1014	1	F	Correction on storing UE AS Inactive Context	15.6.0
	RP-84	RP-191373	1015	-	F	Correction on ReconfigurationWithSync	15.6.0
	RP-84	RP-191380	1016	2	F	Correction on Handover from NR to EUTRAN	15.6.0
	RP-84	RP-191373	1018	-	F	Introduction of additional UE capability on HARQ-ACK multiplexing on PUSCH	15.6.0
	RP-84	RP-191378	1019	1	F	Correction on bar indication of emergency service (access category 2)	15.6.0
	RP-84	RP-191373	1020	-	F	Correction on UE configuration for RRC Resume procedure	15.6.0
	RP-84	RP-191373	1021	-	F	RRC release with suspend configuration and inter-RAT redirection	15.6.0
	RP-84	RP-191373	1022	-	F	RRC Reconfiguration via SRB3 in EN-DC	15.6.0
	RP-84	RP-191373	1023	-	F	Corrections on RLC bearer setup	15.6.0
	RP-84	RP-191373	1024	-	F	Clarification to Permitted MaxCID for ROHC and Uplink-Only ROHC	15.6.0
	RP-84	RP-191373	1025	-	F	Coordination of ROHC capability for MR-DC	15.6.0
	RP-84	RP-191373	1026	-	F	Correction on the rlmInSyncOutOfSyncThreshold	15.6.0
	RP-84	RP-191373	1027	-	F	Correction on description of tci-PresentInDCI	15.6.0
	RP-84	RP-191374	1031	-	F	RRC processing delay for UE capability transfer	15.6.0
	RP-84	RP-191377	1032	1	F	Handling of SMTTC configuration	15.6.0
	RP-84	RP-191378	1033	1	F	Clarification on filters used to generate FeatureSets (38.331)	15.6.0
	RP-84	RP-191374	1034	-	F	Correction of behavior for eutra-nr-only	15.6.0
	RP-84	RP-191377	1038	1	F	Clarification on CSI-RS resource configuration in MO	15.6.0
	RP-84	RP-191378	1039	2	F	Update on usage of Need codes	15.6.0
	RP-84	RP-191377	1040	1	F	Ignore additional fields in RRC Release message before security activation	15.6.0
	RP-84	RP-191374	1041	-	F	Correction on use of Null algorithm for DRBs during emergency calls in LSM	15.6.0
	RP-84	RP-191380	1042	2	F	NR changes for FullConfig for Inter-RAT intra-system HO	15.6.0
	RP-84	RP-191376	1043	2	F	Monitoring of short messages with multi-beams	15.6.0
	RP-84	RP-191377	1045	1	F	Clarification of commonControlResourceSet frequency reference point	15.6.0
	RP-84	RP-191379	1046	2	F	CR on capability of maxUplinkDutyCycle for FR2	15.6.0
	RP-84	RP-191374	1049	-	F	CR to subcarrierSpacing in RateMatchPattern and SCS-SpecificCarrier	15.6.0
	RP-84	RP-191377	1053	1	F	CR on transferring common configuration during handover and SN change	15.6.0
	RP-84	RP-191381	1054	2	F	Correction to barring alleviation	15.6.0
	RP-84	RP-191381	1055	3	F	UE behaviour on the cell without TAC	15.6.0
	RP-84	RP-191379	1058	2	F	Correction to RRC resume	15.6.0
	RP-84	RP-191376	1061	1	F	Corrections to inter-node messages	15.6.0
	RP-84	RP-191378	1063	1	F	Clarification on mandatory information in inter node RRC messages	15.6.0
	RP-84	RP-191374	1066	-	F	Correction to PWS reception	15.6.0
	RP-84	RP-191377	1068	1	F	Serving cell measurement handling with different rsType configuration scenarios	15.6.0
	RP-84	RP-191374	1069	-	F	On CGI reporting contents	15.6.0
	RP-84	RP-191374	1071	-	F	CR for 38.331 on security related corrections to UE and Network initiated RRC procedures to increase user's security and privacy	15.6.0
	RP-84	RP-191379	1072	3	F	Correction on the issue with NCP and ECP for RateMatchPattern	15.6.0
	RP-84	RP-191377	1075	1	F	Security protection of RRC messages	15.6.0
	RP-84	RP-191381	1076	1	F	Introduction of a new NR band for LTE/NR spectrum sharing in Band 41/n41	15.6.0
	RP-84	RP-191375	1077	-	F	Stop of T302 and T390 at reception of RRCRelease with waitTime	15.6.0
	RP-84	RP-191375	1078	-	F	Restriction of piggybacking of NAS PDUs	15.6.0
	RP-84	RP-191379	1079	3	F	Correction on intra-band fallback behavior with FeatureSetsPerCC	15.6.0
	RP-84	RP-191375	1081	-	F	Removal of spurious requirement on consistency of feature set combination IDs	15.6.0
	RP-84	RP-191381	1082	3	F	Miscellaneous non-controversial corrections Set II	15.6.0
	RP-84	RP-191377	1083	1	F	Correction to configuration of security in RadioBearerConfig	15.6.0
	RP-84	RP-191379	1086	2	F	CR to 38.331 on MeasurementTimingConfiguration	15.6.0
	RP-84	RP-191375	1088	-	F	Correction to the description of subcarrierspacing usage in ServingCellConfigCommon	15.6.0
	RP-84	RP-191375	1089	-	F	38.331 Clarification on multiple TA capabilities	15.6.0
	RP-84	RP-191375	1091	-	F	Set beamCorrespondenceCA dummy	15.6.0
	RP-84	RP-191377	1092	1	F	Correction on Measurement Report Triggering for Periodical Report	15.6.0
	RP-84	RP-191375	1094	-	F	Correction on PDCP duplication configuration	15.6.0
	RP-84	RP-191375	1095	-	F	Correction on BWP configuration	15.6.0
	RP-84	RP-191377	1097	1	F	Correction on configuration of pucch-ResourceCommon	15.6.0

	RP-84	RP-191376	1098	1	F	Clarification of PUCCH reconfiguration on NR UL and SUL	15.6.0
	RP-84	RP-191375	1100	1	F	Correction on initial BWP configuration in DownlinkConfigCommon and UplinkConfigCommon	15.6.0
	RP-84	RP-191377	1101	1	F	Correction on PUCCH cell	15.6.0
	RP-84	RP-191377	1103	1	F	Correction on the pdcp-Config	15.6.0
	RP-84	RP-191379	1104	2	F	Correction on pathlossReferenceLinking	15.6.0
	RP-84	RP-191381	1106	2	F	Clarification of dedicated priority handling from RRC_INACTIVE to RRC_IDLE	15.6.0
	RP-84	RP-191375	1110	-	F	Clarification on sending condition for mcg-RB-Config	15.6.0
	RP-84	RP-191375	1111	-	F	Clarification of timing reference for CSI-RS resources	15.6.0
	RP-84	RP-191376	1113	-	F	Setting of resumeCause for NAS triggered event	15.6.0
	RP-84	RP-191376	1114	-	F	UE capability signalling for FD-MIMO processing capabilities for EN-DC	15.6.0
	RP-84	RP-191376	1115	-	F	Modified UE capability on different numerologies within the same PUCCH group	15.6.0
	RP-84	RP-191478	1116	2	F	Clarification to commonSearchSpaceList in PDCCH-ConfigCommon	15.6.0
	RP-84	RP-191589	1117	1	F	Removal of "Capability for aperiodic CSI-RS triggering with different numerology between PDCCH and CSI-RS"	15.6.0
09/2019	RP-85	RP-192196	1120	1	C	Additional capability signalling for 1024QAM support	15.7.0
	RP-85	RP-192191	1121	1	F	Correction on TDD-UL-DL-Config	15.7.0
	RP-85	RP-192191	1122	1	F	Correction of the secondHopPRB Parameter	15.7.0
	RP-85	RP-192190	1123	-	F	RSRP reporting of SFTD measurement in NR-DC	15.7.0
	RP-85	RP-192191	1124	1	F	Small Corrections for System Information	15.7.0
	RP-85	RP-192194	1125	-	F	Corrections for Inter-node Messages	15.7.0
	RP-85	RP-192191	1126	1	F	Clarification of Layer 3 Filtering for E-UTRA	15.7.0
	RP-85	RP-192190	1127	-	F	Clarification on FailureInformation report for NE-DC	15.7.0
	RP-85	RP-192191	1136	1	F	Clarification to fullConfig in NR	15.7.0
	RP-85	RP-192190	1137	-	F	Updates for positioning measurement gaps for subframe and slot timing detection towards E-UTRA	15.7.0
	RP-85	RP-192191	1138	1	F	Clarification for enabling of configured PUSCH frequency hopping	15.7.0
	RP-85	RP-192191	1139	1	B	Introduction of SFTD measurement to neighbour cells for NR SA	15.7.0
	RP-85	RP-192192	1144	1	F	Corrections to 38.331 on SI-schedulingInfo	15.7.0
	RP-85	RP-192193	1148	2	F	Clarification on SRB2 and DRB configuration	15.7.0
	RP-85	RP-192191	1151	2	F	PDU session release indication to upper layers during Full Configuration	15.7.0
	RP-85	RP-192191	1160	1	F	Clarification on max payload of PUCCH-ResourceSet	15.7.0
	RP-85	RP-192191	1161	1	F	Clarification on PUSCH configuration	15.7.0
	RP-85	RP-192192	1167	1	F	Correction of condition HO-toNR and HO-Conn	15.7.0
	RP-85	RP-192192	1172	1	F	Clarifying UE capability freqHoppingPUCCH-F0-2 and freqHoppingPUCCH-F1-3-4	15.7.0
	RP-85	RP-192190	1173	1	F	Clarification on selectedBandCombination	15.7.0
	RP-85	RP-192193	1174	2	F	Clarifying handling of information elements on the F1 interface	15.7.0
	RP-85	RP-192192	1178	1	F	Correction of field descriptions in UE-CapabilityRequestFilterCommon (38.331)	15.7.0
	RP-85	RP-192190	1179	-	F	Clarification of ca-ParametersNR-forDC (38.331)	15.7.0
	RP-85	RP-192193	1183	2	F	Correction on reestablishRLC	15.7.0
	RP-85	RP-192191	1185	1	F	Correction on SFTD measurement configuration	15.7.0
	RP-85	RP-192193	1191	2	F	Handling of embedded RRC message in RRCReconfiguration procedure	15.7.0
	RP-85	RP-192192	1201	2	F	Clarification on definition of PUSCH-Less SCell	15.7.0
	RP-85	RP-192190	1204	-	F	Correction on non-critical extension for NRDC-Parameters	15.7.0
	RP-85	RP-192191	1208	1	F	Correction on UE actions upon going to RRC_IDLE	15.7.0
	RP-85	RP-192192	1211	1	F	Correction on the acquisition of MIB and SIB1 for re-establishment	15.7.0
	RP-85	RP-192192	1212	1	F	Correction on band selection in SIB1	15.7.0
	RP-85	RP-192193	1213	2	F	Correction on the actions upon reception of SIB2 and SIB4	15.7.0
	RP-85	RP-192193	1219	3	F	Miscellaneous non-controversial corrections Set III	15.7.0
	RP-85	RP-192194	1220	3	F	Channel Bandwidth validation upon SIB1 acquisition	15.7.0
	RP-85	RP-192193	1224	1	F	Correction of presence conditions for common PSCell parameters	15.7.0
	RP-85	RP-192190	1226	-	F	Release of unnecessary power restrictions upon RRC connection re-establishment in NE-DC and NR-DC	15.7.0
	RP-85	RP-192193	1232	2	F	Correction of field inclusion for inter-node message	15.7.0
	RP-85	RP-192192	1234	1	F	SFTD measurement information in CG-ConfigInfo	15.7.0
	RP-85	RP-192192	1235	1	F	Correction for UE context retrieval	15.7.0
	RP-85	RP-192190	1236	-	F	Correction on CGI measurements	15.7.0
	RP-85	RP-192191	1237	1	F	Corrections to SIB8 for CMAS geo-fencing	15.7.0
	RP-85	RP-192194	1242	3	F	Corrections on the condition of RBTermChange	15.7.0
	RP-85	RP-192192	1243	1	F	CR on clarification of aggregated bandwidth for overheating	15.7.0
	RP-85	RP-192190	1244	-	F	Clarification on the selectedBandEntriesMN - Understanding 1	15.7.0
	RP-85	RP-192194	1253	1	F	Correction on RRC connection release indication after handover	15.7.0
	RP-85	RP-192193	1254	2	F	Corrections on SIB1 configuration	15.7.0
	RP-85	RP-192191	1256	1	F	Correction on inter-RAT cell re-selection when UE is in RRC_IDLE	15.7.0
	RP-85	RP-192193	1257	2	F	maxMIMO-Layers for the normal uplink and the supplementary uplink_Option 1	15.7.0
	RP-85	RP-192193	1261	1	F	Correction on overheating indication	15.7.0
	RP-85	RP-192192	1262	-	F	Handling lists other than AddMod	15.7.0
	RP-85	RP-192193	1263	1	F	Releasing source cell ConfigCommon fields not present in target cell	15.7.0

	RP-85	RP-192347	1265	-	C	Introduction of UE capability for NR-DC with SFN synchronization between PCell and PSCell	15.7.0
12/2019	RP-86	RP-192934	1147	2	C	Security requirement for UE capability enquiry for NR	15.8.0
	RP-86	RP-192934	1267	1	F	Corrections on CG-Config	15.8.0
	RP-86	RP-192934	1273	1	F	CR to introduce timer for DRX based SFTD measurement	15.8.0
	RP-86	RP-192934	1274	1	F	Correction on absence of gapPurpose	15.8.0
	RP-86	RP-192934	1278	1	F	Correction on field description of cellReselectionInfoCommon	15.8.0
	RP-86	RP-192935	1283	2	F	Clarifying the alignment of capability filtering across LTE and NR in MR-DC	15.8.0
	RP-86	RP-192934	1292	1	F	Correction for P-Max in FR2	15.8.0
	RP-86	RP-192934	1296	2	F	Correction on frequency indication in SIB1 and SIB2	15.8.0
	RP-86	RP-192937	1300	2	F	Handling of AS-Config in HandoverPreparationInformation	15.8.0
	RP-86	RP-192936	1301	2	F	Corrections on scg-RB-Config in CG-Config	15.8.0
	RP-86	RP-192937	1305	2	F	Correction on MCG measurements in SCGFailureInformation	15.8.0
	RP-86	RP-192937	1308	3	F	Correction of SRB3 handling at full configuration (Alt2)	15.8.0
	RP-86	RP-192936	1309	2	F	Correction to integrity protection in DRB addition and modification	15.8.0
	RP-86	RP-192938	1323	3	F	Miscellaneous non-controversial corrections Set IV	15.8.0
	RP-86	RP-192935	1325	2	F	Presence and absence of TAC in NR cell	15.8.0
	RP-86	RP-192935	1332	4	F	Security Algorithms for Radio Bearers	15.8.0
	RP-86	RP-192934	1333	1	F	Correction on the Msg3 based on demand system information	15.8.0
	RP-86	RP-192935	1335	2	F	Clarification for aggregated bandwidth for overheating	15.8.0
	RP-86	RP-192935	1337	1	F	Clarification on the feature set report in EUTRAN	15.8.0
	RP-86	RP-192934	1341	1	F	CR to 38.331 on CGI information	15.8.0
	RP-86	RP-192936	1357	1	F	Restoring SDAP and RoHC contexts during Resumption	15.8.0
	RP-86	RP-192934	1358	-	F	Conditional presence on ue-CapabilityInfo and servCellIndexRangeSCG for inter-MN handover without SN change	15.8.0
	RP-86	RP-192934	1362	-	F	Configuration limitation for RRCRelease message in R15	15.8.0
	RP-86	RP-192937	1368	1	F	Correction to AS security key update	15.8.0
	RP-86	RP-192936	1369	1	F	Correction on the condition of RBTermChange	15.8.0
	RP-86	RP-192936	1375	1	F	Correction on the configuration of split SRB	15.8.0
	RP-86	RP-192934	1378	-	F	Correction on camping conditions	15.8.0
	RP-86	RP-192937	1379	1	F	Correction on CORESET location	15.8.0
	RP-86	RP-192938	1381	2	F	Correction to key derivation for the UE configured with sk-counter	15.8.0
	RP-86	RP-192936	1383	1	F	Correction on the pre-condition for reconfiguration with sync of SCG	15.8.0
	RP-86	RP-192935	1385	-	F	Correction on AS-Config	15.8.0
	RP-86	RP-192935	1387	-	F	Correction on measurement reporting in NR-DC	15.8.0
	RP-86	RP-192936	1389	1	F	Correction on SIB1 description	15.8.0
	RP-86	RP-192937	1402	1	F	Correction to Feature Set Combination and Band combination list for NR-DC (38.331)	15.8.0
	RP-86	RP-192937	1403	2	F	Security requirements for split PDU session (38.331)	15.8.0
	RP-86	RP-192938	1405	2	F	Correction of UE assistance information	15.8.0
	RP-86	RP-192936	1406	1	F	Clarification regarding inter-node transfer of UE capability containers	15.8.0
	RP-86	RP-192749	1421	1	F	NE-DC dynamic power sharing capability	15.8.0
03/2020	RP-87	RP-200335	1272	3	F	Corrections on maxMeasIdentitiesSCG-NR in MR-DC	15.9.0
	RP-87	RP-200334	1409	2	F	CR on BWCS for inter-ENDC BC with intra-ENDC BC (38.331)	15.9.0
	RP-87	RP-200334	1410	4	F	CR to 38.331 on support of 70MHz channel bandwidth	15.9.0
	RP-87	RP-200335	1440	2	F	Clarification on the PLMN-IdentityInfoList	15.9.0
	RP-87	RP-200334	1444	1	F	Correction on removal of NR-DC and NE-DC band combinations when capabilityRequestFilterCommon is absent	15.9.0
	RP-87	RP-200334	1450	1	F	Correction on reporting of uplink TX direct current	15.9.0
	RP-87	RP-200334	1454	1	F	Corrections to the Location measurement indication procedure	15.9.0
	RP-87	RP-200334	1455	-	F	Introduction of provisions for late non-critical extensions	15.9.0
	RP-87	RP-200334	1460	1	F	Correction on p-maxNR-FR1 for NE-DC	15.9.0
	RP-87	RP-200334	1461	-	F	Correction on SFTD frequency list in INM	15.9.0
	RP-87	RP-200335	1472	2	F	Miscellaneous non-controversial corrections Set V	15.9.0
	RP-87	RP-200335	1475	1	F	Capability coordination for NE-DC	15.9.0
	RP-87	RP-200335	1483	2	F	CR on fallback BC reporting	15.9.0
	RP-87	RP-200334	1484	1	F	CR on overheating assistance reporting in handover case	15.9.0
	RP-87	RP-200334	1496	1	F	Correction on NZP-CSI-RS-ResourceSet	15.9.0
	RP-87	RP-200335	1501	1	F	UE capability of intra-band requirements for inter-band EN-DC/NE-DC	15.9.0
03/2020	RP-87	RP-200335	1141	2	F	Correction on usage of access category 2 for UAC for RNA update	16.0.0
	RP-87	RP-200358	1149	2	F	NAS handling error of nas-Container for security key derivation	16.0.0
	RP-87	RP-200356	1152	3	F	CR on capability of maxUplinkDutyCycle for inter-band EN-DC PC2 UE	16.0.0
	RP-87	RP-200357	1168	3	F	Support of releasing UL configuration	16.0.0
	RP-87	RP-200357	1218	3	B	Introduction of a second SMTC per frequency carrier in idle/inactive	16.0.0
	RP-87	RP-200358	1312	3	C	Introduction of voice fallback indication	16.0.0
	RP-87	RP-200358	1354	2	C	CR to 38.331 on CSI-RS inter-node message	16.0.0
	RP-87	RP-200335	1361	1	B	PRACH prioritization parameters for MPS and MCS	16.0.0
	RP-87	RP-200358	1433	2	B	Introduction of downgraded configuration for SRS antenna switching	16.0.0
	RP-87	RP-200355	1434	2	B	Introducing autonomous gap in CGI reporting	16.0.0
	RP-87	RP-200351	1441	1	B	Introduction of UECapabilityInformation segmentation in TS38.331	16.0.0
	RP-87	RP-200358	1443	1	B	Introduction of NR IDC solution	16.0.0

	RP-87	RP-200350	1446	1	B	Introduction of SRVCC from 5G to 3G	16.0.0
	RP-87	RP-200341	1462	2	B	Introduction of on-demand SI procedure in RRC_CONNECTED	16.0.0
	RP-87	RP-200358	1465	1	B	Introduction of DL RRC segmentation	16.0.0
	RP-87	RP-200353	1468	1	B	Introducing the support of Non-Public Networks	16.0.0
	RP-87	RP-200344	1469	3	B	CR for 38.331 for Power Savings	16.0.0
	RP-87	RP-200349	1471	4	B	38.331 CR on Integrated Access and Backhaul for NR	16.0.0
	RP-87	RP-200348	1476	3	B	CR for 38.331 for CA&DC enh	16.0.0
	RP-87	RP-200341	1477	2	B	Introduction of NR operation with Shared Spectrum Access in RRC	16.0.0
	RP-87	RP-200347	1478	2	B	Introduction of NR mobility enhancement	16.0.0
	RP-87	RP-200335	1486	-	B	Introduction of additional RACH configurations for TDD FR1	16.0.0
	RP-87	RP-200343	1487	1	B	Introduction of NR eURLLC	16.0.0
	RP-87	RP-200354	1488	2	B	CR for introducing MDT and SON	16.0.0
	RP-87	RP-200357	1489	-	C	CR to 38.331 on DRX coordination	16.0.0
	RP-87	RP-200346	1493	1	B	Introduction of 5G V2X with NR sidelink	16.0.0
	RP-87	RP-200340	1494	2	B	Introduction of CLI handling and RIM in TS38.331	16.0.0
	RP-87	RP-200352	1498	1	B	Introduction of NR IIoT	16.0.0
	RP-87	RP-200342	1499	1	B	Introduction of 2-step RA	16.0.0
	RP-87	RP-200339	1500	2	B	Introduction of MIMO enhancements	16.0.0
	RP-87	RP-200359	1502	-	B	Recommended Bit Rate/Query for FLUS and MTSI	16.0.0
	RP-87	RP-200345	1504	2	B	Introduction of NR positioning	16.0.0
	RP-87	RP-200358	1505	-	B	Support of inter-RAT handover from NR to EN-DC in TS 38.331	16.0.0
07/2020	RP-88	RP-201191	1290	4	C	Missing reportAddNeighMeas in periodic measurement reporting	16.1.0
	RP-88	RP-201166	1453	6	B	Introduction of NeedForGap capability for NR measurement	16.1.0
	RP-88	RP-201185	1464	5	B	Introduction of signalling for high-speed train scenarios	16.1.0
	RP-88	RP-201191	1506	2	F	Corrections to PRACH prioritization procedure for MPS and MCS	16.1.0
	RP-88	RP-201182	1513	2	F	Finalization of the support of Non-Public Networks	16.1.0
	RP-88	RP-201172	1528	4	F	Miscellaneous corrections for NR-U	16.1.0
	RP-88	RP-201174	1540	2	C	CR for 38.331 for Power Savings	16.1.0
	RP-88	RP-201180	1553	3	F	Correction to transfer of UE capabilities at HO for RACS and minor ASN.1 correction (38.331)	16.1.0
	RP-88	RP-201161	1556	2	A	Clarification on avoiding keystream repeat due to COUNT reuse	16.1.0
	RP-88	RP-201178	1557	2	F	CR for 38.331 on CA/DC Enhancements	16.1.0
	RP-88	RP-201160	1560	2	A	SRS Capability report for SRS only Scell	16.1.0
	RP-88	RP-201160	1562	1	A	Correction to RequestedCapabilityCommon	16.1.0
	RP-88	RP-201187	1563	2	A	CR on introduction of BCS to asymmetric channel bandwidths (38.331)	16.1.0
	RP-88	RP-201159	1568	2	A	Correction on PUCCH configuration	16.1.0
	RP-88	RP-201176	1569	3	F	Miscellaneous corrections to 38.331 for V2X	16.1.0
	RP-88	RP-201160	1572	2	A	Correction on the need for reconfiguration with sync in (NG)EN-DC, NR-DC and NE-DC	16.1.0
	RP-88	RP-201160	1579	1	A	38331 CR(R16) on inter-RAT SFTD measurements	16.1.0
	RP-88	RP-201160	1587	1	A	Clarification on pdcp-Duplication at RRC Reconfiguration	16.1.0
	RP-88	RP-201188	1588	3	F	Correction to RRC spec for eURLLC	16.1.0
	RP-88	RP-201179	1590	4	B	Corrections to 38.331 for supporting IAB in NPN	16.1.0
	RP-88	RP-201177	1591	2	F	Corrections on NR mobility enhancements	16.1.0
	RP-88	RP-201175	1592	2	B	Introduction of RRC Positioning	16.1.0
	RP-88	RP-201166	1596	1	F	Band combination list for NE-DC (Cat-F)	16.1.0
	RP-88	RP-201159	1599	-	A	Avoiding security risk for RLC AM bearers during termination point change	16.1.0
	RP-88	RP-201161	1602	1	A	CR on SRS-CarrierSwitching	16.1.0
	RP-88	RP-201164	1603	1	A	CR on introduction of extended capabilities for NR-DC only BCs	16.1.0
	RP-88	RP-201165	1614	1	A	Clarification on the presence of ssb-perRACH-Occasion for the CSI-RS based CFRA	16.1.0
	RP-88	RP-201163	1624	1	A	Clarification on the maxPUSCH-Duration for LCP Restriction	16.1.0
	RP-88	RP-201159	1631	-	A	Clarification for SIB6, SIB7 and SIB8 acquisition during a measurement gap	16.1.0
	RP-88	RP-201198	1632	2	C	Introduction of secondary DRX group CR 38.331	16.1.0
	RP-88	RP-201164	1634	1	A	Correction to CORESET and PDCCH TCI state release	16.1.0
	RP-88	RP-201181	1641	-	F	Correction of NR IIoT	16.1.0
	RP-88	RP-201162	1644	1	A	Clarification on release and addition of the uplink for SCell	16.1.0
	RP-88	RP-201189	1645	-	F	CR on 38.331 for SRVCC from 5G to 3G	16.1.0
	RP-88	RP-201159	1649	-	A	Ambiguity in fr1-fr2-Add-UE-NR-Capabilities parameter	16.1.0
	RP-88	RP-201162	1656	1	A	Correction to measurement coordination in MR-DC	16.1.0
	RP-88	RP-201176	1657	1	F	Introduction of on-demand SIB(s) procedure in CONNECTED	16.1.0
	RP-88	RP-201164	1662	1	A	T310 handling during MobilityFromNR	16.1.0
	RP-88	RP-201173	1664	2	F	Corrections for 2-step Random Access Type	16.1.0
	RP-88	RP-201216	1665	2	B	Release-16 UE capabilities based on RAN1, RAN4 feature lists and RAN2	16.1.0
	RP-88	RP-201191	1666	1	F	Miscellaneous ASN.1 review corrections	16.1.0
	RP-88	RP-201166	1668	2	F	Miscellaneous non-controversial corrections Set V	16.1.0
	RP-88	RP-201184	1669	3	F	Corrections on MDT and SON in NR	16.1.0
	RP-88	RP-201190	1670	-	C	Introduction of eCall over IMS for NR	16.1.0
	RP-88	RP-201191	1671	1	F	38.331 CR for overheating in (NG)EN-DC and NR-DC	16.1.0
	RP-88	RP-201186	1673	1	B	Introduction of inter-frequency measurement without gap	16.1.0
	RP-88	RP-201164	1682	2	A	Correction on SRS antenna capability for carrier switching	16.1.0

	RP-88	RP-201161	1683	1	A	UE Capability Enhancement for FR1(TDD/FDD) / FR2 CA and DC	16.1.0
	RP-88	RP-201164	1687	1	A	Correction to re-sending UEAssistanceInformation upon reconfiguration w/ sync	16.1.0
	RP-88	RP-201170	1696	4	F	eMIMO corrections	16.1.0
	RP-88	RP-201166	1697	-	F	Corrections to SIB1 Processing	16.1.0
	RP-88	RP-201171	1700	-	F	Corrections for CLI	16.1.0
	RP-88	RP-201191	1703	1	F	Correction on MN-SN measurements coordination in INM	16.1.0
	RP-88	RP-201163	1707	-	A	SMTC Configuration for PSCell Addition for NR-DC (Option 2)	16.1.0
	RP-88	RP-201165	1711	1	A	Introduction of CGI reporting capabilities	16.1.0
	RP-88	RP-201191	1716	-	B	Aperiodic CSI-RS triggering with beam switching timing of 224 and 336	16.1.0
	RP-88	RP-201166	1717	1	B	Implementing confirmation of code block group based transmission	16.1.0
	RP-88	RP-201179	1718	1	F	Correction to TS 38.331 for IAB WI	16.1.0
	RP-88	RP-201183	1719	-	B	RRC configuration of supporting UL Tx switching	16.1.0
	RP-88	RP-201183	1720	-	B	UE capability of supporting UL Tx switching	16.1.0

09/2020	RP-89	RP-201929	1533	3	F	CLI configuration	16.2.0
	RP-89	RP-201922	1737	2	F	Corrections to failure type for MCGFailureInformation and SCGFailureInformation	16.2.0
	RP-89	RP-201937	1746	1	A	Clarification on CG-ConfigInfo for NR-DC and NE-DC	16.2.0
	RP-89	RP-201963	1747	1	F	Miscellaneous corrections for NR IIoT	16.2.0
	RP-89	RP-201937	1749	1	A	CR on SyncAndCellAdd condition	16.2.0
	RP-89	RP-201937	1751	1	A	CR to clarify UE behaviour after TAT expiry due to reconfigurationWithSync	16.2.0
	RP-89	RP-201930	1755	2	F	Handling of CPC in fast MCG recovery	16.2.0
	RP-89	RP-201986	1756	4	B	Release-16 UE capabilities based on RAN1, RAN4 feature lists and RAN2	16.2.0
	RP-89	RP-201989	1757	1	F	Minor corrections and update for RRC Positioning	16.2.0
	RP-89	RP-201938	1764	1	F	Correction on the Cross Carrier Scheduling Configuration	16.2.0
	RP-89	RP-201922	1768	2	F	Correction on the Configuration of sCellState for 38.331	16.2.0
	RP-89	RP-201930	1771	-	F	Minor Correction for Mobility Further Enhancement	16.2.0
	RP-89	RP-201989	1779	-	F	Corrections to acquisition of posSIB(s) in RRC_CONNECTED	16.2.0
	RP-89	RP-201989	1781	1	F	Corrections to handing posSIB-MappingInfo in SIB1	16.2.0
	RP-89	RP-201938	1787	1	F	SMTC Configuration for PSCell Addition and SN Change in NR-DC	16.2.0
	RP-89	RP-201923	1794	1	F	Corrections of RLF cause Signalling procedure	16.2.0
	RP-89	RP-201937	1800	1	A	CR on the BandCombination (R16)	16.2.0
	RP-89	RP-201922	1803	1	F	Adding enableDefaultBeamForCCS for cross-carrier scheduling with different SCS	16.2.0
	RP-89	RP-201927	1810	1	F	Correction on cross-RAT V2X functionality in TS 38.331	16.2.0
	RP-89	RP-201930	1818	-	F	Time misalignment in DAPS DRB configuration (Alt.2)	16.2.0
	RP-89	RP-201927	1820	2	F	Miscellaneous correction regarding on demand SIB in CONNECTED	16.2.0
	RP-89	RP-201927	1821	2	F	Redundant procedural text of on demand SIB in CONNECTED	16.2.0
	RP-89	RP-201922	1823	-	F	Correction to field condition on reffR2ServCellAsyncCA	16.2.0
	RP-89	RP-201930	1836	-	F	Corrections to Conditional Reconfiguration triggering	16.2.0
	RP-89	RP-201921	1844	3	F	RRC clarifications for NR-U	16.2.0
	RP-89	RP-201930	1845	1	F	Clarification on TS38.331 for DAPS	16.2.0
	RP-89	RP-201930	1847	-	F	T312 handling during Mobility from NR	16.2.0
	RP-89	RP-201930	1850	2	F	Correction on the RLF for NR DAPS	16.2.0
	RP-89	RP-201932	1852	1	F	Correction on beamSwitchTiming values of 224 and 336	16.2.0
	RP-89	RP-201930	1861	-	F	RLF in source cell during DAPS handover	16.2.0
	RP-89	RP-201929	1862	2	F	Misc. corrections CR for 38.331 for Power Savings	16.2.0
	RP-89	RP-201920	1863	3	F	Miscellaneous eMIMO corrections	16.2.0
	RP-89	RP-201922	1864	1	F	Missing fields for Toffset coordination in INM	16.2.0
	RP-89	RP-201922	1865	1	F	Misc corrections for Rel-16 DCCA	16.2.0
	RP-89	RP-201930	1866	-	F	Correction of field description for Mobility Enhancements	16.2.0
	RP-89	RP-201930	1868	1	F	Correction of description of CHO events for Mobility Enhancements	16.2.0
	RP-89	RP-201932	1869	1	F	ASN.1 corrections to maintain backwards compatibility	16.2.0
	RP-89	RP-201920	1870	1	F	Remaining ASN.1 review issues	16.2.0
	RP-89	RP-201938	1872	1	A	Miscellaneous non-controversial corrections Set VII	16.2.0
	RP-89	RP-201925	1873	1	B	Introduction of MPE reporting	16.2.0
	RP-89	RP-201930	1874	-	F	Corrections to Mobility Enhancements	16.2.0
	RP-89	RP-201937	1878	-	A	Clarification on scg-RB-Config	16.2.0
	RP-89	RP-201922	1879	1	F	Correction on storing SCG configuration in UE INACTIVE AS context	16.2.0
	RP-89	RP-201930	1886	-	F	Timer handling upon initiation of RRC re-establishment	16.2.0
	RP-89	RP-201930	1888	-	F	No support of DAPS HO for a CHO candidate cell	16.2.0
	RP-89	RP-201930	1898	-	F	Correction on TS38.331 for CHO	16.2.0
	RP-89	RP-201938	1908	1	A	Correction on UE assistance information transmission for handover case	16.2.0
	RP-89	RP-201931	1911	2	F	Correction on the UE Capability presence upon SN addition and SN change	16.2.0
	RP-89	RP-201928	1924	1	F	Correction on msgA-PUSCH-Config	16.2.0
	RP-89	RP-201989	1925	1	F	Introduction of PRS measurement gap	16.2.0
	RP-89	RP-201927	1930	1	F	Miscellaneous corrections on TS 38.331	16.2.0
	RP-89	RP-201930	1936	-	F	Correction on NR CHO	16.2.0
	RP-89	RP-201929	1937	1	F	Miscellaneous RRC corrections for NR eURLLC	16.2.0
	RP-89	RP-201932	1948	1	F	Correction on HO from NR to EN-DC	16.2.0
	RP-89	RP-201923	1952	1	F	Corrections on F1-C transfer path	16.2.0
	RP-89	RP-201923	1954	-	F	Corrections on default BH RLC channel	16.2.0
	RP-89	RP-201923	1955	1	F	Correction on the value range of BH-LogicalChannelIdentity-Ext	16.2.0
	RP-89	RP-201923	1956	-	F	Correction on cellReservedForOperatorUse	16.2.0
	RP-89	RP-201923	1957	1	F	Correction on SearchSpace configuration for IAB	16.2.0
	RP-89	RP-201923	1958	-	F	Corrections on the IAB-MT TDD resource configuration	16.2.0
	RP-89	RP-201932	1961	4	B	CR for Early Implementation in NR	16.2.0
	RP-89	RP-201932	1969	1	F	CR on UE behavior with E-UTRA cell selection upon mobility from NR failure for enhanced EPS voice fallback	16.2.0
	RP-89	RP-201930	1974	1	F	CR on drb-ContinueROHC for DAPS	16.2.0
	RP-89	RP-201921	1976	2	F	Miscellaneous corrections for NR-U	16.2.0
	RP-89	RP-201937	1979	1	A	Reconfiguring RoHC and setting the drb-ContinueROHC simultaneously	16.2.0
	RP-89	RP-201938	1986	1	A	Clarification on the SRB configuration for fullConfig during RRC Resume procedure	16.2.0
	RP-89	RP-201930	1989	2	F	Correction on field description of mrdc-SecondaryCellGroup in NR-DC	16.2.0

	RP-89	RP-201927	1991	2	F	CR to 38.331 on SLSS ID	16.2.0
	RP-89	RP-201927	1992	1	F	Correction on RRC parameters for 5G V2X with NR sidelink	16.2.0
	RP-89	RP-201922	1993	-	F	Correction on HARQ ACK spatial bundling configurations for secondary PUCCH group	16.2.0
	RP-89	RP-201924	1994	1	F	Update to IAB-MT capabilities	16.2.0
	RP-89	RP-201927	1995	-	F	Adding notes for joint success and failure in crossRAT SL	16.2.0
	RP-89	RP-201927	1997	-	F	Corrections on RAN1 related clarifications	16.2.0
	RP-89	RP-201931	1998	-	D	Editorial corrections on MDT and SON in NR	16.2.0
	RP-89	RP-201931	1999	-	F	Correction to MDT features	16.2.0
	RP-89	RP-201931	2000	-	F	Correction to SON features	16.2.0
	RP-89	RP-201928	2001	-	F	Corrections for NPNs	16.2.0
	RP-89	RP-201927	2002	-	F	Clarification on UL and SL priority thresholds	16.2.0
	RP-89	RP-201924	2003	-	F	Miscellaneous IAB Corrections	16.2.0
	RP-89	RP-201962	2007	1	F	Miscellaneous corrections on UL Tx switching	16.2.0
	RP-89	RP-201925	2008	-	B	Configuration for uplink power boosting via suspended IBE requirements	16.2.0
	RP-89	RP-201922	2009	-	F	NR-DC UE capabilities	16.2.0
	RP-89	RP-201927	2010	1	F	Correction on the calculation of CG occasion	16.2.0
12/2020	RP-90	RP-202775	1775	2	F	NR CA additional spectrum emission requirements	16.3.0
	RP-90	RP-202777	2017	-	B	Configuration for directional collision handling between reference cell and other cell for half-duplex operation in CA	16.3.0
	RP-90	RP-202773	2021	1	F	Clarification on referenceTimePreferenceReporting in RRC Reconfiguration Procedure	16.3.0
	RP-90	RP-202790	2029	-	F	Correction on UAI during handover	16.3.0
	RP-90	RP-202771	2038	1	F	Correction to PDSCH TDRA for DCI 1-2	16.3.0
	RP-90	RP-202789	2040	1	A	Correction for configuration of SRS Carrier Switching	16.3.0
	RP-90	RP-202767	2042	1	F	Correction to NR-U Energy Detection Threshold configuration	16.3.0
	RP-90	RP-202778	2051	1	B	Release-16 UE capabilities based on RAN1, RAN4 feature lists and RAN2	16.3.0
	RP-90	RP-202767	2052	-	F	Correction of field description for ra-ResponseWindow	16.3.0
	RP-90	RP-202767	2055	-	F	Clarification on HARQ process sharing for CGs	16.3.0
	RP-90	RP-202790	2059	1	A	Corrections on the configurations of HARQ-ACK spatial bundling and CBG in 38.331	16.3.0
	RP-90	RP-202774	2061	1	F	Clarification on no support of CA, DC or multi-TRP with DAPS	16.3.0
	RP-90	RP-202790	2064	1	A	Corrections on PDCP duplication capability for NR-DC	16.3.0
	RP-90	RP-202790	2066	1	F	Clarification on SIB mapping to SI message	16.3.0
	RP-90	RP-202776	2075	1	F	UE assistance information for DRX preference	16.3.0
	RP-90	RP-202767	2091	1	F	Miscellaneous corrections for NR-U	16.3.0
	RP-90	RP-202768	2107	2	F	UE behaviour when UL 7.5KHz shift is not supported	16.3.0
	RP-90	RP-202772	2122	1	F	Correction on non-DRB for IAB-MT	16.3.0
	RP-90	RP-202772	2124	1	F	Corrections on BH RLC channel	16.3.0
	RP-90	RP-202772	2125	1	F	Corrections on RLF cause determination	16.3.0
	RP-90	RP-202790	2130	1	F	Correction on uac-AccessCategory1-SelectionAssistanceInfo	16.3.0
	RP-90	RP-202790	2134	2	F	Miscellaneous non-controversial corrections Set VIII	16.3.0
	RP-90	RP-202775	2142	2	F	Correction on field description of configuredGrantConfigType2DeactivationStateList	16.3.0
	RP-90	RP-202776	2145	1	F	Correction on RRC state preference	16.3.0
	RP-90	RP-202789	2146	1	F	Clarifications for the common search space on the active BWP	16.3.0
	RP-90	RP-202771	2149	1	F	Corrections to 2-Step RA	16.3.0
	RP-90	RP-202777	2151	-	F	Discarding of stored DL RRC message segments when UE transitions to RRC_IDLE	16.3.0
	RP-90	RP-202771	2159	-	F	Correction on BFD resource on SCell	16.3.0
	RP-90	RP-202770	2161	2	F	Misc corrections for Rel-16 DCCA	16.3.0
	RP-90	RP-202770	2163	-	F	Missing fields for Toffset coordination	16.3.0
	RP-90	RP-202770	2166	1	F	Processing delay requirements for DLInformationTransferMRDC	16.3.0
	RP-90	RP-202773	2175	1	F	Correction regarding reconfigure EHC	16.3.0
	RP-90	RP-202770	2178	-	C	Processing delay requirements for RRC resume	16.3.0
	RP-90	RP-202770	2180	1	F	Correction for fast MCG link recovery in (NG)EN-DC	16.3.0
	RP-90	RP-202771	2181	2	F	Correction on HARQ ACK/NACK feedback configuration	16.3.0
	RP-90	RP-202771	2182	2	F	Correction on slot based repetition	16.3.0
	RP-90	RP-202772	2184	1	F	RRC Miscellaneous Corrections	16.3.0
	RP-90	RP-202772	2192	1	F	Support of Rel-16 features for SCG in EN-DC and NR-DC	16.3.0
	RP-90	RP-202775	2198	1	F	Correction on acquisition of MIB and SIB1	16.3.0
	RP-90	RP-202775	2199	-	F	Correction on posSIB broadcastStatus	16.3.0
	RP-90	RP-202776	2215	-	F	Clarification on SRVCC handover	16.3.0
	RP-90	RP-202769	2230	1	F	Miscellaneous corrections on TS 38.331	16.3.0
	RP-90	RP-202771	2250	1	C	38331 CR for CSI-RS-ResourceConfigMobility	16.3.0
	RP-90	RP-202775	2254	-	F	Correction on T321 for autonomous gap based CGI in FR2	16.3.0
	RP-90	RP-202772	2265	-	F	Transmission suspension on BH RLC channel upon IAB-MT failure	16.3.0
	RP-90	RP-202790	2273	3	A	CR on TS 38.331 for LCP restriction of configured grant type 1	16.3.0
	RP-90	RP-202769	2274	-	F	Correction on RRC parameters for NR SL communication	16.3.0
	RP-90	RP-202771	2276	3	F	Introduction of capability bit for multi-CC simultaneous TCI activation with multi-TRP	16.3.0

	RP-90	RP-202771	2277	1	F	Selecting index for PLMN, SNPN and UAC parameters	16.3.0
	RP-90	RP-202775	2278	-	F	Positioning RRC updates for posSIB validity check and field description correction	16.3.0
	RP-90	RP-202774	2280	-	F	Miscellaneous corrections for conditional reconfiguration	16.3.0
	RP-90	RP-202774	2282	-	F	Miscellaneous corrections for DAPS (NR)	16.3.0
	RP-90	RP-202773	2284	1	F	Corrections for PDCP duplication introduced in IIoT	16.3.0
	RP-90	RP-202769	2285	-	F	Corrections on sidelink related RRC procedures	16.3.0
	RP-90	RP-202770	2287	-	A	Dummify UE capability of crossCarrierScheduling-OtherSCS	16.3.0
	RP-90	RP-202776	2293	-	F	RRC corrections on NR SON and MDT	16.3.0
	RP-90	RP-202770	2294	-	F	CR for Unaligned CA signalling in TS 38.331	16.3.0
	RP-90	RP-202767	2295	-	F	Name change of the UE capability for the extended RAR window monitoring	16.3.0
	RP-90	RP-202884	2297	-	A	CR to 38.331 on handling of fallbacks for FR2 CA	16.3.0
01/2021	RP-90					Corrected the extension marker in type PosSchedulingInfo-r16 so that it passes ASN.1 syntax check	16.3.1
03/2021	RP-91	RP-210693	2034	3	F	Corrections to acquisition of positioning SIBs	16.4.0
	RP-91	RP-210702	2036	3	A	Clarification to usage of ConfigRestrictModReqSCG	16.4.0
	RP-91	RP-210695	2147	1	F	Clarification for aperiodic CSI and secondary DRX group	16.4.0
	RP-91	RP-210701	2237	1	A	Clarification on P-max in FrequencyInfoUL in FR2	16.4.0
	RP-91	RP-210690	2298	1	F	Correction on the Handling of Reconfiguration within RRC Resume	16.4.0
	RP-91	RP-210690	2300	1	F	Clarification on Fast MCG Link Recovery	16.4.0
	RP-91	RP-210692	2301	1	F	CR on co-configuration of Rel-16 features	16.4.0
	RP-91	RP-210689	2302	2	F	Correction on reset configuration	16.4.0
	RP-91	RP-210689	2303	1	F	Clarification on the inter-frequency operation	16.4.0
	RP-91	RP-210694	2306	1	F	Correction on RSSI and channel occupancy measurements	16.4.0
	RP-91	RP-210689	2315	1	F	Correction on value range of sl-ConfigIndexCG and sl-HARQ-ProclD-offset	16.4.0
	RP-91	RP-210693	2317	1	F	Clarifications on the required posSIB	16.4.0
	RP-91	RP-210697	2321	1	F	UE capability of NR to UTRA-FDD CELL_DCH CS handover	16.4.0
	RP-91	RP-210693	2322	-	F	Corrections on posSIB validity	16.4.0
	RP-91	RP-210694	2325	1	F	CR on 38.331 for power saving	16.4.0
	RP-91	RP-210701	2333	-	A	CR on SyncAndCellAdd condition	16.4.0
	RP-91	RP-210693	2341	1	F	RA report and Logged MDT Info extendibility	16.4.0
	RP-91	RP-210692	2346	1	F	Support of NUL and SUL during DAPS handover	16.4.0
	RP-91	RP-210694	2360	-	F	Clarification on NR-U RSSI measurement procedure	16.4.0
	RP-91	RP-210703	2371	-	F	Correction to measResultServingMOList impacting EN-DC	16.4.0
	RP-91	RP-210695	2377	2	B	Inter-node messaging for supporting intra-band EN-DC scenarios	16.4.0
	RP-91	RP-210692	2379	-	F	Dummifying intraFreqMultiUL-TransmissionDAPS-r16 capability	16.4.0
	RP-91	RP-210690	2384	-	F	HARQ-ACK codebook configuration for secondary PUCCH group	16.4.0
	RP-91	RP-210690	2385	1	F	Misc corrections for Rel-16 DCCA	16.4.0
	RP-91	RP-210694	2387	-	F	RRC corrections for NR-U	16.4.0
	RP-91	RP-210689	2391	3	F	Correction on SL configured grant type 1 validity under Uu RLF	16.4.0
	RP-91	RP-210692	2392	2	F	Inability to comply with conditional reconfiguration	16.4.0
	RP-91	RP-210691	2398	2	F	Miscellaneous corrections on IAB in 38.331	16.4.0
	RP-91	RP-210703	2400	1	F	Miscellaneous non-controversial corrections Set IX	16.4.0
	RP-91	RP-210695	2401	1	F	Correction on complete message at handover from NR to EN-DC	16.4.0
	RP-91	RP-210703	2402	1	F	Release with Redirect for connection resume triggered by NAS	16.4.0
	RP-91	RP-210691	2404	-	F	Correction on the configuration of Type 1 configured grant	16.4.0
	RP-91	RP-210703	2405	1	F	NR RRC processing time with segmentation	16.4.0
	RP-91	RP-210691	2407	1	F	Introduction of UE Capability and Configuration for SpCell BFR Enhancement	16.4.0
	RP-91	RP-210695	2414	2	F	ASN.1 guidelines for extension of lists using ToAddMod structure	16.4.0
	RP-91	RP-210692	2417	2	F	Corrections for DAPS Handover	16.4.0
	RP-91	RP-210689	2418	1	F	CR on measurement object modification	16.4.0
	RP-91	RP-210692	2419	1	F	Clarification on ULInformationTransferMRDC message	16.4.0
	RP-91	RP-210690	2422	1	F	Clarification on sCellState configuration upon SCell modification	16.4.0
	RP-91	RP-210691	2427	1	F	Corrections on BAP address and default BAP configuration	16.4.0
	RP-91	RP-210691	2428	2	F	Corrections on the default configuration with Need M	16.4.0
	RP-91	RP-210693	2429	1	F	Corrections on NR MDT and SON	16.4.0
	RP-91	RP-210693	2433	1	F	Clarification for SIBs scheduled in posSchedulingInfoList	16.4.0
	RP-91	RP-210690	2436	2	F	Correction on tci-PresentInDCI	16.4.0
	RP-91	RP-210689	2437	1	F	Miscellaneous corrections on TS 38.331	16.4.0
	RP-91	RP-210689	2440	2	F	Correction on C-RNTI replacement and conditions for 2-step RA	16.4.0
	RP-91	RP-210689	2445	1	F	Stop conditions of T320 in NR protocols	16.4.0
	RP-91	RP-210697	2447	1	F	CR on the Capability of PUCCH Transmissions for HARQ-ACK-38331	16.4.0
	RP-91	RP-210694	2448	1	F	UTRA capabilities forwarding in handover preparation	16.4.0
	RP-91	RP-210693	2449	1	F	Correction on SI window calculation for PosSIB	16.4.0
	RP-91	RP-210692	2450	-	F	[Post112-e][254][R16 MOB] Clarification of behaviour to avoid security risk in CHO based recovery after handover without key change failure	16.4.0
	RP-91	RP-210693	2457	-	F	Misc corrections on SON and MDT	16.4.0
	RP-91	RP-210689	2458	-	F	Correction to 38.331 on intra-frequency reselection	16.4.0
	RP-91	RP-210689	2460	-	F	T400 expiry in timer table and protection of RRC messages	16.4.0
	RP-91	RP-210692	2461	-	F	Correction on NR Mobility Enhancement	16.4.0
	RP-91	RP-210690	2462	-	F	CR on serving cell reporting	16.4.0

	RP-91	RP-210697	2463	-	F	Capability for dormant BWP switching of multiple SCells	16.4.0
	RP-91	RP-210695	2466	-	F	Correction to PUSCH skipping with UCI without LCH-based prioritization	16.4.0
	RP-91	RP-210693	2467	-	F	Corrections on NR MDT and SON	16.4.0
	RP-91	RP-210692	2468	1	F	Correction on inter-node signalling for DAPS UE capability coordination	16.4.0
	RP-91	RP-210702	2469	-	A	Dummy the capability bit v2x-EUTRA	16.4.0
	RP-91	RP-210630	2470	1	B	Release-16 UE capabilities based on updated RAN1 and RAN4 feature lists	16.4.0
	RP-91	RP-210693	2471	-	B	Uplink Tx DC location reporting for two carrier uplink CA	16.4.0
	RP-91					MCC: replaced all "-v16xy" with "-v1640"	16.4.1
06/2021	RP-92	RP-211487	2413	6	C	Redirection with MPS Indication [Redirect_MPS_I]	16.5.0
	RP-92	RP-211474	2475	3	F	Corrections to the UE action upon SIB1 reception	16.5.0
	RP-92	RP-211470	2477	1	F	Correction on parameters of SL configured grant	16.5.0
	RP-92	RP-211474	2490	2	F	Corrections on the descriptions of SRS-Config	16.5.0
	RP-92	RP-211475	2494	2	F	Correction on T321 for autonomous gap based CGI reporting in LTE	16.5.0
	RP-92	RP-211482	2496	2	A	CR on RRC processing delay	16.5.0
	RP-92	RP-211475	2502	1	F	CR on the configuration restriction on DCI format 0_2/1_2 for unlicensed band (Option 1)	16.5.0
	RP-92	RP-211475	2505	2	F	Correction on description of ssb-PositionsInBurst in ServingCellConfigCommonSIB	16.5.0
	RP-92	RP-211475	2508	1	F	Correction on freqMonitorLocations	16.5.0
	RP-92	RP-211486	2516	3	A	Clean-up of INM procedure text	16.5.0
	RP-92	RP-211485	2519	3	F	Miscellaneous non-controversial corrections Set X	16.5.0
	RP-92	RP-211485	2527	3	A	Clarification on SCellIndex and servCellIndex	16.5.0
	RP-92	RP-211484	2531	2	A	Correction on firstActiveDownlinkBWP-Id	16.5.0
	RP-92	RP-211471	2534	3	F	Misc corrections for Rel-16 DCCA	16.5.0
	RP-92	RP-211483	2540	2	F	Correction on failureType in FailureReportSCG-EUTRA and scgFailureInfoEUTRA	16.5.0
	RP-92	RP-211471	2543	2	F	Clarification on NR SCG configuration within RRC Resume	16.5.0
	RP-92	RP-211484	2550	3	A	Clarification on SCS of active DL and UL BWP	16.5.0
	RP-92	RP-211470	2551	3	F	Miscellaneous corrections on TS 38.331 for NR V2X	16.5.0
	RP-92	RP-211470	2552	3	F	Corrections on TS 38.331 from the latest RAN1 decisions	16.5.0
	RP-92	RP-211485	2556	2	A	Clarification on RLC bearer handling in full configuration	16.5.0
	RP-92	RP-211472	2557	2	F	Miscellaneous corrections on BH RLC channel management for IAB-MT	16.5.0
	RP-92	RP-211475	2561	3	F	Correction on description of subCarrierSpacing in BWP	16.5.0
	RP-92	RP-211470	2562	2	F	Correction on releasing referenceTimePreferenceReporting and sl-AssistanceConfigNR	16.5.0
	RP-92	RP-211484	2564	3	A	Correction on T325	16.5.0
	RP-92	RP-211473	2565	2	F	Full configuration for CHO	16.5.0
	RP-92	RP-211485	2567	2	A	Abortion of RRC connection resume handling	16.5.0
	RP-92	RP-211470	2569	1	F	Transmission of UEAssistanceInformation or SidelinkUEInformationNR after conditional handover	16.5.0
	RP-92	RP-211483	2572	1	A	Clarification on SCellFrequencies	16.5.0
	RP-92	RP-211474	2574	1	F	Correction for the positioning SI offset and clarification on mapping of posSIB to SI	16.5.0
	RP-92	RP-211484	2579	2	F	UL Config Grant capability differentiation for FR1(TDD/FDD) / FR2	16.5.0
	RP-92	RP-211474	2580	2	F	Corrections on the UE capability of indication on supporting the extension of SRSresourceID	16.5.0
	RP-92	RP-211483	2581	1	F	Clarification on the initiation of RNA update	16.5.0
	RP-92	RP-211478	2585	3	B	Release-16 UE capabilities based on RAN1 and RAN4 feature lists	16.5.0
	RP-92	RP-211472	2586	-	F	Correction on repetition for L1-SINR	16.5.0
	RP-92	RP-211475	2590	-	F	Correction on reportSlotOffsetList	16.5.0
	RP-92	RP-211486	2598	1	F	Clarification on the Timing Reference of PSCell SMTC Configuration	16.5.0
	RP-92	RP-211478	2599	1	F	Introduction of the intra-NR and inter-RAT HST Capabilities and Configuration	16.5.0
	RP-92	RP-211475	2600	-	F	SSB-ToMeasure for NR-U	16.5.0
	RP-92	RP-211482	2602	-	A	Clarification on CGI reporting	16.5.0
	RP-92	RP-211471	2605	1	F	Miscellaneous Corrections to the SNPN	16.5.0
	RP-92	RP-211474	2609	-	C	Adding 400 Mhz and 600 MHz frequency separation classes	16.5.0
	RP-92	RP-211482	2615	-	A	Correction on CrossCarrierSchedulingConfig Introduced by Two PUCCH Group	16.5.0
	RP-92	RP-211473	2616	1	F	38.331 Correction on Failure Recovery via CHO for Inter-RAT Handover Failure	16.5.0
	RP-92	RP-211472	2619	1	F	Miscellaneous corrections on IAB	16.5.0
	RP-92	RP-211471	2626	-	F	Correction on RNA configuration for UE in SNPN access mode	16.5.0
	RP-92	RP-211470	2636	2	F	Correction of Sidelink Configured Grant Type 1 Usage During Handover	16.5.0
	RP-92	RP-211483	2639	-	A	Introduction of DL scheduling slot offset capabilities in UERadioPagingInformation	16.5.0
	RP-92	RP-211474	2644	2	F	Clarifications on the TRP definition for positioning	16.5.0
	RP-92	RP-211470	2647	1	F	Configuration of search spaces for scheduling SL transmissions	16.5.0
	RP-92	RP-211475	2652	1	F	Correction on description of msg1-SubcarrierSpacing in RACH-ConfigCommon	16.5.0
	RP-92	RP-211485	2667	1	A	Correction on flow remapping to an added DRB	16.5.0
	RP-92	RP-211483	2675	-	A	Clarification on the frequency deprioritisation	16.5.0

	RP-92	RP-211486	2686	1	A	Correction on A-CSI trigger state configuration	16.5.0
	RP-92	RP-211485	2690	1	A	RLC and PDCP Re-establishment upon RRC resume/reestablishment	16.5.0
	RP-92	RP-211471	2696	-	F	CR on CGI reporting for NPN-only cell	16.5.0
	RP-92	RP-211478	2699	-	A	Correction to ca-ParametersNR-ForDC	16.5.0
	RP-92	RP-211473	2700	-	F	Clarification on non-coexistence of CHO and DAPS	16.5.0
	RP-92	RP-211475	2702	-	F	Extending number of cells for search space switching trigger configuration	16.5.0
	RP-92	RP-211471	2703	2	C	NR-DC Cell Group capability filtering	16.5.0
	RP-92	RP-211478	2705	-	A	CR on the Fallback Band Combination Removing-R16	16.5.0
	RP-92	RP-211471	2706	-	F	SON-MDT Changes agreed in RAN2#114 meeting	16.5.0
09/2021	RP-93	RP-212444	2708	1	F	Correction on UL Skipping for PUSCH in Rel-16	16.6.0
	RP-93	RP-212442	2709	1	F	Corrections to SIB validity for NPN only cell	16.6.0
	RP-93	RP-212444	2714	-	F	Early implementation of eCall over IMS in NR	16.6.0
	RP-93	RP-212441	2715	1	F	Miscellaneous corrections on TS 38.331	16.6.0
	RP-93	RP-212443	2716	-	F	Corrections to intra-frequency cell reselection for MIB, SIB1 acquisition failure and TAC absence in SIB1	16.6.0
	RP-93	RP-212442	2723	1	F	Correction on TCI configuration for DCI format 1_2	16.6.0
	RP-93	RP-212442	2728	1	F	Correction to description of p0-AlphaSets	16.6.0
	RP-93	RP-212442	2746	1	F	Clarification on the NPN-IdentityInfoList	16.6.0
	RP-93	RP-212442	2752	1	F	Modification of measId for conditional reconfiguration	16.6.0
	RP-93	RP-212443	2754	1	F	MIB correction on subCarrierSpacingCommon	16.6.0
	RP-93	RP-212442	2760	-	F	Correction to 38.331 on the field description of msgA-TransMax	16.6.0
	RP-93	RP-212440	2763	2	F	Miscellaneous non-controversial corrections Set XI	16.6.0
	RP-93	RP-212441	2776	1	F	Corrections on RRC reconfiguration for fast MCG link recovery	16.6.0
	RP-93	RP-212442	2777	-	F	Correction on RepetitionSchemeConfig for eMIMO	16.6.0
	RP-93	RP-212438	2780	-	A	Correction on fallback band combination for SUL	16.6.0
	RP-93	RP-212439	2785	1	F	Clarification on RRC processing delay for HO from E-UTRA to NR	16.6.0
	RP-93	RP-212443	2789	1	F	CR for UE reporting Tx DC location info for the second PA	16.6.0
	RP-93	RP-212438	2793	-	A	Correction on inter-RAT measurement report triggering	16.6.0
	RP-93	RP-212439	2799	2	A	Correction on reconfigurationWithSync	16.6.0
	RP-93	RP-212442	2800	1	F	Correction to DAPS handover	16.6.0
	RP-93	RP-212442	2801	-	F	Corrections to pdsch-HARQ-ACK-CodeBookList	16.6.0
	RP-93	RP-212443	2802	-	F	SON-MDT Changes agreed in RAN2#115 meeting	16.6.0
	RP-93	RP-212442	2803	-	F	No support for CHO with SCG configuration	16.6.0
	RP-93	RP-212440	2804	2	F	CR to 38.331 on correcting Rel-15 failure type definition	16.6.0
	RP-93	RP-212442	2807	-	F	Handling of candidateBeamRSLExt-v1610 (option A1)	16.6.0
	RP-93	RP-212440	2808	-	F	FR1/FR2 differentiation for enhanced UL grant skipping capabilities	16.6.0
	RP-93	RP-212598	2810	2	C	Distinguishing support of extended band n77	16.6.0
12/2021	RP-94	RP-213341	2806	2	A	Simultaneous Rx/Tx UE capability per band pair	16.7.0
	RP-94	RP-213343	2814	1	F	Correction on msgA-SubcarrierSpacing	16.7.0
	RP-94	RP-213342	2815	1	F	Miscellaneous corrections on TS 38.331	16.7.0
	RP-94	RP-213342	2817	1	C	Duty cycle signalling for power class 1.5	16.7.0
	RP-94	RP-213344	2819	1	F	Correction for default value of rb-offset	16.7.0
	RP-94	RP-213343	2822	-	F	Correction on R16 UE capability of supportedSINR-meas-r16	16.7.0
	RP-94	RP-213344	2837	2	F	Correction on description of absoluteFrequencySSB	16.7.0
	RP-94	RP-213343	2842	1	F	Correction on condRRCReconfig field description	16.7.0
	RP-94	RP-213341	2844	1	F	Miscellaneous non-controversial corrections Set XII	16.7.0
	RP-94	RP-213343	2845	1	F	Correction to need code for drb-ContinueEHC-DL and drb-ContinueEHC-UL	16.7.0
	RP-94	RP-213343	2849	1	F	Extension of pathlossReferenceRSs	16.7.0
	RP-94	RP-213343	2857	1	F	Correction on supportNewDMRS-Port-r16 capability	16.7.0
	RP-94	RP-213343	2858	2	F	Correction on pucch-SpatialRelationInfo-v1610	16.7.0
	RP-94	RP-213345	2859	1	C	CR on 38.331 for introducing UE capability of txDiversity	16.7.0
	RP-94	RP-213345	2862	-	F	CR on inter-frequency gapless measurement	16.7.0
	RP-94	RP-213344	2864	2	F	SON-MDT changes agreed in RAN2#116 meeting	16.7.0
03/2022	RP-95	RP-220835	2786	3	F	Adding UE capability of UL MIMO coherence for UL Tx switching	16.8.0
	RP-95	RP-220473	2874	1	F	Correction to RRC reconfiguration for IAB	16.8.0
	RP-95	RP-220835	2879	1	F	Addition of missing description on mobility support for 5G SRVCC to 3G	16.8.0
	RP-95	RP-220835	2880	1	F	Handling of ServingCellConfigCommon	16.8.0
	RP-95	RP-220835	2888	1	F	Correction on UL skipping with LCH Prioritization in Rel-16	16.8.0
	RP-95	RP-220835	2897	1	F	Correction on Positioning SRS	16.8.0
	RP-95	RP-220472	2900	1	F	Correction of NCC storage during re-establishment and Resume	16.8.0
	RP-95	RP-220473	2903	1	F	Miscellaneous corrections on TS 38.331	16.8.0
	RP-95	RP-220473	2911	-	F	Correction on conditional reconfiguration execution for only one triggered cell	16.8.0
	RP-95	RP-220473	2912	2	F	Introduction of sidelink power class capability indication	16.8.0
	RP-95	RP-220493	2917	1	F	Correction on inclusion of selectedPLMN-Identity in RRCResumeComplete	16.8.0
	RP-95	RP-220835	2929	1	F	Correction on invalid symbol pattern	16.8.0
	RP-95	RP-220472	2939	-	A	Clarification on SN initiated release of an SCG	16.8.0
	RP-95	RP-220473	2960	2	F	Clarification on HighSpeedConfig for HST	16.8.0
	RP-95	RP-220472	2969	-	F	Miscellaneous non-controversial corrections Set XIII	16.8.0
03/2022	RP-95	RP-220506	2459	2	D	Inclusive Language Review for TS 38.331	17.0.0
	RP-95	RP-220499	2465	2	C	Remove the maximum number of MIMO layers restrictions for SUL	17.0.0
	RP-95	RP-220486	2811	5	B	Introducing Enhancements to Integrated Access and Backhaul for NR	17.0.0

	RP-95	RP-220837	2846	1	B	Introduction of mobility-state-based cell reselection for NR HSDN [NR_HSDN]	17.0.0
	RP-95	RP-220492	2865	2	B	Introducing Enhancement of Data Collection for SON and MDT	17.0.0
	RP-95	RP-220477	2878	1	B	Introduction of NR dynamic spectrum sharing	17.0.0
	RP-95	RP-220837	2883	1	B	Introduction of MINT [MINT]	17.0.0
	RP-95	RP-220481	2887	1	B	Introduction of enhanced IIoT&URLLC support for NR	17.0.0
	RP-95	RP-220472	2889	1	F	Correction on PO determination for UE in inactive state	17.0.0
	RP-95	RP-220475	2891	2	B	Extending NR operation to 71 GHz	17.0.0
	RP-95	RP-220500	2893	1	B	Introduction of FR2 UL gap for Rel-17	17.0.0
	RP-95	RP-220497	2898	2	B	Introduction of function for RRM enhancements for Rel-17 NR FR1 HST	17.0.0
	RP-95	RP-220838	2901	1	B	Release-17 UE capabilities based on R1 and R4 feature lists (TS38.331)	17.0.0
	RP-95	RP-220476	2902	1	B	RRC CR for NR Sidelink enhancement	17.0.0
	RP-95	RP-220495	2904	1	B	Introducing support of UP IP for EPC connected architectures using NR PDCP	17.0.0
	RP-95	RP-220499	2909	1	B	RRC configuration for R17 UL Tx switching enhancement	17.0.0
	RP-95	RP-220491	2910	2	B	Introduction of SL relay	17.0.0
	RP-95	RP-220502	2913	2	B	Introduction of RRC signaling for measurement gap enhancement	17.0.0
	RP-95	RP-220488	2919	1	B	Introduction of NR RRC support for MUSIM	17.0.0
	RP-95	RP-220490	2921	1	B	NR RRC CR for RAN slicing	17.0.0
	RP-95	RP-220474	2923	1	B	Introduction of Release-17 feMIMO	17.0.0
	RP-95	RP-220961	2924	3	B	Introduction of ePowSav in TS 38.331	17.0.0
	RP-95	RP-220493	2925	1	B	Introducing NPN enhancements: Credentials Holder, UE Onboarding, and IMS emergency support in SNPNs	17.0.0
	RP-95	RP-220489	2927	-	B	Introduction of the support for UDC in NR	17.0.0
	RP-95	RP-220478	2928	2	B	Introduction of NR coverage enhancements in RRC	17.0.0
	RP-95	RP-220482	2930	2	B	Introduction of Release-17 NTN	17.0.0
	RP-95	RP-220498	2933	1	B	HST on FR2	17.0.0
	RP-95	RP-220487	2937	1	B	Introduction of SDT	17.0.0
	RP-95	RP-220496	2940	1	B	Introduction of DL 1024 QAM in NR	17.0.0
	RP-95	RP-220484	2949	1	B	Introduction of NR MBS into 38.331	17.0.0
	RP-95	RP-220836	2950	2	B	Introduction of RedCap	17.0.0
	RP-95	RP-220487	2951	1	B	Introduction of Common RACH Partitioning Aspects	17.0.0
	RP-95	RP-220479	2952	3	B	Introduction of Enhanced Positioning feature	17.0.0
	RP-95	RP-220853	2953	2	B	Explicit Indication of SI Scheduling window position [SI-SCHEDULING]	17.0.0
	RP-95	RP-220485	2954	2	B	Introduction of further multi-RAT dual-connectivity enhancements	17.0.0
	RP-95	RP-220494	2958	2	B	Introduction of QoE measurements in NR	17.0.0
06/2022	RP-96	RP-221736	2872	5	B	Early Measurements for EPS fallback [IdleMeaEPSFB]	17.1.0
	RP-96	RP-221721	2916	2	B	CR on the CBM/IBM reporting-38331	17.1.0
	RP-96	RP-221756	2998	2	B	Release-17 UE capabilities based on R1 and R4 feature lists (TS38.331)	17.1.0
	RP-96	RP-221730	3014	3	F	Correction of NR RRC support for MUSIM	17.1.0
	RP-96	RP-221720	3021	1	B	CR to TS 38.331 on Network assistant signalling for Rel-17 CRS interference mitigation	17.1.0
	RP-96	RP-221724	3039	1	F	Correction for NR coverage enhancements	17.1.0
	RP-96	RP-221719	3040	1	F	Corrections to TS 38.331 for RAN slicing	17.1.0
	RP-96	RP-221715	3055	5	F	RRC correction CR for 71 GHz	17.1.0
	RP-96	RP-221755	3057	1	F	Clarification and correction for measurement gap enhancement features	17.1.0
	RP-96	RP-221713	3061	1	A	Corrections on BAP entity release in MR DC release procedures in TS 38.331	17.1.0
	RP-96	RP-221736	3078	2	C	Distinguishing support of band n77 restrictions in Canada [n77 Canada]	17.1.0
	RP-96	RP-221736	3082	1	F	Extension of the time domain resource allocation indicator for CG type 1 with typeB repetition	17.1.0
	RP-96	RP-221712	3084	-	A	Correction on FR1-FR1 power control parameters of NR-DC	17.1.0
	RP-96	RP-221735	3086	2	F	Correction CR for QoE Measurement Collection in NR	17.1.0
	RP-96	RP-221717	3088	1	F	Correction for NR NTN WI	17.1.0
	RP-96	RP-221734	3089	1	F	Corrections for eNPN from RAN2#118	17.1.0
	RP-96	RP-221722	3090	2	F	Correction for feMIMO WI	17.1.0
	RP-96	RP-221726	3093	2	F	Correction for enhanced IIoT&URLLC support for NR	17.1.0
	RP-96	RP-221723	3094	-	F	Editorial correction for NR dynamic spectrum sharing	17.1.0
	RP-96	RP-221729	3100	2	F	SDT corrections	17.1.0
	RP-96	RP-221721	3110	1	F	Addressing FR2 UL gap RILs [Z151, Z152, A803, A804, A807, A808]	17.1.0
	RP-96	RP-221725	3121	2	F	Correction based upon Positioning RILs	17.1.0
	RP-96	RP-221736	3122	1	B	Introducing single-bit approach for MINT [MINT]	17.1.0
	RP-96	RP-221718	3134	2	F	Miscellaneous Rapporteur RRC corrections to IAB	17.1.0
	RP-96	RP-221733	3136	2	F	Miscellaneous rapporteur corrections for SON-MDT	17.1.0
	RP-96	RP-221728	3137	2	F	Corrections for further MRDC enhancements	17.1.0
	RP-96	RP-221754	3138	1	F	MBS corrections for TS 38.331	17.1.0
	RP-96	RP-221711	3142	-	A	Correction of Need Code in IE SearchSpace	17.1.0
	RP-96	RP-221756	3144	1	C	Adding UE capability of CSI reporting cross PUCCH SCell group	17.1.0
	RP-96	RP-221732	3145	2	F	Miscellaneous corrections for NR SL Relay	17.1.0
	RP-96	RP-221716	3151	1	F	Miscellaneous corrections for RedCap WI	17.1.0
	RP-96	RP-221727	3154	2	F	ePowSav corrections for 38.331	17.1.0
	RP-96	RP-221736	3164	2	F	ASN1 review general corrections	17.1.0
	RP-96	RP-221731	3170	1	F	Correction for NR UDC in 38.331	17.1.0
	RP-96	RP-221756	3176	-	A	New UE capability to limit PDCCH monitoring	17.1.0

	RP-96	RP-221729	3177	2	F	Correction for features applicable to RACH partitioning	17.1.0
	RP-96	RP-221756	3179	1	C	Introduction UE capability for CHO with SCG configuration [CHOwithDCkept]	17.1.0
	RP-96	RP-221736	3181	1	B	Introduction of gNB ID length reporting in the NR CGI report [gNB_ID_Length]	17.1.0
	RP-96	RP-221730	3182	-	F	Correction on UE behavior for NAS-based busy indication in RRC_INACTIVE	17.1.0
	RP-96	RP-221736	3183	-	C	Support of CHO with SCG configuration - 38331 [CHOwithDCkept]	17.1.0
	RP-96	RP-221712	3185	-	A	Miscellaneous corrections on TS 38.331 for NR V2X	17.1.0
	RP-96	RP-221714	3186	1	A	Clarification on the rmtc-Config-r16	17.1.0
	RP-96	RP-221728	3187	1	F	Corrections for TRS-based SCell activation	17.1.0
	RP-96	RP-221727	3190	-	A	Addressing inconsistency for RRM measurement rules	17.1.0
	RP-96	RP-221765	3193	-	A	Introduction of uplink RRC Segmentation capability	17.1.0
	RP-96	RP-221718	3194	1	B	Introducing IAB MAC CE Configurations in RRC	17.1.0
	RP-96	RP-221761	3195	-	F	Miscellaneous non-controversial corrections Set XIV	17.1.0
	RP-96	RP-221712	3197	-	A	Correction for the need code and conditions for optional fields in PC5 RRC message	17.1.0
	RP-96	RP-221563	3202	-	F	Correction on SL DRX configuration for SL Relay	17.1.0
	RP-96	RP-221794	3204	1	A	HARQ-ACK multiplexing on PUSCH in the absence of PUCCH	17.1.0
	RP-96	RP-221739	3205	1	F	Corrections for SL enhancements	17.1.0
09/2022	RP-97	RP-222524	3097	3	B	Introduction of DC location report for more than 2CCs	17.2.0
	RP-97	RP-222525	3237	3	F	Correction on RRC for 71GHz	17.2.0
	RP-97	RP-222527	3244	1	B	Release-17 UE capabilities based on R1 and R4 feature lists (TS38.331)	17.2.0
	RP-97	RP-222525	3254	1	F	Miscellaneous CR on TS 38.331 for ePowSav	17.2.0
	RP-97	RP-222519	3272	-	A	Correction to 38.331 on NPN-only cell	17.2.0
	RP-97	RP-222519	3281	1	A	NR-DC Power Control	17.2.0
	RP-97	RP-222516	3285	1	A	Corrections on s-MeasureConfig in NR	17.2.0
	RP-97	RP-222523	3289	2	F	MBS corrections for RRC	17.2.0
	RP-97	RP-222524	3303	2	F	Correction CR for QoE Measurement Collection in NR	17.2.0
	RP-97	RP-222523	3315	1	F	Correction for Simultaneous Transmission of SR and PUSCH	17.2.0
	RP-97	RP-222521	3321	1	A	Correction for SRS-PeriodicityAndOffset	17.2.0
	RP-97	RP-222522	3323	1	F	Miscellaneous corrections to NR coverage enhancements	17.2.0
	RP-97	RP-222523	3325	2	F	Corrections for Release-17 feMIMO	17.2.0
	RP-97	RP-222524	3326	2	F	Corrections for Release-17 NTN	17.2.0
	RP-97	RP-222525	3334	2	F	Corrections on TS 38.331 for RAN Slicing	17.2.0
	RP-97	RP-222525	3340	2	F	RRC corrections for SDT	17.2.0
	RP-97	RP-222518	3347	1	A	Miscellaneous CR on 38.331	17.2.0
	RP-97	RP-222524	3348	2	F	Miscellaneous corrections on TS 38.331 for SL enhancements	17.2.0
	RP-97	RP-222520	3350	-	A	Correction to add EHC context in UE Inactive AS context	17.2.0
	RP-97	RP-222523	3351	-	F	Correction to the field description of usage-pdc	17.2.0
	RP-97	RP-222524	3353	2	F	Miscellaneous correction for Positioning	17.2.0
	RP-97	RP-222523	3355	1	F	Rapporteur Miscellaneous RRC Corrections for eIAB	17.2.0
	RP-97	RP-222526	3359	3	F	Correction to MINT - applicableDisasterInfoList [MINT]	17.2.0
	RP-97	RP-222525	3362	1	F	Miscellaneous non-controversial corrections Set XV	17.2.0
	RP-97	RP-222520	3395	1	A	Correction of PUSCH repetition configuration	17.2.0
	RP-97	RP-222518	3397	1	A	Clarification of NULL security algorithm	17.2.0
	RP-97	RP-222525	3400	1	F	Miscellaneous corrections for RedCap WI	17.2.0
	RP-97	RP-222516	3407	1	A	Corrections on measurement report triggering	17.2.0
	RP-97	RP-222520	3417	1	A	Clarification on headerCompression for DAPS bearer	17.2.0
	RP-97	RP-222522	3422	2	F	Miscellaneous correction of NR RRC support for MUSIM	17.2.0
	RP-97	RP-222519	3424	1	A	Correction for PUSCH-PowerControl field descriptions for 2-step RACH	17.2.0
	RP-97	RP-222520	3430	1	A	Correction on PDCCH blind detection capability in CA	17.2.0
	RP-97	RP-222517	3438	1	A	CR on 38.331 for sn-FieldLength change for the case of bearer type change	17.2.0
	RP-97	RP-222523	3440	-	F	CR on 38.331 of field description in PUCCH-Config for PUCCH Carrier Switch	17.2.0
	RP-97	RP-222518	3451	1	A	Correction on Missing UE behavior on sidelink reset	17.2.0
	RP-97	RP-222516	3453	1	A	Clarification on codebookParametersPerBC parameter for extension of CSI-RS capabilities reporting	17.2.0
	RP-97	RP-222519	3455	1	A	Make PC1.5 an early implementation candidate	17.2.0
	RP-97	RP-222522	3459	3	F	Corrections for further MR-DC enhancements	17.2.0
	RP-97	RP-222525	3465	-	F	Correction on UE behaviour about UDC in RRC resume procedure	17.2.0
	RP-97	RP-222524	3466	1	F	RRC corrections for sidelink relay	17.2.0
	RP-97	RP-222522	3467	-	F	MsgA PUSCH resource release upon T304 expiry for SCG	17.2.0
	RP-97	RP-222525	3469	-	F	Correction for features applicable for common signalling for RACH Partitioning	17.2.0
	RP-97	RP-222523	3470	-	F	RRC Correction for SON MDT	17.2.0
	RP-97	RP-222524	3471	-	F	Correction on measurement gap enhancement configurations	17.2.0
	RP-97	RP-222521	3473	1	A	Correction on mpsPriorityIndication	17.2.0
	RP-97	RP-222524	3474	2	F	Correction for power-saving resource allocation	17.2.0
	RP-97	RP-222524	3475	-	F	Clarification on Joint Gap Configuration	17.2.0
	RP-97	RP-222527	3477	-	A	Correction to additionalSpectrumEmission for UL CA in n77 for the US	17.2.0
	RP-97	RP-222527	3478	-	F	Correction to additionalSpectrumEmission for UL CA in n77 for Canada	17.2.0
	RP-97	RP-222526	3479	-	B	Start drx-HARQ-RTT-TimerUL after last repetition [ulHARQ_RTT_Timer]	17.2.0
	RP-97	RP-222524	3480	-	F	Correction on maxNrofRemoteUE	17.2.0
	RP-97	RP-222522	3481	-	F	Corrections on CRS-IM network assistance information	17.2.0
	RP-97	RP-222553	3483	1	B	38.331 CR for introduction of MBS PDSCH FDM capabilities	17.2.0

12/2022	RP-98	RP-223404	3243	1	A	Correction to firstOFDMSymbolInTimeDomain	17.3.0
	RP-98	RP-223410	3276	5	F	FR2-2 and CCA configuration	17.3.0
	RP-98	RP-223414	3486	3	F	Correction to explicit indication of SI Scheduling window position [SI-SCHEDULING]	17.3.0
	RP-98	RP-223409	3497	2	F	CRS-IM default network configuration assumptions for MBSFN configuration in non-DSS scenario	17.3.0
	RP-98	RP-223406	3500	4	F	MBS corrections for RRC	17.3.0
	RP-98	RP-223410	3507	3	F	Clarification on the NR HST configuration	17.3.0
	RP-98	RP-223406	3532	1	A	Correction on LCID assignment for SL LCH	17.3.0
	RP-98	RP-223411	3534	5	F	Miscellaneous correction for Positioning	17.3.0
	RP-98	RP-223412	3541	3	F	Rapporteur CR on TS 38.331 for SL enhancements	17.3.0
	RP-98	RP-223414	3548	3	C	Correction on E-UTRA cell selection during emergency service fallback and EPS fallback for emergency call [CellSelection_EmergencyFallback]	17.3.0
	RP-98	RP-223412	3549	3	F	Miscellaneous RRC CR for SL relay	17.3.0
	RP-98	RP-223414	3557	2	F	Correction to disasterRoamingFromAnyPLMN [MINT]	17.3.0
	RP-98	RP-223409	3563	5	F	Corrections for further MR-DC enhancements	17.3.0
	RP-98	RP-223411	3568	3	F	Corrections to intra-band UL CA DC default location	17.3.0
	RP-98	RP-223410	3569	3	F	Corrections for Release-17 feMIMO	17.3.0
	RP-98	RP-223411	3570	2	F	Corrections for Release-17 NR NTN	17.3.0
	RP-98	RP-223414	3577	2	B	Parallel PRACH and SRS/PUCCH/PUSCH transmissions across CCs in intra-band non-contiguous CA [NC-PRACH-SimulTx]	17.3.0
	RP-98	RP-223410	3606	3	F	Correction to RRC for 71 GHz	17.3.0
	RP-98	RP-223413	3608	2	F	RRC corrections for SDT	17.3.0
	RP-98	RP-223410	3614	1	F	Correction to PDC in RRC	17.3.0
	RP-98	RP-223406	3619	1	A	Miscellaneous CR on 38.331	17.3.0
	RP-98	RP-223415	3621	2	B	Release-17 UE capabilities based on R1 and R4 feature lists (TS38.331)	17.3.0
	RP-98	RP-223410	3633	2	F	Clarification on the TCI assumption for RSSI measurement for FR2-2	17.3.0
	RP-98	RP-223404	3641	1	A	38.331 CR on the periodicity of the MIB	17.3.0
	RP-98	RP-223412	3656	2	F	Miscellaneous corrections on TS 38.331 for SL enhancements	17.3.0
	RP-98	RP-223404	3678	2	F	Miscellaneous non-controversial corrections Set XVI	17.3.0
	RP-98	RP-223413	3698	2	F	Corrections related to FeatureCombinationPreambles	17.3.0
	RP-98	RP-223411	3703	2	F	Correction CR for QoE measurements in NR	17.3.0
	RP-98	RP-223486	3704	2	C	Higher granularity for per-FR gap capability[MaxCCPerFRGap]	17.3.0
	RP-98	RP-223413	3709	1	F	CR on 38.331 for BFD relaxation when two BFD-RS sets are configured	17.3.0
	RP-98	RP-223404	3711	2	A	Exclude the suspendConfig in the UE Inactive AS context	17.3.0
	RP-98	RP-223409	3723	-	F	Clarifications on DMRS bundling for NR Coverage Enhancements	17.3.0
	RP-98	RP-223411	3729	1	F	Corrections on VIRP configuration and gapPriority description	17.3.0
	RP-98	RP-223411	3732	1	F	Miscellaneous corrections for RedCap W1	17.3.0
	RP-98	RP-223412	3736	2	F	Clarification on the determination of NSAG with the NSAG priority	17.3.0
	RP-98	RP-223413	3741	1	F	RLM and BFD relaxation reporting configurations are missed in the field description of otherConfig while being configured for SCG	17.3.0
	RP-98	RP-223406	3751	2	F	Correction on PUSCH configuration	17.3.0
	RP-98	RP-223407	3753	-	A	Correction on frequency hopping	17.3.0
	RP-98	RP-223407	3757	-	A	Clarification on the NR HST configuration	17.3.0
	RP-98	RP-223408	3760	2	A	Clarification on inter-frequency no gap measurements in NR-DC	17.3.0
	RP-98	RP-223409	3761	1	F	Correction to support repetition on PDSCH time domain resource allocation for DCI format 1-2	17.3.0
	RP-98	RP-223413	3764	-	F	RRC correction on update of last used cell	17.3.0
	RP-98	RP-223409	3768	-	F	Correction on re-establishment procedure while T346g is running	17.3.0
	RP-98	RP-223408	3770	1	F	RRC Correction for SON MDT	17.3.0
	RP-98	RP-223411	3771	-	F	Correction for RACH partitioning with both 2-step and 4-step RA configurations	17.3.0
03/2023	RP-99	RP-230690	3777	1	F	RRC correction on epochTime	17.4.0
	RP-99	RP-230691	3780	1	F	Corrections to control plane procedures for RedCap UEs	17.4.0
	RP-99	RP-230694	3786	-	F	Corrections to on-demand SI request	17.4.0
	RP-99	RP-230690	3795	1	F	IOT bit for inter satellite measurement (38.331)	17.4.0
	RP-99	RP-230691	3800	1	F	Correction on RACH configuration for RedCap	17.4.0
	RP-99	RP-230686	3805	1	A	Correction on T350 stop	17.4.0
	RP-99	RP-230692	3811	2	F	Clarification on ensuring valid version of SIB17	17.4.0
	RP-99	RP-230686	3816	1	A	Correction to usage of pusch-TimeDomainAllocation	17.4.0
	RP-99	RP-230693	3817	4	F	Corrections for SDT operation for REDCAP without CD-SSB	17.4.0
	RP-99	RP-230689	3818	1	F	CP corrections for NR operation to 71GHz	17.4.0
	RP-99	RP-230688	3819	1	F	SDT CP corrections	17.4.0
	RP-99	RP-230691	3820	-	F	Correction to RAN visible periodicity definition	17.4.0
	RP-99	RP-230690	3823	1	F	Clarification on measurement relaxation in NTN	17.4.0
	RP-99	RP-230689	3827	-	F	Channel Access Control for msg1/msgA in FR2-2	17.4.0
	RP-99	RP-230685	3830	-	A	Corrections for PUCCH SCell	17.4.0
	RP-99	RP-230685	3842	2	A	Clarification on RLC bearer re-association	17.4.0
	RP-99	RP-230688	3851	1	F	Miscellaneous correction of NR RRC support for MUSIM	17.4.0
	RP-99	RP-230686	3853	1	A	Correction on SRS for positioning	17.4.0
	RP-99	RP-230692	3854	1	F	Correction in Remote UE synchronization	17.4.0
	RP-99	RP-230691	3855	-	F	Clarification on QoE configuration for Layer-2 based UE-to-Network Relay	17.4.0

	RP-99	RP-230690	3861	-	F	Clarification on essential SIB19 for NR NTN	17.4.0
	RP-99	RP-230692	3865	1	F	Corrections on SL Relay	17.4.0
	RP-99	RP-230690	3868	-	F	Clarification on MBS neighbour cell list	17.4.0
	RP-99	RP-230691	3869	1	F	Corrections for eDRX on IDLE eDRX cycle	17.4.0
	RP-99	RP-230691	3870	-	F	Correction for hyperSFN on SI update	17.4.0
	RP-99	RP-230692	3874	-	F	Clarification on dl-P0-PSBCH, dl-P0-PSSCH-PSCCH and dl-P0-PSFCH for OoC Remote UE	17.4.0
	RP-99	RP-230691	3880	2	F	Correction on RRC configuration for RedCap	17.4.0
	RP-99	RP-230686	3883	1	A	Conditional inclusion of SBAS ID in posSIBs	17.4.0
	RP-99	RP-230689	3887	-	F	Correction on the field descriptions of nrofDownlinkSlots/nrofUplinkSlots	17.4.0
	RP-99	RP-230687	3890	2	A	Correction on UL RRC segmentation processing delay requirements	17.4.0
	RP-99	RP-230688	3891	2	F	RRC Configuration for Positioning Measurement Gap Activation/Deactivation Request MAC CE	17.4.0
	RP-99	RP-230694	3898	2	F	Miscellaneous non-controversial corrections Set XVII	17.4.0
	RP-99	RP-230691	3909	-	F	Correction to conditional presence of parameters for SRB4	17.4.0
	RP-99	RP-230689	3913	2	F	Corrections on feMIMO	17.4.0
	RP-99	RP-230691	3917	1	F	Correction on the filed descriptions of NeedForGaps in 38.331	17.4.0
	RP-99	RP-230685	3919	-	A	Band differentiation for capability pusch-RepetitionTypeA-r16	17.4.0
	RP-99	RP-230690	3920	-	F	CR to TS 38.331 on MBS neighbour cell list	17.4.0
	RP-99	RP-230687	3926	1	F	Correction to security protection requirement for ULDedicatedMessageSegment	17.4.0
	RP-99	RP-230689	3930	-	F	Correction on BWP for CSI-RS in TCI-State	17.4.0
	RP-99	RP-230692	3931	-	F	Corrections on 38.331	17.4.0
	RP-99	RP-230692	3932	-	F	Miscellaneous correction to SL Relay	17.4.0
	RP-99	RP-230690	3933	1	F	Miscellaneous RRC corrections for MBS	17.4.0
	RP-99	RP-230687	3935	1	A	Clarification that IAB-MT follows the UE behaviour for cell barring procedure as defined in TS 38.304	17.4.0
	RP-99	RP-230694	3936	-	F	Introducing deriveSSB-IndexFromCellInter capability for non-NCSG UEs	17.4.0
	RP-99	RP-230690	3937	-	F	Correction to PDD reporting	17.4.0
	RP-99	RP-230689	3938	-	F	Clarification on BFD-RS configuration	17.4.0
	RP-99	RP-230690	3940	-	F	Corrections on satellite ephemeris indication	17.4.0
	RP-99	RP-230689	3941	-	F	Corrections on the unified TCI-state configuration for cross cell referencing	17.4.0
	RP-99	RP-230690	3942	-	B	Release-17 MBS UE capabilities based on latest R1 feature list (TS 38.331)	17.4.0
	RP-99	RP-230689	3943	-	F	Rel.17 SON/MDT RRC Corrections	17.4.0
06/2023	RP-100	RP-231411	3894	4	A	SIB and PosSIB mappings to SI message	17.5.0
	RP-100	RP-231414	3946	3	F	Corrections on MBS Broadcast Configuration	17.5.0
	RP-100	RP-231414	3948	4	F	Correction to PDSCH Aggregation of MBS SPS	17.5.0
	RP-100	RP-231412	3956	2	F	Corrections on the figure of UE Positioning Assistance Information procedure	17.5.0
	RP-100	RP-231413	3961	2	F	Miscellaneous corrections for Ext71GHz	17.5.0
	RP-100	RP-231413	3964	2	F	Clarification for configured grant periodicity	17.5.0
	RP-100	RP-231414	3967	3	F	Corrections to paging for MBS	17.5.0
	RP-100	RP-231413	3968	2	F	Correction to RRC for 71 GHz on channel occupancy duration	17.5.0
	RP-100	RP-231414	3970	2	F	Correction on Need code of IE RLC-Config	17.5.0
	RP-100	RP-231415	3975	1	F	Correction on SI update for posSIB-r17	17.5.0
	RP-100	RP-231413	3977	2	F	Clarification to TS 38.331 on Enhanced BFR MAC CE for feMIMO	17.5.0
	RP-100	RP-231418	3979	3	F	Clarification on TN EUTRA capability reporting	17.5.0
	RP-100	RP-231410	3984	2	A	Clarification on RSSI measurement frequency	17.5.0
	RP-100	RP-231415	3988	2	F	Corrections on initial BWP configuration and NCD-SSB for RedCap	17.5.0
	RP-100	RP-231409	4001	3	A	Corrections on refServCellIndicator	17.5.0
	RP-100	RP-231418	4011	1	F	Correction on Event D1 for Rel-17 NTN	17.5.0
	RP-100	RP-231410	4013	2	A	Correction on the need code for secondary DRX group	17.5.0
	RP-100	RP-231414	4015	3	F	Correction to mtch-neighbourCell field description	17.5.0
	RP-100	RP-231415	4017	2	F	ResumeCause IE description correction	17.5.0
	RP-100	RP-231413	4020	3	F	Correction to timeSCGFailure	17.5.0
	RP-100	RP-231418	4021	3	F	Correction on missing referencing of the NTN spec in 38.331	17.5.0
	RP-100	RP-231418	4025	3	F	Correction on SMTC for NR NTN	17.5.0
	RP-100	RP-231414	4037	2	F	Corrections on MBS SPS configuration	17.5.0
	RP-100	RP-231418	4039	1	F	Clarification on T430 handling for target cell	17.5.0
	RP-100	RP-231418	4040	2	F	Correction on MIB configuration for NR NTN	17.5.0
	RP-100	RP-231414	4044	3	F	Miscellaneous RRC corrections for MBS	17.5.0
	RP-100	RP-231417	4050	2	F	Corrections to on-demand SI request	17.5.0
	RP-100	RP-231409	4053	2	A	Clarification on nas-SecurityParamFromNR field description	17.5.0
	RP-100	RP-231410	4060	3	A	Correction on pusch-RepetitionTypeB capability	17.5.0
	RP-100	RP-231416	4064	1	F	Miscellaneous corrections for SL relay	17.5.0
	RP-100	RP-231414	4065	4	F	Correction on Supporting MBS in SNPN	17.5.0
	RP-100	RP-231410	4068	1	A	Corrections including field description for transmission power	17.5.0
	RP-100	RP-231416	4069	1	F	Miscellaneous corrections on 38.331 for SL enhancements	17.5.0
	RP-100	RP-231415	4070	1	F	Clarification on applicability of slice-based RA	17.5.0
	RP-100	RP-231417	4071	1	F	Correction on measCyclePSCell used during SCG deactivation	17.5.0
	RP-100	RP-231413	4100	1	F	Corrections on R17 unified TCI framework	17.5.0
	RP-100	RP-231412	4101	1	F	Correction on scg-CellGroupConfig within RRC inter-node message	17.5.0

	RP-100	RP-231412	4102	-	F	Correction on PosSRS-RRC-Inactive-OutsideInitialUL-BWP	17.5.0
	RP-100	RP-231415	4107	1	F	Corrections on paging monitoring in eDRX	17.5.0
	RP-100	RP-231413	4110	-	F	Correction on timeSinceCHO-Reconfig in TS 38.331	17.5.0
	RP-100	RP-231418	4112	1	F	Different UE capability support between TN and NTN	17.5.0
	RP-100	RP-231416	4113	2	F	Sidelink discovery transmission upon reception of SIB12	17.5.0
	RP-100	RP-231415	4114	-	F	Control plane corrections for SDT	17.5.0
	RP-100	RP-231417	4117	2	F	Miscellaneous non-controversial corrections Set XVIII	17.5.0
	RP-100	RP-231418	4127	-	F	CR to 38.331 on Event D1	17.5.0
	RP-100	RP-231417	4132	2	A	Clarification on UAI for UL MIMO layers	17.5.0
	RP-100	RP-231416	4136	1	F	Corrections on deriving timer length of DRX timers for SL	17.5.0
	RP-100	RP-231416	4140	1	F	RRC corrections for SL Relay	17.5.0
	RP-100	RP-231410	4142	1	A	Correction to time domain resource assignment in NR-U	17.5.0
	RP-100	RP-231413	4144	1	F	Correction to RRC for 71GHz on scheduling and HARQ configuration for FR2-2	17.5.0
	RP-100	RP-231414	4147	1	F	Correction on gapAssociationPRS	17.5.0
	RP-100	RP-231413	4148	-	F	Correction on SCG failure scenario of MHI in TS 38.331	17.5.0
	RP-100	RP-231415	4154	-	F	Clarification on SDT configuration	17.5.0
	RP-100	RP-231411	4160	1	A	Clarification on reference cell for TCI state	17.5.0
	RP-100	RP-231414	4161	1	F	Correction for PLMN index in MCCH of SCell	17.5.0
	RP-100	RP-231418	4163	-	F	Correction on the description of kmac	17.5.0
	RP-100	RP-231415	4166	1	F	Correction on the applicable NSAG for slice based RA procedure	17.5.0
	RP-100	RP-231413	4167	-	F	Correction to the handling of RLF-Report after successful HO	17.5.0
	RP-100	RP-231417	4169	1	F	Support of releasing crossCarrierSchedulingConfig	17.5.0
	RP-100	RP-231416	4170	1	F	Clarification on remote UE reception of SIB1	17.5.0
	RP-100	RP-231416	4171	1	F	Handling of PC5 connection release during RRC re-establishment	17.5.0
	RP-100	RP-231411	4172	1	A	Correction on the release of logged measurement configuration as well as logged measurement information	17.5.0
	RP-100	RP-231411	4174	-	A	Correction to the setting of locationInfo in MeasResultSCG-Failure	17.5.0
09/2023	RP-101	RP-232570	3900	6	F	Addition of extended number range for NS value	17.6.0
	RP-101	RP-232565	3991	6	F	CSI-RS resource coordination in NR-DC	17.6.0
	RP-101	RP-232565	4158	3	A	Introduction of intra-band EN-DC contiguous capability for UL	17.6.0
	RP-101	RP-232566	4176	-	A	Correction on PUCCH resource field description and SSB transmission initiation	17.6.0
	RP-101	RP-232667	4189	2	F	Correction on Configuration of Enhanced Type 3 HARQ-ACK Codebook for PUCCH group	17.6.0
	RP-101	RP-232667	4190	2	F	Correction on PUCCH repetition for PUCCH Format 2	17.6.0
	RP-101	RP-232667	4192	2	F	Miscellaneous RRC corrections for MBS	17.6.0
	RP-101	RP-232568	4202	-	F	Corrections on the unified TCI-state configuration for 38.331	17.6.0
	RP-101	RP-232568	4206	1	F	RRC restriction on multi-TRP schemes	17.6.0
	RP-101	RP-232570	4220	1	F	Correction to RRC for 71 GHz on multi-PDSCH	17.6.0
	RP-101	RP-232667	4234	1	F	Correction on GNSS-ID for NavIC A-GNSS	17.6.0
	RP-101	RP-232565	4238	1	F	Miscellaneous non-controversial corrections Set XIX	17.6.0
	RP-101	RP-232567	4246	-	A	Clarification to the setting of locationInfo in MeasResultSCG-Failure	17.6.0
	RP-101	RP-232567	4248	2	A	Clarification on the PLMN check for the reconnectCellId in the RLF report	17.6.0
	RP-101	RP-232568	4255	-	F	Filter of SRS carrier switching capabilities	17.6.0
	RP-101	RP-232566	4260	1	A	Correction on primaryPath for fast MCG link recovery	17.6.0
	RP-101	RP-232566	4264	1	A	Correction on CHO for R17	17.6.0
	RP-101	RP-232570	4265	-	F	Miscellaneous corrections for power saving features	17.6.0
	RP-101	RP-232570	4279	-	F	Correction on 2-step RACH configuration for feature combination	17.6.0
	RP-101	RP-232568	4294	-	F	Correction for group based beam reporting configuration	17.6.0
	RP-101	RP-232567	4295	1	A	Redirection with MPS correction for resume cause	17.6.0
	RP-101	RP-232566	4298	-	A	Miscellaneous NR V2X RRC corrections	17.6.0
	RP-101	RP-232667	4299	-	F	Miscellaneous corrections for SL enhancements	17.6.0
	RP-101	RP-232667	4300	1	F	RRC corrections for SL relay	17.6.0
	RP-101	RP-232567	4302	-	A	Correction on location configuration for WLAN, BT and sensor for SON and MDT features	17.6.0
	RP-101	RP-232568	4303	-	F	Agreed corrections for Rel-17 SONMDT (Ericsson)	17.6.0
	RP-101	RP-232698	4305	1	F	Correction to SCell PRACH power scaling for UL CA	17.6.0
12/2023	RP-102	RP-233888	2867	6	B	Introduction of FR2 FBG2 CA BW classes	17.7.0
	RP-102	RP-233887	4016	5	F	Correction to RRC for 71 GHz on multi-PUSCH	17.7.0
	RP-102	RP-233887	4088	3	F	Further correction to RRC for 71 GHz on multi-PUSCH	17.7.0
	RP-102	RP-233889	4318	2	F	Correction on Type1 HARQ-ACK codebook generation	17.7.0
	RP-102	RP-233887	4327	3	F	Corrections on extension of AreaConfiguration	17.7.0
	RP-102	RP-233885	4329	1	A	Correction of SL synchronisation measurement	17.7.0
	RP-102	RP-233888	4336	2	F	Correction on LocationMeasurementIndication procedure for positioning	17.7.0
	RP-102	RP-233888	4340	2	F	Correction on RedCap initial UL/DL BWP	17.7.0
	RP-102	RP-233890	4341	1	F	Clarification on the meaning of nogap-noncs	17.7.0
	RP-102	RP-233887	4348	1	F	Logging previousPSCellId in case of SCG addition failure	17.7.0
	RP-102	RP-233887	4349	1	F	Successful handover report is missing under ObtainCommonLocationInfo	17.7.0
	RP-102	RP-233890	4351	2	F	Notes in the RRC release procedure for NR-NTN	17.7.0
	RP-102	RP-233884	4363	2	F	Miscellaneous non-controversial corrections Set XX	17.7.0

	RP-102	RP-233890	4382	1	F	Clarification of configuration of transmissionComb in IE SRS-Resource	17.7.0
	RP-102	RP-233888	4389	1	F	RRC corrections for SL relay	17.7.0
	RP-102	RP-233888	4390	1	F	Misc RRC corrections for SL enhancements	17.7.0
	RP-102	RP-233889	4392	-	F	Corrections for SSB to CG PUSCH mapping	17.7.0
	RP-102	RP-233888	4395	-	F	Correction to support autonomous change of UE channel bandwidth during RACH	17.7.0
	RP-102	RP-233887	4404	-	F	Correction to SCell activation/deactivation	17.7.0
	RP-102	RP-233885	4410	-	A	Correction on carrier frequency for NR SL RSRP measurement	17.7.0
	RP-102	RP-233890	4413	1	F	Removal of ambiguous term 'legacy'	17.7.0
	RP-102	RP-233886	4418	-	A	Correction to 38.331 on GNSS-ID	17.7.0
	RP-102	RP-233888	4423	1	F	Correction on SL-DRX reject reporting to gNB	17.7.0
	RP-102	RP-233888	4424	1	F	Correction on the SL destinaitons in SUI message	17.7.0
	RP-102	RP-233888	4429	1	F	Clarification on the search space for RedCap	17.7.0
	RP-102	RP-233888	4430	1	F	Correction for the selected band for HD-FDD capability checking by RedCap UE	17.7.0
	RP-102	RP-233886	4450	-	A	Setting the content of the RA report for the selected beam	17.7.0
	RP-102	RP-233888	4462	1	F	Missing correction for SBAS ID presence in Rel-17 SI scheduling [SI-SCHEDULING]	17.7.0
	RP-102	RP-233890	4463	1	F	Corrections on description of epochTime and reference point of UTC time and t-Service	17.7.0
	RP-102	RP-233888	4466	1	F	Correction on SL relay RRC	17.7.0
	RP-102	RP-233885	4474	-	A	Correction on type-1 SL CG	17.7.0
	RP-102	RP-233888	4478	1	F	Correction on multipleCORESET for RedCap UEs	17.7.0
	RP-102	RP-233889	4485	-	F	Correction to SDT-Config handling	17.7.0
	RP-102	RP-233888	4489	2	F	Correction on transmission of SSR Assistance Data based on BDS B1C	17.7.0
	RP-102	RP-233889	4494	-	F	Correction to support higher power limit capability for inter-band UL EN-DC	17.7.0
	RP-102	RP-233887	4498	1	B	Introduction of new CA BW classes for FR2-2	17.7.0
	RP-102	RP-233888	4502	3	F	Correction on NCD-SSB time offset for RedCap UEs in TDD	17.7.0
	RP-102	RP-233888	4505	-	F	Correction on field description related to CBR-based transmission	17.7.0
	RP-102	RP-233884	4506	1	F	Simultaneous PUSCH and PUCCH transmissions of same priority on different inter-band cells [SimultaneousPUSCH-PUCCH]	17.7.0
	RP-102	RP-233889	4508	-	F	Clarification on cellBarredNTN in RRC_CONNECTED	17.7.0
12/2023	RP-102	RP-233884	3971	4	C	Adding SR periodicities for 30 and 120 kHz subcarrier spacing [SR-Periods-30-120-kHz]	18.0.0
	RP-102	RP-233881	4014	4	B	Introduction of 1-symbol PRS in 38.331[1symbol_PRS]	18.0.0
	RP-102	RP-233915	4063	6	B	Introduction of further measurement gap enhancements	18.0.0
	RP-102	RP-233881	4066	6	C	Downlink positioning support and posSIB request for L2 UE-to-network remote UE [PosL2RemoteUE]	18.0.0
	RP-102	RP-233882	4109	4	B	GNSS LOS/NLOS posSIB broadcast assistance information [GNSS LOS/NLOS]	18.0.0
	RP-102	RP-233890	4123	1	B	RedCap CFR for MBS broadcast [RedCapMBS_Bcast]	18.0.0
	RP-102	RP-233898	4162	5	B	Introduction of Network Controlled Repeaters in RRC spec	18.0.0
	RP-102	RP-233905	4164	5	B	Introduction of In-Device Co-existence (IDC) enhancements for NR	18.0.0
	RP-102	RP-233902	4194	3	B	Introduction of MT-SDT	18.0.0
	RP-102	RP-233911	4258	3	B	Introduction of URLLC and Timing Resiliency	18.0.0
	RP-102	RP-233882	4296	2	C	SSR Satellite PCV Residuals [Rel18PCV]	18.0.0
	RP-102	RP-233893	4360	3	B	Introduction of R18 DSS	18.0.0
	RP-102	RP-233882	4375	2	F	Enhancing SCell A2 event reporting [SCell_A2_Enh]	18.0.0
	RP-102	RP-233913	4380	2	B	Introduction of UE preference for multi-Rx operation in UAI	18.0.0
	RP-102	RP-233897	4391	3	B	Introduction of Rel-18 SL Evolution	18.0.0
	RP-102	RP-233917	4396	1	B	Signaling support for intra-band non-collocated NR-CA, EN-DC	18.0.0
	RP-102	RP-233938	4398	1	B	Introduction of support for BWP operation without restriction	18.0.0
	RP-102	RP-233903	4401	2	B	Introduction of NR MUSIM enhancements	18.0.0
	RP-102	RP-233912	4405	-	B	Introduction of R18 eNPN for TS 38.331	18.0.0
	RP-102	RP-233896	4406	2	B	Introduction of MIMO Evolution	18.0.0
	RP-102	RP-233882	4414	2	B	MUSIM paging cause forwarding [MUSIMpagingCause]	18.0.0
	RP-102	RP-233932	4416	1	B	Introduction of NR Support for UAV (Uncrewed Aerial Vehicles)	18.0.0
	RP-102	RP-233914	4422	2	B	Introduction of FR2 SCell enhancements	18.0.0
	RP-102	RP-233895	4433	4	B	Introduction of Further NR coverage enhancements in RRC	18.0.0
	RP-102	RP-233882	4435	1	B	Introduction of RRCRelease with resume indication for SDT [SDT_ReleaseEnh]	18.0.0
	RP-102	RP-233908	4436	2	B	Introduction of XR enhancements into TS 38.331	18.0.0
	RP-102	RP-233916	4437	1	B	Introduction of NR ATG in TS 38.331	18.0.0
	RP-102	RP-233882	4439	1	B	Introducing procedure for measurement sequence for intra-RAT and inter-RAT measurement [MeasSequence]	18.0.0
	RP-102	RP-233904	4441	2	B	Introduction of Rel-18 SL relay enhancements	18.0.0
	RP-102	RP-233910	4446	2	B	Introduction of Enhancement on NR QoE management and optimizations for diverse services	18.0.0
	RP-102	RP-233909	4452	1	B	CR to 38331 for introducing SON/MDT features in Rel-18	18.0.0
	RP-102	RP-233900	4453	1	B	Introduction of Network energy savings for NR	18.0.0
	RP-102	RP-233901	4454	1	B	Introduction of NR Positioning Enhancements	18.0.0

	RP-102	RP-233933	4457	1	B	Introduction of mobile IAB	18.0.0
	RP-102	RP-233957	4458	3	B	Introduction of further NR mobility enhancements	18.0.0
	RP-102	RP-233886	4469	1	B	Introduction of enhancements of delay measurements upon MO updates [SONMDT-enh]	18.0.0
	RP-102	RP-233882	4471	2	B	Enhancements for CG-SDT [CG-SDT-Enh]	18.0.0
	RP-102	RP-233899	4480	1	B	Introduction of eRedCap UEs	18.0.0
	RP-102	RP-233937	4488	1	B	Introduction of network RRC signalling for advanced receiver	18.0.0
	RP-102	RP-233907	4490	5	B	Introduction of eMBS to RRC	18.0.0
	RP-102	RP-233882	4492	2	F	Configuration of cell individual offset in ReportConfig [CIO_in_ReportConfig]	18.0.0
	RP-102	RP-233906	4501	1	B	Introduction of Rel-18 NR NTN enhancements	18.0.0
	RP-102	RP-233890	4504	-	B	PTM retransmission reception for multicast DRX with HARQ feedback disabled [PTM_ReTx_Mcast_HARQ_Disb]	18.0.0
	RP-102	RP-233894	4509	-	B	Introduction of Rel-18 Multi-carrier enhancements	18.0.0
	RP-102	RP-233940	4510	-	B	Introduction of Rel-18 UE capabilities	18.0.0
03/2024	RP-103	RP-240686	4428	2	B	Introduction of Rel-18 HST FR2 RRM enhancements	18.1.0
	RP-103	RP-240667	4445	3	B	UE capability for Enhanced channel raster	18.1.0
	RP-103	RP-240703	4512	1	B	Introduction of QCL-TypeD priorities for overlapping CORESETs in M-DCI/M-TRP operation [QCL-TypeD CORESET priority for M-TRP]	18.1.0
	RP-103	RP-240703	4513	1	B	Introduction of MAC CE based PL RS updates for Type-1 CG-PUSCH [PL RS Type 1 CG]	18.1.0
	RP-103	RP-240668	4516	1	F	Miscellaneous corrections to CE in RRC	18.1.0
	RP-103	RP-240656	4520	1	A	Correction to PDCCH configuration of (e)RedCap-specific initial BWP	18.1.0
	RP-103	RP-240699	4521	2	F	Correction on R18 SL	18.1.0
	RP-103	RP-240662	4522	2	F	Network energy savings for NR miscellaneous RRC CR	18.1.0
	RP-103	RP-240653	4524	1	A	Introduction of maximum aggregated bandwidth for FR1 CA and for FR2 intra-band CA	18.1.0
	RP-103	RP-240666	4531	1	F	Miscellaneous corrections on TS 38.331 for BWP operation without restriction	18.1.0
	RP-103	RP-240651	4536	1	A	Misc RRC corrections for NR V2X	18.1.0
	RP-103	RP-240691	4539	2	F	Correction to MIMO Evolution	18.1.0
	RP-103	RP-240772	4540	3	B	Introduction of emergency cause value for SL relay	18.1.0
	RP-103	RP-240650	4546	1	A	Clarification on ca-ParametersNRDC capability (Understanding#2)	18.1.0
	RP-103	RP-240657	4548	1	A	Misc RRC corrections for SL relay	18.1.0
	RP-103	RP-240700	4549	2	F	RRC corrections for Rel-18 SL relay enhancements	18.1.0
	RP-103	RP-240689	4550	1	F	RRC CR for Rel-18 Multi-carrier enhancements	18.1.0
	RP-103	RP-240703	4551	1	B	Introduction of Beam Failure for RA-SDT [RA-SDT_BeamFailure]	18.1.0
	RP-103	RP-240694	4552	1	F	SDT corrections for ASN.1 Review issues [CG-SDT-enh]	18.1.0
	RP-103	RP-240697	4555	1	F	Correction of Enhancement on NR QoE management and optimizations for diverse services	18.1.0
	RP-103	RP-240698	4557	1	A	Clarification on UE's behavior after MIB reception	18.1.0
	RP-103	RP-240654	4559	1	A	Corrections on uplink power control in unified TCI framework	18.1.0
	RP-103	RP-240701	4563	1	F	Corrections for NR Support for UAV (Uncrewed Aerial Vehicles)	18.1.0
	RP-103	RP-240703	4564	2	F	Miscellaneous corrections from ASN.1 review	18.1.0
	RP-103	RP-240698	4565	2	F	Miscellaneous corrections for eRedCap	18.1.0
	RP-103	RP-240707	4572	3	B	Introduction of 2Rx XR UE [2Rx_XR_Device]	18.1.0
	RP-103	RP-240655	4576	-	A	Correction on cg-UCI-Multiplexing	18.1.0
	RP-103	RP-240656	4578	1	A	Correction on FD-FDD capability checking for RedCap UE in TDD band	18.1.0
	RP-103	RP-240655	4582	2	A	Correction to 38.331 for NR NTN	18.1.0
	RP-103	RP-240670	4583	1	F	Correction on NR MUSIM enhancements	18.1.0
	RP-103	RP-240669	4585	1	F	Correction on network RRC signalling for advanced receiver	18.1.0
	RP-103	RP-240690	4586	1	F	Correction on further measurement gap enhancements	18.1.0
	RP-103	RP-240665	4587	1	F	Miscellaneous corrections to NR ATG	18.1.0
	RP-103	RP-240654	4590	1	A	Clarification on the condition of subband reporting	18.1.0
	RP-103	RP-240688	4593	2	F	MBS Rapporteur CR for RRC	18.1.0
	RP-103	RP-240703	4597	2	B	Introduction of RRC parameters for HARQ multiplexing [HARQ-ACK MUX on PUSCH]	18.1.0
	RP-103	RP-240678	4598	-	F	RRC CR addressing MultiRx RIL(s)	18.1.0
	RP-103	RP-240696	4599	1	F	RRC Positioning Corrections based upon RILs	18.1.0
	RP-103	RP-240693	4604	1	F	Miscellaneous corrections on Mobile IAB	18.1.0
	RP-103	RP-240692	4606	1	F	Miscellaneous corrections on further mobility enhancements in NR	18.1.0
	RP-103	RP-240703	4608	2	F	[E073][H059][B013]Clarification on cell individual offset in ReportConfig [CIO_in_ReportConfig]	18.1.0
	RP-103	RP-240703	4609	-	F	[H058] Enhancing SCell A2 event reporting [SCell_A2_Enh]	18.1.0
	RP-103	RP-240695	4610	1	F	Corrections to Rel-18 NR NTN enhancements	18.1.0
	RP-103	RP-240702	4611	1	F	RRC corrections for XR	18.1.0
	RP-103	RP-240650	4614	1	A	Correction on reducedCCsDL and reducedCCsUL in overheating report	18.1.0
	RP-103	RP-240698	4616	1	A	Clarification on RACH-ConfigCommon for CFRA	18.1.0
	RP-103	RP-240731	4617	1	F	Miscellaneous RRC corrections for Network-controlled repeaters	18.1.0
	RP-103	RP-240687	4621	1	F	Miscellaneous corrections for IDC	18.1.0
	RP-103	RP-240663	4622	1	F	[H075-H077] Miscellaneous corrections on intra-band non-collocated NR-CA, EN-DC	18.1.0

	RP-103	RP-240656	4623	1	A	Correction on SL DRX for broadcast and groupcast handling missed in RRC reconfiguration	18.1.0
	RP-103	RP-240676	4624	-	F	Corrections to URLLC and Timing Resiliency	18.1.0
	RP-103	RP-240652	4627	-	A	Clarification on UE capability segmentation	18.1.0
	RP-103	RP-240692	4628	1	B	eEMR and IMR CR	18.1.0
	RP-103	RP-240703	4629	-	B	Introduction of Multiple PUSCH scheduling by single DCI for non-consecutive slots in FR1 [M-PUSCH in FR1]	18.1.0
	RP-103	RP-240653	4631	-	A	RRC CR for clarification on R16 skipping UL transmission and R17 TBoMS	18.1.0
	RP-103	RP-240693	4636	2	B	Generalization of RACH-less handover [RACH-lessHO]	18.1.0
	RP-103	RP-240674	4637	-	F	Corrections to 38331 for Rel-18 SONMDT	18.1.0
	RP-103	RP-240708	4638	2	B	Corrections and Updates to UE capabilities for Rel-18 WIs, including TEI18 [HARQ-ACK MUX on PUSCH]	18.1.0
	RP-103	RP-240658	4639	2	B	Introduction of TxDiversity for 2Tx capability	18.1.0
	RP-103	RP-240489	4642	-	A	Correction to optionality of bandList-v1770	18.1.0
06/2024	RP-104	RP-241584	4525	4	B	Introduction of NR support for dedicated spectrum less than 5MHz for FR1	18.2.0
	RP-104	RP-241543	4570	4	B	Introduction of barring exemption for RedCap UEs for emergency calls [RedCap_EM_Call]	18.2.0
	RP-104	RP-241543	4632	5	F	Correction on Redcap 1 Rx and 2 Rx barring	18.2.0
	RP-104	RP-241544	4645	1	F	Remove of AS condition checking of SUI for U2N Relay communication	18.2.0
	RP-104	RP-241562	4646	3	F	Correction on Release-18 SL Evolution	18.2.0
	RP-104	RP-241554	4648	3	A	CEF and RLF reporting for (e)RedCap UEs	18.2.0
	RP-104	RP-241553	4651	2	A	Correction to PDCP configuration for multicast MRB	18.2.0
	RP-104	RP-241579	4667	4	F	Corrections to URLLC and Timing Resiliency	18.2.0
	RP-104	RP-241582	4673	1	F	Correction on RRC signalling for advanced receiver	18.2.0
	RP-104	RP-241583	4679	1	F	[V994][V995] Miscellaneous corrections on TS 38.331 for BWP operation without restriction	18.2.0
	RP-104	RP-241555	4683	2	A	Miscellaneous RRC corrections for SL relay	18.2.0
	RP-104	RP-241569	4684	3	F	RRC corrections for Rel-18 SL relay enhancements	18.2.0
	RP-104	RP-241567	4687	2	F	SDT corrections for harmonizing T319a and SDT ongoing labels	18.2.0
	RP-104	RP-241572	4688	3	F	Miscellaneous corrections for eMBS	18.2.0
	RP-104	RP-241543	4689	3	F	Correction on MBS search spaces configuration for (e)Redcap [RedCapMBS_Bcast]	18.2.0
	RP-104	RP-241565	4692	2	F	Network energy savings for NR miscellaneous RRC CR	18.2.0
	RP-104	RP-241571	4693	3	F	Corrections for NR Support for UAV (Uncrewed Aerial Vehicles)	18.2.0
	RP-104	RP-241573	4700	3	F	RRC corrections for XR	18.2.0
	RP-104	RP-241577	4701	2	F	Miscellaneous corrections on Mobile IAB	18.2.0
	RP-104	RP-241550	4704	1	A	Dummy the rrc-TransactionIdentifier field from IABOtherInformation	18.2.0
	RP-104	RP-241574	4705	2	F	Miscellaneous corrections on further mobility enhancements in NR	18.2.0
	RP-104	RP-241577	4706	2	F	Rapporteur corrections on RRC for the generalization of RACH-less [RACH-lessHO]	18.2.0
	RP-104	RP-241543	4707	2	F	Clarification on CIO configured within ReportConfig [CIO_in_ReportConfig]	18.2.0
	RP-104	RP-241543	4713	3	F	Correction CR for QoE measurements and conditional handover	18.2.0
	RP-104	RP-241567	4717	2	F	Miscellaneous corrections from ASN.1 review Q2	18.2.0
	RP-104	RP-241551	4725	2	A	Correction on posSIB(s) acquisition [SI-SCHEDULING]	18.2.0
	RP-104	RP-241564	4729	3	F	Miscellaneous corrections for eRedCap	18.2.0
	RP-104	RP-241555	4732	1	A	Correction on SidelinkUEInformationNR	18.2.0
	RP-104	RP-241551	4736	3	A	Introduction of Inter-node Coordination on the Aggregated Bandwidth for the NR-DC (r18)	18.2.0
	RP-104	RP-241553	4746	1	A	Clarification on usage of LEO or NGSO	18.2.0
	RP-104	RP-241551	4751	4	A	Introduction of new intra-band EN-DC capabilities for inter-band EN-DC	18.2.0
	RP-104	RP-241544	4755	3	F	Correction on TRS in idle and inactive	18.2.0
	RP-104	RP-241554	4758	3	A	Correction on tx profile for SL DRX	18.2.0
	RP-104	RP-241566	4759	3	F	Miscellaneous and RRC Positioning RILs based Corrections	18.2.0
	RP-104	RP-241558	4761	4	F	Miscellaneous corrections to Rel-18 NR NTN	18.2.0
	RP-104	RP-241543	4767	1	F	[B021] Missing posSibType2-17a in list of posSIB types [PosL2RemoteUE]	18.2.0
	RP-104	RP-241544	4771	2	F	Clarification RLM/BFD relaxation and short DRX	18.2.0
	RP-104	RP-241561	4775	2	F	Correction to MIMO Evolution	18.2.0
	RP-104	RP-241568	4777	1	F	Correction on NR MUSIM enhancements	18.2.0
	RP-104	RP-241551	4780	1	A	Clarification of configured grant in shared spectrum	18.2.0
	RP-104	RP-241576	4781	1	F	Correction of Enhancement on NR QoE management and optimizations for diverse services	18.2.0
	RP-104	RP-241567	4787	1	F	[S081] Clarification for order of list in PagingRecordList	18.2.0
	RP-104	RP-241550	4793	2	A	Correction to Positioning SRS Configuration	18.2.0
	RP-104	RP-241555	4795	2	A	Correction on the UL TEG report	18.2.0
	RP-104	RP-241544	4799	2	F	Miscellaneous non-controversial corrections Set XXI	18.2.0
	RP-104	RP-241543	4803	2	B	Enhancements to measurement report [meas_report_enh]	18.2.0
	RP-104	RP-241564	4808	1	F	Clarification on RACH-ConfigCommon for PDCCH order based CFRA and SI request	18.2.0
	RP-104	RP-241563	4809	-	F	Miscellaneous RRC corrections for NCR	18.2.0
	RP-104	RP-241552	4812	3	A	Adding PCI and ARFCN of target cell for intra-RAT SHR	18.2.0
	RP-104	RP-241552	4814	3	A	Misclassification of RLF reports as Too Early HO failure	18.2.0

	RP-104	RP-241575	4815	2	F	Corrections to 38331 for Rel-18 SONMDT	18.2.0
	RP-104	RP-241543	4816	2	F	Correction on the configuration of Redcap CFR [RedCapMBS_Bcast]	18.2.0
	RP-104	RP-241549	4820	-	A	Clarification on SIB1 reception for ETWS/CMAS	18.2.0
	RP-104	RP-241549	4827	-	A	Corrections for SL RLC mode indication	18.2.0
	RP-104	RP-241555	4831	-	A	Clarification to s-MeasConfig for L2 U2N relay case	18.2.0
	RP-104	RP-241559	4832	1	F	Rapp RRC CR for MC enhancement	18.2.0
	RP-104	RP-241560	4833	1	F	Miscellaneous RRC corrections for Coverage Enhancements	18.2.0
	RP-104	RP-241554	4835	1	A	Correction on NR SL discovery transmission	18.2.0
	RP-104	RP-241570	4838	-	F	Miscellaneous corrections for IDC	18.2.0
	RP-104	RP-241551	4840	1	A	Clarification on the RSRP measurement for SDT	18.2.0
	RP-104	RP-241598	4857	3	F	Correction of the range of DL-DataToUL-ACK for ATG	18.2.0
	RP-104	RP-241543	4858	-	F	B020 Correction of cell barred indication value for 2Rx XR [2Rx_XR_Device]	18.2.0
	RP-104	RP-241553	4860	2	A	Correction on multicast DRX to support NTN	18.2.0
	RP-104	RP-241542	4861	1	B	Updates and Introduction of UE capabilities for Rel-18 WIs	18.2.0
	RP-104	RP-241542	4862	-	B	Corrections and Updates to UE capabilities for RAN1 feature group 55-6	18.2.0
09/2024	RP-105	RP-242240	4788	2	F	Paging monitoring for extended CG period [CG-SDT-Enh]	18.3.0
	RP-105	RP-242240	4863	-	F	Miscellaneous correction on R18 SL Evolution	18.3.0
	RP-105	RP-242235	4865	-	A	Correction on the field of scg-State	18.3.0
	RP-105	RP-242238	4867	2	F	Correction on the capabilities on PTM retransmission [PTM_ReTx_Mcast_HARQ_Disb]	18.3.0
	RP-105	RP-242233	4873	-	A	Correction on the way to include ReconfigurationWithSync in masterCellGroup in RRCReconfiguration	18.3.0
	RP-105	RP-242235	4878	1	A	Clarification on Validity Duration	18.3.0
	RP-105	RP-242237	4881	-	F	Network energy savings for NR miscellaneous RRC CR	18.3.0
	RP-105	RP-242237	4889	1	F	Corrections on SI request with Msg1 repetition	18.3.0
	RP-105	RP-242237	4892	1	F	Correction on the missing PRACH SCS configuration	18.3.0
	RP-105	RP-242240	4898	-	D	Parameter names corrections for XR	18.3.0
	RP-105	RP-242238	4903	1	F	Miscellaneous corrections for Multi-Carrier enhancements	18.3.0
	RP-105	RP-242240	4904	2	F	Miscellaneous corrections for SL relay enhancements	18.3.0
	RP-105	RP-242236	4906	1	A	Correction on T300 and T302 handling due to relay selection or cell selection	18.3.0
	RP-105	RP-242236	4908	1	A	Miscellaneous corrections on mobility history information	18.3.0
	RP-105	RP-242235	4912	2	A	Correction on featureCombination and SI-RequestConfig	18.3.0
	RP-105	RP-242235	4914	-	A	Correction on SL IUC and SL DRX configurations for SL enhancements	18.3.0
	RP-105	RP-242238	4917	1	F	Miscellaneous non-controversial corrections Set XXII	18.3.0
	RP-105	RP-242239	4922	1	F	Correction of Enhancement on NR QoE management and optimizations for diverse services	18.3.0
	RP-105	RP-242235	4927	1	A	Clarification on MBS broadcast acquisition	18.3.0
	RP-105	RP-242237	4928	1	F	Correction on absoluteFrequencySSB corresponding to CD-SSB for PCell	18.3.0
	RP-105	RP-242238	4930	1	F	Misc RRC corrections for feMob	18.3.0
	RP-105	RP-242240	4932	1	F	Misc RRC corrections for RACH-less HO [RACH-lessHO]	18.3.0
	RP-105	RP-242239	4934	3	F	Miscellaneous Positioning Corrections	18.3.0
	RP-105	RP-242238	4935	1	F	Miscellaneous corrections to Rel-18 NR NTN	18.3.0
	RP-105	RP-242238	4936	1	F	Clarification on highSpeedMeasFlagFR2 for HST FR2 RRM	18.3.0
	RP-105	RP-242236	4939	1	A	RRC correction on NR SL U2N Relay UE selection and reselection procedure	18.3.0
	RP-105	RP-242237	4951	1	F	Miscellaneous corrections for further NR coverage enhancements in RRC	18.3.0
	RP-105	RP-242235	4953	1	A	Correction to indication of reserved SN-side NR-DC and aggregated BW resources	18.3.0
	RP-105	RP-242238	4955	1	F	Miscellaneous corrections on eMBS	18.3.0
	RP-105	RP-242236	4957	2	A	Corrections for SL relay measurements	18.3.0
	RP-105	RP-242240	4959	4	F	Correction to EnteringLeavingReport condition [meas_report_enh]	18.3.0
	RP-105	RP-242239	4962	-	F	Clarification on parallel lists in MeasObjectNR	18.3.0
	RP-105	RP-242236	4963	1	A	Correction on power control parameters to support unified TCI state framework	18.3.0
	RP-105	RP-242239	4965	2	F	Extension of cells in Validity area	18.3.0
	RP-105	RP-242240	4966	-	F	Correction on enhancements to measurement report [meas_report_enh]	18.3.0
	RP-105	RP-242240	4967	-	F	Correction on extension of ToAddModList	18.3.0
	RP-105	RP-242237	4968	1	F	Rel-18 SONMDT Corrections	18.3.0
	RP-105	RP-242239	4969	1	F	Correction on MIMOevo	18.3.0
	RP-105	RP-242237	4970	1	F	Correction on NR MUSIM enhancements	18.3.0
	RP-105	RP-242230	4971	-	B	Updates and Introduction of UE capabilities for Rel-18 WIs	18.3.0
12/2024	RP-106	RP-243233	4851	3	F	Correction for cell barring for 2Rx XR UE [2Rx_XR_Device]	18.4.0
	RP-106	RP-243221	4896	3	A	Correction on IE SRS-CarrierSwitching	18.4.0
	RP-106	RP-243227	4900	3	A	Correction for CFRA configuration due to PRACH partitioning	18.4.0
	RP-106	RP-243233	4901	3	F	Correction for Paging monitoring during SDT [CG-SDT-Enh]	18.4.0
	RP-106	RP-243231	4940	2	F	RRC correction on NR sidelink positioning	18.4.0
	RP-106	RP-243232	4976	1	F	Co-configuration of random/partial-sensing resource selection and Co-Ex	18.4.0
	RP-106	RP-243227	4978	2	A	Corrections on the L2 U2N Remote UE measurement	18.4.0
	RP-106	RP-243229	4986	2	F	Miscellaneous corrections for Rel-18 SON/MDT	18.4.0
	RP-106	RP-243232	4994	2	F	Miscellaneous CR for Rel-18 SL relay enhancement	18.4.0
	RP-106	RP-243224	4998	1	A	Correction to unified TCI signalling	18.4.0
	RP-106	RP-243226	5002	1	A	Misc RRC corrections for SL enhancements	18.4.0
	RP-106	RP-243229	5006	3	F	Correction to the musim-AffectedBandsList and musim-AvoidedBandsList	18.4.0

	RP-106	RP-243224	5010	1	A	Correction on UE behavior of setting failedPSCellId	18.4.0
	RP-106	RP-243228	5011	2	F	Network energy savings for NR rapporteur RRC CR	18.4.0
	RP-106	RP-243219	5013	1	B	Introduction of new capability for intra-band EN-DC channel spacing [Intra-Band EN-DC Channelspacing]	18.4.0
	RP-106	RP-243218	5015	2	A	Correction on UE capabilities for TCI state indication	18.4.0
	RP-106	RP-243228	5016	2	F	Clarification of MeasurementTimingConfiguration use	18.4.0
	RP-106	RP-243225	5025	2	A	Corrections on measurement gap configuration	18.4.0
	RP-106	RP-243231	5030	2	F	Correction of Enhancement on NR QoE management and optimizations for diverse services	18.4.0
	RP-106	RP-243224	5045	2	A	Correction on IE perRAInfoList for SCGFailureInformation	18.4.0
	RP-106	RP-243232	5048	2	F	RRC correction on NR SL U2U relay operation	18.4.0
	RP-106	RP-243222	5060	3	A	RRC correction on sl-X-Overhead field description of SL-ResourcePool	18.4.0
	RP-106	RP-243231	5061	2	F	Miscellaneous RRC Positioning Correction	18.4.0
	RP-106	RP-243229	5062	2	F	Correction on the idc-TDM-AssistanceConfig	18.4.0
	RP-106	RP-243233	5065	1	F	Supporting R17 early implementation of R18 measurement gap enhancements	18.4.0
	RP-106	RP-243224	5069	3	A	Correction on PHR for mTRP PUSCH repetition	18.4.0
	RP-106	RP-243225	5076	2	A	Corrections to NR NTN (R18)	18.4.0
	RP-106	RP-243230	5077	2	F	Correction on applicable BWP for multi-cell scheduling	18.4.0
	RP-106	RP-243232	5081	1	F	Clarification for ul-DataSplitThreshold setting in multi-path relay	18.4.0
	RP-106	RP-243230	5083	2	F	Miscellaneous non-controversial corrections Set XXIII	18.4.0
	RP-106	RP-243227	5087	1	A	Miscellaneous CR for Rel-17 SL relay	18.4.0
	RP-106	RP-243222	5091	1	A	Correction to missing NR-DC parameters branches	18.4.0
	RP-106	RP-243225	5093	1	A	Clarification on determining about to start sessions	18.4.0
	RP-106	RP-243219	5095	3	F	Correction on UE capability for multi-carrier enhancements	18.4.0
	RP-106	RP-243230	5096	3	F	Misc RRC corrections for feMob	18.4.0
	RP-106	RP-243229	5097	1	F	Paging clarification for MBS	18.4.0
	RP-106	RP-243226	5102	1	A	Correction on spatial relation info in SRS configuration (R18)	18.4.0
	RP-106	RP-243229	5105	1	F	Correction on logging PSCell identity	18.4.0
	RP-106	RP-243231	5106	1	F	Correction for UE indicating its preference TX/RX frequencies for sidelink positioning in SU1	18.4.0
	RP-106	RP-243227	5108	1	A	Correction of maxSI messages [SI-SCHEDULING]	18.4.0
	RP-106	RP-243230	5112	1	F	Clarifications on cell barring behaviour [2Rx_XR_Device] [EM_Call_Exemption]	18.4.0
	RP-106	RP-243227	5113	1	A	Introduction of network signalling of maximum number of UL segments [Max-RRC-SegUL]	18.4.0
	RP-106	RP-243230	5120	2	F	Miscellaneous updates for Rel-18 WIs	18.4.0
	RP-106	RP-243232	5125	2	F	Corrections on RRC SRAP configuration for L2 U2U	18.4.0
	RP-106	RP-243229	5126	1	F	NR-U related RA information in SCGFailureInformation	18.4.0
	RP-106	RP-243229	5134	1	F	Clarification on group paging procedure	18.4.0
	RP-106	RP-243229	5135	-	F	Correction on SPR content determination	18.4.0
	RP-106	RP-243229	5138	1	F	Correction on logging RSSI measurements in RLF report and SHR	18.4.0
	RP-106	RP-243226	5140	-	A	Correction on SL DRX parameters	18.4.0
	RP-106	RP-243224	5145	1	A	Correction for RA resource information in RA-report	18.4.0
	RP-106	RP-243228	5146	2	F	Miscellaneous corrections for NES	18.4.0
	RP-106	RP-243233	5149	2	F	Correction on Band Selection and Cell Barring for Aerial UEs	18.4.0
	RP-106	RP-243231	5150	2	F	Correction for positioning SRS CA in RRC_INACTIVE	18.4.0
	RP-106	RP-243233	5152	1	F	Correction to RRC for CG-SDT enhancement [CG-SDTenh]	18.4.0
	RP-106	RP-243229	5153	3	F	Multicast reception after reselection to cell with MCCH	18.4.0
	RP-106	RP-243221	5158	1	A	Corrections to smtc configuration	18.4.0
	RP-106	RP-243233	5161	1	F	Miscellaneous corrections on NTN in FR2 bands	18.4.0
	RP-106	RP-243218	5162	2	A	Guidelines on implementing FRx/xDD differentiation in per UE capability	18.4.0
	RP-106	RP-243231	5165	1	F	Sidelink RRC Positioning Correction	18.4.0
	RP-106	RP-243233	5170	2	F	Correction on deprioritisationTimer	18.4.0
	RP-106	RP-243231	5174	1	F	RRC correction on NR sidelink positioning	18.4.0
	RP-106	RP-243232	5175	1	F	Corrections for U2U relay measurements	18.4.0
	RP-106	RP-243231	5179	1	F	Miscellaneous correction on QoE measurement	18.4.0
	RP-106	RP-243229	5187	1	F	Correction on the Less than 5M Bandwidth	18.4.0
	RP-106	RP-243224	5188	1	A	Correction on PSCell mobility history information	18.4.0
	RP-106	RP-243228	5189	2	F	Clarification on the unit of offsetThresholdTA-r18 for ATG	18.4.0
	RP-106	RP-243229	5190	1	F	Rapporteur correction on multicast MCCH	18.4.0
	RP-106	RP-243229	5191	-	F	Correction on multicast reception in RRC_INACTIVE upon paging	18.4.0
	RP-106	RP-243229	5194	1	F	Correction on Group Paging Handling	18.4.0
	RP-106	RP-243232	5197	1	F	Corrections on the Terminology of Peer UE	18.4.0
	RP-106	RP-243230	5198	-	F	Scope of interFreqL1-MeasConfig-r18	18.4.0
03/2025	RP-107	RP-250658	5110	1	A	Clarification for IDC solutions of logged MDT (Rel-18)	18.5.0
	RP-107	RP-250661	5199	1	F	Introduction of RRC parameters for 8-port CG-PUSCH	18.5.0
	RP-107	RP-250661	5200	1	F	Correction to applied TCI state for mTRP PDCCH reception	18.5.0
	RP-107	RP-250662	5201	1	F	RRC Sidelink Positioning Correction	18.5.0
	RP-107	RP-250661	5202	1	F	Clarification on the terminology of new cell	18.5.0
	RP-107	RP-250660	5203	1	F	Corrections on SPR determination	18.5.0

	RP-107	RP-250662	5205	2	F	Corrections on activation of non-preconfigured SRS with the type of semi-persistent	18.5.0
	RP-107	RP-250663	5208	1	F	Correction to SidelinkUEInformationNR setting	18.5.0
	RP-107	RP-250658	5218	1	A	Correction to smtc2	18.5.0
	RP-107	RP-250661	5219	2	F	Correction on TDD UL/DL Configuration for Two TA	18.5.0
	RP-107	RP-250658	5224	2	A	Corrections to NTN SMTC configuration	18.5.0
	RP-107	RP-250662	5225	1	F	Miscellaneous corrections for QoE report	18.5.0
	RP-107	RP-250662	5230	1	F	Correction to sidelinkUEInformation for SL-PRS shared resource pool	18.5.0
	RP-107	RP-250662	5232	1	F	Corrections on QoE	18.5.0
	RP-107	RP-250661	5233	2	F	Clarification on determining the cell in which Multicast was configured in RRC_CONNECTED	18.5.0
	RP-107	RP-250660	5234	2	F	Miscellaneous corrections for SON/MDT	18.5.0
	RP-107	RP-250661	5236	1	F	Miscellaneous non-controversial corrections Set XXIV	18.5.0
	RP-107	RP-250662	5238	3	A	Corrections to ntn-PolarizationUL	18.5.0
	RP-107	RP-250663	5242	1	F	Corrections for Rel-18 SL relay	18.5.0
	RP-107	RP-250658	5246	-	A	Correction on UE capability check when logging last HO type	18.5.0
	RP-107	RP-250658	5248	3	A	Clarification on Inclination value description	18.5.0
	RP-107	RP-250661	5251	1	A	Configuration of UL power control in unified TCI framework	18.5.0
	RP-107	RP-250660	5253	1	F	Correction on SIB22 broadcasting status	18.5.0
	RP-107	RP-250662	5255	-	F	SL-Carrierfailure indication correction	18.5.0
	RP-107	RP-250661	5260	-	F	Correction on pusch-DMRS8Tx-r18	18.5.0
	RP-107	RP-250658	5262	1	A	UE Capability for SCell activation with TCI activation configuration	18.5.0
	RP-107	RP-250662	5264	1	F	Clarification to UL RRC segmentation	18.5.0
	RP-107	RP-250660	5268	1	F	Correction on the Less than 5M Configuration	18.5.0
	RP-107	RP-250660	5269	-	F	Correction to the MUSIM Timer Processing for the Reconfiguration with Sync Case	18.5.0
	RP-107	RP-250663	5270	1	F	Correction to PC5 RLC channel handling	18.5.0
	RP-107	RP-250660	5271	1	F	Corrections on MUSIM gap	18.5.0
	RP-107	RP-250661	5274	1	F	Addition of missing need code in NZP-CSI-RS-Resource	18.5.0
	RP-107	RP-250659	5275	-	A	Corrections on SRB4	18.5.0
	RP-107	RP-250659	5278	3	A	Clarification on rrc-MaxCapaSegAllowed [Max-RRC-SegUL]	18.5.0
	RP-107	RP-250661	5279	-	F	Miscellaneous RRC corrections for feMob	18.5.0
	RP-107	RP-250661	5280	-	F	Dummy the capability bit nonDRB-NCR-r18	18.5.0
	RP-107	RP-250655	5281	-	B	Capability updates for RAN1 feature list	18.5.0
	RP-107	RP-250662	5282	2	F	Correction to VSAT UE capability report	18.5.0
	RP-107					Added ASN.1 colouring	18.5.1
06/2025	RP-108	RP-251694	5104	3	F	Correction on NW restriction for dedicated SL-PRS resource pool	18.6.0
	RP-108	RP-251693	5213	2	A	Correction on SCS and CP configuration in RedCap-specific initial BWP	18.6.0
	RP-108	RP-251695	5284	2	F	Correction for cell barring for NES CellDTX-DRX UEs	18.6.0
	RP-108	RP-251694	5285	2	F	Handling of the default SRB configuration upon LTM execution	18.6.0
	RP-108	RP-251692	5287	2	A	Usage of msg3-transmitPrecoder	18.6.0
	RP-108	RP-251695	5291	1	F	Corrections on simultaneousU-TCI-UpdateListx and RACH-ConfigTwoTA	18.6.0
	RP-108	RP-251695	5292	2	F	Correction to PC5 RLC Channel Release	18.6.0
	RP-108	RP-251696	5294	2	F	Adding enabledDefaultBeamForMultiCellScheduling	18.6.0
	RP-108	RP-251690	5297	1	A	Correction to nrofCandidates-CI for DCI format 2_4	18.6.0
	RP-108	RP-251689	5301	2	A	Correction on number of NZP CSI-RS resources	18.6.0
	RP-108	RP-251694	5302	4	F	Correction on the maximum number of SSB resources for L1 measurement without gaps in LTM	18.6.0
	RP-108	RP-251697	5304	2	F	Correction on timeSinceSHR in SHR report	18.6.0
	RP-108	RP-251688	5305	4	F	Capability coordination for LTM	18.6.0
	RP-108	RP-251696	5310	3	F	Miscellaneous non-controversial corrections Set XXV	18.6.0
	RP-108	RP-251694	5313	2	F	RRC Sidelink Positioning Correction	18.6.0
	RP-108	RP-251695	5314	2	F	Correction to Rel-18 NR NTN CHO with only location/time-based trigger	18.6.0
	RP-108	RP-251694	5321	3	F	Correction on sl-PRS-ResourcePoolID for SL-PRS CG	18.6.0
	RP-108	RP-251697	5322	1	F	Correction on logging intendedSIBs	18.6.0
	RP-108	RP-251688	5327	3	F	Correction on SRS capability reporting	18.6.0
	RP-108	RP-251692	5329	2	A	Slot aggregation configuration with multi-PUSCH	18.6.0
	RP-108	RP-251695	5330	2	F	Correction on sidelink RRC specification	18.6.0
	RP-108	RP-251695	5331	2	F	Correction on sidelink relay RRC specification	18.6.0
	RP-108	RP-251694	5332	3	F	Handling of PUCCH resources for L1 LTM reports at TAT expiry	18.6.0
	RP-108	RP-251694	5334	3	F	Corrections on eEMR/IMR and LTM L2 Reset/UE-based TA measurement	18.6.0
	RP-108	RP-251695	5335	2	F	Clarification on ssb-TimeOffset	18.6.0
	RP-108	RP-251694	5336	-	F	Correction on condition-based IUC for shared SL-PRS resource pool	18.6.0
	RP-108	RP-251694	5338	1	F	Corrections on RRC connection resume procedure initiated by activation or configuration of positioning SRS	18.6.0
	RP-108	RP-251697	5339	-	F	Corrections on SPR configuration	18.6.0
	RP-108	RP-251692	5341	1	A	Correction on SHR determination procedure	18.6.0
	RP-108	RP-251695	5348	-	F	Correction to RRC spec for retx-less CG	18.6.0
	RP-108	RP-251694	5353	1	F	Correction on SL positioning DCI format	18.6.0
	RP-108	RP-251696	5355	1	F	Corrections for MUSIM gap	18.6.0
	RP-108	RP-251688	5359	1	F	Correction on SL positioning UE capability	18.6.0

	RP-108	RP-251696	5364	1	F	Type clarification for UE requirements associated with nonCollocatedTypeMRDC and nonCollocatedTypeNR-CA	18.6.0
	RP-108	RP-251695	5368	1	F	Correction to epre-Ratio field description	18.6.0
	RP-108	RP-251697	5369	1	F	Correction on ra-InformationCommon logging in RLF-Report	18.6.0
	RP-108	RP-251697	5370	-	F	Corrections on PCell information in SPR	18.6.0
	RP-108	RP-251695	5375	1	F	Correction on terminology of local ID pair list	18.6.0
	RP-108	RP-251697	5381	-	F	Correction on areaConfiguration	18.6.0
	RP-108	RP-251694	5383	-	F	Handling of radio and RLC bearers at LTM cell switch execution in NR-DC	18.6.0
	RP-108	RP-251695	5386	1	F	(R18)Introduction of additionalSpectrumEmission in SL	18.6.0
	RP-108	RP-251692	5388	1	A	Correction to rsrp-ThresholdSSB threshold	18.6.0
	RP-108	RP-251689	5394	2	A	Correction on servingCellMO configuration for SSB-less SCell	18.6.0
09/2025	RP-109	RP-252769	5366	5	F	Corrections on eventD1/D2 and condEventD1/D2/T1	18.7.0
	RP-109	RP-252769	5372	2	F	Clarification on reference point for hard satellite switch with resynchronization	18.7.0
	RP-109	RP-252768	5398	-	F	Correction on NR Sidelink measurements based on SL-PRS	18.7.0
	RP-109	RP-252769	5401	1	F	Correction on the configuration of the joint TCI for multi-cell scheduling	18.7.0
	RP-109	RP-252768	5409	4	F	Correction to delivery of posSIB segments by dedicated signalling in RRC_CONNECTED	18.7.0
	RP-109	RP-252769	5413	2	F	Correction on field description of sl-CapabilityInformationSidelink for U2U Relay	18.7.0
	RP-109	RP-252768	5425	1	F	Miscellaneous corrections on NR positioning enhancements	18.7.0
	RP-109	RP-252769	5436	2	F	Clarification on RRC procedure delay for BWP switching	18.7.0
	RP-109	RP-252769	5438	2	F	Correction on uplink power control for Type-1 CG-PUSCH [PL RS Type 1 CG]	18.7.0
	RP-109	RP-252767	5440	1	A	Correction on configured grant power control in unified TCI framework	18.7.0
	RP-109	RP-252769	5447	1	F	Clarification to musim-AffectedBandsList	18.7.0
	RP-109	RP-252769	5449	1	F	Correction to multi-Rx preference reporting	18.7.0
	RP-109	RP-252766	5453	1	A	Correction on previousPCellId in RLF report	18.7.0
	RP-109	RP-252768	5454	-	F	Correction on procedural text for successPSCell-Config	18.7.0
	RP-109	RP-252768	5456	-	F	Correction to startPreambleForThisPartition and numberOfPreamblesPerSSB-ForThisPartition in RA-report	18.7.0
	RP-109	RP-252768	5462	-	F	Correction to reportQuantity	18.7.0
	RP-109	RP-252768	5464	1	F	Corrections on the startSFN of the UTW	18.7.0
	RP-109	RP-252832	5466	1	F	Correction on the dIRSRPAboveThreshold in RA-report	18.7.0
	RP-109	RP-252768	5467	1	F	Correction on SP Positioning SRS frequency hopping	18.7.0
	RP-109	RP-252768	5468	1	F	UE capability for support of event A4 based CHO for ATG	18.7.0
	RP-109	RP-252767	5473	-	A	Correction on Presence condition of ssbFrequency in servingCellMO for SSB-less SCell	18.7.0

History

Document history		
V18.1.0	May 2024	Publication
V18.2.0	August 2024	Publication
V18.3.0	October 2024	Publication
V18.4.0	January 2025	Publication
V18.5.1	April 2025	Publication
V18.6.0	July 2025	Publication
V18.7.0	October 2025	Publication