

# ETSI TS 138 470 V19.1.0 (2026-02)



TECHNICAL SPECIFICATION

**5G;  
NG-RAN;  
F1 general aspects and principles  
(3GPP TS 38.470 version 19.1.0 Release 19)**



---

**Reference**

RTS/TSGR-0338470vj10

---

**Keywords**

5G

**ETSI**

650 Route des Lucioles  
F-06921 Sophia Antipolis Cedex - FRANCE

---

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - APE 7112B  
Association à but non lucratif enregistrée à la  
Sous-Préfecture de Grasse (06) N° w061004871

---

**Important notice**

The present document can be downloaded from the  
[ETSI Search & Browse Standards](#) application.

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format on [ETSI deliver](#) repository.

Users should be aware that the present document may be revised or have its status changed, this information is available in the [Milestones listing](#).

If you find errors in the present document, please send your comments to the relevant service listed under [Committee Support Staff](#).

If you find a security vulnerability in the present document, please report it through our [Coordinated Vulnerability Disclosure \(CVD\)](#) program.

---

**Notice of disclaimer & limitation of liability**

The information provided in the present deliverable is directed solely to professionals who have the appropriate degree of experience to understand and interpret its content in accordance with generally accepted engineering or other professional standard and applicable regulations.

No recommendation as to products and services or vendors is made or should be implied.

No representation or warranty is made that this deliverable is technically accurate or sufficient or conforms to any law and/or governmental rule and/or regulation and further, no representation or warranty is made of merchantability or fitness for any particular purpose or against infringement of intellectual property rights.

In no event shall ETSI be held liable for loss of profits or any other incidental or consequential damages.

Any software contained in this deliverable is provided "AS IS" with no warranties, express or implied, including but not limited to, the warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights and ETSI shall not be held liable in any event for any damages whatsoever (including, without limitation, damages for loss of profits, business interruption, loss of information, or any other pecuniary loss) arising out of or related to the use of or inability to use the software.

---

**Copyright Notification**

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2026.  
All rights reserved.

---

# Intellectual Property Rights

## Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The declarations pertaining to these essential IPRs, if any, are publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the [ETSI IPR online database](#).

Pursuant to the ETSI Directives including the ETSI IPR Policy, no investigation regarding the essentiality of IPRs, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

## Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

**DECT™**, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™**, **LTE™** and **5G™** logo are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **oneM2M™** logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners. **GSM®** and the GSM logo are trademarks registered and owned by the GSM Association.

---

# Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found at [3GPP to ETSI numbering cross-referencing](#).

---

# Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

# Contents

Intellectual Property Rights .....	2
Legal Notice .....	2
Modal verbs terminology.....	2
Foreword.....	5
1 Scope .....	6
2 References .....	6
3 Definitions and abbreviations.....	6
3.1 Definitions .....	6
3.2 Abbreviations .....	7
4 General aspects.....	8
4.1 F1 interface general principles .....	8
4.2 F1 interface specification objectives .....	9
4.3 F1 interface capabilities.....	9
4.4 Void.....	9
5 Functions of the F1 interface.....	9
5.1 General .....	9
5.2 F1-C functions.....	9
5.2.1 F1 interface management function.....	9
5.2.2 System Information management function .....	10
5.2.3 F1 UE context management function.....	11
5.2.4 RRC message transfer function .....	13
5.2.5 Paging function.....	13
5.2.6 Warning messages information transfer function .....	13
5.2.7 Remote Interference Management (RIM) message transfer function .....	13
5.2.8 Trace function .....	14
5.2.9 Load management function.....	14
5.2.10 Self-optimisation support function .....	14
5.2.11 Positioning function.....	14
5.2.12 IAB support function .....	14
5.2.13 NR MBS function .....	15
5.2.14 PDC measurement function .....	15
5.2.15 QMC support function .....	15
5.2.16 Timing Synchronisation Status Reporting function.....	15
5.2.18 CSI-RS Coordination function.....	15
5.3 F1-U functions.....	15
5.3.1 Transfer of user data .....	15
5.3.2 Flow control function.....	15
5.3.3 Transfer of Assistance Information .....	16
5.4 TEIDs allocation .....	16
6 Procedures of the F1 interface.....	16
6.1 Control plane procedures.....	16
6.1.1 Interface Management procedures .....	16
6.1.2 Context Management procedures .....	16
6.1.3 RRC Message Transfer procedures .....	17
6.1.3A Warning Message Transmission procedures.....	17
6.1.4 System Information procedures .....	17
6.1.5 Paging procedures.....	17
6.1.6 Void .....	17
6.1.7 Radio information transfer procedures .....	17
6.1.8 UE Tracing procedures .....	17
6.1.9 Load management procedures .....	18
6.1.10 Self-optimisation support procedure .....	18

6.1.11	Positioning procedures.....	18
6.1.12	IAB procedures.....	19
6.1.13	NR MBS procedures.....	19
6.1.14	PDC Measurement procedures.....	19
6.1.15	QMC procedures.....	19
6.1.16	Timing Synchronisation Status Reporting procedures.....	20
6.1.17	CLI indication procedure.....	20
6.1.18	CSI-RS Coordination procedures.....	20
6.2	User plane procedures.....	20
7	F1 interface protocol structure.....	20
7.1	F1 Control Plane Protocol (F1-C).....	20
7.2	F1 User Plane Protocol (F1-U).....	20
8	Other F1 interface specifications.....	21
8.1	NG-RAN F1 interface: layer 1 (3GPP TS 38.471).....	21
8.2	NG-RAN F1 interface: signalling transport (3GPP TS 38.472).....	21
8.3	NG-RAN F1 interface: F1AP specification (3GPP TS 38.473).....	21
8.4	NG-RAN F1 interface: data transport and transport signalling (3GPP TS 38.474).....	21
8.5	NG-RAN F1 interface: user plane protocol (3GPP TS 38.425).....	21
8.6	NG-RAN F1 interface: PDU Session user plane protocol (TS 38.415).....	22
<b>Annex A (informative): Change history.....</b>		<b>23</b>
History.....		25

---

# Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

---

# 1 Scope

The present document is an introduction to the 3GPP TS 38.47x series of technical specifications that define the F1 interface. The F1 interface provides means for interconnecting a gNB-CU and a gNB-DU of a gNB within an NG-RAN, or for interconnecting a gNB-CU and a gNB-DU of an en-gNB within an E-UTRAN.

---

# 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 38.401: "NG-RAN; Architecture Description".
- [3] 3GPP TS 38.471: "NG-RAN; F1 layer 1".
- [4] 3GPP TS 38.472: "NG-RAN; F1 signalling transport".
- [5] 3GPP TS 38.473: "NG-RAN; F1 Application Protocol (F1AP)".
- [6] 3GPP TS 38.474: "NG-RAN; F1 data transport".
- [7] 3GPP TS 38.425: "NG-RAN; Xn interface user plane protocol".
- [8] 3GPP TS 38.300: "NR; Overall description; Stage-2".
- [9] 3GPP TS 37.340: "NR; Multi-connectivity; Overall description; Stage-2".
- [10] 3GPP TS 38.321: "NR; Medium Access Control (MAC) protocol specification".
- [11] 3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol specification".
- [12] 3GPP TS 38.415: "NG-RAN; PDU Session User Plane Protocol".

---

# 3 Definitions and abbreviations

## 3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905 [1].

**BH RLC channel:** as defined in TS 38.300 [8].

**Child UE:** as defined in TS 38.300 [8].

**en-gNB:** as defined in TS 37.340 [9].

**gNB:** as defined in TS 38.300 [8].

**gNB-CU:** as defined in TS 38.401 [2].

**gNB-DU:** as defined in TS 38.401 [2].

**IAB-DU:** as defined in TS 38.300 [8].

**IAB-MT:** as defined in TS 38.300 [8].

**IAB-donor:** as defined in TS 38.300 [8].

**IAB-donor-CU:** as defined in TS 38.401 [2].

**IAB-donor-DU:** as defined in TS 38.401 [2].

**IAB-node:** as defined in TS 38.300 [8].

**Intermediate U2N Relay UE:** as defined in TS 38.300 [8].

**Last U2N Relay UE:** as defined in TS 38.300 [8].

**Mobile IAB-DU:** as defined in TS 38.300 [8].

**Mobile IAB-MT:** as defined in TS 38.300 [8].

**MP Relay UE:** as defined in TS 38.300 [8].

**MP Remote UE:** as defined in TS 38.300 [8].

**Multi-path:** as defined in TS 38.300 [8].

**Parent UE:** as defined in TS 38.300 [8].

**PC5 Relay RLC channel:** as defined in TS 38.300 [8].

**U2N Relay UE:** as defined in TS 38.300 [8].

**U2N Remote UE:** as defined in TS 38.300 [8].

**U2U Relay UE:** as defined in TS 38.300 [8].

**U2U Remote UE:** as defined in TS 38.300 [8].

**Uu Relay RLC channel:** as defined in TS 38.300 [8].

## 3.2 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905 [1].

BH	Backhaul
CLI	Cross Link Interference
DRB	Data Radio Bearers
eDRX	extended Discontinuous Reception
eRedCap	Enhanced Reduced Capability
F1-C	F1 Control plane interface
F1-U	F1 User plane interface
F1AP	F1 Application Protocol
GTP-U	GPRS Tunnelling Protocol
IAB	Integrated Access and Backhaul
IP	Internet Protocol
L2	Layer-2
LP-WUS	Low Power Wake Up Signal
MBS	Multicast/Broadcast Service
MP	Multi-Path

N3C	Non-3GPP Connection
NR-MIB	NR-Master Information Block
NSAG	Network Slice AS Group
O&M	Operation and Maintenance
PA	Paging Area
PDC	Propagation Delay Compensation
PEI	Paging Early Indication
PF	Paging Frame
PH	Paging Hyperframes
PO	Paging Occasion
PTP	Point to Point
PTM	Point to Multipoint
QMC	QoE Measurement Collection
QoE	Quality of Experience
QoS	Quality of Service
RedCap	Reduced Capability
RIM	Remote Interference Management
RLC	Radio Link Control
RRC	Radio Resource Control
SCTP	Stream Control Transmission Protocol
SIB1	System Information Block 1
SIB9	System Information Block 9
SIB10	System Information Block 10
SIB12	System Information Block 12
SIB13	System Information Block 13
SIB14	System Information Block 14
SIB15	System Information Block 15
SIB17	System Information Block 17
SIB18	System Information Block 18
SIB19	System Information Block 19
SIB20	System Information Block 20
SIB22	System Information Block 22
SIB23	System Information Block 23
SIB24	System Information Block 24
SL	Sidelink
SRB	Signalling Radio Bearers
TNL	Transport Network Layer
U2N	UE-to-Network
U2U	UE-to-UE
V2X	Vehicle-to-Everything

---

## 4 General aspects

This clause captures the F1 interface principles and characteristics.

### 4.1 F1 interface general principles

The general principles for the specification of the F1 interface are as follows:

- the F1 interface is open;
- the F1 interface supports the exchange of signalling information between the endpoints, in addition the interface supports data transmission to the respective endpoints;
- from a logical standpoint, the F1 is a point-to-point interface between the endpoints.

NOTE: A point-to-point logical interface should be feasible even in the absence of a physical direct connection between the endpoints.

- the F1 interface supports control plane and user plane separation;

- the F1 interface separates Radio Network Layer and Transport Network Layer;
- the F1 interface enables exchange of UE associated information and non-UE associated information;
- the F1 interface is designed in a future proof way to fulfil different new requirements, support new services and new functions;
- one gNB-CU and a set of gNB-DUs are visible to other logical nodes as a gNB or an en-gNB where the gNB terminates the Xn and the NG interfaces, and the en-gNB terminates the X2 and the S1-U interfaces;
- the gNB-CU may be separated in control plane (CP) and user plane (UP).

## 4.2 F1 interface specification objectives

The F1 interface specifications facilitate the following:

- inter-connection of a gNB-CU and a gNB-DU supplied by different manufacturers.

## 4.3 F1 interface capabilities

The F1 interface supports:

- procedures to establish, maintain and release radio bearers for the NG-RAN part of PDU sessions and MBS Sessions, and for E-UTRAN Radio Access Bearers;
- procedures to establish, maintain and release BH RLC channels;
- the separation of each UE on the protocol level for user specific signalling management;
- the separation of each IAB-MT on the protocol level for IAB-MT specific signalling management;
- the transfer of RRC signalling messages between the UE and the gNB-CU;
- procedures to establish, maintain and release Uu Relay RLC channels and PC5 Relay RLC channels.

## 4.4 Void

---

# 5 Functions of the F1 interface

## 5.1 General

The following clauses describe the functions supported over F1-C and F1-U.

## 5.2 F1-C functions

### 5.2.1 F1 interface management function

The error indication function is used by the gNB-DU or gNB-CU to indicate to the gNB-CU or gNB-DU that an error has occurred.

The reset function is used to initialize the peer entity after node setup and after a failure event occurred. This procedure can be used by both the gNB-DU and the gNB-CU.

The F1 setup function allows to exchange application level data needed for the gNB-DU and gNB-CU to interoperate correctly on the F1 interface, and exchange the intended TDD DL-UL configuration originating from the gNB-DU or destined to the gNB-DU. The F1 setup is initiated by the gNB-DU. The F1 setup function also allows to send the information of a mobile IAB-MT from the co-located mobile IAB-DU to the gNB-CU.

The gNB-CU Configuration Update and gNB-DU Configuration Update functions allow to update application level configuration data needed between gNB-CU and gNB-DU to interoperate correctly over the F1 interface, and may activate or deactivate cells. The gNB-CU Configuration Update function may activate SSB beams of cells. The gNB-CU Configuration Update function may indicate the cells where the gNB-DU is allowed to deactivate the SSB beams. With the gNB-CU Configuration Update function, energy saving with cell activation and cell deactivation can be supported as defined in TS 38.300 [8]. For cross-link interference mitigation, the gNB-CU may coordinate the exchange of intended TDD DL-UL configuration by merging, forwarding and selective forwarding of intended TDD DL-UL configuration(s) between its gNB-DUs, or between its gNB-DUs and other gNBs, gNB-CUs. The gNB-DU Configuration Update function also allows to send the information of a mobile IAB-MT from the co-located mobile IAB-DU to the gNB-CU. The gNB-CU Configuration Update function allows to indicate the cells where the gNB-DU may start or stop on-demand SIB1 operation.

The F1 setup and gNB-DU Configuration Update functions allow to inform the S-NSSAI(s), NSAG(s), CAG ID(s) and NID(s) supported by the gNB-DU.

The F1 setup and gNB-DU Configuration Update functions allow to provide information on either RedCap access configuration, or eRedCap access configuration, or both at the gNB-DU.

The F1 setup and gNB-DU Configuration Update functions allow to provide barring exemption for emergency call information at the gNB-DU.

The F1 setup and gNB-DU Configuration Update functions allow to provide barring configuration information for 2Rx XR UEs at the gNB-DU.

The F1 setup and gNB-DU Configuration Update functions allow to provide the information on on-demand SIB1 configuration at the gNB-DU.

The F1 setup and gNB-CU Configuration Update functions allow to inform the NID(s) available at the gNB-CU.

The F1 resource coordination function is used to transfer information about frequency resource sharing between gNB-CU and gNB-DU. In case of split gNB architecture, the gNB-CU may consolidate the outgoing messages from multiple gNB-DUs and distribute the incoming messages to the involved gNB-DUs, to perform resource coordination.

The gNB-DU status indication function allows the gNB-DU to indicate overload status to gNB-CU. In case of IAB, the IAB-donor-DU or IAB-DU can indicate the downlink congestion status to the IAB-donor-CU.

The network access rate reduction function is used to indicate to the gNB-DU that the rate at which UEs are accessing the network need to be reduced.

The F1 removal function is used to remove the interface instance and all related resources between the gNB-DU and the gNB-CU in a controlled manner.

The F1 TA information transfer function is used to transfer the TA information from the gNB-DU to the gNB-CU and the gNB-CU to the gNB-DU.

## 5.2.2 System Information management function

Scheduling of system broadcast information is carried out in the gNB-DU. The gNB-DU is responsible for transmitting the system information according to the scheduling parameters available.

The gNB-DU is responsible for the encoding of the NR-MIB message. In case broadcast of SIB1 and other SIBs is needed, the gNB-DU is responsible for the encoding of the SIB1 message, SIB10, SIB12, SIB13, SIB14, SIB15, SIB17, SIB17bis, SIB18, SIB20, SIB22, SIB23 and SIB24, and the gNB-CU is responsible for the encoding of other SIBs. The gNB-DU may re-encode SIB9. The gNB-DU is responsible for the generation of the SystemInformation message.

NOTE: The SIB19 is generated by the gNB-DU.

The gNB-CU is responsible for receiving the positioning assistance information from LMF, e.g. the positioning related SIBs. The gNB-CU transparently sends the positioning assistance information to the gNB-DU. The gNB-DU is responsible for broadcasting the positioning assistance information in Positioning SI message(s).

To support Msg3 based on-demand SI and RRC Dedicated SIB Request as described in TS 38.331 [11], the gNB-CU can confirm the received SI request and the SIB request from the UE by including the UE identity, and command the gNB-DU to broadcast the *SystemInformation* messages including the other SI.

To support UE RRC Positioning SI acquisition mechanism, as described in TS 38.331 [11], the gNB-CU can confirm the received positioning SI request and the positioning SIB request from the UE by including the UE identity, and command the gNB-DU to broadcast the positioning SI messages.

### 5.2.3 F1 UE context management function

The F1 UE context management function supports the establishment and modification of the necessary overall UE context.

The establishment of the F1 UE context is initiated by the gNB-CU and accepted or rejected by the gNB-DU based on admission control criteria (e.g., resource not available).

The modification of the F1 UE context can be initiated by either gNB-CU or gNB-DU. The receiving node can accept or reject the modification. The F1 UE context management function also supports the release of the context previously established in the gNB-DU. The release of the context is triggered by the gNB-CU either directly or following a request received from the gNB-DU. The gNB-CU request the gNB-DU to release the UE Context when the UE enters RRC\_IDLE or RRC\_INACTIVE. In case of configured grant small data transmission, this function allows the gNB-CU to request the gNB-DU to keep part of the UE context, including at least the lower layer configuration for SDT DRB(s)/SRB(s), C-RNTI, CS-RNTI, F1AP association, and F1 tunnel information, when the gNB-CU sends the UE into RRC\_INACTIVE state. In case of positioning when the gNB-CU sends the UE into RRC\_INACTIVE state, this function allows the gNB-CU to request the gNB-DU to keep part of the positioning context, including the SRS configuration for the UE.

This function can be also used to manage DRBs, SRBs and SL DRBs, i.e., establishing, modifying and releasing DRB, SRB and SL DRB resources. The establishment and modification of DRB, or SL DRB resources are triggered by the gNB-CU and accepted/rejected by the gNB-DU based on resource reservation information and QoS information to be provided to the gNB-DU. For each DRB to be setup or modified, the S-NSSAI may be provided by gNB-CU to the gNB-DU in the UE Context Setup procedure and the UE Context Modification procedure. In case of NG-RAN sharing, the gNB-CU includes the serving PLMN ID (for SNPNs the serving SNPN ID) in the UE Context Setup procedure.

This function is also used to manage a UE's configuration with multicast resources and to provide information about the multicast MRBs which are established for the multicast MBS Sessions the UE has joined.

For Uu, the mapping between QoS flows and radio bearers is performed by gNB-CU and the granularity of bearer related management over F1 is radio bearer level. For NG-RAN, the gNB-CU decides an aggregated DRB QoS profile for each radio bearer based on received QoS flow profile, and provides both aggregated DRB QoS profile and QoS flow profile to the gNB-DU, and the gNB-DU either accepts the request or rejects it with appropriate cause value. With this function, gNB-DU could also notify gNB-CU whether the QoS for already established DRBs is not fulfilled any longer or it is fulfilled again. The function can be also used to inform the gNB-DU the alternative QoS Parameters Sets when available for a QoS flow. To support packet duplication for intra-gNB-DU CA and packet split/duplication for intra-DU multi-path relay as described in TS 38.300 [8], one data radio bearer should be configured with at least two GTP-U tunnels between gNB-CU and a gNB-DU.

For SL, the mapping between QoS flows and radio bearers is performed by gNB-CU and the granularity of bearer related management over F1 is radio bearer level. For NG-RAN, the gNB-CU decides an aggregated SL DRB QoS profile for each radio bearer based on received QoS flow profile, and provides both aggregated SL DRB QoS profile and QoS flow profile to the gNB-DU, and the gNB-DU either accepts the request or rejects it with appropriate cause value.

With this function, gNB-CU requests the gNB-DU to setup or change of the SpCell (as defined in TS 38.321 [10]) for the UE, and the gNB-DU either accepts or rejects the request with appropriate cause value. This function also enables the gNB-DU to inform the gNB-CU of which cell the UE has successfully accessed during conditional mobility.

With this function, the gNB-CU requests the setup of the SCell(s) at the gNB-DU side, and the gNB-DU accepts all, some or none of the SCell(s) and replies to the gNB-CU. The gNB-CU requests the removal of the SCell(s) for the UE.

With this function, the gNB-CU indicates the UL UE AMBR limit to the gNB-DU, and the gNB-DU enforces the indicated limit.

With this function, the gNB-DU indicates that a bearer, or a UE is inactive or active. The gNB-CU consolidates all the serving gNB-DUs for the UE and takes further action.

With this function, the gNB-CU indicates the gNB-DU that the UE context concerns mobility enhancement operation, and the gNB-DU takes corresponding actions.

In addition, for IAB-nodes and IAB-donors:

- The F1 UE context management function is used for managing BH RLC channels, i.e. establishing, modifying and releasing BH RLC channel resources. The establishment of BH RLC channels is triggered by the IAB-donor-CU. The establishment and modification is accepted/rejected by the IAB-node's parent, based on e.g. resource reservation information and QoS information provided to the IAB-node's parent.
- The DRB QoS profile framework is reused for BH RLC channels carrying DRBs. Prioritization of traffic on the F1-C interface is based on traffic type (e.g. UE-associated F1AP signalling, non-UE-associated F1AP signalling) and is enforced in the IAB-donor-DU and in IAB-nodes, considering that the traffic on the F1-C interface has higher priority than other traffic; in-sequence delivery over the signaling connection is always ensured.
- The IAB-donor-CU associates each BH RLC channel carrying control plane traffic with one of the signaled control plane traffic type values.

For L2 U2N Relay:

- The F1 UE context management function is used for managing Uu Relay RLC channels and PC5 Relay RLC channels for L2 U2N relay, i.e. establishing, modifying and releasing Uu Relay RLC channel and PC5 Relay RLC channel resources. The establishment of Uu Relay RLC channels and PC5 Relay RLC channels are triggered by the gNB-CU. The establishment and modification is accepted/rejected by the gNB-DU based on resource reservation information and QoS information provided to the gNB-DU. The modification of Uu/PC5 Relay RLC channels can be triggered by the gNB-CU or the gNB-DU.
- The gNB-CU determines the QoS for the PC5 Relay RLC channel and the QoS for the Uu Relay RLC channel based on the received QoS profile for the L2 U2N Remote UE, and provides the QoS information to the gNB-DU. In multi-hop L2 U2N Relay, the gNB-CU determines the QoS for the PC5 Relay RLC channels over each PC5 hop among U2N Remote UE, Intermediate U2N Relay UE(s) and Last U2N Relay UE, and the QoS for the Uu Relay RLC channel, based on the received QoS profile for the U2N Remote UE. The gNB-CU provides the determined QoS information to the gNB-DU. For the PC5 Relay RLC channel between the Intermediate U2N Relay UE and a Parent/Child UE, the gNB-CU provides the Peer UE ID indicating the Parent/Child UE to the gNB-DU.
- The gNB-CU configures the gNB-DU about the SRB(s)/DRB(s) to Uu Relay RLC channel(s) mapping, which is used by the gNB-DU to perform data transfer of L2 U2N Remote UE. The mapping between DRB and Uu Relay RLC channel is configured at the granularity of GTP-U tunnel.
- The gNB-CU is responsible for the local ID allocation and update for L2 U2N Remote UE.

For Multi-Path relay:

- The gNB-CU is responsible to determine the data split among two paths for a DRB for both intra-DU and inter-DU multi-path relay.
- The gNB-CU takes the responsibility to decide the addition/modification/release of a path.
- The functionality for the L2 U2N Relay can be applied to the L2 MP Relay using PC5 link.
- Regarding the L2 MP Relay using N3C link,
  - The F1 UE context management function is used for managing Uu Relay RLC channels for L2 MP Relay using N3C, i.e. establishing, modifying and releasing Uu Relay RLC channel resources. The establishment of Uu Relay RLC channels is triggered by the gNB-CU. The establishment or modification is accepted/rejected by the gNB-DU based on resource reservation information and QoS information provided to the gNB-DU. The modification of Uu Relay RLC channels can be triggered by the gNB-CU or the gNB-DU.
  - The gNB-CU determines the QoS for the Uu Relay RLC channel based on the received QoS profile for the L2 MP Remote UE using N3C, and provides the QoS information to the gNB-DU.
  - The gNB-CU configures the gNB-DU about the SRB(s)/DRB(s) to Uu Relay RLC channel(s) mapping, which is used by the gNB-DU to perform data transfer of L2 MP Remote UE using N3C. The mapping between DRB and Uu Relay RLC channel is configured at the granularity of GTP-U tunnel.

For L2 U2U Relay:

- The F1 UE context management function is used for managing PC5 Relay RLC channels for L2 U2U Remote UE and L2 U2U Relay UE, i.e. establishing, modifying and releasing PC5 Relay RLC channel resources. The establishment of PC5 Relay RLC channels are triggered by the gNB-CU. The establishment and modification is accepted/rejected by the gNB-DU based on resource reservation information and QoS information provided to the gNB-DU. The modification of PC5 Relay RLC channels can be triggered by the gNB-CU or the gNB-DU.
- The gNB-CU determines the QoS for the PC5 Relay RLC channel on the first hop or second hop of an end-to-end sidelink radio bearer based on the QoS profile received from L2 U2U Remote UE or L2 U2U Relay UE, and provides the QoS information to the gNB-DU.

The F1 cell switch notification function is used for informing the gNB-CU or the gNB-DU about cell switching of the UE and the selected TCI state.

The F1 CU-DU mobility initiation function is used to trigger cell switch and/or early synchronization for the UE.

## 5.2.4 RRC message transfer function

This function allows to transfer RRC messages between gNB-CU and gNB-DU. RRC messages are transferred over F1-C. The gNB-CU is responsible for the encoding of the dedicated RRC message with assistance information provided by gNB-DU. This function also allows gNB-DU to report to gNB-CU if the downlink RRC message has been successfully delivered to UE or not. The function also allows the gNB-DU to report to the gNB-CU if the accessing UE is a Reduced Capability UE as defined in TS 38.300 [8]. This function also allows the gNB-DU to duplicate the downlink RRC message according to the duplication information provided by gNB-CU.

For IAB-nodes, this function allows to transfer RRC messages for setting up and configuring the IAB-MT side of the BH RLC channel. These RRC messages are carried on F1-C between the IAB-donor-CU and the parent IAB-DU, i.e. the gNB-DU side of the BH RLC channel.

## 5.2.5 Paging function

The gNB-CU is responsible for filtering target cells for paging based on the UE Radio Capability for Paging. The gNB-CU may further send a list of recommended SSB beams to the gNB-DU for paging of UEs in RRC\_INACTIVE.

The gNB-DU is responsible for transmitting the paging information according to the scheduling parameters provided. In case of PEI and LP-WUS the gNB-DU is also responsible for determining the related radio configuration. The gNB-DU also takes the UE paging capability into account for paging when provided by the gNB-CU including the paging subgrouping support on a per cell basis for PEI or LP-WUS when applicable.

The gNB-CU provides paging information to enable the gNB-DU to calculate the exact PH, if the eDRX is configured, PO and PF. The gNB-CU determines the PA. The gNB-DU consolidates all the paging records for a particular PH, PO, PF and PA, and encodes the final RRC message and broadcasts the paging message on the respective PH, PO, PF in the PA.

The paging function also supports CN controlled subgrouping paging for UE Power Saving for PEI and LP-WUS. The paging function also supports paging adaptation for Network Energy Saving.

## 5.2.6 Warning messages information transfer function

This function allows to cooperate with the warning message transmission procedures over NG interface. The gNB-CU is responsible for encoding the warning related SI message and sending it together with other warning related information for the gNB-DU to broadcast over the radio interface.

## 5.2.7 Remote Interference Management (RIM) message transfer function

This function enables the transfer of Remote Interference Management (RIM) backhaul messages between the gNB-CU and the gNB-DU. RIM messages are transferred over F1-C. The gNB-CU acts as a coordinator on behalf of its affiliated gNB-DUs, by merging the RIM information received from its gNB-DUs and forwarding the merged information to the target gNBs or gNB-CUs, transparently via the core network. Similarly, a gNB-CU distributes an incoming RIM backhaul message to all its concerned gNB-DUs.

## 5.2.8 Trace function

The Trace function provides means to control trace sessions for a UE over F1 interface.

## 5.2.9 Load management function

The load management function allows a gNB-CU to request the reporting of load measurements to gNB-DU and is used by gNB-DU to report the result of measurements admitted by gNB-DU.

## 5.2.10 Self-optimisation support function

This function allows the gNB-CU to provide information to the gNB-DU in order to support self-optimization functionality.

This function also allows the gNB-DU to provide information to the gNB-CU in order to support self-optimization functionality.

## 5.2.11 Positioning function

This function allows to transfer location management messages between gNB-CU and gNB-DU. With this function, gNB-CU request TRP information from gNB-DU, and gNB-DU response to gNB-CU with the TRP information. With this function, gNB-CU request positioning measurements from gNB-DU, and gNB-DU response to gNB-CU with the positioning measurements.

The function allows the gNB-CU to

- transfer the positioning assistance data to gNB-DU. The gNB-DU is responsible for broadcasting the positioning assistance data according to the scheduling parameters available;
- request the gNB-DU to configure SRS transmissions for UE;
- request the gNB-DU to configure PRS transmissions;
- request the gNB-DU to configure measurement gap or PRS processing window,
- request the gNB-DU to activate or deactivate preconfigured measurement gap or PRS processing window;
- request the gNB-DU to broadcast positioning system information;
- request the gNB-DU to reserve or release the SRS resources for area-specific SRS transmissions.

## 5.2.12 IAB support function

The support for IAB comprises several functions.

The BAP mapping configuration function allows the IAB-donor-CU to provide BAP mapping which includes the backhaul routing configuration and/or BH RLC channel mapping information for IAB-donor-DU or IAB-DU. This function also enables the IAB-donor-CU to provide the BAP header rewriting configuration, or other BAP related configurations to the IAB-DU. This function also enables the IAB-donor-CU to provide the BAP related configurations to the IAB-donor-DU.

The gNB-DU resource configuration function is used by the IAB-donor-CU to provide cell resource configuration for an IAB-donor-DU or an IAB-DU, and/or NA resource configuration of a parent node IAB-DU or IAB-donor-DU serving the co-located IAB-MT for an IAB-DU, and/or information about the child node's cell resource configuration and other periodic configurations to a parent IAB-node or an IAB-donor-DU. This function also allows the IAB-donor-CU to provide the semi-static cell resource configuration of a neighbour node or a peer parent-node of a child node, whereas this neighbor node or a peer parent can be an IAB-donor-DU or an IAB-DU.

The IAB TNL address configuration function enables the IAB-donor-CU to request IP address(es) to be used for IAB-node(s) from an IAB-donor-DU, or to request from an IAB-donor-DU the removal of IP address(es) used for IAB-node(s). This function is also used by the IAB-donor-CU to provide an IAB-donor-DU with the IP address information of the traffic to be transferred to a peer IAB-donor-DU via an inter-donor-DU tunnel.

The IAB UP configuration update function allows the update of BH information or the UP TNL information between the IAB-donor-CU and an IAB-DU.

The Mobile IAB F1 Setup Triggering function enables the IAB-donor-CU to trigger the new F1 interface establishment between a target logical mobile IAB-DU and a target F1-terminating IAB-donor-CU.

The Mobile IAB F1 Setup Outcome Notification function enables the mobile IAB-DU to report the outcome of the F1 interface setup between a target logical mobile IAB-DU and a target F1-terminating IAB-donor-CU.

### 5.2.13 NR MBS function

The NR MBS function supports establishing, modifying and releasing the MRB resources and the user data transport.

The multicast group paging function supports the sending of multicast group paging request to the gNB-DUs in order to group-page UEs that have joined the multicast MBS session.

### 5.2.14 PDC measurement function

The PDC measurement function allows the gNB-CU to request the gNB-DU to report measurements used for propagation delay compensation at the gNB-CU or UE.

### 5.2.15 QMC support function

This function enables the transfer of RAN visible QoE information from the gNB-CU to the gNB-DU, and the control thereof.

### 5.2.16 Timing Synchronisation Status Reporting function

The Timing Synchronisation Status Reporting function enables the gNB-CU to request the gNB-DU node to report the RAN timing synchronisation status information.

### 5.2.17 CLI indication function

The CLI indication function enables the transfer of gNB-to-gNB CLI measurements, gNB-to-gNB CLI mitigation request and SRS Resource indication between gNB-DU and gNB-CU.

### 5.2.18 CSI-RS Coordination function

The CSI-RS Coordination function enables the coordination between the gNB-CU and the gNB-DU for CSI-RS transmission.

## 5.3 F1-U functions

### 5.3.1 Transfer of user data

This function allows to transfer of user data between gNB-CU and gNB-DU.

This function also allows to transfer PDU Set Information of a QoS flow, and indication of End of Data Burst to the gNB-DU. The detailed protocol is specified in TS 38.415 [12].

### 5.3.2 Flow control function

This function allows to control the downlink user data flow to the gNB-DU. The detailed protocol is specified in TS 38.425 [7].

### 5.3.3 Transfer of Assistance Information

The Transfer of Assistance Information from gNB-DU to gNB-CU allows transfer of assistance information, e.g. QoS monitoring and data collection. The detailed protocol is specified in TS 38.425 [7].

## 5.4 TEIDs allocation

The gNB-DU is responsible for the allocation of the F1-U DL GTP TEID for each data radio bearer.

---

# 6 Procedures of the F1 interface

## 6.1 Control plane procedures

### 6.1.1 Interface Management procedures

The F1 Interface management procedures are listed below:

- Reset procedure;
- Error Indication procedure;
- F1 Setup procedure;
- gNB-DU Configuration Update procedure;
- gNB-CU Configuration Update procedure;
- gNB-DU Resource Coordination procedure;
- gNB-DU Status Indication procedure;
- F1 Removal procedure;
- Network Access Rate Reduction procedure;
- DU-CU TA Information Transfer procedure;
- CU-DU TA Information Transfer procedure.

### 6.1.2 Context Management procedures

The F1 Context management procedures are listed below:

- UE Context setup procedure;
- UE Context Release Request (gNB-DU initiated) procedure;
- UE Context Release (gNB-CU initiated) procedure;
- UE Context Modification (gNB-CU initiated) procedure;
- UE Context Modification Required (gNB-DU initiated) procedure;
- UE Inactivity Notification procedure;
- Notify procedure;
- Access Success procedure;
- DU-CU Cell Switch Notification procedure;

- CU-DU Cell Switch Notification procedure;
- CU-DU Mobility Initiation procedure.

### 6.1.3 RRC Message Transfer procedures

The F1 RRC message transfer procedures are listed below:

- Initial UL RRC Message Transfer procedure;
- UL RRC Message Transfer procedure;
- DL RRC Message Transfer procedure;
- RRC Delivery Report procedure.

### 6.1.3A Warning Message Transmission procedures

The F1 Warning message transmission procedures are listed below:

- Write-Replace Warning procedure;
- PWS Cancel procedure;
- PWS Restart Indication procedure;
- PWS Failure Indication procedure.

### 6.1.4 System Information procedures

The F1 System information procedures are listed below:

- System Information Delivery procedure.

### 6.1.5 Paging procedures

The F1 Paging procedures are listed below:

- Paging procedure;
- QoE Information Transfer Control procedure.

### 6.1.6 Void

### 6.1.7 Radio information transfer procedures

The F1 Radio information transfer procedures are listed below:

- DU-CU Radio Information Transfer procedure;
- CU-DU Radio Information Transfer procedure.

### 6.1.8 UE Tracing procedures

The following procedures are used to trace the UE:

- Trace Start procedure;
- Deactivate Trace procedure;
- Cell Traffic Trace procedure.

## 6.1.9 Load management procedures

The load management procedures are listed as below:

- Resource Status Reporting Initiation procedure;
- Resource Status Reporting procedure.

## 6.1.10 Self-optimisation support procedure

The following procedures are used to transfer failure and mobility related information between the gNB-CU and the gNB-DU to support self-optimisation:

- Access and Mobility Indication procedure, from gNB-CU to gNB-DU;
- DU-CU Access and Mobility Indication procedure, from gNB-DU to gNB-CU.

The following procedure is used to indicate the availability of SON related information from the gNB-DU to the gNB-CU to support self-optimisation:

- RACH Indication.

## 6.1.11 Positioning procedures

The F1 Positioning procedures are listed below:

- Positioning Assistance Information Control procedure;
- Positioning Assistance Information Feedback procedure;
- Positioning Measurement procedure;
- Positioning Measurement Report procedure;
- Positioning Measurement Abort procedure;
- Positioning Measurement Failure Indication procedure;
- Positioning Measurement Update procedure;
- TRP Information Exchange procedure;
- Positioning Information Update;
- Positioning Information Exchange procedure;
- Positioning Activation procedure;
- Positioning Deactivation procedure;
- E-CID Measurement Initiation;
- E-CID Measurement Failure Indication procedure;
- E-CID Measurement Report procedure;
- E-CID Measurement Termination procedure;
- PRS Configuration Exchange procedure;
- Measurement Preconfiguration;
- Measurement Activation;
- Positioning System Information Delivery procedure;

- SRS Information Reservation Notification procedure.

### 6.1.12 IAB procedures

The IAB procedures are listed below:

- BAP Mapping Configuration procedure;
- gNB-DU Resource Configuration procedure;
- IAB TNL Address Allocation procedure;
- IAB UP Configuration Update procedure;
- Mobile IAB F1 Setup Triggering procedure;
- Mobile IAB F1 Setup Outcome Notification procedure.

### 6.1.13 NR MBS procedures

The F1 MBS procedures are listed below:

- Broadcast Context Setup;  
Broadcast Context Release (gNB-CU initiated);
- Broadcast Context Modification;
- Broadcast Context Release Request (gNB-DU initiated);
- Multicast Group Paging procedure;
- Multicast Context Setup;
- Multicast Context Release (gNB-CU initiated);
- Multicast Context Modification;
- Multicast Context Release Request (gNB-DU initiated);
- Multicast Distribution Setup;
- Multicast Distribution Release;
- Multicast Context Notification;
- Broadcast Transport Resource Request;
- Multicast Common Configuration.

### 6.1.14 PDC Measurement procedures

The PDC measurement procedures are listed below:

- PDC Measurement Initiation procedure;
- PDC Measurement Report procedure.

### 6.1.15 QMC procedures

The QMC procedures are listed below:

- QoE Information Transfer procedure;
- QoE Information Transfer Control procedure.

## 6.1.16 Timing Synchronisation Status Reporting procedures

The following procedures are used to report the RAN timing synchronisation status information:

- Timing Synchronisation Status;
- Timing Synchronisation Status Report.

## 6.1.17 CLI indication procedure

The following procedure is used to report the result of gNB-to-gNB CLI measurements, to request mitigation of gNB-to-gNB CLI and SRS Resource configuration:

- CLI INDICATION

## 6.1.18 CSI-RS Coordination procedures

The following procedures are used to enable the coordination between the gNB-CU and the gNB-DU for CSI-RS transmission:


- DU-CU CSI-RS Coordination;
- CU-DU CSI-RS Coordination.

## 6.2 User plane procedures

# 7 F1 interface protocol structure

## 7.1 F1 Control Plane Protocol (F1-C)


Figure 7.1-1 shows the protocol structure for F1-C. The TNL is based on IP transport, comprising the SCTP on top of IP. The application layer signalling protocol is referred to as F1AP (F1 Application Protocol).

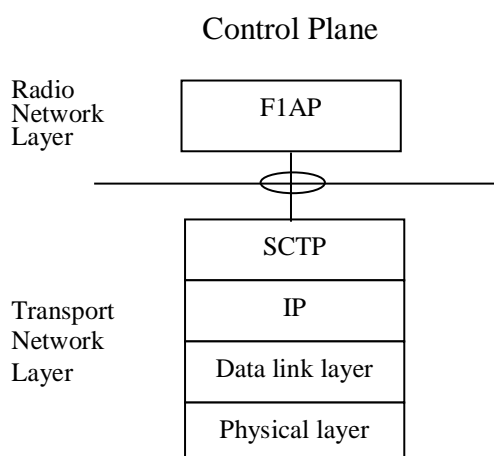

**Figure 7.1-1: Interface protocol structure for F1-C**

## 7.2 F1 User Plane Protocol (F1-U)

Figure 7.2-1 shows the protocol structure for F1-U. The TNL is based on IP transport, comprising the UDP and GTP-U on top of IP.

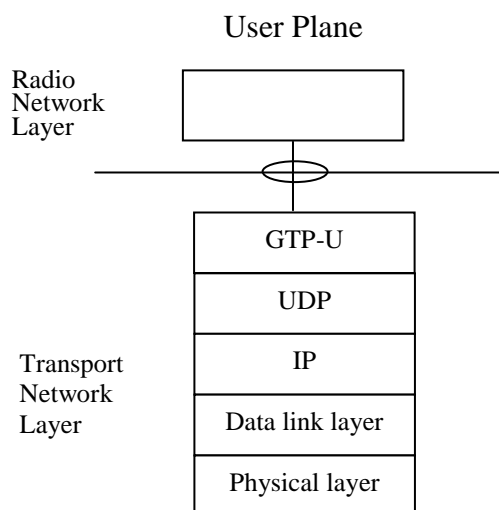

**Figure 7.2-1: Interface protocol structure for F1-U**

## 8 Other F1 interface specifications

This clause contains the description of the other related 3GPP specifications.

### 8.1 NG-RAN F1 interface: layer 1 (3GPP TS 38.471)

3GPP TS 38.471 [3] specifies the physical layer technologies that may be used to support the F1 interface.

### 8.2 NG-RAN F1 interface: signalling transport (3GPP TS 38.472)

3GPP TS 38.472 [4] specifies the signalling bearers for the F1AP for the F1-C interface.

### 8.3 NG-RAN F1 interface: F1AP specification (3GPP TS 38.473)

3GPP TS 38.473 [5] specifies the F1AP protocol for radio network control plane signalling over the F1 interface.

### 8.4 NG-RAN F1 interface: data transport and transport signalling (3GPP TS 38.474)

3GPP TS 38.474 [6] specifies the transport bearers for the user plane of the F1-U interface.

### 8.5 NG-RAN F1 interface: user plane protocol (3GPP TS 38.425)

3GPP TS 38.425 [7] specifies the user plane protocol being used over the F1-U interface.

## 8.6 NG-RAN F1 interface: PDU Session user plane protocol (TS 38.415)

3GPP TS 38.415 [12] specifies the PDU Set Information user plane protocol for sending PDU Set Information and indication of End of Data Burst over the F1-U interface.

## Annex A (informative): Change history

Change history							
Date	Meeting	TDoc	CR	Rev	Cat	Subject/Comment	New version
2017-06	R3 NR#2	R3-172492	-	-	-	First version	0.1.0
2017-07	R3 NR#2	R3-172639	-	-	-	Incorporated agreed TPs from R3 NR#2 Adhoc	0.2.0
2017-08	R3#97	R3-173450	-	-	-	Incorporated agreed TPs from R3#97	0.3.0
2017-10	R3#97b	R3-174244	-	-	-	Incorporated agreed TPs from R3#97b	0.4.0
2017-10	R3#97b	R3-174259				Merged text from TS 38.401 v040	0.4.1
2017-12	R3#98	R3-175060				Incorporated agreed TPs from R3#98	0.5.0
2017-12	RAN#78	RP-172286				Submitted for approval to RAN	1.0.0
2018-01	RP-78					TS approved by RAN plenary	15.0.0
2018-03	RP-79	RP-180468	0002	-	F	UE Context Management Procedure Related with EN-DC Operation - Stage 2	15.1.0
2018-03	RP-79	RP-180468	0006	-	B	Correction of packet duplication	15.1.0
2018-03	RP-79	RP-180468	0007	1	B	SCell management	15.1.0
2018-06	RP-80	RP-181237	0003	6	B	Introduction of SA NR (38.470 Baseline CR covering RAN3 agreements)	15.2.0
2018-06	RP-80	RP-181238	0008	3	F	Adding new F1 procedure for UE Inactivity Notification	15.2.0
2018-06	RP-80	RP-181237	0010	-	B	Introduction of LTE-NR coexistence function	15.2.0
2018-09	RP-81	RP-181922	0011	3	F	NR Corrections (38.470 Baseline CR covering RAN3-101 agreements)	15.3.0
2018-12	RP-82	RP-182446	0015	1	F	F1 Load Management	15.4.0
2018-12	RP-82	RP-182446	0016	-	F	Alignment with stage3	15.4.0
2018-12	RP-82	RP-182446	0018	2	F	CR to 38.470 on the introduction of RRC Delivery Report procedure	15.4.0
2018-12	RP-82	RP-182448	0019	-	F	Rapporteur CR to 38.470	15.4.0
2019-03	RP-83	RP-190556	0023	1		Energy Saving Support over F1 Interface	15.5.0
2019-07	RP-84	RP-191396	0034	1	F	Rapporteur updates	15.6.0
2019-07	RP-84	RP-191396	0036	1	F	Encoding of SIB9 in the gNB-DU	15.6.0
2019-12	RP-86	RP-192915	0058	2	F	E-UTRA-NR Cell-level Resource Coordination	15.7.0
2019-12	RP-86	RP-192908	0035	2	B	Remote Interference Management Message Transfer Support	16.0.0
2019-12	RP-86	RP-192908	0038	1	B	Intended DL&UL configuration for TS38.470	16.0.0
2019-12	RP-86	RP-192913	0040	2	F	Trace function Support over F1 Interface	16.0.0
2020-03	RP-87-e	RP-200425	0062	-	D	Rapporteur: Editorial updates	16.1.0
2020-07	RP-88-e	RP-201077	0026	15	B	BL CR to 38.470: Support for IAB	16.2.0
2020-07	RP-88-e	RP-201080	0059	6	B	CR to TS 38.470 on support of NPN	16.2.0
2020-07	RP-88-e	RP-201075	0063	4	B	TS38.470 Stage2 Introduction of Mobility Enhancement Features	16.2.0
2020-07	RP-88-e	RP-201082	0064	3	B	BL CR to 38.470: Addition of SON feature	16.2.0
2020-07	RP-88-e	RP-201074	0065	6	B	Support of NR V2X SIB in gNB-DU	16.2.0
2020-07	RP-88-e	RP-201079	0067	2	B	PDCP duplication with more than 2 entities for F1 stage 2	16.2.0
2020-07	RP-88-e	RP-201082	0068	1	B	BL CR to 38.470: Addition of MDT feature	16.2.0
2020-09	RP-89-e	RP-201945	0061	8	B	Positioning support over F1AP	16.3.0
2020-09	RP-89-e	RP-201956	0069	-	F	Rapporteur Corrections	16.3.0
2021-03	RP-91-e	RP-210231	0070	3	F	Correction on IAB procedures	16.4.0
2021-06	RP-92-e	RP-211330	0075		F	Stage-2 CR on system information message over F1 (Rel-16)	16.5.0
2022-03	RP-95-e	RP-220276	0084		F	(Stage-2) Clarification on IAB Address Remove	16.6.0
2022-03	RP-95-e	RP-220224	0071	8	B	Introduction of NR MBS	17.0.0
2022-03	RP-95-e	RP-220222	0076	5	B	CP-based Congestion Mitigation for IAB Network	17.0.0
2022-03	RP-95-e	RP-220230	0078	4	B	BL CR to 38.470 Support for Redcap UEs	17.0.0
2022-03	RP-95-e	RP-220228	0079	3	B	Introduction of release 17 positioning enhancements	17.0.0
2022-03	RP-95-e	RP-220235	0080	2	B	Support for UE Power Saving Enhancements	17.0.0
2022-03	RP-95-e	RP-220233	0081	2	B	CG-SDT BL CR to TS 38.470	17.0.0
2022-03	RP-95-e	RP-220236	0083	1	D	Editorial corrections	17.0.0
2022-03	RP-95-e	RP-220231	0085	1	B	(Stage-2 F1AP CR) support for NR Sidelink Relay	17.0.0
2022-03	RP-95-e	RP-220223	0086		B	Introduction of Propagation Delay Compensation Procedure	17.0.0
2022-03	RP-95-e	RP-220229	0087	-	B	Support of QoE functionality	17.0.0
2022-06	RP-96	RP-221134	0088	1	F	Corrections on NR MBS in 38470	17.1.0
2022-06	RP-96	RP-221142	0090	1	F	CR on SIB18 signalling	17.1.0
2022-06	RP-96	RP-221154	0092	-	A	Clarification on SRB duplication for TS38.470 (R17)	17.1.0
2022-06	RP-96	RP-221127	0093	2	F	Correction to 38.470 for capturing SIB19	17.1.0
2022-06	RP-96	RP-221133	0094	2	F	Clarification on paging capability for TS38.470	17.1.0
2022-06	RP-96	RP-221145	0096	-	D	Editorial corrections	17.1.0
2022-06	RP-96	RP-221145	0097	1	F	Supporting the disaster roaming information [MINT]	17.1.0
2022-06	RP-96	RP-221143	0099	-	F	QoE Rel-17 Corrections	17.1.0
2022-06	RP-96	RP-221128	0100	2	F	IAB Rel-17 Corrections	17.1.0
2022-06	RP-96	RP-221131	0101		F	CR for Preconfiguration Activation/Deactivation	17.1.0

2022-09	RP-97-e	RP-222187	0102	1	F	Clarification on F1 Paging function	17.2.0
2022-09	RP-97-e	RP-222190	0104	1	F	Correction on NR SL Relay for TS 38.470	17.2.0
2022-09	RP-97-e	RP-222184	0105	1	F	Supporting network slice AS group	17.2.0
2022-12	RP-98-e	RP-222887	0107	1	A	Correction to 38.470 on Positioning System Information	17.3.0
2022-12	RP-98-e	RP-222887	0108	1	F	Stage 2 text addition on UE context management function for positioning	17.3.0
2023-03	RAN#99	RP-230588	0110	-	A	Stage 2 text addition on SRS configuration for positioning	17.4.0
2023-06	RAN#100	RP-231075	0113	1	A	Correction of SIType List	17.5.0
2023-09	RAN#101	RP-231900	0116	-	A	Correction on Positioning SI handling over F1	17.6.0
2023-12	RAN#102	RP-233829	0111	8	B	Introduction of NR MBS enhancements	18.0.0
2023-12	RAN#102	RP-233832	0114	5	B	Addition of SON features enhancement	18.0.0
2023-12	RAN#102	RP-233834	0117	5	B	Support of mobile IAB	18.0.0
2023-12	RAN#102	RP-233823	0118	3	B	Support of NR SL relay enhancements	18.0.0
2023-12	RAN#102	RP-233838	0119	3	B	Introduction of 5G Timing Resiliency and URLLC enhancements	18.0.0
2023-12	RAN#102	RP-233833	0120	4	B	Introduction of R18 QoE measurement enhancements	18.0.0
2023-12	RAN#102	RP-233817	0121	2	B	Network energy saving techniques	18.0.0
2023-12	RAN#102	RP-233818	0123	0	B	Introduction of LTM	18.0.0
2023-12	RAN#102	RP-233816	0124	0	B	Introduction of NR RedCap Enhancement	18.0.0
2023-12	RAN#102	RP-233831	0125	0	B	Support for XR UP design using new container	18.0.0
2024-03	RAN#103	RP-240620	0122	3	B	Support of NR Positioning Enhancements	18.1.0
2024-03	RAN#103	RP-240626	0126	2	F	Correction on beam activation/deactivation for network energy saving	18.1.0
2024-03	RAN#103	RP-240632	0129	1	F	Correction on the missing SIBs for MBS and ATG in TS 38.470	18.1.0
2024-03	RAN#103	RP-240635	0130	1	F	Correction on SON for NR-U	18.1.0
2024-03	RAN#103	RP-240630	0132	1	F	Corrections on TS 38.470 for U2U relay operation	18.1.0
2024-03	RAN#103	RP-240617	0134	1	D	Rapporteur CR	18.1.0
2024-03	RAN#103	RP-240621	0135	1	F	Corrections to TS 38.470 to support LTM	18.1.0
2024-03	RAN#103	RP-240636	0137	-	F	Rel-18 Corrections of QMC	18.1.0
2024-06	RAN#104	RP-241101	0139	1	F	Correction on missing procedure for positioning	18.2.0
2024-06	RAN#104	RP-241113	0145	-	D	Rapporteur Corrections	18.2.0
2024-06	RAN#104	RP-241101	0151	-	F	Correction on SIB23 in TS38.470	18.2.0
2024-09	RAN#105	RP-241876	0152	2	F	Correction on new SIB17bis for TRS in Idle and Inactive	18.3.0
2024-09	RAN#105	RP-241879	0153	1	B	Introduction of Emergency call support in barred cells [EM_Call_Exemption]	18.3.0
2024-12	RAN#106	RP-243109	0154	2	F	Introduction of 2Rx XR devices support [2Rx_XR_Device]	18.4.0
2025-06	RAN#108	RP-251152	0158	3	F	F1 support for L3 measurements-based LTM	18.5.0
2025-09	RAN#109	RP-252674	0157	5	B	Introduction of low-power wake-up signal and receiver for NR	19.0.0
2025-09	RAN#109	RP-252675	0161	5	B	Introduction of Network Energy Saving Enhancement	19.0.0
2025-09	RAN#109	RP-252672	0163	4	B	Introduction of Evolution of NR duplex operation	19.0.0
2025-09	RAN#109	RP-252677	0164	4	B	Support for Inter-CU LTM procedure	19.0.0
2025-09	RAN#109	RP-252680	0165	4	B	Support of Multi-hop relay	19.0.0
2025-09	RAN#109	RP-252685	0166	-	F	Correction of system information management function	19.0.0
2025-12	RAN#110	RP-253341	0169	-	D	Rapporteur Corrections	19.1.0
2025-12	RAN#110	RP-253353	0170	2	F	Correction on AIML F1-U stage2	19.1.0

---

## History

<b>Version</b>	<b>Date</b>	<b>Status</b>
V19.0.0	January 2026	Publication
V19.1.0	February 2026	Publication