ETSI TS 103 412 V1.1.1 (2016-04)



Mobile Standards Group (MSG);
Pan-European eCall end to end and in-band modem conformance testing;
Prose test specification

Reference
DTS/MSG-0022

Keywords
eCall, GSM, UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: http://www.etsi.org/standards-search

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommiteeSupportStaff.aspx

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2016.
All rights reserved.

DECTTM, **PLUGTESTS**TM, **UMTS**TM and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members. **3GPP**TM and **LTE**TM are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Contents

Intelle	ectual Property Rights	9
Forew	word	9
Moda	al verbs terminology	9
1	Scope	10
2	References	10
2.1	Normative references	
2.2	Informative references.	
3	Abbreviations	
4	Glossary	
4.1	Intention of the glossary	
4.2	General	
4.3	States	
4.4	Decisions	14
4.5	Procedures	14
4.6	Tester input / output, internal tester actions / trigger	15
5	Overview	16
5 5.1		
5.1.1	Test definition methodology Derivation of Test Case Descriptions from CEN EN 16454	10
5.1.1	Structure of Test Case Descriptions Structure of Test Case Descriptions	
5.1.2	Test Purposes	
5.1.4	Pre-Test Conditions	
5.1.5	Test Sequence	
5.1.6	Final conditions	
5.2	Abstract Test Architecture	
5.2.0	Preface	
5.2.1	Overview	
5.2.1.1		
5.2.1.1		
5.2.1.1	1.2 Interface descriptions	18
5.2.1.2	PSAP Testing	18
5.2.2	Interface Specifications	18
5.2.2.1		
5.2.2.1		
5.2.2.1		
5.2.2.1		
5.2.2.1		
5.2.2.2		
5.2.2.3	e	
5.2.2. ⁴	ĕ	
5.2.3	State diagram	
5.3	Specification in TTCN	
5.4 5.5	Test Case Selection	
5.6	Test Configuration Parameters	
5.6.1	eCall Type Suffix	
5.7	TTCN Implementation	
5.8	Execution Guidelines	
6	Generic Procedures	
6.0	Preface	
6.0 6.1	General	
6.1.1	General assumptions	
6.1.2	Generic procedures	
6.1.2.(<u>.</u>	
6.1.2.1		
		20

6.1.2.2	Procedure for eCall establishment	26
6.1.2.3	Procedure for eCall in progress	29
6.1.2.4	Procedure for eCall release (PSAP initiated)	
6.1.2.5	Procedure for eCall release (IVS initiated, preceding AL-ACK call clear down)	
6.1.2.6	Procedure for PSAP callback	
6.2	Preambles	
6.3	Postambles	
6.3.0	Preface	
6.3.1	Postambles for eCall capable devices	34
6.3.2	Postambles for eCall only devices	
6.3.3	Special case: Limited Service Condition	34
7 Te	st Cases	3/
7.1	In-vehicle equipment and system (IVS)	
7.1 7.1.1	Conformance tests for in-vehicle user equipment for Pan European eCall	
7.1.1 7.1.1.1	CTP 1.1.0.1 Conformance to ETSI TS 102 936-1 and ETSI TS 102 936-2 - PE eCall IVS	
7.1.1.1 7.1.1.2a	CTP 1.1.0.1 Collidinate to ETSI 1S 102 930-1 and ETSI 1S 102 930-2 - FE eCall IVS	
7.1.1.2a 7.1.1.2a.1	Test Purpose (TP)	
7.1.1.2a.1 7.1.1.2a.2	Test applicability	
7.1.1.2a.2 7.1.1.2a.3	Conformance requirements	
7.1.1.2a.3 7.1.1.2a.4	Test description	
7.1.1.2a.4 7.1.1.2b	CTP 1.1.0.2 Test for conformance to valid SIM/USIM - PE eCall only IVS	
7.1.1.2b 7.1.1.2b.1	Test Purpose (TP)	
7.1.1.2b.1 7.1.1.2b.2		
7.1.1.2b.2 7.1.1.2b.3	11 7	
7.1.1.2b.3 7.1.1.2b.4	<u>.</u>	
7.1.1.20.4 7.1.1.3	CTP 1.1.0.3 Automatic eCall triggering does not occur when ignition OFF - PE eCall IVS	
7.1.1.3 7.1.1.3.1	Test Purpose (TP)	
7.1.1.3.1	Test applicability	
7.1.1.3.2	Conformance requirements	
7.1.1.3.3	•	
7.1.1.3.4	Test description	
7.1.1.4	Test Purpose (TP)	
7.1.1.4.1	Test applicability	
7.1.1.4.2	Conformance requirements	
7.1.1.4.3	Test description	
7.1.1.4.4	CTP 1.1.2.1 eCall automatically activated - PE eCall IVS	
7.1.1.5.1	Test Purpose (TP)	
7.1.1.5.1	Test applicability	
7.1.1.5.2	Conformance requirements	
7.1.1.5.3	Test description	
7.1.1.6	CTP 1.1.2.2 Automatically triggered eCall in progress was not disconnected upon a new eCall	50
7.11.10	trigger - PE eCall IVS	38
7.1.1.6.1	Test Purpose (TP)	
7.1.1.6.2	Test applicability	
7.1.1.6.3	Conformance requirements	
7.1.1.6.4	Test description	
7.1.1.7	CTP 1.1.2.3 Post-side-crash performance of automatic trigger - IVS	
7.1.1.7.1	Test Purpose (TP)	
7.1.1.7.2	Test applicability	
7.1.1.7.3	Conformance requirements	
7.1.1.7.4	Test description	
7.1.1.8	CTP 1.1.2.4 Post-frontal-crash performance of automatic trigger - IVS	
7.1.1.9	CTP 1.1.2.5 Performance of automatic trigger - different crash types - IVS	
7.1.1.9.1	Test Purpose (TP)	
7.1.1.9.2	Test applicability	
7.1.1.9.3	Conformance requirements	
7.1.1.9.4	Test description	
7.1.1.10	CTP 1.1.3.1 eCall manually activated - PE eCall IVS	
7.1.1.10.1	Test Purpose (TP)	
7.1.1.10.2		
7 1 1 10 3		41

7.1.1.10.4	Test description	41
7.1.1.11	CTP 1.1.3.2 Manually triggered eCall in progress was not disconnected upon a new eCall trigger	
	- PE eCall IVS	
7.1.1.11.1	Test Purpose (TP)	
7.1.1.11.2	Test applicability	
7.1.1.11.3	Conformance requirements	
7.1.1.11.4	Test description	
7.1.1.12	CTP 1.1.4.1 Test eCall activated - PE eCall IVS	
7.1.1.12.1	Test Purpose (TP)	
7.1.1.12.2	Test applicability	
7.1.1.12.3	Conformance requirements	
7.1.1.12.4	Test description	
7.1.1.13	CTP 1.1.5.1 Network registration - PE eCall IVS	
7.1.1.13.1	Test Purpose (TP)	
7.1.1.13.2	Test applicability	
7.1.1.13.3	Conformance requirements	
7.1.1.13.4	Test description	
7.1.1.14	CTP 1.1.5.2 Manual termination of eCall by vehicle occupants not allowed (automatically	
,,,,,,,,,,	triggered eCall) - PE eCall IVS	44
7.1.1.14.1	Test Purpose (TP)	
7.1.1.14.2	Test applicability	
7.1.1.14.3	Conformance requirements	
7.1.1.14.4	Test description	
7.1.1.15	CTP 1.1.5.3 Manual termination of eCall by vehicle occupants not allowed (manually triggered	
7.11.11.15	eCall) - PE eCall IVS	45
7.1.1.15.1	Test Purpose (TP)	
7.1.1.15.1	Test applicability	
7.1.1.15.2	Conformance requirements.	
7.1.1.15.3	Test description	
7.1.1.15.4	CTP 1.1.5.4 Automatically triggered eCall in progress was not disconnected when ignition is	43
7.1.1.10	switched to OFF - PE eCall IVS	16
7.1.1.16.1	Test Purpose (TP)	
7.1.1.16.1	Test applicability	
7.1.1.16.2	Conformance requirements	
7.1.1.16.3	Test description	
7.1.1.10.4	CTP 1.1.5.5 Manually triggered eCall in progress was not disconnected when ignition is	40
/.1.1.1/	switched to OFF - PE eCall IVS	16
7.1.1.17.1	Test Purpose (TP)	
7.1.1.17.1	Test applicability	
7.1.1.17.2	Conformance requirements	
7.1.1.17.3	Test description	
	CTP 1.1.5.6 Priority over conflicting communication - PE eCall IVS	
7.1.1.18 7.1.1.18.1		
	Test Purpose (TP)	
7.1.1.18.2	Test applicability	
7.1.1.18.3	Conformance requirements	
7.1.1.18.4	Test description	48
7.1.1.19	CTP 1.1.5.7 Network registration is re-tried when network registration attempt was not	40
7 1 1 20-	successful - PE eCall IVSCTP 1.1.6.1 Mute IVS and vehicle audio - PE eCall capable IVS	
7.1.1.20a	<u> •</u>	
7.1.1.20a.1	Test Purpose (TP)	
7.1.1.20a.2	Test applicability	
7.1.1.20a.3	Conformance requirements.	
7.1.1.20a.4	Test description	
7.1.1.20b	CTP 1.1.6.1 Mute IVS and vehicle audio - PE eCall only IVS	
7.1.1.20b.1	Test Purpose (TP)	
7.1.1.20b.2	Test applicability	
7.1.1.20b.3	Conformance requirements	
7.1.1.20b.4	Test description	
7.1.1.21	CTP 1.1.7.1 Set-up TS12 call with eCall identifier (flag) set to "automatic" - PE eCall IVS	
7.1.1.21.1	Test Purpose (TP)	
7.1.1.21.2	Test applicability	52 52
/ I I / I *	t concensance recontrements	¬ ′

7.1.1.21.4	Test description	50
7.1.1.21.4		
	CTP 1.1.8.1 Set-up TS12 call with eCall identifier (flag) set to "manual" - PE eCall IVS	
7.1.1.22.1	Test Purpose (TP)	
7.1.1.22.2	Test applicability	
7.1.1.22.3	Conformance requirements	
7.1.1.22.4	Test description	53
7.1.1.23	CTP 1.1.9.1 Set-up TS11 call to test number - PE eCall IVS	
7.1.1.23.1	Test Purpose (TP)	53
7.1.1.23.2	Test applicability	53
7.1.1.23.3	Conformance requirements	
7.1.1.23.4	Test description	
7.1.1.24a	CTP 1.1.10.1 eCall is attempted when no networks are available (limited service condition with	
7.11.1.2 Tu	forbidden PLMN on SIM/USIM) - PE eCall IVS	5/
7.1.1.24a.1	Test Purpose (TP)	
7.1.1.24a.1 7.1.1.24a.2		
	Test applicability	
7.1.1.24a.3	Conformance requirements	
7.1.1.24a.4	Test description	54
7.1.1.24b	CTP 1.1.10.1 eCall is attempted when no networks are available (limited service condition,	
	location update rejected by network) - PE eCall IVS	
7.1.1.24b.1	Test Purpose (TP)	55
7.1.1.24b.2	Test applicability	55
7.1.1.24b.3	Conformance requirements	55
7.1.1.24b.4	Test description	
7.1.1.25	CTP 1.1.10.2 Re-dial attempt completed within 2 minutes after eCall is dropped - PE eCall IVS	
7.1.1.25.1	Test Purpose (TP)	
7.1.1.25.2	Test applicability	
	Conformance requirements.	
7.1.1.25.3	•	
7.1.1.25.4	Test description	
7.1.1.26	CTP 1.1.10.3 Duration of eCall Initiation signal - PE eCall IVS	
7.1.1.26.1	Test Purpose (TP)	
7.1.1.26.2	Test applicability	
7.1.1.26.3	Conformance requirements	
7.1.1.26.4	Test description	57
7.1.1.27	CTP 1.1.11.1 Send MSD with indicator set to "Automatically Initiated eCall" (AleC) - PE eCall	
	IVS	58
7.1.1.27.1	Test Purpose (TP)	58
7.1.1.27.2	Test applicability	
7.1.1.27.3	Conformance requirements	
7.1.1.27.4	Test description	
7.1.1.27.4	CTP 1.1.12.1 Send MSD with indicator set to "Manually Initiated eCall" (MIeC) - PE eCall IVS	
	Test Purpose (TP)	
7.1.1.28.1	1 ' '	
7.1.1.28.2	Test applicability	
7.1.1.28.3	Conformance requirements	
7.1.1.28.4	Test description	
7.1.1.29	CTP 1.1.13.1 Send MSD with indicator set to "Test eCall" - PE eCall IVS	59
7.1.1.29.1	Test Purpose (TP)	59
7.1.1.29.2	Test applicability	59
7.1.1.29.3	Conformance requirements	60
7.1.1.29.4	Test description	
7.1.1.30	CTP 1.1.14.1 Verify MSD transfer - PE eCall IVS	
7.1.1.30.1	Test Purpose (TP)	
7.1.1.30.1	Test applicability	
7.1.1.30.2	**	
	Conformance requirements.	
7.1.1.30.4	Test description	
7.1.1.31	CTP 1.1.14.2 Un-mute IVS audio when AL-ACK received - PE eCall IVS	
7.1.1.31.1	Test Purpose (TP)	
7.1.1.31.2	Test applicability	
7.1.1.31.3	Conformance requirements	62
7.1.1.31.4	Test description	62
7.1.1.32	CTP 1.1.15.1 Establish voice link to PSAP - PE eCall IVS	62
7.1.1.32.1	Test Purpose (TP)	
7 1 1 32 2	Test amplicability	63

7.1.1.32.3	Conformance requirements	63
7.1.1.32.4	Test description	
7.1.1.33	CTP 1.1.15.2 MSD transfer request while eCall conversation in progress - PE eCall IVS	
7.1.1.33.1	Test Purpose (TP)	63
7.1.1.33.2	Test applicability	
7.1.1.33.3	Conformance requirements	
7.1.1.33.4	Test description	
7.1.1.34	CTP 1.1.15.3 eCall continuation when SEND MSD request not received (T5 expired) - PE eCall	
	IVS	65
7.1.1.34.1	Test Purpose (TP)	
7.1.1.34.2	Test applicability	
7.1.1.34.3	Conformance requirements	
7.1.1.34.4	Test description	
7.1.1.35	CTP 1.1.15.4 Call continuation when AL-ACK not received (T6 expired) - PE eCall IVS	
7.1.1.35.1	Test Purpose (TP)	
7.1.1.35.2	Test applicability	
7.1.1.35.3	Conformance requirements	
7.1.1.35.4	Test description	
7.1.1.36	CTP 1.1.15.5 MSD is transferred continuously until T7 expires and IVS reconnects loudspeaker	
	and microphone on its expiry - PE eCall IVS	67
7.1.1.36.1	Test Purpose (TP)	
7.1.1.36.2	Test applicability	
7.1.1.36.3	Conformance requirements	
7.1.1.36.4	Test description	
7.1.1.37	CTP 1.1.16.1 Clear down call automatically - PE eCall IVS	
7.1.1.37.1	Test Purpose (TP)	
7.1.1.37.2	Test applicability	
7.1.1.37.3	Conformance requirements	
7.1.1.37.4	Test description	
7.1.1.38	CTP 1.1.16.2 IVS clears down the eCall upon T2 expiry - PE eCall IVS	
7.1.1.38.1	Test Purpose (TP)	
7.1.1.38.2	Test applicability	
7.1.1.38.3	Conformance requirements	
7.1.1.38.4	Test description	
7.1.1.39	CTP 1.1.16.3 IVS registers recent eCalls - PE eCall IVS	
7.1.1.39.1	Test Purpose (TP)	
7.1.1.39.2	Test applicability	
7.1.1.39.3	Conformance requirements	
7.1.1.39.4	Test description	
7.1.1.40	CTP 1.1.17.1 Call-back allowed and able to be answered by IVS - PE eCall IVS	
7.1.1.41	CTP 1.1.17.2 Call-back answered by IVS in the event of abnormal termination - PE eCall IVS	
7.1.1.41.1	Test Purpose (TP)	
7.1.1.41.2	Test applicability	
7.1.1.41.3	Conformance requirements	
7.1.1.41.4	Test description	
7.1.1.42	CTP 1.1.17.3 MSD transfer occurs upon PSAP request during call-back - PE eCall IVS	
7.1.1.42.1	Test Purpose (TP)	
7.1.1.42.2	Test applicability	
7.1.1.42.3	Conformance requirements	
7.1.1.42.4	Test description	
7.1.1.43	CTP 1.1.17.4 Remain registered for ≥1 hr - PE eCall IVS	
7.1.1.43.1	Test Purpose (TP)	
7.1.1.43.2	Test applicability	
7.1.1.43.2	Conformance requirements	
7.1.1.43.4	Test description	
7.1.2	Conformance tests for in-vehicle user equipment for Pan European eCall - additional tests for eCall	,
,.1.2	only systems	75
7.1.2.1	CTP 1.1.1.2 IVS does not perform registration after power-up - PE eCall only IVS	
7.1.2.1.1	Test Purpose (TP)	
7.1.2.1.1	Test 1 dipose (11)	
7.1.2.1.2	Conformance requirements	
7.1.2.1.3	Test description	

History.		84	
	(informative): Recommended test case applicability		
7.4	TPS-eCall	80	
7.3	PSAP Systems		
7.2	Mobile Network Operators		
7.1.4.3	MSD transmission time with scaling of PCM signals		
7.1.4.2	MSD transmission time in noisy conditions		
7.1.4.1.5	Test requirements		
7.1.4.1.4	Method of test		
7.1.4.1.3	Test purpose		
7.1.4.1.2	Conformance requirements		
7.1.4.1.1	Definition		
7.1.4.1	MSD transmission time for different channel conditions		
7.1.4	Minimum Performance requirements for in-vehicle user equipment for Pan-European eCall		
	provider		
7.1.3	Conformance tests for in-vehicle user equipment for Pan European eCall via a third party service		
7.1.2.4.4	Test description	77	
7.1.2.4.3	Conformance requirements	77	
7.1.2.4.2	Test applicability		
7.1.2.4.1	Test Purpose (TP)		
7.1.2.4	CTP 1.1.17.5 Remain registered for ≥1 hr ≤12 hr - PE eCall only IVS		
7.1.2.3.4	Test description		
7.1.2.3.3	Conformance requirements		
7.1.2.3.2	Test applicability		
7.1.2.3.1	Test Purpose (TP)		
	eCall only IVS	76	
7.1.2.3	CTP 1.1.10.4 Verify that PLMN registration procedure is executed upon initiating an eCall - PE		
7.1.2.2	CTP 1.1.1.3 IVS periodically scans and maintains a list of available PLMNs - PE eCall only IVS76		

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI Technical Committee Mobile Standards Group (MSG).

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

1 Scope

The present document specifies the Pan-European eCall end to end and in-band modem conformance testing.

This is a complete test specification. The following information can be found in the present document:

- the overall test structure;
- the test configurations;
- the conformance requirement and reference to the core specifications;
- the test purposes; and
- a brief description of the test procedure, the specific test requirements and <eventually> short message exchange table;
- the default setting of the test parameters;
- the applicability of each test case.

The present document is valid for a Pan-European (PE) eCall IVS.

(3GPP TS 27.007)".

2 References

2.1 Normative references

References are either specific (identified by date of publication and/or edition number or version number) or non-specific. For specific references, only the cited version applies. For non-specific references, the latest version of the referenced document (including any amendments) applies.

Referenced documents which are not found to be publicly available in the expected location might be found at http://docbox.etsi.org/Reference.

NOTE: While any hyperlinks included in this clause were valid at the time of publication, ETSI cannot guarantee their long term validity.

The following referenced documents are necessary for the application of the present document.

[1]	CEN EN 16454:2015: "Intelligent transport systems - ESafety - ECall end to end conformance testing".
[2]	ETSI TS 134 123-1: "Universal Mobile Telecommunications System (UMTS); User Equipment (UE) conformance specification; Part 1: Protocol conformance specification (3GPP TS 34.123-1)".
[3]	ETSI TS 102 936-1 (V1.1.1) (2011-04): "eCall Network Access Device (NAD) conformance specification; Part 1: Protocol test specification".
[4]	ETSI TS 102 936-2 (V1.1.1) (2011-04): "eCall Network Access Device (NAD) conformance specification; Part 2: Test suites".
[5]	ETSI TS 126 269 (V13.0.0) (2015-09): "Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); eCall data transfer; In-band modem solution; Conformance testing (3GPP TS 26.269 version 13.0.0 Release 13)".
[6]	CEN EN 16062:2015: "Intelligent transport systems - ESafety - eCall high level application requirements (HLAP) using GSM/UMTS circuit switched networks".
[7]	ETSI TS 127 007: "Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE; AT command set for User Equipment (UE)

- [8] CEN EN 16072:2015: "Intelligent transport systems ESafety Pan-European eCall operating requirements".
- [9] ETSI TS 151 010-1: "Digital cellular telecommunications system (Phase 2+); Mobile Station (MS) conformance specification; Part 1: Conformance specification (3GPP TS 51.010-1)".
- [10] ETSI TS 136 508: "LTE; Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Packet Core (EPC); Common test environments for User Equipment (UE) conformance testing (3GPP TS 36.508)".
- [11] ETSI TS 124 008: "Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE; Mobile radio interface Layer 3 specification; Core network protocols; Stage 3 (3GPP TS 24.008)".
- [12] CEN EN 15722:2015: "Intelligent transport systems ESafety ECall minimum set of data".
- [13] ETSI TR 126 969: "Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); eCall data transfer; In-band modem solution; Characterization report (3GPP TR 26.969)".
- [14] Directive 96/27/EC of the European Parliament and of the Council of 20 May 1996 on the protection of occupants of motor vehicles in the event of a side impact and amending Directive 70/156/EEC or equivalent Regulation No 95 of the Economic Commission for Europe of the United Nations (UN/ECE) Uniform provisions concerning the approval of vehicles with regard to the protection of the occupants in the event of a lateral collision. Addendum 94: Regulation No 95.

NOTE: Available at http://eur-lex.europa.eu/LexUriServ/LexUriServ.do?uri=OJ:L:2007:313:0001:0057:EN:PDF.

[15] ETSI TS 100 910: "Digital cellular telecommunications system (Phase 2+); Radio Transmission and Reception (3GPP TS 05.05)".

2.2 Informative references

References are either specific (identified by date of publication and/or edition number or version number) or non-specific. For specific references, only the cited version applies. For non-specific references, the latest version of the referenced document (including any amendments) applies.

NOTE: While any hyperlinks included in this clause were valid at the time of publication, ETSI cannot guarantee their long term validity.

The following referenced documents are not necessary for the application of the present document but they assist the user with regard to a particular subject area.

- [i.1] ETSI TS 103 321: "Mobile Standards Group (MSG); eCall HLAP Conformance Testing; Abstract Test Suite (ATS) and Protocol Implementation eXtra Information for Testing (PIXIT)".
- [i.2] ETSI MSG(14)042005r1: "STF483(eCallHLAPTesting)-Feedback-CEN16454".
- [i.3] 3GPP RAN5 PRD 13: "3rd Generation Partnership Project; Technical Specification Group RAN WG5; Permanent Reference Document (PRD); EPS (E-UTRAN & EPC) TC prose specification requirements".
- [i.4] ISO 15031-3:2004: "Road vehicles -- Communication between vehicle and external equipment for emissions-related diagnostics -- Part 3: Diagnostic connector and related electrical circuits, specification and use".
- [i.5] ETSI TS 134 108: "Universal Mobile Telecommunications System (UMTS); LTE; Common test environments for User Equipment (UE); Conformance testing (3GPP TS 34.108)".
- [i.6] ETSI TS 122 011: "Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE; Service accessibility (3GPP TS 22.011)".

[i.7] ETSI TS 123 122: "Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); LTE; Non-Access-Stratum (NAS) functions related to Mobile Station (MS) in idle mode (3GPP TS 23.122)".

3 Abbreviations

For the purposes of the present document, the following abbreviations apply:

ACK ACKnowledgement AL Application Layer

AL-ACK Application Layer ACKnowledgement

AT ATtention

CAN Controller Area Network

CEN European Committee for Standardization

CM Communication Management
CTP Conformance Test Point
DFT De-registration Fallback Timer

ECE (United Nations) Economic Commission for Europe

EN European Norm

FDN Service n°2 Service Dialling Numbers
GERAN GSM/EDGE Radio Access Network
GNSS Global Navigation Satellite System

GSM Global System for Mobile Communications

HLAP Higher Layer Application Protocol

HMI Human Machine Interface

ICS Implementation Conformance Statement

IE Information Element

IGN ON IGNition ON

IMSI International Mobile Subscriber Identity
ISO International Standardization Organization

IVS In-Vehicle System LL Link Layer

LL-ACK Link Layer ACKnowledgement

MM Mobility Management
MMI Man Machine Interface
MNO Mobile Network Operator

MS Mobile Station
MSD Minimum Set of Data
MSG Mobile Standards Group
NACK Negative ACKnowledge
NAD Network Access Device

PE Pan-European

PICS Protocol Implementation Conformance Statement
PIXIT Protocol Implementation Extra Information for Testing

PLMN Public Land Mobile Network
PRD Permanent Reference Document
PSAP Public Safety Answering Point
RACH Random Access CHannel
RAN Radio Access Network
RRC Radio Resource Control

SDN Service n°4 Service Dialling Numbers

SIM Subscriber Identity Module

SS System Simulator STF Special Task Force

TC Test Case

TMSI Temporary Mobile Subscriber Identity

TP Test Purpose

TTCN Testing and Test Control Notation

UE User Equipment

UMTS Universal Mobile Telecommunications System
USIM Universal Subscriber Identification/Identity Module

UMTS Terrestrial Radio Access

4 Glossary

4.1 Intention of the glossary

For eCall there exist several specifications that use different wording. The main intention of the glossary is to provide background information on the formulations used in the present document, especially in figures 5.2.3-1 to 5.2.3-3, and to prevent ambiguities. The expressions are used throughout the whole document e.g. in the test case section as well. Please note that other documents may contain the same formulation with a different meaning.

The state diagram introduces several categories (see legend in Figure 5.2.3-1) according to which the glossary is sorted:

- States are the mirrored states of the IVS as perceived monitored at the tester. A mirror state will remain until there is any tester input / output, internal tester actions / trigger.
- Decisions are alternatives in the process. The tester makes the decision.
- Procedures describe multiple step message exchange between the IVS and the MNO/PSAP / tester. The messages may vary for different Radio Access Technologies used.
- Tester input / output, internal tester actions / trigger are events that enable a state transition. The tester input and tester output are visible on the interfaces between the IVS, the tester and the user interface. The internal tester actions / trigger are not visible on any interface but necessary within the tester to emulate the timers running in the IVS and the PSAP and enable the tester to check for correct behaviour e.g. in case of expiry of a timer. A detailed description of the timers is available in CEN EN 16062 [6], annex A.

4.2 General

PE eCall capable IVS	PE eCall capable IVS are devices that comprise commercial UE functionality as
	well as eCall service.
PE eCall only IVS	PE eCall only IVS support only eCall service.
PE eCall IVS	The expression PE eCall IVS comprises both kind of devices: PE eCall capable
	IVS and PE eCall only IVS.

4.3 States

IGNITION OFF	The vehicle ignition is switched off, i.e. the vehicle battery does not supply the IVS module with power.
	The IVS module is unpowered.
Self-test	The self-test is ongoing within the IVS.
IGNITION ON	This is the normal state of the IVS during vehicle operation when no eCall has
eCall INACTIVE /	been triggered. Depending on the device capability the device is either registered
IDLE, registered	to the network (IDLE, registered) for a PE eCall capable IVS or not registered to the network (eCall INACTIVE) for a PE eCall only IVS.
False triggering "eCall activation"	In case the vehicle occupants trigger a manual eCall by mistake they can cancel / abort the call during the time period T1.
Waiting for HMI alert	This state follows T1 expiry and ends with the IVS sending an HMI alert to the
	vehicle occupants.
In-band modem	In this state the mobile network connection is completed and the in-band modem
connected	message exchange can start.
Wait for end of	Initiation signal transmission is ongoing.
initiation signal	
Modems in sync	IVS and PSAP modems are synchronized.
MSD tx done / check whether successful	The MSD transmission is finalized.
E112 - voice call	Successful completion of the procedure "Connect voice" leads to the state "E112
	- voice call". The in-band modem connection has switched from data transmission
	mode to a voice connection.
Call cleared	In this state the PE eCall IVS stays registered to support callback functionality
callback possible	from the PSAP after an eCall is cleared down.
IDLE registered	

IGNITION ON /	Upon T9 expiry the callback functionality is not required any more for PE eCall
IDLE, registered	only IVSs. The next step is the de-registration.
Wait for de-registration	
IGNITION ON /	This state is for eCall only devices similar to the state before an eCall has been
eCall INACTIVE	triggered. The next step is "Vehicle power off".
IGNITION ON /	This state is for eCall capable devices similar to the state before an eCall has
IDLE, registered	been triggered. The next step is "Vehicle power off".

4.4 Decisions

eCall only	17	Y: The DUT is a PE eCall only IVS.
o o a ii o i ii y	•	N: The DUT is a PE eCall capable IVS.
PSAP PULL-mode?		Y: SEND MSD before initiation signal started.
		N: SEND MSD after initiation signal started.
		The CEN specifications leave the possibility to the PSAP to send an early SEND
		MSD.
CEN deci	sion to	Y: Not a valid implementation in the present document.
shortcut L	L ACK	N: Only no is used in the present document.
		(See note.)
Vehicle p	ower off?	Y: The vehicle power is switched off, i.e. the vehicle ignition is turned to off (is not
		equal to the state "IGNITION OFF").
		N: The vehicle power, i.e. the vehicle ignition is turned on.
		Please note that "Vehicle power off" does not automatically mean that the IVS
		has no power supply. Depending on the implementation the IVS may have a
		back-up battery or other mechanism to ensure power supply as CEN requires to
		support further operation in case an eCall is in progress and the vehicle power is
		switched off.
De-registe	ered?	Y: PE eCall only IVS is already de-registered.
		N: PE eCall only IVS is not yet de-registered.
NOTE:	The current s	ituation is that the latest CEN specification foresees first an LL-ACK to be sent and
		CK. Only upon reception of both the MSD transmission is considered to be
	successful. W	ithin CEN there are discussions to loosen this requirement and consider the MSD
		essful with only an AL-ACK sent / received. Since CEN has not published any
		officially supporting the AL-ACK only shortcut throughout the present document
	the decision is	s always "N". The diagram contains the option "Y" to make the reader aware of a
	potential futur	e change.

4.5 Procedures

Network registration	The messages exchanged between the IVS and the MNO/PSAP / tester during network registration depend on the Radio Access Technology (RAT) applied. After successful completion of the procedure the device is registered.
Call setup	Procedure for call establishment on mobile network level. No in-band modem behavior is covered by this procedure. This procedure comprises the state "Call established" referred to by several test cases.
Connect voice	After successful transmission of the MSD, the in-band modem connection switches from data transmission mode to a voice connection. This procedure is triggered by "IVS Audio unmuted".
Protocol exchange	Procedure comprising the message exchange necessary for clearing down a call and returning to the state "Call cleared; Callback possible; IDLE, registered".
Normal call (T11)	This procedure represents a normal call (T11) connection in contrast to the emergency call (T12) used for eCall.
De-registration	Procedure for PE eCall capable IVSs to de-register from the mobile network after "Vehicle power off".

4.6 Tester input / output, internal tester actions / trigger

Vehicle power on	The vehicle ignition is turned on. The vehicle power switching is not directly related to the power supply of the PE eCall IVS. Please refer to "Vehicle power off".
Self-test indication OK	After successful completion of the self-test the PE eCall IVS shall provide an indication to the user which is not further specified. The upper tester has to handle the processing of the information.
Trigger meC	Trigger for a manual eCall (note this is a TS12 call).
Trigger aeC	Trigger for an automatic eCall (note this is a TS12 call).
Trigger teC	Trigger for a test eCall (note this is a TS11 call).
Trigger reC	Trigger for a reconfiguration call (note this is a TS11 call) / this kind of trigger is not used within the test cases described in the present document. This kind of call occurs only in the referenced test cases in ETSI TS 151 010-1 [9] and ETSI TS 134 123-1 [2] and is listed here for completeness.
Establish meC	This is a message sent from the upper tester to the IVS in case the upper tester receives a "trigger meC".
Establish aeC	This is a message sent from the upper tester to the IVS in case the upper tester receives a "trigger aeC".
Establish teC	This is a message sent from the upper tester to the IVS in case the upper tester receives a "trigger teC".
Establish reC	This is a message sent from the upper tester to the IVS in case the upper tester receives a "trigger reC".
Cancel meC	The manually triggered call is not started / stopped before any action is performed.
HMI alert	The HMI alerts the user that an eCall is initiated and according establishment procedures start.
Start T1	Starts with "Establish meC".
Stop T1	Stops with "Cancel meC".
T1 expiry	Upon expiry of T1 the state "Waiting for HMI alert" is reached. Duration of T1 is implementation specific and may be 0 second.
Start T2	Call Cleardown Fallback Timer (CCFT), starts with the start of "Call setup".
Stop T2	Stops with "Clear down by PSAP operator or mobile network", i.e. when the PE eCall IVS receives a cleardown command.
T2 expiry	In case T2 (3 600 seconds / 1 h) expires during state "E112 voice call" the PE eCall IVS hangs up the call.
Start T3	Starts with the "Initiation signal" being sent.
Stop T3	Stops with the Initiation signal being stopped upon reception of SEND MSD in the PE eCall IVS.
T3 expiry	After T2 (2 seconds) sending of the initiation signal shall be stopped. Expiry of T2 is not further considered in the present document.
Start T4	Started after procedure for "Call setup" is completed (state "Call established" included).
Stop T4	Stops as soon as PSAP receives the initiation signal.
T4 expiry	Expiry of T4 (5 seconds) is not further considered in the present document.
Start T5	Started after procedure for "Call setup" is completed (state "Call established" included).
Stop T5	Stops with "SEND MSD".
T5 expiry	Expiry of T5 (5 seconds) is not further considered in the present document.
Start T6	Start after "LL ACK".
Stop T6	Stop after "AL ACK" and procedure "Connect voice".
T6 expiry	Expiry of T6 (5 seconds) is not further considered in the present document.
Start T7	Start upon "MSD tx" starts.
Stop T7	Stop after "LL ACK".
T7 expiry	Expiry of T7 (20 seconds) is not further considered in the present document.
Start T8	Starts with "SEND MSD".
Stop T8	Stops with successful "MSD Tx" on LL.
T8 expiry	No MSD reception within T8 (20 seconds) is not further considered in the present document.
Start T9	Starts after the voice call is cleared down. T9 is unstoppable.
T9 expiry	Expires T9 (3 600 seconds / 60 minutes) after the voice connection is cleared down. Only after T9 expiry PE eCall IVS may deregister. T9 expiry is the regular behavior, not a failure.
Start T10	Starts after the voice call is cleared down.
Stop T10	Stops upon a new call, e.g. "Call back (by PSAP)".

T10 expiry	Upon expiry of T10 (12 h) PE eCall only IVS will de-register from the network the
OEND MOD	latest.
SEND MSD	SEND MSD signal is sent from the PSAP to the PE eCall IVS.
Initiation signal	The PE eCall IVS sends the initiation signal also referred to as PUSH-REQ.
Initiation signal stops	The transmission of the initiation signal is stopped.
Stop SEND MSD	The transmission of the SEND MSD is stopped.
MSD tx	The PE eCall IVS transmits the MSD. The signal consists of several repeating
	pulses.
LL ACK	Link layer acknowledgement is sent to the PE eCall IVS.
AL ACK	Application layer acknowledgement is sent to the PE eCall IVS.
IVS Audio unmuted	The audio functionality of the IVS is unmuted, i.e. the microphone and speaker
	are connected.
Hang up	The PE eCall IVS hangs up the call if advised to do so by the PSAP operator.
Clear down by PSAP	Clear down initiated by the PSAP operator or the mobile network.
operator or mobile	
network	
Vehicle power off	The vehicle ignition is turned off. In case an eCall is in progress, CEN
	specification foresees that the PE eCall IVS keeps the call ongoing. Hence, the
	"Vehicle power off" is not directly related to the power supply of the PE eCall IVS.
Call back (by PSAP)	After an eCall is completed the PSAP has the option to call back the PE eCall IVS
	while T9 is running.
Clear down	Same as "Clear down by PSAP operator or mobile network".
De-register	The earliest after T9 expiry, the latest after T10 expiry, PE eCall only IVSs
	de-register from the network.
De-registered:= true	The PE eCall only IVS is de-registered which allows the PE eCall only IVS to
	reach the state IGNITION ON / eCall INACTIVE.

5 Overview

5.1 Test definition methodology

5.1.1 Derivation of Test Case Descriptions from CEN EN 16454

Some of the test cases contained in CEN EN 16454 [1] have been implemented in ETSI TS 103 321 [i.1]. The implementation was done in TTCN-3. As a result of this activity it has become evident that the test cases are specified in a way which makes difficult to employ these test cases for certification. On the one hand they leave a great degree of freedom to the operator on what steps to perform, and on the other hand clear and unambiguous PASS criteria are missing and left to the test operator to valuate [i.2].

The present document undertakes to refine the test cases contained in CEN EN 16454 [1] in such a way that the intended degree of freedom is "translated" in well-defined possible sequences of test steps which can be derived from the CEN EN 16454 test case. Furthermore the initial conditions are defined more rigidly; this is feasible because the test architecture is defined including the formalization of the messages exchanged between the entities involved in the test system.

5.1.2 Structure of Test Case Descriptions

The test case descriptions consist of the following parts:

- Test Purposes
- Conformance Requirement, in any case including a reference to the TC in [1]
- Test Description

Consisting of:

- Pre-Test Description
- Test Sequence
- Specific message contents

5.1.3 Test Purposes

Defined in the test case section according to [i.3].

5.1.4 Pre-Test Conditions

Defined in the test case section according to [i.3].

5.1.5 Test Sequence

Defined in the test case section according to [i.3].

5.1.6 Final conditions

In order to clean up at the end of test cases, refer to clause 6.3 Postambles.

5.2 Abstract Test Architecture

5.2.0 Preface

The entities involved in the testing are to be identified and the messages exchanged between them are to be specified.

Different architectures will be needed to deal with the test objects which appear in [1].

5.2.1 Overview

5.2.1.1 IVS Testing

5.2.1.1.1 Test Model IVS

Presently the assumed test model is provided in figure 5.2.1.1.1-1.

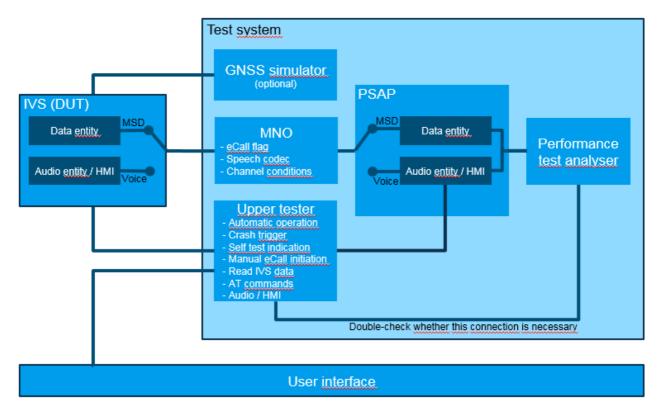


Figure 5.2.1.1.1-1: IVS Test Model

5.2.1.1.2 Interface descriptions

Not only the interfaces external to the tester are provided, but also the internal interfaces are modelled here. Distinction between internal and external interfaces is to be discussed. Doing so should allow not to forget anything.

Interface IVS - MNO

- Non-transparent messages: having significance for the communication between IVS and MNO only
- Transparent messages: transiting through the MNO without being modified (contents)

Interface IVS - PSAP Data

• Transparent at the MNO, e.g. MSDs

Interface IVS - PSAP Voice

• Transparent at the MNO

Interface IVS - Crash Trigger

• Not considered in the present document

Interface IVS - Upper tester

• To trigger actions at the IVS (issue an eCall, turn on the ignition, etc.)

Interface MNO - PSAP Data

Non-Transparent only at the MNO

Interface MNO - PSAP Voice

• Always transparent

5.2.1.2 PSAP Testing

For further study.

5.2.2 Interface Specifications

5.2.2.1 IVS Testing

5.2.2.1.0 Preface

IVS and Tester share 3 interfaces which are handled by different sub-functionalities in the Tester (figure 5.2.1.1.1-1):

- IVS and Upper Tester
- IVS and MNO
- IVS and GNSS Simulator

5.2.2.1.1 IVS and Upper Tester

The following MMI commands are used.

Table 5.2.2.1.1-1: MMI commands

Command	Para	ameters	
Command	Name	Value	
"CHECK SELF TEST INDICATION OK"	(r	none)	
"CANCEL ECALL"	(r	none)	
"CALLBACK IVS"	(r	none)	
"CHECK_IVS_AUDIO_MUTED"	(none)		
"CHECK_IVS_AUDIO_UNMUTED"	(none)		
"CHECK_ENTERTAINMENT_AUDIO_MUTED"	(r	none)	
"CHECK_ENTERTAINMENT_AUDIO_UNMUTED"	(r	none)	
"VEHICLE_POWER"	"STAT"	<on, off=""></on,>	
"AUDIO"	"STAT"	<on, off=""></on,>	
"CHECK_HMI_ALERT"	"STAT"	<on, off=""></on,>	
"INSERT_USIM"	"TEXT"	<insert,< td=""></insert,<>	
		remove>	

- NOTE 1: The (non-CHECK) commands do not trigger a response at the Upper Tester interface, but cause effects which are detectable elsewhere.
- NOTE 2: The CHECK commands imply reception of a response. It is out of scope of the present document how this response is received. However, if the tester logs provide traceable evidence this supports e.g. certifiers in their evaluation of the reliability of results received. As a general rule, results obtained by a human operator may be considered as less reliable than results obtained by some machine type device.

The AT commands in ETSI TS 127 007 [7] shall be used. Table 5.2.2.1.1-2 provides some examples.

Table 5.2.2.1.1-2: AT commands

Command	Parameters		
Command	Name Value		
"TRIGGER ECALL"	+CECALL	<type_of_ecall></type_of_ecall>	
"HANG_UP_CALL"	+CHUP		

It is recommended to use a diagnosis plug according ISO 15031-3 [i.4] (ideally CAN bus) to enable communication between IVS and tester (e.g. to retrieve data from the IVS).

5.2.2.1.2 IVS and MNO

Two types of messages are transported across this interface:

- Signalling messages required to connect the IVS to the network and get the IVS registered. These messages shall be as defined in the specification, ETSI TS 124 008 [11].
- The connection between MNO and PSAP is realized inside the tester. As this interface is not subject of testing the message exchanged across this interface are not relevant here.
- Higher layer messages which are exchanged between IVS and PSAP across an inband modem connection.
 The network connection allows a transparent connection between both entities. Only the following messages are defined between IVS and PSAP in the HLAP.

Table 5.2.2.1.2-1: Inband modem messages

Mossage	Explanation					
Message	Direction	Comment				
SEND MSD (START signal)	-> IVS					
PUSH-REQ	-> PSAP	Initiation signal				
MSD TX	-> PSAP	Composite message using				
		incremental redundancy				
LL ACK	-> IVS					
AL ACK (Positive)	-> IVS					
AL ACK (Call Clear Down)	-> IVS					
NACK	-> IVS					

5.2.2.1.3 IVS and GNSS Simulator

This functionality is optional and not employed for the time being. Therefore the message exchange across this interface is not yet defined.

5.2.2.2 MNO Testing

For further study.

5.2.2.3 PSAP Testing

For further study.

5.2.2.4 TPS-eCall Testing

For further study.

5.2.3 State diagram

Derived from CEN EN 16454 [1]. Subsequent state diagram is related to the Permanent Reference Document of the Technical Specification Group RAN WG5 from the 3GPP RAN5 PRD 13 [i.3].

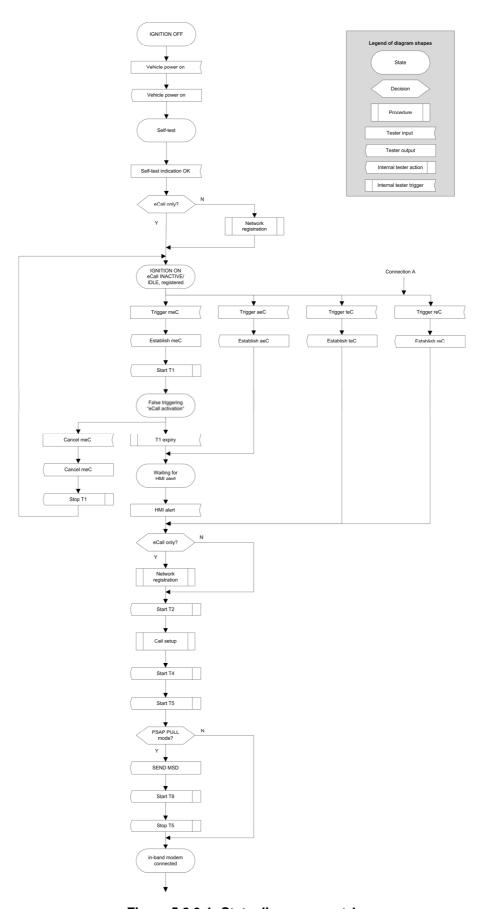


Figure 5.2.3-1: State diagram - part 1

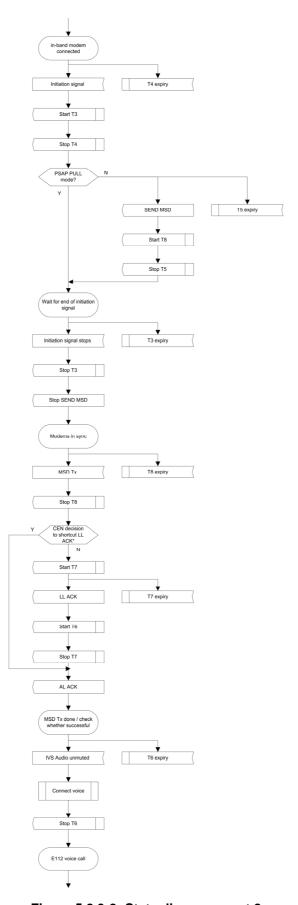


Figure 5.2.3-2: State diagram - part 2

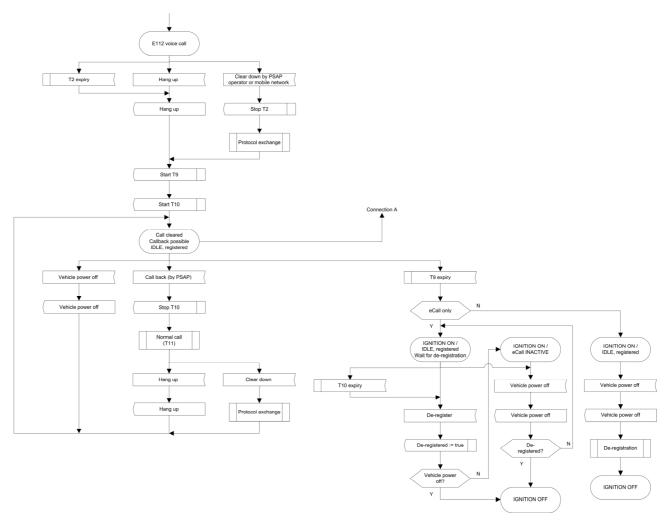


Figure 5.2.3-3: State diagram - part 3

5.3 Specification in TTCN

The present document is a prose text specification for Pan-European eCall end to end and in-band modem conformance testing derived from CEN EN 16454 [1]. It does not contain any TTCN-3 but can be used as a basis for future TTCN-3 development.

5.4 Capabilities

PE eCall IVS can support different capabilities which effect the test case applicability:

- PE eCall capable IVS vs. PE eCall only IVS
- GSM only IVS vs. GSM and UTRA IVS
- IVS including back-up battery vs. IVS not including back-up battery
- exchangeable or reconfigurable SIM / USIM vs. embedded and non-configurable SIM / USIM
- the IVS can distinguish different crash types or not

Some capabilities depend on the integration status. If test cases are passed in an earlier integration status they can be assumed to be passed in the more complex environment. To optimize testing time it is recommended to use an IVS without back-up battery except for the test cases explicitly testing the back-up battery.

5.5 Test Case Selection

For further study.

5.6 Test Configuration Parameters

5.6.1 eCall Type Suffix

The following eCall types can be triggered (see clause 6.1.2.2):

- Automatic eCall
- Manual eCall
- Test eCall
- Reconfiguration Call

NOTE: Reconfiguration Call is not used by the test sequences in the present document.

The applicable preambles for a test case are specified in the "Pre-test conditions" section. Several preambles can apply to a given test case, to differentiate between concrete versions of executed test cases the following suffixes will be used:

- ta trigger automatic eCall (preamble 2)
- **tm** trigger manual eCall (preamble 3)
- **tt** trigger test eCall (preamble 11)

Even if only one preamble is applicable the eCall type suffix should be specified. The suffix only refers to the eCall initiation in the preamble, subsequent eCall triggers in the test sequence shall specify the eCall type.

EXAMPLE: Test case CTP 1.1.14.1 (see clause 7.1.1.30) is applicable for three eCall types, which implies that the test case shall be instantiated by using the appropriate suffix, leading to three possible tests:

- ctp_1_1_14_1_ta uses preamble 2;
- ctp_1_1_14_1_tm uses preamble 3;
- ctp_1_1_14_1_tt- uses preamble 11.

5.7 TTCN Implementation

The TTCN Implementation allows to check for consistency and completeness of the description. It can be used as basis for a subsequent implementation.

5.8 Execution Guidelines

If derivates of CEN TCs allow to select different TCs then there should be clear rules under which circumstance which derived test is allowable. Such guidelines may differ when a certification test is to be run and when some "field" test is to be performed.

The hooks are to be provided in the TTCN.

6 Generic Procedures

6.0 Preface

All signalling and protocol tests shall use the reference environments specified in ETSI TS 136 508 [10]. Where a test requires an environment that is different, this is specified in the test itself.

6.1 General

6.1.1 General assumptions

The following assumptions are made concerning the initial conditions (prerequisites). Preambles rely on these assumptions being fulfilled. They may therefore add further conditions or specify conditions in more detail, or exceptionally state which restrictions are to be applied.

Prerequisites:

- MNO and PSAP Test Points are available
- USIM is configured
- no eCall is ongoing
- no IVS errors
- automatic eCall is enabled
- test call number is available
- IVS data access is established
- Crash trigger is enabled

In order to avoid unnecessary repetitions of e.g. the self-test, two preamble states are distinguished:

- IGN_OFF
- IGN_ON

The initial preamble state is IGN_OFF:

- Mobile environment is configured so that IVS is in (good) Mobile Coverage
- IVS is ignited (vehicle power is switched on)
- self test is performed
- IVS is network registered if not an eCall Only device

The resulting preamble state is IGN_ON.

A previously run test case may leave the UE in this state.

6.1.2 Generic procedures

6.1.2.0 Preface

These procedures serve as building blocks which can be used in preambles, test bodies and postambles.

6.1.2.1 Procedure for network registration

UMTS:

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	RRC Connection establishment. The SS verifies that the IE "Establishment cause" in the received RRC CONNECTION REQUEST message is set to: Registration.	-	-	1	-
2		>	LOCATION UPDATING REQUEST	-	-
3		<	LOCATION UPDATING ACCEPT	-	-
4		>	TMSI REALLOCATION COMPLETE	-	-
5	RRC Connection release.	-	-	-	-

NOTE 1: Step 3 may be with type IMSI attach. Then step 4 will not have to be done. To be checked.

NOTE 2: Authentication procedure is done.

GERAN:

Step	Procedure	Message Sequence			Verdict
-		1 - T	Message		
1	RRC Connection establishment. The SS verifies that the MS sends RACH Request with "Establishment cause" set to Location updating.	-	-	-	-
2		>	CHANNEL REQUEST	-	-
3		<	IMMEDIATE ASSIGNMENT	-	-
4		>	LOCATION UPDATING REQUEST	-	-
5		<	LOCATION UPDATING ACCEPT	-	-
6		>	TMSI REALLOCATION COMPLETE		
7		<	CHANNEL RELEASE		
8	RRC Connection release.				

NOTE 3: Step 4 may be with type "Normal location updating" or "IMSI Attach".

NOTE 4: Authentication procedure likely has to be done.

6.1.2.2 Procedure for eCall establishment

The procedure is parametrized with the type of eCall.

Possible values:

- automatic eCall
- manual eCall
- test eCall
- reconfiguration eCall

UMTS:

Step	Procedure		Message Sequence	TP	Verdict
-		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	UE is made to initiate an eCall of the requested type in accordance with manufacturer's instructions (see note)	-	-	-	-
3	UE performs RRC procedure with cause "Emergency call"	-	-	-	-
4	The CM service type IE indicates "emergency call establishment"	>	CM SERVICE REQUEST	-	-
5		<	AUTHENTICATION REQUEST	-	-
6		>	AUTHENTICATION RESPONSE	-	-
7	SS starts RRC security procedure			-	-
8		>	EMERGENCY SETUP (see note)	-	-
9		<	CALL PROCEEDING	-	-
10		<	ALERTING	-	-
11		<	CONNECT	-	-
12		>	CONNECT ACKNOWLEDGE	-	-
NOTE:	The type of eCall is a parameter to this proce	dure.			

Sequence for automatic or manual eCall

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	UE is made to initiate an eCall of the requested type in accordance with manufacturer's instructions (see note)	-	-	-	-
3	UE performs RRC procedure with cause "originatingConversationalcall"	-	-	-	-
4	The CM service type IE indicates "originating conversational call"	>	CM SERVICE REQUEST	-	-
5		<	AUTHENTICATION REQUEST	-	-
6		>	AUTHENTICATION RESPONSE	-	-
7	SS starts RRC security procedure			-	-
8		>	SETUP (see note)	-	-
9		<	CALL PROCEEDING	-	-
10		<	ALERTING	-	-
11		<	CONNECT	-	-
12		>	CONNECT ACKNOWLEDGE	-	-
NOTE:	The type of eCall is a parameter to this proce	dure.			

Sequence for test eCall and reconfiguration eCall

GERAN:

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	UE is made to initiate an eCall of the	-	-	-	-
	requested type in accordance with				
	manufacturer's instructions (see note)				
3	UE sends RACH Request with "Establishment	>	CHANNEL REQUEST	-	-
	cause is emergency call establishment"				
4		<	IMMEDIATE ASSIGNMENT	-	-
5	The CM service type IE indicates "emergency	>	CM SERVICE REQUEST		
	call establishment"				
6		<	CM SERVICE ACCEPT	-	-
7	SS starts RRC security procedure			-	-
8		>	EMERGENCY SETUP (see note)	-	-
9		<	CALL PROCEEDING	-	-
10		<	ALERTING	-	-
11		<	ASSIGNMENT COMMAND	-	-
12		>	ASSIGNMENT COMPLETE	-	-
13		<	CONNECT		
14		>	CONNECT ACKNOWLEDGE		
NOTE:	The type of eCall is a parameter to this proce	dure.			

Sequence for automatic or manual eCall

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	UE is made to initiate an eCall of the requested type in accordance with manufacturer's instructions (see note)	-	-	-	-
3	UE sends RACH Request with "Establishment cause is originating call establishment"	>	CHANNEL REQUEST	-	-
4		<	IMMEDIATE ASSIGNMENT	-	-
5	The CM service type IE indicates "originating call establishment"	>	CM SERVICE REQUEST		
6		<	CM SERVICE ACCEPT	-	-
7	SS starts RRC security procedure			-	-
8		>	SETUP (see note)	-	-
9		<	CALL PROCEEDING	-	-
10		<	ALERTING	-	-
11		<	ASSIGNMENT COMMAND	-	-
12		>	ASSIGNMENT COMPLETE	-	-
13		<	CONNECT		
14		>	CONNECT ACKNOWLEDGE		
NOTE:	The type of eCall is a parameter to this proce	dure.			

Sequence for test eCall and reconfiguration eCall

NOTE 1: Could be presented as specific message contents as well.

For an Automatic eCall the Emergency Service Category IE bit 7 is set to 1 and all other bits are set to 0.

For a Manual eCall the Emergency Service Category IE bit 6 is set to 1 and all other bits are set to 0.

For a Test eCall and a Reconfiguration eCall Emergency Service Category IE is not provided.

NOTE 2: The eCall is established.

6.1.2.3 Procedure for eCall in progress

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	UE is made to establish an eCall of the requested type in accordance with manufacturer's instructions. (see note)	-	-	-	-
2	eCall indicator - initiation	>	PUSH-REQ		
3	PSAP requests MSD	<	SEND MSD	-	-
4	IVS sends MSD	>	MSD tx	-	-
5	PSAP is not able to decode MSD at LL	<	NACK		
6	PSAP received valid MSD message at LL	<	LL-ACK	-	-
7	PSAP received valid MSD message at AL	<	AL-ACK	-	-
NOTE:	The type of eCall is a parameter to this proce	edure.			

6.1.2.4 Procedure for eCall release (PSAP initiated)

Step	Procedure	Message Sequence		TP	Verdict
		1 - T	Message		
1		<	DISCONNECT	-	-
2		>	RELEASE	-	-
3		<	RELEASE COMPLETE	-	-
4		<	CHANNEL RELEASE	-	-
5	RRC Connection release	-	-	-	-

6.1.2.5 Procedure for eCall release (IVS initiated, preceding AL-ACK call clear down)

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1		>	DISCONNECT	-	-
2		<	RELEASE	-	-
3		>	RELEASE COMPLETE	-	-
4		>	CHANNEL RELEASE	-	-
5	RRC Connection release	-	-	-	-

NOTE: GERAN only.

6.1.2.6 Procedure for PSAP callback

UMTS

Step	Procedure	Message Sequence			Verdict
		I-T	Message		
1	Paging	<	-	-	-
2	PAGING RESPONSE	>	-	-	-
3		<	AUTHENTICATION REQUEST	-	-
4		>	AUTHENTICATION RESPONSE	-	-
5	SS starts RRC security procedure			-	-
6		<	SETUP	-	-
7		>	CALL CONFIRMED	-	-
8		>	ALERTING	-	-
9		>	CONNECT	-	-
10		<	CONNECT ACKNOWLEDGE	-	-
			(see note 2)		

Step	Dire	ction	Message	Comments		
	UE	SS				
1			Mobile terminated establishment of Radio Resource Connection	See ETSI TS 134 108 [i.5], clause 7.1.2 Establishment cause: Terminating Conversational Call.		
2	-:	>	PAGING RESPONSE			
3	<	:-	AUTHENTICATION REQUEST			
4	-:	>	AUTHENTICATION RESPONSE			
5	<	:-	SECURITY MODE COMMAND			
6	-:	>	SECURITY MODE COMPLETE			
7	<	:-	SETUP	U6 (see note 1)		
8	-:	>	CALL CONFIRMED	U9		
A9	-:	>	CONNECT	U8, p = Y (see note 2)		
B9	-:	>	ALERTING	U7, p = N (see note 2)		
B10	U	ΙE		(see note 3)		
B11	-:	>	CONNECT	U8		
12			Radio Bearer Setup Procedure	See ETSI TS 134 108 [i.5], clause 7.1.3		
13	<	:-	CONNECT ACKNOWLEDGE	U10		
NOTE 1:	TE 1: With signal information included in the SETUP message.					

NOTE 2: The UE is supporting immediate connect (p = Y/N). See ICS/IXIT statement.

NOTE 3: If necessary (see ICS/IXIT statement), the UE is made to accept the call in the way described in a ICS/IXIT statement.

6.2 Preambles

Preamble 1 for PE eCall capable IVS Testing:

Pre-test conditions

System Simulator:

• 1 cell, default parameters (GERAN: ETSI TS 151 010-1 [9], UMTS: ETSI TS 134 123-1 [2]).

IVS:

• The IVS is equipped with a USIM containing default values except for those listed below.

USIM field	Value/Remark
EF _{UST}	Service n°4 Service Dialling
	Numbers (SDN) and Service n°89
	eCall Data available
EF _{SDN}	Last two entries of SDNs, eCall
ODIT	Test Number (123456) and eCall
	reconfiguration number (345678)
EF _{EST}	Enabled Services Table

Preamble:

• IVS is switched on, is registered on a PLMN and is in MM IDLE state (Preamble 1).

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
-	EXCEPTION: Steps 1 to 3 shall be performed if	-	-	-	-
	PreambleState = IGN_OFF				
1	Set the cell type of cell 1 to the "Serving cell".	-	-	-	-
2	Power on/switch on the IVS	-	-	-	-
3	IVS performs self-test (see note 1)	-	-	-	-
4	Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
	(see note 2)				

NOTE 1: The result of the self-test is checked.

NOTE 2: This step is not performed for eCall Only IVS. See Preamble 1 for IVS only Testing. In such a case the network registration will happen at the point of time when it is needed.

NOTE 1: Insertion of the right USIM could be integrated as preamble step; not done for now as this would mean a delay in TC execution as a prompt would come up "Please insert ..." This would ensure, however, that the correct USIM is inserted Text in pre-test condition concerning the UE could then be simplified.

Preamble 1 for PE eCall only IVS Testing:

Pre-test conditions

System Simulator:

1 cell, default parameters (GERAN: ETSI TS 151 010-1 [9], UMTS: ETSI TS 134 123-1 [2]).

IVS:

The IVS is equipped with a USIM containing default values except for those listed below.

USIM field	Value/Remark
EF _{UST}	Service n°2 Service Dialling
	Numbers (FDN) and Service
	n°89 eCall Data available
EF _{FDN}	Display two FDNs, eCall Test
1511	Number (123456) and eCall
	reconfiguration number
	(345678)
EF _{EST}	Enabled Services Table

Preamble:

• IVS is powered on and in MM IDLE eCALL INACTIVE state. In this state the IVS with an "eCall only" subscription shall not be registered on a network but may perform a background scan to identify available PLMNs.

Step	Procedure		Message Sequence	TP	Verdict			
		I - T	Message					
-	EXCEPTION: Steps 1 to 3 b shall be performed	-	-	-	-			
	if PreambleState = IGN_OFF							
1	Set the cell type of cell 1 to the "Serving cell"	-	-	-	-			
2	Vehicle Power ON	-	-	-	-			
3	IVS performs self-test (see note)	-	-	-	-			
NOTE	NOTE: The result of the self-test is checked.							

NOTE 2: Insertion of the right USIM could be integrated as preamble step; not done for now as this would mean a delay in TC execution as a prompt would come up "Please insert ..." This would ensure, however, that the correct USIM is inserted Text in pre-test condition concerning the UE could then be simplified.

Preamble 2:

Preamble 1 with an automatic eCall in progress.

Step	Procedure	Message Sequence			Verdict
		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed with parameter automatic eCall				

Preamble 3:

Preamble 1 with a manual eCall in progress.

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed				
	with parameter manual eCall				

Preamble 4:

Preamble 1 with a conflicting communication in progress (see CEN EN 16072 [8], clause 7.4).

Step	Procedure	Message Sequence			Verdict
		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	Turn the audio on	-	-	-	-

Preamble 5:

Preamble 1 with limited service condition established.

Step	Procedure		Message Sequence	TP	Verdict		
		I-T	Message				
1	Steps of Preamble 1 with special USIM (see note)	1	-	-	-		
NOTE:	NOTE: USIM with IVS put in limited service. Step 1 of preamble 1 is adapted.						

Preamble 6:

Preamble 1 with emergency speech ongoing.

Step	Procedure		Message Sequence			Verdict
		I-T		Message		
1	Steps of Preamble 1	-	-		-	-
2	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed with eCall type as parameter	-	-		-	-
3	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed	-	-		-	-

Preamble 7:

Preamble 1 with test eCall completed and timer T9 running.

Step	Procedure		Message Sequence			Verdict
		I-T		Message		
1	Steps of Preamble 1	-	-		-	-
2	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed with parameter test eCall (see note 1)	-	-		-	-
3	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed	-	-		-	-
4	Steps of the generic procedure for eCall release (clause 6.1.2.4) are performed	-	-		-	-
5	Start Timer T9 (see note 2)	-	-		-	-
-	1: The test eCall is established.					

NOTE 2: T9 is running for 3 600 seconds uninterruptable!

How to get around T9 if considered too long:

CEN EN 16062 [6], clause 7.9:

"The eCall only IVS responsible for the eCall system network de-registration fallback timer (DFT) shall be reset following call clear-down to control the maximum time that the IVS responsible for the eCall system stays registered on the network (T10 - IVS NAD (eCall only configuration) network De-registration Fallback Timer (DFT)) (see annex A) or loss of power shall have the effect to cause de-registration, (whichever occurs first)".

Preamble 8:

Void.

Preamble 9:

Preamble 1 with test eCall completed and callback in progress.

Step	Procedure	Message Sequence			Verdict
		I - T	Message		
1	Steps of Preamble 7 (see note)	-	-	-	-
k+1 cc	<establish back="" call=""></establish>				
NOTE:	A test eCall has been completed.				

CEN EN 16062 [6], clause 7.10 (except point c which is covered by another CTP).

The PSAP operator shall be able to initiate a call back using the PSAP application system (e.g. call back application user interface) or directly dialling the number using a conventional phone as defined in CEN EN 16072 [8].

CEN EN 16072 [8], clause 7.17.3.

See also ETSI TS 134 123-1 [2], clause 10.1.3.

Preamble 10:

Steps 1-3 of Preamble 1.

Preamble 11:

Preamble 1 with a test eCall in progress.

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Steps of Preamble 1	-	-	-	-
2	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed with parameter test eCall.				

6.3 Postambles

6.3.0 Preface

In order to reach the initial state for testing the IVS needs to be de-registered and the vehicle power has to be turned down. See state IGNITION OFF in the state diagram in clause 5.2.3.

As the IVS behaviour at the end of an emergency call differs considerably between a PE eCall capable IVS and a PE eCall only IVS different from postambles are specified.

Due to the time duration these postambles are specified in 2 variants: a short variant which allows to run the test cases in a time efficient way, and a long variant which respects the full requirements on eCall devices. It is up to the test operator to choose the appropriate postamble. E.g. a certifier may be interested to run the long variant as he/she wants to ensure that the IVS fully obeys the rules.

NOTE: Optimizations of the test execution by shortening the postambles and starting the subsequent test in a state other than IGNITION OFF are out of the scope of the present document.

6.3.1 Postambles for eCall capable devices

A. Long variant

If a test has a call set up this call is cleared down according to the procedure in clause 6.1.2.4.

Expiry of T9 is expected.

The IVS is de-registered by the Tester sending a DETACH message.

The IVS is powered down by the Tester sending a "Vehicle power off".

B. Short variant

If a test has a call set up this call is cleared down according to the procedure in clause 6.1.2.4.

The IVS is powered down by the Tester sending a "Vehicle power off".

6.3.2 Postambles for eCall only devices

A. Long variant

If a test has a call set up this call is cleared down according to the procedure in clause 6.1.2.4.

Expiry of T9 is expected.

The Tester waits for the deregistration of the UE. This will happen within 12 hours after the call release.

The IVS is powered down by the Tester sending a "Vehicle power off".

B. Short variant

If a test has a call set up this call is cleared down according to the procedure in clause 6.1.2.4.

The IVS is powered down by the Tester sending a "Vehicle power off".

6.3.3 Special case: Limited Service Condition

In case the Limited Service Condition has been established by inserting a special USIM the postamble as described above needs to be completed by inserting a USIM which does not have a Forbidden PLMN registered.

In case the Limited Service Condition has been established by performing an appropriate protocol sequence the postamble as described above needs to be completed by the counterpart sequence to erase the Forbidden PLMN condition from the USIM.

7 Test Cases

7.1 In-vehicle equipment and system (IVS)

7.1.1 Conformance tests for in-vehicle user equipment for Pan European eCall

7.1.1.1 CTP 1.1.0.1 Conformance to ETSI TS 102 936-1 and ETSI TS 102 936-2 - PE eCall IVS

The tests shall be performed at the system level with the behaviour, inputs and outputs as defined in ETSI TS 102 936-1 [3] and ETSI TS 102 936-2 [4], or provide certification from NAD supplier that such tests have been met. The test case list provided in the tables 5.1 and 6.1 of clauses 5.2 and 6.2 in ETSI TS 102 936-1 [3] is outdated. Instead, all test cases listed in ETSI TS 151 010-1 [9], clause 26.9.6a and - if applicable - ETSI TS 134 123-1 [2], clause 13.3 shall be carried out.

7.1.1.2a CTP 1.1.0.2 Test for conformance to valid SIM/USIM - PE eCall capable IVS

7.1.1.2a.1 Test Purpose (TP)

(1)

```
with { IVS in mobile network coverage and the ignition is OFF }
ensure that {
  when { vehicle Power ON }
    then { network registration }
}
```

7.1.1.2a.2 Test applicability

This test case applies to PE eCall capable IVS.

7.1.1.2a.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.1.2 paragraph 2; clause 7.12.2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.0.2.

7.1.1.2a.4 Test description

7.1.1.2a.4.1 Pre-test conditions

Ignition OFF.

7.1.1.2a.4.2 Test procedure sequence

Table 7.1.1.2a.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
1	Vehicle Power ON	-	-	-	-
2	Self-test	-	-	-	-
3	Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	1	Р

7.1.1.2a.4.3 Specific message contents

None.

7.1.1.2b CTP 1.1.0.2 Test for conformance to valid SIM/USIM - PE eCall only IVS

7.1.1.2b.1 Test Purpose (TP)

(1)

```
with { IVS in mobile network coverage and the ignition is ON }
ensure that {
  when { manual eCall triggered }
    then { network registration }
    }
}
```

7.1.1.2b.2 Test applicability

This test case applies to PE eCall only IVS.

7.1.1.2b.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.1.2 paragraph 2; clause 7.12.2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.0.2.

7.1.1.2b.4 Test description

7.1.1.2b.4.1 Pre-test conditions

Preamble 1: Ignition ON.

7.1.1.2b.4.2 Test procedure sequence

Table 7.1.1.2b.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Trigger manual eCall	-	-	-	-
	Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	1	Р

7.1.1.2b.4.3 Specific message contents

None.

7.1.1.3 CTP 1.1.0.3 Automatic eCall triggering does not occur when ignition OFF - PE eCall IVS

7.1.1.3.1 Test Purpose (TP)

```
(1)
```

```
with { ignition OFF and the IVS is in mobile network coverage }
ensure that {
  when { automatic eCall triggered }
    then { start timer Tpl with no HMI alert is provided and IVS automatic eCall
        is not initiated until expiration of Tpl }
    }
}
```

7.1.1.3.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.3.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.10.1 paragraph 4 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.0.3.

7.1.1.3.4 Test description

7.1.1.3.4.1 Pre-test conditions

Ignition OFF.

7.1.1.3.4.2 Test procedure sequence

Table 7.1.1.3.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
1	Trigger automatic eCall	-	-	-	-
2	Start non-reaction timer T1	-	-	-	-
-	EXCEPTION: Steps 3a1 to 3a2 describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	-	-
3a1	Check: Is HMI alert provided before timer T1 expires?	-	-	1	F
3a2	Check: Does IVS initiate an automatic eCall before timer Tp1 expires?	-	-	1	F

7.1.1.3.4.3 Specific message contents

None.

7.1.1.4 CTP 1.1.1.1 Power on and self test - PE eCall IVS

7.1.1.4.1 Test Purpose (TP)

(1)

```
with { ignition OFF and no mobile coverage required }
ensure that {
  when { vehicle Power ON and IVS performs self-test }
    then { self-test of IVS is successful and no faults are indicated }
    }
}
```

7.1.1.4.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.4.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.1.5 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.1.1.

7.1.1.4.4 Test description

7.1.1.4.4.1 Pre-test conditions

Ignition OFF; no mobile network coverage required.

7.1.1.4.4.2 Test procedure sequence

Table 7.1.1.4.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
_		I-T	Message		
1	Vehicle Power ON	-	-	-	-
2	IVS performs self-test	-	-	-	-
-	EXCEPTION: Steps 3a1 to 3a2 describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	1	-
3a1	Check: Is IVS functioning correctly?	>	According to manufacturer's procedure	1	Р
3a2	Check: Are no faults indicated before timer Tp2 expires? (see note)	>	According to manufacturer's procedure	1	Р
NOTE	Tp2 has to be defined.	·			

7.1.1.4.4.3 Specific message contents

None.

7.1.1.5 CTP 1.1.2.1 eCall automatically activated - PE eCall IVS

7.1.1.5.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { automatic eCall triggered }
    then { Visual or audible indication provided and eCall successfully established }
    }
}
```

7.1.1.5.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.5.3 Conformance requirements

The conformance requirements covered in the present TC are specified in CEN EN 16072 [8], clause 7.10.1 paragraph 1 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.2.1.

7.1.1.5.4 Test description

7.1.1.5.4.1 Pre-test conditions

Preamble 1: Ignition ON.

7.1.1.5.4.2 Test procedure sequence

Table 7.1.1.5.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict	
		I-T	Message			
1	Trigger automatic eCall	-	-	-	-	
2	IF PE eCall only IVS THEN Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-	
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) and eCall in progress (clause 6.1.2.3) are performed	-	-	-	-	
4	Check: Is MSD transmission successful?	>	-	1	Р	

7.1.1.5.4.3 Specific message contents

None.

7.1.1.6 CTP 1.1.2.2 Automatically triggered eCall in progress was not disconnected upon a new eCall trigger - PE eCall IVS

7.1.1.6.1 Test Purpose (TP)

7.1.1.6.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.6.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.11 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.2.2.

7.1.1.6.4 Test description

7.1.1.6.4.1 Pre-test conditions

Preamble 2: Ignition ON and IVS is in mobile network coverage; automatically triggered eCall in progress.

7.1.1.6.4.2 Test procedure sequence

Table 7.1.1.6.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
-	EXCEPTION: Steps 1a to 1b describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	-	-
1a	Trigger new automatic eCall	-	-	-	-
	Trigger new manual eCall	-	-	-	-
2	Check: Was eCall in progress disconnected before timer Tp3 expires? (see note)	>	DISCONNECT	1	F
NOTE	: Tp3 has to be defined.				

7.1.1.6.4.3 Specific message contents

None.

7.1.1.7 CTP 1.1.2.3 Post-side-crash performance of automatic trigger - IVS

7.1.1.7.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS is in good mobile network coverage }
ensure that {
  when { automatic eCall triggered }
    then { MSD successfully transmitted and E112 - voice connection established }
    }
}
```

7.1.1.7.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.7.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 6.1.1 paragraph 4; clause 7.10.1 paragraph 4, paragraph 6, paragraph 8; clause 7.5 paragraph 1, paragraph 2, paragraph 3, paragraph 4 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.2.3.

7.1.1.7.4 Test description

7.1.1.7.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in good mobile network coverage.

In case the IVS is able to distinguish different kinds of crashes, a lateral shock to test the IVS crash robustness can be generated in two ways: Either a lateral crash according to Directive 96/27/EC [14] (or equivalent UN/ECE Regulation 95-02) shall be generated or a simulated equivalent shock condition using a shock-test rig or similar shall be applied.

7.1.1.7.4.2 Test procedure sequence

Table 7.1.1.7.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Trigger automatic eCall	-	-	-	-
	IF PE eCall only IVS THEN Steps of the generic				
2	procedure for network registration	-	-	-	-
	(clause 6.1.2.1) are performed				
	Steps of the generic procedure for eCall				
	establishment (clause 6.1.2.2) and eCall in	-	-	-	-
	progress (clause 6.1.2.3) are performed				
4	Check: Is MSD transmission successful?	>	-	1	Р
5	Unmute voice connection	-	-	-	-
6	Check: Is E112 - voice connection established?	>	-	2	Р

7.1.1.7.4.3 Specific message contents

None.

7.1.1.8 CTP 1.1.2.4 Post-frontal-crash performance of automatic trigger - IVS

In case the IVS is able to distinguish different kinds of crashes, the crash type in the pre-test conditions (6.1.1.7.4.1) differ. Else this test is equivalent to the TC specified in clause 7.1.1.7 (CTP 1.1.2.3).

7.1.1.9 CTP 1.1.2.5 Performance of automatic trigger - different crash types - IVS

7.1.1.9.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS is in good mobile network coverage }
ensure that {
  when { automatic eCall triggered }
    then { MSD successfully transmitted and voice connection established }
    }
(2)
with { E112 - voice connection }
ensure that {
  when { call clear down indicated }
    then { IVS disconnects }
}
```

7.1.1.9.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.9.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 6.1.1, paragraph 4; clause 7.10.1, paragraph 4, paragraph 6, paragraph 8; clause 7.5, paragraph 1, paragraph 2, paragraph 3, paragraph 4 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.2.5.

7.1.1.9.4 Test description

7.1.1.9.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in good mobile network coverage.

7.1.1.9.4.2 Test procedure sequence

Table 7.1.1.9.4.2-1: Main behaviour

Step	Procedure Message Sequence			TP	Verdict
		I - T	Message		
1	Trigger automatic eCall	-	-	-	-
	IF PE eCall only IVS THEN Steps of the generic				
2	procedure for network registration	-	-	-	-
	(clause 6.1.2.1) are performed				
	Steps of the generic procedure for automatic				
3	eCall establishment (clause 6.1.2.2) and eCall	-	-	-	-
	in progress (clause 6.1.2.3) are performed				
4	Check: Is MSD transmission successful?	>	-	1	Р
5	Reconnect audio system	-	-	-	-
6	Check: Is E112 - voice connection established?	>	-	2	Р
7	Call clear down indicated	<	DISCONNECT	-	-
8	Check: Does IVS disconnects successful?	>	-	3	Р

7.1.1.9.4.3 Specific message contents

None.

7.1.1.10 CTP 1.1.3.1 eCall manually activated - PE eCall IVS

7.1.1.10.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { manual eCall triggered }
    then { Visual or audible indication provided and eCall successfully established }
    }
}
```

7.1.1.10.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.10.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.10.2 paragraph 2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.3.1.

7.1.1.10.4 Test description

7.1.1.10.4.1 Pre-test conditions

Preamble 1: Ignition ON.

7.1.1.10.4.2 Test procedure sequence

Table 7.1.1.10.4.2-1: Main behaviour

Step	Procedure		Message Sequence		Verdict
_		I - T	Message		
1	Trigger manual eCall	-	-	-	-
2	IF PE eCall only IVS THEN Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed	-	-	-	-
4	Check: Is the call established?	>	CONNECT ACKNOWLEDGE	1	Р

7.1.1.10.4.3 Specific message contents

None.

7.1.1.11 CTP 1.1.3.2 Manually triggered eCall in progress was not disconnected upon a new eCall trigger - PE eCall IVS

7.1.1.11.1 Test Purpose (TP)

(1a)

7.1.1.11.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.11.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.11 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.3.2.

7.1.1.11.4 Test description

7.1.1.11.4.1 Pre-test conditions

Preamble 3: Ignition ON and IVS is in mobile network coverage; manually triggered eCall in progress.

7.1.1.11.4.2 Test procedure sequence

Table 7.1.1.11.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		1 - T	Message		
	EXCEPTION: Steps 1a to 1b describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	-	-
1a	Trigger new automatic eCall	-	-	-	-
1b	Trigger new manual eCall	-	-	-	-
	Check: Was eCall in progress disconnected before timer Tp3 expires? (see note)	>	DISCONNECT	1	F
NOTE	: Tp3 has to be defined.				

7.1.1.11.4.3 Specific message contents

7.1.1.12 CTP 1.1.4.1 Test eCall activated - PE eCall IVS

7.1.1.12.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { test eCall from the IVS is triggered by using E.164 number provisioned by USIM for test
calls}
  then { test eCall has been setup with correct non-emergency number}
  }
}
```

7.1.1.12.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.12.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.2.2 paragraph 1 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.4.1.

7.1.1.12.4 Test description

7.1.1.12.4.1 Pre-test conditions

Preamble 1: Ignition ON.

7.1.1.12.4.2 Test procedure sequence

Table 7.1.1.12.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Trigger test eCall	-	-	-	-
	IF PE eCall only IVS THEN Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2)	-	-	-	-
4	Check: Is test eCall established with correct non-emergency number provisioned by USIM?	->	CONNECT ACKNOWLEDGE	1	Р

7.1.1.12.4.3 Specific message contents

None.

7.1.1.13 CTP 1.1.5.1 Network registration - PE eCall IVS

7.1.1.13.1 Test Purpose (TP)

```
(1a)
```

```
(1c)
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { test eCall triggered }
    then { network registration successful }
    }
```

7.1.1.13.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.13.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clauses 7.3.2 and 7.3.4 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.5.1.

7.1.1.13.4 Test description

7.1.1.13.4.1 Pre-test conditions

Preamble 1: Ignition ON.

7.1.1.13.4.2 Test procedure sequence

Table 7.1.1.13.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
-	EXCEPTION: Steps 1a to 1c describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	-	-
1a	Trigger automatic eCall	-	-	-	-
1b	Trigger manual eCall	-	-	-	-
1c	Trigger test eCall	-	-	-	-
2	Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	>	-	1	Р

7.1.1.13.4.3 Specific message contents

None.

7.1.1.14 CTP 1.1.5.2 Manual termination of eCall by vehicle occupants not allowed (automatically triggered eCall) - PE eCall IVS

7.1.1.14.1 Test Purpose (TP)

7.1.1.14.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.14.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.10.3 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.5.2.

7.1.1.14.4 Test description

7.1.1.14.4.1 Pre-test conditions

Preamble 2: Ignition ON and IVS is in mobile network coverage; automatically triggered eCall is in progress.

7.1.1.14.4.2 Test procedure sequence

Table 7.1.1.14.4.2-1: Main behaviour

Step	Procedure	Message Sequence TP Ver					
		I - T	Message				
1	attempt to terminate eCall manually	<	-	-	-		
	Check: Was eCall in progress disconnected before timer Tp3 expires? (see note)	>	DISCONNECT	1	F		
NOTE	NOTE: Tp3 has to be defined.						

7.1.1.14.4.3 Specific message contents

None.

7.1.1.15 CTP 1.1.5.3 Manual termination of eCall by vehicle occupants not allowed (manually triggered eCall) - PE eCall IVS

7.1.1.15.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS in mobile network coverage and manually triggered eCall is in progress }
ensure that {
  when { attempt to terminate eCall manually }
    then { eCall in progress was not disconnected }
    }
```

7.1.1.15.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.15.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.10.3 paragraph 2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.5.3.

7.1.1.15.4 Test description

7.1.1.15.4.1 Pre-test conditions

Preamble 3: Ignition ON and IVS is in mobile network coverage; manually triggered eCall is in progress.

7.1.1.15.4.2 Test procedure sequence

Table 7.1.1.15.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Attempt to terminate eCall manually	<	-	-	-
	Check: Was eCall in progress disconnected	>	DISCONNECT	1	_
	before timer Tp3 expires?		DISCONNECT	-	Г
NOTE	: Tp3 has to be defined.				•

7.1.1.15.4.3 Specific message contents

7.1.1.16 CTP 1.1.5.4 Automatically triggered eCall in progress was not disconnected when ignition is switched to OFF - PE eCall IVS

7.1.1.16.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS in mobile network coverage and automatically triggered eCall is in
    progress }
ensure that {
    when { vehicle Power OFF }
        then { eCall in progress was not disconnected }
    }
```

7.1.1.16.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.16.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.10.1 paragraph 5 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.5.4.

7.1.1.16.4 Test description

7.1.1.16.4.1 Pre-test conditions

Preamble 2: Ignition ON and IVS is in mobile network coverage; automatically triggered eCall is in progress.

7.1.1.16.4.2 Test procedure sequence

Table 7.1.1.16.4.2-1: Main behaviour

		1 - T	Message		
			wiessage		
1 Vehic	icle Power OFF	<	Manufacturer dependent (see note 2)		-
	ck: Was eCall in progress disconnected ore timer Tp3 expires? (see note 1)	>	DISCONNECT	1	F

NOTE 1: Tp3 has to be defined.

7.1.1.16.4.3 Specific message contents

None.

7.1.1.17 CTP 1.1.5.5 Manually triggered eCall in progress was not disconnected when ignition is switched to OFF - PE eCall IVS

7.1.1.17.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS in mobile network coverage and manually triggered eCall is in progress }
ensure that {
  when { vehicle Power OFF }
    then { eCall in progress was not disconnected }
```

7.1.1.17.2 Test applicability

This test case applies to all types of PE eCall IVS.

NOTE 2: System level test vs. module level test. In case of built-in battery in modem this test can be run on modem level, else the test has to be run on system level.

7.1.1.17.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.11 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.5.5.

7.1.1.17.4 Test description

7.1.1.17.4.1 Pre-test conditions

Preamble 3: Ignition ON and IVS is in mobile network coverage; manually triggered eCall is in progress.

7.1.1.17.4.2 Test procedure sequence

Table 7.1.1.17.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Vehicle Power OFF	<	Manufacturer dependent (see note 2)	-	-
	Check: Was eCall in progress disconnected before timer Tp3 expires? (see note 1)	>	DISCONNECT	1	F

NOTE 1: Tp3 has to be defined.

NOTE 2: System level test vs. module level test. In case of built-in battery in modem this test can be run on modem level, else the test has to be run on system level.

7.1.1.17.4.3 Specific message contents

None.

7.1.1.18 CTP 1.1.5.6 Priority over conflicting communication - PE eCall IVS

7.1.1.18.1 Test Purpose (TP)

```
(1a)
with { ignition ON and IVS in mobile network coverage and a conflicting communication is running on
       IVS }
ensure that {
  when { automatic eCall triggered }
   then { HMI alert is provided and all necessary components of the IVS are unrestricted available
           and IVS starts connection establishment }
            }
(1b)
with { ignition ON and IVS in mobile network coverage and a conflicting communication is running on
       IVS }
ensure that {
  when { manual eCall triggered }
   then { HMI alert is provided and all necessary components of the IVS are unrestricted available
           and IVS starts connection establishment }
(2)
with { connection in progress }
ensure that {
  when { connection established }
    then { mute audio system }
            }
with { connection established }
ensure that {
  when { SEND-MSD received }
   then { synchronize IVS & PSAP }
(4)
with { synchronized IVS & PSAP }
ensure that {
  when { MSD tx }
    then { MSD transmission started }
```

```
(5)
```

```
with { MSD transmission in progress }
ensure that {
  when { AL-ACK is received }
    then { reconnect audio system }
  }
```

7.1.1.18.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.18.3 Conformance requirements

The conformance requirements of CEN EN 16072 [8], clause 7.4 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.5.6.

7.1.1.18.4 Test description

7.1.1.18.4.1 Pre-test conditions

Preamble 4: Ignition ON and IVS is in good mobile network coverage; no error is detected on the IVS, a conflicting communication is running on the IVS.

7.1.1.18.4.2 Test procedure sequence

Table 7.1.1.18.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
	EXCEPTION: Steps 1a to 1b describe				
	behaviour that depends on the test				
-	configuration; the "lower case letter" identifies a	-	-	-	-
	step sequence that takes place if a test				
	configuration is supported				
1a	Trigger automatic eCall	-	-	-	-
1b	Trigger manual eCall	-	-	-	-
	EXCEPTION: Steps 3a1 to 3a3 describe				
	behaviour that depends on the test				
-	configuration; the "lower case letter" identifies a	-	-	-	-
	step sequence that takes place if a test				
	configuration is supported				
3a1	Check: Is HMI alert provided?	>	-	1	Р
3a2	Check: Are all components of the IVS	>		1	Р
Saz	necessary for the eCall unrestricted available?	>	-	'	Г
3a3	Steps of the generic procedure for eCall in			2, 3,	Р
Sas	progress (clause 6.1.2.3) are performed	-		4	٢
4	Check: Is audio system reconnected?	-	-	5	Р

7.1.1.18.4.3 Specific message contents

None.

7.1.1.19 CTP 1.1.5.7 Network registration is re-tried when network registration attempt was not successful - PE eCall IVS

No test required. (This eventuality is covered by ETSI TS 134 123-1 [2], clause 6 for UMTS and ETSI TS 151 010-1 [9], clauses 26.2 and 26.7 correspondingly).

7.1.1.20a CTP 1.1.6.1 Mute IVS and vehicle audio - PE eCall capable IVS

7.1.1.20a.1 Test Purpose (TP)

```
(1a)
with { ignition ON and IVS in mobile coverage }
ensure that {
 when { automatic eCall is triggered ]
    then { IVS starts connection establishment }
(1b)
with { ignition ON and IVS in mobile coverage }
ensure that {
  when { manual eCall is triggered }
   then { IVS starts connection establishment }
(1c)
with { ignition ON and IVS in mobile coverage }
ensure that {
  when { test eCall is triggered }
    then { IVS starts connection establishment }
(2)
with { connection in progress }
ensure that {
  when { connection established }
    then { mute audio system }
(3)
with { connection established }
ensure that {
 when { SEND-MSD received }
    then { synchronize IVS & PSAP }
(4)
with { synchronized IVS & PSAP }
ensure that {
  when { MSD tx }
    then { MSD transmission started }
with { MSD transmission in progress }
ensure that {
  when { AL-ACK is received }
    then { reconnect audio system }
```

7.1.1.20a.2 Test applicability

This test case applies to PE eCall capable IVS.

7.1.1.20a.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.2.1 and CEN EN 16072 [8], clause 7.17.3 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.6.1.

7.1.1.20a.4 Test description

7.1.1.20a.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.20a.4.2 Test procedure sequence

Table 7.1.1.20a.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
	EXCEPTION: Steps 1a to 1b describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	-	-
1a	Trigger manual eCall	-	-	-	-
1b	Trigger automatic eCall	-	-	-	-
1c	Trigger test eCall	-	-	-	-
	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed	-	-	1a, 1b, 1c, 2, 3, 4	Р
3	Check: Is audio system reconnected?	-	-	5	Р

7.1.1.20a.4.3 Specific message contents

None.

7.1.1.20b CTP 1.1.6.1 Mute IVS and vehicle audio - PE eCall only IVS

7.1.1.20b.1 Test Purpose (TP)

```
(1a)
with { ignition ON and IVS in mobile coverage }
ensure that {
  when { automatic eCall is triggered }
    then \ \{ IVS registers on the network and starts connection establishment \}
            }
(1b)
with { ignition ON and IVS in mobile coverage }
ensure that {
  when { manual eCall is triggered }
   then { IVS registers on the network and starts connection establishment }
(1c)
with { ignition ON and IVS in mobile coverage }
ensure that {
 when { test eCall is triggered }
   {f then} \{ IVS registers on the network and starts connection establishment \}
(2)
with { connection in progress }
ensure that {
  when { connection established }
   then { mute audio system }
(3)
with { connection established }
ensure that {
 when { SEND-MSD received }
   then { synchronize IVS & PSAP }
```

```
with { synchronized IVS & PSAP }
ensure that {
  when { MSD tx }
    then { MSD transmission started }
    }
(5)
with { MSD transmission in progress }
ensure that {
  when { AL-ACK is received }
    then { reconnect audio system }
}
```

7.1.1.20b.2 Test applicability

This test case applies to PE eCall only IVS.

7.1.1.20b.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.2.1 and CEN EN 16072 [8], clause 7.17.3 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.6.1.

7.1.1.20b.4 Test description

7.1.1.20b.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.20b.4.2 Test procedure sequence

Table 7.1.1.20b.4.2-1: Main behaviour

Step	Procedure		Message Sequence		Verdict
		I - T	Message		
-	EXCEPTION: Steps 1a to 1b describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	-	-
1a	Trigger manual eCall	-	-	-	-
1b	Trigger automatic eCall	-	-	-	-
1c	Trigger test eCall	-	-	-	-
2	Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	1a, 1b, 1c	Р
3	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed	-	-	1a, 1b, 1c, 2, 3,	Р
4	Check: Is audio system reconnected?	-	-	5	Р

7.1.1.20b.4.3 Specific message contents

7.1.1.21 CTP 1.1.7.1 Set-up TS12 call with eCall identifier (flag) set to "automatic" - PE eCall IVS

7.1.1.21.1 Test Purpose (TP)

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
 when { automatic eCall triggered }
   then { "Service Category Request" message information element (IE) set to automatically initiated eCall (AIeC) }
```

7.1.1.21.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.21.3 Conformance requirements

Reference requirements of CTP 1.1.7.1 [1].

The conformance requirements of CEN EN 16062 [6], clause 7.3.6 paragraph 2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.7.1.

7.1.1.21.4 Test description

7.1.1.21.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.21.4.2 Test procedure sequence

Table 7.1.1.21.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
1	Trigger automatic eCall	-	-	-	-
2	Check: Is the "Service Category Request" message information element (IE) set to automatically initiated eCall (AleC)?	>	Service Category Request	1	Р

7.1.1.21.4.3 Specific message contents

None.

7.1.1.22 CTP 1.1.8.1 Set-up TS12 call with eCall identifier (flag) set to "manual" - PE eCall IVS

7.1.1.22.1 Test Purpose (TP)

```
(1) with \{ ignition ON and IVS in mobile network coverage \}
```

7.1.1.22.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.22.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.3.6 paragraph 2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.8.1.

7.1.1.22.4 Test description

7.1.1.22.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.22.4.2 Test procedure sequence

Table 7.1.1.22.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Trigger manual eCall	-	-	-	-
	IF PE eCall only IVS THEN Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Check: Is "Service Category Request" message information element (IE) set to manually initiated eCall (MIeC)?	>	Service Category Request	1	Р

7.1.1.22.4.3 Specific message contents

None.

7.1.1.23 CTP 1.1.9.1 Set-up TS11 call to test number - PE eCall IVS

7.1.1.23.1 Test Purpose (TP)

(1)

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { test eCall from the IVS is triggered by using E.164 number provisioned by USIM for test
calls}
  then { test eCall has been setup with correct non-emergency number and is routed to PSAP test
point}
  }
```

7.1.1.23.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.23.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.2.2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.9.1.

7.1.1.23.4 Test description

7.1.1.23.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.23.4.2 Test procedure sequence

Table 7.1.1.23.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Trigger test eCall	-	-	-	-
	IF PE eCall only IVS THEN Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2)	-	-	-	-
4	Check: Is test eCall established with correct non-emergency number provisioned by USIM?	->	CONNECT ACKNOWLEDGE	1	Р

7.1.1.23.4.3 Specific message contents

None.

7.1.1.24a CTP 1.1.10.1 eCall is attempted when no networks are available (limited service condition with forbidden PLMN on SIM/USIM) - PE eCall IVS

7.1.1.24a.1 Test Purpose (TP)

```
(1)
with { IVS is in mobile network coverage (limited service condition as specified in ETSI 124.008)}
ensure that {
  when {test eCall at the IVS is triggered }
   then { IVS does not initiate a test eCall}
(2a)
with { IVS is in mobile network coverage (limited service condition as specified in ETSI 124.008) }
ensure that {
 when { manual eCall from the IVS is triggered }
    then \{ \{ MNO test point accepts service request for emergency call establishment,
          manual eCall is connected through to the PSAP test point}
         }
(2b)
with { IVS is in mobile network coverage (limited service condition as specified in ETSI 124.008)}
ensure that {
  when { automatic eCall from the IVS is triggered }
    then \{ MNO test point accepts service request for emergency call establishment ,
           automatic eCall is connected through to the PSAP test point}
```

7.1.1.24a.2 Test applicability

This test case applies to all types of PE eCall IVS which support an exchangeable or reconfigurable SIM / USIM.

7.1.1.24a.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clauses 7.3.5 and 7.14.2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.10.1.

7.1.1.24a.4 Test description

7.1.1.24a.4.1 Pre-test conditions

A SIM / USIM supporting the limited service condition shall be used (i.e. forbidden PLMN).

PE eCall capable IVS: Preamble 5: Ignition ON and IVS is in mobile network coverage, limited service condition.

PE eCall only IVS: Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.24a.4.2 Test procedure sequence

Table 7.1.1.24a.4.2-1: Main behaviour

Step	Procedure		Message Sequence		Verdict
		1 - T	Message		
1	Tester triggers a test eCall	-<	-	-	-
2	Check: Does the IVS initiate a call setup within the next minute?	-	-	1	F
3a.1	Tester triggers manual eCall	<			
3a.2	Generic procedure for manual eCall according to steps 2-11 in generic procedure (clause 6.1.2.2)	-	-	-	-
3a.3	Check: Is the manual eCall established?	>	CONNECT ACKNOWLEDGE	2a	Р
3b.1	Tester triggers automatic eCall	<			
3b.2	Generic procedure for automatic eCall according to steps 2-11 in generic procedure (clause 6.1.2.2)	-	-	-	-
3b.3	Check: Is the automatic eCall established?	>	CONNECT ACKNOWLEDGE	2b	Р

7.1.1.24a.4.3 Specific message contents

None.

7.1.1.24b CTP 1.1.10.1 eCall is attempted when no networks are available (limited service condition, location update rejected by network) - PE eCall IVS

7.1.1.24b.1 Test Purpose (TP)

```
(1)
with { IVS is in mobile network coverage (limited service condition as specified in ETSI 124.008)}
ensure that {
  when {test eCall at the IVS is triggered }
    then { IVS does not initiate a test eCall}
(2a)
with { IVS is in mobile network coverage (limited service condition as specified in ETSI 124.008) }
ensure that {
 when { manual eCall from the IVS is triggered }
    then { { MNO test point accepts service request for emergency call establishment,
          manual eCall is connected through to the PSAP test point}
(2b)
with { IVS is in mobile network coverage (limited service condition as specified in ETSI 124.008)}
ensure that {
 when { automatic eCall from the IVS is triggered }
    then \{ MNO test point accepts service request for emergency call establishment ,
           automatic eCall is connected through to the PSAP test point}
```

7.1.1.24b.2 Test applicability

This test case applies to all types of PE eCall IVS which do not support an exchangeable or reconfigurable SIM / USIM.

7.1.1.24b.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clauses 7.3.5 and 7.14.2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.10.1.

7.1.1.24b.4 Test description

7.1.1.24b.4.1 Pre-test conditions

Preamble 1 (Steps 1 to 3, applies to eCall only and PE eCall capable IVS): Ignition ON and IVS is in mobile network coverage.

7.1.1.24b.4.2 Test procedure sequence

Table 7.1.1.24b.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		1 - T	Message		
1	IF PE eCall capable IVS: IVS tries location update	-			
2	IF PE eCall capable IVS: MNO test point denies	-			
	location update with cause "#11 PLMN not				
	allowed", "#12 Location Area not allowed" or "#13				
	Roaming not allowed in this location area"				
3	Tester triggers a test eCall	<	-	-	-
4	IF PE eCall only IVS: IVS tries location update	-	-	-	-
	IF PE eCall only IVS: MNO test point denies				
5	location update with cause "#11 PLMN not				
3	allowed", "#12 Location Area not allowed" or "#13	_		-	[
	Roaming not allowed in this location area"				
6	Check: Does the IVS initiate a call setup within the	_		1	F
0	next minute?	_		<u>'</u>	1
7a.1	Tester triggers manual eCall	<			
7a.2	Generic procedure for manual eCall according to				
1 a.2	steps 2-11 in generic procedure (clause 6.1.2.2)	_			-
7a.3	Check: Is the manual eCall established?	>	CONNECT ACKNOWLEDGE	2a	Р
7b.1	Tester triggers automatic eCall	<			
7b.2	Generic procedure for automatic eCall according to				
10.2	steps 2-11 in generic procedure (clause 6.1.2.2)	-	-	-	[-
7b.3	Check: Is the automatic eCall established?	>	CONNECT ACKNOWLEDGE	2b	Р

7.1.1.24b.4.3 Specific message contents

None.

7.1.1.25 CTP 1.1.10.2 Re-dial attempt completed within 2 minutes after eCall is dropped - PE eCall IVS

7.1.1.25.1 Test Purpose (TP)

7.1.1.25.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.25.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.12.3, CEN EN 16072 [8], clauses 6.17.2 and 6.17.3 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.10.2.

7.1.1.25.4 Test description

7.1.1.25.4.1 Pre-test conditions

Depending on call type (automatic or manual) preamble 2 or preamble 3 is used.

7.1.1.25.4.2 Test procedure sequence

Table 7.1.1.25.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	IVS sends initiation signal	>	PUSH-REQ	-	-
2	PSAP requests MSD	<	SEND MSD	-	-
3	IVS sends MSD	>	MSD tx	-	-
4	PSAP releases call acc. to generic procedure (clause 6.1.2.4)	-	-	-	-
5	PSAP monitors incoming calls for 2 minutes	-	-	-	-
5.1	IVS attempts to re-dial acc. to generic procedure (clause 6.1.2.2 steps 2-7)	-	-	-	-
5.2	Check: Does IVS perform at least one re-dial attempt?	>	EMERGENCY SETUP	1a, 1b	Р
5.3		<	CALL PROCEEDING		
5.4		<	ALERTING		
5.5	IVS aborts call	>	DISCONNECT		
6	Check: No further re-dial attempts within 5 minutes	-	-	1a, 1b	Р

7.1.1.25.4.3 Specific message contents

None.

7.1.1.26 CTP 1.1.10.3 Duration of eCall Initiation signal - PE eCall IVS

7.1.1.26.1 Test Purpose (TP)

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { automatic eCall triggered and no SEND MSD message is received}
      then { eCall is established and the initiation signal shall not persist for longer than 2 s }
      }
(1b)

with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { manual eCall triggered and no SEND MSD message is received}
      then { eCall is established and the initiation signal shall not persist for longer than 2 s }
    }
}
```

7.1.1.26.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.26.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.4.2 paragraph 2; annex A table A.1 T3 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.10.3.

7.1.1.26.4 Test description

7.1.1.26.4.1 Pre-test conditions

Depending on call type, (automatically or manually) preamble 2 or preamble 3 is used.

7.1.1.26.4.2 Test procedure sequence

Table 7.1.1.26.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
1	IVS sends initiation signal	>	PUSH-REQ	-	-
	Check: No more than 5 PUSH-REQs are received by the PSAP within a period of 3 seconds	-	-	1a, 1b	Р

7.1.1.26.4.3 Specific message contents

None.

7.1.1.27 CTP 1.1.11.1 Send MSD with indicator set to "Automatically Initiated eCall" (AleC) - PE eCall IVS

7.1.1.27.1 Test Purpose (TP)

```
(1)
```

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { automatic eCall from the IVS is triggered }
    then { MSD contains automaticActivation = true and testCall = false) }
}
```

7.1.1.27.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.27.3 Conformance requirements

The conformance requirements of CEN EN 15722 [12], clause 6.3.1 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.11.1.

7.1.1.27.4 Test description

7.1.1.27.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.27.4.2 Test procedure sequence

Table 7.1.1.27.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	Trigger automatic eCall	-	-	-	-
2	IF PE eCall only IVS: Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed				
4	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed				
5	Check: Does received MSD contain automaticActivation = true and testCall = false?			1	Р

7.1.1.27.4.3 Specific message contents

7.1.1.28 CTP 1.1.12.1 Send MSD with indicator set to "Manually Initiated eCall" (MIeC) - PE eCall IVS

7.1.1.28.1 Test Purpose (TP)

```
(1)
with { ignition ON and IVS in mobile network coverage }
ensure that {
 when { manual eCall from the IVS is triggered }
    then { MSD contains automaticActivation = false and testCall = false) }
}
```

7.1.1.28.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.28.3 Conformance requirements

The conformance requirements of CEN EN 15722 [12], clause 6.3.1 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.12.1.

7.1.1.28.4 Test description

7.1.1.28.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.28.4.2 Test procedure sequence

Table 7.1.1.28.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
1	Trigger manual eCall			-	-
2	IF PE eCall only IVS: Steps of the generic procedure for network registration (clause 6.1.2.1) are performed			-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed				
4	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed				
5	Check: Does received MSD contain automaticActivation = false and testCall = false?			1	Р

7.1.1.28.4.3 Specific message contents

None.

7.1.1.29 CTP 1.1.13.1 Send MSD with indicator set to "Test eCall" - PE eCall IVS

7.1.1.29.1 Test Purpose (TP)

```
(1)
```

```
with { ignition ON and IVS in mobile network coverage }
ensure that {
 when { test eCall from the IVS is triggered }
   then { MSD contains testCall = true) }
}
```

7.1.1.29.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.29.3 Conformance requirements

The conformance requirements of CEN EN 15722 [12], clause 6.3.1 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.13.1.

7.1.1.29.4 Test description

7.1.1.29.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.29.4.2 Test procedure sequence

Table 7.1.1.29.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
1	Trigger test eCall	-	-	-	-
	IF PE eCall only IVS: Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed				
4	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed				
5	Check: Does received MSD contain testCall = true?			1	Р

7.1.1.29.4.3 Specific message contents

None.

7.1.1.30 CTP 1.1.14.1 Verify MSD transfer - PE eCall IVS

7.1.1.30.1 Test Purpose (TP)

```
(1a)
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { automatic eCall from the IVS is triggered }
   then { eCall is established and the initiation signal is received before PSAP timer T4 expires }
(1b)
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { manual eCall from the IVS is triggered }
    then { eCall is established and the initiation signal is received before PSAP timer T4 expires }
(1c)
with { ignition ON and IVS in mobile network coverage }
ensure that {
  when { test eCall from the IVS is triggered }
    then { eCall is established and the initiation signal is received before PSAP timer T4 expires }
(2)
with { valid initiation signal received at PSAP}
ensure that {
  when { PSAP requests MSD }
    then { IVS sends MSD and MSD is received by PSAP before timer T8 expires }
```

(3)

```
with { valid MSD received at PSAP}
ensure that {
  when { Format check of MSD at PSAP is successful and PSAP sends AL-ACK}
    then { PSAP timer Tpl is started and IVS receives AL-ACK before T6 (mirror timer Tpl) expires }
    }
}
```

7.1.1.30.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.30.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clauses 7.4 and 7.5 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.14.1.

7.1.1.30.4 Test description

7.1.1.30.4.1 Pre-test conditions

Depending on call type (automatic, manual or test eCall) preamble 2, preamble 3 or preamble 11 is used.

7.1.1.30.4.2 Test procedure sequence

Table 7.1.1.30.4.2-1: Main behaviour

Step	Procedure		Message Sequence		Verdict
_		I - T	Message		
1a	Trigger automatic eCall	-	-	-	-
1b	Trigger manual eCall	-	-	-	-
1c	Trigger test eCall	-	-	-	-
	IF PE eCall only IVS: Steps of the generic				
2	procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed				
4	PSAP starts timer T4				
5	IVS sends Initiation signal	->	PUSH-REQ		
6	Check: Initiation signal is received before timer T4 expires			1a, 1b, 1c	Р
7	PSAP requests MSD	<-	SEND MSD		
8	PSAP starts timer T8.				
9	IVS sends MSD	->	MSD tx		
10	Check: MSD is received before Timer T8 expires			2	Р
11	PSAP received valid MSD message at LL	<	LL-ACK		
12	IVS stops sending MSD and starts timer T6				
13	PSAP received valid MSD message at AL	<	AL-ACK		
14	PSAP starts timer Tp1				
15	Check: IVS receives an AL-ACK before timer T6 expires (see note)	-	-	3	Р
NOTE	: After Tp1 expires check if 2-way speech is po	ossible.	Fimer Tp1 = T6.		

7.1.1.30.4.3 Specific message contents

7.1.1.31 CTP 1.1.14.2 Un-mute IVS audio when AL-ACK received - PE eCall IVS

7.1.1.31.1 Test Purpose (TP)

7.1.1.31.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.31.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.5.1 paragraph 3 shall apply for this TC.

7.1.1.31.4 Test description

7.1.1.31.4.1 Pre-test conditions

Depending on call type (automatic, manual or test eCall) preamble 2, preamble 3 or preamble 11 is used.

7.1.1.31.4.2 Test procedure sequence

Table 7.1.1.31.4.2-1: Main behaviour

Step	Procedure	Message Sequence		TP	Verdict
		I - T	Message		
	eCall in progress according to steps 2-7 of generic procedure (clause 6.1.2.3)			-	-
	Check: Are IVS loudspeaker and microphone un-muted?			1a, 1b, 1c	Р

7.1.1.31.4.3 Specific message contents

None.

7.1.1.32 CTP 1.1.15.1 Establish voice link to PSAP - PE eCall IVS

7.1.1.32.1 Test Purpose (TP)

```
(1a)
with { automatic eCall in state call established }
ensure that {
  when { MSD transfer is completed and AL-ACK is sent }
    then { Two-way speech is possible }
```

7.1.1.32.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.32.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.5.1 paragraph 3 shall apply for this TC.

7.1.1.32.4 Test description

7.1.1.32.4.1 Pre-test conditions

Depending on call type (automatic, manual or test eCall) preamble 2, preamble 3 or preamble 11 is used.

7.1.1.32.4.2 Test procedure sequence

Table 7.1.1.32.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict			
		I-T	Message					
1	eCall in progress according to steps 2-7 of							
	generic procedure (clause 6.1.2.3) (see note)			-	-			
2	Un-mute IVS loudspeaker and microphone							
3	Check: Is 2-way speech possible?			1a,				
				1b,	Р			
				1c				
NOTE	NOTE: The case that no AL-ACK is sent by the tester is covered by TC CTP 1.1.15.4.							

7.1.1.32.4.3 Specific message contents

None.

7.1.1.33 CTP 1.1.15.2 MSD transfer request while eCall conversation in progress - PE eCall IVS

7.1.1.33.1 Test Purpose (TP)

```
with { automatically triggered eCall is in progress, MSD is transferred and 2-way voice connection
established }
ensure that {
  when { PSAP requests MSD again}
    then { IVS mutes audio, IVS sends MSD and MSD is received by PSAP before timer T8 expires }
  }
(1b)

with { manually triggered eCall is in progress, MSD is transferred and 2-way voice connection
established }
ensure that {
  when { PSAP requests MSD again}
    then { IVS mutes audio, IVS sends MSD and MSD is received by PSAP before timer T8 expires }
}
```

```
(1c)
with { triggered test eCall is in progress, MSD is transferred and 2-way voice connection
established
ensure that
  when { PSAP requests MSD again}
   then { IVS mutes audio, IVS sends MSD and MSD is received by PSAP before timer T8 expires }
(2)
with { audio muted and valid MSD received at PSAP }
ensure that {
  when { Format check of MSD at PSAP is successful and PSAP sends AL-ACK }
   then { PSAP timer Tpl is started and IVS receives AL-ACK before T6 (mirror timer Tpl) expires }
(3)
with { AL-ACK received at IVS }
ensure that {
  when { MSD transfer stopped }
   then { IVS unmutes audio and 2-way speech connection is possible again}
```

- NOTE 1: Cases with expiry of timer T6 and timer T7 are not considered here, because they are not mentioned within the test objective of CEN EN 16454 [1] CTP 1.1.15.2.
- NOTE 2: The test description in CEN EN 16454 [1] CTP 1.1.15.2 does not state which type of eCall is ongoing. Hence, automatic, manual or test eCall are given as alternatives in this test case.

7.1.1.33.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.33.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.6.2 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.15.2.

7.1.1.33.4 Test description

7.1.1.33.4.1 Pre-test conditions

Preamble 6, call type (automatic, manual, test) to be specified.

7.1.1.33.4.2 Test procedure sequence

Table 7.1.1.33.4.2-1: Main behaviour

Step	Procedure	Procedure Message Sequence			Verdict		
		I-T	Message				
1	PSAP requests MSD	<-	SEND MSD				
2	PSAP starts timer T8						
3	Check: IVS mutes audio			1a, 1b, 1c	Р		
4	IVS sends MSD	->	MSD tx				
5	PSAP received valid MSD message at LL	<	LL-ACK				
6	IVS stops sending MSD and starts timer T6						
7	PSAP received valid MSD message at AL	<	AL-ACK				
8	Check: MSD is received before Timer T8 expires			1a, 1b, 1c, 2	Р		
9	PSAP starts timer Tp1						
10	Check: IVS receives an AL-ACK before timer T6 expires (see note)	-	-	2, 3	Р		
NOTE	NOTE: After Tp1 expires check if 2-way speech is possible. Without considering a round trip delay the Tp1 is the same value as T6.						

7.1.1.33.4.3 Specific message contents

None.

7.1.1.34 CTP 1.1.15.3 eCall continuation when SEND MSD request not received (T5 expired) - PE eCall IVS

7.1.1.34.1 Test Purpose (TP)

7.1.1.34.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.34.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clauses 7.4.4 and 7.12.10; annex A table A.1 T5 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.15.3.

7.1.1.34.4 Test description

7.1.1.34.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS is in mobile network coverage.

7.1.1.34.4.2 Test procedure sequence

Table 7.1.1.34.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1a	Trigger automatic eCall	-	-	-	-
1b	Trigger manual eCall				
1c	Trigger test eCall				
2	IF PE eCall only IVS THEN Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2)	-	-	-	-
4	IVS starts Timer T5				
5	PSAP does not send MSD REQ				
6	Check: Timer T5 expires and 2-way speech is possible			1a, 1b, 1c	Р

7.1.1.34.4.3 Specific message contents

None.

7.1.1.35 CTP 1.1.15.4 Call continuation when AL-ACK not received (T6 expired) - PE eCall IVS

7.1.1.35.1 Test Purpose (TP)

7.1.1.35.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.35.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clauses 7.5.3 and 7.12.5.2; annex A, table A.1 T6 shall apply for this TC.

7.1.1.35.4 Test description

7.1.1.35.4.1 Pre-test conditions

Depending on call type (automatic, manual or test eCall) preamble 2, preamble 3 or preamble 11 is used.

7.1.1.35.4.2 Test procedure sequence

Table 7.1.1.35.4.2-1: Main behaviour

Step	Procedure	N	TP	Verdict	
		I-T	Message		
1	eCall in progress according to steps 2-6 of generic procedure (clause 6.1.2.3)			-	-
2	Timer T6 (5s) is started				
3	Timer T6 is expired (note 1)				
4	Un-mute IVS loudspeaker and microphone (note 2)				
5	Check: Is 2-way speech possible?			1a, 1b, 1c	Р

NOTE 1: No AL-ACK is sent by PSAP.

NOTE 2: It is not intended to un-mute directly after positive LL-ACK reception (deviation from [1]).

7.1.1.35.4.3 Specific message contents

7.1.1.36 CTP 1.1.15.5 MSD is transferred continuously until T7 expires and IVS reconnects loudspeaker and microphone on its expiry - PE eCall IVS

7.1.1.36.1 Test Purpose (TP)

7.1.1.36.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.36.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.4.7; annex A table A.1 T7 shall apply for this TC.

7.1.1.36.4 Test description

7.1.1.36.4.1 Pre-test conditions

Depending on call type (automatic, manual or test eCall) preamble 2, preamble 3 or preamble 11 is used.

7.1.1.36.4.2 Test procedure sequence

Table 7.1.1.36.4.2-1: Main behaviour

Step	Procedure	ure Message Sequence		TP	Verdict
		I - T	Message		
2	IVS sends initiation signal	>	PUSH-REQ		
3	PSAP requests MSD	<	SEND MSD	-	-
4	IVS starts timer T7				
5	IVS sends MSD	>	MSD tx	-	-
6	PSAP does not send LL-ACK and does not send AL-ACK	<	NACK		
7	Timer T7 expires				
8	Un-mute IVS loudspeaker and microphone				
9	Check: Is 2-way speech possible?			1a, 1b, 1c	Р

7.1.1.35.4.3 Specific message contents

7.1.1.37 CTP 1.1.16.1 Clear down call automatically - PE eCall IVS

7.1.1.37.1 Test Purpose (TP)

```
(1a)
with { automatic eCall in state call established }
ensure that {
  when { MSD transfer is completed }
   then { 2-way speech is possible }
(1b)
with { manual eCall in state call established }
ensure that {
 when { MSD transfer is completed }
   then { 2-way speech is possible }
(1c)
with { test eCall in state call established }
ensure that {
 when { MSD transfer is completed }
    then { 2-way speech is possible }
(2)
with { eCall in progress and 2-way speech possible }
ensure that {
  when { PSAP hangs-up call }
    then { call is released
(3a)
with { automatic eCall in state call established }
ensure that {
 when { MSD transfer is completed and AL-ACK with CLEAR DOWN is sent }
   then { call is released }
(3b)
with { manual eCall in state call established }
ensure that {
  when { MSD transfer is completed and AL-ACK with CLEAR DOWN is sent }
    then { call is released }
(3c)
with { test eCall in state call established }
ensure that {
  when { MSD transfer is completed and AL-ACK with CLEAR DOWN is sent }
    then { call is released }
```

7.1.1.37.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.37.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.5 shall apply for this TC.

7.1.1.37.4 Test description

7.1.1.37.4.1 Pre-test conditions

Preamble 6.

7.1.1.37.4.2 Test procedure sequence

Table 7.1.1.37.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
-		I - T	Message		
1	Check: Is 2-way speech possible?			1a, 1b, 1c	Р
2	PSAP hangs-up call according to generic procedure (clause 6.1.2.4)			-	-
3	Check: Is the call released?			2	Р
4a	Trigger automatic eCall	-	-	-	-
4b	Trigger manual eCall	-	-	-	-
4c	Trigger test eCall	-	-	-	-
5	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed				
6	Steps 1-6 of the generic procedure for eCall in progress (clause 6.1.2.3) are performed				
7	PSAP sends AL-ACK with CLEAR DOWN	<-	AL-ACK (Clear Down)		
8	IVS hangs-up call according to generic procedure (clause 6.1.2.5)				
9	Check: Is the call released?			3a, 3b, 3c	Р

7.1.1.37.4.3 Specific message contents

None.

7.1.1.38 CTP 1.1.16.2 IVS clears down the eCall upon T2 expiry - PE eCall IVS

7.1.1.38.1 Test Purpose (TP)

7.1.1.38.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.38.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clauses 7.9; 7.12.3, 7.12.16 and 7.3.1; annex A table A.1 T2 shall apply for this TC.

7.1.1.38.4 Test description

7.1.1.38.4.1 Pre-test conditions

Preamble 1.

7.1.1.38.4.2 Test procedure sequence

Table 7.1.1.38.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1a	Trigger automatic eCall	-	-	-	-
1b	Trigger manual eCall	-	-	-	-
1c	Trigger test eCall	-	-	-	-
2	IF PE eCall only IVS THEN Steps of the generic procedure for network registration (clause 6.1.2.1) are performed				
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed				
4	IVS starts timer T2				
5	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed				
6	Timer T2 expires				
7	IVS hangs-up call according to generic procedure (clause 6.1.2.5)				
8	Check: Is the call released?			1a, 1b, 1c	Р

7.1.1.38.4.3 Specific message contents

None.

7.1.1.39 CTP 1.1.16.3 IVS registers recent eCalls - PE eCall IVS

7.1.1.39.1 Test Purpose (TP)

```
(1a)
with { automatic eCall in state call established }
ensure that {
 when { MSD transfer is completed and AL-ACK is sent with CLEAR DOWN and tester requests time stamp
AL-ACK information }
    then { IVS sends correct stored time stamp AL-ACK information }
(1b)
with { manual eCall in state call established }
ensure that {
  \textbf{when} \ \{ \ \text{(MSD transfer is completed and AL-ACK is sent with CLEAR DOWN and tester requests time } \} \\ 
stamp AL-ACK information }
    then { IVS sends correct stored time stamp AL-ACK information }
            }
with { test eCall in state call established }
ensure that {
 when { { MSD transfer is completed and AL-ACK is sent with CLEAR DOWN and tester requests time
stamp AL-ACK information }
    then { IVS sends correct stored time stamp AL-ACK information }
```

7.1.1.39.2 Test applicability

This test case applies to all types of PE eCall IVS for which the tester has access to data stored in the IVS.

7.1.1.39.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.5.2 paragraph 3 also CEN EN 16072 [8], clause 7.17.4 shall apply for this TC.

7.1.1.39.4 Test description

7.1.1.39.4.1 Pre-test conditions

Depending on call type (automatic, manual or test eCall) preamble 2, preamble 3 or preamble 11 is used.

7.1.1.39.4.2 Test procedure sequence

Table 7.1.1.39.4.2-1: Main behaviour

Step	Procedure		Message Sequence		Verdict
		I - T	Message		
1	eCall in progress according to steps 2-6 of generic procedure (clause 6.1.2.3)			-	-
2	PSAP sends AL-ACK with CLEAR DOWN	<	AL-ACK (CLEAR DOWN)	-	-
3	Tester triggers IVS time stamp output	<	(note 1)		
	Check: Is the transmitted time stamp of AL-ACK stored in the IVS correct?	>	(note 1, note 2)	1a, 1b, 1c	Р

NOTE 1: Realization is not defined, necessary commands have to be introduced.

7.1.1.39.4.3 Specific message contents

None.

7.1.1.40 CTP 1.1.17.1 Call-back allowed and able to be answered by IVS - PE eCall IVS

NOTE: According to CEN EN 16454 [1], clause 7.4.1 Accelerated test procedures for all types of PE eCall IVS, this test case is assumed to be passed with test case CTP 1.1.17.2.

7.1.1.41 CTP 1.1.17.2 Call-back answered by IVS in the event of abnormal termination - PE eCall IVS

7.1.1.41.1 Test Purpose (TP)

```
(1a)
with { automatic eCall in state call established }
ensure that
  when { call is dropped before MSD transfer is completed (before LL-ACK is sent) and PSAP calls
back within the third minute after eCall terminated abnormally }
    then { IVS answers a callback from the PSAP automatically }
(1b)
with { manual eCall in state call established }
ensure that
  when { call is dropped before MSD transfer is completed (before LL-ACK is sent) and PSAP calls
back within the third minute after eCall terminated abnormally }
    then { IVS answers a callback from the PSAP automatically }
(1c)
with { test eCall in state call established }
ensure that {
  when { call is dropped before MSD transfer is completed (before LL-ACK is sent) and PSAP calls
back within the third minute after eCall terminated abnormally }
    then { IVS answers a callback from the PSAP automatically }
```

NOTE 2: It is assumed that the time stamp refers to step 2 of this test case.

(2)

```
with { callback answered automatically by IVS }
ensure that {
  when { audio/voice line has been reconnected }
    then { IVS loudspeaker and microphone are activated and 2-way speech is possible }
    }
}
```

7.1.1.41.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.41.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.10 (including point c) and CEN EN 16072 [8], clause 7.17.3 shall apply for this TC.

7.1.1.41.4 Test description

7.1.1.41.4.1 Pre-test conditions

Depending on call type (automatic, manual or test eCall) preamble 2, preamble 3 or preamble 11 is used.

7.1.1.41.4.2 Test procedure sequence

Table 7.1.1.41.4.2-1: Main behaviour

Step	Procedure	Message Sequence		TP	Verdict
		I - T	Message		
1	IVS sends initiation signal	>	PUSH-REQ	-	-
2	PSAP requests MSD	<	SEND MSD	-	-
3	IVS sends MSD	>	MSD tx	-	-
4	PSAP releases call acc. to generic procedure (clause 6.1.2.4)	-	-	-	-
5	PSAP monitors incoming calls for 2 minutes	-	-	-	-
5.1	IVS attempts to re-dial acc. to generic procedure (clause 6.1.2.2 steps 2-7)	-	-	-	-
5.2	IVS perform at least one re-dial attempt	>	EMERGENCY SETUP		
5.3		<	CALL PROCEEDING		
5.4		<	ALERTING		
5.5	IVS aborts call	>	DISCONNECT		
6	PSAP calls IVS back within the next minute (see note) according to steps 1-8 of generic procedure (clause 6.1.2.6)	-	-		
7	Check: Does the IVS answer the call automatically?	>	CONNECT	1a, 1b, 1c	Р
8	PSAP completes the call establishment procedure	<	CONNECT ACKNOWLEDGE		
9	Activate IVS loudspeaker and microphone				
10	Check: Is 2-way speech possible?	-		2	Р
NOTE	: The callback is initiated after timer of step 5	is elapse	d plus 20 seconds wait time.		

7.1.1.41.4.3 Specific message contents

7.1.1.42 CTP 1.1.17.3 MSD transfer occurs upon PSAP request during call-back - PE eCall IVS

7.1.1.42.1 Test Purpose (TP)

```
with { call back is in progress and 2-way voice connection established }
ensure that {
  when { PSAP requests MSD}
      then { IVS mutes audio, IVS sends MSD and MSD is received by PSAP before timer T8 expires }
      }
(2)

with { audio muted and valid MSD received at PSAP }
ensure that {
  when { Format check of MSD at PSAP is successful and PSAP sends AL-ACK }
      then { PSAP timer Tpl is started and IVS receives AL-ACK before T6 (mirror timer Tpl) expires }
      }
(3)

with { AL-ACK received at IVS }
ensure that {
  when { MSD transfer stopped }
      then { MSD transfer stopped }
      then { IVS unmutes audio and 2-way speech connection is possible again}
```

7.1.1.42.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.42.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.6.3 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.17.3.

7.1.1.42.4 Test description

7.1.1.42.4.1 Pre-test conditions

Preamble 9.

7.1.1.42.4.2 Test procedure sequence

Table 7.1.1.42.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I - T	Message		
1	PSAP requests MSD	<-	SEND MSD		
2	PSAP starts timer T8.				
3	Check: IVS mutes audio.			1	Р
4	IVS sends MSD	->	MSD tx		
5	PSAP received valid MSD message at LL	<	LL-ACK		
6	IVS stops sending MSD and starts timer T6				
7	PSAP received valid MSD message at AL	<	AL-ACK		
8	Check: Is MSD received before Timer T8			1, 2	Р
0	expires?			1, 2	I .
9	PSAP starts timer Tp1				
10	Check: Does IVS receive an AL-ACK before	-	-	2, 3	Р
	timer T6 expires? (see note)			2, 3	<u>r</u>
NOTE	: After Tp1 expires check if 2-way speech is p	ossible. \	Vithout considering a round trip de	elay the Tp1	I is the
	same value as T6.				

7.1.1.42.4.3 Specific message contents

None.

7.1.1.43 CTP 1.1.17.4 Remain registered for ≥1 hr - PE eCall IVS

7.1.1.43.1 Test Purpose (TP)

```
(1a)
with { ignition ON and IVS is in mobile coverage }
ensure that {
  when { automatic eCall is triggered }
    then { IVS registers on the network and starts connection establishment }
(1b)
with { ignition ON and IVS is in mobile coverage }
ensure that {
  when { manual eCall is triggered }
    then { IVS registers on the network and starts connection establishment }
(1c)
with { ignition ON and IVS is in mobile coverage }
ensure that {
  when { test eCall is triggered }
    then \ \{ IVS registers on the network and starts connection establishment \}
(2)
with { connection established }
ensure that {
  when \{ MSD transfer is completed, AL-ACK is sent and PSAP hangs-up call \}
    then { call is released }
(3)
with { IVS registered to the network and timer T9 not expired }
ensure that {
  when { PSAP calls IVS back after 55 minutes }
    then { IVS answers call automatically }
```

7.1.1.43.2 Test applicability

This test case applies to all types of PE eCall IVS.

7.1.1.43.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.9, especially paragraph 6; clause 7.10 (c); annex A, table A.1 T9; CEN EN 16072 [8], clause 7.17.3 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.17.4.

7.1.1.43.4 Test description

7.1.1.43.4.1 Pre-test conditions

Preamble 1.

7.1.1.43.4.2 Test procedure sequence

Table 7.1.1.43.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		1 - T	Message		
1a	Trigger automatic eCall	-	-	-	-
1b	Trigger manual eCall	-	-	-	-
1c	Trigger test eCall	-	-	-	-
2	Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	ı	-	-	-
3	Steps of the generic procedure for eCall establishment (clause 6.1.2.2) are performed	ı	-		
4	Check: Is call established?	-	-	1a, 1b, 1c	Р
5	Steps of the generic procedure for eCall in progress (clause 6.1.2.3) are performed	-	-		
6	Check: Is MSD received correctly?	-	-	2	Р
7	PSAP hangs-up call according to generic procedure (clause 6.1.2.4)	-	-	-	-
8	Check: Is call released?	-	-	2	Р
9	PSAP waits 55 minutes	-	-	-	-
9	PSAP initiates call back to the IVS according to generic procedure (clause 6.1.2.6)	-	-	-	-
10	Check: Does IVS answer the call?	-	-	3	Р

7.1.1.43.4.3 Specific message contents

None.

7.1.2 Conformance tests for in-vehicle user equipment for Pan European eCall - additional tests for eCall only systems

7.1.2.1 CTP 1.1.1.2 IVS does not perform registration after power-up - PE eCall only IVS

7.1.2.1.1 Test Purpose (TP)

7.1.2.1.2 Test applicability

This test case applies to PE eCall only IVS.

7.1.2.1.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.1.4, paragraph 1 and clause 7.1.6, paragraph 1 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.1.2.

7.1.2.1.4 Test description

7.1.2.1.4.1 Pre-test conditions

Ignition OFF; IVS has privileges to register only on this network.

7.1.2.1.4.2 Test procedure sequence

Table 7.1.2.1.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict
		I-T	Message		
1	Vehicle Power ON	-	-	-	-
2	Wait 60 seconds	-	-	-	-
3	Check: Is IE "Establishment cause" set to "Registration" for 120 seconds?	>	RRC CONNECTION REQUEST	1	F

7.1.2.1.4.3 Specific message contents

None.

7.1.2.2 CTP 1.1.1.3 IVS periodically scans and maintains a list of available PLMNs - PE eCall only IVS

No test required. Covered by ETSI TS 122 011 [i.6] and ETSI TS 123 122 [i.7], therefore if compliance has been achieved to CTP 1.1.0.1, is automatically compliant.

7.1.2.3 CTP 1.1.10.4 Verify that PLMN registration procedure is executed upon initiating an eCall - PE eCall only IVS

7.1.2.3.1 Test Purpose (TP)

(1a)

7.1.2.3.2 Test applicability

This test case applies to PE eCall only IVS.

7.1.2.3.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clauses 6 (c); 7.3.4; 7.3.5 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.10.4.

7.1.2.3.4 Test description

7.1.2.3.4.1 Pre-test conditions

Preamble 1: Ignition ON and IVS was not registered on a PLMN.

7.1.2.3.4.2 Test procedure sequence

Table 7.1.2.3.4.2-1: Main behaviour

Step	Procedure	Message Sequence		TP	Verdict
		I - T	Message		
	EXCEPTION: Steps 1a to 1b describe behaviour that depends on the test configuration; the "lower case letter" identifies a step sequence that takes place if a test configuration is supported	-	-	-	1
1a	Trigger manual eCall	-	-	-	-
1b	Trigger automatic eCall	-	-	-	-
2	Steps of the generic procedure for network registration (clause 6.1.2.1) are performed	-	-	-	-
3	Check: Is the IVS successfully registered on the PLMN?	>	-	1	Р

7.1.2.3.4.3 Specific message contents

None.

7.1.2.4 CTP 1.1.17.5 Remain registered for ≥1 hr ≤12 hr - PE eCall only IVS

7.1.2.4.1 Test Purpose (TP)

7.1.2.4.2 Test applicability

This test case applies to PE eCall only IVS.

7.1.2.4.3 Conformance requirements

The conformance requirements of CEN EN 16062 [6], clause 7.9 shall apply for this TC. The test shall complete CEN EN 16454 [1] CTP 1.1.17.5.

7.1.2.4.4 Test description

7.1.2.4.4.1 Pre-test conditions

Preamble 7: Ignition ON and IVS is in mobile network coverage; IVS has been programmed with the non-emergency number to be used for test calls; eCall of applicable type has been established and cleared down; timer T9 is running.

7.1.2.4.4.2 Test procedure sequence

Table 7.1.2.4.4.2-1: Main behaviour

Step	Procedure		Message Sequence	TP	Verdict	
		I - T	Message			
1	Wait 55 minutes	-	-	-	-	
2	Trigger Callback from PSAP (see note)	-	-	-	-	
3	Steps 1-8 of the generic procedure for call back to the IVS according to generic procedure (clause 6.1.2.6) are performed	-	-			
4	Check: Does IVS answer and sustain the incoming call?	>	CONNECT	1	Р	
5	PSAP completes the call establishment procedure	<	CONNECT ACKNOWLEDGE	-	-	
6	PSAP releases call acc. to generic procedure (clause 6.1.2.4)	-	-	-	-	
7	Wait for timer T9 to elapse	-	-	-	-	
8	Check: Does the IVS de-register within 12 hours following call clear-down?	>	IMSI DETACH INDICATION	2	Р	
NOTE	: This is done by MMI command.					

7.1.2.4.4.3 Specific message contents

None.

7.1.3 Conformance tests for in-vehicle user equipment for Pan European eCall via a third party service provider

Tests according to CEN EN 16454 [1], clause 9.8 are for further study.

7.1.4 Minimum Performance requirements for in-vehicle user equipment for Pan-European eCall

7.1.4.1 MSD transmission time for different channel conditions

7.1.4.1.1 Definition

These tests shall validate that a PE eCall IVS passes the end-to-end minimum performance requirements in terms of MSD failure rate and MSD transmission time. The test configurations are adapted from ETSI TS 126 269 [5], clauses 5.2.1.1, 5.2.1.2 and 5.2.1.3, which were dedicated for simulative environments, in order to accommodate realtime system implementation scenarios. The transmission time shall be measured according to the definition given by ETSI TS 126 269 [5], annex D, using PSAP sided PULL mode round trip time (PSAP-PULL-RTT) and PSAP sided PUSH mode round trip time (PSAP-PUSH-RTT).

7.1.4.1.2 Conformance requirements

The average MSD transmission time for the different codec types, rates and radio channel conditions shall not exceed the requirement given in table 7.1.4.1.5-1. First value defines requirement for PSAP-PULL-RTT in seconds, second value defines requirement for PSAP-PUSH-RTT in seconds.

7.1.4.1.3 Test purpose

To verify that the PE eCall IVS does not exceed the conformance requirement under TU3 propagation conditions.

7.1.4.1.4 Method of test

IVS under test and reference PSAP shall be setup to be connected via a concatenated radio channel and network simulators. GNSS position may be provided through a pre-stored position or through an external GNSS simulator.

For the in-band modem performance tests, repeated tests shall be conducted under different radio and speech codec conditions as depicted in table 7.1.4.1.5-1. Each repeated test run corresponds to the CEN EN 16454 [1] reference test CTP 1.1.14.1.

Tests may use either manual, automatic or test eCall.

It is assumed that the transmission in the wireline part of the eCall uses PCM (G.711, A-law) without any further transcoding and with optimal level settings.

It is assumed that no acoustical echo is produced by the IVS and that therefore no Acoustic Echo Suppressor is applied in the network.

It is assumed that no Hybrid Echo is produced by the PSAP connection and that therefore no Hybrid Echo canceller is applied in the network simulator.

The MSD may contain randomly generated data or constant data employing the same MSD for each call.

The following radio conditions shall be tested (see table 7.1.4.1.5-1):

- GMSK Full Rate radio channel at C/I values of 1, 4, 7, 10, 13, 16 dB, and error free; with frequency hopping as defined in ETSI TS 151 010-1 [9], clause 6, with the COST207 Typical Urban profile and with 3 km/h vehicle speed (TU3) according to annex C of ETSI TS 100 910 [15]. These channel conditions shall be applied in both directions (uplink and downlink) symmetrically. Channel conditions in the uplink may be achieved by using the same simulation model, that has been used in the creation of the technical report ETSI TR 126 969 [13].
- DTX shall be enabled in both directions.

For any particular test condition C (specified in table 7.1.4.1.5-1), the observed transmission time of the 140 bytes of the MSD may vary depending on the parameters of the channel simulation and the specific contents of the MSD. Therefore each MSD transmission may be regarded as one trial k in a random experiment, where the observed transmission time, T_k , is the random variable of interest. For each particular test condition C, the MSD transmission is repeated with different, randomly generated MSD data for at least 100 times (k = 1, 2, ..., n, where $n \ge 100$) to get enough statistical significance.

To ensure a practical limit on the time required for testing, the observed value of T_k shall have a reasonable upper bound. This upper bound, t_{UB} , is fixed at a value of 20 seconds for one trial for all test conditions. This corresponds to the T7 timer specified in CEN EN 16062 [6]. Any value of T_k that is observed to be greater than t_{UB} , will be classified as a transmission failure and should not be included in the MSD transmission time statistics.

Each particular test condition C gives an observed sample distribution T_1 , T_2 , ..., T_n . The statistic of interest is the average value, $\mu_C = (T_1 + T_2 + ... + T_n) / n$.

The average PSAP PUSH-RTT metric and PSAP-PULL-RTT over *all* test conditions shall be calculated by unweighted averaging of μ_C over all particular test conditions C_1 , C_2 , ..., C_m . as defined in annex D of ETSI TR 126 969 [13].

If the reference PSAP does not receive the MSD correctly (i.e. CRC check failed) within $t_{UB=20s}$, then this test trial is regarded as failure and marked as such in the result table.

Since for these tests voice communication is not needed, the PSAP should be configured such that it either sends HLACK value 0x2 to indicate IVS to clear down the call, or terminates the call directly upon successful reception of the MSD

7.1.4.1.5 Test requirements

Table 7.1.4.1.5-1: Conformance Requirements for different codec and radio conditions

Codec Type	GSM-FR	GSM- HR		AMR-NB					AMR- WB		
Codec	13.0	6.5	12.2	10.2	7.95	7.4	6.7	5.9	5.15	4.75	12.65
Mode											
Radio											
condition											
C/I = 1 dB										[5,8/4,7]	
C/I = 4 dB		[18/18]						[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	
C/I = 7 dB	[5,8/4,7]	[18/18]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	
C/I = 10 dB	[5,8/4,7]	[18/18]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]	[5,8/4,7]					[5,8/4,7]
C/I = 13 dB	[5,8/4,7]		[5,8/4,7]	[5,8/4,7]							
C/I = 16 dB	[5,8/4,7]										
error free	[4,8/3,7]		[4,8/3,7]								

7.1.4.2 MSD transmission time in noisy conditions

Tests according to ETSI TS 126 269 [5], clause 5.2.1.4 are for further study.

7.1.4.3 MSD transmission time with scaling of PCM signals

Tests according to ETSI TS 126 269 [5], clause 5.2.1.5 are for further study.

7.2 Mobile Network Operators

Tests according to CEN EN 16454 [1], clause 10 are for further study.

7.3 PSAP Systems

Tests according to CEN EN 16454 [1], clause 11 are for further study.

7.4 TPS-eCall

Tests according to CEN EN 16454 [1], clause 12 are for further study.

Annex A (informative): Recommended test case applicability

The applicability of each individual test is identified in the table A-1. This is just a recommendation based on the purpose for which the test case was written.

The applicability of every test is formally expressed by the use of Boolean expression that are based on conformance testing functions included in table A-3.

The columns in table A-1 have the following meaning:

Clause

The clause column indicates the clause number that contains the test body.

CEN Test Case

The CEN Test Case column indicates the test case number of the corresponding tests according to CEN EN 16454 [1].

Title

Ci

The title column indicates the name of the test.

Applicability - Condition

The following notations are used for the applicability column:

R recommended - the test case is recommended to all terminals supporting PE eCall

O optional - the test case is optional

N/A not applicable - in the given context, the test case is not recommended.

conditional - the test is recommended ("R") or not ("N/A") depending on the support of other items. "i" is an integer identifying an unique conditional status expression which is defined immediately following the table. For nested conditional expressions, the syntax "IF ... THEN (IF ...

THEN ... ELSE...) ELSE ..." is used to avoid ambiguities.

Applicability - Comments

This comments column contains a verbal description of the condition included in the applicability column.

Table A-1: Applicability of PE eCall IVS conformance test cases

Clause	CEN Test	Title	Applicability		
Clause	Case	Title	Condition	Comments	
IVS - PE eC	Call				
6.1.1.1	CTP 1.1.0.1	Conformance to ETSI TS 102 936-1 [3] and ETSI TS 102 936-2 [4] - PE eCall IVS	C01	PE eCall IVS	
6.1.1.2a	CTP 1.1.0.2	Test for conformance to valid SIM/USIM - PE eCall capable IVS	C02	PE eCall capable IVS	
6.1.1.2b	CTP 1.1.0.2	Test for conformance to valid SIM/USIM - PE eCall only IVS	C03	PE eCall only IVS	
6.1.1.3	CTP 1.1.0.3	Automatic eCall triggering does not occur when ignition OFF - PE eCall IVS	C01	PE eCall IVS	
6.1.1.4	CTP 1.1.1.1	Power on and self test - PE eCall IVS	C01	PE eCall IVS	
6.1.1.5	CTP 1.1.2.1	eCall automatically activated - PE eCall IVS	C01	PE eCall IVS	
6.1.1.6	CTP 1.1.2.2	Automatically triggered eCall in progress was not disconnected upon a new eCall trigger - PE eCall IVS	C01	PE eCall IVS	
6.1.1.7	CTP 1.1.2.3	Post-side-crash performance of automatic trigger - PE eCall IVS	C01	PE eCall IVS	
6.1.1.8	CTP 1.1.2.4	Post-frontal-crash performance of automatic trigger - PE eCall IVS	C01	PE eCall IVS	

Clause	CEN Test	Title		Applicability
	Case		Condition	Comments
6.1.1.9	CTP 1.1.2.5	Performance of automatic trigger - different crash types - PE eCall IVS	C01	PE eCall IVS
6.1.1.10	CTP 1.1.3.1	eCall manually activated - PE eCall IVS	C01	PE eCall IVS
6.1.1.11	CTP 1.1.3.2	Manually triggered eCall in progress was not disconnected upon a new eCall trigger - PE eCall IVS	C01	PE eCall IVS
6.1.1.12	CTP 1.1.4.1	Test eCall activated - PE eCall IVS	C01	PE eCall IVS
6.1.1.13	CTP 1.1.5.1	Network registration - PE eCall IVS	C01	PE eCall IVS
6.1.1.14	CTP 1.1.5.2	Manual termination of eCall by vehicle occupants not allowed (automatically triggered eCall) - PE eCall IVS	C01	PE eCall IVS
6.1.1.15	CTP 1.1.5.3	Manual termination of eCall by vehicle occupants not allowed (manually triggered eCall) - PE eCall IVS	C01	PE eCall IVS
6.1.1.16	CTP 1.1.5.4	Automatically triggered eCall in progress was not disconnected when ignition is switched to OFF - PE eCall IVS	C01	PE eCall IVS
6.1.1.17	CTP 1.1.5.5	Manually triggered eCall in progress was not disconnected when ignition is switched to OFF - PE eCall IVS	C01	PE eCall IVS
6.1.1.18	CTP 1.1.5.6	Priority over conflicting communication - PE eCall IVS	C01	PE eCall IVS
6.1.1.19	CTP 1.1.5.7	Network registration is re-tried when network registration attempt was not successful - PE eCall IVS	N/A	no test required
6.1.1.20a	CTP 1.1.6.1	Mute IVS and vehicle audio - PE eCall capable IVS	C02	PE eCall capable IVS
6.1.1.20b	CTP 1.1.6.1	Mute IVS and vehicle audio - PE eCall only IVS	C03	PE eCall only IVS
6.1.1.21	CTP 1.1.7.1	Set-up TS12 call with eCall identifier (flag) set to "automatic" - PE eCall IVS	C01	PE eCall IVS
6.1.1.22	CTP 1.1.8.1	Set-up TS12 call with eCall identifier (flag) set to "manual" - PE eCall IVS	C01	PE eCall IVS
6.1.1.23	CTP 1.1.9.1	Set-up TS11 call to test number - PE eCall IVS	C01	PE eCall IVS
6.1.1.24a	CTP 1.1.10.1	eCall is attempted when no networks are available (limited service condition with forbidden PLMN on SIM/USIM) - PE eCall IVS	C04	PE eCall IVS and support of exchangeable or reconfigurable SIM / USIM
6.1.1.24b	CTP 1.1.10.1	eCall is attempted when no networks are available (limited service condition with forbidden PLMN on SIM/USIM) - PE eCall IVS	C05	PE eCall IVS and no support of exchangeable or reconfigurable SIM / USIM
6.1.1.25	CTP 1.1.10.2	Re-dial attempt completed within 2 minutes after eCall is dropped - PE eCall IVS	C01	PE eCall IVS
6.1.1.26	CTP 1.1.10.3	Duration of eCall Initiation signal - PE eCall IVS	C01	PE eCall IVS
6.1.1.27	CTP 1.1.11.1	Send MSD with indicator set to "Automatically Initiated eCall" (AleC) - PE eCall IVS	C01	PE eCall IVS
6.1.1.28	CTP 1.1.12.1	Send MSD with indicator set to "Manually Initiated eCall" (MleC) - PE eCall IVS	C01	PE eCall IVS
6.1.1.29	CTP 1.1.13.1	Send MSD with indicator set to "Test eCall" - PE eCall IVS	C01	PE eCall IVS
6.1.1.30	CTP 1.1.14.1	Verify MSD transfer - PE eCall IVS	C01	PE eCall IVS
6.1.1.31	CTP 1.1.14.2	Un-mute IVS audio when AL-ACK received - PE eCall IVS	C01	PE eCall IVS
6.1.1.32	CTP 1.1.15.1	Establish voice link to PSAP - PE eCall IVS	C01	PE eCall IVS
6.1.1.33	CTP 1.1.15.2	MSD transfer request while eCall conversation in progress - PE eCall IVS	C01	PE eCall IVS
6.1.1.34	CTP 1.1.15.3	eCall continuation when SEND MSD request not received (T5 expired) - PE eCall IVS	C01	PE eCall IVS
6.1.1.35	CTP 1.1.15.4	Call continuation when AL-ACK not received (T6 expired) - PE eCall IVS	C01	PE eCall IVS
6.1.1.36	CTP 1.1.15.5	MSD is transferred continuously until T7 expires and IVS reconnects loudspeaker and microphone on its expiry - PE eCall IVS	C01	PE eCall IVS

Clause	CEN Test	Title	Applicability		
Clause	Case	Title	Condition	Comments	
6.1.1.37	CTP 1.1.16.1	Clear down call automatically - PE eCall IVS	C01	PE eCall IVS	
6.1.1.38	CTP 1.1.16.2	IVS clears down the eCall upon T2 expiry - PE eCall IVS	C01	PE eCall IVS	
6.1.1.39	CTP 1.1.16.3	IVS registers recent eCalls - PE eCall IVS	C06	PE eCall IVS and tester has access to data stored in the IVS.	
6.1.1.40	CTP 1.1.17.1	Call-back allowed and able to be answered by IVS - PE eCall IVS	C01	PE eCall IVS	
6.1.1.41	CTP 1.1.17.2	Call-back answered by IVS in the event of abnormal termination - PE eCall IVS	C01	PE eCall IVS	
6.1.1.42	CTP 1.1.17.3	MSD transfer occurs upon PSAP request during call-back - PE eCall IVS	C01	PE eCall IVS	
6.1.1.43	CTP 1.1.17.4	Remain registered for ≥ 1 hr - PE eCall IVS	C01	PE eCall IVS	
IVS - PE e	Call additional t	ests for eCall only IVS			
6.1.2.1	CTP 1.1.1.2	IVS does not perform registration after power-up - PE eCall only IVS	C03	PE eCall only IVS	
6.1.2.2	CTP 1.1.1.3	IVS periodically scans and maintains a list of available PLMNs - PE eCall only	N/A	no test required	
6.1.2.3	CTP 1.1.10.4	Verify that PLMN registration procedure is executed upon initiating an eCall - PE eCall only IVS	C03	PE eCall only IVS	
6.1.2.4	CTP 1.1.17.5	Remain registered for ≥ 1 hr ≤ 12 hr - PE eCall only IVS	C03	PE eCall only IVS	

Table A-2: Applicability of PE eCall IVS conformance test cases conditions

C01	IF (A.3/1 OR A.3/2) THEN R ELSE N/A
C02	IF A.3/1 THEN R ELSE N/A
C03	IF A.3/2 THEN R ELSE N/A
C04	IF (A.3/1 OR A.3/2) AND A.3/3 THEN R ELSE N/A
C05	IF (A.3/1 OR A.3/2) AND NOT A.3/3 THEN R ELSE N/A
C06	IF (A.3/1 OR A.3/2) AND A.3/4 THEN R ELSE N/A

Table A-3: Conformance testing functions

Item	Conformance Testing Functions
1	PE eCall capable IVS
2	PE eCall only IVS
3	Exchangeable or reconfigurable SIM / USIM
4	Tester has access to data stored in the IVS

History

	Document history				
V1.1.1	April 2016	Publication			