ETSI TS 129 010 V3.12.0 (2004-03)

Technical Specification

Digital cellular telecommunications system (Phase 2+); Universal Mobile Telecommunications System (UMTS); Information Element Mapping between Mobile Station -Base Station System (MS - BSS) and Base Station System -Mobile-services Switching Centre (BSS - MCS) Signalling Procedures and the Mobile Application Part (MAP) (3GPP TS 29.010 version 3.12.0 Release 1999)



Reference RTS/TSGN-0429010v3c0

> Keywords GSM. UMTS

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at http://portal.etsi.org/tb/status/status.asp

> If you find errors in the present document, send your comment to: editor@etsi.org

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

> © European Telecommunications Standards Institute 2004. All rights reserved.

DECTTM, **PLUGTESTS**TM and **UMTS**TM are Trade Marks of ETSI registered for the benefit of its Members. **TIPHON**TM and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members. **3GPP**TM is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <u>http://webapp.etsi.org/key/queryform.asp</u>.

Contents

Intelle	ectual Property Rights	2
Forew	/ord	2
Forew	/ord	5
1	Scope	6
1.1	References	6
1.2	Abbreviations	7
2	Classification of interworking cases	
2.1	Transparent procedures	
2.2	Non-transparent procedures	/
3	Interworking in the MSC, Transparent case	
3.1	General	8
3.2	Routeing area updating	10
3.3	Authentication	11
3.4	Retrieval of the IMSI from the MS	12
3.5	Reallocation of TMSI	12
3.6	Retrieval of the IMEI from the MS	13
3.7	Tracing subscriber activity	
3.8	Location update	
4	Non-transparent cases	15
4.1	General	
4.2	Outgoing call set-up (MS originating call)	
4.3	Incoming call set-up (MS terminating call)	
4.4	Cipher mode setting	
4.4	Inter-MSC Handover	
4.5.1	Basic Inter-MSC Handover	
4.5.1	Subsequent Inter-MSC Handover back to MSC-A	
4.5.2		
	Subsequent Inter-MSC Handover to third MSC	
4.5.4	BSSAP Messages transfer on E-Interface	
4.5.5	Processing in MSC-B, and information transfer on E-interface	
4.5.5.1	JF JF	
4.5.5.2		
4.5.5.3		
4.5.5.4		
4.5.5.5		
4.5.5.6		
4.5.5.7		
4.5.5.8		
4.5.5.9		
4.5.5.1		
4.5.5.1		
4.5.6	Overview of the Technical Specifications GSM interworking for the Inter-MSC Handover	
4.6	Inter-MSC Handover (UMTS to GSM)	
4.6.1	Basic Inter-MSC Handover	
4.6.2	Subsequent Inter-MSC Handover from 3G-MSC-B back to MSC-A	
4.6.3	Subsequent Inter-MSC Handover to third MSC	
4.6.4	BSSAP Messages transfer on E-Interface	
4.6.5	Processing in MSC-B, and information transfer on E-interface	
4.6.6	Cause Code Mapping	
4.7	Inter-MSC Handover (GSM to UMTS)	
4.7.1	Basic Inter-MSC Handover	59
4.7.2	Subsequent Inter-MSC Handover from MSC-B back to 3G_MSC-A	65
4.7.3	Subsequent Inter-MSC Handover to third MSC	
4.7.4	BSSAP Messages transfer on E-Interface	

4.7.4.1	Assignment	73
4.7.4.2	Cipher Mode Control	
4.7.4.3	Location Reporting Control	
4.7.5	Processing in 3G_MSC-B, and information transfer on E-interface	
4.7.5.1	Encryption Information	
4.7.5.2	Channel Type	
4.7.5.3	Classmark	
4.7.5.4	Priority	76
4.7.5.5	MSC-Invoke Trace Information Elements	76
4.7.5.6	Selected UMTS Algorithm	76
4.7.5.7	Allowed UMTS Algorithms	77
4.7.5.8	BSSMAP Service Handover	77
4.7.5.9	RANAP Service Handover	77
4.7.6	Cause Code Mapping	78
4.8	Inter-MSC Relocation	
4.8.1	Basic Inter-MSC Relocation	
4.8.2	Subsequent Inter-MSC Relocation back to 3G_MSC-A	
4.8.3	Subsequent Inter-MSC Relocation to third MSC	91
4.8.4	RANAP Messages transfer on E-Interface	
4.8.5	Processing in 3G_MSC-B, and information transfer on E-interface	95
4.8.5.1	Integrity Protection Information	95
4.8.5.2	Encryption Information	96
4.8.5.3	RAB Parameters	96
4.8.5.4	Channel Type	96
4.8.5.5	Selected GSM Algorithm	96
4.8.5.6	Allowed GSM Algorithms	
4.8.5.7	Chosen Channel	
4.8.5.8	BSSMAP Service Handover	
4.8.5.9	RANAP Service Handover	
4.8.6	Overview of the Technical Specifications 3GPP interworking for the Inter-MSC Relocation	
4.9	Location Services	
4.9.1	Completed Location Acquisition	
4.9.1.1	Inter-MSC Handover (GSM to GSM)	
4.9.1.2	Inter-MSC Handover (GSM to UMTS)	
4.9.1.3	Inter-MSC Handover (UMTS to GSM)	
4.9.1.4	Inter-MSC SRNS Relocation	
4.9.2	Cause Code Mapping	107
4.9.2.1	Inter-MSC Handover(GSM to GSM)	107
4.9.2.2	Inter-MSC Handover (GSM to UMTS)	
4.9.2.3	Inter-MSC Handover (UMTS to GSM)	
4.9.2.4	Inter-MSC SRNS Relocation	
4.9.3	Aborted Location Acquisition	
4.9.3.1	Inter-MSC Handover (GSM to GSM)	
4.9.3.2	Inter-MSC Handover (GSM to UMTS)	
4.9.3.3	Inter-MSC Handover (UMTS to GSM)	
4.9.6.4	Inter-MSC SRNS Relocation	
Annex A	A (informative): Change history	113
History.		115

Foreword

This Technical Specification (TS) has been produced by the 3rd Generation Partnership Project (3GPP).

The present document specifies Information element mapping between Mobile Station - Base Station System (MS - BSS) and Base Station System - Mobile-services Switching Centre (BSS - MSC) Signalling procedures and the Mobile Application Part (MAP) within the digital cellular telecommunications system.

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The scope of the present document is:

- i) to provide a detailed specification for the interworking between information elements contained in layer 3 messages sent on the MS-MSC interface (Call Control and Mobility Management parts of 3GPP TS 24.008) and parameters contained in MAP services sent over the MSC-VLR interface (3GPP TS 29.002) where the MSC acts as a transparent relay of information;
- ii) to provide a detailed specification for the interworking between information elements contained in BSSMAP messages sent on the BSC-MSC interface (3GPP TS 48.008) and parameters contained in MAP services sent over the MSC-VLR interface (3GPP TS 29.002) where the MSC acts as a transparent relay of information;
- iii) to provide a detailed specification for the interworking between information elements contained in BSSMAP messages (3GPP TS 48.008) and RANAP (25.413)
- iv) to provide a detailed specification for the interworking as in i) and ii) above when the MSC also processes the information.

Interworking for supplementary services is given in 3GPP TS 29.011. Interworking for the short message service is given in 3GPP TS 23.040 and 3GPP TS 24.011. Interworking between the call control signalling of 3GPP TS 24.008 and the PSTN/ISDN is given in GSM 09.03, 3GPP TS 29.007 and 3GPP TS 49.008. Interworking between the 'A' and 'E' interfaces for inter-MSC handover signalling is given in 3GPP TS 29.007 and 3GPP TS 49.008.

1.1 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- [1] 3GPP TS 21.905: "3G Vocabulary".
- [2] 3GPP TS 23.009: "Handover procedures".
- [3] 3GPP TS 23.040: "Technical realization of the Short Message Service (SMS) Point to Point (PP)".
- [4] 3GPP TS 24.008: "Mobile Radio Interface Layer 3 specification; Core Network Protocols-Stage 3".
- [5] 3GPP TS 24.010: "Mobile radio interface layer 3 Supplementary services specification General aspects".
- [6] 3GPP TS 24.011: "Point-to-Point (PP) Short Message Service (SMS) support on mobile radio interface".
- [7] 3GPP TS 25.413: "Iu interface RANAP signalling".
- [8] 3GPP TS 27.001: "General on Terminal Adaptation Functions (TAF) for Mobile Stations (MS)".
- [9] 3GPP TS 29.002: "Mobile Application Part (MAP) specification".
- [10] 3GPP TS 29.007: "General requirements on interworking between the Public Land Mobile Network (PLMN) and the Integrated Services Digital Network (ISDN) or Public Switched Telephone Network (PSTN)".

- [11] 3GPP TS 29.011: "Digital cellular telecommunications system (Phase 2+); Signalling interworking for supplementary services".
- [12] 3GPP TS 48.008: "Mobile Switching Centre Base Station System (MSC BSS) interface Layer 3 specification".
- [13] GSM 09.03: "Digital cellular telecommunications system (Phase 2+); Signalling requirements on interworking between the Integrated Services Digital Network (ISDN) or Public Switched Telephone Network (PSTN) and the Public Land Mobile Network (PLMN)".
- [14] 3GPP TS 49.008: " Application of the Base Station System Application Part (BSSAP) on the Einterface".
- [15] 3GPP TS 29.108: "Application of the Radio Access Network Application Part (RANAP) on the E-interface"
- [16] 3GPP TS 23.071: "Location Services (LCS); (Functional description) Stage 2"
- [17] 3GPP TS 23.171: "Functional stage 2 description of location services in UMTS"

1.2 Abbreviations

Abbreviations used in the present document are listed in 3GPP TS 21.905.

2 Classification of interworking cases

2.1 Transparent procedures

The following MSC procedures require transparent mapping of access protocol information elements into MAP parameters and vice versa (see 3GPP TS 29.002 for definitions and the use of the procedures):

- location update;
- forward new TMSI;
- provide IMSI;
- obtain IMEI;
- check IMEI;
- authenticate;
- trace subscriber activity.

2.2 Non-transparent procedures

Procedures in this class require processing in the MSC and information element mapping. These procedures include those related to:

- outgoing call set-up;
- incoming call set-up;
- handover;
- cipher mode setting;
- location services.

3 Interworking in the MSC, Transparent case

3.1 General


When the MSC receives a forward message from the BSS (possibly forwarded transparently from the MS), it will invoke the desired MAP service and establish a cross reference between the BSSAP procedure and the MAP procedure in order to return the result of the operation to the BSS (which may forward it transparently to the MS. The cross reference is deleted when the MSC terminates the MAP procedure.

Positive or negative results of the MAP procedure are returned in the appropriate BSSAP message.

The parameters of the forward BSSAP message are mapped by a one-to-one mapping into the parameters of the MAP service. However, in some cases parameters received on the radio path may be suppressed at the MSC because they are related to another protocol entity, e.g. information related to RR-management may be included in MM-management messages. Similarly, parameters received in the (positive) MAP service response are mapped one-to-one into parameters of the corresponding backward BSSAP message.

A negative outcome, as carried in various MAP services (MAP specific service response, MAP_U_ABORT, MAP_P_ABORT, MAP_NOTICE and premature MAP_CLOSE, see 3GPP TS 29.002 for definitions) is mapped into a cause value in the required backward BSSAP message. In this case several negative results of MAP may be mapped into the same BSSAP cause value, i.e. without discrimination between these negative results.

NOTE: For O & M purposes, the MAP procedure entity in the MSC may require a more detailed overview of negative results than the MS.

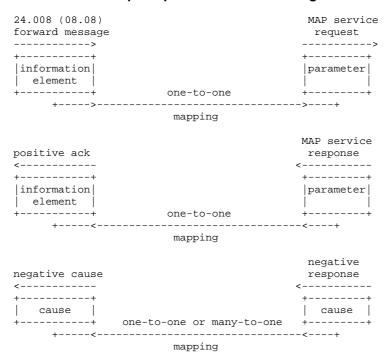

These principles are illustrated in figure 1.



For each of the transparent operations listed in subclause 2.1, the following format is used to show the mapping.

	24.008 or 08.08	29.002	Notes
Forward message	MS/BSS to MSC message name information element 1 information element 2	_	
Positive result	MSC to MS/BSS message name information element 1 information element 2	-	- +
Negative result	cause 2 cause 3 cause 3	VLR to MSC negative response <> cause 1 <> cause 2 <> MAP_U/P_ABORT <> MAP_NOTICE <> MAP_CLOSE	

Equivalent mapping principles apply for operations invoked by the VLR towards the BSS/MS. However, negative results are generally not received from the BSS/MS but are generated in the MSC. Therefore, for such operations the interworking for negative results is not normally shown.

3.2 Routeing area updating

 	24.008	29.002	Notes
Forward message	GMM (ROUTEING AREA UPDATE REQUEST)	MAP_UPDATE_GPRS _ LOCATION request	
	MS classmark 1	_	
	MS classmark 4	-	i
ĺ	GPRS Ciphering	-	ĺ
	key seq number		
	Mobile station identity	IMSI	1
	Old routeing area	_	1
İ	identification		İ
Positive	GMM (ROUTEING AREA	MAP_UPDATE_GPRS	+
results	UPDATE ACCEPT)	LOCATION response	İ
	Routeing area	-	
	identification		ĺ
	Mobile station	-	1
	identity C Mobile station	_	2
	C Reject: IMSI unknown	_	
	in HLR		İ
	C Reject: MSC temporar		4
	not reacheab	Le 	
Negative	GMM (ROUTEING AREA	MAP_UPDATE_GPRS	
results 	UPDATE REJECT)	LOCATION response	
ļ	Network failure	_	5
	GPRS services	Unknown HLR	
	not allowed in this PLMN		
	GPRS services	Unknown subscriber	6
İ	not allowed	(no GPRS subscription)	i
	GPRS services and	Unknown subscriber	7
	non GPRS services not allowed	(IMSI unknown)	
	C GPRS services	Unknown subscriber	8
	not allowed	(no GPRS subscription)	ĺ
	C GPRS services and	Unknown subscriber	9
	non-GPRS services not allowed	(IMSI unknown)	1
	MS identity cannot	_	10
	be derived by		İ
	the network		
	GPRS services not	Roaming not allowed: PLMN not allowed	1
1	allowed in this	FILMIN HOC ALLOWED	
	PLMN		Ì
	LA not allowed	-	
	Roaming not allowed in this LA	-	
	No Suitable cells in	_	 11
	location area		++
	GPRS services not	Operator	ĺ
	allowed in this PLMN	determined barring	
	Illegal MS	-	
	Illegal ME	_	İ
	Network failure	System Failure	
	Network failure	Unexpected data value	
	Network failure Network failure	MAP_U/P_ABORT MAP_NOTICE	
			1

- NOTE 1: The mobile station identity is inserted by the SGSN if the SGSN wants to deallocate or re-allocate a P-TMSI. If the SGSN wants to deallocate the P-TMSI it shall include the IMSI. If the SGSN wants to reallocate the P-TMSI it shall include the new P-TMSI. If a P-TMSI is included, the MS shall respond with a ROUTEING AREA UPDATE COMPLETE message.
- NOTE 2: The mobile station identity is inserted by the SGSN if it is received in a BSSAP+ LOCATION UPDATE ACCEPT message from the VLR. If a TMSI is included, the MS shall respond with a ROUTEING AREA UPDATE COMPLETE message. Only used in the Combined Routeing and Location Area procedure.
- NOTE 3: This reject cause is inserted on the positive response by the SGSN if the SGSN receives a BSSAP+ LOCATION UPDATE REJECT message from the VLR indicating in the reject cause IMSI unknown in HLR. Only used in the Combined Routeing and Location Area procedure.
- NOTE 4: This reject cause is inserted on the positive response by the SGSN if the SGSN does not receive any response from the VLR to a previous BSSAP+ LOCATION UPDATE REQUEST message. Only used in the Combined Routeing and Location Area procedure.
- NOTE 5: The Unknown RA error is only generated as a result of incorrect information being inserted by the BSS.
- NOTE 6: The HLR shall send Unknown subscriber with diagnostic value No GPRS subscription if the HLR indicates that there is an error in the type of subscription (i.e. SGSN requests service for a non-GPRS only subscriber).
- NOTE 7: The HLR shall send Unknown subscriber with diagnostic value IMSI unknown if the HLR indicates that the IMSI provided by the SGSN is unknown.
- NOTE 8: The HLR shall send Unknown subscriber with diagnostic value No GPRS subscription if the HLR indicates that there is an error in the type of subscription (i.e. SGSN requests service for a non-GPRS only subscriber). Used in the Combined Routeing and Location Area procedure.
- NOTE 9: This reject cause is inserted if the SGSN receives a MAP GPRS UPDATE LOCATION negative response message indicating IMSI unknown. Used in the Combined Routeing and Location Area procedure.
- NOTE 10: This reject cause is inserted if the SGSN does not receive any response from the old SGSN to a previous SGSN CONTEXT REQUEST message.
- NOTE 11 The "No Suitable cells in location area" error is generated when the MS has access to only part of the PLMN, but where there may also be suitable location areas available. The MS retries on another location area.

3.3 Authentication

The message flow for the authentication procedure is shown in figure 2.

MS		LR
AUTHENTICATION REQUEST	MAP_AUTHENTICATE request <	
AUTHENTICATION RESPONSE		->
	or MAP_U/P_ABORT	->

Figure 2: Authentication operation

The MSC can only act on a MAP_AUTHENTICATE request if an RR connection exists with the MS. If such a connection does not exist, the MSC shall terminate the MAP procedure with a MAP_U_ABORT. The same applies if the MS does not respond to an AUTHENTICATION REQUEST message.

	24.008	29.002	Notes
Forward message	AUTHENTICATION REQUEST	MAP_AUTHENTICATE request	+
	RAND	RAND	
	Ciphering key seq number	CKSN	
Backward result	AUTHENTICATION REQUEST	MAP_AUTHENTICATE response	+
 	SRES	SRES	 -

If the SRES parameter does not match the value stored in the VLR, then the ongoing MAP procedure shall be terminated with a cause 'illegal subscriber'. This shall cause the MSC to send an AUTHENTICATION REJECT message.

3.4 Retrieval of the IMSI from the MS

The VLR may request open identification of an MS with a MAP_PROVIDE_IMSI request.

The mapping of information elements is as follows:

	24.008	29.002	Notes
Forward message	IDENTITY REQUEST Identity type set to: IMSI	MAP_PROVIDE_IMSI request	
Backward result	IDENTITY RESPONSE Mobile Identity (IMSI)	MAP_PROVIDE_IMSI response	 .⊥

NOTE 1: The INVOKE does not carry any parameters. The identity type is inferred from the invoke name.

The MSC shall return a MAP_PROVIDE_IMSI response with user error "absent subscriber" if:

- there is no RR connection with the MS when the MAP service request is received;
- there is no response from the MS.

3.5 Reallocation of TMSI

This operation is invoked by the VLR. The MAP_FORWARD_NEW_TMSI request contains the new TMSI which is forwarded to the MS in the TMSI REALLOCATION COMMAND. When the MS acknowledges the receipt of the new TMSI, the MSC will return a MAP_FORWARD_NEW_TMSI response to the VLR.

If there is no radio connection to the MS when the MSC receives the MAP service request, the MSC shall ignore the message.

	24.008	29.002	Notes
Forward message	TMSI REALLOCATION COMMAND	MAP_FORWARD_NEW_TMSI request	
	Mobile identity	TMSI	
	Location area identification	-	
Backward result	TMSI REALLOCATION COMPLETE	MAP_FORWARD_NEW_TMSI response	

3.6 Retrieval of the IMEI from the MS

The VLR may use the MAP_OBTAIN_IMEI service to request the MS to supply its IMEI, or may use the MAP_CHECK_IMEI service to request the MSC to check the MS's IMEI. For either MAP service the BSSAP signalling is the same.

The mapping of information elements is as follows:

	24.008	29.002	Notes
Forward message	IDENTITY REQUEST Identity type set to: IMEI	(MAP_CHECK_IMEI request (or (MAP_OBTAIN_IMEI request	
Backward result	IDENTITY RESPONSE	(MAP_CHECK_IMEI response (or (MAP_OBTAIN_IMEI response	+
	Mobile Identity (IMEI)	IMEI	2

- NOTE 1: The MAP service request does not carry any parameters. The identity type is inferred from the service name.
- NOTE 2: If the MAP_CHECK_IMEI service was used, the MSC also returns the equipment status to the VLR in the MAP_CHECK_IMEI response, after a successful dialogue with the EIR using the IMEI received from the MS.

The MSC shall terminate the MAP dialogue with the VLR using a MAP_U_ABORT if:

- there is no RR connection with the MS when the MAP service request is received;
- there is no response from the MS.
- NOTE: The MSC can also obtain the IMEI from a phase 2 MS by including appropriate information in the BSSMAP Cipher Mode Command.

3.7 Tracing subscriber activity

The VLR may request the MSC and/or BSS to record data about the current transaction with an MS.

	08.08	29.002	Notes
Forward message	MSC INVOKE TRACE	MAP_TRACE_SUBSCRIBER_ ACTIVITY request	
	Trace type TriggerId Trace reference TransactionId Mobile identity(IMSI) Mobile identity(IMEI) OMCId	Trace type _ Trace reference _ IMSI IMEI OMCId	
Backward result	none	none	+

NOTE 1: The VLR may provide either an IMSI or IMEI, but not both.

3.8 Location update

	24.008	29.002	Notes
Forward message	MM (LOCATION UPDATING REQUEST)	MAP_UPDATE_LOCATION_ request	
	Location area id Mobile identity Mobile station classmark 1 Mobile station classmark 2 Ciphering key seq number Location update type	- IMSI - - - -	
Positive results	MM (LOCATION UPDATING ACCEPT)	MAP_UPDATE_LOCATION response	
	Location area identity Mobile identity Follow on proceed	- - -	
Negative results	MM (LOCATION UPDATING REJECT)	MAP_UPDATE_LOCATION response	
	IMSI unknown in HLR PLMN not allowed LA not allowed Roaming not allowed in this LA No Suitable cells in location area PLMN not allowed	Unknown subscriber Roaming not allowed: PLMN not allowed - - Operator determined barring	1
	Illegal MS Illegal ME Network failure Network failure Network failure Network failure Network failure	System Failure Unexpected data value MAP_U/P_ABORT MAP_NOTICE MAP_CLOSE	

NOTE 1 The HLR shall also send this error if there is an error in the type of subscription (i.e. VLR requests service for a GPRS only subscriber).

4 Non-transparent cases

4.1 General

For interworking other than the mapping of information fields, see 3GPP TS 49.008.

4.2 Outgoing call set-up (MS originating call)

Figure 3 shows those elements of a call set-up sequence which require interworking between BSSAP and MAP. BSSAP messages which do not require interworking with MAP are not shown.

MS MSC VLR CM SERVICE REOUEST -----> MAP_PROCESS_ACCESS_REQUEST request -----; +----+ Possibly | identification procedure/ | authentication procedure | MAP_SET_CIPHERING_MODE request <-----(NOLE 1) MAP_PROCESS_ACCESS_REQUEST response CM SERVICE ACCEPT <------(Note 1) ____KUCESS <----positive result (Note 1) <-----(Note 2) CIPHER MODE COMMAND _____ (Note 2) CIPHER MODE COMPLETE -----> MAP_FORWARD_NEW_TMSI request TMSI REALLOCATION COMMAND <-----_____ (Note 3) TMSI REALLOCATION COMPLETE MAP_FORWARD_NEW_TMSI response -----MAP_PROCESS_ACCESS_REQUEST response CM SERVICE REJECT <-----SETUP (Note 5) ----> MAP_SEND_INFO_FOR_OUTGOING_CALL -----> request MAP_COMPLETE_CALL request CALL PROCEEDING <-----MAP_SEND_INFO_FOR_OUTGOING_CALL RELEASE COMPLETE (Note 6) response, MAP_U/P_ABORT, MAP_NOTICE MAD_CLOSE <----*e*_____



NOTE 1: If the MSC received a MAP_SET_CIPHERING_MODE request, it stores it until it receives the MAP_PROCESS_ACCESS_ REQUEST response.

NOTE 2: CM SERVICE ACCEPT is sent only if the ciphering procedure is not invoked.

NOTE 3: TMSI reallocation need not be sequenced with other messages, but should be sent after ciphering.

- NOTE 4: CM SERVICE REJECT is sent as a result of a user error parameter in the MAP_PROCESS_ACCESS_REQUEST response, or termination of the MAP dialogue.
- NOTE 5: The SETUP message is sent after the MS has either received a CM SERVICE ACCEPT or sent a CIPHER MODE COMPLETE.
- NOTE 6: RELEASE COMPLETE is sent as a result of a user error parameter in the MAP_SEND_INFO_FOR_OUTGOING_CALL response, or termination of the MAP dialogue.

The procedure can be considered in two parts: the handling of the CM SERVICE REQUEST and the handling of the SETUP request.

The procedure is initiated by the MS sending a CM SERVICE REQUEST message. The MSC will forward the service request to the VLR in the MAP_PROCESS_ACCESS_REQUEST request. The VLR may then invoke other operations, e.g. authentication and identification. These operations are defined in subclauses 3.4 and 3.5.

If there is a positive outcome for the CM SERVICE REQUEST procedure, the VLR always sends a MAP_PROCESS_ACCESS_REQUEST response. If the request is for a first MM-connection and ciphering is required, the MAP_PROCESS_ACCESS_REQUEST response is preceded by a MAP_SET_CIPHERING_MODE request. In this case the MSC sends a CIPHER MODE COMMAND towards the MS. The interworking for cipher mode setting is described in subclause 4.4. If the request is for an additional MM-connection or for a first MM-connection where ciphering is not required, then the positive MAP_PROCESS_ACCESS_REQUEST response causes the MSC to send a CM SERVICE ACCEPT message to the MS. After cipher mode setting has been completed or the CM SERVICE ACCEPT message has been returned, the MS will send the SETUP (or EMERGENCY SETUP) message and information retrieval takes place as shown.

A negative outcome for the MAP_PROCESS_ACCESS_REQUEST procedure can be signalled by a MAP_PROCESS_ACCESS_REQUEST response containing a user error parameter, or by terminating the MAP dialogue between the MSC and the VLR.

A positive outcome for the call setup procedure is indicated by a MAP_COMPLETE_CALL request from the VLR to the MSC, which causes the MSC to send a CALL PROCEEDING message towards the MS.

A negative outcome for the call setup procedure can be signalled by a MAP_SEND_INFO_FOR_INCOMING_CALL response or by terminating the dialogue between the MSC and the VLR.

Information element mapping is required between the messages:

- CM SERVICE REQUEST to MAP_PROCESS_ACCESS_REQUEST request;
- SETUP to MAP_SEND_INFO_FOR_OUTGOING CALL request;
- MAP_SEND_INFO_FOR_OUTGOING_CALL response, MAP_U/P_ABORT, MAP_NOTICE or premature MAP_CLOSE to RELEASE COMPLETE or CM SERVICE REJECT.

The information contained in the MAP_COMPLETE_CALL request is not transmitted on the radio interface but is used in the MSC for connecting the call.

The conversion of information elements is as follows:

	08.08/24.008	29.002	Notes
Forward	COMPLETE LAYER 3 INFO (CM SERVICE REQUEST)	MAP_PROCESS_ACCESS_ REQUEST request	+
	CM Service type Ciphering key sequence number Mobile identity	CM Service type CKSN TMSI or IMSI or IMEI	
	Mobile station Classmark 2	-	
	Cell identifier Chosen channel	Current LA Id	4
	-	Access Connection Status	3
Positive result	DTAP(CM SERVICE ACCEPT)	MAP_PROCESS_ACCESS_ REQUEST response	2
Negative result	DTAP(CM SERVICE REJECT)	MAP_PROCESS_ACCESS_ REQUEST response	
	IMSI unknown in VLR	Unidentified Subscriber	
[Requested service option not subscribed	??????????????????????????????????????	
	Illegal ME Network failure Network failure Network failure Network failure	Illegal equipment System failure MAP_U/P_ABORT MAP_NOTICE MAP_CLOSE	
	DTAP(AUTHENTICATION REJECT)	MAP_PROCESS_ACCESS_ REQUEST response	+
		Illegal subscriber	 _

NOTE 1: Indicates, in this case, a mobile originating call establishment or an emergency call establishment.

NOTE 2: The CM SERVICE ACCEPT is sent when the ciphering procedure is not invoked.

NOTE 3: Indicates whether or not an RR-connection exists and whether or not ciphering has been started.

NOTE 4: The Current LA Id parameter is derived by the MSC from the Cell identifier information element.

	24.008	29.002	Notes
Forward message		MAP_SEND_INFO_FOR_ DUTGOING_CALL request	+
	BC repeat indicator Bearer capability 1 Bearer capability 2 Calling party subaddress Called party BCD number Called party subaddress LLC repeat indicator Low layer compatibility Low layer compatibility HLC repeat indicator High layer compatibility High layer compatibility Facility	II - - i -	
	User-user SS version CLIRO flag	Suppress pref CUG Suppress CUG OA - - -	4 4
Positive result			2
Negative result	RELEASE COMPLETE	MAP_SEND_INFO_FOR_ OUTGOING_CALL response	+
	3GPP TS 24.010	Call Barred Barring Service Active	
	Operator determined barring	Call Barred Operator Determined Barring	
	Network out of order Network out of order Network out of order Bearer capability not authorized Bearer capability not authorized [User not member of CUG]	Data Missing Unexpected Data Value System Failure Bearer service not provisioned Teleservice not provisioned CUG reject	
	Network out of order Network out of order Network out of order	MAP_U/P_ABORT MAP_NOTICE MAP_CLOSE	 #

- NOTE 1: If the Facility IE contains CUG information, the CUG information is transferred to the VLR in the MAP_SEND_INFO_FOR_OUTGOING_CALL service; any other information contained in a Facility IE is transferred to the VLR in a MAP Supplementary Services related service.
- NOTE 2: The call setup parameters retrieved from the VLR are not sent to the MS. The parameters are carried in the MAP_COMPLETE_CALL service.
- NOTE 3: The bearer capabilities can be used to derive the bearer/tele service.
- NOTE 4: CUG information is derived from the contents of the Facility IE.

4.3 Incoming call set-up (MS terminating call)

Figure 4 shows those elements of the procedure which require interworking between MAP and 3GPP TS 24.008 procedures.

MS	MSC	VLR
		Info retrieval ++
		MAP_PAGE request or
PAGE REQUEST	<	MAP_SEARCH_FOR_MS request
(Note 1)		
PAGING RESPONSE		SEARCH_FOR_MS response (Note 2)
		PROCESS_ACCESS_REQUEST request
		Possibly authentication procedure
		AP_SET_CIPHERING_MODE request
		(Note 3)
CIPHER MODE COMMAND	MAP_ <	PROCESS_ACCESS_REQUEST response
(Note 3) CIPHER MODE COMPLETE		positive result (Note 4)
TMSI REALLOCATION COMMAN		MAP_FORWARD_NEW_TMSI request
<		(Note 5)
TMSI REALLOCATION COMPLET:		NAP_FORWARD_NEW_TMSI response
SETUP	<	MAP_COMPLETE_CALL request
RELEASE COMPLETE		P_SEND_INFO_FOR_INCOMING_CALL
< (Note 6)	MAP_	response negative result, U/P_ABORT,MAP_NOTICE, MAP_CLOSE

Figure 4: Incoming call set-up

- NOTE 1: If an MM connection already exists, the PAGE REQUEST is not sent. If the call can be accepted, the MSC sends a MAP_PROCESS_ACCESS_REQUEST request in response to the MAP_PAGE request. If the call cannot be accepted the MSC sends a MAP_PAGE response containing the error 'busy subscriber'.
- NOTE 2: Sent only if MAP_SEARCH_FOR_MS was used.
- NOTE 3: Needed only if a ciphered MM-connection does not exist already.
- NOTE 4: If the MSC received a MAP_SET_CIPHERING_MODE request, it stores it until it receives the MAP_PROCESS_ACCESS_ REQUEST response.
- NOTE 5: TMSI reallocation need not be sequenced with other messages, but should be sent after ciphering.
- NOTE 6: RELEASE COMPLETE is sent as a result of a user error parameter in the MAP_SEND_INFO_FOR_OUTGOING_CALL response, or termination of the MAP dialogue.

The paging procedure is controlled by the VLR. It may be followed by authentication (subclause 3.4), ciphering (subclause 4.4) and reallocation of TMSI(subclause 3.6). The SETUP message is sent when the MAP_COMPLETE_CALL request is received.

Normally there is no interworking between the MAP_COMPLETE_CALL request and the SETUP message. However, the MAP_COMPLETE_CALL request may contain a bearer service indication which will be used to establish the bearer capabilities at the MSC. The interworking between the MAP_PAGE request or MAP_SEARCH_FOR_MS request and the BSSMAP PAGING REQUEST message is as follows:

	08.08/24.008	29.002	Notes
Forward message	PAGING REQUEST	MAP_PAGE request or MAP_SEARCH_FOR_MS request	+
	IMSI TMSI Cell identifier list	IMSI TMSI Stored LA Id	
Backward message	COMPLETE LAYER 3 INF((PAGING RESPONSE)) MAP_PROCESS_ACCESS_ REQUEST request	+
	- Ciphering key sequence number	CM service type CKSN	2
	Mobile identity Mobile station classmark 2	TMSI or IMSI	
	Cell Identifier -	Current LA Id Access connection status	3
 	Chosen channel	-	

- NOTE 1: If TMSI is included, the TMSI is used as the mobile identity in the 3GPP TS 24.008 PAGE REQUEST message, otherwise the IMSI is used as the mobile identity.
- NOTE 2: In this case the MAP CM service type is set to 'mobile terminating call'.
- NOTE 3: The Target LA Id parameter is derived by the MSC from the Cell identifier information element.

4.4 Cipher mode setting

The interworking is as follows:

	08.08	29.002	Notes
Forward	CIPHER MODE COMMAND	MAP_SET_CIPHERING_MODE request	
	Cipher mode setting Encryption information	Ciphering mode Kc	1
Positive result	CIPHER MODE COMPLETE	None	T
Negative result	CIPHER MODE REJECT	None	

NOTE 1: The key Kc is passed through the BSS to the BTS, but is not passed to the MS.

4.5 Inter-MSC Handover

The general principles of the handover procedures are given in 3GPP TS 23.009. 3GPP TS 29.010 gives the necessary information for interworking between the 3GPP TS 48.008 handover protocol and the 3GPP TS 29.002 MAP protocol.

4.5.1 Basic Inter-MSC Handover

When a Mobile Station is handed over between two MSCs, the establishment of a connection between them (described in 3GPP TS 23.009) requires interworking between A-Interface and E-Interface.

The signalling at initiation, execution, completion of the Basic Inter-MSC handover procedure is shown in figures 5 to 10 with both possible positive or negative outcomes.

Additionally figures 5b and 5c show the possible interworking when trace related messages are transparently transferred on the E-Interface at Basic Inter-MSC Handover initiation.

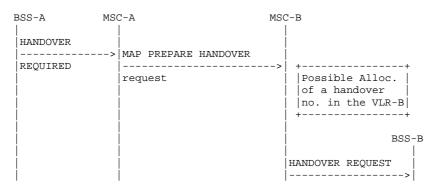


Figure 5a: Signalling for Basic Inter-MSC Handover initiation (no trace related messages transferred)

BSS-A	MSC	C-A		MSC-	В	
BSC INVOKE	TRACE]				
	>					
HANDOVER						
	>	MAP PREPARE	HANDOVER			
REQUIRED				>	++	
		request(*)			Possible Alloc.	
					of a handover	
					no. in the VLR-B	
					++	
					BSS	-B
						ļ
				H	IANDOVER REQUEST	ļ
				-	>	ļ
						ļ
				E	SC INVOKE TRACE	
				-	>(*	*)

Figure 5b: Signalling for Basic Inter-MSC Handover initiation (BSC invoke trace message transferred)

- (*): In that case, HANDOVER REQUEST and BSC INVOKE TRACE messages are included within the AN-APDU parameter.
- (**): BSC INVOKE TRACE is forwarded to BSS-B if supported by MSC-B.


BSS-A	MSC-A	MSC-B
HANDOVER	(*) > MAP PRE request	PARE HANDOVER ++ (**) Possible Alloc. of a handover no. in the VLR-B
		HANDOVER REQUEST MSC INVOKE TRACE
		>(***)

Figure 5c: Signalling for Basic Inter-MSC Handover initiation (MSC invoke trace message transferred)

- (*): Tracing invocation has been received from VLR.
- (**): In that case, HANDOVER REQUEST and MSC INVOKE TRACE messages are included within the AN-APDU parameter.
- (***): MSC INVOKE TRACE is forwarded to BSS-B if supported by MSC-B.

Possible Positive outcomes:

a) successful radio resources allocation and handover number allocation (if performed):

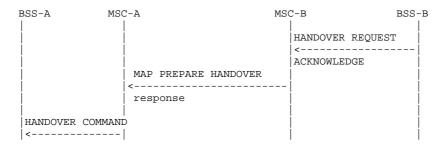

b) radio resources allocation queued and successful handover number allocation (if performed). Later successful radio resources allocation indication:

BSS-A	MSC	C-A		MSC	С-В	BSS-B
		 			QUEUING INDICATI	ON
İ		MAP PREPARE	HANDOVER	j		i
		<				
		response				
					HANDOVER REQUEST	.
					<	
					ACKNOWLEDGE	
		MAP PROCESS	ACCESS			
		<				
HANDOVER	COMMAND	SIGNALLING	request			
<						

Figure 6: Signalling for Basic Inter-MSC Handover execution (Positive outcomes)

3GPP TS 29.010 version 3.12.0 Release 1999

23

Possible Negative outcomes:

c) user error detected, or handover number allocation unsuccessful (if performed), or component rejection or dialogue abortion performed by MSC-B:

BSS-A	MSC-A	MSC-B	BSS-B
	MAP PREPARE	HANDOVER response	
	negative res	sult, MAP CLOSE	
	<		
	MAP U/P-ABOF	λ. Tλ	
HANDOVER REQ	UIRED		İ
<			
REJECT (Note	e 1)	ĺ	
İ	ĺ	İ	ĺ

d) radio resources allocation failure:

BSS-A	MSC-A	MSC	С-В	BSS-B
			HANDOVER FAILU	JRE
			<	
	MAP PREPARE HANDOVER			
	<			
	response			
HANDOVER REG	QUIRED			
<				
REJECT (Note	e 1)			

e) radio resources allocation queued and successful handover number allocation (if performed). Later unsuccessful radio resources allocation:

BSS-A	MSC-A	MSC-B	BSS-B
		 QUEUING IND <	ICATION
İ	MAP PREPARE HANDOVER		İ
	<		
ļ	response		
		 HANDOVER FA	ILURE
		<	
	MAP PROCESS ACCESS		
	<		1
Ì	SIGNALLING request		Í
HANDOVER REQU	JIRED		ĺ
<			
REJECT (Note	1)		

f) unsuccessful handover execution (Reversion to the old channel):


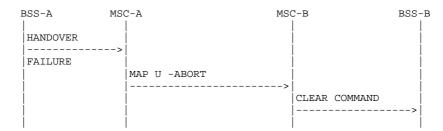


Figure 7: Signalling for Basic Inter-MSC Handover execution (Negative outcomes)

NOTE: Possible rejection of the handover because of the negative outcome of MAP or BSSMAP procedure.



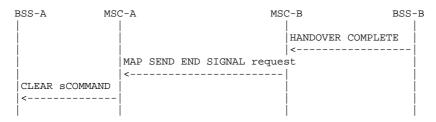

Positive outcome




Figure 9: Signalling for Basic Inter-MSC Handover completion (Positive outcome)

Negative outcome




Figure 10: Signalling for Basic Inter-MSC Handover completion (Negative outcome)

NOTE: From interworking between MAP and BSSMAP point of view.

The handover procedure is normally triggered by BSS-A by sending a HANDOVER REQUIRED message on A-Interface to MSC-A. The invocation of the Basic Inter-MSC handover procedure is performed and controlled by MSC-A. The sending of the MAP Prepare-Handover request to MSC-B is triggered in MSC-A upon receipt of the HANDOVER REQUIRED message. For compatibility reason, the cell identity of the cell where the call is to be handed over in MSC-B area, provided in the HANDOVER REQUIRED message, is mapped into targetCellId MAP parameter and the HANDOVER REQUEST message is encapsulated in the AN-APDU MAP parameter of the Prepare-Handover

MAP request. MSC-B can invoke another operation towards the VLR-B (allocation of the handover number described in 3GPP TS 29.002).

Additionally, if tracing activity has been invoked, the trace related messages can be transferred on the E-Interface encapsulated in the AN-APDU MAP parameter of the Prepare-Handover Request. If transferred, one complete trace related message at a time shall be included in the AN-APDU MAP parameter after the HANDOVER REQUEST message.

The interworking between Prepare Handover and HANDOVER REQUIRED is as follows:

	08.08	29.002	Notes
Forward message	HANDOVER REQUIRED	MAP PREPARE HANDOVER request	r
ĺ	BSSMAP informatic	-ho-NumberNotRequired on -targetCellId	1
ĺ	elements	-AN-APDU(HANDOVER REQUEST,	2
		BSC INVOKE TRACE or MSC INVOKE TRACE)	3
Positive result		MAP PREPARE HANDOVER response	 4
		-handover number	
		-AN-APDU(QUEUING INDICATION	
		or HANDOVER REQUEST	ļ
		ACKNOWLEDGE or HANDOVER FAILURE)	
Negative result	HANDOVER REQUIRED	REJECT MAP PREPARE HANDOVER	5
	equipment failure	System Failure	
	equipment failure	No Handover Number available	
	equipment failure	UnexpectedDataValue	ļ
	equipment failure	Data Missing	
	equipment failure	MAP CLOSE	
	equipment failure	MAP U/P -ABORT	

- NOTE 1: The ho-NumberNotRequired parameter is included by MSC-A, when MSC-A decides not to use any circuit connection with MSC-B. No handover number shall be present in the positive result. Any negative response from MSC-B shall not be due to handover number allocation problem.
- NOTE 2: The process performed on the BSSMAP information elements received in the HANDOVER REQUIRED message is described in the GSM Recommendation 48.008.
- NOTE 3: The process performed on the BSSMAP information elements received in the MSC or BSC INVOKE TRACE message is described in subclause 4.5.6.6.
- NOTE 4: The response to the Prepare-Handover request can include in its AN-APDU parameter, identifying the GSM-08.06 protocol, either a BSSMAP QUEUING INDICATION, or a BSSMAP HANDOVER REQUEST ACKNOWLEDGE or a BSSMAP HANDOVER FAILURE.

In the first case, MSC-A shall wait for the radio resources allocation response from MSC-B, transmitted to MSC-A as described in subclause 4.5.4.

In the second case, the positive result triggers in MSC-A the sending on A-Interface of the HANDOVER COMMAND.

In the third case, the positive result triggers in MSC-A one of the following:

- another handover attempt is initiated by MSC-A;
- optionally the sending of the HANDOVER REQUIRED REJECT.

(The possible sending of the HANDOVER REQUIRED REJECT message upon receipt of the HANDOVER FAILURE is out of the scope of 3GPP TS 29.010 and lies in 3GPP TS 48.008).

NOTE 5: The possible sending of the HANDOVER REQUIRED REJECT message is described in 3GPP TS 48.008.

The interworking between Send End Signal and HANDOVER COMPLETE in MSC-B is as follows:

	08.08 29.002	Notes
Forward message	HANDOVER COMPLETE MAP SEND END SIGNAL req	uest
liicbbuge	-AN-APDU(HANDOVER COMF	 LETE)
Positive result	CLEAR COMMAND MAP SEND END SIGNAL res -Call Control release	ponse 1
Negative result	CLEAR COMMAND -Call Control release MAP CLOSE -Call Control release MAP U/P -ABOR	 2 T

- NOTE 1: The positive empty result triggers the clearing of the Radio Resources on the A-Interface and the release of the SCCP connection between MSC-B and BSS-B. If a circuit connection is used between MSC-A and MSC-B, the 'Call Control release' clearing cause shall only be given to BSS-B when MSC-B has received a clearing indication on its circuit connection with MSC-A.
- NOTE 2: The abortion of the dialogue or the rejection of the component triggers in MSC-B the clearing of its circuit connection with MSC-A, if any, of the Radio Resources on the A-Interface and the release of the SCCP connection between MSC-B and BSS-B.

The interworking between Send End Signal and CLEAR COMMAND in MSC-A is as follows:

	29.002		08.08	Notes
Forward message	MAP SEND response	END SIGNAL	CLEAR COMMAND	
_	_	-AN-APDU(- Handover	1
		HANDOVER COMPLETE)	Successful	·
Positive result				
Negative result				

The interworking between HANDOVER FAILURE in case of reversion to old channel of the MS and User Abort in MSC-A is as follows:


	08.08	29.002	Notes
Forward message	HANDOVER FAILURE	MAP U -ABORT	
	- Reversion to old channel		
Positive result			
Negative			+


result

4.5.2 Subsequent Inter-MSC Handover back to MSC-A

When a Mobile Station is being handed over back to MSC-A, the procedure (described in 3GPP TS 23.009) requires interworking between A-Interface and E-Interface.


The signalling at initiation, execution and completion of the Subsequent Inter-MSC handover procedure is shown in figures 11 to 15.

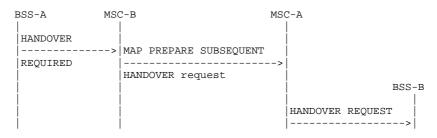



Possible Positive outcomes:

a) successful radio resources allocation:

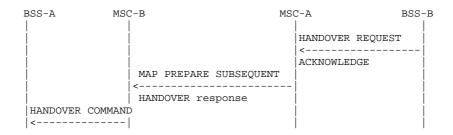

b) radio resources allocation queued. Later successful radio resources allocation indication:

BSS-A	MSC-B	MSC-A	BSS-B
		QUEUING INI	DICATION
		<	
ĺ	MAP PREPARE	E SUBSEQUENT	ĺ
	<		
	HANDOVER re	esponse	
		HANDOVER RE	QUEST
		<	
		ACKNOWLEDGE	2
	MAP FORWARI	ACCESS	
	<		
	SIGNALLING	request	
HANDOVER	COMMAND	ĺ	ĺ
<			

Figure 12: Signalling for Subsequent Inter-MSC Handover back to MSC-A execution (Positive outcome)

Possible Negative outcomes:

c) user error detected, or component rejection or dialogue abortion performed by MSC-A:

BSS-A	MSC-B	MSC-A	BSS-B
	MAP PREPARE	SUBSEQUENT HANDOVER	
	<		
HANDOVER REQ	UIRED response	negative result	ĺ
<			
REJECT (Note	2 1)		

d) component rejection or dialogue abortion performed by MSC-A:

BSS-A	MSC-B	MSC-A	BSS-B
	MAP CLOSE, M	IAP U/P ABORT	
	<		
CLEAR COM	MAND		
<			


e) radio resources allocation failure:

BSS-A	MSC-B		MSC-A	BSS-B
			HANDOVER	FAILURE
			<	
	MAP	PREPARE SUBSEQUEN	г ј	ĺ
İ	<			ĺ
HANDOVER	REQUIRED	HANDOVER response	İ	ĺ
<				
REJECT (Note 1)		ĺ	ĺ

f) radio resources allocation queued. Later unsuccessful radio resources allocation:

BSS-A	MSC-B	MSC-A	BSS-B
		QUEUING	INDICATION
		<	
ĺ	MAP PREPARE S	SUBSEQUENT	
	<		
	HANDOVER 1	response	
	ĺ	HANDOVER	FAILURE
		<	
ĺ	MAP FORWARD A	ACCESS	
	<		
HANDOVER REQ	UIRED SIGNALLING	G request	j
<			
REJECT (Note	1)	j	

Figure 13: Signalling for Subsequent Inter-MSC Handover back to MSC-A execution (Negative outcome)






Figure 14: Signalling for Subsequent Inter-MSC Handover back to MSC-A completion (Successful completion of the procedure)



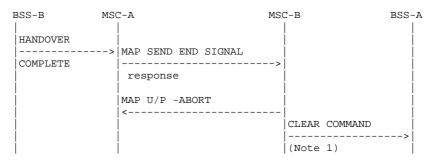


Figure 15: Signalling for Subsequent Inter-MSC Handover back to MSC-A completion (Unsuccessful completion of the procedure)

NOTE 1: Abnormal end of the procedure which triggers the clearing of all resources in MSC-B.

The interworking between Prepare Subsequent Handover and HANDOVER REQUIRED is as follows:

	08.08	29.002	Notes
Forward message	HANDOVER REQUIRED M	AP PREPARE SUBSEQUENT HANDOVER request	1
	BSSMAP information elements	-target MSC number -targetCellId -AN-APDU(HANDOVER REQUEST)	
Positive result	HANDOVER REQUIRED M	AP PREPARE SUBSEQUENT HANDOVER response -AN-APDU(QUEUING INDICATION or HANDOVER REQUEST ACKNOWLEDGE or HANDOVER FAILURE)	2
Negative	HANDOVER REQUIRED equipment failure equipment failure equipment failure cleAR COMMAND equipment failure	REJECT MAP PREPARE SUBSEQUENT HANDOVER response Unknown MSC Subsequent Handover Failure UnexpectedDataValue Data Missing MAP CLOSE	3

- NOTE 1: The processing performed on the BSSMAP information elements received in the HANDOVER REQUIRED message is out of the scope of the present document. The target MSC number is provided to MSC-A by MSC-B based on the information received from BSS-B.
- NOTE 2: The response to the Prepare-Subsequent-Handover request can include in its AN-APDU parameter, identifying the GSM-0806 protocol, either a BSSMAP QUEUING INDICATION, or a BSSMAP HANDOVER REQUEST ACKNOWLEDGE or a BSSMAP HANDOVER FAILURE.

In the first case, MSC-B shall wait for the radio resources allocation response from MSC-A, transmitted to MSC-B as described in subclause 4.5.4.

In the second case, the positive result triggers in MSC-B the sending on A-Interface of the HANDOVER COMMAND.

In the third case, the positive result triggers in MSC-B one of the following:

- another handover attempt is initiated by MSC-B;
- optionally the sending of the HANDOVER REQUIRED REJECT.

(The possible sending of the HANDOVER REQUIRED REJECT message upon receipt of the HANDOVER FAILURE is out of the scope of 3GPP TS 29.010 and lies in 3GPP TS 48.008).

NOTE 3: The possible sending of the HANDOVER REQUIRED REJECT message is described in 3GPP TS 48.008.

The interworking between Send End Signal Result and HANDOVER COMPLETE in MSC-A is as follows:

	08.08	29.002	Notes
Forward message	HANDOVER COMPLETE	MAP SEND END SIGNAL response	
Positive result			+
Negative result		MAP U/P -ABORT	1

NOTE 1: The abortion of the dialogue ends the handover procedure with MSC-B.

4.5.3 Subsequent Inter-MSC Handover to third MSC


When a Mobile Station is being handed over to a third MSC, the procedure (described in 3GPP TS 23.009) does require one specific interworking case in MSC-A (figure 20) between E-Interface from MSC-B and E-Interface from MSC-B' other than the combination of the ones described in the subclause 4.5.1 and 4.5.2.

BSS-A	MSC	С-В	MSC	C-A		MS	С-В'
HANDOVER	>	MAP PREPARE SUSEQUE HANDOVER request	NT >		PREPA	ARE > request	++ Possib. Alloc. of ho. number VLR-B ++ BSS-B HANDOVER > REQUEST

Figure 16: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') initiation

Possible Positive outcomes:

a) successful radio resources allocation:

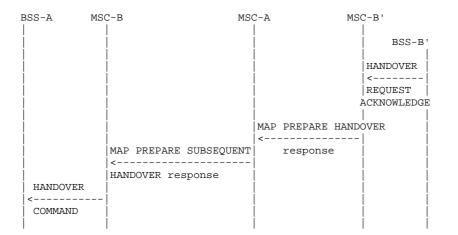

b) radio resources allocation queued and successful handover number allocation, if performed. Later successful radio resources allocation indication:

BSS-A	MSC-B	MSC-A	MSC-B'
			BSS-B'
			QUEUING
			<
			INDICAT.
		MAP PREPARE	
	MAP PREPARE SUBSEQU	UENT response	
	 HANDOVER response		
			HANDOVER
			<
			REQUEST
			ACKNOWLEDGE
		MAP PROCESS	
		<	
	MAP FORWARD ACCESS	SIGNALLING 1	request
 HANDOVER	SIGNALLING request		
	1		
COMMAND			


Figure 17: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') execution (Positive outcome)

Possible Negative outcomes:

c) user error detected, or component rejection or dialogue abortion performed by MSC-B':

BSS-A	MSC-B	MSC-A	MSC-B'
			BSS-B'
		MAP PREPA	RE HANDOVER
İ	İ	response	negative result
İ		MAP CLOSE	
		<	
		MAP U/P -	ABORT
İ	MAP PREPARE S	UBSEQUENT	i i
	<		
	HANDOVER resp	onse negative	
HANDOVER	result		i i
<	İ		i i
REQUIRED	İ		i i
REJECT	İ	ĺ	i i
(Note 1)	İ		i i

d) radio resources allocation failure:

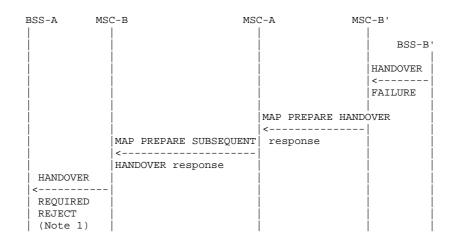

e) radio resources allocation queued and successful handover number allocation (if performed). Later unsuccessful radio resources allocation:

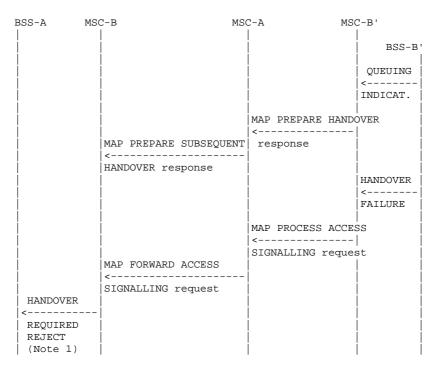


Figure 18: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') execution (Negative outcome)

NOTE 1: Possible rejection of the handover because of the negative outcome of MAP or BSSMAP procedure.

Positive outcome:

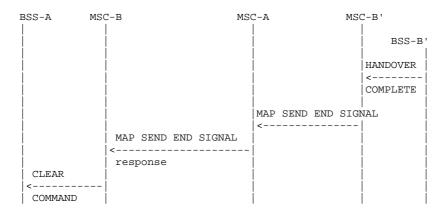


Figure 19: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') completion (Successful completion of the procedure)

Negative outcome:

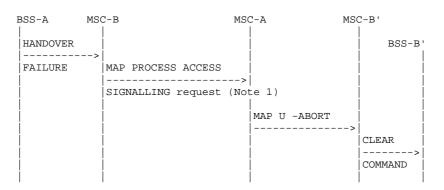


Figure 20: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') completion (Unsuccessful completion of the procedure)

NOTE 1: Specific interworking case detailed below.

The specific interworking case in MSC-A compared to the subclauses 4.5.1 and 4.5.2 occurs between HANDOVER FAILURE encapsulated in a Process Access Signalling from MSC-B and the abortion of the dialogue with MSC-B' in the case of a reversion to old channel of the MS:

	29.002	29.002	Notes
Forward message	MAP PROCESS-SIGNALLING request		
	-AN-APDU(HANDOVER FAILURE)	MAP U -ABORT	
Positive result			
Negative result		MAP U/P -ABORT	2

- NOTE 1: The abortion of the dialogue triggers in MSC-B' the clearing of the circuit connection with MSC-A, if any, and of the Resources between MSC-B' and BSS-B'.The abortion of the dialogue ends the handover procedure with MSC-B'.
- NOTE 2: The abortion of the dialogue ends the handover procedure with MSC-B.

4.5.4 BSSAP Messages transfer on E-Interface

The following mapping applies to the encapsulation performed in MSC-A.

	24.008/08.08	29.002	Notes
Forward message	BSSAP messages	MAP FORWARD ACCESS SIGNALLING request	 1
		-AN-APDU (BSSAP messages)	L
Positive result			2
Negative result		MAP CLOSE MAP U/P -ABORT	

- NOTE 1: Complete BSSAP messages to be sent on MSC-B BSS-B interface (BSSMAP or DTAP messages) are embedded into the AN-APDU parameter (see Annex A of 3GPP TS 48.008 for the description of the set of BSSMAP messages).
- NOTE 2: The Return Result does not apply. If MSC-B returns a message, this message will arrive in an Invoke: Process Access Signalling.

The following mapping applies to the encapsulation performed in MSC-B.

	24.008/08.08	29.002	Notes
Forward message	BSSAP messages	MAP PROCESS ACCESS SIGNALLING request	1
		-AN-APDU (BSSAP messages)	I L
Positive result			2
Negative result	CLEAR COMMAND	MAP CLOSE	
	equipment failure	MAP U/P -ABORT	3

- NOTE 1: Complete BSSAP messages to be sent to MSC-A (BSSMAP or DTAP messages) are embedded into the AN-APDU parameter (see 3GPP TS 49.008 for the description of the set of BSSMAP messages).
- NOTE 2: The Return Result does not apply. If MSC-A returns a message, this message will arrive in an Invoke: Forward Access Signalling.
- NOTE 3: The abortion of the dialogue triggers the clearing of the circuit connection with MSC-A, if any, of the Radio Resources on the A-Interface and the release of the SCCP connection between MSC-B and BSS-B. The clearing of the Radio Resources (the clearing indication received from BSS-B is transmitted to MSC-A) or the loss of the SCCP connection between MSC-B and BSS-B, triggers in MSC-B the abortion of the dialogue on the E-Interface and the clearing of the circuit connection with MSC-A, if any.

4.5.5 Processing in MSC-B, and information transfer on E-interface

The following parameters require processing (e.g. to store the parameter, to internally generate the parameter) in MSC-B. The relevant BSSMAP procedures are mentioned to ease the comprehension, their detailed description is the scope of 3GPP TS 48.008. Each BSSMAP message listed in 3GPP TS 49.008 being transferred on E-interface shall use the mechanisms given in subclause 4.5.4 and is described in 3GPP TS 48.008.

For intra-MSC-B handover/relocation and security interworking, after inter-MSC handover from GSM to GSM, the 3G_MSC-B needs additional information to be able to perform security mode and integrity protection procedures. These RANAP informations are transferred between MSC-A and 3G-MSC-B in MAP messages, defined in 3GPP TS 29.002.

For subsequent handover/relocation, after inter-MSC handover from GSM to GSM, the 3G_MSC-B needs additional information to be able to perform service handover procedures. The relevant information is transferred between MSC-A and 3G-MSC-B in MAP messages, defined in 3GPP TS 29.002.

4.5.5.1 Encryption Information

A sequence of possible encryption algorithms can be sent to a BSS in Cipher Mode Command or Handover Request. The BSS chooses one of the listed algorithms and reports this back to the MSC in Cipher Mode Complete or Handover Request Acknowledge respectively.

The list of algorithms, the ciphering key and the chosen algorithm shall be stored by MSC-B, and the chosen value sent to MSC-A.

Transfer of Information:

If ciphering has not been performed before Inter-MSC Handover, this will be controlled by MSC-A after the completion of Inter-MSC Handover.

Ciphering control towards MSC-B:

If Ciphering has been performed before Inter-MSC Handover:

- in the Handover Request BSSMAP message (information included).

The Handover Request Acknowledge should in this case contain the indication of the chosen algorithm.

If Ciphering has NOT been performed before Inter-MSC Handover:

- in the Cipher Mode Command procedure between MSC-A and MSC-B.

If the encryption algorithm is changed at an intra-BSS handover in BSS-B this must be reported to MSC-A in:

- the BSSMAP Handover Performed procedure.

If the encryption algorithm is changed at an intra-MSC handover in MSC-B this must be reported to MSC-A in:

- the BSSMAP Handover Performed procedure which shall be initiated by MSC-B on reception from BSS-B of the Handover Complete message (the information being previously received in the Handover Request Acknowledge message).

Note also that the chosen encryption value may be contained in the BSSMAP Assignment Complete message. This may happen if the encryption value changes e.g. at a second assignment during a call (e.g. from TCH to SDCCH).

4.5.5.2 Channel Type

Assignment Request and Handover Request (BSSMAP) may give the BSS a choice, in the same way as the Encryption Algorithm above. Depending on the Channel Type Info, the chosen channel may have impact on subsequent handovers, internal in MSC-B and inter-MSC controlled by MSC-A. Some values in channel Type Info indicate that if a particular channel once has been chosen, the same type must be used for the rest of the call.

The Channel Type, and the characteristics of the chosen channel shall be stored by MSC-B, and the Chosen Channel and/or Speech Version information elements transferred to MSC-A.

Transfer of Information:

Independently of the type of resource (Signalling only (e.g. SDCCH) or TCH) assigned to the MS, the Channel Type Information is transferred to MSC-B in:

- the Handover Request BSSMAP message, and the Chosen Channel and/or Speech Version should be reported back to MSC-A in the Handover Request Acknowledge.

If a new type of resource is to be assigned after Inter-MSC Handover, this can be made with:

- the BSSMAP Assignment procedure between MSC-A and MSC-B (Chosen Channel and/or Speech Version in Assignment Complete).

If the Channel Type (the chosen channel and/or chosen speech version) is changed at an intra-BSS handover in BSS-B this must be reported to MSC-A in:

- the BSSMAP Handover Performed procedure.

If the Channel Type (the chosen channel or chosen speech version) is changed at an intra-MSC handover in MSC-B this must be reported to MSC-A in:

- the BSSMAP Handover Performed procedure which shall be initiated by MSC-B on reception from BSS-B of the Handover Complete message (the information being previously received in the Handover Request Acknowledge message).

4.5.5.3 Classmark

This information shall be stored by MSC-B and might be received either from MSC-A, or from the MS when the MS initiates a Classmark Update.

Transfer of Information due to Classmark received from MSC-A:

This information shall be stored by MSC-B and is received:

- in the Handover Request BSSMAP message.

If a new type of resource is to be assigned after Inter-MSC Handover, Classmark Information MAY be included:

- in the BSSMAP Assignment procedure.

Transfer of Information, due to "Classmark Signalling Procedures".

This information shall be stored by MSC-B and can be received:

- Due to a classmark update, either requested from MSC-A (Classmark Request, Classmark Update), or an MS-Initiated Classmark Update.

This can be carried out either with:

- the BSSMAP Classmark procedure(s).

Apart from these cases there is the "odd" case where a Classmark Update can be received during an Inter-MSC Handover by MSC-B, i.e. before the MS has moved to the new channel controlled by MSC-B. This can be made with transparent transfer of BSSMAP Classmark Update.

4.5.5.4 Downlink DTX-Flag

The parameter shall be stored by MSC-B to be used at internal Handover in MSC-B.

Transfer of Information:

Received by MSC-B from MSC-A in either:

If the MS has already been assigned to a TCH for speech before the Inter-MSC Handover, the DTX-flag should be sent in:

- the Handover Request BSSMAP message;

(if the type of resource is not TCH for speech, the DTX-flag shall not be included).

If a new assignment to a TCH for speech after an Inter-MSC Handover is to be performed, this can be made with:

- the BSSMAP Assignment procedure.

4.5.5.5 Priority

The parameter shall be stored by MSC-B and is received according to below:

Transfer of Information:

Received by MSC-B from MSC-A in:

- the Handover Request BSSMAP message.

If a change is needed after an Inter-MSC Handover with:

- the BSSMAP Assignment procedure.

4.5.5.6 MSC/BSC-Invoke Trace Information Elements

The process to be performed by MSC-B on the information elements of the MSC or BSC Invoke Trace BSSMAP messages is left for further study.

4.5.5.7 LSA Identifier List

The parameter shall be stored by MSC-B and is received according to below:

Transfer of Information:

Received by MSC-B from MSC-A in:

- the Handover Request BSSMAP message.

If a change is needed after an Inter-MSC Handover with:

- the LSA Information BSSMAP message.

4.5.5.8 Selected UMTS Algorithm

After inter-MSC handover, the 3G_MSC-B can perform intra-MSC GSM to UMTS handover. A sequence of possible encryption and integrity protection algorithms, received from the 3G_MSC-A, can be sent to an RNS in Relocation Request or in Security Mode Command in case of cipher mode setting after intra.MSC-B handover from GSM to UMTS. The RNS chooses one of the listed algorithms and reports this back to the 3G_MSC in Relocation Request Acknowledge or Security Mode Complete respectively. The MSC-B provides the Selected UMTS algorithm information to the MSC-A. The Selected UMTS algorithms IE in the MAP Process Access Signalling Request message refers to the Chosen Integrity Protection Algorithm and Chosen Encryption Algorithm, defined in RANAP specification 3GPP TS 25.413

The selected algorithm shall be stored by 3G_MSC-B, and sent to 3G_MSC-A.

Transfer of Information:

If ciphering has not been performed before Inter-MSC Handover, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Handover and possibly after intra-MSC-B handover from GSM to UMTS. In both cases Selected UMTS algorithm information is received by 3G_MSC-A from 3G_MSC-B in:

- The Process Access Signalling Request MAP message.

4.5.5.9 Allowed UMTS Algorithms

In case of GSM-subscriber, the Integrity Protection Information and UMTS Encryption Information are not transferred to the MSC-B during inter-MSC handover. Allowed UMTS algorithms is UMTS information that is required in RANAP Relocation Request and RANAP Security Mode Command, and shall be provided by 3G_MSC-A. 3G_MSC-B needs this information in case of an intra-MSC GSM to UMTS handover and in subsequent security mode setting, after an inter-MSC handover. Therefore 3G_MSC-A must provide this information in case of an inter-MSC GSM to GSM handover. The Allowed UMTS algorithms IE in the MAP Prepare Handover and in the MAP Forward Access Signalling Request messages refers to the Permitted Integrity Protection Algorithms in Integrity Protection

Information and Permitted Encryption Algorithms in Encryption Information, defined in RANAP specification 3GPP TS 25.413.

Allowed UMTS algorithms shall be stored by 3G_MSC-B.

Transfer of information:

If ciphering has not been performed before Inter-MSC Handover, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Handover.

Ciphering control towards 3G_MSC-B:

If Ciphering has been performed before Inter-MSC Handover:

- The Prepare Handover Request MAP message.

If Ciphering has NOT been performed before Inter-MSC Handover:

The Forward Access Signalling Request MAP message.

4.5.5.10 BSSMAP Service Handover

This information shall be stored by 3G_MSC-B and sent to a BSS in Handover Request, when 3G_MSC-B performs handover to GSM.

Transfer of information:

The BSSMAP Service Handover information is transferred to 3G_MSC-B in:

- the Handover Request BSSMAP message.

If a new assignment of a TCH after an inter-MSC handover is to be performed, the BSSMAP Service Handover information is transferred to 3G_MSC-B in:

- the BSSMAP Assignment procedure.

4.5.5.11 RANAP Service Handover

This information shall be stored by 3G_MSC-B and sent to an RNS in Relocation Request, when 3G_MSC-B performs relocation or handover to UMTS.

Transfer of information:

The RANAP Service Handover information is transferred to 3G_MSC-B in:

- the Prepare Handover Request MAP message.

If a new assignment of a Radio Access Bearer after an inter-MSC handover is to be performed, the information is transferred to 3G_MSC-B in:

- the Forward Access Signalling Request MAP message

and sent by 3G_MSC-B to the RNS in RAB Assignment Request.

PSTN/ISDN _____ ================ PLMN ý Ŵ BSS-A MSC-A MSC-B BSS-B MS 24.008 (Note) СM СM ΜМ ΜМ 08.08'+----+ 08.08 08.08 _ _ _ _ _ _ +---+ RR RR RR <====>| <---> RR RR ---> --+ (Note)+ Λ Λ 29.010 Note: Subset of 08.08 ý procedures as described τŻ in the TS 3GPP TS 48.008. +----+ 29.002+----+ |MAP/E|<--->|MAP/E 23.009 ÷---+ Remark: The A-bis interface and Ŵ the link layer V protocols being out of the scope of this ТСАР Specification are not shown here. SCCP МТР

4.5.6 Overview of the Technical Specifications GSM interworking for the Inter-MSC Handover

ETSI

41

4.6 Inter-MSC Handover (UMTS to GSM)

The general principles of the handover procedures are given in 3GPP TS 23.009. 3GPP TS 29.010 gives the necessary information for interworking between the 3GPP TS 25.413 RANAP protocol, GSM handover procedures and the 3GPP TS 29.002 MAP protocol. The RANAP protocol is used between the RNS and the 3G-MSC.

The following three principles apply for the Inter-MSC handover UMTS to GSM:

The BSSMAP parameters required for Inter-MSC handover UMTS to GSM are generated as in GSM.

Received BSSMAP parameters, e.g. cause code or Handover command, are mapped to the appropriate RANAP parameters, e.g. cause code transparent container to source RNS.

4.6.1 Basic Inter-MSC Handover

When a Mobile Station is handed over between two MSCs, the establishment of a connection between them (described in 3GPP TS 23.009) requires interworking between A-Interface and E-Interface.

The signalling at initiation, execution, completion of the Basic Inter-MSC handover procedure is shown in figures 21 to 26 with both possible positive or negative outcomes.

Additionally figure 21b shows the possible interworking when the trace related message is transparently transferred on the E-Interface at Basic Inter-MSC Handover initiation.

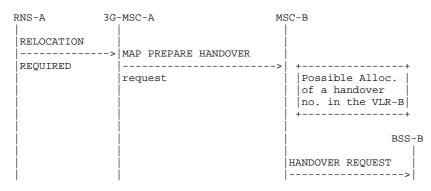


Figure 21a: Signalling for Basic Inter-MSC Handover initiation (no trace related messages transferred)

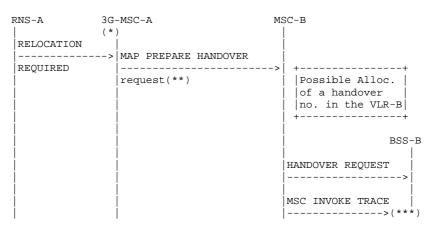


Figure 21b: Signalling for Basic Inter-MSC Handover initiation (MSC invoke trace message transferred)

(*): Tracing invocation has been received from VLR.

3GPP TS 29.010 version 3.12.0 Release 1999

43

- (**): In that case, HANDOVER REQUEST and MSC INVOKE TRACE messages are included within the AN-APDU parameter.
- (***): MSC INVOKE TRACE is forwarded to BSS-B if supported by MSC-B.

Possible Positive outcomes:

a) successful radio resources allocation and handover number allocation (if performed):

RNS-A B	3G-MSC-A	MSC-B	BSS-
	 MAP PREPARE HANDOVER < response	HANDOVER REQUEST	
 RELOCATION CO <	 DMAMMC 		

b) radio resources allocation queued and successful handover number allocation (if performed). Later successful radio resources allocation indication:

RNS-A	3G-MSC-A	MSC-B	BSS
B 		 QUEUING IND <	 CATION
	MAP PREPARE HANDOVER		
	response	 HANDOVER RE < ACKNOWLEDGE	
	MAP PROCESS ACCESS		
RELOCATIO	N COMMAND SIGNALLING reque	est	

Figure 22: Signalling for Basic Inter-MSC Handover execution (Positive outcomes)

Possible Negative outcomes:

c) user error detected, or handover number allocation unsuccessful (if performed), or component rejection or dialogue abortion performed by MSC-B:

RNS-A	3G-MSC-A	MSC-B	BSS-
В			
	MAP PREPARE HANI	DOVER response	
	negative result	, MAP CLOSE	
	<		
	MAP U/P-ABORT		
RELOCATION PR	REPARATION	ĺ	
<			
FAILURE(Note	1)		

d) radio resources allocation failure:

RNS-A B	3G-MSC-A	MSC-B	BSS-
		 HANDOVER <	-
	MAP PREPARE < response		
<	ION PREPARATION (Note 1) 		

e) radio resources allocation queued and successful handover number allocation (if performed). Later unsuccessful radio resources allocation:

RNS-A	3G-MSC-A	MSC-B	BSS-
В			
		QUEUING IND	ICATION
	 MAP PREPARE HAND	< OVER	
	<		
	response		
		HANDOVER FA	ILURE
		<	
	MAP PROCESS ACCE	SS	
	<		
	SIGNALLING requ	est	
RELOCATION P			
<			
FAILURE(Note	1)		

f) unsuccessful handover execution (Reversion to the old radio resources):

RNS-A	3G-MSC-A		MSC-B	BSS-
В				
 RELOCATIO)N			
CANCEL				
	MAP U	-ABORT		
			>	
			CLEAR COMM	AND
				>
RELOCATIO	N			
<				ĺ
CANCEL AC	'K			İ



NOTE 1: Possible rejection of the handover because of the negative outcome of MAP or RANAP procedure.

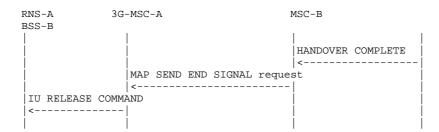


Figure 24: Signalling for Basic Inter-MSC Handover completion

Positive outcome:




Figure 25: Signalling for Basic Inter-MSC Handover completion (Positive outcome)

Negative outcome:




Figure 26: Signalling for Basic Inter-MSC Handover completion (Negative outcome)

NOTE 2: From interworking between MAP and BSSMAP point of view, when the call is released.

The handover procedure is normally triggered by RNS-A by sending a RELOCATION REQUIRED message on Iu-Interface to 3G-MSC-A. The invocation of the Basic Inter-MSC handover procedure is performed and controlled by 3G-MSC-A. The sending of the MAP Prepare-Handover request to MSC-B is triggered in 3G-MSC-A upon receipt of the RELOCATION REQUIRED message. For compatibility reason, the cell identity of the cell where the call is to be handed over in MSC-B area, provided in the RELOCATION REQUIRED message, is mapped into targetCellId MAP parameter and the HANDOVER REQUEST message is encapsulated in the AN-APDU MAP parameter of the Prepare-Handover MAP request. MSC-B can invoke another operation towards the VLR-B (allocation of the handover number described in 3GPP TS 29.002).

Additionally, if tracing activity has been invoked, the trace related message can be transferred on the E-Interface encapsulated in the AN-APDU MAP parameter of the Prepare-Handover Request. If transferred, one complete trace related message at a time shall be included in the AN-APDU MAP parameter after the HANDOVER REQUEST message.

The interworking between Prepare Handover and RELOCATION REQUIRED is as follows:

	25.413 29.002	Notes
Forward message	RELOCATION REQUIRED MAP PREPARE HANDOVER request	 ;
	-ho-NumberNotRequired	1 1
	RANAP information -targetCellId elements -AN-APDU(2
	HANDOVER REQUEST,	∠
		I
	MSC INVOKE TRACE)	1
Positive result	RELOCATION CMD MAP PREPARE HANDOVER response	2 3
	-handover number	İ
	-AN-APDU(OUEUING INDICATION	
	or HANDOVER REQUEST	
	ACKNOWLEDGE)	
Negative result	RELOCATION PREP FAILURE MAP PREPARE HANDOVER	R 4
	Relocation failure in System Failure	' I
	target RNC/CN or target system	
	VNO Handover Number available	1
	UnexpectedDataValue	I
	' Data Missing	
	' MAP CLOSE ' MAP U/P -ABORT	

NOTE 1: The BSSMAP information elements are already stored in 3G-MSC.

The ho-NumberNotRequired parameter is included by 3G-MSC-A, when 3G-MSC-A decides not to use any circuit connection with MSC-B. No handover number shall be present in the positive result. Any negative response from MSC-B shall not be due to handover number allocation problem.

- NOTE 2: The process performed on the RANAP information elements received in the RELOCATION REQUIRED message is described in the 3GPP TS 25.413.
- NOTE 3: The response to the Prepare-Handover request can include in its AN-APDU parameter, identifying the GSM 08.06 protocol, either a BSSMAP QUEUING INDICATION, or a BSSMAP HANDOVER REQUEST ACKNOWLEDGE.

In the first case, 3G-MSC-A shall wait for the radio resources allocation response from MSC-B, transmitted to 3G-MSC-A as described in subclause 4.5.4.

In the second case, the positive result triggers in 3G-MSC-A the sending on Iu-Interface of the RELOCATION CMD.

In the third case, the positive result triggers in 3G-MSC-A.

NOTE 4: The possible sending of the RELOCATION PREP FAILURE message is described in the 3G 25.413.

(The possible sending of the RELOCATION PREP FAILURE message upon receipt of the HANDOVER FAILURE is out of the scope of the 3GPP TS 29.010 and lies in the 3GPP TS 25.413).

The interworking between Send End Signal and HANDOVER COMPLETE in MSC-B is as follows:

	08.08 29.002	Notes
Forward message	HANDOVER COMPLETE MAP SEND END SIGNAL request -AN-APDU(HANDOVER COMPLETE)	+
Positive result	CLEAR COMMAND MAP SEND END SIGNAL response -Call Control release	 1
Negative result	CLEAR COMMAND -Call Control release MAP CLOSE -Call Control release MAP U/P -ABORT	2

- NOTE 1: The positive empty result triggers the clearing of the Radio Resources on the A-Interface and the release of the SCCP connection between MSC-B and BSS-B. If a circuit connection is used between 3G_MSC-A and MSC-B, the 'Call Control release' clearing cause shall only be given to BSS-B when MSC-B has received a clearing indication on its circuit connection with 3G_MSC-A.
- NOTE 2: The abortion of the dialogue or the rejection of the component triggers in MSC-B the clearing of its circuit connection with 3G_MSC-A, if any, of the Radio Resources on the A-Interface and the release of the SCCP connection between MSC-B and BSS-B.

The interworking between Send End Signal and IU RELEASE COMMAND in 3G_MSC-A is as follows:

	29.002		25.413	Notes
Forward message	MAP SEND response	END SIGNAL	IU RELEASE COMMAND	
		-AN-APDU (-	ĺ
		HANDOVER COMPLETE)		İ
		Succ	essful Relocation	
Positive result				+
Negative result				

The interworking between RELOCATION CANCEL in case of reversion to old channel of the UE and User Abort in 3G-MSC-A is as follows:

	25.413	29.002	Notes
Forward message	RELOCATION CANCEL	MAP U -ABORT	Ī
	-Relocation cance	elled	
Positive result	RELOCATION CANCEL	ACKNOWLEDGEMENT	
Negative result			

4.6.2 Subsequent Inter-MSC Handover from 3G-MSC-B back to MSC-A

When a Mobile Station is being handed over back to MSC-A, the procedure (described in TS 23.009) requires interworking between A-Interface, Iu-interface and E-Interface.

The signalling at initiation, execution and completion of the Subsequent Inter-MSC handover procedure is shown in figures 27 to 31.


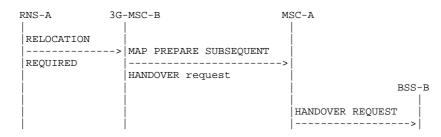


Figure 27: Signalling for Subsequent Inter-MSC Handover back to MSC-A initiation

Possible Positive outcomes:

a) successful radio resources allocation:

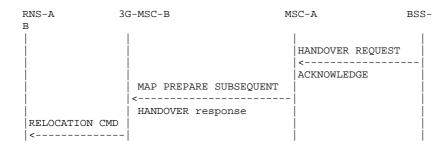

b) radio resources allocation queued. Later successful radio resources allocation indication:

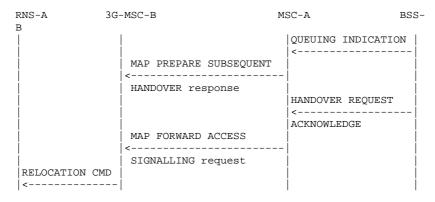


Figure 28: Signalling for Subsequent Inter-MSC Handover back to MSC-A execution (Positive outcome)

Possible Negative outcomes:

c) user error detected, or component rejection or dialogue abortion performed by MSC-A:

RNS-A 30	G-MSC-B	MSC-A	BSS-B
	MAP PREPARE SUBSEQUENT	HANDOVER	
	<		
RELOCATION PREI	P response negative res	ult	
<	-		1
FAILURE(Note 1			1

d) component rejection or dialogue abortion performed by MSC-A:

RNS-A	3G-MSC-B	MSC-A	BSS-B
	MAP CLOSE, MAR	PU/PABORT	
	<		
IU RELEASE		Ì	ĺ
<			
COMMAND		ĺ	İ

e) radio resources allocation failure:

RNS-A	3G-MSC-	-B	М	SC-A	BSS-B
				HANDOVER	FAILURE
				<	
Ì	MAP	PREPARE SUBS	SEQUENT		ĺ
Ì	<			-	ĺ
RELOCATION P	REP	HANDOVER res	sponse	į	İ
<					
FAILURE(Note	1)				ĺ

f) radio resources allocation queued. Later unsuccessful radio resources allocation:

RNS-A	3G-MSC-B	MSC-A	BSS-B
		QUEUING INDICA	ATION
		<	
	MAP PREPARE SUBSEQ	UENT	
	<	·	
	HANDOVER respon		
		HANDOVER FAILU	JRE
		<	
	MAP FORWARD ACCESS	1 9	
	<	·	
RELOCATION F	PREP SIGNALLING requ	lest	
<			
FAILURE(Note	e 1)		

Figure 29: Signalling for Subsequent Inter-MSC Handover back to MSC-A execution (Negative outcome)

NOTE 1: Possible rejection of the handover because of the negative outcome of MAP or BSSMAP procedure.




Figure 30: Signalling for Subsequent Inter-MSC Handover back to MSC-A completion (Successful completion of the procedure)



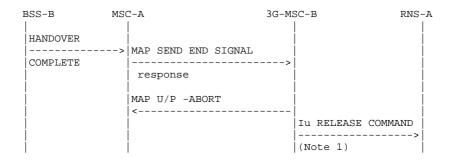


Figure 31: Signalling for Subsequent Inter-MSC Handover back to MSC-A completion (Unsuccessful completion of the procedure)

NOTE 1: Abnormal end of the procedure which triggers the clearing of all resources in 3G-MSC-B.

The interworking between Prepare Subsequent Handover and RELOCATION REQUIRED is as follows:

	25.413			29.0	02	Note
Forward Message	 REL. REQUIRED 	MAP	PREPARE	SUBSEQUE request	ENT HANDOVE	 R
				-target -target(-AN-APDU		
					ER REQUEST)	
	 RANAP informa elemen			BSSMAP i eleme	information ents:	
	 MS Classmark : Source Id Target Id	2			d (serving) d (target)	
	Cause MS Classmark 	3		Cause CM3		1
				fo stored /by 3G-MS Message Channel	е Туре	
				Speech Priorit	version y erence Band	
	+					-+
	RELOCATION CMD	. MAP	1	response -AN-APDU(QUEUING or HANDC ACKNOWLE	INDICATION	2
	RANAP informa elemen	tion	1	response -AN-APDU(QUEUING or HAND(ACKNOWLE HANDOVEF	INDICATION OVER REQUES EDGE or R FAILURE) Lnformation	2 T
	 RANAP informa	tion ts:	1	response -AN-APDU(QUEUING or HANDO ACKNOWLE HANDOVEE BSSMAP	INDICATION OVER REQUES EDGE or & FAILURE) Information ents:	2 T
result	 RANAP informa elemen	tion ts: h	 MAJ	response -AN-APDU(QUEUING or HANDO ACKNOWLE HANDOVEF BSSMAP i eleme L3 infor	INDICATION OVER REQUES EDGE or R FAILURE) Information ents: cmation E SUBSEQUEN	2 T
result Jegative result	RANAP informa elemen L3 information REL. PREP. FA	tion ts: n ILURE	 MAI HAI	response -AN-APDU(QUEUING or HANDO ACKNOWLH HANDOVEF BSSMAP i eleme L3 infor	INDICATION OVER REQUES EDGE or FAILURE) Information ents: rmation E SUBSEQUEN Esponse	2 T
Juknown	RANAP informa elemen L3 information REL. PREP. FA	tion ts: n ILURE ilure in	MAI HAI n Target	response -AN-APDU(QUEUING or HANDO ACKNOWLH HANDOVEF BSSMAP i eleme L3 infor	INDICATION VER REQUES EDGE or R FAILURE) Information ents: rmation E SUBSEQUEN esponse or Target S or Target S	2 T
Vegative result Jnknown	RANAP informa elemen L3 information REL. PREP. FA Relocation Fa Relocation Fa	tion ts: n ILURE ilure i: ilure i:	MAI HAI n Target n Target	response -AN-APDU(QUEUING or HANDO ACKNOWLE HANDOVEF BSSMAP i eleme L3 infor	INDICATION VER REQUES EDGE or R FAILURE) Information ents: rmation E SUBSEQUEN esponse or Target S or Target S Failure	2 T
Juppect	RANAP informa elemen L3 information REL. PREP. FA Relocation Fa Relocation Fa Relocation Fa Relocation Fa	tion ts: n ILURE ilure i: ilure i:	MAI HAI n Target n Target	response -AN-APDU(QUEUING or HANDO ACKNOWLH HANDOVEF BSSMAP i eleme L3 infor P PREPARE NDOVER re CN/RNC of CN/RNC of	INDICATION OVER REQUES EDGE or & FAILURE) information ents: cmation E SUBSEQUEN esponse or Target S or Target S Failure or Target S	2 T
Vegative result Jnknown Subseque	RANAP informa elemen L3 information REL. PREP. FA Relocation Fa Relocation Fa Relocation Fa Relocation Fa	tion ts: n ILURE ilure i: ilure i: ilure i:	MAI HAI n Target n Target	response -AN-APDU(QUEUING or HANDO ACKNOWLH HANDOVEF BSSMAP i eleme L3 infor P PREPARE NDOVER re CN/RNC of CN/RNC of	INDICATION OVER REQUES EDGE or & FAILURE) information ents: cmation E SUBSEQUEN esponse or Target S or Target S Failure or Target S	2 T

NOTE 1: The mapping of cause code values between BSSMAP and RANAP is FFS.

NOTE 2: The response to the Prepare-Subsequent-Handover request can include in its AN-APDU parameter, identifying the GSM 08.06 protocol, a BSSMAP QUEUING INDICATION, or a BSSMAP HANDOVER REQUEST ACKNOWLEDGE or a BSSMAP HANDOVER FAILURE.


In the first case, 3G-MSC-B shall wait for the radio resources allocation response from MSC-A, transmitted to 3G-MSC-B as described in subclause 4.5.4.


In the second case, the positive result triggers in 3GMSC-B the sending on Iu-Interface of the RELOCATION COMMAND.

In the third case, the positive result triggers in 3G-MSC-B the sending of the RELOCATION PREPARATION FAILURE.

NOTE 3: The possible sending of the RELOCATION PREPARATION FAILURE message is described in 3GPP TS 25.413.

The interworking between Send End Signal Result and HANDOVER COMPLETE in MSC-A is as follows:

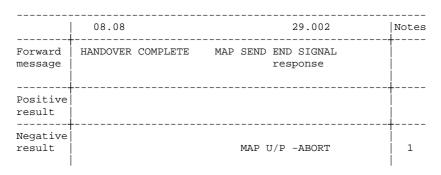



4.6.3 Subsequent Inter-MSC Handover to third MSC


When a Mobile Station is being handed over to a third MSC, the procedure (described in 3GPP TS 23.009) does require one specific interworking case in MSC-A between E-Interface from 3G-MSC-B and E-Interface from MSC-B' other than the combination of the ones described in subclauses 4.6.1 and 4.6.2.

RNS-A	3G-MSC-B	MSC-A	MSC-B'
 RELOCATION		UENT MAP PREP. HANDOVER	>

Figure 32: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') initiation

Possible Positive outcomes:

a) successful radio resources allocation:

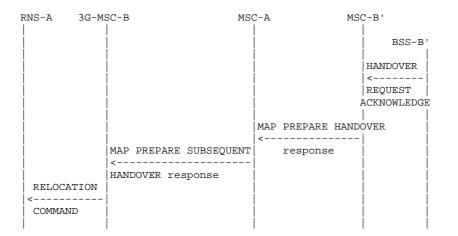

b) radio resources allocation queued and successful handover number allocation, if performed. Later successful radio resources allocation indication:

RNS-A	3G-M	SC-B	MS	C-A	MS	С-В'
						BSS-B'
						QUEUING
						INDICAT.
				 MAP PREPARE H.		 OVER
		 MAP PREPARE SUBSEQU	ENT	< response		
		HANDOVER response				
						HANDOVER
					i	< REQUEST ACKNOWLEDGE
				 MAP PROCESS A	CCE	 SS
		MAP FORWARD ACCESS		< SIGNALLING re	que	st
		CICNALLING regulat				
RELOCA	TION	SIGNALLING request				
<						
COMMAN	ע					

Figure 33: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') execution (Positive outcome)

Possible Negative outcomes:

c) user error detected, or component rejection or dialogue abortion performed by MSC-B':

MSC-A MSC-B' RNS-A 3G-MSC-B BSS-B' MAP PREPARE HANDOVER |response negative result MAP CLOSE <-----MAP U/P -ABORT MAP PREPARE SUBSEQUENT <-----HANDOVER response negative RELOCATION |result <----PREPARATION FAILURE (Note 1)

d) radio resources allocation failure:

RNS-A	3G-MSC-B	MSC-A	MSC-B'
			BSS-B'
			HANDOVER
		l l	<
İ		ĺ	FAILURE
i	İ	i	i i
İ	İ	MAP PRE	PARE HANDOVER
İ		<	
İ	MAP PREPARE S	SUBSEQUENT respon	se
İ	<		i i
ĺ	HANDOVER resp	ponse	i i
RELOCATIO	ON	Í	i i
<		l l	
PREPARATI	ION	ĺ	i i
FAILURE		ĺ	i i
(Note 1)		ĺ	İ İ

e) radio resources allocation queued and successful handover number allocation (if performed). Later unsuccessful radio resources allocation:

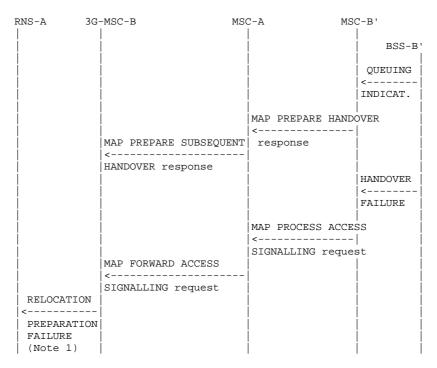


Figure 34: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') execution (Negative outcome)

NOTE 1: Possible rejection of the handover because of the negative outcome of MAP or BSSMAP procedure. Positive outcome:

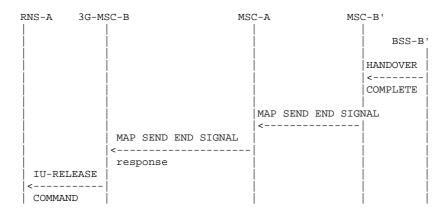


Figure 35: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') completion (Successful completion of the procedure)

Negative outcome:


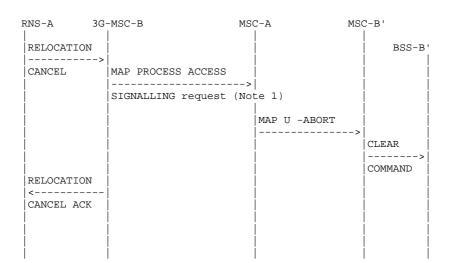


Figure 36: Signalling for Subsequent Inter-MSC Handover to third MSC (MSC-B') completion (Unsuccessful completion of the procedure)

NOTE 1: Specific interworking case detailed below.

The specific interworking case in MSC-A compared to the subclauses 4.5.1 and 4.5.2 occurs between HANDOVER FAILURE encapsulated in a Process Signalling from 3G-MSC-B and the abortion of the dialogue with MSC-B' in the case of a reversion to old channel of the MS:

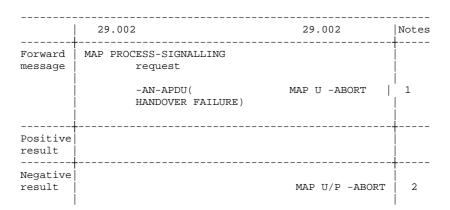

NOTE 1: The abortion of the dialogue triggers in MSC-B' the clearing of the circuit connection with MSC-A, if any, and of the Resources between MSC-B' and BSS-B'.The abortion of the dialogue ends the handover procedure with MSC-B'.

NOTE 2: The abortion of the dialogue ends the handover procedure with 3G-MSC-B.

4.6.4 BSSAP Messages transfer on E-Interface

The handling is described in chapter 4.5.4.

4.6.5 Processing in MSC-B, and information transfer on E-interface

The handling is described in chapter 4.5.5.

4.6.6 Cause Code Mapping

When a Mobile Station is handed over between UMTS and GSM, a mapping of the cause codes used in the RANAP and the BSSMAP protocols is needed. The mapping described here is applicable to the BSSMAP protocol even when used inside MAP in the E-interface.

The mapping between the cause codes received in RANAP Relocation Required and the cause codes sent in BSSMAP Handover Request is as follows:

25.413	08.08	Notes
RELOCATION REQUIRED	HANDOVER REQUEST	
-Time critical relocation	-'uplink quality'	
-Resource optimisation relocation	-Traffic	
-Relocation desirable for radio reasons	-Better cell	
-Directed retry	-Directed retry	İ
-Any other value	-Better cell	

The mapping between the cause codes received in RANAP Relocation Cancel and the cause codes sent in BSSMAP Clear Command is as follows:

25.413	08.08	Notes
RELOCATION CANCEL	CLEAR COMMAND	
-Trelocprepexpiry	-Radio interface failure, reversion to old channel	
-Interaction with other procedure	-Radio interface failure, reversion to old channel	
-Any other value	-Radio interface failure, reversion to old channel	

3GPP TS 29.010 version 3.12.0 Release 1999

58

The mapping between the cause codes received in BSSMAP Handover Failure and the cause codes sent in RANAP Relocation Preparation Failure is as follows:

08.08	25.413	Notes
HANDOVER FAILURE	RELOCATION PREP. FAILURE	-
-Ciphering algorithm not supported	-Requested ciphering and/or integrity protection is not supported	
-Circuit pool mismatch		1
-Equipment failure	-Relocation failure in Target CN/RNC or target system	
-Invalid message contents -No radio resource available	- Abstract Syntax Error -Relocation failure in Target CN/RNC or target system	
-O and M intervention -Radio interface failure, reversion to old channel	-O and M intervention	2
-Radio interface message failure	-Relocation failure in Target CN/RNC or target system	
-Requested speech version unavailable	-Relocation failure in Target CN/RNC or target system	
-Requested terrestrial resource unavailable	-Relocation failure in Target CN/RNC or target system	
-Requested transcoding/rate adaption unavailable	-Relocation failure in Target CN/RNC or target system	
-Switch circuit pool -Terrestrial circuit already allocated	-Relocation failure in Target CN/RNC or target system	1
-Any other value	-Relocation failure in Target CN/RNC or target system	

NOTE 1: Cause code not used at inter-system handover.

NOTE 2: Cause code not applicable to this traffic case.

4.7 Inter-MSC Handover (GSM to UMTS)

The general principles of the handover procedures are given in 3GPP TS 23.009. 3GPP TS 29.010 gives the necessary information for interworking between the 3GPP TS 25.413 RANAP protocol, GSM handover procedures and the 3GPP TS 29.002 MAP protocol. The RANAP protocol is used between the RNS and the 3G_MSC.

The following four principles apply for the Inter-MSC handover GSM to UMTS:

The BSSMAP parameters required for Inter-MSC handover GSM to UMTS are generated as in GSM.

Received RANAP parameters, e.g. cause code or transparent container, are mapped to the appropriate BSSMAP parameters, e.g. cause code or Handover command.

The RANAP parameters required for Inter-MSC handover GSM to UMTS are generated from received or stored GSM parameters.

4.7.1 Basic Inter-MSC Handover

When a Mobile Station is handed over between two MSCs, the establishment of a connection between them (described in 3GPP TS 23.009) requires interworking between A-Interface, Iu-Interface and E-Interface.

The signalling at initiation, execution and completion of the Basic Inter-MSC handover procedure is shown in figures 37 to 42 with both possible positive or negative outcomes.

Additionally figure 37b shows the possible interworking when the trace related message is transparently transferred on the E-Interface at Basic Inter-MSC Handover initiation.

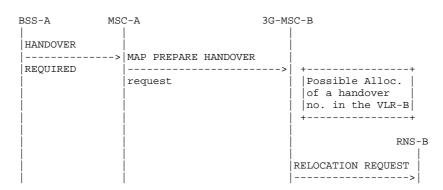


Figure 37a: Signalling for Basic Inter-MSC Handover initiation (no trace related messages transferred)

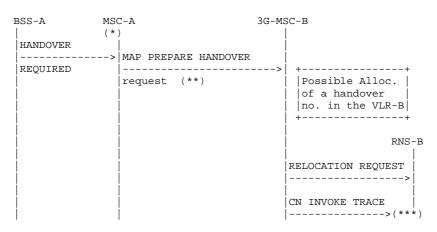


Figure 37b: Signalling for Basic Inter-MSC Handover initiation (CN invoke trace message transferred)

- (*): Tracing invocation has been received from VLR.
- (**): In that case, HANDOVER REQUEST and MSC INVOKE TRACE messages are included within the AN-apdu parameter.
- (***): CN INVOKE TRACE is forwarded to RNS-B if supported by 3G_MSC-B.

Possible Positive outcomes: successful radio resources allocation and handover number allocation (if performed):

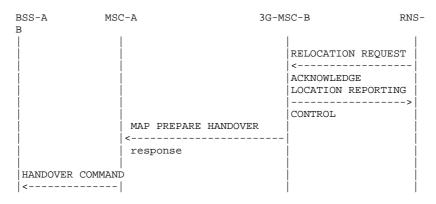



Figure 38: Signalling for Basic Inter-MSC Handover execution (Positive outcome)

Possible Negative outcomes:

a) user error detected, or handover number allocation unsuccessful (if performed), or component rejection or dialogue abortion performed by 3G_MSC-B:

BSS-A	MSC-A	3G-MSC-B	RNS-
В			
Ì	MAP PREPARI	E HANDOVER response	ĺ
ĺ	negative re	esult, MAP CLOSE	
Ì	<		ĺ
	MAP U/P-AB	ORT	
	ĺ		
HANDOVER R	EQUIRED		
<			
REJECT (No	te 1)		

b) radio resources allocation failure:

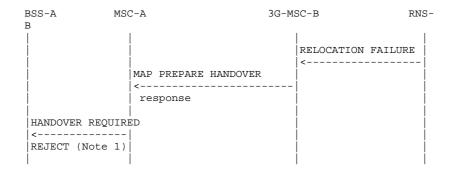

c) unsuccessful handover execution (Reversion to the old radio resources):


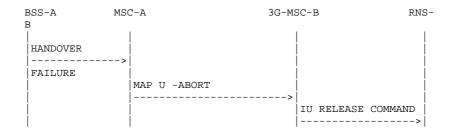


Figure 39: Signalling for Basic Inter-MSC Handover execution (Negative outcomes)

NOTE 1: Possible rejection of the handover because of the negative outcome of MAP or RANAP procedure.



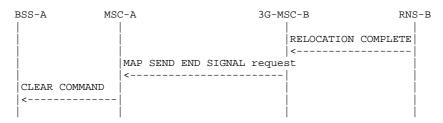

Positive outcome:

BSS-A	MSC-A	3G-M	SC-B	RNS-B
	 MAP_SEND_] 	END SIGNAL		
	response		IU RELEASE	COMMAND
			(Note 2)	



Negative outcome:




Figure 42: Signalling for Basic Inter-MSC Handover completion (Negative outcome)

NOTE 2: From interworking between MAP and RANAP point of view, when the call is released.




Figure 42a: Signalling for updating of anchor MSC after change of location in RNS

The handover procedure is normally triggered by BSS-A by sending a HANDOVER REQUIRED message on A-Interface to MSC-A. The invocation of the Basic Inter-MSC handover procedure is performed and controlled by MSC-A. The sending of the MAP Prepare-Handover request to 3G_MSC-B is triggered in MSC-A upon receipt of the HANDOVER REQUIRED message. The identity of the target RNC where the call is to be handed over in 3G_MSC-B area, provided in the HANDOVER REQUIRED message in the information element Cell Identifier List (Preferred), is mapped to the target RNC Id MAP parameter and the HANDOVER REQUEST message is encapsulated in the an-APDU MAP parameter of the Prepare-Handover MAP request. 3G_MSC-B can invoke another operation towards the VLR-B (allocation of the handover number described in 3GPP TS 29.002).

Additionally, if tracing activity has been invoked, the trace related message can be transferred on the E-Interface encapsulated in the an-APDU MAP parameter of the Prepare-Handover Request. If transferred, one complete trace related message at a time shall be included in the an-APDU MAP parameter after the HANDOVER REQUEST message. Note: UMTS supports only CN initiated tracing.

The interworking between Prepare Handover and HANDOVER REQUIRED is as follows:

	08.08	29.002	Notes
Forward message	HANDOVER REQUIRED MAP	PREPARE HANDOVER request	+
	BSSMAP information elements	-ho-NumberNotRequired -target RNC Id	1
	elements	-IMSI -Integrity protection info	 2
		-Encryption info -an-APDU(HANDOVER REOUEST,	 3
		MSC INVOKE TRACE)	4
Positive result	МАР	PREPARE HANDOVER response	 5
		-handover number -an-APDU(HANDOVER REQUEST ACKNOWLEDGE or HANDOVER FAILURE)	
Negative result	HANDOVER REQUIRED REJEC	T MAP PREPARE HANDOVER	6
icbuit	equipment failure equipment failure	System Failure No Handover Number available	
	equipment failure equipment failure	UnexpectedDataValue Data Missing	
	equipment failure equipment failure	MAP CLOSE MAP U/P -ABORT	

- NOTE 1: The ho-NumberNotRequired parameter is included by MSC-A, when MSC-A decides not to use any circuit connection with 3G_MSC-B. No handover number shall be present in the positive result. Any negative response from 3G_MSC-B shall not be due to handover number allocation problem.
- NOTE 2: Integrity protection information, encryption information and IMSI parameters are included by MSC-A, only when the MSC-A uses 29.002 as per release 99. These IEs are not included if the MSC-A is R98 or earlier.

- NOTE 3: The process performed on the BSSMAP information elements received in the HANDOVER REQUIRED message is described in the GSM Recommendation 08.08.
- NOTE 4: The process performed on the BSSMAP information elements received in the MSC INVOKE TRACE message is described in subclause 4.5.5.6.
- NOTE 5: The response to the Prepare-Handover request can include in its an-APDU parameter, identifying the GSM 08.06 protocol, either a BSSMAP HANDOVER REQUEST ACKNOWLEDGE or a BSSMAP HANDOVER FAILURE.

In the first case, the positive result triggers in MSC-A the sending on A-Interface of the HANDOVER COMMAND.

In the second case, the positive result triggers in MSC-A optionally the sending of the HANDOVER REQUIRED REJECT.

(The possible sending of the HANDOVER REQUIRED REJECT message upon receipt of the HANDOVER FAILURE is out of the scope of 3GPP TS 29.010 and lies in 3GPP TS 48.008).

NOTE 6: The possible sending of the HANDOVER REQUIRED REJECT message is described in 3GPP TS 48.008.

The interworking between Prepare Handover and RELOCATION REQUEST in 3G_MSC-B is as follows:

	29.002	25.413	Notes
Forward message	MAP PREPARE HANDOVER request -ho-NumberNotRequired -target RNC Id -IMSI -Integrity protection i -Encryption info -RANAP service handover -an-APDU(HANDOVER REQUEST, MSC INVOKE TRACE)	nfo	1
	BSSMAP information elements: Channel Type Cause sRNC to tRNC containe	elements: RAB parameters Cause r sRNC to tRNC container	
		info stored/generated in/by 3G_MSC-B: CN domain indicator	
Positive result	MAP PREPARE HANDOVER response -an-APDU(HANDOVER REQUEST ACK)	RELOCATION REQUEST ACK	+
	BSSMAP information elements:	RANAP information elements:	
	Layer 3 info	tRNC to sRNC container	
Negative result	MAP PREPARE HANDOVER response -an-APDU(HANDOVER FAILURE)	RELOCATION FAILURE	

NOTE 1: Integrity protection information, encryption information, IMSI and RANAP service handover parameters are included by MSC-A, only when the MSC-A uses 29.002 as per release 99. These IEs are not included if the MSC-A is R98 or earlier.

The interworking between Send End Signal and RELOCATION COMPLETE in 3G_MSC-B is as follows:

	25.413		29.002	Notes
Forward message	RELOCATION COMPLETE	MAP SEND	END SIGNAL request	
			-an-APDU(HANDOVER COMPLETE)	
Positive result	IU RELEASE COMMAND -Normal release	MAP SEND	END SIGNAL response	
Negative result	IU RELEASE COMMAND -Normal release -Normal release		MAP CLOSE MAP U/P -ABORT	2

- NOTE 1: The positive empty result triggers the clearing of the Radio Resources on the Iu-Interface and the release of the SCCP connection between 3G_MSC-B and RNS-B. If a circuit connection is used between MSC-A and 3G_MSC-B, the 'Normal release' clearing cause shall only be given to RNS-B when 3G_MSC-B has received a clearing indication on its circuit connection with MSC-A.
- NOTE 2: The abortion of the dialogue or the rejection of the component triggers in 3G_MSC-B the clearing of its circuit connection with MSC-A, if any, of the Radio Resources on the Iu-Interface and the release of the SCCP connection between 3G_MSC-B and RNS-B.

The interworking between Send End Signal and CLEAR COMMAND in MSC-A is as follows:

	29.002		08.08	Notes
Forward message	MAP SEND request	END SIGNAL	CLEAR COMMAND	
		-an-APDU(HANDOVER COMPLETE)	- Handover Successful	
Positive result				
Negative result				

The interworking between HANDOVER FAILURE in case of reversion to old channel of the MS and User Abort in MSC-A is as follows:

	08.08	29.002	Notes
Forward message	HANDOVER FAILURE	MAP U -ABORT	
	channel		
Positive result			
Negative result			

4.7.2 Subsequent Inter-MSC Handover from MSC-B back to 3G_MSC-A

When a Mobile Station is being handed over back to 3G_MSC-A, the procedure (described in 3GPP TS 23.009) requires interworking between A-Interface, Iu-Interface and E-Interface.

The signalling at initiation, execution and completion of the Subsequent Inter-MSC handover procedure is shown in figures 43 to 47.

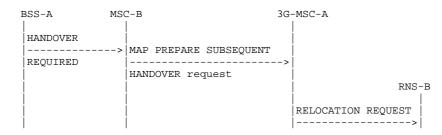


Figure 43: Signalling for Subsequent Inter-MSC Handover back to 3G_MSC-A initiation

Possible Positive outcomes: successful radio resources allocation:

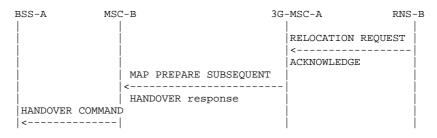


Figure 44: Signalling for Subsequent Inter-MSC Handover back to 3G_MSC-A execution (Positive outcome)

Possible Negative outcomes:

a) user error detected, or component rejection or dialogue abortion performed by 3G_MSC-A:

BSS-A	MSC-B	3G-MSC-A	RNS-B
	MAP PREPARE	E SUBSEQUENT HANDOVER	
	<		
HANDOVER	REQUIRED response	e negative result	
<			
REJECT (1	Note 1)		
		ĺ	ĺ

b) component rejection or dialogue abortion performed by 3G_MSC-A:

BSS-A	MSC-B		3G-M	SC-A	RNS-B
	MAP	CLOSE, MAP U	/P ABORT		
	<				
CLEAR	COMMAND				
<					

c) radio resources allocation failure:

BSS-A	MSC-B			3G-	-MSC-A	RNS-B
					RELOCATION	FAILURE
	1				<	
İ	MAP	PREPARE	SUBSEQUENT		Ì	Í
İ	<				İ	i
HANDOVER	REQUIRED	HANDOVE	R response		İ	İ
<						
REJECT (Note 1)				ĺ	Ì

d) unsuccessful relocation execution (reversion to the old radio resources):

BSS-A N	MSC-B	3G-MSC-A	RNS-B
HANDOVER			
;	>		
FAILURE	MAP PROCESS ACCESS		
		>	
	SIGNALLING request	t IU RELEASE	COMMAND
			>
1		1	ĺ

Figure 45: Signalling for Subsequent Inter-MSC Handover back to 3G_MSC-A execution (Negative outcome)

NOTE 1: Possible rejection of the handover because of the negative outcome of MAP or BSSMAP procedure.




Figure 46: Signalling for Subsequent Inter-MSC Handover back to 3G_MSC-A completion (Successful completion of the procedure)

NOTE: Positive outcome case shown in figure 41.





Figure 47: Signalling for Subsequent Inter-MSC Handover back to 3G_MSC-A completion (Unsuccessful completion of the procedure)



The interworking between Prepare Subsequent Handover and HANDOVER REQUIRED is as follows:

	08.08	29.002	Notes
Forward message	HANDOVER REQUIRED MAP PRE	PARE SUBSEQUENT HANDOVER request	
	BSSMAP information elements	-target MSC number -target RNC Id -an-APDU(HANDOVER REQUEST)	
Positive result	HANDOVER REQUIRED MAP PRE	PARE SUBSEQUENT HANDOVER response -an-APDU(HANDOVER REQUEST ACKNOWLEDGE or HANDOVER FAILURE)	2
Negative result	HANDOVER REQUIRED REJECT equipment failure equipment failure equipment failure cLEAR COMMAND equipment failure equipment failure	MAP PREPARE SUBSEQUENT HANDOVER response Unknown MSC Subsequent Handover Failure UnexpectedDataValue Data Missing MAP CLOSE MAP U/P -ABORT	

- NOTE 1: The processing performed on the BSSMAP information elements received in the HANDOVER REQUIRED message is out of the scope of the present document. The target MSC number is provided to 3G_MSC-A by MSC-B based on the information received from RNS-B.
- NOTE 2: The response to the Prepare-Subsequent-Handover request can include in its an-APDU parameter, identifying the GSM 08.06 protocol, either a BSSMAP HANDOVER REQUEST ACKNOWLEDGE or a BSSMAP HANDOVER FAILURE.

In the first case, the positive result triggers in MSC-B the sending on A-Interface of the HANDOVER COMMAND.

In the second case, the positive result triggers in MSC-B optionally the sending of the HANDOVER REQUIRED REJECT.

(The possible sending of the HANDOVER REQUIRED REJECT message upon receipt of the HANDOVER FAILURE is out of the scope of 3GPP TS 29.010 and lies in 3GPP TS 48.008).

NOTE 3: The possible sending of the HANDOVER REQUIRED REJECT message is described in 3GPP TS 48.008.

The interworking between Prepare Subsequent Handover and RELOCATION REQUEST in 3G_MSC-A is as follows:

	29.002	25.413	Notes
Forward message	MAP PREPARE SUB HANDOVER request -ho-NumberNotRequired -target RNC ID -an-APDU(HANDOVER REQUEST, MSC INVOKE TRACE)	R RELOCATION REQUEST	
	BSSMAP information elements:	RANAP information elements:	
	Cause sRNC to tRNC container	Cause sRNC to tRNC container	
		info stored/generated in/by 3G_MSC-A: CN domain indicator RAB parameters Permanent NAS UE id Encryption info Integrity protection info	
Positive result	MAP PREPARE SUB HANDOVEN response -an-APDU(HANDOVER REQUEST ACK)	R RELOCATION REQUEST ACK	+
	BSSMAP information elements:	RANAP information elements:	
	Layer 3 info	tRNC to sRNC container	
Negative result	MAP SUB PREPARE HANDOVEN response -an-APDU(HANDOVER FAILURE)	R RELOCATION FAILURE	T

The interworking between HANDOVER FAILURE and MAP Process Signalling Request in 3G_MSC-B is as follows:

	08.08		29.002	Notes
Forward message	HANDOVER	FAILURE	MAP PROCESS-SIGNALLI request -an-APDU(HANDOVER FAILURE)	NG
Positive result				
Negative result				

The interworking between Send End Signal Response and RELOCATION COMPLETE in 3G_MSC-A is as follows:

	25.413			29.002	Notes
Forward message	RELOCATION (COMPLETE MAE	> SEND	END SIGNAL response	
Positive result					
Negative result			MAP	u/p -abort	 1

NOTE 1: The abortion of the dialogue ends the handover procedure with MSC-B.

4.7.3 Subsequent Inter-MSC Handover to third MSC

When a Mobile Station is being handed over to a third MSC, the procedure (described in 3GPP TS 23.009) does require one specific interworking case in MSC-A (figure 49) between E-Interface from MSC-B and E-Interface from 3G_MSC-B' other than the combination of the ones described in the subclause 4.5.1 and 4.7.2.

BSS-A	MSC-B	MSC-A	3G-1	MSC-B'
HANDOVER REQUIRED	> MAP PREPARE SUBSEQU HANDOVER request	> MAP PREE 	PARE > ? request	++ Possib. Alloc. of ho. number VLR-B ++ RNS-B' RELOCATION > REQUEST
		1		

Figure 45: Signalling for Subsequent Inter-MSC Handover to third MSC (3G_MSC-B') initiation

Possible Positive outcomes: successful radio resources allocation:

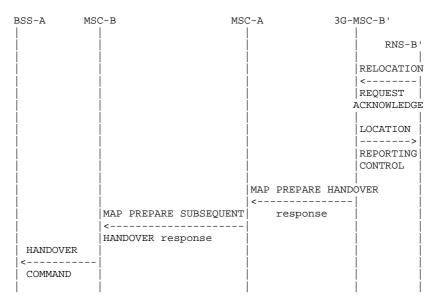


Figure 46: Signalling for Subsequent Inter-MSC Handover to third MSC (3G_MSC-B') execution (Positive outcome)

Possible Negative outcomes:

a) user error detected, or component rejection or dialogue abortion performed by MSC-B':

BSS-A	MSC-B	MSC-A	3G-MSC-B'
			RNS-B'
		MAP PREF	ARE HANDOVER
		response	negative result
		MAP CLOS	E
İ		<	i i
İ		MAP U/P	-ABORT
İ	MAP PREPARE	SUBSEQUENT	i i
	<		
	HANDOVER res	ponse negative	
HANDOVER	result		
<			
REQUIRED			
REJECT		ĺ	1 1
(Note 1)	İ	ĺ	i i

b) radio resources allocation failure:

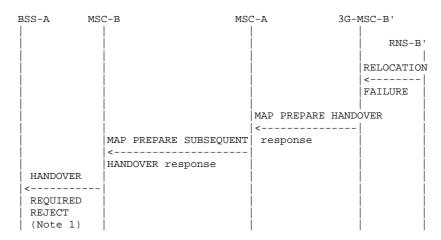


Figure 47: Signalling for Subsequent Inter-MSC Handover to third MSC (3G_MSC-B') execution (Negative outcome)

NOTE 1: Possible rejection of the handover because of the negative outcome of MAP or BSSMAP procedure.

Positive outcome:

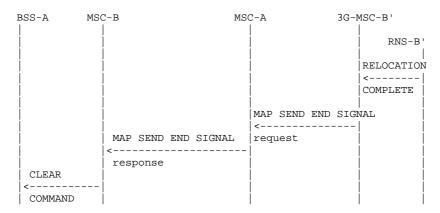


Figure 48: Signalling for Subsequent Inter-MSC Handover to third MSC (3G_MSC-B') completion (Successful completion of the procedure)

Negative outcome:

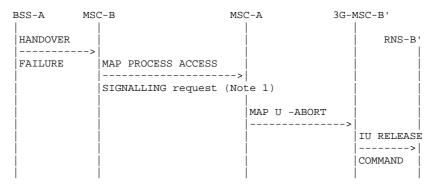



Figure 49: Signalling for Subsequent Inter-MSC Handover to third MSC (3G_MSC-B') completion (Unsuccessful completion of the procedure)






Figure yy: Signalling for updating of anchor MSC after change of location in RNS

The specific interworking case in MSC-A compared to the subclauses 4.5.1 and 4.7.2 occurs between HANDOVER FAILURE encapsulated in a Process Access Signalling from MSC-B and the abortion of the dialogue with 3G_MSC-B' in the case of a reversion to old channel of the MS:

	29.002	29.002	Notes
Forward message	MAP PROCESS-SIGNALLING request -an-APDU(HANDOVER FAILURE)	MAP U -ABORT	1
Positive result			
Negative result		MAP U/P -ABORT	2

NOTE 1: The abortion of the dialogue triggers in 3G_MSC-B' the clearing of the circuit connection with MSC-A, if any, and of the Resources between 3G_MSC-B' and RNS-B'. The abortion of the dialogue ends the handover procedure with 3G_MSC-B'.

NOTE 2: The abortion of the dialogue ends the handover procedure with MSC-B.

4.7.4 BSSAP Messages transfer on E-Interface

The handling is described in chapter 4.5.4, additional cases are described in this chapter.

4.7.4.1 Assignment

The interworking between the BSSMAP assignment messages in MAP and the RANAP RAB assignment messages is as follows:

	29.002	25.413	Notes
Forward message	MAP PREPARE HANDOVER request -RANAP service handover -an-APDU(ASSIGNMENT REQUEST)	RAB ASSIGNMENT REQ Service handover	
	BSSMAP information elements:	RANAP information elements:	
	Channel Type	RAB parameters	
Positive result	MAP PREPARE HANDOVER request -an-APDU(ASSIGNMENT COMPLETE or ASSIGNMENT FAILURE) BSSMAP information elements: Cause	RESPONSE (positive result)	1
Negative result		MAP U/P -ABORT	+

4.7.4.2 Cipher Mode Control

The interworking between the BSSMAP cipher mode messages in MAP and the RANAP security mode messages is as follows:

	29.002	25.413	Notes
Forward message	MAP FORWARD ACCESS SIGN. request -an-APDU(CIPHER MODE CMD)	SECURITY MODE CMD	
	BSSMAP information elements:	RANAP information elements:	
	Encryption information	Integrity protection info Encryption info	
Positive result	MAP PROCESS ACCESS SIGN. request -an-APDU(CIPHER MODE COMPLETE or CIPHER MODE REJECT)	COMPLETE	+
	BSSMAP information elements:	RANAP information elements:	
	Encryption information	Integrity protection info Encryption info	
	Cause	Cause	1
Negative result		MAP U/P -ABORT	

4.7.4.3 Location Reporting Control

The interworking between the RANAP location report message and the BSSMAP handover performed message in MAP is as follows:

	25.413		29.002	Notes
Forward message	LOCATION REPORT	MAP	PROC. ACC. SIGNALLING	
-			-an-APDU(HANDOVER PERFORMED)	
	RANAP information elements:		BSSMAP information elements:	
	Area identity (SAI) Cause		Cell identifier Cause	
Positive result				
Negative result				

4.7.5 Processing in 3G_MSC-B, and information transfer on E-interface

The following parameters require processing (e.g. to store the parameter, to internally generate the parameter) in MSC-B. The relevant BSSMAP procedures are mentioned to ease the comprehension, their detailed description is the scope of 3GPP TS 48.008. Each BSSMAP message listed in 3GPP TS 49.008 being transferred on E-interface shall use the mechanisms given in subclause 4.5.4 and is described in 3GPP TS 48.008.

4.7.5.1 Encryption Information

The list of GSM algorithms, the ciphering key and the chosen algorithm shall be stored by 3G_MSC-B and used for generating the UMTS parameters Encryption Information and Integrity Protection Information if they are not received in MAP Prepare Handover Request (the generation of the UMTS parameters from the GSM parameters is described in TS 33.102).

Transfer of Information:

If ciphering has not been performed before Inter-MSC Handover, this will be controlled by MSC-A after the completion of Inter-MSC Handover.

Ciphering control towards 3G_MSC-B:

If Ciphering has been performed before Inter-MSC Handover:

- in the Handover Request BSSMAP message (information included).

The Handover Request Acknowledge should in this case NOT contain the indication of the chosen algorithm.

If Ciphering has NOT been performed before Inter-MSC Handover:

in the Cipher Mode Command procedure between MSC-A and 3G_MSC-B.

4.7.5.2 Channel Type

The Channel Type shall be stored by 3G_MSC-B and used for generating RAB parameters.

Transfer of Information:

Independently of the type of resource (Signalling only or traffic channel) assigned to the MS, the Channel Type Information is transferred to 3G_MSC-B in:

- the Handover Request BSSMAP message.

Chosen Channel and/or Speech Version shall NOT be reported back to MSC-A in the Handover Request Acknowledge

If a new type of resource is to be assigned after Inter-MSC Handover, this can be made with:

- the BSSMAP Assignment procedure between MSC-A and 3G_MSC-B.

4.7.5.3 Classmark

This information shall be stored by 3G_MSC-B and might be received from MSC-A.

Transfer of Information due to Classmark received from MSC-A:

This information shall be stored by 3G_MSC-B and is received:

- in the Handover Request BSSMAP message.

If a new type of resource is to be assigned after Inter-MSC Handover, Classmark Information MAY be included:

- in the BSSMAP Assignment procedure.

4.7.5.4 Priority

The parameter shall be stored by 3G_MSC-B and used for generating RAB parameters. It is received as detailed below:

Transfer of Information:

Received by 3G_MSC-B from MSC-A in:

- the Handover Request BSSMAP message.

If a change is needed after an Inter-MSC Handover with:

- the BSSMAP Assignment procedure.

4.7.5.5 MSC-Invoke Trace Information Elements

The process to be performed by 3G_MSC-B on the information elements of the MSC Invoke Trace BSSMAP messages is left for further study.

Note that MSC-A does not forward BSC Invoke Trace in case of GSM to UMTS handover.

4.7.5.6 Selected UMTS Algorithm

A sequence of possible encryption and integrity protection algorithms, received from the 3G_MSC-A, can be sent to an RNS in Relocation Request or in Security Mode Command in case of cipher mode setting after inter-MSC handover from GSM to UMTS. The RNS chooses one of the listed algorithms and reports this back to the 3G_MSC in Relocation Request Acknowledge or Security Mode Complete respectively. The MSC-B provides the Selected UMTS algorithm information to the MSC-A. The Selected UMTS algorithms IE in the MAP Process Access Signalling Request and MAP Prepare Handover Response messages refers to the Chosen Integrity Protection Algorithm and Chosen Encryption Algorithm, defined in RANAP specification 3GPP TS 25.413

The selected algorithm shall be stored by 3G_MSC-B, and sent to 3G_MSC-A.

Transfer of Information:

If ciphering has not been performed before Inter-MSC Handover, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Handover.

If Ciphering has been performed before Inter-MSC Handover, Selected UMTS algorithm information is received by 3G_MSC-A from 3G_MSC-B in:

- The Prepare Handover Response MAP message.

If Ciphering has NOT been performed before Inter-MSC Handover, Selected UMTS algorithm information is received by 3G_MSC-A from 3G_MSC-B in:

- The Process Access Signalling Request MAP message.

4.7.5.7 Allowed UMTS Algorithms

In case of GSM-subscriber, the Integrity Protection Information and UMTS Encryption Information are not transferred to the MSC-B during inter-MSC handover from GSM to UMTS. Allowed UMTS algorithms is UMTS information that is required in RANAP Relocation Request and RANAP Security Mode Command, and shall be provided by 3G_MSC-A. 3G_MSC-B needs this information in case of an inter-MSC GSM to UMTS handover and in subsequent security mode setting, after an inter-MSC GSM to UMTS handover. Therefore 3G_MSC-A must provide this information in case of an inter-MSC GSM to UMTS algorithms IE in the MAP Prepare Handover and in the MAP Forward Access Signalling Request messages refers to the Permitted Integrity Protection Algorithms in Integrity Protection Information and Permitted Encryption Algorithms in Encryption Information, defined in RANAP specification 3GPP TS 25.413.

Allowed UMTS algorithms shall be stored by 3G_MSC-B.

Transfer of information:

If ciphering has not been performed before Inter-MSC Handover, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Handover.

Ciphering control towards 3G_MSC-B:

If Ciphering has been performed before Inter-MSC Handover:

- The Prepare Handover Request MAP message.

If Ciphering has NOT been performed before Inter-MSC Handover:

- The Forward Access Signalling Request MAP message.

4.7.5.8 BSSMAP Service Handover

This information shall be stored by 3G_MSC-B and sent to a BSS in Handover Request, when 3G_MSC-B performs handover to GSM.

Transfer of information:

The BSSMAP Service Handover information is transferred to 3G_MSC-B in:

- the Handover Request BSSMAP message.

If a new assignment of a TCH after an inter-MSC handover is to be performed, the BSSMAP Service Handover information is transferred to 3G_MSC-B in:

- the BSSMAP Assignment procedure.

4.7.5.9 RANAP Service Handover

This information shall be stored by 3G_MSC-B and sent to an RNS in Relocation Request during the basic inter-MSC handover or when 3G_MSC-B performs a subsequent relocation or handover to UMTS.

Transfer of information:

The RANAP Service Handover information is transferred to 3G_MSC-B in:

- the Prepare Handover Request MAP message.

If a new assignment of a Radio Access Bearer after an inter-MSC handover is to be performed, the information is transferred to 3G_MSC-B in:

- the Forward Access Signalling Request MAP message

and sent by 3G_MSC-B to the RNS in RAB Assignment Request.

4.7.6 Cause Code Mapping

When a Mobile Station is handed over between GSM and UMTS, a mapping of the cause codes used in the BSSMAP and the RANAP protocols is needed. The mapping described here is applicable to the BSSMAP protocol even when used inside MAP in the E-interface.

The mapping between the cause codes received in BSSMAP Handover Required and the cause codes sent in RANAP Relocation Request is as follows:

08.08	25.413	Notes
HANDOVER REQUIRED	RELOCATION REQUEST	T
-Better Cell	-Relocation Desirable for Radio Reasons	
-Directed retry	-Directed retry	İ
-Distance	-Time critical reloc.	İ
-Downlink quality	-Time critical reloc.	ĺ
-Downlink strength	-Time critical reloc.	1
-O and M intervention	-O and M intervention	
-Preemption	-RAB pre-empted	
-Response to MSC invocation	-Network Optimisation	
-Switch circuit pool		1
-Traffic	-Resource Optimisation Relocation	
-Uplink quality	-Time critical reloc.	
-Uplink strength	-Time critical reloc.	
-Any other value	-Relocation Desirable	
	for Radio Reasons	

NOTE 1: Cause code not used at inter-system handover.

The mapping between the cause codes received in BSSMAP Handover Request and the cause codes sent in RANAP Relocation Request is as follows (the mapping is only used for the MAP-E interface):

08.08	25.413	Notes
HANDOVER REQUEST	RELOCATION REQUEST	
-Better Cell	-Relocation Desirable for Radio Reasons	
-Directed retry	- Directed retry	Ì
-Distance	-Time critical reloc.	ĺ
-Downlink quality	-Time critical reloc.	
-Downlink strength	-Time critical reloc.	
-O and M intervention	-O and M intervention	
-Preemption	-RAB pre-empted	
-Response to MSC invocation	-Network Optimisation	
-Switch circuit pool		1
-Traffic	-Resource Optimisation Relocation	
-Uplink quality	-Time critical reloc.	
-Uplink strength	-Time critical reloc.	
-Any other value	-Relocation Desirable for Radio Reasons	

NOTE 1: Cause code not used at inter-system handover.

The mapping between the cause codes received in BSSMAP Handover Failure and the cause codes sent in RANAP Iu Release Command is as follows:

08.08	25.413	Notes
HANDOVER FAILURE	IU RELEASE COMMAND	+
-Ciphering algorithm not supported		2
-Circuit pool mismatch -Equipment failure	-Relocation cancelled	1
-Invalid message contents -No radio resource available	-Abstract Syntax Error	
-No facto resource available -O and M intervention -Radio interface failure, reversion to old channel	-O and M intervention -Relocation cancelled	
-Radio interface message failure	-Relocation cancelled	
-Requested speech version unavailable		2
-Requested terrestrial resource unavailable		2
-Requested transcoding/rate adaption unavailable		2
-Switch circuit pool -Terrestrial circuit already allocated	-Relocation cancelled	1
-Any other value	-Relocation cancelled	

NOTE 1: Cause code not used at inter-system handover.

NOTE 2: Cause code not applicable to this traffic case.

The mapping between the cause codes received in RANAP Relocation Failure and the cause codes sent in BSSMAP Handover Failure is as follows (this mapping is only used for the MAP-E interface):

25.413	08.08	Notes
RELOCATION FAILURE	HANDOVER FAILURE	+
-Any value	-No radio resource available	

The mapping between the cause codes received in RANAP Relocation Failure and the cause codes sent in BSSMAP Handover Request Reject is as follows:

25.413	08.08	Notes
RELOCATION FAILURE	HANDOVER REQUIRED REJECT	- +
-Any value	-No radio resource available	İ

The mapping between the RANAP and the BSSMAP assignment messages is used in the MAP-E interface. RANAP RAB Assignment Response with successful result is mapped to BSSMAP Assignment Complete; RANAP RAB Assignment Response with unsuccessful result is mapped to BSSMAP Assignment Failure. The mapping between the cause codes received in RANAP RAB Assignment Response and the cause codes sent in BSSMAP Assignment Failure is as follows (this mapping is only used for the MAP-E interface):

25.413	08.08	Notes
AB ASSIGNMENT RESPONSE	ASSIGNMENT FAILURE	+
Requested traffic class not	-No radio resource	
available	available	
Invalid RAB parameters value	-Invalid msg. contents	
Requested max bit rate not available	-No radio resource available	
Requested max bit rate for DL not available	-No radio resource available	
Requested max bit rate for UL not available	-No radio resource available	ļ
Requested quaranteed bit rate		
not available	available	1
Requested guaranteed bit rate		
for DL not available	available	
Requested guaranteed bit rate		
for UL not available	available	i
Requested transfer delay not		i
achievable	available	i
Invalid RAB param. combination	n-Invalid msg. contents	i
Condition violation for SDU parameters	-Invalid msg. contents	
Condition violation for traffic handling priority	-Invalid msg. contents	İ
Condition violation for guaranteed bit rate	-Invalid msg. contents	İ
User plane not supported	-No radio resource	İ
	available	i
Iu UP failure	-Equipment failure	İ
Tqueuing expiry	-Radio interface message failure	
Invalid RAB id	-Invalid msg. contents	i
Request superseeded	-No radio resource	İ
	available	1
Relocation triggered	-No radio resource available	
Any other value	-Radio interface message failure	İ

The mapping between the cause codes received in RANAP Location Report and the cause codes sent in BSSMAP Handover Performed is as follows (this mapping is only used for the MAP-E interface):

25.413	08.08	Notes
LOCATION REPORT	HANDOVER PERFORMED	
-User restriction start ind. -User restriction start ind. -Requested report type not supported -Any other value	-O&M intervention -O&M intervention -Better cell	1

NOTE 1: In this case, no Handover Performed is sent.

4.8 Inter-MSC Relocation

The general principles of the relocation procedures are given in Technical Specification TS 23.009. TS 29.010 gives the necessary information for interworking between the TS 25.413 relocation protocol and the TS 29.002 MAP protocol.

For intra UMTS handovers, RANAP is carried over the MAP-E interface instead of BSSAP. Please refer to 3GPP TS 29.108.

4.8.1 Basic Inter-MSC Relocation

When a Mobile Station is relocated between two MSCs, the establishment of a connection between them (described in TS 23.009) requires interworking between Iu-Interface and E-Interface.

The signalling at initiation, execution and completion of the Basic Inter-MSC relocation procedure is shown in figures 50 to 54 with both possible positive or negative outcomes.

Additionally figure 50b shows the possible interworking when trace related messages are transparently transferred on the E-Interface at Basic Inter-MSC Relocation initiation.

RNS-A	3G-MSC-A	3G-MSC-B
RELOCATION	MAP PREPARE HANDOVE	R Possible Alloc. of a relocation no. in the VLR-B ++
		RNS-B
		RELOCATION REQUEST

Figure 50a: Signalling for Basic Inter-MSC Relocation initiation (no trace related messages transferred)

RNS-A	3G-MSC-A	3G-MSC-B
RELOCATION	MAP PREPARE HANDOVER request (**)	> ++ Possible Alloc. of a relocation no. in the VLR-B ++
		RNS-B
		RELOCATION REQUEST
		CN INVOKE TRACE >(***)

Figure 50b: Signalling for Basic Inter-MSC Relocation initiation (CN invoke trace message transferred)

- (*): Tracing invocation has been received from VLR.
- (**): In that case, RELOCATION REQUEST and CN INVOKE TRACE messages are included within the AN-apdu parameter.
- (***): CN INVOKE TRACE is forwarded to RNS-B if supported by 3G_MSC-B.

Possible Positive outcomes: successful radio resources allocation and relocation numbers allocation (if performed):

RNS-A	3G-MSC-A	3G-MSC-B	RNS-B
	MAP PREPARE HANDOVE < response	RELOCATION	
RELOCATION	 Command 		

Possible Negative outcomes:

a) user error detected, or relocation numbers allocation unsuccessful (if performed), or component rejection or dialogue abortion performed by 3G_MSC-B:

RNS-A	3G-MSC-A	3G-MSC-B	RNS-B
	MAP PREPARE HANI	DOVER response	
	negative result	, MAP CLOSE	
	<		
	MAP U/P-ABORT		
RELOCATION	PREPARATION		
<			
FAILURE	MAP CLOSI	c	
		>	

b) radio resources allocation failure:

RNS-A	3G-MSC-A	3G-	MSC-B	RNS-B
			RELOCATION FAIL	JURE
			<	·
ĺ	MAP PREPARI	E HANDOVER	İ	İ
	<			
	response			
RELOCATION	PREPARATION		Ì	i
<				
FAILURE				


c) radio resources allocation partial failure (3G_MSC-A decides to reject the relocation):

RNS-A	3G-MSC-A	3G-MSC-B	RNS-B
		RELOCATION	REQUEST
		<	
1	MAP PREPARE	HANDOVER ACK	
	<		
	response		
RELOCATION	PREPARATION		ĺ
<			
FAILURE	ĺ		
Ì		ĺ	İ

d) unsuccessful relocation execution (relocation cancelled):


]	RNS-A	3G-MS	SC-A	3G-1	MSC-B	RNS-B
	 RELOCATION	>				
	CANCEL	-				i
	ĺ		MAP U -ABORT		ĺ	Í
				>		
	ĺ				IU RELEASE	COMMAND
	RELOCATION					>
	<				ĺ	Ì
	CANCEL ACK				İ	İ

Figure 51: Signalling for Basic Inter-MSC Relocation execution (Negative outcomes)

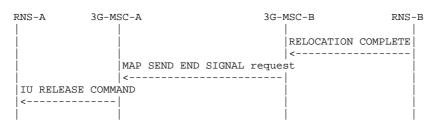



Positive outcome





NOTE: From interworking between MAP and RANAP point of view.

Negative outcome:




Figure 54: Signalling for Basic Inter-MSC Relocation completion (Negative outcome)

The relocation procedure is normally triggered by RNS-A by sending a RELOCATION REQUIRED message on Iu-Interface to 3G_MSC-A. The invocation of the Basic Inter-MSC relocation procedure is performed and controlled by 3G_MSC-A. The sending of the MAP Prepare-Handover request to 3G_MSC-B is triggered in 3G_MSC-A upon receipt of the RELOCATION REQUIRED message. The identity of the target RNC where the call is to be handed over in 3G_MSC-B area, provided in the RELOCATION REQUIRED message, is mapped to the target RNC Id MAP parameter and the RELOCATION REQUEST message is encapsulated in the an-APDU MAP parameter of the Prepare-

Handover MAP request. 3G_MSC-B can invoke another operation towards the VLR-B (allocation of the relocation numbers described in 3GPP TS 29.002).

Additionally, if tracing activity has been invoked, the trace related messages can be transferred on the E-Interface encapsulated in the an-APDU MAP parameter of the Prepare-Handover Request. If transferred, one complete trace related message at a time shall be included in the an-APDU MAP parameter after the RELOCATION REQUEST message.

The interworking between Prepare Handover and RELOCATION REQUIRED is as follows:

	25.413	29.002	Notes
Forward message	RELOCATION REQUIRED MAP	PREPARE HANDOVER request	+
	RANAP information	-ho-NumberNotRequired -target RNC Id -Radio Resource Info	1
	elements	-an-APDU(RELOCATION REQUEST, CN INVOKE TRACE)	2
Positive result	MAP PREPARE HANDOVE	R response	3
İ		-relocation numbers	İ
		-an-APDU(
	RELOCATION COMMAND	RELOCATION REQUEST ACKNOWLEDGE	
	RELOCATION PREP FAILURE	or RELOCATION FAILURE)	
 Negative result	RELOCATION PREP FAILURE	MAP PREPARE HANDOVER	+
	Unspecified failure	System Failure	İ
	Unspecified failure	No Handover Number available	
ĺ	Unspecified failure	UnexpectedDataValue	İ
	Unspecified failure	Data Missing	
	Unspecified failure	MAP CLOSE	
	Unspecified failure	MAP U/P -ABORT	

NOTE 1: The RANAP information elements are already stored in 3G_MSC.

The ho-NumberNotRequired parameter is included by 3G_MSC-A, when 3G_MSC-A decides not to use any circuit connection with 3G_MSC-B. No relocation numbers shall be present in the positive result. Any negative response from 3G_MSC-B shall not be due to relocation number allocation problem.

- NOTE 2: The process performed on the RANAP information elements received in the RELOCATION REQUIRED message is described in the 3GPP TS 25.413.
- NOTE 3: The response to the Prepare-Handover request can include in its an-APDU parameter, identifying the 3GPP TS 25.413 protocol, either a RANAP RELOCATION REQUEST ACKNOWLEDGE or a RANAP RELOCATION FAILURE.

In the first case, the positive result triggers in 3G_MSC-A the sending on Iu-Interface of the RELOCATION CMD.

In the second case, the positive result triggers in 3G_MSC-A the sending of the RELOCATION PREP FAILURE.

The interworking between Send End Signal and RELOCATION COMPLETE in 3G_MSC-B is as follows:

	25.413 29.002	Notes
Forward message	RELOCATION COMPLETE MAP SEND END SIGNAL request	
	-an-APDU(RELOCATION COMPL)	
Positive result	IU RELEASE COMMAND MAP SEND END SIGNAL response -Normal release	1
Negative result	IU RELEASE COMMAND -Normal release MAP CLOSE -Normal release MAP U/P -ABORT	2

- NOTE 1: The positive empty result triggers the clearing of the Radio Resources on the Iu-Interface and the release of the SCCP connection between 3G_MSC-B and RNS-B. If a circuit connection is used between 3G_MSC-A and 3G_MSC-B, the 'Normal release' clearing cause shall only be given to RNS-B when 3G_MSC-B has received a clearing indication on its circuit connection with 3G_MSC-A.
- NOTE 2: The abortion of the dialogue or the rejection of the component triggers in 3G_MSC-B the clearing of its circuit connection with 3G_MSC-A, if any, of the Radio Resources on the Iu-Interface and the release of the SCCP connection between 3G_MSC-B and RNS-B.

The interworking between Send End Signal and IU RELEASE COMMAND in 3G_MSC-A is as follows:

	29.002			25.413		Notes
Forward message	MAP SEND request	END SIGNAL	IU	RELEASE CO	MMAND	
		-an-APDU(RELOCATION	COMPLETE)	Successful Relocat	ion	
Positive result						
Negative result						

The interworking between RELOCATION CANCEL in case of relocation cancelled and User Abort in 3G-MSC-A is as follows:

	25.413	29.002	Notes
Forward message	RELOCATION CANCEL	MAP U -ABORT	
	- Relocation cancelled		1
Positive result	RELOCATION CANCEL	ACKNOWLEDGEMENT	
Negative result			r

4.8.2 Subsequent Inter-MSC Relocation back to 3G_MSC-A

When a Mobile Station is being relocated back to 3G_MSC-A, the procedure (described in TS 23.009) requires interworking between Iu-Interface and E-Interface.

The signalling at initiation, execution and completion of the Subsequent Inter-MSC relocation procedure is shown in figures 55 to 59.

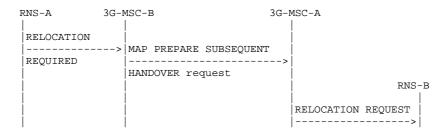


Figure 55: Signalling for Subsequent Inter-MSC Relocation back to 3G_MSC-A initiation

Possible Positive outcomes: successful radio resources allocation:

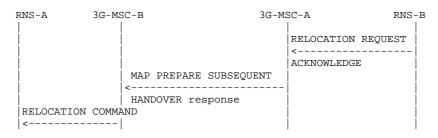


Figure 56: Signalling for Subsequent Inter-MSC Relocation back to 3G_MSC-A execution (Positive outcome)

Possible Negative outcomes:

a) user error detected, or component rejection or dialogue abortion performed by 3G_MSC-A:

RNS-A	3G-MSC-	3	3G-1	ISC-A	RNS-B
	MA	PREPARE	SUBSEQUENT HA	ANDOVER	
	<			-	
RELOCATIO	N PREP	response	negative resu	ılt	
<					
FAILURE (Note 1)				İ
ĺ					İ

b) component rejection or dialogue abortion performed by 3G_MSC-A:

RNS-A	3G-MSC-B	3G-MSC-A	RNS-B
	MAP CLOSE,	MAP U/P ABORT	
	<		
IU RELEASE	COMMAND		
<			

c) radio resources allocation failure:

RNS-A	3G-M	SС-В	3G-M	SC-A	RNS-B
				RELOCATION FAI	LURE
		1		<	
		MAP	PREPARE SUBSEQUENT	ĺ	İ
		<		ĺ	İ
RELOCATION	J PREP	İ	HANDOVER response	Ì	i
<		i		İ	i
FAILURE		ĺ		ĺ	İ

d) radio resources allocation partial failure (3G_MSC-A decides to reject the relocation):

RNS-A	3G-MS	SC-B		3G-	-MS	C-A	RNS-B
						RELOCATION	REQUEST
						<	
		MAP :	PREPARE :	SUBSEQUENT	Í	ACK	ĺ
		<					
RELOCATION	PREP	1	HANDOVER	response	İ		ĺ
<							
FAILURE					İ		İ

e) unsuccessful relocation execution (relocation cancelled):

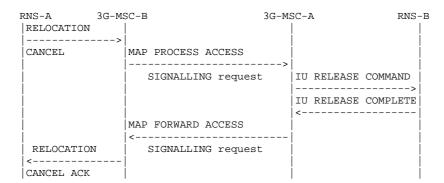


Figure 57: Signalling for Subsequent Inter-MSC Relocation back to 3G_MSC-A execution (Negative outcome)

RNS-A	3G-M	SC-B	3G-MS	SC-A	RNS-B
				RELOCATION	
		MAP SEND END SIG <	NAL 	COMPLETE	
İ		response			i
IU RELEA	SE CMD				Í
<					

Figure 58: Signalling for Subsequent Inter-MSC Relocation back to 3G_MSC-A completion (Successful completion of the procedure)

NOTE: Positive outcome case shown in figure 53.





Figure 59: Signalling for Subsequent Inter-MSC Relocation back to 3G_MSC-A completion (Unsuccessful completion of the procedure)

NOTE: Abnormal end of the procedure that triggers the clearing of all resources in 3G_MSC-B.

The interworking between Prepare Subsequent Handover and RELOCATION REQUIRED is as follows:

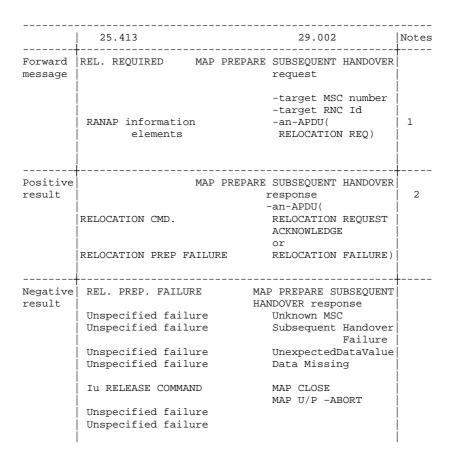

- NOTE 1: The processing performed on the RANAP information elements received in the RELOCATION REQUIRED message is out of the scope of the present document. The target MSC number is provided to 3G_MSC-A by 3G_MSB-B based on the information received from RNS-B.
- NOTE 2: The response to the Prepare-Subsequent-Handover request can include in its an-APDU parameter, identifying the 3GPP TS 25.413 protocol, a RANAP RELOCATION REQUEST ACKNOWLEDGE or a RANAP RELOCATION FAILURE.

In the first case, the positive result triggers in 3G_MSC-B the sending on Iu-Interface of the RELOCATION COMMAND.

In the second case, the positive result triggers in 3G_MSC-B the sending of the RELOCATION PREPARATION FAILURE.

The interworking between RELOCATION CANCEL and MAP Process Signalling Request in 3G_MSC-A is as follows:

	29.002	25.413	Notes
Forward message	MAP PROCESS-SIGNALLING request -an-APDU(RELOCATION CANCEL)	IU RELEASE COMMAND	
Positive result	MAP FORWARD-SIGNALLING request -an-APDU(RELOCATION CANCEL ACK)	IU RELEASE COMPLETE	
Negative result			r

The interworking between RELOCATION CANCEL and MAP Process Signalling Request in 3G_MSC-B is as follows:

	25.413		29.002	Notes
Forward message	RELOCATION	CANCEL	MAP PROCESS-SIGNALLING request -an-APDU(RELOCATION CANCEL)	+
Positive result	RELOCATION	CANCEL ACK	MAP FORWARD-SIGNALLING request -an-APDU(RELOCATION CANCEL ACK)	₽
Negative result				+

The interworking between Send End Signal Result and RELOCATION COMPLETE in 3G_MSC-A is as follows:

	25.413	29.002	Notes
Forward message	RELOCATION COMPLETE	MAP SEND END SIGNAL response	• +
Positive result			
Negative result		MAP U/P -ABORT	 1

NOTE: The abortion of the dialogue ends the relocation procedure with 3G_MSC-B.

4.8.3 Subsequent Inter-MSC Relocation to third MSC

When a Mobile Station is being relocated to a third MSC, the procedure (described in 3GPP TS 23.009) does require one specific interworking case in 3G_MSC-A (figure 64) between E-Interface from 3G_MSC-B and E-Interface from 3G_MSC-B' other than the combination of the ones described in the subclause 4.8.1 and 4.8.2.

I	RNS-A	3G-1	MSC-B	3G-1	MSC-1	Ą	3G-N	ISC-B'
	RELOCATIC		MAP PREPARE SUBSEQU HANDOVER request	JENT		PREP/		++ Possib. Alloc. number VLR-B ++ RNS-B' RELOCATION > REQUEST

Figure 60: Signalling for Subsequent Inter-MSC Relocation to third MSC (3G_MSC-B') initiation

Possible Positive outcomes: successful radio resources allocation:

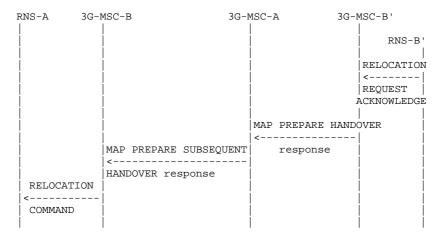



Figure 61: Signalling for Subsequent Inter-MSC Relocation to third MSC (3G_MSC-B') execution (Positive outcome)

Possible Negative outcomes:

a) user error detected, or component rejection or dialogue abortion performed by 3G_MSC-B':

RNS-A 3G-MSC-B 3G-MSC-A 3G-MSC-B' RNS-B' MAP PREPARE HANDOVER |response negative result MAP CLOSE <-----MAP U/P -ABORT MAP PREPARE SUBSEQUENT <-----HANDOVER response negative RELOCATION | result <----PREPARATION FAILURE

b) radio resources allocation failure:

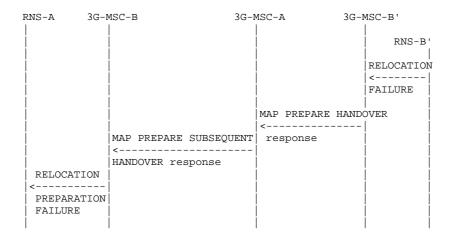

c) radio resources allocation partial failure (3G_MSC-A decides to reject the relocation):

RNS-A	3G-N	ISC-B	3G-1	ISC-A	7	3G-1	ISC-B'	
							RNS	5-в' І
							RELOCA	LION
1							<	
							REQ ACI	c
				MAP	PREPARE	HAND)VER	ļ
1				<				
İ	ĺ	MAP PREPARE	SUBSEQUENT	res	ponse		ĺ	Í
		<						
1		HANDOVER res	sponse					
RELOCA	ATION							
<								
PREPAR	RATION							
FAILUF	RE							Ì

Figure 62: Signalling for Subsequent Inter-MSC Relocation to third MSC (3G_MSC-B') execution (Negative outcome)

Positive outcome:

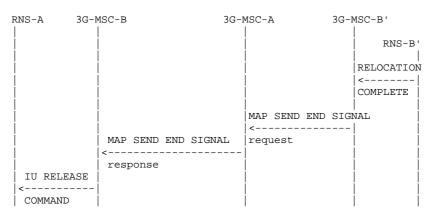


Figure 63: Signalling for Subsequent Inter-MSC Relocation to third MSC (3G_MSC-B') completion (Successful completion of the procedure)

Negative outcome:

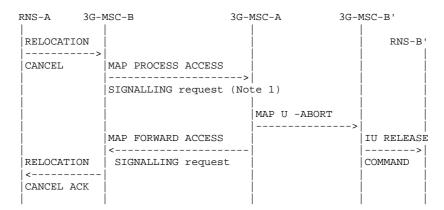


Figure 64: Signalling for Subsequent Inter-MSC Relocation to third MSC (3G_MSC-B') completion (Unsuccessful completion of the procedure)

NOTE: Specific interworking case detailed below.

The specific interworking case in 3G_MSC-A compared to the subclauses 4.8.1 and 4.8.2 occurs between RELOCATION FAILURE encapsulated in a Process Access Signalling from 3G_MSC-B and the abortion of the dialogue with 3G_MSC-B' in the case of relocation cancelled:

	29.002	29.002	Notes
Forward message	MAP PROCESS-SIGNALLING request		+
	-an-APDU(RELOCATION CANCEL)	MAP U -ABORT	1
Positive result	MAP FORWARD-SIGNALLING request -an-APDU(RELOCATION CANCEL ACK)		
Negative result		MAP U/P -ABORT	2

- NOTE 1: The abortion of the dialogue triggers in 3G_MSC-B' the clearing of the circuit connection with 3G_MSC-A, if any, and of the Resources between 3G_MSC-B' and RNS-B'. The abortion of the dialogue ends the relocation procedure with 3G_MSC-B'.
- NOTE 2: The abortion of the dialogue ends the relocation procedure with 3G_MSC-B.

4.8.4 RANAP Messages transfer on E-Interface

The following mapping applies to the encapsulation performed in 3G_MSC-A.

	25.413	29.002	Notes
Forward message	RANAP messages	MAP FORWARD ACCESS SIGNALLING request	 1
		-an-APDU (RANAP messages)	
Positive result			2
Negative result		MAP CLOSE MAP U/P -ABORT	T

- NOTE 1: Complete RANAP messages to be sent on 3G_MSC-B RNS-B interface are embedded into the an-APDU parameter.
- NOTE 2: The Return Result does not apply. If 3G_MSC-B returns a message, this message will arrive in an Invoke: Process Access Signalling.

The following mapping applies to the encapsulation performed in 3G_MSC-B.

	25.413	29.002	Notes
Forward message	RANAP messages	MAP PROCESS ACCESS SIGNALLI request	ING 1
		-an-APDU (RANAP messages	;)
Positive result			2
Negative result	IU RELEASE COMMAND	MAP CLOSE	
	Unspecified failure	e MAP U/P -ABORT	3

- NOTE 1: Complete RANAP messages to be sent to 3G_MSC-A are embedded into the an-APDU parameter.
- NOTE 2: The Return Result does not apply. If 3G_MSC-A returns a message, this message will arrive in an Invoke: Forward Access Signalling.
- NOTE 3: The abortion of the dialogue triggers the clearing of the circuit connection with 3G_MSC-A, if any, of the Radio Resources on the Iu-Interface and the release of the SCCP connection between 3G_MSC-B and RNS-B. The clearing of the Radio Resources (the clearing indication received from RNS-B is transmitted to 3G_MSC-A) or the loss of the SCCP connection between 3G_MSC-B and RNS-B, triggers in 3G_MSC-B the abortion of the dialogue on the E-Interface and the clearing of the circuit connection with 3G_MSC-A, if any.

4.8.5 Processing in 3G_MSC-B, and information transfer on E-interface

The following parameters require processing (e.g. to store the parameter, to internally generate the parameter) in 3G_MSC-B. The relevant RANAP procedures are mentioned to ease the comprehension, their detailed description is the scope of the TS 25.413. Each RANAP message being transferred on E-interface shall use the mechanisms given in subclause 4.8.4 and is described in TS 25.413.

4.8.5.1 Integrity Protection Information

A sequence of possible integrity protection algorithms can be sent to an RNS in Security Mode Command or Relocation Request. The RNS chooses one of the listed algorithms and reports this back to the 3G_MSC in Security Mode Complete or Relocation Request Acknowledge respectively.

The list of algorithms, the integrity protection key and the chosen algorithm shall be stored by 3G_MSC-B.

Transfer of Information:

If integrity protection has not been performed before Inter-MSC Relocation, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Relocation.

Integrity protection control towards 3G_MSC-B:

If Integrity protection has been performed before Inter-MSC Relocation:

- in the Relocation Request RANAP message (information included).

The Relocation Request Acknowledge should in this case contain the indication of the chosen algorithm.

If Integrity protection has NOT been performed before Inter-MSC Relocation:

- in the Security Mode Command procedure between 3G_MSC-A and 3G_MSC-B.

4.8.5.2 Encryption Information

A sequence of possible encryption algorithms can be sent to an RNS in Security Mode Command or Relocation Request. The RNS chooses one of the listed algorithms and reports this back to the 3G_MSC in Security Mode Complete or Relocation Request Acknowledge respectively.

The list of algorithms, the ciphering key and the chosen algorithm shall be stored by 3G_MSC-B, and the chosen value sent to 3G_MSC-A.

Transfer of Information:

If ciphering has not been performed before Inter-MSC Relocation, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Relocation.

Ciphering control towards 3G_MSC-B:

If Ciphering has been performed before Inter-MSC Relocation:

- in the Relocation Request RANAP message (information included).

The Relocation Request Acknowledge should in this case contain the indication of the chosen algorithm.

If Ciphering has NOT been performed before Inter-MSC Relocation:

- in the Security Mode Command procedure between 3G_MSC-A and 3G_MSC-B.

4.8.5.3 RAB Parameters

The parameters shall be stored by 3G_MSC-B to be used at internal Relocation in 3G_MSC-B.

Transfer of information:

Received by 3G_MSC-B from 3G_MSC-A in:

The Relocation Request RANAP message.

If a new type of resource is to be assigned after Inter-MSC Relocation, this can be made with:

- The RAB Assignment Request RANAP message.

4.8.5.4 Channel Type

Channel Type is GSM information that is required in BSSMAP Handover Request and BSSMAP Assignment Request, and it shall be provided by 3G_MSC-A. 3G_MSC-B needs this information in case of an intra-MSC UMTS to GSM handover after an inter-MSC relocation and subsequent assignment procedures. The Channel Type derived from the Bearer Capability that is available in 3G_MSC-A. This mapping is described in 3GPP TS 27.001. Therefore 3G_MSC-A must provide this information in case of an inter-MSC relocation. The Radio Resource Information IE in the MAP Prepare Handover message refers to the Channel Type GSM information.

Channel Type shall be stored by 3G_MSC-B.

Transfer of information:

Received by 3G_MSC-B from 3G_MSC-A in:

- The Prepare Handover Request MAP message
- The Forward Access Signalling Request message.

4.8.5.5 Selected GSM Algorithm

After inter-MSC relocation, the 3G_MSC-B can perform intra-MSC UMTS to GSM handover. A sequence of possible encryption algorithms, received from the 3G_MSC-A, can be sent to an BSS in Handover Request or in Cipher Mode Command in case of cipher mode setting after intra.MSC-B handover from UMTS to GSM. The BSS chooses one of the listed algorithms and reports this back to the 3G_MSC in Handover Request Acknowledge or Cipher Mode

Complete respectively. The MSC-B provides the Selected GSM algorithm information to the MSC-A. The Selected GSM algorithms IE in the MAP Process Access Signalling Request message refers to the Algorithm identifier octet in the Chosen Encryption Algorithm GSM information.

The chosen algorithm shall be stored by 3G_MSC-B, and sent to 3G_MSC-A.

Transfer of Information:

If ciphering has not been performed before Inter-MSC Relocation, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Relocation.

If Ciphering has been performed before Inter-MSC Relocation, Selected GSM algorithm information is received by 3G_MSC-A from 3G_MSC-B in:

- The Handover Performed BSSMAP message.

If Ciphering has NOT been performed before Intra-MSC-B handover from UMTS to GSM after Inter-MSC Relocation, Selected GSM algorithm information is received by 3G_MSC-A from 3G_MSC-B in:

- The Process Access Signalling Request MAP message.

4.8.5.6 Allowed GSM Algorithms

Allowed GSM algorithms is GSM information that is required in BSSMAP Handover Request and BSSMAP Cipher Mode Command, and shall be provided by 3G_MSC-A. 3G_MSC-B needs this information in case of an intra-MSC UMTS to GSM handover and in subsequent ciphering mode setting, after an inter-MSC relocation. Therefore 3G_MSC-A must provide this information in case of an inter-MSC relocation. The Allowed GSM algorithms IE in the MAP Prepare Handover and in the MAP Forward Access Signalling Request messages refers to the Algorithm identifier octet in the Permitted Algorithms GSM information.

Allowed GSM algorithms shall be stored by 3G_MSC-B.

Transfer of information:

If ciphering has not been performed before Inter-MSC Relocation, this will be controlled by 3G_MSC-A after the completion of Inter-MSC Relocation.

Ciphering control towards 3G_MSC-B:

If Ciphering has been performed before Inter-MSC Relocation:

- The Prepare Handover Request MAP message.

If Ciphering has NOT been performed before Inter-MSC Relocation:

- The Forward Access Signalling Request MAP message.

4.8.5.7 Chosen Channel

BSSMAP Assignment Request may give the BSS some freedom in the selection of radio resource (for instance channel rate selection, speech version selection etc.). Chosen Channel and/or Speech Version is reported back to 3G_MSC-B in BSSMAP Assignment Complete. The Chosen Radio Resource Information IE in the MAP Prepare Handover Response and Process Access Signalling Request messages refers to the Chosen Channel and/or Speech Version GSM information.

The Channel Type and the characteristics of the chosen channel shall be stored by 3G_MSC-B, and the Chosen Channel and/or Speech Version information elements shall be transferred to MSC-A or 3G_MSC-A.

Transfer of information:

Received by MSC-A or 3G_MSC-A from 3G_MSC-B in:

- The Prepare Handover Response MAP message
- The Process Access Signalling request MAP message

4.8.5.8 BSSMAP Service Handover

This information shall be stored by 3G_MSC-B and sent to a BSS in Handover Request, when 3G_MSC-B performs handover to GSM.

Transfer of information:

The BSSMAP Service Handover information is transferred to 3G_MSC-B in:

- the Prepare Handover Request MAP message.

If a new assignment of a TCH after an inter-MSC relocation is to be performed, the BSSMAP Service Handover information is transferred to 3G_MSC-B in:

- the Forward Access Signalling Request MAP message

and sent by 3G_MSC-B to the BSS in the Assignment Request BSSMAP message.

4.8.5.9 RANAP Service Handover

This information shall be stored by 3G_MSC-B and sent to an RNS in Relocation Request during the basic inter-MSC relocation or when 3G_MSC-B performs a subsequent intra-MSC relocation or handover to UMTS.

Transfer of information:

The RANAP Service Handover information is transferred to 3G_MSC-B in:


- the Relocation Request RANAP message.

If a new assignment of a Radio Access Bearer after an inter-MSC relocation is to be performed, the information is transferred to 3G_MSC-B in:

- the RANAP RAB Assignment procedure.

—

4.8.6 Overview of the Technical Specifications 3GPP interworking for the Inter-MSC Relocation

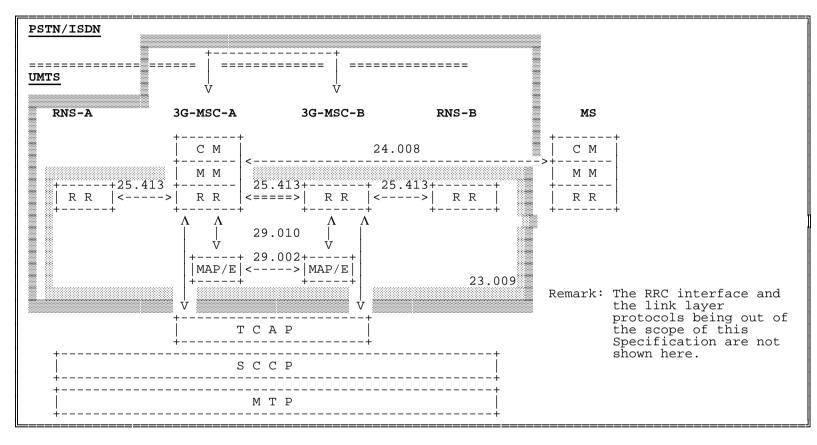

99

4.9 Location Services

The general principles of the location services procedures are given in Technical Specification 3GPP TS 23.071 and 3GPP TS 23.171.

3GPP TS 29.010 gives the necessary information for interworking between the 3GPP TS 25.413 RANAP protocol and the GSM 08.08 BSSMAP protocol. The interworking is necessary for positioning requests issued after a completed GSM to UMTS inter system handover. BSSMAP messages carried by MAP over the E-interface must be mapped by the non-anchor 3G-MSC into the corresponding RANAP messages to be sent over the Iu-interface and vice versa. For Inter-MSC GSM to GSM Handover and Inter-MSC UMTS to UMTS SRNS Relocation no mapping between the 3GPP TS 25.413 RANAP protocol and the GSM 08.08 BSSMAP protocol is necessary, but only the interworking with the MAP protocol over the E-interface needs to be described.

4.9.1 Completed Location Acquisition

4.9.1.1 Inter-MSC Handover (GSM to GSM)

After a successful Inter-MSC handover, any positioning request received by the anchor MSC via the MAP message Provide Subscriber Location triggers the BSSMAP procedure Location Acquisition described in GSM 08.08. For handover this procedure is executed according to 3GPP TS 29.108 with the anchor MSC playing the role of the MSC and the non anchor MSC playing the role of the BSS.

The needed BSSMAP signalling is sent over the E-interface encapsulated in the MAP messages Process Access Signalling and Forward Access Signalling.

At the non anchor MSC the BSSMAP messages received from the anchor MSC are forwarded to the BSS, and the BSSMAP messages received from the BSS are sent over the E-interface to the anchor MSC.

The signalling for a completed Location Acquisition procedure is shown in figures 65a.

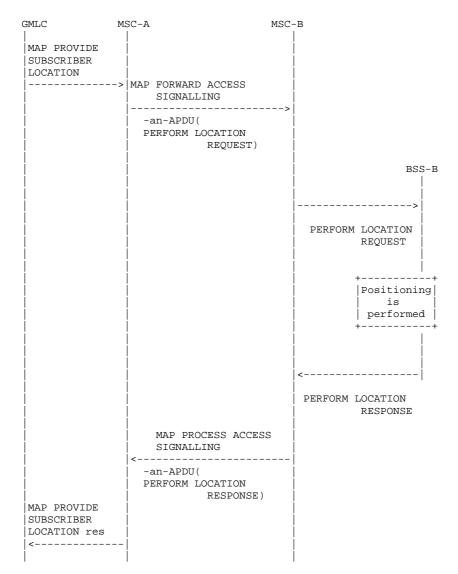


Figure 65a: Signalling for a completed Location Acquisition procedure

After the inter-MSC handover, the MSC-B can perform intra-MSC GSM to UMTS handover. Any positioning request received by the anchor MSC after completion of the intra-MSC GSM to UMTS handover is handled as for Inter-MSC Handover GSM to UMTS (see section 4.9.1.2).

4.9.1.2 Inter-MSC Handover (GSM to UMTS)

After a successful Inter-MSC GSM to UMTS inter system handover, any positioning request received by the anchor MSC via the MAP message Provide Subscriber Location triggers the BSSMAP procedure Location Acquisition described in GSM 08.08. For handover this procedure is executed according to 3GPP TS 29.108 with the anchor MSC playing the role of the MSC and the non anchor 3G MSC playing the role of the BSS.

The needed BSSMAP signalling is sent over the E-interface encapsulated in the MAP messages Process Access Signalling and Forward Access Signalling.

At the non anchor 3G MSC the BSSMAP messages received from the anchor MSC are mapped into the corresponding RANAP messages to be sent to the RNS, and the received RANAP messages are mapped into the corresponding BSSMAP messages to be sent over the E-interface to the anchor MSC.

The signalling for a completed Location Acquisition procedure is shown in figures 65b.

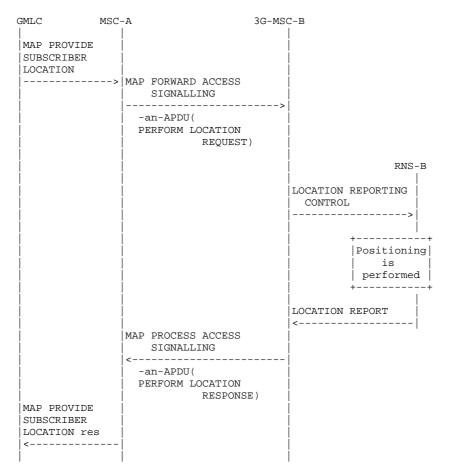


Figure 65b: Signalling for a completed Location Acquisition procedure

The interworking between the BSSMAP location aquisition messages in MAP and the RANAP location reporting messages is as follows:

	29.002	25.413	Notes
Forward message	MAP FORWARD ACCESS SIG. request -an-APDU(PERFORM LOCATION REQUES	CONTROL	
	BSSMAP information elements:	RANAP information elements:	
	Location Type >Current Geographic Location	Request Type >Event = Direct >Report Area = Geo. Coord.	
	Cell Identifier Classmark Inf. Type3 LCS Client Type Chosen Channel LCS Priority LCS QoS >Horizontal Accuracy	 Request Type >Accuracy Code	
	GPS Assistance Data APDU		
Result	MAP PROCESS ACCESS SIG. request -an-APDU(PERFORM LOCATION RESPON		
	BSSMAP information elements:	RANAP information elements:	
	Location Estimate Positioning Data Deciphering Keys LCS Cause 	Area Identity >Geographical Area Cause Request Type	

NOTE 1: All other Location Type possibilities are not supported by UMTS positioning,

After the inter-MSC GSM to UMTS handover, the 3G MSC-B can perform intra-MSC UMTS to GSM handover. Any positioning request received by the anchor MSC after completion of the intra-MSC UMTS to GSM handover is handled as for Inter-MSC Handover GSM to GSM (see section 4.9.1.1).

4.9.1.3 Inter-MSC Handover (UMTS to GSM)

After a successful Inter-MSC UMTS to GSM inter system handover, any positioning request received by the anchor 3G-MSC via the MAP message Provide Subscriber Location triggers the BSSMAP procedure Location Acquisition described in GSM 08.08. For handover this procedure is executed according to 3GPP TS 29.008 with the anchor 3G-MSC playing the role of the 3G-MSC and the non anchor MSC playing the role of the BSS.

The needed BSSMAP signalling is sent over the E-interface encapsulated in the MAP messages Process Access Signalling and Forward Access Signalling.

At the non anchor MSC the BSSMAP messages received from the anchor 3G-MSC are forwarded to the BSS, and the BSSMAP messages received from the BSS are sent over the E-interface to the anchor 3G-MSC.

The signalling for a completed Location Acquisition procedure is shown in figures 65c.

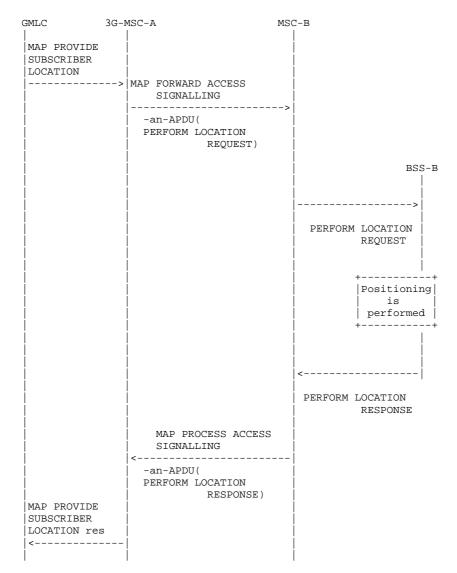


Figure 65c: Signalling for a completed Location Acquisition procedure

After the inter-MSC UMTS to GSM handover, the 3G MSC-B can perform intra-MSC GSM to UMTS handover. Any positioning request received by the anchor 3G MSC after completion of the intra-MSC GSM to UMTS handover is handled as for Inter-MSC Handover GSM to UMTS (see section 4.9.1.2).

4.9.1.4 Inter-MSC SRNS Relocation

After a successful Inter-MSC SRNS Relocation, any positioning request received by the anchor 3G-MSC via the MAP message Provide Subscriber Location triggers the RANAP procedure Location Reporting Control described in TS 25.413. For handover this procedure is executed according to 23.009 with the anchor 3G-MSC playing the role of the 3G-MSC and the non anchor 3G-MSC playing the role of the RNS.

The needed RANAP signalling is sent over the E-interface encapsulated in the MAP messages Process Access Signalling and Forward Access Signalling.

At the non anchor 3G-MSC the RANAP messages received from the anchor 3G-MSC are forwarded to the RNS, and the RANAP messages received from the RNS are sent over the E-interface to the anchor 3G-MSC.

The signalling for a completed Location Acquisition procedure is shown in figures 65d.

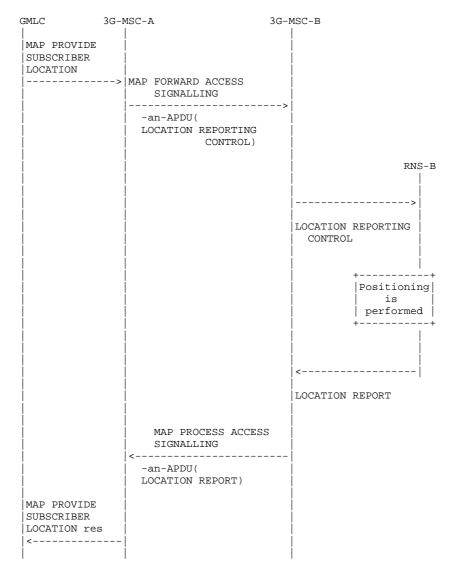


Figure 65d: Signalling for a completed Location Acquisition procedure

After the inter-MSC SRNS Relocation, the 3G MSC-B can perform intra-MSC UMTS to GSM handover. Any positioning request received by the anchor 3G MSC after completion of the intra-MSC UMTS to GSM requires that at the non anchor 3G MSC the received RANAP messages are mapped into the corresponding BSSMAP messages to be sent to the BSS, and the received BSSMAP messages are mapped into the corresponding RANAP messages to be sent over the E-interface to the anchor 3G-MSC.

The signalling for a completed Location Acquisition procedure is shown in figures 65e.

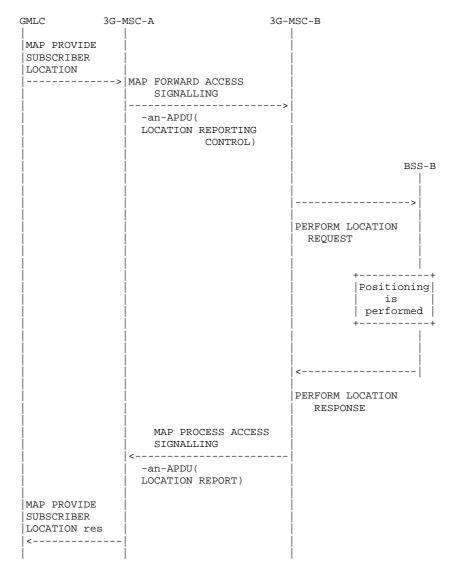


Figure 65e: Signalling for a completed Location Acquisition procedure

the interworking between the RANAP messages encapsulated in MAP and the BSSMAP messages is as follows:

	29.002	08.08	Notes
Forward message	MAP FORWARD ACCESS SIG. request	PERFORM LOCATION REQUEST	- +
	-an-APDU(LOCATION REPORTING CONT	ROL)	
	RANAP information elements:	BSSMAP information elements:	
	Request Type >Event = Direct >Report Area = Geo. Coord.	>Current Geographic	
		LCS QoS >Horizontal Accuracy	
Result	MAP PROCESS ACCESS SIG. request -an-APDU(LOCATION REPORT)	PERFORM LOCATION RESPONSE	
	RANAP information elements:	BSSMAP information elements:	
	Area Identity >Geographical Area		
	Cause Request Type	LCS Cause	

4.9.2 Cause Code Mapping

4.9.2.1 Inter-MSC Handover(GSM to GSM)

When a mobile station is handed over from GSM to GSM, no mapping of cause codes is required. The MSC shall use the cause codes specified in GSM 08.08.

After the inter-MSC handover, the MSC-B can perform intra-MSC GSM to UMTS handover. A mapping of the cause codes used in the RANAP and the BSSMAP protocols is needed after completion of the intra-MSC GSM to UMTS handover and is the same as for Inter-MSC Handover GSM to UMTS (see section 4.9.2.2).

4.9.2.2 Inter-MSC Handover (GSM to UMTS)

When a Mobile Station is handed over between GSM and UMTS, a mapping of the cause codes used in the RANAP and the BSSMAP protocols is needed. The mapping described here is applicable to the BSSMAP protocol even when used inside MAP in the E-interface.

The mapping between the cause codes received in RANAP Location Report and the LCS cause codes sent in BSSMAP Perform Location Response is as follows:

25.413	08.08 Not	 es
LOCATION REPORT	PERFORM LOCATION RESPONSE	
- Requested Report Type not Supported	- Position method failure	
- Requested Information not Available	- Position method failure	
- all other cause codes	- System Failure	

After the inter-MSC GSM to UMTS handover, the 3G MSC-B can perform intra-MSC UMTS to GSM handover. No mapping of cause codes is required after completion of the intra-MSC UMTS to GSM handover as for Inter-MSC Handover GSM to GSM (see section 4.9.2.1).

4.9.2.3 Inter-MSC Handover (UMTS to GSM)

When a mobile station is handed over from UMTS to GSM, no mapping of cause codes is required. The 3G-MSC shall use the cause codes specified in GSM 08.08.

After the inter-MSC UMTS to GSM handover, the 3G MSC-B can perform intra-MSC GSM to UMTS handover. A mapping of the cause codes used in the RANAP and the BSSMAP protocols is needed after completion of the intra-MSC GSM to UMTS handover and is the same as for Inter-MSC Handover GSM to UMTS (see section 4.9.2.2).

4.9.2.4 Inter-MSC SRNS Relocation

When a mobile station is handed over from UMTS to UMTS, no mapping of cause codes is required. Both 3G-MSCs shall use the cause codes specified in TS 25.413.

After the inter-MSC SRNS Relocation, the 3G MSC-B can perform intra-MSC UMTS to GSM handover. A mapping of the cause codes used in the RANAP and the BSSMAP protocols is needed after completion of the intra-MSC UMTS to GSM handover.

The mapping between the cause codes received in BSSMAP Perform Location Response and the LCS cause codes sent in RANAP Location Report is as follows:

08.08	25.413	Notes
PERFORM LOCATION RESPONSE	LOCATION REPORT	+
- Position method failure	- Requested Report Type not Supported	
- System Failure	- Unspecified Failure	i
- Protocol Error	- Unspecified Failure	i
- Data missing	- Unspecified Failure	1
in position request		
 Unexpected data value in position request 	- Unspecified Failure	
- Target MS Unreachable	- Unspecified Failure	1
- Location request aborted	- Unspecified Failure	i
- Facility not supported	- Requested Report Type not Supported	
- Inter-BSC Handover Ongoing	g - Unspecified Failure	1
- Intra-BSC Handover Complete	- Unspecified Failure	
- Congestion	- Unspecified Failure	İ
- Unspecified	- Unspecified Failure	ĺ

4.9.3 Aborted Location Acquisition

4.9.3.1 Inter-MSC Handover (GSM to GSM)

When for any reason the on going location acquisition procedure needs to be aborted, the anchor MSC sends the BSSMAP message Perform Location Abort over the E-interface.

Figure 66a shows the signalling for an aborted Location Acquisition procedure.

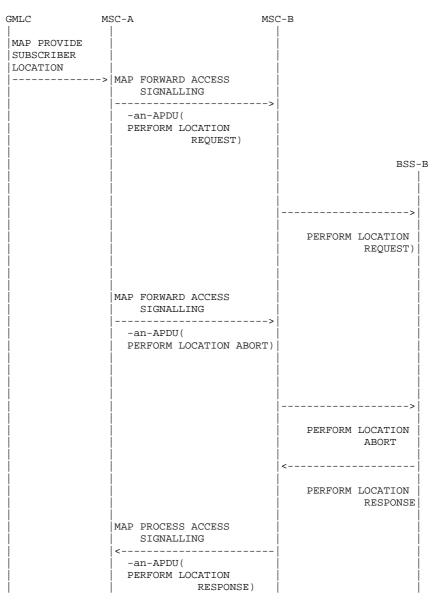


Figure 66a: Signalling for an aborted Location Acquisition procedure

After the inter-MSC handover, the MSC-B can perform intra-MSC GSM to UMTS handover. A positioning request that needs to be aborted by the anchor MSC after completion of the intra-MSC GSM to UMTS handover is handled as for Inter-MSC Handover GSM to UMTS (see section 4.9.3.2).

4.9.3.2 Inter-MSC Handover (GSM to UMTS)

When for any reason the on going location acquisition procedure needs to be aborted, the anchor MSC sends the BSSMAP message Perform Location Abort over the E-interface.

Figure 66b shows the signalling for an aborted Location Acquisition procedure.

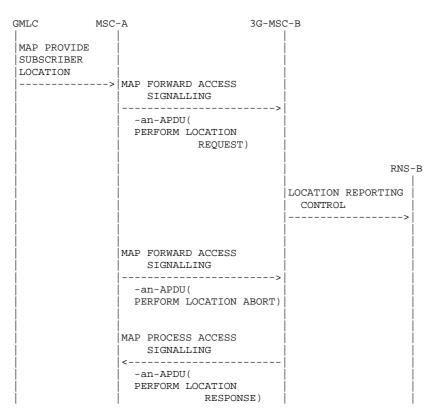


Figure 66b: Signalling for an aborted Location Acquisition procedure

Since RANAP does not support abortion of a positioning request, non-anchor 3G-MSC shall generate a BSSMAP Perform Location Response with LCS Cause 'Location request aborted' to be sent over the E-interface to the anchor MSC, and then shall discard any message from the RNS related to the aborted positioning request.

After the inter-MSC GSM to UMTS handover, the 3G MSC-B can perform intra-MSC UMTS to GSM handover. A positioning request that needs to be aborted by the anchor MSC after completion of the intra-MSC UMTS to GSM handover is handled as for Inter-MSC Handover GSM to GSM (see section 4.9.3.1).

4.9.3.3 Inter-MSC Handover (UMTS to GSM)

When for any reason the on going location acquisition procedure needs to be aborted, the anchor 3G-MSC sends the BSSMAP message Perform Location Abort over the E-interface.

Figure 66c shows the signalling for an aborted Location Acquisition procedure.

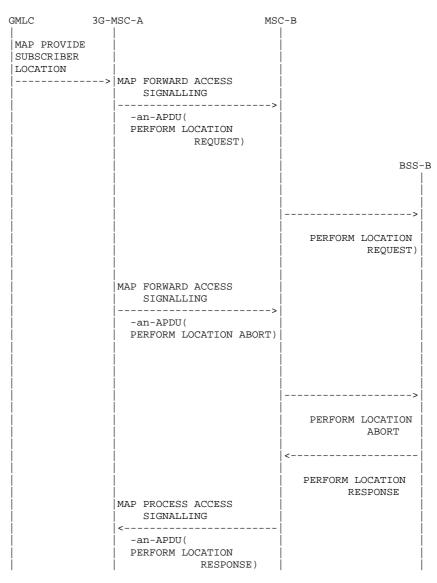


Figure 66c: Signalling for an aborted Location Acquisition procedure

After the inter-MSC UMTS to GSM handover, the 3G MSC-B can perform intra-MSC GSM to UMTS handover. A positioning request that needs to be aborted by the anchor 3G MSC after completion of the intra-MSC GSM to UMTS handover is handled as for Inter-MSC Handover GSM to UMTS (see section 4.9.3.2).

4.9.6.4 Inter-MSC SRNS Relocation

After a successful Inter-MSC SRNS Relocation a positioning request cannot be aborted by the 3G anchor MSC since RANAP does not support abortion of a positioning request.

Annex A (informative): Change history

Change history						
TSG CN#	Spec	Version	CR	<phase></phase>	New Version	Subject/Comment
Sept 1999	GSM 09.10	7.0.0				Transferred to 3GPP CN
CN#04	29.010			R99	3.0.0	Approved by mail exploder at CN#04
CN#06	29.010	3.0.0	001	R99	3.1.0	UMTS / GSM Interworking
CN#06	29.010	3.0.0	002	R99	3.1.0	Addition of LSA Information message
CN#07	29.010	3.1.0	003r1	R99	3.2.0	UMTS / GSM Interworking
CN#07	29.010	3.1.0	004r1	R99	3.2.0	GSM / UMTS Interworking
CN#07	29.010	3.1.0	005	R99	3.2.0	UMTS/UMTS Handover
CN#09	29.010	3.2.0	006r1	R99	3.3.0	Clarification of use of Radio Resource Information
CN#09	29.010	3.2.0	007r1	R99	3.3.0	Corrections and updates to align with current R99 specs
CN#10	29.010	3.3.0	800	R99	3.4.0	GSM to 3G Handover: Location Reporting in 3G_MSC-B
CN#10	29.010	3.3.0	009	R99	3.4.0	GSM to 3G Handover: Chosen IEs in Handover Request Ack
CN#10	29.010	3.3.0	010	R99	3.4.0	GSM to 3G Handover: MAP parameter Target Cell ID
CN#10	29.010	3.3.0	011r1	R99	3.4.0	GSM/UMTS Interworking: Mapping of cause codes
CN#11	29.010	3.4.0	012	R99	3.5.0	GSM to UMTS handover: addition of MAP parameter Target RNC ID
CN#11	29.010	3.4.0	013	R99	3.5.0	Inter MSC relocation: addition of MAP parameter Target RNC ID
CN#11	29.010	3.4.0	014	R99	3.5.0	Roaming restrictions for GPRS service
CN#11	29.010	3.4.0	015	R99	3.5.0	Alignment of cause mapping for 08.08 and 25.413 (Directed Retry)
CN#11	29.010	3.4.0	016	R99	3.5.0	UMTS to GSM Directed Retry cause code mapping
CN#11	29.010	3.4.0	017	R99	3.5.0	Mapping of unknown HLR error to access interface cause code
CN#12	29.010	3.5.0	019r1	R99	3.6.0	Addition of selected UMTS algorithm indication to the handover procedures
CN#12	29.010	3.5.0	021r1	R99	3.6.0	Addition of selected GSM algorithm indication to the handover procedures
CN#12	29.010	3.5.0	023r1	R99	3.6.0	Addition of allowed UMTS algorithms indication to the handover procedures
CN#12	29.010	3.5.0	025r1	R99	3.6.0	Addition of allowed GSM algorithms indication to the handover procedures
CN#12	29.010	3.5.0	027r1	R99	3.6.0	Addition of GSM channel type and GSM chosen channel indications to handover procedures
CN#12	29.010	3.5.0	029	R99	3.6.0	Partial Roaming – restriction by Location area
CN#12	29.010	3.5.0	032	R99	3.6.0	Mapping between RANAP and BSSMAP for Location Services
CN#12	29.010	3.5.0	033r1	R99	3.6.0	Mapping between RANAP and BSSMAP for Location Services
CN#14	29.010	3.6.0	035r2	R99	3.7.0	LCS/HO Location Reporting – GSM to GSM, UMTS to GSM and UMTS to UMTS
CN#14	29.010	3.6.0	039	R99	3.7.0	Global replace of BSS-APDU with AN-APDU
CN#14	29.010	3.6.0	042r1	R99	3.7.0	Alignment of 29.010 to 25.413 for LCS
CN#14	29.010	3.6.0	046	R99	3.7.0	Removal of deleted MAP operations
CN#16	29.010	3.7.0	050r1	R99	3.8.0	LCS: clarification of mapping for Location Acquisition
CN#16	29.010	3.7.0	053r1	R99	3.8.0	Addition of Service Handover parameters to MAP Handover messages
CN#17	29.010	3.8.0	057r2	R99	3.9.0	Addition of an error mapping table for MAP Update Location operation

Change history						
TSG CN#	Spec	Version	CR	<phase></phase>	New Version	Subject/Comment
CN#18	29.010	3.9.0	082r3	R99	3.10.0	Correction to the Service Handover parameters
CN#20	29.010	3.10.0	086	R99	3.11.0	Correction of LCS cause mapping between RANAP and BSSMAP
CN#23	29.010	3.11.0	097R1	R99	3.12.0	Correction of inter system handover cause mapping

History

Document history				
V3.1.0	January 2000	Publication		
V3.2.0	March 2000	Publication		
V3.3.0	September 2000	Publication		
V3.4.0	December 2000	Publication		
V3.5.0	March 2001	Publication		
V3.6.0	June 2001	Publication		
V3.7.0	December 2001	Publication		
V3.8.0	June 2002	Publication		
V3.9.0	September 2002	Publication		
V3.10.0	December 2002	Publication		
V3.11.0	June 2003	Publication		
V3.12.0	March 2004	Publication		