ETSI TS 101 530 V7.4.1 (2000-10)

Technical Specification

Digital cellular telecommunications system (Phase 2+); Location Services (LCS); Base Station System Application Part LCS Extension (BSSAP-LE) (GSM 09.31 version 7.4.1 Release 1998)



Reference

RTS/SMG-020931Q7R3

Keywords

Digital cellular telecommunications system, Global System for Mobile communications (GSM)

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: http://www.etsi.org

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at http://portal.etsi.org/tb/status/status.asp

> If you find errors in the present document, send your comment to: editor@etsi.fr

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

> © European Telecommunications Standards Institute 2000. All rights reserved.

Contents

Intelle	ectual Property Rights	6
Forew	vord	6
1	Scope	7
2	References	7
3	Definitions, abbreviations and symbols	8
4	Definition of BSSAP-LE	8
4.1	DTAP-LE Messages	
4.2	BSSMAP-LE Messages	9
5	Procedures applicable to use of BSSAP-LE.	9
5.1	Location Request	
5.1.1	Successful Operation	
5.1.2	Unsuccessful Operation	.11
5.1.3	Abnormal Conditions	
5.1.4	Overload	
5.2	Connection Oriented Information Transfer	
5.2.1	Successful Operation	
5.2.2	Abnormal Conditions	
5.2.3	Segmentation	
5.3	Connectionless Information Transfer	
5.3.1	Successful Operation	
5.3.2	Unsuccessful Operation	
5.3.3	Abnormal Conditions Segmentation	
5.3.4 5.4	LMU Connection Establishment	
5.4.1	LMU Connection Establishment initiated by the SMLC	
5.4.1.1	·	
5.4.1.2		
5.4.1.3	1	
5.4.2	LMU Connection Establishment initiated by the MSC	
5.4.2.1	•	
5.4.2.2	•	
5.4.2.3	Abnormal Conditions	.15
5.5	LMU Connection Release	.15
5.5.1	LMU Connection Release initiated by the SMLC	
5.5.1.1		
5.5.1.2		
5.5.2	LMU Connection Release initiated by the MSC	
5.5.2.1		
5.5.2.2		
5.6	DTAP-LE Information Transfer	
5.6.1 5.6.2	DTAP-LE Information Transfer Initiated by the SMLC DTAP-LE Information Transfer Initiated by the MSC	
5.0.2 5.7	Reset	
5.7.1	Normal Operation	
5.7.2	Abnormal Conditions	
6	Usage of BSSAP-LE and BSSAP on the Lb Interface	.17
6.1	Applicable Message Sets	
6.2	MTP Functions	
6.3	SCCP Functions	.19
6.3.1	General	
6.3.2	Modifications for Connectionless SCCP	
6.3.3	Modifications for Connection Oriented SCCP	
6.3.4	Contents of the SCCP Data Field	.20

6.3.5	Abnormal Conditions	20
7	Use of BSSAP-LE on the Ls Interface	20
7.1	Applicable Message Sets	
7.2	MTP Functions.	
7.3 7.3.1	SCCP functions	
7.3.2	General Allowed Exceptions to ITU-T Recommendations Q.711-714	
7.3.3	Allowed Exceptions to ANSI T1.112	
7.3.4	Usage of Connectionless SCCP.	
7.3.5	Usage of Connection Oriented SCCP	
7.3.6	Contents of the SCCP Data Field	
7.3.7	Content of DTAP-LE Messages	
7.3.8	Abnormal Conditions	
8	Use of BSSAP-LE on the Lp Interface	
8.1	Applicable Message Sets	
8.2 8.3	MTP Functions SCCP functions	
8.3.1	General	
8.3.2	Allowed Exceptions to ITU-T Recommendations Q.711-714	
8.3.3	Allowed Exceptions to ANSI T1.112	
8.3.4	Usage of Connectionless SCCP	
8.3.5	Usage of Connection Oriented SCCP	
8.3.6	Contents of the SCCP Data Field	26
9	Message Functional Definitions and Contents	26
9.1	BSSMAP-LE PERFORM LOCATION REQUEST message	26
9.1.1	Location Type	
9.1.2	Cell Identifier	
9.1.3	Classmark Information Type 3	
9.1.4 9.1.5	LCS Client Type Chosen Channel	
9.1.6	LCS Priority	
9.1.6a	•	
9.1.7	GPS Assistance Data	
9.1.8	BSSLAP APDU	
9.2	BSSMAP-LE PERFORM LOCATION RESPONSE message	
9.2.1	Location Estimate	
9.2.2 9.2.3	Positioning Data Deciphering Keys	
9.2.3	LCS Cause	
9.3	BSSMAP-LE PERFORM LOCATION ABORT message	
9.3.1	LCS Cause	
9.4	BSSMAP-LE LMU CONNECTION REQUEST message	
9.4.1	IMSI	
9.4.2 9.4.3	Sender Address Security	
9.4.3 9.4.4	Call Number	
9.5	BSSMAP-LE LMU CONNECTION ACCEPT message	
9.5.1	Security	
9.5.2	Call Number	
9.6	BSSMAP-LE LMU CONNECTION REJECT message	
9.6.1	Reject Cause	
9.7 9.7.1	BSSMAP-LE LMU CONNECTION RELEASE message	
9.7.1 9.8	Release Cause BSSMAP-LE CONNECTION ORIENTED INFORMATION message	
9.8.1	BSSLAP APDU	
9.8.2	Segmentation	30
9.9	BSSMAP-LE CONNECTIONLESS INFORMATION message	
9.9.1	Source Identity	
9.9.2	Destination Identity	
9.9.3	APDU	

9.9.5 Return Error Request	9.9.4	Segmentation	
9.10 BSSMAP-LE RESET message 31 9.11 BSSMAP-LE RESET ACKNOWLEDGE message 31 10 Message type 32 10.1 Message type 32 10.2 Information element Identifiers 33 10.4 Cause 33 10.4 Cause 34 10.5 Cell Identifier 33 10.6 Chosen Channel 34 10.7 Classmark Information Type 3 34 10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.11 IMSI 37 10.12 ISDN Address 35 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.19 Network Element Identity 41 10.20 Positoring Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 </td <td>9.9.5</td> <td>Return Error Request</td> <td></td>	9.9.5	Return Error Request	
9.11 BSSMAP-LE RESET ACKNOWLEDGE message 31 10 Message format and information element coding 32 10.1 Message type 32 10.2 Information Element Identifiers 33 10.3 APDU 33 10.4 Cause 34 10.5 Cell Identifier 34 10.6 Chosen Channel 34 10.7 Classmark Information Type 3 34 10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.12 ISDN Address 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positoning Data 42 10.21 Return Error	9.9.6	Return Error Cause	
9.11 BSSMAP-LE RESET ACKNOWLEDGE message 31 10 Message format and information element coding 32 10.1 Message type 32 10.2 Information Element Identifiers 33 10.3 APDU 33 10.4 Cause 34 10.5 Cell Identifier 34 10.6 Chosen Channel 34 10.7 Classmark Information Type 3 34 10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.12 ISDN Address 37 10.13 LCS Clause 38 10.14 LCS Clouse 39 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positoning Data	9.10	BSSMAP-LE RESET message	
10.1 Message type 32 10.2 Information Element Identifiers 33 10.3 APDU 33 10.4 Cause 34 10.5 Cell Identifier 34 10.6 Chosen Channel 34 10.7 Classmark Information Type 3 34 10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44	9.11		
10.1 Message type 32 10.2 Information Element Identifiers 33 10.3 APDU 33 10.4 Cause 34 10.5 Cell Identifier 34 10.6 Chosen Channel 34 10.7 Classmark Information Type 3 34 10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44	10	Message format and information element coding	
10.3 APDU 33 10.4 Cause 34 10.5 Cell Identifier 34 10.6 Chosen Channel 34 10.7 Classmark Information Type 3 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Request 43 10.23 Security 44 10.24 Segmentation 44 </td <td>10.1</td> <td></td> <td></td>	10.1		
10.4 Cause 34 10.5 Cell Identifier 34 10.6 Chosen Channel 34 10.7 Classmark Information Type 3 34 10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Request 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45 Annex A (informative): Change history 46 <td>10.2</td> <td>Information Element Identifiers</td> <td></td>	10.2	Information Element Identifiers	
10.5 Cell Identifier	10.3	APDU	
10.6 Chosen Channel	10.4	Cause	
10.7 Classmark Information Type 3 34 10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.6 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45	10.5	Cell Identifier	
10.8 Deciphering Keys 35 10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Request 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45 Annex A (informative): Change history 46	10.6	Chosen Channel	
10.9 Geographic Location 35 10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45 Annex A (informative): Change history 46	10.7	Classmark Information Type 3	
10.10 GPS Assistance Data 35 10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45	10.8	Deciphering Keys	
10.11 IMSI 37 10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45	10.9	Geographic Location	35
10.12 ISDN Address 37 10.13 LCS Cause 38 10.14 LCS Client Type. 38 10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45	10.10	GPS Assistance Data	35
10.13 LCS Cause	10.11	IMSI	
10.14 LCS Client Type	10.12	ISDN Address	
10.15 LCS Priority 39 10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45 Annex A (informative): Change history 46	10.13	LCS Cause	
10.16 LCS QoS 39 10.17 LMU Cause 40 10.18 Location Type 40 10.19 Network Element Identity 41 10.20 Positioning Data 42 10.21 Return Error Request 43 10.22 Return Error Cause 43 10.23 Security 44 10.24 Segmentation 44 10.25 Signaling Point Code 45 Annex A (informative): Change history 46	10.14	LCS Client Type	
10.17LMU Cause4010.18Location Type4010.19Network Element Identity4110.20Positioning Data4210.21Return Error Request4310.22Return Error Cause4310.23Security4410.24Segmentation4410.25Signaling Point Code45Annex A (informative): Change history46	10.15	LCS Priority	
10.18Location Type4010.19Network Element Identity4110.20Positioning Data4210.21Return Error Request4310.22Return Error Cause4310.23Security4410.24Segmentation4410.25Signaling Point Code45Annex A (informative): Change history	10.16	LCS QoS	
10.19Network Element Identity4110.20Positioning Data4210.21Return Error Request4310.22Return Error Cause4310.23Security4410.24Segmentation4410.25Signaling Point Code45Annex A (informative): Change history46	10.17	LMU Cause	40
10.20Positioning Data4210.21Return Error Request4310.22Return Error Cause4310.23Security4410.24Segmentation4410.25Signaling Point Code45Annex A (informative): Change history	10.18	Location Type	40
10.21Return Error Request	10.19	Network Element Identity	41
10.22Return Error Cause4310.23Security4410.24Segmentation4410.25Signaling Point Code45Annex A (informative): Change history	10.20	Positioning Data	42
10.23Security	10.21		
10.24 Segmentation	10.22	Return Error Cause	43
10.25 Signaling Point Code	10.23	Security	44
Annex A (informative): Change history	10.24		
	10.25	Signaling Point Code	45
History	Anne	ex A (informative): Change history	46
	Histor	ry	47

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://www.etsi.org/legal/home.htm).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI Technical Committee Special Mobile Group (SMG).

The present document defines the coding of information in an extension of the Base Station System Application Part (BSSAP) that is needed to support location services on interfaces based on use of BSSAP.

The contents of the present document may be subject to continuing work within SMG and may change following formal SMG approval. Should SMG modify the contents of the present document it will then be re-submitted for formal approval procedures by ETSI with an identifying change of release date and an increase in version number as follows:

Version 7.x.y

where:

- 7 GSM Phase 2+ Release 1998.
- x the second digit is incremented for changes of substance, i.e. technical enhancements, corrections, updates, etc.;
- y the third digit is incremented when editorial only changes have been incorporated in the specification.

1 Scope

The present document specifies procedures and information coding that are needed to define and support the BSSAP LCS Extension (BSSAP-LE). The BSSAP-LE message set is applicable to the following GSM interfaces defined in GSM 03.71:

- Lb interface (BSC-SMLC).
- Ls interface (MSC-SMLC).
- Lp interface (SMLC-SMLC).

The present document defines message formats and encoding for BSSAP-LE and the particular subsets of it that are applicable to each of the above interfaces. The present document also defines the support for BSSAP-LE message transfer on each of these interfaces using ITU-T and ANSI versions of SS7 MTP and SCCP. Additional requirements for the above interfaces that are applicable to BSSAP-LE are also defined – e.g. usage of BSSAP (as defined in GSM 04.08 and 08.08) on the Lb interface.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- For this Release 1998 document, references to GSM documents are for Release 1998 versions (version 7.x.y).
- [1] GSM 01.04: "Digital cellular telecommunications system (Phase 2+); Abbreviations and acronyms".
- [1a] GSM 03.32: "Digital cellular telecommunications system (Phase 2+); Universal Geographical Area Description (GAD)".
- [2] GSM 03.71: "Digital cellular telecommunications system (Phase 2+); Location Services (LCS); (Functional description) Stage 2".
- [3] GSM 04.08: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 specification".
- [4] GSM 04.31: "Digital cellular telecommunications system (Phase 2+); Location Services (LCS); Mobile Station (MS) – Serving Mobile Location Center (SMLC); Radio Resource LCS Protocol (RRLP)".
- [5] GSM 04.71: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 Location Services (LCS) specification".
- [6] GSM 08.06: " Digital cellular telecommunications system (Phase 2+); Signaling transport specification mechanism for the Base Station Subsystem Mobile-services Switching Centre (BSS MSC) interface".
- [7] GSM 08.08: "Digital cellular telecommunications system (Phase 2+); Mobile-services Switching Centre – Base Station System (MSC-BSS) interface; Layer 3 specification".
- [8] GSM 08.31: "Digital cellular telecommunications system (Phase 2+); Location Services (LCS); Serving Mobile Location Center (SMLC) – Serving Mobile Location Center (SMLC); SMLC Peer Protocol (SMLCPP)".

[9]	GSM 08.71: "Digital cellular telecommunications system (Phase 2+); Location Services (LCS); Serving Mobile Location Center – Base Station Subsystem (SMLC-BSS) interface Layer 3 specification."
[10]	GSM 09.02: "Digital cellular telecommunications system (Phase 2+); Mobile Application Part (MAP) specification".
[11]	ITU-T Recommendation Q.702: "Specifications of Signalling System No. 7 - Signalling data link".
[12]	ITU-T Recommendation Q.703: "Signalling link".
[13]	ITU-T Recommendation Q.704: "Signalling network functions and messages".
[14]	ITU-T Recommendation Q.707: "Specifications of Signalling System No. 7 - Testing and maintenance".
[15]	ITU-T Recommendation Q.711: "Functional description of the signalling connection control part".
[16]	ITU-T Recommendation Q.712: "Definition and function of SCCP messages".
[17]	ITU-T Recommendation Q.713: "SCCP formats and codes".
[18]	ITU-T Recommendation Q.714: "Signalling connection control part procedures".
[19]	ANSI T1.111 (1996): "Signalling System Number 7 (SS7) – Message Transfer Part (MTP)".
[20]	ANSI T1.112 (1996): "Signalling System Number 7 (SS7) - Signalling Connection Control Part (SCCP)".
[21]	TIA/EIA/IS-J-STD-036: "Enhanced Wireless 9-1-1 Phase II, August 2000".

3 Definitions, abbreviations and symbols

Unless listed below, all definitions, symbols and abbreviations used in the present document are listed in GSM 01.04 and GSM 03.71.

4 Definition of BSSAP-LE

BSSAP-LE is an extension to BSSAP that contains messages and parameters specific to the support of LCS. The following subsets of BSSAP-LE are defined: DTAP-LE, BSSMAP-LE.

4.1 DTAP-LE Messages

DTAP-LE messages are transfered between an SMLC and a Type A LMU and comprise the following individual messages:

- REGISTER;
- FACILITY;
- RELEASE COMPLETE.

The content, encoding and certain procedures associated with DTAP-LE messages are defined in GSM 04.71.

4.2 BSSMAP-LE Messages

BSSMAP-LE messages are transferred between a BSC, MSC and SMLC and comprise the following individual messages:

BSSMAP-LE Positioning Messages

Perform Location Request

Perform Location Response

Perform Location Abort

BSSMAP-LE LMU Control Messages

LMU Connection Request

LMU Connection Accept

LMU Connection Reject

LMU Connection Release

BSSMAP-LE Information Messages

Connection Oriented Information

Connectionless Information

BSSMAP-LE General Messages

Reset

Reset Acknowledge

The content and encoding of BSSMAP-LE messages are defined in the present document.

5 Procedures applicable to use of BSSAP-LE

5.1 Location Request

The Location Request procedure is applicable to the Lb and Ls interfaces. Its purpose is to obtain a location estimate for a target MS that is already in dedicated mode. It is also used to provide an MS with LCS assistance data or with a deciphering key for LCS broadcast assistance data. The initiator of a location request may be either the serving BSC or the visited MSC for the MS. The procedure makes use of SCCP connection oriented signaling on the Lb and Ls interfaces.

5.1.1 Successful Operation

The initiator of the location request (VMSC or serving BSC) sends a BSSMAP-LE Perform Location Request to the SMLC associated with the current serving cell for the target MS. The message contains the following mandatory (M), conditional (C) and optional (O) information, where conditional parameters are required if available.

- Location Type (M);
- Cell Identifier (M);
- Classmark Information Type 3 (C);
- LCS Client Type (C);
- Chosen Channel (C);
- LCS Priority (C);
- LCS QoS (C);
- Requested GPS Assistance Data (C);
- BSSLAP APDU (C).

If requested, the SMLC performs positioning of the target MS using a particular position method or a combination of more than one positioning method. If the Classmark Information Type 3 IE is not present, the SMLC shall instigate only network based positioning methods (e.g. TOA or TA but not GPS or E-OTD). Alternatively, if requested otherwise, the SMLC may provide positioning assistance data to the MS. The SMLC may invoke the following other BSSAP-LE procedures to perform these procedures:

- connection oriented information transfer;
- connectionless information transfer;
- LMU connection establishment;
- LMU connection release;
- DTAP-LE information transfer.

For an SMLC accessed over the Lb interface by a BSC initiator, additional procedures defined in GSM 04.08 and GSM 08.08 may also be performed. If a location estimate was requested and was subsequently obtained satisfying the required LCS QoS, the SMLC shall return a BSSMAP-LE Perform Location Response to the initiator of the location request (serving BSC or VMSC). This message contains the following mandatory, conditional and optional parameters.

- Location Estimate (M);
- Positioning Data (C).

Restrictions on the geographic shape encoded within the Location Estimate parameter may exist for certain LCS client types. The SMLC shall comply with any restrictions defined in GSM and, in a particular country, with any restrictions defined for a specific LCS client type in relevant national standards. For example, in the US, national interim standard TIA/EIA/IS-J-STD-036 restricts the geographic shape for an emergency services LCS client to minimally either an "ellipsoid point" or an "ellipsoid point with uncertainty circle and confidence" as defined in GSM 03.32.

If assistance data was instead requested for an MS and the SMLC was able successfully to transfer this to the MS, the SMLC shall return a BSSMAP-LE Perform Location Response to the initiator of the location request (serving BSC or VMSC). This message shall contain no parameters. The absence of an LCS Cause parameter in this case implies that the transfer was successful.

Otherwise, if a deciphering key was requested for LCS broadcast assistance data and the SMLC has access to the appropriate keys, the SMLC shall return a BSSMAP-LE Perform Location Response to the initiator of the location request (serving BSC or VMSC). This message contains the following mandatory parameters.

- Deciphering Keys (M).

5.1.2 Unsuccessful Operation

If the SMLC is unable to obtain any of the location information requested or none of the information obtained satisfies the requested LCS QoS or if requested LCS assistance data could not be transferred or requested deciphering keys for broadcast assistance data could not be returned, the SMLC shall return a BSSMAP-LE Perform Location Response to the initiator of the Location Request carrying the following parameters:

- LCS Cause (M);
- Positioning Data (O).

If assistance data or deciphering keys for a specific positioning method is not supported in the network or in the location area, the SMLC shall indicate this with LCS Cause value "Position method failure" accompanied with diagnostic value "Position Method Not Available in Network" or "Position Method Not Available in Location Area".

5.1.3 Abnormal Conditions

If an ongoing location request is preempted at the initiator by an inter-BSC handover or if the main signaling link to the target MS is lost or released or if there is a timeout waiting for the positioning response, the initiator shall send a BSSMAP-LE Perform Location Abort to the SMLC containing the following parameters.

- LCS Cause (M).

On receipt of this message, the SMLC shall stop positioning of the target MS and may release any resources (e.g. LMUs) previously allocated. If the SMLC has not yet returned a BSSMAP-LE Perform Location Response to the initiator, it shall return this message containing an LCS Cause indicating an abort and, optionally, positioning data. The initiator shall then release the SCCP connection. If the SMLC cannot proceed with positioning due to some protocol violation or error condition (e.g. inter-BSC handover indication received from the serving BSC), it shall return a BSSMAP-LE Perform Location Response to the initiator containing an LCS cause and, optionally, positioning data. The initiator need not reply at the BSSAP-LE level to this message. However, the initiator may return a BSSMAP-LE perform Location Abort which shall not be treated as an error by the SMLC.

5.1.4 Overload

If the SMLC is in an overload condition, it may reject a BSSMAP-LE Perform Location request by returning a BSSMAP-LE Perform Location response containing an LCS Cause parameter indicating congestion. The initiator of the location service request (MSC or BSC) may reduce the frequency of future location service requests until rejection due to overload has ceased. In reducing the frequency of location service requests, an MSC or BSC shall reduce lower priority requests, to zero if necessary, before reducing the frequency of higher priority requests. An SMLC shall similarly reject location service requests of a lower priority, to zero if necessary, due to overload before rejecting location service requests of a higher priority. An SMLC in an overload condition may optionally employ the following procedures to alleviate overload:

- a) Allow higher priority location service requests to preempt lower priority requests for which location service procedures are already in progress;
- b) Abort lower priority location service requests already in progress;
- c) Reduce the supported QoS for lower priority requests for a location estimate e.g. by reducing accuracy or increasing response time;
- d) Employ MS based positioning methods, where supported by the target MS and SMLC, rather than MS assisted or network based methods (except TA).

The priority of a location service request shall be defined according to the value in the LCS Priority parameter. If this parameter is absent in a BSSMAP-LE Perform Location request, the lowest priority shall be assumed.

5.2 Connection Oriented Information Transfer

The Connection Oriented Information transfer procedure is applicable to the Lb and Ls interfaces. It enables both way transfer of BSSLAP messages between an SMLC and the BSC serving a target MS. The initiator of the procedure can be either the BSC serving the target MS, the visited MSC for the target MS or the SMLC. The procedure is only valid while a location request procedure for the target MS is ongoing. The procedure makes use of SCCP connection oriented signaling on the Lb and Ls interfaces and uses the same SCCP connection as the location request procedure for the particular target MS.

5.2.1 Successful Operation

An SMLC, MSC or BSC with a BSSLAP message or message segment to transfer concerning a particular target MS sends a BSSMAP-LE Connection Oriented Information message to a recipient carrying the following parameters:

- BSSLAP APDU (M);
- Segmentation (C).

If the sender is an NSS based SMLC, the message is transferred to the VMSC for the target MS. The recipient MSC shall then transfer the message to the serving BSC using procedures defined in GSM 08.08.

If the sender is a BSS based SMLC, the message is transferred to the serving BSC for the target MS. The BSC shall then perform the positioning operation requested by the BSSLAP APDU (refer to GSM 08.71). If the BSSLAP APDU contains an RRLP APDU, the BSC shall transfer this to the target MS.

If the sender is a BSC or MSC and the intended recipient is the SMLC for a target MS, the message is transferred to the SMLC. The SMLC shall then perform interpretation of the BSSLAP APDU.

5.2.2 Abnormal Conditions

At an intermediate entity, if a received BSSMAP-LE Connection Oriented Information message contains unrecognized information or if the message cannot be sent on, the message shall be discarded.

At the receipient entity. if a received BSSMAP-LE Connectioin Oriented Information message contains invalid or unrecognized information as defined for BSSAP-LE, any ongoing positioning procedure shall be terminated and associated resources may be released. If the receipient is a BSC, the SMLC shall be notified – e.g. using a BSSLAP Reject or Abort. If the receipient is an SMLC, a new positioning attempt (e.g. using a different position method) may be started.

5.2.3 Segmentation

The Segmentation parameter shall not be included if the BSSLAP message is not segmented.

If the size of an embedded BSSLAP message is too large to fit into one BSSMAP-LE message, the sending entity divides the BSSLAP message to a necessary number of BSSMAP-LE messages each containing a BSSLAP APDU IE and a Segmentation IE. In the BSSLAP APDU IE it includes as many octets as possible.

The segmentation IE contains a segment number field and an indication of the final segment. Message identification shall not be used. The order number of a segment in the Segment Number field in the Segmentation IE is incremented by one starting from zero, i.e. the value is 0 for the first segment, 1 for the next and so on. The receiving entity may use the segment number in order to recognize the start of a new BSSLAP message and verify that all segments were reliably transferred.

In case of handover interrupting the information transfer procedure, the exception procedures described in GSM 03.71 shall be used.

5.3 Connectionless Information Transfer

The Connectionless Information transfer procedure is applicable to the Lb, Ls and Lp interfaces. It enables both way transfer of LLP messages between an SMLC and a Type B LMU. The procedure also enables both way transfer of SMLCPP messages between two SMLCs. The initiator of the procedure can be a BSC, MSC or SMLC. The procedure makes use of SCCP connectionless signaling.

5.3.1 Successful Operation

An SMLC, MSC or BSC needing to transfer an LLP message concerning a Type B LMU or an SMLCPP message sends a BSSMAP-LE Connectionless Information message to a recipient carrying the following parameters:

- Source Entity (M);
- Destination Entity (M);
- APDU (M);
- Segmentation (C);
- Return Error Request (O).

The source entity identifies the sender. The recipient entity identifies the final destination. The Segmentation IE provides segmentation and message identification for a segmented APDU. The Return Error Request may be included to request notification in the event of unsuccessful transfer and indicate the type of notification needed. If the recipient entity is not the final destination, the recipient shall transfer the BSSMAP-LE Connectionless Information message to either the final destination or an intermediate MSC or BSC capable of onward transfer to the final destination.

5.3.2 Unsuccessful Operation

If the message cannot be transferred by an intermediate entity or destination entity (e.g. reassembly of a segmented message fails) and the Return Error Request is not included, the message shall be discarded. If the Return Error Request is included, the intermediate or destination entity shall, depending on the Return Error Request type, send a BSSMAP-LE Connectionless Information message to, or towards, the original source containing the following parameters:

- Source Entity (M);
- Destination Entity (M);
- APDU (C);
- Segmentation (C);
- Return Error Cause (M).

The Source entity shall indicate the Destination Entity in the original received message. The Destination Entity shall indicate the Source Entity in the original message. The Return Error cause shall indicate the reason for unsuccessful transfer. The APDU and Segmention IEs shall, depending on the the Return Error Request type, contain any originally received APDU and Segmentation IEs, respectively.

If a received BSSMAP-LE Connectionless Information message containing a Return Error Cause cannot be transferred by an intermediate entity, it shall be discarded with no return error message.

5.3.3 Abnormal Conditions

At an intermediate entity, if a received BSSMAP-LE Connectionless Information message contains unrecognized or invalid information, the message shall be discarded.

At the recipient entity. if a received BSSMAP-LE Connectionless Information message contains invalid or unrecognized information as defined for BSSAP-LE, the message shall be discarded.

5.3.4 Segmentation

The Segmentation parameter shall not be included if the APDU is not segmented.

If the size of an APDU containing an embedded SMLCPP message is too large to fit into one BSSMAP-LE message, the sending entity divides the SMLCPP message to a necessary number of BSSMAP-LE messages each containing an APDU IE and a Segmentation IE. In the APDU IE it includes as many octets as possible

The segmentation IE contains a segment number, an indication of the final segment and the message ID. The order number of a segment in the Segment Number field in the APDU IE is incremented by one starting from zero, i.e. the value is 0 for the first segment, 1 for the next and so on. The receiving entity recognizes that a segment is missing or duplicated, when:

- There is more than one segment with the same segment number and same Message ID.
- The segment number does not increase by steps of one starting from zero.

If the recipient recognizes a missing or duplicated element, it shall discard the entire message (i.e. all received segment with the message ID).

The message identity in the Message ID field in the APDU IE is used to recognize a particular message to which that segment belongs. The sending entity can select any of the available values (0-65535) that is not currently used between it and the receiving entity.

If an APDU segment is received with Return Error cause IE (due to invocation of the return error option), reassembly does not apply and the APDU segment and error cause maybe returned to the original source application.

5.4 LMU Connection Establishment

The LMU Connection Establishment procedure is applicable to the Ls interface. Its purpose is to establish a signaling connection between an SMLC and Type A LMU via the visted MSC for the LMU. The procedure can be initiated by either the SMLC or MSC. The procedure makes use of SCCP connection oriented signaling on the Ls interface.

5.4.1 LMU Connection Establishment initiated by the SMLC

5.4.1.1 Successful Operation

The SMLC sends a BSSMAP-LE LMU Connection Request message to the VMSC for the LMU. This message contains the following parameters.

- IMSI (M);
- Sender Address (O);
- Security (C).

The IMSI identifies the LMU. The sender address, if included, identifies the SMLC. The Security parameter shall be included if authentication or ciphering of the LMU are required. On receipt of this message, the MSC shall attempt to establish a signalling link to the LMU (refer to GSM 03.71). Authentication and ciphering shall be invoked if requested by the SMLC. Once the signaling link has been established, the MSC shall return a BSSMAP-LE LMU Connection Accept to the SMLC with the following parameters.

- Call Number (O).

The call number shall be included if the MSC has the capability to support signaling to an LMU using a traffic channel (refer to GSM 03.71).

5.4.1.2 Unsuccessful Operation

If the LMU is not recognized in the MSC (e.g. no VLR record) or a signaling link cannot be setup to the LMU (e.g. paging of the LMU fails) or authentication or ciphering cannot be performed when requested by the SMLC, any signaling link to the LMU shall be released, if not required for other MM or CM procedures and a BSSMAP-LE LMU Connection Reject shall be returned to the SMLC with the following parameters.

- Reject Cause (M).

5.4.1.3 Abnormal Conditions

If the SMLC or MSC detects release of the SCCP connection on the Ls interface for an LMU, the connection establishment procedure shall be considered to have failed and any associated resources may be released.

5.4.2 LMU Connection Establishment initiated by the MSC

5.4.2.1 Successful Operation

The MSC shall initiate the LMU connection establishment procedure when no LMU connection to the SMLC currently exists and the MSC receives a CM Service Request from the LMU specifying the LCS service. The MSC shall then send a BSSMAP-LE LMU Connection Request message to the SMLC associated with either the IMSI or current cell location of the LMU. This message shall contain the following parameters.

- IMSI (M);
- Sender Address (M);
- Call Number (C).

The IMSI identifies the LMU. The sender address identifies the MSC. The call number shall be included if the MSC has the capability to support signaling to an LMU using a traffic channel (refer to GSM 03.71). On receipt of this message, the SMLC shall return a BSSMAP-LE LMU Connection Accept to the MSC with the following parameters.

- Security (C).

The Security parameter shall be included if authentication or ciphering of the LMU are required On receipt of this message, the MSC shall perform authentication and/or ciphering if requested by the SMLC and shall complete the establishment of an MM connection to the LMU to support LCS.

5.4.2.2 Unsuccessful Operation

If the LMU is not recognized in the SMLC or a signaling connection cannot be supported (e.g. due to congestion), a BSSMAP-LE LMU Connection Reject shall be returned to the MSC with the following parameters.

- Reject Cause (M).

The MSC shall then reject the CM service request from the LMU.

5.4.2.3 Abnormal Conditions

If the SMLC or MSC detects release of the SCCP connection on the Ls interface for an LMU, the connection establishment procedure shall be considered to have failed and any associated resources may be released.

5.5 LMU Connection Release

The LMU Connection Release procedure is applicable to the Ls interface. Its purpose is to release a signaling connection between an SMLC and Type A LMU. The procedure can be initiated by either the SMLC or MSC. The procedure makes use of SCCP connection oriented signaling on the Ls interface.

5.5.1 LMU Connection Release initiated by the SMLC

5.5.1.1 Successful Operation

The SMLC sends a BSSMAP-LE LMU Connection Release message to the VMSC for the LMU. This message contains the following parameters.

- Release Cause (M).

On receipt of this message, the MSC shall release the main signaling link to the LMU unless required for other ongoing MM and CM procedures in the MSC. The MSC shall also initiate release of the SCCP connection to the SMLC for the LMU.

5.5.1.2 Abnormal Conditions

The SMLC may initiate release of the signaling connection to an LMU by initiating release of the SCCP connection for the LMU to the MSC. The MSC shall then release the main signaling link to the LMU unless required for other ongoing MM or CM procedures.

5.5.2 LMU Connection Release initiated by the MSC

5.5.2.1 Successful Operation

The MSC shall initiate release of an LMU connection to an SMLC if the main signaling link to the LMU is released. The MSC sends a BSSMAP-LE LMU Connection Release message to the SMLC for the LMU. This message contains the following parameters.

- Release Cause (M).

On receipt of this message, the SMLC should initiate release of the SCCP connection to the MSC for the LMU.

5.5.2.2 Abnormal Conditions

The MSC may initiate release of the signaling connection between an SMLC and LMU by initiating release of the SCCP connection for the LMU to the SMLC.

5.6 DTAP-LE Information Transfer

The DTAP-LE Information transfer procedure is applicable to the Ls interface. It supports bothway LLP message transfer between an NSS based SMLC and Type A LMU. The procedure is only valid when a signaling connection between an SMLC and Type A LMU has been established. The procedure uses SCCP connection oriented signaling using the SCCP connection previously established between the SMLC and MSC when the signaling connection between the SMLC and LMU was established.

5.6.1 DTAP-LE Information Transfer Initiated by the SMLC

The SMLC initiates the procedure when it has an LLP message to transfer to a type A LMU. The message may first be segmented. The SMLC shall then transfer each LLP segment to the MSC inside a DTAP-LE REGISTER, FACILITY or RELEASE COMPLETE message. The usage of these messages is as defined in GSM 04.71. The MSC relays each DTAP-LE message to the LMU.

5.6.2 DTAP-LE Information Transfer Initiated by the MSC

The MSC initiates the procedure when a DTAP message is received from an LMU containing the LCS protocol discriminator. The MSC then relays the DTAP message to the SMLC.

5.7 Reset

The reset procedure is an optional procedure within a PLMN applicable to the Lb and Ls interfaces. It enables an SMLC, MSC or BSC that has undergone a failure with loss of memory of LMU signalling connections and location service transactions to indicate this to a partner entity (SMLC, MSC or BSC). The recipient entity can then release its own connection and transaction resources. The reset procedure may not be applicable when only a limited part of an SMLC, MSC or BSC has suffered a failure, since error recovery procedures specific to individual connections and transactions may then be used.

5.7.1 Normal Operation

In the event of a failure at an SMLC, MSC or BSC that results in the loss of LMU connection information and location service information, a Reset message may be sent to the partner SMLC, MSC or BSC across the Lb or Ls interface. The message carries no parameters and is sent using connectionless SCCP procedures. The sending entity shall ensure that all information on LMU connections and location service transactions to the other entity is reinitialized to indicate no existing connections and transactions.

On receiving a Reset message, the recipient SMLC, MSC or BSC shall clear all references and state information for LMU connections and location service transactions to the sending entity and shall release any associated resources including, in the case of a recipient MSC or BSC, any signaling connections or circuit connections to LMUs controlled by a sending SMLC. The recipient entity shall then return a Reset Acknowledge message.

For a reset on the Lb interface where the SMLC and BSC support circuit connections to LMUs (in addition to signaling connections), the entity that does not control assignment of circuits shall initiate blocking procedures (Block or Circuit Group Block procedure as defined in GSM 08.08) for all circuits that are locally blocked on its own side. The initiation of blocking may occur before sending or receipt, whichever applies, of the Reset Acknowledge.

5.7.2 Abnormal Conditions

If an initiating SMLC, MSC or BSC receives no response to a Reset message following an O&M administered time period, it shall resend the Reset message. For successive no response conditions, sending shall occur a maximum of "n" times, where "n" is an O&M administered parameter. Following "n" unsuccessful, reset attempts, the procedure shall be terminated and maintenance shall be informed.

6 Usage of BSSAP-LE and BSSAP on the Lb Interface

6.1 Applicable Message Sets

The following BSSAP-LE message sets are applicable to the Lb interface between an SMLC and BSC:

- All DTAP-LE messages;
- All BSSMAP-LE positioning messages;
- All BSSMAP-LE information messages;
- All BSSMAP-LE general messages.

The following BSSMAP messages defined in GSM 08.08 are applicable to the Lb interface to support signaling to a Type A LMU using an SDCCH:

- Cipher Mode Command (SMLC to BSC);
- Cipher Mode Complete (BSC to SMLC);
- Cipher Mode Reject (BSC to SMLC);
- Classmark Update (BSC to SMLC);
- Clear Command (SMLC to BSC);

- Clear Complete (BSC to SMLC);
- Clear Request (BSC to SMLC);
- Complete Layer 3 Information (BSC to SMLC);
- Confusion (BSC to SMLC);
- Handover Required (BSC to SMLC);
- Handover Required Reject (SMLC to BSC);
- Handover Performed (BSC to SMLC);
- Paging (SMLC to BSC).

The following additional BSSMAP messages defined in GSM 08.08 are applicable to the Lb interface to support signaling to a Type A LMU using a TCH:

- Assignment Request (SMLC to BSC);
- Assignment Complete (BSC to SMLC);
- Assignment Failure (BSC to SMLC);
- Block (bothway);
- Blocking Acknowledge (bothway);
- Unblock (bothway);
- Unblocking Ack. (bothway);
- Unequipped circuit (bothway).

The following DTAP messages defined in GSM 04.08 are applicable to the Lb interface to support signaling to a Type A LMU using an SDCCH:

- RR Paging Response;
- All MM Messages.

The following additional CM level DTAP messages defined in GSM 04.08 are applicable to the Lb interface to support signaling to a Type A LMU using a TCH.

- Call Confirmed (LMU to SMLC).
- Connect (LMU to SMLC).
- Connect Acknowledge (SMLC to LMU).
- Setup (SMLC to LMU).
- Disconnect (bothway).
- Release (bothway).
- Release Complete (bothway).

6.2 MTP Functions

Except where defined otherwise in the present document, MTP requirements on the Lb interface for the BSC are the same as those defined for the A interface in GSM 08.06 for the BSC. MTP requirements on the Lb interface for the SMLC are the same as those defined for the A interface in GSM 08.06 for the MSC. STP functions are not required in the SMLC and a single signaling link set may be used between the BSC and SMLC. The BSC shall be homed to a single SMLC and shall only use the Lb signaling interface for signaling communication with the SMLC.

6.3 SCCP Functions

6.3.1 General

Except where defined otherwise in the present document, SCCP requirements on the Lb interface for the BSC are the same as those defined for the A interface in GSM 08.06 for the BSC. SCCP requirements on the Lb interface for the SMLC are the same as those defined for the A interface in GSM 08.06 for the MSC. Requirements concerning support of a type A LMU are the same as those in GSM 08.06 regarding support of a normal MS. In particular, usage of SCCP to transfer DTAP-LE messages between a type A LMU and SMLC are the same as those regarding transfer of other DTAP messages.

6.3.2 Modifications for Connectionless SCCP

Connectionless SCCP messages and procedures are used to transfer BSSMAP-LE Connectionless Information messages and those BSSMAP messages applicable to the Lb interface for which connectionless SCCP transfer is defined in GSM 08.08. Refer to GSM 03.71 for a description of the procedures in the SMLC and BSC. SCCP protocol class 1 shall be used when multiple BSSMAP-LE messages are transferred containing segments of a single fragmented LLP or SMLCPP message.

6.3.3 Modifications for Connection Oriented SCCP

Use of connection oriented SCCP messages and procedures on the Lb interfaces to support signaling access to a type A LMU using DTAP-LE, DTAP and BSSMAP messages is the same as that defined in GSM 08.06 on the A interface to support access to a normal MS.

To support positioning of a target MS, connection oriented SCCP messages and procedures using protocol class 2 shall be used to transfer BSSMAP-LE positioning messages and BSSMAP-LE Connection Oriented Information messages over the Lb interface. A separate dedicated SCCP connection shall be used to support positioning for each target MS. Connection establishment shall be instigated by the BSC when the positioning attempt commences. Connection release shall be instigated by either the BSC or SMLC when the positioning attempt has been completed or has failed.

Transfer of BSSMAP-LE messages using an SCCP connection to support positioning of a particular target MS is shown in the following figure. In particular, a BSSMAP-LE message shall be included in the data field of the SCCP CR and a BSSMAP-LE message may be included in the data field of an SCCP CC, CREF or RLSD message.

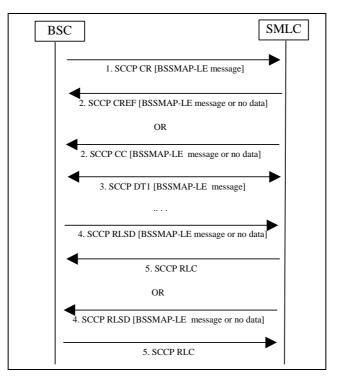


Figure 6.3.3/09.31: SCCP Connection Oriented Signaling on Lb Interface for Positioning

6.3.4 Contents of the SCCP Data Field

The contents of the SCCP data field are the same as that defined for the A interface in GSM 08.06 for MSC-BSC signaling. In particular, the same conventions are used to transfer and discriminate between any BSSAP and DTAP message contained within the SCCP data field. Since all BSSAP-LE messages applicable to the Lb interface use the same encoding as for the A interface, the conventions used to discriminate a BSSMAP message are applicable to any BSSMAP-LE message on the Lb interface, while the conventions for a DTAP message apply to any DTAP-LE message.

6.3.5 Abnormal Conditions

If a user-out-of-service information or signalling-point-inaccessible information is received by a BSC or SMLC, no new attempt to establish SCCP connections towards the affected point code shall be started until the corresponding user-in-service information or signalling-point-accessible information is received.

When a user-out-of-service information or signalling-point-inaccessible is received, an optional timer may be started. If the timer expires all the SCCP connections towards the affected point code shall be released. When the user-in-service or signalling-point-accessible is received, the timer is stopped.

If an SCCP connection is released, the optional timer expires or a connection refusal is received, any dependent BSSAP-LE procedure between the SMLC and BSC shall be terminated and, at a BSC, any associated SCCP connection or location service transaction to an MSC, or any associated signaling or circuit connection to an LMU, shall be released using appropriate signalling procedures.

7 Use of BSSAP-LE on the Ls Interface

7.1 Applicable Message Sets

The following BSSAP-LE messages are applicable to the Ls interface between an MSC and SMLC:

- All DTAP-LE messages;
- All BSSMAP-LE positioning messages;
- All BSSMAP-LE LMU control messages;
- All BSSMAP-LE information messages;
- All BSSMAP-LE general messages.

7.2 MTP Functions

SS7 signaling on the Ls interface may be supported using 56 kbps or 64 kbps digital signaling channels. These may be supported within either E1 or T1 physical links.

For E1 links or where ITU-T/ITU SS7 signaling is applicable, the MTP functions as specified in ITU-T Recommendations Q.702, Q.703, Q.704 and Q.707 are applicable. For T1 links or where ANSI SS7 signaling is applicable, the MTP functions as specified in ANSI T1.111 are applicable. For the SMLC, the requirements in these recommendations for a signaling end point are applicable. For the MSC, the requirements in these recommendations for a signaling transfer point (STP) are applicable. MSC support of STP functions is only required for situations in which the SMLC has no signaling links to an STP and needs to access other network entities to which there are no direct point-to-point signaling links.

Where an SMLC supports direct signaling links to one or more MSCs only and has no signaling links to an STP, certain exceptions and modifications to normal ITU-T and ANSI requirements may be applied within a PLMN administration.

7.3 SCCP functions

7.3.1 General

For E1 links or where ITU-T/ITU SS7 signaling is applicable, the SCCP functions as specified in either ITU-T Blue Book Recommendations Q.711, Q.712, Q.713 and Q.714 or ITU White Book Recommendations Q.711, Q.712, Q.713 and Q.714 are applicable, as amended by the exceptions and modifications defined here. For T1 links or where ANSI SS7 signaling is applicable, the SCCP functions as specified in ANSI T1.112 are applicable, as amended by the exceptions and modifications defined here.

Several functions of the SCCP are not used on the Ls interface: error detection, receipt confirmation, flow control.

The segmenting/reassembling function may be used if the total message length exceeds the maximum allowed message length that can be carried by the MTP.

7.3.2 Allowed Exceptions to ITU-T Recommendations Q.711-714

Only the following SCCP messages are applicable to the Ls interface:

- Connection Confirm (CC);
- Connection Request (CR);
- Connection Refused (CREF);
- Data Form 1 (DT1);
- Inactivity Test (IT);
- Released (RLSD);
- Release Complete (RLC);
- Subsystem Allowed (SSA);
- Subsystem Prohibited (SSP);
- Subsystem Status Test (SST);
- Unitdata (UDT);
- Unitdata Service (UDTS).

Support of only SCCP protocol classes 0, 1 and 2 is required. For protocol class 2, the "credit" parameter field and the "sequencing/segmenting" parameter fields are not used, but the parameters must still be included in the Inactivity Test (IT) message for syntax reasons. Negotiation of protocol class and flow control is not required for protocol class 2.

The SCCP called party address in a CR or UDT may contain only the subsystem number (SSN) or a signaling point code (SPC) plus SSN or a global title. Use of a global title is not required for SMLC to MSC signaling within the same PLMN. SSN values applicable to the Ls interface are defined in GSM 03.03.

For protocol class 2, support of only a single connection section is required. Use of multiple connection sections is a national concern.

7.3.3 Allowed Exceptions to ANSI T1.112

Only the following SCCP messages are applicable to the Ls interface:

- Connection Confirm (CC);
- Connection Request (CR);
- Connection Refused (CREF);
- Data Form 1 (DT1);
- Inactivity Test (IT);
- Released (RLSD);
- Release Complete (RLC);
- Subsystem Allowed (SSA);
- Subsystem Prohibited (SSP);
- Subsystem Status Test (SST);
- Unitdata (UDT);
- Unitdata Service (UDTS).

Support of only SCCP protocol classes 0, 1 and 2 is required. For protocol class 2, the "credit" parameter field and the "sequencing/segmenting" parameter fields are not used, but the parameters must still be included in the Inactivity Test (IT) message for syntax reasons. Negotiation of protocol class and flow control is not required for protocol class 2.

The SCCP called party address in a CR or UDT may contain only the subsystem number (SSN) or a signaling point code (SPC) plus SSN or a global title. Use of a global title is not required for SMLC to MSC signaling within the same PLMN. SSN values applicable to the Ls interface are defined in GSM 03.03.

For protocol class 2, support of only a single connection section is required. Use of multiple connection sections is a national concern.


7.3.4 Usage of Connectionless SCCP

Connectionless SCCP messages and procedures are used to transfer BSSMAP-LE Connectionless Information messages. Refer to GSM 03.71 for a description of the procedures in the SMLC and MSC. SCCP protocol class 1 shall be used when multiple BSSMAP-LE messages are transferred containing segments of a single fragmented LLP or SMLCPP message.

7.3.5 Usage of Connection Oriented SCCP

Connection oriented SCCP messages and procedures for SCCP protocol class 2 shall be used to transfer BSSMAP-LE positioning messages, BSSMAP-LE LMU control messages, BSSMAP-LE Connection Oriented Information messages and DTAP-LE messages. A separate dedicated SCCP connection shall be used to support either positioning for each target MS or signaling to each type A LMU. Connection establishment shall be instigated when the positioning attempt commences or when a signaling link to a type A LMU needs to be established. Connection release shall be instigated when the positioning attempt has been completed or has failed or when a signaling link to a type A LMU needs to be released. The MSC is normally expected to release the SCCP connection to the SMLC.

Transfer of BSSAP-LE messages within an SCCP connection is shown in the following figure. In particular, a BSSMAP-LE message shall be included in the data field of any SCCP CR and a BSSMAP-LE message may be included in the data fields of an SCCP CC, CREF or RLSD message.

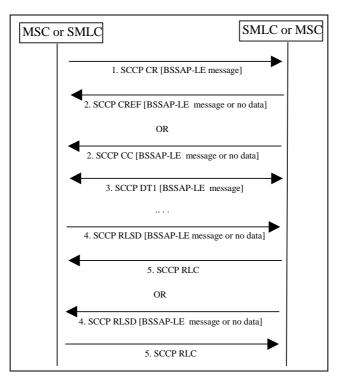



7.3.6 Contents of the SCCP Data Field

The contents of the SCCP data field for BSSMAP-LE and DTAP-LE messages are shown in the following figures.




Figure 7.3.6-1/GSM 09.31: SCCP Data Field for a BSSMAP-LE Message

[8 7 6 5 4 3 2							
Octet 1	0	0	0	0	0	0	0	D=1
Octet 2 DLCI								
Octet 3	Length indicator = n							
Octet 4 to Octet n+3	Octet 4 to DTAP-LE Message Contents							

Figure 7.3.6-2/GSM 09.31: SCCP Data Field for a DTAP-LE Message

The Discrimination Indicator is coded in bit 1 of octet one and indicates the type of the BSSAP-LE message.

Discrmination Indicator	BSSAP-LE Message Type
0	BSSMAP-LE
1	DTAP-LE

The DLCI in octet 2 is applicable only to DTAP-LE messages and is coded as defined for the A interface in GSM 08.06 for DTAP. For signaling to a type A LMU using an SDCCH and SAPI=0, the value of the DLCI is 10000000.

The length indicator is coded in one octet, and is the binary representation of the number of octets of the subsequent BSSMAP-LE or DTAP-LE message parameter.

7.3.7 Content of DTAP-LE Messages

DTAP-LE messages transferred on the Ls interface are encoded as defined in GSM 04.71. In particular, in octet 1 of any DTAP-LE message, the Protocol discriminator shall indicate LCS and the transcation identifier (TI) shall indicate the transcation between the SMLC and type A LMU. The TI shall be assigned by the SMLC if the transcation is originated from the SMLC and by the LMU if the originator is the LMU. The MSC shall not change the value of the TI when transferring any DTAP-LE message from the SMLC to the LMU or from the LMU to the SMLC.

7.3.8 Abnormal Conditions

If a user-out-of-service information or signalling-point-inaccessible information is received by an MSC or SMLC, no new attempt to establish SCCP connections towards the affected point code shall be started until the corresponding user-in-service information or signalling-point-accessible information is received.

When a user-out-of-service information or signalling-point-inaccessible is received, an optional timer may be started. If the timer expires all the SCCP connections towards the affected point code shall be released. When the user-in-service or signalling-point-accessible is received, the timer is stopped.

If an SCCP connection is released, the optional timer expires or a connection refusal is received, any dependent BSSAP-LE procedure between the SMLC and MSC shall be terminated and, at an MSC, any associated SCCP connection or location service transaction to a BSC, or any associated signaling or circuit connection to an LMU, shall be released using appropriate signalling procedures.

8 Use of BSSAP-LE on the Lp Interface

8.1 Applicable Message Sets

The following BSSAP-LE messages are applicable to the Lp interface between an SMLC and a peer SMLC.

- BSSMAP-LE Connectionless Information message.

8.2 MTP Functions

SS7 signaling on the Lp interface may be supported using 56 kbps or 64 kbps digital signaling channels. These may be supported within either E1 or T1 physical links.

Two SMLCs may be connected by direct point-to-point SS7 signaling links or links may be employed via intermediate STPs. Alternatively, signaling transfer between two SMLCs may be supported via intermediate BSCs and/or MSCs using the Lb and/or Ls interfaces. Signaling requirements to support message transfer on the Lp interface via an intermediate Lb or Ls interface are the same as those defined elsewhere in the present document for these interfaces. This section defines the requirements applicable to direct SMLC-SMLC SS7 links and SS7 links from an SMLC to an STP.

For E1 links or where ITU-T/ITU SS7 signaling is applicable, the MTP functions as specified in ITU-T Recommendations Q.702, Q.703, Q.704 and Q.707 are applicable. For T1 links or where ANSI SS7 signaling is applicable, the MTP functions as specified in ANSI T1.111 are applicable. Only the requirements in these recommendations for a signaling end point are applicable.

Where an SMLC has no signaling links to an STP, certain exceptions and modifications to normal ITU-T and ANSI requirements may be applied within a PLMN administration.

8.3 SCCP functions

8.3.1 General

For E1 links or where ITU-T/ITU SS7 signaling is applicable, the SCCP functions as specified in either ITU-T Blue Book Recommendations Q.711, Q.712, Q.713 and Q.714 or ITU White Book Recommendations Q.711, Q.712, Q.713 and Q.714 are applicable, as amended by the exceptions and modifications defined here. For T1 links or where ANSI SS7 signaling is applicable, the MTP functions as specified in ANSI T1.112 are applicable, as amended by the exceptions and modifications defined here.

8.3.2 Allowed Exceptions to ITU-T Recommendations Q.711-714

Only the following SCCP messages are applicable to the Lp interface:

- Inactivity Test (IT);
- Subsystem Allowed (SSA);
- Subsystem Prohibited (SSP);
- Subsystem Status Test (SST);
- Unitdata (UDT);
- Unitdata Service (UDTS).

Support of only SCCP protocol classes 0 and 1 is required.

The SCCP called party address in a UDT may contain only the subsystem number (SSN) or a signaling point code (SPC) plus SSN or a global title. Use of a global title is not required for SMLC to SMLC signaling within the same PLMN. SSN values applicable to the Lp interface are defined in GSM 03.03.

8.3.3 Allowed Exceptions to ANSI T1.112

Only the following SCCP messages are applicable to the Lp interface:

- Inactivity Test (IT);
- Subsystem Allowed (SSA);
- Subsystem Prohibited (SSP);
- Subsystem Status Test (SST);
- Unitdata (UDT);
- Unitdata Service (UDTS).

Support of only SCCP protocol classes 0 and 1 is required.

The SCCP called party address in a UDT may contain only the subsystem number (SSN) or a signaling point code (SPC) plus SSN or a global title. Use of a global title is not required for SMLC to SMLC signaling within the same PLMN. SSN values applicable to the Lp interface are defined in GSM 03.03.

8.3.4 Usage of Connectionless SCCP

Connectionless SCCP messages and procedures shall be used to transfer BSSMAP-LE Connectionless Information messages. Refer to GSM 03.71 for a description of the procedures in the SMLC. SCCP protocol class 1 shall be used when multiple BSSMAP-LE messages are sent containing segments of a single fragmented SMLCPP message.

8.3.5 Usage of Connection Oriented SCCP

Connection oriented SCCP messages and procedures are not applicable to the Lp interface.

8.3.6 Contents of the SCCP Data Field

The contents of the SCCP data field is shown in the following figure.

[8	7	6	5	4	3	2	1
Octet 1	0	0	0	0	0	0	0	D=0
Octet 2 Length indicator = n								
Octet 3 to Octet n+2	Octet 3 to BSSMAP-LE Message Contents							

Figure 8.3.6-1/GSM 09.31: SCCP Data Field for a BSSMAP-LE Message

The Discrmination Indicator is coded in bit 1 of octet one and indicates the type of the BSSAP-LE message.

Discrmination Indicator BS	SAP-LE Message Type
0	BSSMAP-LE

The length indicator is coded in one octet, and is the binary representation of the number of octets of the subsequent BSSMAP-LE message parameter.

9 Message Functional Definitions and Contents

9.1 BSSMAP-LE PERFORM LOCATION REQUEST message

This message is sent to request a location estimate for a target MS and contains sufficient information to enable location according to the required QoS using any positioning method supported by the PLMN and, where necessary, MS. The message is also used to request LCS assistance data transfer to an MS or request a deciphering keys for LCS broadcast assistance data The message can be sent from the BSC to the SMLC and from the MSC to the SMLC.

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
Location Type	Location Type	М	TLV	4
Cell Identifier	Cell Identifier	М	TLV	3-10
Classmark Information Type 3	Classmark Information Type 3	0	TLV	2-n
LCS Client Type	LCS Client Type	С	TLV	3
Chosen Channel	Chosen Channel	0	TLV	2-n
LCS Priority	LCS Priority	0	TLV	3
LCS QoS	LCS QoS	0	TLV	6
GPS Assistance Data	GPS Assistance Data	0	TLV	3-n
BSSLAP APDU	APDU	0	TLV	2-n

Table 9.1: BSSMAP-LE PERFORM LOCATION REQUEST message content

9.1.1 Location Type

This parameter defines the type of locatin information being requested.

9.1.2 Cell Identifier

This parameter gives the current cell location of the target MS. The format shall either be the cell global identification or the LAC plus CI form.

9.1.3 Classmark Information Type 3

This parameter indicates the positioning methods supported by the MS as obtained from the MS Classmark 3 received earlier from the target MS.

9.1.4 LCS Client Type

This parameter defines the type of the originating LCS Client. It shall be included if the Location Type indicates a request for a location estimate and the LCS Client Type is for Emergency Services and may be included in other cases to assist an SMLC to appropriately prioritize a location request

9.1.5 Chosen Channel

This parameter defines the type of radio channel currently assigned to the target MS.

9.1.6 LCS Priority

This parameter defines the priority of the location request.

9.1.6a LCS QoS

This parameter provides the required Quality of Service for the LCS Request. Quality of Service may include horizontal accuracy, vertical accuracy and allowed response time.

9.1.7 GPS Assistance Data

This parameter identifies the specific GPS assistance data that may be requested.

9.1.8 BSSLAP APDU

This parameter provides additional measurements (e.g. timing advance) for the target MS from the BSC. The measurements are contained inside a BSSLAP APDU.

9.2 BSSMAP-LE PERFORM LOCATION RESPONSE message

This message is sent in response to a BSSMAP-LE Perform Location Request to return a successful location estimate for a target MS or to indicate some failure in obtaining this. The message is also sent in response to a BSSMAP-LE Perform Location Request to return deciphering keys or an indication that LCS assistance data has been successfully delivered to an MS. The message can be sent from the SMLC to the BSC and from the SMLC to the MSC.

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
Location Estimate	Geographic Location	С	TLV	2-22
Positioning Data	Positioning Data	0	TLV	2-n
Deciphering Keys	Deciphering Keys	0	TLV	10-n
LCS Cause	LCS Cause	0	TLV	3

Table 9.2: BSSMAP-LE PERFORM LOCATION RESPONSE message content

9.2.1 Location Estimate

This parameter provides a location estimate for the target MS in the case of a successful location attempt.

9.2.2 Positioning Data

This parameter provides additional information for the positioning attempt from the SMLC.

9.2.3 Deciphering Keys

This parameter provides one or more deciphering keys that can be used to decode LCS broadcast assitance data by the MS. The SMLC shall provide the current deciphering key for the MS's present location. The SMLC may also provide additional deciphering keys applicable either after the current deciphering key or to data broadcast by other SMLCs.

9.2.4 LCS Cause

The LCS Cause is included if and only if a requested location estimate was not successfully obtained (e.g. location estimate not available or does not meet the required QoS), requested deciphering keys were not successfully returned or requested LCS assistance data was not successfully transferred to the MS. The parameter provides the reason for the failure. If the LCS Cause is included, the Location Estimate and Deciphering Key shall not be included.

9.3 BSSMAP-LE PERFORM LOCATION ABORT message

This message is sent by the instigator of a location request to abort the positioning attempt or the request for assistance data or deciphering keys. This message can be sent from the MSC to the SMLC and from the BSC to the SMLC.

Table 9.3: BSSMAP-LE PERFORM LOCATION ABORT message content

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
LCS Cause	LCS Cause	М	TLV	3

9.3.1 LCS Cause

The LCS Cause provides the reason for the aborting the location attempt.

9.4 BSSMAP-LE LMU CONNECTION REQUEST message

This message is sent to request the establishment of a signaling connection between an LMU and an SMLC. The message can be sent from an SMLC to an MSC and from an MSC to an SMLC.

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
IMSI	IMSI	М	TLV	3-10
Sender Address	Signaling Point Code	0	TLV	2-n
Security	Security	0	TLV	2-n
Call Number	ISDN Address	0	TLV	3-n

9.4.1 IMSI

This parameter identifies the LMU using its E.212 IMSI.

9.4.2 Sender Address

This parameter provides the SS7 signaling point code for the sender of the message. The parameter is mandatory for message transfer between an MSC and SMLC on the Ls interface.

9.4.3 Security

This parameter indicates if authentication or ciphering are required for the LMU. This parameter may be included for message transfer from an SMLC. If the parameter is absent, authentication and ciphering shall be assumed not to be required.

9.4.4 Call Number

This parameter may be included in an LMU connection request sent by an MSC to enable the SMLC to subsequently establish a TCH to the LMU.

9.5 BSSMAP-LE LMU CONNECTION ACCEPT message

This message is sent in response to a BSSMAP-LE LMU Connection Request message to accept the establishment of a signaling connection between an LMU and an SMLC. The message can be sent from an SMLC to an MSC and from an MSC to an SMLC.

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
Security	Security	0	TLV	3
Call Number	ISDN Address	0	TLV	3-n

Table 9.5: BSSMAP-LE LMU CONNECTION ACCEPT message content

9.5.1 Security

This parameter indicates if authentication or ciphering are required for the LMU. This parameter may be included for message transfer from an SMLC. If the parameter is absent, authentication and ciphering shall be assumed not to be required.

9.5.2 Call Number

This parameter may be included in an LMU connection accept sent by an MSC to enable the SMLC to subsequently establish a TCH to the LMU.

9.6 BSSMAP-LE LMU CONNECTION REJECT message

This message is sent in response to a BSSMAP-LE LMU Connection Request message to reject the establishment of a signaling connection between an LMU and an SMLC. The message can be sent from an SMLC to an MSC and from an MSC to an SMLC.

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
Reject Cause	LMU Cause	М	TLV	3

9.6.1 Reject Cause

This parameter provides the reason for the rejection of an LMU connection.

9.7 BSSMAP-LE LMU CONNECTION RELEASE message

This message is sent to release a signaling connection between an LMU and an SMLC. The message can be sent from an SMLC to an MSC and from an MSC to an SMLC.

Information element	Type / Reference	Presence	Format	Length in octets	
Message type	Message Type	М	V	1	
Release Cause	LMU Cause	М	TLV	3	

Table 9.7: BSSMAP-LE LMU CONNECTION RELEASE message content

9.7.1 Release Cause

This parameter provides the reason for the release of an LMU connection.

9.8 BSSMAP-LE CONNECTION ORIENTED INFORMATION message

This message is sent in association with an existing signaling connection between an SMLC and another entity to transfer information between the SMLC and other entity belonging to a higher level protocol. The message can be sent from an SMLC to an MSC, from an MSC to an SMLC, from a BSC to an SMLC and from an SMLC to a BSC.

Table 9.8: BSSMAP-LE CONNECTION ORIENTED INFORMATION message content

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
BSSLAP APDU	APDU	М	TLV	3-n
Segmentation	Segmentation	С	TLV	3

9.8.1 BSSLAP APDU

This parameter contains a BSSLAP message.

9.8.2 Segmentation

This parameter contains segmentation information for a segmented APDU. The parameter shall not include message information. The parameter shall be included if and only if the BSSLAP APDU is segmented.

9.9 BSSMAP-LE CONNECTIONLESS INFORMATION message

This message conveys signaling information associated with a higher protocol level between an SMLC and another entity when there is no existing signaling connection association. The message can be sent from an SMLC to an MSC, from an MSC to an SMLC, from an SMLC, from an SMLC to an SMLC to an OPAC.

Information element	Type / Reference	Presence	Format	Length in octets	
Message type	Message Type	М	V	1	
Source Identity	Network Element Identity	TLV	3-n		
Destination Identity	Network Element Identity	М	TLV	3-n	
APDU	APDU	3-n			
Segmentation	Segmentation	С	TLV	5	
Return Error Request	Return Error Request O TLV		2		
Return Error Cause	Return Error Cause O TLV				

Table 9.9: BSSMAP-LE CONNECTIONLESS INFORMATION message content

9.9.1 Source Identity

This parameter identifies the original source of the message. The original source can either be an SMLC or a Type B LMU. The source is identified by association with either a location area or a cell site.

9.9.2 Destination Identity

This parameter identifies the final destination of the message. The final destination can either be an SMLC or a Type B LMU. The destination is identified by association with either a location area or a cell site.

9.9.3 APDU

This parameter contains an embedded APDU. For information transfer between an SMLC and Type B LMU this shall be an LLP APDU. For information transfer between two peer SMLCs, this shall be an SMLCPP APDU.

9.9.4 Segmentation

This parameter contains segmentation and message information for a segmented APDU. The parameter shall be included if and only if a segmented APDU is present.

9.9.5 Return Error Request

This parameter may be included to request an error response if BSSMAP-LE message cannot be delivered successfully to its final destination. This parameter shall not be included if the Return Error cause is present.

9.9.6 Return Error Cause

This parameter indicates an error response for a BSSMAP-LE connectionless information message that could not be delivered to its final destination. The APDU should be present and the same as the APDU in the original undelivered message. The source and destination identies shall be included and the same as the destination and source identities, respectively, in the original undelivered message.

9.10 BSSMAP-LE RESET message

This message is sent to indicate a failure in the sending entity with loss of memory of LMU connections and location service transactions that were established or were being established. The message may be sent from an SMLC to an MSC or BSC and from an MSC or BSC to an SMLC.

This message is sent as a connectionless SCCP message.

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1
Cause	Cause	М	TLV	3-4

9.11 BSSMAP-LE RESET ACKNOWLEDGE message

This message is sent in response to a Reset message to indicate that references and resources associated with LMU connections and location service transactions towards the entity sending the Reset have been released. The message may be sent from an SMLC to an MSC or BSC and from an MSC or BSC to an SMLC.

This message is sent as a connectionless SCCP message.

Table 9.11: BSSMAP-LE RESET ACKNOWLEDGE message content

Information element	Type / Reference	Presence	Format	Length in octets
Message type	Message Type	М	V	1

10 Message format and information element coding

This clause specifies the coding of the Information Elements used by the BSSAP-LE protocol. The spare bits in the coding of an IE shall be set to zero by the sender and shall be ignored by the receiver.

All unassigned codes (whether omitted or explicitly *Unassigned* in the text) shall be treated as unknown (see clause 'Error Handling and Future Compatibility').

The following conventions are assumed for the sequence of transmission of bits and bytes:

- Each bit position is marked as 1 to 8. Bit 1 is the least significant bit and is transmitted first.
- In an element octets are identified by number, octet 1 is transmitted first, then octet 2 etc.

When a field extends over more than one octet, the order of bit values progressively decreases as the octet number increases. The least significant bit of the field is represented by the lowest numbered bit of the highest numbered octet of the field.

- For variable length elements a length indicator is included, this indicates the number of octets following in the element.
- All fields within Information Elements are mandatory unless otherwise specified. The Information Element Identifier shall always be included.

All spare bits are set to 0.

For any information element of format TLV, the length indicator octet, as in GSM 08.08, defines the number of octets in the information element that follow the length indicator octet.

10.1 Message type

Message type uniquely identifies the message being sent. It is a single octet element, mandatory in all messages.

0.1		
Category	87654321	Message Type
	00000000	Reserved.
POSITIONING MESSAGES		
	00101011	BSSMAP-LE PERFORM LOCATION REQUEST
	00101101	BSSMAP-LE PERFORM LOCATION RESPONSE
	00101110	BSSMAP-LE PERFORM LOCATION ABORT
LMU CONTROL MESSAGES		
	00000001	BSSMAP-LE LMU CONNECTION REQUEST
	00000010	BSSMAP-LE LMU CONNECTION ACCEPT
	00000011	BSSMAP-LE LMU CONNECTION REJECT
	00000100	BSSMAP-LE LMU CONNECTION RELEASE
INFORMATION MESSAGES		
	00101010	BSSMAP-LE CONNECTION ORIENTED INFORMATION
	00111010	BSSMAP-LE CONNECTIONLESS INFORMATION
GENERAL MESSAGES		
	00110000	RESET
	00110001	RESET ACKNOWLEDGE

Table 10.1/GSM 09.31: Message type information element

10.2 Information Element Identifiers

The next list shows the coding of the Information Element Identifiers used in the present document.

87654321	Information element	Reference
00111110	LCS QoS	10.16
01000011	LCS Priority	10.15
01000100	Location Type	10.18
01000101	Geographic Location	10.9
01000110	Positioning Data	10.20
01000111	LCS Cause	10.13
01001000	LCS Client Type	10.14
01001001	APDU	10.3
01001010	Network Element Identity	10.19
01001011	GPS Assistance Data	10.10
01001100	Deciphering Keys	10.8
01001101	Return Error Request	10.21
01001110	Return Error Cause	10.22
01001111	Segmentation	10.24
00010011	Classmark Information Type 3	10.7
00000100	Cause	10.4
00000101	Cell Identifier	10.5
00100001	Chosen Channel	10.6
00000000	IMSI	10.11
0000001	ISDN Address	10.12
0000010	Security	10.23
00000011	Signaling Point Code	10.25
00000100	LMU Cause	10.17

10.3 APDU

This is a variable length information element that conveys an embedded message or message segment associated with a higher level protocol.

	8	7	6	5	4	3	2	1				
Octet 1		IEI										
Octet 2-3		Length indicator										
Octet 4	Spare	Spare Protocol ID										
	The rest											
	message segment whose content and encoding are defined											
Octet n	accordin	g to the	protocol	ID.								

Figure 10.3.1/GSM 09.31: APDU IE

Length Indicator (octets 2-3).

The most significant bit is bit 8 of Octet 2, and the least significant bit is bit 1 in Octet 3. The length indicator defines the total number of octets after length indicator.

Protocol ID (bits 7-1 of octet 4)

0000000	reserved
0000001	BSSLAP
0000010	LLP
0000011	SMLCPP

Embedded Message (octets 5-n).

BSSLAP	the embedded message is as defined in GSM 08.71
LLP	the embedded message contains a Facility Information Element as defined in GSM 04.71 excluding the Facility IEI and length of Facility IEI octets defined in GSM 04.71.
SMLCPP	the embedded message is as defined in GSM 08.31

10.4 Cause

This is a variable length information element indicating the reason for sending a Reset message.

	8	7	6	5	4	3	2	1				
Octet 1		IEI										
Octet 2	Length indicator											
Octet 3	The rest	The rest of the information element is coded as the value part of										
	the Cau	he Cause IE defined in GSM 08.08.										

Figure 10.4.1/GSM 09.31: Cause IE

10.5 Cell Identifier

This is a variable length information element identifying a particular cell.

	8	7	6	5	4	3	2	1				
Octet 1	IEI											
Octet 2	Length indicator											
Octet 3	The rest	The rest of the information element is coded as the value part of										
	the Cell	the Cell Identifier IE defined in GSM 08.08.										

Figure	10.5.1/	GSM	09.31:	Cell	Identifier	IE
--------	---------	-----	--------	------	------------	----

10.6 Chosen Channel

This information element identifiers a type of radio interface channel.

	8	7	6	5	4	3	2	1				
Octet 1		IEI										
Octet 2	Length indicator											
Octet 3	The rest	The rest of the information element is coded as the value part of										
	the Chos	he Chosen Channel IE defined in GSM 08.08.										

Figure 10.6.1/GSM 09.31: Chosen Channel IE

10.7 Classmark Information Type 3

This information element contains classmark information for a target MS obtained from the MS Classmark 3 defined in GSM 04.08.

	8	7	6	5	4	3	2	1				
Octet 1		IEI										
Octet 2	Length indicator											
		The rest of the information element is coded as the value part of										
	the Cla	the Classmark Information Type 3 IE defined in GSM 08.08.										

Figure 10.7.1/GSM 09.31: Classmark Information Type 3 IE

10.8 Deciphering Keys

This information element defines the deciphering keys which should used by the MS to decode LCS broadcast assistance data. The parameter includes following data fields:

	8	7	6	5	4	3	2	1					
Octet 1		IEI											
Octet 2		Length indicator											
Octet 3		spare Cipherin Key Flag											
Octet 4 to Octet 10			Cur	rent Deciph	ering Key '	Value							
Octet 11 to Octet 17			Ne	ext Deciphe	ring Key V	alue							

Figure 10.8.1/GSM 09.31: Deciphering Keys IE

Ciphering Key Flag (octet 3)

This flag indicates indicates the current Ciphering Key Flag used in the LCS assistance data broadcast messages in the location area.

Current Deciphering Key Value (octet 4 – 10)

Current Deciphering Key contains the 56 bit deciphering key that is currently in use in location area for deciphering the LCS assistance data broadcast messages.

Next Deciphering Key (octet 11 – 17)

Next Deciphering Key contains the 56 bit deciphering key that will be used next in location area for deciphering the LCS assistance data broadcast messages.

10.9 Geographic Location

This is a variable length information element providing an estimate of a geographic location.


	8	7	6	5	4	3	2	1				
Octet 1		IÉI										
Octet 2		Length indicator										
Octet 3	The rest	The rest of the information element contains an octet sequence										
to	identical	identical to that for the Ext-GeographicalInformation data type in										
Octet n	GSM 09.02.											

Figure 10.9.1/GSM 09.31: Geographic Location IE

10.10 GPS Assistance Data

This is a variable length information element identifying the GPS assistance data requested for an MS.

	8	7	6	5	4	3	2	1		
Octet 1	IEI									
Octet 2	Length indicator									
Octet 3	Н	G	F	E	D	С	В	А		
Octet 4	Р	0	N	М	L	К	J	Ι		
Octet 5 to	Satellite related data									
Octet 8+2n										



Octet 3

- bit A Almanac
 - 0 : Almanac is not requested
 - 1 : Almanac is requested
- bit B UTC Model
 - 0: UTC Model is not requested
 - 1 : UTC Model is requested
- bit C Ionospheric Model
 - 0 : Ionospheric Model is not requested
 - 1 : Ionospheric Model is requested
- bit D Navigation Model
 - 0: Navigation Model is not requested octets 5 to 8+2n are not present
 - 1 : Navigation Model is requested octets 5 to 8+2n are present
- bit E DGPS Corrections
 - 0 : DGPS Corrections are not requested
 - 1: DGPS Corrections are requested
- bit F Reference Location
 - 0 : Reference Location is not requested
 - 1 : Reference Location is requested
- bit G Reference Time
 - 0 : Reference Time is not requested
 - 1 : Reference Time is requested
- bit H Acquisition Assistance
 - 0: Acquisition Assistance is not requested
 - 1: Acquisition Assistance is requested
- bit I Real-Time Integrity
 - 0: Real-Time Integrity is not requested
 - 1: Real-Time Integrity is requested

bits J through P are Spare bits

At least one of bits A, B, C, D, E, F, G, H or I, shall be set to the value "1".

	8	7	6	5	4	3	2	1		
Octet 5	GPS	Week				Spare				
Octet 6		GPS Weekl								
	NSAT									
	Spare									
Octet 7				GPS	_Toe					
Octet 8		NS	AT			T-Toe	e limit			
Octet 9	spa	are			Sat	D 1				
Octet 10	IODE 1									
Octet 7+2n	spare SatID n									
Octet 8+2n	IODE n									

Figure 10.10.2/GSM 09.31: Coding of Satellite Related Data

GPS Week (bits 7-8 octet 5 and octet 6)

This field contains a 10 bit binary representation of the GPS Week of the assistance currently held by the MS. The most significant bit of the GPS Week is bit 8 in octet 5 and the least significant bit is bit 1 in octet 6.

GPS_Toe (octet 7)

This field contains a binary representation of the GPS time of ephemeris in hours of the latest ephemeris set contained in handset memory (range 0-167).

NSAT (octet 8, bits 5-8)

This field containss a binary representation of the number of satellites to be considered for the current GPS assistance request.

T-Toe limit (octet 8, bits 1-4)

This field contains a binary representation of the ephemeris age tolerance of the MS to the network in hours (range 0-10).

SatID x (x = 1,2, ... n) (octet 7 + 2x, bits 1-6)

This field contains a binary representation of the identity of a satellite for which the assistance request is applicable. The number of satellite fields is indicated in the field NSAT.

IODE x (x = 1,2, ... n) (octet 8 + 2x)

This field contains a binary representation of the Issue of Data Ephemeris, which identifies the sequence number for the satellite x (x = 1, 2, ..., n).

10.11 IMSI

The IMSI is of variable length and is coded as a sequence of BCD digits, compressed two into each octet. This is a variable length element, and includes a length indicator. The IMSI is defined in GSM 03.03. It shall not exceed 15 digits (see GSM 03.03).

[8	7	6	5	4	3	2	1
Octet 1				IE	El			
Octet 2		Length indicator						
Octet 3		IMSI digit 1			odd/	0	0	0
			-		even			
Octet 4	IMSI digit 3				IMSI digit 2			
Octet 4+x		IMSI d	igit i+1	IMSI	digit i			

Figure 10.11.1/GSM 09.31: IMSI IE

Where x = (i-2)/2 and i is always even

- * The value of the odd/even bit (bit 4 in octect 3) indicates:
 - 0 Even number of IMSI digits
 - 1 Odd number of IMSI digits

If the number of IMSI digits is even then bits 5 to 8 of the last octet shall be filled with an end mark coded as 1111.

10.12 ISDN Address

This information element contains an ISDN address.

	8	7	6	5	4	3	2	1
Octet 1				IE	El			
Octet 2		Length indicator						
Octet 3	The rest	The rest of the information element contains an octet string coded						
	the same as the ISDN-AddressString common data type defined in							
	GSM 09	.02			-			

Figure 10.12.1/GSM 09.31: ISDN Address IE

10.13 LCS Cause

The LCS Cause parameter is of variable length IE and provides the reason for an unsuccessful location request.

	8	7	6	5	4	3	2	1	
Octet 1		IEI							
Octet 2		Length indicator							
Octet 3		Cause value							
Octet 4			Diag	nostic va	lue (NO	TE 1)			

NOTE 1: The inclusion of this octet depends on the cause value.

Figure 10.13.1/GSM 09.31: LCS Cause IE

LCS Cause valu	ie (octet 3)
Bits	
87654321	
$0\ 0\ 0\ 0\ 0\ 0\ 0\ 0$	Unspecified
$0\ 0\ 0\ 0\ 0\ 0\ 0\ 1$	System Failure
$0\ 0\ 0\ 0\ 0\ 0\ 1\ 0$	Protocol Error
$0\ 0\ 0\ 0\ 0\ 0\ 1\ 1$	Data missing in position request
$0\ 0\ 0\ 0\ 0\ 1\ 0\ 0$	Unexpected data value in position request
00000101	Position method failure
00000110	Target MS Unreachable
00000111	Location request aborted
00001000	Facility not supported
$0\ 0\ 0\ 0\ 1\ 0\ 0\ 1$	Inter-BSC Handover Ongoing
00001010	Intra-BSC Handover Complete
$0\ 0\ 0\ 0\ 1\ 0\ 1\ 1$	Congestion
00001100	
to unspecifi	ied in this version of the protocol
11111111	-

Table 10.13.1/GSM 09.31: Cause value

Diagnostic value (octet 4):

this octet may be included if the cause value indicates "position method failure", the binary encoding of this octet shall encode the same set of values as defined for the PositionMethodFailure-Diagnostic in GSM 09.02. Values outside those defined in GSM 09.02 shall be ignored by a receiver.

10.14 LCS Client Type

This information element identifies the type of LCS Client.




Figure 10.14.1/GSM 09.31: LCS Client Type IE

The client category (bits 8-5 of octet 3) and the client subtype (bits 4-1 of octet 3) are coded as follows.

Client Category	Client Subtype	Explanation
0000		Value Added Client
	0000	unspecified
	all values	reserved
0010		PLMN operator
	0000	unspecified
	0001	broadcast service
	0010	O&M
	0011	anonymous statistics
	0100	Target MS service support
	other values	reserved
0011		Emergency services
	0000	unspecified
	other values	reserved
0100		Lawful Intercept services
	0000	unspecified
	other values	reserved
0101 – 1111	all values	reserved

10.15 LCS Priority

This information element defines the priority level of a location request.

	8	7	6	5	4	3	2	1	
Octet 1		IEI							
Octet 2		Length indicator							
Octet 3	This	s octet is	coded a	s the LC	S-Priority	octet in	GSM 09	.02.	

Figure 10.15.1/GSM 09.31: LCS Priority IE

10.16 LCS QoS

This information element defines the Quality of Service for a location request.

	8	8 7 6 5 4 3 2 1							
Octet 1		IÉI							
Octet 2		Length indicator							
Octet 3		spare VERT						VERT	
Octet 4	HA			Horizo	ontal Acc	curacy			
Octet 5	VA	Vertical Accuracy							
Octet 6	R	RT spare							

Figure 10.16.1/GSM 09.31: LCS QoS IE

Octet 3

- VERT = vertical coordinate indicator 0 : vertical coordinate not requested
 - 1 : vertical coordinate is requested

Octet 4

- bit 8 HA = horizontal accuracy indicator
 - 0 : Horizontal Accuracy is not specified
 - 1 : Horizontal Accuracy is specified
- bits 7-1 Horizontal Accuracy : spare (set all zeroes) if HA=0 set to 7 bit uncertainty code in GSM 03.32 if HA=1

Octet 5 – applicable only if VERT = 1

- bit 8 VA = vertical accuracy indicator
 - 0 : Vertical Accuracy is not specified
 - 1 : Vertical Accuracy is specified
- bits 7-1 Vertical Accuracy : spare (set all zeroes) if VA=0 set to 7 bit uncertainty altitude code in GSM 03.32 if VA=1

Octet 6

bits 8-7 RT = response time category

- 00 : Response Time is not specified
- 01 : Low Delay
- 10 : Delay Tolerant
- 11 : reserved

bits 6-1 spare

10.17 LMU Cause

The LMU Cause parameter provides the reason for the release or rejection of an LMU signaling connection between an MSC and SMLC.

	8	7	6	5	4	3	2	1
Octet 1		IEI						
Octet 2		Length indicator						
Octet 3				Cause	value			

Figure 10.17.1/GSM 09.31: LMU Cause IE

Table 10.17.1/GSM 09.31: Cause value

Cause value (o	ctet 3)
Bits	
87654321	
000000000	Unspecified
$0\ 0\ 0\ 0\ 0\ 0\ 0\ 1$	Normal Release
00000010	System Failure
00000011	Protocol Error
00000100	Missing Data
00000101	Unexpected Data
00000110	Congestion
00000111	Loss of radio channel to LMU
00001000	Release by LMU
00001001	Unknown LMU
00001010	LMU signaling error
00001011	LMU not authenticated
00001100	No response from LMU
00001101	LMU in erroneous state
00001110	
to	unspecified in this version of the protocol
11111111	-

10.18 Location Type

This is a variable length information element defining the type of location information being requested.

	8 7 6 5 4 3 2 1							1	
Octet 1		IEI							
Octet 2		Length indicator							
Octet 3		Location Information							
Octet 4	Positioning Method								

Figure 10.18.1/GSM 09.31: Location Type IE

Coding of location information (octet 3):

00000000	current geographic location					
00000001	location assistance information for the target MS					
00000010	deciphering keys for broadcast assistance data for the target MS					
all other values are reserved.						

Positioning Method (octet 4).

This octet shall be included if the location information in octet 3 indicates "location assistance information for the target MS" or "deciphering keys for broadcast assistance data for the target MS" and shall be omitted otherwise.

00000000reserved00000001Mobile Assisted E-OTD00000010Mobile Based E-OTD00000011Assisted GPSall other values are reserved.

10.19 Network Element Identity

This is a variable length information element identifying a network element. by association with either a designated cell site or a designated location area.




Figure 10.19.1/GSM 09.31: Network Element Identity IE

Identity Discriminator (bits 4-1 of octet 3)

0000 Identification using the MCC + MNC +LAC + CI as defined in GSM 03.03

0001 Identification using LAC + CI as defined in GSM 03.03

- 0100 Identification using the MCC + MNC + LAC as defined in GSM 03.03
- 0101 Identification using the LAC as defined in GSM 03.03

All other values are reserved.




Figure 10.19.2/GSM 09.31: Coding of Network Element Identification using the MCC+MNC+LAC+CI

Octets 4 to 10 are coded as the Cell Identification of the Cell Identifier IE for Cell identification discriminator = 0000 defined in GSM 08.08.




Figure 10.19.3/GSM 09.31: Coding of Network Element Identification using the LAC + CI

Octets 4 to 7 are coded as the Cell Identification of the Cell Identifier IE for Cell identification discriminator = 0001 defined in GSM 08.08.




Figure 10.19.4/GSM 09.31: Coding of Network Element Identification using the MCC + MNC + LAC

Octets 4 to 8 are coded as the corresponding octets in the Cell Identification of the Cell Identifier List IE for Cell identification discriminator = 0100 defined in GSM 08.08.




Figure 10.19.5/GSM 09.31: Coding of Network Element Identification using the LAC

Octets 4 to 5 are coded as the corresponding octets in the Cell Identification of the Cell Identifier List IE for Cell identification discriminator = 0101 defined in GSM 08.08.

10.20 Positioning Data

This is a variable length information element providing positioning data associated with a successful or unsuccessful locatiomn attempt for a target MS.




Figure 10.20.1/GSM 09.31: Positioning Data IE

The positioning data discriminator (bits 4-1 of octet 3) defines the type of data provided for each positioning method:

0000 indicate usage of each positioning method that was attempted either successfully or unsuccessfully

all other values are reserved

Coding of the postioning method octets for positioning data discrminator = 0:

Octet x	positioning method	usage
---------	--------------------	-------

Coding of positioning method (bits 8-4):

```
00000 Timing Advance
00001 TOA
00010 AOA
00011 Mobile Assisted E-OTD
00100 Mobile Based E-OTD
00101 Mobile Assisted GPS
00110 Mobile Based GPS
00111 Conventional GPS
01000
      reserved for GSM
to
01111
10000
      reserved for network specific positioning methods
to
11111
```

Coding of usage (bits 3-1)

- 000 Attempted unsuccessfully due to failure or interruption
- 001 Attempted successfully: results not used to generate location
- 010 Attempted successfully: results used to verify but not generate location
- 011 Attempted successfully: results used to generate location
- 100 Attempted successfully: case where MS supports multiple mobile based positioning methods and the actual method or methods used by the MS cannot be determined

10.21 Return Error Request

The Return Error Request parameter indicates a request from the source of a BSSMAP-LE connectionless information message for an error response if the message cannot be delivered to its final destination.

	8	7	6	5	4	3	2	1			
Octet 1		IÉI									
Octet 2		Length indicator									
Octet 3				Return E	rror Type	9					

Figure 10.21.1/GSM 09.31: Return Error Request IE

Coding of Return Error Type (octet 3):

00000000 Return an unsegmented APDU or the first segment of a segmented APDU; no Return Error shall be sent if no APDU was received or if a subsequent segment of a segmented APDU was received.

00000001 to 11111111

Reserved for future use.

10.22 Return Error Cause

The Return Error Cause parameter provides the reason for unsuccessful delivery of a BSSMAP-LE Connectionless Information message to its final destination.

	8	7	6	5	4	3	2	1				
Octet 1		IÉI										
Octet 2		Length indicator										
Octet 3				Cause	value							

Figure 10.22.1/GSM 09.31: Return Error Cause IE

Cause value (octet 3)	
Bits	
87654321	
0 0 0 0 0 0 0 0 Unspecified	
0000001 System Failure	
0000010 Protocol Error	
0 0 0 0 0 1 1 Destination unknown	
0 0 0 0 1 0 0 Destination unreachable	
0 0 0 0 1 0 1 Congestion	
0 0 0 0 0 1 1 0	
to <i>unspecified</i> in this version of the protocol	
11111111	

Table 10.22.1/GSM 09.31: Cause value

10.23 Security

This information element defines what security measures are needed for signaling to an LMU.

	8	7	6	5	4	3	2	1			
Octet 1	IEI										
Octet 2				Length i	ndicator						
Octet 3		spare CIPH AUTH									

Figure 10.23.1/GSM 09.31: Security IE

Coding of octet 3:

- bit 1 AUTH = authentication indicator 0 : authentication of LMU not required 1 : authentication of LMU required
- bit 2 CIPH = ciphering indicator
 - 0 : ciphering of LMU signaling data not required
 - 1 : ciphering of LMU signaling data required

10.24 Segmentation

This is a variable length information element that carries information for a segmented APDU.

	8	7	6	5	4	3	2	1		
Octet 1										
Octet 2		Length indicator								
Octets 3-n		Se	gmentati	on and N	/lessage	Informat	ion			

Figure 10.24.1/GSM 09.31: Segmentation IE

There are two options for the coding of the Segmentation and Message Information portion; 1 octet containing segmentation information only and 3 octets containing segmentation and message information.

Encoding of Segmentation Information:




Figure 10.24.2/GSM 09.31: Segmentation Information

Encoding of Segmentation and Message Information:

	8	7	6	5	4	3	2	1
Octet 3		Spare		S		Segment	t Number	r
Octet 4-5				Messa	age ID			

Figure 10.24.3/GSM 09.31: Segmentation and Message Information

S (Segmentation Bit, bit 5 of octet 3)

- 0 final segment of a segmented message
- 1 non-final segment of a segmented message

Segment Number (bits 4-1 of octet 3)

This field contains a 4 bit binary representation of the segment number. The first segment has the value '0000', the next '0001', and so on.

Message ID (octets 4 and 5)

This field contains a 16 bit binary representation of the message identity, i.e. values 0-65535 are possible.

This field is used to identify to which messages different segments belong to.

10.25 Signaling Point Code

This is a variable length information element providing that provides the signaling point code of a network element.

	8	7	6	5	4	3	2	1			
Octet 1		IEI									
Octet 2		Length indicator									
Octets 3-n			Signa	aling Poi	nt Code	value					

Figure 10.25.1/GSM 09.31: Signaling Point Code IE

There are three options for the coding of Signaling Point Code value; 2 octets containing a 14 bit ITU code, 3 octets containing a 24 bit unstructured code and 3 octets containing a 24 bit ANSI structured code.

Encoding of 14 bit ITU signaling point code:

Octet 3	0	0	signaling point code (high order bits)
Octets 4		ę	signaling point code (low order bits)

Encoding of a 24 bit unstructured signaling point code:

Octet 3	signaling point code (high order octet)
Octet 4	signaling point (second octet)
Octets 5	signaling point code (low order octet)

Encoding of a 24 bit ANSI structured signaling point code:

Octet 3	Network Identifier
Octet 4	Network Cluster
Octets 5	Network Cluster Member

Annex A (informative): Change history

				Change history	
Meeting#	Tdoc	CR	Rev	Subject/Comment	New
SMG#30bis		-		Approved at SMG#30bis as Release 98	7.0.0
SMG#31		A001	3	Addition of further LCS functionality in GSM Release 98	7.1.0
SMG#31		A002	1	Provision of Segmentation support for LCS	7.1.0
SMG#31bis		A003	1	Addition of Integrity Monitor Status	7.2.0
SMG#31bis		A004	1	Addition of missing "LMU Cause" IE	7.2.0
SMG#31bis		A005	1	Correction of Message Type Encoding and GPS Assistance Data IE	7.2.0
SMG#31bis		A006		Addition of Global reset and SCCP error procedures	7.2.0
smg#32		A015		Error handling in case requested position method is not supported	7.3.0
GP-01		A017	1	Geographic Shape restriction in LCS	7.4.0
				Editorial	7.4.1

History

Document history		
V7.4.1	October 2000	Publication