

ETSI TS 125 469 V10.3.0 (2013-01)



Technical Specification

**Universal Mobile Telecommunications System (UMTS);
UTRAN Iuh interface Home Node B (HNB)
Application Part (HNBAP) signalling
(3GPP TS 25.469 version 10.3.0 Release 10)**



Reference

RTS/TSGR-0325469va30

Keywords

UMTS

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from:

<http://www.etsi.org>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at

<http://portal.etsi.org/tb/status/status.asp>

If you find errors in the present document, please send your comment to one of the following services:

http://portal.etsi.org/chaicor/ETSI_support.asp

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2013.
All rights reserved.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.
3GPP™ and **LTE™** are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.
GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: *"Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards"*, which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://ipr.etsi.org>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

Contents

Intellectual Property Rights	2
Foreword.....	2
Foreword.....	6
1 Scope	7
2 References	7
3 Definitions and abbreviations.....	8
3.1 Definitions	8
3.2 Abbreviations	8
4 General	8
4.1 Procedure Specification Principles.....	8
4.2 Forwards and Backwards Compatibility	9
4.3 Specification Notations	9
5 HNBAP Services.....	9
6 Services expected from the Transport layer	9
7 Functions of HNBAP	10
8 HNBAP Procedures.....	10
8.1 Elementary Procedures.....	10
8.2 HNB Registration Procedure	10
8.2.1 General.....	10
8.2.2 Successful Operation	11
8.2.3 Unsuccessful Operation	11
8.2.4 Abnormal Conditions.....	12
8.3 HNB De-registration Procedure	12
8.3.1 Successful Operation (HNB Originated)	12
8.3.2 Successful Operation (HNB-GW Originated)	13
8.3.3 Abnormal Conditions.....	13
8.4 UE Registration	13
8.4.1 General.....	13
8.4.2 Successful Operation	13
8.4.3 Unsuccessful Operation	14
8.4.4 Abnormal Conditions.....	14
8.5 UE De-Registration	14
8.5.1 General.....	14
8.5.2 Successful Operation (HNB Originated)	15
8.5.3 Successful Operation (HNB-GW Originated)	15
8.5.4 Abnormal Conditions.....	16
8.6 Error Indication	16
8.6.1 General.....	16
8.6.2 Successful Operation	16
8.7 CSG Membership Update Procedure	17
8.7.1 Successful Operation	17
8.7.2 Abnormal Conditions.....	17
8.8 Void.....	17
8.8.1 Void	17
8.8.2 Void	17
8.8.3 Void	17
8.9 TNL Update.....	17
8.9.1 General.....	17
8.9.2 Successful Operation	18
8.9.3 Unsuccessful Operation.....	18
8.9.4 Abnormal Conditions.....	18

8.10	HNB Configuration Transfer Procedure.....	18
8.10.1	General.....	18
8.10.2	Successful Operation	18
8.10.3	Void	19
8.10.4	Abnormal Conditions.....	19
8.11	Relocation Complete	19
8.11.1	General.....	19
8.11.2	Successful Operation	19
9	Elements for HNBAP Communication	20
9.1	Message Functional Definition and Content	20
9.1.1	General.....	20
9.1.2	Message Contents	20
9.1.2.1	Presence	20
9.1.2.2	Criticality	20
9.1.2.3	Range	20
9.1.2.4	Assigned Criticality.....	21
9.1.3	HNB REGISTER REQUEST	21
9.1.4	HNB REGISTER ACCEPT.....	21
9.1.5	HNB REGISTER REJECT.....	21
9.1.6	UE REGISTER REQUEST	22
9.1.7	UE REGISTER ACCEPT.....	22
9.1.8	UE REGISTER REJECT.....	22
9.1.9	HNB DE-REGISTER	22
9.1.10	UE DE-REGISTER	23
9.1.11	ERROR INDICATION.....	23
9.1.12	CSG MEMBERSHIP UPDATE.....	23
9.1.13	Void	23
9.1.14	Void	23
9.1.15	TNL UPDATE REQUEST	23
9.1.16	TNL UPDATE RESPONSE.....	24
9.1.17	TNL UPDATE FAILURE.....	24
9.1.18	HNB CONFIGURATION TRANSFER REQUEST	24
9.1.19	HNB CONFIGURATION TRANSFER RESPONSE	24
9.1.20	Void	25
9.1.21	RELOCATION COMPLETE.....	25
9.2	Information Element Definitions.....	25
9.2.0	General.....	25
9.2.1	Message Type	26
9.2.2	HNB Identity	26
9.2.3	HNB Location Information.....	26
9.2.4	Geographical Location.....	27
9.2.5	Geographical Coordinates.....	27
9.2.6	Altitude and Direction	27
9.2.7	Macro Coverage Information.....	28
9.2.8	IP Address.....	28
9.2.9	Context-ID	28
9.2.10	IMSI.....	28
9.2.11	LAC	29
9.2.12	RAC	29
9.2.13	SAC	29
9.2.14	PLMN-ID.....	29
9.2.15	Cause	30
9.2.16	Criticality Diagnostics	32
9.2.17	UE Identity.....	33
9.2.18	IMEI.....	34
9.2.19	TMSI (GSM-MAP).....	34
9.2.20	LAI.....	34
9.2.21	Registration Cause	34
9.2.22	P-TMSI (GSM-MAP).....	35
9.2.23	Routing Area Identification	35
9.2.24	UE Capabilities	35

9.2.25	Cell-ID	35
9.2.26	RNC-ID	36
9.2.27	CSG-ID	36
9.2.28	Backoff Timer	36
9.2.29	Mux Port Number	36
9.2.30	CSG Membership Status	36
9.2.31	HNB Cell Access Mode	36
9.2.32	RAB List	37
9.2.33	Transport Info	37
9.2.34	Transport Layer Address	37
9.2.35	Transport Association	37
9.2.36	HNB RNL Identity	38
9.2.37	CN Domain Indicator	38
9.2.38	Void	38
9.2.39	Update Cause	38
9.2.40	HNB Configuration Information	38
9.2.41	PSC	39
9.2.42	HNB Cell Identifier	39
9.2.43	RAB ID	39
9.3	Message and Information Element Abstract Syntax (with ASN.1)	39
9.3.0	General	39
9.3.1	Usage of private message mechanism for non-standard use	40
9.3.2	Elementary Procedure Definitions	41
9.3.3	PDU Definitions	45
9.3.4	Information Element Definitions	54
9.3.5	Common Definitions	63
9.3.6	Constant Definitions	64
9.3.7	Container Definitions	66
9.4	Message Transfer Syntax	70
10	Handling of unknown, unforeseen, and erroneous protocol data	70
10.1	General	70
10.2	Transfer Syntax Error	70
10.3	Abstract Syntax Error	70
10.3.1	General	70
10.3.2	Criticality Information	71
10.3.3	Presence Information	71
10.3.4	Not comprehended IE/IE group	72
10.3.4.1	Procedure Code	72
10.3.4.1A	Type of Message	72
10.3.4.2	IEs other than the Procedure Code and Type of Message	72
10.3.5	Missing IE or IE group	73
10.3.6	IEs or IE groups received in wrong order or with too many occurrences or erroneously present	74
10.4	Logical Error	75
10.5	Exceptions	75
Annex A (informative):	Change History	76
History		77

Foreword

This Technical Specification (TS) has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the *Home Node B Application Part (HNBAP)* between the Home Node B (HNB) and the Home Node B Gateway (HNB-GW). It fulfils the HNB- HNB-GW communication requirements specified in TS 25.467 [3] and is defined over the Iuh – reference point. It provides control and management procedures between HNB and HNB-GW.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] Void
- [2] Void
- [3] 3GPP TS 25.467: "UTRAN architecture for 3G Home NodeB"
- [4] 3GPP TS 23.032: "Universal Geographical Area Description (GAD)".
- [5] 3GPP TR 25.921: "Guidelines and Principles for Protocol Description and Error Handling".
- [6] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [7] ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules: Specification of Packed Encoding Rules (PER)".
- [8] ITU-T Recommendation X.680 (2002-07): "Information technology - Abstract Syntax Notation One (ASN.1): Specification of basic notation".
- [9] ITU-T Recommendation X.681 (2002-07): "Information technology - Abstract Syntax Notation One (ASN.1): Information object specification".
- [10] 3GPP TS 25.331: "Radio Resource Control (RRC) Protocol Specification"
- [11] IETF RFC 4960 (2007-09): "Stream Control Transmission Protocol".
- [12] 3GPP TS 23.003: "Numbering, addressing and identification".
- [13] IETF RFC 4282 (2005-12): "The Network Access Identifier".
- [14] Broadband Forum TR-069 Amendment 2, *CPE WAN Management Protocol*, Broadband Forum Technical Report, 2007.
- [15] 3GPP TS 22.220: "Service requirements for Home NodeBs and Home eNodeBs".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [6] and the following terms and definitions apply:

Elementary Procedure: HNBAP consists of Elementary Procedures (EPs). An Elementary Procedure is a unit of interaction between the HNB and HNB-GW. These EPs are defined separately and are intended to be used to build up complete sequences in a flexible manner. If the independence between some EPs is restricted, it is described under the relevant EP description. Unless otherwise stated by the restrictions, the EPs may be invoked independently of each other as stand alone procedures, which can be active in parallel.

An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- **Class 1:** Elementary Procedures with response (success or failure).
- **Class 2:** Elementary Procedures without response.

For Class 1 EPs, the types of responses can be as follows:

Successful

- A signalling message explicitly indicates that the elementary procedure successfully completed with the receipt of the response.

Unsuccessful

- A signalling message explicitly indicates that the EP failed.
- On time supervision expiry (i.e. absence of expected response).

Class 2 EPs are considered always successful.

RNSAP Relocation: see definition in TS 25.467 [3].

3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [6] and the following abbreviations apply:

EP	Elementary Procedure
ESN	Electronic Serial Number
HNB	Home Node B
HNB-GW	Home Node B Gateway
HNBAP	HNB Application Part
PDU	Protocol Data Unit
PER	Packed Encoding Rules
SAC	Service Area Code

4 General

The protocol described in the present document is the protocol between HNB-GW and HNB.

4.1 Procedure Specification Principles

The principle for specifying the procedure logic is to specify the functional behaviour of the HNB & HNB-GW exactly and completely.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
 - 1) Functionality which "shall" be executed:
 - The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the REQUEST message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.
 - 2) Functionality which "shall, if supported" be executed:
 - The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.
- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included.

4.2 Forwards and Backwards Compatibility

The forwards and backwards compatibility of the protocol is assured by mechanism where all current and future messages, and IEs or groups of related IEs, include Id and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification Notations

For the purposes of the present document, the following notations apply:

Procedure	When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. HNB Registration procedure.
Message	When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. HNB REGISTRATION REQUEST message.
IE	When referring to an information element (IE) in the specification the <i>Information Element Name</i> is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. <i>HNB Identity IE</i> .
Value of an IE	When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in subclause 9.2 enclosed by quotation marks, e.g. "Abstract Syntax Error (Reject)" or "Background".

5 HNBAP Services

HNBAP provides the signalling service between the HNB and the HNB-GW that is required to fulfil the HNBAP functions in Clause 7.

6 Services expected from the Transport layer

Following service is expected from the transport layer:

- reliable and in sequence delivery of HNBAP messages. HNBAP shall be notified if the signalling connection breaks.

7 Functions of HNBAP

The HNBAP has the following functions:

- HNB Registration
- UE Registration
- Support RNSAP relocation (TS 25.467 [3])
- Error Handling. This function allows the reporting of general error situations, for which function specific error messages have not been defined.

These functions are implemented by one or several HNBAP elementary procedures described in the following clauses.

8 HNBAP Procedures

8.1 Elementary Procedures

In the following tables, all EPs are divided into Class 1 and Class 2 Procedures.

Table 1: Class 1

Elementary Procedure	Initiating Message	Successful Outcome	Unsuccessful Outcome
		Response message	Response message
HNB Registration	HNB REGISTER REQUEST	HNB REGISTER ACCEPT	HNB REGISTER REJECT
UE Registration	UE REGISTER REQUEST	UE REGISTER ACCEPT	UE REGISTER REJECT
TNL Update	TNL UPDATE REQUEST	TNL UPDATE RESPONSE	TNL UPDATE FAILURE
HNB Configuration Transfer	HNB CONFIGURATION TRANSFER REQUEST	HNB CONFIGURATION TRANSFER RESPONSE	

Table 2: Class 2

Elementary Procedure	Message
HNB De-Registration	HNB DE-REGISTER
UE De-Registration	UE DE-REGISTER
Error Indication	ERROR INDICATION
CSG Membership Update	CSG MEMBERSHIP UPDATE
Relocation Complete	RELOCATION COMPLETE

8.2 HNB Registration Procedure

8.2.1 General

The purpose of the HNB Registration Procedure is to register the HNB with the HNB-GW to enable the HNB-GW to provide service and core network connectivity for the HNB and if supported and configured, to enable Iurh connectivity via the HNB-GW. This procedure shall be the first HNBAP procedure triggered after the Iurh signalling transport has been successfully established.

8.2.2 Successful Operation

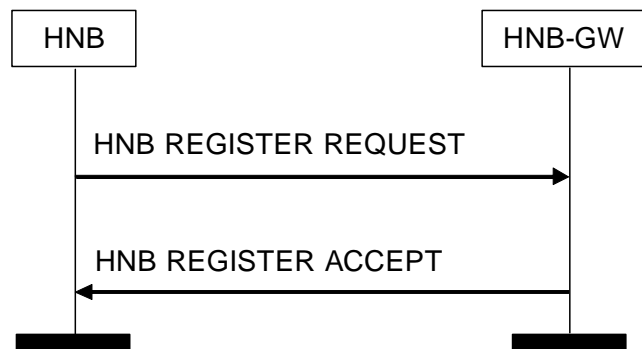


Figure 1: HNB Register Procedure: Successful Operation

The HNB shall initiate this procedure by sending a HNB REGISTER REQUEST message whenever it needs to commence operations and requiring service from the HNB-GW.

If the HNB is CSG capable and operates in a Closed access mode as defined in TS 22.220 [15], then it shall provide the *CSG-ID IE* and may provide the *HNB Cell Access Mode IE* within the HNB REGISTER REQUEST message.

If the HNB is supporting ETWS it shall provide the *Service Area For Broadcast IE* within the HNB REGISTER REQUEST message.

If the HNB operates in a Hybrid access mode as defined in TS 22.220 [15], then it shall provide the *CSG-ID IE* and *HNB Cell Access Mode IE* within the HNB REGISTER REQUEST message.

If the HNB operates in an Open access mode as defined in TS 22.220 [15], then it shall provide the *HNB Cell Access Mode IE* within the HNB REGISTER REQUEST message.

If the HNB supports direct Iurh connectivity it shall provide the *Iurh signalling TNL Address IE* to the HNB-GW within the HNB REGISTER REQUEST message.

If supported, the HNB shall include the *PSC IE* in the REGISTER REQUEST message.

If the registration is successful, the HNB-GW will respond with a HNB REGISTER ACCEPT message indicating acceptance and registration. If the *Iurh signalling TNL Address IE* is included in the HNB REGISTER ACCEPT message, the HNB shall, if supported, establish a transport layer session to the indicated address to support Iurh connectivity via the HNB-GW.

If the HNB-GW is capable of de-multiplexing, then the *MuxPortNumber IE* may be included in the HNB REGISTER ACCEPT message.

8.2.3 Unsuccessful Operation

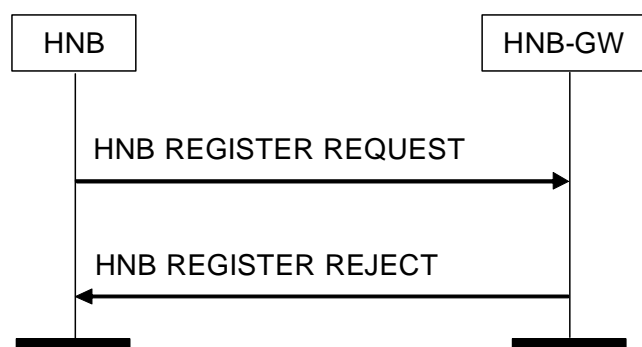


Figure 2: HNB Register Procedure: Un-Successful Operation

If the HNB-GW cannot register the HNB, the HNB-GW will respond with a HNB REGISTER REJECT message.

Typical cause values are:

Radio Network Layer Cause:

- Unauthorised Location
- Unauthorised HNB
- Overload
- HNB Parameter Mismatch
- Unspecified

If the *Cause IE* in the HNB REGISTER REJECT message is set to "overload", the HNB shall not retry registration to the same HNB-GW for at least the duration indicated in the *Backoff Timer IE*.

8.2.4 Abnormal Conditions

If the HNB-GW receives a duplicate HNB REGISTER REQUEST (i.e. for an already registered HNB identified by the same unique HNB identity), then the new HNB REGISTER REQUEST shall override the existing registration and the handling of the new HNB REGISTER REQUEST shall be performed according to subclause 8.2.

8.3 HNB De-registration Procedure

8.3.1 Successful Operation (HNB Originated)



Figure 3: HNB De-register Procedure: Successful Operation

The HNB will initiate this procedure whenever it needs to terminate operations.

The HNB-GW shall clear all related resources associated with the HNB.

Typical cause values are:

Radio Network Layer Cause:

- Normal
- Unspecified

8.3.2 Successful Operation (HNB-GW Originated)



Figure 4: HNB De-register Procedure: Successful Operation

The HNB-GW will initiate this procedure whenever it needs to terminate operations with a HNB.

The HNB-GW shall clear all related resources associated with the HNB.

Typical cause values are:

Radio Network Layer Cause:

- Overload
- Unspecified

If the *Cause IE* in the HNB DE-REGISTER message is set to "overload", the HNB shall not retry registration to the same HNB-GW for at least the duration indicated in the *Backoff Timer IE*.

8.3.3 Abnormal Conditions

-

8.4 UE Registration

8.4.1 General

The UE Registration procedure provides means for the HNB to convey UE identification data to the HNB-GW in order to perform access control for the UE in the HNB-GW. The UE Registration also establishes a UE specific context identifier to be used between HNB and HNB-GW. The procedure is triggered when the UE attempts to access the HNB via an initial NAS message and there is no context in the HNB allocated for that UE.

8.4.2 Successful Operation

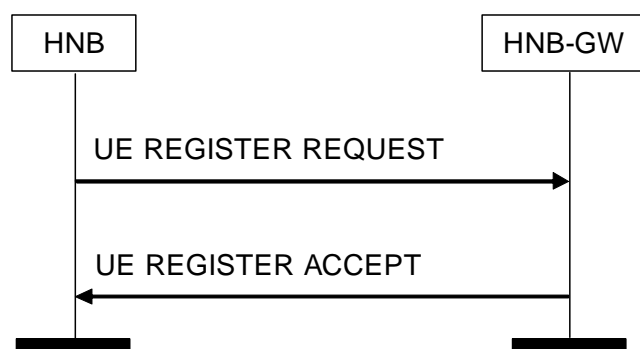


Figure 5: UE Register Procedure: Successful Operation

The HNB shall initiate the procedure by sending a UE REGISTER REQUEST message to the HNB-GW including UE specific data. The HNB shall always include within the *UE Identity IE* the UE permanent identity (i.e. IMSI) if it does not serve a CSG cell or for registration of UEs without CSG capability except if the *Registration Cause IE* indicates "emergency call".

The HNB-GW shall perform access control or membership verification in case of non-CSG UEs or non-CSG HNBs. If the HNB does not operate in closed access mode or access control is successful, the HNB shall respond with a UE REGISTER ACCEPT message including the *Context-ID IE*.

The UE REGISTER ACCEPT message may include the *CSG Membership Status IE* for the UE registering to the cell.

The HNB-GW shall not perform access control if the *Registration Cause IE* indicates "emergency call".

8.4.3 Unsuccessful Operation

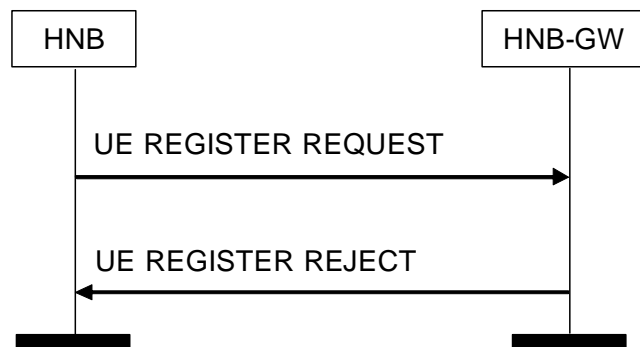


Figure 6: UE Register Procedure: Unsuccessful Operation

If the HNB-GW is unable to accept the UE registration it shall reject the procedure with a UE REGISTER REJECT message.

Typical Cause values:

Radio Network Layer Cause:

- Invalid UE identity
- UE not allowed on this HNB
- HNB not registered
- Unspecified

8.4.4 Abnormal Conditions

-

8.5 UE De-Registration

8.5.1 General

The purpose of the UE De-Registration Procedure is to request the release of a UE context in the HNB-GW or the HNB.

8.5.2 Successful Operation (HNB Originated)



Figure 7 UE De-Register Procedure: HNB Originated Successful Operation

The HNB shall initiate the procedure by sending a UE DE-REGISTER message. When receiving the UE DE-REGISTER message the HNB-GW shall release the resources associated with that UE including the Context-ID.

Typical Cause values:

Radio Network Layer Cause:

- Connection with UE lost
- UE RRC Release
- Unspecified
- UE relocated

8.5.3 Successful Operation (HNB-GW Originated)

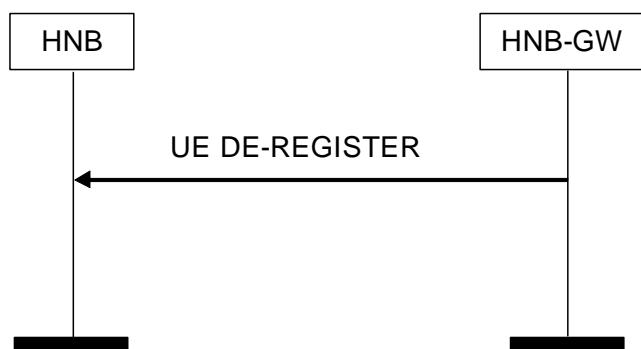


Figure 8 UE De-Register Procedure: HNB-GW Originated Successful Operation

The HNB-GW shall initiate the procedure by sending a UE DE-REGISTER message. When receiving the UE DE-REGISTER message the HNB shall release the resources associated with the provided Context-ID.

Typical Cause values:

Radio Network Layer Cause:

- UE Registered in another HNB
- Unspecified
- UE not allowed on this HNB

8.5.4 Abnormal Conditions

--

8.6 Error Indication

8.6.1 General

The Error Indication procedure is initiated by either the HNB or the HNB-GW to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

8.6.2 Successful Operation

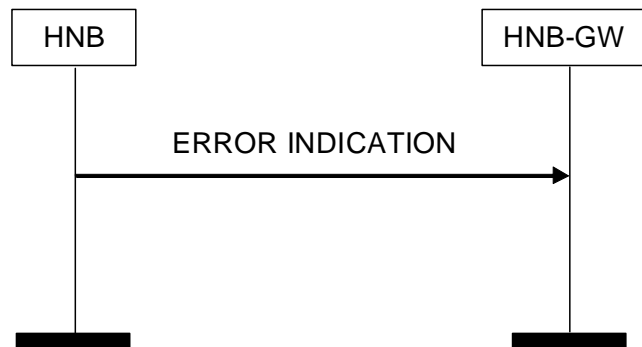


Figure 9 Error Indication HNB Originated, Successful Operation

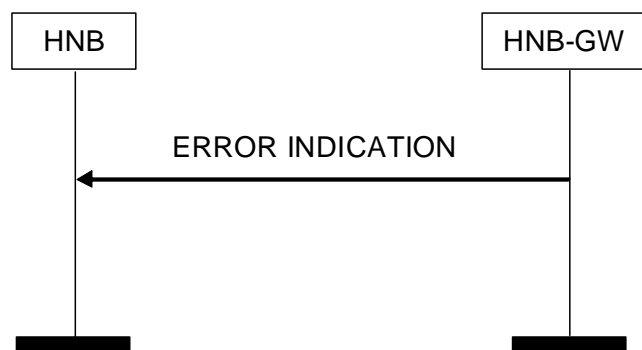


Figure 10 Error Indication HNB-GW Originated, Successful Operation

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the node receiving an erroneous HNBAP message.

8.7 CSG Membership Update Procedure

8.7.1 Successful Operation

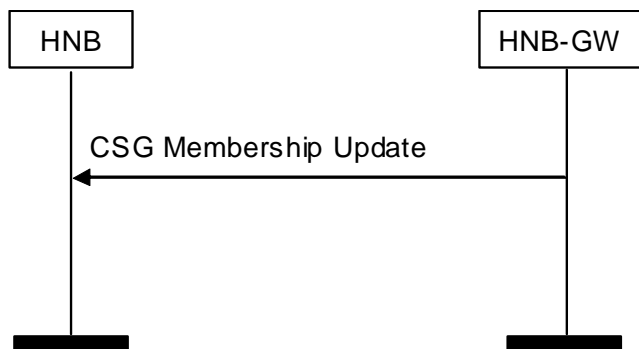


Figure 11: CSG Membership Update: Successful Operation

The HNB-GW shall initiate this procedure whenever it needs to indicate a change of a UE's CSG membership status to the HNB.

8.7.2 Abnormal Conditions

-

8.8 Void

8.8.1 Void

8.8.2 Void

8.8.3 Void

8.9 TNL Update

8.9.1 General

The purpose of the TNL Update procedure is to provide the HNB-GW with updated TNL information for the indicated RABs.

8.9.2 Successful Operation

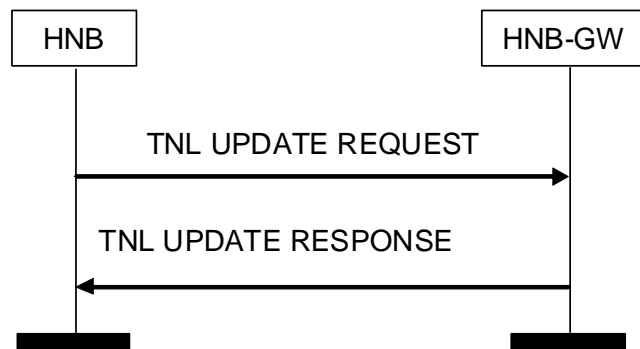


Figure 13: TNL Update procedure: Successful operation.

The HNB initiates the procedure by sending the TNL UPDATE REQUEST message to the HNB-GW.

Upon reception of the TNL UPDATE REQUEST message, the HNB-GW may start sending user data on the user plane to the target HNB. The HNB-GW shall respond with a TNL UPDATE RESPONSE message if the HNB-GW succeeds to establish TNL resources for the RABs indicated within the TNL UPDATE REQUEST message.

8.9.3 Unsuccessful Operation

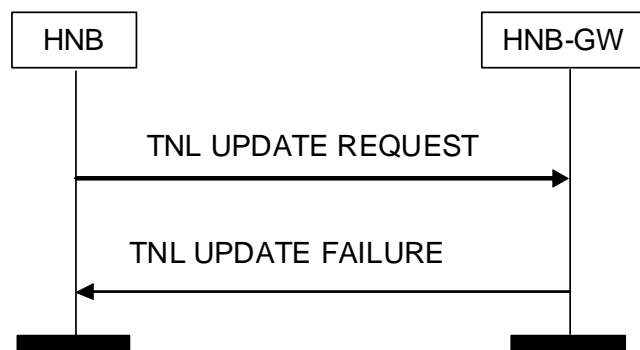


Figure 14: TNL Update: Unsuccessful operation.

If the HNB-GW fails to establish TNL resources for the RABs indicated within the TNL UPDATE REQUEST message the HNB-GW shall send the TNL UPDATE FAILURE message to the HNB with an appropriate cause value.

8.9.4 Abnormal Conditions

-

8.10 HNB Configuration Transfer Procedure

8.10.1 General

The purpose of the HNB Configuration Transfer procedure is to obtain IP address information and other necessary information for establishing Iurh connections between HNBs.

8.10.2 Successful Operation

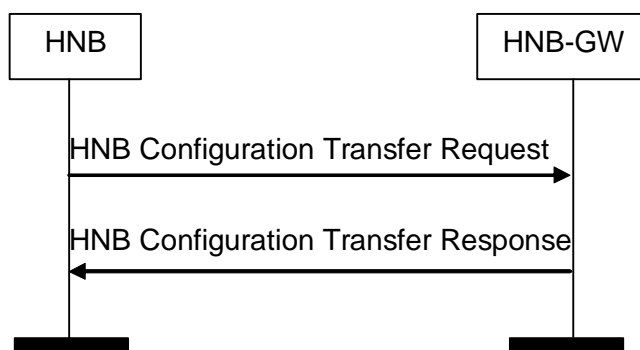


Figure 15: HNB Configuration Transfer Procedure: Successful Operation

The HNB initiates this procedure by sending an HNB CONFIGURATION TRANSFER REQUEST message to the HNB-GW in order to retrieve the IP address and other necessary information for each neighbour HNB indicated in the *Neighbour Information Request List* IE. The HNB shall only request configuration information for those neighbour HNBs for which information has not already been received.

The HNB CONFIGURATION TRANSFER REQUEST shall contain information for all requested neighbour HNBs in the *Neighbour Information List* IE. Available neighbour information shall be indicated in the *HNB Configuration Information Provided* IE, if no neighbour information is available this shall be indicated in the *HNB Configuration Information Missing* IE with the *Cause* IE set to an appropriate value.

For each available neighbour information within the *Neighbour Information List* IE in the HNB CONFIGURATION TRANSFER RESPONSE message the HNB attempts establishing a transport layer session using the addresses provided in an ordered manner starting with the first entry of the list, if none is established yet, and an Iurh connection towards the related neighbour HNB.

8.10.3 Void

8.10.4 Abnormal Conditions

-

8.11 Relocation Complete

8.11.1 General

The purpose of the Relocation Complete procedure is to inform the HNB-GW that RNSAP Relocation at the Target-HNB has completed. The message indicates the RABs successfully established at the Target-HNB.

8.11.2 Successful Operation



Figure 17: Relocation Complete procedure. Successful operation.

The Target-HNB initiates the procedure by sending the RELOCATION COMPLETE message to the HNB-GW.

9 Elements for HNBAP Communication

9.1 Message Functional Definition and Content

9.1.1 General

Subclause 9.1 presents the contents of HNBAP messages in tabular format. The corresponding ASN.1 definition is presented in subclause 9.3. In case there is contradiction between the tabular format in subclause 9.1 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional IEs, where the tabular format shall take precedence.

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [5].

For each message there is, a table listing the signalling elements in their order of appearance in the transmitted message.

9.1.2 Message Contents

9.1.2.1 Presence

All information elements in the message descriptions below are marked mandatory, optional or conditional according to table 3

Table 3: Meaning of abbreviations used in HNBAP messages

Abbreviation	Meaning
M	IE's marked as Mandatory (M) will always be included in the message.
O	IE's marked as Optional (O) may or may not be included in the message.
C	IE's marked as Conditional (C) will be included in a message only if the condition is satisfied. Otherwise the IE is not included.

9.1.2.2 Criticality

Each Information Element or Group of Information Elements may have criticality information applied to it. Following cases are possible.

Table 4: Meaning of content within "Criticality" column

Abbreviation	Meaning
–	No criticality information is applied explicitly.
YES	Criticality information is applied. This is usable only for non-repeatable IEs
GLOBAL	The IE and all its repetitions together have one common criticality information. This is usable only for repeatable IEs.
EACH	Each repetition of the IE has its own criticality information. It is not allowed to assign different criticality values to the repetitions. This is usable only for repeatable IEs.

9.1.2.3 Range

The Range column indicates the allowed number of copies of repetitive IEs/IE groups.

9.1.2.4 Assigned Criticality

This column provides the actual criticality information as defined in subclause 10.3.2, if applicable.

9.1.3 HNB REGISTER REQUEST

This message is sent by the HNB to the HNB-GW to register the HNB at the HNB-GW.

Direction: HNB → HNB-GW

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
HNB Identity	M		9.2.2		YES	reject
HNB Location Information	M		9.2.3		YES	reject
PLMN-ID	M		9.2.14		YES	reject
Cell-ID	M		9.2.25		YES	reject
LAC	M		9.2.11		YES	reject
RAC	M		9.2.12		YES	reject
SAC	M		9.2.13		YES	reject
CSG-ID	O		9.2.27		YES	reject
Service Area For Broadcast	O		SAC 9.2.13		YES	ignore
HNB Cell Access Mode	O		9.2.31		YES	reject
PSC	O		9.2.41		YES	ignore
lurh signalling TNL Address	O		IP Address 9.2.8	HNB IP address used for direct lurh connectivity	YES	ignore

9.1.4 HNB REGISTER ACCEPT

This message is sent by the HNB-GW to the HNB as a successful response to a HNB REGISTER REQUEST message.

Direction: HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
RNC-ID	M		9.2.26		YES	reject
Mux Port Number	O		9.2.29	The mux port number at which HNB-GW expects to receive multiplexed packets.	YES	Ignore
lurh signalling TNL Address	O		IP Address 9.2.8	HNB-GW IP address used for lurh connectivity via the HNB-GW	YES	ignore

9.1.5 HNB REGISTER REJECT

This message is sent by the HNB-GW to the HNB as unsuccessful response to a HNB REGISTER REQUEST message.

Direction: HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Cause	M		9.2.15		YES	ignore
Criticality Diagnostics	O		9.2.16		YES	ignore
Backoff Timer	C- ifOverload		9.2.28		YES	reject

Condition	Explanation
<i>IfOverload</i>	This IE shall be present if the <i>Cause</i> IE is set to "Overload".

9.1.6 UE REGISTER REQUEST

This message is sent by the HNB to the HNB-GW to register a UE at HNB-GW for service.

Direction: HNB → HNB-GW

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
UE Identity	M		9.2.17		YES	reject
Registration Cause	M		9.2.21		YES	ignore
UE Capabilities	M		9.2.24		YES	reject

9.1.7 UE REGISTER ACCEPT

This message is sent by the HNB-GW to the HNB as a successful response to a UE REGISTER REQUEST message.

Direction: HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
UE Identity	M		9.2.17		YES	reject
Context-ID	M		9.2.9		YES	reject
CSG Membership Status	O		9.2.30		YES	reject

9.1.8 UE REGISTER REJECT

This message is sent by the HNB-GW to the HNB as unsuccessful response to a UE REGISTER REQUEST message.

Direction: HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
UE Identity	M		9.2.17		YES	reject
Cause	M		9.2.15		YES	ignore
Criticality Diagnostics	O		9.2.16		YES	ignore

9.1.9 HNB DE-REGISTER

This message is sent by the HNB to the HNB-GW or HNB-GW to HNB to deregister the HNB,

Direction: HNB → HNB-GW or HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Cause	M		9.2.15		YES	ignore
Backoff Timer	C- <i>ifOverload</i>		9.2.28		YES	reject

Condition	Explanation
<i>IfOverload</i>	This IE shall be present if the <i>Cause</i> IE is set to "Overload".

9.1.10 UE DE-REGISTER

This message is sent by the HNB to the HNB-GW or HNB-GW to HNB to de-register a UE.

Direction: HNB → HNB-GW, HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Context-ID	M		9.2.9		YES	reject
Cause	M		9.2.15		YES	ignore

9.1.11 ERROR INDICATION

This message is sent by the HNB to HNB-GW or HNB-GW to HNB and is used to indicate that some errors have been detected.

Direction: HNB → HNB-GW, HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	ignore
Cause	M		9.2.15		YES	ignore
Criticality Diagnostics	O		9.2.16		YES	ignore

9.1.12 CSG MEMBERSHIP UPDATE

This message is sent by the HNB-GW to HNB to indicate CSG Membership changes to the HNB.

Direction: HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Context-ID	M		9.2.9		YES	reject
CSG Membership Status	M		9.2.30		YES	reject

9.1.13 Void

9.1.14 Void

9.1.15 TNL UPDATE REQUEST

This message is sent by the HNB to the HNB-GW to inform the GW of new TNL information for the referenced RABs.

Direction: HNB → HNB-GW

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Context-ID	M		9.2.9		YES	reject
RAB List	M		9.2.32		YES	reject
Update Cause	M		9.2.39		YES	reject

9.1.16 TNL UPDATE RESPONSE

This message is sent by the HNB-GW to inform the HNB that a TNL update switch has been successfully completed in the HNB-GW.

Direction: HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Context-ID	M		9.2.9		YES	reject

9.1.17 TNL UPDATE FAILURE

This message is sent by the HNB-GW to inform the HNB that a failure has occurred during the TNL update procedure.

Direction: HNB-GW → HNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Context-ID	M		9.2.9		YES	reject
Cause	M		9.2.15		YES	ignore
Criticality Diagnostics	O		9.2.16		YES	ignore

9.1.18 HNB CONFIGURATION TRANSFER REQUEST

This message is sent by the HNB to the HNB-GW to request configuration information for neighbouring HNBs.

Direction: HNB → HNB-GW

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Neighbour Information Request List	M				YES	reject
>Neighbour Information Request		1 to <maxno of Neighbours>	HNB RNL Identity 9.2.36		-	

Range bound	Explanation
maxno of Neighbours	Maximum number of neighbour cells associated to a given HNB. Value is 32.

9.1.19 HNB CONFIGURATION TRANSFER RESPONSE

This message is sent by the HNB-GW to the HNB as a response to a HNB CONFIGURATION TRANSFER REQUEST message.

Direction: HNB-GW → HNB

PARAMETER	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	reject
Neighbour Information List	M				YES	reject
>Neighbour Information		1 to <maxno ofNeighbours>	HNB Configuration Information 9.2.40		-	

Range bound	Explanation
<i>maxnoofNeighbours</i>	Maximum number of neighbour cells associated to a given HNB. Value is 32.

9.1.20 Void

9.1.21 RELOCATION COMPLETE

This message is sent by the HNB to inform the HNB-GW that a relocation is completed.

Direction: HNB → HNB GW

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1		YES	ignore
Context-ID	M		9.2.9		YES	ignore

9.2 Information Element Definitions

9.2.0 General

Subclause 9.2 presents the HNBAP IE definitions in tabular format. The corresponding ASN.1 definition is presented in subclause 9.3. In case there is contradiction between the tabular format in subclause 9.2 and the ASN.1 definition, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, where the tabular format shall take precedence.

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information;

9.2.1 Message Type

Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/GROUP NAME	Presence	Range	IE Type and Reference	Semantics Description
Message Type				
>Procedure Code	M		ENUMERATED (HNB register, UE Register, UE De-Register, HNB De-Register Error Indication, ..., CSG Membership Update, Access Control Query, TNL Update, HNB Configuration Transfer, Relocation Complete)	
>Type of Message	M		ENUMERATED (Initiating Message, Successful Outcome, Unsuccessful Outcome, Outcome)	

9.2.2 HNB Identity

HNB Identity IE is sent from the HNB to the HNB-GW and identifies the HNB.

IE/GROUP NAME	Presence	Range	IE Type and Reference	Semantics Description
HNB Identity			OCTET STRING (SIZE(1..255))	See note below.

Note:

The octet string shall take form of an Network Access Identifier (NAI) as defined in IETF RFC 4282 [13]. The format of the HNB-Identity will be:

0<IMSI>@<realm>

Or

1<OUI>-<SerialNumber>@<realm>

Where <IMSI> is a 16 digit number coded as specified in TS 23.003 [12];

and <OUI> and <SerialNumber> are coded as specified in TR-069 [14].

9.2.3 HNB Location Information

The *HNB Location Information* IE is sent from the HNB to HNB-GW to provide information on the location of the HNB.

IE/GROUP NAME	PRESENCE	RANGE	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
HNB Location Information		1			-	-
>Macro Coverage Information	O		9.2.7		-	-
>Geographic Location	O		9.2.4		-	-
>HNB Internet Information	O		IP Address 9.2.8		YES	reject

9.2.4 Geographical Location

This IE identifies the Ellipsoid point with altitude as in ref TS 23.032 [4].

IE/GROUP NAME	PRESENCE	RANGE	IE type and reference	Semantics description
Geographical Coordinates	M		9.2.5	
Altitude and Direction	M		9.2.6	

9.2.5 Geographical Coordinates

This IE contains the geographical coordinates of an ellipsoid point.

IE/GROUP NAME	PRESENCE	RANGE	IE type and reference	Semantics description
Latitude Sign	M		ENUMERATED (North, South)	
Degrees Of Latitude	M		INTEGER ($0..2^{23}-1$)	The IE value (N) is derived by this formula: $N \leq 2^{23} \times X / 90 < N+1$ X being the latitude in degree ($0^\circ.. 90^\circ$)
Degrees Of Longitude	M		INTEGER ($-2^{23}..2^{23}-1$)	The IE value (N) is derived by this formula: $N \leq 2^{24} \times X / 360 < N+1$ X being the longitude in degree ($-180^\circ..+180^\circ$)

9.2.6 Altitude and Direction

This IE contains the altitude and direction of an ellipsoid point.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Altitude and direction		1		
>Direction of Altitude	M		ENUMERATED (Height, Depth)	
>Altitude	M		INTEGER ($0..2^{15}-1$)	The relation between the value (N) and the altitude (a) in meters it describes is $N \leq a < N+1$, except for $N=2^{15}-1$ for which the range is extended to include all greater values of (a).

9.2.7 Macro Coverage Information

The *Macro Coverage Information* IE identifies the macro cell used by the HNB for location. This may be e.g. a GERAN Cell ID or a UTRAN Cell ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE <i>Cell Identifier</i>				
> <i>UTRAN Cell ID Information</i>				
>>LAC	M		9.2.11	
>>RAC	M		9.2.12	
>>PLMN-ID	M		9.2.14	
>>Cell-ID	M		9.2.25	
> <i>GERAN Cell ID Information</i>				
>>PLMN-ID	M		9.2.14	
>>LAC	M		9.2.11	0000 and FFFE not allowed.
>>CI	M		OCTET STRING (2)	

9.2.8 IP Address

This IE defines an IP address.

IE/GROUP NAME	Presence	Range	IE Type and Reference	Semantics Description
CHOICE <i>IP Address</i>				
> <i>IPV4</i>				
>>Internet Address ipv4	M		OCTET STRING(4)	
> <i>IPV6</i>				
>>Internet Address ipv6	M		OCTET STRING(16)	

9.2.9 Context-ID

The *Context-ID* IE uniquely identifies a particular UE in the HNB and HNB-GW. This unique Context-ID is used for PS and CS domain.

IE/GROUP NAME	Presence	Range	IE Type and Reference	Semantics Description
Context-ID			BIT STRING(24)	

9.2.10 IMSI

The IMSI is used to uniquely identify a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
IMSI			OCTET STRING (SIZE (3..8))	<ul style="list-style-type: none"> - digits 0 to 9, encoded 0000 to 1001, - 1111 used as filler digit, two digits per octet, - bit 4 to 1 of octet n encoding digit 2n-1 - bit 8 to 5 of octet n encoding digit 2n <p>-Number of decimal digits shall be from 6 to 15 starting with the digits from the PLMN identity.</p> <p>When the IMSI is made of an odd number of digits, the filler digit shall be added at the end to make an even number of digits of length 2N. The filler digit shall then be consequently encoded as bit 8 to 5 of octet N.</p>

9.2.11 LAC

This element is used to identify a Location Area.

IE/GROUP NAME	Presence	Range	IE Type and Reference	Semantics Description
LAC			OCTET STRING(2)	

9.2.12 RAC

This element is used to identify a Routing Area within a Location Area. It is used for PS services.

IE/GROUP NAME	Presence	Range	IE Type and Reference	Semantics Description
RAC			OCTET STRING(1)	

9.2.13 SAC

The SAC identifies the Service Area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SAC			OCTET STRING (SIZE(2))	

9.2.14 PLMN-ID

The PLMN-ID identifies a Public Land Mobile Network.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN-ID			OCTET STRING (SIZE (3))	<ul style="list-style-type: none">- digits 0 to 9, encoded 0000 to 1001,- 1111 used as filler digit, two digits per octet,- bits 4 to 1 of octet n encoding digit 2n-1- bits 8 to 5 of octet n encoding digit 2n <p>-The PLMN identity consists of 3 digits from MCC followed by either</p> <ul style="list-style-type: none">- a filler digit plus 2 digits from MNC (in case of 2 digit MNC)or- 3 digits from MNC (in case of a 3 digit MNC).

9.2.15 Cause

The *Cause* IE indicates the reason for a particular error event for the HNBAP protocol.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE <i>Cause Group</i>				
> <i>Radio Network Layer</i>				
>>Radio Network Layer Cause	M		ENUMERATED (overload, unauthorised-Location, unauthorised-HNB, HNB Parameter mismatch, Invalid UE identity, UE not allowed on this HNB, UE unauthorised, Connection with UE lost, UE RRC Release, HNB not registered, unspecified, Normal, UE relocated, UE Registered in another HNB, ..., No Neighbour Information available, lurh connection to that Neighbour not Allowed)	
> <i>Transport Layer</i>				
>>Transport Layer Cause	M		ENUMERATED (Transport Resource Unavailable, Unspecified, ...)	
> <i>Protocol</i>				
>>Protocol Cause	M		ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message), ...)	
> <i>Misc</i>				
>>Misc Cause	M		ENUMERATED (Processing Overload, Hardware Failure, O&M Intervention, Unspecified, ...)	

The meaning of the different cause values is described in the following table. Cause values for information 'not valid' indicates that the information is not valid in the context that it was received.

Radio Network Layer cause	Meaning
Connection with UE lost	The connection to a Registered UE has been lost
HNB not registered	The HNB is not registered on this gateway
HNB Parameter Mismatch	The HNB-GW cannot register the HNB because of mismatch in parameters between HNB and HNB-GW
Invalid UE identity	The UE ID supplied for UE registration is not valid
lurh connection to that Neighbour not Allowed	Any lurh connection to the indicated neighbour is not allowed.
No Neighbour Information available	The requested neighbour information is not available.
Normal	No error has occurred
Overload	The HNB-GW cannot handle the HNB due to overload.
UE not allowed on this HNB	The UE is identified as not being allowed to use services on this HNB. (temporary rejection)
UE not authorised	The UE is identified as not being allowed to use services on a HNB (permanent rejection).
UE Registered in another HNB	The UE has already registered in another HNB on same HNB-GW.
UE relocated	The UE has been relocated to a neighbouring cell
UE RRC release	The Registered UE's RRC is released (e.g. due to IMSI detach NAS procedure)
Unauthorised-HNB	The HNB-GW cannot register the HNB because its supplied information is not considered valid
Unauthorised-Location	The HNB-GW cannot register the HNB because the location information provided is not valid.
Unspecified	Sent when none of the above cause values applies but still the cause is Radio Network layer related.

Transport Network Layer cause	Meaning
Transport resource unavailable	The required transport resources are not available.
Unspecified	Sent when none of the above cause values applies but still the cause is Transport Network layer related.

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the concerned criticality indicated "reject".
Abstract Syntax Error (Ignore and Notify)	The received message included an abstract syntax error and the concerned criticality indicated "ignore and notify".
Abstract syntax error (falsely constructed message)	The received message contained IEs in wrong order or with too many occurrences.
Message not Compatible with Receiver State	The received message was not compatible with the receiver state.
Semantic Error	The received message included a semantic error.
Transfer Syntax Error	The received message included a transfer syntax error.
Unspecified	Sent when none of the above cause values applies but still the cause is protocol related.

Miscellaneous cause	Meaning
Hardware Failure	HNB hardware failure.
O&M Intervention	Operation and Maintenance intervention related to HNB.
Processing Overload	Control processing overload.
Unspecified	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol.

9.2.16 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the HNB or the HNB-GW when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
---------------	----------	-------	-----------------------	-----------------------

Criticality Diagnostics		1		
>Procedure Code	O		INTEGER (0..255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error
>Triggering Message	O		ENUMERATED (initiating message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
>Procedure Criticality	O		ENUMERATED(reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Information Element Criticality Diagnostics		0 to <maxnoof errors>		
>IE Criticality	M		ENUMERATED(reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value 'ignore' shall not be used.
>IE ID	M		INTEGER (0..65535)	The IE Id of the not understood or missing IE
>Type of Error	M		ENUMERATED(not understood, missing, ...)	

Range bound	Explanation
<i>maxnooferrors</i>	Maximum no. of IE errors allowed to be reported with a single message. The value for maxnooferrors is 256.

9.2.17 UE Identity

This is a unique identifier for the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE UE Identity				
>IMS/				
>>IMSI			9.2.10	
>TMSI and LAI (GSM-MAP)				
>>TMSI	M		9.2.19	
>>LAI	M		9.2.20	
>P-TMSI and RAI (GSM-MAP)				
>>P-TMSI	M		9.2.22	
>>RAI (GSM-MAP)	M		9.2.23	
>IMEI				
>>IMEI			9.2.18	
>ESN (DS-41)				
>>ESN (DS-41)			BIT STRING (SIZE (32))	
>IMS/DS-41)				
>>IMSI (DS-41)			OCTET STRING (SIZE (5..7))	
>IMSI and ESN (DS-41)				
>>ESN (DS-41)	M		BIT STRING(SIZE (32))	
>>IMSI (DS-41)	M		OCTET STRING (SIZE (5..7))	
>TMSI(DS-41)				
>>TMSI (DS-41)			OCTET STRING (SIZE (2..17))	

9.2.18 IMEI

This IE contains an International Mobile Equipment Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
IMEI			BIT STRING(60)	

9.2.19 TMSI (GSM-MAP)

This IE contains a Temporary Mobile Subscriber Identity, used towards a GSM-MAP type of PLMN.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
TMSI (GSM-MAP)			BIT STRING (32)	The first/leftmost bit of the bit string contains the most significant bit of the TMSI.

9.2.20 LAI

Location Area Identification identifies uniquely a location area for a GSM-MAP type of PLMN.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
PLMN-ID	M		9.2.14	
LAC	M		9.2.11	

9.2.21 Registration Cause

This IE indicates if a UE registration is for an emergency call.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
Registration cause			Enumerated { emergency call, normal, ... }	

9.2.22 P-TMSI (GSM-MAP)

This IE contains a Packet Temporary Mobile Subscriber Identity (P-TMSI), used towards a GSM-MAP type of PLMN.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
P-TMSI			BIT STRING (32)	The first/leftmost bit of the bit string contains the most significant bit of the P-TMSI.

9.2.23 Routing Area Identification

This IE identifies uniquely a routing area for a GSM-MAP type of PLMN.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
LAI	M		9.2.20	
RAC	M		9.2.12	

9.2.24 UE Capabilities

This IE identifies UE capabilities and release.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
UE Capabilities		1		
>Access Stratum Release Indicator	M		Enumerated { R99, Rel-4, Rel-5, Rel-6, Rel-7, Rel-8-and-beyond, ... }	Values as defined in TS 25.331 [10]
>CSG Capability	M		Enumerated {CSG capable, Not CSG capable, ... }	Indicates a CSG capable UE.

9.2.25 Cell-ID

This IE identifies uniquely a cell within a PLMN, as defined in TS 25.331 [10].

Information Element/Group name	Presence	Range	Type and reference	Semantics description
Cell-ID			BIT STRING (SIZE (28))	This information element identifies a cell uniquely within a PLMN.

9.2.26 RNC-ID

The HNB uses the RNC-ID as specified in TS 25.467 [3].

Information Element/Group name	Presence	Range	Type and reference	Semantics description
RNC-ID			INTEGER (0..65535)	Values greater than 4095 are extended (16bit) RNC Ids.

9.2.27 CSG-ID

This IE indicates the CSG-ID of a particular HNB, as defined in TS 23.003 [12]

Information Element/Group name	Need	Multi	Type and reference	Semantics description
CSG-ID			BIT STRING (SIZE(27))	

9.2.28 Backoff Timer

The *Backoff Timer* IE indicates in seconds the minimum duration for which the HNB registration shall not be retried.

Information Element/Group name	Need	Multi	Type and reference	Semantics description
Backoff Timer			INTEGER (0..3600)	Value '0' indicates no specified time.

9.2.29 Mux Port Number

This IE identifies the mux port number on which the HNB-GW expects the multiplexed packets from the HNB

Information Element/Group name	Presence	Range	Type and reference	Semantics description
Mux port number			INTEGER (1024..65535)	

9.2.30 CSG Membership Status

This element indicates the Membership status of the UE to a particular CSG.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CSG Membership Status	M		ENUMERATED (member, not-member,...)	

9.2.31 HNB Cell Access Mode

This information element indicates whether the cell of the HNB operates in a Closed, Hybrid, or Open Access mode as defined in TS 22.220 [15].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
HNB Cell Access Mode	M		ENUMERATED(closed, hybrid, open, ...)	

9.2.32 RAB List

The *RAB List* IE indicates a list of old and new RAB transport information.

IE/Group name	Presence	Range	IE Type and reference	Semantics description
RAB List		1 to <maxnoof RABs>		
>RAB ID	M		9.2.43	
>Old Transport Info	M		Transport Info 9.2.33	
>New Transport Info	M		Transport Info 9.2.33	
>CN Domain Indicator	M		9.2.37	

Range bound	Explanation
<i>maxnoofRABs</i>	Maximum no. of RABs for one UE. Value is 256.

9.2.33 Transport Info

The *Transport Info* IE indicates transport network layer related information.

IE/Group name	Presence	Range	IE Type and reference	Semantics description
Transport Layer Address	M		9.2.34	
Transport Association	M		9.2.35	

9.2.34 Transport Layer Address

This information element is an IP address to be used for the user plane transport.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Transport Layer Address	M		BIT STRING (1..160, ...)	

9.2.35 Transport Association

This element is used to associate the RAB and the corresponding transport bearer. For the CS domain this information element is the UDP port. In PS domain this information element is the GTP Tunnel Endpoint Identifier.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
<i>CHOICE Transport Association</i>				
> <i>GTP TEID</i>			OCTET STRING (4)	
> <i>Binding ID</i>			OCTET STRING (1..4, ...)	The UDP port is included in octet 1 and 2. The first octet of the UDP port field shall be included in the first octet of the Binding ID.

9.2.36 HNB RNL Identity

The *HNB RNL Identity* IE globally identifies an HNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE <i>HNB RNL Identity</i>					-	-
> <i>HNB Cell Identifier</i>						
>> <i>HNB Cell Identifier</i>	M		9.2.42		YES	reject

9.2.37 CN Domain Indicator

The *CN Domain Indicator* IE globally identifies a CN domain.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CN Domain Indicator	M		ENUMERATED (CS domain, PS domain)	

9.2.38 Void

9.2.39 Update Cause

This IE indicates the reason for TNL update request.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
Update cause			ENUMERATED (Relocation preparation, ...)	

9.2.40 HNB Configuration Information

This IE contains configuration information of a HNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
HNB RNL Identity	M		9.2.36	
CHOICE <i>Configuration Information</i>	M			
> <i>HNB Configuration Information Provided</i>				
>>PSC	O		9.2.42	
>>CSG-ID	O		9.2.27	
>>HNB Cell Access Mode	M		9.2.31	
>> lurh signalling TNL Address List		1 to <maxnooflurhAddresses>		
>>>lurh signalling TNL address	M		IP address 9.2.8	
> <i>HNB Configuration Information Missing</i>				
>>Cause	M		9.2.15	

Range bound	Explanation
MaxnooflurhAddresses	Maximum no. of lurh signalling TNL addresses provided. The value for MaxnooflurhAddresses is 3.

9.2.41 PSC

This IE contains the Primary Scrambling Code of the cell served by the HNB.

Information Element/Group name	Presence	Range	Type and reference	Semantics description
PSC			BIT STRING (SIZE(9))	

9.2.42 HNB Cell Identifier

This IE contains the information which identifies a HNB for which configuration information is requested.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN-ID	M		9.2.14	
Cell-ID	M		9.2.25	

9.2.43 RAB ID

This IE shall be used and encoded as defined in TS 25.413 [2].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAB ID	M		BIT STRING (8)	

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.0 General

HNBAP ASN.1 definition conforms with ITU-T Rec. X.680 [8] and ITU-T Rec. X.681 [9].

The ASN.1 definition specifies the structure and content of HNBAP messages. HNBAP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct a HNBAP message according to the PDU definitions module and with the following additional rules (Note that in the following IE means an IE in the object set with an explicit id. If one IE needed to appear more than once in one object set, then the different occurrences have different IE ids):

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list where the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

If a HNBAP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax error in subclause 10.3.6.

9.3.1 Usage of private message mechanism for non-standard use

The private message mechanism for non-standard use may be used:

- for special operator- (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor interoperability;
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.2 Elementary Procedure Definitions

```
-- *****
--
-- Elementary Procedure definitions
--
-- *****
HNBAP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) hnbap(6) version1 (1) hnbap-PDU-Descriptions (0)}

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS
    Criticality,
    ProcedureCode
FROM HNBAP-CommonDataTypes

    HNBRegisterRequest,
    HNBRegisterAccept,
    HNBRegisterReject,
    HNBDe-Register,
    UERegisterRequest,
    UERegisterAccept,
    UERegisterReject,
    UEDe-Register,
    ErrorIndication,
    PrivateMessage,
    CSGMembershipUpdate,
    TNLUpdateRequest,
    TNLUpdateResponse,
    TNLUpdateFailure,
    HNBConfigTransferRequest,
    HNBConfigTransferResponse,
    RelocationComplete

FROM HNBAP-PDU-Contents
    id-HNBRegister,
    id-UERegister,
    id-UEDe-Register,
    id-HNBDe-Register,
    id-ErrorIndication,
    id-privateMessage,
    id-CSGMembershipUpdate,
```

```

    id-TNLUpdate,
    id-HNBConfigTransfer,
    id-RelocationComplete

FROM HNBAP-Constants;

-- *****
--
-- Interface Elementary Procedure Class
--
-- *****

HNBAP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage          ,
    &SuccessfulOutcome          OPTIONAL,
    &UnsuccessfulOutcome        OPTIONAL,
    &procedureCode              ProcedureCode  UNIQUE,
    &criticality                 Criticality    DEFAULT ignore
}

WITH SYNTAX {
    INITIATING MESSAGE          &InitiatingMessage
    [SUCCESSFUL OUTCOME         &SuccessfulOutcome]
    [UNSUCCESSFUL OUTCOME       &UnsuccessfulOutcome]
    PROCEDURE CODE              &procedureCode
    [CRITICALITY                 &criticality]
}

-- *****
--
-- Interface PDU definitions
--
-- *****

HNBAP-PDU ::= CHOICE {
    initiatingMessage           InitiatingMessage,
    successfulOutcome           SuccessfulOutcome,
    unsuccessfulOutcome         UnsuccessfulOutcome,
    ...
}

InitiatingMessage ::= SEQUENCE {
    procedureCode              HNBAP-ELEMENTARY-PROCEDURE.&procedureCode      ( { HNBAP-ELEMENTARY-PROCEDURES } ),
    criticality                 HNBAP-ELEMENTARY-PROCEDURE.&criticality        ( { HNBAP-ELEMENTARY-PROCEDURES } { @procedureCode } ),
    value                       HNBAP-ELEMENTARY-PROCEDURE.&InitiatingMessage ( { HNBAP-ELEMENTARY-PROCEDURES } { @procedureCode } )
}

SuccessfulOutcome ::= SEQUENCE {
    procedureCode              HNBAP-ELEMENTARY-PROCEDURE.&procedureCode      ( { HNBAP-ELEMENTARY-PROCEDURES } ),
    criticality                 HNBAP-ELEMENTARY-PROCEDURE.&criticality        ( { HNBAP-ELEMENTARY-PROCEDURES } { @procedureCode } ),
    value                       HNBAP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome ( { HNBAP-ELEMENTARY-PROCEDURES } { @procedureCode } )
}

```

```

UnsuccessfulOutcome ::= SEQUENCE {
    procedureCode  HNBAP-ELEMENTARY-PROCEDURE.&procedureCode      ({HNBAP-ELEMENTARY-PROCEDURES}),
    criticality    HNBAP-ELEMENTARY-PROCEDURE.&criticality        ({HNBAP-ELEMENTARY-PROCEDURES}@procedureCode}),
    value         HNBAP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome ({HNBAP-ELEMENTARY-PROCEDURES}@procedureCode)}
}

-- *****
--
-- Interface Elementary Procedure List
--
-- *****

HNBAP-ELEMENTARY-PROCEDURES HNBAP-ELEMENTARY-PROCEDURE ::= {
    HNBAP-ELEMENTARY-PROCEDURES-CLASS-1 |
    HNBAP-ELEMENTARY-PROCEDURES-CLASS-2 ,
    ...
}

HNBAP-ELEMENTARY-PROCEDURES-CLASS-1 HNBAP-ELEMENTARY-PROCEDURE ::= {
    hNBRegister|
    uERegister,
    ...,
    tnlUpdate      |
    hNBConfigTransfer
}

HNBAP-ELEMENTARY-PROCEDURES-CLASS-2 HNBAP-ELEMENTARY-PROCEDURE ::= {
    uEde-Register |
    hNBDe-Register |
    errorIndication |
    privateMessage,
    ...,
    csg-membership-update|
    relocationComplete
}

-- *****
--
-- Interface Elementary Procedures
--
-- *****

hNBRegister HNBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      HNBRegisterRequest
    SUCCESSFUL OUTCOME      HNBRegisterAccept
    UNSUCCESSFUL OUTCOME    HNBRegisterReject
    PROCEDURE CODE          id-HNBRegister
    CRITICALITY              reject
}

uERegister HNBAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      UERegisterRequest

```

```
SUCCESSFUL OUTCOME      UERegisterAccept
UNSUCCESSFUL OUTCOME     UERegisterReject
PROCEDURE CODE           id-UERegister
CRITICALITY               reject
}

ueDe-Register HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      UEDe-Register
  PROCEDURE CODE          id-UEDe-Register
  CRITICALITY             ignore
}

hNBDe-Register HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      HNBDe-Register
  PROCEDURE CODE          id-HNBDe-Register
  CRITICALITY             ignore
}

errorIndication HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      ErrorIndication
  PROCEDURE CODE          id-ErrorIndication
  CRITICALITY             ignore
}

csg-membership-update HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      CSGMembershipUpdate
  PROCEDURE CODE          id-CSGMembershipUpdate
  CRITICALITY             ignore
}

tnlUpdate HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      TNLUpdateRequest
  SUCCESSFUL OUTCOME      TNLUpdateResponse
  UNSUCCESSFUL OUTCOME    TNLUpdateFailure
  PROCEDURE CODE          id-TNLUpdate
  CRITICALITY             reject
}

hNBConfigTransfer HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      HNBConfigTransferRequest
  SUCCESSFUL OUTCOME      HNBConfigTransferResponse
  PROCEDURE CODE          id-HNBConfigTransfer
  CRITICALITY             reject
}

relocationComplete HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      RelocationComplete
  PROCEDURE CODE          id-RelocationComplete
  CRITICALITY             ignore
}

privateMessage HNBAP-ELEMENTARY-PROCEDURE ::= {
  INITIATING MESSAGE      PrivateMessage
  PROCEDURE CODE          id-privateMessage
}
```

```

    CRITICALITY          ignore
}
END

```

9.3.3 PDU Definitions

```

-- *****
--
-- PDU definitions for HNBAP.
--
-- *****

HNBAP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) hnbap(6) version1 (1) hnbap-PDU-Contents (1) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS
    Cause,
    CriticalityDiagnostics,
    CSGMembershipStatus,
    HNB-Location-Information,
    HNB-Identity,
    Context-ID,
    UE-Identity,
    LAC,
    RAC,
    SAC,
    CN-DomainIndicator,
    IP-Address,
    Registration-Cause,
    UE-Capabilities,
    PLMNIdentity,
    CellIdentity,
    RNC-ID,
    CSG-ID,
    HNB-Cell-Access-Mode,
    BackoffTimer,
    MuxPortNumber,
    RABList,
    HNBConfigInfo,
    AccessResult,
    Update-cause,

```

```
NeighbourInfoList,  
NeighbourInfoRequestList,  
PSC
```

```
FROM HNBAP-IEs
```

```
ProtocolExtensionContainer{},  
ProtocolIE-ContainerList{},  
ProtocolIE-Container{},  
ProtocolIE-Single-Container{},  
PrivateIE-Container{},  
HNBAP-PRIVATE-IES,  
HNBAP-PROTOCOL-EXTENSION,  
HNBAP-PROTOCOL-IES
```

```
FROM HNBAP-Containers
```

```
id-Cause,  
id-CriticalityDiagnostics,  
id-CSGMembershipStatus,  
id-HNB-Location-Information,  
id-HNB-Identity,  
id-Context-ID,  
id-PLMNIdentity,  
id-UE-Identity,  
id-LAC,  
id-RAC,  
id-SAC,  
id-UE-Capabilities,  
id-Registration-Cause,  
id-CellIdentity,  
id-RNC-ID,  
id-CSG-ID,  
id-HNB-Cell-Access-Mode,  
id-BackoffTimer,  
id-Service-Area-For-Broadcast,  
id-MuxPortNumber,  
id-RABList,  
id-HNBConfigInfo,  
id-AccessResult,  
id-Update-cause,  
id-NeighbourInfoList,  
id-NeighbourInfoRequestList,  
id-Iurh-Signalling-TNL-Address,  
id-PSC
```

```
FROM HNBAP-Constants;
```

```
-- *****  
--
```

```

-- HNB Register REQUEST
--
-- *****
HNBRegisterRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { {HNBRegisterRequestIEs} },
    protocolExtensions ProtocolExtensionContainer { {HNBRegisterRequestExtensions} } OPTIONAL,
    ...
}

HNBRegisterRequestIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-HNB-Identity          CRITICALITY reject TYPE HNB-Identity          PRESENCE mandatory } |
    { ID id-HNB-Location-Information CRITICALITY reject TYPE HNB-Location-Information PRESENCE mandatory } |
    { ID id-PLMNIdentity          CRITICALITY reject TYPE PLMNIdentity          PRESENCE mandatory } |
    { ID id-CellIdentity          CRITICALITY reject TYPE CellIdentity          PRESENCE mandatory } |
    { ID id-LAC                   CRITICALITY reject TYPE LAC                   PRESENCE mandatory } |
    { ID id-RAC                   CRITICALITY reject TYPE RAC                   PRESENCE mandatory } |
    { ID id-SAC                   CRITICALITY reject TYPE SAC                   PRESENCE mandatory } |
    { ID id-CSG-ID                CRITICALITY reject TYPE CSG-ID                PRESENCE optional } ,
    ...
}

HNBRegisterRequestExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    { ID id-Service-Area-For-Broadcast CRITICALITY ignore EXTENSION SAC PRESENCE optional } |
    { ID id-HNB-Cell-Access-Mode      CRITICALITY reject EXTENSION HNB-Cell-Access-Mode PRESENCE optional } |
    { ID id-PSC                       CRITICALITY ignore EXTENSION PSC PRESENCE optional } |
    { ID id-Iurh-Signalling-TNL-Address CRITICALITY ignore EXTENSION IP-Address PRESENCE optional } ,
    ...
}

-- *****
--
-- HNB Register Accept
--
-- *****
HNBRegisterAccept ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { {HNBRegisterResponseIEs} },
    protocolExtensions ProtocolExtensionContainer { {HNBRegisterResponseExtensions} } OPTIONAL,
    ...
}

HNBRegisterResponseIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-RNC-ID                CRITICALITY reject TYPE RNC-ID                PRESENCE mandatory } ,
    ...
}

HNBRegisterResponseExtensions HNBAP-PROTOCOL-EXTENSION ::= {
-- Extension for Release 9 to support CS Multiplexing --
    { ID id-MuxPortNumber          CRITICALITY ignore EXTENSION MuxPortNumber PRESENCE optional } |
    { ID id-Iurh-Signalling-TNL-Address CRITICALITY ignore EXTENSION IP-Address PRESENCE optional } ,
    ...
}

```



```

-- *****
--
-- HNB Register REJECT
--
-- *****

HNBRegisterReject ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    { {HNBRegisterRejectIEs} },
    protocolExtensions  ProtocolExtensionContainer { {HNBRegisterRejectExtensions} }    OPTIONAL,
    ...
}

HNBRegisterRejectIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore  TYPE Cause          PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional } |
    { ID id-BackoffTimer   CRITICALITY reject  TYPE BackoffTimer      PRESENCE conditional },
    -- This IE shall be present if the Cause IE is set to "Overload".
    ...
}

HNBRegisterRejectExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- HNB De- Register
--
-- *****

HNBDe-Register ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    { {HNBDe-RegisterIEs} },
    protocolExtensions  ProtocolExtensionContainer { {HNBDe-RegisterExtensions} }    OPTIONAL,
    ...
}

HNBDe-RegisterIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore  TYPE Cause          PRESENCE mandatory } |
    { ID id-BackoffTimer   CRITICALITY reject  TYPE BackoffTimer      PRESENCE conditional },
    -- This IE shall be present if the Cause IE is set to "Overload".
    ...
}

HNBDe-RegisterExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- UE Register REQUEST
--

```

```

-- *****
UERRegisterRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { {UERRegisterRequestIEs} },
    protocolExtensions ProtocolExtensionContainer { {UERRegisterRequestExtensions} } OPTIONAL,
    ...
}

UERRegisterRequestIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-UE-Identity          CRITICALITY reject TYPE UE-Identity          PRESENCE mandatory } |
    { ID id-Registration-Cause   CRITICALITY ignore TYPE Registration-Cause   PRESENCE mandatory } |
    { ID id-UE-Capabilities      CRITICALITY reject TYPE UE-Capabilities      PRESENCE mandatory },
    ...
}

UERRegisterRequestExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- UE Register ACCEPT
--
-- *****

UERRegisterAccept ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { {UERRegisterAcceptIEs} },
    protocolExtensions ProtocolExtensionContainer { {UERRegisterAcceptExtensions} } OPTIONAL,
    ...
}

UERRegisterAcceptIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-UE-Identity          CRITICALITY reject TYPE UE-Identity          PRESENCE mandatory } |
    { ID id-Context-ID          CRITICALITY reject TYPE Context-ID          PRESENCE mandatory },
    ...
}

UERRegisterAcceptExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    { ID id-CSGMembershipStatus CRITICALITY reject EXTENSION CSGMembershipStatus PRESENCE optional },
    ...
}

-- *****
--
-- UE Register REJECT
--
-- *****

UERRegisterReject ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { {UERRegisterRejectIEs} },
    protocolExtensions ProtocolExtensionContainer { {UERRegisterRejectExtensions} } OPTIONAL,
    ...
}

```

```

UERegisterRejectIEs HNBAP-PROTOCOL-IES ::= {
  { ID id-UE-Identity          CRITICALITY reject  TYPE UE-Identity          PRESENCE mandatory } |
  { ID id-Cause                CRITICALITY ignore  TYPE Cause                    PRESENCE mandatory } |
  { ID id-CriticalityDiagnostics CRITICALITY ignore  TYPE CriticalityDiagnostics    PRESENCE optional },
  ...
}

UERegisterRejectExtensions HNBAP-PROTOCOL-EXTENSION ::= {
  ...
}

-- *****
--
-- UE De-Register
--
-- *****

UEDe-Register ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container      { {UEDe-RegisterIEs} },
  protocolExtensions ProtocolExtensionContainer { {UEDe-RegisterExtensions} } OPTIONAL,
  ...
}

UEDe-RegisterIEs HNBAP-PROTOCOL-IES ::= {
  { ID id-Context-ID          CRITICALITY reject  TYPE Context-ID          PRESENCE mandatory } |
  { ID id-Cause                CRITICALITY ignore  TYPE Cause                PRESENCE mandatory },
  ...
}

UEDe-RegisterExtensions HNBAP-PROTOCOL-EXTENSION ::= {
  ...
}

-- *****
--
-- CSG Membership Update
--
-- *****

CSGMembershipUpdate ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container      { {CSGMembershipUpdateIEs} },
  protocolExtensions ProtocolExtensionContainer { {CSGMembershipUpdateExtensions} } OPTIONAL,
  ...
}

CSGMembershipUpdateIEs HNBAP-PROTOCOL-IES ::= {
  { ID id-Context-ID          CRITICALITY reject  TYPE Context-ID          PRESENCE mandatory } |
  { ID id-CSGMembershipStatus CRITICALITY reject  TYPE CSGMembershipStatus PRESENCE mandatory },
  ...
}

CSGMembershipUpdateExtensions HNBAP-PROTOCOL-EXTENSION ::= {

```

```

}
...
}
-- *****
--
-- TNL Update Request
--
-- *****

TNLUpdateRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { { TNLUpdateRequestIEs } },
    protocolExtensions ProtocolExtensionContainer { { TNLUpdateExtensions } } OPTIONAL,
    ...
}

TNLUpdateRequestIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-Context-ID          CRITICALITY reject TYPE Context-ID          PRESENCE mandatory } |
    { ID id-RABList            CRITICALITY reject TYPE RABList            PRESENCE mandatory } |
    { ID id-Update-cause       CRITICALITY reject TYPE Update-cause       PRESENCE mandatory } ,
    ...
}

TNLUpdateExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- TNL UPDATE RESPONSE
--
-- *****

TNLUpdateResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { { TNLUpdateResponseIEs } },
    protocolExtensions ProtocolExtensionContainer { { TNLUpdateResponseExtensions } } OPTIONAL,
    ...
}

TNLUpdateResponseIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-Context-ID          CRITICALITY reject TYPE Context-ID          PRESENCE mandatory } ,
    ...
}

TNLUpdateResponseExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- TNL UPDATE FAILURE
--
-- *****

TNLUpdateFailure ::= SEQUENCE {

```

```

    protocolIEs      ProtocolIE-Container      { {TNLUpdateFailureIEs} },
    protocolExtensions ProtocolExtensionContainer { {TNLUpdateFailureExtensions} } OPTIONAL,
    ...
}

TNLUpdateFailureIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-Context-ID          CRITICALITY reject  TYPE Context-ID          PRESENCE mandatory } |
    { ID id-Cause               CRITICALITY ignore  TYPE Cause                PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional } ,
    ...
}

TNLUpdateFailureExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- HNB Configuration Transfer Request
--
-- *****

HNBConfigTransferRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { {HNBConfigTransferRequestIEs} },
    protocolExtensions ProtocolExtensionContainer { {HNBConfigTransferRequestExtensions} } OPTIONAL,
    ...
}

HNBConfigTransferRequestIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-NeighbourInfoRequestList          CRITICALITY reject  TYPE NeighbourInfoRequestList          PRESENCE mandatory } ,
    ...
}

HNBConfigTransferRequestExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- HNB Configuration Transfer Response
--
-- *****

HNBConfigTransferResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { { HNBConfigTransferResponseIEs } },
    protocolExtensions ProtocolExtensionContainer { { HNBConfigTransferResponseExtensions } } OPTIONAL,
    ...
}

HNBConfigTransferResponseIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-NeighbourInfoList          CRITICALITY reject  TYPE NeighbourInfoList          PRESENCE mandatory } ,
    ...
}

```

```

HNBConfigTransferResponseExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- RELOCATION COMPLETE
--
-- *****

RelocationComplete ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { { RelocationCompleteIEs } },
    protocolExtensions ProtocolExtensionContainer { { RelocationCompleteExtensions } }    OPTIONAL,
    ...
}

RelocationCompleteIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-Context-ID          CRITICALITY ignore TYPE Context-ID          PRESENCE mandatory } ,
    ...
}

RelocationCompleteExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- ERROR INDICATION
--
-- *****

ErrorIndication ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container      { { ErrorIndicationIEs } },
    protocolExtensions ProtocolExtensionContainer { { ErrorIndicationExtensions } }    OPTIONAL,
    ...
}

ErrorIndicationIEs HNBAP-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore TYPE Cause          PRESENCE mandatory } |
    { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional },
    ...
}

ErrorIndicationExtensions HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- PRIVATE MESSAGE
--
-- *****

```

```

PrivateMessage ::= SEQUENCE {
    privateIEs      PrivateIE-Container  {{PrivateMessage-IEs}},
    ...
}

PrivateMessage-IEs HNBAP-PRIVATE-IEs ::= {
    ...
}

END

```

9.3.4 Information Element Definitions

```

-- *****
--
-- Information Element Definitions
--
-- *****

HNBAP-IEs {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) hnbap(6) version1 (1) hnbap-IEs (2) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS
    maxNrOfErrors,
    maxnoofRABs,
    maxnoofNeighbours,
    maxnoofIurhAddresses,
    id-HNB-Internet-Information,
    id-HNB-Cell-Identifier

FROM HNBAP-Constants

    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM HNBAP-CommonDataTypes

    ProtocolExtensionContainer{},
    HNBAP-PROTOCOL-EXTENSION
FROM HNBAP-Containers;

--A
Access-stratum-release-indicator ::= ENUMERATED {r99,
rel-4, rel-5, rel-6, rel-7, rel-8-and-beyond,
...}

```

```
AccessResult ::= ENUMERATED {allowed, notAllowed, ...}

AltitudeAndDirection ::= SEQUENCE {
    directionOfAltitude ENUMERATED {height, depth},
    altitude            INTEGER (0..32767),
    ...
}

--B
BackoffTimer ::= INTEGER(0..3600)

BindingID ::= OCTET STRING(SIZE(1..4,...))

--C
Cause ::= CHOICE {
    radioNetwork      CauseRadioNetwork,
    transport         CauseTransport,
    protocol          CauseProtocol,
    misc              CauseMisc,
    ...
}
CauseRadioNetwork ::= ENUMERATED {
    overload,
    unauthorised-Location,
    unauthorised-HNB,
    hNB-parameter-mismatch,
    invalid-UE-identity,
    uE-not-allowed-on-this-HNB,
    uE-unauthorised,
    connection-with-UE-lost,
    ue-RRC-telease,
    hNB-not-registered,
    unspecified,
    normal,
    uE-relocated,
    ue-registered-in-another-HNB,
    ...,
    no-neighbour-information-available,
    iurh-connection-to-that-neighbour-not-Allowed
}

CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
    ...
}

CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
}
```



```

    unspecified,
    abstract-syntax-error-falsely-constructed-message,
    ...
}

CauseMisc ::= ENUMERATED {
    processing-overload,
    hardware-failure,
    o-and-m-intervention,
    unspecified,
    ...
}

CellIdentity ::=          BIT STRING (SIZE (28))

Context-ID ::= BIT STRING (SIZE(24))

CriticalityDiagnostics ::= SEQUENCE {
    procedureCode          ProcedureCode                OPTIONAL,
    triggeringMessage      TriggeringMessage            OPTIONAL,
    procedureCriticality   Criticality                   OPTIONAL,
    iEsCriticalityDiagnostics CriticalityDiagnostics-IE-List OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} } OPTIONAL,
    ...
}

CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
    SEQUENCE {
        iECriticality      Criticality,
        iE-ID              ProtocolIE-ID,
        typeOfError        TypeOfError,
        iE-Extensions      ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
        ...
    }

CriticalityDiagnostics-IE-List-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

CriticalityDiagnostics-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

CSG-ID ::= BIT STRING (SIZE (27))

CSG-Capability ::= ENUMERATED {
    csg-capable,
    not-csg-capable,
    ...
}

CSGMembershipStatus ::= ENUMERATED {
    member,
    non-member,

```

```

    ...
}

CGI ::= SEQUENCE {
    pLMNidentity      PLMNidentity,
    lAC               LAC,
    cI                CI,
    iE-Extensions    ProtocolExtensionContainer { {CGI-ExtIEs} } OPTIONAL
}

CGI-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

CI                ::= OCTET STRING (SIZE (2))

CN-DomainIndicator ::= ENUMERATED {
    cs-domain,
    ps-domain
}
--D
--E
ESN               ::= BIT STRING (SIZE(32))
--F
--G
GeographicalLocation ::= SEQUENCE {
    geographicalCoordinates      GeographicalCoordinates,
    altitudeAndDirection        AltitudeAndDirection,
    iE-Extensions                ProtocolExtensionContainer { { GeographicLocation-ExtIEs} } OPTIONAL,
    ...
}

GeographicLocation-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

GeographicalCoordinates ::= SEQUENCE {
    latitudeSign      ENUMERATED {north, south},
    latitude          INTEGER (0..8388607),
    longitude         INTEGER (-8388608..8388607),
    iE-Extensions    ProtocolExtensionContainer { {GeographicalCoordinates-ExtIEs} } OPTIONAL,
    ...
}

GeographicalCoordinates-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

GTP-TEI                ::= OCTET STRING (SIZE (4))

--H
HNB-Cell-Access-Mode ::= ENUMERATED {

```

```

    closed,
    hybrid,
    open,
    ...
}

HNB-Cell-Identifier ::= SEQUENCE {
    plmnIdentity      PLMNIdentity,
    cellIdentity     CellIdentity,
    iE-Extensions    ProtocolExtensionContainer { { HNB-Cell-Identifier-ExtIEs } } OPTIONAL,
    ...
}

HNB-Cell-Identifier-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

HNB-RNL-Identity ::= CHOICE {
    hNB-Identity-as-Cell-Identifier HNB-Cell-Identifier,
    ...
}

HNBConfigInfo ::= SEQUENCE {
    hnb-RNL-Identity      HNB-RNL-Identity,
    configurationInformation ConfigurationInformation,
    iE-Extensions        ProtocolExtensionContainer { { HNBConfigInfo-ExtIEs } } OPTIONAL,
    ...
}

HNBConfigInfo-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

ConfigurationInformation ::= CHOICE {
    provided      HNBConfigurationInformationProvided,
    missing      HNBConfigurationInformationMissing,
    ...
}

HNBConfigurationInformationProvided ::= SEQUENCE {
    psc                PSC OPTIONAL,
    cSG-ID             CSG-ID OPTIONAL,
    hNB-Cell-Access-Mode HNB-Cell-Access-Mode,
    iurh-Signalling-TNL-AddressList Iurh-Signalling-TNL-AddressList,
    iE-Extensions     ProtocolExtensionContainer { { HNBConfigurationInformationProvided-ExtIEs } } OPTIONAL,
    ...
}

HNBConfigurationInformationProvided-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

HNBConfigurationInformationMissing ::= SEQUENCE {

```

```

    cause          Cause,
    iE-Extensions  ProtocolExtensionContainer { { HNBConfigurationInformationMissing-ExtIEs } }    OPTIONAL,
    ...
}

HNBConfigurationInformationMissing-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

HNB-Location-Information ::= SEQUENCE {
    macroCoverageInfo      MacroCoverageInformation    OPTIONAL,
    geographicalCoordinates GeographicalLocation      OPTIONAL,
    iE-Extensions          ProtocolExtensionContainer { { HNB-Location-Information-ExtIEs } }    OPTIONAL,
    ...
}

HNB-Location-Information-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
-- Extension for release-8 to support IP address for location verification --
{ID id-HNB-Internet-Information CRITICALITY reject EXTENSION IP-Address PRESENCE optional },
    ...
}

HNB-Identity ::= SEQUENCE {
    hNB-Identity-Info      HNB-Identity-Info,
    iE-Extensions          ProtocolExtensionContainer { { HNB-Identity-ExtIEs } }    OPTIONAL,
    ...
}

HNB-Identity-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

HNB-Identity-Info ::= OCTET STRING (SIZE (1..255))

--I

IMEI ::= BIT STRING (SIZE(60))

IMSI ::= OCTET STRING (SIZE (3..8))
-- Reference: 23.003
IMSIDS41 ::= OCTET STRING (SIZE (5..7))

IMSIESN ::= SEQUENCE {
    IMSIDS41      IMSIDS41,
    eSN           ESN
}

IP-Address ::=SEQUENCE {
    ipaddress      CHOICE {
    ipv4info       Ipv4Address,

```

```

        ipv6info      Ipv6Address,
        ...
    },
    iE-Extensions    ProtocolExtensionContainer { { IP-Address-ExtIEs } }    OPTIONAL,
    ...
}

IP-Address-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

Ipv4Address        ::= OCTET STRING (SIZE (4))

Ipv6Address        ::= OCTET STRING (SIZE (16))

Iurh-Signalling-TNL-AddressList ::= SEQUENCE (SIZE(1..maxnoofIurhAddresses)) OF IP-Address

--J
--K
--L
LAC                ::= OCTET STRING(SIZE(2))

LAI                ::= SEQUENCE {
    pLMNID          PLMNidentity,
    lAC             LAC,
    ...
}

-- M

MacroCoverageInformation ::= SEQUENCE {
    cellIdentity    MacroCellID,
    iE-Extensions  ProtocolExtensionContainer { { MacroCoverageInformation-ExtIEs } }    OPTIONAL,
    ...
}

MacroCoverageInformation-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

MacroCellID ::= CHOICE {
    uTRANCellID    UTRANCellID,
    gERANCellID    CGI,
    ...
}

MuxPortNumber ::= INTEGER (1024..65535)

--N

NeighbourInfoList ::= SEQUENCE (SIZE(1..maxnoofNeighbours)) OF HNBConfigInfo

NeighbourInfoRequestList ::= SEQUENCE (SIZE(1..maxnoofNeighbours)) OF NeighbourInfoRequestItem

```

```

NeighbourInfoRequestItem ::= SEQUENCE {
    hnb-RNL-Identity      HNB-RNL-Identity,
    iE-Extensions        ProtocolExtensionContainer { { NeighbourInfoRequestItem-ExtIEs } }    OPTIONAL,
    ...
}

NeighbourInfoRequestItem-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

--O
--P
PLMNIdentity           ::= OCTET STRING (SIZE (3))

PSC                    ::= BIT STRING (SIZE(9))

PTMSI                  ::= BIT STRING (SIZE(32))

PTMSIRAI               ::= SEQUENCE {
    pTMSI               PTMSI,
    rAI                 RAI,
    ...
}

--Q
--R

RAB-ID                 ::= BIT STRING (SIZE (8))

RABList                ::= SEQUENCE (SIZE(1..maxnoofRABs)) OF RABListItem

RABListItem ::= SEQUENCE {
    rAB-ID              RAB-ID,
    old-transport-Info  TransportInfo,
    new-transport-Info  TransportInfo,
    cn-domain-indicator CN-DomainIndicator,
    iE-Extensions      ProtocolExtensionContainer { { RABListItem-ExtIEs } }    OPTIONAL,
    ...
}

RABListItem-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

RAC                    ::= OCTET STRING(SIZE(1))

RAI                    ::= SEQUENCE {
    lAI                LAI,
    rAC                RAC,
    ...
}

```

```

Registration-Cause ::= ENUMERATED {
    emergency-call,
    normal,
    ...,
    ue-relocation
}

RNC-ID ::= INTEGER(0..65535)

--S

SAC ::= OCTET STRING(SIZE(2))

--T
TMSILAI ::= SEQUENCE {
    tMSI BIT STRING(SIZE (32)),
    lAI LAI
}

TMSIDS41 ::= OCTET STRING (SIZE (2..17))

TransportInfo ::= SEQUENCE {
    transportLayerAddress TransportLayerAddress,
    transportAssociation CHOICE {
        gtp-TEI GTP-TEI,
        bindingID BindingID,
        ...
    },
    iE-Extensions ProtocolExtensionContainer { { TransportInfo-ExtIEs } } OPTIONAL,
    ...
}

TransportInfo-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

TransportLayerAddress ::= BIT STRING(SIZE(1..160,...))

TypeOfError ::= ENUMERATED {
    not-understood,
    missing,
    ...
}

--U
UE-Capabilities ::= SEQUENCE {
    access-stratum-release-indicator Access-stratum-release-indicator,
    csg-capability CSG-Capability,
    iE-Extensions ProtocolExtensionContainer { { UE-Capabilities-ExtIEs } } OPTIONAL,
    ...
}

UE-Capabilities-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

}

UTRANCellID ::= SEQUENCE {
    lAC                LAC,
    rAC                RAC,
    pLMNidentity       PLMNidentity,
    uTRANcellID        CellIdentity,
    iE-Extensions      ProtocolExtensionContainer { {UTRANCellID-ExtIEs} } OPTIONAL
}

UTRANCellID-ExtIEs HNBAP-PROTOCOL-EXTENSION ::= {
    ...
}

UE-Identity ::= CHOICE {
    IMSI                IMSI,
    tMSILAI             TMSILAI,
    pTMSIRAI           PTMSIRAI,
    iMEI                IMEI,
    eSN                 ESN,
    iMSIDS41            IMSIDS41,
    iMSIESN             IMSIESN,
    tMSIDS41            TMSIDS41,
    ...
}

Update-cause ::= ENUMERATED {
    relocation-preparation,
    ...
}

--V
--W
--X
--Y
--Z

END

```

9.3.5 Common Definitions

```

-- *****
--
-- Common definitions
--
-- *****

HNBAP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)

```



```

umts-Access (20) modules (3) hnbap(6) version1 (1) hnbap-CommonDataTypes (3) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- Extension constants
--
-- *****

maxPrivateIEs                INTEGER ::= 65535
maxProtocolExtensions        INTEGER ::= 65535
maxProtocolIEs               INTEGER ::= 65535

-- *****
--
-- Common Data Types
--
-- *****
Criticality ::= ENUMERATED { reject, ignore, notify }

Presence ::= ENUMERATED { optional, conditional, mandatory }

PrivateIE-ID ::= CHOICE {
    local      INTEGER (0..65535),
    global     OBJECT IDENTIFIER
}

ProcedureCode ::= INTEGER (0..255)

ProtocolIE-ID ::= INTEGER (0..maxProtocolIEs)

TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome }

END

```

9.3.6 Constant Definitions

```

-- *****
--
-- Constant definitions
--
-- *****

HNBAP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) hnbap(6) version1 (1) hnbap-Constants (4) }

```

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS

 ProcedureCode,
 ProtocolIE-ID

FROM HNBAP-CommonDataTypes;

-- *****

--

-- Elementary Procedures

--

id-HNBRegister	ProcedureCode ::= 1
id-HNBDe-Register	ProcedureCode ::= 2
id-UERegister	ProcedureCode ::= 3
id-UEDe-Register	ProcedureCode ::= 4
id-ErrorIndication	ProcedureCode ::= 5
id-privateMessage	ProcedureCode ::= 6
id-CSGMembershipUpdate	ProcedureCode ::= 7
id-TNLUpdate	ProcedureCode ::= 9
id-HNBConfigTransfer	ProcedureCode ::= 10
id-RelocationComplete	ProcedureCode ::= 11

-- *****

--

-- Lists

--

-- *****

maxNrOfErrors	INTEGER ::= 256
maxnoofRABs	INTEGER ::= 256
maxnoofNeighbours	INTEGER ::= 32
maxnoofIurhAddresses	INTEGER ::= 3

-- *****

--

-- IEs

--

-- *****

id-Cause	ProtocolIE-ID ::= 1
id-CriticalityDiagnostics	ProtocolIE-ID ::= 2
id-HNB-Identity	ProtocolIE-ID ::= 3
id-Context-ID	ProtocolIE-ID ::= 4
id-UE-Identity	ProtocolIE-ID ::= 5
id-LAC	ProtocolIE-ID ::= 6
id-RAC	ProtocolIE-ID ::= 7
id-HNB-Location-Information	ProtocolIE-ID ::= 8
id-PLMNIdentity	ProtocolIE-ID ::= 9
id-SAC	ProtocolIE-ID ::= 10
id-CellIdentity	ProtocolIE-ID ::= 11
id-Registration-Cause	ProtocolIE-ID ::= 12

```

id-UE-Capabilities          ProtocolIE-ID ::= 13
id-RNC-ID                  ProtocolIE-ID ::= 14
id-CSG-ID                  ProtocolIE-ID ::= 15
id-BackoffTimer            ProtocolIE-ID ::= 16
id-HNB-Internet-Information ProtocolIE-ID ::= 17
id-HNB-Cell-Access-Mode   ProtocolIE-ID ::= 18
id-MuxPortNumber           ProtocolIE-ID ::= 19
id-Service-Area-For-Broadcast ProtocolIE-ID ::= 20
id-CSGMembershipStatus     ProtocolIE-ID ::= 21
id-RABList                 ProtocolIE-ID ::= 22
id-HNBConfigInfo           ProtocolIE-ID ::= 23
id-AccessResult           ProtocolIE-ID ::= 25
id-Update-cause            ProtocolIE-ID ::= 26
id-NeighbourInfoList       ProtocolIE-ID ::= 27
id-NeighbourInfoRequestList ProtocolIE-ID ::= 28
id-Iurh-Signalling-TNL-Address ProtocolIE-ID ::= 29
id-PSC                     ProtocolIE-ID ::= 30
id-HNB-Cell-Identifier     ProtocolIE-ID ::= 31

```

END

9.3.7 Container Definitions

```

-- *****
--
-- Container definitions
--
-- *****

HNBAP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
umts-Access (20) modules (3) hnbap(6) version1 (1) hnbap-Containers (5) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules.
--
-- *****

IMPORTS
    Criticality,
    Presence,
    PrivateIE-ID,
    ProtocolIE-ID,
    maxPrivateIEs,
    maxProtocolExtensions,
    maxProtocolIEs

```

```

FROM HNBAP-CommonDataTypes;

-- *****
--
-- Class Definition for Protocol IEs
--
-- *****

HNBAP-PROTOCOL-IES ::= CLASS {
    &id                ProtocolIE-ID        UNIQUE,
    &criticality        Criticality,
    &Value,
    &presence           Presence
}
WITH SYNTAX {
    ID                &id
    CRITICALITY        &criticality
    TYPE              &Value
    PRESENCE           &presence
}

-- *****
--
-- Class Definition for Protocol Extensions
--
-- *****

HNBAP-PROTOCOL-EXTENSION ::= CLASS {
    &id                ProtocolIE-ID UNIQUE,
    &criticality        Criticality,
    &Extension,
    &presence           Presence
}
WITH SYNTAX {
    ID                &id
    CRITICALITY        &criticality
    EXTENSION          &Extension
    PRESENCE           &presence
}

-- *****
--
-- Class Definition for Private IEs
--
-- *****

HNBAP-PRIVATE-IES ::= CLASS {
    &id                PrivateIE-ID,
    &criticality        Criticality,
    &Value,
    &presence           Presence
}
WITH SYNTAX {
    ID                &id

```

```

    CRITICALITY      &criticality
    TYPE             &Value
    PRESENCE         &presence
}

-- *****
--
-- Container for Protocol IEs
--
-- *****

ProtocolIE-Container {HNBAP-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
        ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-Single-Container {HNBAP-PROTOCOL-IES : IEsSetParam} ::=
    ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-Field {HNBAP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
    id                HNBAP-PROTOCOL-IES.&id                ({{IEsSetParam}}),
    criticality       HNBAP-PROTOCOL-IES.&criticality       ({{IEsSetParam}}{@id}),
    value            HNBAP-PROTOCOL-IES.&Value            ({{IEsSetParam}}{@id})
}

-- *****
--
-- Container Lists for Protocol IE Containers
--
-- *****

ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, HNBAP-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
        ProtocolIE-Container {{IEsSetParam}}

-- *****
--
-- Container for Protocol Extensions
--
-- *****

ProtocolExtensionContainer {HNBAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
    SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
        ProtocolExtensionField {{ExtensionSetParam}}

ProtocolExtensionField {HNBAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
    id                HNBAP-PROTOCOL-EXTENSION.&id                ({{ExtensionSetParam}}),
    criticality       HNBAP-PROTOCOL-EXTENSION.&criticality       ({{ExtensionSetParam}}{@id}),
    extensionValue    HNBAP-PROTOCOL-EXTENSION.&Extension        ({{ExtensionSetParam}}{@id})
}

-- *****
--
-- Container for Private IEs
--

```

```
-- *****  
PrivateIE-Container {HNBAP-PRIVATE-IES : IESiParam } ::=  
  SEQUENCE (SIZE (1.. maxPrivateIEs)) OF  
    PrivateIE-Field {{IESiParam}}  
  
PrivateIE-Field {HNBAP-PRIVATE-IES : IESiParam} ::= SEQUENCE {  
  id                HNBAP-PRIVATE-IES.&id                ({{IESiParam}}),  
  criticality       HNBAP-PRIVATE-IES.&criticality        ({{IESiParam}}{@id}),  
  value            HNBAP-PRIVATE-IES.&Value              ({{IESiParam}}{@id})  
}  
  
END
```

9.4 Message Transfer Syntax

HNBAP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax as specified in ref. ITU-T Rec. X.691 [7].

10 Handling of unknown, unforeseen, and erroneous protocol data

10.1 General

Protocol Error cases can be divided into three classes:

- Transfer Syntax Error;
- Abstract Syntax Error;
- Logical Error.

Protocol errors can occur in the following functions within a receiving node:

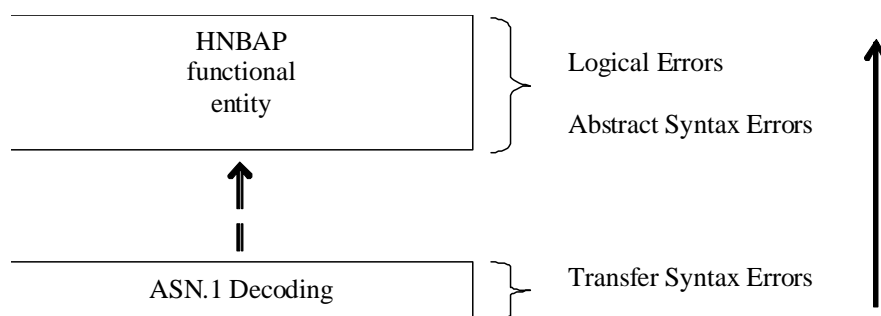


Figure 11: Protocol Errors in HNBAP

The information stated in subclauses 10.2, 10.3 and 10.4, to be included in the message used when reporting an error, is what at minimum shall be included. Other optional information elements within the message may also be included, if available. This is also valid for the case when the reporting is done with a response message. The latter is an exception to what is stated in subclause 4.1.

10.2 Transfer Syntax Error

A Transfer Syntax Error occurs when the receiver is not able to decode the received physical message. Transfer syntax errors are always detected in the process of ASN.1 decoding. If a Transfer Syntax Error occurs, the receiver should initiate Error Indication procedure with appropriate cause value for the Transfer Syntax protocol error.

10.3 Abstract Syntax Error

10.3.1 General

An Abstract Syntax Error occurs when the receiving functional HNBAP entity:

1. receives IEs or IE groups that cannot be understood (unknown IE id);
2. receives IEs for which the logical range is violated (e.g.: ASN.1 definition: 0 to 15, the logical range is 0 to 10 (values 11 to 15 are undefined), and 12 will be received; this case will be handled as an abstract syntax error using criticality information sent by the originator of the message);

3. does not receive IEs or IE groups but according to the specified presence of the concerning object, the IEs or IE groups should have been present in the received message;
4. receives IEs or IE groups that are defined to be part of that message in wrong order or with too many occurrences of the same IE or IE group;
5. receives IEs or IE groups but according to the conditional presence of the concerning object and the specified condition, the IEs or IE groups should not have been present in the received message.

Cases 1 and 2 (not comprehended IE/IE group) are handled based on received Criticality information. Case 3 (missing IE/IE group) is handled based on Criticality information and Presence information for the missing IE/IE group specified in the version of the specification used by the receiver. Case 4 (IEs or IE groups in wrong order or with too many occurrences) and Case 5 (erroneously present conditional IEs or IE groups) result in rejecting the procedure.

If an Abstract Syntax Error occurs, the receiver shall read the remaining message and shall then for each detected Abstract Syntax Error act according to the Criticality Information and Presence Information for the IE/IE group due to which Abstract Syntax Error occurred in accordance with subclauses 10.3.4 and 10.3.5. The handling of cases 4 and 5 is specified in subclause 10.3.6.

10.3.2 Criticality Information

In the HNBAP messages there is criticality information set for individual IEs and/or IE groups. This criticality information instructs the receiver how to act when receiving an IE or an IE group that is not comprehended i.e. the entire item (IE or IE group) which is not (fully or partially) comprehended shall be treated in accordance with its own criticality information as specified in subclause 10.3.4.

In addition, the criticality information is used in case of the missing IE/IE group abstract syntax error (see subclause 10.3.5).

The receiving node shall take different actions depending on the value of the Criticality Information. The three possible values of the Criticality Information for an IE/IE group are:

- Reject IE;
- Ignore IE and Notify Sender;
- Ignore IE.

The following rules restrict when a receiving entity may consider an IE, an IE group or an EP not comprehended (not implemented), and when action based on criticality information is applicable:

1. IE or IE group: When one new or modified IE or IE group is implemented for one EP from a standard version, then other new or modified IEs or IE groups specified for that EP in that standard version shall be considered comprehended by the receiving entity (some may still remain unsupported).
2. EP: The comprehension of different EPs within a standard version or between different standard versions is not mandated. Any EP that is not supported may be considered not comprehended, even if another EP from that standard version is comprehended, and action based on criticality shall be applied.

10.3.3 Presence Information

For many IEs/IE groups which are optional according to the ASN.1 transfer syntax, HNBAP specifies separately if the presence of these IEs/IE groups is optional or mandatory with respect to RNS application by means of the presence field of the concerning object of class HNBAP-PROTOCOL-IES, HNBAP-PROTOCOL-IES-PAIR, HNBAP-PROTOCOL-EXTENSION or HNBAP-PRIVATE-IES.

The presence field of the indicated classes supports three values:

1. Optional;
2. Conditional;
3. Mandatory.

If an IE/IE group is not included in a received message and the presence of the IE/IE group is mandatory or the presence is conditional and the condition is true according to the version of the specification used by the receiver, an abstract syntax error occurs due to a missing IE/IE group.

10.3.4 Not comprehended IE/IE group

10.3.4.1 Procedure Code

The receiving node shall treat the different types of received criticality information of the *Procedure Code* according to the following:

Reject IE:

- If a message is received with a *Procedure Code* marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall reject the procedure using the Error Indication procedure.

Ignore IE and Notify Sender:

- If a message is received with a *Procedure Code* marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the procedure and initiate the Error Indication procedure.

Ignore IE:

- If a message is received with a *Procedure Code* marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the procedure.

When using the Error Indication procedure to reject a procedure or to report an ignored procedure it shall include the *Procedure Code IE*, the *Triggering Message IE*, and the *Procedure Criticality IE* in the *Criticality Diagnostics IE*.

10.3.4.1A Type of Message

When the receiving node cannot decode the *Type of Message IE*, the Error Indication procedure shall be initiated with an appropriate cause value.

10.3.4.2 IEs other than the Procedure Code and Type of Message

The receiving node shall treat the different types of received criticality information of an IE/IE group other than the *Procedure Code IE* and *Type of Message IE* according to the following:

Reject IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the rejection of one or more IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing one or more IEs/IE groups marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall terminate the procedure and initiate the Error Indication procedure.
- If a *response* message is received containing one or more IEs marked with "*Reject IE*" which the receiving node does not comprehend, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and report in the response message of the procedure that one or more IEs/IE groups have been ignored. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- if a message *initiating* a procedure that does not have a message to report the outcome of the procedure is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups, and initiate the Error Indication procedure to report that one or more IEs/IE groups have been ignored.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE and Notify Sender*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IE/IE groups, continue with the procedure as if the not comprehended IEs/IE groups were not received (except for the reporting) using the understood IEs/IE groups and initiate the Error Indication procedure.

Ignore IE:

- If a message *initiating* a procedure is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using only the understood IEs/IE groups.
- If a *response* message is received containing one or more IEs/IE groups marked with "*Ignore IE*" which the receiving node does not comprehend, the receiving node shall ignore the content of the not comprehended IEs/IE groups and continue with the procedure as if the not comprehended IEs/IE groups were not received using the understood IEs/IE groups.

When reporting not comprehended IEs/IE groups marked with "*Reject IE*" or "*Ignore IE and Notify Sender*" using a response message defined for the procedure, the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

When reporting not comprehended IEs/IE groups marked with "*Reject IE*" or "*Ignore IE and Notify Sender*" using the Error Indication procedure, the *Procedure Code* IE, the *Triggering Message* IE, *Procedure Criticality* IE, and the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

10.3.5 Missing IE or IE group

The receiving node shall treat the missing IE/IE group according to the criticality information for the missing IE/IE group in the received message specified in the version of the present document used by the receiver:

Reject IE:

- if a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Reject IE*"; none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the missing IEs/IE groups using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- if a received message *initiating* a procedure that does not have a message to report unsuccessful outcome is missing one or more IEs/IE groups with specified criticality "*Reject IE*", the receiving node shall terminate the procedure and initiate the Error Indication procedure.
- if a received *response* message is missing one or more IEs/IE groups with specified criticality "*Reject IE*", the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

Ignore IE and Notify Sender:

- if a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and report in the response message of the procedure that one or more IEs/IE groups were missing. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the response message, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- if a received message *initiating* a procedure that does not have a message to report the outcome of the procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.
- if a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE and Notify Sender*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message and initiate the Error Indication procedure to report that one or more IEs/IE groups were missing.

Ignore IE:

- if a received message *initiating* a procedure is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs are missing and continue with the procedure based on the other IEs/IE groups present in the message.
- if a received *response* message is missing one or more IEs/IE groups with specified criticality "*Ignore IE*", the receiving node shall ignore that those IEs/IE groups are missing and continue with the procedure based on the other IEs/IE groups present in the message.

When reporting missing IEs/IE groups with specified criticality "*Reject IE*" or "*Ignore IE and Notify Sender*" using a response message defined for the procedure, the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

When reporting missing IEs/IE groups with specified criticality "*Reject IE*" or "*Ignore IE and Notify Sender*" using the Error Indication procedure, the *Procedure Code* IE, the *Triggering Message* IE, *Procedure Criticality* IE, and the *Information Element Criticality Diagnostics* IE shall be included in the *Criticality Diagnostics* IE for each reported IE/IE group.

10.3.6 IEs or IE groups received in wrong order or with too many occurrences or erroneously present

If a message with IEs or IE groups in wrong order or with too many occurrences is received or if IEs or IE groups with a conditional presence are present when the condition is not met (i.e. erroneously present), the receiving node shall behave according to the following:

- If a message *initiating* a procedure is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, none of the functional requests of the message shall be executed. The receiving node shall reject the procedure and report the cause value "Abstract Syntax Error (Falsely Constructed Message)" using the message normally used to report unsuccessful outcome of the procedure. In case the information received in the initiating message was insufficient to determine a value for all IEs that are required to be present in the message used to report the unsuccessful outcome of the procedure, the receiving node shall instead terminate the procedure and initiate the Error Indication procedure.
- If a message *initiating* a procedure that does not have a message to report unsuccessful outcome is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall terminate the procedure and initiate the Error Indication procedure, and use cause value "Abstract Syntax Error (Falsely Constructed Message)".
- If a *response* message is received containing IEs or IE groups in wrong order or with too many occurrences or erroneously present, the receiving node shall consider the procedure as unsuccessfully terminated and initiate local error handling.

When determining the correct order only the IEs specified in the specification version used by the receiver shall be considered.

10.4 Logical Error

Logical error situations occur when a message is comprehended correctly, but the information contained within the message is not valid (i.e. semantic error), or describes a procedure which is not compatible with the state of the receiver. In these conditions, the following behaviour shall be performed (unless otherwise specified) as defined by the class of the elementary procedure, irrespective of the criticality information of the IE's/IE groups containing the erroneous values.

Class 1:

Where the logical error occurs in a request message of a class 1 procedure, and the procedure has a message to report this unsuccessful outcome, this message shall be sent with an appropriate cause value. Typical cause values are:

- Semantic Error;
- Message not compatible with receiver state.

Where the logical error is contained in a request message of a class 1 procedure, and the procedure does not have a message to report this unsuccessful outcome, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value. The *Procedure Code* IE and the *Triggering Message* IE within the *Criticality Diagnostics* IE shall then be included in order to identify the message containing the logical error.

Where the logical error exists in a response message of a class 1 procedure, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.

Class 2:

Where the logical error occurs in a message of a class 2 procedure, the procedure shall be terminated and the Error Indication procedure shall be initiated with an appropriate cause value. The *Procedure Code* IE and the *Triggering Message* IE within the *Criticality Diagnostics* IE shall then be included in order to identify the message containing the logical error.

10.5 Exceptions

The error handling for all the cases described hereafter shall take precedence over any other error handling described in the other subclauses of clause 10.

- If any type of error (Transfer Syntax Error, Abstract Syntax Error or Logical Error) is detected in the ERROR INDICATION message, it shall not trigger the Error Indication procedure in the receiving Node but local error handling.
- In case a response message or Error Indication message needs to be returned, but the information necessary to determine the receiver of that message is missing, the procedure shall be considered as unsuccessfully terminated and local error handling shall be initiated.
- If an error that terminates a procedure occurs, the returned cause value shall reflect the error that caused the termination of the procedure even if one or more abstract syntax errors with criticality "ignore and notify" have earlier occurred within the same procedure.

Annex A (informative): Change History

TSG #	TSG Doc.	CR	Rev	Subject/Comment	New
42	RP-080834			Approved at TSG-RAN42 and placed under change control	8.0.0
43	RP-090244	0001		Add Object Identifier for HNBAP ASN.1	8.1.0
43	RP-090081	0005	1	Clarification on Uniqueness of Context ID	8.1.0
43	RP-090244	0007	1	Update to HNB deregistration cause codes and descriptions	8.1.0
43	RP-090081	0008	1	Update to HNB initiated UE deregistration cause code and description	8.1.0
43	RP-090082	0009	2	Abnormal condition handling associated with HNB registration	8.1.0
43	RP-090082	0012	2	Clarification on access control and inclusion of IMSI for UE registration.	8.1.0
43	RP-090244	0013	1	Adding Cause Values for UE Deregistration	8.1.0
43	RP-090244	0014	1	Updating of CSG Identity Length	8.1.0
43	RP-090082	0016	1	Clarification on the HNB Identity	8.1.0
43	RP-090244	0018		Correction of wrong reference in TMSI-IE description	8.1.0
43	RP-090082	0019	2	CSG-ID optional in HNB register request	8.1.0
43	RP-090082	0020	1	Backoff timer for HNB registration	8.1.0
44	RP-090626	0022	2	Correction to HNB Identity definition	8.2.0
45	RP-090769	0031	2	ASN.1 correction for HNB Location Information IE	8.3.0
46	RP-091184	0033		Correction to ASN.1 references	8.4.0
46	RP-091184	0034	1	Addition of cause value for Invalid UE identity	8.4.0
12/2009	-	-	-	Creation of version 9.0.0 based on version 8.4.0	9.0.0
46	RP-091191	0027	4	CS Mux port exchange	9.0.0
46	RP-091191	0030	4	Support for multiple access mode HNBs	9.0.0
46	RP-091191	0037	1	Introducing changes for supporting ETWS in Home Node B in 25.469	9.0.0
46	RP-091191	0039	1	Hybrid access signalling during UE and HNB registration	9.0.0
47	RP-100229	0041		Minor corrections for HNBAP	9.1.0
47	RP-100222	0042	2	Extend ASRI for Release 9	9.1.0
47	RP-100222	0045	1	Introduction of Support for CSG membership notification	9.1.0
48	RP-100595	0049	2	UE Registration for Open and Hybrid cells	9.2.0
49	RP-100909	0051	1	Add missing cause value descriptions	9.3.0
03/2011	-	-	-	Creation of version 10.0.0 based on version 9.3.0	10.0.0
SP-49	SP-100629			Clarification on the use of References (TS 21.801 CR#0030)	10.0.0
51	RP-110226	0059		Correct definition of Cell-ID	10.0.0
51	RP-110231	0062	2	Additional messages to support direct HNB-HNB HO in HNBAP	10.0.0
51	RP-110226	0063	2	Identifying the Cell Identity	10.0.0
52	RP-110691	0065	1	Removal of Access Query Procedure for Intra-CSG Handover	10.1.0
52	RP-110684	0067	1	Correction of References	10.1.0
52	RP-110691	0068	1	ASN.1 Corrections and Tabular alignment	10.1.0
52	RP-110691	0069	2	Review Changes	10.1.0
52	RP-110691	0072	3	Final specification of the provision of lurch-connectivity related TNL addresses	10.1.0
57	RP-121131	0083		Corrections on the provision of TNL address for direct lurch-connectivity	10.2.0
58	RP-121724	0095		Add missing cause values for lurch Support	10.3.0

History

Document history		
V10.0.0	April 2011	Publication
V10.1.0	July 2011	Publication
V10.2.0	October 2012	Publication
V10.3.0	January 2013	Publication