

ETSI TS 136 355 V9.0.0 (2010-02)

Technical Specification

**LTE;
Evolved Universal Terrestrial Radio Access (E-UTRA);
LTE Positioning Protocol (LPP)
(3GPP TS 36.355 version 9.0.0 Release 9)**



ReferenceDTS/TSGR-0236355v900

KeywordsLTE

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from:

<http://www.etsi.org>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status. Information on the current status of this and other ETSI documents is available at

<http://portal.etsi.org/tb/status/status.asp>

If you find errors in the present document, please send your comment to one of the following services:

http://portal.etsi.org/chaicor/ETSI_support.asp

Copyright Notification

No part may be reproduced except as authorized by written permission.
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2010.
All rights reserved.

DECT[™], **PLUGTESTS**[™], **UMTS**[™], **TIPHON**[™], the TIPHON logo and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members.

3GPP[™] is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

LTE[™] is a Trade Mark of ETSI currently being registered

for the benefit of its Members and of the 3GPP Organizational Partners.

GSM[®] and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://webapp.etsi.org/IPR/home.asp>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <http://webapp.etsi.org/key/queryform.asp>.

Contents

Intellectual Property Rights	2
Foreword.....	2
Foreword.....	7
1 Scope	8
2 References	8
3 Definitions and Abbreviations.....	9
3.1 Definitions	9
3.2 Abbreviations	9
4 Functionality of Protocol.....	10
4.1 General	10
4.1.1 LPP Configuration	10
4.1.2 LPP Sessions and Transactions.....	11
4.1.3 LPP Position Methods	11
4.1.4 LPP Messages	11
4.2 Common LPP Session Procedure	12
4.3 LPP Transport	13
4.3.1 Transport Layer Requirements	13
5 LPP Procedures	13
5.1 Procedures related to capability transfer	13
5.1.1 Capability Transfer procedure.....	13
5.1.2 Capability Indication procedure	13
5.1.3 Reception of LPP Request Capabilities.....	14
5.1.4 Transmission of LPP Provide Capabilities	14
5.2 Procedures related to Assistance Data Transfer.....	14
5.2.1 Assistance Data Transfer procedure	14
5.2.2 Assistance Data Delivery procedure	15
5.2.3 Transmission of LPP Request Assistance Data	15
5.2.4 Reception of LPP Provide Assistance Data	15
5.3 Procedures related to Location Information Transfer	16
5.3.1 Location Information Transfer procedure	16
5.3.2 Location Information Delivery procedure.....	16
5.3.3 Reception of Request Location Information	17
5.3.4 Transmission of Provide Location Information	17
5.4 Error Handling Procedures	17
5.4.1 General.....	17
5.4.2 Procedures related to Error Indication	17
5.4.3 LPP Error Detection.....	18
5.4.4 Reception of an LPP Error Message	18
5.5 Abort Procedure	19
5.5.1 General.....	19
5.5.2 Procedures related to Abort	19
5.5.3 Reception of an LPP Abort Message	19
6 Information Element Abstract Syntax Definition.....	19
6.1 General	19
6.2 LPP PDU Structure	19
– <i>LPP-PDU-Definitions</i>	19
– <i>LPP-Message</i>	20
– <i>LPP-MessageBody</i>	20
– <i>LPP-TransactionID</i>	20
6.3 Message Body IEs	21
– <i>RequestCapabilities</i>	21
– <i>ProvideCapabilities</i>	21

–	<i>RequestAssistanceData</i>	21
–	<i>ProvideAssistanceData</i>	22
–	<i>RequestLocationInformation</i>	22
–	<i>ProvideLocationInformation</i>	23
–	<i>Abort</i>	23
–	<i>Error</i>	23
–	<i>EPDU-Sequence</i>	24
6.4	Common IEs	24
6.5	Position Method IEs	24
–	<i>CommonIEsRequestCapabilities</i>	24
–	<i>CommonIEsProvideCapabilities</i>	25
–	<i>CommonIEsRequestAssistanceData</i>	25
–	<i>CommonIEsProvideAssistanceData</i>	26
–	<i>CommonIEsRequestLocationInformation</i>	26
–	<i>CommonIEsProvideLocationInformation</i>	28
–	<i>CommonIEsError</i>	30
6.5.1	OTDOA Positioning	31
6.5.1.1	OTDOA Assistance Data	31
–	<i>OTDOA-ProvideAssistanceData</i>	31
6.5.1.2	OTDOA Assistance Data Elements	31
–	<i>OTDOA-ReferenceCellInfo</i>	31
–	<i>OTDOA-NeighbourCellInfoList</i>	32
6.5.1.3	OTDOA Assistance Data Request	33
–	<i>OTDOA-RequestAssistanceData</i>	33
6.5.1.4	OTDOA Location Information	34
–	<i>OTDOA-ProvideLocationInformation</i>	34
6.5.1.5	OTDOA Location Information Elements	34
–	<i>OTDOASignalMeasurementInformation</i>	34
6.5.1.6	OTDOA Location Information Request	35
–	<i>OTDOA-RequestLocationInformation</i>	35
6.5.1.7	OTDOA Capability Information	35
–	<i>OTDOA-ProvideCapabilities</i>	35
6.5.1.8	OTDOA Capability Information Request	35
–	<i>OTDOA-RequestCapabilities</i>	35
6.5.1.9	OTDOA Error Elements	36
–	<i>OTDOA-Error</i>	36
–	<i>OTDOA-LocationServerErrorCauses</i>	36
–	<i>OTDOA-TargetDeviceErrorCauses</i>	36
6.5.2	A-GNSS Positioning	36
6.5.2.1	GNSS Assistance Data	36
–	<i>A-GNSS-ProvideAssistanceData</i>	36
–	<i>GNSS-CommonAssistData</i>	37
–	<i>GNSS-GenericAssistData</i>	37
6.5.2.2	GNSS Assistance Data Elements	37
–	<i>GNSS-ReferenceTime</i>	37
–	<i>GNSS-ReferenceLocation</i>	41
–	<i>GNSS-IonosphericModel</i>	42
–	<i>GNSS-EarthOrientationParameters</i>	43
–	<i>GNSS-TimeModelList</i>	44
–	<i>GNSS-DifferentialCorrections</i>	45
–	<i>GNSS-NavigationModel</i>	47
–	<i>GNSS-RealTimeIntegrity</i>	58
–	<i>GNSS-DataBitAssistance</i>	59
–	<i>GNSS-AcquisitionAssistance</i>	60
–	<i>GNSS-Almanac</i>	62
–	<i>GNSS-UTC-Model</i>	68
–	<i>GNSS-AuxiliaryInformation</i>	71
6.5.2.3	GNSS Assistance Data Request	72
–	<i>A-GNSS-RequestAssistanceData</i>	72
–	<i>GNSS-CommonAssistDataReq</i>	72
–	<i>GNSS-GenericAssistDataReq</i>	73
6.5.2.4	GNSS Assistance Data Request Elements	74

–	<i>GNSS-ReferenceTimeReq</i>	74
–	<i>GNSS-ReferenceLocationReq</i>	74
–	<i>GNSS-IonosphericModelReq</i>	74
–	<i>GNSS-EarthOrientationParametersReq</i>	75
–	<i>GNSS-TimeModelListReq</i>	75
–	<i>GNSS-DifferentialCorrectionsReq</i>	75
–	<i>GNSS-NavigationModelReq</i>	76
–	<i>GNSS-RealTimeIntegrityReq</i>	77
–	<i>GNSS-DataBitAssistanceReq</i>	77
–	<i>GNSS-AcquisitionAssistanceReq</i>	78
–	<i>GNSS-AlmanacReq</i>	78
–	<i>GNSS-UTC-ModelReq</i>	79
–	<i>GNSS-AuxiliaryInformationReq</i>	79
6.5.2.5	GNSS Location Information	79
–	<i>A-GNSS-ProvideLocationInformation</i>	79
6.5.2.6	GNSS Location Information Elements	80
–	<i>GNSS-SignalMeasurementInformation</i>	80
–	<i>MeasurementReferenceTime</i>	80
–	<i>GNSS-MeasurementList</i>	82
–	<i>GNSS-LocationInformation</i>	85
6.5.2.7	GNSS Location Information Request	85
–	<i>A-GNSS-RequestLocationInformation</i>	85
6.5.2.8	GNSS Location Information Request Elements	86
–	<i>GNSS-PositioningInstructions</i>	86
6.5.2.9	GNSS Capability Information	86
–	<i>A-GNSS-ProvideCapabilities</i>	86
6.5.2.10	GNSS Capability Information Elements	87
–	<i>GNSS-CommonAssistanceDataSupport</i>	87
–	<i>GNSS-GenericAssistanceDataSupport</i>	89
6.5.2.11	GNSS Capability Information Request	93
–	<i>A-GNSS-RequestCapabilities</i>	93
6.5.2.12	GNSS Error Elements	93
–	<i>A-GNSS-Error</i>	93
–	<i>GNSS-LocationServerErrorCauses</i>	93
–	<i>GNSS-TargetDeviceErrorCauses</i>	93
6.5.2.13	Common GNSS Information Elements	94
–	<i>AccessTypes</i>	94
–	<i>CellGlobalIdEUTRA-AndUTRA</i>	94
–	<i>CellGlobalIdGERAN</i>	94
–	<i>GNSS-ID</i>	95
–	<i>GNSS-IDs</i>	95
–	<i>GNSS-SignalID</i>	95
–	<i>GNSS-SignalIDs</i>	96
–	<i>PositioningMode</i>	97
–	<i>PositioningModes</i>	97
–	<i>SBAS-ID</i>	97
–	<i>SBAS-IDs</i>	97
–	<i>SV-ID</i>	98
6.5.3	Enhanced Cell ID Positioning	98
6.5.3.1	E-CID Location Information	98
–	<i>ECID-ProvideLocationInformation</i>	98
6.5.3.2	E-CID Location Information Elements	98
–	<i>ECID-SignalMeasurementInformation</i>	98
6.5.3.3	E-CID Location Information Request	99
–	<i>ECID-RequestLocationInformation</i>	99
6.5.3.4	E-CID Capability Information	100
–	<i>ECID-ProvideCapabilities</i>	100
6.5.3.5	E-CID Capability Information Request	100
–	<i>ECID-RequestCapabilities</i>	100
6.5.3.6	E-CID Error Elements	100
–	<i>ECID-Error</i>	100
–	<i>ECID-LocationServerErrorCauses</i>	101

– *ECID-TargetDeviceErrorCauses*101

Annex A (informative): Change History**102**

History103

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document contains the definition of the LTE Positioning Protocol (LPP).

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] IS-GPS-200, Revision D, Navstar GPS Space Segment/Navigation User Interfaces, March 7th, 2006.
- [2] IS-GPS-705, Navstar GPS Space Segment/User Segment L5 Interfaces, September 22, 2005.
- [3] IS-GPS-800, Navstar GPS Space Segment/User Segment L1C Interfaces, September 4, 2008.
- [4] IS-QZSS, Quasi Zenith Satellite System Navigation Service Interface Specifications for QZSS, Ver.1.1, July 31, 2009.
- [5] Galileo OS Signal in Space ICD (OS SIS ICD), Draft 0, Galileo Joint Undertaking, May 23rd, 2006.
- [6] Global Navigation Satellite System GLONASS Interface Control Document, Version 5.1, 2008.
- [7] Specification for the Wide Area Augmentation System (WAAS), US Department of Transportation, Federal Aviation Administration, DTFA01-96-C-00025, 2001.
- [8] RTCM-SC104, RTCM Recommended Standards for Differential GNSS Service (v.2.3), August 20, 2001.
- [9] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA); "Radio Resource Control (RRC); Protocol specification".
- [10] 3GPP TS 25.331: " Radio Resource Control (RRC); Protocol Specification".
- [11] 3GPP TS 44.031: "Location Services (LCS); Mobile Station (MS) - Serving Mobile Location Centre (SMLC) Radio Resource LCS Protocol (RRLP)".
- [12] 3GPP TS 23.032: "Universal Geographical Area Description (GAD)".
- [13] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA); "Radio Resource Control (RRC); Protocol specification".
- [14] 3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical Channels and Modulation".
- [15] 3GPP TS 36.214: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer – Measurements".
- [16] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA); "Radio Resource Control (RRC); Protocol specification".

- [17] 3GPP TS 36.214: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer – Measurements".

3 Definitions and Abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in [1], [2] and [3] apply. Other definitions are provided below.

Location Server: a physical or logical entity (e.g. E-SMLC or SUPL SLP) that manages positioning for a target device by obtaining measurements and other location information from one or more positioning units and providing assistance data to positioning units to help determine this. An Location Server may also compute or verify the final location estimate.

Reference Source: a physical entity or part of a physical entity that provides signals (e.g. RF, acoustic, infra-red) that can be measured (e.g. by a Target Device) in order to obtain the location of a Target Device.

Target Device: the device that is being positioned (e.g. UE or SUPL SET).

Observed Time Difference Of Arrival (OTDOA): The time interval that is observed by a target device between the reception of downlink signals from two different cells. If a signal from cell 1 is received at the moment t_1 , and a signal from cell 2 is received at the moment t_2 , the OTDOA is $t_2 - t_1$.

3.2 Abbreviations

For the purposes of the present document, the following abbreviations apply.

CID	Cell-ID (positioning method)
E-SMLC	Enhanced Serving Mobile Location Centre
E-CID	Enhanced Cell-ID (positioning method)
ADR	Accumulated Delta-Range
A-GNSS	Assisted-GNSS
ARFCN	Absolute Radio Frequency Channel Number
BTS	Base Transceiver Station (GERAN)
CNAV	Civil Navigation
ECEF	Earth-Centered, Earth-Fixed
ECGI	Evolved Cell Global Identifier
ECI	Earth-Centered-Inertial
E-CID	Enhanced Cell-ID (positioning method)
EGNOS	European Geostationary Navigation Overlay Service
E-UTRAN	Enhanced Universal Terrestrial Radio Access Network
EOP	Earth Orientation Parameters
EPDU	External Protocol Data Unit
FDMA	Frequency Division Multiple Access
FEC	Forward Error Correction
FTA	Fine Time Assistance
GAGAN	GPS Aided Geo Augmented Navigation
GLONASS	GLObal'naya NAVigatsionnaya Sputnikovaya Sistema (Engl.: Global Navigation Satellite System)
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
ICD	Interface Control Document
IOD	Issue of Data
IS	Interface Specification
LPP	LTE Positioning Protocol
LPPa	LTE Positioning Protocol Annex
LSB	Least Significant Bit
MSAS	Multi-functional Satellite Augmentation System
MSB	Most Significant Bit

msd	mean solar day
NAV	Navigation
NICT	National Institute of Information and Communications Technology
OTDOA	Observed Time Difference Of Arrival
PRC	Pseudo-Range Correction
PRS	Positioning Reference Signals
PDU	Protocol Data Unit
PZ-90	Parametry Zemli 1990 Goda – Parameters of the Earth Year 1990
QZS	Quasi Zenith Satellite
QZSS	Quasi-Zenith Satellite System
QZST	Quasi-Zenith System Time
RF	Radio Frequency
RRC	Range-Rate Correction Radio Resource Control
RSRP	Reference Signal Received Power
RSRQ	Reference Signal Received Quality
RSTD	Reference Signal Time Difference
RU	Russia
SBAS	Space Based Augmentation System
SFN	System Frame Number
SV	Space Vehicle
TLM	Telemetry
TOD	Time Of Day
TOW	Time Of Week
UDRE	User Differential Range Error
USNO	US Naval Observatory
UT1	Universal Time No.1
UTC	Coordinated Universal Time
WAAS	Wide Area Augmentation System
WGS-84	World Geodetic System 1984

4 Functionality of Protocol

4.1 General

4.1.1 LPP Configuration

LPP is used point-to-point between a location server (E-SMLC or SLP) and a target device (UE or SET) in order to position the target device using position-related measurements obtained by one or more reference sources. Figure 4.1-1 shows the configuration as applied to the control- and user-plane location solutions for E-UTRAN (as defined in [2] and [3]).

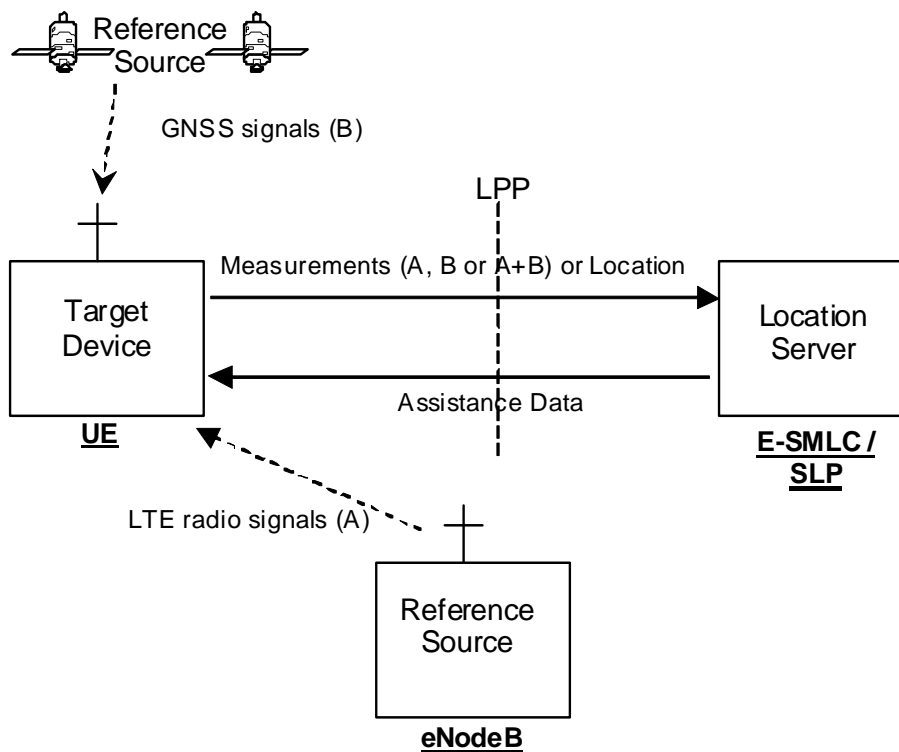


Figure 4.1-1: LPP Configuration for Control- and User-Plane Positioning in E-UTRAN

4.1.2 LPP Sessions and Transactions

An LPP session is used between a Location Server and the target device in order to obtain location related measurements or a location estimate or to transfer assistance data. A single LPP session is used to support a single location request (e.g. for a single MT-LR, MO-LR or NI-LR). Multiple LPP sessions can be used between the same endpoints to support multiple different location requests (as required by [3]). Each LPP session comprises one or more LPP transactions which each perform a single activity, and which in turn comprise one or more procedures. The instigator of an LPP session will always instigate the first LPP transaction, but subsequent transactions may be instigated by either end. LPP transactions within a session may occur serially or in parallel. LPP transactions are indicated at the LPP protocol level with a transaction ID in order to associate messages with one another (e.g., request and response). Each transaction comprises a single operation (capability exchange, assistance data transfer, or location information transfer).

Messages within a transaction are linked by a common transaction identifier.

4.1.3 LPP Position Methods

Internal LPP positioning methods and associated signalling content are defined in this specification.

This version of the specification defines OTDOA, A-GNSS, and E-CID positioning methods. Additional values of the positioning identifier are reserved.

Editor's Note: FFS how the identifier space would be partitioned to allow for future definition of additional positioning methods.

4.1.4 LPP Messages

Each LPP transaction involves the exchange of one or more LPP messages between the location server and the target device. The general format of an LPP message consists of a set of common fields followed by a body. The body (which may be empty) contains information specific to the particular message type, including common information applicable to all position methods and information specific to particular positioning methods.

The common fields are as follows:

Field	Role
LPP Version	LPP protocol version (FFS)
Transaction ID	Identify messages belonging to the same transaction
Transaction End Flag	Indicate when a transaction (e.g. one with periodic responses) has ended
Ack	Enable an optional transport level acknowledgement of a received message (FFS)

It is FFS if additional fields (e.g. session ID) are required for explicit modelling of an LPP session.

The following message types are defined:

- Request Capabilities;
- Provide Capabilities;
- Request Assistance Data;
- Provide Assistance Data;
- Request Location Information;
- Provide Location Information;
- Abort;
- Error.

4.2 Common LPP Session Procedure

The purpose of this procedure is to support an LPP session comprising a sequence of LPP transactions. The procedure is described in Figure 4.2-1.

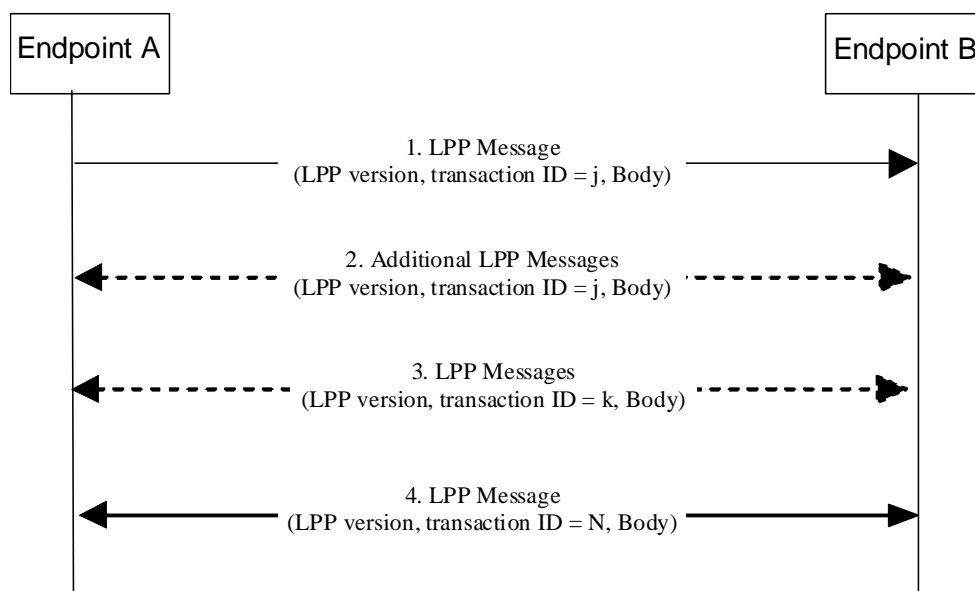


Figure 4.2-1 LPP Session Procedure

1. Endpoint A, which may be either the target or the server, initiates an LPP session by sending an LPP message for an initial LPP transaction j to the other endpoint B (which has an opposite role to A).
2. Endpoints A and B may exchange further messages to continue the transaction started in step 1.
3. Either endpoint may instigate further transactions by sending additional LPP messages.

4. A session is terminated by a final transaction N in which LPP messages will be exchanged between the two endpoints.

Within each transaction, all constituent messages shall contain the same transaction identifier. The last message sent in each transaction shall have the field “Transaction end indicator” set to TRUE. Transactions that occur in parallel shall use different transaction IDs; transaction IDs for completed transactions shall not be reused for [FFS].

4.3 LPP Transport

4.3.1 Transport Layer Requirements

Editor’s Note: LPP requirements on the transport layer, and possible provision within LPP of transport services such as reliable delivery, in-order delivery, and duplicate detection, are FFS.

5 LPP Procedures

5.1 Procedures related to capability transfer

The purpose of the procedures that are grouped together in this section is to enable the transfer of capabilities from the target device to the server. The need for the reverse operation, in which the server capabilities are provided to the target, is FFS. Capabilities in this context refer to positioning and protocol capabilities related to LPP and the position methods supported by LPP.

These procedures instantiate the Capability Transfer transaction from TS 36.305.

5.1.1 Capability Transfer procedure

The Capability Transfer procedure is shown in Figure 5.1-1.

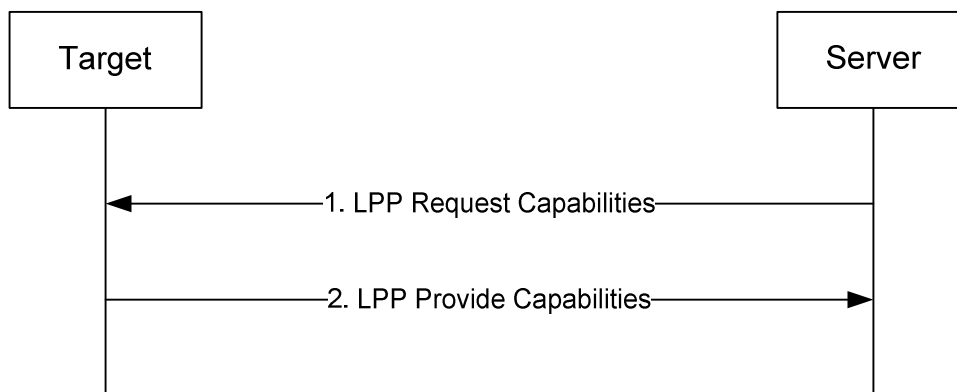


Figure 5.1-1: LPP Capability Transfer procedure

1. The server sends an LPP Request Capabilities message to the target. The server may indicate the types of capability needed.
2. The target responds with an LPP Provide Capabilities message to the server. The capabilities shall correspond to any types specified in step 1. This message carries an end transaction indication.

5.1.2 Capability Indication procedure

The Capability Indication procedure is shown in Figure 5.1-2.

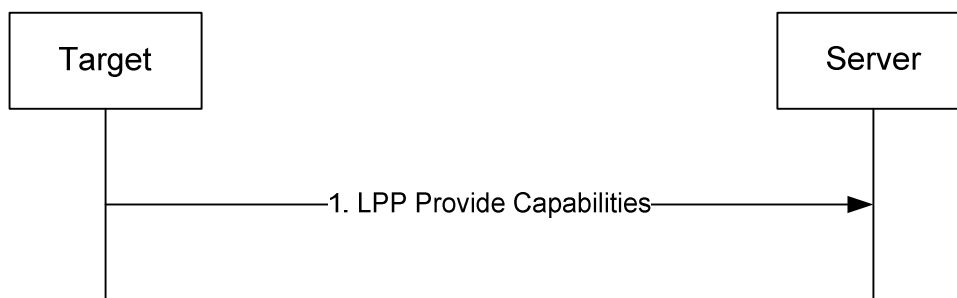


Figure 5.1-2: LPP Capability Indication procedure

1. The target sends an LPP Provide Capabilities message to the server. This message carries an end transaction indication.

5.1.3 Reception of LPP Request Capabilities

Upon receiving an LPP Request Capabilities message, the target device shall generate an LPP Provide Capabilities message as a response.

The target device shall:

- 1> if the IE “CommonIEs” is included in the message:
 - 1> for each positioning method indicated in the IE “posMethods”:
 - 2> include the capabilities of the device for that positioning method in the response message;
- 1> set the IE “TransactionID” in the response to the same value as the IE “TransactionID” in the received message;
- 1> deliver the response message to lower layers for transmission.

5.1.4 Transmission of LPP Provide Capabilities

When triggered to transmit an LPP Provide Capabilities message, the target device shall:

- 1> for each positioning method whose capabilities are to be indicated:
 - 2> set the corresponding IE to include the device’s capabilities;
- 1> deliver the response to lower layers for transmission.

5.2 Procedures related to Assistance Data Transfer

The purpose of the procedures in this section is to enable the target to request assistance data from the server to assist in positioning, and to enable the server to transfer assistance data to the target in the absence of a request.

These procedures instantiate the Assistance Data Transfer transaction from TS 36.305.

5.2.1 Assistance Data Transfer procedure

The Assistance Data Transfer procedure is shown in Figure 5.2-1.

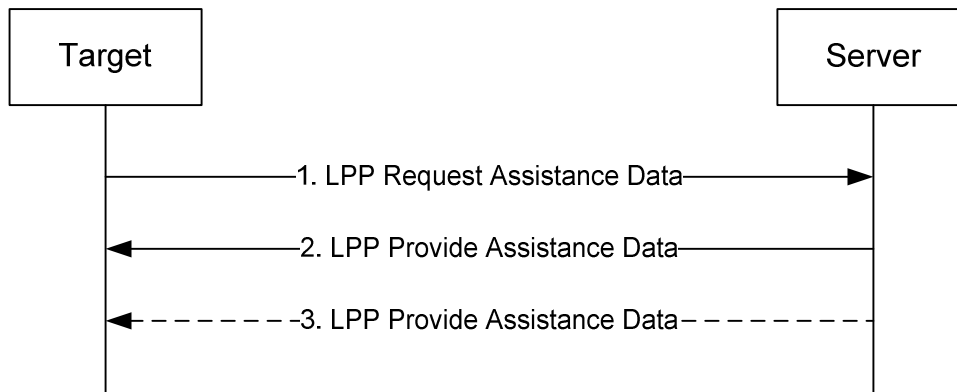


Figure 5.2-1: LPP Assistance data transfer procedure

1. The target sends an LPP Request Assistance message to the server.
2. The server responds with an LPP Provide Assistance Data message to the target containing assistance data. The transferred assistance data should match or be a subset of the assistance data requested in step 1.
3. The server may transmit one or more additional LPP Provide Assistance Data messages to the target containing further assistance data. The transferred assistance data should match or be a subset of the assistance data requested in step 1. The last message carries an end transaction indication.

5.2.2 Assistance Data Delivery procedure

The Assistance Data Transfer procedure is shown in Figure 5.2-2.

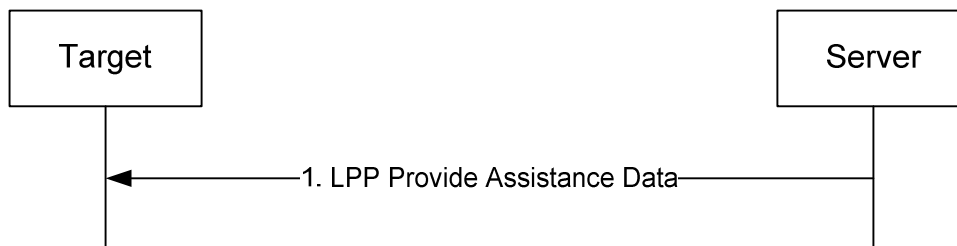


Figure 5.2-2: LPP Assistance data transfer procedure

1. The server sends an LPP Provide Assistance Data message to the target containing assistance data. This message may contain an end transaction indication.

5.2.3 Transmission of LPP Request Assistance Data

When triggered to transmit an LPP Request Assistance Data message, the target device shall:

- 1> [FFS]

5.2.4 Reception of LPP Provide Assistance Data

Upon receiving an LPP Provide Assistance Data message, the target device shall:

for each position method contained in the Body:

- 1> deliver the related assistance data to upper layers.

5.3 Procedures related to Location Information Transfer

The purpose of the procedures in this section is to enable the server to request location measurement data and/or a location estimate from the target, and to enable the target to transfer location measurement data and/or a location estimate to a server in the absence of a request.

These procedures instantiate the Location Information Transfer transaction in TS 36.305.

NOTE: The service layer (e.g. NAS or OMA SUPL ULP) would be used to transfer information associated with a location request from a target to a server (MO-LR).

5.3.1 Location Information Transfer procedure

The Location Information Transfer procedure is shown in Figure 5.3-1.

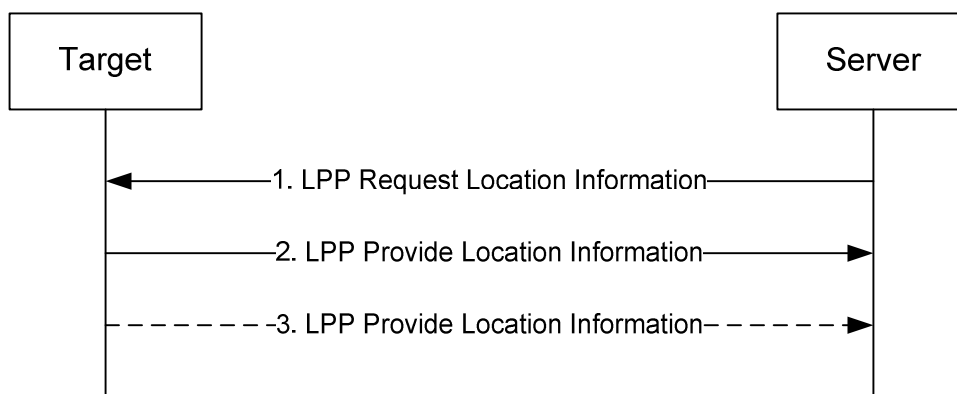


Figure 5.3-1: LPP Location Information transfer procedure

1. The server sends an LPP Request Location Information message to the target to request location information, indicating the type of location information needed and potentially the associated QoS.
2. The target sends an LPP Provide Location Information message to the server to transfer location information. The location information transferred should match or be a subset of the location information requested in step 1 unless the server explicitly allows additional location information. This message may carry an end transaction indication.
3. If requested in step 1, the target sends additional LPP Provide Location Information messages to the server to transfer location information. The location information transferred should match or be a subset of the location information requested in step 1 unless the server explicitly allows additional location information. The last message carries an end transaction indication.

5.3.2 Location Information Delivery procedure

The Location Information Transfer procedure is shown in Figure 5.3-2.

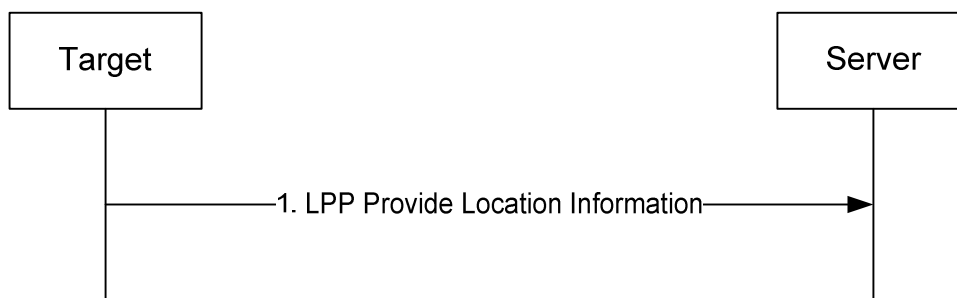


Figure 5.3-2: LPP Location Information Delivery procedure

1. The target sends an LPP Provide Location Information message to the server to transfer location information. This message may carry an end transaction indication.

5.3.3 Reception of Request Location Information

Upon receiving an LPP Request Location Information message, the target device shall:

- 1> if the requested information is compatible with the target device capabilities and configuration:
 - 2> include the requested information in an LPP Provide Location Information message;
 - 2> set the IE “TransactionID” in the response to the same value as the IE “TransactionID” in the received message;
 - 2> deliver the Provide Location Information message to lower layers for transmission.
- 1> otherwise:
 - 2> if one or more positioning methods are included that the target device does not support:
 - 2> ignore the signalling content for these position methods while continuing to process the message as if it contained only information for the remaining position methods.

5.3.4 Transmission of Provide Location Information

When triggered to transmit an LPP Provide Location Information message, the target device shall:

- 1> for each position method contained in the message:
 - 2> deliver the position method information to upper layers.

5.4 Error Handling Procedures

5.4.1 General

This sub-clause describes how a receiving entity behaves in cases when it receives erroneous or unexpected data or detects that certain data are missing.

5.4.2 Procedures related to Error Indication

Figure 5.4-1 shows the procedure related to Error indication.

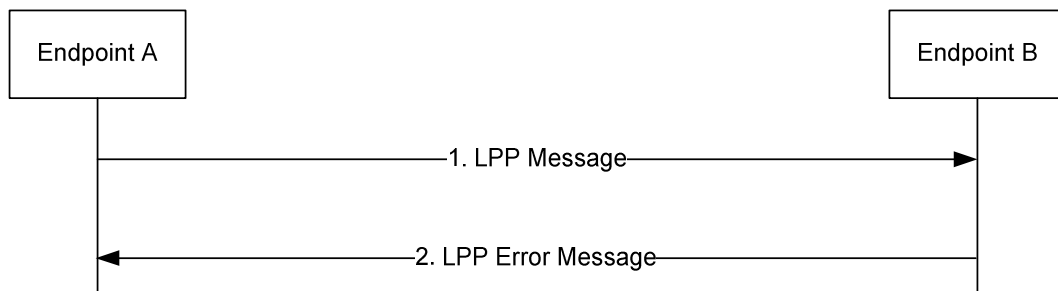


Figure 5.4-1: LPP Error Indication procedure

1. Endpoint A sends an LPP message to Endpoint B.
2. Endpoint B determines that the LPP message in step 1 contains an error and is not an LPP Error or Abort message. Endpoint B returns an LPP Error message to Endpoint A indicating the error or errors and discards the message in step 1.

5.4.3 LPP Error Detection

Upon receiving any LPP message, the receiving device shall attempt to decode the message and verify the presence of any errors prior to using the following procedure:

- 1> if decoding errors are encountered:
 - 2> if decoding cannot determine the transaction ID:
 - 3> discard the message and stop error detection.
 - 2> if decoding can determine that the message is not an Error or Abort message:
 - 3> return an Error message to the sender and include the received transaction ID and type of error;
 - 3> discard the message and stop error detection;
 - 1> if the message is a duplicate of previously received message
 - 2> discard the message and stop error detection.
- Editor's Note:** the method used to determine a duplicate is FFS.
- 1> if the transaction ID matches the transaction ID for a procedure that is still ongoing for the same session:
 - 2> abort the ongoing procedure.
 - 1> if the message type is a Request Capabilities, Request Assistance Data, or Request Location Information and some or all of the requested information is not supported
 - 2> return any information that can be provided in a normal response, plus an indication that other information is not supported.

5.4.4 Reception of an LPP Error Message

Upon receiving an LPP Error message, a device shall:

- 1> abort any ongoing procedure associated with the transaction ID indicated in the message.

The device may:

- 1> restart the aborted procedure taking into consideration the returned error information.

Editor's Note: It is FFS what criteria determine whether a procedure should be restarted, or if this is left to the discretion of the device implementation.

5.5 Abort Procedure

5.5.1 General

The purpose of the abort procedure is to abort an ongoing procedure due to some unexpected event – e.g. cancellation of a location request by an LCS client.

5.5.2 Procedures related to Abort

Figure 5.5-1 shows the Abort procedure.

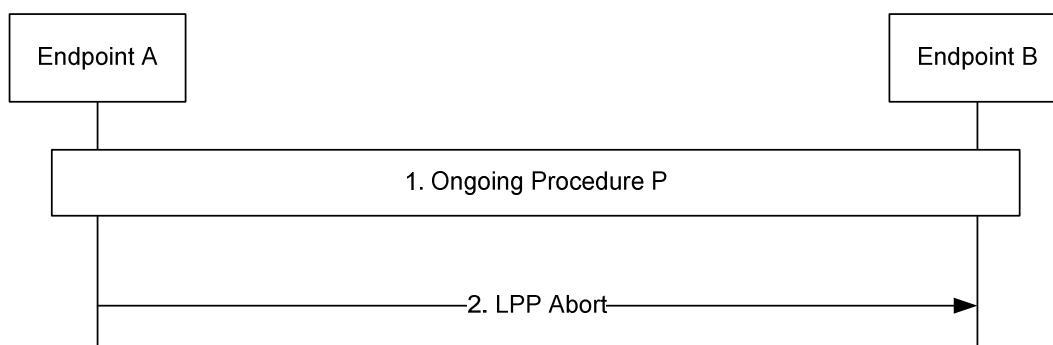


Figure 5.5-1: LPP Abort procedure

1. A procedure P is ongoing between endpoints A and B
2. Endpoint A determines that the procedure must be aborted and sends an LPP Abort message to Endpoint B carrying the transaction ID for procedure P. Endpoint B aborts procedure P.

5.5.3 Reception of an LPP Abort Message

Upon receiving an LPP Abort message, a device shall:

- 1> abort any ongoing procedure associated with the transaction ID indicated in the message.

6 Information Element Abstract Syntax Definition

6.1 General

The contents of each LPP message is specified in sub-clause 6.2 using ASN.1 to specify the message syntax and using tables when needed to provide further detailed information about the information elements specified in the message syntax. The syntax of the information elements that are defined as stand-alone abstract types is further specified in a similar manner in sub-clause 6.3.

The ASN.1 in this section uses the same format and coding conventions as described in Annex A of [4].

6.2 LPP PDU Structure

– *LPP-PDU-Definitions*

This ASN.1 segment is the start of the LPP PDU definitions.

```

-- ASN1START
LPP-PDU-Definitions DEFINITIONS AUTOMATIC TAGS ::=
  
```

```
BEGIN
-- ASN1STOP
```

– *LPP-Message*

The *LPP-Message* provides the complete set of information for an invocation or response pertaining to a single LPP transaction.

```
-- ASN1START
LPP-Message ::= SEQUENCE {
  -- LPP Version is FFS
  transactionID          TransactionID          OPTIONAL,
  endTransaction        BOOLEAN
  -- Transport ack is FFS
  lpp-MessageBody      LPP-MessageBody      OPTIONAL,
  ...
}
-- ASN1STOP
```

<i>LPP-Message</i> field descriptions				
<i>LPP-MessageBody</i>				
This field is omitted in an LPP transport level ack (if defined)				

– *LPP-MessageBody*

The *LPP-MessageBody* identifies the type of a message and contains all LPP information specifically associated with that type.

```
-- ASN1START
LPP-MessageBody ::= CHOICE {
  c1 CHOICE {
    requestCapabilities      RequestCapabilities,
    provideCapabilities      ProvideCapabilities,
    requestAssistanceData    RequestAssistanceData,
    provideAssistanceData    ProvideAssistanceData,
    requestLocationInformation RequestLocationInformation,
    provideLocationInformation ProvideLocationInformation,
    abort                    Abort,
    error                    Error,
    ...
  },
  messageClassExtension    SEQUENCE {}
}
-- ASN1STOP
```

– *LPP-TransactionID*

The *LPP-TransactionID* identifies a particular LPP transaction, the initiator of the transaction and optionally an associated LCS session.

```
-- ASN1START
LPP-TransactionID ::= SEQUENCE {
  initiator          Initiator,
  transactionNumber TransactionNumber
  -- Session ID is FFS
}
Initiator ::= ENUMERATED {
  locationServer,
```

```

    targetDevice,
    ...
}
TransactionNumber ::= INTEGER (0..255)
-- ASN1STOP

```

6.3 Message Body IEs

– *RequestCapabilities*

The *RequestCapabilities* message requests capability information for LPP and individual positioning methods.

```

-- ASN1START
RequestCapabilities ::= SEQUENCE {
    criticalExtensions      CHOICE {
        c1                  CHOICE {
            requestCapabilities-r9      RequestCapabilities-r9-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture      SEQUENCE {}
    }
}

RequestCapabilities-r9-IEs ::= SEQUENCE {
    commonIEsRequestCapabilities      CommonIEsRequestCapabilities      OPTIONAL,
    a-gnss-RequestCapabilities        BOOLEAN,
    otdoa-RequestCapabilities          BOOLEAN,
    ecid-RequestCapabilities           BOOLEAN,
    epdu-RequestCapabilities           EPDU-Sequence                    OPTIONAL,
    ...
}
-- ASN1STOP

```

– *ProvideCapabilities*

The *ProvideCapabilities* message indicates the LPP capabilities of the sender.

```

-- ASN1START
ProvideCapabilities ::= SEQUENCE {
    criticalExtensions      CHOICE {
        c1                  CHOICE {
            provideCapabilities-r9      ProvideCapabilities-r9-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture      SEQUENCE {}
    }
}

ProvideCapabilities-r9-IEs ::= SEQUENCE {
    commonIEsProvideCapabilities      CommonIEsProvideCapabilities      OPTIONAL,
    a-gnss-ProvideCapabilities        A-GNSS-ProvideCapabilities        OPTIONAL,
    otdoa-ProvideCapabilities          OTDOA-ProvideCapabilities          OPTIONAL,
    ecid-ProvideCapabilities           ECID-ProvideCapabilities           OPTIONAL,
    epdu-ProvideCapabilities           EPDU-Sequence                    OPTIONAL,
    ...
}
-- ASN1STOP

```

– *RequestAssistanceData*

The *RequestAssistanceData* message requests assistance data.

```

-- ASN1START
RequestAssistanceData ::= SEQUENCE {
    criticalExtensions    CHOICE {
        c1                CHOICE {
            requestAssistanceData-r9    RequestAssistanceData-r9-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture    SEQUENCE {}
    }
}

RequestAssistanceData-r9-IEs ::= SEQUENCE {
    commonIEsRequestAssistanceData    CommonIEsRequestAssistanceData    OPTIONAL,
    a-gnss-RequestAssistanceData    A-GNSS-RequestAssistanceData    OPTIONAL,
    otdoa-RequestAssistanceData    OTDOA-RequestAssistanceData    OPTIONAL,
    epdu-RequestAssistanceData    EPDU-Sequence    OPTIONAL,
    ...
}
-- ASN1STOP

```

– *ProvideAssistanceData*

The *ProvideAssistanceData* message provides assistance data.

```

-- ASN1START
ProvideAssistanceData ::= SEQUENCE {
    criticalExtensions    CHOICE {
        c1                CHOICE {
            provideAssistanceData-r9    ProvideAssistanceData-r9-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture    SEQUENCE {}
    }
}

ProvideAssistanceData-r9-IEs ::= SEQUENCE {
    commonIEsProvideAssistanceData    CommonIEsProvideAssistanceData    OPTIONAL,
    a-gnss-ProvideAssistanceData    A-GNSS-ProvideAssistanceData    OPTIONAL,
    otdoa-ProvideAssistanceData    OTDOA-ProvideAssistanceData    OPTIONAL,
    epdu-Provide-Assistance-Data    EPDU-Sequence    OPTIONAL,
    ...
}
-- ASN1STOP

```

– *RequestLocationInformation*

The *RequestLocationInformation* message carries a request for measurements or a position estimate.

```

-- ASN1START
RequestLocationInformation ::= SEQUENCE {
    criticalExtensions    CHOICE {
        c1                CHOICE {
            requestLocationInformation-r9    RequestLocationInformation-r9-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture    SEQUENCE {}
    }
}

RequestLocationInformation-r9-IEs ::= SEQUENCE {
    commonIEsRequestLocationInformation    CommonIEsRequestLocationInformation    OPTIONAL,
    a-gnss-RequestLocationInformation    A-GNSS-RequestLocationInformation    OPTIONAL,
    otdoa-RequestLocationInformation    OTDOA-RequestLocationInformation    OPTIONAL,
    ecid-RequestLocationInformation    ECID-RequestLocationInformation    OPTIONAL,
    epdu-RequestLocationInformation    EPDU-Sequence    OPTIONAL,
    ...
}

```

```
-- ASN1STOP
```

– *ProvideLocationInformation*

The *ProvideLocationInformation* message carries measurements or position estimates.

```
-- ASN1START
ProvideLocationInformation ::= SEQUENCE {
    criticalExtensions      CHOICE {
        c1                  CHOICE {
            provideLocationInformation-r9    ProvideLocationInformation-r9-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture    SEQUENCE {}
    }
}

ProvideLocationInformation-r9-IEs ::= SEQUENCE {
    commonIEsProvideLocationInformation    CommonIEsProvideLocationInformation OPTIONAL,
    a-gnss-ProvideLocationInformation      A-GNSS-ProvideLocationInformation      OPTIONAL,
    otdoa-ProvideLocationInformation        OTDOA-ProvideLocationInformation OPTIONAL,
    ecid-ProvideLocationInformation         ECID-ProvideLocationInformation         OPTIONAL,
    epdu-ProvideLocationInformation         EPDU-Sequence                          OPTIONAL,
    ...
}
-- ASN1STOP
```

– *Abort*

The *Abort* message carries a request to abort an ongoing LPP procedure.

```
-- ASN1START
Abort ::= SEQUENCE {
    criticalExtensions      CHOICE {
        c1                  CHOICE {
            abort-r9        Abort-r9-IEs,
            spare3 NULL, spare2 NULL, spare1 NULL
        },
        criticalExtensionsFuture    SEQUENCE {}
    }
}

Abort-r9-IEs ::= SEQUENCE {
    commonIEsAbort        CommonIEsAbort        OPTIONAL,
    ...
}
-- ASN1STOP
```

– *Error*

The *Error* message carries information concerning a LPP message that was received with errors.

```
-- ASN1START
Error ::= CHOICE {
    error-r9                Error-r9-IEs,
    criticalExtensionsFuture    SEQUENCE {}
}

Error-r9-IEs ::= SEQUENCE {
    commonIEsError        CommonIEsError        OPTIONAL,
    ...
}
-- ASN1STOP
```


Editor's Note: to ensure compatibility of an Error message between different versions of LPP, it is not expected that critical extensions will be used in future versions; hence only one method of supporting critical extensions is provided

– EPDU-Sequence

The *EPDU-Sequence* contain IEs that are defined externally to LPP by other organizations.

```
-- ASN1START
EPDU-Sequence ::= SEQUENCE (SIZE (1..maxEPDU)) OF EPDU
maxEPDU INTEGER ::= <value is FFS>
EPDU ::= SEQUENCE {
    ePDU-Identifier      EPDU-Identifier,
    ePDU-Body           EPDU-Body
}
EPDU-Identifier ::= SEQUENCE {
    ePDU-ID             EPDU-ID,
    ePDU-Name          EPDU-Name      OPTIONAL,
    ...
}
EPDU-ID ::= INTEGER (1..256)
EPDU-Name ::= VisibleString (SIZE (1..32))
EPDU-Body ::= OCTET STRING
-- ASN1STOP
```

EPDU-Sequence field descriptions

EPDU-ID

This field provides a unique integer ID for the external positioning method.

EPDU-Name

This field provides an optional character encoding which can be used to provide a quasi-unique name for an external PDU – e.g., by containing the name of the defining organization and/or the name of the associated public or proprietary standard for the EPDU.

EPDU-Body

The content and encoding of this field are defined externally to LPP.

6.4 Common IEs

6.5 Position Method IEs

– CommonIEsRequestCapabilities

The *CommonIEsRequestCapabilities* carries common IEs for a Request Capabilities PDU Type.

```
-- ASN1START
CommonIEsRequestCapabilities ::= SEQUENCE {
    posMethods          PosMethods      OPTIONAL,
    ...
}
PosMethods ::= SEQUENCE {
    lpp-PosMethods     LPP-PosMethodList  OPTIONAL,
    externalPDUs       EPDU-Sequence      OPTIONAL,
    ...
}
LPP-PosMethodList ::= SEQUENCE {
    a-gnss             BOOLEAN,
    otdoa              BOOLEAN,
    ...
}
```

```

    lte-E-CID          BOOLEAN,
    ...
}
-- ASN1STOP

```

***CommonIEsRequestCapabilities* field descriptions**

LPP-PosMethodsList

A boolean value of 1 indicates capability and willingness to support the corresponding positioning method. A value of 0 indicates support will not be available.

ExternalPDU-List

The presence of a particular external PDU type (external PDU ID and optionally external organization name) within this sequence indicates capability and willingness to support the corresponding external PDU(s). Absence of a particular external PDU type indicates support will not be available. More detailed information concerning the capabilities (e.g. position methods) associated with the external PDU type may be provided in a corresponding external PDU if included within the LPP PDU.

– ***CommonIEsProvideCapabilities***

The *CommonIEsProvideCapabilities* carries common IEs for a Provide Capabilities PDU Type.

```

-- ASN1START
CommonIEsProvideCapabilities ::= SEQUENCE {
    posMethods          PosMethods,
    locationTypes       LocationTypes  OPTIONAL,
    velocityTypes       VelocityTypes  OPTIONAL
    ...
}

LocationTypes ::= SEQUENCE {
    ellipsoidPoint                BOOLEAN,
    ellipsoidPointWithUncertaintyCircle  BOOLEAN,
    ellipsoidPointWithUncertaintyEllipse  BOOLEAN,
    polygon                        BOOLEAN,
    ellipsoidPointWithAltitude         BOOLEAN,
    ellipsoidPointWithAltitudeAndUncertaintyEllipsoid  BOOLEAN,
    ellipsoidArc                    BOOLEAN,
    ...
}

VelocityTypes ::= SEQUENCE {
    horizontalVelocity                BOOLEAN,
    horizontalWithVerticalVelocity     BOOLEAN,
    horizontalVelocityWithUncertainty  BOOLEAN,
    horizontalWithVerticalVelocityAndUncertainty  BOOLEAN,
    ...
}
-- ASN1STOP

```

***CommonIEsProvideCapabilities* field descriptions**

PosMethods

This parameter identifies the LPP position methods and external PDU types that a target device is willing and able to support. Coding details are as defined for *CommonIEsRequestCapabilities*.

LocationTypes

This parameter identifies the geographical location types that a target device is willing and able to support. A boolean value of true indicates that a location type is supported and value of false that it is not.

VelocityTypes

This parameter identifies the velocity types that a target device is willing and able to support. A boolean value of true indicates that a velocity type is supported and value of false that it is not. A value of false for all velocity types indicates that velocity is not supported.

– ***CommonIEsRequestAssistanceData***

The *CommonIEsRequestAssistanceData* carries common IEs for a Request Assistance Data PDU Type.

```

-- ASN1START
CommonIEsRequestAssistanceData ::= SEQUENCE {
    servingCellID          ECGI                               OPTIONAL,
    ...
}
ECGI ::= SEQUENCE {
    mcc          MCC,
    mnc          MNC,
    cellidentity CellIdentity
}
MCC ::= SEQUENCE (SIZE (3)) OF MCC-MNC-Digit
MNC ::= SEQUENCE (SIZE (2..3)) OF MCC-MNC-Digit
MCC-MNC-Digit ::= INTEGER (0..9)
CellIdentity ::= BIT STRING (SIZE (28))
-- ASN1STOP

```

***CommonIEsRequestAssistanceData* field descriptions**

ServingCellID

This parameter identifies the current serving cell for the target device. Coding of the ECGI follows the rules in TS 36.331 [4].

– ***CommonIEsProvideAssistanceData***

The *CommonIEsProvideAssistanceData* carries common IEs for a ProvideAssistance Data PDU Type.

```

-- ASN1START
CommonIEsProvideAssistanceData ::= SEQUENCE {
    ...
}
-- ASN1STOP

```

– ***CommonIEsRequestLocationInformation***

The *CommonIEsRequestLocationInformation* carries common IEs for a Request Location Information PDU Type.

```

-- ASN1START
CommonIEsRequestLocationInformation ::= SEQUENCE {
    locationInformationType      LocationInformationType,
    periodicalReporting          PeriodicalReportingCriteria OPTIONAL,
    assistanceAvailability       AssistanceAvailability        OPTIONAL,
    additionalInformation        AdditionalInformation        OPTIONAL,
    qos                          QoS                        OPTIONAL,
    environment                  Environment                OPTIONAL,
    locationTypes                LocationTypes              OPTIONAL,
    velocityTypes                VelocityTypes              OPTIONAL,
    ...
}
LocationInformationType ::= ENUMERATED {
    locationEstimateRequired,
    locationMeasurementsRequired,
    locationEstimatePreferred,
    ...
}
PeriodicalReportingCriteria ::= SEQUENCE {
    reportingAmount          ReportingAmount          DEFAULT ra-Infinity,
    reportingInterval        ReportingInterval
}

```

```

}
ReportingAmount ::=
    ENUMERATED {
        ra1, ra2, ra4, ra8, ra16, ra32,
        ra64, ra-Infinity }
ReportingInterval ::=
    ENUMERATED {
        noPeriodicalreporting, ri0-25,
        ri0-5, ri1, ri2, ri4, ri8, ri16, ri32, ri64 }
AssistanceAvailability ::= ENUMERATED {
    noServerAssistanceAvailable,
    ServerAssistanceAvailable,
    ...
}
AdditionalInformation ::= ENUMERATED {
    onlyReturnInformationRequested,
    mayReturnAdditionalInformation,
    ...
}
QoS ::= SEQUENCE {
    horizontalAccuracy      HorizontalAccuracy      OPTIONAL,
    verticalCoordinateRequest  BOOLEAN,
    verticalAccuracy        VerticalAccuracy        OPTIONAL,
    responseTime            ResponseTime            OPTIONAL,
    velocity                Velocity                OPTIONAL,
}
HorizontalAccuracy ::= SEQUENCE {
    accuracy      Uncertainty,
    confidence    Confidence,
    ...
}
VerticalAccuracy ::= SEQUENCE {
    accuracy      UncertaintyAltitude,
    confidence    Confidence,
    ...
}
ResponseTime ::= SEQUENCE {
    time          INTEGER (1..128),
    ...
}
Velocity ::= SEQUENCE {
    ...
}
Environment ::= ENUMERATED {
    badArea,
    notBadArea,
    mixedArea,
    ...
}
-- ASN1STOP

```

CommonEsRequestLocationInformation field descriptions

locationInformationType

This IE indicates whether the server requires a location estimate or measurements. For locationEstimateRequired, the UE shall return a location estimate if possible with measurements not allowed if not possible. For locationMeasurementsRequired, the UE shall return measurements if possible with a location estimate not allowed if not possible. For locationEstimatePreferred, the UE shall return a location estimate if possible but may return measurements if not possible.

assistanceAvailability

This IE indicates whether or not the server is willing and able to provide assistance data to the target device if requested by the target device.

CommonIEsRequestLocationInformation field descriptions
<p>additionalInformation This IE indicates whether a target device is allowed to return additional information to that requested. If a location estimate is returned, any additional information is restricted to that associated with a location estimate (e.g. might include velocity if velocity was not requested but cannot include measurements). If measurements are returned, any additional information is restricted to additional measurements (e.g. might include E-CID measurements if A-GNSS measurements were requested but not E-CID measurements).</p>
<p>qos This IE indicates the quality of service and comprises a number of sub-fields. In the case of measurements, some of the sub-fields apply to the location estimate that could be obtained by the server from the measurements provided by the target device assuming that the measurements are the only sources of error. Fields are as follows:</p> <ul style="list-style-type: none"> • horizontalAccuracy indicates the maximum horizontal error in the location estimate at an indicated confidence level. This is coded using the Uncertainty parameter defined further down for geographic location. • verticalCoordinateRequest indicates whether a vertical coordinate is required (true) or not (false) • verticalAccuracy indicates the maximum vertical error in the location estimate at an indicated confidence level and is only applicable when a vertical coordinate is requested. This is coded using the Uncertainty-Altitude parameter defined further down for geographic location. • responseTime indicates the maximum response time as measured between receipt of the Request Location Information and transmission of a Provide Location Information. This is given as an integer number of seconds between 1 and 128. • velocity indicates whether velocity is requested (true) or not (false). <p>All QoS requirements shall be obtained by the target device to the degree possible but it is permitted to return a response that does not fulfill all QoS requirements if some were not attainable. The single exception is response-time which shall always be fulfilled – even if that means not fulfilling other QoS requirements.</p>
<p>environment This field provides the target device with information about expected multipath and non line of sight (NLOS) in the current area. The following values are defined:</p> <ul style="list-style-type: none"> • badArea: possibly heavy multipath and NLOS conditions (e.g. bad urban or urban). • notBadArea: no or light multipath and usually LOS conditions (e.g. suburban or rural). • mixedArea: environment that is mixed or not defined
<p>locationTypes This fields provides a list of the types of location estimate that the target device may return whjen a location estimate is obtained by the target.</p>
<p>velocityTypes This fields provides a list of the types of velocity estimate that the target device may return when a velocity estimate is obtained by the target.</p>
<p>reportingAmount Enumeration of number of reports required. (1, 2, 4, 8, 16, 32, 64, or infinite/indefinite)</p>
<p>reportingInterval Interval between measurement reports in units of seconds (up to 64 seconds).</p>

– CommonIEsProvideLocationInformation

The *CommonIEsProvideLocationInformation* carries common IEs for a Provide Location Information PDU Type.

```

-- ASN1START
CommonIEsProvideLocationInformation ::= SEQUENCE {
    locationEstimate      LocationCoordinates    OPTIONAL,
    velocityEstimate      Velocity              OPTIONAL,
    locationError         LocationError          OPTIONAL,
    ...
}

LocationCoordinates ::= CHOICE {
    ellipsoidPoint                Ellipsoid-Point,
    ellipsoidPointWithUncertaintyCircle Ellipsoid-PointWithUncertaintyCircle,
    ellipsoidPointWithUncertaintyEllipse EllipsoidPointWithUncertaintyEllipse,
    polygon                       Polygon,
    ellipsoidPointWithAltitude     EllipsoidPointWithAltitude,
    ellipsoidPointWithAltitudeAndUncertaintyEllipsoid EllipsoidPointWithAltitudeAndUncertaintyEllipsoid,
    ellipsoidArc                  EllipsoidArc,
    ...
}

Velocity ::= CHOICE {
    horizontalVelocity           HorizontalVelocity,
    horizontalWithVerticalVelocity HorizontalWithVerticalVelocity,

```

```

    horizontalVelocityWithUncertainty      HorizontalVelocityWithUncertainty,
    horizontalWithVerticalVelocityAndUncertainty HorizontalWithVerticalVelocityAndUncertainty,
    ...
}

EllipsoidPoint ::= SEQUENCE
    latitudeSign      LatitudeSign,
    degreesLatitude   DegreesLatitude,
    degreesLongitude  DegreesLongitude
}

EllipsoidPointWithUncertaintyCircle ::= SEQUENCE {
    latitudeSign      LatitudeSign,
    degreesLatitude   DegreesLatitude,
    degreesLongitude  DegreesLongitude,
    uncertainty       Uncertainty
}

EllipsoidPointWithUncertaintyEllipse ::= SEQUENCE {
    latitudeSign      LatitudeSign,
    degreesLatitude   DegreesLatitude,
    degreesLongitude  DegreesLongitude,
    uncertaintySemiMajor      Uncertainty,
    uncertaintySemiMinor     Uncertainty,
    orientationMajorAxis     OrientationMajorAxis,
    confidence                Confidence
}

Polygon ::= SEQUENCE (SIZE (3..15)) OF PolygonPoints

PolygonPoints ::= SEQUENCE {
    latitudeSign      LatitudeSign,
    degreesLatitude   DegreesLatitude,
    degreesLongitude  DegreesLongitude
}

EllipsoidPointWithAltitude ::= SEQUENCE {
    latitudeSign      LatitudeSign,
    degreesLatitude   DegreesLatitude,
    degreesLongitude  DegreesLongitude,
    altitudeDirection AltitudeDirection,
    altitude          Altitude
}

EllipsoidPointWithAltitudeAndUncertaintyEllipsoid ::= SEQUENCE {
    latitudeSign      LatitudeSign,
    degreesLatitude   DegreesLatitude,
    degreesLongitude  DegreesLongitude,
    altitudeDirection AltitudeDirection,
    altitude          Altitude,
    uncertaintySemiMajor      Uncertainty,
    uncertaintySemiMinor     Uncertainty,
    orientationMajorAxis     OrientationMajorAxis,
    uncertaintyAltitude     UncertaintyAltitude,
    confidence                Confidence
}

EllipsoidArc ::= SEQUENCE {
    latitudeSign      LatitudeSign,
    degreesLatitude   DegreesLatitude,
    degreesLongitude  DegreesLongitude,
    innerRadius       InnerRadius,
    uncertaintyRadius Uncertainty,
    offsetAngle       Angle,
    includedAngle     Angle,
    confidence         Confidence
}

HorizontalVelocity ::= SEQUENCE {
    bearing      Bearing,
    horizontalSpeed      HorizontalSpeed
}

HorizontalWithVerticalVelocity ::= SEQUENCE {
    bearing      Bearing,
    horizontalSpeed      HorizontalSpeed,
    verticalDirection VerticalDirection,

```

```

    verticalSpeed          VerticalSpeed
  }
HorizontalVelocityWithUncertainty ::= SEQUENCE {
    bearing                Bearing,
    horizontalSpeed        HorizontalSpeed,
    uncertaintySpeed       UncertaintySpeed
}
HorizontalWithVerticalVelocityAndUncertainty ::= SEQUENCE {
    bearing                Bearing,
    horizontalSpeed        HorizontalSpeed,
    uncertaintySpeed       UncertaintySpeed,
    horizontalUncertaintySpeed UncertaintySpeed,
    verticalUncertaintySpeed VerticalUncertaintySpeed
}
LatitudeSign ::= ENUMERATED {
    north,
    south
}
DegreesLatitude ::= INTEGER (0..8388607)          -- 23 bit field
DegreesLongitude ::= INTEGER (-8388608..8388607) -- 24 bit field
Uncertainty ::= INTEGER (0..127)
OrientationMajorAxis ::= INTEGER (0..179)
AltitudeDirection ::= ENUMERATED {
    height,
    depth
}
Altitude ::= INTEGER (0..32767)          -- 15 bit field
UncertaintyAltitude ::= INTEGER (0..127)
InnerRadius ::= INTEGER (0..65535)       -- 16 bit field
Angle ::= INTEGER (0..179)
LocationError ::= SEQUENCE {
    locationfailurecause LocationFailureCause
    ...
}
LocationFailureCause ::= ENUMERATED {
    undefined,
    requestedMethodNotSupported,
    positionMethodFailure,
    ...
}
-- ASN1STOP

```

CommonIEsProvideLocationInformation field descriptions

locationEstimate

This field provides a location estimate using one of the geographic shapes defined in TS 23.032 [6]. Coding of the values the various fields internal to each geographic shape follow the rules in [6].

VelocityEstimate

This field provides a velocity estimate using one of the velocity shapes defined in TS 23.032 [6]. Coding of the values the various fields internal to each velocity shape follow the rules in [6].

locationError

This field shall be included if and only if a location estimate and measurements are not included in the LPP PDU. The field includes information concerning the reason for the lack of location information.

– **CommonIEsError**

The *CommonIEsError* carries common IEs for an Error PDU Type.

```
-- ASN1START
```

```

CommonIEsError ::= SEQUENCE {
    errorcause          ErrorCause,
    ...
}

ErrorCause ::= ENUMERATED {
    undefined,
    pduHeaderError,
    compatibilityLevelNotSupported,
    incorrectData,
    ...
}

-- ASN1STOP

```

Common-IEs-Error field descriptions
--

6.5.1 OTDOA Positioning

6.5.1.1 OTDOA Assistance Data

– *OTDOA-ProvideAssistanceData*

The IE *OTDOA-ProvideAssistanceData* is used by the location server to provide assistance data to enable UE-assisted downlink OTDOA.

```

-- ASN1START

OTDOA-ProvideAssistanceData ::= SEQUENCE {
    otdoa-ReferenceCellInfo      OTDOA-ReferenceCellInfo,
    otdoa-NeighbourCellInfo      OTDOA-NeighbourCellInfoList,
    ...
}

-- ASN1STOP

```

6.5.1.2 OTDOA Assistance Data Elements

– *OTDOA-ReferenceCellInfo*

The IE *OTDOAReferenceCellInfo* is used by the location server to provide reference cell information for OTDOA assistance data. The slot number offsets and expected OTDOAs in *OTDOANeighbourCellInfoList* are provided relative to the cell defined by this IE.

```

-- ASN1START

OTDOA-ReferenceCellInfo ::= SEQUENCE {
    physCellId          INTEGER (0..503),
    cellGlobalId        ECGI     OPTIONAL,
    prsInfo              PRS-Info          OPTIONAL,      -- Cond PRS
    ...
}

-- ASN1STOP

```

Conditional presence	Explanation
<i>PRS</i>	The field is mandatory present if positioning reference signals are available in the network [14]; otherwise it is not present.

OTDOA-ReferenceCellInfo field descriptions

OTDOA-ReferenceCellInfo field descriptions
physCellId This field specifies the physical cell identity of the reference cell for the OTDOA assistance data, as defined in [13].
cellGlobalId This field specifies the ECGI, the globally unique identity of a cell in E-UTRA, of the reference cell for the OTDOA assistance data, as defined in [13].
prsInfo This field specifies the PRS configuration.

PRSInfo information element

```
-- ASN1START
PRS-Info ::= SEQUENCE {
    prs-Bandwidth          TBD,
    prs-ConfigurationIndex INTEGER (0..4095),
    numDL-Frames          ENUMERATED { 1sf, 2sf, 4sf, 6sf, ... },
    ...
}
-- ASN1STOP
```

PRSInfo field descriptions
prs-Bandwidth This field specifies the bandwidth that is used to configure the positioning reference signals on.
prs-ConfigurationIndex This field specifies the positioning reference signals configuration index I_{PRS} as defined in [14]. The range of this field is FFS pending confirmation from RAN4.
numDL-Frames This field specifies the number of consecutive downlink subframes N_{PRS} with positioning reference signals, as defined in [14]. Enumerated values define 1, 2, 4, or 6 consecutive subframes.

OTDOA-NeighbourCellInfoList

The IE *OTDOA-NeighbourCellInfoList* is used by the location server to provide neighbour cell information for OTDOA assistance data. The *OTDOA-NeighbourCellInfoList* is sorted according to best measurement geometry at the a-priori location estimate of the target device. I.e., the target device is expected to provide measurements in increasing neighbor cell list order (to the extent that this information is available to the target device).

Editor's Note: The inclusion of EARFCN is FFS pending input from RAN4.

```
-- ASN1START
-- The upper limit of 64 is FFS pending RAN4 input
OTDOA-NeighbourCellInfoList ::= SEQUENCE (SIZE (1..64)) OF OTDOA-NeighbourCellInfoElement
OTDOA-NeighbourCellInfoElement ::= SEQUENCE {
    physCellId          INTEGER (0..503),
    cellGlobalId        ECGI          OPTIONAL,
    earfcn              ARFCN-ValueEUTRA OPTIONAL,      -- Need ON
    cpLength            ENUMERATED { normal, extended, ... }
                                OPTIONAL,      -- Cond NotSameAsRef1
    prsInfo             PRSInfo        OPTIONAL,      -- Cond PRS
    antennaPortConfig  ENUMERATED { 1-or-2-ports, 4-ports, ... }
                                OPTIONAL,      -- Cond NotSameAsRef2
    slotNumberOffset   INTEGER (0..31) OPTIONAL,      -- Cond NotSameAsRef3
    expectedRSTD        TBD
    expectedRSTD-Uncertainty TBD
    ...
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>NotsameAsRef1</i>	The field is mandatory present if the cyclic prefix length is not the same as for the reference cell; otherwise it is not present.
<i>NotsameAsRef2</i>	The field is mandatory present if the antenna port configuration is not the same as for the reference cell; otherwise it is not present.
<i>NotsameAsRef3</i>	The field is mandatory present if the slot timing is not the same as for the reference cell; otherwise it is not present.
<i>PRS</i>	The field is mandatory present if the neighbour cell transmits positioning reference signals; otherwise it is not present.

OTDOA-NeighbourCellInfoList field descriptions
<i>physCellId</i> This field specifies the physical cell identity of the neighbour cell for the OTDOA assistance data, as defined in [13].
<i>cellGlobalId</i> This field specifies the ECGI, the globally unique identity of a cell in E-UTRA, of the neighbour cell for the OTDOA assistance data, as defined in [13].
<i>earfcn</i> This field should be provided when the neighbour cell being described is not on the UE's serving frequency.
<i>cpLength</i> This field specifies the cyclic prefix length of the neighbour cell PRS. If this field is absent, the cyclic prefix length is the same as for the reference cell.
<i>antennaPortConfig</i> This field specifies whether 1 (or 2) antenna port(s) or 4 antenna ports for cell specific reference signals are used. If this field is absent, the cell specific reference signals are transmitted on the same antenna port(s) as the reference cell.
<i>slotNumberOffset</i> This field specifies the slot number offset between this neighbour cell and the reference cell. If this field is absent, the slot timing is the same as for the reference cell.
<i>expectedRSTD</i> This field indicates the RSTD value that the target device is expected to measure between this cell and the reference cell in <i>OTDOAReferenceCellInfo</i> . The resolution is TBD, in the range between TBD and TBD.
<i>expectedRSTD-Uncertainty</i> This field indicates the uncertainty in <i>expectedRSTD</i> value. The uncertainty is related to the location server's a-priori estimation of the target device location. The <i>expectedRSTDUncertainty</i> defines the following search window for the target device: [<i>expectedRSTD</i> - <i>expectedRSTD-Uncertainty</i>] < measured RSTD < [<i>expectedRSTD</i> + <i>expectedRSTD-Uncertainty</i>]

6.5.1.3 OTDOA Assistance Data Request

– *OTDOA-RequestAssistanceData*

The IE *OTDOA-RequestAssistanceData* is used by the target device to request assistance data from a location server.

```
-- ASN1START
OTDOA-RequestAssistanceData ::= SEQUENCE {
    physCellId    INTEGER (0..503),
    ...
}
-- ASN1STOP
```

<i>OTDOA-RequestAssistanceData</i> field descriptions
<i>physCellId</i> This field specifies the physical cell identity of the current serving cell of the target device.

6.5.1.4 OTDOA Location Information

– *OTDOA-ProvideLocationInformation*

The IE *OTDOA-ProvideLocationInformation* is used by the target device to provide OTDOA location measurements to the location server.

```
-- ASN1START
OTDOA-ProvideLocationInformation ::= SEQUENCE {
    otdoaSignalMeasurementInformation  OTDOASignalMeasurementInformation  OPTIONAL,
    ...
}
-- ASN1STOP
```

6.5.1.5 OTDOA Location Information Elements

– *OTDOASignalMeasurementInformation*

The IE *OTDOASignalMeasurementInformation* is used by the target device to provide RSTD measurements to the location server.

```
-- ASN1START
OTDOASignalMeasurementInformation ::= SEQUENCE {
    systemFrameNumber      BIT STRING (SIZE (10)),
    physCellIdRef          INTEGER (0..503),
    cellGlobalIdRef        ECGI                      OPTIONAL,
    neighborMeasurementList NeighborMeasurementList,
    ...
}
NeighborMeasurementList ::= SEQUENCE (SIZE(1..64)) OF NeighborMeasurementElement
NeighborMeasurementElement ::= SEQUENCE {
    physCellIdNeighbor      INTEGER (0..503),
    cellGlobalIdNeighbour  ECGI                      OPTIONAL,
    earfcn                  ARFCN-ValueEUTRA          OPTIONAL,
    rstd                    TBD,
    rstdQuality             TBD,
    ...
}
-- ASN1STOP
```

***OTDOASignalMeasurementInformation* field descriptions**

systemFrameNumber

This field specifies the SFN during which the last measurement was performed.

physCellIdRef

This field specifies the physical cell identity of the reference cell relative to which the RSTDs are provided.

cellGlobalIdRef

This field specifies the ECGI, the globally unique identity of a cell in E-UTRA, of the reference cell relative to which the RSTDs are provided.

neighborMeasurementList

This list contains the measured OTDOA values (RSTD measurements) together with quality for the measurement.

physCellIdNeighbor

This field specifies the physical cell identity of the neighbour cell for which the RSTDs are provided.

cellGlobalIdNeighbour

This field specifies the ECGI, the globally unique identity of a cell in E-UTRA, of the neighbour cell for which the RSTDs are provided.

earfcn

The UE provides this field for inter-frequency measurements.

Editor's note: Procedural text to capture this behaviour is needed.

OTDOASignalMeasurementInformation field descriptions***rstd***

This field specifies the relative timing difference between this neighbour cell and the reference cell, as defined in [15]. If $T_{\text{SubframeRxNeighbor},i}$ is the time when the target device receives the start of one subframe from this neighbor cell, and $T_{\text{SubframeRxRef}}$ is the time when the target device receives the start of one subframe from the reference cell, the *rstd* is $T_{\text{SubframeRxNeighbor},i} - T_{\text{SubframeRxRef}}$.
Scale factor TBD.

rstdStd

This field specifies the standard deviation of the measured *rstd*. Scale factor TBD.

6.5.1.6 OTDOA Location Information Request

– *OTDOA-RequestLocationInformation*

The IE *OTDOA-RequestLocationInformation* is used by the location server to request OTDOA location measurements from a target device.

```
-- ASN1START
OTDOA-RequestLocationInformation ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

6.5.1.7 OTDOA Capability Information

– *OTDOA-ProvideCapabilities*

The IE *OTDOA-ProvideCapabilities* is used by the target device to provide its OTDOA location capabilities to the location server.

```
-- ASN1START
OTDOA-ProvideCapabilities ::= SEQUENCE {
    otdoa-Mode      BIT STRING { ue-assisted (0) } (SIZE (1..8)),
    ...
}
-- ASN1STOP
```

OTDOA-ProvideCapabilities* field descriptions**otdoaMode***

This field specifies the OTDOA mode(s) supported by the target device. This is represented by a bit string, with a one-value at the bit position means the particular OTDOA mode is supported; a zero-value means not supported.

6.5.1.8 OTDOA Capability Information Request

– *OTDOA-RequestCapabilities*

The IE *OTDOA-Request-Capabilities* is used by the location server to request OTDOA location capabilities from a target device.

```
-- ASN1START
OTDOA-RequestCapabilities ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

6.5.1.9 OTDOA Error Elements

– *OTDOA-Error*

The IE *OTDOA-Error* is used by the location server or target device to provide OTDOA error reasons to the target device or location server, respectively.

```
-- ASN1START
OTDOA-Error ::= CHOICE {
    locationServerErrorCauses      OTDOA-LocationServerErrorCauses,
    targetDeviceErrorCauses       OTDOA-TargetDeviceErrorCauses,
    ...
}
-- ASN1STOP
```

– *OTDOA-LocationServerErrorCauses*

The IE *OTDOA-LocationServerErrorCauses* is used by the location server to provide OTDOA error reasons to the target device.

```
-- ASN1START
OTDOA-LocationServerErrorCauses ::= SEQUENCE {
    cause      ENUMERATED { undefined,
    ...
    },
    ...
}
-- ASN1STOP
```

– *OTDOA-TargetDeviceErrorCauses*

The IE *OTDOA-TargetDeviceErrorCauses* is used by the target device to provide OTDOA error reasons to the location server.

```
-- ASN1START
OTDOA-TargetDeviceErrorCauses ::= SEQUENCE {
    cause      ENUMERATED { undefined,
    assistance-data-missing,
    ...
    },
    ...
}
-- ASN1STOP
```

6.5.2 A-GNSS Positioning

6.5.2.1 GNSS Assistance Data

– *A-GNSS-ProvideAssistanceData*

The IE *A-GNSS-ProvideAssistanceData* is used by the location server to provide assistance data to enable UE-based and UE-assisted A-GNSS.

```
-- ASN1START
A-GNSS-ProvideAssistanceData ::= SEQUENCE {
    gnss-CommonAssistData      GNSS-CommonAssistData      OPTIONAL,
    gnss-GenericAssistData     GNSS-GenericAssistData     OPTIONAL,
    ...
}
```

```

}
-- ASN1STOP

```

– GNSS-CommonAssistData

The IE *GNSS-CommonAssistData* is used by the location server to provide assistance data which can be used for any GNSS (e.g., GPS, Galileo, GLONASS, etc.).

```

-- ASN1START
GNSS-CommonAssistData ::= SEQUENCE {
    gnss-ReferenceTime          GNSS-ReferenceTime          OPTIONAL,
    gnss-ReferenceLocation     GNSS-ReferenceLocation     OPTIONAL,
    gnss-IonosphericModel      GNSS-IonosphericModel      OPTIONAL,
    gnss-EarthOrientationParameters GNSS-EarthOrientationParameters OPTIONAL,
    ...
}
-- ASN1STOP

```

– GNSS-GenericAssistData

The IE *GNSS-GenericAssistData* is used by the location server to provide assistance data for a specific GNSS (e.g., GPS, Galileo, GLONASS, etc.). The specific GNSS for which the provided assistance data are applicable is indicated by the IE *GNSS-ID* and (if applicable) by the IE *SBAS-ID*. Assistance for up to 16 GNSSs can be provided.

```

-- ASN1START
GNSS-GenericAssistData ::= SEQUENCE (SIZE (1..16)) OF GNSSGenericAssistDataElement
GNSS-GenericAssistDataElement ::= SEQUENCE {
    gnss-ID                      GNSS-ID,
    sbas-ID                      SBAS-ID                      OPTIONAL, -- Cond GNSS-ID-SBAS
    gnss-TimeModels              GNSS-TimeModelList          OPTIONAL,
    gnss-DifferentialCorrections GNSS-DifferentialCorrections OPTIONAL,
    gnss-NavigationModel         GNSS-NavigationModel          OPTIONAL,
    gnss-RealTimeIntegrity       GNSS-RealTimeIntegrity      OPTIONAL,
    gnss-DataBitAssistance       GNSS-DataBitAssistance      OPTIONAL,
    gnss-AcquisitionAssistance   GNSS-AcquisitionAssistance  OPTIONAL,
    gnss-Almanac                 GNSS-Almanac                OPTIONAL,
    gnss-UTCModel                GNSS-UTCModel              OPTIONAL,
    gnss-AuxiliaryInformation     GNSS-AuxiliaryInformation    OPTIONAL,
    ...
}
-- ASN1STOP

```

6.5.2.2 GNSS Assistance Data Elements

– GNSS-ReferenceTime

The IE *GNSS-ReferenceTime* is used by the location server to provide the GNSS specific system time with uncertainty and the relationship between GNSS system time and network air-interface timing of the eNodeB/NodeB/BTS transmission in the reference cell.

If the IE *networkTime* is present, the IEs *gnss-SystemTime* and *networkTime* provide a valid relationship between GNSS system time and air-interface network time, as seen at the approximate location of the target device, i.e. the propagation delay from the the eNodeB/NodeB/BTS to the target device shall be compensated for by the location server. Depending on implementation, the relation between GNSS system time and air-interface network time may have varying accuracy. The uncertainty of this timing relation is provided in the IE *referenceTimeUnc*. If the propagation delay from the eNodeB/NodeB/BTS to the target device is not accurately known, the location server shall use the best available approximation of the propagation delay and take the corresponding delay uncertainty into account in the calculation of the IE *referenceTimeUnc*.

If the IE *networkTime* is not present, the IE *gnssSystemTime* is an estimate of current GNSS system time at time of reception of the IE *GNSS-ReferenceTime* by the target device. The location server should achieve an accuracy of +/- 3 seconds for this estimate including allowing for the transmission delay between the location server and the target device. Note that the target device should further compensate *gnss-SystemTime* for the time between the reception of *GNSS-ReferenceTime* and the time when the *gnss-SystemTime* is used.

The location server shall provide a value for the *gnssTimeID* only for GNSSs supported by the target device.

The IE *GNSS-ReferenceTimeForCells* can be provided multiple times (up to 16) to provide fine time assistance for several (neighbour) cells.

```
-- ASN1START
GNSS-ReferenceTime ::= SEQUENCE {
    gnss-SystemTime      GNSS-SystemTime,
    referenceTimeUnc     INTEGER (0..127)          OPTIONAL,    -- Cond noFTA
    gnss-ReferenceTimeForCells SEQUENCE (SIZE (1..16)) OF
                        GNSS-ReferenceTimeForOneCell OPTIONAL,
    ...
}

GNSS-ReferenceTimeForOneCell ::= SEQUENCE {
    networkTime          NetworkTime,
    referenceTimeUnc     INTEGER (0..127),
    ...
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>noFTA</i>	The field may be present if <i>gnssReferenceTimeForCells</i> is absent; otherwise it is not present.

GNSS-ReferenceTime field descriptions																	
gnssSystemTime	This field provides the specific GNSS system time.																
networkTime	This field specifies the cellular network time at the epoch corresponding to <i>gnssSystemTime</i> .																
referenceTimeUnc	<p>This field provides the accuracy of the relation between <i>gnssSystemTime</i> and <i>networkTime</i> time if IE <i>networkTime</i> is provided. When IE <i>networkTime</i> is not provided, this field can be included to provide the accuracy of the provided <i>gnssSystemTime</i>.</p> <p>If GNSS TOD is the given GNSS time, then the true GNSS time, corresponding to the provided network time as observed at the target device location, lies in the interval [GNSS TOD - <i>referenceTimeUnc</i>, GNSS TOD + <i>referenceTimeUnc</i>].</p> <p>The uncertainty <i>r</i>, expressed in microseconds, is mapped to a number <i>K</i>, with the following formula:</p> $r = C * (((1+x)^K) - 1)$ <p>with C = 0.5 and x = 0.14. To encode any higher value of uncertainty than that corresponding in the above formula to K=127, the same value, K=127, shall also be used. The uncertainty is then coded on 7 bits, as the binary encoding of K. Example values for the <i>referenceTimeUnc</i> Format:</p> <table border="1"> <thead> <tr> <th>Value of K</th> <th>Value of uncertainty</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0 nanoseconds</td> </tr> <tr> <td>1</td> <td>70 nanoseconds</td> </tr> <tr> <td>2</td> <td>149.8 nanoseconds</td> </tr> <tr> <td>-</td> <td>-</td> </tr> <tr> <td>50</td> <td>349.62 microseconds</td> </tr> <tr> <td>-</td> <td>-</td> </tr> <tr> <td>127</td> <td>≥ 8.43 seconds</td> </tr> </tbody> </table>	Value of K	Value of uncertainty	0	0 nanoseconds	1	70 nanoseconds	2	149.8 nanoseconds	-	-	50	349.62 microseconds	-	-	127	≥ 8.43 seconds
Value of K	Value of uncertainty																
0	0 nanoseconds																
1	70 nanoseconds																
2	149.8 nanoseconds																
-	-																
50	349.62 microseconds																
-	-																
127	≥ 8.43 seconds																

GNSS-SystemTime information element

```
-- ASN1START
GNSS-SystemTime ::= SEQUENCE {
    gnss-TimeID          GNSS-ID,
    gnss-DayNumber       INTEGER (0..32767),
    gnss-TimeOfDay       INTEGER (0..86399),

```

```

gnss-TimeOfDayFrac-msec      INTEGER (0..999)      OPTIONAL,
notificationOfLeapSecond    BIT STRING (SIZE(2))    OPTIONAL,    -- Cond gnssTimeID=glonass
gps-TOW-Assist               GPS-TOW-Assist         OPTIONAL,    -- Cond gnssTimeID=gps
...
}
-- ASN1STOP

```

Conditional presence	Explanation
<i>gnssTimeID=glonass</i>	The field may be present if <i>gnssTimeID=glonass</i> ; otherwise it is not present.
<i>gnssTimeID=gps</i>	The field may be present if <i>gnssTimeID=gps</i> ; otherwise it is not present.

GNSS-SystemTime field descriptions	
<i>gnss-TimeID</i>	This field specifies the GNSS for which the <i>GNSSSystemTime</i> is provided.
<i>gnss-DayNumber</i>	This field specifies the sequential number of days from the origin of the GNSS System Time as follows: GPS, QZSS, SBAS – Days from January 6 th 1980 00:00:00 UTC(USNO); Galileo – TBD; GLONASS – Days from January 1 st 1996.
<i>gnss-TimeOfDay</i>	This field specifies the integer number of seconds from the GNSS day change.
<i>gnss-TimeOfDayFrac-msec</i>	This field specifies the fractional part of the <i>gnssTimeOfDay</i> field in 1-milli-seconds resolution. The total GNSS TOD is <i>gnssTimeOfDay</i> + <i>gnssTimeOfDayFrac-msec</i> .
<i>notificationOfLeapSecond</i>	This field specifies the notification of forthcoming leap second correction, as defined by parameter KP in [6, Table 4.7].
<i>gps-TOW-Assist</i>	This field contains several fields in the Telemetry (TLM) Word and Handover Word (HOW) that are currently being broadcast by the respective GPS satellites. Combining this information with GPS TOW enables the target device to know the entire 1.2-second (60-bit) pattern of TLM and HOW that is transmitted at the start of each six-second NAV subframe by the particular GPS satellite.

GPS-TOW-Assist information element

```

-- ASN1START
GPS-TOW-Assist ::= SEQUENCE (SIZE(1..64)) OF GPSTOWAssistElement
GPSTOWAssistElement ::= SEQUENCE {
    satelliteID      INTEGER (1..64),
    tlmWord          INTEGER (0..16383),
    antiSpooF       INTEGER (0..1),
    alert           INTEGER (0..1),
    tlmRsvdBits     INTEGER (0..3),
    ...
}
-- ASN1STOP

```

GPSTOWAssist field descriptions	
<i>satelliteID</i>	This field identifies the satellite for which the <i>GPSTOWAssist</i> is applicable. This field is identical to the GPS PRN Signal No. defined in [1].
<i>tlmWord</i>	This field contains a 14-bit value representing the Telemetry Message (TLM) being broadcast by the GPS satellite identified by the particular <i>satelliteID</i> , with the MSB occurring first in the satellite transmission, as defined in [1].
<i>antiSpooF</i>	This field contains the Anti-Spoof flag that is being broadcast by the GPS satellite identified by <i>satelliteID</i> , as defined in [1].
<i>alert</i>	This field contains the Alert flag that is being broadcast by the GPS satellite identified by <i>satelliteID</i> , as defined in [1].
<i>tlmRsvdBits</i>	This field contains the two reserved bits in the TLM Word being broadcast by the GPS satellite identified by <i>satelliteID</i> , with the MSB occurring first in the satellite transmission, as defined in [1].

NetworkTime information element

```

-- ASN1START
NetworkTime ::= SEQUENCE {
    secondsFromFrameStructureStart      INTEGER (0..12533),
    fractionalSecondsFromFrameStructureStart  INTEGER (0..3999999),
    frameDrift                          INTEGER (-64..63)                                OPTIONAL,
    cellID                               CHOICE {
        eUTRA                            SEQUENCE {
            physCellId                    INTEGER (0..503),
            cellGlobalIdEUTRA             CellGlobalIdEUTRAandUTRA    OPTIONAL,
            ...
        },
        uTRA                               SEQUENCE {
            mode                           CHOICE {
                fdd                        SEQUENCE {
                    primary-CPICH-Info    INTEGER (0..511),
                    ...
                },
                tdd                        SEQUENCE {
                    cellParameters        INTEGER (0..127),
                    ...
                },
            },
            cellGlobalIdUTRA              CellGlobalIdEUTRAandUTRA    OPTIONAL,
            ...
        },
        GSM                               SEQUENCE {
            bchCarrier                     INTEGER (0..1023),
            bsic                            INTEGER (0..63),
            cellGlobalIdGERAN              CellGlobalIdGERAN          OPTIONAL,
            ...
        },
        ...
    },
    ...
}
-- ASN1STOP

```

NetworkTime field descriptions**secondsFromFrameStructureStart**

This field specifies the number of seconds from the beginning of the longest frame structure in the corresponding air interface.

In case of E-UTRA, the SFN cycle length is 10.23 seconds.

In case of UTRA, the SFN cycle length is 40.96 seconds.

In case of GSM, the hyperframe length is 12533.76 seconds.

fractionalSecondsFromFrameStructureStart

This field specifies the fractional part of the *secondsFromFrameStructureStart* in 250 ns resolution.

The total time since the particular frame structure start is *secondsFromFrameStructureStart* + *fractionalSecondsFromFrameStructureStart*

frameDrift

This field specifies the drift rate of the GNSS-network time relation with scale factor 2^{-30} seconds/second, in the range from $-5.9605e-8$ to $+5.8673e-8$ sec/sec.

cellID

This field specifies the cell for which the GNSS-network time relation is provided.

physCellId

This field specifies the physical cell identity of the reference cell (E-UTRA) for the GNSS-network time relation, as defined in [9].

cellGlobalIdEUTRA

This field specifies the Evolved Cell Global Identifier (ECGI), the globally unique identity of a cell in E-UTRA, of the reference cell for the GNSS-network time relation, as defined in [9].

primary-CPICH-Info

This field specifies the physical cell identity of the reference cell (UTRA) for the GNSS-network time relation, as defined in [10].

cellParameters

This field specifies the physical cell identity of the reference cell (UTRA) for the GNSS-network time relation, as defined in [10].

cellGlobalIdUTRA

The field specifies the global UTRAN Cell Identifier, the globally unique identity of a cell in UTRA, of the reference cell for the GNSS-network time relation, as defined in [10].

bcchCarrier
This field specifies the absolute GSM RF channel number of the BCCH of the reference base station (GERAN) for the GNSS-network time relation, as defined in [11].
bsic
This field specifies the Base Station Identity Code of the reference base station (GERAN) for the GNSS-network time relation, as defined in [11].
cellGlobalIdGERAN
This field specifies the Cell Global Identification (CGI), the globally unique identity of a cell in GERAN, of the reference base station for the GNSS-network time relation.

– GNSS-ReferenceLocation

The IE *GNSS-ReferenceLocation* is used by the location server to provide the target device with a-priori knowledge of its location in order to improve GNSS receiver performance. The IE *GNSS-ReferenceLocation* is provided in WGS-84 reference system.

```
-- ASN1START
GNSS-ReferenceLocation ::= SEQUENCE {
    threeDlocation          SEQUENCE {
        latitudeSign        ENUMERATED { north, south },
        latitude             INTEGER (0..8388607),
        longitude            INTEGER (-8388608..8388607),
        altitudeDirection    ENUMERATED {height, depth},
        altitude             INTEGER (0..32767),
        uncertaintySemiMajor INTEGER (0..127),
        uncertaintySemiMinor INTEGER (0..127),
        orientationMajorAxis INTEGER (0..89),
        uncertaintyAltitude  INTEGER (0..127),
        confidence           INTEGER (0..100),
        ...
    },
    ...
}
-- ASN1STOP
```

GNSSReferenceLocation field descriptions

latitudeSign
This field specifies the sign of latitude, as specified in [12].
latitude
This field specifies the degrees of latitude, as specified in [12]. The IE value (N) is derived by this formula: $N \leq 2^{23} X / 90 < N+1$ X being the latitude in degree ($0^\circ..90^\circ$).
longitude
This field specifies the degrees of longitude, as specified in [12]. The IE value (N) is derived by this formula: $N \leq 2^{24} X / 360 < N+1$ X being the longitude in degree ($-180^\circ..+180^\circ$).
altitudeDirection
This field specifies the direction of altitude, as specified in [12].
altitude
This field specifies the altitude in meters, as specified in [12]. The IE value (N) is derived by this formula: $N \leq a < N+1$ a being the altitude in meters.
uncertaintySemiMajor
This field specifies the semi-major axis of the uncertainty, as specified in [12]. The uncertainty r is derived from the "uncertainty code" k by $r = 10 \times (1.1^k - 1)$
uncertaintySemiMinor
This field specifies the semi-minor axis of the uncertainty, as specified in [12]. The uncertainty r is derived from the "uncertainty code" k by $r = 10 \times (1.1^k - 1)$

GNSSReferenceLocation field descriptions
<p>orientationMajorAxis This field specifies the orientation of the uncertainty semi-major axis, as specified in [12]. The IE value (N) is derived by this formula:</p> $2N \leq a < 2(N+1)$ <p>a being the orientation in degree ($0^\circ.. 179^\circ$).</p>
<p>uncertaintyAltitude This field specifies the altitude uncertainty, as specified in [12]. The uncertainty in altitude, h, expressed in meters is mapped from the IE value (K), with the following formula:</p> $h = C \left((1+x)^K - 1 \right)$ <p>with $C = 45$ and $x = 0.025$.</p>
<p>confidence This field specifies the confidence by which the position of the target device is known to be within the shape description in percentage, as specified in [12].</p>

– GNSS-IonosphericModel

The IE *GNSS-IonosphericModel* is used by the location server to provide parameters to model the propagation delay of the GNSS signals through the ionosphere. Proper use of these fields allows a single-frequency GNSS receiver to remove parts of the ionospheric delay from the pseudorange measurements. Two Ionospheric Models are supported: The Klobuchar model as defined in [1], and the NeQuick model as defined in [5].

```
-- ASN1START
GNSS-IonosphericModel ::= SEQUENCE {
    klobucharModel      KlobucharModelParameter      OPTIONAL,
    neQuickModel       NeQuickModelParameter        OPTIONAL,
    ...
}
-- ASN1STOP
```

KlobucharModelParameter information element

```
-- ASN1START
KlobucharModelParameter ::= SEQUENCE {
    dataID             BIT STRING (SIZE (2)),
    alfa0              INTEGER (-128..127),
    alfa1              INTEGER (-128..127),
    alfa2              INTEGER (-128..127),
    alfa3              INTEGER (-128..127),
    beta0              INTEGER (-128..127),
    beta1              INTEGER (-128..127),
    beta2              INTEGER (-128..127),
    beta3              INTEGER (-128..127),
    ...
}
-- ASN1STOP
```

KlobucharModelParameter field descriptions
<p>dataID When <i>dataID</i> has the value '11' it indicates that the parameters have been generated by QZSS, and the parameters have been specialized and are applicable within the area defined in [4]. When <i>dataID</i> has the value '00' it indicates the parameters are applicable worldwide [1,4]. All other values for <i>dataID</i> are reserved.</p>
<p>alpha0 This field specifies the α_0 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{30} seconds.</p>
<p>alpha1 This field specifies the α_1 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{27} seconds/semi-circle.</p>
<p>alpha2 This field specifies the α_2 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{24} seconds/semi-circle².</p>

<i>KlobucharModelParamater</i> field descriptions
<p><i>alpha3</i> This field specifies the α_3 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{-24} seconds/semi-circle³.</p>
<p><i>beta0</i> This field specifies the β_0 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{11} seconds.</p>
<p><i>beta1</i> This field specifies the β_1 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{14} seconds/semi-circle.</p>
<p><i>beta2</i> This field specifies the β_2 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{16} seconds/semi-circle².</p>
<p><i>beta3</i> This field specifies the β_3 parameter of the Klobuchar model, as specified in [1]. Scale factor 2^{16} seconds/semi-circle³.</p>

NeQuickModelParameter information element

```
-- ASN1START
NeQuickModelParameter ::= SEQUENCE {
    ai0          INTEGER (0 .. 4095),
    ai1          INTEGER (0 .. 4095),
    ai2          INTEGER (0 .. 4095),
    ionoStormFlag1  INTEGER (0 .. 1)      OPTIONAL,
    ionoStormFlag2  INTEGER (0 .. 1)      OPTIONAL,
    ionoStormFlag3  INTEGER (0 .. 1)      OPTIONAL,
    ionoStormFlag4  INTEGER (0 .. 1)      OPTIONAL,
    ionoStormFlag5  INTEGER (0 .. 1)      OPTIONAL,
    ...
}
-- ASN1STOP
```

<i>NeQuickModelParameter</i> field descriptions
<p><i>ai0, ai1, ai2</i> These fields are used to estimate the ionospheric distortions on pseudoranges as described in [5] on page 71.</p>
<p><i>ionoStormFlag1, ionoStormFlag2, ionoStormFlag3, ionoStormFlag4, ionoStormFlag5</i> These fields specify the ionosphere storm flags (1,...,5) for five different regions as described in [5] on page 71.</p>

GNSS-EarthOrientationParameters

The IE *GNSS-EarthOrientationParameters* is used by the location server to provide parameters to construct the ECEF and ECI coordinate transformation as defined in [1]. The IE *GNSS-EarthOrientationParameters* indicates the relationship between the Earth's rotational axis and WGS-84 reference system.

```
-- ASN1START
GNSS-EarthOrientationParameters ::= SEQUENCE {
    teop          INTEGER (0..65535),
    pmX           INTEGER (-1048576..1048575),
    pmXdots       INTEGER (-16384..16383),
    pmY           INTEGER (-1048576..1048575),
    pmYdots       INTEGER (-16384..16383),
    deltaUT1      INTEGER (-1073741824..1073741823),
    deltaUT1dots  INTEGER (-262144..262143),
    ...
}
-- ASN1STOP
```

<i>GNSS-EarthOrientationParameters</i> field descriptions
<p><i>teop</i> This field specifies the EOP data reference time in seconds, as specified in [1]. Scale factor 2^4 seconds.</p>

GNSS-EarthOrientationParameters field descriptions	
pmX	This field specifies the X-axis polar motion value at reference time in arc-seconds, as specified in [1]. Scale factor 2^{20} arc-seconds.
pmXdot	This field specifies the X-axis polar motion drift at reference time in arc-seconds/day, as specified in [1]. Scale factor 2^{21} arc-seconds/day.
pmY	This field specifies the Y-axis polar motion value at reference time in arc-seconds, as specified in [1]. Scale factor 2^{20} arc-seconds.
pmYdot	This field specifies the Y-axis polar motion drift at reference time in arc-seconds/day, as specified in [1]. Scale factor 2^{21} arc-seconds/day.
deltaUT1	This field specifies the UT1-UTC difference at reference time seconds, as specified in [1]. Scale factor 2^{24} seconds.
deltaUT1dot	This field specifies the Rate of UT1-UTC difference at reference time seconds/day, as specified in [1]. Scale factor 2^{25} seconds/day.

– GNSS-TimeModelList

The IE *GNSS-TimeModelList* is used by the location server to provide the GNSS-GNSS system time offset between the GNSS system time indicated by IE *GNSS-ID* in IE *GNSS-GenericAssistDataElement* to the GNSS system time indicated by IE *gnss-TOID*. Several *GNSS-TimeModelElement* IEs can be included with different *gnss-TOID* fields.

```
-- ASN1START
GNSS-TimeModelList ::= SEQUENCE (SIZE (1..15)) OF GNSS-TimeModelElement
GNSS-TimeModelElement ::= SEQUENCE {
    gnss-TimeModelRefTime    INTEGER (0..65535),
    tA0                      INTEGER (-67108864..67108863),
    tA1                      INTEGER (-4096..4095)                OPTIONAL,
    tA2                      INTEGER (-64..63)                    OPTIONAL,
    gnssTOID                 INTEGER (1..15),
    weekNumber               INTEGER (0..8191)                    OPTIONAL,
    deltaT                   INTEGER (-128..127)                 OPTIONAL,
    ...
}
-- ASN1STOP
```

GNSS-TimeModelElement field descriptions	
gnss-TimeModelRefTime	This field specifies the the reference time of week for <i>GNSSTimeModelElement</i> and it is given in GNSS specific system time. Scale factor 2^4 seconds.
tA0	This field specifies the bias coefficient of the <i>GNSSTimeModelElement</i> . Scale factor 2^{35} seconds.
tA1	This field specifies the drift coefficient of the <i>GNSSTimeModelElement</i> . Scale factor of 2^{51} seconds/second.
tA2	This field specifies the drift rate correction coefficient of the <i>GNSSTimeModelElement</i> . Scale factor of 2^{68} seconds/second ² .

GNSS-TimeModelElement field descriptions**gnssTOID**

This field specifies the GNSS system time of the GNSS for which the *GNSSTimeModelElement* is applicable. *GNSSTimeModelElement* contains parameters to convert GNSS system time from the system indicated by *GNSS-ID* to GNSS system time indicated by *gnssTOID*. The conversion is defined in [1,2,3].

Value of <i>gnssTOID</i>	Indication
1	GPS
2	Galileo
3	QZSS
4	GLONASS
5-15	reserved

weekNumber

This field specifies the reference week of the *GNSSTimeModelElement* given in GNSS specific system time. Scale factor 1 week.

deltaT

This field specifies the integer number of seconds of the GNSS-GNSS time offset provided in the *GNSSTimeModelElement*. Scale factor 1 second.

GNSS-DifferentialCorrections

The IE *GNSS-DifferentialCorrections* is used by the location server to provide differential GNSS corrections to the target device for a specific GNSS. Differential corrections can be provided for up to 3 signals per GNSS.

```
-- ASN1START
GNSS-DifferentialCorrections ::= SEQUENCE {
    dgnss-RefTime      INTEGER (0..3599),
    dgnss-SgnTypeList  DGNSSS-gnTypeList,
    ...
}

DGNSSS-gnTypeList ::= SEQUENCE (SIZE (1..3)) OF DGNSSSgnTypeElement

DGNSSS-gnTypeElement ::= SEQUENCE {
    gnss-SignalID      GNSS-Signal-ID,
    gnss-StatusHealth  INTEGER (0..7),
    dgnss-SatList      DGNSS-SatList,
    ...
}

DGNSS-SatList ::= SEQUENCE (SIZE (1..64)) OF DGNSS-CorrectionsElement

DGNSS-CorrectionsElement ::= SEQUENCE {
    svID               SV-ID,
    iod                BIT STRING (SIZE(11)),
    udre               INTEGER (0..3),
    pseudoRangeCor     INTEGER (-2047..2047),
    rangeRateCor       INTEGER (-127..127),
    udreGrowthRate     INTEGER (0..7)           OPTIONAL,
    udreValidityTime   INTEGER (0..7)           OPTIONAL,
    ...
}
-- ASN1STOP
```

GNSS-DifferentialCorrections field descriptions**dgnss-RefTime**

This field specifies the time for which the DGNSS corrections are valid, modulo 1 hour. *dgnssRefTime* is given in GNSS specific system time. Scale factor 1-second.

dgnss-SgnTypeList

This list includes differential correction data for different GNSS signal types, identified by *GNSSSignal-ID*.

GNSS-DifferentialCorrections field descriptions

gnss-StatusHealth

This field specifies the status of the differential corrections. The values of this field and their respective meanings are defined as follows:

gnss-StatusHealth Value	Indication
000	UDRE Scale Factor = 1.0
001	UDRE Scale Factor = 0.75
010	UDRE Scale Factor = 0.5
011	UDRE Scale Factor = 0.3
100	UDRE Scale Factor = 0.2
101	UDRE Scale Factor = 0.1
110	Reference Station Transmission Not Monitored
111	Data is invalid - disregard

The first six values in this field indicate valid differential corrections. When using the values described below, the "UDRE Scale Factor" value is applied to the UDRE values contained in the element. The purpose is to indicate an estimate in the amount of error in the corrections.

The value "110" indicates that the source of the differential corrections (e.g., reference station or external DGNSS network) is currently not being monitored. The value "111" indicates that the corrections provided by the source are invalid, as judged by the source.

dgns-SatList

This list includes differential correction data for different GNSS satellites, identified by *SV-ID*.

iod

This field specifies the Issue of Data field which contains the identity for the *GNSSNavigationModel*.

udre

This field provides an estimate of the uncertainty (1-σ) in the corrections for the particular satellite. The value in this field shall be multiplied by the UDRE Scale Factor in the *gnssStatusHealth* field to determine the final UDRE estimate for the particular satellite. The meanings of the values for this field are as follows:

udre Value	Indication
00	UDRE ≤ 1.0 m
01	1.0 m < UDRE ≤ 4.0 m
10	4.0 m < UDRE ≤ 8.0 m
11	8.0 m < UDRE

pseudoRangeCor

This field specifies the correction to the pseudorange for the particular satellite at *dgnsRefTime*, t_0 . The value of this field is given in meters and the scale factor is 0.32 meters in the range of ±655.04 meters. The method of calculating this field is described in [8].

If the location server has received a request for GNSS assistance data from a target device which included a request for the GNSS Navigation Model and DGNSS, the location server shall determine, for each satellite, if the navigation model stored by the target device is still suitable for use with DGNSS corrections and if so and if DGNSS corrections are supported the location server should send DGNSS corrections without including the GNSS Navigation Model. The *iod* value sent for a satellite shall always be the IOD value that corresponds to the navigation model for which the pseudo-range corrections are applicable.

The target device shall only use the *pseudoRangeCor* value when the IOD value received matches its available navigation model.

Pseudo-range corrections are provided with respect to GNSS specific geodetic datum (e.g., PZ-90.02 if *GNSS-ID* indicates GLONASS).

Scale factor 0.32 meters.

rangeRateCor

This field specifies the rate-of-change of the pseudorange correction for the particular satellite, using the satellite ephemeris and clock corrections identified by the *iod* field. The value of this field is given in meters per second and the resolution is 0.032 meters/sec in the range of ±4.064 meters/sec. For some time $t_1 > t_0$, the corrections for *iod* are estimated by

$$PRC(t_1, IOD) = PRC(t_0, IOD) + RRC(t_0, IOD) \cdot (t_1 - t_0) ,$$

and the target device uses this to correct the pseudorange it measures at t_1 , $PR_m(t_1, IOD)$, by

$$PR(t_1, IOD) = PR_m(t_1, IOD) + PRC(t_1, IOD) .$$

The location server shall always send the RRC value that corresponds to the PRC value that it sends. The target device shall only use the RRC value when the *iod* value received matches its available navigation model.

Scale factor 0.032 meters/second.

GNSS-DifferentialCorrections field descriptions	
udreGrowthRate	
<p>This field provides an estimate of the growth rate of uncertainty (1-σ) in the corrections for the particular satellite identified by SV-ID. The estimated UDRE at time value specified in the <i>udreValidityTime</i> t_1 is calculated as follows:</p> $UDRE(t_0+t_1) = UDRE(t_0) \times udreGrowthRate,$ <p>where t_0 is the DGNSS Reference Time <i>dgnssRefTime</i> for which the corrections are valid, t_1 is the <i>udreValidityTime</i> field, UDRE(t_0) is the value of the <i>udre</i> field, and <i>udreGrowthRate</i> field is the factor as follows:</p>	
Value of <i>udreGrowthRate</i>	Indication
000	1.5
001	2
010	4
011	6
100	8
101	10
110	12
111	16
udreValidityTime	
<p>This field specifies the time when the <i>udreGrowthRate</i> field applies. The meaning of the values for this field is as follows:</p>	
Value of <i>udreValidityTime</i>	Indication [seconds]
000	20
001	40
010	80
011	160
100	320
101	640
110	1280
111	2560

– **GNSS-NavigationModel**

The IE *GNSS-NavigationModel* is used by the location server to provide precise navigation data to the GNSS capable target device. In response to a request from a target device for GNSS Assistance Data, the location server shall determine whether to send the navigation model for a particular satellite to a target device based upon factors like the T-Toe limit specified by the target device and any request from the target device for DGNSS (see also *GNSS-DifferentialCorrections*). GNSS Orbit Model can be given in Keplerian parameters or as state vector in Earth-Centered Earth-Fixed coordinates, dependent on the *GNSS-ID* and the target device capabilities. The meaning of these parameters is defined in relevant ICDs of the particular GNSS and GNSS specific interpretations apply. For example, GPS and QZSS use the same model parameters but some parameters have a different interpretation [4].

```

-- ASN1START

GNSS-NavigationModel ::= SEQUENCE {
    nonBroadcastIndFlag    INTEGER (0..1),
    gnss-SatelliteList     GNSS-NavModelSatelliteList,
    ...
}

GNSS-NavModelSatelliteList ::= SEQUENCE (SIZE(1..64)) OF GNSS-NavModelSatelliteElement

GNSS-NavModelSatelliteElement ::= SEQUENCE {
    svID                    SV-ID,
    svHealth                BIT STRING (SIZE(8)),
    iod                     BIT STRING (SIZE(11)),
    gnss-ClockModel         GNSS-ClockModel,
    gnss-OrbitModel         GNSS-OrbitModel,
    ...
}

GNSS-ClockModel ::= CHOICE {
    standardClockModelList StandardClockModelList,      -- Model-1
    nav-ClockModel          NAV-ClockModel,              -- Model-2
    cnav-ClockModel         CNAV-ClockModel,             -- Model-3
    glonass-ClockModel      GLONASS-ClockModel,         -- Model-4
    sbas-ClockModel         SBAS-ClockModel,            -- Model-5
    ...
}
    
```



```

}
GNSSOrbitModel ::= CHOICE {
    keplerianSet      NavModel-KeplerianSet,           -- Model-1
    nav-KeplerianSet  NavModel-NAV-KeplerianSet,       -- Model-2
    cnav-KeplerianSet NavModel-CNAV-KeplerianSet,      -- Model-3
    glonass-ECEF      NavModel-GLONASS-ECEF,          -- Model-4
    sbas-ECEF         NavModel-SBAS-ECEF,              -- Model-5
    ...
}
-- ASN1STOP
    
```

GNSS-NavigationModel field descriptions

nonBroadcastIndFlag

This field indicates if the *GNSSNavigationModel* elements are not derived from satellite broadcast data or are given in a format not native to the GNSS. A value of 0 means the *GNSSNavigationModel* data elements correspond to GNSS satellite broadcasted data; a value of 1 means the *GNSSNavigationModel* data elements are not derived from satellite broadcast.

gnss-SatelliteList

This list provides ephemeris and clock corrections for GNSS satellites indicated by *SV-ID*.

svHealth

This field specifies the satellite's current health. The health values are GNSS system specific. The interpretation of *svHealth* depends on the *GNSS-ID* and is as follows:

GNSS	svHealth Bit String(8)							
	Bit 1 (MSB)	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Bit 8 (LSB)
GPS L1/CA ⁽¹⁾	SV Health [1]						'0' (reserved)	'0' (reserved)
Modernized GPS ⁽²⁾	L1C Health [3]	L1 Health [1,2]	L2 Health [1,2]	L5 Health [1,2]	'0' (reserved)	'0' (reserved)	'0' (reserved)	'0' (reserved)
SBAS ⁽³⁾	Ranging On (0),Off(1) [7]	Corrections On(0),Off(1) [7]	Integrity On(0),Off(1) [7]	'0' (reserved)	'0' (reserved)	'0' (reserved)	'0' (reserved)	'0' (reserved)
QZSS ⁽⁴⁾ QZS-L1	SV Health [4]						'0' (reserved)	'0' (reserved)
QZSS ⁽⁵⁾ QZS-L1C/L2C/L5	L1C Health [4]	L1 Health [4]	L2 Health [4]	L5 Health [4]	'0' (reserved)	'0' (reserved)	'0' (reserved)	'0' (reserved)
GLONASS	B _n (MSB) [6, page 30]	F _T [6, Table 4.4]				'0' (reserved)	'0' (reserved)	'0' (reserved)
Galileo [5, pages 75-76]	E5a Data Validity Status	E5b Data Validity Status	E1-B Data Validity Status	E5a Signal Health Status See [5], Table 67		'0' (reserved)	'0' (reserved)	'0' (reserved)
Note 1:	If <i>GNSS-ID</i> indicates 'gps', and GNSS Orbit Model-2 is included, this interpretation of <i>svHealth</i> applies.							
Note 2:	If <i>GNSS-ID</i> indicates 'gps', and GNSS Orbit Model-3 is included, this interpretation of <i>svHealth</i> applies. If a certain signal is not supported on the satellite indicated by <i>SV-ID</i> , the corresponding health bit shall be set to '1' (i.e., signal can not be used).							
Note 3:	<i>svHealth</i> in case of <i>GNSS-ID</i> indicates 'sbas' includes the 5 LSBs of the Health included in GEO Almanac Message Parameters (Type 17) [7].							
Note 4:	If <i>GNSS-ID</i> indicates 'qzss', and GNSS Orbit Model-2 is included, this interpretation of <i>svHealth</i> applies.							
Note 5:	If <i>GNSS-ID</i> indicates 'qzss', and GNSS Orbit Model-3 is included, this interpretation of <i>svHealth</i> applies.							

GNSS-NavigationModel field descriptions											
iod											
This field specifies the Issue of Data and contains the identity for GNSS Navigation Model.											
In case of broadcasted GPS NAV ephemeris, the <i>iod</i> contains the IODC as described in [1].											
In case of broadcasted Modernized GPS ephemeris, the <i>iod</i> contains the 11-bit parameter t_{oe} as defined in [1, Table 30-I] [3, Table 3.5-1].											
In case of broadcasted SBAS ephemeris, the <i>iod</i> contains the 8 bits Issue of Data as defined in [7] Message Type 9.											
In case of broadcasted QZSS QZS-L1 ephemeris, the <i>iod</i> contains the IODC as described in [4].											
In case of broadcasted QZSS QZS-L1C/L2C/L5 ephemeris, the <i>iod</i> contains the 11-bit parameter t_{oe} as defined in [4].											
In case of broadcasted GLONASS ephemeris, the <i>iod</i> contains the parameter t_b as defined in [6].											
In the case of broadcasted Galileo ephemeris, the <i>iod</i> contains the IOD index as described in [5].											
The interpretation of <i>iod</i> depends on the <i>GNSS-ID</i> and is as follows:											
GNSS	iod Bit String(11)										
	Bit 1 (MSB)	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Bit 8	Bit 9	Bit 10	Bit 11 (LSB)
GPS L1/CA	'0'	Issue of Data, Clock [1]									
Modernized GPS	t_{oe} (seconds, scale factor 300, range 0 – 604500) [1, 2, 3]										
SBAS	'0'	'0'	'0'	Issue of Data ([7], Message Type 9)							
QZSS QZS-L1	'0'	Issue of Data, Clock [4]									
QZSS QZS-L1C/L2C/L5	t_{oe} (seconds, scale factor 300, range 0 – 604500) [4]										
GLONASS	'0'	'0'	'0'	'0'	t_b (minutes, scale factor 15, range 0 – 1425) [6]						
Galileo	'0'	IOD [5]									

StandardClockModelList information element

```

-- ASN1START
StandardClockModelList ::= SEQUENCE (SIZE(1..2)) OF StandardClockModelElement
StandardClockModelElement ::= SEQUENCE {
    stanClockToc      INTEGER (0..16383),
    stanClockAF2     INTEGER (-2048..2047),
    stanClockAF1     INTEGER (-131072..131071),
    stanClockAF0     INTEGER (-134217728..134217727),
    stanClockTgd     INTEGER (-512..511)           OPTIONAL,
    stanModelID      INTEGER (0..1)                OPTIONAL,
    ...
}
-- ASN1STOP
    
```

StandardClockModelList field descriptions
standardClockModelList <i>gnssClockModel</i> Model-1 contains one or two clock model elements depending on the GNSS. If included, clock Model-1 shall be included once or twice depending on the target device capability. If the target device is supporting multiple Galileo signals, the location server shall include both F/Nav and I/Nav clock models in <i>gnssClockModel</i> if the location server assumes the target device to perform location information calculation using multiple signals.
stanClockToc Parameter t_{oc} defined in [5]. Scale factor 60 seconds.
stanClockAF2 Parameter af_2 defined in [5]. Scale factor 2^{65} seconds/second ² .
stanClockAF1 Parameter af_1 defined in [5]. Scale factor 2^{45} seconds/second.
stanClockAF0 Parameter af_0 defined in [5]. Scale factor 2^{33} seconds.
stanClockTgd Parameter T_{GD} defined in [5]. Scale factor 2^{32} seconds.

StandardClockModelList field descriptions**stanModelID**

This field specifies the identity of the clock model according to:

Value of <i>stanModelID</i>	Identity
0	I/Nav
1	F/Nav

NAV-ClockModel information element

```
-- ASN1START
NAV-ClockModel ::= SEQUENCE {
    navToc          INTEGER (0..37799),
    navaf2          INTEGER (-128..127),
    navaf1          INTEGER (-32768..32767),
    navaf0          INTEGER (-2097152..2097151),
    navTgd          INTEGER (-128..127),
    ...
}
-- ASN1STOP
```

NAV-ClockModel field descriptions**navToc**

Parameter t_{oc} , time of clock (seconds) [1,4]
Scale factor 2^4 seconds.

navaf2

Parameter a_{f2} , clock correction polynomial coefficient (sec/sec²) [1,4].
Scale factor 2^{55} seconds/second².

navaf1

Parameter a_{f1} , clock correction polynomial coefficient (sec/sec) [1,4].
Scale factor 2^{43} seconds/second.

navaf0

Parameter a_{f0} , clock correction polynomial coefficient (seconds) [1,4].
Scale factor 2^{31} seconds.

navTgd

Parameter T_{GD} , group delay (seconds) [1,4].
Scale factor 2^{31} seconds.

CNAV-ClockModel information element

```
-- ASN1START
CNAV-ClockModel ::= SEQUENCE {
    cnavToc          INTEGER (0..2015),
    cnavTop          INTEGER (0..2015),
    cnavURA0        INTEGER (-16..15),
    cnavURA1        INTEGER (0..7),
    cnavURA2        INTEGER (0..7),
    cnavAf2          INTEGER (-512..511),
    cnavAf1          INTEGER (-524288..524287),
    cnavAf0          INTEGER (-33554432..33554431),
    cnavTgd          INTEGER (-4096..4095),
    cnavISCL1cp      INTEGER (-4096..4095)          OPTIONAL,
    cnavISCL1cd      INTEGER (-4096..4095)          OPTIONAL,
    cnavISCL1ca      INTEGER (-4096..4095)          OPTIONAL,
    cnavISCL12c      INTEGER (-4096..4095)          OPTIONAL,
    cnavISCL15i5     INTEGER (-4096..4095)          OPTIONAL,
    cnavISCL15q5     INTEGER (-4096..4095)          OPTIONAL,
    ...
}
-- ASN1STOP
```

CNAV-ClockModel field descriptions

CNAV-ClockModel field descriptions
<p><i>cnavToc</i> Parameter t_{oc}, clock data reference time of week (seconds) [1, 2, 3, 4]. Scale factor 300 seconds.</p>
<p><i>cnavTop</i> Parameter t_{op}, clock data predict time of week (seconds) [1, 2, 3, 4]. Scale factor 300 seconds</p>
<p><i>cnavURA0</i> Parameter URA_{oc} Index, SV clock accuracy index (dimensionless) [1, 2, 3, 4].</p>
<p><i>cnavURA1</i> Parameter URA_{oc1} Index, SV clock accuracy change index (dimensionless) [1, 2, 3, 4].</p>
<p><i>cnavURA2</i> Parameter URA_{oc2} Index, SV clock accuracy change rate index (dimensionless) [1, 2, 3, 4].</p>
<p><i>cnavAf2</i> Parameter a_{r2-n}, SV clock drift rate correction coefficient (sec/sec²) [1, 2, 3, 4]. Scale factor 2^{-60} seconds/second².</p>
<p><i>cnavAf1</i> Parameter a_{r1-n}, SV clock drift correction coefficient (sec/sec) [1, 2, 3, 4]. Scale factor 2^{-48} seconds/second.</p>
<p><i>cnavAf0</i> Parameter a_{r0-n}, SV clock bias correction coefficient (seconds) [1, 2, 3, 4]. Scale factor 2^{-35} seconds.</p>
<p><i>cnavTgd</i> Parameter T_{GD}, Group delay correction (seconds) [1, 2, 3, 4]. Scale factor 2^{-35} seconds.</p>
<p><i>cnavISC1cp</i> Parameter ISC_{L1CP}, inter signal group delay correction (seconds) [3, 4]. Scale factor 2^{-35} seconds.</p>
<p><i>cnavISC1cd</i> Parameter ISC_{L1CD}, inter signal group delay correction (seconds) [3, 4]. Scale factor 2^{-35} seconds.</p>
<p><i>cnavISC1ca</i> Parameter ISC_{L1CA}, inter signal group delay correction (seconds) [1, 2, 4]. Scale factor 2^{-35} seconds.</p>
<p><i>cnavISC2c</i> Parameter ISC_{L2C}, inter signal group delay correction (seconds) [1, 2, 4]. Scale factor 2^{-35} seconds.</p>
<p><i>cnavISC5i5</i> Parameter ISC_{L5i5}, inter signal group delay correction (seconds) [2, 5]. Scale factor 2^{-35} seconds.</p>
<p><i>cnavISC5q5</i> Parameter ISC_{L5Q5}, inter signal group delay correction (seconds) [2, 5]. Scale factor 2^{-35} seconds.</p>

GLONASS-ClockModel information element

```

-- ASN1START
GLONASS-ClockModel ::= SEQUENCE {
    gloTau          INTEGER (-2097152..2097151),
    gloGamma        INTEGER (-1024..1023),
    gloDeltaTau     INTEGER (-16..15)           OPTIONAL,
    ...
}
-- ASN1STOP

```

GLONASS-ClockModel field descriptions
<p>gloTau Parameter $\tau_n(t_b)$, satellite clock offset (seconds) [6]. Scale factor 2^{-30} seconds.</p>
<p>gloGamma Parameter $\gamma_n(t_b)$, relative frequency offset from nominal value (dimensionless) [6]. Scale factor 2^{-40}.</p>
<p>gloDeltaTau Parameter $\Delta\tau_n$, time difference between transmission in G2 and G1 (seconds) [6]. Scale factor 2^{-30} seconds.</p>

SBAS-ClockModel information element

```
-- ASN1START
```

```
SBAS-ClockModel ::= SEQUENCE {
    sbasTo          INTEGER (0..5399),
    sbasAgfo        INTEGER (-2048..2047),
    sbasAgf1        INTEGER (-128..127),
    ...
}
```

```
-- ASN1STOP
```

SBAS-ClockModel field descriptions
<p>sbasTo Parameter t_0 [7]. Scale factor 16 seconds.</p>
<p>sbasAgfo Parameter a_{Gfo} [7]. Scale factor 2^{-31} seconds.</p>
<p>sbasAgf1 Parameter a_{Gf1} [7]. Scale factor 2^{-40} seconds/second.</p>

NavModel-KeplerianSet information element

```
-- ASN1START
```

```
NavModel-KeplerianSet ::= SEQUENCE {
    keplerToe       INTEGER (0 .. 16383),
    keplerW         INTEGER (-2147483648..2147483647),
    keplerDeltaN    INTEGER (-32768..32767),
    keplerM0        INTEGER (-2147483648..2147483647),
    keplerOmegaDot  INTEGER (-8388608..8388607),
    keplerE         INTEGER (0..4294967295),
    keplerIDot      INTEGER (-8192..8191),
    keplerAPowerHalf INTEGER (0..4294967295),
    keplerIO        INTEGER (-2147483648..2147483647),
    keplerOmega0    INTEGER (-2147483648..2147483647),
    keplerCrs       INTEGER (-32768..32767),
    keplerCis       INTEGER (-32768..32767),
    keplerCus       INTEGER (-32768..32767),
    keplerCrc       INTEGER (-32768..32767),
    keplerCic       INTEGER (-32768..32767),
    keplerCuc       INTEGER (-32768..32767),
    ...
}
```

```
-- ASN1STOP
```

NavModel-KeplerianSet field descriptions
<p>keplerToe Parameter t_{oe}, time-of-ephemeris in seconds [5]. Scale factor 60 seconds.</p>

NavModel-KeplerianSet field descriptions
<p>keplerW Parameter ω, argument of perigee (semi-circles) [5]. Scale factor 2^{-31} semi-circles.</p>
<p>keplerDeltaN Parameter Δn, mean motion difference from computed value (semi-circles/sec) [5]. Scale factor 2^{43} semi-circles/second.</p>
<p>keplerM0 Parameter M_0, mean anomaly at reference time (semi-circles) [5]. Scale factor 2^{-31} semi-circles.</p>
<p>keplerOmegaDot Parameter OMEGAdot, longitude of ascending node of orbit plane at weekly epoch (semi-circles/sec) [5]. Scale factor 2^{43} semi-circles/second.</p>
<p>keplerE Parameter e, eccentricity [5]. Scale factor 2^{-33}.</p>
<p>KeplerIDot Parameter Idot, rate of inclination angle (semi-circles/sec) [5]. Scale factor 2^{43} semi-circles/second.</p>
<p>keplerAPowerHalf Parameter sqrtA, semi-major Axis in (meters)^{1/2} [5]. Scale factor 2^{-19} meters^{1/2}.</p>
<p>keplerI0 Parameter i_0, inclination angle at reference time (semi-circles) [5]. Scale factor 2^{-31} semi-circles.</p>
<p>keplerOmega0 Parameter OMEGA₀, longitude of ascending node of orbit plane at weekly epoch (semi-circles) [5]. Scale factor 2^{-31} semi-circles.</p>
<p>keplerCrs Parameter C_{rs}, amplitude of the sine harmonic correction term to the orbit radius (meters) [5]. Scale factor 2^{-5} meters.</p>
<p>keplerCis Parameter C_{is}, amplitude of the sine harmonic correction term to the angle of inclination (radians) [5]. Scale factor 2^{-29} radians.</p>
<p>keplerCus Parameter C_{us}, amplitude of the sine harmonic correction term to the argument of latitude (radians) [5]. Scale factor 2^{-29} radians.</p>
<p>keplerCrc Parameter C_{rc}, amplitude of the cosine harmonic correction term to the orbit radius (meters) [5]. Scale factor 2^{-5} meters.</p>
<p>keplerCic Parameter C_{ic}, amplitude of the cosine harmonic correction term to the angle of inclination (radians) [5]. Scale factor 2^{-29} radians.</p>
<p>keplerCuc Parameter C_{uc}, amplitude of the cosine harmonic correction term to the argument of latitude (radians) [5]. Scale factor 2^{-29} radians.</p>

NavModel-NAV-KeplerianSet information element

```
-- ASN1START
NavModel-NAV-KeplerianSet ::= SEQUENCE {
    navURA          INTEGER (0..15),
    navFitFlag       INTEGER (0..1),
    navToe           INTEGER (0..37799),
    navOmega         INTEGER (-2147483648..2147483647),
    navDeltaN        INTEGER (-32768..32767),
    navM0            INTEGER (-2147483648..2147483647),
    navOmegaADot     INTEGER (-8388608..8388607),
    navE             INTEGER (0..4294967295),
    navIDot          INTEGER (-8192..8191),
    navAPowerHalf    INTEGER (0..4294967295),
    navI0            INTEGER (-2147483648..2147483647),
    navOmegaA0       INTEGER (-2147483648..2147483647),
    navCrs           INTEGER (-32768..32767),
    navCis           INTEGER (-32768..32767),
    navCus           INTEGER (-32768..32767),
    navCrc           INTEGER (-32768..32767),

```

```

navCic          INTEGER (-32768..32767),
navCuc          INTEGER (-32768..32767),
addNAVparam    SEQUENCE {
  ephemerisCodeOnL2  INTEGER (0..3),
  ephemerisL2Pflag  INTEGER (0..1),
  ephemerisSF1Rsvd  SEQUENCE {
    reserved1        INTEGER (0..8388607),    -- 23-bit field
    reserved2        INTEGER (0..16777215),    -- 24-bit field
    reserved3        INTEGER (0..16777215),    -- 24-bit field
    reserved4        INTEGER (0..65535)       -- 16-bit field
  },
  ephemerisAODA     INTEGER (0..31)
} OPTIONAL,
...
}
-- ASN1STOP

```

NavModel-NAV-KeplerianSet field descriptions

navURA Parameter URA Index, SV accuracy (dimensionless) [1,4].
navFitFlag Parameter Fit Interval Flag, fit interval indication (dimensionless) [1,4].
navToe Parameter t_{oe} , time of ephemeris (seconds) [1,4]. Scale factor 2^4 seconds.
navOmega Parameter ω , argument of perigee (semi-circles) [1,4]. Scale factor 2^{31} semi-circles.
navDeltaN Parameter Δn , mean motion difference from computed value (semi-circles/sec) [1,4]. Scale factor 2^{43} semi-circles/second.
navM0 Parameter M_0 , mean anomaly at reference time (semi-circles) [1,4]. Scale factor 2^{31} semi-circles.
navOmegaADot Parameter $\dot{\Omega}$, rate of right ascension (semi-circles/sec) [1,4]. Scale factor 2^{43} semi-circles/second.
navE Parameter e , eccentricity (dimensionless) [1,4]. Scale factor 2^{33} .
navIDot Parameter \dot{I} , rate of inclination angle (semi-circles/sec) [1,4]. Scale factor 2^{43} semi-circles/second.
navAPowerHalf Parameter \sqrt{A} , square root of semi-major axis (meters ^{1/2}) [1,4]. Scale factor 2^{19} meters ^{1/2} .
navI0 Parameter i_0 , inclination angle at reference time (semi-circles) [1,4]. Scale factor 2^{31} semi-circles.
navOmegaA0 Parameter Ω_0 , longitude of ascending node of orbit plane at weekly epoch (semi-circles) [1,4]. Scale factor 2^{31} semi-circles.
navCrs Parameter C_{rs} , amplitude of sine harmonic correction term to the orbit radius (meters) [1,4]. Scale factor 2^5 meters.
navCis Parameter C_{is} , amplitude of sine harmonic correction term to the angle of inclination (radians) [1,4]. Scale factor 2^{29} radians.
navCus Parameter C_{us} , amplitude of sine harmonic correction term to the argument of latitude (radians) [1,4]. Scale factor 2^{29} radians.
navCrc Parameter C_{rc} , amplitude of cosine harmonic correction term to the orbit radius (meters) [1,4]. Scale factor 2^5 meters.

NavModel-NAV-KeplerianSet field descriptions
<p>navCic Parameter C_{ic}, amplitude of cosine harmonic correction term to the angle of inclination (radians) [1,4]. Scale factor 2^{-29} radians.</p>
<p>navCuc Parameter C_{uc}, amplitude of cosine harmonic correction term to the argument of latitude (radians) [1,4]. Scale factor 2^{-29} radians.</p>
<p>addNAVparam These fields include data and reserved bits in the GPS NAV message [1, 11].</p>

NavModel-CNAV-KeplerianSet information element

```

-- ASN1START
NavModel-CNAV-KeplerianSet ::= SEQUENCE {
    cnavTop          INTEGER (0..2015),
    cnavURAindex    INTEGER (-16..15),
    cnavDeltaA       INTEGER (-33554432..33554431),
    cnavAdot         INTEGER (-16777216..16777215),
    cnavDeltaNo      INTEGER (-65536..65535),
    cnavDeltaNoDot   INTEGER (-4194304..4194303),
    cnavMo           INTEGER (-4294967296..4294967295),
    cnavE            INTEGER (0..8589934591),
    cnavOmega        INTEGER (-4294967296..4294967295),
    cnavOMEGA0       INTEGER (-4294967296..4294967295),
    cnavDeltaOmegaDot INTEGER (-65536..65535),
    cnavIo           INTEGER (-4294967296..4294967295),
    cnavIoDot        INTEGER (-16384..16383),
    cnavCis          INTEGER (-32768..32767),
    cnavCic          INTEGER (-32768..32767),
    cnavCrs          INTEGER (-8388608..8388607),
    cnavCrc          INTEGER (-8388608..8388607),
    cnavCus          INTEGER (-1048576..1048575),
    cnavCuc          INTEGER (-1048576..1048575),
    ...
}
-- ASN1STOP

```

NavModel-CNAV-KeplerianSet field descriptions
<p>cnavTop Parameter t_{op}, data predict time of week (seconds) [1,2,3,4]. Scale factor 300 seconds.</p>
<p>cnavURAindex Parameter URA_{oe} Index, SV accuracy (dimensionless) [1,2,3,4].</p>
<p>cnavDeltaA Parameter ΔA, semi-major axis difference at reference time (meters) [1,2,3,4]. Scale factor 2^9 meters.</p>
<p>cnavAdot Parameter \dot{A}, change rate in semi-major axis (meters/sec) [1,2,3,4]. Scale factor 2^{21} meters/sec.</p>
<p>cnavDeltaNo Parameter Δn_0, mean motion difference from computed value at reference time (semi-circles/sec) [1,2,3,4]. Scale factor 2^{44} semi-circles/second.</p>
<p>cnavDeltaNoDot Parameter $\Delta \dot{n}_0$, rate of mean motion difference from computed value (semi-circles/sec²) [1,2,3,4]. Scale factor 2^{57} semi-circles/second².</p>
<p>cnavMo Parameter M_{0-n}, mean anomaly at reference time (semi-circles) [1,2,3,4]. Scale factor 2^{32} semi-circles.</p>
<p>cnavE Parameter e_n, eccentricity (dimensionless) [1,2,3,4]. Scale factor 2^{34}.</p>
<p>cnavOmega Parameter ω_n, argument of perigee (semi-circles) [1,2,3,4]. Scale factor 2^{32} semi-circles.</p>

NavModel-CNAV-KeplerianSet field descriptions
<p>cnavOMEGA0 Parameter Ω_{0-n}, reference right ascension angle (semi-circles) [1,2,3,4]. Scale factor 2^{-32} semi-circles.</p>
<p>cnavDeltaOmegaDot Parameter $\dot{\Delta\Omega}$, rate of right ascension difference (semi-circles/sec) [1,2,3,4]. Scale factor 2^{-44} semi-circles/second.</p>
<p>cnavIo Parameter i_{0-n}, inclination angle at reference time (semi-circles) [1,2,3,4]. Scale factor 2^{-32} semi-circles.</p>
<p>cnavIoDot Parameter i_{0-n}-DOT, rate of inclination angle (semi-circles/sec) [1,2,3,4]. Scale factor 2^{-44} semi-circles/second..</p>
<p>cnavCis Parameter C_{is-n}, amplitude of sine harmonic correction term to the angle of inclination (radians) [1,2,3,4]. Scale factor 2^{-30} radians.</p>
<p>cnavCic Parameter C_{ic-n}, amplitude of cosine harmonic correction term to the angle of inclination (radians) [1,2,3,4]. Scale factor 2^{-30} radians.</p>
<p>cnavCrs Parameter C_{rs-n}, amplitude of sine harmonic correction term to the orbit radius (meters) [1,2,3,4]. Scale factor 2^8 meters.</p>
<p>cnavCrc Parameter C_{rc-n}, amplitude of cosine harmonic correction term to the orbit radius (meters) [1,2,3,4]. Scale factor 2^8 meters.</p>
<p>cnavCus Parameter C_{us-n}, amplitude of the sine harmonic correction term to the argument of latitude (radians) [1,2,3,4]. Scale factor 2^{-30} radians.</p>
<p>cnavCuc Parameter C_{uc-n}, amplitude of cosine harmonic correction term to the argument of latitude (radians) [1,2,3,4]. Scale factor 2^{-30} radians.</p>

NavModel-GLONASS-ECEF information element

```

-- ASN1START
NavModel-GLONASS-ECEF ::= SEQUENCE {
    gloEn          INTEGER (0..31),
    gloP1         BIT STRING (SIZE(2)),
    gloP2         BOOLEAN,
    gloM          INTEGER (0..3),
    gloX          INTEGER (-67108864..67108863),
    gloXdot       INTEGER (-8388608..8388607),
    gloXdotdot    INTEGER (-16..15),
    gloY          INTEGER (-67108864..67108863),
    gloYdot       INTEGER (-8388608..8388607),
    gloYdotdot    INTEGER (-16..15),
    gloZ          INTEGER (-67108864..67108863),
    gloZdot       INTEGER (-8388608..8388607),
    gloZdotdot    INTEGER (-16..15),
    ...
}
-- ASN1STOP

```

NavModel-GLONASS-ECEF field descriptions
<p>gloEn Parameter E_n, age of data (days) [5]. Scale factor 1 days.</p>
<p>gloP1 Parameter P1, time interval between two adjacent values of t_b (minutes) [5].</p>
<p>gloP2 Parameter P2, change of t_b flag (dimensionless) [5].</p>
<p>gloM Parameter M, type of satellite (dimensionless) [5].</p>

NavModel-GLONASS-ECEF field descriptions
<p>gloX Parameter $x_n(t_b)$, x-coordinate of satellite at time t_b (kilometers) [5]. Scale factor 2^{-11} kilometers.</p>
<p>gloXdot Parameter $\dot{x}_n(t_b)$, x-coordinate of satellite velocity at time t_b (kilometers/sec) [5]. Scale factor 2^{-20} kilometers/second.</p>
<p>gloXdotdot Parameter $\ddot{x}_n(t_b)$, x-coordinate of satellite acceleration at time t_b (kilometers/sec²) [5]. Scale factor 2^{-30} kilometers/second².</p>
<p>gloY Parameter $y_n(t_b)$, y-coordinate of satellite at time t_b (kilometers) [5]. Scale factor 2^{-11} kilometers.</p>
<p>gloYdot Parameter $\dot{y}_n(t_b)$, y-coordinate of satellite velocity at time t_b (kilometers/sec) [5]. Scale factor 2^{-20} kilometers/second.</p>
<p>gloYdotdot Parameter $\ddot{y}_n(t_b)$, y-coordinate of satellite acceleration at time t_b (kilometers/sec²) [5]. Scale factor 2^{-30} kilometers/second².</p>
<p>gloZ Parameter $z_n(t_b)$, z-coordinate of satellite at time t_b (kilometers) [5]. Scale factor 2^{-11} kilometers.</p>
<p>gloZdot Parameter $\dot{z}_n(t_b)$, z-coordinate of satellite velocity at time t_b (kilometers/sec) [5]. Scale factor 2^{-20} kilometers/second.</p>
<p>gloZdotdot Parameter $\ddot{z}_n(t_b)$, z-coordinate of satellite acceleration at time t_b (kilometers/sec²) [5]. Scale factor 2^{-30} kilometers/second².</p>

NavModel-SBAS-ECEF information element

```

-- ASN1START
NavModel-SBAS-ECEF ::= SEQUENCE {
    sbasTo          INTEGER (0..5399)                OPTIONAL,  -- Cond ClockModel
    sbasAccuracy    BIT STRING (SIZE(4)),
    sbasXg          INTEGER (-536870912..536870911),
    sbasYg          INTEGER (-536870912..536870911),
    sbasZg          INTEGER (-16777216..16777215),
    sbasXgDot       INTEGER (-65536..65535),
    sbasYgDot       INTEGER (-65536..65535),
    sbasZgDot       INTEGER (-131072..131071),
    sbasXgDotDot    INTEGER (-512..511),
    sbasYgDotDot    INTEGER (-512..511),
    sbasZgDotDot    INTEGER (-512..511),
    ...
}
-- ASN1STOP

```

Conditional presence	Explanation
<i>ClockModel</i>	This field is mandatory present if <i>gnssClockModel</i> Model-5 is not included; otherwise it is not present.

NavModel-SBAS-ECEF field descriptions
<p>sbasTo Parameter t_0, time of applicability (seconds) [7]. Scale factor 16 seconds.</p>
<p>sbasAccuracy Parameter Accuracy, (dimensionless) [7].</p>

NavModel-SBAS-ECEF field descriptions
sbasXg Parameter X_G , (meters) [7]. Scale factor 0.08 meters.
sbasYg Parameter Y_G , (meters) [7]. Scale factor 0.08 meters.
sbasZg Parameter Z_G , (meters) [7]. Scale factor 0.4 meters.
sbasXgDot Parameter X_G , Rate-of-Change, (meters/sec) [7]. Scale factor 0.000625 meters/second.
sbasYgDot Parameter Y_G , Rate-of-Change, (meters/sec) [7]. Scale factor 0.000625 meters/second.
sbasZgDot Parameter Z_G , Rate-of-Change, (meters/sec) [7]. Scale factor 0.004 meters/second.
sbasXgDotDot Parameter X_G , Acceleration, (meters/sec ²) [7]. Scale factor 0.0000125 meters/second ² .
sbasYgDotDot Parameter Y_G , Acceleration, (meters/sec ²) [7]. Scale factor 0.0000125 meters/second ² .
sbasZgDotDot Parameter Z_G Acceleration, (meters/sec ²) [7]. Scale factor 0.0000625 meters/second ² .

– GNSS-RealTimeIntegrity

The IE *GNSS-RealTimeIntegrity* is used by the location server to provide parameters that describe the real-time status of the GNSS constellations. *GNSS-RealTimeIntegrity* data communicates the health of the GNSS signals to the mobile in real-time.

The location server shall always transmit the *GNSS-RealTimeIntegrity* with the current list of unhealthy signals (i.e., not only for signals/SVs currently visible at the reference location), for any GNSS positioning attempt and whenever GNSS assistance data are sent. If the number of bad signals is zero, then the *GNSS-RealTimeIntegrity* IE shall be omitted.

```
-- ASN1START
GNSS-RealTimeIntegrity ::= SEQUENCE {
    gnss-BadSignalList  GNSS-BadSignalList,
    ...
}
GNSS-BadSignalList ::= SEQUENCE (SIZE(1..64)) OF BadSignalElement
BadSignalElement ::= SEQUENCE {
    badSVID             SV-ID,
    badSignalID         GNSS-SignalIDs  OPTIONAL,
    ...
}
-- ASN1STOP
```

GNSS-RealTimeIntegrity field descriptions
gnss-BadSignalList This field specifies a list of satellites with bad signal or signals.
badSVID This field specifies the GNSS <i>SV-ID</i> of the satellite with bad signal or signals.
badSignalID This field identifies the bad signal or signals of a satellite. This is represented by a bit string in <i>GNSSSignal-IDs</i> , with a one-value at a bit position means the particular GNSS signal type of the SV is unhealthy; a zero-value means healthy. Absence of this field means that all signals on the specific SV are bad.

– GNSS-DataBitAssistance

The IE *GNSS-DataBitAssistance* is used by the location server to provide data bit assistance data for specific satellite signals for data wipe-off. The data bits included in the assistance data depends on the GNSS and its signal.

```

-- ASN1START
GNSS-DataBitAssistance ::= SEQUENCE {
    gnss-TOD                INTEGER (0..3599),
    gnss-TODfrac            INTEGER (0..999)           OPTIONAL,
    gnss-DataBitsSatList   GNSSDataBitsSatList,
    ...
}

GNSS-DataBitsSatList ::= SEQUENCE (SIZE(1..64)) OF GNSS-DataBitsSatElement

GNSS-DataBitsSatElement ::= SEQUENCE {
    svID                    SV-ID,
    gnss-DataBitsSgnList   GNSS-DataBitsSgnList,
    ...
}

GNSS-DataBitsSgnList ::= SEQUENCE (SIZE(1..8)) OF GNSS-DataBitsSgnElement

GNSS-DataBitsSgnElement ::= SEQUENCE {
    gnss-SignalType        GNSS-SignalID,
    gnss-DataBits          BIT STRING (SIZE (1..1024)),
    ...
}
-- ASN1STOP

```

GNSS-DataBitAssistance field descriptions

gnss-TOD

This field specifies the reference time of the first bit of the data in *GNSSDataBitAssistance* in integer seconds in GNSS specific system time, modulo 1 hour.
Scale factor 1 second.

gnss-TODfrac

This field specifies the fractional part of the *gnssTOD* in 1-milli-second resolution.
Scale factor 1 millisecond. The total GNSS TOD is *gnssTOD* + *gnssTODfrac*.

gnss-DataBitsSatList

This list specifies the data bits for a particular GNSS satellite *SV-ID* and signal *GNSSSignal-ID*.

svID

This field specifies the GNSS *SV-ID* of the satellite for which the *GNSSDataBitAssistance* is given.

gnss-SignalType

This field identifies the GNSS signal type of the *GNSSDataBitAssistance*.

gnss-DataBits

Data bits are contained in GNSS system and data type specific format.

In case of GPS L1 C/A, it contains the NAV data modulation bits as defined in [1].

In case of Modernized GPS L1C, it contains the encoded and interleaved modulation symbols as defined in [3] section 3.2.3.1. In case of Modernized GPS L2C, it contains either the NAV data modulation bits, the FEC encoded NAV data modulation symbols, or the FEC encoded CNAV data modulation symbols, dependent on the current signal configuration of this satellite as defined in [1, Table 3-III]. In case of Modernized GPS L5, it contains the FEC encoded CNAV data modulation symbols as defined in [2].

In case of SBAS, it contains the FEC encoded data modulation symbols as defined in [7].

In case of QZSS QZS-L1, it contains the NAV data modulation bits as defined in [4] section 5.2. In case of QZSS QZS-L1C, it contains the encoded and interleaved modulation symbols as defined in [4] section 5.3. In case of QZSS QZS-L2C, it contains the encoded modulation symbols as defined in [4] section 5.5. In case of QZSS QZS-L5, it contains the encoded modulation symbols as defined in [4] section 5.6.

In case of GLONASS, it contains the 100 sps differentially Manchester encoded modulation symbols as defined in [6] section 3.3.2.2.

In case of Galileo, it contains the FEC encoded and interleaved modulation symbols. The logical levels 1 and 0 correspond to signal levels -1 and +1, respectively.

– GNSS-AcquisitionAssistance

The IE *GNSS-AcquisitionAssistance* is used by the location server to provide parameters that enable fast acquisition of the GNSS signals. Essentially, these parameters describe the range and derivatives from respective satellites to the reference location at the reference time *GNSS-SystemTime* provided in IE *GNSS-ReferenceTime*.

Whenever *GNSS-AcquisitionAssistance* is provided by the location server, the IE *GNSS-ReferenceTime* shall be provided as well. E.g., even if the target device request for assistance data includes only a request for *GNSS-AcquisitionAssistance*, the location server shall also provide the corresponding IE *GNSS-ReferenceTime*.

Figure 6.5.2.2-1 illustrates the relation between some of the fields, using GPS TOW as exemplary reference.

```
-- ASN1START
GNSS-AcquisitionAssistance ::= SEQUENCE {
    gnss-SignalID          GNSS-SignalID,
    gnss-AcquisitionAssistList  GNSS-AcquisitionAssistList,
    ...
}

GNSS-AcquisitionAssistList ::= SEQUENCE (SIZE(1..64)) OF GNSS-AcquisitionAssistElement

GNSS-AcquisitionAssistElement ::= SEQUENCE {
    svID                  SV-ID,
    doppler0              INTEGER (-2048..2047),
    doppler1              INTEGER (0..63),
    dopplerUncertainty    INTEGER (0..4),
    codePhase             INTEGER (0..1022),
    intCodePhase          INTEGER (0..127),
    codePhaseSearchWindow  INTEGER (0..31),
    azimuth               INTEGER (0..511),
    elevation              INTEGER (0..127),
    ...
}
-- ASN1STOP
```

GNSS-AcquisitionAssistance field descriptions

gnss-SignalID	This field specifies the GNSS signal for which the acquisition assistance are provided.
gnss-AcquisitionAssistList	These fields provide a list of acquisition assistance data for each GNSS satellite.
svID	This field specifies the GNSS <i>SV-ID</i> of the satellite for which the <i>GNSSAcquisitionAssistance</i> is given.
doppler0	This field specifies the Doppler (0 th order term) value. A positive value in Doppler defines the increase in satellite signal frequency due to velocity towards the target device. A negative value in Doppler defines the decrease in satellite signal frequency due to velocity away from the target device. Doppler is given in unit of m/s by multiplying the Doppler value in Hz by the nominal wavelength of the assisted signal. Scale factor 0.5 m/s in the range from -1024 m/s to +1023.5 m/s.
doppler1	This field specifies the Doppler (1 st order term) value. A positive value defines the rate of increase in satellite signal frequency due to acceleration towards the target device. A negative value defines the rate of decrease in satellite signal frequency due to acceleration away from the target device. Scale factor 1/210 m/s ² in the range from -0.2 m/s ² to +0.1 m/s ² .
dopplerUncertainty	This field specifies the Doppler uncertainty value. It is defined such that the Doppler experienced by a stationary target device is in the range [Doppler–Doppler Uncertainty] to [Doppler+Doppler Uncertainty]. Doppler Uncertainty is given in unit of m/s by multiplying the Doppler Uncertainty value in Hz by the nominal wavelength of the assisted signal. Defined values: 2.5 m/s, 5 m/s, 10 m/s, 20 m/s, 40 m/s as encoded by an integer <i>n</i> in the range 0-4 according to: $2^{-n}(40)$ m/s; <i>n</i> = 0 – 4.
codePhase	This field specifies the code phase, in units of milli-seconds, in the range from 0 to 1 millisecond scaled by the nominal chipping rate of the GNSS signal, where increasing values of the field signify increasing predicted signal code phases, as seen by a receiver at the reference location at the reference time. The reference location would typically be an a priori estimate of the target device location. Scale factor 2^{10} ms in the range from 0 to $(1 \cdot 2^{-10})$ ms.

GNSS-AcquisitionAssistance field descriptions**intCodePhase**

This field contains integer code phase (expressed modulo 128 ms) currently being transmitted at the reference time, as seen by a receiver at the reference location.
Scale factor 1 ms in the range from 0 to 127 ms.

codePhaseSearchWindow

This field contains the code phase search window. The code phase search window accounts for the uncertainty in the estimated target device location but not any uncertainty in reference time. It is defined such that the expected code phase is in the range [Code Phase–Code Phase Search Window] to [Code Phase+Code Phase Search Window] given in units of milli-seconds.

Range 0-31, mapping according to following table:

codePhaseSearchWindow Value	Interpretation Code Phase Search Window [ms]
'00000'	No information
'00001'	0,002
'00010'	0,004
'00011'	0,008
'00100'	0,012
'00101'	0,016
'00110'	0,024
'00111'	0,032
'01000'	0,048
'01001'	0,064
'01010'	0,096
'01011'	0,128
'01100'	0,164
'01101'	0,200
'01110'	0,250
'01111'	0,300
'10000'	0,360
'10001'	0,420
'10010'	0,480
'10011'	0,540
'10100'	0,600
'10101'	0,660
'10110'	0,720
'10111'	0,780
'11000'	0,850
'11001'	1,000
'11010'	1,150
'11011'	1,300
'11100'	1,450
'11101'	1,600
'11110'	1,800
'11111'	2,000

azimuth

This field specifies the azimuth angle. An angle of x degrees means the satellite azimuth a is in the range $(x \leq a < x+0.703125)$ degrees.
Scale factor 0.703125 degrees.

elevation

This field specifies the elevation angle. An angle of y degrees means the satellite elevation e is in the range $(y \leq e < y+0.703125)$ degrees.
Scale factor 0.703125 degrees.

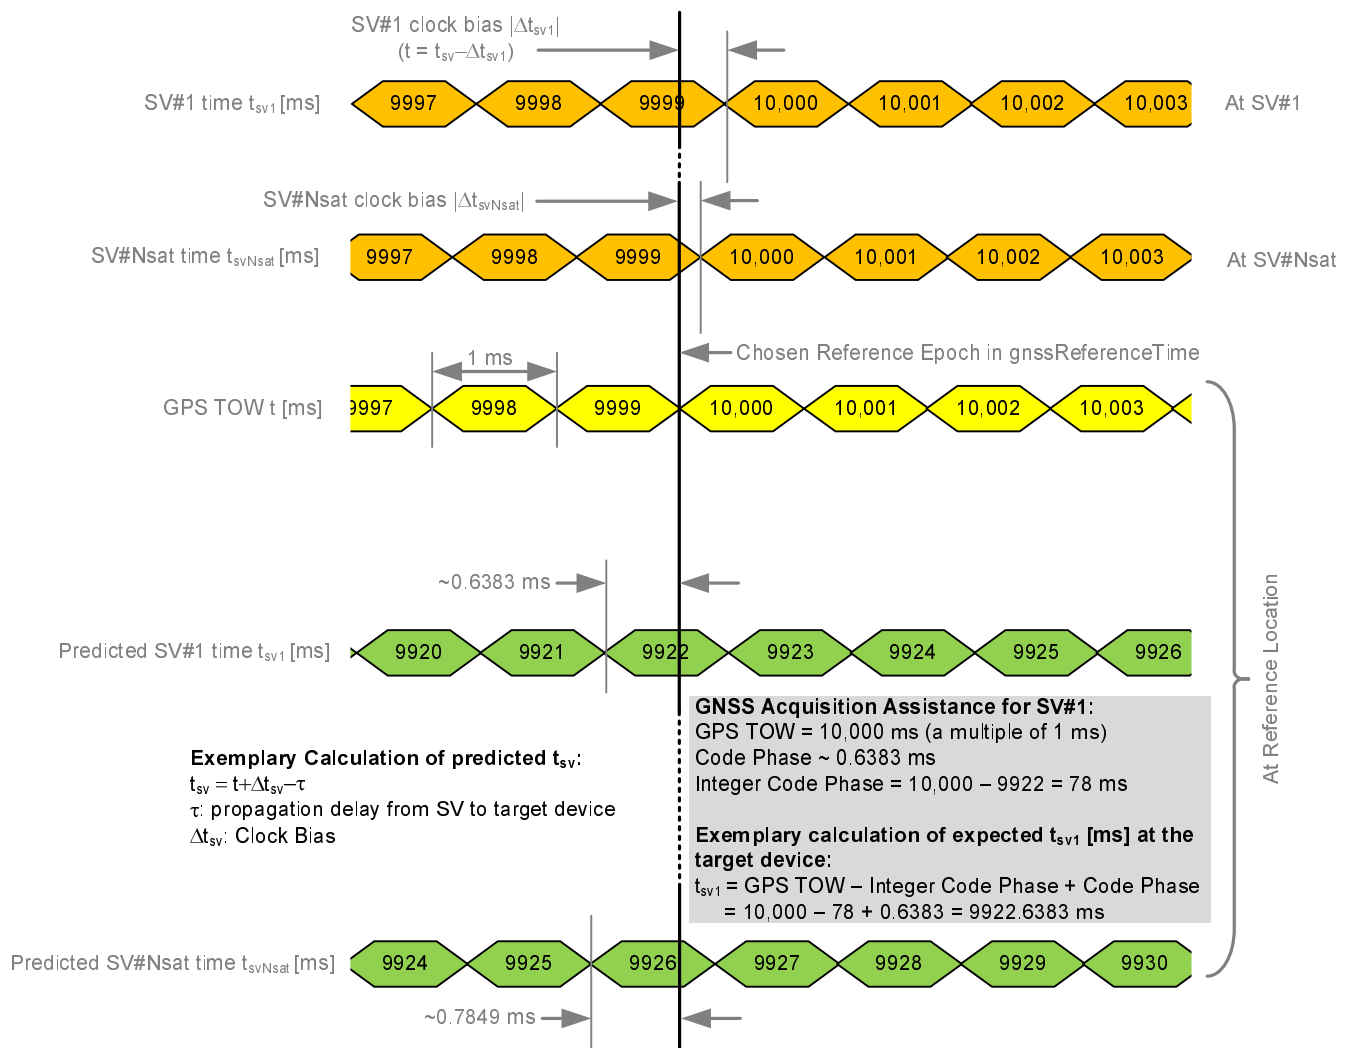


Figure 6.5.2.2-1: Exemplary calculation of some GNSS Acquisition Assistance fields.

GNSS-Almanac

The IE *GNSS-Almanac* is used by the location server to provide the coarse, long-term model of the satellite positions and clocks. The meaning of these parameters is defined in relevant ICDs of the particular GNSS and GNSS specific interpretations apply. For example, GPS and QZSS use the same model parameters but some parameters have a different interpretation [4]. *GNSS-Almanac* is useful for receiver tasks that require coarse accuracy, such as determining satellite visibility. The model is valid for up to a few weeks, typically. Since it is a long-term model, the field should be provided for all satellites available in the GNSS constellation (i.e., not only for SVs visible at the reference location and including SVs flagged as unhealthy in almanac). The *completeAlmanacProvided* field indicates whether or not the location server provided almanacs for the complete GNSS constellation.

```
-- ASN1START
GNSS-Almanac ::= SEQUENCE {
    weekNumber          INTEGER (0..255)    OPTIONAL,
    toa                 INTEGER (0..255)    OPTIONAL,
    ioda                INTEGER (0..3)      OPTIONAL,
    completeAlmanacProvided BOOLEAN,
    gnss-AlmanacList   GNSS-AlmanacList,
    ...
}

GNSS-AlmanacList ::= SEQUENCE (SIZE(1..64)) OF GNSS-AlmanacElement

GNSS-AlmanacElement ::= CHOICE {
    keplerianAlmanacSet    AlmanacKeplerianSet,      -- Model-1
    keplerianNAV-Almanac  AlmanacNAV-KeplerianSet,  -- Model-2
    keplerianReducedAlmanac AlmanacReducedKeplerianSet, -- Model-3
}
```

```

    keplerianMidiAlmanac   AlmanacMidiAlmanacSet,    -- Model-4
    keplerianGLONASS      AlmanacGlonassAlmanacSet,  -- Model-5
    ecef-SBAS-Almanac     AlmanacECEF-SBAS-AlmanacSet, -- Model-6
    ...
}
-- ASN1STOP

```

GNSS-Almanac field descriptions

weekNumber	This field specifies the almanac reference week number in GNSS specific system time to which the almanac reference time <i>toa</i> is referenced, modulo 256 weeks.
toa	This field specifies the almanac reference time given in GNSS specific system time.
ioda	This field specifies the issue of data.
completeAlmanacProvided	If set to TRUE, the <i>gnssAlmanacList</i> contains almanacs for the complete GNSS constellation indicated by <i>GNSS-ID</i> .
gnss-AlmanacList	This list contains the almanac model for each GNSS satellite in the GNSS constellation.

AlmanacKeplerianSet information element

```

-- ASN1START
AlmanacKeplerianSet ::= SEQUENCE {
    svID                SV-ID,
    kepAlmanacE         INTEGER (0..2047),
    kepAlmanacDeltaI    INTEGER (-1024..1023),
    kepAlmanacOmegaDot  INTEGER (-1024..1023),
    kepSVHealth         INTEGER (0..15),
    kepAlmanacAPowerHalf INTEGER (-65536..65535),
    kepAlmanacOmega0    INTEGER (-32768..32767),
    kepAlmanacW         INTEGER (-32768..32767),
    kepAlmanacM0        INTEGER (-32768..32767),
    kepAlmanacAF0       INTEGER (-8192..8191),
    kepAlmanacAF1       INTEGER (-1024..1023),
    ...
}
-- ASN1STOP

```

AlmanacKeplerianSet field descriptions

svID	This field identifies the satellite for which the GNSS Almanac Model is given.
kepAlmanacE	Parameter <i>e</i> , eccentricity, dimensionless [5]. Scale factor 2^{16} .
kepAlmanacDeltaI	Parameter δ_i , semi-circles [5]. Scale factor 2^{14} semi-circles.
kepAlmanacOmegaDot	Parameter OMEGADOT, longitude of ascending node of orbit plane at weekly epoch (semi-circles/sec) [5]. Scale factor 2^{33} semi-circles/seconds.
kepSVHealth	Parameter SV Health KP, dimensionless. This field specifies the SV Health status in GNSS almanac model using Keplerian parameters. In Galileo case this field shall contain the I/NAV health status bits [5].
kepAlmanacAPowerHalf	Parameter $\Delta A^{1/2}$, Semi-Major Axis delta (meters) ^{1/2} [5]. Scale factor 2^9 meters ^{1/2} .
kepAlmanacOmega0	Parameter OMEGA ₀ , longitude of ascending node of orbit plane at weekly epoch (semi-circles) [5]. Scale factor 2^{15} semi-circles.
kepAlmanacW	Parameter ω , argument of perigee (semi-circles) [5]. Scale factor 2^{15} semi-circles.

AlmanacKeplerianSet field descriptions
<p>kepAlmanacM0 Parameter M_0, mean anomaly at reference time (semi-circles) [5]. Scale factor 2^{-15} semi-circles.</p>
<p>kepAlmanacAF0 Parameter a_{f0}, seconds [5]. Scale factor 2^{-19} seconds.</p>
<p>kepAlmanacAF1 Parameter a_{f1}, sec/sec [5]. Scale factor 2^{-38} seconds/second.</p>

AlmanacNAV-KeplerianSet information element

```

-- ASN1START
AlmanacNAV-KeplerianSet ::= SEQUENCE {
    svID                SV-ID,
    navAlmE             INTEGER (0..65535),
    navAlmDeltaI       INTEGER (-32768..32767),
    navAlmOMEGADOT     INTEGER (-32768..32767),
    navAlmSVHealth     INTEGER (0..255),
    navAlmSqrtA        INTEGER (0..16777215),
    navAlmOMEGAo       INTEGER (-8388608..8388607),
    navAlmOmega        INTEGER (-8388608..8388607),
    navAlmMo           INTEGER (-8388608..8388607),
    navAlmaf0          INTEGER (-1024..1023),
    navAlmaf1          INTEGER (-1024..1023),
    ...
}
-- ASN1STOP

```

AlmanacNAV-KeplerianSet field descriptions
<p>svID This field identifies the satellite for which the GNSS Almanac Model is given.</p>
<p>navAlmE Parameter e, eccentricity, dimensionless [1,4]. Scale factor 2^{-21}.</p>
<p>navAlmDeltaI Parameter δi, correction to inclination, semi-circles [1,4]. Scale factor 2^{-19} semi-circles.</p>
<p>navAlmOMEGADOT Parameter $\dot{\Omega}$, rate of right ascension, semi-circles/sec [1,4]. Scale factor 2^{-38} semi-circles/second.</p>
<p>navAlmSVHealth Parameter SV Health, satellite health [1,4].</p>
<p>navAlmSqrtA Parameter \sqrt{A}, square root of the semi-major axis, meters^{1/2} [1,4] Scale factor 2^{-11} meters^{1/2}.</p>
<p>navAlmOMEGAo Parameter Ω_0, longitude of ascending node of orbit plane at weekly epoch, semi-circles [1,4]. Scale factor 2^{-23} semi-circles.</p>
<p>navAlmOmega Parameter ω, argument of perigee semi-circles [1,4]. Scale factor 2^{-23} semi-circles.</p>
<p>navAlmMo Parameter M_0, mean anomaly at reference time semi-circles [1,4]. Scale factor 2^{-23} semi-circles.</p>
<p>navAlmaf0 Parameter a_{f0}, apparent satellite clock correction seconds [1,4]. Scale factor 2^{-20} seconds.</p>
<p>navAlmaf1 Parameter a_{f1}, apparent satellite clock correction sec/sec [1,4]. Scale factor 2^{-38} semi-circles seconds/second.</p>

AlmanacReducedKeplerianSet information element

```
-- ASN1START
AlmanacReducedKeplerianSet ::= SEQUENCE {
    svID                SV-ID,
    redAlmDeltaA        INTEGER (-128..127),
    redAlmOmega0        INTEGER (-64..63),
    redAlmPhi0          INTEGER (-64..63),
    redAlmL1Health      BOOLEAN,
    redAlmL2Health      BOOLEAN,
    redAlmL5Health      BOOLEAN,
    ...
}
-- ASN1STOP
```

AlmanacReducedKeplerianSet field descriptions

svID	This field identifies the satellite for which the GNSS Almanac Model is given.
redAlmDeltaA	Parameter δ_A , meters [1,2,3,4]. Scale factor 2^{+9} meters.
redAlmOmega0	Parameter Ω_0 , semi-circles [1,2,3,4]. Scale factor 2^6 semi-circles.
redAlmPhi0	Parameter Φ_0 , semi-circles [1,2,3,4]. Scale factor 2^6 semi-circles.
redAlmL1Health	Parameter L1 Health, dimensionless [1,2,3,4].
redAlmL2Health	Parameter L2 Health, dimensionless [1,2,3,4].
redAlmL5Health	Parameter L5 Health, dimensionless [1,2,3,4].

AlmanacMidiAlmanacSet information element

```
-- ASN1START
AlmanacMidiAlmanacSet ::= SEQUENCE {
    svID                SV-ID,
    midiAlmE            INTEGER (0..2047),
    midiAlmDeltaI        INTEGER (-1024..1023),
    midiAlmOmegaDot      INTEGER (-1024..1023),
    midiAlmSqrtA         INTEGER (0..131071),
    midiAlmOmega0        INTEGER (-32768..32767),
    midiAlmOmega         INTEGER (-32768..32767),
    midiAlmMo            INTEGER (-32768..32767),
    midiAlmaf0           INTEGER (-1024..1023),
    midiAlmaf1           INTEGER (-512..511),
    midiAlmL1Health      BOOLEAN,
    midiAlmL2Health      BOOLEAN,
    midiAlmL5Health      BOOLEAN,
    ...
}
-- ASN1STOP
```

AlmanacMidiAlmanacSet field descriptions
svID This field identifies the satellite for which the GNSS Almanac Model is given.
midiAlmE Parameter e, dimensionless [1,2,3,4]. Scale factor 2^{-16} .
midiAlmDeltaI Parameter δ_i , semi-circles [1,2,3,4]. Scale factor 2^{-14} semi-circles.
midiAlmOmegaDot Parameter $\dot{\Omega}$, semi-circles/sec [1,2,3,4]. Scale factor 2^{-33} semi-circles/second.
midiAlmSqrtA Parameter \sqrt{A} , meters ^{1/2} [1,2,3,4]. Scale factor 2^{-4} meters ^{1/2} .
midiAlmOmega0 Parameter Ω_0 , semi-circles [1,2,3,4]. Scale factor 2^{-15} semi-circles.
midiAlmOmega Parameter ω , semi-circles [1,2,3,4]. Scale factor 2^{-15} semi-circles.
midiAlmMo Parameter M_0 , semi-circles [1,2,3,4]. Scale factor 2^{-15} semi-circles.
midiAlmaf0 Parameter a_{f0} , seconds [1,2,3,4]. Scale factor 2^{20} seconds.
midiAlmaf1 Parameter a_{f1} , sec/sec [1,2,3,4]. Scale factor 2^{37} seconds/second.
midiAlmL1Health Parameter L1 Health, dimensionless [1,2,3,4].
midiAlmL2Health Parameter L2 Health, dimensionless [1,2,3,4].
midiAlmL5Health Parameter L5 Health, dimensionless [1,2,3,4].

AlmanacGlonassAlmanacSet information element

```

-- ASN1START
AlmanacGlonassAlmanacSet ::= SEQUENCE {
    gloAlmNA          INTEGER (1..1461),
    gloAlmNA         INTEGER (1..24),
    gloAlmHA          INTEGER (0..31),
    gloAlmLambdaA     INTEGER (-1048576..1048575),
    gloAlmtLambdaA    INTEGER (0..2097151),
    gloAlmDeltaIa     INTEGER (-131072..131071),
    gloAlmDeltaTA     INTEGER (-2097152..2097151),
    gloAlmDeltaTdotA  INTEGER (-64..63),
    gloAlmEpsilonA    INTEGER (0..32767),
    gloAlmOmegaA      INTEGER (-32768..32767),
    gloAlmTauA        INTEGER (-512..511),
    gloAlmCA          INTEGER (0..1),
    gloAlmMA          BIT STRING (SIZE(2))          OPTIONAL,
    ...
}
-- ASN1STOP

```

<i>AlmanacGlonassAlmanacSet</i> field descriptions
<i>gloAlmNA</i> Parameter N_n^A , days [6]. Scale factor 1 days.
<i>gloAlmna</i> Parameter n_n^A , dimensionless [6].
<i>gloAlmHA</i> Parameter H_n^A , dimensionless [6].
<i>gloAlmLambdaA</i> Parameter λ_n^A , semi-circles [6]. Scale factor 2^{20} semi-circles.
<i>gloAlmtlambdaA</i> Parameter $t_{\lambda,n}^A$, seconds [6]. Scale factor 2^5 seconds.
<i>gloAlmDeltala</i> Parameter Δ_i^A , semi-circles [6]. Scale factor 2^{20} semi-circles.
<i>gloAlmDeltaTA</i> Parameter ΔT_n^A , sec/orbit period [6]. Scale factor 2^9 seconds/orbit period.
<i>gloAlmDeltaTdotA</i> Parameter $\Delta T_DOT_n^A$, sec/orbit period ² [6]. Scale factor 2^{14} seconds/orbit period ² .
<i>gloAlmEpsilonA</i> Parameter ϵ_n^A , dimensionless [6]. Scale factor 2^{20} .
<i>gloAlmOmegaA</i> Parameter ω_n^A , semi-circles [6]. Scale factor 2^{15} semi-circles.
<i>gloAlmTauA</i> Parameter τ_n^A , seconds [6]. Scale factor 2^{18} seconds.
<i>gloAlmCA</i> Parameter C_n^A , dimensionless [6].
<i>gloAlmMA</i> Parameter M_n^A , dimensionless [6].

AlmanacECEF-SBAS-AlmanacSet information element

```

-- ASN1START
AlmanacECEF-SBAS-AlmanacSet ::= SEQUENCE {
    sbasAlmDataID      INTEGER (0..3),
    svID               SV-ID,
    sbasAlmHealth      BIT STRING (SIZE(8)),
    sbasAlmXg          INTEGER (-16384..16383),
    sbasAlmYg          INTEGER (-16384..16383),
    sbasAlmZg          INTEGER (-256..255),
    sbasAlmXgdot       INTEGER (-4..3),
    sbasAlmYgdot       INTEGER (-4..3),
    sbasAlmZgdot       INTEGER (-8..7),
    sbasAlmTo          INTEGER (0..2047),
    ...
}
-- ASN1STOP

```

AlmanacECEF-SBAS-AlmanacSet field descriptions
<i>sbasAlmDataID</i> Parameter Data ID, dimensionless [7].
<i>svID</i> This field identifies the satellite for which the GNSS Almanac Model is given.
<i>sbasAlmHealth</i> Parameter Health, dimensionless [7].
<i>sbasAlmXg</i> Parameter X_G , meters [7]. Scale factor 2600 meters.
<i>sbasAlmYg</i> Parameter Y_G , meters [7]. Scale factor 2600 meters.
<i>sbasAlmZg</i> Parameter Z_G , meters [7]. Scale factor 26000 meters.
<i>sbasAlmXgdot</i> Parameter X_G Rat-of-Change, meters/sec [7]. Scale factor 10 meters/second.
<i>sbasAlmYgDot</i> Parameter Y_G Rate-of-Change, meters/sec [7]. Scale factor 10 meters/second.
<i>sbasAlmZgDot</i> Parameter Z_G Rate-of-Change, meters/sec [7]. Scale factor 40.96 meters/second.
<i>sbasAlmTo</i> Parameter t_0 , seconds [7]. Scale factor 64 meters/seconds.

– GNSS-UTC-Model

The IE *GNSS-UTC-Model* is used by the location server to provide several sets of parameters needed to relate GNSS system time to Universal Time Coordinate (UTC), as defined in [1, 2, 3, 4, 5, 6, 7].

The UTC time standard, UTC(k), is GNSS specific. E.g., if *GNSS-ID* indicates GPS, *GNSS-UTC-Model* contains a set of parameters needed to relate GPS system time to UTC(USNO); if *GNSS-ID* indicates QZSS, *GNSS-UTC-Model* contains a set of parameters needed to relate QZST to UTC(NICT); if *GNSS-ID* indicates GLONASS, *GNSS-UTC-Model* contains a set of parameters needed to relate GLONASS system time to UTC(RU); if *GNSS-ID* indicates SBAS, *GNSS-UTC-Model* contains a set of parameters needed to relate SBAS network time for the SBAS indicated by *SBAS-ID* to the UTC standard defined by the UTC Standard ID.

```
-- ASN1START
GNSS-UTC-Model ::= CHOICE {
    utcModel1      UTCmodelSet1,    -- Model-1
    utcModel2      UTCmodelSet2,    -- Model-2
    utcModel3      UTCmodelSet3,    -- Model-3
    utcModel4      UTCmodelSet4,    -- Model-4
    ...
}
-- ASN1STOP
```

UTCmodelSet1 information element

```
-- ASN1START
UTCmodelSet1 ::= SEQUENCE {
    gnssUtcA1      INTEGER (-8388608..8388607),
    gnssUtcA0      INTEGER (-2147483648..2147483647),
    gnssUtcTot      INTEGER (0..255),
    gnssUtcWNt      INTEGER (0..255),
    gnssUtcDeltaTls INTEGER (-128..127),
    gnssUtcWNlsf    INTEGER (0..255),
    gnssUtcDN       INTEGER (-128..127),
    gnssUtcDeltaTlsf INTEGER (-128..127),
    ...
}
```

```
}
-- ASN1STOP
```

<i>UTCmodelSet1</i> field descriptions
<i>gnssUtcA1</i> Parameter A_1 , scale factor 2^{-50} seconds/second [1, 4, 5].
<i>gnssUtcA0</i> Parameter A_0 , scale factor 2^{-30} seconds [1, 4, 5].
<i>gnssUtcTot</i> Parameter t_{ot} , scale factor 2^{12} seconds [1, 4, 5].
<i>gnssUtcWNt</i> Parameter WN_t , scale factor 1 week [1, 4, 5].
<i>gnssUtcDeltaTls</i> Parameter Δt_{LS} , scale factor 1 second [1, 4, 5].
<i>gnssUtcWNlsf</i> Parameter WN_{LSF} , scale factor 1 week [1, 4, 5].
<i>gnssUtcDN</i> Parameter DN, scale factor 1 day [1, 4, 5].
<i>gnssUtcDeltaTlsf</i> Parameter Δt_{LSF} , scale factor 1 second [1, 4, 5].

***UTCmodelSet2* information element**

```
-- ASN1START
UTCmodelSet2 ::= SEQUENCE {
    utcA0          INTEGER (-32768..32767),
    utcA1          INTEGER (-4096..4095),
    utcA2          INTEGER (-64..63),
    utcDeltaTls   INTEGER (-128..127),
    utcTot         INTEGER (0..65535),
    utcWNot        INTEGER (0..8191),
    utcWNlsf       INTEGER (0..255),
    utcDN          BIT STRING (SIZE(4)),
    utcDeltaTlsf  INTEGER (-128..127),
    ...
}
-- ASN1STOP
```

<i>UTCmodelSet2</i> field descriptions
<i>utcA0</i> Parameter A_{0-n} , bias coefficient of GNSS time scale relative to UTC time scale (seconds) [1,2,3,4]. Scale factor 2^{-35} seconds.
<i>utcA1</i> Parameter A_{1-n} , drift coefficient of GNSS time scale relative to UTC time scale (sec/sec) [1,2,3,4]. Scale factor 2^{-51} seconds/second.
<i>utcA2</i> Parameter A_{2-n} , drift rate correction coefficient of GNSS time scale relative to UTC time scale (sec/sec ²) [1,2,3,4]. Scale factor 2^{-68} seconds/second ² .
<i>utcDeltaTls</i> Parameter Δt_{LS} , current or past leap second count (seconds) [1,2,3,4]. Scale factor 1 second.
<i>utcTot</i> Parameter t_{ot} , time data reference time of week (seconds) [1,2,3,4]. Scale factor 2^4 seconds.
<i>utcWNot</i> Parameter WN_{ot} , time data reference week number (weeks) [1,2,3,4]. Scale factor 1 week.
<i>utcWNlsf</i> Parameter WN_{LSF} , leap second reference week number (weeks) [1,2,3,4]. Scale factor 1 week.
<i>utcDN</i> Parameter DN, leap second reference day number (days) [1,2,3,4]. Scale factor 1 day.

UTCmodelSet2 field descriptions**utcDeltaTlsf**

Parameter Δt_{LSF} , current or future leap second count (seconds) [1,2,3,4].
Scale factor 1 second.

UTCmodelSet3 information element

```
-- ASN1START
UTCmodelSet3 ::= SEQUENCE {
    nA          INTEGER (1..1461),
    tauC        INTEGER (-2147483648..2147483647),
    b1          INTEGER (-1024..1023)           OPTIONAL,
    b2          INTEGER (-512..511)           OPTIONAL,
    kp          BIT STRING (SIZE(2))         OPTIONAL,
    ...
}
-- ASN1STOP
```

UTCmodelSet3 field descriptions**nA**

Parameter N^A , calendar day number within four-year period beginning since the leap year (days) [6].
Scale factor 1 day.

tauC

Parameter τ_c , GLONASS time scale correction to UTC(SU) (seconds) [6].
Scale factor 2^{31} seconds.

b1

Parameter B1, coefficient to determine $\Delta UT1$ (seconds) [6].
Scale factor 2^{10} seconds.

b2

Parameter B2, coefficient to determine $\Delta UT1$ (seconds/msd) [6].
Scale factor 2^{16} seconds/msd.

kp

Parameter KP, notification of expected leap second correction (dimensionless) [6].

UTCmodelSet4 information element

```
-- ASN1START
UTCmodelSet4 ::= SEQUENCE {
    utcA1wnt    INTEGER (-8388608..8388607),
    utcA0wnt    INTEGER (-2147483648..2147483647),
    utcTot      INTEGER (0..255),
    utcWNt      INTEGER (0..255),
    utcDeltaTls  INTEGER (-128..127),
    utcWNlsf    INTEGER (0..255),
    utcDN       INTEGER (-128..127),
    utcDeltaTlsf  INTEGER (-128..127),
    utcStandardID  INTEGER (0..7),
    ...
}
-- ASN1STOP
```

UTCmodelSet4 field descriptions**utcA1wnt**

Parameter A_{1WNT} , sec/sec ([7], Message Type 12).
Scale factor 2^{50} seconds/second.

utcA0wnt

Parameter A_{0WNT} , seconds ([7], Message Type 12).
Scale factor 2^{30} seconds.

utcTot

Parameter t_{ot} , seconds ([7], Message Type 12).
Scale factor 2^{12} seconds.

<i>UTCmode/Set4</i> field descriptions													
<i>utcWNt</i> Parameter WN_t , weeks ([7], Message Type 12). Scale factor 1 week.													
<i>utcDeltaTIs</i> Parameter Δt_{LS} , seconds ([7], Message Type 12). Scale factor 1 second.													
<i>utcWNIsf</i> Parameter WN_{LSF} , weeks ([7], Message Type 12). Scale factor 1 week.													
<i>utcDN</i> Parameter DN, days ([7], Message Type 12). Scale factor 1 day.													
<i>utcDeltaTIsf</i> Parameter Δt_{LSF} , seconds ([7], Message Type 12). Scale factor 1 second.													
<i>utcStandardID</i> If <i>GNSS-ID</i> indicates 'sbas', this field indicates the UTC standard used for the SBAS network time indicated by <i>SBAS-ID</i> to UTC relation as defined as follows ([7], Message Type 12):													
<table border="1"> <thead> <tr> <th>Value of UTC Standard ID</th> <th>UTC Standard</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">0</td> <td>UTC as operated by the Communications Research Laboratory (CRL), Tokyo, Japan</td> </tr> <tr> <td style="text-align: center;">1</td> <td>UTC as operated by the National Institute of Standards and Technology (NIST)</td> </tr> <tr> <td style="text-align: center;">2</td> <td>UTC as operated by the U. S. Naval Observatory (USNO)</td> </tr> <tr> <td style="text-align: center;">3</td> <td>UTC as operated by the International Bureau of Weights and Measures (BIPM)</td> </tr> <tr> <td style="text-align: center;">4-7</td> <td>Reserved for future definition</td> </tr> </tbody> </table>	Value of UTC Standard ID	UTC Standard	0	UTC as operated by the Communications Research Laboratory (CRL), Tokyo, Japan	1	UTC as operated by the National Institute of Standards and Technology (NIST)	2	UTC as operated by the U. S. Naval Observatory (USNO)	3	UTC as operated by the International Bureau of Weights and Measures (BIPM)	4-7	Reserved for future definition	
Value of UTC Standard ID	UTC Standard												
0	UTC as operated by the Communications Research Laboratory (CRL), Tokyo, Japan												
1	UTC as operated by the National Institute of Standards and Technology (NIST)												
2	UTC as operated by the U. S. Naval Observatory (USNO)												
3	UTC as operated by the International Bureau of Weights and Measures (BIPM)												
4-7	Reserved for future definition												

GNSS-AuxiliaryInformation

The IE *GNSS-AuxiliaryInformation* is used by the location server to provide additional information dependent on the *GNSS-ID*. If *GNSS-AuxiliaryInformation* is provided together with other satellite dependent GNSS assistance data (i.e., any of *GNSS-DifferentialCorrections*, *GNSS-NavigationModel*, *GNSS-DataBitAssistance*, or *GNSS-AcquisitionAssistance* IEs) and LPP pseudo-segmentation is used, the *GNSS-AuxiliaryInformation* should be provided for the same satellites and in the same LPP segment as the other satellite dependent GNSS assistance data.

```

-- ASN1START
GNSS-AuxiliaryInformation ::= CHOICE {
    gnss-ID-GPS      GNSS-ID-GPS
    gnss-ID-GLONASS GNSS-ID-GLONASS,
    ...
}

GNSS-ID-GPS ::= SEQUENCE (SIZE(1..64)) OF GNSS-ID-GPS-SatElement

GNSS-ID-GPS-SatElement ::= SEQUENCE {
    svID          SV-ID,
    signalsAvailable GNSS-SignalIDs,
    ...
},

GNSS-ID-GLONASS ::= SEQUENCE (SIZE(1..64)) OF GNSS-ID-GLONASS-SatElement

GNSS-ID-GLONASS-SatElement ::= SEQUENCE {
    svID          SV-ID,
    signalsAvailable GNSSSignal-IDs,
    channelNumber INTEGER (-7..13) OPTIONAL, -- Cond FDMA
    ...
}

-- ASN1STOP
    
```

Conditional presence	Explanation
FDMA	The field is mandatory present if the GLONASS SV indicated by <i>svID</i> broadcasts FDMA signals; otherwise it is not present.

<i>GNSS-AuxiliaryInformation</i> field descriptions
<i>gnss-ID-GPS</i> This choice may only be present if <i>GNSS-ID</i> indicates GPS.
<i>gnss-ID-GLONASS</i> This choice may only be present if <i>GNSS-ID</i> indicates GLONASS.
<i>svID</i> This field specifies the GNSS SV for which the <i>GNSSAuxiliaryInformation</i> is given.
<i>signalsAvailable</i> This field indicates the ranging signals supported by the satellite indicated by <i>svID</i> . This field is given as a bit string as defined in <i>GNSSSignal-IDs</i> for a particular GNSS. If a bit is set to '1' it indicates that the satellite identified by <i>svID</i> transmits ranging signals according to the signal correspondence in <i>GNSSSignal-IDs</i> . If a bit is set to '0' it indicates that the corresponding signal is not supported on the satellite identified by <i>svID</i> .
<i>channelNumber</i> This field indicates the GLONASS carrier frequency number of the satellite identified by <i>svID</i> , as defined in [6].

6.5.2.3 GNSS Assistance Data Request

– *A-GNSS-RequestAssistanceData*

The IE *A-GNSS-RequestAssistanceData* is used by the target device to request GNSS assistance data from a location server.

```
-- ASN1START
A-GNSS-RequestAssistanceData ::= SEQUENCE {
    gnss-CommonAssistDataReq      GNSS-CommonAssistDataReq      OPTIONAL, -- Cond CommonADReq
    gnss-GenericAssistDataReq     GNSS-GenericAssistDataReq     OPTIONAL, -- Cond GenADReq
    ...
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>CommonADReq</i>	The field is mandatory present if the target device requests <i>GNSSCommonAssistData</i> ; otherwise it is not present.
<i>GenADReq</i>	This field is mandatory present if the target device requests <i>GNSSGenericAssistData</i> for one or more specific GNSS; otherwise it is not present.

– *GNSS-CommonAssistDataReq*

The IE *GNSS-CommonAssistDataReq* is used by the target device to request GNSS Common Assistance Data from a location server.

```
-- ASN1START
GNSS-CommonAssistDataReq ::= SEQUENCE {
    gnss-ReferenceTimeReq         GNSS-ReferenceTimeReq         OPTIONAL, -- Cond RefTimeReq
    gnssReferenceLocationReq     GNSS-ReferenceLocationReq     OPTIONAL, -- Cond RefLocReq
    gnssIonosphericModelReq      GNSS-IonosphericModelReq      OPTIONAL, -- Cond IonoModReq
    gnssEarthOrientationParametersReq GNSS-EarthOrientationParametersReq OPTIONAL, -- Cond EOPReq
    ...
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>RefTimeReq</i>	The field is mandatory present if the target device requests <i>GNSSReferenceTime</i> ; otherwise it is not present.
<i>RefLocReq</i>	This field is mandatory present if the target device requests <i>GNSSReferenceLocation</i> ; otherwise it is not present.
<i>IonoModReq</i>	This field is mandatory present if the target device requests <i>GNSSIonosphericModel</i> ; otherwise it is not present.
<i>EOPReq</i>	This field is mandatory present if the target device requests <i>GNSSEarthOrientationParameters</i> ; otherwise it is not present.

– GNSS-GenericAssistDataReq

The IE *GNSS-GenericAssistDataReq* is used by the target device to request assistance data from a location server for one or more specific GNSSs (e.g., GPS, Galileo, GLONASS, etc.). The specific GNSS for which the assistance data are requested is indicated by the IE *GNSS-ID* and (if applicable) by the IE *SBAS-ID*. Assistance for up to 16 GNSSs can be requested.

```
-- ASN1START
GNSS-GenericAssistDataReq ::= SEQUENCE (SIZE (1..16)) OF GNSSGenericAssistDataReqElement
GNSS-GenericAssistDataReqElement ::= SEQUENCE {
  gnss-ID                GNSS-ID,
  sbas-ID                SBAS-ID                                OPTIONAL, -- Cond GNSS-ID-SBAS
  gnss-TimeModelsReq    GNSS-TimeModelListReq                OPTIONAL, -- Cond TimeModReq
  gnss-DifferentialCorrectionsReq GNSS-DifferentialCorrectionsReq    OPTIONAL, -- Cond DGNSSReq
  gnss-NavigationModelReq GNSS-NavigationModelReq            OPTIONAL, -- Cond NavModReq
  gnss-RealTimeIntegrityReq GNSS-RealTimeIntegrityReq        OPTIONAL, -- Cond RTIReq
  gnss-DataBitAssistanceReq GNSS-DataBitAssistanceReq        OPTIONAL, -- Cond DataBitsReq
  gnss-AcquisitionAssistanceReq GNSS-AcquisitionAssistanceReq    OPTIONAL, -- Cond AcquAssistReq
  gnss-AlmanacReq       GNSS-AlmanacReq                      OPTIONAL, -- Cond AlmanacReq
  gnss-UTCModelReq      GNSS-UTC-ModelReq                    OPTIONAL, -- Cond UTCModReq
  gnss-AuxiliaryInformationReq GNSS-AuxiliaryInformationReq    OPTIONAL, -- Cond AuxInfoReq
  ...
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>GNSS-ID-SBAS</i>	The field is mandatory present if the <i>GNSS-ID</i> = <i>sbas</i> ; otherwise it is not present.
<i>TimeModReq</i>	The field is mandatory present if the target device requests <i>GNSSTimeModelList</i> ; otherwise it is not present.
<i>DGNSSReq</i>	The field is mandatory present if the target device requests <i>GNSSDifferentialCorrections</i> ; otherwise it is not present.
<i>NavModReq</i>	The field is mandatory present if the target device requests <i>GNSSNavigationModel</i> ; otherwise it is not present.
<i>RTIReq</i>	The field is mandatory present if the target device requests <i>GNSSRealTimeIntegrity</i> ; otherwise it is not present.
<i>DataBitsReq</i>	The field is mandatory present if the target device requests <i>GNSSDataBitAssistance</i> ; otherwise it is not present.
<i>AcquAssistReq</i>	The field is mandatory present if the target device requests <i>GNSSAcquisitionAssistance</i> ; otherwise it is not present.
<i>AlmanacReq</i>	The field is mandatory present if the target device requests <i>GNSSAlmanac</i> ; otherwise it is not present.
<i>UTCModReq</i>	The field is mandatory present if the target device requests <i>GNSSUTCModel</i> ; otherwise it is not present.
<i>AuxInfoReq</i>	The field is mandatory present if the target device requests <i>GNSSAuxiliaryInformation</i> ; otherwise it is not present.

6.5.2.4 GNSS Assistance Data Request Elements

– GNSS-ReferenceTimeReq

The IE *GNSSReferenceTimeReq* is used by the target device to request the *GNSSReferenceTime* assistance from the location server.

```
-- ASN1START
GNSS-ReferenceTimeReq ::= SEQUENCE {
    gnss-TimeReqPrefList    SEQUENCE (SIZE (1..8)) OF GNSS-ID,
    gps-TOW-assistReq      BOOLEAN                OPTIONAL, -- Cond gps
    notOfLeapSecReq        BOOLEAN                OPTIONAL, -- Cond glonass
    ...
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>gps</i>	The field is mandatory present if <i>gnssTimeReqPrefList</i> includes a <i>GNSS-ID</i> = 'gps'; otherwise it is not present.
<i>glonass</i>	The field is mandatory present if <i>gnssTimeReqPrefList</i> includes a <i>GNSS-ID</i> = 'glonass'; otherwise it is not present.

GNSS-ReferenceTimeReq field descriptions

<p><i>gnss-TimeReqPrefList</i> This field is used by the target device to specify the GNSS specific system time requested in the order of preference. The first <i>GNSS-ID</i> in the list is the most preferred GNSS for reference time, the second <i>GNSS-ID</i> is the second most preferred, etc.</p>
<p><i>gps-TOW-assistReq</i> This field is used by the target device to request the <i>gpsTowAssist</i> field in <i>GNSSSystemTime</i>. TRUE means requested.</p>
<p><i>notOfLeapSecReq</i> This field is used by the target device to request the <i>notificationOfLeapSecond</i> field in <i>GNSSSystemTime</i>. TRUE means requested.</p>

– GNSS-ReferenceLocationReq

The IE *GNSSReferenceLocationReq* is used by the target device to request the *GNSSReferenceLocation* assistance from the location server.

```
-- ASN1START
GNSS-ReferenceLocationReq ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

– GNSS-IonosphericModelReq

The IE *GNSSIonosphericModelReq* is used by the target device to request the *GNSSIonosphericModel* assistance from the location server.

```
-- ASN1START
GNSS-IonosphericModelReq ::= SEQUENCE {
    klobucharModelReq      BIT STRING (SIZE(2))    OPTIONAL, -- Cond klobuchar
    neQuickModelReq        NULL                    OPTIONAL, -- Cond nequick
    ...
}
-- ASN1STOP
```

Conditional presence	Explanation
<i>klobuchar</i>	The field is mandatory present if the target device requests <i>klobucharModel</i> ; otherwise it is not present. The BIT STRING defines the dataID requested, defined in IE <i>KlobucharModelParameter</i> .
<i>nequick</i>	The field is mandatory present if the target device requests <i>neQuickModel</i> ; otherwise it is not present.

– *GNSS-EarthOrientationParametersReq*

The IE *GNSSEarthOrientationParametersReq* is used by the target device to request the *GNSSEarthOrientationParameters* assistance from the location server.

```
-- ASN1START
GNSS-EarthOrientationParametersReq ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

– *GNSS-TimeModelListReq*

The IE *GNSSTimeModelListReq* is used by the target device to request the *GNSSTimeModelElement* assistance from the location server.

```
-- ASN1START
GNSS-TimeModelListReq ::= SEQUENCE (SIZE(1..15)) OF GNSS-TimeModelElementReq
GNSS-TimeModelElementReq ::= SEQUENCE {
    gnss-TOID-sreq INTEGER (1..15),
    deltaTreq     BOOLEAN,
    ...
}
-- ASN1STOP
```

GNSS-TimeModelElementReq field descriptions

gnss-TOID-sreq

This field specifies the requested *gnssTOID*. The meaning and encoding is the same as the *gnssTOID* field in the *GNSSTimeModelElement* IE.

deltaTreq

This field specifies whether or not the location server is requested to include the *deltaT* field in the *GNSSTimeModelElement* IE. TRUE means requested.

– *GNSS-DifferentialCorrectionsReq*

The IE *GNSSDifferentialCorrectionsReq* is used by the target device to request the *GNSSDifferentialCorrections* assistance from the location server.

```
-- ASN1START
GNSS-DifferentialCorrectionsReq ::= SEQUENCE {
    dgnss-SignalsReq      GNSSSignal-IDs,
    dgnss-ValidityTimeReq BOOLEAN,
    ...
}
-- ASN1STOP
```

GNSS-DifferentialCorrectionsReq field descriptions

GNSS-DifferentialCorrectionsReq field descriptions**dgNSS-SignalsReq**

This field specifies the GNSS Signal(s) for which the *GNSSDifferentialCorrections* are requested. A one-value at a bit position means DGNSS corrections for the specific signal are requested; a zero-value means not requested. The target device shall set a maximum of three bits to value 'one'.

dgNSS-ValidityTimeReq

This field specifies whether the *udreGrowthRate* and *udreValidityTime* in *GNSSDifferentialCorrections* are requested or not. TRUE means requested.

GNSS-NavigationModelReq

The IE *GNSS-NavigationModelReq* is used by the target device to request the *GNSS-NavigationModel* assistance from the location server.

```
-- ASN1START

GNSS-NavigationModelReq ::= CHOICE {
    storedNavList      StoredNavListInfo,
    reqNavList         ReqNavListInfo,
    ...
}

StoredNavListInfo ::= SEQUENCE {
    gnss-WeekOrDay      INTEGER (0..4095),
    gnss-Toe            INTEGER (0..255),
    t-toeLimit          INTEGER (0..15),
    satListRelatedDataList  SatListRelatedDataList OPTIONAL,
    ...
}

SatListRelatedDataList ::= SEQUENCE (SIZE (1..64)) OF SatListRelatedDataElement

SatListRelatedDataElement ::= SEQUENCE {
    svID                SV-ID
    iod                 BIT STRING (SIZE(11)),
    clockModelID        INTEGER (1..8) OPTIONAL,
    orbitModelID        INTEGER (1..8) OPTIONAL,
    ...
}

ReqNavListInfo ::= SEQUENCE {
    svReqList           BIT STRING (SIZE (64)),
    clockModelIDPrefList SEQUENCE (SIZE (1..8)) OF INTEGER (1..8) OPTIONAL,
    orbitModelIDPrefList SEQUENCE (SIZE (1..8)) OF INTEGER (1..8) OPTIONAL,
    addNavparamReq      BOOLEAN OPTIONAL, -- Cond orbitModelID-2
    ...
},

-- ASN1STOP
```

Conditional presence	Explanation
<i>orbitModelID-2</i>	The field is mandatory present if <i>orbitModelIDPrefList</i> is absent or includes a Model-ID = '2'; otherwise it is not present.

GNSS-NavigationModelReq field descriptions**storedNavList**

This list provides information to the location server about which *GNSSNavigationModel* data the target device has currently stored for the particular GNSS indicated by *GNSS-ID*.

reqNavList

This list provides information to the location server which *GNSSNavigationModel* data are requested by the target device.

gnss-WeekOrDay

If *GNSS-ID* does not indicate 'glonass', this field defines the GNSS Week number of the assistance currently held by the target device.

If *GNSS-ID* is set to 'glonass', this field defines the calendar number of day within the four-year interval starting from 1st of January in a leap year, as defined by the parameter N_T in [6] of the assistance currently held by the target device.

GNSS-NavigationModelReq field descriptions			
gnss-Toe If <i>GNSS-ID</i> does not indicate 'glonass', this field defines the GNSS time of ephemeris in hours of the latest ephemeris set contained by the target device. If <i>GNSS-ID</i> is set to 'glonass', this field defines the time of ephemeris in units of 15 minutes of the latest ephemeris set contained by the target device (range 0 to 95 representing time values between 0 and 1425 minutes). In this case, values 96 to 255 shall not be used by the sender.			
t-toeLimit If <i>GNSS-ID</i> does not indicate 'glonass', this IE defines the ephemeris age tolerance of the target device to E-UTRAN in units of hours. If <i>GNSS-ID</i> is set to 'glonass', this IE defines the ephemeris age tolerance of the target device to E-UTRAN in units of 30 minutes.			
satListRelatedDataList This list defines the clock and orbit models currently held by the target device for each SV.			
svID This field identifies the particular GNSS satellite.			
iod This field identifies the issue of data currently held by the target device.			
clockModelID, orbitModelID These fields define the clock and orbit model number currently held by the target device. If these fields are absent, the following default interpretation applies:			
	GNSS-ID	clockModelID	orbitModelID
	gps	Model-2	Model-2
	sbas	Model-5	Model-5
	qzss	Model-2	Model-2
	galileo	Model-1	Model-1
	glonass	Model-4	Model-4
svReqList This field defines the SV for which the navigation model assistance is requested. Each bit position in this BIT STRING represents a <i>SV-ID</i> . Bit 1 represents <i>SV-ID</i> =1 and bit 64 represents <i>SV-ID</i> =64. A one-value at a bit position means the navigation model data for the corresponding <i>SV-ID</i> is requested, a zero-value means not requested.			
clockModelIDPrefList, orbitModelIDPrefList These fields define the Model-IDs for the clock and orbit models the target device wishes to obtain in the order of preference. The first Model-ID in the list is the most preferred model, the second Model-ID the second most preferred, etc. If these fields are absent, the following default interpretation applies:			
	GNSS-ID	clockModelIDPrefList	orbitModelIDPrefList
	gps	Model-2	Model-2
	sbas	Model-5	Model-5
	qzss	Model-2	Model-2
	galileo	Model-1	Model-1
	glonass	Model-4	Model-4
addNavparamReq This field specifies whether the location server is requested to include the <i>addNAVparam</i> fields in <i>GNSSNavigationModel</i> IE (<i>NavModel-NAVKeplerianSet</i> field) or not. TRUE means requested.			

– GNSS-RealTimeIntegrityReq

The IE *GNSSRealTimeIntegrityReq* is used by the target device to request the *GNSSRealTimeIntegrity* assistance from the location server.

```
-- ASN1START
GNSSRealTimeIntegrityReq ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

– GNSS-DataBitAssistanceReq

The IE *GNSSDataBitAssistanceReq* is used by the target device to request the *GNSSDataBitAssistance* assistance from the location server.

```
-- ASN1START
```

```

GNSS-DataBitAssistanceReq ::= SEQUENCE {
    gnss-TOD-Req      INTEGER (0..3599),
    gnss-TOD-FracReq  INTEGER (0..999)      OPTIONAL,
    dataBitInterval   INTEGER (0..15),
    gnss-SignalType   GNSS-SignalIDs,
    gnss-DataBitsReq  GNSS-DataBitsReqSatList OPTIONAL,
    ...
}

GNSS-DataBitsReqSatList ::= SEQUENCE (SIZE(1..64)) OF GNSS-DataBitsReqSatElement

GNSS-DataBitsReqSatElement ::= SEQUENCE {
    svID              SV-ID,
    ...
}

-- ASN1STOP

```

GNSSDataBitAssistanceReq field descriptions

<p>gnss-TOD-Req This field specifies the reference time for the first data bit requested in GNSS specific system time, modulo 1 hour. Scale factor 1 second.</p>
<p>gnssTOD-FracReq This field specifies the fractional part of <i>gnssTODReq</i> in 1-milli-second resolution. Scale factor 1 millisecond.</p>
<p>dataBitInterval This field specifies the time length for which the Data Bit Assistance is requested. The <i>GNSSDataBitAssistance</i> shall be relative to the time interval (<i>gnssTODReq</i>, <i>gnssTODReq</i> + <i>dataBitInterval</i>). The <i>dataBitInterval</i> <i>r</i>, expressed in seconds, is mapped to a binary number K with the following formula: $r = 0.1 \times 2^K$ Value K=15 means that the time interval is not specified.</p>
<p>gnss-SignalType This field specifies the GNSS Signal(s) for which the <i>GNSSDataBitAssistance</i> are requested. A one-value at a bit position means <i>GNSSDataBitAssistance</i> for the specific signal is requested; a zero-value means not requested.</p>
<p>gnss-DataBitsReq This list contains the SV-IDs for which the <i>GNSSDataBitAssistance</i> is requested.</p>

– GNSS-AcquisitionAssistanceReq

The IE *GNSS-AcquisitionAssistanceReq* is used by the target device to request the *GNSSAcquisitionAssistance* assistance from the location server.

```

-- ASN1START

GNSS-AcquisitionAssistanceReq ::= SEQUENCE {
    gnss-SignalID-Req  GNSS-SignalID,
    ...
}

-- ASN1STOP

```

GNSSAcquisitionAssistanceReq field descriptions

<p>gnss-SignalID-Req This field specifies the GNSS signal type for which <i>GNSSAcquisitionAssistance</i> is requested.</p>
--

– GNSS-AlmanacReq

The IE *GNSS-AlmanacReq* is used by the target device to request the *GNSSAlmanac* assistance from the location server.

```

-- ASN1START

GNSS-AlmanacReq ::= SEQUENCE {
    modelID           INTEGER (1..8)  OPTIONAL,
    ...
}

-- ASN1STOP

```

GNSS-AlmanacReq field descriptions**modelID**

This field specifies the Almanac Model ID requested. If this field is absent, the following default interpretation applies:

GNSS-ID	modelID
gps	Model-2
sbas	Model-6
qzss	Model-2
galileo	Model-1
glonass	Model-5

– **GNSS-UTC-ModelReq**

The IE *GNSS-UTC-ModelReq* is used by the target device to request the *GNSSUTCModel* assistance from the location server.

```
-- ASN1START
GNSS-UTC-ModelReq ::= SEQUENCE {
    modelID          INTEGER (1..8)    OPTIONAL,
    ...
}
-- ASN1STOP
```

GNSS-UTC-ModelReq field descriptions**modelID**

This field specifies the *GNSSUTCModel* set requested. If this field is absent, the following default interpretation applies:

GNSS-ID	modelID
gps	Model-1
sbas	Model-4
qzss	Model-1
galileo	Model-1
glonass	Model-3

– **GNSS-AuxiliaryInformationReq**

The IE *GNSS-AuxiliaryInformationReq* is used by the target device to request the *GNSSAuxiliaryInformation* assistance from the location server.

```
-- ASN1START
GNSSAuxiliaryInformationReq ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

6.5.2.5 GNSS Location Information

– **A-GNSS-ProvideLocationInformation**

The IE *A-GNSS-ProvideLocationInformation* is used by the target device to provide location measurements (e.g., pseudo-ranges, location estimate, velocity) to the location server, together with time information.

```
-- ASN1START
A-GNSS-ProvideLocationInformation ::= SEQUENCE {
    gnss-SignalMeasurementInformation    GNSS-SignalMeasurementInformation    OPTIONAL,
    gnss-LocationInformation              GNSS-LocationInformation              OPTIONAL,
    ...
}
```



```
}
-- ASN1STOP
```

6.5.2.6 GNSS Location Information Elements

– *GNSS-SignalMeasurementInformation*

The IE *GNSS-SignalMeasurementInformation* is used by the target device to provide GNSS signal measurement information to the location server and GNSS-network time association if requested by the location server. This information includes the measurements of code phase, Doppler, C/N_0 and optionally accumulated carrier phase, also called accumulated deltarange (ADR), which enable the UE-assisted GNSS method where position is computed in the location server. Figure 6.5.2.6-1 illustrates the relation between some of the fields.

```
-- ASN1START
GNSS-SignalMeasurementInformation ::= SEQUENCE {
  measurementReferenceTime      MeasurementReferenceTime,
  gnss-MeasurementList          GNSS-MeasurementList,
  ...
}
-- ASN1STOP
```

GNSS-SignalMeasurementInformation field descriptions

measurementReferenceTime

This field specifies the GNSS system time for which the information provided in *gnssMeasurementList* is valid. It may also include network time, if requested by the location server and supported by the target device.

gnss-MeasurementList

This field provides GNSS signal measurement information for up to 16 GNSSs.

– *MeasurementReferenceTime*

The IE *MeasurementReferenceTime* is used to specify the time when the measurements provided in *A-GNSS-Provide-Location-Information* are valid. It may also include GNSS-network time association.

```
-- ASN1START
MeasurementReferenceTime ::= SEQUENCE {
  gnss-TOD-msec      INTEGER (0..3599999),
  gnss-TOD-frac      INTEGER (0..3999)          OPTIONAL,
  gnss-TOD-unc       INTEGER (0..127)          OPTIONAL,
  gnss-TimeID        GNSS-ID,
  networkTime        CHOICE {
    eUTRA      SEQUENCE {
      physCellId      INTEGER (0..503),
      cellGlobalId    CellGlobalIdEUTRAandUTRA          OPTIONAL,
      systemFrameNumber BIT STRING (SIZE (10)),
      ...
    },
    uTRA        SEQUENCE {
      mode            CHOICE {
        fdd           SEQUENCE {
          primary-CPICH-Info INTEGER (0..511),
          ...
        },
        tdd           SEQUENCE {
          cellParameters    INTEGER (0..127),
          ...
        },
      },
      cellGlobalId      CellGlobalIdEUTRAandUTRA          OPTIONAL,
      referencesfn      INTEGER (0..4095),
      ...
    },
    gSM              SEQUENCE {
      bcchCarrier      INTEGER (0..1023),
      bsic              INTEGER (0..63),
    }
  }
}
-- ASN1STOP
```

```

cellGlobalId      CellGlobalIdGERAN      OPTIONAL,
referenceFrame    SEQUENCE {
referenceFN        INTEGER (0..65535),
referenceFNMSB     INTEGER (0..63)      OPTIONAL,
...
},
deltaGNSS TOD     INTEGER (0 .. 127)    OPTIONAL,
...
},
...
}
OPTIONAL,
...
}
-- ASN1STOP
    
```

MeasurementReferenceTime field descriptions																	
gnss-TOD-msec	<p>This field specifies the GNSS TOD for which the measurements are valid. The 22 bits of GNSS TOD are the least significant bits. The most significant bits shall be derived by the location server to unambiguously derive the GNSS TOD.</p> <p>The value for GNSS TOD is derived from the GNSS specific system time indicated in <i>gnss-TimeID</i> rounded down to the nearest millisecond unit.</p> <p>Scale factor 1 millisecond.</p>																
gnss-TOD-frac	<p>This field specifies the fractional part of the GNSS TOD in 250 ns resolution. The total GNSS TOD is given by <i>gnss-TOD-msec</i> + <i>gnss-TOD-frac</i>.</p> <p>Scale factor 250 nanoseconds.</p>																
gnss-TOD-unc	<p>This field provides the accuracy of the relation GNSS-network time when GNSS-network time association is provided. When GNSS-network time association is not provided, this element can be included to provide the accuracy of the reported <i>gnss-TOD-msec</i>.</p> <p>If GNSS TOD is the given GNSS time, then the true GNSS time, corresponding to the provided network time if applicable, as observed at the target device location, lies in the interval [GNSS TOD – <i>gnss-TOD-unc</i>, GNSS TOD + <i>gnss-TOD-unc</i>].</p> <p>The uncertainty <i>r</i>, expressed in microseconds, is mapped to a number K, with the following formula:</p> $r = C * (((1+x)^K) - 1)$ <p>with C = 0.5 and x = 0.14. To encode any higher value of uncertainty than that corresponding in the above formula to K=127, the same value, K=127, shall also be used. The uncertainty is then coded on 7 bits, as the binary encoding of K. Examples of <i>gnssTODunc</i> value are as follows:</p> <table border="1"> <thead> <tr> <th>Value of K</th> <th>Value of uncertainty</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0 nanoseconds</td> </tr> <tr> <td>1</td> <td>70 nanoseconds</td> </tr> <tr> <td>2</td> <td>149.8 nanoseconds</td> </tr> <tr> <td>-</td> <td>-</td> </tr> <tr> <td>50</td> <td>349.62 microseconds</td> </tr> <tr> <td>-</td> <td>-</td> </tr> <tr> <td>127</td> <td>≥ 8.43 seconds</td> </tr> </tbody> </table> <p>This field shall be included if the target device provides GNSS-network time relationship.</p>	Value of K	Value of uncertainty	0	0 nanoseconds	1	70 nanoseconds	2	149.8 nanoseconds	-	-	50	349.62 microseconds	-	-	127	≥ 8.43 seconds
Value of K	Value of uncertainty																
0	0 nanoseconds																
1	70 nanoseconds																
2	149.8 nanoseconds																
-	-																
50	349.62 microseconds																
-	-																
127	≥ 8.43 seconds																
gnss-TimeID	<p>This field specifies the GNSS system time for which the <i>gnss-TOD-msec</i> (and <i>gnss-TOD-frac</i> if applicable) is provided.</p>																
networkTime	<p>These fields specify the network time event which the GNSS TOD time stamps.</p> <p>This field shall be included if the target device provides GNSS-network time relationship.</p>																
physCellId	<p>This field identifies the reference cell for the GNSS-network time relation, as defined in [9].</p>																
cellGlobalId	<p>This field specifies the Evolved Cell Global Identifier (ECGI), the globally unique identity of a cell in E-UTRA, of the reference cell for the GNSS-network time relation, as defined in [9].</p>																
systemFrameNumber	<p>This field specifies the system frame number which the GNSS time time stamps, as defined in [9].</p>																
mode	<p>This field identifies the reference cell for the GNSS-network time relation, as defined in [10].</p>																
cellGlobalId	<p>The field specifies the global UTRAN Cell Identifier, the globally unique identity of a cell in UTRA, of the reference cell for the GNSS-network time relation, as defined in [10].</p>																

MeasurementReferenceTime field descriptions
<p>referenceSfn This field specifies the system frame number which the GNSS time time stamps, as defined in [10].</p>
<p>bcchCarrier, bscic This field identifies the reference cell for the GNSS-network time relation, as defined in [11].</p>
<p>cellGlobalId This field specifies the Cell Global Identification (CGI), the globally unique identity of a cell in GERAN, of the reference base station for the GNSS-network time relation.</p>
<p>referenceFN, referenceFNMSB These fields specify the frame number which the GNSS time time stamps, as defined in [11]. The time of the reference frame boundary is as observed by the target device, i.e. without Timing Advance compensation. The <i>referenceFNMSB</i> field indicates the most significant bits of the frame number of the reference BTS corresponding to the <i>GNSSMeasurementList</i>. Starting from the complete GSM frame number denoted FN, the target device calculates Reference FN MSB as</p> $\text{Reference FN MSB} = \text{floor}(\text{FN}/42432)$ <p>The complete GSM frame number FN can then be reconstructed in the location server by combining the fields <i>referenceFN</i> with <i>referenceFNMSB</i> in the following way</p> $\text{FN} = \text{referenceFNMSB} * 42432 + \text{referenceFN}$
<p>deltaGNSS TOD This field specifies the difference in milliseconds between <i>gnssTODmsec</i> reported and the milli-second part of the SV time <i>tsv_1</i> of the first SV in the list reported from the target device, as defined in [11]. The <i>deltaGNSS TOD</i> is defined as</p> $\text{deltaGNSS TOD} = \text{gnssTODmsec} - \text{fix}(\text{tsv}_1)$ <p>where <i>fix()</i> denotes rounding to the nearest integer towards zero.</p>

– GNSS-MeasurementList

The IE *GNSS-MeasurementList* is used by the target device to provide measurements of code phase, Doppler, C/N_0 and optionally accumulated carrier phase, also called accumulated deltarange (ADR).

```
-- ASN1START
GNSS-MeasurementList ::= SEQUENCE (SIZE(1..16)) OF GNSS-MeasurementForOneGNSS

GNSS-MeasurementForOneGNSS ::= SEQUENCE {
    gnss-ID                GNSS-ID,
    gnss-SgnMeasList       GNSS-SgnMeasList,
    ...
}

GNSS-SgnMeasList ::= SEQUENCE (SIZE(1..8)) OF GNSS-SgnMeasElement

GNSS-SgnMeasElement ::= SEQUENCE {
    gnss-SignalID          GNSS-Signal-ID,
    gnss-CodePhaseAmbiguity INTEGER (0..127)          OPTIONAL,
    gnss-SatMeasList       GNSS-SatMeasList,
    ...
}

GNSS-SatMeasList ::= SEQUENCE (SIZE(1..64)) OF GNSS-SatMeasElement

GNSS-SatMeasElement ::= SEQUENCE {
    svID                   SV-ID,
    cNo                     INTEGER (0..63),
    mpathDet                ENUMERATED { notMeasured (0), low (1), medium (2), high (3), ... },
    carrierQualityInd       INTEGER (0..3)             OPTIONAL,
    codePhase                INTEGER (0..2097151),
    integerCodePhase        INTEGER (0..127)           OPTIONAL,
    codePhaseRMSError       INTEGER (0..63),
    doppler                  INTEGER (-32768..32767)   OPTIONAL,
    adr                      INTEGER (0..33554431)     OPTIONAL,
    ...
}
-- ASN1STOP
```

GNSS-MeasurementList field descriptions
<p>gnss-ID This field identifies the GNSS constellation on which the <i>GNSSMeasurementList</i> were measured. Measurement information for up to 16 GNSSs can be included.</p>

GNSS-MeasurementList field descriptions				
gnss-SgnMeasList This list provides GNSS signal measurement information for up to 8 GNSS signal types per GNSS.				
gnss-SignalID This field identifies the signal on which GNSS signal measurement parameters were measured.				
gnss-CodePhaseAmbiguity This field provides the ambiguity of the code phase measurement. It is given in units of milli-seconds in the range between between 0 and 127 milli-seconds. The total code phase for a satellite k (Satk) is given modulo this <i>gnssCodePhaseAmbiguity</i> and is reconstructed with: $Code_Phase_Tot(Satk) = codePhase(Satk) + integerCodePhase(Satk) + n \times gnssCodePhaseAmbiguity$, $n = 0, 1, 2, \dots$ If there is no code phase ambiguity, the <i>gnssCodePhaseAmbiguity</i> shall be set to 0. The field is optional. If <i>gnssCodePhaseAmbiguity</i> is absent, the default value is 1 milli-second.				
gnss-SatMeasList This list provides GNSS signal measurement information for up to 64 GNSS satellites.				
sVID This field identifies the satellite on which the GNSS signal measurements were measured.				
cNo This field provides an estimate of the carrier-to-noise ratio of the received signal from the particular satellite. The target device shall set this field to the value of the satellite C/No, as referenced to the antenna connector, in units of 1 dB-Hz, in the range from 0 to 63 dB-Hz. Scale factor 1 dB-Hz.				
mpathDet This field contains the multipath indicator value, defined as follows:				
		Value of <i>mpathDet</i>	Multipath Indication	
		00	Not measured	
		01	Low, MP error < 5m	
		10	Medium, 5m < MP error < 43m	
		11	High, MP error > 43m	
carrierQualityInd This field indicates the quality of a carrier phase measurement. The LSB indicates the data polarity, that is, if the data from a specific satellite is received inverted, this is indicated by setting the LSB value to '1'. In the case the data is not inverted, the LSB is set to '0'. The MSB indicates if accumulation of the carrier phase has been continuous, that is, without cycle slips since the previous measurement report. If the carrier phase accumulation has been continuous, the MSB value is set to '1X'. Otherwise, the MSB is set to '0X'. This field is optional and shall be included only when carrier phase measurements are provided.				
		Bit	Polarity Indication	
		'0'	Data Direct	
		'1'	Data Inverted	
		'0X'	Carrier phase not continuous	
		'1X'	Carrier phase continuous	
		X = do not care		
codePhase This field contains the whole and fractional value of the code-phase measurement made by the target device for the particular satellite signal at the time of measurement in the units of ms. GNSS specific code phase measurements (e.g. chips) are converted into unit of ms by dividing the measurements by the nominal values of the measured signal chipping rate. Scale factor 2^{-21} milli-seconds, in the range from 0 to $(1-2^{-21})$ milli-seconds.				
integerCodePhase This field indicates the integer milli-second part of the code phase that is expressed modulo the <i>gnssCodePhaseAmbiguity</i> . The value of the ambiguity is given in the <i>gnssCodePhaseAmbiguity</i> field. The <i>integerCodePhase</i> is optional. If <i>integerCodePhase</i> is absent, the default value is 0 milli-second. Scale factor 1 milli-second, in the range from 0 to 127 milli-seconds.				
codePhaseRMSError This field contains the pseudorange RMS error value. This parameter is specified according to a floating-point representation as follows:				
Index	Mantissa	Exponent	Floating-Point value, x_i	Pseudorange value, P
0	000	000	0.5	$P < 0.5$
1	001	000	0.5625	$0.5 \leq P < 0.5625$
I	x	y	$0.5 * (1 + x/8) * 2^y$	$x_{i-1} \leq P < x_i$
62	110	111	112	$104 \leq P < 112$
63	111	111	--	$112 \leq P$

GNSS-MeasurementList field descriptions	
doppler	This field contains the Doppler measured by the target device for the particular satellite signal. This information can be used to compute the 3-D velocity of the target device. Doppler measurements are converted into unit of m/s by multiplying the Doppler measurement in Hz by the nominal wavelength of the measured signal. Scale factor 0.04 meter/seconds.
adr	This field contains the ADR measurement measured by the target device for the particular satellite signal. This information can be used to compute the 3-D velocity or high-accuracy position of the target device. ADR measurements are converted into units of meter by multiplying the ADR measurement by the nominal wavelength of the measured signal. Scale factor 2^{-10} meters, in the range from 0 to 32767.5 meters.

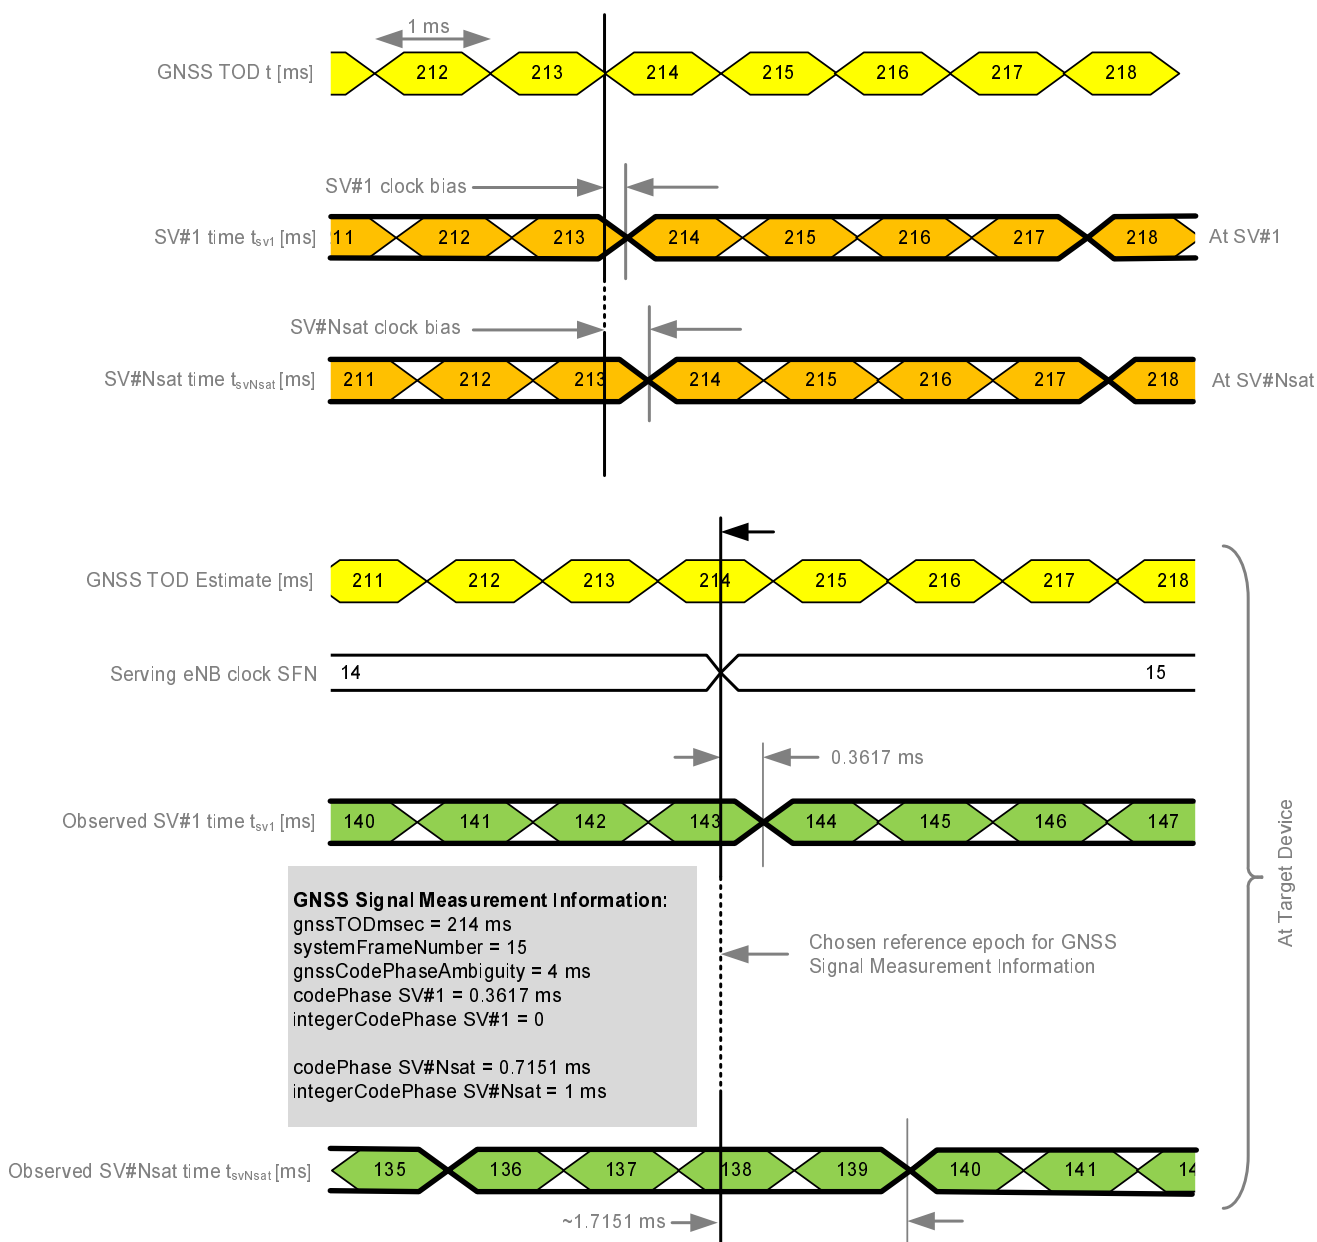


Figure 6.5.2.6-1: Exemplary calculation of some GNSS Signal Measurement Information fields.

– GNSS-LocationInformation

The IE *GNSS-LocationInformation* is used by the target device to provide GNSS location and velocity information to the location server and GNSS-network time association if requested by the location server.

```
-- ASN1START
GNSS-LocationInformation ::= SEQUENCE {
  measurementReferenceTime      MeasurementReferenceTime,
  positionData                  SEQUENCE {
    gnss-Methods                GNSS-IDs,
    ...
  },
  locationEstimate              CHOICE {
    ellipsoidPoint              EllipsoidPoint,
    ellipsoidPointWithUncertaintyCircle
                               EllipsoidPointWithUncertaintyCircle,
    ellipsoidPointWithUncertaintyEllipse
                               EllipsoidPointWithUncertaintyEllipse,
    ellipsoidPointWithAltitude
                               EllipsoidPointWithAltitude,
    ellipsoidPointWithAltitudeAndUncertaintyEllipsoid
                               EllipsoidPointWithAltitudeAndUncertaintyEllipsoid,
    ...
  },
  velocityEstimate              CHOICE {
    horizontalVelocity          HorizontalVelocity,
    horizontalWithVerticalVelocity
                               HorizontalWithVerticalVelocity,
    horizontalVelocityWithUncertainty
                               HorizontalVelocityWithUncertainty,
    horizontalWithVerticalVelocityAndUncertainty
                               HorizontalWithVerticalVelocityAndUncertainty,
    ...
  } OPTIONAL,
  ...
}
-- ASN1STOP
```

GNSS-LocationInformation field descriptions

measurementReferenceTime	This field specifies the GNSS system time for which the information provided in <i>GNSS-LocationInformation</i> is valid. It may also include GNSS-network time relationship, if requested by the location server and supported by the target device.
positionData	This field provides a list of satellite systems used by the target device to calculate the <i>locationEstimate</i> . This is represented by a bit string in <i>GNSS-IDs</i> , with a one-value at the bit position means the particular method has been used; a zero-value means not used.
locationEstimate	This field contains the calculated position estimate in WGS-84 geodetic reference frame.
velocityEstimate	This field contains the calculated velocity estimate.

6.5.2.7 GNSS Location Information Request

– A-GNSS-RequestLocationInformation

The IE *A-GNSS-RequestLocationInformation* is used by the location server to request location information from the target device.

```
-- ASN1START
A-GNSS-RequestLocationInformation ::= SEQUENCE {
  gnss-PositioningInstructions  GNSS-PositioningInstructions,
  ...
}
-- ASN1STOP
```

```
-- ASN1STOP
```

6.5.2.8 GNSS Location Information Request Elements

– *GNSS-PositioningInstructions*

The IE *GNSS-PositioningInstructions* is used to provide GNSS measurement instructions.

```
-- ASN1START
GNSS-PositioningInstructions ::= SEQUENCE {
  gnssMethods          SEQUENCE {
                        preferredMode  PositioningMode,
                        allowedMode    PositioningModes  OPTIONAL,
                        gnss            GNSS-IDs,
                        ...
                        },
  fineTimeAssistanceMeasReq  BOOLEAN,
  adrMeasReq                 BOOLEAN,
  multiFreqMeasReq          BOOLEAN,
  ...
}
-- ASN1STOP
```

***GNSS-PositioningInstructions* field descriptions**

<i>preferredMode</i>	This field indicates whether UE-assisted, UE-based, or standalone mode is requested.
<i>allowedMode</i>	This field indicates whether other mode(s) are allowed, as decided by the target device. For example, requested positioning mode “UE-assisted preferred but UE-based allowed” would be indicated by setting <i>preferredMode</i> to ‘ue-assisted’, and bit 1 in <i>allowedMode</i> to value ‘one’.
<i>gnss</i>	This field indicates the satellite systems allowed by the location server. The target device shall not request assistance data or report measurements for systems that are not indicated in this bit map.
<i>fineTimeAssistanceMeasReq</i>	This field indicates whether the target device is requested to report GNSS-network time association. TRUE means requested.
<i>adrMeasReq</i>	This field indicates whether the target device is requested to include ADR measurements in <i>GNSSMeasurementList</i> IE or not. TRUE means requested.
<i>multiFreqMeasReq</i>	This field indicates whether the target device is requested to report measurements on multiple supported GNSS signal types in <i>GNSSMeasurementList</i> IE or not. TRUE means requested.

6.5.2.9 GNSS Capability Information

– *A-GNSS-ProvideCapabilities*

The IE *A-GNSS-Provide-Capabilities* is used by the target device to provide it’s A-GNSS location capabilities (e.g., GNSSs and assistance data supported) to the location server.

```
-- ASN1START
A-GNSS-ProvideCapabilities ::= SEQUENCE {
  gnss-SupportList      GNSS-SupportList,
  assistanceDataSupportList  AssistanceDataSupportList  OPTIONAL,
  ...
}

GNSS-SupportList ::= SEQUENCE (SIZE(0..16)) OF GNSS-SupportElement

GNSS-SupportElement ::= SEQUENCE {
  gnss-ID              GNSS-ID,
  sbas-IDs             SBAS-IDs  OPTIONAL,  -- Cond GNSS-ID-SBAS
}
```

```

    agnss-Modes      PositioningModes,
    gnss-Signals     GNSSSignal-IDs,
    fta-MeasSupport  SEQUENCE {
                        cellTime     AccessTypes,
                        mode         PositioningModes,
                        ...
                    } OPTIONAL, -- Cond fta
    adr-Support      BOOLEAN,
    velocitySupport  BOOLEAN,
    ...
}

AssistanceDataSupportList ::= SEQUENCE {
    gnss-CommonAssistanceDataSupport  GNSS-CommonAssistanceDataSupport,
    gnss-GenericAssistanceDataSupport  GNSS-GenericAssistanceDataSupport,
    ...
}

-- ASN1STOP

```

Conditional presence	Explanation
<i>GNSS-ID-SBAS</i>	The field is mandatory present if the <i>GNSS-ID = sbas</i> ; otherwise it is not present.
<i>fta</i>	The field is mandatory present if the target device supports the reporting of fine time assistance measurements; otherwise it is not present.

A-GNSS-ProvideCapabilities field descriptions	
<i>gnss-ID</i>	This field specifies the GNSS supported by the target device for which the capabilities in <i>GNSSSupportElement</i> are provided.
<i>sbas-IDs</i>	This field specifies the SBAS(s) supported by the target device. This is represented by a bit string, with a one-value at the bit position means the particular SBAS is supported; a zero-value means not supported.
<i>agnss-Modes</i>	This field specifies the GNSS mode(s) supported by the target device for the GNSS indicated by <i>gnss-ID</i> . This is represented by a bit string, with a one-value at the bit position means the particular GNSS mode is supported; a zero-value means not supported.
<i>gnss-Signals</i>	This field specifies the GNSS signal(s) supported by the target device for the GNSS indicated by <i>gnss-ID</i> . This is represented by a bit string, with a one-value at the bit position means the particular GNSS signal type is supported; a zero-value means not supported.
<i>fta-MeasSupport</i>	This field specifies that the target device is capable of performing fine time assistance measurements (i.e., GNSS-cellular time association reporting). The <i>cellTime</i> field specifies for which cellular network(s) this capability is supported. This is represented by a bit string, with a one-value at the bit position means FTA measurements for the specific cellular network time is supported; a zero-value means not supported. The <i>mode</i> field specifies for which GNSS mode(s) FTA measurements are supported by the target device. This is represented by a bit string, with a one-value at the bit position means FTA measurements for the GNSS mode is supported; a zero-value means not supported.
<i>adr-Support</i>	This field specifies whether the target device supports ADR measurement reporting. TRUE means supported.
<i>velocitySupport</i>	This field specifies whether the target device supports velocity measurement reporting. TRUE means supported.
<i>assistanceDataSupportList</i>	This list defines the assistance data and assistance data choices supported by the target device.

6.5.2.10 GNSS Capability Information Elements

– *GNSS-CommonAssistanceDataSupport*

The IE *GNSS-CommonAssistanceDataSupport* is used by the target device to provide information on supported GNSS common assistance data types to the location server.

```

-- ASN1START
GNSS-CommonAssistanceDataSupport ::= SEQUENCE {

```



```

gnss-ReferenceTimeSupport      GNSS-ReferenceTimeSupport
                                OPTIONAL, -- Cond RefTimeSup
gnss-ReferenceLocationSupport  GNSS-ReferenceLocationSupport
                                OPTIONAL, -- Cond RefLocSup
gnss-IonosphericModelSupport   GNSS-IonosphericModelSupport
                                OPTIONAL, -- Cond IonoModSup
gnss-EarthOrientationParametersSupport  GNSS-EarthOrientationParametersSupport
                                OPTIONAL, -- Cond EOPSup
...
}
-- ASN1STOP
    
```

Conditional presence	Explanation
<i>RefTimeSup</i>	The field is mandatory present if the target device supports <i>GNSSReferenceTime</i> ; otherwise it is not present.
<i>RefLocSup</i>	This field is mandatory present if the target device supports <i>GNSSReferenceLocation</i> ; otherwise it is not present.
<i>IonoModSup</i>	This field is mandatory present if the target device supports <i>GNSSIonosphericModel</i> ; otherwise it is not present.
<i>EOPSup</i>	This field is mandatory present if the target device supports <i>GNSEarthOrientationParameters</i> ; otherwise it is not present.

GNSS-ReferenceTimeSupport information element

```

-- ASN1START
GNSS-ReferenceTimeSupport ::= SEQUENCE {
    gnss-SystemTime  GNSS-IDs,
    fta-Support      AccessTypes          OPTIONAL, -- Cond fta
    ...
}
-- ASN1STOP
    
```

Conditional presence	Explanation
<i>fta</i>	The field is mandatory present if the target device supports fine time assistance in <i>GNSSReferenceTime</i> IE; otherwise it is not present.

GNSSReferenceTimeSupport field descriptions	
gnss-SystemTime	This field specifies the GNSS system time(s) supported by the target device. This is represented by a bit string in <i>GNSS-IDs</i> , with a one-value at the bit position means the particular GNSS system time is supported; a zero-value means not supported.
fta-Support	This field specifies that the target device supports fine time assistance (i.e., GNSS-cellular time association) in <i>GNSSReferenceTime</i> IE. This is represented by a bit string in <i>AccessTypes</i> , with a one-value at the bit position means FTA for the specific cellular network time is supported; a zero-value means not supported.

GNSS-ReferenceLocationSupport information element

```

-- ASN1START
GNSS-ReferenceLocationSupport ::= SEQUENCE {
    ...
}
-- ASN1STOP
    
```

GNSS-IonosphericModelSupport information element

```

-- ASN1START
    
```

```

GNSS-IonosphericModelSupport ::= SEQUENCE {
  ionoModel      BIT STRING {
    klobuchar    (0),
    neQuick      (1) } (SIZE (1..8)),
  ...
}
-- ASN1STOP
    
```

GNSS-IonosphericModelSupport field descriptions

ionoModel

This field specifies the ionospheric model(s) supported by the target device. This is represented by a bit string, with a one-value at the bit position means the particular ionospheric model is supported; a zero-value means not supported.

GNSS-EarthOrientationParametersSupport information element

```

-- ASN1START
GNSS-EarthOrientationParametersSupport ::= SEQUENCE {
  ...
}
-- ASN1STOP
    
```

GNSS-GenericAssistanceDataSupport

The IE *GNSSGenericAssistanceDataSupport* is used by the target device to provide information on supported GNSS generic assistance data types to the location server for each supported GNSS.

```

-- ASN1START
GNSS-GenericAssistDataSupport ::= SEQUENCE (SIZE (1..16)) OF GNSSGenericAssistDataSupportElement
GNSS-GenericAssistDataSupportElement ::= SEQUENCE {
  gnss-ID          GNSS-ID,
  sbas-ID          SBAS-ID                OPTIONAL, -- Cond GNSS-ID-SBAS
  gnss-TimeModelsSupport  GNSS-TimeModelListSupport
                                     OPTIONAL, -- Cond TimeModSup
  gnss-DifferentialCorrectionsSupport  GNSS-DifferentialCorrectionsSupport
                                     OPTIONAL, -- Cond DGNSSSup
  gnss-NavModelSupport    GNSS-NavModelSupport
                                     OPTIONAL, -- Cond NavModSup
  gnss-RTIntegritySupport  GNSS-RealTimeIntegritySupport
                                     OPTIONAL, -- Cond RTISup
  gnss-DataBitAssistanceSupport  GNSS-DataBitAssistanceSupport
                                     OPTIONAL, -- Cond DataBitsSup
  gnss-AcquisitionAssistanceSupport  GNSS-AcquisitionAssistanceSupport
                                     OPTIONAL, -- Cond AcquAssistSup
  gnss-AlmanacSupport     GNSS-AlmanacSupport
                                     OPTIONAL, -- Cond AlmanacSup
  gnss-UTC-ModelSupport   GNSS-UTC-ModelSupport
                                     OPTIONAL, -- Cond UTCModSup
  gnss-AuxiliaryInformationSupport  GNSS-AuxiliaryInformationSupport
                                     OPTIONAL, -- Cond AuxInfoSup
  ...
}
-- ASN1STOP
    
```

Conditional presence	Explanation
<i>GNSS-ID-SBAS</i>	The field is mandatory present if the <i>GNSS-ID = sbas</i> ; otherwise it is not present.
<i>TimeModSup</i>	The field is mandatory present if the target device supports <i>GNSSTimeModelList</i> ; otherwise it is not present.
<i>DGNSSSup</i>	The field is mandatory present if the target device supports <i>GNSSDifferentialCorrections</i> ; otherwise it is not present.
<i>NavModSup</i>	The field is mandatory present if the target device supports <i>GNSSNavModel</i> ; otherwise it is not present.

Conditional presence	Explanation
<i>RTISup</i>	The field is mandatory present if the target device supports <i>GNSSRealTimeIntegrity</i> ; otherwise it is not present.
<i>DataBitsSup</i>	The field is mandatory present if the target device supports <i>GNSSDataBitAssistance</i> ; otherwise it is not present.
<i>AcquAssistSup</i>	The field is mandatory present if the target device supports <i>GNSSAcquisitionAssistance</i> ; otherwise it is not present.
<i>AlmanacSup</i>	The field is mandatory present if the target device supports <i>GNSSAlmanac</i> ; otherwise it is not present.
<i>UTCModSup</i>	The field is mandatory present if the target device supports <i>GNSSUTCModel</i> ; otherwise it is not present.
<i>AuxInfoSup</i>	The field is mandatory present if the target device supports <i>GNSSAuxiliaryInformation</i> ; otherwise it is not present.

***GNSSTimeModelListSupport* information element**

```
-- ASN1START
GNSS-TimeModelListSupport ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

***GNSSDifferentialCorrectionsSupport* information element**

```
-- ASN1START
GNSS-DifferentialCorrectionsSupport ::= SEQUENCE {
    gnssSignalIDs      GNSSSignal-IDs,
    ...
}
-- ASN1STOP
```

***GNSSDifferentialCorrectionsSupport* field descriptions**

gnss-SignalIDs

This field specifies the GNSS signal types for which differential corrections are supported by the target device.

***GNSS-NavigationModelSupport* information element**

```
-- ASN1START
GNSS-NavigationModelSupport ::= SEQUENCE {
    clockModel      BIT STRING {
        Model-1      (0),
        Model-2      (1),
        Model-3      (2),
        Model-4      (3),
        Model-5      (4) } (SIZE (1..8))      OPTIONAL,
    orbitModel      BIT STRING {
        Model-1      (0),
        Model-2      (1),
        Model-3      (2),
        Model-4      (3),
        Model-5      (4) } (SIZE (1..8))      OPTIONAL,
    ...
}
-- ASN1STOP
```

***GNSS-NavigationModelSupport* field descriptions**

GNSS-*NavigationModelSupport* field descriptions***clockModel***

This field specifies the *gnssClockModel* choice(s) in *GNSS-NavigationModel* IE supported by the target device for the GNSS indicated by *GNSS-ID*. This is represented by a bit string, with a one-value at the bit position means the particular clock model is supported; a zero-value means not supported.

If the target device supports GPS and *GNSS-NavigationModel* assistance, it shall support *clockModel* Model-2.

If the target device supports SBAS and *GNSS-NavigationModel* assistance, it shall support *clockModel* Model-5.

If the target device supports QZSS and *GNSS-NavigationModel* assistance, it shall support *clockModel* Model-2.

If the target device supports Galileo and *GNSS-NavigationModel* assistance, it shall support *clockModel* Model-1.

If the target device supports GLONASS and *GNSS-NavigationModel* assistance, it shall support *clockModel* Model-4.

If this field is absent, the target device supports the mandatory (native) *clockModel* choice only as listed above for the GNSS indicated by *GNSS-ID*.

orbitModel

This field specifies the *gnssOrbitModel* choice(s) in *GNSS-NavigationModel* IE supported by the target device for the GNSS indicated by *GNSS-ID*. This is represented by a bit string, with a one-value at the bit position means the particular orbit model is supported; a zero-value means not supported.

If the target device supports GPS and *GNSS-NavigationModel* assistance, it shall support *orbitModel* Model-2.

If the target device supports SBAS and *GNSS-NavigationModel* assistance, it shall support *orbitModel* Model-5.

If the target device supports QZSS and *GNSS-NavigationModel* assistance, it shall support *orbitModel* Model-2.

If the target device supports Galileo and *GNSS-NavigationModel* assistance, it shall support *orbitModel* Model-1.

If the target device supports GLONASS and *GNSS-NavigationModel* assistance, it shall support *orbitModel* Model-4.

If this field is absent, the target device supports the mandatory (native) *orbitModel* choice only as listed above for the GNSS indicated by *GNSS-ID*.

GNSS-*RealTimeIntegritySupport* information element

```
-- ASN1START
GNSS-RealTimeIntegritySupport ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

GNSS-*DataBitAssistanceSupport* information element

```
-- ASN1START
GNSS-DataBitAssistanceSupport ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

GNSS-*AcquisitionAssistanceSupport* information element

```
-- ASN1START
GNSS-AcquisitionAssistanceSupport ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

GNSS-*AlmanacSupport* information element

```
-- ASN1START
GNSS-AlmanacSupport ::= SEQUENCE {
    almanacModel BIT STRING {
        Model-1 (0),
        Model-2 (1),
        Model-3 (2),
        Model-4 (3),
    }
}
-- ASN1STOP
```

```

Model-5      (4) ,
Model-6      (5) } (SIZE (1..8))    OPTIONAL,
...
}
-- ASN1STOP

```

GNSS-AlmanacSupport field descriptions

almanacModel

This field specifies the *almanacModel* choice(s) in *GNSS-Almanac* IE supported by the target device for the GNSS indicated by *GNSS-ID*. This is represented by a bit string, with a one-value at the bit position means the particular almanac model is supported; a zero-value means not supported.

If the target device supports GPS and *GNSS-Almanac* assistance, it shall support Model-2.

If the target device supports SBAS and *GNSS-Almanac* assistance, it shall support Model-6.

If the target device supports QZSS and *GNSS-Almanac* assistance, it shall support Model-2.

If the target device supports Galileo and *GNSS-Almanac* assistance, it shall support Model-1.

If the target device supports GLONASS and *GNSS-Almanac* assistance, it shall support Model-5.

If this field is absent, the target device supports the mandatory (native) *almanacModel* choice only as listed above for the GNSS indicated by *GNSS-ID*.

GNSS-UTC-ModelSupport information element

```

-- ASN1START
GNSS-UTC-ModelSupport ::= SEQUENCE {
    utc-Model      BIT STRING {
        Model-1      (0) ,
        Model-2      (1) ,
        Model-3      (2) ,
        Model-4      (3) } (SIZE (1..8))    OPTIONAL,
    ...
}
-- ASN1STOP

```

GNSS-UTC-ModelSupport field descriptions

utc-Model

This field specifies the *GNSSUTCModel* choice(s) in *GNSSUTCModel* IE supported by the target device for the GNSS indicated by *GNSS-ID*. This is represented by a bit string, with a one-value at the bit position means the particular utc model is supported; a zero-value means not supported.

If the target device supports GPS and *GNSS-UTC-Model* assistance, it shall support Model-1.

If the target device supports SBAS and *GNSS-UTC-Model* assistance, it shall support Model-4.

If the target device supports QZSS and *GNSS-UTC-Model* assistance, it shall support Model-1.

If the target device supports Galileo and *GNSS-UTC-Model* assistance, it shall support Model-1.

If the target device supports GLONASS and *GNSS-UTC-Model* assistance, it shall support Model-3.

If this field is absent, the target device supports the mandatory (native) *utcModel* choice only as listed above for the GNSS indicated by *GNSS-ID*.

GNSS-AuxiliaryInformationSupport information element

```

-- ASN1START
GNSS-AuxiliaryInformationSupport ::= SEQUENCE {
    ...
}
-- ASN1STOP

```

6.5.2.11 GNSS Capability Information Request

– *A-GNSS-RequestCapabilities*

The IE *A-GNSS-Request-Capabilities* is used by the location server to request A-GNSS location capabilities (e.g., GNSSs and assistance data supported) from the target device.

```
-- ASN1START
A-GNSS-RequestCapabilities ::= SEQUENCE {
    assistanceDataSupportListReq    BOOLEAN,
    ...
}
-- ASN1STOP
```

***A-GNSS-RequestCapabilities* field descriptions**

assistanceDataSupportListReq

This field specifies whether the target device is requested to include the *assistanceDataSupportList* field in the *A-GNSS-ProvideCapabilities* IE or not. TRUE means requested.

6.5.2.12 GNSS Error Elements

– *A-GNSS-Error*

The IE *A-GNSS-Error* is used by the location server or target device to provide GNSS error reasons.

```
-- ASN1START
A-GNSS-Error ::= CHOICE {
    locationServerErrorCauses    GNSSLocationServerErrorCauses,
    targetDeviceErrorCauses      GNSSTargetDeviceErrorCauses,
    ...
}
-- ASN1STOP
```

– *GNSS-LocationServerErrorCauses*

The IE *GNSS-LocationServerErrorCauses* is used by the location server to provide GNSS error reasons to the target device.

```
-- ASN1START
GNSS-LocationServerErrorCauses ::= SEQUENCE {
    cause    ENUMERATED {
        undefined,
        assistanceDataNotSupportedByServer,
        assistanceDataSupportedButCurrentlyNotAvailableByServer,
        ...
    },
    ...
}
-- ASN1STOP
```

– *GNSS-TargetDeviceErrorCauses*

The IE *GNSS-TargetDeviceErrorCauses* is used by the target device to provide GNSS error reasons to the location server.

```
-- ASN1START
GNSS-TargetDeviceErrorCauses ::= SEQUENCE {
    cause    ENUMERATED {
        undefined,
```

```

        thereWereNotEnoughSatellitesReceived,
        assistanceDataMissing,
        ...
    },
    ...
}
-- ASN1STOP

```

6.5.2.13 Common GNSS Information Elements

– *AccessTypes*

The IE *AccessTypes* is used to indicate several cellular access types using a bit map.

```

-- ASN1START
AccessTypes ::= SEQUENCE {
    accessTypes    BIT STRING {
        eutra      (0),
        utra       (1),
        gsm        (2) } (SIZE (1..8)),
    ...
}
-- ASN1STOP

```

AccessTypes field descriptions

accessTypes

This field specifies the cellular access type(s). This is represented by a bit string, with a one-value at the bit position means the particular access type is addressed; a zero-value means not addressed.

– *CellGlobalIdEUTRA-AndUTRA*

The IE *CellGlobalIdEUTRA-AndUTRA* specifies the global Cell Identifier for E-UTRA or UTRA, the globally unique identity of a cell in E-UTRA or UTRA.

```

-- ASN1START
CellGlobalIdEUTRA-AndUTRA ::= SEQUENCE {
    plmn-identity    SEQUENCE {
        mcc          SEQUENCE (SIZE (3)) OF INTEGER (0..9) OPTIONAL,
        mnc          SEQUENCE (SIZE (2..3)) OF INTEGER (0..9)
    },
    cellIdentity     BIT STRING (SIZE (28)),
    ...
}
-- ASN1STOP

```

CellGlobalIdEUTRA field descriptions

plmn-identity

This field identifies the PLMN of the cell as defined in [9].

cellIdentity

This field defines the identity of the cell within the context of the PLMN as defined in [9].

– *CellGlobalIdGERAN*

The IE *CellGlobalIdGERAN* specifies the global Cell Identifier for GERAN, the globally unique identity of a cell in GERAN.

```

-- ASN1START

```

```

CellGlobalIdGERAN ::= SEQUENCE {
    plmn-Identity      SEQUENCE {
                        mcc      SEQUENCE (SIZE (3))    OF INTEGER (0..9)    OPTIONAL,
                        mnc      SEQUENCE (SIZE (2..3))  OF INTEGER (0..9)
                    },
    locationAreaCode  BIT STRING (SIZE (16)),
    cellIdentity      BIT STRING (SIZE (16)),
    ...
}
-- ASN1STOP

```

CellGlobalIdGERAN field descriptions

plmn-Identity

This field identifies the PLMN of the cell.

locationAreaCode

This field is a fixed length code identifying the location area within a PLMN.

cellIdentity

This field specifies the cell Identifier which is unique within the context of the GERAN location area.

– GNSS-ID

The IE *GNSS-ID* is used to indicate a specific GNSS.

```

-- ASN1START
GNSS-ID ::= SEQUENCE {
    gnss-id      ENUMERATED{ gps, sbas, qzss, galileo, glonass, ... },
    ...
}
-- ASN1STOP

```

– GNSS-IDs

The IE *GNSS-IDs* is used to indicate several GNSSs using a bit map.

```

-- ASN1START
GNSS-IDs ::= SEQUENCE {
    gnss-ids      BIT STRING {
                    gps      (0),
                    sbas     (1),
                    qzss     (2),
                    galileo  (3),
                    glonass  (4) } (SIZE (1..16)),
    ...
}
-- ASN1STOP

```

GNSS-IDs field descriptions

gnss-ids

This field specifies the GNSS(s). This is represented by a bit string, with a one-value at the bit position means the particular GNSS is addressed; a zero-value means not addressed.

– GNSS-SignalID

The IE *GNSSSignal-ID* is used to indicate a specific GNSS signal type. The interpretation of *GNSSSignal-ID* depends on the *GNSS-ID*.

```

-- ASN1START
GNSS-SignalID ::= SEQUENCE {
    gnss-SignalID  INTEGER (0 .. 7),
    ...
}

```



```
}
-- ASN1STOP
```

GNSS-SignalID field descriptions

gnss-SignalID

This field specifies a particular GNSS signal. The interpretation of *gnssSignalID* depends on the *GNSS-ID* and is as follows:

System	Value	Explanation
GPS	0	GPS L1 C/A
	1	GPS L1C
	2	GPS L2C
	3	GPS L5
	4-7	Reserved
SBAS	0	L1
	1-7	Reserved
QZSS	0	QZS-L1
	1	QZS-L1C
	2	QZS-L2C
	3	QZS-L5
	4-7	Reserved
GLONASS	0	GLONASS G1
	1	GLONASS G2
	2	GLONASS G3
	3-7	Reserved
Galileo	0	Galileo E1
	1	Galileo E5A
	2	Galileo E5B
	3	Galileo E6
	4	Galileo E5A + E5B
	5-7	Reserved

GNSS-SignalIDs

The IE *GNSSSignal-IDs* is to indicate several GNSS signals using a bit map. The interpretation of *GNSSSignal-IDs* depends on the *GNSS-ID*.

```
-- ASN1START
GNSS-SignalIDs ::= SEQUENCE {
    gnss-SignalIDs BIT STRING (SIZE(8)),
    ...
}
-- ASN1STOP
```

GNSS-SignalIDs field descriptions

gnss-SignalIDs

This field specifies one or several GNSS signals using a bit map. A one-value at the bit position means the particular signal is addressed; a zero-value at the particular bit position means the signal is not addressed. The interpretation of the bit map in *gnssSignalIDs* depends on the *GNSS-ID* and is as follows:

GNSS	Bit 1 (MSB)	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Bit 8 (LSB)
GPS	L1 C/A	L1C	L2C	L5				
SBAS	L1							
QZSS	QZS-L1	QZS-L1C	QZS-L2C	QZS-L5				
GLONASS	G1	G2	G3					
Galileo	E1	E5a	E5b	E6	E5a+E5b			

Unfilled table entries indicate no assignment and shall be set to zero.

– *PositioningMode*

The IE *PositioningMode* is used to indicate a specific positioning mode.

```
-- ASN1START
PositioningMode ::= SEQUENCE {
    posMode      ENUMERATED { standalone, ue-based, ue-assisted, ... },
    ...
}
-- ASN1STOP
```

PositioningMode field descriptions

posMode

This field specifies the particular positioning mode.

– *PositioningModes*

The IE *PositioningModes* is used to indicate several positioning modes using a bit map.

```
-- ASN1START
PositioningModes ::= SEQUENCE {
    posModes      BIT STRING {      standalone (0),
                                   ue-based   (1),
                                   ue-assisted (2) } (SIZE (1..8)),
    ...
}
-- ASN1STOP
```

PositioningModes field descriptions

posModes

This field specifies the positioning mode(s). This is represented by a bit string, with a one-value at the bit position means the particular positioning mode is addressed; a zero-value means not addressed.

– *SBAS-ID*

The IE *SBAS-ID* is used to indicate a specific SBAS.

```
-- ASN1START
SBAS-ID ::= SEQUENCE {
    sbas-id      ENUMERATED { waas, egnos, msas, gagan, ... },
    ...
}
-- ASN1STOP
```

– *SBAS-IDs*

The IE *SBAS-IDs* is used to indicate several SBASs using a bit map.

```
-- ASN1START
SBAS-IDs ::= SEQUENCE {
    sbas-IDs      BIT STRING {      waas      (0),
                                   egnos     (1),
                                   msas      (2),
                                   gagan     (3) } (SIZE (1..8)),
    ...
}
-- ASN1STOP
```

SBAS-IDs field descriptions
<p>sbasIDs This field specifies one or several SBAS(s) using a bit map. A one-value at the bit position means the particular SBAS is addressed; a zero-value at the particular bit position means the SBAS is not addressed.</p>

– **SV-ID**

The IE *SV-ID* is used to indicate a specific GNSS satellite. The interpretation of *SV-ID* depends on the *GNSS-ID*.

```

-- ASN1START
SV-ID ::= SEQUENCE {
    satellite-id      INTEGER(0..63),
    ...
}
-- ASN1STOP
    
```

SV-ID field descriptions		
<p>satellite-id This field specifies a particular satellite within a specific GNSS. The interpretation of <i>satellite-id</i> depends on the <i>GNSS-ID</i> and is as follows:</p>		
System	Value of <i>satellite-id</i>	Interpretation of <i>satellite-id</i>
GPS	'0' – '62' '63'	Satellite PRN Signal No. 1 to 63 Reserved
SBAS	'0' – '38' '39' – '63'	Satellite PRN Signal No. 120 to 158 Reserved
QZSS	'0' – '4' '5' – '63'	Satellite PRN Signal No. 193 to 197 Reserved
GLONASS	'0' – '23' '24' – '63'	Slot Number 1 to 24 Reserved
Galileo	TBD	TBD

6.5.3 Enhanced Cell ID Positioning

6.5.3.1 E-CID Location Information

– ***ECID-ProvideLocationInformation***

The IE *ECID-ProvideLocationInformation* is used by the target device to provide E-CID location measurements to the location server.

```

-- ASN1START
ECID-ProvideLocationInformation ::= SEQUENCE {
    ecid-SignalMeasurementInformation ECID-SignalMeasurementInformation OPTIONAL,
    ...
}
-- ASN1STOP
    
```

6.5.3.2 E-CID Location Information Elements

– ***ECID-SignalMeasurementInformation***

The IE *ECID-SignalMeasurementInformation* is used by the target device to provide various UE-measurements to the location server.

Editor's Note: It is FFS whether RSRP and RSRQ results should be included as positioning measurements in this IE.

```
-- ASN1START
ECID-SignalMeasurementInformation ::= SEQUENCE {
    measuredResultsList MeasuredResultsList,
    ...
}
MeasuredResultsList ::= SEQUENCE (SIZE(1..32)) OF MeasuredResultsElement
MeasuredResultsElement ::= SEQUENCE {
    plmn-Identity      SEQUENCE {
        mcc            SEQUENCE (SIZE (3))    OF INTEGER (0..9)    OPTIONAL,
        mnc            SEQUENCE (SIZE (2..3))  OF INTEGER (0..9)
    },
    physCellId        INTEGER (0..503),
    cellGlobalId      ECGI                    OPTIONAL,
    arfcnEUTRA        INTEGER (0..65535),
    sfn               BIT STRING (SIZE (10))  OPTIONAL,
    rsrpResult        INTEGER (0..97)         OPTIONAL,
    rsrqResult        INTEGER (0..34)         OPTIONAL,
    ueRxTxTimeDiff    INTEGER (TBD)          OPTIONAL,
    ...
}
-- ASN1STOP
```

***ECID-SignalMeasurementInformation* field descriptions**

<i>plmn-Identity</i>	This field identifies the PLMN.
<i>measuredResultsList</i>	This list contains the E-CID measurements for up to 32 cells.
<i>physCellId</i>	This field specifies the physical cell identity of the measured cell.
<i>cellGlobalId</i>	This field specifies cell global ID of the measured cell.
<i>arfcnEUTRA</i>	This field specifies the ARFCN of the measured E-UTRA carrier frequency, as defined in [16].
<i>rsrpResult</i>	This field specifies the reference signal received power (RSRP) measurement, as defined in [16],[17].
<i>rsrqResult</i>	This field specifies the reference signal received quality (RSRQ) measurement, as defined in [16],[17].
<i>ueRxTxTimeDiff</i>	This field specifies the UE Rx–Tx time difference measurement, as defined in [17]. It is provided only for measurements on the UE's serving cell.

6.5.3.3 E-CID Location Information Request

– ***ECID-RequestLocationInformation***

The IE *ECID-RequestLocationInformation* is used by the location server to request E-CID location measurements from a target device.

```
-- ASN1START
ECID-RequestLocationInformation ::= SEQUENCE {
    requestedMeasurements BIT STRING {
        rsrpReq      (0),
        rsrqReq      (1),
        ueRxTxReq    (2) } (SIZE(1..8)),
    ...
}
-- ASN1STOP
```

***ECIDSignalMeasurementInformation* field descriptions**

ECIDSignalMeasurementInformation* field descriptions**requestedMeasurements***

This field specifies the E-CID measurements requested. This is represented by a bit string, with a one-value at the bit position means the particular measurement is requested; a zero-value means not requested.

6.5.3.4 E-CID Capability Information

– *ECID-ProvideCapabilities*

The IE *ECID-ProvideCapabilities* is used by the target device to provide its E-CID location capabilities to the location server.

```
-- ASN1START
ECID-ProvideCapabilities ::= SEQUENCE {
    ecid-MeasSupported BIT STRING {
        rsrpSup      (0),
        rsrqSup      (1),
        ueRxTxSup    (2) } (SIZE(1..8)),
    ...
}
-- ASN1STOP
```

ECID-Provide-Capabilities* field descriptions**ecid-MeasSupported***

This field specifies the E-CID measurements supported by the target device. This is represented by a bit string, with a one-value at the bit position means the particular measurement is supported; a zero-value means not supported.

6.5.3.5 E-CID Capability Information Request

– *ECID-RequestCapabilities*

The IE *ECID-RequestCapabilities* is used by the location server to request E-CID location capabilities from a target device.

```
-- ASN1START
ECID-RequestCapabilities ::= SEQUENCE {
    ...
}
-- ASN1STOP
```

6.5.3.6 E-CID Error Elements

– *ECID-Error*

The IE *ECID-Error* is used by the location server or target device to provide E-CID error reasons to the target device or location server, respectively.

```
-- ASN1START
ECID-Error ::= CHOICE {
    locationServerErrorCauses ECID-LocationServerErrorCauses,
    targetDeviceErrorCauses  ECID-TargetDeviceErrorCauses,
    ...
}
-- ASN1STOP
```

– *ECID-LocationServerErrorCauses*

The IE *ECID-LocationServerErrorCauses* is used by the location server to provide E-CID error reasons to the target device.

```
-- ASN1START
ECID-LocationServerErrorCauses ::= SEQUENCE {
  cause      ENUMERATED { undefined,
                        ...
  },
  ...
}
-- ASN1STOP
```

– *ECID-TargetDeviceErrorCauses*

The IE *ECIDTargetDeviceErrorCauses* is used by the target device to provide E-CID error reasons to the location server.

```
-- ASN1START
ECID-TargetDeviceErrorCauses ::= SEQUENCE {
  cause      ENUMERATED { undefined,
                        requestedMeasurementNotAvailable,
                        ...
  },
  ...
}
-- ASN1STOP
```

Annex A (informative): Change History

Change history							
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
2009-10	RAN2 #67bis	R2-096252			RAN2 agreed TS 36.355 v0.1.0	-	0.1.0
2009-11	RAN2 #68	R2-097492			RAN2 agreed TS 36.355 v2.0.0	0.1.0	2.0.0
2009-12	RP-46	RP-091208			RAN #46 approval of TS 36.355	2.0.0	9.0.0

History

Document history		
V9.0.0	February 2010	Publication