

ETSI TS 138 455 V17.8.0 (2024-08)



**5G;
NG-RAN;
NR Positioning Protocol A (NRPPa)
(3GPP TS 38.455 version 17.8.0 Release 17)**



Reference

RTS/TSGR-0338455vh80

Keywords

5G

ETSI

650 Route des Lucioles
F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - APE 7112B
Association à but non lucratif enregistrée à la
Sous-Préfecture de Grasse (06) N° w061004871

Important notice

The present document can be downloaded from the
ETSI [Search & Browse Standards](#) application.

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format on [ETSI deliver](#).

Users should be aware that the present document may be revised or have its status changed,
this information is available in the [Milestones listing](#).

If you find errors in the present document, please send your comments to
the relevant service listed under [Committee Support Staff](#).

If you find a security vulnerability in the present document, please report it through our
[Coordinated Vulnerability Disclosure \(CVD\)](#) program.

Notice of disclaimer & limitation of liability

The information provided in the present deliverable is directed solely to professionals who have the appropriate degree of experience to understand and interpret its content in accordance with generally accepted engineering or other professional standard and applicable regulations.

No recommendation as to products and services or vendors is made or should be implied.

No representation or warranty is made that this deliverable is technically accurate or sufficient or conforms to any law and/or governmental rule and/or regulation and further, no representation or warranty is made of merchantability or fitness for any particular purpose or against infringement of intellectual property rights.

In no event shall ETSI be held liable for loss of profits or any other incidental or consequential damages.

Any software contained in this deliverable is provided "AS IS" with no warranties, express or implied, including but not limited to, the warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights and ETSI shall not be held liable in any event for any damages whatsoever (including, without limitation, damages for loss of profits, business interruption, loss of information, or any other pecuniary loss) arising out of or related to the use of or inability to use the software.

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2024.
All rights reserved.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The declarations pertaining to these essential IPRs, if any, are publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<https://ipr.etsi.org/>).

Pursuant to the ETSI Directives including the ETSI IPR Policy, no investigation regarding the essentiality of IPRs, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™** and **LTE™** are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **oneM2M™** logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners. **GSM®** and the GSM logo are trademarks registered and owned by the GSM Association.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under <https://webapp.etsi.org/key/queryform.asp>.

Modal verbs terminology

In the present document "**shall**", "**shall not**", "**should**", "**should not**", "**may**", "**need not**", "**will**", "**will not**", "**can**" and "**cannot**" are to be interpreted as described in clause 3.2 of the [ETSI Drafting Rules](#) (Verbal forms for the expression of provisions).

"**must**" and "**must not**" are **NOT** allowed in ETSI deliverables except when used in direct citation.

Contents

| | |
|---|----|
| Intellectual Property Rights | 2 |
| Legal Notice | 2 |
| Modal verbs terminology..... | 2 |
| Foreword..... | 8 |
| 1 Scope | 9 |
| 2 References | 9 |
| 3 Definitions, symbols and abbreviations | 10 |
| 3.1 Definitions | 10 |
| 3.2 Symbols..... | 10 |
| 3.3 Abbreviations | 10 |
| 4 General | 11 |
| 4.1 Procedure specification principles..... | 11 |
| 4.2 Forwards and backwards compatibility | 11 |
| 4.3 Specification notations | 11 |
| 5 NRPPa services | 12 |
| 5.1 NRPPa procedure modules..... | 12 |
| 5.2 Parallel transactions..... | 12 |
| 6 Services expected from lower layer | 12 |
| 7 Functions of NRPPa | 12 |
| 8 NRPPa procedures..... | 13 |
| 8.1 Elementary procedures | 13 |
| 8.2 Location Information Transfer Procedures..... | 14 |
| 8.2.1 E-CID Measurement Initiation | 14 |
| 8.2.1.1 General | 14 |
| 8.2.1.2 Successful Operation..... | 15 |
| 8.2.1.3 Unsuccessful Operation | 15 |
| 8.2.1.4 Abnormal Conditions | 16 |
| 8.2.2 E-CID Measurement Failure Indication..... | 16 |
| 8.2.2.1 General | 16 |
| 8.2.2.2 Successful Operation..... | 16 |
| 8.2.2.3 Unsuccessful Operation | 16 |
| 8.2.2.4 Abnormal Conditions | 16 |
| 8.2.3 E-CID Measurement Report | 16 |
| 8.2.3.1 General | 16 |
| 8.2.3.2 Successful Operation..... | 16 |
| 8.2.3.3 Unsuccessful Operation | 17 |
| 8.2.3.4 Abnormal Conditions | 17 |
| 8.2.4 E-CID Measurement Termination | 17 |
| 8.2.4.1 General | 17 |
| 8.2.4.2 Successful Operation..... | 17 |
| 8.2.4.3 Unsuccessful Operation | 17 |
| 8.2.4.4 Abnormal Conditions | 17 |
| 8.2.5 OTDOA Information Exchange..... | 18 |
| 8.2.5.1 General | 18 |
| 8.2.5.2 Successful Operation..... | 18 |
| 8.2.5.3 Unsuccessful Operation | 18 |
| 8.2.5.4 Abnormal Conditions | 18 |
| 8.2.6 Positioning Information Exchange | 18 |
| 8.2.6.1 General | 18 |
| 8.2.6.2 Successful Operation..... | 19 |
| 8.2.6.3 Unsuccessful Operation | 19 |

| | | |
|----------|---|----|
| 8.2.6.4 | Abnormal Conditions | 20 |
| 8.2.7 | Positioning Information Update..... | 20 |
| 8.2.7.1 | General | 20 |
| 8.2.7.2 | Successful Operation..... | 20 |
| 8.2.7.3 | Unsuccessful Operation | 20 |
| 8.2.7.4 | Abnormal Conditions | 20 |
| 8.2.8 | TRP Information Exchange | 20 |
| 8.2.8.1 | General | 20 |
| 8.2.8.2 | Successful Operation..... | 21 |
| 8.2.8.3 | Unsuccessful Operation | 21 |
| 8.2.8.4 | Abnormal Conditions | 21 |
| 8.2.9 | Positioning Activation | 22 |
| 8.2.9.1 | General | 22 |
| 8.2.9.2 | Successful Operation..... | 22 |
| 8.2.9.3 | Unsuccessful Operation | 22 |
| 8.2.9.4 | Abnormal Conditions | 23 |
| 8.2.10 | Positioning Deactivation..... | 23 |
| 8.2.10.1 | General | 23 |
| 8.2.10.2 | Successful Operation..... | 23 |
| 8.2.10.3 | Unsuccessful Operation | 23 |
| 8.2.10.4 | Abnormal Conditions | 23 |
| 8.2.11 | PRS Configuration Exchange | 23 |
| 8.2.11.1 | General | 23 |
| 8.2.11.2 | Successful Operation..... | 23 |
| 8.2.11.3 | Unsuccessful Operation | 24 |
| 8.2.11.4 | Abnormal Conditions | 24 |
| 8.2.12 | Measurement Preconfiguration..... | 24 |
| 8.2.12.1 | General | 24 |
| 8.2.12.2 | Successful Operation..... | 24 |
| 8.2.12.3 | Unsuccessful Operation | 25 |
| 8.2.12.4 | Abnormal Conditions | 25 |
| 8.2.13 | Measurement Activation..... | 25 |
| 8.2.13.1 | General | 25 |
| 8.2.13.2 | Successful Operation..... | 25 |
| 8.2.13.3 | Unsuccessful Operation | 25 |
| 8.2.13.4 | Abnormal Conditions | 26 |
| 8.3 | Management Procedures | 26 |
| 8.3.1 | Error Indication..... | 26 |
| 8.3.1.1 | General | 26 |
| 8.3.1.2 | Successful Operation..... | 26 |
| 8.3.1.3 | Abnormal Conditions | 26 |
| 8.4 | Assistance Information Transfer Procedures..... | 26 |
| 8.4.1 | Assistance Information Control | 26 |
| 8.4.1.1 | General | 26 |
| 8.4.1.2 | Successful Operation..... | 27 |
| 8.4.1.3 | Abnormal Conditions | 27 |
| 8.4.2 | Assistance Information Feedback | 27 |
| 8.4.2.1 | General | 27 |
| 8.4.2.2 | Successful Operation..... | 27 |
| 8.4.2.3 | Abnormal Conditions | 28 |
| 8.5 | Measurement Information Transfer..... | 28 |
| 8.5.1 | Measurement..... | 28 |
| 8.5.1.1 | General | 28 |
| 8.5.1.2 | Successful Operation..... | 28 |
| 8.5.1.3 | Unsuccessful Operation | 29 |
| 8.5.1.4 | Abnormal Conditions | 29 |
| 8.5.2 | Measurement Report..... | 29 |
| 8.5.2.1 | General | 29 |
| 8.5.2.2 | Successful Operation..... | 30 |
| 8.5.2.3 | Abnormal Conditions | 30 |
| 8.5.3 | Measurement Update | 30 |
| 8.5.3.1 | General | 30 |

| | | |
|----------|--|----|
| 8.5.3.2 | Successful Operation..... | 30 |
| 8.5.3.3 | Unsuccessful Operation | 31 |
| 8.5.3.4 | Abnormal Conditions | 31 |
| 8.5.4 | Measurement Abort | 31 |
| 8.5.4.1 | General | 31 |
| 8.5.4.2 | Successful Operation..... | 31 |
| 8.5.4.3 | Unsuccessful Operation | 31 |
| 8.5.4.4 | Abnormal Conditions | 31 |
| 8.5.5 | Measurement Failure Indication | 31 |
| 8.5.5.1 | General | 31 |
| 8.5.5.2 | Successful Operation..... | 32 |
| 8.5.5.3 | Abnormal Conditions | 32 |
| 9 | Elements for NRPPa Communication | 32 |
| 9.0 | General | 32 |
| 9.1 | Message Functional Definition and Content | 32 |
| 9.1.1 | Messages for Location Information Transfer Procedures | 32 |
| 9.1.1.1 | E-CID MEASUREMENT INITIATION REQUEST | 32 |
| 9.1.1.2 | E-CID MEASUREMENT INITIATION RESPONSE | 34 |
| 9.1.1.3 | E-CID MEASUREMENT INITIATION FAILURE | 34 |
| 9.1.1.4 | E-CID MEASUREMENT FAILURE INDICATION..... | 34 |
| 9.1.1.5 | E-CID MEASUREMENT REPORT | 35 |
| 9.1.1.6 | E-CID MEASUREMENT TERMINATION COMMAND | 35 |
| 9.1.1.7 | OTDOA INFORMATION REQUEST | 35 |
| 9.1.1.8 | OTDOA INFORMATION RESPONSE..... | 36 |
| 9.1.1.9 | OTDOA INFORMATION FAILURE | 37 |
| 9.1.1.10 | POSITIONING INFORMATION REQUEST..... | 37 |
| 9.1.1.11 | POSITIONING INFORMATION RESPONSE..... | 37 |
| 9.1.1.12 | POSITIONING INFORMATION FAILURE | 38 |
| 9.1.1.13 | POSITIONING INFORMATION UPDATE..... | 38 |
| 9.1.1.14 | TRP INFORMATION REQUEST..... | 38 |
| 9.1.1.15 | TRP INFORMATION RESPONSE..... | 39 |
| 9.1.1.16 | TRP INFORMATION FAILURE..... | 39 |
| 9.1.1.17 | POSITIONING ACTIVATION REQUEST..... | 39 |
| 9.1.1.18 | POSITIONING ACTIVATION RESPONSE..... | 40 |
| 9.1.1.19 | POSITIONING ACTIVATION FAILURE | 40 |
| 9.1.1.20 | POSITIONING DEACTIVATION..... | 40 |
| 9.1.1.21 | PRS CONFIGURATION REQUEST | 41 |
| 9.1.1.22 | PRS CONFIGURATION RESPONSE..... | 41 |
| 9.1.1.23 | PRS CONFIGURATION FAILURE | 42 |
| 9.1.1.24 | MEASUREMENT PRECONFIGURATION REQUIRED | 42 |
| 9.1.1.25 | MEASUREMENT PRECONFIGURATION CONFIRM | 42 |
| 9.1.1.26 | MEASUREMENT PRECONFIGURATION REFUSE..... | 43 |
| 9.1.1.27 | MEASUREMENT ACTIVATION..... | 43 |
| 9.1.2 | Messages for Management Procedures..... | 44 |
| 9.1.2.1 | ERROR INDICATION | 44 |
| 9.1.3 | Messages for Assistance Information Transfer Procedures | 44 |
| 9.1.3.1 | ASSISTANCE INFORMATION CONTROL..... | 44 |
| 9.1.3.2 | ASSISTANCE INFORMATION FEEDBACK..... | 45 |
| 9.1.4 | Messages for Measurement Information Transfer Procedures | 45 |
| 9.1.4.1 | MEASUREMENT REQUEST | 45 |
| 9.1.4.2 | MEASUREMENT RESPONSE | 47 |
| 9.1.4.3 | MEASUREMENT FAILURE..... | 47 |
| 9.1.4.4 | MEASUREMENT REPORT | 48 |
| 9.1.4.5 | MEASUREMENT UPDATE..... | 48 |
| 9.1.4.6 | MEASUREMENT ABORT..... | 49 |
| 9.1.4.7 | MEASUREMENT FAILURE INDICATION | 49 |
| 9.2 | Information Element definitions..... | 49 |
| 9.2.0 | General..... | 49 |
| 9.2.1 | Cause | 50 |
| 9.2.2 | Criticality Diagnostics | 51 |
| 9.2.3 | Message Type | 52 |

| | | |
|--------|--|----|
| 9.2.4 | NRPPa Transaction ID..... | 52 |
| 9.2.5 | E-CID Measurement Result..... | 52 |
| 9.2.6 | NG-RAN CGI..... | 55 |
| 9.2.7 | CGI EUTRA..... | 56 |
| 9.2.8 | PLMN Identity..... | 56 |
| 9.2.9 | NR CGI..... | 56 |
| 9.2.10 | NG-RAN Access Point Position..... | 56 |
| 9.2.11 | TAC..... | 57 |
| 9.2.12 | Cell Portion ID..... | 57 |
| 9.2.13 | Other-RAT Measurement Result..... | 57 |
| 9.2.14 | WLAN Measurement Result..... | 59 |
| 9.2.15 | OTDOA Cell Information..... | 60 |
| 9.2.16 | PRS Muting Configuration EUTRA..... | 62 |
| 9.2.17 | PRS Frequency Hopping Configuration EUTRA..... | 63 |
| 9.2.18 | TDD Configuration EUTRA..... | 63 |
| 9.2.19 | Assistance Information..... | 63 |
| 9.2.20 | PosSIB Segments..... | 64 |
| 9.2.21 | Assistance Information Meta Data..... | 64 |
| 9.2.22 | Positioning SIB Type..... | 64 |
| 9.2.23 | Assistance Information Failure List..... | 65 |
| 9.2.24 | TRP ID..... | 65 |
| 9.2.25 | TRP Information..... | 66 |
| 9.2.26 | Search Window Information..... | 66 |
| 9.2.27 | Requested SRS Transmission Characteristics..... | 67 |
| 9.2.28 | SRS Configuration..... | 68 |
| 9.2.29 | SRS Resource..... | 69 |
| 9.2.30 | Positioning SRS Resource..... | 71 |
| 9.2.31 | SRS Resource Set..... | 72 |
| 9.2.32 | Positioning SRS Resource Set..... | 73 |
| 9.2.33 | SRS Resource Set ID..... | 73 |
| 9.2.34 | Spatial Relation Information..... | 73 |
| 9.2.35 | SRS Resource Trigger..... | 74 |
| 9.2.36 | Relative Time 1900..... | 74 |
| 9.2.37 | TRP Measurement Result..... | 75 |
| 9.2.38 | UL Angle of Arrival..... | 75 |
| 9.2.39 | UL RTOA Measurement..... | 75 |
| 9.2.40 | gNB Rx-Tx Time Difference..... | 76 |
| 9.2.41 | Additional Path List..... | 76 |
| 9.2.42 | Time Stamp..... | 77 |
| 9.2.43 | Measurement Quality..... | 77 |
| 9.2.44 | PRS Configuration..... | 78 |
| 9.2.45 | Spatial Direction Information..... | 79 |
| 9.2.46 | Geographical Coordinates..... | 79 |
| 9.2.47 | DL-PRS Resource Coordinates..... | 80 |
| 9.2.48 | Relative Geodetic Location..... | 81 |
| 9.2.49 | NG-RAN High Accuracy Access Point Position..... | 81 |
| 9.2.50 | Relative Cartesian Location..... | 82 |
| 9.2.51 | Reference Point..... | 82 |
| 9.2.52 | Location Uncertainty..... | 82 |
| 9.2.53 | Pathloss Reference Information..... | 83 |
| 9.2.54 | SSB Information..... | 83 |
| 9.2.55 | SSB Time/Frequency Configuration..... | 83 |
| 9.2.56 | DL-PRS Muting Pattern..... | 84 |
| 9.2.57 | Measurement Beam Information..... | 84 |
| 9.2.58 | NR-PRS Beam Information..... | 84 |
| 9.2.59 | Positioning Broadcast Cells..... | 85 |
| 9.2.60 | Spatial Relation Information per SRS Resource..... | 86 |
| 9.2.61 | Requested DL PRS Transmission Characteristics..... | 86 |
| 9.2.62 | Requested DL-PRS Resource List..... | 87 |
| 9.2.63 | Start Time and Duration..... | 87 |
| 9.2.64 | PRS Transmission Off Information..... | 87 |
| 9.2.65 | On-demand PRS TRP Information..... | 88 |

| | | |
|--|--|------------|
| 9.2.66 | UL-AoA assistance information | 90 |
| 9.2.67 | Z-AoA | 90 |
| 9.2.68 | Response Time | 90 |
| 9.2.69 | LCS to GCS Translation | 91 |
| 9.2.70 | UE Reporting Information | 91 |
| 9.2.71 | Multiple UL-AoA | 91 |
| 9.2.72 | UL SRS-RSRPP | 92 |
| 9.2.73 | SRS Resource type | 92 |
| 9.2.74 | Extended Additional Path List | 92 |
| 9.2.75 | ARP ID | 92 |
| 9.2.76 | ARP Location Information | 93 |
| 9.2.77 | LoS/NLoS Information | 93 |
| 9.2.78 | UE Tx TEG Association List | 93 |
| 9.2.79 | TRP Tx TEG Association | 94 |
| 9.2.80 | TRP TEG Information | 94 |
| 9.2.81 | Measurement Characteristics Request Indicator | 95 |
| 9.2.82 | TRP Beam Antenna Information | 95 |
| 9.2.83 | TRP Beam Antenna Angles | 96 |
| 9.2.84 | Timing Error Margin | 97 |
| 9.2.85 | TRP Rx TEG Information | 97 |
| 9.2.86 | TRP Tx TEG Information | 97 |
| 9.2.87 | TRP RxTx TEG Information | 98 |
| 9.3 | Message and Information Element Abstract Syntax (with ASN.1) | 99 |
| 9.3.1 | General | 99 |
| 9.3.2 | Usage of Private Message Mechanism for Non-standard Use | 99 |
| 9.3.3 | Elementary Procedure Definitions | 99 |
| 9.3.4 | PDU Definitions | 106 |
| 9.3.5 | Information Element definitions | 123 |
| 9.3.6 | Common definitions | 184 |
| 9.3.7 | Constant definitions | 185 |
| 9.3.8 | Container definitions | 189 |
| 9.4 | Message transfer syntax | 193 |
| 9.5 | Timers | 193 |
| 10 | Handling of unknown, unforeseen and erroneous protocol data | 193 |
| Annex A (informative): Change history | | 194 |
| History | | 196 |

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

The present document specifies the control plane radio network layer signalling procedures between a NG-RAN node and the LMF. NRPPa supports the concerned functions by signalling procedures defined in this document.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

- [1] 3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
- [2] 3GPP TS 38.413: "NG-RAN; NG Application Protocol (NGAP)".
- [3] 3GPP TS 38.300: "NR; NR and NG-RAN Overall Description; Stage 2".
- [4] Void.
- [5] 3GPP TR 25.921 (version.7.0.0): "Guidelines and principles for protocol description and error handling".
- [6] ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules - Specification of Packed Encoding Rules (PER)".
- [7] 3GPP TS 36.104: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Base Station (BS) radio transmission and reception".
- [8] 3GPP TS 23.032: "Technical Specification Group Services and System Aspects; Universal Geographical Area Description (GAD)".
- [9] 3GPP TS 36.133: "Evolved Universal Terrestrial Radio Access (E-UTRA); Requirements for support of radio resource management".
- [10] 3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Physical Channels and Modulation".
- [11] IEEE Std 802.11™-2012, IEEE Standard for Information technology - Telecommunications and information exchange between systems - Local and metropolitan area network.
- [12] 3GPP TS 36.455: "Evolved Universal Terrestrial Radio Access (E-UTRA); LTE Positioning Protocol A (LPPa)".
- [13] 3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol specification".
- [14] 3GPP TS 37.355: "Technical Specification Group Radio Access Network; LTE Positioning Protocol (LPP)".
- [15] 3GPP TS 38.321: "NR; Medium Access Control (MAC) protocol specification".
- [16] 3GPP TS 38.133: "NR; Requirements for support of radio resource management".
- [17] 3GPP TS 36.214: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer (PHY); Measurements".

- [18] 3GPP TS 38.305: "NG Radio Access Network (NG-RAN); Stage 2 functional specification of User Equipment (UE) positioning in NG-RAN".
- [19] 3GPP TS 38.215: "NR; Physical layer (PHY); Measurements".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905 [1].

gNB: as defined in TS 38.300 [3].

NG-RAN node: as defined in TS 38.300 [3].

ng-eNB: as defined in TS 38.300 [3].

3.2 Symbols

For the purposes of the present document, the following symbols apply:

<symbol> <Explanation>

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905 [1].

| | |
|---------|--|
| ARP | Antenna Reference Point |
| BDS | BeiDou Navigation Satellite System |
| CG-SDT | Configured Grant Small Data Transmission |
| CID | Cell-ID (positioning method) |
| DL-PRS | Downlink Positioning Reference Signal |
| E-CID | Enhanced Cell-ID (positioning method) |
| EGNOS | European Geostationary Navigation Overlay Service |
| GAGAN | GPS Aided Geo Augmented Navigation |
| GLONASS | GLObal'naya NAVigatsionnaya Sputnikovaya Sistema (Engl.: Global Navigation Satellite System) |
| GNSS | Global Navigation Satellite System |
| GPS | Global Positioning System |
| LMF | Location Management Function |
| LPP | LTE Positioning Protocol |
| MSAS | Multi-functional Satellite Augmentation System |
| NavIC | NAVigation with Indian Constellation |
| NRPPa | NR Positioning Protocol A |
| OTDOA | Observed Time Difference of Arrival |
| posSIB | Positioning SIB |
| PRS | Positioning Reference Signal (for E-UTRA) |
| QZSS | Quasi-Zenith Satellite System |
| RSRP | Reference Signal Received Power |
| RSSI | Received Signal Strength Indicator |
| RSTD | Reference Signal Time Difference |
| SBAS | Space Based Augmentation System |
| SRS | Sounding Reference Signal |
| TEG | Timing Error group |
| TRP | Transmission-Reception Point |

| | |
|--------------|---|
| UE | User Equipment |
| UL-AoA | Uplink Angle of Arrival |
| UL-RTOA | Uplink Relative Time of Arrival |
| UL-SRS | Uplink Sounding Reference Signal |
| UL SRS-RSRPP | UL SRS reference signal received path power |
| WAAS | Wide Area Augmentation System |
| Z-AoA | Zenith Angles of Arrival |

4 General

4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating NG-RAN Node exactly and completely. Any rule that specifies the behaviour of the originating NG-RAN Node shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:

- 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the initiating message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

- 2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification notations

For the purposes of the present document, the following notations apply:

| | |
|-----------|--|
| Procedure | When referring to an elementary procedure in the specification the Procedure Name is written with the first letters in each word in upper case characters followed by the word "procedure", e.g. Handover Preparation procedure. |
| Message | When referring to a message in the specification the MESSAGE NAME is written with all letters in upper case characters followed by the word "message", e.g. ERROR INDICATION message. |
| IE | When referring to an information element (IE) in the specification the <i>Information Element Name</i> is written with the first letters in each word in upper case characters and all letters in Italic font followed by the abbreviation "IE", e.g. <i>Cause</i> IE. |

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is written as it is specified in sub clause 9.2 enclosed by quotation marks, e.g. "Value".

5 NRPPa services

The present clause describes the services an NG -RAN Node offers to the LMF.

5.1 NRPPa procedure modules

The procedures are divided into two modules as follows:

1. NRPPa Location Information Transfer Procedures;
2. NRPPa Management Procedures;

The NRPPa Location Information Transfer Procedures module contains procedures used to handle the transfer of positioning related information between NG-RAN Node and LMF.

The Management Procedures module contains procedures that are not related specifically to positioning, i.e. error handling.

5.2 Parallel transactions

Unless explicitly indicated in the procedure specification, at any instance in time one protocol peer may have more than one ongoing NRPPa procedure.

6 Services expected from lower layer

Within 5G RAN, NRPPa protocol uses the services provided by the NGAP protocol. An NRPPa message is carried inside an NGAP message.

NGAP signalling is described in TS 38.413 [2].

7 Functions of NRPPa

The NRPPa protocol provides the following functions:

- E-CID Location Information Transfer. This function allows the NG-RAN node to exchange location information with LMF for the purpose of E-CID positioning and NR E-CID positioning.
- OTDOA Information Transfer. This function allows the NG-RAN node to exchange information with the LMF for the purpose of OTDOA positioning.
- Reporting of General Error Situations. This function allows reporting of general error situations, for which function specific error messages have not been defined.
- Assistance Information Transfer. This function allows the LMF to exchange information with the NG-RAN node for the purpose of assistance information broadcasting.
- Positioning Information Transfer. This function allows the NG-RAN node to exchange positioning information with the LMF for the purpose of positioning.
- Measurement Information Transfer. This function allows the LMF to exchange measurement information with the NG-RAN node for the purpose of positioning.
- TRP Information Transfer. This function allows an LMF to obtain TRP related information from an NG-RAN node.

- PRS Information Transfer. This function allows the LMF to exchange PRS related information with the NG-RAN node.
- Measurement Preconfiguration Information Transfer. This function allows the LMF to request the NG-RAN node to preconfigure and activate measurement gap and/or PRS processing window.

The mapping between the above functions and NRPPa EPs is shown in the table below.

Table 7-1: Mapping between NRPPa functions and NRPPa EPs

| Function | Elementary Procedure(s) |
|---|---|
| E-CID Location Information Transfer | a) E-CID Measurement Initiation b) E-CID Measurement Failure Indication c) E-CID Measurement Report d) E-CID Measurement Termination |
| OTDOA Information Transfer | OTDOA Information Exchange |
| Assistance Information Transfer | a) Assistance Information Control b) Assistance Information Feedback |
| Reporting of General Error Situations | Error Indication |
| Positioning Information Transfer | a) Positioning Information Exchange b) Positioning Information Update c) Positioning Activation d) Positioning Deactivation |
| TRP Information Transfer | TRP Information Exchange |
| Measurement Information Transfer | a) Measurement b) Measurement Update c) Measurement Report d) Measurement Abort e) Measurement Failure Indication |
| PRS Information Transfer | PRS Configuration Exchange |
| Measurement Preconfiguration Information Transfer | Measurement Preconfiguration Measurement Activation |

8 NRPPa procedures

8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

Table 8.1-1: Class 1 Elementary Procedures

| Elementary Procedure | Initiating Message | Successful Outcome | Unsuccessful Outcome |
|----------------------------------|---------------------------------------|---------------------------------------|--------------------------------------|
| | | Response message | Response message |
| E-CID Measurement Initiation | E-CID MEASUREMENT INITIATION REQUEST | E-CID MEASUREMENT INITIATION RESPONSE | E-CID MEASUREMENT INITIATION FAILURE |
| OTDOA Information Exchange | OTDOA INFORMATION REQUEST | OTDOA INFORMATION RESPONSE | OTDOA INFORMATION FAILURE |
| Positioning Information Exchange | POSITIONING INFORMATION REQUEST | POSITIONING INFORMATION RESPONSE | POSITIONING INFORMATION FAILURE |
| TRP Information Exchange | TRP INFORMATION REQUEST | TRP INFORMATION RESPONSE | TRP INFORMATION FAILURE |
| Measurement | MEASUREMENT REQUEST | MEASUREMENT RESPONSE | MEASUREMENT FAILURE |
| Positioning Activation | POSITIONING ACTIVATION REQUEST | POSITIONING ACTIVATION RESPONSE | POSITIONING ACTIVATION FAILURE |
| PRS Configuration Exchange | PRS CONFIGURATION REQUEST | PRS CONFIGURATION RESPONSE | PRS CONFIGURATION FAILURE |
| Measurement Preconfiguration | MEASUREMENT PRECONFIGURATION REQUIRED | MEASUREMENT PRECONFIGURATION CONFIRM | MEASUREMENT PRECONFIGURATION REFUSE |

Table 8.1-2: Class 2 Elementary Procedures

| Elementary Procedure | Initiating Message |
|--------------------------------------|---------------------------------------|
| E-CID Measurement Failure Indication | E-CID MEASUREMENT FAILURE INDICATION |
| E-CID Measurement Report | E-CID MEASUREMENT REPORT |
| E-CID Measurement Termination | E-CID MEASUREMENT TERMINATION COMMAND |
| Error Indication | ERROR INDICATION |
| Assistance Information Control | ASSISTANCE INFORMATION CONTROL |
| Assistance Information Feedback | ASSISTANCE INFORMATION FEEDBACK |
| Positioning Information Update | POSITIONING INFORMATION UPDATE |
| Measurement Report | MEASUREMENT REPORT |
| Measurement Update | MEASUREMENT UPDATE |
| Measurement Abort | MEASUREMENT ABORT |
| Measurement Failure Indication | MEASUREMENT FAILURE INDICATION |
| Positioning Deactivation | POSITIONING DEACTIVATION |
| Measurement Activation | MEASUREMENT ACTIVATION |

8.2 Location Information Transfer Procedures

8.2.1 E-CID Measurement Initiation

8.2.1.1 General

The purpose of E-CID Measurement Initiation procedure is to allow the LMF to request the NG-RAN node to report E-CID measurements used by LMF to compute the location of the UE.

8.2.1.2 Successful Operation

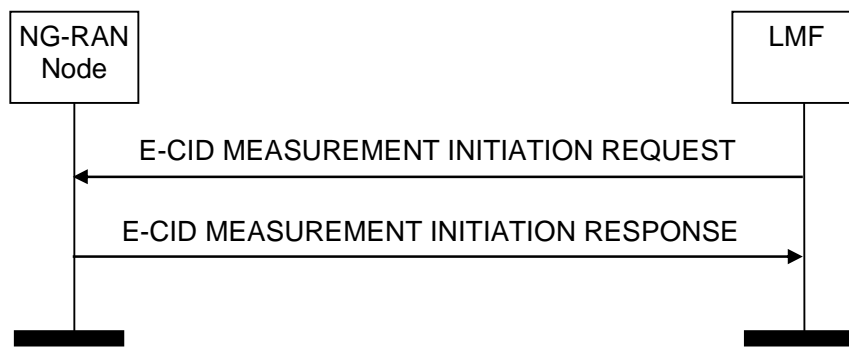


Figure 8.2.1.2-1: E-CID Measurement Initiation procedure, successful operation

The LMF initiates the procedure by sending an E-CID MEASUREMENT INITIATION REQUEST message. If the NG-RAN node is able to initiate the requested E-CID measurements, it shall reply with the E-CID MEASUREMENT INITIATION RESPONSE message.

The *Measured Results* IE shall be included in the *E-CID Measurement Result* IE of the E-CID MEASUREMENT INITIATION RESPONSE message when measurement results other than the "Cell-ID" have been requested.

If the *Report Characteristics* IE is set to "OnDemand", the NG-RAN node shall return the result of the measurement in the E-CID MEASUREMENT INITIATION RESPONSE message including, if available, the *NG-RAN Access Point Position* IE or the *Geographical Coordinates* IE in the *E-CID Measurement Result* IE, and the LMF shall consider that the E-CID measurements for the UE has been terminated by the NG-RAN node. If available, the NG-RAN node shall include the *Cell Portion ID* IE in the E-CID MEASUREMENT INITIATION RESPONSE message. Upon reception of the *Cell Portion ID* IE, the LMF may use the value as the cell portion for the measurement. If the *Report Characteristics* IE is set to "OnDemand" and the *Inter-RAT Measurement Quantities* IE is included in the E-CID MEASUREMENT INITIATION REQUEST message, the NG-RAN node shall, if supported, provide the corresponding measurements, if available in the NG-RAN node, in the *Inter-RAT Measurement Result* IE in E-CID MEASUREMENT INITIATION RESPONSE message. If the *Report Characteristics* IE is set to "OnDemand" and the *WLAN Measurement Quantities* IE is included in the E-CID MEASUREMENT INITIATION REQUEST message, the NG-RAN node shall, if supported, provide the corresponding measurements, if available in the NG-RAN node, in the *WLAN Measurement Result* IE in E-CID MEASUREMENT INITIATION RESPONSE message.

If the *Report Characteristics* IE is set to "Periodic", the NG-RAN node shall initiate the requested measurements and shall reply with the E-CID MEASUREMENT INITIATION RESPONSE message without including either the *E-CID Measurement Result* IE or the *Cell Portion ID* IE in this message. The NG-RAN node shall then periodically initiate the E-CID Measurement Report procedure for the measurements, with the requested reporting periodicity.

8.2.1.3 Unsuccessful Operation

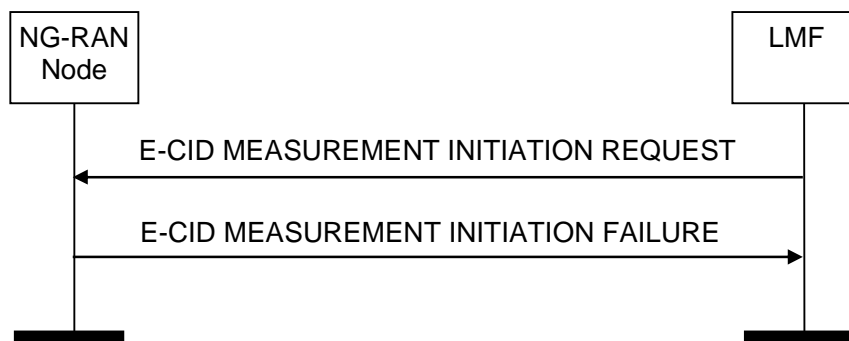


Figure 8.2.1.3-1: E-CID Measurement Initiation procedure, unsuccessful operation

If the NG-RAN node is not able to initiate at least one of the requested E-CID measurements, the NG-RAN node shall respond with an E-CID MEASUREMENT INITIATION FAILURE message.

8.2.1.4 Abnormal Conditions

Void.

8.2.2 E-CID Measurement Failure Indication

8.2.2.1 General

The purpose of the E-CID Measurement Failure Indication procedure is for the NG-RAN node to notify the LMF that the E-CID measurements previously requested with the E-CID Measurement Initiation procedure can no longer be reported.

8.2.2.2 Successful Operation



Figure 8.2.2.2-1: E-CID Measurement Failure Indication, successful operation

Upon reception of the E-CID MEASUREMENT FAILURE INDICATION message, the LMF shall consider that the E-CID measurements for the UE have been terminated by the NG-RAN node.

8.2.2.3 Unsuccessful Operation

Not applicable.

8.2.2.4 Abnormal Conditions

Void.

8.2.3 E-CID Measurement Report

8.2.3.1 General

The purpose of E-CID Measurement Report procedure is for the NG-RAN node to provide the E-CID measurements for the UE to the LMF.

8.2.3.2 Successful Operation



Figure 8.2.3.2-1: E-CID Measurement Report procedure, successful operation

The NG-RAN node initiates the procedure by sending an E-CID MEASUREMENT REPORT message. The E-CID MEASUREMENT REPORT message contains the E-CID measurement results according to the measurement configuration in the respective E-CID MEASUREMENT INITIATION REQUEST message.

The *Measured Results* IE shall be included in the *E-CID Measurement Result* IE of the E-CID MEASUREMENT REPORT message when measurement results other than the "Cell-ID" have been requested.

If available, the NG-RAN node shall include the *NG-RAN Access Point Position* IE or the *Geographical Coordinates* IE which is the configured estimated serving antenna position in the *E-CID Measurement Result* IE within the E-CID MEASUREMENT REPORT message. Upon reception of this *NG-RAN Access Point Position* IE, the LMF may use the value as the geographical position of the NG-RAN access point.

If available, the NG-RAN node shall include the *Cell Portion ID* IE in the E-CID MEASUREMENT REPORT message. Upon reception of the *Cell Portion ID* IE, the LMF may use the value as the cell portion for the measurement.

8.2.3.3 Unsuccessful Operation

Not applicable.

8.2.3.4 Abnormal Conditions

Void.

8.2.4 E-CID Measurement Termination

8.2.4.1 General

The purpose of E-CID Measurement Termination procedure is to terminate periodical E-CID measurements for the UE performed by the NG-RAN node.

8.2.4.2 Successful Operation



Figure 8.2.4.2-1: E-CID Measurement Termination procedure, successful operation

The LMF initiates the procedure by generating an E-CID MEASUREMENT TERMINATION COMMAND message.

8.2.4.3 Unsuccessful Operation

Not applicable.

8.2.4.4 Abnormal Conditions

Void.

8.2.5 OTDOA Information Exchange

8.2.5.1 General

The purpose of the OTDOA Information Exchange procedure is to allow the LMF to request the NG-RAN node to transfer OTDOA information to the LMF.

8.2.5.2 Successful Operation

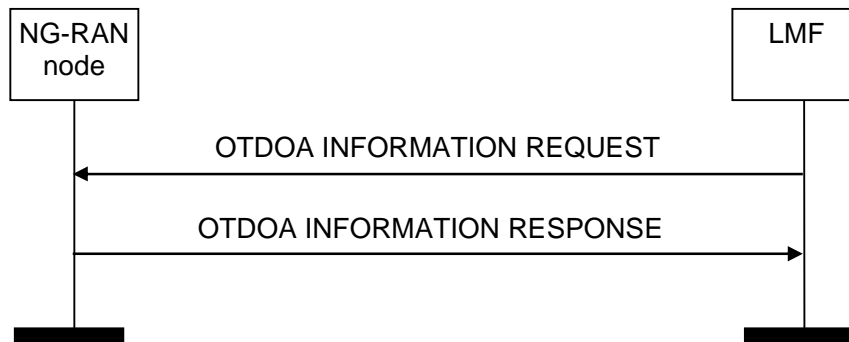


Figure 8.2.5.2-1: OTDOA Information Exchange procedure, successful operation

The LMF initiates the procedure by sending an OTDOA INFORMATION REQUEST message. The NG-RAN node responds with OTDOA INFORMATION RESPONSE message that contains the available OTDOA information applicable to the relevant cells/TPs.

8.2.5.3 Unsuccessful Operation

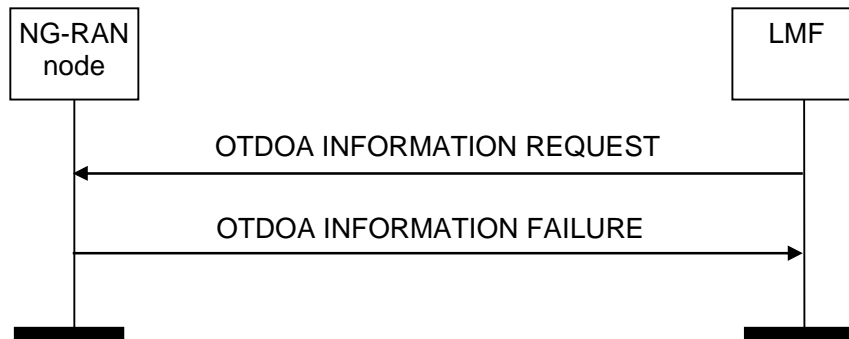


Figure 8.2.5.3-1: OTDOA Information Exchange procedure, unsuccessful operation

If the NG-RAN node does not have any OTDOA information to report, the NG-RAN node shall respond with an OTDOA INFORMATION FAILURE message.

8.2.5.4 Abnormal Conditions

Void.

8.2.6 Positioning Information Exchange

8.2.6.1 General

The Positioning Information Exchange procedure is initiated by the LMF to request to the NG-RAN node positioning information for the UE. This procedure applies only if the NG-RAN node is a gNB.

8.2.6.2 Successful Operation

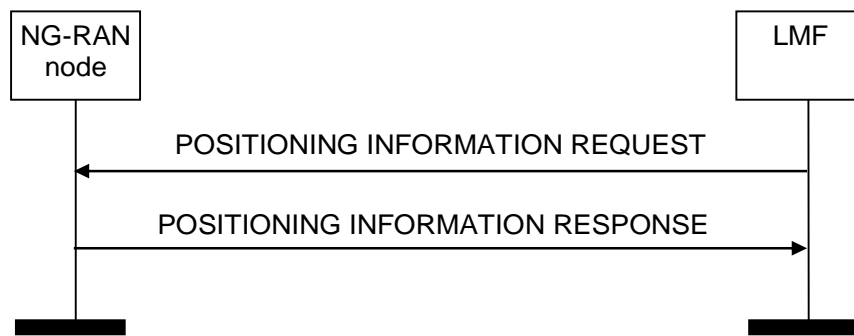


Figure 8.2.6.2-1: Positioning Information Exchange procedure, successful operation

The LMF initiates the procedure by sending a POSITIONING INFORMATION REQUEST message to the NG-RAN node.

If the *Requested SRS Transmission Characteristics* IE is included in the POSITIONING INFORMATION REQUEST message, the NG-RAN node may take this information into account when configuring SRS transmissions for the UE, and it shall include the *SRS Configuration* IE and the *SFN Initialisation Time* IE in the POSITIONING INFORMATION RESPONSE message.

If the *Spatial Relation Information per SRS Resource* IE and the *Periodicity List* IE are both included in the *Requested SRS Transmission Characteristics* IE, the NG-RAN node shall consider that the *Spatial Relation per SRS Resource Item* IE and the *Periodicity List Item* IE have one-to-one mapping relation.

If the *UE Reporting Information* IE is included in the POSITIONING INFORMATION REQUEST message, the NG-RAN node may take this information into account for allocating proper CG-SDT resources when positioning a UE.

If the *UE TEG Information Request* IE is included in the POSITIONING INFORMATION REQUEST message and set to "onDemand", the NG-RAN node shall, if supported, provide the UE Tx TEG association in the POSITIONING INFORMATION RESPONSE message.

If the *UE TEG Information Request* IE is set to "periodic", the NG-RAN node shall, if supported, reply with the POSITIONING INFORMATION RESPONSE message without including any UE Tx TEG association in this message. The NG-RAN node shall then take the *UE TEG Reporting Periodicity* IE into account when configuring the UE's periodic UE Tx TEG association reporting and initiate the Positioning Information Update procedure for reporting the UE Tx TEG association received from the UE, if any.

8.2.6.3 Unsuccessful Operation

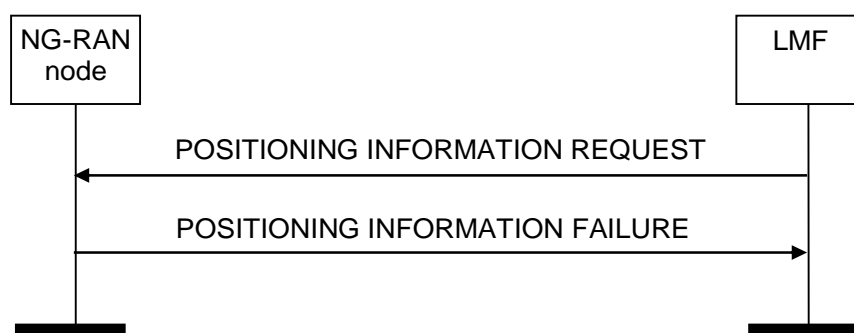


Figure 8.2.6.3-1: Positioning Information Exchange procedure, unsuccessful operation

If the *Requested SRS Transmission Characteristics* IE is included in the POSITIONING INFORMATION REQUEST message and the NG-RAN node is unable to configure any SRS transmissions for the UE, it shall respond with a POSITIONING INFORMATION FAILURE message. If a handover of the target UE has been triggered, the NG-RAN node shall send a POSITIONING INFORMATION FAILURE message with an appropriate cause value.

If the NG-RAN node is unable to provide any of the requested information, the NG-RAN node shall respond with a POSITIONING INFORMATION FAILURE message with an appropriate cause value.

8.2.6.4 Abnormal Conditions

Void.

8.2.7 Positioning Information Update

8.2.7.1 General

The Positioning Information Update procedure is initiated by the NG-RAN node to indicate to the LMF that a change has occurred in the SRS configuration or in the UE Tx TEG association. This procedure applies only if the NG-RAN node is a gNB.

8.2.7.2 Successful Operation

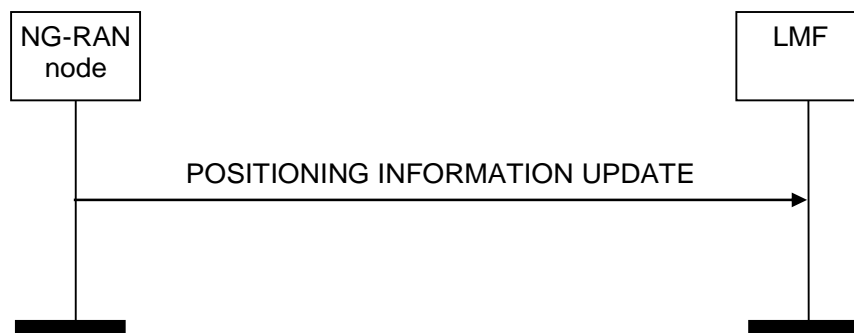


Figure 8.2.7.2-1: Positioning Information Update procedure, successful operation

The NG-RAN node initiates the procedure by sending a POSITIONING INFORMATION UPDATE message to the LMF. If the *SRS Configuration* IE is included in the POSITIONING INFORMATION UPDATE message, the LMF shall consider this information as the updated SRS Configuration for the UE. If the *SFN Initialisation Time* IE is included in the POSITIONING INFORMATION UPDATE message, the LMF shall consider this information as the SFN Initialisation Time associated to the SRS Configuration.

If the *UE Tx TEG Association List* IE is included in the POSITIONING INFORMATION UPDATE message, the LMF shall consider it as the UE Tx TEG association for the SRS resources that have changed their TEG association during the latest reporting interval.

If the *SRS Transmission Status* IE is included in the POSITIONING INFORMATION UPDATE message and set to "stopped", the LMF shall consider that the SRS transmission has stopped.

8.2.7.3 Unsuccessful Operation

Not Applicable.

8.2.7.4 Abnormal Conditions

Void.

8.2.8 TRP Information Exchange

8.2.8.1 General

The purpose of the TRP Information Exchange procedure is to allow the LMF to request the NG-RAN node to provide detailed information for TRPs hosted by the NG-RAN node. This procedure applies only if the NG-RAN node is a gNB.

8.2.8.2 Successful Operation

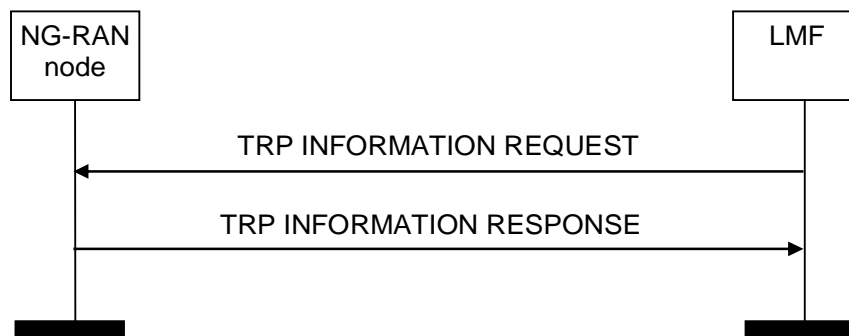


Figure 8.2.8.2-1: TRP Information Exchange procedure, successful operation

The LMF initiates the procedure by sending a TRP INFORMATION REQUEST message. The NG-RAN node responds with a TRP INFORMATION RESPONSE message that contains the requested TRP information.

If the *TRP List* IE is included in the TRP INFORMATION REQUEST message, the NG-RAN node should include in the TRP INFORMATION RESPONSE message, the requested information for all TRPs included in the *TRP List* IE.

If the *TRP List* IE is not included in the TRP INFORMATION REQUEST message, the NG-RAN node should include the requested information for all TRPs hosted by the NG-RAN node in the TRP INFORMATION RESPONSE message

If the *PRS Muting* IE is included in the *PRS Configuration* IE in the TRP INFORMATION RESPONSE message, the LMF may take it into account as the muting information for the given PRS resource set.

If the *QCL Info* IE is included in the *PRS Configuration* IE in the TRP INFORMATION RESPONSE message, the LMF may take it into account for the given PRS resource list.

If the *DL-PRS Resource Coordinates* IE is included in the *Geographical Coordinates* IE in the *TRP Information* IE in the TRP INFORMATION RESPONSE message, the LMF may take it into account as the DL PRS Resource Coordinates relative to the TRP coordinate.

8.2.8.3 Unsuccessful Operation

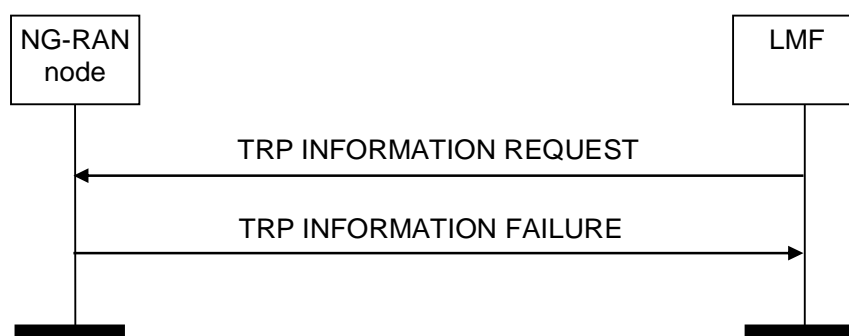


Figure 8.2.8.3-1: TRP Information Exchange procedure, unsuccessful operation

If the NG-RAN node cannot provide any of the requested information for any TRP, the NG-RAN node shall respond with a TRP INFORMATION FAILURE message.

8.2.8.4 Abnormal Conditions

Void.

8.2.9 Positioning Activation

8.2.9.1 General

The Positioning Activation procedure is initiated by the LMF to request the NG-RAN node to activate semi-persistent or trigger aperiodic UL SRS transmission by the UE. This procedure applies only if the NG-RAN node is a gNB.

8.2.9.2 Successful Operation

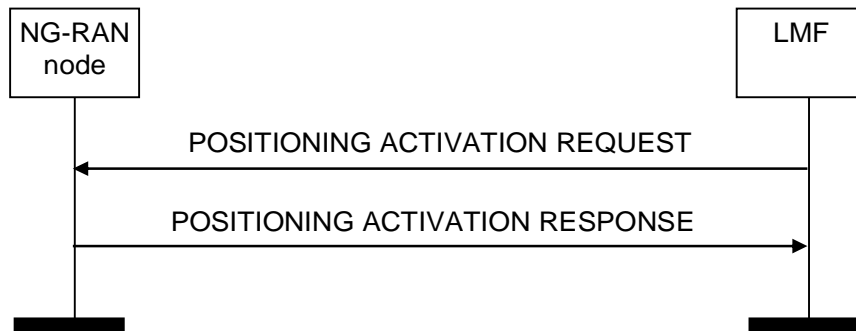


Figure 8.2.9.2-1: Positioning Activation procedure, successful operation

The LMF initiates the procedure by sending a POSITIONING ACTIVATION REQUEST message to the NG-RAN node.

For semi-persistent UL SRS, the POSITIONING ACTIVATION REQUEST message includes an indication of the UL SRS resource set to be activated and may include the spatial relation for the semi-persistent UL SRS resource to be activated. For aperiodic UL SRS, if the *SRS Resource Trigger* IE is included in the POSITIONING ACTIVATION REQUEST message, the NG-RAN node shall take the value of this IE into account when triggering aperiodic SRS transmission by the UE.

If the *Activation Time* IE is included in the POSITIONING ACTIVATION REQUEST message, the NG-RAN node shall take the indicated value as the LMF's requested time for activation of the UE's SRS transmission.

Following successful activation of UL SRS transmission in the UE, the NG-RAN node shall respond with a POSITIONING ACTIVATION RESPONSE message. If the POSITIONING ACTIVATION RESPONSE message includes the *System Frame Number* and/or the *Slot Number* IEs, the LMF shall consider that the respective information indicates the activation time of SRS transmission by the UE.

8.2.9.3 Unsuccessful Operation

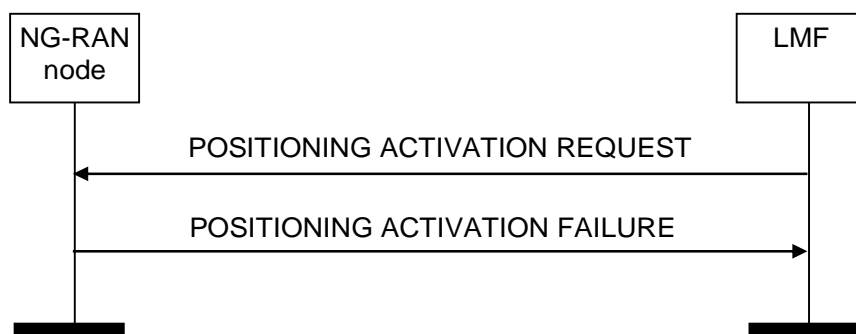


Figure 8.2.9.3-1: Positioning Activation procedure, unsuccessful operation

If the NG-RAN node is unable to activate UL SRS transmission in the UE, it shall respond with a POSITIONING ACTIVATION FAILURE message.

If the NG-RAN node is unable to trigger the aperiodic SRS transmission with the indicated *SRS Resource Trigger* IE, it shall respond with a POSITIONING ACTIVATION FAILURE message with an appropriate cause value.

8.2.9.4 Abnormal Conditions

Void.

8.2.10 Positioning Deactivation

8.2.10.1 General

The Positioning Deactivation procedure is initiated by the LMF to indicate to the NG-RAN node that UL SRS transmission should be deactivated in the UE. This procedure applies only if the NG-RAN node is a gNB.

8.2.10.2 Successful Operation



Figure 8.2.10.2-1: Positioning Deactivation procedure, successful operation

The LMF initiates the procedure by sending a POSITIONING DEACTIVATION message to the NG-RAN node. This message shall include an indication of the UL SRS resource set to be deactivated or release all the related resources.

8.2.10.3 Unsuccessful Operation

Not Applicable.

8.2.10.4 Abnormal Conditions

Void.

8.2.11 PRS Configuration Exchange

8.2.11.1 General

The PRS Configuration Exchange procedure is initiated by the LMF to request the NG-RAN node to configure or update (i.e., turn off) PRS transmission. This procedure applies only if the NG-RAN node is a gNB.

8.2.11.2 Successful Operation

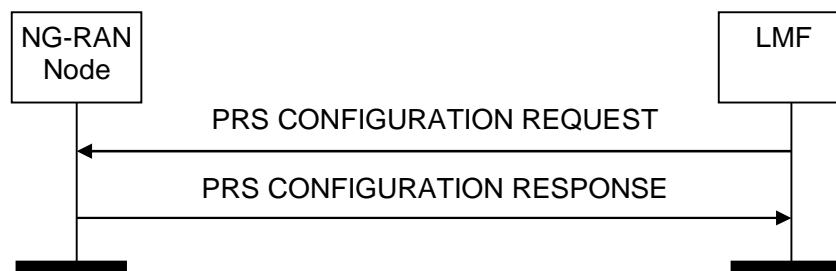


Figure 8.2.11.2-1: PRS Configuration Exchange procedure, successful operation

The LMF initiates the procedure by sending a PRS CONFIGURATION REQUEST message to the NG-RAN.

If the *PRS Configuration Request Type* IE is set to “configure”, the NG-RAN node should use the information in the *Requested DL PRS Transmission Characteristics* IE to configure DL-PRS transmission by the indicated TRP(s).

If the *PRS Configuration Request Type* IE is set to “off”, the NG-RAN node should, if supported, use the information in the *PRS Transmission Off Information* IE to turn off the DL-PRS transmission for the indicated TRP(s), PRS Resource Set(s), or PRS Resource(s).

If DL-PRS transmission is successfully configured or updated for at least one of the TRPs, the NG-RAN node shall respond with a PRS CONFIGURATION RESPONSE message.

8.2.11.3 Unsuccessful Operation

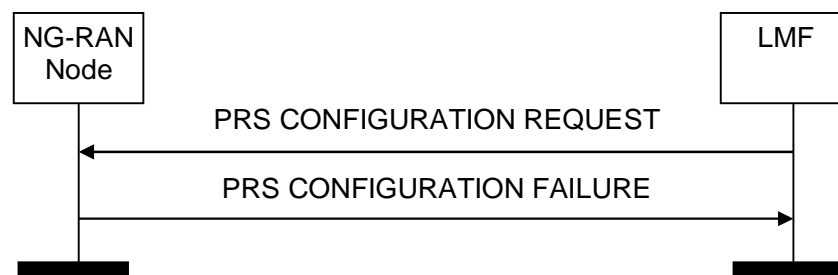


Figure 8.2.11.3-1: PRS Configuration Exchange procedure, unsuccessful operation

If the NG-RAN node cannot configure or update DL-PRS transmission for any of the TRPs in the *PRS TRP List* IE of the PRS CONFIGURATION REQUEST message, it shall respond with a PRS CONFIGURATION FAILURE message with an appropriate cause value.

8.2.11.4 Abnormal Conditions

Void.

8.2.12 Measurement Preconfiguration

8.2.12.1 General

The Measurement Preconfiguration procedure allows the LMF to provide necessary information to the serving gNB and request the gNB to preconfigure measurement gap and/or PRS processing window for the UE. This procedure applies only if the NG-RAN node is a gNB.

8.2.12.2 Successful Operation

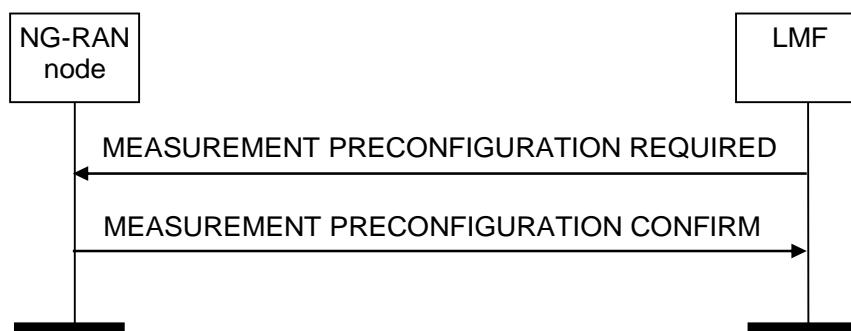


Figure 8.2.12.2-1: Measurement Preconfiguration procedure, successful operation

The LMF initiates the procedure by sending a MEASUREMENT PRECONFIGURATION REQUIRED message.

If the NG-RAN node is able to configure measurement gap or PRS processing window, it shall reply with the MEASUREMENT PRECONFIGURATION CONFIRM message.

8.2.12.3 Unsuccessful Operation

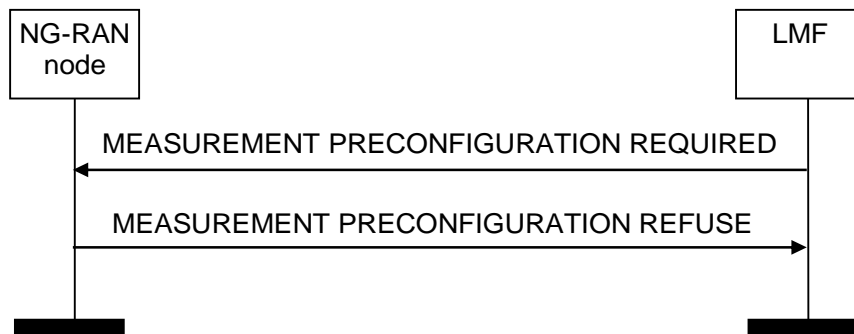


Figure 8.2.12.3-1: Measurement Preconfiguration procedure, unsuccessful operation

If the NG-RAN node cannot configure any of the measurement gap or PRS processing window, the NG-RAN node shall respond with a MEASUREMENT PRECONFIGURATION REFUSE message. Upon receiving the MEASUREMENT PRECONFIGURATION REFUSE message, the LMF shall release the reserved PPW resources.

8.2.12.4 Abnormal Conditions

Void.

8.2.13 Measurement Activation

8.2.13.1 General

The Measurement Activation procedure is initiated by the LMF to request the NG-RAN node to activate or deactivate the preconfigured measurement gap or PRS processing window for the UE. This procedure applies only if the NG-RAN node is a gNB.

8.2.13.2 Successful Operation



Figure 8.2.13.2-1: Measurement Activation procedure, successful operation

The LMF initiates the procedure by sending a MEASUREMENT ACTIVATION message to the NG-RAN node.

If the *PRS Measurement Info List* IE is included in the MEASUREMENT ACTIVATION message, the NG-RAN node may take it into account when activating pre-configured measurement gap in the UE.

8.2.13.3 Unsuccessful Operation

Not Applicable.

8.2.13.4 Abnormal Conditions

Void.

8.3 Management Procedures

8.3.1 Error Indication

8.3.1.1 General

The Error Indication procedure is initiated by a node to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

8.3.1.2 Successful Operation

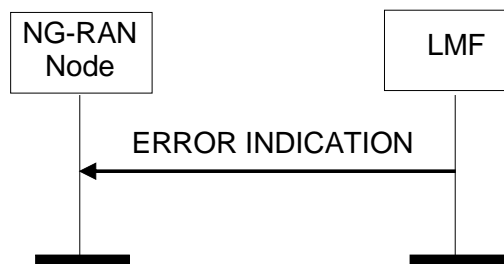


Figure 8.3.1.2-1: Error Indication procedure, LMF originated, successful operation

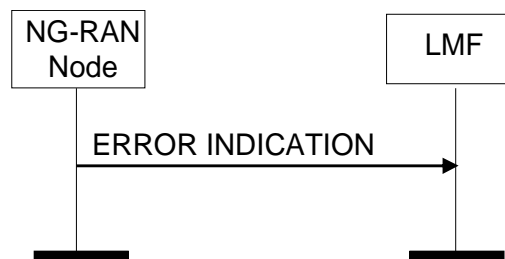


Figure 8.3.1.2-2: Error Indication procedure, NG-RAN node originated, successful operation

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the receiving node.

The ERROR INDICATION message shall contain at least either the *Cause* IE or the *Criticality Diagnostics* IE.

8.3.1.3 Abnormal Conditions

Not applicable.

8.4 Assistance Information Transfer Procedures

8.4.1 Assistance Information Control

8.4.1.1 General

The purpose of the Assistance Information Control procedure is to allow the LMF to signal positioning assistance information to the NG-RAN Node for assistance information broadcasting. This procedure applies only if the NG-RAN node is a gNB.

8.4.1.2 Successful Operation



Figure 8.4.1.2-1: Assistance Information Control procedure

The LMF initiates the procedure by sending an ASSISTANCE INFORMATION CONTROL message.

If the *Assistance Information* IE is included in the ASSISTANCE INFORMATION CONTROL message, the NG-RAN Node shall, if supported, replace any previously stored assistance information and use the received information to configure assistance information broadcasting.

If the *Broadcast Priority* IE is included in the *Assistance Information* IE, the NG-RAN Node may take it into account when configuring broadcasting for the relevant information. Assistance information having the same Broadcast Priority value should receive the same treatment (i.e. broadcast by the NG-RAN Node or not broadcast).

If the *Broadcast* IE is included in the ASSISTANCE INFORMATION CONTROL message and set to "start", the NG-RAN Node may start broadcasting the assistance information. If the *Broadcast* IE is included in the ASSISTANCE INFORMATION CONTROL message and set to "stop", the NG-RAN Node may stop broadcasting the assistance information.

If the *Positioning Broadcast Cells* IE is included in the ASSISTANCE INFORMATION CONTROL message, the NG-RAN shall, if supported, consider that the received assistance information is applicable to the cells in this IE.

8.4.1.3 Abnormal Conditions

If the *Broadcast* IE is included in the ASSISTANCE INFORMATION CONTROL message and set to "start", and no assistance information is available, the NG-RAN Node shall consider the procedure as failed.

If neither the *Assistance Information* IE nor the *Broadcast* IE are included in the ASSISTANCE INFORMATION CONTROL message, the NG-RAN Node shall consider the procedure as failed.

8.4.2 Assistance Information Feedback

8.4.2.1 General

The purpose of the Assistance Information Feedback procedure is to allow the NG-RAN Node to give feedback to the LMF on assistance information broadcasting. This procedure applies only if the NG-RAN node is a gNB.

8.4.2.2 Successful Operation



Figure 8.4.2.2-1: Assistance Information Feedback procedure

If the *Assistance Information Failure List* IE is included in the ASSISTANCE INFORMATION FEEDBACK message, the LMF shall consider that assistance information broadcasting could not be configured for the relevant information.

If the *Positioning Broadcast Cells* IE is included in the ASSISTANCE INFORMATION FEEDBACK message, the LMF shall consider that the feedback provided is applicable to the cells in this IE.

8.4.2.3 Abnormal Conditions

Void.

8.5 Measurement Information Transfer

8.5.1 Measurement

8.5.1.1 General

The Measurement procedure allows the LMF to request one or more TRPs in the NG-RAN node to perform and report positioning measurements. This procedure applies only if the NG-RAN node is a gNB.

8.5.1.2 Successful Operation

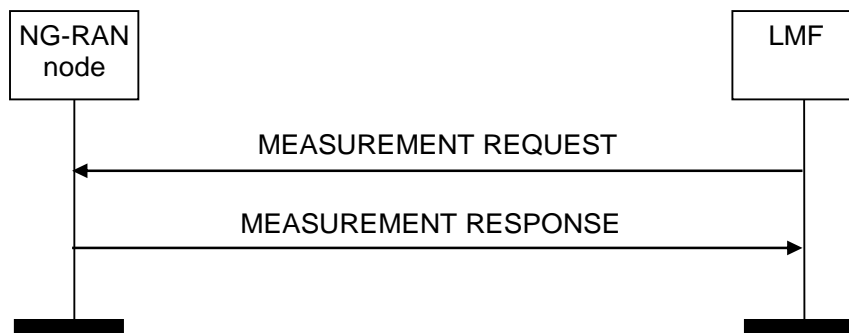


Figure 8.5.1.2.1: Measurement procedure. Successful operation.

The LMF initiates the procedure by sending a MEASUREMENT REQUEST message to the NG-RAN node, indicating in the *TRP Measurement Request List* IE the TRP(s) from which measurements are requested. The NG-RAN node shall use the included information to configure positioning measurements by the indicated TRP(s). If at least one of the requested measurements has been successful for at least one of the TRPs, the NG-RAN node shall reply with a MEASUREMENT RESPONSE message including the *TRP Measurement Response List* IE.

If the *Report Characteristics* IE is set to "OnDemand", the NG-RAN node shall return the corresponding measurement results in the MEASUREMENT RESPONSE message, and the LMF shall consider that this reporting has been terminated by the NG-RAN node. If the *Report Characteristics* IE is set to "Periodic", the NG-RAN node shall initiate the corresponding measurements, and it shall reply with the MEASUREMENT RESPONSE message without including any measurement results in the message. The NG-RAN node shall then periodically initiate the Measurement Report procedure for the corresponding measurements, with the requested reporting periodicity.

If the *Measurement Beam Information Request* IE is included in the MEASUREMENT REQUEST message, the NG-RAN node shall include the *Measurement Beam Information* IE in the *TRP Measurement Result* IE of the MEASUREMENT RESPONSE message.

If the *Measurement Quality* IE is included in the *TRP Measurement Result* IE in the MEASUREMENT RESPONSE message, the LMF may take it into account as the TRP estimate of the measurement quality. If the *Measurement Quality* IE includes the *Zenith Quality* IE, the LMF may take it into account within the angle measurement quality.

If the *Timing Reporting Granularity Factor* IE is included in the *TRP Measurement Quantities* IE in the MEASUREMENT REQUEST message, the NG-RAN node may take it into account when configuring measurements including UL RTOA and gNB Rx-Tx Time Difference.

If the *System Frame Number IE* and/or the *Slot Number IE* are included in the MEASUREMENT REQUEST message, the NG-RAN node shall, if supported, consider that the respective information indicates the activation time of SRS transmission.

If the *Report Characteristics IE* is set to "OnDemand" and the *Response Time IE* is included in the MEASUREMENT REQUEST message, the NG-RAN node shall, if supported, return the corresponding measurement results in the MEASUREMENT RESPONSE message within the indicated time.

If the *Measurement Characteristics Request Indicator IE* is included in the MEASUREMENT REQUEST message, the NG-RAN node shall, if supported, take the requested measurement characteristics into account when configuring measurements, and include the requested information, if available, in the MEASUREMENT RESPONSE message.

If the *Number of TRP Rx TEGs IE* is included in the MEASUREMENT REQUEST message, the NG-RAN node shall, if supported, use it to measure the same SRS resource with different TRP Rx TEGs for the indicated TRP, and report the corresponding UL-RTOA and/or gNB Rx-Tx time difference measurements.

If the *Number of TRP RxTx TEGs IE* is included in the MEASUREMENT REQUEST message, the NG-RAN node shall, if supported, use it to measure the same SRS resource with different TRP RxTx TEGs with the same TRP Tx TEG for the indicated TRP, and report the corresponding gNB Rx-Tx time difference measurements.

If the *Measurement Time Occasion IE* is included in the MEASUREMENT REQUEST message, the NG-RAN node may take it into account as the number of SRS measurement time occasions for a measurement instance.

Interaction with the Measurement Report procedure:

If the *Report Characteristics IE* is set to "Periodic" and the *Measurement Amount IE* is included in the MEASUREMENT REQUEST message, the NG-RAN node shall, if supported, take it into account for sending the MEASUREMENT REPORT message.

8.5.1.3 Unsuccessful Operation

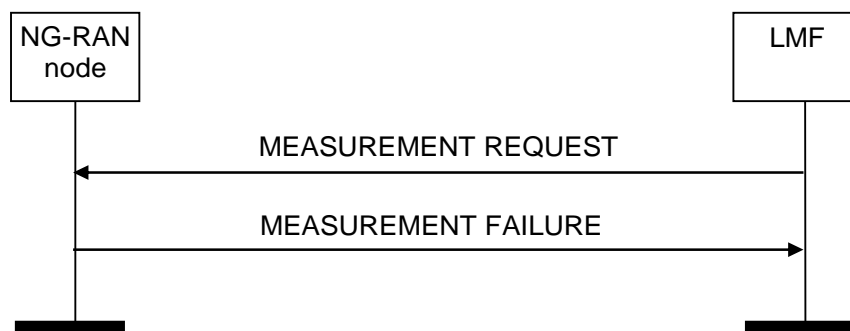


Figure 8.5.1.3.1: Measurement procedure. Unsuccessful operation.

If the NG-RAN node cannot configure any of the requested measurements for any of the TRPs in the *TRP Measurement Request List IE* of the MEASUREMENT REQUEST message, it shall respond with a MEASUREMENT FAILURE message with an appropriate cause value.

8.5.1.4 Abnormal Conditions

If the *Report Characteristics IE* is set to "OnDemand" and the *Response Time IE* is included in the MEASUREMENT REQUEST message but the NG-RAN node is unable to provide the measurement results within the indicated time, the NG-RAN node shall, if supported, respond with a MEASUREMENT FAILURE message with an appropriate cause value.

8.5.2 Measurement Report

8.5.2.1 General

The Measurement Report procedure allows the NG-RAN node to report positioning measurements to the LMF. This procedure applies only if the NG-RAN node is a gNB.

8.5.2.2 Successful Operation



Figure 8.5.2.2.1: Measurement Report procedure. Successful operation.

The NG-RAN node initiates the procedure by sending a MEASUREMENT REPORT message to the LMF. The MEASUREMENT REPORT message contains the measurement results according to the associated measurement configuration.

8.5.2.3 Abnormal Conditions

Void.

8.5.3 Measurement Update

8.5.3.1 General

The Measurement Update Procedure allows the LMF to notify the NG-RAN node of a change in a previously configured measurement. This procedure applies only if the NG-RAN node is a gNB.

8.5.3.2 Successful Operation



Figure 8.5.3.2.1: Measurement Update: Successful Operation.

The LMF initiates the procedure by sending a MEASUREMENT UPDATE message.

If the *SRS Configuration* IE is included in the MEASUREMENT UPDATE message, the NG-RAN node shall overwrite the previously stored SRS configuration.

If the *AoA Search Window Information* IE is included in the *TRP Measurement Update List* IE in the MEASUREMENT UPDATE message, the NG-RAN node shall clear any previously stored AoA search window information and store the newly received information.

If the *Number of TRP Rx TEGs* IE is included in the *TRP Measurement Update List* IE in the MEASUREMENT UPDATE message, the NG-RAN node shall clear any previously stored information and store the newly received information.

If the *Number of TRP RxTx TEGs* IE is included in the *TRP Measurement Update List* IE in the MEASUREMENT UPDATE message, the NG-RAN node shall clear any previously stored information and store the newly received information.

If the *Measurement Characteristics Request Indicator* IE is included in the MEASUREMENT UPDATE message, the NG-RAN node shall clear any previously stored information and store the newly received information.

If the *Measurement Time Occasion* IE is included in the MEASUREMENT UPDATE message, the NG-RAN node shall clear any previously stored information and store the newly received information.

8.5.3.3 Unsuccessful Operation

Not applicable.

8.5.3.4 Abnormal Conditions

If the NG-RAN node cannot identify at least one of the previously requested measurement to be modified, it shall consider the procedure as failed and initiate local error handling.

8.5.4 Measurement Abort

8.5.4.1 General

The purpose of the Measurement Abort Procedure is to enable the LMF to abort an on-going measurement. This procedure applies only if the NG-RAN node is a gNB.

8.5.4.2 Successful Operation



Figure 8.5.4.2.1: Measurement Abort Procedure: Successful Operation.

The LMF initiates the procedure by sending a MEASUREMENT ABORT message.

Upon receiving this message, the NG-RAN node shall terminate the on-going measurement identified by the *LMF Measurement ID* IE and may release any resources previously allocated for the same measurement.

8.5.4.3 Unsuccessful Operation

Not applicable.

8.5.4.4 Abnormal Conditions

If the NG-RAN node cannot identify the previously requested measurement to be aborted, it shall ignore the MEASUREMENT ABORT message.

8.5.5 Measurement Failure Indication

8.5.5.1 General

The Measurement Failure Indication procedure allows the NG-RAN node to notify the LMF that the measurements previously requested with the Measurement procedure can no longer be reported. This procedure applies only if the NG-RAN node is a gNB.

8.5.5.2 Successful Operation



Figure 8.5.5.2.1: Measurement Report procedure. Successful operation.

Upon reception of the MEASUREMENT FAILURE INDICATION message, the LMF shall consider that the indicated measurements have been terminated by the NG-RAN node.

8.5.5.3 Abnormal Conditions

Void.

9 Elements for NRPPa Communication

9.0 General

Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the NRPPa protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 38.413 [2].

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [5].

9.1 Message Functional Definition and Content

9.1.1 Messages for Location Information Transfer Procedures

9.1.1.1 E-CID MEASUREMENT INITIATION REQUEST

This message is sent by LMF to initiate E-CID measurements.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------|----------|-------|---|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF UE Measurement ID | M | | INTEGER (1..15 ,..., 16..256) | | YES | reject |
| Report Characteristics | M | | ENUMERATED (OnDemand, Periodic,...) | | YES | reject |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|--|----------------|--|--|-------------|----------------------|
| Measurement Periodicity | C-ifReportCharacteristicsPeriodic | | ENUMERATED (120ms, 240ms, 480ms, 640ms, 1024ms, 2048ms, 5120ms, 10240ms, 1min, 6min, 12min, 30min, 60min,..., 20480ms, 40960ms, extended) | The codepoint 60min applies only for ng-eNB. The codepoint "extended" is not applicable. This IE is not applicable to NR Angle of Arrival. | YES | reject |
| Measurement Quantities | | 1 | | | EACH | reject |
| >Measurement Quantities Item | | 1..<maxnoMeas> | | | - | |
| >>Measurement Quantities Value | M | | ENUMERATED (Cell-ID, Angle of Arrival, Timing Advance Type 1, Timing Advance Type 2, RSRP, RSRQ,..., SS-RSRP, SS-RSRQ, CSI-RSRP, CSI-RSRQ, NR Angle of Arrival, NR Timing Advance) | | - | - |
| Other-RAT Measurement Quantities | | 0 | | | EACH | ignore |
| >Other-RAT Measurement Quantities Item | | 0..<maxnoMeas> | | | - | |
| >>Other-RAT Measurement Quantities Value | M | | ENUMERATED (GERAN, UTRAN,..., NR, EUTRA) | | - | |
| WLAN Measurement Quantities | | 0 | | | EACH | ignore |
| >WLAN Measurement Quantities Item | | 0..<maxnoMeas> | | | - | |
| >>WLAN Measurement Quantities Value | M | | ENUMERATED (WLAN, ...) | | - | |
| Measurement Periodicity NR-AoA | C-ifReportCharacteristicsPeriodicAndMeasurementQuantityItemAoA | | ENUMERATED (160ms, 320ms, 640ms, 1280ms, 2560ms, 5120ms, 10240ms, 20480ms, 40960ms, 61440ms, 81920ms, 368640ms, 737280ms, 1843200ms, ...) | | YES | reject |

| Range bound | Explanation |
|-------------|---|
| maxnoMeas | Maximum no. of measured quantities that can be configured and reported with one message. Value is 64. |

| Condition | Explanation |
|---|--|
| ifReportCharacteristicsPeriodic | This IE shall be present if the <i>Report Characteristics</i> IE is set to the value "Periodic". |
| ifReportCharacteristicsPeriodicAndMeasQuantityItemAoA | This IE shall be present if the <i>Report Characteristics</i> IE is set to the value "Periodic" and the <i>Measurement Quantities Item</i> IE is set to the value "NR Angle of Arrival". |

9.1.1.2 E-CID MEASUREMENT INITIATION RESPONSE

This message is sent by NG-RAN node to indicate that the requested E-CID measurement is successfully initiated.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| RAN UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| E-CID Measurement Result | O | | 9.2.5 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |
| Cell Portion ID | O | | 9.2.12 | | YES | ignore |
| Other-RAT Measurement Result | O | | 9.2.13 | | YES | ignore |
| WLAN Measurement Result | O | | 9.2.14 | | YES | ignore |

9.1.1.3 E-CID MEASUREMENT INITIATION FAILURE

This message is sent by NG-RAN node to indicate that the requested E-CID measurement cannot be initiated.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.4 E-CID MEASUREMENT FAILURE INDICATION

This message is sent by NG-RAN node to indicate that the previously requested E-CID measurement can no longer be reported.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------|----------|-------|------------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| RAN UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| Cause | M | | 9.2.1 | | YES | ignore |

9.1.1.5 E-CID MEASUREMENT REPORT

This message is sent by NG-RAN node to report the results of the requested E-CID measurement.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------|----------|-------|------------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| RAN UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| E-CID Measurement Result | M | | 9.2.5 | | YES | ignore |
| Cell Portion ID | O | | 9.2.12 | | YES | ignore |

9.1.1.6 E-CID MEASUREMENT TERMINATION COMMAND

This message is sent by the LMF to terminate the requested E-CID measurement.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------|----------|-------|------------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |
| RAN UE Measurement ID | M | | INTEGER (1..15,..., 16..256) | | YES | reject |

9.1.1.7 OTDOA INFORMATION REQUEST

This message is sent by LMF to request OTDOA information.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| OTDOA Information Type | | 1 | | | EACH | reject |
| >OTDOA Information | | 1.. | | | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------|----------|-------------------|--|-----------------------|-------------|----------------------|
| Type Item | | <maxnoOTDOAtypes> | | | | |
| >>OTDOA Information Item | M | | ENUMERATED (pci, cellid, tac, earfcn, prsBandwidth, prsConfigIndex, cpLength, noDIFrames, noAntennaPorts, sFNInitTime, nG-RANAccessPointPosition, prsmutingconfiguration, prsid, tpid, tpType, crsCPLength, dlBandwidth, multipleprsConfigurationsperCell, prsOccasionGroup, prsFrequencyHoppingConfiguration, ..., tddConfig) | | - | |

| Range bound | Explanation |
|-----------------|--|
| maxnoOTDOAtypes | Maximum no. of OTDOA information types that can be requested and reported with one message. Value is 63. |

9.1.1.8 OTDOA INFORMATION RESPONSE

This message is sent by NG-RAN node to provide OTDOA information.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------------------------|-----------------------|--|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| OTDOA Cells | | 1 .. <maxCellinRANnode> | | Served cells/TPs that broadcast PRS. May be used to signal multiple PRS configurations per cell/TPs (up to 3 are supported in this release). | GLOBAL | ignore |
| >OTDOA Cell Information | M | | 9.2.15 | | - | |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

| Range bound | Explanation |
|------------------|---|
| maxCellinRANnode | Maximum no. cells that can be served by a RAN Node. Value is 16384. |

9.1.1.9 OTDOA INFORMATION FAILURE

This message is sent by NG-RAN node to indicate that the OTDOA information cannot be provided.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.10 POSITIONING INFORMATION REQUEST

This message is sent by the LMF to request positioning information.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|--------------------------|-------|--|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Requested SRS Transmission Characteristics | O | | 9.2.27 | | YES | ignore |
| UE Reporting Information | O | | 9.2.70 | | YES | ignore |
| UE TEG Information Request | O | | ENUMERATED (onDemand, periodic, stop, ...) | | YES | ignore |
| UE TEG Reporting Periodicity | C-ifUeTegInfoReqPeriodic | | ENUMERATED (160ms, 320ms, 1280ms, 2560ms, 61440ms, 81920ms, 368640ms, 737280ms, ...) | | YES | reject |

| Condition | Explanation |
|------------------------|--|
| ifUeTegInfoReqPeriodic | This IE shall be present if the <i>UE TEG Information Request</i> IE is set to the value "periodic". |

9.1.1.11 POSITIONING INFORMATION RESPONSE

This message is sent by the NG-RAN node to provide positioning information.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------------|----------|-------|---------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| SRS Configuration | O | | 9.2.28 | | YES | ignore |
| SFN Initialisation Time | O | | Relative Time 1900 9.2.36 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |
| UE Tx TEG Association List | O | | 9.2.78 | | YES | ignore |

9.1.1.12 POSITIONING INFORMATION FAILURE

This message is sent by the NG-RAN node to indicate that the positioning information cannot be provided.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.13 POSITIONING INFORMATION UPDATE

This message is sent by the NG-RAN node to indicate that a change in the SRS configuration or UE Tx TEG association has occurred.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------------|----------|-------|---------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| SRS Configuration | O | | 9.2.28 | | YES | ignore |
| SFN Initialisation Time | O | | Relative Time 1900 9.2.36 | | YES | ignore |
| UE Tx TEG Association List | O | | 9.2.78 | | YES | ignore |
| SRS Transmission Status | O | | ENUMERATED (stopped, ...) | | YES | ignore |

9.1.1.14 TRP INFORMATION REQUEST

This message is sent by an LMF to request information for TRPs hosted by an NG-RAN node.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------|----------|--------------------------------|---|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| TRP List | | 0..1 | | | YES | ignore |
| >TRP Item | | 1.. <maxnoT RPs> | | | EACH | ignore |
| >>TRP ID | M | | 9.2.24 | | - | |
| TRP Information Type List | | 1 | | | | |
| >TRP Information Type Item | | 1.. <maxnoT RPInfoTypes> | | | EACH | reject |
| >>TRP Information Type Item | M | | ENUMERATED (nr pci, ng-ran cgi, nr arfcn, prs config, ssb config, sfn init time, spatial | | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|---|-----------------------|-------------|----------------------|
| | | | direction info, geo-coordinates, ..., trp type, on-demand prs, trp tx teg, beam antenna info) | | | |

| Range bound | Explanation |
|-------------------|---|
| maxnoTRPs | Maximum no. of TRPs in a NG-RAN node. Value is 65535 |
| maxnoTRPInfoTypes | Maximum no of TRP information types that can be requested and reported with one message. Value is 64. |

9.1.1.15 TRP INFORMATION RESPONSE

This message is sent by an NG-RAN node to convey TRP information to an LMF.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------|----------|------------------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| TRP Information List | | 1 | | | YES | ignore |
| >TRP Information Item | M | 1 .. <maxnoTRPs> | | | EACH | ignore |
| >>TRP Information | M | | 9.2.25 | | - | |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

| Range bound | Explanation |
|-------------|---|
| maxnoTRPs | Maximum no. of TRPs in a NG-RAN node. Value is 65535. |

9.1.1.16 TRP INFORMATION FAILURE

This message is sent by an NG-RAN node to indicate that the requested TRP information cannot be provided to an LMF.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.17 POSITIONING ACTIVATION REQUEST

This message is sent by the LMF to cause the NG RAN node to activate/trigger UL SRS transmission by the UE.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|--|---|-------------|----------------------|
| CHOICE <i>SRS type</i> | M | | | | YES | reject |
| > <i>Semi-persistent</i> | | | | | | |
| >>SRS Resource Set ID | M | | 9.2.33 | | - | |
| >>SRS Spatial Relation | O | | Spatial Relation Information 9.2.34 | This IE is ignored if the <i>Spatial Relation Information per SRS Resource</i> IE is present. | YES | ignore |
| >>Spatial Relation Information per SRS Resource | O | | 9.2.60 | | YES | ignore |
| > <i>Aperiodic</i> | | | | | | |
| >>Aperiodic | M | | ENUMERATED (true,...) | | - | |
| >>SRS Resource Trigger | O | | 9.2.35 | | - | |
| Activation Time | O | | Relative Time 1900 9.2.36 | Indicates the start time when the SRS activation is requested | YES | ignore |

9.1.1.18 POSITIONING ACTIVATION RESPONSE

This message is sent by NG-RAN node to confirm successful UL SRS activation in the UE.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |
| System Frame Number | O | | INTEGER(0..1023) | | YES | ignore |
| Slot Number | O | | INTEGER(0..79) | | YES | ignore |

9.1.1.19 POSITIONING ACTIVATION FAILURE

This message is sent by NG-RAN node to indicate that activation of UL SRS transmission in the UE was unsuccessful.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.20 POSITIONING DEACTIVATION

This message is sent by the LMF to cause the NG RAN node to deactivate UL SRS transmission or release all the transmission by the UE.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|-------|-----------------------|--|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| CHOICE <i>Abort Transmission</i> | M | | | | YES | Ignore |
| > <i>Deactivate SRS Resource Set</i> | | | | | | |
| >>SRS Resource Set ID | M | | 9.2.33 | | - | |
| > <i>Release ALL</i> | | | NULL | the NG-RAN node configures UE to stop transmitting SRS for the positioning purpose | | |

9.1.1.21 PRS CONFIGURATION REQUEST

This message is sent by the LMF to request the NG-RAN node to configure or update PRS transmission.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|------------------|----------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| PRS Configuration Request Type | M | | ENUMERATED (configure, off, ...) | | YES | reject |
| PRS TRP List | | 1 | | | YES | ignore |
| >PRS TRP Item | | 1 .. <maxnoTRPs> | | | EACH | ignore |
| >>TRP ID | M | | 9.2.24 | | - | |
| >>Requested DL PRS Transmission Characteristics | C-ifConf | | 9.2.61 | | - | |
| >>PRS Transmission Off Information | C-ifOff | | 9.2.64 | | - | |

| Range bound | Explanation |
|-------------|--|
| maxnoTRPs | Maximum no. of TRPs in a NG-RAN node. Value is 65535 |

| Condition | Explanation |
|-----------|---|
| ifConf | This IE shall be present if the <i>PRS Configuration Request Type</i> IE is set to the value "configure". |
| ifOff | This IE shall be present if the <i>PRS Configuration Request Type</i> IE is set to the value "off". |

9.1.1.22 PRS CONFIGURATION RESPONSE

This message is sent by the NG-RAN node to acknowledge configuring or updating the PRS transmission.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------------|----------|-------------------------|-----------------------|-----------------------|-------------|----------------------|
| PRS Transmission TRP List | | 0..1 | | | YES | ignore |
| >PRS Transmission TRP Item | | 1 .. <maxnoT RPs> | | | EACH | ignore |
| >>TRP ID | M | | 9.2.24 | | - | |
| >>PRS Configuration | M | | 9.2.44 | | - | |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

| Range bound | Explanation |
|-------------|--|
| maxnoTRPs | Maximum no. of TRPs in a NG-RAN node. Value is 65535 |

9.1.1.23 PRS CONFIGURATION FAILURE

This message is sent by the NG-RAN node to indicate that it cannot configure any PRS transmission.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.24 MEASUREMENT PRECONFIGURATION REQUIRED

This message is sent by the LMF to provide the PRS configuration information of multiple TRPs to the NG-RAN node and request to configure measurement gap or PRS processing window of the UE.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|----------------------------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| TRP PRS Information List | | 1 | | | YES | ignore |
| >TRP PRS Information Item | | 1 .. <maxnoP RSTRPs> | | | EACH | ignore |
| >>TRP ID | M | | 9.2.24 | | - | |
| >>NR PCI | M | | INTEGER (0..1007) | | - | |
| >>NR CGI | O | | 9.2.9 | | - | |
| >>PRS Configuration | M | | 9.2.44 | | - | |

| Range bound | Explanation |
|--------------|---|
| maxnoPRSTRPs | Maximum no. of TRPs for on-demand PRS in a NG-RAN node. Value is 256. |

9.1.1.25 MEASUREMENT PRECONFIGURATION CONFIRM

This message is sent by the NG-RAN node to the LMF to confirm successful configuration of measurement gap or PRS

processing window of the UE.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|--|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Preconfiguration Result | M | | BIT STRING (SIZE(8)) | Indicates what has been preconfigured in the UE. first bit: measurement gaps second bit: PRS processing windows. Other bits reserved for future use. Value '1' indicates 'has been preconfigured', Value '0' indicates 'not preconfigured'. | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.26 MEASUREMENT PRECONFIGURATION REFUSE

This message is sent by the NG-RAN node to indicate that configuration of measurement gap or PRS processing window of the UE was unsuccessful.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.1.27 MEASUREMENT ACTIVATION

This message is sent by the LMF to request the NG-RAN node to activate or deactivate the preconfigured measurement gap or PRS processing window for the UE.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|--|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Request Type | M | | ENUMERATED (activate, deactivate, ...) | | YES | reject |
| PRS Measurement Info List | | 0..1 | | | YES | Ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------------|----------|-----------------------|---|--|-------------|----------------------|
| >PRS Measurement Info Item | | 1 .. < maxFreqLayers> | | | - | |
| >>Point A | M | | INTEGER (0..3279165) | | - | |
| >>MeasPRS Periodicity | M | | ENUMERATED (ms20, ms40, ms80, ms160, ...) | Measurement gap periodicity in units of ms | - | |
| >>MeasPRS Offset | M | | INTEGER (0..159, ...) | Measurement gap offset in units of subframes | - | |
| >>Measurement PRS Length | M | | ENUMERATED {ms1dot5, ms3, ms3dot5, ms4, ms5dot5, ms6, ms10, ms20} | | - | |

| Range bound | Explanation |
|---------------|---|
| maxFreqLayers | Maximum no. of frequency layers. Value is 4 |

9.1.2 Messages for Management Procedures

9.1.2.1 ERROR INDICATION

This message is used to indicate that some error has been detected in the NG-RAN node or in the LMF.

Direction: LMF → NG-RAN node and NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Cause | O | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.3 Messages for Assistance Information Transfer Procedures

9.1.3.1 ASSISTANCE INFORMATION CONTROL

This message is sent by the LMF to transfer assistance information.

Direction: LMF → NG-RAN Node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------|----------|-------|-------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Assistance Information | O | | 9.2.19 | | YES | reject |
| Broadcast | O | | ENUMERATED (start, stop, ...) | | YES | reject |
| Positioning Broadcast Cells | O | | 9.2.59 | The cell(s) that are requested to broadcast posSIB(s) according to the Assistance Information IE. | YES | reject |

9.1.3.2 ASSISTANCE INFORMATION FEEDBACK

This message is sent by the NG-RAN Node to give feedback on assistance information broadcasting.

Direction: NG-RAN Node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------------------|----------|-------|-----------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| Assistance Information Failure List | O | | 9.2.23 | | YES | reject |
| Positioning Broadcast Cells | O | | 9.2.59 | The cells associated to the feedback provided in the <i>Assistance Information Failure List</i> IE. | YES | reject |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.4 Messages for Measurement Information Transfer Procedures

9.1.4.1 MEASUREMENT REQUEST

This message is sent by the LMF to request the NG-RAN node to configure a positioning measurement.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------|-----------------------------------|-----------------------|---|--|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| TRP Measurement Request List | | 1 | | | YES | reject |
| >TRP Measurement Request Item | | 1..<maxno ofMeasTRPs> | | | EACH | reject |
| >>TRP ID | M | | 9.2.24 | | - | |
| >>Search Window Information | O | | 9.2.26 | | - | |
| >>Cell ID | O | | NR CGI 9.2.9 | The Cell ID of the TRP identified by the <i>TRP ID</i> IE. | YES | ignore |
| >>AoA Search Window Information | O | | UL-AoA Assistance Information 9.2.66 | | YES | ignore |
| >>Number of TRP Rx TEGs | O | | ENUMERATED (2, 3, 4, 6, 8, ...) | | YES | ignore |
| >>Number of TRP RxTx TEGs | O | | ENUMERATED (2, 3, 4, 6, 8, ...) | | YES | ignore |
| Report Characteristics | M | | ENUMERATED (OnDemand, Periodic, ...) | | YES | reject |
| Measurement Periodicity | C-ifReportCharacteristicsPeriodic | | ENUMERATED (120ms, 240ms, 480ms, 640ms, 1024ms, | The codepoint 120ms, 240ms, 480ms, 1024ms, 2048ms, 1min, | YES | reject |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------------|---------------------|---|--|-------------|----------------------|
| | | | 2048ms, 5120ms, 10240ms, 1min, 6min, 12min, 30min, 60min,..., 20480ms, 40960ms, extended) | 6min, 12min, 30min, and 60min are not applicable | | |
| TRP Measurement Quantities | | 1 | | | YES | reject |
| >TRP Measurement Quantities Item | | 1 .. <maxnoPosMeas> | | | EACH | reject |
| >>TRP Measurement Type | M | | ENUMERATED (gNB-RxTxTimeDiff, UL-SRS-RSRP, UL-AoA, UL-RTOA,..., Multiple UL-AoA, UL SRS-RSRPP) | | - | |
| >>Timing Reporting Granularity Factor | O | | INTEGER (0..5) | Value (0..5) corresponds to (k0..k5) TS 38.133 [16] | - | |
| SFN initialisation Time | O | | Relative Time 1900 9.2.36 | If this IE is not present, the TRP may assume that the value is same as its own SFN initialisation time. | YES | ignore |
| SRS Configuration | O | | 9.2.28 | | YES | ignore |
| Measurement Beam Information Request | O | | ENUMERATED (true,...) | This IE is ignored when the <i>Measurement Characteristics Request Indicator</i> IE is included. | YES | ignore |
| System Frame Number | O | | INTEGER(0..1023) | | YES | ignore |
| Slot Number | O | | INTEGER(0..79) | | YES | ignore |
| Measurement Periodicity Extended | C-ifMeasPerExt | | ENUMERATED (160ms, 320ms, 1280ms, 2560ms, 61440ms, 81920ms, 368640ms, 737280ms, 1843200ms, ...) | | YES | reject |
| Response Time | O | | 9.2.68 | This IE is ignored when the <i>Report Characteristics</i> IE is set to "periodic". | YES | ignore |
| Measurement Characteristics Request Indicator | O | | 9.2.81 | | YES | ignore |
| Measurement Time Occasion | O | | ENUMERATED (o1, o4, ...) | | YES | ignore |
| Measurement Amount | O | | ENUMERATED (0, 1, 2, 4, 8, 16, 32, 64) | This IE is ignored if the <i>Report Characteristics</i> IE is set to | YES | ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|--|-------------|----------------------|
| | | | | 'OnDemand'. Value 0 represents an infinite number of periodic reporting. | | |

| Condition | Explanation |
|---------------------------------|---|
| ifReportCharacteristicsPeriodic | This IE shall be present if the <i>Report Characteristics</i> IE is set to the value "Periodic". |
| ifMeasPerExt | This IE shall be present if the <i>Measurement Periodicity</i> IE is set to the value "extended". |

| Range bound | Explanation |
|-----------------|--|
| maxnoPosMeas | Maximum no. of measured quantities that can be configured and reported with one positioning measurement message. Value is 16384. |
| maxnoofMeasTRPs | Maximum no. of TRPs that can be included within one message. Value is 64. |

9.1.4.2 MEASUREMENT RESPONSE

This message is sent by the NG-RAN node to report positioning measurements for the target UE.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-----------------------|-------------------------|--|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| RAN Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| TRP Measurement Response List | | 0..1 | | | YES | reject |
| >TRP Measurement Response Item | | 1..<maxno ofMeasTRPs> | | | EACH | reject |
| >>TRP ID | M | | 9.2.24 | | - | |
| >>TRP Measurement Result | M | | 9.2.37 | | - | |
| >>Cell ID | O | | NR CGI 9.2.9 | The Cell ID of the TRP identified by the <i>TRP ID</i> IE. | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

| Range bound | Explanation |
|-----------------|---|
| maxnoofMeasTRPs | Maximum no. of TRPs that can be included within one message. Value is 64. |

9.1.4.3 MEASUREMENT FAILURE

This message is sent by the NG-RAN node to report measurement failure.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|----------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| Cause | M | | 9.2.1 | | YES | ignore |
| Criticality Diagnostics | O | | 9.2.2 | | YES | ignore |

9.1.4.4 MEASUREMENT REPORT

This message is sent by the NG-RAN node to report positioning measurements for the target UE.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-----------------------|----------------------------|--|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| RAN Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| TRP Measurement Response List | | 1 | | | YES | reject |
| >TRP Measurement Response Item | | 1..<maxno ofMeasTRPs> | | | EACH | reject |
| >>TRP ID | M | | 9.2.24 | | - | |
| >>TRP Measurement Result | M | | 9.2.37 | | - | |
| >>Cell ID | O | | NR CGI 9.2.9 | The Cell ID of the TRP identified by the <i>TRP ID</i> IE. | YES | ignore |

| Range bound | Explanation |
|-----------------|---|
| maxnoofMeasTRPs | Maximum no. of TRPs that can be included within one message. Value is 64. |

9.1.4.5 MEASUREMENT UPDATE

This message is sent by the LMF to update a previously configured measurement.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-----------------------|----------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | ignore |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| RAN Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| SRS Configuration | O | | 9.2.28 | | YES | ignore |
| TRP Measurement Update List | | 0..1 | | | YES | reject |
| >TRP Measurement Update Item | | 1..<maxno ofMeasTRPs> | | | EACH | reject |
| >>TRP ID | M | | 9.2.24 | | - | |
| >>AoA Search | O | | UL-AoA | | YES | ignore |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|---------------------------------|-----------------------|-------------|----------------------|
| Window Information | | | Assistance Information 9.2.66 | | | |
| >>Number of TRP Rx TEGs | O | | ENUMERATED (2, 3, 4, 6, 8, ...) | | YES | ignore |
| >>Number of TRP RxTx TEGs | O | | ENUMERATED (2, 3, 4, 6, 8, ...) | | YES | ignore |
| Measurement Characteristics Request Indicator | O | | 9.2.81 | | YES | ignore |
| Measurement Time Occasion | O | | ENUMERATED (o1, o4, ...) | | YES | ignore |

| Range bound | Explanation |
|-----------------|---|
| maxnoofMeasTRPs | Maximum no. of TRPs that can be included within one message. Value is 64. |

9.1.4.6 MEASUREMENT ABORT

This message is sent by the LMF to request the NG-RAN node to abort a measurement.

Direction: LMF → NG-RAN node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|-------|-------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| RAN Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |

9.1.4.7 MEASUREMENT FAILURE INDICATION

This message is sent by the NG-RAN node to indicate that the previously requested measurements can no longer be reported.

Direction: NG-RAN node → LMF.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|-------|-------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.3 | | YES | reject |
| NRPPa Transaction ID | M | | 9.2.4 | | - | |
| LMF Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| RAN Measurement ID | M | | INTEGER (1..65536, ...) | | YES | reject |
| Cause | M | | 9.2.1 | | YES | ignore |

9.2 Information Element definitions

9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in

the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

9.2.1 Cause

The purpose of the cause information element is to indicate the reason for a particular event for the whole protocol.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------------|----------|-------|--|-----------------------|
| CHOICE Cause Group | M | | | |
| >Radio Network Layer | | | | |
| >>Radio Network Layer Cause | M | | ENUMERATED (Unspecified, Requested Item not Supported, Requested Item Temporarily not Available, ..., Serving NG-RAN node changed, Requested Item not Supported on Time) | |
| >Protocol | | | | |
| >>Protocol Cause | M | | ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message), ...) | |
| >Misc | | | | |
| >>Miscellaneous Cause | M | | ENUMERATED (Unspecified, ...) | |

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerned capability is missing. On the other hand, "not available" cause values indicate that the concerned capability is present, but insufficient resources were available to perform the requested action.

| Radio Network Layer cause | Meaning |
|--|--|
| Unspecified | Sent when none of the above cause values applies but still the cause is Radio Network Layer related |
| Requested Item not Supported | The NG-RAN node does not support the requested measurement object, or cannot provide the requested information item. |
| Requested Item Temporarily not Available | The NG-RAN node can temporarily not provide the requested measurement object or information item. |

| Radio Network Layer cause | Meaning |
|--------------------------------------|---|
| Serving NG-RAN node changed | The UE has moved to another serving NG-RAN node. |
| Requested Item not Supported on Time | The NG-RAN node is unable to provide the measurement results on time. |

| Protocol cause | Meaning |
|---|---|
| Abstract Syntax Error (Reject) | The received message included an abstract syntax error and the concerned criticality indicated "reject" (see sub clause 10.3 of TS 38.413) |
| Abstract Syntax Error (Ignore and Notify) | The received message included an abstract syntax error and the concerned criticality indicated "ignore and notify" (see sub clause 10.3 of TS 38.413) |
| Abstract syntax error (falsely constructed message) | The received message contained IEs or IE groups in wrong order or with too many occurrences (see sub clause 10.3 of TS 38.413) |
| Message not Compatible with Receiver State | The received message was not compatible with the receiver state (see sub clause 10.4 of TS 38.413) |
| Semantic Error | The received message included a semantic error (see sub clause 10.4 of TS 38.413) |
| Transfer Syntax Error | The received message included a transfer syntax error (see sub clause 10.2 of TS 38.413) |
| Unspecified | Sent when none of the above cause values applies but still the cause is Protocol related |

| Miscellaneous cause | Meaning |
|---------------------|--|
| Unspecified | Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol. |

9.2.2 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the NG-RAN node or LMF when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing. The conditions for inclusion of the *NRPPa Transaction ID* IE are described in clause 10.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|----------------------|---|---|
| Procedure Code | O | | INTEGER (0..255) | Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error. |
| Triggering Message | O | | ENUMERATED (initiating message, successful outcome, unsuccessful outcome) | The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure. |
| Procedure Criticality | O | | ENUMERATED (reject, ignore, notify) | This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure). |
| NRPPa Transaction ID | O | | 9.2.4 | |
| Information Element Criticality Diagnostics | | 0 .. <maxNrOfErrors> | | |
| >IE Criticality | M | | ENUMERATED (reject, ignore, notify) | The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" shall not be used. |
| >IE ID | M | | INTEGER (0..65535) | The IE ID of the not understood or missing IE. |
| >Type Of Error | M | | ENUMERATED (not understood, missing, ...) | |

| Range bound | Explanation |
|---------------|--|
| maxNrOfErrors | Maximum no. of IE errors allowed to be reported with a single message. The value for maxNrOfErrors is 256. |

9.2.3 Message Type

The *Message Type* IE uniquely identifies the message being sent. It is mandatory for all messages.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------|----------|-------|--|-----------------------|
| Procedure Code | M | | INTEGER (0..255) | |
| Type of Message | M | | CHOICE (Initiating Message, Successful Outcome , Unsuccessful Outcome, ...) | |

9.2.4 NRPPa Transaction ID

The *NRPPa Transaction ID* IE is used to associate all the messages belonging to the same procedure. Messages belonging to the same procedure shall use the same NRPPa Transaction ID.

The NRPPa Transaction ID is determined by the initiating peer of a procedure.

The NRPPa Transaction ID shall uniquely identify a procedure among all ongoing parallel procedures using the same procedure code, and initiated by the same protocol peer.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------|----------|-------|-----------------------|-----------------------|
| NRPPa Transaction ID | M | | INTEGER (0..32767) | |

9.2.5 E-CID Measurement Result

The purpose of the E-CID Measurement Result information element is to provide the E-CID measurement result.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|-----------------------|---|-------------|----------------------|
| Serving Cell ID | M | | NG-RAN CGI 9.2.6 | NG-RAN Cell Identifier of the serving cell | - | |
| Serving Cell TAC | M | | TAC 9.2.11 | Tracking Area Code of the serving cell | - | |
| NG-RAN Access Point Position | O | | 9.2.10 | The configured estimated geographical position of the antenna of the cell. If the <i>Geographical Coordinates</i> IE is used, the <i>NG-RAN Access Point Position</i> IE shall be ignored. | - | |
| Measured Results | | 0..1 | | Measurement results of the serving RAT. | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|---------------------------------------|----------|--------------------------|--------------------------|---|-------------|----------------------|
| >CHOICE <i>Measured Results Value</i> | | 1 ..<maxno Meas> | | | - | |
| >>Value Angle of Arrival EUTRA | | | INTEGER (0..719) | According to mapping in TS 36.133 [9] | | |
| >>Value Timing Advance Type 1 EUTRA | | | INTEGER (0..7690) | As defined in TS 36.214 [17] | | |
| >>Value Timing Advance Type 2 EUTRA | | | INTEGER (0..7690) | As defined in TS 36.214 [17] | | |
| >>Result RSRP EUTRA | | | | | | |
| >>>Result RSRP EUTRA Item | | 1 .. <maxCell Report> | | | - | |
| >>>>PCI EUTRA | M | | INTEGER (0..503) | Physical Cell Identifier of the reported E-UTRA cell | - | |
| >>>>EARFCN | M | | INTEGER (0..262143, ...) | Corresponds to NDLC for FDD and NDLC/UL for TDD in ref. TS 36.104 [7] | - | |
| >>>>CGI EUTRA | O | | 9.2.7 | Cell Global Identifier of the reported E-UTRA cell | - | |
| >>>>Value RSRP EUTRA | M | | INTEGER (0..97, ...) | | - | |
| >>Result RSRQ EUTRA | | | | | | |
| >>>Result RSRQ EUTRA Item | | 1 .. <maxCell Report> | | | - | |
| >>>>PCI EUTRA | M | | INTEGER (0..503) | Physical Cell Identifier of the reported E-UTRA cell | - | |
| >>>>EARFCN | M | | INTEGER (0..262143, ...) | Corresponds to NDLC for FDD and NDLC/UL for TDD in ref. TS 36.104 [7] | - | |
| >>>>CGI EUTRA | O | | 9.2.7 | Cell Global Identifier of the reported E-UTRA cell | - | |
| >>>>Value RSRQ EUTRA | M | | INTEGER (0..34, ...) | | - | |
| >>Result SS-RSRP | | | | | YES | ignore |
| >>>Result SS-RSRP Item | | 1 .. <maxCell ReportNR > | | | - | |
| >>>>NR PCI | M | | INTEGER (0..1007) | | - | |
| >>>>NR ARFCN | M | | INTEGER (0..3279165) | | - | |
| >>>>NR CGI | O | | 9.2.9 | | - | |
| >>>>Value SS-RSRP Cell | O | | INTEGER (0..127) | SS-RSRP measurement aggregated at cell level | - | |
| >>>>SS-RSRP | | 0..1 | | | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|--|----------|--------------------------|-----------------------|---|-------------|----------------------|
| per SSB Resource | | | | | | |
| >>>>>SS-RSRP per SSB Resource Item | | 1 .. <maxIndexesReport > | | | - | |
| >>>>>SSB Index | M | | INTEGER (0..63) | | - | |
| >>>>>Value SS-RSRP | M | | INTEGER (0..127) | SS-RSRP measurement per SSB resource | - | |
| >>Result SS-RSRQ | | | | | YES | ignore |
| >>>ResultSS-RSRQ-Item | | 1 .. <maxCellReportNR > | | | - | |
| >>>>NR PCI | M | | INTEGER (0..1007) | | - | |
| >>>>NR ARFCN | M | | INTEGER (0..3279165) | | - | |
| >>>>NR CGI | O | | 9.2.9 | | - | |
| >>>>Value SS-RSRQ Cell | O | | INTEGER (0..127) | SS-RSRQ measurement aggregated at cell level | - | |
| >>>>SS-RSRQ per SSB Resource | | 0..1 | | | - | |
| >>>>>SS-RSRQ PerSSB Resource Item | | 1 .. <maxIndexesReport > | | | - | |
| >>>>>SSB Index | M | | INTEGER (0..63) | | - | |
| >>>>>Value SS-RSRQ | M | | INTEGER (0..127) | SS-RSRQ measurement per SSB resource | - | |
| >>Result CSI-RSRP | | | | | YES | ignore |
| >>>Result CSI-RSRP Item | | 1 .. <maxCellReportNR > | | | - | |
| >>>>NR PCI | M | | INTEGER (0..1007) | | - | |
| >>>>NR ARFCN | M | | INTEGER (0..3279165) | | - | |
| >>>>NR CGI | O | | 9.2.9 | | - | |
| >>>>Value CSI-RSRP Cell | O | | INTEGER (0..127) | CSI-RSRP measurement aggregated at cell level | - | |
| >>>>CSI-RSRP per CSI-RS Resource | | 0..1 | | | - | |
| >>>>>CSI-RSRP per CSI-RS Resource Item | | 1.. <maxIndexesReport > | | | - | |
| >>>>>CSI-RS Index | M | | INTEGER (0..95) | | - | |
| >>>>>Value CSI-RSRP | M | | INTEGER (0..127) | CSI-RSRP measurement per CSI-RS resource | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|--|----------|--------------------------------|----------------------------|---|-------------|----------------------|
| >>Result CSI-RSRQ | | | | | YES | ignore |
| >>>Result CSI-RSRQ Item | | 1 .. <maxCellReportNR > | | | - | |
| >>>>NR PCI | M | | INTEGER (0..1007) | | - | |
| >>>>NR ARFCN | M | | INTEGER (0..3279165) | | - | |
| >>>>NR CGI | O | | 9.2.9 | | - | |
| >>>>Value CSI-RSRQ Cell | O | | INTEGER (0..127) | CSI-RSRQ measurement aggregated at cell level | - | |
| >>>>CSI-RSRQ per CSI-RS Resource | | 0..1 | | | - | |
| >>>>>CSI-RSRQ per CSI-RS Resource Item | | 1 .. <maxIndexesReport > | | | - | |
| >>>>>CSI-RS Index | M | | INTEGER (0..95) | | - | |
| >>>>>Value CSI-RSRQ | M | | INTEGER (0..127) | CSI-RSRQ measurement per CSI-RS resource | - | |
| >>Angle of Arrival NR | | | UL Angle of Arrival 9.2.38 | | YES | ignore |
| >>Value Timing Advance NR | | | INTEGER (0..7690) | As defined in TS 38.215 [19] | YES | ignore |
| Geographical Coordinates | O | | 9.2.46 | | YES | ignore |

| Range bound | Explanation |
|------------------|---|
| maxnoMeas | Maximum no. of measured quantities that can be configured and reported with one message. Value is 64. |
| maxCellReport | Maximum no. of cells that can be reported with one message. Value is 9. |
| maxCellReportNR | Maximum no. of NR cells that can be reported with one message. Value is 9. |
| maxIndexesReport | Maximum no. of beam level measurement results that can be reported with one message. Value is 64. |

9.2.6 NG-RAN CGI

The NG-RAN Cell Global Identifier (CGI) is used to globally identify a cell.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------------|----------|-------|-----------------------|-----------------------|
| PLMN identity | M | | 9.2.8 | |
| CHOICE NG-RAN Cell | M | | | |
| >NR Cell | | | | |
| >>NR Cell Identifier | M | | BIT STRING (36) | |
| >E-UTRAN Cell | | | | |
| >>E-UTRAN Cell Identifier | M | | BIT STRING (28) | |

9.2.7 CGI EUTRA

The Cell Global Identifier EUTRA is used to globally identify an E-UTRA cell.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------|----------|-------|-----------------------|-----------------------|
| PLMN identity | M | | 9.2.8 | |
| E-UTRA Cell Identifier | M | | BIT STRING (28) | |

9.2.8 PLMN Identity

This IE indicates the PLMN Identity.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|------------------------|---|
| PLMN Identity | M | | OCTET STRING (SIZE(3)) | <p>Digits 0 to 9 encoded 0000 to 1001, 1111 used as filler digit.</p> <p>Two digits per octet:</p> <ul style="list-style-type: none"> - bits 4 to 1 of octet n encoding digit 2n-1 - bits 8 to 5 of octet n encoding digit 2n <p>PLMN Identity consists of 3 digits from MCC followed by either:</p> <ul style="list-style-type: none"> - a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or - 3 digits from MNC (in case of 3 digit MNC). |

9.2.9 NR CGI

The Cell Global Identifier NR is used to globally identify an NR cell.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|-------|-----------------------|-----------------------|
| PLMN Identity | M | | 9.2.8 | |
| NR Cell Identity | M | | BIT STRING (SIZE(36)) | |

9.2.10 NG-RAN Access Point Position

The *NG-RAN Access Point Position* IE is used to identify the geographical position of an NG-RAN Access Point. It is expressed as ellipsoid point with altitude and uncertainty ellipsoid according to TS 23.032 [8].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------|----------|-------|---|--|
| Latitude Sign | M | | ENUMERATED (North, South) | |
| Degrees Of Latitude | M | | INTEGER (0..2 ²³ -1) | The IE value (N) is derived by this formula: $N \leq 2^{23} \times X / 90 < N+1$ X being the latitude in degrees (0°.. 90°). |
| Degrees Of Longitude | M | | INTEGER (-2 ²³ ..2 ²³ -1) | The IE value (N) is derived by this formula: $N \leq 2^{24} \times X / 360 < N+1$ X being the longitude in degrees (-180°..+180°). |
| Direction of Altitude | M | | ENUMERATED | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------------|----------|-------|---------------------------------|--|
| | | | (Height, Depth) | |
| Altitude | M | | INTEGER (0..2 ¹⁵ -1) | The relation between the value (N) and the altitude (a) in meters it describes is $N \leq a < N+1$, except for $N=2^{15}-1$ for which the range is extended to include all greater values of (a). |
| Uncertainty semi-major | M | | INTEGER (0..127) | The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^{k-1})$. |
| Uncertainty semi-minor | M | | INTEGER (0..127) | The uncertainty "r" is derived from the "uncertainty code" k by $r = 10x(1.1^{k-1})$. |
| Orientation of major axis | M | | INTEGER (0..179) | |
| Uncertainty Altitude | M | | INTEGER (0..127) | The uncertainty altitude "h" expressed in metres is derived from the "uncertainty code" k, by: $h=45x(1.025^{k-1})$. |
| Confidence | M | | INTEGER (0..100) | In percentage |

9.2.11 TAC

This information element is used to uniquely identify a Tracking Area Code.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-------------------------|-----------------------|
| TAC | M | | OCTET STRING (SIZE (3)) | |

9.2.12 Cell Portion ID

This parameter gives the current Cell Portion associated with the target UE. The Cell Portion ID is the unique identifier for a cell portion within a cell.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------|----------|-------|-----------------------|-----------------------|
| Cell Portion ID | M | | INTEGER (0..4095,...) | |

9.2.13 Other-RAT Measurement Result

The purpose of the Other-RAT Measurement Result information element is to provide the measurement results of RATs other than the serving RAT.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|---|----------|---------------------------|------------------------|-----------------------|-------------|----------------------|
| Other-RAT Measured Results | | 1 | | | - | |
| >CHOICE <i>Other-RAT Measured Results Value</i> | | 1..<maxnoMeas> | | | - | |
| >>Result GERAN | | | | | | |
| >>>Result GERAN Item | | 1..<maxGERANMeasurements> | | | - | |
| >>>>ARFCN of BCCH | M | | INTEGER (0..1023, ...) | | - | |
| >>>>Physical | M | | INTEGER | | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|-----------------------------------|----------|-----------------------|-------------------------|--|-------------|----------------------|
| CellId GERAN | | | (0..63, ...) | | | |
| >>>>RSSI | M | | INTEGER (0..63, ...) | | - | |
| >>Result UTRAN | | | | | | |
| >>>Result UTRAN Item | | 1..<maxUTRANMeas> | | | - | |
| >>>>UARFCN | M | | INTEGER (0..16383, ...) | | - | |
| >>>>CHOICE Physical CellId UTRA | M | | | | - | |
| >>>>>Physical CellId UTRA FDD | | | INTEGER (0..511, ...) | | | |
| >>>>>Physical CellId UTRA TDD | | | INTEGER (0..127, ...) | | | |
| >>>>UTRA RSCP | O | | INTEGER (-5..91, ...) | | - | |
| >>>>UTRA EcNo | O | | INTEGER (0..49, ...) | This IE applies to FDD only. | - | |
| >>Result NR | | | | | YES | ignore |
| >>>Result NR Item | | 1..<maxNRMeas> | | | - | |
| >>>>NR PCI | M | | INTEGER (0..1007) | | - | |
| >>>>NR ARFCN | M | | INTEGER (0..3279165) | | - | |
| >>>>SS-RSRP Cell | O | | INTEGER (0..127) | SS-RSRP measurement aggregated at cell level | - | |
| >>>>SS-RSRQ Cell | O | | INTEGER (0..127) | SS-RSRQ measurement aggregated at cell level | - | |
| >>>>SS-RSRP per SSB Resource | | 0..1 | | | - | |
| >>>>>Result SS-RSRP Per SSB Item | | 1..<maxIndexesReport> | | | - | |
| >>>>>>SSB Index | M | | INTEGER (0..63) | | - | |
| >>>>>>Value SS-RSRP | M | | INTEGER (0..127) | SS-RSRP measurement per SSB resource | - | |
| >>>>>SS-RSRQ per SSB Resource | | 0..1 | | | - | |
| >>>>>>Result SS-RSRQ Per SSB Item | | 1..<maxIndexesReport> | | | - | |
| >>>>>>>SSB Index | M | | INTEGER (0..63) | | - | |
| >>>>>>>Value SS-RSRQ | M | | INTEGER (0..127) | SS-RSRQ measurement per SSB resource | - | |
| >>>>CGI NR | O | | 9.2.9 | Cell Global Identifier of the reported NR cell | - | |
| >>Result EUTRA | | | | | YES | ignore |
| >>>Result EUTRA Item | | 1..<maxEUTRAMeas> | | | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|----------------|----------|-------|-----------------------|--|-------------|----------------------|
| | | s> | | | | |
| >>>>PCI EUTRA | M | | INTEGER (0..503) | | - | |
| >>>>EARFCN | M | | INTEGER (0..262143) | | - | |
| >>>>RSRP EUTRA | O | | INTEGER (0..97) | | - | |
| >>>>RSRQ EUTRA | O | | INTEGER (0..34) | | - | |
| >>>>CGI EUTRA | O | | 9.2.7 | Cell Global Identifier of the reported E-UTRA cell | - | |

| Range bound | Explanation |
|------------------|---|
| maxnoMeas | Maximum no. of measured quantities that can be configured and reported with one message. Value is 64. |
| maxGERANMeas | Maximum no. of GERAN cells that can be reported with one message. Value is 8. |
| maxUTRANMeas | Maximum no. of UTRAN cells that can be reported with one message. Value is 8. |
| maxNRMeas | Maximum no. of NR cells that can be reported with one message. Value is 8. |
| maxEUTRAMeas | Maximum no. of EUTRA cells that can be reported with one message. Value is 8. |
| maxIndexesReport | Maximum no. of beam level measurement results that can be reported with one message. Value is 64. |

9.2.14 WLAN Measurement Result

The WLAN Measurement Result information element provides the WLAN measurement results.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|-----------------------|---|--|
| WLAN Measured Results | | 1 | | |
| >WLAN Measurement Result Item | | 1..<maxnoMeas> | | |
| >>WLAN RSSI | M | | INTEGER (0..141, ...) | |
| >>SSID | O | | OCTET STRING (SIZE(1..32)) | Includes the SSID field as defined in subclause 8.4.2.2 of IEEE 802.11™ [11]. |
| >>BSSID | M | | OCTET STRING (SIZE(6)) | Includes the BSSID field as defined in subclause 8.2.4.3.4 of IEEE 802.11™ [11]. |
| >>HESSID | O | | OCTET STRING (SIZE(6)) | Includes the HESSID field as defined in subclause 8.4.2.94 of IEEE 802.11™ [11]. |
| >>Operating Class | O | | INTEGER (0..255) | Indicates the WLAN Operating Class as defined in IEEE 802.11™ [11]. |
| >>Country Code | O | | ENUMERATED (unitedStates, europe, japan, global, ...) | Indicates the WLAN country code as defined in IEEE 802.11™ [11]. |
| >>WLAN Channel List | | 0..1 | | |
| >>>WLAN Channel List Item | | 1..<maxWLAN channels> | | |
| >>>>WLAN Channel | M | | INTEGER (0..255) | Indicates the WLAN channel number as defined in IEEE 802.11™ [11]. |
| >>WLAN Band | O | | ENUMERATED | Indicates the WLAN band as |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|-------------------------|-------------------------------|
| | | | (band2dot4, band5, ...) | defined in IEEE 802.11™ [11]. |

| Range bound | Explanation |
|-----------------|---|
| maxnoMeas | Maximum no. of measured quantities that can be configured and reported with one message. Value is 63. |
| maxWLANchannels | Maximum no. of WLAN channels that can be reported within one list. Value is 16. |

9.2.15 OTDOA Cell Information

This IE contains OTDOA information of a cell/TP.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned criticality |
|---|----------|----------------------------|--|---|-------------|----------------------|
| CHOICE OTDOA Cell Information item | | 1 <maxnoOTDOAtype s> | | | - | |
| >>PCI EUTRA | M | | INTEGER (0..503, ...) | Physical Cell ID of the reported E-UTRA cell. | - | |
| >>CGI EUTRA | M | | 9.2.7 | Cell Global Identifier of the E-UTRA cell. | - | |
| >>TAC | M | | 9.2.11 | Tracking Area Code | - | |
| >>EARFCN | M | | INTEGER (0..262143, ...) | Corresponds to NDLC for FDD and NDLC/UL for TDD in ref. TS 36.104 [7]. | - | |
| >>PRS Bandwidth EUTRA | M | | ENUMERATED (bw6, bw15, bw25, bw50, bw75, bw100, ...) | Transmission bandwidth of PRS | - | |
| >>PRS Configuration Index EUTRA | M | | INTEGER (0..4095, ...) | PRS Configuration Index, ref TS 36.211 [10] | - | |
| >>CP Length EUTRA | M | | ENUMERATED (Normal, Extended, ...) | Cyclic prefix length of the PRS | - | |
| >>Number of DL Frames EUTRA | M | | ENUMERATED (sf1, sf2, sf4, sf6, ...) | Number of consecutive downlink subframes NPRS with PRS, ref TS 36.211 [10] | - | |
| >>Number of Antenna Ports EUTRA | M | | ENUMERATED (n1-or-n2, n4, ...) | Number of used antenna ports, where n1-or-n2 corresponds to 1 or 2 ports, n4 corresponds to 4 ports | - | |
| >>SFN Initialisation Time EUTRA | M | | BIT STRING (64) | Time in seconds relative to 00:00:00 on 1 January 1900 (calculated as continuous time without leap | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned criticality |
|---------------------------------------|----------|-------|--|---|-------------|----------------------|
| | | | | seconds and traceable to a common time reference) where binary encoding of the integer part is in the first 32 bits and binary encoding of the fraction part in the last 32 bits. The fraction part is expressed with a granularity of $1/2^{32}$ second. | | |
| >>NG-RAN Access Point Position | M | | 9.2.10 | The configured estimated geographical position of the antenna of the cell/TP. | - | |
| >>PRS Muting Configuration EUTRA | M | | 9.2.16 | The configuration of positioning reference signals muting pattern. | - | |
| >>PRS-ID EUTRA | M | | INTEGER (0..4095, ...) | PRS ID, ref TS 36.211 [10]. | - | |
| >>TP-ID EUTRA | M | | INTEGER (0..4095, ...) | Identity of the transmission point. This IE together with the PCI and/or PRS-ID may be used to identify the transmission point in case the same physical cell ID is shared by multiple transmission points. | - | |
| >>TP Type EUTRA | M | | ENUMERATED (prs-only-tp, ...) | A TP which transmits PRS only. | - | |
| >>Number of DL Frames-Extended EUTRA | M | | INTEGER (1..160, ...) | Number of consecutive downlink subframes NPRS with PRS, ref TS 36.211 [10]. | - | |
| >>CRS CP Length EUTRA | M | | ENUMERATED (Normal, Extended, ...) | Cyclic prefix length of the CRS. | - | |
| >>DL Bandwidth EUTRA | M | | ENUMERATED (bw6, bw15, bw25, bw50, bw75, bw100, ...) | DL transmission bandwidth expressed in units of resource blocks NRB, ref TS 36.104 [7]. | - | |
| >>PRS Occasion Group EUTRA | M | | ENUMERATED (og2, og4, og8, og16, og32, og64, og128, ...) | PRS occasion group in a PRS period, ref TS 36.211 [10]. | - | |
| >>PRS Frequency Hopping Configuration | M | | 9.2.17 | PRS frequency hopping configuration. | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned criticality |
|------------------------------|----------|-------|-----------------------|--|-------------|----------------------|
| EUTRA | | | | | | |
| >>TDD Configuration EUTRA | M | | 9.2.18 | TDD specific physical channel configuration. | YES | ignore |
| >>NR CGI | M | | 9.2.9 | Cell Global Identifier of the NR cell. | YES | ignore |
| >>SFN Initialisation Time NR | M | | BIT STRING (64) | Time in seconds relative to 00:00:00 on 1 January 1900 (calculated as continuous time without leap seconds and traceable to a common time reference) where binary encoding of the integer part is in the first 32 bits and binary encoding of the fraction part in the last 32 bits. The fraction part is expressed with a granularity of $1/2^{**32}$ second. | YES | ignore |

| Range bound | Explanation |
|-----------------|--|
| maxnoOTDOAtypes | Maximum no. of OTDOA information types that can be requested and reported with one message. Value is 63. |

9.2.16 PRS Muting Configuration EUTRA

The *PRS Muting Configuration EUTRA* IE is used to describe the configuration of PRS muting patterns for the concerned cell/TP, according to TS 36.211 [10] and TS 36.133 [9].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|-------|-----------------------|---|
| CHOICE <i>PRS Muting Configuration</i> | M | | | |
| >Two | | | BIT STRING (2) | If a bit is set to "0", it indicates that the PRS is muted in the corresponding PRS positioning occasion (numbering from any sub frame for which SFN=0) in a periodic cycle of length equal to the length of the bit string |
| >Four | | | BIT STRING (4) | Same as above |
| >Eight | | | BIT STRING (8) | Same as above |
| >Sixteen | | | BIT STRING (16) | Same as above |
| >thirty-two | | | BIT STRING (32) | Same as above |
| >sixty-four | | | BIT STRING (64) | Same as above |
| >one-hundred-and-twenty-eight | | | BIT STRING (128) | Same as above |
| >two-hundred-and-fifty-six | | | BIT STRING (256) | Same as above |
| >five-hundred-and-twelve | | | BIT STRING (512) | Same as above |
| >one-thousand-and-twenty-four | | | BIT STRING (1024) | Same as above |

9.2.17 PRS Frequency Hopping Configuration EUTRA

The *PRS Frequency Hopping Configuration EUTRA* IE is used to describe the configuration of PRS frequency hopping for the concerned cell/TP, according to TS 36.211 [10].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------------------|----------|--|---------------------------------------|--|
| Number of Frequency Hopping Bands | M | | ENUMERATED (twobands, fourbands, ...) | Number of bands for frequency hopping. |
| Band Positions | | 1.. <maxnoFreqHoppingBandsMinusOne,...> | | |
| >NarrowBand Index | M | | INTEGER (0..15, ...) | Narrowband Index |

| Range bound | Explanation |
|-------------------------------|---|
| maxnoFreqHoppingBandsMinusOne | Maximum no. of frequency hopping bands minus one. Value is 7. |

9.2.18 TDD Configuration EUTRA

The *TDD Configuration EUTRA* IE is used to specify the TDD specific physical channel configuration.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------|----------|-------|---|--|
| Subframe Assignment | M | | ENUMERATED (sa0, sa1, sa2, sa3, sa4, sa5, sa6, ...) | sa0 points to Configuration 0, sa1 to Configuration 1 etc. as specified in TS 36.211 [6, table 4.2-2]. |

9.2.19 Assistance Information

This IE contains the assistance information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------------------|----------|--------------------------|---|--|
| Assistance Information | M | | | |
| >System Information | | 1..<maxNrOfPosSImessage> | | Corresponds to the number of SI messages with posSIBs to be scheduled |
| >>Broadcast Periodicity | M | | ENUMERATED (ms80, ms160, ms320, ms640, ms1280, ms2560, ms5120, ...) | Corresponds to information provided in <i>posSI-Periodicity</i> contained in the <i>PosSI-SchedulingInfo</i> IE as defined in TS 38.331 [13] |
| >>Pos SIBs | | 1..<maxNrOfPosSIBs> | | Number of posSIBs in the System Information. |
| >>>PosSIB-Type | M | | 9.2.22 | |
| >>>PosSIB Segments | M | | 9.2.20 | |
| >>>Assistance Information Meta Data | O | | 9.2.21 | |
| >>>Broadcast Priority | O | | INTEGER (1..16, ...) | The priority of the assistance Information where 1 represents the highest priority and 16 the lowest priority |

| Range bound | Explanation |
|---------------------|---|
| maxNrOfPosSImessage | Maximum number of positioning system information messages. Value is 32. |
| maxNrOfPosSIBs | Maximum number of positioning system information blocks |

| | |
|--|---------------------------------------|
| | included in the message. Value is 32. |
|--|---------------------------------------|

9.2.20 PosSIB Segments

This IE provides one posSIB or two or more posSIB segments which must be scheduled in series in consecutive transmissions of the same SI message.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------|----------|-----------------------------------|-----------------------|--|
| PosSIB Segments | | <i>1..<maxNrOfSegments></i> | | |
| >Assistance Data SIB Element | M | | OCTET STRING | Includes the <i>assistanceDataSIBElement</i> IE as defined in TS 37.355 [14] |

| Range bound | Explanation |
|-----------------|---|
| maxNrOfSegments | Maximum number of positioning SIB segments (in case of <i>Assistance Information Element</i> contains segmented data according to TS 37.355 [14]). Value is 64. |

9.2.21 Assistance Information Meta Data

This parameter contains meta data for an assistance information element.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|--|--|
| Encrypted | O | | ENUMERATED (true, ...) | Corresponds to information provided in <i>encrypted</i> contained in the <i>PosSI-SchedulingInfo</i> IE as defined in TS 38.331 [13] |
| GNSS ID | O | | ENUMERATED (gps, sbas, qzss, galileo, glonass, bds, navic ...) | Corresponds to information provided in <i>gnss-id</i> contained in the <i>PosSI-SchedulingInfo</i> IE as defined in TS 38.331 [13] |
| SBAS ID | O | | ENUMERATED (waas, egnos, msas, gagan, ...) | Corresponds to information provided in <i>sbas-id</i> contained in the <i>PosSI-SchedulingInfo</i> IE as defined in TS 38.331 [13] |

9.2.22 Positioning SIB Type

This parameter defines a specific positioning SIB, as defined in TS 38.331 [13].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------|----------|-------|--|-----------------------|
| Positioning SIB Type | M | | ENUMERATED (posSibType1-1, posSibType1-2, posSibType1-3, posSibType1-4, posSibType1-5, posSibType1-6, posSibType1-7, posSibType1-8, posSibType2-1, posSibType2-2, posSibType2-3, posSibType2-4, posSibType2-5, posSibType2-6, | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|---|-----------------------|
| | | | posSibType2-7, posSibType2-8, posSibType2-9, posSibType2-10, posSibType2-11, posSibType2-12, posSibType2-13, posSibType2-14, posSibType2-15, posSibType2-16, posSibType2-17, posSibType2-18, posSibType2-19, posSibType2-20, posSibType2-21, posSibType2-22, posSibType2-23, posSibType2-24, posSibType2-25, posSibType3-1, posSibType4-1, posSibType5-1, posSibType6-1, posSibType6-2, posSibType6-3, ..., posSibType1-9, posSibType1-10, posSibType6-4, posSibType6-5, posSibType6-6, posSibType2-17a, posSibType2-18a, posSibType2-20a) | |

9.2.23 Assistance Information Failure List

This parameter identifies the assistance information for which the NG-RAN Node failed to configure broadcasting.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|---|-----------------------------|-----------------------|
| Assistance Information Failure List | | <i>1..<maxnoAssistInfoFailureListItems></i> | | |
| >PosSIB-Type | M | | 9.2.22 | |
| >Outcome | M | | ENUMERATED (failed, ...) | |

| Range bound | Explanation |
|---------------------------------|--|
| maxnoAssistInfoFailureListItems | Maximum no. of assistance information failure list items that can be signaled with one message. Value is 32. |

9.2.24 TRP ID

The *TRP ID* IE is used to identify a TRP uniquely within an NG-RAN node.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------|----------|-------|---------------------------|--|
| TRP Identifier | M | | INTEGER (1..65535,...) | Identifies a TRP within an NG-RAN node |

9.2.25 TRP Information

The *TRP Information* IE contains information for one TRP within an NG-RAN node.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|-------------------------------------|----------|--------------------------|---|-----------------------|-------------|----------------------|
| TRP ID | M | | 9.2.24 | | - | |
| TRP Information Type | | 1 .. <maxnoTRPInfoTypes> | | | - | |
| >CHOICE <i>TRP Information Item</i> | M | | | | - | |
| >>NR PCI | | | INTEGER (0..1007) | NR Physical Cell ID | | |
| >>NR CGI | | | 9.2.9 | | | |
| >>NR ARFCN | | | INTEGER (0..3279165) | | | |
| >>PRS Configuration | | | 9.2.44 | | | |
| >>SSB Information | | | 9.2.54 | | | |
| >>SFN Initialisation Time | | | Relative Time 1900 9.2.36 | | | |
| >>Spatial Direction Information | | | 9.2.45 | | | |
| >>Geographical Coordinates | | | 9.2.46 | | | |
| >>TRP type | | | ENUMERATED (prs-only-tp, srs-only-rp, tp, rp, trp...) | TS 38.305 [18] | YES | reject |
| >>On-demand PRS TRP Information | | | 9.2.65 | | YES | reject |
| >>TRP Tx TEG Association | | | 9.2.79 | | YES | reject |
| >>TRP Beam Antenna Information | | | 9.2.82 | | YES | reject |

| Range bound | Explanation |
|-------------------|---|
| maxnoTRPInfoTypes | Maximum no of TRP information types that can be requested and reported with one message. Value is 64. |

9.2.26 Search Window Information

This information element contains search window information for the TRP.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------------|----------|-------|---------------------------|---|
| Expected Propagation Delay | M | | INTEGER (-3841..3841,...) | Indicates when the SRS is expected to arrive in time at the TRP relative to the UL RTOA Reference Time. The UL RTOA Reference Time for a target SRS is defined as $T_0 + t_{SRS}$, where - T_0 is the SFN Initialisation Time - $t_{SRS} = (10n_f + n_{sf}) \times 10^{-3}$, where n_f and n_{sf} are the system frame number and the subframe |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------|----------|-------|-----------------------|---|
| | | | | number of the SRS, respectively. Granularity 4Ts, where $T_s=1/(15 \cdot 10^3 \cdot 2048)$ seconds. Centre of the search window. |
| Delay Uncertainty | M | | INTEGER (1..246,...) | Indicates the uncertainty of the expected SRS arrival time at the TRP Granularity 4Ts, where $T_s=1/(15 \cdot 10^3 \cdot 2048)$ seconds. Single-sided search window. |

9.2.27 Requested SRS Transmission Characteristics

This IE contains the requested SRS configuration for the UE.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|-----------------------------------|---------------------------|--------------------------------|--|---|-------------|----------------------|
| Number Of Periodic Transmissions | C-ifResource TypePeriodic | | INTEGER (0..500,...) | The number of periodic SRS transmissions requested. The value of '0' represents an infinite number of periodic SRS transmissions. | - | |
| Resource Type | M | | ENUMERATED (periodic, semi-persistent, aperiodic, ...) | | - | |
| CHOICE <i>Bandwidth</i> | M | | | | - | |
| >FR1 | | | ENUMERATED (5mHz, 10mHz, 20mHz, 40mHz, 50mHz, 80mHz, 100mHz, ...) | | | |
| >FR2 | | | ENUMERATED (50mHz, 100mHz, 200mHz, 400mHz, ... , 800mHz, 1600mHz, 2000mHz) | | | |
| SRS Resource Set List | | 0.. 1 | | | - | |
| >SRS Resource Set Item | | 1..<maxnoSRS-Resource Sets> | | | - | |
| >>Number of SRS Resources Per Set | O | | INTEGER (1..16,...) | The number of SRS Resources per resource set for SRS transmission. | - | |
| >>>Periodicity List | | 0.. 1 | | | - | |
| >>>>Periodicity List Item | | 1..<maxno SRS-Resource PerSet> | | | - | |
| >>>>>PeriodicitySRS | M | | ENUMERATED (0.125, 0.25, 0.5, 0.625, 1, 1.25, 2, 2.5, 4, | Milli-seconds | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|---|----------|-------|--|---|-------------|----------------------|
| | | | 5, 8, 10, 16, 20, 32, 40, 64, 80, 160, 320, 640, 1280, 2560, 5120, 10240, ...) | | | |
| >>Spatial Relation Information | O | | 9.2.34 | This IE is ignored if the <i>Spatial Relation Information per SRS Resource</i> IE is present. | - | |
| >>Pathloss Reference Information | O | | 9.2.53 | | - | |
| >>Spatial Relation Information per SRS Resource | O | | 9.2.60 | | - | |
| SSB Information | O | | 9.2.54 | | - | |
| SRS Frequency | O | | INTEGER(0..3279165) | NR ARFCN The carrier frequency of SRS transmission bandwidth. | YES | ignore |

| Condition | Explanation |
|------------------------|---|
| ifResourceTypePeriodic | This IE shall be present if the <i>Resource Type</i> IE is set to the value "Periodic". |

| Range bound | Explanation |
|-------------------------|--|
| maxnoSRS-ResourceSets | Maximum no of requested SRS Resource Sets for SRS transmission. Value is 16. |
| maxnoSRS-ResourcePerSet | Maximum no of SRS Resources per set. Value is 16. |

9.2.28 SRS Configuration

This information element contains the SRS configuration configured by the NG-RAN node for the UE.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------------------|----------|------------------------|---|---|
| SRS Carrier List | | 1 | | |
| >SRS Carrier List Item | | 1..<maxnoSRS-Carriers> | | |
| >>Point A | M | | INTEGER (0..3279165) | NR ARFCN |
| >>Uplink Channel BW-PerSCS-List | | 1 | | Corresponds to <i>sCS-SpecificCarrierList</i> in TS 38.331 [13] |
| >>>SCS Specific Carrier | | 1..<maxnoSCSs> | | |
| >>>>Offset To Carrier | M | | INTEGER(0..2199, ...) | First usable RB to Point A in the number of PRBs |
| >>>>Subcarrier Spacing | M | | ENUMERATED(kHz 15, kHz30, kHz60, kHz120, ..., kHz480, kHz960) | |
| >>>>Carrier Bandwidth | M | | INTEGER(1..275, ...) | |
| >>Active UL BWP | M | | | Only the configuration in the active UL BWP is needed. |
| >>>Location And | M | | INTEGER(0..37949, | Corresponds to information |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------------------------|----------|-------------------------------|--|---|
| Bandwidth | | | ...) | provided in <i>locationAndBandwidth</i> contained in <i>BWP</i> IE as defined in TS 38.331 [13] |
| >>>Subcarrier Spacing | M | | ENUMERATED(kHz 15, kHz30, kHz60, kHz120,..., kHz480, kHz960) | |
| >>>Cyclic Prefix | M | | ENUMERATED(Normal, Extended) | |
| >>>Tx Direct Current Location | M | | INTEGER(0..3301, ...) | |
| >>>Shift7dot5kHz | O | | ENUMERATED(true, ...) | |
| >>>SRS Config | M | | | Corresponds to information provided in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |
| >>>>SRS Resource List | | 0..<maxnoSRS-Resources> | | |
| >>>>SRS Resource | M | | 9.2.29 | Corresponds to information provided in <i>SRS-Resource</i> contained in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |
| >>>>Positioning SRS Resource List | | 0..<maxnoSRS-PosResources> | | |
| >>>>Positioning SRS Resource | M | | 9.2.30 | Corresponds to information provided in <i>SRS-PosResource</i> contained in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |
| >>>>SRS Resource Set List | | 0..<maxnoSRS-ResourceSets> | | |
| >>>>SRS Resource Set | M | | 9.2.31 | Corresponds to information provided in <i>SRS-ResourceSet</i> contained in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |
| >>>>Positioning SRS Resource Set List | | 0..<maxnoSRS-PosResourceSets> | | |
| >>>>Positioning SRS Resource Set | M | | 9.2.32 | Corresponds to information provided in <i>SRS-PosResourceSet</i> contained in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |
| >>NR PCI | O | | INTEGER (0..1007) | Physical Cell ID of the cell that contains the SRS carrier |

| Range bound | Explanation |
|--------------------------|--|
| maxnoSRS-Carriers | Maximum no of carriers for SRS. Value is 32. |
| maxnoSCSs | Maximum no of SCS spacings for a carrier. Value is 5. |
| maxnoSRS-Resources | Maximum no of SRS resources per UL BWP. Value is 64. |
| maxnoSRS-PosResources | Maximum no of positioning SRS resources per UL BWP. Value is 64. |
| maxnoSRS-ResourceSets | Maximum no of SRS resource sets per UL BWP. Value is 16. |
| maxnoSRS-PosResourceSets | Maximum no of positioning SRS resource sets per UL BWP. Value is 16. |

9.2.29 SRS Resource

This information element contains the SRS resource.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|---------------------------------|----------|-------|--|--|-------------|----------------------|
| SRS Resource ID | M | | INTEGER(0..63) | | - | |
| Number of Ports | M | | ENUMERATED (port1, ports2, ports4) | | - | |
| CHOICE <i>Transmission Comb</i> | M | | | | - | |
| > <i>Comb Two</i> | | | | | | |
| >>Comb Offset | M | | INTEGER(0..1) | | - | |
| >>Cyclic Shift | M | | INTEGER(0..7) | | - | |
| > <i>Comb Four</i> | | | | | | |
| >>Comb Offset | M | | INTEGER(0..3) | | - | |
| >>Cyclic Shift | M | | INTEGER(0..11) | | - | |
| > <i>Comb Eight</i> | M | | | | YES | reject |
| >>Comb Offset | M | | INTEGER(0..7) | | - | - |
| >>Cyclic Shift | M | | INTEGER(0..5) | | - | - |
| Start Position | M | | INTEGER(0..13) | | - | |
| Number of Symbols | M | | ENUMERATED (n1,n2,n4) | This IE is ignored if the <i>Number of Symbols Extended</i> IE is included | - | |
| Repetition Factor | M | | ENUMERATED (r1,r2,r4) | This IE is ignored if the <i>Repetition Factor Extended</i> IE is included | - | |
| Frequency Domain Position | M | | INTEGER(0..67) | | - | |
| Frequency Domain Shift | M | | INTEGER(0..268) | | - | |
| C-SRS | M | | INTEGER(0..63) | | - | |
| B-SRS | M | | INTEGER(0..3) | | - | |
| B-Hop | M | | INTEGER(0..3) | | - | |
| Group or Sequence Hopping | M | | ENUMERATED (neither, groupHopping, sequenceHopping) | | - | |
| CHOICE <i>Resource Type</i> | M | | | | - | |
| > <i>Periodic</i> | | | | | - | |
| >>Periodicity | M | | ENUMERATED (slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, ...) | | - | |
| >>Offset | M | | INTEGER(0..2559, ...) | | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|-----------------------------|----------|-------|--|-----------------------|-------------|----------------------|
| > <i>Semi-persistent</i> | | | | | | |
| >>Periodicity | M | | ENUMERATED (slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, ...) | | - | |
| >>Offset | M | | INTEGER(0..2559, ...) | | - | |
| > <i>Aperiodic</i> | | | | | | |
| >>Aperiodic Resource Type | M | | ENUMERATED (true,...) | | - | |
| Sequence ID | M | | INTEGER(0..1023) | | - | |
| Number of Symbols Extended | O | | ENUMERATED (n8,n10,n12, n14, ...) | | YES | ignore |
| Repetition Factor Extended | O | | ENUMERATED (r3, r5, r6, r7, r8, r10, r12, r14, ...) | | YES | ignore |
| Start RB Hopping | O | | ENUMERATED (enable) | | YES | ignore |
| CHOICE Start RB Index | O | | | | YES | ignore |
| > <i>FreqScalingFactor2</i> | | | INTEGER (0..1) | | | |
| > <i>FreqScalingFactor4</i> | | | INTEGER (0..3) | | | |

9.2.30 Positioning SRS Resource

This information element contains the SRS resource for positioning.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|-------|--|-----------------------|
| Positioning SRS Resource ID | M | | INTEGER(0..63) | |
| CHOICE <i>Transmission Comb</i> | M | | | |
| > <i>Comb Two</i> | | | | |
| >>Comb Offset | M | | INTEGER(0..1) | |
| >>Cyclic Shift | M | | INTEGER(0..7) | |
| > <i>Comb Four</i> | | | | |
| >>Comb Offset | M | | INTEGER(0..3) | |
| >>Cyclic Shift | M | | INTEGER(0..11) | |
| > <i>Comb Eight</i> | | | | |
| >>Comb Offset | M | | INTEGER(0..7) | |
| >>Cyclic Shift | M | | INTEGER(0..5) | |
| Start Position | M | | INTEGER(0..13) | |
| Number of Symbols | M | | ENUMERATED(n1, n2,n4, n8, n12) | |
| Frequency Domain Shift | M | | INTEGER(0..268) | |
| C-SRS | M | | INTEGER(0..63) | |
| Group or Sequence Hopping | M | | ENUMERATED(Neither, groupHopping, sequenceHopping) | |
| CHOICE <i>Resource Type Positioning</i> | M | | | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|-------|---|-----------------------|
| >periodic | | | | |
| >>Periodicity | M | | ENUMERATED(slot 1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, slot5120, slot10240, slot40960, slot81920,..., slot128, slot256, slot512, slot20480) | |
| >>Offset | M | | INTEGER(0..81919, ...) | |
| >semi-persistent | | | | |
| >>Periodicity | M | | ENUMERATED(slot 1, slot 2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640, slot1280, slot2560, slot5120, slot10240, slot40960, slot81920,..., slot128, slot256, slot512, slot20480) | |
| >>Offset | M | | INTEGER(0..81919, ...) | |
| >aperiodic | | | | |
| >>slot offset | M | | INTEGER(0..32) | |
| Sequence ID | M | | INTEGER(0..65535) | |
| CHOICE <i>Spatial Relation Positioning</i> | O | | | |
| >SSB | | | | |
| >>NR PCI | M | | INTEGER (0..1007) | |
| >>SSB index | O | | INTEGER(0..63) | |
| >PRS | | | | |
| >>PRS ID | M | | INTEGER(0..255) | |
| >>PRS Resource Set ID | M | | INTEGER(0..7) | |
| >>PRS Resource ID | O | | INTEGER(0..63) | |

9.2.31 SRS Resource Set

This information element indicates an SRS resource set in the UE for UL SRS transmission.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------------------|----------|---|-----------------------|-----------------------|
| SRS Resource Set ID | M | | INTEGER(0..15) | |
| SRS Resource ID List | | <i>1..<maxnoSRS - ResourcePerSet></i> | | |
| >SRS Resource ID | M | | INTEGER(0..63) | |
| CHOICE <i>Resource Set Type</i> | M | | | |
| >periodic | | | | |
| >>periodicSet | M | | ENUMERATED(true, ...) | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--------------------------|----------|-------|-----------------------|---|
| > <i>semi-persistent</i> | | | | |
| >>semi-persistentSet | M | | ENUMERATED(true,...) | |
| > <i>aperiodic</i> | | | | |
| >>SRS Resource Trigger | M | | INTEGER(1..3) | |
| >>Slot offset | M | | INTEGER(0..32) | Offset in number of slots, where value 0 indicates no offset. |

| Range bound | Explanation |
|-------------------------|--|
| maxnoSRS-ResourcePerSet | Maximum no of SRS resources per SRS resource set. Value is 16. |

9.2.32 Positioning SRS Resource Set

This information element indicates a positioning SRS resource set in the UE for UL SRS transmission.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|-----------------------------------|-----------------------|-----------------------|
| Positioning SRS Resource Set ID | M | | INTEGER(0..15) | |
| Positioning SRS Resource ID List | | 1..<maxnoSRS - PosResourcePerSet> | | |
| >Positioning SRS Resource ID | M | | INTEGER(0..63) | |
| CHOICE <i>Resource Type</i> | M | | | |
| > <i>periodic</i> | | | | |
| >>PosperiodicSet | M | | ENUMERATED(true,...) | |
| > <i>semi-persistent</i> | | | | |
| >>Possemi-persistentSet | M | | ENUMERATED(true,...) | |
| > <i>aperiodic</i> | | | | |
| >>SRS Resource Trigger | M | | INTEGER(1..3) | |

| Range bound | Explanation |
|----------------------------|--|
| maxnoSRS-PosResourcePerSet | Maximum no of positioning SRS resources per positioning SRS resource set. Value is 16. |

9.2.33 SRS Resource Set ID

This information element indicates a resource set in the UE for UL SRS transmission.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------|----------|-------|-----------------------|--|
| SRS Resource Set ID | M | | INTEGER (0..15) | Corresponds to information provided in <i>SRS-ResourceSetId</i> contained in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |

9.2.34 Spatial Relation Information

This information element indicates a spatial relation for transmission of UL SRS by a UE.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|---|-----------------------|---|
| Spatial Relation for Resource ID | | <i>1..<maxnoSpatialRelations></i> | | According to TS 38.321 [15] and corresponds to information provided in <i>SRS-SpatialRelationInfoPos</i> contained in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |
| >CHOICE Reference Signal | M | | | |
| >>NZIP CSI-RS | | | | |
| >>>NZIP CSI-RS Resource ID | M | | INTEGER (0..191) | |
| >>SSB | | | | |
| >>>NR PCI | M | | INTEGER (0..1007) | |
| >>>SSB Index | O | | INTEGER (0..63) | |
| >>SRS | | | | |
| >>>SRS Resource ID | M | | INTEGER (0..63) | |
| >>Positioning SRS | | | | |
| >>>Positioning SRS Resource ID | M | | INTEGER (0..63) | |
| >>DL-PRS | | | | |
| >>>DL-PRS ID | M | | INTEGER (0..255) | |
| >>>DL-PRS Resource Set ID | M | | INTEGER (0..7) | |
| >>>DL-PRS Resource ID | O | | INTEGER (0..63) | |

| Range bound | Explanation |
|-----------------------|---|
| maxnoSpatialRelations | Maximum no. of Spatial Relations that can be configured. Value is 64. |

9.2.35 SRS Resource Trigger

This information element indicates a DCI code point according to a SRS resource set configuration.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|--|-----------------------|---|
| Aperiodic SRS Resource Trigger List | | <i>1..<maxnoSRS - TriggerStates></i> | | Corresponds to information provided in <i>aperiodicSRS-ResourceTriggerList</i> contained in <i>SRS-Config</i> IE as defined in TS 38.331 [13] |
| >Aperiodic SRS Resource Trigger | | | INTEGER (1..3) | |

| Range bound | Explanation |
|-----------------------|--|
| maxnoSRSTriggerStates | Maximum no. of SRS trigger states. Value is 3. |

9.2.36 Relative Time 1900

This information element indicates the initialisation time (e.g. SFN Initialisation Time for a cell, requested time for an action, etc).

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--------------------|----------|-------|-----------------------|--|
| Relative Time 1900 | M | | BIT STRING (SIZE(64)) | Time in seconds relative to 00:00:00 on 1 January 1900 (calculated as continuous time without leap seconds and |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|-----------------------|--|
| | | | | traceable to a common time reference) where binary encoding of the integer part is in the first 32 bits and binary encoding of the fraction part in the last 32 bits. The fraction part is expressed with a granularity of $1/2^{**32}$ second |

9.2.37 TRP Measurement Result

This information element contains the measurement result.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|---------------------------------------|----------|------------------------|-----------------------|-----------------------|-------------|----------------------|
| Measured Result Item | | 1 .. <maxnoPosMeas> | | | - | |
| >CHOICE <i>Measured Results Value</i> | M | | | | - | |
| >>UL Angle of Arrival | | | 9.2.38 | | | |
| >>UL SRS-RSRP | | | INTEGER (0..126) | | | |
| >>UL RTOA | | | 9.2.39 | | | |
| >>gNB Rx-Tx Time Difference | | | 9.2.40 | | | |
| >>Z-AoA | | | 9.2.67 | | YES | reject |
| >>Multiple UL-AoA | | | 9.2.71 | | YES | reject |
| >>UL SRS-RSRPP | | | 9.2.72 | | YES | reject |
| >Time Stamp | M | | 9.2.42 | | - | |
| >Measurement Quality | O | | 9.2.43 | | - | |
| >Measurement Beam Information | O | | 9.2.57 | | - | |
| >SRS Resource type | O | | 9.2.73 | | YES | ignore |
| >ARP ID | O | | 9.2.75 | | YES | ignore |
| >LoS/NLoS Information | O | | 9.2.77 | | YES | ignore |

| Range bound | Explanation |
|--------------|--|
| maxnoPosMeas | Maximum no. of measured quantities that can be configured and reported with one positioning measurement message. Value is 16384. |

9.2.38 UL Angle of Arrival

This information element contains the uplink Angle of Arrival measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--------------------------|----------|-------|-----------------------|--|
| Azimuth Angle of Arrival | M | | INTEGER(0..3599) | TS 38.133 [16] |
| Zenith Angle of Arrival | O | | INTEGER(0..1799) | TS 38.133 [16] |
| LCS to GCS Translation | O | | 9.2.69 | If absent, the azimuth and zenith are provided in GCS. |

9.2.39 UL RTOA Measurement

This information element contains the uplink RTOA measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|-----------------------------------|----------|-------|-----------------------|---|-------------|----------------------|
| CHOICE <i>UL RTOA Measurement</i> | M | | | | - | |
| >k0 | | | INTEGER (0..1970049) | TS 38.133 [16] | | |
| >k1 | | | INTEGER (0..985025) | TS 38.133 [16] | | |
| >k2 | | | INTEGER (0..492513) | TS 38.133 [16] | | |
| >k3 | | | INTEGER (0..246257) | TS 38.133 [16] | | |
| >k4 | | | INTEGER (0..123129) | TS 38.133 [16] | | |
| >k5 | | | INTEGER (0..61565) | TS 38.133 [16] | | |
| Additional Path List | O | | 9.2.41 | This IE is ignored if the <i>Extended Additional Path List</i> IE is included | - | |
| Extended Additional Path List | O | | 9.2.74 | | YES | ignore |
| TRP Rx TEG Information | O | | 9.2.85 | | YES | ignore |

9.2.40 gNB Rx-Tx Time Difference

This information element contains the gNB Rx-Tx Time Difference measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|---|----------|-------|-----------------------|---|-------------|----------------------|
| CHOICE <i>gNB Rx-Tx Time Difference Measurement</i> | M | | | | - | |
| >k0 | | | INTEGER (0..1970049) | TS 38.133 [16] | | |
| >k1 | | | INTEGER (0..985025) | TS 38.133 [16] | | |
| >k2 | | | INTEGER (0..492513) | TS 38.133 [16] | | |
| >k3 | | | INTEGER (0..246257) | TS 38.133 [16] | | |
| >k4 | | | INTEGER (0..123129) | TS 38.133 [16] | | |
| >k5 | | | INTEGER (0..61565) | TS 38.133 [16] | | |
| Additional Path List | O | | 9.2.41 | This IE is ignored if the <i>Extended Additional Path List</i> IE is included | - | |
| Extended Additional Path List | O | | 9.2.74 | | YES | ignore |
| TRP TEG Information | O | | 9.2.80 | | YES | ignore |

9.2.41 Additional Path List

This information element contains the additional path results of time measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|----------------------|----------|-----------|-----------------------|-----------------------|-------------|----------------------|
| Additional Path Item | | 1..<maxno | | | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|------------------------------------|----------|---------------|----------------------------|-----------------------|-------------|----------------------|
| | | <i>path</i> > | | | | |
| >CHOICE <i>Relative Path Delay</i> | M | | | | - | |
| >> <i>k0</i> | | | INTEGER(0..16351) | | | |
| >> <i>k1</i> | | | INTEGER(0..8176) | | | |
| >> <i>k2</i> | | | INTEGER(0..4088) | | | |
| >> <i>k3</i> | | | INTEGER(0..2044) | | | |
| >> <i>k4</i> | | | INTEGER(0..1022) | | | |
| >> <i>k5</i> | | | INTEGER(0..511) | | | |
| >Path Quality | O | | Measurement Quality 9.2.43 | | - | |
| >Multiple UL-AoA | O | | 9.2.71 | | YES | ignore |
| >Path Power | O | | UL SRS-RSRPP 9.2.72 | | YES | ignore |

| Range bound | Explanation |
|-------------|---|
| maxnopath | Maximum no. of additional path measurement. Value is 2. |

9.2.42 Time Stamp

This information element contains the time stamp.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|--------------------------|----------|-------|---------------------------|-----------------------|-------------|----------------------|
| System Frame Number | M | | INTEGER(0..1023) | | - | |
| CHOICE <i>Slot Index</i> | M | | | | - | |
| >SCS-15 | | | INTEGER(0..9) | | - | |
| >SCS-30 | | | INTEGER(0..19) | | - | |
| >SCS-60 | | | INTEGER(0..39) | | - | |
| >SCS-120 | | | INTEGER(0..79) | | - | |
| >SCS-480 | M | | INTEGER(0..319) | | YES | reject |
| >SCS-960 | M | | INTEGER(0..639) | | YES | reject |
| Measurement time | O | | Relative Time 1900 9.2.36 | | - | |

9.2.43 Measurement Quality

This information element contains the TRP's best estimate of the quality of the measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------------------|----------|-------|-----------------------|--|
| CHOICE <i>Measurement Quality</i> | M | | | |
| > <i>Timing Measurement Quality</i> | | | | Corresponds to information provided in <i>NR-TimingQuality</i> IE as defined in TS 37.355 [14] |
| >>Measurement Quality | M | | INTEGER(0..31) | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------------|----------|-------|--------------------------------------|-----------------------|
| >>Resolution | M | | ENUMERATED(0.1 m, 1m, 10m, 30m, ...) | |
| >Angle Measurement Quality | | | | |
| >>Azimuth Quality | M | | INTEGER(0..255) | |
| >>Zenith Quality | O | | INTEGER(0..255) | |
| >>Resolution | M | | ENUMERATED (0.1deg, ...) | |

9.2.44 PRS Configuration

This information element contains the DL PRS configuration for the TRP.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------------------|----------|------------------------------------|--|---|
| PRS Resource Set List | | 1 | | |
| >PRS Resource Set Item | | 1..<maxnoofP RSresourceSet > | | |
| >>PRS Resource Set ID | M | | INTEGER(0..7) | |
| >>Subcarrier Spacing | M | | ENUMERATED(kHz 15, kHz30, kHz60, kHz120, ...) | |
| >>PRS bandwidth | M | | INTEGER(1..63) | 24,28,...,272 PRBs |
| >>Start PRB | M | | INTEGER(0..2176) | Starting PRB to Point A |
| >>Point A | M | | INTEGER (0..3279165) | NR ARFCN |
| >>Comb Size | M | | ENUMERATED(2, 4, 6, 12, ...) | |
| >>CP Type | M | | ENUMERATED(normal, extended, ...) | |
| >>Resource Set Periodicity | M | | ENUMERATED(4,5, 8,10,16,20,32,40,64, 80,160,320,640,1280,2560,5120,10240, 20480,40960,81920, ..., 128, 256, 512) | Slots |
| >>Resource Set Slot Offset | M | | INTEGER(0..81919, ...) | |
| >>Resource Repetition Factor | M | | ENUMERATED(rf1,r f2,rf4,rf6,rf8,rf16,rf32 ,...) | |
| >>Resource Time Gap | M | | ENUMERATED(tg1, tg2,tg4,tg8,tg16,tg32 ,...) | |
| >>Resource Number of Symbols | M | | ENUMERATED(n2, n4,n6,n12,...) | |
| >>PRS Muting | O | | | |
| >>>Option1 | O | | | |
| >>>>Muting Pattern | M | | DL-PRS Muting Pattern 9.2.56 | Muting pattern option 1 is used to mute the whole PRS resource set (within a period) |
| >>>>Muting Bit Repetition Factor | M | | ENUMERATED(1,2, 4,8,...) | |
| >>>Option2 | O | | | |
| >>>>Muting Pattern | M | | DL-PRS Muting Pattern 9.2.56 | Muting pattern option 2 is used to mute the selected repetition of the resource set (within the period) |
| >>PRS Resource Transmit Power | M | | INTEGER(-60..50) | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--------------------------------------|----------|--------------------------|-----------------------|---|
| >>PRS Resource List | | 1 | | Corresponds to information provided in <i>NR-DL-PRS-Resource</i> contained in <i>NR-DL-PRS-Info</i> IE as defined in TS 37.355 [14] |
| >>>PRS Resource Item | | 1..<maxnoofPRSresources> | | |
| >>>>PRS Resource ID | M | | INTEGER(0..63) | |
| >>>>Sequence ID | M | | INTEGER(0..4095) | |
| >>>>RE Offset | M | | INTEGER(0..11,...) | |
| >>>>Resource Slot Offset | M | | INTEGER(0..511) | |
| >>>>Resource Symbol Offset | M | | INTEGER(0..12) | |
| >>>>CHOICE QCL Info | O | | | |
| >>>>>SSB | | | | |
| >>>>>>NR PCI | M | | INTEGER(0..1007) | |
| >>>>>>SSB Index | O | | INTEGER(0..63) | |
| >>>>>>DL-PRS | | | | |
| >>>>>>QCL Source PRS Resource Set ID | M | | INTEGER(0..7) | |
| >>>>>>QCL Source PRS Resource ID | O | | INTEGER(0..63) | If it is absent, the QCL source PRS resource ID is the same as the PRS resource ID |

| Range bound | Explanation |
|-----------------------|--|
| maxnoofPRSresourceSet | Maximum no of PRS resources set. Value is 8. |
| maxnoofPRSresource | Maximum no of PRS resources per PRS resource set. Value is 64. |

9.2.45 Spatial Direction Information

This information element contains the spatial direction information of the DL PRS resources for the TRP.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------|----------|-------|-----------------------|--|
| NR-PRS Beam Information | M | | 9.2.58 | The spatial directions of DL-PRS Resources for TRP |

9.2.46 Geographical Coordinates

This information element contains the geographical coordinates for the TRP and any associated ARP(s).

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|-------------------------------------|----------|-------|-------------------------------------|--|-------------|----------------------|
| CHOICE TRP Position Definition Type | M | | | | - | |
| >Direct | | | | | | |
| >>CHOICE Accuracy | M | | | | - | |
| >>>normal accuracy | | | | | | |
| >>>>TRP Position | M | | NG-RAN Access Point Position 9.2.10 | The configured estimated geographical position of the antenna of the | - | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|---------------------------------------|----------|-------|---|--|-------------|----------------------|
| | | | | cell/TRP. | | |
| >>>high accuracy | | | | | | |
| >>>>TRP High Accuracy Access Position | M | | NG-RAN High Accuracy Access Point Position 9.2.49 | The configured estimated geographical high accuracy position of the antenna of the cell/TRP. | - | |
| >Referenced | | | | | | |
| >>Reference Point | M | | 9.2.51 | The reference point is used to derive the TRP position | - | |
| >>CHOICE Type | M | | | | - | |
| >>>Geodetic | | | | | | |
| >>>>TRP Position Relative Geodetic | M | | Relative Geodetic Location 9.2.48 | The configured estimated relative geodetic coordinate of the antenna of the cell/TRP | - | |
| >>>Cartesian | | | | | | |
| >>>>TRP Position Relative Cartesian | M | | Relative Cartesian Location 9.2.50 | The configured estimated relative Cartesian coordinate of the antenna of the cell/TRP | - | |
| DL-PRS Resource Coordinates | O | | 9.2.47 | DL-PRS Resource Coordinates relative to the TRP coordinate | - | |
| ARP Location Information | O | | 9.2.76 | | YES | ignore |

9.2.47 DL-PRS Resource Coordinates

This information element contains the geographical coordinates of the antenna reference points (ARP) for the DL-PRS Resources of a TRP.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|-----------------------------|------------------------------------|---|
| DL-PRS Resource Set ARP List | M | 1..<maxPRS-ResourceSets> | | |
| >DL-PRS Resource Set ID | M | | INTEGER (0..7) | |
| >CHOICE DL-PRS Resource Set ARP Location | M | | | Relative to the geographical coordinates for the TRP. If this IE is absent, the Relative Location is zero for the indicated DL-PRS Resource Set ID. |
| >>Geodetic | | | | |
| >>>TRP Position Relative Geodetic | M | | Relative Geodetic Location 9.2.48 | |
| >>Cartesian | | | | |
| >>>TRP Position Relative Cartesian | M | | Relative Cartesian Location 9.2.50 | |
| >DL-PRS Resource ARP List | M | 1..<maxPRS-ResourcesPerSet> | | |
| >>DL-PRS Resource ID | M | | INTEGER (0..63) | |
| >>CHOICE DL-PRS | M | | | Relative to the DL-PRS |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|-------|------------------------------------|--|
| <i>Resource ARP Location</i> | | | | Resource Set ARP Location. If this IE is absent, the Relative Location is zero for the indicated DL-PRS Resource ID. |
| >>> <i>Geodetic</i> | | | | |
| >>>>TRP Position Relative Geodetic | M | | Relative Geodetic Location 9.2.48 | |
| >>> <i>Cartesian</i> | | | | |
| >>>>TRP Position Relative Cartesian | M | | Relative Cartesian Location 9.2.50 | |

| Range bound | Explanation |
|------------------------|--|
| maxPRS-ResourceSets | Maximum no of DL-PRS resource sets per TRP. Value is 2. |
| maxPRS-ResourcesPerSet | Maximum no of DL-PRS resources of the DL-PRS resource set of the TRP. Value is 64. |

9.2.48 Relative Geodetic Location

This information element provides a location relative to some known reference location in a relative geodetic coordinate system. Corresponds to information provided in *RelativeLocation* IE as defined in TS 37.355 [14].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------|----------|-------|--------------------------------|--|
| Milli-Arc-Second Units | M | | ENUMERATED (0.03, 0.3, 3, ...) | Units and scale factor for the delta-latitude and delta-longitude fields. 0.03, 0.3, 3, milliarcseconds. |
| Height Units | M | | ENUMERATED (mm, cm, m, ...) | Units and scale factor for the delta-height field. 10-3 metre, 10-2 metre. |
| Delta Latitude | M | | INTEGER (-1024..1023) | Delta value in latitude in the unit provided in Milli-Arc-Second Units. |
| Delta Longitude | M | | INTEGER (-1024..1023) | Delta value in longitude in the unit provided in Milli-Arc-Second Units. |
| Delta Height | M | | INTEGER (-1024..1023) | Delta value in ellipsoidal height in the unit provided in Height Units. |
| Location uncertainty | M | | 9.2.52 | |

9.2.49 NG-RAN High Accuracy Access Point Position

The *NG-RAN High Accuracy Access Point Position* IE is used to identify the geographical position of an NG-RAN Access Point. It is expressed as High Accuracy Ellipsoid point with altitude and uncertainty ellipsoid according to TS 23.032 [8].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------|----------|-------|----------------------------------|-----------------------|
| Degrees of Latitude | M | | INTEGER(-2147483648..2147483647) | |
| Degrees of Longitude | M | | INTEGER(-2147483648..2147483647) | |
| Altitude | M | | INTEGER(-64000..1280000) | |
| Uncertainty Semi Major | M | | INTEGER (0..255) | |
| Uncertainty Semi Minor | M | | INTEGER (0..255) | |
| Orientation Major Axis | M | | INTEGER (0..179) | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------|----------|-------|-----------------------|-----------------------|
| Horizontal Confidence | M | | INTEGER (0..100) | |
| Uncertainty Altitude | M | | INTEGER (0..255) | |
| Vertical Confidence | M | | INTEGER (0..100) | |

9.2.50 Relative Cartesian Location

This information element provides a location relative to some known reference location in a relative Cartesian coordinate system.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------|----------|-------|--|---|
| XYZ unit | M | | ENUMERATED (mm, cm, dm,..) | |
| X value | M | | INTEGER (-2 ¹⁶ .. 2 ¹⁶ -1) | Positive value represents easting from reference point, in units of <i>XYZ Unit</i> IE. |
| Y value | M | | INTEGER (-2 ¹⁶ .. 2 ¹⁶ -1) | Positive value represents northing from reference point in units of <i>XYZ Unit</i> IE. |
| Z value | M | | INTEGER (-2 ¹⁵ .. 2 ¹⁵ -1) | Height with respect to reference point in units of <i>XYZ Unit</i> IE, where the XY-plane is horizontal and the Z-axis points up. |
| Location uncertainty | M | | 9.2.52 | |

9.2.51 Reference Point

This information element provides a reference point information.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|-------|---|--|
| CHOICE <i>ReferencePoint</i> | M | | | Reference point to which relative location information is related to |
| > <i>Coordinate ID</i> | | | | |
| >>Coordinate ID | M | | INTEGER(0.. 2 ⁹ -1,..) | Referential ID mapped via OAM |
| > <i>Reference Point Coordinates</i> | | | | |
| >>Reference Point Position | M | | NG-RAN Access Point Position 9.2.10 | |
| > <i>Reference Point Coordinates High Accuracy</i> | | | | |
| >>Reference Point High Accuracy Access Position | M | | NG-RAN High Accuracy Access Point Position 9.2.49 | |

9.2.52 Location Uncertainty

This information element provides the location uncertainty information.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------|----------|-------|-----------------------|--|
| Horizontal Uncertainty | M | | INTEGER (0..255) | Horizontal uncertainty of the ARP latitude/longitude. Corresponds to the encoded high accuracy uncertainty as defined in TS 23.032 [8] |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------|----------|-------|-----------------------|--|
| Horizontal Confidence | M | | INTEGER (0..100) | Corresponds to confidence as defined in TS 23.032 [8]. |
| Vertical Uncertainty | M | | INTEGER (0..255) | Vertical uncertainty of the ARP altitude. Corresponds to the encoded high accuracy uncertainty as defined in TS 23.032 [8] |
| Vertical Confidence | M | | INTEGER (0..100) | Corresponds to confidence as defined in TS 23.032 [8]. |

9.2.53 Pathloss Reference Information

This information element indicates a pathloss reference for transmission of UL SRS by a UE.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------------------|----------|-------|-----------------------|-----------------------|
| CHOICE Pathloss Reference Signal | M | | | |
| >SSB | | | | |
| >>NR PCI | M | | INTEGER (0..1007) | |
| >>SSB Index | O | | INTEGER (0..63) | |
| >DL-PRS | | | | |
| >>DL-PRS ID | M | | INTEGER (0..255) | |
| >>DL-PRS Resource Set ID | M | | INTEGER (0..7) | |
| >>DL PRS Resource ID | O | | INTEGER (0..63) | |

9.2.54 SSB Information

This information element contains the SSB time/frequency information for the TRPs.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------------|----------|-----------------|---|-----------------------|
| SSB Info List | | 1 | | |
| >SSB Info Item | | 1...<maxNoSSBs> | | |
| >>SSB Configuration | M | | SSB Time/Frequency Configuration 9.2.55 | |
| >>NR PCI | M | | INTEGER (0..1007) | |

| Range bound | Explanation |
|-------------|---|
| maxNoSSBs | Maximum no of SSBs for which the configuration can be provided. Value is 255. |

9.2.55 SSB Time/Frequency Configuration

This information element contains the time and frequency configuration of an SSB.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------|----------|-------|--|--|
| SSB frequency | M | | INTEGER (0..3279165) | ARFCN |
| SSB subcarrier spacing | M | | ENUMERATED(15kHz, 30kHz, 60kHz, 120kHz, 240kHz,... , kHz480, kHz960) | The value 60kHz is not supported in this version of the specification. |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------------------|----------|-------|---|-----------------------|
| SSB Transmit power | M | | INTEGER (-60..50) | EPRE of SSS |
| SSB periodicity | M | | ENUMERATED(5ms, 10ms, 20ms, 40ms, 80ms, 160ms, ...) | |
| SSB half frame index | M | | INTEGER(0..1) | |
| SSB SFN offset | M | | INTEGER(0..15) | |
| CHOICE <i>SSB Position in Burst</i> | O | | | |
| > <i>Short Bitmap</i> | | | BIT STRING (SIZE(4)) | |
| > <i>Medium Bitmap</i> | | | BIT STRING (SIZE(8)) | |
| > <i>Long Bitmap</i> | | | BIT STRING (SIZE(64)) | |
| SFN initialisation time | O | | Relative Time 1900 9.2.36 | |

9.2.56 DL-PRS Muting Pattern

This information element contains the DL-PRS muting pattern.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------------------|----------|-------|-----------------------|-----------------------|
| CHOICE <i>DL-PRS Muting Pattern</i> | M | | | |
| > <i>Two</i> | | | BIT STRING (SIZE(2)) | |
| > <i>Four</i> | | | BIT STRING (SIZE(4)) | |
| > <i>Six</i> | | | BIT STRING (SIZE(6)) | |
| > <i>Eight</i> | | | BIT STRING (SIZE(8)) | |
| > <i>Sixteen</i> | | | BIT STRING (SIZE(16)) | |
| > <i>Thirty-two</i> | | | BIT STRING (SIZE(32)) | |

9.2.57 Measurement Beam Information

This information element contains the receiving beam information when measuring UL signals.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------------|----------|-------|-----------------------|-----------------------|
| PRS Resource ID | O | | INTEGER(0..63) | |
| PRS Resource Set ID | O | | INTEGER(0..7) | |
| SSB Index | O | | INTEGER(0..63) | |

9.2.58 NR-PRS Beam Information

This IE contains spatial direction information of the DL-PRS Resources.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| NR-PRS Beam Information | | 1 | | | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|----------------------------------|-----------------------|--|-------------|----------------------|
| >NR-PRS Beam Information Item | | 1.. <maxPRS-Resource Sets > | | | - | |
| >>PRS Resource Set ID | M | | INTEGER (0..7) | The resource set in which the resources are associated with the angle. | - | |
| >>PRS Angle | | 1 | | | - | |
| >>>PRS Angle Item | | 1.. ..<maxPRS-Resources PerSet > | | | - | |
| >>>>NR PRS Azimuth | M | | INTEGER (0..359) | | - | |
| >>>>NR PRS Azimuth fine | O | | INTEGER (0..9) | Fine angles | - | |
| >>>>NR PRS Elevation | O | | INTEGER (0..180) | | - | |
| >>>>NR PRS Elevation fine | O | | INTEGER (0..9) | Fine angles | - | |
| >>>>PRS Resource ID | O | | INTEGER(0..63) | | YES | ignore |
| LCS to GCS Translation List | | 0..1 | | If absent, the azimuth and elevation are provided in GCS. | - | |
| >LCS to GCS Translation Item | | 1..<maxno lcs-gcs-translation > | | | - | |
| >>Alpha | M | | INTEGER (0..359) | | - | |
| >>Alpha-fine | O | | INTEGER (0..9) | Fine angles | - | |
| >>Beta | M | | INTEGER (0..359) | | - | |
| >>Beta-fine | O | | INTEGER (0..9) | Fine angles | - | |
| >>Gamma | M | | INTEGER (0..359) | | - | |
| >>Gamma-fine | O | | INTEGER (0..9) | Fine angles | - | |

| Range bound | Explanation |
|--------------------------|---|
| maxPRS-ResourceSets | Maximum no of DL-PRS resource sets per TRP. Value is 2. |
| maxPRS-ResourcesPerSet | Maximum no of DL-PRS resources of the DL-PRS resource set of the TRP. Value is 64. |
| maxnolcs-gcs-translation | Maximum no. of LCS-GS-Translation-Parameters that can reported with one message. Value is 3. The current version of the specification supports 1. |

9.2.59 Positioning Broadcast Cells

This IE is used to indicate the cells that are requested to broadcast, or failed to broadcast, the associated posSIB(s).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------------|----------|------------------------|-----------------------|-----------------------|
| Positioning Broadcast Cells | | 1 .. <maxnoBcast Cell> | | |
| >NG-RAN-CGI | M | | 9.2.6 | |

| Range bound | Explanation |
|-----------------|--|
| maxnoBcastCells | Maximum no. of cells broadcasting a posSIB in a NG-RAN node. Value is 16384. |

9.2.60 Spatial Relation Information per SRS Resource

This information element indicates a spatial relation for transmission of each UL SRS resource recommended by LMF.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|--------------------------------|-----------------------|-----------------------|
| Spatial Relation per SRS Resource List | | 1 | | |
| >Spatial Relation per SRS Resource Item | | 1..<maxnoSRS - ResourcePerSet> | | |
| >CHOICE Reference Signal | M | | | |
| >NZP CSI-RS | | | | |
| >>NZP CSI-RS Resource ID | M | | INTEGER (0..191) | |
| >SSB | | | | |
| >>NR PCI | M | | INTEGER (0..1007) | |
| >>SSB Index | O | | INTEGER (0..63) | |
| >SRS | | | | |
| >>SRS Resource ID | M | | INTEGER (0..63) | |
| >Positioning SRS | | | | |
| >>Positioning SRS Resource ID | M | | INTEGER (0..63) | |
| >DL-PRS | | | | |
| >>DL-PRS ID | M | | INTEGER (0..255) | |
| >>DL-PRS Resource Set ID | M | | INTEGER (0..7) | |
| >>DL-PRS Resource ID | O | | INTEGER (0..63) | |

| Range bound | Explanation |
|-------------------------|--|
| maxnoSRS-ResourcePerSet | Maximum no of SRS resources per SRS resource set. Value is 16. |

9.2.61 Requested DL PRS Transmission Characteristics

This IE contains the requested PRS configuration for transmission by the LMF.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|----------------------------|--|-----------------------|
| Requested DL-PRS Resource Set List | | 1 | | |
| >Requested DL-PRS Resource Set Item | | 1..<maxnoofPRSresourceSet> | | |
| >>PRS bandwidth | O | | INTEGER(1..63) | 24,28,...,272 PRBs |
| >>Comb Size | O | | ENUMERATED(2, 4, 6, 12, ...) | |
| >>Resource Set Periodicity | O | | ENUMERATED(4,5, 8,10,16,20,32,40,64, 80,160,320,640,1280,2560,5120,10240, 20480,40960,81920, ..., 128, 256, 512) | Slots |
| >>Resource Repetition Factor | O | | ENUMERATED(rf1,rf2,rf4,rf6,rf8,rf16,rf32) | |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|-------|-----------------------------------|--|
| | | | ,...) | |
| >>Resource Number of Symbols | O | | ENUMERATED(n2, n4,n6,n12,...) | |
| >>Requested DL-PRS Resource List | O | | 9.2.62 | |
| >>Resource Set Start Time and Duration | O | | Start Time and Duration 9.2.63 | This IE is ignored if the <i>Start Time and Duration</i> IE is present |
| Number of Frequency Layers | O | | INTEGER(1..4) | |
| Start Time and Duration | O | | 9.2.63 | |

| Range bound | Explanation |
|-----------------------|--|
| maxnoofPRSresourceSet | Maximum no of PRS resources set. Value is 8. |

9.2.62 Requested DL-PRS Resource List

This IE contains the requested DL-PRS resource list.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|-------------------------|-----------------------|---|
| Requested DL-PRS Resource List | | 1 | | Corresponds to information provided in <i>NR-DL-PRS-Resource</i> contained in <i>NR-DL-PRS-Info</i> IE as defined in TS 37.355 [14] |
| >Requested DL-PRS Resource Item | | 1..<maxnoofPRSresource> | | |
| >>CHOICE QCL Info | O | | | |
| >>>SSB | | | | |
| >>>>NR PCI | M | | INTEGER(0..1007) | |
| >>>>SSB Index | O | | INTEGER(0..63) | |
| >>>DL-PRS | | | | |
| >>>>QCL Source PRS Resource Set ID | M | | INTEGER(0..7) | |
| >>>>QCL Source PRS Resource ID | O | | INTEGER(0..63) | |

| Range bound | Explanation |
|--------------------|--|
| maxnoofPRSresource | Maximum no of PRS resources per PRS resource set. Value is 64. |

9.2.63 Start Time and Duration

This IE contains the start time and/or duration for the on-demand DL-PRS.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|------------------------------|-----------------------|
| Start Time | O | | Relative Time 1900 9.2.36 | |
| Duration | O | | INTEGER (0..90060, ...) | Unit: seconds |

9.2.64 PRS Transmission Off Information

This IE contains the information to turn off particular PRS transmissions.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--------------------------------|----------|------------------------------------|-----------------------|-----------------------|
| CHOICE <i>level</i> | M | | | |
| >TRP <i>level</i> | | | NULL | |
| >PRS resource set <i>level</i> | | | | |
| >>PRS Resource Set List | | 1 | | |
| >>>PRS Resource Set Item | | 1..<maxnoofP RSresourceSet > | | |
| >>>>PRS Resource Set ID | M | | INTEGER(0..7) | |
| >PRS resource <i>level</i> | | | | |
| >>PRS Resource Set List | | 1 | | |
| >>>PRS Resource Set Item | | 1..<maxnoofP RSresourceSet > | | |
| >>>>PRS Resource Set ID | M | | INTEGER(0..7) | |
| >>>>PRS Resource List | | 1 | | |
| >>>>>PRS Resource Item | | 1..<maxnoofP RSresource> | | |
| >>>>>>PRS Resource ID | M | | INTEGER(0..63) | |

| Range bound | Explanation |
|-----------------------|--|
| maxnoofPRSresourceSet | Maximum no of PRS resources set. Value is 8. |
| maxnoofPRSresource | Maximum no of PRS resources per PRS resource set. Value is 64. |

9.2.65 On-demand PRS TRP Information

This IE contains on-demand PRS information for the TRP.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|-------|-----------------------|--|
| On-demand PRS Request Allowed | M | | BIT STRING (SIZE(16)) | Each position in the bitmap represents an on-demand PRS transmission parameter: first bit: Resource Set Periodicity second bit: PRS Bandwidth third bit: Resource Repetition Factor fourth bit: Resource Number of Symbols fifth bit: Comb Size sixth bit: Number of Frequency Layers seventh bit: Start Time and Duration eighth bit: Off Indication ninth bit: QCL Information Other bits reserved for future use. Value '1' indicates 'request allowed', Value '0' indicates 'request not allowed'. |
| Allowed Resource Set Periodicity Values | O | | BIT STRING (SIZE(24)) | This IE applies only if the first bit of the On-demand PRS Request Allowed IE is set to '1'. Each position in the bitmap represents a value of the Resource Set Periodicity IE |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|-------|-----------------------|--|
| | | | | defined in subclause 9.2.61, first bit = 4 and so on. Bit 24 is reserved for future use. Value '1' indicates 'request allowed', Value '0' indicates 'request not allowed'. If this IE is absent, all Resource Set Periodicity values are allowed to be requested. |
| Allowed PRS Bandwidth Values | O | | BIT STRING (SIZE(64)) | This IE applies only if the second bit of the On-demand PRS Request Allowed IE is set to '1'. Each position in the bitmap represents a value of the PRS Bandwidth IE defined in subclause 9.2.61, first bit = 1 and so on. Bit 64 is reserved for future use. Value '1' indicates 'request allowed', Value '0' indicates 'request not allowed'. If this IE is absent, all PRS Bandwidth values are allowed to be requested. |
| Allowed Resource Repetition Factor Values | O | | BIT STRING (SIZE(8)) | This IE applies only if the third bit of the On-demand PRS Request Allowed IE is set to '1'. Each position in the bitmap represents a value of the Resource Repetition Factor IE defined in subclause 9.2.61, first bit = rf1 and so on. Bit 8 is reserved for future use. Value '1' indicates 'request allowed', Value '0' indicates 'request not allowed'. If this IE is absent, all Resource Repetition Factor values are allowed to be requested. |
| Allowed Resource Number of Symbols Values | O | | BIT STRING (SIZE(8)) | This IE applies only if the fourth bit of the On-demand PRS Request Allowed IE is set to '1'. Each position in the bitmap represents a value of the Resource Number of Symbols IE defined in subclause 9.2.61, first bit = n2 and so on. Bits 5-8 are reserved for future use. Value '1' indicates 'request allowed', Value '0' indicates 'request not allowed'. If this IE is absent, all Resource Number of Symbols values are allowed to be requested. |
| Allowed Comb Size Values | O | | BIT STRING (SIZE(8)) | This IE applies only if the fifth bit of the On-demand PRS Request Allowed IE is set to '1'. Each position in the bitmap represents a value of the Comb Size IE defined in subclause 9.2.61, first bit = 2 and so on. Bits 5-8 are reserved for future use. Value '1' indicates 'request allowed', Value '0' indicates |

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|-----------------------|--|
| | | | | 'request not allowed'. If this IE is absent, all Comb Size values are allowed to be requested. |

9.2.66 UL-AoA assistance information

This information element contains the expected uplink Angle of Arrival and uncertainty range.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|-------|-----------------------|--|
| CHOICE <i>AngleMeasurement</i> | M | | | |
| >Expected UL Angle of Arrival | | | | |
| >>Expected Azimuth AoA | | 1 | | Defined as $(\varphi_{AOA} - \Delta\varphi_{AOA}/2, \varphi_{AOA} + \Delta\varphi_{AOA}/2)$ |
| >>>Expected Azimuth AoA Value | M | | INTEGER(0..3599) | φ_{AOA} component of Expected Azimuth AoA |
| >>>Expected Azimuth AoA Uncertainty Range | M | | INTEGER(0..3599) | $\Delta\varphi_{AOA}$ component of Expected Azimuth AoA |
| >>Expected Zenith AoA | | 0..1 | | Defined as $(\theta_{ZOA} - \Delta\theta_{ZOA}/2, \theta_{ZOA} + \Delta\theta_{ZOA}/2)$ |
| >>>Expected Zenith AoA Value | M | | INTEGER(0..1799) | θ_{ZOA} component of Expected Zenith AoA |
| >>>Expected Zenith AoA Uncertainty Range | M | | INTEGER(0..1799) | $\Delta\theta_{ZOA}$ component of Expected Zenith AoA |
| >Expected UL Angle of Arrival Zenith Only | | | | Defined as $(\theta_{ZOA} - \Delta\theta_{ZOA}/2, \theta_{ZOA} + \Delta\theta_{ZOA}/2)$ |
| >>Expected Zenith AoA Value | M | | INTEGER(0..1799) | θ_{ZOA} component of Expected Zenith AoA |
| >>Expected Zenith AoA Uncertainty Range | M | | INTEGER(0..1799) | $\Delta\theta_{ZOA}$ component of Expected Zenith AoA |
| LCS to GCS Translation | O | | 9.2.69 | If absent, the azimuth and zenith are provided in GCS. In case of zenith only, the z-axis of LCS is defined along the linear array axis. |

9.2.67 Z-AoA

This information element contains the Zenith Angle of Arrival information, which can correspond to linear array measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------|----------|-------|-----------------------|--|
| Zenith Angle of Arrival | M | | INTEGER(0..1799) | TS 38.133 [16] |
| LCS to GCS Translation | O | | 9.2.69 | If absent, the zenith is provided in GCS. the z-axis of LCS is defined along the linear array axis |

9.2.68 Response Time

This information element contains the response time of the measurement results reporting.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|--|-----------------------|
| Time | M | | INTEGER(1..128,...) | |
| Time Unit | M | | ENUMERATED (second, ten-seconds, ten-milliseconds, ...) | |

9.2.69 LCS to GCS Translation

This information element contains the LCS to GCS Translation information.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|-----------------------|-----------------------|
| Alpha | M | | INTEGER (0..3599) | |
| Beta | M | | INTEGER (0..3599) | |
| Gamma | M | | INTEGER (0..3599) | |

9.2.70 UE Reporting Information

This IE contains the UE Reporting Information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|---|---|
| Reporting Amount | M | | ENUMERATED (0, 1, 2, 4, 8, 16, 32, 64) | Value 0 represents an infinite number of periodic reporting |
| Reporting Interval | M | | ENUMERATED (none, 1, 2, 4, 8, 10, 16, 20, 32, 64) | Unit: seconds |

9.2.71 Multiple UL-AoA

This information element contains the list of the multiple UL-AOAs values.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------------------|----------|------------------------|-----------------------|-----------------------|
| UL AoA List | | 1 | | |
| >UL AoA item | | 1..<maxnoofULAoAs > | | |
| >>CHOICE <i>AngleMeasurement</i> | M | | | |
| >>>UL Angle of Arrival | | | | |
| >>>>UL Angle of Arrival | M | | 9.2.38 | |
| >>>UL Zenith Angle of Arrival | | | | |
| >>>>UL Zenith Angle of Arrival | M | | Z-AoA 9.2.67 | |

| Range bound | Explanation |
|---------------|--|
| maxnoofULAoAs | Maximum no of UL-AOAs values (pair of AOA & ZOA values) that can be reported. Value is 8 |

9.2.72 UL SRS-RSRPP

This information element contains the UL SRS RSRPP measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------|----------|-------|-----------------------|-----------------------|
| First Path RSRP Power | M | | INTEGER (0..126) | |

9.2.73 SRS Resource type

This IE contains the SRS resource type.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description | Criticality | Assigned Criticality |
|--------------------------------|----------|-------|--|---|-------------|----------------------|
| CHOICE <i>Reference Signal</i> | M | | | | - | |
| >SRS | | | | | | |
| >>SRS Resource ID | M | | INTEGER(0..63) | | - | |
| >Positioning SRS | | | | | | |
| >>Positioning SRS Resource ID | M | | INTEGER(0..63) | | - | |
| SRS Port Index | O | | ENUMERATED (id1000, id1001, id1002, id1003, ...) | This IE may be present if the <i>SRS Resource ID</i> IE is present, and is ignored otherwise. | YES | ignore |

9.2.74 Extended Additional Path List

This IE contains the extended additional path results of time measurement.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------------------|----------|-------------------------------------|----------------------------|-----------------------|
| Additional Path Item | | <i>1..<maxNoPathExtended></i> | | |
| >CHOICE <i>Relative Path Delay</i> | M | | | |
| >>k0 | | | INTEGER(0..16351) | |
| >>k1 | | | INTEGER(0..8176) | |
| >>k2 | | | INTEGER(0..4088) | |
| >>k3 | | | INTEGER(0..2044) | |
| >>k4 | | | INTEGER(0..1022) | |
| >>k5 | | | INTEGER(0..511) | |
| >Path Quality | O | | Measurement Quality 9.2.43 | |
| >Multiple UL-AoA | O | | 9.2.71 | |
| >Path Power | O | | UL SRS-RSRPP 9.2.72 | |

| Range bound | Explanation |
|-------------------|---|
| maxNoPathExtended | Maximum no. of additional path measurement. Value is 8. |

9.2.75 ARP ID

This IE is used to uniquely identify an ARP associated with a TRP.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|----------------|----------|-------|-----------------------|-----------------------|
| ARP Identifier | M | | INTEGER (1..16, ...) | |

9.2.76 ARP Location Information

This IE contains the relative position of ARP(s) to the TRP.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|----------------|---------------------------------------|-----------------------|
| ARP Location Information | | 1 | | |
| >ARP Location Information Item | | 1..<maxnoARPs> | | |
| >>ARP ID | M | | 9.2.75 | |
| >>CHOICE <i>ARP Location Type</i> | M | | | |
| >>> <i>geodetic</i> | | | | |
| >>>>ARP Position Relative Geodetic | M | | Relative Geodetic Location 9.2.48 | |
| >>>> <i>cartesian</i> | | | | |
| >>>>ARP Position Relative Cartesian | M | | Relative Cartesian Location 9.2.50 | |

| Range bound | Explanation |
|-------------|---|
| maxnoARPs | Maximum no. of ARPs associated with a TRP. Value is 16. |

9.2.77 LoS/NLoS Information

This IE contains the LoS/NLoS information for UL measurement.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------------------|----------|-------|------------------------|---|
| CHOICE <i>LoS/NLoS Indicator</i> | M | | | |
| > <i>Soft Indicator</i> | | | | |
| >>LoS/NLoS Indicator Soft | M | | INTEGER (0..10) | Values provide the likelihood of a LOS propagation path in the range between 0 and 1 with 0.1 steps resolution. Value '0' indicates NLOS and value '1' indicates LOS. |
| > <i>Hard Indicator</i> | | | | |
| >>LoS/NLoS Indicator Hard | M | | ENUMERATED (NLoS, LoS) | |

9.2.78 UE Tx TEG Association List

This information element contains the list of UE Tx TEG associations.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|------------------------|-----------------------|-----------------------|-------------|----------------------|
| UE Tx TEG Association item | | 1..<maxno UETEGs> | | | - | |
| >UE Tx TEG ID | M | | INTEGER (0..7) | | - | |
| >Positioning SRS Resource ID List | | 1 | | | - | |
| >>Positioning SRS Resource ID Item | | 1..<maxno SRS-PosResou | | | - | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|----------|---------------|-------------------------------|--|-------------|----------------------|
| | | <i>rces</i> > | | | | |
| >>>Positioning SRS Resource ID | M | | INTEGER(0..63) | | - | |
| >Time Stamp | M | | 9.2.42 | | - | |
| >Carrier Frequency | | 0..1 | | Indicates the frequency of the positioning SRS resources | - | |
| >>Point A | M | | INTEGER (0..3279165) | NR ARFCN | - | |
| >>Offset to Carrier | M | | INTEGER (0.2199, ...) | | - | |
| >UE Tx Timing Error Margin | O | | Timing Error Margin 9.2.84 | Timing error margin associated to the UE Tx TEG ID. | YES | ignore |

| Range bound | Explanation |
|-----------------------|--|
| maxnoUETEGs | Maximum no of reported UE Tx TEG associations. Value is 256. |
| maxnoSRS-PosResources | Maximum no of positioning SRS resources. Value is 64. |

9.2.79 TRP Tx TEG Association

This information element contains the TRP Tx TEG information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------------|----------|---|-----------------------|-----------------------|
| TRP TEG item | | <i>1..<maxnoTRP TEGs></i> | | |
| >TRP Tx TEG Information | M | | 9.2.86 | |
| >DL-PRS Resource Set ID | M | | INTEGER (0..7) | |
| >DL-PRS Resource ID List | | 0..1 | | |
| >>DL-PRS Resource ID Item | | <i>1..<maxPRS-ResourcesPer Set></i> | | |
| >>>DL-PRS Resource ID | M | | INTEGER (0..63) | |

| Range bound | Explanation |
|------------------------|--|
| maxnoTRPTEGs | Maximum no of reported TRP Tx TEG association. Value is 8. |
| maxPRS-ResourcesPerSet | Maximum no of DL-PRS resources of the DL-PRS resource set of the TRP. Value is 64. |

9.2.80 TRP TEG Information

This information element contains the TRP TEG information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------------|----------|-------|-----------------------|-----------------------|
| CHOICE TRP TEG | M | | | |
| >RxTx TEG | | | | |
| >>TRP RxTx TEG Information | M | | 9.2.87 | |
| >>TRP Tx TEG Information | O | | 9.2.86 | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------|----------|-------|-----------------------|-----------------------|
| > <i>Rx TEG</i> | | | | |
| >>TRP Rx TEG Information | M | | 9.2.85 | |
| >>TRP Tx TEG Information | M | | 9.2.86 | |

9.2.81 Measurement Characteristics Request Indicator

This IE contains the measurement characteristic information requested by LMF.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--|----------|-------|-----------------------|---|
| Measurement characteristic request indicator | M | | BIT STRING (SIZE(16)) | <p>Each position in the bitmap represents a requested measurement characteristic:</p> <p>first bit: Measurement Beam Information</p> <p>Second bit: Extended Additional Path List</p> <p>Third bit: Additional Path Power</p> <p>Fourth Bit: Multiple UL AoA of Additional Path</p> <p>Fifth bit: LoS/NLoS Information</p> <p>Sixth bit: TRP Rx TEG association for UL-TDOA</p> <p>Seventh bit: TRP RxTxTEG-ID information for DL+UL positioning.</p> <p>Eighth bit: SRS Resource Type</p> <p>Ninth bit: Multiple Measurement Instances</p> <p>Other bits reserved for future use. Value '1' indicates 'requested measurement characteristic', Value '0' indicates 'not requested'.</p> |

9.2.82 TRP Beam Antenna Information

The IE provides the beam antenna information of the TRP. It includes either the explicit beam antenna information, or a reference to another TRP's signalled configuration, or the indication that no change has occurred with respect to previously signalled configuration.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|-------|-----------------------|--|
| CHOICE <i>TRP Beam Antenna Info Item</i> | M | | | |
| > <i>Reference</i> | | | | |
| >>Associated TRP ID | M | | TRP ID 9.2.24 | This IE specifies the <i>TRP ID</i> of the associated TRP from which the beam information parameters |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------------|----------|-------|-----------------------|--|
| | | | | are adopted in Local Coordinate System (LCS). |
| >Explicit | | | | |
| >>TRP Beam Antenna Angles | M | | 9.2.83 | |
| >>>LCS to GCS Translation | O | | 9.2.69 | Included if the azimuth and elevation are not provided in GCS. |
| >No Change | | | NULL | No change compared to the previously signalled configuration for this TRP. |

9.2.83 TRP Beam Antenna Angles

The IE provides the beam antenna information of the TRP.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|--------------------------------------|-----------------------|---|
| TRP Beam Antenna Angles Item | | 1..< <i>maxnoAzimuth Angles</i> > | | |
| >TRP Azimuth Angle | M | | INTEGER (0..359) | For GCS, the azimuth angle is measured counter-clockwise from geographical North. For LCS, the azimuth angle is measured counter-clockwise from the x-axis of the LCS. |
| >TRP Azimuth Angle fine | O | | INTEGER (0..9) | Fine angle |
| >TRP Elevation Angle List | | 1 | | |
| >>TRP Elevation Angle Item | | 1..< <i>maxnoElevationAngles</i> > | | |
| >>>TRP Elevation Angle | M | | INTEGER (0..180) | For GCS, the elevation angle is measured relative to zenith and positive to the horizontal direction (elevation 0 deg. points to zenith, 90 deg to the horizon). For LCS, the elevation angle is measured relative to the z-axis of the LCS (elevation 0 deg. points to the z-axis, 90 deg to the x-y plane). |
| >>>TRP Elevation Angle fine | O | | INTEGER (0..9) | Fine angle |
| >>>TRP Beam Power List | | 1 | | Relative power between DL-PRS Resources for the given Azimuth and Elevation Angle. The first Relative Power element in this list provides the peak power for this Azimuth/Elevation angle and is defined as 0dB power. All the remaining Relative Power Element's in this list provide the relative DL-PRS Resource power relative to this first element in the list. |
| >>>>TRP Beam Power Item | | 2..< <i>maxNumReso</i> | | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------------|----------|---------------------------|-----------------------|---|
| | | <i>urcesPerAngle</i> > | | |
| >>>>PRS Resource Set ID | O | | INTEGER (0..7) | DL-PRS Resource Set ID of the DL-PRS Resource for which the Relative Power is provided. If this field is absent, the DL-PRS Resource Set ID for this instance of the Beam Power List is the same as the DL-PRS Resource Set ID of the previous instance in the Beam Power List. This field shall be included at least in the first instance of the Beam Power List. |
| >>>>PRS Resource ID | M | | INTEGER (0..63) | DL-PRS Resource for which the Relative Power is provided. |
| >>>>TRP Beam Relative Power | M | | INTEGER (0..30) | The power values span from -30 to 0dB |
| >>>>TRP Beam Relative Power "fine" | O | | INTEGER (0..9) | Relative Power with 0.1dB resolution. The power spans from -0.9 to 0dB |

| Range bound | Explanation |
|-------------------------|--|
| maxNumResourcesPerAngle | Maximum number of DL-PRS Resources per angle per TRP. Value is 24. |
| maxnoAzimuthAngles | Maximum number of azimuth angles per TRP. Value is 3600. |
| maxnoElevationAngles | Maximum number of elevation angles per azimuth angle/TRP. Value is 1801. |

9.2.84 Timing Error Margin

This information element contains the Timing error margin for the UE Tx TEG, TRP Rx TEG, or TRP Tx TEG.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|--|-----------------------|
| Timing Error Margin | M | | ENUMERATED(Tc0, Tc2, Tc4, Tc6, Tc8, Tc12, Tc16, Tc20, Tc24, Tc32, Tc40, Tc48, Tc56, Tc64, Tc72, Tc80, ...) | |

9.2.85 TRP Rx TEG Information

This information element contains the TRP Rx TEG information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------------|----------|-------|----------------------------|--|
| TRP Rx TEG ID | M | | INTEGER (0..31) | |
| TRP Rx Timing Error Margin | M | | Timing Error Margin 9.2.84 | Timing error margin associated to the TRP Rx TEG ID. |

9.2.86 TRP Tx TEG Information

This information element contains the TRP Tx TEG information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| TRP Tx TEG ID | M | | INTEGER (0..7) | |

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------------|----------|-------|-------------------------------|--|
| TRP Tx Timing Error Margin | M | | Timing Error Margin 9.2.84 | Timing error margin associated to the TRP Tx TEG ID. |

9.2.87 TRP RxTx TEG Information

This information element contains the TRP RxTx TEG information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------|----------|-------|---|--|
| TRP RxTx TEG ID | M | | INTEGER (0..255) | |
| TRP RxTx Timing Error Margin | M | | ENUMERATED (Tc0dot5, Tc1, Tc2, Tc4, Tc8, Tc12, Tc16, Tc20, Tc24, Tc32, Tc40, Tc48, Tc64, Tc80, Tc96, Tc128, ...) | Timing error margin associated to the TRP RxTx TEG ID. |

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.1 General

Sub clause 9.3 presents the Abstract Syntax of the NRPPa protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of NRPPa messages. NRPPa messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an NRPPa message according to the PDU definitions module and with the following additional rules (Note that in the following, "IE" means an IE in the object set with an explicit id. If one IE needs to appear more than once in one object set, then the different occurrences have different IE ids):

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

If an NRPPa message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.3 Elementary Procedure Definitions

```
-- ASN1START
-- *****
--
-- Elementary Procedure definitions
--
-- *****
```

```
NRPPA-PDU-Descriptions {  
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)  
ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-PDU-Descriptions (0) }
```

```
DEFINITIONS AUTOMATIC TAGS ::=
```

```
BEGIN
```

```
-- *****  
--  
-- IE parameter types from other modules.  
--  
-- *****
```

```
IMPORTS
```

```
    Criticality,  
    ProcedureCode,  
    NRPPATransactionID
```

```
FROM NRPPA-CommonDataTypes
```

```
    ErrorIndication,  
    PrivateMessage,  
    E-CIDMeasurementInitiationRequest,  
    E-CIDMeasurementInitiationResponse,  
    E-CIDMeasurementInitiationFailure,  
    E-CIDMeasurementFailureIndication,  
    E-CIDMeasurementReport,  
    E-CIDMeasurementTerminationCommand,  
    OTDOAInformationRequest,  
    OTDOAInformationResponse,  
    OTDOAInformationFailure,  
    AssistanceInformationControl,  
    AssistanceInformationFeedback,  
    PositioningInformationRequest,  
    PositioningInformationResponse,  
    PositioningInformationFailure,  
    PositioningInformationUpdate,  
    MeasurementRequest,  
    MeasurementResponse,  
    MeasurementFailure,  
    MeasurementReport,  
    MeasurementUpdate,  
    MeasurementAbort,  
    MeasurementFailureIndication,  
    TRPInformationRequest,  
    TRPInformationResponse,  
    TRPInformationFailure,  
    PositioningActivationRequest,  
    PositioningActivationResponse,  
    PositioningActivationFailure,  
    PositioningDeactivation,
```

```

PRSConfigurationRequest,
PRSConfigurationResponse,
PRSConfigurationFailure,
MeasurementPreconfigurationRequired,
MeasurementPreconfigurationConfirm,
MeasurementPreconfigurationRefuse,
MeasurementActivation

```

FROM NRPPA-PDU-Contents

```

id-errorIndication,
id-privateMessage,
id-e-CIDMeasurementInitiation,
id-e-CIDMeasurementFailureIndication,
id-e-CIDMeasurementReport,
id-e-CIDMeasurementTermination,
id-oTDOAInformationExchange,
id-assistanceInformationControl,
id-assistanceInformationFeedback,
id-positioningInformationExchange,
id-positioningInformationUpdate,
id-Measurement,
id-MeasurementReport,
id-MeasurementUpdate,
id-MeasurementAbort,
id-MeasurementFailureIndication,
id-tRPInformationExchange,
id-positioningActivation,
id-positioningDeactivation,
id-pRSConfigurationExchange,
id-measurementPreconfiguration,
id-measurementActivation

```

FROM NRPPA-Constants;

```

-- *****
--
-- Interface Elementary Procedure Class
--
-- *****

NRPPA-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage          ,
    &SuccessfulOutcome           OPTIONAL,
    &UnsuccessfulOutcome        OPTIONAL,
    &procedureCode              ProcedureCode UNIQUE,
    &criticality                 Criticality DEFAULT ignore
}
WITH SYNTAX {
    INITIATING MESSAGE          &InitiatingMessage
    [SUCCESSFUL OUTCOME        &SuccessfulOutcome]

```

```

    [UNSUCCESSFUL OUTCOME      &UnsuccessfulOutcome]
    PROCEDURE CODE            &procedureCode
    [CRITICALITY              &criticality]
}

-- *****
--
-- Interface PDU Definition
--
-- *****

NRPPA-PDU ::= CHOICE {
    initiatingMessage      InitiatingMessage,
    successfulOutcome      SuccessfulOutcome,
    unsuccessfulOutcome    UnsuccessfulOutcome,
    ...
}

InitiatingMessage ::= SEQUENCE {
    procedureCode          NRPPA-ELEMENTARY-PROCEDURE.&procedureCode      ({NRPPA-ELEMENTARY-PROCEDURES}),
    criticality            NRPPA-ELEMENTARY-PROCEDURE.&criticality          ({NRPPA-ELEMENTARY-PROCEDURES}{@procedureCode}),
    nrppatransactionID    NRPPATransactionID,
    value                 NRPPA-ELEMENTARY-PROCEDURE.&InitiatingMessage    ({NRPPA-ELEMENTARY-PROCEDURES}{@procedureCode})
}

SuccessfulOutcome ::= SEQUENCE {
    procedureCode          NRPPA-ELEMENTARY-PROCEDURE.&procedureCode      ({NRPPA-ELEMENTARY-PROCEDURES}),
    criticality            NRPPA-ELEMENTARY-PROCEDURE.&criticality          ({NRPPA-ELEMENTARY-PROCEDURES}{@procedureCode}),
    nrppatransactionID    NRPPATransactionID,
    value                 NRPPA-ELEMENTARY-PROCEDURE.&SuccessfulOutcome    ({NRPPA-ELEMENTARY-PROCEDURES}{@procedureCode})
}

UnsuccessfulOutcome ::= SEQUENCE {
    procedureCode          NRPPA-ELEMENTARY-PROCEDURE.&procedureCode      ({NRPPA-ELEMENTARY-PROCEDURES}),
    criticality            NRPPA-ELEMENTARY-PROCEDURE.&criticality          ({NRPPA-ELEMENTARY-PROCEDURES}{@procedureCode}),
    nrppatransactionID    NRPPATransactionID,
    value                 NRPPA-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome  ({NRPPA-ELEMENTARY-PROCEDURES}{@procedureCode})
}

-- *****
--
-- Interface Elementary Procedure List
--
-- *****

NRPPA-ELEMENTARY-PROCEDURES NRPPA-ELEMENTARY-PROCEDURE ::= {
    NRPPA-ELEMENTARY-PROCEDURES-CLASS-1      |
    NRPPA-ELEMENTARY-PROCEDURES-CLASS-2      ,
    ...
}

NRPPA-ELEMENTARY-PROCEDURES-CLASS-1 NRPPA-ELEMENTARY-PROCEDURE ::= {
    e-CIDMeasurementInitiation |

```

```

oTDOAInformationExchange |
positioningInformationExchange |
measurement |
tRPInformationExchange |
positioningActivation |
pRSConfigurationExchange |
measurementPreconfiguration,
...
}

NRPPA-ELEMENTARY-PROCEDURES-CLASS-2 NRPPA-ELEMENTARY-PROCEDURE ::= {
e-CIDMeasurementFailureIndication |
e-CIDMeasurementReport |
e-CIDMeasurementTermination |
errorIndication |
privateMessage |
assistanceInformationControl |
assistanceInformationFeedback |
positioningInformationUpdate |
measurementReport |
measurementUpdate |
measurementAbort |
measurementFailureIndication |
positioningDeactivation |
measurementActivation,
...
}

-- *****
--
-- Interface Elementary Procedures
--
-- *****

e-CIDMeasurementInitiation NRPPA-ELEMENTARY-PROCEDURE ::= {
INITIATING MESSAGE E-CIDMeasurementInitiationRequest
SUCCESSFUL OUTCOME E-CIDMeasurementInitiationResponse
UNSUCCESSFUL OUTCOME E-CIDMeasurementInitiationFailure
PROCEDURE CODE id-e-CIDMeasurementInitiation
CRITICALITY reject
}

e-CIDMeasurementFailureIndication NRPPA-ELEMENTARY-PROCEDURE ::= {
INITIATING MESSAGE E-CIDMeasurementFailureIndication
PROCEDURE CODE id-e-CIDMeasurementFailureIndication
CRITICALITY ignore
}

e-CIDMeasurementReport NRPPA-ELEMENTARY-PROCEDURE ::= {
INITIATING MESSAGE E-CIDMeasurementReport
PROCEDURE CODE id-e-CIDMeasurementReport
CRITICALITY ignore
}

```



```
}  
  
e-CIDMeasurementTermination NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      E-CIDMeasurementTerminationCommand  
    PROCEDURE CODE          id-e-CIDMeasurementTermination  
    CRITICALITY              reject  
}  
  
oTDOAInformationExchange NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      OTDOAInformationRequest  
    SUCCESSFUL OUTCOME      OTDOAInformationResponse  
    UNSUCCESSFUL OUTCOME    OTDOAInformationFailure  
    PROCEDURE CODE          id-oTDOAInformationExchange  
    CRITICALITY              reject  
}  
  
assistanceInformationControl NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      AssistanceInformationControl  
    PROCEDURE CODE          id-assistanceInformationControl  
    CRITICALITY              reject  
}  
  
assistanceInformationFeedback NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      AssistanceInformationFeedback  
    PROCEDURE CODE          id-assistanceInformationFeedback  
    CRITICALITY              reject  
}  
  
errorIndication NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      ErrorIndication  
    PROCEDURE CODE          id-errorIndication  
    CRITICALITY              ignore  
}  
  
privateMessage NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      PrivateMessage  
    PROCEDURE CODE          id-privateMessage  
    CRITICALITY              ignore  
}  
  
positioningInformationExchange NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      PositioningInformationRequest  
    SUCCESSFUL OUTCOME      PositioningInformationResponse  
    UNSUCCESSFUL OUTCOME    PositioningInformationFailure  
    PROCEDURE CODE          id-positioningInformationExchange  
    CRITICALITY              reject  
}  
  
positioningInformationUpdate NRPPA-ELEMENTARY-PROCEDURE ::= {  
    INITIATING MESSAGE      PositioningInformationUpdate
```

```

    PROCEDURE CODE          id-positioningInformationUpdate
    CRITICALITY             ignore
}

measurement NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementRequest
    SUCCESSFUL OUTCOME      MeasurementResponse
    UNSUCCESSFUL OUTCOME    MeasurementFailure
    PROCEDURE CODE          id-Measurement
    CRITICALITY             reject
}

measurementReport NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementReport
    PROCEDURE CODE          id-MeasurementReport
    CRITICALITY             ignore
}

measurementUpdate NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementUpdate
    PROCEDURE CODE          id-MeasurementUpdate
    CRITICALITY             ignore
}

measurementAbort NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementAbort
    PROCEDURE CODE          id-MeasurementAbort
    CRITICALITY             ignore
}

measurementFailureIndication NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      MeasurementFailureIndication
    PROCEDURE CODE          id-MeasurementFailureIndication
    CRITICALITY             ignore
}

trpInformationExchange NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      TRPInformationRequest
    SUCCESSFUL OUTCOME      TRPInformationResponse
    UNSUCCESSFUL OUTCOME    TRPInformationFailure
    PROCEDURE CODE          id-trpInformationExchange
    CRITICALITY             reject
}

positioningActivation NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PositioningActivationRequest
    SUCCESSFUL OUTCOME      PositioningActivationResponse
    UNSUCCESSFUL OUTCOME    PositioningActivationFailure
    PROCEDURE CODE          id-positioningActivation
    CRITICALITY             reject
}

positioningDeactivation NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE      PositioningDeactivation

```

```

    PROCEDURE CODE      id-positioningDeactivation
    CRITICALITY         ignore
}

PRSCONFIGURATIONEXCHANGE NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE  PRSCONFIGURATIONREQUEST
    SUCCESSFUL OUTCOME  PRSCONFIGURATIONRESPONSE
    UNSUCCESSFUL OUTCOME PRSCONFIGURATIONFAILURE
    PROCEDURE CODE      id-pRSCONFIGURATIONEXCHANGE
    CRITICALITY         reject
}

MEASUREMENTPRECONFIGURATION NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE  MEASUREMENTPRECONFIGURATIONREQUIRED
    SUCCESSFUL OUTCOME  MEASUREMENTPRECONFIGURATIONCONFIRM
    UNSUCCESSFUL OUTCOME MEASUREMENTPRECONFIGURATIONREFUSE
    PROCEDURE CODE      id-measurementPreconfiguration
    CRITICALITY         reject
}

MEASUREMENTACTIVATION NRPPA-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE  MEASUREMENTACTIVATION
    PROCEDURE CODE      id-measurementActivation
    CRITICALITY         ignore
}

END
-- ASN1STOP

```

9.3.4 PDU Definitions

```

-- ASN1START
-- *****
--
-- PDU definitions for NRPPa
--
-- *****

NRPPA-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-PDU-Contents (1) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- IE parameter types from other modules
--
-- *****

```

IMPORTS

Cause,
CriticalityDiagnostics,
E-CID-MeasurementResult,
OTDOACells,
OTDOA-Information-Item,
Measurement-ID,
UE-Measurement-ID,
MeasurementPeriodicity,
MeasurementQuantities,
ReportCharacteristics,
RequestedSRSTransmissionCharacteristics,
Cell-Portion-ID,
OtherRATMeasurementQuantities,
OtherRATMeasurementResult,
WLANMeasurementQuantities,
WLANMeasurementResult,
Assistance-Information,
Broadcast,
AssistanceInformationFailureList,
SRSConfiguration,
TRPMeasurementQuantities,
TrpMeasurementResult,
TRP-ID,
TRPInformationTypeListTRPReq,
TRPInformationListTRPResp,
TRP-MeasurementRequestList,
TRP-MeasurementResponseList,
TRP-MeasurementUpdateList,
MeasurementBeamInfoRequest,
PositioningBroadcastCells,
SRSResourceSetID,
SpatialRelationInfo,
SRSResourceTrigger,
TRPList,
AbortTransmission,
SystemFrameNumber,
SlotNumber,
RelativeTime1900,
SpatialRelationPerSRSResource,
MeasurementPeriodicityExtended,
PRSTRPList,
PRSTransmissionTRPList,
ResponseTime,
UEReportingInformation,
UETxTEGAssociationList,
TRP-PRS-Information-List,
PRS-Measurements-Info-List,
UE-TEG-Info-Request,
MeasurementCharacteristicsRequestIndicator,
MeasurementTimeOccasion,
PRSConfigRequestType,
MeasurementAmount,

```
PreconfigurationResult,  
RequestType,  
UE-TEG-ReportingPeriodicity,  
MeasurementPeriodicityNR-AoA,  
SRSTransmissionStatus
```

FROM NRPPA-IEs

```
PrivateIE-Container{},  
ProtocolExtensionContainer{},  
ProtocolIE-Container{},  
ProtocolIE-ContainerList{},  
ProtocolIE-Single-Container{},  
NRPPA-PRIVATE-IES,  
NRPPA-PROTOCOL-EXTENSION,  
NRPPA-PROTOCOL-IES
```

FROM NRPPA-Containers

```
maxnoOTDOAtypes,  
id-Cause,  
id-CriticalityDiagnostics,  
id-LMF-Measurement-ID,  
id-LMF-UE-Measurement-ID,  
id-OTDOACells,  
id-OTDOA-Information-Type-Group,  
id-OTDOA-Information-Type-Item,  
id-ReportCharacteristics,  
id-MeasurementPeriodicity,  
id-MeasurementQuantities,  
id-RAN-Measurement-ID,  
id-RAN-UE-Measurement-ID,  
id-E-CID-MeasurementResult,  
id-RequestedSRSTransmissionCharacteristics,  
id-Cell-Portion-ID,  
id-OtherRATMeasurementQuantities,  
id-OtherRATMeasurementResult,  
id-WLANMeasurementQuantities,  
id-WLANMeasurementResult,  
id-Assistance-Information,  
id-Broadcast,  
id-AssistanceInformationFailureList,  
id-SRSConfiguration,  
id-TRPMeasurementQuantities,  
id-MeasurementResult,  
id-TRP-ID,  
id-TRPInformationTypeListTRPReq,  
id-TRPInformationListTRPResp,  
id-TRP-MeasurementRequestList,  
id-TRP-MeasurementResponseList,  
id-TRP-MeasurementReportList,  
id-TRP-MeasurementUpdateList,  
id-MeasurementBeamInfoRequest,
```

```

id-PositioningBroadcastCells,
id-SRSType,
id-ActivationTime,
id-SRSResourceSetID,
id-TRPLList,
id-SRSSpatialRelation,
id-AbortTransmission,
id-SystemFrameNumber,
id-SlotNumber,
id-SRSResourceTrigger,
id-SFNInitialisationTime,
id-SRSSpatialRelationPerSRSResource,
id-MeasurementPeriodicityExtended,
id-PRSTRPLList,
id-PRSTransmissionTRPLList,
id-ResponseTime,
id-UEReportingInformation,
id-UEtxTEGAssociationList,
id-TRP-PRS-Information-List,
id-PRS-Measurements-Info-List,
id-UE-TEG-Info-Request,
id-MeasurementCharacteristicsRequestIndicator,
id-MeasurementTimeOccasion,
id-PRSConfigRequestType,
id-MeasurementAmount,
id-PreconfigurationResult,
id-RequestType,
id-UE-TEG-ReportingPeriodicity,
id-MeasurementPeriodicityNR-AoA,
id-SRSTransmissionStatus

```

```
FROM NRPPA-Constants;
```

```

-- *****
--
-- E-CID MEASUREMENT INITIATION REQUEST
--
-- *****

```

```

E-CIDMeasurementInitiationRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{E-CIDMeasurementInitiationRequest-IEs}},
    ...
}

```

```

E-CIDMeasurementInitiationRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject  TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-ReportCharacteristics          CRITICALITY reject  TYPE ReportCharacteristics     PRESENCE mandatory}|
    { ID id-MeasurementPeriodicity         CRITICALITY reject  TYPE MeasurementPeriodicity    PRESENCE conditional}|
-- The IE shall be present if the Report Characteristics IE is set to "periodic" --
    { ID id-MeasurementQuantities          CRITICALITY reject  TYPE MeasurementQuantities     PRESENCE mandatory}|
    { ID id-OtherRATMeasurementQuantities  CRITICALITY ignore  TYPE OtherRATMeasurementQuantities PRESENCE optional}|
}

```

```

    { ID id-WLANMeasurementQuantities      CRITICALITY ignore  TYPE WLANMeasurementQuantities      PRESENCE optional}|
    { ID id-MeasurementPeriodicityNR-AoA    CRITICALITY reject  TYPE MeasurementPeriodicityNR-AoA          PRESENCE conditional},
-- The IE shall be present if the Report Characteristics IE is set to "periodic" and the MeasurementQuantities-Item IE in the MeasurementQuantities
IE is set to the value "angleOfArrivalNR" --
    ...
}

-- *****
--
-- E-CID MEASUREMENT INITIATION RESPONSE
--
-- *****

E-CIDMeasurementInitiationResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{E-CIDMeasurementInitiationResponse-IEs}},
    ...
}

E-CIDMeasurementInitiationResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject  TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-RAN-UE-Measurement-ID          CRITICALITY reject  TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-E-CID-MeasurementResult        CRITICALITY ignore  TYPE E-CID-MeasurementResult    PRESENCE optional}|
    { ID id-CriticalityDiagnostics          CRITICALITY ignore  TYPE CriticalityDiagnostics      PRESENCE optional}|
    { ID id-Cell-Portion-ID                CRITICALITY ignore  TYPE Cell-Portion-ID            PRESENCE optional}|
    { ID id-OtherRATMeasurementResult      CRITICALITY ignore  TYPE OtherRATMeasurementResult   PRESENCE optional}|
    { ID id-WLANMeasurementResult          CRITICALITY ignore  TYPE WLANMeasurementResult       PRESENCE optional},
    ...
}

-- *****
--
-- E-CID MEASUREMENT INITIATION FAILURE
--
-- *****

E-CIDMeasurementInitiationFailure ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{E-CIDMeasurementInitiationFailure-IEs}},
    ...
}

E-CIDMeasurementInitiationFailure-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject  TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-Cause                          CRITICALITY ignore  TYPE Cause                      PRESENCE mandatory}|
    { ID id-CriticalityDiagnostics          CRITICALITY ignore  TYPE CriticalityDiagnostics      PRESENCE optional},
    ...
}

-- *****
--
-- E-CID MEASUREMENT FAILURE INDICATION
--
-- *****

```

```

E-CIDMeasurementFailureIndication ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{E-CIDMeasurementFailureIndication-IEs}},
    ...
}

E-CIDMeasurementFailureIndication-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-RAN-UE-Measurement-ID          CRITICALITY reject TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-Cause                          CRITICALITY ignore  TYPE Cause                          PRESENCE mandatory},
    ...
}

-- *****
--
-- E-CID MEASUREMENT REPORT
--
-- *****

E-CIDMeasurementReport ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{E-CIDMeasurementReport-IEs}},
    ...
}

E-CIDMeasurementReport-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-RAN-UE-Measurement-ID          CRITICALITY reject TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-E-CID-MeasurementResult        CRITICALITY ignore  TYPE E-CID-MeasurementResult        PRESENCE mandatory}|
    { ID id-Cell-Portion-ID                CRITICALITY ignore  TYPE Cell-Portion-ID                PRESENCE optional},
    ...
}

-- *****
--
-- E-CID MEASUREMENT TERMINATION
--
-- *****

E-CIDMeasurementTerminationCommand ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container    {{E-CIDMeasurementTerminationCommand-IEs}},
    ...
}

E-CIDMeasurementTerminationCommand-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-UE-Measurement-ID          CRITICALITY reject TYPE UE-Measurement-ID          PRESENCE mandatory}|
    { ID id-RAN-UE-Measurement-ID          CRITICALITY reject TYPE UE-Measurement-ID          PRESENCE mandatory},
    ...
}

-- *****
--
-- OTDOA INFORMATION REQUEST

```



```

--
-- *****
OTDOAInformationRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{OTDOAInformationRequest-IEs}},
    ...
}

OTDOAInformationRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-OTDOA-Information-Type-Group      CRITICALITY reject  TYPE OTDOA-Information-Type          PRESENCE mandatory},
    ...
}

OTDOA-Information-Type ::= SEQUENCE (SIZE(1..maxnoOTDOAtypes)) OF ProtocolIE-Single-Container { { OTDOA-Information-Type-ItemIEs } }

OTDOA-Information-Type-ItemIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-OTDOA-Information-Type-Item      CRITICALITY reject  TYPE OTDOA-Information-Type-Item          PRESENCE mandatory},
    ...
}

OTDOA-Information-Type-Item ::= SEQUENCE {
    oTDOA-Information-Item      OTDOA-Information-Item,
    iE-Extensions                ProtocolExtensionContainer { { OTDOA-Information-Type-ItemExtIEs } } OPTIONAL,
    ...
}

OTDOA-Information-Type-ItemExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- *****
--
-- OTDOA INFORMATION RESPONSE
--
-- *****

OTDOAInformationResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{OTDOAInformationResponse-IEs}},
    ...
}

OTDOAInformationResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-OTDOACells                CRITICALITY ignore  TYPE OTDOACells                PRESENCE mandatory}|
    { ID id-CriticalityDiagnostics     CRITICALITY ignore  TYPE CriticalityDiagnostics    PRESENCE optional},
    ...
}

-- *****
--
-- OTDOA INFORMATION FAILURE
--
-- *****

OTDOAInformationFailure ::= SEQUENCE {

```

```

    protocolIEs          ProtocolIE-Container    {{OTDOAInformationFailure-IEs}},
  }
  ...
}

OTDOAInformationFailure-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-Cause          CRITICALITY ignore  TYPE Cause          PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics  CRITICALITY ignore  TYPE CriticalityDiagnostics  PRESENCE optional},
  ...
}

-- *****
--
-- ASSISTANCE INFORMATION CONTROL
--
-- *****

AssistanceInformationControl ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container    {{AssistanceInformationControl-IEs}},
  ...
}

AssistanceInformationControl-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-Assistance-Information  CRITICALITY reject  TYPE Assistance-Information  PRESENCE optional}|
  { ID id-Broadcast                CRITICALITY reject  TYPE Broadcast                PRESENCE optional}|
  { ID id-PositioningBroadcastCells  CRITICALITY reject  TYPE PositioningBroadcastCells  PRESENCE optional},
  ...
}

-- *****
--
-- ASSISTANCE INFORMATION FEEDBACK
--
-- *****

AssistanceInformationFeedback ::= SEQUENCE {
  protocolIEs          ProtocolIE-Container    {{AssistanceInformationFeedback-IEs}},
  ...
}

AssistanceInformationFeedback-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-AssistanceInformationFailureList  CRITICALITY reject  TYPE AssistanceInformationFailureList  PRESENCE optional}|
  { ID id-PositioningBroadcastCells          CRITICALITY reject  TYPE PositioningBroadcastCells          PRESENCE optional}|
  { ID id-CriticalityDiagnostics              CRITICALITY ignore  TYPE CriticalityDiagnostics              PRESENCE optional},
  ...
}

-- *****
--
-- ERROR INDICATION
--
-- *****

```

```

ErrorIndication ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container  {{ErrorIndication-IEs}},
    ...
}

ErrorIndication-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore  TYPE Cause          PRESENCE optional }|
    { ID id-CriticalityDiagnostics  CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional },
    ...
}

-- *****
--
-- PRIVATE MESSAGE
--
-- *****

PrivateMessage ::= SEQUENCE {
    privateIEs      PrivateIE-Container  {{PrivateMessage-IEs}},
    ...
}

PrivateMessage-IEs NRPPA-PRIVATE-IES ::= {
    ...
}

-- *****
--
-- POSITIONING INFORMATION REQUEST
--
-- *****

PositioningInformationRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container  {{PositioningInformationRequest-IEs}},
    ...
}

PositioningInformationRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-RequestedSRSTransmissionCharacteristics  CRITICALITY ignore  TYPE RequestedSRSTransmissionCharacteristics  PRESENCE optional }|
    { ID id-UEReportingInformation                  CRITICALITY ignore  TYPE UEReportingInformation                PRESENCE optional }|
    { ID id-UE-TEG-Info-Request                     CRITICALITY ignore  TYPE UE-TEG-Info-Request                 PRESENCE optional }|
    { ID id-UE-TEG-ReportingPeriodicity             CRITICALITY reject  TYPE UE-TEG-ReportingPeriodicity        PRESENCE conditional },
-- The IE shall be present if the UE TEG Info Request IE is set to "periodic"
    ...
}

-- *****
--
-- POSITIONING INFORMATION RESPONSE
--
-- *****

PositioningInformationResponse ::= SEQUENCE {

```

```

    protocolIEs      ProtocolIE-Container    {{PositioningInformationResponse-IEs}},
  ...
}

PositioningInformationResponse-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-SRSConfiguration          CRITICALITY ignore  TYPE SRSConfiguration          PRESENCE optional}|
  { ID id-SFNInitialisationTime     CRITICALITY ignore  TYPE RelativeTime1900         PRESENCE optional}|
  { ID id-CriticalityDiagnostics     CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional}|
  { ID id-UETxTEGAssociationList     CRITICALITY ignore  TYPE UETxTEGAssociationList   PRESENCE optional},
  ...
}

-- *****
--
-- POSITIONING INFORMATION FAILURE
--
-- *****

PositioningInformationFailure ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container    {{PositioningInformationFailure-IEs}},
  ...
}

PositioningInformationFailure-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-Cause                    CRITICALITY ignore  TYPE Cause                    PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics    CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional},
  ...
}

-- *****
--
-- POSITIONING INFORMATION UPDATE
--
-- *****

PositioningInformationUpdate ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container    {{PositioningInformationUpdate-IEs}},
  ...
}

PositioningInformationUpdate-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-SRSConfiguration          CRITICALITY ignore  TYPE SRSConfiguration          PRESENCE optional}|
  { ID id-SFNInitialisationTime     CRITICALITY ignore  TYPE RelativeTime1900         PRESENCE optional}|
  { ID id-UETxTEGAssociationList     CRITICALITY ignore  TYPE UETxTEGAssociationList   PRESENCE optional}|
  { ID id-SRSTransmissionStatus     CRITICALITY ignore  TYPE SRSTransmissionStatus    PRESENCE optional},
  ...
}

-- *****
--
-- MEASUREMENT REQUEST
--
-- *****

```

```
MeasurementRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{MeasurementRequest-IEs}},
    ...
}
```

```
MeasurementRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-Measurement-ID          CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-TRP-MeasurementRequestList  CRITICALITY reject  TYPE TRP-MeasurementRequestList PRESENCE mandatory}|
    { ID id-ReportCharacteristics       CRITICALITY reject  TYPE ReportCharacteristics      PRESENCE mandatory}|
    { ID id-MeasurementPeriodicity      CRITICALITY reject  TYPE MeasurementPeriodicity     PRESENCE conditional}|
-- The IE shall be present if the Report Characteritics IE is set to "periodic" -
    { ID id-TRPMeasurementQuantities    CRITICALITY reject  TYPE TRPMeasurementQuantities   PRESENCE mandatory}|
    { ID id-SFNInitialisationTime       CRITICALITY ignore  TYPE RelativeTime1900           PRESENCE optional}|
    { ID id-SRSConfiguration            CRITICALITY ignore  TYPE SRSConfiguration           PRESENCE optional}|
    { ID id-MeasurementBeamInfoRequest  CRITICALITY ignore  TYPE MeasurementBeamInfoRequest PRESENCE optional}|
    { ID id-SystemFrameNumber           CRITICALITY ignore  TYPE SystemFrameNumber          PRESENCE optional}|
    { ID id-SlotNumber                  CRITICALITY ignore  TYPE SlotNumber                  PRESENCE optional}|
    { ID id-MeasurementPeriodicityExtended CRITICALITY reject  TYPE MeasurementPeriodicityExtended PRESENCE conditional}|
-- The IE shall be present the MeasurementPeriodicity IE is set to the value "extended"
    { ID id-ResponseTime                CRITICALITY ignore  TYPE ResponseTime               PRESENCE optional}|
    { ID id-MeasurementCharacteristicsRequestIndicator CRITICALITY ignore  TYPE MeasurementCharacteristicsRequestIndicator PRESENCE optional}|
optional}|
    { ID id-MeasurementTimeOccasion      CRITICALITY ignore  TYPE MeasurementTimeOccasion     PRESENCE optional}|
    { ID id-MeasurementAmount            CRITICALITY ignore  TYPE MeasurementAmount           PRESENCE optional},
    ...
}
```

```
-- *****
--
-- MEASUREMENT RESPONSE
--
-- *****
```

```
MeasurementResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{MeasurementResponse-IEs}},
    ...
}
```

```
MeasurementResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-LMF-Measurement-ID          CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-RAN-Measurement-ID          CRITICALITY reject  TYPE Measurement-ID          PRESENCE mandatory}|
    { ID id-TRP-MeasurementResponseList CRITICALITY reject  TYPE TRP-MeasurementResponseList PRESENCE optional}|
    { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics   PRESENCE optional},
    ...
}
```

```
-- *****
--
-- MEASUREMENT FAILURE
--
-- *****
```

```
MeasurementFailure ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{MeasurementFailure-IEs}},
```

```

}
...
MeasurementFailure-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-Cause                   CRITICALITY ignore  TYPE Cause                          PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics   CRITICALITY ignore  TYPE CriticalityDiagnostics         PRESENCE optional},
  ...
}
-- *****
--
-- MEASUREMENT REPORT
--
-- *****

MeasurementReport ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container  {{MeasurementReport-IEs}},
  ...
}

MeasurementReport-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-RAN-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-TRP-MeasurementReportList CRITICALITY reject  TYPE TRP-MeasurementResponseList PRESENCE mandatory},
  ...
}
-- *****
--
-- MEASUREMENT UPDATE
--
-- *****

MeasurementUpdate ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container  {{MeasurementUpdate-IEs}},
  ...
}

MeasurementUpdate-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-RAN-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-SRSConfiguration        CRITICALITY ignore  TYPE SRSConfiguration    PRESENCE optional}|
  { ID id-TRP-MeasurementUpdateList CRITICALITY reject  TYPE TRP-MeasurementUpdateList PRESENCE optional}|
  { ID id-MeasurementCharacteristicsRequestIndicator CRITICALITY ignore  TYPE MeasurementCharacteristicsRequestIndicator PRESENCE optional}|
  { ID id-MeasurementTimeOccasion  CRITICALITY ignore  TYPE MeasurementTimeOccasion  PRESENCE optional},
  ...
}
-- *****
--
-- MEASUREMENT ABORT
--

```

```

-- *****
MeasurementAbort ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container    {{MeasurementAbort-IEs}},
  ...
}

MeasurementAbort-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-RAN-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory},
  ...
}

-- *****
-- MEASUREMENT FAILURE INDICATION
-- *****

MeasurementFailureIndication ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container    {{MeasurementFailureIndication-IEs}},
  ...
}

MeasurementFailureIndication-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-LMF-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-RAN-Measurement-ID      CRITICALITY reject  TYPE Measurement-ID      PRESENCE mandatory}|
  { ID id-Cause                   CRITICALITY ignore  TYPE Cause                PRESENCE mandatory},
  ...
}

-- *****
-- TRP INFORMATION REQUEST
-- *****

TRPInformationRequest ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container    {{TRPInformationRequest-IEs}},
  ...
}

TRPInformationRequest-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-TRPList                  CRITICALITY ignore  TYPE TRPList              PRESENCE optional}|
  { ID id-TRPInformationTypeListTRPReq  CRITICALITY reject  TYPE TRPInformationTypeListTRPReq  PRESENCE mandatory},
  ...
}

-- *****
-- TRP INFORMATION RESPONSE
-- *****

```

```

TRPInformationResponse ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{TRPInformationResponse-IEs}},
    ...
}

TRPInformationResponse-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-TRPInformationListTRPResp      CRITICALITY ignore TYPE TRPInformationListTRPResp      PRESENCE mandatory} |
    { ID id-CriticalityDiagnostics         CRITICALITY ignore TYPE CriticalityDiagnostics         PRESENCE optional},
    ...
}

-- *****
--
-- TRP INFORMATION FAILURE
--
-- *****

TRPInformationFailure ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    {{TRPInformationFailure-IEs}},
    ...
}

TRPInformationFailure-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore TYPE Cause          PRESENCE mandatory} |
    { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional},
    ...
}

-- *****
--
-- POSITIONING ACTIVATION REQUEST
--
-- *****

PositioningActivationRequest ::= SEQUENCE {
    protocolIEs      ProtocolIE-Container    { { PositioningActivationRequestIEs } },
    ...
}

PositioningActivationRequestIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-SRSType        CRITICALITY reject TYPE SRSType        PRESENCE mandatory } |
    { ID id-ActivationTime CRITICALITY ignore TYPE RelativeTime1900 PRESENCE optional },
    ...
}

SRSType ::= CHOICE {
    semipersistentSRS          SemipersistentSRS,
    aperiodicSRS              AperiodicSRS,
    choice-Extension          ProtocolIE-Single-Container { { SRSType-ExtIEs } }
}

```



```

SRSType-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

SemipersistentSRS ::= SEQUENCE {
  sRSResourceSetID          SRSResourceSetID,
  iE-Extensions             ProtocolExtensionContainer { {SemipersistentSRS-ExtIEs} } OPTIONAL,
  ...
}

SemipersistentSRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-SRSSpatialRelation          CRITICALITY ignore  EXTENSION SpatialRelationInfo          PRESENCE optional }|
  { ID id-SRSSpatialRelationPerSRSResource  CRITICALITY ignore  EXTENSION SpatialRelationPerSRSResource  PRESENCE optional },
  ...
}

AperiodicSRS ::= SEQUENCE {
  aperiodic                ENUMERATED{true,...},
  sRSResourceTrigger       SRSResourceTrigger OPTIONAL,
  iE-Extensions            ProtocolExtensionContainer { {AperiodicSRS-ExtIEs} } OPTIONAL,
  ...
}

AperiodicSRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

-- *****
--
-- POSITIONING ACTIVATION RESPONSE
--
-- *****

PositioningActivationResponse ::= SEQUENCE {
  protocolIEs             ProtocolIE-Container          { { PositioningActivationResponseIEs} },
  ...
}

PositioningActivationResponseIEs NRPPA-PROTOCOL-IES ::= {
  { ID id-CriticalityDiagnostics          CRITICALITY ignore  TYPE CriticalityDiagnostics          PRESENCE optional }|
  { ID id-SystemFrameNumber              CRITICALITY ignore  TYPE SystemFrameNumber              PRESENCE optional }|
  { ID id-SlotNumber                     CRITICALITY ignore  TYPE SlotNumber                     PRESENCE optional },
  ...
}

-- *****
--
-- POSITIONING ACTIVATION FAILURE
--
-- *****

```

```

PositioningActivationFailure ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { { PositioningActivationFailureIEs } },
    ...
}

PositioningActivationFailureIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-Cause          CRITICALITY ignore  TYPE Cause          PRESENCE mandatory }|
    { ID id-CriticalityDiagnostics  CRITICALITY ignore  TYPE CriticalityDiagnostics  PRESENCE optional },
    ...
}

-- *****
--
-- POSITIONING DEACTIVATION
--
-- *****

PositioningDeactivation ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      { { PositioningDeactivationIEs } },
    ...
}

PositioningDeactivationIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-AbortTransmission  CRITICALITY ignore  TYPE AbortTransmission  PRESENCE mandatory } ,
    ...
}

-- *****
--
-- PRS CONFIGURATION REQUEST
--
-- *****

PRSConfigurationRequest ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      {{PRSConfigurationRequest-IEs}},
    ...
}

PRSConfigurationRequest-IEs NRPPA-PROTOCOL-IES ::= {
    { ID id-PRSConfigRequestType  CRITICALITY reject  TYPE PRSConfigRequestType  PRESENCE mandatory}|
    { ID id-PRSTRPLList          CRITICALITY ignore  TYPE PRSTRPLList          PRESENCE mandatory},
    ...
}

-- *****
--
-- PRS CONFIGURATION RESPONSE
--
-- *****

PRSConfigurationResponse ::= SEQUENCE {
    protocolIEs          ProtocolIE-Container      {{ PRSConfigurationResponse-IEs}},

```

```

}
...
}
PRSConfigurationResponse-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-PRSTransmissionTRPList CRITICALITY ignore TYPE PRSTransmissionTRPList PRESENCE optional}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional},
  ...
}
-- *****
--
-- PRS CONFIGURATION FAILURE
--
-- *****

PRSConfigurationFailure ::= SEQUENCE {
  protocolIEs ProtocolIE-Container {{ PRSConfigurationFailure-IEs}},
  ...
}

PRSConfigurationFailure-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-Cause CRITICALITY ignore TYPE Cause PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional},
  ...
}

-- *****
--
-- MEASUREMENT PRECONFIGURATION REQUIRED
--
-- *****

MeasurementPreconfigurationRequired ::= SEQUENCE {
  protocolIEs ProtocolIE-Container {{ MeasurementPreconfigurationRequired-IEs}},
  ...
}

MeasurementPreconfigurationRequired-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-TRP-PRS-Information-List CRITICALITY ignore TYPE TRP-PRS-Information-List PRESENCE mandatory},
  ...
}

-- *****
--
-- MEASUREMENT PRECONFIGURATION CONFIRM
--
-- *****

MeasurementPreconfigurationConfirm ::= SEQUENCE {
  protocolIEs ProtocolIE-Container {{ MeasurementPreconfigurationConfirm-IEs}},
  ...
}

```

```

MeasurementPreconfigurationConfirm-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-PreconfigurationResult      CRITICALITY ignore  TYPE PreconfigurationResult      PRESENCE mandatory }|
  { ID id-CriticalityDiagnostics      CRITICALITY ignore  TYPE CriticalityDiagnostics      PRESENCE optional },
  ...
}

-- *****
--
-- MEASUREMENT PRECONFIGURATION REFUSE
--
-- *****

MeasurementPreconfigurationRefuse ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container      {{ MeasurementPreconfigurationRefuse-IEs}},
  ...
}

MeasurementPreconfigurationRefuse-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-Cause                CRITICALITY ignore  TYPE Cause                PRESENCE mandatory}|
  { ID id-CriticalityDiagnostics CRITICALITY ignore  TYPE CriticalityDiagnostics PRESENCE optional},
  ...
}

-- *****
--
-- MEASUREMENT ACTIVATION
--
-- *****

MeasurementActivation ::= SEQUENCE {
  protocolIEs      ProtocolIE-Container      { { MeasurementActivation-IEs } },
  ...
}

MeasurementActivation-IEs NRPPA-PROTOCOL-IES ::= {
  { ID id-RequestType          CRITICALITY reject  TYPE RequestType          PRESENCE mandatory}|
  { ID id-PRS-Measurements-Info-List CRITICALITY ignore  TYPE PRS-Measurements-Info-List PRESENCE optional},
  ...
}

END
-- ASN1STOP

```

9.3.5 Information Element definitions

```

-- ASN1START
-- *****
--
-- Information Element Definitions
--
-- *****

```

```
NRPPA-IEs {  
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)  
ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-IEs (2) }
```

```
DEFINITIONS AUTOMATIC TAGS ::=
```

```
BEGIN
```

```
IMPORTS
```

```
id-MeasurementQuantities-Item,  
id-CGI-NR,  
id-SFNInitialisationTime-NR,  
id-GeographicalCoordinates,  
id-ResultSS-RSRP,  
id-ResultSS-RSRQ,  
id-ResultCSI-RSRP,  
id-ResultCSI-RSRQ,  
id-AngleOfArrivalNR,  
id-ResultNR,  
id-ResultEUTRA,  
maxCellinRANnode,  
maxCellReport,  
maxNrOfErrors,  
maxNoMeas,  
maxnoOTDOAtypes,  
maxServCell,  
id-OtherRATMeasurementQuantities-Item,  
id-WLANMeasurementQuantities-Item,  
maxGERANMeas,  
maxUTRANMeas,  
maxWLANchannels,  
maxnoFreqHoppingBandsMinusOne,  
id-TDD-Config-EUTRA-Item,  
maxNrOfPosSImessage,  
maxnoAssistInfoFailureListItems,  
maxNrOfSegments,  
maxNrOfPosSIBs,  
maxnoPosMeas,  
maxnoTRPs,  
maxnoTRPInfoTypes,  
maxNoOfMeasTRPs,  
maxNoPath,  
maxnoofAngleInfo,  
maxnolcs-gcs-translation,  
maxnoBcastCell,  
maxnoSRSTriggerStates,  
maxnoSpatialRelations,  
maxNRMeas,  
maxEUTRAMEas,  
maxIndexesReport,  
maxCellReportNR,  
maxnoSRS-Carriers,  
maxnoSCSs,
```

maxnoSRS-Resources,
maxnoSRS-PosResources,
maxnoSRS-ResourceSets,
maxnoSRS-ResourcePerSet,
maxnoSRS-PosResourceSets,
maxnoSRS-PosResourcePerSet,
maxPRS-ResourceSets,
maxPRS-ResourcesPerSet,
maxNoSSBs,
maxnoofPRSresourceSet,
maxnoofPRSresource,
maxnoofULAoAs,
maxNoPathExtended,
maxnoARPs,
maxnoTRPTEGs,
maxnoUETEGs,
maxFreqLayers,
maxnoPRSTRPs,
maxNumResourcesPerAngle,
maxnoAzimuthAngles,
maxnoElevationAngles,
id-Cell-ID,
id-TRPInformationTypeItem,
id-SrsFrequency,
id-TRPType,
id-SRSSpatialRelationPerSRSResource,
id-PRS-Resource-ID,
id-OnDemandPRS,
id-AoA-SearchWindow,
id-ZoA,
id-MultipleULAoA,
id-UL-SRS-RSRPP,
id-SRSResourcetype,
id-ExtendedAdditionalPathList,
id-ARPLocationInfo,
id-ARP-ID,
id-LoS-NLoSInformation,
id-NumberOfTRPRxTEG,
id-NumberOfTRPRxTxTEG,
id-TRPTxTEGAssociation,
id-TRPTEGInformation,
id-TRP-Rx-TEGInformation,
id-TRPBeamAntennaInformation,
id-NR-TADV,
id-pathPower,
id-SRSPortIndex,
id-UETxTimingErrorMargin,
id-nrofSymbolsExtended,
id-repetitionFactorExtended,
id-StartRBHopping,
id-StartRBIndex,
id-transmissionCombn8,
id-SCS-480,
id-SCS-960

```

FROM NRPPA-Constants

    Criticality,
    NRPPATransactionID,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage

FROM NRPPA-CommonDataTypes

    ProtocolExtensionContainer{},
    ProtocolIE-Single-Container{},

    NRPPA-PROTOCOL-EXTENSION,
    NRPPA-PROTOCOL-IES

FROM NRPPA-Containers;

-- A

AbortTransmission ::= CHOICE {
    deactivateSRSResourceSetID    SRSResourceSetID,
    releaseALL                     NULL,
    choice-extension               ProtocolIE-Single-Container { { AbortTransmission-ExtIEs } }
}

AbortTransmission-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

ActiveULBWP ::= SEQUENCE {
    locationAndBandwidth          INTEGER (0..37949,...),
    subcarrierSpacing             ENUMERATED {kHz15, kHz30, kHz60, kHz120,..., kHz480, kHz960},
    cyclicPrefix                  ENUMERATED {normal, extended},
    txDirectCurrentLocation        INTEGER (0..3301,...),
    shift7dot5kHz                 ENUMERATED {true, ...} OPTIONAL,
    sRSConfig                     SRSConfig,
    iE-Extensions                 ProtocolExtensionContainer { { ActiveULBWP-ExtIEs } } OPTIONAL,
    ...
}

ActiveULBWP-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

AdditionalPathList ::= SEQUENCE (SIZE (1.. maxNoPath)) OF AdditionalPathListItem

AdditionalPathListItem ::= SEQUENCE {
    relativeTimeOfPath            RelativePathDelay,

```

```

    pathQuality          TrpMeasurementQuality  OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { AdditionalPathListItem-ExtIEs } } OPTIONAL,
    ...
}

AdditionalPathListItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-MultipleULAoA  CRITICALITY ignore EXTENSION MultipleULAoA PRESENCE optional} |
    { ID id-pathPower      CRITICALITY ignore EXTENSION UL-SRS-RSRPP PRESENCE optional},
    ...
}

ExtendedAdditionalPathList ::= SEQUENCE (SIZE (1.. maxNoPathExtended)) OF ExtendedAdditionalPathList-Item

ExtendedAdditionalPathList-Item ::= SEQUENCE {
    relativeTimeOfPath  RelativePathDelay,
    pathQuality          TrpMeasurementQuality  OPTIONAL,
    multipleULAoA        MultipleULAoA          OPTIONAL,
    pathPower            UL-SRS-RSRPP           OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { ExtendedAdditionalPathList-Item-ExtIEs } } OPTIONAL,
    ...
}

ExtendedAdditionalPathList-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

AoA-AssistanceInfo ::= SEQUENCE {
    angleMeasurement    AngleMeasurementType,
    LCS-to-GCS-Translation  LCS-to-GCS-Translation  OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { AoA-AssistanceInfo-ExtIEs } } OPTIONAL,
    ...
}

AoA-AssistanceInfo-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

AperiodicSRSResourceTriggerList ::= SEQUENCE (SIZE(1..maxnoSRSTriggerStates)) OF AperiodicSRSResourceTrigger

AperiodicSRSResourceTrigger ::= INTEGER (1..3)

AngleMeasurementType ::= CHOICE {
    expected-ULAoA      Expected-UL-AoA,
    expected-ZoA        Expected-ZoA-only,
    choice-extension    ProtocolIE-Single-Container { { AngleMeasurementType-ExtIEs } }
}

AngleMeasurementType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

Expected-UL-AoA ::= SEQUENCE {
    expected-Azimuth-AoA  Expected-Azimuth-AoA,

```



```

    expected-Zenith-AoA      Expected-Zenith-AoA      OPTIONAL,
    iE-extensions           ProtocolExtensionContainer { { Expected-UL-AoA-ExtIEs } }  OPTIONAL,
    ...
}

Expected-UL-AoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

Expected-ZoA-only ::= SEQUENCE {
    expected-ZoA-only      Expected-Zenith-AoA,
    iE-extensions         ProtocolExtensionContainer { { Expected-ZoA-only-ExtIEs } }  OPTIONAL,
    ...
}

Expected-ZoA-only-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

Expected-Azimuth-AoA ::= SEQUENCE {
    expected-Azimuth-AoA-value      Expected-Value-AoA,
    expected-Azimuth-AoA-uncertainty      Uncertainty-range-AoA,
    iE-extensions           ProtocolExtensionContainer { { Expected-Azimuth-AoA-ExtIEs } }  OPTIONAL,
    ...
}

Expected-Azimuth-AoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

Expected-Zenith-AoA ::= SEQUENCE {
    expected-Zenith-AoA-value      Expected-Value-ZoA,
    expected-Zenith-AoA-uncertainty      Uncertainty-range-ZoA,
    iE-extensions           ProtocolExtensionContainer { { Expected-Zenith-AoA-ExtIEs } }  OPTIONAL,
    ...
}

Expected-Zenith-AoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ARP-ID ::= INTEGER (1..16, ...)

ARPLocationInformation ::= SEQUENCE (SIZE (1..maxnoARPs)) OF ARPLocationInformation-Item

ARPLocationInformation-Item ::= SEQUENCE {
    aRP-ID      ARP-ID,
    aRPLocationType      ARPLocationType,
    iE-Extensions      ProtocolExtensionContainer { { ARPLocationInformation-ExtIEs } }  OPTIONAL,
    ...
}

ARPLocationInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

}

ARPLocationType ::= CHOICE {
    arPPositionRelativeGeodetic      RelativeGeodeticLocation,
    arPPositionRelativeCartesian    RelativeCartesianLocation,
    choice-extension                 ProtocolIE-Single-Container { { ARPLocationType-ExtIEs } }
}

ARPLocationType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

Assistance-Information ::= SEQUENCE {
    systemInformation                SystemInformation,
    iE-Extensions                    ProtocolExtensionContainer { { Assistance-Information-ExtIEs } } OPTIONAL,
    ...
}

Assistance-Information-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

AssistanceInformationFailureList ::= SEQUENCE (SIZE (1..maxnoAssistInfoFailureListItems)) OF SEQUENCE {
    posSIB-Type                      PosSIB-Type,
    outcome                           Outcome,
    iE-Extensions                    ProtocolExtensionContainer { { AssistanceInformationFailureList-ExtIEs } } OPTIONAL,
    ...
}

AssistanceInformationFailureList-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

AssistanceInformationMetaData ::= SEQUENCE {
    encrypted                         ENUMERATED {true, ...} OPTIONAL,
    gNSSID                            ENUMERATED {gps, sbas, qzss, galileo, glonass, bds, navic, ...} OPTIONAL,
    sBASID                            ENUMERATED {waas, egnos, msas, gagan, ...} OPTIONAL,
    iE-Extensions                    ProtocolExtensionContainer { { AssistanceInformationMetaData-ExtIEs } } OPTIONAL,
    ...
}

AssistanceInformationMetaData-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- B

BandwidthSRS ::= CHOICE {
    fr1      ENUMERATED {mHz5, mHz10, mHz20, mHz40, mHz50, mHz80, mHz100, ...},
    fr2      ENUMERATED {mHz50, mHz100, mHz200, mHz400, ..., mHz800, mHz1600, mHz2000 },
    choice-extension      ProtocolIE-Single-Container { { BandwidthSRS-ExtIEs } }
}

```

```
BandwidthSRS-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

BCCH ::= INTEGER (0..1023, ...)

Broadcast ::= ENUMERATED {
  start,
  stop,
  ...
}

BroadcastPeriodicity ::= ENUMERATED {
  ms80,
  ms160,
  ms320,
  ms640,
  ms1280,
  ms2560,
  ms5120,
  ...
}

PositioningBroadcastCells ::= SEQUENCE (SIZE (1..maxnoBcastCell)) OF NG-RAN-CGI

BSSID ::= OCTET STRING (SIZE(6))

-- C

CarrierFreq ::= SEQUENCE {
  pointA          INTEGER (0..3279165),
  offsetToCarrier INTEGER (0..2199, ...),
  iE-Extensions  ProtocolExtensionContainer { {CarrierFreq-ExtIEs} } OPTIONAL,
  ...
}

CarrierFreq-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

Cause ::= CHOICE {
  radioNetwork      CauseRadioNetwork,
  protocol          CauseProtocol,
  misc              CauseMisc,
  choice-Extension  ProtocolIE-Single-Container {{ Cause-ExtensionIE }}
}

Cause-ExtensionIE NRPPA-PROTOCOL-IES ::= {
  ...
}

CauseMisc ::= ENUMERATED {
  unspecified,

```

```
    ...
}

CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    unspecified,
    abstract-syntax-error-falsely-constructed-message,
    ...
}

CauseRadioNetwork ::= ENUMERATED {
    unspecified,
    requested-item-not-supported,
    requested-item-temporarily-not-available,
    ...,
    serving-NG-RAN-node-changed,
    requested-item-not-supported-on-time
}

Cell-Portion-ID ::= INTEGER (0..4095,...)

CGI-EUTRA ::= SEQUENCE {
    PLMN-Identity          PLMN-Identity,
    eUTRACellIdentifier    EUTRACellIdentifier,
    IE-Extensions          ProtocolExtensionContainer { {CGI-EUTRA-ExtIEs} } OPTIONAL,
    ...
}

CGI-EUTRA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

CGI-NR ::= SEQUENCE {
    PLMN-Identity          PLMN-Identity,
    nRCellIdentifier       NRCellIdentifier,
    IE-Extensions          ProtocolExtensionContainer { {CGI-NR-ExtIEs} } OPTIONAL,
    ...
}

CGI-NR-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

CPLength-EUTRA ::= ENUMERATED {
    normal,
    extended,
    ...
}
```

```

}

CriticalityDiagnostics ::= SEQUENCE {
    procedureCode          ProcedureCode          OPTIONAL,
    triggeringMessage      TriggeringMessage      OPTIONAL,
    procedureCriticality   Criticality             OPTIONAL,
    nrppatransactionID    NRPPATransactionID     OPTIONAL,
    iEsCriticalityDiagnostics CriticalityDiagnostics-IE-List OPTIONAL,
    iE-Extensions         ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} } OPTIONAL,
    ...
}

CriticalityDiagnostics-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
    SEQUENCE {
        iECriticality          Criticality,
        iE-ID                  ProtocolIE-ID,
        typeOfError            TypeOfError,
        iE-Extensions         ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
        ...
    }

CriticalityDiagnostics-IE-List-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- D

DL-Bandwidth-EUTRA ::= ENUMERATED {
    bw6,
    bw15,
    bw25,
    bw50,
    bw75,
    bw100,
    ...
}

DL-PRS ::= SEQUENCE {
    prsid                    INTEGER (0..255),
    dl-PRSResourceSetID     PRS-Resource-Set-ID,
    dl-PRSResourceID        PRS-Resource-ID     OPTIONAL,
    iE-Extensions           ProtocolExtensionContainer { {DL-PRS-ExtIEs} } OPTIONAL,
    ...
}

DL-PRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

DL-PRSMutingPattern ::= CHOICE {
    two          BIT STRING (SIZE(2)),
    four         BIT STRING (SIZE(4)),
    six          BIT STRING (SIZE(6)),
    eight        BIT STRING (SIZE(8)),
    sixteen       BIT STRING (SIZE(16)),
    thirty-two   BIT STRING (SIZE(32)),
    choice-extension          ProtocolIE-Single-Container { { DL-PRSMutingPattern-ExtIEs } }
}

DL-PRSMutingPattern-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

DLPRSResourceCoordinates ::= SEQUENCE {
    listOfDL-PRSResourceSetARP      SEQUENCE (SIZE(1.. maxPRS-ResourceSets)) OF DLPRSResourceSetARP,
    iE-Extensions                    ProtocolExtensionContainer { { DLPRSResourceCoordinates-ExtIEs } } OPTIONAL,
    ...
}

DLPRSResourceCoordinates-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

DLPRSResourceSetARP ::= SEQUENCE {
    dl-PRSResourceSetID              PRS-Resource-Set-ID,
    dl-PRSResourceSetARPLocation     DL-PRSResourceSetARPLocation,
    listOfDL-PRSResourceARP          SEQUENCE (SIZE(1.. maxPRS-ResourcesPerSet)) OF DLPRSResourceARP,
    iE-Extensions                    ProtocolExtensionContainer { { DLPRSResourceSetARP-ExtIEs } } OPTIONAL,
    ...
}

DLPRSResourceSetARP-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

DL-PRSResourceSetARPLocation ::= CHOICE {
    relativeGeodeticLocation         RelativeGeodeticLocation,
    relativeCartesianLocation        RelativeCartesianLocation,
    choice-Extension                  ProtocolIE-Single-Container { { DL-PRSResourceSetARPLocation-ExtIEs } }
}

DL-PRSResourceSetARPLocation-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

DLPRSResourceARP ::= SEQUENCE {
    dl-PRSResourceID                 PRS-Resource-ID,
    dl-PRSResourceARPLocation         DL-PRSResourceARPLocation,
    iE-Extensions                    ProtocolExtensionContainer { { DLPRSResourceARP-ExtIEs } } OPTIONAL,
    ...
}

```

```

}
DLPRSResourceARP-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
DL-PRSResourceARPLocation ::= CHOICE {
  relativeGeodeticLocation      RelativeGeodeticLocation,
  relativeCartesianLocation     RelativeCartesianLocation,
  choice-Extension              ProtocolIE-Single-Container { { DL-PRSResourceARPLocation-ExtIEs } }
}
DL-PRSResourceARPLocation-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}
-- E
E-CID-MeasurementResult ::= SEQUENCE {
  servingCell-ID                NG-RAN-CGI,
  servingCellTAC                TAC,
  nG-RANAccessPointPosition    NG-RANAccessPointPosition OPTIONAL,
  measuredResults               MeasuredResults OPTIONAL,
  iE-Extensions                 ProtocolExtensionContainer { { E-CID-MeasurementResult-ExtIEs } } OPTIONAL,
  ...
}
E-CID-MeasurementResult-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-GeographicalCoordinates CRITICALITY ignore EXTENSION GeographicalCoordinates PRESENCE optional},
  ...
}
EUTRACellIdentifier ::= BIT STRING (SIZE (28))
EARFCN ::= INTEGER (0..262143, ...)
Expected-Value-AoA ::= INTEGER (0..3599)
Expected-Value-ZoA ::= INTEGER (0..1799)
-- F
-- G
GeographicalCoordinates ::= SEQUENCE {
  trPPositionDefinitionType     TRPPositionDefinitionType,
  dLPRSResourceCoordinates     DLPRSResourceCoordinates OPTIONAL,
  iE-Extensions                 ProtocolExtensionContainer { { GeographicalCoordinates-ExtIEs } } OPTIONAL,
  ...
}
GeographicalCoordinates-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-ARPLocationInfo      CRITICALITY ignore EXTENSION ARPLocationInformation PRESENCE optional},

```

```

}
...
}

GNB-RxTxTimeDiff ::= SEQUENCE {
    rxTxTimeDiff          GNBxTxTimeDiffMeas,
    additionalPathList    AdditionalPathList OPTIONAL,
    iE-Extensions         ProtocolExtensionContainer { { GNB-RxTxTimeDiff-ExtIEs } } OPTIONAL,
    ...
}

GNB-RxTxTimeDiff-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-ExtendedAdditionalPathList CRITICALITY ignore EXTENSION ExtendedAdditionalPathList PRESENCE optional } |
    { ID id-TRPTEGInformation          CRITICALITY ignore EXTENSION TRPTEGInformation PRESENCE optional },
    ...
}

GNBRxTxTimeDiffMeas ::= CHOICE {
    k0          INTEGER (0.. 1970049),
    k1          INTEGER (0.. 985025),
    k2          INTEGER (0.. 492513),
    k3          INTEGER (0.. 246257),
    k4          INTEGER (0.. 123129),
    k5          INTEGER (0.. 61565),
    choice-extension ProtocolIE-Single-Container { { GNBRxTxTimeDiffMeas-ExtIEs } }
}

GNBRxTxTimeDiffMeas-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

-- H

HESSID ::= OCTET STRING (SIZE(6))

-- I
-- J
-- K
-- L

LCS-to-GCS-Translation ::= SEQUENCE {
    alpha          INTEGER (0..3599),
    beta           INTEGER (0..3599),
    gamma          INTEGER (0..3599),
    iE-Extensions ProtocolExtensionContainer { { LCS-to-GCS-Translation-ExtIEs } } OPTIONAL,
    ...
}

```



```

LCS-to-GCS-Translation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

LCS-to-GCS-TranslationItem ::= SEQUENCE {
  alpha          INTEGER (0..359),
  alphaFine     INTEGER (0..9)    OPTIONAL,
  beta          INTEGER (0..359),
  betaFine     INTEGER (0..9)    OPTIONAL,
  gamma        INTEGER (0..359),
  gammaFine    INTEGER (0..9)    OPTIONAL,
  iE-Extensions ProtocolExtensionContainer { { LCS-to-GCS-TranslationItem-ExtIEs } } OPTIONAL,
  ...
}

LCS-to-GCS-TranslationItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

LocationUncertainty ::= SEQUENCE {
  horizontalUncertainty  INTEGER (0..255),
  horizontalConfidence  INTEGER (0..100),
  verticalUncertainty    INTEGER (0..255),
  verticalConfidence    INTEGER (0..100),
  iE-Extensions        ProtocolExtensionContainer { { LocationUncertainty-ExtIEs } } OPTIONAL,
  ...
}

LocationUncertainty-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

LoS-NLoSIndicatorHard ::= ENUMERATED {nlos, los}

LoS-NLoSIndicatorSoft ::= INTEGER (0..10)

LoS-NLoSInformation ::= CHOICE {
  loS-NLoSIndicatorSoft    LoS-NLoSIndicatorSoft,
  loS-NLoSIndicatorHard    LoS-NLoSIndicatorHard,
  choice-Extension         ProtocolIE-Single-Container {{ LoS-NLoSInformation-ExtIEs}}
}

LoS-NLoSInformation-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

-- M

Measurement-ID ::= INTEGER (1.. 65536, ...)

MeasurementAmount ::= ENUMERATED {ma0, ma1, ma2, ma4, ma8, ma16, ma32, ma64}

```

```
MeasurementBeamInfoRequest ::= ENUMERATED {true, ...}
```

```
MeasurementBeamInfo ::= SEQUENCE {  
  pRS-Resource-ID          PRS-Resource-ID          OPTIONAL,  
  pRS-Resource-Set-ID      PRS-Resource-Set-ID      OPTIONAL,  
  sSB-Index                SSB-Index                OPTIONAL,  
  iE-Extensions            ProtocolExtensionContainer { { MeasurementBeamInfo-ExtIEs } } OPTIONAL,  
  ...  
}
```

```
MeasurementBeamInfo-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {  
  ...  
}
```

```
MeasurementPeriodicity ::= ENUMERATED {  
  ms120,  
  ms240,  
  ms480,  
  ms640,  
  ms1024,  
  ms2048,  
  ms5120,  
  ms10240,  
  min1,  
  min6,  
  min12,  
  min30,  
  min60,  
  ...,  
  ms20480,  
  ms40960,  
  extended  
}
```

```
MeasurementPeriodicityExtended ::= ENUMERATED {  
  ms160,  
  ms320,  
  ms1280,  
  ms2560,  
  ms61440,  
  ms81920,  
  ms368640,  
  ms737280,  
  ms1843200,  
  ...  
}
```

```
MeasurementPeriodicityNR-AoA ::= ENUMERATED {  
  ms160,  
  ms320,  
  ms640,  
  ms1280,  
}
```

```
ms2560,
ms5120,
ms10240,
ms20480,
ms40960,
ms61440,
ms81920,
ms368640,
ms737280,
ms1843200,
...
}

MeasurementQuantities ::= SEQUENCE (SIZE (1.. maxNoMeas)) OF ProtocolIE-Single-Container { {MeasurementQuantities-ItemIEs} }

MeasurementQuantities-ItemIEs NRPPA-PROTOCOL-IES ::= {
  { ID id-MeasurementQuantities-Item CRITICALITY reject TYPE MeasurementQuantities-Item PRESENCE mandatory}
}

MeasurementQuantities-Item ::= SEQUENCE {
  measurementQuantitiesValue MeasurementQuantitiesValue,
  iE-Extensions ProtocolExtensionContainer { { MeasurementQuantitiesValue-ExtIEs} } OPTIONAL,
  ...
}

MeasurementQuantitiesValue-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

MeasurementQuantitiesValue ::= ENUMERATED {
  cell-ID,
  angleOfArrival,
  timingAdvanceType1,
  timingAdvanceType2,
  rSRP,
  rSRQ,
  ... ,
  sS-RSRP,
  sS-RSRQ,
  cSI-RSRP,
  cSI-RSRQ,
  angleOfArrivalNR,
  timingAdvanceNR
}

MeasurementTimeOccasion ::= ENUMERATED {o1, o4, ...}

MeasurementCharacteristicsRequestIndicator ::= BIT STRING (SIZE (16))

MeasuredResults ::= SEQUENCE (SIZE (1.. maxNoMeas)) OF MeasuredResultsValue

MeasuredResultsValue ::= CHOICE {
  valueAngleOfArrival-EUTRA INTEGER (0..719),
```

```

valueTimingAdvanceType1-EUTRA          INTEGER (0..7690),
valueTimingAdvanceType2-EUTRA          INTEGER (0..7690),
resultRSRP-EUTRA                        ResultRSRP-EUTRA,
resultRSRQ-EUTRA                        ResultRSRQ-EUTRA,
choice-Extension                         ProtocolIE-Single-Container {{ MeasuredResultsValue-ExtensionIE }}
}

MeasuredResultsValue-ExtensionIE NRPPA-PROTOCOL-IES ::= {
{ ID id-ResultSS-RSRP          CRITICALITY ignore  TYPE ResultSS-RSRP          PRESENCE mandatory }|
{ ID id-ResultSS-RSRQ          CRITICALITY ignore  TYPE ResultSS-RSRQ          PRESENCE mandatory }|
{ ID id-ResultCSI-RSRP         CRITICALITY ignore  TYPE ResultCSI-RSRP          PRESENCE mandatory }|
{ ID id-ResultCSI-RSRQ         CRITICALITY ignore  TYPE ResultCSI-RSRQ          PRESENCE mandatory }|
{ ID id-AngleOfArrivalNR       CRITICALITY ignore  TYPE UL-AoA                  PRESENCE mandatory }|
{ ID id-NR-TADV                CRITICALITY ignore  TYPE NR-TADV                 PRESENCE mandatory },
...
}

MultipleULAoA ::= SEQUENCE {
multipleULAoA                      MultipleULAoA-List,
iE-Extensions                       ProtocolExtensionContainer { { MultipleULAoA-ExtIEs } } OPTIONAL,
...
}

MultipleULAoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

MultipleULAoA-List ::= SEQUENCE (SIZE(1.. maxnoofULAoAs)) OF MultipleULAoA-Item

MultipleULAoA-Item ::= CHOICE {
uL-AoA          UL-AoA,
ul-ZoA          ZoA,
choice-extension ProtocolIE-Single-Container { { MultipleULAoA-Item-ExtIEs } }
}

MultipleULAoA-Item-ExtIEs NRPPA-PROTOCOL-IES ::= {
...
}

-- N

NarrowBandIndex ::= INTEGER (0..15,...)

NG-RANAccessPointPosition ::= SEQUENCE {
latitudeSign          ENUMERATED {north, south},
latitude              INTEGER (0..8388607),
longitude             INTEGER (-8388608..8388607),
directionOfAltitude  ENUMERATED {height, depth},
altitude              INTEGER (0..32767),
uncertaintySemi-major INTEGER (0..127),
uncertaintySemi-minor INTEGER (0..127),
orientationOfMajorAxis INTEGER (0..179),
uncertaintyAltitude  INTEGER (0..127),
}

```

```

    confidence                INTEGER (0..100),
    iE-Extensions              ProtocolExtensionContainer { { NG-RANAccessPointPosition-ExtIEs } } OPTIONAL,
    ...
}

NG-RANAccessPointPosition-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

NGRANHighAccuracyAccessPointPosition ::= SEQUENCE {
    latitude                   INTEGER (-2147483648.. 2147483647),
    longitude                  INTEGER (-2147483648.. 2147483647),
    altitude                   INTEGER (-64000..1280000),
    uncertaintySemi-major     INTEGER (0..255),
    uncertaintySemi-minor     INTEGER (0..255),
    orientationOfMajorAxis    INTEGER (0..179),
    horizontalConfidence      INTEGER (0..100),
    uncertaintyAltitude       INTEGER (0..255),
    verticalConfidence        INTEGER (0..100),
    iE-Extensions              ProtocolExtensionContainer { { NGRANHighAccuracyAccessPointPosition-ExtIEs } } OPTIONAL,
    ...
}

NGRANHighAccuracyAccessPointPosition-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

NG-RAN-CGI ::= SEQUENCE {
    plmn-Identity              PLMN-Identity,
    nG-RANcell                 NG-RANCell,
    iE-Extensions              ProtocolExtensionContainer { {NG-RAN-CGI-ExtIEs} } OPTIONAL,
    ...
}

NG-RAN-CGI-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

NG-RANCell ::= CHOICE {
    eUTRA-CellID              EUTRACellIdentifier,
    nR-CellID                 NRCellIdentifier,
    choice-Extension           ProtocolIE-Single-Container {{ NG-RANCell-ExtensionIE }}
}

NG-RANCell-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    ...
}

NR-ARFCN ::= INTEGER (0..3279165)

NRCellIdentifier ::= BIT STRING (SIZE (36))

NrofSymbolsExtended ::= ENUMERATED {n8, n10, n12, n14, ...}

```

```
NR-PCI ::= INTEGER (0..1007)

NR-PRS-Beam-Information ::= SEQUENCE {
    nR-PRS-Beam-InformationList SEQUENCE (SIZE(1.. maxPRS-ResourceSets)) OF NR-PRS-Beam-InformationItem,
    lCS-to-GCS-TranslationList SEQUENCE (SIZE(1..maxnolcs-gcs-translation)) OF LCS-to-GCS-TranslationItem OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { NR-PRS-Beam-Information-IEs } } OPTIONAL,
    ...
}

NR-PRS-Beam-Information-IEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

NR-PRS-Beam-InformationItem ::= SEQUENCE {
    pRSresourceSetID PRS-Resource-Set-ID,
    pRSAngle SEQUENCE (SIZE(1..maxPRS-ResourcesPerSet)) OF PRSAngleItem,
    iE-Extensions ProtocolExtensionContainer { { NR-PRS-Beam-InformationItem-ExtIEs } } OPTIONAL,
    ...
}

NR-PRS-Beam-InformationItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

NR-TADV ::= INTEGER (0.. 7690)

NumberOfAntennaPorts-EUTRA ::= ENUMERATED {
    n1-or-n2,
    n4,
    ...
}

NumberOfDlFrames-EUTRA ::= ENUMERATED {
    sf1,
    sf2,
    sf4,
    sf6,
    ...
}

NumberOfDlFrames-Extended-EUTRA ::= INTEGER (1..160,...)

NumberOfFrequencyHoppingBands ::= ENUMERATED {
    twobands,
    fourbands,
    ...
}

NumberOfTRPRxTEG ::= ENUMERATED {two, three, four, six, eight, ...}

NumberOfTRPRxTxTEG ::= ENUMERATED {two, three, four, six, eight, ...}

NZP-CSI-RS-ResourceID ::= INTEGER (0..191)
```

```

-- 0
OnDemandPRS-Info ::= SEQUENCE {
    onDemandPRSRequestAllowed          BIT STRING (SIZE (16)),
    allowedResourceSetPeriodicityValues BIT STRING (SIZE (24)) OPTIONAL,
    allowedPRSBandwidthValues          BIT STRING (SIZE (64)) OPTIONAL,
    allowedResourceRepetitionFactorValues BIT STRING (SIZE (8)) OPTIONAL,
    allowedResourceNumberOfSymbolsValues BIT STRING (SIZE (8)) OPTIONAL,
    allowedCombSizeValues              BIT STRING (SIZE (8)) OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { OnDemandPRS-Info-ExtIEs } } OPTIONAL,
    ...
}

OnDemandPRS-Info-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

OTDOACells ::= SEQUENCE (SIZE (1.. maxCellInRANode)) OF SEQUENCE {
    oTDOACellInfo          OTDOACell-Information,
    iE-Extensions          ProtocolExtensionContainer { {OTDOACells-ExtIEs} } OPTIONAL,
    ...
}

OTDOACells-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

OTDOACell-Information ::= SEQUENCE (SIZE (1..maxnoOTDOAtypes)) OF OTDOACell-Information-Item

OTDOACell-Information-Item ::= CHOICE {
    pCI-EUTRA          PCI-EUTRA,
    cGI-EUTRA          CGI-EUTRA,
    tAC                TAC,
    eARFCN             EARFCN,
    pRS-Bandwidth-EUTRA PRS-Bandwidth-EUTRA,
    pRS-ConfigurationIndex-EUTRA PRS-ConfigurationIndex-EUTRA,
    cPLength-EUTRA     CPLength-EUTRA,
    numberOfDlFrames-EUTRA NumberOfDlFrames-EUTRA,
    numberOfAntennaPorts-EUTRA NumberOfAntennaPorts-EUTRA,
    sFNInitialisationTime-EUTRA SFNInitialisationTime-EUTRA,
    nG-RANAccessPointPosition NG-RANAccessPointPosition,
    pRSMutingConfiguration-EUTRA PRSMutingConfiguration-EUTRA,
    prsid-EUTRA        PRS-ID-EUTRA,
    tpid-EUTRA         TP-ID-EUTRA,
    tpType-EUTRA       TP-Type-EUTRA,
    numberOfDlFrames-Extended-EUTRA NumberOfDlFrames-Extended-EUTRA,
    crsCPLength-EUTRA  CPLength-EUTRA,
    dL-Bandwidth-EUTRA DL-Bandwidth-EUTRA,
    pRSOccasionGroup-EUTRA PRSOccasionGroup-EUTRA,
    pRSFrequencyHoppingConfiguration-EUTRA PRSFrequencyHoppingConfiguration-EUTRA,
    choice-Extension    ProtocolIE-Single-Container { { OTDOACell-Information-Item-ExtensionIE } }
}

OTDOACell-Information-Item-ExtensionIE NRPPA-PROTOCOL-IES ::= {

```

```

    { ID id-TDD-Config-EUTRA-Item      CRITICALITY ignore TYPE TDD-Config-EUTRA-Item      PRESENCE mandatory }|
    { ID id-CGI-NR                     CRITICALITY ignore TYPE CGI-NR                     PRESENCE mandatory }|
    { ID id-SFNInitialisationTime-NR   CRITICALITY ignore TYPE SFNInitialisationTime-EUTRA PRESENCE mandatory },
    ...
}

OTDOA-Information-Item ::= ENUMERATED {
    pci,
    cgi,
    tac,
    earfcn,
    prsBandwidth,
    prsConfigIndex,
    cpLength,
    noDlFrames,
    noAntennaPorts,
    sFNInitTime,
    nG-RANAccessPointPosition,
    prsmutingconfiguration,
    prsid,
    tpid,
    tpType,
    crsCPLength,
    dlBandwidth,
    multipleprsConfigurationsperCell,
    prsOccasionGroup,
    prsFrequencyHoppingConfiguration,
    ...,
    tddConfig
}

OtherRATMeasurementQuantities ::= SEQUENCE (SIZE (0.. maxNoMeas)) OF ProtocolIE-Single-Container { {OtherRATMeasurementQuantities-ItemIEs} }

OtherRATMeasurementQuantities-ItemIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-OtherRATMeasurementQuantities-Item CRITICALITY reject TYPE OtherRATMeasurementQuantities-Item PRESENCE mandatory}}

OtherRATMeasurementQuantities-Item ::= SEQUENCE {
    otherRATMeasurementQuantitiesValue OtherRATMeasurementQuantitiesValue,
    iE-Extensions                      ProtocolExtensionContainer { { OtherRATMeasurementQuantitiesValue-ExtIEs} } OPTIONAL,
    ...
}

OtherRATMeasurementQuantitiesValue-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

OtherRATMeasurementQuantitiesValue ::= ENUMERATED {
    geran,
    utran,
    ...,
    nR,
    eUTRA
}

```



```

OtherRATMeasurementResult ::= SEQUENCE (SIZE (1.. maxNoMeas)) OF OtherRATMeasuredResultsValue

OtherRATMeasuredResultsValue ::= CHOICE {
    resultGERAN                ResultGERAN,
    resultUTRAN                 ResultUTRAN,
    choice-Extension            ProtocolIE-Single-Container {{ OtherRATMeasuredResultsValue-ExtensionIE }}
}

OtherRATMeasuredResultsValue-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    { ID id-ResultNR            CRITICALITY ignore TYPE ResultNR        PRESENCE mandatory }|
    { ID id-ResultEUTRA        CRITICALITY ignore TYPE ResultEUTRA     PRESENCE mandatory },
    ...
}

Outcome ::= ENUMERATED {
    failed,
    ...
}

-- P

PathlossReferenceInformation ::= SEQUENCE {
    pathlossReferenceSignal      PathlossReferenceSignal,
    iE-Extensions                ProtocolExtensionContainer { { PathlossReferenceInformation-ExtIEs } } OPTIONAL,
    ...
}

PathlossReferenceInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PathlossReferenceSignal ::= CHOICE {
    sSB-Reference                SSB,
    dL-PRS-Reference             DL-PRS,
    choice-Extension             ProtocolIE-Single-Container {{ PathlossReferenceSignal-ExtensionIE }}
}

PathlossReferenceSignal-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    ...
}

PCI-EUTRA ::= INTEGER (0..503, ...)

PhysCellIDGERAN ::= INTEGER (0..63, ...)

PhysCellIDUTRA-FDD ::= INTEGER (0..511, ...)

PhysCellIDUTRA-TDD ::= INTEGER (0..127, ...)

PLMN-Identity ::= OCTET STRING (SIZE(3))

```

PeriodicityList ::= SEQUENCE (SIZE (1.. maxnoSRS-ResourcePerSet)) OF PeriodicityItem

PeriodicityItem ::= ENUMERATED {ms0dot125, ms0dot25, ms0dot5, ms0dot625, ms1, ms1dot25, ms2, ms2dot5, ms4dot, ms5, ms8, ms10, ms16, ms20, ms32, ms40, ms64, ms80m, ms160, ms320, ms640m, ms1280, ms2560, ms5120, ms10240, ...}

PosSIBs ::= SEQUENCE (SIZE (1.. maxNrOfPosSIBs)) OF SEQUENCE {
 posSIB-Type PosSIB-Type,
 posSIB-Segments PosSIB-Segments,
 assistanceInformationMetaData AssistanceInformationMetaData OPTIONAL,
 broadcastPriority INTEGER (1..16,...) OPTIONAL,
 iE-Extensions ProtocolExtensionContainer { { PosSIBs-ExtIEs } } OPTIONAL,
 ...
}

PosSIBs-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
 ...
}

PosSIB-Segments ::= SEQUENCE (SIZE (1.. maxNrOfSegments)) OF SEQUENCE {
 assistanceDataSIBelement OCTET STRING,
 iE-Extensions ProtocolExtensionContainer { { PosSIB-Segments-ExtIEs } } OPTIONAL,
 ...
}

PosSIB-Segments-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
 ...
}

PosSIB-Type ::= ENUMERATED {
 posSibType1-1,
 posSibType1-2,
 posSibType1-3,
 posSibType1-4,
 posSibType1-5,
 posSibType1-6,
 posSibType1-7,
 posSibType1-8,
 posSibType2-1,
 posSibType2-2,
 posSibType2-3,
 posSibType2-4,
 posSibType2-5,
 posSibType2-6,
 posSibType2-7,
 posSibType2-8,
 posSibType2-9,
 posSibType2-10,
 posSibType2-11,
 posSibType2-12,
 posSibType2-13,
 posSibType2-14,
 posSibType2-15,
}

```

posSibType2-16,
posSibType2-17,
posSibType2-18,
posSibType2-19,
posSibType2-20,
posSibType2-21,
posSibType2-22,
posSibType2-23,
posSibType2-24,
posSibType2-25,
posSibType3-1,
posSibType4-1,
posSibType5-1,
posSibType6-1,
posSibType6-2,
posSibType6-3,
...,
posSibType1-9,
posSibType1-10,
posSibType6-4,
posSibType6-5,
posSibType6-6,
posSibType2-17a,
posSibType2-18a,
posSibType2-20a
}

PosSRSResource-List ::= SEQUENCE (SIZE (1..maxnoSRS-PosResources)) OF PosSRSResource-Item

PosSRSResource-Item ::= SEQUENCE {
    srs-PosResourceId          SRSPosResourceID,
    transmissionCombPos       TransmissionCombPos,
    startPosition              INTEGER (0..13),
    nrofSymbols                ENUMERATED {n1, n2, n4, n8, n12},
    freqDomainShift            INTEGER (0..268),
    c-SRS                       INTEGER (0..63),
    groupOrSequenceHopping     ENUMERATED { neither, groupHopping, sequenceHopping },
    resourceTypePos            ResourceTypePos,
    sequenceId                 INTEGER (0.. 65535),
    spatialRelationPos         SpatialRelationPos OPTIONAL,
    iE-Extensions              ProtocolExtensionContainer { { PosSRSResource-Item-ExtIEs } } OPTIONAL,
    ...
}

PosSRSResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosSRSResourceID-List ::= SEQUENCE (SIZE (1..maxnoSRS-PosResources)) OF SRSPosResourceID

PosSRSResourceSet-List ::= SEQUENCE (SIZE (1..maxnoSRS-PosResourceSets)) OF PosSRSResourceSet-Item

PosSRSResourceIDPerSet-List ::= SEQUENCE (SIZE (1..maxnoSRS-PosResourcePerSet)) OF SRSPosResourceID

```

```

PosSRSResourceSet-Item ::= SEQUENCE {
    possrsResourceSetID      INTEGER(0..15),
    possrsResourceIDPerSet-List  PosSRSResourceIDPerSet-List,
    posresourceSetType       PosResourceSetType,
    iE-Extensions            ProtocolExtensionContainer { { PosSRSResourceSet-Item-ExtIEs } } OPTIONAL,
    ...
}

PosSRSResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosResourceSetType ::= CHOICE {
    periodic                PosResourceSetTypePeriodic,
    semi-persistent        PosResourceSetTypeSemi-persistent,
    aperiodic              PosResourceSetTypeAperiodic,
    choice-extension       ProtocolIE-Single-Container {{ PosResourceSetType-ExtIEs }}
}

PosResourceSetType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

PosResourceSetTypePeriodic ::= SEQUENCE {
    posperiodicSet          ENUMERATED{true, ...},
    iE-Extensions          ProtocolExtensionContainer { { PosResourceSetTypePeriodic-ExtIEs } } OPTIONAL,
    ...
}

PosResourceSetTypePeriodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosResourceSetTypeSemi-persistent ::= SEQUENCE {
    possemi-persistentSet  ENUMERATED{true, ...},
    iE-Extensions          ProtocolExtensionContainer { { PosResourceSetTypeSemi-persistent-ExtIEs } } OPTIONAL,
    ...
}

PosResourceSetTypeSemi-persistent-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PosResourceSetTypeAperiodic ::= SEQUENCE {
    sRSResourceTrigger     INTEGER(1..3),
    iE-Extensions          ProtocolExtensionContainer { { PosResourceSetTypeAperiodic-ExtIEs } } OPTIONAL,
    ...
}

PosResourceSetTypeAperiodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

PreconfigurationResult ::= BIT STRING (SIZE(8))

PRS-Bandwidth-EUTRA ::= ENUMERATED {
    bw6,
    bw15,
    bw25,
    bw50,
    bw75,
    bw100,
    ...
}

PRSAngleItem ::= SEQUENCE {
    nRPRSAzimuth          INTEGER (0..359),
    nRPRSAzimuthFine     INTEGER (0..9) OPTIONAL,
    nRPRSElevation       INTEGER (0..180) OPTIONAL,
    nRPRSElevationFine   INTEGER (0..9) OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { PRSAngleItem-ExtIEs } } OPTIONAL,
    ...
}

PRSAngleItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-PRS-Resource-ID      CRITICALITY ignore EXTENSION PRS-Resource-ID      PRESENCE optional },
    ...
}

PRSInformationPos ::= SEQUENCE {
    pRS-IDPos            INTEGER(0..255),
    pRS-Resource-Set-IDPos  INTEGER(0..7),
    pRS-Resource-IDPos    INTEGER(0..63) OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { PRSInformationPos-ExtIEs } } OPTIONAL,
    ...
}

PRSInformationPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSConfigRequestType ::= ENUMERATED {configure, off, ...}

PRSConfiguration ::= SEQUENCE {
    pRSResourceSet-List    PRSResourceSet-List,
    iE-Extensions          ProtocolExtensionContainer { { PRSConfiguration-ExtIEs } } OPTIONAL,
    ...
}

PRSConfiguration-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRS-ConfigurationIndex-EUTRA ::= INTEGER (0..4095, ...)

```

```

PRS-ID-EUTRA ::= INTEGER (0..4095, ...)

PRSMutingConfiguration-EUTRA ::= CHOICE {
    two BIT STRING (SIZE (2)),
    four BIT STRING (SIZE (4)),
    eight BIT STRING (SIZE (8)),
    sixteen BIT STRING (SIZE (16)),
    thirty-two BIT STRING (SIZE (32)),
    sixty-four BIT STRING (SIZE (64)),
    one-hundred-and-twenty-eight BIT STRING (SIZE (128)),
    two-hundred-and-fifty-six BIT STRING (SIZE (256)),
    five-hundred-and-twelve BIT STRING (SIZE (512)),
    one-thousand-and-twenty-four BIT STRING (SIZE (1024)),
    choice-Extension ProtocolIE-Single-Container {{ PRSMutingConfiguration-EUTRA-ExtensionIE }}
}

PRSMutingConfiguration-EUTRA-ExtensionIE NRPPA-PROTOCOL-IES ::= {
    ...
}

PRSOccasionGroup-EUTRA ::= ENUMERATED {
    og2,
    og4,
    og8,
    og16,
    og32,
    og64,
    og128,
    ...
}

PRSFrequencyHoppingConfiguration-EUTRA ::= SEQUENCE {
    noOfFreqHoppingBands NumberOfFrequencyHoppingBands,
    bandPositions SEQUENCE(SIZE (1..maxnoFreqHoppingBandsMinusOne)) OF NarrowBandIndex,
    iE-Extensions ProtocolExtensionContainer { { PRSFrequencyHoppingConfiguration-EUTRA-Item-IEs} } OPTIONAL,
    ...
}

PRSFrequencyHoppingConfiguration-EUTRA-Item-IEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRS-Measurements-Info-List ::= SEQUENCE (SIZE(1..maxFreqLayers)) OF PRS-Measurements-Info-List-Item

PRS-Measurements-Info-List-Item ::= SEQUENCE {
    pointA INTEGER (0..3279165),
    measPRSPeriodicity ENUMERATED {ms20, ms40, ms80, ms160, ...},
    measPRSOffset INTEGER (0..159, ...),
    measurementPRSLength ENUMERATED {ms1dot5, ms3, ms3dot5, ms4, ms5dot5, ms6, ms10, ms20},
    iE-Extensions ProtocolExtensionContainer { { PRS-Measurements-Info-List-Item-ExtIEs} } OPTIONAL,
    ...
}

```

```

PRS-Measurements-Info-List-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSMuting ::= SEQUENCE {
    pRSMutingOption1          PRSMutingOption1          OPTIONAL,
    pRSMutingOption2          PRSMutingOption2          OPTIONAL,
    iE-Extensions              ProtocolExtensionContainer { { PRSMuting-ExtIEs } } OPTIONAL,
    ...
}
PRSMuting-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSMutingOption1 ::= SEQUENCE {
    mutingPattern              DL-PRSMutingPattern,
    mutingBitRepetitionFactor  ENUMERATED{n1,n2,n4,n8,...},
    iE-Extensions              ProtocolExtensionContainer { { PRSMutingOption1-ExtIEs } } OPTIONAL,
    ...
}
PRSMutingOption1-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSMutingOption2 ::= SEQUENCE {
    mutingPattern              DL-PRSMutingPattern,
    iE-Extensions              ProtocolExtensionContainer { { PRSMutingOption2-ExtIEs } } OPTIONAL,
    ...
}
PRSMutingOption2-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSResource-List ::= SEQUENCE (SIZE (1..maxnoofPRSresource)) OF PRSResource-Item

PRSResource-Item ::= SEQUENCE {
    pRSResourceID              PRS-Resource-ID,
    sequenceID                  INTEGER(0..4095),
    rEOffset                    INTEGER(0..11,...),
    resourceSlotOffset          INTEGER(0..511),
    resourceSymbolOffset        INTEGER(0..12),
    qCLInfo                     PRSResource-QCLInfo          OPTIONAL,
    iE-Extensions              ProtocolExtensionContainer { { PRSResource-Item-ExtIEs } } OPTIONAL,
    ...
}
PRSResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSResource-QCLInfo ::= CHOICE {
    qCLSourceSSB                PRSResource-QCLSourceSSB,
    qCLSourcePRS                PRSResource-QCLSourcePRS,
}

```

```

    choice-Extension      ProtocolIE-Single-Container {{ PRSResource-QCLInfo-ExtIEs }}
  }

PRSResource-QCLInfo-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

PRSResource-QCLSourceSSB ::= SEQUENCE {
  pCI-NR                INTEGER(0..1007),
  sSB-Index             SSB-Index    OPTIONAL,
  iE-Extensions        ProtocolExtensionContainer { { PRSResource-QCLSourceSSB-ExtIEs } } OPTIONAL,
  ...
}

PRSResource-QCLSourceSSB-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

PRSResource-QCLSourcePRS ::= SEQUENCE {
  qCLSourcePRSResourceSetID    PRS-Resource-Set-ID,
  qCLSourcePRSResourceID       PRS-Resource-ID OPTIONAL,
  iE-Extensions                ProtocolExtensionContainer { { PRSResource-QCLSourcePRS-ExtIEs } } OPTIONAL,
  ...
}

PRSResource-QCLSourcePRS-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

PRSResourceSet-List ::= SEQUENCE (SIZE (1..maxnoofPRSresourceSet)) OF PRSResourceSet-Item

PRSResourceSet-Item ::= SEQUENCE {
  pRSResourceSetID          PRS-Resource-Set-ID,
  subcarrierSpacing         ENUMERATED{kHz15, kHz30, kHz60, kHz120, ...},
  pRSbandwidth              INTEGER(1..63),
  startPRB                  INTEGER(0..2176),
  pointA                    INTEGER (0..3279165),
  combSize                  ENUMERATED{n2, n4, n6, n12, ...},
  cPType                    ENUMERATED{normal, extended, ...},
  resourceSetPeriodicity    ENUMERATED{n4,n5,n8,n10,n16,n20,n32,n40,n64,n80,n160,n320,n640,n1280,n2560,n5120,n10240,n20480,n40960,
n81920,..., n128, n256, n512},
  resourceSetSlotOffset     INTEGER(0..81919,...),
  resourceRepetitionFactor  ENUMERATED{rf1,rf2,rf4,rf6,rf8,rf16,rf32,...},
  resourceTimeGap           ENUMERATED{tg1,tg2,tg4,tg8,tg16,tg32,...},
  resourceNumberOfSymbols   ENUMERATED{n2,n4,n6,n12,...},
  pRSMuting                 PRSMuting    OPTIONAL,
  pRSResourceTransmitPower  INTEGER(-60..50),
  pRSResource-List          PRSResource-List,
  iE-Extensions             ProtocolExtensionContainer { { PRSResourceSet-Item-ExtIEs } } OPTIONAL,
  ...
}

PRSResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {

```



```

}
...
}
PRS-Resource-ID ::= INTEGER (0..63)
PRS-Resource-Set-ID ::= INTEGER(0..7)
PRS-ID ::= INTEGER(0..255)
PRSTransmissionOffIndication ::= CHOICE {
  pRSTransmissionOffPerTRP          NULL,
  pRSTransmissionOffPerResourceSet  PRSTransmissionOffPerResourceSet,
  pRSTransmissionOffPerResource    PRSTransmissionOffPerResource,
  choice-Extension                  ProtocolIE-Single-Container {{ PRSTransmissionOffIndication-ExtIEs }}
}
PRSTransmissionOffIndication-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}
PRSTransmissionOffPerResource ::= SEQUENCE (SIZE (1..maxnoofPRSresourceSet)) OF PRSTransmissionOffPerResource-Item
PRSTransmissionOffPerResource-Item ::= SEQUENCE {
  pRSResourceSetID                PRS-Resource-Set-ID,
  pRSTransmissionOffIndicationPerResourceList SEQUENCE (SIZE(1.. maxnoofPRSresource)) OF PRSTransmissionOffIndicationPerResource-Item,
  iE-Extensions                    ProtocolExtensionContainer { { PRSTransmissionOffPerResource-Item-ExtIEs} } OPTIONAL,
  ...
}
PRSTransmissionOffPerResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
PRSTransmissionOffIndicationPerResource-Item ::= SEQUENCE {
  pRSResourceID                PRS-Resource-ID,
  iE-Extensions                    ProtocolExtensionContainer { { PRSTransmissionOffIndicationPerResource-Item-ExtIEs} } OPTIONAL,
  ...
}
PRSTransmissionOffIndicationPerResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
PRSTransmissionOffInformation ::= SEQUENCE {
  pRSTransmissionOffIndication    PRSTransmissionOffIndication,
  iE-Extensions                    ProtocolExtensionContainer { { PRSTransmissionOffInformation-ExtIEs} } OPTIONAL,
  ...
}
PRSTransmissionOffInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
PRSTransmissionOffPerResourceSet ::= SEQUENCE (SIZE (1..maxnoofPRSresourceSet)) OF PRSTransmissionOffPerResourceSet-Item

```

```

PRSTransmissionOffPerResourceSet-Item ::= SEQUENCE {
    PRSResourceSetID          PRS-Resource-Set-ID,
    iE-Extensions            ProtocolExtensionContainer { { PRSTransmissionOffPerResourceSet-Item-ExtIEs } } OPTIONAL,
    ...
}

PRSTransmissionOffPerResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSTRPList ::= SEQUENCE (SIZE(1.. maxnoTRPs)) OF PRSTRPItem

PRSTRPItem ::= SEQUENCE {
    tRP-ID          TRP-ID,
    requestedDLPRSTransmissionCharacteristics RequestedDLPRSTransmissionCharacteristics OPTIONAL,
    -- The IE shall be present if the PRS Configuration Request Type IE is set to "configure" --
    PRSTransmissionOffInformation PRSTransmissionOffInformation OPTIONAL,
    -- The IE shall be present if the PRS Configuration Request Type IE is set to "off" --
    iE-Extensions ProtocolExtensionContainer { { PRSTRPItem-ExtIEs } } OPTIONAL,
    ...
}

PRSTRPItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

PRSTransmissionTRPList ::= SEQUENCE (SIZE(1.. maxnoTRPs)) OF PRSTransmissionTRPItem

PRSTransmissionTRPItem ::= SEQUENCE {
    tRP-ID          TRP-ID,
    PRSConfiguration PRSConfiguration,
    iE-Extensions ProtocolExtensionContainer { { PRSTransmissionTRPItem-ExtIEs } } OPTIONAL,
    ...
}

PRSTransmissionTRPItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- Q
-- R

ReferenceSignal ::= CHOICE {
    nZP-CSI-RS          NZP-CSI-RS-ResourceID,
    sSB                SSB,
    sRS                SRSResourceID,
    positioningSRS     SRSPosResourceID,
    dL-PRS             DL-PRS,
    choice-Extension   ProtocolIE-Single-Container {{ReferenceSignal-ExtensionIE }}
}

```

```

}

ReferenceSignal-ExtensionIE NRPPA-PROTOCOL-IES ::= {
  ...
}

ReferencePoint ::= CHOICE {
  relativeCoordinateID      CoordinateID,
  referencePointCoordinate  NG-RANAccessPointPosition,
  referencePointCoordinateHA NGRANHighAccuracyAccessPointPosition,
  choice-Extension          ProtocolIE-Single-Container { { ReferencePoint-ExtIEs } }
}

ReferencePoint-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

CoordinateID ::= INTEGER (0..511, ...)
RelativeGeodeticLocation ::= SEQUENCE {
  milli-Arc-SecondUnits  ENUMERATED {zerodot03, zerodot3, three, ...}, heightUnits      ENUMERATED {mm, cm, m, ...},
  deltaLatitude          INTEGER (-1024.. 1023),
  deltaLongitude         INTEGER (-1024.. 1023),
  deltaHeight            INTEGER (-1024.. 1023),
  locationUncertainty    LocationUncertainty,
  iE-extensions          ProtocolExtensionContainer {{RelativeGeodeticLocation-ExtIEs }} OPTIONAL,
  ...
}

RelativeGeodeticLocation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

RelativeCartesianLocation ::= SEQUENCE {
  xYZunit                ENUMERATED {mm, cm, dm, ...},
  xvalue                  INTEGER (-65536..65535),
  yvalue                  INTEGER (-65536..65535),
  zvalue                  INTEGER (-32768..32767),
  locationUncertainty    LocationUncertainty,
  iE-Extensions          ProtocolExtensionContainer { { RelativeCartesianLocation-ExtIEs } } OPTIONAL,
  ...
}

RelativeCartesianLocation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

RelativePathDelay ::= CHOICE {
  k0      INTEGER(0..16351),
  k1      INTEGER(0..8176),
  k2      INTEGER(0..4088),
  k3      INTEGER(0..2044),
  k4      INTEGER(0..1022),
  k5      INTEGER(0..511),

```

```

    choice-Extension      ProtocolIE-Single-Container { { RelativePathDelay-ExtIEs } }
  }
RelativePathDelay-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}
RepetitionFactorExtended ::= ENUMERATED {n3, n5, n6, n7, n8, n10, n12, n14, ...}
ReportCharacteristics ::= ENUMERATED {
  onDemand,
  periodic,
  ...
}
RequestedDLPRSTransmissionCharacteristics ::= SEQUENCE {
  requestedDLPRSResourceSet-List      RequestedDLPRSResourceSet-List,
  numberOfFrequencyLayers              INTEGER(1..4)          OPTIONAL,
  startTimeAndDuration                 StartTimeAndDuration  OPTIONAL,
  iE-Extensions      ProtocolExtensionContainer { { RequestedDLPRSTransmissionCharacteristics-ExtIEs } } OPTIONAL,
  ...
}
RequestedDLPRSTransmissionCharacteristics-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
RequestedDLPRSResourceSet-List ::= SEQUENCE (SIZE (1..maxnoofPRSresourceSet)) OF RequestedDLPRSResourceSet-Item
RequestedDLPRSResourceSet-Item ::= SEQUENCE {
  PRSbandwidth              INTEGER(1..63)  OPTIONAL,
  combSize                  ENUMERATED{n2, n4, n6, n12, ...}  OPTIONAL,
  resourceSetPeriodicity    ENUMERATED{n4, n5, n8, n10, n16, n20, n32, n40, n64, n80, n160, n320, n640, n1280, n2560, n5120, n10240, n20480, n40960, n81920, ..., n128, n256, n512}  OPTIONAL,
  resourceRepetitionFactor  ENUMERATED{rf1, rf2, rf4, rf6, rf8, rf16, rf32, ...}  OPTIONAL,
  resourceNumberOfSymbols   ENUMERATED{n2, n4, n6, n12, ...}  OPTIONAL,
  requestedDLPRSResource-List      RequestedDLPRSResource-List          OPTIONAL,
  resourceSetStartTimeAndDuration  StartTimeAndDuration              OPTIONAL,
  iE-Extensions      ProtocolExtensionContainer { { RequestedDLPRSResourceSet-Item-ExtIEs } } OPTIONAL,
  ...
}
RequestedDLPRSResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
RequestedDLPRSResource-List ::= SEQUENCE (SIZE (1..maxnoofPRSresource)) OF RequestedDLPRSResource-Item
RequestedDLPRSResource-Item ::= SEQUENCE {
  qCLInfo      PRSResource-QCLInfo          OPTIONAL,
  iE-Extensions      ProtocolExtensionContainer { { RequestedDLPRSResource-Item-ExtIEs } } OPTIONAL,
  ...
}

```

```

RequestedDLPRSResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

RequestedSRSTransmissionCharacteristics ::= SEQUENCE {
  numberOfTransmissions  INTEGER (0..500,...)                OPTIONAL,
  -- The IE shall be present if the Resource Type IE is set to "periodic" --
  resourceType           ENUMERATED {periodic, semi-persistent, aperiodic, ...},
  bandwidth              BandwidthSRS,
  listOfSRSResourceSet  SEQUENCE (SIZE (1.. maxnoSRS-ResourceSets)) OF SRSResourceSet-Item  OPTIONAL,
  sSBInformation         SSBInfo  OPTIONAL,
  iE-Extensions         ProtocolExtensionContainer { { RequestedSRSTransmissionCharacteristics-ExtIEs } } OPTIONAL,
  ...
}

RequestedSRSTransmissionCharacteristics-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-SrsFrequency          CRITICALITY ignore EXTENSION SrsFrequency          PRESENCE optional },
  ...
}

SRSResourceSet-Item ::= SEQUENCE {
  numberOfSRSResourcePerSet  INTEGER (1..16, ...)                OPTIONAL,
  periodicityList            PeriodicityList                    OPTIONAL,
  spatialRelationInformation SpatialRelationInfo                OPTIONAL,
  pathlossReferenceInformation PathlossReferenceInformation      OPTIONAL,
  iE-Extensions              ProtocolExtensionContainer { { SRSResourceSet-Item-ExtIEs } } OPTIONAL,
  ...
}

SRSResourceSet-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-SRSSpatialRelationPerSRSResource  CRITICALITY ignore EXTENSION SpatialRelationPerSRSResource PRESENCE optional},
  ...
}

RequestType ::= ENUMERATED {activate, deactivate, ...}

ResourceSetType ::= CHOICE {
  periodic           ResourceSetTypePeriodic,
  semi-persistent   ResourceSetTypeSemi-persistent,
  aperiodic         ResourceSetTypeAperiodic,
  choice-extension  ProtocolIE-Single-Container {{ ResourceSetType-ExtIEs }}
}

ResourceSetType-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

ResourceSetTypePeriodic ::= SEQUENCE {
  periodicSet          ENUMERATED{true, ...},
  iE-Extensions       ProtocolExtensionContainer { { ResourceSetTypePeriodic-ExtIEs } }  OPTIONAL,
  ...
}

```

```

ResourceSetTypePeriodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceSetTypeSemi-persistent ::= SEQUENCE {
    semi-persistentSet ENUMERATED{true, ...},
    iE-Extensions      ProtocolExtensionContainer { { ResourceSetTypeSemi-persistent-ExtIEs } } OPTIONAL,
    ...
}

ResourceSetTypeSemi-persistent-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceSetTypeAperiodic ::= SEQUENCE {
    sRSResourceTrigger      INTEGER(1..3),
    slotoffset              INTEGER(0..32),
    iE-Extensions           ProtocolExtensionContainer { { ResourceSetTypeAperiodic-ExtIEs } } OPTIONAL,
    ...
}

ResourceSetTypeAperiodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceType ::= CHOICE {
    periodic                ResourceTypePeriodic,
    semi-persistent         ResourceTypeSemi-persistent,
    aperiodic               ResourceTypeAperiodic,
    choice-extension        ProtocolIE-Single-Container {{ ResourceType-ExtIEs }}
}

ResourceType-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

ResourceTypePeriodic ::= SEQUENCE {
    periodicity             ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160,
    slot320, slot640, slot1280, slot2560, ...},
    offset                  INTEGER(0..2559, ...),
    iE-Extensions           ProtocolExtensionContainer { { ResourceTypePeriodic-ExtIEs } } OPTIONAL,
    ...
}

ResourceTypePeriodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceTypeSemi-persistent ::= SEQUENCE {
    periodicity             ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320,
    slot640, slot1280, slot2560, ...},
    offset                  INTEGER(0..2559, ...),

```

```

    iE-Extensions      ProtocolExtensionContainer { { ResourceTypeSemi-persistent-ExtIEs } }    OPTIONAL,
    ...
}

ResourceTypeSemi-persistent-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceTypeAperiodic ::= SEQUENCE {
aperiodicResourceType      ENUMERATED{true, ...},
    iE-Extensions      ProtocolExtensionContainer { { ResourceTypeAperiodic-ExtIEs } }    OPTIONAL,
    ...
}

ResourceTypeAperiodic-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceTypePos ::= CHOICE {
    periodic      ResourceTypePeriodicPos,
    semi-persistent      ResourceTypeSemi-persistentPos,
    aperiodic      ResourceTypeAperiodicPos,
    choice-extension      ProtocolIE-Single-Container {{ ResourceTypePos-ExtIEs }}
}

ResourceTypePos-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

ResourceTypePeriodicPos ::= SEQUENCE {
periodicity      ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640,
slot1280, slot2560, slot5120, slot10240, slot40960, slot81920, ..., slot128, slot256, slot512, slot20480},
offset      INTEGER(0..81919, ...),
    iE-Extensions      ProtocolExtensionContainer { { ResourceTypePeriodicPos-ExtIEs } }    OPTIONAL,
    ...
}

ResourceTypePeriodicPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResourceTypeSemi-persistentPos ::= SEQUENCE {
periodicity      ENUMERATED{slot1, slot2, slot4, slot5, slot8, slot10, slot16, slot20, slot32, slot40, slot64, slot80, slot160, slot320, slot640,
slot1280, slot2560, slot5120, slot10240, slot40960, slot81920, ..., slot128, slot256, slot512, slot20480},
offset      INTEGER(0..81919, ...),
    iE-Extensions      ProtocolExtensionContainer { { ResourceTypeSemi-persistentPos-ExtIEs } }    OPTIONAL,
    ...
}

ResourceTypeSemi-persistentPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

ResourceTypeAperiodicPos ::= SEQUENCE {
  slotOffset      INTEGER (0..32),
  iE-Extensions   ProtocolExtensionContainer { { ResourceTypeAperiodicPos-ExtIEs} } OPTIONAL,
  ...
}

ResourceTypeAperiodicPos-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResponseTime ::= SEQUENCE {
  time            INTEGER (1..128,...),
  timeUnit        ENUMERATED {second, ten-seconds, ten-milliseconds,...},
  iE-Extensions   ProtocolExtensionContainer { { ResponseTime-ExtIEs} } OPTIONAL,
  ...
}

ResponseTime-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResultCSI-RSRP ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultCSI-RSRP-Item

ResultCSI-RSRP-Item ::= SEQUENCE {
  nR-PCI          NR-PCI,
  nR-ARFCN        NR-ARFCN,
  CGI-NR          CGI-NR OPTIONAL,
  valueCSI-RSRP-Cell ValueRSRP-NR OPTIONAL,
  cSI-RSRP-PerCSI-RS ResultCSI-RSRP-PerCSI-RS OPTIONAL,
  iE-Extensions   ProtocolExtensionContainer { { ResultCSI-RSRP-Item-ExtIEs} } OPTIONAL,
  ...
}

ResultCSI-RSRP-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResultCSI-RSRP-PerCSI-RS ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultCSI-RSRP-PerCSI-RS-Item

ResultCSI-RSRP-PerCSI-RS-Item ::= SEQUENCE {
  cSI-RS-Index    INTEGER (0..95),
  valueCSI-RSRP   ValueRSRP-NR,
  iE-Extensions   ProtocolExtensionContainer { { ResultCSI-RSRP-PerCSI-RS-Item-ExtIEs} } OPTIONAL,
  ...
}

ResultCSI-RSRP-PerCSI-RS-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

ResultCSI-RSRQ ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultCSI-RSRQ-Item

ResultCSI-RSRQ-Item ::= SEQUENCE {

```



```

nR-PCI          NR-PCI,
nR-ARFCN        NR-ARFCN,
cGI-NR          CGI-NR          OPTIONAL,
valueCSI-RSRQ-Cell ValueRSRQ-NR          OPTIONAL,
cSI-RSRQ-PerCSI-RS ResultCSI-RSRQ-PerCSI-RS          OPTIONAL,
iE-Extensions  ProtocolExtensionContainer { { ResultCSI-RSRQ-Item-ExtIEs} } OPTIONAL,
...
}

ResultCSI-RSRQ-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

ResultCSI-RSRQ-PerCSI-RS ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultCSI-RSRQ-PerCSI-RS-Item

ResultCSI-RSRQ-PerCSI-RS-Item ::= SEQUENCE {
cSI-RS-Index    INTEGER (0..95),
valueCSI-RSRQ  ValueRSRQ-NR,
iE-Extensions  ProtocolExtensionContainer { { ResultCSI-RSRQ-PerCSI-RS-Item-ExtIEs} } OPTIONAL,
...
}

ResultCSI-RSRQ-PerCSI-RS-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

ResultEUTRA ::= SEQUENCE (SIZE (1.. maxEUTRAMeas)) OF ResultEUTRA-Item

ResultEUTRA-Item ::= SEQUENCE {
pCI-EUTRA      PCI-EUTRA,
eARFCN         EARFCN,
valueRSRP-EUTRA ValueRSRP-EUTRA          OPTIONAL,
valueRSRQ-EUTRA ValueRSRQ-EUTRA          OPTIONAL,
cGI-EUTRA      CGI-EUTRA          OPTIONAL,
iE-Extensions  ProtocolExtensionContainer { { ResultEUTRA-Item-ExtIEs} } OPTIONAL,
...
}

ResultEUTRA-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

ResultRSRP-EUTRA ::= SEQUENCE (SIZE (1.. maxCellReport)) OF ResultRSRP-EUTRA-Item

ResultRSRP-EUTRA-Item ::= SEQUENCE {
pCI-EUTRA      PCI-EUTRA,
eARFCN         EARFCN,
cGI-EUTRA      CGI-EUTRA OPTIONAL,
valueRSRP-EUTRA ValueRSRP-EUTRA,
iE-Extensions  ProtocolExtensionContainer { { ResultRSRP-EUTRA-Item-ExtIEs} } OPTIONAL,
...
}

```

```

ResultRSRP-EUTRA-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultRSRQ-EUTRA ::= SEQUENCE (SIZE (1.. maxCellReport)) OF ResultRSRQ-EUTRA-Item

ResultRSRQ-EUTRA-Item ::= SEQUENCE {
    pCI-EUTRA          PCI-EUTRA,
    eARFCN             EARFCN,
    cGI-UTRA           CGI-EUTRA OPTIONAL,
    valueRSRQ-EUTRA    ValueRSRQ-EUTRA,
    iE-Extensions      ProtocolExtensionContainer { { ResultRSRQ-EUTRA-Item-ExtIEs } } OPTIONAL,
    ...
}

ResultRSRQ-EUTRA-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultSS-RSRP ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultSS-RSRP-Item

ResultSS-RSRP-Item ::= SEQUENCE {
    nR-PCI             NR-PCI,
    nR-ARFCN           NR-ARFCN,
    cGI-NR             CGI-NR                                OPTIONAL,
    valueSS-RSRP-Cell  ValueRSRP-NR                        OPTIONAL,
    sS-RSRP-PerSSB     ResultSS-RSRP-PerSSB                OPTIONAL,
    iE-Extensions      ProtocolExtensionContainer { { ResultSS-RSRP-Item-ExtIEs } } OPTIONAL,
    ...
}

ResultSS-RSRP-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultSS-RSRP-PerSSB ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultSS-RSRP-PerSSB-Item

ResultSS-RSRP-PerSSB-Item ::= SEQUENCE {
    sSB-Index          SSB-Index,
    valueSS-RSRP       ValueRSRP-NR,
    iE-Extensions      ProtocolExtensionContainer { { ResultSS-RSRP-PerSSB-Item-ExtIEs } } OPTIONAL,
    ...
}

ResultSS-RSRP-PerSSB-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultSS-RSRQ ::= SEQUENCE (SIZE (1.. maxCellReportNR)) OF ResultSS-RSRQ-Item

ResultSS-RSRQ-Item ::= SEQUENCE {
    nR-PCI             NR-PCI,
    nR-ARFCN           NR-ARFCN,

```

```

    CGI-NR          CGI-NR          OPTIONAL,
    valueSS-RSRQ-Cell ValueRSRQ-NR          OPTIONAL,
    sS-RSRQ-PerSSB   ResultSS-RSRQ-PerSSB   OPTIONAL,
    iE-Extensions   ProtocolExtensionContainer { { ResultSS-RSRQ-Item-ExtIEs } } OPTIONAL,
    ...
}

ResultSS-RSRQ-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultSS-RSRQ-PerSSB ::= SEQUENCE (SIZE (1.. maxIndexesReport)) OF ResultSS-RSRQ-PerSSB-Item

ResultSS-RSRQ-PerSSB-Item ::= SEQUENCE {
    sSB-Index      SSB-Index,
    valueSS-RSRQ   ValueRSRQ-NR,
    iE-Extensions ProtocolExtensionContainer { { ResultSS-RSRQ-PerSSB-Item-ExtIEs } } OPTIONAL,
    ...
}

ResultSS-RSRQ-PerSSB-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultGERAN ::= SEQUENCE (SIZE (1.. maxGERANMeas)) OF ResultGERAN-Item

ResultGERAN-Item ::= SEQUENCE {
    bCCH          BCCH,
    physCellIDGERAN PhysCellIDGERAN,
    rSSI          RSSI,
    iE-Extensions ProtocolExtensionContainer { { ResultGERAN-Item-ExtIEs } } OPTIONAL,
    ...
}

ResultGERAN-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultNR ::= SEQUENCE (SIZE (1.. maxNRMeas)) OF ResultNR-Item

ResultNR-Item ::= SEQUENCE {
    nR-PCI          NR-PCI,
    nR-ARFCN        NR-ARFCN,
    valueSS-RSRP-Cell ValueRSRP-NR          OPTIONAL,
    valueSS-RSRQ-Cell ValueRSRQ-NR          OPTIONAL,
    sS-RSRP-PerSSB   ResultSS-RSRP-PerSSB   OPTIONAL,
    sS-RSRQ-PerSSB   ResultSS-RSRQ-PerSSB   OPTIONAL,
    CGI-NR          CGI-NR          OPTIONAL,
    iE-Extensions   ProtocolExtensionContainer { { ResultNR-Item-ExtIEs } } OPTIONAL,
    ...
}

```

```

ResultNR-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

ResultUTRAN ::= SEQUENCE (SIZE (1.. maxUTRANMeas)) OF ResultUTRAN-Item

ResultUTRAN-Item ::= SEQUENCE {
    uARFCN                UARFCN,
    physCellIDUTRAN      CHOICE {
        physCellIDUTRA-FDD PhysCellIDUTRA-FDD,
        physCellIDUTRA-TDD PhysCellIDUTRA-TDD
    },
    uTRA-RSCP            UTRA-RSCP OPTIONAL,
    uTRA-EcN0            UTRA-EcN0 OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { ResultUTRAN-Item-ExtIEs } } OPTIONAL,
    ...
}

ResultUTRAN-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

RSSI ::= INTEGER (0..63, ...)

RxTxTimingErrorMargin ::= ENUMERATED {tc0dot5, tc1, tc2, tc4, tc8, tc12, tc16, tc20, tc24, tc32, tc40, tc48, tc64, tc80, tc96, tc128, ...}

-- S

SCS-480 ::= INTEGER(0..319)

SCS-960 ::= INTEGER(0..639)

SCS-SpecificCarrier ::= SEQUENCE {
    offsetToCarrier      INTEGER (0..2199,...),
    subcarrierSpacing    ENUMERATED {kHz15, kHz30, kHz60, kHz120,..., kHz480, kHz960},
    carrierBandwidth     INTEGER (1..275,...),
    iE-Extensions       ProtocolExtensionContainer { { SCS-SpecificCarrier-ExtIEs } } OPTIONAL,
    ...
}

SCS-SpecificCarrier-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

Search-window-information ::= SEQUENCE {
    expectedPropagationDelay    INTEGER (-3841..3841,...),
    delayUncertainty            INTEGER (1..246,...),
    iE-Extensions               ProtocolExtensionContainer { { Search-window-information-ExtIEs } } OPTIONAL,
    ...
}

Search-window-information-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {

```

```

}
...
}

RelativeTime1900 ::= BIT STRING (SIZE (64))

SFNInitialisationTime-EUTRA ::= BIT STRING (SIZE (64))

SlotNumber ::= INTEGER (0..79)

SpatialDirectionInformation ::= SEQUENCE {
    nR-PRS-Beam-Information      NR-PRS-Beam-Information,
    iE-Extensions                ProtocolExtensionContainer { { SpatialDirectionInformation-ExtIEs } } OPTIONAL,
    ...
}

SpatialDirectionInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SpatialRelationInfo ::= SEQUENCE {
    spatialRelationforResourceID      SpatialRelationforResourceID,
    iE-Extensions                    ProtocolExtensionContainer { {SpatialRelationInfo-ExtIEs} } OPTIONAL,
    ...
}

SpatialRelationInfo-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SpatialRelationforResourceID ::= SEQUENCE (SIZE(1..maxnoSpatialRelations)) OF SpatialRelationforResourceIDItem

SpatialRelationforResourceIDItem ::= SEQUENCE {
    referenceSignal      ReferenceSignal,
    iE-Extensions        ProtocolExtensionContainer { {SpatialRelationforResourceIDItem-ExtIEs} } OPTIONAL,
    ...
}

SpatialRelationforResourceIDItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SpatialRelationPerSRSResource ::= SEQUENCE {
    spatialRelationPerSRSResource-List SpatialRelationPerSRSResource-List,
    iE-Extensions                    ProtocolExtensionContainer { { SpatialRelationPerSRSResource-ExtIEs } } OPTIONAL,
    ...
}

SpatialRelationPerSRSResource-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

}

SpatialRelationPerSRSResource-List ::= SEQUENCE(SIZE (1.. maxnoSRS-ResourcePerSet)) OF SpatialRelationPerSRSResourceItem

SpatialRelationPerSRSResourceItem ::= SEQUENCE {
    referenceSignal      ReferenceSignal,
    iE-Extensions       ProtocolExtensionContainer { {SpatialRelationPerSRSResourceItem-ExtIEs} } OPTIONAL,
    ...
}

SpatialRelationPerSRSResourceItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SpatialRelationPos ::= CHOICE {
    sSBPos              SSB,
    pRSInformationPos   PRSInformationPos,
    choice-extension    ProtocolIE-Single-Container {{ SpatialInformationPos-ExtIEs }}
}

SpatialInformationPos-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

SRSConfig ::= SEQUENCE {
    sRSResource-List      SRSResource-List OPTIONAL,
    posSRSResource-List   PosSRSResource-List OPTIONAL,
    sRSResourceSet-List   SRSResourceSet-List OPTIONAL,
    posSRSResourceSet-List PosSRSResourceSet-List OPTIONAL,
    iE-Extensions         ProtocolExtensionContainer { { SRSConfig-ExtIEs } } OPTIONAL,
    ...
}

SRSConfig-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SRSCarrier-List ::= SEQUENCE (SIZE(1.. maxnoSRS-Carriers)) OF SRSCarrier-List-Item

SRSCarrier-List-Item ::= SEQUENCE {
    pointA              INTEGER (0..3279165),
    uplinkChannelBW-PerSCS-List UplinkChannelBW-PerSCS-List,
    activeULBWP         ActiveULBWP,
    pCI-NR              INTEGER (0..1007) OPTIONAL,
    iE-Extensions       ProtocolExtensionContainer { { SRSCarrier-List-Item-ExtIEs } } OPTIONAL,
    ...
}

SRSCarrier-List-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

SRSConfiguration ::= SEQUENCE {
    sRSCarrier-List      SRSCarrier-List,
    iE-Extensions       ProtocolExtensionContainer { { SRSConfiguration-ExtIEs } } OPTIONAL,
    ...
}

SRSConfiguration-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SrsFrequency ::= INTEGER (0..3279165)

SRSPortIndex ::= ENUMERATED{id1000, id1001, id1002, id1003, ...}

SRSPosResourceID ::= INTEGER (0..63)

SRSResource ::= SEQUENCE {
    sRSResourceID          SRSResourceID,
    nrofSRS-Ports          ENUMERATED {port1, ports2, ports4},
    transmissionComb       TransmissionComb,
    startPosition          INTEGER (0..13),
    nrofSymbols            ENUMERATED {n1, n2, n4},
    repetitionFactor       ENUMERATED {n1, n2, n4},
    freqDomainPosition     INTEGER (0..67),
    freqDomainShift        INTEGER (0..268),
    c-SRS                  INTEGER (0..63),
    b-SRS                  INTEGER (0..3),
    b-hop                  INTEGER (0..3),
    groupOrSequenceHopping ENUMERATED { neither, groupHopping, sequenceHopping },
    resourceType           ResourceType,
    sequenceId             INTEGER (0..1023),
    iE-Extensions          ProtocolExtensionContainer { { SRSResource-ExtIEs } } OPTIONAL,
    ...
}

SRSResource-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-nrofSymbolsExtended      CRITICALITY ignore EXTENSION NrofSymbolsExtended      PRESENCE optional}|
    { ID id-repetitionFactorExtended CRITICALITY ignore EXTENSION RepetitionFactorExtended PRESENCE optional}|
    { ID id-StartRBHopping           CRITICALITY ignore EXTENSION StartRBHopping           PRESENCE optional}|
    { ID id-StartRBIndex             CRITICALITY ignore EXTENSION StartRBIndex             PRESENCE optional},
    ...
}

SRSResourceID ::= INTEGER (0..63)

SRSResource-List ::= SEQUENCE (SIZE (1..maxnoSRS-Resources)) OF SRSResource

SRSResourceSet-List ::= SEQUENCE (SIZE (1..maxnoSRS-ResourceSets)) OF SRSResourceSet

SRSResourceID-List ::= SEQUENCE (SIZE (1..maxnoSRS-ResourcePerSet)) OF SRSResourceID

SRSResourceSet ::= SEQUENCE {

```

```

    sRSResourceSetID          INTEGER(0..15),
    sRSResourceID-List       SRSResourceID-List,
    resourceSetType          ResourceSetType,
    iE-Extensions            ProtocolExtensionContainer { { SRSResourceSet-ExtIEs } } OPTIONAL,
    ...
}

SRSResourceSet-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SRSResourceSetID ::= INTEGER (0..15, ...)

SRSResourceTrigger ::= SEQUENCE {
    aperiodicSRSResourceTriggerList      AperiodicSRSResourceTriggerList,
    iE-Extensions            ProtocolExtensionContainer { {SRSResourceTrigger-ExtIEs} } OPTIONAL,
    ...
}

SRSResourceTrigger-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SRSResourcetype ::= SEQUENCE {
    sRSResourceTypeChoice      SRSResourceTypeChoice,
    iE-Extensions            ProtocolExtensionContainer { { SRSResourcetype-ExtIEs} } OPTIONAL,
    ...
}

SRSResourcetype-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-SRSPortIndex      CRITICALITY ignore EXTENSION SRSPortIndex  PRESENCE optional},
    ...
}

SRSResourceTypeChoice ::= CHOICE {
    sRSResourceInfo          SRSInfo,
    posSRSResourceInfo      PosSRSInfo,
    ...
}

SRSInfo ::= SEQUENCE {
    sRSResource          SRSResourceID,
    ...
}

SRSTransmissionStatus ::= ENUMERATED {stopped, ...}

PosSRSInfo ::= SEQUENCE {
    posSRSResourceID      SRSPosResourceID,
    ...
}

SSBInfo ::= SEQUENCE {

```



```

    listOfSSBInfo      SEQUENCE (SIZE (1..maxNoSSBs)) OF SSBInfoItem,
    iE-Extensions      ProtocolExtensionContainer { {SSBInfo-ExtIEs} } OPTIONAL,
    ...
}

SSBInfo-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SSBInfoItem ::= SEQUENCE {
    sSB-Configuration  TF-Configuration,
    pCI-NR              INTEGER (0..1007),
    iE-Extensions      ProtocolExtensionContainer { { SSBInfoItem-ExtIEs} }   OPTIONAL,
    ...
}

SSBInfoItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SSB ::= SEQUENCE {
    pCI-NR              INTEGER (0..1007),
    ssb-index           SSB-Index OPTIONAL,
    iE-Extensions      ProtocolExtensionContainer { {SSB-ExtIEs} } OPTIONAL,
    ...
}

SSB-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SSBBurstPosition ::= CHOICE {
    shortBitmap        BIT STRING (SIZE(4)),
    mediumBitmap       BIT STRING (SIZE(8)),
    longBitmap         BIT STRING (SIZE(64)),
    choice-extension   ProtocolIE-Single-Container { { SSBBurstPosition-ExtIEs} }
}

SSBBurstPosition-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

SSB-Index ::= INTEGER(0..63)

SSID ::= OCTET STRING (SIZE(1..32))

StartRBIndex ::= CHOICE{

```

```

    freqScalingFactor2  INTEGER(0..1),
    freqScalingFactor4  INTEGER(0..3),
    choice-extension    ProtocolIE-Single-Container { { StartRBIndex-ExtIEs } }
}

StartRBIndex-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

StartRBHopping ::= ENUMERATED {enable}

StartTimeAndDuration ::= SEQUENCE {
    startTime          RelativeTime1900          OPTIONAL,
    duration           INTEGER (0..90060, ...)   OPTIONAL,
    iE-Extensions     ProtocolExtensionContainer { { StartTimeAndDuration-ExtIEs } } OPTIONAL,
    ...
}

StartTimeAndDuration-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

SystemFrameNumber ::= INTEGER (0..1023)

SystemInformation ::= SEQUENCE (SIZE (1.. maxNrOfPosSImessage)) OF SEQUENCE {
    broadcastPeriodicity BroadcastPeriodicity,
    posSIBs              PosSIBs,
    iE-Extensions       ProtocolExtensionContainer { { SystemInformation-ExtIEs } } OPTIONAL,
    ...
}

SystemInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

-- T

TAC ::= OCTET STRING (SIZE(3))

TDD-Config-EUTRA-Item ::= SEQUENCE {
    subframeAssignment  ENUMERATED { sa0, sa1, sa2, sa3, sa4, sa5, sa6, ... },
    iE-Extensions      ProtocolExtensionContainer { { TDD-Config-EUTRA-Item-ExtIEs } } OPTIONAL,
    ...
}

TDD-Config-EUTRA-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPTEGInformation ::= CHOICE {
    rxTx-TEG           RxTxTEG,
    rx-TEG             RxTEG,
}

```

```

    choice-extension      ProtocolIE-Single-Container { { TRPTEGInformation-ExtIEs } }
  }

TRPTEGInformation-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

RxTxTEG ::= SEQUENCE {
  TRP-RxTx-TEGInformation      TRP-RxTx-TEGInformation,
  TRP-Tx-TEGInformation        TRP-Tx-TEGInformation      OPTIONAL,
  IE-extensions                ProtocolExtensionContainer { { RxTxTEG-ExtIEs } }    OPTIONAL,
  ...
}

RxTxTEG-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

RxTEG ::= SEQUENCE {
  TRP-Rx-TEGInformation        TRP-Rx-TEGInformation,
  TRP-Tx-TEGInformation        TRP-Tx-TEGInformation,
  IE-extensions                ProtocolExtensionContainer { { RxTEG-ExtIEs } }    OPTIONAL,
  ...
}

RxTEG-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TimingErrorMargin ::= ENUMERATED {tc0, tc2, tc4, tc6, tc8, tc12, tc16, tc20, tc24, tc32, tc40, tc48, tc56, tc64, tc72, tc80, ...}

TF-Configuration ::= SEQUENCE {
  sSB-frequency                INTEGER (0..3279165),
  sSB-subcarrier-spacing        ENUMERATED {kHz15, kHz30, kHz120, kHz240, ..., kHz60, kHz480, kHz960},
  -- The value kHz60 is not supported in this version of the specification.
  sSB-Transmit-power           INTEGER (-60..50),
  sSB-periodicity              ENUMERATED {ms5, ms10, ms20, ms40, ms80, ms160, ...},
  sSB-half-frame-offset        INTEGER(0..1),
  sSB-SFN-offset               INTEGER(0..15),
  sSB-BurstPosition            SBBBurstPosition      OPTIONAL,
  sFN-initialisation-time      RelativeTime1900      OPTIONAL,
  IE-Extensions                ProtocolExtensionContainer { { TF-Configuration-ExtIEs } }    OPTIONAL,
  ...
}

TF-Configuration-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TimeStamp ::= SEQUENCE {
  systemFrameNumber            SystemFrameNumber,
  slotIndex                    TimeStampSlotIndex,
  measurementTime              RelativeTime1900      OPTIONAL,

```

```

    iE-Extension          ProtocolExtensionContainer { { TimeStamp-ExtIEs } } OPTIONAL,
    ...
}

TimeStamp-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TimeStampSlotIndex ::= CHOICE {
    sCS-15          INTEGER(0..9),
    sCS-30          INTEGER(0..19),
    sCS-60          INTEGER(0..39),
    sCS-120         INTEGER(0..79),
    choice-extension ProtocolIE-Single-Container { { TimeStampSlotIndex-ExtIEs } }
}

TimeStampSlotIndex-ExtIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-SCS-480    CRITICALITY reject TYPE SCS-480 PRESENCE mandatory } |
    { ID id-SCS-960    CRITICALITY reject TYPE SCS-960 PRESENCE mandatory },
    ...
}

TP-ID-EUTRA ::= INTEGER (0..4095, ...)

TP-Type-EUTRA ::= ENUMERATED { prs-only-tp, ... }

TransmissionComb ::= CHOICE {
    n2 SEQUENCE {
        combOffset-n2          INTEGER (0..1),
        cyclicShift-n2         INTEGER (0..7)
    },
    n4 SEQUENCE {
        combOffset-n4          INTEGER (0..3),
        cyclicShift-n4         INTEGER (0..11)
    },
    choice-extension          ProtocolIE-Single-Container { { TransmissionComb-ExtIEs } }
}

TransmissionComb-ExtIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-transmissionCombN8 CRITICALITY reject TYPE TransmissionCombN8 PRESENCE mandatory },
    ...
}

TransmissionCombN8 ::= SEQUENCE {
    combOffset-n8          INTEGER (0..7),
    cyclicShift-n8         INTEGER (0..5),
    iE-Extensions          ProtocolExtensionContainer { { TransmissionCombN8-ExtIEs } } OPTIONAL
}

TransmissionCombN8-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

```

```

TransmissionCombPos ::= CHOICE {
  n2    SEQUENCE {
        combOffset-n2    INTEGER (0..1),
        cyclicShift-n2   INTEGER (0..7)
      },
  n4    SEQUENCE {
        combOffset-n4    INTEGER (0..3),
        cyclicShift-n4   INTEGER (0..11)
      },
  n8    SEQUENCE {
        combOffset-n8    INTEGER (0..7),
        cyclicShift-n8   INTEGER (0..5)
      },
  choice-extension      ProtocolIE-Single-Container { { TransmissionCombPos-ExtIEs } }
}
TransmissionCombPos-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

TRPBeamAntennaInformation ::= SEQUENCE {
  choice-TRP-Beam-Antenna-Info-Item      Choice-TRP-Beam-Antenna-Info-Item,
  IE-Extensions                          ProtocolExtensionContainer {{ TRPBeamAntennaInformation-ExtIEs}}
  ...
}
TRPBeamAntennaInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

Choice-TRP-Beam-Antenna-Info-Item ::= CHOICE {
  reference          TRP-ID,
  explicit           TRP-BeamAntennaExplicitInformation,
  noChange          NULL,
  choice-extension  ProtocolIE-Single-Container { { Choice-TRP-Beam-Info-Item-ExtIEs } }
}

Choice-TRP-Beam-Info-Item-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

TRP-BeamAntennaExplicitInformation ::= SEQUENCE {
  trp-BeamAntennaAngles      TRP-BeamAntennaAngles,
  lcs-to-gcs-translation     LCS-to-GCS-Translation
  IE-Extensions              ProtocolExtensionContainer {{ TRP-BeamAntennaExplicitInformation-ExtIEs}}
  ...
}
TRP-BeamAntennaExplicitInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TRP-BeamAntennaAngles ::= SEQUENCE (SIZE (1.. maxnoAzimuthAngles)) OF TRP-BeamAntennaAnglesList-Item

```

```

TRP-BeamAntennaAnglesList-Item ::= SEQUENCE {
    trp-azimuth-angle          INTEGER (0..359),
    trp-azimuth-angle-fine    INTEGER (0..9) OPTIONAL,
    trp-elevation-angle-list   SEQUENCE (SIZE (1.. maxnoElevationAngles)) OF TRP-ElevationAngleList-Item,
    iE-Extensions              ProtocolExtensionContainer {{ TRP-BeamAntennaAnglesList-Item-ExtIEs}} OPTIONAL,
    ...
}

TRP-BeamAntennaAnglesList-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRP-ElevationAngleList-Item ::= SEQUENCE {
    trp-elevation-angle        INTEGER (0..180),
    trp-elevation-angle-fine   INTEGER (0..9) OPTIONAL,
    trp-beam-power-list        SEQUENCE (SIZE (2..maxNumResourcesPerAngle)) OF TRP-Beam-Power-Item,
    iE-Extensions              ProtocolExtensionContainer {{ TRP-ElevationAngleList-Item-ExtIEs}} OPTIONAL,
    ...
}

TRP-ElevationAngleList-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRP-Beam-Power-Item ::= SEQUENCE {
    pRSResourceSetID           PRS-Resource-Set-ID          OPTIONAL,
    pRSResourceID              PRS-Resource-ID,
    relativePower               INTEGER (0..30), --negative value
    relativePowerFine           INTEGER (0..9)              OPTIONAL, --negative value
    iE-Extensions              ProtocolExtensionContainer {{ TRP-Beam-Power-Item-ExtIEs}} OPTIONAL,
    ...
}

TRP-Beam-Power-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPMeasurementQuantities ::= SEQUENCE (SIZE (1..maxnoPosMeas)) OF TRPMeasurementQuantitiesList-Item

TRPMeasurementQuantitiesList-Item ::= SEQUENCE {
    trpMeasurementQuantities-Item TRPMeasurementQuantities-Item,
    timingReportingGranularityFactor INTEGER (0..5) OPTIONAL,
    iE-Extensions                  ProtocolExtensionContainer {{ TRPMeasurementQuantitiesList-Item-ExtIEs}} OPTIONAL,
    ...
}

TRPMeasurementQuantitiesList-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPMeasurementQuantities-Item ::= ENUMERATED {
    gNB-RxTxTimeDiff,
    uL-SRS-RSRP,

```

```

    uL-AoA,
    uL-RTOA,
    ...,
    multiple-UL-AoA,
    uL-SRS-RSRPP
}

TrpMeasurementResult ::= SEQUENCE (SIZE (1.. maxnoPosMeas)) OF TrpMeasurementResultItem
TrpMeasurementResultItem ::= SEQUENCE {
    measuredResultsValue      TrpMeasuredResultsValue,
    timeStamp                  TimeStamp,
    measurementQuality         TrpMeasurementQuality          OPTIONAL,
    measurementBeamInfo       MeasurementBeamInfo            OPTIONAL,
    iE-Extensions              ProtocolExtensionContainer {{TrpMeasurementResultItem-ExtIEs}}  OPTIONAL,
    ...
}

TrpMeasurementResultItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-SRSResourceType CRITICALITY ignore EXTENSION SRSResourceType PRESENCE optional}|
    { ID id-ARP-ID          CRITICALITY ignore EXTENSION ARP-ID          PRESENCE optional}|
    { ID id-LoS-NLoSInformation CRITICALITY ignore EXTENSION LoS-NLoSInformation PRESENCE optional },
    ...
}

TrpMeasuredResultsValue ::= CHOICE {
    uL-AngleOfArrival      UL-AoA,
    uL-SRS-RSRP            UL-SRS-RSRP,
    uL-RTOA                UL-RTOAMeasurement,
    gNB-RxTxTimeDiff      GNB-RxTxTimeDiff,
    choice-extension       ProtocolIE-Single-Container { { TrpMeasuredResultsValue-ExtIEs } }
}

TrpMeasuredResultsValue-ExtIEs NRPPA-PROTOCOL-IES ::= {
    { ID id-ZoA          CRITICALITY reject TYPE ZoA PRESENCE mandatory}|
    { ID id-MultipleULAoA CRITICALITY reject TYPE MultipleULAoA PRESENCE mandatory}|
    { ID id-UL-SRS-RSRPP CRITICALITY reject TYPE UL-SRS-RSRPP PRESENCE mandatory},
    ...
}

TrpMeasurementQuality ::= CHOICE {
    timingMeasQuality      TrpMeasurementTimingQuality,
    angleMeasQuality       TrpMeasurementAngleQuality,
    choice-Extension       ProtocolIE-Single-Container {{ TrpMeasurementQuality-ExtIEs}}
}

TrpMeasurementQuality-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TrpMeasurementTimingQuality ::= SEQUENCE {
    measurementQuality      INTEGER (0..31),
    resolution               ENUMERATED {m0dot1, m1, m10, m30, ...},
    iE-extensions            ProtocolExtensionContainer { { TrpMeasurementTimingQuality-ExtIEs } } OPTIONAL,
}

```

```

}
...
}
TrpMeasurementTimingQuality-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}
TrpMeasurementAngleQuality ::= SEQUENCE {
azimuthQuality      INTEGER (0..255),
zenithQuality       INTEGER (0..255)   OPTIONAL,
resolution          ENUMERATED {deg0dot1, ...},
iE-extensions      ProtocolExtensionContainer { { TrpMeasurementAngleQuality-ExtIEs } } OPTIONAL,
...
}
TrpMeasurementAngleQuality-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}
TRP-MeasurementRequestList ::= SEQUENCE (SIZE (1..maxNoOfMeasTRPs)) OF TRP-MeasurementRequestItem
TRP-MeasurementRequestItem ::= SEQUENCE {
trp-ID              TRP-ID,
search-window-information Search-window-information   OPTIONAL,
iE-extensions      ProtocolExtensionContainer { { TRP-MeasurementRequestItem-ExtIEs } } OPTIONAL,
...
}
TRP-MeasurementRequestItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
{ ID id-Cell-ID      CRITICALITY ignore EXTENSION CGI-NR      PRESENCE optional }|
{ ID id-AoA-SearchWindow CRITICALITY ignore EXTENSION AoA-AssistanceInfo PRESENCE optional }|
{ ID id-NumberOfTRPRxTEG CRITICALITY ignore EXTENSION NumberOfTRPRxTEG PRESENCE optional }|
{ ID id-NumberOfTRPRxTxTEG CRITICALITY ignore EXTENSION NumberOfTRPRxTxTEG PRESENCE optional },
...
}
TRP-MeasurementResponseList ::= SEQUENCE (SIZE (1..maxNoOfMeasTRPs)) OF TRP-MeasurementResponseItem
TRP-MeasurementResponseItem ::= SEQUENCE {
trp-ID              TRP-ID,
measurementResult   TrpMeasurementResult,
iE-extensions      ProtocolExtensionContainer { { TRP-MeasurementResponseItem-ExtIEs } } OPTIONAL,
...
}
TRP-MeasurementResponseItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
{ ID id-Cell-ID      CRITICALITY ignore EXTENSION CGI-NR      PRESENCE optional },
...
}
TRP-MeasurementUpdateList ::= SEQUENCE (SIZE (1..maxNoOfMeasTRPs)) OF TRP-MeasurementUpdateItem
TRP-MeasurementUpdateItem ::= SEQUENCE {

```



```

    TRP-ID
    aoA-window-information      TRP-ID,
    iE-extensions                AoA-AssistanceInfo OPTIONAL,
    ...                          ProtocolExtensionContainer { { TRP-MeasurementUpdateItem-ExtIEs } } OPTIONAL,
}

TRP-MeasurementUpdateItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  { ID id-NumberOfTRPRxTEG      CRITICALITY ignore EXTENSION NumberOfTRPRxTEG      PRESENCE optional }|
  { ID id-NumberOfTRPRxTxTEG    CRITICALITY ignore EXTENSION NumberOfTRPRxTxTEG    PRESENCE optional },
  ...
}

TRPInformationListTRPResp ::= SEQUENCE (SIZE (1.. maxnoTRPs)) OF SEQUENCE {
  TRPInformation                TRPInformation,
  iE-Extensions                ProtocolExtensionContainer { {TRPInformationTRPResp-ExtIEs} } OPTIONAL,
  ...
}

TRPInformationTRPResp-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TRPInformation ::= SEQUENCE {
  TRP-ID                        TRP-ID,
  TRPInformationTypeResponseList TRPInformationTypeResponseList,
  iE-Extensions                ProtocolExtensionContainer { { TRPInformation-ExtIEs } } OPTIONAL,
  ...
}

TRPInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TRPInformationTypeResponseList ::= SEQUENCE (SIZE (1..maxnoTRPInfoTypes)) OF TRPInformationTypeResponseItem

TRPInformationTypeResponseItem ::= CHOICE {
  pCI-NR                        INTEGER (0..1007),
  cGI-NR                        CGI-NR,
  aRFCN                         INTEGER (0..3279165),
  pRSConfiguration             PRSConfiguration,
  sSBinformation                SSBInfo,
  sFNInitialisationTime        RelativeTime1900,
  spatialDirectionInformation  SpatialDirectionInformation,
  geographicalCoordinates      GeographicalCoordinates,
  choice-extension             ProtocolIE-Single-Container { { TRPInformationTypeResponseItem-ExtIEs } }
}

TRPInformationTypeResponseItem-ExtIEs NRPPA-PROTOCOL-IES ::= {
  { ID id-TRPType                CRITICALITY reject TYPE TRPType                PRESENCE mandatory }|
  { ID id-OnDemandPRS           CRITICALITY reject TYPE OnDemandPRS-Info        PRESENCE mandatory }|
  { ID id-TRPTxTEGAssociation    CRITICALITY reject TYPE TRPTxTEGAssociation    PRESENCE mandatory }|
  { ID id-TRPBeamAntennaInformation CRITICALITY reject TYPE TRPBeamAntennaInformation PRESENCE mandatory },
  ...
}

```

```

}

TRPInformationTypeListTRPReq ::= SEQUENCE (SIZE(1.. maxnoTRPInfoTypes)) OF ProtocolIE-Single-Container { {TRPInformationTypeItemTRPReq} }

TRPInformationTypeItemTRPReq NRPPA-PROTOCOL-IES ::= {
  { ID id-TRPInformationTypeItem    CRITICALITY reject    TYPE TRPInformationTypeItem    PRESENCE mandatory },
  ...
}

TRPInformationTypeItem ::= ENUMERATED {
  nrPCI,
  nG-RAN-CGI,
  arfcn,
  pRSConfig,
  sSBInfo,
  sFNInitTime,
  spatialDirectInfo,
  geoCoord,

  ...,
  trp-type,
  ondemandPRSInfo,
  trpTxTeg,
  beam-antenna-info
}

TRPList ::= SEQUENCE (SIZE(1.. maxnoTRPs)) OF TRPItem

TRPItem ::= SEQUENCE {
  trp-ID      TRP-ID,
  iE-Extensions  ProtocolExtensionContainer { {TRPItem-ExtIEs} } OPTIONAL,
  ...
}

TRPItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TRP-ID ::= INTEGER (1.. maxnoTRPs, ...)

TRPPositionDefinitionType ::= CHOICE {
  direct      TRPPositionDirect,
  referenced  TRPPositionReferenced,
  choice-extension
  ProtocolIE-Single-Container { { TRPPositionDefinitionType-ExtIEs } }
}

TRPPositionDefinitionType-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}

```

```

TRPPositionDirect ::= SEQUENCE {
    accuracy TRPPositionDirectAccuracy,
    iE-extensions ProtocolExtensionContainer { { TRPPositionDirect-ExtIEs } } OPTIONAL,
    ...
}

TRPPositionDirect-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPPositionDirectAccuracy ::= CHOICE {
    tRPPosition NG-RANAccessPointPosition ,
    tRPHAPosition NGRANHighAccuracyAccessPointPosition ,
    choice-extension ProtocolIE-Single-Container { { TRPPositionDirectAccuracy-ExtIEs } }
}

TRPPositionDirectAccuracy-ExtIEs NRPPA-PROTOCOL-IES ::= {
    ...
}

TRPPositionReferenced ::= SEQUENCE {
    referencePoint ReferencePoint,
    referencePointType TRPReferencePointType,
    iE-extensions ProtocolExtensionContainer { { TRPPositionReferenced-ExtIEs } } OPTIONAL,
    ...
}

TRPPositionReferenced-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRP-PRS-Information-List ::= SEQUENCE (SIZE(1.. maxnoPRSTRPs)) OF TRP-PRS-Information-List-Item

TRP-PRS-Information-List-Item ::= SEQUENCE {
    tRP-ID TRP-ID,
    nR-PCI NR-PCI,
    CGI-NR CGI-NR OPTIONAL,
    pRSConfiguration PRSConfiguration,
    iE-Extensions ProtocolExtensionContainer { { TRP-PRS-Information-List-Item-ExtIEs } } OPTIONAL,
    ...
}

TRP-PRS-Information-List-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

TRPReferencePointType ::= CHOICE {
    tRPPositionRelativeGeodetic RelativeGeodeticLocation,
    tRPPositionRelativeCartesian RelativeCartesianLocation,
    choice-extension ProtocolIE-Single-Container { { TRPReferencePointType-ExtIEs } }
}

TRPReferencePointType-ExtIEs NRPPA-PROTOCOL-IES ::= {

```

```

}
...
}
TRP-Rx-TEGInformation ::= SEQUENCE {
    tRP-Rx-TEGID                INTEGER (0..31),
    tRP-Rx-TimingErrorMargin    TimingErrorMargin,
    iE-Extensions               ProtocolExtensionContainer { { TRP-Rx-TEGInformation-ExtIEs } } OPTIONAL,
    ...
}
TRP-Rx-TEGInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}
TRP-RxTx-TEGInformation ::= SEQUENCE {
    tRP-RxTx-TEGID              INTEGER (0..255),
    tRP-RxTx-TimingErrorMargin  RxTxTimingErrorMargin,
    iE-Extensions               ProtocolExtensionContainer { { TRP-RxTx-TEGInformation-ExtIEs } } OPTIONAL,
    ...
}
TRP-RxTx-TEGInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}
TRP-Tx-TEGInformation ::= SEQUENCE {
    tRP-Tx-TEGID                INTEGER (0..7),
    tRP-Tx-TimingErrorMargin    TimingErrorMargin,
    iE-Extensions               ProtocolExtensionContainer { { TRP-Tx-TEGInformation-ExtIEs } } OPTIONAL,
    ...
}
TRP-Tx-TEGInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}
TRPTxTEGAssociation ::= SEQUENCE (SIZE(1.. maxnoTRPTEGs)) OF TRPTEGItem
TRPTEGItem ::= SEQUENCE {
    tRP-Tx-TEGInformation        TRP-Tx-TEGInformation,
    dl-PRSResourceSetID         PRS-Resource-Set-ID,
    dl-PRSResourceID-List       SEQUENCE (SIZE(1.. maxPRS-ResourcesPerSet)) OF DLPRSResourceID-Item OPTIONAL,
    iE-Extensions               ProtocolExtensionContainer { { TRPTEGItem-ExtIEs } } OPTIONAL,
    ...
}
TRPTEGItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}
DLPRSResourceID-Item ::= SEQUENCE {
    dl-PRSResourceID            PRS-Resource-ID,
    iE-Extensions               ProtocolExtensionContainer { { DLPRSResource-Item-ExtIEs } } OPTIONAL,
    ...
}

```

```
}
DLPRSResource-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

TRPType ::= ENUMERATED {
  prsOnlyTP,
  srsOnlyRP,
  tp,
  rp,
  trp,
  ...
}

TypeOfError ::= ENUMERATED {
  not-understood,
  missing,
  ...
}

-- U

UARFCN ::= INTEGER (0..16383, ...)

UE-Measurement-ID ::= INTEGER (1..15, ..., 16..256)

UEReportingInformation ::= SEQUENCE {
  reportingAmount          ENUMERATED {ma0, ma1, ma2, ma4, ma8, ma16, ma32, ma64},
  reportingInterval        ENUMERATED {none, one, two, four, eight, ten, sixteen, twenty, thirty-two, sixty-four, ...},
  iE-extensions            ProtocolExtensionContainer { { UEReportingInformation-ExtIEs } } OPTIONAL,
  ...
}

UEReportingInformation-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}

UE-TEG-ReportingPeriodicity ::= ENUMERATED {
  ms160,
  ms320,
  ms1280,
  ms2560,
  ms61440,
  ms81920,
  ms368640,
  ms737280,
  ...
}

UETxTEGAssociationList ::= SEQUENCE (SIZE(1.. maxnoUETEGs)) OF UETxTEGAssociationItem
```

```

UETxTEGAssociationItem ::= SEQUENCE {
    uE-Tx-TEG-ID          INTEGER (0..7),
    posSRSResourceID-List PosSRSResourceID-List,
    timeStamp            TimeStamp,
    carrierFreq          CarrierFreq          OPTIONAL,
    iE-Extensions        ProtocolExtensionContainer { { UETxTEGAssociationItem-ExtIEs } } OPTIONAL,
    ...
}

UETxTEGAssociationItem-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-UETxTimingErrorMargin          CRITICALITY ignore EXTENSION TimingErrorMargin PRESENCE optional },
    ...
}

SRSResourceID-Item ::= SEQUENCE {
    sRSResourceID          SRSResourceID,
    iE-Extensions          ProtocolExtensionContainer { { SRSResourceID-Item-ExtIEs } } OPTIONAL,
    ...
}

SRSResourceID-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

UE-TEG-Info-Request ::= ENUMERATED {onDemand, periodic, stop, ...}

UTRA-EcN0 ::= INTEGER (0..49, ...)

UTRA-RSCP ::= INTEGER (-5..91, ...)

UL-AoA ::= SEQUENCE {
    azimuthAoA            INTEGER (0..3599),
    zenithAoA             INTEGER (0..1799)          OPTIONAL,
    LCS-to-GCS-Translation LCS-to-GCS-Translation  OPTIONAL,
    iE-extensions          ProtocolExtensionContainer { { UL-AoA-ExtIEs } }          OPTIONAL,
    ...
}

UL-AoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

UL-RTOAMeasurement ::= SEQUENCE {
    uLRTOAmeas            ULRTOAmeas,
    additionalPathList    AdditionalPathList  OPTIONAL,
    iE-extensions          ProtocolExtensionContainer { { UL-RTOAMeasurement-ExtIEs } }  OPTIONAL, ...
}

UL-RTOAMeasurement-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    { ID id-ExtendedAdditionalPathList    CRITICALITY ignore EXTENSION ExtendedAdditionalPathList PRESENCE optional }|
    { ID id-TRP-Rx-TEGInformation          CRITICALITY ignore EXTENSION TRP-Rx-TEGInformation PRESENCE optional },
    ...
}

```

```

}
ULRTOAmeas ::= CHOICE {
  k0      INTEGER (0.. 1970049),
  k1      INTEGER (0.. 985025),
  k2      INTEGER (0.. 492513),
  k3      INTEGER (0.. 246257),
  k4      INTEGER (0.. 123129),
  k5      INTEGER (0.. 61565),
  choice-extension      ProtocolIE-Single-Container { { ULRTOAmeas-ExtIEs } }
}
ULRTOAmeas-ExtIEs NRPPA-PROTOCOL-IES ::= {
  ...
}
UL-SRS-RSRP ::= INTEGER (0..126)
UL-SRS-RSRPP ::= SEQUENCE {
  firstPathRSRPP      INTEGER (0..126),
  iE-extensions      ProtocolExtensionContainer { { UL-SRS-RSRPP-ExtIEs } } OPTIONAL,
  ...
}
UL-SRS-RSRPP-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
  ...
}
UplinkChannelBW-PerSCS-List ::= SEQUENCE (SIZE (1..maxnoSCSs)) OF SCS-SpecificCarrier

Uncertainty-range-AoA ::= INTEGER (0..3599)
Uncertainty-range-ZoA ::= INTEGER (0..1799)

-- V
ValueRSRP-EUTRA ::= INTEGER (0..97, ...)
ValueRSRQ-EUTRA ::= INTEGER (0..34, ...)
ValueRSRP-NR ::= INTEGER (0..127)
ValueRSRQ-NR ::= INTEGER (0..127)

-- W
WLANMeasurementQuantities ::= SEQUENCE (SIZE (0.. maxNoMeas)) OF ProtocolIE-Single-Container { {WLANMeasurementQuantities-ItemIEs} }
WLANMeasurementQuantities-ItemIEs NRPPA-PROTOCOL-IES ::= {
  { ID id-WLANMeasurementQuantities-Item CRITICALITY reject TYPE WLANMeasurementQuantities-Item PRESENCE mandatory}}
WLANMeasurementQuantities-Item ::= SEQUENCE {

```

```
WLANMeasurementQuantitiesValue          WLANMeasurementQuantitiesValue,
iE-Extensions                          ProtocolExtensionContainer { { WLANMeasurementQuantitiesValue-ExtIEs } } OPTIONAL,
...
}

WLANMeasurementQuantitiesValue-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

WLANMeasurementQuantitiesValue ::= ENUMERATED {
wlan,
...
}

WLANMeasurementResult ::= SEQUENCE (SIZE (1..maxNoMeas)) OF WLANMeasurementResult-Item

WLANMeasurementResult-Item ::= SEQUENCE {
WLAN-RSSI          WLAN-RSSI,
sSID              SSID          OPTIONAL,
bSSID            BSSID          OPTIONAL,
hESSID           HESSID         OPTIONAL,
operatingClass   WLANOperatingClass OPTIONAL,
countryCode      WLANCountryCode OPTIONAL,
WLANChannelList WLANChannelList OPTIONAL,
WLANBand         WLANBand       OPTIONAL,
iE-Extensions    ProtocolExtensionContainer { { WLANMeasurementResult-Item-ExtIEs } } OPTIONAL,
...
}

WLANMeasurementResult-Item-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
...
}

WLAN-RSSI ::= INTEGER (0..141, ...)

WLANBand ::= ENUMERATED {band2dot4, band5, ...}

WLANChannelList ::= SEQUENCE (SIZE (1..maxWLANchannels)) OF WLANChannel

WLANChannel ::= INTEGER (0..255)

WLANCountryCode ::= ENUMERATED {
unitedStates,
europe,
japan,
global,
...
}

WLANOperatingClass ::= INTEGER (0..255)

-- X
-- Y
```



```

-- Z
ZoA ::= SEQUENCE {
    zenithAoA                INTEGER (0..1799),
    LCS-to-GCS-Translation  LCS-to-GCS-Translation OPTIONAL,
    iE-extensions            ProtocolExtensionContainer { { ZoA-ExtIEs } } OPTIONAL,
    ...
}

ZoA-ExtIEs NRPPA-PROTOCOL-EXTENSION ::= {
    ...
}

END
-- ASN1STOP

```

9.3.6 Common definitions

```

-- ASN1START
-- *****
--
-- Common definitions
--
-- *****

NRPPA-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-CommonDataTypes (3)}

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

-- *****
--
-- Extension constants
--
-- *****

maxPrivateIEs                INTEGER ::= 65535
maxProtocolExtensions        INTEGER ::= 65535
maxProtocolIEs               INTEGER ::= 65535

-- *****
--
-- Common Data Types
--
-- *****

Criticality ::= ENUMERATED { reject, ignore, notify }

```

```

NRPPATransactionID ::= INTEGER (0..32767)

Presence ::= ENUMERATED { optional, conditional, mandatory }

PrivateIE-ID ::= CHOICE {
  local      INTEGER (0.. maxPrivateIEs),
  global     OBJECT IDENTIFIER
}

ProcedureCode ::= INTEGER (0..255)

ProtocolIE-ID ::= INTEGER (0..maxProtocolIEs)

TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome}

END
-- ASN1STOP

```

9.3.7 Constant definitions

```

-- ASN1START
-- *****
--
-- Constant definitions
--
-- *****

NRPPA-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-Constants (4) }

DEFINITIONS AUTOMATIC TAGS ::=

BEGIN

IMPORTS

    ProcedureCode,
    ProtocolIE-ID
FROM NRPPA-CommonDataTypes;

-- *****
--
-- Elementary Procedures
--
-- *****

id-errorIndication          ProcedureCode ::= 0
id-privateMessage           ProcedureCode ::= 1
id-e-CIDMeasurementInitiation ProcedureCode ::= 2
id-e-CIDMeasurementFailureIndication ProcedureCode ::= 3
id-e-CIDMeasurementReport   ProcedureCode ::= 4

```

| | |
|-----------------------------------|----------------------|
| id-e-CIDMeasurementTermination | ProcedureCode ::= 5 |
| id-oTDOAInformationExchange | ProcedureCode ::= 6 |
| id-assistanceInformationControl | ProcedureCode ::= 7 |
| id-assistanceInformationFeedback | ProcedureCode ::= 8 |
| id-positioningInformationExchange | ProcedureCode ::= 9 |
| id-positioningInformationUpdate | ProcedureCode ::= 10 |
| id-Measurement | ProcedureCode ::= 11 |
| id-MeasurementReport | ProcedureCode ::= 12 |
| id-MeasurementUpdate | ProcedureCode ::= 13 |
| id-MeasurementAbort | ProcedureCode ::= 14 |
| id-MeasurementFailureIndication | ProcedureCode ::= 15 |
| id-tRPInformationExchange | ProcedureCode ::= 16 |
| id-positioningActivation | ProcedureCode ::= 17 |
| id-positioningDeactivation | ProcedureCode ::= 18 |
| id-pRSConfigurationExchange | ProcedureCode ::= 19 |
| id-measurementPreconfiguration | ProcedureCode ::= 20 |
| id-measurementActivation | ProcedureCode ::= 21 |

```
-- *****
--
-- Lists
--
-- *****
```

| | |
|---------------------------------|-------------------|
| maxNrOfErrors | INTEGER ::= 256 |
| maxCellInRANode | INTEGER ::= 3840 |
| maxIndexesReport | INTEGER ::= 64 |
| maxNoMeas | INTEGER ::= 64 |
| maxCellReport | INTEGER ::= 9 |
| maxCellReportNR | INTEGER ::= 9 |
| maxnoOTDOAtypes | INTEGER ::= 63 |
| maxServCell | INTEGER ::= 5 |
| maxEUTRAMEas | INTEGER ::= 8 |
| maxGERANMeas | INTEGER ::= 8 |
| maxNRMeas | INTEGER ::= 8 |
| maxUTRANMeas | INTEGER ::= 8 |
| maxWLANchannels | INTEGER ::= 16 |
| maxnoFreqHoppingBandsMinusOne | INTEGER ::= 7 |
| maxNoPath | INTEGER ::= 2 |
| maxNrOfPosSImessage | INTEGER ::= 32 |
| maxnoAssistInfoFailureListItems | INTEGER ::= 32 |
| maxNrOfSegments | INTEGER ::= 64 |
| maxNrOfPosSIBs | INTEGER ::= 32 |
| maxNoOfMeasTRPs | INTEGER ::= 64 |
| maxnoTRPs | INTEGER ::= 65535 |
| maxnoTRPInfoTypes | INTEGER ::= 64 |
| maxnoofAngleInfo | INTEGER ::= 65535 |
| maxnolcs-gcs-translation | INTEGER ::= 3 |
| maxnoBcastCell | INTEGER ::= 16384 |
| maxnoSRSTriggerStates | INTEGER ::= 3 |
| maxnoSpatialRelations | INTEGER ::= 64 |
| maxnoPosMeas | INTEGER ::= 16384 |
| maxnoSRS-Carriers | INTEGER ::= 32 |
| maxnoSCSs | INTEGER ::= 5 |

| | |
|----------------------------|------------------|
| maxnoSRS-Resources | INTEGER ::= 64 |
| maxnoSRS-PosResources | INTEGER ::= 64 |
| maxnoSRS-ResourceSets | INTEGER ::= 16 |
| maxnoSRS-ResourcePerSet | INTEGER ::= 16 |
| maxnoSRS-PosResourceSets | INTEGER ::= 16 |
| maxnoSRS-PosResourcePerSet | INTEGER ::= 16 |
| maxPRS-ResourceSets | INTEGER ::= 2 |
| maxPRS-ResourcesPerSet | INTEGER ::= 64 |
| maxNoSSBs | INTEGER ::= 255 |
| maxnoofPRSresourceSet | INTEGER ::= 8 |
| maxnoofPRSresource | INTEGER ::= 64 |
| maxnoofULAoAs | INTEGER ::= 8 |
| maxNoPathExtended | INTEGER ::= 8 |
| maxnoARPs | INTEGER ::= 16 |
| maxnoUETEGs | INTEGER ::= 256 |
| maxnoTRPTEGs | INTEGER ::= 8 |
| maxFreqLayers | INTEGER ::= 4 |
| maxNumResourcesPerAngle | INTEGER ::= 24 |
| maxnoAzimuthAngles | INTEGER ::= 3600 |
| maxnoElevationAngles | INTEGER ::= 1801 |
| maxnoPRSTRPs | INTEGER ::= 256 |

```
-- *****
--
-- IEs
--
-- *****
```

| | |
|--|----------------------|
| id-Cause | ProtocolIE-ID ::= 0 |
| id-CriticalityDiagnostics | ProtocolIE-ID ::= 1 |
| id-LMF-UE-Measurement-ID | ProtocolIE-ID ::= 2 |
| id-ReportCharacteristics | ProtocolIE-ID ::= 3 |
| id-MeasurementPeriodicity | ProtocolIE-ID ::= 4 |
| id-MeasurementQuantities | ProtocolIE-ID ::= 5 |
| id-RAN-UE-Measurement-ID | ProtocolIE-ID ::= 6 |
| id-E-CID-MeasurementResult | ProtocolIE-ID ::= 7 |
| id-OTDOACells | ProtocolIE-ID ::= 8 |
| id-OTDOA-Information-Type-Group | ProtocolIE-ID ::= 9 |
| id-OTDOA-Information-Type-Item | ProtocolIE-ID ::= 10 |
| id-MeasurementQuantities-Item | ProtocolIE-ID ::= 11 |
| id-RequestedSRSTransmissionCharacteristics | ProtocolIE-ID ::= 12 |
| id-Cell-Portion-ID | ProtocolIE-ID ::= 14 |
| id-OtherRATMeasurementQuantities | ProtocolIE-ID ::= 15 |
| id-OtherRATMeasurementQuantities-Item | ProtocolIE-ID ::= 16 |
| id-OtherRATMeasurementResult | ProtocolIE-ID ::= 17 |
| id-WLANMeasurementQuantities | ProtocolIE-ID ::= 19 |
| id-WLANMeasurementQuantities-Item | ProtocolIE-ID ::= 20 |
| id-WLANMeasurementResult | ProtocolIE-ID ::= 21 |
| id-TDD-Config-EUTRA-Item | ProtocolIE-ID ::= 22 |
| id-Assistance-Information | ProtocolIE-ID ::= 23 |
| id-Broadcast | ProtocolIE-ID ::= 24 |
| id-AssistanceInformationFailureList | ProtocolIE-ID ::= 25 |

| | |
|-------------------------------------|----------------------|
| id-SRSConfiguration | ProtocolIE-ID ::= 26 |
| id-MeasurementResult | ProtocolIE-ID ::= 27 |
| id-TRP-ID | ProtocolIE-ID ::= 28 |
| id-TRPInformationTypeListTRPReq | ProtocolIE-ID ::= 29 |
| id-TRPInformationListTRPResp | ProtocolIE-ID ::= 30 |
| id-MeasurementBeamInfoRequest | ProtocolIE-ID ::= 31 |
| id-ResultSS-RSRP | ProtocolIE-ID ::= 32 |
| id-ResultSS-RSRQ | ProtocolIE-ID ::= 33 |
| id-ResultCSI-RSRP | ProtocolIE-ID ::= 34 |
| id-ResultCSI-RSRQ | ProtocolIE-ID ::= 35 |
| id-AngleOfArrivalNR | ProtocolIE-ID ::= 36 |
| id-GeographicalCoordinates | ProtocolIE-ID ::= 37 |
| id-PositioningBroadcastCells | ProtocolIE-ID ::= 38 |
| id-LMF-Measurement-ID | ProtocolIE-ID ::= 39 |
| id-RAN-Measurement-ID | ProtocolIE-ID ::= 40 |
| id-TRP-MeasurementRequestList | ProtocolIE-ID ::= 41 |
| id-TRP-MeasurementResponseList | ProtocolIE-ID ::= 42 |
| id-TRP-MeasurementReportList | ProtocolIE-ID ::= 43 |
| id-SRSType | ProtocolIE-ID ::= 44 |
| id-ActivationTime | ProtocolIE-ID ::= 45 |
| id-SRSResourceSetID | ProtocolIE-ID ::= 46 |
| id-TRPList | ProtocolIE-ID ::= 47 |
| id-SRSSpatialRelation | ProtocolIE-ID ::= 48 |
| id-SystemFrameNumber | ProtocolIE-ID ::= 49 |
| id-SlotNumber | ProtocolIE-ID ::= 50 |
| id-SRSResourceTrigger | ProtocolIE-ID ::= 51 |
| id-TRPMeasurementQuantities | ProtocolIE-ID ::= 52 |
| id-AbortTransmission | ProtocolIE-ID ::= 53 |
| id-SFNInitialisationTime | ProtocolIE-ID ::= 54 |
| id-ResultNR | ProtocolIE-ID ::= 55 |
| id-ResultEUTRA | ProtocolIE-ID ::= 56 |
| id-TRPInformationTypeItem | ProtocolIE-ID ::= 57 |
| id-CGI-NR | ProtocolIE-ID ::= 58 |
| id-SFNInitialisationTime-NR | ProtocolIE-ID ::= 59 |
| id-Cell-ID | ProtocolIE-ID ::= 60 |
| id-SrsFrequency | ProtocolIE-ID ::= 61 |
| id-TRPType | ProtocolIE-ID ::= 62 |
| id-SRSSpatialRelationPerSRSResource | ProtocolIE-ID ::= 63 |
| id-MeasurementPeriodicityExtended | ProtocolIE-ID ::= 64 |
| id-PRS-Resource-ID | ProtocolIE-ID ::= 65 |
| id-PRSTRPList | ProtocolIE-ID ::= 66 |
| id-PRSTransmissionTRPList | ProtocolIE-ID ::= 67 |
| id-OnDemandPRS | ProtocolIE-ID ::= 68 |
| id-AoA-SearchWindow | ProtocolIE-ID ::= 69 |
| id-TRP-MeasurementUpdateList | ProtocolIE-ID ::= 70 |
| id-ZoA | ProtocolIE-ID ::= 71 |
| id-ResponseTime | ProtocolIE-ID ::= 72 |
| id-UEReportingInformation | ProtocolIE-ID ::= 73 |
| id-MultipleULAoA | ProtocolIE-ID ::= 74 |
| id-UL-SRS-RSRPP | ProtocolIE-ID ::= 75 |
| id-SRSResourcetype | ProtocolIE-ID ::= 76 |
| id-ExtendedAdditionalPathList | ProtocolIE-ID ::= 77 |
| id-ARPLocationInfo | ProtocolIE-ID ::= 78 |
| id-ARP-ID | ProtocolIE-ID ::= 79 |

| | |
|---|-----------------------|
| id-LoS-NLoSInformation | ProtocolIE-ID ::= 80 |
| id-UTxTEGAssociationList | ProtocolIE-ID ::= 81 |
| id-NumberOfTRPRxTEG | ProtocolIE-ID ::= 82 |
| id-NumberOfTRPRxTxTEG | ProtocolIE-ID ::= 83 |
| id-TRPTxTEGAssociation | ProtocolIE-ID ::= 84 |
| id-TRPTEGInformation | ProtocolIE-ID ::= 85 |
| id-TRP-Rx-TEGInformation | ProtocolIE-ID ::= 86 |
| id-TRP-PRS-Information-List | ProtocolIE-ID ::= 87 |
| id-PRS-Measurements-Info-List | ProtocolIE-ID ::= 88 |
| id-PRSConfigRequestType | ProtocolIE-ID ::= 89 |
| id-UE-TEG-Info-Request | ProtocolIE-ID ::= 90 |
| id-MeasurementTimeOccasion | ProtocolIE-ID ::= 91 |
| id-MeasurementCharacteristicsRequestIndicator | ProtocolIE-ID ::= 92 |
| id-TRPBeamAntennaInformation | ProtocolIE-ID ::= 93 |
| id-NR-TADV | ProtocolIE-ID ::= 94 |
| id-MeasurementAmount | ProtocolIE-ID ::= 95 |
| id-pathPower | ProtocolIE-ID ::= 96 |
| id-PreconfigurationResult | ProtocolIE-ID ::= 97 |
| id-RequestType | ProtocolIE-ID ::= 98 |
| id-UE-TEG-ReportingPeriodicity | ProtocolIE-ID ::= 99 |
| id-SRSPortIndex | ProtocolIE-ID ::= 100 |
| id-procedure-code-101-not-to-be-used | ProtocolIE-ID ::= 101 |
| id-procedure-code-102-not-to-be-used | ProtocolIE-ID ::= 102 |
| id-procedure-code-103-not-to-be-used | ProtocolIE-ID ::= 103 |
| id-UTxTimingErrorMargin | ProtocolIE-ID ::= 104 |
| id-MeasurementPeriodicityNR-AoA | ProtocolIE-ID ::= 105 |
| id-SRSTransmissionStatus | ProtocolIE-ID ::= 106 |
| id-nrofSymbolsExtended | ProtocolIE-ID ::= 107 |
| id-repetitionFactorExtended | ProtocolIE-ID ::= 108 |
| id-StartRBHopping | ProtocolIE-ID ::= 109 |
| id-StartRBIndex | ProtocolIE-ID ::= 110 |
| id-transmissionCombn8 | ProtocolIE-ID ::= 111 |
| id-SCS-480 | ProtocolIE-ID ::= 119 |
| id-SCS-960 | ProtocolIE-ID ::= 120 |

END
-- ASN1STOP

9.3.8 Container definitions

```
-- ASN1START
-- *****
--
-- Container definitions
--
-- *****
```

```
NRPPA-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
```

```
ngran-access (22) modules (3) nrppa (4) version1 (1) nrppa-Containers (5)}
```

```
DEFINITIONS AUTOMATIC TAGS ::=
```

```
BEGIN
```

```
-- *****
--
-- IE parameter types from other modules.
--
-- *****
```

```
IMPORTS
```

```
    maxPrivateIEs,
    maxProtocolExtensions,
    maxProtocolIEs,
    Criticality,
    Presence,
    PrivateIE-ID,
    ProtocolIE-ID
```

```
FROM NRPPA-CommonDataTypes;
```

```
-- *****
--
-- Class Definition for Protocol IEs
--
-- *****
```

```
NRPPA-PROTOCOL-IES ::= CLASS {
    &id                ProtocolIE-ID          UNIQUE,
    &criticality       Criticality,
    &Value,
    &presence          Presence
}
WITH SYNTAX {
    ID                &id
    CRITICALITY       &criticality
    TYPE              &Value
    PRESENCE          &presence
}
```

```
-- *****
--
-- Class Definition for Protocol Extensions
--
-- *****
```

```
NRPPA-PROTOCOL-EXTENSION ::= CLASS {
    &id                ProtocolIE-ID          UNIQUE,
    &criticality       Criticality,
    &Extension,
    &presence          Presence
}
WITH SYNTAX {
```

```

    ID                &id
    CRITICALITY       &criticality
    EXTENSION         &Extension
    PRESENCE          &presence
}

-- *****
--
-- Class Definition for Private IEs
--
-- *****

NRPPA-PRIVATE-IES ::= CLASS {
    &id                PrivateIE-ID,
    &criticality       Criticality,
    &Value,
    &presence          Presence
}
WITH SYNTAX {
    ID                &id
    CRITICALITY       &criticality
    TYPE              &Value
    PRESENCE          &presence
}

-- *****
--
-- Container for Protocol IEs
--
-- *****

ProtocolIE-Container { NRPPA-PROTOCOL-IES : IEsSetParam } ::=
    SEQUENCE (SIZE (0..maxProtocolIEs)) OF
    ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-Single-Container { NRPPA-PROTOCOL-IES : IEsSetParam } ::=
    ProtocolIE-Field {{IEsSetParam}}

ProtocolIE-Field { NRPPA-PROTOCOL-IES : IEsSetParam } ::= SEQUENCE {
    id                NRPPA-PROTOCOL-IES.&id                ({{IEsSetParam}}),
    criticality       NRPPA-PROTOCOL-IES.&criticality        ({{IEsSetParam}}{@id}),
    value            NRPPA-PROTOCOL-IES.&Value              ({{IEsSetParam}}{@id})
}

-- *****
--
-- Container Lists for Protocol IE Containers
--
-- *****

ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, NRPPA-PROTOCOL-IES : IEsSetParam} ::=
    SEQUENCE (SIZE (lowerBound..upperBound)) OF
    ProtocolIE-Container {{IEsSetParam}}

```



```
-- *****
--
-- Container for Protocol Extensions
--
-- *****

ProtocolExtensionContainer { NRPPA-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
  SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
  ProtocolExtensionField {{ExtensionSetParam}}

ProtocolExtensionField { NRPPA-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
  id                NRPPA-PROTOCOL-EXTENSION.&id                ({ExtensionSetParam}),
  criticality       NRPPA-PROTOCOL-EXTENSION.&criticality       ({ExtensionSetParam}@id)},
  extensionValue    NRPPA-PROTOCOL-EXTENSION.&Extension        ({ExtensionSetParam}@id)}
}

-- *****
--
-- Container for Private IEs
--
-- *****

PrivateIE-Container { NRPPA-PRIVATE-IES : IEsSetParam} ::=
  SEQUENCE (SIZE (1..maxPrivateIEs)) OF
  PrivateIE-Field {{IEsSetParam}}

PrivateIE-Field { NRPPA-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
  id                NRPPA-PRIVATE-IES.&id                ({IEsSetParam}),
  criticality       NRPPA-PRIVATE-IES.&criticality       ({IEsSetParam}@id)},
  value            NRPPA-PRIVATE-IES.&Value            ({IEsSetParam}@id)}
}

END
-- ASN1STOP
```

9.4 Message transfer syntax

NRPPa shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ref. ITU-T Rec. X.691 [6].

9.5 Timers

Void.

10 Handling of unknown, unforeseen and erroneous protocol data

Section 10 of TS 38.413 [2] is applicable for the purposes of the present document, with the following additions:

- In case of Abstract Syntax Error, when reporting the *Criticality Diagnostics* IE for not comprehended IE/IE groups or missing IE/IE groups, the *NRPPa Transaction ID* IE shall also be included;
- In case of Logical Error, when reporting the *Criticality Diagnostics* IE, the *NRPPa Transaction ID* IE shall also be included.

Annex A (informative): Change history

| Change history | | | | | | | |
|----------------|-----------------|-----------|------|-----|-----|--|-------------|
| Date | Meeting | TDoc | CR | Rev | Cat | Subject/Comment | New version |
| 2017-08-23 | RAN3#97 | R3-173238 | | | | TS skeleton agreed | v0.0.0 |
| 2017-08-25 | RAN3#97 | R3-173374 | | | | TS 38.455 V0.1.0 | v0.1.0 |
| 2017-10-18 | RAN3#97bis | R3-173979 | | | | Implemented agreed pCR from R3#97bis | V0.2.0 |
| 2017-12-04 | RAN3#98 | R3-175064 | | | | Implemented agreed pCR from R3#98 | V0.3.0 |
| 2018-01-31 | RAN3 Adhoc 1801 | R3-180658 | | | | Implemented agreed pCR from R3 Adhoc_1801 | V0.5.0 |
| 2018-03-15 | RAN3#99 | R3-181595 | | | | Implemented agreed pCR's from R3#99 | V0.6.0 |
| 2018-05-29 | RAN3#100 | R3-183598 | | | | Implemented agreed pCR's from R3#100 | V0.7.0 |
| 2018-06 | RAN#80 | RP-181147 | | | | Submitted to RAN plenary for Approval | V1.0.0 |
| 2018-06 | RAN#80 | - | - | - | - | Specification approved at TSG-RAN and placed under change control | 15.0.0 |
| 2018-09 | RAN#81 | RP-181921 | 0002 | 1 | F | Rapporteur CR for TS 38.455 | 15.1.0 |
| 2018-12 | RAN#82 | RP-182446 | 0003 | 1 | F | Addition of TDD UL/DL configuration to OTDOA assistance data | 15.2.0 |
| 2019-01 | RAN#82 | | | | | Editorial Corrections: - 1 editorial correction to ASN.1 - adding "ASN1START" and "ASN1STOP" TAGs to the ASN.1 | 15.2.1 |
| 2020-07 | SA#88-e | - | - | - | - | Update to Rel-16 version (MCC) | 16.0.0 |
| 2020-09 | SA#89-e | RP-201849 | 0008 | 19 | B | Introduction of NR Positioning in NRPPa | 16.1.0 |
| 2020-12 | RAN#90-e | RP-202315 | 0014 | 2 | A | Support OTDOA assistance data for case of NR serving cell | 16.2.0 |
| 2020-12 | RAN#90-e | RP-202311 | 0015 | 2 | F | Corrections to tabular and asn.1 for NR positioning (NRPPa) | 16.2.0 |
| 2020-12 | RAN#90-e | RP-202311 | 0016 | - | F | Correction of NRPPa positioning procedures | 16.2.0 |
| 2020-12 | RAN#90-e | RP-202311 | 0021 | 1 | F | RRC alignment and various correction including ASN.1 | 16.2.0 |
| 2020-12 | RAN#90-e | RP-202311 | 0022 | 2 | F | Coupling TRP ID and Cell ID in Measurement procedures | 16.2.0 |
| 2021-03 | RAN#91-e | RP-210230 | 0024 | 1 | F | Including SRS frequency information in Positioning Information Request | 16.3.0 |
| 2021-03 | RAN#91-e | RP-210230 | 0025 | 1 | F | Corrections on NRPPa | 16.3.0 |
| 2021-03 | RAN#91-e | RP-210236 | 0026 | - | F | Correction of NRPPa section 10 | 16.3.0 |
| 2021-06 | RAN#92-e | RP-211333 | 0028 | - | A | Clarification of E-CID Measurement Result | 16.4.0 |
| 2021-06 | RAN#92-e | RP-211327 | 0029 | - | F | Correction of Spatial Relation Information | 16.4.0 |
| 2021-06 | RAN#92-e | RP-211327 | 0033 | 1 | F | Correction on SFN Initialisation Time | 16.4.0 |
| 2021-06 | RAN#92-e | RP-211327 | 0034 | - | F | Correction on relative cartesian coordinate | 16.4.0 |
| 2021-09 | RAN#93-e | RP-211883 | 0039 | 1 | F | Correction of the RAN and LMF UE measurement IDs extension | 16.5.0 |
| 2021-09 | RAN#93-e | RP-211883 | 0041 | 1 | F | Adding procedural text for System Frame Number and Slot Number | 16.5.0 |
| 2021-12 | RAN#94-e | RP-213173 | 0047 | 3 | F | Correction on PRS-only TP | 16.6.0 |
| 2021-12 | RAN#94-e | RP-212867 | 0049 | 1 | F | Support of providing spatial relation per SRS resource from LMF to gNB | 16.6.0 |
| 2022-03 | RAN#95-e | RP-220281 | 0052 | 1 | F | Correction on Measurement Periodicity | 16.7.0 |
| 2022-03 | RAN#95-e | RP-220281 | 0053 | 1 | F | Correction on PRS Beam Information | 16.7.0 |
| 2022-03 | RAN#95-e | RP-220228 | 0037 | 8 | B | Introduction of NR Positioning enhancements to NRPPa | 17.0.0 |
| 2022-03 | RAN#95-e | RP-220236 | 0042 | 2 | B | Addition of NR Timing Advance reporting for NR UL E-CID [NRTADV] | 17.0.0 |
| 2022-03 | RAN#95-e | RP-220236 | 0054 | - | D | NRPPa Rapporteur Corrections | 17.0.0 |
| 2022-06 | RAN#96 | RP-221131 | 0057 | 1 | F | NRPPa ASN.1 review for NR Positioning Enhancements | 17.1.0 |
| 2022-06 | RAN#96 | RP-221145 | 0058 | 4 | F | CR to 38.455 on Measurement Amount | 17.1.0 |
| 2022-06 | RAN#96 | RP-221145 | 0062 | 2 | D | Rapporteur Corrections to Rel-17 NRPPa | 17.1.0 |
| 2022-06 | RAN#96 | RP-221131 | 0063 | 4 | F | Positionng corrections for NRPPa | 17.1.0 |
| 2022-06 | RAN#96 | RP-221131 | 0066 | 1 | F | Corrections to Measurement Pre-configuration Information Transfer | 17.1.0 |
| 2022-06 | RAN#96 | RP-221131 | 0067 | 1 | F | Support for Multiple Measurement Instances | 17.1.0 |
| 2022-06 | RAN#96 | RP-221152 | 0069 | 2 | A | Correction for PRS Muting | 17.1.0 |
| 2022-06 | RAN#96 | RP-221152 | 0074 | | A | Correction to SSB subcarrier spacing | 17.1.0 |
| 2022-06 | | | | | | editorial corrections to rename the following asn.1 names as choice extension names - sRSType-extension -> choice-Extension - cause-Extension -> choice-Extension - measuredResultsValue-Extension -> choice-Extension - nG-RANCell-Extension -> hoice-Extension | 17.1.1 |

| Change history | | | | | | | |
|----------------|----------|-----------|------|-----|-----|--|-------------|
| Date | Meeting | TDoc | CR | Rev | Cat | Subject/Comment | New version |
| | | | | | | - oTDOACell-Information-Item-Extension -> choice-Extension - otherRATMeasuredResultsValue-Extension -> choice-Extension - pRSMutingConfiguration-EUTRA-Extension -> choice-Extension | |
| 2022-09 | RAN#97-e | RP-222186 | 0075 | 1 | F | Correction for UE Tx TEG Association | 17.2.0 |
| 2022-09 | RAN#97-e | RP-222186 | 0076 | - | F | Introduction of SRS port index | 17.2.0 |
| 2022-09 | RAN#97-e | RP-222186 | 0077 | 2 | F | Support of timing error margins for TEGs in NRPPa | 17.2.0 |
| 2022-09 | RAN#97-e | RP-222543 | 0079 | 3 | A | CR to 38.455 on E-CID measurement periodicity | 17.2.0 |
| 2022-09 | RAN#97-e | RP-222186 | 0080 | 1 | F | Correction on Measurement Time Occasion | 17.2.0 |
| 2022-12 | RAN#98-e | RP-222886 | 0086 | 2 | F | Correction of TRP TEG | 17.3.0 |
| 2022-12 | RAN#98-e | RP-222886 | 0087 | 1 | F | Correction of Timing Error Margin | 17.3.0 |
| 2022-12 | RAN#98-e | RP-222886 | 0088 | 1 | F | Correction of Positioning Information Transfer function | 17.3.0 |
| 2022-12 | RAN#98-e | RP-222886 | 0089 | 2 | F | Correction to the PRS Measurement configuration procedures | 17.3.0 |
| 2022-12 | RAN#98-e | RP-222887 | 0092 | 1 | A | CR to 38.455 on SRS periodicity | 17.3.0 |
| 2022-12 | RAN#98-e | RP-222886 | 0093 | - | F | Correction on presence of timing error margin for TRP TEGs | 17.3.0 |
| 2023-03 | RAN#99 | RP-230597 | 0099 | 1 | A | Correction for SRS Configuration status in Positioning Information Update | 17.4.0 |
| 2023-03 | RAN#99 | RP-230593 | 0100 | 1 | F | NRPPA corrections of references to RRC | 17.4.0 |
| 2023-06 | RAN#100 | RP-231077 | 0103 | 1 | F | SRS Resource correction on Comb 8, Number of Symbols and Repetition Factor | 17.5.0 |
| 2023-06 | RAN#100 | RP-231077 | 0105 | 1 | F | Subcarrier Spacing correction | 17.5.0 |
| 2023-12 | RAN#102 | RP-233850 | 0116 | - | A | Correction of NR E-CID for OnDemand measurements | 17.6.0 |
| 2023-12 | RAN#102 | RP-233850 | 0118 | - | F | Correction to NRPPa for the misalignment on DL PRS | 17.6.0 |
| 2024-03 | RAN#103 | RP-240642 | 0137 | - | F | Correction on Time Stamp and FR2 | 17.7.0 |
| 2024-06 | RAN#104 | RP-241114 | 0146 | 1 | F | Addition of missing positioning SIBs | 17.8.0 |

History

| Document history | | |
|-------------------------|---------------|-------------|
| V17.0.0 | May 2022 | Publication |
| V17.1.1 | August 2022 | Publication |
| V17.2.0 | October 2022 | Publication |
| V17.3.0 | January 2023 | Publication |
| V17.4.0 | May 2023 | Publication |
| V17.5.0 | July 2023 | Publication |
| V17.6.0 | February 2024 | Publication |
| V17.7.0 | April 2024 | Publication |
| V17.8.0 | August 2024 | Publication |